



Junos OS Basics Feature Guide for QFabric Systems

Release

14.1X53



Modified: 2016-10-06

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos OS Basics Feature Guide for QFabric Systems
14.1X53
Copyright © 2016, Juniper Networks, Inc.
All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xxi
	Documentation and Release Notes	xxi
	Supported Platforms	xxi
	Using the Examples in This Manual	xxi
	Merging a Full Example	xxii
	Merging a Snippet	xxii
	Documentation Conventions	xxiii
	Documentation Feedback	xxv
	Requesting Technical Support	xxv
	Self-Help Online Tools and Resources	xxv
	Opening a Case with JTAC	xxvi
Part 1	Autoinstallation	
Chapter 1	Understanding Autoinstallation	3
	Understanding Autoinstallation of Configuration Files	3
	Typical Uses for Autoinstallation	3
	Autoinstallation Configuration Files and IP Addresses	3
	Typical Autoinstallation Process on a New Switch	4
	Configuring Autoinstallation of Configuration Files (CLI Procedure)	5
	Upgrading Software by Using Automatic Software Download	7
	Verifying Autoinstallation Status	8
	Verifying That Automatic Software Download Is Working Correctly	9
Part 2	Basic System Management	
Chapter 2	Understanding Basic System Management	13
	Compressing the Current Configuration File	14
	Configuring a DNS Name Server for Resolving a Hostname into Addresses	15
	Configuring Console and Auxiliary Port Properties	15
	Configuring the Hostname of the Router or Switch	16
	Configuring a QFX3500 Device as a Standalone Switch	17
	Configuring the Junos OS to Determine Conditions That Trigger Alarms on Different Interface Types	19
	Configuring Junos OS to Disable Protocol Redirect Messages on the Router or Switch	19
	Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses	20
	Configuring Junos OS to Extend the Default Port Address Range	20
	Configuring the Junos OS to Select a Fixed Source Address for Locally Generated TCP/IP Packets	21

Configuring System Alarms to Appear Automatically Upon Login	21
Configuring Time-Based User Access	21
Configuring the Timeout Value for Idle Login Sessions	23
Including the Year or Millisecond in Timestamps	24
Mapping the Hostname of the Switch to IP Addresses	24
Modifying the Default Time Zone for a Router or Switch Running Junos OS	25
Rebooting and Halting a Device	26
Reaching a Domain Name System Server	27
Reverting to the Default Factory Configuration by Using the request system zeroize Command	29
Saving Core Files Generated by Junos OS Processes	30
Specifying the Physical Location of the Switch	30
Specifying Access Privileges for Junos OS Operational Mode Commands	31
Updating the IANA Time Zone Database on Junos OS Devices	33
Importing and Installing Time Zone Files	33
Configuring a Custom Time Zone	34
Viewing Core Files from Junos OS Processes	35
Example: Configuring the Name of the Switch, IP Address, and System ID	35

Part 3

Chapter 3

Command Line Interface (CLI)

Understanding the CLI	39
CLI User Interface Overview	39
CLI Overview	39
CLI Key Features	40
CLI Command Modes	40
Configuring Login Tips	42
Format for Specifying Filenames and URLs in Junos OS CLI Commands	42
Getting Started with Enhanced Layer 2 Software	43
Understanding Enhanced Layer 2 Software Support	44
Using the ELS Translator Tool	44
Configuring a VLAN	45
Configuring the Native VLAN Identifier	46
Configuring Layer 2 Interfaces	46
Configuring Layer 3 Interfaces	47
Configuring an IRB Interface	47
Configuring an Aggregated Ethernet Interface and Configuring LACP on That Interface	48
Enhanced Layer 2 CLI Configuration Statement and Command Changes	49
Junos OS Operational Mode Commands That Combine Other Commands	57
Overview of Junos OS CLI Operational Mode Commands	58
CLI Command Categories	58
Commonly Used Operational Mode Commands	59
Overview of Navigating the CLI	60
CLI Command Hierarchy	61
CLI Configuration Statements	61
Moving Among Hierarchy Levels	61
Understanding the Brief, Detail, Extensive, and Terse Options of Junos OS Operational Commands	62

	Understanding Junos OS CLI Configuration Mode	63
	Configuration Mode Commands	64
	Configuration Statements and Identifiers	65
	Configuration Statement Hierarchy	67
Part 4	Dynamic Host Control Protocol (DHCP)	
Chapter 4	Understanding DHCP	73
	Understanding DHCP Services for Switches	73
	DHCP Client/Server Model	73
	Using DHCP	74
	DHCP Relay Servers and DHCP Servers	74
	Legacy DHCP and Extended DHCP for Server Versions	75
	Configuring DHCP on a Switch	76
	How DHCP Works	76
	Configuring a DHCP Client (CLI Procedure)	77
	Configuring a DHCP Server on Switches (CLI Procedure)	78
	Configuring an Extended DHCP Server on a Switch	79
	Configuring a Legacy DHCP Server on a Switch (CLI Procedure)	79
Part 5	Internet Control Message Protocol (ICMP)	
Chapter 5	Understanding ICMP	85
	Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses	85
	Configuring Junos OS to Disable the Routing Engine Response to Multicast Ping Packets	86
	Configuring the Junos OS ICMPv4 Rate Limit for ICMPv4 Routing Engine Messages	86
Part 6	Licenses	
Chapter 6	Using Licenses	89
	Junos OS Feature Licenses	89
	Software Features That Require Licenses on the QFX Series	90
	Junos OS Feature License Keys	91
	Release-Tied License Keys and Upgrade Licenses on MX Series Routers	92
	Licensable Ports on MX5, MX10, and MX40 Routers	93
	Port Activation on MX104 Routers	94
	Generating License Keys	95
	Adding New Licenses (CLI Procedure)	97
	Deleting a License (CLI Procedure)	98
	Saving License Keys	99
	Verifying Junos OS License Installation	100
	Displaying Installed Licenses	100
	Displaying License Usage	101

Part 7	Login Classes	
Chapter 7	Understanding Login Classes	105
	Configuring Junos OS User Accounts	105
	Configuring the Junos OS to Display a System Login Announcement	106
	Configuring Junos OS to Display a System Login Message	106
Part 8	Network Time Protocol (NTP)	
Chapter 8	Understanding NTP	111
	Understanding NTP Time Servers	111
	Configuring NTP Authentication Keys	112
	Configuring NTP Authentication Keys (QFabric System)	113
	Configuring the NTP Time Server and Time Services	113
	Configuring the Switch to Operate in Client Mode	114
	Configuring the Router or Switch to Operate in Symmetric Active Mode	114
	Configuring the Router or Switch to Operate in Broadcast Mode	115
	Configuring the Router or Switch to Operate in Server Mode	115
	Configuring the NTP Time Server and Time Services (QFabric System)	116
	Configuring the Switch to Listen for Broadcast Messages Using NTP	117
	Configuring the Switch to Listen for Multicast Messages Using NTP	117
	NTP Time Server and Time Services Overview (QFabric System)	118
	Setting the Date and Time	118
	Synchronizing and Coordinating Time Distribution Using NTP	119
	Configuring NTP	119
	Configuring the NTP Boot Server	119
	Specifying a Source Address for an NTP Server	119
	Example: Configuring NTP	120
	Example: Configuring NTP as a Single Time Source for Router and Switch Clock Synchronization	123
Part 9	Non-Stop Software Upgrade (NSSU)	
Chapter 9	Understanding NSSU	127
	Understanding Nonstop Software Upgrade for QFabric Systems	127
	Nonstop Software Upgrade Checklist for QFabric Systems	131
	Preparing for an NSSU	132
	Upgrading Director Groups	133
	Upgrading QFabric	133
	Upgrading Network Node Groups	134
	Performing a Nonstop Software Upgrade on the QFabric System	134
	Backing Up the Current Configuration Files	136
	Downloading Software Files Using a Browser	136
	Retrieving Software Files for Download	138
	Performing a Nonstop Software Upgrade for Director Devices in a Director Group	138
	Performing a Nonstop Software Upgrade for Interconnect Devices and Other Fabric-Related Components	138
	(Optional) Creating Upgrade Groups for Node Groups	139
	Performing a Nonstop Software Upgrade on a Node Group	139

	Verifying Nonstop Software Upgrade for QFabric Systems	140
	Verifying a Director Group Nonstop Software Upgrade	140
	Verifying a Fabric Nonstop Software Upgrade	153
	Verifying a Redundant Server Node Group Nonstop Software Upgrade	155
	Verifying a Network Node Group Nonstop Software Upgrade	158
Part 10	Passwords	
Chapter 10	Understanding Passwords	163
	Configuring the Root Password	163
	Recovering the Root Password	165
	Example: Changing the Requirements for Junos OS Plain-Text Passwords	166
Part 11	Recovery Installation	
Chapter 11	Understanding Recovery Installation	171
	Creating an Emergency Boot Device	171
	Creating a Snapshot and Using It to Boot a Device	172
	Creating a Snapshot on an External USB Flash Drive and Using It to Boot the Device	173
	Creating a Snapshot and Using It to Boot a QFX3500 and QFX3600 Series Switch	174
	Creating a Snapshot on a USB Flash Drive and Using It to Boot the Switch	174
	Creating a Snapshot on an Internal Flash Drive and Using It to Boot the Switch	175
	Creating a Snapshot on the Alternate Slice of the Boot Media	175
	Downgrading Software on a QFabric System	176
	(Optional) Creating an Emergency Boot Device Using a Juniper Networks External Blank USB Flash Drive	177
	Performing a Recovery Installation Using a Juniper Networks External USB Flash Drive with Preloaded Software	178
	Performing a QFabric System Recovery Installation on the Director Group	182
	(Optional) Creating an Emergency Boot Device Using a Juniper Networks External Blank USB Flash Drive	183
	Performing a Recovery Installation Using a Juniper Networks External USB Flash Drive with Preloaded Software	184
	Performing a Recovery Installation	189
	Performing a Recovery Installation Using an Emergency Boot Device	191
	Recovering from a Failed Software Installation	192
Part 12	Routine Monitoring	
Chapter 12	Understanding Routine Monitoring	197
	Monitoring System Process Information	197
	Monitoring System Properties	198
	Monitoring Interface Status and Traffic	199

Part 13	Standard Software Installation and Upgrade	
Chapter 13	Understanding Standard Software Installation and Upgrade	203
	Junos OS Package Names	203
	Overview of CoS Upgrade Requirements (Junos OS Release 11.1 or 11.2 to a Later Release)	204
	Software Installation Overview	206
	Upgrading Jloader Software on QFX Series Devices	206
	Jloader Software Version 1.1.4 Guidelines	208
	Upgrading Jloader Software on a QFX3500 Switch	209
	Upgrading Jloader Software on a QFabric System	212
	Upgrading Software	217
	Downloading Software Files with a Browser	218
	Accessing Software Downloaded to a Remote Location	219
	Connecting to the Console Port	219
	Backing Up the Current Configuration Files	219
	Installing a Standard Software Package	219
	Upgrading to an ELS-Based Software Package	221
	Upgrading Software on a QFabric System	223
	Backing Up the Current Configuration Files	223
	Downloading Software Files Using a Browser	223
	Retrieving Software Files for Download	225
	Installing the Software Package on the Entire QFabric System	225
Part 14	Software Downgrade	
Chapter 14	Understanding Software Downgrade	231
	Downgrading Software on a QFabric System	231
	(Optional) Creating an Emergency Boot Device Using a Juniper Networks External Blank USB Flash Drive	232
	Performing a Recovery Installation Using a Juniper Networks External USB Flash Drive with Preloaded Software	233
Part 15	System Snapshot	
Chapter 15	Understanding System Snapshot	241
	Understanding System Snapshot	241
	Creating a Snapshot and Using It to Boot a QFX3500 and QFX3600 Series Switch	242
	Creating a Snapshot on a USB Flash Drive and Using It to Boot the Switch	242
	Creating a Snapshot on an Internal Flash Drive and Using it to Boot the Switch	243
	Creating a Snapshot on the Alternate Slice of the Boot Media	243
	Creating a Snapshot and Using It to Boot a Device	244
	Creating a Snapshot on an External USB Flash Drive and Using It to Boot the Device	244
	Verifying That a System Snapshot Was Created on a QFX Series Switch	245

Part 16	Configuration Statements and Operational Commands	
Chapter 16	Basic System Management Configuration Statements	249
	arp (System)	251
	auxiliary	252
	checksum	253
	compress-configuration-files (System)	254
	console (Physical Port)	255
	default-address-selection	256
	domain-name	257
	domain-search	257
	ethernet (Alarm)	258
	host-name	258
	icmpv4-rate-limit	259
	internet-options	260
	link-down	261
	location	262
	login-alarms	263
	management-ethernet (Alarm)	264
	max-configurations-on-flash	265
	name-server	265
	no-ping-record-route	266
	no-ping-time-stamp	266
	no-redirects (IPv4 Traffic)	267
	optional	268
	ports	268
	retry	269
	saved-core-context	270
	saved-core-files	270
	source-port (Port Addresses)	271
	static-host-mapping	272
	system	273
	time-format	278
	time-zone	279
	traceoptions (Layer 2 Learning)	281
	uid	283
	use-imported-time-zones	283
Chapter 17	DHCP Configuration Statements	285
	client-identifier (DHCP Client)	285
	lease-time	286
	retransmission-attempt	287
	retransmission-interval	288
	server-address	289
	update-server	290
	vendor-option	291
Chapter 18	ICMP Configuration Statement	293
	no-multicast-echo	293

Chapter 19	Login Class Configuration Statements	295
	access-end	296
	access-start	296
	allow-commands	297
	allow-configuration	298
	allowed-days	298
	announcement	299
	authentication (Login)	300
	class (Defining Login Classes)	301
	class (Assigning a Class to an Individual User)	302
	deny-commands	302
	deny-configuration	303
	idle-timeout	304
	load-key-file	305
	login	306
	login-tip	307
	message	307
	user (Access)	308
Chapter 20	NTP Configuration Statements	309
	authentication-key	310
	boot-server (NTP)	311
	broadcast	312
	broadcast-client	313
	multicast-client	313
	ntp	314
	ntp (QFabric)	315
	peer	316
	server (NTP)	317
	source-address (NTP, RADIUS, System Logging, or TACACS+)	318
	trusted-key	319
Chapter 21	Password Configuration Statements	321
	authentication (Login)	322
	change-type	323
	format	324
	maximum-length	325
	minimum-changes	326
	minimum-length	327
	minimum-lower-cases	328
	minimum-numeric	329
	minimum-punctuations	330
	minimum-upper-cases	331
	password (Login)	332
	permissions	332
	retry-options	333
	root-authentication	335
	ssh-dsa	336
	ssh-rsa	336

	user (Access)	337
Chapter 22	Autoinstallation Operational Commands	339
	show system autoinstallation status	340
Chapter 23	Basic System Management Operational Commands	343
	commit	345
	clear log	350
	clear chassis display message	351
	clear system commit	354
	clear system reboot	355
	file	359
	file archive	361
	file checksum md5	363
	file checksum sha1	364
	file checksum sha-256	365
	file compare	366
	file delete	370
	file list	371
	file rename	373
	file show	375
	load	377
	ping	379
	request chassis beacon	383
	request chassis fpc	385
	request chassis pic	389
	request chassis routing-engine master	393
	request message	398
	request system configuration rescue delete	399
	request system configuration rescue save	400
	request system halt	401
	request system logout	407
	request system power-off	408
	request system reboot	413
	request system storage cleanup	416
	request system zeroize	426
	restart	431
	save	442
Chapter 24	CLI Operational Commands	445
	show cli	446
	show cli authorization	448
	show cli directory	452
	show cli history	453
Chapter 25	Licensing Operational Commands	455
	request system license add	456
	request system license delete	457
	request system license save	458
	show system license	459

Chapter 26	NSSU Operational Commands	467
	request system software nonstop-upgrade	468
	show chassis nonstop-upgrade node-group	475
Chapter 27	NTP Operational Commands	477
	show ntp associations	478
	show ntp status	480
Chapter 28	QFabric System Operational Commands	483
	request chassis beacon	484
	request chassis cb	486
	request chassis fpc	489
	request chassis routing-engine master	493
	request fabric administration power-off interconnect-device	498
	request fabric administration power-off interconnect-device fpc	499
	request fabric administration power-off node-device	501
	show chassis ethernet-switch interconnect-device fpc	503
	show chassis ethernet-switch interconnect-device cb	528
	show chassis environment cb	545
Chapter 29	Recovery Installation Operational Commands	563
	request system configuration rescue delete	564
	request system configuration rescue save	565
	request system software configuration-backup	566
	request system software configuration-restore	567
	request system software recover-from-restore-point	568
	request system software restore-point	569
	show system software restore-point-status	571
Chapter 30	Routine Monitoring Operational Commands	573
	show chassis alarms	575
	show chassis beacon	590
	show chassis environment	592
	show chassis environment fpc	656
	show chassis environment pem	682
	show chassis environment routing-engine	691
	show chassis fan	696
	show chassis firmware	709
	show chassis fpc	720
	show chassis hardware	758
	show chassis lcd	933
	show chassis led	947
	show chassis location	957
	show chassis mac-addresses	961
	show chassis pic	966
	show chassis routing-engine	982
	show chassis temperature-thresholds	1004
	show chassis zones	1023
	show host	1029
	show interfaces diagnostics optics	1030

	show log	1036
	show subscribers	1039
	show system alarms	1057
	show system audit	1060
	show system boot-messages	1068
	show system buffers	1075
	show system certificate	1082
	show system commit	1084
	show system configuration archival	1087
	show system configuration rescue	1088
	show system connections	1090
	show system core-dumps	1109
	show system directory-usage	1123
	show system processes	1127
	show system reboot	1155
	show system resource-cleanup processes	1158
	show system services service-deployment	1160
	show system statistics	1161
	show system storage	1196
	show system uptime	1204
	show system users	1209
	show system virtual-memory	1214
	show version	1272
	start shell	1285
	test configuration	1287
	traceroute	1288
	traceroute monitor	1292
Chapter 31	Standard Software Installation and Upgrade Operational Commands . .	1295
	request system software add	1296
	request system software delete	1305
	request system software download	1309
	request system software rollback	1311
	request system software validate	1315
	rollback	1319
	show system rollback	1320
	show system software	1322
	show system software usb-software-version	1330
Chapter 32	Software Downgrade Operational Commands	1333
	request system software recover-from-restore-point	1334
	request system software restore-point	1335
	show system software restore-point-status	1337
Chapter 33	System Snapshot Operational Commands	1339
	request system snapshot	1340

List of Figures

Part 3	Command Line Interface (CLI)	
Chapter 3	Understanding the CLI	39
	Figure 1: Commands That Combine Other Commands	57
	Figure 2: CLI Command Hierarchy	61
	Figure 3: Command Output Options	62
	Figure 4: Configuration Mode Hierarchy of Statements	67
Part 4	Dynamic Host Control Protocol (DHCP)	
Chapter 4	Understanding DHCP	73
	Figure 5: DHCP Client/Server Model	74
	Figure 6: DHCP Four-Step Transfer	76

List of Tables

	About the Documentation	xxi
	Table 1: Notice Icons	xxiii
	Table 2: Text and Syntax Conventions	xxiii
Part 3	Command Line Interface (CLI)	
Chapter 3	Understanding the CLI	39
	Table 3: ELS Support	44
	Table 4: Enhanced Layer 2 CLI Changes	49
	Table 5: Commonly Used Operational Mode Commands	59
	Table 6: Summary of Configuration Mode Commands	64
	Table 7: Configuration Mode Top-Level Statements	66
Part 4	Dynamic Host Control Protocol (DHCP)	
Chapter 4	Understanding DHCP	73
	Table 8: Legacy DHCP and Extended DHCP Server Hierarchy Levels	75
	Table 9: DHCP Client Settings	77
Part 6	Licenses	
Chapter 6	Using Licenses	89
	Table 10: Junos OS Feature Licenses and Model Numbers for QFX Series Devices	90
	Table 11: Upgrade Licenses for Enhancing Port Capacity	94
	Table 12: Port Activation License Model for MX104 Routers	95
Part 12	Routine Monitoring	
Chapter 12	Understanding Routine Monitoring	197
	Table 13: Summary of System Process Information Output Fields	197
	Table 14: Summary of Key System Properties Output Fields	198
Part 13	Standard Software Installation and Upgrade	
Chapter 13	Understanding Standard Software Installation and Upgrade	203
	Table 15: Junos OS and Jloader Software Compatibility Matrix for the QFX3500 Switch and QFX3500 Node Device	207
	Table 16: Junos OS and Jloader Software Compatibility Matrix for the QFX3008-I Interconnect Device	207
	Table 17: Junos OS and Jloader Software Compatibility Matrix for the QFX3600-I Interconnect Device and QFX3600 Node Device	207

	Table 18: Uboot Software Release and Jloader Software Compatibility Matrix	208
Part 16	Configuration Statements and Operational Commands	
Chapter 22	Autoinstallation Operational Commands	339
	Table 19: show system autoinstallation status Output Fields	340
Chapter 23	Basic System Management Operational Commands	343
	Table 20: request system storage cleanup Output Fields	418
Chapter 24	CLI Operational Commands	445
	Table 21: show cli Output Fields	446
	Table 22: show cli authorization Output Fields	448
	Table 23: show cli directory Output Fields	452
	Table 24: show cli history Output Fields	453
Chapter 25	Licensing Operational Commands	455
	Table 25: show system license Output Fields	459
Chapter 26	NSSU Operational Commands	467
	Table 26: show chassis nonstop-upgrade node-group Output Fields	475
Chapter 27	NTP Operational Commands	477
	Table 27: show ntp associations Output Fields	478
	Table 28: show ntp status Output Fields	480
Chapter 28	QFabric System Operational Commands	483
	Table 29: show chassis ethernet-switch interconnect-device fpc Output Fields	504
	Table 30: show chassis ethernet-switch interconnect-device fpc Output Fields	528
	Table 31: show chassis environment cb Output Fields	547
Chapter 29	Recovery Installation Operational Commands	563
	Table 32: show system software restore-point status Output Fields	571
Chapter 30	Routine Monitoring Operational Commands	573
	Table 33: show chassis alarms Output Fields	581
	Table 34: show chassis led Output Fields	590
	Table 35: show chassis environment Output Fields	599
	Table 36: show chassis environment fpc Output Fields	659
	Table 37: show chassis environment pem Output Fields	684
	Table 38: show chassis environment routing-engine Output Fields	693
	Table 39: show chassis fan Output Fields	698
	Table 40: show chassis firmware Output Fields	712
	Table 41: show chassis fpc Output Fields	728
	Table 42: Routing Engines Displaying DIMM Information	761
	Table 43: show chassis hardware Output Fields	765
	Table 44: show chassis lcd Output Fields	935
	Table 45: show chassis led Output Fields	948
	Table 46: show chassis location Output Fields	959

	Table 47: show chassis mac-addresses Output Fields	963
	Table 48: show chassis pic Output Fields	970
	Table 49: show chassis routing-engine Output Fields	985
	Table 50: show chassis temperature-thresholds Output Fields	1006
	Table 51: show chassis zones Output Fields	1024
	Table 52: show interfaces diagnostics optics Output Fields	1030
	Table 53: show subscribers Output Fields	1042
	Table 54: show system alarms Output Fields	1058
	Table 55: show system buffers Output Fields	1078
	Table 56: show system certificate Output Fields	1082
	Table 57: show system commit Output Fields	1084
	Table 58: show system connections Output Fields	1093
	Table 59: show system core-dumps Output Fields	1112
	Table 60: show system directory-usage Output Fields	1125
	Table 61: show system processes Output Fields	1134
	Table 62: show system resource-cleanup processes Output Fields	1158
	Table 63: show system services service-deployment Output Fields	1160
	Table 64: show system storage Output Fields	1199
	Table 65: show system uptime Output Fields	1206
	Table 66: show system users Output Fields	1211
	Table 67: show system virtual-memory Output Fields	1217
	Table 68: traceroute Output Fields	1290
	Table 69: traceroute monitor Output Fields	1293
Chapter 31	Standard Software Installation and Upgrade Operational Commands . .	1295
	Table 70: show system software usb-software-version Output Fields	1330
Chapter 32	Software Downgrade Operational Commands	1333
	Table 71: show system software restore-point status Output Fields	1337

About the Documentation

- Documentation and Release Notes on page xxi
- Supported Platforms on page xxi
- Using the Examples in This Manual on page xxi
- Documentation Conventions on page xxiii
- Documentation Feedback on page xxv
- Requesting Technical Support on page xxv

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- QFabric System

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:







```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

Documentation Conventions

[Table 1 on page xxiii](#) defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

[Table 2 on page xxiii](#) defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	<code>user@host> show chassis alarms</code> <code>No alarms currently active</code>
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric metric>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (string1 string2 string3)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page of the Juniper Networks TechLibrary site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <http://www.juniper.net/techpubs/feedback/>.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>

- Download the latest versions of software and review release notes:
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Autoinstallation

- [Understanding Autoinstallation on page 3](#)

CHAPTER 1

Understanding Autoinstallation

- [Understanding Autoinstallation of Configuration Files on page 3](#)
- [Configuring Autoinstallation of Configuration Files \(CLI Procedure\) on page 5](#)
- [Upgrading Software by Using Automatic Software Download on page 7](#)
- [Verifying Autoinstallation Status on page 8](#)
- [Verifying That Automatic Software Download Is Working Correctly on page 9](#)

Understanding Autoinstallation of Configuration Files

Autoinstallation is the automatic configuration of a device over the network from a preexisting configuration file that you create and store on a configuration server—typically a Trivial File Transfer Protocol (TFTP) server. You can use autoinstallation to configure new devices automatically and to deploy multiple devices from a central location in the network.

You enable autoinstallation so that the switches in your network implement autoinstallation when they are powered on. To configure autoinstallation, you specify a configuration server, an autoinstallation interface, and a protocol for IP address acquisition.

This topic describes:

- [Typical Uses for Autoinstallation on page 3](#)
- [Autoinstallation Configuration Files and IP Addresses on page 3](#)
- [Typical Autoinstallation Process on a New Switch on page 4](#)

Typical Uses for Autoinstallation

Typical uses for autoinstallation of the software include:

- To deploy and update multiple devices from a central location in the network.
- To update a device—Autoinstallation occurs when a device that has been manually configured for autoinstallation is powered on.

Autoinstallation Configuration Files and IP Addresses

For the autoinstallation process to work, you must store one or more host-specific or default configuration files on a configuration server in the network and have a service

available—typically Dynamic Host Configuration Protocol (DHCP)—to assign an IP address to the switch.

You can set up the following configuration files for autoinstallation on the switch:

- **network.conf**—Default configuration file for autoinstallation, in which you specify IP addresses and associated hostnames for devices on the network.
- **switch.conf**—Default configuration file for autoinstallation with a minimum configuration sufficient for you to telnet to the device and configure it manually.
- **hostname.conf**—Host-specific configuration file for autoinstallation on a device that contains all the configuration information necessary for the switch. In the filename, **hostname** is replaced with the hostname assigned to the switch.

If the server with the autoinstallation configuration file is not on the same LAN segment as the new device, or if a specific device is required by the network, you must configure an intermediate device directly attached to the new switch, through which the new switch can send TFTP, Boot Protocol (BOOTP), and Domain Name System (DNS) requests. In this case, you specify the IP address of the intermediate device as the location to receive TFTP requests for autoinstallation.

Typical Autoinstallation Process on a New Switch

When the switch configured for autoinstallation is powered on, it performs the following autoinstallation tasks:

1. The switch sends out DHCP or BOOTP requests on each connected interface simultaneously to obtain an IP address.

If a DHCP server responds to these requests, it provides the switch with some or all of the following information:

- An IP address and subnet mask for the autoinstallation interface.
- The location of the (typically) TFTP server, Hypertext Transfer Protocol (HTTP) server, or FTP server on which the configuration file is stored.
- The name of the configuration file to be requested from the TFTP server.
- The IP address or hostname of the TFTP server.

If the DHCP server provides the server's hostname, a DNS server must be available on the network to resolve the name to an IP address.

- The IP address of an intermediate device if the configuration server is on a different LAN segment from the switch.

2. After the switch acquires an IP address, the autoinstallation process on the switch attempts to download a configuration file in the following ways:
 - a. If the DHCP server specifies the host-specific configuration file **hostname.conf**, the switch uses that filename in the TFTP server request. The autoinstallation process on the new switch makes three unicast TFTP requests for **hostname.conf**. If these attempts fail, the switch broadcasts three requests to any available TFTP server for the file.
 - b. If the switch does not locate a **hostname.conf** file, the autoinstallation process sends three unicast TFTP requests for a **network.conf** file that contains the switch's hostname-to-IP-address mapping information. If these attempts fail, the switch broadcasts three requests to any available TFTP server for the file.
 - c. If the switch fails to find a **network.conf** file that contains a hostname entry for the switch, the autoinstallation process sends out a DNS request and attempts to resolve the switch's IP address to a hostname.
 - d. If the switch determines its hostname, it sends a TFTP request for the **hostname.conf** file.
 - e. If the switch is unable to map its IP address to a hostname, it sends TFTP requests for the default configuration file **switch.conf**. The TFTP request procedure is the same as for the **network.conf** file.
3. After the switch locates a configuration file on a TFTP server, the autoinstallation process downloads the file, installs the file on the switch, and commits the configuration.

**Related
Documentation**

- [Configuring Autoinstallation of Configuration Files \(CLI Procedure\) on page 5](#)
- [Connecting and Configuring an EX Series Switch \(CLI Procedure\)](#)
- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\)](#)
- [Configuration Files Terms](#)

Configuring Autoinstallation of Configuration Files (CLI Procedure)

Autoinstallation is the automatic configuration of a device over the network from a pre-existing configuration file that you create and store on a configuration server—typically a Trivial File Transfer Protocol (TFTP) server. You can use autoinstallation to automatically deploy multiple devices from a central location in the network.

To specify autoinstallation to run when you power on a switch already installed in your network, you can enable it by specifying one or more interfaces, protocols, and configuration servers to be used for autoinstallation.

Before you explicitly enable and configure autoinstallation on the switch, perform these tasks as needed for your network's configuration:

- Have a service available—typically Dynamic Host Configuration Protocol (DHCP)—to assign an IP address to the switch
- Configure a DHCP server on your network to meet your network requirements. You can configure a switch to operate as a DHCP server. For more information, see [“Configuring a DHCP Server on Switches \(CLI Procedure\)” on page 78](#).
- Create one of the following configuration files, and store it on a TFTP server (or HTTP server or FTP server) in the network:
 - A host-specific file with the name **hostname.conf** for each switch undergoing autoinstallation. Replace **hostname** with the name of a switch. The **hostname.conf** file typically contains all the configuration information necessary for the switch with this hostname.
 - A default configuration file named **switch.conf** with the minimum configuration necessary to enable you to telnet into the new switch for further configuration.
- Physically attach the switch to the network using a Gigabit Ethernet port.
- If you configure the DHCP server to provide only the TFTP server hostname, add an IP address-to-hostname mapping entry for the TFTP server to the DNS database file on the Domain Name System (DNS) server in the network.
- If the switch is not on the same network segment as the DHCP server (or other device providing IP address resolution), configure an existing device as an intermediate device to receive TFTP and DNS requests and forward them to the TFTP server and the DNS server. You must configure the LAN or serial interface on the intermediate device with the IP addresses of the hosts providing TFTP and DNS services. Connect this interface to the switch.
- If you are using **hostname.conf** files for autoinstallation, you must also complete the following tasks:
 - Configure the DHCP server to provide a **hostname.conf** filename to each switch. Each switch uses its **hostname.conf** filename to request a configuration file from the TFTP server. Copy the necessary **hostname.conf** configuration files to the TFTP server.
 - Create a default configuration file named **network.conf**, and copy it to the TFTP server. This file contains IP-address-to-hostname mapping entries. If the DHCP server does not send a **hostname.conf** filename to a new switch, the switch uses **network.conf** to resolve its hostname based on its IP address.

Alternatively, you can add the IP-address-to-hostname mapping entry for the switch to a DNS database file.

The switch uses the hostname to request a **hostname.conf** file from the TFTP server.

To configure autoinstallation:

1. Specify the URL address of one or more servers from which to obtain configuration files.

```
[edit system]
user@switch# set autoinstallation configuration-servers tftp://tftpconfig.sp.com
```



NOTE: You can also use an FTP address, for example, `ftp://user:password@sftpconfig.sp.com`.

2. Configure one or more Ethernet interfaces to perform autoinstallation and one or two procurement protocols for each interface. The switch uses the protocols to send a request for an IP address for the interface:

```
[edit system]
user@switch# set autoinstallation interfaces ge-0/0/0 bootp
```

**Related
Documentation**

- [Verifying Autoinstallation Status on page 8](#)
- [Understanding Autoinstallation of Configuration Files on page 3](#)
- [Understanding DHCP Services for Switches on page 73](#)

Upgrading Software by Using Automatic Software Download

The automatic software download feature uses the Dynamic Host Configuration Protocol (DHCP) message exchange process to download and install software packages. You configure the automatic software download feature on switches that act as DHCP clients. You must enable automatic software download on a switch before the software upgrade can occur.

You configure a path to a software package file on the DHCP server. The server communicates the path to the software package file through DHCP server messages.

If you enable automatic software download, the DHCP client switch compares the software package name in the DHCP server message with the name of the software package that booted the switch. If the software packages are different, the DHCP client switch downloads and installs the software package specified in the DHCP server message.

Before you upgrade software by using automatic software download, ensure that you have configured DHCP services for the switch, including configuring a path to a boot server and a boot file.

To configure a path to a boot server and a boot file:

1. Configure the name of the boot server advertised to DHCP clients. The client uses a boot file located on the boot server to complete DHCP setup. This configuration is equivalent to DHCP Option 66:

```
[edit system services dhcp]
user@switch# set boot-server (address | hostname)
```

2. Set the boot file advertised to DHCP clients. After the client receives an IP address and the boot file location from the DHCP server, the client uses the boot image stored in the boot file to complete the DHCP setup. This configuration is equivalent to DHCP Option 67:

```
[edit system services dhcp]
```

```
user@switch# set boot-file filename
```

To enable automatic software download on a switch that acts as a DHCP client:

```
[edit chassis]
user@switch# set auto-image-upgrade
```

After automatic software download is enabled on your DHCP client switch and after DHCP services are enabled on your network, an automatic software download can occur at any time as part of the DHCP message exchange process.

If an automatic software download occurs, you see the following message on the switch:

```
Auto-image upgrade started
On successful installation system will reboot automatically
```

The switch reboots automatically to complete the upgrade.

Related Documentation

- [Verifying That Automatic Software Download Is Working Correctly on page 9](#)
- [Understanding Software Installation on EX Series Switches](#)
- [Configuring a DHCP Server on Switches \(CLI Procedure\) on page 78](#)
- [Configuring DHCP Services \(J-Web Procedure\)](#)
- [Understanding DHCP Services for Switches on page 73](#)

Verifying Autoinstallation Status

Purpose Display the status of the autoinstallation feature.

Action From the CLI, enter the **show system autoinstallation status** command.

Sample Output

```
user@switch> show system autoinstallation status
Autoinstallation status:
Master state: Active
Last committed file: None
Configuration server of last committed file: 10.25.100.1
Interface:
  Name: ge-0/0/0
  State: Configuration Acquisition
  Acquired:
    Address: 192.168.124.75
    Hostname: host-ge-000
    Hostname source: DNS
    Configuration filename: switch-ge-000.conf
    Configuration filename server: 10.25.100.3
  Address acquisition:
    Protocol: DHCP Client
    Acquired address: None
    Protocol: RARP Client
    Acquired address: None
Interface:
  Name: ge-0/0/1
  State: None
  Address acquisition:
```

```

Protocol: DHCP Client
Acquired address: None
Protocol: RARP Client
Acquired address: None

```

Meaning The output shows the settings configured for autoinstallation. Verify that the values displayed are correct for the switch when it is deployed on the network.

Related Documentation

- [Configuring Autoinstallation of Configuration Files \(CLI Procedure\) on page 5](#)

Verifying That Automatic Software Download Is Working Correctly

Purpose Verify that the automatic software download feature is working correctly.

Action Use the `show system services dhcp client interface-name` command to verify that the automatic software download feature has been used to install a software package.

```

user@switch> show system services dhcp client ge-0/0/1.0
Logical Interface Name      ge-0/0/1.0
Hardware address           00:0a:12:00:12:12
Client Status              bound
Vendor Identifier          ether
Server Address             10.1.1.1
Address obtained           10.1.1.89
Lease Obtained at          2009-08-20 18:13:04 PST
Lease Expires at           2009-08-22 18:13:04 PST

DHCP Options :
Name: name-server, Value: [ 10.209.194.131, 2.2.2.2, 3.3.3.3 ]
Name: server-identifier, Value: 10.1.1.1
Name: router, Value: [ 10.1.1.80 ]
Name: boot-image,
Value: jinstall-ex-4200-9.6R1.5-domestic-signed.tgz
Name: boot-image-location,
Value: 10.1.1.25:/bootfiles/

```

Meaning The output from this command shows the name and location of the software package under DHCP options when automatic software download was last used to install a software package. The sample output in DHCP options shows that the last DHCP server message to arrive on the DHCP client had a boot server address of 192.168.1.165 and a boot file named jinstall-ex-4200-9.6R1.5-domestic-signed.tgz. If automatic software download was enabled on this client switch during the last DHCP message exchange, these values were used by the switch to upgrade the software.

Related Documentation

- [Upgrading Software by Using Automatic Software Download on page 7](#)
- [Understanding DHCP Services for Switches on page 73](#)

PART 2

Basic System Management

- [Understanding Basic System Management on page 13](#)

CHAPTER 2

Understanding Basic System Management

- [Compressing the Current Configuration File on page 14](#)
- [Configuring a DNS Name Server for Resolving a Hostname into Addresses on page 15](#)
- [Configuring Console and Auxiliary Port Properties on page 15](#)
- [Configuring the Hostname of the Router or Switch on page 16](#)
- [Configuring a QFX3500 Device as a Standalone Switch on page 17](#)
- [Configuring the Junos OS to Determine Conditions That Trigger Alarms on Different Interface Types on page 19](#)
- [Configuring Junos OS to Disable Protocol Redirect Messages on the Router or Switch on page 19](#)
- [Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses on page 20](#)
- [Configuring Junos OS to Extend the Default Port Address Range on page 20](#)
- [Configuring the Junos OS to Select a Fixed Source Address for Locally Generated TCP/IP Packets on page 21](#)
- [Configuring System Alarms to Appear Automatically Upon Login on page 21](#)
- [Configuring Time-Based User Access on page 21](#)
- [Configuring the Timeout Value for Idle Login Sessions on page 23](#)
- [Including the Year or Millisecond in Timestamps on page 24](#)
- [Mapping the Hostname of the Switch to IP Addresses on page 24](#)
- [Modifying the Default Time Zone for a Router or Switch Running Junos OS on page 25](#)
- [Rebooting and Halting a Device on page 26](#)
- [Reaching a Domain Name System Server on page 27](#)
- [Reverting to the Default Factory Configuration by Using the request system zeroize Command on page 29](#)
- [Saving Core Files Generated by Junos OS Processes on page 30](#)
- [Specifying the Physical Location of the Switch on page 30](#)
- [Specifying Access Privileges for Junos OS Operational Mode Commands on page 31](#)
- [Updating the IANA Time Zone Database on Junos OS Devices on page 33](#)

- [Viewing Core Files from Junos OS Processes on page 35](#)
- [Example: Configuring the Name of the Switch, IP Address, and System ID on page 35](#)

Compressing the Current Configuration File

By default, the current operational configuration file is compressed and is stored in the file **juniper.conf.gz** in the **/config** file system, along with the last three committed versions of the configuration. If you have large networks, the current configuration file might exceed the available space in the **/config** file system. Compressing the current configuration file enables the file to fit in the file system, typically reducing the size of the file by 90 percent. You might want to compress your current operation configuration files when they reach 3 megabytes (MB) in size.

When you compress the current configuration file, the names of the configuration files change. To determine the size of the files in the **/config** file system, issue the **file list /config detail** command.



NOTE: We recommend that you compress the configuration files (this is the default) to minimize the amount of disk space that they require.

- If you want to compress the current configuration file, include the **compress-configuration-files** statement at the **[edit system]** hierarchy level:

```
[edit system]
compress-configuration-files;
```

Commit the current configuration file to include the **compression-configuration-files** statement. Commit the configuration again to compress the current configuration file:

```
[edit system]
user@host# set compress-configuration-files
user@host# commit
commit complete
user@host# commit
commit complete
```

- If you do not want to compress the current operational configuration file, include the **no-compress-configuration-files** statement at the **[edit system]** hierarchy level:

```
[edit system]
no-compression-configuration-files;
```

Commit the current configuration file to include the **no-compress-configuration-files** statement. Commit the configuration again to uncompress the current configuration file:

```
[edit system]
user@host# commit
commit complete
user@host# commit
commit complete
```

- Related Documentation**
- *Junos OS Commit Model for Router or Switch Configuration*
 - [compress-configuration-files on page 254](#)

Configuring a DNS Name Server for Resolving a Hostname into Addresses

To have the router or switch resolve hostnames into addresses, you must configure one or more Domain Name System (DNS) name servers by including the **name-server** statement at the **[edit system]** hierarchy level:

```
[edit system]
name-server {
    address;
}
```

The following example shows how to configure two DNS name servers:

```
[edit]
user@switch# set system name-server 192.168.1.253
[edit]
user@switch# set system name-server 192.168.1.254
[edit]
user@switch# show
system {
    name server {
        192.168.1.253;
        192.168.1.254;
    }
}
```

- Related Documentation**
- [name-server on page 265](#)

Configuring Console and Auxiliary Port Properties

The console port and auxiliary port on a switch provide out-of-band remote access to the switch. You can configure the console and auxiliary ports so that an external data terminal may be connected to the switch. The console port is enabled by default. The console port speed is 9600 baud, except on OCX Series devices, on which it is 115200 baud. The auxiliary port is disabled by default.

By default, terminal connections to the console and auxiliary ports are secure. When you configure the console and auxiliary ports as insecure, root logins are not allowed to establish terminal connections, and superusers and anyone with a user identifier (UID) of 0 are not allowed to establish terminal connections in multiuser mode.

To configure the console and auxiliary port properties on the switch:

1. To specify that the console port session should terminate if the connection to the data carrier is lost:

```
[edit system ports]
user@switch# set console log-out-on-disconnect
```

2. To specify the auxiliary port terminal type:

```
[edit system ports]
user@switch# set auxiliary type (ansi | small-xterm | vt100 | xterm)
```

For example, to specify the auxiliary port terminal type of **xterm** with a display of 80 columns by 65 rows:

```
[edit system ports]
user@switch# set auxiliary type xterm
```

3. To check the configuration:

```
[edit system ports]
user@switch# show
console log-out-on-disconnect;
auxiliary type xterm;
```

Related Documentation

- [auxiliary on page 252](#)
- [console \(Physical Port\) on page 255](#)
- [ports on page 268](#)

Configuring the Hostname of the Router or Switch

The hostname of the device provides its identification for many purposes. Junos OS uses the configured hostname as part of the command prompt, to prepend log files and other accounting information, as well as in other places where knowing the device identity is useful. We recommend that the hostname be descriptive and memorable.

Optionally, instead of configuring the hostname at the **[edit system]** hierarchy level, you can use a configuration group, as shown in this procedure. This is a recommended best practice for configuring the hostname, especially if the device has dual Routing Engines. This procedure uses groups called **re0** and **re1** as an example.

To set the hostname:

1. Include the **host-name** statement in the configuration.

The name value must be less than 256 characters.

```
[edit groups group-name system]
host-name hostname;
```

For example:

```
[edit groups re0 system]
root@# set host-name san-jose-router

[edit groups re1 system]
root@# set host-name san-jose-router1
```

2. If you used one or more configuration groups, apply the configuration groups, substituting the appropriate group names.

For example:

```
[edit]
user@host# set apply-groups [re0 re1]
```

3. Commit the changes.

```
[edit]
root@# commit
```

The hostname subsequently appears in the device CLI prompt.

```
san-jose-router@#
```

Related Documentation • *Understanding Hostnames*

Configuring a QFX3500 Device as a Standalone Switch

If you are using the QFX3500 device as a standalone switch, you must perform the initial configuration of the QFX3500 device through the console port using the command-line interface (CLI). If you are using the QFX3500 as a Node device in a QFX3000 QFabric system, you instead perform the initial setup of a QFabric system on a QFX3100 Director device (see *Performing the QFabric System Initial Setup on a QFX3100 Director Group*).

Before you begin connecting and configuring a QFX3500 device, set the following parameter values on the console server or PC:

- Baud Rate—9600
- Flow Control—None
- Data—8
- Parity—None
- Stop Bits—1
- DCD State—Disregard

To connect and configure the device from the console:

1. Connect the console port to a laptop or PC using the supplied RJ-45 cable and RJ-45 to DB-9 adapter. The console (**CON**) port is located on the front panel of the device.
2. Log in as **root**. There is no password. If the software booted before you connected to the console port, you might need to press the Enter key for the prompt to appear.

```
Login: root
```

3. Start the CLI.

```
root@% cli
```

4. Enter configuration mode.

```
root> configure
```

5. Add a password to the root administration user account.

```
[edit]
root@# set system root-authentication plain-text-password
New password: password
Retype new password: password
```

6. (Optional) Configure the name of the device. If the name includes spaces, enclose the name in quotation marks (" ").

```
[edit]
root@# set system host-name host-name
```

7. Configure the default gateway.

```
[edit]
root@# set routing-options static route default next-hop address
```

8. Configure the IP address and prefix length for the device management interface.

```
[edit]
root@# set interfaces me0 unit 0 family inet address address/prefix-length
```



CAUTION: Configuring the two management Ethernet interfaces within the same subnet is not supported.



NOTE: The management ports are on the front panel of the QFX3500 device. They are labeled C0 and C1 on the front panel. In the CLI they are referred to as me0 and me1.

9. (Optional) Configure the static routes to remote prefixes with access to the management port.

```
[edit]
root@# set routing-options static route remote-prefix next-hop destination-ip retain
no-readvertise
```

10. Enable telnet service.

```
[edit]
root@# set system services telnet
```



NOTE: When Telnet is enabled, you cannot log in to a QFX3500 device through Telnet using root credentials. Root login is allowed only for SSH access.

11. Commit the configuration to activate it on the device.

```
[edit]
root@# commit
```

Related Documentation

- *Installing and Connecting a QFX3500 Device*
- *QFX3000-G QFabric System Installation Overview*
- *Understanding QFX3000-G QFabric System Hardware Configurations*

Configuring the Junos OS to Determine Conditions That Trigger Alarms on Different Interface Types

For the different types of PICs, you can configure which conditions trigger alarms and whether they trigger a red or yellow alarm. Red alarm conditions light the **RED ALARM** LED and trigger an audible alarm if one is connected. Yellow alarm conditions light the **YELLOW ALARM** LED and trigger an audible alarm if one is connected.



NOTE: By default, any failure condition on the integrated-services interface (Adaptive Services PIC) triggers a red alarm.

To configure conditions that trigger alarms and that can occur on any interface of the specified type, include the **alarm** statement at the **[edit chassis]** hierarchy level.

```
[edit chassis]
alarm {
  interface-type {
    alarm-name (red | yellow | ignore);
  }
}
```

alarm-name is the name of an alarm.

Related Documentation

- *System-Wide Alarms and Alarms for Each Interface Type*
- *Chassis Conditions That Trigger Alarms*
- *Silencing External Devices Connected to Alarm Relay Contacts*

Configuring Junos OS to Disable Protocol Redirect Messages on the Router or Switch

By default, the router or switch sends protocol redirect messages. To disable the sending of redirect messages by the router or switch, include the **no-redirects** statement at the **[edit system]** hierarchy level:

```
[edit system]
no-redirects;
```

To reenable the sending of redirect messages on the router or switch, delete the **no-redirects** statement from the configuration.

To disable the sending of redirect messages on a per-interface basis, include the **no-redirects** statement at the **[edit interfaces interface-name unit logical-unit-number family family]** hierarchy level.

Related Documentation

- *Configuring Junos OS to Ignore ICMP Source Quench Messages*
- *Configuring Junos OS to Select a Fixed Source Address for Locally Generated TCP/IP Packets*
- *Junos OS Network Interfaces Library for Routing Devices*

Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses

When you issue the **ping** command with the **record-route** option, the Routing Engine displays the path of the ICMP echo request packets and timestamps in the ICMP echo responses by default.

You can configure the Routing Engine to disable the setting of the **record-route** option in the IP header of the ping request packets. Disabling the **record-route** option prevents the Routing Engine from recording and displaying the path of the ICMP echo request packets in the response.

- To configure the Routing Engine to disable the setting of the **record-route** option, include the **no-ping-record-route** statement at the **[edit system]** hierarchy level:

```
[edit system]
no-ping-record-route;
```

- To disable the reporting of timestamps in the ICMP echo responses, include the **no-ping-time-stamp** option at the **[edit system]** hierarchy level:

```
[edit system]
no-ping-time-stamp;
```

By configuring the **no-ping-record-route** and **no-ping-timestamp** options, you can prevent unauthorized persons from discovering information about the provider edge (PE) router or switch and its loopback address.

Related Documentation

- [Configuring Junos OS to Disable the Routing Engine Response to Multicast Ping Packets on page 86](#)

Configuring Junos OS to Extend the Default Port Address Range

By default, the upper range of a port address is 5000. You can increase the range from which the port number can be selected to decrease the probability that someone can determine your port number.

- To configure the Junos OS to extend the default port address range, include the **source-port** statement at the **[edit system internet-options]** hierarchy level:

```
[edit system internet-options]
source-port upper-limit upper-limit;
```

upper-limit *upper-limit* is the upper limit of a source port address and can be a value from 5000 through 65,355.

Related Documentation

- [Configuring Junos OS to Disable TCP RFC 1323 Extensions](#)
- [Configuring Junos OS ARP Learning and Aging Options for Mapping IPv4 Network Addresses to MAC Addresses](#)
- [source-port on page 271](#)

Configuring the Junos OS to Select a Fixed Source Address for Locally Generated TCP/IP Packets

By default, the source address included in locally generated Transmission Control Protocol/IP (TCP/IP) packets, such as FTP traffic, and in User Datagram Protocol (UDP) and IP packets, such as Network Time Protocol (NTP) requests, is chosen as the local address for the interface on which the traffic is transmitted. This means that the local address chosen for packets to a particular destination might change from connection to connection based on the interface that the routing protocol has chosen to reach the destination when the connection is established. If multiple equal-cost next hops are present for a destination, locally generated packets use the **lo0** address as a source.

- To configure the software to select a fixed address to use as the source for locally generated IP packets, include the **default-address-selection** statement at the **[edit system]** hierarchy level:

```
[edit system]
default-address-selection;
```

If you include the **default-address-selection** statement in the configuration, the Junos OS chooses the system default address as the source for most locally generated IP packets. The default address is usually an address configured on the **lo0** loopback interface. For example, if you specified that SSH and telnet use a particular address, but you also have **default-address selection** configured, the system default address is used.

Related Documentation

- [Configuring Junos OS to Disable Protocol Redirect Messages on the Router or Switch on page 19](#)
- [default-address-selection on page 256](#)

Configuring System Alarms to Appear Automatically Upon Login

You can configure Juniper Networks routers and switches to run the **show system alarms** command whenever a user with the login class **admin** logs in to the router or switch. To do so, include the **login-alarms** statement at the **[edit system login class admin]** hierarchy level.

```
[edit system login class admin]
login-alarms;
```

For more information on the **show system alarms** command, see the [CLI Explorer](#).

Related Documentation

- [System Alarms on J Series Routers](#)
- [show system alarms on page 1057](#)

Configuring Time-Based User Access

The Junos OS enables you to configure time-based restrictions for user access to log in to a device. This is useful for restricting the time and duration of user logins for all users

belonging to a login class. You can specify the days of the week when users can log in, the access start time, and the access end time.

- To configure user access on specific days of the week, without any restrictions on the duration of login, include the **allowed-days** statement only.

```
[edit system]
login {
  class class-name {
    allowed-days [ days-of-the-week ];
  }
}
```

- To configure user access on all the days of the week for a specific duration, include the **access-start** and **access-end** statements only.

```
[edit system]
login {
  class class-name {
    access-start HH:MM;
    access-end HH:MM;
  }
}
```

- To configure user access on specific days of the week for a specified duration, include the **allowed-days**, **access-start**, and **access-end** statements.

```
[edit system]
login {
  class class-name {
    allowed-days [ days-of-the-week ];
    access-start HH:MM;
    access-end HH:MM;
  }
}
```

Specify the start time and end time in **HH:MM** (24-hour) format, where **HH** represents the hours and **MM** represents the minutes.



NOTE: Access start time and end time that spans across 12:00 AM on a specified day results in the user having access until the next day, even if the access day is not explicitly configured. For instance, the following configuration results in the user having access until 6:00 AM on Tuesday and Thursday, although the **allowed-days** statement specifies access only on Monday and Wednesday:

```
[edit system]
login {
  class operator-night-shift {
    allowed-days [ monday wednesday ];
    access-start 2000;
    access-end 0600;
  }
}
```

- Related Documentation**
- *Examples: Configuring Time-Based User Access*
 - *Defining Junos OS Login Classes*
 - *access-end*
 - *access-start*
 - *allowed-days*
 - [access-end on page 296](#)
 - [access-start on page 296](#)
 - [allowed-days on page 298](#)

Configuring the Timeout Value for Idle Login Sessions

An idle login session is one in which the CLI operational mode prompt is displayed but there is no input from the keyboard. By default, a login session remains established until a user logs out of the router or switch, even if that session is idle. To close idle sessions automatically, you must configure a time limit for each login class. If a session established by a user in that class remains idle for the configured time limit, the session automatically closes.

To define the timeout value for idle login sessions, include the **idle-timeout** statement at the **[edit system login class *class-name*]** hierarchy level:

```
[edit system login class class-name]  
idle-timeout minutes;
```

Specify the number of minutes that a session can be idle before it is automatically closed.

If you have configured a timeout value, the CLI displays messages similar to the following when timing out an idle user. It starts displaying these messages 5 minutes before timing out the user.

```
user@host# Session will be closed in 5 minutes if there is no activity.  
Warning: session will be closed in 1 minute if there is no activity  
Warning: session will be closed in 10 seconds if there is no activity  
Idle timeout exceeded: closing session
```

If you configure a timeout value, the session closes after the specified time has elapsed, unless the user is running telnet or monitoring interfaces using the **monitor interface** or **monitor traffic** command.

- Related Documentation**
- *Defining Junos OS Login Classes*
 - *idle-timeout (System-Login)*

Including the Year or Millisecond in Timestamps

By default, the timestamp recorded in a standard-format system log message specifies the month, date, hour, minute, and second when the message was logged, as in the following example:

```
Aug 21 12:36:30
```

To include the year, the millisecond, or both in the timestamp, include the **time-format** statement at the **[edit system syslog]** hierarchy level:

```
[edit system syslog]
time-format (year | millisecond | year millisecond);
```

However, the timestamp for traceoption messages is specified in milliseconds by default, and is independent of the **[edit system syslog time-format]** statement.

The modified timestamp is used in messages directed to each destination configured by a **file**, **console**, or **user** statement at the **[edit system syslog]** hierarchy level, but not to destinations configured by a **host** statement.

The following example illustrates the format for a timestamp that includes both the millisecond (401) and the year (2006):

```
Aug 21 12:36:30.401 2006
```



NOTE: Messages logged in structured-data format include the year and millisecond by default. If you include the structured-data statement at the **[edit system syslog file filename]** hierarchy level along with the **time-format** statement, the **time-format** statement is ignored and messages are logged in structured-data format.

For information about the structured-data statement, see *Logging Messages in Structured-Data Format*. For information about the contents of a structured-data message, see the [System Log Explorer](#).

Related Documentation

- *Single-Chassis System Logging Configuration Overview*
- *Examples: Configuring System Logging*

Mapping the Hostname of the Switch to IP Addresses

To map a hostname of a switch to one or more IP addresses, include the **inet** statement at the **[edit system static-host-mapping hostname]** hierarchy level:

```
[edit system]
static-host-mapping {
  hostname {
    inet [ addresses ];
    alias [ aliases ];
```

```
}
}
```

hostname is the name specified by the **host-name** statement at the **[edit system]** hierarchy level.

For each host, you can specify one or more aliases.

Related Documentation

- [Reaching a Domain Name System Server on page 27](#)
- *Example: Configuring the Name of the Router, IP Address, and System ID*
- [static-host-mapping on page 272](#)

Modifying the Default Time Zone for a Router or Switch Running Junos OS

The default local time zone on the router or switch is UTC (Coordinated Universal Time, formerly known as Greenwich Mean Time, or GMT).

- To modify the local time zone, include the **time-zone** statement at the **[edit system]** hierarchy level:

```
[edit system]
time-zone (GMT hour-offset | time-zone);
```

You can use the **GMT hour-offset** option to set the time zone relative to UTC (GMT) time. By default, **hour-offset** is 0. You can configure this to be a value from -14 to +12.

You can also specify the **time-zone** value as a string such as PDT (Pacific Daylight Time) or WET (Western European Time), or specify the continent and major city.



NOTE: Junos OS complies with the POSIX time-zone standard, which is counter-intuitive to the way time zones are generally indicated relative to UTC. A time zone ahead of UTC (east of the Greenwich meridian) is commonly indicated as GMT +*n*; for example, the Central European Time (CET) zone is indicated as GMT +1. However, this is not true for POSIX time zone designations. POSIX indicates CET as GMT-1. If you include the **set system time-zone GMT+1** statement for a router in the CET zone, your router time will be set to one hour behind GMT, or two hours behind the actual CET time. For this reason, you might find it easier to use the POSIX time-zone strings, which you can list by entering **set system time-zone ?**.

For the time zone change to take effect for all processes running on the router or switch, you must reboot the router or switch.

The following example shows how to change the current time zone to **America/New_York**:

```
[edit]
user@host# set system time-zone America/New_York
[edit]
user@host# show
system {
```

```
time-zone America/New_York;
}
```

Related Documentation

- [Understanding NTP Time Servers on page 111](#)
- [Updating the IANA Time Zone Database on Junos OS Devices on page 33](#)

Rebooting and Halting a Device

To reboot the switch, issue the **request system reboot** command.

```
user@switch> request system reboot ?
Possible completions:
<[Enter]>      Execute this command
all-members    Reboot all virtual chassis members
at             Time at which to perform the operation
both-routing-engines  Reboot both the Routing Engines
fast-boot      Enable fast reboot
in            Number of minutes to delay before operation
local         Reboot local virtual chassis member
member        Reboot specific virtual chassis member (0..9)
message       Message to display to all users
other-routing-engine  Reboot the other Routing Engine
|            Pipe through a command
{master:0}
```

```
user@switch> request system reboot
Reboot the system ? [yes,no] (no) yes
Rebooting switch
```



NOTE: Not all options shown in the preceding command output are available on all QFX Series, OCX Series, and EX4600 devices. For example, the **fast-boot** option is available only on the QFX5100 switch. See the documentation for the **request system reboot** command for details about options.

Similarly, to halt the switch, issue the **request system halt** command.



CAUTION: Before entering this command, you must have access to the switch's console port in order to bring up the Routing Engine.

```
user@switch> request system halt ?
Possible completions:
<[Enter]>      Execute this command
all-members    Halt all virtual chassis members
at             Time at which to perform the operation
backup-routing-engine  Halt backup Routing Engine
both-routing-engines  Halt both Routing Engines
in            Number of minutes to delay before operation
local         Halt local virtual chassis member
member        Halt specific virtual chassis member (0..9)
message       Message to display to all users
other-routing-engine  Halt other Routing Engine
|            Pipe through a command
```




NOTE: When you issue this command on an individual component in a QFabric system, you will receive a warning that says “Hardware-based members will halt, Virtual Junos Routing Engines will reboot.” If you want to halt only one member, use the `member` option. You cannot issue this command from the QFabric CLI.

Issuing the `request system halt` command on the switch halts the Routing Engine. To reboot a Routing Engine that has been halted, you must connect through the console.

Related Documentation

- [clear system reboot on page 355](#)
- [request system reboot on page 413](#)
- [request system halt on page 401](#)
- [request system power-off on page 408](#)
- [Connecting a QFX Series Device to a Management Console](#)

Reaching a Domain Name System Server

Domain name system (DNS) servers are used for resolving hostnames to IP addresses.

For redundancy, it is a best practice to configure access to multiple DNS servers. You can configure a maximum of three DNS servers. The approach is similar to the way Web browsers resolve the names of a Web site to its network address. Additionally, Junos OS enables you configure one or more domain names, which it uses to resolve hostnames that are not fully qualified (in other words, the domain name is missing). This is convenient because you can use a hostname in configuring and operating Junos OS without the need to reference the full domain name. After adding DNS server addresses and domain names to your Junos OS configuration, you can use DNS resolvable hostnames in your configuration and commands instead of IP addresses.

Optionally, instead of configuring the name server at the `[edit system]` hierarchy level, you can use a configuration group, as shown in this procedure. This is a recommended best practice for configuring the name server. This procedure uses a group called `global` as an example.

Before you begin, configure your DNS servers with the hostname and an IP address for your Junos OS device. It does not matter which IP address you assign as the address of your Junos OS device in the DNS server, as long it is an address that reaches your device. Normally, you would use the management interface IP address, but you can choose the loopback interface IP address, or a network interface IP address, or even configure multiple addresses on the DNS server.

To configure the router or switch to resolve hostnames into addresses:

1. Reference the IP addresses of your DNS servers.

```
[edit groups group-name system]
```

```
name-server {  
    address;  
}
```

The following example shows how to reference two DNS servers:

```
[edit groups global system]  
user@host# set name-server 192.168.1.253  
user@host# set name-server 192.168.1.254
```

```
user@host# show  
name server {  
    192.168.1.253;  
    192.168.1.254;  
}
```

2. (Optional) Configure the name of the domain in which the device itself is located.

This is a good practice. Junos OS then uses this configured domain name as the default domain name to append to hostnames that are not fully qualified.

```
[edit system]  
domain-name domain-name;
```

The following example shows how to configure the domain name:

```
[edit groups global system]  
user@host# set domain-name company.net
```

```
user@host# show  
domain-name company.net;
```

3. (Optional) Configure a list of domains to be searched.

If your device can reach several different domains, you can configure these as a list of domains to be searched. Junos OS then uses this list to set an order in which it appends domain names when searching for the IP address of a host.

```
[edit groups global system]  
domain-search [ domain-list ];
```

The domain list can contain up to six domain names, with a total of up to 256 characters.

The following example shows how to configure two domains to be searched. This example configures Junos OS to search the company.net domain and then the domainone.net domain and then the domainonealternate.com domain when attempting to resolve unqualified hosts.

```
[edit groups global system]  
domain-search [ company.net domainone.net domainonealternate.com ]
```

4. If you used a configuration group, apply the configuration group, substituting **global** with the appropriate group name.

```
[edit]  
user@host# set apply-groups global
```

5. Commit the configuration.

```
user@host# commit
```

6. Verify the configuration.

If you have configured your DNS server with the hostname and an IP address for your Junos OS device, you can issue the following commands to confirm that DNS is working and reachable. You can either use the configured hostname to confirm resolution to the IP address or use the IP address of your device to confirm resolution to the configured hostname.

```
user@host> show host host-name
user@host> show host host-ip-address
```

For example:

```
user@host> show host san-jose-router1
san-jose-router1.company.net
san-jose-router1.company.net has address 192.168.187.1

user@host> show host 192.168.187.1
1.187.168.192.in-addr.arpa domain name pointer san-jose-router1.company.net.
```

Related Documentation • [Understanding DNS](#)

Reverting to the Default Factory Configuration by Using the `request system zeroize` Command

The **`request system zeroize`** command is a standard Junos OS operational mode command that removes all configuration information and resets all key values. The operation unlinks all user-created data files, including customized configuration and log files, from their directories. The switch then reboots and reverts to the factory-default configuration.

To completely erase user-created data so that it is unrecoverable, use the **`request system zeroize media`** command.



CAUTION: Before issuing **`request system zeroize`**, use the **`request system snapshot`** command to back up the files currently used to run the switch to a secondary device.

To revert to the factory-default configuration by using the **`request system zeroize`** command:

1.

```
user@switch> request system zeroize
```


warning: System will be rebooted and may not boot without configuration
Erase all data, including configuration and log files? [yes,no] (yes)
2. Type **yes** to remove configuration and log files and revert to the factory default configuration.
3. Complete the initial configuration of the switch.

Related Documentation • [request system zeroize on page 426](#)

Saving Core Files Generated by Junos OS Processes

By default, when an internal Junos OS process generates a core file, the file and associated context information are saved for debugging purposes in a compressed tar file named `/var/tmp/process-name.core.core-number.tgz`. The contextual information includes the configuration and system log message files.

- To disable the saving of core files and associated context information:

```
[edit system]
no-saved-core-context;
```

- To save the core files only:

```
[edit system]
saved-core-files number;
```

Where *number* is the number of core files to save and can be a value from 1 through 10.

- To save the core files along with the contextual information:

```
[edit system]
saved-core-context;
```

Related Documentation

- [Viewing Core Files from Junos OS Processes on page 35](#)

Specifying the Physical Location of the Switch

To specify the physical location of the switch, specify the following options for the **location** statement at the **[edit system]** hierarchy level:

- **altitude *feet***—Number of feet above sea level.
- **building *name***—Name of the building, 1 to 28 characters in length. If the string contains spaces, enclose it in quotation marks (" ").
- **country-code *code***—Two-letter country code.
- **floor *number***—Floor in the building.
- **hcoord *horizontal-coordinate***—Bellcore Horizontal Coordinate.
- **lata *service-area***—Long-distance service area.
- **latitude *degrees***—Latitude in degree format.
- **longitude *degrees***—Longitude in degree format.
- **npa-nxx *number***—First six digits of the phone number (area code and exchange).
- **postal-code *postal-code***—Postal code.
- **rack *number***—Rack number.
- **vcoord *vertical-coordinate***—Bellcore Vertical Coordinate.

The following example shows how to specify the physical location of the switch:

```
[edit system]
location {
  altitude feet;
  building name;
  country-code code;
  floor number;
  hcoord horizontal-coordinate;
  lata service-area;
  latitude degrees;
  longitude degrees;
  npa-nxx number;
  postal-code postal-code;
  rack number;
  vcoord vertical-coordinate;
}
```

Related Documentation

- [Example: Configuring the Name of the Switch, IP Address, and System ID on page 35](#)

Specifying Access Privileges for Junos OS Operational Mode Commands

You can specify extended regular expressions by using the **allow-commands** and **deny-commands** statements to define a user's access privileges to individual operational mode commands. Doing so takes precedence over a login class permissions bit set for a user. You can include one **deny-commands** and one **allow-commands** statement in each login class.

To explicitly provide use of an individual operational mode command that would otherwise be denied, include the **allow-commands** statement at the **[edit system login class *class-name*]** hierarchy level:

```
[edit system login class class-name]
allow-commands "regular-expression";
```

To explicitly deny access to an individual operational mode command that would otherwise be supported, include the **deny-commands** statement at the **[edit system login class *class-name*]** hierarchy level:

```
[edit system login class class-name]
deny-commands "regular-expression";
```

If the regular expression contains any spaces, operators, or wildcard characters, enclose the expression in quotation marks. Regular expressions are not case-sensitive.

```
allow-commands "show interfaces";
```



NOTE: Modifiers are not supported within the regular expression string to be matched. If a modifier is used, then nothing is matched.

For example, the `deny` command `set protocols` does not match anything, whereas `protocols` matches *protocols*.

Explicitly providing access to operational mode commands using the **allow-commands** statement adds to the regular permissions set using the **permissions** statement. Likewise, explicitly denying access to operational mode commands using the **deny-commands** statement removes permissions for the specified commands from the default permissions provided by the **permissions** statement.

For example, if a login class has the permission **view** and the **allow-commands** statement includes the `request system software add` command, the specified login class user can install software, in addition to the permissions specified by the **view** permissions flag. Likewise, if a login class has the permission **all** and the **deny-commands** statement includes the `request system software add` command, the specified login class user can perform all operations allowed by the **all** permissions flag, except installing software using the `request system software add` command.

If you allow and deny the same commands, the **allow-commands** permissions take precedence over the permissions specified by **deny-commands**. For example, if you include **allow-commands** `"request system software add"` and **deny-commands** `"request system software add"`, the login class user is allowed to install software using the `request system software add` command.

If you specify a regular expression for **allow-commands** and **deny-commands** with two different variants of a command, the longest match is always executed.

For example, if you specify a regular expression for **allow-commands** with the **commit-synchronize** command and a regular expression for **deny-commands** with the **commit** command, users assigned to such a login class would be able to issue the **commit synchronize** command, but not the **commit** command. This is because **commit-synchronize** is the longest match between **commit** and **commit-synchronize**, and it is specified for **allow-commands**.

Likewise, if you specify a regular expression for **allow-commands** with the **commit** command and a regular expression for **deny-commands** with the **commit-synchronize** command, users assigned to such a login class would be able to issue the **commit** command, but not the **commit-synchronize** command. This is because **commit-synchronize** is the longest match between **commit** and **commit-synchronize**, and it is specified for **deny-commands**.

Anchors are required when specifying complex regular expressions with **allow-commands** or **deny-commands** statements. For example, when specifying multiple commands using the pipe (|) symbol for **allow-commands**, the following syntax is incorrect:

allow-commands = `"(monitor.*)"|(ping.*)"|(show.*)"|(exit)"`. Instead, you must specify the expression using the following syntax: **allow-commands** = `"(^monitor) | (^ping) | (^show) | (^exit)"` OR **allow-commands** = `"^(monitor | ping | show | exit)"`

- Related Documentation**
- *Example: Configuring Access Privileges for Operational Mode Commands*
 - *Regular Expressions for Allowing and Denying Junos OS Operational Mode Commands*
 - *allow-commands*
 - *deny-commands*

Updating the IANA Time Zone Database on Junos OS Devices

Junos OS devices use the tz database, also known as the IANA Time Zone Database to manage time zones. This database is periodically updated by IANA to reflect political and time changes. As such, you may need from time to time to update this file to ensure the Junos devices continue to accurately reflect worldwide time zones and daylight savings time intervals.

To update the IANA Time Zone Database, perform the following steps:

1. [Importing and Installing Time Zone Files on page 33](#)
2. [Configuring a Custom Time Zone on page 34](#)

Importing and Installing Time Zone Files

The IANA Time Zone Database is maintained by the Internet Assigned Numbers Authority (IANA), which is a department of the Internet Corporation for Assigned Names and Numbers (ICANN). You can download the latest IANA Time Zone Database file from the following URL: <http://www.iana.org/time-zones>.

The following steps will guide you through one method of installing the file to your device. However, depending on your network access and other preferences, you may need to modify these steps.

1. Log into the Junos device.
2. If you are in the CLI interface, open the shell interface.
`device@user# start shell`
3. Create a **tz** directory in the **/var/tmp** and navigate to that directory.
`# mkdir /var/tmp/tz`
`# cd /var/tmp/tz`
4. Using FTP, download the time zone files archive.



NOTE: FTP must be enabled on your device before you can use FTP. FTP is enabled by adding the `ftp` statement into the `[edit system services]` hierarchy.

```
# ftp ftp.iana.org/tz
# bin
# get tzdata-latest.tar.gz
```



NOTE: If needed, you can edit the above untarred files to create or modify the time zones.

5. Select the names of time zone files to compile and feed them to the following script. For example, to generate **northamerica** and **asia** tz files:

```
# /usr/libexec/ui/compile-tz northamerica asia
```

6. Enable the use of the generated tz files using the CLI:

```
[edit]
# set system use-imported-time-zones
[edit]
# set system time-zone ?
```

This should show the newly generated tz files in **/var/db/zoneinfo/**.

7. Set the time zone and commit the configuration:

```
[edit]
# set system time-zone <your-time-zone>
# commit
```

8. Verify that the time zone change has taken effect:

```
[edit]
# run show system uptime
```

Configuring a Custom Time Zone

To use a custom time zone, follow these steps:

1. Download a time zones archive (from a known or designated source) to the router or switch. Compile the time zone archive using the **zic** time zone compiler, which generates **tz** files.
2. Using the CLI, configure the router or switch to enable the use of the generated tz files as follows:

```
[edit]
user@host# set system use-imported-time-zones
```

3. Display the imported time zones (saved in the directory **/var/db/zoneinfo/**):

```
[edit]
user@host# set system time-zone ?
```

If you do not configure the router to use imported time zones, the Junos OS default time zones are shown (saved in the directory **/usr/share/zoneinfo/**).

Related Documentation

- *Modifying the Default Time Zone for a Router or Switch Running Junos OS*
- *NTP Overview*
- [Understanding NTP Time Servers on page 111](#)
- [Example: Configuring NTP as a Single Time Source for Router and Switch Clock Synchronization on page 123](#)

- *use-imported-time-zones*

Viewing Core Files from Junos OS Processes

When an internal Junos OS process generates a core file, the output found at `/var/crash/` and `/var/tmp/` can now be viewed. This provides a quick method of finding core issues across large networks.

Use the CLI command **show system core-dumps** to view core files.

```
root@host> show system core-dumps
-rw----- 1 root  wheel  268369920 Jun 18 17:59 /var/crash/vmcore.0
-rw-rw---- 1 root  field   3371008 Jun 18 17:53 /var/tmp/rpd.core.0
-rw-r--r-- 1 root  wheel  27775914 Jun 18 17:59 /var/crash/kernel.0
```

Related Documentation

- *Saving Core Files from Junos OS Processes*
- [Saving Core Files Generated by Junos OS Processes on page 30](#)

Example: Configuring the Name of the Switch, IP Address, and System ID

The following example shows how to configure the switch name, map the name to an IP address and alias, and configure a system identifier:

```
[edit]
user@switch# set system host-nameswitch-sj1
[edit]
user@switch# set system static-host-mapping switch-sj1 inet 192.168.1.77
[edit]
user@switch# set system static-host-mapping switch-sj1 alias sj1
[edit]
user@switch# set system static-host-mapping switch-sj1 sysid 1921.6800.1077
[edit]
user@switch# show
system {
  host-name switch-sj1;
  static-host-mapping {
    switch-sj1 {
      inet 192.168.1.77;
      alias sj1;
      sysid 1921.6800.1077;
    }
  }
}
```

Related Documentation

- *Getting Started Guide for Routing Devices*

PART 3

Command Line Interface (CLI)

- [Understanding the CLI on page 39](#)

CHAPTER 3

Understanding the CLI

- [CLI User Interface Overview on page 39](#)
- [Configuring Login Tips on page 42](#)
- [Format for Specifying Filenames and URLs in Junos OS CLI Commands on page 42](#)
- [Getting Started with Enhanced Layer 2 Software on page 43](#)
- [Junos OS Operational Mode Commands That Combine Other Commands on page 57](#)
- [Overview of Junos OS CLI Operational Mode Commands on page 58](#)
- [Overview of Navigating the CLI on page 60](#)
- [Understanding the Brief, Detail, Extensive, and Terse Options of Junos OS Operational Commands on page 62](#)
- [Understanding Junos OS CLI Configuration Mode on page 63](#)

CLI User Interface Overview

- [CLI Overview on page 39](#)
- [CLI Key Features on page 40](#)
- [CLI Command Modes on page 40](#)

CLI Overview

The command-line interface (CLI) is the software interface you use to access, monitor, configure, troubleshoot, and manage a device running Junos OS. You can access the CLI either from the console or through a network connection. The CLI is a Juniper Networks-specific command shell that runs on top of a FreeBSD UNIX-based operating system kernel.

The CLI provides a variety of UNIX utilities, such as Emacs-style keyboard sequences, which allows you to perform the following actions:

- Move around on a command line and scroll through recently executed commands.
- Match regular expressions to locate and replace values and identifiers in a configuration.
- Filter command output.
- Log file entries.
- Store and archive device files on a UNIX-based file system.

You can exit the CLI environment and create a UNIX C shell or Bourne shell to navigate the file system, manage processes, and perform other tasks.

CLI Key Features

The CLI commands and statements follow a hierarchical organization and have consistent syntax. The CLI provides the following features for ease of use:

- Consistent command names—Commands that provide the same type of function have the same name, regardless of the portion of the software on which they are operating. For example, all **show** commands display software information and statistics, and all **clear** commands erase various types of system information.
- Lists and short descriptions of available commands—Information about available commands is provided at each level of the CLI command hierarchy. If you type a question mark (?) at any level, you see a list of the available commands along with a short description of each command. This means that if you already are familiar with the Junos OS, you can use many of the CLI commands without referring to the documentation.
- Command completion—Command completion for command names (keywords) and for command options is available at each level of the hierarchy. To complete a command or option that you have partially typed, press Tab or the Spacebar. If the partially typed letters begin a string that uniquely identifies a command, the complete command name appears. Otherwise, a beep indicates that you have entered an ambiguous command, and the possible completions are displayed. Completion also applies to other strings, such as filenames, interface names, usernames, and configuration statements.

CLI Command Modes

The CLI has two modes, operational mode and configuration mode.

- Operational mode—This mode displays the current status of the device. In operational mode, you enter commands to monitor and troubleshoot Junos OS and devices and network connectivity. Operational mode is indicated by the > prompt—for example, **user@switch> clear**
- Configuration mode—A Junos OS device configuration is stored as a hierarchy of statements. In configuration mode, you can define all properties of the Juniper Networks Junos OS, including interfaces, VLANs, Virtual Chassis information, user access, and several system hardware properties. To enter configuration mode, enter the **configure** command. Configuration mode is indicated by the # prompt and includes the current location in the configuration hierarchy—for example:

```
[edit interfaces ge-0/0/12]  
user@switch#
```

In configuration mode, you are actually viewing and changing the candidate configuration file. The candidate configuration allows you to make configuration changes without causing operational changes to the current operating configuration, called the active configuration. When you commit the changes you added to the candidate configuration,

the system updates the active configuration. Candidate configurations enable you to alter your configuration without causing potential damage to your current network operations.

To activate your configuration changes, enter the **commit** command.

When you commit the candidate configuration, you can require an explicit confirmation for the commit to become permanent by using the **commit confirmed** command. This is useful for verifying that a configuration change works correctly and does not prevent management access to the switch. After you issue the **commit confirmed** command, you must issue another **commit** command within the defined period of time (10 minutes by default), or the system reverts to the previous configuration.

You can also activate your configuration changes and exit configuration mode with a single command, **commit and-quit**. This command succeeds only if there are no mistakes or syntax errors in the configuration.

To return to operational mode, go to the top of the configuration hierarchy and then quit—for example:

```
[edit interfaces ge-0/0/12]
user@switch# top
[edit]
user@switch# exit
```

When you monitor and configure a device running Junos OS, you may need to switch between operational mode and configuration mode. When you change to configuration mode, the command prompt also changes. The operational mode prompt is a right angle bracket (>) and the configuration mode prompt is a pound sign (#).

When you log in to the switch and type the **cli** command, you are automatically in operational mode. To switch to configuration mode, type the **configure** command or the **edit** command.

The CLI prompt changes from **user@switch>** to **user@switch#**, and a banner appears to indicate the hierarchy level.

To return to operational mode as well as commit your changes, enter **command and-quit**. To return to operational mode without committing any of your changes, enter **exit**.

To display the output of an operational mode command, such as **show**, while in configuration mode, issue the **run** configuration mode command and then specify the operational mode command.

Related Documentation

- [Configuring Login Tips on page 42](#)
- [Overview of Navigating the CLI on page 60](#)
- *CLI User Guide*
- *Other Tools to Configure and Monitor Devices Running Junos OS*

Configuring Login Tips

The Junos OS CLI provides the option of configuring login tips for the user. By default, the **tip** command is not enabled when a user logs in.

- To enable tips, include the **login-tip** statement at the **[edit system login class *class-name*]** hierarchy level:

```
[edit system login class class-name]  
login-tip;
```

Adding this statement enables the **tip** command for the class specified, provided the user logs in using the CLI.

Related Documentation

- [CLI User Interface Overview on page 39](#)
- [Defining Junos OS Login Classes](#)
- [login-tip on page 307](#)

Format for Specifying Filenames and URLs in Junos OS CLI Commands

In some CLI commands and configuration statements—including **file copy**, **file archive**, **load**, **save**, **set system login user *username* authentication load-key-file**, and **request system software add**—you can include a filename. On a routing matrix, you can include chassis information (for example, **lcc0**, **lcc0-re0**, or **lcc0-re1**) as part of the filename.

A *routing matrix* is a multichassis architecture composed of either one TX Matrix router and from one to four T640 routers connected to the TX Matrix router, or one TX Matrix Plus router and from one to four T1600 routers connected to the TX Matrix Plus router. From the perspective of the user interface, the routing matrix appears as a single router. On a routing matrix composed of the TX Matrix router and T640 routers, the TX Matrix router controls all the T640 routers. On a routing matrix composed of a TX Matrix Plus router and T1600 routers, the TX Matrix Plus router controls all the T1600 routers.

You can specify a filename or URL in one of the following ways:

- **filename**—File in the user's current directory on the local CompactFlash card (not applicable on the QFX Series). You can use wildcards to specify multiple source files or a single destination file. Wildcards are not supported in HTTP or FTP.



NOTE: Wildcards are supported only by the **file (compare | copy | delete | list | rename | show)** commands. When you issue the **file show** command with a wildcard, it must resolve to one filename.

- **path/filename**—File on the local flash disk.
- **/var/filename** or **/var/path/filename**—File on the local hard disk. You can also specify a file on a local Routing Engine for a specific T640 router or a T1600 router in a routing matrix:


```
user@host> file delete lcc0-re0:/var/tmp/junk
```

- **a:filename** or **a:path/filename**—File on the local removable media. The default path is / (the root-level directory). The removable media can be in MS-DOS or UNIX (UFS) format.
- **hostname:/path/filename**, **hostname:filename**, **hostname:path/filename**, or **"scp://hostname/path/filename"**—File on an scp/ssh client. This form is not available in the worldwide version of Junos OS. The default path is the user's home directory on the remote system. You can also specify **hostname** as **username@hostname**.
- **ftp://hostname/path/filename**—File on an FTP server. You can also specify **hostname** as **username@hostname** or **username:password@hostname**. The default path is the user's home directory. To specify an absolute path, the path must start with %2F; for example, **ftp://hostname/%2Fpath/filename**. To have the system prompt you for the password, specify **prompt** in place of the password. If a password is required and you do not specify the password or **prompt**, an error message is displayed:

```
user@host> file copy ftp://username@ftp.hostname.net/filename
file copy ftp.hostname.net: Not logged in.
```

```
user@host> file copy ftp://username:prompt@ftp.hostname.net/filename
Password for username@ftp.hostname.net:
```

- **re0:/path/filename** or **re1:/path/filename**—File on a local Routing Engine. You can also specify a file on a local Routing Engine for a specific T640 router or a T1600 router in a routing matrix:

```
user@host> show log lcc0-re1:chassisd
```



NOTE: You cannot specify a URL for a file on an HTTP server, because HTTP URLs are not writable.

Related Documentation

- *Format for Specifying IP Addresses, Network Masks, and Prefixes in Junos OS Configuration Statements*
- *Default Directories for Junos OS File Storage on the Router or Switch*

Getting Started with Enhanced Layer 2 Software

- [Understanding Enhanced Layer 2 Software Support on page 44](#)
- [Using the ELS Translator Tool on page 44](#)
- [Configuring a VLAN on page 45](#)
- [Configuring the Native VLAN Identifier on page 46](#)
- [Configuring Layer 2 Interfaces on page 46](#)
- [Configuring Layer 3 Interfaces on page 47](#)
- [Configuring an IRB Interface on page 47](#)

- [Configuring an Aggregated Ethernet Interface and Configuring LACP on That Interface on page 48](#)
- [Enhanced Layer 2 CLI Configuration Statement and Command Changes on page 49](#)

Understanding Enhanced Layer 2 Software Support

Enhanced Layer 2 software (ELS) is automatically supported if your device is running a Junos OS release that supports it. You do not need to take any action to enable ELS, and you cannot disable ELS.

ELS is available on the following EX Series switches and QFX Series devices.

Table 3: ELS Support

Device	Initial ELS Release
EX4300 switches	13.2X50-D10
EX4600 switches	13.2X51-D25
EX9200 switches	12.3R2
QFX3500 switches	13.2X50-D15
QFX3600 switches	13.2X50-D15
QFX5100 switches	13.2X51-D10

ELS is supported on the EX4300, EX4600, and EX9200 switches for all Junos OS releases, starting with the initial releases shown in [Table 3 on page 44](#).

ELS support was introduced on QFX3500 and QFX3600 switches in Junos OS Release 13.2X50-D15. ELS is only supported on the software package that supports Virtual Chassis (the `jinstall-qfx-3-*` software package) for QFX3500 and QFX3600 switches.

For QFX5100 switches, ELS support was introduced in Junos OS Release 13.2X51-D10 and is supported on the `jinstall-qfx-5-*` software package.



NOTE: ELS is not supported on software packages that can be installed in a QFabric system.

Using the ELS Translator Tool

The ELS Translator is a web-based tool that converts Junos OS Layer 2 configurations to Enhanced Layer 2 Software (ELS) configurations. This conversion tool supports all Juniper Networks EX Series, MX Series, and QFX Series platforms with ELS installed. The ELS Translator is hosted on Juniper Networks Customer Support website for EX Series switches, MX Series Universal Edge routers, and QFX Series switches and is available to registered users, internal users, partners, and premium service contract customers. You

need to login using your Juniper Networks user name and password to access the ELS Translator tool.

[Click](#) to access the ELS translator tool.

If you are upgrading from a version of Junos OS that does not support ELS to a version of Junos OS that supports ELS, we recommend updating your configuration with the ELS Translator Tool using the following procedure:

1. Log onto your device using the console port.



NOTE: Only perform this procedure from the console port. You will lose connectivity to your device if you perform this procedure from a management port or any other interface.

2. Copy your entire existing configuration into another file. Save the file to a remote location. See *Saving a Configuration to a File*.
3. Retain the portion of your existing configuration related to management network connectivity (such as **[edit system]**). Delete all other top-level configuration hierarchy levels (such as **[edit interfaces]**, **[edit protocols]**, and **[edit vlans]**). Issue a **commit** operation to remove the deleted configuration hierarchy levels.
4. Perform the software upgrade. Reboot your device to complete the upgrade. See [“Software Installation Overview” on page 206](#)



NOTE: Maintain your console port connection during the reboot.

5. [Click](#) to access the ELS translator tool in a web browser. Follow the instructions on the page to update your configuration.
6. Return to your console port connection. When the switch has rebooted to complete the software upgrade, copy the configuration from the ELS Translator Tool onto your switch. See *Uploading a Configuration File*.
7. Commit the new configuration.



NOTE: It is possible a script might not translate correctly, so review translated scripts carefully before loading the converted configuration on your switch or other device.

Configuring a VLAN

You can configure one or more VLANs to perform Layer 2 bridging. The Layer 2 bridging functions include integrated routing and bridging (IRB) for support for Layer 2 bridging and Layer 3 IP routing on the same interface. EX Series and QFX Series switches can function as Layer 2 switches, each with multiple bridging, or broadcast, domains that

participate in the same Layer 2 network. You can also configure Layer 3 routing support for a VLAN.

To configure a VLAN:

1. Create the VLAN by setting the unique VLAN name and configuring the VLAN ID:

```
[edit]
user@host# set vlans vlan-name vlan-id vlan-id-number
```

2. Assign at least one interface to the VLAN:

```
[edit]
user@host# set interface interface-name family ethernet-switching vlan members vlan-name
```

Configuring the Native VLAN Identifier

EX Series and QFX Series switches support receiving and forwarding routed or bridged Ethernet frames with 802.1Q VLAN tags. Typically, trunk ports, which connect switches to each other, accept untagged control packets but do not accept untagged data packets. You can enable a trunk port to accept untagged data packets by configuring a native VLAN ID on the interface on which you want the untagged data packets to be received.

To configure the native VLAN ID:

1. On the interface on which you want untagged data packets to be received, set the interface mode to trunk, which specifies that the interface is in multiple VLANs and can multiplex traffic between different VLANs.

```
[edit interfaces]
user@host# set interface-name unit logical-unit-number family ethernet-switching
interface-mode trunk
```

2. Configure the native VLAN ID and assign the interface to the native VLAN ID:

```
[edit interfaces]
user@host# set interface-name native-vlan-id number
```

Configuring Layer 2 Interfaces

To ensure that your high-traffic network is tuned for optimal performance, explicitly configure some settings on the switch's network interfaces.

To configure a Gigabit Ethernet interface or 10-Gigabit Ethernet interface for trunk interface mode:

```
[edit]
user@host# set interfaces interface-name unit logical-unit-number family ethernet-switching
interface-mode trunk
```

To configure a Gigabit Ethernet interface or 10-Gigabit Ethernet interface for access interface mode:

```
[edit]
user@host# set interfaces interface-name unit logical-unit-number family ethernet-switching
interface-mode access
```

Configuring Layer 3 Interfaces

To configure a Layer 3 interface, you must assign an IP address to the interface. You assign an address to an interface by specifying the address when configuring the protocol family. For the inet or inet6 family, configure the interface IP address.

You can configure interfaces with a 32-bit IP version 4 (IPv4) address and optionally with a destination prefix, sometimes called a subnet mask. An IPv4 address utilizes a 4-octet dotted decimal address syntax (for example, 192.16.1.1). An IPv4 address with destination prefix utilizes a 4-octet dotted decimal address syntax with a destination prefix appended (for example, 192.16.1.1/30).

To specify an IP address for the logical unit using IPv4:

```
[edit]
user@host# set interfaces interface-name unit logical-unit-number family inet address ip-address
```

You represent IP version 6 (IPv6) addresses in hexadecimal notation using a colon-separated list of 16-bit values. You assign a 128-bit IPv6 address to an interface.

To specify an IP address for the logical unit using IPv6:

```
[edit]
user@host# set interfaces interface-name unit logical-unit-number family inet6 address ip-address
```

Configuring an IRB Interface

Integrated routing and bridging (IRB) provides support for Layer 2 bridging and Layer 3 IP routing on the same interface. IRB enables you to route packets to another routed interface or to another VLAN that has a Layer 3 protocol configured. IRBs allow the device to recognize packets that are being sent to local addresses so that they are bridged (switched) whenever possible and are routed only when necessary. Whenever packets can be switched instead of routed, several layers of processing are eliminated. An interface named irb functions as a logical router on which you can configure a Layer 3 logical interface for VLAN. For redundancy, you can combine an IRB interface with implementations of the Virtual Router Redundancy Protocol (VRRP) in both bridging and virtual private LAN service (VPLS) environments.

To configure an IRB interface:

1. Create a Layer 2 VLAN by assigning it a name and a VLAN ID:

```
[edit]
user@host# set vlans vlan-name vlan-id vlan-id
```

2. Create an IRB logical interface:

```
[edit]
user@host# set interface irb unit logical-unit-number family inet address ip-address
```

3. Associate the IRB interface with the VLAN:

```
[edit]
user@host# set vlans vlan-name l3-interface irb.logical-unit-number
```

Configuring an Aggregated Ethernet Interface and Configuring LACP on That Interface

Use the link aggregation feature to aggregate one or more links to form a virtual link or link aggregation group (LAG). The MAC client can treat this virtual link as if it were a single link to increase bandwidth, provide graceful degradation as failure occurs, and increase availability.

To configure an aggregated Ethernet interface:

1. Specify the number of aggregated Ethernet interfaces to be created:

```
[edit chassis]
user@host# set aggregated-devices ethernet device-count number
```

2. Specify the name of the link aggregation group interface:

```
[edit interfaces]
user@host# set interfaces aex
```

3. Specify the minimum number of links for the aggregated Ethernet interface (*aex*), that is, the defined bundle, to be labeled “up”:

```
[edit interfaces]
user@host# set aex aggregated-ether-options minimum-links number
```

4. Specify the link speed for the aggregated Ethernet bundle:

```
[edit interfaces]
user@host# set aex aggregated-ether-options link-speed link-speed
```

5. Specify the members to be included within the aggregated Ethernet bundle:

```
[edit interfaces]
user@host# set interface-name ether-options 802.3ad aex
user@host# set interface-name ether-options 802.3ad aex
```

6. Specify an interface family for the aggregated Ethernet bundle:

```
[edit interfaces]
user@host# set aex unit 0 family inet address ip-address
```

For aggregated Ethernet interfaces on the device, you can configure the Link Aggregation Control Protocol (LACP). LACP bundles several physical interfaces to form one logical interface. You can configure aggregated Ethernet with or without LACP enabled.

When LACP is enabled, the local and remote sides of the aggregated Ethernet links exchange protocol data units (PDUs), containing information about the state of the link. You can configure Ethernet links to actively transmit PDUs, or you can configure the links to passively transmit them, sending out LACP PDUs only when they receive them from another link. One side of the link must be configured as active for the link to be up.

To configure LACP:

1. Enable one side of the aggregated Ethernet link as active:

```
[edit interfaces]
user@host# set aex aggregated-ether-options lacp active
```

2. Specify the interval at which the interfaces send LACP packets:

```
[edit interfaces]
user@host# set aex aggregated-ether-options lacp periodic interval
```

Enhanced Layer 2 CLI Configuration Statement and Command Changes

The enhanced Layer 2 Command Line Interface (CLI) feature is introduced in Junos OS Release 12.3R2. The enhanced Layer 2 CLI feature changes the CLI for some Layer 2 features on EX Series switches. This enhanced CLI will be used to configure Layer 2 features on future EX Series hardware platforms, and also to configure Layer 2 features on other Juniper Networks products.



NOTE: Starting with Junos OS Release 14.1X53-D10 for EX4300 and EX4600 switches, when enabling xSTP, you can enable it on some or all interfaces included in a VLAN. For example, if you configure VLAN 100 to include interfaces ge-0/0/0, ge-0/0/1, and ge-0/0/2, and you want to enable MSTP on interfaces ge-0/0/0 and ge-0/0/2, you can specify the `set protocols mstp interface ge-0/0/0` and `set protocols mstp interface ge-0/0/2` commands. In this example, you did not explicitly enable MSTP on interface ge-0/0/1; therefore, MSTP is not enabled on this interface.

The following tables provide a list of existing commands that were moved to new hierarchies or changed on EX Series switches as part of this CLI enhancement effort. The table is provided as a high-level reference only. For detailed information about these commands, use the links to the configuration statements provided in the table or see the technical documentation.

Table 4: Enhanced Layer 2 CLI Changes

Original Hierarchy	Changed Hierarchy	Change Description
<pre> ethernet-switching-options { analyzer { name { ... } } } </pre>	<pre> forwarding-options { analyzer { name { ... } } } </pre>	Statements moved to different hierarchy.
<pre> ethernet-switching-options { authentication-whitelist { ... } } </pre>	<pre> switch-options { ... authentication-whitelist { ... } } </pre>	Hierarchy renamed.
<pre> ethernet-switching-options { bpdu-block { ... } } </pre>	<pre> protocols { layer2-control { bpdu-block { ... } } } </pre>	Statement moved to different hierarchy.

Table 4: Enhanced Layer 2 CLI Changes (*continued*)

Original Hierarchy	Changed Hierarchy	Change Description
<pre> ethernet-switching-options { dot1q-tunneling { ether-type (0x8100 0x88a8 0x9100); ... } } </pre>	<pre> interfaces <i>interface-name</i> { ether-options { ethernet-switch-profile { tag-protocol-id [<i>tpids</i>]; } } } interfaces <i>interface-name</i> { aggregated-ether-options { ethernet-switch-profile { tag-protocol-id [<i>tpids</i>]; } } } </pre>	Statement replaced with new statement and moved to different hierarchy.
<pre> ethernet-switching-options { interfaces <i>interface-name</i> { no-mac-learning; ... } } </pre>	<pre> switch-options { interfaces <i>interface-name</i> { no-mac-learning; ... } } </pre>	Hierarchy renamed.
<pre> ethernet-switching-options { mac-notification { notification-interval <i>seconds</i>; ... } } </pre>	—	Statements deleted.
<pre> ethernet-switching-options { mac-table-aging-time <i>seconds</i>; ... } </pre>	<pre> protocols { l2-learning { global-mac-table-aging-time <i>seconds</i>; ... } } </pre>	Statement replaced with new statement and moved to different hierarchy.
<pre> ethernet-switching-options { nonstop-bridging; } </pre>	<pre> protocols { layer2-control { nonstop-bridging { } } } </pre>	Statement moved to different hierarchy.
<pre> ethernet-switching-options { port-error-disable { disable-timeout <i>timeout</i>; ... } } </pre>	<pre> interfaces <i>interface-name</i> family ethernet-switching { recovery-timeout <i>seconds</i>; } } </pre>	Statement replaced with a new statement.

Table 4: Enhanced Layer 2 CLI Changes (*continued*)

Original Hierarchy	Changed Hierarchy	Change Description
<pre> ethernet-switching-options { redundant-trunk-group { group name { description; interface interface-name { primary; } preempt-cutover-timer seconds; ... } } } </pre>	<pre> switch-options { redundant-trunk-group { group name { description; interface interface-name { primary; } preempt-cutover-timer seconds; ... } } } </pre>	Hierarchy renamed.
<pre> ethernet-switching-options { secure-access-port { interface (all interface-name) { (dhcp-trusted no-dhcp-trusted); static-ip ip-address { mac mac-address; vlan vlan-name; } } } vlan (all vlan-name) { (arp-inspection no-arp-inspection); dhcp-option82 { disable; circuit-id { prefix hostname; use-interface-description; use-vlan-id; } remote-id { prefix (hostname mac none); use-interface-description; use-string string; } vendor-id [string]; } (examine-dhcp no-examine-dhcp); } (ip-source-guard no-ip-source-guard); } </pre>	<pre> vlans vlan-name forwarding-options{ dhcp-security { arp-inspection; group group-name { interface interface-name { static-ip ip-address { mac mac-address; } } } overrides { no-option-82; trusted; } } ip-source-guard; no-dhcp-snooping; option-82 { circuit-id { prefix { host-name; routing-instance-name; } use-interface-description (device logical); use-vlan-id; } } remote-id { host-name; use-interface-description (device logical); use-string string; } vendor-id { use-string string; } } </pre>	<p>Statements moved to different hierarchy.</p> <p>NOTE: The statement examine-dhcp does not exist in the changed hierarchy. Instead, DHCP snooping is enabled automatically when other DHCP security features are enabled on a VLAN. See <i>Configuring Port Security (CLI Procedure)</i> for additional information.</p>

Table 4: Enhanced Layer 2 CLI Changes (*continued*)

Original Hierarchy	Changed Hierarchy	Change Description
<pre> ethernet-switching-options { secure-access-port { dhcp-snooping-file { location <i>local_pathname</i> <i>remote_URL</i>; timeout <i>seconds</i>; write-interval <i>seconds</i>; } } } </pre>	<pre> system [processes [dhcp-service dhcp-snooping-file <i>local_pathname</i> <i>remote_URL</i>; write-interval <i>interval</i>; }] } </pre>	Statement moved to different hierarchy.
<pre> ethernet-switching-options { secure-access-port vlan (all <i>vlan-name</i>) { mac-move-limit } } </pre>	<pre> vlangs <i>vlan-name</i> switch-options { mac-move-limit } </pre>	Statement moved to different hierarchy.
<pre> ethernet-switching-options { static { vlan <i>vlan-id</i> { mac <i>mac-address</i> next-hop <i>interface-name</i>; ... } } } </pre>	<pre> vlangs { <i>vlan-name</i> { switch-options { interface <i>interface-name</i> { static-mac <i>mac-address</i>; ... } } } } </pre>	Statement replaced with new statement and moved to different hierarchy.
<pre> ethernet-switching-options { storm-control { (...) } } </pre>	<pre> forwarding-options { storm-control-profiles <i>profile-name</i> { (...) } } interfaces <i>interface-name</i> unit <i>number</i> family ethernet-switching { storm-control <i>storm-control-profile</i>; } } </pre>	Storm control configuration is done in two steps. The first step is to create a storm control profile at the [edit forwarding-options] hierarchy, and the second step is to bind the profile to a logical interface at the [edit interfaces] hierarchy. See <i>Example: Configuring Storm Control to Prevent Network Outages on EX Series Switches</i> for additional information.
<pre> ethernet-switching-options { traceoptions { file <i>filename</i> <files <i>number</i>> <no-stamp> <replace> <size <i>size</i>> <world-readable> no-world-readable>; flag <i>flag</i> <disable>; ... } } </pre>	—	Statements removed.

Table 4: Enhanced Layer 2 CLI Changes (*continued*)

Original Hierarchy	Changed Hierarchy	Change Description
<pre> ethernet-switching-options { unknown-unicast-forwarding { (...) } } </pre>	<pre> switch-options { unknown-unicast-forwarding { (...) } } </pre>	Hierarchy renamed.
<pre> ethernet-switching-options { voip { interface (all [interface-name access-ports]) { forwarding-class (assured-forwarding best-effort expedited-forwarding network-control); vlan vlan-name; ... } } } </pre>	<pre> switch-options { voip { interface (all [interface-name access-ports]) { forwarding-class (assured-forwarding best-effort expedited-forwarding network-control); vlan vlan-name; ... } } } </pre>	Hierarchy renamed.
<pre> interfaces interface-name { ether-options { link-mode mode; speed (auto-negotiation speed) } } </pre>	<pre> interfaces interface-name { link-mode mode; speed speed } </pre>	Statements moved to different hierarchy.
<pre> interfaces interface-name { unit logical-unit-number { family ethernet-switching { native-vlan-id vlan-id } } } </pre>	<pre> interfaces interface-name { native-vlan-id vlan-id } </pre>	Statement moved to different hierarchy.
<pre> interfaces interface-name { unit logical-unit-number { family ethernet-switching { port-mode mode } } } </pre>	<pre> interfaces interface-name { unit logical-unit-number { family ethernet-switching { interface-mode mode } } } </pre>	Statement replaced with a new statement.
<pre> interfaces vlan </pre>	<pre> interfaces irb </pre>	Statement replaced with a new statement.

Table 4: Enhanced Layer 2 CLI Changes (*continued*)

Original Hierarchy	Changed Hierarchy	Change Description
<pre> protocols { igmp-snooping { traceoptions { file filename <files number> <no-stamp> <replace> <size maximum-file-size> <world-readable no-world-readable>; flag flag <flag-modifier> <disable>; } vlan (all vlan-identifier) { disable; data-forwarding { receiver { install; source-vlans vlan-name; } source { groups ip-address; } } immediate-leave; interface (all interface-name) { multicast-router-interface; static { group multicast-ip-address; } } proxy { source-address ip-address; } robust-count number; } } } </pre>	<pre> protocols { igmp-snooping { vlan vlan-name { immediate-leave; interface interface-name { group-limit <1..65535> host-only-interface multicast-router-interface; immediate-leave; static { group multicast-ip-address { source <> } } } } l2-querier { source-address ip-address; } proxy { source-address ip-address; } query-interval number; query-last-member-interval number; query-response-interval number; robust-count number; traceoptions { file filename <files number> <no-stamp> <replace> <size maximum-file-size> <world-readable no-world-readable>; flag flag <flag-modifier>; } } } </pre>	IGMP snooping is configured on a VLAN.
<pre> vlans { vlan-name { dot1q-tunneling { customer-vlans (id native range); layer2-protocol-tunneling all protocol-name { drop-threshold number; shutdown-threshold number; ... } } } } </pre>	<pre> interface interface-name { encapsulation extended-vlan-bridge; flexible-vlan-tagging; native-vlan-id number; unit logical-unit-number { input-vlan-map action; output-vlan-map action; vlan-id number; vlan-id-list [vlan-id vlan-id-vlan-id]; } } </pre>	Statements replaced with new statements and moved to different hierarchy

Table 4: Enhanced Layer 2 CLI Changes (*continued*)

Original Hierarchy	Changed Hierarchy	Change Description
<pre> vlsns { vln-nme { filter{ input filter-nme output filter-nme; ... } } } </pre>	<pre> vlsns { vln-nme { forwarding-options { filter{ input filter-nme output filter-nme; ... } } } } </pre>	Statements moved to different hierarchy.
<pre> vlsns { vln-nme { interface interface-nme { egress; ingress; mapping (native (push swap) policy tag (push swap)); pvlan-trunk; ... } } } </pre>	—	Statements removed. You can assign interfaces to a VLAN using the [edit interfaces <i>interface-nme</i> unit <i>logical-unit-number</i> family ethernet-switching vln members <i>vln-nme</i>] hierarchy.
<pre> vlsns { vln-nme { isolation-id id-number; ... } } </pre>	—	Statement removed.
<pre> vlsns { vln-nme { l3-interface vln.logical-interface-number; ... } } </pre>	<pre> vlsns { vln-nme { l3-interface irb.logical-interface-number; ... } } </pre>	Syntax changed.
<pre> vlsns { vln-nme { l3-interface-ingress-counting layer-3-interface-nme; ... } } </pre>	—	Statement removed. Ingress traffic is automatically tracked.

Table 4: Enhanced Layer 2 CLI Changes (*continued*)

Original Hierarchy	Changed Hierarchy	Change Description
<pre> vlangs { vlan-name { mac-limit limit action action; ... } } </pre>	<pre> vlangs { vlan-name { switch-options { interface-mac-limit limit { packet-action action; ... } } } } vlangs { vlan-name { switch-options { interface interface-name { interface-mac-limit limit { packet-action action; ... } } } } } </pre>	Statements moved to different hierarchies and renamed.
<pre> vlangs { vlan-name { mac-table-aging-time seconds; ... } } </pre>	<pre> protocols { l2-learning { global-mac-table-aging-time seconds; ... } } </pre>	Statement moved to different hierarchy and renamed.
<pre> vlangs { vlan-name { no-local-switching; ... } } </pre>	—	Statement removed.
<pre> vlangs { vlan-name { no-mac-learning; ... } } </pre>	<pre> vlangs { vlan-name { switch-options { no-mac-learning limit ... } } } </pre>	Statement moved to different hierarchy.
<pre> vlangs { vlan-name { primary-vlan vlan-name; ... } } </pre>	—	Statement removed.


Table 4: Enhanced Layer 2 CLI Changes (*continued*)

Original Hierarchy	Changed Hierarchy	Change Description
<pre>vlan { vlan-name { vlan-prune; ... } }</pre>	—	Statement removed.
<pre>vlan { vlan-name { vlan-range vlan-id-low-vlan-id-high; ... } }</pre>	<pre>vlan { vlan-name { vlan-id-list [vlan-id-numbers]; ... } }</pre>	Statement replaced with new statement.

Junos OS Operational Mode Commands That Combine Other Commands

In some cases, some Junos OS operational commands are created from a combination of other operational commands. These commands can be useful shortcuts for collecting information about the device, as shown in [Figure 1 on page 57](#).

Figure 1: Commands That Combine Other Commands

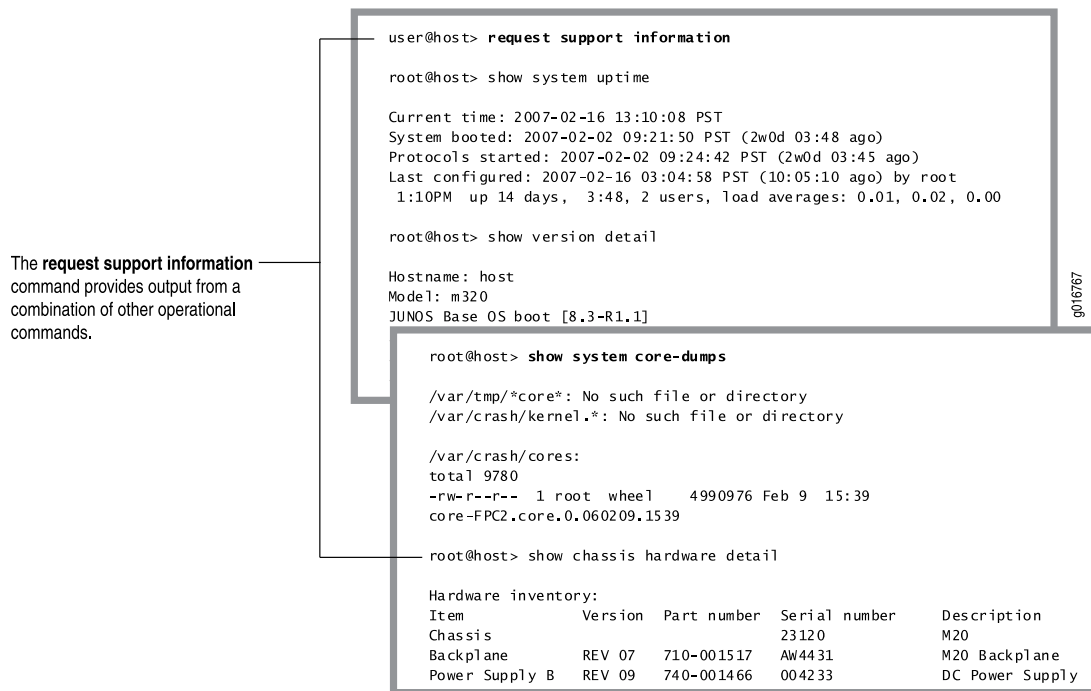

Related Documentation

- [Overview of Junos OS CLI Operational Mode Commands on page 58](#)
- [Understanding the Brief, Detail, Extensive, and Terse Options of Junos OS Operational Commands on page 62](#)

Overview of Junos OS CLI Operational Mode Commands

This topic provides an overview of Junos OS CLI operational mode commands and contains the following sections:

- [CLI Command Categories on page 58](#)
- [Commonly Used Operational Mode Commands on page 59](#)

CLI Command Categories

When you log in to a device running Junos OS and the CLI starts, there are several broad groups of CLI commands:

- Commands for controlling the CLI environment—Some set commands in the **set** hierarchy configure the CLI display screen. For information about these commands, see *Understanding the Junos OS CLI Modes, Commands, and Statement Hierarchies*.
- Commands for monitoring and troubleshooting—The following commands display information and statistics about the software and test network connectivity. Detailed command descriptions are provided in the *Junos OS Interfaces Command Reference*.
 - **clear**—Clear statistics and protocol database information.
 - **mtrace**—Trace mtrace packets from source to receiver.
 - **monitor**—Perform real-time debugging of various software components, including the routing protocols and interfaces.
 - **ping**—Determine the reachability of a remote network host.
 - **show**—Display the current configuration and information about interfaces, routing protocols, routing tables, routing policy filters, system alarms, and the chassis.
 - **test**—Test the configuration and application of policy filters and autonomous system (AS) path regular expressions.
 - **traceroute**—Trace the route to a remote network host.
- Commands for connecting to other network systems—The **ssh** command opens Secure Shell connections, and the **telnet** command opens telnet sessions to other hosts on the network. For information about these commands, see the [CLI Explorer](#).
- Commands for copying files—The **copy** command copies files from one location on the router or switch to another, from the router or switch to a remote system, or from a remote system to the router or switch. For information about these commands, see the [CLI Explorer](#).
- Commands for restarting software processes—The commands in the **restart** hierarchy restart the various Junos OS processes, including the routing protocol, interface, and SNMP. For information about these commands, see the [CLI Explorer](#).
- A command—**request**—for performing system-level operations, including stopping and rebooting the router or switch and loading Junos OS images. For information about this command, see the [CLI Explorer](#).

- A command—**start**—to exit the CLI and start a UNIX shell. For information about this command, see the [CLI Explorer](#).
- A command—**configure**—for entering configuration mode, which provides a series of commands that configure Junos OS, including the routing protocols, interfaces, network management, and user access. For information about the CLI configuration commands, see “[Understanding Junos OS CLI Configuration Mode](#)” on page 63.
- A command—**quit**—to exit the CLI. For information about this command, see the [CLI Explorer](#).
- For more information about the CLI operational mode commands, see the [CLI Explorer](#).

Commonly Used Operational Mode Commands

Table 5 on page 59 lists some operational commands you may find useful for monitoring router or switch operation. For a complete description of operational commands, see the Junos OS command references.



NOTE: The QFX3500 switch does not support the IS-IS, OSPF, BGP, MPLS, and RSVP protocols.

Table 5: Commonly Used Operational Mode Commands

Items to Check	Description	Command
Software version	Versions of software running on the router or switch	show version
Log files	Contents of the log files	monitor
	Log files and their contents and recent user logins	show log
Remote systems	Host reachability and network connectivity	ping
	Route to a network system	traceroute
Configuration	Current system configuration	show configuration
Manipulate files	List of files and directories on the router or switch	file list
	Contents of a file	file show
Interface information	Detailed information about interfaces	show interfaces

Table 5: Commonly Used Operational Mode Commands (*continued*)

Items to Check	Description	Command
Chassis	Chassis alarm status	show chassis alarms
	Information currently on craft display	show chassis craft-interface
	Router or switch environment information	show chassis environment
	Hardware inventory	show chassis hardware
Routing table information	Information about entries in the routing tables	show route
Forwarding table information	Information about data in the kernel's forwarding table	show route forwarding-table
IS-IS	Adjacent routers or switches	show isis adjacency
OSPF	Display standard information about OSPF neighbors	show ospf neighbor
BGP	Display information about BGP neighbors	show bgp neighbor
MPLS	Status of interfaces on which MPLS is running	show mpls interface
	Configured LSPs on the router or switch, as well as all ingress, transit, and egress LSPs	show mpls lsp
	Routes that form a label-switched path	show route label-switched-path
RSVP	Status of interfaces on which RSVP is running	show rsvp interface
	Currently active RSVP sessions	show rsvp session
	RSVP packet and error counters	show rsvp statistics

Related Documentation

- [Junos OS Operational Mode Commands That Combine Other Commands on page 57](#)
- [Understanding the Brief, Detail, Extensive, and Terse Options of Junos OS Operational Commands on page 62](#)

Overview of Navigating the CLI


This topic describes how to navigate the CLI.

- [CLI Command Hierarchy on page 61](#)
- [CLI Configuration Statements on page 61](#)
- [Moving Among Hierarchy Levels on page 61](#)

CLI Command Hierarchy

CLI commands are organized in a hierarchy. Commands that perform a similar function are grouped together under the same level of the hierarchy. For example, all commands that display information about the system and the system software are grouped under the **show system** command, and all commands that display information about the routing table are grouped under the **show route** command. [Figure 2 on page 61](#) illustrates a portion of the **show** command hierarchy.

Figure 2: CLI Command Hierarchy

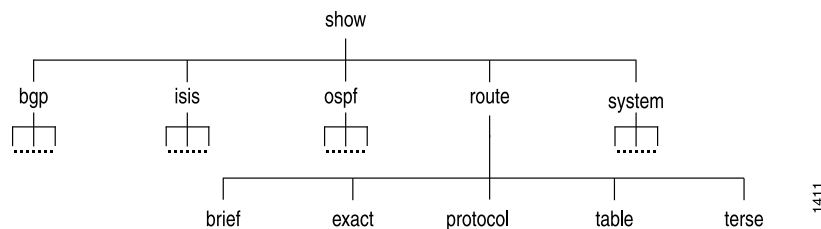

To execute a command, you enter the full command name, starting at the top level of the hierarchy. For example, to display a brief view of your Ethernet switching options for your interfaces, use the command **show ethernet-switching-options interfaces**.

CLI Configuration Statements

The configuration statement hierarchy has two types of statements: *container statements*, which are statements that contain other statements, and *leaf statements*, which do not contain other statements. All of the container and leaf statements together form the *configuration hierarchy*.

The **protocols** statement is a top-level statement at the trunk of the configuration tree. The **ospf**, **area**, and **interface** statements are all subordinate container statements of a higher statement (they are branches of the hierarchy tree), and the **hello-interval** statement is a leaf on the tree.

Moving Among Hierarchy Levels

You can use the CLI commands to navigate the levels of the configuration statement hierarchy:

- **edit**— Moves to an existing configuration statement hierarchy or creates a hierarchy and moves to that level.
- **exit**— Moves up the hierarchy to the previous level where you were working. This command is, in effect, the opposite of the **edit** command. Alternatively, you can use the **quit** command. The **exit** and **quit** commands are interchangeable.
- **up**— Moves up the hierarchy one level at a time.
- **top**— Moves directly to the top level of the hierarchy.

Related Documentation

- [CLI User Interface Overview on page 39](#)
- [CLI User Guide](#)

Understanding the Brief, Detail, Extensive, and Terse Options of Junos OS Operational Commands


The Junos OS operational mode commands can include **brief**, **detail**, **extensive**, or **terse** options. You can use these options to control the amount of information you want to view.

1. Use the ? prompt to list options available for the command. For example:

```
user@host> show interfaces fe-1/1/1 ?
Possible completions:
<[Enter]>      Execute this command
brief          Display brief output
descriptions   Display interface description strings
detail         Display detailed output
extensive      Display extensive output
media          Display media information
snmp-index     SNMP index of interface
statistics     Display statistics and detailed output
terse         Display terse output
|             Pipe through a command
```

2. Choose the option you wish to use with the command. (See [Figure 3 on page 62.](#))

Figure 3: Command Output Options

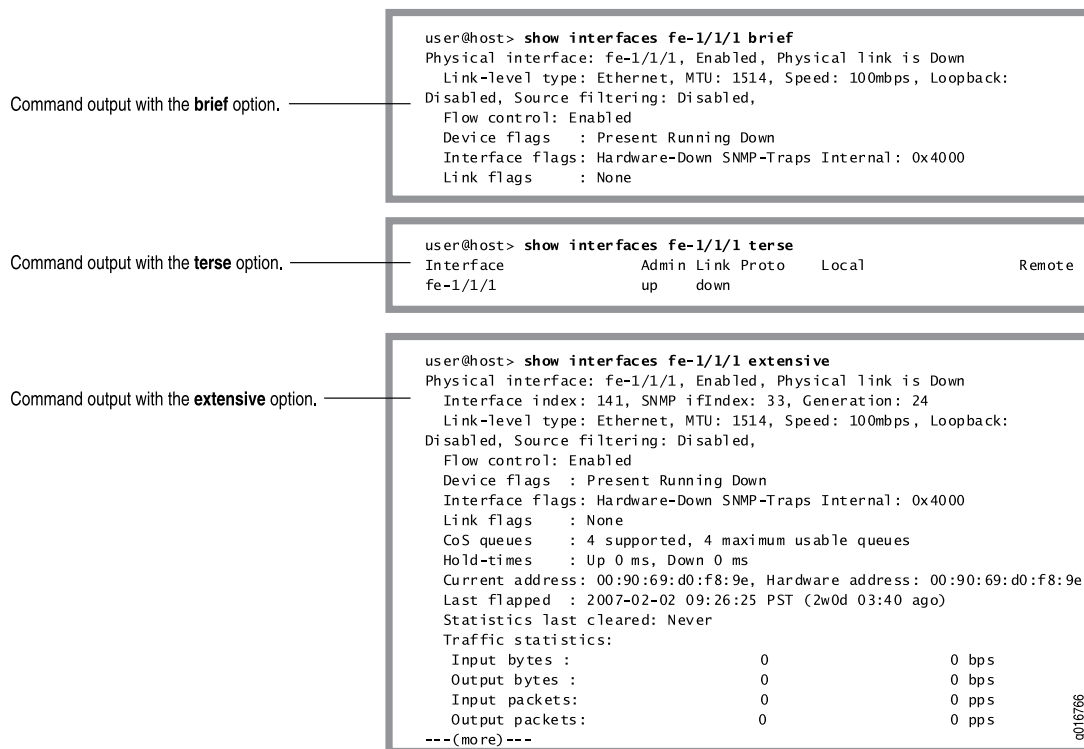

- Related Documentation**
- [Overview of Junos OS CLI Operational Mode Commands on page 58](#)
 - [Controlling the Scope of an Operational Mode Command](#)

Understanding Junos OS CLI Configuration Mode

You can configure all properties of Junos OS, including interfaces, general routing information, routing protocols, and user access, as well as several system hardware properties.

As described in *Understanding the Junos OS CLI Modes, Commands, and Statement Hierarchies*, a router configuration is stored as a hierarchy of statements. In configuration mode, you create the specific hierarchy of configuration statements that you want to use. When you have finished entering the configuration statements, you commit them, which activates the configuration on the router.

You can create the hierarchy interactively or you can create an ASCII text file that is loaded onto the router or switch and then committed.

This topic covers:

- [Configuration Mode Commands on page 64](#)
- [Configuration Statements and Identifiers on page 65](#)
- [Configuration Statement Hierarchy on page 67](#)

Configuration Mode Commands

Table 6 on page 64 summarizes each CLI configuration mode command. The commands are organized alphabetically.

Table 6: Summary of Configuration Mode Commands

Command	Description
activate	Remove the inactive: tag from a statement, effectively reading the statement or identifier to the configuration. Statements or identifiers that have been activated take effect when you next issue the commit command.
annotate	Add comments to a configuration. You can add comments only at the current hierarchy level.
commit	Commit the set of changes to the database and cause the changes to take operational effect.
copy	Make a copy of an existing statement in the configuration.
deactivate	Add the inactive: tag to a statement, effectively commenting out the statement or identifier from the configuration. Statements or identifiers marked as inactive do not take effect when you issue the commit command.
delete	Delete a statement or identifier. All subordinate statements and identifiers contained within the specified statement path are deleted with it.
edit	Move inside the specified statement hierarchy. If the statement does not exist, it is created.
exit	Exit the current level of the statement hierarchy, returning to the level prior to the last edit command, or exit from configuration mode. The quit and exit commands are synonyms.
extension	Manage configurations that are contributed by SDK application packages. Either display or delete user-defined configuration contributed by the named SDK application package. A configuration defined in any native Junos OS package is never deleted by the extension command.
help	Display help about available configuration statements.
insert	Insert an identifier into an existing hierarchy.
load	Load a configuration from an ASCII configuration file or from terminal input. Your current location in the configuration hierarchy is ignored when the load operation occurs.

Table 6: Summary of Configuration Mode Commands (*continued*)

Command	Description
quit	Exit the current level of the statement hierarchy, returning to the level prior to the last edit command, or exit from configuration mode. The quit and exit commands are synonyms.
rename	Rename an existing configuration statement or identifier.
replace	Replace identifiers or values in a configuration.
rollback	Return to a previously committed configuration. The software saves the last 10 committed configurations, including the rollback number, date, time, and name of the user who issued the commit configuration command.
run	Run a top-level CLI command without exiting from configuration mode.
save	Save the configuration to an ASCII file. The contents of the current level of the statement hierarchy (and below) are saved, along with the statement hierarchy containing it. This allows a section of the configuration to be saved, while fully specifying the statement hierarchy.
set	Create a statement hierarchy and set identifier values. This is similar to edit except that your current level in the hierarchy does not change.
show	Display the current configuration.
status	Display the users currently editing the configuration.
top	Return to the top level of configuration command mode, which is indicated by the [edit] banner.
up	Move up one level in the statement hierarchy.
update	Update a private database.
wildcard	Delete a statement or identifier. All subordinate statements and identifiers contained within the specified statement path are deleted with it. You can use regular expressions to specify a pattern. Based on this pattern, you search for items that contain these patterns and delete them.

Configuration Statements and Identifiers

You can configure router or switch properties by including the corresponding statements in the configuration. Typically, a statement consists of a keyword, which is fixed text, and, optionally, an identifier. An identifier is an identifying name that you can define, such as

the name of an interface or a username, which enables you and the CLI to differentiate among a collection of statements.

Table 7 on page 66 describes top-level CLI configuration mode statements.

Table 7: Configuration Mode Top-Level Statements

Statement	Description
access	Configure the Challenge Handshake Authentication Protocol (CHAP). For information about the statements in this hierarchy, see the <i>Junos OS Administration Library for Routing Devices</i> .
accounting-options	Configure accounting statistics data collection for interfaces and firewall filters. For information about the statements in this hierarchy, see the <i>Network Management Administration Guide for Routing Devices</i> .
chassis	Configure properties of the router chassis, including conditions that activate alarms and SONET/SDH framing and concatenation properties. For information about the statements in this hierarchy, see the <i>Junos OS Administration Library for Routing Devices</i> .
class-of-service	Configure class-of-service parameters. For information about the statements in this hierarchy, see the <i>Class of Service Feature Guide for Routing Devices</i> .
firewall	Define filters that select packets based on their contents. For information about the statements in this hierarchy, see the <i>Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices</i> .
forwarding-options	Define forwarding options, including traffic sampling options. For information about the statements in this hierarchy, see the <i>Junos OS Network Interfaces Library for Routing Devices</i> .
groups	Configure configuration groups. For information about statements in this hierarchy, see the <i>Junos OS Administration Library for Routing Devices</i> .
interfaces	Configure interface information, such as encapsulation, interfaces, virtual channel identifiers (VCIs), and data-link connection identifiers (DLCIs). For information about the statements in this hierarchy, see the <i>Junos OS Network Interfaces Library for Routing Devices</i> .
policy-options	Define routing policies, which allow you to filter and set properties in incoming and outgoing routes. For information about the statements in this hierarchy, see the <i>Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices</i> .
protocols	Configure routing protocols, including BGP, IS-IS, LDP, MPLS, OSPF, RIP, and RSVP. For information about the statements in this hierarchy, see the chapters that discuss how to configure the individual routing protocols in the <i>Junos OS Routing Protocols Library for Routing Devices</i> and the <i>Junos OS MPLS Applications Library for Routing Devices</i> .
routing-instances	Configure multiple routing instances. For information about the statements in this hierarchy, see the <i>Junos OS Routing Protocols Library for Routing Devices</i> .

Table 7: Configuration Mode Top-Level Statements (*continued*)


Statement	Description
routing-options	Configure protocol-independent routing options, such as static routes, autonomous system numbers, confederation members, and global tracing (debugging) operations to log. For information about the statements in this hierarchy, see the <i>Junos OS Routing Protocols Library for Routing Devices</i> .
security	Configure IP Security (IPsec) services. For information about the statements in this hierarchy see the <i>Junos OS Administration Library for Routing Devices</i> .
snmp	Configure SNMP community strings, interfaces, traps, and notifications. For information about the statements in this hierarchy, see the <i>Network Management Administration Guide for Routing Devices</i> .
system	Configure systemwide properties, including the hostname, domain name, Domain Name System (DNS) server, user logins and permissions, mappings between hostnames and addresses, and software processes. For information about the statements in this hierarchy, see the <i>Junos OS Administration Library for Routing Devices</i> .

For specific information on configuration statements, see the Junos OS configuration guides.

Configuration Statement Hierarchy

The Junos OS configuration consists of a hierarchy of *statements*. There are two types of statements: *container statements*, which are statements that contain other statements, and *leaf statements*, which do not contain other statements (see [Figure 4 on page 67](#)). All of the container and leaf statements together form the *configuration hierarchy*.

Figure 4: Configuration Mode Hierarchy of Statements

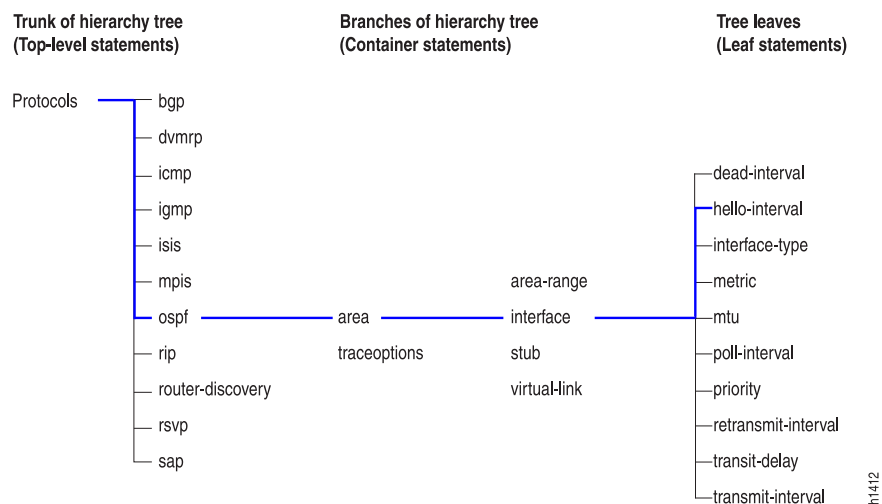

Each statement at the top level of the configuration hierarchy resides at the trunk (or root level) of a hierarchy tree. The top-level statements are container statements, containing other statements that form the tree branches. The leaf statements are the

leaves of the hierarchy tree. An individual hierarchy of statements, which starts at the trunk of the hierarchy tree, is called a *statement path*. [Figure 4 on page 67](#) illustrates the hierarchy tree, showing a statement path for the portion of the protocol configuration hierarchy that configures the hello interval on an interface in an OSPF area.

The **protocols** statement is a top-level statement at the trunk of the configuration tree. The **ospf**, **area**, and **interface** statements are all subordinate container statements of a higher statement (they are branches of the hierarchy tree); and the **hello-interval** statement is a leaf on the tree which in this case contains a data value: the length of the hello interval, in seconds.

The CLI represents the statement path shown in [Figure 4 on page 67](#) as **[edit protocols ospf area *area-number* interface *interface-name*]** and displays the configuration as follows:

```
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/0 {
        hello-interval 5;
      }
      interface so-0/0/1 {
        hello-interval 5;
      }
    }
  }
}
```

The CLI indents each level in the hierarchy to indicate each statement's relative position in the hierarchy and generally sets off each level with braces, using an open brace at the beginning of each hierarchy level and a closing brace at the end. If the statement at a hierarchy level is empty, the braces are not printed.

Each leaf statement ends with a semicolon. If the hierarchy does not extend as far as a leaf statement, the last statement in the hierarchy ends with a semicolon.

The configuration hierarchy can also contain "oneliners" at the last level in the hierarchy. Oneliners remove one level of braces in the syntax and display the container statement, its identifiers, the child or leaf statement and its attributes all on one line. For example, in the following sample configuration hierarchy, the line **level 1 metric 10** is a oneliner because the **level** container statement with identifier **1**, its child statement **metric**, and its corresponding attribute **10** all appear on a single line in the hierarchy:

```
[edit protocols]
isis {
  interface ge-0/0/0.0 {
    level 1 metric 10;
  }
}
```

Likewise, in the following example, **dynamic-profile *dynamic-profile-name* aggregate-clients;** is a oneliner because the **dynamic-profile** statement, its identifier ***dynamic-profile-name***,

and leaf statement **aggregate-clients** all appear on one line when you run the **show** command in the configuration mode:

```
[edit forwarding-options]
user@host# show
dhcp-relay {
  dynamic-profile dynamic-profile-name aggregate-clients;
}
```

Related Documentation

- *Entering and Exiting the Junos OS CLI Configuration Mode*

PART 4

Dynamic Host Control Protocol (DHCP)

- [Understanding DHCP on page 73](#)

CHAPTER 4

Understanding DHCP

- [Understanding DHCP Services for Switches on page 73](#)
- [Configuring a DHCP Client \(CLI Procedure\) on page 77](#)
- [Configuring a DHCP Server on Switches \(CLI Procedure\) on page 78](#)

Understanding DHCP Services for Switches

A Dynamic Host Configuration Protocol (DHCP) server on a switch can provide many valuable TCP/IP network services. For example, DHCP can dynamically allocate the four required IP parameters to each computer on the LAN: IP address, network mask, switch address, and name server address. Additionally, DHCP on the switch can automatically upgrade software on client systems.


This topic describes:

- [DHCP Client/Server Model on page 73](#)
- [Using DHCP on page 74](#)
- [DHCP Relay Servers and DHCP Servers on page 74](#)
- [Legacy DHCP and Extended DHCP for Server Versions on page 75](#)
- [Configuring DHCP on a Switch on page 76](#)
- [How DHCP Works on page 76](#)

DHCP Client/Server Model

DHCP IP address allocation works on a client/server model in which the server, in this case a switch, assigns the client reusable IP information from an address pool. A DHCP client might receive offer messages from multiple DHCP servers and can accept any one of the offers; however, the client usually accepts the first offer it receives. See [Figure 5 on page 74](#).

Figure 5: DHCP Client/Server Model

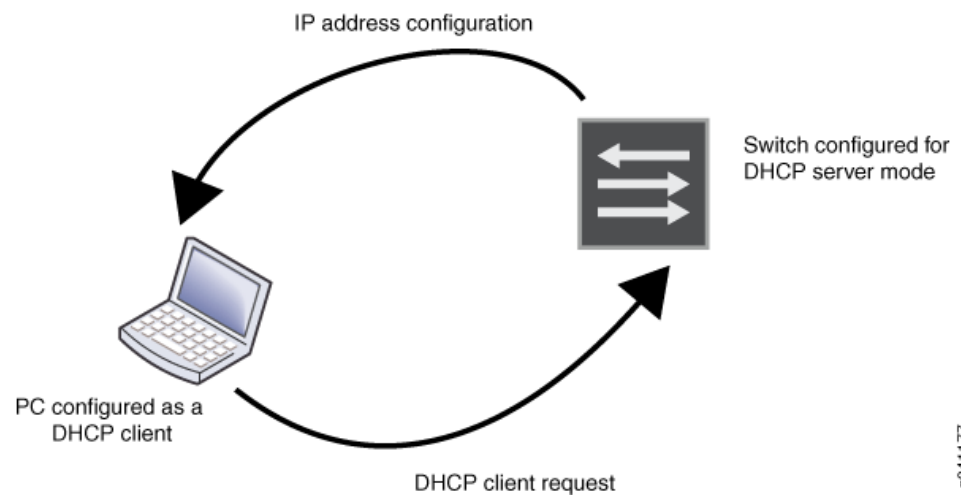

Using DHCP

DHCP automates network-parameter assignment to network devices. Even in small networks, DHCP is useful because it makes it easy to add new machines to the network.

DHCP access service minimizes the overhead required to add clients to the network by providing a centralized, server-based setup, which means that you do not have to manually create and maintain IP address assignments for clients. In addition, when you use DHCP to manage a pool of IP addresses among hosts, you reduce the number of IP addresses needed on the network. DHCP does this by leasing an IP address to a host for a limited period of time, allowing the DHCP server to share a limited number of IP addresses. DHCP also provides a central database of devices that are connected to the network and eliminates duplicate resource assignments. In addition to IP addresses for clients, DHCP provides other configuration information, particularly the IP addresses of local caching Domain Name System (DNS) resolvers, network boot servers, or other service hosts.

Another valuable DHCP feature is automatic software download for installation of software packages on switches. DHCP clients configured for automatic software download receive messages as part of the DHCP message exchange process—when the software package name in the DHCP server message is different from that of the software package that booted the DHCP client switch, the new software is downloaded and installed. See [“Upgrading Software by Using Automatic Software Download” on page 7](#).

DHCP Relay Servers and DHCP Servers

You can configure a switch either as a DHCP server or as a DHCP relay server, but not both. Whereas a DHCP server replies to a client with an IP address, a DHCP relay server relays DHCP messages to and from the configured DHCP server, even if the client and server are on different IP networks.

Configure a switch to be a DHCP relay agent if you have locally attached hosts and a remote DHCP server. For directions on configuring a DHCP relay server, see *DHCP/BOOTP Relay for Switches Overview*.

Legacy DHCP and Extended DHCP for Server Versions

Two versions of both DHCP server and DHCP relay agent are available on EX Series, QFX Series, and OCX Series switches. The original legacy DHCP server and legacy DHCP relay agent can be used in the same network as the extended DHCP servers and extended DHCP relay agent—extended DHCP is also referred to as virtual router (VR) aware DHCP.

You cannot configure legacy DHCP and extended DHCP versions on the same switch. Because the newer extended DHCP server version has more features, we recommend that you configure the extended DHCP server if it is supported by the switch. See *EX Series Switch Software Features Overview* for a list of switches that support the extended DHCP server.

The extended DHCP server version has the following added features:

- Graceful Routing Engine switchover (GRES), which provides mirroring support for clients. For details, see *High Availability Features for EX Series Switches Overview*.
- Virtual routing and forwarding (VRF), which allows multiple instances of a routing table to simultaneously coexist on the same switch. For details, see *Understanding Virtual Routing Instances on EX Series Switches*.



NOTE: Legacy DHCP supports the circuit ID and the remote ID fields for the relay agent option (option 82). Extended DHCP for the relay agent option supports only circuit ID. See *EX Series Switch Software Features Overview* for a list of switches that support extended DHCP (VR-aware DHCP).

Legacy DHCP and extended DHCP servers can be configured at the hierarchy levels shown in [Table 8 on page 75](#):

Table 8: Legacy DHCP and Extended DHCP Server Hierarchy Levels

DHCP Service	Hierarchy
Extended DHCP server	<code>edit system services dhcp-local-server</code>
Extended DHCP address pool	<code>edit access address-assignment pool</code>
Legacy DHCP server	<code>edit system services dhcp</code>
Legacy DHCP relay	<code>edit forwarding-options helpers bootp</code>
Extended DHCP relay	<code>edit forwarding-options dhcp-relay</code>
Legacy DHCP address pool	<code>edit system services dhcp pool</code>

DHCP clients on a switch are always configured at the hierarchy level `[edit interfaces interface-name family dhcp]`.

Configuring DHCP on a Switch

A DHCP configuration consists of two parts: the configuration for a DHCP server and the configuration for DHCP clients. The DHCP server configuration is simple if you accept the default configurations.

When you configure a legacy DHCP server, you only need to define the DHCP server name and the interface on the switch. You can use the default configuration for the rest of the settings. When you configure an extended DHCP server, you need to only define a DHCP pool, indicate IP addresses for the pool, and create a server group. You can use the default configuration for the rest of the settings.


For directions for configuring either a legacy DHCP server or an extended DHCP server, see [“Configuring a DHCP Server on Switches \(CLI Procedure\)” on page 78](#).

To configure a DHCP client, set the client’s DHCP interface address in the **[edit interfaces interface-name unit 0 family inet dhcp]** hierarchy. For directions for configuring a DHCP client on a switch, see [“Configuring a DHCP Client \(CLI Procedure\)” on page 77](#).

How DHCP Works

DHCP consists of a four-step transfer process beginning with a broadcast DHCP discovery message from the client. As the second step, the client receives a DHCP offer message from the server. This message includes the IP address and mask, and some other specific parameters. The client then sends a DHCP request message to accept the IP address and other parameters that it received from the server in the previous step. The DHCP server sends a DHCP response message and removes the now-allocated address from the DHCP address pool. See [Figure 6 on page 76](#).

Figure 6: DHCP Four-Step Transfer

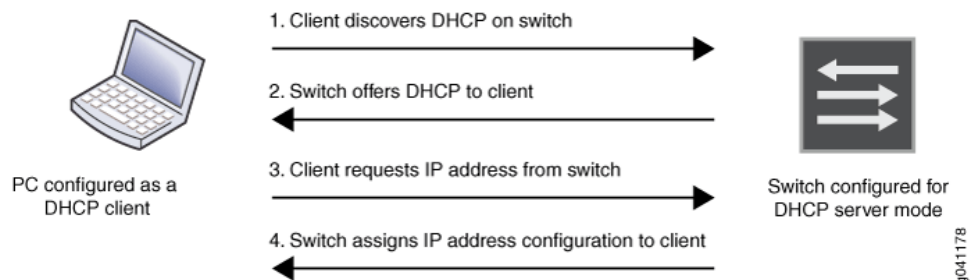

NOTE: Because the DHCP discovery message from the client is a broadcast message and because broadcast messages cross other segments only when they are explicitly routed, you might have to configure a DHCP relay agent on the switch interface so that all DHCP discovery messages from the clients are forwarded to one DHCP server.

Related Documentation

- [Configuring a DHCP Client \(CLI Procedure\) on page 77](#)
- [Configuring a DHCP Server on Switches \(CLI Procedure\) on page 78](#)

- [Configuring an Extended DHCP Relay Server on EX Series Switches \(CLI Procedure\)](#)
- [Configuring a DHCP SIP Server \(CLI Procedure\)](#)
- [Upgrading Software by Using Automatic Software Download on page 7](#)
- [Monitoring DHCP Services](#)

Configuring a DHCP Client (CLI Procedure)

A Dynamic Host Configuration Protocol (DHCP) server can provide many valuable TCP/IP network services. DHCP can dynamically allocate IP parameters, such as an IP address, to clients, and it can also deliver software upgrades to clients.

DHCP configuration consists of two components, configuration of DHCP clients and configuration of a DHCP server. Client configuration determines how clients send a message requesting an IP address, whereas a DHCP server configuration enables the server to send an IP address configuration back to the client. This topic describes configuring a DHCP client. For directions for configuring a DHCP server, see [“Configuring a DHCP Server on Switches \(CLI Procedure\)” on page 78](#) or [Configuring a DHCP Server on Switches \(CLI Procedure\)](#).

You can change DHCP client configurations from the switch, using client identifiers to indicate which clients you want to configure.

To configure a DHCP client, you configure an interface to belong to the DHCP family and specify additional attributes, as desired:

```
[edit]
user@switch# set interfaces interface-name unit number family inet dhcp
configuration-statement
```

The options that you can configure are listed in [Table 9 on page 77](#). Replace the variable *configuration-statement* with one or more of the statements listed in this table. If you do not explicitly configure these options, the switch uses default values for them.

Table 9: DHCP Client Settings

Configuration Statement	Description
client-identifier	Unique client ID—By default this consists of the hardware type (01 for Ethernet) and the MAC address (a.b.c.d). For this example, the value would be 01abcc.
lease-time	Time in seconds that a client holds the lease for an IP address assigned by a DHCP server. If a client does not request a specific lease time, then the server sends the default lease time. The default lease time on a Junos OS DHCP server is 1 day.
retransmission-attempt	Number of times the client attempts to retransmit a DHCP packet.
retransmission-interval	Time between transmission attempts.
server-address	IP address of the server that the client queries for an IP address.

Table 9: DHCP Client Settings (*continued*)

Configuration Statement	Description
update-server	TCP/IP settings learned from an external DHCP server to the DHCP server running on the switch are propagated.
vendor-option	Vendor class ID (CPU's manufacturer ID string) for the DHCP client.

**Related
Documentation**

- [Configuring a DHCP Server on Switches \(CLI Procedure\) on page 78](#)
- [Understanding DHCP Services for Switches on page 73](#)

Configuring a DHCP Server on Switches (CLI Procedure)



NOTE: This task uses Junos OS for EX Series switches that does not support the Enhanced Layer 2 Software (ELS) configuration style. If your switch runs software that supports ELS, see *Configuring a DHCP Server on Switches (CLI Procedure)*. For ELS details, see “[Getting Started with Enhanced Layer 2 Software](#)” on page 43.

A Dynamic Host Configuration Protocol (DHCP) server can provide two valuable TCP/IP network services. DHCP can dynamically allocate IP parameters, such as an IP address, to clients and it can also deliver software upgrades to clients.

A DHCP configuration consists of two components—an optional reconfiguration of default settings on DHCP clients and the configuration of a DHCP server. This topic covers configuration of the DHCP server. For information about reconfiguring a DHCP client, see “[Configuring a DHCP Client \(CLI Procedure\)](#)” on page 77.

You can configure either of two versions of a DHCP server on a switch— the extended server version or the legacy server version. We recommend that you configure the extended server unless you need to keep your DHCP server configuration backward-compatible with the legacy server version.

This topic includes the following tasks:

1. [Configuring an Extended DHCP Server on a Switch on page 79](#)
2. [Configuring a Legacy DHCP Server on a Switch \(CLI Procedure\) on page 79](#)

Configuring an Extended DHCP Server on a Switch

To configure an extended DHCP server, you must configure a DHCP pool, indicate IP addresses for the pool, and create a server group. Additional configurations are optional.

Do not assign addresses that are already in use in the network to address pools. The extended DHCP server does not check whether addresses are already in use before it assigns them to clients.

1. Create an address pool for DHCP IP addresses:

```
[edit]
user@switch# set access address-pool address-pool
```

2. Configure an address-assignment pool that can be used by different client applications for DHCP dynamic assignment:

```
[edit access address-assignment]
user@switch# set pool address-pool-name
```

3. Create a server group on the switch, providing a group name and an interface name for DHCP:

```
[edit system services dhcp-local-server]
user@switch# set group group-name interface interface-name
```

4. (Optional) Process the information protocol data units (PDUs):

```
[edit system services dhcp-local-server]
user@switch# set overrides process-inform
```

5. (Optional) Redefine the order of attribute matching for pool selection:

```
[edit system services dhcp-local-server]
user@switch# set pool-match-order ip-address-first
```

6. (Optional) Enable dynamic reconfiguration triggered by the DHCP extended server for all DHCP clients or only for the DHCP clients serviced by the specified group of interfaces:

```
[edit system services dhcp-local-server]
user@switch# set reconfigure

[edit system services dhcp-local-server group group-name]
user@switch# set reconfigure
```

Configuring a Legacy DHCP Server on a Switch (CLI Procedure)

To configure a legacy DHCP server, you must configure a pool of IP addresses for dynamic assignment. You only need to supply a series of network addresses. Additional configurations are optional.

1. Configure a pool of IP addresses for dynamic assignment:

```
[edit system services dhcp]
user@switch# set pool network-range
```



NOTE: Step 2 through Step 15 are for assigning global values at the `[edit system services dhcp]` hierarchy level. You can also assign the same values to a specific pool by using those same commands at the `[edit system services dhcp pool network-range]` hierarchy level.

2. (Optional) Change the domain search list used to resolve hostnames:

```
[edit system services dhcp]
user@switch# set domain-search [ domain-list ]
```

3. (Optional) Change the domain name server (DNS) name that the DHCP server advertises to clients:

```
[edit system services dhcp]
user@switch# set name-server address
```

4. (Optional) Change the DHCP options:

```
[edit system services dhcp]
user@switch# set option id-number
```

5. (Optional) Change the devices advertised to clients:

```
[edit system services dhcp]
user@switch# set router address
```

6. (Optional) Configure the name of the boot server advertised to DHCP clients. The client uses a boot file located on the boot server to complete the DHCP setup. This configuration step is equivalent to DHCP Option 66:

```
[edit system services dhcp]
user@switch# set boot-server (address | hostname)
```

7. (Optional) Set the boot file advertised to DHCP clients. After the client receives an IP address and the boot file location from the DHCP server, the client uses the boot image stored in the boot file to complete DHCP setup. This configuration step is equivalent to DHCP Option 67:

```
[edit system services dhcp]
user@switch# set boot-file filename
```

8. (Optional) Change the SIP server:

```
[edit system services dhcp]
user@switch# set sip-server addresses-or-names
```

For more information, see *Configuring a DHCP SIP Server (CLI Procedure)*.

9. (Optional) Change the DHCP client's hardware address:

```
[edit system services dhcp]
user@switch# set static-binding mac-address
```

10. (Optional) Change the NetBIOS name server:

```
[edit system services dhcp]
user@switch# set wins-server address
```

- Related Documentation**
- [Configuring a DHCP Client \(CLI Procedure\) on page 77](#)
 - [Configuring a DHCP SIP Server \(CLI Procedure\)](#)
 - [Understanding DHCP Services for Switches on page 73](#)

PART 5

Internet Control Message Protocol (ICMP)

- [Understanding ICMP on page 85](#)

CHAPTER 5

Understanding ICMP

- [Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses on page 85](#)
- [Configuring Junos OS to Disable the Routing Engine Response to Multicast Ping Packets on page 86](#)
- [Configuring the Junos OS ICMPv4 Rate Limit for ICMPv4 Routing Engine Messages on page 86](#)

Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses

When you issue the **ping** command with the **record-route** option, the Routing Engine displays the path of the ICMP echo request packets and timestamps in the ICMP echo responses by default.

You can configure the Routing Engine to disable the setting of the **record-route** option in the IP header of the ping request packets. Disabling the **record-route** option prevents the Routing Engine from recording and displaying the path of the ICMP echo request packets in the response.

- To configure the Routing Engine to disable the setting of the **record route** option, include the **no-ping-record-route** statement at the **[edit system]** hierarchy level:

```
[edit system]  
no-ping-record-route;
```

- To disable the reporting of timestamps in the ICMP echo responses, include the **no-ping-time-stamp** option at the **[edit system]** hierarchy level:

```
[edit system]  
no-ping-time-stamp;
```

By configuring the **no-ping-record-route** and **no-ping-timestamp** options, you can prevent unauthorized persons from discovering information about the provider edge (PE) router or switch and its loopback address.

Related Documentation

- [Configuring Junos OS to Disable the Routing Engine Response to Multicast Ping Packets on page 86](#)

Configuring Junos OS to Disable the Routing Engine Response to Multicast Ping Packets

By default, the Routing Engine responds to Internet Control Message Protocol (ICMP) echo requests sent to multicast group addresses. To disable the Routing Engine from responding to ICMP echo requests sent to multicast group addresses, include the **no-multicast-echo** statement at the **[edit system]** hierarchy level:

```
[edit system]
no-multicast-echo;
```

By configuring the Routing Engine to ignore multicast ping packets, you can prevent unauthorized persons from discovering the list of provider edge (PE) routers or switches in the network.

- Related Documentation**
- [Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses on page 20](#)

Configuring the Junos OS ICMPv4 Rate Limit for ICMPv4 Routing Engine Messages

To limit the rate at which ICMPv4 messages can be generated and received by the Routing Engine, include the **icmpv4-rate-limit** statement at the **[edit system internet-options]** hierarchy level:

```
icmpv4-rate-limit bucket-size bucket-size packet-rate packet-rate;
```

The bucket size is the number of seconds in the rate-limiting bucket. The packet rate is the rate-limiting packets earned per second. Specify a **bucket-size** from 0 through 4294967295 seconds. The default value is 5 seconds. Specify a **packet-rate** from 0 through 4,294,967,295. The default value is 1000.

- Related Documentation**
- [icmpv4-rate-limit on page 259](#)

PART 6

Licenses

- [Using Licenses on page 89](#)

CHAPTER 6

Using Licenses

- [Junos OS Feature Licenses on page 89](#)
- [Software Features That Require Licenses on the QFX Series on page 90](#)
- [Junos OS Feature License Keys on page 91](#)
- [Generating License Keys on page 95](#)
- [Adding New Licenses \(CLI Procedure\) on page 97](#)
- [Deleting a License \(CLI Procedure\) on page 98](#)
- [Saving License Keys on page 99](#)
- [Verifying Junos OS License Installation on page 100](#)

Junos OS Feature Licenses

Some Junos OS software features require a license to activate the feature. To enable a licensed feature, you need to purchase, install, manage, and verify a license key that corresponds to each licensed feature. To conform to Junos OS feature licensing requirements, you must purchase one license per feature per device. The presence of the appropriate software license key on your device determines whether you are eligible to configure and use the licensed feature.

To speed deployment of licensed features, Junos OS software implements an honor-based licensing structure and provides you with a 30-day grace period to use a licensed feature without a license key installed. The grace period begins when you configure the feature and your device uses the licensed feature for the first time, but not necessarily when you install the license. After the grace period expires, the system generates system log messages saying that the feature requires a license. To clear the error message and use the licensed feature properly, you must install and verify the required license.

For information about how to purchase software licenses, contact your Juniper Networks sales representative.

Related Documentation

- *License Enforcement*
- [Junos OS Feature License Keys on page 91](#)
- *Software Feature Licenses*
- [Verifying Junos OS License Installation on page 100](#)

Software Features That Require Licenses on the QFX Series



NOTE: If you try to configure a feature that is not licensed, you will receive syslog messages saying that you are using a feature that is licensable and that you do not possess a license for the feature. If you try to commit configuration changes for a feature that is not licensed, you will receive a commit warning saying that you have exceeded the allowed license limit for the feature.



NOTE: There is no separate license for Virtual Chassis like there is for Virtual Chassis Fabric.

Table 10 on page 90 lists the licenses you can purchase for each QFX Series software feature.

For information about how to purchase a software license, contact your Juniper Networks sales representative.

Table 10: Junos OS Feature Licenses and Model Numbers for QFX Series Devices

Licensed Software Feature	Supported Devices	Number of Licenses Required	Model Number
QFX Series advanced feature license for Border Gateway Protocol (BGP), Intermediate System-to-Intermediate System (IS-IS), Multi-protocol Label Switching (MPLS), and Virtual Extensible Local Area Network (VXLAN), and Open vSwitch Database (OVSDB)	QFX3500, QFX3600, QFX5100-48S, and QFX5100-48T switches	One per switch, two per Virtual Chassis, and two per Virtual Chassis Fabric	QFX-JSL-EDGE-ADV1
QFX Series advanced feature license for Border Gateway Protocol (BGP), Intermediate System-to-Intermediate System (IS-IS), Multi-protocol Label Switching (MPLS), and Virtual Extensible Local Area Network (VXLAN) and Open vSwitch Database (OVSDB)	QFX5100-24Q and QFX5100-96S switches	One per switch, two per Virtual Chassis, and two per Virtual Chassis Fabric	QFX5100-HDNSE-LIC
QFX Series advanced feature license for Border Gateway Protocol (BGP)	QFX3100 Director device	One per Node device in a network Node group	QFX-JSL-DRCTR-ADV1
QFX Series advanced feature license for Fibre Channel	QFX3500 switch	One per switch on which fibre channel ports are configured	QFX-JSL-EDGE-FC

Table 10: Junos OS Feature Licenses and Model Numbers for QFX Series Devices (*continued*)

Licensed Software Feature	Supported Devices	Number of Licenses Required	Model Number
QFX Series advanced feature license for Fibre Channel	QFX3100 Director device	One per QFX3500 Node device on which fibre channel ports are configured	QFX-JSL-DRCTR-FC
QFX Series advanced feature license for Fibre Channel - Capacity 16	QFX3100 Director device	One for up to 16 QFX3500 Node devices on which fibre channel ports are configured	QFX-JSL-DRCTR-FC-C16
QFX Series feature license for enabling fabric mode	QFX3500 and QFX3600 device	One per device	QFX3000-JSL-EDGE-FAB
QFX Series feature license for base software for QFX3000-G QFabric system	QFX3100 Director device	One per QFX3000-G QFabric system	QFX3008-JSL-DRCTR-FAB
QFX Series feature license for base software for QFX3000-M QFabric system	QFX3100 Director device	One per QFX3000-M QFabric system	QFX3000M-JSL-DRCTR-FAB
QFX and EX Series feature license for enabling Media Access Control security (MACsec)	QFX switches that support MACsec. See <i>Understanding Media Access Control Security (MACsec)</i> .	One per switch, two per Virtual Chassis,	EX-QFX-MACSEC-AGG
Virtual Chassis Fabric (VCF)	All member devices in a Virtual Chassis Fabric (VCF)	Two per Virtual Chassis Fabric (VCF)	QFX-VCF-LIC

Related Documentation

- [Junos OS Feature Licenses on page 89](#)
- [Junos OS Feature License Keys on page 91](#)
- [Generating License Keys on page 95](#)
- [Generating the License Keys for a QFabric System](#)
- [Adding New Licenses \(CLI Procedure\) on page 97](#)
- [Deleting a License \(CLI Procedure\) on page 98](#)
- [Saving License Keys on page 99](#)
- [Verifying Junos OS License Installation on page 100](#)

Junos OS Feature License Keys

Some Junos OS software features require a license to be activated. To enable each licensed feature, you must purchase, install, manage, and verify a license key that corresponds to the licensed feature.

Release-Tied License Keys and Upgrade Licenses on MX Series Routers

The Junos OS licensing infrastructure currently associates a license feature with attributes such as date, platform, and validity. In addition to these attributes, for MX Series routers running Junos OS Release 12.2 and later, a licensed feature can be associated with a release number at the time of generating the license key. This type of release-tied license key is used to validate a particular licensed feature while attempting a software upgrade. The upgrade process aborts if the release number in the license key is earlier than the Junos OS release number to which the system is being upgraded.

Additionally, an upgrade license key can be generated for a release-tied licensed feature. An upgrade license key is used for carrying forward a capacity license to the upgrade release. Although an upgrade license might be an acceptable license on the current release, it does not add to the existing capacity limit. The capacity added in the upgrade license key is valid for the upgrade software release only.

The release number embedded in the license key indicates the maximum release number up to which Junos OS can be upgraded.

As an example, assume that your system is running Junos OS Release 12.2 and is using the **scale-subscriber** licensed feature with a later release-tied upgrade license key installed. If you request a software upgrade to the later release of Junos OS, the software upgrade operation fails and the following error message is displayed:

```
mgd: error: No valid upgrade license found for feature 'scale-subscriber'.  
Aborting Software upgrade.  
Validation failed
```

In this example, to successfully upgrade to the later release of Junos OS, the release number included in the upgrade license key should be greater than or equal to the later release number. Also, you can perform software upgrades up to the previous release without any additional license keys to retain the existing scale limit.

**NOTE:**

When you install a release-tied license, the following apply:

- You can purchase an upgrade capacity license only if a base capacity license for the same scale-tier has already been generated or purchased.
- You cannot install an upgrade license if the capacity does not match any of the existing base capacity licenses on the system.
- The license installation fails when you install a lower release number license key on a higher software release number.
- A release-tied license can be installed on a Junos OS release number that is lower than or equal to the release number included in the license key. For example, a 12.2 license key is valid on Junos OS Release 12.1.
- An upgrade license is valid only on the target release number specified in the license key, but can be installed on an earlier Junos OS release. For example, a 4 K scale-tier upgrade license for Junos OS Release 12.2 can be installed on an earlier release, and the installed count of licenses remains unaltered.
- Release-tied licenses of the previous release are not deleted on upgrading Junos OS to a newer release version.

Licensable Ports on MX5, MX10, and MX40 Routers

Starting with Junos OS Release 12.2, license keys are available to enhance the port capacity on MX5, MX10, and MX40 routers up to the port capacity of an MX80 router. The MX5, MX10, and MX40 routers are derived from the modular MX80 chassis with similar slot and port assignments, and provide all functionality available on an MX80 router, but at a lower capacity. Restricting port capacity is achieved by making a set of MIC slots and ports licensable. MICs without a license are locked, and are unlocked or made usable by installing appropriate upgrade licenses.

The base capacity of a router is identified by the Ideeprom assembly ID (I2C ID), which defines the board type. However, the Junos OS licensing infrastructure allows the use of restricted ports without a license for a grace period of 30 days. After the grace period expires, the router reverts back to the base capacity if no upgrade license is purchased and installed for the locked ports. The I2C ID along with an upgrade license determine the final capacity of an MX5, MX10, or MX40 router.

The MX5, MX10, MX40, and MX80 routers support the following types of MICs:

- A built-in 10-Gigabit Ethernet MIC with four 10-Gigabit Ethernet ports
- Two front-pluggable MICs

A feature ID is assigned to every license upgrade for enhancing port capacity.

[Table 11 on page 94](#) displays the chassis types and their associated port capacity, I2C ID, base capacity, feature ID, feature name, and the final capacity after a license upgrade.

Table 11: Upgrade Licenses for Enhancing Port Capacity

Chassis Type	Port Capacity	I2C ID	Base Capacity	Feature ID and Feature Name	Upgrade Capacity
MX5	20G	0x556	Slot 1 <ul style="list-style-type: none"> • 1/MIC0 	f1—MX5 to MX10 upgrade	Slot 1 and 2 <ul style="list-style-type: none"> • 1/MIC0 • 1/MIC1
MX10	40G	0x555	Slot 1 and 2 <ul style="list-style-type: none"> • 1/MIC0 • 1/MIC1 	f2—MX10 to MX40 upgrade	Slot 2 and first 2 ports on Slot 0 <ul style="list-style-type: none"> • 1/MIC1 • First 2 ports on 0/MIC0
MX40	60G	0x554	Slot 1, Slot 2 and first 2 ports on Slot 0 <ul style="list-style-type: none"> • 1/MIC0 • 1/MIC1 • First 2 ports on 0/MIC0 	f3—MX40 to MX80 upgrade	Slot 2 and all ports on Slot 0 <ul style="list-style-type: none"> • 1/MIC1 • All 4 ports on 0/MIC0

When installing an upgrade license for enhancing port capacity on MX5, MX10 and MX40 routers, consider the following:

- To upgrade an MX5 router to MX80 router capacity, licenses for all three features (f1, f2, f3) must be installed. All three features can be provided in a single license key.
- To upgrade an MX10 router to MX40 router capacity, installing a license key with f2 feature is sufficient.
- Non-applicable feature IDs in a license key reject the upgrade license. For example:
 - An f1 feature ID on an MX10 upgrade license key rejects the license.
 - Feature IDs f1 and f2 on an MX40 upgrade license key reject the entire license.

Port Activation on MX104 Routers

Starting with Junos OS Release 13.3, license keys are available to activate the ports on the MX104 router. MX104 routers have four built-in ports. By default, in the absence of valid licenses, all four built-in ports are deactivated. By installing licenses, you can activate any two of the four or all of the four built-in ports. For instance, you can install a license to activate the first two built-in ports (xe-2/0/0 and xe-2/0/1) or you can install a license to activate the next two built-in ports (xe-2/0/2 and xe-2/0/3). You can also install a license to activate all four built-in ports (xe-2/0/0, xe-2/0/1, xe-2/0/2, and xe-2/0/3). If you have already activated two of the built-in ports, you can install an additional license to activate the other two built-in ports on the MX104 router.

A feature ID is assigned to every license for activating the built-in ports on the MX104 router. The port license model with the feature ID is described in [Table 12 on page 95](#).

Table 12: Port Activation License Model for MX104 Routers

Feature ID	Feature Name	Functionality
F1	MX104 2X10G Port Activate (0 and 1)	Ability to activate first two built-in ports (xe-2/0/0 and xe-2/0/1)
F2	MX104 2X10G Port Activate (2 and 3)	Ability to activate next two built-in ports (xe-2/0/2 and xe-2/0/3)

Both the features are also provided in a single license key for ease of use. To activate all four ports, you must either install the licenses for both the features listed in [Table 12 on page 95](#) or the single license key for both features. If you install the single license key when feature IDs F1 and F2 are already installed, the license does not get rejected. Also, MX104 routers do not support the graceful license expiry policy. A graceful license expiry policy allows the use of a feature for a certain period of time (usually a grace period of 30 days), and reverts if the license for that feature is not installed after the grace period.

Related Documentation

- [Junos OS Feature Licenses on page 89](#)
- *License Enforcement*
- *Software Feature Licenses*
- [Verifying Junos OS License Installation on page 100](#)
- [show system license on page 459](#)

Generating License Keys

When you purchase a Junos OS software feature license for a device, you receive an e-mail containing an authorization code for the feature license from Juniper Networks. You can use the authorization code to generate a unique license key (a combination of the authorization code and the device's serial number) for the device, and then add the license key on the device.

Before generating the license keys for a device:

- Purchase the required licenses for the device. See [“Software Features That Require Licenses on the QFX Series” on page 90](#).
- Note down the authorization code in the e-mail you received from Juniper Networks when you purchased the license.
- Determine the serial number of the device. For instructions, see *Locating the Serial Number on a QFX3500 Device or Component*.

To generate the license keys for a device:



NOTE: This procedure shows you how to generate license keys on a QFX Series device, but you can follow the same procedure for any device.

1. In a browser, log in to the Juniper Networks License Management System at <https://www.juniper.net/lcrs/license.do>.

The Manage Product Licenses page appears.



NOTE: To access the licensing site, you must have a service contract with Juniper Networks and an access account. If you need help obtaining an account, complete the registration form at the Juniper Networks website <https://www.juniper.net/registration/Register.jsp>.

2. On the Generate Licenses tab, select **QFX Series Product** from the drop-down list, and click **Go**.

The Generate Licenses - QFX Series Product page appears.

3. Select the **QFX Series Product Device** option button, and click **Continue**.

The Generate Licenses - QFX Series Product Devices page appears.

4. In the **Device Serial Number** field, enter the serial number for the device.
5. In the **Authorization Code** field, enter the authorization code in the e-mail you received from Juniper Networks when you purchased the license.
6. (Optional) If you want to enter another authorization code for the same device, click **Enter More Authorization Codes** to display a new authorization code field. Enter the authorization code in this field.
7. Click **Confirm**.

The Confirm License Information page appears, displaying a summary of the information you submitted to the License Management System.

8. Review the information to ensure everything is correct and then click **Generate License**.

The Generate Licenses - QFX Series Product Devices page appears, displaying a summary of your license keys, including a link that displays the details of your new license keys.

9. Select the file format in which you want to obtain your new license keys.
10. Select the delivery method you want to use to obtain your new license keys.

To download the license keys:

- Select the **Download to this computer** option button, and click **OK**.

To e-mail the license keys:

- Select the **Send e-mail to e-mail ID** option button, and click **OK**.

Related Documentation

- [Software Features That Require Licenses on the QFX Series on page 90](#)
- [Adding New Licenses \(CLI Procedure\) on page 97](#)
- [Locating the Serial Number on a QFX3500 Device or Component](#)

Adding New Licenses (CLI Procedure)

Before adding new licenses, complete the following tasks:

- Purchase the required licenses.
- Establish basic network connectivity with the router or switch. For instructions on establishing basic connectivity, see the *Getting Started Guide* or *Quick Start Guide* for your device.



NOTE: On QFabric systems, install your licenses in the default partition of the QFabric system and not on the individual components (Node devices and Interconnect devices).

To add a new license key to the device using the CLI:

1. From the CLI operational mode, enter one of the following CLI commands:

- To add a license key from a file or URL, enter the following command, specifying the filename or the URL where the key is located:

```
user@host> request system license add filename | url
```

- To add a license key from the terminal, enter the following command:

```
user@host> request system license add terminal
```

2. When prompted, enter the license key, separating multiple license keys with a blank line.

If the license key you enter is invalid, an error appears in the CLI output when you press Ctrl+d to exit license entry mode.

3. Go on to [“Verifying Junos OS License Installation” on page 100](#).

On routers that have graceful Routing Engine switchover (GRES) enabled, after successfully adding the new license on the master Routing Engine, the license keys are automatically synchronized on the backup Routing Engine as well. However, in case GRES is not enabled, the new license is added on each Routing Engine separately. This ensures

that the license key is enabled on the backup Routing Engine during changeover of mastership between the Routing Engines.

To add a new license key to a router with dual Routing Engines without GRES:

1. After adding the new license key on the master Routing Engine, use the **request chassis routing-engine master switch** command to have the backup Routing Engine become the master Routing Engine.
2. Log in to the active Routing Engine and add the new license key, repeat the same step.



NOTE: Adding a license key to the router or switch might be delayed if a kernel resynchronization operation is in progress at that time. The following message is displayed on the CLI when the license-adding operation is about to be delayed:

A kernel re-sync operation is in progress. License update may take several minutes to complete.

**Related
Documentation**

- [Deleting a License \(CLI Procedure\) on page 98](#)
- [Junos OS Feature Licenses on page 89](#)
- [Verifying Junos OS License Installation on page 100](#)
- [request system license add on page 456](#)

Deleting a License (CLI Procedure)

Before deleting a license, establish basic network connectivity with the router or switch. For instructions on establishing basic connectivity, see the *Getting Started Guide* or *Quick Start Guide* for your router or switch.

You have the options to delete a single license, delete all licenses, or delete a list of licenses enclosed in brackets.

1. Display the licenses available to be deleted.

```
user@host> request system license delete license-identifier-list ?
```

```
Possible completions:
```

E00468XXX4	License key identifier
JUNOS10XXX1	License key identifier
JUNOS10XXX2	License key identifier
JUNOS10XXX3	License key identifier
JUNOS10XXX4	License key identifier
[Open a set of values

2. To delete a license key or keys from a device using the CLI operational mode, select one of the following methods:

- Delete a single license by specifying the license ID. Using this option, you can delete only one license at a time.

```
user@host> request system license delete license-identifier
```


- Delete all license keys from the current device.

```
user@host> request system license delete all
```

- Delete multiple license keys from the current device. Specify the license identifier for each key and enclose the list of identifiers in brackets.

```
user@host> request system license delete license-identifier-list [JUNOS10XXX1
JUNOS10XXX3 JUNOS10XXX4 ...]
```

```
Delete license(s) ?
[yes,no] (no) yes
```

3. Go on to [“Verifying Junos OS License Installation” on page 100](#).



NOTE: Deleting a license key from the router or switch might be delayed if a kernel resynchronization operation is in progress at that time. The following message is displayed on the CLI when the license-deleting operation is about to be delayed:

A kernel re-sync operation is in progress. License update may take several minutes to complete.

Related Documentation

- [Adding New Licenses \(CLI Procedure\) on page 97](#)
- [Saving License Keys on page 99](#)
- [Junos OS Feature Licenses on page 89](#)
- [Verifying Junos OS License Installation on page 100](#)
- [request system license delete on page 457](#)

Saving License Keys

Before saving a license, establish basic network connectivity with the router or switch. For instructions on establishing basic connectivity, see the *Getting Started Guide* or *Quick Start Guide* for your router or switch.

To save the licenses installed on a device to a file using the CLI:

1. From the CLI operational mode, enter one of the following CLI commands:

- To save the installed license keys to a file or URL, enter the following command:

```
user@host> request system license save filename | url
```

For example, the following command saves the installed license keys to a file named `license.config`:

- To save a license key from the terminal, enter the following command:

```
user@host> request system license save ftp://user@host/license.config
```

2. Go on to [“Verifying Junos OS License Installation” on page 100](#).

- Related Documentation**
- [Adding New Licenses \(CLI Procedure\) on page 97](#)
 - [Deleting a License \(CLI Procedure\) on page 98](#)
 - [Junos OS Feature Licenses on page 89](#)
 - [Verifying Junos OS License Installation on page 100](#)

Verifying Junos OS License Installation

To verify Junos OS license management, perform the following tasks:

- [Displaying Installed Licenses on page 100](#)
- [Displaying License Usage on page 101](#)

Displaying Installed Licenses

Purpose Verify that the expected licenses are installed and active on the router or switch.

Action From the CLI, enter the **show system license** command.

Sample Output

```
user@host> show system license
License usage:

```

Feature name	Licenses used	Licenses installed	Licenses needed	Expiry
subscriber-acct	0	1	0	permanent
subscriber-auth	0	1	0	permanent
subscriber-addr	0	1	0	permanent
subscriber-vlan	0	1	0	permanent
subscriber-ip	0	1	0	permanent
scale-subscriber	0	1000	0	permanent
scale-l2tp	0	1000	0	permanent
scale-mobile-ip	0	1000	0	permanent

```

Licenses installed:
License identifier: E000185416
License version: 2
Features:
subscriber-acct - Per Subscriber Radius Accounting
permanent
subscriber-auth - Per Subscriber Radius Authentication
permanent
subscriber-addr - Address Pool Assignment
permanent
subscriber-vlan - Dynamic Auto-sensed Vlan
permanent
subscriber-ip - Dynamic and Static IP
permanent
```

Meaning The output shows a list of the license usage and a list of the licenses installed on the router or switch. Verify the following information:

- Each license is present. Licenses are listed in ascending alphanumeric order by license ID.
- The state of each license is **permanent**.



NOTE: A state of invalid indicates that the license key is not a valid license key. Either it was entered incorrectly or it is not valid for the specific device.

- The feature for each license is the expected feature. The features enabled are listed by license. An all-inclusive license has all features listed.
- All configured features have the required licenses installed. The Licenses needed column must show that no licenses are required.

Displaying License Usage

Purpose Verify that the licenses fully cover the feature configuration on the router or switch.

Action From the CLI, enter the **show system license usage** command.

Sample Output

```
user@host> show system license usage
```

	Licenses used	Licenses installed	Licenses needed	Expiry
Feature name				
subscriber-addr	1	0	1	29 days
scale-subscriber	0	1000	0	permanent
scale-l2tp	0	1000	0	permanent
scale-mobile-ip	0	1000	0	permanent

Meaning The output shows any licenses installed on the router or switch and how they are used. Verify the following information:

- Any configured licenses appear in the output. The output lists features in ascending alphabetical order by license name. The number of licenses appears in the third column. Verify that you have installed the appropriate number of licenses.
- The number of licenses used matches the number of configured features. If a licensed feature is configured, the feature is considered used. The sample output shows that the subscriber address pooling feature is configured.
- A license is installed on the router or switch for each configured feature. For every feature configured that does not have a license, one license is needed.

For example, the sample output shows that the subscriber address feature is configured but that the license for the feature has not yet been installed. The license must be installed within the remaining grace period to be in compliance.

PART 7

Login Classes

- [Understanding Login Classes on page 105](#)

CHAPTER 7

Understanding Login Classes

- [Configuring Junos OS User Accounts on page 105](#)
- [Configuring the Junos OS to Display a System Login Announcement on page 106](#)
- [Configuring Junos OS to Display a System Login Message on page 106](#)

Configuring Junos OS User Accounts

User accounts provide one way for users to access the router or switch. For each account, you define the login name for the user and, optionally, information that identifies the user. After you have created an account, the software creates a home directory for the user.

To create user accounts, include the **user** statement at the **[edit system login]** hierarchy level:

```
[edit system login]
user username {
  class class-name;
  class {
    (encrypted-password "password" | plain-text-password);
    ssh-rsa "public-key";
    ssh-dsa "public-key";
  }
  full-name complete-name;
  uid uid-value;
  class class-name;
}
```

Related Documentation

- [Example: Configuring User Accounts](#)
- [Example: Configuring User Login Accounts](#)
- [Junos OS User Accounts Overview](#)
- [Limiting the Number of User Login Attempts for SSH and Telnet Sessions](#)

Configuring the Junos OS to Display a System Login Announcement

By default, no login announcement is displayed. To configure a system login announcement, include the **announcement** statement at the **[edit system login]** hierarchy level:

```
[edit system login]
announcement text;
```

If the announcement text contains any spaces, enclose the text in quotation marks.

A system login *announcement* appears after the user logs in. A system login *message* appears before the user logs in.



TIP: You can use the same special characters described to format your system login announcement.

Related Documentation

- *Defining Junos OS Login Classes*
- *Configuring the Junos OS to Display a System Login Message*

Configuring Junos OS to Display a System Login Message

By default, no login message is displayed on the router or switch. To configure a system login message, include the **message** statement at the **[edit system login]** hierarchy level:

```
[edit system login]
message text;
```

If the message text contains any spaces, enclose it in quotation marks.

You can format the message using the following special characters:

- \n—New line
- \t—Horizontal tab
- \'—Single quotation mark
- \"—Double quotation mark
- \\—Backslash

The following is a sample login message configuration:

```
[edit]
system {
  login {
    message "\n\n\n\tUNAUTHORIZED USE OF THIS SYSTEM\n\tIS STRICTLY PROHIBITED!\n\n\tPlease contact\n\t'company-noc@company.com\t' to gain\n\taccess to this equipment if you need authorization.\n\n\n";
  }
}
```



```
}  
}
```

The preceding login message configuration example produces a login message similar to the following:

```
server% telnet router1  
Trying 1.1.1.1...  
Connected to router1.  
Escape character is '^['.
```

```
UNAUTHORIZED USE OF THIS SYSTEM  
IS STRICTLY PROHIBITED!
```

```
Please contact 'company-noc@company.com' to gain  
access to this equipment if you need authorization.
```

```
router1 (ttyp0)
```

```
login:
```

A system login message appears before the user logs in. A system login announcement appears after the user logs in.

- Related Documentation**
- *Defining Junos OS Login Classes*
 - [message on page 307](#)

PART 8

Network Time Protocol (NTP)

- [Understanding NTP on page 111](#)

CHAPTER 8

Understanding NTP

- [Understanding NTP Time Servers on page 111](#)
- [Configuring NTP Authentication Keys on page 112](#)
- [Configuring NTP Authentication Keys \(QFabric System\) on page 113](#)
- [Configuring the NTP Time Server and Time Services on page 113](#)
- [Configuring the NTP Time Server and Time Services \(QFabric System\) on page 116](#)
- [Configuring the Switch to Listen for Broadcast Messages Using NTP on page 117](#)
- [Configuring the Switch to Listen for Multicast Messages Using NTP on page 117](#)
- [NTP Time Server and Time Services Overview \(QFabric System\) on page 118](#)
- [Setting the Date and Time on page 118](#)
- [Synchronizing and Coordinating Time Distribution Using NTP on page 119](#)
- [Example: Configuring NTP on page 120](#)
- [Example: Configuring NTP as a Single Time Source for Router and Switch Clock Synchronization on page 123](#)

Understanding NTP Time Servers

The IETF defined the Network Time Protocol (NTP) to synchronize the clocks of computer systems connected to each other over a network. Most large networks have an NTP server that ensures that time on all devices is synchronized, regardless of the device location. If you use one or more NTP servers on your network, ensure you include the NTS server addresses in your Junos OS configuration.

When configuring the NTP, you can specify which system on the network is the authoritative time source, or time server, and how time is synchronized between systems on the network. To do this, you configure the router, switch, or security device to operate in one of the following modes:

- **Client mode**—In this mode, the local router or switch can be synchronized with the remote system, but the remote system can never be synchronized with the local router or switch.
- **Symmetric active mode**—In this mode, the local router or switch and the remote system can synchronize with each other. You use this mode in a network in which either the local router or switch or the remote system might be a better source of time.



NOTE: Symmetric active mode can be initiated by either the local or the remote system. Only one system needs to be configured to do so. This means that the local system can synchronize with any system that offers symmetric active mode without any configuration whatsoever. However, we strongly encourage you to configure authentication to ensure that the local system synchronizes only with known time servers.

- Broadcast mode—In this mode, the local router or switch sends periodic broadcast messages to a client population at the specified broadcast or multicast address. Normally, you include this statement only when the local router or switch is operating as a transmitter.
- Server mode—In this mode, the local router or switch operates as an NTP server.



NOTE: In NTP server mode, the Junos OS supports authentication as follows:

- If the NTP request from the client comes with an authentication key (such as a key ID and message digest sent with the packet), the request is processed and answered based on the authentication key match.
- If the NTP request from the client comes without any authentication key, the request is processed and answered without authentication.

**Related
Documentation**

- [Configuring the NTP Time Server and Time Services on page 113](#)
- [Example: Configuring NTP as a Single Time Source for Router and Switch Clock Synchronization on page 123](#)

Configuring NTP Authentication Keys

Time synchronization can be authenticated to ensure that the switch obtains its time services only from known sources. By default, network time synchronization is unauthenticated. The switch will synchronize to whatever system appears to have the most accurate time. We strongly encourage you to configure authentication of network time services.

To authenticate other time servers, include the **trusted-key** statement at the **[edit system ntp]** hierarchy level. Only time servers that transmit network time packets containing one of the specified key numbers are eligible to be synchronized. Additionally, the key needs to match the value configured for that key number. Other systems can synchronize to the local switch without being authenticated.

```
[edit system ntp]  
trusted-key [ key-numbers ];
```

Each key can be any 32-bit unsigned integer except 0. Include the **key** option in the **peer**, **server**, or **broadcast** statements to transmit the specified authentication key when

transmitting packets. The key is necessary if the remote system has authentication enabled so that it can synchronize to the local system.

To define the authentication keys, include the **authentication-key** statement at the **[edit system ntp]** hierarchy level:

```
[edit system ntp]
authentication-key key-number type type value password;
```

number is the key number, **type** is the authentication type (only Message Digest 5 [MD5] is supported), and **password** is the password for this key. The key number, type, and password must match on all systems using that particular key for authentication.

Related Documentation

- [Understanding NTP Time Servers on page 111](#)
- [Example: Configuring NTP as a Single Time Source for Router and Switch Clock Synchronization on page 123](#)
- [trusted-key on page 319](#)
- [authentication-key](#)

Configuring NTP Authentication Keys (QFabric System)

To configure the authentication keys using the CLI:

1. Configure the authentication-key number.

```
[edit system ntp]
user@switch# set authentication-key key-number
```

For example, to specify key 5:

```
user@switch# set authentication-key 5
```

2. Specify the type of authentication you want to use.

```
[edit system ntp]
user@switch# set authentication-key type type
```



NOTE: MD5 is the only authentication type supported.

For example, to specify MD5:

```
user@switch# set authentication-key type md5
```

Related Documentation

- [NTP Time Server and Time Services Overview \(QFabric System\) on page 118](#)
- [Configuring the NTP Time Server and Time Services \(QFabric System\) on page 116](#)
- [authentication-key on page 310](#)

Configuring the NTP Time Server and Time Services

When you use NTP, configure the switch to operate in one of the following modes:

- Client mode
- Symmetric active mode
- Broadcast mode
- Server mode

The following topics describe how to configure these modes of operation:

1. [Configuring the Switch to Operate in Client Mode on page 114](#)
2. [Configuring the Router or Switch to Operate in Symmetric Active Mode on page 114](#)
3. [Configuring the Router or Switch to Operate in Broadcast Mode on page 115](#)
4. [Configuring the Router or Switch to Operate in Server Mode on page 115](#)

Configuring the Switch to Operate in Client Mode

To configure the local router or switch to operate in client mode, include the **server** statement and other optional statements at the **[edit system ntp]** hierarchy level:

```
[edit system ntp]
server address <key key-number> <version value> <prefer>;
authentication-key key-number type type value password;
boot-server address;
trusted-key [ key-numbers ];
```

Specify the address of the system acting as the time server. You must specify an address, not a hostname.

To include an authentication key in all messages sent to the time server, include the **key** option. The key corresponds to the key number you specify in the **authentication-key** statement, as described in .

By default, the router or switch sends NTP version 4 packets to the time server. To set the NTP version level to 1, 2, or 3, include the **version** option.

If you configure more than one time server, you can mark one server preferred by including the **prefer** option.

The following example shows how to configure the router or switch to operate in client mode:

```
[edit system ntp]
authentication-key 1 type md5 value "$9$EgfcvX7VY4ZEcwgoHjkP5Q3CuREyv87";
boot-server 10.1.1.1;
server 10.1.1.1 key 1 prefer;
trusted-key 1;
```

Configuring the Router or Switch to Operate in Symmetric Active Mode

To configure the local router or switch to operate in symmetric active mode, include the **peer** statement at the **[edit system ntp]** hierarchy level:

```
[edit system ntp]
peer address <key key-number> <version value> <prefer>;
```


Specify the address of the remote system. You must specify an address, not a hostname.

To include an authentication key in all messages sent to the remote system, include the **key** option. The key corresponds to the key number you specify in the **authentication-key** statement.

By default, the router or switch sends NTP version 4 packets to the remote system. To set the NTP version level to 1, 2 or 3, include the **version** option.

If you configure more than one remote system, you can mark one system preferred by including the **prefer** option:

```
peer address <key key-number> <version value> prefer;
```

Configuring the Router or Switch to Operate in Broadcast Mode

To configure the local router or switch to operate in broadcast mode, include the **broadcast** statement at the **[edit system ntp]** hierarchy level:

```
[edit system ntp]  
broadcast address <key key-number> <version value> <tll value>;
```

Specify the broadcast address on one of the local networks or a multicast address assigned to NTP. You must specify an address, not a hostname. If the multicast address is used, it must be **224.0.1.1**.

To include an authentication key in all messages sent to the remote system, include the **key** option. The key corresponds to the key number you specify in the **authentication-key** statement.

By default, the router or switch sends NTP version 4 packets to the remote system. To set the NTP version level to 1, 2, or 3, include the **version** option.

Configuring the Router or Switch to Operate in Server Mode

In server mode, the router or switch acts as an NTP server for clients when the clients are configured appropriately. The only prerequisite for “server mode” is that the router or switch must be receiving time from another NTP peer or server. No other configuration is necessary on the router or switch.

To configure the local router or switch to operate as an NTP server, include the following statements at the **[edit system ntp]** hierarchy level:

```
[edit system ntp]  
authentication-key key-number type type value password;  
server address <key key-number> <version value> <prefer>;  
trusted-key [ key-numbers ];
```

Specify the address of the system acting as the time server. You must specify an address, not a hostname.

To include an authentication key in all messages sent to the time server, include the **key** option. The key corresponds to the key number you specify in the **authentication-key** statement.

By default, the router or switch sends NTP version 4 packets to the time server. To set the NTP version level to 1, or 2, or 3, include the **version** option.

If you configure more than one time server, you can mark one server preferred by including the **prefer** option.

The following example shows how to configure the router or switch to operate in server mode:

```
[edit system ntp]
authentication-key 1 type md5 value "$9$txERuBEreWx-wtuLNdboaUjH.T3AtOESe";
server 172.17.27.46 prefer;
trusted-key 1;
```

**Related
Documentation**

- [Understanding NTP Time Servers on page 111](#)
- [Example: Configuring NTP as a Single Time Source for Router and Switch Clock Synchronization on page 123](#)

Configuring the NTP Time Server and Time Services (QFabric System)

To configure the external time server using the CLI:

1. Configure the IP address of the external time server.

```
[edit system ntp]
user@switch# set server address
```

For example, to set an IP address of 10.1.1.1 for your external time server:

```
user@switch# set server 10.1.1.1
```

2. (Optional) Configure the key number to encrypt authentication fields in packets that are sent to the external time server.

```
[edit system ntp]
user@switch# set server address key key-number
```

For example, to set a key number of 1:

```
user@switch# set server address key
```

3. (Optional) Specify the external time server as a preferred host. Doing this enables the switch to synchronize with the external time server.



NOTE: The switch can synchronize with the external time server, but the external time server cannot synchronize with the switch.

```
[edit system ntp]
user@switch# set server address prefer
```

4. (Optional) Specify the NTP version number to be used in outgoing NTP packets.

```
user@switch# set server address version
```

For example, to specify version 3:

```
user@switch# set server address version 3
```

- Related Documentation**
- [NTP Time Server and Time Services Overview \(QFabric System\) on page 118](#)
 - [ntp on page 315](#)
 - [server on page 317](#)

Configuring the Switch to Listen for Broadcast Messages Using NTP

When you are using NTP, you can configure the local switch to listen for broadcast messages on the local network to discover other servers on the same subnet by including the **broadcast-client** statement at the **[edit system ntp]** hierarchy level:

```
[edit system ntp]  
broadcast-client;
```

When the switch detects a broadcast message for the first time, it measures the nominal network delay using a brief client-server exchange with the remote server. It then enters *broadcast client* mode, in which it listens for, and synchronizes to, succeeding broadcast messages.

To avoid accidental or malicious disruption in this mode, both the local and remote systems must use authentication and the same trusted key and key identifier.

- Related Documentation**
- [Configuring the Switch to Listen for Multicast Messages Using NTP on page 117](#)
 - [Configuring the NTP Time Server and Time Services on page 113](#)
 - [Example: Configuring NTP as a Single Time Source for Router and Switch Clock Synchronization on page 123](#)

Configuring the Switch to Listen for Multicast Messages Using NTP

When you are using NTP, you can configure the local switch to listen for multicast messages on the local network to discover other servers on the same subnet by including the **multicast-client** statement at the **[edit system ntp]** hierarchy level:

```
[edit system ntp]  
multicast-client <address>;
```

When the switch receives a multicast message for the first time, it measures the nominal network delay using a brief client-server exchange with the remote server. It then enters *multicast client* mode, in which it listens for, and synchronizes to, succeeding multicast messages.

You can specify one or more IP addresses. (You must specify an address, not a hostname.) If you do, the router or switch joins those multicast groups. If you do not specify any addresses, the software uses **224.0.1.1**.

To avoid accidental or malicious disruption in this mode, both the local and remote systems must use authentication and the same trusted key and key identifier.

- Related Documentation**
- [Configuring the Switch to Listen for Broadcast Messages Using NTP on page 117](#)
 - [Configuring the NTP Time Server and Time Services on page 113](#)
 - [Example: Configuring NTP as a Single Time Source for Router and Switch Clock Synchronization on page 123](#)

NTP Time Server and Time Services Overview (QFabric System)

Network Time Protocol (NTP) synchronizes the time among all of the various devices in the QFabric system to an external time server. This ensures that time-stamped events, like log entries and database transactions, can be correlated between multiple devices in the QFabric system. The QFabric system can only be in client mode.

Additionally, you can authenticate time synchronization to ensure that the QFabric system obtains its time services only from known sources. By default, network time synchronization is unauthenticated. We strongly encourage you to configure authentication of network time services.

- Related Documentation**
- [Configuring NTP Authentication Keys \(QFabric System\) on page 113](#)
 - [authentication-key on page 310](#)
 - [ntp on page 315](#)
 - [server on page 317](#)

Setting the Date and Time

1. Enter operational mode in the CLI.
2. Enter the following command:

```
user@switch> set date YYYYMMDDHHMM.ss source-address
```

For example, the following command sets the date and time.

```
user@switch# set date 201102151010.55
```
3. To set the date and time from an NTP server, enter the following command:

```
user@switch# set date ntp servers
```

For example, the following command sets the date and time from an NTP server:

```
user@switch# set date ntp 200.40.40.1
```
4. To set the date and time from more than one NTP server, enter the same command:

```
user@switch# set date ntp servers
```

For example, the following command sets the date and time from more than one NTP server:

```
user@switch# set date ntp 200.40.40.1 200.40.40.2
```

Related Documentation • [set date](#)

Synchronizing and Coordinating Time Distribution Using NTP

Using NTP to synchronize and coordinate time distribution in a large network involves these tasks:

1. [Configuring NTP on page 119](#)
2. [Configuring the NTP Boot Server on page 119](#)
3. [Specifying a Source Address for an NTP Server on page 119](#)

Configuring NTP

- To configure NTP on the switch, include the **ntp** statement at the **[edit system]** hierarchy level:

```
[edit system]
ntp {
  authentication-key number type type value password;
  boot-server (address | hostname);
  broadcast <address> <key key-number> <version value> <ttl value>;
  broadcast-client;
  multicast-client <address>;
  peer address <key key-number> <version value> <prefer>;
  server address <key key-number> <version value> <prefer>;
  source-address source-address;
  trusted-key [ key-numbers ];
}
```

Configuring the NTP Boot Server

When you boot the switch, it issues an **ntpdate** request, which polls a network server to determine the local date and time. You need to configure a server that the switch uses to determine the time when the switch boots. Otherwise, NTP will not be able to synchronize to a time server if the server's time appears to be very far off of the local switch's time.

- To configure the NTP boot server, include the **boot-server** statement at the **[edit system ntp]** hierarchy level:

```
[edit system ntp]
boot-server (address | hostname);
```

Specify either the IP address or the hostname of the network server.

Specifying a Source Address for an NTP Server

For IP version 4 (IPv4), you can specify that if the NTP server configured at the **[edit system ntp]** hierarchy level is contacted on one of the loopback interface addresses, the reply always uses a specific source address. This is useful for controlling which source address NTP uses to access your network when it is either responding to or sending an NTP client request from your network.

To configure the specific source address that the reply will always use, and the source address that requests initiated by NTP server will use, include the **source-address** statement at the **[edit system ntp]** hierarchy level:

```
[edit system ntp]
source-address source-address;
```

source-address is a valid IP address configured on one of the switch interfaces.



NOTE: If a firewall filter is applied on the loopback interface, ensure that the source address specified for the NTP server at the **[edit system ntp]** hierarchy level is explicitly included as one of the match criteria in the firewall filter. This enables the Junos OS to accept traffic on the loopback interface from the specified source address.

The following example shows a firewall filter with the source address 10.0.10.100 specified in the **from** statement included at the **[edit firewall filter firewall-filter-name]** hierarchy:

```
[edit firewall filter Loopback-Interface-Firewall-Filter]
term Allow-NTP {
  from {
    source-address {
      172.17.27.46/32; // IP address of the NTP server
      10.0.10.100/32; // Source address specified for the NTP server
    }
  }
  then accept;
}
```

If no source address is configured for the NTP server, include the primary address of the loopback interface in the firewall filter.

**Related
Documentation**

- [Understanding NTP Time Servers on page 111](#)
- [Example: Configuring NTP as a Single Time Source for Router and Switch Clock Synchronization on page 123](#)

Example: Configuring NTP

The Network Time Protocol (NTP) provides the mechanisms to synchronize time and coordinate time distribution in a large, diverse network. NTP uses a returnable-time design in which a distributed subnet of time servers operating in a self-organizing, hierarchical primary-secondary configuration synchronizes local clocks within the subnet and to national time standards by means of wire or radio. The servers also can redistribute reference time using local routing algorithms and time daemons.

This example shows how to configure NTP:

- [Requirements on page 121](#)
- [Overview on page 121](#)
- [Configuration on page 121](#)
- [Verification on page 122](#)

Requirements

This example uses the following software and hardware components:

- Junos OS Release 11.1 or later
- A switch connected to a network on which an NTP boot server and NTP server reside

Overview

Debugging and troubleshooting are much easier when the timestamps in the log files of all switches are synchronized, because events that span a network can be correlated with synchronous entries in multiple logs. We recommend using the Network Time Protocol (NTP) to synchronize the system clocks of your switch and other network equipment.

In this example, an administrator wants to synchronize the time in a switch to a single time source. We recommend using authentication to make sure that the NTP peer is trusted. The **boot-server** statement identifies the server from which the initial time of day and date are obtained when the switch boots. The **server** statement identifies the NTP server used for periodic time synchronization. The **authentication-key** statement specifies that an HMAC-Message Digest 5 (MD5) scheme is used to hash the key value for authentication, which prevents the switch from synchronizing with an attacker's host that is posing as the time server.

Configuration

To configure NTP:

CLI Quick Configuration

To quickly configure NTP, copy the following commands and paste them into the switch's terminal window:

```
[edit system]
set ntp boot-server 10.1.4.1
set ntp server 10.1.4.2
set ntp authentication-key 2 type md5 value "$9$ah1j8"
```

Step-by-Step Procedure

To configure NTP :

1. Specify the boot server:


```
[edit system]
user@switch# set ntp boot-server 10.1.4.1
```
2. Specify the NTP server:


```
[edit system]
user@switch# set ntp server 10.1.4.2
```
3. Specify the key number, authentication type (MD5), and key for authentication:

```
[edit system]
user@switch# set ntp authentication-key 2 type md5 value "$9$aHlj8"
```

Results Check the results:

```
[edit system]
user@switch# show
ntp {
  boot-server 10.1.4.1;
  authentication-key 2 type md5 value "$9$aHlj8"; ## SECRET-DATA
  server 10.1.4.2;
}
```

Verification

To confirm that the configuration is correct, perform these tasks:

- [Checking the Time on page 122](#)
- [Displaying the NTP Peers on page 122](#)
- [Displaying the NTP Status on page 123](#)

Checking the Time

Purpose Check the time that has been set on the switch.

Action Enter the **show system uptime** operational mode command to display the time.

```
user@switch> show system uptime
fpc0:
-----
Current time: 2009-06-12 12:49:03 PDT
System booted: 2009-05-15 06:24:43 PDT (4w0d 06:24 ago)
Protocols started: 2009-05-15 06:27:08 PDT (4w0d 06:21 ago)
Last configured: 2009-05-27 14:57:03 PDT (2w1d 21:52 ago) by admin1
12:49PM up 28 days, 6:24, 1 user, load averages: 0.05, 0.06, 0.01
```

Meaning The output shows that the current date and time are June 12, 2009 and 12:49:03 PDT. The switch booted 4 weeks, 6 hours, and 24 minutes ago, and its protocols were started approximately 3 minutes before it booted. The switch was last configured by user **admin1** on May 27, 2009, and there is currently one user logged in to the switch.

The output also shows that the load average is 0.05 seconds for the last minute, 0.06 seconds for the last 5 minutes, and 0.01 seconds for the last 15 minutes.

Displaying the NTP Peers

Purpose Verify that the time has been obtained from an NTP server.

Action Enter the **show ntp associations** operational mode command to display the NTP server from switch obtained its time.

```
user@switch> show ntp associations
```


remote	refid	st	t	when	poll	reach	delay	offset	jitter
*ntp5.domain1.ne	.GPS.	1	u	414	1024	377	3.435	4.002	0.765

Meaning The asterisk (*) in front of the NTP server name, or peer, indicates that the time is synchronized and obtained from this server. The delay, offset, and jitter are displayed in milliseconds.

Displaying the NTP Status

Purpose View the configuration of the NTP server and the status of the system.

Action Enter the **show ntp status** operational mode command to view the status of the NTP.

```
user@switch> show ntp status
status=0644 leap_none, sync_ntp, 4 events, event_peer/strat_chg,
version="ntpd 4.2.0-a Mon Apr 13 19:09:05 UTC 2009 (1)",
processor="powerpc", system="JUNOS9.5R1.8", leap=00, stratum=2,
precision=-18, rootdelay=2.805, rootdispersion=42.018, peer=48172,
refid=172.17.28.5,
reftime=cddd397a.60e6d7bf Fri, Jun 12 2009 13:30:50.378, poll=10,
clock=cddd3b1b.ec5a2bb4 Fri, Jun 12 2009 13:37:47.923, state=4,
offset=3.706, frequency=-23.018, jitter=1.818, stability=0.303
```

Meaning The output shows status information about the switch and the NTP.

Related Documentation

- [Understanding NTP Time Servers on page 111](#)
- [ntp on page 314](#)

- [Configuring the NTP Time Server and Time Services on page 113](#)
- [CLI Explorer](#)
- *Junos OS Baseline Network Operations Guide*

Example: Configuring NTP as a Single Time Source for Router and Switch Clock Synchronization

Debugging and troubleshooting are much easier when the timestamps in the log files of all the routers or switches are synchronized, because events that span the network can be correlated with synchronous entries in multiple logs. We strongly recommend using the Network Time Protocol (NTP) to synchronize the system clocks of routers, switches, and other network equipment.

By default, NTP operates in an entirely unauthenticated manner. If a malicious attempt to influence the accuracy of a router or switch's clock succeeds, it could have negative effects on system logging, make troubleshooting and intrusion detection more difficult, and impede other management functions.

The following sample configuration synchronizes all the routers or switches in the network to a single time source. We recommend using authentication to make sure that the NTP peer is trusted. The **boot-server** statement identifies the server from which the initial time

of day and date is obtained when the router boots. The **server** statement identifies the NTP server used for periodic time synchronization. The **authentication-key** statement specifies that an HMAC-Message Digest 5 (MD5) scheme should be used to hash the key value for authentication, which prevents the router or switch from synchronizing with an attacker's host posing as the time server.

```
[edit]
system {
  ntp {
    authentication-key 2 type md5 value "$9$aHlj8gqQ1gijyjhgiigiiii"; # SECRET-DATA
    boot-server 10.1.4.1;
    server 10.1.4.2;
  }
}
```

**Related
Documentation**

- *NTP Overview*
- [Understanding NTP Time Servers on page 111](#)
- *authentication-key*
- [boot-server on page 311](#)
- [server on page 317](#)
- [show ntp associations on page 478](#)
- [show ntp status on page 480](#)

PART 9

Non-Stop Software Upgrade (NSSU)

- [Understanding NSSU on page 127](#)

CHAPTER 9

Understanding NSSU

- [Understanding Nonstop Software Upgrade for QFabric Systems on page 127](#)
- [Nonstop Software Upgrade Checklist for QFabric Systems on page 131](#)
- [Performing a Nonstop Software Upgrade on the QFabric System on page 134](#)
- [Verifying Nonstop Software Upgrade for QFabric Systems on page 140](#)

Understanding Nonstop Software Upgrade for QFabric Systems

The framework that underlies a nonstop software upgrade in a QFabric system enables you to upgrade the system in a step-by-step manner and minimize the impact to the continuous operation of the system. This topic explains how a nonstop software upgrade works in a QFabric system, the steps that are involved, and the procedures that you need to implement to experience the benefits of this style of software upgrade.

Nonstop software upgrade enables some QFabric system components to continue operating while similar components in the system are being upgraded. In general, the QFabric system upgrades redundant components in stages so that some components remain operational and continue forwarding traffic while their equivalent counterparts upgrade to a new version of software.



TIP: Use the following guidelines to decide when to implement a nonstop software upgrade:



TIP: Before you perform a nonstop software upgrade, contact JTAC to perform a pre-upgrade health check on the QFabric system.

- If you need to upgrade all components of the system in the shortest amount of time (approximately one hour) and you do not need to retain the forwarding resiliency of the data plane, issue the **request system software add component all** command to perform a standard software upgrade. All components of the QFabric system upgrade simultaneously and expediently, but this type of upgrade does not provide resiliency or switchover capabilities.

- If you need to minimize service impact, preserve the forwarding operations of the data plane during the upgrade, and are willing to take the extra time required for component switchovers (in many cases, several hours), issue the three nonstop software upgrade commands (`request system software nonstop-upgrade (director-group | fabric | node-group)`) described in this topic in the correct order.

**NOTE:**

- Before you begin a nonstop software upgrade, issue the `request system software download` command to copy the software to the QFabric system.
- Each of the 3 nonstop software upgrade steps must be considered parts of the whole process. You must complete all 3 steps of a nonstop software upgrade in the correct order to ensure the proper operation of the QFabric system.
- Open two SSH sessions to the QFabric CLI. Use one session to monitor the upgrade itself and use a second session to verify that the QFabric system components respond to operational mode commands as expected. For more information on verification of the upgrade, see [“Verifying Nonstop Software Upgrade for QFabric Systems” on page 140](#).
- Issue the `show fabric administration inventory` command to verify that all upgraded components are operational at the end of a step before beginning the next step.
- Once you start the nonstop software upgrade process, we strongly recommend that you complete all 3 steps within 12 hours.

The three steps to a successful nonstop software upgrade must be performed in the following order:

- Director group—The first step upgrades the Director devices, the fabric manager Routing Engine, and the diagnostic Routing Engine. To perform the first step, issue the **`request system software nonstop-upgrade director-group`** command. The key actions that occur during a Director group upgrade are:
 1. Connecting to the QFabric system by way of an SSH connection. This action establishes a load-balanced CLI session on one of the Director devices in the Director group.
 2. The QFabric system downloads and installs the new software in both Director devices.
 3. The Director device hosting the CLI session becomes the master for all QFabric system processes running on the Director group, such as the fabric manager and network Node group Routing Engines.
 4. The QFabric system installs the new software for the backup fabric manager Routing Engine on the backup Director device.

5. The backup Director device reboots to activate the new software.
6. The master Director device begins a 15 minute sequence that includes a temporary suspension of QFabric services and a QFabric database transfer. You cannot issue operational mode commands in the QFabric CLI during this period.
7. The QFabric system installs the new software for the fabric manager and diagnostic Routing Engines on the Director group master.
8. The QFabric system switches mastership of all QFabric processes from the master Director device to the backup Director device.
9. The master Director device reboots to activate the new software.
10. The CLI session terminates, and logging back in to the QFabric system with a new SSH connection establishes the session on the new master Director device (the original backup).
11. The previous master Director device resumes operation as a backup and the associated processes (such as the fabric manager and network Node group Routing Engines) become backup as well. The fabric control Routing Engine associated with this Director device returns to active status.



NOTE: After the Director group nonstop software upgrade completes, any Interconnect device or Node device that reboots will automatically download the new software, install it, and reboot again. As a result, try not to restart any QFabric system devices before you complete the rest of the nonstop software upgrade steps.



TIP:

- To enable BGP and OSPF to continue operating on the network Node group during a Director group nonstop service upgrade, we recommend that you configure graceful restart for these routing protocols. For more information on graceful restart, see *Configuring Graceful Restart for QFabric Systems*.
 - Wait 15 minutes after the second Director device returns to service and hosts Routing Engine processes before proceeding to step 2—the fabric upgrade. You can verify the operational status of both Director devices by issuing the `show fabric administration inventory director-group status` command. Also, issue the `show fabric administration inventory infrastructure` command to verify when the Routing Engine processes become load balanced (typically, there will be three to four Routing Engines running on each Director device).
-
- Fabric—The second step upgrades the Interconnect devices and the fabric control Routing Engines. To perform the second step, issue the **request system software nonstop-upgrade fabric** command. The key actions that occur during a fabric upgrade are:

1. The QFabric system downloads, validates, and installs the new software in all Interconnect devices and fabric control Routing Engines (FC-0 and FC-1).
2. One fabric control Routing Engine reboots and comes back online.
3. The other fabric control Routing Engine reboots and comes back online.
4. The first Interconnect device reboots, comes back online, and resumes the forwarding of traffic.
5. Subsequent Interconnect devices reboot one at a time, come back online, and return to service.



NOTE:

- If the software does not load properly on any one of the fabric components, all components revert back to the original software version.
 - If one of the components in a fabric upgrade does not reboot successfully, issue the **request system reboot fabric** command to reattempt the rebooting process for this fabric component and activate the new software.
-
- **Node group**—The third and final step upgrades Node groups. You can choose to upgrade a network Node group, a redundant server Node group, or individual server Node groups. You can upgrade the Node groups one at a time or in groups (known as upgrade groups). However, you must upgrade all Node groups in your QFabric system before you can complete the nonstop software upgrade process. To perform the third step, issue the **request system software nonstop-upgrade node-group** command.

The key actions that occur during a network Node group upgrade are:

1. The QFabric system copies the new software to each Node device one at a time.
2. The QFabric system validates and then installs the new software in all Node devices simultaneously.
3. The system copies the software to the network Node group Routing Engines.
4. The QFabric system validates and then installs the software in the network Node group Routing Engines one at a time -- first the backup, then the master.
5. The backup network Node group Routing Engine reboots and comes back online.
6. The supporting Node devices reboot and come back online one at a time.



NOTE: To reduce the total upgrade duration, configure an upgrade group. All Node devices within the upgrade group reboot at the same time.

-
7. The master network Node group Routing Engine relinquishes mastership to the backup, reboots, and comes back online.

The key actions that occur during a redundant server Node group upgrade are:

1. The QFabric system copies the new software to the backup Node device, then the master Node device.
2. The QFabric system validates and then installs the new software on the backup Node device, then the master Node device.
3. The backup Node device reboots, comes back online, and becomes the master Node device.
4. The previous master Node device reboots and comes back online as a backup Node device.



NOTE: For redundant server Node groups, both Node devices must be online before the upgrade will proceed. If one of the devices is no longer available, remove the Node device from the Node group configuration before you issue the nonstop software upgrade command.

The key actions that occur during a server Node group upgrade for a Node group that contains one member are:

1. The Node device downloads the software package and validates the software.
2. The Node device installs the software and reboots.



NOTE: Because there is no redundancy for Node groups containing a single Node device, traffic loss occurs when the device reboots during the upgrade.

Related Documentation

- [Nonstop Software Upgrade Checklist for QFabric Systems on page 131](#)
- [Performing a Nonstop Software Upgrade on the QFabric System on page 134](#)
- [Verifying Nonstop Software Upgrade for QFabric Systems on page 140](#)
- [request system software nonstop-upgrade on page 468](#)
- [request system software add on page 1296](#)
- [Configuring Graceful Restart for QFabric Systems](#)

Nonstop Software Upgrade Checklist for QFabric Systems

This topic is supported starting in Junos OS Release 14.1 and lists the precautions that must be taken before you begin a nonstop software upgrade (NSSU) on QFabric systems. This topic includes:

- [Preparing for an NSSU on page 132](#)
- [Upgrading Director Groups on page 133](#)
- [Upgrading QFabric on page 133](#)
- [Upgrading Network Node Groups on page 134](#)

Preparing for an NSSU



NOTE: Before you perform a nonstop software upgrade, contact JTAC to perform a pre-upgrade health check on the QFabric system.

In preparation for an NSSU, ensure the following:

- The NSSU is being done during a maintenance window.
- Console connectivity is available for both Director groups.
- The existing configuration has been backed up.

Next, complete the following steps:

1. Collect the output of the **lsvm** and **dns.dump** commands. **lsvm** command provides the universal unique identifiers (UUIDs) of all the virtual machines, and the **dns.dump** provides the IP addresses of all the components that can be used in case of failure.
2. Run the following commands to perform sanity checks of the entire QFabric system:

```
script /opt/pcf/scripts/director_upgrade_sanity_check.pl
script /opt/pcf/scripts/fabric_upgrade_sanity_check.pl
script /opt/pcf/scripts/nodegroup_upgrade_sanity_check.pl
```



NOTE: In case of any errors, contact Juniper Networks Technical Assistance Center (JTAC).

3. Enter the **request component login DRE-0** command to connect to DRE-0. Check the available storage using the **show system storage** command. There should be about 500 MB of space available in the **/var** partition. If not, delete the files under **/var/log**. Also, check the **/var/log/kdm** and **/var/tmp** directories for any large files that can be deleted. Issue the **clear log filename-with-path** command to clear the large files in the **/var/log/** and in **/var/tmp/** directories.
4. Modify the multicast discovery advertisements (MDA) timer on all Fibre Channel (FC) and Fibre Channel over Ethernet (FCoE) gateways connected to QFabric, if applicable. We recommend this step to prevent FC session drops during NSSU. Enter the following command on FC and FCoE gateways: **set fc-fabrics fabric-name protocols fip fka-adv-period 45000**.
5. Enter the following commands to update the system log configuration. This will reduce the amount of system log messages added to the database during upgrade. Logging to an external server does not have any impact during upgrade.
 - **set system syslog host syslog server address**
 - For remote servers:


```
set system syslog file cli_commands interactive-commands any
set system syslog file for all files configured any critical
```

set system syslog file messages any critical

Upgrading Director Groups

The NSSU process individually upgrades members of a Director group, so that one device in the group is always operational. It switches the mastership of the Routing Engine processes to the backup Director device, before upgrading the master Director device.

Before starting the NSSU for the Director group:

- Run the sanity check scripts to ensure that the Director device is ready to be upgraded.

```
root@dg0 ~]# /opt/dcf/scripts/fabric_upgrade_sanity_check.pl
```

- Verify whether both the Director devices are online.

```
root@Qfabric_device> show fabric administration inventory director-group
status
```

Enter the following commands to clean the storage and system log.

```
request system storage cleanup director-group
request system storage cleanup infrastructure FM-0
request system storage cleanup qfabric component all
clear log messages
```

After these processes are complete, you can run the NSSU on the master Director group. After the upgrade is complete, verify the process using the following commands:

```
show version component director-group
show version component DRE-0
show fabric admin inventory
show fabric admin inventory infrastructure
show fabric admin inventory director-group status
```

Restore the system log configuration that you updated in step 5.

Upgrading QFabric

Before starting the NSSU on QFabric:

- Run the sanity check scripts to ensure that the Director device is ready to be upgraded.

```
root@dg0 ~]# /opt/dcf/scripts/fabric_upgrade_sanity_check.pl
```

Enter the following commands to clean the storage.

```
request system storage cleanup infrastructure FC-0
request system storage cleanup infrastructure FC-1
request system storage cleanup interconnect-device ic-name
```

After these processes are complete, you can run the NSSU on QFabric. After the upgrade is complete, verify the process using the following commands:

```
show version component fabric
show fabric admin inventory
show fabric admin inventory infrastructure
show chassis fabric connectivity
```

Upgrading Network Node Groups

Before starting the NSSU on the network Node groups:

- Run the sanity check scripts to ensure that the Node groups are ready to be upgraded.

```
root@dg0 ~]# /opt/dcf/scripts/nodegroup_upgrade_sanity_check.pl
```

Enter the following commands to clean the storage.

```
request system storage cleanup node-group NW-NG-0
```

After these processes are complete, you can run the NSSU on the network Node groups.

After the upgrade is complete, verify the process using the following commands:

```
show version component NW-NG-0
show fabric admin inventory NW-NG-0
show fabric admin inventory infrastructure
show chassis fabric connectivity
```



NOTE: Follow the same procedure for redundant server Node groups (RSNGs) and server Node groups (SNGs).

Release History Table

Release	Description
14.1	This topic is supported starting in Junos OS Release 14.1 and lists the precautions that must be taken before you begin a nonstop software upgrade (NSSU) on QFabric systems.

Related Documentation

- [Understanding Nonstop Software Upgrade for QFabric Systems on page 127](#)
- [Performing a Nonstop Software Upgrade on the QFabric System on page 134](#)

Performing a Nonstop Software Upgrade on the QFabric System



NOTE: Before you perform a nonstop software upgrade, contact JTAC to perform a pre-upgrade health check on the QFabric system.



NOTE: Before you can perform a nonstop software upgrade to Junos OS Release 13.1X50-D10, you must have Junos OS Release 12.2X50-D42 or later installed. You cannot perform a nonstop software upgrade with Junos OS Release 12.2X50-D41 or earlier. Contact the Juniper Technical Assistance Center for information on how to download Junos OS Release 12.2X50-D42. Performing a standard software upgrade (that is, issuing the `request system software add component all` command) does not require that you upgrade to an intermediate Junos OS software release.

To perform a nonstop software upgrade to Junos OS Release 13.1X50-D10:

1. First perform a nonstop software upgrade to Junos OS Release 12.2X50-D42.
2. Then perform a nonstop software upgrade to Junos OS Release 13.1X50-D10.

Nonstop software upgrade enables you to upgrade a QFabric system with minimal packet loss and maximum uptime. This feature introduces several high availability improvements to the QFabric system software upgrade process, including:

- Upgrading members of a Director group or Node group one at a time so that one device in the group is always operational
- Switching mastership of Routing Engine processes to the backup Director device before upgrading the master Director device
- Rebooting Interconnect devices and fabric control Routing Engines one at a time, so that one Interconnect device or one fabric control Routing Engine is always operational
- Switching mastership of a Node group to the backup Node device before upgrading the master Node device
- Specifying an upgrade group if you want all Node devices in a Node group to be upgraded in parallel (which shortens the time of the upgrade)
- Rebooting devices automatically as part of the nonstop upgrade process

When performing a nonstop upgrade, start with the Director group upgrade, then issue the fabric upgrade, and end with the Node group upgrades.



NOTE: Because there is no redundancy for Node groups containing a single Node device, traffic loss occurs when the device reboots during the upgrade. For node-groups defined with two node-devices, both must be online in order for upgrade to succeed.



NOTE: Before you install the software, we recommend that you back up your current configuration files by issuing the `request system software configuration-backup` command.



NOTE: Before you can perform a nonstop software upgrade in your QFabric system, you must first upgrade your system to Junos OS Release 12.2 by using a conventional upgrade method such as issuing the `request system software add component all` command.

This topic describes the following tasks:

- [Backing Up the Current Configuration Files on page 136](#)
- [Downloading Software Files Using a Browser on page 136](#)
- [Retrieving Software Files for Download on page 138](#)
- [Performing a Nonstop Software Upgrade for Director Devices in a Director Group on page 138](#)
- [Performing a Nonstop Software Upgrade for Interconnect Devices and Other Fabric-Related Components on page 138](#)
- [\(Optional\) Creating Upgrade Groups for Node Groups on page 139](#)
- [Performing a Nonstop Software Upgrade on a Node Group on page 139](#)

Backing Up the Current Configuration Files

To back up your current configuration files:

```
user@qfabric> request system software configuration-backup path
```

Back up the configuration files to a local directory, remote server, or removable drive (for example, an external USB flash drive).

For example:

```
user@qfabric> request system software configuration-backup/media/USB/
```

Downloading Software Files Using a Browser



NOTE: To access the download site, you must have a service contract with Juniper Networks and an access account. If you need help obtaining an account, complete the registration form at the Juniper Networks website <https://www.juniper.net/registration/Register.jsp>.

1. Using a Web browser, navigate to the <http://www.juniper.net/support>.
2. Click **Download Software**.
3. In the **Switching** box, click **Junos OS Platforms**.
4. In the **QFX Series** section, click the name of the platform for which you want to download software.
5. Click the **Software** tab and select the release number from the **Release** drop-down list.

6. Select the complete install package you want to download in the **QFabric System Install Package** section:

- If you want to upgrade the entire QFabric system, select **QFabric System - Complete Install Package**.
- If you want to upgrade either a single Node or Interconnect device for recovery purposes, select **Node and Interconnect Device Install Package**. For information on how to perform a recovery installation on either a Node or Interconnect device, see [“Performing a Recovery Installation” on page 189](#).

A login screen appears.

7. Enter your user ID and password and press **Enter**.
8. Read the End User License Agreement, select the **I agree** option button, and then click **Proceed**.
9. Save the `jinstall-qfabric-version.rpm` file on your computer.

Retrieving Software Files for Download

Retrieve the software from the location in which you downloaded it. To do this, issue the **request system software download** command. The software package is copied from where you downloaded it and is placed locally on the QFabric system.

- To retrieve the software:

```
user@qfabric> request system software download /path/package-name
```

For example:

```
user@qfabric> request system software download  
ftp://server/files/jinstall-qfabric-12.2X50-D10.3.rpm
```

Performing a Nonstop Software Upgrade for Director Devices in a Director Group



NOTE: If you reboot any Node groups or Interconnect devices after you perform a nonstop upgrade on the Director group, these devices are upgraded to the same version of software that is running on the Director group.

To upgrade the software on the Director devices in a Director group:

- Issue the **request system software nonstop-upgrade director-group package-name** command.

For example:

```
user@qfabric> request system software nonstop-upgrade director-group  
jinstall-qfabric-12.2X50-D10.3.rpm
```

Performing a Nonstop Software Upgrade for Interconnect Devices and Other Fabric-Related Components

Before you perform a nonstop upgrade on the Interconnect devices and other fabric-related components, verify that both Director devices in the Director group are online. Both Director devices must be online before you attempt to perform a nonstop upgrade. To do verify that both Director devices are online, issue the **show fabric administration inventory director-group status** command.

To install the software on the Interconnect device and other components in the fabric:

- Issue the **request system software nonstop-upgrade fabric package-name** command.

For example:

```
user@qfabric> request system software nonstop-upgrade fabric  
jinstall-qfabric-12.2X50-D10.3.rpm
```


(Optional) Creating Upgrade Groups for Node Groups

Upgrade groups enable two or more Node devices in a Node group, or an entire Node group, to be rebooted at the same time. If you do not create an upgrade group, the Node devices are upgraded one at a time. Before performing a nonstop upgrade on a Node group, create an upgrade group and include the devices you want to reboot at the same time.



NOTE: If you add Node devices that have links to the same link aggregation group (LAG), there might be traffic loss.

- Create the upgrade group by issuing the **set chassis node-group *node-group-name* nssu upgrade-group *upgrade-group-name* node-devices** command at the [edit chassis] hierarchy.

For example:

```
user@qfabric# set chassis node-group nodegroup1 nssu upgrade-group upgrade1 node-devices
[ node1 node2 ]
```

Performing a Nonstop Software Upgrade on a Node Group

When you perform a nonstop software upgrade on a network Node group, the Node devices in the network Node group are upgraded in a serial fashion except when upgrade groups are configured. If you perform a nonstop upgrade on a redundant server Node group, both Node devices must be online for a successful upgrade. If one of the Node devices is no longer available, remove it from the configuration before you perform the nonstop software upgrade. If you perform a nonstop upgrade on a Node group with only one Node device, traffic loss occurs while the Node device is rebooting.



NOTE: You can upgrade multiple Node groups with this command. However, if more than one Node group is specified, there may be traffic loss depending on the topology of the network.

To install software on a Node group:

- Issue the **request system software nonstop-upgrade node-group *node-group-name* *package-name*** command.

To perform a nonstop upgrade on one Node group:

```
user@qfabric> request system software nonstop-upgrade node-group nodegroup1
jinstall-qfabric-12.2X50-D10.3.rpm
```

To perform a nonstop upgrade on more than one Node group:

```
user@qfabric> request system software nonstop-upgrade node-group [nodegroup1
nodegroup2 nodegroup3] jinstall-qfabric-12.2X50-D10.3.rpm
```

**Related
Documentation**

- [Nonstop Software Upgrade Checklist for QFabric Systems on page 131](#)

- [Configuring Graceful Restart for QFabric Systems](#)
- [Understanding Nonstop Software Upgrade for QFabric Systems on page 127](#)
- [Verifying Nonstop Software Upgrade for QFabric Systems on page 140](#)
- [request system software nonstop-upgrade on page 468](#)

Verifying Nonstop Software Upgrade for QFabric Systems



NOTE: Before you perform a nonstop software upgrade, contact JTAC to perform a pre-upgrade health check on the QFabric system.

This topic discusses how you can monitor the progress of each of the three steps in a nonstop software upgrade. By identifying the key actions and events that define this process, you can track the status of the upgrade with confidence.



TIP: When performing a nonstop software upgrade, open two SSH sessions to the QFabric CLI. Use one session to monitor the upgrade itself and use a second session to verify that the QFabric system components respond to operational mode commands as expected.

- [Verifying a Director Group Nonstop Software Upgrade on page 140](#)
- [Verifying a Fabric Nonstop Software Upgrade on page 153](#)
- [Verifying a Redundant Server Node Group Nonstop Software Upgrade on page 155](#)
- [Verifying a Network Node Group Nonstop Software Upgrade on page 158](#)

Verifying a Director Group Nonstop Software Upgrade

Purpose During the Director group portion of a nonstop software upgrade, you should expect to see the Director device that hosts the CLI session selected as the master device. When mastership of all processes moves to the master, the QFabric system upgrades the backup Director device and this Director device reboots. After the backup Director device comes back online, the master Director device suspends CLI operations for 15 minutes, upgrades itself, and reboots. At this point, the backup becomes the new master Director device and you can issue CLI operational commands. Finally, the former master comes back online as a backup and both devices are operational once again. In addition to the steps below, you can issue the **show system software upgrade status** command to view the progress of the upgrade.

Action 1. In one SSH session to the QFabric CLI, verify the current status of the QFabric system by issuing the **show fabric administration inventory**, **show fabric administration inventory director-group status**, and **show fabric session-host** commands. In this case, Director device DG0 is the master device but DG1 hosts the CLI session.

```
session1@qfabric> show fabric administration inventory
```

Item	Identifier	Connection	Configuration
Node group			
NW-NG-0		Connected	Configured
P1507-C		Connected	
RSNG		Connected	Configured
P1550-C		Connected	
P1571-C		Connected	
Interconnect device			
IC-F4912		Connected	Configured
F4912/RE0		Connected	
Fabric manager			
FM-0		Connected	Configured
Fabric control			
FC-0		Connected	Configured
FC-1		Connected	Configured
Diagnostic routing engine			
DRE-0		Connected	Configured

```
session1@qfabric> show fabric administration inventory director-group status
```

```
Director Group Status Tue Jun 5 15:11:26 UTC 2012
```

Member	Status	Role	Mgmt Address	CPU	Free Memory	VMs	Up Time
dg0	online	master	10.49.215.38	8%	17363152k	4	3 days, 20:55 hrs
dg1	online	backup	10.49.215.39	6%	20157440k	3	3 days, 20:55 hrs

Member	Device Id/Alias	Status	Role
dg0	0281052011000001	online	master

Master Services

Database Server	online
Load Balancer Director	online
QFabric Partition Address	online

Director Group Managed Services

Shared File System	online
Network File System	online
Virtual Machine Server	online
Load Balancer/DHCP	online

Hard Drive Status

Volume ID:4	optimal
Physical ID:1	online
Physical ID:0	online
SCSI ID:1	100%

```

SCSI ID:0                                100%

```

```

Size  Used Avail Used% Mounted on
----  -
423G  5.4G 395G   2%  /
99M   16M  79M   17% /boot
93G   7.3G 86G    8% /pbdata

```

Director Group Processes

```

-----
Director Group Manager      online
Partition Manager          online
Software Mirroring          online
Shared File System master   online
Secure Shell Process        online
Network File System         online
DHCP Server master          online      master

FTP Server                  online
Syslog                     online
Distributed Management      online
SNMP Trap Forwarder        online
SNMP Process                online
Platform Management        online

```

Interface Link Status

```

-----
Management Interface        up
Control Plane Bridge        up
Control Plane LAG           up
CP Link [0/2]               up
CP Link [0/1]               up
CP Link [0/0]               up
CP Link [1/2]               down
CP Link [1/1]               down
CP Link [1/0]               down
Crossover LAG               up
CP Link [0/3]               up
CP Link [1/3]               up

```

```

Member Device Id/Alias  Status  Role
-----
dg1      0281052011000032 online  backup

```

Director Group Managed Services

```

-----
Shared File System         online
Network File System        online
Virtual Machine Server     online
Load Balancer/DHCP         online

```

Hard Drive Status

```

-----
Volume ID:8                optimal
Physical ID:1              online
Physical ID:0              online
SCSI ID:1                  100%
SCSI ID:0                  100%

```

Size	Used	Avail	Used%	Mounted on
423G	5.5G	395G	2%	/
99M	16M	79M	17%	/boot
93G	7.3G	86G	8%	/pbdata

Director Group Processes

Director Group Manager	online	
Partition Manager	online	
Software Mirroring	online	
Shared File System master	online	
Secure Shell Process	online	
Network File System	online	
DHCP Server master	online	backup
FTP Server	online	
Syslog	online	
Distributed Management	online	
SNMP Trap Forwarder	online	
SNMP Process	online	
Platform Management	online	

Interface Link Status

Management Interface	up
Control Plane Bridge	up
Control Plane LAG	up
CP Link [0/2]	up
CP Link [0/1]	up
CP Link [0/0]	up
CP Link [1/2]	down
CP Link [1/1]	down
CP Link [1/0]	down
Crossover LAG	up
CP Link [0/3]	up
CP Link [1/3]	up

```
session1@qfabric> show fabric session-host
Identifier: 0281052011000032
```

- In a second SSH session to the QFabric CLI, issue the request for the Director group nonstop software upgrade.

```
root@qfabric> request system software nonstop-upgrade director-group
jinstall-qfabric-12.2X50-D10.3.rpm
```

- If the CLI session is being hosted by the master Director device, skip to step 4. However, if the CLI session is hosted by the backup Director device, the Director group mastership switches to the backup device after you issue the nonstop software upgrade command. In this example, mastership switches to Director device DG1.

```
session1@qfabric> show fabric administration inventory director-group status
Director Group Status Tue Jun 5 15:12:20 UTC 2012
```

Member	Status	Role	Mgmt Address	CPU	Free Memory	VMs	Up Time
dg0	online	backup	10.49.215.38	8%	31905924k	0	3 days, 21:16 hrs
dg1	online	master	10.49.215.39	6%	18010368k	3	3 days, 21:16 hrs

```

Member Device Id/Alias  Status  Role
-----
dg0    0281052011000001 online  backup

Director Group Managed Services
-----
Shared File System      offline
Network File System     offline
Virtual Machine Server  offline
Load Balancer/DHCP      offline

Hard Drive Status
-----
Volume ID:4             optimal
Physical ID:1           online
Physical ID:0           online
SCSI ID:1               100%
SCSI ID:0               100%

Size  Used Avail Used% Mounted on
----  -
423G  5.4G 395G  2%  /
99M   16M  79M   17% /boot

Director Group Processes
-----
Director Group Manager  online
Partition Manager       online
Software Mirroring       online
Shared File System master online
Secure Shell Process    online
Network File System     offline
DHCP Server master      offline  backup

FTP Server               online
Syslog                   online
Distributed Management  offline
SNMP Trap Forwarder     offline
SNMP Process             offline
Platform Management     online

Interface Link Status
-----
Management Interface    up
Control Plane Bridge    up
Control Plane LAG       up
CP Link [0/2]           up
CP Link [0/1]           up
CP Link [0/0]           up
CP Link [1/2]           down
CP Link [1/1]           down
CP Link [1/0]           down
Crossover LAG           up
CP Link [0/3]           up
CP Link [1/3]           up

Member Device Id/Alias  Status  Role
-----
dg1    0281052011000032 online  master

```

Master Services

```

-----
Database Server           online
Load Balancer Director    online
QFabric Partition Address  online

```

Director Group Managed Services

```

-----
Shared File System        online
Network File System       online
Virtual Machine Server    online
Load Balancer/DHCP        online

```

Hard Drive Status

```

-----
Volume ID:8              optimal
Physical ID:1            online
Physical ID:0            online
SCSI ID:1                100%
SCSI ID:0                100%

```

Size Used Avail Used% Mounted on

```

-----
423G 6.0G 395G 2% /
99M 16M 79M 17% /boot
93G 7.3G 86G 8% /pbdata

```

Director Group Processes

```

-----
Director Group Manager    online
Partition Manager         online
Software Mirroring        online
Shared File System master online
Secure Shell Process      online
Network File System       online
DHCP Server master        online      master

FTP Server                online
Syslog                   online
Distributed Management    online
SNMP Trap Forwarder      online
SNMP Process              online
Platform Management       online

```

Interface Link Status

```

-----
Management Interface      up
Control Plane Bridge      up
Control Plane LAG         up
CP Link [0/2]             up
CP Link [0/1]             up
CP Link [0/0]             up
CP Link [1/2]             down
CP Link [1/1]             down
CP Link [1/0]             down
Crossover LAG             up
CP Link [0/3]             up
CP Link [1/3]             up

```

```

session1@qfabric> show fabric session-host
Identifier: 0281052011000032

```

4. The Director group nonstop software upgrade process continues by downloading and installing software for the fabric manager Routing Engines and the Director devices.

root@qfabric>

```
Validating update package jinstall-qfabric-12.2X50-D10.3.rpm
Installing update package jinstall-qfabric-12.2X50-D10.3.rpm
Installing fabric images version 12.2X50-D10.3
Performing cleanup
Package install complete
Installing update package jinstall-qfabric-12.2X50-D10.3.rpm on peer
Triggering Initial Stage of Fabric Manager Upgrade
Updating CCIF default image to 12.2X50-D10.3
Updating FM-0 to Junos version 12.2X50-D10.3
[Status 2012-06-05 15:25:29]: Fabric Manager: Upgrade Initial Stage started
[FM-0 2012-06-05 15:25:38]: FM-0 Master already running on LOCAL DG
[NW-NG-0 2012-06-05 15:25:45]: NW-NG-0 Master already running on LOCAL DG
[FM-0 2012-06-05 15:26:12]: Retrieving package
[FM-0 2012-06-05 15:27:11]: Pushing bundle to re0
[Status 2012-06-05 15:29:06]: Load completed with 0 errors...
[Status 2012-06-05 15:29:06]: Reboot is required to complete upgrade ...
[Status 2012-06-05 15:29:07]: Trying to Connect to Node: FM-0
[Status 2012-06-05 15:29:13]: Rebooting FM-0
[FM-0 2012-06-05 15:29:13]: Waiting for FM-0 to terminate ...
Starting Peer upgrade
```

Initiating rolling upgrade of Director peer: version 12.2X50-D10.3

```
Inform CCIF regarding rolling upgrade
[Peer Update Status]: Validating install package
jinstall-qfabric-12.2X50-D10.3.rpm
[Peer Update Status]: Cleaning up node for rolling phase one upgrade
[Peer Update Status]: Director group upgrade complete
[Peer Update Status]: COMPLETED
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase
one of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase
one of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase
one of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase
one of rolling upgrade
```



```
[Peer Update Status]: Waiting for peer to return after reboot and start phase
one of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase
one of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase
one of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase
one of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase
one of rolling upgrade
[Peer Update Status]: Waiting for peer to complete phase one of rolling upgrade
[Peer Update Status]: Peer completed phase one of rolling upgrade
```

- When the system upgrades and reboots the backup Director device DG0, notice how this device is not displayed in the output of the **show fabric administration inventory director-group status** command. Because Director device DG1 appears, this means that the DG1 is operational and acts as the master device.



NOTE: If your second SSH session is being hosted by the rebooting Director device, your session terminates and you need to log back in to establish a new session running on the active Director device.

```
session1@qfabric> show fabric administration inventory director-group status
Director Group Status Tue Jun  5 15:41:14 UTC 2012
```

Member	Status	Role	Mgmt Address	CPU	Free Memory	VMs	Up Time
dg1	online	master	10.49.215.39	6%	8372272k	4	3 days, 21:25 hrs

Member	Device Id/Alias	Status	Role
dg1	0281052011000032	online	master

Master Services

Database Server	online
Load Balancer Director	online
QFabric Partition Address	online

Director Group Managed Services

Shared File System	online
Network File System	online
Virtual Machine Server	online
Load Balancer/DHCP	online

Hard Drive Status

Volume ID:8	optimal
Physical ID:1	online
Physical ID:0	online
SCSI ID:1	100%
SCSI ID:0	100%

Size	Used	Avail	Used%	Mounted on
------	------	-------	-------	------------

```

-----
423G 6.0G 395G 2% /
99M 16M 79M 17% /boot
93G 7.3G 86G 8% /pbdata

Director Group Processes
-----
Director Group Manager      online
Partition Manager          online
Software Mirroring          online
Shared File System master   online
Secure Shell Process        online
Network File System         online
DHCP Server master          online      master

FTP Server                  online
Syslog                      online
Distributed Management      online
SNMP Trap Forwarder         online
SNMP Process                online
Platform Management         online

Interface Link Status
-----
Management Interface        up
Control Plane Bridge        up
Control Plane LAG           up
CP Link [0/2]                up
CP Link [0/1]                up
CP Link [0/0]                up
CP Link [1/2]                down
CP Link [1/1]                down
CP Link [1/0]                down
Crossover LAG               up
CP Link [0/3]                up
CP Link [1/3]                up

```

6. The upgrade continues with master Director device DG1 suspending CLI services for 15 minutes, transferring mastership to Director device DG0, and then rebooting Director device DG1 (which terminates the CLI session).

root@qfabric>

[Peer Update Status]: Setting peer DG node as the master SFC

Delaying start of local upgrade to allow peer services time to initialize [15 minutes]

Delaying start of local upgrade to allow peer services time to initialize [15 minutes]

Delaying start of local upgrade to allow peer services time to initialize [12 minutes]

Delaying start of local upgrade to allow peer services time to initialize [9 minutes]

Delaying start of local upgrade to allow peer services time to initialize [6 minutes]

Delaying start of local upgrade to allow peer services time to initialize [3 minutes]

[Peer Update Status]: Check for VMs on dg0

Triggering Final Stage of Fabric Manager Upgrade:

Updating FM-0 to Junos version 12.2X50-D10.3

[Status 2012-06-05 16:10:12]: Fabric Manager: Upgrade Final Stage started

[NW-NG-0 2012-06-05 16:10:22]: Transferring NW-NG-0 Mastership to REMOTE DG

```
[NW-NG-0 2012-06-05 16:11:44]: Finished NW-NG-0 Mastership switch
[Status 2012-06-05 16:11:45]: Upgrading FM-0 VM on worker DG to 12.2X50-D10.3
[DRE-0 2012-06-05 16:12:43]: Retrieving package
[DRE-0 2012-06-05 16:13:46]: ----- re0: -----
[Status 2012-06-05 16:15:17]: Load completed with 0 errors...
[Status 2012-06-05 16:15:17]: Reboot is required to complete upgrade ...
[DRE-0 2012-06-05 16:15:22]: Waiting for DRE-0 to terminate ...
[DRE-0 2012-06-05 16:15:34]: Waiting for DRE-0 to come back ...
[DRE-0 2012-06-05 16:18:44]: Running Uptime Test for DRE-0
[DRE-0 2012-06-05 16:18:51]: Uptime Test for DRE-0 Passed ...
[Status 2012-06-05 16:18:51]: DRE-0 booted successfully ...
Performing post install shutdown and cleanup
```

Broadcast message from root (Tue Jun 5 16:18:51 2012):

The system is going down for reboot NOW!
Director group upgrade complete

```
root@qfabric> Read from remote host qfabric-partition0: Connection reset by
peer
Connection to qfabric-partition0 closed.
```

7. Upon reopening the SSH session, notice that Director device DG0 is now the master device hosting the session and Director device DG1 does not appear in the QFabric system inventory while it is rebooting.

```
session1@qfabric> show fabric session-host
Identifier: 0281052011000001
```

```
session1@qfabric> show fabric administration inventory director-group status
Director Group Status Tue Jun 5 16:21:23 UTC 2012
```

Member	Status	Role	Mgmt Address	CPU	Free Memory	VMs	Up Time
dg0	online	master	10.49.215.38	13%	20739560k	3	36:29 mins

Member	Device Id/Alias	Status	Role
dg0	0281052011000001	online	master

Master Services

Database Server	online
Load Balancer Director	online
QFabric Partition Address	online

Director Group Managed Services

Shared File System	online
Network File System	online
Virtual Machine Server	online
Load Balancer/DHCP	online

Hard Drive Status

Volume ID:4	optimal
Physical ID:1	online
Physical ID:0	online
SCSI ID:1	100%
SCSI ID:0	100%

Size	Used	Avail	Used%	Mounted on
423G	5.3G	396G	2%	/
99M	16M	79M	17%	/boot
93G	7.4G	86G	8%	/pbdata

Director Group Processes

Director Group Manager	online	
Partition Manager	online	
Software Mirroring	online	
Shared File System master	online	
Secure Shell Process	online	
Network File System	online	
DHCP Server master	online	master
FTP Server	online	
Syslog	online	
Distributed Management	online	
SNMP Trap Forwarder	online	
SNMP Process	online	
Platform Management	online	

Interface Link Status

Management Interface	up
Control Plane Bridge	up
Control Plane LAG	up
CP Link [0/2]	up
CP Link [0/1]	up
CP Link [0/0]	up
CP Link [1/2]	down
CP Link [1/1]	down
CP Link [1/0]	down
Crossover LAG	up
CP Link [0/3]	up
CP Link [1/3]	up

8. When Director device DG1 comes back online, it returns to the QFabric system inventory as a backup Director device and hosts some of the Routing Engine processes (which should appear load balanced between the master and backup Director devices).

```
session1@qfabric> show fabric administration inventory director-group status
root@qfabric> show fabric administration inventory director-group status
Director Group Status Tue Jun  5 16:41:02 UTC 2012
```

Member	Status	Role	Mgmt Address	CPU	Free Memory	VMs	Up Time
dg0	online	master	10.49.215.38	15%	14759920k	6	56:09 mins
dg1	online	backup	10.49.215.39	8%	31486680k	0	07:51 mins

Member	Device Id/Alias	Status	Role
dg0	0281052011000001	online	master

Master Services

```

Database Server                online
Load Balancer Director         online
QFabric Partition Address      online

Director Group Managed Services
-----
Shared File System             online
Network File System            online
Virtual Machine Server         online
Load Balancer/DHCP             online

Hard Drive Status
-----
Volume ID:4                    optimal
Physical ID:1                  online
Physical ID:0                  online
SCSI ID:1                      100%
SCSI ID:0                      100%

Size  Used Avail Used% Mounted on
----  -
423G  5.3G 396G   2%  /
99M   16M  79M   17% /boot
93G   7.4G 86G    8%  /pbdata

Director Group Processes
-----
Director Group Manager         online
Partition Manager              online
Software Mirroring             online
Shared File System master      online
Secure Shell Process           online
Network File System            online
DHCP Server master             online      master

FTP Server                     online
Syslog                         online
Distributed Management          online
SNMP Trap Forwarder            online
SNMP Process                   online
Platform Management            online

Interface Link Status
-----
Management Interface           up
Control Plane Bridge           up
Control Plane LAG              up
CP Link [0/2]                  up
CP Link [0/1]                  up
CP Link [0/0]                  up
CP Link [1/2]                  down
CP Link [1/1]                  down
CP Link [1/0]                  down
Crossover LAG                  up
CP Link [0/3]                  up
CP Link [1/3]                  up

Member Device Id/Alias  Status  Role
-----
dg1      0281052011000032 online  backup

```

Director Group Managed Services

```

-----
Shared File System          online
Network File System         online
Virtual Machine Server      online
Load Balancer/DHCP          online

```

Hard Drive Status

```

-----
Volume ID:8                 optimal
Physical ID:1               online
Physical ID:0               online
SCSI ID:1                   100%
SCSI ID:0                   100%

```

Size Used Avail Used% Mounted on

```

-----
423G 5.3G 396G 2% /
99M 16M 79M 17% /boot
93G 7.4G 86G 8% /pbdata

```

Director Group Processes

```

-----
Director Group Manager      online
Partition Manager           online
Software Mirroring          online
Shared File System master   online
Secure Shell Process        online
Network File System         online
DHCP Server master          online      backup

FTP Server                   online
Syslog                       online
Distributed Management       online
SNMP Trap Forwarder         online
SNMP Process                online
Platform Management         online

```

Interface Link Status

```

-----
Management Interface        up
Control Plane Bridge        up
Control Plane LAG           up
CP Link [0/2]               up
CP Link [0/1]               up
CP Link [0/0]               up
CP Link [1/2]               down
CP Link [1/1]               down
CP Link [1/0]               down
Crossover LAG               up
CP Link [0/3]               up
CP Link [1/3]               up

```

```
session1@qfabric> show fabric administration inventory infrastructure
```

```
dg0:
```

Routing Engine Type	Hostname	PID	
CPU-Use(%)			
-----	-----	-----	-----
Fabric control	QFabric_default_FC-1_RE0	27906	2.5

Network Node group	QFabric_default_NW-NG-1_RE1	20421	1.8
Fabric manager	FM-0	4211	1.8
Debug Routing Engine	QFabric_DRE	1575	3.3
dg1:			
Routing Engine Type	Hostname	PID	
CPU-Use(%)			

Fabric control	QFabric_default_FC-0_RE0	5686	2.3
Network Node group	QFabric_default_NW-NG-0_RE0	5866	1.9
Fabric manager	FM-1	572	1.6

Verifying a Fabric Nonstop Software Upgrade

Purpose During the fabric portion of a nonstop software upgrade, you should expect to see both fabric control Routing Engines upgrade first, followed by the upgrade of each Interconnect device one at a time. In addition to the steps below, you can issue the **show system software upgrade status** command to view the progress of the upgrade.

Action 1. In an SSH session to the QFabric CLI, issue the request for the fabric nonstop software upgrade.

```

root@qfabric> request system software nonstop-upgrade fabric
install-qfabric-12.2X50-D10.3.rpm
[FC-0      2012-06-05 16:48:53]: Retrieving package
[FC-1      2012-06-05 16:48:53]: Retrieving package
[IC-F4912 2012-06-05 16:48:59]: Retrieving package
[FC-0      2012-06-05 16:49:51]: ----- re0: -----
[FC-1      2012-06-05 16:49:52]: ----- re0: -----
[IC-F4912 2012-06-05 16:49:54]: ----- re0: -----
[IC-F4912 2012-06-05 16:50:42]: Step 1 of 20 Creating temporary file system
[IC-F4912 2012-06-05 16:50:42]: Step 2 of 20 Determining installation source
[IC-F4912 2012-06-05 16:50:43]: Step 3 of 20 Processing format options
[IC-F4912 2012-06-05 16:50:43]: Step 4 of 20 Determining installation slice
[IC-F4912 2012-06-05 16:50:43]: Step 5 of 20 Creating and labeling new slices
[IC-F4912 2012-06-05 16:50:44]: Step 6 of 20 Create and mount new file system
[IC-F4912 2012-06-05 16:50:53]: Step 7 of 20 Getting OS bundles
[IC-F4912 2012-06-05 16:50:53]: Step 8 of 20 Updating recovery media
[IC-F4912 2012-06-05 16:51:17]: Step 9 of 20 Extracting incoming image
[IC-F4912 2012-06-05 16:52:56]: Step 10 of 20 Unpacking OS packages
[IC-F4912 2012-06-05 16:52:59]: Step 11 of 20 Mounting jbase package
[IC-F4912 2012-06-05 16:53:28]: Step 12 of 20 Creating base OS symbolic links
[IC-F4912 2012-06-05 16:54:45]: Step 13 of 20 Creating fstab
[IC-F4912 2012-06-05 16:54:45]: Step 14 of 20 Creating new system files
[IC-F4912 2012-06-05 16:54:46]: Step 15 of 20 Adding jbundle package
[IC-F4912 2012-06-05 16:58:15]: Step 16 of 20 Backing up system data
[IC-F4912 2012-06-05 16:58:18]: Step 17 of 20 Setting up shared partition data
[IC-F4912 2012-06-05 16:58:18]: Step 18 of 20 Checking package sanity in
installation
[IC-F4912 2012-06-05 16:58:18]: Step 19 of 20 Unmounting and cleaning up
temporary file systems
[IC-F4912 2012-06-05 16:58:22]: Step 20 of 20 Setting da0s1 as new active

```

```

partition
[Status 2012-06-05 16:58:34]: Load completed with 0 errors...
[Status 2012-06-05 16:58:34]: Reboot is required to complete upgrade ...
[Status 2012-06-05 16:58:34]: Trying to Connect to Node: FC-0
[Status 2012-06-05 16:58:39]: Rebooting FC-0
[Status 2012-06-05 16:58:39]: Trying to Connect to Node: FC-1
[Status 2012-06-05 16:58:44]: Rebooting FC-1
[Status 2012-06-05 16:58:44]: Trying to Connect to Node: IC-F4912
[Status 2012-06-05 16:58:50]: Rebooting IC-F4912
Success

```

- When the fabric components reboot, they appear as **Disconnected** in the output of the **show fabric administration inventory infrastructure fabric-controls** and **show fabric administration inventory interconnect-devices** commands.

```

session1@qfabric> show fabric administration inventory infrastructure fabric-controls
Item Identifier Connection Configuration
Fabric control
FC-0 Disconnected
FC-1 Disconnected

```

```

session1@qfabric> show fabric administration inventory interconnect-devices IC-F4912
Item Identifier Connection Configuration
Interconnect device
IC-F4912 Disconnected
F4912/RE0 Disconnected

```

- When the fabric components return to full service, they appear as **Connected** in the output of the **show fabric administration inventory** command.

```

session1@qfabric> show fabric administration inventory
Item Identifier Connection Configuration
Node group
NW-NG-0 Connected Configured

P1507-C Connected

RSNG Connected Configured

P1550-C Connected

P1571-C Connected

Interconnect device
IC-F4912 Connected Configured

F4912/RE0 Connected

Fabric manager
FM-0 Connected Configured

Fabric control
FC-0 Connected Configured

FC-1 Connected Configured

Diagnostic routing engine
DRE-0 Connected Configured

```


Verifying a Redundant Server Node Group Nonstop Software Upgrade

Purpose During the redundant server Node group portion of a nonstop software upgrade, you should expect to see the backup Node device upgrade first, followed by the upgrade of the master Node device. Server Node groups with a single device upgrade the device in the same way as a standalone switch. In addition to the steps below, you can issue the **show system software upgrade status** command to view the progress of the upgrade.

Action 1. In an SSH session to the QFabric CLI, issue the request for the redundant server Node group nonstop software upgrade.

```
root@qfabric> request system software nonstop-upgrade node-group RSNG
jinstall-qfabric-12.2X50-D10.3.rpm
Upgrading target(s): RSNG
```

```
[RSNG 2012-06-05 17:26:44]: Starting with package
ftp://169.254.0.3/pub/images/12.2X50-D10.3/jinstall-qfx.tgz
[RSNG 2012-06-05 17:26:44]: Retrieving package
[RSNG 2012-06-05 17:28:56]: Pushing bundle to fpc1
[RSNG 2012-06-05 17:29:26]: fpc1: Validate package...
[RSNG 2012-06-05 17:35:22]: fpc0: Validate package...
[RSNG 2012-06-05 17:35:49]: ----- fpc1 -----
[RSNG 2012-06-05 17:36:25]: Step 1 of 20 Creating temporary file system
[RSNG 2012-06-05 17:36:26]: Step 2 of 20 Determining installation source
[RSNG 2012-06-05 17:36:26]: Step 3 of 20 Processing format options
[RSNG 2012-06-05 17:36:26]: Step 4 of 20 Determining installation slice
[RSNG 2012-06-05 17:36:27]: Step 5 of 20 Creating and labeling new slices
[RSNG 2012-06-05 17:36:27]: Step 6 of 20 Create and mount new file system
[RSNG 2012-06-05 17:36:35]: Step 7 of 20 Getting OS bundles
[RSNG 2012-06-05 17:36:35]: Step 8 of 20 Updating recovery media
[RSNG 2012-06-05 17:36:56]: Step 9 of 20 Extracting incoming image
[RSNG 2012-06-05 17:38:07]: Step 10 of 20 Unpacking OS packages
[RSNG 2012-06-05 17:38:16]: Step 11 of 20 Mounting jbase package
[RSNG 2012-06-05 17:38:41]: Step 12 of 20 Creating base OS symbolic links
[RSNG 2012-06-05 17:39:41]: Step 13 of 20 Creating fstab
[RSNG 2012-06-05 17:39:42]: Step 14 of 20 Creating new system files
[RSNG 2012-06-05 17:39:42]: Step 15 of 20 Adding jbundle package
[RSNG 2012-06-05 17:42:16]: Step 16 of 20 Backing up system data
[RSNG 2012-06-05 17:42:32]: Step 17 of 20 Setting up shared partition data
[RSNG 2012-06-05 17:42:33]: Step 18 of 20 Checking package sanity in
installation
[RSNG 2012-06-05 17:42:33]: Step 19 of 20 Unmounting and cleaning up
temporary file systems
[RSNG 2012-06-05 17:42:36]: Step 20 of 20 Setting da0s2 as new active
partition
[RSNG 2012-06-05 17:42:51]: ----- fpc0 - master -----
[RSNG 2012-06-05 17:42:51]: Step 1 of 20 Creating temporary file system
[RSNG 2012-06-05 17:42:51]: Step 2 of 20 Determining installation source
[RSNG 2012-06-05 17:42:51]: Step 3 of 20 Processing format options
[RSNG 2012-06-05 17:42:51]: Step 4 of 20 Determining installation slice
[RSNG 2012-06-05 17:42:51]: Step 5 of 20 Creating and labeling new slices
[RSNG 2012-06-05 17:42:51]: Step 6 of 20 Create and mount new file system
[RSNG 2012-06-05 17:42:51]: Step 7 of 20 Getting OS bundles
[RSNG 2012-06-05 17:42:51]: Step 8 of 20 Updating recovery media
[RSNG 2012-06-05 17:42:51]: Step 9 of 20 Extracting incoming image
[RSNG 2012-06-05 17:42:51]: Step 10 of 20 Unpacking OS packages
[RSNG 2012-06-05 17:42:51]: Step 11 of 20 Mounting jbase package
[RSNG 2012-06-05 17:42:51]: Step 12 of 20 Creating base OS symbolic links
```

```

[RSNG 2012-06-05 17:42:51]: Step 13 of 20 Creating fstab
[RSNG 2012-06-05 17:42:51]: Step 14 of 20 Creating new system files
[RSNG 2012-06-05 17:42:51]: Step 15 of 20 Adding jbundle package
[RSNG 2012-06-05 17:42:51]: Step 16 of 20 Backing up system data
[RSNG 2012-06-05 17:42:51]: Step 17 of 20 Setting up shared partition data
[RSNG 2012-06-05 17:42:51]: Step 18 of 20 Checking package sanity in
installation
[RSNG 2012-06-05 17:42:51]: Step 19 of 20 Unmounting and cleaning up
temporary file systems
[RSNG 2012-06-05 17:42:51]: Step 20 of 20 Setting da0s2 as new active
partition
[RSNG 2012-06-05 17:43:36]: Rebooting Backup RE
[RSNG 2012-06-05 17:43:36]: ----- Rebooting fpc1 -----
[RSNG 2012-06-05 17:50:12]: Initiating Chassis In-Service-Upgrade
[RSNG 2012-06-05 17:50:33]: Upgrading group: 0 fpc: 0
[RSNG 2012-06-05 17:52:38]: Upgrade complete for group:0
[RSNG 2012-06-05 17:52:38]: Upgrading group: 1 fpc: 1
[RSNG 2012-06-05 17:54:42]: Upgrade complete for group:1
[RSNG 2012-06-05 17:54:42]: Finished processing all upgrade groups, last
group :1
[RSNG 2012-06-05 17:54:48]: Preparing for Switchover
[RSNG 2012-06-05 17:55:38]: Switchover Completed
[Status 2012-06-05 17:55:41]: Upgrade completed with 0 errors
Success

```

2. Issue the **show system software upgrade status** command to view the status of the upgrade.

```

root@qfabric> show system software upgrade status
Wed Jan 16 22:06:02 2013 Software nonstop upgrade on:
RSNG in progress

```

3. During the redundant server Node group upgrade, the backup Node device (in this case, P1571-C) is upgraded first and appears in the **Disconnected** state in the output of the **show fabric administration inventory** command.

```

session1@qfabric> show fabric administration inventory

```

Item	Identifier	Connection	Configuration
Node group			
	NW-NG-0	Connected	Configured
	P1507-C	Connected	
	RSNG	Connected	Configured
	P1550-C	Connected	
	P1571-C	Disconnected	
Interconnect device			
	IC-F4912	Connected	Configured
	F4912/RE0	Connected	
Fabric manager			
	FM-0	Connected	Configured
Fabric control			
	FC-0	Connected	Configured
	FC-1	Connected	Configured

Diagnostic routing engine DRE-0	Connected	Configured
------------------------------------	-----------	------------

4. After the backup Node device comes back online, the master Node device (in this case, P1550-C) appears in the **Disconnected** state in the output of the **show fabric administration inventory** command while the master Node device upgrades its software.

```
session1@qfabric> show fabric administration inventory
```

Item	Identifier	Connection	Configuration
Node group			
NW-NG-0		Connected	Configured
	P1507-C	Connected	
	RSNG	Connected	Configured
	P1550-C	Disconnected	
	P1571-C	Connected	
Interconnect device			
IC-F4912		Connected	Configured
	F4912/RE0	Connected	
Fabric manager			
FM-0		Connected	Configured
Fabric control			
FC-0		Connected	Configured
	FC-1	Connected	Configured
Diagnostic routing engine			
DRE-0		Connected	Configured

5. After both Node devices in the redundant server Node group come back online, both Node devices appear as **Connected** to indicate the successful completion of the Node group nonstop software upgrade step.

```
session1@qfabric> show fabric administration inventory
```

Item	Identifier	Connection	Configuration
Node group			
NW-NG-0		Connected	Configured
	P1507-C	Connected	
	RSNG	Connected	Configured
	P1550-C	Connected	
	P1571-C	Connected	
Interconnect device			
IC-F4912		Connected	Configured
	F4912/RE0	Connected	
Fabric manager			
FM-0		Connected	Configured

Fabric control FC-0	Connected	Configured
FC-1	Connected	Configured
Diagnostic routing engine DRE-0	Connected	Configured

Verifying a Network Node Group Nonstop Software Upgrade

Purpose During the network Node group portion of a nonstop software upgrade, you should expect to see the backup network Node group Routing Engine upgrade first, followed by the Node devices within the network Node group upgrading one at a time, and ending with the upgrade of the master network Node group Routing Engine. In addition to the steps below, you can issue the **show system software upgrade status** command to view the progress of the upgrade.



NOTE: If you configure an upgrade group for Node groups containing 2 or more Node devices, all Node devices within the upgrade group reboot at the same time.

Action 1. In an SSH session to the QFabric CLI, issue the request for the network Node group nonstop software upgrade.

```
root@qfabric> request system software nonstop-upgrade node-group NW-NG-0
jinstall-qfabric-12.2X50-D10.3.rpm
Upgrading target(s): NW-NG-0
```

```
[NW-NG-0 2012-06-01 09:45:06]: Starting with package
ftp://169.254.0.3/pub/images/12.2X50-D10.3/jinstall-qfx.tgz
[NW-NG-0 2012-06-01 09:45:06]: Retrieving package
[NW-NG-0 2012-06-01 09:46:18]: Pushing bundle to fpc0
[NW-NG-0 2012-06-01 09:46:52]: fpc0: Validate package...
[NW-NG-0 2012-06-01 09:53:26]: ----- fpc0 -----
[NW-NG-0 2012-06-01 09:54:01]: Step 1 of 20 Creating temporary file system
[NW-NG-0 2012-06-01 09:54:01]: Step 2 of 20 Determining installation source
[NW-NG-0 2012-06-01 09:54:02]: Step 3 of 20 Processing format options
[NW-NG-0 2012-06-01 09:54:02]: Step 4 of 20 Determining installation slice
[NW-NG-0 2012-06-01 09:54:02]: Step 5 of 20 Creating and labeling new slices
[NW-NG-0 2012-06-01 09:54:03]: Step 6 of 20 Create and mount new file system
[NW-NG-0 2012-06-01 09:54:10]: Step 7 of 20 Getting OS bundles
[NW-NG-0 2012-06-01 09:54:10]: Step 8 of 20 Updating recovery media
[NW-NG-0 2012-06-01 09:54:31]: Step 9 of 20 Extracting incoming image
[NW-NG-0 2012-06-01 09:55:43]: Step 10 of 20 Unpacking OS packages
[NW-NG-0 2012-06-01 09:55:46]: Step 11 of 20 Mounting jbase package
[NW-NG-0 2012-06-01 09:56:09]: Step 12 of 20 Creating base OS symbolic links
[NW-NG-0 2012-06-01 09:57:05]: Step 13 of 20 Creating fstab
[NW-NG-0 2012-06-01 09:57:05]: Step 14 of 20 Creating new system files
[NW-NG-0 2012-06-01 09:57:05]: Step 15 of 20 Adding jbundle package
[NW-NG-0 2012-06-01 09:59:30]: Step 16 of 20 Backing up system data
[NW-NG-0 2012-06-01 09:59:44]: Step 17 of 20 Setting up shared partition data
[NW-NG-0 2012-06-01 09:59:44]: Step 18 of 20 Checking package sanity in
installation
[NW-NG-0 2012-06-01 09:59:44]: Step 19 of 20 Unmounting and cleaning up
```

```

temporary file systems
[NW-NG-0 2012-06-01 09:59:47]: Step 20 of 20 Setting da0s1 as new active
partition
[NW-NG-0 2012-06-01 09:59:55]: Starting with package
ftp://169.254.0.3/pub/images/12.2X50-D10.3/jinstall-dc-re.tgz
[NW-NG-0 2012-06-01 09:59:55]: Retrieving package
[NW-NG-0 2012-06-01 10:01:04]: Pushing bundle to re1
[NW-NG-0 2012-06-01 10:01:35]: re1: Validate package...
[NW-NG-0 2012-06-01 10:02:56]: re0: Validate package...
[NW-NG-0 2012-06-01 10:04:45]: Rebooting Backup RE
[NW-NG-0 2012-06-01 10:08:31]: Initiating Chassis In-Service-Upgrade
[NW-NG-0 2012-06-01 10:08:52]: Upgrading group: 0 fpc: 0
[NW-NG-0 2012-06-01 10:18:33]: Upgrade complete for group:0
[NW-NG-0 2012-06-01 10:18:33]: Finished processing all upgrade groups, last
group :0
[NW-NG-0 2012-06-01 10:18:37]: Preparing for Switchover
[NW-NG-0 2012-06-01 10:18:55]: Switchover Completed
[Status 2012-06-01 10:18:58]: Upgrade completed with 0 errors
Success

```

2. Issue the **show system software upgrade status** command to view the status of the upgrade.

```

root@qfabric> show system software upgrade status
Wed Jan 16 22:06:02 2013 Software nonstop upgrade on:
NW-NG-0 in progress

```

3. Verify the progress of the upgrade by issuing the **show chassis nonstop-upgrade node-group**, **show fabric administration inventory**, **show fabric administration inventory infrastructure**, and **show fabric administration inventory node-groups NW-NG-0** commands. You should see the backup network Node group Routing Engine reboot first, followed by each Node device within the network Node group, and ending with the reboot of master network Node group Routing Engine. Restarting devices appear as **Disconnected** in the output of the **show fabric administration inventory** command and restarting Routing Engines do not appear in output of the **show fabric administration inventory infrastructure** command until they return to service.

Related Documentation

- [Nonstop Software Upgrade Checklist for QFabric Systems on page 131](#)
- [Performing a Nonstop Software Upgrade on the QFabric System on page 134](#)
- [Understanding Nonstop Software Upgrade for QFabric Systems on page 127](#)
- [show chassis nonstop-upgrade node-group on page 475](#)
- *show fabric administration inventory*
- *show fabric administration inventory director-group status*
- *show fabric administration inventory infrastructure*
- *show fabric administration inventory interconnect-devices*
- *show fabric administration inventory node-groups*

PART 10

Passwords

- [Understanding Passwords on page 163](#)

CHAPTER 10

Understanding Passwords

- [Configuring the Root Password on page 163](#)
- [Recovering the Root Password on page 165](#)
- [Example: Changing the Requirements for Junos OS Plain-Text Passwords on page 166](#)

Configuring the Root Password

The Junos OS is preinstalled on the router or switch. When the router or switch is powered on, it is ready to be configured. Initially, you log in as the user **root** with no password. The root directory of a UNIX device is the entry point to all other folders and files on that device. As a result, access to the root directory is restricted by default to a predefined user account known as the *root user*. The root user (also referred to as *superuser*) has unrestricted access and full permissions within the system. The expression “log in as root” is commonly used when an action requires the user to log into the device as the root user.



NOTE: If you configure a blank password using the `encrypted-password` statement at the `[edit system root-authentication]` hierarchy level for root authentication, you can commit a configuration but you *cannot* log in as the root user and gain root level access to the router or switch.

After you log in, you should configure the root (superuser) password by including the **root-authentication** statement at the `[edit system]` hierarchy level and configuring one of the password options:

```
[edit system]
root-authentication {
  (encrypted-password "password"| plain-text-password);
  load-key-file URL filename;
  ssh-dsa "public-key" <from hostname>;
  ssh-ecdsa "public-key" <from hostname>;
  ssh-rsa "public-key" <from hostname>;
}
```

If you configure the **plain-text-password** option, you are prompted to enter and confirm the password:

```
[edit system]
```

```
user@host# set root-authentication plain-text-password
New password: type password here
Retype new password: retype password here
```

The default requirements for plain-text passwords are:

- The password must be between 6 and 128 characters long
 - You can include most character classes in a password (uppercase letters, lowercase letters, numbers, punctuation marks, and other special characters). Control characters are not recommended.
 - Valid passwords must contain at least one change of case or character class.

You can use the **load-key-file** *URL filename* statement to load an SSH key file that was previously generated using **ssh-keygen**. The *URL filename* is the path to the file's location and name. When using this option, the contents of the key file are copied into the configuration immediately after entering the **load-key-file** *URL* statement. This command loads RSA (SSH version 1 and SSH version 2) and DSA (SSH version 2) public keys.

Optionally, you can use the **ssh-dsa**, **ssh-ecdsa**, or **ssh-rsa** statements to directly configure SSH RSA, DSA, or ECDSA keys to authenticate root logins. You can configure more than one public key for SSH authentication of root logins as well as for user accounts. When a user logs in as root, the public keys are referenced to determine whether the private key matches any of them.

To view the SSH keys entries, use the configuration mode **show** command. For example:

```
[edit system]
user@host# set root-authentication load-key-file my-host::ssh/id_dsa.pub
.file.19692 | 0 KB | 0.3 kB/s | ETA: 00:00:00 | 100%
[edit system]
user@host# show
root-authentication {
  ssh-rsa "1024 35 9727638204084251055468226757249864241630322
20740496252839038203869014158453496417001961060835872296
15634757491827360336127644187426594689320773910834481012
68312595772262546166799927831612350043866091586628382248
97467326056611921489539813965561563786211940327687806538
16960202749164163735913269396344008443 boojum@juniper.net"; #
  SECRET-DATA
}
```

Junos-FIPS software has special password requirements. FIPS passwords must be between 10 and 20 characters in length. Passwords must use at least three of the five defined character sets (uppercase letters, lowercase letters, digits, punctuation marks, and other special characters). If Junos-FIPS is installed on the router or switch, you cannot configure passwords unless they meet this standard. If you use the **encrypted-password** option, then a null-password (empty) is not permitted.

You cannot configure a blank password for **encrypted-password** using blank quotation marks (" "). You must configure a password whose number of characters range from 1 through 128 characters and enclose the password in quotation marks.

Related Documentation

- *Configuring the Root Password*
- *Example: Configuring a Plain-Text Password for Root Logins*
- *Example: Configuring SSH Authentication for Root Logins*
- [Example: Changing the Requirements for Junos OS Plain-Text Passwords on page 166](#)
- *Recovering the Root Password*

Recovering the Root Password

If you forget the root password, you can use the password recovery procedure to reset the root password.



NOTE: The root password cannot be recovered on a QFabric system.



NOTE: You need console access to the switch to recover the root password.

To recover the root password:

1. Power off the switch by switching off the AC power outlet of the device or, if necessary, by pulling the power cords out of the device's power supplies.
2. Turn off the power to the management device, such as a PC or laptop computer, that you want to use to access the CLI.
3. Plug one end of the Ethernet rollover cable supplied with the device into the RJ-45-to-DB-9 serial port adapter supplied with the device.
4. Plug the RJ-45-to-DB-9 serial port adapter into the serial port on the management device.
5. Connect the other end of the Ethernet rollover cable to the console port on the device.
6. Turn on the power to the management device.
7. On the management device, start your asynchronous terminal emulation application (such as Microsoft Windows Hyperterminal) and select the appropriate **COM** port to use (for example, **COM1**).
8. Configure the port settings as follows:
 - Bits per second: 9600
 - Data bits: 8
 - Parity: None
 - Stop bits: 1
 - Flow control: None

9. Power on the device by (if necessary) plugging the power cords into the device's power supply, or turning on the power to the device by switching on the AC power outlet the device is plugged into.

The terminal emulation screen on your management device displays the device's boot sequence.

10. When the following prompt appears, press the Spacebar to access the device's bootstrap loader command prompt:

```
Hit [Enter] to boot immediately, or space bar for command prompt.  
Booting [kernel] in 9 seconds...
```

11. At the following prompt, enter **boot -s** to start up the system in single-user mode.

```
ok boot -s
```

12. At the following prompt, enter **recovery** to start the root password recovery procedure.

```
Enter full pathname of shell or 'recovery' for root password recovery or RETURN  
for /bin/sh: recovery
```

13. Enter configuration mode in the CLI.

14. Set the root password. For example:

```
user@switch# set system root-authentication plain-text-password
```

15. At the following prompt, enter the new root password. For example:

```
New password: juniper1  
Retype new password:
```

16. At the second prompt, reenter the new root password.

17. After you have finished configuring the password, commit the configuration.

```
root@host# commit  
commit complete
```

18. Exit configuration mode in the CLI.

19. Exit operational mode in the CLI.

20. At the prompt, enter **y** to reboot the device.

```
Reboot the system? [y/n] y
```

Related Documentation

- *Configuring the Root Password*

Example: Changing the Requirements for Junos OS Plain-Text Passwords

This example shows how to set various maximum and minimum requirements for plain-text passwords to increase password strength.

- [Requirements on page 167](#)
- [Overview on page 167](#)
- [Configuration on page 167](#)

Requirements

This example requires a device running Junos 12.2 or greater. The **minimum-length** and **maximum-length** password requirements statements are available in earlier releases, however, you must have Junos OS Release 12.2 or greater to configure **minimum-lower-cases**, **minimum-numeric**s, **minimum-punctuations**, or **minimum-upper-cases**.

Overview

You can use a variety of requirements to strengthen plain-text passwords for greater security. Junos OS provides a number of possible configurations at the **[edit system login password]** hierarchy level that allow you to require users to create plain-text passwords that conform to a particular set of requirements that may include such things as length, number of changes, type of characters, numbers, or letter case.

Configuration

CLI Quick Configuration To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set system login password minimum-length 12
set system login password maximum-length 22
set system login password minimum-numeric 1
set system login password minimum-upper-cases 1
set system login password minimum-lower-cases 1
set system login password minimum-punctuations 1
```

Configuring Requirements for Plain-Text Passwords

Step-by-Step Procedure This example configures password requirements that require the user to create a password that has a minimum length of 12 characters, a maximum length of 22 characters, and that includes at least one lower-case letter, at least one upper-case letter, at least one punctuation character, and at least one numeric character.

1. Navigate to configuration mode in the **[system login password]** hierarchy level.


```
user@host> edit
[edit]
user@host# edit system login password
```
2. Set a minimum length requirement of 12 characters and a maximum length requirement of 22 characters for user passwords.


```
[edit system login password]
user@host# set minimum-length 12
[edit system login password]
user@host# set maximum-length 22
```
3. Require users to set a password that has at least one lower-case letter and at least one upper-case letter.


```
[edit system login password]
```

```
user@host# set minimum-lower-cases 1
[edit system login password]
user@host# set minimum-upper-cases 1
```

4. Require users to set a password that has at least one punctuation-class character and at least one number.

```
[edit system login password]
user@host# set minimum-punctuations 1
[edit system login password]
user@host# set minimum-numeric 1
```

Results

From configuration mode, confirm your configuration by entering the show command at the edit system login password hierarchy level. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
[edit system login password]
user@host# show
minimum-length 12;
maximum-length 22;
minimum-numeric 1;
minimum-upper-cases 1;
minimum-lower-cases 1;
```

Related Documentation

- *Special Requirements for Junos OS Plain-Text Passwords*
- *password (Login)*

PART 11

Recovery Installation

- [Understanding Recovery Installation on page 171](#)

CHAPTER 11

Understanding Recovery Installation

- Creating an Emergency Boot Device on page 171
- Creating a Snapshot and Using It to Boot a Device on page 172
- Creating a Snapshot and Using It to Boot a QFX3500 and QFX3600 Series Switch on page 174
- Downgrading Software on a QFabric System on page 176
- Performing a QFabric System Recovery Installation on the Director Group on page 182
- Performing a Recovery Installation on page 189
- Performing a Recovery Installation Using an Emergency Boot Device on page 191
- Recovering from a Failed Software Installation on page 192

Creating an Emergency Boot Device

If Junos OS on the device is damaged in some way that prevents the software from loading properly, you can use an emergency boot device to repartition the primary disk and load a fresh installation of Junos OS. Use the following procedure to create an emergency boot device.

Before you begin, you need to download the installation media image for your device and Junos OS release from <http://www.juniper.net/customers/support/>.



NOTE: You can create the emergency boot device on another Juniper Networks switch or router, or any PC or laptop that supports Linux. The steps you take to create the emergency boot device vary, depending on the device.

To create an emergency boot device:

1. Use FTP to copy the installation media image into the **/var/tmp** directory on the device.
2. Insert a USB device into the USB port.
3. From the Junos OS command-line interface (CLI), start the shell:

```
user@device> start shell
%
```
4. Switch to the root account using the **su** command:

```
% su
Password: password
```



NOTE: The password is the root password for the device. If you logged in to the device as root, you do not need to perform this step.

5. Enter the following command on the device:

```
root@device% dd if=/var/tmp/filename of=/dev/da1 bs=16k
The device writes the installation media image to the USB device:

root@device% dd if=/var/tmp/install-media-qfx3500.junos_11.1 of=/dev/da1 bs=16k
11006+1 records in
11006+1 records out
180332544 bytes transferred in 71.764266 secs (2512846 bytes/sec)
```

6. Enter the following command:

```
root@device% dd if=/var/tmp/filename of=/dev/da0 bs=1048576
The device writes the installation media image to the USB device:

root@device% dd if=/var/tmp/jinstall-vjunos-usb-13.2.img of=/dev/da0 bs=1048576
11006+1 records in
11006+1 records out
180332544 bytes transferred in 71.764266 secs (2512846 bytes/sec)
```



NOTE: The device automatically create a recovery Junos OS image.

The “Select a recovery image” menu appears on the console when one of these switches is booted and unable to load a version of Junos OS. You can follow the instructions in the “Select a recovery image” menu to load the Junos OS image for one of these switches.

7. Log out of the shell:

```
root@device% exit
% exit
user@device>
```

Related Documentation

- [USB Port Specifications for the QFX Series](#)
- [Performing a Recovery Installation on page 189](#)
- [Performing a QFabric System Recovery Installation on the Director Group on page 182](#)
- [Performing a Recovery Installation Using an Emergency Boot Device on page 191](#)

Creating a Snapshot and Using It to Boot a Device

The system snapshot feature takes a “snapshot” of the files currently used to run the device—the complete contents of the **/config** directories, which include the running Juniper Networks Junos OS, the active configuration, and the rescue configuration, as well as the host OS—and copies all of these files into an external USB flash drive.

You can use the snapshot to boot the device at the next bootup or as a backup boot option.

The system snapshot feature is especially effective as a bootup option after a partition corruption, as it is the only recovery option that allows you to completely restore the Junos OS and configuration in the event of a corrupted partition on a switch.

This topic includes the following tasks:

- [Creating a Snapshot on an External USB Flash Drive and Using It to Boot the Device on page 173](#)

Creating a Snapshot on an External USB Flash Drive and Using It to Boot the Device

A snapshot can be created on an external USB flash drive after a device is booted using files stored in internal memory.

Ensure that you have the following tools and parts available before creating a snapshot on an external USB flash drive:

- An external USB flash drive that meets the device USB port specifications. See *USB Port Specifications for the QFX Series*.

To create a snapshot on the external USB flash drive and use it to boot the device:

1. Insert the external USB flash drive.
2. Issue the **request system snapshot** command.

```
user@device> request system snapshot
fpc0:
```

```
-----
Starting snapshot to usb (/dev/da0)
Creating snapshot on the host ..
Copying bootable disk image from host ..
Writing to usb (/dev/da0) ..
Copying 'Host OS' to '/dev/da0s1' .. (this may take a few minutes)
Copying 'JUNOS' to '/dev/da0s1' .. (this may take a few minutes)
The following filesystems were archived: / /config Host-OS
```

3. (Optional) Perform this step if you want to boot the device now using the snapshot stored on the external USB flash drive. If you created the snapshot as a backup, do not perform this step.

- Insert the external USB flash drive.
- Power cycle the device.

The external USB flash drive is detected.

- The software prompts you with the following options:

```
Junos Snapshot Installer - (c) Juniper Networks 2013
Reboot
Install Junos Snapshot [13.2-20131115_x_132_x51_vjunos.0
Boot to host shell [debug]
```

- Select **Install Junos Snapshot** to install the snapshot located on the external USB flash drive to the device.

The device copies the software from the external USB flash drive, occasionally displaying status messages. When the software is finished being copied from the external USB flash drive to the device, the device then reboots from the internal flash storage on which the software was just installed. When the reboot is complete, the device displays the Junos OS login prompt:

```
root@device#
```

- Related Documentation**
- [Verifying That a System Snapshot Was Created on a QFX Series Switch on page 245](#)
 - [Understanding System Snapshot on page 241](#)

Creating a Snapshot and Using It to Boot a QFX3500 and QFX3600 Series Switch

The system snapshot feature takes a “snapshot” of the files currently used to run the QFX Series switch—the complete contents of the `/config` and `/var` directories, which include the running Juniper Networks Junos OS, the active configuration, and the rescue configuration—and copies all of these files into an alternate (internal, meaning internal flash, or an external, meaning USB flash) memory source. You can then use these snapshots to boot the switch at the next bootup or as a backup boot option.

The system snapshot feature is especially effective as a bootup option after a partition corruption, as it is the only recovery option that allows you to completely restore the Junos OS and configuration in the event of a corrupted partition.

This topic includes the following tasks:

- [Creating a Snapshot on a USB Flash Drive and Using It to Boot the Switch on page 174](#)
- [Creating a Snapshot on an Internal Flash Drive and Using it to Boot the Switch on page 175](#)
- [Creating a Snapshot on the Alternate Slice of the Boot Media on page 175](#)

Creating a Snapshot on a USB Flash Drive and Using It to Boot the Switch

A snapshot can be created on USB flash memory after a switch is booted using files stored in internal memory.

Ensure that you have the following tools and parts available before creating a snapshot on a USB Flash drive:

- A USB flash drive that meets the QFX Series switch USB port specifications. See *USB Port Specifications for the QFX Series*.

To create a snapshot on USB flash memory and use it to boot the switch:

1. Place the snapshot into USB flash memory:

```
user@switch> request system snapshot partition
```



NOTE: This example uses the `partition` option. If you have already created a partition for the snapshot, you don't need to use the `partition` option.

2. (Optional) Perform this step if you want to boot the switch now using the snapshot stored on the external USB flash drive. If you created the snapshot as a backup, do not perform this step.
 - To reboot the switch using the most recently created snapshot:


```
user@switch> request system reboot
```
 - To reboot the switch using a snapshot in a specific partition on the USB flash drive:


```
user@switch> request system reboot slice 1
```

Creating a Snapshot on an Internal Flash Drive and Using it to Boot the Switch

A snapshot can be created on internal memory after a switch is booted using files stored in external memory.

To create a snapshot in internal memory and use it to boot the switch:

1. Place the snapshot files in internal memory:

```
user@switch> request system snapshot partition
```



NOTE: This example uses the partition option. If you have already created a partition for the snapshot, you don't need to use the partition option.

2. (Optional) Perform this step if you want to boot the switch now using the newly created snapshot. If you created the snapshot as a backup, do not perform this step.
 - To reboot the switch using the most recently created snapshot:


```
user@switch> request system reboot
```
 - To reboot the switch using a snapshot in a specific partition in internal memory:


```
user@switch> request system reboot slice 1
```

Creating a Snapshot on the Alternate Slice of the Boot Media

The alternate slice of the boot media contains a backup software image that the switch can boot from if it is unable to boot from the primary slice. When you upgrade software, the new software image gets copied only to the primary slice of the boot media.

To create a snapshot of the currently booted software image on the backup slice of the boot media:

```
user@switch> request system reboot slice alternate
```

After the system boots up, you will see the following message before the login prompt:

WARNING: THIS DEVICE HAS BOOTED FROM THE BACKUP JUNOS IMAGE

It is possible that the primary copy of JUNOS failed to boot up properly, and so this device has booted up from the backup copy.

Please re-install JUNOS to recover the primary copy in case it has been corrupted.

The system will generate an alarm indicating that the switch has booted from the backup slice.

**Related
Documentation**

- [Verifying That a System Snapshot Was Created on a QFX Series Switch on page 245](#)
- [Understanding System Snapshot on page 241](#)

Downgrading Software on a QFabric System

If a software upgrade or configuration changes have made the QFabric system unstable or inoperable, you can rollback or downgrade to a previous version of software and configuration. The software and configuration that you rollback to is called a restore-point. The restore-point is stored in a dedicated partition. You can create a checksum (MD5 hash) for the partition in which the restore-partition is stored and verify the integrity of the restore-point partition.



NOTE: The ability to downgrade the software does not replace the existing back up and restore functionality.

If possible, perform the following steps before you perform the recovery installation:

1. Ensure that you have an emergency boot device (for example, an external USB flash drive) for each of your Director devices to use during the recovery installation.

You can either use the external USB flash drive containing the software supplied by Juniper Networks, or you can use an external USB flash drive supplied by Juniper Networks on which you install the QFabric system install media.

2. Because the recovery installation process completely overwrites the entire contents of the Director device, make sure you back up any configuration files and initial setup information on a different external USB flash drive before you begin a recovery installation. You will need to restore this information as part of recovery process.

Use the **request system software configuration-backup** command to back up your configuration files and initial setup information:

```
user@switch> request system software configuration-backup path
```



NOTE: To recover the Director group, you must upgrade both Director devices in parallel. If you are recovering only one Director device in a Director group, and the software version will remain the same between the two Director devices, make sure that the other Director device is powered on and operational. If the software version of the Director device you are recovering will be different, make sure that the other Director device is powered off and is not operational.

- (Optional) Creating an Emergency Boot Device Using a Juniper Networks External Blank USB Flash Drive on page 177
- Performing a Recovery Installation Using a Juniper Networks External USB Flash Drive with Preloaded Software on page 178

(Optional) Creating an Emergency Boot Device Using a Juniper Networks External Blank USB Flash Drive

If you do not have an external USB flash drive preloaded with the software from Juniper Networks to use as an emergency boot device, you can create your own, using a blank external USB flash drive provided by Juniper Networks. Download the install media from the Juniper Networks Support website onto your UNIX workstation, uncompress and untar the software, and then burn the software image onto your Juniper Networks external USB (4-gigabyte) flash drive. Make sure you create two emergency boot devices, one for each Director device, so you can perform a recovery installation in parallel.

1. Using a Web browser, navigate to the <http://www.juniper.net/support>.
2. Click **Download Software**.
3. In the *Switchingbox*, click *Junos OS Platforms*.
4. In the *QFX Series* section, click the name of the platform for which you want to download software.
5. Click the *Software* tab and select the release number from the *Release* drop-down list.
6. Select the complete install media you want to download in the *QFabric System Install Media* section.
A login screen appears.
7. Enter your name and password and press **Enter**.
8. Read the End User License Agreement, click the **I agree** radio button, and then click **Proceed**.
9. Log in and save the install media file to your UNIX workstation.
10. Use FTP to access the UNIX workstation where the install media resides.
`ftp ftp://hostname/pathname install-media-qfabric-<version>.img.tgz`
11. When prompted, enter your username and password.
12. Make sure you are in binary mode by entering **binary** at the prompt.

binary

13. Use the **get** command to transfer the installation package from the FTP host to your UNIX workstation.

get install-media-qfabric-<version>.img.tgz

14. Close the FTP session:

bye

15. Untar the *install-media-qfabric-<version>.img.tgz* file on your UNIX workstation.

```
tar -xvzf install-media-qfabric-11.3X30.6.img.tgz
```

16. Insert a blank external USB (4-gigabyte) flash drive supplied by Juniper Networks into your UNIX workstation.

17. Burn the software image you just downloaded to your UNIX workstation onto your external USB flash drive using the **dd** command:

```
dd if=install-media-qfabric-11.3X30.6.img of=/dev/sdb bs=16k
250880+0 records in
250880+0 records out
4110417920 bytes (4.1 GB) copied, 5.10768 seconds, 805 MB/s
```

18. Perform the steps in [“Performing a Recovery Installation Using a Juniper Networks External USB Flash Drive with Preloaded Software” on page 178](#) to continue with the recovery installation.

Performing a Recovery Installation Using a Juniper Networks External USB Flash Drive with Preloaded Software

This procedure describes how to perform a recovery installation using an external USB flash drive that contains Junos OS software.



NOTE: Since the recovery installation process completely overwrites the entire contents of the Director device, you will need to restore the required configuration files and initial setup information. The following procedure assumes you previously saved these backup files with the **request system software configuration-backup** command. Ensure that you have these backup files available on an external USB flash drive before you perform the following steps.

1. Insert the external USB flash drive into the Director device.
2. Perform one of the following tasks:
 - If you have access to the default partition, reboot the Director device by issuing the **request system reboot director-group** command.
 - If you do not have access to the default partition, power cycle the Director device.

The following menu appears on the Director device console when the Director device boots up:

```
Juniper Networks QFabric Director Install/Recovery Media
- To boot from the local disk, wait 10 seconds or press the Enter key.
- To reinstall the QFabric software on this Director device, type: install
```


3. Type **install** and then press **Enter** to install the software on the Director device.

Once the installation process is complete, the Director device reboots, and the following menu appears on the Director device console:

```
Juniper Networks QFabric Director Install/Recovery Media
- To boot from the local disk, wait 10 seconds or press the Enter key.
- To reinstall the QFabric software on this Director device, type: install
```

4. Press **Enter**.

The Director device reboots from the local disk on which the software was just installed.

5. Log in as root on the Director device.

The following menu appears on the Director device console:

```
Before you can access the QFabric system, you must complete the initial setup
of the Director group by using the steps that follow.
If the initial setup procedure does not complete successfully, log out of the
Director device and then log back in to restart
this setup menu.
```

Continue?[y/n]

6. Enter **n** to bypass the initial setup script and enter the Director device root directory, where you can mount the external USB flash drive containing the configuration files and initial setup information.

7. Issue the **ls /mnt** command to list the *mount* directory.

```
root@dg0 ~]# ls /mnt
```

8. Issue the **mkdir** command to create a directory within the mount directory.

```
root@dg0 ~]# mkdir /mnt/myusb
```

9. Issue the **mount /dev/sdb2 /mnt/myusb/** command to mount the external USB flash drive to the local drive of the Director device.

```
root@dg0 ~]# mount /dev/sdb2 /mnt/myusb/
```

10. Issue the **ls -la /mnt/myusb/** command to verify the contents of your mounted external USB flashdrive.

```
root@dg0 ~]# ls -la /mnt/myusb/
total 1770884
drwxr-xr-x 2 root root      4096 Sep  7 05:16 .
drwxr-xr-x 3 root root      4096 Sep  7 10:15 ..
-rw-r--r-- 1 root root    4249 Sep  7 03:52 mybackup-20110907
```

11. Exit the Director device and log back in as root on the Director device.

The following menu appears:

```
Before you can access the QFabric system, you must complete the initial setup
of the Director group by using the steps that follow.
If the initial setup procedure does not complete successfully, log out of the
Director device and then log back in to restart
this setup menu.
```

```
Continue?[y/n] y
Initial Configuration
```

You may enter the configuration manually or restore from a backup.

```
Specify a backup file? [y/n] : y
Please specify the full path of the configuration backup file. :
/mnt/myusb/mybackup-20110907
```

12. Enter **y** to continue.

13. Enter **y** and specify the path to the backup configuration file located on the external USB flash drive.

```
/mnt/myusb/mybackup-20110907
```

The following messages appear:

```
Saving temporary configuration...
Configuring peer...
connect error for 1.1.1.2:9001
Configuring local interfaces...
Configuring interface eth0 with [10.49.213.163/24:10.49.213.254]
Configured interface eth0 with [10.49.213.163/24:10.49.213.254]
Configuring QFabric software with initial pool of 4000 MAC addresses
[00:10:00:00:00:00 - 00:10:00:00:0f:3b]
Configuring QFabric address [10.49.213.50]
Reconfiguring QFabric software static configuration
Applying the new Director Device password
Applying the QFabric component password
First install initial configuration, generating and sharing SSH keys.
First install initial configuration, generating SSH keys.
connect error for 1.1.1.2:9001
Shared SSH keys.
Configuration complete. Director Group services will auto start within 30
seconds.
```

The Director device reboots from the local disk on which the software was just installed. Exit the Director device session and log in to the QFabric default partition CLI.

14. Issue the **request system software configuration-restore** command and specify the path to the backup configuration file located on the external USB flash drive to load the previously saved QFabric system configuration.

15. From the default partition, issue the **request system reboot node-group all** command to reboot all of the Node groups in the QFabric system to ensure that all Node devices are running the same version of software as the Director-group.

```
user@switch> request system reboot node-group all
```

16. From the default partition, issue the **request system reboot fabric** command to reboot the Interconnect devices and the other components in the fabric in the QFabric system to ensure that Interconnect devices are running the same version of software as the Director group.

```
user@switch> request system reboot fabric
```

17. Log in to the default partition and issue the **show version component all** command to verify that all components are running the same version of software.

```
user@switch> show version component all
dg1:
-
Hostname: qfabric
Model: qfx3100
JUNOS Base Version [11.3X30.6]

dg0:
```

```

-
Hostname: qfabric
Model: qfx3100
JUNOS Base Version [11.3X30.6]

NW-NG-0:
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

FC-0:
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

FC-1:
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

DRE-0:
-
Hostname: dre-0
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

FM-0:
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]

```

```
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

nodedevice1:
-
Hostname: qfabric
Model: QFX3500
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

interconnectdevice1:
-
Hostname: qfabric
Model: QFX3108
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]
warning: from interconnectdevice0: Disconnected
```

Performing a QFabric System Recovery Installation on the Director Group

If the software on your QFabric system is damaged in some way that prevents the software from loading correctly, or you need to upgrade the software on your QFabric system, you may need to perform a recovery installation on the Director group.

If possible, perform the following steps before you perform the recovery installation:

1. Ensure that you have an emergency boot device (for example, an external USB flash drive) for each of your Director devices to use during the recovery installation.

You can either use the external USB flash drive containing the software supplied by Juniper Networks, or you can use an external USB flash drive supplied by Juniper Networks on which you install the QFabric system install media.

2. Because the recovery installation process completely overwrites the entire contents of the Director device, make sure you back up any configuration files and initial setup information on a different external USB flash drive before you begin a recovery installation. You will need to restore this information as part of recovery process.

Use the **request system software configuration-backup** command to back up your configuration files and initial setup information:

```
user@switch> request system software configuration-backup path
```



NOTE: To recover the Director group, you must upgrade both Director devices in parallel. If you are recovering only one Director device in a Director group, and the software version will remain the same between the two Director devices, make sure that the other Director device is powered on and operational. If the software version of the Director device you are recovering will be different, make sure that the other Director device is powered off and is not operational.

- (Optional) Creating an Emergency Boot Device Using a Juniper Networks External Blank USB Flash Drive on page 183
- Performing a Recovery Installation Using a Juniper Networks External USB Flash Drive with Preloaded Software on page 184

(Optional) Creating an Emergency Boot Device Using a Juniper Networks External Blank USB Flash Drive

If you do not have an external USB flash drive preloaded with the software from Juniper Networks to use as an emergency boot device, you can create your own, using a blank external USB flash drive provided by Juniper Networks. Download the install media from the Juniper Networks Support website onto your UNIX workstation, uncompress and untar the software, and then burn the software image onto your Juniper Networks external USB (4-gigabyte) flash drive. Make sure you create two emergency boot devices, one for each Director device, so you can perform a recovery installation in parallel.

1. Using a Web browser, navigate to the <http://www.juniper.net/support>.
2. Click **Download Software**.
3. In the *Switchingbox*, click *Junos OS Platforms*.
4. In the *QFX Series* section, click the name of the platform for which you want to download software.
5. Click the *Software* tab and select the release number from the *Release* drop-down list.
6. Select the complete install media you want to download in the *QFabric System Install Media* section.
A login screen appears.
7. Enter your name and password and press **Enter**.
8. Read the End User License Agreement, click the **I agree** radio button, and then click **Proceed**.
9. Log in and save the install media file to your UNIX workstation.
10. Use FTP to access the UNIX workstation where the install media resides.

```
ftp ftp://hostname/pathname install-media-qfabric-<version>.img.tgz
```
11. When prompted, enter your username and password.

12. Make sure you are in binary mode by entering **binary** at the prompt.

binary

13. Use the **get** command to transfer the installation package from the FTP host to your UNIX workstation.

get install-media-qfabric-<version>.img.tgz

14. Close the FTP session:

bye

15. Untar the *install-media-qfabric-<version>.img.tgz* file on your UNIX workstation.

```
tar -xvzf install-media-qfabric-11.3X30.6.img.tgz
```

16. Insert a blank external USB (4-gigabyte) flash drive supplied by Juniper Networks into your UNIX workstation.

17. Burn the software image you just downloaded to your UNIX workstation onto your external USB flash drive using the **dd** command:

```
dd if=install-media-qfabric-11.3X30.6.img of=/dev/sdb bs=16k
250880+0 records in
250880+0 records out
4110417920 bytes (4.1 GB) copied, 5.10768 seconds, 805 MB/s
```

18. Perform the steps in [“Performing a Recovery Installation Using a Juniper Networks External USB Flash Drive with Preloaded Software” on page 178](#) to continue with the recovery installation.

Performing a Recovery Installation Using a Juniper Networks External USB Flash Drive with Preloaded Software

This procedure describes how to perform a recovery installation using an external USB flash drive that contains Junos OS software.



NOTE: Since the recovery installation process completely overwrites the entire contents of the Director device, you will need to restore the required configuration files and initial setup information. The following procedure assumes you previously saved these backup files with the **request system software configuration-backup** command. Ensure that you have these backup files available on an external USB flash drive before you perform the following steps.

1. Insert the external USB flash drive into the Director device.
2. Perform one of the following tasks:
 - If you have access to the default partition, reboot the Director device by issuing the **request system reboot director-group** command.
 - If you do not have access to the default partition, power cycle the Director device.

The following menu appears on the Director device console when the Director device boots up:

Juniper Networks QFabric Director Install/Recovery Media

- To boot from the local disk, wait 10 seconds or press the Enter key.
- To reinstall the QFabric software on this Director device, type: install

3. Type **install** and then press **Enter** to install the software on the Director device.

Once the installation process is complete, the Director device reboots, and the following menu appears on the Director device console:

Juniper Networks QFabric Director Install/Recovery Media

- To boot from the local disk, wait 10 seconds or press the Enter key.
- To reinstall the QFabric software on this Director device, type: install

4. Press **Enter**.

The Director device reboots from the local disk on which the software was just installed.

5. Log in as root on the Director device.

The following menu appears on the Director device console:

Before you can access the QFabric system, you must complete the initial setup of the Director group by using the steps that follow.
If the initial setup procedure does not complete successfully, log out of the Director device and then log back in to restart this setup menu.

Continue?[y/n]

6. Enter **n** to bypass the initial setup script and enter the Director device root directory, where you can mount the external USB flash drive containing the configuration files and initial setup information.

7. Issue the **ls /mnt** command to list the *mount* directory.

```
root@dg0 ~]# ls /mnt
```

8. Issue the **mkdir** command to create a directory within the mount directory.

```
root@dg0 ~]# mkdir /mnt/myusb
```

9. Issue the **mount /dev/sdb2 /mnt/myusb/** command to mount the external USB flash drive to the local drive of the Director device.

```
root@dg0 ~]# mount /dev/sdb2 /mnt/myusb/
```

10. Issue the **ls -la /mnt/myusb/** command to verify the contents of your mounted external USB flashdrive.

```
root@dg0 ~]# ls -la /mnt/myusb/
total 1770884
drwxr-xr-x 2 root root      4096 Sep  7 05:16 .
drwxr-xr-x 3 root root      4096 Sep  7 10:15 ..
-rw-r--r-- 1 root root    4249 Sep  7 03:52 mybackup-20110907
```

11. Exit the Director device and log back in as root on the Director device.

The following menu appears:

Before you can access the QFabric system, you must complete the initial setup of the Director group by using the steps that follow.
If the initial setup procedure does not complete successfully, log out of the Director device and then log back in to restart this setup menu.

Continue?[y/n] y

Initial Configuration

You may enter the configuration manually or restore from a backup.

Specify a backup file? [y/n] : y

Please specify the full path of the configuration backup file. :
/mnt/myusb/mybackup-20110907

12. Enter **y** to continue.

13. Enter **y** and specify the path to the backup configuration file located on the external USB flash drive.

/mnt/myusb/mybackup-20110907

The following messages appear:

```
Saving temporary configuration...
Configuring peer...
connect error for 1.1.1.2:9001
Configuring local interfaces...
Configuring interface eth0 with [10.49.213.163/24:10.49.213.254]
Configured interface eth0 with [10.49.213.163/24:10.49.213.254]
Configuring QFabric software with initial pool of 4000 MAC addresses
[00:10:00:00:00:00 - 00:10:00:00:0f:3b]
Configuring QFabric address [10.49.213.50]
Reconfiguring QFabric software static configuration
Applying the new Director Device password
Applying the QFabric component password
First install initial configuration, generating and sharing SSH keys.
First install initial configuration, generating SSH keys.
connect error for 1.1.1.2:9001
Shared SSH keys.
Configuration complete. Director Group services will auto start within 30
seconds.
```

The Director device reboots from the local disk on which the software was just installed.
Exit the Director device session and log in to the QFabric default partition CLI.

14. Issue the **request system software configuration-restore** command and specify the path to the backup configuration file located on the external USB flash drive to load the previously saved QFabric system configuration.

15. From the default partition, issue the **request system reboot node-group all** command to reboot all of the Node groups in the QFabric system to ensure that all Node devices are running the same version of software as the Director-group.

```
user@switch> request system reboot node-group all
```

16. From the default partition, issue the **request system reboot fabric** command to reboot the Interconnect devices and the other components in the fabric in the QFabric system to ensure that Interconnect devices are running the same version of software as the Director group.

```
user@switch> request system reboot fabric
```

17. Log in to the default partition and issue the **show version component all** command to verify that all components are running the same version of software.

```
user@switch> show version component all
dg1:
-
Hostname: qfabric
```



```
Model: qfx3100
JUNOS Base Version [11.3X30.6]

dg0:
-
Hostname: qfabric
Model: qfx3100
JUNOS Base Version [11.3X30.6]

NW-NG-0:
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

FC-0:
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

FC-1:
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

DRE-0:
-
Hostname: dre-0
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

FM-0:
```

```
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

nodedevice1:
-
Hostname: qfabric
Model: QFX3500
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

interconnectdevice1:
-
Hostname: qfabric
Model: QFX3108
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]
warning: from interconnectdevice0: Disconnected
```

- Related Documentation**
- *Performing the QFabric System Initial Setup on a QFX3100 Director Group*
 - [Upgrading Software on a QFabric System on page 223](#)
 - [request system software configuration-backup on page 566](#)
 - [request system software configuration-restore on page 567](#)

Performing a Recovery Installation

If Junos OS on your device is damaged in some way that prevents the software from loading correctly, you may need to perform a recovery installation using an emergency boot device (for example, a USB flash drive) to restore the default factory installation. Once you have recovered the software, you need to restore the device configuration. You can either create a new configuration as you did when the device was shipped from the factory, or if you saved the previous configuration, you can simply restore that file to the device.

You can also use a system snapshot as a bootup option when your Junos OS or configuration is damaged. The system snapshot feature takes a “snapshot” of the files currently used to run the device—the complete contents of the `/config` directories, which include the running Juniper Networks Junos OS, the active configuration, and the rescue configuration, as well as the host OS—and copies all of these files into an external USB flash drive. See “[Understanding System Snapshot](#)” on page 241.

If at all possible, you should try to perform the following steps before you perform the recovery installation:

1. Ensure that you have an emergency boot device to use during the installation. See “[Creating an Emergency Boot Device](#)” on page 171 for information on how to create an emergency boot device.
2. Copy the existing configuration in the file `/config/juniper.conf.gz` from the device to a remote system, such as a server, or to an emergency boot device. For extra safety, you can also copy the backup configurations (the files named `/config/juniper.conf.n`, where *n* is a number from 0 through 9) to a remote system or to an emergency boot device.



WARNING: The recovery installation process completely overwrites the entire contents of the internal flash storage.

3. Copy any other stored files to a remote system as desired.

To reinstall Junos OS:

1. Insert the emergency boot device into the QFX Series device.
2. Reboot the QFX Series device.



NOTE: Do not power off the device if it is already on.

```
[edit system]
user@device> request system reboot
```

If you do not have access to the CLI, power cycle the QFX Series device.

The emergency boot device (external USB install media) is detected. At this time, you can load the Junos OS from the emergency boot device onto the internal flash storage.

3. The software prompts you with the following options:

```
External USB install media detected.
You can load Junos from this media onto an internal drive.
Press 'y' to proceed, 'f' to format and install, or 'n' to abort.
Do you wish to continue ([y]/f/n)? f
```

4. Type **f** to format the internal flash storage and install the Junos OS on the emergency boot device onto the internal flash storage.

If you do not want to format the internal flash storage, type **y**.

The following messages are displayed:

```
Installing packages from external USB drive da1
Packages will be installed to da0, media size: 8G
```

```
Processing format options
Fri September 4 01:18:44 UTC 2012
```

```
-- IMPORTANT INFORMATION --
Installer has detected settings to format system boot media.
This operation will erase all data from your system.
```

```
Formatting installation disk .. this will take a while, please wait
Disabling platform watchdog - threshold 12 mins
```

```
Determining installation slice
Fri September 4 01:27:07 UTC 2012
```

5. The device copies the software from the emergency boot device, occasionally displaying status messages. Copying the software can take up to 12 minutes.

When the device is finished copying the software, you are presented with the following prompt:

```
*** Fri September 4 01:19:00 UTC 2012***
Installation successful..
Please select one of the following options:
Reboot to installed Junos after removing install media (default) ... 1
Reboot to installed Junos by disabling install media ..... 2
Exit to installer debug shell ..... 3
Install Junos to alternate slice ..... 4
Your choice: 4
NOTE: System installer will now install Junos to alternate slice
Do not power off or remove the external installer media or
interrupt the installation mechanism.
```

6. Select **4** to install Junos OS to the alternate slice of the partition, and then press Enter.
7. Remove the emergency boot device when prompted and then press Enter. The device then reboots from the internal flash storage on which the software was just installed. When the reboot is complete, the device displays the login prompt.
8. Create a new configuration as you did when the device was shipped from the factory, or restore the previously saved configuration file to the device.

Related Documentation • [Creating an Emergency Boot Device on page 171](#)

Performing a Recovery Installation Using an Emergency Boot Device

If Junos OS on your device is damaged in some way that prevents the software from loading correctly, you may need to perform a recovery installation using an emergency boot device (for example, a USB flash drive) to restore the default factory installation. Once you have recovered the software, you need to restore the device configuration. You can either create a new configuration as you did when the device was shipped from the factory, or if you saved the previous configuration, you can simply restore that file to the device.

If at all possible, you should try to perform the following steps before you perform the recovery installation:

1. Ensure that you have an emergency boot device to use during the installation. See [“Creating an Emergency Boot Device” on page 171](#) for information on how to create an emergency boot device.
2. Copy the existing configuration in the file `/config/juniper.conf.gz` from the device to a remote system, such as a server, or to an emergency boot device. For extra safety, you can also copy the backup configurations (the files named `/config/juniper.conf.n`, where *n* is a number from 0 through 9) to a remote system or to an emergency boot device.

You can use the system snapshot feature to complete this step. The system snapshot feature takes a “snapshot” of the files currently used to run the QFX Series switch—the complete contents of the `/config` and `/var` directories, which include the running Juniper Networks Junos OS, the active configuration, and the rescue configuration—and copies all of these files into a memory source. See [“Creating a Snapshot and Using It to Boot a QFX3500 and QFX3600 Series Switch” on page 174](#) or [“Creating a Snapshot and Using It to Boot a Device” on page 172](#).



WARNING: The recovery installation process completely overwrites the entire contents of the internal flash storage.

3. Copy any other stored files to a remote system as desired.

To reinstall Junos OS:

1. Insert the emergency boot device into the device.
2. Power cycle the device.

The emergency boot device (external USB install media) is detected. At this time, you can load the Junos OS from the emergency boot device onto the internal flash storage.

3. The software prompts you with the following options:

```
Junos Snapshot Installer - (c) Juniper Networks 2013
Reboot
```

```
Install Junos Snapshot  
[13.2-20131115_x_132_x51_vjunos.0Boot to host shell [debug]
```

On some devices, including a QFX5100 or EX4600 switch, the **Junos Recovery** option might also appear. The **Junos Recovery** option allows you to install a recovery version of Junos OS that was automatically saved when the switch was previously running.

4. Select **Install Junos** to format the internal flash storage and install the Junos OS on the emergency boot device onto the internal flash storage.
5. The device copies the software from the emergency boot device, occasionally displaying status messages. Copying the software can take up to 12 minutes.

When the software is finished being copied from the emergency device to the device, the device reboots from the internal flash storage on which the software was just installed. When the reboot is complete, the device displays the Junos OS login prompt:

```
root@switch#
```

6. Create a new configuration as you did when the device was shipped from the factory, or restore the previously saved configuration file to the device.
7. Remove the emergency boot device.

Related Documentation

- [Creating an Emergency Boot Device on page 171](#)

Recovering from a Failed Software Installation

- | | |
|-----------------|--|
| Problem | Description: If the Junos OS appears to have been installed but the CLI does not work, or if the switch has no software installed, you can use this recovery installation procedure to install the Junos OS. |
| Solution | If a Junos OS image already exists on the switch, you can either install the new Junos OS package in a separate partition, in which case both Junos OS images remain on the switch, or you can remove the existing Junos OS image before you start the new installation process. |



NOTE: QFX5100, EX4600, and OCX Series switches do not have a separate partition to reinstall a Junos OS image.

A recovery image is created automatically on these switches. If a previously-running switch is powered on and unable to boot using a Junos OS image, you can boot the switch using the recovery Junos OS image by selecting an option in the “Select a recovery image” menu.

We suggest creating a system snapshot on your switch onto the external USB flash drive, and using the snapshot for recovery purposes. The system snapshot feature takes a “snapshot” of the files currently used to run the device—the complete contents of the /config directories, which include the running Juniper Networks Junos OS, the active configuration, and the rescue configuration, as well as the host OS—and copies all of these files into an external USB flash drive. See [“Creating a Snapshot and Using It to Boot a QFX3500 and QFX3600 Series Switch” on page 174](#) or [“Creating a Snapshot and Using It to Boot a Device” on page 172](#).

To perform a recovery installation:

1. Power on the switch. The loader script starts.
2. After the message **Loading /boot/defaults/loader.conf** appears, you are prompted with the following message:

Hit [Enter] to boot immediately, or space bar for command prompt.

Press the Spacebar to enter the manual loader. The **loader>** prompt appears.



NOTE: The loader prompt does not appear on QFX5100, EX4600, and OCX Series switches.

On QFX5100, EX4600, and OCX Series switches only, a recovery image is automatically saved if a previously-running switch is powered on and unable to boot using a Junos OS image.

The “Select a recovery image” menu appears on the console when one of these switches is booted and unable to load a version of Junos OS. Follow the instructions in the “Select a recovery image” menu to load the recovery version of Junos OS for one of these switches.

You can ignore the remainder of this procedure if you are using a QFX5100, EX4600, or OCX Series switch.

3. Enter the following command:

```
loader> install [--format] [--external] source
```

where:

- **format**—Enables you to erase the installation media before installing the installation package. If you do not include this option, the system installs the new Junos OS in a different partition from that of the most recently installed Junos OS.
- **external**—Installs the installation package onto external media (a USB stick, for example).
- **source**—Represents the name and location of the Junos OS package, either on a server on the network or as a file on an external media, as shown in the following two examples:
 - Network address of the server and the path on the server; for example, **tftp://192.171.28/junos/jinstall-qfx-11.1R1.5-domestic-signed.tgz**
 - Junos OS package on a USB device (commonly stored in the root drive as the only file), for example, **file:///jinstall-qfx-11.1R1.5-domestic-signed.tgz**.

The installation now proceeds normally and ends with a login prompt.

**Related
Documentation**

- [Creating a Snapshot and Using It to Boot a QFX3500 and QFX3600 Series Switch on page 174](#)
- [Creating a Snapshot and Using It to Boot a Device on page 172](#)

PART 12

Routine Monitoring

- [Understanding Routine Monitoring on page 197](#)

CHAPTER 12

Understanding Routine Monitoring

- [Monitoring System Process Information on page 197](#)
- [Monitoring System Properties on page 198](#)
- [Monitoring Interface Status and Traffic on page 199](#)

Monitoring System Process Information

Purpose View the processes running on the device.

Action To view the software processes running on the device:

[edit system]

user@switch> [show system processes](#)

Meaning [Table 13 on page 197](#) summarizes the output fields in the system process information display.

The display includes the total CPU load and total memory utilization.

Table 13: Summary of System Process Information Output Fields

Field	Values
PID	Identifier of the process.
Name	Owner of the process.
State	Current state of the process.
CPU Load	Percentage of the CPU that is being used by the process.
Memory Utilization	Amount of memory that is being used by the process.
Start Time	Time of day when the process started.

Related Documentation

- [Monitoring System Properties on page 198](#)
- [show system uptime on page 1204](#)

Monitoring System Properties

Purpose View system properties such as the name, IP address, and resource usage.

Action To monitor system properties in the CLI, enter the following commands:

- `show system uptime`
- `show system users`
- `show system storage`

Meaning [Table 14 on page 198](#) summarizes key output fields in the system properties display.

Table 14: Summary of Key System Properties Output Fields

Field	Values	Additional Information
General Information		
Serial Number	Serial number of device.	
Junos OS Version	Version of Junos OS active on the switch, including whether the software is for domestic or export use.	Export software is for use outside the USA and Canada.
Hostname	Name of the device.	
IP Address	IP address of the device.	
Loopback Address	Loopback address.	
Domain Name Server	Address of the domain name server.	
Time Zone	Time zone on the device.	
Time		
Current Time	Current system time, in Coordinated Universal Time (UTC).	
System Booted Time	Date and time when the device was last booted and how long it has been running.	
Protocol Started Time	Date and time when the protocols were last started and how long they have been running.	
Last Configured Time	Date and time when a configuration was last committed. This field also shows the name of the user who issued the last commit command.	
Load Average	CPU load average for 1, 5, and 15 minutes.	

Table 14: Summary of Key System Properties Output Fields (*continued*)

Field	Values	Additional Information
Storage Media		
Internal Flash Memory	Usage details of internal flash memory.	
External Flash Memory	Usage details of external USB flash memory.	
Logged in Users Details		
User	Username of any user logged in to the switch.	
Terminal	Terminal through which the user is logged in.	
From	System from which the user has logged in. A hyphen indicates that the user is logged in through the console.	
Login Time	Time when the user logged in.	This is the user@switch field in show system users command output.
Idle Time	How long the user has been idle.	

- Related Documentation**
- [Monitoring System Process Information on page 197](#)
 - [show system processes on page 1127](#)

Monitoring Interface Status and Traffic

Purpose View interface status to monitor interface bandwidth utilization and traffic statistics.

- Action**
- To view interface status for all the interfaces, enter **show interfaces xe**.
 - To view status and statistics for a specific interface, enter **show interfaces xe interface-name**.
 - To view status and traffic statistics for all interfaces, enter either **show interfaces xe detail** or **show interfaces xe extensive**.

Meaning For details about output from the CLI commands, see *show interfaces xe*.

PART 13

Standard Software Installation and Upgrade

- [Understanding Standard Software Installation and Upgrade on page 203](#)

CHAPTER 13

Understanding Standard Software Installation and Upgrade

- [Junos OS Package Names on page 203](#)
- [Overview of CoS Upgrade Requirements \(Junos OS Release 11.1 or 11.2 to a Later Release\) on page 204](#)
- [Software Installation Overview on page 206](#)
- [Upgrading Jloader Software on QFX Series Devices on page 206](#)
- [Upgrading Software on page 217](#)
- [Upgrading Software on a QFabric System on page 223](#)

Junos OS Package Names

You upgrade the Juniper Networks Junos OS on the switch by copying a software package to your switch or another system on your local network and then installing the new software package on the switch.

A software package name is in the following format:



NOTE: A signed domestic package is used as an example only. Other types of software packages might be available in future releases.

package-name-m.nZx.y-domestic-signed.tgz

where:

- ***package-name*** is the name of the package—for example, ***jinstall-qfx***.
- ***m.n*** is the software release, with ***m*** representing the major release number and ***n*** representing the minor release number—for example, ***11.1***.
- ***Z*** indicates the type of software release, where ***R*** indicates released software and ***B*** indicates beta-level software.
- ***x.y*** represents the maintenance software release, with ***x*** representing the maintenance software release number and ***y*** representing the maintenance software spin number—for example, ***1.5***.

A sample switch software package name is:

`jinstall-qfx-11.1R1.5-domestic-signed.tgz`

**Related
Documentation**

- [Upgrading Software on page 217](#)
- [Installing and Recovering Software Using the Open Network Install Environment \(ONIE\)](#)
- [Upgrading Software on a QFabric System on page 223](#)
- [Software Installation Overview on page 206](#)

Overview of CoS Upgrade Requirements (Junos OS Release 11.1 or 11.2 to a Later Release)

Before you upgrade to Junos OS Release 11.3, you must deactivate the CoS configuration if the CoS configuration includes any of the following features:

- **excess-rate** option
- **strict-high** or **high** priority queues
- Any of the Junos OS Release 11.1 or 11.2 default multidestination forwarding classes



CAUTION: If your CoS configuration contains any of the features listed above and you attempt to upgrade from Junos OS Release 11.1 or 11.2 to a later version without first editing the configuration, the Junos OS might not restart.

Junos OS Release 11.3 and later for QFX Series no longer supports the **excess-rate** statement, the **strict** priority option, or the default multidestination forwarding classes used in Junos OS Release 11.1 and 11.2. In addition, Junos OS Release 11.3 introduces new restrictions on how to configure and use **strict-high** priority queues.

This topic does not describe how to perform the software upgrade procedure. It describes how to deactivate your CoS configuration, edit your CoS configuration, and reactivate your CoS configuration at the appropriate times.

Use the following procedure to upgrade safely from Junos OS Release 11.1 or 11.2 to a later release:

1. Deactivate the CoS configuration *before* you upgrade the software:
`user@switch# deactivate class-of-service`
2. Follow the upgrade procedure to Junos OS Release 11.3 or later software.
3. Make the following changes to the CoS configuration while the CoS configuration is still deactivated:
 - Remove the **excess-rate** statement from the CoS configuration if you have used it at the **[edit class-of-service schedulers]** or **[edit class-of-service traffic-control-profiles]** hierarchy level.
 - Remove the **strict-high** and **strict** priority queue configurations if you have used them at the **[edit class-of-service schedulers]** hierarchy level.

- Remove the default multidestination forwarding classes (**mcast-be**, **mcast-af**, **mcast-ef**, and **mcast-nc**) if you have used them at the [edit class-of-service schedulers], [edit class-of-service rewrite-rules], [edit class-of-service classifiers], [edit class-of-service scheduler-maps], or [edit class-of-service forwarding-class-sets] hierarchy level. Alternatively, you can change the mapping of the multidestination traffic to use the new default multidestination forwarding class (**mcast**).
- 4. If desired, configure **strict-high** priority queues in accordance with the Junos OS Release 11.3 or later configuration rules, and map multidestination traffic to the default multidestination forwarding class (**mcast**).
- 5. Activate the CoS configuration:


```
user@switch# activate class-of-service
```
- 6. Commit the CoS configuration:


```
user@switch# commit
```



NOTE: If you configured the **transmit-rate** option for any queues under the [edit class-of-service schedulers] hierarchy level, if the rate is configured as an exact rate in Mbps, we recommend that you reconfigure the **transmit-rate** option as a percentage. This is because the scheduler converts exact rates to percentages, and when the exact rate is below 1 Gbps, some granularity may be lost in the conversion. You can avoid this potential issue by specifying the **transmit-rate** option as a percentage.

Related Documentation

- [Upgrading Software on page 217](#)
- [Understanding CoS Classifiers](#)
- [Understanding CoS Output Queue Schedulers](#)
- [Understanding CoS Traffic Control Profiles](#)
- [Overview of CoS Upgrade Requirements to Junos OS Release 12.2](#)
- [Overview of CoS Upgrade Requirements to Junos OS Release 12.3 \(QFX3500 and QFX3600 Switches\) or to Junos OS Release 13.1 \(QFabric Systems\)](#)
- [Example: Configuring Unicast Classifiers](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\)](#)

Software Installation Overview

A device is delivered with the Junos OS preinstalled. As new features and software fixes become available, you can upgrade your software to use them.

When you power on the switch, it starts (boots) using the installed software.

You upgrade the Junos OS on a switch by copying a software package to a switch or other system on your local network and then using the CLI to install the new software on the switch. You then reboot the switch, which boots from the upgraded software. After a successful upgrade, you should back up the new current configuration to a secondary device.

During a successful upgrade, the installation package removes all files from the `/var/tmp` directory of the switch and completely reinstalls the existing software. It retains configuration files, and similar information, such as secure shell and host keys, from the previous version. The previous software package is preserved in a separate disk partition, and you can manually revert to it if necessary. If the software installation fails for any reason, such as loss of power during the installation process, the system returns to the originally active installation when you reboot.

If you encounter any difficulties during software installation or an upgrade, you can use the recovery installation procedure to install the Junos OS on the switch.

Related Documentation

- [Upgrading Software on page 217](#)
- [Upgrading Software on a QFabric System on page 223](#)
- [Recovering from a Failed Software Installation on page 192](#)
- [Performing a Nonstop Software Upgrade on the QFabric System on page 134](#)
- [Performing a QFabric System Recovery Installation on the Director Group on page 182](#)
- [Performing a Recovery Installation on page 189](#)

Upgrading Jloader Software on QFX Series Devices

Jloader software contains a boot loader (Uboot), which is used to bring up QFX Series devices and load the Junos OS from the flash memory of these devices. You can upgrade Jloader software on QFX3500 switches, QFX3500 and QFX3600 Node devices, and QFX3600-I and QFX3008-I Interconnect devices.



NOTE: Before you upgrade the Jloader software, see [Table 15 on page 207](#), [Table 16 on page 207](#), and [Table 17 on page 207](#) to make sure that you are upgrading to the right version of Jloader software for the Junos OS software release running on your QFX3500 switches, or Node devices and Interconnect devices in your QFabric system.

See [Table 18 on page 208](#) to see which Uboot software versions are available and the filenames of the Jloader software packages.

Table 15: Junos OS and Jloader Software Compatibility Matrix for the QFX3500 Switch and QFX3500 Node Device

Junos OS Software Version	1.1.2	1.1.4	1.1.5	1.1.8
11.3R1 and later (QFX3500 switch)	Supported	Supported	Not supported	Supported and recommended
11.3X30.6 and later (QFX3500 Node device)	Supported	Supported	Not supported	Supported and recommended
12.1X49-D1 and later (QFX3500 switch)	Supported	Supported	Not supported	Supported and recommended
12.2X50-D1 and later (QFX3500 switch and QFX3500 Node device)	Supported	Supported	Not supported	Supported and recommended



NOTE: An en dash means that the item is not applicable.

Table 16: Junos OS and Jloader Software Compatibility Matrix for the QFX3008-I Interconnect Device

Junos OS Software Version	1.1.2	1.1.4	1.1.5	1.1.8
11.3X30.9 and later (QFX3008-I Interconnect device)	Supported	Supported	Not supported	Supported and recommended
11.3X30.6 and later (QFX3008-I Interconnect device)	Supported	Supported	Not supported	Supported and recommended
12.2X50-D10.3 and later (QFX3008-I Interconnect device)	Supported	Supported	Not supported	Supported and recommended



NOTE: An en dash means that the item is not applicable.

Table 17: Junos OS and Jloader Software Compatibility Matrix for the QFX3600-I Interconnect Device and QFX3600 Node Device

Junos OS Software Version	1.1.2	1.1.4	1.1.5	1.1.8
12.2X50-D10.3 and later (QFX3600-I Interconnect Device and QFX3600 Node Device)	-	-	Supported	Supported and recommended

Table 17: Junos OS and Jloader Software Compatibility Matrix for the QFX3600-I Interconnect Device and QFX3600 Node Device (*continued*)

Junos OS Software Version	11.2	11.4	11.5	11.8
12.2X50-D20 and later (QFX3600 switch)	-	-	Supported	Supported and recommended

Table 18: Uboot Software Release and Jloader Software Compatibility Matrix

Uboot Software Release Number	Jloader Software Package Name
11.2	jloader-qfx-11.3X30.9-signed.tgz
11.4 (11.3R3 and 11.3R2 releases only. Not supported on 11.3R1)	jloader-qfx-11.3I20120127_0733_dc-builder-signed.tgz
11.4 (12.1R1 release and later)	jloader-qfx-12.1-20120125_pr.0-signed.tgz
11.5 (12.2X50-D10.3 and later)	jloader-qfx-12.2X50.D10.3-signed.tgz
11.8 (13.1X50-D15.1 and later)	jloader-qfx-13.3-20130831_pr_branch_qfd.0.tgz

Jloader Software Version 1.1.4 Guidelines

Jloader Release 1.1.4 is compatible with Junos OS Release 11.3R3 and 11.3R2, and Junos OS Release 12.1R1 and later. Jloader Release 1.1.4 is not compatible with Junos OS Release 11.3R1. The Jloader software package names are different for versions 1.1.4 (Junos OS 11.3R3 and 11.3R2) and 1.1.4 (Junos OS 12.2R1 release and later), but the binaries are the same. Because the binaries are the same, you can upgrade or downgrade to any Junos OS release.

- If you have Junos OS Release 11.3 installed and want to upgrade the Jloader software from version 1.1.2 to version 1.1.4, you need to upgrade using the **jloader-qfx-11.3I20120127_0733_dc-builder-signed.tgz** software package.
- If you have Junos OS Release 11.3R2 installed and want to upgrade to Junos OS Release 12.1, you do not need to upgrade the Jloader Release and can continue to use Jloader Release 1.1.2.
- If you have Junos OS Release 12.1 installed and want to upgrade the Jloader software from version 1.1.2 to version 1.1.4, you need to upgrade using the **jloader-qfx-12.1-20120125_pr.0-signed.tgz** software package.
- If you upgrade to Junos OS Release 12.1, you can upgrade to Jloader Release 1.1.4 using the **jloader-qfx-12.1-20120125_pr.0-signed.tgz** software package.

Upgrading Jloader Software on a QFX3500 Switch

The Jloader software for a QFX3500 switch resides in two flash memory banks. At any time, one bank acts as the primary bank, and the QFX3500 switch boots from it. The other bank is the backup bank—if the QFX3500 switch cannot boot from the primary bank, it boots from the backup bank. When you upgrade the Jloader software, the upgraded software is installed in the backup bank, which then becomes the new primary bank. Thus the primary and backup banks alternate each time you upgrade the Jloader software, with the primary bank containing the most recently installed version of the software, and the backup bank containing the previous version. To upgrade the Jloader software on a QFX3500 switch, you must perform the upgrade twice: once for each bank. Each upgrade requires that you to reboot the QFX3500 switch.



NOTE: If you are running Junos OS Release 11.3R1 or Junos OS Release 11.3R2, you must use the `no-validate` option when you issue the `request system software add` command to upgrade the Jloader software. Otherwise, the installation will fail and you receive a configuration error. The `no-validate` option is not required for Junos OS Release 11.3R3 and later.



NOTE: After you upgrade the Jloader software on the first bank, the software package is deleted after you reboot. Make sure that you have either downloaded the Jloader software package to either a remote site or in a local directory on the switch, such as the `/var/tmp` directory on the QFX3500 device.

1. In a browser, go to <http://www.juniper.net/support/downloads/junos.html> .
The Junos Platforms Download Software page appears.
2. In the QFX Series section of the Junos Platforms Download Software download page, select the QFX Series platform software you want to download.
3. Select the number of the software version that you want to download in the Release: pull-down window to the right of the tabs on the Download Software page.
4. Select the Software tab and then select the install package you want to download in the Install Package section.
5. In the pop-up Alert box, click the link to the Product Support Notification (PSN) document.
6. Enter your name and password and press **Enter**.
7. Read the End User License Agreement, click the **I agree** radio button, and then click **Proceed**.
8. Open or save the `jloader-qfx-version-signed.tgz` file either to a local system or to a remote location. If you are saving the installation package to a remote system, make sure that you can access it using HTTP, TFTP, FTP, or scp.

9. Log in to the QFX3500 switch and enter the shell. We recommend using a console connection.

10. Determine the version of the Jloader software package installed on the switch.

For example:

```
root@switch% ls
gres-tp krt_gencfg_filter.txt
jloader-qfx-11.3-20110510.0-signed.tgz
```

11. Determine the version of the Uboot software that is running in the bank:

For example:

```
root@switch% kenv | grep boot.version
boot.version="1.0.7"
```

12. Enter the CLI and install the Jloader software package.

- To install a Jloader software package that is located in the `/var/tmp` directory, issue the **request system software add /var/tmp/jloader-qfx-version.tgz no-validate** command:

For example:

```
user@switch> request system software add
/var/tmp/jloader-qfx-11.3-20110510.0-signed.tgz no-validate
```

You see the following messages during the installation:

```
Verified jloader-qfx-11.3-20110510.0.tgz signed by PackageProduction_11_3_0
Adding jloader-qfx...
Installation in progress, please wait...
Mounted jloader-qfx package on /dev/md8...
Verified manifest signed by PackageProduction_11_3_0
Verified jloader-qfx-11.3-20110510.0 signed by PackageProduction_11_3_0
Registering jloader-qfx as unsupported
```

```
Installation finished successfully.
Please reboot to activate the package
Saving package file in /var/sw/pkg/jloader-qfx-11.3-20110510.0-signed.tgz
...
Saving state for rollback ...
```

```
juniper@qfx3500>
```

- To install a Jloader software package located on a remote server using FTP, issue the **request system software add /ftp://hostname/pathname/jloader-qfx-version-signed.tgz no-validate** command.

For example:

```
user@switch> request system software add
/ftp://hostname/pathname/jloader-qfx-11.3-20110510.0-signed.tgz no-validate
```

- To install a Jloader software package located on a remote server using HTTP, issue the **request system software add /http://hostname/pathname/jloader-qfx-version-signed.tgz no-validate** command.

For example:

```
user@switch> request system software add
/http://hostname/pathname/jloader-qfx-11.3-20110510.0-signed.tgz no-validate
```


13. When prompted, reboot the Control Board by issuing the **request system reboot** command.

For example:

```
user@switch> request system reboot
Reboot the system ? [yes,no] (no) yes
```

14. Enter the shell and verify that the version of the Uboot software in the primary bank is the version you just installed.

For example:

```
root@switch% kenv | grep boot.version
boot.version="1.1.1"
```

15. To install the Jloader software package on the current backup bank, repeat Step 10 through Step 14.

Upgrading Jloader Software on a QFabric System

This procedure explains how to upgrade the Jloader software on your Node devices and Interconnect devices. The example shows how to upgrade the Jloader Release 1.1.1 to 1.1.2 on a Node device with the serial number BBAK1186.



NOTE: Before you upgrade the Jloader software, make sure you have the serial numbers of the Node devices, Interconnect devices, and Control Boards in the Interconnect devices you want to upgrade.

1. Issue the **show chassis hardware node-device ?** command to view the serial numbers of the Node devices.

For example:

```
user@qfabric> show chassis hardware node-device ?
<node-device>      Node device identifier
BBAK1186            Node device
BBAK3149            Node device
BBAK3177            Node device
BBAK8063            Node device
BBAK8799            Node device
P2443-C             Node device
P2515-C             Node device
P3708-C             Node device
P3885-C             Node device
P3916-C             Node device
node0               Node device
node1               Node device
node2               Node device
node3               Node device
node4               Node device
node5               Node device
node6               Node device
node7               Node device
node8               Node device
```

An example of a Node device serial number is BBAK1186.

2. Issue the **show chassis hardware interconnect-device ?** command to view the serial numbers of the Interconnect devices.

For example:

```
user@qfabric> show chassis hardware interconnect-device ?
Possible completions:
interconnect-device  Interconnect device identifier
IC-F1052             Interconnect device
IC-F3947             Interconnect device
```

The Interconnect device serial numbers are IC-F1052 and IC-F3947.

3. Issue the **show chassis hardware interconnect-device *name*** command to view the serial numbers of the Control Boards in the Interconnect device.

For example:

```
user@qfabric> show chassis hardware interconnect-device IC-F3947
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis	REV 10		F3947	QFXC08-3008
Midplane	REV 10	750-035835	F3947-C	QFX Midplane
CB 0 Board	REV 14	750-035855	ZJ9432	QFX Chassis Control
Routing Engine 0		BUILTIN	BUILTIN	QFX Routing Engine
CB 1 Board	REV 14	750-035855	ZJ9404	QFX Chassis Control

The Control Board serial numbers are ZJ9432 and ZJ9404.

4. Issue the **show chassis firmware node-device *name*** command to see which version of Uboot software you have installed on your Node device.

For example:

```
user@qfabric> show chassis firmware node-device BBAK1186
```

Part	Type	Version
node4	U-Boot	1.1.6 (May 10 2011 - 04:52:59) 1.1.1
	loader	FreeBSD/MIPS U-Boot bootstrap loader 0.1

The Uboot software version is 1.1.1. The loader software version appears after the timestamp for U-Boot 1.1.6.

5. Issue the **show chassis firmware interconnect-device *name*** command to see which version of Uboot software you have installed on the Routing Engines located on the Control Boards of the Interconnect device.

For example:

```
user@qfabric> show chassis firmware interconnect-device IC-F3947
```

Part	Type	Version
Routing Engine 0	U-Boot	U-Boot 1.1.6 (Jan 27 2012 - 03:24:34) 1.1.4
	loader	FreeBSD/MIPS U-Boot bootstrap loader 0.1
Routing Engine 1	U-Boot	U-Boot 1.1.6 (Jan 27 2012 - 03:24:34) 1.1.4
	loader	FreeBSD/MIPS U-Boot bootstrap loader 0.1

The Uboot software version is 1.1.4. The loader software version appears after the timestamp for U-Boot 1.1.6.

6. In a browser, go to <http://www.juniper.net/support/downloads/junos.html>.

The Junos Platforms Download Software page appears.

7. In the QFX Series section of the Junos Platforms Download Software download page, select the QFX Series platform software you want to download.
8. Select the number of the software version that you want to download in the Release: pull-down window to the right of the tabs on the Download Software page.
9. Select the **Software** tab and then select the install package you want to download in the Install Package section.

10. In the pop-up Alert box, click the link to the Product Support Notification (PSN) document.
11. Enter your username and password, and press **Enter**.
12. Read the End User License Agreement, click the **I agree** radio button, and then click **Proceed**.
13. Open or save the **jloader-qfx-version-signed.tgz** file either to a local system or to a remote location. If you are saving the installation package to a remote system, make sure that you can access it using HTTP, TFTP, FTP, or scp.
14. Retrieve the software from the location in which you downloaded it. To do this, issue the **request system software download /path/package-name** command.

For example:

```
user@qfabric> request system software download
ftp://server/files/jloader-qfx-11.3X30.9-signed.tgz
```

15. Log in to the Director device as root and enter the shell to verify that you have downloaded the Jloader software package. We recommend using a console connection. The software package is copied from where you downloaded it and is placed locally on the QFabric system in the **/pbdata/packages** directory.

For example:

```
[root@dg0] # pwd
/pbdata/packages

[root@dg0] # ls
jloader-qfx-11.3X30.9-signed.tgz
```

16. Before you copy over the Jloader software package to the Node device or Interconnect device, determine the directory that matches the serial number of the Node device or Interconnect device that you want to upgrade. View the remote logs and the Node device and Interconnect device serial numbers by issuing the **ls /pbdata/export/rlogs** command at the command line of the Director device before you copy the software package over to the device.



NOTE: The **/pbdata/export/rlogs/node-device-serial-ID** and **/pbdata/export/rlogs/interconnect-device-serial-ID** directories on the Director device are NFS mounted as the **/tftpboot/logfiles** directories on the Node device and Interconnect device. These directories are created for all Node devices and Interconnect devices in a QFabric system. The Jloader files are stored in the **/tftpboot/logfiles** directories for each Node device and Interconnect device.

For example:

```
[root@dg0 tmp] # ls /pbdata/export/rlogs
02de4930-828b-11e1-a319-00e081c57938 c9898afe-828b-11e1-956c-00e081c57938
04103b2a-29d5-e011-bf8a-0e6bdf3aa1e6 eeba4aac-828b-11e1-85e2-00e081c57938
1e2739e0-828b-11e1-bf74-00e081c57938 F1052
8d8a978c-828b-11e1-a833-00e081c57938 F3947
ad55b89e-828b-11e1-b70e-00e081c57938 P2443-C
BBAK1186 P2515-C
```

BBAK3149	P3708-C
BBAK3177	P3885-C
BBAK8063	P3916-C
BBAK8799	

BBAK1186 is the serial number of the Node device that needs to be upgraded.

17. Copy the Jloader software package from the `/var/tmp` directory to the `/pbdata/export/rlogs/BBAK1186` directory.

For example:

```
[root@dg0 tmp] # cp jloader-qfx-11.3X30.9-signed.tgz /pbdata/export/rlogs/BBAK1186
```

18. Confirm that the Jloader software package you copied over is in the `/pbdata/export/rlogs/BBAK1186` directory.

For example:

```
[root@dg0 tmp] # ls /pbdata/export/rlogs/BBAK1186
jloader-qfx-11.3X30.9-signed.tgz
```

19. Issue the `/root/dns.dump` command to find out the internal IP addresses of the Node device or Interconnect device.

```
[root@dg0 tmp] # /root/dns.dump
; <<>> DiG 9.3.6-P1-RedHat-9.3.6-4.P1.e15 <<>> -t axfr pkg.dcbg.juniper.net
@169.254.0.1
;; global options: printcmd
pkg.dcbg.juniper.net. 600 IN SOA ns.pkg.dcbg.juniper.net.
mail.pkg.dcbg.juniper.net. 152 3600 600 7200 3600
pkg.dcbg.juniper.net. 600 IN NS ns.pkg.dcbg.juniper.net.
pkg.dcbg.juniper.net. 600 IN A 169.254.0.1
pkg.dcbg.juniper.net. 600 IN MX 1 mail.pkg.dcbg.juniper.net.
dcfnnode---DCF-ROOT.pkg.dcbg.juniper.net. 45 IN A 169.254.192.17
dcfnnode---DRE-0.pkg.dcbg.juniper.net. 45 IN A 169.254.3.3
dcfnnode-8d8a978c-828b-11e1-a833-00e081c57938.pkg.dcbg.juniper.net. 45 IN A
169.254.128.19
dcfnnode-ad55b89e-828b-11e1-b70e-00e081c57938.pkg.dcbg.juniper.net. 45 IN A
169.254.128.20
dcfnnode-BBAK1186.pkg.dcbg.juniper.net. 45 IN A 169.254.128.14
```

The internal IP address for BBAK1186 is 169.254.128.14.

20. Upgrade the Jloader software on the Node device or Interconnect device.

Before you can upgrade the Jloader software, you need to use SSH to log in to the Node device or Interconnect device and verify that the software is in the `/tftpboot/logfiles` directory.

- a. Use SSH to log in to the Node device or Interconnect device.

For example:

```
[root@dg0 tmp] # ssh 160.254.128.14
root@169.254.128.14's password:
--- JUNOS 11.3X30.10 built 2012-03-11 22:55:43 UTC
At least one package installed on this device has limited support.
Run 'file show /etc/notices/unsupported.txt' for details.
root@sng3%
```

- b. Verify that the Jloader software package is in the `tftpboot/logfiles` directory of the Node device or Interconnect device.

For example:

```
root@sng3% ls /tftpboot/logfiles
.index                               jloader-qfx-11.3X30.9-signed.tgz
```

- c. Copy the Jloader software package from the **/tftpboot/logfiles** directory to the **/var/tmp** directory of the Node device or Interconnect device.

For example:

```
root@sng3% cp /tftpboot/logfiles/jloader-qfx-11.3X30.9-signed.tgz /var/tmp
```

- d. Verify that the Jloader software package is in the **/var/tmp** directory of the Node device or Interconnect device.

For example:

```
root@sng3% ls /var/tmp
.snap                               jloader-qfx-11.3X30.9-signed.tgz
    tmp
gres-tp                             krt_gencfg_filter.txt
    vc-autoupgrade
if-rtbdb                             rtsdb
```

- e. Enter CLI mode and issue the **request system software add /var/tmp/jloader-qfx-version-signed.tgz** command.

For example:

```
root@sng3% cli
root@sng3> request system software add /var/tmp/jloader-qfx-11.3X30.9-signed.tgz
Validating on fpc0
Checking compatibility with configuration
Initializing...
Using jbase-11.3X30.10
Verified manifest signed by PackageProduction_11_3_0
Verified jbase-11.3X30.10 signed by PackageProduction_11_3_0
Using /var/tmp/jloader-qfx-11.3X30.9-signed.tgz
Verified jloader-qfx-11.3X30.9.tgz signed by PackageProduction_11_3_0
Using jloader-qfx-11.3X30.9.tgz
Checking jloader-qfx requirements on /
Verified manifest signed by PackageProduction_11_3_0
Verified jloader-qfx-11.3X30.9 signed by PackageProduction_11_3_0
Using jkernel-qfx-11.3X30.10
Verified manifest signed by PackageProduction_11_3_0
Verified jkernel-qfx-11.3X30.10 signed by PackageProduction_11_3_0
Using jroute-qfx-11.3X30.10
Verified manifest signed by PackageProduction_11_3_0
Verified jroute-qfx-11.3X30.10 signed by PackageProduction_11_3_0
Using jcrypto-qfx-11.3X30.10
Verified manifest signed by PackageProduction_11_3_0
Verified jcrypto-qfx-11.3X30.10 signed by PackageProduction_11_3_0
Using jweb-qfx-11.3X30.10
Verified manifest signed by PackageProduction_11_3_0
Verified jweb-qfx-11.3X30.10 signed by PackageProduction_11_3_0
Using jswitch-qfx-11.3X30.10
Verified manifest signed by PackageProduction_11_3_0
Verified jswitch-qfx-11.3X30.10 signed by PackageProduction_11_3_0
Hardware Database regeneration succeeded
Validating against /config/juniper.conf.gz
mgd: commit complete
Validation succeeded
```

Done with validate on all chassis

```
fpc0:
Verified jloader-qfx-11.3X30.9.tgz signed by PackageProduction_11_3_0
Adding jloader-qfx...
Installation in progress, please wait...
Mounted jloader-qfx package on /dev/md10...
Verified manifest signed by PackageProduction_11_3_0
Verified jloader-qfx-11.3X30.9 signed by PackageProduction_11_3_0
#####
#####
Installation finished successfully.
Please reboot to activate the package
Saving package file in /var/sw/pkg/jloader-qfx-11.3X30.9-signed.tgz ...
Saving state for rollback ...
```

Upgrade has completed successfully.
Reboot is now required.

- f. Reboot both the Node device and Interconnect device twice, because they each contain two partitions.

For example:

```
root@sng3> request system reboot
Reboot the system ? [yes,no] (no) yes
Shutdown NOW!
[pid 37663]
```

```
root@sng3>
```

```
*** FINAL System shutdown message from root@sng3 ***
```

```
System going down IMMEDIATELY
```

- g. Verify that the Uboot software on the Node device or Interconnect device has been upgraded to the new Uboot software by logging in to the QFabric CLI and issuing either the **show chassis firmware node-device *name*** command or the **show chassis firmware interconnect-device *name*** command.

For example:

```
user@qfabric> show chassis firmware node-device BBAK1186
Part                Type      Version
node4               U-Boot   1.1.6 (Nov 19 2011 - 11:42:07) 1.1.2
0.1                 loader   FreeBSD/MIPS U-Boot bootstrap loader
```

The Uboot software version is now 1.1.2. The loader software version appears after the timestamp for U-Boot 1.1.6.

Upgrading Software

To upgrade Junos OS, you need to install the appropriate upgrade package on the device. Upgrading involves these tasks:



NOTE: If you want to use the Open Network Install Environment (ONIE) to install software, see *Installing and Recovering Software Using the Open Network Install Environment (ONIE)*.

1. [Downloading Software Files with a Browser on page 218](#)
2. [Accessing Software Downloaded to a Remote Location on page 219](#)
3. [Connecting to the Console Port on page 219](#)
4. [Backing Up the Current Configuration Files on page 219](#)
5. [Installing a Standard Software Package on page 219](#)
6. [Upgrading to an ELS-Based Software Package on page 221](#)

Downloading Software Files with a Browser

To download the software package from the Juniper Networks Support website, go to <http://www.juniper.net/support/>.



NOTE: To access the download site, you must have a service contract with Juniper Networks and an access account. If you need help obtaining an account, complete the registration form at the Juniper Networks website <https://www.juniper.net/registration/Register.jsp>.

This procedure shows you how to upgrade software on a QFX Series device, but you can follow the same procedure for any device unless otherwise specified.

1. Using a Web browser, navigate to the <http://www.juniper.net/support>.
2. Click **Download Software**.
3. In the **Switching** box, click **Junos OS Platforms**.
4. In the **QFX Series** section, click the name of the platform for which you want to download software.
5. Click the **Software** tab and select the release number from the **Release** drop-down list.
6. In the **Install Package** section of the **Software** tab, select the **Install Package** for the release.
A login screen appears.
7. Enter your name and password and press **Enter**.
8. Read the End User License Agreement, click the **I agree** radio button, and then click **Proceed**.

9. Save the `jinstall-qfx-<version>-domestic-signed.tgz` file on your computer.
10. Open or save the installation package either to the local system in the `var/tmp` directory or to a remote location. If you are saving the installation package to a remote system, make sure that you can access it using HTTP, TFTP, FTP, or scp.

Accessing Software Downloaded to a Remote Location

To access the installation package if you downloaded it to a remote location (for example, any system other than the switch), you can access the package using the CLI. You can specify a filename or URL in one of the following ways:

1. Copy a file from an FTP server, TFTP, or scp session.

In this example, a file is copied from an FTP server using the **file copy** command.

2. Enter the file name on the prompt of a file on an FTP server. You can also specify **hostname** as `username@hostname` or `username:password@hostname`. The default path is the user's home directory. To specify an absolute path, the path must start with `%2F`; for example, `ftp://hostname/%2Fpath/filename`. To have the system prompt you for the password, specify **prompt** in place of the password. If a password is required and you do not specify the password or **prompt**, an error message is displayed:

```
user@host> file copy ftp://username@ftp.hostname.net/package-name-m.mZx-distribution
.tgz
file copy ftp.hostname.net: Not logged in.

user@host> file copy
ftp://username:prompt@ftp.hostname.net/package-name-m.mZx-distribution
Password for username@ftp.hostname.net:
```

Connecting to the Console Port

We recommend that you connect to the console port while installing the installation package so you can respond to any required user input and detect any errors that may occur.

Backing Up the Current Configuration Files

Before you install the new installation package, we strongly recommend that you back up your current configuration files because the upgrade process removes all of the stored files on the switch.

To back up your current configuration files, enter the **save** command:

```
user@switch# save filename
```

Executing this command saves a copy of your configuration files to a remote location such as an external USB device.

Installing a Standard Software Package



NOTE: On Junos Release 14.1X53-D35.3, autonegotiation is disabled by default.



.....

NOTE: Before you install the software, back up any critical files in `/var/home`. For more information regarding how to back up critical files, contact Customer Support at <http://www.juniper.net/support>.

.....



.....

NOTE: If you are upgrading from a standard software package to an ELS-based package, see the *Upgrading to an ELS-Based Software Package* section.

.....

Install the software in one of three ways:

If the installation package resides locally on the switch, execute the **request system software add <pathname><source> reboot** command.

For example:

```
user@switch> request system software add /var/tmp/jinstall-qfx-11.1R1.5-domestic.tgz reboot
```

If the Install Package resides remotely, execute the **request system software add <pathname><source> reboot** command.

For example:

```
user@switch> request system software add
ftp://ftpsrvr/directory/jinstall-qfx-11.1R1.5-domestic.tgz reboot
```

If the installation package resides locally on the switch, execute the **request system software add <pathname><source> reboot** command.

For example:

```
user@switch> request system software add /var/tmp/jinstall-qfx-5.13.2X51-D10.6-domestic.tgz
reboot
```

If the install Package resides remotely from the switch, execute the **request system software add <pathname><source> reboot** command.

For example:

```
user@switch> request system software add
ftp://ftpsrvr/directory/jinstall-qfx-5.13.2X51-D10.6-domestic.tgz reboot
```

After the reboot has finished, verify that the new version of software has been properly installed by executing the **show version** command.

```
user@switch> show version
```

Upgrading to an ELS-Based Software Package

To upgrade your switch from a version of Junos OS that does not support Enhanced Layer 2 Software (ELS) to a version of Junos OS that supports ELS, we recommend performing the following procedure.



NOTE: Because this procedure can cause service outages, we recommend that you avoid performing this procedure on switches carrying traffic in a production network.

1. Log in to your device using the console port.



NOTE: Only perform this procedure from the console port. You can lose connectivity to your device if you perform this procedure from a management port or any other interface.

2. Set your device to standalone mode by issuing the **request chassis device-mode standalone** command. Do not reboot your system at this time.



NOTE: This step is only required for new devices shipped from the factory or QFabric system Node devices that you plan to redeploy in a QFX Series Virtual Chassis.

3. Choose whether you wish to reuse your previous configuration or not.
 - To reuse your previous configuration as part of the software upgrade, you must convert the configuration from the original style Junos OS CLI to the ELS CLI format using the following steps:



NOTE: We recommend this procedure for customers currently using a QFX3500 or QFX3600 switch as a standalone device.

- a. Copy your entire existing configuration into a text file. Save the file to a remote location or USB drive.
 - b. Retain the portion of your existing configuration related to management network connectivity (such as **[edit system]** and management interfaces). Delete all other configuration elements (such as the **[edit protocols]** and **[edit vlans]** hierarchy levels, non-management interfaces, and so on). Issue a **commit** operation to remove the deleted configuration.
 - c. Perform the software upgrade with the **validate** option and reboot your device to complete the upgrade by issuing the **request system software add validate reboot** command. Maintain your console port connection during the reboot.
 - d. Using a web browser, navigate to the [ELS Translator Tool](#). Follow the instructions on the page to convert your saved configuration file to the new ELS CLI format.
 - e. Return to your console port connection. When the switch has rebooted to complete the software upgrade, copy the configuration from the ELS Translator Tool and load it in to your switch.
 - f. Issue a **commit** operation to activate the translated configuration.
- To delete your current configuration and upgrade the software, follow these steps:



NOTE: We recommend this procedure for customers with new QFX3500 or QFX3600 devices shipped from the factory or QFabric system Node devices that will be redeployed in a QFX Series Virtual Chassis.

- a. Perform a software upgrade with the **no-validate** option by issuing the **request system software add no-validate** command.
- b. Delete the configuration and set the device to factory defaults by issuing the **request system zeroize** command. The device automatically reboots and reverts to a factory default configuration.
- c. Configure your device using the ELS CLI format.

- Related Documentation**
- [Installing and Recovering Software Using the Open Network Install Environment \(ONIE\)](#)
 - [Overview of CoS Upgrade Requirements \(Junos OS Release 11.1 or 11.2 to a Later Release\) on page 204](#)
 - [Software Installation Overview on page 206](#)
 - [Recovering from a Failed Software Installation on page 192](#)
 - [Upgrading Jloader Software on QFX Series Devices on page 206](#)
 - [request system software add on page 1296](#)
 - [Installation and Upgrade Guide](#)

Upgrading Software on a QFabric System

The QFabric system software package contains software for all of the different components in the QFabric system, such as the Director group, Interconnect devices, Node devices, and other QFabric system components. You can upgrade the software on all of the QFabric components at the same time using the **request system software add package-name component all reboot** command.



NOTE: Downgrading software on a QFabric system is not supported.

This topic describes the following tasks:

- [Backing Up the Current Configuration Files on page 223](#)
- [Downloading Software Files Using a Browser on page 223](#)
- [Retrieving Software Files for Download on page 225](#)
- [Installing the Software Package on the Entire QFabric System on page 225](#)

Backing Up the Current Configuration Files

To back up your current configuration files:

```
user@switch> request system software configuration-backup path
```

Back up the configuration files to a local directory, remote server, or removable drive (for example, an external USB flash drive).

For example:

```
user@switch> request system software configuration-backup /media/USB/
```

Downloading Software Files Using a Browser



NOTE: To access the download site, you must have a service contract with Juniper Networks and an access account. If you need help obtaining an account, complete the registration form at the Juniper Networks website <https://www.juniper.net/registration/Register.jsp>.

1. Using a Web browser, navigate to the <http://www.juniper.net/support>.
 2. Click **Download Software**.
 3. In the **Switching** box, click **Junos OS Platforms**.
 4. In the **QFX Series** section, click the name of the platform for which you want to download software.
 5. Click the **Software** tab and select the release number from the **Release** drop-down list.
 6. Select the complete install package you want to download in the **QFabric System Install Package** section:
 - If you want to upgrade the entire QFabric system, select **QFabric System - Complete Install Package**.
 - If you want to upgrade either a single Node or Interconnect device for recovery purposes, select **Node and Interconnect Device Install Package**. For information on how to perform a recovery installation on either a Node or Interconnect device, see [“Performing a Recovery Installation” on page 189](#).
- A login screen appears.
7. Enter your user ID and password and click **Login**.
 8. Read the End User License Agreement, select the **I agree** option button, and then click **Proceed**.
 9. Save the **jinstall-qfabric-version.rpm** file on your computer.

Retrieving Software Files for Download

Retrieve the software from the location in which you downloaded it. To do this, issue the **request system software download** command. The software package is copied from where you downloaded it and is placed locally on the QFabric system.

- To retrieve the software:

```
user@switch> request system software download /path/package-name
```

For example:

```
user@switch> request system software download
ftp://server/files/jinstall-qfabric-11.3X30.6.rpm
```

Installing the Software Package on the Entire QFabric System



NOTE: On a QFabric system, a QFX3500 Node device or QFX3600 Node device might not be able to participate as a Node device in the QFabric system if the Node device is running a different version of software from that of the Director group. This mismatch of software versions between the Node device and the Director group can occur when the Node device is introduced into the setup, and both Director devices go offline before the Node device completes its auto-upgrade process to upgrade its software version to the same software version running on the Director group. The workaround is to reboot the QFX3500 or QFX3600 Node device once the Director group comes back online. The QFX3500 or QFX3600 Node device will initiate auto-upgrade and upgrade its software version from the Director group.

1. Issue the **request system software add package-name component all reboot** command.

For example:

```
user@switch> request system software add jinstall-qfabric-11.3X30.6.rpm component all
reboot
```



NOTE: If you receive an error message after issuing the **request system software add package-name component all reboot** command that says that the configuration file cannot be loaded as is, you will need to enter configuration mode, make any necessary changes to the configuration file, and then commit the changes.



NOTE: The default value for a QFabric system software upgrade is `validate`. The validation step adds up to 10 minutes to the overall software upgrade. If the validation fails, the upgrade does not proceed and the QFabric system automatically issues the `request system software rollback` command to restore the current software image. If you upgrade more than one component (for example, by issuing the `component all` option), validation failure on one device stops the upgrade process for the other devices. If you do not want to validate the software package against the current configuration, issue the `no-validate` option.

2. After the reboot has finished, verify that the new version of software has been properly installed by issuing the `show version component all` command.

```
user@switch> show version component all
dg1:
-
Hostname: qfabric
Model: qfx3100
JUNOS Base Version [11.3X30.6]

dg0:
-
Hostname: qfabric
Model: qfx3100
JUNOS Base Version [11.3X30.6]

NW-NG-0:
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

FC-0:
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

FC-1:
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
```



```
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]
```

DRE-0:

```
-
Hostname: dre-0
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]
```

FM-0:

```
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]
```

nodedevice1:

```
-
Hostname: qfabric
Model: QFX3500
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]
```

interconnectdevice1:

```
-
Hostname: qfabric
Model: QFX3108
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]
```

**Related
Documentation**

- [Software Installation Overview on page 206](#)
- [Performing a QFabric System Recovery Installation on the Director Group on page 182](#)
- [Upgrading Jloader Software on QFX Series Devices on page 206](#)
- [request system software add on page 1296](#)
- *Installation and Upgrade Guide*

PART 14

Software Downgrade

- [Understanding Software Downgrade on page 231](#)

Understanding Software Downgrade

- [Downgrading Software on a QFabric System on page 231](#)

Downgrading Software on a QFabric System

If a software upgrade or configuration changes have made the QFabric system unstable or inoperable, you can rollback or downgrade to a previous version of software and configuration. The software and configuration that you rollback to is called a restore-point. The restore-point is stored in a dedicated partition. You can create a checksum (MD5 hash) for the partition in which the restore-partition is stored and verify the integrity of the restore-point partition.



NOTE: The ability to downgrade the software does not replace the existing back up and restore functionality.

If possible, perform the following steps before you perform the recovery installation:

1. Ensure that you have an emergency boot device (for example, an external USB flash drive) for each of your Director devices to use during the recovery installation.

You can either use the external USB flash drive containing the software supplied by Juniper Networks, or you can use an external USB flash drive supplied by Juniper Networks on which you install the QFabric system install media.
2. Because the recovery installation process completely overwrites the entire contents of the Director device, make sure you back up any configuration files and initial setup information on a different external USB flash drive before you begin a recovery installation. You will need to restore this information as part of recovery process.

Use the **request system software configuration-backup** command to back up your configuration files and initial setup information:

```
user@swi tch> request system software configuration-backup path
```



NOTE: To recover the Director group, you must upgrade both Director devices in parallel. If you are recovering only one Director device in a Director group, and the software version will remain the same between the two Director devices, make sure that the other Director device is powered on and operational. If the software version of the Director device you are recovering will be different, make sure that the other Director device is powered off and is not operational.

- (Optional) Creating an Emergency Boot Device Using a Juniper Networks External Blank USB Flash Drive on page 232
- Performing a Recovery Installation Using a Juniper Networks External USB Flash Drive with Preloaded Software on page 233

(Optional) Creating an Emergency Boot Device Using a Juniper Networks External Blank USB Flash Drive

If you do not have an external USB flash drive preloaded with the software from Juniper Networks to use as an emergency boot device, you can create your own, using a blank external USB flash drive provided by Juniper Networks. Download the install media from the Juniper Networks Support website onto your UNIX workstation, uncompress and untar the software, and then burn the software image onto your Juniper Networks external USB (4-gigabyte) flash drive. Make sure you create two emergency boot devices, one for each Director device, so you can perform a recovery installation in parallel.

1. Using a Web browser, navigate to the <http://www.juniper.net/support>.
2. Click **Download Software**.
3. In the *Switchingbox*, click *Junos OS Platforms*.
4. In the *QFX Series* section, click the name of the platform for which you want to download software.
5. Click the *Software* tab and select the release number from the *Release* drop-down list.
6. Select the complete install media you want to download in the *QFabric System Install Media* section.
A login screen appears.
7. Enter your name and password and press **Enter**.
8. Read the End User License Agreement, click the **I agree** radio button, and then click **Proceed**.
9. Log in and save the install media file to your UNIX workstation.
10. Use FTP to access the UNIX workstation where the install media resides.
`ftp ftp://hostname/pathname install-media-qfabric-<version>.img.tgz`
11. When prompted, enter your username and password.
12. Make sure you are in binary mode by entering **binary** at the prompt.

binary

13. Use the **get** command to transfer the installation package from the FTP host to your UNIX workstation.

get install-media-qfabric-<version>.img.tgz

14. Close the FTP session:

bye

15. Untar the *install-media-qfabric-<version>.img.tgz* file on your UNIX workstation.

```
tar -xvzf install-media-qfabric-11.3X30.6.img.tgz
```

16. Insert a blank external USB (4-gigabyte) flash drive supplied by Juniper Networks into your UNIX workstation.

17. Burn the software image you just downloaded to your UNIX workstation onto your external USB flash drive using the **dd** command:

```
dd if=install-media-qfabric-11.3X30.6.img of=/dev/sdb bs=16k
250880+0 records in
250880+0 records out
4110417920 bytes (4.1 GB) copied, 5.10768 seconds, 805 MB/s
```

18. Perform the steps in [“Performing a Recovery Installation Using a Juniper Networks External USB Flash Drive with Preloaded Software” on page 178](#) to continue with the recovery installation.

Performing a Recovery Installation Using a Juniper Networks External USB Flash Drive with Preloaded Software

This procedure describes how to perform a recovery installation using an external USB flash drive that contains Junos OS software.



NOTE: Since the recovery installation process completely overwrites the entire contents of the Director device, you will need to restore the required configuration files and initial setup information. The following procedure assumes you previously saved these backup files with the **request system software configuration-backup** command. Ensure that you have these backup files available on an external USB flash drive before you perform the following steps.

1. Insert the external USB flash drive into the Director device.
2. Perform one of the following tasks:
 - If you have access to the default partition, reboot the Director device by issuing the **request system reboot director-group** command.
 - If you do not have access to the default partition, power cycle the Director device.

The following menu appears on the Director device console when the Director device boots up:

```
Juniper Networks QFabric Director Install/Recovery Media
- To boot from the local disk, wait 10 seconds or press the Enter key.
- To reinstall the QFabric software on this Director device, type: install
```

3. Type **install** and then press **Enter** to install the software on the Director device.

Once the installation process is complete, the Director device reboots, and the following menu appears on the Director device console:

```
Juniper Networks QFabric Director Install/Recovery Media
- To boot from the local disk, wait 10 seconds or press the Enter key.
- To reinstall the QFabric software on this Director device, type: install
```

4. Press **Enter**.

The Director device reboots from the local disk on which the software was just installed.

5. Log in as root on the Director device.

The following menu appears on the Director device console:

```
Before you can access the QFabric system, you must complete the initial setup
of the Director group by using the steps that follow.
If the initial setup procedure does not complete successfully, log out of the
Director device and then log back in to restart
this setup menu.
```

```
Continue?[y/n]
```

6. Enter **n** to bypass the initial setup script and enter the Director device root directory, where you can mount the external USB flash drive containing the configuration files and initial setup information.

7. Issue the **ls /mnt** command to list the *mount* directory.

```
root@dg0 ~]# ls /mnt
```

8. Issue the **mkdir** command to create a directory within the mount directory.

```
root@dg0 ~]# mkdir /mnt/myusb
```

9. Issue the **mount /dev/sdb2 /mnt/myusb/** command to mount the external USB flash drive to the local drive of the Director device.

```
root@dg0 ~]# mount /dev/sdb2 /mnt/myusb/
```

10. Issue the **ls -la /mnt/myusb/** command to verify the contents of your mounted external USB flashdrive.

```
root@dg0 ~]# ls -la /mnt/myusb/
total 1770884
drwxr-xr-x 2 root root      4096 Sep  7 05:16 .
drwxr-xr-x 3 root root      4096 Sep  7 10:15 ..
-rw-r--r-- 1 root root    4249 Sep  7 03:52 mybackup-20110907
```

11. Exit the Director device and log back in as root on the Director device.

The following menu appears:

```
Before you can access the QFabric system, you must complete the initial setup
of the Director group by using the steps that follow.
If the initial setup procedure does not complete successfully, log out of the
Director device and then log back in to restart
this setup menu.
```

```
Continue?[y/n] y
Initial Configuration
```

You may enter the configuration manually or restore from a backup.


```
Specify a backup file? [y/n] : y
Please specify the full path of the configuration backup file. :
/mnt/myusb/mybackup-20110907
```

12. Enter **y** to continue.

13. Enter **y** and specify the path to the backup configuration file located on the external USB flash drive.

```
/mnt/myusb/mybackup-20110907
```

The following messages appear:

```
Saving temporary configuration...
Configuring peer...
connect error for 1.1.1.2:9001
Configuring local interfaces...
Configuring interface eth0 with [10.49.213.163/24:10.49.213.254]
Configured interface eth0 with [10.49.213.163/24:10.49.213.254]
Configuring QFabric software with initial pool of 4000 MAC addresses
[00:10:00:00:00:00 - 00:10:00:00:0f:3b]
Configuring QFabric address [10.49.213.50]
Reconfiguring QFabric software static configuration
Applying the new Director Device password
Applying the QFabric component password
First install initial configuration, generating and sharing SSH keys.
First install initial configuration, generating SSH keys.
connect error for 1.1.1.2:9001
Shared SSH keys.
Configuration complete. Director Group services will auto start within 30
seconds.
```

The Director device reboots from the local disk on which the software was just installed. Exit the Director device session and log in to the QFabric default partition CLI.

14. Issue the **request system software configuration-restore** command and specify the path to the backup configuration file located on the external USB flash drive to load the previously saved QFabric system configuration.

15. From the default partition, issue the **request system reboot node-group all** command to reboot all of the Node groups in the QFabric system to ensure that all Node devices are running the same version of software as the Director-group.

```
user@switch> request system reboot node-group all
```

16. From the default partition, issue the **request system reboot fabric** command to reboot the Interconnect devices and the other components in the fabric in the QFabric system to ensure that Interconnect devices are running the same version of software as the Director group.

```
user@switch> request system reboot fabric
```

17. Log in to the default partition and issue the **show version component all** command to verify that all components are running the same version of software.

```
user@switch> show version component all
dg1:
-
Hostname: qfabric
Model: qfx3100
JUNOS Base Version [11.3X30.6]

dg0:
```

```

-
Hostname: qfabric
Model: qfx3100
JUNOS Base Version [11.3X30.6]

NW-NG-0:
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

FC-0:
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

FC-1:
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

DRE-0:
-
Hostname: dre-0
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

FM-0:
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3X30.6]

```

```
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

nodedevice1:
-
Hostname: qfabric
Model: QFX3500
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]

interconnectdevice1:
-
Hostname: qfabric
Model: QFX3108
JUNOS Base OS boot [11.3X30.6]
JUNOS Base OS Software Suite [11.3X30.6]
JUNOS Kernel Software Suite [11.3X30.6]
JUNOS Crypto Software Suite [11.3X30.6]
JUNOS Online Documentation [11.3X30.6]
JUNOS Enterprise Software Suite [11.3X30.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3X30.6]
JUNOS Routing Software Suite [11.3X30.6]
warning: from interconnectdevice0: Disconnected
```


PART 15

System Snapshot

- [Understanding System Snapshot on page 241](#)

Understanding System Snapshot

- [Understanding System Snapshot on page 241](#)
- [Creating a Snapshot and Using It to Boot a QFX3500 and QFX3600 Series Switch on page 242](#)
- [Creating a Snapshot and Using It to Boot a Device on page 244](#)
- [Verifying That a System Snapshot Was Created on a QFX Series Switch on page 245](#)

Understanding System Snapshot



NOTE: On QFX3500 and QFX3600 switches running Enhanced Layer 2 Software, all of the directories that reside in the “/” partition are read only.

You can create copies of the software running on a switch using the system snapshot feature. The system snapshot feature takes a “snapshot” of the files currently used to run the switch—the complete contents of the `/config` and `/var` directories, which include the running Junos OS, the active configuration, and the rescue configuration—and copies all of these files into an alternate (internal, meaning internal flash, or an external, meaning USB flash) memory source. You can then use this snapshot to boot the switch at the next boot up or as a backup boot option.

You can only use snapshots to move files to external memory if the switch was booted from internal memory, or to move files to internal memory if the switch was booted from external memory. You cannot create a snapshot in the memory source that booted the switch even if the snapshot is being created on a different partition in the same memory source.

Snapshots are particularly useful for moving files onto USB flash drives. You cannot use the `copy` command or any other file-moving technique to move files from an internal memory source to USB memory on the switch.

System snapshots on the switch have the following limitations:

- You cannot use snapshots to move files to any destination outside of the switch other than an installed external USB flash drive.
- Snapshot commands are always executed on a local switch.

- Related Documentation**
- [Creating a Snapshot and Using It to Boot a QFX3500 and QFX3600 Series Switch on page 174](#)

Creating a Snapshot and Using It to Boot a QFX3500 and QFX3600 Series Switch

The system snapshot feature takes a “snapshot” of the files currently used to run the QFX Series switch—the complete contents of the `/config` and `/var` directories, which include the running Juniper Networks Junos OS, the active configuration, and the rescue configuration—and copies all of these files into an alternate (internal, meaning internal flash, or an external, meaning USB flash) memory source. You can then use these snapshots to boot the switch at the next bootup or as a backup boot option.

The system snapshot feature is especially effective as a bootup option after a partition corruption, as it is the only recovery option that allows you to completely restore the Junos OS and configuration in the event of a corrupted partition.

This topic includes the following tasks:

- [Creating a Snapshot on a USB Flash Drive and Using It to Boot the Switch on page 242](#)
- [Creating a Snapshot on an Internal Flash Drive and Using it to Boot the Switch on page 243](#)
- [Creating a Snapshot on the Alternate Slice of the Boot Media on page 243](#)

Creating a Snapshot on a USB Flash Drive and Using It to Boot the Switch

A snapshot can be created on USB flash memory after a switch is booted using files stored in internal memory.

Ensure that you have the following tools and parts available before creating a snapshot on a USB Flash drive:

- A USB flash drive that meets the QFX Series switch USB port specifications. See *USB Port Specifications for the QFX Series*.

To create a snapshot on USB flash memory and use it to boot the switch:

1. Place the snapshot into USB flash memory:

```
user@switch> request system snapshot partition
```



NOTE: This example uses the `partition` option. If you have already created a partition for the snapshot, you don't need to use the `partition` option.

2. (Optional) Perform this step if you want to boot the switch now using the snapshot stored on the external USB flash drive. If you created the snapshot as a backup, do not perform this step.

- To reboot the switch using the most recently created snapshot:

```
user@switch> request system reboot
```


- To reboot the switch using a snapshot in a specific partition on the USB flash drive:

```
user@switch> request system reboot slice 1
```

Creating a Snapshot on an Internal Flash Drive and Using it to Boot the Switch

A snapshot can be created on internal memory after a switch is booted using files stored in external memory.

To create a snapshot in internal memory and use it to boot the switch:

1. Place the snapshot files in internal memory:

```
user@switch> request system snapshot partition
```



NOTE: This example uses the `partition` option. If you have already created a partition for the snapshot, you don't need to use the `partition` option.

2. (Optional) Perform this step if you want to boot the switch now using the newly created snapshot. If you created the snapshot as a backup, do not perform this step.

- To reboot the switch using the most recently created snapshot:

```
user@switch> request system reboot
```

- To reboot the switch using a snapshot in a specific partition in internal memory:

```
user@switch> request system reboot slice 1
```

Creating a Snapshot on the Alternate Slice of the Boot Media

The alternate slice of the boot media contains a backup software image that the switch can boot from if it is unable to boot from the primary slice. When you upgrade software, the new software image gets copied only to the primary slice of the boot media.

To create a snapshot of the currently booted software image on the backup slice of the boot media:

```
user@switch> request system reboot slice alternate
```

After the system boots up, you will see the following message before the login prompt:

WARNING: THIS DEVICE HAS BOOTED FROM THE BACKUP JUNOS IMAGE

It is possible that the primary copy of JUNOS failed to boot up properly, and so this device has booted up from the backup copy.

Please re-install JUNOS to recover the primary copy in case it has been corrupted.

The system will generate an alarm indicating that the switch has booted from the backup slice.

Related Documentation

- [Verifying That a System Snapshot Was Created on a QFX Series Switch on page 245](#)
- [Understanding System Snapshot on page 241](#)

Creating a Snapshot and Using It to Boot a Device

The system snapshot feature takes a “snapshot” of the files currently used to run the device—the complete contents of the `/config` directories, which include the running Juniper Networks Junos OS, the active configuration, and the rescue configuration, as well as the host OS—and copies all of these files into an external USB flash drive.

You can use the snapshot to boot the device at the next bootup or as a backup boot option.

The system snapshot feature is especially effective as a bootup option after a partition corruption, as it is the only recovery option that allows you to completely restore the Junos OS and configuration in the event of a corrupted partition on a switch.

This topic includes the following tasks:

- [Creating a Snapshot on an External USB Flash Drive and Using It to Boot the Device on page 244](#)

Creating a Snapshot on an External USB Flash Drive and Using It to Boot the Device

A snapshot can be created on an external USB flash drive after a device is booted using files stored in internal memory.

Ensure that you have the following tools and parts available before creating a snapshot on an external USB flash drive:

- An external USB flash drive that meets the device USB port specifications. See *USB Port Specifications for the QFX Series*.

To create a snapshot on the external USB flash drive and use it to boot the device:

1. Insert the external USB flash drive.
2. Issue the **request system snapshot** command.

```
user@device> request system snapshot
fpc0:
```

```
-----
Starting snapshot to usb (/dev/da0)
Creating snapshot on the host ..
Copying bootable disk image from host ..
Writing to usb (/dev/da0) ..
Copying 'Host OS' to '/dev/da0s1' .. (this may take a few minutes)
Copying 'JUNOS' to '/dev/da0s1' .. (this may take a few minutes)
The following filesystems were archived: / /config Host-OS
```

3. (Optional) Perform this step if you want to boot the device now using the snapshot stored on the external USB flash drive. If you created the snapshot as a backup, do not perform this step.

- Insert the external USB flash drive.
- Power cycle the device.

The external USB flash drive is detected.

- The software prompts you with the following options:

```
Junos Snapshot Installer - (c) Juniper Networks 2013
Reboot
Install Junos Snapshot [13.2-20131115_x_132_x51_vjunos.0
Boot to host shell [debug]
```

- Select **Install Junos Snapshot** to install the snapshot located on the external USB flash drive to the device.

The device copies the software from the external USB flash drive, occasionally displaying status messages. When the software is finished being copied from the external USB flash drive to the device, the device then reboots from the internal flash storage on which the software was just installed. When the reboot is complete, the device displays the Junos OS login prompt:

```
root@device#
```

Related Documentation

- [Verifying That a System Snapshot Was Created on a QFX Series Switch on page 245](#)
- [Understanding System Snapshot on page 241](#)

Verifying That a System Snapshot Was Created on a QFX Series Switch

Purpose Verify that a system snapshot was created with the proper files on a QFX Series switch.

Action View the snapshot on a QFX3500 or QFX3600 switch:

`show system snapshot slice 1`

```
user@switch> show system snapshot slice 1
Information for snapshot on external (da1s1)
Creation date: Sep 28 15:39:47 2011
JUNOS version on snapshot:
  jbase   : qfx-11.3-20110922.0
  jcrypto: qfx-11.3-20110922.0
  jdocs   : qfx-11.3-20110922.0
  jkernel: qfx-11.3-20110922.0
  jroute  : qfx-11.3-20110922.0
  jswitch: qfx-11.3-20110922.0
  jpfe    : qfx-e9xxx-11.3-20110922.0
```

View the snapshot on a QFX5100 switch:

`show system snapshot`

```
user@switch show system snapshot
fpc0:
-----
Valid Junos snapshot found
Information for snapshot on      usb (/dev/da0s1)
Creation date: Oct 31 16:02:35 2013
JUNOS version on snapshot:
  JUNOS   : 13.2-20131030_x_132_x51_exdc.0
```

Meaning The output shows the date and time when the snapshot was created and the packages that are part of the snapshot. The date and time match the time when you created the snapshot.

You can compare the output of this command to the output of the **show system software** command to ensure that the snapshot contains the same packages as the software currently running the switch.

**Related
Documentation**

- [Creating a Snapshot and Using It to Boot a QFX3500 and QFX3600 Series Switch on page 174](#)

PART 16

Configuration Statements and Operational Commands

- [Basic System Management Configuration Statements on page 249](#)
- [DHCP Configuration Statements on page 285](#)
- [ICMP Configuration Statement on page 293](#)
- [Login Class Configuration Statements on page 295](#)
- [NTP Configuration Statements on page 309](#)
- [Password Configuration Statements on page 321](#)
- [Autoinstallation Operational Commands on page 339](#)
- [Basic System Management Operational Commands on page 343](#)
- [CLI Operational Commands on page 445](#)
- [Licensing Operational Commands on page 455](#)
- [NSSU Operational Commands on page 467](#)
- [NTP Operational Commands on page 477](#)
- [QFabric System Operational Commands on page 483](#)
- [Recovery Installation Operational Commands on page 563](#)
- [Routine Monitoring Operational Commands on page 573](#)
- [Standard Software Installation and Upgrade Operational Commands on page 1295](#)
- [Software Downgrade Operational Commands on page 1333](#)
- [System Snapshot Operational Commands on page 1339](#)

CHAPTER 16

Basic System Management Configuration Statements

- [arp \(System\) on page 251](#)
- [auxiliary on page 252](#)
- [checksum on page 253](#)
- [compress-configuration-files \(System\) on page 254](#)
- [console \(Physical Port\) on page 255](#)
- [default-address-selection on page 256](#)
- [domain-name on page 257](#)
- [domain-search on page 257](#)
- [ethernet \(Alarm\) on page 258](#)
- [host-name on page 258](#)
- [icmpv4-rate-limit on page 259](#)
- [internet-options on page 260](#)
- [link-down on page 261](#)
- [location on page 262](#)
- [login-alarms on page 263](#)
- [management-ethernet \(Alarm\) on page 264](#)
- [max-configurations-on-flash on page 265](#)
- [name-server on page 265](#)
- [no-ping-record-route on page 266](#)
- [no-ping-time-stamp on page 266](#)
- [no-redirects \(IPv4 Traffic\) on page 267](#)
- [optional on page 268](#)
- [ports on page 268](#)
- [retry on page 269](#)
- [saved-core-context on page 270](#)
- [saved-core-files on page 270](#)

- [source-port \(Port Addresses\) on page 271](#)
- [static-host-mapping on page 272](#)
- [system on page 273](#)
- [time-format on page 278](#)
- [time-zone on page 279](#)
- [traceoptions \(Layer 2 Learning\) on page 281](#)
- [uid on page 283](#)
- [use-imported-time-zones on page 283](#)

arp (System)

Syntax	<pre>arp { aging-timer <i>minutes</i>; gratuitous-arp-delay <i>seconds</i>; gratuitous-arp-on-ifup; interfaces { <i>interface-name</i> { aging-timer <i>minutes</i>; } } passive-learning; purging; }</pre> <p>For EX-Series switches:</p> <pre>arp { aging-timer <i>minutes</i>; }</pre>
Hierarchy Level	[edit system]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Specify ARP options. You can enable backup VRRP routers to learn ARP requests for VRRP-IP to VRRP-MAC address translation. You can also set the time interval between ARP updates.</p> <p>For EX-Series switches, set only the time interval between ARP updates.</p>
Options	<p>aging-timer—Time interval in minutes between ARP updates. In environments where the number of ARP entries to update is high (for example, on routers only, metro Ethernet environments), increasing the time between updates can improve system performance.</p> <p>passive-learning (QFX-Series only)—Configure switches to learn the ARP mappings (IP-to-MAC address) for hosts sending the requests.</p> <p>Default: 20 minutes</p> <p>Range: 1 to 240 minutes</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Junos OS ARP Learning and Aging Options for Mapping IPv4 Network Addresses to MAC Addresses</i> • <i>Junos OS Network Interfaces Library for Routing Devices</i>

- [Junos OS System Basics Configuration Guide](#) .


auxiliary

Syntax	<pre>auxiliary { disable; insecure; type <i>terminal-type</i>; }</pre>
Hierarchy Level	[edit system ports]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the characteristics of the auxiliary port.
Default	The auxiliary port is disabled.
Options	<p>disable—Disable the port.</p> <p>insecure—Disable superuser access or root logins to establish a terminal connection.</p> <p>type <i>terminal-type</i>—Type of terminal that is connected to the port.</p> <p>Range: <code>ansi</code>, <code>vt100</code>, <code>small-xterm</code>, <code>xterm</code></p> <p>Default: The terminal type is unknown, and the user is prompted for the terminal type.</p>
Required Privilege Level	<p><code>system</code>—To view this statement in the configuration.</p> <p><code>system-control</code>—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Console and Auxiliary Port Properties on page 15

checksum

Syntax	<code>checksum (md5 sha-256 sha1) <i>hash</i>;</code>
Hierarchy Level	[edit event-options event-script file <i>filename</i>], [edit system scripts commit file <i>filename</i>],
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	For Junos commit scripts and op scripts, specify the MD5, SHA-1, or SHA-256 checksum hash. When it executes a local event or commit script, the Junos OS verifies the authenticity of the script by using the configured checksum hash.
Options	<p>md5 <i>hash</i>—MD5 checksum of this script.</p> <p>sha-256 <i>hash</i>—SHA-256 checksum of this script.</p> <p>sha1 <i>hash</i>—SHA-1 checksum of this script.</p>
Required Privilege Level	<p>maintenance—To view this statement in the configuration.</p> <p>maintenance-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Checksum Hashes for a Commit Script</i> • <i>Configuring Checksum Hashes for an Event Script</i> • <i>Configuring Checksum Hashes for an Op Script</i> • file checksum md5 on page 363 • file checksum sha-256 on page 365 • file checksum sha1 on page 364

compress-configuration-files (System)

Syntax	(compress-configuration-files no-compress-configuration-files);
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Compress the current operational configuration file. The file is stored in the file juniper.conf , in the /config file system, along with the last three committed versions of the configuration. However, with large networks, the current configuration file might exceed the available space in the /config file system. Compressing the current configuration file allows the file to fit in the file system, typically reducing the size of the file by 90 percent. The current configuration file is compressed on the second commit of the configuration after the first commit is made to include the compress-configuration-files statement.
<div> NOTE: We recommend that you enable compression of the configuration files to minimize the amount of disk space that they require.</div>	
Default	The current operational configuration file is uncompressed.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Compressing the Current Configuration File on page 14

console (Physical Port)

Syntax	<pre>console { disable; insecure; log-out-on-disconnect; type <i>terminal-type</i>; }</pre>
Hierarchy Level	[edit system ports]
Release Information	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Configure the characteristics of the console port.
Default	The console port is enabled and its speed is 9600 baud.
Options	<p>disable—Disable console login connections.</p> <p>insecure—Disable root login connections to the console and auxiliary ports. Configuring the console port as insecure also prevents superusers and anyone with a user identifier (UID) of 0 from establishing terminal connections in multiuser mode. This option can prevent a user from attempting password recovery by booting into single-user mode if the user does not know the root password.</p> <p>log-out-on-disconnect—Log out the session when the data carrier on the console port is lost.</p> <p>type <i>terminal-type</i>—Type of terminal that is connected to the port: ansi, vt100, small-xterm, or xterm.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Console and Auxiliary Port Properties on page 15

default-address-selection

Syntax	default-address-selection;
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Use the loopback interface, lo0 , as the source address for all locally generated IP packets when the packet is sent through a routed interface, but not when the packet is sent through a local interface such as fxp0 . The lo0 interface is the interface to the switch's Routing Engine.
Default	<p>The default address is used as the source address for all locally generated IP packets on outgoing interfaces that are unnumbered. If an outgoing interface is numbered, the default address is chosen using the following sequence:</p> <ul style="list-style-type: none">• The primary address on the loopback interface lo0 that is <i>not</i> 127.0.0.1 is used.• The primary address for the primary interface or the preferred address (if configured) for the primary interface is used. <p>By default, the primary address on an interface is selected as the numerically lowest local address configured on the interface.</p> <p>An interface's <i>primary address</i> is used by default as the local address for broadcast and multicast packets sourced locally and sent out through the interface. An interface's <i>preferred address</i> is the default local address used for packets sourced by the local switch to destinations on the subnet. By default, the numerically lowest local address configured for the interface is chosen as the preferred address on the subnet.</p> <p>To configure a different primary address or preferred address, include the primary or preferred statement at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i>] or [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i>] hierarchy levels.</p>
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Junos OS to Select a Fixed Source Address for Locally Generated TCP/IP Packets on page 21• <i>Junos OS Network Interfaces Library for Routing Devices</i>

domain-name

Syntax	<code>domain-name <i>domain-name</i>;</code>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the name of the domain in which the switch is located. This is the default domain name that is appended to hostnames that are not fully qualified.
Options	<i>domain-name</i> —Name of the domain.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Reaching a Domain Name System Server on page 27

domain-search

Syntax	<code>domain-search <i>domain-list</i>;</code>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure a list of domains to be searched.
Options	<i>domain-list</i> —List of domain names to search. The list can contain up to 6 domain names, with a total of up to 256 characters.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Reaching a Domain Name System Server on page 27

ethernet (Alarm)

Syntax	ethernet { link-down (red yellow ignore); }
Hierarchy Level	[edit chassis alarm], [edit chassis interconnect-device <i>name</i> alarm], [edit chassis node-group <i>name</i> alarm]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure alarms for an Ethernet interface.
Options	The remaining statement is explained separately.—
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Understanding Alarms• Interface Alarm Messages

host-name

Syntax	host-name <i>hostname</i> ;
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set the hostname of the switch.
Options	<i>hostname</i> —Name of the switch.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Hostname of the Router or Switch on page 16

icmpv4-rate-limit

Syntax	<pre>icmpv4-rate-limit { bucket-size <i>seconds</i>; packet-rate <i>pps</i>; }</pre>
Hierarchy Level	[edit system internet-options]
Release Information	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Configure rate-limiting parameters for ICMPv4 messages sent.
Options	<p>bucket-size <i>seconds</i>—Number of seconds in the rate-limiting bucket.</p> <p>Range: 0 through 4294967295 seconds</p> <p>Default: 5</p> <p>packet-rate <i>pps</i>—Rate-limiting packets earned per second.</p> <p>Range: 0 through 4294967295 pps</p> <p>Default: 1000</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>ping</i> • <i>Configuring Junos OS ICMPv4 Rate Limit for ICMPv4 Routing Engine Messages</i> • <i>Configuring Junos OS ICMPv6 Rate Limit for ICMPv6 Routing Engine Messages</i>

internet-options

Syntax	<pre>internet-options { icmpv4-rate-limit bucket-size <i>bucket-size</i> packet-rate <i>packet-rate</i>; source-port upper-limit <i>upper-limit</i>; }</pre>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Configure system IP options to protect against certain types of denial-of-service (DoS) attacks.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Junos OS ICMPv4 Rate Limit for ICMPv4 Routing Engine Messages on page 86• Configuring Junos OS to Extend the Default Port Address Range on page 20

link-down

Syntax	link-down (red yellow ignore);
Hierarchy Level	[edit chassis alarm ethernet], [edit chassis alarm fibre-channel], [edit chassis interconnect-device <i>name</i> alarm ethernet], [edit chassis node-group <i>name</i> alarm fibre-channel]
Release Information	Statement introduced in Junos OS Release 11.3 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify either red, yellow, or ignore to display when the link is down.
Options	<p>red—Indicates that one or more hardware components have failed or exceeded temperature thresholds, or an alarm condition configured on an interface has triggered a critical warning.</p> <p>yellow—Indicates a noncritical condition on the device that, if left unchecked, might cause an interruption in service or degradation in performance. A yellow alarm condition requires monitoring or maintenance.</p> <p>ignore—Suppresses or ignores the alarm.</p>
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.

location

Syntax	<pre>location { altitude <i>feet</i>; building <i>name</i>; country-code <i>code</i>; floor <i>number</i>; hcoord <i>horizontal-coordinate</i>; lata <i>service-area</i>; latitude <i>degrees</i>; longitude <i>degrees</i>; npa-nxx <i>number</i>; postal-code <i>postal-code</i>; rack <i>number</i>; vcoord <i>vertical-coordinate</i>; }</pre>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the system location.
Options	<p>altitude <i>feet</i>—Number of feet above sea level.</p> <p>building <i>name</i>—Name of the building. The name of the building can be 1 to 28 characters in length. If the string contains spaces, enclose it in quotation marks (" ").</p> <p>country-code <i>code</i>—Two-letter country code.</p> <p>floor <i>number</i>—Floor in the building.</p> <p>hcoord <i>horizontal-coordinate</i>—Bellcore Horizontal Coordinate.</p> <p>lata <i>service-area</i>—Long-distance service area.</p> <p>latitude <i>degrees</i>—Latitude in degree format.</p> <p>longitude <i>degrees</i>—Longitude in degree format.</p> <p>npa-nxx <i>number</i>—First six digits of the phone number (area code and exchange).</p> <p>postal-code <i>postal-code</i>—Postal code.</p> <p>rack <i>number</i>—Rack number.</p> <p>vcoord <i>vertical-coordinate</i>—Bellcore Vertical Coordinate.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>

- Related Documentation**
- [Specifying the Physical Location of the Switch on page 30](#)

login-alarms

Syntax	login-alarms;
Hierarchy Level	[edit system login class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Show system alarms automatically when an admin user logs in to the router or switch.
Options	<i>class-name</i> —Login class name.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring System Alarms to Appear Automatically Upon Login on page 21

management-ethernet (Alarm)

Syntax	management-ethernet { link-down (red yellow ignore); }
Hierarchy Level	[edit chassis alarm], [edit chassis interconnect-device <i>name</i> alarm], [edit chassis node-group <i>name</i> alarm]
Release Information	Statement introduced in Junos OS Release 12.2 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure alarms for a management Ethernet interface.



NOTE: If you configure a yellow alarm on the Interconnect device, it will be handled as a red alarm.

Options	The remaining statement is explained separately.—
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Understanding Alarms</i>• <i>Interface Alarm Messages</i>

max-configurations-on-flash

Syntax	<code>max-configurations-on-flash <i>number</i>;</code>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the number of configurations stored on the internal fixed media storage (for example, USB device).
Options	<i>number</i> —The number of configurations stored on the CompactFlash card. Range: 0 through 49. The most recently saved configuration is number 0, and the oldest saved configuration is number 49.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Saving a Configuration to a File</i> • <i>Setting or Deleting the Rescue Configuration</i> • <i>Uploading a Configuration File</i> • <i>Uploading a Configuration File</i>

name-server

Syntax	<code>name-server { <i>address</i>; }</code>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure one or more Domain Name System (DNS) name servers.
Options	<i>address</i> —Address of the name server. To configure multiple name servers, include multiple <i>address</i> options.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring a DNS Name Server for Resolving a Hostname into Addresses on page 15

no-ping-record-route

Syntax	no-ping-record-route;
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 9.4 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the Junos OS to disable the reporting of the IP address in ping responses.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses on page 20

no-ping-time-stamp

Syntax	no-ping-time-stamp;
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 9.4 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the Junos OS to disable the recording of timestamps in ping responses.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses on page 20

no-redirects (IPv4 Traffic)

Syntax	no-redirects;
Hierarchy Level	[edit system], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 12.3 for EX Series switches. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Stop protocol redirect messages for IPv4 traffic from being sent on the entire switch or on an interface on the router or switch.</p> <p>To disable the sending of protocol redirect messages for the entire router or switch, include the no-redirects statement at the [edit system] hierarchy level.</p> <p>To disable the sending of protocol redirect messages on a specific interface, include the no-redirects statement at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>] hierarchy level.</p>
Default	The router or switch sends redirect messages.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Junos OS to Disable Protocol Redirect Messages on the Router or Switch on page 19 • <i>Understanding the Protocol Redirect Mechanism on EX Series Switches</i> • <i>Configuring Junos OS to Disable Sending Protocol Redirect Messages on EX Series Switches (CLI Procedure)</i> • <i>Junos OS Network Interfaces Library for Routing Devices</i>

optional

Syntax	optional;
Hierarchy Level	[edit system scripts commit file <i>filename</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	For Junos OS commit scripts, allow a commit operation to succeed even if the script specified in the file statement is missing from the /var/db/scripts/commit directory on the router.
Required Privilege Level	maintenance—To view this statement in the configuration. maintenance-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Controlling Execution of Commit Scripts During Commit Operations</i>

ports

Syntax	<pre>ports { auxiliary { disable; insecure; type <i>terminal-type</i>; } console { disable; insecure; log-out-on-disconnect; type <i>terminal-type</i>; } }</pre>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the properties of the console and auxiliary ports. The ports are located on the craft interface. See the switch hardware documentation for port locations. The remaining statements are explained separately.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Console and Auxiliary Port Properties on page 15

retry

Syntax	<code>retry number;</code>
Hierarchy Level	[edit system radius server <i>server-address</i>], [edit system accounting destination radius server <i>server-address</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Number of times the router or switch is allowed to try to contact a RADIUS authentication or accounting server.
Options	<i>number</i> —Number of retries allowed for contacting a RADIUS server. Range: 1 through 10 Default: 3



NOTE: The [edit system accounting] hierarchy is not available on QFabric systems.

Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring RADIUS Authentication (QFX Series or OCX Series)</i> • <i>Configuring RADIUS Accounting</i> • <i>timeout</i>

saved-core-context

Syntax	(saved-core-context no-saved-core-context);
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure whether the switch saves core files generated by internal Junos OS processes, along with contextual information (system log files and a copy of the current configuration): <ul style="list-style-type: none">• saved-core-context—The switch saves each core file and its associated context in a compressed tar file named <code>/var/tmp/process-name.core.core-number.tgz</code>.• no-saved-core-context—The switch does not save core files and their associated context.
Default	The switch saves core files.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Saving Core Files from Junos OS Processes</i>• saved-core-files on page 270

saved-core-files

Syntax	saved-core-files <i>number</i> ;
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Save core files generated by internal Junos OS processes, but not the associated contextual information (configuration and system log files).
Options	<i>number</i> —Maximum number of core files to save. Range: 1 through 10
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Saving Core Files from Junos OS Processes</i>• saved-core-context on page 270

source-port (Port Addresses)

Syntax	source-port upper-limit < <i>upper-limit</i> >;
Hierarchy Level	[edit system internet-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the range of port addresses.
Options	upper-limit <i>upper-limit</i> —(Optional) The range of port addresses and can be a value from 5000 through 65,355.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Junos OS to Extend the Default Port Address Range on page 20

static-host-mapping

Syntax	<pre>static-host-mapping { hostname { alias [<i>alias</i>]; inet [<i>address</i>]; sysid <i>system-identifier</i>; } }</pre>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Map a hostname to one or more IP addresses and aliases, and configure an International Organization for Standardization (ISO) system identifier (system ID).
Options	<p>alias <i>alias</i>—Alias for the hostname.</p> <p>hostname—Fully qualified hostname.</p> <p>inet <i>address</i>—IP address. You can specify one or more IP addresses for the host.</p> <p>sysid <i>system-identifier</i>—ISO system identifier (system ID). This is the 6-byte portion of the Intermediate System-to-Intermediate System (IS-IS) network service access point (NSAP). We recommend that you use the host's IP address represented in binary-coded decimal (BCD) format. For example, the IP address 208.197.169.18 is 2081.9716.9018 in BCD.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring the Hostname of the Router or Switch on page 16

system

```
Syntax  system {
    accounting {
        events [ login change-log interactive-commands ];
        destination {
            radius {
                server {
                    server-address {
                        accounting-port port-number;
                        retry number;
                        secret password;
                        source-address address;
                        timeout seconds;
                    }
                }
            }
        }
        tacplus {
            server {
                server-address {
                    port port-number;
                    secret password;
                    single-connection;
                    timeout seconds;
                }
            }
        }
    }
    archival {
        configuration {
            archive-sites {
                ftp://<username>:<password>@<host>:<port>/<url-path>;
                ftp://<username>:<password>@<host>:<port>/<url-path>;
            }
            transfer-interval interval;
            transfer-on-commit;
        }
    }
    arp {
        aging-timer minutes;
        interfaces;
    }
    authentication-order [ authentication-methods ];
    (compress-configuration-files | no-compress-configuration-files);
    default-address-selection;
    domain-name domain-name;
    domain-search [ domain-list ];
    host-name hostname;
    internet-options {
        icmpv4-rate-limit bucket-size packet-rate packet-rate;
        source-port upper-limit <upper-limit>;
    }
    location {
```

```
altitude feet;  
building name;  
country-code code;  
floor number;  
hcoord horizontal-coordinate;  
lata service-area;  
latitude degrees;  
longitude degrees;  
npa-nxx number;  
postal-code postal-code;  
rack number;  
vcoord vertical-coordinate;  
}  
login {  
  announcement text;  
  class class-name {  
    access-end;  
    access-start;  
    allow-configuration "regular-expression";  
    allowed-days "regular-expression";  
    deny-commands "regular-expression";  
    deny-configuration "regular-expression";  
    idle-timeout minutes;  
    login-tip;  
    permissions [ permissions ];  
  }  
  message text;  
  password {  
    change-type (set-transitions | character-set);  
    format (md5 | sha1 | des);  
    maximum-length length;  
    minimum-changes number;  
    minimum-length length;  
  }  
  retry-options {  
    backoff-factor seconds;  
    backoff-threshold number;  
    minimum-time seconds;  
    tries-before-disconnect number;  
  }  
  user username {  
    authentication {  
      (encrypted-password "password" | plain-text-password);  
      load-key-file URL;  
      remote-debug-permission (qfabric-admin | qfabric-operator | qfabric-user);  
      ssh-rsa "public-key";  
      ssh-dsa "public-key";  
    }  
    uid uid-value;  
    class class-name;  
    full-name complete-name;  
  }  
}  
name-server {  
  address;  
}
```



```

no-multicast-echo;
no-redirects;
no-ping-record-route;
no-ping-time-stamp;
ntp {
    authentication-key number type type value password;
    serveraddress <key key-number> <version value> <prefer>;
}
ports {
    auxiliary {
        disable;
        insecure;
        type terminal-type;
    }
    console {
        disable;
        insecure;
        log-out-on-disconnect;
        type terminal-type;
    }
}
radius-server server-address {
    accounting-port port-number;
    port number;
    retry number;
    secret password;
    source-address source-address;
    timeout seconds;
}
radius-options {
    password-protocol mschap-v2;
}
attributes {
    nas-ip-address ip-address;
}
root-authentication {
    (encrypted-password "password" | plain-text-password);
    ssh-rsa "public-key";
    ssh-dsa "public-key";
}
(saved-core-context | no-saved-core-context);
saved-core-files saved-core-files;
services {
    finger {
        connection-limit limit;
        rate-limit limit;
    }
    flow-tap-dtcp {
        ssh {
            connection-limit limit;
            rate-limit limit;
        }
    }
}
ftp {
    connection-limit limit;
    rate-limit limit;
}

```

```
}
service-deployment {
  servers server-address {
    port port-number;
  }
  source-address source-address;
}
ssh {
  root-login (allow | deny | deny-password);
  protocol-version [v1 v2];
  connection-limit limit;
  rate-limit limit;
}
telnet {
  connection-limit limit;
  rate-limit limit;
}
web-management {
  http {
    interfaces [ interface-names ];
    port port;
  }
  https {
    interfaces [ interface-names ];
    local-certificate name;
    port port;
  }
  session {
    idle-timeout [ minutes ];
    session-limit [ session-limit ];
  }
}
xnm-clear-text {
  connection-limit limit;
  rate-limit limit;
}
xnm-ssl {
  connection-limit limit;
  local-certificate name;
  rate-limit limit;
}
}
static-host-mapping {
  hostname {
    alias [ alias ];
    inet [ address ];
    sysid system-identifier;
  }
}
syslog {
  archive {
    files number;
    size maximum-file-size;
    start-time "YYYY-MM-DD.hh:mm";
    transfer-interval minutes;
    (world-readable | no-world-readable);
  }
}
```

```

}
console {
    facility severity;
}
file filename {
    archive {
        files number;
        size maximum-file-size;
        start-time "YYYY-MM-DD.hh:mm";
        transfer-interval minutes;
        (world-readable | no-world-readable);
    }
    explicit-priority;
    facility severity;
    match "regular-expression";
    structured-data {
        brief;
    }
}
host (hostname | other-routing-engine | scc-master) {
    explicit-priority;
    facility-override facility;
    facility severity;
    log-prefix string;
    match "regular-expression";
}
source-address source-address;
time-format (millisecond | year | year millisecond);
user (username | *) {
    facility severity;
    match "regular-expression";
}
}
tacplus-options {
    service-name service-name;
    (no-cmd-attribute-value | exclude-cmd-attribute);
}
tacplus-server server-address {
    port
    secret password;
    single-connection;
    source-address source-address;
    timeout seconds;
}
time-zone (GMThour-offset | time-zone);
}
tracing {
    destination-override {
        syslog host;
    }
}
use-imported-time-zones;
}

```

Hierarchy Level [edit]

Release Information Statement introduced in Junos OS Release 11.1 for the QFX Series.
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Configure system management properties.



NOTE: The `radius-server source-address` and `radius-options` statements are not available on the QFabric system.

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

time-format

Syntax `time-format (year | millisecond | year millisecond);`

Hierarchy Level [edit system syslog]

Release Information Statement introduced in Junos OS Release 11.1 for the QFX Series.
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Include the year, the millisecond, or both, in the timestamp on every standard-format system log message. The additional information is included for messages directed to each destination configured by a `file`, `console`, or `user` statement at the [edit system syslog] hierarchy level, but not to destinations configured by a `host` statement.

Default The timestamp specifies the month, date, hour, minute, and second when the message was logged—for example, **Aug 21 12:36:30**.



NOTE: When the `structured-data` statement is included at the [edit system syslog file *filename*] hierarchy level, this statement is ignored for the file.

Options `millisecond`—Include the millisecond in the timestamp.

`year`—Include the year in the timestamp.

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Related Documentation

- [Including the Year or Millisecond in Timestamps on page 24](#)
- `structured-data`

time-zone

Syntax	<code>time-zone (GMT <i>hour-offset</i> <i>time-zone</i>);</code>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set the local time zone. To have the time zone change take effect for all processes running on the switch, you must reboot the switch.
Default	UTC
Options	<p>GMT <i>hour-offset</i>—Set the time zone relative to UTC time.</p> <p>Range: –14 through +12</p> <p>Default: 0</p> <p><i>time-zone</i>—Specify the time zone as UTC, which is the default time zone, or as a string such as PDT (Pacific Daylight Time), or use one of the following continents and major cities:</p> <p>Africa/Abidjan, Africa/Accra, Africa/Addis_Ababa, Africa/Algiers, Africa/Asmera, Africa/Bamako, Africa/Bangui, Africa/Banjul, Africa/Bissau, Africa/Blantyre, Africa/Brazzaville, Africa/Bujumbura, Africa/Cairo, Africa/Casablanca, Africa/Ceuta, Africa/Conakry, Africa/Dakar, Africa/Dar_es_Salaam, Africa/Djibouti, Africa/Douala, Africa/El_Aaiun, Africa/Freetown, Africa/Gaborone, Africa/Harare, Africa/Johannesburg, Africa/Kampala, Africa/Khartoum, Africa/Kigali, Africa/Kinshasa, Africa/Lagos, Africa/Libreville, Africa/Lome, Africa/Luanda, Africa/Lubumbashi, Africa/Lusaka, Africa/Malabo, Africa/Maputo, Africa/Maseru, Africa/Mbabane, Africa/Mogadishu, Africa/Monrovia, Africa/Nairobi, Africa/Ndjamena, Africa/Niamey, Africa/Nouakchott, Africa/Ouagadougou, Africa/Porto-Novo, Africa/Sao_Tome, Africa/Timbuktu, Africa/Tripoli, Africa/Tunis, Africa/Windhoek</p> <p>America/Adak, America/Anchorage, America/Anguilla, America/Antigua, America/Aruba, America/Asuncion, America/Barbados, America/Belize, America/Bogota, America/Boise, America/Buenos_Aires, America/Caracas, America/Catamarca, America/Cayenne, America/Cayman, America/Chicago, America/Cordoba, America/Costa_Rica, America/Cuiaba, America/Curacao, America/Dawson, America/Dawson_Creek, America/Denver, America/Detroit, America/Dominica, America/Edmonton, America/El_Salvador, America/Ensenada, America/Fortaleza, America/Glace_Bay, America/Godthab, America/Goose_Bay, America/Grand_Turk, America/Grenada, America/Guadeloupe, America/Guatemala, America/Guayaquil, America/Guyana, America/Halifax, America/Havana, America/Indiana/Knox, America/Indiana/Marengo, America/Indiana/Vevay, America/Indianapolis, America/Inuvik, America/Iqaluit, America/Jamaica, America/Jujuy, America/Juneau, America/La_Paz, America/Lima, America/Los_Angeles, America/Louisville, America/Maceio, America/Managua, America/Manaus, America/Martinique, America/Mazatlan, America/Mendoza, America/Menominee, America/Mexico_City, America/Miquelon, America/Montevideo, America/Montreal, America/Montserrat, America/Nassau, America/New_York, America/Nipigon, America/Nome, America/Noronha, America/Panama, America/Pangnirtung, America/Paramaribo, America/Phoenix, America/Port-au-Prince, America/Port_of_Spain, America/Porto_Acre, America/Puerto_Rico, America/Rainy_River,</p>

America/Rankin_Inlet, America/Regina, America/Rosario, America/Santiago, America/Santo_Domingo, America/Sao_Paulo, America/Scoresbysund, America/Shiprock, America/St_Johns, America/St_Kitts, America/St_Lucia, America/St_Thomas, America/St_Vincent, America/Swift_Current, America/Tegucigalpa, America/Thule, America/Thunder_Bay, America/Tijuana, America/Tortola, America/Vancouver, America/Whitehorse, America/Winnipeg, America/Yakutat, America/Yellowknife

Antarctica/Casey, Antarctica/DumontDURville, Antarctica/Mawson, Antarctica/McMurdo, Antarctica/Palmer, Antarctica/South_Pole

Arctic/Longyearbyen

Asia/Aden, Asia/Alma-Ata, Asia/Amman, Asia/Anadyr, Asia/Aqtau, Asia/Aqtobe, Asia/Ashkhabad, Asia/Baghdad, Asia/Bahrain, Asia/Baku, Asia/Bangkok, Asia/Beirut, Asia/Bishkek, Asia/Brunei, Asia/Calcutta, Asia/Chungking, Asia/Colombo, Asia/Dacca, Asia/Damascus, Asia/Dubai, Asia/Dushanbe, Asia/Gaza, Asia/Harbin, Asia/Hong_Kong, Asia/Irkutsk, Asia/Ishigaki, Asia/Jakarta, Asia/Jayapura, Asia/Jerusalem, Asia/Kabul, Asia/Kamchatka, Asia/Karachi, Asia/Kashgar, Asia/Katmandu, Asia/Krasnoyarsk, Asia/Kuala_Lumpur, Asia/Kuching, Asia/Kuwait, Asia/Macao, Asia/Magadan, Asia/Manila, Asia/Muscat, Asia/Nicosia, Asia/Novosibirsk, Asia/Omsk, Asia/Phnom_Penh, Asia/Pyongyang, Asia/Qatar, Asia/Rangoon, Asia/Riyadh, Asia/Saigon, Asia/Seoul, Asia/Shanghai, Asia/Singapore, Asia/Taipei, Asia/Tashkent, Asia/Tbilisi, Asia/Tehran, Asia/Thimbu, Asia/Tokyo, Asia/Ujung_Pandang, Asia/Ulan_Bator, Asia/Urumqi, Asia/Vientiane, Asia/Vladivostok, Asia/Yakutsk, Asia/Yekaterinburg, Asia/Yerevan

Atlantic/Azores, Atlantic/Bermuda, Atlantic/Canary, Atlantic/Cape_Verde, Atlantic/Faeroe, Atlantic/Jan_Mayen, Atlantic/Madeira, Atlantic/Reykjavik, Atlantic/South_Georgia, Atlantic/St_Helena, Atlantic/Stanley

Australia/Adelaide, Australia/Brisbane, Australia/Broken_Hill, Australia/Darwin, Australia/Hobart, Australia/Lindeman, Australia/Lord_Howe, Australia/Melbourne, Australia/Perth, Australia/Sydney

Europe/Amsterdam, Europe/Andorra, Europe/Athens, Europe/Belfast, Europe/Belgrade, Europe/Berlin, Europe/Bratislava, Europe/Brussels, Europe/Bucharest, Europe/Budapest, Europe/Chisinau, Europe/Copenhagen, Europe/Dublin, Europe/Gibraltar, Europe/Helsinki, Europe/Istanbul, Europe/Kaliningrad, Europe/Kiev, Europe/Lisbon, Europe/Ljubljana, Europe/London, Europe/Luxembourg, Europe/Madrid, Europe/Malta, Europe/Minsk, Europe/Monaco, Europe/Moscow, Europe/Oslo, Europe/Paris, Europe/Prague, Europe/Riga, Europe/Rome, Europe/Samara, Europe/San_Marino, Europe/Sarajevo, Europe/Simferopol, Europe/Skopje, Europe/Sofia, Europe/Stockholm, Europe/Tallinn, Europe/Tirane, Europe/Vaduz, Europe/Vatican, Europe/Vienna, Europe/Vilnius, Europe/Warsaw, Europe/Zagreb, Europe/Zurich

Indian/Antananarivo, Indian/Chagos, Indian/Christmas, Indian/Cocos, Indian/Comoro, Indian/Kerguelen, Indian/Mahe, Indian/Maldives, Indian/Mauritius, Indian/Mayotte, Indian/Reunion

Pacific/Apia, Pacific/Auckland, Pacific/Chatham, Pacific/Easter, Pacific/Efate, Pacific/Enderbury, Pacific/Fakaofu, Pacific/Fiji, Pacific/Funafuti, Pacific/Galapagos, Pacific/Gambier, Pacific/Guadalcanal, Pacific/Guam, Pacific/Honolulu, Pacific/Johnston, Pacific/Kiritimati, Pacific/Kosrae, Pacific/Kwajalein, Pacific/Majuro, Pacific/Marquesas, Pacific/Midway, Pacific/Nauru, Pacific/Niue, Pacific/Norfolk, Pacific/Noumea, Pacific/Pago_Pago, Pacific/Palau, Pacific/Pitcairn, Pacific/Ponape, Pacific/Port_Moresby, Pacific/Rarotonga, Pacific/Saipan, Pacific/Tahiti, Pacific/Tarawa, Pacific/Tongatapu, Pacific/Truk, Pacific/Wake, Pacific/Wallis, Pacific/Yap

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Related Documentation • [Modifying the Default Time Zone for a Router or Switch Running Junos OS on page 25](#)

traceoptions (Layer 2 Learning)

Syntax	<pre> traceoptions { file <i>filename</i> <files <i>number</i>> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i> (detail disable receive send); in-memory-debug; level; no-remote-trace; } </pre>
Hierarchy Level	[edit protocols l2-learning]
Release Information	Statement introduced in Junos OS Release 13.2 for the QFX Series.
Description	Define tracing operations for Layer 2 learning.
Default	The traceoptions feature is disabled by default.
Options	<p>file <i>filename</i>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory /var/log.</p> <p>You can specify the following options:</p> <ul style="list-style-type: none"> • no-world-readable—(Optional) Restrict file access to the user who created the file. • size <i>size</i> —(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0, then trace-file.1, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum number of files, you also must specify a maximum file size with the files option. Use xk to specify KB, xm to specify MB, or xg to specify gigabytes. • world-readable—(Optional) Enable unrestricted file access. <p>flag <i>flag</i> —Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. You can include the following flags:</p> <ul style="list-style-type: none"> • all—All tracing operations. • bmac-next-hop—Trace backbone MAC next hop operations. • bridge-bmac-next-hop—Trace backbone MAC next hop bridge operations. • bridging-interface—Trace interface bridge operations. • bridging-domain—Trace bridging domain operations. • configuration—Trace configuration operations. • flood-next-hop—Trace flood next hop operations. • initialization—Trace initialization operations. • interface-device—Trace interface device operations. • interface-family—Trace interface family operations.

- **interface-logical**—Trace logical interface operations.
- **ipc**—Trace inter-process communications operations.
- **irb**—Trace integrated routing and bridging operations.
- **isid**—Trace i-tagged service ID operations.
- **kack**—Trace kernel-acknowledgment.
- **learning-domain**—Trace learning domain operations.
- **logical-system**—Trace logical system operations.
- **mac-learning**—Trace MAC address learning.
- **mc-ae**—Trace multichassis aggregated Ethernet interface operations.
- **redundant-trunk-group**—Trace redundant trunk group operations.
- **routing-instance**—Trace routing instance operations.
- **routing-socket**—Trace routing socket operations.
- **storm-control**—Trace storm control operations.
- **unknown-unicast-forwarding**—Trace unknown unicast forwarding events.
- **vpls-ping**—Trace Virtual Private VLAN Service (VPLS) ping operations.

in-memory-debug—Enable trace parameters in the memory.

level—Specify level of debugging output.

no-remote-trace—Disable remote tracing.

Required Privilege Level	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
---------------------------------	--

uid

Syntax	<code>uid <i>uid-value</i>;</code>
Hierarchy Level	[edit system login user]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure a user identifier for a login account.
Options	<i>uid-value</i> —Number associated with the login account. This value must be unique on the router or switch. Range: 100 through 64000
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Junos OS User Accounts on page 105

use-imported-time-zones

Syntax	<code>use-imported-time-zones;</code>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure a custom time zone from a locally generated time zone database.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Updating the IANA Time Zone Database on Junos OS Devices on page 33

CHAPTER 17

DHCP Configuration Statements

- [client-identifier \(DHCP Client\) on page 285](#)
- [lease-time on page 286](#)
- [retransmission-attempt on page 287](#)
- [retransmission-interval on page 288](#)
- [server-address on page 289](#)
- [update-server on page 290](#)
- [vendor-option on page 291](#)

client-identifier (DHCP Client)

Syntax	client-identifier (ascii <i>ascii</i> hexadecimal <i>hexadecimal</i>);
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet dhcp]
Release Information	Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify an ASCII or hexadecimal identifier for the Dynamic Host Configuration Protocol (DHCP) client. The DHCP server identifies a client by a client-identifier value, which must be unique for each client.
Default	If you do not include client-identifier in the configuration, the DHCP server uses the client hardware type and MAC address to identify the client.
Options	ascii <i>ascii</i> —Identifier consisting of ASCII characters, such as a fully qualified domain name. hexadecimal <i>hexadecimal</i> —Identifier consisting of hexadecimal numbers (0-9, a-f, A-F). Do not use colons.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	• Configuring a DHCP Client (CLI Procedure) on page 77

lease-time

Syntax	lease-time (<i>seconds</i> infinite);
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet dhcp]
Release Information	Statement introduced in Junos OS Release 8.5 for J Series devices. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 9.2 for SRX Series devices. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Request a specific lease time for the IP address. The lease time is the length of time in seconds that a client holds the lease for an IP address assigned by a DHCP server.
Default	If no lease time is requested by client, then the server sends the lease time. The default lease time on a JUNOS OS DHCP server is one day.
Options	seconds —Request a lease time of a specific duration. Range: 60 through 2147483647 seconds infinite —Request that the lease never expire.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring a DHCP Client (CLI Procedure) on page 77• <i>Example: Configuring the Device as a DHCP Client</i>• <i>interfaces</i>• <i>unit</i>• <i>family</i>

retransmission-attempt

Syntax	<code>retransmission-attempt <i>number</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet dhcp]
Release Information	Statement introduced in Junos OS Release 8.5 for J Series devices. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 9.2 for SRX Series devices. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the number of times the device retransmits a Dynamic Host Control Protocol (DHCP) packet if a DHCP server fails to respond. After the specified number of attempts, no further attempts at reaching a server are made.
Options	<i>number</i> —Number of retransmit attempts.. Range: 0 through 6 Default: 4
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring a DHCP Client (CLI Procedure) on page 77 • <i>Example: Configuring the Device as a DHCP Client</i> • <i>interfaces</i> • <i>unit</i> • <i>family</i>

retransmission-interval

Syntax	retransmission-interval <i>seconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet dhcp]
Release Information	Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the time between successive retransmissions of the client DHCP request if a DHCP server fails to respond.
Options	<i>seconds</i> —Number of seconds between successive retransmissions. Range: 4 through 64 seconds Default: 4 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring a DHCP Client (CLI Procedure) on page 77


server-address

Syntax	<code>server-address <i>ip-address</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet dhcp]
Release Information	Statement introduced in Junos OS Release 8.5 for J Series devices. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 9.2 for SRX Series devices. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the address of the DHCP server that the client should accept DHCP offers from. If this option is included in the DHCP configuration, the client accepts offers only from this server and ignores all other offers.
Default	The client accepts the first offer it receives from any DHCP server.
Options	<i>ip-address</i> —DHCP server address.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring a DHCP Client (CLI Procedure) on page 77 • <i>Example: Configuring the Device as a DHCP Client</i> • <i>interfaces</i> • <i>unit</i> • <i>family</i>

update-server

Syntax	update-server;
Hierarchy Level	[edit Interfaces <i>interface-name</i> unit <i>logical-unit-number</i> inet dhcp]
Release Information	Statement introduced in Junos OS Release 8.5 for J Series devices. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 9.2 for SRX Series devices. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Propagate TCP/IP settings learned from an external DHCP server to the DHCP server running on the switch, router, or device.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring a DHCP Client (CLI Procedure) on page 77• <i>Example: Configuring the Device as a DHCP Client</i>• <i>interfaces</i>• <i>unit</i>• <i>family</i>

vendor-option

Syntax	<pre> vendor-option { default-local-server-group <i>local-server-group-name</i> default-relay-server-group <i>server-group-name</i> drop; equals starts-with }</pre>
Hierarchy Level	[edit forwarding-options dhcp-relay relay-option-60]
Release Information	Statement introduced before Junos OS Release 12.1 for EX Series switches. Statement deprecated in Junos OS Release 12.3 for EX Series switches.
Description	Configure the match criteria when you use the DHCP vendor class identifier option (option 60) in DHCP client packets to forward client traffic to specific DHCP servers. The extended DHCP relay agent compares the option 60 vendor-specific strings received in DHCP client packets against the match criteria that you specify. If there is a match, you can define certain actions for the associated DHCP client packets.
<div style="display: flex; align-items: center;">  <div> <p>NOTE: The <code>vendor-option</code> statement has been deprecated and might be removed from future product releases. We recommend that you phase out its use. See <i>option-number</i>.</p> </div> </div>	
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring an Extended DHCP Relay Server on EX Series Switches (CLI Procedure)</i> • <i>Understanding the Extended DHCP Relay Agent for EX Series Switches</i>

CHAPTER 18

ICMP Configuration Statement

- [no-multicast-echo on page 293](#)

no-multicast-echo

Syntax	no-multicast-echo {
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 8.1. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Disable the Routing Engine from responding to ICMP echo requests sent to multicast group addresses.
Default	The Routing Engine responds to ICMP echo requests sent to multicast group addresses.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	• Configuring Junos OS to Disable the Routing Engine Response to Multicast Ping Packets on page 86

CHAPTER 19

Login Class Configuration Statements

- [access-end on page 296](#)
- [access-start on page 296](#)
- [allow-commands on page 297](#)
- [allow-configuration on page 298](#)
- [allowed-days on page 298](#)
- [announcement on page 299](#)
- [authentication \(Login\) on page 300](#)
- [class \(Defining Login Classes\) on page 301](#)
- [class \(Assigning a Class to an Individual User\) on page 302](#)
- [deny-commands on page 302](#)
- [deny-configuration on page 303](#)
- [idle-timeout on page 304](#)
- [load-key-file on page 305](#)
- [login on page 306](#)
- [login-tip on page 307](#)
- [message on page 307](#)
- [user \(Access\) on page 308](#)

access-end

Syntax	access-end <i>HH:MM</i> ;
Hierarchy Level	[edit system login class]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the end time for login access.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Time-Based User Access on page 21

access-start

Syntax	access-start <i>HH:MM</i> ;
Hierarchy Level	[edit system login class]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the start time for login access.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Time-Based User Access on page 21

allow-commands

Syntax	<code>allow-commands "regular-expression";</code>
Hierarchy Level	[edit system login class <i>class-name</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the operational mode commands that members of a login class can use.
Default	If you omit this statement and the deny-commands statement, users can issue only those commands for which they have access privileges through the permissions statement.
Options	regular-expression —Extended (modern) regular expression as defined in POSIX 1003.2. If the regular expression contains any spaces, operators, or wildcard characters, enclose it in quotation marks.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Specifying Access Privileges for Junos OS Operational Mode Commands on page 31• deny-commands on page 302• user on page 308

allow-configuration

Syntax	<code>allow-configuration "regular-expression";</code>
Hierarchy Level	[edit system login class <i>class-name</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Explicitly allow configuration access to the specified levels in the hierarchy even if the permissions set with the permissions statement do not grant such access by default.
Default	If you omit this statement and the deny-configuration statement, users can edit only those commands for which they have access privileges through the permissions statement.
Options	regular-expression —Extended (modern) regular expression as defined in POSIX 1003.2. If the regular expression contains any spaces, operators, or wildcard characters, enclose it in quotation marks.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Specifying Access Privileges for Junos OS Configuration Mode Hierarchies</i>• <i>Regular Expressions for Allowing and Denying Junos OS Configuration Mode Hierarchies</i>• deny-configuration on page 303• user on page 308

allowed-days

Syntax	<code>allowed-days [<i>days-of-the-week</i>];</code>
Hierarchy Level	[edit system login class <i>class-name</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the days of the week when users can log in.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Time-Based User Access on page 21

announcement

Syntax	announcement <i>text</i> ;
Hierarchy Level	[edit system login]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure a system login announcement. This announcement appears after a user logs in.
Options	<i>text</i> —Text of the announcement. If the text contains any spaces, enclose it in quotation marks.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Junos OS to Display a System Login Announcement</i>• Configuring Junos OS to Display a System Login Message on page 106• message on page 307

authentication (Login)

Syntax	<pre>authentication { encrypted-password <i>password</i>; load-key-file <i>URL</i>; plain-text-password <i>password</i>; remote-debug-permission (qfabric-admin qfabric-operator qfabric-user); ssh-dsa "<i>public-key</i>"; ssh-rsa "<i>public-key</i>"; }</pre>
Hierarchy Level	[edit system login user <i>username</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Authentication methods that a user can use to log in to the switch. You can assign multiple authentication methods to a single user.
Options	<p>encrypted-password "<i>password</i>"—Message Digest 5 (MD5) or other encrypted authentication. Specify the MD5 or other password. You can specify only one encrypted password for each user.</p> <p>You cannot configure a blank password for encrypted-password using blank quotation marks (" "). You must configure a password of 1 through 128 characters and enclose the password in quotation marks.</p> <p>load-key-file—Load RSA (SSH version 1 and SSH version 2) and DSA (SSH version 2) public keys from a file. The file is a URL containing one or more SSH keys.</p> <p>plain-text-password—Plain-text password. The command-line interface (CLI) prompts you for the password and then encrypts it.</p> <p>remote-debug-permission (QFabric systems only)—QFabric component authentication. Specifies permission levels for users to access individual components in a QFabric system.</p> <p>ssh-dsa "<i>public-key</i>"—SSH version 2 authentication. Specify the SSH public key. You can specify one or more public keys for each user.</p> <p>ssh-rsa "<i>public-key</i>"—SSH version 1 and SSH version 2 authentication. Specify the SSH public key. You can specify one or more public keys for each user.</p>
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Junos OS User Accounts on page 105• root-authentication on page 335

class (Defining Login Classes)

Syntax	<pre> class <i>class-name</i> { access-end; access-start; allow-commands "<i>regular-expression</i>"; allow-configuration "<i>regular-expression</i>"; deny-commands "<i>regular-expression</i>"; deny-configuration "<i>regular-expression</i>"; idle-timeout <i>minutes</i>; login-tip; permissions [<i>permissions</i>]; } </pre>
Hierarchy Level	[edit system login]
Release Information	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Define a login class.
Options	<p><i>class-name</i>—A name you choose for the login class.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Defining Junos OS Login Classes user on page 308

class (Assigning a Class to an Individual User)

Syntax	<pre>class <i>class-name</i> { operator; read-only; super-user; unauthorized; }</pre>
Hierarchy Level	[edit system login user <i>username</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure a user's login class. You must configure one class for each user.
Options	<i>class-name</i> —One of the classes defined at the [edit system login class] hierarchy level.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Junos OS User Accounts on page 105

deny-commands

Syntax	<pre>deny-commands "<i>regular-expression</i>";</pre>
Hierarchy Level	[edit system login class]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the operational mode commands that the user is denied permission to issue even though the permissions set with the permissions statement would allow their use.
Default	If you omit this statement and the allow-commands statement, users can issue only those commands for which they have access privileges through the permissions statement.
Options	<i>regular-expression</i> —Extended (modern) regular expression as defined in POSIX 1003.2. If the regular expression contains any spaces, operators, or wildcard characters, enclose it in quotation marks.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Specifying Access Privileges for Junos OS Operational Mode Commands on page 31• allow-commands on page 297• user on page 308


deny-configuration

Syntax	<code>deny-configuration "regular-expression";</code>
Hierarchy Level	[edit system login class]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Explicitly deny configuration access to the specified levels in the hierarchy even if the permissions set with the permissions statement grant such access by default.
Default	If you omit this statement and the allow-configuration statement, users can edit those levels in the configuration hierarchy for which they have access privileges through the permissions statement.
Options	regular-expression —Extended (modern) regular expression as defined in POSIX 1003.2. If the regular expression contains any spaces, operators, or wildcard characters, enclose it in quotation marks.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Specifying Access Privileges Using allow/deny-configuration Statements</i>• allow-configuration on page 298• user on page 308

idle-timeout

Syntax	<code>idle-timeout <i>minutes</i>;</code>
Hierarchy Level	[edit system login class <i>class-name</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	For a login class, configure the maximum time that a session can be idle before the user is logged off the switch. The session times out after remaining at the CLI operational mode prompt for the specified time.
Default	If you omit this statement, a user is never forced off the system after extended idle times.
Options	<i>minutes</i> —Maximum idle time. Range: 0 through 4294967295 minutes
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Timeout Value for Idle Login Sessions on page 23

load-key-file

Syntax	<code>load-key-file URL filename;</code>
Hierarchy Level	[edit system root-authentication], [edit system login user <i>username</i> authentication]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	 NOTE: ECDSA is not supported on the QFabric system. <p>Load RSA (SSH version 1 and SSH version 2) and DSA or ECDSA (SSH version 2) public keys from a previously-generated named file at a specified URL location or local path. The file contains one or more SSH keys that are copied into the configuration when the command is issued.</p>
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring the Root Password on page 163 • Configuring the Root Password • Configuring Junos OS User Accounts • Configuring Junos OS User Accounts on page 105

login

```
Syntax login {
    announcement text;
    class class-name {
        access-end "regular-expression";
        access-start "regular-expression";
        allow-commands "regular-expression";
        allow-configuration "regular-expression";
        deny-commands "regular-expression";
        deny-configuration "regular-expression";
        idle-timeout minutes;
        login-tip;
        permissions [ permissions ];
    }
    message text;
    password {
        change-type (set-transitions | character-set);
        format (md5 | sha1 | des);
        maximum-length length;
        minimum-changes number;
        minimum-length length;
    }
    retry-options {
        backoff-factor seconds;
        backoff-threshold number;
        minimum-time seconds;
        tries-before-disconnect number;
    }
    user username {
        authentication authentication;
        (encrypted-password "password" | plain-text-password);
        load-key-file URL;
        remote-debug-permission (qfabric-admin | qfabric-operator | qfabric-user);
        ssh-dsa "public-key";
        ssh-rsa "public-key";
    }
    class class-name;
    full-name complete-name;
    uid uid-value;
}
```

Hierarchy Level [edit system]

Release Information Statement introduced in Junos OS Release 11.1 for the QFX Series.
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Configure user access to the switch.

Options The remaining statements are explained separately.

Required Privilege Level admin—To view this statement in the configuration.
admin-control—To add this statement to the configuration.

Related Documentation

- [Defining Junos OS Login Classes](#)

login-tip

Syntax login-tip;

Hierarchy Level [edit system login class *class-name*]

Release Information Statement introduced in Junos OS Release 11.1 for the QFX Series.
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Enable CLI tips at login.

Default Disabled.

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Related Documentation

- [Configuring Login Tips on page 42](#)

message

Syntax message *text*;

Hierarchy Level [edit system login]

Release Information Statement introduced in Junos OS Release 11.1 for the QFX Series.
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Configure a system login message. This message appears before a user logs in.

Options *text*—Text of the message.

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration

Related Documentation

- [Configuring Junos OS to Display a System Login Message on page 106](#)
- [announcement on page 299](#)

user (Access)

Syntax	<pre>user username { authentication { (encrypted-password "password" plain-text-password); load-key-file URL; remote-debug-permission (qfabric-admin qfabric-operator qfabric-user); ssh-dsa "public-key" <from hostname>; ssh-rsa "public-key" <from hostname>; } class class-name; full-name "complete-name"; uid uid-value; }</pre>
Hierarchy Level	[edit system login]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure access permission for individual users.
Options	The remaining statements are explained separately.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Junos OS User Accounts on page 105• class on page 301

CHAPTER 20

NTP Configuration Statements

- [authentication-key](#) on page 310
- [boot-server \(NTP\)](#) on page 311
- [broadcast](#) on page 312
- [broadcast-client](#) on page 313
- [multicast-client](#) on page 313
- [ntp](#) on page 314
- [ntp \(QFabric\)](#) on page 315
- [peer](#) on page 316
- [server \(NTP\)](#) on page 317
- [source-address \(NTP, RADIUS, System Logging, or TACACS+\)](#) on page 318
- [trusted-key](#) on page 319

authentication-key

Syntax	<code>authentication-key <i>key-number</i> type <i>type</i> value <i>password</i>;</code>
Hierarchy Level	[edit system ntp]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Configure Network Time Protocol (NTP) authentication keys so that the router or switch can send authenticated packets. If you configure the router or switch to operate in authenticated mode, you must configure a key.</p> <p>Both the keys and the authentication scheme (MD5) must be identical between a set of peers sharing the same key number.</p>
Options	<p><i>key-number</i>—An integer in the range of 1 to 65533.</p> <p><i>type type</i>—Authentication type. It can only be md5.</p> <p><i>value password</i>—Key itself, consisting of 1 through 8 ASCII characters. If the key contains spaces, enclose it in quotation marks.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring NTP Authentication Keys (QFabric System) on page 113• Understanding NTP Time Servers on page 111• Configuring NTP Authentication Keys on page 112• NTP Time Server and Time Services Overview (QFabric System) on page 118

boot-server (NTP)

Syntax	<code>boot-server (address hostname);</code>
Hierarchy Level	[edit system ntp]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Configure the server that NTP queries when the router or switch boots to determine the local date and time.</p> <p>When you boot the router or switch, it issues an ntpdate request, which polls a network server to determine the local date and time. You need to configure a server that the router or switch uses to determine the time when the router or switch boots. Otherwise, NTP cannot synchronize to a time server if the server time significantly differs from the local router's or switch's time. You can configure either an IP address or a hostname for the boot server. If you configure a hostname instead of an IP address, the ntpdate request resolves the hostname to an IP address when the router or switch boots up.</p>
Options	<ul style="list-style-type: none"> • address—IP address of an NTP boot server. • hostname—Hostname of an NTP boot server.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Understanding NTP Time Servers on page 111 • Configuring NTP Authentication Keys on page 112 • Synchronizing and Coordinating Time Distribution Using NTP on page 119

broadcast

Syntax	<code>broadcast address <key key-number> <version value> <tll value>;</code>
Hierarchy Level	[edit system ntp]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the local router or switch to operate in broadcast mode with the remote system at the specified address to send periodic broadcast messages to a client population. Normally, you include this statement only when the local router or switch is operating as a transmitter.
Options	<p>address—Broadcast address on one of the local networks or a multicast address assigned to NTP. You must specify an address, not a hostname. If the multicast address is used, it must be 224.0.1.1.</p> <p>key key-number—(Optional) All packets sent to the address include authentication fields that are encrypted using the specified key number (any unsigned 32-bit integer).</p> <p>tll value—(Optional) Time-to-live (TTL) value to use. Range: 1 through 255 Default: 1</p> <p>version value—(Optional) Specify the version number to be used in outgoing NTP packets. Range: 1 through 4 Default: 4</p>
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Understanding NTP Time Servers on page 111• Configuring NTP Authentication Keys on page 112• Configuring the NTP Time Server and Time Services on page 113

broadcast-client

Syntax	<code>broadcast-client;</code>
Hierarchy Level	<code>[edit system ntp]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the local switch to listen for broadcast messages on the local network to discover other servers on the same subnet.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Understanding NTP Time Servers on page 111 • Configuring NTP Authentication Keys on page 112 • Configuring the Switch to Listen for Broadcast Messages Using NTP on page 117

multicast-client

Syntax	<code>multicast-client <<i>address</i>>;</code>
Hierarchy Level	<code>[edit system ntp]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	For Network Time Protocol (NTP), configure the local router or switch to listen for multicast messages on the local network to discover other servers on the same subnet.
Options	<i>address</i> —(Optional) One or more IP addresses. If you specify addresses, the router or switch joins those multicast groups. Default: 224.0.1.1.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Understanding NTP Time Servers on page 111 • Configuring NTP Authentication Keys on page 112 • Configuring the Switch to Listen for Multicast Messages Using NTP on page 117

ntp

Syntax	<pre>ntp { authentication-key <i>number</i> type <i>type</i> value <i>password</i>; boot-server <i>address</i>; broadcast <<i>address</i>> <<i>key key-number</i>> <<i>version value</i>> <<i>ttl value</i>>; broadcast-client; multicast-client <<i>address</i>>; peer <i>address</i> <<i>key key-number</i>> <<i>version value</i>> <<i>prefer</i>>; server <i>address</i> <<i>key key-number</i>> <<i>version value</i>> <<i>prefer</i>>; source-address <i>source-address</i>; trusted-key [<i>key-numbers</i>]; }</pre>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure Network Time Protocol (NTP) on the switch. The remaining statements are explained separately.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Understanding NTP Time Servers on page 111• Configuring NTP Authentication Keys on page 112• Synchronizing and Coordinating Time Distribution Using NTP on page 119

ntp (QFabric)

Syntax	<pre>ntp { authentication-key <i>number</i> <i>type type</i> <i>value password</i>; server <i>address</i> <key <i>key-number</i>> <version <i>value</i>> <prefer>; }</pre>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	<p>Configure Network Time Protocol (NTP) on the switch.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring NTP Authentication Keys (QFabric System) on page 113 • Configuring the NTP Time Server and Time Services (QFabric System) on page 116 • authentication-key on page 310 • server on page 317

peer

Syntax	<code>peer address <key key-number> <version value> <prefer>;</code>
Hierarchy Level	[edit system ntp]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	For NTP, configure the local router or switch to operate in symmetric active mode with the remote system at the specified address. In this mode, the local router or switch and the remote system can synchronize with each other. This configuration is useful in a network in which either the local router or switch or the remote system might be a better source of time.
Options	<p>address—Address of the remote system. You must specify an address, not a hostname.</p> <p>key key-number—(Optional) All packets sent to the address include authentication fields that are encrypted using the specified key number.</p> <p>Range: Any unsigned 32-bit integer</p> <p>prefer—(Optional) Mark the remote system as the preferred host, which means that if all other factors are equal, this remote system is chosen for synchronization among a set of correctly operating systems.</p> <p>version value—(Optional) Specify the NTP version number to be used in outgoing NTP packets.</p> <p>Range: 1 through 4</p> <p>Default: 4</p>
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Understanding NTP Time Servers on page 111• Configuring NTP Authentication Keys on page 112• Configuring the NTP Time Server and Time Services on page 113

server (NTP)

Syntax	<code>server address <key key-number> <version value> <prefer>;</code>
Hierarchy Level	[edit system ntp]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	For NTP, configure the switch to operate in client mode with the remote system at the specified server address. In this mode, the local switch can be synchronized with the remote system, but the remote system can never be synchronized with the local switch.
Options	<p>address—Address of the remote system. You must specify an address, not a hostname.</p> <p>key key-number—(Optional) Use the specified key number to encrypt authentication fields in all packets sent to the specified address.</p> <p>Range: Any unsigned 32-bit integer</p> <p>prefer—(Optional) Mark the remote system as preferred host, which means that if all other things are equal, this remote system is chosen for synchronization among a set of correctly operating systems.</p> <p>version value—(Optional) Specify the version number to be used in outgoing NTP packets.</p> <p>Range: 1 through 4</p> <p>Default: 4</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Understanding NTP Time Servers on page 111 • Configuring NTP Authentication Keys on page 112

source-address (NTP, RADIUS, System Logging, or TACACS+)

Syntax	<code>source-address <i>source-address</i>;</code>
Hierarchy Level	[edit system accounting destination radius server <i>server-address</i>], [edit system accounting destination tacplus server <i>server-address</i>], [edit system ntp], [edit system radius-server <i>server-address</i>], [edit system syslog], [edit system tacplus-server <i>server-address</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify a source address for each configured TACACS+ server, RADIUS server, NTP server, or the source address to record in system log messages that are directed to a remote machine.
Options	<i>source-address</i> —Valid IP address configured on one of the switch interfaces. For system logging, the address is recorded as the message source in messages sent to the remote machines specified in all host <i>hostname</i> statements at the [edit system syslog] hierarchy level.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring RADIUS Authentication (QFX Series or OCX Series)</i>• Synchronizing and Coordinating Time Distribution Using NTP on page 119• <i>Specifying an Alternative Source Address for System Log Messages Directed to a Remote Destination</i>

trusted-key

Syntax	<code>trusted-key [<i>key-numbers</i>];</code>
Hierarchy Level	[edit system ntp]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	For NTP, configure the keys to use when you configure the switch to synchronize its time with other systems on the network.
Options	<i>key-numbers</i> —One or more key numbers. Each key can be any 32-bit unsigned integer except 0.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring NTP Authentication Keys on page 112• <i>authentication-key</i>• server on page 317

CHAPTER 21

Password Configuration Statements

- [authentication \(Login\) on page 322](#)
- [change-type on page 323](#)
- [format on page 324](#)
- [maximum-length on page 325](#)
- [minimum-changes on page 326](#)
- [minimum-length on page 327](#)
- [minimum-lower-cases on page 328](#)
- [minimum-numeric on page 329](#)
- [minimum-punctuations on page 330](#)
- [minimum-upper-cases on page 331](#)
- [password \(Login\) on page 332](#)
- [permissions on page 332](#)
- [retry-options on page 333](#)
- [root-authentication on page 335](#)
- [ssh-dsa on page 336](#)
- [ssh-rsa on page 336](#)
- [user \(Access\) on page 337](#)

authentication (Login)

Syntax	<pre>authentication { encrypted-password <i>password</i>; load-key-file <i>URL</i>; plain-text-password <i>password</i>; remote-debug-permission (qfabric-admin qfabric-operator qfabric-user); ssh-dsa "<i>public-key</i>"; ssh-rsa "<i>public-key</i>"; }</pre>
Hierarchy Level	[edit system login user <i>username</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Authentication methods that a user can use to log in to the switch. You can assign multiple authentication methods to a single user.
Options	<p>encrypted-password "<i>password</i>"—Message Digest 5 (MD5) or other encrypted authentication. Specify the MD5 or other password. You can specify only one encrypted password for each user.</p> <p>You cannot configure a blank password for encrypted-password using blank quotation marks (" "). You must configure a password of 1 through 128 characters and enclose the password in quotation marks.</p> <p>load-key-file—Load RSA (SSH version 1 and SSH version 2) and DSA (SSH version 2) public keys from a file. The file is a URL containing one or more SSH keys.</p> <p>plain-text-password—Plain-text password. The command-line interface (CLI) prompts you for the password and then encrypts it.</p> <p>remote-debug-permission (QFabric systems only)—QFabric component authentication. Specifies permission levels for users to access individual components in a QFabric system.</p> <p>ssh-dsa "<i>public-key</i>"—SSH version 2 authentication. Specify the SSH public key. You can specify one or more public keys for each user.</p> <p>ssh-rsa "<i>public-key</i>"—SSH version 1 and SSH version 2 authentication. Specify the SSH public key. You can specify one or more public keys for each user.</p>
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Junos OS User Accounts on page 105• root-authentication on page 335

change-type

Syntax	change-type (character-sets set-transitions);
Hierarchy Level	[edit system login password]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set requirements for using character sets in plain-text passwords. When you combine this statement with the minimum-changes statement, you can check for the total number of character sets included in the password or for the total number of character-set changes in the password. Newly created passwords must meet these requirements.
Options	Specify one of the following: <ul style="list-style-type: none">• character-sets—Number of character sets in the password. Valid character sets include uppercase letters, lowercase letters, numbers, punctuation, and other special characters.• set-transitions—Number of transitions between character sets.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Special Requirements for Junos OS Plain-Text Passwords</i>• minimum-changes on page 326

format

Syntax	format (des md5 sha1);
Hierarchy Level	[edit system login password]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the authentication algorithm for plain-text passwords.
Default	For Junos OS, the default encryption format is md5 . For Junos OS-FIPS software, the default encryption format is sha1 .
Options	The hash algorithm that authenticates the password can be one of three algorithms: <ul style="list-style-type: none">• des—Has a block size of 8 bytes; its key size is 48 bits long.• md5—Produces a 128-bit digest.• sha1—Produces a 160-bit digest.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Special Requirements for Junos OS Plain-Text Passwords</i>

maximum-length

Syntax	maximum-length <i>length</i> ;
Hierarchy Level	[edit system login passwords]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the maximum number of characters allowed in plain-text passwords. Newly created passwords must meet this requirement.
Default	For Junos OS-FIPS software, the maximum number of characters for plain-text passwords is 20 . For Junos OS, no maximum is set.
Options	length —Maximum number of characters the password can include. Range: 1 to 64 characters
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Special Requirements for Junos OS Plain-Text Passwords</i>• minimum-length on page 327

minimum-changes

Syntax	<code>minimum-changes <i>number</i>;</code>
Hierarchy Level	[edit system login passwords]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Specify the minimum number of character sets (or character set changes) required in plain-text passwords. Newly created passwords must meet this requirement.</p> <p>This statement is used in combination with the change-type statement. If the change type is character-sets, then the number of character sets included in the password is checked against the specified minimum. If the change type is set-transitions, then the number of character set changes in the password is checked against the specified minimum.</p>
Default	For Junos OS, the minimum number of changes is 1. For Junos-FIPS software, the minimum number of changes is 3.
Options	<i>number</i> —Minimum number of character sets (or character set changes) required for the password.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><i>Special Requirements for Junos OS Plain-Text Passwords</i>change-type on page 323

minimum-length

Syntax	minimum-length <i>length</i> ;
Hierarchy Level	[edit system login password]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the minimum number of characters required in plain-text passwords. Newly created passwords must meet this requirement.
Default	For Junos OS, the minimum number of characters for plain-text passwords is six. For Junos-FIPS software, the minimum number of characters for plain-text passwords is 10.
Options	length —Minimum number of characters the password must include. Range: 6 to 20 characters
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Special Requirements for Junos OS Plain-Text Passwords</i>• maximum-length on page 325

minimum-lower-cases

Syntax	<code>minimum-lower-cases <i>number</i>;</code>
Hierarchy Level	[edit system login password]
Release Information	Statement introduced in Junos OS Release 12.1. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Specify the minimum number of lower-case letters required in plain-text passwords. Newly created passwords must meet this requirement.</p> <p>This statement can be used in combination with all of the other requirement options for plain-text passwords, such as minimum-length, minimum-punctuations, minimum-upper-cases, and so on.</p> <p>Using several password minimum requirement options will cause the minimum-length to be reset if the total sum of the required minimums exceeds the minimum-length setting.</p>
Options	<i>number</i> —The minimum number of lower-case letters required for the password.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Special Requirements for Junos OS Plain-Text Passwords</i>• Example: Changing the Requirements for Junos OS Plain-Text Passwords on page 166• <i>password (Login)</i>

minimum-numeric

Syntax	<code>minimum-numeric <i>number</i>;</code>
Hierarchy Level	[edit system login password]
Release Information	Statement introduced in Junos OS Release 12.1. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Specify the minimum number of numeric class characters required in plain-text passwords. Newly created passwords must meet this requirement.</p> <p>This statement can be used in combination with all of the other requirement options for plain-text passwords, such as minimum-length, minimum-punctuations, minimum-lower-cases, and so on.</p> <p>Using several password minimum requirement options will cause the minimum-length to be reset if the total sum of the required minimums exceeds the minimum-length setting.</p>
Options	<i>number</i> —The minimum number of numeric class characters required for the password.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Special Requirements for Junos OS Plain-Text Passwords</i>• Example: Changing the Requirements for Junos OS Plain-Text Passwords on page 166• <i>password (Login)</i>

minimum-punctuations

Syntax	<code>minimum-punctuations <i>number</i>;</code>
Hierarchy Level	[edit system login password]
Release Information	Statement introduced in Junos OS Release 12.1. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Specify the minimum number of punctuation class characters required in plain-text passwords. Newly created passwords must meet this requirement.</p> <p>This statement can be used in combination with all of the other requirement options for plain-text passwords, such as minimum-length, minimum-upper-cases, minimum-lower-cases, and so on.</p> <p>Using several password minimum requirement options will cause the minimum-length to be reset if the total sum of the required minimums exceeds the minimum-length setting.</p>
Options	<i>number</i> —The minimum number of punctuation class characters required for the password.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Special Requirements for Junos OS Plain-Text Passwords</i>• Example: Changing the Requirements for Junos OS Plain-Text Passwords on page 166• <i>password (Login)</i>

minimum-upper-cases

Syntax	<code>minimum-upper-cases <i>number</i>;</code>
Hierarchy Level	[edit system login password]
Release Information	Statement introduced in Junos OS Release 12.1. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Specify the minimum number of upper-case letters required in plain-text passwords. Newly created passwords must meet this requirement.</p> <p>This statement can be used in combination with all of the other requirement options for plain-text passwords, such as minimum-length, minimum-punctuations, minimum-lower-cases, and so on.</p> <p>Using several password minimum requirement options will cause the minimum-length to be reset if the total sum of the required minimums exceeds the minimum-length setting.</p>
Options	<i>number</i> —The minimum number of upper-case letters required for the password.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Special Requirements for Junos OS Plain-Text Passwords</i> • Example: Changing the Requirements for Junos OS Plain-Text Passwords on page 166 • <i>password (Login)</i>

password (Login)

Syntax	<pre>password { change-type (set-transitions character-set); format (md5 sha1 des); maximum-length length; minimum-changes number; minimum-length length; }</pre>
Hierarchy Level	[edit system login]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure special requirements such as character length and encryption format for plain-text passwords. Newly created passwords must meet these requirements. The remaining statements are explained separately.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Special Requirements for Junos OS Plain-Text Passwords</i>

permissions


Syntax	<pre>permissions { storage; storage-control; }</pre>
Hierarchy Level	[edit system login class]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the login access privileges to be provided on the switch.
Options	<i>permissions</i> —Privilege type.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Access Privilege Levels</i>• <i>Understanding Junos OS Access Privilege Levels</i>• user on page 308

retry-options

Syntax	<pre> retry-options { backoff-threshold <i>number</i>; backoff-factor <i>seconds</i>; maximum-time <i>seconds</i>; minimum-time <i>seconds</i>; tries-before-disconnect <i>number</i>; } </pre>
Hierarchy Level	[edit system login]
Release Information	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Maximum number of times a user can attempt to enter a password while logging in through SSH or Telnet before being disconnected.
Options	<p>backoff-threshold <i>number</i>—Threshold for the number of failed login attempts before the user experiences a delay when attempting to reenter a password. Use the backoff-factor option to specify the length of delay, in seconds.</p> <p>Range: 1 through 3</p> <p>Default: 2</p> <p>backoff-factor <i>seconds</i>—Length of delay after each failed login attempt. The length of delay increases by this value for each subsequent login attempt after the value specified in the backoff-threshold option.</p> <p>Range: 5 through 10</p> <p>Default: 5</p> <p>maximum-time <i>seconds</i>—Maximum length of time that the connection remains open for the user to enter a username and password to log in. If the user remains idle and does not enter a username and password within the configured maximum-time, the connection is closed.</p> <p>Range: 20 through 300</p> <p>Default: 120</p> <p>minimum-time <i>seconds</i>—Minimum length of time that the connection remains open while the user is attempting to enter a password to log in.</p> <p>Range: 20 through 60</p> <p>Default: 20</p> <p>tries-before-disconnect <i>number</i>—Maximum number of times a user is allowed to attempt to enter a password to log in through SSH or Telnet.</p> <p>Range: 1 through 10</p> <p>Default: 10</p>

Required Privilege	admin—To view this statement in the configuration.
Level	admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Limiting the Number of User Login Attempts for SSH and Telnet Sessions</i>

root-authentication

Syntax	<pre>root-authentication { (encrypted-password "password" load-key-password URL plain-text-password); ssh-dsa "public-key"; ssh-rsa "public-key"; }</pre>
Hierarchy Level	[edit system]
Release Information	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Configure the authentication methods for the root-level user, whose username is root .
Options	<p>encrypted-password "password"— Specify the MD5 or other encrypted authentication password. You can specify only one encrypted password.</p> <p>You cannot configure a blank password for the encrypted-password option using blank quotation marks (" "). You must configure a password of 1 through 128 characters and enclose the password in quotation marks.</p>
	<div>  <p>CAUTION: Do not use the encrypted-password option unless the password is <i>already</i> encrypted, and you are entering the encrypted version of the password. If you commit the encrypted-password option with a plain-text password or with blank quotation marks (" "), you will not be able to log in to the device as root, and you will need to use the password recovery process.</p> </div>
	<p>plain-text-password—Plain-text password. The CLI prompts you for the password and then encrypts it. The CLI displays the encrypted version, and the software places the encrypted version in its user database. You can specify only one plain-text password.</p>
	<p>ssh-dsa "public-key"—SSH version 2 authentication. Specify the DSA (SSH version 2) public key. You can specify one or more public keys.</p>
	<p>ssh-rsa "public-key"—SSH version 1 authentication. Specify the RSA (SSH version 1 and SSH version 2) public key. You can specify one or more public keys.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Root Password</i> • <i>Recovering the Root Password</i> • authentication on page 300

ssh-dsa

Syntax	<code>ssh-dsa "public-key";</code>
Hierarchy Level	[edit system root-authentication] [edit system login user authentication]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the DSA (SSH version 2) public key. You can specify one or more public keys.
Options	<code>ssh-dsa "public-key"</code> —SSH version 2 authentication.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Root Password on page 163• authentication on page 300• <i>root-authentication</i>

ssh-rsa

Syntax	<code>ssh-dsa "public-key";</code>
Hierarchy Level	[edit system root-authentication] [edit system login user authentication]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the RSA (SSH version 1) public key. You can specify one or more public keys.
Options	<code>ssh-rsa "public-key"</code> —SSH version 1 authentication. Specify the RSA (SSH version 1 and SSH version 2) public key. You can specify one or more public keys.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Root Password</i>• authentication on page 300• <i>root-authentication</i>

user (Access)

Syntax	<pre> user username { authentication { (encrypted-password "password" plain-text-password); load-key-file URL; remote-debug-permission (qfabric-admin qfabric-operator qfabric-user); ssh-dsa "public-key" <from hostname>; ssh-rsa "public-key" <from hostname>; } class class-name; full-name "complete-name"; uid uid-value; } </pre>
Hierarchy Level	[edit system login]
Release Information	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Configure access permission for individual users.
Options	The remaining statements are explained separately.
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Junos OS User Accounts on page 105 • class on page 301

CHAPTER 22

Autoinstallation Operational Commands

- `show system autoinstallation status`

show system autoinstallation status

Syntax	show system autoinstallation status
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command supported in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	(ACX Series routers, J Series routers, and EX Series switches, QFX Series, and OCX Series only) Display autoinstallation status information.
Options	This command has no options.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>ACX Series Autoinstallation Overview</i> • <i>Before You Begin Autoinstallation on an ACX Series Universal Access Router</i> • <i>Autoinstallation Configuration of ACX Series Universal Access Routers</i> • <i>USB Autoinstallation on ACX Series Routers</i> • <i>Autoinstalling a Configuration File from a Disk-on-Key USB Memory Stick onto an EX2200 or EX3300 Switch</i> • <i>Verifying Autoinstallation on ACX Series Universal Access Routers</i> • <i>autoinstallation</i>
List of Sample Output	show system autoinstallation status on page 341
Output Fields	Table 19 on page 340 describes the output fields for the show system autoinstallation status command. Output fields are listed in the approximate order in which they appear.

Table 19: show system autoinstallation status Output Fields

Field Name	Field Description
Autoinstallation status	<p>Display autoinstallation status information:</p> <ul style="list-style-type: none"> • Last committed file—File last committed for autoinstallation configuration. • Configuration server of last committed file—IP address or URL of the server configured to retrieve configuration information for the last committed configuration file. • Interface—Interface configured for autoinstallation. <ul style="list-style-type: none"> • Name—Name of the interface. • State—Interface state. • Address acquisition—Display IP address acquired and protocol used for acquisition upon startup. <ul style="list-style-type: none"> • Protocol—Protocol used for acquisition: BOOTP/DHCP or RARP. • Acquired address—IP address acquired from the DHCP server.

Sample Output

show system autoinstallation status

```
user@host> show system autoinstallation status
Autoinstallation status:
Master state: Active
Last committed file: None
Configuration server of last committed file: 0.0.0.0
Interface:
  Name: ge-0/0/1
  State: None
  Address acquisition:
    Protocol: DHCP Client
    Acquired address: None
    Protocol: RARP Client
    Acquired address: None
```


CHAPTER 23

Basic System Management Operational Commands

- commit
- clear log
- clear chassis display message
- clear system commit
- clear system reboot
- file
- file archive
- file checksum md5
- file checksum sha1
- file checksum sha-256
- file compare
- file delete
- file list
- file rename
- file show
- load
- ping
- request chassis beacon
- request chassis fpc
- request chassis pic
- request chassis routing-engine master
- request message
- request system configuration rescue delete
- request system configuration rescue save
- request system halt
- request system logout

- `request system power-off`
- `request system reboot`
- `request system storage cleanup`
- `request system zeroize`
- `restart`
- `save`

commit

Syntax `commit <at <"string">> <and-quit> <check> <comment <"comment-string">>
<confirmed> <display detail> <fast-synchronize> <minutes>
<synchronize <force> <scripts>>`

Release Information Command introduced before Junos OS Release 7.4.
Command introduced in Junos OS Release 11.1 for the QFX Series.
Option **fast-synchronize** added in Junos OS Release 12.2.
Option **synchronize scripts** introduced in Junos OS Release 13.2.
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Commit the set of changes to the database and cause the changes to take operational effect.



NOTE: The **fast-synchronize** option is not supported in a QFX Series Virtual Chassis.



NOTE: Beginning in Junos OS 12.3, it is possible that FPCs brought offline using the `request chassis fpc slot fpc-slot offline` operational-mode CLI command can come online during a configuration commit or power-supply replacement procedure. As an alternative, use the `set fpc fpc-slot power off` configuration-mode command at the `[edit chassis]` hierarchy level to ensure that the FPCs remain offline.

Options `at <"string">`—(Optional) Save software configuration changes and activate the configuration at a future time, or upon reboot.

string is **reboot** or the future time to activate the configuration changes. Enclose the **string** value (including **reboot**) in quotation marks (" "). You can specify time in two formats:

- A time value in the form **hh:mm[:ss]** (hours, minutes, and optionally seconds)—Commit the configuration at the specified time, which must be in the future but before 11:59:59 PM on the day the **commit at** configuration command is issued. Use 24-hour time for the **hh** value; for example, **04:30:00** is 4:30:00 AM, and **20:00** is 8:00 PM. The time is interpreted with respect to the clock and time zone settings on the router.
- A date and time value in the form **yyyy-mm-dd hh:mm[:ss]** (year, month, date, hours, minutes, and, optionally, seconds)—Commit the configuration at the specified day and time, which must be after the **commit at** command is issued. Use 24-hour time for the **hh** value. For example, **2003-08-21 12:30:00** is 12:30 PM on August 21, 2003. The time is interpreted with respect to the clock and time zone settings on the router.

For example, **commit at "18:00:00"**. For date and time, include both values in the same set of quotation marks. For example, **commit at "2005-03-10 14:00:00"**.

A *commit check* is performed when you issue the **commit at** configuration mode command. If the result of the check is successful, then the current user is logged out of configuration mode, and the configuration data is left in a read-only state. No other commit can be performed until the scheduled commit is completed.



NOTE: If Junos OS fails before the configuration changes become active, all configuration changes are lost.

You cannot enter the **commit at** configuration command when there is a pending reboot.

You cannot enter the **request system reboot** command once you schedule a commit operation for a specific time in the future.

You cannot commit a configuration when a scheduled commit is pending. For information about how to use the **clear** command to cancel a scheduled configuration, see the [CLI Explorer](#).

and-quit—(Optional) Commit the configuration and, if the configuration contains no errors and the commit succeeds, exit from configuration mode.

check—(Optional) Verify the syntax of the configuration, but do not activate it.

comment <"*comment-string*">—(Optional) Add a comment that describes the committed configuration. The comment can be as long as 512 bytes and must be typed on a single line. You cannot include a comment with the **commit check** command. Enclose *comment-string* in quotation marks (" "). For example, **commit comment "Includes changes recommended by SW Lab"**.

confirmed <*minutes*>—(Optional) Require that the commit be confirmed within the specified amount of time. To confirm a commit, enter either a **commit** or **commit check** command. If the commit is not confirmed within the time limit, the configuration rolls back automatically to the precommit configuration and a broadcast message is sent to all logged-in users. To show when a rollback is scheduled, enter the **show system commit** command. The allowed range is 1 through 65,535 minutes, and the default is 10 minutes.

In Junos OS Release 11.4 and later, you can also use the **commit confirmed** command in the **[edit private]** configuration mode.

display detail—(Optional) Monitors the commit process.



NOTE: In Junos OS Release 10.4 and later, if the number of commit details or messages exceeds a page when used with the **| display detail** pipe option, the **more** pagination option on the screen is no longer available. Instead, the messages roll up on the screen by default, just like using the **commit** command with the **| no more** pipe option.

fast-synchronize—(Optional) Configure the commits to run in parallel on both the master and backup Routing Engines to reduce the time taken for commit synchronization.



NOTE: The **fast-synchronize** statement is not supported on QFX Series devices when used in a Virtual Chassis.

synchronize <force> <scripts>—(Optional) If your router has two Routing Engines, you can manually direct one Routing Engine to synchronize its configuration with the other by issuing the **commit synchronize** command. The Routing Engine on which you execute this command (request Routing Engine) copies and loads its candidate configuration to the other (responding Routing Engine). Both Routing Engines then perform a syntax check on the candidate configuration file being committed. If no errors are found, the configuration is activated and becomes the current operational configuration on both Routing Engines. The **commit synchronize** command does not work if the responding Routing Engine has uncommitted configuration changes. However, you can enforce commit synchronization on the Routing Engines by using the **force** option. When you issue the **commit synchronize** command with the **force** option from one Routing Engine, the configuration sessions on the other Routing Engine are terminated and its configuration synchronized with that on the Routing Engine from which you issued the command.

When you issue the **commit synchronize** command with the **scripts** option, the device synchronizes all commit, event, lib, and op scripts from the requesting Routing Engine to the responding Routing Engine and also commits and synchronizes the configuration. If the commit check operation fails for the requesting Routing Engine, the process stops, and the scripts are not copied to the responding Routing Engine. If the commit check or commit operation fails for the responding Routing Engine, the scripts are still synchronized, since the synchronization occurs prior to the commit check operation on the responding Routing Engine.

If the **load-scripts-from-flash** statement is configured for the requesting Routing Engine, the device synchronizes the scripts from flash memory on the requesting Routing Engine to flash memory on the responding Routing Engine. Otherwise, the device synchronizes the scripts from the hard disk on the requesting Routing Engine to the hard disk on the responding Routing Engine. The device synchronizes all scripts regardless of whether they are enabled in the configuration or have been updated since the last synchronization.



NOTE: When you issue the **commit synchronize** command, you must use the **apply-groups re0** and **re1** commands. For information about how to use groups, see *Disabling Inheritance of a Junos OS Configuration Group*.

The responding Routing Engine must use Junos OS Release 5.0 or later.

Required Privilege Level

configure—To enter configuration mode.



NOTE: If you are using Junos OS in a Common Criteria environment, system log messages are created whenever a secret attribute is changed (for example, password changes or changes to the RADIUS shared secret). These changes are logged during the following configuration load operations:

```
load merge
load replace
load override
load update
```

For more information, see the *Secure Configuration Guide for Common Criteria and Junos-FIPS*

Related Documentation

- *Verifying a Junos OS Configuration, Committing a Junos OS Configuration*
- *Scheduling a Junos OS Commit Operation*
- *Deactivating and Reactivating Statements and Identifiers in a Junos OS Configuration*
- *Monitoring the Junos OS Commit Process*
- *Adding a Comment to Describe the Committed Configuration*

Sample Output

commit | display detail

```
user@host> commit | display detail
-----
2011-08-24 01:08:08.00691 PDT: begin creating snapshots
2011-08-24 01:08:09.00210 PDT: end creating snapshots
2011-08-24 01:08:09.00211 PDT: begin preparing metadata
2011-08-24 01:08:09.00228 PDT: end preparing metadata
2011-08-24 01:08:09.00229 PDT: begin computing dcf root changes
2011-08-24 01:08:09.00236 PDT: end computing dcf root changes
2011-08-24 01:08:09.00244 PDT: begin computing additions
2011-08-24 01:08:09.00251 PDT: end computing additions
2011-08-24 01:08:09.00251 PDT: begin local object validation
2011-08-24 01:08:09.00251 PDT: end local object validation
2011-08-24 01:08:09.00252 PDT: begin update instances
2011-08-24 01:08:09.00252 PDT: end update instances
2011-08-24 01:08:09.00252 PDT: begin adjust metadata
2011-08-24 01:08:09.00252 PDT: end adjust metadata
2011-08-24 01:08:09.00253 PDT: begin validate metadata
2011-08-24 01:08:09.00253 PDT: end validate metadata
2011-08-24 01:08:09.00253 PDT: begin adjust allocations
2011-08-24 01:08:09.00254 PDT: end adjust allocations
2011-08-24 01:08:09.00254 PDT: begin adjust dependencies
2011-08-24 01:08:09.00254 PDT: end adjust dependencies
2011-08-24 01:08:09.00255 PDT: begin instance validation
2011-08-24 01:08:09.00255 PDT: end instance validation
2011-08-24 01:08:09.00255 PDT: begin opening all sessions eagerly
2011-08-24 01:08:09.00277 PDT: begin request #1 [login]
2011-08-24 01:08:09.00278 PDT: end request #1 [login]
2011-08-24 01:08:09.00325 PDT: begin processing globals
2011-08-24 01:08:09.00330 PDT: begin waiting for stamp check
```

```
(qfabric-default---node0)
2011-08-24 01:08:09.00334 PDT: end reply #1 [login]
2011-08-24 01:08:09.00351 PDT: end reply #1 [login]
2011-08-24 01:08:09.00451 PDT: begin request #2 [open]
2011-08-24 01:08:09.00451 PDT: end request #2 [open]
2011-08-24 01:08:09.00451 PDT: begin request #3 [get commit history]
2011-08-24 01:08:09.00452 PDT: end request #3 [get commit history]
2011-08-24 01:08:09.00452 PDT: begin request #4 [load]
2011-08-24 01:08:09.00453 PDT: end request #4 [load]
2011-08-24 01:08:09.00453 PDT: begin request #5 [load]
2011-08-24 01:08:09.00454 PDT: begin reply #2 [open]
2011-08-24 01:08:09.00456 PDT: end reply #2 [open]
2011-08-24 01:08:09.00457 PDT: begin reply #3 [get commit history]
2011-08-24 01:08:09.00475 PDT: end reply #3 [get commit history]
2011-08-24 01:08:09.00476 PDT: begin reply #4 [load]
2011-08-24 01:08:09.00499 PDT: begin reply #5 [load]
2011-08-24 01:08:09.00501 PDT: end waiting for stamp check
(qfabric-default---node0)
2011-08-24 01:08:09.00501 PDT: begin waiting for open (qfabric-default---node0)
2011-08-24 01:08:09.00502 PDT: end waiting for open (qfabric-default---node0)
2011-08-24 01:08:09.00504 PDT: end processing globals
2011-08-24 01:08:09.00617 PDT: end request #5 [load]
2011-08-24 01:08:09.00617 PDT: begin request #6 [check]
2011-08-24 01:08:09.00617 PDT: end request #6 [check]
2011-08-24 01:08:09.00619 PDT: end reply #5 [load]
2011-08-24 01:08:09.00619 PDT: begin reply #6 [check]
2011-08-24 01:08:09.00730 PDT: end session
2011-08-24 01:08:09.00752 PDT: end request #5 [load]
2011-08-24 01:08:09.00754 PDT: begin request #6 [check]
2011-08-24 01:08:09.00755 PDT: end request #6 [check]
2011-08-24 01:08:09.00881 PDT: end request #5 [load]
2011-08-24 01:08:09.00961 PDT: begin commit to devices
2011-08-24 01:08:10.00668 PDT: begin request #8 [get commit history]
2011-08-24 01:08:10.00669 PDT: end request #8 [get commit history]
2011-08-24 01:08:10.00721 PDT: end session
2011-08-24 01:08:10.00727 PDT: end commit to devices
2011-08-24 01:08:10.00733 PDT: begin committing metadata
2011-08-24 01:08:10.00772 PDT: end committing metadata
2011-08-24 01:08:10.00772 PDT: begin calling commit callbacks
2011-08-24 01:08:10.00773 PDT: end calling commit callbacks
commit complete
```

clear log

Syntax	<code>clear log <i>filename</i></code> <code><all></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Remove contents of a log file.
Options	<i>filename</i> —Name of the specific log file to delete. all —(Optional) Delete the specified log file and all archived versions of it.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show log on page 1036
List of Sample Output	clear log on page 350
Output Fields	See file list for an explanation of output fields.

Sample Output

clear log

The following sample commands list log file information, clear the contents of a log file, and then display the updated log file information:

```
user@host> file list lcc0-re0:/var/log/sampled detail
lcc0-re0:
-----
-rw-r-----  1 root  wheel          26450 Jun 23 18:47 /var/log/sampled
total 1

user@host> clear log lcc0-re0:sampled
lcc0-re0:
-----

user@host> file list lcc0-re0:/var/log/sampled detail
lcc0-re0:
-----
-rw-r-----  1 root  wheel           57 Sep 15 03:44 /var/log/sampled
total 1
```

clear chassis display message

List of Syntax	Syntax on page 351 Syntax (TX Matrix Router) on page 351 Syntax (TX Matrix Plus Router) on page 351 Syntax (QFabric Systems) on page 351
Syntax	clear chassis display message
Syntax (TX Matrix Router)	clear chassis display message <lcc <i>number</i> scc>
Syntax (TX Matrix Plus Router)	clear chassis display message <lcc <i>number</i> sfc <i>number</i> >
Syntax (QFabric Systems)	clear chassis display message <node-device <i>name</i> interconnect-device <i>name</i> >
Release Information	<p>Command introduced in Junos OS Release 7.5.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option for the TX Matrix Plus routers introduced in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>(M40e, M160, M320, T Series routers, EX Series, and QFabric systems only) Clear or stop a text message on the craft interface display, which is on the front of the router or switch or on the LCD panel display on the router or switch. The craft interface alternates the display of text messages with standard craft interface messages, switching between messages every 2 seconds. By default, on both the router and the switch, the text message is displayed for 5 minutes. The craft interface display has four 20-character lines. The LCD panel display has two 16-character lines, and text messages appear only on the second line.</p>
Options	<p>none—Clear or stop a text message on the craft interface display.</p> <p>interconnect-device <i>name</i>—(QFabric systems only) (Optional) On a QFabric system, clear or stop a text message on the LCD panel display on the specified Interconnect device.</p> <p>lcc <i>number</i>—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.</p> <p>Replace <i>number</i> with the following values depending on the LCC configuration:</p> <ul style="list-style-type: none"> 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix. 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.

- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

node-device *name*—(QFabric systems only) (Optional) On a QFabric system, clear or stop a text message on the LCD panel display on the specified Node device in a Node group.

scc—(TX Matrix routers only) (Optional) Clear or stop a text message on the craft interface on the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Clear or stop a text message on the craft interface on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

Required Privilege Level

clear

Related Documentation

- *Configuring the LCD Panel on EX Series Switches (CLI Procedure)*
- *set chassis display message*
- *show chassis craft-interface*

List of Sample Output [clear chassis display message on page 352](#)

Output Fields See *show chassis craft-interface* for an explanation of output fields.

Sample Output

clear chassis display message

The following example displays and then clears the text message on the craft interface display:

```
user@host> show chassis craft-interface
Red alarm:      LED off, relay off
Yellow alarm:   LED off, relay off
Host OK LED:    On
Host fail LED:  Off
FPCs           0  1  2  3  4  5  6  7
-----
Green  ..  *..  *  *.
Red    .....
LCD screen:
      +-----+
      |NOC contact Dusty|
      |(888) 526-1234   |
      +-----+

user@host> clear chassis display message

user@host> show chassis craft-interface
Red alarm:      LED off, relay off
Yellow alarm:   LED off, relay off
```

```
Host OK LED:  On
Host fail LED: Off
FPCs      0  1  2  3  4  5  6  7
-----
Green  ..  *..  *  *.
Red    .....
LCD screen:
+-----+
|host    |
|Up: 0+17:05:47|
|        |
|Temperature OK|
+-----+
```

clear system commit

Syntax	clear system commit
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Clear any pending commit operation.
Options	This command has no options.
Required Privilege Level	maintenance (or the actual user who scheduled the commit)
Related Documentation	<ul style="list-style-type: none">• show system commit on page 1084
List of Sample Output	clear system commit on page 354 clear system commit (None Pending) on page 354 clear system commit (User Does Not Have Required Privilege Level) on page 354
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear system commit

```
user@host> clear system commit
Pending commit cleared.
```

clear system commit (None Pending)

```
user@host> clear system commit
No commit scheduled.
```

clear system commit (User Does Not Have Required Privilege Level)

```
user@host> clear system commit
error: Permission denied
```


clear system reboot

List of Syntax	Syntax on page 355 Syntax (EX Series Switches) on page 355 Syntax (TX Matrix Router) on page 355 Syntax (TX Matrix Plus Router) on page 355 Syntax (QFX Series) on page 355
Syntax	clear system reboot <both-routing-engines>
Syntax (EX Series Switches)	clear system reboot <all-members> <both-routing-engines> <local> <member <i>member-id</i> >
Syntax (TX Matrix Router)	clear system reboot <both-routing-engines> <all-chassis all-lcc lcc <i>number</i> scc>
Syntax (TX Matrix Plus Router)	clear system reboot <both-routing-engines> <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i> >
Syntax (QFX Series)	clear system reboot <infrastructure <i>name</i> > <interconnect-device <i>name</i> > <node-group <i>name</i> >
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Clear any pending system software reboots or halts. When issued on a TX Matrix router without any options, the default behavior clears all pending system software reboots or halts on all T640 routers connected to the TX Matrix router. When issued on a TX Matrix Plus router without any options, the default behavior clears all pending system software reboots or halts on all T1600 or T4000 routers connected to the TX Matrix Plus router.
Options	<p>none—Clear all pending system software reboots or halts.</p> <p>all-chassis—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Clear all halt or reboot requests for all the Routing Engines in the chassis.</p> <p>all-lcc—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, clear all halt or reboot requests for all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus router, clear all halt or reboot requests on the l connected T1600 or T4000 LCCs.</p>

all-members—(EX4200 switches only) (Optional) Clear all halt or reboot requests on all members of the Virtual Chassis configuration.

both-routing-engines—(Systems with multiple Routing Engines) (Optional) Clear all halt or reboot requests on both Routing Engines. On a TX Matrix router, clear both Routing Engines on all chassis connected to the TX Matrix router. Likewise, on a TX Matrix Plus router, clear both Routing Engines on all chassis connected to the TX Matrix Plus router.

infrastructure *name*—(QFabric systems) (Optional) Clear all halt or reboot requests on the fabric control Routing Engines or fabric manager Routing Engines.

interconnect-device *name*—(QFabric systems) (Optional) Clear all halt or reboot requests on the Interconnect device.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, clear all halt or reboot requests for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, clear all halt or reboot requests for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches only) (Optional) Clear all halt or reboot requests on the local Virtual Chassis member.

member *member-id*—(EX4200 switches only) (Optional) Clear all halt or reboot requests on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value from 0 through 9.

node-group *name*—(QFabric systems) (Optional) Clear all halt or reboot requests on the Node group.

scc—(TX Matrix routers only) (Optional) Clear all halt or reboot requests for the TX Matrix router (or switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Clear all halt or reboot requests for the TX Matrix Plus router. Replace *number* with 0.

Required Privilege Level maintenance

Related Documentation	<ul style="list-style-type: none">• <i>request system reboot</i>• request system reboot on page 413• Rebooting and Halting a Device on page 26• Routing Matrix with a TX Matrix Plus Router Solutions Page
List of Sample Output	clear system reboot on page 358 clear system reboot (TX Matrix Router) on page 358 clear system reboot (QFX Series) on page 358
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear system reboot

```
user@host> clear system reboot
reboot requested by root at Sat Dec 12 19:37:34 1998
[process id 17855]
Terminating...
```

clear system reboot (TX Matrix Router)

```
user@host> clear system reboot
scc-re0:
-----
No shutdown/reboot scheduled.
lcc0-re0:
-----
No shutdown/reboot scheduled.
lcc2-re0:
-----
No shutdown/reboot scheduled.
```

clear system reboot (QFX Series)

```
user@switch> clear system reboot node-group node1
No shutdown/reboot scheduled.
```

file

Syntax	file <archive change-owner change-permission checksum compare compress copy delete delete-directory link list make-directory rename show source address>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>change-owner, change-permission, compress, delete-directory, link, and make-directory options added in Junos OS Release 14.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Archive files from the device, copy files to and from the router or switch, calculate the file checksum, compare files, delete a file from the device, list files on the device, rename a file, show file contents, show the local address to initiate a connection, change owner of a file, change permission of a file, compress a file, delete a directory, create a link between files, or create a new directory.
Options	<p>archive (Optional) —Archive, and optionally compress, one or multiple local system files as a single file, locally or at a remote location.</p> <p>change-owner (Optional) —Change owner of a file.</p> <p>change-permission (Optional) —Change permission of a file.</p> <p>checksum (Optional) —Calculate the Message Digest 5 (MD5) checksum of a file.</p> <p>compare (Optional) —Compare two local files and describe the differences between them in default, context, or unified output styles.</p> <p>compress (Optional) —Compress a file.</p> <p>copy (Optional) —Copy files from one place to another on the local switch or between the local switch and a remote system.</p> <p>delete (Optional) —Delete a file on the local switch.</p> <p>delete-directory (Optional) —Delete a directory.</p> <p>link (Optional) —Create a link between files.</p> <p>list (Optional) —Display a list of files on the local switch.</p> <p>make-directory (Optional) —Create a new directory.</p> <p>rename (Optional) —Rename a file on the local switch.</p> <p>show (Optional) —Display the contents of a file.</p> <p>source address (Optional) —Specify the source address of the local file.</p>
Required Privilege Level	maintenance

- Related Documentation**
- *Viewing Files and Directories on a Device Running Junos OS*
 - [CLI Explorer](#)

file archive

Syntax	<code>file archive destination <i>destination</i> source <i>source</i> <compress></code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Archive, and optionally compress, one or multiple local system files as a single file, locally or at a remote location.
Options	<p>destination <i>destination</i>—Destination of the archived file or files. Specify the destination as a URL or filename. The Junos OS adds one of the following suffixes if the destination filename does not already have it:</p> <ul style="list-style-type: none"> • For archived files—The suffix .tar • For archived and compressed files—The suffix .tgz <p>source <i>source</i>—Source of the original file or files. Specify the source as a URL or filename.</p> <p>compress—(Optional) Compress the archived file with the GNU zip (gzip) compression utility. The compressed files have the suffix .tgz.</p>
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none"> • Format for Specifying Filenames and URLs in Junos OS CLI Commands on page 42
List of Sample Output	<p>file archive (Multiple Files) on page 361</p> <p>file archive (Single File) on page 361</p> <p>file archive (with Compression) on page 362</p>
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

file archive (Multiple Files)

The following sample command archives all message files in the local directory `/var/log/messages` as the single file **messages-archive.tar**.

```
user@host> file archive source /var/log/messages* destination /var/log/messages-archive.tar
/usr/bin/tar: Removing leading / from absolute path names in the archive.
user@host>
```

file archive (Single File)

The following sample command archives one message file in the local directory `/var/log/messages` as the single file **messages-archive.tar**.

```
user@host> file archive source /var/log/messages destination /var/log/messages-archive.tar
/usr/bin/tar: Removing leading / from absolute path names in the archive.
user@host
```

file archive (with Compression)

The following sample command archives and compresses all message files in the local directory **/var/log/messages** as the single file **messages-archive.tgz**.

```
user@host> file archive compress source /var/log/messages* destination
/var/log/messages-archive.tgz
/usr/bin/tar: Removing leading / from absolute path names in the archive.
```


file checksum md5

Syntax	<code>file checksum md5 <pathname> filename</code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Calculate the Message Digest 5 (MD5) checksum of a file.
Options	<p>pathname—(Optional) Path to a filename.</p> <p>filename—Name of a local file for which to calculate the MD5 checksum.</p>
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Checksum Hashes for a Commit Script</i> in the <i>Junos OS Configuration and Operations Automation Guide</i> • <i>Configuring Checksum Hashes for an Event Script</i> in the <i>Junos OS Configuration and Operations Automation Guide</i> • <i>Configuring Checksum Hashes for an Op Script</i> in the <i>Junos OS Configuration and Operations Automation Guide</i> • <i>Executing an Op Script from a Remote Site</i> in the <i>Junos OS Configuration and Operations Automation Guide</i> • file checksum sha-256 on page 365 • file checksum sha1 on page 364 • <i>op</i>
List of Sample Output	file checksum md5 on page 363
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

file checksum md5

```
user@host> file checksum md5 jbundle-5.3R2.4-export-signed.tgz
MD5 (jbundle-5.3R2.4-export-signed.tgz) = 2a3b69e43f9bd4893729cc16f505a0f5
```

file checksum sha1

Syntax	<code>file checksum sha1 <pathname> filename</code>
Release Information	Command introduced in Junos OS Release 9.5. Command introduced in Junos OS Release 9.5 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Calculate the Secure Hash Algorithm (SHA-1) checksum of a file.
Options	pathname —(Optional) Path to a filename. filename —Name of a local file for which to calculate the SHA-1 checksum.
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Checksum Hashes for a Commit Script</i> in the <i>Junos OS Configuration and Operations Automation Guide</i>• <i>Configuring Checksum Hashes for an Event Script</i> in the <i>Junos OS Configuration and Operations Automation Guide</i>• <i>Configuring Checksum Hashes for an Op Script</i> in the <i>Junos OS Configuration and Operations Automation Guide</i>• <i>Executing an Op Script from a Remote Site</i> in the <i>Junos OS Configuration and Operations Automation Guide</i>• file checksum md5 on page 363• file checksum sha-256 on page 365• <i>op</i>
List of Sample Output	file checksum sha1 on page 364
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

file checksum sha1

```
user@host> file checksum sha1 /var/db/scripts/opscript.slax
```

```
SHA1 (/var/db/scripts/commitscript.slax) = ba9e47120c7ce55cff29afd73eacd370e162c676
```

file checksum sha-256

Syntax	<code>file checksum sha-256 <pathname> filename</code>
Release Information	<p>Command introduced in Junos OS Release 9.5.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Calculate the Secure Hash Algorithm 2 family (SHA-256) checksum of a file.
Options	<p>pathname—(Optional) Path to a filename.</p> <p>filename—Name of a local file for which to calculate the SHA-256 checksum.</p>
Required Privilege Level	<p>maintenance</p> <p>view</p> <p>view-configuration</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Checksum Hashes for a Commit Script</i> in the <i>Junos OS Configuration and Operations Automation Guide</i> • <i>Configuring Checksum Hashes for an Event Script</i> in the <i>Junos OS Configuration and Operations Automation Guide</i> • <i>Configuring Checksum Hashes for an Op Script</i> in the <i>Junos OS Configuration and Operations Automation Guide</i> • <i>Executing an Op Script from a Remote Site</i> in the <i>Junos OS Configuration and Operations Automation Guide</i> • file checksum md5 on page 363 • file checksum sha1 on page 364 • <i>op</i>
List of Sample Output	file checksum sha-256 on page 365
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

file checksum sha-256

```

user@host> file checksum sha-256 /var/db/scripts/commitscript.slax

SHA256 (/var/db/scripts/commitscript.slax) =
94c2b061fb55399e15babd2529453815601a602b5c98e5c12ed929c9d343dd71

```

file compare

Syntax	<code>file compare (files <i>filename filename</i>)</code> <code><context unified></code> <code><ignore-white-space></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Compare two local files and describe the differences between them in default, context, or unified output styles:</p> <ul style="list-style-type: none">• Default—In the first line of output, c means lines were changed between the two files, d means lines were deleted between the two files, and a means lines were added between the two files. The numbers preceding this alphabetical marker represent the first file, and the lines after the alphabetical marker represent the second file. A left angle bracket (<) in front of output lines refers to the first file. A right angle bracket (>) in front of output lines refers to the second file.• Context—The display is divided into two parts. The first part is the first file; the second part is the second file. Output lines preceded by an exclamation point (!) have changed. Additions are marked with a plus sign (+), and deletions are marked with a minus sign (-).• Unified—The display is preceded by the line number from the first and the second file (xx,xxx,x). Before the line number, additions to the file are marked with a plus sign (+), and deletions to the file are marked with a minus sign (-). The body of the output contains the affected lines. Changes are viewed as additions plus deletions.
Options	<p>files <i>filename</i>—Names of two local files to compare.</p> <p>context—(Optional) Display output in context format.</p> <p>ignore-white-space—(Optional) Ignore changes in the amount of white space.</p> <p>unified—(Optional) Display output in unified format.</p>
Required Privilege Level	none
Related Documentation	<ul style="list-style-type: none">• Format for Specifying Filenames and URLs in Junos OS CLI Commands on page 42• Viewing Core Files from Junos OS Processes on page 35
List of Sample Output	file compare files on page 368 file compare files context on page 368 file compare files unified on page 368 file compare files unified ignore-white-space on page 368

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

file compare files

```
user@host> file compare files /tmp/one /tmp/two
100c100
<          full-name "File 1";
---
>          full-name "File 2";
102c102
<          class foo; # 'foo' is not defined
---
>          class super-user;
```

file compare files context

```
user@host> file compare files /tmp/one /tmp/two context
*** /tmp/one   Wed Dec  3 17:12:50 2003
--- /tmp/two   Wed Dec  3 09:13:14 2003
*****
*** 97,104 ****
        }
    }
    user bill {
!         full-name "Bill Smith";
!         class foo; # 'foo' is not defined
        authentication {
            encrypted-password SECRET;
        }
--- 97,105 ----
    }
    user bill {
!         full-name "Bill Smith";
!         uid 1089;
!         class super-user;
        authentication {
            encrypted-password SECRET;
        }
    }
```

file compare files unified

```
user@host> file compare files /tmp/one /tmp/two unified
--- /tmp/one   Wed Dec  3 17:12:50 2003
+++ /tmp/two   Wed Dec  3 09:13:14 2003
@@ -97,8 +97,9 @@
    }
}
user bill {
-     full-name "Bill Smith";
-     class foo; # 'foo' is not defined
+     full-name "Bill Smith";
+     uid 1089;
+     class super-user;
    authentication {
        encrypted-passwordSECRET;
    }
```

file compare files unified ignore-white-space

```
user@host> file compare files /tmp/one /tmp/two unified ignore-white-space
```

```
--- /tmp/one    Wed Dec  3 09:13:10 2003
+++ /tmp/two    Wed Dec  3 09:13:14 2003
@@ -99,7 +99,7 @@
     user bill {
         full-name "Bill Smith";
         uid 1089;
-        class foo; # 'foo' is not defined
+        class super-user;
         authentication {
             encrypted-password <SECRET>; # SECRET-DATA
         }
     }
```

file delete

Syntax	<code>file delete <i>filename</i></code> <code><purge></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Delete a file on the local router or switch.
Options	<i>filename</i> —Name of the file to delete. For a routing matrix, include chassis information in the filename if the file to be deleted is not local to the Routing Engine from which the command is issued. <i>purge</i> —(Optional) Overwrite regular files before deleting them.
Required Privilege Level	maintenance
List of Sample Output	file delete on page 370 file delete (Routing Matrix) on page 370
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

file delete

```
user@host> file list /var/tmp
dcd.core
rpd.core
snmpd.core

user@host> file delete /var/tmp/snmpd.core
user@host> file list /var/tmp
dcd.core
rpd.core
```

file delete (Routing Matrix)

```
user@host> file list lcc0-re0:/var/tmp
dcd.core
rpd.core
snmpd.core

user@host> file delete lcc0-re0:/var/tmp/snmpd.core
user@host> file list /var/tmp
dcd.core
rpd.core
```


file list

Syntax	file list <detail recursive> <filename>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display a list of files on the local router or switch.
Options	<p>none—Display a list of all files for the current directory.</p> <p>detail recursive—(Optional) Display detailed output or descend recursively through the directory hierarchy, respectively.</p> <p>filename—(Optional) Display a list of files. For a routing matrix, the filename must include the chassis information.</p>
Additional Information	The default directory is the home directory of the user logged in to the router or switch. To view available directories, enter a space and then a backslash (/) after the file list command. To view files within a specific directory, include a backslash followed by the directory and, optionally, subdirectory name after the file list command.
Required Privilege Level	maintenance
List of Sample Output	file list on page 371 file list (Routing Matrix) on page 371
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

file list

```
user@host> file list /var/tmp
dcd.core
rpd.core
snmpd.core
```

file list (Routing Matrix)

```
user@host> file list lcc0-re0:var/tmp
lcc0-re0:
-----
/var/tmp/:
.gdbinit
.pccardd
Test/
chassisd*
chassisd.nathan*
```

```
check_time*  
cores/  
diagTestPrep*  
diagtest*  
diagtest.user*  
do_switchovers*  
dump_test*  
err.manoj.log  
esw_clearstats*  
esw_counter*  
esw_debug*  
esw_debug_ge*  
esw_filt_test*  
esw_filter_tnp_addr*  
esw_getstats*  
esw_phy*  
esw_stats*
```

file rename

Syntax	<code>file rename <i>source destination</i></code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Rename a file on the local router or switch.
Options	<p><i>destination</i>—New name for the file.</p> <p><i>source</i>—Original name of the file. For a routing matrix, the filename must include the chassis information.</p>
Required Privilege Level	maintenance
List of Sample Output	<p>file rename on page 373</p> <p>file rename (Routing Matrix) on page 373</p>
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

file rename

The following example lists the files in `/var/tmp`, renames one of the files, and then displays the list of files again to reveal the newly named file.

```
user@host> file list /var/tmp
dcd.core
rpd.core
snmpd.core

user@host> file rename /var/tmp/dcd.core /var/tmp/dcd.core.990413
user@host> file list /var/tmp
dcd.core.990413
rpd.core
snmpd.core
```

file rename (Routing Matrix)

The following example lists the files in `/var/tmp`, renames one of the files, and then displays the list of files again to reveal the newly named file.

```
user@host> file list lcc0-re1:/var/tmp
lcc0-re1:
-----

/var/tmp:
.pccardd
sartre.conf
snmpd
syslogd.core-tarball.0.tgz
```

```
user@host> file rename lcc0-re0:/var/tmp/snmpd /var/tmp/snmpd.rr
```

```
user@host> file list lcc0-re1:/var/tmp
```

```
lcc0-re1:
```

```
-----
```

```
/var/tmp:
```

```
.pccardd
```

```
sartre.conf
```

```
snmpd.rr
```

```
syslogd.core-tarball.0.tgz
```

file show

Syntax	<code>file show <i>filename</i></code> <code><encoding (base64 raw)></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the contents of a file.
Options	<i>filename</i> —Name of a file. For a routing matrix, the filename must include the chassis information. <code>encoding (base64 raw)</code> —(Optional) Encode file contents with base64 encoding or show raw text.
Required Privilege Level	maintenance
List of Sample Output	file show on page 375 file show (Routing Matrix) on page 375
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

file show

```
user@host> file show /var/log/messages
Apr 13 21:00:08 romney /kernel: so-1/1/2: loopback suspected; going to standby.
Apr 13 21:00:40 romney /kernel: so-1/1/2: loopback suspected; going to standby.
Apr 13 21:02:48 romney last message repeated 4 times
Apr 13 21:07:04 romney last message repeated 8 times
Apr 13 21:07:13 romney /kernel: so-1/1/0: Clearing SONET alarm(s) RDI-P
Apr 13 21:07:29 romney /kernel: so-1/1/0: Asserting SONET alarm(s) RDI-P
...
```

file show (Routing Matrix)

```
user@host> file show lcc0-re0:/var/tmp/gdbinit
lcc0-re0:
-----
#####
# Settings
#####

set print pretty


#####
# Basic stuff
#####

define msgbuf
    printf "%s", msgbufp->msg_ptr
```

```
end
# hex dump of a block of memory
# usage: dump address length
define dump
  p $arg0, $arg1
  set $ch = $arg0
  set $j = 0
  set $n = $arg1
  while ($j < $n)
    #printf "%x %x ",&$ch[$j],$ch[$j]
    printf "%x ",$ch[$j]
    set $j = $j + 1
    if (!($j % 16))
      printf "\n"
    end
  end
end
end
```

load

Syntax	load (factory-default merge override patch replace set update) load (<i>filename</i> terminal) <relative>
QFX Series	load (dhcp-snooping <i>filename</i>)
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Load a configuration from an ASCII configuration file, from terminal input, or from the factory default. Your current location in the configuration hierarchy is ignored when the load operation occurs.
Options	<p>dhcp-snooping—(QFX Series switches) Loads DHCP snooping entries.</p> <p>factory-default—Loads the factory configuration. The factory configuration contains the manufacturer's suggested configuration settings. The factory configuration is the router or switch's first configuration and is loaded when the router or switch is first installed and powered on.</p>

 **NOTE:** To load the factory default configuration, you must first *unprotect* any protected hierarchies in the configuration.

On J Series Services Routers, pressing and holding down the Config button on the router for 15 seconds causes the factory configuration to be loaded and committed. However, this operation deletes all other configurations on the router; using the **load factory-default** command does not.

filename—Name of the file to load. For information about specifying the filename, see *Viewing Files and Directories on a Device Running Junos OS*.

merge—Combine the configuration that is currently shown in the CLI with the configuration.

override—Discard the entire configuration that is currently shown in the CLI and load the entire configuration. Marks every object as changed.

patch—Change part of the configuration and mark only those parts as changed.

replace—Look for a **replace** tag in *filename*, delete the existing statement of the same name, and replace it with the configuration.

set—Merge a set of commands with an existing configuration. This option executes the configuration instructions line by line as they are stored in a file or from a terminal. The instructions can contain any configuration mode command, such as **set**, **edit**, **exit**, and **top**.

relative—(Optional) Use the **merge** or **replace** option without specifying the full hierarchy level.

terminal—Use the text you type at the terminal as input to the configuration. Type Ctrl+d to end terminal input.

update—Discard the entire configuration that is currently shown in the CLI, and load the entire configuration. Marks changed objects only.



NOTE: If you are using Junos OS in a Common Criteria environment, system log messages are created whenever a secret attribute is changed (for example, password changes or changes to the RADIUS shared secret). These changes are logged during the following configuration load operations:

```
load merge
load replace
load override
load update
```

For more information, see the *Secure Configuration Guide for Common Criteria and Junos-FIPS* .

Required Privilege Level	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
Related Documentation	<ul style="list-style-type: none">• <i>Loading a Configuration from a File</i>


ping

List of Syntax [Syntax on page 379](#)
 [Syntax \(QFX Series\) on page 379](#)

Syntax `ping host`
 `<bypass-routing>`
 `<count requests>`
 `<detail>`
 `<do-not-fragment>`
 `<inet | inet6>`
 `<interface source-interface>`
 `<interval seconds>`
 `<logical-system logical-system-name>`
 `<loose-source value>`
 `<mac-address mac-address>`
 `<no-resolve>`
 `<pattern string>`
 `<rapid>`
 `<record-route>`
 `<routing-instance routing-instance-name>`
 `<size bytes>`
 `<source source-address>`
 `<strict >`
 `<strict-source value.>`
 `<tos type-of-service>`
 `<ttl value>`
 `<verbose>`
 `<vpls instance-name>`
 `<wait seconds>`

Syntax (QFX Series) `ping host`
 `<bypass-routing>`
 `<count requests>`
 `<detail>`
 `<do-not-fragment>`
 `<inet>`
 `<interface source-interface>`
 `<interval seconds>`
 `<logical-system logical-system-name>`
 `<loose-source value>`
 `<mac-address mac-address>`
 `<no-resolve>`
 `<pattern string>`
 `<rapid>`
 `<record-route>`
 `<routing-instance routing-instance-name>`
 `<size bytes>`
 `<source source-address>`
 `<strict>`
 `< strict-source value>`
 `<tos type-of-service>`
 `<ttl value>`
 `<verbose>`

<wait *seconds*>

Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Check host reachability and network connectivity. The ping command sends Internet Control Message Protocol (ICMP) ECHO_REQUEST messages to elicit ICMP ECHO_RESPONSE messages from the specified host. Press Ctrl+c to interrupt a ping command.
Options	<p>host—IP address or hostname of the remote system to ping.</p> <p>bypass-routing—(Optional) Bypass the normal routing tables and send ping requests directly to a system on an attached network. If the system is not on a directly attached network, an error is returned. Use this option to ping a local system through an interface that has no route through it.</p> <p>count requests—(Optional) Number of ping requests to send. The range of values is 1 through 2,000,000,000. The default value is an unlimited number of requests.</p> <p>detail—(Optional) Include in the output the interface on which the ping reply was received.</p> <p>do-not-fragment—(Optional) Set the do-not-fragment (DF) flag in the IP header of the ping packets. For IPv6 packets, this option disables fragmentation.</p> <div><p>NOTE: In Junos OS Release 11.1 and later, when issuing the ping command for an IPv6 route with the do-not-fragment option, the maximum ping packet size is calculated by subtracting 48 bytes (40 bytes for the IPV6 header and 8 bytes for the ICMP header) from the MTU. Therefore, if the ping packet size (including the 48-byte header) is greater than the MTU, the ping operation might fail.</p></div> <p>inet—(Optional) Ping Packet Forwarding Engine IPv4 routes.</p> <p>inet6—(Optional) Ping Packet Forwarding Engine IPv6 routes.</p> <p>interface source-interface—(Optional) Interface to use to send the ping requests.</p> <p>interval seconds—(Optional) How often to send ping requests. The range of values, in seconds, is 1 through infinity. The default value is 1.</p> <p>logical-system logical-system-name—(Optional) Name of logical system from which to send the ping requests.</p> <p>Alternatively, enter the set cli logical-system logical-system-name command and then run the ping command. To return to the main router or switch, enter the clear cli logical-system command.</p>

loose-source *value*—(Optional) Intermediate loose source route entry (IPv4). Open a set of values.

mac-address *mac-address*—(Optional) Ping the physical or hardware address of the remote system you are trying to reach.

no-resolve—(Optional) Do not attempt to determine the hostname that corresponds to the IP address.

pattern *string*—(Optional) Specify a hexadecimal fill pattern to include in the ping packet.

rapid—(Optional) Send ping requests rapidly. The results are reported in a single message, not in individual messages for each ping request. By default, five ping requests are sent before the results are reported. To change the number of requests, include the **count** option.

record-route—(Optional) Record and report the packet's path (IPv4).

routing-instance *routing-instance-name*—(Optional) Name of the routing instance for the ping attempt.

size *bytes*—(Optional) Size of ping request packets. The range of values, in bytes, is **0** through **65,468**. The default value is **56**, which is effectively 64 bytes because 8 bytes of ICMP header data are added to the packet.

source *source-address*—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (**lo.0**).

strict—(Optional) Use the strict source route option (IPv4).

strict-source *value*—(Optional) Intermediate strict source route entry (IPv4). Open a set of values.

tos *type-of-service*—(Optional) Set the type-of-service (ToS) field in the IP header of the ping packets. The range of values is **0** through **255**.

If the device configuration includes the **dscp-code-point *value*** statement at the **[edit class-of-service host-outbound-traffic]** hierarchy level, the configured DSCP value overrides the value specified in this command option. In this case, the ToS field of ICMP echo request packets sent on behalf of this command carries the DSCP value specified in the **dscp-code-point** configuration statement instead of the value you specify in this command option.

ttl *value*—(Optional) Time-to-live (TTL) value to include in the ping request (IPv6). The range of values is **0** through **255**.

verbose—(Optional) Display detailed output.

vpls *instance-name*—(Optional) Ping the instance to which this VPLS belongs.

wait *seconds*—(Optional) Maximum wait time, in seconds, after the final packet is sent. If this option is not specified, the default delay is **10** seconds. If this option is used without the count option, a default count of **5** packets is used.

Required Privilege Level	network
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Junos OS ICMPv4 Rate Limit for ICMPv4 Routing Engine Messages</i>
List of Sample Output	ping hostname on page 382 ping hostname rapid on page 382 ping hostname size count on page 382
Output Fields	When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. These packets are not counted in the received packets count. They are accounted for separately.

Sample Output

ping hostname

```
user@host> ping skye
PING skye.net (192.168.169.254): 56 data bytes
64 bytes from 192.168.169.254: icmp_seq=0 ttl=253 time=1.028 ms
64 bytes from 192.168.169.254: icmp_seq=1 ttl=253 time=1.053 ms
64 bytes from 192.168.169.254: icmp_seq=2 ttl=253 time=1.025 ms
64 bytes from 192.168.169.254: icmp_seq=3 ttl=253 time=1.098 ms
64 bytes from 192.168.169.254: icmp_seq=4 ttl=253 time=1.032 ms
64 bytes from 192.168.169.254: icmp_seq=5 ttl=253 time=1.044 ms
^C [abort]
```

ping hostname rapid

```
user@host> ping skye rapid
PING skye.net (192.168.169.254): 56 data bytes
!!!!
--- skye.net ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.956/0.974/1.025/0.026 ms
```

ping hostname size count

```
user@host> ping skye size 200 count 5
PING skye.net (192.168.169.254): 200 data bytes
208 bytes from 192.168.169.254: icmp_seq=0 ttl=253 time=1.759 ms
208 bytes from 192.168.169.254: icmp_seq=1 ttl=253 time=2.075 ms
208 bytes from 192.168.169.254: icmp_seq=2 ttl=253 time=1.843 ms
208 bytes from 192.168.169.254: icmp_seq=3 ttl=253 time=1.803 ms
208 bytes from 192.168.169.254: icmp_seq=4 ttl=253 time=17.898 ms

--- skye.net ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 1.759/5.075/17.898 ms
```

request chassis beacon

Syntax (QFX Series)	<pre>request chassis beacon <all (off on)> <fpc slot-number (off on)> <interconnect-device name (cb slot-number fpc slot-number (off on)> <node-device name (off on)></pre>
Release Information	<p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	(QFX Series only) Enable or disable the beacon LED on a QFX Series device.
Options	<p>all—Turn the beacon LED either on or off on all QFabric system Interconnect and Node devices.</p> <p>cb slot-number—Turn the beacon LED either on or off on the Control Board of the QFX3008-I Interconnect device.</p> <p>fpc slot-number—Turn the beacon LED either on or off on the Flexible PIC Concentrator on the standalone QFX3500 switch or the Interconnect device.</p> <p>interconnect-device name—Turn the beacon LED either on or off on the Interconnect device.</p> <p>node-device name—Turn the beacon LED either on or off on the Node device.</p> <p>off—Turn the beacon LED off.</p> <p>on—Turn the beacon LED on.</p>
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none"> • show chassis beacon on page 590
List of Sample Output	request chassis beacon fpc 0 on (QFX Series) on page 383 request chassis beacon node-device (QFabric System) on page 383 request chassis beacon on interconnect-device fpc (QFabric System) on page 384
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis beacon fpc 0 on (QFX Series)

```
user@switch> request chassis beacon fpc 0 on

Beacon set to ON
```

request chassis beacon node-device (QFabric System)

```
user@switch> request chassis beacon node-device node1 on
```

node1 ON

request chassis beacon on interconnect-device fpc (QFabric System)

user@switch> request chassis beacon on interconnect-device fpc 2

FPC 2 ON

request chassis fpc

List of Syntax	Syntax on page 385 Syntax (TX Matrix and TX Matrix Plus Routers) on page 385 Syntax (MX Series Routers) on page 385 Syntax (MX2020 3D Universal Edge Routers) on page 385 Syntax (MX2010 3D Universal Edge Routers) on page 385 Syntax (QFabric System) on page 385 Syntax (PTX Series Packet Transport Routers) on page 385
Syntax	<code>request chassis fpc (offline online restart) slot <i>slot-number</i></code>
Syntax (TX Matrix and TX Matrix Plus Routers)	<code>request chassis fpc (offline online restart) slot <i>slot-number</i> <lcc <i>number</i>></code>
Syntax (MX Series Routers)	<code>request chassis fpc (offline online restart) slot <i>slot-number</i> <all-members></code> <code><local></code> <code><member <i>member-id</i>></code>
Syntax (MX2020 3D Universal Edge Routers)	<code>request chassis fpc (offline online restart) slot <i>slot-number</i></code>
Syntax (MX2010 3D Universal Edge Routers)	<code>request chassis fpc (offline online restart) slot <i>slot-number</i></code>
Syntax (QFabric System)	<code>request chassis fpc</code> <code><interconnect-device <i>name</i> slot <i>slot-number</i> (offline online)></code> <code><(offline online) interconnect-device <i>name</i> slot <i>slot-number</i>></code> <code><slot <i>slot-number</i> interconnect-device <i>name</i> (offline online)></code>
Syntax (PTX Series Packet Transport Routers)	<code>request chassis fpc (offline online restart) slot <i>slot-number</i></code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS 11.3 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>(M20, M40, M40e, M120, M160, M320, MX Series, and T Series routers, QFabric systems, EX Series switches, and PTX Series Packet Transport Routers only) Control the operation of the Flexible PIC Concentrator (FPC). For information about the meaning of “FPCs” on the switches, see <i>EX Series Switches Hardware and CLI Terminology Mapping</i>.</p>



NOTE: Beginning in Junos OS Release 12.3, it is possible that FPCs brought offline using the request chassis fpc slot *fpc-slot* offline operational-mode CLI command can come online during a configuration commit or power-supply replacement procedure. As an alternative, use the set fpc *fpc-slot* power off configuration-mode command at the [edit chassis] hierarchy level to ensure that the FPCs remain offline.

Options **offline**—Take the FPC offline.

online—Bring the FPC online.

interconnect-device *name*—(QFabric systems only) Bring the Flexible Port Concentrator (FPC) on the QFX3008-I Interconnect device either offline or online:

- (QFabric System) On a QFabric system, specify the name of the QFX3008-I Interconnect device containing the Flexible Port Concentrator (FPC) you want to bring either offline or online.

restart—Restart the FPC.

slot *slot-number*—FPC slot number:

- M20 router—0 through 3.
- M120 router—0 through 5.
- MX240 router—0 through 2. On the MX240 router, slot-number corresponds to the Dense Port Concentrator (DPC) slot number. If an MPC is installed, slot-number corresponds to the MPC slot number.
- MX480 router—0 through 5. On the MX480 router, slot-number corresponds to the Dense Port Concentrator (DPC) slot number. If an MPC is installed, slot-number corresponds to the MPC slot number.
- MX960 router—0 through 11. On the MX960 router, slot-number corresponds to the Dense Port Concentrator (DPC) slot number. If an MPC is installed, slot-number corresponds to the MPC slot number.
- MX2020 router—0 through 19.
- MX2010 router—0 through 9.
- TX Matrix and TX Matrix Plus routers only—On the TX Matrix router, if you specify the number of the T640 router by using the **lcc *number*** option (the recommended method), replace **slot-number** with a value from 0 through 7. Otherwise, replace **slot-number** with a value from 0 through 31.

Likewise, on a TX Matrix Plus router, if you specify the number of the T1600 or T4000 router by using the **lcc *number*** option (the recommended method), replace **slot-number** with a value from 0 through 7. Otherwise, replace **slot-number** with a value from 0 through 31. In case of TX Matrix Plus router with 3D SIBs, replace

slot-number with a value from 0 through 63. For example, the following commands have the same result:

```
user@host> request chassis fpc lcc 1 slot 1 offline
user@host> request chassis fpc slot 9 offline
```

- Other routers—0 through 7.
- QFabric System—Replace *slot-number* with a value from 0 through 2.
- EX Series switches:
 - EX4200 switches in a Virtual Chassis configuration—Replace *slot-number* with a value from 0 through 9.
 - EX6210 switches—Replace *slot-number* with a value from 0 through 9.



NOTE: These commands are not supported for slots 4 and 5 when a Switch Fabric and Routing Engine (SRE) module is installed in those slots. These commands are supported for slots 4 and 5 only if a line card is installed in them.

- EX8208 switches—Replace *slot-number* with a value from 0 through 7.
- EX8216 switches—Replace *slot-number* with a value from 0 through 15.
- PTX5000 Packet Transport Router—Replace *slot-number* with a value from 0 through 7.

all-members—(MX Series routers only) (Optional) Change FPC status of all members of the Virtual Chassis configuration.

local—(MX Series routers only) (Optional) Change FPC status of the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Change FPC status of the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

lcc *number*—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.

- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

Required Privilege Level maintenance

Related Documentation

- [show chassis fpc on page 720](#)
- *show chassis fpc-feb-connectivity*
- *show chassis fabric fpcs*
- *Configuring the Junos OS to Make a Flexible PIC Concentrator Stay Offline*
- *Configuring the Junos OS to Resynchronize FPC Sequence Numbers with Active FPCs when an FPC Comes Online*
- *MX960 Flexible PIC Concentrator Description*

List of Sample Output

- [request chassis fpc on page 388](#)
- [request chassis fpc \(MX Series Routers with Media Services Blade \[MSB\]\) on page 388](#)
- [request chassis fpc \(MX2020 Router\) on page 388](#)
- [request chassis fpc \(MX2010 Router\) on page 388](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

[request chassis fpc](#)

```
user@host> request chassis fpc online slot 0
FPC 0 already online
```

[request chassis fpc \(MX Series Routers with Media Services Blade \[MSB\]\)](#)

```
user@host> request chassis fpc slot 0
Possible completions:
offline           Take FPC offline
online            Bring FPC online
restart           Restart FPC
```

[request chassis fpc \(MX2020 Router\)](#)

```
user@host >request chassis fpc online slot 2
FPC 2 already online
```

[request chassis fpc \(MX2010 Router\)](#)

```
user@host >request chassis fpc offline slot 5
Offline initiated, use "show chassis fpc" to verify
```

request chassis pic

List of Syntax	Syntax on page 389 Syntax (ACX4000 Series Routers) on page 389 Syntax (TX Matrix and TX Matrix Plus Routers) on page 389
Syntax	<code>request chassis pic (offline online) fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
Syntax (ACX4000 Series Routers)	<code>request chassis pic (offline online) fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
Syntax (TX Matrix and TX Matrix Plus Routers)	<code>request chassis pic (offline online) fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i> <lcc <i>number</i>></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.3 for ACX4000 Routers. Command introduced in Junos OS Release 13.2 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Control the operation of the PIC.



NOTE: The `request chassis pic (offline | online) fpc-slot slot number pic-slot slot-number` command is not supported for built-in PICs on MX Series routers.

To view a list of built-in PICs on the router or switch chassis, use the `show chassis hardware` command.



NOTE: This command is not supported on MX960 and MX2020 routers with MPC5EQ.



NOTE: T1600 routers and TX Matrix Plus routers with 100-Gigabit Ethernet PICs require two adjacent PIC slots, 0 and 1, for each PIC. Therefore, only online and offline command options to PIC slot 0 are allowed. Use of the online and offline command options for PIC slot 1 with the described router and PIC combination is not allowed.



NOTE: In T Series routers, when the PIC state is set from offline to online or vice-versa before the processing is complete for the previous command, you are provided feedback on the status of your request. The following sample messages are displayed if you try to set a PIC offline or online:

```
user@switch> request chassis pic fpc-slot 1 pic-slot 0 online
fpc 1 pic 0 online initiated, use "show chassis fpc pic-status" to verify
```

```
user@switch> request chassis pic fpc-slot 1 pic-slot 0 online
FPC 1 PIC 0 already transitioning to online
```

When the same PIC is set to a different state while the transition is in progress, you are provided feedback on the status of your request.

```
user@switch> request chassis pic fpc-slot 1 pic-slot 0 offline
FPC 1, PIC 0 already transitioning to online. Please retry later.
```

Options **offline**—Take the PIC offline.

online—Bring the PIC online.

fpc-slot *slot-number*—Flexible PIC Concentrator (FPC) slot number. Replace *slot-number* with a value appropriate for your router or switch:

- ACX4000 routers—1 or 2.
- EX Series switches:
 - EX3200 switches and EX4200 standalone switches—0.
 - EX4200 switches in a Virtual Chassis configuration—0 through 9 (switch's member ID).
 - EX8208 switches—0 through 7 (line card).
 - EX8216 switches—0 through 15 (line card).
- M5, M7i, M10, and M10i routers—0 or 1.
- M20 routers—0 through 3.
- M40 and M40e routers—0 through 7.
- M120 routers—0 through 5.
- M160 routers—0 through 7.
- M320 routers—0 through 7.
- MX 5, MX10, and MX40 routers—0 or 1.
- MX80 routers—0 or 1.
- MX240 routers—0 through 2
- MX480 routers—0 through 5
- MX2020 routers—0 through 19.

- MX2010 routers—0 through 9.
- MX960 routers—0 through 11.
- PTX5000 routers—0 or 1.
- T Series routers—0 through 7.
- TX Matrix and TX Matrix Plus routers only—On a TX Matrix router, if you specify the number of the T640 router by using the **lcc number** option (the recommended method), replace **slot-number** with a value from 0 through 7. Otherwise, replace **slot-number** with a value from 0 through 31.

Likewise, on a TX Matrix Plus router, if you specify the **number** of the T1600 or T4000 router by using the **lcc number** option (the recommended method), replace **slot-number** with a value from 0 through 7. Otherwise, for the FPC slot number, replace **slot-number** with a value from 0 through 31. On a TX Matrix Plus router with 3D SIBs to assign the FPC slot number, replace **slot-number** with a value from 0 through 63. For example, the following commands have the same result:

```
user@host> request chassis pic fpc-slot 1 lcc 1 pic-slot 0 offline
user@host> request chassis pic fpc-slot 9 pic-slot 0 offline
```

- QFX5100 standalone switches—0.

pic-slot slot-number—PIC slot number.

- EX3200 and EX4200 switches—0 for built-in network interfaces and 1 for interfaces on uplink modules.
- EX8208 and EX8216 switches—0.
- M Series routers—0, 1, 2, or 3
- MX960 router—**slot-number** corresponds to the slot number of the Packet Forwarding Engine.
- PTX5000 routers—0 or 1.
- T320 router—0 or 1.
- T640 router—0, 1, 2, or 3.
- T1600 router —0, 1, 2, or 3.
- T4000 router—0, 1, 2, or 3.
- QFX5100 standalone switches—0, 1, or 2. PIC 0 is used for all interfaces that are not configured on expansion modules, and PIC 1 and PIC 2 are used for interfaces configured on expansion modules.

lcc number—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

Required Privilege Level maintenance

Related Documentation

- [show chassis hardware on page 758](#)
- [show chassis pic on page 966](#)
- *Configuring the PIC Type*

List of Sample Output [request chassis pic on page 392](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

[request chassis pic](#)

```
user@host> request chassis pic pic-slot 0 online fpc-slot 0
FPC 0, PIC 0 is already online
```

request chassis routing-engine master

List of Syntax	Syntax on page 393 Syntax (M Series, MX Series, T Series Routers) on page 393 Syntax (TX Matrix Routers) on page 393 Syntax (TX Matrix Plus Routers) on page 393 Syntax (MX Series Virtual Chassis) on page 393 Syntax (QFX Series) on page 393
Syntax	request chassis routing-engine master (acquire release switch) <force> <no-confirm>
Syntax (M Series, MX Series, T Series Routers)	request chassis routing-engine master (acquire release switch <check>) <no-confirm>
Syntax (TX Matrix Routers)	request chassis routing-engine master (acquire release switch) (lcc <i>number</i> scc all-chassis) <force> <no-confirm>
Syntax (TX Matrix Plus Routers)	request chassis routing-engine master (acquire release switch) (lcc <i>number</i> sfc all-chassis all-lcc) <force> <no-confirm>
Syntax (MX Series Virtual Chassis)	request chassis routing-engine master (acquire release switch <check>) <all-members> <local> <member <i>member-id</i> > <no-confirm>
Syntax (QFX Series)	request chassis routing-engine master (release switch) <check> <interconnect-device <i>name</i> > <node-group <i>name</i> > <no-confirm>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>all-chassis option added in Junos OS Release 8.0.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.3 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	For routers or switches with multiple Routing Engines, control which Routing Engine is the master.



CAUTION: (Routing matrix based on the TX Matrix or TX Matrix Plus routers only) Within the routing matrix, we recommend that all Routing Engines run the same Junos OS Release. If you run different releases on the Routing Engines and a change in mastership occurs on any backup Routing Engine in the routing matrix, one or all routers (in a routing matrix based on the TX Matrix router or in a routing matrix based on a TX Matrix Plus router) might become logically disconnected from the TX Matrix router and cause data loss. For more information, see the [TX Matrix Router Hardware Guide](#) or the *Junos OS High Availability Library for Routing Devices*.



NOTE: Successive graceful Routing Engine switchover events must be a minimum of 240 seconds (4 minutes) apart after both Routing Engines have come up.

If the router or switch displays a warning message similar to “Standby Routing Engine is not ready for graceful switchover. Packet Forwarding Engines that are not ready for graceful switchover might be reset,” do not attempt switchover. If you choose to proceed with switchover, only the Packet Forwarding Engines that were not ready for graceful switchover are reset. None of the Flexible PIC concentrators (FPCs) should spontaneously restart. We recommend that you wait until the warning no longer appears and then proceed with the switchover.

You will receive an error message stating “Command aborted. Not ready for mastership switch, try after n seconds” when this command is re-entered before 240 seconds have elapsed on EX Series switches.



NOTE: On a QFabric system, to avoid traffic loss on the network Node group, switch mastership of the routing engine to the backup routing engine, and then reboot.

Options **acquire**—Attempt to become the master Routing Engine.

release—Request that the other Routing Engine become the master.

switch—Toggle mastership between Routing Engines.



NOTE: The **acquire** option should be used with caution because acquiring a Routing Engine may result in a corrupted database. If possible, use the **switch** option instead.

The **acquire**, **release**, and **switch** options have the following suboptions:

all-chassis—(TX Matrix and TX Matrix Plus routers only) On a routing matrix composed of a TX Matrix router and the attached T640 routers, switch mastership on all the Routing Engines in the routing matrix. Likewise, on a routing matrix composed of a TX Matrix Plus router and the attached T1600 or T4000 routers, switch mastership on all the Routing Engines in the routing matrix.

all-lcc—(TX Matrix Plus routers only) Request to acquire mastership for all line-card chassis (LCC).

all-members—(MX Series routers only) (Optional) Control Routing Engine mastership on the Routing Engines in all member routers of the Virtual Chassis configuration.

check—(QFabric systems, MX104, MX480, MX960, MX2010, and MX2020 routers, and PTX5000 routers only) (Optional) Available only with the **switch** option. Check graceful switchover status of the standby Routing Engine before toggling mastership between Routing Engines.

interconnect-device *name*—(QFabric systems only) (Optional) Control Routing Engine mastership on the Routing Engines on an Interconnect device.

lcc *number*—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Control Routing Engine mastership on the Routing Engines in the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Control Routing Engine mastership on the Routing Engines of the specified member in the Virtual Chassis Configuration. Replace *member-id* with a value of 0 or 1.

no-confirm—(Optional) Do not request confirmation for the switch.

node-group *name*—(QFabric systems only) (Optional) Control Routing Engine mastership on the Routing Engines on a Node group.

scc—(TX Matrix routers only) TX Matrix (switch-card chassis).

sfc—(TX Matrix Plus routers only) TX Matrix Plus router (or switch-fabric chassis).

force—(Optional) Available only with the **acquire** option. Force the change to a new master Routing Engine.



NOTE: The **force** option is not supported on the M Series, MX Series, or T Series routers.

Additional Information

Because both Routing Engines are always running, the transition from one to the other as the master Routing Engine is immediate. However, the changeover interrupts communication to the System and Switch Board (SSB). The SSB takes several seconds to reinitialize the Flexible PIC Concentrators (FPCs) and restart the PICs. Interior gateway protocol (IGP) and BGP convergence times depend on the specific network environment.

By default, the Routing Engine in slot 0 (**RE0**) is the master and the Routing Engine in slot 1 (**RE1**) is the backup. To change the default master Routing Engine, include the **routing-engine** statement at the **[edit chassis redundancy]** hierarchy level in the configuration. For more information, see the *Junos OS Administration Library for Routing Devices*

To have the backup Routing Engine become the master Routing Engine, use the **request chassis routing-engine master switch** command. If you use this command to change the master and then restart the chassis software for any reason, the master reverts to the default setting.



NOTE: Although the configurations on the two Routing Engines do not have to be the same and are not automatically synchronized, we recommend making both configurations the same.

Required Privilege Level maintenance

Related Documentation

- [show chassis routing-engine on page 982](#)
- *Configuring Routing Engine Redundancy*
- *Switching the Global Master and Backup Roles in a Virtual Chassis Configuration*

List of Sample Output

- [request chassis routing-engine master acquire on page 397](#)
- [request chassis routing-engine master switch on page 397](#)
- [request chassis routing-engine master switch check on page 397](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis routing-engine master acquire

```
user@host> request chassis routing-engine master acquire

warning: Traffic will be interrupted while the PFE is re-initialized

warning: The other routing engine's file system could be corrupted

Reset other routing engine and become master ? [yes,no] (no)
```

request chassis routing-engine master switch

```
user@host> request chassis routing-engine master switch

warning: Traffic will be interrupted while the PFE is re-initialized
Toggle mastership between Routing Engines ? [yes,no] (no) yes

Resolving mastership...
Complete. The other Routing Engine becomes the master.
```

Switch mastership back to the local Routing Engine:

```
user@host> request chassis routing-engine master switch

warning: Traffic will be interrupted while the PFE is re-initialized
Toggle mastership between routing engines ? [yes,no] (no) yes

Resolving mastership...
Complete. The local routing engine becomes the master.
```

request chassis routing-engine master switch check

```
Usage shown for M Series, MX Series, and T Series routers.

{master}[edit]

user@host> request chassis routing-engine master switch check

warning: Standby Routing Engine is not ready for graceful switchover.

{master}[edit]

user@host> request chassis routing-engine master switch check
Switchover Ready

You can similarly check the backup Routing Engine.
```

request message


Syntax	<code>request message all message "text"</code> <code>request message message "text" (terminal <i>terminal-name</i> user <i>user-name</i>)</code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display a message on the screens of all users who are logged in to the router or switch or on specific screens.
Options	all —Display a message on the terminal of all users who are currently logged in. message "text" —Message to display. terminal <i>terminal-name</i> —Name of the terminal on which to display the message. user <i>user-name</i> —Name of the user to whom to direct the message.
Required Privilege Level	maintenance
List of Sample Output	request message message on page 398
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request message message

```
user@host> request message message "Maintenance window in 10 minutes" user maria
Message from user@host on tty0 at 20:27 ...
Maintenance window in 10 minutes
EOF
```

request system configuration rescue delete


Syntax	request system configuration rescue delete
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Delete an existing rescue configuration.
	<div>  <p>NOTE: The [edit system configuration] hierarchy is not available on QFabric systems.</p> </div>
Options	This command has no options.
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none"> • request system configuration rescue save on page 400 • request system software rollback on page 1311 • show system commit on page 1084
List of Sample Output	request system configuration rescue delete on page 399
Output Fields	This command produces no output.

Sample Output

request system configuration rescue delete

```
user@host> request system configuration rescue delete
```

request system configuration rescue save

Syntax	request system configuration rescue save
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Save the most recently committed configuration as the rescue configuration so that you can return to it at any time by using the rollback command.
<div> NOTE: The [edit system configuration] hierarchy is not available on QFabric systems.</div>	
Options	This command has no options.
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none">• request system software delete on page 1305• request system software rollback on page 1311• show system commit on page 1084
List of Sample Output	request system configuration rescue save on page 400
Output Fields	This command produces no output.

Sample Output

request system configuration rescue save

```
user@host> request system configuration rescue save
```

request system halt

List of Syntax	Syntax on page 401 Syntax (EX Series Switches) on page 401 Syntax (PTX Series) on page 401 Syntax (TX Matrix Router) on page 401 Syntax (TX Matrix Plus Router) on page 401 Syntax (MX Series Router) on page 402 Syntax (QFX Series) on page 402
Syntax	<pre>request system halt <at <i>time</i>> <backup-routing-engine> <both-routing-engines> <other-routing-engine> <in <i>minutes</i>> <media (compact-flash disk removable-compact-flash usb)> <message "<i>text</i>"></pre>
Syntax (EX Series Switches)	<pre>request system halt <all-members> <at <i>time</i>> <backup-routing-engine> <both-routing-engines> <in <i>minutes</i>> <local> <media (external internal)> <member <i>member-id</i>> <message "<i>text</i>"> <other-routing-engine> <slice <i>slice</i>></pre>
Syntax (PTX Series)	<pre>request system halt <at <i>time</i>> <backup-routing-engine> <both-routing-engines> <other-routing-engine> <in <i>minutes</i>> <media (compact-flash disk)> <message "<i>text</i>"></pre>
Syntax (TX Matrix Router)	<pre>request system halt <all-lcc lcc <i>number</i> scc> <at <i>time</i>> <backup-routing-engine> <both-routing-engines> <other-routing-engine> <in <i>minutes</i>> <media (compact-flash disk)> <message "<i>text</i>"></pre>
Syntax (TX Matrix Plus Router)	<pre>request system halt <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i>></pre>

	<pre> <at <i>time</i>> <backup-routing-engine> <both-routing-engines> <other-routing-engine> <in <i>minutes</i>> <media (compact-flash disk)> <message "<i>text</i>"> </pre>
Syntax (MX Series Router)	<pre> request system halt <all-members> <at <i>time</i>> <backup-routing-engine> <both-routing-engines> <in <i>minutes</i>> <local> <media (external internal)> <member <i>member-id</i>> <message "<i>text</i>"> <other-routing-engine> </pre>
Syntax (QFX Series)	<pre> request system halt <all-members> <at <i>time</i>> <both-routing-engines> <director-device <i>director-device-id</i>> <in <i>minutes</i>> <local> <media > <member <i>member-id</i>> <message "<i>text</i>"> <other-routing-engine> <slice <i>slice</i>> </pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>other-routing-engine option introduced in Junos OS Release 8.0.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>director-device option introduced for QFabric systems in Junos OS Release 12.2.</p> <p>backup-routing-engine option introduced in Junos OS Release 13.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Stop the router or switch software.</p>



NOTE: When you issue this command on an individual component—for example, a Node device—in a QFabric system, you will receive a warning that says “Hardware-based members will halt, Virtual Junos Routing Engines will reboot.” If you want to halt only one member of a Node group, issue this command with the **member** option on the Node device CLI, because you cannot issue this command from the QFabric CLI. Also, issuing this command might cause traffic loss on an individual component.

When you issue this command on a QFX5100 switch, you are not prompted to reboot. You must power cycle the switch to reboot.

Options **none**—Stop the router or switch software immediately.

all-chassis—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Halt all chassis.

all-lcc—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, halt all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus router, halt all T1600 or T4000 routers connected to the TX Matrix Plus router.

all-members—(EX4200 switches and MX Series routers only) (Optional) Halt all members of the Virtual Chassis configuration.

at time —(Optional) Time at which to stop the software, specified in one of the following ways:

- **now**—Stop the software immediately. This is the default.
- **+minutes**—Number of minutes from now to stop the software.
- **yymmddhhmm**—Absolute time at which to stop the software, specified as year, month, day, hour, and minute.
- **hh:mm**—Absolute time on the current day at which to stop the software.

backup-routing-engine—(Optional) Halt the backup Routing Engine. This command halts the backup Routing Engine, regardless from which Routing Engine the command is executed. For example, if you issue the command from the master Routing Engine, the backup Routing Engine is halted. If you issue the command from the backup Routing Engine, the backup Routing Engine is halted.

both-routing-engines—(Optional) Halt both Routing Engines at the same time.

director-device *director-device-id*—(QFabric systems only) Halt a specific Director device.

lcc number—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, halt a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, halt a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Halt the local Virtual Chassis member.

in *minutes*—(Optional) Number of minutes from now to stop the software. This option is an alias for the at *+minutes* option.

media (compact-flash | disk | removable-compact-flash | usb)—(Optional) Boot medium for the next boot. (The options **removable-compact-flash** and **usb** pertain to J Series routers only.)

media (external | internal)—(EX Series and QFX Series switches and MX Series routers only) (Optional) Halt the boot media:

- **external**—Halt the external mass storage device.
- **internal**—Halt the internal flash device.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Halt the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

message "*text*"—(Optional) Message to display to all system users before stopping the software.

other-routing-engine—(Optional) Halt the other Routing Engine from which the command is issued. For example, if you issue the command from the master Routing Engine, the backup Routing Engine is halted. Similarly, if you issue the command from the backup Routing Engine, the master Routing Engine is halted.

scc—(TX Matrix routers only) (Optional) Halt the TX Matrix router (or switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Halt the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

slice *slice*—(EX Series and QFX Series switches only) (Optional) Halt a partition on the boot media. This option has the following suboptions:

- 1—Halt partition 1.
- 2—Halt partition 2.

- **alternate**—Reboot from the alternate partition.

Additional Information On the M7i router, the **request system halt** command does not immediately power down the Packet Forwarding Engine. The power-down process can take as long as 5 minutes.

On a TX Matrix router and TX Matrix Plus router if you issue the **request system halt** command on the master Routing Engine, all the master Routing Engines connected to the routing matrix are halted. If you issue this command on the backup Routing Engine, all the backup Routing Engines connected to the routing matrix are halted.



NOTE: If you have a router or switch with two Routing Engines and you want to shut the power off to the router or switch or remove a Routing Engine, you must first halt the backup Routing Engine (if it has been upgraded), and then halt the master Routing Engine. To halt a Routing Engine, issue the **request system halt** command. You can also halt both Routing Engines at the same time by issuing the **request system halt both-routing-engines** command.

Required Privilege Level maintenance

Related Documentation

- [clear system reboot on page 355](#)
- [request system power-off on page 408](#)
- [Rebooting and Halting a Device on page 26](#)
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

List of Sample Output

- [request system halt on page 406](#)
- [request system halt \(In 2 Hours\) on page 406](#)
- [request system halt \(Immediately\) on page 406](#)
- [request system halt \(At 1:20 AM\) on page 406](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system halt

```
user@host> request system halt
Halt the system ? [yes,no] (no) yes

*** FINAL System shutdown message from root@section2 ***
System going down IMMEDIATELY
Terminated
...
syncing disks... 11 8 done
The operating system has halted.
Please press any key to reboot.
```

request system halt (In 2 Hours)

The following example, which assumes that the time is 5 PM (1700), illustrates three different ways to request that the system stop 2 hours from now:

```
user@host> request system halt at +120
user@host> request system halt in 120
user@host> request system halt at 19:00
```

request system halt (Immediately)

```
user@host> request system halt at now
```

request system halt (At 1:20 AM)

To stop the system at 1:20 AM, enter the following command. Because 1:20 AM is the next day, you must specify the absolute time.

```
user@host> request system halt at yymdd120
request system halt at 120
Halt the system at 120? [yes,no] (no) yes
```

request system logout

Syntax	<code>request system logout (pid <i>pid</i> terminal <i>terminal</i> user <i>username</i>) <all></code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Log out users from the router or switch and the configuration database. If a user held the configure exclusive lock, this command clears the exclusive lock.
Options	<p>all—(Optional) Log out all sessions owned by a particular PID, terminal session, or user. (On a TX Matrix or TX Matrix Plus router, this command is broadcast to all chassis.)</p> <p>pid <i>pid</i>—Log out the user session using the specified management process identifier (PID). The PID type must be management process.</p> <p>terminal <i>terminal</i>—Log out the user for the specified terminal session.</p> <p>user <i>username</i>—Log out the specified user.</p>
Required Privilege Level	configure
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Administration Library for Routing Devices</i>
List of Sample Output	request system logout on page 407
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system logout

```
user@host> request system logout user tammy all
Connection closed by foreign host.
```

request system power-off

List of Syntax	Syntax on page 408 Syntax (EX Series Switches) on page 408 Syntax (TX Matrix Router) on page 408 Syntax (TX Matrix Plus Router) on page 408 Syntax (MX Series Router) on page 408 Syntax (QFX Series) on page 409
Syntax	<pre>request system power-off <both-routing-engines> <other-routing-engine> <at <i>time</i>> <in <i>minutes</i>> <media (compact-flash disk removable-compact-flash usb)> <message "<i>text</i>"></pre>
Syntax (EX Series Switches)	<pre>request system power-off <all-members> <at <i>time</i>> <both-routing-engines> <in <i>minutes</i>> <local> <media (external internal)> <member <i>member-id</i>> <message "<i>text</i>"> <other-routing-engine> <slice <i>slice</i>></pre>
Syntax (TX Matrix Router)	<pre>request system power-off <all-chassis all-lcc lcc <i>number</i> scc> <both-routing-engines> <other-routing-engine> <at <i>time</i>> <in <i>minutes</i>> <media (compact-flash disk)> <message "<i>text</i>"></pre>
Syntax (TX Matrix Plus Router)	<pre>request system power-off <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i>> <both-routing-engines> <other-routing-engine> <at <i>time</i>> <in <i>minutes</i>> <media (compact-flash disk)> <message "<i>text</i>"></pre>
Syntax (MX Series Router)	<pre>request system power-off <all-members> <at <i>time</i>> <both-routing-engines> <in <i>minutes</i>> <local></pre>

```

<media (external | internal)>
<member member-id>
<message "text">
<other-routing-engine>

```

Syntax (QFX Series) request system power-off
 <at *time*>
 <in *minutes*>
 <media (external | internal)>
 <message "*text*">
 <slice *slice*>

Release Information Command introduced in Junos OS Release 8.0.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 11.1 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Power off the software.



NOTE: When you issue this command on an individual component in a QFabric system, you will receive a warning that says “Hardware-based members will halt, Virtual Junos Routing Engines will reboot.” If you want to halt only one member, use the *member* option. You cannot issue this command from the QFabric CLI.



NOTE: For a standalone chassis (such as MX Series, PTX Series, and T Series routers), the request to power off the system is applicable only to the Routing Engines. When you request to power off both Routing Engines, all the FPCs in the chassis shut down after approximately 10 minutes and the chassis fans run at full speed. The FPCs shut down because they no longer have communication with the Routing Engines and an Inter-Integrated Circuit (I2C) timeout occurred.

Options none—Power off the router or switch software immediately.

all-chassis—(Optional) (TX Matrix and TX Matrix Plus router only) Power off all Routing Engines in the chassis.

all-lcc—(Optional) (TX Matrix and TX Matrix Plus router only) On a TX Matrix router, power off all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus router, power off all T1600 routers (or line-card chassis) connected to the TX Matrix Plus router.

all-members—(EX4200 switches and MX Series routers only) (Optional) Power off all members of the Virtual Chassis configuration.

at *time*—(Optional) Time at which to power off the software, specified in one of the following ways:

- **now**—Power off the software immediately. This is the default.
- **+*minutes***—Number of minutes from now to power off the software.
- ***yymmddhhmm***—Absolute time at which to power off the software, specified as year, month, day, hour, and minute.
- ***hh:mm***—Absolute time on the current day at which to power off the software.

both-routing-engines—(Optional) Power off both Routing Engines at the same time.

in *minutes*—(Optional) Number of minutes from now to power off the software. This option is an alias for the **at +*minutes*** option.

lcc *number*—(Optional) (TX Matrix and TX Matrix Plus router only) On a TX Matrix router, power off a T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, power off a specific router that is connected to the TX Matrix Plus router. Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Power off the local Virtual Chassis member.

media (*compact-flash* | *disk* | *removable-compact-flash* | *usb*)—(Optional) Boot medium for the next boot. (The options **removable-compact-flash** and **usb** pertain to the J Series routers only.)

media (*external* | *internal*)—(EX Series and QFX Series switches and MX Series routers only) (Optional) Power off the boot media:

- **external**—Power off the external mass storage device.
- **internal**—Power off the internal flash device.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Power off the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

message "*text*"—(Optional) Message to display to all system users before powering off the software.

other-routing-engine—(Optional) Power off the other Routing Engine from which the command is issued. For example, if you issue the command from the master Routing Engine, the backup Routing Engine is halted. Similarly, if you issue the command from the backup Routing Engine, the master Routing Engine is halted.

scc—(Optional) (TX Matrix router only) Power off only the master Routing Engine or the backup Routing Engine on the TX Matrix router (or switch-card chassis). If you issue the command from the master Routing Engine, the master SCC is powered off. If you issue the command from the backup Routing Engine, the backup SCC is powered off.

sfc number—(Optional) (TX Matrix Plus router only) Power off only the master Routing Engine or the backup Routing Engine on the TX Matrix Plus router (or switch-fabric chassis). If you issue the command from the master Routing Engine, the master SFC is powered off. If you issue the command from the backup Routing Engine, the backup SFC is powered off. Replace *number* with zero.

slice slice—(EX Series and QFX Series switches only) (Optional) Power off a partition on the boot media. This option has the following suboptions:

- **1**—Power off partition 1.
- **2**—Power off partition 2.
- **alternate**—Reboot from the alternate partition.

Additional Information On a routing matrix composed of a TX Matrix router and T640 routers, if you issue the **request system power-off** command on the TX Matrix master Routing Engine, all the master Routing Engines connected to the routing matrix are powered off. If you issue this command on the backup Routing Engine, all the backup Routing Engines connected to the routing matrix are powered off.

Likewise, on a routing matrix composed of a TX Matrix Plus router and T1600 routers, if you issue the **request system power-off** command on the TX Matrix Plus master Routing Engine, all the master Routing Engines connected to the routing matrix are powered off. If you issue this command on the backup Routing Engine, all the backup Routing Engines connected to the routing matrix are powered off.

If you issue the **request system power-off both-routing-engines** command on the TX Matrix or TX Matrix Plus router, all the Routing Engines on the routing matrix are powered off.

Required Privilege Level maintenance

List of Sample Output [request system power-off on page 412](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system power-off

```
user@host> request system power-off message "This router will be powered off in 30 minutes.  
Please save your data and log out immediately."  
warning: This command will not halt the other routing-engine.  
If planning to switch off power, use the both-routing-engines option.  
Power Off the system ? [yes,no] (no) yes  
  
*** FINAL System shutdown message from remote@nutmeg ***  
System going down IMMEDIATELY  
  
This router will be powered off in 30 minutes. Please save your data and log out  
immediately.  
  
Shutdown NOW!  
[pid 5177]
```

request system reboot

Syntax (QFX Series) request system reboot
 <all <graceful>>
 <at time>
 <director-device *name*>
 <director-group <graceful>>
 <fabric <graceful>>
 <in minutes>
 <hypervisor>
 <media >
 <message "text">
 <node-group *name*>
 <slice (1 | 2 | alternate)>

Release Information Command introduced in Junos OS Release 11.1 for the QFX Series.

Description Reboot the Junos OS.



NOTE: On a QFabric system, to avoid traffic loss on the network Node group, switch mastership of the Routing Engine to the backup Routing Engine, and then reboot.

Reboot requests are recorded in the system log files, which you can view with the **show log messages** command. You can view the process names with the **show system processes** command.

Options **none**—Reboots the software immediately.

all—(QFabric systems only) (Optional) Reboots the software on the Director group, fabric control Routing Engines, fabric manager Routing Engines, Interconnect devices, and network and server Node groups.

at time—(Optional) Time at which to reboot the software, specified in one of the following ways:

- **+minutes**—Number of minutes from now to reboot the software.
- **hh:mm**—Absolute time on the current day at which to reboot the software, specified in 24-hour time.
- **now**—Stop or reboot the software immediately. This is the default.
- **yymmddhhmm**—Absolute time at which to reboot the software, specified as year, month, day, hour, and minute.

director-device *name*—(QFabric systems only) (Optional) Reboots the software on the Director device and the default partition (QFabric CLI).

director-group—(QFabric systems only) (Optional) Reboots the software on the Director group and the default partition (QFabric CLI).

fabric—(QFabric systems only) (Optional) Reboots the fabric control Routing Engines and the Interconnect devices.

graceful—(QFabric systems only) (Optional) Allows the QFabric component to reboot with minimal impact to network traffic. This option is only available for the **all**, **fabric**, and **director-group** options.

in minutes—(Optional) Number of minutes from now to reboot the software. This option is an alias for the **at +minutes** option.

hypervisor—(Optional) Reboot Junos OS, host OS, and any installed guest VMs.

media (external | internal)—(Optional) Boot medium for the next boot. The external option reboots the switch using a software package stored on an external boot source, such as a USB flash drive. The internal option reboots the switch using a software package stored in an internal memory source.

message "text"—(Optional) Message to display to all system users before rebooting the software.

node-group name—(QFabric systems only) (Optional) Reboots the software on a server Node group or a network Node group.

routing-engine—(Optional) Reboot the Routing Engine.

slice (1 | 2 | alternate)—(Optional) Reboot using the specified partition on the boot media. This option has the following suboptions:



NOTE: The slice option is not supported on the QFX5100 switch, because there is no alternate slice when Junos OS boots as a Virtual Machine (VM). To switch to previous version of Junos OS, issue the **request system software rollback** command.

- **1**—Reboot from partition 1.
- **2**—Reboot from partition 2.
- **alternate**—Reboot from the alternate partition, which is the partition that did not boot the switch at the last bootup.

Required Privilege Level maintenance

Related Documentation

- [clear system reboot on page 355](#)
- [Rebooting and Halting a Device on page 26](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system reboot

```
user@switch> request system reboot
Reboot the system ? [yes,no] (no)
```

request system reboot (At 2300)

```
user@switch> request system reboot at 2300 message ?Maintenance time!?
Reboot the system ? [yes,no] (no) yes
```

```
shutdown: [pid 186]
*** System shutdown message from root@berry.network.net ***
System going down at 23:00
```

request system reboot (In 2 Hours)

The following example, which assumes that the time is 5 PM (1700), illustrates three different ways to request the system to reboot in 2 hours:

```
user@switch> request system reboot at +120
user@switch> request system reboot in 120
user@switch> request system reboot at 19:00
```

request system reboot (Immediately)

```
user@switch> request system reboot at now
```

request system reboot (At 1:20 AM)

To reboot the system at 1:20 AM, enter the following command. Because 1:20 AM is the next day, you must specify the absolute time.

```
user@switch> request system reboot at 06060120
request system reboot at 120
Reboot the system at 120? [yes,no] (no) yes
```

request system reboot director-device

```
user@switch> request system reboot director-device Node1
Issuing this command may interrupt traffic forwarding.
Continue? [yes,no] (no)
```

request system reboot director-group

```
user@switch> request system reboot director-group
Issuing this command may interrupt traffic forwarding.
Continue? [yes,no] (no)
```

request system reboot director-group graceful

```
user@switch> request system reboot director-group graceful
Issuing this command may interrupt traffic forwarding.
Continue? [yes,no] (no)
```

request system storage cleanup

List of Syntax	Syntax on page 416 Syntax (EX Series Switches) on page 416 Syntax (MX Series Router) on page 416 Syntax (QFX Series) on page 416
Syntax	request system storage cleanup <dry-run>
Syntax (EX Series Switches)	request system storage cleanup <all-members> <dry-run> <local> <member <i>member-id</i> >
Syntax (MX Series Router)	request system storage cleanup <all-members> <dry-run> <local> <member <i>member-id</i> >
Syntax (QFX Series)	request system storage cleanup <component (<i>serial number</i> <i>UUID</i> all)> <director-group <i>name</i> > <dry-run> <infrastructure <i>name</i> > <interconnect-device <i>name</i> > <name-tag <i>name-tag</i> > <node-group <i>name</i> > <prune> <qfabric (component <i>name</i>) dry-run name-tag repository> <repository (core log)>
Release Information	Command introduced in Junos OS Release 7.4. dry-run option introduced in Junos OS Release 7.6. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Free storage space on the router or switch by rotating log files and proposing a list of files for deletion. User input is required for file deletion. On a QFabric system, you can delete debug files located on individual devices or on the entire QFabric system.
Options	all-members —(EX4200 switches and MX Series routers only) (Optional) Delete files on the Virtual Chassis master Routing Engine only.



NOTE: To delete files on the other members of the Virtual Chassis configuration, log in to each backup Routing Engine and delete the files using the `request system storage cleanup local` command.

component (*UUID | serial number | all*)—(QFabric systems only) (Optional) Delete files located on individual QFabric system devices or on the entire QFabric system.

director-group *name*—(QFabric systems only) (Optional) Delete files on the Director group.

dry-run—(Optional) List files proposed for deletion (without deleting them).

infrastructure *name*—(QFabric systems only) (Optional) Delete files on the fabric control Routing Engine and fabric manager Routing Engine.

interconnect-device *name*—(QFabric systems only) (Optional) Delete files on the Interconnect device.

local—(EX4200 switches and MX Series routers only) (Optional) Delete files on the local Virtual Chassis member.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Delete files on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

name-tag *name-tag*—(QFabric systems only) (Optional) Delete debug files that match a specific regular expression.

node-group *name*—(QFabric systems only) (Optional) Delete files on the Node group.

prune—(QFabric systems only) (Optional) Delete debug files located in either the core or log debug repositories of a QFabric system device.

qfabric component *name*—(QFabric systems only) (Optional) Delete debug files located in the debug repositories of a QFabric system device.

repository (*core | log*)—(QFabric systems only) (Optional) Specify the repository on the QFabric system device for which you want to delete debug files.

Additional Information If logging is configured and being used, the **dry-run** option rotates the log files. In that case, the output displays the message “Currently rotating log files, please wait.” If no logging is currently under way, the output displays only a list of files to delete.

Required Privilege Level maintenance

List of Sample Output

- [request system storage cleanup dry-run on page 418](#)
- [request system storage cleanup on page 419](#)
- [request system storage cleanup director-group \(QFabric Systems\) on page 419](#)
- [request system storage cleanup infrastructure device-name \(QFabric Systems\) on page 421](#)
- [request system storage cleanup interconnect-device device-name \(QFabric Systems\) on page 422](#)
- [request system storage cleanup node-group group-name \(QFabric Systems\) on page 423](#)

[request system storage cleanup qfabric component device-name \(QFabric Systems\) on page 424](#)
[request system storage cleanup qfabric component device-name repository core \(QFabric Systems\) on page 424](#)
[request system storage cleanup qfabric component all \(QFabric Systems\) on page 424](#)

Output Fields Table 20 on page 418 describes the output fields for the **request system storage cleanup** command. Output fields are listed in the approximate order in which they appear.

Table 20: request system storage cleanup Output Fields

Field Name	Field Description
List of files to delete:	Shows list of files available for deletion.
Size	Size of the core-dump file.
Date	Last core-dump file modification date and time.
Name	Name of the core-dump file.
Directory to delete:	Shows list of directories available for deletion.
Repository scope:	Repository where core-dump files and log files are stored. The core-dump files are located in the core repository, and the log files are located in the log repository. The default Repository scope is shared since both the core and log repositories are shared by all of the QFabric system devices.
Repository head:	Name of the top-level repository location.
Repository name:	Name of the repository: core or log .
Creating list of debug artifacts to be removed under:	Shows location of files available for deletion.
List of debug artifacts to be removed under:	Shows list of files available for deletion.

Sample Output

request system storage cleanup dry-run

```

user@host> request system storage cleanup dry-run
Currently rotating log files, please wait.
This operation can take up to a minute.
    
```

List of files to delete:

Size	Date	Name
11.4K	Mar 8 15:00	/var/log/messages.1.gz
7245B	Feb 5 15:00	/var/log/messages.3.gz
11.8K	Feb 22 13:00	/var/log/messages.2.gz


```

3926B Mar 16 13:57 /var/log/messages.0.gz
3962B Feb 22 12:47 /var/log/sampled.1.gz
4146B Mar 8 12:20 /var/log/sampled.0.gz
4708B Dec 21 11:39 /var/log/sampled.2.gz
7068B Jan 16 18:00 /var/log/messages.4.gz
13.7K Dec 27 22:00 /var/log/messages.5.gz
890B Feb 22 17:22 /var/tmp/sampled.pkts
65.8M Oct 26 09:10 /var/sw/pkg/jinstall-7.4R1.7-export-signed.tgz
63.1M Oct 26 09:13 /var/sw/pkg/jbundle-7.4R1.7.tgz

```

request system storage cleanup

```

user@host> request system storage cleanup
Currently rotating log files, please wait.
This operation can take up to a minute.

```

List of files to delete:

	Size	Date	Name
11.4K	Mar 8 15:00	/var/log/messages.1.gz	
7245B	Feb 5 15:00	/var/log/messages.3.gz	
11.8K	Feb 22 13:00	/var/log/messages.2.gz	
3926B	Mar 16 13:57	/var/log/messages.0.gz	
11.6K	Mar 8 15:00	/var/log/messages.5.gz	
7254B	Feb 5 15:00	/var/log/messages.6.gz	
12.9K	Feb 22 13:00	/var/log/messages.8.gz	
3726B	Mar 16 13:57	/var/log/messages.7.gz	
3962B	Feb 22 12:47	/var/log/sampled.1.gz	
4146B	Mar 8 12:20	/var/log/sampled.0.gz	
4708B	Dec 21 11:39	/var/log/sampled.2.gz	
7068B	Jan 16 18:00	/var/log/messages.4.gz	
13.7K	Dec 27 22:00	/var/log/messages.5.gz	
890B	Feb 22 17:22	/var/tmp/sampled.pkts	
65.8M	Oct 26 09:10	/var/sw/pkg/jinstall-7.4R1.7-export-signed.tgz	
63.1M	Oct 26 09:13	/var/sw/pkg/jbundle-7.4R1.7.tgz	

Delete these files ? [yes,no] (yes)

request system storage cleanup director-group (QFabric Systems)

```

user@switch> request system storage cleanup director-group
List of files to delete:

```

	Size	Date	Name
4.0K	2011-11-07 05:16:29	/tmp/2064.sfcauth	
4.0K	2011-11-07 05:07:34	/tmp/30804.sfcauth	
4.0K	2011-11-07 04:13:41	/tmp/26792.sfcauth	
4.0K	2011-11-07 04:13:39	/tmp/26432.sfcauth	
0	2011-11-07 07:45:40	/tmp/cluster_cleanup.log	
1.3M	2011-11-07 07:39:11	/tmp/cn_monitor.20111107-052401.log	
4.0K	2011-11-07 07:36:29	/tmp/clustat.28019.log	
4.0K	2011-11-07 07:36:29	/tmp/clustat_x.28019.log	
9.6M	2011-11-07 05:30:24	/tmp/sfc.2.log	
4.0K	2011-11-07 05:28:11	/tmp/mgd-init.1320672491.log	
248K	2011-11-07 05:19:24	/tmp/cn_monitor.20111107-045111.log	
4.0K	2011-11-07 05:17:18	/tmp/clustat.3401.log	
4.0K	2011-11-07 05:17:18	/tmp/clustat_x.3401.log	
8.0K	2011-11-07 04:58:25	/tmp/mgd-init.1320670633.log	
0	2011-11-07 04:54:01	/tmp/mysql_db_install_5.1.37.log	
4.0K	2011-11-07 04:52:08	/tmp/cn_send.log	
0	2011-11-07 04:52:00	/tmp/init_eth0.log	

```

4.0K 2011-11-07 04:49:35 /tmp/install_interfaces.sh.log
4.0K 2011-11-07 04:48:15 /tmp/bootstrap.sh.log
160K 2011-11-07 04:47:43 /tmp/bootstrap_cleanup.log
38M 2011-11-07 04:42:42 /tmp/cn_monitor.20111104-110308.log
4.0K 2011-11-07 04:38:47 /tmp/clustat.30913.log
4.0K 2011-11-07 04:38:47 /tmp/clustat_x.30913.log
4.0K 2011-11-07 04:38:03 /tmp/dcf_upgrade.sh.remove.log
4.0K 2011-11-07 04:38:03 /tmp/peer_update.log
4.0K 2011-11-07 04:38:02 /tmp/dcf_upgrade.log
4.0K 2011-11-07 04:38:02 /tmp/perl_mark_upgrade.log
8.0K 2011-11-07 04:13:42 /tmp/install_dcf_rpm.log
4.0K 2011-11-07 04:13:06 /tmp/00_cleanup.sh.1320667986.log
0 2011-11-07 04:13:06 /tmp/ccif_patch_4410_4450.sh.1320667986.log
4.0K 2011-11-07 04:13:06 /tmp/dcf-tools.sh.1320667986.log
0 2011-11-07 04:13:06 /tmp/initial.sh.1320667986.log
0 2011-11-07 04:13:06 /tmp/inventory.sh.1320667986.log
4.0K 2011-11-07 04:13:06 /tmp/qf-db.sh.1320667986.log
4.0K 2011-11-07 04:13:06 /tmp/sfc.sh.1320667986.log
8.0K 2011-11-07 04:13:05 /tmp/jinstall-qfabric.log
8.0K 2011-11-04 11:10:24 /tmp/mgd-init.1320430192.log
4.0K 2011-11-04 11:07:03 /tmp/mysql_dcf_db_install.log
8.0K 2011-11-04 10:55:07 /tmp/ccif_patch_4410_4450.sh.1320429307.log
8.0K 2011-11-04 10:55:07 /tmp/initial.sh.1320429307.log
4.0K 2011-11-04 10:55:07 /tmp/inventory.sh.1320429307.log
8.0K 2011-11-04 10:55:07 /tmp/sfc.sh.1320429307.log
4.0K 2011-11-04 10:54:09 /tmp/ks-script-Ax0tz5.log
4.0K 2011-11-07 04:13:06 /tmp//sfc.sh.1320667986.log
8.0K 2011-11-04 10:55:07 /tmp//sfc.sh.1320429307.log

```

Directory to delete:

```

45M 2011-11-08 10:57:43 /tmp/sfc-captures

```

List of files to delete:

	Size	Date	Name
4.0K	2011-11-08	05:47:47	/tmp/5713.sfcauth
4.0K	2011-11-08	05:14:32	/tmp/14494.sfcauth
4.0K	2011-11-08	05:11:47	/tmp/9978.sfcauth
4.0K	2011-11-08	05:09:37	/tmp/6128.sfcauth
4.0K	2011-11-08	05:04:28	/tmp/29703.sfcauth
4.0K	2011-11-07	11:59:10	/tmp/7811.sfcauth
4.0K	2011-11-07	11:36:08	/tmp/32415.sfcauth
4.0K	2011-11-07	11:30:30	/tmp/22406.sfcauth
4.0K	2011-11-07	11:24:37	/tmp/12131.sfcauth
4.0K	2011-11-07	10:48:42	/tmp/12687.sfcauth
4.0K	2011-11-07	09:27:20	/tmp/31082.sfcauth
4.0K	2011-11-07	07:33:58	/tmp/14633.sfcauth
4.0K	2011-11-07	05:08:25	/tmp/15447.sfcauth
4.0K	2011-11-07	04:12:29	/tmp/26874.sfcauth
4.0K	2011-11-07	04:12:27	/tmp/26713.sfcauth
4.0K	2011-11-07	03:49:17	/tmp/17691.sfcauth
4.0K	2011-11-05	01:32:23	/tmp/5716.sfcauth
4.0K	2011-11-07	08:00:17	/tmp/sfcsnmpd.log
4.0K	2011-11-07	07:57:50	/tmp/cluster_cleanup.log
824K	2011-11-07	07:38:37	/tmp/cn_monitor.20111107-053643.log
4.0K	2011-11-07	07:36:30	/tmp/clustat.18399.log
4.0K	2011-11-07	07:36:30	/tmp/clustat_x.18399.log
4.0K	2011-11-07	07:35:47	/tmp/command_lock.log
4.0K	2011-11-07	05:39:54	/tmp/mgd-init.1320673194.log
92K	2011-11-07	05:19:25	/tmp/cn_monitor.20111107-050412.log
4.0K	2011-11-07	05:17:20	/tmp/clustat.30115.log

```

4.0K  2011-11-07 05:17:20 /tmp/clustat_x.30115.log
8.0K  2011-11-07 05:08:07 /tmp/mgd-init.1320671241.log
4.0K  2011-11-07 05:04:57 /tmp/cn_send.log
0     2011-11-07 05:04:52 /tmp/init_eth0.log
4.0K  2011-11-07 05:02:38 /tmp/install_interfaces.sh.log
4.0K  2011-11-07 05:01:19 /tmp/bootstrap.sh.log
160K  2011-11-07 05:00:47 /tmp/bootstrap_cleanup.log
28M   2011-11-07 04:42:27 /tmp/cn_monitor.20111104-112954.log
4.0K  2011-11-07 04:38:49 /tmp/clustat.6780.log
4.0K  2011-11-07 04:38:49 /tmp/clustat_x.6780.log
4.0K  2011-11-07 04:38:05 /tmp/issue_event.log
4.0K  2011-11-07 04:38:05 /tmp/peer_upgrade_reboot.log
12K   2011-11-07 04:38:05 /tmp/primary_update.log
4.0K  2011-11-07 04:38:04 /tmp/dcf_upgrade.sh.remove.log
4.0K  2011-11-07 04:38:04 /tmp/peer_rexec_upgrade.log
4.0K  2011-11-07 04:13:42 /tmp/peer_install_dcf_rpm.log
4.0K  2011-11-07 04:11:57 /tmp/dcf-tools.sh.1320667917.log
0     2011-11-07 04:11:57 /tmp/initial.sh.1320667917.log
0     2011-11-07 04:11:57 /tmp/inventory.sh.1320667917.log
4.0K  2011-11-07 04:11:57 /tmp/qf-db.sh.1320667917.log
4.0K  2011-11-07 04:11:57 /tmp/sfc.sh.1320667917.log
4.0K  2011-11-07 04:11:56 /tmp/00_cleanup.sh.1320667916.log
0     2011-11-07 04:11:56 /tmp/ccif_patch_4410_4450.sh.1320667916.log
8.0K  2011-11-07 04:11:56 /tmp/jinstall-qfabric.log
4.0K  2011-11-07 04:11:33 /tmp/dcf_upgrade.log
8.0K  2011-11-04 11:53:12 /tmp/mgd-init.1320432782.log
8.0K  2011-11-04 11:06:17 /tmp/ccif_patch_4410_4450.sh.1320429977.log
8.0K  2011-11-04 11:06:17 /tmp/initial.sh.1320429977.log
4.0K  2011-11-04 11:06:17 /tmp/inventory.sh.1320429977.log
8.0K  2011-11-04 11:06:17 /tmp/sfc.sh.1320429977.log
4.0K  2011-11-04 11:05:19 /tmp/ks-script-tnWeb.log
4.0K  2011-11-07 04:11:57 /tmp//sfc.sh.1320667917.log
8.0K  2011-11-04 11:06:17 /tmp//sfc.sh.1320429977.log

```

Directory to delete:

```
49M   2011-11-08 10:45:20 /tmp/sfc-captures
```

request system storage cleanup infrastructure device-name (QFabric Systems)

```

user@switch> request system storage cleanup infrastructure FC-0
re0:
-----

```

List of files to delete:

	Size	Date	Name
	139B	Nov 8 19:03	/var/log/default-log-messages.0.gz
	5602B	Nov 8 19:03	/var/log/messages.0.gz
	28.4K	Nov 8 10:15	/var/log/messages.1.gz
	35.2K	Nov 7 13:45	/var/log/messages.2.gz
	207B	Nov 7 16:02	/var/log/wtmp.0.gz
	27B	Nov 7 12:14	/var/log/wtmp.1.gz
	184.4M	Nov 7 12:16	/var/sw/pkg/jinstall-dc-re-11.3I20111104_1216_dc-builder-domestic-signed.tgz
	124.0K	Nov 7 15:59	/var/tmp/gres-tp/env.dat
	0B	Nov 7 12:57	/var/tmp/gres-tp/lock
	155B	Nov 7 16:02	/var/tmp/krt_gencfg_filter.txt
	0B	Nov 7 12:35	/var/tmp/last_ccif_update
	1217B	Nov 7 12:15	/var/tmp/loader.conf.preinstall
	184.4M	Nov 6 07:11	/var/tmp/mchassis-install.tgz
	10.8M	Nov 7 12:16	

```

/var/tmp/preinstall/bootstrap-install-11.3I20111104_1216_dc-builder.tar
57.4K Nov 7 12:16 /var/tmp/preinstall/configs-11.3I20111104_1216_dc-builder.tgz

259B Nov 7 12:16 /var/tmp/preinstall/install.conf
734.3K Nov 4 13:46
/var/tmp/preinstall/jboot-dc-re-11.3I20111104_1216_dc-builder.tgz
177.8M Nov 7 12:16
/var/tmp/preinstall/jbundle-dc-re-11.3I20111104_1216_dc-builder-domestic.tgz
124B Nov 7 12:15 /var/tmp/preinstall/metatags
1217B Nov 7 12:16 /var/tmp/preinstall_boot_loader.conf
0B Nov 7 16:02 /var/tmp/rtssdb/if-rtssdb

```

request system storage cleanup interconnect-device device-name (QFabric Systems)

```

user@switch> request system storage cleanup interconnect IC-WS001
re1:
-----

```

List of files to delete:

	Size	Date	Name
	11B	Nov 7 15:55	/var/jail/tmp/alarmd.ts
	128B	Nov 8 19:06	/var/log/default-log-messages.0.gz
	9965B	Nov 8 19:06	/var/log/messages.0.gz
	15.8K	Nov 8 12:30	/var/log/messages.1.gz
	15.8K	Nov 8 11:00	/var/log/messages.2.gz
	15.7K	Nov 8 07:30	/var/log/messages.3.gz
	15.8K	Nov 8 04:00	/var/log/messages.4.gz
	15.7K	Nov 8 00:30	/var/log/messages.5.gz
	18.7K	Nov 7 21:00	/var/log/messages.6.gz
	17.6K	Nov 7 19:00	/var/log/messages.7.gz
	58.3K	Nov 7 16:00	/var/log/messages.8.gz
	20.3K	Nov 7 15:15	/var/log/messages.9.gz
	90B	Nov 7 15:41	/var/log/wtmp.0.gz
	57B	Nov 7 12:41	/var/log/wtmp.1.gz
	124.0K	Nov 7 15:42	/var/tmp/gres-tp/env.dat
	0B	Nov 7 12:40	/var/tmp/gres-tp/lock
	0B	Nov 7 12:41	/var/tmp/if-rtssdb/env.lock
	12.0K	Nov 7 15:41	/var/tmp/if-rtssdb/env.mem
	132.0K	Nov 7 15:55	/var/tmp/if-rtssdb/shm_usr1.mem
	2688.0K	Nov 7 15:41	/var/tmp/if-rtssdb/shm_usr2.mem
	2048.0K	Nov 7 15:41	/var/tmp/if-rtssdb/trace.mem
	730B	Nov 7 19:57	/var/tmp/juniper.conf+.gz
	155B	Nov 7 15:53	/var/tmp/krt_gencfg_filter.txt
	0B	Nov 7 15:41	/var/tmp/rtssdb/if-rtssdb

```

re0:
-----

```

List of files to delete:

	Size	Date	Name
	11B	Nov 7 15:55	/var/jail/tmp/alarmd.ts
	121B	Nov 8 19:06	/var/log/default-log-messages.0.gz
	16.7K	Nov 8 19:06	/var/log/messages.0.gz
	22.2K	Nov 8 17:45	/var/log/messages.1.gz
	18.4K	Nov 8 17:00	/var/log/messages.2.gz
	21.6K	Nov 8 16:00	/var/log/messages.3.gz
	17.9K	Nov 8 14:30	/var/log/messages.4.gz
	19.4K	Nov 8 13:30	/var/log/messages.5.gz
	18.2K	Nov 8 12:30	/var/log/messages.6.gz

```

20.4K Nov 8 11:30 /var/log/messages.7.gz
21.4K Nov 8 10:15 /var/log/messages.8.gz
21.0K Nov 8 09:00 /var/log/messages.9.gz
19.9K Nov 8 08:13 /var/log/snmp-traps.0.gz
203B Nov 8 15:36 /var/log/wtmp.0.gz
57B Nov 7 12:41 /var/log/wtmp.1.gz
124.0K Nov 7 15:42 /var/tmp/gres-tp/env.dat
0B Nov 7 12:40 /var/tmp/gres-tp/lock
0B Nov 7 12:41 /var/tmp/if-rtssdb/env.lck
12.0K Nov 7 15:41 /var/tmp/if-rtssdb/env.mem
132.0K Nov 7 15:55 /var/tmp/if-rtssdb/shm_usr1.mem
2688.0K Nov 7 15:41 /var/tmp/if-rtssdb/shm_usr2.mem
2048.0K Nov 7 15:41 /var/tmp/if-rtssdb/trace.mem
727B Nov 7 15:54 /var/tmp/juniper.conf+.gz
155B Nov 7 15:55 /var/tmp/krt_gencfg_filter.txt
0B Nov 7 15:41 /var/tmp/rtssdb/if-rtssdb

```

request system storage cleanup node-group group-name (QFabric Systems)

```

user@switch> request system storage cleanup node-group NW-NG-0
BBAK0372:

```

List of files to delete:

	Size	Date	Name
	126B	Nov 8 19:07	/var/log/default-log-messages.0.gz
	179B	Nov 7 13:32	/var/log/install.0.gz
	22.9K	Nov 8 19:07	/var/log/messages.0.gz
	26.5K	Nov 8 17:30	/var/log/messages.1.gz
	20.5K	Nov 8 13:15	/var/log/messages.2.gz
	33.2K	Nov 7 17:45	/var/log/messages.3.gz
	35.5K	Nov 7 15:45	/var/log/messages.4.gz
	339B	Nov 8 17:10	/var/log/wtmp.0.gz
	58B	Nov 7 12:40	/var/log/wtmp.1.gz
	124.0K	Nov 8 17:08	/var/tmp/gres-tp/env.dat
	0B	Nov 7 12:39	/var/tmp/gres-tp/lock
	0B	Nov 7 12:59	/var/tmp/if-rtssdb/env.lck
	12.0K	Nov 8 17:09	/var/tmp/if-rtssdb/env.mem
	2688.0K	Nov 8 17:09	/var/tmp/if-rtssdb/shm_usr1.mem
	132.0K	Nov 8 17:09	/var/tmp/if-rtssdb/shm_usr2.mem
	2048.0K	Nov 8 17:09	/var/tmp/if-rtssdb/trace.mem
	1082B	Nov 8 17:09	/var/tmp/juniper.conf+.gz
	155B	Nov 7 17:39	/var/tmp/krt_gencfg_filter.txt
	0B	Nov 8 17:09	/var/tmp/rtssdb/if-rtssdb

EE3093:

List of files to delete:

	Size	Date	Name
	11B	Nov 8 17:33	/var/jail/tmp/alarmd.ts
	119B	Nov 8 19:08	/var/log/default-log-messages.0.gz
	180B	Nov 7 17:41	/var/log/install.0.gz
	178B	Nov 7 13:32	/var/log/install.1.gz
	2739B	Nov 8 19:08	/var/log/messages.0.gz
	29.8K	Nov 8 18:45	/var/log/messages.1.gz
	31.8K	Nov 8 17:15	/var/log/messages.2.gz
	20.6K	Nov 8 16:00	/var/log/messages.3.gz
	15.4K	Nov 8 10:15	/var/log/messages.4.gz

```

15.4K Nov  8 02:15 /var/log/messages.5.gz
25.5K Nov  7 20:45 /var/log/messages.6.gz
48.0K Nov  7 17:45 /var/log/messages.7.gz
32.8K Nov  7 13:45 /var/log/messages.8.gz
684B Nov  8 17:02 /var/log/wtmp.0.gz
58B Nov  7 12:40 /var/log/wtmp.1.gz
124.0K Nov  7 17:34 /var/tmp/gres-tp/env.dat
  0B Nov  7 12:40 /var/tmp/gres-tp/lock
  0B Nov  7 12:59 /var/tmp/if-rtbdb/env.lck
12.0K Nov  7 17:39 /var/tmp/if-rtbdb/env.mem
2688.0K Nov  7 17:39 /var/tmp/if-rtbdb/shm_usr1.mem
132.0K Nov  7 17:40 /var/tmp/if-rtbdb/shm_usr2.mem
2048.0K Nov  7 17:39 /var/tmp/if-rtbdb/trace.mem
155B Nov  7 17:40 /var/tmp/krt_gencfg_filter.txt
  0B Nov  7 17:39 /var/tmp/rtbdb/if-rtbdb

```

request system storage cleanup qfabric component device-name (QFabric Systems)

```

user@switch> request system storage cleanup qfabric component A0001/YA0197
Repository type: regular
Repository head: /pbstorage
Creating list of debug artifacts to be removed under:
/pbstorage/rdumps/A0001/YA0197
Removing debug artifacts ... (press control C to abort)
Removing /pbstorage/rdumps/A0001/YA0197/cosd.core.0.0.05162011123308.gz ... done
Removing /pbstorage/rdumps/A0001/YA0197/cosd.core.1.0.05162011123614.gz ... done
Removing /pbstorage/rdumps/A0001/YA0197/cosd.core.2.0.05162011123920.gz ... done
Removing /pbstorage/rdumps/A0001/YA0197/livekcore.05132011163930.gz ... done
Removing /pbstorage/rdumps/A0001/YA0197/tnetd.core.0.1057.05162011124500.gz ...
done
Removing /pbstorage/rdumps/A0001/YA0197/vmcore.05132011120528.gz ... done
Removing /pbstorage/rdumps/A0001/YA0197/vmcore.kz ... done
Creating list of debug artifacts to be removed under: /pbstorage/rlogs/A0001/YA0197
Removing debug artifacts ... (press control C to abort)
Removing /pbstorage/rlogs/A0001/YA0197/kdumpinfo.05132011120528 ... done
Removing /pbstorage/rlogs/A0001/YA0197/kernel.tarball.0.1039.051220111234415.tgz
... done
Removing /pbstorage/rlogs/A0001/YA0197/kernel.tarball.1.1039.05132011175544.tgz
... done
Removing /pbstorage/rlogs/A0001/YA0197/tnetd.tarball.0.1057.05162011175453.tgz
... done

```

request system storage cleanup qfabric component device-name repository core (QFabric Systems)

```

user@switch> request system storage cleanup qfabric component EE3093 repository core
Repository scope: shared
Repository head: /pbdata/export
Repository name: core
Creating list of debug artifacts to be removed under: /pbdata/export/rdumps/EE3093
NOTE: core repository under /pbdata/export/rdumps/EE3093 empty

```

request system storage cleanup qfabric component all (QFabric Systems)

```

user@switch> request system storage cleanup qfabric component all
Repository scope: shared
Repository head: /pbdata/export
Creating list of debug artifacts to be removed under: /pbdata/export/rdumps
NOTE: core repository under /pbdata/export/rdumps/all empty
Creating list of debug artifacts to be removed under: /pbdata/export/rlogs
List of debug artifacts to clean up ... (press control C to abort)
/pbdata/export/rlogs/73747cd8-0710-11e1-b6a4-00e081c5297e/install-11072011125819.log
/pbdata/export/rlogs/77116f18-0710-11e1-a2a0-00e081c5297e/install-11072011125819.log

```

```
/pbdata/export/rlogs/BBAK0372/install-11072011121538.log  
/pbdata/export/rlogs/BBAK0394/install-11072011121532.log  
/pbdata/export/rlogs/EE3093/install-11072011121536.log  
/pbdata/export/rlogs/WS001/YN5999/install-11072011121644.log  
/pbdata/export/rlogs/WS001/YW3803/install-11072011122429.log  
/pbdata/export/rlogs/cd78871a-0710-11e1-878e-00e081c5297e/install-11072011125932.log  
/pbdata/export/rlogs/d0afda1e-0710-11e1-a1d0-00e081c5297e/install-11072011125930.log  
/pbdata/export/rlogs/d0afda1e-0710-11e1-a1d0-00e081c5297e/install-11072011133211.log  
/pbdata/export/rlogs/d0afda1e-0710-11e1-a1d0-00e081c5297e/install-11072011155302.log  
/pbdata/export/rlogs/d31ab7a6-0710-11e1-ad1b-00e081c5297e/install-11072011125931.log  
/pbdata/export/rlogs/d4d0f254-0710-11e1-90c3-00e081c5297e/install-11072011125932.log
```

request system zeroize

Syntax request system zeroize
 <media>
 <local>

Release Information Command introduced before Junos OS Release 9.0.
 Command introduced in Junos OS Release 11.2 for EX Series switches.
 Option **media** added in Junos OS Release 11.4 for EX Series switches.
 Command introduced in Junos OS Release 12.2 for MX Series routers.
 Command introduced in Junos OS Release 12.3 for the QFX Series.
 Option **local** added in Junos OS Release 14.1.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description



NOTE: The **media** option is not available on the QFX Series.

Remove all configuration information on the Routing Engines and reset all key values. If the device has dual Routing Engines, the command is broadcast to all Routing Engines on the device. The command removes all data files, including customized configuration and log files, by unlinking the files from their directories. The command removes all user-created files from the system including all plain-text passwords, secrets, and private keys for SSH, local encryption, local authentication, IPsec, RADIUS, TACACS+, and SNMP.

This command reboots the device and sets it to the factory default configuration. After the reboot, you cannot access the device through the management Ethernet interface. Log in through the console as **root** and start the Junos OS CLI by typing **cli** at the prompt.



NOTE: If you configure the **commit synchronize** statement at the **[edit system]** hierarchy level and issue a **commit** in the master Routing Engine, the master configuration is automatically synchronized with the backup. However, if the backup Routing Engine is down when you issue the **commit**, the Junos OS displays a warning and commits the candidate configuration in the master Routing Engine. When the backup Routing Engine comes up, its configuration will automatically be synchronized with the master. A newly inserted backup Routing Engine automatically synchronizes its configuration with the master Routing Engine configuration.

To completely erase user-created data so that it is unrecoverable, use the **media** option.

Options **media**—(Optional) In addition to removing all configuration and log files, causes memory and the media to be scrubbed, removing all traces of any user-created files. Every storage device attached to the system is scrubbed, including disks, flash drives, removable USBs, and so on. The duration of the scrubbing process is dependent on the size of the media being erased. As a result, the **request system zeroize media**

operation can take considerably more time than the **request system zeroize** operation. However, the critical security parameters are all removed at the beginning of the process.

local—(Optional) Remove all the configuration information and restore all the key values on the active Routing Engine.

Required Privilege Level

maintenance

Related Documentation

- *request system snapshot*
- [request system snapshot on page 1340](#)
- *Reverting to the Default Factory Configuration for the EX Series Switch*
- *Reverting to the Rescue Configuration for the EX Series Switch*
- *Reverting to the Default Factory Configuration*
- *Reverting to the Rescue Configuration*
- [Reverting to the Default Factory Configuration by Using the request system zeroize Command on page 29](#)

List of Sample Output

[request system zeroize on page 427](#)
[request system zeroize media on page 428](#)

Sample Output

request system zeroize

```
user@host> request system zeroize
warning: System will be rebooted and may not boot without configuration
Erase all data, including configuration and log files? [yes,no] (no) yes

0 1 1 0 0 0 done

syncing disks... All buffers synced.
Uptime: 5d19h20m26s
recorded reboot as normal shutdown
Rebooting...

U-Boot 1.1.6 (Mar 11 2011 - 04:39:06)

Board: EX4200-24T 2.11
EPLD: Version 6.0 (0x85)
DRAM: Initializing (1024 MB)
FLASH: 8 MB

Firmware Version: --- 01.00.00 ---
USB: scanning bus for devices... 2 USB Device(s) found
      scanning bus for storage devices... 1 Storage Device(s) found

ELF file is 32 bit
Consoles: U-Boot console

FreeBSD/PowerPC U-Boot bootstrap loader, Revision 2.4
(user@host, Fri Mar 11 03:03:36 UTC 2011)
```

```

Memory: 1024MB
bootsequencing is enabled
bootsuccess is set
new boot device = disk0s1:
Loading /boot/defaults/loader.conf
/kernel data=0x915c84+0xa1260 syms=[0x4+0x7cbd0+0x4+0xb1c19]

Hit [Enter] to boot immediately, or space bar for command prompt.
Booting [/kernel]...
Kernel entry at 0x800000e0 ...
GDB: no debug ports present
KDB: debugger backends: ddb
KDB: current backend: ddb
Copyright (c) 1996-2011, Juniper Networks, Inc.
All rights reserved.
Copyright (c) 1992-2006 The FreeBSD Project.
Copyright (c) 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994
    The Regents of the University of California. All rights reserved.
JUNOS 11.1R1.8 #0: 2011-03-09 20:14:25 UTC
    user@host:/volume/build/junos/11.1/release/11.1R1.8/obj-powerpc/bsd/kernels/
    JUNIPER-EX/kernel
Timecounter "decrementer" frequency 50000000 Hz quality 0
cpu0: Freescale e500v2 core revision 2.2
cpu0: HID0 80004080
...

```

request system zeroize media

```

user@host> request system zeroize media
warning: System will be rebooted and may not boot without configuration
Erase all data, including configuration and log files? [yes,no] (no) yes

warning: ipsec-key-management subsystem not running - not needed by configuration.
warning: zeroizing fpc0

{master:0}
root> Waiting (max 60 seconds) for system process `vnlr' to stop...done
. . .
Syncing disks, vnodes remaining...2 4 2 4 3 2 1 1 0 0 0 done

syncing disks... All buffers synced.
Uptime: 14m50s
recorded reboot as normal shutdown
Rebooting...

U-Boot 1.1.6 (Apr 21 2011 - 13:58:42)

Board: EX4200-48PX 1.1
EPLD: Version 8.0 (0x82)
DRAM: Initializing (512 MB)
FLASH: 8 MB
NAND: No NAND device found!!!
0 MiB

Firmware Version: --- 01.00.00 ---
USB: scanning bus for devices... 2 USB Device(s) found
      scanning bus for storage devices... 1 Storage Device(s) found

ELF file is 32 bit
Consoles: U-Boot console

```

```

FreeBSD/PowerPC U-Boot bootstrap loader, Revision 2.2
(device1.example.com, Fri Feb 26 17:48:51 PST 2010)
Memory: 512MB
Loading /boot/defaults/loader.conf
/kernel data=0x9abfdc+0xb06e4 syms=[0x4+0x83b30+0x4+0xbd7c6]

Hit [Enter] to boot immediately, or space bar for command prompt.
Booting [/kernel] in 1 second... Booting [/kernel]...
Kernel entry at 0x800000e0 ...
GDB: no debug ports present
KDB: debugger backends: ddb
KDB: current backend: ddb
Copyright (c) 1996-2011, Juniper Networks, Inc.
All rights reserved.
Copyright (c) 1992-2006 The FreeBSD Project.
Copyright (c) 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994
The Regents of the University of California. All rights reserved.
JUNOS 11.4R1.2 #0: 2011-10-27 18:05:39 UTC
user@host:/volume/build/junos/11.4/release/11.4R1.2/obj-powerpc/
bsd/kernels/JUNIPER-EX/kernel
can't re-use a leaf (all_slot_serialid)!
Timecounter "decrementer" frequency 50000000 Hz quality 0
cpu0: Freescale e500v2 core revision 2.2
cpu0: HID0 80004080<EMCP,TBEN,EN_MAS7_UPDATE>
real memory = 511705088 (488 MB)
avail memory = 500260864 (477 MB)
ETHERNET SOCKET BRIDGE initialising
Initializing EXSERIES platform properties ...
...
Automatic reboot in progress...
Media check on da0 on ex platforms
** /dev/da0s2a
FILE SYSTEM CLEAN; SKIPPING CHECKS
clean, 20055 free (31 frags, 2503 blocks, 0.0% fragmentation)
zeroizing /dev/da0s1a ...
...
zeroizing /dev/da0s3d ...
...
zeroizing /dev/da0s3e ...
...
zeroizing /dev/da0s4d ...
...
zeroizing /dev/da0s4e ...
...

syncing disks... All buffers synced.
Uptime: 3m40s
Rebooting...

U-Boot 1.1.6 (Apr 21 2011 - 13:58:42)

Board: EX4200-48PX 1.1
EPLD: Version 8.0 (0x82)
DRAM: Initializing (512 MB)
FLASH: 8 MB
NAND: No NAND device found!!!
0 MiB

Firmware Version: --- 01.00.00 ---
USB: scanning bus for devices... 2 USB Device(s) found

```

```

        scanning bus for storage devices... 1 Storage Device(s) found

ELF file is 32 bit
Consoles: U-Boot console

FreeBSD/PowerPC U-Boot bootstrap loader, Revision 2.2
(vtseng@svl-junos-pool27.host, Fri Feb 26 17:48:51 PST 2010)
Memory: 512MB
Loading /boot/defaults/loader.conf
/kernel data=0x9abfdc+0xb06e4 syms=[0x4+0x83b30+0x4+0xbd7c6]

Hit [Enter] to boot immediately, or space bar for command prompt.
Booting [/kernel] in 1 second... Booting [/kernel]...
Kernel entry at 0x800000e0 ...
GDB: no debug ports present
KDB: debugger backends: ddb
KDB: current backend: ddb
Copyright (c) 1996-2011, Juniper Networks, Inc.
All rights reserved.
Copyright (c) 1992-2006 The FreeBSD Project.
Copyright (c) 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994
The Regents of the University of California. All rights reserved.
JUNOS 11.4R1.2 #0: 2011-10-27 18:05:39 UTC
  user@host:/volume/build/junos/11.4/release/11.4R1.2/obj-powerpc/
bsd/kernels/JUNIPER-EX/kernel
can't re-use a leaf (all_slot_serialid)!
Timecounter "decrementer" frequency 50000000 Hz quality 0
cpu0: Freescale e500v2 core revision 2.2
cpu0: HID0 80004080 <EMCP,TBEN,EN_MAS7_UPDATE>
real memory = 511705088 (488 MB)
avail memory = 500260864 (477 MB)
ETHERNET SOCKET BRIDGE initialising
Initializing EXSERIES platform properties ...
. . .
Automatic reboot in progress...
Media check on da0 on ex platforms
** /dev/da0s1a
FILE SYSTEM CLEAN; SKIPPING CHECKS
clean, 20064 free (48 frags, 2502 blocks, 0.1% fragmentation)
zeroizing /dev/da0s2a ...
. . .
Creating initial configuration...mgd: error: Cannot open configuration file:
/config/juniper.conf
mgd: warning: activating factory configuration
mgd: commit complete
mgd: -----
mgd: Please login as 'root'. No password is required.
mgd: To start Initial Setup, type 'ezsetup' at the JUNOS prompt.
mgd: To start JUNOS CLI, type 'cli' at the JUNOS prompt.
mgd: -----
Setting initial options: debugger_on_panic=NO debugger_on_break=NO.
Starting optional daemons: .
Doing initial network setup:
. . .

Amnesiac (ttyu0)

```

restart

List of Syntax [Syntax on page 431](#)

[Syntax \(ACX Series Routers\) on page 431](#)

[Syntax \(EX Series Switches\) on page 431](#)

[Syntax \(Routing Matrix\) on page 432](#)

[Syntax \(J Series Routing Platform\) on page 432](#)

[Syntax \(TX Matrix Routers\) on page 432](#)

[Syntax \(TX Matrix Plus Routers\) on page 432](#)

[Syntax \(MX Series Routers\) on page 432](#)

[Syntax \(J Series Routers\) on page 433](#)

[Syntax \(QFX Series\) on page 433](#)

Syntax restart

```
<adaptive-services | ancpd-service | application-identification | audit-process |
auto-configuration | captive-portal-content-delivery | ce-l2tp-service | chassis-control |
class-of-service | clksyncd-service | database-replication | datapath-trace-service
| dhcp-service | diameter-service | disk-monitoring | dynamic-flow-capture |
ecc-error-logging | ethernet-connectivity-fault-management
| ethernet-link-fault-management | event-processing | firewall
| general-authentication-service | gracefully | iccp-service | idp-policy | immediately
| interface-control | ipsec-key-management | kernel-replication | l2-learning | l2cpd-service
| l2tp-service | l2tp-universal-edge | lacp | license-service | link-management
| local-policy-decision-function | mac-validation | mib-process | mobile-ip | mountd-service
| mpls-traceroute | mspd | multicast-snooping | named-service | nfsd-service |
packet-triggered-subscribers | peer-selection-service | pgcp-service | pgm |
pic-services-logging | pki-service | ppp | ppp-service | pppoe |
protected-system-domain-service | redundancy-interface-process | remote-operations |
root-system-domain-service | routing <logical-system logical-system-name> | sampling
| sbc-configuration-process | sdk-service | service-deployment | services | services pgcp
gateway gateway-name | snmp | soft | static-subscribers | statistics-service |
subscriber-management | subscriber-management-helper | tunnel-oamd | usb-control |
vrrp | web-management>
<gracefully | immediately | soft>
```

Syntax (ACX Series Routers)

restart

```
<adaptive-services | audit-process | auto-configuration | autoinstallation | chassis-control |
class-of-service | clksyncd-service | database-replication | dhcp-service | diameter-service
| disk-monitoring | dynamic-flow-capture | ethernet-connectivity-fault-management
| ethernet-link-fault-management | event-processing | firewall
| general-authentication-service | gracefully | immediately | interface-control |
ipsec-key-management | l2-learning | lacp | link-management | mib-process | mobile-ip |
mountd-service | mpls-traceroute | mspd | named-service | nfsd-service | pgm | pki-service
| ppp | pppoe | redundancy-interface-process | remote-operations | routing | sampling |
sdk-service | secure-neighbor-discovery | service-deployment | services | snmp | soft
| statistics-service | subscriber-management | subscriber-management-helper | tunnel-oamd
| vrrp>
```

Syntax (EX Series Switches)

restart

```
<autoinstallation | chassis-control | class-of-service | database-replication | dhcp |
dhcp-service | diameter-service | dot1x-protocol | ethernet-link-fault-management |
ethernet-switching | event-processing | firewall | general-authentication-service |
interface-control | kernel-replication | l2-learning | lacp | license-service | link-management
```

	lldpd-service mib-process mountd-service multicast-snooping pgm redundancy-interface-process remote-operations routing secure-neighbor-discovery service-deployment sflow-service snmp vrrp web-management>
Syntax (Routing Matrix)	restart <adaptive-services audit-process chassis-control class-of-service disk-monitoring dynamic-flow-capture ecc-error-logging event-processing firewall interface-control ipsec-key-management kernel-replication l2-learning l2tp-service lacp link-management mib-process pgm pic-services-logging ppp pppoe redundancy-interface-process remote-operations routing <logical-system <i>logical-system-name</i> > sampling service-deployment snmp> <all all-lcc lcc <i>number</i> > <gracefully immediately soft>
Syntax (J Series Routing Platform)	restart <adaptive-services audit-process chassis-control class-of-service dhcp dialer-services dlsr event-processing firewall interface-control ipsec-key-management isdn-signaling l2-learning l2tp-service mib-process network-access-service pgm ppp pppoe remote-operations routing <logical-system <i>logical-system-name</i> > sampling service-deployment snmp usb-control web-management> <gracefully immediately soft>
Syntax (TX Matrix Routers)	restart <adaptive-services audit-process chassis-control class-of-service dhcp-service diameter-service disk-monitoring dynamic-flow-capture ecc-error-logging event-processing firewall interface-control ipsec-key-management kernel-replication l2-learning l2tp-service lacp link-management mib-process pgm pic-services-logging ppp pppoe redundancy-interface-process remote-operations routing <logical-system <i>logical-system-name</i> > sampling service-deployment snmp statistics-service> <all-chassis all-lcc lcc <i>number</i> scc> <gracefully immediately soft>
Syntax (TX Matrix Plus Routers)	restart <adaptive-services audit-process chassis-control class-of-service dhcp-service diameter-service disk-monitoring dynamic-flow-capture ecc-error-logging event-processing firewall interface-control ipsec-key-management kernel-replication l2-learning l2tp-service lacp link-management mib-process pgm pic-services-logging ppp pppoe redundancy-interface-process remote-operations routing <logical-system <i>logical-system-name</i> > sampling service-deployment snmp statistics-service> <all-chassis all-lcc all-sfc lcc <i>number</i> sfc <i>number</i> > <gracefully immediately soft>
Syntax (MX Series Routers)	restart <adaptive-services ancpd-service application-identification audit-process auto-configuration captive-portal-content-delivery ce-l2tp-service chassis-control class-of-service clksyncd-service database-replication datapath-trace-service dhcp-service diameter-service disk-monitoring dynamic-flow-capture ecc-error-logging ethernet-connectivity-fault-management ethernet-link-fault-management event-processing firewall general-authentication-service gracefully iccp-service idp-policy immediately interface-control ipsec-key-management kernel-replication l2-learning l2cpd-service l2tp-service l2tp-universal-edge lacp license-service link-management local-policy-decision-function mac-validation mib-process mobile-ip mountd-service mpls-traceroute mspd multicast-snooping named-service nfsd-service

```

packet-triggered-subscribers |peer-selection-service | pgcp-service | pgm |
pic-services-logging | pki-service | ppp | ppp-service | pppoe |
protected-system-domain-service | redundancy-interface-process | remote-operations
|root-system-domain-service | routing |routing <logical-system logical-system-name> |
sampling | sbc-configuration-process | sdk-service |service-deployment |services | services
pgcp gateway gateway-name |snmp |soft |static-subscribers |statistics-service|
subscriber-management | subscriber-management-helper | tunnel-oamd | usb-control|
vrrp |web-management>
<all-members>
<gracefully | immediately | soft>
<local>
<member member-id>

```

**Syntax (J Series
Routers)**

```

restart
<adaptive-services | audit-process | chassis-control | class-of-service | dhcp | dhcp-service
| dialer-services | diameter-service | dlsw | event-processing | firewall | interface-control |
ipsec-key-management | isdn-signaling | l2ald | l2-learning | l2tp-service | mib-process |
network-access-service | pgm | ppp | pppoe | remote-operations | routing <logical-system
logical-system-name> | sampling | service-deployment | snmp | usb-control |
web-management>
<gracefully | immediately | soft>

```

Syntax (QFX Series)

```

restart
<adaptive-services | audit-process | chassis-control | class-of-service | dialer-services |
diameter-service | dlsw | ethernet-connectivity | event-processing | fibre-channel | firewall
| general-authentication-service | igmp-host-services | interface-control |
ipsec-key-management | isdn-signaling | l2ald | l2-learning | l2tp-service | mib-process |
named-service | network-access-service | nstrace-process | pgm | ppp | pppoe |
redundancy-interface-process | remote-operations |logical-system-name> | routing |
sampling |secure-neighbor-discovery | service-deployment | snmp | usb-control |
web-management>
<gracefully | immediately | soft>

```

Release Information

Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 11.1 for the QFX Series.
 Command introduced in Junos OS Release 12.2 for ACX Series routers.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
 Options added:

- **dynamic-flow-capture** in Junos OS Release 7.4.
- **dlsw** in Junos OS Release 7.5.
- **event-processing** in Junos OS Release 7.5.
- **ppp** in Junos OS Release 7.5.
- **l2ald** in Junos OS Release 8.0.
- **link-management** in Release 8.0.
- **pgcp-service** in Junos OS Release 8.4.
- **sbc-configuration-process** in Junos OS Release 9.5.

- **services pgcp gateway** in Junos OS Release 9.6.
- **sfc** and **all-sfc** for the TX Matrix Router in Junos OS Release 9.6.

Description Restart a Junos OS process.



CAUTION: Never restart a software process unless instructed to do so by a customer support engineer. A restart might cause the router or switch to drop calls and interrupt transmission, resulting in possible loss of data.

Options **none**—Same as **gracefully**.

adaptive-services—(Optional) Restart the configuration management process that manages the configuration for stateful firewall, Network Address Translation (NAT), intrusion detection services (IDS), and IP Security (IPsec) services on the Adaptive Services PIC.

all-chassis—(TX Matrix and TX Matrix Plus routers only) (Optional) Restart the software process on all chassis.

all-lcc—(TX Matrix and TX Matrix Plus routers only) (Optional) For a TX Matrix router, restart the software process on all T640 routers connected to the TX Matrix router. For a TX Matrix Plus router, restart the software process on all T1600 routers connected to the TX Matrix Plus router.

all-members—(MX Series routers only) (Optional) Restart the software process for all members of the Virtual Chassis configuration.

all-sfc—(TX Matrix Plus routers only) (Optional) For a TX Matrix Plus router, restart the software processes for the TX Matrix Plus router (or switch-fabric chassis).

ancpd-service—(Optional) Restart the Access Node Control Protocol (ANCP) process, which works with a special Internet Group Management Protocol (IGMP) session to collect outgoing interface mapping events in a scalable manner.

application-identification—(Optional) Restart the process that identifies an application using intrusion detection and prevention (IDP) to allow or deny traffic based on applications running on standard or nonstandard ports.

audit-process—(Optional) Restart the RADIUS accounting process that gathers statistical data that can be used for general network monitoring, analyzing, and tracking usage patterns, for billing a user based on the amount of time or type of services accessed.

auto-configuration—(Optional) Restart the Interface Auto-Configuration process.

autoinstallation—(EX Series switches only) (Optional) Restart the autoinstallation process.

captive-portal-content-delivery—(Optional) Restart the HTTP redirect service by specifying the location to which a subscriber's initial Web browser session is redirected, enabling initial provisioning and service selection for the subscriber.

ce-l2tp-service—(M10, M10i, M7i, and MX Series routers only) (Optional) Restart the Universal Edge Layer 2 Tunneling Protocol (L2TP) process, which establishes L2TP tunnels and Point-to-Point Protocol (PPP) sessions through L2TP tunnels.

chassis-control—(Optional) Restart the chassis management process.

class-of-service—(Optional) Restart the class-of-service (CoS) process, which controls the router's or switch's CoS configuration.

clksyncd-service—(Optional) Restart the external clock synchronization process, which uses synchronous Ethernet (SyncE).

database-replication—(EX Series switches and MX Series routers only) (Optional) Restart the database replication process.

datapath-trace-service—(Optional) Restart the packet path tracing process.

dhcp—(J Series routers and EX Series switches only) (Optional) Restart the software process for a Dynamic Host Configuration Protocol (DHCP) server. A DHCP server allocates network IP addresses and delivers configuration settings to client hosts without user intervention.

dhcp-service—(Optional) Restart the Dynamic Host Configuration Protocol process.

dialer-services—(J Series routers and EX Series switches only) (Optional) Restart the ISDN dial-out process.

diameter-service—(Optional) Restart the diameter process.

disk-monitoring—(Optional) Restart disk monitoring, which checks the health of the hard disk drive on the Routing Engine.

dlsw—(J Series routers and QFX Series only) (Optional) Restart the data link switching (DLSw) service.

dot1x-protocol—(EX Series switches only) (Optional) Restart the port-based network access control process.

dynamic-flow-capture—(Optional) Restart the dynamic flow capture (DFC) process, which controls DFC configurations on Monitoring Services III PICs.

ecc-error-logging—(Optional) Restart the error checking and correction (ECC) process, which logs ECC parity errors in memory on the Routing Engine.

ethernet-connectivity-fault-management—(Optional) Restart the process that provides IEEE 802.1ag Operation, Administration, and Management (OAM) connectivity fault management (CFM) database information for CFM maintenance association end points (MEPs) in a CFM session.

- ethernet-link-fault-management**—(EX Series switches and MX Series routers only) (Optional) Restart the process that provides the OAM link fault management (LFM) information for Ethernet interfaces.
- ethernet-switching**—(EX Series switches only) (Optional) Restart the Ethernet switching process.
- event-processing**—(Optional) Restart the event process (eventd).
- fibre-channel**—(QFX Series only) (Optional) Restart the Fibre Channel process.
- firewall**—(Optional) Restart the firewall management process, which manages the firewall configuration and enables accepting or rejecting packets that are transiting an interface on a router or switch.
- general-authentication-service**—(EX Series switches and MX Series routers only) (Optional) Restart the general authentication process.
- gracefully**—(Optional) Restart the software process.
- iccp-service**—(Optional) Restart the Inter-Chassis Communication Protocol (ICCP) process.
- idp-policy**—(Optional) Restart the intrusion detection and prevention (IDP) protocol process.
- immediately**—(Optional) Immediately restart the software process.
- interface-control**—(Optional) Restart the interface process, which controls the router's or switch's physical interface devices and logical interfaces.
- ipsec-key-management**—(Optional) Restart the IPsec key management process.
- isdn-signaling**—(J Series routers and QFX Series only) (Optional) Restart the ISDN signaling process, which initiates ISDN connections.
- kernel-replication**—(Optional) Restart the kernel replication process, which replicates the state of the backup Routing Engine when graceful Routing Engine switchover (GRES) is configured.
- l2-learning**—(Optional) Restart the Layer 2 address flooding and learning process.
- l2cpd-service**—(Optional) Restart the Layer 2 Control Protocol process, which enables features such as Layer 2 protocol tunneling and nonstop bridging.
- l2tp-service**—(M10, M10i, M7i, and MX Series routers only) (Optional) Restart the Layer 2 Tunneling Protocol (L2TP) process, which sets up client services for establishing Point-to-Point Protocol (PPP) tunnels across a network and negotiating Multilink PPP if it is implemented.
- l2tp-universal-edge**—(MX Series routers only) (Optional) Restart the L2TP process, which establishes L2TP tunnels and PPP sessions through L2TP tunnels.

lACP—(Optional) Restart the Link Aggregation Control Protocol (LACP) process. LACP provides a standardized means for exchanging information between partner systems on a link to allow their link aggregation control instances to reach agreement on the identity of the LAG to which the link belongs, and then to move the link to that LAG, and to enable the transmission and reception processes for the link to function in an orderly manner.

lcc *number*—(TX Matrix and TX Matrix Plus routers only) (Optional) For a TX Matrix router, restart the software process for a specific T640 router that is connected to the TX Matrix router. For a TX Matrix Plus router, restart the software process for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

license-service—(EX Series switches only) (Optional) Restart the feature license management process.

link-management— (TX Matrix and TX Matrix Plus routers and EX Series switches only) (Optional) Restart the Link Management Protocol (LMP) process, which establishes and maintains LMP control channels.

lldpd-service—(EX Series switches only) (Optional) Restart the Link Layer Discovery Protocol (LLDP) process.

local—(MX Series routers only) (Optional) Restart the software process for the local Virtual Chassis member.

local-policy-decision-function— (Optional) Restart the process for the Local Policy Decision Function, which regulates collection of statistics related to applications and application groups and tracking of information about dynamic subscribers and static interfaces.

mac-validation— (Optional) Restart the Media Access Control (MAC) validation process, which configures MAC address validation for subscriber interfaces created on demux interfaces in dynamic profiles on MX Series routers.

member *member-id*—(MX Series routers only) (Optional) Restart the software process for a specific member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

mib-process—(Optional) Restart the Management Information Base (MIB) version II process, which provides the router's MIB II agent.

mobile-ip—(Optional) Restart the Mobile IP process, which configures Junos OS Mobile IP features.

moundd-service—(EX Series switches and MX Series routers only) (Optional) Restart the service for NFS mount requests.

mpls-traceroute—(Optional) Restart the MPLS Periodic Traceroute process.

mspd—(Optional) Restart the Multiservice process.

multicast-snooping—(EX Series switches and MX Series routers only) (Optional) Restart the multicast snooping process, which makes Layer 2 devices, such as VLAN switches, aware of Layer 3 information, such as the media access control (MAC) addresses of members of a multicast group.

named-service—(Optional) Restart the DNS Server process, which is used by a router or a switch to resolve hostnames into addresses.

network-access-service—(J Series routers and QFX Series only) (Optional) Restart the network access process, which provides the router's Challenge Handshake Authentication Protocol (CHAP) authentication service.

nfsd-service—(Optional) Restart the Remote NFS Server process, which provides remote file access for applications that need NFS-based transport.

packet-triggered-subscribers—(Optional) Restart the packet-triggered subscribers and policy control (PTSP) process, which allows the application of policies to dynamic subscribers that are controlled by a subscriber termination device.

peer-selection-service—(Optional) Restart the Peer Selection Service process.

pgcp-service—(Optional) Restart the pgcpd service process running on the Routing Engine. This option does not restart pgcpd processes running on mobile station PICs. To restart pgcpd processes running on mobile station PICs, use the **services pgcp gateway** option.

pgm—(Optional) Restart the process that implements the Pragmatic General Multicast (PGM) protocol for assisting in the reliable delivery of multicast packets.

pic-services-logging—(Optional) Restart the logging process for some PICs. With this process, also known as fsad (the file system access daemon), PICs send special logging information to the Routing Engine for archiving on the hard disk.

pki-service—(Optional) Restart the PKI Service process.

ppp—(Optional) Restart the Point-to-Point Protocol (PPP) process, which is the encapsulation protocol process for transporting IP traffic across point-to-point links.

ppp-service—(Optional) Restart the Universal Edge PPP process, which is the encapsulation protocol process for transporting IP traffic across Universal Edge routers.

pppoe—(Optional) Restart the Point-to-Point Protocol over Ethernet (PPPoE) process, which combines PPP that typically runs over broadband connections with the Ethernet link-layer protocol that allows users to connect to a network of hosts over a bridge or access concentrator.

protected-system-domain-service—(Optional) Restart the Protected System Domain (PSD) process.

redundancy-interface-process—(Optional) Restart the ASP redundancy process.

remote-operations—(Optional) Restart the remote operations process, which provides the ping and traceroute MIBs.

root-system-domain-service—(Optional) Restart the Root System Domain (RSD) service.

routing—(ACX Series routers, QFX Series, EX Series switches, and MX Series routers only) (Optional) Restart the routing protocol process.

routing <logical-system *logical-system-name*>—(Optional) Restart the routing protocol process, which controls the routing protocols that run on the router or switch and maintains the routing tables. Optionally, restart the routing protocol process for the specified logical system only.

sampling—(Optional) Restart the sampling process, which performs packet sampling based on particular input interfaces and various fields in the packet header.

sbc-configuration-process—(Optional) Restart the session border controller (SBC) process of the border signaling gateway (BSG).

scc—(TX Matrix routers only) (Optional) Restart the software process on the TX Matrix router (or switch-card chassis).

sdk-service—(Optional) Restart the SDK Service process, which runs on the Routing Engine and is responsible for communications between the SDK application and Junos OS. Although the SDK Service process is present on the router, it is turned off by default.

secure-neighbor-discovery—(QFX Series, EX Series switches, and MX Series routers only) (Optional) Restart the secure Neighbor Discovery Protocol (NDP) process, which provides support for protecting NDP messages.

sfc *number*—(TX Matrix Plus routers only) (Optional) Restart the software process on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

service-deployment—(Optional) Restart the service deployment process, which enables Junos OS to work with the Session and Resource Control (SRC) software.

services—(Optional) Restart a service.

services pgcp gateway gateway-name—(Optional) Restart the pgcpd process for a specific border gateway function (BGF) running on an MS-PIC. This option does not restart the pgcpd process running on the Routing Engine. To restart the pgcpd process on the Routing Engine, use the **pgcp-service** option.

sflow-service—(EX Series switches only) (Optional) Restart the flow sampling (sFlow technology) process.

snmp—(Optional) Restart the SNMP process, which enables the monitoring of network devices from a central location and provides the router's or switch's SNMP master agent.

soft—(Optional) Reread and reactivate the configuration without completely restarting the software processes. For example, BGP peers stay up and the routing table stays constant. Omitting this option results in a graceful restart of the software process.

static-subscribers—(Optional) Restart the static subscribers process, which associates subscribers with statically configured interfaces and provides dynamic service activation and activation for these subscribers.

statistics-service—(Optional) Restart the process that manages the Packet Forwarding Engine statistics.

subscriber-management—(Optional) Restart the Subscriber Management process.

subscriber-management-helper—(Optional) Restart the Subscriber Management Helper process.

tunnel-oamd—(Optional) Restart the Tunnel OAM process, which enables the Operations, Administration, and Maintenance of Layer 2 tunneled networks. Layer 2 protocol tunneling (L2PT) allows service providers to send Layer 2 PDUs across the provider's cloud and deliver them to Juniper Networks EX Series Ethernet Switches that are not part of the local broadcast domain.

usb-control—(J Series routers and MX Series routers only) (Optional) Restart the USB control process.

vrrp—(ACX Series routers, EX Series switches, and MX Series routers only) (Optional) Restart the Virtual Router Redundancy Protocol (VRRP) process, which enables hosts on a LAN to make use of redundant routing platforms on that LAN without requiring more than the static configuration of a single default route on the hosts.

web-management—(J Series routers, QFX Series, EX Series switches, and MX Series routers only) (Optional) Restart the Web management process.

Required Privilege Level reset

Related Documentation • [Overview of Junos OS CLI Operational Mode Commands on page 58](#)

List of Sample Output [restart interfaces on page 441](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

restart interfaces

```
user@host> restart interfaces
interfaces process terminated
interfaces process restarted
```

save

Syntax	save <i>filename</i>
QFX Series	save (dhcp-snooping <i>filename</i>)
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Save the configuration to an ASCII file. The contents of the current level of the statement hierarchy (and below) are saved, along with the statement hierarchy containing it. This allows a section of the configuration to be saved, while fully specifying the statement hierarchy.</p> <p>When saving a file to a remote system, the software uses the scp/ssh protocol.</p>
Options	<p>filename—Name of the saved file. You can specify a filename in one of the following ways:</p> <ul style="list-style-type: none">• filename—File in the user's home directory (the current directory) on the local flash drive.• path/filename—File on the local flash drive.• /var/filename or /var/path/filename—File on the local hard disk.• a:filename or a:path/filename—File on the local drive. The default path is / (the root-level directory). The removable media can be in MS-DOS or UNIX (UFS) format.• hostname:/path/filename, hostname:filename, hostname:path/filename, or scp://hostname/path/filename—File on an scp/ssh client. This form is not available in the worldwide version of Junos OS. The default path is the user's home directory on the remote system. You can also specify hostname as username@hostname.• ftp://hostname/path/filename—File on an FTP server. You can also specify hostname as username @hostname or username:password @hostname. The default path is the user's home directory. To specify an absolute path, the path must start with the string %2F; for example, ftp://hostname/%2Fpath/filename. To have the system prompt you for the password, specify prompt in place of the password. If a password is required, and you do not specify the password or prompt, an error message is displayed: <pre>user@host> file copy ftp://username@ftp.hostname.net//filename file copy ftp.hostname.net: Not logged in. user@host> file copy ftp://username:prompt@ftp.hostname.net//filename</pre> <p>Password for username@ftp.hostname.net:</p> <ul style="list-style-type: none">• http://hostname/path/filename—File on a Hypertext Transfer Protocol (HTTP) server. You can also specify hostname as username@hostname or username:password@hostname. If a password is required and you omit it, you are prompted for it.• re0:/path/filename or re1:/path/filename—File on a local Routing Engine.

Required Privilege Level configure—To enter configuration mode.

Related Documentation • *Deactivating and Reactivating Statements and Identifiers in a Junos OS Configuration*

CHAPTER 24

CLI Operational Commands

- `show cli`
- `show cli authorization`
- `show cli directory`
- `show cli history`

show cli

List of Syntax	Syntax on page 446 Syntax (QFX Series and OCX Series) on page 446
Syntax	show cli
Syntax (QFX Series and OCX Series)	show cli <authorization> <directory> <history <i>count</i> >
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display configured CLI settings.
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	show cli on page 447
Output Fields	Table 21 on page 446 lists the output fields for the show cli command. Output fields are listed in the approximate order in which they appear.

Table 21: show cli Output Fields

Field Name	Field Description
CLI complete-on-space	Capability to complete a partial command entry when you type a space or a tab: on or off .
CLI idle-timeout	Maximum time that an individual session can be idle before the user is logged out from the router or switch. When this feature is enabled, the number of minutes is displayed. Otherwise, the state is disabled .
CLI restart-on-upgrade	CLI is set to prompt you to restart the router or switch after upgrading the software: on or off .
CLI screen-length	Number of lines of text that the terminal screen displays.
CLI screen-width	Number of characters in a line on the terminal screen.
CLI terminal	Terminal type.
CLI is operating in	Mode: enhanced .
CLI timestamp	Date and time format for the timestamp. If the timestamp is not set, the state is disabled .
CLI working directory	Pathname of the working directory.

Sample Output

show cli

```
user@host> show cli
CLI complete-on-space set to on
CLI idle-timeout disabled
CLI restart-on-upgrade set to on
CLI screen-length set to 47
CLI screen-width set to 132
CLI terminal is 'vt100'
CLI is operating in enhanced mode
CLI timestamp disabled
CLI working directory is '/var/tmp'
```

show cli authorization

Syntax	show cli authorization
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display the permissions for the current user.
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	show cli authorization on page 450
Output Fields	Table 22 on page 448 lists the output fields for the show cli authorization command. In the table, all possible permissions are displayed and output fields are listed in alphabetical order.

Table 22: show cli authorization Output Fields

Field Name	Field Description
access	Can view access configuration information.
access-control	Can modify access configuration.
admin	Can view user account information.
admin-control	Can modify user account information.
clear	Can clear learned network information.
configure	Can enter configuration mode.
control	Can modify any configuration.
edit	Can edit configuration files.
field	Reserved for field (debugging) support.
firewall	Can view firewall configuration information.
firewall-control	Can modify firewall configuration information.
floppy	Can read from and write to removable media.
flow-tap	Can view flow-tap configuration information.

Table 22: show cli authorization Output Fields (*continued*)

Field Name	Field Description
flow-tap-control	Can configure flow-tap configuration information.
idp-profiler-operation	Can configure Profiler data.
interface	Can view interface configuration information.
interface-control	Can modify interface configuration information.
maintenance	Can perform system maintenance.
network	Can access the network by entering the ping , ssh , telnet , and traceroute commands.
pgcp-session-mirroring	Can view Packet Gateway Control Protocol session mirroring configuration.
pgcp-session-mirroring-control	Can modify Packet Gateway Control Protocol session mirroring configuration all-control.
reset	Can reset or restart interfaces and system processes.
rollback	Can roll back to previous configurations.
routing	Can view routing configuration information.
routing-control	Can modify routing configuration information.
secret	Can view passwords and authentication keys in the configuration.
secret-control	Can modify passwords and authentication keys in the configuration.
security	Can view security configuration information.
security-control	Can modify security configuration information.
shell	Can start a local shell.
snmp	Can view SNMP configuration information.
snmp-control	Can modify SNMP configuration information.
system	Can view system configuration information.
system-control	Can modify system configuration information.
trace	Can view trace file settings information.

Table 22: show cli authorization Output Fields (*continued*)

Field Name	Field Description
trace-control	Can modify trace file settings information.
view	Can view current values and statistics.
view-configuration	Can view all configuration information (not including secrets).

Sample Output

show cli authorization

```

user@host> show cli authorization
Current user: 'remote' login: 'user' class ''
Permissions:
  admin      -- Can view user accounts
  admin-control-- Can modify user accounts
  clear      -- Can clear learned network information
  configure  -- Can enter configuration mode
  control    -- Can modify any configuration
  edit       -- Can edit full files
  field      -- Special for field (debug) support
  floppy     -- Can read and write from the floppy
  interface  -- Can view interface configuration
  interface-control-- Can modify interface configuration
  network    -- Can access the network
  reset      -- Can reset/restart interfaces and daemons
  routing    -- Can view routing configuration
  routing-control-- Can modify routing configuration
  shell      -- Can start a local shell
  snmp       -- Can view SNMP configuration
  snmp-control-- Can modify SNMP configuration
  system     -- Can view system configuration
  system-control-- Can modify system configuration
  trace      -- Can view trace file settings
  trace-control-- Can modify trace file settings
  view       -- Can view current values and statistics
  maintenance -- Can become the super-user
  firewall   -- Can view firewall configuration
  firewall-control-- Can modify firewall configuration
  secret     -- Can view secret configuration
  secret-control-- Can modify secret configuration
  rollback   -- Can rollback to previous configurations
  security   -- Can view security configuration
  security-control-- Can modify security configuration
  access     -- Can view access configuration
  access-control-- Can modify access configuration
  view-configuration-- Can view all configuration (not including secrets)
  flow-tap   -- Can view flow-tap configuration
  flow-tap-control-- Can configure flow-tap service
Individual command authorization:
  Allow regular expression: none
  Deny regular expression: none
  Allow configuration regular expression: none
  Deny configuration regular expression: none

```


show cli directory

Syntax	show cli directory
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the current working directory.
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	show cli directory on page 452
Output Fields	Table 23 on page 452 lists the output fields for the show cli directory command. Output fields are listed in the approximate order in which they appear.

Table 23: show cli directory Output Fields

Field Name	Field Description
Current directory	Pathname of the current working directory.

Sample Output

show cli directory

```
user@host> show cli directory
Current directory: /var/tmp
```

show cli history

Syntax	<code>show cli history</code> <code><count></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display a list of previous CLI commands.
Options	none —Display all previous CLI commands. count —(Optional) Maximum number of commands to display.
Required Privilege Level	view
List of Sample Output	show cli history on page 453
Output Fields	Table 24 on page 453 lists the output fields for the show cli history command. Output fields are listed in the approximate order in which they appear.

Table 24: show cli history Output Fields

Field Name	Field Description
<i>timestamp</i>	Time at which the command was entered.
<i>command-syntax</i>	Command that was entered.

Sample Output

show cli history

```
user@host> show cli history
11:14:14 -- show arp
11:22:10 -- show cli authorization
11:27:12 -- show cli history
```


CHAPTER 25

Licensing Operational Commands

- request system license add
- request system license delete
- request system license save
- show system license

request system license add

Syntax	<code>request system license add (<i>filename</i> terminal)</code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 9.5 for SRX Series devices. Command introduced in Junos OS Release 11.1 for the QFX Series.
Description	Add a license key.
Options	<i>filename</i> —License key from a file or URL. Specify the filename or the URL where the key is located. <i>terminal</i> —License key from the terminal.
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none">• Adding New Licenses (CLI Procedure) on page 97
List of Sample Output	request system license add on page 456
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system license add

```
user@host> request system license add terminal
E408408918 aeaqib qcsbj a okbuqe rcmxnq vjocwf uxfsta
          z5ufjb kdrmt6 57bimv 2f3ddp qttcdn 627q4a
          jx4s5x hiri
E408408918: successfully added
add license complete (no errors)
```

request system license delete

Syntax	<code>request system license delete (<i>license-identifier</i> license-identifier-list [<i>licenseid001</i> <i>licenseid002</i> <i>licenseid003</i>] all)</code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Option license-identifier-list introduced in Junos OS Release 13.1.</p>
Description	Delete a license key. You can choose to delete one license at a time, all licenses at once, or a list of license identifiers enclosed in brackets.
Options	<p>license-identifier—Text string that uniquely identifies a license key.</p> <p>license-identifier-list [<i>licenseid001</i> <i>licenseid002</i> <i>licenseid003</i>....]—Delete multiple license identifiers as a list enclosed in brackets.</p> <p>all—Delete all licenses on the device.</p>
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none"> • Deleting a License (CLI Procedure) on page 98

request system license save

Syntax	<code>request system license save (<i>filename</i> terminal)</code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 9.5 for SRX Series devices.
Description	Save installed license keys to a file or URL.
Options	<i>filename</i> —License key from a file or URL. Specify the filename or the URL where the key is located. <i>terminal</i> —License key from the terminal.
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none">• Saving License Keys on page 99
List of Sample Output	request system license save on page 458
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system license save

```
user@host> request system license save ftp://user@host/license.conf
```


show system license

Syntax	show system license <installed keys usage>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 13.3 for the MX104 3D Universal Edge Routers.
Description	Display licenses and information about how they are used.
Options	<p>none—Display all license information.</p> <p>installed—(Optional) Display installed licenses only.</p> <p>keys—(Optional) Display a list of license keys. Use this information to verify that each expected license key is present.</p> <p>usage—(Optional) Display the state of licensed features.</p>
Required Privilege Level	maintenance
List of Sample Output	show system license on page 460 show system license installed on page 461 show system license keys on page 461 show system license usage on page 461 show system license (MX104 Routers) on page 461 show system license installed (MX104 Routers) on page 462 show system license keys (MX104 Routers) on page 462 show system license usage (MX104 Routers) on page 462 show system license (MX104 Routers) on page 462 show system license installed (MX104 Routers) on page 463 show system license keys (MX104 Routers) on page 463 show system license usage (MX104 Routers) on page 463 show system license (MX104 Routers) on page 464 show system license installed (MX104 Routers) on page 464 show system license keys (MX104 Routers) on page 464 show system license usage (MX104 Routers) on page 465 show system license (QFX Series) on page 465
Output Fields	Table 25 on page 459 lists the output fields for the show system license command. Output fields are listed in the approximate order in which they appear.

Table 25: show system license Output Fields

Field Name	Field Description
Feature name	Name assigned to the configured feature. You use this information to verify that all the features for which you installed licenses are present.

Table 25: show system license Output Fields (*continued*)

Field Name	Field Description
Licenses used	<p>Number of licenses used by a router or switch. You use this information to verify that the number of licenses used matches the number configured. If a licensed feature is configured, the feature is considered used.</p> <p>NOTE: In Junos OS Release 10.1 and later, the Licenses used column displays the actual usage count based on the number of active sessions or connections as reported by the corresponding feature daemons. This is applicable for scalable license-based features such as Subscriber Access (scale-subscriber), L2TP (scale-l2tp), Mobile IP (scale-mobile-ip), and so on.</p>
Licenses installed	<p>Information about the installed license key:</p> <ul style="list-style-type: none"> • License identifier—Identifier associated with a license key. • State—State of the license key: valid or invalid. An invalid state indicates that the key was entered incorrectly or is not valid for the specific device. • License version—Version of a license. The version indicates how the license is validated, the type of signature, and the signer of the license key. • Valid for device—Device that can use a license key. • Group defined—Group membership of a device. • Features—Feature associated with a license, such as data link switching (DLSw).
Licenses needed	Number of licenses required for features being used but not yet properly licensed.
Expiry	Amount of time left within the grace period before a license is required for a feature being used.

Sample Output

show system license

```
user@host> show system license
```

```
License usage:
```

Feature name	Licenses used	Licenses installed	Licenses needed	Expiry
subscriber-accounting	2	2	0	permanent
subscriber-authentication	1	2	0	permanent
subscriber-address-assignment	2	2	0	permanent
subscriber-vlan	2	2	0	permanent
subscriber-ip	0	2	0	permanent
scale-subscriber	2	3	0	permanent
scale-l2tp	4	5	0	permanent
scale-mobile-ip	1	2	0	permanent

```
Licenses installed:
```

```
License identifier: XXXXXXXXXX
```

```
License version: 2
```

```
Features:
```

```
subscriber-accounting - Per Subscriber Radius Accounting
permanent
subscriber-authentication - Per Subscriber Radius Authentication
permanent
subscriber-address-assignment - Radius/SRC Address Pool Assignment
permanent
subscriber-vlan - Dynamic Auto-sensed Vlan
```

```

    permanent
subscriber-ip    - Dynamic and Static IP
    permanent

```

show system license installed

```

user@host> show system license installed
License identifier: XXXXXXXXXX
License version: 2
Features:
  subscriber-accounting - Per Subscriber Radius Accounting
    permanent
  subscriber-authentication - Per Subscriber Radius Authentication
    permanent
  subscriber-address-assignment - Radius/SRC Address Pool Assignment
    permanent
  subscriber-vlan - Dynamic Auto-sensed Vlan
    permanent
  subscriber-ip - Dynamic and Static IP
    permanent

```

show system license keys

```

user@host> show system license keys
XXXXXXXXXX xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
          xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
          xxxxxx xxxxxx xxx

```

show system license usage

```

user@host> show system license usage
License usage:

```

Feature name	Licenses used	Licenses installed	Licenses needed	Expiry
subscriber-accounting	2	2	0	permanent
subscriber-authentication	1	2	0	permanent
subscriber-address-assignment	2	2	0	permanent
subscriber-vlan	2	2	0	permanent
subscriber-ip	0	2	0	permanent
scale-subscriber	2	3	0	permanent
scale-l2tp	4	5	0	permanent
scale-mobile-ip	1	2	0	permanent

show system license (MX104 Routers)

In the following output, ports 0 and 1 are activated by installing the license to activate the first two built-in ports.

```

user@host> show system license
License usage:

```

Feature name	Licenses used	Licenses installed	Licenses needed	Expiry
scale-subscriber	0	1000	0	permanent
scale-l2tp	0	1000	0	permanent
scale-mobile-ip	0	1000	0	permanent
MX104-2x10Gig-port-0-1	0	1	0	permanent

```

Licenses installed:
License identifier: XXXXXXXXXX
License version: 2
Features:

```

```

MX104-2x10Gig-port-0-1 - MX104 2X10Gig Builtin Port(xe-2/0/0 & xe-2/0/1)
upgrade
  permanent

```

show system license installed (MX104 Routers)

In the following output, ports 0 and 1 are activated by installing the license to activate the first two built-in ports.

```

user@host > show system license installed
License identifier: XXXXXXXXXX
License version: 2
Features:
  MX104-2x10Gig-port-0-1 - MX104 2X10Gig Builtin Port(xe-2/0/0 & xe-2/0/1)
upgrade
  permanent

```

show system license keys (MX104 Routers)

In the following output, ports 0 and 1 are activated by installing the license to activate the first two built-in ports.

```

user@host > show system license keys

XXXXXXXXXX xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
          xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
          xxxxxx xxxx

```

show system license usage (MX104 Routers)

In the following output, ports 0 and 1 are activated by installing the license to activate the first two built-in ports.

```

user@host > show system license usage

```

Feature name	Licenses used	Licenses installed	Expiry needed	
scale-subscriber	0	1000	0	permanent
scale-l2tp	0	1000	0	permanent
scale-mobile-ip	0	1000	0	permanent
MX104-2x10Gig-port-0-1	0	1	0	permanent

show system license (MX104 Routers)

In the following output, ports 2 and 3 are activated by installing the license to activate the next two built-in ports after installing the license to activate the first two built-in ports.

```

user@host > show system license
License usage:

```

Feature name	Licenses used	Licenses installed	Licenses needed	Expiry
scale-subscriber	0	1000	0	permanent
scale-l2tp	0	1000	0	permanent
scale-mobile-ip	0	1000	0	permanent
MX104-2x10Gig-port-0-1	0	1	0	permanent
MX104-2x10Gig-port-2-3	0	1	0	permanent

```

Licenses installed:
License identifier: XXXXXXXXXX
License version: 2

```

```

Features:
MX104-2x10Gig-port-0-1 - MX104 2X10Gig Builtin Port(xe-2/0/0 & xe-2/0/1)
upgrade
    permanent

License identifier: XXXXXXXXXX
License version: 2
Features:
MX104-2x10Gig-port-2-3 - MX104 2X10Gig Builtin Port(xe-2/0/2 & xe-2/0/3)
upgrade
    permanent

```

show system license installed (MX104 Routers)

In the following output, ports 2 and 3 are activated by installing the license to activate the next two built-in ports after installing the license to activate the first two built-in ports.

```

user@host > show system license installed
License identifier: XXXXXXXXXX
License version: 2
Features:
MX104-2x10Gig-port-0-1 - MX104 2X10Gig Builtin Port(xe-2/0/0 & xe-2/0/1)
upgrade
    permanent

License identifier: XXXXXXXXXX
License version: 2
Features:
MX104-2x10Gig-port-2-3 - MX104 2X10Gig Builtin Port(xe-2/0/2 & xe-2/0/3)
upgrade
    permanent

```

show system license keys (MX104 Routers)

In the following output, ports 2 and 3 are activated by installing the license to activate the next two built-in ports after installing the license to activate the first two built-in ports.

```

user@host > show system license keys

XXXXXXXXXX xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
          xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
          xxxxxx xxxx

XXXXXXXXXX xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
          xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
          xxxxxx xxxx

```

show system license usage (MX104 Routers)

In the following output, ports 2 and 3 are activated by installing the license to activate the next two built-in ports after installing the license to activate the first two built-in ports.

```

user@host > show system license usage

```

Feature name	Licenses used	Licenses installed	Expiry needed	
scale-subscriber	0	1000	0	permanent
scale-l2tp	0	1000	0	permanent

scale-mobile-ip	0	1000	0	permanent
MX104-2x10Gig-port-0-1	0	1	0	permanent
MX104-2x10Gig-port-2-3	0	1	0	permanent

show system license (MX104 Routers)

In the following output, ports 0,1,2, and 3 are activated by installing a single license key to activate all four built-in ports.

```
user@host > show system license
```

License usage:

Feature name	Licenses used	Licenses installed	Licenses needed	Expiry
scale-subscriber	0	1000	0	permanent
scale-l2tp	0	1000	0	permanent
scale-mobile-ip	0	1000	0	permanent
MX104-2x10Gig-port-0-1	0	1	0	permanent
MX104-2x10Gig-port-2-3	0	1	0	permanent

Licenses installed:

License identifier: XXXXXXXXXX

License version: 2

Features:

MX104-2x10Gig-port-0-1 - MX104 2X10Gig Builtin Port(xe-2/0/0 & xe-2/0/1)

upgrade

permanent

MX104-2x10Gig-port-2-3 - MX104 2X10Gig Builtin Port(xe-2/0/2 & xe-2/0/3)

upgrade

permanent

show system license installed (MX104 Routers)

In the following output, ports 0,1,2, and 3 are activated by installing a single license key to activate all four built-in ports.

```
user@host > show system license installed
```

License identifier: XXXXXXXXXX

License version: 2

Features:

MX104-2x10Gig-port-0-1 - MX104 2X10Gig Builtin Port(xe-2/0/0 & xe-2/0/1)

upgrade

permanent

MX104-2x10Gig-port-2-3 - MX104 2X10Gig Builtin Port(xe-2/0/2 & xe-2/0/3)

upgrade

permanent

show system license keys (MX104 Routers)

In the following output, ports 0,1,2, and 3 are activated by installing a single license key to activate all four built-in ports.

```
user@host > show system license keys
```

```
XXXXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXXXX XXXXXX X
```

show system license usage (MX104 Routers)

In the following output, ports 0,1,2, and 3 are activated by installing a single license key to activate all four built-in ports.

```
user@host > show system license usage
```

	Licenses	Licenses	Licenses	Expiry	
Feature name		used	installed	needed	
scale-subscriber		0	1000	0	permanent
scale-l2tp		0	1000	0	permanent
scale-mobile-ip		0	1000	0	permanent
MX104-2x10Gig-port-0-1		0	1	0	permanent
MX104-2x10Gig-port-2-3		0	1	0	permanent

show system license (QFX Series)

```
user@switch> show system license
```

License usage:

	Licenses	Licenses	Licenses	Expiry
Feature name	used	installed	needed	
qfx-edge-fab	1	1	1	permanent

Licenses installed:
 License identifier: JUNOS417988
 License version: 1
 Features:
 qfx-edge-fab - QFX3000 Series QF/Node feature license
 permanent

CHAPTER 26

NSSU Operational Commands

- request system software nonstop-upgrade
- show chassis nonstop-upgrade node-group

request system software nonstop-upgrade

Syntax `request system software nonstop-upgrade package-name`
 `<fabric >`
 `<director-group>`
 `<node-group name>`

Release Information Command introduced in Junos OS Release 12.2 for the QFX Series.

Description Nonstop software upgrade enables you to upgrade a QFabric system with minimal packet loss and maximum uptime. You should upgrade the devices in the following order: Director group, fabric controls and Interconnect devices, and network and server Node groups.



NOTE: Before you perform a nonstop software upgrade, contact JTAC to perform a pre-upgrade health check on the QFabric system.

- Options** *package-name*—Location from which the software is to be installed. For example:
- ***protocol://hostname/pathname/package-name***—For a software package or bundle that is to be downloaded and installed from a remote location. Replace ***protocol*** with one of the following:
 - **ftp**—File Transfer Protocol.
Use ***ftp://hostname/pathname/package-name***. To specify authentication credentials, use ***ftp://<username>:<password>@hostname/pathname/package-name***. To have the system prompt you for the password, specify **prompt** in place of the password. If a password is required, and you do not specify the password or **prompt**, an error message is displayed.
 - **http**—Hypertext Transfer Protocol.
Use ***http://hostname/pathname/package-name***. To specify authentication credentials, use ***http://<username>:<password>@hostname/pathname/package-name***. If a password is required and you omit it, you are prompted for it.
 - **scp**—Secure copy (available only for Canada and U.S. version).

Use `scp://hostname/pathname/package-name`. To specify authentication credentials, use
`scp://<username>:<password>@hostname/pathname/package-name`.



NOTE:

- The *pathname* in the protocol is the relative path to the user's home directory on the remote system and not the root directory.

director-group—Install software package on the Director group and Fabric managers.

fabric—Install software package on the Interconnect devices and Fabric controls.

node-group *name*—Install software package on the redundant server Node group, server Node group, or network Node group.

Required Privilege Level maintenance

Related Documentation

- [Nonstop Software Upgrade Checklist for QFabric Systems on page 131](#)
- [Performing a Nonstop Software Upgrade on the QFabric System on page 134](#)
- [Verifying Nonstop Software Upgrade for QFabric Systems on page 140](#)
- [show chassis nonstop-upgrade node-group on page 475](#)

List of Sample Output [request system software nonstop-upgrade director-group on page 469](#)
[request system software nonstop-upgrade fabric on page 471](#)
[request system software nonstop-upgrade node-group \(Redundant Server Node Group\) on page 472](#)
[request system software nonstop-upgrade node-group \(Server Node Group\) on page 473](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

`request system software nonstop-upgrade director-group`

```
user@qfabric> request system software nonstop-upgrade director-group
jinstall-qfabric-12.2X50-D10.3.rpm
Validating update package jinstall-qfabric-12.2X50-D10.3.rpm
Installing update package jinstall-qfabric-12.2X50-D10.3.rpm
Installing fabric images version 12.2X50-D10.3
Performing cleanup
Package install complete
Installing update package jinstall-qfabric-12.2X50-D10.3.rpm on peer
Triggering Initial Stage of Fabric Manager Upgrade
Updating CCIF default image to 12.2X50-D10.3
Updating FM-0 to Junos version 12.2X50-D10.3
[Status 2012-06-05 15:25:29]: Fabric Manager: Upgrade Initial Stage started
[FM-0 2012-06-05 15:25:38]: FM-0 Master already running on LOCAL DG
```

```
[NW-NG-0 2012-06-05 15:25:45]: NW-NG-0 Master already running on LOCAL DG
[FM-0 2012-06-05 15:26:12]: Retrieving package
[FM-0 2012-06-05 15:27:11]: Pushing bundle to re0
[Status 2012-06-05 15:29:06]: Load completed with 0 errors...
[Status 2012-06-05 15:29:06]: Reboot is required to complete upgrade ...
[Status 2012-06-05 15:29:07]: Trying to Connect to Node: FM-0
[Status 2012-06-05 15:29:13]: Rebooting FM-0
[FM-0 2012-06-05 15:29:13]: Waiting for FM-0 to terminate ...
Starting Peer upgrade
```

Initiating rolling upgrade of Director peer: version 12.2X50-D10.3

Inform CCIF regarding rolling upgrade

```
[Peer Update Status]: Validating install package jinstall-qfabric-12.2X50-D10.3.rpm
[Peer Update Status]: Cleaning up node for rolling phase one upgrade
[Peer Update Status]: Director group upgrade complete
[Peer Update Status]: COMPLETED
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to reboot and start phase one of rolling
upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase one
of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase one
of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase one
of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase one
of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase one
of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase one
of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase one
of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase one
of rolling upgrade
[Peer Update Status]: Waiting for peer to return after reboot and start phase one
of rolling upgrade
[Peer Update Status]: Waiting for peer to complete phase one of rolling upgrade
[Peer Update Status]: Peer completed phase one of rolling upgrade
Setting peer DG node as the master SFC
```

Delaying start of local upgrade to allow peer services time to initialize [15 minutes]

```

Delaying start of local upgrade to allow peer services time to initialize [15
minutes]
Delaying start of local upgrade to allow peer services time to initialize [12
minutes]
Delaying start of local upgrade to allow peer services time to initialize [9
minutes]
Delaying start of local upgrade to allow peer services time to initialize [6
minutes]
Delaying start of local upgrade to allow peer services time to initialize [3
minutes]
[Peer Update Status]: Check for VMs on dg0
Triggering Final Stage of Fabric Manager Upgrade:
Updating FM-0 to Junos version 12.2X50-D10.3
[Status 2012-06-05 16:10:12]: Fabric Manager: Upgrade Final Stage started
[NW-NG-0 2012-06-05 16:10:22]: Transferring NW-NG-0 Mastership to REMOTE DG
[NW-NG-0 2012-06-05 16:11:44]: Finished NW-NG-0 Mastership switch
[Status 2012-06-05 16:11:45]: Upgrading FM-0 VM on worker DG to 12.2X50-D10.3
[DRE-0 2012-06-05 16:12:43]: Retrieving package
[DRE-0 2012-06-05 16:13:46]: ----- re0: -----
[Status 2012-06-05 16:15:17]: Load completed with 0 errors...
[Status 2012-06-05 16:15:17]: Reboot is required to complete upgrade ...
[DRE-0 2012-06-05 16:15:22]: Waiting for DRE-0 to terminate ...
[DRE-0 2012-06-05 16:15:34]: Waiting for DRE-0 to come back ...
[DRE-0 2012-06-05 16:18:44]: Running Uptime Test for DRE-0
[DRE-0 2012-06-05 16:18:51]: Uptime Test for DRE-0 Passed ...
[Status 2012-06-05 16:18:51]: DRE-0 booted successfully ...
Performing post install shutdown and cleanup

Broadcast message from root (Tue Jun 5 16:18:51 2012):

The system is going down for reboot NOW!
Director group upgrade complete

root@qfabric> Read from remote host qfabric-partition0: Connection reset by peer
Connection to qfabric-partition0 closed.

```

request system software nonstop-upgrade fabric

```

user@qfabric> request system software nonstop-upgrade fabric
jinstall-qfabric-12.2X50-D10.3.rpm
[FC-0 2012-06-05 16:48:53]: Retrieving package
[FC-1 2012-06-05 16:48:53]: Retrieving package
[IC-F4912 2012-06-05 16:48:59]: Retrieving package
[FC-0 2012-06-05 16:49:51]: ----- re0: -----
[FC-1 2012-06-05 16:49:52]: ----- re0: -----
[IC-F4912 2012-06-05 16:49:54]: ----- re0: -----
[IC-F4912 2012-06-05 16:50:42]: Step 1 of 20 Creating temporary file system
[IC-F4912 2012-06-05 16:50:42]: Step 2 of 20 Determining installation source
[IC-F4912 2012-06-05 16:50:43]: Step 3 of 20 Processing format options
[IC-F4912 2012-06-05 16:50:43]: Step 4 of 20 Determining installation slice
[IC-F4912 2012-06-05 16:50:43]: Step 5 of 20 Creating and labeling new slices
[IC-F4912 2012-06-05 16:50:44]: Step 6 of 20 Create and mount new file system
[IC-F4912 2012-06-05 16:50:53]: Step 7 of 20 Getting OS bundles
[IC-F4912 2012-06-05 16:50:53]: Step 8 of 20 Updating recovery media
[IC-F4912 2012-06-05 16:51:17]: Step 9 of 20 Extracting incoming image
[IC-F4912 2012-06-05 16:52:56]: Step 10 of 20 Unpacking OS packages
[IC-F4912 2012-06-05 16:52:59]: Step 11 of 20 Mounting jbase package
[IC-F4912 2012-06-05 16:53:28]: Step 12 of 20 Creating base OS symbolic links
[IC-F4912 2012-06-05 16:54:45]: Step 13 of 20 Creating fstab
[IC-F4912 2012-06-05 16:54:45]: Step 14 of 20 Creating new system files
[IC-F4912 2012-06-05 16:54:46]: Step 15 of 20 Adding jbundle package

```

```

[IC-F4912 2012-06-05 16:58:15]: Step 16 of 20 Backing up system data
[IC-F4912 2012-06-05 16:58:18]: Step 17 of 20 Setting up shared partition data
[IC-F4912 2012-06-05 16:58:18]: Step 18 of 20 Checking package sanity in
installation
[IC-F4912 2012-06-05 16:58:18]: Step 19 of 20 Unmounting and cleaning up temporary
file systems
[IC-F4912 2012-06-05 16:58:22]: Step 20 of 20 Setting da0s1 as new active partition
[Status 2012-06-05 16:58:34]: Load completed with 0 errors...
[Status 2012-06-05 16:58:34]: Reboot is required to complete upgrade ...
[Status 2012-06-05 16:58:34]: Trying to Connect to Node: FC-0
[Status 2012-06-05 16:58:39]: Rebooting FC-0
[Status 2012-06-05 16:58:39]: Trying to Connect to Node: FC-1
[Status 2012-06-05 16:58:44]: Rebooting FC-1
[Status 2012-06-05 16:58:44]: Trying to Connect to Node: IC-F4912
[Status 2012-06-05 16:58:50]: Rebooting IC-F4912
Success

```

request system software nonstop-upgrade node-group (Redundant Server Node Group)

```

user@qfabric> request system software nonstop-upgrade node-group RSNG
jinstall-qfabric-12.2X50-D10.3.rpm
Upgrading target(s): RSNG

```

```

[RSNG 2012-06-05 17:26:44]: Starting with package
ftp://169.254.0.3/pub/images/12.2X50-D10.3/jinstall-qfx.tgz
[RSNG 2012-06-05 17:26:44]: Retrieving package
[RSNG 2012-06-05 17:28:56]: Pushing bundle to fpc1
[RSNG 2012-06-05 17:29:26]: fpc1: Validate package...
[RSNG 2012-06-05 17:35:22]: fpc0: Validate package...
[RSNG 2012-06-05 17:35:49]: ----- fpc1 -----
[RSNG 2012-06-05 17:36:25]: Step 1 of 20 Creating temporary file system
[RSNG 2012-06-05 17:36:26]: Step 2 of 20 Determining installation source
[RSNG 2012-06-05 17:36:26]: Step 3 of 20 Processing format options
[RSNG 2012-06-05 17:36:26]: Step 4 of 20 Determining installation slice
[RSNG 2012-06-05 17:36:27]: Step 5 of 20 Creating and labeling new slices
[RSNG 2012-06-05 17:36:27]: Step 6 of 20 Create and mount new file system
[RSNG 2012-06-05 17:36:35]: Step 7 of 20 Getting OS bundles
[RSNG 2012-06-05 17:36:35]: Step 8 of 20 Updating recovery media
[RSNG 2012-06-05 17:36:56]: Step 9 of 20 Extracting incoming image
[RSNG 2012-06-05 17:38:07]: Step 10 of 20 Unpacking OS packages
[RSNG 2012-06-05 17:38:16]: Step 11 of 20 Mounting jbase package
[RSNG 2012-06-05 17:38:41]: Step 12 of 20 Creating base OS symbolic links
[RSNG 2012-06-05 17:39:41]: Step 13 of 20 Creating fstab
[RSNG 2012-06-05 17:39:42]: Step 14 of 20 Creating new system files
[RSNG 2012-06-05 17:39:42]: Step 15 of 20 Adding jbundle package
[RSNG 2012-06-05 17:42:16]: Step 16 of 20 Backing up system data
[RSNG 2012-06-05 17:42:32]: Step 17 of 20 Setting up shared partition data
[RSNG 2012-06-05 17:42:33]: Step 18 of 20 Checking package sanity in
installation
[RSNG 2012-06-05 17:42:33]: Step 19 of 20 Unmounting and cleaning up temporary
file systems
[RSNG 2012-06-05 17:42:36]: Step 20 of 20 Setting da0s2 as new active partition
[RSNG 2012-06-05 17:42:51]: ----- fpc0 - master -----
[RSNG 2012-06-05 17:42:51]: Step 1 of 20 Creating temporary file system
[RSNG 2012-06-05 17:42:51]: Step 2 of 20 Determining installation source
[RSNG 2012-06-05 17:42:51]: Step 3 of 20 Processing format options
[RSNG 2012-06-05 17:42:51]: Step 4 of 20 Determining installation slice
[RSNG 2012-06-05 17:42:51]: Step 5 of 20 Creating and labeling new slices
[RSNG 2012-06-05 17:42:51]: Step 6 of 20 Create and mount new file system
[RSNG 2012-06-05 17:42:51]: Step 7 of 20 Getting OS bundles
[RSNG 2012-06-05 17:42:51]: Step 8 of 20 Updating recovery media

```

```

[RSNG 2012-06-05 17:42:51]: Step 9 of 20 Extracting incoming image
[RSNG 2012-06-05 17:42:51]: Step 10 of 20 Unpacking OS packages
[RSNG 2012-06-05 17:42:51]: Step 11 of 20 Mounting jbase package
[RSNG 2012-06-05 17:42:51]: Step 12 of 20 Creating base OS symbolic links
[RSNG 2012-06-05 17:42:51]: Step 13 of 20 Creating fstab
[RSNG 2012-06-05 17:42:51]: Step 14 of 20 Creating new system files
[RSNG 2012-06-05 17:42:51]: Step 15 of 20 Adding jbundle package
[RSNG 2012-06-05 17:42:51]: Step 16 of 20 Backing up system data
[RSNG 2012-06-05 17:42:51]: Step 17 of 20 Setting up shared partition data
[RSNG 2012-06-05 17:42:51]: Step 18 of 20 Checking package sanity in
installation
[RSNG 2012-06-05 17:42:51]: Step 19 of 20 Unmounting and cleaning up temporary
file systems
[RSNG 2012-06-05 17:42:51]: Step 20 of 20 Setting da0s2 as new active partition
[RSNG 2012-06-05 17:43:36]: Rebooting Backup RE
[RSNG 2012-06-05 17:43:36]: ----- Rebooting fpc1 -----
[RSNG 2012-06-05 17:50:12]: Initiating Chassis In-Service-Upgrade
[RSNG 2012-06-05 17:50:33]: Upgrading group: 0 fpc: 0
[RSNG 2012-06-05 17:52:38]: Upgrade complete for group:0
[RSNG 2012-06-05 17:52:38]: Upgrading group: 1 fpc: 1
[RSNG 2012-06-05 17:54:42]: Upgrade complete for group:1
[RSNG 2012-06-05 17:54:42]: Finished processing all upgrade groups, last group
:1
[RSNG 2012-06-05 17:54:48]: Preparing for Switchover
[RSNG 2012-06-05 17:55:38]: Switchover Completed
[Status 2012-06-05 17:55:41]: Upgrade completed with 0 errors
Success

```

request system software nonstop-upgrade node-group (Server Node Group)

```

user@qfabric> request system software nonstop-upgrade node-group P1507-C
jinstall-qfabric-12.2X50-D10.3.rpm
Upgrading target(s): P1507-C

[P1507-C 2012-06-26 14:02:44]: Retrieving package
[P1507-C 2012-06-26 14:03:21]: ----- P1507-C: -----
[P1507-C 2012-06-26 14:03:59]: Step 1 of 20 Creating temporary file system
[P1507-C 2012-06-26 14:03:59]: Step 2 of 20 Determining installation source
[P1507-C 2012-06-26 14:03:59]: Step 3 of 20 Processing format options
[P1507-C 2012-06-26 14:03:59]: Step 4 of 20 Determining installation slice
[P1507-C 2012-06-26 14:04:00]: Step 5 of 20 Creating and labeling new slices
[P1507-C 2012-06-26 14:04:00]: Step 6 of 20 Create and mount new file system
[P1507-C 2012-06-26 14:04:08]: Step 7 of 20 Getting OS bundles
[P1507-C 2012-06-26 14:04:09]: Step 8 of 20 Updating recovery media
[P1507-C 2012-06-26 14:04:29]: Step 9 of 20 Extracting incoming image
[P1507-C 2012-06-26 14:05:42]: Step 10 of 20 Unpacking OS packages
[P1507-C 2012-06-26 14:05:49]: Step 11 of 20 Mounting jbase package
[P1507-C 2012-06-26 14:06:14]: Step 12 of 20 Creating base OS symbolic links
[P1507-C 2012-06-26 14:07:15]: Step 13 of 20 Creating fstab
[P1507-C 2012-06-26 14:07:15]: Step 14 of 20 Creating new system files
[P1507-C 2012-06-26 14:07:16]: Step 15 of 20 Adding jbundle package
[P1507-C 2012-06-26 14:09:52]: Step 16 of 20 Backing up system data
[P1507-C 2012-06-26 14:10:07]: Step 17 of 20 Setting up shared partition data
[P1507-C 2012-06-26 14:10:07]: Step 18 of 20 Checking package sanity in
installation
[P1507-C 2012-06-26 14:10:08]: Step 19 of 20 Unmounting and cleaning up temporary
file systems
[P1507-C 2012-06-26 14:10:11]: Step 20 of 20 Setting da0s2 as new active partition
[Status 2012-06-26 14:10:25]: Trying to Connect to Node: P1507-C
[Status 2012-06-26 14:10:32]: Rebooting P1507-C

```

[Status 2012-06-26 14:10:32]: Upgrade completed with 0 errors
Success

show chassis nonstop-upgrade node-group

Syntax	show chassis nonstop-upgrade node-group <i>node-group-name</i>
Release Information	Command introduced in Junos OS Release 12.2 for the QFX Series.
Description	Display the status of the Node group after the most recent nonstop software upgrade (NSSU).
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Performing a Nonstop Software Upgrade on the QFabric System on page 134 • request system software nonstop-upgrade on page 468
List of Sample Output	show chassis nonstop-upgrade node-group on page 475
Output Fields	Table 26 on page 475 lists the output fields for the show chassis nonstop-upgrade node-group command. Output fields are listed in the approximate order in which they appear.

Table 26: show chassis nonstop-upgrade node-group Output Fields

Field Name	Field Description
Item	Node device slot number.
Status	State of Node device: <ul style="list-style-type: none"> • Error—Node device is in an error state. • Offline—Node device is powered down. • Online—Node device is online and running.
Reason	Reason for the state (if the line card is offline).

Sample Output

show chassis nonstop-upgrade node-group

```

user@qfabric> show chassis nonstop-upgrade node-group NW-NG-0
Item           Status           Reason
P1550-C       Online

```


CHAPTER 27

NTP Operational Commands

- `show ntp associations`
- `show ntp status`

show ntp associations

Syntax	<code>show ntp associations</code> <code><no-resolve></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display Network Time Protocol (NTP) peers and their state.
Options	none —Display NTP peers and their state. no-resolve —(Optional) Suppress symbolic addressing.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show ntp status on page 480
List of Sample Output	show ntp associations on page 479
Output Fields	Table 27 on page 478 describes the output fields for the show ntp associations command. Output fields are listed in the approximate order in which they appear.

Table 27: show ntp associations Output Fields

Field Name	Field Description
remote	Address or name of the remote NTP peer.
refid	Reference identifier of the remote peer. If the reference identifier is not known, this field shows a value of 0.0.0.0 .
st	Stratum of the remote peer.
t	Type of peer: b (broadcast), l (local), m (multicast), or u (unicast).
when	When the last packet from the peer was received.
poll	Polling interval, in seconds.
reach	Reachability register, in octal.
delay	Current estimated delay of the peer, in milliseconds.
offset	Current estimated offset of the peer, in milliseconds.
disp	Current estimated dispersion of the peer, in milliseconds.

Table 27: show ntp associations Output Fields (*continued*)

Field Name	Field Description
<i>peer-name</i>	Peer name and status of the peer in the clock selection process: <ul style="list-style-type: none">• space—Discarded because of a high stratum value or failed sanity checks.• x—Designated "falseticker" by the intersection algorithm.• .—Culled from the end of the candidate list.• — —Discarded by the clustering algorithm.• +—Included in the final selection set.• #—Selected for synchronization, but the distance exceeds the maximum.• *—Selected for synchronization.• o—Selected for synchronization, but the packets-per-second (pps) signal is in use.

Sample Output

show ntp associations

```
user@host> show ntp associations
      remote      refid      st t when poll reach  delay  offset  disp
=====
*wolfe-gw.junipe tick.ucla.edu  2 u  43  64  377   1.86   0.319   0.08
```

show ntp status

Syntax	<code>show ntp status</code> <code><no-resolve></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the values of internal variables returned by Network Time Protocol (NTP) peers.
Options	none —Display the values of internal variables returned by NTP peers. no-resolve —(Optional) Suppress symbolic addressing.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> show ntp associations on page 478
List of Sample Output	show ntp status on page 481
Output Fields	Table 28 on page 480 describes the output fields for the show ntp status command. Output fields are listed in the approximate order in which they appear.

Table 28: show ntp status Output Fields

Field Name	Field Description
status	System status word, a code representing the status items listed.
leap_none	Indicates a normal synchronized state with no leap seconds imminent. Other options could be leap_add_sec , leap_del_sec , or leap_alarm , indicating a leap second will be added, deleted, or a leap second requirement is upcoming.
sync_ntp	Indicates the current synchronization source, in this case, an NTP server. Other options include sync_alarm and sync_unspec , both indicating that the router has not been synched.
x events	Indicates the number of events that have occurred since that last code change. An event is often the receipt of an NTP polling message.
event_peer/strat_chg	Describes the most recent event, in this case, the stratum of the peer server changed.
version	A detailed description of the version of NTP being used.
processor	Indicates the current hardware platform and version of the processor.
system	Detailed description of the name and version of the operating system in use.
leap	The number of leap seconds in use.

Table 28: show ntp status Output Fields (*continued*)

Field Name	Field Description
stratum	The stratum of the peer server. Anything greater than 1 is a secondary reference source, and the number roughly represents the number of hops away from the stratum 1 server.. Stratum 1 is a primary reference, such as an atomic clock.
precision	The precision of the peer clock, how precisely the frequency and time can be maintained with this particular timekeeping system.
rootdelay	The total roundtrip delay to the primary reference source, in seconds.
rootdispersion	The maximum error relative to the primary reference source, in seconds.
peer	An identification number of the peer in use.
refid	Reference identifier of the remote peer. If the reference identifier is not known, this field shows a value of 0.0.0.0.
reftime	The local time, in timestamp format, when the local clock was last updated. If the local clock has never been synchronized, the value is zero.
poll	The NTP broadcast message polling interval, in seconds.
clock	The current time on the local router clock.
state	The current mode of NTP operation, where 1 is symmetric active, 2 is symmetric passive, 3 is client, 4 is server, and 5 is broadcast.
offset	Current estimated offset of the peer, in milliseconds. Indicates the time difference between the reference clock and the local clock.
frequency	The frequency of the clock.
jitter	Indicates the magnitude of jitter, in milliseconds, between several time queries.
stability	A measure of how well this clock can maintain a constant frequency.

Sample Output

show ntp status

```

user@host> show ntp status
assID=0 status=0544 leap_none, sync_local_proto, 4 events, event_peer/strat_chg,
version="ntpd 4.2.2p1@1.1570-o Tue May 19 13:57:55 UTC 2009 (1)",
processor="x86_64", system="Linux/2.6.18-164.el5", leap=00, stratum=4,
precision=-10, rootdelay=0.000, rootdispersion=11.974, peer=59475,
refid=LOCAL(0),
reftime=d495c32c.0e71eaf2 Mon, Jan 7 2013 13:57:00.056, poll=10,
clock=d495c32c.cebd43bd Mon, Jan 7 2013 13:57:00.807, state=4,
offset=0.000, frequency=0.000, jitter=0.977, noise=0.977,
stability=0.000, tai=0

```


CHAPTER 28

QFabric System Operational Commands

- request chassis beacon
- request chassis cb
- request chassis fpc
- request chassis routing-engine master
- request fabric administration power-off interconnect-device
- request fabric administration power-off interconnect-device fpc
- request fabric administration power-off node-device
- show chassis ethernet-switch interconnect-device fpc
- show chassis ethernet-switch interconnect-device cb
- show chassis environment cb

request chassis beacon

Syntax (QFX Series)	<code>request chassis beacon</code> <code><all (off on)></code> <code><fpc slot-number (off on)></code> <code><interconnect-device name (cb slot-number fpc slot-number (off on)></code> <code><node-device name (off on)></code>
Release Information	Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	(QFX Series only) Enable or disable the beacon LED on a QFX Series device.
Options	<p>all—Turn the beacon LED either on or off on all QFabric system Interconnect and Node devices.</p> <p>cb slot-number—Turn the beacon LED either on or off on the Control Board of the QFX3008-I Interconnect device.</p> <p>fpc slot-number—Turn the beacon LED either on or off on the Flexible PIC Concentrator on the standalone QFX3500 switch or the Interconnect device.</p> <p>interconnect-device name—Turn the beacon LED either on or off on the Interconnect device.</p> <p>node-device name—Turn the beacon LED either on or off on the Node device.</p> <p>off—Turn the beacon LED off.</p> <p>on—Turn the beacon LED on.</p>
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none">• show chassis beacon on page 590
List of Sample Output	request chassis beacon fpc 0 on (QFX Series) on page 484 request chassis beacon node-device (QFabric System) on page 484 request chassis beacon on interconnect-device fpc (QFabric System) on page 485
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis beacon fpc 0 on (QFX Series)

```
user@switch> request chassis beacon fpc 0 on

Beacon set to ON
```

request chassis beacon node-device (QFabric System)

```
user@switch> request chassis beacon node-device node1 on
```

node1 ON

request chassis beacon on interconnect-device fpc (QFabric System)

user@switch> request chassis beacon on interconnect-device fpc 2

FPC 2 ON

request chassis cb

List of Syntax	Syntax on page 486 Syntax (TX Matrix Router) on page 486 Syntax (TX Matrix Plus Router) on page 486 Syntax (QFabric System) on page 486
Syntax	<code>request chassis cb (offline online) slot <i>slot-number</i></code>
Syntax (TX Matrix Router)	<code>request chassis cb (offline online) <slot <i>slot-number</i> lcc <i>number</i> slot <i>cb-slot-number</i> scc <i>number</i> slot <i>cb-slot-number</i>></code>
Syntax (TX Matrix Plus Router)	<code>request chassis cb (offline online) <slot <i>slot-number</i> lcc <i>number</i> slot <i>cb-slot-number</i> sfc <i>number</i> slot <i>cb-slot-number</i>></code>
Syntax (QFabric System)	<code>request chassis cb (offline online) interconnect-device <i>name</i> slot <i>slot-number</i> <interconnect-device <i>name</i> slot <i>slot-number</i> (offline online)></code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS 9.4 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS 11.3 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p>
Description	(M120, M320, and MX Series routers and T Series routers, QFabric systems, and EX8200 switches only) Control the operation of the Control Board (CB). For information about the meaning of “CBs” on the switches, see <i>EX Series Switches Hardware and CLI Terminology Mapping</i> .
Options	offline —Take the Control Board offline.



NOTE: On a QFabric system, to bring the backup Control Board on a QFX3008-I Interconnect device offline, issue the `request chassis cb slot backup-slot-number offline` command.



NOTE: Only backup Control Board can be turned offline or online. To turn a Control Board offline or to bring it back online, the Routing Engine should be turned offline first.

online—Bring the Control Board online.

interconnect-device *name*—(QFabric systems only) (Optional) Bring the QFX3008-I Interconnect device Control Board either offline or online:

slot slot-number—Control Board slot number:

- (TX Matrix and TX Matrix Plus routers only) On a TX Matrix router, if you specify the number of the T640 router by using the **lcc number** option (the recommended method), replace **cb-slot-number** with a value from 0 through 1.

Likewise, on a TX Matrix Plus router, if you specify the number of the T1600 or T4000 router by using the **lcc number** option (the recommended method), replace **cb-slot-number** with a value from 0 through 1.

- M320 router—Replace **slot-number** with a value from 0 through 1.
- MX480/MX240 routers—Replace **slot-number** with a value from 0 through 1.
- MX960 router—Replace **slot-number** with a value from 0 through 2.
- MX2020 and MX2010 routers—Replace **slot-number** with 0 or 1.
- EX8208 switch—Replace **slot-number** with a value from 0 through 2.
- EX8216 switch—Replace **slot-number** with a value from 0 through 1.
- QFabric System—Replace **slot-number** with a value from 0 through 1.

lcc number—(TX Matrix, TX Matrix Plus routers only) (Optional) Line-card chassis number.

Replace **number** with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

sfc number—(TX Matrix Plus routers only) (Optional) Change the CB status for the TX Matrix Plus router (switch-fabric chassis). Replace **number** with 0.

Required Privilege Level maintenance

Related Documentation

- [show chassis environment cb on page 545](#)
- *Understanding Switching Control Board Redundancy*
- *Routing Engine and Switching Control Board Redundancy Configuration Statements*

List of Sample Output

- [request chassis cb on page 488](#)
- [request chassis cb interconnect-device \(QFabric System\) on page 488](#)
- [request chassis cb \(MX2020 Router\) on page 488](#)
- [request chassis cb \(MX2010 Router\) on page 488](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis cb

```
user@host> request chassis cb offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

request chassis cb interconnect-device (QFabric System)

```
user@switch> request chassis cb interconnect-device interconnect1 offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

request chassis cb (MX2020 Router)

```
user@host> request chassis cb offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

request chassis cb (MX2010 Router)

```
user@host> request chassis cb offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

request chassis fpc

List of Syntax	Syntax on page 489 Syntax (TX Matrix and TX Matrix Plus Routers) on page 489 Syntax (MX Series Routers) on page 489 Syntax (MX2020 3D Universal Edge Routers) on page 489 Syntax (MX2010 3D Universal Edge Routers) on page 489 Syntax (QFabric System) on page 489 Syntax (PTX Series Packet Transport Routers) on page 489
Syntax	<code>request chassis fpc (offline online restart) slot <i>slot-number</i></code>
Syntax (TX Matrix and TX Matrix Plus Routers)	<code>request chassis fpc (offline online restart) slot <i>slot-number</i> <lcc <i>number</i>></code>
Syntax (MX Series Routers)	<code>request chassis fpc (offline online restart) slot <i>slot-number</i> <all-members> <local> <member <i>member-id</i>></code>
Syntax (MX2020 3D Universal Edge Routers)	<code>request chassis fpc (offline online restart) slot <i>slot-number</i></code>
Syntax (MX2010 3D Universal Edge Routers)	<code>request chassis fpc (offline online restart) slot <i>slot-number</i></code>
Syntax (QFabric System)	<code>request chassis fpc <interconnect-device <i>name</i> slot <i>slot-number</i> (offline online)> <(offline online) interconnect-device <i>name</i> slot <i>slot-number</i>> <slot <i>slot-number</i> interconnect-device <i>name</i> (offline online)></code>
Syntax (PTX Series Packet Transport Routers)	<code>request chassis fpc (offline online restart) slot <i>slot-number</i></code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS 11.3 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	(M20, M40, M40e, M120, M160, M320, MX Series, and T Series routers, QFabric systems, EX Series switches, and PTX Series Packet Transport Routers only) Control the operation of the Flexible PIC Concentrator (FPC). For information about the meaning of “FPCs” on the switches, see <i>EX Series Switches Hardware and CLI Terminology Mapping</i> .



NOTE: Beginning in Junos OS Release 12.3, it is possible that FPCs brought offline using the request chassis fpc slot *fpc-slot* offline operational-mode CLI command can come online during a configuration commit or power-supply replacement procedure. As an alternative, use the set fpc *fpc-slot* power off configuration-mode command at the [edit chassis] hierarchy level to ensure that the FPCs remain offline.

Options **offline**—Take the FPC offline.

online—Bring the FPC online.

interconnect-device *name*—(QFabric systems only) Bring the Flexible Port Concentrator (FPC) on the QFX3008-I Interconnect device either offline or online:

- (QFabric System) On a QFabric system, specify the name of the QFX3008-I Interconnect device containing the Flexible Port Concentrator (FPC) you want to bring either offline or online.

restart—Restart the FPC.

slot *slot-number*—FPC slot number:

- M20 router—0 through 3.
- M120 router—0 through 5.
- MX240 router—0 through 2. On the MX240 router, slot-number corresponds to the Dense Port Concentrator (DPC) slot number. If an MPC is installed, slot-number corresponds to the MPC slot number.
- MX480 router—0 through 5. On the MX480 router, slot-number corresponds to the Dense Port Concentrator (DPC) slot number. If an MPC is installed, slot-number corresponds to the MPC slot number.
- MX960 router—0 through 11. On the MX960 router, slot-number corresponds to the Dense Port Concentrator (DPC) slot number. If an MPC is installed, slot-number corresponds to the MPC slot number.
- MX2020 router—0 through 19.
- MX2010 router—0 through 9.
- TX Matrix and TX Matrix Plus routers only—On the TX Matrix router, if you specify the number of the T640 router by using the **lcc *number*** option (the recommended method), replace **slot-number** with a value from 0 through 7. Otherwise, replace **slot-number** with a value from 0 through 31.

Likewise, on a TX Matrix Plus router, if you specify the number of the T1600 or T4000 router by using the **lcc *number*** option (the recommended method), replace **slot-number** with a value from 0 through 7. Otherwise, replace **slot-number** with a value from 0 through 31. In case of TX Matrix Plus router with 3D SIBs, replace

slot-number with a value from 0 through 63. For example, the following commands have the same result:

```
user@host> request chassis fpc lcc 1 slot 1 offline
user@host> request chassis fpc slot 9 offline
```

- Other routers—0 through 7.
- QFabric System—Replace *slot-number* with a value from 0 through 2.
- EX Series switches:
 - EX4200 switches in a Virtual Chassis configuration—Replace *slot-number* with a value from 0 through 9.
 - EX6210 switches—Replace *slot-number* with a value from 0 through 9.



NOTE: These commands are not supported for slots 4 and 5 when a Switch Fabric and Routing Engine (SRE) module is installed in those slots. These commands are supported for slots 4 and 5 only if a line card is installed in them.

- EX8208 switches—Replace *slot-number* with a value from 0 through 7.
- EX8216 switches—Replace *slot-number* with a value from 0 through 15.
- PTX5000 Packet Transport Router—Replace *slot-number* with a value from 0 through 7.

all-members—(MX Series routers only) (Optional) Change FPC status of all members of the Virtual Chassis configuration.

local—(MX Series routers only) (Optional) Change FPC status of the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Change FPC status of the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

lcc *number*—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.

- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

Required Privilege Level maintenance

Related Documentation

- [show chassis fpc on page 720](#)
- *show chassis fpc-feb-connectivity*
- *show chassis fabric fpcs*
- *Configuring the Junos OS to Make a Flexible PIC Concentrator Stay Offline*
- *Configuring the Junos OS to Resynchronize FPC Sequence Numbers with Active FPCs when an FPC Comes Online*
- *MX960 Flexible PIC Concentrator Description*

List of Sample Output

- [request chassis fpc on page 492](#)
- [request chassis fpc \(MX Series Routers with Media Services Blade \[MSB\]\) on page 492](#)
- [request chassis fpc \(MX2020 Router\) on page 492](#)
- [request chassis fpc \(MX2010 Router\) on page 492](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

[request chassis fpc](#)

```
user@host> request chassis fpc online slot 0
FPC 0 already online
```

[request chassis fpc \(MX Series Routers with Media Services Blade \[MSB\]\)](#)

```
user@host> request chassis fpc slot 0
Possible completions:
offline           Take FPC offline
online           Bring FPC online
restart          Restart FPC
```

[request chassis fpc \(MX2020 Router\)](#)

```
user@host >request chassis fpc online slot 2
FPC 2 already online
```

[request chassis fpc \(MX2010 Router\)](#)

```
user@host >request chassis fpc offline slot 5
Offline initiated, use "show chassis fpc" to verify
```

request chassis routing-engine master

List of Syntax	Syntax on page 493 Syntax (M Series, MX Series, T Series Routers) on page 493 Syntax (TX Matrix Routers) on page 493 Syntax (TX Matrix Plus Routers) on page 493 Syntax (MX Series Virtual Chassis) on page 493 Syntax (QFX Series) on page 493
Syntax	request chassis routing-engine master (acquire release switch) <force> <no-confirm>
Syntax (M Series, MX Series, T Series Routers)	request chassis routing-engine master (acquire release switch <check>) <no-confirm>
Syntax (TX Matrix Routers)	request chassis routing-engine master (acquire release switch) (lcc <i>number</i> scc all-chassis) <force> <no-confirm>
Syntax (TX Matrix Plus Routers)	request chassis routing-engine master (acquire release switch) (lcc <i>number</i> sfc all-chassis all-lcc) <force> <no-confirm>
Syntax (MX Series Virtual Chassis)	request chassis routing-engine master (acquire release switch <check>) <all-members> <local> <member <i>member-id</i> > <no-confirm>
Syntax (QFX Series)	request chassis routing-engine master (release switch) <check> <interconnect-device <i>name</i> > <node-group <i>name</i> > <no-confirm>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>all-chassis option added in Junos OS Release 8.0.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.3 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	For routers or switches with multiple Routing Engines, control which Routing Engine is the master.



CAUTION: (Routing matrix based on the TX Matrix or TX Matrix Plus routers only) Within the routing matrix, we recommend that all Routing Engines run the same Junos OS Release. If you run different releases on the Routing Engines and a change in mastership occurs on any backup Routing Engine in the routing matrix, one or all routers (in a routing matrix based on the TX Matrix router or in a routing matrix based on a TX Matrix Plus router) might become logically disconnected from the TX Matrix router and cause data loss. For more information, see the [TX Matrix Router Hardware Guide](#) or the *Junos OS High Availability Library for Routing Devices*.



NOTE: Successive graceful Routing Engine switchover events must be a minimum of 240 seconds (4 minutes) apart after both Routing Engines have come up.

If the router or switch displays a warning message similar to “Standby Routing Engine is not ready for graceful switchover. Packet Forwarding Engines that are not ready for graceful switchover might be reset,” do not attempt switchover. If you choose to proceed with switchover, only the Packet Forwarding Engines that were not ready for graceful switchover are reset. None of the Flexible PIC concentrators (FPCs) should spontaneously restart. We recommend that you wait until the warning no longer appears and then proceed with the switchover.

You will receive an error message stating “Command aborted. Not ready for mastership switch, try after n seconds” when this command is re-entered before 240 seconds have elapsed on EX Series switches.



NOTE: On a QFabric system, to avoid traffic loss on the network Node group, switch mastership of the routing engine to the backup routing engine, and then reboot.

Options **acquire**—Attempt to become the master Routing Engine.

release—Request that the other Routing Engine become the master.

switch—Toggle mastership between Routing Engines.



NOTE: The **acquire** option should be used with caution because acquiring a Routing Engine may result in a corrupted database. If possible, use the **switch** option instead.

The **acquire**, **release**, and **switch** options have the following suboptions:

all-chassis—(TX Matrix and TX Matrix Plus routers only) On a routing matrix composed of a TX Matrix router and the attached T640 routers, switch mastership on all the Routing Engines in the routing matrix. Likewise, on a routing matrix composed of a TX Matrix Plus router and the attached T1600 or T4000 routers, switch mastership on all the Routing Engines in the routing matrix.

all-lcc—(TX Matrix Plus routers only) Request to acquire mastership for all line-card chassis (LCC).

all-members—(MX Series routers only) (Optional) Control Routing Engine mastership on the Routing Engines in all member routers of the Virtual Chassis configuration.

check—(QFabric systems, MX104, MX480, MX960, MX2010, and MX2020 routers, and PTX5000 routers only) (Optional) Available only with the **switch** option. Check graceful switchover status of the standby Routing Engine before toggling mastership between Routing Engines.

interconnect-device *name*—(QFabric systems only) (Optional) Control Routing Engine mastership on the Routing Engines on an Interconnect device.

lcc *number*—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Control Routing Engine mastership on the Routing Engines in the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Control Routing Engine mastership on the Routing Engines of the specified member in the Virtual Chassis Configuration. Replace *member-id* with a value of 0 or 1.

no-confirm—(Optional) Do not request confirmation for the switch.

node-group *name*—(QFabric systems only) (Optional) Control Routing Engine mastership on the Routing Engines on a Node group.

scc—(TX Matrix routers only) TX Matrix (switch-card chassis).

sfc—(TX Matrix Plus routers only) TX Matrix Plus router (or switch-fabric chassis).

force—(Optional) Available only with the **acquire** option. Force the change to a new master Routing Engine.



NOTE: The **force** option is not supported on the M Series, MX Series, or T Series routers.

Additional Information

Because both Routing Engines are always running, the transition from one to the other as the master Routing Engine is immediate. However, the changeover interrupts communication to the System and Switch Board (SSB). The SSB takes several seconds to reinitialize the Flexible PIC Concentrators (FPCs) and restart the PICs. Interior gateway protocol (IGP) and BGP convergence times depend on the specific network environment.

By default, the Routing Engine in slot 0 (**RE0**) is the master and the Routing Engine in slot 1 (**RE1**) is the backup. To change the default master Routing Engine, include the **routing-engine** statement at the **[edit chassis redundancy]** hierarchy level in the configuration. For more information, see the *Junos OS Administration Library for Routing Devices*

To have the backup Routing Engine become the master Routing Engine, use the **request chassis routing-engine master switch** command. If you use this command to change the master and then restart the chassis software for any reason, the master reverts to the default setting.



NOTE: Although the configurations on the two Routing Engines do not have to be the same and are not automatically synchronized, we recommend making both configurations the same.

Required Privilege Level maintenance

Related Documentation

- [show chassis routing-engine on page 982](#)
- *Configuring Routing Engine Redundancy*
- *Switching the Global Master and Backup Roles in a Virtual Chassis Configuration*

List of Sample Output

- [request chassis routing-engine master acquire on page 497](#)
- [request chassis routing-engine master switch on page 497](#)
- [request chassis routing-engine master switch check on page 497](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis routing-engine master acquire

```
user@host> request chassis routing-engine master acquire

warning: Traffic will be interrupted while the PFE is re-initialized

warning: The other routing engine's file system could be corrupted

Reset other routing engine and become master ? [yes,no] (no)
```

request chassis routing-engine master switch

```
user@host> request chassis routing-engine master switch

warning: Traffic will be interrupted while the PFE is re-initialized
Toggle mastership between Routing Engines ? [yes,no] (no) yes

Resolving mastership...
Complete. The other Routing Engine becomes the master.
```

Switch mastership back to the local Routing Engine:

```
user@host> request chassis routing-engine master switch

warning: Traffic will be interrupted while the PFE is re-initialized
Toggle mastership between routing engines ? [yes,no] (no) yes

Resolving mastership...
Complete. The local routing engine becomes the master.
```

request chassis routing-engine master switch check

```
Usage shown for M Series, MX Series, and T Series routers.

{master}[edit]

user@host> request chassis routing-engine master switch check

warning: Standby Routing Engine is not ready for graceful switchover.

{master}[edit]

user@host> request chassis routing-engine master switch check
Switchover Ready

You can similarly check the backup Routing Engine.
```

request fabric administration power-off interconnect-device

Syntax	<code>request fabric administration power-off interconnect--device (serial-id alias-name)</code>
Release Information	Command introduced in Junos OS Release 14.1X53-D15 for the QFX Series.
Description	<p>In QFX3000-G QFabric systems, you can use this command to power off QFX3008-I Interconnect devices.</p> <p>This command systematically takes the device offline and gracefully shuts down the device while preserving system state information. A message appears on the console or console log, confirming that the operating system has stopped on the device.</p>
Options	<code>serial-id alias-name</code> —Provide the serial ID or alias name of the device.
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none">• request fabric administration power-off interconnect-device fpc on page 499• request fabric administration power-off node-device on page 501• show fabric administration inventory
List of Sample Output	request fabric administration power-off interconnect-device on page 498
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request fabric administration power-off interconnect-device

```
user@qfabric request fabric administration power-off interconnect-device IC-12345
STEP 1 of 7 (Acquiring lock):
Acquiring lock to perform this operation
Acquired lock to perform this operation
STEP 2 of 7 (Performing pre-checks):
interconnect-device IC-12345 is online
STEP 3 of 7 (Gracefully offlining the interconnect):
Disabling fabric protocol on interconnect-device
Disabled fabric protocol on interconnect-device
STEP 4 of 7 (Waiting for convergence):
Waiting for convergence(this will take few minutes)
Convergence complete
STEP 5 of 7 (Powering-off the interconnect):
Now, powering-off the interconnect-device (this may take some time)
Powered-off the interconnect-device
STEP 6 of 7 (Updating inventory):
Removing the interconnect-device - IC-A0004 from inventory
interconnect-device - IC-12345 is removed from inventory
STEP 7 of 7 (Releasing lock):
Releasing the lock
```


request fabric administration power-off interconnect-device fpc

Syntax	<code>request fabric administration power-off interconnect--device (<i>serial-id</i> <i>alias-name</i>) fpc <i>slot-number</i></code>
Release Information	Command introduced in Junos OS Release 14.1X53-D15 for the QFX Series.
Description	<p>In QFX3000-G QFabric systems, you can use this command to power off a 16-Port QSFP+ front card in a QFX3008-I Interconnect device.</p> <p>A message appears on the console or console log, confirming that the operating system has stopped on the device.</p>
Options	<p>serial-id alias-name—Provide the serial ID or alias name of the QFX3008-I Interconnect device.</p> <p>slot slot-number—Provide the slot number of the 16-Port QSFP+ front card in the QFX3008-I Interconnect device. The range of slot numbers is 0 through 15</p>
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none"> • request fabric administration power-off interconnect-device on page 498 • request fabric administration power-off node-device on page 501 • show fabric administration inventory
List of Sample Output	request fabric administration power-off interconnect-device fpc 13 on page 499
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request fabric administration power-off interconnect-device fpc 13

```

user@qfabric request fabric administration power-off interconnect-device IC-12345 fpc 13
STEP 1 of 6 (Acquiring lock):
Acquiring lock to perform this operation
Acquired lock to perform this operation
STEP 2 of 6 (Performing pre-checks):
interconnect-device IC-12345 is online
STEP 3 of 6 (Gracefully offlining the interconnect linecard):
Gracefully offlining the fpc
fpc is successfully offlined
STEP 4 of 6 (Waiting for convergence):
Waiting for convergence(this will take few minutes)
request fabric administration power-off interconnect-device IC-12345
Convergence complete
STEP 5 of 6 (Powering-off the interconnect linecard):
Now, powering-off the fpc on the interconnect-device
Powered-off the fpc on the interconnect-device
STEP 6 of 6 (Releasing lock):
Releasing the lock

```


request fabric administration power-off node-device

Syntax	<code>request fabric administration power-off node-device (serial-id alias-name)</code>
Release Information	Command introduced in Junos OS Release 14.1X53-D15 for the QFX Series.
Description	<p>In QFX3000-G QFabric systems, you can use this command to power off QFX3500, QFX3600, QFX5100-48S, QFX5100-48T, and QFX5100-24Q devices in server Node groups, redundant server Node groups, and network Node groups. In QFX3000-M QFabric systems, you can use this command to power off QFX5100-24Q Interconnect devices and QFX3600-I Interconnect devices.</p> <p>This command systematically takes the device offline and gracefully shuts down the device while preserving system state information. A message appears on the console or console log, confirming that the operating system has stopped on the device.</p>
Options	<code>serial-id alias-name</code> —Provide the serial ID or alias name of the device.
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none"> • request fabric administration power-off interconnect-device on page 498 • request fabric administration power-off interconnect-device fpc on page 499 • show fabric administration inventory
List of Sample Output	request fabric administration power-off node-device on page 501
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request fabric administration power-off node-device

```

user@qfabric request fabric administration power-off node-device ED1234
STEP 1 of 8 (Acquiring lock):
Acquiring lock to perform this operation
Acquired lock to perform this operation
STEP 2 of 8 (Performing pre-checks):
node-device ED1491 is online
STEP 3 of 8 (Mastership switch-over):
node-device ED1491 is Server Node-group
STEP 4 of 8 (Gracefully offlining the node-device):
node-device is being offlined
node-device is successfully offlined
STEP 5 of 8 (Waiting for convergence):
Waiting for convergence(this will take few minutes)
Convergence complete
STEP 6 of 8 (Powering-off the node-device):
Now, powering-off the node-device
Powered-off the node-device
STEP 7 of 8 (Updating inventory):
Removing the node-device - ED1491 from inventory
node-device - ED1491 is removed from inventory

```

STEP 8 of 8 (Releasing lock):
Releasing the lock

show chassis ethernet-switch interconnect-device fpc

Syntax	show chassis ethernet-switch interconnect-device <i>name</i> fpc <detail> <port <i>number</i> > <slot <i>number</i> >
Release Information	Command introduced in Junos OS Release 12.2 for the QFX Series.
Description	(QFX3000-G QFabric systems only) Display Ethernet switch information for the front card Flexible Port Concentrators (FPCs) in an Interconnect device.
Options	<p>none—Display Ethernet switch information about each connected port on each online FPC in the Interconnect device.</p> <p>detail—(Optional) Display detailed status information for all FPCs or for the FPC in the specified slot in the Interconnect device.</p> <p>port <i>number</i>—(Optional) Display Ethernet switch information about a specific port on an FPC in the Interconnect device.</p> <p>slot <i>number</i>—(Optional) Display Ethernet switch information about an FPC in a specific slot in the Interconnect device.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>chassis</i> • show chassis environment fpc on page 656 • show chassis ethernet-switch interconnect-device cb on page 528
List of Sample Output	show chassis ethernet-switch interconnect-device fpc on page 507 show chassis ethernet-switch interconnect-device fpc detail on page 509 show chassis ethernet-switch fpc detail slot on page 516 show chassis ethernet-switch fpc interconnect-device port on page 523 show chassis ethernet-switch fpc interconnect-device detail port on page 524
Output Fields	Table 29 on page 504 lists the output fields for the show chassis ethernet-switch interconnect-device fpc command. Output fields are listed in the approximate order in which they appear.

Table 29: show chassis ethernet-switch interconnect-device fpc Output Fields

Field Name	Field Description
Link is good on port n connected to device	Information about the link between each port on the FPC's Ethernet switch and one of the following devices: <ul style="list-style-type: none"> • FWD-SWITCH-0 • FWD-SWITCH-1 • CB0 • CB1
Speed is	Speed at which the Ethernet link is running: 10 Mb When the device is RE or Other RE on the TX Matrix router, the speed is 1000 Mb .
Duplex is	Duplex type of the Ethernet link: full or half .
Autonegotiate is Enabled (or Disabled)	By default, built-in Fast Ethernet ports on a PIC autonegotiate whether to operate at 10 Mbps or 100 Mbps. All other interfaces automatically choose the correct speed based on the PIC type and whether the PIC is configured to operate in multiplexed mode (using the no-concatenate statement at the [edit chassis] hierarchy level, as described in the <i>Junos OS System Basics Configuration Guide</i>).
TX Octets	Number of octets sent.
TX Packets 64 Octets	Number of transmitted frames of size 64 octets.
TX Packets 65-127 Octets	Number of transmitted frames of size 65 through 127 octets.
TX Packets 128-255 Octets	Number of transmitted frames of size 128 through 255 octets.
TX Packets 256-511 Octets	Number of transmitted frames of size 256 through 511 octets.
TX Packets 512-1023 Octets	Number of transmitted frames of size 512 through 1023 octets.
TX Packets 1024-1518 Octets	Number of transmitted frames of size 1024 through 1518 octets.
TX Packets 1519-2047 Octets	Number of transmitted frames of size 1519 through 2047 octets.
TX Packets 2048-4095 Octets	Number of transmitted frames of size 2048 through 4095 octets.
TX Packets 4096-9216 Octets	Number of transmitted frames of size 4096 through 9216 octets.
TX Packets 9217-16383 Octets	Number of transmitted frames of size 9217 through 16383 octets.
TX Multicast packets	Number of multicast packets sent.

Table 29: show chassis ethernet-switch interconnect-device fpc Output Fields (*continued*)

Field Name	Field Description
TX Broadcast packets	Number of broadcast packets sent.
TX Single Collision frames	Number of packets sent after one collision.
TX Mult. Collision frames	Number of packets sent after multiple collisions.
TX Late Collision Frames	Number of packets aborted during sending because of collisions after 64 bytes.
TX Excessive collisions	Number of packets not sent because of too many collisions.
TX Collision frames	Number of collision packets sent.
TX PAUSEMAC Ctrl Frames	Number of Media Access Control (MAC) frames containing PAUSE commands sent.
TX MAC ctrl frames	Number of MAC control packets sent.
TX Frame deferred Xmns	Number of frames deferred in x milliseconds.
TX Oversize Packets	Number of oversized packets sent.
TX Jabbers	Total number of frames sent that exceed the maximum byte count and contain CRC errors .
TX FCS Error Counter	Number of packets discarded because of frame check sequence errors.
TX Fragment Counter	Number of fragmented packets sent.
TX Byte Counter	Number of bytes sent.
RX Octets	Number of octets received.
RX Packets 64 Octets	Number of received packets of size 64 octets.
RX Packets 65-127 Octets	Number of received packets of size 65 through 127 octets.
RX Packets 128-255 Octets	Number of received packets of size 128 through 255 octets.
RX Packets 256-511 Octets	Number of received packets of size 256 through 511 octets.
RX Packets 512-1023 Octets	Number of received packets of size 512 through 1023 octets.

Table 29: show chassis ethernet-switch interconnect-device fpc Output Fields (*continued*)

Field Name	Field Description
RX Packets 1024-1518 Octets	Number of received packets of size 65 through 127 octets.
RX Packets 1519-2047 Octets	Number of received packets of size 1519 through 2047 octets.
RX Packets 2048-4095 Octets	Number of received packets of size 2048 through 4095 octets.
RX Packets 4096-9216 Octets	Number of received packets of size 4096 through 9216 octets.
RX Multicast Packets	Number of multicast packets received.
RX Broadcast Packets	Number of broadcast packets received.
RX FCS Errors	Number of packets discarded because of frame check sequence errors.
RX Align Errors	Number of incomplete octets received.
RX Fragments	Number of fragmented packets received.
RX Symbol errors	Number of symbols received that the router did not correctly decode.
RX Unsupported opcodes	Number of packets received with unsupported op codes.
RX Out of Range Length	Number of packets received with an out of range length.
RX False Carrier Errors	Number of packets received with false carrier errors.
RX Undersize Packets	Number of undersized packets received.
RX Oversize Packets	Number of oversized packets received.
RX Jabbers	Total number of frames received that exceed the maximum byte count and contain CRC errors .
RX 1519-1522 Good Vlan frms	Number of transmitted frames of size 1519 through 1522 octets that are good VLAN frames.
RX MTU Exceed Counter	Number of packets received that exceed the MTU.
RX Control Frame Counter	Number of control frames received.
RX Pause Frame Counter	Number of pause frames received.

Table 29: show chassis ethernet-switch interconnect-device fpc Output Fields (*continued*)

Field Name	Field Description
RX Byte Counter	Number of bytes received.

Sample Output

show chassis ethernet-switch interconnect-device fpc

```

user@qfabric> show chassis ethernet-switch interconnect-device IC-WS001 fpc
Summary for switch on FC0
Link is good on GE port 2 connected to device: FWD-SWITCH-0
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled
  TX Octets          124638
  RX Octets          86496

Link is good on GE port 4 connected to device: FWD-SWITCH-1
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled
  TX Octets          82191
  RX Octets          58979

Link is good on XE port 28 connected to device: CB0
  Speed is 10000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled
  TX Octets          145475
  RX Octets          206828

Link is good on XE port 29 connected to device: CB1
  Speed is 10000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled
  TX Octets           1
  RX Octets           0

Summary for switch on FC1
Link is good on GE port 2 connected to device: FWD-SWITCH-0
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled
  TX Octets          82290
  RX Octets          59443

Link is good on GE port 4 connected to device: FWD-SWITCH-1

```

```

Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          40900
RX Octets          30013

Link is good on XE port 28 connected to device: CB0
Speed is 10000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          89456
RX Octets          123189

Link is good on XE port 29 connected to device: CB1
Speed is 10000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          1
RX Octets          0

root@qfabric> show chassis ethernet-switch interconnect-device IC-WS001 fpc
Summary for switch on FC0
Link is good on GE port 2 connected to device: FWD-SWITCH-0
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          124697
RX Octets          86535

Link is good on GE port 4 connected to device: FWD-SWITCH-1
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          82229
RX Octets          59009

Link is good on XE port 28 connected to device: CB0
Speed is 10000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          145544
RX Octets          206925

Link is good on XE port 29 connected to device: CB1
Speed is 10000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

```

```

TX Octets          1
RX Octets          0

```

Summary for switch on FC1

Link is good on GE port 2 connected to device: FWD-SWITCH-0

```

Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          82327
RX Octets          59472

```

Link is good on GE port 4 connected to device: FWD-SWITCH-1

```

Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          40918
RX Octets          30028

```

Link is good on XE port 28 connected to device: CB0

```

Speed is 10000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          89500
RX Octets          123244

```

Link is good on XE port 29 connected to device: CB1

```

Speed is 10000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          1
RX Octets          0

```

show chassis ethernet-switch interconnect-device fpc detail

```
user@host> show chassis ethernet-switch interconnect-device IC-WS001 fpc detail
```

Port statistics for FC0 switch

Statistics for port 2 connected to device FWD-SWITCH-0:

```

TX Packets 64 Octets      0
TX Packets 65-127 Octets  1
TX Packets 128-255 Octets 121716
TX Packets 256-511 Octets 2200
TX Packets 512-1023 Octets 823
TX Packets 1024-1518 Octets 2
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets          124742
TX Multicast Packets    0
TX Broadcast Packets    1
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions      0

```

```

TX Excessive Collisions      0
TX Collision frames          0
TX PAUSEMAC Ctrl Frames     0
TX MAC ctrl frames          0
TX Frame deferred Xtns      0
TX Frame excessive deferl    0
TX Oversize Packets          0
TX Jabbers                   0
TX FCS Error Counter         0
TX Fragment Counter          0
TX Byte Counter              27391588
RX Packets 64 Octets         0
RX Packets 65-127 Octets     0
RX Packets 128-255 Octets    85924
RX Packets 256-511 Octets    555
RX Packets 512-1023 Octets   86
RX Packets 1024-1518 Octets  1
RX Packets 1519-2047 Octets  0
RX Packets 2048-4095 Octets  0
RX Packets 4096-9216 Octets  0
RX Octets                    86566
RX Multicast Packets         0
RX Broadcast Packets         0
RX FCS Errors                0
RX Align Errors              0
RX Fragments                 0
RX Symbol errors             0
RX Unsupported opcodes       0
RX Out of Range Length       0
RX False Carrier Errors      0
RX Undersize Packets         0
RX Oversize Packets          0
RX Jabbers                   0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter        0
RX Control Frame Counter     0
RX Pause Frame Counter       0
RX Byte Counter              20380581
Statistics for port 4 connected to device FWD-SWITCH-1:
TX Packets 64 Octets         0
TX Packets 65-127 Octets     1
TX Packets 128-255 Octets    80374
TX Packets 256-511 Octets    1347
TX Packets 512-1023 Octets   532
TX Packets 1024-1518 Octets  3
TX Packets 1519-2047 Octets  0
TX Packets 2048-4095 Octets  0
TX Packets 4096-9216 Octets  0
TX 1519-1522 Good Vlan frms 0
TX Octets                    82257
TX Multicast Packets         0
TX Broadcast Packets         1
TX Single Collision frames   0
TX Mult. Collision frames    0
TX Late Collisions           0
TX Excessive Collisions      0
TX Collision frames          0
TX PAUSEMAC Ctrl Frames     0
TX MAC ctrl frames          0
TX Frame deferred Xtns      0
TX Frame excessive deferl    0

```

```

TX Oversize Packets      0
TX Jabbers               0
TX FCS Error Counter     0
TX Fragment Counter      0
TX Byte Counter          18146746
RX Packets 64 Octets     0
RX Packets 65-127 Octets 0
RX Packets 128-255 Octets 58410
RX Packets 256-511 Octets 522
RX Packets 512-1023 Octets 96
RX Packets 1024-1518 Octets 2
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets                59030
RX Multicast Packets     0
RX Broadcast Packets     0
RX FCS Errors            0
RX Align Errors          0
RX Fragments             0
RX Symbol errors         0
RX Unsupported opcodes   0
RX Out of Range Length   0
RX False Carrier Errors  0
RX Undersize Packets     0
RX Oversize Packets      0
RX Jabbers               0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter    0
RX Control Frame Counter 0
RX Pause Frame Counter   0
RX Byte Counter          13882179
Statistics for port 28 connected to device CB0:
TX Packets 64 Octets     0
TX Packets 65-127 Octets 0
TX Packets 128-255 Octets 144334
TX Packets 256-511 Octets 1077
TX Packets 512-1023 Octets 182
TX Packets 1024-1518 Octets 3
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets                145596
TX Multicast Packets     0
TX Broadcast Packets     0
TX PAUSEMAC Ctrl Frames 0
TX Oversize Packets      0
TX FCS Error Counter     0
TX Fragment Counter      0
TX Byte Counter          34262760
RX Packets 64 Octets     0
RX Packets 65-127 Octets 1
RX Packets 128-255 Octets 202090
RX Packets 256-511 Octets 3547
RX Packets 512-1023 Octets 1355
RX Packets 1024-1518 Octets 5
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0

```

```
RX Octets                206998
RX Multicast Packets     0
RX Broadcast Packets     1
RX FCS Errors            0
RX Fragments            0
RX MAC Control Packets   0
RX Out of Range Length   0
RX Undersize Packets     0
RX Oversize Packets      0
RX Jabbers              0
RX Control Frame Counter 0
RX Pause Frame Counter   0
RX Byte Counter          45538262
Statistics for port 29 connected to device CB1:
TX Packets 64 Octets     0
TX Packets 65-127 Octets 1
TX Packets 128-255 Octets 0
TX Packets 256-511 Octets 0
TX Packets 512-1023 Octets 0
TX Packets 1024-1518 Octets 0
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets                1
TX Multicast Packets     0
TX Broadcast Packets     1
TX PAUSEMAC Ctrl Frames 0
TX Oversize Packets      0
TX FCS Error Counter     0
TX Fragment Counter      0
TX Byte Counter          72
RX Packets 64 Octets     0
RX Packets 65-127 Octets 0
RX Packets 128-255 Octets 0
RX Packets 256-511 Octets 0
RX Packets 512-1023 Octets 0
RX Packets 1024-1518 Octets 0
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets                0
RX Multicast Packets     0
RX Broadcast Packets     0
RX FCS Errors            0
RX Fragments            0
RX MAC Control Packets   0
RX Out of Range Length   0
RX Undersize Packets     0
RX Oversize Packets      0
RX Jabbers              0
RX Control Frame Counter 0
RX Pause Frame Counter   0
RX Byte Counter          0
```

Port statistics for FC1 switch

```
Statistics for port 2 connected to device FWD-SWITCH-0:
TX Packets 64 Octets     0
TX Packets 65-127 Octets 1
TX Packets 128-255 Octets 80560
```

```

TX Packets 256-511 Octets 1279
TX Packets 512-1023 Octets 514
TX Packets 1024-1518 Octets 3
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets 82357
TX Multicast Packets 0
TX Broadcast Packets 1
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision frames 0
TX PAUSEMAC Ctrl Frames 0
TX MAC ctrl frames 0
TX Frame deferred Xmsns 0
TX Frame excessive deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 18059906
RX Packets 64 Octets 0
RX Packets 65-127 Octets 0
RX Packets 128-255 Octets 58733
RX Packets 256-511 Octets 639
RX Packets 512-1023 Octets 119
RX Packets 1024-1518 Octets 3
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 59494
RX Multicast Packets 0
RX Broadcast Packets 0
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 13994432
Statistics for port 4 connected to device FWD-SWITCH-1:
TX Packets 64 Octets 0
TX Packets 65-127 Octets 1
TX Packets 128-255 Octets 39971
TX Packets 256-511 Octets 668
TX Packets 512-1023 Octets 290
TX Packets 1024-1518 Octets 3
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0

```

```

TX 1519-1522 Good Vlan frms 0
TX Octets 40933
TX Multicast Packets 0
TX Broadcast Packets 1
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision frames 0
TX PAUSEMAC Ctrl Frames 0
TX MAC ctrl frames 0
TX Frame deferred Xmsns 0
TX Frame excessive deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 9050841
RX Packets 64 Octets 0
RX Packets 65-127 Octets 0
RX Packets 128-255 Octets 29767
RX Packets 256-511 Octets 225
RX Packets 512-1023 Octets 44
RX Packets 1024-1518 Octets 3
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 30039
RX Multicast Packets 0
RX Broadcast Packets 0
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 7043738
Statistics for port 28 connected to device CB0:
TX Packets 64 Octets 0
TX Packets 65-127 Octets 0
TX Packets 128-255 Octets 88500
TX Packets 256-511 Octets 864
TX Packets 512-1023 Octets 163
TX Packets 1024-1518 Octets 6
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets 89533
TX Multicast Packets 0
TX Broadcast Packets 0
TX PAUSEMAC Ctrl Frames 0
TX Oversize Packets 0

```



```

TX FCS Error Counter      0
TX Fragment Counter      0
TX Byte Counter          21038170
RX Packets 64 Octets     0
RX Packets 65-127 Octets 1
RX Packets 128-255 Octets 120531
RX Packets 256-511 Octets 1947
RX Packets 512-1023 Octets 804
RX Packets 1024-1518 Octets 6
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets                123289
RX Multicast Packets     0
RX Broadcast Packets     1
RX FCS Errors            0
RX Fragments             0
RX MAC Control Packets   0
RX Out of Range Length   0
RX Undersize Packets     0
RX Oversize Packets      0
RX Jabbers               0
RX Control Frame Counter 0
RX Pause Frame Counter   0
RX Byte Counter          27110675
Statistics for port 29 connected to device CB1:
TX Packets 64 Octets     0
TX Packets 65-127 Octets 1
TX Packets 128-255 Octets 0
TX Packets 256-511 Octets 0
TX Packets 512-1023 Octets 0
TX Packets 1024-1518 Octets 0
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets                1
TX Multicast Packets     0
TX Broadcast Packets     1
TX PAUSEMAC Ctrl Frames 0
TX Oversize Packets      0
TX FCS Error Counter     0
TX Fragment Counter      0
TX Byte Counter          72
RX Packets 64 Octets     0
RX Packets 65-127 Octets 0
RX Packets 128-255 Octets 0
RX Packets 256-511 Octets 0
RX Packets 512-1023 Octets 0
RX Packets 1024-1518 Octets 0
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets                0
RX Multicast Packets     0
RX Broadcast Packets     0
RX FCS Errors            0
RX Fragments             0
RX MAC Control Packets   0

```

```

RX Out of Range Length      0
RX Undersize Packets        0
RX Oversize Packets         0
RX Jabbers                  0
RX Control Frame Counter    0
RX Pause Frame Counter      0
RX Byte Counter             0

```

```

Port statistics for FC2 switch
Empty fpc slot number 2

```

```

Port statistics for FC3 switch
Empty fpc slot number 3

```

```

Port statistics for FC4 switch
Empty fpc slot number 4

```

```

Port statistics for FC5 switch
Empty fpc slot number 5

```

```

Port statistics for FC6 switch
Empty fpc slot number 6

```

```

Port statistics for FC7 switch
Empty fpc slot number 7

```

show chassis ethernet-switch fpc detail slot

```

user@qfabric> show chassis ethernet-switch fpc detail 0
re0:

```

```

-----
Port statistics for FC0 switch
Statistics for port 2 connected to device FWD-SWITCH-0:
TX Packets 64 Octets      0
TX Packets 65-127 Octets  1
TX Packets 128-255 Octets 121823
TX Packets 256-511 Octets 2200
TX Packets 512-1023 Octets 823
TX Packets 1024-1518 Octets 2
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets                  124849
TX Multicast Packets       0
TX Broadcast Packets       1
TX Single Collision frames 0
TX Mult. Collision frames  0
TX Late Collisions         0
TX Excessive Collisions    0
TX Collision frames        0
TX PAUSEMAC Ctrl Frames    0
TX MAC ctrl frames         0
TX Frame deferred Xmsns    0
TX Frame excessive deferl   0
TX Oversize Packets        0
TX Jabbers                 0
TX FCS Error Counter       0
TX Fragment Counter        0
TX Byte Counter            27414524
RX Packets 64 Octets       0

```

```

RX Packets 65-127 Octets      0
RX Packets 128-255 Octets    85998
RX Packets 256-511 Octets    557
RX Packets 512-1023 Octets   86
RX Packets 1024-1518 Octets   1
RX Packets 1519-2047 Octets   0
RX Packets 2048-4095 Octets   0
RX Packets 4096-9216 Octets   0
RX Octets                     86642
RX Multicast Packets          0
RX Broadcast Packets          0
RX FCS Errors                 0
RX Align Errors               0
RX Fragments                  0
RX Symbol errors              0
RX Unsupported opcodes        0
RX Out of Range Length        0
RX False Carrier Errors       0
RX Undersize Packets          0
RX Oversize Packets           0
RX Jabbers                    0
RX 1519-1522 Good Vlan frms  0
RX MTU Exceed Counter         0
RX Control Frame Counter      0
RX Pause Frame Counter        0
RX Byte Counter               20398564
Statistics for port 4 connected to device FWD-SWITCH-1:
TX Packets 64 Octets          0
TX Packets 65-127 Octets      1
TX Packets 128-255 Octets     80443
TX Packets 256-511 Octets     1347
TX Packets 512-1023 Octets    532
TX Packets 1024-1518 Octets    3
TX Packets 1519-2047 Octets    0
TX Packets 2048-4095 Octets    0
TX Packets 4096-9216 Octets    0
TX 1519-1522 Good Vlan frms   0
TX Octets                     82326
TX Multicast Packets          0
TX Broadcast Packets          1
TX Single Collision frames    0
TX Mult. Collision frames     0
TX Late Collisions            0
TX Excessive Collisions       0
TX Collision frames           0
TX PAUSEMAC Ctrl Frames      0
TX MAC ctrl frames            0
TX Frame deferred Xtns        0
TX Frame excessive deferl     0
TX Oversize Packets           0
TX Jabbers                    0
TX FCS Error Counter          0
TX Fragment Counter           0
TX Byte Counter               18161734
RX Packets 64 Octets          0
RX Packets 65-127 Octets      0
RX Packets 128-255 Octets     58460
RX Packets 256-511 Octets     523
RX Packets 512-1023 Octets    96
RX Packets 1024-1518 Octets    2
RX Packets 1519-2047 Octets    0

```

```

RX Packets 2048-4095 Octets  0
RX Packets 4096-9216 Octets  0
RX Octets                    59081
RX Multicast Packets         0
RX Broadcast Packets         0
RX FCS Errors                0
RX Align Errors              0
RX Fragments                 0
RX Symbol errors             0
RX Unsupported opcodes       0
RX Out of Range Length       0
RX False Carrier Errors      0
RX Undersize Packets         0
RX Oversize Packets          0
RX Jabbers                   0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter        0
RX Control Frame Counter     0
RX Pause Frame Counter       0
RX Byte Counter              13894171
Statistics for port 28 connected to device CB0:
TX Packets 64 Octets         0
TX Packets 65-127 Octets     0
TX Packets 128-255 Octets    144458
TX Packets 256-511 Octets    1080
TX Packets 512-1023 Octets   182
TX Packets 1024-1518 Octets  3
TX Packets 1519-2047 Octets  0
TX Packets 2048-4095 Octets  0
TX Packets 4096-9216 Octets  0
TX Packets 9217-16383 Octets 0
TX Octets                    145723
TX Multicast Packets         0
TX Broadcast Packets         0
TX PAUSEMAC Ctrl Frames     0
TX Oversize Packets          0
TX FCS Error Counter         0
TX Fragment Counter          0
TX Byte Counter              34292735
RX Packets 64 Octets         0
RX Packets 65-127 Octets     1
RX Packets 128-255 Octets    202266
RX Packets 256-511 Octets    3547
RX Packets 512-1023 Octets   1355
RX Packets 1024-1518 Octets  5
RX Packets 1519-2047 Octets  0
RX Packets 2048-4095 Octets  0
RX Packets 4096-9216 Octets  0
RX Packets 9217-16383 Octets 0
RX Octets                    207174
RX Multicast Packets         0
RX Broadcast Packets         1
RX FCS Errors                0
RX Fragments                 0
RX MAC Control Packets       0
RX Out of Range Length       0
RX Undersize Packets         0
RX Oversize Packets          0
RX Jabbers                   0
RX Control Frame Counter     0
RX Pause Frame Counter       0

```

```

RX Byte Counter          45576186
Statistics for port 29 connected to device CB1:
TX Packets 64 Octets      0
TX Packets 65-127 Octets  1
TX Packets 128-255 Octets 0
TX Packets 256-511 Octets 0
TX Packets 512-1023 Octets 0
TX Packets 1024-1518 Octets 0
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets                  1
TX Multicast Packets       0
TX Broadcast Packets       1
TX PAUSEMAC Ctrl Frames    0
TX Oversize Packets        0
TX FCS Error Counter       0
TX Fragment Counter        0
TX Byte Counter            72
RX Packets 64 Octets      0
RX Packets 65-127 Octets  0
RX Packets 128-255 Octets 0
RX Packets 256-511 Octets 0
RX Packets 512-1023 Octets 0
RX Packets 1024-1518 Octets 0
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets                  0
RX Multicast Packets       0
RX Broadcast Packets       0
RX FCS Errors              0
RX Fragments               0
RX MAC Control Packets     0
RX Out of Range Length     0
RX Undersize Packets        0
RX Oversize Packets        0
RX Jabbers                 0
RX Control Frame Counter   0
RX Pause Frame Counter     0
RX Byte Counter            0

```

Port statistics for FC1 switch

Statistics for port 2 connected to device FWD-SWITCH-0:

```

TX Packets 64 Octets      0
TX Packets 65-127 Octets  1
TX Packets 128-255 Octets 80629
TX Packets 256-511 Octets 1279
TX Packets 512-1023 Octets 514
TX Packets 1024-1518 Octets 3
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets                  82426
TX Multicast Packets       0
TX Broadcast Packets       1
TX Single Collision frames 0
TX Mult. Collision frames  0

```

```

TX Late Collisions          0
TX Excessive Collisions    0
TX Collision frames        0
TX PAUSEMAC Ctrl Frames    0
TX MAC ctrl frames        0
TX Frame deferred Xtns     0
TX Frame excessive deferl  0
TX Oversize Packets        0
TX Jabbers                 0
TX FCS Error Counter       0
TX Fragment Counter        0
TX Byte Counter            18074790
RX Packets 64 Octets       0
RX Packets 65-127 Octets   0
RX Packets 128-255 Octets  58785
RX Packets 256-511 Octets  640
RX Packets 512-1023 Octets 119
RX Packets 1024-1518 Octets 3
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets                  59547
RX Multicast Packets       0
RX Broadcast Packets       0
RX FCS Errors              0
RX Align Errors            0
RX Fragments               0
RX Symbol errors           0
RX Unsupported opcodes     0
RX Out of Range Length     0
RX False Carrier Errors    0
RX Undersize Packets       0
RX Oversize Packets        0
RX Jabbers                 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter      0
RX Control Frame Counter   0
RX Pause Frame Counter     0
RX Byte Counter            14006842
Statistics for port 4 connected to device FWD-SWITCH-1:
TX Packets 64 Octets       0
TX Packets 65-127 Octets   1
TX Packets 128-255 Octets  40004
TX Packets 256-511 Octets  668
TX Packets 512-1023 Octets 290
TX Packets 1024-1518 Octets 3
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets                  40966
TX Multicast Packets       0
TX Broadcast Packets       1
TX Single Collision frames 0
TX Mult. Collision frames  0
TX Late Collisions         0
TX Excessive Collisions    0
TX Collision frames        0
TX PAUSEMAC Ctrl Frames    0
TX MAC ctrl frames        0
TX Frame deferred Xtns     0

```

```

TX Frame excessive deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 9058102
RX Packets 64 Octets 0
RX Packets 65-127 Octets 0
RX Packets 128-255 Octets 29794
RX Packets 256-511 Octets 225
RX Packets 512-1023 Octets 44
RX Packets 1024-1518 Octets 3
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 30066
RX Multicast Packets 0
RX Broadcast Packets 0
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 7050000
Statistics for port 28 connected to device CB0:
TX Packets 64 Octets 0
TX Packets 65-127 Octets 0
TX Packets 128-255 Octets 88579
TX Packets 256-511 Octets 865
TX Packets 512-1023 Octets 163
TX Packets 1024-1518 Octets 6
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets 89613
TX Multicast Packets 0
TX Broadcast Packets 0
TX PAUSEMAC Ctrl Frames 0
TX Oversize Packets 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 21056842
RX Packets 64 Octets 0
RX Packets 65-127 Octets 1
RX Packets 128-255 Octets 120633
RX Packets 256-511 Octets 1947
RX Packets 512-1023 Octets 804
RX Packets 1024-1518 Octets 6
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0

```

```
RX Packets 9217-16383 Octets  0
RX Octets                               123391
RX Multicast Packets                0
RX Broadcast Packets                 1
RX FCS Errors                        0
RX Fragments                        0
RX MAC Control Packets               0
RX Out of Range Length               0
RX Undersize Packets                 0
RX Oversize Packets                  0
RX Jabbers                           0
RX Control Frame Counter              0
RX Pause Frame Counter                0
RX Byte Counter                       27132820
Statistics for port 29 connected to device CB1:
TX Packets 64 Octets                  0
TX Packets 65-127 Octets              1
TX Packets 128-255 Octets             0
TX Packets 256-511 Octets             0
TX Packets 512-1023 Octets            0
TX Packets 1024-1518 Octets           0
TX Packets 1519-2047 Octets           0
TX Packets 2048-4095 Octets           0
TX Packets 4096-9216 Octets           0
TX Packets 9217-16383 Octets          0
TX Octets                             1
TX Multicast Packets                  0
TX Broadcast Packets                  1
TX PAUSEMAC Ctrl Frames               0
TX Oversize Packets                   0
TX FCS Error Counter                  0
TX Fragment Counter                   0
TX Byte Counter                       72
RX Packets 64 Octets                  0
RX Packets 65-127 Octets              0
RX Packets 128-255 Octets             0
RX Packets 256-511 Octets             0
RX Packets 512-1023 Octets            0
RX Packets 1024-1518 Octets           0
RX Packets 1519-2047 Octets           0
RX Packets 2048-4095 Octets           0
RX Packets 4096-9216 Octets           0
RX Packets 9217-16383 Octets          0
RX Octets                             0
RX Multicast Packets                  0
RX Broadcast Packets                  0
RX FCS Errors                        0
RX Fragments                        0
RX MAC Control Packets               0
RX Out of Range Length               0
RX Undersize Packets                 0
RX Oversize Packets                  0
RX Jabbers                           0
RX Control Frame Counter              0
RX Pause Frame Counter                0
RX Byte Counter                       0
```

Port statistics for FC2 switch
Empty fpc slot number 2

Port statistics for FC3 switch


```

Empty fpc slot number 3

Port statistics for FC4 switch
Empty fpc slot number 4

Port statistics for FC5 switch
Empty fpc slot number 5

Port statistics for FC6 switch
Empty fpc slot number 6

Port statistics for FC7 switch
Empty fpc slot number 7

```

show chassis ethernet-switch fpc interconnect-device port

```

user@qfabric> show chassis ethernet-switch fpc interconnect-device IC-WS001 port 2
Summary for switch on FC0
Link is good on GE port 2 connected to device: FWD-SWITCH-0
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled
  TX Octets          319466
  RX Octets          221869

Link is good on GE port 4 connected to device: FWD-SWITCH-1
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled
  TX Octets          210295
  RX Octets          151164

Link is good on XE port 28 connected to device: CB0
  Speed is 10000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled
  TX Octets          373033
  RX Octets          529760

Link is good on XE port 29 connected to device: CB1
  Speed is 10000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled
  TX Octets           1
  RX Octets           0

Summary for switch on FC1
Link is good on GE port 2 connected to device: FWD-SWITCH-0
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

```

```
TX Octets          210760
RX Octets          152617
```

```
Link is good on GE port 4 connected to device: FWD-SWITCH-1
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          104587
RX Octets          77315
```

```
Link is good on XE port 28 connected to device: CBO
Speed is 10000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          229932
RX Octets          315346
```

```
Link is good on XE port 29 connected to device: CB1
Speed is 10000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
TX Octets          1
RX Octets          0
```

show chassis ethernet-switch fpc interconnect-device detail port

```
user@qfabric> show chassis ethernet-switch fpc interconnect-device IC-WS001 detail port 2
```

```
Port statistics for FC0 switch
```

```
Statistics for port 2 connected to device FWD-SWITCH-0:
```

```
TX Packets 64 Octets      0
TX Packets 65-127 Octets  1
TX Packets 128-255 Octets 311974
TX Packets 256-511 Octets 5552
TX Packets 512-1023 Octets 2084
TX Packets 1024-1518 Octets 2
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets                319613
TX Multicast Packets      0
TX Broadcast Packets      1
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions        0
TX Excessive Collisions   0
TX Collision frames       0
TX PAUSEMAC Ctrl Frames   0
TX MAC ctrl frames        0
TX Frame deferred Xtns    0
TX Frame excessive deferl 0
TX Oversize Packets       0
TX Jabbers                0
TX FCS Error Counter      0
TX Fragment Counter       0
```

```

TX Byte Counter          70091196
RX Packets 64 Octets     0
RX Packets 65-127 Octets 0
RX Packets 128-255 Octets 220284
RX Packets 256-511 Octets 1486
RX Packets 512-1023 Octets 198
RX Packets 1024-1518 Octets 1
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets                221969
RX Multicast Packets     0
RX Broadcast Packets     0
RX FCS Errors            0
RX Align Errors          0
RX Fragments             0
RX Symbol errors         0
RX Unsupported opcodes   0
RX Out of Range Length   0
RX False Carrier Errors  0
RX Undersize Packets     0
RX Oversize Packets      0
RX Jabbers               0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter    0
RX Control Frame Counter 0
RX Pause Frame Counter   0
RX Byte Counter          52192002
Statistics for port 4 connected to device FWD-SWITCH-1:
TX Packets 64 Octets     0
TX Packets 65-127 Octets 1
TX Packets 128-255 Octets 205595
TX Packets 256-511 Octets 3426
TX Packets 512-1023 Octets 1366
TX Packets 1024-1518 Octets 3
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets                210391
TX Multicast Packets     0
TX Broadcast Packets     1
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions       0
TX Excessive Collisions  0
TX Collision frames      0
TX PAUSEMAC Ctrl Frames  0
TX MAC ctrl frames       0
TX Frame deferred Xmsns  0
TX Frame excessive deferl 0
TX Oversize Packets      0
TX Jabbers               0
TX FCS Error Counter     0
TX Fragment Counter      0
TX Byte Counter          46380018
RX Packets 64 Octets     0
RX Packets 65-127 Octets 0
RX Packets 128-255 Octets 149866
RX Packets 256-511 Octets 1194
RX Packets 512-1023 Octets 173

```

```
RX Packets 1024-1518 Octets 2
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 151235
RX Multicast Packets 0
RX Broadcast Packets 0
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 35496911
Statistics for port 28 connected to device CB0:
TX Packets 64 Octets 0
TX Packets 65-127 Octets 0
TX Packets 128-255 Octets 370150
TX Packets 256-511 Octets 2680
TX Packets 512-1023 Octets 371
TX Packets 1024-1518 Octets 3
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets 373204
TX Multicast Packets 0
TX Broadcast Packets 0
TX PAUSEMAC Ctrl Frames 0
TX Oversize Packets 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 87688913
RX Packets 64 Octets 0
RX Packets 65-127 Octets 1
RX Packets 128-255 Octets 517569
RX Packets 256-511 Octets 8978
RX Packets 512-1023 Octets 3450
RX Packets 1024-1518 Octets 5
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets 530003
RX Multicast Packets 0
RX Broadcast Packets 1
RX FCS Errors 0
RX Fragments 0
RX MAC Control Packets 0
RX Out of Range Length 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
```

```
RX Control Frame Counter    0
RX Pause Frame Counter      0
RX Byte Counter             116471142
Statistics for port 29 connected to device CB1:
TX Packets 64 Octets        0
TX Packets 65-127 Octets    1
TX Packets 128-255 Octets   0
TX Packets 256-511 Octets   0
TX Packets 512-1023 Octets  0
TX Packets 1024-1518 Octets 0
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets                    1
TX Multicast Packets         0
TX Broadcast Packets         1
TX PAUSEMAC Ctrl Frames     0
TX Oversize Packets         0
TX FCS Error Counter        0
TX Fragment Counter         0
TX Byte Counter             72
RX Packets 64 Octets        0
RX Packets 65-127 Octets    0
RX Packets 128-255 Octets   0
RX Packets 256-511 Octets   0
RX Packets 512-1023 Octets  0
RX Packets 1024-1518 Octets 0
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets                    0
RX Multicast Packets         0
RX Broadcast Packets         0
RX FCS Errors                0
RX Fragments                 0
RX MAC Control Packets       0
RX Out of Range Length       0
RX Undersize Packets         0
RX Oversize Packets         0
RX Jabbers                   0
RX Control Frame Counter     0
RX Pause Frame Counter       0
RX Byte Counter              0
```

show chassis ethernet-switch interconnect-device cb

Syntax	<code>show chassis ethernet-switch interconnect-device <i>name</i> cb</code> <code><detail></code> <code><port <i>number</i>></code> <code><slot<i>number</i>></code>
Release Information	Command introduced in Junos OS Release 12.2 for the QFX Series.
Description	(QFX3000-G QFabric systems only) Display Ethernet switch information for the Control Board (CB) ports in an Interconnect device.
Options	<p>none—Display Ethernet switch information about each connected port on each online CB in the Interconnect device.</p> <p>detail—(Optional) Display detailed status information for all CBs or for the CB in the specified slot in the Interconnect device.</p> <p>port <i>number</i>—(Optional) Display Ethernet switch information about a specific port on a CB in the Interconnect device.</p> <p>slot <i>number</i>—(Optional) Display Ethernet switch information about a CB in a specific slot in the Interconnect device.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>chassis</i> • show chassis environment cb on page 545 • show chassis ethernet-switch interconnect-device fpc on page 503
List of Sample Output	show chassis ethernet-switch interconnect-device cb on page 532 show chassis ethernet-switch interconnect-device cb detail on page 533 show chassis ethernet-switch interconnect-device cb detail slot port on page 539
Output Fields	Table 29 on page 504 lists the output fields for the show chassis ethernet-switch interconnect-device cb command. Output fields are listed in the approximate order in which they appear.

Table 30: show chassis ethernet-switch interconnect-device fpc Output Fields

Field Name	Field Description
Link is good on port n connected to device	<p>Information about the link between each port on the FPC's Ethernet switch and one of the following devices:</p> <ul style="list-style-type: none"> • FWD-SWITCH-0 • FWD-SWITCH-1 • CB0 • CB1

Table 30: show chassis ethernet-switch interconnect-device fpc Output Fields (*continued*)

Field Name	Field Description
Speed is	Speed at which the Ethernet link is running: 10 Mb When the device is RE or Other RE on the TX Matrix router, the speed is 1000 Mb .
Duplex is	Duplex type of the Ethernet link: full or half .
Autonegotiate is Enabled (or Disabled)	By default, built-in Fast Ethernet ports on a PIC autonegotiate whether to operate at 10 Mbps or 100 Mbps. All other interfaces automatically choose the correct speed based on the PIC type and whether the PIC is configured to operate in multiplexed mode (using the no-concatenate statement at the [edit chassis] hierarchy level, as described in the <i>Junos OS System Basics Configuration Guide</i>).
Flow Control TX is Enabled (or Disabled)	Flow control in the transmit direction is enabled (or disabled). Flow control regulates the flow of packets from the switch to the remote side of the connection.
Flow Control RX is Enabled (or Disabled)	Flow control in the receive direction is enabled (or disabled). Flow control regulates the flow of packets from the remote side of the connection to the switch.
TX Octets	Number of octets sent.
TX Packets 64 Octets	Number of transmitted packets of size 64 octets.
TX Packets 65-127 Octets	Number of transmitted frames of size 65 through 127 octets.
TX Packets 128-255 Octets	Number of transmitted frames of size 128 through 255 octets.
TX Packets 256-511 Octets	Number of transmitted frames of size 256 through 511 octets.
TX Packets 512-1023 Octets	Number of transmitted frames of size 512 through 1023 octets.
TX Packets 1024-1518 Octets	Number of transmitted frames of size 1024 through 1518 octets.
TX Packets 1519-2047 Octets	Number of transmitted frames of size 1519 through 2047 octets.
TX Packets 2048-4095 Octets	Number of transmitted frames of size 2048 through 4095 octets.
TX Packets 4096-9216 Octets	Number of transmitted frames of size 4096 through 9216 octets.
TX Packets 9217-16383 Octets	Number of transmitted frames of size 9217 through 16383 octets.
TX Multicast packets	Number of multicast packets sent.

Table 30: show chassis ethernet-switch interconnect-device fpc Output Fields (*continued*)

Field Name	Field Description
TX Broadcast packets	Number of broadcast packets sent.
TX Single Collision frames	Number of packets sent after one collision.
TX Mult. Collision frames	Number of packets sent after multiple collisions.
TX Late Collision Frames	Number of packets aborted during sending because of collisions after 64 bytes.
TX Excessive collisions	Number of packets not sent because of too many collisions.
TX Collision frames	Number of collision packets sent.
TX PAUSEMAC Ctrl Frames	Number of Media Access Control (MAC) frames containing PAUSE commands sent.
TX MAC ctrl frames	Number of MAC control packets sent.
TX Frame deferred Xmns	Number of frames deferred in x milliseconds.
TX Oversize Packets	Number of oversized packets sent.
TX Jabbers	Total number of frames sent that exceed the maximum byte count and contain CRC errors .
TX FCS Error Counter	Number of packets discarded because of frame check sequence errors.
TX Fragment Counter	Number of fragmented packets sent.
TX Byte Counter	Number of bytes sent.
RX Octets	Number of octets received.
RX Packets 64 Octets	Number of received packets of size 64 octets.
RX Packets 65-127 Octets	Number of received packets of size 65 through 127 octets.
RX Packets 128-255 Octets	Number of received packets of size 128 through 255 octets.
RX Packets 256-511 Octets	Number of received packets of size 256 through 511 octets.
RX Packets 512-1023 Octets	Number of received packets of size 512 through 1023 octets.

Table 30: show chassis ethernet-switch interconnect-device fpc Output Fields (*continued*)

Field Name	Field Description
RX Packets 1024-1518 Octets	Number of received packets of size 65 through 127 octets.
RX Packets 1519-2047 Octets	Number of received packets of size 1519 through 2047 octets.
RX Packets 2048-4095 Octets	Number of received packets of size 2048 through 4095 octets.
RX Packets 4096-9216 Octets	Number of received packets of size 4096 through 9216 octets.
RX Multicast Packets	Number of multicast packets received.
RX Broadcast Packets	Number of broadcast packets received.
RX FCS Errors	Number of packets discarded because of frame check sequence errors.
RX Align Errors	Number of incomplete octets received.
RX Fragments	Number of fragmented packets received.
RX Symbol errors	Number of symbols received that the router did not correctly decode.
RX Unsupported opcodes	Number of packets received with unsupported op codes.
RX Out of Range Length	Number of packets received with an out of range length.
RX False Carrier Errors	Number of packets received with false carrier errors.
RX Undersize Packets	Number of undersized packets received.
RX Oversize Packets	Number of oversized packets received.
RX Jabbers	Total number of frames received that exceed the maximum byte count and contain CRC errors .
RX 1519-1522 Good Vlan frms	
RX MTU Exceed Counter	Number of packets received that exceed the MTU.
RX Control Frame Counter	Number of control frames received.
RX Pause Frame Counter	Number of pause frames received.

Table 30: show chassis ethernet-switch interconnect-device fpc Output Fields (*continued*)

Field Name	Field Description
RX Byte Counter	Number of bytes received.

Sample Output

show chassis ethernet-switch interconnect-device cb

```

user@switch> show chassis ethernet-switch interconnect-device IC-WS001 cb
Displaying summary for switch 0
Link is down on XE port 1 connected to device: FPC7
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on XE port 2 connected to device: FPC6
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on XE port 3 connected to device: FPC5
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on XE port 5 connected to device: FPC4
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on XE port 7 connected to device: FPC3
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on XE port 9 connected to device: FPC2
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on XE port 10 connected to device: FPC1
  Speed is 10000Mb
  Duplex is full
  Autonegotiate is Enabled
  TX Octets                326358
  RX Octets                 237947

Link is good on XE port 11 connected to device: FPC0
  Speed is 10000Mb
  Duplex is full
  Autonegotiate is Enabled
  TX Octets                548249
  RX Octets                 386013

Link is down on XE port 20 connected to device: SFP3
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on XE port 21 connected to device: SFP2
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on XE port 22 connected to device: SFP1

```

```

Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
TX Octets          1
RX Octets          11704758

Link is good on XE port 23 connected to device: SFP0
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
TX Octets          1500022
RX Octets          11629453

Link is good on XE port 24 connected to device: VCCPD
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
TX Octets          23332467
RX Octets          1500023

Link is good on GE port 25 connected to device: SFI
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
TX Octets          643918
RX Octets          894548

```

show chassis ethernet-switch interconnect-device cb detail

```

user@qfabric> show chassis ethernet-switch interconnect-device IC-WS001 cb detail
Port statistics for CB switch

```

```

Link is down on XE port 1 connected to device: FPC7

Link is down on XE port 2 connected to device: FPC6

Link is down on XE port 3 connected to device: FPC5

Link is down on XE port 5 connected to device: FPC4

Link is down on XE port 7 connected to device: FPC3

```

```

Link is down on XE port 9 connected to device: FPC2
Statistics for port 10 connected to device FPC1:

```

```

TX Packets 64 Octets      0
TX Packets 65-127 Octets  1
TX Packets 128-255 Octets 319293
TX Packets 256-511 Octets 5043
TX Packets 512-1023 Octets 2072
TX Packets 1024-1518 Octets 6
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets                326415
TX Multicast Packets      0
TX Broadcast Packets      1
TX PAUSEMAC Ctrl Frames  0
TX Oversize Packets       0
TX FCS Error Counter      0
TX Fragment Counter       0

```

TX Byte Counter	71659246
TX Packet OK Counter	326415
TX Pause Packet Counter	0
TX Unicast Counter	326414
RX Packets 64 Octets	0
RX Packets 65-127 Octets	0
RX Packets 128-255 Octets	235428
RX Packets 256-511 Octets	2134
RX Packets 512-1023 Octets	420
RX Packets 1024-1518 Octets	6
RX Packets 1519-2047 Octets	0
RX Packets 2048-4095 Octets	0
RX Packets 4096-9216 Octets	0
RX Packets 9217-16383 Octets	0
RX Octets	237988
RX Multicast Packets	0
RX Broadcast Packets	0
RX FCS Errors	0
RX Fragments	0
RX MAC Control Packets	0
RX Out of Range Length	0
RX Undersize Packets	0
RX Oversize Packets	0
RX Jabbers	0
RX Control Frame Counter	0
RX Pause Frame Counter	0
RX Byte Counter	55821504
RX Unicast Frame Count	237988
RX Packet OK Count	237988

Statistics for port 11 connected to device FPC0:

TX Packets 64 Octets	0
TX Packets 65-127 Octets	1
TX Packets 128-255 Octets	535483
TX Packets 256-511 Octets	9289
TX Packets 512-1023 Octets	3564
TX Packets 1024-1518 Octets	5
TX Packets 1519-2047 Octets	0
TX Packets 2048-4095 Octets	0
TX Packets 4096-9216 Octets	0
TX Packets 9217-16383 Octets	0
TX Octets	548342
TX Multicast Packets	0
TX Broadcast Packets	1
TX PAUSEMAC Ctrl Frames	0
TX Oversize Packets	0
TX FCS Error Counter	0
TX Fragment Counter	0
TX Byte Counter	120498414
TX Packet OK Counter	548342
TX Pause Packet Counter	0
TX Unicast Counter	548341
RX Packets 64 Octets	0
RX Packets 65-127 Octets	0
RX Packets 128-255 Octets	382931
RX Packets 256-511 Octets	2762
RX Packets 512-1023 Octets	386
RX Packets 1024-1518 Octets	3
RX Packets 1519-2047 Octets	0
RX Packets 2048-4095 Octets	0
RX Packets 4096-9216 Octets	0
RX Packets 9217-16383 Octets	0

RX Octets	386082
RX Multicast Packets	0
RX Broadcast Packets	0
RX FCS Errors	0
RX Fragments	0
RX MAC Control Packets	0
RX Out of Range Length	0
RX Undersize Packets	0
RX Oversize Packets	0
RX Jabbers	0
RX Control Frame Counter	0
RX Pause Frame Counter	0
RX Byte Counter	90717369
RX Unicast Frame Count	386082
RX Packet OK Count	386082

Link is down on XE port 20 connected to device: SFP3

Link is down on XE port 21 connected to device: SFP2

Statistics for port 22 connected to device SFP1:

TX Packets 64 Octets	0
TX Packets 65-127 Octets	0
TX Packets 128-255 Octets	0
TX Packets 256-511 Octets	0
TX Packets 512-1023 Octets	0
TX Packets 1024-1518 Octets	1
TX Packets 1519-2047 Octets	0
TX Packets 2048-4095 Octets	0
TX Packets 4096-9216 Octets	0
TX 1519-1522 Good Vlan Frms	0
TX Octets	1
TX Multicast Packets	1
TX Broadcast Packets	0
TX Single Collision Frames	0
TX Mult. Collision Frames	0
TX Late Collisions	0
TX Excessive Collisions	0
TX Collision Frames	0
TX PAUSEMAC Ctrl Frames	0
TX MAC Ctrl Frames	0
TX Frame Deferred Xms	0
TX Frame Excessive Deferl	0
TX Oversize Packets	0
TX Jabbers	0
TX FCS Error Counter	0
TX Fragment Counter	0
TX Byte Counter	1422
RX Packet OK Count	1
RX Packets 64 Octets	230013
RX Packets 65-127 Octets	174529
RX Packets 128-255 Octets	286735
RX Packets 256-511 Octets	343412
RX Packets 512-1023 Octets	172152
RX Packets 1024-1518 Octets	10500065
RX Packets 1519-2047 Octets	0
RX Packets 2048-4095 Octets	0
RX Packets 4096-9216 Octets	0
RX Octets	11706906
RX Multicast Packets	11672320
RX Broadcast Packets	34460
RX FCS Errors	0

```

RX Align Errors          0
RX Fragments             0
RX Symbol Errors         0
RX Unsupported Opcodes   0
RX Out of Range Length   0
RX False Carrier Errors  0
RX Undersize Packets     0
RX Oversize Packets      0
RX Jabbers               0
RX 1519-1522 Good Vlan Frms 0
RX MTU Exceed Counter    0
RX Control Frame Counter 0
RX Pause Frame Counter   0
RX Byte Counter          2379464164
RX Packet OK Count       11706906
Statistics for port 23 connected to device SFP0:
TX Packets 64 Octets     3
TX Packets 65-127 Octets 484733
TX Packets 128-255 Octets 219112
TX Packets 256-511 Octets 129014
TX Packets 512-1023 Octets 503
TX Packets 1024-1518 Octets 666958
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan Frms 0
TX Octets                1500323
TX Multicast Packets      794098
TX Broadcast Packets      1040
TX Single Collision Frames 0
TX Mult. Collision Frames 0
TX Late Collisions        0
TX Excessive Collisions   0
TX Collision Frames        0
TX PAUSEMAC Ctrl Frames   0
TX MAC Ctrl Frames        0
TX Frame Deferred Xtns     0
TX Frame Excessive Deferl 0
TX Oversize Packets        0
TX Jabbers                0
TX FCS Error Counter      0
TX Fragment Counter        0
TX Byte Counter           1065466891
RX Packet OK Count        1500323
RX Packets 64 Octets      341563
RX Packets 65-127 Octets  430810
RX Packets 128-255 Octets 318279
RX Packets 256-511 Octets 347147
RX Packets 512-1023 Octets 184798
RX Packets 1024-1518 Octets 10008993
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets                 11631590
RX Multicast Packets      10878484
RX Broadcast Packets      33420
RX FCS Errors             0
RX Align Errors           0
RX Fragments              0
RX Symbol Errors          0
RX Unsupported Opcodes    0

```

```

RX Out of Range Length      0
RX False Carrier Errors     0
RX Undersize Packets        0
RX Oversize Packets         0
RX Jabbers                  0
RX 1519-1522 Good Vlan Frms 0
RX MTU Exceed Counter       0
RX Control Frame Counter    0
RX Pause Frame Counter      0
RX Byte Counter              1720484325
RX Packet OK Count           11631591
Statistics for port 24 connected to device VCCPD:
TX Packets 64 Octets        0
TX Packets 65-127 Octets    1176546
TX Packets 128-255 Octets   604988
TX Packets 256-511 Octets   690561
TX Packets 512-1023 Octets  356942
TX Packets 1024-1518 Octets 20507438
TX Packets 1519-2047 Octets 278
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan Frms 278
TX Octets                    23336753
TX Multicast Packets         22549383
TX Broadcast Packets         67862
TX Single Collision Frames    0
TX Mult. Collision Frames    0
TX Late Collisions           0
TX Excessive Collisions      0
TX Collision Frames          0
TX PAUSEMAC Ctrl Frames      0
TX MAC Ctrl Frames           0
TX Frame Deferred Xtns       0
TX Frame Excessive Deferral  0
TX Oversize Packets          0
TX Jabbers                   0
TX FCS Error Counter         0
TX Fragment Counter          0
TX Byte Counter              4191296788
RX Packet OK Count           23336753
RX Packets 64 Octets         3
RX Packets 65-127 Octets     484673
RX Packets 128-255 Octets    219074
RX Packets 256-511 Octets    129100
RX Packets 512-1023 Octets   516
RX Packets 1024-1518 Octets  666959
RX Packets 1519-2047 Octets  0
RX Packets 2048-4095 Octets  0
RX Packets 4096-9216 Octets  0
RX Octets                    1500325
RX Multicast Packets         794099
RX Broadcast Packets         1040
RX FCS Errors                0
RX Align Errors              0
RX Fragments                 0
RX Symbol Errors             0
RX Unsupported Opcodes       0
RX Out of Range Length       0
RX False Carrier Errors      0
RX Undersize Packets         0
RX Oversize Packets          0

```

```

RX Jabbers                                0
RX 1519-1522 Good Vlan Frms              0
RX MTU Exceed Counter                    0
RX Control Frame Counter                  0
RX Pause Frame Counter                    0
RX Byte Counter                           1071469739
RX Packet OK Count                        1500325
Statistics for port 25 connected to device SFI:
TX Packets 64 Octets                      12
TX Packets 65-127 Octets                  1
TX Packets 128-255 Octets                  618363
TX Packets 256-511 Octets                  4896
TX Packets 512-1023 Octets                 806
TX Packets 1024-1518 Octets                19950
TX Packets 1519-2047 Octets                0
TX Packets 2048-4095 Octets                0
TX Packets 4096-9216 Octets                0
TX 1519-1522 Good Vlan Frms              0
TX Octets                                644028
TX Multicast Packets                      4
TX Broadcast Packets                      19954
TX Single Collision Frames                0
TX Mult. Collision Frames                 0
TX Late Collisions                       0
TX Excessive Collisions                   0
TX Collision Frames                      0
TX PAUSEMAC Ctrl Frames                   0
TX MAC Ctrl Frames                       0
TX Frame Deferred Xms                     0
TX Frame Excessive Deferl                 0
TX Oversize Packets                       0
TX Jabbers                                0
TX FCS Error Counter                      0
TX Fragment Counter                       0
TX Byte Counter                           167039705
RX Packet OK Count                        644028
RX Packets 64 Octets                      0
RX Packets 65-127 Octets                  0
RX Packets 128-255 Octets                  854776
RX Packets 256-511 Octets                  14332
RX Packets 512-1023 Octets                 5636
RX Packets 1024-1518 Octets                19954
RX Packets 1519-2047 Octets                0
RX Packets 2048-4095 Octets                0
RX Packets 4096-9216 Octets                0
RX Octets                                894698
RX Multicast Packets                      0
RX Broadcast Packets                      19943
RX FCS Errors                             0
RX Align Errors                           0
RX Fragments                             0
RX Symbol Errors                          0
RX Unsupported Opcodes                    0
RX Out of Range Length                    0
RX False Carrier Errors                   0
RX Undersize Packets                      0
RX Oversize Packets                       0
RX Jabbers                                0
RX 1519-1522 Good Vlan Frms              0
RX MTU Exceed Counter                    0
RX Control Frame Counter                  0

```



```

RX Pause Frame Counter      0
RX Byte Counter             212658920
RX Packet OK Count          894698

```

show chassis ethernet-switch interconnect-device cb detail slot port

```

user@qfabric> show chassis ethernet-switch interconnect-device IC-WS001 cb slot 1 port 1
re0:

```

```

-----
Port statistics for CB switch

```

```

Link is down on XE port 1 connected to device: FPC7

```

```

Link is down on XE port 2 connected to device: FPC6

```

```

Link is down on XE port 3 connected to device: FPC5

```

```

Link is down on XE port 5 connected to device: FPC4

```

```

Link is down on XE port 7 connected to device: FPC3

```

```

Link is down on XE port 9 connected to device: FPC2

```

```

Statistics for port 10 connected to device FPC1:

```

```

TX Packets 64 Octets      0
TX Packets 65-127 Octets  1
TX Packets 128-255 Octets 319366
TX Packets 256-511 Octets 5043
TX Packets 512-1023 Octets 2072
TX Packets 1024-1518 Octets 6
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets 326488
TX Multicast Packets 0
TX Broadcast Packets 1
TX PAUSEMAC Ctrl Frames 0
TX Oversize Packets 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 71675330
TX Packet OK Counter 326488
TX Pause Packet Counter 0
TX Unicast Counter 326487
RX Packets 64 Octets 0
RX Packets 65-127 Octets 0
RX Packets 128-255 Octets 235481
RX Packets 256-511 Octets 2134
RX Packets 512-1023 Octets 420
RX Packets 1024-1518 Octets 6
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets 238041
RX Multicast Packets 0
RX Broadcast Packets 0
RX FCS Errors 0
RX Fragments 0
RX MAC Control Packets 0
RX Out of Range Length 0

```

```

RX Undersize Packets      0
RX Oversize Packets      0
RX Jabbers                0
RX Control Frame Counter  0
RX Pause Frame Counter    0
RX Byte Counter           55834224
RX Unicast Frame Count    238041
RX Packet OK Count        238041
Statistics for port 11 connected to device FPC0:
TX Packets 64 Octets      0
TX Packets 65-127 Octets  1
TX Packets 128-255 Octets 535606
TX Packets 256-511 Octets 9289
TX Packets 512-1023 Octets 3564
TX Packets 1024-1518 Octets 5
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets                  548465
TX Multicast Packets       0
TX Broadcast Packets       1
TX PAUSEMAC Ctrl Frames    0
TX Oversize Packets        0
TX FCS Error Counter       0
TX Fragment Counter        0
TX Byte Counter            120525524
TX Packet OK Counter       548465
TX Pause Packet Counter    0
TX Unicast Counter         548464
RX Packets 64 Octets       0
RX Packets 65-127 Octets   0
RX Packets 128-255 Octets  383018
RX Packets 256-511 Octets  2762
RX Packets 512-1023 Octets 386
RX Packets 1024-1518 Octets 3
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets                  386169
RX Multicast Packets       0
RX Broadcast Packets       0
RX FCS Errors              0
RX Fragments               0
RX MAC Control Packets     0
RX Out of Range Length     0
RX Undersize Packets       0
RX Oversize Packets        0
RX Jabbers                 0
RX Control Frame Counter   0
RX Pause Frame Counter     0
RX Byte Counter            90738249
RX Unicast Frame Count     386169
RX Packet OK Count         386169

```

Link is down on XE port 20 connected to device: SFP3

Link is down on XE port 21 connected to device: SFP2

```

Statistics for port 22 connected to device SFP1:
TX Packets 64 Octets      0

```

```

TX Packets 65-127 Octets      0
TX Packets 128-255 Octets     0
TX Packets 256-511 Octets     0
TX Packets 512-1023 Octets    0
TX Packets 1024-1518 Octets    1
TX Packets 1519-2047 Octets    0
TX Packets 2048-4095 Octets    0
TX Packets 4096-9216 Octets    0
TX 1519-1522 Good Vlan Frms   0
TX Octets                      1
TX Multicast Packets           1
TX Broadcast Packets           0
TX Single Collision Frames     0
TX Mult. Collision Frames      0
TX Late Collisions             0
TX Excessive Collisions        0
TX Collision Frames            0
TX PAUSEMAC Ctrl Frames        0
TX MAC Ctrl Frames             0
TX Frame Deferred Xmsns        0
TX Frame Excessive Deferl      0
TX Oversize Packets            0
TX Jabbers                     0
TX FCS Error Counter           0
TX Fragment Counter            0
TX Byte Counter                1422
RX Packet OK Count             1
RX Packets 64 Octets           230071
RX Packets 65-127 Octets       174571
RX Packets 128-255 Octets      286812
RX Packets 256-511 Octets      343500
RX Packets 512-1023 Octets     172203
RX Packets 1024-1518 Octets    10502544
RX Packets 1519-2047 Octets    0
RX Packets 2048-4095 Octets    0
RX Packets 4096-9216 Octets    0
RX Octets                      11709701
RX Multicast Packets           11675110
RX Broadcast Packets           34465
RX FCS Errors                  0
RX Align Errors                0
RX Fragments                   0
RX Symbol Errors               0
RX Unsupported Opcodes         0
RX Out of Range Length         0
RX False Carrier Errors        0
RX Undersize Packets           0
RX Oversize Packets            0
RX Jabbers                     0
RX 1519-1522 Good Vlan Frms    0
RX MTU Exceed Counter          0
RX Control Frame Counter        0
RX Pause Frame Counter          0
RX Byte Counter                2383079858
RX Packet OK Count             11709701
Statistics for port 23 connected to device SFP0:
TX Packets 64 Octets           3
TX Packets 65-127 Octets       485048
TX Packets 128-255 Octets      219200
TX Packets 256-511 Octets      129053
TX Packets 512-1023 Octets     503

```

```

TX Packets 1024-1518 Octets 667127
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan Frms 0
TX Octets 1500934
TX Multicast Packets 794300
TX Broadcast Packets 1040
TX Single Collision Frames 0
TX Mult. Collision Frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision Frames 0
TX PAUSEMAC Ctrl Frames 0
TX MAC Ctrl Frames 0
TX Frame Deferred Xms 0
TX Frame Excessive Deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 1065764997
RX Packet OK Count 1500934
RX Packets 64 Octets 341648
RX Packets 65-127 Octets 431183
RX Packets 128-255 Octets 318367
RX Packets 256-511 Octets 347225
RX Packets 512-1023 Octets 184849
RX Packets 1024-1518 Octets 10011311
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 11634583
RX Multicast Packets 10881071
RX Broadcast Packets 33425
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol Errors 0
RX Unsupported Opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan Frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 1723893006
RX Packet OK Count 11634583
Statistics for port 24 connected to device VCCPD:
TX Packets 64 Octets 0
TX Packets 65-127 Octets 1177102
TX Packets 128-255 Octets 605153
TX Packets 256-511 Octets 690727
TX Packets 512-1023 Octets 357044
TX Packets 1024-1518 Octets 20512235
TX Packets 1519-2047 Octets 278
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0

```

```

TX 1519-1522 Good Vlan Frms 278
TX Octets 23342539
TX Multicast Packets 22554760
TX Broadcast Packets 67872
TX Single Collision Frames 0
TX Mult. Collision Frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision Frames 0
TX PAUSEMAC Ctrl Frames 0
TX MAC Ctrl Frames 0
TX Frame Deferred Xmsns 0
TX Frame Excessive Deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 4198344167
RX Packet OK Count 23342539
RX Packets 64 Octets 3
RX Packets 65-127 Octets 484985
RX Packets 128-255 Octets 219164
RX Packets 256-511 Octets 129139
RX Packets 512-1023 Octets 516
RX Packets 1024-1518 Octets 667128
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 1500935
RX Multicast Packets 794301
RX Broadcast Packets 1040
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol Errors 0
RX Unsupported Opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan Frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 1071770147
RX Packet OK Count 1500935
Statistics for port 25 connected to device SFI:
TX Packets 64 Octets 12
TX Packets 65-127 Octets 1
TX Packets 128-255 Octets 618503
TX Packets 256-511 Octets 4896
TX Packets 512-1023 Octets 806
TX Packets 1024-1518 Octets 19950
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan Frms 0
TX Octets 644168
TX Multicast Packets 4
TX Broadcast Packets 19954

```

TX Single Collision Frames	0
TX Mult. Collision Frames	0
TX Late Collisions	0
TX Excessive Collisions	0
TX Collision Frames	0
TX PAUSEMAC Ctrl Frames	0
TX MAC Ctrl Frames	0
TX Frame Deferred Xtns	0
TX Frame Excessive Deferr	0
TX Oversize Packets	0
TX Jabbers	0
TX FCS Error Counter	0
TX Fragment Counter	0
TX Byte Counter	167073305
RX Packet OK Count	644168
RX Packets 64 Octets	0
RX Packets 65-127 Octets	0
RX Packets 128-255 Octets	854972
RX Packets 256-511 Octets	14332
RX Packets 512-1023 Octets	5636
RX Packets 1024-1518 Octets	19954
RX Packets 1519-2047 Octets	0
RX Packets 2048-4095 Octets	0
RX Packets 4096-9216 Octets	0
RX Octets	894894
RX Multicast Packets	0
RX Broadcast Packets	19943
RX FCS Errors	0
RX Align Errors	0
RX Fragments	0
RX Symbol Errors	0
RX Unsupported Opcodes	0
RX Out of Range Length	0
RX False Carrier Errors	0
RX Undersize Packets	0
RX Oversize Packets	0
RX Jabbers	0
RX 1519-1522 Good Vlan Frms	0
RX MTU Exceed Counter	0
RX Control Frame Counter	0
RX Pause Frame Counter	0
RX Byte Counter	212702114
RX Packet OK Count	894894

show chassis environment cb

List of Syntax	Syntax on page 545 Syntax (TX Matrix Routers) on page 545 Syntax (TX Matrix Plus Routers) on page 545 Syntax (MX Series Routers) on page 545 Syntax (MX104 3D Universal Edge Routers) on page 545 Syntax (MX2010 and MX2020 3D Universal Edge Routers) on page 545 Syntax (QFabric System) on page 545
Syntax	show chassis environment cb <slot>
Syntax (TX Matrix Routers)	show chassis environment cb <lcc number scc> <slot>
Syntax (TX Matrix Plus Routers)	show chassis environment cb <lcc number sfc number > <slot>
Syntax (MX Series Routers)	show chassis environment cb <slot> <all-members> <local> <member member-id>
Syntax (MX104 3D Universal Edge Routers)	show chassis environment cb
Syntax (MX2010 and MX2020 3D Universal Edge Routers)	show chassis environment cb <slot>
Syntax (QFabric System)	show chassis environment cb <slot interconnect-device interconnect-device-name> < interconnect-device interconnect-device-name slot>
Release Information	<p>Command introduced before Junos Release 7.4.</p> <p>Command introduced in Junos OS Release 9.4 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.1 for T4000 Core Routers.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos Release 9.6.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.</p>
Description	(M120, M320, MX Series, and T Series routers, EX8200 switches, and PTX Series Packet Transport Routers only) Display environmental information about the Control Boards

(CBs). For information about the meaning of “CBs” on the switches, see *EX Series Switches Hardware and CLI Terminology Mapping*.

Options **none**—Display environmental information about all CBs. For a TX Matrix router, display environmental information about all CBs on the TX Matrix router and its attached T640 routers. For a TX Matrix Plus router, display environmental information about all CBs on the TX Matrix Plus router and its attached T1600 or T4000 routers.

all-members—(MX Series routers only) (Optional) Display environmental information about the CBs on all the members of the Virtual Chassis configuration.

interconnect-device—(QFabric systems only) Display environmental information about CBs on the Interconnect device.

lcc number—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display environmental information about the CBs on the local Virtual Chassis member.

member member-id—(MX Series routers only) (Optional) Display environmental information about the CBs on the specified member of the Virtual Chassis configuration. Replace **member-id** with a value of 0 or 1.

scc—(TX Matrix router only) (Optional) Display environmental information about the CBs in the TX Matrix router (switch-card chassis).

sfc number—(TX Matrix Plus router only) (Optional) Display environmental information about the CBs in the TX Matrix Plus router (or switch-fabric chassis).

slot—(Optional) Display environmental information about the specified CB. On routers and PTX Series Packet Transport Routers, replace **slot** with **0** or **1**. On EX Series switches replace **slot** with **0**, **1**, or **2**. On QFX Series switches, replace **slot** with **0** or **1**.

Required Privilege Level view

Related Documentation • [request chassis cb on page 486](#)

- *Understanding Switching Control Board Redundancy*
- *Routing Engine and Switching Control Board Redundancy Configuration Statements*

List of Sample Output	show chassis environment cb (M120 Router) on page 548
	show chassis environment cb (M320 Router) on page 548
	show chassis environment cb (MX80 Router) on page 549
	show chassis environment cb (MX104 Router) on page 549
	show chassis environment cb (MX240 Router) on page 550
	show chassis environment cb (MX240 Router with Enhanced MX SCB) on page 550
	show chassis environment cb (MX480 Router) on page 550
	show chassis environment cb (MX480 Router with Enhanced MX SCB) on page 551
	show chassis environment cb (MX960 Router) on page 551
	show chassis environment cb (MX960 Router with Enhanced MX SCB) on page 552
	show chassis environment cb (MX2020 Router) on page 552
	show chassis environment cb (MX2010 Router) on page 553
	show chassis environment cb (T4000 Core Router) on page 554
	show chassis environment cb (TX Matrix Router) on page 554
	show chassis environment cb (TX Matrix Plus Router) on page 555
	show chassis environment cb (EX8200 Switch) on page 559
	show chassis environment cb (EX8208 Switch) on page 560
	show chassis environment cb (PTX5000 Packet Transport Router) on page 561
	show chassis environment cb (QFabric System) on page 562

Output Fields [Table 31 on page 547](#) lists the output fields for the **show chassis environment cb** command. Output fields are listed in the approximate order in which they appear.

Table 31: show chassis environment cb Output Fields

Field Name	Field Description
State	<p>Status of the CB. If two CBs are installed and online, one is functioning as the master, and the other is the standby.</p> <ul style="list-style-type: none"> • Online—CB is online and running. • Offline—CB is powered down. <p>NOTE: On the EX8208 switch, the installation can include three CBs. See <i>EX Series Switches Hardware and CLI Terminology Mapping</i>.</p>
Temperature	<p>Temperature in Celsius (C) and Fahrenheit (F) of the air flowing past the CB.</p> <ul style="list-style-type: none"> • Temperature Intake—Measures the temperature of the air intake to cool the power supplies. • Temperature Exhaust—Measures the temperature of the hot air exhaust. <p>NOTE: On the MX2010 and MX2020 routers, the intake temperature measures the temperature of the air intake to cool the Control Board (CB). The MX2010 and MX2020 routers include intake and exhaust temperatures for multiple zones (Intake A, Intake B, Intake C, Exhaust A, Exhaust B, and TCBC).</p>
Power	<p>Power required and measured on the CB. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.</p>
BUS Revision	<p>Revision level of the generic bus device. (Not on switches.)</p>

Table 31: show chassis environment cb Output Fields (*continued*)

Field Name	Field Description
FPGA Revision	Revision level of the field-programmable gate array (FPGA). (Not on switches.)
PMBus device (on MX240, MX480, and MX960 routers with Enhanced MX SCB)	Enhanced SCB on MX 240, MX480, and MX960 routers allows the system to save power by supplying only the amount of voltage that is required. Configurable PMBus devices are used to provide the voltage for each individual device. There is one PMBus device for each XF ASIC so that the output can be customized to each device. The following PMBus device information is displayed for routers with Enhanced MX SCB: <ul style="list-style-type: none"> • Expected voltage • Measured voltage • Measured current • Calculated power

Sample Output

show chassis environment cb (M120 Router)

```

user@host> show chassis environment cb
CB 0 status:
  State                Online Master
  Temperature          33 degrees C / 91 degrees F
  Power
    1.2 V              1214 mV
    1.5 V              1495 mV
    2.5 V              2494 mV
    3.3 V              3319 mV
    5.0 V              5085 mV
    3.3 V bias         3296 mV
  Bus Revision         12
  FPGA Revision        17
CB 1 status:
  State                Online Standby
  Temperature          34 degrees C / 93 degrees F
  Power
    1.2 V              1195 mV
    1.5 V              1495 mV
    2.5 V              2504 mV
    3.3 V              3312 mV
    5.0 V              5111 mV
    3.3 V bias         3296 mV
  Bus Revision         12
  FPGA Revision        17

```

show chassis environment cb (M320 Router)

```

user@host> show chassis environment cb
CB 0 status:
  State                Online Master
  Temperature          29 degrees C / 84 degrees F
  Power:
    1.8 V              1805 mV
    2.5 V              2501 mV
    3.3 V              3293 mV
    4.6 V              4725 mV

```

```

5.0 V          5032 mV
12.0 V         11975 mV
3.3 V bias     3286 mV
8.0 V bias     7589 mV
BUS Revision    40
FPGA Revision   7
CB 1 status:
State           Online Standby
Temperature     32 degrees C / 89 degrees F
Power:
1.8 V          1802 mV
2.5 V          2482 mV
3.3 V          3289 mV
4.6 V          4720 mV
5.0 V          5001 mV
12.0 V         11946 mV
3.3 V bias     3274 mV
8.0 V bias     7562 mV
BUS Revision    40
FPGA Revision   7

```

show chassis environment cb (MX80 Router)

```

user@host> show chassis environment cb
CB 0 status:
State           Online Master
Temperature     36 degrees C / 96 degrees F
Power 1
1.0 V           1034 mV
1.0 V MQ        1037 mV
1.0 V LU        1005 mV
1.2 V           1218 mV
1.5 V           1524 mV
1.8 V           1814 mV
2.5 V           2558 mV
3.3 V           3296 mV
5.0 V           5233 mV
5.0 V bias      5207 mV
12.0 V          12162 mV

```

show chassis environment cb (MX104 Router)

```

user@host > show chassis environment cb
CB 0 status:
State           Online Master
Temperature     33 degrees C / 91 degrees F
Power 1
0.75 V          751 mV
1.0 V           1005 mV
1.1 V           1113 mV
1.5 V           1494 mV
2.5 V           2518 mV
3.3 V           3338 mV
5.0 V           4960 mV
12.0 V          12006 mV
FPGA Revision    25
CB 1 status:
State           Empty

```

show chassis environment cb (MX240 Router)

```

user@host> show chassis environment cb
CB 0 status:
State                               Online Standby
Temperature                         37 degrees C / 98 degrees F
Power 1
  1.2 V                             1208 mV
  1.5 V                             1521 mV
  1.8 V                             1811 mV
  2.5 V                             2513 mV
  3.3 V                             3332 mV
  5.0 V                             5059 mV
  12.0 V                             12162 mV
  1.25 V                             1260 mV
  3.3 V SM3                         3306 mV
  5.0 V RE                          5085 mV
  12.0 V RE                         11872 mV
Power 2
  11.3 V bias PEM                   11272 mV
  4.6 V bias MidPlane               4827 mV
  11.3 V bias FPD                   11272 mV
  11.3 V bias POE 0                 11292 mV
  11.3 V bias POE 1                 11253 mV
Bus Revision                        42
FPGA Revision                       1

```

show chassis environment cb (MX240 Router with Enhanced MX SCB)

```

user@host> show chassis environment cb
CB 0 status:
State                               Online Standby
Temperature                         37 degrees C / 98 degrees F
Power 1
  1.2 V                             1208 mV
  1.5 V                             1521 mV
  1.8 V                             1811 mV
  2.5 V                             2513 mV
  3.3 V                             3332 mV
  5.0 V                             5059 mV
  12.0 V                             12162 mV
  1.25 V                             1260 mV
  3.3 V SM3                         3306 mV
  5.0 V RE                          5085 mV
  12.0 V RE                         11872 mV
Power 2
  11.3 V bias PEM                   11272 mV
  4.6 V bias MidPlane               4827 mV
  11.3 V bias FPD                   11272 mV
  11.3 V bias POE 0                 11292 mV
  11.3 V bias POE 1                 11253 mV
Bus Revision                        42
FPGA Revision                       1
PMBus
device      Expected voltage  Measured voltage  Measured current  Calculated power
XF ASIC A   1000 mV               997 mV            11031 mA           10997 mW
XF ASIC B   1000 mV               996 mV            12125 mA           12076 mW

```

show chassis environment cb (MX480 Router)

```

user@host> show chassis environment cb

```

```

CB 0 status:
State                               Online Master
Temperature                         41 degrees C / 105 degrees F
Power 1
  1.2 V                             1202 mV
  1.5 V                             1511 mV
  1.8 V                             1798 mV
  2.5 V                             2507 mV
  3.3 V                             3312 mV
  5.0 V                             5027 mV
  12.0 V                            12200 mV
  1.25 V                            1260 mV
  3.3 V SM3                         3293 mV
  5 V RE                            5040 mV
  12 V RE                           11910 mV
Power 2
  11.3 V bias PEM                   11156 mV
  4.6 V bias MidPlane               4801 mV
  11.3 V bias FPD                   11214 mV
  11.3 V bias POE 0                 11098 mV
  11.3 V bias POE 1                 11330 mV
Bus Revision                        42
FPGA Revision                       1

```

show chassis environment cb (MX480 Router with Enhanced MX SCB)

```

user@host> show chassis environment cb
CB 0 status:
State                               Online Master
Temperature                         41 degrees C / 105 degrees F
Power 1
  1.2 V                             1202 mV
  1.5 V                             1511 mV
  1.8 V                             1798 mV
  2.5 V                             2507 mV
  3.3 V                             3312 mV
  5.0 V                             5027 mV
  12.0 V                            12200 mV
  1.25 V                            1260 mV
  3.3 V SM3                         3293 mV
  5 V RE                            5040 mV
  12 V RE                           11910 mV
Power 2
  11.3 V bias PEM                   11156 mV
  4.6 V bias MidPlane               4801 mV
  11.3 V bias FPD                   11214 mV
  11.3 V bias POE 0                 11098 mV
  11.3 V bias POE 1                 11330 mV
Bus Revision                        42
FPGA Revision                       1
PMBus                               Expected   Measured   Measured   Calculated
device                             voltage    voltage    current    power
  XF ASIC A                        1000 mV    997 mV     11031 mA   10997 mW
  XF ASIC B                        1000 mV    996 mV     12125 mA   12076 mW

```

show chassis environment cb (MX960 Router)

```

user@host> show chassis environment cb
CB 0 status:
State                               Online Master
Temperature                         24 degrees C / 75 degrees F

```

```

Power 1
  1.2 V          1965 mV
  1.5 V          2465 mV
  1.8 V          2990 mV
  2.5 V          3296 mV
  3.3 V          3296 mV
  5.0 V          6593 mV
  12.0 V         13187 mV
  3.3 V bias     3296 mV
  1.25 V         1994 mV
  3.3 V SM3      3296 mV
  5 V RE         6593 mV
  12 V RE        13174 mV
Power 2          Sensor failure
Bus Revision     4
FPGA Revision    3

```

show chassis environment cb (MX960 Router with Enhanced MX SCB)

```

user@host> show chassis environment cb
CB 0 status:
  State          Online Master
  Temperature     24 degrees C / 75 degrees F
  Power 1
    1.2 V          1965 mV
    1.5 V          2465 mV
    1.8 V          2990 mV
    2.5 V          3296 mV
    3.3 V          3296 mV
    5.0 V          6593 mV
    12.0 V         13187 mV
    3.3 V bias     3296 mV
    1.25 V         1994 mV
    3.3 V SM3      3296 mV
    5 V RE         6593 mV
    12 V RE        13174 mV
  Power 2          Sensor failure
  Bus Revision     4
  FPGA Revision    3
  PMBus
  device           Expected voltage Measured voltage Measured current Calculated power
  XF ASIC A        1000 mV          997 mV          11031 mA       10997 mW
  XF ASIC B        1000 mV          996 mV          12125 mA       12076 mW

```

show chassis environment cb (MX2020 Router)

```

user@host> show chassis environment cb
CB 0 status:
  State          Online Master
  IntakeA-Zone0 Temperature 44 degrees C / 111 degrees F
  IntakeB-Zone1 Temperature 34 degrees C / 93 degrees F
  IntakeC-Zone0 Temperature 45 degrees C / 113 degrees F
  ExhaustA-Zone0 Temperature 43 degrees C / 109 degrees F
  ExhaustB-Zone1 Temperature 36 degrees C / 96 degrees F
  TCBC-Zone0 Temperature 39 degrees C / 102 degrees F
  Power 1
    1.0 V          1011 mV
    1.2 V          1208 mV
    1.8 V          1801 mV
    2.5 V          2552 mV
    3.3 V          3312 mV

```

```

5.0 V          5040 mV
5.0 V RE       4988 mV
12.0 V         12065 mV
12.0 V RE      12046 mV
Bus Revision    99
FPGA Revision   270
CB 1 status:
State           Online Standby
IntakeA-Zone0 Temperature 45 degrees C / 113 degrees F
IntakeB-Zone1 Temperature 41 degrees C / 105 degrees F
IntakeC-Zone0 Temperature 46 degrees C / 114 degrees F
ExhaustA-Zone0 Temperature 44 degrees C / 111 degrees F
ExhaustB-Zone1 Temperature 41 degrees C / 105 degrees F
TCBC-Zone0 Temperature 45 degrees C / 113 degrees F
Power 1
1.0 V          1008 mV
1.2 V          1208 mV
1.8 V          1798 mV
2.5 V          2539 mV
3.3 V          3325 mV
5.0 V          5033 mV
5.0 V RE       4950 mV
12.0 V         12046 mV
12.0 V RE      11968 mV
Bus Revision    99
FPGA Revision   0

```

show chassis environment cb (MX2010 Router)

```

user@host> show chassis environment cb
CB 0 status:
State           Online Master
IntakeA-Zone0 Temperature 36 degrees C / 96 degrees F
IntakeB-Zone1 Temperature 30 degrees C / 86 degrees F
IntakeC-Zone0 Temperature 38 degrees C / 100 degrees F
ExhaustA-Zone0 Temperature 36 degrees C / 96 degrees F
ExhaustB-Zone1 Temperature 32 degrees C / 89 degrees F
TCBC-Zone0 Temperature 34 degrees C / 93 degrees F
Power 1
1.0 V          1015 mV
1.2 V          1205 mV
1.8 V          1804 mV
2.5 V          2552 mV
3.3 V          3325 mV
5.0 V          5020 mV
5.0 V RE       4988 mV
12.0 V         12104 mV
12.0 V RE      12026 mV
Bus Revision    100
FPGA Revision   270
CB 1 status:
State           Online
IntakeA-Zone0 Temperature 35 degrees C / 95 degrees F
IntakeB-Zone1 Temperature 28 degrees C / 82 degrees F
IntakeC-Zone0 Temperature 37 degrees C / 98 degrees F
ExhaustA-Zone0 Temperature 34 degrees C / 93 degrees F
ExhaustB-Zone1 Temperature 29 degrees C / 84 degrees F
TCBC-Zone0 Temperature 32 degrees C / 89 degrees F
Power 1
1.0 V          1011 mV
1.2 V          1208 mV

```

1.8 V	1788 mV
2.5 V	2526 mV
3.3 V	3319 mV
5.0 V	5046 mV
5.0 V RE	4975 mV
12.0 V	12046 mV
12.0 V RE	12007 mV
Bus Revision	100
FPGA Revision	0

show chassis environment cb (T4000 Core Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                Online Master
  Temperature          33 degrees C / 91 degrees F
  Power 1
    1.8 V              1805 mV
    2.5 V              2523 mV
    3.3 V              3324 mV
    3.3 V bias         3296 mV
    4.6 V              4680 mV
    5.0 V              4893 mV
    8.0 V bias         7572 mV
    12.0 V             11916 mV
  Power 2
    1.0 V              993 mV
    1.2 V              1210 mV
    3.3 V RE           3330 mV
  Bus Revision         51
  FPGA Revision        5
CB 1 status:
  State                Online Standby
  Temperature          33 degrees C / 91 degrees F
  Power 1
    1.8 V              1810 mV
    2.5 V              2496 mV
    3.3 V              3308 mV
    3.3 V bias         3286 mV
    4.6 V              4692 mV
    5.0 V              4954 mV
    8.0 V bias         7282 mV
    12.0 V             11926 mV
  Power 2
    1.0 V              993 mV
    1.2 V              1185 mV
    3.3 V RE           3316 mV
  Bus Revision         51
  FPGA Revision        5
```

show chassis environment cb (TX Matrix Router)

```
user@host> show chassis environment cb
-----
CB 0 status:
  State                Online Master
  Temperature          32 degrees C / 89 degrees F
  Power:
    1.8 V              1797 mV
    2.5 V              2477 mV
    3.3 V              3311 mV
```



```

4.6 V          4727 mV
5.0 V          5015 mV
12.0 V         12185 mV
3.3 V bias     3304 mV
8.0 V bias     7870 mV
BUS Revision   40
FPGA Revision  1
CB 1 status:
State          Online Standby
...

lcc0-re0:
-----
CB 0 status:
State          Online Master
Temperature    32 degrees C / 89 degrees F
Power:
  1.8 V        1787 mV
  2.5 V        2473 mV
  3.3 V        3306 mV
  4.6 V        4793 mV
  5.0 V        5025 mV
  12.0 V       12156 mV
  3.3 V bias   3289 mV
  8.0 V bias   7609 mV
BUS Revision   40
FPGA Revision  5
CB 1 status:
State          Online Standby
....
BUS Revision   40
FPGA Revision  5

lcc2-re0:
-----
CB 0 status:
State          Online Master
...
CB 1 status:
State          Online Standby
...

```

show chassis environment cb (TX Matrix Plus Router)

```

user@host> show chassis environment cb
sfc0-re0:
-----
CB 0 status:
State          Online Master
Temperature    38 degrees C / 100 degrees F
Power 1
  1.0 V        1005 mV
  1.1 V        1108 mV
  1.2 V        1205 mV
  1.25 V       1269 mV
  1.5 V        1508 mV
  1.8 V        1814 mV
  2.5 V        2507 mV
  3.3 V        3306 mV
  3.3 V bias   3300 mV
  9.0 V        9058 mV

```

```

    9.0 V RE          9107 mV
Power 2
    3.9 V            3963 mV
    5.0 V            5020 mV
    9.0 V            9087 mV
Bus Revision         79
FPGA Revision        23
CB 1 status:
State                Online Standby
Temperature           39 degrees C / 102 degrees F
Power 1
    1.0 V            1002 mV
    1.1 V            1105 mV
    1.2 V            1198 mV
    1.25 V           1276 mV
    1.5 V            1504 mV
    1.8 V            1804 mV
    2.5 V            2507 mV
    3.3 V            3300 mV
    3.3 V bias       3293 mV
    9.0 V            9039 mV
    9.0 V RE         9049 mV
Power 2
    3.9 V            3892 mV
    5.0 V            5040 mV
    9.0 V            9058 mV
Bus Revision         79
FPGA Revision        23

```

lcc0-re0:

```

-----
CB 0 status:
State                Online Master
Temperature           39 degrees C / 102 degrees F
Power 1
    1.8 V            1799 mV
    2.5 V            2499 mV
    3.3 V            3327 mV
    3.3 V bias       3299 mV
    4.6 V            4673 mV
    5.0 V            4918 mV
    8.0 V bias       7308 mV
    12.0 V           11887 mV
Power 2
    1.0 V            996 mV
    1.2 V            1199 mV
    3.3 V RE         3319 mV
Bus Revision         51
FPGA Revision        3
CB 1 status:
State                Online Standby
Temperature           40 degrees C / 104 degrees F
Power 1
    1.8 V            1800 mV
    2.5 V            2496 mV
    3.3 V            3322 mV
    3.3 V bias       3284 mV
    4.6 V            4680 mV
    5.0 V            4954 mV
    8.0 V bias       7284 mV
    12.0 V           11902 mV

```

```

Power 2
  1.0 V          998 mV
  1.2 V          1205 mV
  3.3 V RE       3327 mV
Bus Revision     51
FPGA Revision    3

```

```
lcc1-re0:
```

```
-----
CB 0 status:
```

```

State           Online Master
Temperature      41 degrees C / 105 degrees F
Power 1
  1.8 V          1804 mV
  2.5 V          2517 mV
  3.3 V          3300 mV
  3.3 V bias     3284 mV
  4.6 V          4681 mV
  5.0 V          4927 mV
  8.0 V bias     7357 mV
  12.0 V         11907 mV
Power 2
  1.0 V          991 mV
  1.2 V          1202 mV
  3.3 V RE       3301 mV
Bus Revision     51
FPGA Revision    3

```

```
CB 1 status:
```

```

State           Online Standby
Temperature      40 degrees C / 104 degrees F
Power 1
  1.8 V          1805 mV
  2.5 V          2528 mV
  3.3 V          3324 mV
  3.3 V bias     3289 mV
  4.6 V          4694 mV
  5.0 V          4959 mV
  8.0 V bias     7311 mV
  12.0 V         11926 mV
Power 2
  1.0 V          998 mV
  1.2 V          1200 mV
  3.3 V RE       3313 mV
Bus Revision     51
FPGA Revision    3

```

```
lcc2-re0:
```

```
-----
CB 0 status:
```

```

State           Online Master
Temperature      41 degrees C / 105 degrees F
Power 1
  1.8 V          1805 mV
  2.5 V          2494 mV
  3.3 V          3333 mV
  3.3 V bias     3296 mV
  4.6 V          4673 mV
  5.0 V          4901 mV
  8.0 V bias     7343 mV
  12.0 V         11916 mV
Power 2

```

```

1.0 V          993 mV
1.2 V          1213 mV
3.3 V RE       3328 mV
Bus Revision   51
FPGA Revision  3
CB 1 status:
State          Online Standby
Temperature    41 degrees C / 105 degrees F
Power 1
1.8 V          1804 mV
2.5 V          2523 mV
3.3 V          3334 mV
3.3 V bias     3291 mV
4.6 V          4697 mV
5.0 V          4969 mV
8.0 V bias     7308 mV
12.0 V         11936 mV
Power 2
1.0 V          996 mV
1.2 V          1200 mV
3.3 V RE       3328 mV
Bus Revision   51
FPGA Revision  3

```

lcc3-re0:

```

-----
CB 0 status:
State          Online Master
Temperature    37 degrees C / 98 degrees F
Power 1
1.8 V          1809 mV
2.5 V          2510 mV
3.3 V          3296 mV
3.3 V bias     3291 mV
4.6 V          4670 mV
5.0 V          4905 mV
8.0 V bias     7211 mV
12.0 V         11882 mV
Power 2
1.0 V          996 mV
1.2 V          1188 mV
3.3 V RE       3326 mV
Bus Revision   51
FPGA Revision  5
CB 1 status:
State          Online Standby
Temperature    38 degrees C / 100 degrees F
Power 1
1.8 V          1813 mV
2.5 V          2510 mV
3.3 V          3322 mV
3.3 V bias     3289 mV
4.6 V          4692 mV
5.0 V          4967 mV
8.0 V bias     7194 mV
12.0 V         11916 mV
Power 2
1.0 V          996 mV
1.2 V          1205 mV
3.3 V RE       3273 mV

```

```

Bus Revision          51
FPGA Revision         5

```

show chassis environment cb (EX8200 Switch)

```
user@host> show chassis environment cb
```

```

CB 0 status:
State                Online Master
Temperature Intake    20 degrees C / 68 degrees F
Temperature Exhaust   24 degrees C / 75 degrees F
Power 1
  1.1 V              1086 mV
  1.2 V              1179 mV
  1.2 V *            1182 mV
  1.2 V *            1182 mV
  1.25 V             1211 mV
  1.5 V              1472 mV
  1.8 V              1756 mV
  2.5 V              2449 mV
  3.3 V              3254 mV
  3.3 V bias         3300 mV
  5.0 V              4911 mV
  12.0 V             11891 mV
Power 2
  3.3 V bias *       3615 mV
  3.3 V bias *       3615 mV
  3.3 V bias *       3567 mV
  3.3 V bias *       3664 mV
  4.3 V bias *       4224 mV
  4.3 V bias *       4215 mV
  4.3 V bias *       4224 mV
  4.3 V bias *       4205 mV
  4.3 V bias *       4195 mV
  4.3 V bias *       4215 mV
  5.0 V bias         4920 mV
CB 1 status:
State                Online Standby
Temperature Intake    19 degrees C / 66 degrees F
Temperature Exhaust   23 degrees C / 73 degrees F
Power 1
  1.1 V              1082 mV
  1.2 V              1169 mV
  1.2 V *            1179 mV
  1.2 V *            1179 mV
  1.25 V             1214 mV
  1.5 V              1482 mV
  1.8 V              1759 mV
  2.5 V              2481 mV
  3.3 V              3248 mV
  3.3 V bias         3306 mV
  5.0 V              4911 mV
  12.0 V             11910 mV
Power 2
  3.3 V bias *       3644 mV
  3.3 V bias *       3664 mV
  3.3 V bias *       3586 mV
  3.3 V bias *       3654 mV
  4.3 V bias *       4224 mV
  4.3 V bias *       4215 mV
  4.3 V bias *       4224 mV

```

```

4.3 V bias *          4205 mV
4.3 V bias *          4244 mV
4.3 V bias *          4215 mV
5.0 V bias            4930 mV
CB 2 status:
State                  Online
Temperature Intake     19 degrees C / 66 degrees F
Temperature Exhaust    23 degrees C / 73 degrees F
Power 1
  1.2 V                1195 mV
  1.5 V                1511 mV
  1.8 V                1804 mV
  2.5 V                2526 mV
  3.3 V                3300 mV
  3.3 V bias           3306 mV
  12.0 V               12220 mV

```

show chassis environment cb (EX8208 Switch)

```

user@host> show chassis environment cb
CB 0 status:
State                  Online Master
Temperature Intake     20 degrees C / 68 degrees F
Temperature Exhaust    24 degrees C / 75 degrees F
Power 1
  1.1 V                1086 mV
  1.2 V                1179 mV
  1.2 V *              1182 mV
  1.2 V *              1182 mV
  1.25 V               1211 mV
  1.5 V                1466 mV
  1.8 V                1759 mV
  2.5 V                2455 mV
  3.3 V                3261 mV
  3.3 V bias           3300 mV
  5.0 V                4930 mV
  12.0 V               11891 mV
Power 2
  3.3 V bias *         3606 mV
  3.3 V bias *         3615 mV
  3.3 V bias *         3567 mV
  3.3 V bias *         3673 mV
  4.3 V bias *         4224 mV
  4.3 V bias *         4215 mV
  4.3 V bias *         4234 mV
  4.3 V bias *         4205 mV
  4.3 V bias *         4186 mV
  4.3 V bias *         4215 mV
  5.0 V bias           4940 mV
CB 1 status:
State                  Online Standby
Temperature Intake     19 degrees C / 66 degrees F
Temperature Exhaust    23 degrees C / 73 degrees F
Power 1
  1.1 V                1086 mV
  1.2 V                1169 mV
  1.2 V *              1179 mV
  1.2 V *              1179 mV
  1.25 V               1211 mV
  1.5 V                1479 mV
  1.8 V                1759 mV

```

```

2.5 V                2475 mV
3.3 V                3235 mV
3.3 V bias           3306 mV
5.0 V                4930 mV
12.0 V               11891 mV
Power 2
  3.3 V bias *        3644 mV
  3.3 V bias *        3664 mV
  3.3 V bias *        3586 mV
  3.3 V bias *        3654 mV
  4.3 V bias *        4215 mV
  4.3 V bias *        4224 mV
  4.3 V bias *        4215 mV
  4.3 V bias *        4215 mV
  4.3 V bias *        4234 mV
  4.3 V bias *        4224 mV
  5.0 V bias          4920 mV
CB 2 status:
  State               Online
  Temperature Intake   20 degrees C / 68 degrees F
  Temperature Exhaust  24 degrees C / 75 degrees F
Power 1
  1.2 V               1202 mV
  1.5 V               1508 mV
  1.8 V               1804 mV
  2.5 V               2520 mV
  3.3 V               3300 mV
  3.3 V bias          3300 mV
  12.0 V              12200 mV

```

show chassis environment cb (PTX5000 Packet Transport Router)

```

user@host> show chassis environment cb
CB 0 status:
  State               Online Master
  Intake Temperature   38 degrees C / 100 degrees F
  Exhaust A Temperature 45 degrees C / 113 degrees F
  Exhaust B Temperature 42 degrees C / 107 degrees F
Power 1
  1.2 V               1200 mV
  1.25 V              1250 mV
  2.5 V               2500 mV
  3.3 V               3300 mV
Power 2
  1.0 V               1000 mV
  3.3 V bias          3293 mV
  3.9 V               3921 mV
Bus Revision           132
FPGA Revision          27
CB 1 status:
  State               Online Standby
  Intake Temperature   34 degrees C / 93 degrees F
  Exhaust A Temperature 39 degrees C / 102 degrees F
  Exhaust B Temperature 36 degrees C / 96 degrees F
Power 1
  1.2 V               1199 mV
  1.25 V              1250 mV
  2.5 V               2499 mV
  3.3 V               3299 mV
Power 2
  1.0 V               1000 mV

```

3.3 V bias	3312 mV
3.9 V	3961 mV
Bus Revision	132
FPGA Revision	28

show chassis environment cb (QFabric System)

```
user@switch> show chassis environment cb interconnect-device IC-123 0
CB 0 status:
```

State	Online Master
Left Intake Temperature	33 degrees C / 91 degrees F
Right Intake Temperature	33 degrees C / 91 degrees F
Left Exhaust Temperature	36 degrees C / 96 degrees F
Right Exhaust Temperature	35 degrees C / 95 degrees F
Power	OK
VDD 3V3	3294 mV
VDD 2V5	2436 mV
VDD 1V8	1746 mV
VDD 1V5	1460 mV
VDD 1V25	1210 mV
VDD 1V2	1164 mV
CPU CORE 1V2	1120 mV
VDD 1V0	968 mV
VDD 5V0	5088 mV
CPU MP BIAS 4V3	4050 mV
BIAS 3V3	3180 mV
VTT 0V9	866 mV

CHAPTER 29

Recovery Installation Operational Commands

- request system configuration rescue delete
- request system configuration rescue save
- request system software configuration-backup
- request system software configuration-restore
- request system software recover-from-restore-point
- request system software restore-point
- show system software restore-point-status

request system configuration rescue delete

Syntax request system configuration rescue delete

Release Information Command introduced before Junos OS Release 7.4.
Command introduced in Junos OS Release 9.0 for EX Series switches.
Command introduced in Junos OS Release 11.1 for the QFX Series.
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Delete an existing rescue configuration.



NOTE: The [edit system configuration] hierarchy is not available on QFabric systems.

Options This command has no options.

Required Privilege Level maintenance

Related Documentation

- [request system configuration rescue save on page 400](#)
- [request system software rollback on page 1311](#)
- [show system commit on page 1084](#)

List of Sample Output [request system configuration rescue delete on page 564](#)


Output Fields This command produces no output.

Sample Output

request system configuration rescue delete

```
user@host> request system configuration rescue delete
```

request system configuration rescue save

Syntax	request system configuration rescue save
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Save the most recently committed configuration as the rescue configuration so that you can return to it at any time by using the rollback command.
<div>  <p>NOTE: The [edit system configuration] hierarchy is not available on QFabric systems.</p> </div>	
Options	This command has no options.
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none"> • request system software delete on page 1305 • request system software rollback on page 1311 • show system commit on page 1084
List of Sample Output	request system configuration rescue save on page 565
Output Fields	This command produces no output.

Sample Output

request system configuration rescue save

```
user@host> request system configuration rescue save
```

request system software configuration-backup

Syntax	request system software configuration-backup (<i>path</i>)
Release Information	Command introduced in Junos OS Release 11.3 for the QFX Series.
Description	Save the currently active configuration and any installation-specific parameters such as a configuration that you have entered outside of the CLI, Director group IP addresses, and the default partition IP address.
Options	path —(QFabric System) Provide the path to the location of the backup configuration files. You can save the backup configuration files to either a URL, local directory, remote server, or removable drive.
Required Privilege Level	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
Related Documentation	<ul style="list-style-type: none"> • request system software configuration-restore on page 567 • Performing a QFabric System Recovery Installation on the Director Group on page 182
List of Sample Output	request system software configuration-backup on page 566
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system software configuration-backup

```

user@switch request system software configuration-backup ftp://ftp.test.net/test
% Total    % Received % Xferd  Average Speed   Time    Time     Time  Current
                       Dload  Upload  Total   Spent    Left
Speed
100      4035    0    0   100 4035    0    138k  --:--:-- --:--:-- --:--:--
0

```

request system software configuration-restore

Syntax	request system software configuration-restore (<i>path</i>)
Release Information	Command introduced in Junos OS Release 11.3 for the QFX Series.
Description	Restore a previously saved configuration and any installation-specific parameters, such as a configuration that you have entered outside of the CLI, Director group IP addresses, and the default partition IP address.
Options	path —(QFabric System) Provide the path to the location of the backup configuration files. The path can be to a local file, a file on an external flash drive, or an SCP or FTP destination.
Required Privilege Level	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
Related Documentation	<ul style="list-style-type: none"> • request system software configuration-backup on page 566 • Performing a QFabric System Recovery Installation on the Director Group on page 182
List of Sample Output	request system software configuration-restore on page 567
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output


request system software configuration-restore

```

user@switch request system software configuration-restore ftp://ftp.test.net/test
% Total    % Received % Xferd  Average Speed   Time    Time     Time  Current
           Dload  Upload   Total     Spent    Left  Speed
100 4035  100 4035    0     0  153k      0  --:--:-- --:--:-- --:--:-- 3803k

```

request system software recover-from-restore-point

Syntax	<code>request system software recover-from-restore-point</code>
Release Information	Command introduced in Junos OS Release 14.1X53-D15 for the QFX Series.
Description	Rollback to a previously created restore-point.
<div>  NOTE: Rolling back to a previously created restore-point might disrupt traffic, as both Director devices reboot from the restore-point partition. </div>	
Required Privilege Level	configure
Related Documentation	<ul style="list-style-type: none"> request system software restore-point on page 569
List of Sample Output	request system software recover-from-restore-point on page 568

Sample Output

request system software recover-from-restore-point

```

root@qfabric> request system software recover-from-restore-point
Start Restore
Checking if the restore-point exists
LogVol100 has the root filesystem
Found Restore-Point: Fri Aug 15 07:42:39 UTC 2014 /dev/VolGroup00/LogVol103
Mounting restore-volume LogVol103
Checking the sanity of restore-point
Checking if the restore DB is present
Checking if the restore grub is present
Checking the current state of the system
Checking the state of cluster services
Checking the inventory
Checking if the peer is reachable
Checking if peer is reachable via Compute Node Monitor
Successfully communicated with peer over 169.254.0.2
Intimating the peer to do stage INITIATE_PEER_INITIAL_STAGE of downgrade
Preparing the system to downgrade
Prepping all Junos devices
Checking status at Peer
Downgrade first stage at peer concluded successfully
Initiating final stage of downgrade in peer
Intimating the peer to do stage INITIATE_PEER_FINAL_STAGE of downgrade
Modify loader to boot from restore-point
Move mount points to new filesystem
Force Reboot
Rebooting....

```

request system software restore-point

Syntax	<code>request system software restore-point</code>
Release Information	Command introduced in Junos OS Release 14.1X53-D15 for the QFX Series.
Description	Creates a restore-point. A restore-point is a snapshot of snapshot of the QFabric system.
Required Privilege Level	configure
Related Documentation	<ul style="list-style-type: none"> request system software recover-from-restore-point on page 568
List of Sample Output	request system software restore-point on page 569

Sample Output

request system software restore-point

```

root@qfabric> request system software restore-point
Checking if director-device upgrade is currently in progress.
Checking VM status.
Checking for communication between director devices.
Checking inventory status of all components.
Checking Server INE passwords.
Checking FC passwords.
Checking CCPC passwords.
Checking FM-0 passwords.
Checking DRE-0 passwords.
Checking NW-NG-0 passwords.
Checking chassis alarms.
0
sent command to peer to start operation
sanity checks passed
Performing fdisk
restore partition created
creating restore partition on physical disk
device /dev/sda: start 0 size -388718592
gpt: 0 slices
dos: 4 slices
# 1:      63-   208844 (   208782 sectors,   106 MB)
# 2:   208845-1048771394 (1048562550 sectors, 536864 MB)
# 3: 1048771395-1146446594 ( 97675200 sectors,  50009 MB)
# 4: 1146446595-2146460714 (1000014120 sectors, 512007 MB)
performing physical volume creation
Physical volume "/dev/sda4" successfully created
"/dev/sda4" is a new physical volume of "476.84 GB"
PV Name                /dev/sda4
extending volume group 00
Volume group "VolGroup00" successfully extended
Creating Logical Volume
Logical volume "LogVo103" created
LV Name                /dev/VolGroup00/LogVo103
Restore volume selected is /dev/VolGroup00/LogVo103
Formatting restore volume
mke2fs 1.39 (29-May-2006)
Filesystem label=

```

```
OS type: Linux
Block size=4096 (log=2)
Fragment size=4096 (log=2)
62504960 inodes, 124993536 blocks
6249676 blocks (5.00%) reserved for the super user
First data block=0
Maximum filesystem blocks=4294967296
3815 block groups
32768 blocks per group, 32768 fragments per group
16384 inodes per group
Superblock backups stored on blocks:
    32768, 98304, 163840, 229376, 294912, 819200, 884736, 1605632, 2654208,
    4096000, 7962624, 11239424, 20480000, 23887872, 71663616, 78675968,
    102400000

Creating journal (32768 blocks): done
Writing superblocks and filesystem accounting information: done

This filesystem will be automatically checked every 22 mounts or
180 days, whichever comes first.  Use tune2fs -c or -i to override.
/dev/VolGroup00/LogVol103: UUID="a9fafbaf-da3c-417f-bd53-def01fbf3936"
SEC_TYPE="ext2" TYPE="ext3"
Restore Volume mounted
backing up root filesystem..this will take a few minutes
Copying files from tmp..this may take a few minutes
Dumping databases...this may take a few minutes
backing up shared filesystem..this may take a few minutes
Restore point creation finished for dg0 on /dev/VolGroup00/LogVol103
waiting 10 mins for for peer dg to finish
Restore point creation success on both DGs
```


show system software restore-point-status

Syntax	show system software restore-point-status
Release Information	Command introduced in Junos OS Release 14.1X53-D15 for the QFX Series.
Description	Display the status of the restore point for the QFabric system. A restore-point contains both a snapshot of the software and a configuration file for the QFabric system. You can only create one restore-point. When you create a new restore-point, the existing restore-point, if available, is erased.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • request system software restore-point on page 569
List of Sample Output	show system software restore-point status on page 571
Output Fields	Table 32 on page 571 lists the output fields for the show system software restore-point status command. Output fields are listed in the approximate order in which they appear.

Table 32: show system software restore-point status Output Fields

Field Name	Field Description
Member	Name of the Director device.
Creation Time	Time when the restore-point was created.
Status	Status of restore-point creation.
Restore volume	Name and path to restore volume used to create the restore-point.

Sample Output

show system software restore-point status

```

user@qfabric> show system software restore-point status
Member  Creation Time   Status  Restore volume
-----  -
dg0    Aug 15 07:42:39 2014  success  /dev/VolGroup00/LogVol103
dg1    Aug 15 07:42:27 2014  success  /dev/VolGroup00/LogVol103

```


CHAPTER 30

Routine Monitoring Operational Commands

- `show chassis alarms`
- `show chassis beacon`
- `show chassis environment`
- `show chassis environment fpc`
- `show chassis environment pem`
- `show chassis environment routing-engine`
- `show chassis fan`
- `show chassis firmware`
- `show chassis fpc`
- `show chassis hardware`
- `show chassis lcd`
- `show chassis led`
- `show chassis location`
- `show chassis mac-addresses`
- `show chassis pic`
- `show chassis routing-engine`
- `show chassis temperature-thresholds`
- `show chassis zones`
- `show host`
- `show interfaces diagnostics optics`
- `show log`
- `show subscribers`
- `show system alarms`
- `show system audit`
- `show system boot-messages`
- `show system buffers`

- `show system certificate`
- `show system commit`
- `show system configuration archival`
- `show system configuration rescue`
- `show system connections`
- `show system core-dumps`
- `show system directory-usage`
- `show system processes`
- `show system reboot`
- `show system resource-cleanup processes`
- `show system services service-deployment`
- `show system statistics`
- `show system storage`
- `show system uptime`
- `show system users`
- `show system virtual-memory`
- `show version`
- `start shell`
- `test configuration`
- `traceroute`
- `traceroute monitor`

show chassis alarms

List of Syntax	Syntax on page 575 Syntax (TX Matrix Routers) on page 575 Syntax (TX Matrix Plus Routers) on page 575 Syntax (MX Series Routers) on page 575 Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers) on page 575 Syntax (QFX Series) on page 575 Syntax (OCX Series) on page 575 Syntax (PTX Series Packet Transport Routers) on page 575 Syntax (ACX Series Universal Access Routers) on page 575
Syntax	show chassis alarms
Syntax (TX Matrix Routers)	show chassis alarms <lcc <i>number</i> scc>
Syntax (TX Matrix Plus Routers)	show chassis alarms <lcc <i>number</i> sfc <i>number</i> >
Syntax (MX Series Routers)	show chassis alarms <all-members> <local> <member <i>member-id</i> >
Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers)	show chassis alarms
Syntax (QFX Series)	show chassis alarms <interconnect-device <i>name</i> > <node-device <i>name</i> >
Syntax (OCX Series)	show chassis alarms
Syntax (PTX Series Packet Transport Routers)	show chassis alarms
Syntax (ACX Series Universal Access Routers)	show chassis alarms
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc option for the TX Matrix Plus router introduced in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Routers.

Command introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.

Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.

Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.

Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display information about the conditions that have been configured to trigger alarms.

Options **none**—Display information about the conditions that have been configured to trigger alarms.

all-members—(MX Series routers only) (Optional) Display information about alarm conditions for all the member routers of the Virtual Chassis configuration.

interconnect-device *name*—(QFabric systems only) (Optional) Display information about alarm conditions for the Interconnect device.

lcc *number*—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display information about alarm conditions for the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display information about alarm conditions for the specified member of the Virtual Chassis configuration. Replace *member-id* variable with a value of 0 or 1.

node-device *name*—(QFabric systems only) (Optional) Display information about alarm conditions for the Node device.

scc—(TX Matrix router only) (Optional) Show information about the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus router only) (Optional) Show information about the respective TX Matrix Plus router, which is the switch-fabric chassis. Replace *number* variable with 0.

Additional Information You cannot clear the alarms for chassis components. Instead, you must remedy the cause of the alarm. When a chassis alarm LED is lit, it indicates that you are running the router or switch in a manner that we do not recommend.

On routers, you can manually silence external devices connected to the alarm relay contacts by pressing the alarm cutoff button, located on the craft interface. Silencing the device does not remove the alarm messages from the display (if present on the router) or extinguish the alarm LEDs. In addition, new alarms that occur after you silence an external device reactivate the external device.

In Junos OS release 11.1 and later, alarms for fans also show the slot number of the fans in the CLI output.

In Junos OS Release 11.2 and later, the command output on EX8200 switches shows the detailed location (**Plane/FPC/PFE**) for link errors in the chassis.

In Junos OS Release 10.2 and later, an alarm is shown on T Series routers for a standby sonic clock generator (SCG) that is offline or absent.

You may often see the following error messages, in which only the error code is shown and no other information is provided:

```
Apr 12 08:04:10 send: red alarm set, device FPC 6, reason FPC 6 Major Errors
- Error code: 257
Apr 12 08:04:19 send: red alarm set, device FPC 1, reason FPC 1 Major Errors
- Error code: 559
```

To understand what CM_ALARM error codes mean, you need to first identify the structure of the CM Alarm codes. A CM_ALARM code has the following structure:

Bits:	Error type:
1-31	Major (1)
0	Minor (0)

According to the table above, the LSB (bit 0) identifies the **Error Type** (major alarm, if the bit is set and minor alarm if the bit is unset). The rest of the bits (1 - 31) identify the actual error code.

Take an example of the following error code, which was logged on a T1600:

```
Apr 12 08:04:10 send: red alarm set, device FPC 1, reason FPC 1 Major Errors
- Error code: 559
```

First, you have to convert 559 to binary; that is **100010111**. The LSB in this case is 1, which means that this is a major alarm. After removing the LSB, you are left with **10001011**, which is equal to 279 in decimal. This is the actual error code, its meaning can be found from the following list:

Chip Type: L Chip	Code
CMALARM_LCHIP_LOUT_DESRD_PARITY_ERR	1

CMALARM_LCHIP_LOUT_DESRD_UNINIT_ERR	2
CMALARM_LCHIP_LOUT_DESRD_ILLEGALLINK_ERR	3
CMALARM_LCHIP_LOUT_DESRD_ILLEGALSIZERR	4
CMALARM_LCHIP_LOUT_HDRF_TOERR_ERR	5
CMALARM_LCHIP_LOUT_HDRF_PARITY_ERR	6
CMALARM_LCHIP_LOUT_HDRF_UCERR_ERR	7
CMALARM_LCHIP_LOUT_NLIF_CRCDROP_ERR	8
CMALARM_LCHIP_LOUT_NLIF_CRCERR_ERR	9
CMALARM_LCHIP_UCODE_TIMEOUT_ERR	10
CMALARM_LCHIP_LIN_SRCTL_ACCT_DROP_ERR	11
CMALARM_LCHIP_LIN_SRCTL_ACCT_ADDR_SIZE_ERR	12
CMALARM_LCHIP_SRAM_PARITY_ERR	13
CMALARM_LCHIP_UCODE_OVFLW_ERR	14
CMALARM_LCHIP_LOUT_HDRF_MTU_ERR	15
Chip Type: M Chip	
	Code
CMALARM_MCHIP_ECC_UNCORRECT_ERR	128
Chip Type: N Chip	
	Code
CMALARM_NCHIP_RDDMA_JBUS_TIMEOUT_ERR	256
CMALARM_NCHIP_RDDMA_FIFO_OVFLW_ERR	257
CMALARM_NCHIP_RDDMA_FIFO_UNFLW_ERR	258
CMALARM_NCHIP_RDDMA_SIZE_ERR	259
CMALARM_NCHIP_RDDMA_JBUS_CRC_ERR	260
CMALARM_NCHIP_WRDMA_PKTR_ERR	261
CMALARM_NCHIP_WRDMA_PKT_CRC_ERR	262
CMALARM_NCHIP_WRDMA_JBUS_TIMEOUT_ERR	263

CMALARM_NCHIP_WRDMA_FIFO_OVFLW_ERR	264
CMALARM_NCHIP_WRDMA_FIFO_UNFLW_ERR	265
CMALARM_NCHIP_WRDMA_PKT_LEN_ERR	266
CMALARM_NCHIP_WRDMA_JBUS_CRC_ERR	267
CMALARM_NCHIP_PKTR_DMA_AGE_ERR	268
CMALARM_NCHIP_PKTR_ICELLSIG_ERR	269
CMALARM_NCHIP_PKTR_FTTL_ERR	270
CMALARM_NCHIP_RODR_OFFSET_OVFLW_ERR	271
CMALARM_NCHIP_PKTR_TMO_CELL_ERR	272
CMALARM_NCHIP_PKTR_TMO_OUTRANGE_ERR	273
CMALARM_NCHIP_PKTR_MD_REQUEST_Q_OVFLW_ERR	274
CMALARM_NCHIP_PKTR_DMA_BUFFER_OVFLW_ERR	275
CMALARM_NCHIP_PKTR_GRT_OVFLW_ERR	276
CMALARM_NCHIP_FRQ_ERR	277
CMALARM_NCHIP_RODR_IN_Q_OVFLW_ERR	278
CMALARM_NCHIP_DBUF_CRC_ERR	279

Chip Type: R Chip	Code
CMALARM_RCHIP_SRAM_PARITY_ERR	512

Chip Type: R Chip	Code
CMALARM_ICHIP_WO_DESRD_ID_ERR	601
CMALARM_ICHIP_WO_DESRD_DATA_ERR	602
CMALARM_ICHIP_WO_DESRD_OFLOW_ERR	603
CMALARM_ICHIP_WO_HDRF_UCERR_ERR	604
CMALARM_ICHIP_WO_HDRF_MTUERR_ERR	605
CMALARM_ICHIP_WO_HDRF_PARITY_ERR	606

CMALARM_ICHIP_WO_HDRF_TOERR_ERR	607
CMALARM_ICHIP_WO_IP_CRC_ERR	608
CMALARM_ICHIP_WO_IP_INTER_ERR	609
CMALARM_ICHIP_WI_WAN_TIMEOUT_ERR	625
CMALARM_ICHIP_WI_FAB_TIMEOUT_ERR	626
CMALARM_ICHIP_RLDRAM_BIST_ERR	630
CMALARM_ICHIP_SDRAM_BIST_ERR	631
CMALARM_ICHIP_RLDRAM_PARITY_ERR	632
CMALARM_ICHIP_SDRAM_UNCORRECT_ERR	633
CMALARM_ICHIP_SDRAM_CORRECT_ERR	634
CMALARM_ICHIP_FUSE_DONE_ERR	635

According to the table above, the **279** error code corresponds to **CMALARM_NCHIP_DBUF_CRC_ERR**; this means that new CRC errors were seen on the NCHIP of this particular FPC, which is FPC as per the logs.

If you do not want to convert decimal to binary and vice versa, you may use the following shortcut:

For major alarms, the **Actual Error Code = (Error Code - 1)/2**, where **Error Code** is the code that you get in the log message. For example, if you get the following log:

```
Apr 12 08:04:10 send: red alarm set, device FPC 6, reason FPC 6 Major
Errors - Error code: 257
```

Actual Error Code = $(257-1)/2 = 128$. Similarly, for minor alarms, Actual Error Code = $(\text{Error Code})/2$

Required Privilege Level

view

Related Documentation

- *Configuring an RMON Alarm Entry and Its Attributes*
- *Chassis Conditions That Trigger Alarms*

List of Sample Output

[show chassis alarms \(Alarms Active\) on page 582](#)
[show chassis alarms \(No Alarms Active\) on page 582](#)
[show chassis alarms \(Fan Tray\) on page 582](#)
[show chassis alarms \(MX104 Router\) on page 582](#)
[show chassis alarms \(MX2010 Router\) on page 582](#)

[show chassis alarms \(MX2020 Router\) on page 582](#)
[show chassis alarms \(MX960, MX480, and MX240 Routers showing Major CB Failure\) on page 582](#)
[show chassis alarms \(T4000 Router\) on page 583](#)
[show chassis alarms \(Unreachable Destinations Present on a T Series Router\) on page 583](#)
[show chassis alarms \(FPC Offline Due to Unreachable Destinations on a T Series Router\) on page 583](#)
[show chassis alarms \(SCG Absent on a T Series Router\) on page 584](#)
[show chassis alarms \(Alarms Active on a TX Matrix Router\) on page 584](#)
[show chassis alarms \(TX Matrix Plus router with 3D SIBs\) on page 584](#)
[show chassis alarms \(Alarms on a T4000 Router After the enhanced-mode Statement is Enabled\) on page 586](#)
[show chassis alarms \(Backup Routing Engine\) on page 586](#)
[show chassis alarms \(EX Series Switch\) on page 586](#)
[show chassis alarms \(Alarms Active on the QFX Series and OCX Series Switches\) on page 587](#)
[show chassis alarms node-device \(Alarms Active on the QFabric System\) on page 587](#)
[show chassis alarms \(Alarms Active on the QFabric System\) on page 587](#)
[show chassis alarms \(Alarms Active on an EX8200 Switch\) on page 587](#)
[show chassis alarms \(Alarms Active on a PTX5000 Packet Transport Router\) on page 588](#)
[show chassis alarms \(Mix of PDUs Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA\) on page 588](#)
[show chassis alarms \(PDU Converter Failed Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA\) on page 588](#)
[show chassis alarms \(No Power for System Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA\) on page 588](#)
[show chassis alarms \(Alarms Active on an ACX2000 Universal Access Router\) on page 589](#)
[show chassis alarms \(Active Alarm to Indicate Status of the Bad SCB Clock on MX Series\) on page 589](#)

Output Fields [Table 33 on page 581](#) lists the output fields for the **show chassis alarms** command. Output fields are listed in the approximate order in which they appear.

Table 33: show chassis alarms Output Fields

Field Name	Field Description
Alarm time	Date and time the alarm was first recorded.
Class	Severity class for this alarm: Minor or Major .
Description	Information about the alarm.

Sample Output

show chassis alarms (Alarms Active)

```
user@host> show chassis alarms
3 alarms are currently active
Alarm time      Class Description
2000-02-07 10:12:22 UTC Major fxp0: ethernet link down
2000-02-07 10:11:54 UTC Minor YELLOW ALARM - PEM 1 Removed
2000-02-07 10:11:03 UTC Minor YELLOW ALARM - Lower Fan Tray Removed
```

show chassis alarms (No Alarms Active)

```
user@host> show chassis alarms
No alarms are currently active
```

show chassis alarms (Fan Tray)

```
user@host> show chassis alarms
4 alarms currently active
Alarm time      Class Description
2010-11-11 20:27:38 UTC Major Side Fan Tray 7 Failure
2010-11-11 20:27:13 UTC Minor Side Fan Tray 7 Overspeed
2010-11-11 20:27:13 UTC Major Side Fan Tray 5 Failure
2010-11-11 20:27:13 UTC Major Side Fan Tray 0 Failure
```

show chassis alarms (MX104 Router)

```
user@host >show chassis alarms
1 alarms currently active
Alarm time      Class Description
2013-06-05 14:43:31 IST Minor Backup RE Active
```

show chassis alarms (MX2010 Router)

```
user@host> show chassis alarms
7 alarms currently active
Alarm time      Class Description
2012-08-07 00:46:06 PDT Major Fan Tray 2 Failure
2012-08-06 18:24:36 PDT Minor Redundant feed missing for PSM 6
2012-08-06 07:41:04 PDT Minor Redundant feed missing for PSM 8
2012-08-04 02:42:06 PDT Minor Redundant feed missing for PSM 5
2012-08-03 21:14:24 PDT Minor Loss of communication with Backup RE
2012-08-03 12:26:03 PDT Minor Redundant feed missing for PSM 4
2012-08-03 10:40:18 PDT Minor Redundant feed missing for PSM 7
```

show chassis alarms (MX2020 Router)

```
user@host> show chassis alarms
1 alarms currently active
Alarm time      Class Description
2012-10-03 12:14:59 PDT Minor Plane 0 not online
```

show chassis alarms (MX960, MX480, and MX240 Routers showing Major CB Failure)

A major CB 0 failure alarm occurs in the event of a bad CB (unknown or mismatched CBs do not trigger this alarm in Junos Release OS 12.3R9 and later). Following GRES or recovery, if the hardware issue persists, the traffic moves to the good CB and continues. If the alarm was triggered by something transient like a power zone budget on GRES, bringing the CB back online can clear the alarm. Otherwise, replace the bad CB. Note

that fabric link speed is not impacted by an offline SCB. The alarm might be raised on CB0, CB1, and CB2.

```
user@host> show chassis alarms
6 alarms currently active
Alarm time          Class Description
2014-10-31 16:49:41 EDT Major PEM 3 Not OK
2014-10-31 16:49:41 EDT Major PEM 2 Not OK
2014-10-31 16:49:31 EDT Major CB 0 Failure
2014-10-31 16:49:31 EDT Minor CB 0 Fabric Chip 0 Not Online
2014-10-31 16:49:31 EDT Minor CB 0 Fabric Chip 1 Not Online
2014-10-31 16:49:31 EDT Minor Backup RE Active
```

show chassis alarms (T4000 Router)

```
user@host> show chassis alarms
9 alarms currently active
Alarm time          Class Description
2007-06-02 01:41:10 UTC Minor RE 0 Not Supported
2007-06-02 01:41:10 UTC Minor CB 0 Not Supported
2007-06-02 01:41:10 UTC Minor Mixed Master and Backup RE types
2007-05-30 19:37:33 UTC Major SPMB 1 not online
2007-05-30 19:37:29 UTC Minor Front Bottom Fan Tray Absent
2007-05-30 19:37:13 UTC Major PEM 1 Input Failure
2007-05-30 19:37:13 UTC Major PEM 0 Not OK
2007-05-30 19:37:03 UTC Major PEM 0 Improper for Platform
2007-05-30 19:37:03 UTC Minor Backup RE Active
```

show chassis alarms (Unreachable Destinations Present on a T Series Router)

```
user@host> show chassis alarms
10 alarms currently active
Alarm time          Class Description
2011-08-30 18:43:53 PDT Major FPC 7 has unreachable destinations
2011-08-30 18:43:53 PDT Major FPC 5 has unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 3 has unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 2 has unreachable destinations
2011-08-30 18:43:52 PDT Minor SIB 0 Not Online
2011-08-30 18:43:33 PDT Minor SIB 4 Not Online
2011-08-30 18:43:28 PDT Minor SIB 3 Not Online
2011-08-30 18:43:05 PDT Minor SIB 2 Not Online
2011-08-30 18:43:28 PDT Minor SIB 1 Not Online
2011-08-30 18:43:05 PDT Major PEM 1 Not Ok
```

show chassis alarms (FPC Offline Due to Unreachable Destinations on a T Series Router)

```
user@host> show chassis alarms
10 alarms currently active
Alarm time          Class Description
2011-08-30 18:43:53 PDT Major FPC 7 offline due to unreachable destinations
2011-08-30 18:43:53 PDT Major FPC 5 offline due to unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 3 offline due to unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 2 offline due to unreachable destinations
2011-08-30 18:43:52 PDT Minor SIB 0 Not Online
2011-08-30 18:43:33 PDT Minor SIB 4 Not Online
2011-08-30 18:43:28 PDT Minor SIB 3 Not Online
2011-08-30 18:43:05 PDT Minor SIB 2 Not Online
2011-08-30 18:43:28 PDT Minor SIB 1 Not Online
2011-08-30 18:43:05 PDT Major PEM 1 Not Ok
```

show chassis alarms (SCG Absent on a T Series Router)

```

user@host> show chassis alarms
4 alarms currently active
Alarm time           Class Description
2011-01-23 21:42:46 PST Major SCG 0 NO EXT CLK MEAS-BKUP SCG ABS

```

show chassis alarms (Alarms Active on a TX Matrix Router)

```

user@host> show chassis alarms
scc-re0:
-----
8 alarms currently active
Alarm time           Class Description
2004-08-05 18:43:53 PDT Minor LCC 0 Minor Errors
2004-08-05 18:43:53 PDT Minor SIB 3 Not Online
2004-08-05 18:43:52 PDT Major SIB 2 Absent
2004-08-05 18:43:52 PDT Major SIB 1 Absent
2004-08-05 18:43:52 PDT Major SIB 0 Absent
2004-08-05 18:43:33 PDT Major LCC 2 Major Errors
2004-08-05 18:43:28 PDT Major LCC 0 Major Errors
2004-08-05 18:43:05 PDT Minor LCC 2 Minor Errors
lcc0-re0:
-----
5 alarms currently active
Alarm time           Class Description
2004-08-05 18:43:53 PDT Minor SIB 3 Not Online
2004-08-05 18:43:49 PDT Major SIB 2 Absent
2004-08-05 18:43:49 PDT Major SIB 1 Absent
2004-08-05 18:43:49 PDT Major SIB 0 Absent
2004-08-05 18:43:28 PDT Major PEM 0 Not OK
lcc2-re0:
-----
5 alarms currently active
Alarm time           Class Description
2004-08-05 18:43:35 PDT Minor SIB 3 Not Online
2004-08-05 18:43:33 PDT Major SIB 2 Absent
2004-08-05 18:43:33 PDT Major SIB 1 Absent
2004-08-05 18:43:33 PDT Major SIB 0 Absent
2004-08-05 18:43:05 PDT Minor PEM 1 Absent

```

show chassis alarms (TX Matrix Plus router with 3D SIBs)

```

user@host> show chassis alarms
sfc0-re0:
-----
Alarm time           Class Description
2014-04-08 14:35:13 IST Minor FPM 0 SFC Config Size Changed
2014-04-08 14:32:58 IST Major Fan Tray Failure
2014-04-08 14:31:53 IST Major SIB F13 6 Fault
2014-04-08 14:31:43 IST Major SIB F13 11 Fault
2014-04-08 14:31:08 IST Minor Check SIB F13 12 CXP 14 Fbr Cbl
2014-04-08 14:31:08 IST Minor Check SIB F13 12 CXP 8 Fbr Cbl
2014-04-08 14:31:08 IST Minor Check SIB F13 12 CXP 3 Fbr Cbl
2014-04-08 14:31:08 IST Major SIB F13 12 CXP 15 fault
2014-04-08 14:31:08 IST Minor SIB F13 12 CXP 14 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 12 CXP 14
2014-04-08 14:31:08 IST Major SIB F13 12 CXP 10 fault
2014-04-08 14:31:08 IST Minor SIB F13 12 CXP 8 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 12 CXP 8

```

```

2014-04-08 14:31:08 IST Major SIB F13 12 CXP 7 fault
2014-04-08 14:31:08 IST Major SIB F13 12 CXP 4 fault
2014-04-08 14:31:08 IST Minor SIB F13 12 CXP 3 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 12 CXP 3
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 14 Fbr Cbl
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 12 Fbr Cbl
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 8 Fbr Cbl
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 6 Fbr Cbl
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 4 Fbr Cbl
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 2 Fbr Cbl
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 0 Fbr Cbl
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 14 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 14
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 12 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 12
2014-04-08 14:31:08 IST Major SIB F13 6 CXP 10 fault
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 8 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 8
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 6 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 6
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 4 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 4
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 2 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 2
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 0 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 0
2014-04-08 14:31:08 IST Minor SIB F13 12 CXP 14 XC HSL Link Error
2014-04-08 14:29:27 IST Minor LCC 0 Minor Errors
2014-04-08 14:28:37 IST Major LCC 0 Major Errors
2014-04-08 14:28:37 IST Major LCC 2 Major Errors
2014-04-08 14:28:37 IST Minor LCC 2 Minor Errors
2014-04-08 14:28:24 IST Major SIB F2S 4/6 Absent
2014-04-08 14:28:24 IST Major SIB F2S 4/4 Absent
2014-04-08 14:28:24 IST Major SIB F2S 4/2 Absent
2014-04-08 14:28:24 IST Major SIB F2S 4/0 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/6 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/4 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/2 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/0 Absent
2014-04-08 14:28:24 IST Major SIB F13 9 Absent
2014-04-08 14:28:24 IST Major SIB F13 8 Absent
2014-04-08 14:28:24 IST Major SIB F13 7 Absent
2014-04-08 14:28:24 IST Major SIB F13 4 Absent
2014-04-08 14:28:24 IST Major SIB F13 1 Absent
2014-04-08 14:28:22 IST Major PEM 0 Input Failure
2014-04-08 14:28:22 IST Major PEM 0 Not OK

```

lcc0-re0:

12 alarms currently active

Alarm time	Class	Description
2014-04-08 14:36:08 IST	Minor	CB 1 M/S Switch Changed
2014-04-08 14:36:08 IST	Minor	CB 1 CHASSIS ID Changed
2014-04-08 14:35:43 IST	Minor	CB 0 M/S Switch Changed
2014-04-08 14:35:43 IST	Minor	CB 0 CHASSIS ID Changed
2014-04-08 14:29:30 IST	Minor	SIB 4 Not Online
2014-04-08 14:29:30 IST	Minor	SIB 3 Not Online
2014-04-08 14:29:30 IST	Minor	SIB 2 Not Online
2014-04-08 14:29:24 IST	Major	Rear Fan Tray Failure
2014-04-08 14:29:24 IST	Major	Front Bottom Fan Tray Improper for Platform
2014-04-08 14:29:24 IST	Major	Front Top Fan Tray Improper for Platform

```

2014-04-08 14:28:37 IST Major SIB 4 Absent
2014-04-08 14:28:37 IST Major SIB 3 Absent

```

```
lcc2-re0:
```

```

-----
12 alarms currently active
Alarm time      Class Description
2014-04-08 14:36:02 IST Minor CB 1 M/S Switch Changed
2014-04-08 14:36:02 IST Minor CB 1 CHASSIS ID Changed
2014-04-08 14:35:42 IST Minor CB 0 M/S Switch Changed
2014-04-08 14:34:42 IST Minor CB 0 CHASSIS ID Changed
2014-04-08 14:29:29 IST Minor SIB 0 CXP 7 Unsupported Optics
2014-04-08 14:29:27 IST Major Front Bottom Fan Tray Improper for Platform
2014-04-08 14:29:27 IST Major Front Top Fan Tray Improper for Platform
2014-04-08 14:29:25 IST Minor SIB 4 Not Online
2014-04-08 14:29:25 IST Minor SIB 3 Not Online
2014-04-08 14:28:47 IST Major PEM 0 Not OK
2014-04-08 14:28:36 IST Major SIB 2 Absent
2014-04-08 14:28:36 IST Minor Host 0 Boot from alternate media

```

```
lcc6-re0:
```

```

-----
2 alarms currently active
Alarm time      Class Description
2013-11-06 04:03:56 PST Minor SIB 1 CXP 0 XC HSL Link Error
2013-11-06 03:49:32 PST Major PEM 1 Not OK

```

show chassis alarms (Alarms on a T4000 Router After the enhanced-mode Statement is Enabled)

To enable improved virtual private LAN service (VPLS) MAC address learning on T4000 routers, you must include the **enhanced-mode** statement at the **[edit chassis network-services]** hierarchy level and reboot the router. When router reboots, only the T4000 Type 5 FPCs are required to be present on the router. If there are any other FPCs (apart from T4000 Type 5 FPCs) on the T4000 router, such FPCs become offline, and FPC misconfiguration alarms are generated. The **show chassis alarm** command output displays FPC misconfiguration (**FPC *fpc-slot* misconfig**) as the reason for the generation of the alarms.

```

user@host> show chassis alarms
2 alarms currently active
Alarm time      Class Description
2011-10-22 10:10:47 PDT Major FPC 1 misconfig
2011-10-22 10:10:46 PDT Major FPC 0 misconfig

```

show chassis alarms (Backup Routing Engine)

```

user@host> show chassis alarms
2 alarms are currently active
Alarm time      Class Description
2005-04-07 10:12:22 PDT Minor Host 1 Boot from alternate media
2005-04-07 10:11:54 PDT Major Host 1 compact-flash missing in Boot List

```

show chassis alarms (EX Series Switch)

```

user@switch> show chassis alarms
4 alarms currently active
Alarm time      Class Description
2014-03-12 15:36:09 UTC Minor Require a Fan Tray upgrade
2014-03-12 15:00:02 UTC Major PEM 0 Input Failure

```



```

2014-03-12 15:00:02 UTC Major PEM 0 Not OK
2014-03-12 14:59:51 UTC Minor Host 1 Boot from alternate media

```

show chassis alarms (Alarms Active on the QFX Series and OCX Series Switches)

```

user@switch> show chassis alarms
1 alarms currently active
Alarm time          Class Description
2012-03-05 2:10:24 UTC Major FPC 0 PEM 0 Airflow not matching Chassis Airflow

```

show chassis alarms node-device (Alarms Active on the QFabric System)

```

user@switch> show chassis alarms node-device ED3691
node-device ED3694
3 alarms currently active
Alarm time          Class Description
2011-08-24 16:04:15 UTC Major ED3694:fte-0/1/2: Link down
2011-08-24 16:04:14 UTC Major ED3694:fte-0/1/0: Link down
2011-08-24 14:21:14 UTC Major ED3694 PEM 0 is not supported/powered

```

show chassis alarms (Alarms Active on the QFabric System)

```

user@switch> show chassis alarms
IC-A0001:
-----
1 alarms currently active
Alarm time          Class Description
2011-08-24 16:04:15 UTC Minor Backup RE Active

ED3694:
-----
3 alarms currently active
Alarm time          Class Description
2011-08-24 16:04:15 UTC Major ED3694:fte-0/1/2: Link down
2011-08-24 16:04:14 UTC Major ED3694:fte-0/1/0: Link down
2011-08-24 14:21:14 UTC Major ED3694 PEM 0 is not supported/powered

SNG-0:
-----

NW-NG-0:
-----
1 alarms currently active
Alarm time          Class Description
2011-08-24 15:49:27 UTC Major ED3691 PEM 0 is not supported/powered

```

show chassis alarms (Alarms Active on an EX8200 Switch)

```

user@switch> show chassis alarms

6 alarms currently active
Alarm time          Class Description
2010-12-02 19:15:22 UTC Major Fan Tray Failure
2010-12-02 19:15:22 UTC Major Fan Tray Failure
2010-12-02 19:15:14 UTC Minor Check CB 0 Fabric Chip 1 on Plane/FPC/PFE: 1/5/0,
1/5/1, 1/5/2, 1/5/3, 1/7/0, 1/7/1, 1/7/2, 1/7/3, 2/5/0, 2/5/1, ...
2010-12-02 19:15:14 UTC Minor Check CB 0 Fabric Chip 0 on Plane/FPC/PFE: 1/5/0,
1/5/1, 1/5/2, 1/5/3, 1/7/0, 1/7/1, 1/7/2, 1/7/3, 2/5/0, 2/5/1, ...
2010-12-02 19:14:18 UTC Major PSU 1 Output Failure
2010-12-02 19:14:18 UTC Minor Loss of communication with Backup RE

```

show chassis alarms (Alarms Active on a PTX5000 Packet Transport Router)

```
user@host> show chassis alarms
```

```
23 alarms currently active
```

Alarm time	Class	Description
2011-07-12 16:22:05 PDT	Minor	No Redundant Power for Rear Chassis
2011-07-12 16:22:05 PDT	Major	PDU 0 PSM 1 Not OK
2011-07-12 16:21:57 PDT	Minor	No Redundant Power for Fan 0-2
2011-07-12 16:21:57 PDT	Major	PDU 0 PSM 0 Not OK
2011-07-12 15:56:06 PDT	Major	PDU 1 PSM 2 Not OK
2011-07-12 15:56:06 PDT	Minor	No Redundant Power for FPC 0-7
2011-07-12 15:56:06 PDT	Major	PDU 0 PSM 3 Not OK
2011-07-12 15:28:20 PDT	Major	PDU 0 PSM 2 Not OK
2011-07-12 15:19:14 PDT	Minor	Backup RE Active

show chassis alarms (Mix of PDUs Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A)

All PDUs installed on a PTX5000 router must be of the same type. The **Mix of PDUs or Power Manager Non Operational** alarm is raised when different types of PDUs are installed on a PTX5000 router.

```
user@host> show chassis alarms
```

```
15 alarms currently active
```

Alarm time	Class	Description
2013-03-19 23:03:53 PDT	Minor	No Redundant Power
2013-03-19 23:03:48 PDT	Minor	Mix of PDUs
2013-03-19 23:03:47 PDT	Minor	PDU 1 PSM 3 Absent
2013-03-19 23:03:47 PDT	Minor	PDU 1 PSM 2 Absent
2013-03-19 23:03:47 PDT	Minor	PDU 1 PSM 1 Absent
2013-03-19 23:03:47 PDT	Minor	PDU 1 PSM 0 Absent
2013-03-19 23:03:46 PDT	Major	No CG Online

show chassis alarms (PDU Converter Failed Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A)

The **PDU Converter Failed** alarm is raised when one or more 36 V booster converter of a DC PDU fails. If two or more 36 V booster converter fails, fan trays fail and the router might get over heated. Therefore, when this alarm is raised, check the PDU and replace it, if required.

```
user@host> show chassis alarms
```

```
11 alarms currently active
```

Alarm time	Class	Description
2013-12-11 22:14:13 PST	Minor	No Redundant Power for System
2013-12-11 22:14:10 PST	Major	PDU 0 PSM 7 Not OK
2013-12-11 22:14:10 PST	Major	PDU 0 PSM 6 Not OK
2013-12-11 22:14:10 PST	Major	PDU 0 PSM 5 Not OK
2013-12-11 22:14:10 PST	Major	PDU 0 PSM 4 Not OK
2013-12-11 22:14:10 PST	Major	PDU 0 PSM 3 Not OK
2013-12-11 22:14:10 PST	Major	PDU 0 PSM 2 Not OK
2013-12-11 22:14:10 PST	Major	PDU 0 PSM 1 Not OK
2013-12-11 22:14:10 PST	Major	PDU 0 PSM 0 Not OK
2013-12-11 22:14:10 PST	Major	PDU 0 Not OK
2013-12-11 22:14:01 PST	Major	PDU 0 Converter Failed

show chassis alarms (No Power for System Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis alarms
```

```
8 alarms currently active
```

Alarm time	Class	Description
------------	-------	-------------

```

2013-11-19 01:58:41 PST Major No Power for System
2013-11-19 01:58:37 PST Major PDU 0 PSM 1 Not OK
2013-11-19 01:56:46 PST Major PDU 0 PSM 2 Not OK
2013-11-19 01:54:26 PST Major PDU 0 PSM 3 Not OK
2013-11-19 01:53:30 PST Major PDU 1 PSM 3 Not OK
2013-11-19 01:53:29 PST Major PDU 1 PSM 2 Not OK
2013-11-19 01:53:29 PST Major PDU 1 PSM 1 Not OK
2013-11-19 01:53:29 PST Major PDU 1 PSM 0 Not OK

```

show chassis alarms (Alarms Active on an ACX2000 Universal Access Router)

```

user@host> show chassis alarms
7 alarms currently active
Alarm time          Class Description
2012-05-22 11:19:09 UTC Major xe-0/3/1: Link down
2012-05-22 11:19:09 UTC Major xe-0/3/0: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/7: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/6: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/3: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/2: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/1: Link down

```

show chassis alarms (Active Alarm to Indicate Status of the Bad SCB Clock on MX Series)

```

user@host> show chassis alarms
1 alarm currently active
Alarm time          Class Description
2013-08-06 07:48:35 PDT Major CB 0 19.44 MHz clock failure

```

show chassis beacon

show chassis beacon (QFX Series)	<pre>show chassis beacon <cb slot-number> <fpc slot-number> <interconnect-device name (cb slot-number fpc slot-number)> <node-device name></pre>
Release Information	<p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display the beacon LED status on a QFX3500, QFX3600, QFX5100, EX4600, OCX Series standalone switch, Node device, and an Interconnect device. You can also display the beacon LED status of the Control Boards and Flexible PIC Concentrators on the Interconnect device.
Options	<p>cb slot-number— (QFabric systems only) (Optional) Display the status of the beacon LEDs for the Control Board on the Interconnect device.</p> <p>fpc slot-number— (QFabric systems only) (Optional) Display the status of the beacon LEDs for the Flexible PIC Concentrator (FPC) on the Interconnect device. (Optional) Display the status of the beacon LEDs for the Flexible PIC Concentrator on the standalone switch.</p> <p>interconnect-device name— (QFabric systems only) (Optional) Display the status of the beacon LEDs for the Interconnect device.</p> <p>node-device name— (QFabric systems only) (Optional) Display the status of the beacon LEDs for the Node device.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> request chassis beacon on page 383
List of Sample Output	<p>show chassis beacon (QFX Series and OCX Series) on page 591</p> <p>show chassis beacon interconnect-device (QFabric System) on page 591</p> <p>show chassis beacon interconnect-device fpc (QFabric System) on page 591</p> <p>show chassis beacon node-device (QFabric System) on page 591</p> <p>show chassis beacon node-device fpc (QFabric System) on page 591</p>
Output Fields	Table 34 on page 590 lists the output fields for the show chassis beacon command. Output fields are listed in the approximate order in which they appear.

Table 34: show chassis led Output Fields

Field Name	Field Description
Slot	FPC slot number of the device whose content is being displayed. On QFX3500 standalone switches, the number is always 0.

Table 34: show chassis led Output Fields (*continued*)

Field Name	Field Description
Beacon State	Status of the beacon state: <ul style="list-style-type: none"> • Off—The beacon is OFF. • On—The beacon is ON.

Sample Output

show chassis beacon (QFX Series and OCX Series)

```

user@switch> show chassis beacon
Slot          Beacon State
FPC          0          OFF

```

show chassis beacon interconnect-device (QFabric System)

```

user@switch> show chassis beacon interconnect-device interconnect1
Chassis              OFF
CB 0                  OFF
CB 1                  OFF
FC 0 FPC 0           OFF
FC 1 FPC 1           OFF
RC 0 FPC 8           OFF
RC 1 FPC 9           OFF

```

show chassis beacon interconnect-device fpc (QFabric System)

```

user@switch> show chassis beacon interconnect-device interconnect1 fpc 0
FPC 0              ON

```

show chassis beacon node-device (QFabric System)

```

user@switch> show chassis beacon node-device node1
node1              ON

```

show chassis beacon node-device fpc (QFabric System)

```

user@switch> show chassis beacon node-device node1 fpc 0
FPC 0              ON

```

show chassis environment

List of Syntax	Syntax on page 592 Syntax (T320, T640, T1600, and T4000 Routers) on page 592 Syntax (TX Matrix Routers) on page 592 Syntax (TX Matrix Plus Routers) on page 592 Syntax (MX Series Routers) on page 592 Syntax (MX104 3D Universal Edge Routers) on page 592 Syntax (MX2010 and MX2020 3D Universal Edge Routers) on page 593 Syntax (EX8200 Switches) on page 593 Syntax (EX Series Switches except EX8200) on page 593 Syntax (QFX Series) on page 593 Syntax (OCX Series) on page 593 Syntax (PTX Series Packet Transport Routers) on page 593 Syntax (ACX Series Universal Access Routers) on page 593
Syntax	show chassis environment
Syntax (T320, T640, T1600, and T4000 Routers)	show chassis environment <cb <i>cb-slot-number</i>> <fpc <i>fpc-slot-number</i>> <fpm> <pem <i>pem-slot-number</i>> <routing-engine <i>re-slot-number</i>> <scg <i>scg-slot-number</i>> <sib <i>sib-slot-number</i>>
Syntax (TX Matrix Routers)	show chassis environment <lcc <i>number</i> scc>
Syntax (TX Matrix Plus Routers)	show chassis environment <cb <i>cb-slot-number</i>> <cip <i>cip-slot-number</i>> <fpc <i>fpc-slot-number</i>> <fpm> <lcc <i>number</i>> <pem <i>pem-slot-number</i>> <routing-engine <i>re-slot-number</i>> <scg <i>scg-slot-number</i>> < sfc <i>number</i>> <sib <i>sib-slot-number</i>>
Syntax (MX Series Routers)	show chassis environment <all-members> <local> <member <i>member-id</i>>
Syntax (MX104 3D Universal Edge Routers)	show chassis environment <cb> <pem <i>pem-slot-number</i>> <routing-engine <i>re-slot-number</i>>

Syntax (MX2010 and MX2020 3D Universal Edge Routers)	<pre> show chassis environment <adc <i>adc-slot-number</i>> <cb <i>cb-slot-number</i>> <fpc <i>fpc-slot-number</i>> <fpm> <monitored> <psm <i>psm-slot-number</i>> <routing-engine <i>re-slot-number</i>> <sfb <i>sfb-slot-number</i>> </pre>
Syntax (EX8200 Switches)	<pre> show chassis environment <all-members> <cb <i>cb-slot-number</i>> <fpc <i>fpc-slot-number</i>> <local> <member <i>member-id</i>> <psu <i>psu-slot-number</i>> <routing-engine <i>re-slot-number</i>> </pre>
Syntax (EX Series Switches except EX8200)	<pre> show chassis environment <all-members> <fpc <i>fpc-slot-number</i>> <local> <member <i>member-id</i>> <power-supply-unit> <routing-engine> </pre>
Syntax (QFX Series)	<pre> show chassis environment <cb <i>slot-number</i> <interconnect-device name>> <fpc <i>slot-number</i> <interconnect-device name>> <interconnect-device name <slot-number> <node-device name> <pem <i>slot-number</i> (interconnect-device name <i>slot-number</i>) (node-device name)> <routing-engine name <interconnect-device name <i>slot-number</i>>> </pre>
Syntax (OCX Series)	<pre> show chassis environment </pre>
Syntax (PTX Series Packet Transport Routers)	<pre> show chassis environment <cb <i>cb-slot-number</i>> <ccg <i>ccg-slot-number</i>> <fpc <i>fpc-slot-number</i>> <fpm> <monitored> <pdu <i>pdu-slot-number</i>> <routing-engine <i>re-slot-number</i>> <sib <i>sib-slot-number</i>> </pre>
Syntax (ACX Series Universal Access Routers)	<pre> show chassis environment <cb <i>cb-slot-number</i>> <pem <i>pem-slot-number</i>> <routing-engine <i>re-slot-number</i>> </pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>

sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.
Command introduced in Junos OS Release 11.1 for QFX Series.
Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.
monitored option added in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.
Command introduced in Junos OS Release 12.1 for T4000 Core Routers.
Command introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.
Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.
pem option introduced in Junos OS Release 12.3 for ACX4000 Universal Access Routers.
Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display environmental information about the router or switch chassis, including the temperature and information about the fans, power supplies, and Routing Engine.

In addition, on ACX4000 routers, display temperature information about the different channels of a Modular Interface Card (MIC). The number of channels displayed depends on the type of MIC installed.

Starting with Junos OS Release 14.1, the **show chassis environment cb cb-slot-number | ccg ccg-slot-number | fpc fpc-slot-number | fpm | monitored | pdu pdu-slot-number | routing-engine re-slot-number | sib sib-slot-number** operational mode command output displays environmental information for the the new DC power supply module (PSM) and power distribution unit (PDU) that are added to provide power to the high-density FPC (FPC2-PTX-PIA) and other components in a PTX5000 Packet Transport Router.

Options **none**—Display environmental information about the router or switch chassis. On a TX Matrix router, display environmental information about the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about the TX Matrix Plus router and its attached routers.

all-members—(MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for all the members of the Virtual Chassis configuration.

adc adc-slot-number—(MX2020 and MX2010 routers only) (Optional) Display chassis environmental information for the adapter cards. For MX2020 routers, replace **adc-slot-number** with a value from 0 through 19. For MX2010 routers, replace **adc-slot-number** with a value from 0 through 9.

cb cb-slot-number—(ACX Series Universal Access Routers, EX Series switches, M120, M320, and M40e routers, MX Series routers, MX2020 routers, MX2010 routers, PTX Series Packet Transport Routers, QFX Series, and T Series routers, and TX Matrix Plus routers only) (Optional) Display chassis environmental information for the Control Board. On devices other than EX Series switches, replace **cb-slot** with 0 or 1. For the EX Series switches, see *EX Series Switches Hardware and CLI Terminology Mapping* for information on CB slot numbering.

cip *cip-slot-number*—(TX Matrix Plus routers only) (Optional) Display chassis environmental information for the Connection Interface Panel (CIP). Replace the ***cip-slot-number*** variable with a value of 0 or 1.

cb interconnect-device *name*—(QFabric systems only) (Optional) Display chassis environmental information for the Control Board on an Interconnect device.

ccg *ccg-slot-number*—(PTX Series only) (Optional) Display chassis environmental information for the Centralized Clock Generator. Replace ***cb-slot*** with a value of 0 or 1.

fpc *fpc-slot*—(EX Series switches, M120, M320, and M40e routers, MX Series routers, MX2010 routers, MX2020 routers, PTX Series Packet Transport Routers, QFX Series, QFX3500 switches, QFabric systems, T Series routers, and TX Matrix Plus routers) (Optional) Display chassis environmental information for a specified Flexible PIC Concentrator. For MX2010 routers, replace ***fpc-slot*** with a value from 0 through 9. For MX2020 routers, replace ***fpc-slot*** with a value from 0 through 19. For information about FPC numbering, see [show chassis environment fpc](#). On a QFabric system, display chassis environmental information for a specified Flexible PIC Concentrator on an Interconnect device. On an EX Series switch, display chassis environmental information for a specified Flexible PIC Concentrator; see *EX Series Switches Hardware and CLI Terminology Mapping* for information on FPC numbering. On a TX Matrix Plus router with 3D SIBs replace ***fpc-slot*** with a value from 0 through 63.

fpm—(M120, M320, and M40e routers, MX2010 routers, MX2020 routers, PTX Series, Packet Transport Routers, T Series routers, and TX Matrix Plus routers only) (Optional) Display chassis environmental information for the craft interface (FPM).

interconnect-device *name*—(QFabric systems only) (Optional) Display chassis environmental information for the Interconnect device.

monitored—(MX2020 routers and PTX Series Packet Transport Routers only) (Optional) Display chassis environmental information for monitored temperatures only. Temperatures that are not included in temperature alarm computations are not displayed.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers and EX Series switches) (Optional) Display chassis environmental information for the local Virtual Chassis member.

member *member-id*—(MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for the specified member of the Virtual Chassis configuration. On MX Series routers, replace *member-id* variable with a value of **0** or **1**. For EX Series switches, see *member* for member ID values.

node-device *name*—(QFabric systems only) (Optional) Display chassis environmental information for the Node device.

pdu *pdu-slot-number*—(PTX Series only) (Optional) Display chassis environmental information for the specified power distribution unit.

pem—(QFX3500 switches and QFabric systems only) (Optional) Display chassis environmental information for the Power Entry Module on the specified Interconnect device or Node device.

pem *pem-slot-number*—(ACX Series Universal Access Routers, M120, M320, and M40e routers, MX Series routers, MX104 routers, QFX Series, and T Series routers only) (Optional) Display chassis environmental information for the Power Entry Module on the specified Power Entry Module. For information about the options, see [show chassis environment pem](#).

psm *psm-slot-number*—(MX2020 and MX2010 routers only) (Optional) Display chassis environmental information for the power supply module. For MX2020 routers, replace *psm-slot-number* with a value from **0** through **17**. For MX2010 routers, replace *psm-slot-number* with a value from **0** through **8**.

psu *psu-slot-number*—(EX Series switches only) (Optional) Display chassis environmental information for a specified power supply. See *EX Series Switches Hardware and CLI Terminology Mapping* for detailed information.

routing-engine—(QFX3500 switches and QFabric systems only) (Optional) Display chassis environmental information for the Routing Engine on the specified Interconnect device.

routing-engine *re-slot-number*—(Optional) Display chassis environmental information for the specified Routing Engine. For information about the options, see [show chassis environment routing-engine](#).

scg—(T Series routers only) (Optional) Display chassis environmental information about the SONET Clock Generator.

scc—(TX Matrix routers only) (Optional) Display chassis environmental information about the TX Matrix router (switch-card chassis).

sfb *sfb-slot-number*—(MX2020 and MX2010 routers only) (Optional) Display chassis environmental information for the power supply module. Replace *sfb-slot-number* with a value from **0** through **7**.

sfc *number*—(TX Matrix Plus routers only) (Optional) Display chassis environmental information about the respective TX Matrix Plus router (switch-fabric chassis). Replace ***number*** variable with **0**.

sib *sib-slot-number*—(M320 routers, PTX Series Packet Transport Routers, and T Series routers only) (Optional) Display chassis environmental information about the specified switch interface board. For information about the options, see *show chassis environment sib*.

Required Privilege Level view

Related Documentation

- *show chassis environment adc*
- [show chassis environment cb on page 545](#)
- *show chassis environment ccg*
- *show chassis environment cip*
- [show chassis environment fpc on page 656](#)
- *show chassis environment fpm*
- *show chassis environment lcc*
- *show chassis environment mcs*
- *show chassis environment monitored*
- *show chassis environment pcg*
- *show chassis environment pdu*
- [show chassis environment pem on page 682](#)
- *show chassis environment psm*
- *show chassis environment psu*
- [show chassis environment routing-engine on page 691](#)
- *show chassis environment scg*
- *show chassis environment sfb*
- *show chassis environment sib*
- *show chassis environment sfc*

List of Sample Output

[show chassis environment \(J2300 Router\) on page 600](#)
[show chassis environment \(J4300 or J6300 Router\) on page 600](#)
[show chassis environment \(M5 Router\) on page 600](#)
[show chassis environment \(M7i Router\) on page 601](#)
[show chassis environment \(M10 Router\) on page 601](#)
[show chassis environment \(M10i Router\) on page 601](#)
[show chassis environment \(M20 Router\) on page 602](#)
[show chassis environment \(M40 Router\) on page 602](#)

[show chassis environment \(M40e Router\) on page 602](#)
[show chassis environment \(M120 Router\) on page 603](#)
[show chassis environment \(M160 Router\) on page 604](#)
[show chassis environment \(M320 Router\) on page 604](#)
[show chassis environment \(MX104 Router\) on page 605](#)
[show chassis environment \(MX240 Router\) on page 606](#)
[show chassis environment \(MX240 Router with SCBE\) on page 607](#)
[show chassis environment \(MX480 Router\) on page 607](#)
[show chassis environment \(MX480 Router with SCBE\) on page 608](#)
[show chassis environment \(MX960 Router\) on page 609](#)
[show chassis environment \(MX960 Router with SCBE\) on page 610](#)
[show chassis environment \(MX960 Router with MPC5EQ\) on page 613](#)
[show chassis environment \(MX2020 Router\) on page 617](#)
[show chassis environment \(MX2020 Router with MPC5EQ and MPC6E\) on page 626](#)
[show chassis environment \(MX2010 Router\) on page 630](#)
[show chassis environment \(T320 Router\) on page 635](#)
[show chassis environment \(T640 Router\) on page 636](#)
[show chassis environment \(T4000 Router\) on page 637](#)
[show chassis environment \(TX Matrix Router\) on page 639](#)
[show chassis environment \(T1600 Router\) on page 640](#)
[show chassis environment \(TX Matrix Plus Router\) on page 641](#)
[show chassis environment \(TX Matrix Plus router with 3D SIBs\) on page 643](#)
[show chassis environment \(EX4200 Standalone Switch\) on page 646](#)
[show chassis environment \(EX8216 Switch\) on page 647](#)
[show chassis environment \(EX9200 Switch\) on page 647](#)
[show chassis environment \(QFX Series and OCX Series\) on page 648](#)
[show chassis environment interconnect-device \(QFabric System\) on page 648](#)
[show chassis environment node-device \(QFabric System\) on page 650](#)
[show chassis environment pem node-device \(QFabric System\) on page 650](#)
[show chassis environment \(PTX5000 Packet Transport Router\) on page 651](#)
[show chassis environment \(PTX5000 Packet Transport Router with FPC2-PTX-PIA\) on page 653](#)
[show chassis environment \(ACX2000 Universal Access Router\) on page 654](#)
[show chassis environment \(ACX4000 Universal Access Router\) on page 654](#)

Output Fields [Table 35 on page 599](#) lists the output fields for the **show chassis environment** command. Output fields are listed in the approximate order in which they appear.

Table 35: show chassis environment Output Fields

Field Name	Field Description
Class	<p>Information about the category or class of chassis component:</p> <ul style="list-style-type: none"> • Power: Power information: <ul style="list-style-type: none"> • (M5, M10, M20, and M40 routers and EX Series switches only) Power supply status: OK, Testing, (during initial power-on), Failed, or Absent. • (M7i, M10i, M40e, M120, M160, M320, and T Series routers and EX Series switches only) Power Entry Modules status: OK, Testing, (during initial power-on), Check, Failed, or Absent. • (PTX Series only) Power information is reported in PDU or PSM combinations. The status is: OK, Testing, (during initial power-on), Check, Failed, or Absent. • Temp: Temperature of air flowing through the chassis in degrees Celsius (C) and Fahrenheit (F). <ul style="list-style-type: none"> • On PTX Series Packet Transport Routers and MX2010 and MX2020 Routers, multiple cooling zones are supported. FRU temperatures in each zone are coordinated with the fan speed of fan trays in those zones. • EX2200 switches have a side-to-rear cooling system. The Local Intake temperature is measured by the sensor on the right side of the chassis, and the Remote Intake temperature is measured by the sensor on the left side of the chassis. • Pic: On ACX4000 Routers, multiple temperature channels on a MIC. The status is: OK and the Measurement is in degrees Celsius (C) and Fahrenheit (F). • Fan: Fan status: OK, Testing (during initial power-on), Failed, or Absent. On PTX Series Packet Transport Routers and MX2010 and MX2020 Routers, multiple fan trays are supported. Fan status is reported in Fan Tray or Fan combinations. Measurement indicates actual fan RPM (PTX and MX2010 and MX2020 Routers only). • Misc: Information about other components of the chassis. <ul style="list-style-type: none"> • On some routers, this field indicates the status of one or more additional components. • On the M40e, M160, and M320 router, Misc includes CIP (Connector Interface Panel). OK indicates that the CIP is present. Absent indicates that the CIP is not present. • On T Series routers, Misc includes CIP and SPMB (Switch Processor Mezzanine Board). OK indicates that the CIP or SPMB is present. Absent indicates that the CIP or SPMB is not present. • On PTX Series Packet Transport Routers, Misc includes the SPMB (Switch Processor Mezzanine Board). The SPMB is located on the control boards. OK indicates that the control board is present. Absent indicates that the control board is not present.
Item	<p>(MX2010 and MX2020 Routers) Information about the chassis component: Routing Engines, Controls Boards (CBs), Switch Fabric Boards (SFBs), PICs, Flexible PIC Concentrators (FPCs), and Adapter Cards (ADCs).</p> <p>(MX104 Routers) Information about the chassis components: Routing Engines, Control Board (CB), Power Entry Module (PEM), and Compact Forwarding Engine Board (AFEB).</p> <p>(QFabric Systems) Information about the chassis component: Control Boards, Routing Engines, Flexible PIC Concentrators (FPCs), and Power Entry Modules (PEMs), Node Devices, and Interconnect Devices.</p> <p>(QFX Series) Information about the chassis component: Flexible PIC Concentrators (FPCs), and Power Entry Modules (PEMs).</p>

Table 35: show chassis environment Output Fields (*continued*)

Field Name	Field Description
Status	<p>(MX104, MX2010, and MX2020 Routers) Status of the specified chassis component. For example, if the Class is Fan, the fan status can be:</p> <ul style="list-style-type: none"> • OK: The fans are operational. • Testing: The fans are being tested during initial power-on. • Failed: The fans have failed or the fans are not spinning. • Absent: The fan tray is not installed. <p>If the Class is Power, the power supply status can be:</p> <ul style="list-style-type: none"> • OK: The power component is operational. • Testing: The power component is being tested during initial power-on. • Check: There is insufficient power---that is, fewer than the minimum required feeds are connected. • Failed: The inputs leads have failed. • Absent: The power component is not installed.
Measurement	<p>(MX104, MX2010, and MX2020 Routers) Dependant on the Class. For example, if the Class is Temp, indicates the temperature in degree Celsius and degrees Fahrenheit. If the Class is Fan, indicates actual fan RPM.</p>

Sample Output

show chassis environment (J2300 Router)

```

user@host> show chassis environment
Class Item           Status Measurement
Temp  Routing Engine    OK      40 degrees C / 104 degrees F
Fan   Fan              OK

```

show chassis environment (J4300 or J6300 Router)

```

user@host> show chassis environment
Class Item           Status Measurement
Temp  Routing Engine    OK      41 degrees C / 105 degrees F
Fan   Fan 0             OK
      Fan 1             OK

```

show chassis environment (M5 Router)

```

user@host> show chassis environment
Class Item           Status Measurement
Power Power Supply A    OK
      Power Supply B    Absent
Temp  FPC 0             OK      30 degrees C / 86 degrees F
      FEB              OK      33 degrees C / 91 degrees F
      PS Intake         OK      27 degrees C / 80 degrees F
      PS Exhaust        OK      27 degrees C / 80 degrees F
      Routing Engine    OK      34 degrees C / 93 degrees F
Fans  Left Fan 1       OK      Spinning at normal speed
      Left Fan 2       OK      Spinning at normal speed
      Left Fan 3       OK      Spinning at normal speed
      Left Fan 4       OK      Spinning at normal speed
Misc  Craft Interface  OK

```

show chassis environment (M7i Router)

```

user@host> show chassis environment
Class Item                Status      Measurement
Power Power Supply 0        OK
       Power Supply 1      Absent
Temp  Intake               OK          22 degrees C / 71 degrees F
       FPC 0               OK          23 degrees C / 73 degrees F
       Power Supplies      OK          23 degrees C / 73 degrees F
       CFEB Intake         OK          24 degrees C / 75 degrees F
       CFEB Exhaust        OK          29 degrees C / 84 degrees F
       Routing Engine      OK          26 degrees C / 78 degrees F
Fans  Fan 1                OK          Spinning at normal speed
       Fan 2               OK          Spinning at normal speed
       Fan 3               OK          Spinning at normal speed
       Fan 4               OK          Spinning at normal speed

```

show chassis environment (M10 Router)

```

user@host> show chassis environment
Class Item                Status      Measurement
Power Power Supply A        OK
       Power Supply B      Failed
Temp  FPC 0                 OK          36 degrees C / 96 degrees F
       FPC 1               OK          35 degrees C / 95 degrees F
       FEB                 OK          34 degrees C / 93 degrees F
       PS Intake           OK          31 degrees C / 87 degrees F
       PS Exhaust          OK          34 degrees C / 93 degrees F
       Routing Engine      OK          35 degrees C / 95 degrees F
Fans  Left Fan 1           OK          Spinning at normal speed
       Left Fan 2          OK          Spinning at normal speed
       Left Fan 3          OK          Spinning at normal speed
       Left Fan 4          OK          Spinning at normal speed
Misc  Craft Interface      OK

```

show chassis environment (M10i Router)

```

user@host> show chassis environment
Class Item                Status      Measurement
Power Power Supply 0        OK
       Power Supply 1      OK
       Power Supply 2      Absent
       Power Supply 3      Absent
Temp  Intake               OK          26 degrees C / 78 degrees F
       FPC 0               OK          27 degrees C / 80 degrees F
       FPC 1               OK          28 degrees C / 82 degrees F
       Lower Power Supplies OK          29 degrees C / 84 degrees F
       Upper Power Supplies OK          28 degrees C / 82 degrees F
       CFEB Intake         OK          27 degrees C / 80 degrees F
       CFEB Exhaust        OK          36 degrees C / 96 degrees F
       Routing Engine 0    OK          31 degrees C / 87 degrees F
       Routing Engine 1    OK          27 degrees C / 80 degrees F
Fans  Fan Tray 0 Fan 1     OK          Spinning at normal speed
       Fan Tray 0 Fan 2     OK          Spinning at normal speed
       Fan Tray 0 Fan 3     OK          Spinning at normal speed
       Fan Tray 0 Fan 4     OK          Spinning at normal speed
       Fan Tray 0 Fan 5     OK          Spinning at normal speed
       Fan Tray 0 Fan 6     OK          Spinning at normal speed
       Fan Tray 0 Fan 7     OK          Spinning at normal speed

```

Fan Tray 0 Fan 8	OK	Spinning at normal speed
Fan Tray 1 Fan 1	Absent	
Fan Tray 1 Fan 2	Absent	
Fan Tray 1 Fan 3	Absent	
Fan Tray 1 Fan 4	Absent	
Fan Tray 1 Fan 5	Absent	
Fan Tray 1 Fan 6	Absent	
Fan Tray 1 Fan 7	Absent	
Fan Tray 1 Fan 8	Absent	

show chassis environment (M20 Router)

```

user@host> show chassis environment
Class Item                Status      Measurement
Power Power Supply A        OK
Power Power Supply B        Absent
Temp  FPC 0                  OK          28 degrees C / 82 degrees F
Temp  FPC 1                  OK          27 degrees C / 80 degrees F
Temp  Power Supply A        OK          22 degrees C / 71 degrees F
Temp  Power Supply B        Absent
Temp  SSB 0                  OK          30 degrees C / 86 degrees F
Temp  Backplane              OK          22 degrees C / 71 degrees F
Temp  Routing Engine 0        OK          26 degrees C / 78 degrees F
Temp  Routing Engine 1        Testing
Fans  Rear Fan              OK          Spinning at normal speed
Fans  Front Upper Fan        OK          Spinning at normal speed
Fans  Front Middle Fan       OK          Spinning at normal speed
Fans  Front Bottom Fan       OK          Spinning at normal speed
Misc  Craft Interface        OK

```

show chassis environment (M40 Router)

```

user@host> show chassis environment
Class Item                Status      Measurement
Power Power Supply A        OK
Power Power Supply B        Absent
Temp  FPC 3                  OK          24 degrees C / 75 degrees F
Temp  FPC 6                  OK          26 degrees C / 78 degrees F
Temp  SCB                    OK          26 degrees C / 78 degrees F
Temp  Backplane @ A1         OK          28 degrees C / 82 degrees F
Temp  Backplane @ A2         OK          23 degrees C / 73 degrees F
Temp  Routing Engine         OK          26 degrees C / 78 degrees F
Fans  Top Impeller           OK          Spinning at normal speed
Fans  Bottom impeller        OK          Spinning at normal speed
Fans  Rear Left Fan          OK          Spinning at normal speed
Fans  Rear Center Fan        OK          Spinning at normal speed
Fans  Rear Right Fan         OK          Spinning at normal speed
Misc  Craft Interface        OK

```

show chassis environment (M40e Router)

```

user@host> show chassis environment
Class Item                Status      Measurement
Power PEM 0                OK
Power PEM 1                Absent
Temp  PCG 0                  OK          44 degrees C / 111 degrees F
Temp  PCG 1                  OK          47 degrees C / 116 degrees F
Temp  Routing Engine 0        OK          40 degrees C / 104 degrees F
Temp  Routing Engine 1        OK          37 degrees C / 98 degrees F

```


MCS 0	OK	45 degrees C / 113 degrees F
MCS 1	OK	42 degrees C / 107 degrees F
SFM 0 SPP	OK	40 degrees C / 104 degrees F
SFM 0 SPR	OK	44 degrees C / 111 degrees F
SFM 1 SPP	OK	43 degrees C / 109 degrees F
SFM 1 SPR	OK	45 degrees C / 113 degrees F
FPC 0	OK	38 degrees C / 100 degrees F
FPC 1	OK	40 degrees C / 104 degrees F
FPC 2	OK	38 degrees C / 100 degrees F
FPC 4	OK	34 degrees C / 93 degrees F
FPC 5	OK	43 degrees C / 109 degrees F
FPC 6	OK	41 degrees C / 105 degrees F
FPC 7	OK	43 degrees C / 109 degrees F
FPM CMB	OK	28 degrees C / 82 degrees F
FPM Display	OK	28 degrees C / 82 degrees F
Fans Rear Bottom Blower	OK	Spinning at normal speed
Rear Top Blower	OK	Spinning at normal speed
Front Top Blower	OK	Spinning at normal speed
Fan Tray Rear Left	OK	Spinning at normal speed
Fan Tray Rear Right	OK	Spinning at normal speed
Fan Tray Front Left	OK	Spinning at normal speed
Fan Tray Front Right	OK	Spinning at normal speed
Misc CIP	OK	

show chassis environment (M120 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	
	PEM 1	OK	
	Routing Engine 0	OK	43 degrees C / 109 degrees F
	Routing Engine 1	OK	44 degrees C / 111 degrees F
	CB 0 Intake	OK	33 degrees C / 91 degrees F
	CB 0 Exhaust A	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust B	OK	35 degrees C / 95 degrees F
	CB 1 Intake	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust A	OK	38 degrees C / 100 degrees F
	CB 1 Exhaust B	OK	35 degrees C / 95 degrees F
	FEB 3 Intake	OK	35 degrees C / 95 degrees F
	FEB 3 Exhaust A	OK	37 degrees C / 98 degrees F
	FEB 3 Exhaust B	OK	39 degrees C / 102 degrees F
	FEB 4 Intake	OK	33 degrees C / 91 degrees F
	FEB 4 Exhaust A	OK	39 degrees C / 102 degrees F
	FEB 4 Exhaust B	OK	36 degrees C / 96 degrees F
	FPC 2 Exhaust A	OK	32 degrees C / 89 degrees F
	FPC 2 Exhaust B	OK	31 degrees C / 87 degrees F
	FPC 3 Exhaust A	OK	32 degrees C / 89 degrees F
	FPC 3 Exhaust B	OK	33 degrees C / 91 degrees F
	FPC 4 Exhaust A	OK	32 degrees C / 89 degrees F
	FPC 4 Exhaust B	OK	30 degrees C / 86 degrees F
Fans	Front Top Tray Fan 1	OK	Spinning at normal speed
	Front Top Tray Fan 2	OK	Spinning at normal speed
	Front Top Tray Fan 3	OK	Spinning at normal speed
	Front Top Tray Fan 4	OK	Spinning at normal speed
	Front Top Tray Fan 5	OK	Spinning at normal speed
	Front Top Tray Fan 6	OK	Spinning at normal speed
	Front Top Tray Fan 7	OK	Spinning at normal speed
	Front Top Tray Fan 8	OK	Spinning at normal speed
	Front Bottom Tray Fan 1	OK	Spinning at normal speed
	Front Bottom Tray Fan 2	OK	Spinning at normal speed

Front Bottom Tray Fan 3	OK	Spinning at normal speed
Front Bottom Tray Fan 4	OK	Spinning at normal speed
Front Bottom Tray Fan 5	OK	Spinning at normal speed
Front Bottom Tray Fan 6	OK	Spinning at normal speed
Front Bottom Tray Fan 7	OK	Spinning at normal speed
Front Bottom Tray Fan 8	OK	Spinning at normal speed
Rear Top Tray Fan 1	OK	Spinning at normal speed
Rear Top Tray Fan 2	OK	Spinning at normal speed
Rear Top Tray Fan 3	OK	Spinning at normal speed
Rear Top Tray Fan 4	OK	Spinning at normal speed
Rear Top Tray Fan 5	OK	Spinning at normal speed
Rear Top Tray Fan 6	OK	Spinning at normal speed
Rear Top Tray Fan 7	OK	Spinning at normal speed
Rear Top Tray Fan 8	OK	Spinning at normal speed
Rear Bottom Tray Fan 1	OK	Spinning at normal speed
Rear Bottom Tray Fan 2	OK	Spinning at normal speed
Rear Bottom Tray Fan 3	OK	Spinning at normal speed
Rear Bottom Tray Fan 4	OK	Spinning at normal speed
Rear Bottom Tray Fan 5	OK	Spinning at normal speed
Rear Bottom Tray Fan 6	OK	Spinning at normal speed
Rear Bottom Tray Fan 7	OK	Spinning at normal speed
Rear Bottom Tray Fan 8	OK	Spinning at normal speed

show chassis environment (M160 Router)

```

user@host> show chassis environment
Class Item                Status      Measurement
Power PEM 0                OK          PEM 1
Temp  PCG 0                OK          45 degrees C / 113 degrees F
      PCG 1                Absent
      Routing Engine 0     OK          35 degrees C / 95 degrees F
      Routing Engine 1     Absent
      MCS 0                OK          50 degrees C / 122 degrees F
      SFM 0 SPP             OK          47 degrees C / 116 degrees F
      SFM 0 SPR             OK          49 degrees C / 120 degrees F
      SFM 1 SPP             OK          50 degrees C / 122 degrees F
      SFM 1 SPR             OK          50 degrees C / 122 degrees F
      SFM 2 SPP             OK          51 degrees C / 123 degrees F
      SFM 2 SPR             OK          52 degrees C / 125 degrees F
      SFM 3 SPP             OK          52 degrees C / 125 degrees F
      SFM 3 SPR             OK          48 degrees C / 118 degrees F
      FPC 0                OK          45 degrees C / 113 degrees F
      FPC 6                OK          43 degrees C / 109 degrees F
      FPM CMB              OK          31 degrees C / 87 degrees F
      FPM Display          OK          33 degrees C / 91 degrees F
Fans  Rear Bottom Blower   OK          Spinning at normal speed
      Rear Top Blower      OK          Spinning at normal speed
      Front Top Blower     OK          Spinning at normal speed
      Fan Tray Rear Left   OK          Spinning at normal speed
      Fan Tray Rear Right  OK          Spinning at normal speed
      Fan Tray Front Left  OK          Spinning at normal speed
      Fan Tray Front Right OK          Spinning at normal speed
Misc  CIP                  OK

```

show chassis environment (M320 Router)

```

user@host> show chassis environment
Class Item                Status      Measurement
Temp PEM 0                Absent
      PEM 1                Absent

```

PEM 2	OK	
PEM 3	OK	
Routing Engine 0	OK	33 degrees C / 91 degrees F
Routing Engine 1	OK	32 degrees C / 89 degrees F
CB 0	OK	36 degrees C / 96 degrees F
CB 1	OK	36 degrees C / 96 degrees F
SIB 0	OK	38 degrees C / 100 degrees F
SIB 1	OK	29 degrees C / 84 degrees F
SIB 2	OK	38 degrees C / 100 degrees F
SIB 3	OK	41 degrees C / 105 degrees F
FPC 0 Intake	OK	28 degrees C / 82 degrees F
FPC 0 Exhaust	OK	40 degrees C / 104 degrees F
FPC 1 Intake	OK	29 degrees C / 84 degrees F
FPC 1 Exhaust	OK	39 degrees C / 102 degrees F
FPC 2 Intake	OK	28 degrees C / 82 degrees F
FPC 2 Exhaust	OK	38 degrees C / 100 degrees F
FPC 3 Intake	OK	28 degrees C / 82 degrees F
FPC 3 Exhaust	OK	39 degrees C / 102 degrees F
FPC 6 Intake	OK	27 degrees C / 80 degrees F
FPC 6 Exhaust	OK	39 degrees C / 102 degrees F
FPC 7 Intake	OK	27 degrees C / 80 degrees F
FPC 7 Exhaust	OK	42 degrees C / 107 degrees F
FPM GBUS	OK	30 degrees C / 86 degrees F
Fan Top Left Front fan	OK	Spinning at normal speed
Top Right Rear fan	OK	Spinning at normal speed
Top Right Front fan	OK	Spinning at normal speed
Top Left Rear fan	OK	Spinning at normal speed
Bottom Left Front fan	OK	Spinning at normal speed
Bottom Right Rear fan	OK	Spinning at normal speed
Bottom Right Front fan	OK	Spinning at normal speed
Bottom Left Rear fan	OK	Spinning at normal speed
Rear Fan 1 (TOP)	OK	Spinning at normal speed
Rear Fan 2	OK	Spinning at normal speed
Rear Fan 3	OK	Spinning at normal speed
Rear Fan 4	OK	Spinning at normal speed
Rear Fan 5	OK	Spinning at normal speed
Rear Fan 6	OK	Spinning at normal speed
Rear Fan 7 (Bottom)	OK	Spinning at normal speed
Misc CIP	OK	

show chassis environment (MX104 Router)

```

user@host> show chassis environment
Class Item                               Status Measurement
Temp PEM 0                             OK          34 degrees C / 93 degrees F
      PEM 1                             Absent
      ABB 0 Intake                       OK          33 degrees C / 91 degrees F
      ABB 0 Exhaust A                    OK          42 degrees C / 107 degrees F
      ABB 0 Exhaust B                    OK          43 degrees C / 109 degrees F
      ABB 1 Intake                       Absent
      ABB 1 Exhaust A                    Absent
      ABB 1 Exhaust B                    Absent
      Routing Engine 0                   OK          34 degrees C / 93 degrees F
      Routing Engine 0 CPU                OK          46 degrees C / 114 degrees F
      Routing Engine 1                   Absent
      Routing Engine 1 CPU                Absent
Fans  AFEB 0 AFEB Processor              OK          33 degrees C / 91 degrees F
      Fan 1                             OK          Spinning at normal speed
      Fan 2                             OK          Spinning at normal speed
      Fan 3                             OK          Spinning at normal speed

```

Fan 4	OK	Spinning at normal speed
Fan 5	OK	Spinning at normal speed

show chassis environment (MX240 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	40 degrees C / 104 degrees F
	PEM 1	OK	45 degrees C / 113 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	37 degrees C / 98 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 0 Exhaust B	OK	38 degrees C / 100 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 SF A	OK	49 degrees C / 120 degrees F
	CB 0 SF B	OK	41 degrees C / 105 degrees F
	CB 1 Intake	OK	37 degrees C / 98 degrees F
	CB 1 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 1 ACBC	OK	38 degrees C / 100 degrees F
	CB 1 SF A	OK	47 degrees C / 116 degrees F
	CB 1 SF B	OK	41 degrees C / 105 degrees F
	FPC 1 Intake	OK	33 degrees C / 91 degrees F
	FPC 1 Exhaust A	OK	38 degrees C / 100 degrees F
	FPC 1 Exhaust B	OK	53 degrees C / 127 degrees F
	FPC 1 I3 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 1 I3 0 Chip	OK	53 degrees C / 127 degrees F
	FPC 1 I3 1 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	47 degrees C / 116 degrees F
	FPC 1 I3 2 Chip	OK	49 degrees C / 120 degrees F
	FPC 1 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 1 IA 0 Chip	OK	44 degrees C / 111 degrees F
	FPC 1 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 Intake	OK	32 degrees C / 89 degrees F
	FPC 2 Exhaust A	OK	40 degrees C / 104 degrees F
	FPC 2 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 2 I3 1 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 1 Chip	OK	55 degrees C / 131 degrees F
	FPC 2 I3 2 TSensor	OK	49 degrees C / 120 degrees F
	FPC 2 I3 2 Chip	OK	52 degrees C / 125 degrees F
	FPC 2 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 2 I3 3 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 2 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 2 IA 1 Chip	OK	53 degrees C / 127 degrees F
Fans	Front Fan	OK	Spinning at normal speed
	Middle Fan	OK	Spinning at normal speed
	Rear Fan	OK	Spinning at normal speed

show chassis environment (MX240 Router with SCBE)

```

user@host> show chassis environment
Class Item                Status      Measurement
Temp  PEM 0                OK          40 degrees C / 104 degrees F
      PEM 1                OK          45 degrees C / 113 degrees F
      PEM 2                Absent
      PEM 3                Absent
      Routing Engine 0     OK          39 degrees C / 102 degrees F
      Routing Engine 1     OK          37 degrees C / 98 degrees F
      CB 0 Intake           OK          36 degrees C / 96 degrees F
      CB 0 Exhaust A       OK          34 degrees C / 93 degrees F
      CB 0 Exhaust B       OK          38 degrees C / 100 degrees F
      CB 0 ACBC            OK          37 degrees C / 98 degrees F
      CB 0 XF A            OK          49 degrees C / 120 degrees F
      CB 0 XF B            OK          41 degrees C / 105 degrees F
      CB 1 Intake           OK          37 degrees C / 98 degrees F
      CB 1 Exhaust A       OK          34 degrees C / 93 degrees F
      CB 1 Exhaust B       OK          39 degrees C / 102 degrees F
      CB 1 ACBC            OK          38 degrees C / 100 degrees F
      CB 1 XF A            OK          47 degrees C / 116 degrees F
      CB 1 XF B            OK          41 degrees C / 105 degrees F
      FPC 1 Intake         OK          33 degrees C / 91 degrees F
      FPC 1 Exhaust A      OK          38 degrees C / 100 degrees F
      FPC 1 Exhaust B      OK          53 degrees C / 127 degrees F
      FPC 1 I3 0 TSensor   OK          50 degrees C / 122 degrees F
      FPC 1 I3 0 Chip      OK          53 degrees C / 127 degrees F
      FPC 1 I3 1 TSensor   OK          49 degrees C / 120 degrees F
      FPC 1 I3 1 Chip      OK          52 degrees C / 125 degrees F
      FPC 1 I3 2 TSensor   OK          47 degrees C / 116 degrees F
      FPC 1 I3 2 Chip      OK          49 degrees C / 120 degrees F
      FPC 1 I3 3 TSensor   OK          44 degrees C / 111 degrees F
      FPC 1 I3 3 Chip      OK          46 degrees C / 114 degrees F
      FPC 1 IA 0 TSensor   OK          45 degrees C / 113 degrees F
      FPC 1 IA 0 Chip      OK          44 degrees C / 111 degrees F
      FPC 1 IA 1 TSensor   OK          44 degrees C / 111 degrees F
      FPC 1 IA 1 Chip      OK          48 degrees C / 118 degrees F
      FPC 2 Intake         OK          32 degrees C / 89 degrees F
      FPC 2 Exhaust A      OK          40 degrees C / 104 degrees F
      FPC 2 Exhaust B      OK          52 degrees C / 125 degrees F
      FPC 2 I3 0 TSensor   OK          52 degrees C / 125 degrees F
      FPC 2 I3 0 Chip      OK          56 degrees C / 132 degrees F
      FPC 2 I3 1 TSensor   OK          52 degrees C / 125 degrees F
      FPC 2 I3 1 Chip      OK          55 degrees C / 131 degrees F
      FPC 2 I3 2 TSensor   OK          49 degrees C / 120 degrees F
      FPC 2 I3 2 Chip      OK          52 degrees C / 125 degrees F
      FPC 2 I3 3 TSensor   OK          44 degrees C / 111 degrees F
      FPC 2 I3 3 Chip      OK          48 degrees C / 118 degrees F
      FPC 2 IA 0 TSensor   OK          50 degrees C / 122 degrees F
      FPC 2 IA 0 Chip      OK          48 degrees C / 118 degrees F
      FPC 2 IA 1 TSensor   OK          47 degrees C / 116 degrees F
      FPC 2 IA 1 Chip      OK          53 degrees C / 127 degrees F
Fans  Front Fan           OK          Spinning at normal speed
      Middle Fan          OK          Spinning at normal speed
      Rear Fan            OK          Spinning at normal speed

```

show chassis environment (MX480 Router)

```

user@host> show chassis environment
Class Item                Status      Measurement
Temp  PEM 0                OK          35 degrees C / 95 degrees F

```

	PEM 1	OK	40 degrees C / 104 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	44 degrees C / 111 degrees F
	Routing Engine 1	OK	45 degrees C / 113 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	38 degrees C / 100 degrees F
	CB 0 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 SF A	OK	51 degrees C / 123 degrees F
	CB 0 SF B	OK	44 degrees C / 111 degrees F
	CB 1 Intake	OK	36 degrees C / 96 degrees F
	CB 1 Exhaust A	OK	39 degrees C / 102 degrees F
	CB 1 Exhaust B	OK	40 degrees C / 104 degrees F
	CB 1 ACBC	OK	37 degrees C / 98 degrees F
	CB 1 SF A	OK	50 degrees C / 122 degrees F
	CB 1 SF B	OK	43 degrees C / 109 degrees F
	FPC 0 Intake	OK	36 degrees C / 96 degrees F
	FPC 0 Exhaust A	OK	39 degrees C / 102 degrees F
	FPC 0 Exhaust B	OK	51 degrees C / 123 degrees F
	FPC 0 I3 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 0 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 I3 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 0 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 0 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 0 I3 2 Chip	OK	48 degrees C / 118 degrees F
	FPC 0 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 0 I3 3 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 0 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 Intake	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust A	OK	41 degrees C / 105 degrees F
	FPC 1 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 1 I3 0 TSensor	OK	51 degrees C / 123 degrees F
	FPC 1 I3 0 Chip	OK	57 degrees C / 134 degrees F
	FPC 1 I3 1 TSensor	OK	48 degrees C / 118 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 I3 2 Chip	OK	50 degrees C / 122 degrees F
	FPC 1 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 IA 1 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 IA 1 Chip	OK	50 degrees C / 122 degrees F
Fans	Top Rear Fan	OK	Spinning at normal speed
	Bottom Rear Fan	OK	Spinning at normal speed
	Top Middle Fan	OK	Spinning at normal speed
	Bottom Middle Fan	OK	Spinning at normal speed
	Top Front Fan	OK	Spinning at normal speed
	Bottom Front Fan	OK	Spinning at normal speed

show chassis environment (MX480 Router with SCBE)

user@host> show chassis environment			
Class	Item	Status	Measurement
Temp	PEM 0	OK	35 degrees C / 95 degrees F
	PEM 1	OK	40 degrees C / 104 degrees F
	PEM 2	Absent	

PEM 3	Absent	
Routing Engine 0	OK	44 degrees C / 111 degrees F
Routing Engine 1	OK	45 degrees C / 113 degrees F
CB 0 Intake	OK	36 degrees C / 96 degrees F
CB 0 Exhaust A	OK	38 degrees C / 100 degrees F
CB 0 Exhaust B	OK	39 degrees C / 102 degrees F
CB 0 ACBC	OK	37 degrees C / 98 degrees F
CB 0 XF A	OK	51 degrees C / 123 degrees F
CB 0 XF B	OK	44 degrees C / 111 degrees F
CB 1 Intake	OK	36 degrees C / 96 degrees F
CB 1 Exhaust A	OK	39 degrees C / 102 degrees F
CB 1 Exhaust B	OK	40 degrees C / 104 degrees F
CB 1 ACBC	OK	37 degrees C / 98 degrees F
CB 1 XF A	OK	50 degrees C / 122 degrees F
CB 1 XF B	OK	43 degrees C / 109 degrees F
FPC 0 Intake	OK	36 degrees C / 96 degrees F
FPC 0 Exhaust A	OK	39 degrees C / 102 degrees F
FPC 0 Exhaust B	OK	51 degrees C / 123 degrees F
FPC 0 I3 0 TSensor	OK	49 degrees C / 120 degrees F
FPC 0 I3 0 Chip	OK	56 degrees C / 132 degrees F
FPC 0 I3 1 TSensor	OK	47 degrees C / 116 degrees F
FPC 0 I3 1 Chip	OK	52 degrees C / 125 degrees F
FPC 0 I3 2 TSensor	OK	46 degrees C / 114 degrees F
FPC 0 I3 2 Chip	OK	48 degrees C / 118 degrees F
FPC 0 I3 3 TSensor	OK	42 degrees C / 107 degrees F
FPC 0 I3 3 Chip	OK	45 degrees C / 113 degrees F
FPC 0 IA 0 TSensor	OK	45 degrees C / 113 degrees F
FPC 0 IA 0 Chip	OK	45 degrees C / 113 degrees F
FPC 0 IA 1 TSensor	OK	44 degrees C / 111 degrees F
FPC 0 IA 1 Chip	OK	48 degrees C / 118 degrees F
FPC 1 Intake	OK	37 degrees C / 98 degrees F
FPC 1 Exhaust A	OK	41 degrees C / 105 degrees F
FPC 1 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 1 I3 0 TSensor	OK	51 degrees C / 123 degrees F
FPC 1 I3 0 Chip	OK	57 degrees C / 134 degrees F
FPC 1 I3 1 TSensor	OK	48 degrees C / 118 degrees F
FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
FPC 1 I3 2 TSensor	OK	46 degrees C / 114 degrees F
FPC 1 I3 2 Chip	OK	50 degrees C / 122 degrees F
FPC 1 I3 3 TSensor	OK	42 degrees C / 107 degrees F
FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
FPC 1 IA 0 TSensor	OK	49 degrees C / 120 degrees F
FPC 1 IA 0 Chip	OK	48 degrees C / 118 degrees F
FPC 1 IA 1 TSensor	OK	46 degrees C / 114 degrees F
FPC 1 IA 1 Chip	OK	50 degrees C / 122 degrees F
Fans		
Top Rear Fan	OK	Spinning at normal speed
Bottom Rear Fan	OK	Spinning at normal speed
Top Middle Fan	OK	Spinning at normal speed
Bottom Middle Fan	OK	Spinning at normal speed
Top Front Fan	OK	Spinning at normal speed
Bottom Front Fan	OK	Spinning at normal speed

show chassis environment (MX960 Router)

user@host> show chassis environment			
Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	Absent	
	PEM 2	Check	
	PEM 3	OK	35 degrees C / 95 degrees F
	Routing Engine 0	OK	37 degrees C / 98 degrees F

	Routing Engine 1	Absent	
	CB 0 Intake	OK	24 degrees C / 75 degrees F
	CB 0 Exhaust A	OK	30 degrees C / 86 degrees F
	CB 0 Exhaust B	OK	27 degrees C / 80 degrees F
	CB 1 Intake	Absent	
	CB 1 Exhaust A	Absent	
	CB 1 Exhaust B	Absent	
	CB 1 ACBC	Absent	
	CB 1 SF A	Absent	
	CB 1 SF B	Absent	
	CB 2 Intake	Absent	
	CB 2 Exhaust A	Absent	
	CB 2 Exhaust B	Absent	
	CB 2 ACBC	Absent	
	CB 2 SF A	Absent	
	CB 2 SF B	Absent	
	FPC 4 Intake	OK	24 degrees C / 75 degrees F
	FPC 4 Exhaust A	OK	36 degrees C / 96 degrees F
	FPC 4 Exhaust B	OK	38 degrees C / 100 degrees F
	FPC 7 Intake	OK	24 degrees C / 75 degrees F
	FPC 7 Exhaust A	OK	36 degrees C / 96 degrees F
	FPC 7 Exhaust B	OK	42 degrees C / 107 degrees F
Fans	Top Fan Tray Temp	Failed	
	Top Tray Fan 1	OK	Spinning at normal speed
	Top Tray Fan 2	OK	Spinning at normal speed
	Top Tray Fan 3	OK	Spinning at normal speed
	Top Tray Fan 4	OK	Spinning at normal speed
	Top Tray Fan 5	OK	Spinning at normal speed
	Top Tray Fan 6	OK	Spinning at normal speed
	Bottom Fan Tray Temp	Failed	
	Bottom Tray Fan 1	OK	Spinning at normal speed
	Bottom Tray Fan 2	OK	Spinning at normal speed
	Bottom Tray Fan 3	OK	Spinning at normal speed
	Bottom Tray Fan 4	OK	Spinning at normal speed
	Bottom Tray Fan 5	OK	Spinning at normal speed
	Bottom Tray Fan 6	OK	Spinning at normal speed

show chassis environment (MX960 Router with SCBE)

user@host> show chassis environment			
Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	OK	50 degrees C / 122 degrees F
	PEM 2	OK	50 degrees C / 122 degrees F
	PEM 3	OK	50 degrees C / 122 degrees F
	Routing Engine 0	OK	42 degrees C / 107 degrees F
	Routing Engine 0 CPU	OK	51 degrees C / 123 degrees F
	Routing Engine 1	OK	39 degrees C / 102 degrees F
	Routing Engine 1 CPU	OK	44 degrees C / 111 degrees F
	CB 0 Intake	OK	35 degrees C / 95 degrees F
	CB 0 Exhaust A	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust B	OK	43 degrees C / 109 degrees F
	CB 0 ACBC	OK	38 degrees C / 100 degrees F
	CB 0 XF A	OK	53 degrees C / 127 degrees F
	CB 0 XF B	OK	47 degrees C / 116 degrees F
	CB 1 Intake	OK	35 degrees C / 95 degrees F
	CB 1 Exhaust A	OK	35 degrees C / 95 degrees F
	CB 1 Exhaust B	OK	41 degrees C / 105 degrees F
	CB 1 ACBC	OK	38 degrees C / 100 degrees F
	CB 1 XF A	OK	52 degrees C / 125 degrees F
	CB 1 XF B	OK	47 degrees C / 116 degrees F

CB 2 Intake	OK	32 degrees C / 89 degrees F
CB 2 Exhaust A	OK	30 degrees C / 86 degrees F
CB 2 Exhaust B	OK	35 degrees C / 95 degrees F
CB 2 ACBC	OK	33 degrees C / 91 degrees F
CB 2 XF A	OK	51 degrees C / 123 degrees F
CB 2 XF B	OK	50 degrees C / 122 degrees F
FPC 0 Intake	OK	35 degrees C / 95 degrees F
FPC 0 Exhaust A	OK	39 degrees C / 102 degrees F
FPC 0 Exhaust B	OK	50 degrees C / 122 degrees F
FPC 0 I3 0 TSensor	OK	50 degrees C / 122 degrees F
FPC 0 I3 0 Chip	OK	56 degrees C / 132 degrees F
FPC 0 I3 1 TSensor	OK	47 degrees C / 116 degrees F
FPC 0 I3 1 Chip	OK	50 degrees C / 122 degrees F
FPC 0 I3 2 TSensor	OK	45 degrees C / 113 degrees F
FPC 0 I3 2 Chip	OK	48 degrees C / 118 degrees F
FPC 0 I3 3 TSensor	OK	41 degrees C / 105 degrees F
FPC 0 I3 3 Chip	OK	44 degrees C / 111 degrees F
FPC 0 IA 0 TSensor	OK	45 degrees C / 113 degrees F
FPC 0 IA 0 Chip	OK	45 degrees C / 113 degrees F
FPC 0 IA 1 TSensor	OK	44 degrees C / 111 degrees F
FPC 0 IA 1 Chip	OK	48 degrees C / 118 degrees F
FPC 1 Intake	OK	36 degrees C / 96 degrees F
FPC 1 Exhaust A	OK	47 degrees C / 116 degrees F
FPC 1 Exhaust B	OK	43 degrees C / 109 degrees F
FPC 1 LU 0 TCAM TSensor	OK	53 degrees C / 127 degrees F
FPC 1 LU 0 TCAM Chip	OK	57 degrees C / 134 degrees F
FPC 1 LU 0 TSensor	OK	53 degrees C / 127 degrees F
FPC 1 LU 0 Chip	OK	60 degrees C / 140 degrees F
FPC 1 MQ 0 TSensor	OK	53 degrees C / 127 degrees F
FPC 1 MQ 0 Chip	OK	56 degrees C / 132 degrees F
FPC 1 LU 1 TCAM TSensor	OK	51 degrees C / 123 degrees F
FPC 1 LU 1 TCAM Chip	OK	52 degrees C / 125 degrees F
FPC 1 LU 1 TSensor	OK	51 degrees C / 123 degrees F
FPC 1 LU 1 Chip	OK	53 degrees C / 127 degrees F
FPC 1 MQ 1 TSensor	OK	51 degrees C / 123 degrees F
FPC 1 MQ 1 Chip	OK	58 degrees C / 136 degrees F
FPC 2 Intake	OK	35 degrees C / 95 degrees F
FPC 2 Exhaust A	OK	39 degrees C / 102 degrees F
FPC 2 Exhaust B	OK	54 degrees C / 129 degrees F
FPC 2 I3 0 TSensor	OK	52 degrees C / 125 degrees F
FPC 2 I3 0 Chip	OK	59 degrees C / 138 degrees F
FPC 2 I3 1 TSensor	OK	48 degrees C / 118 degrees F
FPC 2 I3 1 Chip	OK	52 degrees C / 125 degrees F
FPC 2 I3 2 TSensor	OK	47 degrees C / 116 degrees F
FPC 2 I3 2 Chip	OK	49 degrees C / 120 degrees F
FPC 2 I3 3 TSensor	OK	41 degrees C / 105 degrees F
FPC 2 I3 3 Chip	OK	44 degrees C / 111 degrees F
FPC 2 IA 0 TSensor	OK	47 degrees C / 116 degrees F
FPC 2 IA 0 Chip	OK	46 degrees C / 114 degrees F
FPC 2 IA 1 TSensor	OK	45 degrees C / 113 degrees F
FPC 2 IA 1 Chip	OK	49 degrees C / 120 degrees F
FPC 3 Intake	OK	34 degrees C / 93 degrees F
FPC 3 Exhaust A	OK	34 degrees C / 93 degrees F
FPC 3 Exhaust B	OK	47 degrees C / 116 degrees F
FPC 3 I3 0 TSensor	OK	48 degrees C / 118 degrees F
FPC 3 I3 0 Chip	OK	52 degrees C / 125 degrees F
FPC 3 I3 1 TSensor	OK	46 degrees C / 114 degrees F
FPC 3 I3 1 Chip	OK	48 degrees C / 118 degrees F
FPC 3 IA 0 TSensor	OK	41 degrees C / 105 degrees F
FPC 3 IA 0 Chip	OK	40 degrees C / 104 degrees F
FPC 5 Intake	OK	42 degrees C / 107 degrees F

	FPC 5 Exhaust A	OK	42 degrees C / 107 degrees F
	FPC 5 Exhaust B	OK	53 degrees C / 127 degrees F
	FPC 5 LU 0 TSensor	OK	53 degrees C / 127 degrees F
	FPC 5 LU 0 Chip	OK	54 degrees C / 129 degrees F
	FPC 5 LU 1 TSensor	OK	53 degrees C / 127 degrees F
	FPC 5 LU 1 Chip	OK	61 degrees C / 141 degrees F
	FPC 5 LU 2 TSensor	OK	53 degrees C / 127 degrees F
	FPC 5 LU 2 Chip	OK	51 degrees C / 123 degrees F
	FPC 5 LU 3 TSensor	OK	53 degrees C / 127 degrees F
	FPC 5 LU 3 Chip	OK	53 degrees C / 127 degrees F
	FPC 5 MQ 0 TSensor	OK	47 degrees C / 116 degrees F
	FPC 5 MQ 0 Chip	OK	52 degrees C / 125 degrees F
	FPC 5 MQ 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 5 MQ 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 5 MQ 2 TSensor	OK	47 degrees C / 116 degrees F
	FPC 5 MQ 2 Chip	OK	46 degrees C / 114 degrees F
	FPC 5 MQ 3 TSensor	OK	47 degrees C / 116 degrees F
	FPC 5 MQ 3 Chip	OK	45 degrees C / 113 degrees F
	FPC 7 Intake	OK	36 degrees C / 96 degrees F
	FPC 7 Exhaust A	OK	35 degrees C / 95 degrees F
	FPC 7 Exhaust B	OK	33 degrees C / 91 degrees F
	FPC 7 QX 0 TSensor	OK	42 degrees C / 107 degrees F
	FPC 7 QX 0 Chip	OK	47 degrees C / 116 degrees F
	FPC 7 LU 0 TCAM TSensor	OK	42 degrees C / 107 degrees F
	FPC 7 LU 0 TCAM Chip	OK	44 degrees C / 111 degrees F
	FPC 7 LU 0 TSensor	OK	42 degrees C / 107 degrees F
	FPC 7 LU 0 Chip	OK	46 degrees C / 114 degrees F
	FPC 7 MQ 0 TSensor	OK	42 degrees C / 107 degrees F
	FPC 7 MQ 0 Chip	OK	45 degrees C / 113 degrees F
	FPC 8 Intake	OK	33 degrees C / 91 degrees F
	FPC 8 Exhaust A	OK	33 degrees C / 91 degrees F
	FPC 8 Exhaust B	OK	36 degrees C / 96 degrees F
	FPC 8 I3 0 TSensor	OK	38 degrees C / 100 degrees F
	FPC 8 I3 0 Chip	OK	43 degrees C / 109 degrees F
	FPC 8 BDS 0 TSensor	OK	37 degrees C / 98 degrees F
	FPC 8 BDS 0 Chip	OK	36 degrees C / 96 degrees F
	FPC 8 IA 0 TSensor	OK	37 degrees C / 98 degrees F
	FPC 8 IA 0 Chip	OK	37 degrees C / 98 degrees F
	FPC 10 Intake	OK	38 degrees C / 100 degrees F
	FPC 10 Exhaust A	OK	36 degrees C / 96 degrees F
	FPC 10 Exhaust B	OK	41 degrees C / 105 degrees F
	FPC 10 I3 0 TSensor	OK	40 degrees C / 104 degrees F
	FPC 10 I3 0 Chip	OK	42 degrees C / 107 degrees F
	FPC 10 I3 1 TSensor	OK	40 degrees C / 104 degrees F
	FPC 10 I3 1 Chip	OK	44 degrees C / 111 degrees F
	FPC 10 I3 2 TSensor	OK	42 degrees C / 107 degrees F
	FPC 10 I3 2 Chip	OK	43 degrees C / 109 degrees F
	FPC 10 I3 3 TSensor	OK	39 degrees C / 102 degrees F
	FPC 10 I3 3 Chip	OK	44 degrees C / 111 degrees F
	FPC 10 IA 0 TSensor	OK	36 degrees C / 96 degrees F
	FPC 10 IA 0 Chip	OK	36 degrees C / 96 degrees F
	FPC 10 IA 1 TSensor	OK	43 degrees C / 109 degrees F
	FPC 10 IA 1 Chip	OK	42 degrees C / 107 degrees F
Fans	Top Fan Tray Temp	OK	37 degrees C / 98 degrees F
	Top Tray Fan 1	OK	Spinning at normal speed
	Top Tray Fan 2	OK	Spinning at normal speed
	Top Tray Fan 3	OK	Spinning at normal speed
	Top Tray Fan 4	OK	Spinning at normal speed
	Top Tray Fan 5	OK	Spinning at normal speed
	Top Tray Fan 6	OK	Spinning at normal speed
	Bottom Fan Tray Temp	OK	28 degrees C / 82 degrees F

Bottom Tray Fan 1	OK	Spinning at normal speed
Bottom Tray Fan 2	OK	Spinning at normal speed
Bottom Tray Fan 3	OK	Spinning at normal speed
Bottom Tray Fan 4	OK	Spinning at normal speed
Bottom Tray Fan 5	OK	Spinning at normal speed
Bottom Tray Fan 6	OK	Spinning at normal speed

show chassis environment (MX960 Router with MPC5EQ)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	50 degrees C / 122 degrees F
	PEM 1	OK	45 degrees C / 113 degrees F
	PEM 2	OK	45 degrees C / 113 degrees F
	PEM 3	Absent	
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 0 CPU	OK	30 degrees C / 86 degrees F
	Routing Engine 1	Present	
	Routing Engine 1 CPU	Present	
	CB 0 Intake	OK	29 degrees C / 84 degrees F
	CB 0 Exhaust A	OK	29 degrees C / 84 degrees F
	CB 0 Exhaust B	OK	34 degrees C / 93 degrees F
	CB 0 ACBC	OK	32 degrees C / 89 degrees F
	CB 0 XF A	OK	49 degrees C / 120 degrees F
	CB 0 XF B	OK	45 degrees C / 113 degrees F
	CB 1 Intake	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust A	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust B	OK	27 degrees C / 80 degrees F
	CB 1 ACBC	OK	26 degrees C / 78 degrees F
	CB 1 XF A	OK	32 degrees C / 89 degrees F
	CB 1 XF B	OK	32 degrees C / 89 degrees F
	CB 2 Intake	OK	28 degrees C / 82 degrees F
	CB 2 Exhaust A	OK	27 degrees C / 80 degrees F
	CB 2 Exhaust B	OK	33 degrees C / 91 degrees F
	CB 2 ACBC	OK	30 degrees C / 86 degrees F
	CB 2 XF A	OK	48 degrees C / 118 degrees F
	CB 2 XF B	OK	46 degrees C / 114 degrees F
	FPC 0 Intake	OK	38 degrees C / 100 degrees F
	FPC 0 Exhaust A	OK	48 degrees C / 118 degrees F
	FPC 0 Exhaust B	OK	49 degrees C / 120 degrees F
	FPC 0 XL TSen	OK	48 degrees C / 118 degrees F
	FPC 0 XL Chip	OK	50 degrees C / 122 degrees F
	FPC 0 XL_XR0 TSen	OK	48 degrees C / 118 degrees F
	FPC 0 XL_XR0 Chip	OK	53 degrees C / 127 degrees F
	FPC 0 XL_XR1 TSen	OK	48 degrees C / 118 degrees F
	FPC 0 XL_XR1 Chip	OK	54 degrees C / 129 degrees F
	FPC 0 XQ TSen	OK	48 degrees C / 118 degrees F
	FPC 0 XQ Chip	OK	52 degrees C / 125 degrees F
	FPC 0 XQ_XR0 TSen	OK	48 degrees C / 118 degrees F
	FPC 0 XQ_XR0 Chip	OK	62 degrees C / 143 degrees F
	FPC 0 XQ_XR1 TSen	OK	48 degrees C / 118 degrees F
	FPC 0 XQ_XR1 Chip	OK	62 degrees C / 143 degrees F
	FPC 0 XM 0 TSen	OK	53 degrees C / 127 degrees F
	FPC 0 XM 0 Chip	OK	63 degrees C / 145 degrees F
	FPC 0 XM 1 TSen	OK	53 degrees C / 127 degrees F
	FPC 0 XM 1 Chip	OK	46 degrees C / 114 degrees F
	FPC 0 PLX PCIe Switch TSe	OK	53 degrees C / 127 degrees F
	FPC 0 PLX PCIe Switch Chi	OK	66 degrees C / 150 degrees F
	FPC 1 Intake	OK	31 degrees C / 87 degrees F
	FPC 1 Exhaust A	OK	38 degrees C / 100 degrees F
	FPC 1 Exhaust B	OK	49 degrees C / 120 degrees F

FPC 1 LU 0 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 0 Chip	OK	47 degrees C / 116 degrees F
FPC 1 LU 1 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 1 Chip	OK	42 degrees C / 107 degrees F
FPC 1 LU 2 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 2 Chip	OK	46 degrees C / 114 degrees F
FPC 1 LU 3 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 3 Chip	OK	51 degrees C / 123 degrees F
FPC 1 XM 0 TSen	OK	41 degrees C / 105 degrees F
FPC 1 XM 0 Chip	OK	49 degrees C / 120 degrees F
FPC 1 XF 0 TSen	OK	41 degrees C / 105 degrees F
FPC 1 XF 0 Chip	OK	63 degrees C / 145 degrees F
FPC 1 PLX Switch TSen	OK	41 degrees C / 105 degrees F
FPC 1 PLX Switch Chip	OK	43 degrees C / 109 degrees F
FPC 3 Intake	OK	31 degrees C / 87 degrees F
FPC 3 Exhaust A	OK	37 degrees C / 98 degrees F
FPC 3 Exhaust B	OK	43 degrees C / 109 degrees F
FPC 3 LU 0 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 0 Chip	OK	43 degrees C / 109 degrees F
FPC 3 LU 1 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 1 Chip	OK	46 degrees C / 114 degrees F
FPC 3 LU 2 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 2 Chip	OK	40 degrees C / 104 degrees F
FPC 3 LU 3 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 3 Chip	OK	41 degrees C / 105 degrees F
FPC 3 MQ 0 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 0 Chip	OK	37 degrees C / 98 degrees F
FPC 3 MQ 1 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 1 Chip	OK	40 degrees C / 104 degrees F
FPC 3 MQ 2 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 2 Chip	OK	36 degrees C / 96 degrees F
FPC 3 MQ 3 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 3 Chip	OK	38 degrees C / 100 degrees F
FPC 4 Intake	OK	34 degrees C / 93 degrees F
FPC 4 Exhaust A	OK	45 degrees C / 113 degrees F
FPC 4 Exhaust B	OK	47 degrees C / 116 degrees F
FPC 4 XL TSen	OK	44 degrees C / 111 degrees F
FPC 4 XL Chip	OK	47 degrees C / 116 degrees F
FPC 4 XL_XR0 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XL_XR0 Chip	OK	48 degrees C / 118 degrees F
FPC 4 XL_XR1 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XL_XR1 Chip	OK	47 degrees C / 116 degrees F
FPC 4 XQ TSen	OK	44 degrees C / 111 degrees F
FPC 4 XQ Chip	OK	47 degrees C / 116 degrees F
FPC 4 XQ_XR0 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XQ_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 4 XQ_XR1 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XQ_XR1 Chip	OK	58 degrees C / 136 degrees F
FPC 4 XM 0 TSen	OK	51 degrees C / 123 degrees F
FPC 4 XM 0 Chip	OK	61 degrees C / 141 degrees F
FPC 4 XM 1 TSen	OK	51 degrees C / 123 degrees F
FPC 4 XM 1 Chip	OK	47 degrees C / 116 degrees F
FPC 4 PLX PCIe Switch TSe	OK	51 degrees C / 123 degrees F
FPC 4 PLX PCIe Switch Chi	OK	60 degrees C / 140 degrees F
FPC 5 Intake	OK	34 degrees C / 93 degrees F
FPC 5 Exhaust A	OK	45 degrees C / 113 degrees F
FPC 5 Exhaust B	OK	47 degrees C / 116 degrees F
FPC 5 XL TSen	OK	45 degrees C / 113 degrees F
FPC 5 XL Chip	OK	47 degrees C / 116 degrees F
FPC 5 XL_XR0 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XL_XR0 Chip	OK	49 degrees C / 120 degrees F

FPC 5 XL_XR1 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XL_XR1 Chip	OK	49 degrees C / 120 degrees F
FPC 5 XQ TSen	OK	45 degrees C / 113 degrees F
FPC 5 XQ Chip	OK	48 degrees C / 118 degrees F
FPC 5 XQ_XR0 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XQ_XR0 Chip	OK	60 degrees C / 140 degrees F
FPC 5 XQ_XR1 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XQ_XR1 Chip	OK	58 degrees C / 136 degrees F
FPC 5 XM 0 TSen	OK	50 degrees C / 122 degrees F
FPC 5 XM 0 Chip	OK	48 degrees C / 118 degrees F
FPC 5 XM 1 TSen	OK	50 degrees C / 122 degrees F
FPC 5 XM 1 Chip	OK	47 degrees C / 116 degrees F
FPC 5 PLX PCIe Switch TSe	OK	50 degrees C / 122 degrees F
FPC 5 PLX PCIe Switch Chi	OK	59 degrees C / 138 degrees F
FPC 7 Intake	OK	32 degrees C / 89 degrees F
FPC 7 Exhaust A	OK	32 degrees C / 89 degrees F
FPC 7 Exhaust B	OK	33 degrees C / 91 degrees F
FPC 7 LU 0 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 0 Chip	OK	44 degrees C / 111 degrees F
FPC 7 LU 1 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 1 Chip	OK	47 degrees C / 116 degrees F
FPC 7 LU 2 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 2 Chip	OK	39 degrees C / 102 degrees F
FPC 7 LU 3 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 3 Chip	OK	43 degrees C / 109 degrees F
FPC 7 XM 0 TSen	OK	49 degrees C / 120 degrees F
FPC 7 XM 0 Chip	OK	57 degrees C / 134 degrees F
FPC 7 XM 1 TSen	OK	49 degrees C / 120 degrees F
FPC 7 XM 1 Chip	OK	48 degrees C / 118 degrees F
FPC 7 PLX Switch TSen	OK	49 degrees C / 120 degrees F
FPC 7 PLX Switch Chip	OK	45 degrees C / 113 degrees F
FPC 8 Intake	OK	36 degrees C / 96 degrees F
FPC 8 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 8 Exhaust B	OK	46 degrees C / 114 degrees F
FPC 8 XL TSen	OK	46 degrees C / 114 degrees F
FPC 8 XL Chip	OK	47 degrees C / 116 degrees F
FPC 8 XL_XR0 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XL_XR0 Chip	OK	53 degrees C / 127 degrees F
FPC 8 XL_XR1 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XL_XR1 Chip	OK	52 degrees C / 125 degrees F
FPC 8 XQ TSen	OK	46 degrees C / 114 degrees F
FPC 8 XQ Chip	OK	46 degrees C / 114 degrees F
FPC 8 XQ_XR0 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XQ_XR0 Chip	OK	59 degrees C / 138 degrees F
FPC 8 XQ_XR1 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XQ_XR1 Chip	OK	57 degrees C / 134 degrees F
FPC 8 XM 0 TSen	OK	52 degrees C / 125 degrees F
FPC 8 XM 0 Chip	OK	61 degrees C / 141 degrees F
FPC 8 XM 1 TSen	OK	52 degrees C / 125 degrees F
FPC 8 XM 1 Chip	OK	47 degrees C / 116 degrees F
FPC 8 PLX PCIe Switch TSe	OK	52 degrees C / 125 degrees F
FPC 8 PLX PCIe Switch Chi	OK	63 degrees C / 145 degrees F
FPC 9 Intake	OK	31 degrees C / 87 degrees F
FPC 9 Exhaust A	OK	34 degrees C / 93 degrees F
FPC 9 Exhaust B	OK	35 degrees C / 95 degrees F
FPC 9 QX 0 TSen	OK	42 degrees C / 107 degrees F
FPC 9 QX 0 Chip	OK	45 degrees C / 113 degrees F
FPC 9 LU 0 TCAM TSen	OK	42 degrees C / 107 degrees F
FPC 9 LU 0 TCAM Chip	OK	41 degrees C / 105 degrees F
FPC 9 LU 0 TSen	OK	42 degrees C / 107 degrees F
FPC 9 LU 0 Chip	OK	43 degrees C / 109 degrees F

	FPC 9 MQ 0 TSen	OK	42 degrees C / 107 degrees F
	FPC 9 MQ 0 Chip	OK	43 degrees C / 109 degrees F
	FPC 9 QX 1 TSen	OK	38 degrees C / 100 degrees F
	FPC 9 QX 1 Chip	OK	40 degrees C / 104 degrees F
	FPC 9 LU 1 TCAM TSen	OK	38 degrees C / 100 degrees F
	FPC 9 LU 1 TCAM Chip	OK	38 degrees C / 100 degrees F
	FPC 9 LU 1 TSen	OK	38 degrees C / 100 degrees F
	FPC 9 LU 1 Chip	OK	41 degrees C / 105 degrees F
	FPC 9 MQ 1 TSen	OK	38 degrees C / 100 degrees F
	FPC 9 MQ 1 Chip	OK	41 degrees C / 105 degrees F
	FPC 10 Intake	OK	35 degrees C / 95 degrees F
	FPC 10 Exhaust A	OK	51 degrees C / 123 degrees F
	FPC 10 Exhaust B	OK	46 degrees C / 114 degrees F
	FPC 10 XL TSen	OK	42 degrees C / 107 degrees F
	FPC 10 XL Chip	OK	44 degrees C / 111 degrees F
	FPC 10 XL_XR0 TSen	OK	42 degrees C / 107 degrees F
	FPC 10 XL_XR0 Chip	OK	47 degrees C / 116 degrees F
	FPC 10 XL_XR1 TSen	OK	42 degrees C / 107 degrees F
	FPC 10 XL_XR1 Chip	OK	48 degrees C / 118 degrees F
	FPC 10 XQ TSen	OK	42 degrees C / 107 degrees F
	FPC 10 XQ Chip	OK	46 degrees C / 114 degrees F
	FPC 10 XQ_XR0 TSen	OK	42 degrees C / 107 degrees F
	FPC 10 XQ_XR0 Chip	OK	57 degrees C / 134 degrees F
	FPC 10 XQ_XR1 TSen	OK	42 degrees C / 107 degrees F
	FPC 10 XQ_XR1 Chip	OK	53 degrees C / 127 degrees F
	FPC 10 XM 0 TSen	OK	51 degrees C / 123 degrees F
	FPC 10 XM 0 Chip	OK	61 degrees C / 141 degrees F
	FPC 10 XM 1 TSen	OK	51 degrees C / 123 degrees F
	FPC 10 XM 1 Chip	OK	49 degrees C / 120 degrees F
	FPC 10 PLX PCIe Switch TSe	OK	51 degrees C / 123 degrees F
	FPC 10 PLX PCIe Switch Chi	OK	61 degrees C / 141 degrees F
	FPC 11 Intake	OK	33 degrees C / 91 degrees F
	FPC 11 Exhaust A	OK	33 degrees C / 91 degrees F
	FPC 11 Exhaust B	OK	34 degrees C / 93 degrees F
	FPC 11 LU 0 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 11 LU 1 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 1 Chip	OK	50 degrees C / 122 degrees F
	FPC 11 LU 2 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 2 Chip	OK	41 degrees C / 105 degrees F
	FPC 11 LU 3 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 3 Chip	OK	48 degrees C / 118 degrees F
	FPC 11 XM 0 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 XM 0 Chip	OK	57 degrees C / 134 degrees F
	FPC 11 XM 1 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 XM 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 11 PLX Switch TSen	OK	50 degrees C / 122 degrees F
	FPC 11 PLX Switch Chip	OK	45 degrees C / 113 degrees F
Fans	Top Fan Tray Temp	OK	42 degrees C / 107 degrees F
	Top Tray Fan 1	OK	Spinning at high speed
Top Tray Fan 2		OK	Spinning at high speed
	Top Tray Fan 3	OK	Spinning at high speed
	Top Tray Fan 4	OK	Spinning at high speed
	Top Tray Fan 5	OK	Spinning at high speed
	Top Tray Fan 6	OK	Spinning at high speed
	Top Tray Fan 7	OK	Spinning at high speed
	Top Tray Fan 8	OK	Spinning at high speed
	Top Tray Fan 9	OK	Spinning at high speed
	Top Tray Fan 10	OK	Spinning at high speed
	Top Tray Fan 11	OK	Spinning at high speed
	Top Tray Fan 12	OK	Spinning at high speed

Bottom Fan Tray Temp	OK	33 degrees C / 91 degrees F
Bottom Tray Fan 1	OK	Spinning at high speed
Bottom Tray Fan 2	OK	Spinning at high speed
Bottom Tray Fan 3	OK	Spinning at high speed
Bottom Tray Fan 4	OK	Spinning at high speed
Bottom Tray Fan 5	OK	Spinning at high speed
Bottom Tray Fan 6	OK	Spinning at high speed
Bottom Tray Fan 7	OK	Spinning at high speed
Bottom Tray Fan 8	OK	Spinning at high speed
Bottom Tray Fan 9	OK	Spinning at high speed
Bottom Tray Fan 10	OK	Spinning at high speed
Bottom Tray Fan 11	OK	Spinning at high speed
Bottom Tray Fan 12	OK	Spinning at high speed

show chassis environment (MX2020 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PSM 0	Absent	
	PSM 1	Absent	
	PSM 2	OK	41 degrees C / 105 degrees F
	PSM 3	OK	39 degrees C / 102 degrees F
	PSM 4	OK	39 degrees C / 102 degrees F
	PSM 5	OK	38 degrees C / 100 degrees F
	PSM 6	OK	38 degrees C / 100 degrees F
	PSM 7	OK	38 degrees C / 100 degrees F
	PSM 8	OK	37 degrees C / 98 degrees F
	PSM 9	Absent	
	PSM 10	Absent	
	PSM 11	OK	47 degrees C / 116 degrees F
	PSM 12	OK	45 degrees C / 113 degrees F
	PSM 13	OK	44 degrees C / 111 degrees F
	PSM 14	OK	44 degrees C / 111 degrees F
	PSM 15	OK	43 degrees C / 109 degrees F
	PSM 16	OK	42 degrees C / 107 degrees F
	PSM 17	OK	41 degrees C / 105 degrees F
	PDM 0	OK	
	PDM 1	Absent	
	PDM 2	Absent	
	PDM 3	OK	
	CB 0 IntakeA-Zone0	OK	45 degrees C / 113 degrees F
	CB 0 IntakeB-Zone1	OK	34 degrees C / 93 degrees F
	CB 0 IntakeC-Zone0	OK	48 degrees C / 118 degrees F
	CB 0 ExhaustA-Zone0	OK	45 degrees C / 113 degrees F
	CB 0 ExhaustB-Zone1	OK	37 degrees C / 98 degrees F
	CB 0 TCBC-Zone0	OK	41 degrees C / 105 degrees F
	CB 1 IntakeA-Zone0	OK	46 degrees C / 114 degrees F
	CB 1 IntakeB-Zone1	OK	42 degrees C / 107 degrees F
	CB 1 IntakeC-Zone0	OK	49 degrees C / 120 degrees F
	CB 1 ExhaustA-Zone0	OK	46 degrees C / 114 degrees F
	CB 1 ExhaustB-Zone1	OK	41 degrees C / 105 degrees F
	CB 1 TCBC-Zone0	OK	46 degrees C / 114 degrees F
	SPMB 0 Intake	OK	33 degrees C / 91 degrees F
	SPMB 1 Intake	OK	42 degrees C / 107 degrees F
	Routing Engine 0	OK	35 degrees C / 95 degrees F
	Routing Engine 0 CPU	OK	34 degrees C / 93 degrees F
	Routing Engine 1	OK	44 degrees C / 111 degrees F
	Routing Engine 1 CPU	OK	42 degrees C / 107 degrees F
	SFB 0 Intake-Zone0	OK	55 degrees C / 131 degrees F
	SFB 0 Exhaust-Zone1	OK	48 degrees C / 118 degrees F
	SFB 0 IntakeA-Zone0	OK	50 degrees C / 122 degrees F

SFB 0 IntakeB-Zone1	OK	40 degrees C / 104 degrees F
SFB 0 Exhaust-Zone0	OK	52 degrees C / 125 degrees F
SFB 0 SFB-XF2-Zone1	OK	61 degrees C / 141 degrees F
SFB 0 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 0 SFB-XF0-Zone0	OK	68 degrees C / 154 degrees F
SFB 1 Intake-Zone0	OK	56 degrees C / 132 degrees F
SFB 1 Exhaust-Zone1	OK	47 degrees C / 116 degrees F
SFB 1 IntakeA-Zone0	OK	51 degrees C / 123 degrees F
SFB 1 IntakeB-Zone1	OK	40 degrees C / 104 degrees F
SFB 1 Exhaust-Zone0	OK	51 degrees C / 123 degrees F
SFB 1 SFB-XF2-Zone1	OK	62 degrees C / 143 degrees F
SFB 1 SFB-XF1-Zone0	OK	67 degrees C / 152 degrees F
SFB 1 SFB-XF0-Zone0	OK	69 degrees C / 156 degrees F
SFB 2 Intake-Zone0	OK	56 degrees C / 132 degrees F
SFB 2 Exhaust-Zone1	OK	47 degrees C / 116 degrees F
SFB 2 IntakeA-Zone0	OK	51 degrees C / 123 degrees F
SFB 2 IntakeB-Zone1	OK	40 degrees C / 104 degrees F
SFB 2 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 2 SFB-XF2-Zone1	OK	65 degrees C / 149 degrees F
SFB 2 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 2 SFB-XF0-Zone0	OK	70 degrees C / 158 degrees F
SFB 3 Intake-Zone0	OK	57 degrees C / 134 degrees F
SFB 3 Exhaust-Zone1	OK	48 degrees C / 118 degrees F
SFB 3 IntakeA-Zone0	OK	52 degrees C / 125 degrees F
SFB 3 IntakeB-Zone1	OK	41 degrees C / 105 degrees F
SFB 3 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 3 SFB-XF2-Zone1	OK	66 degrees C / 150 degrees F
SFB 3 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 3 SFB-XF0-Zone0	OK	71 degrees C / 159 degrees F
SFB 4 Intake-Zone0	OK	58 degrees C / 136 degrees F
SFB 4 Exhaust-Zone1	OK	49 degrees C / 120 degrees F
SFB 4 IntakeA-Zone0	OK	54 degrees C / 129 degrees F
SFB 4 IntakeB-Zone1	OK	42 degrees C / 107 degrees F
SFB 4 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 4 SFB-XF2-Zone1	OK	64 degrees C / 147 degrees F
SFB 4 SFB-XF1-Zone0	OK	68 degrees C / 154 degrees F
SFB 4 SFB-XF0-Zone0	OK	71 degrees C / 159 degrees F
SFB 5 Intake-Zone0	OK	58 degrees C / 136 degrees F
SFB 5 Exhaust-Zone1	OK	50 degrees C / 122 degrees F
SFB 5 IntakeA-Zone0	OK	53 degrees C / 127 degrees F
SFB 5 IntakeB-Zone1	OK	43 degrees C / 109 degrees F
SFB 5 Exhaust-Zone0	OK	54 degrees C / 129 degrees F
SFB 5 SFB-XF2-Zone1	OK	66 degrees C / 150 degrees F
SFB 5 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 5 SFB-XF0-Zone0	OK	74 degrees C / 165 degrees F
SFB 6 Intake-Zone0	OK	58 degrees C / 136 degrees F
SFB 6 Exhaust-Zone1	OK	49 degrees C / 120 degrees F
SFB 6 IntakeA-Zone0	OK	53 degrees C / 127 degrees F
SFB 6 IntakeB-Zone1	OK	43 degrees C / 109 degrees F
SFB 6 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 6 SFB-XF2-Zone1	OK	65 degrees C / 149 degrees F
SFB 6 SFB-XF1-Zone0	OK	68 degrees C / 154 degrees F
SFB 6 SFB-XF0-Zone0	OK	72 degrees C / 161 degrees F
SFB 7 Intake-Zone0	OK	57 degrees C / 134 degrees F
SFB 7 Exhaust-Zone1	OK	50 degrees C / 122 degrees F
SFB 7 IntakeA-Zone0	OK	53 degrees C / 127 degrees F
SFB 7 IntakeB-Zone1	OK	43 degrees C / 109 degrees F
SFB 7 Exhaust-Zone0	OK	54 degrees C / 129 degrees F
SFB 7 SFB-XF2-Zone1	OK	68 degrees C / 154 degrees F
SFB 7 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 7 SFB-XF0-Zone0	OK	73 degrees C / 163 degrees F

FPC 0 Intake	OK	41 degrees C / 105 degrees F
FPC 0 Exhaust A	OK	48 degrees C / 118 degrees F
FPC 0 Exhaust B	OK	62 degrees C / 143 degrees F
FPC 0 LU 0 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 0 Chip	OK	62 degrees C / 143 degrees F
FPC 0 LU 1 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 1 Chip	OK	64 degrees C / 147 degrees F
FPC 0 LU 2 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 0 LU 3 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 0 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 0 Chip	OK	49 degrees C / 120 degrees F
FPC 0 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 1 Chip	OK	51 degrees C / 123 degrees F
FPC 0 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 0 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 3 Chip	OK	45 degrees C / 113 degrees F
FPC 1 Intake	OK	40 degrees C / 104 degrees F
FPC 1 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 1 Exhaust B	OK	58 degrees C / 136 degrees F
FPC 1 LU 0 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 0 Chip	OK	56 degrees C / 132 degrees F
FPC 1 LU 1 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 1 Chip	OK	58 degrees C / 136 degrees F
FPC 1 LU 2 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 2 Chip	OK	49 degrees C / 120 degrees F
FPC 1 LU 3 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 3 Chip	OK	51 degrees C / 123 degrees F
FPC 1 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 0 Chip	OK	48 degrees C / 118 degrees F
FPC 1 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 1 Chip	OK	50 degrees C / 122 degrees F
FPC 1 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 1 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 3 Chip	OK	44 degrees C / 111 degrees F
FPC 2 Intake	OK	39 degrees C / 102 degrees F
FPC 2 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 2 Exhaust B	OK	61 degrees C / 141 degrees F
FPC 2 LU 0 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 0 Chip	OK	60 degrees C / 140 degrees F
FPC 2 LU 1 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 1 Chip	OK	65 degrees C / 149 degrees F
FPC 2 LU 2 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 2 LU 3 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 2 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 0 Chip	OK	50 degrees C / 122 degrees F
FPC 2 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 2 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 2 Chip	OK	45 degrees C / 113 degrees F
FPC 2 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 3 Chip	OK	46 degrees C / 114 degrees F
FPC 3 Intake	OK	40 degrees C / 104 degrees F
FPC 3 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 3 Exhaust B	OK	61 degrees C / 141 degrees F
FPC 3 LU 0 TSen	OK	58 degrees C / 136 degrees F

FPC 3 LU 0 Chip	OK	61 degrees C / 141 degrees F
FPC 3 LU 1 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 1 Chip	OK	62 degrees C / 143 degrees F
FPC 3 LU 2 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 3 LU 3 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 3 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 0 Chip	OK	50 degrees C / 122 degrees F
FPC 3 MQ 1 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 1 Chip	OK	54 degrees C / 129 degrees F
FPC 3 MQ 2 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 2 Chip	OK	45 degrees C / 113 degrees F
FPC 3 MQ 3 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 3 Chip	OK	48 degrees C / 118 degrees F
FPC 4 Intake	OK	40 degrees C / 104 degrees F
FPC 4 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 4 Exhaust B	OK	62 degrees C / 143 degrees F
FPC 4 LU 0 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 0 Chip	OK	62 degrees C / 143 degrees F
FPC 4 LU 1 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 1 Chip	OK	65 degrees C / 149 degrees F
FPC 4 LU 2 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 4 LU 3 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 4 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 4 MQ 1 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 1 Chip	OK	53 degrees C / 127 degrees F
FPC 4 MQ 2 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 4 MQ 3 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 5 Intake	OK	41 degrees C / 105 degrees F
FPC 5 Exhaust A	OK	50 degrees C / 122 degrees F
FPC 5 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 5 LU 0 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 0 Chip	OK	63 degrees C / 145 degrees F
FPC 5 LU 1 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 1 Chip	OK	66 degrees C / 150 degrees F
FPC 5 LU 2 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 2 Chip	OK	56 degrees C / 132 degrees F
FPC 5 LU 3 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 5 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 5 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 1 Chip	OK	53 degrees C / 127 degrees F
FPC 5 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 2 Chip	OK	48 degrees C / 118 degrees F
FPC 5 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 6 Intake	OK	42 degrees C / 107 degrees F
FPC 6 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 6 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 6 LU 0 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 0 Chip	OK	64 degrees C / 147 degrees F
FPC 6 LU 1 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 1 Chip	OK	66 degrees C / 150 degrees F
FPC 6 LU 2 TSen	OK	61 degrees C / 141 degrees F

FPC 6 LU 2 Chip	OK	56 degrees C / 132 degrees F
FPC 6 LU 3 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 3 Chip	OK	56 degrees C / 132 degrees F
FPC 6 MQ 0 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 0 Chip	OK	56 degrees C / 132 degrees F
FPC 6 MQ 1 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 1 Chip	OK	59 degrees C / 138 degrees F
FPC 6 MQ 2 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 2 Chip	OK	49 degrees C / 120 degrees F
FPC 6 MQ 3 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 3 Chip	OK	49 degrees C / 120 degrees F
FPC 7 Intake	OK	41 degrees C / 105 degrees F
FPC 7 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 7 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 7 LU 0 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 0 Chip	OK	61 degrees C / 141 degrees F
FPC 7 LU 1 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 1 Chip	OK	65 degrees C / 149 degrees F
FPC 7 LU 2 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 2 Chip	OK	54 degrees C / 129 degrees F
FPC 7 LU 3 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 7 MQ 0 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 0 Chip	OK	53 degrees C / 127 degrees F
FPC 7 MQ 1 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 1 Chip	OK	54 degrees C / 129 degrees F
FPC 7 MQ 2 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 2 Chip	OK	47 degrees C / 116 degrees F
FPC 7 MQ 3 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 8 Intake	OK	41 degrees C / 105 degrees F
FPC 8 Exhaust A	OK	50 degrees C / 122 degrees F
FPC 8 Exhaust B	OK	62 degrees C / 143 degrees F
FPC 8 LU 0 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 0 Chip	OK	62 degrees C / 143 degrees F
FPC 8 LU 1 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 1 Chip	OK	64 degrees C / 147 degrees F
FPC 8 LU 2 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 2 Chip	OK	55 degrees C / 131 degrees F
FPC 8 LU 3 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 8 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 0 Chip	OK	51 degrees C / 123 degrees F
FPC 8 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 8 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 8 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 9 Intake	OK	42 degrees C / 107 degrees F
FPC 9 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 9 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 9 LU 0 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 0 Chip	OK	65 degrees C / 149 degrees F
FPC 9 LU 1 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 1 Chip	OK	67 degrees C / 152 degrees F
FPC 9 LU 2 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 2 Chip	OK	54 degrees C / 129 degrees F
FPC 9 LU 3 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 9 MQ 0 TSen	OK	51 degrees C / 123 degrees F

FPC 9 MQ 0 Chip	OK	55 degrees C / 131 degrees F
FPC 9 MQ 1 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 1 Chip	OK	59 degrees C / 138 degrees F
FPC 9 MQ 2 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 2 Chip	OK	49 degrees C / 120 degrees F
FPC 9 MQ 3 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 3 Chip	OK	49 degrees C / 120 degrees F
FPC 10 Intake	OK	44 degrees C / 111 degrees F
FPC 10 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 10 Exhaust B	OK	55 degrees C / 131 degrees F
FPC 10 LU 0 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 0 Chip	OK	55 degrees C / 131 degrees F
FPC 10 LU 1 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 1 Chip	OK	59 degrees C / 138 degrees F
FPC 10 LU 2 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 2 Chip	OK	52 degrees C / 125 degrees F
FPC 10 LU 3 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 3 Chip	OK	51 degrees C / 123 degrees F
FPC 10 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 0 Chip	OK	49 degrees C / 120 degrees F
FPC 10 MQ 1 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 10 MQ 2 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 2 Chip	OK	47 degrees C / 116 degrees F
FPC 10 MQ 3 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 11 Intake	OK	30 degrees C / 86 degrees F
FPC 11 Exhaust A	OK	35 degrees C / 95 degrees F
FPC 11 Exhaust B	OK	30 degrees C / 86 degrees F
FPC 11 LU 0 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 0 Chip	OK	58 degrees C / 136 degrees F
FPC 11 LU 1 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 1 Chip	OK	62 degrees C / 143 degrees F
FPC 11 LU 2 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 11 LU 3 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 11 MQ 0 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 11 MQ 1 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 1 Chip	OK	57 degrees C / 134 degrees F
FPC 11 MQ 2 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 2 Chip	OK	48 degrees C / 118 degrees F
FPC 11 MQ 3 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 3 Chip	OK	52 degrees C / 125 degrees F
FPC 12 Intake	OK	40 degrees C / 104 degrees F
FPC 12 Exhaust A	OK	47 degrees C / 116 degrees F
FPC 12 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 12 LU 0 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 0 Chip	OK	52 degrees C / 125 degrees F
FPC 12 LU 1 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 1 Chip	OK	55 degrees C / 131 degrees F
FPC 12 LU 2 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 2 Chip	OK	47 degrees C / 116 degrees F
FPC 12 LU 3 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 3 Chip	OK	50 degrees C / 122 degrees F
FPC 12 MQ 0 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 0 Chip	OK	46 degrees C / 114 degrees F
FPC 12 MQ 1 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 1 Chip	OK	50 degrees C / 122 degrees F
FPC 12 MQ 2 TSen	OK	46 degrees C / 114 degrees F

FPC 12 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 12 MQ 3 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 3 Chip	OK	46 degrees C / 114 degrees F
FPC 13 Intake	OK	40 degrees C / 104 degrees F
FPC 13 Exhaust A	OK	48 degrees C / 118 degrees F
FPC 13 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 13 LU 0 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 0 Chip	OK	52 degrees C / 125 degrees F
FPC 13 LU 1 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 1 Chip	OK	55 degrees C / 131 degrees F
FPC 13 LU 2 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 2 Chip	OK	48 degrees C / 118 degrees F
FPC 13 LU 3 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 3 Chip	OK	48 degrees C / 118 degrees F
FPC 13 MQ 0 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 0 Chip	OK	46 degrees C / 114 degrees F
FPC 13 MQ 1 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 1 Chip	OK	50 degrees C / 122 degrees F
FPC 13 MQ 2 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 13 MQ 3 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 3 Chip	OK	46 degrees C / 114 degrees F
FPC 14 Intake	OK	40 degrees C / 104 degrees F
FPC 14 Exhaust A	OK	50 degrees C / 122 degrees F
FPC 14 Exhaust B	OK	51 degrees C / 123 degrees F
FPC 14 LU 0 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 0 Chip	OK	50 degrees C / 122 degrees F
FPC 14 LU 1 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 1 Chip	OK	54 degrees C / 129 degrees F
FPC 14 LU 2 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 2 Chip	OK	47 degrees C / 116 degrees F
FPC 14 LU 3 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 3 Chip	OK	49 degrees C / 120 degrees F
FPC 14 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 0 Chip	OK	46 degrees C / 114 degrees F
FPC 14 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 1 Chip	OK	51 degrees C / 123 degrees F
FPC 14 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 2 Chip	OK	45 degrees C / 113 degrees F
FPC 14 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 3 Chip	OK	48 degrees C / 118 degrees F
FPC 15 Intake	OK	44 degrees C / 111 degrees F
FPC 15 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 15 Exhaust B	OK	60 degrees C / 140 degrees F
FPC 15 LU 0 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 0 Chip	OK	56 degrees C / 132 degrees F
FPC 15 LU 1 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 1 Chip	OK	50 degrees C / 122 degrees F
FPC 15 LU 2 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 2 Chip	OK	58 degrees C / 136 degrees F
FPC 15 LU 3 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 3 Chip	OK	63 degrees C / 145 degrees F
FPC 15 XM 0 TSen	OK	50 degrees C / 122 degrees F
FPC 15 XM 0 Chip	OK	56 degrees C / 132 degrees F
FPC 15 XF 0 TSen	OK	50 degrees C / 122 degrees F
FPC 15 XF 0 Chip	OK	68 degrees C / 154 degrees F
FPC 15 PLX Switch TSen	OK	50 degrees C / 122 degrees F
FPC 15 PLX Switch Chip	OK	56 degrees C / 132 degrees F
FPC 16 Intake	OK	42 degrees C / 107 degrees F
FPC 16 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 16 Exhaust B	OK	53 degrees C / 127 degrees F

FPC 16 LU 0 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 0 Chip	OK	52 degrees C / 125 degrees F
FPC 16 LU 1 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 1 Chip	OK	55 degrees C / 131 degrees F
FPC 16 LU 2 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 2 Chip	OK	48 degrees C / 118 degrees F
FPC 16 LU 3 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 3 Chip	OK	49 degrees C / 120 degrees F
FPC 16 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 0 Chip	OK	48 degrees C / 118 degrees F
FPC 16 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 1 Chip	OK	53 degrees C / 127 degrees F
FPC 16 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 16 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 3 Chip	OK	49 degrees C / 120 degrees F
FPC 17 Intake	OK	43 degrees C / 109 degrees F
FPC 17 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 17 Exhaust B	OK	55 degrees C / 131 degrees F
FPC 17 LU 0 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 0 Chip	OK	57 degrees C / 134 degrees F
FPC 17 LU 1 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 1 Chip	OK	60 degrees C / 140 degrees F
FPC 17 LU 2 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 17 LU 3 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 17 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 0 Chip	OK	50 degrees C / 122 degrees F
FPC 17 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 1 Chip	OK	54 degrees C / 129 degrees F
FPC 17 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 2 Chip	OK	47 degrees C / 116 degrees F
FPC 17 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 3 Chip	OK	51 degrees C / 123 degrees F
FPC 18 Intake	OK	44 degrees C / 111 degrees F
FPC 18 Exhaust A	OK	53 degrees C / 127 degrees F
FPC 18 Exhaust B	OK	57 degrees C / 134 degrees F
FPC 18 LU 0 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 0 Chip	OK	57 degrees C / 134 degrees F
FPC 18 LU 1 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 1 Chip	OK	62 degrees C / 143 degrees F
FPC 18 LU 2 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 18 LU 3 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 3 Chip	OK	55 degrees C / 131 degrees F
FPC 18 MQ 0 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 0 Chip	OK	54 degrees C / 129 degrees F
FPC 18 MQ 1 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 1 Chip	OK	58 degrees C / 136 degrees F
FPC 18 MQ 2 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 2 Chip	OK	50 degrees C / 122 degrees F
FPC 18 MQ 3 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 3 Chip	OK	53 degrees C / 127 degrees F
FPC 19 Intake	OK	48 degrees C / 118 degrees F
FPC 19 Exhaust A	OK	56 degrees C / 132 degrees F
FPC 19 Exhaust B	OK	64 degrees C / 147 degrees F
FPC 19 LU 0 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 0 Chip	OK	64 degrees C / 147 degrees F
FPC 19 LU 1 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 1 Chip	OK	70 degrees C / 158 degrees F

FPC 19 LU 2 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 2 Chip	OK	61 degrees C / 141 degrees F
FPC 19 LU 3 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 3 Chip	OK	62 degrees C / 143 degrees F
FPC 19 MQ 0 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 0 Chip	OK	60 degrees C / 140 degrees F
FPC 19 MQ 1 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 1 Chip	OK	62 degrees C / 143 degrees F
FPC 19 MQ 2 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 2 Chip	OK	56 degrees C / 132 degrees F
FPC 19 MQ 3 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 3 Chip	OK	57 degrees C / 134 degrees F
ADC 0 Intake	OK	40 degrees C / 104 degrees F
ADC 0 Exhaust	OK	52 degrees C / 125 degrees F
ADC 0 ADC-XF1	OK	59 degrees C / 138 degrees F
ADC 0 ADC-XF0	OK	66 degrees C / 150 degrees F
ADC 1 Intake	OK	38 degrees C / 100 degrees F
ADC 1 Exhaust	OK	50 degrees C / 122 degrees F
ADC 1 ADC-XF1	OK	59 degrees C / 138 degrees F
ADC 1 ADC-XF0	OK	63 degrees C / 145 degrees F
ADC 2 Intake	OK	37 degrees C / 98 degrees F
ADC 2 Exhaust	OK	52 degrees C / 125 degrees F
ADC 2 ADC-XF1	OK	53 degrees C / 127 degrees F
ADC 2 ADC-XF0	OK	61 degrees C / 141 degrees F
ADC 3 Intake	OK	40 degrees C / 104 degrees F
ADC 3 Exhaust	OK	51 degrees C / 123 degrees F
ADC 3 ADC-XF1	OK	61 degrees C / 141 degrees F
ADC 3 ADC-XF0	OK	64 degrees C / 147 degrees F
ADC 4 Intake	OK	39 degrees C / 102 degrees F
ADC 4 Exhaust	OK	51 degrees C / 123 degrees F
ADC 4 ADC-XF1	OK	60 degrees C / 140 degrees F
ADC 4 ADC-XF0	OK	63 degrees C / 145 degrees F
ADC 5 Intake	OK	38 degrees C / 100 degrees F
ADC 5 Exhaust	OK	54 degrees C / 129 degrees F
ADC 5 ADC-XF1	OK	56 degrees C / 132 degrees F
ADC 5 ADC-XF0	OK	67 degrees C / 152 degrees F
ADC 6 Intake	OK	39 degrees C / 102 degrees F
ADC 6 Exhaust	OK	52 degrees C / 125 degrees F
ADC 6 ADC-XF1	OK	59 degrees C / 138 degrees F
ADC 6 ADC-XF0	OK	66 degrees C / 150 degrees F
ADC 7 Intake	OK	39 degrees C / 102 degrees F
ADC 7 Exhaust	OK	54 degrees C / 129 degrees F
ADC 7 ADC-XF1	OK	62 degrees C / 143 degrees F
ADC 7 ADC-XF0	OK	70 degrees C / 158 degrees F
ADC 8 Intake	OK	39 degrees C / 102 degrees F
ADC 8 Exhaust	OK	52 degrees C / 125 degrees F
ADC 8 ADC-XF1	OK	61 degrees C / 141 degrees F
ADC 8 ADC-XF0	OK	65 degrees C / 149 degrees F
ADC 9 Intake	OK	41 degrees C / 105 degrees F
ADC 9 Exhaust	OK	51 degrees C / 123 degrees F
ADC 9 ADC-XF1	OK	63 degrees C / 145 degrees F
ADC 9 ADC-XF0	OK	63 degrees C / 145 degrees F
ADC 10 Intake	OK	48 degrees C / 118 degrees F
ADC 10 Exhaust	OK	53 degrees C / 127 degrees F
ADC 10 ADC-XF1	OK	67 degrees C / 152 degrees F
ADC 10 ADC-XF0	OK	66 degrees C / 150 degrees F
ADC 12 Intake	OK	49 degrees C / 120 degrees F
ADC 12 Exhaust	OK	54 degrees C / 129 degrees F
ADC 12 ADC-XF1	OK	67 degrees C / 152 degrees F
ADC 12 ADC-XF0	OK	67 degrees C / 152 degrees F
ADC 13 Intake	OK	49 degrees C / 120 degrees F

	ADC 13 Exhaust	OK	57 degrees C / 134 degrees F
	ADC 13 ADC-XF1	OK	66 degrees C / 150 degrees F
	ADC 13 ADC-XF0	OK	69 degrees C / 156 degrees F
	ADC 14 Intake	OK	51 degrees C / 123 degrees F
	ADC 14 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 14 ADC-XF1	OK	69 degrees C / 156 degrees F
	ADC 14 ADC-XF0	OK	74 degrees C / 165 degrees F
	ADC 15 Intake	OK	50 degrees C / 122 degrees F
	ADC 15 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 15 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 15 ADC-XF0	OK	69 degrees C / 156 degrees F
	ADC 16 Intake	OK	52 degrees C / 125 degrees F
	ADC 16 Exhaust	OK	58 degrees C / 136 degrees F
	ADC 16 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 16 ADC-XF0	OK	70 degrees C / 158 degrees F
	ADC 17 Intake	OK	52 degrees C / 125 degrees F
	ADC 17 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 17 ADC-XF1	OK	69 degrees C / 156 degrees F
	ADC 17 ADC-XF0	OK	71 degrees C / 159 degrees F
	ADC 18 Intake	OK	53 degrees C / 127 degrees F
	ADC 18 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 18 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 18 ADC-XF0	OK	73 degrees C / 163 degrees F
	ADC 19 Intake	OK	50 degrees C / 122 degrees F
	ADC 19 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 19 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 19 ADC-XF0	OK	72 degrees C / 161 degrees F
Fans	Fan Tray 0 Fan 1	OK	7440 RPM
	Fan Tray 0 Fan 2	OK	7200 RPM
	Fan Tray 0 Fan 3	OK	6960 RPM
	Fan Tray 0 Fan 4	OK	7200 RPM
	Fan Tray 0 Fan 5	OK	7080 RPM
	Fan Tray 0 Fan 6	OK	6840 RPM
	Fan Tray 1 Fan 1	OK	6840 RPM
	Fan Tray 1 Fan 2	OK	6960 RPM
	Fan Tray 1 Fan 3	OK	6960 RPM
	Fan Tray 1 Fan 4	OK	7080 RPM
	Fan Tray 1 Fan 5	OK	6960 RPM
	Fan Tray 1 Fan 6	OK	6960 RPM
	Fan Tray 2 Fan 1	OK	8640 RPM
	Fan Tray 2 Fan 2	OK	8640 RPM
	Fan Tray 2 Fan 3	OK	8760 RPM
	Fan Tray 2 Fan 4	OK	8760 RPM
	Fan Tray 2 Fan 5	OK	8640 RPM
	Fan Tray 2 Fan 6	OK	8640 RPM
	Fan Tray 3 Fan 1	OK	8520 RPM
	Fan Tray 3 Fan 2	OK	8520 RPM
	Fan Tray 3 Fan 3	OK	8640 RPM
	Fan Tray 3 Fan 4	OK	8640 RPM
	Fan Tray 3 Fan 5	OK	8520 RPM
	Fan Tray 3 Fan 6	OK	8520 RPM

show chassis environment (MX2020 Router with MPC5EQ and MPC6E)

Class	Item	Status	Measurement
Temp	PSM 0	OK	32 degrees C / 89 degrees F
	PSM 1	OK	32 degrees C / 89 degrees F
	PSM 2	OK	32 degrees C / 89 degrees F
	PSM 3	OK	32 degrees C / 89 degrees F
	PSM 4	OK	32 degrees C / 89 degrees F
	PSM 5	OK	33 degrees C / 91 degrees F

PSM 6	OK	32 degrees C / 89 degrees F
PSM 7	OK	32 degrees C / 89 degrees F
PSM 8	OK	32 degrees C / 89 degrees F
PSM 9	Absent	
PSM 10	Absent	
PSM 11	Absent	
PSM 12	OK	33 degrees C / 91 degrees F
PSM 13	OK	33 degrees C / 91 degrees F
PSM 14	OK	34 degrees C / 93 degrees F
PSM 15	OK	34 degrees C / 93 degrees F
PSM 16	OK	33 degrees C / 91 degrees F
PSM 17	OK	33 degrees C / 91 degrees F
PDM 0	OK	
PDM 1	OK	
PDM 2	OK	
PDM 3	OK	
CB 0 IntakeA-Zone0	OK	34 degrees C / 93 degrees F
CB 0 IntakeB-Zone1	OK	26 degrees C / 78 degrees F
CB 0 IntakeC-Zone0	OK	38 degrees C / 100 degrees F
CB 0 ExhaustA-Zone0	OK	34 degrees C / 93 degrees F
CB 0 ExhaustB-Zone1	OK	27 degrees C / 80 degrees F
CB 0 TCBC-Zone0	OK	32 degrees C / 89 degrees F
CB 1 IntakeA-Zone0	OK	24 degrees C / 75 degrees F
CB 1 IntakeB-Zone1	OK	22 degrees C / 71 degrees F
CB 1 IntakeC-Zone0	OK	34 degrees C / 93 degrees F
CB 1 ExhaustA-Zone0	OK	31 degrees C / 87 degrees F
CB 1 ExhaustB-Zone1	OK	24 degrees C / 75 degrees F
CB 1 TCBC-Zone0	OK	27 degrees C / 80 degrees F
SPMB 0 Intake	OK	25 degrees C / 77 degrees F
SPMB 1 Intake	OK	23 degrees C / 73 degrees F
Routing Engine 0	OK	28 degrees C / 82 degrees F
Routing Engine 0 CPU	OK	25 degrees C / 77 degrees F
Routing Engine 1	OK	25 degrees C / 77 degrees F
Routing Engine 1 CPU	OK	24 degrees C / 75 degrees F
SFB 0 Intake-Zone0	OK	45 degrees C / 113 degrees F
SFB 0 Exhaust-Zone1	OK	34 degrees C / 93 degrees F
SFB 0 IntakeA-Zone0	OK	32 degrees C / 89 degrees F
SFB 0 IntakeB-Zone1	OK	28 degrees C / 82 degrees F
SFB 0 Exhaust-Zone0	OK	36 degrees C / 96 degrees F
SFB 0 SFB-XF2-Zone1	OK	46 degrees C / 114 degrees F
SFB 0 SFB-XF1-Zone0	OK	48 degrees C / 118 degrees F
SFB 0 SFB-XF0-Zone0	OK	60 degrees C / 140 degrees F
SFB 1 Intake-Zone0	OK	44 degrees C / 111 degrees F
SFB 1 Exhaust-Zone1	OK	34 degrees C / 93 degrees F
SFB 1 IntakeA-Zone0	OK	35 degrees C / 95 degrees F
SFB 1 IntakeB-Zone1	OK	27 degrees C / 80 degrees F
SFB 1 Exhaust-Zone0	OK	37 degrees C / 98 degrees F
SFB 1 SFB-XF2-Zone1	OK	47 degrees C / 116 degrees F
SFB 1 SFB-XF1-Zone0	OK	49 degrees C / 120 degrees F
SFB 1 SFB-XF0-Zone0	OK	56 degrees C / 132 degrees F
SFB 2 Intake-Zone0	OK	41 degrees C / 105 degrees F
SFB 2 Exhaust-Zone1	OK	34 degrees C / 93 degrees F
SFB 2 IntakeA-Zone0	OK	35 degrees C / 95 degrees F
SFB 2 IntakeB-Zone1	OK	28 degrees C / 82 degrees F
SFB 2 Exhaust-Zone0	OK	37 degrees C / 98 degrees F
SFB 2 SFB-XF2-Zone1	OK	47 degrees C / 116 degrees F
SFB 2 SFB-XF1-Zone0	OK	55 degrees C / 131 degrees F
SFB 2 SFB-XF0-Zone0	OK	55 degrees C / 131 degrees F
SFB 3 Intake-Zone0	OK	43 degrees C / 109 degrees F
SFB 3 Exhaust-Zone1	OK	33 degrees C / 91 degrees F
SFB 3 IntakeA-Zone0	OK	35 degrees C / 95 degrees F

SFB 3 IntakeB-Zone1	OK	27 degrees C / 80 degrees F
SFB 3 Exhaust-Zone0	OK	36 degrees C / 96 degrees F
SFB 3 SFB-XF2-Zone1	OK	46 degrees C / 114 degrees F
SFB 3 SFB-XF1-Zone0	OK	46 degrees C / 114 degrees F
SFB 3 SFB-XF0-Zone0	OK	57 degrees C / 134 degrees F
SFB 4 Intake-Zone0	OK	36 degrees C / 96 degrees F
SFB 4 Exhaust-Zone1	OK	32 degrees C / 89 degrees F
SFB 4 IntakeA-Zone0	OK	31 degrees C / 87 degrees F
SFB 4 IntakeB-Zone1	OK	26 degrees C / 78 degrees F
SFB 4 Exhaust-Zone0	OK	32 degrees C / 89 degrees F
SFB 4 SFB-XF2-Zone1	OK	44 degrees C / 111 degrees F
SFB 4 SFB-XF1-Zone0	OK	45 degrees C / 113 degrees F
SFB 4 SFB-XF0-Zone0	OK	52 degrees C / 125 degrees F
SFB 5 Intake-Zone0	OK	31 degrees C / 87 degrees F
SFB 5 Exhaust-Zone1	OK	30 degrees C / 86 degrees F
SFB 5 IntakeA-Zone0	OK	26 degrees C / 78 degrees F
SFB 5 IntakeB-Zone1	OK	24 degrees C / 75 degrees F
SFB 5 Exhaust-Zone0	OK	29 degrees C / 84 degrees F
SFB 5 SFB-XF2-Zone1	OK	43 degrees C / 109 degrees F
SFB 5 SFB-XF1-Zone0	OK	47 degrees C / 116 degrees F
SFB 5 SFB-XF0-Zone0	OK	49 degrees C / 120 degrees F
SFB 6 Intake-Zone0	OK	30 degrees C / 86 degrees F
SFB 6 Exhaust-Zone1	OK	29 degrees C / 84 degrees F
SFB 6 IntakeA-Zone0	OK	25 degrees C / 77 degrees F
SFB 6 IntakeB-Zone1	OK	24 degrees C / 75 degrees F
SFB 6 Exhaust-Zone0	OK	29 degrees C / 84 degrees F
SFB 6 SFB-XF2-Zone1	OK	43 degrees C / 109 degrees F
SFB 6 SFB-XF1-Zone0	OK	44 degrees C / 111 degrees F
SFB 6 SFB-XF0-Zone0	OK	45 degrees C / 113 degrees F
SFB 7 Intake-Zone0	OK	31 degrees C / 87 degrees F
SFB 7 Exhaust-Zone1	OK	30 degrees C / 86 degrees F
SFB 7 IntakeA-Zone0	OK	26 degrees C / 78 degrees F
SFB 7 IntakeB-Zone1	OK	24 degrees C / 75 degrees F
SFB 7 Exhaust-Zone0	OK	28 degrees C / 82 degrees F
SFB 7 SFB-XF2-Zone1	OK	50 degrees C / 122 degrees F
SFB 7 SFB-XF1-Zone0	OK	43 degrees C / 109 degrees F
SFB 7 SFB-XF0-Zone0	OK	47 degrees C / 116 degrees F
FPC 0 Intake	OK	31 degrees C / 87 degrees F
FPC 0 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 0 Exhaust B	OK	43 degrees C / 109 degrees F
FPC 0 XL TSen	OK	42 degrees C / 107 degrees F
FPC 0 XL Chip	OK	46 degrees C / 114 degrees F
FPC 0 XL_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XL_XR0 Chip	OK	48 degrees C / 118 degrees F
FPC 0 XL_XR1 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XL_XR1 Chip	OK	48 degrees C / 118 degrees F
FPC 0 XQ TSen	OK	42 degrees C / 107 degrees F
FPC 0 XQ Chip	OK	44 degrees C / 111 degrees F
FPC 0 XQ_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XQ_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 0 XQ_XR1 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XQ_XR1 Chip	OK	55 degrees C / 131 degrees F
FPC 0 XM 0 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XM 0 Chip	OK	62 degrees C / 143 degrees F
FPC 0 XM 1 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XM 1 Chip	OK	44 degrees C / 111 degrees F
FPC 0 PLX PCIe Switch TSe	OK	48 degrees C / 118 degrees F
FPC 0 PLX PCIe Switch Chi	OK	57 degrees C / 134 degrees F
FPC 1 Intake	OK	29 degrees C / 84 degrees F
FPC 1 Exhaust A	OK	36 degrees C / 96 degrees F
FPC 1 Exhaust B	OK	44 degrees C / 111 degrees F

FPC 1 LU 0 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 0 Chip	OK	45 degrees C / 113 degrees F
FPC 1 LU 1 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 1 Chip	OK	38 degrees C / 100 degrees F
FPC 1 LU 2 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 2 Chip	OK	42 degrees C / 107 degrees F
FPC 1 LU 3 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 3 Chip	OK	47 degrees C / 116 degrees F
FPC 1 XM 0 TSen	OK	38 degrees C / 100 degrees F
FPC 1 XM 0 Chip	OK	44 degrees C / 111 degrees F
FPC 1 XF 0 TSen	OK	38 degrees C / 100 degrees F
FPC 1 XF 0 Chip	OK	54 degrees C / 129 degrees F
FPC 1 PLX Switch TSen	OK	38 degrees C / 100 degrees F
FPC 1 PLX Switch Chip	OK	41 degrees C / 105 degrees F
FPC 2 Intake	OK	28 degrees C / 82 degrees F
FPC 2 Exhaust A	OK	28 degrees C / 82 degrees F
FPC 2 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 2 LU 0 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 0 Chip	OK	40 degrees C / 104 degrees F
FPC 2 LU 1 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 1 Chip	OK	41 degrees C / 105 degrees F
FPC 2 LU 2 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 2 Chip	OK	34 degrees C / 93 degrees F
FPC 2 LU 3 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 3 Chip	OK	38 degrees C / 100 degrees F
FPC 2 XM 0 TSen	OK	40 degrees C / 104 degrees F
FPC 2 XM 0 Chip	OK	47 degrees C / 116 degrees F
FPC 2 XM 1 TSen	OK	40 degrees C / 104 degrees F
FPC 2 XM 1 Chip	OK	42 degrees C / 107 degrees F
FPC 2 PLX Switch TSen	OK	40 degrees C / 104 degrees F
FPC 2 PLX Switch Chip	OK	39 degrees C / 102 degrees F
FPC 3 Intake	OK	27 degrees C / 80 degrees F
FPC 3 Exhaust A	OK	38 degrees C / 100 degrees F
FPC 3 Exhaust B	OK	31 degrees C / 87 degrees F
FPC 3 QX 0 TSen	OK	38 degrees C / 100 degrees F
FPC 3 QX 0 Chip	OK	42 degrees C / 107 degrees F
FPC 3 LU 0 TCAM TSen	OK	38 degrees C / 100 degrees F
FPC 3 LU 0 TCAM Chip	OK	43 degrees C / 109 degrees F
FPC 3 LU 0 TSen	OK	38 degrees C / 100 degrees F
FPC 3 LU 0 Chip	OK	42 degrees C / 107 degrees F
FPC 3 MQ 0 TSen	OK	38 degrees C / 100 degrees F
FPC 3 MQ 0 Chip	OK	39 degrees C / 102 degrees F
FPC 3 QX 1 TSen	OK	32 degrees C / 89 degrees F
FPC 3 QX 1 Chip	OK	36 degrees C / 96 degrees F
FPC 3 LU 1 TCAM TSen	OK	32 degrees C / 89 degrees F
FPC 3 LU 1 TCAM Chip	OK	35 degrees C / 95 degrees F
FPC 3 LU 1 TSen	OK	32 degrees C / 89 degrees F
FPC 3 LU 1 Chip	OK	37 degrees C / 98 degrees F
FPC 3 MQ 1 TSen	OK	32 degrees C / 89 degrees F
FPC 3 MQ 1 Chip	OK	36 degrees C / 96 degrees F
FPC 4 Intake	OK	29 degrees C / 84 degrees F
FPC 4 Exhaust A	OK	36 degrees C / 96 degrees F
FPC 4 Exhaust B	OK	40 degrees C / 104 degrees F
FPC 4 XL TSen	OK	39 degrees C / 102 degrees F
FPC 4 XL Chip	OK	42 degrees C / 107 degrees F
FPC 4 XL_XR0 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XL_XR0 Chip	OK	45 degrees C / 113 degrees F
FPC 4 XL_XR1 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XL_XR1 Chip	OK	46 degrees C / 114 degrees F
FPC 4 XQ TSen	OK	39 degrees C / 102 degrees F
FPC 4 XQ Chip	OK	42 degrees C / 107 degrees F

FPC 4 XQ_XR0 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XQ_XR0 Chip	OK	54 degrees C / 129 degrees F
FPC 4 XQ_XR1 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XQ_XR1 Chip	OK	53 degrees C / 127 degrees F
FPC 4 XM 0 TSen	OK	45 degrees C / 113 degrees F
FPC 4 XM 0 Chip	OK	59 degrees C / 138 degrees F
FPC 4 XM 1 TSen	OK	45 degrees C / 113 degrees F
FPC 4 XM 1 Chip	OK	41 degrees C / 105 degrees F
FPC 4 PLX PCIe Switch TSe	OK	45 degrees C / 113 degrees F
FPC 4 PLX PCIe Switch Chi	OK	58 degrees C / 136 degrees F
FPC 5 Intake	OK	29 degrees C / 84 degrees F
FPC 5 Exhaust A	OK	33 degrees C / 91 degrees F
FPC 5 Exhaust B	OK	39 degrees C / 102 degrees F
FPC 5 LU 0 TSen	OK	40 degrees C / 104 degrees F
FPC 5 LU 0 Chip	OK	40 degrees C / 104 degrees F
FPC 5 LU 1 TSen	OK	40 degrees C / 104 degrees F
FPC 5 LU 1 Chip	OK	45 degrees C / 113 degrees F
FPC 5 LU 2 TSen	OK	40 degrees C / 104 degrees F
FPC 5 LU 2 Chip	OK	40 degrees C / 104 degrees F
FPC 5 LU 3 TSen	OK	40 degrees C / 104 degrees F
FPC 5 LU 3 Chip	OK	46 degrees C / 114 degrees F
FPC 5 MQ 0 TSen	OK	32 degrees C / 89 degrees F
FPC 5 MQ 0 Chip	OK	33 degrees C / 91 degrees F
FPC 5 MQ 1 TSen	OK	32 degrees C / 89 degrees F
FPC 5 MQ 1 Chip	OK	35 degrees C / 95 degrees F
FPC 5 MQ 2 TSen	OK	32 degrees C / 89 degrees F
FPC 5 MQ 2 Chip	OK	32 degrees C / 89 degrees F
FPC 5 MQ 3 TSen	OK	32 degrees C / 89 degrees F
FPC 5 MQ 3 Chip	OK	32 degrees C / 89 degrees F
FPC 9 Intake	OK	25 degrees C / 77 degrees F
FPC 9 Exhaust A	OK	37 degrees C / 98 degrees F
FPC 9 Exhaust B	OK	40 degrees C / 104 degrees F
FPC 9 XL 0 TSen	OK	40 degrees C / 104 degrees F

...

show chassis environment (MX2010 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PSM 0	OK	7 degrees C / 44 degrees F
	PSM 1	OK	7 degrees C / 44 degrees F
	PSM 2	OK	7 degrees C / 44 degrees F
	PSM 3	OK	6 degrees C / 42 degrees F
	PSM 4	OK	6 degrees C / 42 degrees F
	PSM 5	OK	6 degrees C / 42 degrees F
	PSM 6	OK	6 degrees C / 42 degrees F
	PSM 7	OK	7 degrees C / 44 degrees F
	PSM 8	OK	7 degrees C / 44 degrees F
	PDM 0	OK	
	PDM 1	Absent	
	CB 0 IntakeA-Zone0	OK	14 degrees C / 57 degrees F
	CB 0 IntakeB-Zone1	OK	7 degrees C / 44 degrees F
	CB 0 IntakeC-Zone0	OK	22 degrees C / 71 degrees F
	CB 0 ExhaustA-Zone0	OK	14 degrees C / 57 degrees F
	CB 0 ExhaustB-Zone1	OK	9 degrees C / 48 degrees F
	CB 0 TCBC-Zone0	OK	11 degrees C / 51 degrees F
	CB 1 IntakeA-Zone0	OK	9 degrees C / 48 degrees F
	CB 1 IntakeB-Zone1	OK	5 degrees C / 41 degrees F
	CB 1 IntakeC-Zone0	OK	20 degrees C / 68 degrees F
	CB 1 ExhaustA-Zone0	OK	12 degrees C / 53 degrees F
	CB 1 ExhaustB-Zone1	OK	7 degrees C / 44 degrees F

CB 1 TCBC-Zone0	OK	10 degrees C / 50 degrees F
SPMB 0 Intake	OK	5 degrees C / 41 degrees F
SPMB 1 Intake	OK	4 degrees C / 39 degrees F
Routing Engine 0	OK	9 degrees C / 48 degrees F
Routing Engine 0 CPU	OK	9 degrees C / 48 degrees F
Routing Engine 1	OK	6 degrees C / 42 degrees F
Routing Engine 1 CPU	OK	6 degrees C / 42 degrees F
SFB 0 Intake-Zone0	OK	26 degrees C / 78 degrees F
SFB 0 Exhaust-Zone1	OK	17 degrees C / 62 degrees F
SFB 0 IntakeA-Zone0	OK	16 degrees C / 60 degrees F
SFB 0 IntakeB-Zone1	OK	11 degrees C / 51 degrees F
SFB 0 Exhaust-Zone0	OK	18 degrees C / 64 degrees F
SFB 0 SFB-XF2-Zone1	OK	25 degrees C / 77 degrees F
SFB 0 SFB-XF1-Zone0	OK	23 degrees C / 73 degrees F
SFB 0 SFB-XF0-Zone0	OK	33 degrees C / 91 degrees F
SFB 1 Intake-Zone0	OK	27 degrees C / 80 degrees F
SFB 1 Exhaust-Zone1	OK	15 degrees C / 59 degrees F
SFB 1 IntakeA-Zone0	OK	20 degrees C / 68 degrees F
SFB 1 IntakeB-Zone1	OK	10 degrees C / 50 degrees F
SFB 1 Exhaust-Zone0	OK	19 degrees C / 66 degrees F
SFB 1 SFB-XF2-Zone1	OK	26 degrees C / 78 degrees F
SFB 1 SFB-XF1-Zone0	OK	27 degrees C / 80 degrees F
SFB 1 SFB-XF0-Zone0	OK	32 degrees C / 89 degrees F
SFB 2 Intake-Zone0	OK	21 degrees C / 69 degrees F
SFB 2 Exhaust-Zone1	OK	13 degrees C / 55 degrees F
SFB 2 IntakeA-Zone0	OK	18 degrees C / 64 degrees F
SFB 2 IntakeB-Zone1	OK	9 degrees C / 48 degrees F
SFB 2 Exhaust-Zone0	OK	16 degrees C / 60 degrees F
SFB 2 SFB-XF2-Zone1	OK	24 degrees C / 75 degrees F
SFB 2 SFB-XF1-Zone0	OK	21 degrees C / 69 degrees F
SFB 2 SFB-XF0-Zone0	OK	26 degrees C / 78 degrees F
SFB 4 Intake-Zone0	OK	28 degrees C / 82 degrees F
SFB 4 Exhaust-Zone1	OK	16 degrees C / 60 degrees F
SFB 4 IntakeA-Zone0	OK	18 degrees C / 64 degrees F
SFB 4 IntakeB-Zone1	OK	11 degrees C / 51 degrees F
SFB 4 Exhaust-Zone0	OK	19 degrees C / 66 degrees F
SFB 4 SFB-XF2-Zone1	OK	27 degrees C / 80 degrees F
SFB 4 SFB-XF1-Zone0	OK	27 degrees C / 80 degrees F
SFB 4 SFB-XF0-Zone0	OK	32 degrees C / 89 degrees F
SFB 5 Intake-Zone0	OK	22 degrees C / 71 degrees F
SFB 5 Exhaust-Zone1	OK	14 degrees C / 57 degrees F
SFB 5 IntakeA-Zone0	OK	18 degrees C / 64 degrees F
SFB 5 IntakeB-Zone1	OK	10 degrees C / 50 degrees F
SFB 5 Exhaust-Zone0	OK	17 degrees C / 62 degrees F
SFB 5 SFB-XF2-Zone1	OK	22 degrees C / 71 degrees F
SFB 5 SFB-XF1-Zone0	OK	29 degrees C / 84 degrees F
SFB 5 SFB-XF0-Zone0	OK	27 degrees C / 80 degrees F
SFB 6 Intake-Zone0	OK	27 degrees C / 80 degrees F
SFB 6 Exhaust-Zone1	OK	13 degrees C / 55 degrees F
SFB 6 IntakeA-Zone0	OK	19 degrees C / 66 degrees F
SFB 6 IntakeB-Zone1	OK	10 degrees C / 50 degrees F
SFB 6 Exhaust-Zone0	OK	20 degrees C / 68 degrees F
SFB 6 SFB-XF2-Zone1	OK	24 degrees C / 75 degrees F
SFB 6 SFB-XF1-Zone0	OK	32 degrees C / 89 degrees F
SFB 6 SFB-XF0-Zone0	OK	33 degrees C / 91 degrees F
SFB 7 Intake-Zone0	OK	25 degrees C / 77 degrees F
SFB 7 Exhaust-Zone1	OK	13 degrees C / 55 degrees F
SFB 7 IntakeA-Zone0	OK	14 degrees C / 57 degrees F
SFB 7 IntakeB-Zone1	OK	8 degrees C / 46 degrees F
SFB 7 Exhaust-Zone0	OK	17 degrees C / 62 degrees F
SFB 7 SFB-XF2-Zone1	OK	21 degrees C / 69 degrees F

SFB 7 SFB-XF1-Zone0	OK	21 degrees C / 69 degrees F
SFB 7 SFB-XF0-Zone0	OK	33 degrees C / 91 degrees F
FPC 0 Intake	OK	13 degrees C / 55 degrees F
FPC 0 Exhaust A	OK	13 degrees C / 55 degrees F
FPC 0 Exhaust B	OK	14 degrees C / 57 degrees F
FPC 0 LU 0 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 0 Chip	OK	25 degrees C / 77 degrees F
FPC 0 LU 1 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 1 Chip	OK	27 degrees C / 80 degrees F
FPC 0 LU 2 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 2 Chip	OK	19 degrees C / 66 degrees F
FPC 0 LU 3 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 3 Chip	OK	23 degrees C / 73 degrees F
FPC 0 XM 0 TSen	OK	28 degrees C / 82 degrees F
FPC 0 XM 0 Chip	OK	33 degrees C / 91 degrees F
FPC 0 XM 1 TSen	OK	28 degrees C / 82 degrees F
FPC 0 XM 1 Chip	OK	26 degrees C / 78 degrees F
FPC 0 PLX Switch TSen	OK	28 degrees C / 82 degrees F
FPC 0 PLX Switch Chip	OK	26 degrees C / 78 degrees F
FPC 1 Intake	OK	10 degrees C / 50 degrees F
FPC 1 Exhaust A	OK	24 degrees C / 75 degrees F
FPC 1 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 1 LU 0 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 0 Chip	OK	31 degrees C / 87 degrees F
FPC 1 LU 1 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 1 Chip	OK	21 degrees C / 69 degrees F
FPC 1 LU 2 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 2 Chip	OK	25 degrees C / 77 degrees F
FPC 1 LU 3 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 3 Chip	OK	33 degrees C / 91 degrees F
FPC 1 XM 0 TSen	OK	22 degrees C / 71 degrees F
FPC 1 XM 0 Chip	OK	30 degrees C / 86 degrees F
FPC 1 XF 0 TSen	OK	22 degrees C / 71 degrees F
FPC 1 XF 0 Chip	OK	37 degrees C / 98 degrees F
FPC 1 PLX Switch TSen	OK	22 degrees C / 71 degrees F
FPC 1 PLX Switch Chip	OK	22 degrees C / 71 degrees F
FPC 2 Intake	OK	9 degrees C / 48 degrees F
FPC 2 Exhaust A	OK	10 degrees C / 50 degrees F
FPC 2 Exhaust B	OK	10 degrees C / 50 degrees F
FPC 2 LU 0 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 0 Chip	OK	25 degrees C / 77 degrees F
FPC 2 LU 1 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 1 Chip	OK	26 degrees C / 78 degrees F
FPC 2 LU 2 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 2 Chip	OK	17 degrees C / 62 degrees F
FPC 2 LU 3 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 3 Chip	OK	22 degrees C / 71 degrees F
FPC 2 XM 0 TSen	OK	26 degrees C / 78 degrees F
FPC 2 XM 0 Chip	OK	34 degrees C / 93 degrees F
FPC 2 XM 1 TSen	OK	26 degrees C / 78 degrees F
FPC 2 XM 1 Chip	OK	26 degrees C / 78 degrees F
FPC 2 PLX Switch TSen	OK	26 degrees C / 78 degrees F
FPC 2 PLX Switch Chip	OK	20 degrees C / 68 degrees F
FPC 3 Intake	OK	12 degrees C / 53 degrees F
FPC 3 Exhaust A	OK	16 degrees C / 60 degrees F
FPC 3 Exhaust B	OK	26 degrees C / 78 degrees F
FPC 3 LU 0 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 0 Chip	OK	26 degrees C / 78 degrees F
FPC 3 LU 1 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 1 Chip	OK	27 degrees C / 80 degrees F
FPC 3 LU 2 TSen	OK	23 degrees C / 73 degrees F

FPC 3 LU 2 Chip	OK	22 degrees C / 71 degrees F
FPC 3 LU 3 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 3 Chip	OK	21 degrees C / 69 degrees F
FPC 3 MQ 0 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 0 Chip	OK	18 degrees C / 64 degrees F
FPC 3 MQ 1 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 1 Chip	OK	20 degrees C / 68 degrees F
FPC 3 MQ 2 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 2 Chip	OK	17 degrees C / 62 degrees F
FPC 3 MQ 3 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 3 Chip	OK	16 degrees C / 60 degrees F
FPC 4 Intake	OK	11 degrees C / 51 degrees F
FPC 4 Exhaust A	OK	22 degrees C / 71 degrees F
FPC 4 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 4 LU 0 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 0 Chip	OK	33 degrees C / 91 degrees F
FPC 4 LU 1 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 1 Chip	OK	21 degrees C / 69 degrees F
FPC 4 LU 2 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 2 Chip	OK	26 degrees C / 78 degrees F
FPC 4 LU 3 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 3 Chip	OK	33 degrees C / 91 degrees F
FPC 4 XM 0 TSen	OK	22 degrees C / 71 degrees F
FPC 4 XM 0 Chip	OK	30 degrees C / 86 degrees F
FPC 4 XF 0 TSen	OK	22 degrees C / 71 degrees F
FPC 4 XF 0 Chip	OK	37 degrees C / 98 degrees F
FPC 4 PLX Switch TSen	OK	22 degrees C / 71 degrees F
FPC 4 PLX Switch Chip	OK	23 degrees C / 73 degrees F
FPC 5 Intake	OK	12 degrees C / 53 degrees F
FPC 5 Exhaust A	OK	12 degrees C / 53 degrees F
FPC 5 Exhaust B	OK	12 degrees C / 53 degrees F
FPC 5 LU 0 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 0 Chip	OK	28 degrees C / 82 degrees F
FPC 5 LU 1 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 1 Chip	OK	27 degrees C / 80 degrees F
FPC 5 LU 2 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 2 Chip	OK	19 degrees C / 66 degrees F
FPC 5 LU 3 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 3 Chip	OK	22 degrees C / 71 degrees F
FPC 5 XM 0 TSen	OK	27 degrees C / 80 degrees F
FPC 5 XM 0 Chip	OK	36 degrees C / 96 degrees F
FPC 5 XM 1 TSen	OK	27 degrees C / 80 degrees F
FPC 5 XM 1 Chip	OK	26 degrees C / 78 degrees F
FPC 5 PLX Switch TSen	OK	27 degrees C / 80 degrees F
FPC 5 PLX Switch Chip	OK	24 degrees C / 75 degrees F
FPC 6 Intake	OK	12 degrees C / 53 degrees F
FPC 6 Exhaust A	OK	17 degrees C / 62 degrees F
FPC 6 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 6 LU 0 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 0 Chip	OK	29 degrees C / 84 degrees F
FPC 6 LU 1 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 1 Chip	OK	30 degrees C / 86 degrees F
FPC 6 LU 2 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 2 Chip	OK	24 degrees C / 75 degrees F
FPC 6 LU 3 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 3 Chip	OK	22 degrees C / 71 degrees F
FPC 6 MQ 0 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 0 Chip	OK	19 degrees C / 66 degrees F
FPC 6 MQ 1 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 1 Chip	OK	20 degrees C / 68 degrees F
FPC 6 MQ 2 TSen	OK	16 degrees C / 60 degrees F

FPC 6 MQ 2 Chip	OK	17 degrees C / 62 degrees F
FPC 6 MQ 3 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 3 Chip	OK	16 degrees C / 60 degrees F
FPC 7 Intake	OK	10 degrees C / 50 degrees F
FPC 7 Exhaust A	OK	10 degrees C / 50 degrees F
FPC 7 Exhaust B	OK	11 degrees C / 51 degrees F
FPC 7 LU 0 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 0 Chip	OK	26 degrees C / 78 degrees F
FPC 7 LU 1 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 1 Chip	OK	29 degrees C / 84 degrees F
FPC 7 LU 2 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 2 Chip	OK	19 degrees C / 66 degrees F
FPC 7 LU 3 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 3 Chip	OK	24 degrees C / 75 degrees F
FPC 7 XM 0 TSen	OK	26 degrees C / 78 degrees F
FPC 7 XM 0 Chip	OK	34 degrees C / 93 degrees F
FPC 7 XM 1 TSen	OK	26 degrees C / 78 degrees F
FPC 7 XM 1 Chip	OK	32 degrees C / 89 degrees F
FPC 7 PLX Switch TSen	OK	26 degrees C / 78 degrees F
FPC 7 PLX Switch Chip	OK	22 degrees C / 71 degrees F
FPC 8 Intake	OK	10 degrees C / 50 degrees F
FPC 8 Exhaust A	OK	22 degrees C / 71 degrees F
FPC 8 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 8 LU 0 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 0 Chip	OK	33 degrees C / 91 degrees F
FPC 8 LU 1 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 1 Chip	OK	23 degrees C / 73 degrees F
FPC 8 LU 2 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 2 Chip	OK	26 degrees C / 78 degrees F
FPC 8 LU 3 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 3 Chip	OK	33 degrees C / 91 degrees F
FPC 8 XM 0 TSen	OK	20 degrees C / 68 degrees F
FPC 8 XM 0 Chip	OK	29 degrees C / 84 degrees F
FPC 8 XF 0 TSen	OK	20 degrees C / 68 degrees F
FPC 8 XF 0 Chip	OK	38 degrees C / 100 degrees F
FPC 8 PLX Switch TSen	OK	20 degrees C / 68 degrees F
FPC 8 PLX Switch Chip	OK	24 degrees C / 75 degrees F
FPC 9 Intake	OK	11 degrees C / 51 degrees F
FPC 9 Exhaust A	OK	11 degrees C / 51 degrees F
FPC 9 Exhaust B	OK	11 degrees C / 51 degrees F
FPC 9 LU 0 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 0 Chip	OK	24 degrees C / 75 degrees F
FPC 9 LU 1 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 1 Chip	OK	26 degrees C / 78 degrees F
FPC 9 LU 2 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 2 Chip	OK	16 degrees C / 60 degrees F
FPC 9 LU 3 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 3 Chip	OK	21 degrees C / 69 degrees F
FPC 9 XM 0 TSen	OK	25 degrees C / 77 degrees F
FPC 9 XM 0 Chip	OK	32 degrees C / 89 degrees F
FPC 9 XM 1 TSen	OK	25 degrees C / 77 degrees F
FPC 9 XM 1 Chip	OK	25 degrees C / 77 degrees F
FPC 9 PLX Switch TSen	OK	25 degrees C / 77 degrees F
FPC 9 PLX Switch Chip	OK	21 degrees C / 69 degrees F
ADC 0 Intake	OK	12 degrees C / 53 degrees F
ADC 0 Exhaust	OK	20 degrees C / 68 degrees F
ADC 0 ADC-XF1	OK	26 degrees C / 78 degrees F
ADC 0 ADC-XF0	OK	32 degrees C / 89 degrees F
ADC 1 Intake	OK	11 degrees C / 51 degrees F
ADC 1 Exhaust	OK	21 degrees C / 69 degrees F
ADC 1 ADC-XF1	OK	24 degrees C / 75 degrees F


```

ADC 1 ADC-XF0          OK          31 degrees C / 87 degrees F
ADC 2 Intake           OK          14 degrees C / 57 degrees F
ADC 2 Exhaust          OK          21 degrees C / 69 degrees F
ADC 2 ADC-XF1          OK          28 degrees C / 82 degrees F
ADC 2 ADC-XF0          OK          34 degrees C / 93 degrees F
ADC 3 Intake           OK          13 degrees C / 55 degrees F
ADC 3 Exhaust          OK          19 degrees C / 66 degrees F
ADC 3 ADC-XF1          OK          24 degrees C / 75 degrees F
ADC 3 ADC-XF0          OK          31 degrees C / 87 degrees F
ADC 4 Intake           OK          9 degrees C / 48 degrees F
ADC 4 Exhaust          OK          22 degrees C / 71 degrees F
ADC 4 ADC-XF1          OK          28 degrees C / 82 degrees F
ADC 4 ADC-XF0          OK          35 degrees C / 95 degrees F
ADC 5 Intake           OK          12 degrees C / 53 degrees F
ADC 5 Exhaust          OK          22 degrees C / 71 degrees F
ADC 5 ADC-XF1          OK          28 degrees C / 82 degrees F
ADC 5 ADC-XF0          OK          34 degrees C / 93 degrees F
ADC 6 Intake           OK          11 degrees C / 51 degrees F
ADC 6 Exhaust          OK          21 degrees C / 69 degrees F
ADC 6 ADC-XF1          OK          26 degrees C / 78 degrees F
ADC 6 ADC-XF0          OK          35 degrees C / 95 degrees F
ADC 7 Intake           OK          14 degrees C / 57 degrees F
ADC 7 Exhaust          OK          22 degrees C / 71 degrees F
ADC 7 ADC-XF1          OK          26 degrees C / 78 degrees F
ADC 7 ADC-XF0          OK          34 degrees C / 93 degrees F
ADC 8 Intake           OK          14 degrees C / 57 degrees F
ADC 8 Exhaust          OK          21 degrees C / 69 degrees F
ADC 8 ADC-XF1          OK          24 degrees C / 75 degrees F
ADC 8 ADC-XF0          OK          31 degrees C / 87 degrees F
ADC 9 Intake           OK          10 degrees C / 50 degrees F
ADC 9 Exhaust          OK          22 degrees C / 71 degrees F
ADC 9 ADC-XF1          OK          28 degrees C / 82 degrees F
ADC 9 ADC-XF0          OK          36 degrees C / 96 degrees F
Fans Fan Tray 0 Fan 1  OK          3480 RPM
Fans Fan Tray 0 Fan 2  OK          3480 RPM
Fans Fan Tray 0 Fan 3  OK          3480 RPM
Fans Fan Tray 0 Fan 4  OK          3360 RPM
Fans Fan Tray 0 Fan 5  OK          3360 RPM
Fans Fan Tray 0 Fan 6  OK          3480 RPM
Fans Fan Tray 1 Fan 1  OK          3360 RPM
Fans Fan Tray 1 Fan 2  OK          3360 RPM
Fans Fan Tray 1 Fan 3  OK          3360 RPM
Fans Fan Tray 1 Fan 4  OK          3480 RPM
Fans Fan Tray 1 Fan 5  OK          3480 RPM
Fans Fan Tray 1 Fan 6  OK          3480 RPM
Fans Fan Tray 2 Fan 1  OK          3360 RPM
Fans Fan Tray 2 Fan 2  OK          3360 RPM
Fans Fan Tray 2 Fan 3  OK          3480 RPM
Fans Fan Tray 2 Fan 4  OK          3480 RPM
Fans Fan Tray 2 Fan 5  OK          3360 RPM
Fans Fan Tray 2 Fan 6  OK          3480 RPM
Fans Fan Tray 3 Fan 1  OK          3360 RPM
Fans Fan Tray 3 Fan 2  OK          3360 RPM
Fans Fan Tray 3 Fan 3  OK          3480 RPM
Fans Fan Tray 3 Fan 4  OK          3480 RPM
Fans Fan Tray 3 Fan 5  OK          3480 RPM
Fans Fan Tray 3 Fan 6  OK          3360 RPM

```

show chassis environment (T320 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	PEM 0	OK	
	PEM 1	Absent	
Temp	SCG 0	OK	28 degrees C / 82 degrees F
	SCG 1	OK	28 degrees C / 82 degrees F
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 1	OK	30 degrees C / 86 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	32 degrees C / 89 degrees F
	SIB 0	OK	33 degrees C / 91 degrees F
	SIB 1	OK	33 degrees C / 91 degrees F
	SIB 2	OK	34 degrees C / 93 degrees F
	FPC 0 Top	OK	38 degrees C / 100 degrees F
	FPC 0 Bottom	OK	32 degrees C / 89 degrees F
	FPC 1 Top	OK	38 degrees C / 100 degrees F
	FPC 1 Bottom	OK	33 degrees C / 91 degrees F
	FPC 2 Top	OK	36 degrees C / 96 degrees F
	FPC 2 Bottom	OK	31 degrees C / 87 degrees F
	FPM GBUS	OK	26 degrees C / 78 degrees F
	FPM Display	OK	29 degrees C / 84 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Middle fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

show chassis environment (T640 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	OK	22 degrees C / 71 degrees F
	SCG 0	OK	30 degrees C / 86 degrees F
	SCG 1	OK	30 degrees C / 86 degrees F
	Routing Engine 0	Present	
	Routing Engine 1	OK	27 degrees C / 80 degrees F
	CB 0	Present	
	CB 1	OK	33 degrees C / 91 degrees F
	SIB 0	Absent	
	SIB 1	Absent	
	SIB 2	Absent	
	SIB 3	Absent	
	SIB 4	Absent	
	FPC 4 Top	Testing	
	FPC 4 Bottom	Testing	

	FPC 5 Top	Testing	
	FPC 5 Bottom	Testing	
	FPC 6 Top	Testing	
	FPC 6 Bottom	Testing	
	FPM GBUS	OK	23 degrees C / 73 degrees F
	FPM Display	Absent	
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Fourth Blower from top	OK	Spinning at normal speed
	Bottom Blower	OK	Spinning at normal speed
	Middle Blower	OK	Spinning at normal speed
	Top Blower	OK	Spinning at normal speed
	Second Blower from top	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

show chassis environment (T4000 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	33 degrees C / 91 degrees F
	PEM 1	Absent	
	SCG 0	OK	33 degrees C / 91 degrees F
	SCG 1	OK	33 degrees C / 91 degrees F
	Routing Engine 0	OK	33 degrees C / 91 degrees F
	Routing Engine 0 CPU	OK	50 degrees C / 122 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	Routing Engine 1 CPU	OK	46 degrees C / 114 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	33 degrees C / 91 degrees F
	SIB 0	OK	42 degrees C / 107 degrees F
	SIB 1	OK	42 degrees C / 107 degrees F
	SIB 2	OK	42 degrees C / 107 degrees F
	SIB 3	OK	43 degrees C / 109 degrees F
	SIB 4	OK	45 degrees C / 113 degrees F
	FPC 0 Fan Intake	OK	34 degrees C / 93 degrees F
	FPC 0 Fan Exhaust	OK	48 degrees C / 118 degrees F
	FPC 0 PMB	OK	47 degrees C / 116 degrees F
	FPC 0 LMB0	OK	50 degrees C / 122 degrees F
	FPC 0 LMB1	OK	41 degrees C / 105 degrees F
	FPC 0 LMB2	OK	35 degrees C / 95 degrees F
	FPC 0 PFE1 LU2	OK	46 degrees C / 114 degrees F
	FPC 0 PFE1 LU0	OK	41 degrees C / 105 degrees F
	FPC 0 PFE0 LU0	OK	57 degrees C / 134 degrees F
	FPC 0 XF1	OK	46 degrees C / 114 degrees F
	FPC 0 XF0	OK	52 degrees C / 125 degrees F
	FPC 0 XM1	OK	41 degrees C / 105 degrees F
	FPC 0 XM0	OK	50 degrees C / 122 degrees F
	FPC 0 PFE0 LU1	OK	56 degrees C / 132 degrees F

	FPC 0 PFE0 LU2	OK	45 degrees C / 113 degrees F
	FPC 0 PFE1 LU1	OK	37 degrees C / 98 degrees F
	FPC 3 Fan Intake	OK	36 degrees C / 96 degrees F
	FPC 3 Fan Exhaust	OK	51 degrees C / 123 degrees F
	FPC 3 PMB	OK	43 degrees C / 109 degrees F
	FPC 3 LMB0	OK	57 degrees C / 134 degrees F
	FPC 3 LMB1	OK	54 degrees C / 129 degrees F
	FPC 3 LMB2	OK	38 degrees C / 100 degrees F
	FPC 3 PFE1 LU2	OK	63 degrees C / 145 degrees F
	FPC 3 PFE1 LU0	OK	45 degrees C / 113 degrees F
	FPC 3 PFE0 LU0	OK	69 degrees C / 156 degrees F
	FPC 3 XF1	OK	62 degrees C / 143 degrees F
	FPC 3 XF0	OK	63 degrees C / 145 degrees F
	FPC 3 XM1	OK	43 degrees C / 109 degrees F
	FPC 3 XM0	OK	67 degrees C / 152 degrees F
	FPC 3 PFE0 LU1	OK	63 degrees C / 145 degrees F
	FPC 3 PFE0 LU2	OK	66 degrees C / 150 degrees F
	FPC 3 PFE1 LU1	OK	41 degrees C / 105 degrees F
	FPC 5 Top	OK	39 degrees C / 102 degrees F
	FPC 5 Bottom	OK	38 degrees C / 100 degrees F
	FPC 6 Fan Intake	OK	33 degrees C / 91 degrees F
	FPC 6 Fan Exhaust	OK	49 degrees C / 120 degrees F
	FPC 6 PMB	OK	40 degrees C / 104 degrees F
	FPC 6 LMB0	OK	60 degrees C / 140 degrees F
	FPC 6 LMB1	OK	58 degrees C / 136 degrees F
	FPC 6 LMB2	OK	40 degrees C / 104 degrees F
	FPC 6 PFE1 LU2	OK	69 degrees C / 156 degrees F
	FPC 6 PFE1 LU0	OK	45 degrees C / 113 degrees F
	FPC 6 PFE0 LU0	OK	71 degrees C / 159 degrees F
	FPC 6 XF1	OK	58 degrees C / 136 degrees F
	FPC 6 XF0	OK	65 degrees C / 149 degrees F
	FPC 6 XM1	OK	39 degrees C / 102 degrees F
	FPC 6 XM0	OK	66 degrees C / 150 degrees F
	FPC 6 PFE0 LU1	OK	69 degrees C / 156 degrees F
	FPC 6 PFE0 LU2	OK	69 degrees C / 156 degrees F
	FPC 6 PFE1 LU1	OK	42 degrees C / 107 degrees F
	FPM GBUS	OK	24 degrees C / 75 degrees F
	FPM Display	OK	27 degrees C / 80 degrees F
Fans	Top Left Front fan	OK	Spinning at high speed
	Top Left Middle fan	OK	Spinning at high speed
	Top Left Rear fan	OK	Spinning at high speed
	Top Right Front fan	OK	Spinning at high speed
	Top Right Middle fan	OK	Spinning at high speed
	Top Right Rear fan	OK	Spinning at high speed
	Bottom Left Front fan	OK	Spinning at high speed
	Bottom Left Middle fan	OK	Spinning at high speed
	Bottom Left Rear fan	OK	Spinning at high speed
	Bottom Right Front fan	OK	Spinning at high speed
	Bottom Right Middle fan	OK	Spinning at high speed
	Bottom Right Rear fan	OK	Spinning at high speed
	Rear Tray Top fan	OK	Spinning at high speed
	Rear Tray Second fan	OK	Spinning at high speed
	Rear Tray Third fan	OK	Spinning at high speed
	Rear Tray Fourth fan	OK	Spinning at high speed
Misc	Rear Tray Fifth fan	OK	Spinning at high speed
	Rear Tray Sixth fan	OK	Spinning at high speed
	Rear Tray Seventh fan	OK	Spinning at high speed
	Rear Tray Bottom fan	OK	Spinning at high speed
	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

show chassis environment (TX Matrix Router)

```
user@host> show chassis environment
scc-re0:
```

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	OK	29 degrees C / 84 degrees F
	Routing Engine 0	OK	34 degrees C / 93 degrees F
	Routing Engine 1	OK	34 degrees C / 93 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	32 degrees C / 89 degrees F
	SIB 0	OK	44 degrees C / 111 degrees F
	SIB 0 (B)	OK	44 degrees C / 111 degrees F
	FPM GBUS	OK	27 degrees C / 80 degrees F
	FPM Display	OK	32 degrees C / 89 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP 0	OK	
	CIP 1	OK	
	SPMB 0	OK	
	SPMB 1	OK	

```
1cc0-re0:
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	Absent	
	SCG 0	OK	35 degrees C / 95 degrees F
	SCG 1	Absent	
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	36 degrees C / 96 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	32 degrees C / 89 degrees F
	SIB 0	OK	40 degrees C / 104 degrees F
	SIB 0 (B)	OK	51 degrees C / 123 degrees F
	FPC 0 Top	OK	45 degrees C / 113 degrees F
	FPC 0 Bottom	OK	31 degrees C / 87 degrees F
	FPC 1 Top	OK	34 degrees C / 93 degrees F
	FPC 1 Bottom	OK	31 degrees C / 87 degrees F
	FPM GBUS	OK	30 degrees C / 86 degrees F
	FPM Display	OK	34 degrees C / 93 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed

Top Left Middle fan	OK	Spinning at normal speed
Top Left Rear fan	OK	Spinning at normal speed
Top Right Front fan	OK	Spinning at normal speed
Top Right Middle fan	OK	Spinning at normal speed
Top Right Rear fan	OK	Spinning at normal speed
Bottom Left Front fan	OK	Spinning at normal speed
Bottom Left Middle fan	OK	Spinning at normal speed
Bottom Left Rear fan	OK	Spinning at normal speed
Bottom Right Front fan	OK	Spinning at normal speed
Bottom Right Middle fan	OK	Spinning at normal speed
Bottom Right Rear fan	OK	Spinning at normal speed
Rear Tray Top fan	OK	Spinning at normal speed
Rear Tray Second fan	OK	Spinning at normal speed
Rear Tray Third fan	OK	Spinning at normal speed
Rear Tray Fourth fan	OK	Spinning at normal speed
Rear Tray Fifth fan	OK	Spinning at normal speed
Rear Tray Sixth fan	OK	Spinning at normal speed
Rear Tray Seventh fan	OK	Spinning at normal speed
Rear Tray Bottom fan	OK	Spinning at normal speed
Misc CIP	OK	
SPMB 0	OK	
SPMB 1	OK	

lcc2-re0:

Class	Item	Status	Measurement
Temp	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	Absent	
	SCG 0	OK	32 degrees C / 89 degrees F
	SCG 1	Absent	
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	CB 0	OK	30 degrees C / 86 degrees F
	SIB 0	OK	38 degrees C / 100 degrees F
	SIB 0 (B)	OK	49 degrees C / 120 degrees F
	FPC 0 Top	OK	45 degrees C / 113 degrees F
	FPC 0 Bottom	OK	33 degrees C / 91 degrees F
	FPC 1 Top	OK	37 degrees C / 98 degrees F
	FPC 1 Bottom	OK	33 degrees C / 91 degrees F
	FPM GBUS	OK	30 degrees C / 86 degrees F
	FPM Display	OK	34 degrees C / 93 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
...			

show chassis environment (T1600 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	27 degrees C / 80 degrees F
	PEM 1	Absent	
	SCG 0	OK	31 degrees C / 87 degrees F
	SCG 1	OK	35 degrees C / 95 degrees F
	Routing Engine 0	OK	30 degrees C / 86 degrees F
	Routing Engine 1	OK	30 degrees C / 86 degrees F
	CB 0	OK	31 degrees C / 87 degrees F
	CB 1	OK	31 degrees C / 87 degrees F
	SIB 0	OK	41 degrees C / 105 degrees F
	SIB 0 (B)	OK	34 degrees C / 93 degrees F
	SIB 1	OK	0 degrees C / 32 degrees F
	SIB 1 (B)	OK	0 degrees C / 32 degrees F

	SIB 2	OK	0 degrees C / 32 degrees F
	SIB 2 (B)	OK	0 degrees C / 32 degrees F
	SIB 3	OK	0 degrees C / 32 degrees F
	SIB 3 (B)	OK	0 degrees C / 32 degrees F
	SIB 4	OK	0 degrees C / 32 degrees F
	SIB 4 (B)	OK	0 degrees C / 32 degrees F
	FPC 0 Top	OK	49 degrees C / 120 degrees F
	FPC 0 Bottom	OK	50 degrees C / 122 degrees F
	FPC 1 Top	OK	48 degrees C / 118 degrees F
	FPC 1 Bottom	OK	49 degrees C / 120 degrees F
	FPM GBUS	OK	27 degrees C / 80 degrees F
	FPM Display	OK	30 degrees C / 86 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

show chassis environment (TX Matrix Plus Router)

```
user@host> show chassis environment
sfc0-re0:
```

Class Item		Status	Measurement
Temp	PEM 0	OK	28 degrees C / 82 degrees F
	PEM 1	Absent	
	Routing Engine 0	OK	27 degrees C / 80 degrees F
	Routing Engine 1	OK	29 degrees C / 84 degrees F
	CB 0 Intake	OK	26 degrees C / 78 degrees F
	CB 0 Exhaust A	OK	25 degrees C / 77 degrees F
	CB 0 Exhaust B	OK	25 degrees C / 77 degrees F
	CB 1 Intake	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust A	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust B	OK	26 degrees C / 78 degrees F
	SIB F13 0	OK	47 degrees C / 116 degrees F
	SIB F13 0 (B)	OK	48 degrees C / 118 degrees F
	SIB F13 1	OK	38 degrees C / 100 degrees F
	SIB F13 1 (B)	OK	37 degrees C / 98 degrees F
	SIB F2S 0/0	OK	27 degrees C / 80 degrees F
	SIB F2S 0/2	OK	28 degrees C / 82 degrees F
	SIB F2S 0/4	OK	27 degrees C / 80 degrees F
	SIB F2S 0/6	OK	28 degrees C / 82 degrees F
	SIB F2S 1/0	OK	26 degrees C / 78 degrees F

	SIB F2S 1/2	OK	26 degrees C / 78 degrees F
	SIB F2S 1/4	OK	26 degrees C / 78 degrees F
	SIB F2S 1/6	OK	26 degrees C / 78 degrees F
	SIB F2S 2/0	OK	25 degrees C / 77 degrees F
	SIB F2S 2/2	OK	25 degrees C / 77 degrees F
	SIB F2S 2/4	OK	23 degrees C / 73 degrees F
	CIP 0 Intake	OK	23 degrees C / 73 degrees F
	CIP 0 Exhaust A	OK	24 degrees C / 75 degrees F
	CIP 0 Exhaust B	OK	24 degrees C / 75 degrees F
	CIP 1 Intake	OK	24 degrees C / 75 degrees F
	CIP 1 Exhaust A	OK	25 degrees C / 77 degrees F
	CIP 1 Exhaust B	OK	25 degrees C / 77 degrees F
Fans	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 4	OK	Spinning at normal speed
	Fan Tray 1 Fan 5	OK	Spinning at normal speed
	Fan Tray 1 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 4	OK	Spinning at normal speed
	Fan Tray 2 Fan 5	OK	Spinning at normal speed
	Fan Tray 2 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 7	OK	Spinning at normal speed
	Fan Tray 2 Fan 8	OK	Spinning at normal speed
	Fan Tray 2 Fan 9	OK	Spinning at normal speed
	Fan Tray 3 Fan 1	OK	Spinning at normal speed
	Fan Tray 3 Fan 2	OK	Spinning at normal speed
	Fan Tray 3 Fan 3	OK	Spinning at normal speed
	Fan Tray 3 Fan 4	OK	Spinning at normal speed
	Fan Tray 3 Fan 5	OK	Spinning at normal speed
	Fan Tray 3 Fan 6	OK	Spinning at normal speed
	Fan Tray 3 Fan 7	OK	Spinning at normal speed
	Fan Tray 3 Fan 8	OK	Spinning at normal speed
	Fan Tray 3 Fan 9	OK	Spinning at normal speed
	Fan Tray 4 Fan 1	OK	Spinning at normal speed
	Fan Tray 4 Fan 2	OK	Spinning at normal speed
	Fan Tray 4 Fan 3	OK	Spinning at normal speed
	Fan Tray 4 Fan 4	OK	Spinning at normal speed
	Fan Tray 4 Fan 5	OK	Spinning at normal speed
	Fan Tray 4 Fan 6	OK	Spinning at normal speed
	Fan Tray 4 Fan 7	OK	Spinning at normal speed
	Fan Tray 4 Fan 8	OK	Spinning at normal speed
	Fan Tray 4 Fan 9	OK	Spinning at normal speed
	Fan Tray 5 Fan 1	OK	Spinning at normal speed
	Fan Tray 5 Fan 2	OK	Spinning at normal speed
	Fan Tray 5 Fan 3	OK	Spinning at normal speed
	Fan Tray 5 Fan 4	OK	Spinning at normal speed
	Fan Tray 5 Fan 5	OK	Spinning at normal speed
	Fan Tray 5 Fan 6	OK	Spinning at normal speed
	Fan Tray 5 Fan 7	OK	Spinning at normal speed
	Fan Tray 5 Fan 8	OK	Spinning at normal speed
	Fan Tray 5 Fan 9	OK	Spinning at normal speed
Misc	SPMB 0	OK	


```

SPMB 1                                OK

lcc0-re0:
-----
Class Item                               Status      Measurement
Temp PEM 0                               OK          27 degrees C / 80 degrees F
      PEM 1                               Absent
      SCG 0                               OK          31 degrees C / 87 degrees F
      SCG 1                               OK          35 degrees C / 95 degrees F
      Routing Engine 0                     OK          30 degrees C / 86 degrees F
      Routing Engine 1                     OK          30 degrees C / 86 degrees F
      CB 0                                 OK          31 degrees C / 87 degrees F
      CB 1                                 OK          31 degrees C / 87 degrees F
      SIB 0                                 OK          41 degrees C / 105 degrees F
      SIB 0 (B)                           OK          34 degrees C / 93 degrees F
      SIB 1                                 OK          0 degrees C / 32 degrees F
      SIB 1 (B)                           OK          0 degrees C / 32 degrees F
      SIB 2                                 OK          0 degrees C / 32 degrees F
      SIB 2 (B)                           OK          0 degrees C / 32 degrees F
      SIB 3                                 OK          0 degrees C / 32 degrees F
      SIB 3 (B)                           OK          0 degrees C / 32 degrees F
      SIB 4                                 OK          0 degrees C / 32 degrees F
      SIB 4 (B)                           OK          0 degrees C / 32 degrees F
      FPC 0 Top                            OK          49 degrees C / 120 degrees F
      FPC 0 Bottom                        OK          50 degrees C / 122 degrees F
      FPC 1 Top                            OK          48 degrees C / 118 degrees F
      FPC 1 Bottom                        OK          49 degrees C / 120 degrees F
      FPM GBUS                            OK          27 degrees C / 80 degrees F
      FPM Display                         OK          30 degrees C / 86 degrees F
Fans  Top Left Front fan                   OK          Spinning at normal speed
      Top Left Middle fan                  OK          Spinning at normal speed
      Top Left Rear fan                    OK          Spinning at normal speed
      Top Right Front fan                  OK          Spinning at normal speed
      Top Right Middle fan                 OK          Spinning at normal speed
      Top Right Rear fan                   OK          Spinning at normal speed
      Bottom Left Front fan                OK          Spinning at normal speed
      Bottom Left Middle fan               OK          Spinning at normal speed
      Bottom Left Rear fan                 OK          Spinning at normal speed
      Bottom Right Front fan               OK          Spinning at normal speed
      Bottom Right Middle fan              OK          Spinning at normal speed
      Bottom Right Rear fan                OK          Spinning at normal speed
      Rear Tray Top fan                    OK          Spinning at normal speed
      Rear Tray Second fan                 OK          Spinning at normal speed
      Rear Tray Third fan                  OK          Spinning at normal speed
      Rear Tray Fourth fan                 OK          Spinning at normal speed
      Rear Tray Fifth fan                  OK          Spinning at normal speed
      Rear Tray Sixth fan                  OK          Spinning at normal speed
      Rear Tray Seventh fan                OK          Spinning at normal speed
      Rear Tray Bottom fan                 OK          Spinning at normal speed
Misc  CIP                                 OK
      SPMB 0                              OK
      SPMB 1                              OK

```

show chassis environment (TX Matrix Plus router with 3D SIBs)

```

user@host> show chassis environment
sfc0-re0:
-----
Class Item                               Status      Measurement
Temp PEM 0                               Check       30 degrees C / 86 degrees F
      PEM 1                               OK          33 degrees C / 91 degrees F

```

	Routing Engine 0	OK	28 degrees C / 82 degrees F
	Routing Engine 0 CPU	OK	42 degrees C / 107 degrees F
	Routing Engine 1	OK	29 degrees C / 84 degrees F
	Routing Engine 1 CPU	OK	44 degrees C / 111 degrees F
	CB 0 Intake	OK	30 degrees C / 86 degrees F
	CB 0 Exhaust A	OK	28 degrees C / 82 degrees F
	CB 0 Exhaust B	OK	30 degrees C / 86 degrees F
	CB 1 Intake	OK	31 degrees C / 87 degrees F
	CB 1 Exhaust A	OK	27 degrees C / 80 degrees F
	CB 1 Exhaust B	OK	31 degrees C / 87 degrees F
	SIB F13 0 Board	OK	44 degrees C / 111 degrees F
	SIB F13 0 XF Junction	OK	62 degrees C / 143 degrees F
	SIB F13 3 Board	OK	45 degrees C / 113 degrees F
	SIB F13 3 XF Junction	OK	60 degrees C / 140 degrees F
	SIB F13 6 Board	OK	47 degrees C / 116 degrees F
	SIB F13 6 XF Junction	OK	62 degrees C / 143 degrees F
	SIB F2S 0/0 Board	OK	32 degrees C / 89 degrees F
	SIB F2S 0/0 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 0/2 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 0/2 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 0/4 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 0/4 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 0/6 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 0/6 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 1/0 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 1/0 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 1/2 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 1/2 XF Junction	OK	39 degrees C / 102 degrees F
	SIB F2S 1/4 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 1/4 XF Junction	OK	35 degrees C / 95 degrees F
	SIB F2S 1/6 Board	OK	30 degrees C / 86 degrees F
	SIB F2S 1/6 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 2/0 Board	OK	30 degrees C / 86 degrees F
	SIB F2S 2/0 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 2/2 Board	OK	28 degrees C / 82 degrees F
	SIB F2S 2/2 XF Junction	OK	39 degrees C / 102 degrees F
	SIB F2S 2/4 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 2/4 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 2/6 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 2/6 XF Junction	OK	41 degrees C / 105 degrees F
	CIP 0 Intake	OK	25 degrees C / 77 degrees F
	CIP 0 Exhaust A	OK	26 degrees C / 78 degrees F
	CIP 0 Exhaust B	OK	26 degrees C / 78 degrees F
	CIP 1 Intake	OK	26 degrees C / 78 degrees F
	CIP 1 Exhaust A	OK	27 degrees C / 80 degrees F
	CIP 1 Exhaust B	OK	27 degrees C / 80 degrees F
Fans	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 4	OK	Spinning at normal speed
	Fan Tray 1 Fan 5	OK	Spinning at normal speed
	Fan Tray 1 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed

Fan Tray 2 Fan 4	OK	Spinning at normal speed
Fan Tray 2 Fan 5	OK	Spinning at normal speed
Fan Tray 2 Fan 6	OK	Spinning at normal speed
Fan Tray 2 Fan 7	OK	Spinning at normal speed
Fan Tray 2 Fan 8	OK	Spinning at normal speed
Fan Tray 2 Fan 9	OK	Spinning at normal speed
Fan Tray 3 Fan 1	OK	Spinning at normal speed
Fan Tray 3 Fan 2	OK	Spinning at normal speed
Fan Tray 3 Fan 3	OK	Spinning at normal speed
Fan Tray 3 Fan 4	OK	Spinning at normal speed
Fan Tray 3 Fan 5	OK	Spinning at normal speed
Fan Tray 3 Fan 6	OK	Spinning at normal speed
Fan Tray 3 Fan 7	OK	Spinning at normal speed
Fan Tray 3 Fan 8	OK	Spinning at normal speed
Fan Tray 3 Fan 9	OK	Spinning at normal speed
Fan Tray 4 Fan 1	OK	Spinning at normal speed
Fan Tray 4 Fan 2	OK	Spinning at normal speed
Fan Tray 4 Fan 3	OK	Spinning at normal speed
Fan Tray 4 Fan 4	OK	Spinning at normal speed
Fan Tray 4 Fan 5	OK	Spinning at normal speed
Fan Tray 4 Fan 6	OK	Spinning at normal speed
Fan Tray 4 Fan 7	OK	Spinning at normal speed
Fan Tray 4 Fan 8	OK	Spinning at normal speed
Fan Tray 4 Fan 9	OK	Spinning at normal speed
Fan Tray 5 Fan 1	OK	Spinning at normal speed
Fan Tray 5 Fan 2	OK	Spinning at normal speed
Fan Tray 5 Fan 3	OK	Spinning at normal speed
Fan Tray 5 Fan 4	OK	Spinning at normal speed
Fan Tray 5 Fan 5	OK	Spinning at normal speed
Fan Tray 5 Fan 6	OK	Spinning at normal speed
Fan Tray 5 Fan 7	OK	Spinning at normal speed
Fan Tray 5 Fan 8	OK	Spinning at normal speed
Fan Tray 5 Fan 9	Check	
Misc SPMB 0	OK	
SPMB 1	OK	

1cc0-re0:

Class	Item	Status	Measurement
Temp	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	Check	29 degrees C / 84 degrees F
	SCG 0	OK	32 degrees C / 89 degrees F
	SCG 1	OK	33 degrees C / 91 degrees F
	Routing Engine 0	OK	32 degrees C / 89 degrees F
	Routing Engine 0 CPU	OK	51 degrees C / 123 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	Routing Engine 1 CPU	OK	49 degrees C / 120 degrees F
	CB 0	OK	34 degrees C / 93 degrees F
	CB 1	OK	34 degrees C / 93 degrees F
	SIB 0	OK	39 degrees C / 102 degrees F
	SIB 0 (B)	Absent	
	SIB 1	OK	39 degrees C / 102 degrees F
	SIB 1 (B)	Absent	
	SIB 2	OK	39 degrees C / 102 degrees F
	SIB 2 (B)	Absent	
	FPC 4 Top	OK	43 degrees C / 109 degrees F
	FPC 4 Bottom	OK	43 degrees C / 109 degrees F
	FPC 7 Fan Intake	OK	35 degrees C / 95 degrees F
	FPC 7 Fan Exhaust	OK	50 degrees C / 122 degrees F
	FPC 7 PMB	OK	50 degrees C / 122 degrees F
	FPC 7 LMB0	OK	55 degrees C / 131 degrees F

	FPC 7 LMB1	OK	49 degrees C / 120 degrees F
	FPC 7 LMB2	OK	39 degrees C / 102 degrees F
	FPC 7 PFE1 LU2	OK	55 degrees C / 131 degrees F
	FPC 7 PFE1 LU0	OK	45 degrees C / 113 degrees F
	FPC 7 PFE0 LU0	OK	62 degrees C / 143 degrees F
	FPC 7 XF1	OK	52 degrees C / 125 degrees F
	FPC 7 XF0	OK	61 degrees C / 141 degrees F
	FPC 7 XM1	OK	39 degrees C / 102 degrees F
	FPC 7 XM0	OK	56 degrees C / 132 degrees F
	FPC 7 PFE0 LU1	OK	60 degrees C / 140 degrees F
	FPC 7 PFE0 LU2	OK	55 degrees C / 131 degrees F
	FPC 7 PFE1 LU1	OK	41 degrees C / 105 degrees F
	FPM GBUS	OK	24 degrees C / 75 degrees F
	FPM Display	OK	28 degrees C / 82 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray fan 1 (Top)	OK	Spinning at normal speed
	Rear Tray fan 2	OK	Spinning at normal speed
	Rear Tray fan 3	OK	Spinning at normal speed
	Rear Tray fan 4	OK	Spinning at normal speed
	Rear Tray fan 5	OK	Spinning at normal speed
	Rear Tray fan 6	OK	Spinning at normal speed
	Rear Tray fan 7	OK	Spinning at normal speed
	Rear Tray fan 8	OK	Spinning at normal speed
	Rear Tray fan 9	OK	Spinning at normal speed
	Rear Tray fan 10	OK	Spinning at normal speed
	Rear Tray fan 11	OK	Spinning at normal speed
	Rear Tray fan 12	OK	Spinning at normal speed
	Rear Tray fan 13	OK	Spinning at normal speed
	Rear Tray fan 14	OK	Spinning at normal speed
	Rear Tray fan 15	OK	Spinning at normal speed
	Rear Tray fan 16 (Bottom)	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

show chassis environment (EX4200 Standalone Switch)

user@switch> show chassis environment			
Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	OK	
	FPC 0 Power Supply 1	Absent	
Temp	FPC 0 CPU	OK	41 degrees C / 105 degrees F
	FPC 0 EX-PFE1	OK	42 degrees C / 107 degrees F
	FPC 0 EX-PFE2	OK	46 degrees C / 114 degrees F
	FPC 0 GEPHY Front Left	OK	25 degrees C / 77 degrees F
	FPC 0 GEPHY Front Right	OK	27 degrees C / 80 degrees F
	FPC 0 Uplink Conn	OK	29 degrees C / 84 degrees F
Fans	FPC 0 Fan 1	OK	Spinning at normal speed
	FPC 0 Fan 2	OK	Spinning at normal speed
	FPC 0 Fan 3	OK	Spinning at normal speed

show chassis environment (EX8216 Switch)

```

user@switch> show chassis environment
Class Item                               Status      Measurement
Power PSU 0                             OK
      PSU 1                             OK
      PSU 2                             OK
      PSU 3                             Check
      PSU 4                             Absent
      PSU 5                             Absent
Temp  CB 0 Intake                         OK          23 degrees C / 73 degrees F
      CB 0 Exhaust                       OK          26 degrees C / 78 degrees F
      CB 1 Intake                         OK          22 degrees C / 71 degrees F
      CB 1 Exhaust                       OK          25 degrees C / 77 degrees F
      FPC 4 Intake                       OK          49 degrees C / 120 degrees F
      FPC 4 Exhaust                     OK          59 degrees C / 138 degrees F
      SIB 5 Intake                       OK          25 degrees C / 77 degrees F
      SIB 5 Exhaust                     OK          35 degrees C / 95 degrees F
      SIB 6 Intake                       OK          25 degrees C / 77 degrees F
      SIB 6 Exhaust                     OK          38 degrees C / 100 degrees F
Fans  Top Fan 1                         OK          Spinning at normal speed
      Top Fan 2                         OK          Spinning at normal speed
      Top Fan 3                         OK          Spinning at normal speed
      Top Fan 4                         OK          Spinning at normal speed
      Top Fan 5                         OK          Spinning at normal speed
      Top Fan 6                         OK          Spinning at normal speed
      Top Fan 7                         OK          Spinning at normal speed
      Top Fan 8                         OK          Spinning at normal speed
      Top Fan 9                         OK          Spinning at normal speed
      Bottom Fan 1                     OK          Spinning at normal speed
      Bottom Fan 2                     OK          Spinning at normal speed
      Bottom Fan 3                     OK          Spinning at normal speed
      Bottom Fan 4                     OK          Spinning at normal speed
      Bottom Fan 5                     OK          Spinning at normal speed
      Bottom Fan 6                     OK          Spinning at normal speed
      Bottom Fan 7                     OK          Spinning at normal speed
      Bottom Fan 8                     OK          Spinning at normal speed
      Bottom Fan 9                     OK          Spinning at normal speed

```

show chassis environment (EX9200 Switch)

```

user@switch> show chassis environment
Class Item                               Status      Measurement
Temp PEM 0                             Check
      PEM 1                             OK          40 degrees C / 104 degrees F
      PEM 2                             OK          40 degrees C / 104 degrees F
      PEM 3                             Absent
      Routing Engine 0                 OK          35 degrees C / 95 degrees F
      Routing Engine 0 CPU              OK          33 degrees C / 91 degrees F
      Routing Engine 1                 OK          38 degrees C / 100 degrees F
      Routing Engine 1 CPU              OK          33 degrees C / 91 degrees F
      CB 0 Intake                       OK          35 degrees C / 95 degrees F
      CB 0 Exhaust A                    OK          33 degrees C / 91 degrees F
      CB 0 Exhaust B                    OK          40 degrees C / 104 degrees F
      CB 0 ACBC                         OK          39 degrees C / 102 degrees F
      CB 0 XF A                         OK          49 degrees C / 120 degrees F
      CB 0 XF B                         OK          46 degrees C / 114 degrees F
      CB 1 Intake                       OK          37 degrees C / 98 degrees F
      CB 1 Exhaust A                    OK          32 degrees C / 89 degrees F
      CB 1 Exhaust B                    OK          39 degrees C / 102 degrees F
      CB 1 ACBC                         OK          41 degrees C / 105 degrees F

```

CB 1 XF A	OK	49 degrees C / 120 degrees F
CB 1 XF B	OK	49 degrees C / 120 degrees F
FPC 2 Intake	OK	37 degrees C / 98 degrees F
FPC 2 Exhaust A	OK	40 degrees C / 104 degrees F
FPC 2 Exhaust B	OK	34 degrees C / 93 degrees F
FPC 2 LU 0 TCAM TSen	OK	44 degrees C / 111 degrees F
FPC 2 LU 0 TCAM Chip	OK	48 degrees C / 118 degrees F
FPC 2 LU 0 TSen	OK	44 degrees C / 111 degrees F
FPC 2 LU 0 Chip	OK	60 degrees C / 140 degrees F
FPC 2 MQ 0 TSen	OK	44 degrees C / 111 degrees F
FPC 2 MQ 0 Chip	OK	51 degrees C / 123 degrees F
FPC 3 Intake	OK	39 degrees C / 102 degrees F
FPC 3 Exhaust A	OK	51 degrees C / 123 degrees F

[...Output truncated...]

Fans Top Rear Fan	OK	Spinning at intermediate-speed
Bottom Rear Fan	OK	Spinning at intermediate-speed
Top Middle Fan	OK	Spinning at intermediate-speed
Bottom Middle Fan	OK	Spinning at intermediate-speed
Top Front Fan	OK	Spinning at intermediate-speed
Bottom Front Fan	OK	Spinning at intermediate-speed

show chassis environment (QFX Series and OCX Series)

user@switch> show chassis environment			
Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	OK	
	FPC 0 Power Supply 1	OK	
Temp	FPC 0 Sensor TopLeft I	OK	26 degrees C / 78 degrees F
	FPC 0 Sensor TopRight I	OK	24 degrees C / 75 degrees F
	FPC 0 Sensor TopLeft E	OK	30 degrees C / 86 degrees F
	FPC 0 Sensor TopRight E	OK	30 degrees C / 86 degrees F
	FPC 0 Sensor TopMiddle I	OK	30 degrees C / 86 degrees F
	FPC 0 Sensor TopMiddle E	OK	38 degrees C / 100 degrees F
	FPC 0 Sensor Bottom I	OK	34 degrees C / 93 degrees F
	FPC 0 Sensor Bottom E	OK	38 degrees C / 100 degrees F
	FPC 0 Sensor Die Temp	OK	38 degrees C / 100 degrees F
	FPC 0 Sensor Mgmt Brd I	OK	24 degrees C / 75 degrees F
Fans	FPC 0 Sensor Switch I	OK	28 degrees C / 82 degrees F
	FPC 0 Fan 1 (left)	Failed	
	FPC 0 Fan 2 (right)	OK	Spinning at normal speed
	FPC 0 Fan 3 (middle)	OK	Spinning at normal speed

show chassis environment interconnect-device (QFabric System)

user@switch> show chassis environment interconnect-device IC-A0004			
Class	Item	Status	Measurement
CB 0	CB 0		
	CB 0 L Intake	OK	30 degrees C / 86 degrees F
	CB 0 R Intake	OK	31 degrees C / 87 degrees F
	CB 0 L Exhaust	OK	32 degrees C / 89 degrees F
	CB 0 R Exhaust	OK	33 degrees C / 91 degrees F
Routing Engine 0	Routing Engine 0 CPU temp	OK	51 degrees C / 123 degrees F
	CB 1		
CB 1	CB 1 L Intake	OK	27 degrees C / 80 degrees F
	CB 1 R Intake	OK	29 degrees C / 84 degrees F
	CB 1 L Exhaust	OK	31 degrees C / 87 degrees F
	CB 1 R Exhaust	OK	32 degrees C / 89 degrees F
	Routing Engine 1 CPU temp	OK	40 degrees C / 104 degrees F
FC 0 FPC 0			

FPC 0 L Intake	OK	25 degrees C / 77 degrees F
FPC 0 R Intake	OK	28 degrees C / 82 degrees F
FPC 0 L Exhaust	OK	28 degrees C / 82 degrees F
FPC 0 R Exhaust	OK	29 degrees C / 84 degrees F
FC 7 FPC 7		
FPC 7 L Intake	OK	25 degrees C / 77 degrees F
FPC 7 R Intake	OK	26 degrees C / 78 degrees F
FPC 7 L Exhaust	OK	28 degrees C / 82 degrees F
FPC 7 R Exhaust	OK	29 degrees C / 84 degrees F
RC 0 FPC 8		
FPC 8 L Intake	OK	25 degrees C / 77 degrees F
FPC 8 R Intake	OK	26 degrees C / 78 degrees F
FPC 8 L Exhaust	OK	32 degrees C / 89 degrees F
FPC 8 R Exhaust	OK	30 degrees C / 86 degrees F
RC 7 FPC 15		
FPC 15 L Intake	OK	24 degrees C / 75 degrees F
FPC 15 R Intake	OK	25 degrees C / 77 degrees F
FPC 15 L Exhaust	OK	33 degrees C / 91 degrees F
FPC 15 R Exhaust	OK	31 degrees C / 87 degrees F
Fans TFT 0 Fan 0	OK	Spinning at normal speed
Fans TFT 0 Fan 1	OK	Spinning at normal speed
Fans TFT 0 Fan 2	OK	Spinning at normal speed
Fans TFT 0 Fan 3	OK	Spinning at normal speed
Fans TFT 0 Fan 4	OK	Spinning at normal speed
Fans TFT 0 Fan 5	OK	Spinning at normal speed
Fans BFT 1 Fan 0	OK	Spinning at normal speed
Fans BFT 1 Fan 1	OK	Spinning at normal speed
Fans BFT 1 Fan 2	OK	Spinning at normal speed
Fans BFT 1 Fan 3	Check	
Fans BFT 1 Fan 4	OK	Spinning at normal speed
Fans BFT 1 Fan 5	OK	Spinning at normal speed
Fans SFT 0 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans SFT 0 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans SFT 0 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans SFT 0 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans SFT 0 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans SFT 0 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans SFT 0 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans SFT 0 Fan 3 Rotor 1	OK	Spinning at normal speed
Fans SFT 1 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans SFT 1 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans SFT 1 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans SFT 1 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans SFT 1 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans SFT 1 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans SFT 1 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans SFT 1 Fan 3 Rotor 1	OK	Spinning at normal speed
Fans SFT 2 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans SFT 2 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans SFT 2 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans SFT 2 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans SFT 2 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans SFT 2 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans SFT 2 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans SFT 2 Fan 3 Rotor 1	OK	Spinning at normal speed
Fans SFT 3 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans SFT 3 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans SFT 3 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans SFT 3 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans SFT 3 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans SFT 3 Fan 2 Rotor 1	OK	Spinning at normal speed

Fans	SFT 3	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 3	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 4	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 4	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 4	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 4	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 4	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 4	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 4	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 4	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 5	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 5	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 5	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 5	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 5	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 5	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 5	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 5	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 6	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 6	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 6	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 6	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 6	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 6	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 6	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 6	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 7	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 7	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 7	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 7	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 7	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 7	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 7	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 7	Fan 3	Rotor 1	OK	Spinning at normal speed
Power	PEM 0			OK	30 degrees C / 86 degrees F
Power	PEM 1			OK	30 degrees C / 86 degrees F
Power	PEM 2			OK	30 degrees C / 86 degrees F
Power	PEM 3			Absent	
Power	PEM 4			Absent	
Power	PEM 5			Absent	

show chassis environment node-device (QFabric System)

```

user@switch> show chassis environment node-device node1
Class Item                               Status Measurement
Power node1 Power Supply 0              Absent
      node1 Power Supply 1              Absent
Fans  node1 Fan Tray 0                  Testing
      node1 Fan Tray 1                  Testing
      node1 Fan Tray 2                  Testing

```

show chassis environment pem node-device (QFabric System)

```

user@switch> show chassis environment pem node-device node1
FPC 0 PEM 0 status:
State          Check
Airflow        Front to Back
Temperature    OK
AC Input:      OK
DC Output      Voltage(V) Current(A) Power(W) Load(%)
                12         10        120      18

```



```

FPC 0 PEM 1 status:
State                Online
Airflow              Back to Front
Temperature           OK
AC Input:            OK
DC Output             Voltage(V) Current(A) Power(W) Load(%)
                   11          10       110      17

```

show chassis environment (PTX5000 Packet Transport Router)

```

user@host> show chassis environment
Class Item                Status      Measurement
Temp PDU 0                OK
      PDU 0 PSM 0         OK          36 degrees C / 96 degrees F
      PDU 0 PSM 1         OK          38 degrees C / 100 degrees F
      PDU 0 PSM 2         OK          38 degrees C / 100 degrees F
      PDU 0 PSM 3         OK          37 degrees C / 98 degrees F
      PDU 1                Absent
      CCG 0                OK          44 degrees C / 111 degrees F
      CCG 1                OK          44 degrees C / 111 degrees F
      Routing Engine 0     OK          62 degrees C / 143 degrees F
      Routing Engine 0 CPU OK          75 degrees C / 167 degrees F
      Routing Engine 1     OK          51 degrees C / 123 degrees F
      Routing Engine 1 CPU OK          64 degrees C / 147 degrees F
      CB 0 Intake          OK          38 degrees C / 100 degrees F
      CB 0 Exhaust A       OK          46 degrees C / 114 degrees F
      CB 0 Exhaust B       OK          42 degrees C / 107 degrees F
      CB 1 Intake          OK          35 degrees C / 95 degrees F
      CB 1 Exhaust A       OK          39 degrees C / 102 degrees F
      CB 1 Exhaust B       OK          36 degrees C / 96 degrees F
      SIB 0 Exhaust        OK          47 degrees C / 116 degrees F
      SIB 0 Junction       OK          45 degrees C / 113 degrees F
      SIB 1 Exhaust        OK          44 degrees C / 111 degrees F
      SIB 1 Junction       OK          43 degrees C / 109 degrees F
      SIB 2 Exhaust        OK          47 degrees C / 116 degrees F
      SIB 2 Junction       OK          42 degrees C / 107 degrees F
      SIB 3 Exhaust        OK          43 degrees C / 109 degrees F
      SIB 3 Junction       OK          43 degrees C / 109 degrees F
      SIB 4 Exhaust        OK          47 degrees C / 116 degrees F
      SIB 4 Junction       OK          42 degrees C / 107 degrees F
      SIB 5 Exhaust        OK          42 degrees C / 107 degrees F
      SIB 5 Junction       OK          40 degrees C / 104 degrees F
      SIB 6 Exhaust        OK          46 degrees C / 114 degrees F
      SIB 6 Junction       OK          42 degrees C / 107 degrees F
      SIB 7 Exhaust        OK          43 degrees C / 109 degrees F
      SIB 7 Junction       OK          39 degrees C / 102 degrees F
      SIB 8 Exhaust        OK          44 degrees C / 111 degrees F
      SIB 8 Junction       OK          41 degrees C / 105 degrees F
      FPC 0 PMB            OK          35 degrees C / 95 degrees F
      FPC 0 Intake         OK          33 degrees C / 91 degrees F
      FPC 0 Exhaust A      OK          51 degrees C / 123 degrees F
      FPC 0 Exhaust B      OK          43 degrees C / 109 degrees F
      FPC 0 TL0            OK          48 degrees C / 118 degrees F
      FPC 0 TQ0            OK          53 degrees C / 127 degrees F
      FPC 0 TL1            OK          56 degrees C / 132 degrees F
      FPC 0 TQ1            OK          58 degrees C / 136 degrees F
      FPC 0 TL2            OK          55 degrees C / 131 degrees F
      FPC 0 TQ2            OK          56 degrees C / 132 degrees F
      FPC 0 TL3            OK          59 degrees C / 138 degrees F
      FPC 0 TQ3            OK          59 degrees C / 138 degrees F
      FPC 2 PMB            OK          35 degrees C / 95 degrees F

```

FPC 2 Intake	OK	34 degrees C / 93 degrees F
FPC 2 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 2 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 2 TL0	OK	53 degrees C / 127 degrees F
FPC 2 TQ0	OK	53 degrees C / 127 degrees F
FPC 2 TL1	OK	57 degrees C / 134 degrees F
FPC 2 TQ1	OK	58 degrees C / 136 degrees F
FPC 2 TL2	OK	54 degrees C / 129 degrees F
FPC 2 TQ2	OK	59 degrees C / 138 degrees F
FPC 2 TL3	OK	60 degrees C / 140 degrees F
FPC 2 TQ3	OK	64 degrees C / 147 degrees F
PIC 2/0 Ambient	OK	49 degrees C / 120 degrees F
FPC 3 PMB	OK	34 degrees C / 93 degrees F
FPC 3 Intake	OK	35 degrees C / 95 degrees F
FPC 3 Exhaust A	OK	54 degrees C / 129 degrees F
FPC 3 Exhaust B	OK	49 degrees C / 120 degrees F
FPC 3 TL0	OK	49 degrees C / 120 degrees F
FPC 3 TQ0	OK	55 degrees C / 131 degrees F
FPC 3 TL1	OK	56 degrees C / 132 degrees F
FPC 3 TQ1	OK	58 degrees C / 136 degrees F
FPC 3 TL2	OK	56 degrees C / 132 degrees F
FPC 3 TQ2	OK	59 degrees C / 138 degrees F
FPC 3 TL3	OK	62 degrees C / 143 degrees F
FPC 3 TQ3	OK	63 degrees C / 145 degrees F
PIC 3/1	Absent	
FPC 5 PMB	OK	35 degrees C / 95 degrees F
FPC 5 Intake	OK	34 degrees C / 93 degrees F
FPC 5 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 5 Exhaust B	OK	53 degrees C / 127 degrees F
FPC 5 TL0	OK	54 degrees C / 129 degrees F
FPC 5 TQ0	OK	52 degrees C / 125 degrees F
FPC 5 TL1	OK	61 degrees C / 141 degrees F
FPC 5 TQ1	OK	60 degrees C / 140 degrees F
FPC 5 TL2	OK	55 degrees C / 131 degrees F
FPC 5 TQ2	OK	55 degrees C / 131 degrees F
FPC 5 TL3	OK	59 degrees C / 138 degrees F
FPC 5 TQ3	OK	58 degrees C / 136 degrees F
PIC 5/0 Ambient	OK	51 degrees C / 123 degrees F
PIC 5/1 Ambient	OK	34 degrees C / 93 degrees F
PIC 5/1 cfp-5/1/0	OK	34 degrees C / 93 degrees F
PIC 5/1 cfp-5/1/1	OK	36 degrees C / 96 degrees F
FPC 6 PMB	OK	36 degrees C / 96 degrees F
FPC 6 Intake	OK	33 degrees C / 91 degrees F
FPC 6 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 6 Exhaust B	OK	39 degrees C / 102 degrees F
FPC 6 TL0	OK	44 degrees C / 111 degrees F
FPC 6 TQ0	OK	54 degrees C / 129 degrees F
FPC 6 TL1	OK	59 degrees C / 138 degrees F
FPC 6 TQ1	OK	58 degrees C / 136 degrees F
FPC 6 TL2	OK	60 degrees C / 140 degrees F
FPC 6 TQ2	OK	57 degrees C / 134 degrees F
FPC 6 TL3	OK	65 degrees C / 149 degrees F
FPC 6 TQ3	OK	60 degrees C / 140 degrees F
FPC 7 PMB	OK	35 degrees C / 95 degrees F
FPC 7 Intake	OK	33 degrees C / 91 degrees F
FPC 7 Exhaust A	OK	53 degrees C / 127 degrees F
FPC 7 Exhaust B	OK	40 degrees C / 104 degrees F
FPC 7 TL0	OK	46 degrees C / 114 degrees F
FPC 7 TQ0	OK	58 degrees C / 136 degrees F
FPC 7 TL1	OK	53 degrees C / 127 degrees F
FPC 7 TQ1	OK	59 degrees C / 138 degrees F

	FPC 7 TL2	OK	56 degrees C / 132 degrees F
	FPC 7 TQ2	OK	61 degrees C / 141 degrees F
	FPC 7 TL3	OK	63 degrees C / 145 degrees F
	FPC 7 TQ3	OK	63 degrees C / 145 degrees F
	FPM I2CS	OK	37 degrees C / 98 degrees F
Fans	Fan Tray 0 Fan 1	OK	3042 RPM
	Fan Tray 0 Fan 2	OK	3042 RPM
	Fan Tray 0 Fan 3	OK	3000 RPM
	Fan Tray 0 Fan 4	OK	3042 RPM
	Fan Tray 0 Fan 5	OK	3000 RPM
	Fan Tray 0 Fan 6	OK	3042 RPM
	Fan Tray 0 Fan 7	OK	3085 RPM
	Fan Tray 0 Fan 8	OK	3042 RPM
	Fan Tray 0 Fan 9	OK	3042 RPM
	Fan Tray 0 Fan 10	OK	3085 RPM
	Fan Tray 0 Fan 11	OK	3085 RPM
	Fan Tray 0 Fan 12	OK	3128 RPM
	Fan Tray 0 Fan 13	OK	3128 RPM
	Fan Tray 0 Fan 14	OK	3042 RPM
	Fan Tray 1 Fan 1	OK	2299 RPM
	Fan Tray 1 Fan 2	OK	2399 RPM
	Fan Tray 1 Fan 3	OK	2299 RPM
	Fan Tray 1 Fan 4	OK	2266 RPM
	Fan Tray 1 Fan 5	OK	2266 RPM
	Fan Tray 1 Fan 6	OK	2366 RPM
	Fan Tray 2 Fan 1	OK	2199 RPM
	Fan Tray 2 Fan 2	OK	2133 RPM
	Fan Tray 2 Fan 3	OK	2366 RPM
	Fan Tray 2 Fan 4	OK	2233 RPM
	Fan Tray 2 Fan 5	OK	2399 RPM
	Fan Tray 2 Fan 6	OK	2233 RPM
Misc	SPMB 0 Intake	OK	50 degrees C / 122 degrees F
	SPMB 1 Intake	OK	40 degrees C / 104 degrees F

show chassis environment (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```

user@host> show chassis environment
Class Item                               Status      Measurement
Temp  PDU 0                               OK
      PDU 0 PSM 0                       OK          41 degrees C / 105 degrees F
      PDU 0 PSM 1                       Absent
      PDU 0 PSM 2                       OK          43 degrees C / 109 degrees F
      PDU 0 PSM 3                       Absent
      PDU 0 PSM 4                       OK          44 degrees C / 111 degrees F
      PDU 0 PSM 5                       Absent
      PDU 0 PSM 6                       OK          45 degrees C / 113 degrees F
      PDU 0 PSM 7                       Absent
      PDU 1                               OK
      PDU 1 PSM 0                       Absent
      PDU 1 PSM 1                       OK          45 degrees C / 113 degrees F
      PDU 1 PSM 2                       Absent
      PDU 1 PSM 3                       OK          43 degrees C / 109 degrees F
      PDU 1 PSM 4                       Absent
      PDU 1 PSM 5                       OK          46 degrees C / 114 degrees F
      PDU 1 PSM 6                       Absent
      PDU 1 PSM 7                       OK          46 degrees C / 114 degrees F
      CCG 0                             OK          27 degrees C / 80 degrees F
      CCG 1                             OK          29 degrees C / 84 degrees F
...

```

show chassis environment (ACX2000 Universal Access Router)

```

user@host> show chassis environment
Class Item                               Status      Measurement
PCB Left                                OK          44 degrees C / 111 degrees F
SFP+ Xcvr                               OK          50 degrees C / 122 degrees F
FEB                                      OK          70 degrees C / 158 degrees F
PCB Up                                  OK          63 degrees C / 145 degrees F
PCB Mid                                 OK          66 degrees C / 150 degrees F
Telecom Mod                             OK          65 degrees C / 149 degrees F
Routing Engine                           OK          54 degrees C / 129 degrees F
Heater off

```

show chassis environment (ACX4000 Universal Access Router)

On the ACX4000 router, the MIC output of the **show chassis environment** command varies depending on the number of temperature channels present in the installed MIC.

```

user@host> show chassis environment
Class Item                               Status      Measurement
Temp PEM 0                              OK          33 degrees C / 91 degrees F
      PEM 1                              Absent
      PCB Bottom                          OK          30 degrees C / 86 degrees F
      PCB Middle                          OK          34 degrees C / 93 degrees F
      BCM56445                            OK          33 degrees C / 91 degrees F
      SFP+ Xcvr                           OK          32 degrees C / 89 degrees F
      Fan tray inlet                       OK          39 degrees C / 102 degrees F
      Exhaust                             OK          30 degrees C / 86 degrees F
      Routing Engine                       OK          32 degrees C / 89 degrees F
      Heater off
Pic PIC 0/0 Channel 0                     OK          28 degrees C / 82 degrees F
    PIC 0/0 Channel 1                     OK          29 degrees C / 84 degrees F
    PIC 0/0 Channel 2                     OK          0 degrees C / 32 degrees F
    PIC 0/0 Channel 3                     OK          0 degrees C / 32 degrees F
    PIC 0/0 Channel 4                     OK          0 degrees C / 32 degrees F
    PIC 0/0 Channel 5                     OK          0 degrees C / 32 degrees F
    PIC 0/0 Channel 6                     OK          0 degrees C / 32 degrees F
    PIC 0/0 Channel 7                     OK          0 degrees C / 32 degrees F
    PIC 0/0 Channel 8                     OK          0 degrees C / 32 degrees F
    PIC 0/0 Channel 9                     OK          0 degrees C / 32 degrees F
    PIC 1/0 Channel 0                     OK          33 degrees C / 91 degrees F
    PIC 1/0 Channel 1                     OK          31 degrees C / 87 degrees F
    PIC 1/0 Channel 2                     OK          30 degrees C / 86 degrees F
    PIC 1/0 Channel 3                     OK          0 degrees C / 32 degrees F
    PIC 1/0 Channel 4                     OK          0 degrees C / 32 degrees F
    PIC 1/0 Channel 5                     OK          0 degrees C / 32 degrees F
    PIC 1/0 Channel 6                     OK          0 degrees C / 32 degrees F
    PIC 1/0 Channel 7                     OK          0 degrees C / 32 degrees F
    PIC 1/0 Channel 8                     OK          0 degrees C / 32 degrees F
    PIC 1/1 Channel 0                     OK          31 degrees C / 87 degrees F
    PIC 1/1 Channel 1                     OK          29 degrees C / 84 degrees F
    PIC 1/1 Channel 2                     OK          28 degrees C / 82 degrees F
    PIC 1/1 Channel 3                     OK          0 degrees C / 32 degrees F
    PIC 1/1 Channel 4                     OK          0 degrees C / 32 degrees F
    PIC 1/1 Channel 5                     OK          0 degrees C / 32 degrees F
    PIC 1/1 Channel 6                     OK          0 degrees C / 32 degrees F
    PIC 1/1 Channel 7                     OK          0 degrees C / 32 degrees F
    PIC 1/1 Channel 8                     OK          0 degrees C / 32 degrees F

```

Fans	Fan 1	OK	Spinning at normal speed
	Fan 2	OK	Spinning at normal speed

show chassis environment fpc

List of Syntax	Syntax on page 656 Syntax (TX Matrix and TX Matrix Plus Routers) on page 656 Syntax (MX Series Routers) on page 656 Syntax (MX2010 3D Universal Edge Routers) on page 656 Syntax (MX2020 3D Universal Edge Routers) on page 656 Syntax (QFX Series) on page 656 Syntax (OCX Series) on page 656
Syntax	show chassis environment fpc <slot>
Syntax (TX Matrix and TX Matrix Plus Routers)	show chassis environment fpc <lcc number> <slot>
Syntax (MX Series Routers)	show chassis environment fpc <slot> <all-members> <local> <member member-id>
Syntax (MX2010 3D Universal Edge Routers)	show chassis environment fpc <slot>
Syntax (MX2020 3D Universal Edge Routers)	show chassis environment fpc <slot>
Syntax (QFX Series)	show chassis environment fpc <fpc-slot> interconnect-device <i>name</i>
Syntax (OCX Series)	show chassis environment fpc <fpc-slot>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for QFX Series. Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers. Command introduced in Junos OS Release 12.1 for T4000 Core Routers. Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers. Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	(M40e, M120, M160, M320, MX Series, T Series routers, EX Series, QFX Series, and PTX Series routers only) Display environmental information about Flexible PIC Concentrators (FPCs).

Options **none**—Display environmental information about all FPCs. On a TX Matrix router, display environmental information about all FPCs on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about all FPCs on the TX Matrix Plus router and its attached routers.

all-members—(MX Series routers only) (Optional) Display environmental information for the FPCs in all the members of the Virtual Chassis configuration.

interconnect-device *name*—(QFabric systems only) (Optional) Display chassis environmental information for the Interconnect device.

lcc *number*—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display environmental information for the FPCs in the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display environmental information for the FPCs in the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

slot or fpc-slot—(Optional) Display environmental information about an individual FPC:

- (TX Matrix and TX Matrix Plus routers only) On a TX Matrix router, if you specify the number of the T640 router by using only the **lcc *number*** option (the recommended method), replace **slot** with a value from 0 through 7. Similarly, on a TX Matrix Plus router, if you specify the number of the router by using only the **lcc *number*** option (the recommended method), replace **slot** with a value from 0 through 7. Otherwise, replace **slot** with a value from 0 through 31. For example, the following commands have the same result:

```
user@host> show chassis environment fpc 1 lcc 1
user@host> show chassis environment fpc 9
```

- M120 router—Replace **slot** with a value from 0 through 5.
- MX240 router—Replace **slot** with a value from 0 through 2.
- MX480 router—Replace **slot** with a value from 0 through 5.
- MX960 router—Replace **slot** with a value from 0 through 11.
- MX2010 router—Replace **slot** with a value from 0 through 9.

- MX2020 router—Replace **slot** with a value from 0 through 19.
- Other routers—Replace **slot** with a value from 0 through 7.
- EX Series switches:
 - EX3200 switches and EX4200 standalone switches—Replace **slot** with 0.
 - EX4200 switches in a Virtual Chassis configuration—Replace **slot** with a value from 0 through 9 (switch's member ID).
 - EX6210 switches—Replace **slot** with a value from 0 through 3 (line card only), 4 or 5 (line card or Switch Fabric and Routing Engine (SRE) module), or 6 through 9 (line card only).
 - EX8208 switches—Replace **slot** with a value from 0 through 7 (line card).
 - EX8216 switches—Replace **slot** with a value from 0 through 15 (line card).
- QFX3500 switches —Replace **fpc-slot** with 0 through 15.
- PTX5000 Packet Transport Router—Replace **fpc-slot** with 0 through 7.

Required Privilege Level view

- Related Documentation**
- [request chassis fpc on page 385](#)
 - [show chassis fpc on page 720](#)
 - *show chassis fpc-feb-connectivity*
 - *Configuring the Junos OS to Resynchronize FPC Sequence Numbers with Active FPCs when an FPC Comes Online*
 - *MX960 Flexible PIC Concentrator Description*

- List of Sample Output**
- [show chassis environment fpc \(M120 Router\) on page 660](#)
 - [show chassis environment fpc \(M160 Router\) on page 661](#)
 - [show chassis environment fpc \(M320 Router\) on page 661](#)
 - [show chassis environment fpc \(MX2020 Router\) on page 662](#)
 - [show chassis environment fpc \(MX2010 Router\) on page 665](#)
 - [show chassis environment fpc \(MX240 Router\) on page 667](#)
 - [show chassis environment fpc \(MX480 Router\) on page 668](#)
 - [show chassis environment fpc \(MX960 Router\) on page 669](#)
 - [show chassis environment fpc \(MX480 Router with 100-Gigabit Ethernet CFP\) on page 670](#)
 - [show chassis environment fpc \(MX240, MX480, MX960 with Application Services Modular Line Card\) on page 671](#)
 - [show chassis environment fpc \(T320, T640, and T1600 Routers\) on page 672](#)
 - [show chassis environment fpc \(T4000 Router\) on page 672](#)
 - [show chassis environment fpc lcc \(TX Matrix Router\) on page 677](#)
 - [show chassis environment fpc lcc \(TX Matrix Plus Router\) on page 678](#)
 - [show chassis environment fpc \(QFX Series and OCX Series\) on page 679](#)
 - [show chassis environment fpc interconnect-device \(QFabric Systems\) on page 679](#)

[show chassis environment fpc 0 \(PTX5000 Packet Transport Router\) on page 679](#)
[show chassis environment fpc 07 \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 680](#)
[show chassis environment FPC 1 \(MX Routers with Media Services Blade \[MSB\]\) on page 681](#)

Output Fields [Table 36 on page 659](#) lists the output fields for the **show chassis environment fpc** command. Output fields are listed in the approximate order in which they appear.

Table 36: show chassis environment fpc Output Fields

Field Name	Field Description
State	<p>Status of the FPC:</p> <ul style="list-style-type: none"> • Unknown—FPC is not detected by the router. • Empty—No FPC is present. • Present—FPC is detected by the chassis daemon but is either not supported by the current version of the Junos OS, or the FPC is coming up but not yet online. • Ready—FPC is in intermediate or transition state. • Announce online—Intermediate state during which the FPC is coming up but not yet online, and the chassis manager acknowledges the chassisd FPC online initiative. • Online—FPC is online and running. • Offline—FPC is powered down. • Diagnostics—FPC is set to operate in diagnostics mode.
Temperature	(M40e and M160 routers and QFX Series only) Temperature of the air flowing past the FPC.
PMB Temperature	<p>(PTX Series only) Temperature of the air flowing past the PMB (bottom of the FPC).</p> <p>The PTX5000 Packet Transport Router with FPC2-PTX-P1A include multiple temperatures for PMB (TEMPO and TEMP1).</p>
PMB CPU Temperature	(PTX5000 Packet Transport Router with FPC2-PTX-P1A only) Temperature of the air flowing past the PMB CPU.
Temperature Intake	(M320 routers, MX2010 routers, MX2020 routers, and PTX Series only) Temperature of the air flowing into the chassis.
Temperature Top	(T Series routers only) Temperature of the air flowing past the top of the FPC.
Temperature Exhaust	<p>(M120 and M320 routers, MX2010 routers, MX2020 routers, and PTX Series only) Temperature of the air flowing out of the chassis.</p> <p>The PTX Series Packet Transport Routers, and the MX2010 and MX2020 routers include exhaust temperatures for multiple zones (Exhaust A and Exhaust B).</p>
Temperature Bottom	(T Series routers only) Temperature of the air flowing past the bottom of the FPC.
TL <i>n</i> Temperature	(PTX Series only) Temperature of the air flowing past the specified TL area of the packet forwarding engine (PFE) on the FPC.
TQ <i>n</i> Temperature	(PTX Series only) Temperature of the air flowing past the specified TQ area of the packet forwarding engine (PFE) on the FPC.

Table 36: show chassis environment fpc Output Fields (*continued*)

Field Name	Field Description
Temperature MMBO	(T640 router only) Temperature of the air flowing past the type 3 FPC.
Temperature MMB1	(M320 and T Series routers only) Temperature of the air flowing past the type 1, type 2, and type 3 FPC.
Power	Information about the voltage supplied to the FPC. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
CMB Revision or BUS revision	Revision level of the chassis management bus device (M Series router) or bus (T Series routers).

Sample Output

show chassis environment fpc (M120 Router)

```

user@host> show chassis environment fpc
FPC 2 status:
  State                               Online
  Temperature Exhaust A               32 degrees C / 89 degrees F
  Temperature Exhaust B               31 degrees C / 87 degrees F
  Power A-Board
    1.2 V                             1202 mV
    1.5 V                             1508 mV
    1.8 V                             1798 mV
    2.5 V                             2507 mV
    3.3 V                             3351 mV
    5.0 V                             4995 mV
    3.3 V bias                         3296 mV
    1.2 V Rocket IO                   1205 mV
    1.5 V Rocket IO                   1501 mV
  I2C Slave Revision                 12
FPC 3 status:
  State                               Online
  Temperature Exhaust A               31 degrees C / 87 degrees F
  Temperature Exhaust B               33 degrees C / 91 degrees F
  Power A-Board
    1.2 V                             1211 mV
    1.5 V                             1501 mV
    1.8 V                             1798 mV
    2.5 V                             2471 mV
    3.3 V                             3293 mV
    5.0 V                             4930 mV
    3.3 V bias                         3296 mV
    1.2 V Rocket IO                   1205 mV
    1.5 V Rocket IO                   1501 mV
  Power B-Board
    1.2 V                             1214 mV
    1.5 V                             1501 mV
    2.5 V                             2471 mV
    3.3 V                             3300 mV
    5.0 V                             4943 mV
    3.3 V bias                         3296 mV
    1.2 V Rocket IO                   1205 mV
    1.5 V Rocket IO                   1501 mV

```

```

I2C Slave Revision      12
FPC 4 status:
State                   Online
Temperature Exhaust A   32 degrees C / 89 degrees F
Temperature Exhaust B   30 degrees C / 86 degrees F
Power A-Board
  1.2 V                 1195 mV
  1.5 V                 1504 mV
  1.8 V                 1801 mV
  2.5 V                 2504 mV
  3.3 V                 3293 mV
  5.0 V                 4917 mV
  3.3 V bias            3296 mV
  1.2 V Rocket IO       1202 mV
  1.5 V Rocket IO       1492 mV
I2C Slave Revision      12

```

show chassis environment fpc (M160 Router)

```

user@host> show chassis environment fpc
FPC 0 status:
State                   Online
Temperature              42 degrees C / 107 degrees F
Power:
  1.5 V                 1500 mV
  2.5 V                 2509 mV
  3.3 V                 3308 mV
  5.0 V                 4991 mV
  5.0 V bias            4952 mV
  8.0 V bias            8307 mV
CMB Revision            12
FPC 1 status:
State                   Online
Temperature              45 degrees C / 113 degrees F
Power:
  1.5 V                 1498 mV
  2.5 V                 2501 mV
  3.3 V                 3319 mV
  5.0 V                 5020 mV
  5.0 V bias            5025 mV
  8.0 V bias            8307 mV
CMB Revision            12

```

show chassis environment fpc (M320 Router)

```

user@host> show chassis environment fpc
FPC 0 status:
State                   Online
Temperature Intake       27 degrees C / 80 degrees F
Temperature Exhaust      38 degrees C / 100 degrees F
Temperature MMB1         31 degrees C / 87 degrees F
Power:
  1.5 V                 1487 mV
  1.5 V *               1494 mV
  1.8 V                 1821 mV
  2.5 V                 2533 mV
  3.3 V                 3323 mV
  5.0 V                 5028 mV
  3.3 V bias            3296 mV
  5.0 V bias            4984 mV
CMB Revision            16

```

```

FPC 1 status:
State                               Online
Temperature Intake                  27 degrees C / 80 degrees F
Temperature Exhaust                  37 degrees C / 98 degrees F
Temperature MMB1                     32 degrees C / 89 degrees F
Power:
  1.5 V                             1504 mV
  1.5 V *                           1499 mV
  1.8 V                             1820 mV
  2.5 V                             2529 mV
  3.3 V                             3328 mV
  5.0 V                             5013 mV
  3.3 V bias                         3294 mV
  5.0 V bias                         4984 mV
CMB Revision                        16
FPC 2 status:
State                               Online
Temperature Intake                  28 degrees C / 82 degrees F
Temperature Exhaust                  38 degrees C / 100 degrees F
Temperature MMB1                     32 degrees C / 89 degrees F
Power:
  1.5 V                             1498 mV
  1.5 V *                           1487 mV
  1.8 V                             1816 mV
  2.5 V                             2531 mV
  3.3 V                             3324 mV
  5.0 V                             5025 mV
  3.3 V bias                         3277 mV
  5.0 V bias                         5013 mV
CMB Revision                        17
FPC 3 status:
...

```

show chassis environment fpc (MX2020 Router)

```

user@host> show chassis environment fpc
FPC 0 status:
State                               Online
Temperature Intake                  41 degrees C / 105 degrees F
Temperature Exhaust A              48 degrees C / 118 degrees F
Temperature Exhaust B              60 degrees C / 140 degrees F
Temperature LU 0 TSen              56 degrees C / 132 degrees F
Temperature LU 0 Chip              59 degrees C / 138 degrees F
Temperature LU 1 TSen              56 degrees C / 132 degrees F
Temperature LU 1 Chip              61 degrees C / 141 degrees F
Temperature LU 2 TSen              56 degrees C / 132 degrees F
Temperature LU 2 Chip              52 degrees C / 125 degrees F
Temperature LU 3 TSen              56 degrees C / 132 degrees F
Temperature LU 3 Chip              52 degrees C / 125 degrees F
Temperature MQ 0 TSen              49 degrees C / 120 degrees F
Temperature MQ 0 Chip              49 degrees C / 120 degrees F
Temperature MQ 1 TSen              49 degrees C / 120 degrees F
Temperature MQ 1 Chip              52 degrees C / 125 degrees F
Temperature MQ 2 TSen              49 degrees C / 120 degrees F
Temperature MQ 2 Chip              45 degrees C / 113 degrees F
Temperature MQ 3 TSen              49 degrees C / 120 degrees F
Temperature MQ 3 Chip              46 degrees C / 114 degrees F
Power
  AS-BIAS3V3-z12105                3299 mV
  AS-VDD1V8-z12006                 1807 mV
  AS-VDD2V5-z12006                 2512 mV

```

```

AS-AVDD1V0-z12004      997 mV
AS-PCIE_1V0-z12004      996 mV
AS-VDD3V3-z12004        3294 mV
AS-VDD_1V5A-z12004      1501 mV
AS-VDD_1V5B-z12004      1498 mV
AS-LU0_1V0-z12004       998 mV
AS-LU1_1V0-z12004       1002 mV
AS-MQ0_1V0-z12004       999 mV
AS-MQ1_1V0-z12004       994 mV
AS-LU2_1V0-z12004       1000 mV
AS-LU3_1V0-z12004       998 mV
AS-MQ2_1V0-z12004       1002 mV
AS-MQ3_1V0-z12004       999 mV
AS-PMB_1V1-z12006       1096 mV
I2C Slave Revision      68
FPC 1 status:
State                    Online
Temperature Intake        39 degrees C / 102 degrees F
Temperature Exhaust A     48 degrees C / 118 degrees F
Temperature Exhaust B     55 degrees C / 131 degrees F
Temperature LU 0 TSen     52 degrees C / 125 degrees F
Temperature LU 0 Chip     54 degrees C / 129 degrees F
Temperature LU 1 TSen     52 degrees C / 125 degrees F
Temperature LU 1 Chip     56 degrees C / 132 degrees F
Temperature LU 2 TSen     52 degrees C / 125 degrees F
Temperature LU 2 Chip     49 degrees C / 120 degrees F
Temperature LU 3 TSen     52 degrees C / 125 degrees F
Temperature LU 3 Chip     50 degrees C / 122 degrees F
Temperature MQ 0 TSen     48 degrees C / 118 degrees F
Temperature MQ 0 Chip     48 degrees C / 118 degrees F
Temperature MQ 1 TSen     48 degrees C / 118 degrees F
Temperature MQ 1 Chip     51 degrees C / 123 degrees F
Temperature MQ 2 TSen     48 degrees C / 118 degrees F
Temperature MQ 2 Chip     45 degrees C / 113 degrees F
Temperature MQ 3 TSen     48 degrees C / 118 degrees F
Temperature MQ 3 Chip     45 degrees C / 113 degrees F
Power
AS-BIAS3V3-z12105        3291 mV
AS-VDD1V8-z12006         1786 mV
AS-VDD2V5-z12006         2496 mV
AS-AVDD1V0-z12004        1000 mV
AS-PCIE_1V0-z12004        1000 mV
AS-VDD3V3-z12004         3294 mV
AS-VDD_1V5A-z12004        1500 mV
AS-VDD_1V5B-z12004        1498 mV
AS-LU0_1V0-z12004         1003 mV
AS-LU1_1V0-z12004         1000 mV
AS-MQ0_1V0-z12004         1000 mV
AS-MQ1_1V0-z12004          995 mV
AS-LU2_1V0-z12004         1002 mV
AS-LU3_1V0-z12004          997 mV
AS-MQ2_1V0-z12004         1000 mV
AS-MQ3_1V0-z12004          998 mV
AS-PMB_1V1-z12006         1096 mV
I2C Slave Revision      68
FPC 2 status:
State                    Online
Temperature Intake        39 degrees C / 102 degrees F
Temperature Exhaust A     48 degrees C / 118 degrees F
Temperature Exhaust B     58 degrees C / 136 degrees F
Temperature LU 0 TSen     55 degrees C / 131 degrees F

```

```

Temperature LU 0 Chip      57 degrees C / 134 degrees F
Temperature LU 1 TSen      55 degrees C / 131 degrees F
Temperature LU 1 Chip      63 degrees C / 145 degrees F
Temperature LU 2 TSen      55 degrees C / 131 degrees F
Temperature LU 2 Chip      51 degrees C / 123 degrees F
Temperature LU 3 TSen      55 degrees C / 131 degrees F
Temperature LU 3 Chip      52 degrees C / 125 degrees F
Temperature MQ 0 TSen      48 degrees C / 118 degrees F
Temperature MQ 0 Chip      50 degrees C / 122 degrees F
Temperature MQ 1 TSen      48 degrees C / 118 degrees F
Temperature MQ 1 Chip      52 degrees C / 125 degrees F
Temperature MQ 2 TSen      48 degrees C / 118 degrees F
Temperature MQ 2 Chip      47 degrees C / 116 degrees F
Temperature MQ 3 TSen      48 degrees C / 118 degrees F
Temperature MQ 3 Chip      47 degrees C / 116 degrees F
Power
  AS-BIAS3V3-z12105        3299 mV
  AS-VDD1V8-z12006         1805 mV
  AS-VDD2V5-z12006         2510 mV
  AS-AVDD1V0-z12004         999 mV
  AS-PCIE_1V0-z12004         998 mV
  AS-VDD3V3-z12004         3296 mV
  AS-VDD_1V5A-z12004        1492 mV
  AS-VDD_1V5B-z12004        1497 mV
  AS-LU0_1V0-z12004         997 mV
  AS-LU1_1V0-z12004        1000 mV
  AS-MQ0_1V0-z12004         998 mV
  AS-MQ1_1V0-z12004        1001 mV
  AS-LU2_1V0-z12004         996 mV
  AS-LU3_1V0-z12004         995 mV
  AS-MQ2_1V0-z12004         998 mV
  AS-MQ3_1V0-z12004         997 mV
  AS-PMB_1V1-z12006        1100 mV
I2C Slave Revision        68
FPC 3 status:
State                      Online
Temperature Intake          41 degrees C / 105 degrees F
Temperature Exhaust A       48 degrees C / 118 degrees F
Temperature Exhaust B       58 degrees C / 136 degrees F
Temperature LU 0 TSen       56 degrees C / 132 degrees F
Temperature LU 0 Chip       59 degrees C / 138 degrees F
Temperature LU 1 TSen       56 degrees C / 132 degrees F
Temperature LU 1 Chip       61 degrees C / 141 degrees F
Temperature LU 2 TSen       56 degrees C / 132 degrees F
Temperature LU 2 Chip       51 degrees C / 123 degrees F
Temperature LU 3 TSen       56 degrees C / 132 degrees F
Temperature LU 3 Chip       53 degrees C / 127 degrees F
Temperature MQ 0 TSen       50 degrees C / 122 degrees F
Temperature MQ 0 Chip       51 degrees C / 123 degrees F
Temperature MQ 1 TSen       50 degrees C / 122 degrees F
Temperature MQ 1 Chip       55 degrees C / 131 degrees F
Temperature MQ 2 TSen       50 degrees C / 122 degrees F
Temperature MQ 2 Chip       47 degrees C / 116 degrees F
Temperature MQ 3 TSen       50 degrees C / 122 degrees F
Temperature MQ 3 Chip       50 degrees C / 122 degrees F
Power
  AS-BIAS3V3-z12105        3305 mV
  AS-VDD1V8-z12006         1810 mV
  AS-VDD2V5-z12006         2508 mV
  AS-AVDD1V0-z12004         999 mV
  AS-PCIE_1V0-z12004        1001 mV

```

```

AS-VDD3V3-z12004      3294 mV
AS-VDD_1V5A-z12004    1500 mV
AS-VDD_1V5B-z12004    1498 mV
AS-LU0_1V0-z12004     998 mV
AS-LU1_1V0-z12004     998 mV
AS-MQ0_1V0-z12004     999 mV
AS-MQ1_1V0-z12004     998 mV
AS-LU2_1V0-z12004    1000 mV
AS-LU3_1V0-z12004    1001 mV
AS-MQ2_1V0-z12004     996 mV
AS-MQ3_1V0-z12004     998 mV
AS-PMB_1V1-z12006    1098 mV
I2C Slave Revision    68
FPC 4 status:
...

```

show chassis environment fpc (MX2010 Router)

```

user@host> show chassis environment fpc
FPC 0 status:
State      Online
Temperature Intake      36 degrees C / 96 degrees F
Temperature Exhaust A   42 degrees C / 107 degrees F
Temperature Exhaust B   51 degrees C / 123 degrees F
Temperature LU 0 TSen    49 degrees C / 120 degrees F
Temperature LU 0 Chip    50 degrees C / 122 degrees F
Temperature LU 1 TSen    49 degrees C / 120 degrees F
Temperature LU 1 Chip    54 degrees C / 129 degrees F
Temperature LU 2 TSen    49 degrees C / 120 degrees F
Temperature LU 2 Chip    45 degrees C / 113 degrees F
Temperature LU 3 TSen    49 degrees C / 120 degrees F
Temperature LU 3 Chip    46 degrees C / 114 degrees F
Temperature MQ 0 TSen    40 degrees C / 104 degrees F
Temperature MQ 0 Chip    41 degrees C / 105 degrees F
Temperature MQ 1 TSen    40 degrees C / 104 degrees F
Temperature MQ 1 Chip    44 degrees C / 111 degrees F
Temperature MQ 2 TSen    40 degrees C / 104 degrees F
Temperature MQ 2 Chip    38 degrees C / 100 degrees F
Temperature MQ 3 TSen    40 degrees C / 104 degrees F
Temperature MQ 3 Chip    41 degrees C / 105 degrees F
Power
AS-BIAS3V3-z12105      3300 mV
AS-VDD1V8-z12006      1805 mV
AS-VDD2V5-z12006      2505 mV
AS-AVDD1V0-z12004     998 mV
AS-PCIE_1V0-z12004     999 mV
AS-VDD3V3-z12004      3303 mV
AS-VDD_1V5A-z12004    1497 mV
AS-VDD_1V5B-z12004    1497 mV
AS-LU0_1V0-z12004     998 mV
AS-LU1_1V0-z12004    1003 mV
AS-MQ0_1V0-z12004     998 mV
AS-MQ1_1V0-z12004     998 mV
AS-LU2_1V0-z12004     997 mV
AS-LU3_1V0-z12004    1001 mV
AS-MQ2_1V0-z12004     996 mV
AS-MQ3_1V0-z12004     994 mV
AS-PMB_1V1-z12006    1097 mV
I2C Slave Revision    68
FPC 1 status:
State      Online

```

```

Temperature Intake          34 degrees C / 93 degrees F
Temperature Exhaust A       46 degrees C / 114 degrees F
Temperature Exhaust B       54 degrees C / 129 degrees F
Temperature LU 0 TSen       45 degrees C / 113 degrees F
Temperature LU 0 Chip       55 degrees C / 131 degrees F
Temperature LU 1 TSen       45 degrees C / 113 degrees F
Temperature LU 1 Chip       44 degrees C / 111 degrees F
Temperature LU 2 TSen       45 degrees C / 113 degrees F
Temperature LU 2 Chip       50 degrees C / 122 degrees F
Temperature LU 3 TSen       45 degrees C / 113 degrees F
Temperature LU 3 Chip       58 degrees C / 136 degrees F
Temperature XM 0 TSen       45 degrees C / 113 degrees F
Temperature XM 0 Chip       51 degrees C / 123 degrees F
Temperature XF 0 TSen       45 degrees C / 113 degrees F
Temperature XF 0 Chip       63 degrees C / 145 degrees F
Temperature PLX Switch TSen 45 degrees C / 113 degrees F
Temperature PLX Switch Chip 47 degrees C / 116 degrees F
Power
MPC-BIAS3V3-z12105         3300 mV
MPC-VDD3V3-z16100          3294 mV
MPC-VDD2V5-z16100          2505 mV
MPC-VDD1V8-z12004          1796 mV
MPC-AVDD1V0-z12004         991 mV
MPC-VDD1V2-z16100          1196 mV
MPC-VDD1V5A-z12004         1491 mV
MPC-VDD1V5B-z12004         1492 mV
MPC-XF_0V9-z12004          996 mV
MPC-PCIE_1V0-z16100        1003 mV
MPC-LU0_1V0-z12004          996 mV
MPC-LU1_1V0-z12004          996 mV
MPC-LU2_1V0-z12004          998 mV
MPC-LU3_1V0-z12004          994 mV
MPC-12VA-BMR453            12031 mV
MPC-12VB-BMR453            12003 mV
MPC-PMB_1V1-z12006          1104 mV
MPC-PMB_1V2-z12106          1194 mV
MPC-XM_0V9-vt273m          911 mV
I2C Slave Revision         110
FPC 8 status:
State                       Online
Temperature Intake          32 degrees C / 89 degrees F
Temperature Exhaust A       44 degrees C / 111 degrees F
Temperature Exhaust B       37 degrees C / 98 degrees F
Temperature LU 0 TCAM TSen  41 degrees C / 105 degrees F
Temperature LU 0 TCAM Chip  49 degrees C / 120 degrees F
Temperature LU 0 TSen       41 degrees C / 105 degrees F
Temperature LU 0 Chip       52 degrees C / 125 degrees F
Temperature MQ 0 TSen       41 degrees C / 105 degrees F
Temperature MQ 0 Chip       47 degrees C / 116 degrees F
Temperature LU 1 TCAM TSen  39 degrees C / 102 degrees F
Temperature LU 1 TCAM Chip  42 degrees C / 107 degrees F
Temperature LU 1 TSen       39 degrees C / 102 degrees F
Temperature LU 1 Chip       46 degrees C / 114 degrees F
Temperature MQ 1 TSen       39 degrees C / 102 degrees F
Temperature MQ 1 Chip       45 degrees C / 113 degrees F
Power
MPC-BIAS3V3-z12105         3296 mV
MPC-VDD3V3-z12006          3298 mV
MPC-VDD2V5-z12006          2505 mV
MPC-TCAM_1V0-z12004         997 mV
MPC-AVDD1V0-z12006         1007 mV

```



```

MPC-VDD1V8-z12006      1803 mV
MPC-PCIE_1V0-z12006    1004 mV
MPC-LU0_1V0-z12004     1000 mV
MPC-MQ0_1V0-z12004     999 mV
MPC-VDD_1V5-z12004     1498 mV
MPC-PMB_1V1-z12006     1102 mV
MPC-9VA-BMR453         9009 mV
MPC-9VB-BMR453         8960 mV
MPC-PMB_1V2-z12105     1202 mV
MPC-LU1_1V0-z12004     1005 mV
MPC-MQ1_1V0-z12004     1000 mV
I2C Slave Revision     70
FPC 9 status:
State                  Online
Temperature Intake     34 degrees C / 93 degrees F
Temperature Exhaust A  41 degrees C / 105 degrees F
Temperature Exhaust B  54 degrees C / 129 degrees F
Temperature LU 0 TSen  51 degrees C / 123 degrees F
Temperature LU 0 Chip  52 degrees C / 125 degrees F
Temperature LU 1 TSen  51 degrees C / 123 degrees F
Temperature LU 1 Chip  55 degrees C / 131 degrees F
Temperature LU 2 TSen  51 degrees C / 123 degrees F
Temperature LU 2 Chip  47 degrees C / 116 degrees F
Temperature LU 3 TSen  51 degrees C / 123 degrees F
Temperature LU 3 Chip  47 degrees C / 116 degrees F
Temperature MQ 0 TSen  40 degrees C / 104 degrees F
Temperature MQ 0 Chip  42 degrees C / 107 degrees F
Temperature MQ 1 TSen  40 degrees C / 104 degrees F
Temperature MQ 1 Chip  44 degrees C / 111 degrees F
Temperature MQ 2 TSen  40 degrees C / 104 degrees F
Temperature MQ 2 Chip  38 degrees C / 100 degrees F
Temperature MQ 3 TSen  40 degrees C / 104 degrees F
Temperature MQ 3 Chip  40 degrees C / 104 degrees F
Power
AS-BIAS3V3-z12105      3302 mV
AS-VDD1V8-z12006      1808 mV
AS-VDD2V5-z12006      2513 mV
AS-AVDD1V0-z12004     997 mV
AS-PCIE_1V0-z12004     999 mV
AS-VDD3V3-z12004      3294 mV
AS-VDD_1V5A-z12004    1503 mV
AS-VDD_1V5B-z12004    1502 mV
AS-LU0_1V0-z12004     996 mV
AS-LU1_1V0-z12004     999 mV
AS-MQ0_1V0-z12004     997 mV
AS-MQ1_1V0-z12004     999 mV
AS-LU2_1V0-z12004     997 mV
AS-LU3_1V0-z12004     998 mV
AS-MQ2_1V0-z12004     1000 mV
AS-MQ3_1V0-z12004     1000 mV
AS-PMB_1V1-z12006     1102 mV
I2C Slave Revision     68

```

show chassis environment fpc (MX240 Router)

```

user@host> show chassis environment fpc
FPC 1 status:
State                  Online
Temperature Intake     34 degrees C / 93 degrees F
Temperature Exhaust A  39 degrees C / 102 degrees F
Temperature Exhaust B  53 degrees C / 127 degrees F

```

```

Temperature I3 0 TSensor 51 degrees C / 123 degrees F
Temperature I3 0 Chip 54 degrees C / 129 degrees F
Temperature I3 1 TSensor 50 degrees C / 122 degrees F
Temperature I3 1 Chip 53 degrees C / 127 degrees F
Temperature I3 2 TSensor 48 degrees C / 118 degrees F
Temperature I3 2 Chip 51 degrees C / 123 degrees F
Temperature I3 3 TSensor 45 degrees C / 113 degrees F
Temperature I3 3 Chip 48 degrees C / 118 degrees F
Temperature IA 0 TSensor 45 degrees C / 113 degrees F
Temperature IA 0 Chip 45 degrees C / 113 degrees F
Temperature IA 1 TSensor 45 degrees C / 113 degrees F
Temperature IA 1 Chip 49 degrees C / 120 degrees F
Power
  1.5 V 1492 mV
  2.5 V 2507 mV
  3.3 V 3306 mV
  1.8 V PFE 0 1801 mV
  1.8 V PFE 1 1804 mV
  1.8 V PFE 2 1798 mV
  1.8 V PFE 3 1798 mV
  1.2 V PFE 0 1169 mV
  1.2 V PFE 1 1189 mV
  1.2 V PFE 2 1182 mV
  1.2 V PFE 3 1176 mV
I2C Slave Revision 42
FPC 2 status:
State Online
Temperature Intake 33 degrees C / 91 degrees F
Temperature Exhaust A 41 degrees C / 105 degrees F
Temperature Exhaust B 53 degrees C / 127 degrees F
Temperature I3 0 TSensor 53 degrees C / 127 degrees F
Temperature I3 0 Chip 58 degrees C / 136 degrees F
Temperature I3 1 TSensor 52 degrees C / 125 degrees F
Temperature I3 1 Chip 56 degrees C / 132 degrees F
Temperature I3 2 TSensor 50 degrees C / 122 degrees F
Temperature I3 2 Chip 52 degrees C / 125 degrees F
Temperature I3 3 TSensor 46 degrees C / 114 degrees F
Temperature I3 3 Chip 49 degrees C / 120 degrees F
Temperature IA 0 TSensor 51 degrees C / 123 degrees F
Temperature IA 0 Chip 49 degrees C / 120 degrees F
Temperature IA 1 TSensor 48 degrees C / 118 degrees F
Temperature IA 1 Chip 53 degrees C / 127 degrees F
Power
  1.5 V 1492 mV
  2.5 V 2445 mV
  3.3 V 3293 mV
  1.8 V PFE 0 1827 mV
  1.8 V PFE 1 1775 mV
  1.8 V PFE 2 1788 mV
  1.8 V PFE 3 1798 mV
  1.2 V PFE 0 1250 mV
  1.2 V PFE 1 1234 mV
  1.2 V PFE 2 1231 mV
  1.2 V PFE 3 1192 mV
I2C Slave Revision 42

```

show chassis environment fpc (MX480 Router)

```

user@host> show chassis environment fpc
FPC 1 status:
State Online

```

```

Temperature Intake          36 degrees C / 96 degrees F
Temperature Exhaust A       41 degrees C / 105 degrees F
Temperature Exhaust B       55 degrees C / 131 degrees F
Temperature I3 0 TSensor    55 degrees C / 131 degrees F
Temperature I3 0 Chip        57 degrees C / 134 degrees F
Temperature I3 1 TSensor    53 degrees C / 127 degrees F
Temperature I3 1 Chip        53 degrees C / 127 degrees F
Temperature I3 2 TSensor    52 degrees C / 125 degrees F
Temperature I3 2 Chip        49 degrees C / 120 degrees F
Temperature I3 3 TSensor    47 degrees C / 116 degrees F
Temperature I3 3 Chip        47 degrees C / 116 degrees F
Temperature IA 0 TSensor    54 degrees C / 129 degrees F
Temperature IA 0 Chip        58 degrees C / 136 degrees F
Temperature IA 1 TSensor    48 degrees C / 118 degrees F
Temperature IA 1 Chip        53 degrees C / 127 degrees F
Power
  1.5 V                      1479 mV
  2.5 V                      2542 mV
  3.3 V                      3319 mV
  1.8 V PFE 0                1811 mV
  1.8 V PFE 1                1804 mV
  1.8 V PFE 2                1804 mV
  1.8 V PFE 3                1814 mV
  1.2 V PFE 0                1192 mV
  1.2 V PFE 1                1202 mV
  1.2 V PFE 2                1205 mV
  1.2 V PFE 3                1189 mV
I2C Slave Revision          40

```

show chassis environment fpc (MX960 Router)

```

user@host> show chassis environment fpc
FPC 5 status:
State      Online
Temperature Intake      27 degrees C / 80 degrees F
Temperature Exhaust A   34 degrees C / 93 degrees F
Temperature Exhaust B   40 degrees C / 104 degrees F
Temperature I3 0 TSensor 39 degrees C / 102 degrees F
Temperature I3 0 Chip    41 degrees C / 105 degrees F
Temperature I3 1 TSensor 38 degrees C / 100 degrees F
Temperature I3 1 Chip    37 degrees C / 98 degrees F
Temperature I3 2 TSensor 37 degrees C / 98 degrees F
Temperature I3 2 Chip    34 degrees C / 93 degrees F
Temperature I3 3 TSensor 32 degrees C / 89 degrees F
Temperature I3 3 Chip    33 degrees C / 91 degrees F
Temperature IA 0 TSensor 39 degrees C / 102 degrees F
Temperature IA 0 Chip    44 degrees C / 111 degrees F
Temperature IA 1 TSensor 36 degrees C / 96 degrees F
Temperature IA 1 Chip    44 degrees C / 111 degrees F
Power
  1.5 V                      1479 mV
  2.5 V                      2523 mV
  3.3 V                      3254 mV
  1.8 V PFE 0                1798 mV
  1.8 V PFE 1                1798 mV
  1.8 V PFE 2                1807 mV
  1.8 V PFE 3                1791 mV
  1.2 V PFE 0                1173 mV
  1.2 V PFE 1                1179 mV
  1.2 V PFE 2                1179 mV
  1.2 V PFE 3                1185 mV

```

```

I2C Slave Revision      6
FPC 6 status:
State                   Online
Temperature Intake      25 degrees C / 77 degrees F
Temperature Exhaust A   38 degrees C / 100 degrees F
Temperature Exhaust B   38 degrees C / 100 degrees F
Temperature I3 0 TSensor 40 degrees C / 104 degrees F
Temperature I3 0 Chip   40 degrees C / 104 degrees F
Temperature I3 1 TSensor 40 degrees C / 104 degrees F
Temperature I3 1 Chip   38 degrees C / 100 degrees F
Temperature I3 2 TSensor 37 degrees C / 98 degrees F
Temperature I3 2 Chip   32 degrees C / 89 degrees F
Temperature I3 3 TSensor 34 degrees C / 93 degrees F
Temperature I3 3 Chip   33 degrees C / 91 degrees F
Temperature IA 0 TSensor 45 degrees C / 113 degrees F
Temperature IA 0 Chip   47 degrees C / 116 degrees F
Temperature IA 1 TSensor 37 degrees C / 98 degrees F
Temperature IA 1 Chip   42 degrees C / 107 degrees F
Power
  1.5 V                1485 mV
  2.5 V                2510 mV
  3.3 V                3332 mV
  1.8 V PFE 0          1801 mV
  1.8 V PFE 1          1814 mV
  1.8 V PFE 2          1804 mV
  1.8 V PFE 3          1820 mV
  1.2 V PFE 0          1192 mV
  1.2 V PFE 1          1189 mV
  1.2 V PFE 2          1202 mV
  1.2 V PFE 3          1156 mV
I2C Slave Revision      40

```

show chassis environment fpc (MX480 Router with 100-Gigabit Ethernet CFP)

```

user@host> show chassis environment fpc
FPC 0 status:
State                   Online
Temperature Intake      32 degrees C / 89 degrees F
Temperature Exhaust A   39 degrees C / 102 degrees F
Temperature Exhaust B   37 degrees C / 98 degrees F
Temperature QX 0 TSen   44 degrees C / 111 degrees F
Temperature QX 0 Chip   48 degrees C / 118 degrees F
Temperature LU 0 TCAM TSen 44 degrees C / 111 degrees F
Temperature LU 0 TCAM Chip 47 degrees C / 116 degrees F
Temperature LU 0 TSen   44 degrees C / 111 degrees F
Temperature LU 0 Chip   48 degrees C / 118 degrees F
Temperature MQ 0 TSen   44 degrees C / 111 degrees F
Temperature MQ 0 Chip   47 degrees C / 116 degrees F
Power
  MPC-BIAS3V3-z12105    3297 mV
  MPC-VDD3V3-z12105    3306 mV
  MPC-VDD2V5-z12105    2498 mV
  MPC-TCAM_1V0-z12004   999 mV
  MPC-AVDD1V0-z12006    999 mV
  MPC-VDD1V8-z12006    1796 mV
  MPC-PCIE_1V0-z12006   1002 mV
  MPC-LU0_1V0-z12004    997 mV
  MPC-MQ0_1V0-z12004    995 mV
  MPC-VDD_1V5-z12004    1496 mV
  MPC-PMB_1V1-z12006    1094 mV
  MPC-9VA-BMR453        9054 mV

```

```

MPC-9VB-BMR453          9037 mV
MPC-PMB_1V2-z12106      1191 mV
MPC-QXM0_1V0-z12006     1000 mV
I2C Slave Revision      66
FPC 1 status:
State                    Online
Temperature Intake       35 degrees C / 95 degrees F
Temperature Exhaust A    50 degrees C / 122 degrees F
Temperature Exhaust B    56 degrees C / 132 degrees F
Temperature LU 0 TSen     46 degrees C / 114 degrees F
Temperature LU 0 Chip     59 degrees C / 138 degrees F
Temperature LU 1 TSen     46 degrees C / 114 degrees F
Temperature LU 1 Chip     45 degrees C / 113 degrees F
Temperature LU 2 TSen     46 degrees C / 114 degrees F
Temperature LU 2 Chip     60 degrees C / 140 degrees F
Temperature LU 3 TSen     46 degrees C / 114 degrees F
Temperature LU 3 Chip     71 degrees C / 159 degrees F
Temperature XM 0 TSen     46 degrees C / 114 degrees F
Temperature XM 0 Chip     -18 degrees C / 0 degrees F
Temperature XF 0 TSen     46 degrees C / 114 degrees F
Temperature XF 0 Chip     76 degrees C / 168 degrees F
Power
MPC-BIAS3V3-z12105      3292 mV
MPC-VDD3V3-z16100       3303 mV
MPC-VDD2V5-z16100       2501 mV
MPC-VDD1V8-z12004       1801 mV
MPC-AVDD1V0-z12006       996 mV
MPC-VDD1V2-z16100       1199 mV
MPC-VDD1V5A-z12004      1493 mV
MPC-VDD1V5B-z12004      1498 mV
MPC-XF_0V9-z12006       996 mV
MPC-PCIE_1V0-z16100     1000 mV
MPC-LU0_1V0-z12004      994 mV
MPC-LU1_1V0-z12004      994 mV
MPC-LU2_1V0-z12004      992 mV
MPC-LU3_1V0-z12004      993 mV
MPC-12VA-BMR453         12003 mV
MPC-12VB-BMR453         12043 mV
MPC-PMB_1V1-z12006      1091 mV
MPC-PMB_1V2-z12106      1196 mV
MPC-XM_0V9-vt273m       899 mV
I2C Slave Revision      106

```

show chassis environment fpc (MX240, MX480, MX960 with Application Services Modular Line Card)

```

user@host>show chassis environment fpc 1
FPC 1 status:
State                    Online
Temperature Intake       36 degrees C / 96 degrees F
Temperature Exhaust A    39 degrees C / 102 degrees F
Temperature LU TSen      52 degrees C / 125 degrees F
Temperature LU Chip      54 degrees C / 129 degrees F
Temperature XM TSen      52 degrees C / 125 degrees F
Temperature XM Chip      60 degrees C / 140 degrees F
Temperature PCIE TSen    52 degrees C / 125 degrees F
Temperature PCIE Chip    69 degrees C / 156 degrees F
Power
MPC-BIAS3V3-z12106      3302 mV
MPC-VDD3V3-z16100       3325 mV
MPC-AVDD1V0-z16100      1007 mV
MPC-PCIE_1V0-z16100     904 mV

```

```

MPC-LU0_1V0-z12004      996 mV
MPC-VDD_1V5-z12004      1498 mV
MPC-12VA-BMR453          11733 mV
MPC-12VB-BMR453          11728 mV
MPC-XM_0V9-vt273m        900 mV
I2C Slave Revision       81

```

show chassis environment fpc (T320, T640, and T1600 Routers)

```

user@host> show chassis environment fpc
FPC 0 status:
  State                               Online
  Temperature Top                     42 degrees C / 107 degrees F
  Temperature Bottom                   36 degrees C / 96 degrees F
  Temperature MMB1                     39 degrees C / 102 degrees F
  Power:
    1.8 V                             1959 mV
    2.5 V                             2495 mV
    3.3 V                             3344 mV
    5.0 V                             5047 mV
    1.8 V bias                         1787 mV
    3.3 V bias                         3291 mV
    5.0 V bias                         4998 mV
    8.0 V bias                         7343 mV
  BUS Revision                         40
FPC 1 status:
  State                               Online
  Temperature Top                     42 degrees C / 107 degrees F
  Temperature Bottom                   39 degrees C / 102 degrees F
  Temperature MMB1                     40 degrees C / 104 degrees F
  Power:
    1.8 V                             1956 mV
    2.5 V                             2498 mV
    3.3 V                             3340 mV
    5.0 V                             5023 mV
    1.8 V bias                         1782 mV
    3.3 V bias                         3277 mV
    5.0 V bias                         4989 mV
    8.0 V bias                         7289 mV
  BUS Revision                         40
FPC 2 status:
  State                               Online
  Temperature Top                     43 degrees C / 109 degrees F
  Temperature Bottom                   39 degrees C / 102 degrees F
  Temperature MMB1                     41 degrees C / 105 degrees F
  Power:
    1.8 V                             1963 mV
    2.5 V                             2503 mV
    3.3 V                             3340 mV
    5.0 V                             5042 mV
    1.8 V bias                         1797 mV
    3.3 V bias                         3311 mV
    5.0 V bias                         5013 mV
    8.0 V bias                         7221 mV
  BUS Revision                         40

```

show chassis environment fpc (T4000 Router)

```

user@host> show chassis environment fpc
FPC 0 status:
  State                               Online

```

Fan Intake	34 degrees C / 93 degrees F
Fan Exhaust	48 degrees C / 118 degrees F
PMB	47 degrees C / 116 degrees F
LMB0	50 degrees C / 122 degrees F
LMB1	41 degrees C / 105 degrees F
LMB2	35 degrees C / 95 degrees F
PFE1 LU2	46 degrees C / 114 degrees F
PFE1 LU0	41 degrees C / 105 degrees F
PFE0 LU0	57 degrees C / 134 degrees F
XF1	47 degrees C / 116 degrees F
XF0	52 degrees C / 125 degrees F
XM1	41 degrees C / 105 degrees F
XM0	50 degrees C / 122 degrees F
PFE0 LU1	56 degrees C / 132 degrees F
PFE0 LU2	45 degrees C / 113 degrees F
PFE1 LU1	37 degrees C / 98 degrees F
Power 1	
1.0 V	991 mV
1.2 V bias	1195 mV
1.8 V	1788 mV
2.5 V	2483 mV
3.3 V	3289 mV
3.3 V bias	3299 mV
12.0 V A	10608 mV
12.0 V B	10637 mV
Power 2	
0.9 V	881 mV
0.9 V PFE0	916 mV
0.9 V PFE1	903 mV
1.0 V PFE0	1012 mV
1.0 V PFE1	1002 mV
1.1 V	1095 mV
1.5 V_0	1494 mV
1.5 V_1	1479 mV
Power 3	
1.0 V PFE0	1000 mV
1.0 V PFE1	1002 mV
1.0 V PFE0 *	995 mV
1.0 V PFE1 *	995 mV
1.8 V PFE 0	1788 mV
1.8 V PFE 1	1789 mV
2.5 V	2482 mV
12.0 V	11614 mV
Power 4	
1.0 V PFE0 LU0	1003 mV
1.0 V PFE1 LU0	1003 mV
1.0 V PFE1 LU2	1004 mV
1.0 V PFE0 LU0 *	995 mV
1.0 V PFE1 LU0 *	998 mV
1.0 V PFE1 LU2 *	996 mV
12.0 V	11643 mV
12.0 V C	11711 mV
Power (Base/PMB/MMB)	
LMB0 VDD2V5	2488 mV
LMB0 VDD1V8	1788 mV
LMB0 VDD1V5	1496 mV
LMB0 PFE0 LU0 AVDD1V0	1002 mV
LMB0 PFE0 LU0 VDD1V0	1000 mV
LMB0 VDD12V0	10752 mV
LMB1 VDD2V5	2472 mV
LMB1 VDD1V8	1792 mV

```

LMB1 VDD1V5                1480 mV
LMB1 PFE0 LU2 AVDD1V0      994 mV
LMB1 PFE0 LU2 VDD1V0       1002 mV
LMB1 VDD12V0               10800 mV
LMB2 VDD2V5                2472 mV
LMB2 VDD1V8                1792 mV
LMB2 VDD1V5                1486 mV
LMB2 PFE1 LU1 AVDD1V0      996 mV
LMB2 PFE1 LU1 VDD1V0       998 mV
LMB2 VDD12V0               10704 mV
PMB 1.05v                  1049 mV
PMB 1.5v                   1500 mV
PMB 2.5v                   2500 mV
PMB 3.3v                   3299 mV
Bus Revision                113
FPC 3 status:
State                       Online
Fan Intake                  37 degrees C / 98 degrees F
Fan Exhaust                 51 degrees C / 123 degrees F
PMB                         43 degrees C / 109 degrees F
LMB0                       57 degrees C / 134 degrees F
LMB1                       54 degrees C / 129 degrees F
LMB2                       38 degrees C / 100 degrees F
PFE1 LU2                   63 degrees C / 145 degrees F
PFE1 LU0                   45 degrees C / 113 degrees F
PFE0 LU0                   69 degrees C / 156 degrees F
XF1                        62 degrees C / 143 degrees F
XF0                        63 degrees C / 145 degrees F
XM1                        43 degrees C / 109 degrees F
XM0                        67 degrees C / 152 degrees F
PFE0 LU1                   63 degrees C / 145 degrees F
PFE0 LU2                   66 degrees C / 150 degrees F
PFE1 LU1                   41 degrees C / 105 degrees F
Power 1
  1.0 V                    1002 mV
  1.2 V bias               1201 mV
  1.8 V                    1785 mV
  2.5 V                    2485 mV
  3.3 V                    3288 mV
  3.3 V bias               3285 mV
  12.0 V A                 10412 mV
  12.0 V B                 10515 mV
Power 2
  0.9 V                    882 mV
  0.9 V PFE0               920 mV
  0.9 V PFE1               905 mV
  1.0 V PFE0               1015 mV
  1.0 V PFE1               1001 mV
  1.1 V                    1094 mV
  1.5 V_0                  1495 mV
  1.5 V_1                  1478 mV
Power 3
  0.92 V PFE1              998 mV
  1.0 V PFE0               997 mV
  1.0 V PFE0 *             992 mV
  1.0 V PFE1 *             991 mV
  1.8 V PFE 0              1780 mV
  1.8 V PFE 1              1797 mV
  2.5 V                    2492 mV
  12.0 V                   11604 mV
Power 4

```



```

1.0 V PFE0 LU0      1003 mV
1.0 V PFE1 LU0      1004 mV
1.0 V PFE1 LU2      1003 mV
1.0 V PFE0 LU0 *    1000 mV
1.0 V PFE1 LU0 *    1001 mV
1.0 V PFE1 LU2 *    1003 mV
12.0 V              11653 mV
12.0 V C            11672 mV
Power (Base/PMB/MMB)
LMB0 VDD2V5         2512 mV
LMB0 VDD1V8         1790 mV
LMB0 VDD1V5         1500 mV
LMB0 PFE0 LU0 AVDD1V0 1004 mV
LMB0 PFE0 LU0 VDD1V0 1002 mV
LMB0 VDD12V0        10608 mV
LMB1 VDD2V5         2472 mV
LMB1 VDD1V8         1788 mV
LMB1 VDD1V5         1480 mV
LMB1 PFE0 LU2 AVDD1V0 1000 mV
LMB1 PFE0 LU2 VDD1V0 1004 mV
LMB1 VDD12V0        10672 mV
LMB2 VDD2V5         2488 mV
LMB2 VDD1V8         1798 mV
LMB2 VDD1V5         1494 mV
LMB2 PFE1 LU1 AVDD1V0 1000 mV
LMB2 PFE1 LU1 VDD1V0 1004 mV
LMB2 VDD12V0        10528 mV
PMB 1.05v           1050 mV
PMB 1.5v            1500 mV
PMB 2.5v            2499 mV
PMB 3.3v            3299 mV
Bus Revision         113
FPC 5 status:
State                Online
Temperature Top       39 degrees C / 102 degrees F
Temperature Bottom    38 degrees C / 100 degrees F
Power
1.8 V                1804 mV
1.8 V bias           1802 mV
3.3 V                3294 mV
3.3 V bias           3277 mV
5.0 V bias           5008 mV
5.0 V TOP             5067 mV
8.0 V bias           6642 mV
Power (Base/PMB/MMB)
1.2 V                1202 mV
1.5 V                1504 mV
5.0 V BOT             5079 mV
12.0 V TOP Base       11848 mV
12.0 V BOT Base       11780 mV
1.1 V PMB            1111 mV
1.2 V PMB            1189 mV
1.5 V PMB            1494 mV
1.8 V PMB            1819 mV
2.5 V PMB            2503 mV
3.3 V PMB            3294 mV
5.0 V PMB            5035 mV
12.0 V PMB           11788 mV
0.75 MMB TOP         766 mV
1.5 V MMB TOP        1484 mV
1.8 V MMB TOP        1772 mV

```

```

2.5 V MMB TOP          2485 mV
1.2 V MMB TOP          1137 mV
5.0 V MMB TOP          4946 mV
12.0 V MMB TOP         11772 mV
3.3 V MMB TOP          3289 mV
0.75 MMB BOT           759 mV
1.5 V MMB BOT          1482 mV
1.8 V MMB BOT          1792 mV
2.5 V MMB BOT          2490 mV
1.2 V MMB BOT          1145 mV
5.0 V MMB BOT          4922 mV
12.0 V MMB BOT         11625 mV
3.3 V MMB BOT          3282 mV
APS 00                 2495 mV
APS 01                 3308 mV
APS 02                 3301 mV
5.0 V PIC 0            4967 mV
APS 10                 2512 mV
APS 11                 3316 mV
APS 12                 3304 mV
5.0 V PIC 1            5081 mV
Bus Revision           49
FPC 6 status:
State                  Online
Fan Intake             34 degrees C / 93 degrees F
Fan Exhaust            49 degrees C / 120 degrees F
PMB                    40 degrees C / 104 degrees F
LMB0                   60 degrees C / 140 degrees F
LMB1                   58 degrees C / 136 degrees F
LMB2                   40 degrees C / 104 degrees F
PFE1 LU2               69 degrees C / 156 degrees F
PFE1 LU0               45 degrees C / 113 degrees F
PFE0 LU0               71 degrees C / 159 degrees F
XF1                    58 degrees C / 136 degrees F
XF0                    65 degrees C / 149 degrees F
XM1                    40 degrees C / 104 degrees F
XM0                    66 degrees C / 150 degrees F
PFE0 LU1               69 degrees C / 156 degrees F
PFE0 LU2               68 degrees C / 154 degrees F
PFE1 LU1               42 degrees C / 107 degrees F
Power 1
1.0 V                  998 mV
1.2 V bias             1191 mV
1.8 V                  1781 mV
2.5 V                  2487 mV
3.3 V                  3302 mV
3.3 V bias             3300 mV
12.0 V A               10388 mV
12.0 V B               10388 mV
Power 2
0.9 V                  902 mV
0.9 V PFE0             921 mV
0.9 V PFE1             907 mV
1.0 V PFE0             996 mV
1.0 V PFE1             974 mV
1.1 V                  1095 mV
1.5 V_0                1495 mV
1.5 V_1                1478 mV
Power 3
1.0 V PFE0             997 mV
1.0 V PFE1             998 mV

```

```

1.0 V PFE0 *          993 mV
1.0 V PFE1 *          991 mV
1.8 V PFE 0          1796 mV
1.8 V PFE 1          1789 mV
2.5 V                2465 mV
12.0 V              11609 mV
Power 4
1.0 V PFE0 LU0        1003 mV
1.0 V PFE1 LU0        1006 mV
1.0 V PFE1 LU2        1002 mV
1.0 V PFE0 LU0 *      1000 mV
1.0 V PFE1 LU0 *      998 mV
1.0 V PFE1 LU2 *      998 mV
12.0 V              11638 mV
12.0 V C             11702 mV
Power (Base/PMB/MMB)
LMB0 VDD2V5          2484 mV
LMB0 VDD1V8          1780 mV
LMB0 VDD1V5          1496 mV
LMB0 PFE0 LU0 AVDD1V0 998 mV
LMB0 PFE0 LU0 VDD1V0  1004 mV
LMB0 VDD12V0         10528 mV
LMB1 VDD2V5          2472 mV
LMB1 VDD1V8          1776 mV
LMB1 VDD1V5          1474 mV
LMB1 PFE0 LU2 AVDD1V0 994 mV
LMB1 PFE0 LU2 VDD1V0  1004 mV
LMB1 VDD12V0         10544 mV
LMB2 VDD2V5          2476 mV
LMB2 VDD1V8          1790 mV
LMB2 VDD1V5          1492 mV
LMB2 PFE1 LU1 AVDD1V0 996 mV
LMB2 PFE1 LU1 VDD1V0  1010 mV
LMB2 VDD12V0         10528 mV
PMB 1.05v            1050 mV
PMB 1.5v              1499 mV
PMB 2.5v              2500 mV
PMB 3.3v              3300 mV
Bus Revision          80

```

show chassis environment fpc lcc (TX Matrix Router)

```

user@host> show chassis environment fpc lcc 0
lcc0-re0:

```

FPC 1 status:

```

State                Online
Temperature Top       30 degrees C / 86 degrees F
Temperature Bottom    25 degrees C / 77 degrees F
Temperature MMB0      Absent
Temperature MMB1      27 degrees C / 80 degrees F
Power:
1.8 V                1813 mV
2.5 V                2504 mV
3.3 V                3338 mV
5.0 V                5037 mV
1.8 V bias           1797 mV
3.3 V bias           3301 mV
5.0 V bias           5013 mV
8.0 V bias           7345 mV
BUS Revision          40

```

```
FPC 2 status:
State                               Online
Temperature Top                     37 degrees C / 98 degrees F
Temperature Bottom                   26 degrees C / 78 degrees F
Temperature MMB0                     32 degrees C / 89 degrees F
Temperature MMB1                     27 degrees C / 80 degrees F
Power:
  1.8 V                             1791 mV
  2.5 V                             2517 mV
  3.3 V                             3308 mV
  5.0 V                             5052 mV
  1.8 V bias                         1797 mV
  3.3 V bias                         3289 mV
  5.0 V bias                         4991 mV
  8.0 V bias                         7477 mV
BUS Revision                         40
```

show chassis environment fpc lcc (TX Matrix Plus Router)

```
user@host> show chassis environment fpc lcc 0
lcc0-re0:
```

```
-----
FPC 1 status:
State                               Online
Temperature Top                     46 degrees C / 114 degrees F
Temperature Bottom                   47 degrees C / 116 degrees F
Power
  1.8 V                             1788 mV
  1.8 V bias                         1787 mV
  3.3 V                             3321 mV
  3.3 V bias                         3306 mV
  5.0 V bias                         5018 mV
  5.0 V TOP                          5037 mV
  8.0 V bias                         7223 mV
Power (Base/PMB/MMB)
  1.2 V                             1205 mV
  1.5 V                             1503 mV
  5.0 V BOT                          5084 mV
  12.0 V TOP Base                    11775 mV
  12.0 V BOT Base                    11794 mV
  1.1 V PMB                          1108 mV
  1.2 V PMB                          1196 mV
  1.5 V PMB                          1499 mV
  1.8 V PMB                          1811 mV
  2.5 V PMB                          2515 mV
  3.3 V PMB                          3318 mV
  5.0 V PMB                          5030 mV
  12.0 V PMB                         11832 mV
  0.75 MMB TOP                       752 mV
  1.5 V MMB TOP                      1489 mV
  1.8 V MMB TOP                      1782 mV
  2.5 V MMB TOP                      2498 mV
  1.2 V MMB TOP                      1155 mV
  5.0 V MMB TOP                      4902 mV
  12.0 V MMB TOP                     11721 mV
  3.3 V MMB TOP                      3316 mV
  0.75 MMB BOT                       754 mV
  1.5 V MMB BOT                      1482 mV
  1.8 V MMB BOT                      1758 mV
  2.5 V MMB BOT                      2488 mV
  1.2 V MMB BOT                      1157 mV
```

5.0 V MMB BOT	4962 mV
12.0 V MMB BOT	11691 mV
3.3 V MMB BOT	3308 mV
APS 00	1484 mV
APS 01	2503 mV
APS 02	3313 mV
5.0 V PIC 0	5025 mV
APS 10	1501 mV
APS 11	2466 mV
APS 12	3311 mV
5.0 V PIC 1	5081 mV
Bus Revision	49

show chassis environment fpc (QFX Series and OCX Series)

```
user@switch> show chassis environment fpc 0
FPC 0 status:
  State           Online
  Temperature      42 degrees C / 107 degrees F
```

show chassis environment fpc interconnect-device (QFabric Systems)

```
user@switch> show chassis environment fpc interconnect-device interconnect1 0
FC 0 FPC 0 status:
  State           Online
  Left Intake Temperature  24 degrees C / 75 degrees F
  Right Intake Temperature 24 degrees C / 75 degrees F
  Left Exhaust Temperature 27 degrees C / 80 degrees F
  Right Exhaust Temperature 27 degrees C / 80 degrees F
  Power
    BIAS 3V3           3330 mV
    VDD 3V3            3300 mV
    VDD 2V5            2502 mV
    VDD 1V5            1496 mV
    VDD 1V2            1194 mV
    VDD 1V0            1000 mV
    SW0 VDD 1V0        1020 mV
    SW0 CVDD 1V025     1032 mV
    SW1 VDD 1V0        1022 mV
    SW1 CVDD 1V025     1030 mV
    VDD 12V0 DIV3_33   3414 mV
```

show chassis environment fpc 0 (PTX5000 Packet Transport Router)

```
user@host> show chassis environment fpc 0
FPC 0 status:
  State           Online
  PMB Temperature   35 degrees C / 95 degrees F
  Intake Temperature 33 degrees C / 91 degrees F
  Exhaust A Temperature 51 degrees C / 123 degrees F
  Exhaust B Temperature 43 degrees C / 109 degrees F
  TL0 Temperature   48 degrees C / 118 degrees F
  TQ0 Temperature   53 degrees C / 127 degrees F
  TL1 Temperature   56 degrees C / 132 degrees F
  TQ1 Temperature   58 degrees C / 136 degrees F
  TL2 Temperature   55 degrees C / 131 degrees F
  TQ2 Temperature   57 degrees C / 134 degrees F
  TL3 Temperature   59 degrees C / 138 degrees F
  TQ3 Temperature   59 degrees C / 138 degrees F
  Power
    PMB 1.05v        1049 mV
    PMB 1.5v         1500 mV
```

PMB	2.5v	2500 mV
PMB	3.3v	3299 mV
PFE0	1.5v	1500 mV
PFE0	1.0v	999 mV
TQ0	0.9v	900 mV
TL0	0.9v	900 mV
PFE1	1.5v	1499 mV
PFE1	1.0v	999 mV
TQ1	0.9v	899 mV
TL1	0.9v	900 mV
PFE2	1.5v	1500 mV
PFE2	1.0v	1000 mV
TQ2	0.9v	900 mV
TL2	0.9v	900 mV
PFE3	1.5v	1499 mV
PFE3	1.0v	1000 mV
TQ3	0.9v	900 mV
TL3	0.9v	900 mV
Bias	3.3v	3327 mV
FPC	3.3v	3300 mV
FPC	2.5v	2500 mV
SAM	0.9v	900 mV
A	12.0v	2014 mV
B	12.0v	2030 mV

show chassis environment fpc 07 (PTX5000 Packet Transport Router with FPC2-PTX-PIA)

```
user@host> show chassis environment fpc 07
```

```
FPC 7 status:
```

State	Online
PMB TEMP0 Temperature	32 degrees C / 89 degrees F
PMB TEMP1 Temperature	28 degrees C / 82 degrees F
PMB CPU Temperature	46 degrees C / 114 degrees F
Intake Temperature	35 degrees C / 95 degrees F
Exhaust A Temperature	55 degrees C / 131 degrees F
Exhaust B Temperature	54 degrees C / 129 degrees F
TL5 Temperature	59 degrees C / 138 degrees F
TQ5 Temperature	57 degrees C / 134 degrees F
TL6 Temperature	57 degrees C / 134 degrees F
TQ6 Temperature	51 degrees C / 123 degrees F
TL1 Temperature	76 degrees C / 168 degrees F
TQ1 Temperature	58 degrees C / 136 degrees F
TL2 Temperature	75 degrees C / 167 degrees F
TQ2 Temperature	57 degrees C / 134 degrees F
TL4 Temperature	52 degrees C / 125 degrees F
TQ4 Temperature	66 degrees C / 150 degrees F
TL7 Temperature	52 degrees C / 125 degrees F
TQ7 Temperature	60 degrees C / 140 degrees F
TL0 Temperature	72 degrees C / 161 degrees F
TQ0 Temperature	73 degrees C / 163 degrees F
TL3 Temperature	64 degrees C / 147 degrees F
TQ3 Temperature	70 degrees C / 158 degrees F
Power	
PMB 1.05v	1049 mV
PMB 3.3v	3299 mV
PMB 1.1v-a	1100 mV
PMB 1.5v	1499 mV
PMB 1.1v-b	1100 mV
Base 3.3v	3300 mV
FPC Base 2.5v	2499 mV
TL1 0.9v	897 mV

TQ1	0.9v	897 mV
PFE1	1.0v	999 mV
PFE1	1.5v	1499 mV
TL2	0.9v	897 mV
TQ2	0.9v	897 mV
PFE2	1.0v	999 mV
PFE2	1.5v	1499 mV
FPC Base	1.0v	1000 mV
FPC Base	1.2v	1199 mV
TL5	0.9v	898 mV
TQ5	0.9v	898 mV
PFE5	1.0v	1000 mV
PFE5	1.5v	1500 mV
TL6	0.9v	897 mV
TQ6	0.9v	897 mV
PFE6	1.0v	1000 mV
PFE6	1.5v	1499 mV
Mezz Base	2.5v	2500 mV
TL0	0.9v	896 mV
TQ0	0.9v	896 mV
PFE0	1.0v	999 mV
PFE0	1.5v	1499 mV

show chassis environment FPC 1 (MX Routers with Media Services Blade [MSB])

```

user@switch> show chassis environment fpc 1
FPC 1 status:
State                               Online
Temperature Intake                  36 degrees C / 96 degrees F
Temperature Exhaust A               39 degrees C / 102 degrees F
Temperature LU TSen                  52 degrees C / 125 degrees F
Temperature LU Chip                  54 degrees C / 129 degrees F
Temperature XM TSen                  52 degrees C / 125 degrees F
Temperature XM Chip                  60 degrees C / 140 degrees F
Temperature PCIe TSen                52 degrees C / 125 degrees F
Temperature PCIe Chip                69 degrees C / 156 degrees F
Power
MPC-BIAS3V3-z12106                  3302 mV
MPC-VDD3V3-z16100                   3325 mV
MPC-AVDD1V0-z16100                  1007 mV
MPC-PCIE_1V0-z16100                  904 mV
MPC-LU0_1V0-z12004                   996 mV
MPC-VDD_1V5-z12004                  1498 mV
MPC-12VA-BMR453                     11733 mV
MPC-12VB-BMR453                     11728 mV
MPC-XM_0V9-vt273m                   900 mV
I2C Slave Revision                  81

```

show chassis environment pem

List of Syntax	Syntax on page 682 Syntax (ACX4000 Router) on page 682 Syntax (TX Matrix Routers) on page 682 Syntax (TX Matrix Plus Routers) on page 682 Syntax (MX Series Router) on page 682 Syntax (MX104 3D Universal Edge Routers) on page 682 Syntax (QFX Series) on page 682 Syntax (OCX Series) on page 682
Syntax	show chassis environment pem <slot>
Syntax (ACX4000 Router)	show chassis environment pem
Syntax (TX Matrix Routers)	show chassis environment pem <lcc number scc> <slot>
Syntax (TX Matrix Plus Routers)	show chassis environment pem <lcc number sfc number> <slot>
Syntax (MX Series Router)	show chassis environment pem <slot> <all-members> <local> <member member-id>
Syntax (MX104 3D Universal Edge Routers)	show chassis environment pem <slot>
Syntax (QFX Series)	show chassis environment pem <slot (interconnect-device name slot) (node-device name)>
Syntax (OCX Series)	show chassis environment pem <slot>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS 11.3 for the QFX Series. Command introduced in Junos OS 12.3R2 for EX Series. Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display Power Entry Module (PEM) environmental status information.



NOTE: The new high-capacity (4100W) enhanced DC PEM on MX960 routers includes a new design that can condition the input voltage. This results in the output voltage differing from the input voltage. The earlier generation of DC PEMs coupled the input power directly to the output, thereby making it safe to assume that the output voltage was equal to the input voltage.

- Options** **none**—Display environmental information about both PEMs. For the TX Matrix router, display environmental information about the PEMs, the TX Matrix router, and its attached T640 routers. For the TX Matrix Plus router, display environmental information about the PEMs, the TX Matrix Plus router, and its attached routers.
- all-members**—(MX Series routers only) (Optional) Display environmental information about the PEMs in all the member routers of the Virtual Chassis configuration.
- interconnect-device *name***—(QFabric systems only) (Optional) Display chassis environmental information about the PEMs in the Interconnect device.
- lcc *number***—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.
Replace *number* with the following values depending on the LCC configuration:
- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
 - 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
 - 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
 - 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- local**—(MX Series routers only) (Optional) Display environmental information about the PEM in the local Virtual Chassis member.
- member *member-id***—(MX Series routers only) (Optional) Display environmental information about the PEM in the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.
- node-device *name***—(QFabric systems only) (Optional) Display chassis environmental information about the PEMs in the Node device.
- scc**—(TX Matrix routers only) (Optional) Display environmental information about the PEM in the TX Matrix router (switch-card chassis).
- sfc**—(TX Matrix Plus routers only) (Optional) Display environmental information about the PEM in the TX Matrix Plus router (or switch-fabric chassis).

slot —(Optional) Display environmental information about an individual PEM. Replace **slot** with 0 or 1.

Required Privilege Level view

Related Documentation • [show chassis hardware on page 758](#)

List of Sample Output [show chassis environment pem \(M40e Router\) on page 685](#)
[show chassis environment pem \(M120 Router\) on page 685](#)
[show chassis environment pem \(M160 Router\) on page 686](#)
[show chassis environment pem \(M320 Router\) on page 686](#)
[show chassis environment pem \(MX104 Router\) on page 686](#)
[show chassis environment pem \(MX240 Router\) on page 686](#)
[show chassis environment pem \(MX480 Router\) on page 687](#)
[show chassis environment pem \(MX960 Router\) on page 687](#)
[show chassis environment pem \(T320 Router\) on page 687](#)
[show chassis environment pem \(T640 Router\) on page 687](#)
[show chassis environment pem \(T4000 Router\) on page 687](#)
[show chassis environment pem \(T640/T1600/T4000 Routers With Six-Input DC Power Supply\) on page 688](#)
[show chassis environment pem lcc \(TX Matrix Routing Matrix\) on page 688](#)
[show chassis environment pem scc \(TX Matrix Routing Matrix\) on page 689](#)
[show chassis environment pem sfc \(TX Matrix Plus Routing Matrix\) on page 689](#)
[show chassis environment pem lcc \(TX Matrix Plus Routing Matrix\) on page 689](#)
[show chassis environment pem node-device \(QFabric System\) on page 690](#)
[show chassis environment pem \(QFX Series and OCX Series\) on page 690](#)
[show chassis environment pem interconnect-device \(QFabric System\) on page 690](#)

Output Fields [Table 37 on page 684](#) lists the output fields for the **show chassis environment pem** command. Output fields are listed in the approximate order in which they appear.

Table 37: show chassis environment pem Output Fields

Field Name	Field Description
PEM <i>slot</i> status	Number of the PEM slot.
State	Status of the PEM.
Temperature	Temperature of the air flowing past the PEM.
AC Input	Status of the AC input for the specified component
AC Output	Status of the AC output for the specified component.
DC input	Status of the DC input for the specified component.
DC output	Status of the DC output for the specified component.

Table 37: show chassis environment pem Output Fields (*continued*)

Field Name	Field Description
Load	(Not available on M40e or M160 routers) Information about the load on supply, in percentage of rated current being used.
Voltage	(M120, M160, M320, MX240, MX480, MX960, T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about voltage supplied to the PEM. (MX104 routers only) Information about voltage supplied by the PEM to the system.
Current	(MX240, MX480, MX960, T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about the PEM current.
Power	(MX240, MX480, MX960, T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about the PEM power.
SCG/CB/SIB	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) SONET Clock Generator/Control Board/Switch Interface Board.
FAN	(T640, T1600, and T4000 routers with six-input DC power supply only) Information about the DC output to the fan.

Sample Output

show chassis environment pem (M40e Router)

```

user@host> show chassis environment pem
PEM 0 status:
  State                Online
  Temperature          OK
  AC input             OK
  DC output            OK

```

show chassis environment pem (M120 Router)

```

user@host> show chassis environment pem
PEM 0 status:
  State                Online
  Temperature          OK
  DC Input:            OK
  DC Output:           OK
  Load                Less than 20 percent
  Voltage:
    48.0 V input       52864 mV
    48.0 V fan supply  41655 mV
    3.3 V              3399 mV
PEM 1 status:
  State                Online
  Temperature          OK
  DC Input:            OK
  DC Output:           OK
  Load                Less than 20 percent
  Voltage:
    48.0 V input       54537 mV
    48.0 V fan supply  42910 mV
    3.3 V              3506 mV

```

show chassis environment pem (M160 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                Online
  Temperature           OK
  DC input              OK
  DC output             OK
  Load                 Less than 20 percent
  Voltage:
    48.0 V input        54833 mV
    48.0 V fan supply   50549 mV
    8.0 V bias          8239 mV
    5.0 V bias          5006 mV
```

show chassis environment pem (M320 Router)

```
user@host> show chassis environment pem
PEM 2 status:
  State                Online
  Temperature           OK
  DC input              OK
  Load                 Less than 40 percent
    48.0 V input        51853 mV
    48.0 V fan supply   48877 mV
    8.0 V bias          8449 mV
    5.0 V bias          4998 mV
PEM 3 status:
  State                Online
  Temperature           OK
  DC input              OK
  Load                 Less than 40 percent
    48.0 V input        51717 mV
    48.0 V fan supply   49076 mV
    8.0 V bias          8442 mV
    5.0 V bias          4998 mV
```

show chassis environment pem (MX104 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                Online
  Temperature           OK
  DC Output:           OK
  Voltage:
    12.0 V output       12281 mV
    3.3 V output        3353 mV
PEM 1 status:
  State                Empty
```

show chassis environment pem (MX240 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                Online
  Temperature           OK
  DC Output             Voltage(V) Current(A) Power(W) Load(%)
                        51          4         204      12
PEM 1 status:
  State                Online
  Temperature           OK
```

DC Output	Voltage(V)	Current(A)	Power(W)	Load(%)
	51	4	204	12

show chassis environment pem (MX480 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State           Online
  Temperature      OK
  DC Input:        OK
  DC Output        Voltage(V) Current(A) Power(W) Load(%)
                  51         4       204    12
PEM 1 status:
  State           Online
  Temperature      OK
  DC Input:        OK
  DC Output        Voltage(V) Current(A) Power(W) Load(%)
                  51         4       204    12
```

show chassis environment pem (MX960 Router)

```
user@host> show chassis environment pem
PEM 2 status:
  State           Present
PEM 3 status:
  State           Online
  Temperature      OK
  DC Output        Voltage(V) Current(A) Power(W) Load(%)
                  51         4       204    12
```

show chassis environment pem (T320 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State           Online
  Temperature      OK
  DC input:        OK
```

show chassis environment pem (T640 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State           Online
  Temperature      22 degrees C / 71 degrees F
  AC input: OK
  DC output:
    Voltage      Current      Power      Load
    FPC 0        56875        606        34        4
    FPC 1        57016        525        29        3
    FPC 2         0         0         0         0
    FPC 3         0         0         0         0
    FPC 4         0         0         0         0
    FPC 5         0         0         0         0
    FPC 6        57158        1581       90        12
    FPC 7         0         0         0         0
  SCG/CB/SIB     56750        1125       63         5
```

show chassis environment pem (T4000 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State           Online
  Temperature      33 degrees C / 91 degrees F
```

```

DC Input:                               OK
Voltage(V) Current(A) Power(W) Load(%)
INPUT 0      54.625      9.812      535      22
INPUT 1      54.625     10.250      559      23
INPUT 2      55.125      0.125        6       0
INPUT 3      54.500     10.062      548      22
INPUT 4      54.750      9.375      513      21
INPUT 5      54.750     10.187      557      23
DC Output    Voltage(V) Current(A) Power(W) Load(%)
FPC 0        55.750     10.125      564      37
FPC 1        51.625      0.000        0       0
FPC 2        52.000      0.000        0       0
FPC 3        55.062     10.437      574      38
FPC 4        52.125      0.000        0       0
FPC 5        55.000      9.375      515      34
FPC 6        55.187      9.687      534      35
FPC 7        51.437      0.000        0       0
SCG/CB/SIB   55.375     15.750      872      35
FAN          54.562     14.750      804      42

```

show chassis environment pem (T640/T1600/T4000 Routers With Six-Input DC Power Supply)

```

user@host> show chassis environment pem
PEM 1 status:
State                Online
Temperature          36 degrees C / 96 degrees F
DC Input:            OK
Voltage(V) Current(A) Power(W) Load(%)
INPUT 0      0.000      0.000        0       0
INPUT 1      54.875      3.812       209      27
INPUT 2      55.375      3.937       218      29
INPUT 3      54.625      3.750       204      27
INPUT 4      55.125      3.375       186      24
INPUT 5      55.125      3.375       186      24
DC Output    Voltage(V) Current(A) Power(W) Load(%)
FPC 0        52.312      0.000        0       0
FPC 1        52.687      0.000        0       0
FPC 2        52.812      0.000        0       0
FPC 3        55.812      7.062       394      52
FPC 4        52.625      0.000        0       0
FPC 5        52.625      0.000        0       0
FPC 6        52.750      0.000        0       0
FPC 7        52.750      0.000        0       0
SCG/CB/SIB   55.937     11.937       667      55
FAN          55.812      4.937       275      36

```

show chassis environment pem lcc (TX Matrix Routing Matrix)

```

user@host> show chassis environment pem 0 lcc 0
lcc0-re0:

```

```

-----
PEM 0 status:
State                Present
Temperature          27 degrees C / 80 degrees F
DC input:            Check
DC output:           Voltage Current Power Load
FPC 0                0        0        0        0
FPC 1                0        0        0        0
FPC 2                0        0        0        0
FPC 3                0        0        0        0
FPC 4                0        0        0        0

```

FPC 5	0	0	0	0
FPC 6	0	0	0	0
FPC 7	0	0	0	0
SCG/CB/SIB	0	0	0	0

show chassis environment pem scc (TX Matrix Routing Matrix)

```
user@host> show chassis environment pem scc
scc-re0:
```

```
-----
PEM 1 status:
State                Online
Temperature          24 degrees C / 75 degrees F
DC input:            OK
DC output:           Voltage Current      Power      Load
SIB 0                0         0         0         0
SIB 1                0         0         0         0
SIB 2                0         0         0         0
SIB 3                56550        0         0         0
SIB 4                55958       6912       386        51
```

show chassis environment pem sfc (TX Matrix Plus Routing Matrix)

```
user@host> show chassis environment pem sfc 0
sfc0-re0:
```

```
-----
PEM 0 status:
State                Online
Temperature          35 degrees C / 95 degrees F
DC Input:            OK
DC Output           Voltage Current      Power      Load
Channel 0           53820    14140       761        59
Channel 1           53550    12720       681        53
Channel 2           53840    12930       696        54
Channel 3           53690    14990       804        63
Channel 4           53620    15070       808        63
Channel 5           53900    14820       798        62
Channel 6           54120     5020       271        21
```

show chassis environment pem lcc (TX Matrix Plus Routing Matrix)

```
user@host> show chassis environment lcc 0
```

```
lcc0-re1:
```

```
-----
PEM 0 status:
State                Online
Temperature          38 degrees C / 100 degrees F
DC Input:            OK
DC Output           Voltage Current      Power      Load
FPC 0                0         0         0         0
FPC 1                0         0         0         0
FPC 2                0         0         0         0
FPC 3                0         0         0         0
FPC 4                56408    7575       427        56
FPC 5                0         0         0         0
FPC 6                56266    7956       447        59
FPC 7                56283    6100       343        45
SCG/CB/SIB           55916    8950       500        41
PEM 1 status:
State                Present
Temperature          35 degrees C / 95 degrees F
```

DC Input:	Check			
DC Output	Voltage	Current	Power	Load
FPC 0	0	0	0	0
FPC 1	0	0	0	0
FPC 2	0	0	0	0
FPC 3	0	0	0	0
FPC 4	0	0	0	0
FPC 5	0	0	0	0
FPC 6	0	0	0	0
FPC 7	0	0	0	0
SCG/CB/SIB	0	0	0	0

show chassis environment pem node-device (QFabric System)

```

user@switch> show chassis environment pem node-device node1
FPC 0 PEM 0 status:
  State                Check
  Airflow              Front to Back
  Temperature          OK
  AC Input:            OK
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                      12          10       120     18
FPC 0 PEM 1 status:
  State                Online
  Airflow              Back to Front
  Temperature          OK
  AC Input:            OK
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                      11          10       110     17

```

show chassis environment pem (QFX Series and OCX Series)

```

user@switch> show chassis environment pem
FPC 0 PEM 1 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK
  AC Input:            OK
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                      12          17       204     31

```

show chassis environment pem interconnect-device (QFabric System)

```

user@switch> show chassis environment pem interconnect-device IC11
IC1 PEM 1 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK
  AC Input:            OK
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                      12          18       216     33

```


show chassis environment routing-engine

List of Syntax	Syntax on page 691 Syntax (TX Matrix Routers) on page 691 Syntax (TX Matrix Plus Routers) on page 691 Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers) on page 691 Syntax (MX Series Routers) on page 691 Syntax (QFX Series) on page 691 Syntax (OCX Series) on page 691
Syntax	show chassis environment routing-engine <slot>
Syntax (TX Matrix Routers)	show chassis environment routing-engine <lcc number scc> <slot>
Syntax (TX Matrix Plus Routers)	show chassis environment routing-engine <lcc number sfc number> <slot>
Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers)	show chassis environment routing-engine <slot>
Syntax (MX Series Routers)	show chassis environment routing-engine <slot> <all-members> <local> <member member-id>
Syntax (QFX Series)	show chassis environment routing-engine interconnect-device <i>name</i>
Syntax (OCX Series)	show chassis environment routing-engine
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.1 for the T4000 Core Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display Routing Engine environmental status information.

- Options** **none**—Display environmental information about all Routing Engines. For a TX Matrix router, display environmental information about all Routing Engines on the TX Matrix router and its attached T640 routers. For a TX Matrix Plus router, display environmental information about all Routing Engines on the TX Matrix Plus router and its attached routers.
- all-members**—(MX Series routers only) (Optional) Display environmental information about the Routing Engines in all member routers in the Virtual Chassis configuration.
- interconnect-device *name***—(QFabric systems only) (Optional) Display environmental information about the Routing Engines for the Interconnect device.
- lcc *number***—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.
Replace *number* with the following values depending on the LCC configuration:
- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
 - 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
 - 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
 - 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- local**—(MX Series routers only) (Optional) Display environmental information about the Routing Engines in the local Virtual Chassis member.
- member *member-id***—(MX Series routers only) (Optional) Display environmental information about the Routing Engines in the specified member in the Virtual Chassis configuration. Replace *member-id* with the value of 0 or 1.
- scc**—(TX Matrix router only) (Optional) Display environmental information about the Routing Engine in the TX Matrix router (switch-card chassis).
- sfc**—(TX Matrix Plus router only) (Optional) Display environmental information about the Routing Engine in the TX Matrix Plus router (or switch-fabric chassis).
- slot**—(Optional) Display environmental information about an individual Routing Engine. On M10i, M20, M40e, M120, M160, M320, MX Series, MX104 routers, MX2010 routers, MX2020 routers, and T Series routers, replace *slot* with 0 or 1. On M5, M7i, M10, and M40 routers and on the J Series router, replace *slot* with 0. On EX3200 and EX4200 standalone switches, replace *slot* with 0. On EX4200 switches in a Virtual Chassis configuration and on EX8208 and EX8216 switches, replace *slot* with 0 or 1. On the QFX3500 switch, there is only one Routing Engine, so you do not need to specify the slot number. On PTX Series Packet Transport Routers, replace *slot* with 0 or 1.

Required Privilege Level view

- Related Documentation**
- [request chassis routing-engine master on page 393](#)
 - [show chassis routing-engine on page 982](#)

- List of Sample Output**
- [show chassis environment routing-engine \(Nonredundant\) on page 693](#)
 - [show chassis environment routing-engine \(Redundant\) on page 693](#)
 - [show chassis environment routing-engine \(MX104 Router\) on page 694](#)
 - [show chassis environment routing-engine \(MX2010 Router\) on page 694](#)
 - [show chassis environment routing-engine \(MX2020 Router\) on page 694](#)
 - [show chassis environment routing-engine \(TX Matrix Plus Router\) on page 694](#)
 - [show chassis environment routing-engine \(T4000 Core Router\) on page 695](#)
 - [show chassis environment routing-engine \(QFX Series and OCX Series\) on page 695](#)
 - [show chassis environment routing-engine interconnect-device \(QFabric System\) on page 695](#)
 - [show chassis environment routing-engine \(PTX5000 Packet Transport Router\) on page 695](#)

- Output Fields**
- Table 38 on page 693 lists the output fields for the **show chassis environment routing-engine** command. Output fields are listed in the approximate order in which they appear.

Table 38: show chassis environment routing-engine Output Fields

Field Name	Field Description
Routing engine <i>slot</i> status	Number of the Routing Engine slot: 0 or 1.
State	Status of the Routing Engine: <ul style="list-style-type: none"> • Online Master—Routing Engine is online, operating as Master. • Online Standby—Routing Engine is online, operating as Standby. • Offline—Routing Engine is offline.
Temperature	Temperature of the air flowing past the Routing Engine.
CPU Temperature	(PTX Series and T4000 Core Routers only) Temperature of the air flowing past the Routing Engine CPU.

Sample Output

show chassis environment routing-engine (Nonredundant)

```
user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State                Online Master
  Temperature          27 degrees C / 80 degrees
```

show chassis environment routing-engine (Redundant)

```
user@host> show chassis environment routing-engine
Route Engine 0 status:
  State                Online Master
  Temperature:         26 degrees C / 78 degrees F
Route Engine 1 status:
```

```

State:                Online Standby
Temperature:          26 degrees C / 78 degrees F

```

show chassis environment routing-engine (MX104 Router)

```

user@ host >show chassis environment routing-engine
Routing Engine 0 status:
  State                Online Master
  Temperature          34 degrees C / 93 degrees F
  CPU Temperature      43 degrees C / 109 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature          33 degrees C / 91 degrees F
  CPU Temperature      39 degrees C / 102 degrees F

```

show chassis environment routing-engine (MX2010 Router)

```

user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State                Online Master
  Temperature          37 degrees C / 98 degrees F
  CPU Temperature      37 degrees C / 98 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature          35 degrees C / 95 degrees F
  CPU Temperature      34 degrees C / 93 degrees F

```

show chassis environment routing-engine (MX2020 Router)

```

user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State                Online Master
  Temperature          35 degrees C / 95 degrees F
  CPU Temperature      34 degrees C / 93 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature          44 degrees C / 111 degrees F
  CPU Temperature      43 degrees C / 109 degrees F

```

show chassis environment routing-engine (TX Matrix Plus Router)

```

user@host> show chassis environment routing-engine
sfc0-re0:
-----
Routing Engine 0 status:
  State                Online Master
  Temperature          26 degrees C / 78 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature          28 degrees C / 82 degrees F

lcc0-re0:
-----
Routing Engine 0 status:
  State                Online Master
  Temperature          30 degrees C / 86 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature          29 degrees C / 84 degrees F

```

show chassis environment routing-engine (T4000 Core Router)

```

user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  Temperature      33 degrees C / 91 degrees F
  CPU Temperature  50 degrees C / 122 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      33 degrees C / 91 degrees F
  CPU Temperature  46 degrees C / 114 degrees F

```

show chassis environment routing-engine (QFX Series and OCX Series)

```

user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  Temperature      42 degrees C / 107 degrees F

```

show chassis environment routing-engine interconnect-device (QFabric System)

```

user@switch> show chassis environment routing-engine interconnect-device interconnect1
routing-engine interconnect-device interconnect1
Routing Engine 0 status:
  State           Online Standby
  Temperature      52 degrees C / 125 degrees F
Routing Engine 1 status:
  State           Online Master
  Temperature      57 degrees C / 134 degrees F

```

show chassis environment routing-engine (PTX5000 Packet Transport Router)

```

user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  Temperature      55 degrees C / 131 degrees F
  CPU Temperature  66 degrees C / 150 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      52 degrees C / 125 degrees F
  CPU Temperature  64 degrees C / 147 degrees F

```

show chassis fan

List of Syntax	Syntax on page 696 Syntax (ACX4000 Series Router) on page 696 Syntax (MX Series Router) on page 696 Syntax (T Series Routers) on page 696 Syntax (MX104, MX2010, and MX2020 3D Universal Edge Router) on page 696 Syntax (QFX Series) on page 696 Syntax (OCX Series) on page 696 Syntax (TX Matrix Router) on page 696 Syntax (TX Matrix Plus Router) on page 696
Syntax	show chassis fan
Syntax (ACX4000 Series Router)	show chassis fan
Syntax (MX Series Router)	show chassis fan <all-members> <local> <member <i>member-id</i> >
Syntax (T Series Routers)	show chassis fan
Syntax (MX104, MX2010, and MX2020 3D Universal Edge Router)	show chassis fan
Syntax (QFX Series)	show chassis fan <interconnect-device <i>name</i> >
Syntax (OCX Series)	show chassis fan
Syntax (TX Matrix Router)	show chassis fan <lcc <i>number</i> scc>
Syntax (TX Matrix Plus Router)	show chassis fan <lcc <i>number</i> sfc <i>number</i> >
Release Information	Command introduced in Junos OS Release 10.0 on MX Series 3D Universal Edge Routers, M120 routers, and M320 routers, T320 routers, T640 routers, T1600 routers, TX Matrix Routers, and TX Matrix Plus routers. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 11.4 for EX Series switches. Command introduced in Junos OS Release 12.3 for PTX5000 Packet Transport Routers. Command introduced in Junos OS Release 12.1 for T4000 routers. Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers. Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers. Command introduced in Junos OS Release 12.3 for ACX Series Routers.

Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description (T Series routers, TX Matrix routers, TX Matrix Plus routers, M120 routers, M320 routers, MX104 routers, MX2010 routers, MX2020 routers, MX Series 3D Universal Edge Routers, QFX3008-I Interconnect devices, QFX Series, OCX Series, EX Series switches, and PTX Series Packet Transport Routers only) Show information about the fan tray and fans.

Options **all-members**—(MX Series routers only) (Optional) Display information about the fan tray and fans for all members of the Virtual Chassis configuration.

local—(MX Series routers only) (Optional) Display information about the fan tray and fans for the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display information about the fan tray and fans for the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* variable with a value 0 or 1.

interconnect-device *name*—(QFX3000-G QFabric systems only) (Optional) Display information about the fan tray and fans for the specified QFX3008-I Interconnect device.

lcc *number*—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display information about the fan tray and fans for the specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display information about the fan tray and fans for the specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

scc—(TX Matrix routers only) (Optional) Display information about the fan tray and fans for the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Display information about the fan tray and fans for the TX Matrix Plus router (switch-fabric chassis). Replace *number* variable with 0.

Required Privilege Level view

List of Sample Output [show chassis fan on page 699](#)

[show chassis fan \(QFabric Systems\) on page 699](#)
[show chassis fan \(EX Series Switches\) on page 700](#)
[show chassis fan \(T320 Router\) on page 701](#)
[show chassis fan \(T640 Router\) on page 701](#)
[show chassis fan \(T1600 Router\) on page 701](#)
[show chassis fan \(T4000 Core Router\) on page 702](#)
[show chassis fan \(TX Matrix Router\) on page 702](#)
[show chassis fan \(TX Matrix Plus Router\) on page 703](#)
[show chassis fan \(TX Matrix Plus Router with 3D SIBs\) on page 704](#)
[show chassis fan \(PTX5000 Packet Transport Router\) on page 706](#)
[show chassis fan \(MX104 Router\) on page 707](#)
[show chassis fan \(MX2010 Router\) on page 707](#)
[show chassis fan \(MX2020 Router\) on page 707](#)
[show chassis fan \(ACX4000 Router\) on page 708](#)
[show chassis fan \(QFX5100 Switch and OCX Series\) on page 708](#)

Output Fields Table 39 on page 698 lists the output fields for the **show chassis fan** command. Output fields are listed in the approximate order in which they appear.

Table 39: show chassis fan Output Fields

Field Name	Field Description
Item	Fan item identifier.
Status	Status of the fan: <ul style="list-style-type: none"> • OK—Fan is running properly and within the normal range. • Check—Fan is in Check state because of some fault or alarm condition.
RPM	(T Series routers, TX Matrix routers, TX Matrix Plus routers, MX Series 3D Universal Edge Routers, QFX3108 Interconnect devices, and EX Series switches only) Fan speed in revolutions per minute (RPM).
% RPM	(MX2010 routers, MX2020 routers, and PTX Series Packet Transport Routers only) Percentage of the fan speed being used.
Measurement	(T Series routers, TX Matrix routers, TX Matrix Plus routers, MX Series 3D Universal Edge Routers, QFX3108 Interconnect devices, and EX Series switches only) Fan speed status based on different chassis cooling requirements: <ul style="list-style-type: none"> • Spinning at high speed • Spinning at intermediate speed • Spinning at normal speed • Spinning at low speed (except EX Series switches) (MX2010 routers, MX2020 routers, and PTX Series Packet Transport Routers only) Fan speed in revolutions per minute (RPM) for each fan in the fan tray.

Sample Output

show chassis fan

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Tray Fan 1	OK	3790	Spinning at normal speed
Top Tray Fan 2	OK	3769	Spinning at normal speed
Top Tray Fan 3	OK	3769	Spinning at normal speed
Top Tray Fan 4	OK	3790	Spinning at normal speed
Top Tray Fan 5	OK	3790	Spinning at normal speed
Top Tray Fan 6	OK	3769	Spinning at normal speed
Top Tray Fan 7	OK	3790	Spinning at normal speed
Top Tray Fan 8	OK	3769	Spinning at normal speed
Top Tray Fan 9	OK	3769	Spinning at normal speed
Top Tray Fan 10	OK	3790	Spinning at normal speed
Top Tray Fan 11	OK	3790	Spinning at normal speed
Top Tray Fan 12	OK	3769	Spinning at normal speed
Bottom Tray Fan 1	OK	2880	Spinning at normal speed
Bottom Tray Fan 2	OK	2912	Spinning at normal speed
Bottom Tray Fan 3	OK	2928	Spinning at normal speed
Bottom Tray Fan 4	OK	2896	Spinning at normal speed
Bottom Tray Fan 5	OK	2896	Spinning at normal speed
Bottom Tray Fan 6	OK	2928	Spinning at normal speed

show chassis fan (QFabric Systems)

```
user@host> show chassis fan interconnect-device interconnect1
```

Item	Status	RPM	Measurement
TFT 0 Fan 0	OK	2849	Spinning at normal speed
TFT 0 Fan 1	OK	2821	Spinning at normal speed
TFT 0 Fan 2	OK	2735	Spinning at normal speed
TFT 0 Fan 3	OK	2815	Spinning at normal speed
TFT 0 Fan 4	OK	2828	Spinning at normal speed
TFT 0 Fan 5	OK	2863	Spinning at normal speed
BFT 1 Fan 0	OK	2941	Spinning at normal speed
BFT 1 Fan 1	OK	3008	Spinning at normal speed
BFT 1 Fan 2	OK	3073	Spinning at normal speed
BFT 1 Fan 3	OK	2925	Spinning at normal speed
BFT 1 Fan 4	OK	2863	Spinning at normal speed
BFT 1 Fan 5	OK	2933	Spinning at normal speed
SFT 0 Fan 0 Rotor 0	OK	15472	Spinning at normal speed
SFT 0 Fan 0 Rotor 1	OK	14477	Spinning at normal speed
SFT 0 Fan 1 Rotor 0	OK	15561	Spinning at normal speed
SFT 0 Fan 1 Rotor 1	OK	14210	Spinning at normal speed
SFT 0 Fan 2 Rotor 0	OK	16167	Spinning at normal speed
SFT 0 Fan 2 Rotor 1	OK	14248	Spinning at normal speed
SFT 0 Fan 3 Rotor 0	OK	16463	Spinning at normal speed
SFT 0 Fan 3 Rotor 1	OK	14099	Spinning at normal speed
SFT 1 Fan 0 Rotor 0	OK	15083	Spinning at normal speed
SFT 1 Fan 0 Rotor 1	OK	13533	Spinning at normal speed
SFT 1 Fan 1 Rotor 0	OK	16071	Spinning at normal speed
SFT 1 Fan 1 Rotor 1	OK	14400	Spinning at normal speed
SFT 1 Fan 2 Rotor 0	OK	15517	Spinning at normal speed
SFT 1 Fan 2 Rotor 1	OK	14210	Spinning at normal speed
SFT 1 Fan 3 Rotor 0	OK	16413	Spinning at normal speed
SFT 1 Fan 3 Rotor 1	OK	14400	Spinning at normal speed
SFT 2 Fan 0 Rotor 0	OK	15297	Spinning at normal speed
SFT 2 Fan 0 Rotor 1	OK	14634	Spinning at normal speed

SFT 2 Fan 1 Rotor 0	OK	15561	Spinning at normal speed
SFT 2 Fan 1 Rotor 1	OK	14285	Spinning at normal speed
SFT 2 Fan 2 Rotor 0	OK	15835	Spinning at normal speed
SFT 2 Fan 2 Rotor 1	OK	14400	Spinning at normal speed
SFT 2 Fan 3 Rotor 0	OK	15789	Spinning at normal speed
SFT 2 Fan 3 Rotor 1	OK	14323	Spinning at normal speed
SFT 3 Fan 0 Rotor 0	OK	16314	Spinning at normal speed
SFT 3 Fan 0 Rotor 1	OK	14876	Spinning at normal speed
SFT 3 Fan 1 Rotor 0	OK	15835	Spinning at normal speed
SFT 3 Fan 1 Rotor 1	OK	14323	Spinning at normal speed
SFT 3 Fan 2 Rotor 0	OK	16265	Spinning at normal speed
SFT 3 Fan 2 Rotor 1	OK	14594	Spinning at normal speed
SFT 3 Fan 3 Rotor 0	OK	16071	Spinning at normal speed
SFT 3 Fan 3 Rotor 1	OK	14323	Spinning at normal speed
SFT 4 Fan 0 Rotor 0	OK	15652	Spinning at normal speed
SFT 4 Fan 0 Rotor 1	OK	14438	Spinning at normal speed
SFT 4 Fan 1 Rotor 0	OK	16167	Spinning at normal speed
SFT 4 Fan 1 Rotor 1	OK	14555	Spinning at normal speed
SFT 4 Fan 2 Rotor 0	OK	16023	Spinning at normal speed
SFT 4 Fan 2 Rotor 1	OK	14361	Spinning at normal speed
SFT 4 Fan 3 Rotor 0	OK	16216	Spinning at normal speed
SFT 4 Fan 3 Rotor 1	OK	14438	Spinning at normal speed
SFT 5 Fan 0 Rotor 0	OK	15297	Spinning at normal speed
SFT 5 Fan 0 Rotor 1	OK	14173	Spinning at normal speed
SFT 5 Fan 1 Rotor 0	OK	15472	Spinning at normal speed
SFT 5 Fan 1 Rotor 1	OK	13846	Spinning at normal speed
SFT 5 Fan 2 Rotor 0	OK	15340	Spinning at normal speed
SFT 5 Fan 2 Rotor 1	OK	13917	Spinning at normal speed
SFT 5 Fan 3 Rotor 0	OK	15835	Spinning at normal speed
SFT 5 Fan 3 Rotor 1	OK	13917	Spinning at normal speed
SFT 6 Fan 0 Rotor 0	OK	15743	Spinning at normal speed
SFT 6 Fan 0 Rotor 1	OK	14594	Spinning at normal speed
SFT 6 Fan 1 Rotor 0	OK	16167	Spinning at normal speed
SFT 6 Fan 1 Rotor 1	OK	14634	Spinning at normal speed
SFT 6 Fan 2 Rotor 0	OK	16167	Spinning at normal speed
SFT 6 Fan 2 Rotor 1	OK	14516	Spinning at normal speed
SFT 6 Fan 3 Rotor 0	OK	16666	Spinning at normal speed
SFT 6 Fan 3 Rotor 1	OK	14438	Spinning at normal speed
SFT 7 Fan 0 Rotor 0	OK	15517	Spinning at normal speed
SFT 7 Fan 0 Rotor 1	OK	14438	Spinning at normal speed
SFT 7 Fan 1 Rotor 0	OK	15517	Spinning at normal speed
SFT 7 Fan 1 Rotor 1	OK	14361	Spinning at normal speed
SFT 7 Fan 2 Rotor 0	OK	16167	Spinning at normal speed
SFT 7 Fan 2 Rotor 1	OK	14555	Spinning at normal speed
SFT 7 Fan 3 Rotor 0	OK	15697	Spinning at normal speed
SFT 7 Fan 3 Rotor 1	OK	14361	Spinning at normal speed

show chassis fan (EX Series Switches)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Fan 1	OK	3477	Spinning at normal speed
Fan 2	OK	3477	Spinning at normal speed
Fan 3	OK	3479	Spinning at normal speed
Fan 4	OK	3508	Spinning at normal speed
Fan 5	OK	3517	Spinning at normal speed
Fan 6	OK	3531	Spinning at normal speed
Fan 7	OK	3439	Spinning at normal speed
Fan 8	OK	3424	Spinning at normal speed
Fan 9	OK	3413	Spinning at normal speed

Fan 10	OK	3439	Spinning at normal speed
Fan 11	OK	3446	Spinning at normal speed
Fan 12	OK	3432	Spinning at normal speed

show chassis fan (T320 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	2850	Spinning at normal speed
Top Left Middle fan	OK	2820	Spinning at normal speed
Top Left Rear fan	OK	2970	Spinning at normal speed
Top Right Front fan	OK	2790	Spinning at normal speed
Top Right Middle fan	OK	2640	Spinning at normal speed
Top Right Rear fan	OK	2790	Spinning at normal speed
Bottom Left Front fan	OK	2520	Spinning at normal speed
Bottom Left Middle fan	OK	2610	Spinning at normal speed
Bottom Left Rear fan	OK	2550	Spinning at normal speed
Bottom Right Front fan	OK	2610	Spinning at normal speed
Bottom Right Middle fan	OK	2880	Spinning at normal speed
Bottom Right Rear fan	OK	2790	Spinning at normal speed
Rear Tray Top fan	OK	2130	Spinning at normal speed
Rear Tray Second fan	OK	2190	Spinning at normal speed
Rear Tray Middle fan	OK	2250	Spinning at normal speed
Rear Tray Fourth fan	OK	2220	Spinning at normal speed
Rear Tray Bottom fan	OK	2280	Spinning at normal speed

show chassis fan (T640 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3450	Spinning at normal speed
Bottom Left Front fan	OK	3390	Spinning at normal speed
Bottom Left Middle fan	OK	3420	Spinning at normal speed
Bottom Left Rear fan	OK	3390	Spinning at normal speed
Bottom Right Front fan	OK	3390	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3390	Spinning at normal speed
Rear Tray Top fan	OK	5220	Spinning at normal speed
Rear Tray Second fan	OK	5220	Spinning at normal speed
Rear Tray Third fan	OK	5220	Spinning at normal speed
Rear Tray Fourth fan	OK	5220	Spinning at normal speed
Rear Tray Fifth fan	OK	5220	Spinning at normal speed
Rear Tray Sixth fan	OK	5220	Spinning at normal speed
Rear Tray Seventh fan	OK	5220	Spinning at normal speed
Rear Tray Bottom fan	OK	5220	Spinning at normal speed

show chassis fan (T1600 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3450	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed

Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3390	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3420	Spinning at normal speed
Bottom Left Rear fan	OK	3390	Spinning at normal speed
Bottom Right Front fan	OK	3390	Spinning at normal speed
Bottom Right Middle fan	OK	3420	Spinning at normal speed
Bottom Right Rear fan	OK	3390	Spinning at normal speed
Rear Tray Top fan	OK	5190	Spinning at normal speed
Rear Tray Second fan	OK	5190	Spinning at normal speed
Rear Tray Third fan	OK	5190	Spinning at normal speed
Rear Tray Fourth fan	OK	5190	Spinning at normal speed
Rear Tray Fifth fan	OK	5190	Spinning at normal speed
Rear Tray Sixth fan	OK	5190	Spinning at normal speed
Rear Tray Seventh fan	OK	5190	Spinning at normal speed
Rear Tray Bottom fan	OK	5190	Spinning at normal speed

show chassis fan (T4000 Core Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	5190	Spinning at high speed
Top Left Middle fan	OK	5220	Spinning at high speed
Top Left Rear fan	OK	5190	Spinning at high speed
Top Right Front fan	OK	5160	Spinning at high speed
Top Right Middle fan	OK	5190	Spinning at high speed
Top Right Rear fan	OK	5160	Spinning at high speed
Bottom Left Front fan	OK	6030	Spinning at high speed
Bottom Left Middle fan	OK	6090	Spinning at high speed
Bottom Left Rear fan	OK	6090	Spinning at high speed
Bottom Right Front fan	OK	6030	Spinning at high speed
Bottom Right Middle fan	OK	6060	Spinning at high speed
Bottom Right Rear fan	OK	6060	Spinning at high speed
Rear Tray Top fan	OK	10000	Spinning at high speed
Rear Tray Second fan	OK	10000	Spinning at high speed
Rear Tray Third fan	OK	10000	Spinning at high speed
Rear Tray Fourth fan	OK	10000	Spinning at high speed
Rear Tray Fifth fan	OK	10000	Spinning at high speed
Rear Tray Sixth fan	OK	10000	Spinning at high speed
Rear Tray Seventh fan	OK	10000	Spinning at high speed
Rear Tray Bottom fan	OK	10000	Spinning at high speed

show chassis fan (TX Matrix Router)

```
user@host> show chassis fan
scc-re0:
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3390	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3390	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3390	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3450	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3420	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed

Rear Tray Top fan	OK	3420	Spinning at normal speed
Rear Tray Second fan	OK	5190	Spinning at normal speed
Rear Tray Third fan	OK	5190	Spinning at normal speed
Rear Tray Fourth fan	OK	5190	Spinning at normal speed
Rear Tray Fifth fan	OK	3420	Spinning at normal speed
Rear Tray Sixth fan	OK	3420	Spinning at normal speed
Rear Tray Seventh fan	OK	3420	Spinning at normal speed
Rear Tray Bottom fan	OK	3420	Spinning at normal speed

```
lcc2-re0:
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3450	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3450	Spinning at normal speed
Top Right Rear fan	OK	3360	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3480	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray Top fan	OK	3420	Spinning at normal speed
Rear Tray Second fan	OK	3420	Spinning at normal speed
Rear Tray Third fan	OK	3420	Spinning at normal speed
Rear Tray Fourth fan	OK	3420	Spinning at normal speed
Rear Tray Fifth fan	OK	3420	Spinning at normal speed
Rear Tray Sixth fan	OK	3420	Spinning at normal speed
Rear Tray Seventh fan	OK	3420	Spinning at normal speed
Rear Tray Bottom fan	OK	3420	Spinning at normal speed

show chassis fan (TX Matrix Plus Router)

```
user@host> show chassis fan
```

```
sfc0-re0:
```

Item	Status	RPM	Measurement
Fan Tray 0 Fan 1	OK	4350	Spinning at normal speed
Fan Tray 0 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 0 Fan 3	OK	4410	Spinning at normal speed
Fan Tray 0 Fan 4	OK	4380	Spinning at normal speed
Fan Tray 0 Fan 5	OK	4350	Spinning at normal speed
Fan Tray 0 Fan 6	OK	4380	Spinning at normal speed
Fan Tray 1 Fan 1	OK	4410	Spinning at normal speed
Fan Tray 1 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 1 Fan 3	OK	4410	Spinning at normal speed
Fan Tray 1 Fan 4	OK	4380	Spinning at normal speed
Fan Tray 1 Fan 5	OK	4410	Spinning at normal speed
Fan Tray 1 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 1	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 3	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 4	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 5	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 7	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 8	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 9	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 1	OK	4350	Spinning at normal speed

```

Fan Tray 3 Fan 2      OK      4380      Spinning at normal speed
Fan Tray 3 Fan 3      OK      4410      Spinning at normal speed
Fan Tray 3 Fan 4      OK      4440      Spinning at normal speed
Fan Tray 3 Fan 5      OK      4380      Spinning at normal speed
Fan Tray 3 Fan 6      OK      4410      Spinning at normal speed
Fan Tray 3 Fan 7      OK      4410      Spinning at normal speed
Fan Tray 3 Fan 8      OK      4380      Spinning at normal speed
Fan Tray 3 Fan 9      OK      4410      Spinning at normal speed
Fan Tray 4 Fan 1      OK      4410      Spinning at normal speed
Fan Tray 4 Fan 2      OK      4410      Spinning at normal speed
Fan Tray 4 Fan 3      OK      4380      Spinning at normal speed
Fan Tray 4 Fan 4      OK      4380      Spinning at normal speed
Fan Tray 4 Fan 5      OK      4410      Spinning at normal speed
Fan Tray 4 Fan 6      OK      4410      Spinning at normal speed
Fan Tray 4 Fan 7      OK      4410      Spinning at normal speed
Fan Tray 4 Fan 8      OK      4410      Spinning at normal speed
Fan Tray 4 Fan 9      OK      4410      Spinning at normal speed
Fan Tray 5 Fan 1      OK      4350      Spinning at normal speed
Fan Tray 5 Fan 2      OK      4380      Spinning at normal speed
Fan Tray 5 Fan 3      OK      4380      Spinning at normal speed
Fan Tray 5 Fan 4      OK      4350      Spinning at normal speed
Fan Tray 5 Fan 5      OK      4380      Spinning at normal speed
Fan Tray 5 Fan 6      OK      4410      Spinning at normal speed
Fan Tray 5 Fan 7      OK      4410      Spinning at normal speed
Fan Tray 5 Fan 8      OK      4380      Spinning at normal speed
Fan Tray 5 Fan 9      OK      4410      Spinning at normal speed

```

```
lcc0-re0:
```

```

-----
Item              Status  RPM      Measurement
Top Left Front fan  OK      3420      Spinning at normal speed
Top Left Middle fan  OK      3420      Spinning at normal speed
Top Left Rear fan   OK      3420      Spinning at normal speed
Top Right Front fan  OK      3450      Spinning at normal speed
Top Right Middle fan  OK      3420      Spinning at normal speed
Top Right Rear fan   OK      3420      Spinning at normal speed
Bottom Left Front fan  OK      3420      Spinning at normal speed
Bottom Left Middle fan  OK      3420      Spinning at normal speed
Bottom Left Rear fan  OK      3390      Spinning at normal speed
Bottom Right Front fan  OK      3420      Spinning at normal speed
Bottom Right Middle fan  OK      3390      Spinning at normal speed
Bottom Right Rear fan  OK      3390      Spinning at normal speed
Rear Tray Top fan     OK      7050      Spinning at normal speed
Rear Tray Second fan  OK      7050      Spinning at normal speed
Rear Tray Third fan   OK      7050      Spinning at normal speed
Rear Tray Fourth fan  OK      7050      Spinning at normal speed
Rear Tray Fifth fan   OK      7050      Spinning at normal speed
Rear Tray Sixth fan   OK      7050      Spinning at normal speed
Rear Tray Seventh fan  OK      7050      Spinning at normal speed
Rear Tray Bottom fan  OK      7050      Spinning at normal speed

```

show chassis fan (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fan
sfc0-re0:
```

```

-----
Item              Status  RPM      Measurement
Fan Tray 0 Fan 1   OK      4830      Spinning at normal speed
Fan Tray 0 Fan 2   OK      4860      Spinning at normal speed
Fan Tray 0 Fan 3   OK      4830      Spinning at normal speed
Fan Tray 0 Fan 4   OK      4800      Spinning at normal speed

```

Fan Tray 0 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 0 Fan 6	OK	4770	Spinning at normal speed
Fan Tray 1 Fan 1	OK	4800	Spinning at normal speed
Fan Tray 1 Fan 2	OK	4770	Spinning at normal speed
Fan Tray 1 Fan 3	OK	4800	Spinning at normal speed
Fan Tray 1 Fan 4	OK	4770	Spinning at normal speed
Fan Tray 1 Fan 5	OK	4770	Spinning at normal speed
Fan Tray 1 Fan 6	OK	4800	Spinning at normal speed
Fan Tray 2 Fan 1	OK	4800	Spinning at normal speed
Fan Tray 2 Fan 2	OK	4800	Spinning at normal speed
Fan Tray 2 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 4	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 6	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 7	OK	4800	Spinning at normal speed
Fan Tray 2 Fan 8	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 9	OK	4800	Spinning at normal speed
Fan Tray 3 Fan 1	OK	4860	Spinning at normal speed
Fan Tray 3 Fan 2	OK	4860	Spinning at normal speed
Fan Tray 3 Fan 3	OK	4800	Spinning at normal speed
Fan Tray 3 Fan 4	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 6	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 7	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 8	OK	4800	Spinning at normal speed
Fan Tray 3 Fan 9	OK	4800	Spinning at normal speed
Fan Tray 4 Fan 1	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 2	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 4	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 6	OK	4860	Spinning at normal speed
Fan Tray 4 Fan 7	OK	4800	Spinning at normal speed
Fan Tray 4 Fan 8	OK	4860	Spinning at normal speed
Fan Tray 4 Fan 9	OK	4770	Spinning at normal speed
Fan Tray 5 Fan 1	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 2	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 4	OK	4800	Spinning at normal speed
Fan Tray 5 Fan 5	OK	4800	Spinning at normal speed
Fan Tray 5 Fan 6	OK	4800	Spinning at normal speed
Fan Tray 5 Fan 7	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 8	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 9	Check	2010	

1cc0-re0:

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3390	Spinning at normal speed
Top Left Rear fan	OK	3390	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3450	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3390	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray fan 1 (Top)	OK	7740	Spinning at normal speed

Rear Tray fan 2	OK	7740	Spinning at normal speed
Rear Tray fan 3	OK	7740	Spinning at normal speed
Rear Tray fan 4	OK	7740	Spinning at normal speed
Rear Tray fan 5	OK	7740	Spinning at normal speed
Rear Tray fan 6	OK	7740	Spinning at normal speed
Rear Tray fan 7	OK	7740	Spinning at normal speed
Rear Tray fan 8	OK	7740	Spinning at normal speed
Rear Tray fan 9	OK	7740	Spinning at normal speed
Rear Tray fan 10	OK	7740	Spinning at normal speed
Rear Tray fan 11	OK	7740	Spinning at normal speed
Rear Tray fan 12	OK	7740	Spinning at normal speed
Rear Tray fan 13	OK	7740	Spinning at normal speed
Rear Tray fan 14	OK	7740	Spinning at normal speed
Rear Tray fan 15	OK	7740	Spinning at normal speed
Rear Tray fan 16 (Bottom)	OK	7740	Spinning at normal speed

```
1cc2-re0:
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3390	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3450	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3390	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray fan 1 (Top)	OK	7740	Spinning at normal speed
Rear Tray fan 2	OK	7740	Spinning at normal speed
Rear Tray fan 3	OK	7740	Spinning at normal speed
Rear Tray fan 4	OK	7740	Spinning at normal speed
Rear Tray fan 5	OK	7740	Spinning at normal speed
Rear Tray fan 6	OK	7740	Spinning at normal speed
Rear Tray fan 7	OK	7740	Spinning at normal speed
Rear Tray fan 8	OK	7740	Spinning at normal speed
Rear Tray fan 9	OK	7740	Spinning at normal speed
Rear Tray fan 10	OK	7740	Spinning at normal speed
Rear Tray fan 11	OK	7740	Spinning at normal speed
Rear Tray fan 12	OK	7740	Spinning at normal speed
Rear Tray fan 13	OK	7740	Spinning at normal speed
Rear Tray fan 14	OK	7740	Spinning at normal speed
Rear Tray fan 15	OK	7740	Spinning at normal speed
Rear Tray fan 16 (Bottom)	OK	7740	Spinning at normal speed

show chassis fan (PTX5000 Packet Transport Router)

```
user@host> show chassis fan
user@host> show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	29%	2700 RPM
Fan Tray 0 Fan 2	OK	29%	2700 RPM
Fan Tray 0 Fan 3	OK	29%	2742 RPM
Fan Tray 0 Fan 4	OK	29%	2700 RPM
Fan Tray 0 Fan 5	OK	30%	2828 RPM
Fan Tray 0 Fan 6	OK	30%	2828 RPM
Fan Tray 0 Fan 7	OK	29%	2700 RPM
Fan Tray 0 Fan 8	OK	30%	2785 RPM

Fan Tray 0 Fan 9	OK	30%	2828 RPM
Fan Tray 0 Fan 10	OK	30%	2828 RPM
Fan Tray 0 Fan 11	OK	30%	2785 RPM
Fan Tray 0 Fan 12	OK	30%	2828 RPM
Fan Tray 0 Fan 13	OK	31%	2871 RPM
Fan Tray 0 Fan 14	OK	30%	2828 RPM
Fan Tray 1 Fan 1	OK	42%	3033 RPM
Fan Tray 1 Fan 2	OK	42%	3066 RPM
Fan Tray 1 Fan 3	OK	43%	3099 RPM
Fan Tray 1 Fan 4	OK	43%	3166 RPM
Fan Tray 1 Fan 5	OK	45%	3266 RPM
Fan Tray 1 Fan 6	OK	43%	3133 RPM
Fan Tray 2 Fan 1	OK	29%	2099 RPM
Fan Tray 2 Fan 2	OK	30%	2199 RPM
Fan Tray 2 Fan 3	OK	30%	2166 RPM
Fan Tray 2 Fan 4	OK	33%	2399 RPM
Fan Tray 2 Fan 5	OK	29%	2133 RPM
Fan Tray 2 Fan 6	OK	32%	2366 RPM

show chassis fan (MX104 Router)

```
user@host > show chassis fan
```

Item	Status	RPM	Measurement
Fan 1	OK	5640	Spinning at normal speed
Fan 2	OK	5640	Spinning at normal speed
Fan 3	OK	5760	Spinning at normal speed
Fan 4	OK	5640	Spinning at normal speed
Fan 5	OK	5640	Spinning at normal speed

show chassis fan (MX2010 Router)

```
user@host > show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	37%	3360 RPM
Fan Tray 0 Fan 2	OK	38%	3480 RPM
Fan Tray 0 Fan 3	OK	37%	3360 RPM
Fan Tray 0 Fan 4	OK	37%	3360 RPM
Fan Tray 0 Fan 5	OK	38%	3480 RPM
Fan Tray 0 Fan 6	OK	37%	3360 RPM
Fan Tray 1 Fan 1	OK	38%	3480 RPM
Fan Tray 1 Fan 2	OK	40%	3600 RPM
Fan Tray 1 Fan 3	OK	38%	3480 RPM
Fan Tray 1 Fan 4	OK	38%	3480 RPM
Fan Tray 1 Fan 5	OK	38%	3480 RPM
Fan Tray 1 Fan 6	OK	38%	3480 RPM
Fan Tray 2 Fan 1	OK	38%	3480 RPM
Fan Tray 2 Fan 2	OK	41%	3720 RPM
Fan Tray 2 Fan 3	OK	38%	3480 RPM
Fan Tray 2 Fan 4	OK	38%	3480 RPM
Fan Tray 2 Fan 5	OK	38%	3480 RPM
Fan Tray 2 Fan 6	OK	38%	3480 RPM
Fan Tray 3 Fan 1	OK	38%	3480 RPM
Fan Tray 3 Fan 2	OK	40%	3600 RPM
Fan Tray 3 Fan 3	OK	40%	3600 RPM
Fan Tray 3 Fan 4	OK	40%	3600 RPM
Fan Tray 3 Fan 5	OK	40%	3600 RPM
Fan Tray 3 Fan 6	OK	38%	3480 RPM

show chassis fan (MX2020 Router)

```
user@host > show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	37%	3360 RPM
Fan Tray 0 Fan 2	OK	37%	3360 RPM
Fan Tray 0 Fan 3	OK	36%	3240 RPM
Fan Tray 0 Fan 4	OK	37%	3360 RPM
Fan Tray 0 Fan 5	OK	37%	3360 RPM
Fan Tray 0 Fan 6	OK	37%	3360 RPM
Fan Tray 1 Fan 1	OK	37%	3360 RPM
Fan Tray 1 Fan 2	OK	37%	3360 RPM
Fan Tray 1 Fan 3	OK	37%	3360 RPM
Fan Tray 1 Fan 4	OK	37%	3360 RPM
Fan Tray 1 Fan 5	OK	37%	3360 RPM
Fan Tray 1 Fan 6	OK	36%	3240 RPM
Fan Tray 2 Fan 1	OK	37%	3360 RPM
Fan Tray 2 Fan 2	OK	37%	3360 RPM
Fan Tray 2 Fan 3	OK	37%	3360 RPM
Fan Tray 2 Fan 4	OK	37%	3360 RPM
Fan Tray 2 Fan 5	OK	37%	3360 RPM
Fan Tray 2 Fan 6	OK	38%	3480 RPM
Fan Tray 3 Fan 1	OK	38%	3480 RPM
Fan Tray 3 Fan 2	OK	38%	3480 RPM
Fan Tray 3 Fan 3	OK	38%	3480 RPM
Fan Tray 3 Fan 4	OK	37%	3360 RPM
Fan Tray 3 Fan 5	OK	37%	3360 RPM
Fan Tray 3 Fan 6	OK	37%	3360 RPM

show chassis fan (ACX4000 Router)

```
user@host > show chassis fan
```

Item	Status	RPM	Measurement
Fan 1	OK	4140	Spinning at normal speed
Fan 2	OK	4200	Spinning at normal speed

show chassis fan (QFX5100 Switch and OCX Series)

```
user@switch > show chassis fan
```

Item	Status	RPM	Measurement
FPC 0 Tray 0 Fan 0	OK	6428	Spinning at normal speed
FPC 0 Tray 0 Fan 1	OK	5515	Spinning at normal speed
FPC 0 Tray 1 Fan 0	OK	6360	Spinning at normal speed
FPC 0 Tray 1 Fan 1	OK	5532	Spinning at normal speed

show chassis firmware

List of Syntax	Syntax on page 709 Syntax (TX Matrix Routers) on page 709 Syntax (TX Matrix Plus Routers) on page 709 Syntax (MX Series Routers) on page 709 Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers) on page 709 Syntax (QFX Series) on page 709 Syntax (OCX Series) on page 709 Syntax (ACX Series Universal Access Routers) on page 709 Syntax (EX Series Switches) on page 709
Syntax	show chassis firmware
Syntax (TX Matrix Routers)	show chassis firmware <fcc <i>number</i> scc>
Syntax (TX Matrix Plus Routers)	show chassis firmware <fcc <i>number</i> sfc <i>number</i> >
Syntax (MX Series Routers)	show chassis firmware <all-members> <local> <member <i>member-id</i> >
Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers)	show chassis firmware
Syntax (QFX Series)	show chassis firmware interconnect-device <i>name</i> node-device <i>name</i>
Syntax (OCX Series)	show chassis firmware
Syntax (ACX Series Universal Access Routers)	show chassis firmware
Syntax (EX Series Switches)	show chassis firmware <detail>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.4 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced for EX8200 switches in Junos OS Release 10.2 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p>

Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.
Command introduced in Junos OS Release 12.3 for ACX4000 Universal Access Routers.
Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description On routers and switches, display the version levels of the firmware running on the System Control Board (SCB), Switching and Forwarding Module (SFM), System and Switch Board (SSB), Forwarding Engine Board (FEB), Flexible PIC Concentrators (FPCs), and Routing Engines. On a TX Matrix Plus router, display the version levels of the firmware running on the FPCs and the Switch Processor Mezzanine Board (SPMBs).

On EX2200, EX3200, and EX4200 switches, QFX Series, OCX Series, display the version levels of the firmware running on the switch. On an EX8208 switch, display the version levels of the firmware running on the Switch Fabric and Routing Engine (SRE) modules and on the line cards (shown as FPCs). On an EX8216 switch, display the version levels of the firmware running on the Routing Engine (RE) modules and on the line cards (shown as FPCs).

Options **none**—Display the version levels of the firmware running. For an EX4200 switch that is a member of a Virtual Chassis, display version levels for all members. For a TX Matrix router, display version levels for the firmware on the TX Matrix router and on all the T640 routers connected to the TX Matrix router. For a TX Matrix Plus router, display version levels for the firmware on the TX Matrix Plus router and on all the routers connected to the TX Matrix Plus router.

all-members—(MX Series routers only) (Optional) Display the version levels of the firmware running for all members of the Virtual Chassis configuration.

interconnect-device *name*—(QFabric systems) (Optional) Display the version levels of the firmware running on the Interconnect device.

lcc *number*—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display version levels for the firmware on a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display the version levels for the firmware on a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display the version levels of the firmware running for the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display the version levels of the firmware running for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-device—(QFabric systems only) (Optional) Display the version levels of the firmware running on the Node device.

scc—(TX Matrix router only) (Optional) Display version levels for the firmware on the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus router only) (Optional) Display version levels for the firmware on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

detail—(EX3200, EX3300, EX4200, and EX4500 standalone and Virtual Chassis member switches only) (Optional) Display version levels of the firmware running on the switch for its programmable hardware components.

Required Privilege Level view

Related Documentation • *Upgrading the HSM Firmware*

List of Sample Output

- [show chassis firmware \(M10 Router\) on page 712](#)
- [show chassis firmware \(M20 Router\) on page 712](#)
- [show chassis firmware \(M40 Router\) on page 713](#)
- [show chassis firmware \(M120 Router\) on page 713](#)
- [show chassis firmware \(M160 Router\) on page 713](#)
- [show chassis firmware \(MX104 Router\) on page 713](#)
- [show chassis firmware \(MX240 Router\) on page 713](#)
- [show chassis firmware \(MX480 Router\) on page 714](#)
- [show chassis firmware \(MX960 Router\) on page 714](#)
- [show chassis firmware \(MX2010 Router\) on page 714](#)
- [show chassis firmware \(MX2020 Router\) on page 714](#)
- [show chassis firmware \(MX240, MX480, MX960 Router with Application Services Modular Line Card\) on page 715](#)
- [show chassis firmware \(EX4200 Switch\) on page 715](#)
- [show chassis firmware \(EX8200 Switch\) on page 715](#)
- [show chassis firmware \(EX9200 Switch\) on page 716](#)
- [show chassis firmware lcc \(TX Matrix Router\) on page 716](#)
- [show chassis firmware scc \(TX Matrix Router\) on page 716](#)
- [show chassis firmware \(TX Matrix Plus Router\) on page 716](#)
- [show chassis firmware lcc \(TX Matrix Plus Router\) on page 718](#)
- [show chassis firmware sfc \(TX Matrix Plus Router\) on page 718](#)
- [show chassis firmware \(QFX Series and OCX Series\) on page 718](#)
- [show chassis firmware interconnect-device \(QFabric System\) on page 719](#)
- [show chassis firmware \(ACX2000 Universal Access Router\) on page 719](#)
- [show chassis firmware detail \(EX3300 Switch\) on page 719](#)
- [show chassis firmware \(MX Routers with Media Services Blade \[MSB\]\) on page 719](#)

Output Fields Table 40 on page 712 lists the output fields for the **show chassis firmware** command. Output fields are listed in the approximate order in which they appear.

Table 40: show chassis firmware Output Fields

Field Name	Field Description
Part	(MX Series, MX2010, and MX2020 routers) Chassis part name.
Type	(MX Series, MX2010, and MX2020 routers) Type of firmware: On routers: ROM or O/S . On switches: uboot or loader .
Version	(MX Series, MX2010, and MX2020 routers) Version of firmware running on the chassis part.
FPC	(<i>detail</i> option only) Number of FPC. For a standalone switch, the value is 0. For a Virtual Chassis configuration, value in the range of 0-9; refers to the member ID assigned to the switch.
AFEB	(MX104 routers) Version of the compact Forwarding Engine Board.
Boot	(<i>detail</i> option only) Version of the SYSPLD.
PoE	(<i>detail</i> option only) Version of the PoE firmware.
PFE-<number>	(<i>detail</i> option only) Version of the PFE used in the switch.
PHY-	(<i>detail</i> option only) Version of the physical layer device (PHY) used in the switch.
microcode	(<i>detail</i> option only) Microcode of the physical layer devices (PHY) used in the switch.
uboot	(<i>detail</i> option only) Version of the u-boot used in the switch.
loader	(<i>detail</i> option only) Version of the loader used in the switch.

Sample Output

show chassis firmware (M10 Router)

```

user@host> show chassis firmware
Part          Type      Version
Forwarding engine board ROM      Juniper ROM Monitor Version 4.1b2
O/S           Version 4.1I1 by tlim on 2000-04-24 11:27

```

show chassis firmware (M20 Router)

```

user@host> show chassis firmware
Part          Type      Version
System switch board ROM      Juniper ROM Monitor Version 3.4b26
O/S           Version 3.4I16 by smackie on 2000-02-29 2
FPC 1         ROM      Juniper ROM Monitor Version 3.0b1

```

	O/S	Version 3.4I4 by smackie on 2000-02-25 21
FPC 2	ROM	Juniper ROM Monitor Version 3.0b1
	O/S	Version 3.4I4 by smackie on 2000-02-25 21

show chassis firmware (M40 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
System control board	ROM	Juniper ROM Monitor Version 2.0i126Copyri
	O/S	Version 2.0i1 by root on Thu Jul 23 00:51
FPC 5	ROM	Juniper ROM Monitor Version 2.0i49Copyrig
	O/S	Version 2.0i1 by root on Thu Jul 23 00:59

show chassis firmware (M120 Router)

```
user@host> show chassis firmware
```

FPC 2	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by builder on 2006-10-18 16:2
FPC 3	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by builder on 2006-10-18 16:2
FPC 4	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by builder on 2006-10-18 16:2
FEB 3	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by builder on 2006-10-18 16:1
FEB 4	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by builder on 2006-10-18 16:1

show chassis firmware (M160 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
SFM 0	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by tlim on 2000-02-29 11:50
SFM 1	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by tlim on 2000-02-29 11:50
FPC 0	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by tlim on 2000-02-29 11:56
FPC 1	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by tlim on 2000-02-29 11:56
FPC 2	ROM	Juniper ROM Monitor Version 4.0b3
	O/S	Version 4.0I1 by tlim on 2000-02-29 11:56

show chassis firmware (MX104 Router)

```
user@host > show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by builder on 2013-
FPC 1	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by builder on 2013-
FPC 2	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by builder on 2013-
AFEB	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by builder on 2013-

show chassis firmware (MX240 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 8.3b1
	O/S	Version 9.0-20080103.0 by builder on 2008-0

FPC 2	ROM	Juniper ROM Monitor Version 8.3b1
	O/S	Version 9.0-20080103.0 by builder on 2008-0

show chassis firmware (MX480 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 8.3b1
	O/S	Version 9.0-20070916.3 by builder on 2007-0

show chassis firmware (MX960 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 4	ROM	Juniper ROM Monitor Version 8.0b8
	O/S	Version 8.2I59 by artem on 2006-10-31 19:22
FPC 7	ROM	Juniper ROM Monitor Version 8.2b1
	O/S	Version 8.2-20061026.1 by builder on 2006-1

show chassis firmware (MX2010 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 12.3b1
	O/S	Version 12.3-20121220.0 by builder on 2012-
FPC 1	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by builder on 2012-
FPC 2	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by builder on 2012-
FPC 3	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by builder on 2012-
FPC 4	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20121220.0 by builder on 2012-
FPC 5	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20121220.0 by builder on 2012-
FPC 6	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 12.3-20121220.0 by builder on 2012-
FPC 7	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by builder on 2012-
FPC 8	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 12.3-20121220.0 by builder on 2012-
FPC 9	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 12.3-20121220.0 by builder on 2012-
SPMB 0	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20121220.0 by builder on 2012-
SPMB 1	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20121220.0 by builder on 2012-

show chassis firmware (MX2020 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 1	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 2	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 3	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 4	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-

FPC 5	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 6	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 7	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 8	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 9	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 10	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 11	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 12	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 13	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 14	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 15	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 16	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 17	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 18	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
FPC 19	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by builder on 2013-
SPMB 0	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20130415.0 by builder on 2013-
SPMB 1	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20130415.0 by builder on 2013-

show chassis firmware (MX240, MX480, MX960 Router with Application Services Modular Line Card)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.2I21 by manish on 2012-06-19 17:

show chassis firmware (EX4200 Switch)

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 0	uboot	U-Boot 1.1.6 (Feb 6 2008 - 11:27:42)
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.1
FPC 1	uboot	U-Boot 1.1.6 (Feb 6 2008 - 11:27:42)
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.1
FPC 2	uboot	U-Boot 1.1.6 (Feb 6 2008 - 11:27:42)
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.1

show chassis firmware (EX8200 Switch)

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 0	U-Boot	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.2

FPC 3	U-Boot Loader	U-Boot 1.1.6 (Dec 4 2009 - 13:17:34) 3.1.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 5	U-Boot Loader	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 7	U-Boot Loader	U-Boot 1.1.6 (Feb 6 2009 - 05:31:46) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
Routing Engine 0	U-Boot Loader	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
Routing Engine 1	U-Boot Loader	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2

show chassis firmware (EX9200 Switch)

```

user@switch> show chassis firmware
Part      Type      Version
FPC 2     ROM       Juniper ROM Monitor Version 11.4b2
           O/S      Version 14.1I20140312_0741_bavig by bavig o
FPC 3     ROM       Juniper ROM Monitor Version 10.4b1
           O/S      Version 14.1I20140312_0741_bavig by bavig o

```

show chassis firmware lcc (TX Matrix Router)

```

user@host> show chassis firmware lcc 0
lcc0-re0:
-----
Part      Type      Version
FPC 1     ROM       Juniper ROM Monitor Version 6.4b18
           O/S      Version 7.0-20040804.0 by builder on 2004-0
FPC 2     ROM       Juniper ROM Monitor Version 6.4b20
           O/S      Version 7.0-20040804.0 by builder on 2004-0
SPMB 0    ROM       Juniper ROM Monitor Version 6.4b18
           O/S      Version 7.0-20040804.0 by builder on 2004-0

```

show chassis firmware scc (TX Matrix Router)

```

user@host> show chassis firmware scc
scc-re0:
-----
Part      Type      Version
SPMB 0    ROM       Juniper ROM Monitor Version 6.4b18
           O/S      Version 7.0-20040804.0 by builder on 2004-0

```

show chassis firmware (TX Matrix Plus Router)

```

user@host> show chassis firmware
sfc0-re0:
-----
Part      Type      Version
Global FPC 4
Global FPC 6
Global FPC 7
Global FPC 12
Global FPC 14
Global FPC 15
Global FPC 20
Global FPC 21
Global FPC 22
Global FPC 23
Global FPC 24
Global FPC 25

```

```

Global FPC 26
Global FPC 28
Global FPC 29
Global FPC 31
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by builder on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by builder on 2009-0

```

lcc0-re1:

```

-----
Part      Type      Version
FPC 4     ROM      Juniper ROM Monitor Version 9.0b2
           O/S      Version 9.6-20090507.0 by builder on 2009-0
FPC 6     ROM      Juniper ROM Monitor Version 9.0b2
           O/S      Version 9.6-20090507.0 by builder on 2009-0
FPC 7     ROM      Juniper ROM Monitor Version 9.0b2
           O/S      Version 9.6-20090507.0 by builder on 2009-0
SPMB 0     ROM      Juniper ROM Monitor Version 9.5b1
           O/S      Version 9.6-20090507.0 by builder on 2009-0
SPMB 1     ROM      Juniper ROM Monitor Version 9.5b1
           O/S      Version 9.6-20090507.0 by builder on 2009-0

```

lcc1-re1:

```

-----
Part      Type      Version
FPC 4     ROM      Juniper ROM Monitor Version 9.0b2
           O/S      Version 9.6-20090507.0 by builder on 2009-0
FPC 6     ROM      Juniper ROM Monitor Version 9.0b2
           O/S      Version 9.6-20090507.0 by builder on 2009-0
FPC 7     ROM      Juniper ROM Monitor Version 9.0b2
           O/S      Version 9.6-20090507.0 by builder on 2009-0
SPMB 0     ROM      Juniper ROM Monitor Version 9.5b1
           O/S      Version 9.6-20090507.0 by builder on 2009-0
SPMB 1     ROM      Juniper ROM Monitor Version 9.5b1
           O/S      Version 9.6-20090507.0 by builder on 2009-0

```

lcc2-re1:

```

-----
Part      Type      Version
FPC 4     ROM      Juniper ROM Monitor Version 9.0b2
           O/S      Version 9.6-20090507.0 by builder on 2009-0
FPC 5     ROM      Juniper ROM Monitor Version 9.0b2
           O/S      Version 9.6-20090507.0 by builder on 2009-0
FPC 6     ROM      Juniper ROM Monitor Version 9.0b2
           O/S      Version 9.6-20090507.0 by builder on 2009-0
FPC 7     ROM      Juniper ROM Monitor Version 7.5b4
           O/S      Version 9.6-20090507.0 by builder on 2009-0
SPMB 0     ROM      Juniper ROM Monitor Version 9.5b1
           O/S      Version 9.6-20090507.0 by builder on 2009-0
SPMB 1     ROM      Juniper ROM Monitor Version 9.5b1
           O/S      Version 9.6-20090507.0 by builder on 2009-0

```

lcc3-re1:

```

-----
Part      Type      Version
FPC 0     ROM      Juniper ROM Monitor Version 9.0b2
           O/S      Version 9.6-20090507.0 by builder on 2009-0
FPC 1     ROM      Juniper ROM Monitor Version 9.0b2
           O/S      Version 9.6-20090507.0 by builder on 2009-0
FPC 2     ROM      Juniper ROM Monitor Version 9.0b2

```

	O/S	Version 9.6-20090507.0 by builder on 2009-0
FPC 4	ROM	Juniper ROM Monitor Version 7.5b4
	O/S	Version 9.6-20090507.0 by builder on 2009-0
FPC 5	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by builder on 2009-0
FPC 7	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by builder on 2009-0
SPMB 0	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by builder on 2009-0
SPMB 1	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by builder on 2009-0

show chassis firmware lcc (TX Matrix Plus Router)

```
user@host> show chassis firmware lcc 0
lcc0-re1:
```

Part	Type	Version
FPC 4	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by builder on 2009-0
FPC 6	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by builder on 2009-0
FPC 7	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by builder on 2009-0
SPMB 0	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by builder on 2009-0
SPMB 1	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by builder on 2009-0

show chassis firmware sfc (TX Matrix Plus Router)

```
user@host> show chassis firmware sfc 0
sfc0-re0:
```

Part	Type	Version
Global FPC 4		
Global FPC 6		
Global FPC 7		
Global FPC 12		
Global FPC 14		
Global FPC 15		
Global FPC 20		
Global FPC 21		
Global FPC 22		
Global FPC 23		
Global FPC 24		
Global FPC 25		
Global FPC 26		
Global FPC 28		
Global FPC 29		
Global FPC 31		
SPMB 0	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by builder on 2009-0
SPMB 1	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by builder on 2009-0

show chassis firmware (QFX Series and OCX Series)

```
user@switch> show chassis firmware
Part          Type          Version
FPC 0
```

Routing Engine 0	U-Boot Loader	U-Boot 1.1.6 (Sep 15 2010 - 02:11:11) 1.0.5 FreeBSD/MIPS U-Boot bootstrap loader 0.1
------------------	------------------	---

show chassis firmware interconnect-device (QFabric System)

```
user@switch> show chassis firmware interconnect-device interconnect1
```

Part	Type	Version
Routing Engine 0	U-Boot Loader	U-Boot 1.1.6 (May 10 2011 - 04:52:59) 1.1.1 FreeBSD/MIPS U-Boot bootstrap loader 0.1
Routing Engine 1	U-Boot Loader	U-Boot 1.1.6 (May 10 2011 - 04:52:59) 1.1.1 FreeBSD/MIPS U-Boot bootstrap loader 0.1

show chassis firmware (ACX2000 Universal Access Router)

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC	O/S	Version 12.2I13 by jisjoy on 2012-05-29 06:
FEB	O/S	Version 12.2I13 by jisjoy on 2012-05-29 06:

show chassis firmware detail (EX3300 Switch)

```
user@switch> show chassis firmware detail
```

FPC 0		
Boot SYSPLD	3	
PoE firmware	4.1.6	
PFE-0	3	
PFE-1	3	
PHY		
microcode	0x514	
Boot Firmware		
uboot	U-Boot 1.1.6 (Aug 21 2011 - 01:45:26)	1.0.0
loader	FreeBSD/arm U-Boot loader	1.0

show chassis firmware (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.2I21 by manish on 2012-06-19 17:

show chassis fpc

List of Syntax	Syntax on page 720 Syntax (EX Series Switches) on page 720 Syntax (T4000 Routers) on page 720 Syntax (TX Matrix and TX Matrix Plus Routers) on page 720 Syntax (MX Series Routers and EX Series switches) on page 720 Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers) on page 720 Syntax (QFX Series) on page 720 Syntax (OCX Series) on page 720 Syntax (PTX Series Packet Transport Routers) on page 720 Syntax (ACX Series Universal Access Routers) on page 721
Syntax	<code>show chassis fpc</code> <code><detail <slot>> <pic-status <slot>></code>
Syntax (EX Series Switches)	<code>show chassis fpc</code> <code><detail <fpc-slot>> <pic-status <fpc-slot>></code> <code><fpc-slot></code>
Syntax (T4000 Routers)	<code>show chassis fpc</code> <code><detail <fpc-slot>></code> <code><pic-status <fpc-slot>></code>
Syntax (TX Matrix and TX Matrix Plus Routers)	<code>show chassis fpc</code> <code><detail <fpc-slot>> <pic-status <fpc-slot>></code> <code><slot></code>
Syntax (MX Series Routers and EX Series switches)	<code>show chassis fpc</code> <code><detail <slot>> <pic-status <slot>></code> <code><all-members></code> <code><local></code> <code><member <i>member-id</i>></code>
Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers)	<code>show chassis fpc</code> <code><slot> detail <detail <slot>> <pic-status <slot>></code> <code><fpc-slot></code>
Syntax (QFX Series)	<code>show chassis fpc</code> <code><detail></code> <code><interconnect-device <i>name</i> <fpc-slot fpc-slot>></code> <code><node-device <i>name</i>></code>
Syntax (OCX Series)	<code>show chassis fpc</code> <code><detail></code>
Syntax (PTX Series Packet Transport Routers)	<code>show chassis fpc</code> <code><detail <fpc-slot>> <pic-status <fpc-slot>></code> <code><fpc-slot></code>

Syntax (ACX Series Universal Access Routers)	<code>show chassis fpc</code> <code><detail <fpc-slot>> <pic-status <fpc-slot>></code> <code><fpc-slot></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for QFX Series. Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers. Command introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers. Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers. Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers. Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display status information about the installed Flexible PIC Concentrators (FPCs) and PICs.
Options	none —Display status information for all FPCs. On a TX Matrix router, display status information for all FPCs on the attached T640 routers in the routing matrix. On a TX Matrix Plus router, display status information for all FPCs on the attached routers in the routing matrix.



NOTE: In EX8200 switches, line cards initialize Packet Forwarding Engine during startup. If an error occurs during hardware initialization, the FPCs with bad hardware parts power down after transferring the debug information to the Routing Engine. The Routing Engine marks the FPC offline, logs the error in system log messages (`/var/log/messages`), and generates an alarm to inform the user.

See the following sample output:

```
user@host> show chassis fpc
```

	Temp	CPU	Utilization (%)	Memory
Utilization (%)				
Slot State	(C)	Total	Interrupt	DRAM (MB) Heap
Buffer				
0 Empty				
1 Empty				
2 Empty				
3 Empty				
4 Empty				
5 Offline	---	Hard FPC error---		
6 Empty				
7 Online	26	4	0	1024 0
32				

The following sample output shows the alarm raised for the failed FPCs.

```
user@host > show chassis alarms
4 alarms currently active
```

Alarm time	Class	Description
2011-03-24 00:52:51 UTC	Major	FPC 5 Hard errors
2011-03-24 00:52:31 UTC	Major	Fan Tray Failure
2011-03-24 00:52:31 UTC	Major	Fan Tray Failure
2011-03-24 00:51:26 UTC	Minor	Loss of communication with Backup RE



NOTE: On T4000 routers, when you include the enhanced-mode statement at the [edit chassis network-services] hierarchy level and reboot the system, only the T4000 Type 5 FPCs present on the router become online while the remaining FPCs are offline, and FPC misconfiguration alarms are generated. The show chassis alarm command output displays FPC misconfiguration (FPC *fpc-slot* misconfig) as the reason for the generation the alarms.

The following sample output shows the FPC status after the enhanced-mode statement is configured on the T4000 router. The T4000 Type 5 FPC present in slot 5 becomes online while the remaining FPCs are offline.

```
user@host> show chassis fpc
```

	Temp	CPU Utilization (%)	Memory
Utilization (%)			
Slot State	(C)	Total	Interrupt
Buffer			DRAM (MB) Heap
0 offline	---	FPC misconfiguration---	
1 offline	---	FPC misconfiguration---	
2 offline	---	FPC misconfiguration---	
3 Empty			
4 Empty			
5 Online	66	50	0
27			2816 29

The following sample output shows FPC misconfiguration alarms.

```
user@host > show chassis alarms
```

3 alarms currently active

Alarm time	Class	Description
2011-03-24 00:52:51 PST	Major	FPC 1 misconfig
2011-03-24 00:52:31 PST	Major	FPC 2 misconfig
2011-03-24 00:52:31 PST	Major	FPC 3 misconfig

detail—(Optional) Display detailed status information for all FPCs or for the FPC in the specified slot (see *fpc-slot* or *slot*).

all-members—(MX Series routers and EX Series switches only) (Optional) Display status information for all FPCs on all members of the Virtual Chassis configuration.

interconnect-device name—(QFabric systems only) (Optional) Display status information for all FPCs on the Interconnect device.

fpc-slot—(Optional) FPC slot number:

- (TX Matrix and TX Matrix Plus router only)—On a TX Matrix router, if you specify the number of the T640 router (line-card chassis) by using the *lcc number* option (the recommended method), replace *fpc-slot* with a value from 0 through 7. Otherwise, replace *fpc-slot* with a value from 0 through 31. Likewise, on a TX Matrix Plus router, if you specify the number of the specified router (line-card chassis) by using the *lcc number* option (the recommended method), replace *fpc-slot* with

a value from 0 through 7. Otherwise, replace *fpc-slot* with a value from 0 through 31. For example, the following commands have the same result:

```
user@host> show chassis fpc detail 1 lcc 1
user@host> show chassis fpc detail 9
```

- M120 router—Replace *fpc-slot* with a value from 0 through 5.
- MX80 router—Replace *fpc-slot* with a value from 0 through 1.
- MX104 router—Replace *fpc-slot* with a value from 0 through 2.
- MX240 router—Replace *fpc-slot* with a value from 0 through 2.
- MX480 router—Replace *fpc-slot* with a value from 0 through 5.
- MX-960 router—Replace *fpc-slot* with a value from 0 through 11.
- MX2010 router—Replace *fpc-slot-number* with a value from 0 through 9.
- MX2020 router—Replace *fpc-slot-number* with a value from 0 through 19.
- Other routers—Replace *fpc-slot* with a value from 0 through 7.
- EX Series switches:
 - EX3200 switches and EX4200 standalone switches—Replace *fpc-slot* with 0.
 - EX4200 switches in a Virtual Chassis configuration—Replace *fpc-slot* with a value from 0 through 9.
 - EX6210 switches—Replace *fpc-slot* with a value from 0 through 9.
 - EX8208 switches—Replace *fpc-slot* with a value from 0 through 7.
 - EX8216 switches—Replace *fpc-slot* with a value from 0 through 15.
- QFX Series:
 - QFXSeries and OCX Series switches—Replace *fpc-slot* with 0.
 - QFabric systems—Replace *fpc-slot* with 0 through 31 on the Interconnect device.
- PTX Series Packet Transport Routers:
 - PTX5000 Packet Transport Router—Replace *fpc-slot* with a value from 0 through 7.
- ACX Series Universal Access Routers:
 - ACX1000 and ACX2000 Universal Access Routers—Replace *fpc-slot* with 0.

local—(MX Series routers and EX Series switches only) (Optional) Display status information for all FPCs on the local Virtual Chassis member.

member *member-id*—(MX Series routers and EX Series switches only) (Optional) Display status information for all FPCs on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-device name—(QFabric systems only) (Optional) Display status information for each Node device. Each Node device is equivalent to an FPC.

pic-status—(Optional) Display status information for all PICs or for the PIC in the specified slot (see *fpc-slot*).



NOTE: On T1600 routers, Type 4 FPCs with ASICs based on the SL2.0 chipset do not support the 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (10x10GE [LAN/WAN] SFPP). If you issue the `show chassis fpc` command with the `pic-status` option, the CLI displays the string “Not Supported” for 10x10GE (LAN/WAN) SFPP PICs installed on such FPCs. The following is a sample output:

```
user@host> show chassis fpc pic-status
Slot 0  Online      E2-FPC Type 1
  PIC 0  Online      1x G/E SFP, 1000 BASE
  PIC 1  Online      Adaptive Services-II
  PIC 2  Online      1x G/E IQ, 1000 BASE
  PIC 3  Online      1x G/E IQ, 1000 BASE
Slot 1  Online      FPC Type 3-ES
  PIC 0  Present     UNUSED- Not Supported
Slot 2  Online      FPC Type 4-ES
  PIC 0  Offline     4x OC-192 SONET XFP
  PIC 1  Present     10x10GE(LAN/WAN) SFPP- Not Supported
<<<<<<
Slot 4  Offline     FPC Type 1-ES
Slot 5  Offline     FPC Type 2-ES
Slot 6  Online      E2-FPC Type 3
  PIC 0  Online      1x OC-192 SONET XFP
  PIC 1  Online      4x OC-48 SONET
  PIC 2  Online      4x OC-48 SONET
  PIC 3  Online      MultiServices 500
Slot 7  Online      FPC Type 4-ES
  PIC 0  Online      4x 10GE (LAN/WAN) XFP
  PIC 1  Online      4x 10GE (LAN/WAN) XFP
```

In addition, an entry is logged in the system log messages (/var/log/messages) that the PIC is not supported. The following is a sample message logged in the system log:

```
Apr  5 08:47:36  router1 chassisd[2770]: CHASSISD_UNSUPPORTED_PIC:
  PIC 1 in FPC 2 (type 763, version 257) is not supported
```

If you see this issue, contact Juniper Networks Technical Assistance Center (JTAC) for a possible fix. For more information about this issue and a possible solution, see [PSN-2010-03-696](#).



NOTE: When there is a double-bit ECC error in a network processor's memory, the Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP or Channelized E1/T1 Circuit Emulation MIC is switched to the offline state.

```
user@host> show chassis fpc pic-status
Slot 1   Online      MPC Type 2 3D Q
PIC 0    Offline     1xC0C12/4xC0C3 CH-CE- ECC error detected
```

lcc *number*—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

Required Privilege Level view

- Related Documentation**
- [request chassis fpc on page 385](#)
 - *show chassis fpc-feb-connectivity*
 - *show chassis fabric fpcs*
 - *Configuring the Junos OS to Resynchronize FPC Sequence Numbers with Active FPCs when an FPC Comes Online*
 - *MX960 Flexible PIC Concentrator Description*
 - *ACX2000 and ACX2100 Routers Hardware and CLI Terminology Mapping*
 - *enhanced-mode*

- List of Sample Output**
- [show chassis fpc \(EX6210 Switch\) on page 730](#)
 - [show chassis fpc \(M10 Router\) on page 730](#)
 - [show chassis fpc \(M20 Router\) on page 730](#)
 - [show chassis fpc detail \(M Series Routers\) on page 730](#)
 - [show chassis fpc detail \(MX80 Router\) on page 731](#)
 - [show chassis fpc \(MX104 Router\) on page 731](#)
 - [show chassis fpc detail \(MX104 Router\) on page 731](#)
 - [show chassis fpc pic-status \(MX104 Router\) on page 732](#)

[show chassis fpc \(MX240 Router\) on page 732](#)
[show chassis fpc \(EX Series Switch\) on page 732](#)
[show chassis fpc detail \(EX9200 Switch\) on page 732](#)
[show chassis fpc \(MX480 Router\) on page 732](#)
[show chassis fpc \(MX480 Router with 100-Gigabit Ethernet CFP\) on page 733](#)
[show chassis fpc pic-status \(MX480 Router with 100-Gigabit Ethernet CFP\) on page 733](#)
[show chassis fpc pic-status \(EX Series Switch\) on page 733](#)
[show chassis fpc \(MX480 Router with MPC4E\) on page 733](#)
[show chassis fpc detail \(MX480 Router with MPC4E\) on page 734](#)
[show chassis fpc \(MX480 Router with MPC4E\) on page 734](#)
[show chassis fpc detail \(MX480 Router with MPC4E\) on page 734](#)
[show chassis fpc \(MX960 Router\) on page 735](#)
[show chassis fpc \(MX960 Router with MPC5EQ\) on page 735](#)
[show chassis fpc detail \(MX960 Router with MPC5EQ\) on page 735](#)
[show chassis fpc pic-status \(MX960 Router with MPC5EQ\) on page 737](#)
[show chassis fpc \(MX240, MX480, MX960 Routers with Application Services Modular Line Card\) on page 738](#)
[show chassis fpc \(MX240, MX480, MX960 with Application Services Modular Line Card\) on page 738](#)
[show chassis fpc \(MX2010 Routers\) on page 738](#)
[show chassis fpc \(MX2020 Routers\) on page 738](#)
[show chassis fpc \(MX2020 Router with MPC4E\) on page 739](#)
[show chassis fpc detail \(MX2020 Router with MPC4E\) on page 739](#)
[show chassis fpc \(MX2020 Router with MPC5EQ and MPC6E\) on page 740](#)
[show chassis fpc detail \(MX2020 Router with MPC5EQ and MPC6E\) on page 740](#)
[show chassis fpc pic-status \(MX2020 Router with MPC5EQ and MPC6E\) on page 742](#)
[show chassis fpc detail \(MX Series Routers\) on page 743](#)
[show chassis fpc detail \(EX Series Switches\) on page 743](#)
[show chassis fpc \(Hardware Not Supported\) on page 743](#)
[show chassis fpc detail \(Hardware Not Supported\) on page 744](#)
[show chassis fpc pic-status on page 744](#)
[show chassis fpc pic-status \(M Series Routers\) on page 744](#)
[show chassis fpc pic-status \(M120 Router\) on page 745](#)
[show chassis fpc pic-status \(MX240, MX480, and MX960 Routers with Application Services Modular Line Card\) on page 745](#)
[show chassis fpc lcc \(TX Matrix Router\) on page 745](#)
[show chassis fpc pic-status \(TX Matrix Router\) on page 745](#)
[show chassis fpc pic-status lcc \(TX Matrix Router\) on page 746](#)
[show chassis fpc \(TX Matrix Plus Router\) on page 746](#)
[show chassis fpc lcc \(TX Matrix Plus Router\) on page 747](#)
[show chassis fpc detail \(TX Matrix Plus Router\) on page 747](#)
[show chassis fpc pic-status \(TX Matrix Plus Router\) on page 749](#)
[show chassis fpc \(T1600 Router\) on page 750](#)
[show chassis fpc detail \(T1600 Router\) on page 750](#)
[show chassis fpc <fpc-slot> \(EX Series Switch\) on page 751](#)
[show chassis fpc slot \(T1600 Router\) on page 751](#)
[show chassis fpc pic-status \(T1600 Router\) on page 751](#)
[show chassis fpc \(T4000 Router\) on page 752](#)
[show chassis fpc detail \(T4000 Router\) on page 752](#)

[show chassis fpc pic-status \(T4000 Router\) on page 753](#)
[show chassis fpc \(QFX Series and OCX Series\) on page 753](#)
[show chassis fpc detail \(QFX3500 Switches\) on page 753](#)
[show chassis fpc pic-status \(QFX3500 Switches\) on page 753](#)
[show chassis fpc interconnect-device \(QFabric System\) on page 753](#)
[show chassis fpc interconnect-device \(QFabric System\) on page 754](#)
[show chassis fpc interconnect-device detail \(QFabric System\) on page 754](#)
[show chassis fpc pic-status interconnect-device \(QFabric System\) on page 754](#)
[show chassis fpc pic-status node-device \(QFabric System\) on page 755](#)
[show chassis fpc \(PTX5000 Packet Transport Router\) on page 755](#)
[show chassis fpc detail \(PTX5000 Packet Transport Router\) on page 755](#)
[show chassis fpc pic-status \(PTX5000 Packet Transport Router\) on page 756](#)
[show chassis fpc \(ACX2000 Universal Access Router\) on page 756](#)
[show chassis fpc 0 \(ACX2000 Universal Access Router\) on page 756](#)
[show chassis fpc detail \(ACX2000 Universal Access Router\) on page 756](#)
[show chassis fpc pic-status \(ACX2000 Universal Access Router\) on page 757](#)
[show chassis FPC 1 \(MX Routers with Media Services Blade \[MSB\]\) on page 757](#)
[show chassis FPC 1 detail \(MX Routers with Media Services Blade \[MSB\]\) on page 757](#)

Output Fields Table 41 on page 728 lists the output fields for the **show chassis fpc** command. Output fields are listed in the approximate order in which they appear.

Table 41: show chassis fpc Output Fields

Field Name	Field Description	Level of Output
Slot or Slot State	Slot number and state. The state can be one of the following conditions: <ul style="list-style-type: none"> • Dead—Held in reset because of errors. • Diag—Slot is being ignored while the FPC is running diagnostics. • Dormant—Held in reset. • Empty—No FPC is present. • Offline—(PTX Series Packet Transport Routers only) One of the following two states is displayed: <ul style="list-style-type: none"> • FPC offlined due to unreachable destinations • FPC Offlined due to degraded FPC action • Online—FPC is online and running. • Present—FPC is detected by the chassis daemon but either is not supported by the current version of Junos OS or is inserted in the wrong slot. The output also states either Hardware Not Supported or Hardware Not In Right Slot. The FPC is coming up but not yet online. • Probed—Probe is complete; awaiting restart of the Packet Forwarding Engine. • Probe-wait—Waiting to be probed. 	all levels
Logical slot	Slot number.	all levels
Temp (C) or Temperature	Temperature of the air passing by the FPC, in degrees Celsius or in both Celsius and Fahrenheit.	all levels all levels

Table 41: show chassis fpc Output Fields (*continued*)

Field Name	Field Description	Level of Output
Temperature (PTX Series)	On PTX Series Packet Transport Routers, temperature details are provided in degrees Celsius and Fahrenheit. Output includes: <ul style="list-style-type: none"> • Temperature (PMB)—Temperature of the air passing by the Processor Mezzanine Board (PMB) at the bottom of the FPC. • Temperature (Intake)—Temperature of the air flowing into the chassis. • Temperature (Exhaust)—Exhaust temperatures for multiple zones (Exhaust A and Exhaust B). • Temperature (TLn)—Temperature of the specified Lookup ASIC (TL) of the packet forwarding engine on the FPC. • Temperature (TQn)—Temperature of the specified Queuing and Memory Interface ASIC (TQ) of the packet forwarding engine on the FPC. 	detail
Total CPU Utilization (%)	Total percentage of CPU being used by the FPC's processor.	all levels
Interrupt CPU Utilization (%)	Of the total CPU being used by the FPC's processor, the percentage being used for interrupts.	none specified
Memory DRAM (MB)	Total DRAM, in megabytes, available to the FPC's processor.	none specified
Heap Utilization (%)	Percentage of heap space (dynamic memory) being used by the FPC's processor. If this number exceeds 80 percent, there may be a software problem (memory leak). NOTE: On MX Series routers and EX Series switches in a broadband edge environment, heap utilization levels higher than 70 percent can affect unified ISSU, router stability, or scaling capability.	none specified
Buffer Utilization (%)	Percentage of buffer space being used by the FPC's processor for buffering internal messages.	none specified
Total CPU DRAM	Amount of DRAM available to the FPC's CPU.	detail
Total RLDRAM	Amount of reduced latency dynamic random access memory (RLDRAM) available to the FPC CPU.	detail
Total DDR DRAM	Amount of double data rate dynamic random access memory (DDR DRAM) available to the FPC CPU.	detail
Total SRAM	Amount of static RAM (SRAM) used by the FPC's CPU.	detail
Total SDRAM	Total amount of memory used for storing packets and notifications.	detail
I/O Manager ASICs information	I/O Manager version number, manufacturer, and part number.	detail
Start time	Time when the Routing Engine detected that the FPC was running.	detail

Table 41: show chassis fpc Output Fields (*continued*)

Field Name	Field Description	Level of Output
Uptime	How long the Routing Engine has been connected to the FPC and, therefore, how long the FPC has been up and running.	detail
PIC type	(pic-status output only) Type of PIC.	none specified

Sample Output

show chassis fpc (EX6210 Switch)

```

user@switch> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%) Total	Interrupt	Memory DRAM (MB)	Utilization (%) Heap	Buffer
0	Empty						
1	Online	7	5	0	1024	0	32
2	Empty						
3	Empty						
4	Online	25	17	2	2048	0	30
5	Online	25	3	0	2048	0	24
6	Online	6	5	0	1024	0	32
7	Empty						
8	Empty						
9	Online	8	7	0	1024	0	32

show chassis fpc (M10 Router)

```

user@host> show chassis fpc
FPC status:

```

Slot	State	Temp (C)
0	Online	27
1	Online	28

show chassis fpc (M20 Router)

```

user@host> show chassis fpc
FPC status:

```

Slot	State	Temp (C)	CPU Utilization (%) Total	Interrupt	Memory DRAM (MB)	Utilization (%) Heap	Buffer
0	Empty	0	0	0	0	0	0
1	Online	38	0	0	8	0	4
2	Online	35	0	0	8	0	3
3	Empty	0	0	0	0	0	0

show chassis fpc detail (M Series Routers)

```

user@host> show chassis fpc detail 1
Slot 1 information:
State Online
Temperature 48 degrees C
Total CPU DRAM 32 MB
Total SRAM 4 MB
Total SDRAM 256 MB
I/O Manager ASICs information Version 2.0, Foundry IBM, Part number 0
I/O Manager ASICs information Version 2.0, Foundry IBM, Part number 0

```



```

Start time          2000-02-08 02:18:49 UTC
Uptime              14 hours, 41 minutes, 41 seconds

```

show chassis fpc detail (MX80 Router)

```

user@host> show chassis fpc detail
Slot 0 information:
  State              Online
  Temperature        47 degrees C / 116 degrees F
  Total CPU DRAM     1024 MB
  Total SRAM         331 MB
  Total SDRAM        1280 MB
  Start time         2010-02-08 12:25:33 PST
  Uptime             2 hours, 13 minutes, 19 seconds
Slot 1 information:
  State              Online
  Temperature        47 degrees C / 116 degrees F
  Total CPU DRAM     1024 MB
  Total SRAM         331 MB
  Total SDRAM        1280 MB
  Start time         2010-02-08 12:25:33 PST
  Uptime             2 hours, 13 minutes, 19 seconds

```

show chassis fpc (MX104 Router)

```

user@host> show chassis fpc
Temp CPU Utilization (%) Memory Utilization (%)
Slot State (C) Total Interrupt DRAM (MB) Heap Buffer
0 Online 32 15 5 2048 22 13
1 Online 32 15 5 2048 22 13
2 Online 32 15 5 2048 22 13

```

show chassis fpc detail (MX104 Router)

```

user@host> show chassis fpc detail
Slot 0 information:
  State              Online
  Temperature        32 (C)
  Total CPU DRAM     2048 MB
  Total SRAM         403 MB
  Total SDRAM        1316 MB
  Start time         2013-05-23 14:39:18 IST
  Uptime             1 hour, 20 minutes, 22 seconds
Slot 1 information:
  State              Online
  Temperature        32 (C)
  Total CPU DRAM     2048 MB
  Total SRAM         403 MB
  Total SDRAM        1316 MB
  Start time         2013-05-23 14:39:18 IST
  Uptime             1 hour, 20 minutes, 22 seconds
Slot 2 information:
  State              Online
  Temperature        32 (C)
  Total CPU DRAM     2048 MB
  Total SRAM         403 MB
  Total SDRAM        1316 MB
  Start time         2013-05-23 14:39:18 IST
  Uptime             1 hour, 20 minutes, 22 seconds

```

show chassis fpc pic-status (MX104 Router)

```

user@host> show chassis fpc pic-status
Slot 0   Online
Slot 1   Online
  PIC 0   Online      10x 1GE(LAN) -E SFP
  PIC 1   Online      10x 1GE(LAN) -E SFP
Slot 2   Online
  PIC 0   Online      4x 10GE(LAN) SFP+

```

show chassis fpc (MX240 Router)

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory DRAM (MB)	Utilization (%)
			Total Interrupt	Heap	Buffer
0	Empty				
1	Online	34	6 0	1024 18	30
2	Online	33	9 0	1024 24	30

show chassis fpc (EX Series Switch)

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory DRAM (MB)	Utilization (%)
			Total Interrupt	Heap	Buffer
0	Empty				
1	Online	41	13 0	2048 19	14
2	Online	42	12 0	2048 19	14

show chassis fpc detail (EX9200 Switch)

```

user@switch> show chassis fpc detail
Slot 2 information:
  State Online
  Temperature 37
  Total CPU DRAM 2048 MB
  Total RLDRAM 331 MB
  Total DDR DRAM 1536 MB
  Start time: 2014-03-12 15:35:28 UTC
  Uptime: 1 hour, 4 minutes, 29 seconds
  Max Power Consumption 239 Watts
Slot 3 information:
  State Online
  Temperature 39
  Total CPU DRAM 2048 MB
  Total RLDRAM 1036 MB
  Total DDR DRAM 6656 MB
  Start time: 2014-03-12 15:00:18 UTC
  Uptime: 1 hour, 39 minutes, 39 seconds
  Max Power Consumption 520 Watts

```

show chassis fpc (MX480 Router)

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory DRAM (MB)	Utilization (%)
			Total Interrupt	Heap	Buffer
0	Empty				
1	Online	36	9 0	1024 17	57
2	Empty				
3	Empty				
4	Empty				
5	Empty				

show chassis fpc (MX480 Router with 100-Gigabit Ethernet CFP)

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory Interrupt	Utilization (%)	DRAM (MB)	Heap	Buffer
0	Online	33	4	0		2048	10	13
1	Online	36	7	0		2048	16	13
2	Online	29	6	0		1024	27	29
3	Online	33	0	0		0	0	0
4	Online	36	7	0		2048	19	13
5	Online	34	31	11		2048	14	13

show chassis fpc pic-status (MX480 Router with 100-Gigabit Ethernet CFP)

```

user@host> show chassis fpc pic-status

```

Slot 1	Online	MPC Type 3
PIC 2	Online	1X100GE CFP
Slot 2	Online	DPCE 40x 1GE R EQ
PIC 0	Online	10x 1GE(LAN) EQ
PIC 1	Online	10x 1GE(LAN) EQ
PIC 2	Online	10x 1GE(LAN) EQ
PIC 3	Online	10x 1GE(LAN) EQ
Slot 3	Online	MPC Type 3
PIC 0	Online	1X100GE CFP
PIC 2	Online	1X100GE CFP
Slot 4	Online	MPC Type 3
PIC 0	Online	1X100GE CFP
PIC 2	Online	1X100GE CFP
Slot 5	Online	MPC Type 2 3D EQ
PIC 0	Online	2x 10GE XFP
PIC 1	Online	2x 10GE XFP
PIC 2	Online	10x 1GE(LAN) SFP
PIC 3	Online	10x 1GE(LAN) SFP

show chassis fpc pic-status (EX Series Switch)

```

user@host> show chassis fpc pic-status

```

Slot 1	Online	EX9200 32x10G SFP
PIC 0	Online	8X10GE SFPP
PIC 1	Online	8X10GE SFPP
PIC 2	Online	8X10GE SFPP
PIC 3	Online	8X10GE SFPP
Slot 2	Online	EX9200 32x10G SFP
PIC 0	Online	8X10GE SFPP
PIC 1	Online	8X10GE SFPP
PIC 2	Online	8X10GE SFPP
PIC 3	Online	8X10GE SFPP

show chassis fpc (MX480 Router with MPC4E)

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory Interrupt	Utilization (%)	DRAM (MB)	Heap	Buffer
0	Empty							
1	Empty							
2	Online		38	7	0	2048	19	14
3	Online		39	8	0	2048	18	14
4	Online		39	7	0	2048	17	14
5	Empty							

show chassis fpc detail (MX480 Router with MPC4E)

```

user@host> show chassis fpc detail
Slot 2 information:
  State                               Online
  Temperature                         38
  Total CPU DRAM                     2048 MB
  Total RLDRAM                       1036 MB
  Total DDR DRAM                     11264 MB
  Start time:                        2013-02-18 05:06:57 PST
  Uptime:                            17 hours, 41 minutes, 9 seconds
  Max Power Consumption               610 Watts
Slot 3 information:
  State                               Online
  Temperature                         38
  Total CPU DRAM                     2048 MB
  Total RLDRAM                       1036 MB
  Total DDR DRAM                     11264 MB
  Start time:                        2013-02-18 05:07:00 PST
  Uptime:                            17 hours, 41 minutes, 6 seconds
  Max Power Consumption               610 Watts
Slot 4 information:
  State                               Diagnostics
  Temperature                         37
  Total CPU DRAM                     0 MB
  Total RLDRAM                       0 MB
  Total DDR DRAM                     0 MB
  Max Power Consumption               520 Watts

```

show chassis fpc (MX480 Router with MPC4E)

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory Utilization (%)	DRAM (MB)	Heap	Buffer
0	Empty						
1	Empty						
2	Online	38	7	0	2048	19	14
3	Online	39	8	0	2048	18	14
4	Online	39	7	0	2048	17	14
5	Empty						

show chassis fpc detail (MX480 Router with MPC4E)

```

user@host> show chassis fpc detail
Slot 2 information:
  State                               Online
  Temperature                         38
  Total CPU DRAM                     2048 MB
  Total RLDRAM                       1036 MB
  Total DDR DRAM                     11264 MB
  Start time:                        2013-02-18 05:06:57 PST
  Uptime:                            17 hours, 41 minutes, 9 seconds
  Max Power Consumption               610 Watts
Slot 3 information:
  State                               Online
  Temperature                         38
  Total CPU DRAM                     2048 MB
  Total RLDRAM                       1036 MB
  Total DDR DRAM                     11264 MB
  Start time:                        2013-02-18 05:07:00 PST
  Uptime:                            17 hours, 41 minutes, 6 seconds

```

```

Max Power Consumption          610 Watts
Slot 4 information:
State                          Diagnostics
Temperature                    37
Total CPU DRAM                 0 MB
Total RLD RAM                  0 MB
Total DDR DRAM                 0 MB
Max Power Consumption          520 Watts

```

show chassis fpc (MX960 Router)

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	Total	CPU Utilization (%) Interrupt	Memory DRAM (MB)	Heap	Utilization (%) Buffer
0	Empty						
1	Empty						
2	Empty						
3	Online	25	19	0	1024	15	57
4	Empty						
5	Online	26	27	0	1024	15	57
6	Empty						
7	Empty						
8	Empty						
9	Empty						
10	Empty						
11	Empty						

show chassis fpc (MX960 Router with MPC5EQ)

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	Total	CPU Utilization (%) Interrupt	Memory DRAM (MB)	Heap	Utilization (%) Buffer
0	Online	38	16	0	3584	7	13
1	Online	31	15	0	2048	17	13
2	Empty						
3	Online	31	14	0	2048	20	13
4	Online	34	16	0	3584	7	13
5	Online	34	16	0	3584	7	13
6	Empty						
7	Online	32	9	0	2048	18	14
8	Online	36	19	0	3584	7	13
9	Online	31	9	0	2048	13	13
10	Online	35	14	0	3584	7	13
11	Online	33	11	0	2048	18	14

show chassis fpc detail (MX960 Router with MPC5EQ)

```

user@host> show chassis fpc detail
Slot 0 information:
State                          Online
Temperature                    38
Total CPU DRAM                 3584 MB
Total XR2                      291 MB
Total DDR DRAM                 24960 MB
Start time:                    2014-04-22 10:01:46 PDT
Uptime:                        1 hour, 23 minutes, 40 seconds
Max Power Consumption          607 Watts
Slot 1 information:
State                          Online
Temperature                    31
Total CPU DRAM                 2048 MB
Total RLD RAM                  1036 MB

```

```

Total DDR DRAM                6656 MB
Start time:                   2014-04-22 10:01:50 PDT
Uptime:                       1 hour, 23 minutes, 36 seconds
Max Power Consumption         520 Watts
Slot 3 information:
State                         Online
Temperature                   31
Total CPU DRAM                2048 MB
Total RLD RAM                 1324 MB
Total DDR DRAM                5120 MB
Start time:                   2014-04-22 10:01:50 PDT
Uptime:                       1 hour, 23 minutes, 36 seconds
Max Power Consumption         440 Watts
Slot 4 information:
State                         Online
Temperature                   34
Total CPU DRAM                3584 MB
Total XR2                     291 MB
Total DDR DRAM                24960 MB
Start time:                   2014-04-22 10:01:54 PDT
Uptime:                       1 hour, 23 minutes, 32 seconds
Max Power Consumption         607 Watts
Slot 5 information:
State                         Online
Temperature                   34
Total CPU DRAM                3584 MB
Total XR2                     291 MB
Total DDR DRAM                24960 MB
Start time:                   2014-04-22 10:01:56 PDT
Uptime:                       1 hour, 23 minutes, 30 seconds
Max Power Consumption         607 Watts
Slot 7 information:
State                         Online
Temperature                   32
Total CPU DRAM                2048 MB
Total RLD RAM                 1036 MB
Total DDR DRAM                11264 MB
Start time:                   2014-04-22 10:02:02 PDT
Uptime:                       1 hour, 23 minutes, 24 seconds
Max Power Consumption         608 Watts
Slot 8 information:
State                         Online
Temperature                   36
Total CPU DRAM                3584 MB
Total XR2                     291 MB
Total DDR DRAM                24960 MB
Start time:                   2014-04-22 10:02:07 PDT
Uptime:                       1 hour, 23 minutes, 19 seconds
Max Power Consumption         607 Watts
Slot 9 information:
State                         Online
Temperature                   31
Total CPU DRAM                2048 MB
Total RLD RAM                 734 MB
Total DDR DRAM                3108 MB
Start time:                   2014-04-22 10:02:05 PDT
Uptime:                       1 hour, 23 minutes, 21 seconds
Max Power Consumption         368 Watts
Slot 10 information:
State                         Online
Temperature                   35

```

```

Total CPU DRAM          3584 MB
Total XR2               291 MB
Total DDR DRAM          24960 MB
Start time:             2014-04-22 10:02:11 PDT
Uptime:                 1 hour, 23 minutes, 15 seconds
Max Power Consumption    607 Watts
Slot 11 information:
State                   Online
Temperature             33
Total CPU DRAM          2048 MB
Total RLDRAM            1036 MB
Total DDR DRAM          11264 MB
Start time:             2014-04-22 10:02:16 PDT
Uptime:                 1 hour, 23 minutes, 10 seconds
Max Power Consumption    608 Watts

```

show chassis fpc pic-status(MX960 Router with MPC5EQ)

```

user@host> show chassis fpc pic-status
Slot 0  Online      MPC5E 3D Q 2CGE+4XGE
PIC 0   Online      2X10GE SFPP OTN
PIC 1   Online      1X100GE CFP2 OTN
PIC 2   Online      2X10GE SFPP OTN
PIC 3   Online      1X100GE CFP2 OTN
Slot 1  Online      MPCE Type 3 3D
PIC 0   Online      10X10GE SFPP
PIC 2   Online      1X100GE CXP
Slot 3  Online      MPC 3D 16x 10GE
PIC 0   Online      4x 10GE(LAN) SFP+
PIC 1   Online      4x 10GE(LAN) SFP+
PIC 2   Online      4x 10GE(LAN) SFP+
PIC 3   Online      4x 10GE(LAN) SFP+
Slot 4  Online      MPC5E 3D Q 2CGE+4XGE
PIC 0   Online      2X10GE SFPP OTN
PIC 1   Online      1X100GE CFP2 OTN
PIC 2   Online      2X10GE SFPP OTN
PIC 3   Online      1X100GE CFP2 OTN
Slot 5  Online      MPC5E 3D Q 2CGE+4XGE
PIC 0   Online      2X10GE SFPP OTN
PIC 1   Online      1X100GE CFP2 OTN
PIC 2   Online      2X10GE SFPP OTN
PIC 3   Online      1X100GE CFP2 OTN
Slot 7  Online      MPC4E 3D 2CGE+8XGE
PIC 0   Online      4x10GE SFPP
PIC 1   Online      1X100GE CFP
PIC 2   Online      4x10GE SFPP
PIC 3   Online      1X100GE CFP
Slot 8  Online      MPC5E 3D Q 24XGE+6XLGE
PIC 0   Offline     12X10GE SFPP OTN
PIC 1   Offline     12X10GE SFPP OTN
PIC 2   Online      3X40GE QSFPP
PIC 3   Online      3X40GE QSFPP
Slot 9  Online      MPCE Type 2 3D P
PIC 0   Online      2x 10GE XFP
PIC 1   Online      2x 10GE XFP
Slot 10 Online      MPC5E 3D Q 24XGE+6XLGE
PIC 0   Online      12X10GE SFPP
PIC 1   Online      12X10GE SFPP
PIC 2   Offline     3X40GE QSFPP
PIC 3   Offline     3X40GE QSFPP

```

```

Slot 11 Online      MPC4E 3D 2CGE+8XGE
PIC 0 Online      4x10GE SFPP
PIC 1 Online      1X100GE CFP
PIC 2 Online      4x10GE SFPP
PIC 3 Online      1X100GE CFP

```

show chassis fpc (MX240, MX480, MX960 Routers with Application Services Modular Line Card)

```

user@host> show chassis fpc 1
      Temp CPU Utilization (%) Memory      Utilization (%)
Slot State      (C) Total  Interrupt      DRAM (MB) Heap      Buffer
1 Online          34      5          0      3072      5      13

```

show chassis fpc (MX240, MX480, MX960 with Application Services Modular Line Card)

```

user@host> show chassis fpc 1 detail
Slot 1 information:
State Online
Temperature 34
Total CPU DRAM 3072 MB
Total RLDRAM 259 MB
Total DDR DRAM 4864 MB
Start time: 2012-06-19 10:51:43 PDT
Uptime: 16 minutes, 48 seconds
Max Power Consumption 550 Watts

```

show chassis fpc (MX2010 Routers)

```

user@host> show chassis fpc
      Temp CPU Utilization (%) Memory      Utilization (%)
Slot State      (C) Total  Interrupt      DRAM (MB) Heap      Buffer
0 Online          34      9          0      2048      18      13
1 Online          32      9          0      2048      15      13
2 Empty
3 Empty
4 Empty
5 Empty
6 Empty
7 Empty
8 Online          31     13          0      2048      11      13
9 Online          33     10          0      2048      18      13

```

show chassis fpc (MX2020 Routers)

```

user@host> show chassis fpc
      Temp CPU Utilization (%) Memory      Utilization (%)
Slot State      (C) Total  Interrupt      DRAM (MB) Heap      Buffer
0 Online          10     12          0      2048      18      13
1 Online           8      9          0      2048      18      13
2 Online           7      9          0      2048      18      13
3 Online           8     10          0      2048      18      13
4 Online           9     10          0      2048      18      13
5 Online           8      9          0      2048      18      13
6 Online           8     10          0      2048      18      13
7 Online           9      9          0      2048      18      13
8 Online           9     10          0      2048      18      13
9 Online          10      9          0      2048      18      13
10 Online          16      8          0      2048      18      13
11 Online          11     10          0      2048      18      13
12 Online          10     10          0      2048      18      13
13 Online          11      9          0      2048      18      13

```


14	Online	12	10	0	2048	18	13
15	Online	13	9	0	2048	18	13
16	Online	13	9	0	2048	18	13
17	Online	12	9	0	2048	18	13
18	Online	12	8	0	2048	18	13
19	Online	14	10	0	2048	18	13

show chassis fpc (MX2020 Router with MPC4E)

```

user@host> show chassis fpc
      Temp CPU Utilization (%) Memory      Utilization (%)
Slot State      (C) Total Interrupt      DRAM (MB) Heap      Buffer
0  Online           33    12         2      2048      11      13
1  Empty
2  Empty
3  Empty
4  Empty
5  Empty
6  Empty
7  Empty
8  Empty
9  Online           31    10         0      2048      11      13
10 Online           32     7         0      2048      14      13
11 Empty
12 Empty
13 Empty
14 Online           28    12         0      2048      15      14
15 Empty
16 Empty
17 Empty
18 Empty
19 Online           38     8         0      2048      18      13

```

show chassis fpc detail (MX2020 Router with MPC4E)

```

user@host> show chassis fpc detail
Slot 0 information:
  State                Online
  Temperature           34
  Total CPU DRAM        2048 MB
  Total RLD RAM         806 MB
  Total DDR DRAM        2632 MB
  Start time:           2013-02-17 08:17:35 PST
  Uptime:               1 day, 14 hours, 50 minutes, 39 seconds
  Max Power Consumption 368 Watts
Slot 9 information:
  State                Online
  Temperature           32
  Total CPU DRAM        2048 MB
  Total RLD RAM         806 MB
  Total DDR DRAM        2632 MB
  Start time:           2013-02-17 08:17:43 PST
  Uptime:               1 day, 14 hours, 50 minutes, 31 seconds
  Max Power Consumption 368 Watts
Slot 10 information:
  State                Online
  Temperature           37
  Total CPU DRAM        2048 MB
  Total RLD RAM        1036 MB
  Total DDR DRAM        6656 MB
  Start time:           2013-02-17 08:17:54 PST

```

```

Uptime: 1 day, 14 hours, 50 minutes, 20 seconds
Max Power Consumption 520 Watts
Slot 14 information:
State Online
Temperature 32
Total CPU DRAM 2048 MB
Total RLD RAM 1036 MB
Total DDR DRAM 11264 MB
Start time: 2013-02-17 08:18:01 PST
Uptime: 1 day, 14 hours, 50 minutes, 13 seconds
Max Power Consumption 610 Watts
Slot 19 information:
State Online
Temperature 38
Total CPU DRAM 2048 MB
Total RLD RAM 1324 MB
Total DDR DRAM 5120 MB
Start time: 2013-02-17 08:18:08 PST
Uptime: 1 day, 14 hours, 50 minutes, 6 seconds
Max Power Consumption 440 Watts

```

show chassis fpc (MX2020 Router with MPC5EQ and MPC6E)

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory DRAM (MB)	Utilization (%)
			Total Interrupt	Heap	Buffer
0	Online	31	20 0	3584 7	13
1	Online	28	19 0	2048 17	13
2	Online	27	10 0	2048 18	14
3	Online	26	10 0	2048 13	13
4	Online	29	19 0	3584 7	13
5	Online	28	68 0	2048 20	13
6	Empty				
7	Empty				
8	Empty				
9	Online	36	19 0	3584 10	13
10	Online	37	26 0	3584 10	13
11	Empty				
12	Empty				
13	Empty				
14	Empty				
15	Empty				
16	Empty				
17	Online	28	43 0	3584 10	13
18	Online	29	19 0	3584 7	13
19	Online	31	19 0	3584 7	13

show chassis fpc detail (MX2020 Router with MPCEQ and MPC6E)

```

user@host> show chassis fpc detail
Slot 0 information:
State Online
Temperature 31
Total CPU DRAM 3584 MB
Total XR2 291 MB
Total DDR DRAM 24960 MB
Start time: 2014-04-22 23:33:19 PDT
Uptime: 6 minutes, 24 seconds
Max Power Consumption 607 Watts
Slot 1 information:

```

```

State                               Online
Temperature                         28
Total CPU DRAM                     2048 MB
Total RLD RAM                      1036 MB
Total DDR DRAM                     6656 MB
Start time:                        2014-04-22 23:33:24 PDT
Uptime:                            6 minutes, 19 seconds
Max Power Consumption              520 Watts
Slot 2 information:
State                               Online
Temperature                         27
Total CPU DRAM                     2048 MB
Total RLD RAM                      1036 MB
Total DDR DRAM                     11264 MB
Start time:                        2014-04-22 23:33:34 PDT
Uptime:                            6 minutes, 9 seconds
Max Power Consumption              608 Watts
Slot 3 information:
State                               Online
Temperature                         26
Total CPU DRAM                     2048 MB
Total RLD RAM                      734 MB
Total DDR DRAM                     3108 MB
Start time:                        2014-04-22 23:33:39 PDT
Uptime:                            6 minutes, 4 seconds
Max Power Consumption              368 Watts
Slot 4 information:
State                               Online
Temperature                         29
Total CPU DRAM                     3584 MB
Total XR2                          291 MB
Total DDR DRAM                     24960 MB
Start time:                        2014-04-22 23:33:51 PDT
Uptime:                            5 minutes, 52 seconds
Max Power Consumption              607 Watts
Slot 5 information:
State                               Online
Temperature                         28
Total CPU DRAM                     2048 MB
Total RLD RAM                      1324 MB
Total DDR DRAM                     5120 MB
Start time:                        2014-04-22 23:33:57 PDT
Uptime:                            5 minutes, 46 seconds
Max Power Consumption              440 Watts
Slot 9 information:
State                               Online
Temperature                         25
Total CPU DRAM                     3584 MB
Total XR2                          518 MB
Total DDR DRAM                     49920 MB
Start time:                        2014-04-22 23:31:20 PDT
Uptime:                            8 minutes, 23 seconds
Max Power Consumption              1130 Watts
Slot 10 information:
State                               Online
Temperature                         32
Total CPU DRAM                     3584 MB
Total XR2                          518 MB
Total DDR DRAM                     49920 MB
Start time:                        2014-04-22 23:31:25 PDT
Uptime:                            8 minutes, 18 seconds

```

```

Max Power Consumption          1130 Watts
Slot 17 information:
  State                        Online
  Temperature                  25
  Total CPU DRAM               3584 MB
  Total XR2                    518 MB
  Total DDR DRAM               49920 MB
  Start time:                  2014-04-22 23:31:29 PDT
  Uptime:                      8 minutes, 14 seconds
  Max Power Consumption        1130 Watts
Slot 18 information:
  State                        Online
  Temperature                  29
  Total CPU DRAM               3584 MB
  Total XR2                    291 MB
  Total DDR DRAM               24960 MB
  Start time:                  2014-04-22 23:34:11 PDT
  Uptime:                      5 minutes, 32 seconds
  Max Power Consumption        607 Watts
Slot 19 information:
  State                        Online
  Temperature                  32
  Total CPU DRAM               3584 MB
  Total XR2                    291 MB
  Total DDR DRAM               24960 MB
  Start time:                  2014-04-22 23:34:20 PDT
  Uptime:                      5 minutes, 23 seconds
  Max Power Consumption        607 Watts

```

show chassis fpc pic-status (MX2020 Router with MPC5EQ and MPC6E)

```

user@host> show chassis fpc pic-status
Slot 0  Online      MPC5E 3D Q 24XGE+6XLGE
  PIC 0  Online      12X10GE SFPP OTN
  PIC 1  Online      12X10GE SFPP OTN
  PIC 2  Offline     3X40GE QSFP
  PIC 3  Offline     3X40GE QSFP
Slot 1  Online      MPCE Type 3 3D
  PIC 0  Online      10X10GE SFPP
  PIC 2  Online      1X100GE CXP
Slot 2  Online      MPC4E 3D 2CGE+8XGE
  PIC 0  Online      4x10GE SFPP
  PIC 1  Online      1X100GE CFP
  PIC 2  Online      4x10GE SFPP
  PIC 3  Online      1X100GE CFP
Slot 3  Online      MPCE Type 2 3D P
  PIC 0  Online      2x 10GE XFP
  PIC 1  Online      2x 10GE XFP
Slot 4  Online      MPC5E 3D Q 2CGE+4XGE
  PIC 0  Online      2X10GE SFPP OTN
  PIC 1  Online      1X100GE CFP2 OTN
  PIC 2  Online      2X10GE SFPP OTN
  PIC 3  Online      1X100GE CFP2 OTN
Slot 5  Online      MPC 3D 16x 10GE
  PIC 0  Online      4x 10GE(LAN) SFP+
  PIC 1  Online      4x 10GE(LAN) SFP+
  PIC 2  Online      4x 10GE(LAN) SFP+
  PIC 3  Online      4x 10GE(LAN) SFP+
Slot 9  Online      MPC6E 3D
  PIC 0  Online      2X100GE CFP2 OTN
  PIC 1  Online      2X100GE CFP2 OTN

```

```

Slot 10 Online MPC6E 3D
PIC 0 Online 24X10GE SFPP OTN
PIC 1 Online 4X100GE CXP
Slot 17 Online MPC6E 3D
PIC 0 Online 24X10GE SFPP
PIC 1 Online 4X100GE CXP
Slot 18 Online MPC5E 3D Q 24XGE+6XLGE
PIC 0 Offline 12X10GE SFPP OTN
PIC 1 Offline 12X10GE SFPP OTN
PIC 2 Online 3X40GE QSFPP
PIC 3 Online 3X40GE QSFPP
Slot 19 Online MPC5E 3D Q 24XGE+6XLGE
PIC 0 Online 12X10GE SFPP OTN
PIC 1 Offline 12X10GE SFPP OTN
PIC 2 Offline 3X40GE QSFPP
PIC 3 Online 3X40GE QSFPP

```

show chassis fpc detail (MX Series Routers)

```

user@host> show chassis fpc detail 2
Slot 0 information:
State Online
Temperature 36 degrees C / 96 degrees F
Total CPU DRAM 1024 MB
Total RLDRAM 256 MB
Total DDR DRAM 4096 MB
Start time: 2009-08-11 21:20:30 PDT
Uptime: 2 hours, 8 minutes, 50 seconds
Max Power Consumption 335 Watts

```

show chassis fpc detail (EX Series Switches)

```

user@host> show chassis fpc detail 2
Slot 1 information:
State Online
Temperature 41
Total CPU DRAM 2048 MB
Total RLDRAM 1036 MB
Total DDR DRAM 11264 MB
Start time: 2013-04-02 00:04:52 PDT
Uptime: 7 days, 9 hours, 47 minutes, 46 seconds
Max Power Consumption 610 Watts
Slot 2 information:
State Online
Temperature 41
Total CPU DRAM 2048 MB
Total RLDRAM 1036 MB
Total DDR DRAM 11264 MB
Start time: 2013-04-02 00:04:56 PDT
Uptime: 7 days, 9 hours, 47 minutes, 42 seconds
Max Power Consumption 610 Watts

```

show chassis fpc (Hardware Not Supported)

```

user@host> show chassis fpc
show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)	Interrupt	Memory DRAM (MB)	Utilization (%)	Heap	Buffer
0	Online	-----	-----	CPU less FPC	-----	-----	-----	-----
1	Present	-----	Hardware Not In Right Slot				-----	-----
2	Online	0	0	0	0	0	0	0
3	Present	-----	Hardware Not Supported				-----	-----

```

4 Empty
5 Empty
6 Online           0           0           0           0           0

```

show chassis fpc detail (Hardware Not Supported)

```

user@host> show chassis fpc detail
Slot 0 information:
  State           Online
  Total CPU DRAM   ---- CPU less FPC ----
  Start time       2006-07-07 03:21:00 UTC
  Uptime           27 minutes, 51 seconds
Slot 1 information:
  State           Present
  Reason           --- Hardware Not In Right Slot ---
Slot 2 information:
  State           Online
  Total CPU DRAM   32 MB
  Start time       2006-07-07 03:20:59 UTC
  Uptime           27 minutes, 52 seconds
Slot 3 information:
  State           Present
  Reason           --- Hardware Not Supported ---
  Total CPU DRAM   0 MB
Slot 6 information:
  State           Online
  Total CPU DRAM   32 MB
  Start time       2006-07-07 03:21:01 UTC
  Uptime           27 minutes, 50 seconds

```

show chassis fpc pic-status

```

user@host> show chassis fpc pic-status
Slot 0 Online
  PIC 1   1x OC-12 ATM, MM
  PIC 2   1x OC-12 ATM, MM
  PIC 3   1x OC-12 ATM, MM
Slot 1 Online
  PIC 0   1x OC-48 SONET, SMIR
Slot 2 Online
  PIC 0   1x OC-192 SONET, SMSR

```

show chassis fpc pic-status (M Series Routers)

```

user@host> show chassis fpc pic-status
Slot 1 Online      FPC Type 1
  PIC 0 Present    2x OC-3 ATM, MM- Hardware Error
  PIC 1 Online     4x OC-3 SONET, SMIR
Slot 2 Online      E-FPC Type 2
  PIC 0 Online     4x G/E, 1000 BASE-SX
  PIC 1 Online     2x G/E SFP, 1000 BASE
  PIC 3 Online     1x Tunnel
Slot 3 Online      E-FPC Type 1
  PIC 0 Online     1x G/E IQ, 1000 BASE
  PIC 2 Online     1x G/E SFP, 1000 BASE
Slot 4 Online      E-FPC Type 2
  PIC 0 Online     4x G/E SFP, 1000 BASE
  PIC 1 Online     4x G/E SFP, 1000 BASE
  PIC 2 Online     4x G/E SFP, 1000 BASE
  PIC 3 Online     4x G/E SFP, 1000 BASE

```

```
Slot 5   Online      FPC Type 2
...
```

show chassis fpc pic-status (M120 Router)

```
user@host> show chassis fpc pic-status
Slot 1   Online      M120 CFPC 10GE
  PIC 0   Online      1x 10GE(LAN/WAN) XFP
Slot 3   Online      M120 FPC Type 2 (proto)
  PIC 0   Online      2x G/E IQ, 1000 BASE
  PIC 1   Online      4x OC-3 SONET, SMIR
  PIC 2   Online      2x G/E IQ, 1000 BASE
  PIC 3   Online      8x 1GE(LAN), IQ2
Slot 4   Online      M120 FPC Type 3 (proto)
  PIC 0   Online      10x 1GE(LAN), 1000 BASE
Slot 5   Online      M120 FPC Type 1 (proto)
  PIC 0   Present     1x G/E, 1000 BASE-LX- Not Supported
  PIC 1   Online      1x CHOC3 IQ SONET, SMLR
  PIC 2   Online      4x CHDS3 IQ
  PIC 3   Online      1x G/E SFP, 1000 BASE
```

show chassis fpc pic-status (MX240, MX480, and MX960 Routers with Application Services Modular Line Card)

In the following output **Slot 1** and **Slot 5** are the Application Services Modular Carrier Cards (AS MCC), **PIC 0** is the Application Services Modular Storage Card (AS MSC), and **PIC 2** is the Application Services Modular Processing Card (AS MXC).

```
user@host> show chassis fpc pic-status
Slot 2   Online      MPC Type 1 3D Q
  Slot 1   Online      AS-MCC
  PIC 0   Online      AS-MSC
  PIC 2   Online      AS-MXC
Slot 4   Offline     MPC 3D 16x 10GE
Slot 5   Offline     AS-MCC
```

show chassis fpc lcc (TX Matrix Router)

```
user@host> show chassis fpc lcc 0
lcc0-re0:
-----
Slot State      Temp CPU      Utilization (%)  Memory  Utilization (%)
      (C) Total Interrupt      DRAM (MB)      Heap      Buffer
0 Empty
1 Online        27    2         0        256      8        44
2 Online        27    3         0        256     15        44
3 Empty
4 Empty
5 Empty
6 Empty
7 Empty
```

show chassis fpc pic-status (TX Matrix Router)

```
user@host> show chassis fpc pic-status
lcc0-re0:
-----
Slot 0   Online      FPC Type 3
  PIC 0   Online      1x OC-192 SM SR1
  PIC 1   Online      1x OC-192 SM SR2
  PIC 2   Online      1x OC-192 SM SR1
  PIC 3   Online      1x Tunnel
```

```

Slot 1  Online      FPC Type 2
PIC 0   Online      1x OC-48 SONET, SMSR
PIC 1   Online      1x OC-48 SONET, SMSR

```

```
lcc1-re0:
```

```
lcc2-re0:
```

```

Slot 1  Online      FPC Type 3
PIC 0   Online      1x OC-192 SM SR1
Slot 5  Online      FPC Type 2
PIC 0   Online      1x OC-48 SONET, SMSR
PIC 1   Online      2x G/E, 1000 BASE-LX
PIC 2   Online      2x G/E, 1000 BASE-LX
PIC 3   Online      1x OC-48 SONET, SMSR

```

```
lcc3-re0:
```

show chassis fpc pic-status lcc (TX Matrix Router)

```

user@host> show chassis fpc pic-status lcc 0
lcc0-re0:

```

```

Slot 0  Online      FPC Type 3
PIC 0   Online      1x OC-192 SM SR2
Slot 1  Online      FPC Type 2
PIC 0   Online      2x OC-12 ATM2 IQ, MM
PIC 1   Online      1x OC-48 SONET, SMSR
PIC 2   Online      1x OC-48 SONET, SMSR
PIC 3   Online      4x G/E, 1000 BASE-SX

```

show chassis fpc (TX Matrix Plus Router)

```

user@host> show chassis fpc
lcc0-re0:

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory	Utilization (%)
			Total Interrupt	DRAM (MB)	Heap Buffer
0	Empty				
1	Online	38	4 0	2048	3 24
2	Online	43	8 0	2048	6 24
3	Empty				
4	Online	43	6 0	2048	6 24
5	Empty				
6	Online	42	13 0	2048	6 24
7	Online	45	7 0	2048	3 24

```
lcc2-re0:
```

Slot	State	Temp (C)	CPU Utilization (%)	Memory	Utilization (%)
			Total Interrupt	DRAM (MB)	Heap Buffer
0	Online	42	10 0	2048	6 24
1	Empty				
2	Online	42	11 0	2048	6 24
3	Online	40	5 0	2048	3 24
4	Online	33	26 0	1024	8 49
5	Empty				
6	Online	43	8 0	2048	6 24
7	Online	46	6 0	2048	3 24

lcc3-re0:

Slot	State	Temp (C)	CPU Total	Utilization (%) Interrupt	Memory DRAM (MB)	Utilization (%) Heap	Utilization (%) Buffer
0	Empty						
1	Empty						
2	Online	39	30	0	2048	7	24
3	Empty						
4	Online	41	8	0	2048	6	24
5	Online	41	12	0	2048	6	24
6	Online	40	8	0	2048	6	24
7	Online	42	4	0	2048	3	24

show chassis fpc lcc (TX Matrix Plus Router)

user@host> show chassis fpc lcc 0

lcc0-re0:

Slot	State	Temp (C)	CPU Total	Utilization (%) Interrupt	Memory DRAM (MB)	Utilization (%) Heap	Utilization (%) Buffer
0	Empty						
1	Online	38	4	0	2048	3	24
2	Online	43	8	0	2048	6	24
3	Empty						
4	Online	43	6	0	2048	6	24
5	Empty						
6	Online	42	14	0	2048	6	24
7	Online	45	6	0	2048	3	24

show chassis fpc detail (TX Matrix Plus Router)

user@host> show chassis fpc details

lcc0-re0:

Slot 1 information:

```

State                               Online
Temperature                         38 degrees C / 100 degrees F
Total CPU DRAM                      2048 MB
Total SRAM                          64 MB
Total SDRAM                         1280 MB
Start time                         2010-10-04 20:06:22 PDT
Uptime                             1 hour, 32 minutes, 51 seconds

```

Slot 2 information:

```

State                               Online
Temperature                         43 degrees C / 109 degrees F
Total CPU DRAM                      2048 MB
Total SRAM                          128 MB
Total SDRAM                         2560 MB
Start time                         2010-10-04 20:06:37 PDT
Uptime                             1 hour, 32 minutes, 36 seconds

```

Slot 4 information:

```

State                               Online
Temperature                         43 degrees C / 109 degrees F
Total CPU DRAM                      2048 MB
Total SRAM                          128 MB
Total SDRAM                         2560 MB
Start time                         2010-10-04 20:06:40 PDT
Uptime                             1 hour, 32 minutes, 33 seconds

```

Slot 6 information:

```

State                               Online
Temperature                         42 degrees C / 107 degrees F
Total CPU DRAM                     2048 MB
Total SRAM                         128 MB
Total SDRAM                        2560 MB
Start time                         2010-10-04 20:06:42 PDT
Uptime                             1 hour, 32 minutes, 31 seconds

```

Slot 7 information:

```

State                               Online
Temperature                         45 degrees C / 113 degrees F
Total CPU DRAM                     2048 MB
Total SRAM                         64 MB
Total SDRAM                        1280 MB
Start time                         2010-10-04 20:06:43 PDT
Uptime                             1 hour, 32 minutes, 30 seconds

```

lcc2-re0:

Slot 0 information:

```

State                               Online
Temperature                         42 degrees C / 107 degrees F
Total CPU DRAM                     2048 MB
Total SRAM                         128 MB
Total SDRAM                        2560 MB
Start time                         2010-10-04 20:06:35 PDT
Uptime                             1 hour, 32 minutes, 38 seconds

```

Slot 2 information:

```

State                               Online
Temperature                         42 degrees C / 107 degrees F
Total CPU DRAM                     2048 MB
Total SRAM                         128 MB
Total SDRAM                        2560 MB
Start time                         2010-10-04 20:06:37 PDT
Uptime                             1 hour, 32 minutes, 36 seconds

```

Slot 3 information:

```

State                               Online
Temperature                         40 degrees C / 104 degrees F
Total CPU DRAM                     2048 MB
Total SRAM                         64 MB
Total SDRAM                        1280 MB
Start time                         2010-10-04 20:06:28 PDT
Uptime                             1 hour, 32 minutes, 45 seconds

```

Slot 4 information:

```

State                               Online
Temperature                         33 degrees C / 91 degrees F
Total CPU DRAM                     1024 MB
Total SRAM                         64 MB
Total SDRAM                        1280 MB
Start time                         2010-10-04 20:08:03 PDT
Uptime                             1 hour, 31 minutes, 10 seconds

```

Slot 6 information:

```

State                               Online
Temperature                         43 degrees C / 109 degrees F
Total CPU DRAM                     2048 MB
Total SRAM                         128 MB
Total SDRAM                        2560 MB
Start time                         2010-10-04 20:06:44 PDT
Uptime                             1 hour, 32 minutes, 29 seconds

```

Slot 7 information:

```

State                               Online
Temperature                         46 degrees C / 114 degrees F

```

```

Total CPU DRAM          2048 MB
Total SRAM              64 MB
Total SDRAM            1280 MB
Start time              2010-10-04 20:06:46 PDT
Uptime                  1 hour, 32 minutes, 27 seconds

```

```
lcc3-re0:
```

```
-----
Slot 2 information:
```

```

State                  Online
Temperature            38 degrees C / 100 degrees F
Total CPU DRAM        2048 MB
Total SRAM            128 MB
Total SDRAM           2560 MB
Start time            2010-10-04 20:17:31 PDT
Uptime                1 hour, 21 minutes, 42 seconds

```

```
Slot 4 information:
```

```

State                  Online
Temperature            41 degrees C / 105 degrees F
Total CPU DRAM        2048 MB
Total SRAM            128 MB
Total SDRAM           2560 MB
Start time            2010-10-04 20:17:34 PDT
Uptime                1 hour, 21 minutes, 39 seconds

```

```
Slot 5 information:
```

```

State                  Online
Temperature            41 degrees C / 105 degrees F
Total CPU DRAM        2048 MB
Total SRAM            128 MB
Total SDRAM           2560 MB
Start time            2010-10-04 20:17:36 PDT
Uptime                1 hour, 21 minutes, 37 seconds

```

```
Slot 6 information:
```

```

State                  Online
Temperature            40 degrees C / 104 degrees F
Total CPU DRAM        2048 MB
Total SRAM            128 MB
Total SDRAM           2560 MB
Start time            2010-10-04 20:17:39 PDT
Uptime                1 hour, 21 minutes, 34 seconds

```

```
Slot 7 information:
```

```

State                  Online
Temperature            42 degrees C / 107 degrees F
Total CPU DRAM        2048 MB
Total SRAM            64 MB
Total SDRAM           1280 MB
Start time            2010-10-04 20:17:41 PDT
Uptime                1 hour, 21 minutes, 32 seconds

```

show chassis fpc pic-status (TX Matrix Plus Router)

```
user@host> show chassis fpc pic-status
```

```
lcc0-re0:
```

```

-----
Slot 1  Online      FPC Type 2-ES
PIC 0   Online      8x 1GE(LAN), IQ2
Slot 2  Online      FPC Type 4-ES
PIC 0   Online      4x 10GE (LAN/WAN) XFP
Slot 4  Online      FPC Type 4-ES
PIC 0   Online      4x 10GE (LAN/WAN) XFP

```

```

Slot 6  Online      FPC Type 4-ES
      PIC 0  Online      4x 10GE (LAN/WAN) XFP
      PIC 1  Online      4x 10GE (LAN/WAN) XFP
Slot 7  Online      FPC Type 3-ES
      PIC 0  Online      10x 1GE(LAN), 1000 BASE
      PIC 2  Online      1x OC-192 SM SR2
      PIC 3  Online      10x 1GE(LAN), 1000 BASE

```

lcc2-re0:

```

-----
Slot 0  Online      FPC Type 4-ES
      PIC 0  Online      4x 10GE (LAN/WAN) XFP
Slot 2  Online      FPC Type 4-ES
      PIC 0  Online      4x 10GE (LAN/WAN) XFP
      PIC 1  Online      4x 10GE (LAN/WAN) XFP
Slot 3  Online      FPC Type 2-ES
      PIC 0  Online      8x 1GE(LAN), IQ2
Slot 4  Online      FPC Type 4
      PIC 0  Online      10x10GE(LAN/WAN) SFPP
Slot 6  Online      FPC Type 4-ES
      PIC 0  Online      4x OC-192 SONET XFP
Slot 7  Online      FPC Type 3-ES
      PIC 0  Online      10x 1GE(LAN), 1000 BASE
      PIC 1  Offline     1x 10GE(LAN/WAN) IQ2E
      PIC 2  Online      1x OC-192 SM SR2
      PIC 3  Online      1x Tunnel

```

lcc3-re0:

```

-----
Slot 2  Online      FPC Type 4-ES
      PIC 0  Online      10x10GE(LAN/WAN) SFPP
Slot 4  Online      FPC Type 4-ES
      PIC 0  Online      4x OC-192 SONET XFP
Slot 5  Online      FPC Type 4-ES
      PIC 0  Online      4x OC-192 SONET XFP
      PIC 1  Online      4x 10GE (LAN/WAN) XFP
Slot 6  Online      FPC Type 4-ES
      PIC 1  Online      4x 10GE (LAN/WAN) XFP
Slot 7  Online      FPC Type 3-ES
      PIC 0  Online      10x 1GE(LAN), 1000 BASE
      PIC 1  Online      8x 1GE(TYPE3), IQ2E
      PIC 2  Online      4x OC-48 SONET

```

show chassis fpc (T1600 Router)

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)		Memory DRAM (MB)	Utilization (%)	
			Total	Interrupt		Heap	Buffer
0	Empty						
1	Empty						
2	Online	49	3	0	2048	3	24
3	Online	46	6	0	2048	6	24
4	Empty						
5	Online	46	5	0	2048	3	24
6	Empty						
7	Online	44	8	0	1024	7	49

show chassis fpc detail (T1600 Router)

```

user@host> show chassis fpc detail

```

```

show chassis fpc detail
Slot 2 information:
  State                Online
  Temperature          49 degrees C / 120 degrees F
  Total CPU DRAM       2048 MB
  Total SRAM           64 MB
  Total SDRAM          1280 MB
  Start time           2010-10-04 21:12:52 PDT
  Uptime               32 minutes, 9 seconds
Slot 3 information:
  State                Online
  Temperature          47 degrees C / 116 degrees F
  Total CPU DRAM       2048 MB
  Total SRAM           128 MB
  Total SDRAM          2560 MB
  Start time           2010-10-04 21:13:06 PDT
  Uptime               31 minutes, 55 seconds
Slot 5 information:
  State                Online
  Temperature          46 degrees C / 114 degrees F
  Total CPU DRAM       2048 MB
  Total SRAM           64 MB
  Total SDRAM          1280 MB
  Start time           2010-10-04 21:12:56 PDT
  Uptime               32 minutes, 5 seconds
Slot 7 information:
  State                Online
  Temperature          44 degrees C / 111 degrees F
  Total CPU DRAM       1024 MB
  Total SRAM           64 MB
  Total SDRAM          1280 MB
  Start time           2010-10-04 21:14:34 PDT
  Uptime               30 minutes, 27 seconds

```

show chassis fpc <fpc-slot> (EX Series Switch)

```
user@host> show chassis fpc 2
```

Slot	State	Temp (C)	CPU Utilization (%)	Memory DRAM (MB)	Utilization (%)
			Total Interrupt	Heap	Buffer
2	Online	40	12 0	2048 19	14

show chassis fpc slot (T1600 Router)

```
user@host> show chassis fpc slot 2
```

Slot	State	Temp (C)	CPU Utilization (%)	Memory DRAM (MB)	Utilization (%)
			Total Interrupt	Heap	Buffer
2	Online	49	3 0	2048 3	24

show chassis fpc pic-status (T1600 Router)

```
user@host> show chassis fpc pic-status
```

```

Slot 2  Online  FPC Type 1-ES
PIC 0   Online  Load Type 1
PIC 1   Online  4x 1GE(LAN), IQ2E
PIC 3   Online  1x OC-12-3 SFP
Slot 3  Online  FPC Type 4-ES
PIC 0   Online  4x 10GE (LAN/WAN) XFP
PIC 1   Online  4x OC-192 SONET XFP

```

```

Slot 5  Online      FPC Type 2-ES
PIC 0   Online      Load Type 2
PIC 1   Online      8x 1GE(LAN), IQ2E
PIC 2   Online      8x 1GE(LAN), IQ2E
PIC 3   Online      1x OC-48-12-3 SFP
Slot 7  Online      FPC Type 4
PIC 0   Online      4x 10GE (LAN/WAN) XFP

```

show chassis fpc (T4000 Router)

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)	Memory Utilization (%)
			Total Interrupt	DRAM (MB) Heap Buffer
0	Online	48	15 0	2816 21 27
1	Empty			
2	Empty			
3	Online	51	15 0	2816 21 27
4	Empty			
5	Online	39	8 0	2048 6 23
6	Online	49	15 0	2816 21 27
7	Empty			

show chassis fpc detail (T4000 Router)

```
user@host> show chassis fpc detail
```

```
Slot 0 information:
```

```

State                Online
Temperature           48 degrees C / 118 degrees F
Total CPU DRAM        2816 MB
Total SRAM            1554 MB
Total SDRAM           10752 MB
Start time            2012-02-09 22:56:25 PST
Uptime                2 hours, 40 minutes, 52 seconds

```

```
Slot 3 information:
```

```

State                Online
Temperature           51 degrees C / 123 degrees F
Total CPU DRAM        2816 MB
Total SRAM            1554 MB
Total SDRAM           10752 MB
Start time            2012-02-09 22:56:22 PST
Uptime                2 hours, 40 minutes, 55 seconds

```

```
Slot 5 information:
```

```

State                Online
Temperature           39 degrees C / 102 degrees F
Total CPU DRAM        2048 MB
Total SRAM            128 MB
Total SDRAM           2560 MB
Start time            2012-02-09 22:51:27 PST
Uptime                2 hours, 45 minutes, 50 seconds

```

```
Slot 6 information:
```

```

State                Online
Temperature           49 degrees C / 120 degrees F
Total CPU DRAM        2816 MB
Total SRAM            1554 MB
Total SDRAM           10752 MB
Start time            2012-02-09 22:56:29 PST
Uptime                2 hours, 40 minutes, 48 seconds

```

show chassis fpc pic-status (T4000 Router)

```

user@host> show chassis fpc pic-status
Slot 0  Online      FPC Type 5-3D
        PIC 0  Online  12x10GE (LAN/WAN) SFPP
        PIC 1  Online  12x10GE (LAN/WAN) SFPP
Slot 3  Online      FPC Type 5-3D
        PIC 0  Online  1x100GE
        PIC 1  Online  12x10GE (LAN/WAN) SFPP
Slot 5  Online      FPC Type 4-ES
        PIC 0  Online  100GE
        PIC 1  Online  100GE CFP
Slot 6  Online      FPC Type 5-3D
        PIC 0  Online  12x10GE (LAN/WAN) SFPP
        PIC 1  Online  12x10GE (LAN/WAN) SFPP

```

show chassis fpc (QFX Series and OCX Series)

```

user@switch> show chassis fpc
Temp CPU Utilization (%) Memory      Utilization (%)
Slot State              (C) Total Interrupt    DRAM (MB) Heap      Buffer
0  Online                26      2          0        2820      0        49

```

show chassis fpc detail (QFX3500 Switches)

```

user@switch> show chassis fpc detail
Slot 0 information:
State                      Online
Temperature                28 degrees C / 82 degrees F
Total CPU DRAM             2820 MB
Total SRAM                 0 MB
Total SDRAM                0 MB
Start time                 2010-09-20 01:34:13 PDT
Uptime                    3 days, 3 hours, 31 minutes, 48 seconds

```

show chassis fpc pic-status (QFX3500 Switches)

```

user@switch> show chassis fpc pic-status
Slot 0  Online      QFX 48x10G 4x40G Switch
        PIC 0  Online  48x 10G-SFP+
        PIC 1  Online  15x 10G-SFP+

```

show chassis fpc interconnect-device (QFabric System)

```

user@switch> show chassis fpc interconnect-device interconnect1
FPC status:
Temp
Slot State      (C)
0  Online       0
1  Online       0
2  Online       0
3  Online       0
4  Online       0
5  Online       0
6  Online       0
7  Online       0
8  Online       0
9  Online       0
10 Online       0
11 Online       0
12 Online       0

```

```

13 Online 0
14 Online 0
15 Online 0

```

show chassis fpc interconnect-device (QFabric System)

```

user@switch> show chassis fpc interconnect-device interconnect1 3
FPC status:

Slot State      Temp
      (C)
3 Online        0

```

show chassis fpc interconnect-device detail (QFabric System)

```

user@switch> show chassis fpc interconnect-device interconnect1 3 detail
Slot 3 information:
State Online
Temperature 0 degrees C / 32 degrees F
Start time 2011-08-18 10:45:04 PDT
Uptime 1 minute, 49 seconds

```

show chassis fpc pic-status interconnect-device (QFabric System)

```

user@switch> show chassis fpc pic-status interconnect-device interconnect1
Slot 0 Online QFX 16-port QSFP+ Front Card
PIC 0 Online 16x 40G-QSFP+
PIC 1 Online 16x 40G-GE
Slot 1 Online QFX 16-port QSFP+ Front Card
PIC 0 Online 16x 40G-QSFP+
PIC 1 Online 16x 40G-GE
Slot 2 Online QFX 16-port QSFP+ Front Card
PIC 0 Online 16x 40G-QSFP+
PIC 1 Online 16x 40G-GE
Slot 3 Online QFX 16-port QSFP+ Front Card
PIC 0 Online 16x 40G-QSFP+
PIC 1 Online 16x 40G-GE
Slot 4 Online QFX 16-port QSFP+ Front Card
PIC 0 Online 16x 40G-QSFP+
PIC 1 Online 16x 40G-GE
Slot 5 Online QFX 16-port QSFP+ Front Card
PIC 0 Online 16x 40G-QSFP+
PIC 1 Online 16x 40G-GE
Slot 6 Online QFX 16-port QSFP+ Front Card
PIC 0 Online 16x 40G-QSFP+
PIC 1 Online 16x 40G-GE
Slot 7 Online QFX 16-port QSFP+ Front Card
PIC 0 Online 16x 40G-QSFP+
PIC 1 Online 16x 40G-GE
Slot 8 Online QFX Fabric Rear Card
PIC 0 Online 16x 40G-GE
Slot 9 Online QFX Fabric Rear Card
PIC 0 Online 16x 40G-GE
Slot 10 Online QFX Fabric Rear Card
PIC 0 Online 16x 40G-GE
Slot 11 Online QFX Fabric Rear Card
PIC 0 Online 16x 40G-GE
Slot 12 Online QFX Fabric Rear Card
PIC 0 Online 16x 40G-GE
Slot 13 Online QFX Fabric Rear Card
PIC 0 Online 16x 40G-GE
Slot 14 Online QFX Fabric Rear Card
PIC 0 Online 16x 40G-GE

```



```
Slot 15 Online      QFX Fabric Rear Card
PIC 0 Online       16x 40G-GE
```

show chassis fpc pic-status node-device (QFabric System)

```
user@switch> show chassis fpc pic-status node-device node1
Slot node1 Online      QFX 48x10G 4x40G Switch
PIC 0 Online          48x 10G-SFP+
PIC 1 Online          4x 40G-QSFP+
```

show chassis fpc (PTX5000 Packet Transport Router)

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%) Total Interrupt	Memory DRAM (MB)	Utilization (%) Heap Buffer
0	Empty				
1	Empty				
2	Online	50	6 0	2816	5 27
3	Empty				
4	Empty				
5	Online	48	9 0	2816	5 27
6	Empty				
7	Online	49	8 0	2816	5 27

show chassis fpc detail (PTX5000 Packet Transport Router)

```
user@host> show chassis fpc detail
```

Slot 2 information:

State	Online
Temperature	35 degrees C / 95 degrees F (PMB)
Temperature	35 degrees C / 95 degrees F (Intake)
Temperature	50 degrees C / 122 degrees F (Exhaust A)
Temperature	54 degrees C / 129 degrees F (Exhaust B)
Temperature	54 degrees C / 129 degrees F (TL0)
Temperature	52 degrees C / 125 degrees F (TQ0)
Temperature	61 degrees C / 141 degrees F (TL1)
Temperature	58 degrees C / 136 degrees F (TQ1)
Temperature	57 degrees C / 134 degrees F (TL2)
Temperature	58 degrees C / 136 degrees F (TQ2)
Temperature	62 degrees C / 143 degrees F (TL3)
Temperature	61 degrees C / 141 degrees F (TQ3)
Total CPU DRAM	2816 MB
Total SRAM	0 MB
Total SDRAM	0 MB
Start time	2012-01-12 12:05:42 PST
Uptime	3 hours, 14 minutes, 7 seconds

Slot 5 information:

State	Online
Temperature	35 degrees C / 95 degrees F (PMB)
Temperature	34 degrees C / 93 degrees F (Intake)
Temperature	48 degrees C / 118 degrees F (Exhaust A)
Temperature	53 degrees C / 127 degrees F (Exhaust B)
Temperature	54 degrees C / 129 degrees F (TL0)
Temperature	52 degrees C / 125 degrees F (TQ0)
Temperature	69 degrees C / 156 degrees F (TL1)
Temperature	56 degrees C / 132 degrees F (TQ1)
Temperature	54 degrees C / 129 degrees F (TL2)
Temperature	56 degrees C / 132 degrees F (TQ2)
Temperature	59 degrees C / 138 degrees F (TL3)
Temperature	60 degrees C / 140 degrees F (TQ3)
Total CPU DRAM	2816 MB

```

Total SRAM                0 MB
Total SDRAM               0 MB
Start time                2012-01-12 12:05:43 PST
Uptime                   3 hours, 14 minutes, 6 seconds
Slot 7 information:
State                    Online
Temperature              35 degrees C / 95 degrees F (PMB)
Temperature              33 degrees C / 91 degrees F (Intake)
Temperature              50 degrees C / 122 degrees F (Exhaust A)
Temperature              55 degrees C / 131 degrees F (Exhaust B)
Temperature              56 degrees C / 132 degrees F (TL0)
Temperature              56 degrees C / 132 degrees F (TQ0)
Temperature              61 degrees C / 141 degrees F (TL1)
Temperature              57 degrees C / 134 degrees F (TQ1)
Temperature              55 degrees C / 131 degrees F (TL2)
Temperature              59 degrees C / 138 degrees F (TQ2)
Temperature              62 degrees C / 143 degrees F (TL3)
Temperature              62 degrees C / 143 degrees F (TQ3)
Total CPU DRAM           2816 MB
Total SRAM               0 MB
Total SDRAM              0 MB
Start time                2012-01-12 12:05:44 PST
Uptime                   3 hours, 14 minutes, 5 seconds

```

show chassis fpc pic-status (PTX5000 Packet Transport Router)

```

user@host> show chassis fpc pic-status
Slot 2  Online      FPC
PIC 0   Online      24x 10GE(LAN) SFP+
PIC 1   Online      24x 10GE(LAN) SFP+
Slot 5  Online      FPC
PIC 0   Online      24x 10GE(LAN) SFP+
PIC 1   Online      2x 40GE CFP
Slot 7  Online      FPC
PIC 0   Online      24x 10GE(LAN) SFP+
PIC 1   Online      2x 40GE CFP

```

show chassis fpc (ACX2000 Universal Access Router)

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory Utilization (%)
			Total Interrupt	DRAM (MB) Heap Buffer
0	Online	61	17 6	512 21 37

show chassis fpc 0 (ACX2000 Universal Access Router)

```

user@host> show chassis fpc 0

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory Utilization (%)
			Total Interrupt	DRAM (MB) Heap Buffer
0	Online	61	17 6	512 21 37

show chassis fpc detail (ACX2000 Universal Access Router)

```

user@host> show chassis fpc detail
Slot 0 information:
State                    Online
Temperature              61 degrees C / 141 degrees F
Total CPU DRAM           512 MB
Start time                2012-05-29 02:52:06 PDT
Uptime                   27 minutes, 17 seconds

```

show chassis fpc pic-status (ACX2000 Universal Access Router)

```

user@host> show chassis fpc pic-status
Slot 0  Online
  PIC 0  Online      16x CHE1T1, RJ48
  PIC 1  Online      8x 1GE(LAN) RJ45
  PIC 2  Online      2x 1GE(LAN) SFP
  PIC 3  Online      2x 10GE(LAN) SFP+

```

show chassis FPC 1 (MX Routers with Media Services Blade [MSB])

```

user@switch> show chassis fpc 1

```

Slot	State	Temp (C)	CPU Utilization (%) Total	Interrupt	Memory DRAM (MB)	Utilization (%) Heap	Buffer
1	Online	34	5	0	3072	5	13

show chassis FPC 1 detail (MX Routers with Media Services Blade [MSB])

```

user@switch> show chassis fpc 1 detail
Slot 1 information:
  State                               Online
  Temperature                         34
  Total CPU DRAM                      3072 MB
  Total RLDRAM                        259 MB
  Total DDR DRAM                      4864 MB
  Start time:                        2012-06-19 10:51:43 PDT
  Uptime:                             16 minutes, 48 seconds
  Max Power Consumption               550 Watts

```

show chassis hardware

List of Syntax	Syntax on page 758 Syntax (EX Series) on page 758 Syntax (T4000 Router) on page 758 Syntax (TX Matrix Router) on page 758 Syntax (TX Matrix Plus Router) on page 758 Syntax (MX Series Routers) on page 758 Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers) on page 758 Syntax (QFX Series) on page 759 Syntax (OCX Series) on page 759 Syntax (PTX Series Packet Transport Routers) on page 759 Syntax (ACX Series Universal Access Routers) on page 759
Syntax	show chassis hardware <detail extensive> <clei-models> <models>
Syntax (EX Series)	show chassis hardware <clei-models> <detail extensive> <models>
Syntax (T4000 Router)	show chassis hardware <clei-models> <detail extensive> <models>
Syntax (TX Matrix Router)	show chassis hardware <clei-models> <detail extensive> <models> <lcc <i>number</i> scc>
Syntax (TX Matrix Plus Router)	show chassis hardware <clei-models> <detail extensive> <models> <lcc <i>number</i> sfc <i>number</i> >
Syntax (MX Series Routers)	show chassis hardware <detail extensive> <clei-models> <models> <all-members> <local> <member <i>member-id</i> >
Syntax (MX104, MX2010, and MX2020)	show chassis hardware <clei-models> <detail extensive>

3D Universal Edge Routers)	<models>
Syntax (QFX Series)	show chassis hardware <detail extensive> <clei-models> <interconnect-device <i>name</i> > <node-device <i>name</i> > <models>
Syntax (OCX Series)	show chassis hardware <detail extensive> <clei-models> <models>
Syntax (PTX Series Packet Transport Routers)	show chassis hardware <detail extensive> <clei-models> <models>
Syntax (ACX Series Universal Access Routers)	show chassis hardware <detail extensive> <clei-models> <models>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>models option introduced in Junos OS Release 8.2.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Display a list of all Flexible PIC Concentrators (FPCs) and PICs installed in the router or switch chassis, including the hardware version level and serial number.</p> <p>In the EX Series switch command output, FPC refers to the following:</p> <ul style="list-style-type: none"> On EX2200 switches, EX3200 switches, EX4200 standalone switches, and EX4500 switches—Refers to the switch; FPC <i>number</i> is always 0. On EX4200 switches in a Virtual Chassis configuration—Refers to the member of a Virtual Chassis; FPC <i>number</i> equals the member ID, from 0 through 9. On EX8208 and EX8216 switches—Refers to a line card; FPC <i>number</i> equals the slot number for the line card. <p>On QFX3500, QFX5100, and OCX Series standalone switches, both the FPC and FPC <i>number</i> are always 0.</p>

On T4000 Type 5 FPCs, there are no **top temperature sensor** or **bottom temperature sensor** parameters. Instead, **fan intake temperature sensor** and **fan exhaust temperature sensors** parameters are displayed.

Starting from Junos OS Release 11.4, the output of the **show chassis hardware models** operational mode command displays the enhanced midplanes FRU model numbers (CHAS-BP3-MX240-S, CHAS-BP3-MX480-S or CHAS-BP3-MX960-S) based on the router. Prior to release 11.4, the FRU model numbers are left blank when the router has enhanced midplanes. Note that the enhanced midplanes are introduced through the Junos OS Release 13.3, but can be supported on all Junos OS releases.

Starting with Junos OS Release 14.1, the output of the **show chassis hardware detail | extensive | clei-models | models** operational mode command displays the new DC power supply module (PSM) and power distribution unit (PDU) that are added to provide power to the high-density FPC (FPC2-PTX-P1A) and other components in a PTX5000 Packet Transport Router.

Options **none**—Display information about hardware. For a TX Matrix router, display information about the TX Matrix router and its attached T640 routers. For a TX Matrix Plus router, display information about the TX Matrix Plus router and its attached routers.

clei-models—(Optional) Display Common Language Equipment Identifier (CLEI) barcode and model number for orderable field-replaceable units (FRUs).

detail—(Optional) Include RAM and disk information in output.

extensive—(Optional) Display ID EEPROM information.

all-members—(MX Series routers only) (Optional) Display hardware-specific information for all the members of the Virtual Chassis configuration.

interconnect-device *name*—(QFabric systems only) (Optional) Display hardware-specific information for the Interconnect device.

lcc *number*—(TX Matrix routers and TX Matrix Plus router only) (Optional) On a TX Matrix router, display hardware information for a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display hardware information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display hardware-specific information for the local Virtual Chassis members.

member *member-id*—(MX Series routers and EX Series switches) (Optional) Display hardware-specific information for the specified member of the Virtual Chassis configuration. Replace *member-id* variable with a value 0 or 1.

models—(Optional) Display model numbers and part numbers for orderable FRUs and, for components that use ID EEPROM format v2, the CLEI code.

node-device *name*—(QFabric systems only) (Optional) Display hardware-specific information for the Node device.

scc—(TX Matrix router only) (Optional) Display hardware information for the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus router only) (Optional) Display hardware information for the TX Matrix Plus router (switch-fabric chassis). Replace *number* variable with 0.

Additional Information The **show chassis hardware detail** command now displays DIMM information for the following Routing Engines:

Table 42: Routing Engines Displaying DIMM Information

Routing Engines	Routers
RE-S-1800x2 and RE-S-1800x4	MX240, MX480, and MX960 routers
RE-A-1800x2	M120 and M320 routers

In Junos OS Release 11.4 and later, the output for the **show chassis hardware models** operational mode command for MX Series routers display the enhanced midplanes FRU model numbers—CHAS-BP3-MX240-S, CHAS-BP3-MX480-S, or CHAS-BP3-MX960-S—based on the router. In releases before Junos OS Release 11.4, the FRU model numbers are left blank when the router has enhanced midplanes. Note that the enhanced midplanes are introduced through Junos OS Release 13.3, but can be supported on all Junos OS releases.

Required Privilege Level view

Related Documentation • [show chassis power](#)

List of Sample Output [show chassis hardware \(EX8216 Switch\) on page 767](#)
[show chassis hardware clei-models \(EX8216 Switch\) on page 768](#)
[show chassis hardware clei-models \(T1600 Router\) on page 769](#)
[show chassis hardware detail \(EX4200 Switch\) on page 770](#)
[show chassis hardware \(EX4300 Switch\) on page 770](#)
[show chassis hardware models \(EX4500 Switch\) on page 770](#)
[show chassis hardware detail \(EX9200 Switch\) on page 770](#)
[show chassis hardware \(J6350 Router\) on page 771](#)

[show chassis hardware \(J6300 Router\) on page 771](#)
[show chassis hardware \(M7i Router\) on page 772](#)
[show chassis hardware \(M10 Router\) on page 772](#)
[show chassis hardware models \(M10 Router\) on page 773](#)
[show chassis hardware \(M20 Router\) on page 773](#)
[show chassis hardware models \(M20 Router\) on page 774](#)
[show chassis hardware \(M40 Router\) on page 774](#)
[show chassis hardware \(M40e Router\) on page 775](#)
[show chassis hardware \(M120 Router\) on page 775](#)
[show chassis hardware detail \(M120 Router\) on page 776](#)
[show chassis hardware models \(M120 Router\) on page 777](#)
[show chassis hardware \(M160 Router\) on page 778](#)
[show chassis hardware models \(M160 Router\) on page 778](#)
[show chassis hardware detail \(M160 Router\) on page 779](#)
[show chassis hardware \(M320 Router\) on page 780](#)
[show chassis hardware models \(M320 Router\) on page 781](#)
[show chassis hardware \(MX5 Router\) on page 782](#)
[show chassis hardware \(MX10 Router\) on page 782](#)
[show chassis hardware \(MX40 Router\) on page 783](#)
[show chassis hardware \(Fixed MX80 Router\) on page 783](#)
[show chassis hardware \(Modular MX80 Router\) on page 784](#)
[show chassis hardware \(MX104 Router\) on page 784](#)
[show chassis hardware detail \(MX104 Router\) on page 785](#)
[show chassis hardware extensive \(MX104 Router\) on page 786](#)
[show chassis hardware models \(MX104 Router\) on page 789](#)
[show chassis hardware clei-models \(MX104 Router\) on page 789](#)
[show chassis hardware \(MX240 Router\) on page 789](#)
[show chassis hardware detail \(MX 240 Router with Routing Engine Displaying DIMM information\) on page 790](#)
[show chassis hardware \(MX240 Router with Enhanced MX SCB\) on page 790](#)
[show chassis hardware \(MX480 Router\) on page 791](#)
[show chassis hardware \(MX480 Router with Enhanced MX SCB\) on page 792](#)
[show chassis hardware \(MX480 Routers with MPC5E and built-in OTN PIC\) on page 792](#)
[show chassis hardware detail \(MX480 Routers with MPC5E and built-in OTN PIC\) on page 793](#)
[show chassis hardware extensive \(MX480 Routers with MPC5E and built-in OTN PIC\) on page 795](#)
[show chassis hardware \(MX960 Router\) on page 798](#)
[show chassis hardware \(MX960 Router with Bidirectional Optics\) on page 798](#)
[show chassis hardware \(MX960 Router with Enhanced MX SCB\) on page 799](#)
[show chassis hardware models \(MX960 Router with Enhanced MX SCB\) on page 801](#)
[show chassis hardware \(MX960 Router with MPC5EQ\) on page 801](#)
[show chassis hardware detail \(MX960 Router\) on page 804](#)
[show chassis hardware detail \(MX960 Router with MPC5EQ\) on page 805](#)
[show chassis hardware extensive \(MX960 Router with MPC5EQ\) on page 808](#)
[show chassis hardware models \(MX960 Router with MPC5EQ\) on page 816](#)
[show chassis hardware clei-models \(MX960 Router with MPC5EQ\) on page 817](#)
[show chassis hardware \(MX2010 Router\) on page 817](#)
[show chassis hardware detail \(MX2010 Router\) on page 820](#)

[show chassis hardware extensive \(MX2010 Router\) on page 824](#)
[show chassis hardware models \(MX2010 Router\) on page 830](#)
[show chassis hardware clei-models \(MX2010 Routers\) on page 830](#)
[show chassis hardware \(MX2010 Routers with MPC6E and OTN MIC\) on page 831](#)
[show chassis hardware detail \(MX2010 Routers with MPC6E and OTN MIC\) on page 833](#)
[show chassis hardware extensive \(MX2010 Routers with MPC6E and OTN MIC\) on page 835](#)
[show chassis hardware \(MX2020 Router\) on page 840](#)
[show chassis hardware detail \(MX2020 Router\) on page 848](#)
[show chassis hardware models \(MX2020 Router\) on page 857](#)
[show chassis hardware clei-models \(MX2020 Router\) on page 858](#)
[show chassis hardware \(MX2020 Router with MPC5EQ and MPC6E\) on page 860](#)
[show chassis hardware detail \(MX2020 Router with MPC5EQ and MPC6E\) on page 864](#)
[show chassis hardware extensive \(MX2020 Router with MPC5EQ and MPC6E\) on page 866](#)
[show chassis hardware models \(MX2020 Routers with MPC5EQ and MPC6E\) on page 871](#)
[show chassis hardware clei-models \(MX2020 Router with MPC5EQ and MPC6E\) on page 873](#)
[show chassis hardware \(MX Series routers with ATM MIC\) on page 874](#)
[show chassis hardware \(MX240, MX480, MX960 routers with Application Services Modular Line Card\) on page 874](#)
[show chassis hardware extensive \(MX240, MX480, MX960 routers with Application Services Modular Line Card\) on page 875](#)
[show chassis hardware \(MX480 Router with MPC4E\) on page 876](#)
[show chassis hardware \(MX2020 Router with MPC4E\) on page 876](#)
[show chassis hardware \(MX5, MX10, MX40, MX80, MX240, MX480, and MX960 routers with Enhanced 20-port Gigabit Ethernet MIC\) on page 878](#)
[show chassis hardware models \(MX5, MX10, MX40, MX80, MX240, MX480, and MX960 routers with Enhanced 20-port Gigabit Ethernet MIC\) on page 879](#)
[show chassis hardware \(T320 Router\) on page 879](#)
[show chassis hardware \(T640 Router\) on page 880](#)
[show chassis hardware models \(T640 Router\) on page 881](#)
[show chassis hardware extensive \(T640 Router\) on page 881](#)
[show chassis hardware \(T4000 Router\) on page 882](#)
[show chassis hardware \(T4000 Router with 16 GB line card chassis \(LCC\) Routing Engine\) on page 884](#)
[show chassis hardware \(T4000 Router with LSR FPC\) on page 885](#)
[show chassis hardware clei-models \(T4000 Router\) on page 885](#)
[show chassis hardware detail \(T4000 Router\) on page 885](#)
[show chassis hardware models \(T4000 Router\) on page 887](#)
[show chassis hardware lcc \(TX Matrix Router\) on page 888](#)
[show chassis hardware scc \(TX Matrix Router\) on page 889](#)
[show chassis hardware \(T1600 Router\) on page 889](#)
[show chassis hardware \(TX Matrix Plus Router\) on page 891](#)
[show chassis hardware sfc \(TX Matrix Plus Router\) on page 896](#)
[show chassis hardware extensive \(TX Matrix Plus Router\) on page 898](#)
[show chassis hardware clei-models \(TX Matrix Plus Router\) on page 899](#)
[show chassis hardware detail \(TX Matrix Plus Router\) on page 901](#)

[show chassis hardware models \(TX Matrix Plus Router\) on page 903](#)
[show chassis hardware \(TX Matrix Plus router with 3D SIBs\) on page 906](#)
[show chassis hardware clei-models \(TX Matrix Plus router with 3D SIBs\) on page 909](#)
[show chassis hardware detail \(TX Matrix Plus router with 3D SIBs\) on page 913](#)
[show chassis hardware lcc \(TX Matrix Plus router with 3D SIBs\) on page 916](#)
[show chassis hardware sfc \(TX Matrix Plus router with 3D SIBs\) on page 917](#)
[show chassis hardware \(16-Port 10-Gigabit Ethernet MPC with SFP+ Optics \[MX Series Routers\]\) on page 919](#)
[show chassis hardware \(MPC3E \[MX Series Routers\]\) on page 919](#)
[show chassis hardware \(QFX3500 Switches\) on page 920](#)
[show chassis hardware detail \(QFX3500 Switches\) on page 921](#)
[show chassis hardware models \(QFX3500 Switches\) on page 922](#)
[show chassis hardware clei-models \(QFX3500 Switches\) on page 922](#)
[show chassis hardware clei-models \(QFX5100 Switches\) on page 922](#)
[show chassis hardware interconnect-device \(QFabric Systems\) on page 922](#)
[show chassis hardware node-device \(QFabric Systems\) on page 923](#)
[show chassis hardware \(PTX5000 Packet Transport Router\) on page 923](#)
[show chassis hardware \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 924](#)
[show chassis hardware clei-models \(PTX5000 Packet Transport Router\) on page 925](#)
[show chassis hardware clei-models \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 925](#)
[show chassis hardware detail \(PTX5000 Packet Transport Router\) on page 925](#)
[show chassis hardware detail \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 927](#)
[show chassis hardware models \(PTX5000 Packet Transport Router\) on page 927](#)
[show chassis hardware models \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 928](#)
[show chassis hardware extensive \(PTX5000 Packet Transport Router\) on page 928](#)
[show chassis hardware \(MX Routers with Media Services Blade \[MSB\]\) on page 929](#)
[show chassis hardware extensive \(MX Routers with Media Services Blade \[MSB\]\) on page 929](#)
[show chassis hardware \(QFX3500 Switch running Enhanced Layer 2 Software\) on page 931](#)
[show chassis hardware \(QFX5100 Switch running Enhanced Layer 2 Software\) on page 931](#)

Output Fields [Table 43 on page 765](#) lists the output fields for the **show chassis hardware** command. Output fields are listed in the approximate order in which they appear.

Table 43: show chassis hardware Output Fields

Field Name	Field Description	Level of Output
Item	<p>Chassis component:</p> <ul style="list-style-type: none"> (EX Series switches)—Information about the chassis, Routing Engine (SRE and Routing Engine modules in EX8200 switches), power supplies, fan trays, and LCD panel. Also displays information about Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs). Information about the backplane, midplane, and SIBs (SF modules) is displayed for EX8200 switches. See <i>EX Series Switches Hardware and CLI Terminology Mapping</i>. (MX Series routers and EX Series switches)—Information about the backplane, Routing Engine, Power Entry Modules (PEMs), and fan trays. Also displays information about Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs), Modular Port Concentrators (MPCs) and associated Modular Interface Cards (MICs), or Dense Port Concentrators (DPCs). MX80 routers have a single Routing Engine and a built-in Packet Forwarding Engine that attaches directly to MICs. The Packet Forwarding Engine has two “pseudo” FPCs (FPC 0 and FPC1). MX80 routers also have a Forwarding Engine Board (FEB). MX104 routers have a built-in Packet forwarding Engine and a Forwarding Engine Board (FEB). The Packet Forwarding Engine of the MX104 router has three “pseudo” FPCs (FPC0, FPC1, and FPC2). (M Series routers, except for the M320 router)—Information about the backplane; power supplies; fan trays; Routing Engine; maxicab (the connection between the Routing Engine and the backplane, for the M40 router only); SCB, SSB, SFM, or FEB; MCS and PCG (for the M160 router only); each FPC and PIC; and each fan, blower, and impeller. (M120, M320, and T Series routers)—Information about the backplane, power supplies, fan trays, midplane, FPM (craft interface), CIP, PEM, SCG, CB, FPC, PIC, SFP, SPMB, and SIB. (QFX Series)—Information about the chassis, Pseudo CB, Routing Engine, power supplies, fan trays, Interconnect devices, and Node devices. Also displays information about Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs). (PTX Series)—Information about the chassis, midplane, craft interface (FPM), power distribution units (PDUs) and Power Supply Modules (PSMs), Centralized Clock Generators (CCGs), Routing Engines, Control Boards (CBs) and Switch Processor Mezzanine Boards (SPMBs), Flexible PIC Concentrators (FPCs), PICs, Switch Interface Boards (SIBs), and fan trays (vertical and horizontal). (MX2010 and MX2020 routers)—Information about the chassis, midplane, craft interface (FPM), power midplane (PMP), Power Supply Modules (PSMs), Power Distribution Modules (PDMs), Routing Engines, Control Boards (CBs) and Switch Processor Mezzanine Boards (SPMBs), Switch Fabric Boards (SFBs), Flexible PIC Concentrators (FPCs), PICs, adapter cards (ADCs) and fan trays. 	All levels
Version	Revision level of the chassis component.	All levels
Part number	Part number of the chassis component.	All levels
Serial number	Serial number of the chassis component. The serial number of the backplane is also the serial number of the router chassis. Use this serial number when you need to contact Juniper Networks Customer Support about the router or switch chassis.	All levels

Table 43: show chassis hardware Output Fields (*continued*)

Field Name	Field Description	Level of Output
Assb ID or Assembly ID	(extensive keyword only) Identification number that describes the FRU hardware.	extensive
Assembly Version	(extensive keyword only) Version number of the FRU hardware.	extensive
Assembly Flags	(extensive keyword only) Flags.	extensive
FRU model number	(clei-models , extensive , and models keyword only) Model number of the FRU hardware component.	none specified
CLEI code	(clei-models and extensive keyword only) Common Language Equipment Identifier code. This value is displayed only for hardware components that use ID EEPROM format v2. This value is not displayed for components that use ID EEPROM format v1.	none specified
EEPROM Version	ID EEPROM version used by the hardware component: 0x00 (version 0), 0x01 (version 1), or 0x02 (version 2).	extensive
Description	<p>Brief description of the hardware item:</p> <ul style="list-style-type: none"> Type of power supply. Type of PIC. If the PIC type is not supported on the current software release, the output states Hardware Not Supported. Type of FPC: FPC Type 1, FPC Type 2, FPC Type 3, FPC Type 4, or FPC TypeOC192. <p>On EX Series switches, a brief description of the FPC.</p> <p>On the J Series routers, the FPC type corresponds to the Physical Interface Module (PIM). The following list shows the PIM abbreviation in the output and the corresponding PIM name.</p> <ul style="list-style-type: none"> 2x FE—Either two built-in Fast Ethernet interfaces (fixed PIM) or dual-port Fast Ethernet PIM 4x FE—4-port Fast Ethernet ePIM 1x GE Copper—Copper Gigabit Ethernet ePIM (one 10-Mbps, 100-Mbps, or 1000-Mbps port) 1x GE SFP—SFP Gigabit Ethernet ePIM (one fiber port) 4x GE Base PIC—Four built-in Gigabit Ethernet ports on a J4350 or J6350 chassis (fixed PIM) 2x Serial—Dual-port serial PIM 2x T1—Dual-port T1 PIM 2x E1—Dual-port E1 PIM 2x CTIE1—Dual-port channelized T1/E1 PIM 1x T3—T3 PIM (one port) 1x E3—E3 PIM (one port) 4x BRI S/T—4-port ISDN BRI S/T PIM 4x BRI U—4-port ISDN BRI U PIM 1x ADSL Annex A—ADSL 2/2+ Annex A PIM (one port, for POTS) 1x ADSL Annex B—ADSL 2/2+ Annex B PIM (one port, for ISDN) 	All levels

Table 43: show chassis hardware Output Fields (*continued*)

Field Name	Field Description	Level of Output
	<ul style="list-style-type: none"> • 2xSHDSL (ATM)—G SHDSL PIM (2-port two-wire module or 1-port four-wire module) • 1x TGM550—TGM550 Telephony Gateway Module (Avaya VoIP gateway module with one console port, two analog LINE ports, and two analog TRUNK ports) • 1x DS1 TIM510—TIM510 E1/T1 Telephony Interface Module (Avaya VoIP media module with one E1 or T1 trunk termination port and ISDN PRI backup) • 4x FXS, 4x FXO, TIM514—TIM514 Analog Telephony Interface Module (Avaya VoIP media module with four analog LINE ports and four analog TRUNK ports) • 4x BRI TIM521—TIM521 BRI Telephony Interface Module (Avaya VoIP media module with four ISDN BRI ports) • Crypto Accelerator Module—For enhanced performance of cryptographic algorithms used in IP Security (IPsec) services • MPC M 16x10GE—16-port 10-Gigabit Module Port Concentrator that supports SFP+ optical transceivers. (Not on EX Series switches.) • For hosts, the Routing Engine type. • For small form-factor pluggable transceiver (SFP) modules, the type of fiber: LX, SX, LH, or T. • LCD description for EX Series switches (except EX2200 switches). • MPC2—1-port MPC2 that supports two separate slots for MICs. • MPC3E—1-port MPC3E that supports two separate slots for MICs (MIC-3D-1X100GE-CFP and MIC-3D-20GE-SFP) on MX960, MX480, and MX240 routers. The MPC3E maps one MIC to one PIC (1 MIC, 1 PIC), which differs from the mapping of legacy MPCs. • 100GBASE-LR4, pluggable CFP optics • Supports the Enhanced MX Switch Control Board with fabric redundancy and existing SCBs without fabric redundancy. • Interoperates with existing MX Series line cards, including Flexible Port Concentrators (FPC), Dense Port Concentrators (DPCs), and Modular Port Concentrators (MPCs). • MPC4E—Fixed configuration MPC4E that is available in two flavors: MPC4E-3D-32XGE-SFP and MPC4E-3D-2CGE-8XGE on MX2020, MX960, MX480, and MX240 routers. • LCD description for MX Series routers 	

Sample Output

show chassis hardware (EX8216 Switch)

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis       REV 06   710-016845   CY0109220035  EX8216
Midplane      REV 06   710-016845   BA0909120112  EX8216-MP
CB 0          REV 22   710-020771   AX0109197723  EX8216-RE320
CB 1          REV 22   710-020771   AX0109197726  EX8216-RE320
  Routing Engine 1    BUILTIN     BUILTIN       RE-EX8216
FPC 3         REV 19   710-020683   BC0109083125  EX8200-48F

```

CPU	REV 13	710-020598	BF0109144549	EX8200-CPU
FPC 4	REV 17	710-020683	BC0108500127	EX8200-48F
CPU	REV 10	710-020598	BF0108460510	EX8200-CPU
PIC 0		BUILTIN	BUILTIN	48x 100 Base-QFX/1000
Base-X				
Xcvr 1	REV 01	740-011613	PE70V89	SFP-SX
Xcvr 11	REV 01	740-011613	PE70YCE	SFP-SX
Xcvr 12	REV 01	740-011613	PE70VSH	SFP-SX
Xcvr 13	REV 01	740-011613	E08C02063	SFP-SX
Xcvr 14	REV 01	740-011613	PE70VKU	SFP-SX
Xcvr 15	REV 01	740-011613	E08E03372	SFP-SX
Xcvr 21	REV 01	740-011613	PE70VAD	SFP-SX
Xcvr 22	REV 01	740-011613	E08E01228	SFP-SX
Xcvr 23	REV 01	740-011613	PE70VSL	SFP-SX
Xcvr 24	REV 01	740-011613	E08E03409	SFP-SX
Xcvr 25	REV 01	740-011613	PE70VL4	SFP-SX
Xcvr 26	REV 01	740-011613	PDQ4L2Z	SFP-SX
Xcvr 27	REV 01	740-011613	PE70WFK	SFP-SX
Xcvr 28	REV 01	740-011782	PBD2B5U	SFP-SX
Xcvr 29	REV 01	740-011613	PE70UQX	SFP-SX
Xcvr 30	REV 01	740-011613	PE70VL5	SFP-SX
Xcvr 31	REV 01	740-011613	PE70V0F	SFP-SX
Xcvr 32	REV 01	740-011613	E08C02052	SFP-SX
Xcvr 33	REV 01	740-011613	E08C02197	SFP-SX
Xcvr 34	REV 01	740-011613	PE70V0L	SFP-SX
Xcvr 35	REV 01	740-011613	E08E03390	SFP-SX
Xcvr 36	REV 01	740-011613	PDQ4VL9	SFP-SX
Xcvr 37	REV 01	740-011613	E08E03370	SFP-SX
Xcvr 38	REV 01	740-011613	E08E03362	SFP-SX
Xcvr 39	REV 01	740-011613	E08C02065	SFP-SX
Xcvr 40	REV 01	740-011613	E08E03405	SFP-SX
Xcvr 41	REV 01	740-011613	E08E03411	SFP-SX
Xcvr 43	REV 01	740-011613	E08C02171	SFP-SX
Xcvr 45	REV 01	740-011613	E08E03410	SFP-SX
FPC 13	REV 16	710-016837	BB0109051344	EX8200-8XS
CPU				
SIB 0	REV 10	710-021613	AY0109166244	EX8216-SF320
SIB 1	REV 10	710-021613	AY0109166357	EX8216-SF320
SIB 2	REV 10	710-021613	AY0109166362	EX8216-SF320
SIB 3	REV 10	710-021613	AY0109166338	EX8216-SF320
SIB 4	REV 10	710-021613	AY0109166350	EX8216-SF320
SIB 5	REV 10	710-021613	AY0109166365	EX8216-SF320
SIB 6	REV 10	710-021613	AY0109166361	EX8216-SF320
SIB 7	REV 10	710-021613	AY0109166399	EX8216-SF320
PSU 0	REV 17	740-021466	BG0709170003	EX8200-AC2K
PSU 1	REV 17	740-021466	BG0709170004	EX8200-AC2K
PSU 2	REV 17	740-021466	BG0709170020	EX8200-AC2K
PSU 3	REV 17	740-021466	BG0709170017	EX8200-AC2K
PSU 4	REV 17	740-021466	BG0709170008	EX8200-AC2K
PSU 5	REV 17	740-021466	BG0709170018	EX8200-AC2K
Top Fan Tray				
FTC 0	REV 4	760-022620	CX1209140212	EX8216-FT
FTC 1	REV 4	760-022620	CX1209140212	EX8216-FT
Bottom Fan Tray				
FTC 0	REV 4	760-022620	CX1209140211	EX8216-FT
FTC 1	REV 4	760-022620	CX1209140211	EX8216-FT
LCD 0	REV 04	710-025742	CE0109186919	EX8200 LCD

show chassis hardware clei-models (EX8216 Switch)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 08	710-016845		
PSU 0	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 1	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 2	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 3	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 4	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 5	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
Top Fan Tray				
Bottom Fan Tray				

show chassis hardware clei-models (T1600 Router)

user@host> show chassis hardware clei-models

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 03	710-005608		CHAS-BP-T640-S
FPM Display	REV 05	710-002897		CRAFT-T640-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 0	Rev 07	740-017906	IPUPAC7KTA	PWR-T1600-3-80-DC-S
PEM 1	Rev 18	740-002595		PWR-T-DC-S
SCG 0	REV 15	710-003423		SCG-T-S
Routing Engine 0	REV 08	740-014082		RE-A-2000-4096-S
Routing Engine 1	REV 07	740-014082		RE-A-2000-4096-S
CB 0	REV 05	710-007655		CB-T-S
CB 1	REV 03	710-017707		CB-T-S
FPC 0	REV 07	710-013558		T640-FPC2-E2
PIC 0	REV 01	750-010618		PB-4GE-SFP
PIC 1	REV 06	750-001900		PB-10C48-SON-SMSR
PIC 2	REV 14	750-001901		PB-40C12-SON-SMIR
PIC 3	REV 07	750-001900		PB-10C48-SON-SMSR
FPC 1	REV 06	710-013553		T640-FPC1-E2
PIC 0	REV 08	750-001072		P-1GE-SX
PIC 1	REV 10	750-012266		PB-4GE-TYPE1-SFP-IQ2
PIC 2	REV 22	750-005634		PB-1CHOC12SMIR-QPP
FPC 2				
PIC 0	REV 16	750-007141		PC-10GE-SFP
PIC 1	REV 06	750-015217		PC-8GE-TYPE3-SFP-IQ2
PIC 2	REV 05	750-004695		PC-TUNNEL
PIC 3	REV 17	750-009553		PC-40C48-SON-SFP
FPC 3	REV 01	710-010154		T640-FPC3-E
PIC 0	REV 07	750-012793		PC-1XGE-TYPE3-XFP-IQ2
PIC 1	REV 25	750-007141		PC-10GE-SFP
PIC 2	REV 17	750-009553		PC-40C48-SON-SFP
PIC 3	REV 32	750-003700		PC-10C192-SON-VSR
FPC 4	REV 16	710-013037		T1600-FPC4-ES
PIC 1	REV 06	750-034781		PD-1CE-CFP
FPC 5	REV 02	710-013037		T1600-FPC4-ES
PIC 0	REV 16	750-012518		PD-40C192-SON-XFP
PIC 1	REV 01	750-010850		PD-10C768-SON-SR
FPC 6	REV 14	710-013037		T1600-FPC4-ES
PIC 0	REV 11	750-017405		PD-4XGE-XFP
PIC 1	REV 13	750-017405		PD-4XGE-XFP
FPC 7	REV 09	710-007529		T640-FPC3
PIC 0	REV 10	750-012793		PC-1XGE-TYPE3-XFP-IQ2
PIC 1	REV 01	750-015217		PC-8GE-TYPE3-SFP-IQ2
PIC 2	REV 01	750-015217		PC-8GE-TYPE3-SFP-IQ2
PIC 3	REV 15	750-009450		PC-10C192-SON-SR2
SIB 0	REV 07	710-013074		SIB-I-T1600-S
SIB 1	REV 07	710-013074		SIB-I-T1600-S

SIB 2	REV 07	710-013074	SIB-I-T1600-S
SIB 3	REV 07	710-013074	SIB-I-T1600-S
SIB 4	REV 07	710-013074	SIB-I-T1600-S
Fan Tray 0			FANTRAY-T-S
Fan Tray 1			FANTRAY-T-S
Fan Tray 2			FAN-REAR-TX-T640-S

show chassis hardware detail (EX4200 Switch)

```
user@host> show chassis hardware detail
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			BM0208327733	EX4200-24T
Routing Engine 0	REV 11	750-021256	BM0208327733	EX4200-24T, 8 POE
Routing Engine 0			BM0208327733	EX4200-24T, 8 POE
FPC 0	REV 11	750-021256	BM0208327733	EX4200-24T, 8 POE
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	24x 10/100/1000 Base-T
PIC 1	REV 03B	711-021270	AR0208162285	4x GE SFP
BRD	REV 08	711-021264	AK0208328289	EX4200-24T, 8 POE
Power Supply 0	REV 03	740-020957	AT0508346354	PS 320W AC
Fan Tray				Fan Tray

show chassis hardware (EX4300 Switch)

```
user@host> show chassis hardware
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			PD3713160055	EX4300-48P
Routing Engine 0	REV 04	650-044930	PD3713160055	EX4300-48P
FPC 0	REV 04	650-044930	PD3713160055	EX4300-48P
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0	REV 04	BUILTIN	BUILTIN	48x 10/100/1000 Base-T
PIC 1	REV 04	BUILTIN	BUILTIN	4x 40GE
Power Supply 0	REV 01	740-046871	1EDA3090026	JPSU-1100-AC-AFO-A
Fan Tray 0 (AFO)				Fan Module, Airflow Out
Fan Tray 1 (AFO)				Fan Module, Airflow Out

show chassis hardware models (EX4500 Switch)

```
user@host> show chassis hardware models
Hardware inventory:
```

Item	Version	Part number	Serial number	FRU model number
Routing Engine 0	REV 01	750-035700	GG0210271867	EX4500-40F-FB-C
FPC 0	REV 01	750-035700	GG0210271867	EX4500-40F-FB-C
PIC 0		BUILTIN	BUILTIN	EX4500-40F-FB-C
Power Supply 1	REV 01	740-029654	H884FS00JC09	EX4500-PWR1-AC-FB

show chassis hardware detail (EX9200 Switch)

```
user@switch> show chassis hardware
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN111DA44RFB	EX9208
Midplane	REV 05	710-017414	TS2912	EX9208-BP
FPM Board	REV 02	710-017254	XN1804	Front Panel Display
PEM 0	Rev 01	740-022697	QCS0906C033	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 01	740-022697	QCS0906C095	PS 1.2-1.7kW; 100-240V


```

AC in
Routing Engine 0 REV 08 740-031116 9009122883 RE-S-EX9200-1800X4
CB 0 REV 16 750-031391 CAAW4391 EX9200-SCBEF
PC 0 REV 07 750-049612 CABJ9312 EX9200 40x1G Copper
CPU REV 04 711-038484 CABH8268 MPCE PMB 2G
MIC 0 REV 02 750-049607 CABT9623 40x 1GE RJ45
PIC 0 BUILTIN BUILTIN 10x 1GE RJ45
PIC 1 BUILTIN BUILTIN 10x 1GE RJ45
PIC 2 BUILTIN BUILTIN 10x 1GE RJ45
PIC 3 BUILTIN BUILTIN 10x 1GE RJ45
FPC 1 REV 10 710-013699 CAAN3529 EX9200-40x1G-SFP
CPU REV 04 711-038484 CAAL7608 MPCE PMB 2G
MIC 0 REV 26 750-028392 CAAS5151 20x 1GE SFP
PIC 0 BUILTIN BUILTIN 10x 1GE SFP
PIC 1 BUILTIN BUILTIN 10x 1GE SFP
MIC 1 REV 26 750-028392 CAAC8006 20x 1GE SFP
PIC 2 BUILTIN BUILTIN 10x 1GE SFP
Xcvr 8 REV 01 740-011613 E08L03674 SFP-SX
Xcvr 9 REV 01 740-011613 E08M00243 SFP-SX
PIC 3 BUILTIN BUILTIN 10x 1GE SFP
FPC 3 REV 10 710-013699 CAAR5261 EX9200-40x1G-SFP
CPU REV 04 711-038484 CAAS2118 MPCE PMB 2G
MIC 0 REV 26 750-028392 CAAS5067 20x 1GE SFP
PIC 0 BUILTIN BUILTIN 10x 1GE SFP
Xcvr 2 REV 01 740-031851 PNA7L8U SFP-SX
Xcvr 3 REV 02 740-011613 AM0943SEKGZ SFP-SX
Xcvr 4 REV 02 740-011613 AM0943SEJZ9 SFP-SX
PIC 1 BUILTIN BUILTIN 10x 1GE SFP
MIC 1 REV 26 750-028392 CAAS5132 20x 1GE SFP
PIC 2 BUILTIN BUILTIN 10x 1GE SFP
Xcvr 4 REV 01 740-011613 E08D02625 SFP-SX
Xcvr 9 REV 02 740-011613 PJH4RD9 SFP-SX
PIC 3 BUILTIN BUILTIN 10x 1GE SFP
Xcvr 0 REV 01 740-011613 AM0813S8YME SFP-SX
Fan Tray Left Fan Tray

```

show chassis hardware (J6350 Router)

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN1090E07ADB   JSR6350
Midplane      REV 03   710-014593   NP1265
System IO     REV 01   710-016210   NN9950        JX350 System IO
Crypto Module                               Crypto Acceleration
Routing Engine REV 08   710-015273   NM6509        RE-J6350-3400
ad0          248 MB  256MB  CKS          00102006C24A00000039 Compact
Flash
FPC 0                                                FPC
PIC 0                                                4x GE Base PIC
FPC 1 REV 06   750-010355   AI07030023    FPC
PIC 0                                                2x T1
FPC 3 REV 06   750-011148   AJ06520151    FPC
PIC 0                                                2x E1
FPC 6 REV 06   750-013492   NC4170        FPC
PIC 0                                                4x FE
Power Supply 0

```

show chassis hardware (J6300 Router)

```

user@host> show chassis hardware

```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN000164AB	J6300
Midplane	REV 02.04	710-010001	CORE99570	
System IO	REV 02.00	710-010003	CORE100848	System IO board
Routing Engine	RevX2.6	750-010006	IWGS40735390	RE-J.3
FPC 0				FPC
PIC 0				2x FE
FPC 1	RevX2.0	750-011380	N3960005	FPC
PIC 0				1xADSL pic Annex A
FPC 2	RevX2.0	750-011380	N3960002	FPC
PIC 0				1xADSL pic Annex B
FPC 3	REV 03	750-010354	N0780028	FPC
PIC 0				1x T3

show chassis hardware (M7i Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			31959	M7i
Midplane	REV 02	710-008761	CA0209	M7i Midplane
Power Supply 0	Rev 04	740-008537	PD10272	AC Power Supply
Routing Engine	REV 01	740-008846	1000396803	RE-5.0
CFEB	REV 02	750-009492	CA0166	Internet Processor IIv1
FPC 0				E-FPC
PIC 0	REV 04	750-003163	HJ6416	1x G/E, 1000 BASE-SX
PIC 1	REV 04	750-003163	HJ6423	1x G/E, 1000 BASE-SX
PIC 2	REV 04	750-003163	HJ6421	1x G/E, 1000 BASE-SX
PIC 3	REV 02	750-003163	HJ0425	1x G/E, 1000 BASE-SX
FPC 1				E-FPC
PIC 2	REV 01	750-009487	HM2275	ASP - Integrated
PIC 3	REV 01	750-009098	CA0142	2x F/E, 100 BASE-TX

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			B1157	M7i
Midplane	REV 05	710-008761	DM0840	M7i Midplane
Power Supply 0	Rev 08	740-008537	TE53755	AC Power Supply
Routing Engine	REV 07	740-011202	1000736567	RE-850
CFEB	REV 09	750-010463	DK6952	Internet Processor II
FPC 0				E-FPC
PIC 0	REV 12	750-012838	DL7993	4x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011614	PD94TDJ	SFP-LX10
Xcvr 1	REV 01	740-011615	PAD5EER	UNSUPPORTED
Xcvr 2	REV 01	740-011614	PD94THU	SFP-LX10
Xcvr 3		NON-JNPR	PDC2E7A	SFP-LX10
PIC 1	REV 03	750-023116	JT0203	4x CHSTM1 SDH CE SFP
Xcvr 0	REV 01	740-012434	AGT063832PS	SFP-SR
Xcvr 1	REV 01	740-012434	AGT063832LY	SFP-SR
Xcvr 3	REV 01	740-016064	C06J19018	SFP-LR
PIC 2	REV 15	750-014895	DM5757	MultiServices 100
PIC 3	REV 01	750-025390	JW9448	12x T1/E1 CE
FPC 1				E-FPC
PIC 2		BUILTIN	BUILTIN	1x Tunnel
PIC 3	REV 09	750-009099	DM0899	1x G/E, 1000 BASE
Xcvr 0	REV 01	740-012434	AGT07150HGJ	UNSUPPORTED
Fan Tray				Rear Fan Tray

show chassis hardware (M10 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			1122	M10
Midplane	REV 1.1	710-001950	S/N AC6626	
Power supply A	Rev 01	740-002497	S/N LC36095	AC
Power supply B	Rev 01	740-002497	S/N LC36100	AC
Display	REV 1.2	710-001995	S/N AC6656	
Host			18000005dfb3fb01	teknor
FEB	REV 01	710-001948	S/N AC6632	Internet Processor II
FPC 0				
PIC 0	REV 08	750-001072	S/N AB2485	1x G/E, 1000 BASE-SX
PIC 1	REV 01	750-000613	S/N AA1048	1x OC-12 SONET, SMIR
FPC 1				
Fan Tray 0				FANTRAY-M10I-S
Fan Tray 1				FANTRAY-M10I-S

show chassis hardware models (M10 Router)

user@host> show chassis hardware models

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 04	710-008920		CHAS-MP-M10i-S
Power Supply 0	Rev 06	740-008537		PWR-M10i-M7i-AC-S
Power Supply 1	Rev 06	740-008537		PWR-M10i-M7i-AC-S
HCM 0	REV 03	710-010580		HCM-M10i-S
HCM 1	REV 03	710-010580		HCM-M10i-S
Routing Engine 0	REV 09	740-009459		RE-400-256-S
CFEB 0	REV 05	750-010465		FEB-M10i-M7i-S
FPC 0				
PIC 0	REV 10	750-002971		PE-40C3-SON-MM
PIC 1	REV 11	750-002992		PE-4FE-TX
PIC 2	REV 03	750-002977		PE-20C3-ATM-MM
PIC 3	REV 08	750-005724		PE-20C3-ATM2-MM
FPC 1				
PIC 2	REV 12	750-008425		PE-AS
PIC 3	REV 13	750-005636		PE-4CHDS3-QPP
Fan Tray 0				FANTRAY-M10I-S
Fan Tray 1				FANTRAY-M10I-S

show chassis hardware (M20 Router)

user@host> show chassis hardware

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			20033	M20
Backplane	REV 07	710-001517	S/N AA7940	
Power supply B	Rev 01	740-001465	S/N 000001	AC
Display	REV 02	710-001519	S/N AA9704	
Host 0			98000004f8f27501	teknor
SSB slot 0	REV 01	710-001951	S/N AD5905	Internet Processor II
SSRAM bank 0	REV 01	710-001385	S00480	2 MB
SSRAM bank 1	REV 01	710-001385	S00490	2 MB
SSRAM bank 2	REV 01	710-001385	S001:?	2 MB
SSRAM bank 3	REV 01	710-001385	S00483	2 MB
SSB slot 1	N/A	N/A	N/A	Backup
FPC 1	REV 01	710-001292	S/N AB7528	
SSRAM	REV 01	710-000077	S/N 304209	1 MB
SDRAM bank 0	REV 01	710-000099	S/N 000603	64 MB
SDRAM bank 1	REV 01	710-000099	S/N 000414	64 MB
PIC 0	REV 03	750-000612	S/N AB8433	2x OC-3 ATM, MM
PIC 1	REV 01	750-000616	S/N AA1168	1x OC-12 ATM, MM

PIC 2	REV 01	750-000613	S/N AA1008	1x OC-12 SONET, SMIR
PIC 3	REV 01	750-002501	S/N AD5810	4x E3
FPC 2	REV 01	710-001292	S/N AC0119	
SSRAM	REV 01	710-000077	S/N 503241	1 MB
SDRAM bank 0	REV 01	710-000099	S/N 306835	64 MB
SDRAM bank 1	REV 01	710-000099	S/N 306832	64 MB
Fan Tray 0				Front Upper Fan Tray
Fan Tray 1				Front Middle Fan Tray
Fan Tray 2				Front Bottom Fan Tray
Fan Tray 3				Rear Fan Tray

show chassis hardware models (M20 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Backplane	REV 03	710-002334		CHAS-MP-M20-S
Power Supply A	REV 06	740-001465		PWR-M20-AC-S
Display	REV 04	710-001519		CRAFT-M20-S
Routing Engine 0	REV 06	740-003239		RE-333-768-S
Routing Engine 1	REV 06	740-003239		RE-333-768-S
SSB 0	REV 02	710-001951		SSB-E-M20
SSB 1	N/A	N/A		
FPC 0	REV 03	710-003308		FPC-E
PIC 0	REV 08	750-002303		P-4FE-TX
PIC 1	REV 07	750-004745		P-2MCDS3
PIC 2	REV 03	750-002965		PE-4CHDS3
FPC 1	REV 03	710-003308		FPC-E
PIC 0	REV 03	750-002914		P-2OC3-ATM-MM
Fan Tray 0				FANTRAY-F-M20-S
Fan Tray 1				FANTRAY-F-M20-S
Fan Tray 2				FANTRAY-F-M20-S
Fan Tray 3				FANTRAY-R-M20-S

show chassis hardware (M40 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Backplane	REV 02	710-000073	S/N AA0053	
Power supply A	Rev 2	740-000235	S/N 000042	DC
Maxicab	REV X1	710-000229	S/N AA0139	
Minicab	REV X1	710-000482	S/N AA0201	
Display	REV 06	710-000150	S/N AA0905	
Host				cpv5000
SCB	REV X1	710-000075	S/N AA0158	Internet Processor I
SSRAM bank 0	REV 02	710-000077	S/N AA2267	1 MB
SSRAM bank 1	REV 02	710-000077	S/N AA2270	1 MB
SSRAM bank 2	REV 02	710-000077	S/N AA2269	1 MB
SSRAM bank 3	REV 02	710-000077	S/N AA2268	1 MB
FPC 0	REV 01	710-000175	S/N AA0048	
SSRAM	REV 01	710-000077	S/N AA2333	1 MB
SDRAM bank 0	REV 01	710-000099	S/N AA2332	64 MB
SDRAM bank 1	REV X1	710-000099	S/N AA2337	64 MB
PIC 0	REV 04	750-000613	S/N aa0343	1x OC-12 SONET, SMIR
PIC 1	REV 04	750-000613	S/N AA0379	1x OC-12 SONET, SMIR
PIC 2	REV 04	750-000613	S/N AA0377	1x OC-12 SONET, SMIR
PIC 3	REV 04	750-000613	S/N AA0378	1x Tunnel
FPC 2	REV 01	710-000175	S/N AA0042	
SSRAM	REV 02	710-000077	S/N AA2288	1 MB
SDRAM bank 0	REV 01	710-000099	S/N AA2331	64 MB

SDRAM bank 1	REV 01	710-000099	S/N AA2330	64 MB
PIC 0	REV X1	750-000603	S/N AA0143	4x OC-3 SONET, SMIR
PIC 1	REV X1	750-000615	S/N AA0149	4x OC-3 SONET, MM
PIC 2	REV X1	750-000611	S/N AA0148	4x OC-3 SONET, MM
PIC 3	REV 04	750-000613	S/N AA0330	1x OC-12 SONET, SMIR
FPC 4	REV 01	710-000175	S/N AA0050	
SSRAM	REV 01	710-000077	S/N AA2327	1 MB
SDRAM bank 0	REV 01	710-000099	S/N AA2329	64 MB
SDRAM bank 1	REV 01	710-000099	S/N AA2328	64 MB
PIC 0	REV 04	750-000613	S/N AA0320	1x OC-12 SONET, SMIR
PIC 2	REV 05	750-000616	S/N AA1341	1x OC-12 ATM, MM
PIC 3	REV 08	750-001072	S/N AB2462	1x G/E, 1000 BASE-SX
FPC 5	REV 10	710-000175	S/N AA7663	
SSRAM	REV 01	710-000077	S/N 501590	1 MB
SDRAM bank 0	REV 01	710-000099	S/N 300949	64 MB
SDRAM bank 1	REV 01	710-000099	S/N 300868	64 MB
PIC 1	REV 01	750-001323	S/N AB1670	1x Tunnel

show chassis hardware (M40e Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis				m40e
Midplane	REV 01	710-005071	AX3671	
FPM CMB	REV 03	710-001642	AR9074	
FPM Display	REV 03	710-001647	AR7331	
CIP	REV 04	710-002649	BB4449	
PEM 0	Rev 01	740-003787	MC12364	Power Entry Module
PEM 1	Rev 01	740-003787	MC12383	Power Entry Module
PCG 0	REV 07	710-001568	AG1332	
PCG 1	REV 07	710-001568	AR3789	
Host 0			3e000007c8176601	Present
MCS 0	REV 11	710-001226	AN5813	
SFM 0 SPP	REV 07	710-001228	AG4676	
SFM 0 SPR	REV 05	710-002189	AE4735	Internet Processor II
SFM 1 SPP	REV 07	710-001228	AP1347	
SFM 1 SPR	REV 05	710-002189	BE0063	Internet Processor II
FPC 0	REV 01	710-011725	BE0669	M40e-EP-FPC Type 1
CPU	REV 01	710-004600	BD9504	
PIC 0	REV 03	750-003737	AY3991	4x G/E, 1000 BASE-SX
FPC 1	REV 01	710-005197	BD9842	M40e-FPC Type 2
CPU	REV 01	710-004600	BB4869	
PIC 0	REV 07	750-001900	AR8278	1x OC-48 SONET, SMSR
FPC 2	REV 02	710-005197	BD9824	M40e-FPC Type 2
CPU	REV 01	710-004600	BD9531	
PIC 0	REV 03	750-003737	AY3986	4x G/E, 1000 BASE-SX
FPC 4	REV 02	710-005078	BE0664	M40e-FPC Type 1
CPU	REV 01	710-004600	BD9559	
PIC 0	REV 03	750-001894	AG7963	1x G/E, 1000 BASE-SX
PIC 2	REV 01	750-002575	AF2472	4x OC-3 SONET, SMIR
FPC 6	REV 02	710-005078	BE0652	M40e-FPC Type 1
CPU	REV 01	710-004600	BD9607	
PIC 0	REV 02	750-002911	AN2286	4x F/E, 100 BASE-TX
PIC 2	REV 01	750-002577	AP6345	4x OC-3 SONET, MM

show chassis hardware (M120 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
------	---------	-------------	---------------	-------------

Chassis			JN000054AC	M120
Midplane	REV 01	710-013667	RB4170	M120 Midplane
FPM Board	REV 02	710-011407	CJ9186	M120 FPM Board
FPM Display	REV 02	710-011405	CJ9173	M120 FPM Display
FPM CIP	REV 02	710-011410	CJ9221	M120 FPM CIP
PEM 0	Rev 05	740-011936	RM28320	AC Power Entry Module
PEM 1	Rev 05	740-011936	RM28321	AC Power Entry Module
Routing Engine 0	REV 03	740-014080	1000642883	RE-A-1000
CB 0	REV 03	710-011403	CM8346	M120 Control Board
CB 1	REV 06	710-011403	CP6728	M120 Control Board
FPC 1	REV 02	710-015908	CP6925	M120 CFPC 10GE
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN) XFP
Xcvr 0	REV 01	740-014279	62E204N00007	XFP-10G-LR
FPC 3	REV 03	710-011393	CJ9234	M120 FPC Type 2
PIC 0	REV 16	750-008155	NB5229	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	P9F15JB	SFP-SX
Xcvr 1	REV 01	740-007326	P4Q0R9G	SFP-SX
PIC 1	REV 09	750-007745	CG4360	4x OC-3 SONET, SMIR
PIC 2	REV 16	750-008155	ND7787	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	P9F12AS	SFP-SX
Xcvr 1	REV 01	740-011613	P9F1ALU	SFP-SX
PIC 3	REV 07	750-011800	JW1284	8x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011613	P9F1AM6	SFP-SX
Xcvr 6	REV 01	740-011613	P9F16NN	SFP-SX
Xcvr 7	REV 01	740-011782	P8C29Y7	SFP-SX
Board B	REV 02	710-011395	CN3754	M120 FPC Mezz
FPC 4	REV 02	710-011398	CP6741	M120 FPC Type 3
PIC 0	REV 16	750-007141	NB2855	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011782	P922A1F	SFP-SX
Xcvr 1	REV 01	740-011782	P922A16	SFP-SX
Xcvr 2	REV 01	740-011782	P922A0U	SFP-SX
Xcvr 3	REV 01	740-011782	P9229UZ	SFP-SX
Xcvr 4	REV 01	740-009029	P11JXWP	SFP-LX
Xcvr 6	REV 01	740-011613	P9F1ALW	SFP-SX
FPC 5	REV 01	710-011388	CJ9088	M120 FPC Type 1
PIC 0	*** Hardware Not Supported ***			
PIC 1	REV 05	750-012052	NB0410	1x CHOC3 IQ SONET, SMLR
PIC 2	REV 01	750-013167	CM3824	4x CHDS3 IQ
PIC 3	REV 01	750-010240	CB5366	1x G/E SFP, 1000 BASE
Board B	REV 01	710-011390	CJ9103	M120 FPC Mezz Board
FEB 3	REV 04	710-011663	CP6673	M120 FEB
FEB 4	REV 04	710-011663	CJ9368	M120 FEB
FEB 5	REV 04	710-011663	CJ9386	M120 FEB
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Top Fan Tray
Fan Tray 3				Rear Bottom Fan Tray

show chassis hardware detail (M120 Router)

```
user@host> show chassis hardware detail
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN000054AC	M120
Midplane	REV 01	710-013667	RB4170	M120 Midplane
FPM Board	REV 02	710-011407	CJ9186	M120 FPM Board
FPM Display	REV 02	710-011405	CJ9173	M120 FPM Display
FPM CIP	REV 02	710-011410	CJ9221	M120 FPM CIP
PEM 0	Rev 05	740-011936	RM28320	AC Power Entry Module

PEM 1	Rev 05	740-011936	RM28321	AC Power Entry Module
Routing Engine 0	REV 03	740-014080	1000642883	RE-A-1000
ad0 248 MB		SILICONSYSTEMS INC 256M 126CT505S0763SC00110		Compact Flash
ad2 38154 MB		HTE541040G9SA00	MPBBT0X2HS2E3M	Hard Disk
CB 0	REV 03	710-011403	CM8346	M120 Control Board
CB 1	REV 06	710-011403	CP6728	M120 Control Board
FPC 1	REV 02	710-015908	CP6925	M120 CFPC 10GE
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN) XFP
Xcvr 0	REV 01	740-014279	62E204N00007	XFP-10G-LR
FPC 3	REV 03	710-011393	CJ9234	M120 FPC Type 2
PIC 0	REV 16	750-008155	NB5229	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	P9F15JB	SFP-SX
Xcvr 1	REV 01	740-007326	P4Q0R9G	SFP-SX
PIC 1	REV 09	750-007745	CG4360	4x OC-3 SONET, SMIR
PIC 2	REV 16	750-008155	ND7787	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	P9F12AS	SFP-SX
Xcvr 1	REV 01	740-011613	P9F1ALU	SFP-SX
PIC 3	REV 07	750-011800	JW1284	8x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011613	P9F1AM6	SFP-SX
Xcvr 6	REV 01	740-011613	P9F16NN	SFP-SX
Xcvr 7	REV 01	740-011782	P8C29Y7	SFP-SX
Board B	REV 02	710-011395	CN3754	M120 FPC Mezz
FPC 4	REV 02	710-011398	CP6741	M120 FPC Type 3
PIC 0	REV 16	750-007141	NB2855	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011782	P922A1F	SFP-SX
Xcvr 1	REV 01	740-011782	P922A16	SFP-SX
Xcvr 2	REV 01	740-011782	P922A0U	SFP-SX
Xcvr 3	REV 01	740-011782	P9229UZ	SFP-SX
Xcvr 4	REV 01	740-009029	P11JXWP	SFP-LX
Xcvr 6	REV 01	740-011613	P9F1ALW	SFP-SX
FPC 5	REV 01	710-011388	CJ9088	M120 FPC Type 1
PIC 0	*** Hardware Not Supported ***			
PIC 1	REV 05	750-012052	NB0410	1x CHOC3 IQ SONET, SMLR
PIC 2	REV 01	750-013167	CM3824	4x CHDS3 IQ
PIC 3	REV 01	750-010240	CB5366	1x G/E SFP, 1000 BASE
Board B	REV 01	710-011390	CJ9103	M120 FPC Mezz Board
FEB 3	REV 04	710-011663	CP6673	M120 FEB
FEB 4	REV 04	710-011663	CJ9368	M120 FEB
FEB 5	REV 04	710-011663	CJ9386	M120 FEB
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Top Fan Tray
Fan Tray 3				Rear Bottom Fan Tray

show chassis hardware models (M120 Router)

```

user@host> show chassis hardware models
Hardware inventory:
Item          Version  Part number  CLEI code  FRU model number
Midplane      REV 01   710-013667
FPM CIP       REV 02   710-011410
PEM 0         Rev 05   740-011936
PEM 1         Rev 05   740-011936
Routing Engine 0 REV 03   740-014080
CB 0          REV 03   710-011403
CB 1          REV 06   710-011403
FPC 1         REV 02   710-015908
FPC 3
PIC 0         REV 16   750-008155

```

CRAFT-M120-S
PWR-M120-AC-S
PWR-M120-AC-S
RE-A-1000-2048-S
CB-M120-S
CB-M120-S
M120-cFPC-1XGE-XFP
PB-2GE-SFP-QPP

PIC 1	REV 09	750-007745	PC-40C3-SON-SMIR
PIC 2	REV 16	750-008155	PB-2GE-SFP-QPP
PIC 3	REV 07	750-011800	PB-8GE-TYPE2-SFP-IQ2
FPC 4			
PIC 0	REV 16	750-007141	PC-10GE-SFP
FPC 5			
PIC 1	REV 05	750-012052	PB-1CHOC3-SMIR-QPP
PIC 2	REV 01	750-013167	PE-4CHDS3-QPP
PIC 3	REV 01	750-010240	PB-1GE-SFP
Fan Tray 0			FFANTRAY-M120-S
Fan Tray 1			FFANTRAY-M120-S
Fan Tray 2			RFANTRAY-M120-S
Fan Tray 3			RFANTRAY-M120-S

show chassis hardware (M160 Router)

```
user@host> show chassis hardware
```

Item	Version	Part number	Serial number	Description
Chassis			101	M160
Midplane	REV 02	710-001245	S/N AB4107	
FPM CMB	REV 01	710-001642	S/N AA2911	
FPM Display	REV 01	710-001647	S/N AA2999	
CIP	REV 02	710-001593	S/N AA9563	
PEM 0	Rev 01	740-001243	S/N KJ35769	DC
PEM 1	Rev 01	740-001243	S/N KJ35765	DC
PCG 0	REV 01	710-001568	S/N AA9794	
PCG 1	REV 01	710-001568	S/N AA9804	
Host 1			da000004f8d57001	teknor
MCS 1	REV 03	710-001226	S/N AA9777	
SFM 0 SPP	REV 04	710-001228	S/N AA2975	
SFM 0 SPR	REV 02	710-001224	S/N AA9838	Internet Processor I
SFM 1 SPP	REV 04	710-001228	S/N AA2860	
SFM 1 SPR	REV 01	710-001224	S/N AB0139	Internet Processor I
FPC 0	REV 03	710-001255	S/N AA9806	FPC Type 1
CPU	REV 02	710-001217	S/N AA9590	
PIC 1	REV 05	750-000616	S/N AA1527	1x OC-12 ATM, MM
PIC 2	REV 05	750-000616	S/N AA1535	1x OC-12 ATM, MM
PIC 3	REV 01	750-000616	S/N AA1519	1x OC-12 ATM, MM
FPC 1	REV 02	710-001611	S/N AA9523	FPC Type 2
CPU	REV 02	710-001217	S/N AA9571	
PIC 0	REV 03	750-001900	S/N AA9626	1x STM-16 SDH, SMIR
PIC 1	REV 01	710-002381	S/N AD3633	2x G/E, 1000 BASE-SX
FPC 2				FPC Type OC192
CPU	REV 03	710-001217	S/N AB3329	
PIC 0	REV 01			1x OC-192 SM SR-2
Fan Tray 0				Rear Bottom Blower
Fan Tray 1				Rear Top Blower
Fan Tray 2				Front Top Blower
Fan Tray 3				Front Fan Tray

show chassis hardware models (M160 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 03	710-009120		CHAS-BP-M320-S
FPM Display	REV 02	710-009351		CRAFT-M320-S
CIP	REV 03	710-005926		CIP-M320-S
PEM 2	Rev X4	740-009148		PWR-M-DC-S
PEM 3	Rev X4	740-009148		PWR-M-DC-S
Routing Engine 0	REV 02	740-008883		RE-1600-2048-S

Routing Engine 1	REV 02	740-008883	RE-1600-2048-S
FPC 0	REV 02	710-010419	M320-FPC1
PIC 0	REV 01	750-001323	P-TUNNEL
PIC 1	REV 02	750-002987	PE-10C12-SON-SMIR
PIC 2	REV 04	750-001894	PB-1GE-SX
PIC 3	REV 04	750-001896	PB-10C12-SON-SMIR
FPC 1	REV 02	710-010419	M320-FPC1
PIC 0	REV 04	750-001894	PB-1GE-SX
PIC 1	REV 04	750-001894	PB-1GE-SX
PIC 3	REV 03	750-001894	PB-1GE-SX
FPC 2	REV 02	710-010419	M320-FPC1
PIC 0	REV 10	750-005634	PB-1CHOC12SMIR-QPP
PIC 1	REV 10	750-005634	PB-1CHOC12SMIR-QPP
PIC 2	REV 07	750-005634	PB-1CHOC12SMIR-QPP
PIC 3	REV 07	750-005634	PB-1CHOC12SMIR-QPP
PIC 1	REV 10	750-005634	PB-1CHOC12SMIR-QPP
PIC 2	REV 07	750-005634	PB-1CHOC12SMIR-QPP
PIC 3	REV 07	750-005634	PB-1CHOC12SMIR-QPP
FPC 3			
PIC 0	REV 03	750-001895	PB-10C12-SON-MM
PIC 1	REV 04	750-001894	PB-1GE-SX
PIC 3	REV 04	750-003141	PB-1GE-SX-B
FPC 4	REV 02	710-010419	M320-FPC1
FPC 5	REV 02	710-010419	M320-FPC1
FPC 6	REV 02	710-010419	M320-FPC1
FPC 7			
PIC 0	REV 15	750-001901	PB-40C12-SON-SMIR
PIC 1	REV 06	750-001900	PB-10C48-SON-SMSR
PIC 2	REV 07	750-001900	PB-10C48-SON-SMSR
PIC 3	REV 05	750-003737	PB-4GE-SX
SIB 0	REV 03	710-009184	SIB-M-S
SIB 1	REV 03	710-009184	SIB-M-S
SIB 2	REV 03	710-009184	SIB-M-S
SIB 3	REV 03	710-009184	SIB-M-S
Fan Tray 0			FFANTRAY-M320-S
Fan Tray 1			FFANTRAY-M320-S
Fan Tray 2			RFANTRAY-M320-S

show chassis hardware detail (M160 Router)

```

user@host> show chassis hardware detail
Hardware inventory:

```

Item	Version	Part number	Serial number	Description
Chassis			101	M160
Midplane	REV 02	710-001245	S/N AB4107	
FPM CMB	REV 01	710-001642	S/N AA2911	
FPM Display	REV 01	710-001647	S/N AA2999	
CIP	REV 02	710-001593	S/N AA9563	
PEM 0	Rev 01	740-001243	S/N KJ35769	DC
PEM 1	Rev 01	740-001243	S/N KJ35765	DC
PCG 0	REV 01	710-001568	S/N AA9794	
PCG 1	REV 01	710-001568	S/N AA9804	
Host 1			da000004f8d57001	teknor
MCS 1	REV 03	710-001226	S/N AA9777	
SFM 0 SPP	REV 04	710-001228	S/N AA2975	
SFM 0 SPR	REV 02	710-001224	S/N AA9838	Internet Processor I
SSRAM bank 0	REV 01	710-000077	S/N 306456	1 MB
SSRAM bank 1	REV 01	710-000077	S/N 306474	1 MB
SSRAM bank 2	REV 01	710-000077	S/N 306388	1 MB
SSRAM bank 3	REV 01	710-000077	S/N 306392	1 MB
SFM 1 SPP	REV 04	710-001228	S/N AA2860	

SFM 1 SPR	REV 01	710-001224	S/N AB0139	Internet Processor I
SSRAM bank 0	REV 01	710-000077	S/N 302917	1 MB
SSRAM bank 1	REV 01	710-000077	S/N 302662	1 MB
SSRAM bank 2	REV 01	710-000077	S/N 302593	1 MB
SSRAM bank 3	REV 01	710-000077	S/N 100160	1 MB
FPC 0	REV 03	710-001255	S/N AA9806	FPC Type 1
CPU	REV 02	710-001217	S/N AA9590	
SSRAM	REV 01	710-000077	S/N 302836	1 MB
SDRAM 0	REV 01	710-001196	S00141	32 MB
SDRAM 1	REV 01	710-001196	S0010;	32 MB
SSRAM	REV 01	710-000077	S/N 302633	1 MB
SDRAM 0	REV 01	710-001196	S00143	32 MB
SDRAM 1	REV 01	710-001196	S00115	32 MB
SSRAM	REV 01	710-000077	S/N 302952	1 MB
SDRAM 0	REV 01	710-001196	S00135	32 MB
SDRAM 1	REV 01	710-001196	S001=3	32 MB
SSRAM	REV 01	710-000077	S/N 302892	1 MB
SDRAM 0	REV 01	710-001196	S000?6	32 MB
SDRAM 1	REV 01	710-001196	S001=5	32 MB
PIC 1	REV 05	750-000616	S/N AA1527	1x OC-12 ATM, MM
PIC 2	REV 05	750-000616	S/N AA1535	1x OC-12 ATM, MM
PIC 3	REV 01	750-000616	S/N AA1519	1x OC-12 ATM, MM
FPC 1	REV 02	710-001611	S/N AA9523	FPC Type 2
CPU	REV 02	710-001217	S/N AA9571	
SSRAM	REV 01	710-000077	S/N 306340	1 MB
SDRAM 0	REV 01	710-001196	S00012	32 MB
SDRAM 1	REV 01	710-001196	S0001?	32 MB
SSRAM	REV 01	710-000077	S/N 306454	1 MB
SDRAM 0	REV 01	710-001196	S00028	32 MB
SDRAM 1	REV 01	710-001196	S0002?	32 MB
SSRAM	REV 01	710-000077	S/N 306492	1 MB
SDRAM 0	REV 01	710-001196	S00015	32 MB
SDRAM 1	REV 01	710-001196	S00031	32 MB
SSRAM	REV 01	710-000077	S/N 306363	1 MB
SDRAM 0	REV 01	710-001196	S00013	32 MB
SDRAM 1	REV 01	710-001196	S00032	32 MB
PIC 0	REV 03	750-001900	S/N AA9626	1x STM-16 SDH, SMIR
PIC 1	REV 01	710-002381	S/N AD3633	2x G/E, 1000 BASE-SX
FPC 2				FPC Type OC192
... SSRAM	REV 01	710-000077	S/N 306466	1 MB

show chassis hardware (M320 Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			67245	M320
Midplane	REV 05	710-009120	RB1202	M320 Midplane
FPM GBUS	REV 04	710-005928	HZ5697	M320 Board
FPM Display	REV 05	710-009351	HR1464	M320 FPM Display
CIP	REV 04	710-005926	HT8672	M320 CIP
PEM 0	Rev 05	740-009148	QK34208	DC Power Entry Module
PEM 1	Rev 05	740-009148	QK34262	DC Power Entry Module
PEM 2	Rev 05	740-009148	QF10449	DC Power Entry Module
PEM 3	Rev 05	740-009148	QJ18257	DC Power Entry Module
Routing Engine 0	REV 06	740-008883	P11123901185	RE-4.0
CB 0	REV 07	710-009115	JB2382	M320 Control Board
FPC 0	REV 02	710-005017	CD9926	M320 FPC Type 2
CPU	REV 01	710-011659	CJ6940	M320 PCA SCPU
PIC 0	REV 07	750-001900	AT1594	1x OC-48 SONET, SMSR
PIC 1	REV 03	750-001850	HS2746	1x Tunnel

PIC 2	REV 05	750-010618	JE7117	4x G/E SFP, 1000 BASE
PIC 3	REV 06	750-001900	HE6083	1x OC-48 SONET, SMSR
FPC 2	REV 02	710-005017	CH0319	M320 FPC Type 1
CPU	REV 01	710-011659	CJ6942	M320 PCA SCPU
PIC 0	REV 05	750-003034	BD8705	4x OC-3 SONET, SMIR
FPC 5	REV 02	710-005017	CD9938	M320 FPC Type 2
CPU				
FPC 7	REV 02	710-005017	CD9934	M320 FPC Type 2
CPU				
SIB 0	REV 09	710-009184	JA6540	M320 SIB
SIB 1	REV 09	710-009184	HV9511	M320 SIB
SIB 2	REV 09	710-009184	HW2057	M320 SIB
SIB 3	REV 09	710-009184	JA6687	M320 SIB
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray

show chassis hardware models (M320 Router)

```
user@host> show chassis hardware models
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 03	710-009120		CHAS-BP-M320-S
FPM Display	REV 02	710-009351		CRAFT-M320-S
CIP	REV 03	710-005926		CIP-M320-S
PEM 2	Rev X4	740-009148		PWR-M-DC-S
PEM 3	Rev X4	740-009148		PWR-M-DC-S
Routing Engine 0	REV 02	740-008883		RE-1600-2048-S
Routing Engine 1	REV 02	740-008883		RE-1600-2048-S
FPC 0	REV 02	710-010419		M320-FPC1
PIC 0	REV 01	750-001323		P-TUNNEL
PIC 1	REV 02	750-002987		PE-10C12-SON-SMIR
PIC 2	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 04	750-001896		PB-10C12-SON-SMIR
FPC 1	REV 02	710-010419		M320-FPC1
PIC 0	REV 04	750-001894		PB-1GE-SX
PIC 1	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 03	750-001894		PB-1GE-SX
FPC 2	REV 02	710-010419		M320-FPC1
PIC 0	REV 10	750-005634		PB-1CHOC12SMIR-QPP
PIC 1	REV 10	750-005634		PB-1CHOC12SMIR-QPP
PIC 2	REV 07	750-005634		PB-1CHOC12SMIR-QPP
PIC 3	REV 07	750-005634		PB-1CHOC12SMIR-QPP
PIC 1	REV 10	750-005634		PB-1CHOC12SMIR-QPP
PIC 2	REV 07	750-005634		PB-1CHOC12SMIR-QPP
PIC 3	REV 07	750-005634		PB-1CHOC12SMIR-QPP
FPC 3				
PIC 0	REV 03	750-001895		PB-10C12-SON-MM
PIC 1	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 04	750-003141		PB-1GE-SX-B
FPC 4	REV 02	710-010419		M320-FPC1
FPC 5	REV 02	710-010419		M320-FPC1
FPC 6	REV 02	710-010419		M320-FPC1
FPC 7				
PIC 0	REV 15	750-001901		PB-40C12-SON-SMIR
PIC 1	REV 06	750-001900		PB-10C48-SON-SMSR
PIC 2	REV 07	750-001900		PB-10C48-SON-SMSR
PIC 3	REV 05	750-003737		PB-4GE-SX
SIB 0	REV 03	710-009184		SIB-M-S
SIB 1	REV 03	710-009184		SIB-M-S
SIB 2	REV 03	710-009184		SIB-M-S

SIB 3	REV 03	710-009184	SIB-M-S
Fan Tray 0			FFANTRAY-M320-S
Fan Tray 1			FFANTRAY-M320-S
Fan Tray 2			RFANTRAY-M320-S

show chassis hardware (MX5 Router)

```

user@host> show chassis hardware
Hardware inventory:

```

Item	Version	Part number	Serial number	Description
Chassis			E1368	MX5-T
Midplane	REV 01	711-038215	YF5288	MX5-T
PEM 0	Rev 04	740-028288	VA01215	AC Power Entry Module
PEM 1	Rev 04	740-028288	VA01218	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
TFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
QXM 0	REV 05	711-028408	ZA9136	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 24	750-028392	YX9820	3D 20x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	AM1045SUAQ3	SFP-SX
Xcvr 1	REV 01	740-031851	AM1045SUAPA	SFP-SX
Xcvr 2	REV 01	740-031851	AM1045SUAN7	SFP-SX
Xcvr 3	REV 01	740-031851	AM1045SU91Q	SFP-SX
Xcvr 4	REV 01	740-031851	AM1045SUDDR	SFP-SX
Xcvr 9	REV 01	740-011613	AM0848SB6A1	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	AM1045SUANO	SFP-SX
Xcvr 1	REV 01	740-011613	AS0812S0719	SFP-SX
Xcvr 2	REV 01	740-011613	AM0821SA121	SFP-SX
Xcvr 3	REV 01	740-011613	PF21K21	SFP-SX
Xcvr 4	REV 01	740-011613	AM0848SB69Z	SFP-SX
Xcvr 5	REV 01	740-011782	P9P0XV3	SFP-SX
Xcvr 6	REV 01	740-011613	AM0812S8WJN	SFP-SX
Xcvr 7	REV 01	740-011613	PAM3G9Q	SFP-SX
Xcvr 8	REV 01	740-011613	AM0848SB4A6	SFP-SX
Xcvr 9	REV 01	740-011782	P9MOU37	SFP-SX
MIC 1	REV 20	750-028380	ZG2657	3D 2x 10GE XFP
PIC 2		BUILTIN	BUILTIN	1x 10GE XFP
PIC 3		BUILTIN	BUILTIN	1x 10GE XFP
Fan Tray				Fan Tray

show chassis hardware (MX10 Router)

```

user@host> show chassis hardware
Hardware inventory:

```

Item	Version	Part number	Serial number	Description
Chassis			E1372	MX10-T
Midplane	REV 01	711-038211	YF5285	MX10-T
PEM 0	Rev 04	740-028288	VB01678	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
TFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
QXM 0	REV 05	711-028408	ZA9053	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP

```

FPC 1          BUILTIN      BUILTIN      MPC BUILTIN
  MIC 0        REV 24      750-028392  YX9436      3D 20x 1GE(LAN) SFP
    PIC 0      BUILTIN      BUILTIN      10x 1GE(LAN) SFP
      Xcvr 0    REV 01      740-031851  AM1107SUFQW SFP-SX
    PIC 1      BUILTIN      BUILTIN      10x 1GE(LAN) SFP
Fan Tray                               Fan Tray

```

show chassis hardware (MX40 Router)

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               E1367          MX40-T
Midplane      REV 01    711-038211   YF5284         MX40-T
PEM 0         Rev 04    740-028288   VB01680        AC Power Entry Module
PEM 1         Rev 04    740-028288   VB01700        AC Power Entry Module
Routing Engine BUILTIN   BUILTIN      Routing Engine
TFEB 0        BUILTIN   BUILTIN      Forwarding Engine
Processor
  QXM 0        REV 05    711-028408   ZA9048         MPC QXM
FPC 0          BUILTIN   BUILTIN      MPC BUILTIN
  MIC 0        BUILTIN   BUILTIN      4x 10GE XFP
    PIC 0      BUILTIN   BUILTIN      4x 10GE XFP
      Xcvr 0    REV 01    740-014279   M7067UPP       XFP-10G-LR
      Xcvr 1    NON-JNPR   K9J02UN       XFP-10G-LR
FPC 1          BUILTIN   BUILTIN      MPC BUILTIN
  MIC 0        REV 24    750-028392   YX3504         3D 20x 1GE(LAN) SFP
    PIC 0      BUILTIN   BUILTIN      10x 1GE(LAN) SFP
      Xcvr 0    REV 01    740-011613   AM0812S8WTE    SFP-SX
      Xcvr 1    REV 01    740-011613   PFA6KV2        SFP-SX
      Xcvr 2    REV 01    740-031851   AM1045SUDDM    SFP-SX
      Xcvr 3    REV 01    740-011613   PD63C7M        SFP-SX
      Xcvr 4    REV 01    740-011613   PD63DJY        SFP-SX
      Xcvr 5    REV 02    740-011613   AA0950STLL9    SFP-SX
      Xcvr 6    REV 01    740-011782   PAR1YHC        SFP-SX
      Xcvr 7    REV 01    740-011782   P9P0XXL        SFP-SX
      Xcvr 8    REV 01    740-011613   PD63D95        SFP-SX
      Xcvr 9    REV 01    740-031851   AM1045SU9B8    SFP-SX
    PIC 1      BUILTIN   BUILTIN      10x 1GE(LAN) SFP
      Xcvr 0    REV 01    740-011613   PF21L3Z        SFP-SX
      Xcvr 1    REV 01    740-031851   AM1045SU7M9    SFP-SX
      Xcvr 2    REV 01    740-031851   AM1045SUAPT    SFP-SX
      Xcvr 3    REV 01    740-011613   PFF2BZH        SFP-SX
      Xcvr 4    REV 01    740-031851   AM1045SUDDN    SFP-SX
      Xcvr 5    REV 01    740-031851   AM1039S00ZR    SFP-SX
      Xcvr 6    REV 01    740-031851   AM1045SUD6Y    SFP-SX
      Xcvr 8    REV 01    740-011613   PFM1QBS        SFP-SX
      Xcvr 9    REV 01    740-011613   PFF2E25        SFP-SX
  MIC 1        REV 01    750-021130   KG4391         3D 2x 10GE XFP
    PIC 2      BUILTIN   BUILTIN      1x 10GE XFP
      Xcvr 0    REV 01    740-011571   C645XJ04G      XFP-10G-SR
    PIC 3      BUILTIN   BUILTIN      1x 10GE XFP
      Xcvr 0    NON-JNPR   CA49BK0AE      XFP-10G-SR
Fan Tray                               Fan Tray

```

show chassis hardware (Fixed MX80 Router)

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               MX80-48T

```

Midplane	REV 01	711-031603	KF9250	MX80-48T
Routing Engine		BUILTIN	BUILTIN	Routing Engine
FEB 0		BUILTIN	BUILTIN	Forwarding Engine Board
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
Xcvr 0		NON-JNPR	M6439D41	XFP-10G-LR
Xcvr 1	REV 01	740-014279	6XE931N00202	XFP-10G-LR
Xcvr 2	REV 01	740-014289	C715XU05F	XFP-10G-SR
Xcvr 3	REV 01	740-014289	C650XU0EP	XFP-10G-SR
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 01	711-029399	JR6981	12x 1GE(LAN) RJ45
PIC 0		BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
PIC 1		BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
MIC 1	REV 01	BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
PIC 2		BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
PIC 3		BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
Fan Tray				Fan Tray

show chassis hardware (Modular MX80 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis				MX80
Midplane	REV 02	711-031594	JR7084	MX80
PEM 0	Rev 01	740-028288	000018	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
FEB 0		BUILTIN	BUILTIN	Forwarding Engine Board
QXM 0	REV 05	711-028408	JR7041	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 02	750-028380	JR6598	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 01	740-014289	T07M86365	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 01	740-014289	T07M71094	XFP-10G-SR
MIC 1	REV 02	750-028380	JG8548	3D 2x 10GE XFP
PIC 2		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 02	740-014289	T08L86302	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 02	740-014289	C810XU0BA	XFP-10G-SR
Fan Tray				Fan Tray

show chassis hardware (MX104 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			G3503	MX104
Midplane	REV 28	750-044219	CAAX5741	MX104
PEM 0	REV 03	740-045933	1H072500016	AC Power Entry Module
PEM 1	REV 03	740-045932	1H073050017	DC Power Entry Module
Routing Engine 0	REV 20	750-044228	CAAY7935	RE-MX-104
Routing Engine 1	REV 13	750-044228	CAAM6380	RE-MX-104
AFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				

```

FPC 0          BUILTIN      BUILTIN      MPC BUILTIN
FPC 1          BUILTIN      BUILTIN      MPC BUILTIN
  MIC 0          REV 15    750-036132    CAAF7948    2x0C12/8x0C3 CC-CE
    PIC 0          BUILTIN      BUILTIN      2x0C12/8x0C3 CC-CE
      Xcvr 0        REV 01    740-011615    PCQ0U2J      SFP-IR
      Xcvr 1        REV 01    740-016068    PJJL7A6G     SFP-SR
      Xcvr 2        REV 01    740-016068    PJJL7A5J     SFP-SR
      Xcvr 3        REV 01    740-016065    PJJN5HPZ     SFP-SR
      Xcvr 4        REV 01    740-029122    PKB38TL      SFP-LR
      Xcvr 5        REV 01    740-011787    P6A107G      SFP-LR
      Xcvr 6        REV 01    740-029122    PKB38TR      SFP-LR
      Xcvr 7        REV 01    740-011787    PBKONK3      SFP-LR
    MIC 1
  FPC 2          BUILTIN      BUILTIN      MPC BUILTIN
  MIC 0          BUILTIN      BUILTIN      4x 10GE(LAN) SFP+
    PIC 0          BUILTIN      BUILTIN      4x 10GE(LAN) SFP+
      Xcvr 0        REV 01    740-031980    B10F00465    SFP+-10G-SR
      Xcvr 1        REV 01    740-031980    B10F00461    SFP+-10G-SR
      Xcvr 2        REV 01    740-031980    B10G01545    SFP+-10G-SR
      Xcvr 3        REV 01    740-031980    B10G01385    SFP+-10G-SR
  Fan Tray 0      REV 02    711-049570    CAAX6538      Fan Tray

```

show chassis hardware detail (MX104 Router)

```

user@host> show chassis hardware detail
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               G3503          MX104
Midplane                               CAAX5741       MX104
PEM 0          REV 03    740-045933    1H072500016    AC Power Entry Module
PEM 1          REV 03    740-045932    1H073050017    DC Power Entry Module
Routing Engine 0 REV 20    750-044228    CAAY7935       RE-MX-104
  da0      7836 MB  ATP IG eUSB SSD                      Nand Flash 0
  usb0 (addr 1) EHCI root hub 0      Freescale      uhub0
  usb0 (addr 2) USB2513Bi 9491      SMSC            uhub1
  usb0 (addr 3) ATP IG eUSB SSD 44801 ATP Electronics umass0
Routing Engine 1 REV 13    750-044228    CAAM6380       RE-MX-104
  da0      7836 MB  ATP IG eUSB SSD                      Nand Flash 0
AFEB 0          BUILTIN      BUILTIN        Forwarding Engine
Processor
FPC 0          BUILTIN      BUILTIN        MPC BUILTIN
FPC 1          BUILTIN      BUILTIN        MPC BUILTIN
  MIC 0          REV 15    750-036132    CAAF7948    2x0C12/8x0C3 CC-CE
    PIC 0          BUILTIN      BUILTIN      2x0C12/8x0C3 CC-CE
      Xcvr 0        REV 01    740-011615    PCQ0U2J      SFP-IR
      Xcvr 1        REV 01    740-016068    PJJL7A6G     SFP-SR
      Xcvr 2        REV 01    740-016068    PJJL7A5J     SFP-SR
      Xcvr 3        REV 01    740-016065    PJJN5HPZ     SFP-SR
      Xcvr 4        REV 01    740-029122    PKB38TL      SFP-LR
      Xcvr 5        REV 01    740-011787    P6A107G      SFP-LR
      Xcvr 6        REV 01    740-029122    PKB38TR      SFP-LR
      Xcvr 7        REV 01    740-011787    PBKONK3      SFP-LR
    MIC 1
  FPC 2          BUILTIN      BUILTIN        MPC BUILTIN
  MIC 0          BUILTIN      BUILTIN        4x 10GE(LAN) SFP+
    PIC 0          BUILTIN      BUILTIN        4x 10GE(LAN) SFP+
      Xcvr 0        REV 01    740-031980    B10F00465    SFP+-10G-SR
      Xcvr 1        REV 01    740-031980    B10F00461    SFP+-10G-SR
      Xcvr 2        REV 01    740-031980    B10G01545    SFP+-10G-SR
      Xcvr 3        REV 01    740-031980    B10G01385    SFP+-10G-SR
  Fan Tray 0      REV 02    711-049570    CAAX6538      Fan Tray

```

show chassis hardware extensive (MX104 Router)

```

user@host> show chassis hardware extensive
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Jedec Code:   0x7fb0          EEPROM Version: 0x02
S/N:          G3503
Assembly ID:  0x0560          Assembly Version: 00.00
Date:         00-00-0000      Assembly Flags:  0x00
ID: MX104
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 60 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 47 33 35 30 33 00 00 00 00 00 00 00 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane      REV 28    750-044219    CAAX5741      MX104
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          750-044219      S/N:          CAAX5741
Assembly ID:  0x0560          Assembly Version: 01.28
Date:         03-27-2013      Assembly Flags: 0x00
Version:      REV 28          CLEI Code:    PROTOXCLEI
ID: MX104      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ad 01 08 00 b0 a8 6e a7 f8 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 60 01 1c 52 45 56 20 32 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 32 31 39 00 00
Address 0x20: 53 2f 4e 20 43 41 41 58 35 37 34 31 00 1b 03 07
Address 0x30: dd ff ff ff ad 01 08 00 b0 a8 6e a7 f8 00 ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 47 33 35 30 33 00 00 00 00 00 00 00
PEM 0          REV 03    740-045933    1H072500016    AC Power Entry Module
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          740-045933      S/N:          1H072500016
Assembly ID:  0x0475          Assembly Version: 00.03
Date:         12-14-2012      Assembly Flags: 0x00
Version:      REV 03          CLEI Code:    IPUPAJ9KAA
ID: AC Power Entry Module      FRU Model Number: PWR-AMX1100-AC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff 02 02 00 ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 75 00 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 39 33 33 00 00
Address 0x20: 31 48 30 37 32 35 30 30 30 31 36 00 00 0e 0c 07
Address 0x30: dc 30 43 ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: 02 02 00 ff 01 49 50 55 50 41 4a 39 4b 41 41 50
Address 0x50: 57 52 2d 41 4d 58 31 31 30 30 2d 41 43 2d 53 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 70 ff ff ff ff ff ff ff ff ff ff ff ff
PEM 1          REV 03    740-045932    1H073050017    DC Power Entry Module
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          740-045932      S/N:          1H073050017

```



```

Assembly ID: 0x0476      Assembly Version: 00.03
Date: 01-30-2013      Assembly Flags: 0x00
Version: REV 03      CLEI Code: IPUPAJ8KAA
ID: DC Power Entry Module  FRU Model Number: PWR-AMX1100-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff 02 02 00 ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 76 00 03 52 45 56 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 39 33 32 00 00
  Address 0x20: 31 48 30 37 33 30 35 30 30 31 37 00 00 1e 01 07
  Address 0x30: dd 30 44 ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 02 02 00 ff 01 49 50 55 50 41 4a 38 4b 41 41 50
  Address 0x50: 57 52 2d 41 4d 58 31 31 30 30 2d 44 43 2d 53 00
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
  Address 0x70: ff ff ff 72 ff ff ff ff ff ff ff ff ff ff ff
Routing Engine 0 REV 20 750-044228 CAAY7935 RE-MX-104
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-044228      S/N: CAAY7935
Assembly ID: 0x0b81      Assembly Version: 01.20
Date: 03-18-2013      Assembly Flags: 0x00
Version: REV 20      CLEI Code: PROTOXCLEI
ID: RE-MX-104      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
  Address 0x00: ad 01 00 08 b0 a8 6e a6 fc 10 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 fe 0b 81 01 14 52 45 56 20 32 30 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 32 32 38 00 00
  Address 0x20: 53 2f 4e 20 43 41 41 59 37 39 33 35 00 12 03 07
  Address 0x30: dd ff ff ff ad 01 00 08 b0 a8 6e a6 fc 10 ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff
da0 7836 MB ATP IG eUSB SSD Nand Flash 0
usb0 (addr 1) EHCI root hub 0 Freescale uhub0
usb0 (addr 2) USB2513Bi 9491 SMSC uhub1
usb0 (addr 3) ATP IG eUSB SSD 44801 ATP Electronics umass0
Routing Engine 1 REV 13 750-044228 CAAM6380 RE-MX-104
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-044228      S/N: CAAM6380
Assembly ID: 0x0b81      Assembly Version: 01.13
Date: 09-17-2012      Assembly Flags: 0x00
Version: REV 13      CLEI Code: PROTOXCLEI
ID: RE-MX-104      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
  Address 0x00: ad 01 00 08 64 87 88 27 08 18 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 fe 0b 81 01 0d 52 45 56 20 31 33 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 32 32 38 00 00
  Address 0x20: 53 2f 4e 20 43 41 41 4d 36 33 38 30 00 11 09 07
  Address 0x30: dc ff ff ff ad 01 00 08 64 87 88 27 08 18 ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
da0 7836 MB ATP IG eUSB SSD Nand Flash 0
AFEB 0 BUILTIN BUILTIN Forwarding Engine
Processor
FPC 0 BUILTIN BUILTIN MPC BUILTIN
FPC 1 BUILTIN BUILTIN MPC BUILTIN
MIC 0 REV 15 750-036132 CAAF7948 2xOC12/8xOC3 CC-CE

```

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-036132        S/N: CAAF7948
Assembly ID: 0x0a1a     Assembly Version: 01.15
Date: 07-03-2012       Assembly Flags: 0x00
Version: REV 15        CLEI Code: IP9IAM2DAA
ID: 2x0C12/8x0C3 CC-CE FRU Model Number: MIC-3D-80C3-20C12-ATM

Board Information Record:
Address 0x00: 12 01 05 03 05 ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0a 1a 01 0f 52 45 56 20 31 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 36 31 33 32 00 00
Address 0x20: 53 2f 4e 20 43 41 41 46 37 39 34 38 00 03 07 07
Address 0x30: dc ff ff ff 12 01 05 03 05 ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 39 49 41 4d 32 44 41 41 4d
Address 0x50: 49 43 2d 33 44 2d 38 4f 43 33 2d 32 4f 43 31 32
Address 0x60: 2d 41 54 4d 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff e3 c0 02 a3 9c 00 00 00 00 0a 60 00 00
PIC 0      BUILTIN      BUILTIN      2x0C12/8x0C3 CC-CE
  Xcvr 0    REV 01      740-011615    PCQOU2J      SFP-IR
  Xcvr 1    REV 01      740-016068    P3L7A6G      SFP-SR
  Xcvr 2    REV 01      740-016068    P3L7A5J      SFP-SR
  Xcvr 3    REV 01      740-016065    P3N5HPZ      SFP-SR
  Xcvr 4    REV 01      740-029122    PKB38TL      SFP-LR
  Xcvr 5    REV 01      740-011787    P6A107G      SFP-LR
  Xcvr 6    REV 01      740-029122    PKB38TR      SFP-LR
  Xcvr 7    REV 01      740-011787    PBKONK3      SFP-LR
MIC 1
FPC 2      BUILTIN      BUILTIN      MPC BUILTIN
MIC 0      BUILTIN      BUILTIN      4x 10GE(LAN) SFP+
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N: BUILTIN           S/N: BUILTIN
Assembly ID: 0x0a60     Assembly Version: 00.00
Date: 00-00-0000       Assembly Flags: 0x00
ID: 4x 10GE(LAN) SFP+
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 60 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 4d 58 43 00
Address 0x20: 42 55 49 4c 54 49 4e 00 4d 58 43 00 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 a5 04 7f b0 02 ff 0a 1a 01 0f
PIC 0      BUILTIN      BUILTIN      4x 10GE(LAN) SFP+
  Xcvr 0    REV 01      740-031980    B10F00465    SFP+-10G-SR
  Xcvr 1    REV 01      740-031980    B10F00461    SFP+-10G-SR
  Xcvr 2    REV 01      740-031980    B10G01545    SFP+-10G-SR
  Xcvr 3    REV 01      740-031980    B10G01385    SFP+-10G-SR
Fan Tray 0 REV 02      711-049570    CAAX6538      Fan Tray
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 711-049570        S/N: CAAX6538
Assembly ID: 0x0b82     Assembly Version: 01.02
Date: 03-01-2013       Assembly Flags: 0x00
Version: REV 02        CLEI Code: PROTOXCLEI
ID: Fan Tray           FRU Model Number: PROTO-ASSEMBLY

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 82 01 02 52 45 56 20 30 32 00 00

```

```

Address 0x10: 00 00 00 00 37 31 31 2d 30 34 39 35 37 30 00 00
Address 0x20: 53 2f 4e 20 43 41 41 58 36 35 33 38 00 01 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff

```

show chassis hardware models (MX104 Router)

```

user@host> show chassis hardware models
Hardware inventory:
Item                Version  Part number  Serial number  FRU model number
Midplane            REV 20   750-044219   CAAS5849       PROTO-ASSEMBLY
PEM 0               REV 01   740-045932   1H072400065
Routing Engine 0    REV 16   750-044228   CAAR5915       PROTO-ASSEMBLY
AFEB 0              BUILTIN BUILTIN
FPC 0               BUILTIN BUILTIN
FPC 1               BUILTIN BUILTIN
  MIC 0             REV 01   750-046905   CAAK7103       MIC-3D-20GE-SFP-EH
FPC 2               BUILTIN BUILTIN
Fan Tray            REV 02   711-049570   CAAX6538       PROTO-ASSEMBLY

```

show chassis hardware clei-models (MX104 Router)

```

user@host> show chassis hardware clei-models
Hardware inventory:
Item                Version  Part number  CLEI code      FRU model number
Midplane            REV 20   750-044219   PROTOXCLEI     PROTO-ASSEMBLY
PEM 0               REV 01   740-045932
Routing Engine 0    REV 16   750-044228   PROTOXCLEI     PROTO-ASSEMBLY
AFEB 0              BUILTIN
FPC 0               BUILTIN
FPC 1               BUILTIN
  MIC 0             REV 01   750-046905   PROTOXCLEI     MIC-3D-20GE-SFP-EH
FPC 2               BUILTIN
Fan Tray            REV 02   711-049570   CAAX6538       PROTO-ASSEMBLY

```

show chassis hardware (MX240 Router)

```

user@host> show chassis hardware
Hardware inventory:
Item                Version  Part number  Serial number  Description
Chassis              REV 01   710-021041   JN10C7F7EAFC  MX240
Midplane            REV 01   710-017254   TR1502         MX240 Backplane
FPM Board            REV 01   710-017254   KD4017         Front Panel Display
PEM 0               Rev 02   740-017330   000332         PS 1.2-1.7kW; 100-240V
AC in
PEM 1               Rev 02   740-017330   000226         PS 1.2-1.7kW; 100-240V
AC in
Routing Engine 0    REV 06   740-013063   1000703522     RE-S-2000
Routing Engine 1    REV 06   740-015113   1000687625     RE-S-1300
CB 0                REV 07   710-013385   KC9057         MX SCB
CB 1                REV 05   710-013385   JY4760         MX SCB
FPC 1               REV 01   750-021679   KC7340         DPCE 40x 1GE R
  CPU               REV 06   710-013713   KD4078         DPC PMB
  PIC 0              BUILTIN BUILTIN        10x 1GE(LAN)
    Xcvr 0           REV 01   740-011613   P9F18ME        SFP-SX
  PIC 1              BUILTIN BUILTIN        10x 1GE(LAN)
  PIC 2              BUILTIN BUILTIN        10x 1GE(LAN)
  PIC 3              BUILTIN BUILTIN        10x 1GE(LAN)
FPC 2               REV 04   710-016669   JS4529         DPCE 40x 1GE R EQ

```

CPU	REV 06	710-013713	KB3969	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3Y79	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3XU8	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3YG6	SFP-SX
Xcvr 3	REV 01	740-011613	PBG3XUG	SFP-SX
Xcvr 4	REV 01	740-011613	PBG3XTJ	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3ZUM	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3Y5H	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3UZT	SFP-SX
Xcvr 3	REV 01	740-011613	PBG3US1	SFP-SX
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3YG7	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3XZ9	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3XTY	SFP-SX
Xcvr 3	REV 01	740-011613	PBG3UZG	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3Y8W	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3YVX	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3YB3	SFP-SX
Xcvr 3	REV 01	740-011613	PBG43VQ	SFP-SX
Fan Tray 0	REV 01	710-021113	JS4642	MX240 Fan Tray

show chassis hardware detail (MX 240 Router with Routing Engine Displaying DIMM information)

```
user@host> show chassis hardware detail
```

Item	Version	Part number	Serial number	Description
Chassis			JN11279B4AFC	MX240 Backplane
Midplane	REV 07	760-021404	TS2474	MX240 Backplane
FPM Board	REV 03	760-021392	XC2643	Front Panel Display
PEM 0	Rev 03	740-017343	QCS0908A068	DC Power Entry Module
Routing Engine 0	REV 01	740-031117	AARCH00	RE-S-1800x4
ad0 3764 MB	STEC M2+	CF 9.0.2	STIM2Q3209239145303	Removable Compact Flash
ad1 28626 MB	WDC SSD-F0030S-5000		C933Z036237215548S00	Compact Flash
usb0 (addr 1)	EHCI root hub 0		Intel	uhub0
usb0 (addr 2)	product 0x0020 32		vendor 0x8087	uhub1
DIMM 0	VL31B5263E-F8S DIE REV-0 PCB REV-0			MFR ID-ce80
DIMM 1	VL31B5263E-F8S DIE REV-0 PCB REV-0			MFR ID-ce80
DIMM 2	VL31B5263E-F8S DIE REV-0 PCB REV-0			MFR ID-ce80
DIMM 3	SL31B5263E-F8S DIE REV-0 PCB REV-0			MFR ID-ce80
CB 0	REV 03	710-021523	XD7225	MX SCB
Fan Tray 0	REV 01	710-021113	WZ4986	MX240 Fan Tray

show chassis hardware (MX240 Router with Enhanced MX SCB)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN10C7F7EAFC	MX240
Midplane	REV 01	710-021041	TR1502	MX240 Backplane
FPM Board	REV 01	710-017254	KD4017	Front Panel Display
PEM 0	Rev 02	740-017330	000332	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 02	740-017330	000226	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 06	740-013063	1000703522	RE-S-2000
Routing Engine 1	REV 06	740-015113	1000687625	RE-S-1300
CB 0	REV 02	710-031391	YE8494	Enhanced MX SCB

CB 1	REV 05	710-031391	YOP5764	Enhanced MX SCB
FPC 1	REV 01	750-021679	KC7340	DPCE 40x 1GE R
CPU	REV 06	710-013713	KD4078	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	P9F18ME	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
FPC 2	REV 04	710-016669	JS4529	DPCE 40x 1GE R EQ
CPU	REV 06	710-013713	KB3969	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3Y79	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3XU8	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3YG6	SFP-SX
Xcvr 3	REV 01	740-011613	PBG3XUG	SFP-SX
Xcvr 4	REV 01	740-011613	PBG3XTJ	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3ZUM	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3Y5H	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3UZT	SFP-SX
Xcvr 3	REV 01	740-011613	PBG3US1	SFP-SX
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3YG7	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3XZ9	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3XTY	SFP-SX
Xcvr 3	REV 01	740-011613	PBG3UZG	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3Y8W	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3YVX	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3YB3	SFP-SX
Xcvr 3	REV 01	740-011613	PBG43VQ	SFP-SX
Fan Tray 0	REV 01	710-021113	JS4642	MX240 Fan Tray

show chassis hardware (MX480 Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN10C7F7FAFB	MX480
Midplane	REV 04	710-017414	TR2071	MX480 Midplane
FPM Board	REV 02	710-017254	KB8459	Front Panel Display
PEM 0	Rev 02	740-017330	QCS07519029	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 02	740-017330	QCS07519041	PS 1.2-1.7kW; 100-240V
AC in				
PEM 2	Rev 02	740-017330	QCS07519097	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 07	740-013063	1000733381	RE-S-2000
Routing Engine 1	REV 07	740-013063	1000733540	RE-S-2000
CB 0	REV 07	710-013385	KA8022	MX SCB
CB 1	REV 07	710-013385	KA8303	MX SCB
FPC 0	REV 09	750-020452	KA8660	DPCE 40x 1GE X EQ
CPU	REV 06	710-013713	KA8185	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Fan Tray				Left Fan Tray

show chassis hardware (MX480 Router with Enhanced MX SCB)

```

user@host> show chassis hardware
Hardware inventory:
Item              Version  Part number  Serial number  Description
Chassis           REV 04   710-017414   JN10C7F7FAFB  MX480
Midplane          REV 02   710-017254   KB8459         MX480 Midplane
FPM Board         Rev 02   740-017330   QCS07519029   Front Panel Display
PEM 0             Rev 02   740-017330   QCS07519029   PS 1.2-1.7kW; 100-240V
AC in
PEM 1             Rev 02   740-017330   QCS07519041   PS 1.2-1.7kW; 100-240V
AC in
PEM 2             Rev 02   740-017330   QCS07519097   PS 1.2-1.7kW; 100-240V
AC in
Routing Engine 0  REV 07   740-013063   1000733381    RE-S-2000
Routing Engine 1  REV 07   740-013063   1000733540    RE-S-2000
CB 0              REV 07   710-013385   KA8022         Enhanced MX SCB
CB 1              REV 07   710-013385   KA8303         Enhanced MX SCB
FPC 0             REV 09   750-020452   KA8660         DPCE 40x 1GE X EQ
CPU               REV 06   710-013713   KA8185         DPC PMB
PIC 0             BUILTIN  BUILTIN       10x 1GE(LAN) EQ
PIC 1             BUILTIN  BUILTIN       10x 1GE(LAN) EQ
PIC 2             BUILTIN  BUILTIN       10x 1GE(LAN) EQ
PIC 3             BUILTIN  BUILTIN       10x 1GE(LAN) EQ
Fan Tray
Left Fan Tray

```

show chassis hardware (MX480 Routers with MPC5E and built-in OTN PIC)

```

user@host> show chassis hardware
Hardware inventory:
Item              Version  Part number  Serial number  Description
Chassis           REV 05   710-017414   JN11C0338AFB  MX480
Midplane          REV 02   710-017254   ABAB8430      MX480 Midplane
FPM Board         Rev 05   740-029970   ZS8005        Front Panel Display
PEM 0             Rev 05   740-029970   QCS1024U089   PS 1.4-2.52kW; 90-264V
AC in
PEM 1             Rev 10   740-029970   QCS1314U0FJ   PS 1.4-2.52kW; 90-264V
AC in
PEM 2             Rev 07   740-029970   QCS1121U076   PS 1.4-2.52kW; 90-264V
AC in
Routing Engine 0  REV 05   740-031116   9009092471    RE-S-1800x4
Routing Engine 1  REV 05   740-031116   9009097958    RE-S-1800x4
CB 0              REV 16   750-031391   CAAX0789      Enhanced MX SCB
CB 1              REV 16   750-031391   CAAX0856      Enhanced MX SCB
FPC 0             REV 32   750-028467   ABBP1782      MPC 3D 16x 10GE
CPU               REV 10   711-029089   ABBP5410      AMPC PMB
PIC 0             BUILTIN  BUILTIN       4x 10GE(LAN) SFP+
Xcvr 0            REV 01   740-021308   983152A00038  SFP+-10G-SR
Xcvr 1            REV 01   740-031980   B11F00211     SFP+-10G-SR
Xcvr 2            REV 01   740-031980   AQ72LPB       SFP+-10G-SR
Xcvr 3            REV 01   740-031980   AHNOWR5       SFP+-10G-SR
PIC 1             BUILTIN  BUILTIN       4x 10GE(LAN) SFP+
Xcvr 0            REV 01   740-031980   B11J03627     SFP+-10G-SR
Xcvr 1            REV 01   740-031980   B11F00300     SFP+-10G-SR
Xcvr 2            REV 01   740-021308   AQ42WSS       SFP+-10G-SR
Xcvr 3            REV 01   740-021308   AQ43HGC       SFP+-10G-SR
PIC 2             BUILTIN  BUILTIN       4x 10GE(LAN) SFP+
Xcvr 0            REV 01   740-021308   ANAONDO       SFP+-10G-SR
Xcvr 1            REV 01   740-021308   ANAONGF       SFP+-10G-SR
Xcvr 2            REV 01   740-021308   ANAONG9       SFP+-10G-SR
Xcvr 3            REV 01   740-021308   ANAOMP9       SFP+-10G-SR

```

PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQA06CG	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	19T511100493	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	APR040J	SFP+-10G-SR
FPC 1	REV 26	750-046005	CACN1894	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACN8698	RMPD PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	163363A03046	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ40JS8	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	153363A00593	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ40JUJ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQC0B53	CFP2-100G-LR4-D
FPC 2	REV 26	750-046005	CACN1891	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACN8694	RMPD PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0		NON-JNPR	URA012A	SFP+-10G-LR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	J13F47042	CFP2-100G-LR4-D
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	AJC0BM3	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	11T511100917	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQK07SU	CFP2-100G-LR4-D
FPC 3	REV 03	750-045372	CAAD9425	MPCE Type 3 3D
CPU	REV 08	711-035209	CAAD9094	HMPD PMB 2G
MIC 0	REV 14	750-033196	CAAW9204	1X100GE CXP
PIC 0		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC034	CFP2-100G-SR10
MIC 1	REV 19	750-033199	CAAJ1814	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
FPC 4	REV 21.0.11	750-045715	CAAY3568	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 07	711-045719	CAAW7430	RMPD PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	AP406NG	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AR41NLP	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11D05630	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 12	750-049136	CACM6678	MPC5E 24XGE OTN Mezz
FPC 5	REV 11	750-045372	CABK7539	MPCE Type 3 3D
CPU	REV 08	711-035209	CABJ2466	HMPD PMB 2G
MIC 0	REV 19	750-033199	CAAJ9719	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	UP1020P	CFP-100G-SR10
MIC 1	REV 07	750-033196	YZ0797	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XC42FC022	CFP2-100G-SR10
Fan Tray				Enhanced Left Fan Tray

show chassis hardware detail (MX480 Routers with MPC5E and built-in OTN PIC)

```
user@host> show chassis hardware detail
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11C0338AFB	MX480
Midplane	REV 05	710-017414	ABAB8430	MX480 Midplane
FPM Board	REV 02	710-017254	ZS8005	Front Panel Display

PEM 0	Rev 05	740-029970	QCS1024U089	PS 1.4-2.52kW; 90-264V
AC in				
PEM 1	Rev 10	740-029970	QCS1314U0FJ	PS 1.4-2.52kW; 90-264V
AC in				
PEM 2	Rev 07	740-029970	QCS1121U076	PS 1.4-2.52kW; 90-264V
AC in				
Routing Engine 0	REV 05	740-031116	9009092471	RE-S-1800x4
ad0 3896 MB		VRFCF14096DIHK1	VM4096MB 6862	Compact Flash
ad1 30533 MB		UGB94ARF32H0S3-KC	UNIGEN-478612-001127	Disk 1
usb0 (addr 1)		EHCI root hub 0	Intel	uhub0
usb0 (addr 2)		product 0x0020 32	vendor 0x8087	uhub1
DIMM 0		SGU04G72H1BB2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80
DIMM 1		SGU04G72H1BB2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80
DIMM 2		SGU04G72H1BB2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80
DIMM 3		SGU04G72H1BB2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80
Routing Engine 1	REV 05	740-031116	9009097958	RE-S-1800x4
ad0 3896 MB		VRFCF14096DIHK1	VM4096MB 6145	Compact Flash
ad1 30533 MB		UGB94ARF32H0S3-KC	UNIGEN-499551-000273	Disk 1
CB 0	REV 16	750-031391	CAAX0789	Enhanced MX SCB
CB 1	REV 16	750-031391	CAAX0856	Enhanced MX SCB
FPC 0	REV 32	750-028467	ABBP1782	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBP5410	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	983152A00038	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00211	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AQ72LPB	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AHNRW5	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11J03627	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00300	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ42WSS	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43HGC	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	ANAONDO	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	ANAONGF	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	ANAONG9	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	ANAOMP9	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQA06CG	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	19T511100493	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	APR040J	SFP+-10G-SR
FPC 1	REV 26	750-046005	CACN1894	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACN8698	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	163363A03046	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ40JS8	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	153363A00593	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ40JUI	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQC0B53	CFP2-100G-LR4-D
FPC 2	REV 26	750-046005	CACN1891	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACN8694	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0		NON-JNPR	URA012A	SFP+-10G-LR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	J13F47042	CFP2-100G-LR4-D
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	AJCOBM3	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	11T511100917	SFP+-10G-SR

PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQK07SU	CFP2-100G-LR4-D
FPC 3	REV 03	750-045372	CAAD9425	MPCE Type 3 3D
CPU	REV 08	711-035209	CAAD9094	HMPCE PMB 2G
MIC 0	REV 14	750-033196	CAAW9204	1X100GE CXP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-046563	XD16FC034	CFP2-100G-SR10
MIC 1	REV 19	750-033199	CAAJ1814	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
FPC 4	REV 21.0.11	750-045715	CAAY3568	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 07	711-045719	CAAW7430	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	AP406NG	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AR41NLP	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11D05630	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 12	750-049136	CACM6678	MPC5E 24XGE OTN Mezz
FPC 5	REV 11	750-045372	CABK7539	MPCE Type 3 3D
CPU	REV 08	711-035209	CABJ2466	HMPCE PMB 2G
MIC 0	REV 19	750-033199	CAAJ9719	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	UP1020P	CFP-100G-SR10
MIC 1	REV 07	750-033196	YZ0797	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XC42FC022	CFP2-100G-SR10
Fan Tray				Enhanced Left Fan Tray

show chassis hardware extensive (MX480 Routers with MPC5E and built-in OTN PIC)

```

user@host> show chassis hardware extensive
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN11C0338AFB  MX480
Jedec Code:   0x7fb0                    EEPROM Version: 0x02
                                           S/N:           JN11C0338AFB
Assembly ID:  0x01fe                    Assembly Version: 00.00
Date:         00-00-0000                 Assembly Flags:  0x02
ID: MX480
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 01 fe 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 4a 4e 31 31 43 30 33 33 38 41 46 42 02 00 00 00
Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane     REV 05   710-017414  ABAB8430      MX480 Midplane
Jedec Code:   0x7fb0                    EEPROM Version: 0x01
P/N:         710-017414                 S/N:           ABAB8430
Assembly ID:  0x01fe                    Assembly Version: 01.05
Date:         12-13-2011                 Assembly Flags:  0x00
Version:      REV 05
ID: MX480 Midplane                      FRU Model Number: CHAS-BP-MX480-S
Board Information Record:
Address 0x00: ad 01 08 00 00 23 9c fc 98 00 ff ff ff ff ff ff

```

```

I2C Hex Data:
Address 0x00: 7f b0 01 ff 01 fe 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 31 30 2d 30 31 37 34 31 34 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 38 34 33 30 00 0d 0c 07
Address 0x30: db ff ff ff ad 01 08 00 00 23 9c fc 98 00 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 43
Address 0x50: 48 41 53 2d 42 50 2d 4d 58 34 38 30 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board      REV 02   710-017254   ZS8005      Front Panel Display
Jedec Code:    0x7fb0      EEPROM Version: 0x01
P/N:          710-017254   S/N:          ZS8005
Assembly ID:   0x01ff     Assembly Version: 01.02
Date:         11-21-2011   Assembly Flags: 0x00
Version:      REV 02
ID: Front Panel Display   FRU Model Number: CRAFT-MX480-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 01 ff 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 31 30 2d 30 31 37 32 35 34 00 00
Address 0x20: 53 2f 4e 20 5a 53 38 30 30 35 00 00 00 15 0b 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 43
Address 0x50: 52 41 46 54 2d 4d 58 34 38 30 2d 53 00 00 00 00
Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PEM 0          Rev 05   740-029970   QCS1024U089   PS 1.4-2.52kW; 90-264V
AC in
Jedec Code:    0x7fb0      EEPROM Version: 0x01
P/N:          740-029970   S/N:          QCS1024U089
Assembly ID:   0x0432     Assembly Version: 01.05
Date:         06-17-2010   Assembly Flags: 0x00
Version:      Rev 05
ID: PS 1.4-2.52kW; 90-264V AC in FRU Model Number: PWR-MX480-2520-AC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 32 01 05 52 65 76 20 30 35 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 32 39 39 37 30 00 00
Address 0x20: 51 43 53 31 30 32 34 55 30 38 39 00 00 11 06 07
Address 0x30: da ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
Address 0x50: 57 52 2d 4d 58 34 38 30 2d 32 35 32 30 2d 41 43
Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 1          Rev 10   740-029970   QCS1314U0FJ   PS 1.4-2.52kW; 90-264V
AC in
Jedec Code:    0x7fb0      EEPROM Version: 0x01
P/N:          740-029970   S/N:          QCS1314U0FJ
Assembly ID:   0x0432     Assembly Version: 01.10
Date:         04-04-2013   Assembly Flags: 0x00
Version:      Rev 10
ID: PS 1.4-2.52kW; 90-264V AC in FRU Model Number: PWR-MX480-2520-AC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 32 01 0a 52 65 76 20 31 30 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 32 39 39 37 30 00 00
Address 0x20: 51 43 53 31 33 31 34 55 30 46 4a 00 00 04 04 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```

```

Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
Address 0x50: 57 52 2d 4d 58 34 38 30 2d 32 35 32 30 2d 41 43
Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 2          Rev 07    740-029970    QCS1121U076    PS 1.4-2.52kW; 90-264V
AC in
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           740-029970      S/N:              QCS1121U076
Assembly ID:   0x0432          Assembly Version:  01.07
Date:          05-23-2011      Assembly Flags:    0x00
Version:       Rev 07
ID: PS 1.4-2.52kW; 90-264V AC in FRU Model Number: PWR-MX480-2520-AC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 32 01 07 52 65 76 20 30 37 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 32 39 39 37 30 00 00
Address 0x20: 51 43 53 31 31 32 31 55 30 37 36 00 00 17 05 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
Address 0x50: 57 52 2d 4d 58 34 38 30 2d 32 35 32 30 2d 41 43
Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Routing Engine 0 REV 05    740-031116    9009092471    RE-S-1800x4
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-031116      S/N:              9009092471
Assembly ID:   0x09c0          Assembly Version:  01.05
Date:          11-01-2011      Assembly Flags:    0x00
Version:       REV 05          CLEI Code:        COUCALDBAA
ID: RE-S-1800x4              FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
Address 0x00: 54 32 30 32 37 43 41 2d 34 32 46 42 23 23 23 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 c0 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 33 31 31 31 36 00 00
Address 0x20: 39 30 30 39 30 39 32 34 37 31 00 00 00 01 0b 07
Address 0x30: db ff ff ff 54 32 30 32 37 43 41 2d 34 32 46 42
Address 0x40: 23 23 23 00 01 43 4f 55 43 41 4c 44 42 41 41 52
Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 4b ff ff ff ff ff ff ff ff ff ff ff ff
ad0    3896 MB VRFCF14096DIHK1    VM4096MB 6862    Compact Flash
ad1    30533 MB UGB94ARF32H0S3-KC UNIGEN-478612-001127 Disk 1
usb0 (addr 1) EHCI root hub 0      Intel          uhub0
usb0 (addr 2) product 0x0020 32     vendor 0x8087  uhub1
DIMM 0    SGU04G72H1BB2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 1    SGU04G72H1BB2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 2    SGU04G72H1BB2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 3    SGU04G72H1BB2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
Routing Engine 1 REV 05    740-031116    9009097958    RE-S-1800x4
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-031116      S/N:              9009097958
Assembly ID:   0x09c0          Assembly Version:  01.05
Date:          02-06-2012      Assembly Flags:    0x00
Version:       REV 05          CLEI Code:        COUCALDBAA
ID: RE-S-1800x4              FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
Address 0x00: 54 32 30 32 37 43 41 2d 34 32 46 42 23 23 23 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 c0 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 33 31 31 31 36 00 00

```

```

Address 0x20: 39 30 30 39 30 39 37 39 35 38 00 00 00 06 02 07
Address 0x30: dc ff ff ff 54 32 30 32 37 43 41 2d 34 32 46 42
Address 0x40: 23 23 23 00 01 43 4f 55 43 41 4c 44 42 41 41 52
Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 4b ff ff ff ff ff ff ff ff ff ff ff ff
ad0   3896 MB  VRFCF14096DIHK1    VM4096MB 6145    Compact Flash
ad1   30533 MB UGB94ARF32H0S3-KC  UNIGEN-499551-000273 Disk 1

```

...

show chassis hardware (MX960 Router)

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Midplane      REV 01    710-013698   AA6082         MX960 Midplane
PIM           Rev 01    740-013110   000008         Power Inlet Module
PEM 2
PEM 3         Rev 01    740-013682   000038         PS 1.7kW; 200-240VAC in
Routing Engine 0 REV 00    740-015113   1000617944     RE-S-1300
CB 0          REV 05    710-013725   JK6947         MX960 Test SCB
FPC 4         REV 01    710-013305   JM7617         MX960 Test DPC
CPU
PIC 0
PIC 1         BUILTIN   BUILTIN       1x 10GE(LAN/WAN)
FPC 7         REV 01    710-013305   JL9634         10x 1GE
MX960 Test DPC
CPU
PIC 0         BUILTIN   BUILTIN       1x 10GE(LAN/WAN)
Xcvr 0        NON-JNPR   MYBG65I82C    XFP-10G-SR
PIC 1         BUILTIN   BUILTIN       10x 1GE
Xcvr 1        REV 01    740-011782   P7N0368        SFP-SX
Xcvr 4        REV 01    740-011782   P8J1W27        SFP-SX
Xcvr 6        REV 01    740-011782   P8J1VSD        SFP-SX
Xcvr 9        REV 01    740-011782   P8J1W25        SFP-SX
Fan Tray 0
Fan Tray 1

```

show chassis hardware (MX960 Router with Bidirectional Optics)

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Midplane      REV 03    710-013698   TR0234         MX960 Backplane
FPM Board     REV 03    710-014974   JA0878         Front Panel Display
PDM           Rev 03    740-013110   QCS11135028    Power Distribution Module
PEM 0         Rev 03    740-013682   QCS11154036    PS 1.7kW; 200-240VAC in
PEM 1         Rev 03    740-013682   QCS11154010    PS 1.7kW; 200-240VAC in
PEM 2         Rev 03    740-013682   QCS11154022    PS 1.7kW; 200-240VAC in
Routing Engine 0 REV 06    740-013063   1000691458     RE-S-2000
CB 0          REV 07    710-013385   KA2190         MX SCB
CB 1          REV 07    710-013385   KA0837         MX SCB
FPC 3         REV 02    750-018122   KB3890         DPCE 40x 1GE R
CPU
FPC 4         REV 01    750-018122   KB3889         DPCE 40x 1GE R
CPU           REV 06    710-013713   KB3976         DPC PMB
PIC 0         BUILTIN   BUILTIN       10x 1GE(LAN)
Xcvr 1        REV 01    740-020426   4910549        SFP-1000BASE-BX40-D
Xcvr 2        REV 01    740-020426   4910551        SFP-1000BASE-BX40-D

```

Xcvr 5	REV 01	740-021340	77E245N00006	SFP-1000BASE-BX10-U
Xcvr 6	REV 01	740-020425	4882821	SFP-1000BASE-BX40-U
Xcvr 8	REV 01	740-020425	4882820	SFP-1000BASE-BX40-U
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-020465	77E555N00894	SFP-1000BASE-BX10-D
Xcvr 1	REV 01	740-020465	75E467X00818	SFP-1000BASE-BX10-D
Xcvr 2	REV 01	740-020465	75E467X00573	SFP-1000BASE-BX10-D
Xcvr 3	REV 01	740-020465	4888227	SFP-1000BASE-BX10-D
Xcvr 4	REV 01	740-020465	4888241	SFP-1000BASE-BX10-D
Xcvr 5	REV 01	740-021340	77E245N00005	SFP-1000BASE-BX10-U
Xcvr 6	REV 01	740-021340	76E245X00487	SFP-1000BASE-BX10-U
Xcvr 7	REV 01	740-021341	5255889	SFP-1000BASE-BX10-U
Xcvr 8	REV 01	740-021341	5255887	SFP-1000BASE-BX10-U
Xcvr 9	REV 01	740-021340	77E245N00004	SFP-1000BASE-BX10-U
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-020424	5007582	SFP-1000BASE-BX10-D
Xcvr 1	REV 01	740-020424	4888187	SFP-1000BASE-BX10-D
Xcvr 2	REV 01	740-020424	4656500	SFP-1000BASE-BX10-D
Xcvr 5	REV 01	740-021341	5255886	SFP-1000BASE-BX10-U
Xcvr 7	REV 01	740-021340	77E245N00003	SFP-1000BASE-BX10-U
Xcvr 8	REV 01	740-021341	5255888	SFP-1000BASE-BX10-U
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-017726	74S184H30341	SFP-EX
Xcvr 1	REV 01	740-017726	4814061	SFP-EX
Xcvr 5	REV 01	740-017726	6ZS184H31108	SFP-EX
Xcvr 9	REV 01	740-021340	76E245X00486	SFP-1000BASE-BX10-U
Fan Tray 0				
Fan Tray 1	REV 03	740-014971	TP0850	Fan Tray

show chassis hardware (MX960 Router with Enhanced MX SCB)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1096805AFA	MX960
Midplane	REV 03	710-013698	TR0183	MX960 Backplane
Fan Extender	REV 02	710-018051	JY5227	Extended Cable Manager
FPM Board	REV 03	710-014974	JZ6876	Front Panel Display
PDM	Rev 03	740-013110	QCS11035023	Power Distribution Module
PEM 1	Rev 03	740-013682	QCS1109400L	PS 1.7kW; 200-240VAC in
PEM 2	Rev 03	740-013682	QCS11094015	PS 1.7kW; 200-240VAC in
PEM 3	Rev 03	740-013682	QCS11094012	PS 1.7kW; 200-240VAC in
Routing Engine 0	REV 06	740-013063	1000687969	RE-S-2000
Routing Engine 1	REV 06	740-013063	1000687955	RE-S-2000
CB 0	REV 11	750-031391	YZ6072	Enhanced MX SCB
CB 1	REV 11	750-031391	YZ6068	Enhanced MX SCB
CB 2	REV 11	750-031391	YZ6081	Enhanced MX SCB
FPC 0	REV 01	750-018122	KA5576	DPCE 40x 1GE R
CPU	REV 06	710-013713	KB3961	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	P9F18GF	SFP-SX
Xcvr 2	REV 01	740-011782	P9M0TL9	SFP-SX
Xcvr 7	REV 01	740-011782	P9P0XXH	SFP-SX
Xcvr 9	REV 01	740-011782	P9M0TN1	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	PAJ4UHC	SFP-SX
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	PFF2CD0	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3ZUT	SFP-SX
Xcvr 2	REV 01	740-011613	PFF2DDV	SFP-SX
Xcvr 5	REV 01	740-011613	P8E2SST	SFP-SX

Xcvr 9	REV 01	740-011782	PB8329N	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-026192	1U0201084503342	SFP-100BASE-BX10-U
Xcvr 1	REV 01	740-026193	1U1201084503313	SFP-100BASE-BX10-D
Xcvr 2	REV 01	740-011613	PAJ4Y5B	SFP-SX
Xcvr 6	REV 01	740-011782	P9M0U3M	SFP-SX
Xcvr 7	REV 01	740-011782	P9M0TLA	SFP-SX
FPC 1	REV 16	750-031089	YL0719	MPC Type 2 3D
CPU	REV 06	711-030884	YL1463	MPC PMB 2G
MIC 0	REV 07	750-028387	JR6500	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 01	740-014279	733019A00154	XFP-10G-LR
Xcvr 1	REV 02	740-014289	T09F55034	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 01	740-014279	913019B00791	XFP-10G-LR
Xcvr 1	REV 01	740-014289	98S803A90384	XFP-10G-SR
MIC 1	REV 24	750-028387	YJ3950	3D 4x 10GE XFP
PIC 2		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 02	740-014279	T10B36134	XFP-10G-LR
Xcvr 1	REV 01	740-014289	T07M86354	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	2x 10GE XFP
FPC 2	REV 08	710-014219	JY9654	DPCE 4x 10GE R
CPU	REV 06	710-013713	JZ6549	DPC PMB
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
PIC 1		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
PIC 2		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 03	740-011571	C931BK028	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
FPC 3	REV 10	750-024199	XJ6692	MX FPC Type 3
CPU	REV 03	710-022351	XF5182	DPC PMB
PIC 0	REV 17	750-009553	RJ2945	4x 0C-48 SONET
Xcvr 1	REV 01	740-011785	PCP3YLL	SFP-SR
Xcvr 3	REV 01	740-011785	PDSOMRY	SFP-SR
PIC 1	REV 32	750-003700	DP2113	1x 0C-192 12xMM VSR
FPC 5	REV 25	750-028467	YM8256	MPC 3D 16x 10GE
CPU	REV 10	711-029089	YL3029	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 1	REV 01	740-031980	AHNOX1Z	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
FPC 7	REV 02	750-031092	JR6658	MPC Type 1 3D Q
CPU	REV 01	711-030884	JZ9038	MPC PMB 2G
MIC 0	REV 08	750-028392	JZ8737	3D 20x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011782	PBE2C6Y	SFP-SX
Xcvr 2		NON-JNPR	U8105N8	SFP-SX
Xcvr 4	REV 01	740-011613	PFF18EF	SFP-SX
Xcvr 7	REV 01	740-011613	PFF2AM8	SFP-SX
Xcvr 8	REV 01	740-011613	PFF2CT6	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011782	PB82VHH	SFP-SX
Xcvr 1	REV 01	740-011613	PFF2CSW	SFP-SX
Xcvr 9	REV 01	740-011613	PFF2BY0	SFP-SX
QXM 0	REV 04	711-028408	JR6372	MPC QXM
FPC 8	REV 05	750-024387	JW9754	MX FPC Type 2
CPU	REV 03	710-022351	KF1651	DPC PMB
PIC 0	REV 08	750-014730	DM3664	4x 0C-3 1x 0C-12 SFP
Xcvr 0	REV 01	740-016065	81S290N00077	SFP-SR
Xcvr 1		NON-JNPR	2191844	SFP-SR
Xcvr 2	REV 01	740-011618	PD81EE5	SFP-IR

PIC 1	REV 08	750-014637	DM3671	4x OC-12-3 SFP
Xcvr 0	REV 01	740-011785	PCK3UNK	SFP-SR
Xcvr 3	REV 01	740-011785	PDSOMPZ	SFP-SR
FPC 10	REV 04	710-013699	JY4654	DPCE 40x 1GE R
CPU	REV 05	710-013713	JS9717	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 5	REV 01	740-011782	PAR1L72	SFP-SX
Xcvr 6	REV 01	740-011782	P8N1YQ4	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011782	P8Q2AVL	SFP-SX
Xcvr 5	REV 01	740-011782	PAR1L7B	SFP-SX
Xcvr 6	REV 01	740-011782	PAR1L2J	SFP-SX
Xcvr 8	REV 01	740-011782	P8N1YMY	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
Fan Tray 0	REV 03	740-014971	TP0567	Fan Tray
Fan Tray 1	REV 03	740-014971	TP0702	Fan Tray

show chassis hardware models (MX960 Router with Enhanced MX SCB)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 03	710-013698	TR0183	CHAS-BP-MX960-S
Fan Extender	REV 02	710-018051	JY5227	ECM-MX960
FPM Board	REV 03	710-014974	JZ6876	CRAFT-MX960-S
Routing Engine 0	REV 06	740-013063	1000687969	RE-S-2000-4096-S
Routing Engine 1	REV 06	740-013063	1000687955	RE-S-2000-4096-S
CB 0	REV 11	750-031391	YZ6072	SCBE-MX-S
CB 1	REV 11	750-031391	YZ6068	SCBE-MX-S
CB 2	REV 11	750-031391	YZ6081	SCBE-MX-S
FPC 0	REV 01	750-018122	KA5576	DPCE-R-40GE-SFP
FPC 1	REV 16	750-031089	YL0719	MX-MPC2-3D
MIC 0	REV 07	750-028387	JR6500	MIC-3D-4XGE-XFP
MIC 1	REV 24	750-028387	YJ3950	MIC-3D-4XGE-XFP
FPC 2	REV 08	710-014219	JY9654	DPCE-R-4XGE-XFP
FPC 3	REV 10	750-024199	XJ6692	MX-FPC3
PIC 0	REV 17	750-009553	RJ2945	PC-40C48-SON-SFP
PIC 1	REV 32	750-003700	DP2113	PC-10C192-SON-VSR
FPC 5	REV 25	750-028467	YM8256	MPC-3D-16XGE-SFP
FPC 7	REV 02	750-031092	JR6658	MX-MPC1-3D-Q
MIC 0	REV 08	750-028392	JZ8737	MIC-3D-20GE-SFP
FPC 8	REV 05	750-024387	JW9754	MX-FPC2
PIC 0	REV 08	750-014730	DM3664	PB-40C3-10C12-SON2-SFP
PIC 1	REV 08	750-014637	DM3671	PB-40C3-40C12-SON-SFP
FPC 10	REV 04	710-013699	JY4654	DPC-R-40GE-SFP
Fan Tray 0	REV 03	740-014971	TP0567	FFANTRAY-MX960-S
Fan Tray 1	REV 03	740-014971	TP0702	FFANTRAY-MX960-S

show chassis hardware (MX960 Router with MPC5EQ)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1214852AFA	MX960
Midplane	REV 01	710-030012	ACAX3674	MX960 Backplane
FPM Board	REV 03	710-014974	CAAZ9326	Front Panel Display
PDM	Rev 03	740-013110	QCS17025017	Power Distribution Module
PEM 0	Rev 10	740-027760	QCS1702N062	PS 4.1kW; 200-240V AC
in				
PEM 1	Rev 04	740-027760	QCS1422N02C	PS 4.1kW; 200-240V AC

in				
PEM 2	Rev 09	740-027760	QCS1614N01X	PS 4.1kW; 200-240V AC
in				
Routing Engine 0	REV 08	740-031116	9009131803	RE-S-1800x4
Routing Engine 1	REV 08	740-031116	9009124913	RE-S-1800x4
CB 0	REV 18	750-031391	CABF0579	Enhanced MX SCB
CB 1	REV 16	750-031391	CAAZ2471	Enhanced MX SCB
CB 2	REV 16	750-031391	CAAW9595	Enhanced MX SCB
FPC 0	REV 18	750-046005	CACE6574	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8908	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQA0DYT	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOMS7	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03Z	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	ANA0NAJ	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOMRQ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-049775	J13K72993	CFP2-100G-LR4
FPC 1	REV 11	750-045372	CABK8154	MPCE Type 3 3D
CPU	REV 08	711-035209	CABE7370	HMPC PMB 2G
MIC 0	REV 07	750-033307	CABD5255	10X10GE SFPP
PIC 0		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-021308	AQ50319	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ5035V	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502XJ	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43HHR	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQ502YA	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQ502EU	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQ502HR	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ502A6	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQ43H8M	SFP+-10G-SR
MIC 1	REV 14	750-033196	CAAP1398	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC064	CFP-100G-SR10
FPC 3	REV 35	750-028467	CAAT9156	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAV4645	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43HZ1	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43HZC	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ43HD2	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502HN	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43HGF	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501RZ	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ5029V	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ501X9	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ502ZN	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43H86	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502ZY	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502PZ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ503E6	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502XN	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11F00213	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ50336	SFP+-10G-SR
FPC 4	REV 18	750-046005	CACE6568	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8900	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN

Xcvr 0	REV 01	740-021308	AQA095A	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0M1E	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000F	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQG0LYC	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0LYB	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-048813	XD32FE00Z	CFP2-100G-SR10
FPC 5	REV 18	750-046005	CACE6577	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8902	RMPD PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQG0MXE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0LVY	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03T	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQG0LW1	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0LW3	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000J	CFP2-100G-SR10
FPC 7	REV 09	750-037355	CAAF0937	MPC4E 3D Q 2CGE+8XGE
CPU	REV 08	711-035209	CAAD8004	HMPD PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	ANA0MM3	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X000C163	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	AQG0MS6	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0MRX	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQG0M6Y	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQG0LZM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00499	CFP-100G-SR10
FPC 8	REV 39	750-045715	CACD1903	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACD1815	RMPD PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QC480289	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QC480274	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130190	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130197	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130180	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130199	QSFP+-40G-SR4
WAN MEZZ	REV 09	750-049136	CABN0415	MPC5E 24XGE OTN Mezz
FPC 9	REV 05	750-044444	CAAY9801	MPCE Type 2 3D P
CPU	REV 04	711-038484	CAAW3673	MPCE PMB 2G
MIC 0	REV 28	750-028387	CAAX1071	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T12L92342	XFP-10G-SR
Xcvr 1		NON-JNPR	T12L92303	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	CC07BK02X	XFP-10G-SR
QXM 0	REV 06	711-028408	CAAW4883	MPC QXM
QXM 1	REV 06	711-028408	CAAW4603	MPC QXM
FPC 10	REV 21.0.11	750-045715	CAAY3541	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 07	711-045719	CAAW7426	RMPD PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP
Xcvr 0	REV 01	740-031980	AHK01AP	SFP+-10G-SR

Xcvr 1	REV 01	740-021308	AQ502ZU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AP41BLS	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQA08YA	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQA0K26	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQA06S3	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQA06AS	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQA053N	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQA0E97	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQA0GS4	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQA0JVA	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP
Xcvr 0	REV 01	740-021308	AQA057A	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	ANA0MLS	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQA093A	SFP+-10G-SR
Xcvr 3	REV 01	740-021309	943153A00075	SFP+-10G-LR
Xcvr 4	REV 01	740-021308	AQA077B	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQA0JSC	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQA0735	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ5028N	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AP40VN5	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQA0K0J	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQA07AP	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQA08YB	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 07	750-045717	CAAX3123	MPC5E 24XGE Mezz
FPC 11	REV 17	750-037355	CAAT3986	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAR3972	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	AQA0DSE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501Y3	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ501XU	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ5036Y	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00247	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	ALQ1DKF	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ403YA	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AP40TY0	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ14G0	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00095	CFP-100G-SR10
Fan Tray 0	REV 08	740-031521	ACAF4219	Enhanced Fan Tray
Fan Tray 1	REV 08	740-031521	ACAF4225	Enhanced Fan Tray

show chassis hardware detail (MX960 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis				MX960
Midplane	REV 01	710-013698	AA6082	MX960 Midplane
PIM	Rev 01	740-013110	000008	Power Inlet Module
PEM 2				
PEM 3	Rev 01	740-013682	000038	PS 1.7kW; 200-240VAC in
Routing Engine 0	REV 00	740-015113	1000617944	RE-S-1300
ad0	245 MB	SanDisk SDCFB-256	111419E1805T1141	Compact Flash
ad2	38154 MB	FUJITSU MHT2040BH	NR0WT5925N77	Hard Disk
CB 0	REV 05	710-013725	JK6947	MX960 Test SCB
FPC 4	REV 01	710-013305	JM7617	MX960 Test DPC
CPU				

PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
PIC 1		BUILTIN	BUILTIN	10x 1GE
FPC 7	REV 01	710-013305	JL9634	MX960 Test DPC
CPU				
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0		NON-JNPR	MYBG65I82C	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	10x 1GE
Xcvr 1	REV 01	740-011782	P7N0368	SFP-SX
Xcvr 4	REV 01	740-011782	P8J1W27	SFP-SX
Xcvr 6	REV 01	740-011782	P8J1VSD	SFP-SX
Xcvr 9	REV 01	740-011782	P8J1W25	SFP-SX
Fan Tray 0				
Fan Tray 1				

show chassis hardware detail (MX960 Router with MPC5EQ)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1214852AFA	MX960
Midplane	REV 01	710-030012	ACAX3674	MX960 Backplane
FPM Board	REV 03	710-014974	CAAZ9326	Front Panel Display
PDM	Rev 03	740-013110	QCS17025017	Power Distribution Module
PEM 0	Rev 10	740-027760	QCS1702N062	PS 4.1kW; 200-240V AC
in				
PEM 1	Rev 04	740-027760	QCS1422N02C	PS 4.1kW; 200-240V AC
in				
PEM 2	Rev 09	740-027760	QCS1614N01X	PS 4.1kW; 200-240V AC
in				
Routing Engine 0	REV 08	740-031116	9009131803	RE-S-1800x4
ad0 3831 MB		UGB30SFA4000T1	SFA4000T1 000016CD	Compact Flash
ad1 30533 MB		UGB94BPH32H0S1-KCI	11000061346	Disk 1
usb0 (addr 1)		EHCI root hub 0	Intel	uhub0
usb0 (addr 2)		product 0x0020 32	vendor 0x8087	uhub1
DIMM 0		VL31B5263F-F8SD DIE	REV-0 PCB REV-0	MFR ID-ce80
DIMM 1		VL31B5263F-F8SD DIE	REV-0 PCB REV-0	MFR ID-ce80
DIMM 2		VL31B5263F-F8SD DIE	REV-0 PCB REV-0	MFR ID-ce80
DIMM 3		VL31B5263F-F8SD DIE	REV-0 PCB REV-0	MFR ID-ce80
Routing Engine 1	REV 08	740-031116	9009124913	RE-S-1800x4
ad0 3831 MB		UGB30SFA4000T1	SFA4000T1 0000106D	Compact Flash
ad1 30533 MB		UGB94BPH32H0S1-KCI	11000052402	Disk 1
CB 0	REV 18	750-031391	CABF0579	Enhanced MX SCB
CB 1	REV 16	750-031391	CAAZ2471	Enhanced MX SCB
CB 2	REV 16	750-031391	CAAW9595	Enhanced MX SCB
FPC 0	REV 18	750-046005	CACE6574	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8908	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQA0DYT	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0MS7	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03Z	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	ANA0NAJ	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0MRQ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-049775	J13K72993	CFP2-100G-LR4
FPC 1	REV 11	750-045372	CABK8154	MPCE Type 3 3D
CPU	REV 08	711-035209	CABE7370	HMPC PMB 2G
MIC 0	REV 07	750-033307	CABD5255	10X10GE SFPP
PIC 0		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-021308	AQ50319	SFP+-10G-SR

Xcvr 1	REV 01	740-021308	AQ5035V	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502XJ	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43HHR	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQ502YA	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQ502EU	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQ502HR	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ502A6	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQ43H8M	SFP+-10G-SR
MIC 1	REV 14	750-033196	CAAP1398	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC064	CFP2-100G-SR10
FPC 3	REV 35	750-028467	CAAT9156	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAV4645	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43HZ1	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43HZC	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ43HD2	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502HN	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43HGF	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501RZ	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ5029V	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ501X9	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ502ZN	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43H86	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502ZY	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502PZ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ503E6	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502XN	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11F00213	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ50336	SFP+-10G-SR
FPC 4	REV 18	750-046005	CACE6568	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8900	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQA095A	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0M1E	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000F	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQG0LYC	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0LYB	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-048813	XD32FE00Z	CFP2-100G-SR10
FPC 5	REV 18	750-046005	CACE6577	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8902	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQG0MXE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0LVY	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03T	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQG0LW1	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0LW3	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000J	CFP2-100G-SR10
FPC 7	REV 09	750-037355	CAAF0937	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAD8004	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	ANA0MM3	SFP+-10G-SR

PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X000C163	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	AQGOMS6	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOMRX	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQGOM6Y	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQGOLZM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00499	CFP-100G-SR10
FPC 8	REV 39	750-045715	CACD1903	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACD1815	RMPD PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QC480289	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QC480274	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130190	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130197	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130180	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130199	QSFP+-40G-SR4
WAN MEZZ	REV 09	750-049136	CABN0415	MPC5E 24XGE OTN Mezz
FPC 9	REV 05	750-044444	CAAY9801	MPCE Type 2 3D P
CPU	REV 04	711-038484	CAAW3673	MPCE PMB 2G
MIC 0	REV 28	750-028387	CAAX1071	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T12L92342	XFP-10G-SR
Xcvr 1		NON-JNPR	T12L92303	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	CC07BK02X	XFP-10G-SR
QXM 0	REV 06	711-028408	CAAW4883	MPC QXM
QXM 1	REV 06	711-028408	CAAW4603	MPC QXM
FPC 10	REV 21.0.11	750-045715	CAAY3541	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 07	711-045719	CAAW7426	RMPD PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP
Xcvr 0	REV 01	740-031980	AHK01AP	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502ZU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AP41BLS	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQA08YA	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQA0K26	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQA06S3	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQA06AS	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQA053N	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQA0E97	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQA0GS4	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQA0JVA	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP
Xcvr 0	REV 01	740-021308	AQA057A	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	ANAOMLS	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQA093A	SFP+-10G-SR
Xcvr 3	REV 01	740-021309	943153A00075	SFP+-10G-LR
Xcvr 4	REV 01	740-021308	AQA077B	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQA0JSC	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQA0735	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ5028N	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AP40VN5	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQA0K0J	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQA07AP	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQA08YB	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP

WAN MEZZ	REV 07	750-045717	CAAX3123	MPC5E 24XGE Mezz
FPC 11	REV 17	750-037355	CAAT3986	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAR3972	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	AQA0DSE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501Y3	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ501XU	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ5036Y	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00247	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	ALQ1DKF	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ403YA	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AP40TY0	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ14G0	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00095	CFP-100G-SR10
Fan Tray 0	REV 08	740-031521	ACAF4219	Enhanced Fan Tray
Fan Tray 1	REV 08	740-031521	ACAF4225	Enhanced Fan Tray

show chassis hardware extensive (MX960 Router with MPC5EQ)

```

user@host> show chassis hardware extensive
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Jedec Code:   0x7fb0          EEPROM Version: 0x02
S/N:          JN1214852AFA
Assembly ID:  0x0512          Assembly Version: 00.00
Date:         00-00-0000      Assembly Flags:  0x00
ID: MX960
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 12 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 4a 4e 31 32 31 34 38 35 32 41 46 41 00 00 00 00
Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane      REV 01  710-030012  ACAX3674      MX960 Backplane
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          710-030012      S/N:          ACAX3674
Assembly ID:  0x01df          Assembly Version: 01.01
Date:         01-19-2013      Assembly Flags: 0x00
Version:      REV 01          CLEI Code:    COM8T00CRB
ID: MX960 Backplane          FRU Model Number: CHAS-BP-MX960-S
Board Information Record:
Address 0x00: ad 01 08 00 54 e0 32 bc 68 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 01 df 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 31 30 2d 30 33 30 30 31 32 00 00
Address 0x20: 53 2f 4e 20 41 43 41 58 33 36 37 34 00 13 01 07
Address 0x30: dd ff ff ff ad 01 08 00 54 e0 32 bc 68 00 ff ff
Address 0x40: ff ff ff ff 01 43 4f 4d 38 54 30 30 43 52 42 43
Address 0x50: 48 41 53 2d 42 50 2d 4d 58 39 36 30 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 42 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff aa ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board      REV 03  710-014974  CAAZ9326      Front Panel Display

```

```

Jedec Code: 0x7fb0      EEPROM Version: 0x01
P/N: 710-014974      S/N: CAAZ9326
Assembly ID: 0x01e6    Assembly Version: 01.03
Date: 12-31-2012      Assembly Flags: 0x00
Version: REV 03
ID: Front Panel Display      FRU Model Number: CRAFT-MX960-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 01 e6 01 03 52 45 56 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 31 30 2d 30 31 34 39 37 34 00 00
  Address 0x20: 53 2f 4e 20 43 41 41 5a 39 33 32 36 00 1f 0c 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 43
  Address 0x50: 52 41 46 54 2d 4d 58 39 36 30 2d 53 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PDM      Rev 03 740-013110 QCS17025017      Power Distribution Module
Jedec Code: 0x7fb0      EEPROM Version: 0x01
P/N: 740-013110      S/N: QCS17025017
Assembly ID: 0x0416    Assembly Version: 01.03
Date: 01-10-2013      Assembly Flags: 0x00
Version: Rev 03
ID: Power Distribution Module
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 16 01 03 52 65 76 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 31 33 31 31 30 00 00
  Address 0x20: 51 43 53 31 37 30 32 35 30 31 37 00 00 0a 01 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 0      Rev 10 740-027760 QCS1702N062      PS 4.1kW; 200-240V AC
in
Jedec Code: 0x7fb0      EEPROM Version: 0x01
P/N: 740-027760      S/N: QCS1702N062
Assembly ID: 0x0430    Assembly Version: 01.10
Date: 01-15-2013      Assembly Flags: 0x00
Version: Rev 10
ID: PS 4.1kW; 200-240V AC in      FRU Model Number: PWR-MX960-4100-AC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 30 01 0a 52 65 76 20 31 30 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 32 37 37 36 30 00 00
  Address 0x20: 51 43 53 31 37 30 32 4e 30 36 32 00 00 0f 01 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
  Address 0x50: 57 52 2d 4d 58 39 36 30 2d 34 31 30 30 2d 41 43
  Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 1      Rev 04 740-027760 QCS1422N02C      PS 4.1kW; 200-240V AC
in
Jedec Code: 0x7fb0      EEPROM Version: 0x01
P/N: 740-027760      S/N: QCS1422N02C
Assembly ID: 0x0430    Assembly Version: 01.04
Date: 06-04-2010      Assembly Flags: 0x00
Version: Rev 04

```

```

ID: PS 4.1kW; 200-240V AC in    FRU Model Number: PWR-MX960-4100-AC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 30 01 04 52 65 76 20 30 34 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 32 37 37 36 30 00 00
  Address 0x20: 51 43 53 31 34 32 32 4e 30 32 43 00 00 04 06 07
  Address 0x30: da ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
  Address 0x50: 57 52 2d 4d 58 39 36 30 2d 34 31 30 30 2d 41 43
  Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 2          Rev 09    740-027760    QCS1614N01X    PS 4.1kW; 200-240V AC
in
  Jedec Code: 0x7fb0          EEPROM Version: 0x01
  P/N: 740-027760          S/N: QCS1614N01X
Assembly ID: 0x0430          Assembly Version: 01.09
  Date: 04-07-2012          Assembly Flags: 0x00
  Version: Rev 09
ID: PS 4.1kW; 200-240V AC in    FRU Model Number: PWR-MX960-4100-AC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 30 01 09 52 65 76 20 30 39 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 32 37 37 36 30 00 00
  Address 0x20: 51 43 53 31 36 31 34 4e 30 31 58 00 00 07 04 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
  Address 0x50: 57 52 2d 4d 58 39 36 30 2d 34 31 30 30 2d 41 43
  Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Routing Engine 0 REV 08    740-031116    9009131803    RE-S-1800x4
  Jedec Code: 0x7fb0          EEPROM Version: 0x02
  P/N: 740-031116          S/N: 9009131803
Assembly ID: 0x09c0          Assembly Version: 01.08
  Date: 03-04-2013          Assembly Flags: 0x00
  Version: REV 08          CLEI Code: COUCASKBAA
ID: RE-S-1800x4          FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
  Address 0x00: 54 32 30 32 37 44 42 2d 34 34 47 42 23 42 23 00
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 09 c0 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 33 31 31 31 36 00 00
  Address 0x20: 39 30 30 39 31 33 31 38 30 33 00 00 00 04 03 07
  Address 0x30: dd ff ff ff 54 32 30 32 37 44 42 2d 34 34 47 42
  Address 0x40: 23 42 23 00 01 43 4f 55 43 41 53 4b 42 41 41 52
  Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 59 ff ff ff ff ff ff ff ff ff ff ff ff
ad0    3831 MB    UGB30SFA4000T1    SFA4000T1 000016CD Compact Flash
ad1    30533 MB   UGB94BPH32H0S1-KCI    11000061346    Disk 1
usb0 (addr 1) EHCI root hub 0    Intel    uhub0
usb0 (addr 2) product 0x0020 32    vendor 0x8087    uhub1
DIMM 0    VL31B5263F-F8SD DIE REV-0 PCB REV-0    MFR ID-ce80
DIMM 1    VL31B5263F-F8SD DIE REV-0 PCB REV-0    MFR ID-ce80
DIMM 2    VL31B5263F-F8SD DIE REV-0 PCB REV-0    MFR ID-ce80
DIMM 3    VL31B5263F-F8SD DIE REV-0 PCB REV-0    MFR ID-ce80
Routing Engine 1 REV 08    740-031116    9009124913    RE-S-1800x4
  Jedec Code: 0x7fb0          EEPROM Version: 0x02
  P/N: 740-031116          S/N: 9009124913
Assembly ID: 0x09c0          Assembly Version: 01.08

```



```

Date:          01-09-2013      Assembly Flags:    0x00
Version:       REV 08         CLEI Code:       COUCASKBAA
ID: RE-S-1800x4      FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
Address 0x00: 54 32 30 32 37 44 42 2d 34 34 47 42 23 42 23 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 c0 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 33 31 31 31 36 00 00
Address 0x20: 39 30 30 39 31 32 34 39 31 33 00 00 00 09 01 07
Address 0x30: dd ff ff ff 54 32 30 32 37 44 42 2d 34 34 47 42
Address 0x40: 23 42 23 00 01 43 4f 55 43 41 53 4b 42 41 41 52
Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 59 ff ff ff ff ff ff ff ff ff ff ff ff
ad0   3831 MB   UGB30SFA4000T1      SFA4000T1 0000106D Compact Flash
ad1   30533 MB  UGB94BPH32H0S1-KCI  11000052402      Disk 1
CB 0          REV 18   750-031391  CABF0579      Enhanced MX SCB
Jedec Code:   0x7fb0      EEPROM Version: 0x02
P/N:          750-031391  S/N:          CABF0579
Assembly ID:  0x09b0      Assembly Version: 01.18
Date:         04-15-2013  Assembly Flags: 0x00
Version:      REV 18      CLEI Code:    COUCASRBAA
ID: Enhanced MX SCB      FRU Model Number: SCBE-MX-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 b0 01 12 52 45 56 20 31 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 31 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 42 46 30 35 37 39 00 0f 04 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 43 41 53 52 42 41 41 53
Address 0x50: 43 42 45 2d 4d 58 2d 53 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 43 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 7d ff ff ff ff ff ff ff ff ff ff ff ff
CB 1          REV 16   750-031391  CAAZ2471      Enhanced MX SCB
Jedec Code:   0x7fb0      EEPROM Version: 0x02
P/N:          750-031391  S/N:          CAAZ2471
Assembly ID:  0x09b0      Assembly Version: 01.16
Date:         03-09-2013  Assembly Flags: 0x00
Version:      REV 16      CLEI Code:    COUCARCBAB
ID: Enhanced MX SCB      FRU Model Number: SCBE-MX-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 b0 01 10 52 45 56 20 31 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 31 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 41 5a 32 34 37 31 00 09 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 43 41 52 43 42 41 42 53
Address 0x50: 43 42 45 2d 4d 58 2d 53 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 6d ff ff ff ff ff ff ff ff ff ff ff ff
CB 2          REV 16   750-031391  CAAW9595      Enhanced MX SCB
Jedec Code:   0x7fb0      EEPROM Version: 0x02
P/N:          750-031391  S/N:          CAAW9595
Assembly ID:  0x09b0      Assembly Version: 01.16
Date:         02-01-2013  Assembly Flags: 0x00
Version:      REV 16      CLEI Code:    COUCARCBAB
ID: Enhanced MX SCB      FRU Model Number: SCBE-MX-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```

```

I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 b0 01 10 52 45 56 20 31 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 31 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 41 57 39 35 39 35 00 01 02 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 43 41 52 43 42 41 42 53
Address 0x50: 43 42 45 2d 4d 58 2d 53 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 6d ff ff ff ff ff ff ff ff ff ff ff ff
FPC 0          REV 18    750-046005    CACE6574          MPC5E 3D Q 2CGE+4XGE
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-046005      S/N:             CACE6574
Assembly ID:   0x0b8c          Assembly Version: 01.18
Date:          11-20-2013      Assembly Flags:   0x00
Version:       REV 18          CLEI Code:        PROTOXCLEI
ID: MPC5E 3D Q 2CGE+4XGE      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 8c 01 12 52 45 56 20 31 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 36 30 30 35 00 00
Address 0x20: 53 2f 4e 20 43 41 43 45 36 35 37 34 00 14 0b 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 09    711-045719    CACG8908          RMPC PMB
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           711-045719      S/N:             CACG8908
Assembly ID:   0x0b85          Assembly Version: 01.09
Date:          11-13-2013      Assembly Flags:   0x00
Version:       REV 09
ID: RMPC PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 85 01 09 52 45 56 20 30 39 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 35 37 31 39 00 00
Address 0x20: 53 2f 4e 20 43 41 43 47 38 39 30 38 00 0d 0b 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0          BUILTIN    BUILTIN          2X10GE SFPP OTN
Jedec Code:    0x0000          EEPROM Version:    0x00
P/N:           BUILTIN        S/N:             BUILTIN
Assembly ID:   0x0a90          Assembly Version: 00.00
Date:          00-00-0000      Assembly Flags:   0x00
ID: 2X10GE SFPP OTN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 90 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

```

```

Address 0x70: 00 00 00 00 c0 02 ae dc 00 00 00 00 0a 6e 00 00
Xcvr 0      REV 01  740-021308  AQA0DYT      SFP+-10G-SR
  Xcvr 1      REV 01  740-021308  AQGOMS7      SFP+-10G-SR
    PIC 1      BUILTIN    BUILTIN    1X100GE CFP2 OTN
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:        BUILTIN      S/N:        BUILTIN
Assembly ID: 0x0a6e      Assembly Version: 00.00
Date:       00-00-0000    Assembly Flags: 0x00
ID: 1X100GE CFP2 OTN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 6e 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 03 f3 8c 31 5c e7 80 00 00 00 02
  Xcvr 0      REV 01  740-046563  XD16FC03Z    CFP2-100G-SR10
    PIC 2      BUILTIN    BUILTIN    2X10GE SFPP OTN
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:        BUILTIN      S/N:        BUILTIN
Assembly ID: 0x0a90      Assembly Version: 00.00
Date:       00-00-0000    Assembly Flags: 0x00
ID: 2X10GE SFPP OTN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 90 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 03 f5 6c 31 5c db 40 00 00 00 02
  Xcvr 0      REV 01  740-021308  ANA0NAJ      SFP+-10G-SR
  Xcvr 1      REV 01  740-021308  AQGOMRQ      SFP+-10G-SR
    PIC 3      BUILTIN    BUILTIN    1X100GE CFP2 OTN
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:        BUILTIN      S/N:        BUILTIN
Assembly ID: 0x0a6e      Assembly Version: 00.00
Date:       00-00-0000    Assembly Flags: 0x00
ID: 1X100GE CFP2 OTN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 6e 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 03 ed ec 31 5c e2 e8 00 00 00 02
Xcvr 0      REV 01  740-049775  J13K72993    CFP2-100G-LR4
FPC 1      REV 11  750-045372  CABK8154      MPCE Type 3 3D
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:       750-045372    S/N:         CABK8154

```

```

Assembly ID: 0x09db          Assembly Version: 04.11
Date:          05-18-2013    Assembly Flags: 0x00
Version:       REV 11        CLEI Code:      COUIBBNBAA
ID: MPCE Type 3 3D          FRU Model Number: MX-MPC3E-3D
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 db 04 0b 52 45 56 20 31 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 35 33 37 32 00 00
Address 0x20: 53 2f 4e 20 43 41 42 4b 38 31 35 34 00 12 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 49 42 42 4e 42 41 41 4d
Address 0x50: 58 2d 4d 50 43 33 45 2d 33 44 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 44 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff cf ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 08      711-035209    CABE7370          HMPC PMB 2G
Jedec Code: 0x7fb0      EEPROM Version: 0x01
P/N:         711-035209  S/N:         CABE7370
Assembly ID: 0x0b04      Assembly Version: 01.08
Date:        05-08-2013  Assembly Flags: 0x00
Version:     REV 08
ID: HMPC PMB 2G
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0b 04 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 35 32 30 39 00 00
Address 0x20: 53 2f 4e 20 43 41 42 45 37 33 37 30 00 08 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
MIC 0          REV 07      750-033307    CABD5255          10X10GE SFPP
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:         750-033307  S/N:         CABD5255
Assembly ID: 0x0a2a      Assembly Version: 02.07
Date:        04-25-2013  Assembly Flags: 0x00
Version:     REV 07        CLEI Code:      COUIBBJBAA
ID: 10X10GE SFPP          FRU Model Number: MIC3-3D-10XGE-SFPP
Board Information Record:
Address 0x00: 34 01 03 03 05 ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0a 2a 02 07 52 45 56 20 30 37 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 33 33 30 37 00 00
Address 0x20: 53 2f 4e 20 43 41 42 44 35 32 35 35 00 19 04 07
Address 0x30: dd ff ff ff 34 01 03 03 05 ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 49 42 42 4a 42 41 41 4d
Address 0x50: 49 43 33 2d 33 44 2d 31 30 58 47 45 2d 53 46 50
Address 0x60: 50 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 82 c0 03 f0 bc 57 79 83 80 00 00 00 02
PIC 0          BUILTIN      BUILTIN          10X10GE SFPP
Xcvr 0      REV 01      740-021308    AQ50319          SFP+-10G-SR
Xcvr 1      REV 01      740-021308    AQ5035V          SFP+-10G-SR
Xcvr 2      REV 01      740-021308    AQ502XJ          SFP+-10G-SR
Xcvr 3      REV 01      740-021308    AQ43HHR          SFP+-10G-SR
Xcvr 4      REV 01      740-021308    AQ502YA          SFP+-10G-SR
Xcvr 5      REV 01      740-021308    AQ502EU          SFP+-10G-SR
Xcvr 6      REV 01      740-021308    AQ502HR          SFP+-10G-SR
Xcvr 7      REV 01      740-021308    AQ502A6          SFP+-10G-SR
Xcvr 8      REV 01      740-021308    AQ43H8M          SFP+-10G-SR

```

```

MIC 1          REV 14    750-033196    CAAP1398          1X100GE CXP
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-033196      S/N:          CAAP1398
Assembly ID:   0x0a29          Assembly Version: 03.14
Date:          10-27-2012      Assembly Flags: 0x00
Version:       REV 14          CLEI Code:     COUIBBKBAA
ID: 1X100GE CXP                FRU Model Number: MIC3-3D-1X100GE-CXP

Board Information Record:
Address 0x00: 34 01 07 07 08 ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0a 29 03 0e 52 45 56 20 31 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 33 31 39 36 00 00
Address 0x20: 53 2f 4e 20 43 41 41 50 31 33 39 38 00 1b 0a 07
Address 0x30: dc ff ff ff 34 01 07 07 08 ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 49 42 42 4b 42 41 41 4d
Address 0x50: 49 43 33 2d 33 44 2d 31 58 31 30 30 47 45 2d 43
Address 0x60: 58 50 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 96 c0 03 ef cc 57 79 85 08 00 00 00 02

PIC 2          BUILTIN      BUILTIN          1X100GE CXP
Xcvr 0         REV 01      740-046563    XD16FC064          CFP2-100G-SR10
FPC 3          REV 35      750-028467    CAAT9156          MPC 3D 16x 10GE
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           750-028467      S/N:          CAAT9156
Assembly ID:   0x0997          Assembly Version: 01.35
Date:          12-17-2012      Assembly Flags: 0x00
Version:       REV 35
ID: MPC 3D 16x 10GE            FRU Model Number: MPC-3D-16XGE-SFPP

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 09 97 01 23 52 45 56 20 33 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 32 38 34 36 37 00 00
Address 0x20: 53 2f 4e 20 43 41 41 54 39 31 35 36 00 11 0c 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 4d
Address 0x50: 50 43 2d 33 44 2d 31 36 58 47 45 2d 53 46 50 50
Address 0x60: 00 00 00 00 00 00 00 00 ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

CPU           REV 11      711-029089    CAAV4645          AMPC PMB
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           711-029089      S/N:          CAAV4645
Assembly ID:   0x0998          Assembly Version: 01.11
Date:          12-13-2012      Assembly Flags: 0x00
Version:       REV 11
ID: AMPC PMB

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 09 98 01 0b 52 45 56 20 31 31 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 32 39 30 38 39 00 00
Address 0x20: 53 2f 4e 20 43 41 41 56 34 36 34 35 00 0d 0c 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00

PIC 0          BUILTIN      BUILTIN          4x 10GE(LAN) SFP+
Jedec Code:    0x0000          EEPROM Version:    0x00
P/N:           BUILTIN          S/N:          BUILTIN
Assembly ID:   0x02fe          Assembly Version: 00.00
Date:          00-00-0000      Assembly Flags: 0x00

```

```

ID: 4x 10GE(LAN) SFP+
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 02 fe 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 6b 94 00 00 00 00 02 fe 00 00
Xcvr 0      REV 01  740-021308  AQ43HZ1      SFP+-10G-SR
Xcvr 1      REV 01  740-021308  AQ43HZC      SFP+-10G-SR
Xcvr 2      REV 01  740-021308  AQ43HD2      SFP+-10G-SR
Xcvr 3      REV 01  740-021308  AQ502HN      SFP+-10G-SR
PIC 1      BUILTIN  BUILTIN      4x 10GE(LAN) SFP+
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:      BUILTIN      S/N:      BUILTIN
Assembly ID: 0x02fe      Assembly Version: 00.00
Date:      00-00-0000      Assembly Flags: 0x00
ID: 4x 10GE(LAN) SFP+
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 02 fe 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 ac 0c 00 00 00 00 02 fe 00 00
Xcvr 0      REV 01  740-021308  AQ43HGF      SFP+-10G-SR
Xcvr 1      REV 01  740-021308  AQ501RZ      SFP+-10G-SR
Xcvr 2      REV 01  740-021308  AQ5029V      SFP+-10G-SR
Xcvr 3      REV 01  740-021308  AQ501X9      SFP+-10G-SR
PIC 2      BUILTIN  BUILTIN      4x 10GE(LAN) SFP+
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:      BUILTIN      S/N:      BUILTIN
Assembly ID: 0x02fe      Assembly Version: 00.00
Date:      00-00-0000      Assembly Flags: 0x00
.....

```

show chassis hardware models (MX960 Router with MPC5EQ)

```

user@host> show chassis hardware models
Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Midplane      REV 01   710-030012   ACAX3674      CHAS-BP-MX960-S
FPM Board     REV 03   710-014974   CAAZ9326      CRAFT-MX960-S
PEM 0         Rev 10   740-027760   QCS1702N062   PWR-MX960-4100-AC-S
PEM 1         Rev 04   740-027760   QCS1422N02C   PWR-MX960-4100-AC-S
PEM 2         Rev 09   740-027760   QCS1614N01X   PWR-MX960-4100-AC-S
Routing Engine 0 REV 08   740-031116   9009131803    RE-S-1800X4-16G-S
Routing Engine 1 REV 08   740-031116   9009124913    RE-S-1800X4-16G-S
CB 0          REV 18   750-031391   CABF0579      SCBE-MX-S
CB 1          REV 16   750-031391   CAAZ2471      SCBE-MX-S
CB 2          REV 16   750-031391   CAAW9595      SCBE-MX-S
FPC 0         REV 18   750-046005   CACE6574      PROTO-ASSEMBLY
FPC 1         REV 11   750-045372   CABK8154      MX-MPC3E-3D

```

MIC 0	REV 07	750-033307	CABD5255	MIC3-3D-10XGE-SFPP
MIC 1	REV 14	750-033196	CAAP1398	MIC3-3D-1X100GE-CXP
FPC 3	REV 35	750-028467	CAAT9156	MPC-3D-16XGE-SFPP
FPC 4	REV 18	750-046005	CACE6568	PROTO-ASSEMBLY
FPC 5	REV 18	750-046005	CACE6577	PROTO-ASSEMBLY
FPC 7	REV 09	750-037355	CAAF0937	MPC4E-2CGE-8XGE
FPC 8	REV 39	750-045715	CACD1903	PROTO-ASSEMBLY
FPC 9	REV 05	750-044444	CAAY9801	MX-MPC2E-3D-P
MIC 0	REV 28	750-028387	CAAX1071	MIC-3D-4XGE-XFP
FPC 10	REV 21.0.11	750-045715	CAAY3541	PROTO-ASSEMBLY
FPC 11	REV 17	750-037355	CAAT3986	MPC4E-3D-2CGE-8XGE
Fan Tray 0	REV 08	740-031521	ACAF4219	FFANTRAY-MX960-HC-S
Fan Tray 1	REV 08	740-031521	ACAF4225	FFANTRAY-MX960-HC-S

show chassis hardware clei-models (MX960 Router with MPC5EQ)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	710-030012	COM8T00CRB	CHAS-BP-MX960-S
FPM Board	REV 03	710-014974		CRAFT-MX960-S
PEM 0	Rev 10	740-027760		PWR-MX960-4100-AC-S
PEM 1	Rev 04	740-027760		PWR-MX960-4100-AC-S
PEM 2	Rev 09	740-027760		PWR-MX960-4100-AC-S
Routing Engine 0	REV 08	740-031116	COUCASKBAA	RE-S-1800X4-16G-S
Routing Engine 1	REV 08	740-031116	COUCASKBAA	RE-S-1800X4-16G-S
CB 0	REV 18	750-031391	COUCASRBAA	SCBE-MX-S
CB 1	REV 16	750-031391	COUCARCBAB	SCBE-MX-S
CB 2	REV 16	750-031391	COUCARCBAB	SCBE-MX-S
FPC 0	REV 18	750-046005	PROTOXCLEI	PROTO-ASSEMBLY
FPC 1	REV 11	750-045372	COUIBBNBAA	MX-MPC3E-3D
MIC 0	REV 07	750-033307	COUIBBJBAA	MIC3-3D-10XGE-SFPP
MIC 1	REV 14	750-033196	COUIBBKBAA	MIC3-3D-1X100GE-CXP
FPC 3	REV 35	750-028467		MPC-3D-16XGE-SFPP
FPC 4	REV 18	750-046005	PROTOXCLEI	PROTO-ASSEMBLY
FPC 5	REV 18	750-046005	PROTOXCLEI	PROTO-ASSEMBLY
FPC 7	REV 09	750-037355	PROTOXCLEI	MPC4E-2CGE-8XGE
FPC 8	REV 39	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
FPC 9	REV 05	750-044444	COUIBBGBAA	MX-MPC2E-3D-P
MIC 0	REV 28	750-028387	COUIA16BAA	MIC-3D-4XGE-XFP
FPC 10	REV 21.0.11	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
FPC 11	REV 17	750-037355	IPU3A4DHAA	MPC4E-3D-2CGE-8XGE
Fan Tray 0	REV 08	740-031521		FFANTRAY-MX960-HC-S
Fan Tray 1	REV 08	740-031521		FFANTRAY-MX960-HC-S

show chassis hardware (MX2010 Router)

```
user@host > show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11E3217AFK	MX2010
Midplane	REV 01	750-044636	ABAB8506	Lower Backplane
Midplane 1	REV 01	711-044557	ZY8296	Upper Backplane
PMP	REV 03	711-032426	ACAJ1388	Power Midplane
FPM Board	REV 06	711-032349	ZX8744	Front Panel Display
PSM 4	REV 0C	740-033727	VK00254	DC 52V Power Supply
Module				
PSM 5	REV 0B	740-033727	VG00015	DC 52V Power Supply
Module				
PSM 6	REV 0B	740-033727	VH00097	DC 52V Power Supply
Module				

PSM 7 Module	REV 0C	740-033727	VJ00151	DC 52V Power Supply
PSM 8 Module	REV 0C	740-033727	VJ00149	DC 52V Power Supply
PDM 0	REV 0B	740-038109	WA00008	DC Power Dist Module
PDM 1	REV 0B	740-038109	WA00014	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009094134	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009094141	RE-S-1800x4
CB 0	REV 08	750-040257	CAAB3491	Control Board
CB 1	REV 08	750-040257	CAAB3489	Control Board
SPMB 0	REV 02	711-041855	CAAA6135	PMB Board
SPMB 1	REV 02	711-041855	CAAA6137	PMB Board
SFB 0	REV 06	711-032385	ZV1828	Switch Fabric Board
SFB 1	REV 07	711-032385	ZZ2568	Switch Fabric Board
SFB 2	REV 07	711-032385	ZZ2563	Switch Fabric Board
SFB 3	REV 07	711-032385	ZZ2564	Switch Fabric Board
SFB 4	REV 07	711-032385	ZZ2580	Switch Fabric Board
SFB 5	REV 07	711-032385	ZZ2579	Switch Fabric Board
SFB 6	REV 07	711-032385	CAAB4882	Switch Fabric Board
SFB 7	REV 07	711-032385	CAAB4898	Switch Fabric Board
FPC 0	REV 33	750-028467	CAAB1919	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAB7174	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMH02RE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMH038C	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AMH0390	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AMG0SUA	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMH0579	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMG0SGP	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AMH04SV	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AMH04X3	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMH0135	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMH02NC	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AMH02XB	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AMH02PN	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMH057Y	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMG0JHE	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AMH02HT	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AMH04V4	SFP+-10G-SR
FPC 1	REV 21	750-033205	ZG5027	MPC Type 3
CPU	REV 04	711-035209	YT4780	HMPC PMB 2G
MIC 0	REV 03	750-033307	ZV6299	10X10GE SFPP
PIC 0		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-031980	083363A00410	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	083363A00334	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	113363A00125	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	083363A00953	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AHR013D	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJ40JUR	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJ40JKL	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJ30ECK	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	19T511100864	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	19T511100868	SFP+-10G-SR
MIC 1	REV 03	750-033307	ZV6268	10X10GE SFPP
PIC 2		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-031980	AJC0JML	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ403PC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJ10N25	SFP+-10G-SR

Xcvr 3	REV 01	740-031980	AJ40JF4	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJ40JSJ	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJ403V7	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJ40JN3	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJ40JSU	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	19T511100468	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	19T511101363	SFP+-10G-SR
FPC 8	REV 22	750-031089	ZT9746	MPC Type 2 3D
CPU	REV 06	711-030884	ZS1271	MPC PMB 2G
MIC 0	REV 26	750-028392	ABBS1150	3D 20x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	PLG023C	SFP-SX
Xcvr 1	REV 01	740-031851	PLG09C6	SFP-SX
Xcvr 2	REV 02	740-011613	AM0950SF9L7	SFP-SX
Xcvr 3	REV 02	740-011613	AM1001SFN1H	SFP-SX
Xcvr 4	REV 02	740-011613	AM1001SFM9D	SFP-SX
Xcvr 5	REV 02	740-011613	AM1001SFLTJ	SFP-SX
Xcvr 6	REV 01	740-031851	AC1108S03L9	SFP-SX
Xcvr 7	REV 01	740-031851	AC1102S00NC	SFP-SX
Xcvr 8	REV 01	740-031851	AC1102S00MX	SFP-SX
Xcvr 9	REV 01	740-031851	AC1102S0085	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	AC1102S00KU	SFP-SX
Xcvr 1	REV 01	740-031851	AC1102S00NG	SFP-SX
Xcvr 2	REV 01	740-031851	AC1102S00K3	SFP-SX
Xcvr 3	REV 01	740-031851	AC1102S008R	SFP-SX
Xcvr 4	REV 01	740-031851	AM1107SUFVJ	SFP-SX
Xcvr 5	REV 01	740-031851	AC1108S03LG	SFP-SX
MIC 1	REV 26	750-028387	ABBR9582	3D 4x 10GE XFP
PIC 2		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T10A91703	XFP-10G-SR
Xcvr 1		NON-JNPR	T09L42604	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	2x 10GE XFP
FPC 9	REV 11	750-036284	ZL3591	MPC 3D 16x 10GE EM
CPU	REV 10	711-029089	ZL0513	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	1YT517101825	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	1YT517101821	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	1YT517101682	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ13R6	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	1YT517101828	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	1YT517101716	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	1YT517101732	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALP0TR1	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	1YT517101741	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	1YT517101829	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	1YT517101669	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ14E3	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	1YT517101826	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	1YT517101817	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	1YT517101735	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ159A	SFP+-10G-SR
ADC 0	REV 05	750-043596	CAAC2073	Adapter Card
ADC 1	REV 01	750-043596	ZV4117	Adapter Card
ADC 8	REV 01	750-043596	ZV4107	Adapter Card
ADC 9	REV 02	750-043596	ZW1555	Adapter Card
Fan Tray 0	REV 2A	760-046960	ACAY0015	172mm FanTray - 6 Fans
Fan Tray 1	REV 2A	760-046960	ACAY0019	172mm FanTray - 6 Fans

Fan Tray 2	REV 2A	760-046960	ACAY0020	172mm FanTray - 6 Fans
Fan Tray 3	REV 2A	760-046960	ACAY0021	172mm FanTray - 6 Fans

show chassis hardware detail (MX2010 Router)

```

user@host > show chassis hardware detail
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN11E233DAFK  MX2010
Midplane      REV 26   750-044636   ABAB9357      Lower Backplane
Midplane 1    REV 01   711-044557   ABAB8643      Upper Backplane
PMP           REV 04   711-032426   ACAJ1677      Power Midplane
FPM Board     REV 08   760-044634   ABBV9726      Front Panel Display
PSM 0         REV 01   740-045050   1E02224000P   DC 52V Power Supply
Module
PSM 1         REV 01   740-045050   1E02224000M   DC 52V Power Supply
Module
PSM 2         REV 01   740-045050   1E022240010   DC 52V Power Supply
Module
PSM 3         REV 01   740-045050   1E02224000G   DC 52V Power Supply
Module
PSM 4         REV 01   740-045050   1E022240013   DC 52V Power Supply
Module
PSM 5         REV 01   740-045050   1E022240007   DC 52V Power Supply
Module
PSM 6         REV 01   740-045050   1E02224001C   DC 52V Power Supply
Module
PSM 7         REV 01   740-045050   1E02224001D   DC 52V Power Supply
Module
PSM 8         REV 01   740-045050   1E02224001B   DC 52V Power Supply
Module
PDM 0         REV 01   740-045234   1E262250067   DC Power Dist Module
Routing Engine 0 REV 02   740-041821   9009099704    RE-S-1800x4
  ad0  3831 MB  UGB30SFA4000T1  SFA4000T1 00000651 Compact Flash
  ad1  30533 MB UGB94BPH32H0S1-KCI 11000019592 Disk 1
  usb0 (addr 1) EHCI root hub 0 Intel uhub0
  usb0 (addr 2) product 0x0020 32 vendor 0x8087 uhub1
  DIMM 0 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
  DIMM 1 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
  DIMM 2 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
  DIMM 3 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
Routing Engine 1 REV 02   740-041821   9009099706    RE-S-1800x4
  ad0  3998 MB Virtium - TuffDrive VCF P1T0200262860208 114 Compact Flash
  ad1  30533 MB UGB94ARF32H0S3-KC UNIGEN-499551-000404 Disk 1
CB 0          REV 13   750-040257   CAAF8436      Control Board
CB 1          REV 13   750-040257   CAAF8434      Control Board
SPMB 0        REV 02   711-041855   ABBV3825      PMB Board
SPMB 1        REV 02   711-041855   ABBV3833      PMB Board
SFB 0         REV 05   711-044466   ABBX5682      Switch Fabric Board
SFB 1         REV 05   711-044466   ABBX5676      Switch Fabric Board
SFB 2         REV 05   711-044466   ABBX5665      Switch Fabric Board
SFB 3         REV 05   711-044466   ABBX5699      Switch Fabric Board
SFB 4         REV 05   711-044466   ABBX5603      Switch Fabric Board
SFB 5         REV 05   711-044466   ABBX5587      Switch Fabric Board
SFB 6         REV 05   711-044466   ABBX5607      Switch Fabric Board
SFB 7         REV 05   711-044466   ABBX5669      Switch Fabric Board
FPC 0         REV 09   750-037355   CAAF0924      MPC Type 4-2
CPU           REV 08   711-035209   CAAB9842      HMPC PMB 2G
PIC 0         BUILTIN BUILTIN      4x10GE SFPP
  Xcvr 0       REV 01   740-021308   19T511101656 SFP+-10G-SR
  Xcvr 1       REV 01   740-031980   AMA04RU      SFP+-10G-SR

```

Xcvr 2	REV 01	740-031980	193363A00558	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10M00202	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00328	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	AMA088W	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B10L04211	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	19T511101602	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10L04151	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00332	CFP-100G-SR10
FPC 1	REV 18	750-033205	ZE0128	MPC Type 3
CPU	REV 06	711-035209	ZG5431	HMPD PMB 2G
MIC 0	REV 15	750-033199	ZP6435	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	J11E46118	CFP-100G-LR4
MIC 1	REV 15	750-033199	ZP6442	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	UMN03T4	CFP-100G-LR4
FPC 2	REV 16	750-037358	CAAL1001	MPC Type 4-1
CPU	REV 08	711-035209	CAAK7927	HMPD PMB 2G
PIC 0		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	193363A00589	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00028	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00376	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00016	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	193363A00499	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	973152A00039	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11E01239	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	973152A00058	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	B10M00075	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00014	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AMA0638	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00063	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AMA0629	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	973152A00053	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	193363A00344	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	973152A00046	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	AMA062M	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00080	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00580	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00064	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	093363A01494	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	973152A00020	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	123363A00047	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	973152A00072	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-021308	03DZ06A01033	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00022	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	03DZ06A01026	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00013	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	03DZ06A01028	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	973152A00079	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	03DZ06A01018	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	973152A00025	SFP+-10G-SR
FPC 3	REV 33	750-028467	CAAF5400	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAH7626	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00066	SFP+-10G-SR

Xcvr 1	REV 01	740-021308	973152A00021	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	973152A00062	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00027	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00065	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00069	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	973152A00026	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00003	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00035	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00004	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	973152A00049	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00055	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00010	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00001	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	973152A00073	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00012	SFP+-10G-SR
FPC 4	REV 21	750-033205	ZG5028	MPC Type 3
CPU	REV 05	711-035209	YX3911	HMPC PMB 2G
MIC 0	REV 03	750-036233	ZL2036	2X40GE QSFP
PIC 0		BUILTIN	BUILTIN	2X40GE QSFP
Xcvr 0	REV 01	740-032986	QB220708	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QB220735	QSFP+-40G-SR4
MIC 1	REV 03	750-036233	ZL2028	2X40GE QSFP
PIC 2		BUILTIN	BUILTIN	2X40GE QSFP
Xcvr 0	REV 01	740-032986	QB220727	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QB220715	QSFP+-40G-SR4
FPC 5	REV 11	750-037358	CAAE2196	MPC Type 4-1
CPU	REV 08	711-035209	CAAD9074	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	AMA062S	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AMA062P	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AMA052R	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AMA0632	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	193363A00564	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	193363A00229	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	193363A00363	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	193363A00278	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	AMA04CC	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AD0927A001W	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AMA04N2	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AMA062U	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	193363A00491	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	183363A01511	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	193363A00565	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	193363A00405	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	AMA07QX	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AMA06MS	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00318	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	193363A00402	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	193363A00174	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	193363A00388	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	193363A00377	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	193363A00234	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	AMA062T	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	193363A00550	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00364	SFP+-10G-SR

Xcvr 3	REV 01	740-031980	AMA0630	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	193363A00509	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	193363A00459	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	113363A00191	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	193363A00352	SFP+-10G-SR
FPC 6	REV 33	750-028467	CAAF5552	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAH7601	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AD0927A0036	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AD0927A003M	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AD0927A003G	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AD0927A0031	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	193363A00331	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	193363A00325	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00417	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A02509	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	T09K75140	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11A04356	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01952	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01914	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	T09K75157	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	T09K75194	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01926	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01936	SFP+-10G-SR
FPC 7	REV 16	750-037358	CAAL1012	MPC Type 4-1
CPU	REV 08	711-035209	CAAJ3851	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	AMA04NK	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00260	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11E02192	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AMA04CP	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJ40JJK	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11F00238	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B10M00275	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	193363A00211	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	B11D05577	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11G00586	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AMA08B7	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AMA04Q0	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11D05840	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11E00467	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11E00029	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	19T511101712	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	193363A00568	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B10M00166	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B10M00212	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11D05823	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	03DZ06A01005	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	03DZ06A01003	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	03DZ06A01009	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	03DZ06A01004	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-021308	03DZ06A01017	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	03DZ06A01016	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	03DZ06A01024	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	03DZ06A01008	SFP+-10G-SR

Xcvr 4	REV 01	740-030658	AD0946A02UH	SFP+-10G-USR
Xcvr 5	REV 01	740-021308	T09J67913	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AD0837ES09G	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	03DZ06A01015	SFP+-10G-SR
FPC 8	REV 03	750-045372	CAAD3111	MPC Type 3
CPU	REV 08	711-035209	CAAD8033	HMPC PMB 2G
MIC 0	REV 03	750-036233	ZL2032	2X40GE QSFP
PIC 0		BUILTIN	BUILTIN	2X40GE QSFP
Xcvr 0	REV 01	740-032986	QB230273	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QB230254	QSFP+-40G-SR4
MIC 1	REV 03	750-036233	ZL2021	2X40GE QSFP
PIC 2		BUILTIN	BUILTIN	2X40GE QSFP
Xcvr 0	REV 01	740-032986	QB390962	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QB390960	QSFP+-40G-SR4
FPC 9	REV 09	750-037355	CAAF1531	MPC Type 4-2
CPU	REV 08	711-035209	CAAB9927	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	193363A00525	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	193363A00504	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00368	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJ40JSS	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	123363A00042	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B10M00023	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJ802EM	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11E02348	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
ADC 0	REV 13	750-043596	ABBX5532	Adapter Card
ADC 1	REV 13	750-043596	ABBX5550	Adapter Card
ADC 2	REV 13	750-043596	ABBX5571	Adapter Card
ADC 3	REV 13	750-043596	ABBX5568	Adapter Card
ADC 4	REV 13	750-043596	ABBX5556	Adapter Card
ADC 5	REV 13	750-043596	ABBX5553	Adapter Card
ADC 6	REV 13	750-043596	ABBX5541	Adapter Card
ADC 7	REV 13	750-043596	ABBX5578	Adapter Card
ADC 8	REV 13	750-043596	ABBX5560	Adapter Card
ADC 9	REV 07	750-043596	ABBV7188	Adapter Card
Fan Tray 0	REV 03	760-046960	ACAY0127	172mm FanTray - 6 Fans
Fan Tray 1	REV 2A	760-046960	ACAY0068	172mm FanTray - 6 Fans
Fan Tray 2	REV 2A	760-046960	ACAY0072	172mm FanTray - 6 Fans
Fan Tray 3	REV 2A	760-046960	ACAY0070	172mm FanTray - 6 Fans

show chassis hardware extensive (MX2010 Router)

```

user@host > show chassis hardware extensive
Hardware inventory:
Item              Version  Part number  Serial number  Description
Chassis
Jedec Code:      0x7fb0          EEPROM Version: 0x02
                  S/N:              JN11E233DAFK
Assembly ID:     0x0557          Assembly Version: 00.00
Date:            00-00-0000      Assembly Flags:  0x00
ID: MX2010
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 57 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 4a 4e 31 31 45 32 33 33 44 41 46 4b 00 00 00 00
Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00

```

```

Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane          REV 26    750-044636    ABAB9357          Lower Backplane
Jedec Code:      0x7fb0          EEPROM Version:    0x02
P/N:             750-044636          S/N:             ABAB9357
Assembly ID:     0x0b66          Assembly Version: 01.26
Date:            08-28-2012        Assembly Flags:   0x00
Version:         REV 26          CLEI Code:       PROTOXCLEI
ID: Lower Backplane          FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ad 01 08 00 2c 21 72 70 a0 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 66 01 1a 52 45 56 20 32 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 36 33 36 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 39 33 35 37 00 1c 08 07
Address 0x30: dc ff ff ff ad 01 08 00 2c 21 72 70 a0 00 ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
Midplane 1        REV 01    711-044557    ABAB8643          Upper Backplane
Jedec Code:      0x7fb0          EEPROM Version:    0x01
P/N:             711-044557          S/N:             ABAB8643
Assembly ID:     0x0b65          Assembly Version: 01.01
Date:            07-27-2012        Assembly Flags:   0x00
Version:         REV 01
ID: Upper Backplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0b 65 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 34 35 35 37 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 38 36 34 33 00 1b 07 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PMP               REV 04    711-032426    ACAJ1677          Power Midplane
Jedec Code:      0x7fb0          EEPROM Version:    0x01
P/N:             711-032426          S/N:             ACAJ1677
Assembly ID:     0x045d          Assembly Version: 01.04
Date:            07-20-2012        Assembly Flags:   0x00
Version:         REV 04
ID: Power Midplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 5d 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 34 32 36 00 00
Address 0x20: 53 2f 4e 20 41 43 41 4a 31 36 37 37 00 14 07 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board         REV 08    760-044634    ABBV9726          Front Panel Display
Jedec Code:      0x7fb0          EEPROM Version:    0x02
P/N:             760-044634          S/N:             ABBV9726

```

```

Assembly ID: 0x0b64      Assembly Version: 01.08
Date:          09-10-2012    Assembly Flags: 0x00
Version:       REV 08        CLEI Code:      IPMYA4EJRA
ID: Front Panel Display     FRU Model Number: MX2010-CRAFT-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b 64 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 36 30 2d 30 34 34 36 33 34 00 00
  Address 0x20: 53 2f 4e 20 41 42 42 56 39 37 32 36 00 0a 09 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 4d 59 41 34 45 4a 52 41 4d
  Address 0x50: 58 32 30 31 30 2d 43 52 41 46 54 2d 53 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 93 ff ff ff ff ff ff ff ff ff ff ff ff
PSM 0          REV 01    740-045050    1E02224000P    DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           740-045050   S/N:           1E02224000P
Assembly ID:   0x0478      Assembly Version: 01.01
Date:          12-06-2012   Assembly Flags: 0x00
Version:       REV 01      CLEI Code:     XXXXXXXXXX
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-HC-DC-S-A
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 30 35 30 00 00
  Address 0x20: 31 45 30 32 32 32 34 30 30 30 50 00 00 06 0c 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 58 58 58 58 58 58 58 58 58 58 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 48 43 2d 44 43 2d
  Address 0x60: 53 2d 41 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 4a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 1          REV 01    740-045050    1E02224000M    DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           740-045050   S/N:           1E02224000M
Assembly ID:   0x0478      Assembly Version: 01.01
Date:          12-06-2012   Assembly Flags: 0x00
Version:       REV 01      CLEI Code:     XXXXXXXXXX
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-HC-DC-S-A
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 30 35 30 00 00
  Address 0x20: 31 45 30 32 32 32 34 30 30 30 4d 00 00 06 0c 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 58 58 58 58 58 58 58 58 58 58 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 48 43 2d 44 43 2d
  Address 0x60: 53 2d 41 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 4a 00 00 00 00 00 00 00 00 00 00 00 00
...
PDM 0          REV 01    740-045234    1E262250067    DC Power Dist Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           740-045234   S/N:           1E262250067
Assembly ID:   0x047b      Assembly Version: 01.01
Date:          06-28-2012   Assembly Flags: 0x00
Version:       REV 01      CLEI Code:     IPUPAJSKAA
ID: DC Power Dist Module    FRU Model Number: MX2000-PDM-DC-S-A

```



```

Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 7b 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 32 33 34 00 00
  Address 0x20: 31 45 32 36 32 32 35 30 30 36 37 00 00 1c 06 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4a 53 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 44 4d 2d 44 43 2d 53 2d 41
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 89 00 00 00 00 00 00 00 00 00 00 00 00
Routing Engine 0 REV 02 740-041821 9009099704 RE-S-1800x4
Jedec Code: 0x7fb0 EEPROM Version: 0x02
P/N: 740-041821 S/N: 9009099704
Assembly ID: 0x09c0 Assembly Version: 01.02
Date: 03-15-2012 Assembly Flags: 0x00
Version: REV 02
ID: RE-S-1800x4 FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
  Address 0x00: 54 32 30 32 37 44 41 2d 34 34 47 42 23 41 23 00
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 09 c0 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 31 38 32 31 00 00
  Address 0x20: 39 30 30 39 30 39 39 37 30 34 00 00 00 0f 03 07
  Address 0x30: dc ff ff ff 54 32 30 32 37 44 41 2d 34 34 47 42
  Address 0x40: 23 41 23 00 01 00 00 00 00 00 00 00 00 00 00 52
  Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 8c ff ff ff ff ff ff ff ff ff ff ff ff
ad0 3831 MB UGB30SFA4000T1 SFA4000T1 00000651 Compact Flash
ad1 30533 MB UGB94BPH32H0S1-KCI 11000019592 Disk 1
usb0 (addr 1) EHCI root hub 0 Intel uhub0
usb0 (addr 2) product 0x0020 32 vendor 0x8087 uhub1
DIMM 0 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 1 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 2 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 3 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
Routing Engine 1 REV 02 740-041821 9009099706 RE-S-1800x4
Jedec Code: 0x7fb0 EEPROM Version: 0x02
P/N: 740-041821 S/N: 9009099706
Assembly ID: 0x09c0 Assembly Version: 01.02
Date: 02-23-2012 Assembly Flags: 0x00
Version: REV 02
ID: RE-S-1800x4 FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
  Address 0x00: 54 32 30 32 37 44 41 2d 34 34 47 42 23 41 23 00
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 09 c0 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 31 38 32 31 00 00
  Address 0x20: 39 30 30 39 30 39 39 37 30 36 00 00 00 17 02 07
  Address 0x30: dc ff ff ff 54 32 30 32 37 44 41 2d 34 34 47 42
  Address 0x40: 23 41 23 00 01 00 00 00 00 00 00 00 00 00 00 52
  Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 8c ff ff ff ff ff ff ff ff ff ff ff ff
ad0 3998 MB Virtium - TuffDrive VCF P1T0200262860208 114 Compact Flash
ad1 30533 MB UGB94ARF32H0S3-KC UNIGEN-499551-000404 Disk 1
CB 0 REV 13 750-040257 CAAF8436 Control Board
Jedec Code: 0x7fb0 EEPROM Version: 0x02
P/N: 750-040257 S/N: CAAF8436
Assembly ID: 0x0b26 Assembly Version: 01.13

```

```

Date:          08-29-2012      Assembly Flags:    0x00
Version:       REV 13          CLEI Code:      PROTOXCLEI
ID: Control Board              FRU Model Number:  PROTO-ASSEMBLY

```

Board Information Record:

```
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
```

I2C Hex Data:

```

Address 0x00: 7f b0 02 ff 0b 26 01 0d 52 45 56 20 31 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 30 32 35 37 00 00
Address 0x20: 53 2f 4e 20 43 41 41 46 38 34 33 36 00 1d 08 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff

```

...

```
SPMB 0          REV 02    711-041855    ABBV3825          PMB Board
```

```

Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           711-041855      S/N:              ABBV3825
Assembly ID:   0x0b29          Assembly Version:  01.02
Date:          08-14-2012      Assembly Flags:    0x00
Version:       REV 02
ID: PMB Board

```

Board Information Record:

```
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
```

I2C Hex Data:

```

Address 0x00: 7f b0 01 ff 0b 29 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 31 38 35 35 00 00
Address 0x20: 53 2f 4e 20 41 42 42 56 33 38 32 35 00 0e 08 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00

```

...

```
SFB 0          REV 05    711-044466    ABBX5682          Switch Fabric Board
```

```

Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           711-044466      S/N:              ABBX5682
Assembly ID:   0x0b25          Assembly Version:  01.05
Date:          09-07-2012      Assembly Flags:    0x00
Version:       REV 05          CLEI Code:        PROTOXCLEI
ID: Switch Fabric Board        FRU Model Number:  PROTO-ASSEMBLY

```

Board Information Record:

```
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
```

I2C Hex Data:

```

Address 0x00: 7f b0 02 ff 0b 25 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 34 34 36 36 00 00
Address 0x20: 53 2f 4e 20 41 42 42 58 35 36 38 32 00 07 09 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 01 00 00 00 00 00 00 48 00

```

...

```
FPC 0          REV 09    750-037355    CAAF0924          MPC Type 4-2
```

```

Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-037355      S/N:              CAAF0924
Assembly ID:   0x0b4e          Assembly Version:  01.09
Date:          05-21-2012      Assembly Flags:    0x00
Version:       REV 09          CLEI Code:        PROTOXCLEI
ID: MPC Type 4-2              FRU Model Number:  MPC4E-2CGE-8XGE

```

Board Information Record:

```

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 4e 01 09 52 45 56 20 30 39 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 33 35 35 00 00
Address 0x20: 53 2f 4e 20 43 41 41 46 30 39 32 34 00 15 05 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 4d
Address 0x50: 50 43 34 45 2d 32 43 47 45 2d 38 58 47 45 00 00
Address 0x60: 00 00 00 00 00 00 30 39 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c6 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 08    711-035209    CAAB9842          HMPC PMB 2G
Jedec Code:  0x7fb0          EEPROM Version:  0x01
P/N:         711-035209          S/N:          CAAB9842
Assembly ID: 0x0b04          Assembly Version: 01.08
Date:        05-17-2012          Assembly Flags: 0x00
Version:     REV 08
ID: HMPC PMB 2G
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0b 04 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 35 32 30 39 00 00
Address 0x20: 53 2f 4e 20 43 41 41 42 39 38 34 32 00 11 05 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0          BUILTIN          BUILTIN          4x10GE SFPP
Jedec Code:  0x0000          EEPROM Version:  0x00
P/N:         BUILTIN          S/N:          BUILTIN
Assembly ID: 0x0a53          Assembly Version: 00.00
Date:        00-00-0000          Assembly Flags: 0x00
ID: 4x10GE SFPP
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 53 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 4d 58 43 00
Address 0x20: 42 55 49 4c 54 49 4e 00 4d 58 43 00 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 ae 64 00 00 00 00 0a 52 00 00
Xcvr 0      REV 01    740-021308    19T511101656          SFP+-10G-SR
Xcvr 1      REV 01    740-031980    AMA04RU              SFP+-10G-SR
Xcvr 2      REV 01    740-031980    193363A00558          SFP+-10G-SR
Xcvr 3      REV 01    740-031980    B10M00202            SFP+-10G-SR
...
ADC 0      REV 13    750-043596    ABBX5532          Adapter Card
Jedec Code: 0x7fb0          EEPROM Version:  0x02
P/N:        750-043596          S/N:          ABBX5532
Assembly ID: 0x0b3d          Assembly Version: 01.13
Date:       09-12-2012          Assembly Flags: 0x00
Version:    REV 13          CLEI Code:     IPUCBA8CAA
ID: Adapter Card          FRU Model Number: MX2000-LC-ADAPTER
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 3d 01 0d 52 45 56 20 31 33 00 00

```

```

Address 0x10: 00 00 00 00 37 35 30 2d 30 34 33 35 39 36 00 00
Address 0x20: 53 2f 4e 20 41 42 42 58 35 35 33 32 00 0c 09 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 43 42 41 38 43 41 41 4d
Address 0x50: 58 32 30 30 30 2d 4c 43 2d 41 44 41 50 54 45 52
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff
Address 0x70: ff ff ff 3a 00 00 00 00 00 00 00 00 00 00 00
...

```

show chassis hardware models (MX2010 Router)

```

user@host > show chassis hardware models
Hardware inventory:
Item                Version  Part number  Serial number  FRU model number
FPM Board           REV 06   711-032349   ZX8744         711-032349
PSM 4               REV 0C   740-033727   VK00254       00000000000000000000000000000000
PSM 5               REV 0B   740-033727   VG00015       00000000000000000000000000000000
PSM 6               REV 0B   740-033727   VH00097       00000000000000000000000000000000
PSM 7               REV 0C   740-033727   VJ00151       00000000000000000000000000000000
PSM 8               REV 0C   740-033727   VJ00149       00000000000000000000000000000000
PDM 0               REV 0B   740-038109   WA00008
PDM 1               REV 0B   740-038109   WA00014
Routing Engine 0    REV 02   740-041821   9009094134    RE-S-1800X4-16G-S
Routing Engine 1    REV 02   740-041821   9009094141    RE-S-1800X4-16G-S
CB 0                REV 08   750-040257   CAAB3491      750-040257
CB 1                REV 08   750-040257   CAAB3489      750-040257
SFB 0               REV 06   711-032385   ZV1828        711-032385
SFB 1               REV 07   711-032385   ZZ2568        711-032385
SFB 2               REV 07   711-032385   ZZ2563        711-032385
SFB 3               REV 07   711-032385   ZZ2564        711-032385
SFB 4               REV 07   711-032385   ZZ2580        711-032385
SFB 5               REV 07   711-032385   ZZ2579        711-032385
SFB 6               REV 07   711-032385   CAAB4882      711-044170
SFB 7               REV 07   711-032385   CAAB4898      711-044170
FPC 0               REV 33   750-028467   CAAB1919      MPC-3D-16XGE-SFPP
FPC 1               REV 21   750-033205   ZG5027        MX-MPC3-3D
    MIC 0            REV 03   750-033307   ZV6299        MIC3-3D-10XGE-SFPP
    MIC 1            REV 03   750-033307   ZV6268        MIC3-3D-10XGE-SFPP
FPC 8               REV 22   750-031089   ZT9746        MX-MPC2-3D
    MIC 0            REV 26   750-028392   ABBS1150      MIC-3D-20GE-SFP
    MIC 1            REV 26   750-028387   ABBR9582      MIC-3D-4XGE-XFP
FPC 9               REV 11   750-036284   ZL3591        MPCE-3D-16XGE-SFPP
ADC 0               REV 05   750-043596   CAAC2073      750-043596
ADC 1               REV 01   750-043596   ZV4117        750-043596
ADC 8               REV 01   750-043596   ZV4107        750-043596
ADC 9               REV 02   750-043596   ZW1555        750-043596
Fan Tray 0          REV 2A   760-046960   ACAY0015
Fan Tray 1          REV 2A   760-046960   ACAY0019
Fan Tray 2          REV 2A   760-046960   ACAY0020
Fan Tray 3          REV 2A   760-046960   ACAY0021

```

show chassis hardware clei-models (MX2010 Routers)

```

user@host > show chassis hardware clei-models
Hardware inventory:
Item                Version  Part number  CLEI code      FRU model number
FPM Board           REV 06   711-032349   PROTOXCLEI     711-032349
PSM 4               REV 0C   740-033727   0000000000     00000000000000000000000000000000
PSM 5               REV 0B   740-033727   0000000000     00000000000000000000000000000000
PSM 6               REV 0B   740-033727   0000000000     00000000000000000000000000000000
PSM 7               REV 0C   740-033727   0000000000     00000000000000000000000000000000

```

PSM 8	REV 0C	740-033727	0000000000	000000000000000000000000
PDM 0	REV 0B	740-038109		
PDM 1	REV 0B	740-038109		
Routing Engine 0	REV 02	740-041821		RE-S-1800X4-16G-S
Routing Engine 1	REV 02	740-041821		RE-S-1800X4-16G-S
CB 0	REV 08	750-040257	PROTOXCLEI	750-040257
CB 1	REV 08	750-040257	PROTOXCLEI	750-040257
SFB 0	REV 06	711-032385	PROTOXCLEI	711-032385
SFB 1	REV 07	711-032385	PROTOXCLEI	711-032385
SFB 2	REV 07	711-032385	PROTOXCLEI	711-032385
SFB 3	REV 07	711-032385	PROTOXCLEI	711-032385
SFB 4	REV 07	711-032385	PROTOXCLEI	711-032385
SFB 5	REV 07	711-032385	PROTOXCLEI	711-0323856
SFB 6	REV 07	711-032385	PROTOXCLEI	711-044170
SFB 7	REV 07	711-032385	PROTOXCLEI	711-044170
FPC 0	REV 33	750-028467		MPC-3D-16XGE-SFPP
FPC 1	REV 21	750-033205		MX-MPC3-3D
MIC 0	REV 03	750-033307	PROTOXCLEI	MIC3-3D-10XGE-SFPP
MIC 1	REV 03	750-033307	PROTOXCLEI	MIC3-3D-10XGE-SFPP
FPC 8	REV 22	750-031089	COUIBAYBAA	MX-MPC2-3D
MIC 0	REV 26	750-028392	COUIA15BAA	MIC-3D-20GE-SFP
MIC 1	REV 26	750-028387	COUIA16BAA	MIC-3D-4XGE-XFP
FPC 9	REV 11	750-036284	CMUIACGBAA	MPCE-3D-16XGE-SFPP
ADC 0	REV 05	750-043596	PROTOXCLEI	750-043596
ADC 1	REV 01	750-043596	PROTOXCLEI	750-043596
ADC 8	REV 01	750-043596	PROTOXCLEI	750-043596
ADC 9	REV 02	750-043596	PROTOXCLEI	750-043596
Fan Tray 0	REV 2A	760-046960		
Fan Tray 1	REV 2A	760-046960		
Fan Tray 2	REV 2A	760-046960		
Fan Tray 3	REV 2A	760-046960		

show chassis hardware (MX2010 Routers with MPC6E and OTN MIC)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11C9AFEAFK	MX2010
Midplane	REV 35	750-044636	ABAB9188	Lower Backplane
Midplane 1	REV 02	711-044557	ABAB8729	Upper Backplane
PMP	REV 04	711-032426	ACAJ2432	Power Midplane
FPD Board	REV 09	760-044634	ABCA4314	Front Panel Display
PSM 0	REV 01	740-050037	1EDB321015C	DC 52V Power Supply
Module				
PSM 1	REV 01	740-050037	1EDB321015J	DC 52V Power Supply
Module				
PSM 2	REV 01	740-050037	1EDB32000K8	DC 52V Power Supply
Module				
PSM 3	REV 01	740-050037	1EDB32101JW	DC 52V Power Supply
Module				
PSM 4	REV 01	740-050037	1EDB321015G	DC 52V Power Supply
Module				
PSM 5	REV 01	740-050037	1EDB32101HH	DC 52V Power Supply
Module				
PSM 6	REV 01	740-050037	1EDB32101HD	DC 52V Power Supply
Module				
PSM 7	REV 01	740-050037	1EDB321015F	DC 52V Power Supply
Module				
PSM 8	REV 01	740-050037	1EDB321015B	DC 52V Power Supply
Module				
PDM 0	REV 03	740-045234	1EFA3220433	DC Power Dist Module

PDM 1	REV 03	740-045234	1EFA3220425	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009115685	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009099711	RE-S-1800x4
CB 0	REV 23	750-040257	CABE8395	Control Board
CB 1	REV 12	750-040257	CAAD9499	Control Board
SPMB 0	REV 02	711-041855	ABCG8426	PMB Board
SPMB 1	REV 02	711-041855	ABBS1481	PMB Board
SFB 0	REV 06	711-044466	ABCD5013	Switch Fabric Board
SFB 1	REV 06	711-044466	ABCD5160	Switch Fabric Board
SFB 2	REV 06	711-044466	ABCD5175	Switch Fabric Board
SFB 3	REV 06	711-044466	ABCD4938	Switch Fabric Board
SFB 4	REV 06	711-044466	ABCD4944	Switch Fabric Board
SFB 5	REV 06	711-044466	ABCD4968	Switch Fabric Board
SFB 6	REV 06	711-044466	ABCD5267	Switch Fabric Board
SFB 7	REV 06	711-044466	ABCD4997	Switch Fabric Board
FPC 0	REV 59	750-044130	ABCT7676	MPC6E 3D
CPU	REV 10	711-045719	ABCK8527	RMPD PMB
XLM 0	REV 13	711-046638	ABCT7810	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7811	MPC6E XL
FPC 2	REV 27	750-033205	ZL6014	MPCE Type 3 3D
CPU	REV 07	711-035209	ZK9068	HMPD PMB 2G
MIC 0	REV 14	750-033196	CAAW9214	1X100GE CXP
PIC 0		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XC49FC030	CFP2-100G-SR10
MIC 1	REV 18	750-033199	CAAC3231	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
FPC 3	REV 59	750-044130	ABCT7682	MPC6E 3D
CPU	REV 10	711-045719	ABCK8531	RMPD PMB
XLM 0	REV 13	711-046638	ABCT7818	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7819	MPC6E XL
FPC 4	REV 33	750-044130	ABBY9278	MPC6E 3D
CPU	REV 09	711-045719	ABBY8677	RMPD PMB
XLM 0	REV 06.2.00	711-046638	ABBY8844	MPC6E XL
XLM 1	REV 06.2.00	711-046638	ABBY8830	MPC6E XL
FPC 5	REV 59	750-044130	ABCT7675	MPC6E 3D
CPU	REV 10	711-045719	ABCK8526	RMPD PMB
XLM 0	REV 13	711-046638	ABCT7808	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7809	MPC6E XL
FPC 6	REV 30	750-028467	ZM4986	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZP6541	AMPD PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43GAC	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	ALM0A6D	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AQFORB3	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	153363A00333	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AN10KYE	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	APK04YM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AQFOH44	SFP+-10G-SR
FPC 8	REV 38	750-031090	CABF7313	MPC Type 2 3D EQ
CPU	REV 08	711-030884	CABE6727	MPC PMB 2G
MIC 0	REV 18	750-028380	YK8253	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 03	740-014289	AD1148M00TP	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
QXM 0	REV 06	711-028408	CABC5614	MPC QXM
QXM 1	REV 06	711-028408	CABC5550	MPC QXM
FPC 9	REV 39	750-044130	ABCK1652	MPC6E 3D
CPU	REV 09	711-045719	ABCK1655	RMPD PMB

MIC 0	REV 09	750-049457	ABCP1230	2X100GE CFP2 OTN
PIC 0		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	37300222WP0002	CFP2-100G-LR4-D
Xcvr 1		NON-JNPR	FD46F001Y	CFP2-100G-SR10
MIC 1	REV 07	750-049457	ABCV6662	2X100GE CFP2 OTN
PIC 1		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQD0014	CFP2-100G-LR4-D
Xcvr 1		NON-JNPR	J13J68335	CFP2-100G-LR4-D
XLM 0	REV 07.2.00	711-046638	ABCK5491	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK5475	MPC6E XL
ADC 1	REV 17	750-043596	ABCG9023	Adapter Card
ADC 2	REV 01	750-043596	ZV4079	Adapter Card
ADC 6	REV 17	750-043596	ABCG8866	Adapter Card
ADC 8	REV 17	750-043596	ABCA8993	Adapter Card
Fan Tray 0	REV 06	760-046960	ACAY0354	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY0831	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY0892	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY0839	172mm FanTray - 6 Fans

show chassis hardware detail (MX2010 Routers with MPC6E and OTN MIC)

```

user@host> show chassis hardware detail
Hardware inventory:

```

Item	Version	Part number	Serial number	Description
Chassis			JN11C9AFEAFK	MX2010
Midplane	REV 35	750-044636	ABAB9188	Lower Backplane
Midplane 1	REV 02	711-044557	ABAB8729	Upper Backplane
PMP	REV 04	711-032426	ACAJ2432	Power Midplane
FPM Board	REV 09	760-044634	ABCA4314	Front Panel Display
PSM 0	REV 01	740-050037	1EDB321015C	DC 52V Power Supply
Module				
PSM 1	REV 01	740-050037	1EDB321015J	DC 52V Power Supply
Module				
PSM 2	REV 01	740-050037	1EDB32000K8	DC 52V Power Supply
Module				
PSM 3	REV 01	740-050037	1EDB32101JW	DC 52V Power Supply
Module				
PSM 4	REV 01	740-050037	1EDB321015G	DC 52V Power Supply
Module				
PSM 5	REV 01	740-050037	1EDB32101HH	DC 52V Power Supply
Module				
PSM 6	REV 01	740-050037	1EDB32101HD	DC 52V Power Supply
Module				
PSM 7	REV 01	740-050037	1EDB321015F	DC 52V Power Supply
Module				
PSM 8	REV 01	740-050037	1EDB321015B	DC 52V Power Supply
Module				
PDM 0	REV 03	740-045234	1EFA3220433	DC Power Dist Module
PDM 1	REV 03	740-045234	1EFA3220425	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009115685	RE-S-1800x4
ad0 3998 MB	Virtium - TuffDrive	VCF P1T0200274310822	191 Compact Flash	
ad1 30533 MB	UGB94BPH32H0S1-KCI	11000043190	Disk 1	
usb0 (addr 1)	EHCI root hub 0	Intel	uhub0	
usb0 (addr 2)	product 0x0020 32	vendor 0x8087	uhub1	
DIMM 0	VL31B5263F-F8SD DIE	REV-0 PCB REV-0	MFR ID-ce80	
DIMM 1	VL31B5263F-F8SD DIE	REV-0 PCB REV-0	MFR ID-ce80	
DIMM 2	VL31B5263F-F8SD DIE	REV-0 PCB REV-0	MFR ID-ce80	
DIMM 3	VL31B5263F-F8SD DIE	REV-0 PCB REV-0	MFR ID-ce80	
Routing Engine 1	REV 02	740-041821	9009099711	RE-S-1800x4
ad0 3998 MB	Virtium - TuffDrive	VCF P1T0200262860208	30 Compact Flash	
ad1 30533 MB	UGB94ARF32H0S3-KC	UNIGEN-499551-000146	Disk 1	

CB 0	REV 23	750-040257	CABE8395	Control Board
CB 1	REV 12	750-040257	CAAD9499	Control Board
SPMB 0	REV 02	711-041855	ABCG8426	PMB Board
SPMB 1	REV 02	711-041855	ABBS1481	PMB Board
SFB 0	REV 06	711-044466	ABCD5013	Switch Fabric Board
SFB 1	REV 06	711-044466	ABCD5160	Switch Fabric Board
SFB 2	REV 06	711-044466	ABCD5175	Switch Fabric Board
SFB 3	REV 06	711-044466	ABCD4938	Switch Fabric Board
SFB 4	REV 06	711-044466	ABCD4944	Switch Fabric Board
SFB 5	REV 06	711-044466	ABCD4968	Switch Fabric Board
SFB 6	REV 06	711-044466	ABCD5267	Switch Fabric Board
SFB 7	REV 06	711-044466	ABCD4997	Switch Fabric Board
FPC 0	REV 59	750-044130	ABCT7676	MPC6E 3D
CPU	REV 10	711-045719	ABCK8527	RMPD PMB
XLM 0	REV 13	711-046638	ABCT7810	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7811	MPC6E XL
FPC 2	REV 27	750-033205	ZL6014	MPCE Type 3 3D
CPU	REV 07	711-035209	ZK9068	HMPD PMB 2G
MIC 0	REV 14	750-033196	CAAW9214	1X100GE CXP
PIC 0		BUILTIN	BUILTIN	1X100GE CXP
Xcvt 0	REV 01	740-046563	XC49FC030	CFP2-100G-SR10
MIC 1	REV 18	750-033199	CAAC3231	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
FPC 3	REV 59	750-044130	ABCT7682	MPC6E 3D
CPU	REV 10	711-045719	ABCK8531	RMPD PMB
XLM 0	REV 13	711-046638	ABCT7818	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7819	MPC6E XL
FPC 4	REV 33	750-044130	ABBY9278	MPC6E 3D
CPU	REV 09	711-045719	ABBY8677	RMPD PMB
XLM 0	REV 06.2.00	711-046638	ABBY8844	MPC6E XL
XLM 1	REV 06.2.00	711-046638	ABBY8830	MPC6E XL
FPC 5	REV 59	750-044130	ABCT7675	MPC6E 3D
CPU	REV 10	711-045719	ABCK8526	RMPD PMB
XLM 0	REV 13	711-046638	ABCT7808	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7809	MPC6E XL
FPC 6	REV 30	750-028467	ZM4986	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZP6541	AMPD PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvt 0	REV 01	740-021308	AQ43GAC	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvt 0	REV 01	740-031980	ALM0A6D	SFP+-10G-SR
Xcvt 1	REV 01	740-031980	AQFORB3	SFP+-10G-SR
Xcvt 2	REV 01	740-031980	153363A00333	SFP+-10G-SR
Xcvt 3	REV 01	740-021308	AN10KYE	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvt 0	REV 01	740-021308	APK04YM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvt 0	REV 01	740-031980	AQFOH44	SFP+-10G-SR
FPC 8	REV 38	750-031090	CABF7313	MPC Type 2 3D EQ
CPU	REV 08	711-030884	CABE6727	MPC PMB 2G
MIC 0	REV 18	750-028380	YK8253	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvt 0	REV 03	740-014289	AD1148M00TP	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
QXM 0	REV 06	711-028408	CABC5614	MPC QXM
QXM 1	REV 06	711-028408	CABC5550	MPC QXM
FPC 9	REV 39	750-044130	ABCK1652	MPC6E 3D
CPU	REV 09	711-045719	ABCK1655	RMPD PMB
MIC 0	REV 09	750-049457	ABCP1230	2X100GE CFP2 OTN
PIC 0		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvt 0		NON-JNPR	37300222WP0002	CFP2-100G-LR4-D

Xcvr 1		NON-JNPR	FD46F001Y	CFP2-100G-SR10
MIC 1	REV 07	750-049457	ABCV6662	2X100GE CFP2 OTN
PIC 1		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQD0014	CFP2-100G-LR4-D
Xcvr 1		NON-JNPR	J13J68335	CFP2-100G-LR4-D
XLM 0	REV 07.2.00	711-046638	ABCK5491	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK5475	MPC6E XL
ADC 1	REV 17	750-043596	ABCG9023	Adapter Card
ADC 2	REV 01	750-043596	ZV4079	Adapter Card
ADC 6	REV 17	750-043596	ABCG8866	Adapter Card
ADC 8	REV 17	750-043596	ABCA8993	Adapter Card
Fan Tray 0	REV 06	760-046960	ACAY0354	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY0831	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY0892	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY0839	172mm FanTray - 6 Fans

show chassis hardware extensive (MX2010 Routers with MPC6E and OTN MIC)

```

user@host> show chassis hardware extensive
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Jedec Code:   0x7fb0          EEPROM Version: 0x02
S/N:          JN11C9AFEAFK
Assembly ID:  0x0557          Assembly Version: 00.00
Date:         00-00-0000      Assembly Flags:  0x00
ID: MX2010
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 57 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 4a 4e 31 31 43 39 41 46 45 41 46 4b 00 00 00 00
Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane      REV 35      750-044636  ABAB9188      Lower Backplane
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          750-044636      S/N:          ABAB9188
Assembly ID:  0x0b66          Assembly Version: 01.35
Date:         06-21-2013      Assembly Flags: 0x00
Version:      REV 35          CLEI Code:    IPMU810ARA
ID: Lower Backplane          FRU Model Number: CHAS-BP-MX2010-S
Board Information Record:
Address 0x00: ad 01 08 00 3c 8a b0 38 68 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 66 01 23 52 45 56 20 33 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 36 33 36 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 39 31 38 38 00 15 06 07
Address 0x30: dd ff ff ff ad 01 08 00 3c 8a b0 38 68 00 ff ff
Address 0x40: ff ff ff ff 01 49 50 4d 55 38 31 30 41 52 41 43
Address 0x50: 48 41 53 2d 42 50 2d 4d 58 32 30 31 30 2d 53 00
Address 0x60: 00 00 00 00 00 00 30 36 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f8 ff ff ff ff ff ff ff ff ff ff ff ff
Midplane 1    REV 02      711-044557  ABAB8729      Upper Backplane
Jedec Code:   0x7fb0          EEPROM Version: 0x01
P/N:          711-044557      S/N:          ABAB8729
Assembly ID:  0x0b65          Assembly Version: 01.02
Date:         03-21-2013      Assembly Flags: 0x00

```

```

Version:      REV 02
ID: Upper Backplane
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 0b 65 01 02 52 45 56 20 32 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 34 34 35 35 37 00 00
  Address 0x20: 53 2f 4e 20 41 42 41 42 38 37 32 39 00 15 03 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PMP          REV 04    711-032426    ACAJ2432    Power Midplane
Jedec Code:  0x7fb0          EEPROM Version: 0x01
P/N:         711-032426      S/N:         ACAJ2432
Assembly ID: 0x045d          Assembly Version: 01.04
Date:        03-28-2013      Assembly Flags: 0x00
Version:     REV 04
ID: Power Midplane
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 5d 01 04 52 45 56 20 34 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 34 32 36 00 00
  Address 0x20: 53 2f 4e 20 41 43 41 4a 32 34 33 32 00 1c 03 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board    REV 09    760-044634    ABCA4314    Front Panel Display
Jedec Code:  0x7fb0          EEPROM Version: 0x02
P/N:         760-044634      S/N:         ABCA4314
Assembly ID: 0x0b64          Assembly Version: 01.09
Date:        03-28-2013      Assembly Flags: 0x00
Version:     REV 09          CLEI Code:    IPMYA4EJRA
ID: Front Panel Display      FRU Model Number: MX2010-CRAFT-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b 64 01 09 52 45 56 20 39 00 00
  Address 0x10: 00 00 00 00 37 36 30 2d 30 34 34 36 33 34 00 00
  Address 0x20: 53 2f 4e 20 41 42 43 41 34 33 31 34 00 1c 03 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 4d 59 41 34 45 4a 52 41 4d
  Address 0x50: 58 32 30 31 30 2d 43 52 41 46 54 2d 53 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 93 ff ff ff ff ff ff ff ff ff ff ff ff ff
PSM 0        REV 01    740-050037    1EDB321015C    DC 52V Power Supply
Module
Jedec Code:  0x7fb0          EEPROM Version: 0x02
P/N:         740-050037      S/N:         1EDB321015C
Assembly ID: 0x0478          Assembly Version: 01.01
Date:        05-28-2013      Assembly Flags: 0x00
Version:     REV 01          CLEI Code:    IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 31 00 00

```

```

Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 35 43 00 00 1c 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 1          REV 01  740-050037  1EDB321015J  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:          740-050037      S/N:            1EDB321015J
Assembly ID:   0x0478         Assembly Version: 01.01
Date:         05-28-2013     Assembly Flags:  0x00
Version:      REV 01         CLEI Code:      IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 35 4a 00 00 1c 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 2          REV 01  740-050037  1EDB32000K8  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:          740-050037      S/N:            1EDB32000K8
Assembly ID:   0x0478         Assembly Version: 01.01
Date:         05-23-2013     Assembly Flags:  0x00
Version:      REV 01         CLEI Code:      IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 30 30 30 4b 38 00 00 17 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 3          REV 01  740-050037  1EDB32101JW  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:          740-050037      S/N:            1EDB32101JW
Assembly ID:   0x0478         Assembly Version: 01.01
Date:         05-30-2013     Assembly Flags:  0x00
Version:      REV 01         CLEI Code:      IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 4a 57 00 00 1e 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d

```

```

Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 4          REV 01   740-050037   1EDB321015G   DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB321015G
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-28-2013      Assembly Flags:   0x00
Version:       REV 01          CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 35 47 00 00 1c 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 5          REV 01   740-050037   1EDB32101HH   DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB32101HH
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-30-2013      Assembly Flags:   0x00
Version:       REV 01          CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 48 48 00 00 1e 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 6          REV 01   740-050037   1EDB32101HD   DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB32101HD
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-30-2013      Assembly Flags:   0x00
Version:       REV 01          CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 48 44 00 00 1e 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 7          REV 01   740-050037   1EDB321015F   DC 52V Power Supply

```

Module

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB321015F
Assembly ID: 0x0478     Assembly Version: 01.01
Date: 05-28-2013       Assembly Flags: 0x00
Version: REV 01        CLEI Code: IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S

```

Board Information Record:

```

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 35 46 00 00 1c 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00

```

```
PSM 8          REV 01  740-050037  1EDB321015B      DC 52V Power Supply
```

Module

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB321015B
Assembly ID: 0x0478     Assembly Version: 01.01
Date: 05-28-2013       Assembly Flags: 0x00
Version: REV 01        CLEI Code: IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S

```

Board Information Record:

```

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 35 42 00 00 1c 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00

```

```
PDM 0          REV 03  740-045234  1EFA3220433      DC Power Dist Module
```

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-045234        S/N: 1EFA3220433
Assembly ID: 0x047b     Assembly Version: 01.03
Date: 05-30-2013       Assembly Flags: 0x00
Version: REV 03        CLEI Code: IPUPAJSKAA
ID: DC Power Dist Module FRU Model Number: MX2000-PDM-DC-S

```

Board Information Record:

```

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 7b 01 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 32 33 34 00 00
Address 0x20: 31 45 46 41 33 32 32 30 34 33 33 00 00 1e 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4a 53 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 44 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 33 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 1d 00 00 00 00 00 00 00 00 00 00 00 00

```

```
PDM 1          REV 03  740-045234  1EFA3220425      DC Power Dist Module
```

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-045234        S/N: 1EFA3220425
Assembly ID: 0x047b     Assembly Version: 01.03
Date: 05-30-2013       Assembly Flags: 0x00
Version: REV 03        CLEI Code: IPUPAJSKAA

```

```

ID: DC Power Dist Module      FRU Model Number: MX2000-PDM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
..

```

show chassis hardware (MX2020 Router)

```
user@host > show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11E2227AFJ	MX2020
Midplane	REV 27	750-040240	ABAB9384	Lower Power Midplane
Midplane 1	REV 04	711-032386	ABAB9386	Upper Backplane
PMP 1	REV 05	711-032428	ACAJ1579	Upper Power Midplane
PMP 0	REV 04	711-032426	ACAJ1524	Lower Power Midplane
FPM Board	REV 06	760-040242	ABBT8837	Front Panel Display
PSM 0	REV 01	740-045050	1E022240056	DC 52V Power Supply
Module				
PSM 1	REV 01	740-045050	1E022240054	DC 52V Power Supply
Module				
PSM 2	REV 01	740-045050	1E02224005H	DC 52V Power Supply
Module				
PSM 3	REV 01	740-045050	1E022240053	DC 52V Power Supply
Module				
PSM 4	REV 01	740-045050	1E02224004K	DC 52V Power Supply
Module				
PSM 7	REV 01	740-045050	1E02224006W	DC 52V Power Supply
Module				
PSM 8	REV 01	740-045050	1E022240062	DC 52V Power Supply
Module				
PSM 9	REV 01	740-045050	1E02224005B	DC 52V Power Supply
Module				
PSM 10	REV 01	740-045050	1E02224005A	DC 52V Power Supply
Module				
PSM 11	REV 01	740-045050	1E022240052	DC 52V Power Supply
Module				
PSM 12	REV 01	740-045050	1E022240051	DC 52V Power Supply
Module				
PSM 13	REV 01	740-045050	1E022240058	DC 52V Power Supply
Module				
PSM 14	REV 01	740-045050	1E02224004L	DC 52V Power Supply
Module				
PSM 15	REV 01	740-045050	1E02224005M	DC 52V Power Supply
Module				
PSM 16	REV 01	740-045050	1E02224006S	DC 52V Power Supply
Module				
PSM 17	REV 01	740-045050	1E02224005Z	DC 52V Power Supply
Module				
PDM 0	REV 01	740-045234	1E012150033	DC Power Dist Module
PDM 1	REV 01	740-045234	1E012150027	DC Power Dist Module
PDM 2	REV 01	740-045234	1E012150028	DC Power Dist Module
PDM 3	REV 01	740-045234	1E012150045	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009089704	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009094138	RE-S-1800x4
CB 0	REV 14	750-040257	CAAF8430	Control Board
CB 1	REV 08	750-040257	CAAB3482	Control Board
SPMB 0	REV 01	711-041855	ZS2290	PMB Board
SPMB 1	REV 02	711-041855	CAAA6141	PMB Board
SFB 0	REV 03	711-044466	ABBV6789	Switch Fabric Board
SFB 1	REV 05	711-044466	ABBX5666	Switch Fabric Board
SFB 2	REV 05	711-044466	ABBX5678	Switch Fabric Board

SFB 3	REV 05	711-044466	ABBX5687	Switch Fabric Board
SFB 4	REV 05	711-044466	ABBX5609	Switch Fabric Board
SFB 5	REV 05	711-044466	ABBX5675	Switch Fabric Board
SFB 6	REV 03	711-044466	ABBV6805	Switch Fabric Board
SFB 7	REV 05	711-044466	ABBX5701	Switch Fabric Board
FPC 0	REV 30	750-028467	ABBN0284	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0507	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00990	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E04357	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01327	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04375	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02760	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02904	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E03963	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00756	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04418	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01077	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01128	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01253	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E01140	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01626	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01075	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01177	SFP+-10G-USR
FPC 1	REV 30	750-028467	ABBN0208	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ1084	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04745	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01570	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E04388	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01439	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04739	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01869	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01675	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01901	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01346	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01288	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01824	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04312	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02811	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E03847	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01495	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01265	SFP+-10G-USR
FPC 2	REV 30	750-028467	ZM5111	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZP6607	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LJA	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MFZ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKL	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KF4	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80FBJ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MM2	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LJV	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NXV	SFP+-10G-SR

PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N1H	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLS	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FL5	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL9	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NG2	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80KDU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80MG1	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80MM0	SFP+-10G-SR
FPC 3	REV 30	750-028467	ABBN0302	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0495	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01581	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01176	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01251	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02752	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00786	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01020	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01023	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02819	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02812	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11D04437	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01279	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01333	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00978	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01018	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01784	SFP+-10G-USR
Xcvr 3	REV 01	740-031980	AK80NKP	SFP+-10G-SR
FPC 4	REV 30	750-028467	ABBN0308	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ1095	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04305	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01147	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01195	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01743	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01892	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02880	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00725	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01057	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02816	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11C04501	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E02764	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00789	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01250	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02847	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00787	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E03803	SFP+-10G-USR
FPC 5	REV 30	750-028467	ABBN0316	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ1082	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00523	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01848	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01865	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00540	SFP+-10G-SR

PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00422	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00428	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K00423	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01855	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K01847	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00526	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K00529	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00525	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00425	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00530	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01851	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00528	SFP+-10G-SR
FPC 6	REV 32	750-028467	ABBN6832	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6534	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MB4	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FQ6	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N1F	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLQ	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80KDR	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FGJ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N5G	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KD8	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LET	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80N1X	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NRF	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL2	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N3D	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MRB	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LEQ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LER	SFP+-10G-SR
FPC 7	REV 32	750-028467	ABBN6811	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7288	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NK8	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80LJG	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LBU	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N21	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEU	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLM	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NL6	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LES	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEN	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80ME0	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LMG	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80MM1	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MG7	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80KF9	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NRQ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLE	SFP+-10G-SR
FPC 8	REV 23	750-028467	YN2977	MPC 3D 16x 10GE
CPU	REV 10	711-029089	YP1856	AMPC PMB

PIC 0			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00875	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	183363A00851	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	183363A00772	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	183363A00882	SFP+-10G-SR	
PIC 1			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00735	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	183363A00169	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	183363A00726	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	183363A00077	SFP+-10G-SR	
PIC 2			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00168	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	183363A00676	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	183363A00732	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	183363A00091	SFP+-10G-SR	
PIC 3			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00725	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	183363A00642	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	183363A00871	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	183363A00853	SFP+-10G-SR	
FPC 9	REV 32	750-028467	ABBN6798	MPC 3D 16x 10GE	
CPU	REV 10	711-029089	ABBK6556	AMPC PMB	
PIC 0			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	9ZDZ06A00055	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	183363A00239	SFP+-10G-SR	
Xcvr 2	REV 01	740-021308	AD0915E003K	SFP+-10G-SR	
Xcvr 3	REV 01	740-021308	AD0915E003A	SFP+-10G-SR	
PIC 1			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MRC	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	AK80NL5	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	AK80NKN	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	AK80N3U	SFP+-10G-SR	
PIC 2			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N1T	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	AJ808DJ	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	AK80NG4	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	AK80FND	SFP+-10G-SR	
PIC 3			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80FKQ	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	AK80NLT	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	AK80NKR	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	AK80LKM	SFP+-10G-SR	
FPC 10	REV 32	750-028467	ABBN6813	MPC 3D 16x 10GE	
CPU	REV 10	711-029089	ABBK6542	AMPC PMB	
PIC 0			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NA3	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	AK80NLF	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	AK80MRH	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	AK80KE4	SFP+-10G-SR	
PIC 1			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00030	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	AK80L9H	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	AK80ME8	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	AK80NLR	SFP+-10G-SR	
PIC 2			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NG1	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	AK80MCA	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	AK80LFC	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	AK80LEM	SFP+-10G-SR	
PIC 3			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N9X	SFP+-10G-SR	

Xcvr 1	REV 01	740-031980	AK80LAC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LF2	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N8T	SFP+-10G-SR
FPC 11	REV 30	750-028467	ABBN0281	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0526	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01326	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E03973	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00950	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00674	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00775	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E04461	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01074	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02821	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04501	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00757	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01623	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01022	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04359	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02751	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E02736	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01178	SFP+-10G-USR
FPC 12	REV 32	750-028467	ABBN6796	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7259	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K01856	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01853	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01863	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02863	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02668	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02881	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01671	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02627	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02725	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02692	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02730	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03081	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02736	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02568	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02747	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02579	SFP+-10G-SR
FPC 13	REV 30	750-028467	ABBN0270	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ0966	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NL1	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NXW	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KD2	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80FMD	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NKQ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MGH	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N38	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL7	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEL	SFP+-10G-SR

Xcvr 1	REV 01	740-031980	AK80NKD	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KCY	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LHK	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80M5J	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MBE	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NLG	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LFH	SFP+-10G-SR
FPC 14	REV 32	750-028467	ABBN6790	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6515	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LZM	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MCC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KCM	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KE0	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021310	C10F99155	SFP+-10G-LRM
Xcvr 1	REV 01	740-021310	C10F99049	SFP+-10G-LRM
Xcvr 2	REV 01	740-021310	C10F99128	SFP+-10G-LRM
Xcvr 3	REV 01	740-021310	C10F99169	SFP+-10G-LRM
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LF3	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02597	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A03060	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03057	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEX	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FEU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FNM	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AJQQQ5G	SFP+-10G-SR
FPC 15	REV 32	750-028467	ABBN6791	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7289	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00424	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01849	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01862	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01852	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00427	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00430	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01854	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00426	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00429	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01864	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01850	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00522	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E01144	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00985	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00796	SFP+-10G-USR
Xcvr 3	REV 01	740-031980	B11K01866	SFP+-10G-SR
FPC 16	REV 30	750-028467	ABBM4592	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0465	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01435	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01052	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01328	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01254	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02738	SFP+-10G-USR

Xcvr 1	REV 01	740-030658	B11E02881	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01624	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00889	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02883	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00681	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E04306	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02813	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01801	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02753	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01156	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04324	SFP+-10G-USR
FPC 17	REV 32	750-028467	ABBN6810	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7237	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02638	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02082	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01674	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03058	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03048	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02729	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02566	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02567	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02878	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02739	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01959	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02660	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02731	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02588	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02673	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02654	SFP+-10G-SR
FPC 18	REV 30	750-028467	ABBM4739	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0487	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02569	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02886	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A03082	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	133363A00297	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02726	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A03050	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02884	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03076	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02581	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02873	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02582	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03083	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031981	UL70BU6	SFP+-10G-LR
Xcvr 1	REV 01	740-031981	UL50QC6	SFP+-10G-LR
Xcvr 2	REV 01	740-031981	UL708N6	SFP+-10G-LR
Xcvr 3	REV 01	740-031981	UL603KK	SFP+-10G-LR
FPC 19	REV 32	750-028467	ABBN6827	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6508	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A01688	SFP+-10G-SR

Xcvr 1	REV 01	740-031980	163363A01724	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01773	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02593	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03061	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A03056	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02669	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03070	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02572	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02697	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02585	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03052	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02591	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02649	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02577	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02698	SFP+-10G-SR
ADC 0	REV 13	750-043596	ABBX5561	Adapter Card
ADC 1	REV 13	750-043596	ABBX5546	Adapter Card
ADC 2	REV 13	750-043596	ABBX5535	Adapter Card
ADC 3	REV 13	750-043596	ABBX5552	Adapter Card
ADC 4	REV 13	750-043596	ABBX5581	Adapter Card
ADC 5	REV 13	750-043596	ABBX5545	Adapter Card
ADC 6	REV 13	750-043596	ABBX5554	Adapter Card
ADC 7	REV 07	750-043596	ABBV7194	Adapter Card
ADC 8	REV 07	750-043596	ABBV7251	Adapter Card
ADC 9	REV 07	750-043596	ABBV7202	Adapter Card
ADC 10	REV 13	750-043596	ABBX5538	Adapter Card
ADC 11	REV 13	750-043596	ABBX5566	Adapter Card
ADC 12	REV 13	750-043596	ABBX5542	Adapter Card
ADC 13	REV 13	750-043596	ABBX5539	Adapter Card
ADC 14	REV 13	750-043596	ABBX5555	Adapter Card
ADC 15	REV 13	750-043596	ABBX5557	Adapter Card
ADC 16	REV 13	750-043596	ABBX5536	Adapter Card
ADC 17	REV 13	750-043596	ABBX5559	Adapter Card
ADC 18	REV 13	750-043596	ABBX5537	Adapter Card
ADC 19	REV 11	750-043596	ABBW5685	Adapter Card
Fan Tray 0	REV 2A	760-046960	ACAY0030	172mm FanTray - 6 Fans
Fan Tray 1	REV 2A	760-046960	ACAY0039	172mm FanTray - 6 Fans
Fan Tray 2	REV 2A	760-046960	ACAY0033	172mm FanTray - 6 Fans
Fan Tray 3	REV 2A	760-046960	ACAY0062	172mm FanTray - 6 Fans

show chassis hardware detail (MX2020 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN11E2227AFJ	MX2020
Midplane	REV 27	750-040240	ABAB9384	Lower Power Midplane
Midplane 1	REV 04	711-032386	ABAB9386	Upper Backplane
PMP 1	REV 05	711-032428	ACAJ1821	Upper Power Midplane
PMP 0	REV 04	711-032426	ACAJ1524	Lower Power Midplane
FPM Board	REV 06	760-040242	ABBT8837	Front Panel Display
PSM 0	REV 01	740-045050	1E02224006G	DC 52V Power Supply
Module				
PSM 1	REV 01	740-045050	1E022240053	DC 52V Power Supply
Module				
PSM 2	REV 01	740-045050	1E02224004K	DC 52V Power Supply
Module				
PSM 3	REV 01	740-045050	1E022240056	DC 52V Power Supply

Module				
PSM 4	REV 01	740-045050	1E022240054	DC 52V Power Supply
Module				
PSM 5	REV 01	740-045050	1E02224005H	DC 52V Power Supply
Module				
PSM 6	REV 01	740-045050	1E02224006S	DC 52V Power Supply
Module				
PSM 7	REV 01	740-045050	1E02224005M	DC 52V Power Supply
Module				
PSM 8	REV 01	740-045050	1E022240062	DC 52V Power Supply
Module				
PSM 9	REV 03	740-045050	1EDB2350095	DC 52V Power Supply
Module				
PSM 10	REV 03	740-045050	1EDB235009L	DC 52V Power Supply
Module				
PSM 11	REV 03	740-045050	1EDB2350092	DC 52V Power Supply
Module				
PSM 12	REV 03	740-045050	1EDB23500AT	DC 52V Power Supply
Module				
PSM 13	REV 03	740-045050	1EDB2350094	DC 52V Power Supply
Module				
PSM 15	REV 03	740-045050	1EDB235008X	DC 52V Power Supply
Module				
PDM 0	REV 01	740-045234	1E012150033	DC Power Dist Module
PDM 1	REV 01	740-045234	1E012150027	DC Power Dist Module
PDM 2	REV 01	740-045234	1E262250072	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009094138	RE-S-1800x4
ad0	3998 MB	Virtium - TuffDisk	VCf3 20110825A021D0000064	Compact Flash
ad1	30533 MB	UGB94ARF32H0S3-KC	UNIGEN-499551-000347	Disk 1
usb0 (addr 1)		EHCI root hub 0	Intel	uhub0
usb0 (addr 2)		product 0x0020 32	vendor 0x8087	uhub1
DIMM 0		SGU04G72H1BD2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80
DIMM 1		SGU04G72H1BD2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80
DIMM 2		SGU04G72H1BD2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80
DIMM 3		SGU04G72H1BD2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80
Routing Engine 1	REV 02	740-041821	9009089709	RE-S-1800x4
ad0	3831 MB	UGB30SFA4000T1	SFA4000T1 00000113	Compact Flash
ad1	30533 MB	UGB94ARF32H0S3-KC	UNIGEN-478612-001044	Disk 1
CB 0	REV 08	750-040257	CAAB3482	Control Board
CB 1	REV 04	750-040257	ZT2864	Control Board
SPMB 0	REV 02	711-041855	CAA6141	PMB Board
SPMB 1	REV 01	711-041855	ZS2275	PMB Board
SFB 0	REV 05	711-044466	ABBT2161	Switch Fabric Board
SFB 1	REV 05	711-044466	ABBT2159	Switch Fabric Board
SFB 2	REV 05	711-044466	ABBX3718	Switch Fabric Board
SFB 3	REV 05	711-044466	ABBT2152	Switch Fabric Board
SFB 4	REV 05	711-044466	ABBT2160	Switch Fabric Board
SFB 5	REV 05	711-044466	ABBT2145	Switch Fabric Board
SFB 6	REV 05	711-044466	ABBT2150	Switch Fabric Board
SFB 7	REV 05	711-044466	ABBT2163	Switch Fabric Board
FPC 0	REV 30	750-028467	ABBN0284	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0507	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00990	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E04357	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01327	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04375	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02760	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02904	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E03963	SFP+-10G-USR

Xcvr 3	REV 01	740-030658	B11E00756	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04418	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01077	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01128	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01253	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E01140	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01626	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01075	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01177	SFP+-10G-USR
FPC 1	REV 30	750-028467	ABBN0308	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ1095	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04305	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01147	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01195	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01743	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01892	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02880	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00725	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01057	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02816	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11C04501	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E02764	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00789	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01250	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02847	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00787	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E03803	SFP+-10G-USR
FPC 2	REV 30	750-028467	ABBN0316	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ1082	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00523	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01848	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01865	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00540	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00422	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00428	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K00423	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01855	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K01847	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00526	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K00529	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00525	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00425	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00530	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01851	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00528	SFP+-10G-SR
FPC 3	REV 32	750-028467	ABBN6832	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6534	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MB4	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FQ6	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N1F	SFP+-10G-SR

Xcvr 3	REV 01	740-031980	AK80NLQ	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80KDR	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FGJ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N5G	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KD8	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LET	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80N1X	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NRF	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL2	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N3D	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MRB	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LEQ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LER	SFP+-10G-SR
FPC 4	REV 32	750-028467	ABBN6811	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7288	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NK8	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80LJG	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LBU	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N21	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEU	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLM	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NL6	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LES	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEN	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80ME0	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LMG	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80MM1	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MG7	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80KF9	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NRQ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLE	SFP+-10G-SR
FPC 5	REV 32	750-028467	ABBN6791	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7289	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00424	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01849	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01862	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01852	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP
Xcvr 0	REV 01	740-031980	B11K00427	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00430	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01854	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00426	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00429	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01864	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01850	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00522	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E01144	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00985	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00796	SFP+-10G-USR
Xcvr 3	REV 01	740-031980	B11K01866	SFP+-10G-SR
FPC 6	REV 30	750-028467	ABBM4592	MPC 3D 16x 10GE

CPU	REV 10	711-029089	ABBN0465	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01435	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01052	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01328	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01254	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02738	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02881	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01624	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00889	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02883	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00681	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E04306	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02813	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01801	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02753	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01156	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04324	SFP+-10G-USR
FPC 7	REV 32	750-028467	ABBN6810	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7237	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03058	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02082	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01674	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02638	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03048	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02729	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02566	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02567	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02878	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02739	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01959	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02660	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02731	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02588	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02673	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02654	SFP+-10G-SR
FPC 8	REV 30	750-028467	ABBM4739	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0487	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02569	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02886	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A03082	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	133363A00297	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02726	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A03050	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02884	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03076	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02581	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02873	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02582	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03083	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-031981	UL70BU6	SFP+-10G-LR
Xcvr 1	REV 01	740-031981	UL50QC6	SFP+-10G-LR
Xcvr 2	REV 01	740-031981	UL708N6	SFP+-10G-LR
Xcvr 3	REV 01	740-031981	UL603KK	SFP+-10G-LR
FPC 9	REV 32	750-028467	ABBN6827	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6508	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A01688	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A01724	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01773	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02593	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03061	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A03056	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02669	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03070	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02572	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02697	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02585	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03052	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02591	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02649	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02577	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02698	SFP+-10G-SR
FPC 10	REV 30	750-028467	ABBN0302	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0495	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01581	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01176	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01251	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02752	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00786	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01020	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01023	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02819	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02812	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11D04437	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01279	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01333	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00978	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01018	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01784	SFP+-10G-USR
Xcvr 3	REV 01	740-031980	AK80NKP	SFP+-10G-SR
FPC 11	REV 32	750-028467	ABBN6790	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6515	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LZM	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MCC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KCM	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KE0	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021310	C10F99155	SFP+-10G-LRM
Xcvr 1	REV 01	740-021310	C10F99049	SFP+-10G-LRM
Xcvr 2	REV 01	740-021310	C10F99128	SFP+-10G-LRM
Xcvr 3	REV 01	740-021310	C10F99169	SFP+-10G-LRM
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-031980	AK80LF3	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02597	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A03060	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03057	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEX	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FEU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FNM	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AJQQQ5G	SFP+-10G-SR
FPC 12	REV 30	750-028467	ZM5111	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZP6607	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LJA	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MFZ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKL	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KF4	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80FBJ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MM2	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LJV	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NXV	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N1H	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLS	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FL5	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL9	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NG2	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80KDU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80MG1	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80MM0	SFP+-10G-SR
FPC 13	REV 30	750-028467	ABBN0208	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABB11084	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04745	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01570	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E04388	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01439	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04739	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01869	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01675	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01901	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01346	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01288	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01824	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04312	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02811	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E03847	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01495	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01265	SFP+-10G-USR
FPC 14	REV 23	750-028467	YN2977	MPC 3D 16x 10GE
CPU	REV 10	711-029089	YP1856	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00875	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00851	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00772	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00882	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-031980	183363A00735	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00169	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00726	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00077	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00168	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00676	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00732	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00091	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00725	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00642	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00871	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00853	SFP+-10G-SR
FPC 15	REV 32	750-028467	ABBN6798	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6556	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	9ZDZ06A00055	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00239	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AD0915E003K	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AD0915E003A	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MRC	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NL5	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKN	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N3U	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N1T	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ808DJ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NG4	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80FND	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80FKQ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLT	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKR	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LKM	SFP+-10G-SR
FPC 16	REV 30	750-028467	ABBN0270	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ0966	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NL1	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NXW	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KD2	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80FMD	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NKQ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MGH	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N38	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL7	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80M5J	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NKD	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KCY	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LHK	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEL	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MBE	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NLG	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LFH	SFP+-10G-SR
FPC 17	REV 32	750-028467	ABBN6796	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7259	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-031980	B11K01856	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01853	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01863	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02863	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02668	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02881	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01671	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02627	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02725	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02692	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02730	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03081	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02736	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02568	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02747	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02579	SFP+-10G-SR
FPC 18	REV 30	750-028467	ABBN0281	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0526	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01326	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E03973	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00950	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00674	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00775	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E04461	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01074	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02821	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04501	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00757	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01623	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01022	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04359	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02751	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E02736	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01178	SFP+-10G-USR
FPC 19	REV 32	750-028467	ABBN6813	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6542	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NA3	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLF	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80MRH	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KE4	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00030	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80L9H	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80ME8	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLR	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NG1	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MCA	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LFC	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LEM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N9X	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80LAC	SFP+-10G-SR

Xcvr 2	REV 01	740-031980	AK80LF2	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N8T	SFP+-10G-SR
ADC 0	REV 13	750-043596	ABBX5561	Adapter Card
ADC 1	REV 13	750-043596	ABBX5546	Adapter Card
ADC 2	REV 13	750-043596	ABBX5535	Adapter Card
ADC 3	REV 13	750-043596	ABBX5552	Adapter Card
ADC 4	REV 13	750-043596	ABBX5581	Adapter Card
ADC 5	REV 13	750-043596	ABBX5545	Adapter Card
ADC 6	REV 13	750-043596	ABBX5554	Adapter Card
ADC 7	REV 07	750-043596	ABBV7194	Adapter Card
ADC 8	REV 07	750-043596	ABBV7251	Adapter Card
ADC 9	REV 07	750-043596	ABBV7202	Adapter Card
ADC 10	REV 13	750-043596	ABBX5579	Adapter Card
ADC 11	REV 13	750-043596	ABBX5548	Adapter Card
ADC 12	REV 13	750-043596	ABBX5575	Adapter Card
ADC 13	REV 13	750-043596	ABBX5539	Adapter Card
ADC 14	REV 13	750-043596	ABBX5555	Adapter Card
ADC 15	REV 13	750-043596	ABBX5557	Adapter Card
ADC 16	REV 13	750-043596	ABBX5536	Adapter Card
ADC 17	REV 13	750-043596	ABBX5559	Adapter Card
ADC 18	REV 13	750-043596	ABBX5537	Adapter Card
ADC 19	REV 11	750-043596	ABBW5685	Adapter Card
Fan Tray 0	REV 04	760-046960	ACAY0090	172mm FanTray - 6 Fans
Fan Tray 1	REV 04	760-046960	ACAY0088	172mm FanTray - 6 Fans
Fan Tray 2	REV 04	760-046960	ACAY0089	172mm FanTray - 6 Fans
Fan Tray 3	REV 04	760-046960	ACAY0108	172mm FanTray - 6 Fans

show chassis hardware models (MX2020 Router)

```
user@host > show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 27	750-040240	ABAB9384	750-040240
FPM Board	REV 06	760-040242	ABBT8837	760-040242
PSM 0	REV 01	740-045050	1E02224006G	MX2000-PSM-HC-DC-S-A
PSM 1	REV 01	740-045050	1E022240053	MX2000-PSM-HC-DC-S-A
PSM 2	REV 01	740-045050	1E02224004K	MX2000-PSM-HC-DC-S-A
PSM 3	REV 01	740-045050	1E022240056	MX2000-PSM-HC-DC-S-A
PSM 4	REV 01	740-045050	1E022240054	MX2000-PSM-HC-DC-S-A
PSM 5	REV 01	740-045050	1E02224005H	MX2000-PSM-HC-DC-S-A
PSM 6	REV 01	740-045050	1E02224006S	MX2000-PSM-HC-DC-S-A
PSM 7	REV 01	740-045050	1E02224005M	MX2000-PSM-HC-DC-S-A
PSM 8	REV 01	740-045050	1E022240062	MX2000-PSM-HC-DC-S-A
PSM 9	REV 03	740-045050	1EDB2350095	MX2000-PSM-DC-S-A
PSM 10	REV 03	740-045050	1EDB235009L	MX2000-PSM-DC-S-A
PSM 11	REV 03	740-045050	1EDB2350092	MX2000-PSM-DC-S-A
PSM 12	REV 03	740-045050	1EDB23500AT	MX2000-PSM-DC-S-A
PSM 13	REV 03	740-045050	1EDB2350094	MX2000-PSM-DC-S-A
PSM 15	REV 03	740-045050	1EDB235008X	MX2000-PSM-DC-S-A
PDM 0	REV 01	740-045234	1E012150033	
PDM 1	REV 01	740-045234	1E012150027	
PDM 2	REV 01	740-045234	1E262250072	MX2000-PDM-DC-S-A
Routing Engine 0	REV 02	740-041821	9009094138	RE-S-1800X4-16G-S
Routing Engine 1	REV 02	740-041821	9009089709	RE-S-1800X4-16G-S
CB 0	REV 08	750-040257	CAAB3482	750-040257
CB 1	REV 04	750-040257	ZT2864	750-040257
SFB 0	REV 05	711-044466	ABBT2161	MX2000-SFB-S
SFB 1	REV 05	711-044466	ABBT2159	MX2000-SFB-S
SFB 2	REV 05	711-044466	ABBX3718	MX2000-SFB-S
SFB 4	REV 05	711-044466	ABBT2160	MX2000-SFB-S
SFB 5	REV 05	711-044466	ABBT2145	MX2000-SFB-S

SFB 7	REV 05	711-044466	ABBT2163	MX2000-SFB-S
FPC 0	REV 30	750-028467	ABBN0284	MPC-3D-16XGE-SFPP
FPC 1	REV 30	750-028467	ABBN0308	MPC-3D-16XGE-SFPP
FPC 2	REV 30	750-028467	ABBN0316	MPC-3D-16XGE-SFPP
FPC 3	REV 32	750-028467	ABBN6832	MPC-3D-16XGE-SFPP
FPC 4	REV 32	750-028467	ABBN6811	MPC-3D-16XGE-SFPP
FPC 5	REV 32	750-028467	ABBN6791	MPC-3D-16XGE-SFPP
FPC 6	REV 30	750-028467	ABBM4592	MPC-3D-16XGE-SFPP
FPC 7	REV 32	750-028467	ABBN6810	MPC-3D-16XGE-SFPP
FPC 8	REV 30	750-028467	ABBM4739	MPC-3D-16XGE-SFPP
FPC 9	REV 32	750-028467	ABBN6827	MPC-3D-16XGE-SFPP
FPC 10	REV 30	750-028467	ABBN0302	MPC-3D-16XGE-SFPP
FPC 11	REV 32	750-028467	ABBN6790	MPC-3D-16XGE-SFPP
FPC 12	REV 30	750-028467	ZM5111	MPC-3D-16XGE-SFPP
FPC 13	REV 30	750-028467	ABBN0208	MPC-3D-16XGE-SFPP
FPC 14	REV 23	750-028467	YN2977	MPC-3D-16XGE-SFPP
FPC 15	REV 32	750-028467	ABBN6798	MPC-3D-16XGE-SFPP
FPC 16	REV 30	750-028467	ABBN0270	MPC-3D-16XGE-SFPP
FPC 17	REV 32	750-028467	ABBN6796	MPC-3D-16XGE-SFPP
FPC 18	REV 30	750-028467	ABBN0281	MPC-3D-16XGE-SFPP
FPC 19	REV 32	750-028467	ABBN6813	MPC-3D-16XGE-SFPP
ADC 0	REV 13	750-043596	ABBX5561	PROTO-ASSEMBLY
ADC 1	REV 13	750-043596	ABBX5546	PROTO-ASSEMBLY
ADC 2	REV 13	750-043596	ABBX5535	MX2000-LC-ADAPTER
ADC 3	REV 13	750-043596	ABBX5552	MX2000-LC-ADAPTER
ADC 4	REV 13	750-043596	ABBX5581	MX2000-LC-ADAPTER
ADC 5	REV 13	750-043596	ABBX5545	PROTO-ASSEMBLY
ADC 6	REV 13	750-043596	ABBX5554	PROTO-ASSEMBLY
ADC 7	REV 07	750-043596	ABBV7194	MX2000-LC-ADAPTER
ADC 8	REV 07	750-043596	ABBV7251	MX2000-LC-ADAPTER
ADC 9	REV 07	750-043596	ABBV7202	MX2000-LC-ADAPTER
ADC 10	REV 13	750-043596	ABBX5579	MX2000-LC-ADAPTER
ADC 12	REV 13	750-043596	ABBX5575	MX2000-LC-ADAPTER
ADC 13	REV 13	750-043596	ABBX5539	PROTO-ASSEMBLY
ADC 14	REV 13	750-043596	ABBX5555	PROTO-ASSEMBLY
ADC 15	REV 13	750-043596	ABBX5557	MX2000-LC-ADAPTER
ADC 16	REV 13	750-043596	ABBX5536	PROTO-ASSEMBLY
ADC 17	REV 13	750-043596	ABBX5559	PROTO-ASSEMBLY
ADC 18	REV 13	750-043596	ABBX5537	PROTO-ASSEMBLY
ADC 19	REV 11	750-043596	ABBW5685	PROTO-ASSEMBLY
Fan Tray 0	REV 04	760-046960	ACAY0090	
Fan Tray 1	REV 04	760-046960	ACAY0088	
Fan Tray 2	REV 04	760-046960	ACAY0089	
Fan Tray 3	REV 04	760-046960	ACAY0108	

show chassis hardware clei-models (MX2020 Router)

```
user@ host > show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 27	750-040240	PROTOXCLEI	750-040240
FPM Board	REV 06	760-040242	PROTOXCLEI	760-040242
PSM 0	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 1	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 2	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 3	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 4	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 5	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 6	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 7	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 8	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A

PSM 9	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 10	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 11	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 12	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 13	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 15	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PDM 0	REV 01	740-045234		
PDM 1	REV 01	740-045234		
PDM 2	REV 01	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S-A
Routing Engine 0	REV 02	740-041821		RE-S-1800X4-16G-S
Routing Engine 1	REV 02	740-041821		RE-S-1800X4-16G-S
CB 0	REV 08	750-040257	PROTOXCLEI	750-040257
CB 1	REV 04	750-040257	PROTOXCLEI	750-040257
SFB 0	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 1	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 2	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 4	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 5	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 7	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
FPC 0	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 1	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 2	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 3	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 4	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 5	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 6	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 7	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 8	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 9	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 10	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 11	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 12	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 13	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 14	REV 23	750-028467		MPC-3D-16XGE-SFPP
FPC 15	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 16	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 17	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 18	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 19	REV 32	750-028467		MPC-3D-16XGE-SFPP
ADC 0	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 1	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 2	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 3	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 4	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 5	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 6	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 7	REV 07	750-043596	PROTOXCLEI	MX2000-LC-ADAPTER
ADC 8	REV 07	750-043596	PROTOXCLEI	MX2000-LC-ADAPTER
ADC 9	REV 07	750-043596	PROTOXCLEI	MX2000-LC-ADAPTER
ADC 10	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 12	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 13	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 14	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 15	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 16	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 17	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 18	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 19	REV 11	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
Fan Tray 0	REV 04	760-046960		
Fan Tray 1	REV 04	760-046960		

```

Fan Tray 2      REV 04    760-046960
Fan Tray 3      REV 04    760-046960

```

show chassis hardware (MX2020 Router with MPC5EQ and MPC6E)

```

user@host> show chassis hardware
Hardware inventory:
Item             Version  Part number  Serial number  Description
Chassis                               JN120BADBAFJ  MX2020
Midplane          REV 51    750-040240  ABAB9243      Lower Backplane
Midplane 1        REV 04    711-032386  ABAB9399      Upper Backplane
PMP 1             REV 05    711-032428  ACAJ2541      Upper Power Midplane
PMP 0             REV 04    711-032426  ACAJ2194      Lower Power Midplane
FPM Board         REV 13    760-040242  ABCA8835      Front Panel Display
PSM 0             REV 01    740-050037  1EDB32403L5   DC 52V Power Supply
Module
PSM 1             REV 01    740-050037  1EDB32403L3   DC 52V Power Supply
Module
PSM 2             REV 01    740-050037  1EDB32403KM   DC 52V Power Supply
Module
PSM 3             REV 01    740-050037  1EDB3130079   DC 52V Power Supply
Module
PSM 4             REV 01    740-050037  1EDB3130077   DC 52V Power Supply
Module
PSM 5             REV 01    740-050037  1EDB3130020   DC 52V Power Supply
Module
PSM 6             REV 01    740-050037  1EDB313009S   DC 52V Power Supply
Module
PSM 7             REV 01    740-050037  1EDB313008E   DC 52V Power Supply
Module
PSM 8             REV 01    740-050037  1EDB3130063   DC 52V Power Supply
Module
PSM 12            REV 01    740-050037  1EDB3130026   DC 52V Power Supply
Module
PSM 13            REV 01    740-050037  1EDB3130074   DC 52V Power Supply
Module
PSM 14            REV 01    740-050037  1EDB313009D   DC 52V Power Supply
Module
PSM 15            REV 01    740-050037  1EDB3130024   DC 52V Power Supply
Module
PSM 16            REV 01    740-050037  1EDB3130054   DC 52V Power Supply
Module
PSM 17            REV 01    740-050037  1EDB3130080   DC 52V Power Supply
Module
PDM 0             REV 03    740-045234  1EGA3170144   DC Power Dist Module
PDM 1             REV 03    740-045234  1EGA3170158   DC Power Dist Module
PDM 2             REV 03    740-045234  1EGA3170182   DC Power Dist Module
PDM 3             REV 03    740-045234  1EGA3170207   DC Power Dist Module
Routing Engine 0  REV 02    740-041821  9009112112    RE-S-1800x4
Routing Engine 1  REV 02    740-041821  9009112087    RE-S-1800x4
CB 0              REV 23    750-040257  CABA2295      Control Board
CB 1              REV 23    750-040257  CABE8379      Control Board
SPMB 0           REV 02    711-041855  ABCE8851      PMB Board
SPMB 1           REV 02    711-041855  ABCE8839      PMB Board
SFB 0            REV 06    711-044466  ABCD5001      Switch Fabric Board
SFB 1            REV 06    711-044466  ABCD5034      Switch Fabric Board
SFB 2            REV 06    711-044466  ABCH3899      Switch Fabric Board
SFB 3            REV 06    711-044466  ABCD5020      Switch Fabric Board
SFB 4            REV 06    711-044466  ABCD4975      Switch Fabric Board
SFB 5            REV 06    711-044466  ABCH3881      Switch Fabric Board
SFB 6            REV 06    711-044466  ABCD5026      Switch Fabric Board

```

SFB 7	REV 06	711-044466	ABCD5032	Switch Fabric Board
FPC 0	REV 39	750-045715	CACD1902	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACB1933	RMPD PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	B11F00361	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	19T511101854	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	19T511100377	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	ANT0878	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	19T511100398	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQ4363J	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	19T511101377	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	ANT072M	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AG90C7N	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AM30M09	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B10E01016	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	B10L04151	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	19T511101379	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ5036J	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AG90C4M	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	19T511101104	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQ502ZM	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AN10KY2	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ43G41	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQ41F04	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AMS16N3	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AMH04Y3	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	ANA093E	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 09	750-049136	CABN0410	MPC5E 24XGE OTN Mezz
FPC 1	REV 11	750-045372	CABK8112	MPCE Type 3 3D
CPU	REV 08	711-035209	CABJ6621	HMPD PMB 2G
MIC 0	REV 07	750-033307	CAAZ2897	10X10GE SFPP
PIC 0		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-021308	AQ501VK	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501YC	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ43HJF	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43H8D	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	19T511100370	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	153363A00763	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	APH2LXB	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AMCOLVV	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B11F00230	SFP+-10G-SR
MIC 1	REV 14	750-033196	CAAP1390	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-032166	XB11F000M	CFP2-100G-SR10
FPC 2	REV 17	750-037355	CAAS5826	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAR3986	HMPD PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	T09F43722	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	ALPOKXF	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502FG	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502T7	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00571	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	AJ71KEH	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11E01355	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11F00249	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP

FPC 3	REV 05	750-044444	CAAY9920	MPCE Type 2 3D P
CPU	REV 04	711-038484	CAAW3639	MPCE PMB 2G
MIC 0	REV 28	750-028387	CAAX1083	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	CC07BK05B	XFP-10G-SR
Xcvr 1	REV 01	740-011571	C728XJ00U	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T12L92339	XFP-10G-SR
QXM 0	REV 06	711-028408	CAAW4915	MPC QXM
QXM 1	REV 06	711-028408	CAAW4894	MPC QXM
FPC 4	REV 18	750-046005	CACH5661	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACF2880	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03Y	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-049775	J13K72997	CFP2-100G-LR4-D
FPC 5	REV 35	750-028467	CAAR2623	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAR0491	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ5027T	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502J0	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ5027S	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ501Y7	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ501YB	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ503EB	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ43HJH	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43J0Y	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ50352	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501X6	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502NV	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502ZJ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ502H4	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43HJK	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJ30CU7	SFP+-10G-SR
FPC 9	REV 30	750-044130	ABCF5773	MPC6E 3D
CPU	REV 09	711-045719	ABCF1270	RMPC PMB
MIC 0	REV 05	750-049457	ABCD7829	2X100GE CFP2 OTN
PIC 0		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000K	CFP2-100G-SR10
Xcvr 1	REV 01	740-048813	XD32FE017	CFP2-100G-LR-D
MIC 1	REV 07	750-049457	ABCK2812	2X100GE CFP2 OTN
PIC 1		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0	REV 01	740-048813	XD32FE018	CFP2-100G-SR10
Xcvr 1		NON-JNPR	FE13F000E	CFP2-100G-LR4-D
XML 0	REV 05.2.00	711-046638	ABCF5915	MPC6E XL
XML 1	REV 05.2.00	711-046638	ABCF5916	MPC6E XL
FPC 10	REV 36	750-044130	ABCS8602	MPC6E 3D
CPU	REV 09	711-045719	ABCS8779	RMPC PMB
MIC 0	REV 06	750-049979	ABCK2656	24X10GE SFPP OTN
PIC 0		BUILTIN	BUILTIN	24X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQ43J08	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQE1Y2E	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQE1UW4	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQE1MQF	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQGOMN1	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQE1L9M	SFP+-10G-SR

Xcvr 6	REV 01	740-021308	AQGOMPD	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQE1Y2B	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQGOLT5	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQD2ET4	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQGOMPC	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQGOM63	SFP+-10G-SR
Xcvr 12	REV 01	740-021308	AQGOLT1	SFP+-10G-SR
Xcvr 13	REV 01	740-021308	AQGOM4L	SFP+-10G-SR
Xcvr 14	REV 01	740-021308	AQGOLS7	SFP+-10G-SR
Xcvr 15	REV 01	740-021308	AQE1MQB	SFP+-10G-SR
Xcvr 16	REV 01	740-021308	AQGOLZP	SFP+-10G-SR
Xcvr 17	REV 01	740-021308	AQE1LU9	SFP+-10G-SR
Xcvr 18	REV 01	740-021308	AQGOMRZ	SFP+-10G-SR
Xcvr 19	REV 01	740-021308	AQE1MQ9	SFP+-10G-SR
Xcvr 20	REV 01	740-021308	AQGOLRX	SFP+-10G-SR
Xcvr 21	REV 01	740-021308	AQE1UWD	SFP+-10G-SR
Xcvr 22	REV 01	740-021308	AQGOLT4	SFP+-10G-SR
Xcvr 23	REV 01	740-021308	AQE1MQL	SFP+-10G-SR
MIC 1	REV 12	750-050008	ABCK5372	4X100GE CXP
PIC 1		BUILTIN	BUILTIN	4X100GE CXP
Xcvr 3	REV 01	740-046563	XD16FC02Z	CFP2-100G-SR10
XLM 0	REV 07.2.00	711-046638	ABCK3481	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK4725	MPC6E XL
FPC 17	REV 28	750-044130	ABBZ3873	MPC6E 3D
CPU	REV 08	711-045719	ABBZ3770	RMPD PMB
MIC 0	REV 11	750-046535	ABCC7731	24X10GE SFPP
PIC 0		BUILTIN	BUILTIN	24X10GE SFPP
Xcvr 1	REV 01	740-021308	APK0543	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B10G01119	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502SX	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQ43H84	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQ501TB	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQ502JZ	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ502SC	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQ502JW	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQ502RM	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AHK013B	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQGOMRT	SFP+-10G-SR
Xcvr 13	REV 01	740-031980	AMC0JTC	SFP+-10G-SR
Xcvr 14	REV 01	740-021308	ANAOMQ0	SFP+-10G-SR
Xcvr 15	REV 01	740-021308	AQ502GS	SFP+-10G-SR
Xcvr 16	REV 01	740-021308	AQGOM0J	SFP+-10G-SR
Xcvr 17	REV 01	740-021308	AQGOMUR	SFP+-10G-SR
Xcvr 18	REV 01	740-021308	AQGOMRR	SFP+-10G-SR
Xcvr 19	REV 01	740-021308	AQGOM0F	SFP+-10G-SR
Xcvr 20	REV 01	740-021308	AQ50312	SFP+-10G-SR
Xcvr 21	REV 01	740-021308	AQ5032U	SFP+-10G-SR
Xcvr 22	REV 01	740-021308	APE17B5	SFP+-10G-SR
Xcvr 23	REV 01	740-021309	91D104A00011	SFP+-10G-LR
MIC 1	REV 03	750-050008	ABCC4522	4X100GE CXP
PIC 1		BUILTIN	BUILTIN	4X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC02U	CFP2-100G-SR10
Xcvr 1	REV 01	740-046563	XC42FC03K	CFP2-100G-SR10
Xcvr 2	REV 01	740-046563	XC42FC01Z	CFP2-100G-SR10
Xcvr 3	REV 01	740-046563	XC42FC02U	CFP2-100G-SR10
XLM 0	REV 04.2.00	711-046638	ABBZ3779	MPC6E XL
XLM 1	REV 04.2.00	711-046638	ABBZ3780	MPC6E XL
FPC 18	REV 39	750-045715	CACD1910	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACD1817	RMPD PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN

PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130194	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130193	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130196	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130191	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130198	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130192	QSFP+-40G-SR4
WAN MEZZ	REV 09	750-049136	CABN0411	MPC5E 24XGE OTN Mezz
FPC 19	REV 39	750-045715	CACD1908	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACD1820	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQA0EXJ	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOM6D	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQGOLW7	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQA0JKB	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQGOMTM	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQA07NE	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQGOM41	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQGOMU7	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQGOMUG	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQGOMMX	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQGOM5K	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQGOLVZ	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130242	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130245	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130613	QSFP+-40G-SR4
WAN MEZZ	REV 09	750-049136	CABN0418	MPC5E 24XGE OTN Mezz
ADC 0	REV 17	750-043596	ABCD5378	Adapter Card
ADC 1	REV 17	750-043596	ABCD5465	Adapter Card
ADC 2	REV 17	750-043596	ABCD5431	Adapter Card
ADC 3	REV 17	750-043596	ABCD5356	Adapter Card
ADC 4	REV 02	750-043596	ZW1545	Adapter Card
ADC 5	REV 17	750-043596	ABCD5517	Adapter Card
ADC 18	REV 17	750-043596	ABCD5535	Adapter Card
ADC 19	REV 01	750-043596	ZV4127	Adapter Card
Fan Tray 0	REV 06	760-046960	ACAY0791	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY0788	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY0755	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY0441	172mm FanTray - 6 Fans

show chassis hardware detail (MX2020 Router with MPC5EQ and MPC6E)

```
user@host>show chassis hardware detail
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN120BADBAFJ	MX2020
Midplane	REV 51	750-040240	ABAB9243	Lower Backplane
Midplane 1	REV 04	711-032386	ABAB9399	Upper Backplane
PMP 1	REV 05	711-032428	ACAJ2541	Upper Power Midplane
PMP 0	REV 04	711-032426	ACAJ2194	Lower Power Midplane
FPM Board	REV 13	760-040242	ABCA8835	Front Panel Display
PSM 0	REV 01	740-050037	1EDB32403L5	DC 52V Power Supply
Module				
PSM 1	REV 01	740-050037	1EDB32403L3	DC 52V Power Supply
Module				
PSM 2	REV 01	740-050037	1EDB32403KM	DC 52V Power Supply
Module				

PSM 3	REV 01	740-050037	1EDB3130079	DC 52V Power Supply
Module				
PSM 4	REV 01	740-050037	1EDB3130077	DC 52V Power Supply
Module				
PSM 5	REV 01	740-050037	1EDB3130020	DC 52V Power Supply
Module				
PSM 6	REV 01	740-050037	1EDB313009S	DC 52V Power Supply
Module				
PSM 7	REV 01	740-050037	1EDB313008E	DC 52V Power Supply
Module				
PSM 8	REV 01	740-050037	1EDB3130063	DC 52V Power Supply
Module				
PSM 12	REV 01	740-050037	1EDB3130026	DC 52V Power Supply
Module				
PSM 13	REV 01	740-050037	1EDB3130074	DC 52V Power Supply
Module				
PSM 14	REV 01	740-050037	1EDB313009D	DC 52V Power Supply
Module				
PSM 15	REV 01	740-050037	1EDB3130024	DC 52V Power Supply
Module				
PSM 16	REV 01	740-050037	1EDB3130054	DC 52V Power Supply
Module				
PSM 17	REV 01	740-050037	1EDB3130080	DC 52V Power Supply
Module				
PDM 0	REV 03	740-045234	1EGA3170144	DC Power Dist Module
PDM 1	REV 03	740-045234	1EGA3170158	DC Power Dist Module
PDM 2	REV 03	740-045234	1EGA3170182	DC Power Dist Module
PDM 3	REV 03	740-045234	1EGA3170207	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009112112	RE-S-1800x4
ad0 3998 MB	Virtium - TuffDrive	VCF P1T0200274310822	113	Compact Flash
ad1 30533 MB	UGB94BPH32H0S1-KCI	11000031656		Disk 1
usb0 (addr 1)	EHCI root hub 0	Intel		uhub0
usb0 (addr 2)	product 0x0020 32	vendor 0x8087		uhub1
DIMM 0	SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54	MFR ID-ce80		
DIMM 1	SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54	MFR ID-ce80		
DIMM 2	SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54	MFR ID-ce80		
DIMM 3	SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54	MFR ID-ce80		
Routing Engine 1	REV 02	740-041821	9009112087	RE-S-1800x4
ad0 3998 MB	Virtium - TuffDrive	VCF P1T0200274310822	366	Compact Flash
ad1 30533 MB	UGB94BPH32H0S1-KCI	11000039979		Disk 1
CB 0	REV 23	750-040257	CABA2295	Control Board
CB 1	REV 23	750-040257	CABE8379	Control Board
SPMB 0				
SPMB 1				
FPC 0	REV 39	750-045715	CACD1902	MPC5E 3D Q 24XGE+6XLGE
CPU				
FPC 1	REV 11	750-045372	CABK8112	MPCE Type 3 3D
CPU				
FPC 2	REV 17	750-037355	CAAS5826	MPC4E 3D 2CGE+8XGE
CPU				
FPC 3	REV 05	750-044444	CAAY9920	MPCE Type 2 3D P
CPU				
FPC 4	REV 18	750-046005	CACH5661	MPC5E 3D Q 2CGE+4XGE
CPU				
FPC 5	REV 35	750-028467	CAAR2623	MPC 3D 16x 10GE
CPU				
FPC 9	REV 30	750-044130	ABCF5773	MPC6E 3D
CPU				
FPC 10	REV 36	750-044130	ABCS8602	MPC6E 3D
CPU				
FPC 17	REV 28	750-044130	ABBZ3873	MPC6E 3D

CPU				
FPC 18	REV 39	750-045715	CACD1910	MPC5E 3D Q 24XGE+6XLGE
CPU				
FPC 19	REV 39	750-045715	CACD1908	MPC5E 3D Q 24XGE+6XLGE
CPU				
Fan Tray 0	REV 06	760-046960	ACAY0791	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY0788	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY0755	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY0441	172mm FanTray - 6 Fans

show chassis hardware extensive (MX2020 Router with MPC5EQ and MPC6E)

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Jedec Code:   0x7fb0          EEPROM Version: 0x02
S/N:          JN120BADBAFJ
Assembly ID:  0x0557          Assembly Version: 00.00
Date:         00-00-0000      Assembly Flags:  0x00
ID: MX2020
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 57 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 4a 4e 31 32 30 42 41 44 42 41 46 4a 00 00 00 00
Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane      REV 51    750-040240  ABAB9243      Lower Backplane
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          750-040240      S/N:          ABAB9243
Assembly ID:  0x0b22          Assembly Version: 01.51
Date:         05-30-2013      Assembly Flags: 0x00
Version:      REV 51          CLEI Code:    IPMU710ARA
ID: Lower Backplane          FRU Model Number: CHAS-BP-MX2020-S
Board Information Record:
Address 0x00: ad 01 10 00 4c 96 14 72 30 08 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 22 01 33 52 45 56 20 35 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 30 32 34 30 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 39 32 34 33 00 1e 05 07
Address 0x30: dd ff ff ff ad 01 10 00 4c 96 14 72 30 08 ff ff
Address 0x40: ff ff ff ff 01 49 50 4d 55 37 31 30 41 52 41 43
Address 0x50: 48 41 53 2d 42 50 2d 4d 58 32 30 32 30 2d 53 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d3 ff ff ff ff ff ff ff ff ff ff ff ff
Midplane 1    REV 04    711-032386  ABAB9399      Upper Backplane
Jedec Code:   0x7fb0          EEPROM Version: 0x01
P/N:          711-032386      S/N:          ABAB9399
Assembly ID:  0x0b23          Assembly Version: 01.04
Date:         10-22-2012      Assembly Flags: 0x00
Version:      REV 04
ID: Upper Backplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 fe 0b 23 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 33 38 36 00 00

```



```

Address 0x20: 53 2f 4e 20 41 42 41 42 39 33 39 39 00 16 0a 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PMP 1          REV 05    711-032428    ACAJ2541          Upper Power Midplane
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           711-032428      S/N:           ACAJ2541
Assembly ID:   0x045c          Assembly Version: 01.05
Date:          04-26-2013      Assembly Flags: 0x00
Version:       REV 05
ID: Upper Power Midplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 5c 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 34 32 38 00 00
Address 0x20: 53 2f 4e 20 41 43 41 4a 32 35 34 31 00 1a 04 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PMP 0          REV 04    711-032426    ACAJ2194          Lower Power Midplane
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           711-032426      S/N:           ACAJ2194
Assembly ID:   0x045d          Assembly Version: 01.04
Date:          01-29-2013      Assembly Flags: 0x00
Version:       REV 04
ID: Lower Power Midplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 5d 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 34 32 36 00 00
Address 0x20: 53 2f 4e 20 41 43 41 4a 32 31 39 34 00 1d 01 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board      REV 13    760-040242    ABCA8835          Front Panel Display
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           760-040242      S/N:           ABCA8835
Assembly ID:   0x0b24          Assembly Version: 01.13
Date:          04-13-2013      Assembly Flags: 0x00
Version:       REV 13          CLEI Code:       IPMYAE5JRA
ID: Front Panel Display      FRU Model Number: MX2020-CRAFT-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 24 01 0d 52 45 56 20 31 33 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 34 30 32 34 32 00 00
Address 0x20: 53 2f 4e 20 41 42 43 41 38 38 33 35 00 0d 04 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 4d 59 41 45 35 4a 52 41 4d
Address 0x50: 58 32 30 32 30 2d 43 52 41 46 54 2d 53 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff
Address 0x70: ff ff ff 95 ff ff ff ff ff ff ff ff ff ff ff
PSM 0          REV 01    740-050037    1EDB32403L5      DC 52V Power Supply

```

```

Module
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 740-050037          S/N: 1EDB32403L5
Assembly ID: 0x0478        Assembly Version: 01.01
Date: 06-21-2013          Assembly Flags: 0x00
Version: REV 01            CLEI Code: IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 34 30 33 4c 35 00 00 15 06 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 1          REV 01 740-050037 1EDB32403L3 DC 52V Power Supply
Module
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 740-050037          S/N: 1EDB32403L3
Assembly ID: 0x0478        Assembly Version: 01.01
Date: 06-21-2013          Assembly Flags: 0x00
Version: REV 01            CLEI Code: IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 34 30 33 4c 33 00 00 15 06 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 2          REV 01 740-050037 1EDB32403KM DC 52V Power Supply
Module
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 740-050037          S/N: 1EDB32403KM
Assembly ID: 0x0478        Assembly Version: 01.01
Date: 06-21-2013          Assembly Flags: 0x00
Version: REV 01            CLEI Code: IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 34 30 33 4b 4d 00 00 15 06 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 3          REV 01 740-050037 1EDB3130079 DC 52V Power Supply
Module
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 740-050037          S/N: 1EDB3130079
Assembly ID: 0x0478        Assembly Version: 01.01

```

```

Date:          05-16-2013      Assembly Flags:  0x00
Version:       REV 01         CLEI Code:       IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number:  MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 37 39 00 00 10 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 4          REV 01    740-050037    1EDB3130077    DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version:  0x02
P/N:          740-050037   S/N:            1EDB3130077
Assembly ID:   0x0478      Assembly Version: 01.01
Date:         05-17-2013   Assembly Flags:  0x00
Version:      REV 01      CLEI Code:      IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number:  MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 37 37 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 5          REV 01    740-050037    1EDB3130020    DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version:  0x02
P/N:          740-050037   S/N:            1EDB3130020
Assembly ID:   0x0478      Assembly Version: 01.01
Date:         05-16-2013   Assembly Flags:  0x00
Version:      REV 01      CLEI Code:      IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number:  MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 32 30 00 00 10 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 6          REV 01    740-050037    1EDB313009S    DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version:  0x02
P/N:          740-050037   S/N:            1EDB313009S
Assembly ID:   0x0478      Assembly Version: 01.01
Date:         05-17-2013   Assembly Flags:  0x00
Version:      REV 01      CLEI Code:      IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number:  MX2000-PSM-DC-S
Board Information Record:

```

```

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 39 53 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 7          REV 01  740-050037  1EDB313008E          DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-050037      S/N:              1EDB313008E
Assembly ID:   0x0478          Assembly Version:  01.01
Date:          05-17-2013      Assembly Flags:    0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 38 45 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 8          REV 01  740-050037  1EDB3130063          DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-050037      S/N:              1EDB3130063
Assembly ID:   0x0478          Assembly Version:  01.01
Date:          05-17-2013      Assembly Flags:    0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 36 33 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 12         REV 01  740-050037  1EDB3130026          DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-050037      S/N:              1EDB3130026
Assembly ID:   0x0478          Assembly Version:  01.01
Date:          05-16-2013      Assembly Flags:    0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00

```

```

Address 0x20: 31 45 44 42 33 31 33 30 30 32 36 00 00 10 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 13          REV 01   740-050037   1EDB3130074       DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-050037      S/N:              1EDB3130074
Assembly ID:   0x0478          Assembly Version:  01.01
Date:          05-17-2013      Assembly Flags:    0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 37 34 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 14          REV 01   740-050037   1EDB313009D       DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-050037      S/N:              1EDB313009D
Assembly ID:   0x0478          Assembly Version:  01.01
Date:          05-17-2013      Assembly Flags:    0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 39 44 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 15          REV 01   740-050037   1EDB3130024       DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-050037      S/N:              1EDB3130024
Assembly ID:   0x0478          Assembly Version:  01.01
Date:          05-16-2013      Assembly Flags:    0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
...

```

show chassis hardware models (MX2020 Routers with MPC5EQ and MPC6E)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 51	750-040240	ABAB9243	CHAS-BP-MX2020-S
FPM Board	REV 13	760-040242	ABCA8835	MX2020-CRAFT-S
PSM 0	REV 01	740-050037	1EDB32403L5	MX2000-PSM-DC-S
PSM 1	REV 01	740-050037	1EDB32403L3	MX2000-PSM-DC-S
PSM 2	REV 01	740-050037	1EDB32403KM	MX2000-PSM-DC-S
PSM 3	REV 01	740-050037	1EDB3130079	MX2000-PSM-DC-S
PSM 4	REV 01	740-050037	1EDB3130077	MX2000-PSM-DC-S
PSM 5	REV 01	740-050037	1EDB3130020	MX2000-PSM-DC-S
PSM 6	REV 01	740-050037	1EDB313009S	MX2000-PSM-DC-S
PSM 7	REV 01	740-050037	1EDB313008E	MX2000-PSM-DC-S
PSM 8	REV 01	740-050037	1EDB3130063	MX2000-PSM-DC-S
PSM 12	REV 01	740-050037	1EDB3130026	MX2000-PSM-DC-S
PSM 13	REV 01	740-050037	1EDB3130074	MX2000-PSM-DC-S
PSM 14	REV 01	740-050037	1EDB313009D	MX2000-PSM-DC-S
PSM 15	REV 01	740-050037	1EDB3130024	MX2000-PSM-DC-S
PSM 16	REV 01	740-050037	1EDB3130054	MX2000-PSM-DC-S
PSM 17	REV 01	740-050037	1EDB3130080	MX2000-PSM-DC-S
PDM 0	REV 03	740-045234	1EGA3170144	MX2000-PDM-DC-S
PDM 1	REV 03	740-045234	1EGA3170158	MX2000-PDM-DC-S
PDM 2	REV 03	740-045234	1EGA3170182	MX2000-PDM-DC-S
PDM 3	REV 03	740-045234	1EGA3170207	MX2000-PDM-DC-S
Routing Engine 0	REV 02	740-041821	9009112112	RE-MX2000-1800X4-S
Routing Engine 1	REV 02	740-041821	9009112087	RE-MX2000-1800X4-S
CB 0	REV 23	750-040257	CABA2295	RE-MX2000-1800X4-S
CB 1	REV 23	750-040257	CABE8379	RE-MX2000-1800X4-S
SFB 0	REV 06	711-044466	ABCD5001	MX2000-SFB-S
SFB 1	REV 06	711-044466	ABCD5034	MX2000-SFB-S
SFB 2	REV 06	711-044466	ABCH3899	MX2000-SFB-S
SFB 3	REV 06	711-044466	ABCD5020	MX2000-SFB-S
SFB 4	REV 06	711-044466	ABCD4975	MX2000-SFB-S
SFB 5	REV 06	711-044466	ABCH3881	MX2000-SFB-S
SFB 6	REV 06	711-044466	ABCD5026	MX2000-SFB-S
SFB 7	REV 06	711-044466	ABCD5032	MX2000-SFB-S
FPC 0	REV 39	750-045715	CACD1902	PROTO-ASSEMBLY
FPC 1	REV 11	750-045372	CABK8112	MX-MPC3E-3D
FPC 2	REV 17	750-037355	CAAS5826	MPC4E-3D-2CGE-8XGE
FPC 3	REV 05	750-044444	CAAY9920	MX-MPC2E-3D-P
FPC 4	REV 18	750-046005	CACH5661	PROTO-ASSEMBLY
FPC 5	REV 35	750-028467	CAAR2623	MPC-3D-16XGE-SFPP
FPC 9	REV 30	750-044130	ABCF5773	PROTO-ASSEMBLY
FPC 10	REV 36	750-044130	ABCS8602	PROTO-ASSEMBLY
FPC 17	REV 28	750-044130	ABBZ3873	PROTO-ASSEMBLY
FPC 18	REV 39	750-045715	CACD1910	PROTO-ASSEMBLY
FPC 19	REV 39	750-045715	CACD1908	PROTO-ASSEMBLY
ADC 0	REV 17	750-043596	ABCD5378	MX2000-LC-ADAPTER
ADC 1	REV 17	750-043596	ABCD5465	MX2000-LC-ADAPTER
ADC 2	REV 17	750-043596	ABCD5431	MX2000-LC-ADAPTER
ADC 3	REV 17	750-043596	ABCD5356	MX2000-LC-ADAPTER
ADC 4	REV 02	750-043596	ZW1545	750-043596
ADC 5	REV 17	750-043596	ABCD5517	MX2000-LC-ADAPTER
ADC 18	REV 17	750-043596	ABCD5535	MX2000-LC-ADAPTER
ADC 19	REV 01	750-043596	ZV4127	750-043596
Fan Tray 0	REV 06	760-046960	ACAY0791	MX2000-FANTRAY-S
Fan Tray 1	REV 06	760-046960	ACAY0788	MX2000-FANTRAY-S
Fan Tray 2	REV 06	760-046960	ACAY0755	MX2000-FANTRAY-S
Fan Tray 3	REV 06	760-046960	ACAY0441	MX2000-FANTRAY-S

show chassis hardware clei-models (MX2020 Router with MPC5EQ and MPC6E)

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 51	750-040240	IPMU710ARA	CHAS-BP-MX2020-S
FPM Board	REV 13	760-040242	IPMYAE5JRA	MX2020-CRAFT-S
PSM 0	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 1	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 2	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 3	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 4	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 5	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 6	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 7	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 8	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 12	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 13	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 14	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 15	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 16	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 17	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PDM 0	REV 03	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S
PDM 1	REV 03	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S
PDM 2	REV 03	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S
PDM 3	REV 03	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S
CB 0	REV 23	750-040257	IPUCBA7CTA	RE-MX2000-1800X4-S
CB 1	REV 23	750-040257	IPUCBA7CTA	RE-MX2000-1800X4-S
SFB 0	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 1	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 2	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 3	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 4	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 5	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 6	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 7	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
FPC 0	REV 39	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
FPC 1	REV 11	750-045372	COUIBBNBAA	MX-MPC3E-3D
FPC 2	REV 17	750-037355	IPU3A4DHAA	MPC4E-3D-2CGE-8XGE
FPC 3	REV 05	750-044444	COUIBBGBAA	MX-MPC2E-3D-P
MIC 0	REV 28	750-028387	COUIA16BAA	MIC-3D-4XGE-XFP
FPC 4	REV 18	750-046005	PROTOXCLEI	PROTO-ASSEMBLY
FPC 5	REV 35	750-028467		MPC-3D-16XGE-SFPP
FPC 9	REV 30	750-044130	PROTOXCLEI	PROTO-ASSEMBLY
MIC 0	REV 05	750-049457	PROTOXCLEI	PROTO-ASSEMBLY
FPC 10	REV 36	750-044130	PROTOXCLEI	PROTO-ASSEMBLY
MIC 0	REV 06	750-049979	PROTOXCLEI	PROTO-ASSEMBLY
MIC 1	REV 12	750-050008	PROTOXCLEI	PROTO-ASSEMBLY
FPC 17	REV 28	750-044130	PROTOXCLEI	PROTO-ASSEMBLY
MIC 1	REV 03	750-050008	PROTOXCLEI	PROTO-ASSEMBLY
FPC 18	REV 39	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
FPC 19	REV 39	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
ADC 0	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 1	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 2	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 3	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 4	REV 02	750-043596	PROTOXCLEI	750-043596
ADC 5	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 18	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 19	REV 01	750-043596	PROTOXCLEI	750-043596
Fan Tray 0	REV 06	760-046960	IPUCBA5CAA	MX2000-FANTRAY-S

Fan Tray 1	REV 06	760-046960	IPUCBA5CAA	MX2000-FANTRAY-S
Fan Tray 2	REV 06	760-046960	IPUCBA5CAA	MX2000-FANTRAY-S
Fan Tray 3	REV 06	760-046960	IPUCBA5CAA	MX2000-FANTRAY-S

show chassis hardware (MX Series routers with ATM MIC)

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN115736EAFc  MX240
Midplane      REV 07   760-021404   ABAA5038      MX240 Backplane
FPM Board     REV 03   760-021392   ABBA2758      Front Panel Display
PEM 0         Rev 01   740-022697   QCS0937C07K   PS 1.2-1.7kW; 100-240V
AC in
PEM 1         Rev 01   740-022697   QCS0939C04X   PS 1.2-1.7kW; 100-240V
AC in
PEM 2         Rev 01   740-022697   QCS0937C06B   PS 1.2-1.7kW; 100-240V
AC in
PEM 3         Rev 01   740-022697   QCS0937C07U   PS 1.2-1.7kW; 100-240V
AC in
Routing Engine 0 REV 12   740-013063   9009042291     RE-S-2000
Routing Engine 1 REV 12   740-013063   9009042266     RE-S-2000
CB 0          REV 06   710-021523   ABBC1435      MX SCB
CB 1          REV 06   710-021523   ABBC1497      MX SCB
FPC 2         REV 14   750-031088   YH8446        MPC Type 2 3D Q
CPU           REV 06   711-030884   YH9612        MPC PMB 2G
MIC 0
MIC 1         REV 10   750-036132   ZP7062        2x0C12/8x0C3 CC-CE
PIC 2         BUILTIN  BUILTIN      2x0C12/8x0C3 CC-CE

Xcvr 0        NON-JNPR  23393-00492   UNKNOWN
Xcvr 1        NON-JNPR  23393-00500   UNKNOWN
Xcvr 2        NON-JNPR  23393-00912   UNKNOWN
Xcvr 3        REV 01   740-015638   22216-00575   Load SFP
Xcvr 4        REV 01   740-015638   24145-00110   Load SFP
Xcvr 5        REV 01   740-015638   24145-00016   Load SFP
Xcvr 6        REV 01   740-015638   24145-00175   Load SFP
Xcvr 7        NON-JNPR  23393-00627   UNKNOWN
QXM 0         REV 05   711-028408   YF4681        MPC QXM
QXM 1         REV 05   711-028408   YF4817        MPC QXM
Fan Tray 0    REV 01   710-021113   XL3645        MX240 Fan Tray

```

show chassis hardware (MX240, MX480, MX960 routers with Application Services Modular Line Card)

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN11D969BAFA  MX960
Midplane      REV 03   710-013698   ACAA2362      MX960 Backplane
FPM Board     REV 03   710-014974   ZR0639        Front Panel Display
PDM           Rev 03   740-013110   QCS152250SX   Power Distribution Module
PEM 0         Rev 10   740-013683   QCS1512718W   DC Power Entry Module
PEM 1         Rev 10   740-013683   QCS1512702Y   DC Power Entry Module
Routing Engine 0 REV 15   740-013063   9012024667     RE-S-2000
Routing Engine 1 REV 15   740-013063   9012024649     RE-S-2000
CB 0          REV 14   750-031391   ZJ7749        Enhanced MX SCB
CB 1          REV 14   750-031391   ZJ7750        Enhanced MX SCB
CB 2          REV 14   750-031391   ZY9233        Enhanced MX SCB
FPC 0         REV 17   750-031089   YR7434        MPC Type 2 3D
CPU

```


FPC 1	REV 11	750-037207	ZW9727	AS-MCC
CPU	REV 04	711-038173	ZW4817	AS-MCC-PMB
MIC 0	REV 01	750-037214	ZH3764	AS-MSC
PIC 0		BUILTIN	BUILTIN	AS-MSC
MIC 1	REV 01	711-028408	JZ9200	AS-MXC
PIC 2		BUILTIN	BUILTIN	AS-MXC
FPC 4	REV 30	750-028467	ABBN0232	MPC 3D 16x 10GE
CPU				
FPC 5	REV 04	750-037207	ZK9074	AS-MCC
CPU				
Fan Tray 0	REV 05	740-014971	VT5683	Fan Tray
Fan Tray 1	REV 05	740-014971	VT5684	Fan Tray

show chassis hardware extensive (MX240, MX480, MX960 routers with Application Services Modular Line Card)

user@host> show chassis hardware extensive

```
ID: AS-MCC                                FRU Model Number: 750-037207
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 37 01 0b 52 45 56 20 31 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 30 37 00 00
Address 0x20: 53 2f 4e 20 5a 57 39 37 32 37 00 00 00 11 02 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 37
Address 0x50: 35 30 2d 30 33 37 32 30 37 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 31 31 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 5e ff ff ff ff ff ff ff ff ff ff ff ff
CPU                                REV 04    711-038173    ZW4817    AS-MCC-PMB
Jedec Code: 0x7fb0                EEPROM Version: 0x02
P/N: 711-038173                  S/N: ZW4817
Assembly ID: 0x0b38              Assembly Version: 01.04
Date: 12-30-2011                 Assembly Flags: 0x00
Version: REV 04
ID: AS-MCC-PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 38 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 38 31 37 33 00 00
Address 0x20: 53 2f 4e 20 5a 57 34 38 31 37 00 00 00 1e 0c 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 37
Address 0x50: 31 31 2d 30 33 38 31 37 33 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 30 34 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 60 00 00 00 00 00 00 00 00 00 00 00 00
MIC 0                                REV 01    750-037214    ZH3764    AS-MSC
Jedec Code: 0x7fb0                EEPROM Version: 0x02
P/N: 750-037214                  S/N: ZH3764
Assembly ID: 0x0a44              Assembly Version: 01.01
Date: 07-04-2011                 Assembly Flags: 0x00
Version: REV 01
ID: AS-MSC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff I2C Hex Data:
Address 0x00: 7f b0 02 ff 0a 44 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 31 34 00 00
Address 0x20: 53 2f 4e 20 5a 48 33 37 36 34 00 00 00 04 07 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
```

```

Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f6 c0 03 e1 bc 00 00 00 00 00 00 00 00
PIC 0          BUILTIN      BUILTIN      AS-MSC
FPC 4          REV 30      750-028467  ABBN0232      MPC 3D 16x 10GE
Jedec Code:    0x7fb0      EEPROM Version: 0x01

```

show chassis hardware (MX480 Router with MPC4E)

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN10FF57BAFB  MX480
Midplane      REV 05   750-047849   Good           MX480 Midplane
FPM Board     REV 02   710-017254   KG2066         Front Panel Display
PEM 0         Rev 03   740-017330   QCS081590BJ    PS 1.2-1.7kW; 100-240V
AC in
PEM 1         Rev 03   740-017330   QCS0815908Z    PS 1.2-1.7kW; 100-240V
AC in
PEM 2         Rev 03   740-029970   QCS1001U001    PS 1.4-2.52kW; 90-264V
AC in
Routing Engine 0 REV 05   740-031116   9009089502     RE-S-1800x4
Routing Engine 1 REV 05   740-031116   9009089624     RE-S-1800x4
CB 0          REV 02   750-031391   YE8506         Enhanced MX SCB
CB 1          REV 14   750-031391   ZK8265         Enhanced MX SCB
FPC 2         REV 05   750-037358   ZT0638         MPC4E 3D 32XGE
CPU           REV 07   711-035209   ZK3187         HMPD PMB 2G
PIC 0         BUILTIN  BUILTIN       8X10GE SFPP
PIC 1         BUILTIN  BUILTIN       8X10GE SFPP
PIC 2         BUILTIN  BUILTIN       8X10GE SFPP
PIC 3         BUILTIN  BUILTIN       8X10GE SFPP
FPC 3         REV 06   750-037355   CAAB1144       MPC4E 3D 2CGE+8XGE
CPU           REV 08   711-035209   CAAB1278       HMPD PMB 2G
PIC 0         BUILTIN  BUILTIN       4x10GE SFPP
Xcvr 0        REV 01   740-031980   B11E01439     SFP+-10G-SR
Xcvr 1        REV 01   740-031980   B11D05809     SFP+-10G-SR
PIC 1         BUILTIN  BUILTIN       1X100GE CFP
Xcvr 0        NON-JNPR  D5418         UNKNOWN
PIC 2         BUILTIN  BUILTIN       4x10GE SFPP
PIC 3         BUILTIN  BUILTIN       1X100GE CFP
Xcvr 0        NON-JNPR  X12J00362     CFP-100G-SR10
FPC 4         REV 12.3.10 750-033205   YR9445         MPCE Type 3 3D
CPU
Fan Tray                               Enhanced Left Fan Tray

```

show chassis hardware (MX2020 Router with MPC4E)

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN11E188CAFJ  MX2020
Midplane      REV 04   711-032387   ABAC7474       Lower Backplane
Midplane 1    REV 04   711-032386   ABAC7408       Upper Backplane
PMP 1         REV 03   711-032428   ACAJ1137       Upper Power Midplane
PMP 0         REV 03   711-032426   ACAJ1016       Lower Power Midplane
FPM Board     REV 06   760-040242   ABBT8832       Front Panel Display
PSM 3         REV 0C   740-033727   VK00255        DC 52V Power Supply
Module
PSM 4         REV 0C   740-033727   VJ00148        DC 52V Power Supply
Module
PSM 5         REV 0C   740-033727   VK00207        DC 52V Power Supply

```

Module					
PSM 6	REV 0C	740-033727	VK00319		DC 52V Power Supply
Module					
PSM 7	REV 0C	740-033727	VK00264		DC 52V Power Supply
Module					
PSM 8	REV 0B	740-033727	VG00025		DC 52V Power Supply
Module					
PSM 13	REV 0C	740-033727	VK00274		DC 52V Power Supply
Module					
PSM 14	REV 0C	740-033727	VJ00167		DC 52V Power Supply
Module					
PSM 15	REV 0C	740-033727	VK00299		DC 52V Power Supply
Module					
PSM 16	REV 0C	740-033727	VK00213		DC 52V Power Supply
Module					
PSM 17	REV 0C	740-033727	VK00253		DC 52V Power Supply
Module					
PDM 0	REV 0B	740-038109	VJ00040		DC Power Dist Module
PDM 2	REV 0B	740-038109	VJ00025		DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009089735		RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009089731		RE-S-1800x4
CB 0	REV 04	750-040257	ZT2846		Control Board
CB 1	REV 04	750-040257	ZT2877		Control Board
SPMB 0	REV 01	711-041855	ZS2282		PMB Board
SPMB 1	REV 01	711-041855	ZS2261		PMB Board
SFB 0	REV 07	711-032385	ZZ2582		Switch Fabric Board
SFB 1	REV 04	711-032385	ZV4229		Switch Fabric Board
SFB 2	REV 07	711-032385	CAAB4902		Switch Fabric Board
SFB 3	REV 07	711-032385	CAAB4891		Switch Fabric Board
SFB 4	REV 07	711-032385	CAAB4883		Switch Fabric Board
SFB 5	REV 07	711-032385	CAAB4889		Switch Fabric Board
SFB 6	REV 06	711-032385	ZV1818		Switch Fabric Board
SFB 7	REV 07	711-032385	CAAB4897		Switch Fabric Board
FPC 0	REV 34	750-031090	ZT9799		MPC Type 2 3D EQ
CPU	REV 06	711-030884	ZS1122		MPC PMB 2G
MIC 0	REV 11	750-033535	CAAD7674		MIC-3D-10C192-XFP
PIC 0		BUILTIN	BUILTIN		MIC-3D-10C192-XFP
Xcvr 0	REV 01	740-014279	753019A00404		XFP-0C192-SR
MIC 1	REV 14	750-031967	ZM6103		MIC-3D-80C30C12-40C48
PIC 2		BUILTIN	BUILTIN		MIC-3D-80C30C12-40C48
Xcvr 0	REV 01	740-011615	PEF1AZP		SFP-IR
Xcvr 1	REV 01	740-011615	PEF1AZN		SFP-IR
Xcvr 2	REV 01	740-021308	ANA0N8S		SFP+-10G-SR
QXM 0	REV 06	711-028408	ZT9339		MPC QXM
QXM 1	REV 06	711-028408	ZT9237		MPC QXM
FPC 9	REV 34	750-031090	ZT9770		MPC Type 2 3D EQ
CPU	REV 06	711-030884	ZS1302		MPC PMB 2G
MIC 0	REV 24	750-028387	YJ3950		3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN		2x 10GE XFP
Xcvr 0		NON-JNPR	T09M52516		XFP-10G-SR
Xcvr 1		NON-JNPR	CA49BK095		XFP-10G-SR
PIC 1		BUILTIN	BUILTIN		2x 10GE XFP
Xcvr 0	REV 02	740-014289	C834XU01T		XFP-10G-SR
Xcvr 1		NON-JNPR	T09M52515		XFP-10G-SR
MIC 1	REV 11	750-033535	CAAD7681		MIC-3D-10C192-XFP
PIC 2		BUILTIN	BUILTIN		MIC-3D-10C192-XFP
Xcvr 0	REV 01	740-014279	KBQ02BE		XFP-0C192-SR
QXM 0	REV 06	711-028408	ZT9151		MPC QXM
QXM 1	REV 06	711-028408	ZT9116		MPC QXM
FPC 10	REV 27	750-033205	ZL6215		MPCE Type 3 3D
CPU	REV 07	711-035209	ZK9038		HMPC PMB 2G

MIC 0	REV 18	750-028380	YG6885	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 01	740-014289	C706XU0AG	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 02	740-014289	T08L84366	XFP-10G-SR
FPC 14	REV 09	750-037355	CAAF1534	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAB9879	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	21T511100436	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AHPOGPM	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	123363A00032	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	19T511100477	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00260	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	21T511104086	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	21T511104627	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	21T511104644	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
FPC 19	REV 32	750-028467	ZR2008	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZT6933	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	19T511100291	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMH02VE	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	23T511102128	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMS15PP	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	123363A00716	SFP+-10G-SR
ADC 0	REV 05	750-043596	CAAC2072	Adapter Card
ADC 9	REV 01	750-043596	ZV4111	Adapter Card
ADC 10	REV 05	750-043596	CAAC2058	Adapter Card
ADC 14	REV 02	750-043596	ZW1561	Adapter Card
ADC 19	REV 01	750-043596	ZV4127	Adapter Card
Fan Tray 0	REV 03	760-046960	ACAY0124	172mm FanTray - 6 Fans
Fan Tray 1	REV 2A	760-046960	ACAY0022	172mm FanTray - 6 Fans
Fan Tray 2	REV 2A	760-046960	ACAY0023	172mm FanTray - 6 Fans
Fan Tray 3	REV 2A	760-046960	ACAY0025	172mm FanTray - 6 Fans

show chassis hardware (MX5, MX10, MX40, MX80, MX240, MX480, and MX960 routers with Enhanced 20-port Gigabit Ethernet MIC)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			F3434	MX80-P
Midplane	REV 01	711-044315	ZK2681	MX80-P
PEM 0	Rev 04	740-028288	VE05267	AC Power Entry Module
PEM 1	Rev 04	740-028288	VE05270	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
TFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
QXM 0	REV 05	711-028408	ZK0952	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 02	750-049846	CAAV2153	3D 20x 1GE(LAN)-E,SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) -E SFP
Xcvr 0	REV 01	740-011613	AM0816S9B81	SFP-SX

```

Xcvr 1      REV 02  740-011613  AM0925SBLK7  SFP-SX
Xcvr 2      REV 01  740-011613  UAQ0005      SFP-SX
Xcvr 3      REV 01  740-011613  UAQ000C      SFP-SX
Xcvr 4      REV 01  740-011613  P9F195E     SFP-SX
Xcvr 5      REV 01  740-011613  UAQ0003      SFP-SX
Xcvr 6      REV 01  740-031851  AM1041SU1LD  SFP-SX
Xcvr 8      REV 02  740-013111  B101501     SFP-T
PIC 1              BUILTIN    BUILTIN      10x 1GE(LAN) -E SFP
Xcvr 0      REV 01  740-011613  PFM1ML7     SFP-SX
Xcvr 4      REV 01  740-011613  PE729P6     SFP-SX
Xcvr 6      REV 02  740-011613  AM1014SGC84 SFP-SX
Xcvr 9      REV 01  740-011613  AM0812S8UK3 SFP-SX
MIC 1              REV 26      750-028392  ZY0187      3D 20x 1GE(LAN) SFP
PIC 2              BUILTIN    BUILTIN      10x 1GE(LAN) SFP
Xcvr 0      REV 01  740-011613  P9F1AN9     SFP-SX
Xcvr 5      REV 02  740-011613  AM1003SFUF4 SFP-SX
Xcvr 9      REV 01  740-031851  AM1041SU1LM SFP-SX
PIC 3              BUILTIN    BUILTIN      10x 1GE(LAN) SFP
Xcvr 4      REV 01  740-011613  PAJ4MYT     SFP-SX
Xcvr 7      +      NON-JNPR    XG32A024    SFP-SX
Xcvr 8              NON-JNPR    PFROV6J     SFP-SX
Xcvr 9      REV 01  740-031851  AM1041SU02U SFP-SX
Fan Tray

```

show chassis hardware models (MX5, MX10, MX40, MX80, MX240, MX480, and MX960 routers with Enhanced 20-port Gigabit Ethernet MIC)

```

user@host> show chassis hardware models
Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
PEM 0         Rev 04    740-028288  VE05267       PWR-MX80-AC-S
PEM 1         Rev 04    740-028288  VE05270       PWR-MX80-AC-S
Routing Engine
TFEB 0              BUILTIN    BUILTIN
FPC 0              BUILTIN    BUILTIN
FPC 1              BUILTIN    BUILTIN
MIC 0          REV 02    750-049846  CAAV2153      MIC-3D-20GE-SFP-E
MIC 1          REV 26    750-028392  ZY0187        MIC-3D-20GE-SFP
Fan Tray
FANTRAY-MX80-S

```

show chassis hardware (T320 Router)

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis              19093       T320
Midplane            REV 04    710-004339  BC1436        T320 Backplane
FPM GBUS            REV 03    710-004461  BC1407        T320 FPM Board
FPM Display         REV 04    710-002897  BE0763        FPM Display
CIP                 REV 05    710-002895  BB2311        T Series CIP
PEM 0               Rev 01    740-004359  NB12546       Power Entry Module
SCG 0               REV 06    710-004455  AY4522        T320 Sonet
Clock Gen.
Routing Engine 0
CB 0               REV 13    710-002728  BC1577        unknown
T Series
Control Board
CB 1               REV 13    710-002728  BC1595        T Series
Control Board
FPC 1              REV 09    710-007531  HS1572        FPC Type 2
CPU                 REV 15    710-001726  HR8763        FPC CPU
PIC 0               REV 01    750-010618  CB5579        4x G/E SFP,

```

1000 BASE					
SFP 0	REV 01	740-007326	P5809Z1	SFP-SX	
SFP 1	REV 01	740-007326	P4Q10XU	SFP-SX	
SFP 2		NON-JNPR	RA45020031	SFP-SX	
SFP 3		NON-JNPR	RA45020032	SFP-SX	
PIC 1	REV 01	750-010618	CD9587	4x G/E SFP,	
1000 BASE					
SFP 0		NON-JNPR	P5A08QZ	SFP-T	
SFP 1	REV 01	740-007326	P4Q133K	SFP-SX	
SFP 2	REV 01	740-007326	P5809YY	SFP-SX	
SFP 3	REV 01	740-007327	4C81704	SFP-LX	
MMB 1	REV 03	710-005555	HR9401	MMB-288mbit	
PPB 0	REV 04	710-003758	HR2886	PPB Type 2	
FPC 2	REV 07	710-005860	HP2392	FPC Type 1	
CPU	REV 14	710-001726	HP7797	FPC CPU	
PIC 0	REV 02	750-007643	HM0853	1x G/E QPP,	
1000 BASE					
SFP 0	REV 01	740-007326	P11E9JJ	SFP-SX	
MMB 1	REV 02	710-005555	HN2379	MMB-288mbit	
PPB 0	REV 04	710-003758	HP8092	PPB Type 2	
FPC 3	REV 07	710-005860	HP2393	FPC Type 1	
CPU	REV 14	710-001726	HP0968	FPC CPU	
PIC 0	REV 01	750-010240	CB5363	1x G/E SFP,	
1000 BASE					
SFP 0	REV 01	740-007326	P4R0PNH	SFP-SX	
PIC 1	REV 03	750-003034	HD2832	4x OC-3 SONET,	
SMIR					
MMB 1	REV 02	710-005555	HN6307	MMB-288mbit	
PPB 0	REV 04	710-003758	HP5051	PPB Type 2	
FPC 4	REV 01	710-010845	JD3872	FPC Type 4	
CPU	REV 02	710-011481	JB6042	FPC CPU	
5	REV 01	710-005802	BC1566	FPC Type 2	
CPU	REV 09	710-001726	AY4922	FPC CPU	
PIC 0	REV 02	750-008155	BE2114	2x G/E QPP,	
1000 BASE					
SFP 0	REV 01	740-007326	P4R0PMQ	SFP-SX	
SFP 1	REV 01	740-007326	P4R0PN9	SFP-SX	
PIC 1	REV 01	750-008155	BE2116	2x G/E QPP,	
1000 BASE					
SFP 0	REV 01	740-007326	P4R0PNZ	SFP-SX	
SFP 1		NON-JNPR	2908	SFP-T	
MMB 1	REV 01	710-005555	AZ2246	MMB-288mbit	
PPB 0	REV 03	710-003758	AY4839	PPB Type 2	
FPC 7	REV 01	710-005803	AZ2123	FPC Type 3	
...					

show chassis hardware (T640 Router)

```
user@host> show chassis hardware
```

Hardware inventory:					
Item	Version	Part number	Serial number	Description	
Chassis			19182	T640	
Midplane	REV 04	710-002726	AX5608	T640 Backplane	
FPM GBUS	REV 02	710-002901	HE3064	T640 FPM Board	
FPM Display	REV 02	710-002897	HE7864	FPM Display	
CIP	REV 05	710-002895	HA5024	T Series CIP	
PEM 0	Rev 02	740-029522	VH26235	AC PEM 10kw US	
PEM 1	Rev 02	740-029522	VH26230	AC PEM 10kw US	
SCG 0	REV 03	710-003423	HA4508	T640 Sonet Clock Gen.	
Routing Engine 0	REV 02	740-005022	210865700483	RE-3.0 (RE-600)	
CB 0	REV 01	710-002728	HD3044	T Series Control Board	

FPC 2	REV 04	710-001721	HD5572	FPC Type 3
CPU	REV 06	710-001726	HA4712	FPC CPU
PIC 1	REV 03	750-009567	HV2331	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-009898	USC202R103	XENPAK-SR
PIC 2	REV 03	750-009567	HV2332	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-011268	USC202R112	XENPAK-ZR
PIC 3	REV 03	750-009567	HX4416	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-012056	434TC004	XENPAK-CX4
PIC 4	REV 03	750-009567	HX4420	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-012058	434TC124	XENPAK-LX4
FPC 5	REV 01	710-013553	JE4839	E2-FPC Type 1
CPU	REV 01	710-013569	JW9163	FPC CPU
PIC 0	REV 01	750-009567	HX4419	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-009898	USC202RT05	XENPAK-LR
PIC 1	REV 03	750-009567	HN7426	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-009550	03L90051	XENPAK-ER
PIC 2	REV 03	750-009467	HT7423	1x 10GE(LAN),XENPAK
SFP 0		NON-JNPR		UNKNOWN
PIC 3	REV 04	750-005100	AY4850	1x 10GE(LAN),DWDM
FPC 4	REV 01	710-010845	JD3872	FPC Type 4
CPU	REV 02	710-011481	JB6042	FPC CPU
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray

show chassis hardware models (T640 Router)

```

user@host> show chassis hardware models
Hardware inventory:

```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 04	710-002726		CHAS-BP-T640-S
FPM Display	REV 02	710-002897		CRAFT-T640-S
CIP	REV 05	710-002895		CIP-L-T640-S
PEM 0	Rev 01	740-002595		PWR-T-DC-S
SCG 0	REV 04	710-003423		SCG-T-S
SCG 1	REV 04	710-003423		SCG-T-S
Routing Engine 0	REV 01	740-005022		RE-600-2048-S
Routing Engine 1	REV 07	740-005022		RE-600-2048-S
CB 0	REV 06	710-002726		CHAS-BP-T640-S
CB 1	REV 06	710-002728		CB-L-T-S
FPC 5	REV 05	710-007527		T640-FPC2
PIC 0	REV 05	750-002510		PB-2GE-SX
PIC 1	REV 05	750-001901		PB-40C12-SON-SMIR
FPC 6	REV 03	710-001721		T640-FPC3
PIC 1	REV 01	750-009553		PC-40C48-SON-SFP
SIB 4	REV 02	750-005486		SIB-I-T640-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FAN-REAR-TX-T640-S

show chassis hardware extensive (T640 Router)

```

user@host> show chassis hardware extensive
Hardware inventory:

```

Item	Version	Part number	Serial number	Description
Chassis				T640
Jedec Code:	0x7fb0	EEPROM Version:	0x01	
P/N:	S/N:	
Assembly ID:	0x0507	Assembly Version:	00.00	
Date:	00-00-0000	Assembly Flags:	0x00	
Version:			

```

ID: Gibson LCC Chassis
Board Information Record:
  Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 05 07 00 00 00 00 00 00 00 00 00 00
  Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x20: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane      REV 04   710-002726   AX5633
Jedec Code:   0x7fb0           EEPROM Version: 0x01
P/N:          710-002726.      S/N:          AX5633.
Assembly ID:  0x0127           Assembly Version: 01.04
Date:         06-27-2001       Assembly Flags: 0x00
Version:      REV 04.....
ID: Gibson Backplane
Board Information Record:
  Address 0x00: ad 01 08 00 00 90 69 0e f8 00 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 01 27 01 04 52 45 56 20 30 34 00 00
  Address 0x10: 00 00 00 00 37 31 30 2d 30 30 32 37 32 36 00 00
  Address 0x20: 53 2f 4e 20 41 58 35 36 33 33 00 00 00 1b 06 07
  Address 0x30: d1 ff ff ff ad 01 08 00 00 90 69 0e f8 00 ff ff
  Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM GBUS      REV 02   710-002901   HE3245
...
FPM Display   REV 02   710-002897   HA4873
...
CIP           REV 05   710-002895   HA4729
...
PEM 1         RevX02   740-002595   MD21815           Power Entry Module
...
SCG 0         REV 04   710-003423   HF6023
...
SCG 1         REV 04   710-003423   HF6061
...
Routing Engine 0 REV 01   740-005022   210865700292     RE-3.0
...
CB 0          REV 06   710-002728   HE3614
...
FPC 1         REV 01   710-002385   HE3009           FPC Type 1
...
              REV 06   710-001726   HC0010

```

show chassis hardware (T4000 Router)

```

user@host> show chassis hardware
Hardware inventory:

```

Item	Version	Part number	Serial number	Description
Chassis			JN1172F25AHA	T4000
Midplane	REV 01	710-027486	RC8355	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAE0927	T640 FPM Board
FPM Display	REV 01	710-021387	EF6764	T1600 FPM Display
CIP	REV 06	710-002895	BBAD9210	T-series CIP
PEM 0	REV 01	740-036442	VA00016	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAD7248	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAE3874	T640 Sonet Clock Gen.
Routing Engine 0	REV 05	740-026941	P737F-002248	RE-DUO-1800
Routing Engine 1	REV 06	740-026941	P737F-002653	RE-DUO-1800
CB 0	REV 09	710-022597	ED0295	LCC Control Board
CB 1	REV 09	710-022597	EA6050	LCC Control Board
FPC 0	REV 26	750-032819	EK1173	FPC Type 5-3D

CPU	REV 12	711-030686	EJ8584	SNG PMB
PIC 0	REV 07	750-034624	EF6837	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	123363A01145	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	123363A01147	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01P3	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10M03256	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJJ01M2	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	123363A01137	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01PN	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJJ01NW	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	123363A01139	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJJ01KE	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	123363A01336	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B10M01325	SFP+-10G-SR
PIC 1	REV 07	750-034624	EF6800	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	AJJ01SA	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJJ01QZ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJH0217	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJJ01TE	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJJ01KV	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJJ01MU	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01R0	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJJ01TC	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AJJ0364	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJD0GV3	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B10M03343	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AJJ01QJ	SFP+-10G-SR
LMB 0	REV 05	711-034381	EJ8490	Type-0 LMB
LMB 1	REV 04	711-035774	EJ8517	Type-1 LMB
LMB 2	REV 05	711-034381	EJ8489	Type-0 LMB
FPC 3	REV 07	750-032819	EG3637	FPC Type 5-3D
CPU	REV 09	711-030686	EG0150	SNG PMB
PIC 0	REV 08	750-035293	EF3657	1x100GE
Xcvr 0	REV 01	740-032210	C22CQNJ	CFP-100G-LR4
PIC 1	REV 10	750-034624	BBAN4098	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	B11J04902	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11J04891	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01MX	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11J04183	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11J04894	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J04184	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11J04897	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11J04899	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AJJ01TV	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	B11J04057	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AJJ01M4	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B11J04905	SFP+-10G-SR
LMB 0	REV 04	711-034381	EG1524	Type-0 LMB
LMB 1	REV 03	711-035774	EG0345	Type-1 LMB
LMB 2	REV 04	711-034381	EG1522	Type-0 LMB
FPC 5	REV 03	710-033871	BBAJ0768	FPC Type 4-ES
CPU	REV 11	710-016744	BBAH9342	ST-PMB2
PIC 0	REV 09	750-029262	EE6789	100GE
PIC 1	REV 03	750-034781	EE6655	100GE CFP
Xcvr 0	REV 01	740-032210	J11A22334	CFP-100G-LR4
BRIDGE 0	REV 03	711-029995	EE6572	100GE Bridge Board
MMB 0	REV 07	710-025563	BBAJ4657	ST-MMB2
MMB 1	REV 07	710-025563	BBAJ3073	ST-MMB2
FPC 6	REV 05	750-010153	EF4936	FPC Type 5-3D
CPU	REV 06	711-030686	EF4189	SNG PMB
PIC 0	REV 10	750-034624	BBAN4109	12x10GE (LAN/WAN) SFPP

Xcvr 0	REV 01	740-031980	B11J04895	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11J04898	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11J04021	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11J04903	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11J04311	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J04059	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11J04016	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11J04017	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B11J04887	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	B11J04297	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B11J04893	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B11J04022	SFP+-10G-SR
PIC 1	REV 02	750-034624	EE3711	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	AJH033X	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJJ01N0	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01SV	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJJ032L	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B10M01593	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJD0FF1	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01NU	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	123363A01305	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B10M00361	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJJ01M7	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AJJ032X	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AJJ01PG	SFP+-10G-SR
LMB 0	REV 04	711-034381	EF3838	Type-0 LMB
LMB 1	REV 03	711-035774	EF3821	Type-1 LMB
LMB 2	REV 04	711-034381	EF3834	Type-0 LMB
SPMB 0	REV 05	710-023321	ED1990	LCC Switch CPU
SPMB 1	REV 05	710-023321	EA2768	LCC Switch CPU
SIB 0	REV 02	711-036340	EF8802	SIB-HC-3D
SIB 1	REV 07	711-036340	EG2286	SIB-HC-3D
SIB 2	REV 07	711-036340	EG2252	SIB-HC-3D
SIB 3	REV 02	711-036340	EF1358	SIB-HC-3D
SIB 4	REV 02	711-036340	EF8806	SIB-HC-3D
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
-- Rev 2				
Fan Tray 2				Rear Fan Tray -- Rev 3

show chassis hardware (T4000 Router with 16 GB line card chassis (LCC) Routing Engine)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11BDF2CAHA	T1600
Midplane	REV 01	710-027486	ACAJ0774	T640 Backplane
FPM GBUS	REV 13	710-002901	BBAL6812	T640 FPM Board
FPM Display	REV 04	710-021387	BBAP2679	T1600 FPM Display
CIP	REV 06	710-002895	BBAP4758	T-series CIP
PEM 0	Rev 03	740-026384	XF86421	Power Entry Module 3x80
PEM 1	Rev 03	740-026384	XF86429	Power Entry Module 3x80
SCG 0	REV 18	710-003423	BBAP1896	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAN8659	T640 Sonet Clock Gen.
Routing Engine 0	REV 01	740-042243	737F-002238	RE-DUO-1800-16G
Routing Engine 1	REV 01	740-042243	737F-002403	RE-DUO-1800-16G
CB 1	REV 11	710-022597	EK4526	LCC Control Board
CB 1	REV 11	710-022597	EK4527	LCC Control Board
FPC 0	REV 05	710-033871	EK5644	FPC Type 4-ES
CPU	REV 11	710-016744	EK3428	ST-PMB2
PIC 0	REV 20	750-017405	EJ3041	4x 10GE (LAN/WAN) XFP

PIC 1	REV 17	750-026962	EH7536	10x10GE(LAN/WAN) SFPP
MMB 0	REV 07	710-025563	EK6039	ST-MMB2
MMB 1	REV 07	710-025563	EK6086	ST-MMB2
FPC 1	REV 05	710-033871	EK6583	FPC Type 4-ES
CPU	REV 11	710-016744	EK3401	ST-PMB2
PIC 0	REV 17	750-026962	EJ8948	10x10GE(LAN/WAN) SFPP
MMB 0	REV 07	710-025563	EK6202	ST-MMB2
MMB 1	REV 07	710-025563	EK6112	ST-MMB2
SPMB 1	REV 05	710-023321	EK4900	LCC Switch CPU
SIB 0	REV 11	710-013074	EK5958	SIB-I8-SF
SIB 1	REV 11	710-013074	EK4606	SIB-I8-SF
SIB 2	REV 11	710-013074	EK5971	SIB-I8-SF
SIB 3	REV 11	710-013074	EK4609	SIB-I8-SF
SIB 4	REV 11	710-013074	EK4602	SIB-I8-SF
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 2

show chassis hardware (T4000 Router with LSR FPC)

```
user@host> show chassis hardware
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN1173A24AHA	T4000
FPC 3	REV	750-048373	AN7797	FPC Type 5-LSR
CPU	REV 10	711-030686	AN6649	SNG PMB
PIC 0	REV 07	750-034624	EF6830	12x10GE (LAN/WAN) SFPP

show chassis hardware clei-models (T4000 Router)

```
user@host> show chassis hardware clei-models
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	710-027486	IPMJ700DRD	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387		CRAFT-T1600-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 0	REV 01	740-036442	IPUPAG6KAA	PWR-T-6-60-DC
SCG 0	REV 18	710-003423		SCG-T-S
SCG 1	REV 18	710-003423		SCG-T-S
Routing Engine 0	REV 05	740-026941		RE-DUO-C1800-8G-S
Routing Engine 1	REV 06	740-026941		RE-DUO-C1800-8G-S
CB 0	REV 09	710-022597		CB-LCC-S
CB 1	REV 09	710-022597		CB-LCC-S
FPC 3				
PIC 0	REV 08	750-035293	XXXXXXXXBB	PF-1CGE-CFP
PIC 1	REV 10	750-034624	XXXXXXXXCC	PF-12XGE-SFPP
FPC 5	REV 03	710-033871	IPUCAMBCTD	T1600-FPC4-ES
PIC 1	REV 03	750-034781	IPUIBKLMMA	PD-1CE-CFP-FPC4
FPC 6				
PIC 0	REV 10	750-034624	XXXXXXXXCC	PF-12XGE-SFPP
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T4000-S
Fan Tray 2				FANTRAY-TXP-R-S

show chassis hardware detail (T4000 Router)

```
user@host> show chassis hardware detail
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN1172F25AHA	T4000
Midplane	REV 01	710-027486	RC8355	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAE0927	T640 FPM Board

FPM Display	REV 01	710-021387	EF6764	T1600 FPM Display
CIP	REV 06	710-002895	BBAD9210	T-series CIP
PEM 0	REV 01	740-036442	VA00016	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAD7248	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAE3874	T640 Sonet Clock Gen.
Routing Engine 0	REV 05	740-026941	P737F-002248	RE-DUO-1800
ad0 3823 MB	SMART CF		2009121602A661576157	Compact Flash
ad1 59690 MB	STEC MACH-8 SSD		STM000103FDB	Disk 1
Routing Engine 1	REV 06	740-026941	P737F-002653	RE-DUO-1800
ad0 3823 MB	SMART CF		201011150153F52CF52C	Compact Flash
ad1 62720 MB	SMART Lite SATA Drive		2010110900150A880A88	Disk 1
CB 0	REV 09	710-022597	ED0295	LCC Control Board
CB 1	REV 09	710-022597	EA6050	LCC Control Board
FPC 0	REV 26	750-032819	EK1173	FPC Type 5-3D
CPU	REV 12	711-030686	EJ8584	SNG PMB
PIC 0	REV 07	750-034624	EF6837	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	123363A01145	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	123363A01147	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01P3	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10M03256	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJJ01M2	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	123363A01137	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01PN	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJJ01NW	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	123363A01139	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJJ01KE	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	123363A01336	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B10M01325	SFP+-10G-SR
PIC 1	REV 07	750-034624	EF6800	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	AJJ01SA	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJJ01QZ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ0217	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJJ01TE	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJJ01KV	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJJ01MU	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01R0	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJJ01TC	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AJJ0364	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJD0GV3	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B10M03343	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AJJ01QJ	SFP+-10G-SR
LMB 0	REV 05	711-034381	EJ8490	Type-0 LMB
LMB 1	REV 04	711-035774	EJ8517	Type-1 LMB
LMB 2	REV 05	711-034381	EJ8489	Type-0 LMB
FPC 3	REV 07	750-032819	EG3637	FPC Type 5-3D
CPU	REV 09	711-030686	EG0150	SNG PMB
PIC 0	REV 08	750-035293	EF3657	1x100GE
Xcvr 0	REV 01	740-032210	C22CQNJ	CFP-100G-LR4
PIC 1	REV 10	750-034624	BBAN4098	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	B11J04902	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11J04891	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01MX	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11J04183	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11J04894	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J04184	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11J04897	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11J04899	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AJJ01TV	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	B11J04057	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AJJ01M4	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B11J04905	SFP+-10G-SR

LMB 0	REV 04	711-034381	EG1524	Type-0 LMB
LMB 1	REV 03	711-035774	EG0345	Type-1 LMB
LMB 2	REV 04	711-034381	EG1522	Type-0 LMB
FPC 5	REV 03	710-033871	BBAJ0768	FPC Type 4-ES
CPU	REV 11	710-016744	BBAH9342	ST-PMB2
PIC 0	REV 09	750-029262	EE6789	100GE
PIC 1	REV 03	750-034781	EE6655	100GE CFP
Xcvr 0	REV 01	740-032210	J11A22334	CFP-100G-LR4
BRIDGE 0	REV 03	711-029995	EE6572	100GE Bridge Board
MMB 0	REV 07	710-025563	BBAJ4657	ST-MMB2
MMB 1	REV 07	710-025563	BBAJ3073	ST-MMB2
FPC 6	REV 05	750-010153	EF4936	FPC Type 5-3D
CPU	REV 06	711-030686	EF4189	SNG PMB
PIC 0	REV 10	750-034624	BBAN4109	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	B11J04895	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11J04898	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11J04021	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11J04903	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11J04311	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J04059	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11J04016	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11J04017	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B11J04887	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	B11J04297	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B11J04893	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B11J04022	SFP+-10G-SR
PIC 1	REV 02	750-034624	EE3711	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	AJH033X	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJJ01N0	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01SV	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJJ032L	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B10M01593	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJD0FF1	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01NU	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	123363A01305	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B10M00361	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJJ01M7	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AJJ032X	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AJJ01PG	SFP+-10G-SR
LMB 0	REV 04	711-034381	EF3838	Type-0 LMB
LMB 1	REV 03	711-035774	EF3821	Type-1 LMB
LMB 2	REV 04	711-034381	EF3834	Type-0 LMB
SPMB 0	REV 05	710-023321	ED1990	LCC Switch CPU
SPMB 1	REV 05	710-023321	EA2768	LCC Switch CPU
SIB 0	REV 02	711-036340	EF8802	SIB-HC-3D
SIB 1	REV 07	711-036340	EG2286	SIB-HC-3D
SIB 2	REV 07	711-036340	EG2252	SIB-HC-3D
SIB 3	REV 02	711-036340	EF1358	SIB-HC-3D
SIB 4	REV 02	711-036340	EF8806	SIB-HC-3D
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
-- Rev 2				
Fan Tray 2				Rear Fan Tray -- Rev 3

show chassis hardware models (T4000 Router)

```
user@host> show chassis hardware models
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 01	710-027486	RC8355	CHAS-BP-T1600-S

FPM Display	REV 01	710-021387	EF6764	CRAFT-T1600-S
CIP	REV 06	710-002895	BBAD9210	CIP-L-T640-S
PEM 0	REV 01	740-036442	VA00016	PWR-T-6-60-DC
SCG 0	REV 18	710-003423	BBAD7248	SCG-T-S
SCG 1	REV 18	710-003423	BBAE3874	SCG-T-S
Routing Engine 0	REV 05	740-026941	P737F-002248	RE-DUO-C1800-8G-S
Routing Engine 1	REV 06	740-026941	P737F-002653	RE-DUO-C1800-8G-S
CB 0	REV 09	710-022597	ED0295	CB-LCC-S
CB 1	REV 09	710-022597	EA6050	CB-LCC-S
FPC 3				
PIC 0	REV 08	750-035293	EF3657	PF-1CGE-CFP
PIC 1	REV 10	750-034624	BBAN4098	PF-12XGE-SFPP
FPC 5	REV 03	710-033871	BBAJ0768	T1600-FPC4-ES
PIC 1	REV 03	750-034781	EE6655	PD-1CE-CFP-FPC4
FPC 6				
PIC 0	REV 10	750-034624	BBAN4109	PF-12XGE-SFPP
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T4000-S
Fan Tray 2				FAN-REAR-TXP-LCC

show chassis hardware lcc (TX Matrix Router)

```
user@host> show chassis hardware lcc 0
lcc0-re0:
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			65751	T640
Midplane	REV 03	710-005608	RA1408	T640 Backplane
FPM GBUS	REV 09	710-002901	RA2784	T640 FPM Board
FPM Display	REV 05	710-002897	RA2825	FPM Display
CIP	REV 06	710-002895	HT0684	T Series CIP
PEM 0	Rev 11	740-002595	PM18483	Power Entry Module
PEM 1	Rev 11	740-002595	qb13984	Power Entry Module
SCG 0	REV 11	710-003423	HT0022	T640 Sonet Clock Gen.
Routing Engine 0	REV 13	740-005022	210865700363	RE-3.0 (RE-600)
CB 0	REV 03	710-007655	HW1195	Control Board (CB-T)
FPC 1	REV 05	710-007527	HM3245	FPC Type 2
CPU	REV 14	710-001726	HM1084	FPC CPU
PIC 0	REV 02	750-007218	AZ1112	2x OC-12 ATM2 IQ, SMIR
PIC 1	REV 02	750-007745	HG3462	4x OC-3 SONET, SMIR
PIC 2	REV 14	750-001901	BA5390	4x OC-12 SONET, SMIR
PIC 3	REV 09	750-008155	HS3012	2x G/E IQ, 1000 BASE
SFP 0		NON-JNPR	P1186TY	SFP-S
SFP 1	REV 01	740-007326	P11WLTF	SFP-SX
MMB 1	REV 02	710-005555	HL7514	MMB-288mbit
PPB 0	REV 04	710-003758	HM4405	PPB Type 2
PPB 1	REV 04	710-003758	AV1960	PPB Type 2
FPC 2	REV 08	710-010154	HZ3578	E-FPC Type 3
CPU	REV 05	710-010169	HZ3219	FPC CPU-Enhanced
PIC 0	REV 02	750-009567	HX2882	1x 10GE(LAN), XENPAK
SFP 0	REV 01	740-009898	USC202U709	XENPAK-LR
PIC 1	REV 03	750-003336	HJ9954	4x OC-48 SONET, SMSR
PIC 2	REV 01	750-004535	HC0235	1x OC-192 SM SR1
PIC 3	REV 07	750-007141	HX1699	10x 1GE(LAN), 1000 BASE
SFP 0	REV 01	740-007326	2441042	SFP-SX
SFP 1	REV 01	740-007326	2441027	SFP-SX
MMB 0	REV 03	710-010171	HV2365	MMB-5M3-288mbit
MMB 1	REV 03	710-010171	HZ3888	MMB-5M3-288mbit
SPMB 0	REV 09	710-003229	HW5245	T Series Switch CPU

SIB 3	REV 07	710-005781	HR5927	SIB-L8-F16
B Board	REV 06	710-005782	HR5971	SIB-L8-F16 (B)
SIB 4	REV 07	710-005781	HR5903	SIB-L8-F16
B Board	REV 06	710-005782	HZ5275	SIB-L8-F16 (B)

show chassis hardware scc (TX Matrix Router)

```
user@host> show chassis hardware scc
scc-re0:
```

```
-----
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               TX Matrix
Midplane      REV 04    710-004396   RB0014         SCC Midplane
FPM GBUS      REV 04    710-004617   HW9141         SCC FPM Board
FPM Display   REV 04    710-004619   HS5950         SCC FPM
CIP 0         REV 01    710-010218   HV9151         SCC CIP
CIP 1         REV 01    710-010218   HV9152         SCC CIP
PEM 1         Rev 11    740-002595   QB13977        Power Entry Module
Routing Engine 0 REV 05    740-008883   P11123900153  RE-4.0 (RE-1600)
CB 0          REV 01    710-011709   HR5964         Control Board (CB-TX)
SPMB 0        REV 09    710-003229   HW5293         T Series Switch CPU
SIB 3
SIB 4         REV 01    710-005839   HW1177         SIB-S8-F16
B Board       REV 01    710-005840   HW1202         SIB-S8-F16 (B)
```

show chassis hardware (T1600 Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               T1600
Midplane      REV 03    710-005608   RC4137         T640 Backplane
FPM GBUS      REV 10    710-002901   DT7062         T640 FPM Board
FPM Display   REV 05    710-002897   DS3067         FPM Display
CIP           REV 06    710-002895   DT3386         T-series CIP
PEM 0         Rev 07    740-017906   UA26344        Power Entry Module 3x80
PEM 1         Rev 18    740-002595   UF38441        Power Entry Module
SCG 0         REV 15    710-003423   DV0941         T640 Sonet Clock Gen.
Routing Engine 0 REV 08    740-014082   9009014502     RE-A-2000
Routing Engine 1 REV 07    740-014082   9009009591     RE-A-2000
CB 0          REV 05    710-007655   JA9360         Control Board (CB-T)
CB 1          REV 03    710-017707   DT3251         Control Board (CB-T)
FPC 0         REV 07    710-013558   DR4253         E2-FPC Type 2
CPU           REV 05    710-013563   DS3902         FPC CPU-Enhanced
PIC 0         REV 01    750-010618   CB5446         4x G/E SFP, 1000 BASE
Xcvr 0        REV 01    740-011613   P9F11CW        SFP-SX
Xcvr 1        REV 01    740-011613   P9F15C2        SFP-SX
Xcvr 2        REV 01    740-011782   PB94K0L        SFP-SX
PIC 1         REV 06    750-001900   HB6399         1x OC-48 SONET, SMSR
PIC 2         REV 14    750-001901   AP1092         4x OC-12 SONET, SMIR
PIC 3         REV 07    750-001900   AR8275         1x OC-48 SONET, SMSR
MMB 1         REV 07    710-010171   DS1524         MMB-5M3-288mbit
FPC 1         REV 06    710-013553   DL9067         E2-FPC Type 1
CPU           REV 04    710-013563   DM1685         FPC CPU-Enhanced
PIC 0         REV 08    750-001072   AB1688         1x G/E, 1000 BASE-SX
PIC 1         REV 10    750-012266   JX5519         4x 1GE(LAN), IQ2
Xcvr 0        REV 01    740-011613   AM0812S8UK6    SFP-SX
Xcvr 2        REV 01    740-011613   AM0812S8UK1    SFP-SX
Xcvr 3        REV 01    740-011782   P8N1YHG        SFP-SX
PIC 2         REV 22    750-005634   DP0083         1x CHOC12 IQ SONET, SMIR
```

MMB 1	REV 07	710-008923	DN1862	MMB 3M 288-bit
FPC 2	REV 01	710-005548	HJ9899	FPC Type 3
CPU	REV 06	710-001726	HC0586	FPC CPU
PIC 0	REV 16	750-007141	NC9660	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011613	AM0812S8XAR	SFP-SX
Xcvr 1	REV 01	740-011782	P920E7B	SFP-SX
Xcvr 2	REV 01	740-011613	AM0812S8XAU	SFP-SX
Xcvr 4	REV 01	740-011613	AM0812S8XAK	SFP-SX
Xcvr 5	REV 01	740-011613	AM0812S8XAA	SFP-SX
Xcvr 6	REV 01	740-011613	PAJ4NKY	SFP-SX
Xcvr 7	REV 01	740-011613	AM0812S8UJW	SFP-SX
Xcvr 8	REV 01	740-011782	PB81X89	SFP-SX
Xcvr 9	REV 01	740-011613	AM0812S8UJX	SFP-SX
PIC 1	REV 06	750-015217	DK3280	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011782	P8P0A3T	SFP-SX
Xcvr 1	REV 01	740-013111	5090002	SFP-T
Xcvr 2	REV 01	740-011613	AM0814S93BQ	SFP-SX
Xcvr 4		NON-JNPR	PDE0FAN	SFP-SX
Xcvr 5	REV 01	740-011782	P8Q20XY	SFP-SX
Xcvr 6	REV 01	740-011613	AM0812S8UJV	SFP-SX
Xcvr 7	REV 01	740-011613	AM0812S8UP7	SFP-SX
PIC 2	REV 05	750-004695	HT4383	1x Tunnel
PIC 3	REV 17	750-009553	RL0204	4x OC-48 SONET
Xcvr 0	REV 01	740-011785	PDS3T23	SFP-SR
Xcvr 1	REV 01	740-011785	P6Q0F3E	SFP-SR
MMB 0	REV 03	710-004047	HD5843	MMB-288mbit
MMB 1	REV 03	710-004047	HE3208	MMB-288mbit
PPB 0	REV 02	710-002845	HA4524	PPB Type 3
PPB 1	REV 02	710-002845	HA4766	PPB Type 3
FPC 3	REV 01	710-010154	HR0863	E-FPC Type 3
CPU	REV 01	710-010169	HN3422	FPC CPU-Enhanced
PIC 0	REV 07	750-012793	WF5096	1x 10GE(LAN/WAN) IQ2
Xcvr 0		NON-JNPR	M64294TP	XFP-10G-LR
PIC 1	REV 25	750-007141	DV2127	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011613	PFA6LTJ	SFP-SX
Xcvr 1	REV 01	740-011782	P9P0XV4	SFP-SX
Xcvr 2	REV 01	740-011782	P9M0TNX	SFP-SX
Xcvr 4	REV 01	740-011782	P9B0TTP	SFP-SX
Xcvr 5		NON-JNPR	PBS4LED	SFP-SX
PIC 2	REV 17	750-009553	RL0212	4x OC-48 SONET
Xcvr 0	REV 01	740-011785	PDS3T8G	SFP-SR
PIC 3	REV 32	750-003700	DL1279	1x OC-192 12xMM VSR
MMB 0	REV 01	710-010171	HR0821	MMB-288mbit
MMB 1	REV 01	710-010171	HR0818	MMB-288mbit
FPC 4	REV 16	710-013037	EB4919	FPC Type 4-ES
CPU	REV 09	710-016744	BBAA4382	ST-PMB2
PIC 0	REV 03	711-029996	EB1569	100GE
PIC 1	REV 05	711-029999	EB9983	100GE CFP
Xcvr 0	REV 0	740-032210	J10G80746	CFP-100G-LR4
BRIDGE 0	REV 02	711-029995	EB2235	100GE Bridge Board
MMB 0	REV 04	710-025563	BBAA7112	ST-MMB2
MMB 1	REV 04	710-025563	BBAA7149	ST-MMB2
FPC 5	REV 02	710-013037	DE3407	FPC Type 4-ES
CPU	REV 04	710-016744	DA2124	ST-PMB2
PIC 0	REV 16	750-012518	DF2554	4x OC-192 SONET XFP
Xcvr 0	REV 01	740-014279	AA0745N1FX8	XFP-OC192-SR
Xcvr 1	REV 01	740-014279	AA0748N1HN5	XFP-OC192-SR
Xcvr 2	REV 01	740-014279	AA0748N1HT6	XFP-OC192-SR

Xcvr 3	REV 01	740-014279	AA0744N1EC9	XFP-OC192-SR
PIC 1	REV 01	750-010850	JA0329	1x OC-768 SONET SR
MMB 0	REV 04	710-016036	DE9577	ST-MMB2
MMB 1	REV 04	710-016036	DK4060	ST-MMB2
FPC 6	REV 14	710-013037	DV1431	FPC Type 4-ES
CPU	REV 09	710-016744	DT9020	ST-PMB2
PIC 0	REV 11	750-017405	DM6261	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 01	740-014289	C701XU05Q	XFP-10G-SR
Xcvr 1	REV 01	740-014279	AA0748N1HPT	XFP-10G-LR
Xcvr 2	REV 01	740-014289	T08E19189	XFP-10G-SR
Xcvr 3	REV 01	740-014289	C715XU058	XFP-10G-SR
PIC 1	REV 13	750-017405	DP8772	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 02	740-011571	C850XJ037	XFP-10G-SR
Xcvr 1	REV 02	740-014289	C839XU0L9	XFP-10G-SR
Xcvr 2	REV 02	740-014289	C834XU05A	XFP-10G-SR
Xcvr 3	REV 02	740-014289	C810XU0CE	XFP-10G-SR
MMB 0	REV 01	710-025563	DT8454	ST-MMB2
MMB 1	REV 01	710-025563	DT8366	ST-MMB2
FPC 7	REV 09	710-007529	HZ7624	FPC Type 3
CPU	REV 15	710-001726	HZ1413	FPC CPU
PIC 0	REV 10	750-012793	DM5627	1x 10GE(LAN/WAN) IQ2
Xcvr 0	REV 02	740-011571	C831XJ062	XFP-10G-SR
PIC 1	REV 01	750-015217	JT6762	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011782	P8Q25JU	SFP-SX
Xcvr 1	REV 01	740-011782	P9B0U0K	SFP-SX
PIC 2	REV 01	750-015217	JS4268	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011613	AM0812S8XBZ	SFP-SX
Xcvr 1	REV 01	740-011613	AM0812S8XAP	SFP-SX
Xcvr 2	REV 01	740-011613	AM0812S8XBY	SFP-SX
Xcvr 3	REV 01	740-011613	AM0812S8XBX	SFP-SX
Xcvr 4	REV 01	740-011613	P9F1652	SFP-SX
Xcvr 5	REV 01	740-011782	P8Q21YC	SFP-SX
Xcvr 6	REV 01	740-011782	P8Q27HQ	SFP-SX
Xcvr 7	REV 01	740-011613	P8E2SSU	SFP-SX
PIC 3	REV 15	750-009450	NB6790	1x OC-192 SM SR2
MMB 0	REV 03	710-005555	HZ3450	MMB-288mbit
MMB 1	REV 03	710-005555	HZ3415	MMB-288mbit
PPB 0	REV 04	710-002845	HP0887	PPB Type 3
PPB 1	REV 04	710-002845	HW5255	PPB Type 3
SPMB 0	REV 10	710-003229	HX3699	T-series Switch CPU
SPMB 1	REV 12	710-003229	DT3091	T-series Switch CPU
SIB 0	REV 07	710-013074	DS4747	SIB-I8-SF
SIB 1	REV 07	710-013074	DS4942	SIB-I8-SF
SIB 2	REV 07	710-013074	DS4965	SIB-I8-SF
SIB 3	REV 07	710-013074	DS4990	SIB-I8-SF
SIB 4	REV 07	710-013074	DS4944	SIB-I8-SF
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 2

show chassis hardware (TX Matrix Plus Router)

```
user@host> show chassis hardware
sfc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN113186EAHB	TXP
Midplane	REV 05	710-022574	TS3822	SFC Midplane
FPM Display	REV 03	710-024027	DW4701	TXP FPM Display
CIP 0	REV 05	710-023792	DW7998	TXP CIP

CIP 1	REV 05	710-023792	DW7999	TXP CIP
PEM 0	Rev 04	740-027463	UM26367	Power Entry Module
PEM 1	Rev 04	740-027463	UM26346	Power Entry Module
Routing Engine 0	REV 06	740-026942	737A-1081	RE-DUO-2600
Routing Engine 1	REV 06	740-026942	737A-1043	RE-DUO-2600
CB 0	REV 05	710-022606	DW4435	SFC Control Board
CB 1	REV 09	710-022606	DW6100	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 04	750-024564	DW5764	F13 SIB
B Board	REV 03	710-023431	DW9053	F13 SIB Mezz
SIB F13 3	REV 04	750-024564	DW5785	F13 SIB
B Board	REV 03	710-023431	DW9030	F13 SIB Mezz
SIB F13 6				
SIB F13 8	REV 04	750-024564	DW5752	F13 SIB
B Board	REV 03	710-023431	DW9051	F13 SIB Mezz
SIB F13 11	REV 04	750-024564	DW5782	F13 SIB
B Board	REV 03	710-023431	DW9058	F13 SIB Mezz
SIB F13 12	REV 03	750-024564	DT9466	F13 SIB
B Board	REV 02	710-023431	DT6556	F13 SIB Mezz
SIB F2S 0/0	REV 05	710-022603	DW7898	F2S SIB
B Board	REV 05	710-023787	DW7625	F2S SIB Mezz
SIB F2S 0/2	REV 05	710-022603	DW7811	F2S SIB
B Board	REV 05	710-023787	DW7550	F2S SIB Mezz
SIB F2S 0/4	REV 04	710-022603	DW4873	F2S SIB
B Board	REV 05	710-023787	DW8509	F2S SIB Mezz
SIB F2S 0/6	REV 04	710-022603	DW4867	F2S SIB
B Board	REV 05	710-023787	DW8472	F2S SIB Mezz
SIB F2S 1/0	REV 04	710-022603	DW4871	F2S SIB
B Board	REV 05	710-023787	DW8497	F2S SIB Mezz
SIB F2S 1/2	REV 05	710-022603	DW7868	F2S SIB
B Board	REV 05	710-023787	DW7551	F2S SIB Mezz
SIB F2S 1/4	REV 04	710-022603	DW4854	F2S SIB
B Board	REV 05	710-023787	DW8496	F2S SIB Mezz
SIB F2S 1/6	REV 05	710-022603	DW7889	F2S SIB
B Board	REV 05	710-023787	DW7496	F2S SIB Mezz
SIB F2S 2/0	REV 04	710-022603	DW4852	F2S SIB
B Board	REV 05	710-023787	DW8498	F2S SIB Mezz
SIB F2S 2/2	REV 04	710-022603	DW4845	F2S SIB
B Board	REV 05	710-023787	DW8457	F2S SIB Mezz
SIB F2S 2/4	REV 05	710-022603	DW7802	F2S SIB
B Board	REV 05	710-023787	DW7562	F2S SIB Mezz
SIB F2S 2/6	REV 04	710-022603	DW4822	F2S SIB
B Board	REV 05	710-023787	DW8467	F2S SIB Mezz
SIB F2S 3/0	REV 05	710-022603	DW7815	F2S SIB
B Board	REV 05	710-023787	DW7518	F2S SIB Mezz
SIB F2S 3/2	REV 03	710-022603	DV0068	F2S SIB
B Board	REV 03	710-023787	DT9974	F2S SIB Mezz
SIB F2S 3/4	REV 05	710-022603	DW7874	F2S SIB
B Board	REV 05	710-023787	DW7601	F2S SIB Mezz
SIB F2S 3/6	REV 03	710-022603	DV0033	F2S SIB
B Board	REV 03	710-023787	DT9969	F2S SIB Mezz
SIB F2S 4/0	REV 03	710-022603	DV0043	F2S SIB
B Board	REV 03	710-023787	DT9948	F2S SIB Mezz
SIB F2S 4/2	REV 05	710-022603	DW5446	F2S SIB
B Board	REV 05	710-023787	DW7611	F2S SIB Mezz
SIB F2S 4/4	REV 04	710-022603	DW4826	F2S SIB
B Board	REV 05	710-023787	DW8458	F2S SIB Mezz
SIB F2S 4/6	REV 03	710-022603	DV0026	F2S SIB
B Board	REV 03	710-023787	DT9963	F2S SIB Mezz
Fan Tray 0	REV 02	760-024497	DR8290	Front Fan Tray

Fan Tray 1	REV 02	760-024497	DR8293	Front Fan Tray
Fan Tray 2	REV 05	760-024502	DR8280	Rear Fan Tray
Fan Tray 3				
Fan Tray 4	REV 05	760-024502	DR8276	Rear Fan Tray
Fan Tray 5	REV 02	760-024502	DP5643	Rear Fan Tray

lcc0-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11036F8AHA	T1600
Midplane	REV 03	710-017247	RC3799	T-series Backplane
FPM GBUS	REV 10	710-002901	DP7009	T640 FPM Board
FPM Display	REV 01	710-021387	DN7026	T1600 FPM Display
CIP	REV 06	710-002895	DP6024	T-series CIP
PEM 1	Rev 02	740-023211	WA50019	Power Entry Module 4x60A
SCG 0	REV 15	710-003423	DR6757	T640 Sonet Clock Gen.
SCG 1	REV 15	710-003423	DS2225	T640 Sonet Clock Gen.
Routing Engine 0	REV 01	740-026941	737F-1040	RE-DUO-1800
Routing Engine 1	REV 01	740-026941	737F-1016	RE-DUO-1800
CB 0	REV 06	710-022597	DX4011	LCC Control Board
CB 1	REV 06	710-022597	DX4017	LCC Control Board
FPC 1	REV 07	710-013035	DN5847	FPC Type 3-ES
CPU	REV 08	710-016744	DP2570	ST-PMB2
PIC 0	REV 05	750-015217	DB0418	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011782	P8Q27ZG	SFP-SX
Xcvr 1		NON-JNPR	PDA1U0D	SFP-SX
Xcvr 2	REV 01	740-011613	P9F1ALW	SFP-SX
Xcvr 3	REV 01	740-011782	PBA403V	SFP-SX
Xcvr 4		NON-JNPR	PDE09DP	SFP-SX
Xcvr 5	REV 01	740-011782	PCH2P4K	SFP-SX
Xcvr 6	REV 01	740-011782	PB94K0F	SFP-SX
Xcvr 7	REV 01	740-011782	PBA2R2A	SFP-SX
PIC 1	REV 03	750-004424	HJ4020	1x 10GE(LAN),DWDM
PIC 2	REV 01	750-003336	HG6073	4x OC-48 SONET, SMSR
MMB 0	REV 04	710-016036	DP3401	ST-MMB2
FPC 3	REV 12	710-013037	DR1169	FPC Type 4-ES
CPU	REV 08	710-016744	DP9429	ST-PMB2
PIC 0	REV 02	750-010850	JA0332	1x OC-768 SONET SR
MMB 0	REV 04	710-016036	DR0628	ST-MMB2
MMB 1	REV 04	710-016036	DR0592	ST-MMB2
FPC 4	REV 05	710-021534	DR7350	FPC Type 1-ES
CPU	REV 08	710-016744	DP8096	ST-PMB2
PIC 0	REV 04	750-014627	DP9171	4x OC-3 1x OC-12 SFP
Xcvr 0	REV 02	740-011615	PDE2RVR	SFP-SR
PIC 1	REV 22	750-005634	DS5815	1x CHOC12 IQ SONET, SMIR
PIC 2	REV 09	750-002911	CF4539	4x F/E, 100 BASE-TX
PIC 3	REV 08	750-021652	DR2827	1x CHOC12 IQE SONET
Xcvr 0		NON-JNPR	8	UNKNOWN
MMB 0	REV 04	710-016036	DR0809	ST-MMB2
FPC 5	REV 07	710-007529	HS5608	FPC Type 3
CPU	REV 15	710-001726	HX4351	FPC CPU
PIC 0	REV 14	750-009567	WJ8961	1x 10GE(LAN),XENPAK
Xcvr 0	REV 01	740-013170	J05K05961	XENPAK-LR
PIC 1	REV 16	750-007141	JJ8146	10x 1GE(LAN), 1000 BASE
Xcvr 1	REV 01	740-011613	P9F117T	SFP-SX
Xcvr 2	REV 01	740-011782	PBA2VCL	SFP-SX
Xcvr 3	REV 01	740-011782	PB83DRB	SFP-SX
Xcvr 4	REV 01	740-011613	AM0812S8UP8	SFP-SX

PIC 2	REV 12	750-009567	WF3566	1x 10GE(LAN), XENPAK
Xcvr 0	REV 02	740-013170	T07C94489	XENPAK-LR
MMB 0	REV 03	710-005555	HZ1907	MMB-288mbit
MMB 1	REV 03	710-005555	HW5283	MMB-288mbit
PPB 0	REV 04	710-002845	HZ7717	PPB Type 3
PPB 1	REV 04	710-002845	HS0110	PPB Type 3
FPC 6	REV 07	710-013035	DP7486	FPC Type 3-ES
CPU	REV 08	710-016744	DP2545	ST-PMB2
PIC 0	REV 09	750-009567	NE6323	1x 10GE(LAN), XENPAK
Xcvr 0	REV 02	740-013170	T09C71959	XENPAK-LR
PIC 1	REV 06	750-015217	DN4775	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011782	P7E0T6M	SFP-SX
Xcvr 1	REV 01	740-011613	AM0812S8XAY	SFP-SX
Xcvr 2	REV 01	740-011782	P7E0T6J	SFP-SX
Xcvr 3	REV 01	740-011782	PCH2P7D	SFP-SX
Xcvr 4	REV 01	740-011782	P9B0QYT	SFP-SX
Xcvr 5	REV 01	740-011613	AM0812S8WQJ	SFP-SX
Xcvr 6	REV 02	740-013111	9301220	SFP-T
Xcvr 7	REV 01	740-011782	P9B0TZ5	SFP-SX
PIC 2	REV 06	750-015217	DM6747	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011613	PAP0ZB2	SFP-SX
Xcvr 1	REV 01	740-013111	70191002	SFP-T
Xcvr 6	REV 01	740-011782	PBA29H8	SFP-SX
Xcvr 7	REV 01	740-011613	AM0812S8WQG	SFP-SX
MMB 0	REV 04	710-016036	DP3238	ST-MMB2
FPC 7	REV 03	710-021540	DV3154	FPC Type 2-ES
CPU	REV 09	710-016744	DT9053	ST-PMB2
PIC 0	REV 13	750-001901	HB4225	4x OC-12 SONET, SMIR
PIC 1	REV 05	750-001900	AD3644	1x OC-48 SONET, SMSR
PIC 2	REV 10	750-008155	HV0335	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011782	PCH2UKF	SFP-SX
Xcvr 1	REV 01	740-011782	PCH2V19	SFP-SX
PIC 3	REV 03	750-014638	JS9493	1x OC-48-12-3 SFP
Xcvr 0	REV 01	740-011785	P6Q0ENK	SFP-SR
MMB 0	REV 05	710-016036	DP3323	ST-MMB2
SPMB 0	REV 04	710-023321	DX3004	LCC Switch CPU
SPMB 1	REV 04	710-023321	DX3009	LCC Switch CPU
SIB 0	REV 07	710-022594	DW4195	LCC SIB
B Board	REV 07	710-023185	DW3930	LCC SIB Mezz
SIB 1	REV 07	710-022594	DW4179	LCC SIB
B Board	REV 07	710-023185	DW3919	LCC SIB Mezz
SIB 2				
SIB 3	REV 06	710-022594	DT8251	LCC SIB
B Board	REV 06	710-023185	DT5792	LCC SIB Mezz
SIB 4	REV 08	710-022594	DW8014	LCC SIB
B Board	REV 07	710-023185	DW3917	LCC SIB Mezz
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 3

lcc1-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1102270AHA	T1600
Midplane	REV 04	710-017247	RC5358	T-series Backplane
FPM GBUS	REV 10	710-002901	DS3443	T640 FPM Board
FPM Display	REV 01	710-021387	DS6411	T1600 FPM Display
CIP	REV 06	710-002895	DS4235	T-series CIP
PEM 0	Rev 02	740-023211	VM82438	Power Entry Module 4x60A
SCG 0	REV 15	710-003423	DS6649	T640 Sonet Clock Gen.

SCG 1	REV 15	710-003423	DR6775	T640 Sonet Clock Gen.
Routing Engine 0	REV 01	740-026941	737F-1083	RE-DUO-1800
Routing Engine 1	REV 01	740-026941	737F-1104	RE-DUO-1800
CB 0	REV 06	710-022597	DW8542	LCC Control Board
CB 1	REV 06	710-022597	DW8530	LCC Control Board
FPC 0	REV 02	710-010845	JE2392	FPC Type 4
CPU	REV 02	710-011481	JF6820	FPC CPU-Enhanced
PIC 0	REV 11	750-017405	DP7259	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 01	740-014279	AA0741N1C8T	XFP-10G-LR
Xcvr 1	REV 01	740-014279	AA0746N1GAM	XFP-10G-LR
Xcvr 2	REV 01	740-014279	AA0747N1H0B	XFP-10G-LR
Xcvr 3	REV 01	740-014279	AA0748N1HZ5	XFP-10G-LR
MMB 0	REV 03	710-010842	HY7601	ST-MMB
FPC 1	REV 16	710-013037	BBAA7398	FPC Type 4-ES
CPU	REV 09	710-016744	BBAA2329	ST-PMB2
PIC 0	REV 03	711-029996	EB1575	100GE
PIC 1	REV 06	750-034781	EB9980	100GE CFP
MMB 0	REV 04	710-025563	BBAA5325	ST-MMB2
MMB 1	REV 04	710-025563	BBAA5444	ST-MMB2
FPC 2	REV 16	710-013037	BBAA7185	FPC Type 4-ES
CPU	REV 09	710-016744	BBAA3522	ST-PMB2
PIC 0	REV 03	711-029996	EB1557	100GE
PIC 1	REV 05	750-034781	EB4660	100GE CFP
Xcvr 0	REV 0	740-032210	J10F73666	CFP-100G-LR4
BRIDGE 0	REV 02	711-029995	EB2237	100GE Bridge Board
MMB 0	REV 04	710-025563	BBAA5347	ST-MMB2
MMB 1	REV 04	710-025563	BBAA5401	ST-MMB2
FPC 3	REV 10	710-021534	DZ0941	FPC Type 1-ES
CPU	REV 09	710-016744	DY6364	ST-PMB2
PIC 0	REV 13	750-012266	DK9192	4x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011613	AM0812S8WVD	SFP-SX
Xcvr 1		NON-JNPR	PDD63Q4	SFP-SX
Xcvr 2		NON-JNPR	PDE4G54	SFP-SX
Xcvr 3		NON-JNPR	PD4OMAG	SFP-SX
PIC 1	REV 01	750-007641	HJ2003	1x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	AM0812S8WVG	SFP-SX
PIC 3	REV 17	750-007444	JB6873	1x CHSTM1 IQ SDH, SMIR
MMB 0	REV 04	710-025563	DZ0281	ST-MMB2
FPC 4	REV 06	710-013035	DK0614	FPC Type 3-ES
CPU	REV 07	710-016744	DK1616	ST-PMB2
PIC 0	REV 22	750-007141	DM1870	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011782	PCL3UKW	SFP-SX
Xcvr 1	REV 01	740-011782	P7E0T73	SFP-SX
Xcvr 2	REV 01	740-007326	P4TOWLR	SFP-SX
Xcvr 3	REV 01	740-011782	PAR1LLRL	SFP-SX
Xcvr 4	REV 01	740-011782	P9M0U3Z	SFP-SX
Xcvr 5	REV 01	740-011782	P9M0U0C	SFP-SX
Xcvr 6	REV 01	740-011782	P9M0TLG	SFP-SX
Xcvr 7	REV 01	740-011782	P9M0U0F	SFP-SX
Xcvr 8	REV 01	740-011613	PFA6LAP	SFP-SX
Xcvr 9	REV 01	740-011782	PCH2P0U	SFP-SX
PIC 1	REV 16	750-009450	CV2565	1x OC-192 SM SR2
PIC 2	REV 05	750-004424	HH3057	1x 10GE(LAN), 10GBASE-LR
PIC 3	REV 12	750-013423	DP0403	MultiServices 500
MMB 0	REV 04	710-016036	DK1988	ST-MMB2
FPC 5	REV 07	710-013560	DR0004	E2-FPC Type 3
CPU	REV 05	710-013563	DR0089	FPC CPU-Enhanced
PIC 0	REV 11	750-012793	DR6107	1x 10GE(LAN/WAN) IQ2
Xcvr 0	REV 01	740-014289	C743XU074	XFP-10G-SR

PIC 1	REV 01	750-004695	HD5980	1x Tunnel
PIC 2	REV 32	750-003700	DL3770	1x OC-192 12xMM VSR
PIC 3	REV 12	750-009553	WB8901	4x OC-48 SONET
Xcvr 0	REV 01	740-011785	P9D1GTQ	SFP-SR
Xcvr 1	REV 01	740-011785	PDSOMMB	SFP-SR
Xcvr 3	REV 01	740-011785	PDE1KXP	SFP-SR
MMB 0	REV 07	710-010171	DP7374	MMB-5M3-288mbit
MMB 1	REV 07	710-010171	DP7404	MMB-5M3-288mbit
FPC 6	REV 07	710-013035	DM0994	FPC Type 3-ES
CPU	REV 07	710-016744	DM3651	ST-PMB2
PIC 0	REV 07	750-015217	DN4743	8x 1GE(TYPE3), IQ2
Xcvr 3	REV 01	740-011613	AM0812S8XB0	SFP-SX
Xcvr 4	REV 01	740-011782	PB829RB	SFP-SX
Xcvr 5	REV 01	740-011782	P8J1SYX	SFP-SX
PIC 1	REV 03	750-003336	HJ9954	4x OC-48 SONET, SMSR
PIC 3	REV 02	750-012793	JM7665	1x 10GE(LAN/WAN) IQ2
MMB 0	REV 04	710-016036	DN6913	ST-MMB2
FPC 7	REV 08	710-010845	JM3958	FPC Type 4
CPU	REV 04	710-011481	JK3669	FPC CPU-Enhanced
PIC 0	REV 11	750-017405	DP8837	4x 10GE (LAN/WAN) XFP
Xcvr 1	REV 01	740-014279	753019A00277	XFP-10G-LR
Xcvr 2	REV 02	740-011571	C850XJ00P	XFP-10G-SR
Xcvr 3	REV 01	740-014279	AA0813N1RTG	XFP-10G-LR
MMB 0	REV 04	710-010842	JN1971	ST-MMB
SPMB 0	REV 04	710-023321	DW3629	LCC Switch CPU
SPMB 1	REV 04	710-023321	DW3621	LCC Switch CPU
SIB 0	REV 07	710-022594	DW4200	LCC SIB
B Board	REV 07	710-023185	DW3932	LCC SIB Mezz
SIB 1	REV 07	710-022594	DW4193	LCC SIB
B Board	REV 07	710-023185	DW3904	LCC SIB Mezz
SIB 2				
SIB 3	REV 07	710-022594	DW4210	LCC SIB
B Board	REV 06	710-023185	DT5780	LCC SIB Mezz
SIB 4	REV 08	710-022594	DW8019	LCC SIB
B Board	REV 06	710-023185	DT5795	LCC SIB Mezz
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 3

show chassis hardware sfc (TX Matrix Plus Router)

```
user@host> show chassis hardware sfc 0
sfc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN112F007AHB	TXP
Midplane	REV 05	710-022574	TS4027	SFC Midplane
FPM Display	REV 03	710-024027	DX0282	TXP FPM Display
CIP 0	REV 04	710-023792	DW4889	TXP CIP
CIP 1	REV 04	710-023792	DW4887	TXP CIP
PEM 0	Rev 07	740-027463	UM26368	Power Entry Module
Routing Engine 0	REV 01	740-026942	737A-1064	SFC RE
Routing Engine 1	REV 01	740-026942	737A-1082	SFC RE
CB 0	REV 09	710-022606	DW6099	SFC Control Board
CB 1	REV 09	710-022606	DW6096	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 04	710-022600	DX0841	F13 SIB
B Board	REV 03	710-023431	DX0966	F13 SIB Mezz
SIB F13 1	REV 04	750-024564	DW5776	F13 SIB

B Board	REV 03	710-023431	DW9028	F13 SIB
SIB F13 3	REV 04	750-024564	DW5762	F13 SIB
B Board	REV 03	710-023431	DW9059	F13 SIB
SIB F13 4	REV 04	750-024564	DW5797	F13 SIB
B Board	REV 03	710-023431	DW9041	F13 SIB
SIB F13 6	REV 04	750-024564	DW5770	F13 SIB
B Board	REV 03	710-023431	DW9079	F13 SIB Mezz
SIB F13 7	REV 04	750-024564	DW5758	F13 SIB
B Board	REV 03	710-023431	DW9047	F13 SIB
SIB F13 8	REV 04	750-024564	DW5761	F13 SIB
B Board	REV 03	710-023431	DW9043	F13 SIB Mezz
SIB F13 9	REV 04	750-024564	DW5754	F13 SIB
B Board	REV 03	710-023431	DW9078	F13 SIB Mezz
SIB F13 11	REV 04	710-022600	DX0826	F13 SIB
B Board	REV 03	710-023431	DX0967	F13 SIB Mezz
SIB F13 12	REV 04	750-024564	DW5794	F13 SIB
B Board	REV 03	710-023431	DW9044	F13 SIB Mezz
SIB F2S 0/0	REV 05	710-022603	DW7897	F2S SIB
B Board	REV 05	710-023787	DW7657	NEO PMB
SIB F2S 0/2	REV 05	710-022603	DW7833	F2S SIB
B Board	REV 05	710-023787	DW7526	NEO PMB
SIB F2S 0/4	REV 05	710-022603	DW7875	F2S SIB
B Board	REV 05	710-023787	DW7588	NEO PMB
SIB F2S 0/6	REV 05	710-022603	DW7860	F2S SIB
B Board	REV 05	710-023787	DW7589	NEO PMB
SIB F2S 1/0	REV 04	710-022603	DW4820	F2S SIB
B Board	REV 05	710-023787	DW8510	NEO PMB
SIB F2S 1/2	REV 05	710-022603	DW7849	F2S SIB
B Board	REV 05	710-023787	DW7525	NEO PMB
SIB F2S 1/4	REV 05	710-022603	DW7927	F2S SIB
B Board	REV 05	710-023787	DW7556	F2S SIB Mezz
SIB F2S 1/6	REV 05	710-022603	DW7866	F2S SIB
B Board	REV 05	710-023787	DW7651	NEO PMB
SIB F2S 2/0	REV 05	710-022603	DW7880	F2S SIB
B Board	REV 05	710-023787	DW7523	NEO PMB
SIB F2S 2/2	REV 05	710-022603	DW7895	F2S SIB
B Board	REV 05	710-023787	DW7591	NEO PMB
SIB F2S 2/4	REV 05	710-022603	DW7907	F2S SIB
B Board	REV 05	710-023787	DW7590	NEO PMB
SIB F2S 2/6	REV 05	710-022603	DW7785	F2S SIB
B Board	REV 05	710-023787	DW7524	NEO PMB
SIB F2S 3/0	REV 05	710-022603	DW7782	F2S SIB
B Board	REV 05	710-023787	DW7634	NEO PMB
SIB F2S 3/2	REV 05	710-022603	DW7793	F2S SIB
B Board	REV 05	710-023787	DW7548	NEO PMB
SIB F2S 3/4	REV 05	710-022603	DW7779	F2S SIB
B Board	REV 05	710-023787	DW7587	NEO PMB
SIB F2S 3/6	REV 05	710-022603	DW7930	F2S SIB
B Board	REV 05	710-023787	DW7505	NEO PMB
SIB F2S 4/0	REV 05	710-022603	DW7867	F2S SIB
B Board	REV 05	710-023787	DW7656	NEO PMB
SIB F2S 4/2	REV 05	710-022603	DW7917	F2S SIB
B Board	REV 05	710-023787	DW7640	NEO PMB
SIB F2S 4/4	REV 05	710-022603	DW7929	F2S SIB
B Board	REV 05	710-023787	DW7643	NEO PMB
SIB F2S 4/6	REV 05	710-022603	DW7870	F2S SIB
B Board	REV 05	710-023787	DW7635	NEO PMB
Fan Tray 0	REV 06	760-024497	DV7831	Front Fan Tray
Fan Tray 1	REV 06	760-024497	DV9614	Front Fan Tray
Fan Tray 2	REV 06	760-024502	DV9618	Rear Fan Tray
Fan Tray 3	REV 06	760-024502	DV9616	Rear Fan Tray

Fan Tray 4	REV 06	760-024502	DV7807	Rear Fan Tray
Fan Tray 5	REV 06	760-024502	DV7828	Rear Fan Tray

show chassis hardware extensive (TX Matrix Plus Router)

```
user@host> show chassis hardware extensive
sfc0-re0:
```

```
-----
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Jedec Code:   0x7fb0          EEPROM Version: 0x02
S/N:          JN112F007AHB
Assembly ID:  0x052c          Assembly Version: 00.00
Date:         00-00-0000      Assembly Flags:  0x00
ID: TXP
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 2c 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 4a 4e 31 31 32 46 30 30 37 41 48 42 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane      REV 05    710-022574    TS4027          SFC Midplane
Jedec Code:   0x7fb0          EEPROM Version: 0x01
P/N:          710-022574      S/N:           TS4027
Assembly ID:  0x0962          Assembly Version: 01.05
Date:         03-23-2009      Assembly Flags:  0x00
Version:      REV 05
ID: SFC Midplane
Board Information Record:
Address 0x00: ad 01 ff ff 00 1d b5 14 00 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 09 62 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 31 30 2d 30 32 32 35 37 34 00 00
Address 0x20: 53 2f 4e 20 54 53 34 30 32 37 00 00 00 17 03 07
Address 0x30: d9 ff ff ff ad 01 ff ff 00 1d b5 14 00 00 ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Display   REV 03    710-024027    DX0282          TXP FPM Display
Jedec Code:   0x7fb0          EEPROM Version: 0x01
P/N:          710-024027      S/N:           DX0282
Assembly ID:  0x096c          Assembly Version: 01.03
Date:         02-10-2009      Assembly Flags:  0x00
Version:      REV 03
ID: TXP FPM Display          FRU Model Number: CRAFT-TXP
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 09 6c 01 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 31 30 2d 30 32 34 30 32 37 00 00
Address 0x20: 53 2f 4e 20 44 58 30 32 38 32 00 00 00 0a 02 07
Address 0x30: d9 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 43
Address 0x50: 52 41 46 54 2d 54 58 50 00 00 00 00 00 00 00 00
```



```

Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
CIP 0          REV 04    710-023792    DW4889          TXP CIP
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           710-023792      S/N:             DW4889
Assembly ID:   0x0969          Assembly Version: 01.04
Date:          01-26-2009      Assembly Flags:   0x00
Version:       REV 04
ID: TXP CIP          FRU Model Number: CIP-TXP
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```

show chassis hardware clei-models (TX Matrix Plus Router)

```

user@host> show chassis hardware clei-models
sfc0-re0:

```

```
-----
Hardware inventory:

```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 05	710-022574		CHAS-BP-TXP-S
FPM Display	REV 03	710-024027		CRAFT-TXP-S
CIP 0	REV 05	710-023792		CIP-TXP-S
CIP 1	REV 05	710-023792		CIP-TXP-S
PEM 0	Rev 04	740-027463	IPUPAFGKTA	PWR-TXP-7-60-DC
PEM 1	Rev 04	740-027463	IPUPAFGKTA	PWR-TXP-7-60-DC
Routing Engine 0	REV 06	740-026942		RE-DUO-C2600-16G-S
Routing Engine 1	REV 06	740-026942		RE-DUO-C2600-16G-S
CB 0	REV 05	710-022606		CB-TXP-S
CB 1	REV 09	710-022606		CB-TXP-S
SIB F13 0	REV 04	750-024564		SIB-TXP-F13
SIB F13 3	REV 04	750-024564		SIB-TXP-F13
SIB F13 8	REV 04	750-024564		SIB-TXP-F13
SIB F13 11	REV 04	750-024564		SIB-TXP-F13
SIB F13 12	REV 03	750-024564		SIB-TXP-F13
SIB F2S 0/0	REV 05	710-022603		SIB-TXP-F2S-S
SIB F2S 0/2	REV 05	710-022603		SIB-TXP-F2S-S
SIB F2S 0/4	REV 04	710-022603		SIB-TXP-F2S-S
SIB F2S 0/6	REV 04	710-022603		SIB-TXP-F2S-S
SIB F2S 1/0	REV 04	710-022603		SIB-TXP-F2S-S
SIB F2S 1/2	REV 05	710-022603		SIB-TXP-F2S-S
SIB F2S 1/4	REV 04	710-022603		SIB-TXP-F2S-S
SIB F2S 1/6	REV 05	710-022603		SIB-TXP-F2S-S
SIB F2S 2/0	REV 04	710-022603		SIB-TXP-F2S-S
SIB F2S 2/2	REV 04	710-022603		SIB-TXP-F2S-S
SIB F2S 2/4	REV 05	710-022603		SIB-TXP-F2S-S
SIB F2S 2/6	REV 04	710-022603		SIB-TXP-F2S-S
SIB F2S 3/0	REV 05	710-022603		SIB-TXP-F2S-S
SIB F2S 3/2	REV 03	710-022603		SIB-TXP-F2S-S
SIB F2S 3/4	REV 05	710-022603		SIB-TXP-F2S-S
SIB F2S 3/6	REV 03	710-022603		SIB-TXP-F2S-S
SIB F2S 4/0	REV 03	710-022603		SIB-TXP-F2S-S
SIB F2S 4/2	REV 05	710-022603		SIB-TXP-F2S-S
SIB F2S 4/4	REV 04	710-022603		SIB-TXP-F2S-S
SIB F2S 4/6	REV 03	710-022603		SIB-TXP-F2S-S
Fan Tray 0	REV 02	760-024497		FANTRAY-TXP-H-S
Fan Tray 1	REV 02	760-024497		FANTRAY-TXP-H-S
Fan Tray 2	REV 05	760-024502		FANTRAY-TXP-V-S
Fan Tray 3				
Fan Tray 4	REV 05	760-024502		FANTRAY-TXP-V-S
Fan Tray 5	REV 02	760-024502		FANTRAY-TXP-V-S

lcc0-re0:

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 03	710-017247		CHAS-BP-T1600-S
FPM Display	REV 01	710-021387		CRAFT-T1600-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 1	Rev 02	740-023211	IPUPAC8KTA	PWR-T1600-4-60-DC-S
SCG 0	REV 15	710-003423		SCG-T-S
SCG 1	REV 15	710-003423		SCG-T-S
Routing Engine 0	REV 01	740-026941		RE-DUO-C1800-8G-S
Routing Engine 1	REV 01	740-026941		RE-DUO-C1800-8G-S
CB 0	REV 06	710-022597		CB-LCC-S
CB 1	REV 06	710-022597		CB-LCC-S
FPC 1	REV 07	710-013035		T640-FPC3-ES
PIC 0	REV 05	750-015217		PC-8GE-TYPE3-SFP-IQ2
PIC 1	REV 03	750-004424		PC-1XGE-LR
PIC 2	REV 01	750-003336		PC-40C48-SON-SMSR
FPC 3	REV 12	710-013037		T1600-FPC4-ES
PIC 0	REV 02	750-010850		PD-10C768-SON-SR
FPC 4	REV 05	710-021534		T640-FPC1-ES
PIC 0	REV 04	750-014627		PB-40C3-10C12-SON-SFP
PIC 1	REV 22	750-005634		PB-1CHOC12SMIR-QPP
PIC 2	REV 09	750-002911		PB-4FE-TX
PIC 3	REV 08	750-021652		PB-1CHOC12-STM4-IQE-SFP
FPC 5	REV 07	710-007529		T640-FPC3
PIC 0	REV 14	750-009567		PC-1XGE-XENPAK
PIC 1	REV 16	750-007141		PC-10GE-SFP
PIC 2	REV 12	750-009567		PC-1XGE-XENPAK
FPC 6	REV 07	710-013035		T640-FPC3-ES
PIC 0	REV 09	750-009567		PC-1XGE-XENPAK
PIC 1	REV 06	750-015217		PC-8GE-TYPE3-SFP-IQ2
PIC 2	REV 06	750-015217		PC-8GE-TYPE3-SFP-IQ2
FPC 7	REV 03	710-021540		T640-FPC2-ES
PIC 0	REV 13	750-001901		PB-40C12-SON-SMIR
PIC 1	REV 05	750-001900		PB-10C48-SON-SMSR
PIC 2	REV 10	750-008155		PB-2GE-SFP-QPP
PIC 3	REV 03	750-014638		PB-10C48-SON-B-SFP
SIB 0	REV 07	710-022594		SIB-TXP-T1600-S
SIB 1	REV 07	710-022594		SIB-TXP-T1600-S
SIB 3	REV 06	710-022594		SIB-TXP-T1600-S
SIB 4	REV 08	710-022594		SIB-TXP-T1600-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FANTRAY-TXP-R-S

lcc1-re0:

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 04	710-017247		CHAS-BP-T1600-S
FPM Display	REV 01	710-021387		CRAFT-T1600-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 0	Rev 02	740-023211	IPUPAC8KTA	PWR-T1600-4-60-DC-S
SCG 0	REV 15	710-003423		SCG-T-S
SCG 1	REV 15	710-003423		SCG-T-S
Routing Engine 0	REV 01	740-026941		RE-DUO-C1800-8G-S
Routing Engine 1	REV 01	740-026941		RE-DUO-C1800-8G-S
CB 0	REV 06	710-022597		CB-LCC-S
CB 1	REV 06	710-022597		CB-LCC-S
FPC 0	REV 02	710-010845		T640-FPC4-ES

PIC 0	REV 11	750-017405	PD-4XGE-XFP
FPC 1	REV 16	710-013037	T1600-FPC4-ES
PIC 1	REV 06	750-034781	PD-1CE-CFP
FPC 2	REV 16	710-013037	T1600-FPC4-ES
PIC 1	REV 05	750-034781	PD-1CE-CFP
FPC 3	REV 10	710-021534	T640-FPC1-ES
PIC 0	REV 13	750-012266	PB-4GE-TYPE1-SFP-IQ2
PIC 1	REV 01	750-007641	PE-1GE-SFP-QPP
PIC 3	REV 17	750-007444	PB-1CHSTM1-SMIR-QPP
FPC 4	REV 06	710-013035	T640-FPC3-ES
PIC 0	REV 22	750-007141	PC-10GE-SFP
PIC 1	REV 16	750-009450	PC-10C192-SON-SR2
PIC 2	REV 05	750-004424	PC-1XGE-LR
PIC 3	REV 12	750-013423	PC-MS-500-3
FPC 5	REV 07	710-013560	T640-FPC3-E2
PIC 0	REV 11	750-012793	PC-1XGE-TYPE3-XFP-IQ2
PIC 1	REV 01	750-004695	PC-TUNNEL
PIC 2	REV 32	750-003700	PC-10C192-SON-VSR
PIC 3	REV 12	750-009553	PC-40C48-SON-SFP
FPC 6	REV 07	710-013035	T640-FPC3-ES
PIC 0	REV 07	750-015217	PC-8GE-TYPE3-SFP-IQ2
PIC 1	REV 03	750-003336	PC-40C48-SON-SMSR
PIC 3	REV 02	750-012793	PC-1XGE-TYPE3-XFP-IQ2
FPC 7	REV 08	710-010845	T640-FPC4-ES
PIC 0	REV 11	750-017405	PD-4XGE-XFP
SIB 0	REV 07	710-022594	SIB-TXP-T1600-S
SIB 1	REV 07	710-022594	SIB-TXP-T1600-S
SIB 3	REV 07	710-022594	SIB-TXP-T1600-S
SIB 4	REV 08	710-022594	SIB-TXP-T1600-S
Fan Tray 0			FANTRAY-T-S
Fan Tray 1			FANTRAY-T-S
Fan Tray 2			FANTRAY-TXP-R-S

show chassis hardware detail (TX Matrix Plus Router)

```
user@host> show chassis hardware detail
```

```
sfc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN111B023AHB	TXP
Midplane	REV 01	710-022574	TR7990	SFC Midplane
FPM Display	REV 03	710-024027	DW4699	TXP FPM Display
CIP 0	REV 01	710-023792	DR1437	TXP CIP
CIP 1	REV 02	710-023792	DS4564	TXP CIP
PEM 0	Rev 07	740-027463	UM26360	Power Entry Module
Routing Engine 0	REV 01	740-026942	737A-1024	SFC RE
ad0	3887 MB	SMART CF	200811050193CEB1CEB1	Compact Flash
ad1	30533 MB	SAMSUNG MCBQE32G8MPP-0V	SY814A0762	Disk 1
Routing Engine 1	REV 01	740-026942	737A-1024	SFC RE
ad0	3887 MB	SMART CF	20081105004C19A019A0	Compact Flash
ad1	30533 MB	SAMSUNG MCBQE32G8MPP-0V	SY814A0794	Disk 1
CB 0	REV 03	710-022606	DR7134	SFC Control Board
CB 1	REV 01	710-022606	DP8890	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 03	750-024564	DT9478	F13 SIB
B Board	REV 02	710-023431	DT6554	F13 SIB
SIB F13 1	REV 03	750-024564	DT9454	F13 SIB
B Board	REV 02	710-023431	DT6551	F13 SIB
SIB F2S 0/0	REV 02	710-022603	DT2838	F2S SIB

B Board	REV 02	710-023787	DT1725	NEO PMB
SIB F2S 0/2	REV 02	710-022603	DT2824	F2S SIB
B Board	REV 02	710-023787	DT1706	NEO PMB
SIB F2S 0/4	REV 02	710-022603	DT2822	F2S SIB
B Board	REV 02	710-023787	DT1696	NEO PMB
SIB F2S 0/6	REV 02	710-022603	DT2823	F2S SIB
B Board	REV 02	710-023787	DT1717	NEO PMB
SIB F2S 1/0	REV 03	710-022603	DV0059	F2S SIB
B Board	REV 03	710-023787	DT9942	NEO PMB
SIB F2S 1/2	REV 02	710-022603	DT2826	F2S SIB
B Board	REV 02	710-023787	DT1713	NEO PMB
SIB F2S 1/4	REV 03	710-022603	DV0092	F2S SIB
B Board	REV 03	710-023787	DV0000	NEO PMB
SIB F2S 1/6	REV 03	710-022603	DV0079	F2S SIB
B Board	REV 03	710-023787	DT9972	NEO PMB
SIB F2S 2/0	REV 03	710-022603	DV0100	F2S SIB
B Board	REV 03	710-023787	DT9925	NEO PMB
SIB F2S 2/2	REV 03	710-022603	DV0050	F2S SIB
B Board	REV 03	710-023787	DV0005	NEO PMB
SIB F2S 2/4	REV 03	710-022603	DV0097	F2S SIB
B Board	REV 03	710-023787	DT9936	NEO PMB
Fan Tray 0	REV 02	760-024497	DR8286	Front Fan Tray
Fan Tray 1	REV 06	760-024497	DV9624	Front Fan Tray
Fan Tray 2	REV 02	760-024502	DR8259	Rear Fan Tray
Fan Tray 3	REV 02	760-024502	DR8270	Rear Fan Tray
Fan Tray 4	REV 02	760-024502	DR8284	Rear Fan Tray
Fan Tray 5	REV 06	760-024502	DV7813	Rear Fan Tray

1cc0-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1101F27AHA	T1600
Midplane	REV 04	710-017247	RC5317	T Series Backplane
FPM GBUS	REV 10	710-002901	DS8197	T640 FPM Board
FPM Display	REV 01	710-021387	DS6433	T1600 FPM Display
CIP	REV 06	710-002895	DS1493	T Series CIP
PEM 0	Rev 08	740-017906	UD26601	Power Entry Module 3x80
SCG 0	REV 15	710-003423	DP5847	T640 Sonet Clock Gen.
SCG 1	REV 15	710-003423	DR0924	T640 Sonet Clock Gen.
Routing Engine 0	REV 01	740-026942	737F-1024	LCC RE
ad0	3887 MB	SMART CF	2008110502B63E513E51	Compact Flash
ad1	30533 MB	SAMSUNG	MCBQE32G8MPP-0V SY814A1208	Disk 1
Routing Engine 1	REV 01	740-026942	737F-1024	LCC RE
ad0	3887 MB	SMART CF	2008110500F9A8A8A8A8	Compact Flash
ad1	30533 MB	SAMSUNG	MCBQE32G8MPP-0V SY814A1076	Disk 1
CB 0	REV 05	710-022597	DV4264	LCC Control Board
CB 1	REV 03	710-022597	DP8558	LCC Control Board
FPC 0	REV 14	710-013037	DS9967	FPC Type 4-ES
CPU	REV 08	710-016744	DS3989	ST-PMB2
PIC 0	REV 12	750-013198	DL7506	1x Tunnel
PIC 1	REV 12	750-013198	DL7505	1x Tunnel
MMB 0	REV 01	710-025563	DS8524	ST-MMB2
MMB 1	REV 01	710-025563	DS8373	ST-MMB2
FPC 1	REV 14	710-013037	DT0027	FPC Type 4-ES
CPU	REV 09	710-016744	DS7684	ST-PMB2
PIC 0	REV 12	750-013198	DL7512	1x Tunnel
PIC 1	REV 12	750-013198	DL7498	1x Tunnel
MMB 0	REV 01	710-025563	DS8494	ST-MMB2
MMB 1	REV 01	710-025563	DS8436	ST-MMB2
SPMB 0	REV 04	710-023321	DV3867	LCC Switch CPU

SPMB 1	REV 02	710-023321	DP0238	LCC Switch CPU
SIB 0	REV 06	710-022594	DT8268	LCC SIB
B Board	REV 06	710-023185	DT5791	LCC SIB Mezz
SIB 1	REV 06	710-022594	DT8261	LCC SIB
B Board	REV 06	710-023185	DT5769	LCC SIB Mezz
SIB 2	REV 04	710-022594	DS2315	LCC SIB
B Board	REV 06	710-023185	DT5788	LCC SIB Mezz
SIB 3	REV 06	710-022594	DT8253	LCC SIB
B Board	REV 06	710-023185	DT5811	LCC SIB Mezz
SIB 4	REV 06	710-022594	DT8248	LCC SIB
B Board	REV 06	710-023185	DT5812	LCC SIB Mezz
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray

show chassis hardware models (TX Matrix Plus Router)

```
user@host> show chassis hardware models
sfc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	FRU model number
FPM Display	REV 03	710-024027	DX0282	CRAFT-TXP
CIP 0	REV 04	710-023792	DW4889	CIP-TXP
CIP 1	REV 04	710-023792	DW4887	CIP-TXP
PEM 0	Rev 07	740-027463	UM26368	yyyyyyyyyyyyyyyyyyyyyyyyyyyyyy
Routing Engine 0	REV 01	740-026942	737A-1064	RE-TXP-SFC-DUO-2600-16G
Routing Engine 1	REV 01	740-026942	737A-1082	RE-TXP-SFC-DUO-2600-16G
CB 0	REV 09	710-022606	DW6099	CB-TXP
CB 1	REV 09	710-022606	DW6096	CB-TXP
SIB F13 1	REV 04	750-024564	DW5776	SIB-TXP-F13
SIB F13 3	REV 04	750-024564	DW5762	SIB-TXP-F13
SIB F13 4	REV 04	750-024564	DW5797	SIB-TXP-F13
SIB F13 6	REV 04	750-024564	DW5770	SIB-TXP-F13
SIB F13 7	REV 04	750-024564	DW5758	SIB-TXP-F13
SIB F13 8	REV 04	750-024564	DW5761	SIB-TXP-F13
SIB F13 9	REV 04	750-024564	DW5754	SIB-TXP-F13
SIB F13 12	REV 04	750-024564	DW5794	SIB-TXP-F13
SIB F2S 0/0	REV 05	710-022603	DW7897	
SIB F2S 0/2	REV 05	710-022603	DW7833	
SIB F2S 0/4	REV 05	710-022603	DW7875	
SIB F2S 0/6	REV 05	710-022603	DW7860	
SIB F2S 1/0	REV 04	710-022603	DW4820	
SIB F2S 1/2	REV 05	710-022603	DW7849	
SIB F2S 1/4	REV 05	710-022603	DW7927	SIB-TXP-F2S
SIB F2S 1/6	REV 05	710-022603	DW7866	
SIB F2S 2/0	REV 05	710-022603	DW7880	
SIB F2S 2/2	REV 05	710-022603	DW7895	
SIB F2S 2/4	REV 05	710-022603	DW7907	
SIB F2S 2/6	REV 05	710-022603	DW7785	
SIB F2S 3/0	REV 05	710-022603	DW7782	
SIB F2S 3/2	REV 05	710-022603	DW7793	
SIB F2S 3/4	REV 05	710-022603	DW7779	
SIB F2S 3/6	REV 05	710-022603	DW7930	
SIB F2S 4/0	REV 05	710-022603	DW7867	
SIB F2S 4/2	REV 05	710-022603	DW7917	
SIB F2S 4/4	REV 05	710-022603	DW7929	
SIB F2S 4/6	REV 05	710-022603	DW7870	
Fan Tray 0	REV 06	760-024497	DV7831	FANTRAY-TXP-F
Fan Tray 1	REV 06	760-024497	DV9614	FANTRAY-TXP-F
Fan Tray 2	REV 06	760-024502	DV9618	FANTRAY-TXP-R

Fan Tray 3	REV 06	760-024502	DV9616	FANTRAY-TXP-R
Fan Tray 4	REV 06	760-024502	DV7807	FANTRAY-TXP-R
Fan Tray 5	REV 06	760-024502	DV7828	FANTRAY-TXP-R

lcc0-re0:

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 03	710-017247	RC3765	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	DN5441	CRAFT-T1600-S
CIP	REV 06	710-002895	DP6021	CIP-L-T640-S
PEM 0	Rev 07	740-017906	UA26384	PWR-T1600-3-80-DC-S
PEM 1	Rev 07	740-017906	UA26296	PWR-T1600-3-80-DC-S
SCG 0	REV 15	710-003423	DR0875	SCG-T-S
CB 0	REV 06	710-022597	DW8534	CB-LCC
CB 1	REV 06	710-022597	DW8527	CB-LCC
FPC 4	REV 12	710-013037	DJ8717	T1600-FPC4-ES
PIC 0	REV 11	750-017405	DP8795	PD-4XGE-XFP
PIC 1	REV 11	750-017405	DP8794	PD-4XGE-XFP
FPC 6	REV 14	710-013037	DS5335	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS7634	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS7637	PD-4XGE-XFP
FPC 7	REV 07	710-013035	DM0990	T1600-FPC3-ES
PIC 0	REV 16	750-007141	JJ8067	PC-10GE-SFP
PIC 1	REV 08	750-015749	WE9598	PC-10C192-SON-XFP
PIC 2	REV 10	750-009450	HX6466	PC-10C192-SON-SR2
SIB 0	REV 08	710-022594	DW8033	SIB-TXP-T1600-S
SIB 1	REV 08	710-022594	DW8044	SIB-TXP-T1600-S
SIB 2	REV 08	710-022594	DW8020	SIB-TXP-T1600-S
SIB 3	REV 08	710-022594	DW8063	SIB-TXP-T1600-S
SIB 4	REV 08	710-022594	DW8064	SIB-TXP-T1600-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FANTRAY-TXP-R-S

lcc1-re0:

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 04	710-017247	RC5361	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	DS6430	CRAFT-T1600-S
CIP	REV 06	710-002895	DS4239	CIP-L-T640-S
PEM 0	Rev 08	740-017906	UD26649	PWR-T1600-3-80-DC-S
SCG 0	REV 15	710-003423	DP5820	SCG-T-S
CB 0	REV 06	710-022597	DW8523	CB-LCC
CB 1	REV 06	710-022597	DW8528	CB-LCC
FPC 4	REV 12	710-013037	DP8509	T1600-FPC4-ES
PIC 0	REV 11	750-017405	DP8808	PD-4XGE-XFP
PIC 1	REV 11	750-017405	DP7263	PD-4XGE-XFP
FPC 6	REV 14	710-013037	DS9961	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS5532	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS7639	PD-4XGE-XFP
FPC 7	REV 03	710-013035	DF5564	T1600-FPC3-ES
PIC 0	REV 16	750-007141	JJ8063	PC-10GE-SFP
SIB 0	REV 08	710-022594	DW8035	SIB-TXP-T1600-S
SIB 1	REV 10	710-022594	DX7672	SIB-TXP-T1600-S
SIB 2	REV 08	710-022594	DW8060	SIB-TXP-T1600-S
SIB 3	REV 08	710-022594	DW8072	SIB-TXP-T1600-S
SIB 4	REV 08	710-022594	DW8043	SIB-TXP-T1600-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S

Fan Tray 2

FANTRAY-TXP-R-S

lcc2-re0:

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 03	710-017247	RC3956	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	DN7030	CRAFT-T1600-S
CIP	REV 06	710-002895	DM3962	CIP-L-T640-S
PEM 0	Rev 08	740-017906	UD26519	PWR-T1600-3-80-DC-S
PEM 1	Rev 07	740-017906	UC26601	PWR-T1600-3-80-DC-S
SCG 0	REV 15	710-003423	DP0277	SCG-T-S
CB 0	REV 06	710-022597	DW8524	CB-LCC
CB 1	REV 06	710-022597	DW8536	CB-LCC
FPC 4	REV 12	710-013037	DR1194	T1600-FPC4-ES
PIC 0	REV 11	750-017405	DP8811	PD-4XGE-XFP
PIC 1	REV 11	750-017405	DP8823	PD-4XGE-XFP
FPC 5	REV 12	710-013037	DR1184	T1600-FPC4-ES
PIC 1	REV 11	750-017405	DP4744	PD-4XGE-XFP
FPC 6	REV 12	710-013037	DN8622	T1600-FPC4-ES
PIC 0	REV 14	750-012518	JY9924	PD-40C192-SON-XFP
PIC 1	REV 11	750-017405	DP8776	PD-4XGE-XFP
FPC 7	REV 04	710-013560	JR3968	T640-FPC3-E2
PIC 0	REV 16	750-007141	NC9330	PC-10GE-SFP
SIB 0	REV 07	710-022594	DW4217	SIB-TXP-T1600-S
SIB 1	REV 07	710-022594	DW4213	SIB-TXP-T1600-S
SIB 2	REV 07	710-022594	DW4189	SIB-TXP-T1600-S
SIB 3	REV 07	710-022594	DW4173	SIB-TXP-T1600-S
SIB 4	REV 07	710-022594	DW4201	SIB-TXP-T1600-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FANTRAY-TXP-R-S

lcc3-re0:

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 04	710-017247	RC5319	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	DS6402	CRAFT-T1600-S
CIP	REV 06	710-002895	DR9973	CIP-L-T640-S
PEM 0	Rev 07	740-017906	UC26496	PWR-T1600-3-80-DC-S
PEM 1	Rev 07	740-017906	UC26599	PWR-T1600-3-80-DC-S
SCG 0	REV 15	710-003423	DP5831	SCG-T-S
CB 0	REV 06	710-022597	DW8533	CB-LCC
CB 1	REV 06	710-022597	DW8538	CB-LCC
FPC 0	REV 14	710-013037	DS5345	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS7641	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS5479	PD-4XGE-XFP
FPC 1	REV 14	710-013037	DS7338	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS7631	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS7632	PD-4XGE-XFP
FPC 2	REV 14	710-013037	DS9962	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS7581	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS7627	PD-4XGE-XFP
FPC 4	REV 10	710-010845	JZ6573	T640-FPC4-ES
PIC 0	REV 14	750-012518	JT5124	PD-40C192-SON-XFP
FPC 5	REV 14	710-013037	DT0016	T1600-FPC4-ES
PIC 0	REV 14	750-012518	JY9918	PD-40C192-SON-XFP
FPC 7	REV 07	710-013035	DM0967	T1600-FPC3-ES
PIC 0	REV 16	750-007141	JJ8059	PC-10GE-SFP
PIC 1	REV 13	750-004695	DM5712	PC-TUNNEL

SIB 0	REV 07	710-022594	DW4174	SIB-TXP-T1600-S
SIB 1	REV 07	710-022594	DW4207	SIB-TXP-T1600-S
SIB 2	REV 06	710-022594	DT8231	SIB-TXP-T1600-S
SIB 3	REV 07	710-022594	DW4175	SIB-TXP-T1600-S
SIB 4	REV 07	710-022594	DW4209	SIB-TXP-T1600-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FANTRAY-TXP-R-S

show chassis hardware (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis hardware
sfc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11CAAA4AHB	TXP
Midplane	REV 05	710-022574	ABAC4696	SFC Midplane
FPM Display	REV 09	710-024027	EH3138	TXP FPM Display
CIP 0	REV 12	710-023792	EF6349	TXP CIP
CIP 1	REV 12	710-023792	EG5294	TXP CIP
PEM 0	Rev 06	740-027463	XH04595	Power Entry Module
PEM 1	Rev 06	740-027463	XH04592	Power Entry Module
Routing Engine 0	REV 07	740-026942	P737A-002541	RE-DUO-2600
Routing Engine 1	REV 07	740-026942	P737A-002602	RE-DUO-2600
CB 0	REV 15	710-022606	EH4376	SFC Control Board
CB 1	REV 15	710-022606	EH4379	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 10	750-035002	EM9305	F13 SIB 3D
B Board	REV 06	711-035082	EM9667	F13 SIB 3D Mezz
P Board	REV 05	711-043544	EM9708	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB34FB00S	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01H	CXP Module
Xcvr 4	REV 01	740-047547	XB34FB02W	CXP Module
Xcvr 6	REV 01	740-047547	XB34FB01T	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB00W	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01S	CXP Module
Xcvr 12	REV 01	740-047547	XB34FB03H	CXP Module
Xcvr 14	REV 01	740-047547	XB34FB023	CXP Module
SIB F13 3	REV 01	710-035001	EJ2612	F13 SIB 3D
B Board	REV 01	711-035082	EJ3815	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2678	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB04C	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB00Z	CXP Module
Xcvr 4	REV 01	740-047547	XB47FB036	CXP Module
Xcvr 6	REV 01	740-047547	XB47FB029	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02N	CXP Module
Xcvr 10	REV 01	740-047547	XB42FB0CS	CXP Module
Xcvr 12	REV 01	740-047547	XB47FB01X	CXP Module
Xcvr 14	REV 01	740-047547	XB48FB02F	CXP Module
SIB F13 6	REV 05	750-035002	EK2675	F13 SIB 3D
B Board	REV 03	711-035082	EK2612	F13 SIB 3D Mezz
P Board	REV 04	711-043544	EK1179	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB01T	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB02M	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB031	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB04P	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02T	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01V	CXP Module
Xcvr 12	REV 01	740-047547	XB48FB02C	CXP Module

Xcvr 14		NON-JNPR		No Module
SIB F13 12	REV 01	710-035001	EJ2631	F13 SIB 3D
B Board	REV 01	711-035082	EJ3808	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2676	F13 SIB 3D Power
SIB F2S 0/0	REV 01	711-034977	EH9829	F2S SIB 3D
B Board	REV 01	711-034979	EH9927	F2S SIB 3D Mezz
SIB F2S 0/2	REV 01	711-034977	EH9791	F2S SIB 3D
B Board	REV 01	711-034979	EH9852	F2S SIB 3D Mezz
SIB F2S 0/4	REV 01	711-034977	EH9803	F2S SIB 3D
B Board	REV 01	711-034979	EH9915	F2S SIB 3D Mezz
SIB F2S 0/6	REV 01	711-034977	EH9763	F2S SIB 3D
B Board	REV 01	711-034979	EH9880	F2S SIB 3D Mezz
SIB F2S 1/0	REV 01	711-034977	EH9757	F2S SIB 3D
B Board	REV 01	711-034979	EH9889	F2S SIB 3D Mezz
SIB F2S 1/2	REV 01	711-034977	EH9815	F2S SIB 3D
B Board	REV 01	711-034979	EH9890	F2S SIB 3D Mezz
SIB F2S 1/4	REV 08	750-034978	EN1954	F2S SIB 3D
B Board	REV 02	711-034979	EN1436	F2S SIB 3D Mezz
SIB F2S 1/6	REV 01	711-034977	EJ7054	F2S SIB 3D
B Board	REV 01	711-034979	EJ8238	F2S SIB 3D Mezz
SIB F2S 2/0	REV 01	711-034977	EH9830	F2S SIB 3D
B Board	REV 01	711-034979	EH9844	F2S SIB 3D Mezz
SIB F2S 2/2	REV 01	711-034977	EH9818	F2S SIB 3D
B Board	REV 01	711-034979	EH9888	F2S SIB 3D Mezz
SIB F2S 2/4	REV 01	711-034977	EH9795	F2S SIB 3D
B Board	REV 01	711-034979	EH9869	F2S SIB 3D Mezz
SIB F2S 2/6	REV 01	711-034977	EJ7026	F2S SIB 3D
B Board	REV 01	711-034979	EJ8273	F2S SIB 3D Mezz
SIB F2S 3/0	REV 01	711-034977	EH9811	F2S SIB 3D
B Board	REV 01	711-034979	EH9892	F2S SIB 3D Mezz
SIB F2S 3/2	REV 01	711-034977	EH9812	F2S SIB 3D
B Board	REV 01	711-034979	EH9877	F2S SIB 3D Mezz
SIB F2S 3/4	REV 08	750-034978	EN1947	F2S SIB 3D
B Board	REV 02	711-034979	EN1471	F2S SIB 3D Mezz
Fan Tray 0	REV 10	760-024497	EH3313	Front Fan Tray
Fan Tray 1	REV 10	760-024497	EH3290	Front Fan Tray
Fan Tray 2	REV 10	760-024502	EH3292	Rear Fan Tray
Fan Tray 3	REV 10	760-024502	EH3287	Rear Fan Tray
Fan Tray 4	REV 10	760-024502	EH3286	Rear Fan Tray
Fan Tray 5	REV 10	760-024502	EH3285	Rear Fan Tray

lcc0-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11B23FEAHA	T1600
Midplane	REV 01	710-027486	RC9787	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5132	T640 FPM Board
FPM Display	REV 04	710-021387	BBAL9612	T1600 FPM Display
CIP	REV 06	710-002895	BBAN0605	T-series CIP
PEM 0	REV 05	740-036442	1G022060143	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060011	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAL7318	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7255	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002933	RE-DUO-1800
Routing Engine 1	REV 06	740-026941	P737F-002749	RE-DUO-1800
CB 0	REV 11	710-022597	EH3611	LCC Control Board
CB 1	REV 11	710-022597	EH4798	LCC Control Board
FPC 5	REV 17	710-013037	BBAC5333	FPC Type 4-ES
CPU	REV 10	710-016744	BBAB7619	ST-PMB2
PIC 0	REV 18	750-017405	BBAE3420	4x 10GE (LAN/WAN) XFP

Xcvr 0	REV 03	740-014289	T10C90659	XFP-10G-SR
MMB 0	REV 05	710-025563	BBAB9538	ST-MMB2
MMB 1	REV 05	710-025563	BBAB9502	ST-MMB2
FPC 7	REV 01	750-045173	BBAV0032	FPC Type 5-3D
CPU				
SPMB 0	REV 05	710-023321	EG9434	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3878	LCC Switch CPU
SIB 0	REV 01	750-041657	EH7997	LCC SIB 3D
B Board	REV 01	711-042424	EH7674	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB014	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB05A	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB052	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB01B	CXP Module
SIB 1	REV 01	750-041657	EH8023	LCC SIB 3D
B Board	REV 01	711-042424	EH7659	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05J	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01E	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB01J	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB02S	CXP Module
SIB 2	REV 03	750-041657	EJ6554	LCC SIB 3D
B Board	REV 02	711-042424	EJ5756	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB34FB01Z	CXP Module
Xcvr 2	REV 01	740-047547	XB34FB013	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04Z	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05N	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

lcc2-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11B3975AHA	T1600
Midplane	REV 01	710-027486	RC9826	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5124	T640 FPM Board
FPM Display	REV 03	710-021387	BBAJ1112	T1600 FPM Display
CIP	REV 06	710-002895	BBAL3744	T-series CIP
PEM 0	REV 05	740-036442	1G022060081	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060188	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAH8775	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7272	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002992	RE-DUO-1800
Routing Engine 1	REV 07	740-026941	P737F-002938	RE-DUO-1800
CB 0	REV 11	710-022597	EH4805	LCC Control Board
CB 1	REV 11	710-022597	EH4786	LCC Control Board
FPC 1	REV 01	710-033873	BBAH0320	FPC Type 3-ES
CPU	REV 11	710-016744	BBAF3281	ST-PMB2
MMB 0	REV 06	710-025563	BBAF5061	ST-MMB2
FPC 5	REV 04	710-033871	BBAM5070	FPC Type 4-ES
CPU	REV 11	710-016744	BBAM6653	ST-PMB2
PIC 1	REV 20	750-017405	BBAM1296	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10B42981	XFP-10G-SR
MMB 0	REV 07	710-025563	BBAN2631	ST-MMB2
MMB 1	REV 07	710-025563	BBAN2538	ST-MMB2
SPMB 0	REV 05	710-023321	EH3903	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3902	LCC Switch CPU
SIB 0	REV 01	750-041657	EH8019	LCC SIB 3D
B Board	REV 01	711-042424	EH7680	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB04F	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB04S	CXP Module

Xcvr 4	REV 01	740-047547	XB48FB04B	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB043	CXP Module
SIB 1	REV 01	750-041657	EH8012	LCC SIB 3D
B Board	REV 01	711-042424	EH7658	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05E	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01Z	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB018	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB054	CXP Module
SIB 2	REV 01	750-041657	EH7993	LCC SIB 3D
B Board	REV 01	711-042424	EH7678	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05C	CXP Module
Xcvr 2	REV 01	740-047547	XB47FB00N	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB05U	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05L	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

show chassis hardware clei-models (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis hardware clei-models
sfc0-re0:
-----
Hardware inventory:
Item          Version  Part number  CLEI code  FRU model number
Midplane      REV 05   710-022574
FPM Display   REV 09   710-024027
CIP 0         REV 12   710-023792
CIP 1         REV 12   710-023792
PEM 0         Rev 06   740-027463   IPUPAFGKTA  PWR-TXP-7-60-DC-S
Routing Engine 0 REV 07   740-026942   RE-DUO-C2600-16G-S
Routing Engine 1 REV 07   740-026942   RE-DUO-C2600-16G-S
CB 0          REV 13   710-022606   CB-TXP-S
CB 1          REV 14   710-022606   CB-TXP-S
SIB F13 0     REV 10   750-035002   PROTOXCLEI  SIB-TXP-3D-F13-S
  Xcvr 0       REV 01   740-048813
  Xcvr 1       REV 01   740-048813
  Xcvr 2       REV 01   740-048813
  Xcvr 3       REV 01   740-048813
  Xcvr 4       REV 01   740-048813
  Xcvr 5       REV 01   740-048813
  Xcvr 6       REV 01   740-048813
  Xcvr 7       REV 01   740-048813
  Xcvr 8       REV 01   740-047547   CXP-TXP-3D
  Xcvr 10      REV 01   740-047547   CXP-TXP-3D
  Xcvr 12      REV 01   740-047547   CXP-TXP-3D
  Xcvr 14      REV 01   740-047547   CXP-TXP-3D
SIB F13 1     REV 10   750-035002   PROTOXCLEI  SIB-TXP-3D-F13-S
  Xcvr 0       REV 01   740-047547   CXP-TXP-3D
  Xcvr 1       REV 01   740-047547   CXP-TXP-3D
  Xcvr 2       REV 01   740-047547   CXP-TXP-3D
  Xcvr 3       REV 01   740-047547   CXP-TXP-3D
  Xcvr 4       REV 01   740-047547   CXP-TXP-3D
  Xcvr 5       REV 01   740-047547   CXP-TXP-3D
  Xcvr 6       REV 01   740-047547   CXP-TXP-3D
  Xcvr 7       REV 01   740-047547   CXP-TXP-3D
  Xcvr 8       REV 01   740-047547   CXP-TXP-3D
  Xcvr 10      REV 01   740-047547   CXP-TXP-3D
  Xcvr 12      REV 01   740-047547   CXP-TXP-3D
  Xcvr 14      REV 01   740-047547   CXP-TXP-3D
  Xcvr 0       REV 01   740-048813
```

Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
Xcvr 8	REV 01	740-048813		
Xcvr 10	REV 01	740-048813		
Xcvr 12	REV 01	740-048813		
Xcvr 14	REV 01	740-048813		
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 6	REV 16	750-035002	PROTOXCLEI	SIB-TXP-3D-F13
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 7	REV 10	750-035002	PROTOXCLEI	SIB-TXP-3D-F13-S
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D

SIB F13 9	REV 16	750-035002	PROTOXCLEI	SIB-TXP-3D-F13
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 11	REV 10	750-035002	PROTOXCLEI	750-035002
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-048813		
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 12	REV 16	750-035002	PROTOXCLEI	SIB-TXP-3D-F13
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F2S 0/0	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 0/2	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 0/4	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 0/6	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 1/0	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 1/2	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 1/4	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 1/6	REV 08	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 2/0	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 2/2	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 2/4	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 2/6	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 3/0	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 3/2	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 3/4	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 3/6	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 4/0	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 4/2	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 4/4	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 4/6	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
Fan Tray 0	REV 10	760-024497		FANTRAY-TXP-H-S
Fan Tray 1	REV 10	760-024497		FANTRAY-TXP-H-S
Fan Tray 2	REV 10	760-024502		FANTRAY-TXP-V-S

Fan Tray 3	REV 10	760-024502	FANTRAY-TXP-V-S
Fan Tray 4	REV 10	760-024502	FANTRAY-TXP-V-S
Fan Tray 5	REV 10	760-024502	FANTRAY-TXP-V-S

1cc0-re0:

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	710-027486	IPMJ700DRD	CHAS-BP-T1600-S
FPM Display	REV 04	710-021387		CRAFT-T1600-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 0	REV 05	740-036442	IPUPAG6KAA	PWR-T-6-60-DC-S
PEM 1	REV 05	740-036442	IPUPAG6KAA	PWR-T-6-60-DC-S
SCG 0	REV 18	710-003423		SCG-T-S
SCG 1	REV 18	710-003423		SCG-T-S
Routing Engine 0	REV 10	740-026941		RE-DUO-C1800-8G-S
Routing Engine 1	REV 07	740-026941		RE-DUO-C1800-8G-S
CB 0	REV 11	710-022597		CB-LCC-S
CB 1	REV 11	710-022597		CB-LCC-S
FPC 0	REV 01	750-045173	IP9IAL4DAB	T4000-FPC5-3D
PIC 0	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
PIC 1	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
FPC 3	REV 01	750-045173	IP9IAL4DAB	T4000-FPC5-3D
PIC 0	REV 13	750-033423	XXXXXXXXXD	PF-12-24XGE-SFPP
FPC 4	REV 02	750-045173	IP9IAL4DAC	T4000-FPC5-3D
PIC 0	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
PIC 1	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
FPC 5	REV 01	750-045173	IP9IAL4DAB	T4000-FPC5-3D
PIC 0	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
PIC 1	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
FPC 6	REV 01	750-045173	IP9IAL4DAB	T4000-FPC5-3D
PIC 0	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
PIC 1	REV 10	750-035293	IP9IAL3DAA	PF-1CGE-CFP
SIB 0	REV 06	750-041657	PROTOXCLEI	SIB-TXP-3D-LCC
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
SIB 1	REV 06	750-041657	PROTOXCLEI	SIB-TXP-3D-LCC
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
SIB 2	REV 06	750-041657	PROTOXCLEI	SIB-TXP-3D-LCC
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
SIB 3	REV 07	750-041657	PROTOXCLEI	SIB-TXP-3D-LCC

```

Xcvr 0      REV 01  740-048813
Xcvr 1      REV 01  740-048813
Xcvr 2      REV 01  740-048813
Xcvr 3      REV 01  740-048813
Xcvr 4      REV 01  740-048813
Xcvr 5      REV 01  740-048813
Xcvr 6      REV 01  740-048813
Xcvr 7      REV 01  740-048813
SIB 4       REV 06  750-041657  PROTOXCLEI  SIB-TXP-3D-LCC
Xcvr 0      REV 01  740-048813
Xcvr 1      REV 01  740-048813
Xcvr 2      REV 01  740-048813
Xcvr 3      REV 01  740-048813
Xcvr 4      REV 01  740-048813
Xcvr 5      REV 01  740-048813
Xcvr 6      REV 01  740-048813
Xcvr 7      REV 01  740-048813
Fan Tray 0
Fan Tray 1
Fan Tray 2
[Output Truncated]
FANTRAY-T-S
FANTRAY-T-S
FANTRAY-TXP3D-LCC-R-S

```

show chassis hardware detail (TX Matrix Plus router with 3D SIBs)

```

user@host> show chassis hardware detail
sfc0-re0:
-----
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN11CAAA4AHB   TXP
Midplane      REV 05   710-022574   ABAC4696       SFC Midplane
FPM Display   REV 09   710-024027   EH3138         TXP FPM Display
CIP 0         REV 12   710-023792   EF6349         TXP CIP
CIP 1         REV 12   710-023792   EG5294         TXP CIP
PEM 0         Rev 06   740-027463   XH04595        Power Entry Module
PEM 1         Rev 06   740-027463   XH04592        Power Entry Module
Routing Engine 0 REV 07   740-026942   P737A-002541   RE-DUO-2600
  ad0 3823 MB SMART CF          2011030400062C132C13 Compact Flash
  ad1 62720 MB SMART Lite SATA Drive 201105100009A452A452 Disk 1
Routing Engine 1 REV 07   740-026942   P737A-002602   RE-DUO-2600
  ad0 3823 MB SMART CF          20110508085EE471E471 Compact Flash
  ad1 62720 MB SMART Lite SATA Drive 201110210089DF39DF39 Disk 1
CB 0          REV 15   710-022606   EH4376         SFC Control Board
CB 1          REV 15   710-022606   EH4379         SFC Control Board
SPMB 0        BUILTIN                SFC Switch CPU
SPMB 1        BUILTIN                SFC Switch CPU
SIB F13 0     REV 10   750-035002   EM9305         F13 SIB 3D
  B Board     REV 06   711-035082   EM9667         F13 SIB 3D Mezz
  P Board     REV 05   711-043544   EM9708         F13 SIB 3D Power
Xcvr 0        REV 01   740-047547   XB34FB00S      CXP Module
Xcvr 2        REV 01   740-047547   XB48FB01H      CXP Module
Xcvr 4        REV 01   740-047547   XB34FB02W      CXP Module
Xcvr 6        REV 01   740-047547   XB34FB01T      CXP Module
Xcvr 8        REV 01   740-047547   XB48FB00W      CXP Module
Xcvr 10       REV 01   740-047547   XB34FB01S      CXP Module
Xcvr 12       REV 01   740-047547   XB34FB03H      CXP Module
Xcvr 14       REV 01   740-047547   XB34FB023      CXP Module
SIB F13 3     REV 01   710-035001   EJ2612         F13 SIB 3D
  B Board     REV 01   711-035082   EJ3815         F13 SIB 3D Mezz
  P Board     REV 01   711-043544   EJ2678         F13 SIB 3D Power
Xcvr 0        REV 01   740-047547   XB48FB04C      CXP Module

```

Xcvr 2	REV 01	740-047547	XB48FB00Z	CXP Module
Xcvr 4	REV 01	740-047547	XB47FB036	CXP Module
Xcvr 6	REV 01	740-047547	XB47FB029	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02N	CXP Module
Xcvr 10	REV 01	740-047547	XB42FB0CS	CXP Module
Xcvr 12	REV 01	740-047547	XB47FB01X	CXP Module
Xcvr 14	REV 01	740-047547	XB48FB02F	CXP Module
SIB F13 6	REV 05	750-035002	EK2675	F13 SIB 3D
B Board	REV 03	711-035082	EK2612	F13 SIB 3D Mezz
P Board	REV 04	711-043544	EK1179	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB01T	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB02M	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB031	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB04P	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02T	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01V	CXP Module
Xcvr 12	REV 01	740-047547	XB48FB02C	CXP Module
Xcvr 14		NON-JNPR		No Module
SIB F13 12	REV 01	710-035001	EJ2631	F13 SIB 3D
B Board	REV 01	711-035082	EJ3808	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2676	F13 SIB 3D Power
SIB F2S 0/0	REV 01	711-034977	EH9829	F2S SIB 3D
B Board	REV 01	711-034979	EH9927	F2S SIB 3D Mezz
SIB F2S 0/2	REV 01	711-034977	EH9791	F2S SIB 3D
B Board	REV 01	711-034979	EH9852	F2S SIB 3D Mezz
SIB F2S 0/4	REV 01	711-034977	EH9803	F2S SIB 3D
B Board	REV 01	711-034979	EH9915	F2S SIB 3D Mezz
SIB F2S 0/6	REV 01	711-034977	EH9763	F2S SIB 3D
B Board	REV 01	711-034979	EH9880	F2S SIB 3D Mezz
SIB F2S 1/0	REV 01	711-034977	EH9757	F2S SIB 3D
B Board	REV 01	711-034979	EH9889	F2S SIB 3D Mezz
SIB F2S 1/2	REV 01	711-034977	EH9815	F2S SIB 3D
B Board	REV 01	711-034979	EH9890	F2S SIB 3D Mezz
SIB F2S 1/4	REV 08	750-034978	EN1954	F2S SIB 3D
B Board	REV 02	711-034979	EN1436	F2S SIB 3D Mezz
SIB F2S 1/6	REV 01	711-034977	EJ7054	F2S SIB 3D
B Board	REV 01	711-034979	EJ8238	F2S SIB 3D Mezz
SIB F2S 2/0	REV 01	711-034977	EH9830	F2S SIB 3D
B Board	REV 01	711-034979	EH9844	F2S SIB 3D Mezz
SIB F2S 2/2	REV 01	711-034977	EH9818	F2S SIB 3D
B Board	REV 01	711-034979	EH9888	F2S SIB 3D Mezz
SIB F2S 2/4	REV 01	711-034977	EH9795	F2S SIB 3D
B Board	REV 01	711-034979	EH9869	F2S SIB 3D Mezz
SIB F2S 2/6	REV 01	711-034977	EJ7026	F2S SIB 3D
B Board	REV 01	711-034979	EJ8273	F2S SIB 3D Mezz
SIB F2S 3/0	REV 01	711-034977	EH9811	F2S SIB 3D
B Board	REV 01	711-034979	EH9892	F2S SIB 3D Mezz
SIB F2S 3/2	REV 01	711-034977	EH9812	F2S SIB 3D
B Board	REV 01	711-034979	EH9877	F2S SIB 3D Mezz
SIB F2S 3/4	REV 08	750-034978	EN1947	F2S SIB 3D
B Board	REV 02	711-034979	EN1471	F2S SIB 3D Mezz
Fan Tray 0	REV 10	760-024497	EH3313	Front Fan Tray
Fan Tray 1	REV 10	760-024497	EH3290	Front Fan Tray
Fan Tray 2	REV 10	760-024502	EH3292	Rear Fan Tray
Fan Tray 3	REV 10	760-024502	EH3287	Rear Fan Tray
Fan Tray 4	REV 10	760-024502	EH3286	Rear Fan Tray
Fan Tray 5	REV 10	760-024502	EH3285	Rear Fan Tray

1cc0-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1B23FEAHA	T1600
Midplane	REV 01	710-027486	RC9787	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5132	T640 FPM Board
FPM Display	REV 04	710-021387	BBAL9612	T1600 FPM Display
CIP	REV 06	710-002895	BBAN0605	T-series CIP
PEM 0	REV 05	740-036442	1G022060143	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060011	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAL7318	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7255	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002933	RE-DUO-1800
ad0 3823 MB	SMART CF		201103030490604E604E	Compact Flash
ad1 62720 MB	SMART Lite SATA Drive		20110729028B11D411D4	Disk 1
Routing Engine 1	REV 06	740-026941	P737F-002749	RE-DUO-1800
ad0 3823 MB	SMART CF		2011010504EB99649964	Compact Flash
ad1 62720 MB	SMART Lite SATA Drive		201102140058934A934A	Disk 1
CB 0	REV 11	710-022597	EH3611	LCC Control Board
CB 1	REV 11	710-022597	EH4798	LCC Control Board
FPC 5	REV 17	710-013037	BBAC5333	FPC Type 4-ES
CPU	REV 10	710-016744	BBAB7619	ST-PMB2
PIC 0	REV 18	750-017405	BBAE3420	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10C90659	XFP-10G-SR
MMB 0	REV 05	710-025563	BBAB9538	ST-MMB2
MMB 1	REV 05	710-025563	BBAB9502	ST-MMB2
FPC 7	REV 01	750-045173	BBAV0032	FPC Type 5-3D
CPU				
SPMB 0	REV 05	710-023321	EG9434	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3878	LCC Switch CPU
SIB 0	REV 01	750-041657	EH7997	LCC SIB 3D
B Board	REV 01	711-042424	EH7674	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB014	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB05A	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB052	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB01B	CXP Module
SIB 1	REV 01	750-041657	EH8023	LCC SIB 3D
B Board	REV 01	711-042424	EH7659	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05J	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01E	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB01J	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB02S	CXP Module
SIB 2	REV 03	750-041657	EJ6554	LCC SIB 3D
B Board	REV 02	711-042424	EJ5756	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB34FB01Z	CXP Module
Xcvr 2	REV 01	740-047547	XB34FB013	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04Z	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05N	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

lcc2-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1B3975AHA	T1600
Midplane	REV 01	710-027486	RC9826	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5124	T640 FPM Board
FPM Display	REV 03	710-021387	BBAJ1112	T1600 FPM Display
CIP	REV 06	710-002895	BBAL3744	T-series CIP
PEM 0	REV 05	740-036442	1G022060081	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060188	Power Entry Module 6x60

SCG 0	REV 18	710-003423	BBAH8775	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7272	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002992	RE-DUO-1800
ad0	3823 MB	SMART CF	201103030356329E329E	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	2011051000488D8B8D8B	Disk 1
Routing Engine 1	REV 07	740-026941	P737F-002938	RE-DUO-1800
ad0	3823 MB	SMART CF	20110304000F02680268	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	201105300A70F325F325	Disk 1
CB 0	REV 11	710-022597	EH4805	LCC Control Board
CB 1	REV 11	710-022597	EH4786	LCC Control Board
FPC 1	REV 01	710-033873	BBAH0320	FPC Type 3-ES
CPU	REV 11	710-016744	BBAF3281	ST-PMB2
MMB 0	REV 06	710-025563	BBAF5061	ST-MMB2
FPC 5	REV 04	710-033871	BBAM5070	FPC Type 4-ES
CPU	REV 11	710-016744	BBAM6653	ST-PMB2
PIC 1	REV 20	750-017405	BBAM1296	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10B42981	XFP-10G-SR
MMB 1	REV 07	710-025563	BBAN2631	ST-MMB2
MMB 1	REV 07	710-025563	BBAN2538	ST-MMB2
SPMB 0	REV 05	710-023321	EH3903	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3902	LCC Switch CPU
SIB 0	REV 01	750-041657	EH8019	LCC SIB 3D
B Board	REV 01	711-042424	EH7680	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB04F	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB04S	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04B	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB043	CXP Module
SIB 1	REV 01	750-041657	EH8012	LCC SIB 3D
B Board	REV 01	711-042424	EH7658	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05E	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01Z	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB018	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB054	CXP Module
SIB 2	REV 01	750-041657	EH7993	LCC SIB 3D
B Board	REV 01	711-042424	EH7678	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05C	CXP Module
Xcvr 2	REV 01	740-047547	XB47FB00N	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB05U	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05L	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

show chassis hardware lcc (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis hardware lcc 0
lcc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11B23FEAHA	T1600
Midplane	REV 01	710-027486	RC9787	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5132	T640 FPM Board
FPM Display	REV 04	710-021387	BBAL9612	T1600 FPM Display
CIP	REV 06	710-002895	BBAN0605	T-series CIP
PEM 0	REV 05	740-036442	1G022060143	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060011	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAL7318	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7255	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002933	RE-DUO-1800
Routing Engine 1	REV 06	740-026941	P737F-002749	RE-DUO-1800

CB 0	REV 11	710-022597	EH3611	LCC Control Board
CB 1	REV 11	710-022597	EH4798	LCC Control Board
FPC 5	REV 17	710-013037	BBAC5333	FPC Type 4-ES
CPU	REV 10	710-016744	BBAB7619	ST-PMB2
PIC 0	REV 18	750-017405	BBAE3420	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10C90659	XFP-10G-SR
MMB 0	REV 05	710-025563	BBAB9538	ST-MMB2
MMB 1	REV 05	710-025563	BBAB9502	ST-MMB2
FPC 7	REV 01	750-045173	BBAV0032	FPC Type 5-3D
CPU				
SPMB 0	REV 05	710-023321	EG9434	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3878	LCC Switch CPU
SIB 0	REV 01	750-041657	EH7997	LCC SIB 3D
B Board	REV 01	711-042424	EH7674	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB014	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB05A	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB052	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB01B	CXP Module
SIB 1	REV 01	750-041657	EH8023	LCC SIB 3D
B Board	REV 01	711-042424	EH7659	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05J	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01E	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB01J	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB02S	CXP Module
SIB 2	REV 03	750-041657	EJ6554	LCC SIB 3D
B Board	REV 02	711-042424	EJ5756	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB34FB01Z	CXP Module
Xcvr 2	REV 01	740-047547	XB34FB013	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04Z	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05N	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

show chassis hardware sfc (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis hardware sfc 0
sfc0-re0:
```

```
-----
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN11CAAA4AHB	TXP
Midplane	REV 05	710-022574	ABAC4696	SFC Midplane
FPM Display	REV 09	710-024027	EH3138	TXP FPM Display
CIP 0	REV 12	710-023792	EF6349	TXP CIP
CIP 1	REV 12	710-023792	EG5294	TXP CIP
PEM 0	Rev 06	740-027463	XH04595	Power Entry Module
PEM 1	Rev 06	740-027463	XH04592	Power Entry Module
Routing Engine 0	REV 07	740-026942	P737A-002541	RE-DUO-2600
Routing Engine 1	REV 07	740-026942	P737A-002602	RE-DUO-2600
CB 0	REV 15	710-022606	EH4376	SFC Control Board
CB 1	REV 15	710-022606	EH4379	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 10	750-035002	EM9305	F13 SIB 3D
B Board	REV 06	711-035082	EM9667	F13 SIB 3D Mezz
P Board	REV 05	711-043544	EM9708	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB34FB00S	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01H	CXP Module
Xcvr 4	REV 01	740-047547	XB34FB02W	CXP Module
Xcvr 6	REV 01	740-047547	XB34FB01T	CXP Module

Xcvr 8	REV 01	740-047547	XB48FB00W	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01S	CXP Module
Xcvr 12	REV 01	740-047547	XB34FB03H	CXP Module
Xcvr 14	REV 01	740-047547	XB34FB023	CXP Module
SIB F13 3	REV 01	710-035001	EJ2612	F13 SIB 3D
B Board	REV 01	711-035082	EJ3815	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2678	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB04C	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB00Z	CXP Module
Xcvr 4	REV 01	740-047547	XB47FB036	CXP Module
Xcvr 6	REV 01	740-047547	XB47FB029	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02N	CXP Module
Xcvr 10	REV 01	740-047547	XB42FB0CS	CXP Module
Xcvr 12	REV 01	740-047547	XB47FB01X	CXP Module
Xcvr 14	REV 01	740-047547	XB48FB02F	CXP Module
SIB F13 6	REV 05	750-035002	EK2675	F13 SIB 3D
B Board	REV 03	711-035082	EK2612	F13 SIB 3D Mezz
P Board	REV 04	711-043544	EK1179	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB01T	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB02M	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB031	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB04P	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02T	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01V	CXP Module
Xcvr 12	REV 01	740-047547	XB48FB02C	CXP Module
Xcvr 14		NON-JNPR		No Module
SIB F13 12	REV 01	710-035001	EJ2631	F13 SIB 3D
B Board	REV 01	711-035082	EJ3808	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2676	F13 SIB 3D Power
SIB F2S 0/0	REV 01	711-034977	EH9829	F2S SIB 3D
B Board	REV 01	711-034979	EH9927	F2S SIB 3D Mezz
SIB F2S 0/2	REV 01	711-034977	EH9791	F2S SIB 3D
B Board	REV 01	711-034979	EH9852	F2S SIB 3D Mezz
SIB F2S 0/4	REV 01	711-034977	EH9803	F2S SIB 3D
B Board	REV 01	711-034979	EH9915	F2S SIB 3D Mezz
SIB F2S 0/6	REV 01	711-034977	EH9763	F2S SIB 3D
B Board	REV 01	711-034979	EH9880	F2S SIB 3D Mezz
SIB F2S 1/0	REV 01	711-034977	EH9757	F2S SIB 3D
B Board	REV 01	711-034979	EH9889	F2S SIB 3D Mezz
SIB F2S 1/2	REV 01	711-034977	EH9815	F2S SIB 3D
B Board	REV 01	711-034979	EH9890	F2S SIB 3D Mezz
SIB F2S 1/4	REV 08	750-034978	EN1954	F2S SIB 3D
B Board	REV 02	711-034979	EN1436	F2S SIB 3D Mezz
SIB F2S 1/6	REV 01	711-034977	EJ7054	F2S SIB 3D
B Board	REV 01	711-034979	EJ8238	F2S SIB 3D Mezz
SIB F2S 2/0	REV 01	711-034977	EH9830	F2S SIB 3D
B Board	REV 01	711-034979	EH9844	F2S SIB 3D Mezz
SIB F2S 2/2	REV 01	711-034977	EH9818	F2S SIB 3D
B Board	REV 01	711-034979	EH9888	F2S SIB 3D Mezz
SIB F2S 2/4	REV 01	711-034977	EH9795	F2S SIB 3D
B Board	REV 01	711-034979	EH9869	F2S SIB 3D Mezz
SIB F2S 2/6	REV 01	711-034977	EJ7026	F2S SIB 3D
B Board	REV 01	711-034979	EJ8273	F2S SIB 3D Mezz
SIB F2S 3/0	REV 01	711-034977	EH9811	F2S SIB 3D
B Board	REV 01	711-034979	EH9892	F2S SIB 3D Mezz
SIB F2S 3/2	REV 01	711-034977	EH9812	F2S SIB 3D
B Board	REV 01	711-034979	EH9877	F2S SIB 3D Mezz
SIB F2S 3/4	REV 08	750-034978	EN1947	F2S SIB 3D
B Board	REV 02	711-034979	EN1471	F2S SIB 3D Mezz
Fan Tray 0	REV 10	760-024497	EH3313	Front Fan Tray
Fan Tray 1	REV 10	760-024497	EH3290	Front Fan Tray

Fan Tray 2	REV 10	760-024502	EH3292	Rear Fan Tray
Fan Tray 3	REV 10	760-024502	EH3287	Rear Fan Tray
Fan Tray 4	REV 10	760-024502	EH3286	Rear Fan Tray
Fan Tray 5	REV 10	760-024502	EH3285	Rear Fan Tray

show chassis hardware (16-Port 10-Gigabit Ethernet MPC with SFP+ Optics [MX Series Routers])

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN112D865AFA	MX960
Midplane	REV 03	710-013698	TS3339	MX960 Backplane
FPM Board	REV 03	710-014974	WW6267	Front Panel Display
PDM	Rev 03	740-013110	QCS12485026	Power Distribution
Module				
PEM 0	Rev 04	740-013682	QCS12434086	PS 1.7kW; 200-240VAC
in				
PEM 1	Rev 04	740-013682	QCS1243408Z	PS 1.7kW; 200-240VAC
in				
PEM 2	Rev 04	740-013682	QCS1243407X	PS 1.7kW; 200-240VAC
in				
Routing Engine 0	REV 07	740-015113	9009009677	RE-S-1300
Routing Engine 1	REV 07	740-015113	9009011510	RE-S-1300
CB 0	REV 03	710-021523	XF0394	MX SCB
CB 1	REV 03	710-021523	XF0550	MX SCB
CB 2	REV 03	710-021523	XD7455	MX SCB
FPC 4	REV 02	750-028467	JR6127	MPC M 16x 10GE
CPU	REV 02	711-029089	JX0129	AS PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Fan Tray 0	REV 05	740-014971	TP9990	Fan Tray
Fan Tray 1	REV 05	740-014971	VS1709	Fan Tray

show chassis hardware (MPC3E [MX Series Routers])

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN1101AFEAFB	MX480
Midplane	REV 05	710-017414	TR4444	MX480 Midplane
FPM Board	REV 02	710-017254	KG6056	Front Panel Display
PEM 0	Rev 03	740-017330	QCS082090FC	PS 1.2-1.7kW; 100-240V
PEM 1	Rev 03	740-017330	QCS082090FD	PS 1.2-1.7kW; 100-240V
Routing Engine 0	REV 07	740-013063	9009004124	RE-S-2000
Routing Engine 1	REV 07	740-013063	9009005569	RE-S-2000
CB 0	REV 07	710-021523	XZ3587	MX SCB
CB 1	REV 03	710-021523	KH8306	MX SCB
FPC 1	REV 04.1.07	750-033205	P1240	MPC Type 3
CPU	REV 01	711-035209	YL0504	HMPC PMB 2G
MIC 1	REV 10	750-033199	YX4495	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	C22CQNE	CFP-100G-LR4
FPC 2	REV 26	750-016670	KH0045	DPCE 40x 1GE R EQ
CPU	REV 07	710-013713	KF5448	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) EQ

Xcvr 0	REV 01	740-011613	PF21JHU	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 9	REV 01	740-011613	AM0813S8ZL6	SFP-SX
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 02	740-011613	PGL2KYF	SFP-SX
Xcvr 2	REV 01	740-011613	AM0806S8N4P	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 5	REV 01	740-011613	AM0815S967N	SFP-SX
Xcvr 7	REV 01	740-011613	AM0806S8N1X	SFP-SX
Xcvr 8	REV 01	740-011613	AM0815S967J	SFP-SX
Xcvr 9	REV 01	740-011613	AM0815S967M	SFP-SX
FPC 3	REV 12.2.09	750-033205	YR9443	MPC Type 3
CPU	REV 03	711-035209	YL6931	HMPC PMB 2G
MIC 0	REV 05	750-033199	YR3269	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	ULHOKG3	CFP-100G-LR4
MIC 1	REV 02	750-033199	YG3245	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	ULHOKGF	CFP-100G-LR4
FPC 4	REV 12.3.09	750-033205	YR9437	MPC Type 3
CPU	REV 03	711-035209	YT5857	HMPC PMB 2G
MIC 0	REV 05	750-033199	YR3295	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12000187	CFP-100G-SR10
MIC 1	REV 10	750-033199	YX4518	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00008	CFP-100G-SR10
FPC 5	REV 06	750-024884	JW9769	MPC Type 2 3D EQ
CPU	REV 02	711-028401	JR6158	MPC PMB 2G Proto
MIC 0	REV 05	750-028387	JR6197	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 01	740-014289	T07M71112	XFP-10G-SR
Xcvr 1	REV 02	740-014289	T08L85610	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
MIC 1	REV 22	750-028392	YM0053	3D 20x 1GE(LAN) SFP
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011613	AM0703S005B	SFP-SX
Xcvr 1	REV 01	740-011613	E07L01352	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 5	REV 01	740-013111	6500217	SFP-T
Xcvr 9	REV 02	740-013111	8499527	SFP-T
Fan Tray				Left Fan Tray

The PIC number for MIC 1 always starts from 2 (even if the first MIC is a 1X100GE CFP or a legacy MIC).

show chassis hardware (QFX3500 Switches)

```
user@switch> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis				QFX3500
Routing Engine 0				QFX Routing Engine
FPC 0	REV 04	750-044071	BBAR3902	QFX3500-48S4Q-AFI
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	48x 10G-SFP+
PIC 1		BUILTIN	BUILTIN	15x 10G-SFP+
MGMT BRD	REV 02	750-044063	BBAR0398	QFX3500-MGMT-SFP-AF0
Xcvr 0	REV 01	740-011614	AC0946S0BD1	SFP-LX10
Xcvr 1	REV 02	740-013111	A281922	SFP-T

Power Supply 0	Rev 04	740-032091	UI00677	JPSU-650W-AC-AFI
Power Supply 1	REV 00	740-041741	VJ00162	JPSU-650W-AC-AFO
Fan Tray 0				QFX Fan Tray, Back to
Front Airflow				
Fan Tray 1				QFX Fan Tray, Back to
Front Airflow				
Fan Tray 2				QFX Fan Tray, Back to
Front Airflow				

show chassis hardware detail (QFX3500 Switches)

```
user@switch> show chassis hardware detail
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN000TEST5	QFX3500
Routing Engine 0		BUILTIN	BUILTIN	QFX Routing Engine
FPC 0	REV 05	750-036931	EE0823	QFX3500-48S4Q-AFI

CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	48x 10G-SFP+
Xcvr 0	REV 01	740-030589	S99E270079	SFP+-10G-LPBK
Xcvr 1	REV 01	740-030589	S9AK450099	SFP+-10G-LPBK
Xcvr 2	REV 01	740-030589	S99E270078	SFP+-10G-LPBK
Xcvr 3	REV 01	740-030589	S9AK450098	SFP+-10G-LPBK
Xcvr 4	REV 01	740-030589	S99E270075	SFP+-10G-LPBK
Xcvr 5	REV 01	740-030589	S9AK450093	SFP+-10G-LPBK
Xcvr 6	REV 01	740-030589	S9AK450097	SFP+-10G-LPBK
Xcvr 7	REV 01	740-030589	S9AK450095	SFP+-10G-LPBK
Xcvr 8	REV 01	740-030589	S99E270072	SFP+-10G-LPBK
Xcvr 9	REV 01	740-030589	S99E270073	SFP+-10G-LPBK
Xcvr 10	REV 01	740-030589	S99E270080	SFP+-10G-LPBK
Xcvr 11	REV 01	740-030589	S9AK450169	SFP+-10G-LPBK
Xcvr 12	REV 01	740-030589	S99E270076	SFP+-10G-LPBK
Xcvr 13	REV 01	740-030589	S9AK450167	SFP+-10G-LPBK
Xcvr 14	REV 01	740-030589	S9AK450170	SFP+-10G-LPBK
Xcvr 15	REV 01	740-030589	S9AK450166	SFP+-10G-LPBK
Xcvr 16	REV 01	740-030589	S9AK450092	SFP+-10G-LPBK
Xcvr 17	REV 01	740-030589	S9AK450163	SFP+-10G-LPBK
Xcvr 18	REV 01	740-030589	S9AK450094	SFP+-10G-LPBK
Xcvr 19	REV 01	740-030589	S9AK450100	SFP+-10G-LPBK
Xcvr 20	REV 01	740-030589	S9AK450168	SFP+-10G-LPBK
Xcvr 21	REV 01	740-030589	S9AK450165	SFP+-10G-LPBK
Xcvr 22	REV 01	740-030589	S9AK450073	SFP+-10G-LPBK
Xcvr 23	REV 01	740-030589	S9AK450164	SFP+-10G-LPBK
Xcvr 24	REV 01	740-030589	S9AK450074	SFP+-10G-LPBK
Xcvr 25	REV 01	740-030589	SA62270195	SFP+-10G-LPBK
Xcvr 26	REV 01	740-030589	S9AK450078	SFP+-10G-LPBK
Xcvr 27	REV 01	740-030589	S9AK450024	SFP+-10G-LPBK
Xcvr 28	REV 01	740-030589	S9AK450027	SFP+-10G-LPBK
Xcvr 29	REV 01	740-030589	S9AK450080	SFP+-10G-LPBK
Xcvr 30	REV 01	740-030589	S9AK450030	SFP+-10G-LPBK
Xcvr 31	REV 01	740-030589	S9AK450025	SFP+-10G-LPBK
Xcvr 32	REV 01	740-030589	S9AK450023	SFP+-10G-LPBK
Xcvr 33	REV 01	740-030589	S9AK450075	SFP+-10G-LPBK
Xcvr 34	REV 01	740-030589	S9AK450161	SFP+-10G-LPBK
Xcvr 35	REV 01	740-030589	S9AK450071	SFP+-10G-LPBK
Xcvr 36	REV 01	740-030589	S9AK450072	SFP+-10G-LPBK
Xcvr 37	REV 01	740-030589	S9AK450022	SFP+-10G-LPBK
Xcvr 38	REV 01	740-030589	S9AK450021	SFP+-10G-LPBK
Xcvr 39	REV 01	740-030589	S9AK450175	SFP+-10G-LPBK

Xcvr 40	REV 01	740-030589	S9AK450162	SFP+-10G-LPBK
Xcvr 41	REV 01	740-030589	S99E270074	SFP+-10G-LPBK
Xcvr 42	REV 01	740-030589	S9AK450174	SFP+-10G-LPBK
Xcvr 43	REV 01	740-030589	S9AK450077	SFP+-10G-LPBK
Xcvr 44	REV 01	740-030589	S9AK450076	SFP+-10G-LPBK
Xcvr 45	REV 01	740-030589	S9AK450026	SFP+-10G-LPBK
Xcvr 46	REV 01	740-030589	S9AK450079	SFP+-10G-LPBK
Xcvr 47	REV 01	740-030589	S9AK450029	SFP+-10G-LPBK
PIC 1		BUILTIN	BUILTIN	15x 10G-SFP+
Xcvr 1	REV 01	740-032986	QA170087	QSFP+-40G-SR4
Xcvr 4	REV 01	740-032986	QA360442	QSFP+-40G-SR4
Xcvr 8	REV 01	740-032986	QA170091	QSFP+-40G-SR4
Xcvr 12	REV 01	740-032986	QA170042	QSFP+-40G-SR4
MGMT BRD	REV 08	750-036946	EE0731	QFX3500-MB
Power Supply 0	Rev 04	740-032091	UI00690	QFX PS 650W AC
Power Supply 1	Rev 04	740-032091	UI00679	QFX PS 650W AC
Fan Tray 0				QFX Fan Tray
Fan Tray 1				QFX Fan Tray

show chassis hardware models (QFX3500 Switches)

```

user@switch> show chassis hardware models
Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Routing Engine 0          BUILTIN    BUILTIN
FPC 0          REV 02    711-032234  EC4074
Power Supply 0  PSMI 2C  11-d65800  --

```

show chassis hardware clei-models (QFX3500 Switches)

```

user@switch> show chassis hardware clei-models
Hardware inventory:
Item          Version  Part number  CLEI code  FRU model number
Routing Engine 0          BUILTIN
FPC 0          REV 02    711-032234
Power Supply 0  PSMI 2C  11-d65800

```

show chassis hardware clei-models (QFX5100 Switches)

```

user@switch> show chassis hardware clei-models
Hardware inventory:
Item          Version  Part number  CLEI code  FRU model number
Routing Engine 0          BUILTIN    CMMNV10BRA
FPC 0          REV 01    611-053010  CMMNV10BRA
PIC 0          BUILTIN    CMMNV10BRA
Power Supply 0  REV 03    740-053352  MUPABHBAA  JPSU-850W-AC-AFO
Power Supply 1  REV 03    740-053352  MUPABHBAA  JPSU-850W-AC-AFO
Fan Tray 0          QFX5100-96S-FANAF0
Fan Tray 1          QFX5100-96S-FANAF0
Fan Tray 2          QFX5100-96S-FANAF0

```

show chassis hardware interconnect-device (QFabric Systems)

```

user@switch> show chassis hardware interconnect-device interconnect1
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis          REV 07
Midplane          REV 07    750-021261  BH0208188289  QFX Midplane
CB 0             REV 07    750-021261  BH0208188289  QFXIC08-CB4S

```


show chassis hardware node-device (QFabric Systems)

```

user@switch> show chassis hardware node-device node1
Routing Engine 0    BUILTIN    BUILTIN    QFX Routing Engine
node1              REV 05    711-032234 ED3694      QFX3500-48S4Q-AFI

CPU
PIC 0              BUILTIN    BUILTIN
Xcvr 8            REV 01    740-030658 AD0946A028B FPC CPU
                                     48x 10G-SFP+
                                     SFP+-10G-USR
...

```

show chassis hardware (PTX5000 Packet Transport Router)

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN11D1FD7AJA  PTX5000
Midplane      REV 03    711-031896  ABAC5589      Midplane-8S
FPM           REV 08    760-030647  EG1679        Front Panel Display
PDU 0         Rev 05    740-032019  ZE00006       DC Power Dist Unit
  PSM 0       Rev 05    740-032022  ZJ00018       DC 12V Power Supply
  PSM 1       Rev 04    740-032022  ZC00052       DC 12V Power Supply
  PSM 2       Rev 04    740-032022  ZD00051       DC 12V Power Supply
  PSM 3       Rev 05    740-032022  ZJ00060       DC 12V Power Supply
CCG 0         REV 04    750-030653  EG3703        Clock Generator
CCG 1         REV 04    750-030653  EG3698        Clock Generator
Routing Engine 0 REV 05    740-026942  P737A-002231  RE-DUO-2600
Routing Engine 1 REV 06    740-026942  P737A-002438  RE-DUO-2600
CB 0          REV 08    750-030625  EG5519        Control Board
CB 1          REV 08    750-030625  EG5516        Control Board
FPC 0         REV 18    750-036844  EJ3080        FPC
  CPU         REV 12    711-030686  EJ3260        SNG PMB
FPC 2         REV 13    750-036844  EG5065        FPC
  CPU         REV 09    711-030686  EG4082        SNG PMB
  PIC 0       REV 14    750-031913  EG5127        24x 10GE(LAN) SFP+
    Xcvr 0    REV 01    740-031980  143363A00240 SFP+-10G-SR
    Xcvr 1    REV 01    740-031981  UK90PZ1       SFP+-10G-LR
    Xcvr 2    REV 01    740-031980  AD1141A04XH  SFP+-10G-SR
    Xcvr 3    REV 01    740-031981  UK90Q46       SFP+-10G-LR
    Xcvr 4    REV 01    740-031980  AD1141A04X4  SFP+-10G-SR
    Xcvr 6    REV 01    740-031980  B11H02560    SFP+-10G-SR
    Xcvr 7    REV 01    740-031980  B11C01589    SFP+-10G-SR
    Xcvr 8    REV 01    740-031980  AD1141A04XF  SFP+-10G-SR
    Xcvr 10   REV 01    740-031980  123363A01094 SFP+-10G-SR
    Xcvr 11   REV 01    740-031980  AK80LKF       SFP+-10G-SR
    Xcvr 12   REV 01    740-031980  183363A01528 SFP+-10G-SR
    Xcvr 14   REV 01    740-031980  193363A01079 SFP+-10G-SR
    Xcvr 15   REV 01    740-031980  AK80MC8       SFP+-10G-SR
    Xcvr 16   REV 01    740-031980  AJC0BHC       SFP+-10G-SR
    Xcvr 19   REV 01    740-021309  J08D26856    SFP+-10G-LR
    Xcvr 21   REV 01    740-031980  AK80KCT       SFP+-10G-SR
    Xcvr 22   REV 01    740-031981  UK90PZL       SFP+-10G-LR
    Xcvr 23   REV 01    740-031980  AK80N1V       SFP+-10G-SR
FPC 3         REV 13    750-036844  EG5074        FPC
  CPU         REV 09    711-030686  EG4064        SNG PMB
  PIC 1       REV 10    750-031903  EG0325        SNG Load
FPC 5         REV 06    750-036844  EH3198        FPC
  CPU
  PIC 0       REV 14    750-031913  EG5134        24x 10GE(LAN) SFP+
    Xcvr 0    REV 01    740-031980  AK80LBH       SFP+-10G-SR

```

Xcvr 1	REV 01	740-031980	B11B03724	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FMH	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J00818	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	193363A00743	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11B06125	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B11H02529	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AK80LFB	SFP+-10G-SR
Xcvr 12	REV 01	740-031980	193363A01061	SFP+-10G-SR
Xcvr 15	REV 01	740-031980	B11J00687	SFP+-10G-SR
Xcvr 16	REV 01	740-031980	193363A00738	SFP+-10G-SR
Xcvr 18	REV 01	740-031980	AK80MQX	SFP+-10G-SR
Xcvr 19	REV 01	740-021309	J08C17257	SFP+-10G-LR
Xcvr 22	REV 01	740-031980	B11J00730	SFP+-10G-SR
Xcvr 23	REV 01	740-031980	AK80KEE	SFP+-10G-SR
PIC 1	REV 08	750-036710	EG3105	2x 40GE CFP
Xcvr 0	REV 01	740-034554	B260HLT	CFP-40G-LR4
Xcvr 1	REV 01	740-034554	B11C02847	CFP-40G-LR4
FPC 6	REV 18	750-036844	EJ4391	FPC
CPU	REV 12	711-030686	EJ3257	SNG PMB
FPC 7	REV 18	750-036844	EJ4382	FPC
CPU	REV 12	711-030686	EJ3238	SNG PMB
SPMB 0	REV 10	711-030686	EG5418	SNG PMB
SPMB 1	REV 09	711-030686	EG5373	SNG PMB
SIB 0	REV 07	750-030631	EG4858	SIB-I-8S
SIB 1	REV 07	750-030631	EG4872	SIB-I-8S
SIB 2	REV 07	750-030631	EG4866	SIB-I-8S
SIB 3	REV 07	750-030631	EG6011	SIB-I-8S
SIB 4	REV 07	750-030631	EG4907	SIB-I-8S
SIB 5	REV 07	750-030631	EG4879	SIB-I-8S
SIB 6	REV 07	750-030631	EG4864	SIB-I-8S
SIB 7	REV 07	750-030631	EG4899	SIB-I-8S
SIB 8	REV 07	750-030631	EG4880	SIB-I-8S
Fan Tray 0	REV 04	760-032784	EG1496	Vertical Fan Tray
Fan Tray 1	REV 04	760-030642	EG1335	Horizontal Fan Tray
Fan Tray 2	REV 02	760-030642	ED4952	Horizontal Fan Tray

show chassis hardware (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN1204FC0AJA	PTX5000
Midplane	REV 11	750-035893	ACAB8038	Midplane-8S
FPM	REV 12	760-030647	BBBD5619	Front Panel
Display				
PDU 0	Rev 04	740-048336	1GB93470043	High Capacity DC PDU
PSM 0	Rev 04	740-046988	1GB63500184	High Capacity DC PSM
PSM 2	Rev 04	740-046988	1GB63500169	High Capacity DC PSM
PSM 4	Rev 04	740-046988	1GB63500306	High Capacity DC PSM
PSM 6	Rev 04	740-046988	1GB63500074	High Capacity DC PSM
PDU 1	Rev 04	740-048336	1GB93470045	High Capacity DC PDU
PSM 1	Rev 04	740-046988	1GB63500193	High Capacity DC PSM
PSM 3	Rev 04	740-046988	1GB63500143	High Capacity DC PSM
PSM 5	Rev 04	740-046988	1GB63500146	High Capacity DC PSM
PSM 7	Rev 04	740-046988	1GB63500192	High Capacity DC PSM
CCG 0	REV 09	750-030653	BBBC1909	Clock Generator
CCG 1	REV 09	750-030653	BBBD2970	Clock Generator
...				

show chassis hardware clei-models (PTX5000 Packet Transport Router)

```

user@host> show chassis hardware clei-models
Hardware inventory:
Item                Version  Part number  CLEI code  FRU model number
FPM                 REV 08    760-030647  PROTOXCLEI CRAFT-PTX5000-S
PDU 0              Rev 05    740-032019  IPUPAHLKAA  PWR-SAN-PDU-DC
  PSM 0            Rev 05    740-032022  IPUPAHNKAA  PSM-PTX-DC-120-S
  PSM 1            Rev 04    740-032022  032022XXXX  PWR-SAN-12-DC
  PSM 2            Rev 04    740-032022  032022XXXX  PWR-SAN-12-DC
  PSM 3            Rev 05    740-032022  IPUPAHNKAA  PSM-PTX-DC-120-S
CCG 0              REV 04    750-030653  PROTOXCLEI CCG-PTX-S
CCG 1              REV 04    750-030653  PROTOXCLEI CCG-PTX-S
Routing Engine 0   REV 05    740-026942  RE-DUO-C2600-16G-S
Routing Engine 1   REV 06    740-026942  RE-DUO-C2600-16G-S
CB 0               REV 08    750-030625  PROTOXCLEI CB-PTX-S
CB 1               REV 08    750-030625  PROTOXCLEI CB-PTX-S
FPC 0              REV 18    750-036844  PROTOXCLEI FPC-PTX-P1-A
FPC 2              REV 13    750-036844  PROTOXCLEI FPC-PTX-P1-A
  PIC 0            REV 14    750-031913  PROTOXCLEI P1-PTX-24-10GE-SFPP
FPC 3              REV 13    750-036844  PROTOXCLEI FPC-PTX-P1-A
FPC 5
  PIC 0            REV 14    750-031913  PROTOXCLEI P1-PTX-24-10GE-SFPP
FPC 6              REV 18    750-036844  PROTOXCLEI FPC-PTX-P1-A
FPC 7              REV 18    750-036844  PROTOXCLEI FPC-PTX-P1-A
SIB 0              REV 07    750-030631  PROTOXCLEI SIB-I-PTX5008
SIB 1              REV 07    750-030631  PROTOXCLEI SIB-I-PTX5008
SIB 2              REV 07    750-030631  PROTOXCLEI SIB-I-PTX5008
SIB 3              REV 07    750-030631  PROTOXCLEI SIB-I-PTX5008
SIB 4              REV 07    750-030631  PROTOXCLEI SIB-I-PTX5008
SIB 5              REV 07    750-030631  PROTOXCLEI SIB-I-PTX5008
SIB 6              REV 07    750-030631  PROTOXCLEI SIB-I-PTX5008
SIB 7              REV 07    750-030631  PROTOXCLEI SIB-I-PTX5008
SIB 8              REV 07    750-030631  PROTOXCLEI SIB-I-PTX5008
Fan Tray 1         REV 04    760-030642  PROTOXCLEI FAN-PTX-H-S

```

show chassis hardware clei-models (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```

user@host> show chassis hardware clei-models
Hardware inventory:
Item                Version  Part number  CLEI code  FRU model number
Midplane            REV 11    750-035893  IPMUN00ARA  CHAS-MP-PTX5000-S
FPM                 REV 12    760-030647  IPUCA7SCAA  CRAFT-PTX5000-S
PDU 0              Rev 04    740-048336  IPUPAL7KAA  PDU2-PTX-DC-S
  PSM 0            Rev 04    740-046988  IPUPAL8KAA  PSM2-PTX-DC-S
  PSM 2            Rev 04    740-046988  IPUPAL8KAA  PSM2-PTX-DC-S
  PSM 4            Rev 04    740-046988  IPUPAL8KAA  PSM2-PTX-DC-S
  PSM 6            Rev 04    740-046988  IPUPAL8KAA  PSM2-PTX-DC-S
PDU 1              Rev 04    740-048336  IPUPAL7KAA  PDU2-PTX-DC-S
  PSM 1            Rev 04    740-046988  IPUPAL8KAA  PSM2-PTX-DC-S
  PSM 3            Rev 04    740-046988  IPUPAL8KAA  PSM2-PTX-DC-S
  PSM 5            Rev 04    740-046988  IPUPAL8KAA  PSM2-PTX-DC-S
  PSM 7            Rev 04    740-046988  IPUPAL8KAA  PSM2-PTX-DC-S
CCG 0              REV 09    750-030653  IPUCA7DCAA  CCG-PTX-S
CCG 1              REV 09    750-030653  IPUCA7DCAA  CCG-PTX-S
...

```

show chassis hardware detail (PTX5000 Packet Transport Router)

```

user@host> show chassis hardware detail

```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11D1FD7AJA	PTX5000
Midplane	REV 03	711-031896	ABAC5589	Midplane-8S
FPM	REV 08	760-030647	EG1679	Front Panel Display
PDU 0	Rev 05	740-032019	ZE00006	DC Power Dist Unit
PSM 0	Rev 05	740-032022	ZJ00018	DC 12V Power Supply
PSM 1	Rev 04	740-032022	ZC00052	DC 12V Power Supply
PSM 2	Rev 04	740-032022	ZD00051	DC 12V Power Supply
PSM 3	Rev 05	740-032022	ZJ00060	DC 12V Power Supply
CCG 0	REV 04	750-030653	EG3703	Clock Generator
CCG 1	REV 04	750-030653	EG3698	Clock Generator
Routing Engine 0	REV 05	740-026942	P737A-002231	RE-DUO-2600
ad0 3823 MB	SMART CF		201006190039C02DC02D	Compact Flash
ad1 62720 MB	SMART Lite SATA Drive		2011042300CF4C6B4C6B	Disk 1
Routing Engine 1	REV 06	740-026942	P737A-002438	RE-DUO-2600
ad0 3823 MB	SMART CF		20100619053455F055F0	Compact Flash
ad1 62720 MB	SMART Lite SATA Drive		20110423000AE8E7E8E7	Disk 1
CB 0	REV 08	750-030625	EG5519	Control Board
CB 1	REV 08	750-030625	EG5516	Control Board
FPC 0	REV 18	750-036844	EJ3080	FPC
CPU	REV 12	711-030686	EJ3260	SNG PMB
FPC 2	REV 13	750-036844	EG5065	FPC
CPU	REV 09	711-030686	EG4082	SNG PMB
PIC 0	REV 14	750-031913	EG5127	24x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	143363A00240	SFP+-10G-SR
Xcvr 1	REV 01	740-031981	UK90PZ1	SFP+-10G-LR
Xcvr 2	REV 01	740-031980	AD1141A04XH	SFP+-10G-SR
Xcvr 3	REV 01	740-031981	UK90Q46	SFP+-10G-LR
Xcvr 4	REV 01	740-031980	AD1141A04X4	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11H02560	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11C01589	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AD1141A04XF	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	123363A01094	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AK80LKF	SFP+-10G-SR
Xcvr 12	REV 01	740-031980	183363A01528	SFP+-10G-SR
Xcvr 14	REV 01	740-031980	193363A01079	SFP+-10G-SR
Xcvr 15	REV 01	740-031980	AK80MC8	SFP+-10G-SR
Xcvr 16	REV 01	740-031980	AJC0BHC	SFP+-10G-SR
Xcvr 19	REV 01	740-021309	J08D26856	SFP+-10G-LR
Xcvr 21	REV 01	740-031980	AK80KCT	SFP+-10G-SR
Xcvr 22	REV 01	740-031981	UK90PZL	SFP+-10G-LR
Xcvr 23	REV 01	740-031980	AK80N1V	SFP+-10G-SR
FPC 3	REV 13	750-036844	EG5074	FPC
CPU	REV 09	711-030686	EG4064	SNG PMB
PIC 1	REV 10	750-031903	EG0325	SNG Load
FPC 5	REV 06	750-036844	EH3198	FPC
CPU				
PIC 0	REV 14	750-031913	EG5134	24x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LBH	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11B03724	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FMH	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J00818	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	193363A00743	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11B06125	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B11H02529	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AK80LFB	SFP+-10G-SR
Xcvr 12	REV 01	740-031980	193363A01061	SFP+-10G-SR
Xcvr 15	REV 01	740-031980	B11J00687	SFP+-10G-SR
Xcvr 16	REV 01	740-031980	193363A00738	SFP+-10G-SR
Xcvr 18	REV 01	740-031980	AK80MQX	SFP+-10G-SR

Xcvr 19	REV 01	740-021309	J08C17257	SFP+-10G-LR
Xcvr 22	REV 01	740-031980	B11J00730	SFP+-10G-SR
Xcvr 23	REV 01	740-031980	AK80KEE	SFP+-10G-SR
PIC 1	REV 08	750-036710	EG3105	2x 40GE CFP
Xcvr 0	REV 01	740-034554	B260HLT	CFP-40G-LR4
Xcvr 1	REV 01	740-034554	B11C02847	CFP-40G-LR4
FPC 6	REV 18	750-036844	EJ4391	FPC
CPU	REV 12	711-030686	EJ3257	SNG PMB
FPC 7	REV 18	750-036844	EJ4382	FPC
CPU	REV 12	711-030686	EJ3238	SNG PMB
SPMB 0	REV 10	711-030686	EG5418	SNG PMB
SPMB 1	REV 09	711-030686	EG5373	SNG PMB
SIB 0	REV 07	750-030631	EG4858	SIB-I-8S
SIB 1	REV 07	750-030631	EG4872	SIB-I-8S
SIB 2	REV 07	750-030631	EG4866	SIB-I-8S
SIB 3	REV 07	750-030631	EG6011	SIB-I-8S
SIB 4	REV 07	750-030631	EG4907	SIB-I-8S
SIB 5	REV 07	750-030631	EG4879	SIB-I-8S
SIB 6	REV 07	750-030631	EG4864	SIB-I-8S
SIB 7	REV 07	750-030631	EG4899	SIB-I-8S
SIB 8	REV 07	750-030631	EG4880	SIB-I-8S
Fan Tray 0	REV 04	760-032784	EG1496	Vertical Fan Tray
Fan Tray 1	REV 04	760-030642	EG1335	Horizontal Fan Tray
Fan Tray 2	REV 02	760-030642	ED4952	Horizontal Fan Tray

show chassis hardware detail (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```

user@host> show chassis hardware detail
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN1204FC0AJA   PTX5000
Midplane      REV 11   750-035893   ACAB8038      Midplane-8S
FPM           REV 12   760-030647   BBBD5619      Front Panel
Display
PDU 0         Rev 04   740-048336   1GB93470043   High Capacity DC PDU
PSM 0         Rev 04   740-046988   1GB63500184   High Capacity DC PSM
PSM 2         Rev 04   740-046988   1GB63500169   High Capacity DC PSM
PSM 4         Rev 04   740-046988   1GB63500306   High Capacity DC PSM
PSM 6         Rev 04   740-046988   1GB63500074   High Capacity DC PSM
PDU 1         Rev 04   740-048336   1GB93470045   High Capacity DC PDU
PSM 1         Rev 04   740-046988   1GB63500193   High Capacity DC PSM
PSM 3         Rev 04   740-046988   1GB63500143   High Capacity DC PSM
PSM 5         Rev 04   740-046988   1GB63500146   High Capacity DC PSM
PSM 7         Rev 04   740-046988   1GB63500192   High Capacity DC PSM
CCG 0         REV 09   750-030653   BBBC1909      Clock Generator
CCG 1         REV 09   750-030653   BBBD2970      Clock Generator
...

```

show chassis hardware models (PTX5000 Packet Transport Router)

```

user@host> show chassis hardware models
Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
FPM           REV 08   760-030647   EG1679         CRAFT-PTX5000-S
PDU 0         Rev 05   740-032019   ZE00006        PWR-SAN-PDU-DC
PSM 0         Rev 05   740-032022   ZJ00018        PSM-PTX-DC-120-S
PSM 1         Rev 04   740-032022   ZC00052        PWR-SAN-12-DC
PSM 2         Rev 04   740-032022   ZD00051        PWR-SAN-12-DC
PSM 3         Rev 05   740-032022   ZJ00060        PSM-PTX-DC-120-S
CCG 0         REV 04   750-030653   EG3703         CCG-PTX-S
CCG 1         REV 04   750-030653   EG3698         CCG-PTX-S

```

Routing Engine 0	REV 05	740-026942	P737A-002231	RE-DUO-C2600-16G-S
Routing Engine 1	REV 06	740-026942	P737A-002438	RE-DUO-C2600-16G-S
CB 0	REV 08	750-030625	EG5519	CB-PTX-S
CB 1	REV 08	750-030625	EG5516	CB-PTX-S
FPC 0	REV 18	750-036844	EJ3080	FPC-PTX-P1-A
FPC 2	REV 13	750-036844	EG5065	FPC-PTX-P1-A
PIC 0	REV 14	750-031913	EG5127	P1-PTX-24-10GE-SFPP
FPC 3	REV 13	750-036844	EG5074	FPC-PTX-P1-A
FPC 5				
PIC 0	REV 14	750-031913	EG5134	P1-PTX-24-10GE-SFPP
FPC 6	REV 18	750-036844	EJ4391	FPC-PTX-P1-A
FPC 7	REV 18	750-036844	EJ4382	FPC-PTX-P1-A
SIB 0	REV 07	750-030631	EG4858	SIB-I-PTX5008
SIB 1	REV 07	750-030631	EG4872	SIB-I-PTX5008
SIB 2	REV 07	750-030631	EG4866	SIB-I-PTX5008
SIB 3	REV 07	750-030631	EG6011	SIB-I-PTX5008
SIB 4	REV 07	750-030631	EG4907	SIB-I-PTX5008
SIB 5	REV 07	750-030631	EG4879	SIB-I-PTX5008
SIB 6	REV 07	750-030631	EG4864	SIB-I-PTX5008
SIB 7	REV 07	750-030631	EG4899	SIB-I-PTX5008
SIB 8	REV 07	750-030631	EG4880	SIB-I-PTX5008
Fan Tray 1	REV 04	760-030642	EG1335	FAN-PTX-H-S

show chassis hardware models (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```

user@host> show chassis hardware models
Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Midplane      REV 11   750-035893   ACAB8038      CHAS-MP-PTX5000-S
FPM           REV 12   760-030647   BBBD5619      CRAFT-PTX5000-S
PDU 0         Rev 04   740-048336   1GB93470043   PDU2-PTX-DC-S
  PSM 0        Rev 04   740-046988   1GB63500184   PSM2-PTX-DC-S
  PSM 2        Rev 04   740-046988   1GB63500169   PSM2-PTX-DC-S
  PSM 4        Rev 04   740-046988   1GB63500306   PSM2-PTX-DC-S
  PSM 6        Rev 04   740-046988   1GB63500074   PSM2-PTX-DC-S
PDU 1         Rev 04   740-048336   1GB93470045   PDU2-PTX-DC-S
  PSM 1        Rev 04   740-046988   1GB63500193   PSM2-PTX-DC-S
  PSM 3        Rev 04   740-046988   1GB63500143   PSM2-PTX-DC-S
  PSM 5        Rev 04   740-046988   1GB63500146   PSM2-PTX-DC-S
  PSM 7        Rev 04   740-046988   1GB63500192   PSM2-PTX-DC-S
CCG 0         REV 09   750-030653   BBBC1909      CCG-PTX-S
CCG 1         REV 09   750-030653   BBBD2970      CCG-PTX-S
...

```

show chassis hardware extensive (PTX5000 Packet Transport Router)

```

user@host> show chassis hardware extensive
Hardware inventory:
Item          Version  Part number  Serial number  Description
.....
PDU 0         Rev 04   740-032019   UE0003         DC Power Dist Unit
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          740-032019        S/N:           UE0003
Assembly ID:  0x043d          Assembly Version: 04.00
Date:         11-29-2010      Assembly Flags: 0x00
Version:      Rev 04          CLEI Code:     032022XXXX
ID: DC Power Dist Unit        FRU Model Number: PWR-SAN-PDU-DC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 3d 04 00 52 65 76 20 30 34 00 00

```

```

Address 0x10: 00 00 00 00 37 34 30 2d 30 33 32 30 31 39 00 00
Address 0x20: 53 2f 4e 20 55 45 30 30 30 33 00 00 00 1d 0b 07
Address 0x30: da ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 30 33 32 30 32 32 58 58 58 58 50
Address 0x50: 57 52 2d 53 41 4e 2d 50 44 55 2d 44 43 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 a3 ff ff ff ff ff ff ff ff ff ff ff ff
PSM 0          Rev 04    740-032022  YG00065          DC 12V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-032022      S/N:             YG00065
Assembly ID:   0x0440          Assembly Version: 04.00
Date:          07-30-2010      Assembly Flags:   0x00
Version:       Rev 04          CLEI Code:        032022XXXX
ID: DC 12V Power Supply Module FRU Model Number: PWR-SAN-12-DC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 40 04 00 52 65 76 20 30 34 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 33 32 30 32 32 00 00
Address 0x20: 53 2f 4e 20 59 47 30 30 30 36 35 00 00 1e 07 07
Address 0x30: da ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 30 33 32 30 32 32 58 58 58 58 50
Address 0x50: 57 52 2d 53 41 4e 2d 31 32 2d 44 43 20 20 20 20
Address 0x60: 20 20 20 20 20 20 20 01 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 0c ff ff ff ff ff ff ff ff ff ff ff ff

```

show chassis hardware (MX Routers with Media Services Blade [MSB])

```

user@switch> show chassis hardware
Hardware inventory:
Item             Version  Part number  Serial number  Description
Chassis                               JN1100FB1AFB  MX480
Midplane         REV 05   710-017414   TR3310         MX480 Midplane
FPM Board        REV 02   710-017254   KG1872         Front Panel Display
PEM 2            Rev 02   740-017343   QCS0812A00N    DC Power Entry Module
PEM 3            Rev 02   740-017343   QCS0812A00U    DC Power Entry Module
Routing Engine 0 REV 07   740-015113   1000740938     RE-S-1300
CB 0             REV 03   710-021523   KF4630         MX SCB
FPC 1            REV 11   750-037207   ZW9726         AS-MCC
CPU              REV 04   711-038173   ZW4819         AS-MCC PMB
MIC 0            REV 06   750-037214   ZW3574         AS-MSC
PIC 0            BUILTIN BUILTIN       AS-MSC
MIC 1            REV 00   750-037211           AS-MXC
PIC 2            BUILTIN BUILTIN       AS-MXC

```

show chassis hardware extensive (MX Routers with Media Services Blade [MSB])

```

user@switch> show chassis hardware extensive
FPC 1            REV 11   750-037207   ZW9726         AS-MCC
Jedec Code:      0x7fb0          EEPROM Version:  0x02
P/N:             750-037207      S/N:             ZW9726
Assembly ID:     0x0b37          Assembly Version: 01.11
Date:           02-17-2012      Assembly Flags:   0x00
Version:         REV 11          CLEI Code:        PROTOXCLEI
ID: AS-MCC        FRU Model Number: 750-037207
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 37 01 0b 52 45 56 20 31 31 00 00

```

```

Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 30 37 00 00
Address 0x20: 53 2f 4e 20 5a 57 39 37 32 36 00 00 00 11 02 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 37
Address 0x50: 35 30 2d 30 33 37 32 30 37 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 31 31 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 5e ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 04    711-038173    ZW4819          AS-MCC-PMB
Jedec Code:  0x7fb0          EEPROM Version:  0x02
P/N:         711-038173      S/N:          ZW4819
Assembly ID: 0x0b38          Assembly Version: 01.04
Date:        12-30-2011      Assembly Flags: 0x00
Version:     REV 04
ID: AS-MCC PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 38 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 38 31 37 33 00 00
Address 0x20: 53 2f 4e 20 5a 57 34 38 31 39 00 00 00 1e 0c 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 37
Address 0x50: 31 31 2d 30 33 38 31 37 33 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 30 34 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 60 00 00 00 00 00 00 00 00 00 00 00 00
MIC 0          REV 06    750-037214    ZW3574          AS-MS
Jedec Code:  0x7fb0          EEPROM Version:  0x02
P/N:         750-037214      S/N:          ZW3574
Assembly ID: 0x0a44          Assembly Version: 01.06
Date:        02-19-2012      Assembly Flags: 0x00
Version:     REV 06          CLEI Code:      PROTOXCLEI
ID: AS-MS      FRU Model Number: 750-037214
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0a 44 01 06 52 45 56 20 30 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 31 34 00 00
Address 0x20: 53 2f 4e 20 5a 57 33 35 37 34 00 00 00 13 02 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 37
Address 0x50: 35 30 2d 30 33 37 32 31 34 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 30 36 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 60 c0 03 e5 f4 00 00 00 00 00 00 00 00
PIC 0          BUILTIN    BUILTIN          AS-MS
MIC 1          REV 00    750-037211          AS-MXC
Jedec Code:  0x7fb0          EEPROM Version:  0x01
P/N:         750-037211
Assembly ID: 0x0a43          Assembly Version: 01.00
Date:        255-255-65535    Assembly Flags: 0x00
Version:     REV 00
ID: AS-MXC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0a 43 01 00 52 45 56 20 30 30 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 31 31 00 00
Address 0x20: 00 00 00 00 00 00 00 00 00 00 00 00 00 ff ff ff
Address 0x30: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```



```

Address 0x70: ff ff ff ff c0 02 e6 6c 7f b0 02 ff 0a 44 01 06
PIC 2                BUILTIN        BUILTIN        AS-MXC

```

show chassis hardware (QFX3500 Switch running Enhanced Layer 2 Software)

```

user@switch> show chassis hardware
Hardware inventory:
Item                Version  Part number  Serial number  Description
Chassis
Pseudo CB 0
Routing Engine 0    BUILTIN    BUILTIN      QFX Routing Engine
FPC 0              REV 16     750-036931   P3566-C        QFX3500-48S4Q
CPU                BUILTIN    BUILTIN      FPC CPU
PIC 0              BUILTIN    BUILTIN      48x 10G-SFP+
  Xcvr 12          REV 01     740-030658   AD1125A0438    SFP+-10G-USR
  Xcvr 13          REV 01     740-030658   AD1125A02GN    SFP+-10G-USR
PIC 1              BUILTIN    BUILTIN      4x 40G-QSFP+
PIC 2
MGMT BRD           REV 10     750-036946   BBAW0328       QFX3500-MGMT-RJ45-AFI
Power Supply 0     Rev 05     740-032091   WA13035        JPSU-650W-AC-AFI
Power Supply 1
Fan Tray 0
  to Back Airflow  QFX3500 Fan Tray, Front
Fan Tray 1
  to Back Airflow  QFX3500 Fan Tray, Front
Fan Tray 2
  to Back Airflow  QFX3500 Fan Tray, Front

```

show chassis hardware (QFX5100 Switch running Enhanced Layer 2 Software)

```

user@switch> show chassis hardware
Hardware inventory:
Item                Version  Part number  Serial number  Description
Chassis
Pseudo CB 0
Routing Engine 0    BUILTIN    BUILTIN      QFX Routing Engine
FPC 0              REV 02     650-049942   TB3113280048   QFX5100-24Q-2P
CPU                BUILTIN    BUILTIN      FPC CPU
PIC 0              BUILTIN    BUILTIN      24x 40G-QSFP
  Xcvr 8           REV 01     740-032986   QA470143       QSFP+-40G-SR4
  Xcvr 14          REV 01     740-032986   QB500525       QSFP+-40G-SR4
PIC 1              REV 02     611-049555   RR3113310169   QFX-EM-4Q
  Xcvr 0           REV 01     740-032986   QC440904       QSFP+-40G-SR4
  Xcvr 1           REV 01     740-032986   QB240154       QSFP+-40G-SR4
  Xcvr 2           REV 01     740-035085   018110105      QSFP+-40G-LPBK
PIC 2              REV 02     611-049555   RR3113310209   QFX-EM-4Q
  Xcvr 0           REV 01     740-032986   QB190270       QSFP+-40G-SR4
  Xcvr 1           REV 01     740-035085   018110063      QSFP+-40G-LPBK
  Xcvr 2           REV 01     740-032986   QB210034       QSFP+-40G-SR4
Power Supply 0     REV 03     740-041741   1GA23110973    JPSU-650W-AC-AFO
Power Supply 1     REV 03     740-041741   1GA23090878    JPSU-650W-AC-AFO
Fan Tray 0
  to Back Airflow - AFO  QFX5100 Fan Tray 0, Front
Fan Tray 1
  to Back Airflow - AFO  QFX5100 Fan Tray 1, Front
Fan Tray 2
  to Back Airflow - AFO  QFX5100 Fan Tray 2, Front
Fan Tray 3
  to Back Airflow - AFO  QFX5100 Fan Tray 3, Front

```

Fan Tray 4
to Back Airflow - AFO

QFX5100 Fan Tray 4, Front

show chassis lcd

List of Syntax	show chassis lcd (EX Series) on page 933 show chassis lcd (QFX Series) on page 933 show chassis lcd (OCX Series) on page 933
show chassis lcd (EX Series)	<pre>show chassis lcd <fpc-slot <i>fpc-slot-number</i>> <menu <(all-members local member <i>member-id</i>)>></pre>
show chassis lcd (QFX Series)	<pre>show chassis lcd <fpc-slot <i>fpc-slot-number</i>> <interconnect-device <i>device-id</i>> <node-device <i>device-id</i>></pre>
show chassis lcd (OCX Series)	<pre>show chassis lcd <fpc-slot <i>fpc-slot-number</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>menu option introduced in Junos OS Release 10.2 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 13.1 for QFabric systems.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Display the information that appears on the LCD panel of EX3200, EX3300, EX4200, EX4500, EX6200, and EX8200 switches, XRE200 External Routing Engines, QFX Series standalone switches, OCX Series switches, and Interconnect devices and Node devices within a QFabric system. Display the status of the currently selected port parameter of the Status LED for each network port on the device.</p>
Options	<p>none—Display the information that appears on the LCD panel (for any EX Series member switch in a Virtual Chassis or for XRE200 External Routing Engines, display the information for all Virtual Chassis members). Display the status of the currently selected port parameter of the Status LED for each network port.</p> <p>fpc-slot <<i>fpc-slot-number</i>>—(Optional) Display the information as follows:</p> <ul style="list-style-type: none"> (EX3200, EX3300, EX4200, and EX4500 switches, QFX Series, or OCX Series) Display the information that appears on the LCD panel for either an FPC slot with no <i>fpc-slot-number</i> value specified or for the FPC slot specified by fpc-slot 0. fpc-slot refers to the switch itself and 0 is the only valid value for <i>fpc-slot-number</i>. Output for these options is the same as for the none option. <p>Also display the status of the currently selected port parameter of the Status LED for each network port.</p> <ul style="list-style-type: none"> (EX Series Virtual Chassis member switches or XRE200 External Routing Engines) If no <i>fpc-slot-number</i> value is specified, display the information that appears on the LCD panel for all members of the Virtual Chassis. Output for this option is the same as for the none option. If the <i>fpc-slot-number</i> value is specified (it equals the <i>member-id</i> value), display the information for the specified member.

Also display the status of the currently selected port parameter of the Status LED for each network port.

- (EX6200 or EX8200 switches)—Display the information that appears on the LCD panel for the line card in the line-card slot specified by the *fpc-slot-number* value.

Also display the status of the currently selected port parameter of the Status LED for each network port.

interconnect-device *device-id*—(QFabric systems only) (Optional) Display the front panel contents and LED status of all the ports on the Interconnect device.

menu—(Optional) Display the names of the menus and menu options that are currently enabled on the LCD panel.

menu all-members—(EX Series Virtual Chassis member switches or XRE200 External Routing Engines) (Optional) Display the names of the menus and menu options that are currently enabled on the LCD panel for all Virtual Chassis members.

menu local—(EX Series Virtual Chassis member switches or XRE200 External Routing Engines) (Optional) Display the names of the menus and menu options that are currently enabled on the LCD panel for the Virtual Chassis member from which you issued the command.

menu member *member-id*—(EX Series Virtual Chassis member switches or XRE200 External Routing Engines) (Optional) Display the names of the menus and menu options that are currently enabled on the LCD panel for the specified Virtual Chassis member.

node-device *device-id*—(QFabric systems only) (Optional) Display the front panel contents and LED status of all the ports on the Node device.

Required Privilege Level

view

Related Documentation

- *LCD Panel in EX3200 Switches*
- *LCD Panel in EX4200 Switches*
- *LCD Panel in EX4500 Switches*
- *LCD Panel in an EX8200 Switch*
- *LCD Panel in an XRE200 External Routing Engine*
- *Configuring the LCD Panel on EX Series Switches (CLI Procedure)*
- *set chassis display message*

List of Sample Output

[show chassis lcd \(Two-Member EX4200 Virtual Chassis\) on page 936](#)
[show chassis lcd fpc-slot 1 \(EX4200 Virtual Chassis\) on page 937](#)
[show chassis lcd \(EX8200 Switch\) on page 937](#)
[show chassis lcd fpc-slot 2 \(EX8200 Switch\) on page 939](#)
[show chassis lcd menu \(EX4200 Switch\) on page 939](#)

[show chassis lcd menu \(EX8200 Switch\) on page 940](#)

[show chassis lcd \(QFX3500 Switches\) on page 940](#)

[show chassis lcd \(XRE200 External Routing Engine in EX8200 Virtual Chassis\) on page 940](#)

[show chassis lcd interconnect-device \(QFabric Systems\) on page 943](#)

[show chassis lcd node-device \(QFabric Systems\) on page 945](#)

Output Fields Table 44 on page 935 lists the output fields for the **show chassis lcd** command. Output fields are listed in the approximate order in which they appear.

Table 44: show chassis lcd Output Fields

Field Name	Field Description
membernumber (XRE200 External Routing Engine)	Member ID of the device whose content is being displayed.
Front panel contents for slot Front panel contents (EX6200, EX8200 switch, XRE200 External Routing Engine, and QFX Series)	<p>FPC slot number of the switch whose content is being displayed. The number is always 0, except for EX4200 switches in a Virtual Chassis, where it is the member ID value.</p> <p>On EX6200 switches, EX8200 switches, and XRE200 External Routing Engines, no slot number is displayed.</p> <p>On XRE200 External Routing Engines, this field appears under the member number field for each member device in the EX8200 Virtual Chassis.</p>
LCD screen	<p>The first line displays the hostname (for Virtual Chassis members, displays the member ID, the current role, and hostname; for EX8200 switches, displays RE and the hostname). The second line displays the currently selected port parameter of the Status LED and the alarms counter. The Status LED port parameters are:</p> <ul style="list-style-type: none"> • ADM—Administrative • SPD—Speed • DPX—Duplex • POE—Power over Ethernet (EX3200 and EX4200 switches only)
LEDs status	Current state of the Alarms, System, and Master LEDs (chassis status LEDs).
Interface	Names of the interfaces on the switch.
LED (ADM/SPD/DPX/POE)	<p>State of the currently selected port parameter of the Status LED for the interface. The Status LED port parameters are:</p> <p>NOTE: The XRE200 External Routing Engine always displays the NA parameter. The QFX Series products do not have any of the port parameters listed below.</p> <ul style="list-style-type: none"> • ADM—Administrative • SPD—Speed • DPX—Duplex • NA—Not applicable. • POE—Power over Ethernet
fpcx	On standalone EX Series and QFX Series switches, always 0 . On EX Series Virtual Chassis member switches, member ID of the Virtual Chassis member whose LCD menu is displayed.

Sample Output

show chassis lcd (Two-Member EX4200 Virtual Chassis)

```

user@switch> show chassis lcd
Front panel contents for slot: 0
-----
LCD screen:
  00:BK switch1
  LED:SPD ALARM 00
LEDs status:
  Alarms LED: Off
  System LED: Green
  Master LED: Off
Interface      LED(ADM/SPD/DPX/POE)
-----
ge-0/0/0      Off
ge-0/0/1      Off
ge-0/0/2      Off
ge-0/0/3      Off
ge-0/0/4      Off
ge-0/0/5      Off
ge-0/0/6      Off
ge-0/0/7      Off
ge-0/0/8      Off
ge-0/0/9      Off
ge-0/0/10     Off
ge-0/0/11     Off
ge-0/0/12     Off
ge-0/0/13     Off
ge-0/0/14     Off
ge-0/0/15     Off
ge-0/0/16     Off
ge-0/0/17     Off
ge-0/0/18     Off
ge-0/0/19     Off
ge-0/0/20     Off
ge-0/0/21     Off
ge-0/0/22     Off
ge-0/0/23     Off
Front panel contents for slot: 1
-----
LCD screen:
  01:RE switch2
  LED:SPD ALARM 01
LEDs status:
  Alarms LED: Yellow
  System LED: Green
  Master LED: Green
Interface      LED(ADM/SPD/DPX/POE)
-----
ge-1/0/0      Off
ge-1/0/1      Off
ge-1/0/2      Off
ge-1/0/3      Off
ge-1/0/4      Off
ge-1/0/5      Off
ge-1/0/6      Off
ge-1/0/7      Off
ge-1/0/8      Off
ge-1/0/9      Off

```

```

ge-1/0/10      Off
ge-1/0/11      Off
ge-1/0/12      Off
ge-1/0/13      Off
ge-1/0/14      Off
ge-1/0/15      Off
ge-1/0/16      Off
ge-1/0/17      Off
ge-1/0/18      Off
ge-1/0/19      Off
ge-1/0/20      Off
ge-1/0/21      Off
ge-1/0/22      Off
ge-1/0/23      Off

```

The output for the **show chassis lcd fpc-slot** command is the same as the output for the **show chassis lcd** command.

show chassis lcd fpc-slot 1 (EX4200 Virtual Chassis)

```

user@switch> show chassis lcd fpc-slot 1
Front panel contents for slot: 1
-----
LCD screen:
  01:RE switch2
  LED:SPD ALARM 01
LEDs status:
  Alarms LED: Yellow
  System LED: Green
  Master LED: Green
Interface      LED (ADM/SPD/DPX/POE)
-----
ge-1/0/0       Off
ge-1/0/1       Off
ge-1/0/2       Off
ge-1/0/3       Off
ge-1/0/4       Off
ge-1/0/5       Off
ge-1/0/6       Off
ge-1/0/7       Off
ge-1/0/8       Off
ge-1/0/9       Off
ge-1/0/10      Off
ge-1/0/11      Off
ge-1/0/12      Off
ge-1/0/13      Off
ge-1/0/14      Off
ge-1/0/15      Off
ge-1/0/16      Off
ge-1/0/17      Off
ge-1/0/18      Off
ge-1/0/19      Off
ge-1/0/20      Off
ge-1/0/21      Off
ge-1/0/22      Off
ge-1/0/23      Off

```

show chassis lcd (EX8200 Switch)

```

user@switch> show chassis lcd

```

Front panel contents:

LCD screen:

RE st-8200-r

LED:ADM ALARM 01

LEDs status:

Alarms LED: Yellow

System LED: Yellow

Master LED: Green

Interface LED(ADM/SPD/DPX)

ge-0/0/0 Off
ge-0/0/1 Off
ge-0/0/2 Off
ge-0/0/3 Off
ge-0/0/4 Off
ge-0/0/5 Off
ge-0/0/6 Off
ge-0/0/7 Off
ge-0/0/8 Off
ge-0/0/9 Off
ge-0/0/10 Off
ge-0/0/11 Off
ge-0/0/12 Off
ge-0/0/13 Off
ge-0/0/14 Off
ge-0/0/15 Off
ge-0/0/16 Off
ge-0/0/17 Off
ge-0/0/18 Off
ge-0/0/19 Off
ge-0/0/20 Off
ge-0/0/21 Off
ge-0/0/22 Off
ge-0/0/23 Off
ge-0/0/24 Off
ge-0/0/25 Off
ge-0/0/26 Off
ge-0/0/27 Off
ge-0/0/28 Off
ge-0/0/29 Off
ge-0/0/30 Off
ge-0/0/31 Off
ge-0/0/32 Off
ge-0/0/33 Off
ge-0/0/34 Off
ge-0/0/35 Off
ge-0/0/36 Off
ge-0/0/37 Off
ge-0/0/38 Off
ge-0/0/39 Off
ge-0/0/40 Off
ge-0/0/41 Off
ge-0/0/42 Off
ge-0/0/43 Off
ge-0/0/44 Off
ge-0/0/45 Off
ge-0/0/46 Off
ge-0/0/47 Off
xe-2/0/0 Off
xe-2/0/1 Off


```

xe-2/0/2      Off
xe-2/0/3      Off
xe-2/0/4      Off
xe-2/0/5      Off
xe-2/0/6      Off
xe-2/0/7      Off
xe-3/0/0      Off
xe-3/0/1      Off
xe-3/0/2      Off
xe-3/0/3      Off
xe-3/0/4      Off
xe-3/0/5      Off
xe-3/0/6      Off
xe-3/0/7      Off
xe-5/0/0      Off
xe-5/0/1      Off
xe-5/0/2      Off
xe-5/0/3      Off
xe-5/0/4      Off
xe-5/0/5      Off
xe-5/0/6      On
xe-5/0/7      On
xe-7/0/5      Off

```

show chassis lcd fpc-slot 2 (EX8200 Switch)

```
show chassis lcd fpc-slot 2
```

Interface	LED (ADM/SPD/DPX)
xe-2/0/0	Off
xe-2/0/1	Off
xe-2/0/2	Off
xe-2/0/3	Off
xe-2/0/4	Off
xe-2/0/5	Off
xe-2/0/6	Off
xe-2/0/7	Off

show chassis lcd menu (EX4200 Switch)

```
user@switch> show chassis lcd menu
fpc0:
```

```

-----
status-menu
status-menu vcp-status
status-menu power-status
status-menu environ-menu
status-menu show-version
maintenance-menu
maintenance-menu halt-menu
maintenance-menu system-reboot
maintenance-menu rescue-config
maintenance-menu vc-uplink-config
maintenance-menu factory-default

```

On an EX4200 switch in a Virtual Chassis, the output for the **show chassis lcd menu** **all-members** command is the same as the output for the **show chassis lcd menu** command.

show chassis lcd menu (EX8200 Switch)

```
user@switch> show chassis lcd menu
status-menu
status-menu sf-status1-menu
status-menu sf-status2-menu
status-menu psu-status1-menu
status-menu psu-status2-menu
status-menu environ-menu
status-menu show-version
maintenance-menu
maintenance-menu halt-menu
maintenance-menu system-reboot
maintenance-menu rescue-config
maintenance-menu factory-default
```

show chassis lcd (QFX3500 Switches)

```
user@switch> show chassis lcd
Front panel contents for slot: 0
-----
LCD screen:
00:RE switch
ALARM 01
LEDs status:
Status/Beacon LED: Yellow Blinking
Interface STATUS LED ACTIVITY LED
-----
fte-0/1/0 Off Off
```

show chassis lcd (XRE200 External Routing Engine in EX8200 Virtual Chassis)

```
user@external-routing-engine> show chassis lcd
member0:
-----
Front panel contents:
-----
LCD screen:
  RE ex8200-member0
  LED:ADM ALARM 04
LEDs status:
  Alarms LED: Red
  System LED: Yellow
  Master LED: Green

member1:
-----

member8:
-----
Front panel contents:
-----
LCD screen:
  BACKUP

member9:
-----
Front panel contents:
-----
LCD screen:
  09:RE xre200-member9
```

LED: NA ALARM 01

Interface	LED(ADM/SPD/DPX/POE)
-----------	----------------------

ge-0/0/0	On
ge-0/0/1	On
ge-0/0/2	On
ge-0/0/3	On
ge-0/0/4	Off
ge-0/0/5	Off
ge-0/0/6	Off
ge-0/0/7	Off
ge-0/0/8	Off
ge-0/0/9	Off
ge-0/0/10	On
ge-0/0/11	Off
ge-0/0/12	Off
ge-0/0/13	Off
ge-0/0/14	Off
ge-0/0/15	Off
ge-0/0/16	Off
ge-0/0/17	Off
ge-0/0/18	Off
ge-0/0/19	Off
ge-0/0/20	Off
ge-0/0/21	Off
ge-0/0/22	Off
ge-0/0/23	Off
ge-0/0/24	Off
ge-0/0/25	Off
ge-0/0/26	Off
ge-0/0/27	Off
ge-0/0/28	Off
ge-0/0/29	Off
ge-0/0/30	Off
ge-0/0/31	Off
ge-0/0/32	Off
ge-0/0/33	Off
ge-0/0/34	Off
ge-0/0/35	Off
ge-0/0/36	Off
ge-0/0/37	Off
ge-0/0/38	Off
ge-0/0/39	Off
ge-0/0/40	On
ge-0/0/41	On
ge-0/0/42	On
ge-0/0/43	On
ge-0/0/44	On
ge-0/0/45	On
ge-0/0/46	On
ge-0/0/47	On
ge-16/0/0	On
ge-16/0/1	Off
ge-16/0/2	On
ge-16/0/3	Off
ge-16/0/4	On
ge-16/0/5	Off
ge-16/0/6	On
ge-16/0/7	Off
ge-16/0/8	Off
ge-16/0/9	Off

ge-16/0/10	Off
ge-16/0/11	Off
ge-16/0/12	Off
ge-16/0/13	On
ge-16/0/14	Off
ge-16/0/15	On
ge-16/0/16	Off
ge-16/0/17	On
ge-16/0/18	On
ge-16/0/19	On
ge-16/0/20	On
ge-16/0/21	Off
ge-16/0/22	On
ge-16/0/23	Off
ge-16/0/24	Off
ge-16/0/25	Off
ge-16/0/26	On
ge-16/0/27	Off
ge-16/0/28	Off
ge-16/0/29	Off
ge-16/0/30	On
ge-16/0/31	Off
ge-16/0/32	On
ge-16/0/33	On
ge-16/0/34	On
ge-16/0/35	Off
ge-16/0/36	On
ge-16/0/37	Off
ge-16/0/38	Off
ge-16/0/39	Off
ge-16/0/40	Off
ge-16/0/41	Off
ge-16/0/42	On
ge-16/0/43	Off
ge-16/0/44	Off
ge-16/0/45	Off
ge-16/0/46	Off
ge-16/0/47	Off
xe-19/0/0	Off
xe-19/0/1	On
xe-19/0/2	On
xe-19/0/3	On
xe-19/0/4	On
xe-19/0/5	On
ge-22/0/0	Off
ge-22/0/1	Off
ge-22/0/2	On
ge-22/0/3	Off
ge-22/0/4	On
ge-22/0/5	On
ge-22/0/6	On
ge-22/0/7	On
ge-22/0/8	Off
ge-22/0/9	Off
ge-22/0/10	Off
ge-22/0/11	Off
ge-22/0/12	Off
ge-22/0/13	Off
ge-22/0/14	Off
ge-22/0/15	Off
ge-22/0/16	On

```

ge-22/0/17    Off
ge-22/0/18    On
ge-22/0/19    Off
ge-22/0/20    On
ge-22/0/21    Off
ge-22/0/22    On
ge-22/0/23    Off
ge-22/0/24    On
ge-22/0/25    Off
ge-22/0/26    Off
ge-22/0/27    Off
ge-22/0/28    Off
ge-22/0/29    Off
ge-22/0/30    Off
ge-22/0/31    Off
ge-22/0/32    On
ge-22/0/33    Off
ge-22/0/34    On
ge-22/0/35    Off
ge-22/0/36    Off
ge-22/0/37    Off
ge-22/0/38    Off
ge-22/0/39    Off
ge-22/0/40    Off
ge-22/0/41    Off
ge-22/0/42    Off
ge-22/0/43    Off
ge-22/0/44    Off
ge-22/0/45    Off
ge-22/0/46    Off
ge-22/0/47    Off

```

show chassis lcd interconnect-device (QFabric Systems)

```

show chassis lcd interconnect-device IC-F1012
      Front Panel Module Information
      -----
      LCD screen:
      IC-F1012      3 Alarms active

LEDs status:
  Status LED: Green
  Power LED : Green
  Major Alarm LED: off
  Minor Alarm LED: Yellow
  Fan 0 LED : Green
  Fan 1 LED : Green
  Fan 2 LED : Green
  Fan 3 LED : Green
  Fan 4 LED : Green
  Fan 5 LED : Green
  Fan 6 LED : Green
  Fan 7 LED : Green
  Fan 8 LED : Green
  Fan 9 LED : Green
  PEM 0 LED : Green
  PEM 1 LED : Green
  PEM 2 LED : Green
  PEM 3 LED : off
  PEM 4 LED : off
  PEM 5 LED : off

```

LED info for: CB - 0

LEDs status:

Status LED: Green
Mastership LED: Green

Interface	STATUS LED	LINK/ACTIVITY LED
IC-F1012:pme0 :	Green	N/A
IC-F1012:pme1 :	Green	N/A
IC-F1012:pme2 :	off	N/A
IC-F1012:pme3 :	off	N/A

LED info for: CB - 1

LEDs status:

Status LED: Green
Mastership LED: Amber

Interface	STATUS LED	LINK/ACTIVITY LED
IC-F1012:pme0 :	Green	N/A
IC-F1012:pme1 :	Green	N/A
IC-F1012:pme2 :	off	N/A
IC-F1012:pme3 :	off	N/A

LED info for: FC 0 FPC - 0

LEDs status:

Status LED: Green

Interface	STATUS LED	LINK/ACTIVITY LED
IC-F1012:fte-0/0/0	Green	N/A
IC-F1012:fte-0/0/1	Green	N/A
IC-F1012:fte-0/0/2	Green	N/A
IC-F1012:fte-0/0/3	Green	N/A
IC-F1012:fte-0/0/4	Green	N/A

LED info for: FC 1 FPC - 1

LEDs status:

Status LED: Green

Interface	STATUS LED	LINK/ACTIVITY LED
IC-F1012:fte-1/0/0	Green	N/A
IC-F1012:fte-1/0/1	Green	N/A
IC-F1012:fte-1/0/2	Green	N/A
IC-F1012:fte-1/0/3	Green	N/A
IC-F1012:fte-1/0/4	Green	N/A

LED info for: RC 0 FPC - 8

LEDs status:

Status LED: Green

LED info for: RC 1 FPC - 9

LEDs status:

Status LED: Green

```

LED info for: RC 2 FPC - 10
-----
LEDs status:
  Status LED: Green

LED info for: RC 3 FPC - 11
-----
LEDs status:
  Status LED: Green

LED info for: RC 4 FPC - 12
-----
LEDs status:
  Status LED: Green

LED info for: RC 5 FPC - 13
-----
LEDs status:
  Status LED: Green

LED info for: RC 6 FPC - 14
-----
LEDs status:
  Status LED: Green

LED info for: RC 7 FPC - 15
-----
LEDs status:
  Status LED: Green

```

show chassis lcd node-device (QFabric Systems)

```

show chassis lcd node-device P3774-C
  Front panel contents for: P3774-C
  -----
  LCD screen:
  P3774-C

LEDs status:
  Status/Beacon LED: Yellow Blinking

```

Interface	STATUS LED	LINK/ACTIVITY LED
P3774-C:xe-0/0/6	Green	Green
P3774-C:xe-0/0/7	Green	Green
P3774-C:ge-0/0/10	Green	Green
P3774-C:ge-0/0/11	Green	Green Blinking
P3774-C:ge-0/0/12	Green	Off
P3774-C:ge-0/0/13	Green	Green Blinking
P3774-C:ge-0/0/20	Green	Green
P3774-C:ge-0/0/21	Green	Green
P3774-C:ge-0/0/22	Green	Green Blinking
P3774-C:ge-0/0/23	Green	Off
P3774-C:ge-0/0/30	Green	Green
P3774-C:ge-0/0/31	Green	Green
P3774-C:ge-0/0/32	Green	Green Blinking
P3774-C:ge-0/0/33	Green	Green Blinking
P3774-C:fte-0/1/0	Green	Green
P3774-C:fte-0/1/1	Green	Green Blinking
P3774-C:fte-0/1/2	Green	Green Blinking
P3774-C:fte-0/1/3	Green	Green

show chassis led

List of Syntax	show chassis led (EX Series) on page 947 show chassis led (QFX Series) on page 947 Syntax (OCX Series) on page 947
show chassis led (EX Series)	<pre>show chassis led <fpc-slot <fpc-slot-number>></pre>
show chassis led (QFX Series)	<pre>show chassis led <fpc-slot <fpc-slot-number>> interconnect-device name node-device name</pre>
Syntax (OCX Series)	<pre>show chassis led <fpc-slot <fpc-slot-number>></pre>
Release Information	<p>Command introduced in Junos OS Release 10.1 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Display the status and colors of the chassis LEDs on the front panel of the switch. A major alarm (red) indicates a critical error condition that requires immediate action. A minor alarm (yellow) indicates a noncritical condition that requires monitoring or maintenance. A minor alarm that is left unchecked might cause interruption in service or performance degradation.</p>
Options	<p>none—Display the status of the chassis status LEDs (for EX4200 switches configured as a Virtual Chassis, display the information for all Virtual Chassis members).</p> <p>fpc-slot <fpc-slot-number>—(Optional) (Not on EX2200 switches) Display the information as follows:</p> <ul style="list-style-type: none"> (EX3200, standalone EX4200, standalone QFX3500, EX4500, and OCX Series switches) Display the status of the chassis status LEDs for either an FPC slot with no fpc-slot-number value specified or for the FPC slot specified by fpc-slot 0. fpc-slot refers to the switch itself and 0 is the only valid value for fpc-slot-number. Output for these options is the same as for the none option. (EX4200 switches in a Virtual Chassis with two or more members) If no fpc-slot-number value is specified, display the status of the chassis status LEDs for all members of the Virtual Chassis. Output for this option is the same as for the none option. If the fpc-slot-number value is specified (it equals the member-id value), display the status of the chassis status LEDs for the specified member. (EX8200 switches)—Display the status of the chassis status LEDs for the line card in the line-card slot specified by the fpc-slot-number value. <p>interconnect-device name—</p> <p>— (QFabric systems only) (Optional) Display the status of the chassis and interface status LEDs for the Interconnect device.</p>

node-device *name*— (QFabric systems only) (Optional) Display the status of the chassis and interface status LEDs for the Node device.

Required Privilege Level view

Related Documentation

- *Chassis Status LEDs in EX2200 Switches*
- *Chassis Status LEDs in EX3200 Switches*
- *Chassis Status LEDs in EX4200 Switches*
- *Chassis Status LEDs in EX4500 Switches*
- *Chassis Status LEDs in an EX8200 Switch*
- *Chassis Status LEDs on a QFX3500 Device*
- *Chassis Status LEDs in the QFX3600 and QFX3600-I Device*
- *Management Port LEDs on a QFX3500 Device*
- *Management Port LEDs in the QFX3600 and QFX3600-I Device*
- *Chassis Status LEDs on a QFX3008-I Interconnect Device*
- *Control Board LEDs on a QFX3008-I Interconnect Device*

List of Sample Output

[show chassis led \(EX2200 Switch\) on page 951](#)
[show chassis led on page 952](#)
[show chassis led fpc-slot 0 on page 953](#)
[show chassis led \(EX Series\) on page 953](#)
[show chassis led node-device \(QFabric System Node Device\) on page 954](#)
[show chassis led interconnect-device \(QFabric System - QFX3600-I Interconnect Device\) on page 954](#)
[show chassis led interconnect-device \(QFabric System - QFX3008-I Interconnect Device\) on page 955](#)

Output Fields [Table 34 on page 590](#) lists the output fields for the **show chassis led** command. Output fields are listed in the approximate order in which they appear.

Table 45: show chassis led Output Fields

Field Name	Field Description
Front panel contents for slot	FPC slot number of the device whose content is being displayed. The number is always 0, except for EX4200 switches in a Virtual Chassis, where it is the member ID value.
Front panel contents (EX8200 Switches)	
Front Panel Module Information (QFabric system QFX3008-I Interconnect device)	On EX8200 switches, no slot number is displayed.
Front panel contents for (QFabric system Node devices and QFX3600-I Interconnect devices)	On QFabric system Node devices, the name of the Node device whose content is being displayed.

Table 45: show chassis led Output Fields (*continued*)

Field Name	Field Description
Alarms LED	<p>(EX Series switches only) Displays status of the ALM LED:</p> <ul style="list-style-type: none"> • Off—No alarm has been configured. • Green—No alarm has been triggered. • Red—Major alarm. • Yellow—Minor alarm
System LED	<p>(EX Series switches only) Displays status of the SYS LED:</p> <ul style="list-style-type: none"> • Off—Switch is powered off. • Green—Switch is operating normally. • Yellow—Switch is booting.
Master LED:	<p>Displays status of the MST LED (on EX3200, EX4200, and EX8200 switches):</p> <ul style="list-style-type: none"> • Green—On an EX4200 Virtual Chassis switch, indicates the switch is the master in the Virtual Chassis configuration. On other switches, indicates that the Routing Engine is operational. • Off <ul style="list-style-type: none"> • On an EX4200 Virtual Chassis switch, indicates that this switch is not the master in the Virtual Chassis configuration. • On EX3200, standalone EX4200, and EX8200 switches, indicates that the Routing Engine is not operational.
Mode LED:	<p>(EX Series switches only) On an EX2200 switch only, displays the currently selected port parameter of the Status LED:</p> <ul style="list-style-type: none"> • ADM—Administrative • SPD—Speed • DPX—Duplex • POE—Power over Ethernet
Status/Beacon LED	<p>(QFX Series and OCX Series) Displays the system status as indicated by the Status LED on the chassis. For more information, see:</p> <ul style="list-style-type: none"> • <i>Chassis Status LEDs on a QFX3500 Device</i> • <i>Chassis Status LEDs in the QFX3600 and QFX3600-I Device</i>
LINK/SPEED LED	<p>(QFX Series and OCX Series) Displays the link status and speed of a management port. For more information, see:</p> <ul style="list-style-type: none"> • <i>Management Port LEDs on a QFX3500 Device</i> • <i>Management Port LEDs in the QFX3600 and QFX3600-I Device</i>
ACTIVITY LED	<p>(QFX Series and OCX Series) Displays the activity status of a management port. For more information, see:</p> <ul style="list-style-type: none"> • <i>Management Port LEDs on a QFX3500 Device</i> • <i>Management Port LEDs in the QFX3600 and QFX3600-I Device</i>

Table 45: show chassis led Output Fields (*continued*)

Field Name	Field Description
STATUS LED	<p>(QFX Series and OCX Series) Displays the link status of an interface as indicated by the ST LED. For more information, see:</p> <ul style="list-style-type: none"> Control Board LEDs on a QFX3008-I Interconnect Device Access Port and Uplink Port LEDs on a QFX3500 Device Access Port and Uplink Port LEDs on a QFX3600 or QFX3600-I Device
LINK/ACTIVITY LED	<p>(QFX Series and OCX Series) Displays link activity or faults on an interface as indicated by the LA LED. For more information, see:</p> <ul style="list-style-type: none"> Access Port and Uplink Port LEDs on a QFX3500 Device Access Port and Uplink Port LEDs on a QFX3600 or QFX3600-I Device
Status LED	<p>(QFX3008-I Interconnect device only)</p> <ul style="list-style-type: none"> Displays the system status as indicated by the STATUS LED on the front panel of the chassis. For more information, see <i>Chassis Status LEDs on a QFX3008-I Interconnect Device</i>. Displays the status of a Control Board as indicated by the STATUS LED on the Control Board. For more information, see <i>Control Board LEDs on a QFX3008-I Interconnect Device</i>.
Power LED	<p>(QFX3008-I Interconnect device only) Displays the status of system power on the device. For more information, see <i>Chassis Status LEDs on a QFX3008-I Interconnect Device</i>.</p>
Major Alarm LED	<p>(QFX3008-I Interconnect device only) Displays whether a critical error condition that requires immediate action exists on the device. For more information, see <i>Chassis Status LEDs on a QFX3008-I Interconnect Device</i>.</p>
Minor Alarm LED	<p>(QFX3008-I Interconnect device only) Displays whether a noncritical condition that requires monitoring or maintenance exists on the device. For more information, see <i>Chassis Status LEDs on a QFX3008-I Interconnect Device</i>.</p>
Fan 0 LED	<p>(QFX3008-I Interconnect device only) Displays the status of fan trays on the device. For more information, see <i>Chassis Status LEDs on a QFX3008-I Interconnect Device</i>.</p>
Fan 1 LED	
Fan 2 LED	
Fan 3 LED	
Fan 4 LED	
Fan 5 LED	
Fan 6 LED	
Fan 7 LED	
Fan 8 LED	

Table 45: show chassis led Output Fields (*continued*)

Field Name	Field Description
PEM 0 LED	(QFX3008-I Interconnect device only) Displays the status of power supplies on the device. For more information, see <i>Chassis Status LEDs on a QFX3008-I Interconnect Device</i> .
PEM 1 LED	
PEM 2 LED	
PEM 3 LED	
PEM 4 LED	
LED info for	(QFX3008-I Interconnect device only) Displays the LED information for a Control Board.
Mastership LED	(QFX3008-I Interconnect device only) Displays status of the MASTER LED on a Control Board. For more information, see <i>Control Board LEDs on a QFX3008-I Interconnect Device</i> .
Interface	Names of the interfaces on the device.
LED (ADM/SPD/DPX/POE)	<p>(EX Series switches only) State of the currently selected port parameter of the Status LED for the interface. The Status LED port parameters are:</p> <p>NOTE: EX4500 and EX8200 switches do not have the POE port parameter.</p> <ul style="list-style-type: none"> • ADM—Administrative • SPD—Speed • DPX—Duplex • POE—Power over Ethernet

Sample Output

show chassis led (EX2200 Switch)

```

user@switch> show chassis led
Front panel contents for slot: 0
-----
LEDs status:
  Alarms LED: Amber
  System LED: Green
  Mode LED : Duplex
Interface    LED(ADM/SPD/DPX/POE)
-----
ge-0/0/0      Off
ge-0/0/1      Full Duplex
ge-0/0/2      Full Duplex
ge-0/0/3      Off
ge-0/0/4      Off
ge-0/0/5      Full Duplex
ge-0/0/6      Full Duplex
ge-0/0/7      Full Duplex
ge-0/0/8      Full Duplex
ge-0/0/9      Full Duplex
ge-0/0/10     Full Duplex
ge-0/0/11     Full Duplex

```

```

ge-0/0/12      Full Duplex
ge-0/0/13      Full Duplex
ge-0/0/14      Full Duplex
ge-0/0/15      Full Duplex
ge-0/0/16      Full Duplex
ge-0/0/17      Full Duplex
ge-0/0/18      Full Duplex
ge-0/0/19      Full Duplex
ge-0/0/20      Full Duplex
ge-0/0/21      Full Duplex
ge-0/0/22      Off
ge-0/0/23      Off
ge-0/0/24      Full Duplex
ge-0/0/25      Full Duplex
ge-0/0/26      Off
ge-0/0/27      Off
ge-0/0/28      Full Duplex
ge-0/0/29      Full Duplex

```

show chassis led

```

user@switch> show chassis led

Front panel contents for slot: 0
-----
LEDs status:
  Alarms LED: Off
  System LED: Green
  Master LED: Green
Interface      LED (ADM/SPD/DPX/POE)
-----
ge-0/0/0       Off
ge-0/0/1       Full Duplex
ge-0/0/2       Full Duplex
ge-0/0/3       Off
ge-0/0/4       Off
ge-0/0/5       Full Duplex
ge-0/0/6       Full Duplex
ge-0/0/7       Full Duplex
ge-0/0/8       Full Duplex
ge-0/0/9       Full Duplex
ge-0/0/10      Full Duplex
ge-0/0/11      Full Duplex
ge-0/0/12      Full Duplex
ge-0/0/13      Full Duplex
ge-0/0/14      Full Duplex
ge-0/0/15      Full Duplex
ge-0/0/16      Full Duplex
ge-0/0/17      Full Duplex
ge-0/0/18      Full Duplex
ge-0/0/19      Full Duplex
ge-0/0/20      Full Duplex
ge-0/0/21      Full Duplex
ge-0/0/22      Off
ge-0/0/23      Off
ge-0/0/24      Full Duplex
ge-0/0/25      Full Duplex
ge-0/0/26      Off
ge-0/0/27      Off
ge-0/0/28      Full Duplex
ge-0/0/29      Full Duplex

```

show chassis led fpc-slot 0

```

user@switch> show chassis led fpc-slot 0
Front panel contents for slot: 0
-----
LEDs status:
  Alarms LED: Red
  System LED: Green
  Master LED: Green
Interface      LED(ADM/SPD/DPX/POE)
-----
ge-0/0/0      Off
ge-0/0/1      Off
ge-0/0/2      Off
ge-0/0/3      Off
ge-0/0/4      Off
ge-0/0/5      Off
ge-0/0/6      Off
ge-0/0/7      Off
ge-0/0/8      Off
ge-0/0/9      Off
ge-0/0/10     Off
ge-0/0/11     Off
ge-0/0/12     Off
ge-0/0/13     Off
ge-0/0/14     Off
ge-0/0/15     Off
ge-0/0/16     Off
ge-0/0/17     Off
ge-0/0/18     Off
ge-0/0/19     Off
ge-0/0/20     Off
ge-0/0/21     Off
ge-0/0/22     Off
ge-0/0/23     Off

```

show chassis led (EX Series)

```

user@switch> show chassis led
Front panel contents for slot: 0
-----
LEDs status:
  Alarms LED: Amber
  Status LED: Green
  Mode LED : Duplex
Interface LED(ADM/SPD/DPX/POE)
-----
ge-0/0/0 Off
ge-0/0/1 Full Duplex
ge-0/0/2 Full Duplex
ge-0/0/3 Off
ge-0/0/4 Off
ge-0/0/5 Full Duplex
ge-0/0/6 Full Duplex
ge-0/0/7 Full Duplex
ge-0/0/8 Full Duplex
ge-0/0/9 Full Duplex
ge-0/0/10 Full Duplex
ge-0/0/11 Full Duplex
ge-0/0/12 Full Duplex
ge-0/0/13 Full Duplex

```

```

ge-0/0/14 Full Duplex
ge-0/0/15 Full Duplex
ge-0/0/16 Full Duplex
ge-0/0/17 Full Duplex
ge-0/0/18 Full Duplex
ge-0/0/19 Full Duplex
ge-0/0/20 Full Duplex
ge-0/0/21 Full Duplex
ge-0/0/22 Off
ge-0/0/23 Off
ge-0/0/24 Full Duplex
ge-0/0/25 Full Duplex
ge-0/0/26 Off
ge-0/0/27 Off
ge-0/0/28 Full Duplex
ge-0/0/29 Full Duplex

```

show chassis led node-device (QFabric System Node Device)

```

user@switch> show chassis led node-device node1
Front panel contents for: node1
LEDs status:
  Status/Beacon LED: Yellow Blinking

```

Interface	LINK/SPEED LED	ACTIVITY LED
node1:me5	Green	N/A
node1:me6	Green	N/A

Interface	STATUS LED	LINK/ACTIVITY LED
node1:xe-0/0/8	Green	Green
node1:ge-0/0/10	Green	Green
node1:ge-0/0/12	Green	Green
node1:ge-0/0/24	Green	Green
node1:ge-0/0/25	Green	Green
node1:ge-0/0/26	Green	Green
node1:ge-0/0/27	Green	Green
node1:ge-0/0/28	Green	Green
node1:ge-0/0/29	Green	Green
node1:ge-0/0/30	Green	Green
node1:ge-0/0/31	Green	Green
node1:ge-0/0/32	Green	Green
node1:ge-0/0/33	Green	Green
node1:ge-0/0/34	Green	Green
node1:ge-0/0/35	Green	Green
node1:ge-0/0/36	Green	Green
node1:ge-0/0/37	Green	Green
node1:ge-0/0/38	Green	Green
node1:ge-0/0/39	Green	Green
node1:fte-0/1/0	Green	Green Blinking
node1:fte-0/1/2	Green	Green Blinking

show chassis led interconnect-device (QFabric System - QFX3600-I Interconnect Device)

```

user@switch> show chassis led interconnect-device IC-EG0712
Front panel contents for: FPC 0
-----
LEDs status:
  Status/Beacon LED: Yellow Blinking

```


Interface	LINK/SPEED LED	ACTIVITY LED
IC-EG0712:me5	Green	N/A
IC-EG0712:me6	Green	N/A

Interface	STATUS LED	LINK/ACTIVITY LED
IC-EG0712:fte-0/1/0	Green	Green
IC-EG0712:fte-0/1/1	Green	Green Blinking
IC-EG0712:fte-0/1/2	Green	Green
IC-EG0712:fte-0/1/3	Green	Green Blinking
IC-EG0712:fte-0/1/4	Green	Green
IC-EG0712:fte-0/1/5	Green	Green Blinking
IC-EG0712:fte-0/1/6	Green	Green
IC-EG0712:fte-0/1/7	Green	Green
IC-EG0712:fte-0/1/8	Green	Green Blinking
IC-EG0712:fte-0/1/9	Green	Green Blinking
IC-EG0712:fte-0/1/10	Green	Green Blinking

show chassis led interconnect-device (QFabric System - QFX3008-I Interconnect Device)

```
user@switch> show chassis led interconnect-device IC-EG0712
Front Panel Module Information
```

LEDs status:

```
Status LED: Green
Power LED : Yellow Blinking
Major Alarm LED: Red
Minor Alarm LED: Yellow
Fan 0 LED : Green
Fan 1 LED : Green
Fan 2 LED : Green
Fan 3 LED : Green
Fan 4 LED : Green
Fan 5 LED : Green
Fan 6 LED : Green
Fan 7 LED : Green
Fan 8 LED : Green
Fan 9 LED : Green
PEM 0 LED : Green
PEM 1 LED : Green
PEM 2 LED : Green
PEM 3 LED : off
PEM 4 LED : Yellow Blinking
PEM 5 LED : off
```

```
LED info for: CB - 0
```

LEDs status:

```
Status LED: Green
Mastership LED: Green
```

Interface	STATUS LED	LINK/ACTIVITY LED
IC-F4899:pme0 :	Green	N/A
IC-F4899:pme1 :	off	N/A
IC-F4899:pme2 :	off	N/A
IC-F4899:pme3 :	off	N/A

```
LED info for: CB - 1
```

LEDs status:
 Status LED: Green
 Mastership LED: Amber

Interface	STATUS LED	LINK/ACTIVITY LED
IC-F4899:pme0 :	Green	N/A
IC-F4899:pme1 :	off	N/A
IC-F4899:pme2 :	off	N/A
IC-F4899:pme3 :	off	N/A

LED info for: FC 0 FPC - 0

LEDs status:
 Status LED: Green

Interface	STATUS LED	LINK/ACTIVITY LED
IC-F4899:fte-0/0/0	Green	N/A
IC-F4899:fte-0/0/1	Green	N/A
IC-F4899:fte-0/0/2	Green	N/A
IC-F4899:fte-0/0/3	Green	N/A
IC-F4899:fte-0/0/4	Green	N/A
IC-F4899:fte-0/0/5	Green	N/A
IC-F4899:fte-0/0/6	Green	N/A
IC-F4899:fte-0/0/7	Green	N/A
IC-F4899:fte-0/0/8	Green	N/A
IC-F4899:fte-0/0/9	Green	N/A
IC-F4899:fte-0/0/10	Green	N/A
IC-F4899:fte-0/0/11	Green	N/A
IC-F4899:fte-0/0/12	Green	N/A
IC-F4899:fte-0/0/13	Green	N/A
IC-F4899:fte-0/0/14	Green	N/A
IC-F4899:fte-0/0/15	Green	N/A

LED info for: FC 1 FPC - 1

LEDs status:
 Status LED: Green

Interface	STATUS LED	LINK/ACTIVITY LED
IC-F4899:fte-1/0/0	Green	N/A
IC-F4899:fte-1/0/1	Green	N/A

LED info for: RC 2 FPC - 10

LEDs status:
 Status LED: Green

LED info for: RC 3 FPC - 11

LEDs status:
 Status LED: Green

show chassis location

List of Syntax	Syntax on page 957 Syntax (TX Matrix Router) on page 957 Syntax (TX Matrix Plus Router) on page 957 Syntax (MX Series Router) on page 957 Syntax (QFX Series) on page 957 Syntax (OCX Series) on page 957
Syntax	show chassis location
Syntax (TX Matrix Router)	show chassis location <fpc interface (by-name <i>name</i> by-slot fpc number lcc number) lcc number scc>
Syntax (TX Matrix Plus Router)	show chassis location <fpc interface (by-name <i>name</i> by-slot fpc number lcc number) lcc number sfc number>
Syntax (MX Series Router)	show chassis location <all-members> <local> <member <i>member-id</i> >
Syntax (QFX Series)	show chassis location <interconnect-device <i>name</i> > <node-device <i>name</i> >
Syntax (OCX Series)	show chassis location
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the physical location of the chassis. This command can only be used on the master Routing Engine.
Options	<p>none—Display all information about the physical location of the chassis. On a TX Matrix router, display all information about the physical location of the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display all information about the physical location of the TX Matrix Plus router and its attached routers.</p> <p>all-members—(MX Series routers only) (Optional) Display the physical location of the chassis for all the member routers in the Virtual Chassis configuration.</p> <p>fpc—(TX Matrix router and TX Matrix Plus router only) (Optional) Display the physical location of all Flexible PIC Concentrators (FPCs).</p> <p>interconnect-device <i>name</i>—(QFabric systems only) (Optional) Display the physical location of the Interconnect device.</p>

interface by-name *name*—(TX Matrix and TX Matrix Plus routers only) (Optional) Display the physical location of a specified interface name. On a TX Matrix router, this option displays the FPC number and T640 router (line-card chassis) number associated with the specified interface. On a TX Matrix Plus router, this option displays the FPC number and router (line-card chassis) number associated with the specified interface.

interface by-slot *fpc number lcc number*—(TX Matrix and TX Matrix Plus router only) (Optional) On a TX Matrix router, display the global FPC number of an interface by specifying its local FPC number and T640 router (line-card chassis) number. On a TX Matrix Plus router, display the global FPC number of an interface by specifying its local FPC number and router (line-card chassis) number.

- The global FPC number is the FPC slot number when all the FPC slots in the routing matrix are considered: **0** through **31**. On TX Matrix Plus router with 3D SIBs, the value is **0** through **63**. The local FPC number is the FPC slot number on a particular T640 router.
- For **fpc**, replace *number* with a value from **0** through **7**.
- For **lcc**, replace *number* with a value from **0** through **7**.

lcc *number*—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display the physical location of a specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display the physical location of a specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display the physical location of the chassis for the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display the physical location of the chassis for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-device *name*—(QFabric systems only) (Optional) Display the physical location of the Node device.

scc—(TX Matrix routers only) (Optional) Display the physical location of the TX Matrix router (switch-card chassis).

sfc—(TX Matrix Plus routers only) (Optional) Display the physical location of the TX Matrix Plus router (or switch-fabric chassis).

Required Privilege Level view

Related Documentation • [Displaying Chassis Physical Locations for a Routing Matrix with a TX Matrix Plus Router](#)

List of Sample Output [show chassis location on page 959](#)
[show chassis location fpc \(TX Matrix Router\) on page 960](#)
[show chassis location interface by-slot \(TX Matrix Router\) on page 960](#)
[show chassis location fpc \(TX Matrix Plus Router\) on page 960](#)
[show chassis location interface by-slot \(TX Matrix Plus Router\) on page 960](#)
[show chassis location \(QFX Series and OCX Series\) on page 960](#)
[show chassis location \(QFabric Systems\) on page 960](#)

Output Fields [Table 46 on page 959](#) lists the output fields for the **show chassis location** command. Output fields are listed in the approximate order in which they appear.

Table 46: show chassis location Output Fields

Field Name	Field Description
country-code	Country code information.
postal-code	Postal code information.
Building	Building information.
Floor	Floor information.
Global FPC	Global FPC number. The FPC slot number, when all FPC slots in the routing matrix are considered. The range of values is 0 through 31. On TX Matrix Plus router with 3D SIBs the value is 0 through 63.
LATA	Local access transport area information.
LCC	Line-card chassis number. On a TX Matrix router, the number of a particular T640 router connected to the TX Matrix router. On a TX Matrix Plus router, the number of a particular router connected to the TX Matrix Plus router.
Local FPC	Local FPC number. On a TX Matrix router, the FPC slot number on a particular T640 router. On a TX Matrix Plus router, the FPC slot number on a particular router.

Sample Output

show chassis location

```
user@host> show chassis location
```

```
country-code: US
postal-code: 94404
Building: Building 2, Floor: 2
```

show chassis location fpc (TX Matrix Router)

```
user@host> show chassis location fpc
Global FPC      LCC      Local FPC
      17         2         1
      21         2         5
```

show chassis location interface by-slot (TX Matrix Router)

```
user@host> show chassis location interface by-slot fpc 1 lcc 1
Global FPC: 9
```

show chassis location fpc (TX Matrix Plus Router)

```
user@host> show chassis location fpc
Global FPC      LCC      Local FPC
      0         0         0
      1         0         1
```

show chassis location interface by-slot (TX Matrix Plus Router)

```
user@host> show chassis location interface by-slot fpc 2 lcc 1
Global FPC: 10
```

show chassis location (QFX Series and OCX Series)

```
user@switch> show chassis location
country-code: US
postal-code: 94404
Building: Building 2, Floor: 2
```

show chassis location (QFabric Systems)

```
user@switch> show chassis location interconnect-device interconnect1
country-code: US
postal-code: 94404
Building: Building 2, Floor: 2
```

show chassis mac-addresses

List of Syntax	Syntax on page 961 Syntax (TX Matrix Router) on page 961 Syntax (TX Matrix Plus Router) on page 961 Syntax (MX Series Router) on page 961 Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers) on page 961 Syntax (QFX Series) on page 961 Syntax (OCX Series) on page 961 Syntax (ACX Series Universal Access Routers) on page 961
Syntax	show chassis mac-addresses
Syntax (TX Matrix Router)	show chassis mac-addresses <lcc <i>number</i> scc>
Syntax (TX Matrix Plus Router)	show chassis mac-addresses <lcc <i>number</i> sfc <i>number</i> >
Syntax (MX Series Router)	show chassis mac-addresses <all-members> <local> <member <i>member-id</i> >
Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers)	show chassis mac-addresses
Syntax (QFX Series)	show chassis mac-addresses <interconnect-device <i>name</i> > <node-group <i>name</i> >
Syntax (OCX Series)	show chassis mac-addresses
Syntax (ACX Series Universal Access Routers)	show chassis mac-addresses
Release Information	<p>Command introduced before JUNOS Release 7.4.</p> <p>Command introduced in JUNOS Release 9.0 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in JUNOS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display the media access control (MAC) addresses for the router, switch chassis, or switch.

Options **none**—(TX Matrix, TX Matrix Plus routers, QFX Series, and OCX Series Switches) Display the MAC addresses for the router chassis or switch. On a TX Matrix router, display MAC addresses on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display MAC addresses on the TX Matrix Plus router and its attached routers.

all-members—(MX Series routers only) (Optional) Display the MAC addresses for all the member routers of the Virtual Chassis configuration.

interconnect-device *name*—(QFabric systems only) (Optional) Display the MAC addresses for the Interconnect device.

lcc *number*—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display MAC addresses for a specified T640 router (line-card chassis) that is connected to the TX Matrix Plus router. On a TX Matrix Plus router, display MAC addresses for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display the MAC addresses for the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display the MAC addresses for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-group *name*—(QFabric systems only) (Optional) Display the MAC addresses for the specified Node group.

scc—(TX Matrix routers only) (Optional) Display MAC addresses for the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Display MAC addresses for the TX Matrix Plus router (or switch-fabric chassis).

Required Privilege Level view

Related Documentation • *ACX2000 and ACX2100 Routers Hardware and CLI Terminology Mapping*

- List of Sample Output**
- [show chassis mac-addresses on page 963](#)
 - [show chassis mac-addresses \(MX104 Router\) on page 963](#)
 - [show chassis mac-addresses \(MX2010 Router\) on page 963](#)
 - [show chassis mac-addresses \(MX2020 Router\) on page 964](#)
 - [show chassis mac-addresses \(TX Matrix Router\) on page 964](#)
 - [show chassis mac-addresses \(TX Matrix Plus Router\) on page 964](#)
 - [show chassis mac-addresses \(QFX Series and OCX Series \) on page 965](#)
 - [show chassis mac-addresses interconnect-device \(QFabric Systems\) on page 965](#)
 - [show chassis mac-addresses node-group \(QFabric Systems\) on page 965](#)
 - [show chassis mac-addresses \(ACX2000 Universal Access Router\) on page 965](#)

Output Fields [Table 47 on page 963](#) lists the output fields for the **show chassis mac-addresses** command. Output fields are listed in the approximate order in which they appear.

Table 47: show chassis mac-addresses Output Fields

Field Name	Field Description
MAC address information	
Public base address	Base address of the MAC addresses allocated to this router or switch.
Public count	Number of allocated public addresses.
Private base address	Base address of the private MAC addresses allocated to this router or switch.
Private count	Number of allocated private addresses.

Sample Output

show chassis mac-addresses

```
user@host> show chassis mac-addresses
MAC address information
  Public base address  0:90:69:0:4:0
  Public count        1008
  Private base address 0:90:69:0:7:f0
  Private count        16
```

show chassis mac-addresses (MX104 Router)

```
user@host > show chassis mac-addresses
MAC address information:
  Public base address  b0:a8:6e:a1:e8:58
  Public count        2032
  Private base address b0:a8:6e:a1:f0:48
  Private count        16
```

show chassis mac-addresses (MX2010 Router)

```
user@host> show chassis mac-addresses
MAC address information:
  Public base address  64:87:88:04:50:00
  Public count        1984
```

```
Private base address  64:87:88:04:57:c0
Private count         64
```

show chassis mac-addresses (MX2020 Router)

```
user@host> show chassis mac-addresses
MAC address information:
  Public base address  2c:21:72:70:20:00
  Public count         4032
  Private base address 2c:21:72:70:2f:c0
  Private count        64
```

show chassis mac-addresses (TX Matrix Router)

```
user@host> show chassis mac-addresses
scc-re0:
-----
MAC address information:
  Public base address  00:05:85:9e:cc:00
  Public count         8064
  Private base address 00:05:85:9e:eb:80
  Private count        128
lcc0-re0:
-----
MAC address information:
  Public base address  00:05:85:68:98:00
  Public count         2032
  Private base address 00:05:85:68:9f:f0
  Private count        16
lcc2-re0:
-----
MAC address information:
  Public base address  00:05:85:68:78:00
  Public count         2032
  Private base address 00:05:85:68:7f:f0
  Private count        16
```

show chassis mac-addresses (TX Matrix Plus Router)

```
user@host> show chassis mac-addresses
sfc0-re0:
-----
MAC address information:
  Public base address  00:1d:b5:14:00:00
  Public count         65023
  Private base address 00:1d:b5:14:fd:ff
  Private count        512
lcc0-re0:
-----
MAC address information:
  Public base address  00:1f:12:7a:84:00
  Public count         2032
  Private base address 00:1f:12:7a:8b:f0
  Private count        16
lcc1-re0:
-----
MAC address information:
  Public base address  00:22:83:42:48:00
  Public count         2032
  Private base address 00:22:83:42:4f:f0
```

```

Private count          16

lcc2-re0:
-----
MAC address information:
Public base address    00:1f:12:c3:58:00
Public count           2032
Private base address    00:1f:12:c3:5f:f0
Private count           16

```

```

lcc3-re0:
-----
MAC address information:
Public base address    00:21:59:ef:b8:00
Public count           2032
Private base address    00:21:59:ef:bf:f0
Private count           16

```

show chassis mac-addresses (QFX Series and OCX Series)

```

user@switch> show chassis mac-addresses
MAC address information:
Public base address 02:00:08:00:00:00
Public count 512
Private base address 02:00:00:00:00:00
Private count 64

```

show chassis mac-addresses interconnect-device (QFabric Systems)

```

user@switch> show chassis mac-addresses interconnect-device interconnect1
MAC address information:
Public base address    00:1f:12:30:9c:c0
Public count           58
Private base address    00:1f:12:30:9c:fa
Private count           6

```

show chassis mac-addresses node-group (QFabric Systems)

```

user@switch> show chassis mac-addresses node-group NW-NG-0
MAC address information:
-----
RE:
FC MAC base    00:11:00:00:00:00
FC MAC count   2
VLAN MAC       00:11:00:00:00:09
EC6007
Base address    00:00:01:76:00:00
Count           64
EC6008
Base address    00:22:83:22:52:ae
Count           260

```

show chassis mac-addresses (ACX2000 Universal Access Router)

```

user@switch> show chassis mac-addresses
MAC address information:
Public base address    84:18:88:c0:2b:00
Public count           112
Private base address    84:18:88:c0:2b:70
Private count           16

```

show chassis pic

List of Syntax	Syntax on page 966 Syntax (TX Matrix and TX Matrix Plus Routers) on page 966 Syntax (MX Series Routers) on page 966 Syntax (MX104, MX2010 and MX2020 3D Universal Edge Routers) on page 966 Syntax (PTX Series Packet Transport Router) on page 966 Syntax (QFX Series) on page 966 Syntax (OCX Series) on page 966 Syntax (ACX Series Universal Access Routers) on page 966
Syntax	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
Syntax (TX Matrix and TX Matrix Plus Routers)	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i> <lcc <i>number</i>></code>
Syntax (MX Series Routers)	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i> <all-members> <local> <member <i>member-id</i>></code>
Syntax (MX104, MX2010 and MX2020 3D Universal Edge Routers)	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
Syntax (PTX Series Packet Transport Router)	<code>show chassis pic transport fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
Syntax (QFX Series)	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i> <interconnect-device <i>name</i> (fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i>)> <node-device <i>name</i> pic-slot <i>slot-number</i>></code>
Syntax (OCX Series)	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
Syntax (ACX Series Universal Access Routers)	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for QFX Series. Command introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers. Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers. Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers. Command introduced in Junos OS Release 13.2 for PTX Series Packet Transport Routers. Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display status information about the PIC installed in the specified Flexible PIC Concentrator (FPC) and PIC slot.

Options **fpc-slot *slot-number***—Display information about the PIC in this particular FPC slot:

- On a TX Matrix router, if you specify the number of the T640 router by using the **lcc *number*** option (the recommended method), replace ***slot-number*** with a value from 0 through 7. Otherwise, replace ***slot-number*** with a value from 0 through 31.

Likewise, on a TX Matrix Plus router, if you specify the number of the T1600 router by using the **lcc *number*** option (the recommended method), replace ***slot-number*** with a value from 0 through 7. Otherwise, replace ***slot-number*** with a value from 0 through 31. For example, the following commands have the same result:

```
user@host> show chassis pic fpc-slot 1 lcc 1 pic-slot 1
user@host> show chassis pic fpc-slot 9 pic-slot 1
```

- M120 routers only—Replace ***slot-number*** with a value from 0 through 5.
- MX80 routers only—Replace ***slot-number*** with a value from 0 through 1.
- MX104 routers only—Replace ***slot-number*** with a value from 0 through 2.
- MX240 routers only—Replace ***slot-number*** with a value from 0 through 2.
- MX480 routers only—Replace ***slot-number*** with a value from 0 through 5.
- MX960 routers only—Replace ***slot-number*** with a value from 0 through 11.
- MX2010 routers only—Replace ***slot-number*** with a value from 0 through 9.
- MX2020 routers only—Replace ***slot-number*** with a value from 0 through 19.
- Other routers—Replace ***slot-number*** with a value from 0 through 7.
- EX Series switches:
 - EX3200 switches and EX4200 standalone switches—Replace ***slot-number*** with 0.
 - EX4200 switches in a Virtual Chassis configuration—Replace ***slot-number*** with a value from 0 through 9 (switch's member ID).
 - EX8208 switches—Replace ***slot-number*** with a value from 0 through 7 (line card).
 - EX8216 switches—Replace ***slot-number*** with a value from 0 through 15 (line card).
- QFX Series:
 - QFX3500, QFX3600, QFX5100, and OCX Series standalone switches—Replace ***slot-number*** with 0. In the command output, FPC refers to a line card. The FPC number equals the slot number for the line card.
 - QFabric systems—Replace ***slot-number*** with any number between 0 and 15. In the command output, FPC refers to a line card. The FPC number equals the slot number for the line card.

all-members—(MX Series routers and EX Series switches only) (Optional) Display PIC information for all member routers in the Virtual Chassis configuration.

interconnect-device *name*—(QFabric systems only) (Optional) Display PIC information for a specified Interconnect device.

lcc *number*—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display PIC information for a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display PIC information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers and EX Series switches only) (Optional) Display PIC information for the local Virtual Chassis member.

member *member-id*—(MX Series routers and EX Series switches only) (Optional) Display PIC information for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-device *name*—(QFabric systems only) (Optional) Display PIC information for a specified Node device.

pic-slot *slot-number*—Display information about the PIC in this particular PIC slot. For routers, replace *slot-number* with a value from 0 through 3. For EX3200 and EX4200 switches, replace *slot-number* with 0 for built-in network interfaces and 1 for interfaces on uplink modules. For EX8208 and EX8216 switches, replace *slot-number* with 0. For the QFX3500, QFX3600, and OCX Series standalone switches, replace *slot-number* with 0.

transport—Display PIC information for optical transport network.

Required Privilege Level view

Related Documentation

- [request chassis pic on page 389](#)
- [show chassis hardware on page 758](#)
- [Configuring the PIC Type](#)

- *100-Gigabit Ethernet Type 4 PIC with CFP Overview*

List of Sample Output

[show chassis pic fpc-slot pic-slot on page 971](#)
[show chassis pic fpc-slot pic-slot \(PIC Offline\) on page 972](#)
[show chassis pic fpc-slot pic-slot \(FPC Offline\) on page 972](#)
[show chassis pic fpc-slot pic-slot \(FPC Not Present\) on page 972](#)
[show chassis pic fpc-slot pic-slot \(PIC Not Present\) on page 972](#)
[show chassis pic fpc-slot pic-slot \(M120 Router\) on page 972](#)
[show chassis pic fpc-slot pic-slot \(MX104 Router\) on page 972](#)
[show chassis pic fpc-slot pic-slot \(MX960 Router Bidirectional Optics\) on page 973](#)
[show chassis pic fpc-slot pic-slot \(MX480 Router with 100-Gigabit Ethernet MIC\) on page 973](#)
[show chassis pic fpc-slot pic-slot \(MX240, MX480, MX960 Routers with Application Services Modular Line Card\) on page 973](#)
[show chassis pic fpc-slot pic-slot \(MX960 Router with MPC5EQ\) on page 974](#)
[show chassis pic fpc-slot pic-slot \(MX480 Routers with MPC4E\) on page 974](#)
[show chassis pic fpc-slot pic-slot \(MX480 routers with OTN Interfaces\) on page 974](#)
[show chassis pic fpc-slot pic-slot \(MX2010 Routers with OTN Interfaces\) on page 974](#)
[show chassis pic fpc-slot pic-slot \(MX2010 Routers\) on page 975](#)
[show chassis pic fpc-slot pic-slot \(MX2020 Routers\) on page 975](#)
[show chassis pic fpc-slot pic-slot \(MX2020 Routers with MPC5EQ and MPC6E\) on page 975](#)
[show chassis pic fpc-slot pic-slot \(MX2020 Routers with MPC6E and OTN MIC\) on page 976](#)
[show chassis pic fpc-slot pic-slot \(MX2020 Routers with MPC4E\) on page 976](#)
[show chassis pic fpc-slot pic-slot \(T1600 Router with 100-Gigabit Ethernet PIC\) on page 976](#)
[show chassis pic fpc-slot pic-slot lcc \(TX Matrix Router\) on page 977](#)
[show chassis pic fpc-slot pic-slot lcc \(TX Matrix Plus Router\) on page 977](#)
[show chassis pic fpc-slot pic-slot \(Next-Generation SONET/SDH SFP\) on page 977](#)
[show chassis pic fpc-slot pic-slot \(12-Port T1/E1\) on page 977](#)
[show chassis pic fpc-slot pic-slot \(4x CHOC3 SONET CE SFP\) on page 978](#)
[show chassis pic fpc-slot pic-slot \(SONET/SDH OC3/STM1 \[Multi-Rate\] MIC with SFP\) on page 978](#)
[show chassis pic fpc-slot pic-slot \(8-port Channelized SONET/SDH OC3/STM1 \[Multi-Rate\] MIC with SFP\) on page 978](#)
[show chassis pic fpc-slot pic-slot \(4-port Channelized SONET/SDH OC3/STM1 \[Multi-Rate\] MIC with SFP\) on page 979](#)
[show chassis pic fpc-slot pic-slot \(1-port OC192/STM64 MIC with XFP\) on page 979](#)
[show chassis pic fpc-slot 1 pic-slot 2 \(8-port DS3/E3 MIC\) on page 979](#)
[show chassis pic fpc-slot pic-slot \(OTN\) on page 979](#)
[show chassis pic fpc-slot pic-slot \(QFX3500 Switch\) on page 979](#)
[show chassis pic fpc-slot pic-slot \(QFX5100 Switches and OCX Series \) on page 980](#)
[show chassis pic interconnect-device fpc-slot pic-slot \(QFabric Systems\) on page 980](#)
[show chassis pic node-device fpc-slot pic-slot \(QFabric System\) on page 980](#)
[show chassis pic fpc-slot pic-slot \(ACX2000 Universal Access Router\) on page 981](#)
[show chassis pic fpc-slot pic-slot \(MX Routers with Media Services Blade \[MSB\]\) on page 981](#)

[show chassis pic fpc slot PIC slot \(MX Routers with Media Services Blade \[MSB\]\) on page 981](#)

[show chassis pic transport fpc-slot pic-slot \(PTX Series Packet Transport Routers\) on page 981](#)

Output Fields [Table 48 on page 970](#) lists the output fields for the **show chassis pic** command. Output fields are listed in the approximate order in which they appear.

Table 48: show chassis pic Output Fields

Field Name	Field Description
Type	<p>PIC type.</p> <p>NOTE: On the 1-port OC192/STM64 MICs with the SDH framing mode, the type is displayed as MIC-3D-1STM64-XFP and with the SONET framing mode, the type is displayed as MIC-3D-1OC192-XFP. By default, the 1-port OC192/STM64 MICs displays the type as MIC-3D-1OC192-XFP.</p>
Account Layer2 Overhead	(MX Series routers) Indicates whether functionality to count the Layer 2 overhead bytes in the interface statistics at the PIC level is enabled or disabled.
ASIC type	Type of ASIC on the PIC.
State	<p>Status of the PIC. State is displayed only when a PIC is in the slot.</p> <ul style="list-style-type: none"> • Online— PIC is online and running. • Offline—PIC is powered down.
PIC version	PIC hardware version.
Uptime	How long the PIC has been online.
Package	(Multiservices PICs only) Services package supported: Layer-2 or Layer-3 .
Port Number	Port number for the PIC.
Cable Type	Type of cable connected to the port: LH , LX , or SX .
PIC Port Information (MX480 Router 100-Gigabit Ethernet CFP)	<p>Port-level information for the PIC.</p> <ul style="list-style-type: none"> • Port—Port number • Cable type—Type of optical transceiver installed. • Fiber type—Type of fiber. SM is single-mode. • Xcvr vendor—Transceiver vendor name. • Xcvr vendor part number—Transceiver vendor part number. • Wavelength—Wavelength of the transmitted signal. Uplinks and downlinks are always 1550 nm. There is a separate fiber for each direction

Table 48: show chassis pic Output Fields (*continued*)

Field Name	Field Description
PIC Port Information (MX960 Router Bidirectional Optics)	<p>Port-level information for the PIC.</p> <ul style="list-style-type: none"> • Port—Port number • Cable type—Type of small form-factor pluggable (SFP) optical transceiver installed. Uplink interfaces display -U. Down link interfaces display -D. • Fiber type—Type of fiber. SM is single-mode. • Xcvr vendor—Transceiver vendor name. • Xcvr vendor part number—Transceiver vendor part number. <ul style="list-style-type: none"> • BX10-10-km bidirectional optics. • BX40-40-km bidirectional optics. • SFP-LX-40-km SFP optics. • Wavelength—Wavelength of the transmitted signal. Uplinks are always 1310 nm. Downlinks are either 1490 nm or 1550 nm.
PIC Port Information (Next-Generation SONET/SDH SFP)	<p>Port-level information for the next-generation SONET/SDH SFP PIC.</p> <ul style="list-style-type: none"> • Port—Port number. • Cable type—Type of small form-factor pluggable (SFP) optical transceiver installed. • Fiber type—Type of fiber: SM (single-mode) or MM (multimode). • Xcvr vendor—Transceiver vendor name. • Xcvr vendor part number—Transceiver vendor part number. • Wavelength—Wavelength of the transmitted signal. Next-generation SONET/SDH SFPs use 1310 nm.
Pic port information (MX104 router)	<p>Port-level information for the PIC.</p> <ul style="list-style-type: none"> • Port—Port number • Cable type—Type of optical transceiver installed. • Fiber type—Type of fiber. SM is single-mode. • Xcvr vendor—Transceiver vendor name. • Xcvr vendor part number—Transceiver vendor part number. • Wavelength—Wavelength of the transmitted signal. • Xcvr Firmware—Firmware version of the transceiver.
Multirate Mode	Rate-selectability status for the MIC: Enabled or Disabled .
Channelization	Indicates whether channelization is enabled or disabled on the DS3/E3 MIC.

Sample Output

show chassis pic fpc-slot pic-slot

```

user@host> show chassis pic fpc-slot 2 pic-slot 0
PIC fpc slot 2 pic slot 0 information:
Type                               10x 1GE(LAN), 1000 BASE

```

```

ASIC type           H chip
State               Online
PIC version         1.1
Uptime              1 day, 50 minutes, 58 seconds
PIC Port Information:
Port      Cable      Xcvr      Xcvr Vendor
Number    Type        Vendor Name Part Number
0         GIGE 1000EX  FINISAR CORP.  FTRJ8519P1BNL-J3
1         GIGE 1000EX  FINISAR CORP.  FTRJ-8519-7D-JUN

```

show chassis pic fpc-slot pic-slot (PIC Offline)

```

user@host> show chassis pic fpc-slot 1 pic-slot 0
PIC fpc slot 1 pic slot 0 information:
State               Offline

```

show chassis pic fpc-slot pic-slot (FPC Offline)

```

user@host> show chassis pic fpc-slot 1 pic-slot 0
FPC 1 is not online

```

show chassis pic fpc-slot pic-slot (FPC Not Present)

```

user@host> show chassis pic fpc-slot 4 pic-slot 0
FPC slot 4 is empty

```

show chassis pic fpc-slot pic-slot (PIC Not Present)

```

user@host> show chassis pic fpc-slot 5 pic-slot 2
FPC 5, PIC 2 is empty

```

show chassis pic fpc-slot pic-slot (M120 Router)

```

user@host> show chassis pic fpc-slot 3 pic-slot 0
PC slot 3, PIC slot 0 information:
Type               2x G/E IQ, 1000 BASE
ASIC type          IQ GE 2 VLAN-TAG FPGA
State              Online
PIC version         1.16
Uptime              3 hours, 3 minutes

PIC Port Information:
Port      Cable      Xcvr      Xcvr Vendor
Number    Type        Vendor Name Part Number
0         GIGE 1000SX  FINISAR CORP.  FTRJ8519P1BNL-J3
1         GIGE 1000SX  FINISAR CORP.  FTRJ-8519-7D-JUN

```

show chassis pic fpc-slot pic-slot (MX104 Router)

```

user@host> show chassis pic fpc-slot 1 pic-slot 1
FPC slot 1, PIC slot 1 information:
Type               10x 1GE(LAN) -E SFP
State              Online
PIC version         1.1
Uptime              1 hour, 30 minutes, 59 seconds

PIC port information:
Fiber              Xcvr vendor      Wave-      Xcvr
Port Cable type    type Xcvr vendor      part number length
Firmware
3    GIGE 1000T    n/a  Methode Elec.    SP7041-M1-JN    n/a    0.0

```

6	GIGE 1000LX10	SM	FINISAR CORP.	FTLF1318P2BTL-J1	1310 nm	0.0
8	GIGE 1000T	n/a	Methode Elec.	SP7041-M1-JN	n/a	0.0
9	GIGE 1000T	n/a	Methode Elec.	SP7041-M1-JN	n/a	0.0

show chassis pic fpc-slot pic-slot (MX960 Router Bidirectional Optics)

```

user@host> show chassis pic fpc-slot 4 pic-slot 1
FPC slot 4, PIC slot 1 information:
  Type                10x 1GE(LAN)
  Account Layer2 Overhead  Enabled
  State                Online
  PIC version          0.0
  Uptime               18 days, 5 hours, 41 minutes, 54 seconds

PIC port information:

```

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
0	SFP-1000BASE-BX10-D	SM	SumitomoElectric	SBP6H44-J3-BW-49	1490 nm
1	SFP-1000BASE-BX10-D	SM	SumitomoElectric	SBP6H44-J3-BW-49	1490 nm
2	SFP-1000BASE-BX10-D	SM	SumitomoElectric	SBP6H44-J3-BW-49	1490 nm
3	SFP-1000BASE-BX10-D	SM	OCF	TRXBG1LXDBVM2-JW	1490 nm
4	SFP-1000BASE-BX10-D	SM	OCF	TRXBG1LXDBVM2-JW	1490 nm
5	SFP-1000BASE-BX10-U	SM	SumitomoElectric	SBP6H44-J3-BW-31	1310 nm
6	SFP-1000BASE-BX10-U	SM	SumitomoElectric	SBP6H44-J3-BW-31	1310 nm
7	SFP-1000BASE-BX10-U	SM	OCF	TRXBG1LXDBBMH-J1	1310 nm
8	SFP-1000BASE-BX10-U	SM	OCF	TRXBG1LXDBBMH-J1	1310 nm
9	SFP-1000BASE-BX10-U	SM	SumitomoElectric	SBP6H44-J3-BW-31	1310 nm

show chassis pic fpc-slot pic-slot (MX480 Router with 100-Gigabit Ethernet MIC)

```

user@host> show chassis pic fpc-slot 1 pic-slot 2
FPC slot 1, PIC slot 2 information:
  Type                1X100GE CFP
  State                Online
  PIC version          2.10
  Uptime               4 minutes, 48 seconds

PIC port information:
  Fiber

```

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
0	100GBASE LR4	SM	FINISAR CORP.	FTLC1181RDN3-J3	1310 nm

```

  Xcvr vendor
  firmware version
  1.8

```

show chassis pic fpc-slot pic-slot (MX240, MX480, MX960 Routers with Application Services Modular Line Card)

```

user@host> show chassis pic fpc-slot 1 pic-slot 2
FPC slot 1, PIC slot 2 information:
  Type                AS-MXC
  State                Online
  PIC version          1.0
  Uptime               11 hours, 18 minutes, 3 seconds

```

show chassis pic fpc-slot pic-slot (MX960 Router with MPC5EQ)

```

user@host> show chassis pic fpc-slot 0 pic-slot 3
FPC slot 0, PIC slot 3 information:
  Type                1X100GE CFP2 OTN
  State                Online
  PIC version          0.0
  Uptime               1 hour, 22 minutes, 42 seconds

PIC port information:

```

	Fiber	Xcvr vendor	Wave-	Xcvr
Port Cable type	type	Xcvr vendor	part number	length
Firmware				
0	10GBASE LR4	n/a	Oclaro Inc.	TRB5E20FNF-LF150 1309 nm 1.0

show chassis pic fpc-slot pic-slot (MX480 Routers with MPC4E)

```

user@host> show chassis pic fpc-slot 3 pic-slot 0
FPC slot 3, PIC slot 0 information:
  Type                4x10GE SFPP
  State                Online
  PIC version          0.0
  Uptime               41 seconds

PIC port information:

```

	Fiber	Xcvr vendor	Wave-	Xcvr
Port Cable type	type	Xcvr vendor	part number	length
Firmware				
0	10GBASE SR	MM	OPNEXT, INC.	TRS2001EM-0014 850 nm 0.0
1	10GBASE SR	MM	OPNEXT, INC.	TRS2001EM-0014 850 nm 0.0

show chassis pic fpc-slot pic-slot (MX480 routers with OTN Interfaces)

```

user@host> show chassis pci fpc-slot 4 pic-slot 0
FPC slot 4, PIC slot 0 information:
  Type                12X10GE SFPP OTN
  State                Online
  PIC version          0.0
  Uptime               5 hours, 28 minutes, 23 seconds

PIC port information:

```

	Fiber	Xcvr vendor	Wave-	Xcvr
Port Cable type	type	Xcvr vendor	part number	length
Firmware				
0	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1 850 nm 0.0
1	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1 850 nm 0.0
2	10GBASE SR	MM	OPNEXT, INC.	TRS2001EM-0014 850 nm 0.0

show chassis pic fpc-slot pic-slot (MX2010 Routers with OTN Interfaces)

```

user@host> show chassis pic fpc-slot 9 pic-slot 0

```

```
FPC slot 9, PIC slot 0 information:
Type                2X100GE CFP2 OTN
State               Online
PIC version         1.9
Uptime              3 hours, 56 minutes, 16 seconds
```

```
PIC port information:

Fiber                Xcvr vendor      Wave-   Xcvr
Port Cable type      type  Xcvr vendor      part number   length
Firmware
0    100GBASE LR4-D   SM    FUJITSU          FIM37300/222  1310 nm  1.3
1    100GBASE SR10    MM    AVAGO            AFBR-8420Z    n/a      1.0
```

show chassis pic fpc-slot pic-slot (MX2010 Routers)

```
user@host> show chassis pic fpc-slot 9 pic-slot 3
FPC slot 9, PIC slot 3 information:
Type                1X100GE CFP
Account Layer2 Overhead Enabled
State               Online
PIC version         0.0
Uptime              14 hours, 51 seconds
```

show chassis pic fpc-slot pic-slot (MX2020 Routers)

```
user@host> show chassis pic fpc-slot 19 pic-slot 3
FPC slot 19, PIC slot 3 information:
Type                4x 10GE(LAN) SFP+
Account Layer2 Overhead Enabled
State               Online
PIC version         0.0
Uptime              1 day, 11 hours, 26 minutes, 36 seconds

PIC port information:

Fiber                Xcvr vendor      Wave-   Xcvr
Port Cable type      type  Xcvr vendor      part number   length
Firmware
0    10GBASE SR       MM    SumitomoElectric SPP5200SR-J6-M 850 nm  0.0
1    10GBASE SR       MM    SumitomoElectric SPP5200SR-J6-M 850 nm  0.0
2    10GBASE SR       MM    SumitomoElectric SPP5200SR-J6-M 850 nm  0.0
3    10GBASE SR       MM    SumitomoElectric SPP5200SR-J6-M 850 nm  0.0
```

show chassis pic fpc-slot pic-slot (MX2020 Routers with MPC5EQ and MPC6E)

```
user@host> show chassis pic fpc-slot 18 pic-slot 2
FPC slot 18, PIC slot 2 information:
Type                3X40GE QSFP
State               Online
PIC version         0.0
Uptime              6 minutes, 31 seconds

PIC port information:

Fiber                Xcvr vendor      Wave-   Xcvr
Port Cable type      type  Xcvr vendor      part number   length
```

```

Firmware
0   40GBASE SR4      MM   AVAGO          AFBR-79E4Z-D-JU2  850 nm  0.0
1   40GBASE SR4      MM   AVAGO          AFBR-79E4Z-D-JU2  850 nm  0.0
2   40GBASE SR4      MM   AVAGO          AFBR-79E4Z-D-JU2  850 nm  0.0

```

show chassis pic fpc-slot pic-slot (MX2020 Routers with MPC6E and OTN MIC)

```

user@host> show chassis pic fpc-slot 3 pic-slot 0
FPC slot 0, PIC slot 1 information:
  Type                24X10GE SFPP OTN
  State                Online
  PIC version          1.1
  Uptime               1 hour, 33 minutes, 59 seconds

PIC port information:

```

		Fiber	Xcvr vendor	Wave-	Xcvr
Port	Cable type	type	Xcvr vendor	part number	length
Firmware					
7	10GBASE SR	MM	SumitomoElectric	SPP5200SR-J6-M	850 nm 0.0
9	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1	850 nm 0.0
12	10GBASE LR	SM	FINISAR CORP.	FTLX1472M3BNL-J3	1310 nm 0.0
20	10GBASE ZR	SM	FINISAR CORP.	FTLX1871M3BNL-J3	1550 nm 0.0
21	10GBASE ER	SM	FINISAR CORP.	FTLX1671D3BTL-J4	1550 nm 0.0
22	10GBASE LR	SM	SOURCEPHOTONICS	SPP10SLREDFCJNP	1310 nm 0.0
23	10GBASE LR	SM	FINISAR CORP.	FTLX1471D3BNL-J1	1310 nm 0.0

show chassis pic fpc-slot pic-slot (MX2020 Routers with MPC4E)

```

user@host> show chassis pic fpc-slot 14 pic-slot 0
FPC slot 14, PIC slot 2 information:
  Type                4x10GE SFPP
  State                Online
  PIC version          0.0
  Uptime               1 day, 14 hours, 49 minutes, 9 seconds

PIC port information:

```

		Fiber	Xcvr vendor	Wave-	Xcvr
Port	Cable type	type	Xcvr vendor	part number	length
Firmware					
0	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3	850 nm 0.0
1	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3	850 nm 0.0
3	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3	850 nm 0.0

show chassis pic fpc-slot pic-slot (T1600 Router with 100-Gigabit Ethernet PIC)

```

user@host> run show chassis pic fpc-slot 3 pic-slot 1
FPC slot 3, PIC slot 1 information:
  Type                100GE SLOT1

```

```

ASIC type           Brooklyn 100GE FPGA
State               Online
PIC version         1.3
Uptime              10 minutes, 44 seconds

```

PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
0	100GBASE LR4	SM	Opnext Inc.	TRC5E20ENFSF000F	1310 nm

show chassis pic fpc-slot pic-slot lcc (TX Matrix Router)

```

user@host> show chassis pic fpc-slot 1 pic-slot 1 lcc 0
lcc0-re0:

```

PIC fpc slot 1 pic slot 1 information:

```

Type               4x OC-3 SONET, SMIR
ASIC type          D chip
State              Online
PIC version         1.2
Uptime              5 days, 2 hours, 12 minutes, 8 seconds

```

show chassis pic fpc-slot pic-slot lcc (TX Matrix Plus Router)

```

user@host> show chassis pic pic-slot 0 fpc-slot 8
lcc0-re0:

```

FPC slot 8, PIC slot 0 information:

```

Type               1x 10GE(LAN/WAN)
State              Online
Uptime              2 hours, 46 minutes, 23 seconds

```

PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	part number	Wavelength
0	10GBASE ZR	SM	Opnext Inc.	TRF7061BN-LF150	1550 nm
0	10GBASE ZR	SM	FINISAR CORP.	FTRX-1811-3-J2	1550 nm

show chassis pic fpc-slot pic-slot (Next-Generation SONET/SDH SFP)

```

user@host> show chassis pic fpc-slot 4 pic-slot 0
FPC slot 4, PIC slot 0 information:

```

```

Type               4x OC-3 1x OC-12 SFP
ASIC type          D FPGA
State              Online
PIC version         1.3
Uptime              1 day, 50 minutes, 4 seconds

```

PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
0	OC48 short reach	SM	FINISAR CORP.	FTRJ1321P18TL-J2	1310 nm
1	OC3 short reach	MM	OCP	TRPA03MM3BAS-JE	1310 nm
2	OC3 short reach	MM	OCP	TRXA03MM3BAS-JW	1310 nm
3	OC12 inter reach	SM	FINISAR CORP.	FTLF1322P18TR	1310 nm

show chassis pic fpc-slot pic-slot (12-Port T1/E1)

```

user@host> show chassis pic fpc-slot 0 pic-slot 3

```

FPC slot 0, PIC slot 3 information:

```

Type                12x T1/E1 CE
State               Online
PIC version         1.1
CPU load average    1 percent
Interrupt load average 0 percent
Total DRAM size     128 MB
Memory buffer utilization 100 percent
Memory heap utilization 4 percent
Uptime              1 day, 22 hours, 28 minutes, 12 seconds
Internal Clock Synchronization Normal

```

show chassis pic fpc-slot pic-slot (4x CHOC3 SONET CE SFP)

user@host> show chassis pic fpc-slot 0 pic-slot 1

FPC slot 0, PIC slot 1 information:

```

Type                4x CHOC3 SONET CE SFP
State               Online
PIC version         1.3
CPU load average    1 percent
Interrupt load average 0 percent
Total DRAM size     128 MB
Memory buffer utilization 99 percent
Memory heap utilization 4 percent
Uptime              1 day, 22 hours, 55 minutes, 37 seconds
Internal Clock Synchronization Normal

```

PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
0	OC3 short reach	MM	AVAGO	HFBR-57E0P-JU2	n/a
1	OC3 short reach	MM	AVAGO	HFBR-57E0P-JU2	n/a
3	OC3 long reach	SM	OPNEXT INC	TRF5456AVLB314	1310 nm

show chassis pic fpc-slot pic-slot (SONET/SDH OC3/STM1 [Multi-Rate] MIC with SFP)

user@host> show chassis pic fpc-slot 0 pic-slot 0

FPC slot 0, PIC slot 0 information:

```

Type                MIC-3D-80C30C12-40C48
State               Online
PIC version         1.8
Uptime              3 days, 22 hours, 3 minutes, 50 seconds

```

PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
1	OC12 inter reach	SM	FINISAR CORP	FTRJ1322P1BTR-J3	1310 nm
7	OC12 inter reach	SM	FINISAR CORP	FTRJ1322P1BTR-J3	1310 nm

Multirate Mode Enabled

show chassis pic fpc-slot pic-slot (8-port Channelized SONET/SDH OC3/STM1 [Multi-Rate] MIC with SFP)

user@host> show chassis pic fpc-slot 3 pic-slot 0

FPC slot 3, PIC slot 0 information:

```

Type                MIC-3D-8CHOC3-4CHOC12
State               Online
PIC version         1.9
Uptime              1 hour, 21 minutes, 24 seconds

```

PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
------	------------	------------	-------------	-------------------------	------------

0	OC12 short reach	SM	FINISAR CORP.	FTRJ1322P1BTR-J3	1310 nm
1	OC12 short reach	SM	FINISAR CORP.	FTRJ1322P1BTR-J3	1310 nm
2	OC12 inter reach	SM	FINISAR CORP.	FTRJ1322P1BTR-J2	1310 nm
4	OC12 short reach	SM	FINISAR CORP.	FTRJ1322P1BTR-J3	1310 nm
5	OC12 short reach	SM	FINISAR CORP.	FTRJ1322P1BTR-J3	1310 nm
6	OC12 short reach	SM	FINISAR CORP.	FTRJ1322P1BTR-J3	1310 nm
7	OC12 short reach	SM	FINISAR CORP.	FTRJ1322P1BTR-J3	1310 nm

show chassis pic fpc-slot pic-slot (4-port Channelized SONET/SDH OC3/STM1 [Multi-Rate] MIC with SFP)

```
user@host> show chassis pic fpc-slot 5 pic-slot 0
```

FPC slot 5, PIC slot 0 information:

Type	MIC-3D-4CHOC3-2CHOC12
State	Online
PIC version	1.9
Uptime	1 hour, 21 minutes

PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
1	OC12 inter reach	SM	FINISAR CORP.	FTRJ1322P1BTR-J3	1310 nm
2	OC12 inter reach	SM	FINISAR CORP.	FTRJ1322P1BTR-J3	1310 nm
3	OC12 short reach	SM	FINISAR CORP.	FTRJ1322P1BTR-J3	1310 nm

show chassis pic fpc-slot pic-slot (1-port OC192/STM64 MIC with XFP)

```
user@host> show chassis pic fpc-slot 1 pic-slot 0
```

FPC slot 1, PIC slot 0 information:

Type	MIC-3D-10C192-XFP
State	Online
PIC version	1.2
Uptime	1 day, 11 hours, 4 minutes, 6 seconds

PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
0	OC192 short reach	n/a	FINISAR CORP.	FTLX1412M3BCL-J3	1310 nm

show chassis pic fpc-slot 1 pic-slot 2 (8-port DS3/E3 MIC)

```
user@host> show chassis pic fpc-slot 1 pic-slot 2
```

FPC slot 1, PIC slot 2 information:

Type	MIC-3D-8DS3-E3
State	Online
PIC version	1.10
Uptime	4 days, 1 hour, 29 minutes, 19 seconds
Channelization Mode	Disabled

show chassis pic fpc-slot pic-slot (OTN)

```
user@host> show chassis pic fpc-slot 5 pic-slot 0
```

PIC fpc slot 5 pic slot 0 information:

Type	1x10GE(LAN),OTN
ASIC type	H chip
State	Online
PIC version	1.0
Uptime	5 minutes, 50 seconds

show chassis pic fpc-slot pic-slot (QFX3500 Switch)

```
user@switch> show chassis pic fpc-slot 0 pic-slot 0
```

```
FPC slot 0, PIC slot 0 information:
Type 48x 10G-SFP+ Builtin
State Online
Uptime 3 days, 3 hours, 5 minutes, 20 seconds
```

show chassis pic fpc-slot pic-slot (QFX5100 Switches and OCX Series)

```
user@switch> show chassis pic fpc-slot 0 pic-slot 0
FPC slot 0, PIC slot 0 information:
Type                               Unknown Builtin
State                               Online
Uptime                             1 day, 17 hours, 5 minutes, 9 seconds
```

show chassis pic interconnect-device fpc-slot pic-slot (QFabric Systems)

```
user@switch> show chassis pic interconnect-device interconnect1 fpc-slot 9 pic-slot 0
FPC slot 9, PIC slot 0 information:
Type                               16x 40G-GE Builtin
State                               Online
Uptime                             2 hours, 47 minutes, 40 seconds
```

show chassis pic node-device fpc-slot pic-slot (QFabric System)

```
user@switch> show chassis pic node-device node1 pic-slot 0
FPC slot node1, PIC slot 0 information:
Type                               48x 10G-SFP+ Builtin
State                               Online
Uptime                             2 hours, 52 minutes, 37 seconds
```

PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
0	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
1	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
2	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
3	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
4	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
5	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
6	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
7	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
8	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
9	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
10	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
11	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
12	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
13	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
14	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
15	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
16	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
17	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
18	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
19	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
20	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
21	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
22	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
23	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
24	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
25	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
26	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
27	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
28	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
29	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm

30	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
31	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
32	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
33	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
34	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
35	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
36	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
37	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
38	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
39	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
40	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
41	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
42	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
43	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
44	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
45	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
46	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
47	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm

show chassis pic fpc-slot pic-slot (ACX2000 Universal Access Router)

```

user@host> show chassis pic fpc-slot 0 pic-slot 1
FPC slot 0, PIC slot 1 information:
  Type                8x 1GE(LAN) RJ45 Builtin
  State                Online
  Uptime              6 days, 2 hours, 51 minutes, 11 seconds

```

show chassis pic fpc-slot pic-slot (MX Routers with Media Services Blade [MSB])

```

user@switch> show chassis pic fpc-slot 1 pic-slot 0
FPC slot 1, PIC slot 0 information:
  Type                AS-MSC
  State                Online
  PIC version          1.6
  Uptime              11 hours, 17 minutes, 56 seconds

```

show chassis pic FPC slot PIC slot (MX Routers with Media Services Blade [MSB])

```

user@switch> show chassis pic fpc-slot 1 pic-slot 2
  Type                AS-MXC
  State                Online
  PIC version          1.0
  Uptime              11 hours, 18 minutes, 3 seconds

```

show chassis pic transport fpc-slot pic-slot (PTX Series Packet Transport Routers)

```

user@host> show chassis pic transport fpc-slot 2 pic-slot 0
Administrative State:  In Service
Operational State:    Normal

```

show chassis routing-engine

List of Syntax [Syntax on page 982](#)
 [Syntax \(EX Series Switches\) on page 982](#)
 [Syntax \(T Series routers\) on page 982](#)
 [Syntax \(TX Matrix Routers\) on page 982](#)
 [Syntax \(TX Matrix Plus Routers\) on page 982](#)
 [Syntax \(QFX Series\) on page 982](#)
 [Syntax \(OCX Series\) on page 982](#)
 [Syntax \(MX Series Routers\) on page 982](#)
 [Syntax \(MX2010 3D Universal Edge Routers\) on page 982](#)
 [Syntax \(MX2020 3D Universal Edge Routers\) on page 982](#)
 [Syntax \(MX104 3D Universal Edge Routers\) on page 983](#)
 [Syntax \(ACX Series Universal Access Routers\) on page 983](#)

Syntax show chassis routing-engine
 <bios | *slot*>

Syntax (EX Series Switches) show chassis routing-engine
 <*slot*>

Syntax (T Series routers) show chassis routing-engine
 <bios | *slot*>

Syntax (TX Matrix Routers) show chassis routing-engine
 <bios | *slot*>
 <lcc *number* | scc>

Syntax (TX Matrix Plus Routers) show chassis routing-engine
 <bios | *slot*>
 <lcc *number* | sfc *number*>

Syntax (QFX Series) show chassis routing-engine
 <interconnect-device *name*>
 <node-device *name*>

Syntax (OCX Series) show chassis routing-engine

Syntax (MX Series Routers) show chassis routing-engine
 <bios | *slot*>
 <all-members>
 <local>
 <member *member-id*>

Syntax (MX2010 3D Universal Edge Routers) show chassis routing-engine
 <bios | *slot*>

Syntax (MX2020 3D Universal Edge Routers) show chassis routing-engine
 <bios | *slot*>

Syntax (MX104 3D Universal Edge Routers)	show chassis routing-engine
Syntax (ACX Series Universal Access Routers)	show chassis routing-engine
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release in 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display the status of the Routing Engine.
Options	<p>none—Display information about one or more Routing Engines. On a TX Matrix router, display information about all Routing Engines on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display information about all Routing Engines on the TX Matrix Plus router and its attached routers.</p> <p>all-members—(MX Series routers only) (Optional) Display Routing Engine information for all members of the Virtual Chassis configuration.</p> <p>bios—(Optional) Display the (BIOS) firmware version.</p> <p>interconnect-device <i>number</i>—(QFabric systems only) (Optional) Display Routing Engine information for a specified Interconnect device.</p> <p>lcc <i>number</i>—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display Routing Engine information for a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display Routing Engine information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.</p> <p>Replace <i>number</i> with the following values depending on the LCC configuration:</p> <ul style="list-style-type: none"> • 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix. • 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix. • 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix. • 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display Routing Engine information for the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display Routing Engine information for the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

node-device *number*—(QFabric systems only) (Optional) Display Routing Engine information for a specified Node device.

scc—(TX Matrix routers only) (Optional) Display Routing Engine information for the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Display Routing Engine information for the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

slot—(Systems with multiple Routing Engines) (Optional) Display information for an individual Routing Engine. Replace *slot* with 0 or 1. For QFX3500 switches, there is only one Routing Engine, so you do not need to specify the slot number.

Required Privilege Level

view

Related Documentation

- [request chassis routing-engine master on page 393](#)
- *Configuring Routing Engine Redundancy*
- *Switching the Global Master and Backup Roles in a Virtual Chassis Configuration*

List of Sample Output

[show chassis routing-engine \(M5 Router\) on page 986](#)
[show chassis routing-engine \(M10 Router\) on page 987](#)
[show chassis routing-engine \(M20 Router\) on page 987](#)
[show chassis routing-engine \(M40 Router\) on page 988](#)
[show chassis routing-engine \(M120 Router\) on page 988](#)
[show chassis routing-engine \(M160 Router\) on page 989](#)
[show chassis routing-engine \(MX104 Router\) on page 989](#)
[show chassis routing-engine \(MX240 Router\) on page 990](#)
[show chassis routing-engine \(MX480 Router\) on page 991](#)
[show chassis routing-engine \(MX960 Router\) on page 991](#)
[show chassis routing-engine \(MX2010 Router\) on page 991](#)
[show chassis routing-engine \(MX2020 Router\) on page 992](#)
[show chassis routing-engine \(T320 router\) on page 993](#)
[show chassis routing-engine \(T640 router\) on page 994](#)
[show chassis routing-engine \(T1600 router\) on page 994](#)
[show chassis routing-engine \(T4000 router\) on page 995](#)
[show chassis routing-engine \(TX Matrix Router\) on page 996](#)
[show chassis routing-engine lcc \(TX Matrix Router\) on page 997](#)
[show chassis routing-engine bios \(TX Matrix Router\) on page 997](#)
[show chassis routing-engine \(TX Matrix Plus Router\) on page 998](#)
[show chassis routing-engine lcc \(TX Matrix Plus Router\) on page 999](#)
[show chassis routing-engine bios \(TX Matrix Plus Router\) on page 1000](#)

[show chassis routing-engine \(QFX Series\) on page 1000](#)
[show chassis routing-engine \(OCX Series\) on page 1000](#)
[show chassis routing-engine interconnect-device \(QFabric systems\) on page 1001](#)
[show chassis routing-engine \(PTX Series Packet Transport Switch\) on page 1001](#)
[show chassis routing-engine \(EX9200 Switch\) on page 1002](#)
[show chassis routing-engine \(ACX2000 Universal Access Router\) on page 1003](#)
[show chassis routing-engine \(ACX1000 Universal Access Router\) on page 1003](#)

Output Fields Table 49 on page 985 lists the output fields for the **show chassis routing-engine** command. Output fields are listed in the approximate order in which they appear.

Table 49: show chassis routing-engine Output Fields

Field Name	Field Description
Slot	(Systems with single and multiple Routing Engines) Slot number.
Current state	(Systems with multiple Routing Engines) Current state of the Routing Engine: Master , Backup , or Disabled .
Election priority	(Systems with multiple Routing Engines) Election priority for the Routing Engine: Master or Backup .
Temperature	Temperature of the air flowing past the Routing Engine.
CPU Temperature	Temperature of the CPU.
DRAM	Total DRAM available to the Routing Engine's processor. Starting with Junos OS Release 12.3R1, the DRAM field displays both available memory and installed memory.
Memory utilization	Percentage of Routing Engine memory being used.
CPU utilization	Information about the Routing Engine's CPU utilization: <ul style="list-style-type: none"> • User—Percentage of CPU time being used by user processes. • Background—Percentage of CPU time being used by background processes. • Kernel—Percentage of CPU time being used by kernel processes. • Interrupt—Percentage of CPU time being used by interrupts. • Idle—Percentage of CPU time that is idle.
Model	Routing Engine model number.
Serial ID	(Systems with multiple Routing Engines) Identification number of the Routing Engine in this slot.
Start time	Time at which the Routing Engine started running.
Uptime	How long the Routing Engine has been running.
Routing Engine BIOS Version	BIOS version being run by the Routing Engine.

Table 49: show chassis routing-engine Output Fields (*continued*)

Field Name	Field Description
Last reboot reason	<p>Reason for last reboot, including:</p> <ul style="list-style-type: none"> power cycle/failure—Halt of the Routing Engine using the halt command, powering down using the power button on the chassis or any other method (such as removal of the control board or Routing Engine), and then powering back the Routing Engine. A halt of the operating system also occurs if you enter the request system halt command. You can enter this command to halt the system operations on the chassis or specific Routing Engines. To restart the software, press any key on the keyboard. watchdog—Reboot due to a hardware watchdog. A watchdog is a hardware monitoring process that examines the health and performance of the router to enable the device to recover from failures. A watchdog checks for problems at certain intervals, and reboots the routing engine if a problem is encountered. reset-button reset—(Not available on the J Series router or EX Series switch) Reboot due to pressing of the reset button on the Routing Engine. power-button hard power off—Reboot due to pressing of the power button on the chassis. A powering down of the software also occurs if you enter the request system power-off command. You can enter this command to power down the chassis or specific Routing Engines; you can then restart the software. misc hardware reason—Reboot due to miscellaneous hardware reasons. thermal shutdown—Reboot due to the router or switch reaching a critical temperature at which point it is unsafe to continue operations. hard disk failure—Reboot due to a hard disk or solid-state drive (SSD) failure. reset from debugger—Reboot due to reset from the debugger. chassis control reset—Restart the chassis process that manages PICs, FPCs, and other hardware components. The chassis control module that runs the Routing Engine performs management and monitoring functions, and it provides a single access point for operational and maintenance functions. A reset of the chassis management process occurs when you enter the restart chassis-control command. bios auto recovery reset—Reboot due to a BIOS auto-recovery reset. could not be determined—Reboot due to an undetermined reason. Router rebooted after a normal shutdown—Reboot due to a normal shutdown. This reason is displayed if the Routing Engine is powered down by pushing and holding the online/offline button on the Routing Engine faceplate for 30 seconds, and then powered back. A reboot of the software also occurs if you enter the request system reboot command. You can enter this command to reboot the chassis or specific Routing Engines.
Load averages	Routing Engine load averages for the last 1, 5, and 15 minutes.

Sample Output

show chassis routing-engine (M5 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
  Temperature                25 degrees C / 77 degrees F
  DRAM                       768 MB
  Memory utilization          21 percent
  CPU utilization:
    User                      0 percent
    Background                0 percent
    Kernel                    0 percent
    Interrupt                  0 percent

```



```

Idle 100 percent
Model RE-2.0
Serial ID 31000007349bf701
Start time 2003-12-04 09:42:17 PST
Uptime 26 days, 1 hour, 12 minutes, 27 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute 5 minute 15 minute
                0.00 0.01 0.00

```

show chassis routing-engine (M10 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
  Temperature 25 degrees C / 77 degrees F
  DRAM 768 MB
  Memory utilization 21 percent
  CPU utilization:
    User 0 percent
    Background 0 percent
    Kernel 0 percent
    Interrupt 0 percent
    Idle 100 percent
  Model RE-2.0
  Serial ID 31000007349bf701
  Start time 2003-12-04 09:42:17 PST
  Uptime 26 days, 1 hour, 12 minutes, 27 seconds
  Last reboot reason Router rebooted after a normal shutdown
  Load averages: 1 minute 5 minute 15 minute
                  0.00 0.01 0.00

```

show chassis routing-engine (M20 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
  Slot 0:
    Current state Master
    Election priority Master (default)
    Temperature 29 degrees C / 84 degrees F
    DRAM 768 MB
    Memory utilization 20 percent
    CPU utilization:
      User 1 percent
      Background 0 percent
      Kernel 2 percent
      Interrupt 0 percent
      Idle 97 percent
    Model RE-2.0
    Serial ID 58000007348d9a01
    Start time 2003-12-30 07:05:47 PST
    Uptime 3 hours, 41 minutes, 14 seconds
    Last reboot reason Router rebooted after a normal shutdown
    Load averages: 1 minute 5 minute 15 minute
                    0.00 0.02 0.00

  Routing Engine status:
    Slot 1:
      Current state Backup
      Election priority Backup (default)
      Temperature 29 degrees C / 84 degrees F
      DRAM 768 MB
      Memory utilization 0 percent
      CPU utilization:

```

```

User                0 percent
Background          0 percent
Kernel              1 percent
Interrupt           0 percent
Idle                99 percent
Model               RE-2.0
Serial ID            d800000734745701
Start time          2003-06-17 16:37:33 PDT
Uptime              195 days, 18 hours, 47 minutes, 9 seconds
Last reboot reason   Router rebooted after a normal shutdown

```

show chassis routing-engine (M40 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
  Temperature        25 degrees C / 77 degrees F
  DRAM               768 MB
  Memory utilization  21 percent
  CPU utilization:
    User              0 percent
    Background        0 percent
    Kernel             0 percent
    Interrupt         0 percent
    Idle              100 percent
  Model              RE-2.0
  Serial ID           31000007349bf701
  Start time          2003-12-04 09:42:17 PST
  Uptime              26 days, 1 hour, 12 minutes, 27 seconds
  Last reboot reason   Router rebooted after a normal shutdown
  Load averages:      1 minute   5 minute  15 minute
                      0.00        0.01    0.00

```

show chassis routing-engine (M120 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state      Master
  Election priority   Master (default)
  Temperature        46 degrees C / 114 degrees F
  CPU temperature     44 degrees C / 111 degrees F
  DRAM               2048 MB
  Memory utilization  18 percent
  CPU utilization:
    User              0 percent
    Background        0 percent
    Kernel             5 percent
    Interrupt         0 percent
    Idle              95 percent
  Model              RE-A-1000
  Serial ID           1000621154
  Start time          2006-10-31 17:10:05 PST
  Uptime              14 minutes, 31 seconds
  Last reboot reason   Router rebooted after a normal shutdown
  Load averages:      1 minute   5 minute  15 minute
                      0.02        0.07    0.07

Routing Engine status:
Slot 1:
  Current state      Backup
  Election priority   Backup (default)
  Temperature        45 degrees C / 113 degrees F

```

```

CPU temperature          42 degrees C / 107 degrees F
DRAM                    2048 MB
Memory utilization       15 percent
CPU utilization:
  User                   0 percent
  Background             0 percent
  Kernel                 0 percent
  Interrupt              0 percent
  Idle                   100 percent
Model                   RE-A-1000
Serial ID                1000621151
Start time              2006-10-31 17:10:04 PST
Uptime                  14 minutes, 30 seconds
Last reboot reason      Router rebooted after a normal shutdown

```

show chassis routing-engine (M160 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state          Master
  Election priority      Master (default)
  Temperature            43 degrees C / 109 degrees F
  DRAM                   2048 MB
  Memory utilization     11 percent
  CPU utilization:
    User                 1 percent
    Background           0 percent
    Kernel               2 percent
    Interrupt            0 percent
    Idle                 97 percent
  Model                  RE-3.0
  Serial ID              210865700403
  Start time             2003-12-23 12:25:55 PST
  Uptime                 6 days, 22 hours, 33 minutes, 24 seconds
  Last reboot reason     Router rebooted after a normal shutdown
  Load averages:        1 minute   5 minute   15 minute
                        0.24       0.13       0.04

Routing Engine status:
Slot 1:
  Current state          Backup
  Election priority      Backup (default)
  Temperature            40 degrees C / 104 degrees F
  DRAM                   2048 MB
  Memory utilization     9 percent
  CPU utilization:
    User                 0 percent
    Background           0 percent
    Kernel               0 percent
    Interrupt            0 percent
    Idle                 100 percent
  Model                  RE-3.0
  Serial ID              210865700332
  Start time             2003-12-23 12:25:55 PST
  Uptime                 6 days, 22 hours, 33 minutes, 21 seconds
  Last reboot reason     Router rebooted after a normal shutdown

```

show chassis routing-engine (MX104 Router)

```

user@host> show chassis routing-engine

```

```

Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             32 degrees C / 89 degrees F
  CPU temperature         42 degrees C / 107 degrees F
  DRAM                   3840 MB (3840 MB installed)
  Memory utilization      18 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                3 percent
    Interrupt             2 percent
    Idle                  94 percent
  Model                  RE-MX-104
  Serial ID              CAAR5925
  Start time             2013-06-05 13:17:08 IST
  Uptime                 1 hour, 15 minutes, 8 seconds
  Last reboot reason     0x200:normal shutdown
  Load averages:         1 minute   5 minute   15 minute
                        0.87       0.90       0.41

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)
  Temperature             32 degrees C / 89 degrees F
  CPU temperature         38 degrees C / 100 degrees F
  DRAM                   3840 MB (3840 MB installed)
  Memory utilization      13 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                1 percent
    Interrupt             2 percent
    Idle                  97 percent
  Model                  RE-MX-104
  Serial ID              CAAM6369
  Start time             2013-06-05 13:07:37 IST
  Uptime                 1 hour, 24 minutes, 34 seconds
  Last reboot reason     0x200:normal shutdown
  Load averages:         1 minute   5 minute   15 minute
                        0.19       0.15       0.06

```

show chassis routing-engine (MX240 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state           Backup
  Election priority       Master (default)
  Temperature             40 degrees C / 104 degrees F
  CPU temperature         47 degrees C / 116 degrees F
  DRAM                   3584 MB
  Memory utilization      7 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                0 percent
    Interrupt             0 percent
    Idle                  100 percent
  Model                  RE-S-2000

```

```

Serial ID          1000703522
Start time         2007-12-19 10:35:40 PST
Uptime            16 days, 3 hours, 15 minutes, 23 seconds
Last reboot reason Router rebooted after a normal shutdown

```

show chassis routing-engine (MX480 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state      Master
  Election priority  Master (default)
  Temperature        41 degrees C / 105 degrees F
  CPU temperature    38 degrees C / 100 degrees F
  DRAM               2048 MB
  Memory utilization 13 percent
  CPU utilization:
    User             0 percent
    Background       0 percent
    Kernel           2 percent
    Interrupt        0 percent
    Idle             98 percent
  Model              RE-S-1300
  Serial ID          1000697044
  Start time         2008-01-04 06:46:08 PST
  Uptime             8 hours, 17 minutes, 16 seconds
  Last reboot reason Router rebooted after a normal shutdown

```

show chassis routing-engine (MX960 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state      Master
  Election priority  Master (default)
  Temperature        37 degrees C / 98 degrees F
  CPU temperature    37 degrees C / 98 degrees F
  DRAM               2048 MB
  Memory utilization 18 percent
  CPU utilization:
    User             0 percent
    Background       0 percent
    Kernel           4 percent
    Interrupt        0 percent
    Idle             96 percent
  Model              RE-S-1300
  Serial ID          1000617944
  Start time         2006-10-26 12:37:13 PDT
  Uptime             6 days, 4 hours, 59 minutes, 40 seconds
  Last reboot reason Router rebooted after a normal shutdown
  Load averages:    1 minute  5 minute  15 minute
                    0.16      0.08      0.02

```

show chassis routing-engine (MX2010 Router)

```

user@host> show chassis routing-engine

Routing Engine status:
Slot 0:
  Current state      Master
  Election priority  Master (default)
  Temperature        3 degrees C / 37 degrees F

```

```

CPU temperature          3 degrees C / 37 degrees F
DRAM                    17152 MB
Memory utilization       13 percent
CPU utilization:
  User                   0 percent
  Background             0 percent
  Kernel                 4 percent
  Interrupt              2 percent
  Idle                   95 percent
Model                   RE-S-1800x4
Serial ID                9009099704
Start time              2012-10-02 14:33:32 PDT
Uptime                  14 hours, 39 minutes, 39 seconds
Last reboot reason      Router rebooted after a normal shutdown.
Load averages:          1 minute   5 minute   15 minute
                        0.06       0.05       0.01

Routing Engine status:
Slot 1:
  Current state          Backup
  Election priority      Backup (default)
  Temperature            1 degrees C / 33 degrees F
  CPU temperature        2 degrees C / 35 degrees F
  DRAM                   17152 MB
  Memory utilization     11 percent
  CPU utilization:
    User                 0 percent
    Background           0 percent
    Kernel               0 percent
    Interrupt            0 percent
    Idle                 100 percent
  Model                  RE-S-1800x4
  Serial ID              9009099706
  Start time             2012-10-02 10:36:06 PDT
  Uptime                  18 hours, 36 minutes, 57 seconds
  Last reboot reason      Router rebooted after a normal shutdown.
  Load averages:         1 minute   5 minute   15 minute
                        0.01       0.00       0.00

```

show chassis routing-engine (MX2020 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state          Master
  Election priority      Master (default)
  Temperature            6 degrees C / 42 degrees F
  CPU temperature        6 degrees C / 42 degrees F
  DRAM                   17152 MB
  Memory utilization     14 percent
  CPU utilization:
    User                 1 percent
    Background           0 percent
    Kernel               7 percent
    Interrupt            2 percent
    Idle                 91 percent
  Model                  RE-S-1800x4
  Serial ID              9009089704
  Start time             2012-10-02 11:05:24 PDT
  Uptime                  2 days, 15 hours, 49 minutes, 13 seconds
  Last reboot reason      Router rebooted after a normal shutdown.
  Load averages:         1 minute   5 minute   15 minute

```

```

                                0.10      0.05      0.01
Routing Engine status:
Slot 1:
  Current state                Backup
  Election priority            Backup (default)
  Temperature                   7 degrees C / 44 degrees F
  CPU temperature               5 degrees C / 41 degrees F
  DRAM                          17152 MB
  Memory utilization            12 percent
  CPU utilization:
    User                        0 percent
    Background                  0 percent
    Kernel                      0 percent
    Interrupt                   0 percent
    Idle                        99 percent
  Model                         RE-S-1800x4
  Serial ID                     9009094138
  Start time                    2012-10-02 11:09:57 PDT
  Uptime                        2 days, 15 hours, 44 minutes, 27 seconds
  Last reboot reason            Router rebooted after a normal shutdown.
  Load averages:               1 minute   5 minute   15 minute
                                0.00      0.00      0.00

```

show chassis routing-engine (T320 router)

```

user@host> show chassis routing-engine
Slot 0:
  Current state                Master
  Election priority            Master (default)
  Temperature                   51 degrees C / 123 degrees F
  CPU temperature               55 degrees C / 131 degrees F
  DRAM                          3584 MB
  Memory utilization            11 percent
  CPU utilization:
    User                        0 percent
    Background                  0 percent
    Kernel                      2 percent
    Interrupt                   0 percent
    Idle                        97 percent
  Model                         RE-A-2000
  Serial ID                     9009010618
  Start time                    2012-10-10 01:24:05 PDT
  Uptime                        5 days, 10 hours, 49 minutes, 23 seconds
  Last reboot reason            0x1:power cycle/failure
  Load averages:               1 minute   5 minute   15 minute
                                0.00      0.05      0.04

Routing Engine status:
Slot 1:
  Current state                Backup
  Election priority            Backup (default)
  Temperature                   45 degrees C / 113 degrees F
  CPU temperature               48 degrees C / 118 degrees F
  DRAM                          3584 MB
  Memory utilization            9 percent
  CPU utilization:
    User                        0 percent
    Background                  0 percent
    Kernel                      0 percent
    Interrupt                   0 percent
    Idle                        100 percent
  Model                         RE-A-2000

```

Serial ID	9009003642
Start time	2012-10-10 01:24:04 PDT
Uptime	5 days, 10 hours, 49 minutes, 28 seconds
Last reboot reason	0x1:power cycle/failure

show chassis routing-engine (T640 router)

```
user@host> show chassis routing-engine
```

```
Routing Engine status:
```

```
Slot 0:
```

Current state	Master
Election priority	Master (default)
Temperature	50 degrees C / 122 degrees F
CPU temperature	58 degrees C / 136 degrees F
DRAM	3584 MB
Memory utilization	14 percent
CPU utilization:	
User	1 percent
Background	0 percent
Kernel	4 percent
Interrupt	1 percent
Idle	95 percent
Model	RE-A-2000
Serial ID	1000686556
Start time	2012-10-10 01:24:02 PDT
Uptime	5 days, 10 hours, 50 minutes, 27 seconds
Last reboot reason	0x1:power cycle/failure
Load averages:	1 minute 5 minute 15 minute
	1.24 0.33 0.12

```
Routing Engine status:
```

```
Slot 1:
```

Current state	Backup
Election priority	Backup (default)
Temperature	44 degrees C / 111 degrees F
CPU temperature	49 degrees C / 120 degrees F
DRAM	3584 MB
Memory utilization	12 percent
CPU utilization:	
User	0 percent
Background	0 percent
Kernel	0 percent
Interrupt	1 percent
Idle	99 percent
Model	RE-A-2000
Serial ID	1000702739
Start time	2012-10-10 01:24:02 PDT
Uptime	5 days, 10 hours, 50 minutes, 26 seconds
Last reboot reason	0x1:power cycle/failure

show chassis routing-engine (T1600 router)

```
user@host> show chassis routing-engine
```

```
Routing Engine status:
```

```
Slot 0:
```

Current state	Master
Election priority	Master (default)
Temperature	48 degrees C / 118 degrees F
CPU temperature	58 degrees C / 136 degrees F
DRAM	3584 MB
Memory utilization	13 percent
CPU utilization:	


```

User                0 percent
Background          0 percent
Kernel              3 percent
Interrupt            1 percent
Idle                96 percent
Model               RE-A-2000
Serial ID            1000704521
Start time           2012-10-10 01:23:41 PDT
Uptime               5 days, 10 hours, 46 minutes, 56 seconds
Last reboot reason   0x1:power cycle/failure
Load averages:       1 minute   5 minute   15 minute
                     0.05       0.03       0.01

Routing Engine status:
Slot 1:
  Current state      Backup
  Election priority   Backup (default)
  Temperature         44 degrees C / 111 degrees F
  CPU temperature     48 degrees C / 118 degrees F
  DRAM                3584 MB
  Memory utilization  12 percent
  CPU utilization:
    User              0 percent
    Background        0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle              100 percent
  Model               RE-A-2000
  Serial ID            9009006579
  Start time           2012-10-10 01:23:42 PDT
  Uptime               5 days, 10 hours, 46 minutes, 54 seconds
  Last reboot reason   0x1:power cycle/failure

```

show chassis routing-engine (T4000 router)

```

user@host> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state      Master
  Election priority   Master (default)
  Temperature         33 degrees C / 91 degrees F
  CPU temperature     50 degrees C / 122 degrees F
  DRAM                8960 MB
  Memory utilization  18 percent
  CPU utilization:
    User              0 percent
    Background        0 percent
    Kernel             4 percent
    Interrupt          1 percent
    Idle              95 percent
  Model               RE-DUO-1800
  Serial ID            P737F-002248
  Start time           2012-02-09 22:49:53 PST
  Uptime               2 hours, 21 minutes, 35 seconds
  Last reboot reason   Router rebooted after a normal shutdown.
  Load averages:       1 minute   5 minute   15 minute
                     0.00       0.04       0.00

Routing Engine status:
Slot 1:
  Current state      Backup
  Election priority   Backup (default)
  Temperature         32 degrees C / 89 degrees F

```

```

CPU temperature          46 degrees C / 114 degrees F
DRAM                    8960 MB
Memory utilization       24 percent
CPU utilization:
  User                   0 percent
  Background             0 percent
  Kernel                 0 percent
  Interrupt              0 percent
  Idle                   99 percent
Model                   RE-DU0-1800
Serial ID                P737F-002653
Start time              2012-02-08 20:12:51 PST
Uptime                  1 day, 4 hours, 58 minutes, 28 seconds
Last reboot reason      Router rebooted after a normal shutdown.

```

show chassis routing-engine (TX Matrix Router)

```

user@host> show chassis routing-engine
scc-re0:

```

Routing Engine status:

Slot 0:

```

Current state           Master
Election priority       Master (default)
Temperature             34 degrees C / 93 degrees F
CPU temperature         33 degrees C / 91 degrees F
DRAM                   2048 MB
Memory utilization      12 percent
CPU utilization:
  User                   0 percent
  Background             0 percent
  Kernel                 2 percent
  Interrupt              0 percent
  Idle                   98 percent
Model                   RE-4.0
Serial ID               P11123900153
Start time              2004-08-05 18:42:05 PDT
Uptime                  9 days, 22 hours, 49 minutes, 50 seconds
Last reboot reason      Router rebooted after a normal shutdown
Load averages:          1 minute   5 minute   15 minute
                        0.00        0.08      0.07

```

lcc0-re0:

Routing Engine status:

Slot 0:

```

Current state           Master
Election priority       Master (default)
Temperature             33 degrees C / 91 degrees F
CPU temperature         30 degrees C / 86 degrees F
DRAM                   2048 MB
Memory utilization      12 percent
CPU utilization:
  User                   0 percent
  Background             0 percent
  Kernel                 1 percent
  Interrupt              0 percent
  Idle                   98 percent
Model                   RE-3.0
Serial ID               210865700363
Start time              2004-08-05 18:42:05 PDT

```

```

Uptime                9 days, 22 hours, 48 minutes, 20 seconds
Last reboot reason     Router rebooted after a normal shutdown
Load averages:         1 minute   5 minute   15 minute
                        0.00       0.02       0.00

```

```
lcc2-re0:
```

```
-----
Routing Engine status:
```

```
Slot 0:
```

```

Current state          Master
Election priority       Master (default)
Temperature             34 degrees C / 93 degrees F
CPU temperature         35 degrees C / 95 degrees F
DRAM                   2048 MB
Memory utilization      12 percent
CPU utilization:
  User                  0 percent
  Background            0 percent
  Kernel                2 percent
  Interrupt             0 percent
  Idle                  98 percent
Model                  RE-4.0
Serial ID               P11123900126
Start time              2004-08-05 18:42:05 PDT
Uptime                  9 days, 22 hours, 49 minutes, 4 seconds
Last reboot reason      Router rebooted after a normal shutdown
Load averages:          1 minute   5 minute   15 minute
                        0.01       0.01       0.0

```

show chassis routing-engine lcc (TX Matrix Router)

```
user@host> show chassis routing-engine 0 lcc 0
```

```
lcc0-re0:
```

```
-----
Routing Engine status:
```

```
Slot 0:
```

```

Current state          Master
Election priority       Master (default)
Temperature             33 degrees C / 91 degrees F
CPU temperature         30 degrees C / 86 degrees F
DRAM                   2048 MB
Memory utilization      12 percent
CPU utilization:
  User                  0 percent
  Background            0 percent
  Kernel                1 percent
  Interrupt             0 percent
  Idle                  98 percent
Model                  RE-3.0
Serial ID               210865700363
Start time              2004-08-05 18:42:05 PDT
Uptime                  7 days, 22 hours, 49 minutes, 6 seconds
Last reboot reason      Router rebooted after a normal shutdown
Load averages:          1 minute   5 minute   15 minute
                        0.00       0.00       0.00

```

show chassis routing-engine bios (TX Matrix Router)

```
user@host> show chassis routing-engine bios
```

```
scc-re0:
```

```
Routing Engine BIOS Version: V1.0.0
1cc0-re0:
```

```
-----
Routing Engine BIOS Version: V1.0.17
1cc2-re0:
```

```
-----
Routing Engine BIOS Version: V1.0.0
```

show chassis routing-engine (TX Matrix Plus Router)

```
user@host> show chassis routing-engine
sfc0-re0:
```

```
-----
Routing Engine status:
```

```
Slot 0:
```

Current state	Master
Election priority	Master (default)
Temperature	27 degrees C / 80 degrees F
CPU temperature	42 degrees C / 107 degrees F
DRAM	3327 MB
Memory utilization	12 percent
CPU utilization:	
User	0 percent
Background	0 percent
Kernel	2 percent
Interrupt	0 percent
Idle	98 percent
Model	RE-TXP-SFC
Serial ID	737A-1024
Start time	2009-05-11 17:39:49 PDT
Uptime	3 hours, 45 minutes, 25 seconds
Last reboot reason	Router rebooted after a normal shutdown.
Load averages:	1 minute 5 minute 15 minute
	0.00 0.00 0.00

```
Routing Engine status:
```

```
Slot 1:
```

Current state	Backup
Election priority	Backup (default)
Temperature	29 degrees C / 84 degrees F
CPU temperature	43 degrees C / 109 degrees F
DRAM	3327 MB
Memory utilization	11 percent
CPU utilization:	
User	0 percent
Background	0 percent
Kernel	0 percent
Interrupt	0 percent
Idle	100 percent
Model	RE-TXP-SFC
Serial ID	737A-1024
Start time	2009-05-11 17:08:54 PDT
Uptime	4 hours, 16 minutes, 52 seconds
Last reboot reason	0x1:power cycle/failure

```
1cc0-re0:
```

```
-----
Routing Engine status:
```

```
Slot 0:
```

Current state	Master
Election priority	Master (default)
Temperature	30 degrees C / 86 degrees F

```

CPU temperature          43 degrees C / 109 degrees F
DRAM                    3327 MB
Memory utilization       9 percent
CPU utilization:
  User                   0 percent
  Background             0 percent
  Kernel                 2 percent
  Interrupt              0 percent
  Idle                   98 percent
Model                   RE-TXP-LCC
Serial ID                737F-1024
Start time               2009-05-11 17:40:32 PDT
Uptime                  3 hours, 44 minutes, 51 seconds
Last reboot reason      Router rebooted after a normal shutdown.
Load averages:          1 minute   5 minute  15 minute
                        0.00       0.00    0.00

Routing Engine status:
Slot 1:
  Current state          Backup
  Election priority      Backup (default)
  Temperature            30 degrees C / 86 degrees F
  CPU temperature        43 degrees C / 109 degrees F
  DRAM                   3327 MB
  Memory utilization     9 percent
  CPU utilization:
    User                 0 percent
    Background           0 percent
    Kernel               0 percent
    Interrupt            0 percent
    Idle                 100 percent
  Model                  RE-TXP-LCC
  Serial ID              737F-1024
  Start time             2009-05-06 17:31:32 PDT
  Uptime                 5 days, 3 hours, 54 minutes, 19 seconds
  Last reboot reason     Router rebooted after a normal shutdown.

```

show chassis routing-engine lcc (TX Matrix Plus Router)

```

user@host> show chassis routing-engine 0 lcc 0
1cc0-re0:
-----
Routing Engine status:
Slot 0:
  Current state          Master
  Election priority      Master (default)
  Temperature            30 degrees C / 86 degrees F
  CPU temperature        43 degrees C / 109 degrees F
  DRAM                   3327 MB
  Memory utilization     9 percent
  CPU utilization:
    User                 0 percent
    Background           0 percent
    Kernel               2 percent
    Interrupt            0 percent
    Idle                 98 percent
  Model                  RE-TXP-LCC
  Serial ID              737F-1024
  Start time             2009-05-11 17:40:32 PDT
  Uptime                 3 hours, 45 minutes, 26 seconds
  Last reboot reason     Router rebooted after a normal shutdown.
  Load averages:        1 minute   5 minute  15 minute

```

```

0.00      0.00      0.00
Routing Engine status:
Slot 1:
  Current state          Backup
  Election priority      Backup (default)
  Temperature            30 degrees C / 86 degrees F
  CPU temperature        43 degrees C / 109 degrees F
  DRAM                   3327 MB
  Memory utilization      9 percent
  CPU utilization:
    User                 0 percent
    Background           0 percent
    Kernel               0 percent
    Interrupt            0 percent
    Idle                 100 percent
  Model                  RE-TXP-LCC
  Serial ID              737F-1024
  Start time             2009-05-06 17:31:32 PDT
  Uptime                 5 days, 3 hours, 54 minutes, 59 seconds
  Last reboot reason     Router rebooted after a normal shutdown.

```

show chassis routing-engine bios (TX Matrix Plus Router)

```

user@host> show chassis routing-engine bios
sfc0-re0:

```

```

-----
Routing Engine BIOS Version: V0.0.Z

```

```

lcc0-re0:

```

```

-----
Routing Engine BIOS Version: V0.0.N

```

show chassis routing-engine (QFX Series)

```

user@switch> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state Master
  Election priority Master (default)
  DRAM 2820 MB
  Memory utilization 49 percent
  CPU utilization:
    User 1 percent
    Background 0 percent
    Kernel 1 percent
    Interrupt 0 percent
    Idle 97 percent
  Model QFX3500-48S4Q
  Serial ID S/N ED3709
  Uptime 3 days, 4 hours, 29 minutes, 42 seconds
  Last reboot reason 0x200:chassis control reset
  Load averages: 1 minute 5 minute 15 minute
0.37 0.26 0.19

```

show chassis routing-engine (OCX Series)

```

user@switch> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state Master
  Election priority Master (default)
  DRAM 2820 MB

```

```

Memory utilization 49 percent
CPU utilization:
User 1 percent
Background 0 percent
Kernel 1 percent
Interrupt 0 percent
Idle 97 percent
Model OCX-1100-48SX-AFI
Serial ID S/N ED3709
Uptime 3 days, 4 hours, 29 minutes, 42 seconds
Last reboot reason 0x200:chassis control reset
Load averages: 1 minute 5 minute 15 minute
0.37 0.26 0.19

```

show chassis routing engine interconnect-device (QFabric systems)

```

user@switch> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             48 degrees C / 118 degrees F
  DRAM                    3312 MB
  Memory utilization      63 percent
  CPU utilization:
    User                  14 percent
    Background            0 percent
    Kernel                5 percent
    Interrupt             0 percent
    Idle                  81 percent
  Model                   RE-QFXC08-CB4S
  Serial ID               BUILTIN
  Start time              2011-07-06 13:26:15 UTC
  Uptime                  11 hours, 24 minutes, 57 seconds
  Last reboot reason      0x4:reset-button reset
  Load averages:         1 minute 5 minute 15 minute
                        2.62      2.31      2.28

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)
  Temperature             39 degrees C / 102 degrees F
  DRAM                    3312 MB
  Memory utilization      59 percent
  CPU utilization:
    User                  9 percent
    Background            0 percent
    Kernel                1 percent
    Interrupt             0 percent
    Idle                  91 percent
  Model                   RE-QFXC08-CB4S
  Serial ID               BUILTIN
  Start time              2011-07-06 13:24:58 UTC
  Uptime                  11 hours, 26 minutes, 18 seconds
  Last reboot reason      0x4:reset-button reset

```

show chassis routing-engine (PTX Series Packet Transport Switch)

```

user@switch> show chassis routing-engine

```

```

Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             60 degrees C / 140 degrees F
  CPU temperature         76 degrees C / 168 degrees F
  DRAM                   17152 MB
  Memory utilization      11 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                4 percent
    Interrupt             0 percent
    Idle                  95 percent
  Model                  RE-DUO-2600
  Serial ID               P737A-002231
  Start time              2011-12-21 16:54:37 PST
  Uptime                  25 minutes, 44 seconds
  Last reboot reason      Router rebooted after a normal shutdown.
  Load averages:         1 minute   5 minute   15 minute
                           0.01       0.02       0.06

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)
  Temperature             50 degrees C / 122 degrees F
  CPU temperature         64 degrees C / 147 degrees F
  DRAM                   17152 MB
  Memory utilization      10 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                0 percent
    Interrupt             0 percent
    Idle                  99 percent
  Model                  RE-DUO-2600
  Serial ID               P737A-002438
  Start time              2011-12-21 16:52:26 PST
  Uptime                  27 minutes, 49 seconds
  Last reboot reason      Router rebooted after a normal shutdown.

```

show chassis routing-engine (EX9200 Switch)

```

user@switch> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             35 degrees C / 95 degrees F
  CPU temperature         33 degrees C / 91 degrees F
  DRAM                   8157 MB
  Installed Memory       8192 MB
  Memory utilization      18 percent
  CPU utilization:
    User                  1 percent
    Background            0 percent
    Kernel                4 percent
    Interrupt             1 percent
    Idle                  94 percent
  Model                  RE-S-EX9200-1800X4
  Serial ID               9009119555

```



```

Start time          2014-03-12 14:58:05 UTC
Uptime              1 hour, 41 minutes, 51 seconds
Last reboot reason  Router rebooted after a normal shutdown.
Load averages:      1 minute   5 minute   15 minute
                   0.02       0.02       0.00

Routing Engine status:
Slot 1:
  Current state      Backup
  Election priority  Backup (default)

[...Output truncated...]

```

show chassis routing-engine (ACX2000 Universal Access Router)

```

user@host> show chassis routing-engine
Routing Engine status:
  Temperature        53 degrees C / 127 degrees F
  DRAM                1536 MB
  Memory utilization  25 percent
  CPU utilization:
    User              0 percent
    Background        0 percent
    Kernel             0 percent
    Interrupt         1 percent
    Idle              99 percent
  Model              RE-ACX-2000
  Start time          2012-05-09 00:57:07 PDT
  Uptime              5 days, 3 hours, 16 minutes, 15 seconds
  Last reboot reason  Router rebooted after a normal shutdown.
  Load averages:     1 minute   5 minute   15 minute
                   0.00       0.03       0.05

```

show chassis routing-engine (ACX1000 Universal Access Router)

```

user@host> show chassis routing-engine
Routing Engine status:
  Temperature        36 degrees C / 96 degrees F
  DRAM                768 MB
  Memory utilization  50 percent
  CPU utilization:
    User              3 percent
    Background        0 percent
    Kernel             6 percent
    Interrupt         0 percent
    Idle              91 percent
  Model              RE-ACX-1000
  Start time          2012-05-10 07:12:23 PDT
  Uptime              4 days, 10 hours, 46 minutes, 53 seconds
  Last reboot reason  Router rebooted after a normal shutdown.
  Load averages:     1 minute   5 minute   15 minute
                   0.00       0.00       0.00

```

show chassis temperature-thresholds

List of Syntax	Syntax on page 1004 Syntax (TX Matrix Routers) on page 1004 Syntax (TX Matrix Plus Routers) on page 1004 Syntax (MX Series Routers) on page 1004 Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers) on page 1004 Syntax (QFX Series) on page 1004 Syntax (PTX Series) on page 1004
Syntax	show chassis temperature-thresholds
Syntax (TX Matrix Routers)	show chassis temperature-thresholds <fcc number scc>
Syntax (TX Matrix Plus Routers)	show chassis temperature-thresholds <fcc number sfc number>
Syntax (MX Series Routers)	show chassis temperature-thresholds <all-members> <local> <member member-id>
Syntax (MX104, MX2010, and MX2020 3D Universal Edge Routers)	show chassis temperature-thresholds
Syntax (QFX Series)	show chassis temperature-thresholds <interconnect-device name> <node-device name>
Syntax (PTX Series)	show chassis temperature-thresholds
Release Information	Command introduced in Junos OS Release 8.0. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc command introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for QFX Series. Command introduced in Junos OS Release 12.1 for T4000 Core Routers. Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers. Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers. Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers. Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.
Description	Display chassis temperature threshold settings, in degrees Celsius.
Options	none —Display the temperature threshold details. all-members —(MX Series routers only) (Optional) Display the chassis temperature threshold settings of all member routers in the Virtual Chassis configuration.

interconnect-device *name*—(QFabric systems only) (Optional) Display the chassis temperature threshold settings of the Interconnect device.

lcc *number*—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display the temperature threshold details of a specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display the temperature threshold details of a specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display the chassis temperature threshold settings of the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display the chassis temperature threshold settings of the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-device *name*—(QFabric systems only) (Optional) Display the chassis temperature threshold settings of the Node device.

scc—(TX Matrix routers only) (Optional) Display the temperature threshold details of the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) On TX Matrix Plus routers, display the temperature threshold details of the TX Matrix Plus router, which is the switch-fabric chassis. Replace *number* with 0.

Required Privilege Level view

Related Documentation • *Defining Alarm Thresholds for System Temperature Sensors*

List of Sample Output [show chassis temperature-thresholds on page 1007](#)
[show chassis temperature-thresholds \(MX104 Router\) on page 1007](#)
[show chassis temperature-thresholds \(MX240, MX480, MX960 Routers with Application Services Modular Line Card\) on page 1007](#)
[show chassis temperature-thresholds \(MX480 Router with MPC4E\) on page 1008](#)
[show chassis temperature-thresholds \(MX2010 Router\) on page 1008](#)
[show chassis temperature-thresholds \(MX2020 Router\) on page 1010](#)

[show chassis temperature-thresholds \(MX2020 Router with MPC4E\) on page 1014](#)
[show chassis temperature-thresholds \(T4000 Core Routers\) on page 1015](#)
[show chassis temperature-thresholds \(TX Matrix Plus Router\) on page 1016](#)
[show chassis temperature-thresholds lcc \(TX Matrix Plus Router\) on page 1017](#)
[show chassis temperature-thresholds sfc \(TX Matrix Plus Router\) on page 1017](#)
[show chassis temperature-thresholds \(TX Matrix Plus routers with 3D SIBs\) on page 1018](#)
[show chassis temperature-thresholds \(QFX3500 Switch and QFX3600\) on page 1019](#)
[show chassis temperature-thresholds interconnect-device \(QFabric System\) on page 1020](#)
[show chassis temperature-thresholds \(PTX5000 Packet Transport Router\) on page 1020](#)
[show chassis temperature-thresholds \(MX Routers with Media Services Blade \[MSB\]\) on page 1021](#)

Output Fields Table 50 on page 1006 lists the output fields for the **show chassis temperature-thresholds** command. Output fields are listed in the approximate order in which they appear.

Table 50: show chassis temperature-thresholds Output Fields

Field name	Field Description
Item	Chassis component. If per FRU per slot thresholds are configured, the components about which information is displayed include the chassis, the Routing Engines, FPCs, and FEBs. If per FRU per slot thresholds are not configured, the components about which information is displayed include the chassis and the Routing Engines.
Fan speed	<p>NOTE: On the QFX3500 switch and QFX3600 switch, there are four fan speeds: low, medium-low, medium-high, and high. The fan speed changes at the threshold when going from a low speed to a higher speed. When the fan speed changes from a higher speed to a lower speed, the temperature changes two degrees below the threshold.</p> <p>Temperature threshold settings, in degrees Celsius, for the fans to operate at normal and high speeds.</p> <ul style="list-style-type: none"> Normal—The fans operate at normal speed if the component is at or below this temperature and all the fans are present and functioning normally. <p>NOTE: On a TX Matrix Plus router with 3D SIBs, the threshold temperature at the XF junction is set to 70°C for Normal fan speed, which is less than or equal to 4800 RPM.</p> <ul style="list-style-type: none"> High—The fans operate at high speed if the component has exceeded this temperature or a fan has failed or is missing. <p>NOTE: On a TX Matrix Plus router with 3D SIBs, the threshold temperature at the XF junction is set to 75°C for High fan speed, which is greater than or equal to 5000 RPM.</p> <p>NOTE: For MX480 Routers, there are three fan speeds: Low, Medium, and High.</p> <p>An alarm is not triggered until the temperature exceeds the threshold settings for a yellow alarm or a red alarm.</p>
Yellow alarm	<p>Temperature threshold settings, in degrees Celsius, that trigger a yellow alarm.</p> <ul style="list-style-type: none"> Normal—The temperature that must be exceeded on the component to trigger a yellow alarm when the fans are running at full speed. Bad fan—The temperature that must be exceeded on the component to trigger a yellow alarm when one or more fans have failed or are missing.

Table 50: show chassis temperature-thresholds Output Fields (*continued*)

Field name	Field Description
Red alarm	<p>Temperature threshold settings, in degrees Celsius, that trigger a red alarm.</p> <ul style="list-style-type: none"> Normal—The temperature that must be exceeded on the component to trigger a red alarm when the fans are running at full speed. Bad fan—The temperature that must be exceeded on the component to trigger a red alarm when one or more fans have failed or are missing.
Fire Shutdown	(T4000 routers, TX Matrix Plus router with 3D SIBs, and PTX Series Packet Transport Routers only)—Temperature threshold settings, in degrees Celsius, for the network device to shut down.

Sample Output

show chassis temperature-thresholds

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	70	80	95	95	110	110
Routing Engine 1	70	80	95	95	110	110
FPC 0	55	60	75	65	90	80
FPC 1	55	60	75	65	90	80
FPC 2	55	60	75	65	90	80
FPC 3	55	60	75	65	90	80
FPC 4	55	60	75	65	90	80
FPC 5	55	60	75	65	90	80
FPC 6	55	60	75	65	90	80
FPC 7	55	60	75	65	90	80
FPC 8	55	60	75	65	90	80
FPC 9	55	60	75	65	90	80
FPC 10	55	60	75	65	90	80
FPC 11	55	60	75	65	90	80

show chassis temperature-thresholds (MX104 Router)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65		
Routing Engine 0	55	80	95	95	105	100		

show chassis temperature-thresholds (MX240, MX480, MX960 Routers with Application Services Modular Line Card)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal	Bad fan

Item	Normal	High	Normal	Bad fan	Normal	Bad fan
Normal						
Chassis default	48	54	65	55	75	65
100						
Routing Engine 0	70	80	95	95	110	110
112						
Routing Engine 1	70	80	95	95	110	110
112						
FPC 0	55	60	75	65	90	80
95						
FPC 1	55	60	75	65	90	80
95						
FPC 2	55	60	75	65	90	80
95						
FPC 4	55	60	75	65	90	80
95						
FPC 5	55	60	75	65	90	80
95						

show chassis temperature-thresholds (MX480 Router with MPC4E)

```
user@ host> show chassis temperature-thresholds
```

	Fan speed	Yellow alarm		Red alarm		Fire Shutdown	
		(degrees C)		(degrees C)		(degrees C)	
(degrees C)							
Item		Normal	High	Normal	Bad fan	Normal	Bad fan
Normal							
Chassis default		48	54	65	55	75	65
100							
Routing Engine 0		70	80	95	95	110	110
112							
Routing Engine 1		70	80	95	95	110	110
112							
FPC 2		55	60	75	65	95	80
100							
FPC 3		55	60	75	65	95	80
100							
FPC 4		55	60	75	65	90	80
95							

show chassis temperature-thresholds (MX2010 Router)

```
user@host> show chassis temperature-thresholds
```

	Fan speed		Yellow alarm		Red alarm		Fire Shutdown	
	(degrees C)		(degrees C)		(degrees C)		(degrees C)	
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal	Bad fan
Routing Engine 0	70	80	95	95	110	110	112	112
Routing Engine 1	70	80	95	95	110	110	112	112
CB 0 IntakeA-Zone0	60	65	78	75	85	80	95	95
CB 0 IntakeB-Zone1	60	65	78	75	85	80	95	95
CB 0 IntakeC-Zone0	60	65	78	75	85	80	95	95
CB 0 ExhaustA-Zone0	60	65	78	75	85	80	95	95
CB 0 ExhaustB-Zone1	60	65	78	75	85	80	95	95
CB 0 TCBC-Zone0	60	65	78	75	85	80	95	95
CB 1 IntakeA-Zone0	60	65	78	75	85	80	95	95
CB 1 IntakeB-Zone1	60	65	78	75	85	80	95	95
CB 1 IntakeC-Zone0	60	65	78	75	85	80	95	95
CB 1 ExhaustA-Zone0	60	65	78	75	85	80	95	95
CB 1 ExhaustB-Zone1	60	65	78	75	85	80	95	95
CB 1 TCBC-Zone0	60	65	78	75	85	80	95	95
SPMB 0 Intake	56	62	75	63	83	76	95	95

SPMB 1 Intake	56	62	75	63	83	76	95
SFB 0 Intake-Zone0	56	62	75	63	82	70	87
SFB 0 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 0 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 0 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 0 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 0 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 0 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 0 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 1 Intake-Zone0	56	62	75	63	82	70	87
SFB 1 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 1 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 1 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 1 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 1 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 1 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 1 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 2 Intake-Zone0	56	62	75	63	82	70	87
SFB 2 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 2 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 2 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 2 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 2 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 2 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 2 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 3 Intake-Zone0	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 3 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 3 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 3 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 3 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 3 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 4 Intake-Zone0	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 4 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 4 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 4 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 4 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 4 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 5 Intake-Zone0	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 5 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 5 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 5 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 5 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 5 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 6 Intake-Zone0	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 6 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 6 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 6 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 6 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 6 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 7 Intake-Zone0	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 7 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 7 IntakeB-Zone1	56	62	75	63	82	70	87

SFB 7 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 7 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 7 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 7 SFB-XF0-Zone0	70	80	90	90	107	107	115
FPC 0	55	60	75	65	95	80	100
FPC 1	55	60	75	65	90	80	95
FPC 2	55	60	75	65	95	80	100
FPC 3	55	60	75	65	90	80	95
FPC 4	55	60	75	65	90	80	95
FPC 5	55	60	75	65	95	80	100
FPC 6	55	60	75	65	90	80	95
FPC 7	55	60	75	65	95	80	100
FPC 8	55	60	75	65	90	80	95
FPC 9	55	60	75	65	95	80	100
ADC 0 Intake	56	62	75	63	83	76	95
ADC 0 Exhaust	56	62	75	63	83	76	95
ADC 0 ADC-XF1	70	80	90	90	107	107	115
ADC 0 ADC-XF0	70	80	90	90	107	107	115
ADC 1 Intake	56	62	75	63	83	76	95
ADC 1 Exhaust	56	62	75	63	83	76	95
ADC 1 ADC-XF1	70	80	90	90	107	107	115
ADC 1 ADC-XF0	70	80	90	90	107	107	115
ADC 2 Intake	56	62	75	63	83	76	95
ADC 2 Exhaust	56	62	75	63	83	76	95
ADC 2 ADC-XF1	70	80	90	90	107	107	115
ADC 2 ADC-XF0	70	80	90	90	107	107	115
ADC 3 Intake	56	62	75	63	83	76	95
ADC 3 Exhaust	56	62	75	63	83	76	95
ADC 3 ADC-XF1	70	80	90	90	107	107	115
ADC 3 ADC-XF0	70	80	90	90	107	107	115
ADC 4 Intake	56	62	75	63	83	76	95
ADC 4 Exhaust	56	62	75	63	83	76	95
ADC 4 ADC-XF1	70	80	90	90	107	107	115
ADC 4 ADC-XF0	70	80	90	90	107	107	115
ADC 5 Intake	56	62	75	63	83	76	95
ADC 5 Exhaust	56	62	75	63	83	76	95
ADC 5 ADC-XF1	70	80	90	90	107	107	115
ADC 5 ADC-XF0	70	80	90	90	107	107	115
ADC 6 Intake	56	62	75	63	83	76	95
ADC 6 Exhaust	56	62	75	63	83	76	95
ADC 6 ADC-XF1	70	80	90	90	107	107	115
ADC 6 ADC-XF0	70	80	90	90	107	107	115
ADC 7 Intake	56	62	75	63	83	76	95
ADC 7 Exhaust	56	62	75	63	83	76	95
ADC 7 ADC-XF1	70	80	90	90	107	107	115
ADC 7 ADC-XF0	70	80	90	90	107	107	115
ADC 8 Intake	56	62	75	63	83	76	95
ADC 8 Exhaust	56	62	75	63	83	76	95
ADC 8 ADC-XF1	70	80	90	90	107	107	115
ADC 8 ADC-XF0	70	80	90	90	107	107	115
ADC 9 Intake	56	62	75	63	83	76	95
ADC 9 Exhaust	56	62	75	63	83	76	95
ADC 9 ADC-XF1	70	80	90	90	107	107	115
ADC 9 ADC-XF0	70	80	90	90	107	107	115

show chassis temperature-thresholds (MX2020 Router)

```

user@host> show chassis temperature-thresholds
Fan speed      Yellow alarm    Red alarm      Fire Shutdown
(degrees C)    (degrees C)    (degrees C)    (degrees C)

```


Item	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal
Routing Engine 0	70	80	95	95	110	110	112
Routing Engine 1	70	80	95	95	110	110	112
CB 0 IntakeA-Zone0	60	65	78	75	85	80	95
CB 0 IntakeB-Zone1	60	65	78	75	85	80	95
CB 0 IntakeC-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustA-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 0 TCBC-Zone0	60	65	78	75	85	80	95
CB 1 IntakeA-Zone0	60	65	78	75	85	80	95
CB 1 IntakeB-Zone1	60	65	78	75	85	80	95
CB 1 IntakeC-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustA-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 1 TCBC-Zone0	60	65	78	75	85	80	95
SPMB 0 Intake	56	62	75	63	83	76	95
SPMB 1 Intake	56	62	75	63	83	76	95
SFB 0 Intake-Zone0	56	62	75	63	82	70	87
SFB 0 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 0 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 0 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 0 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 0 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 0 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 0 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 1 Intake-Zone0	56	62	75	63	82	70	87
SFB 1 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 1 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 1 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 1 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 1 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 1 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 1 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 2 Intake-Zone0	56	62	75	63	82	70	87
SFB 2 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 2 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 2 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 2 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 2 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 2 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 2 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 3 Intake-Zone0	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 3 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 3 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 3 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 3 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 3 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 4 Intake-Zone0	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 4 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 4 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 4 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 4 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 4 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 5 Intake-Zone0	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 5 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 5 IntakeB-Zone1	56	62	75	63	82	70	87

SFB 5 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 5 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 5 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 5 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 6 Intake-Zone0	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 6 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 6 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 6 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 6 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 6 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 7 Intake-Zone0	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 7 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 7 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 7 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 7 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 7 SFB-XF0-Zone0	70	80	90	90	107	107	115
FPC 0	55	60	75	65	90	80	95
FPC 1	55	60	75	65	90	80	95
FPC 2	55	60	75	65	90	80	95
FPC 3	55	60	75	65	90	80	95
FPC 4	55	60	75	65	90	80	95
FPC 5	55	60	75	65	90	80	95
FPC 6	55	60	75	65	90	80	95
FPC 7	55	60	75	65	90	80	95
FPC 8	55	60	75	65	90	80	95
FPC 9	55	60	75	65	90	80	95
FPC 10	55	60	75	65	90	80	95
FPC 11	55	60	75	65	90	80	95
FPC 12	55	60	75	65	90	80	95
FPC 13	55	60	75	65	90	80	95
FPC 14	55	60	75	65	90	80	95
FPC 15	55	60	75	65	90	80	95
FPC 16	55	60	75	65	90	80	95
FPC 17	55	60	75	65	90	80	95
FPC 18	55	60	75	65	90	80	95
FPC 19	55	60	75	65	90	80	95
ADC 0 Intake	56	62	75	63	83	76	95
ADC 0 Exhaust	56	62	75	63	83	76	95
ADC 0 ADC-XF1	70	80	90	90	107	107	115
ADC 0 ADC-XF0	70	80	90	90	107	107	115
ADC 1 Intake	56	62	75	63	83	76	95
ADC 1 Exhaust	56	62	75	63	83	76	95
ADC 1 ADC-XF1	70	80	90	90	107	107	115
ADC 1 ADC-XF0	70	80	90	90	107	107	115
ADC 2 Intake	56	62	75	63	83	76	95
ADC 2 Exhaust	56	62	75	63	83	76	95
ADC 2 ADC-XF1	70	80	90	90	107	107	115
ADC 2 ADC-XF0	70	80	90	90	107	107	115
ADC 3 Intake	56	62	75	63	83	76	95
ADC 3 Exhaust	56	62	75	63	83	76	95
ADC 3 ADC-XF1	70	80	90	90	107	107	115
ADC 3 ADC-XF0	70	80	90	90	107	107	115
ADC 4 Intake	56	62	75	63	83	76	95
ADC 4 Exhaust	56	62	75	63	83	76	95
ADC 4 ADC-XF1	70	80	90	90	107	107	115
ADC 4 ADC-XF0	70	80	90	90	107	107	115
ADC 5 Intake	56	62	75	63	83	76	95

ADC 5 Exhaust	56	62	75	63	83	76	95
ADC 5 ADC-XF1	70	80	90	90	107	107	115
ADC 5 ADC-XF0	70	80	90	90	107	107	115
ADC 6 Intake	56	62	75	63	83	76	95
ADC 6 Exhaust	56	62	75	63	83	76	95
ADC 6 ADC-XF1	70	80	90	90	107	107	115
ADC 6 ADC-XF0	70	80	90	90	107	107	115
ADC 7 Intake	56	62	75	63	83	76	95
ADC 7 Exhaust	56	62	75	63	83	76	95
ADC 7 ADC-XF1	70	80	90	90	107	107	115
ADC 7 ADC-XF0	70	80	90	90	107	107	115
ADC 8 Intake	56	62	75	63	83	76	95
ADC 8 Exhaust	56	62	75	63	83	76	95
ADC 8 ADC-XF1	70	80	90	90	107	107	115
ADC 8 ADC-XF0	70	80	90	90	107	107	115
ADC 9 Intake	56	62	75	63	83	76	95
ADC 9 Exhaust	56	62	75	63	83	76	95
ADC 9 ADC-XF1	70	80	90	90	107	107	115
ADC 9 ADC-XF0	70	80	90	90	107	107	115
ADC 10 Intake	56	62	75	63	83	76	95
ADC 10 Exhaust	56	62	75	63	83	76	95
ADC 10 ADC-XF1	70	80	90	90	107	107	115
ADC 10 ADC-XF0	70	80	90	90	107	107	115
ADC 11 Intake	56	62	75	63	83	76	95
ADC 11 Exhaust	56	62	75	63	83	76	95
ADC 11 ADC-XF1	70	80	90	90	107	107	115
ADC 11 ADC-XF0	70	80	90	90	107	107	115
ADC 12 Intake	56	62	75	63	83	76	95
ADC 12 Exhaust	56	62	75	63	83	76	95
ADC 12 ADC-XF1	70	80	90	90	107	107	115
ADC 12 ADC-XF0	70	80	90	90	107	107	115
ADC 13 Intake	56	62	75	63	83	76	95
ADC 13 Exhaust	56	62	75	63	83	76	95
ADC 13 ADC-XF1	70	80	90	90	107	107	115
ADC 13 ADC-XF0	70	80	90	90	107	107	115
ADC 14 Intake	56	62	75	63	83	76	95
ADC 14 Exhaust	56	62	75	63	83	76	95
ADC 14 ADC-XF1	70	80	90	90	107	107	115
ADC 14 ADC-XF0	70	80	90	90	107	107	115
ADC 15 Intake	56	62	75	63	83	76	95
ADC 15 Exhaust	56	62	75	63	83	76	95
ADC 15 ADC-XF1	70	80	90	90	107	107	115
ADC 15 ADC-XF0	70	80	90	90	107	107	115
ADC 16 Intake	56	62	75	63	83	76	95
ADC 16 Exhaust	56	62	75	63	83	76	95
ADC 16 ADC-XF1	70	80	90	90	107	107	115
ADC 16 ADC-XF0	70	80	90	90	107	107	115
ADC 17 Intake	56	62	75	63	83	76	95
ADC 17 Exhaust	56	62	75	63	83	76	95
ADC 17 ADC-XF1	70	80	90	90	107	107	115
ADC 17 ADC-XF0	70	80	90	90	107	107	115
ADC 18 Intake	56	62	75	63	83	76	95
ADC 18 Exhaust	56	62	75	63	83	76	95
ADC 18 ADC-XF1	70	80	90	90	107	107	115
ADC 18 ADC-XF0	70	80	90	90	107	107	115
ADC 19 Intake	56	62	75	63	83	76	95
ADC 19 Exhaust	56	62	75	63	83	76	95
ADC 19 ADC-XF1	70	80	90	90	107	107	115
ADC 19 ADC-XF0	70	80	90	90	107	107	115

show chassis temperature-thresholds (MX2020 Router with MPC4E)

```

user@host> show chassis temperature-thresholds

```

	Fan speed	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)		(degrees C)
Item		Normal	High	Normal	Bad fan	Normal	Bad fan	Normal
Routing Engine 0		70	80	95	95	110	110	112
Routing Engine 1		70	80	95	95	110	110	112
CB 0 IntakeA-Zone0		60	65	78	75	85	80	95
CB 0 IntakeB-Zone1		60	65	78	75	85	80	95
CB 0 IntakeC-Zone0		60	65	78	75	85	80	95
CB 0 ExhaustA-Zone0		60	65	78	75	85	80	95
CB 0 ExhaustB-Zone1		60	65	78	75	85	80	95
CB 0 TCBC-Zone0		60	65	78	75	85	80	95
CB 1 IntakeA-Zone0		60	65	78	75	85	80	95
CB 1 IntakeB-Zone1		60	65	78	75	85	80	95
CB 1 IntakeC-Zone0		60	65	78	75	85	80	95
CB 1 ExhaustA-Zone0		60	65	78	75	85	80	95
CB 1 ExhaustB-Zone1		60	65	78	75	85	80	95
CB 1 TCBC-Zone0		60	65	78	75	85	80	95
SPMB 0 Intake		56	62	75	63	83	76	95
SPMB 1 Intake		56	62	75	63	83	76	95
SFB 0 Intake-Zone0		56	62	70	70	85	85	89
SFB 0 Exhaust-Zone1		56	62	70	70	85	85	89
SFB 0 IntakeA-Zone0		56	62	70	70	85	85	89
SFB 0 IntakeB-Zone1		56	62	70	70	85	85	89
SFB 0 Exhaust-Zone0		56	62	70	70	85	85	89
SFB 0 SFB-XF2-Zone1		70	75	90	85	95	90	100
SFB 0 SFB-XF1-Zone0		70	75	90	85	95	90	100
SFB 0 SFB-XF0-Zone0		70	75	90	85	95	90	100
SFB 1 Intake-Zone0		56	62	70	70	85	85	89
SFB 1 Exhaust-Zone1		56	62	70	70	85	85	89
SFB 1 IntakeA-Zone0		56	62	70	70	85	85	89
SFB 1 IntakeB-Zone1		56	62	70	70	85	85	89
SFB 1 Exhaust-Zone0		56	62	70	70	85	85	89
SFB 1 SFB-XF2-Zone1		70	75	90	85	95	90	100
SFB 1 SFB-XF1-Zone0		70	75	90	85	95	90	100
SFB 1 SFB-XF0-Zone0		70	75	90	85	95	90	100
SFB 2 Intake-Zone0		56	62	70	70	85	85	89
SFB 2 Exhaust-Zone1		56	62	70	70	85	85	89
SFB 2 IntakeA-Zone0		56	62	70	70	85	85	89
SFB 2 IntakeB-Zone1		56	62	70	70	85	85	89
SFB 2 Exhaust-Zone0		56	62	70	70	85	85	89
SFB 2 SFB-XF2-Zone1		70	75	90	85	95	90	100
SFB 2 SFB-XF1-Zone0		70	75	90	85	95	90	100
SFB 2 SFB-XF0-Zone0		70	75	90	85	95	90	100
SFB 3 Intake-Zone0		56	62	70	70	85	85	89
SFB 3 Exhaust-Zone1		56	62	70	70	85	85	89
SFB 3 IntakeA-Zone0		56	62	70	70	85	85	89
SFB 3 IntakeB-Zone1		56	62	70	70	85	85	89
SFB 3 Exhaust-Zone0		56	62	70	70	85	85	89
SFB 3 SFB-XF2-Zone1		70	75	90	85	95	90	100
SFB 3 SFB-XF1-Zone0		70	75	90	85	95	90	100
SFB 3 SFB-XF0-Zone0		70	75	90	85	95	90	100
SFB 4 Intake-Zone0		56	62	70	70	85	85	89
SFB 4 Exhaust-Zone1		56	62	70	70	85	85	89
SFB 4 IntakeA-Zone0		56	62	70	70	85	85	89
SFB 4 IntakeB-Zone1		56	62	70	70	85	85	89
SFB 4 Exhaust-Zone0		56	62	70	70	85	85	89
SFB 4 SFB-XF2-Zone1		70	75	90	85	95	90	100

SFB 4 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 4 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 5 Intake-Zone0	56	62	70	70	85	85	89
SFB 5 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 5 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 5 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 5 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 5 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 5 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 5 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 6 Intake-Zone0	56	62	70	70	85	85	89
SFB 6 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 6 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 6 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 6 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 6 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 6 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 6 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 7 Intake-Zone0	56	62	70	70	85	85	89
SFB 7 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 7 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 7 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 7 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 7 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 7 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 7 SFB-XF0-Zone0	70	75	90	85	95	90	100
FPC 0	55	60	75	65	90	80	95
FPC 9	55	60	75	65	90	80	95
FPC 10	55	60	75	65	90	80	95
FPC 14	55	60	75	65	95	80	100
FPC 19	55	60	75	65	90	80	95
ADC 0 Intake	50	55	60	60	65	65	80
ADC 0 Exhaust	50	55	60	60	65	65	80
ADC 0 ADC-XF1	70	75	90	85	95	90	100
ADC 0 ADC-XF0	70	75	90	85	95	90	100
ADC 9 Intake	50	55	60	60	65	65	80
ADC 9 Exhaust	50	55	60	60	65	65	80
ADC 9 ADC-XF1	70	75	90	85	95	90	100
ADC 9 ADC-XF0	70	75	90	85	95	90	100
ADC 10 Intake	50	55	60	60	65	65	80
ADC 10 Exhaust	50	55	60	60	65	65	80
ADC 10 ADC-XF1	70	75	90	85	95	90	100
ADC 10 ADC-XF0	70	75	90	85	95	90	100
ADC 14 Intake	50	55	60	60	65	65	80
ADC 14 Exhaust	50	55	60	60	65	65	80
ADC 14 ADC-XF1	70	75	90	85	95	90	100
ADC 14 ADC-XF0	70	75	90	85	95	90	100
ADC 19 Intake	50	55	60	60	65	65	80
ADC 19 Exhaust	50	55	60	60	65	65	80
ADC 19 ADC-XF1	70	75	90	85	95	90	100
ADC 19 ADC-XF0	70	75	90	85	95	90	100

show chassis temperature-thresholds (T4000 Core Routers)

```
user@host> show chassis temperature-thresholds
```

	Fan speed		Yellow alarm		Red alarm		Fire Shutdown
Item	(degrees C)		(degrees C)		(degrees C)		(degrees C)
	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal
Chassis default	48	54	65	55	75	65	100

Routing Engine 0	55	65	85	85	100	100	102
Routing Engine 1	55	65	85	85	100	100	102
FPC 0	63	68	75	70	90	83	95
FPC 3	63	68	75	70	90	83	95
FPC 5	56	62	75	63	83	76	95
FPC 6	63	68	75	70	90	83	95
SIB 0	64	70	76	72	87	84	95
SIB 1	64	70	76	72	87	84	95
SIB 2	64	70	76	72	87	84	95
SIB 3	64	70	76	72	87	84	95
SIB 4	64	70	76	72	87	84	95

show chassis temperature-thresholds (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds
sfc0-re0:
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
SIB F13 0	64	70	76	72	90	84
SIB F13 3	64	70	76	72	90	84
SIB F13 6	64	70	76	72	90	84
SIB F13 8	64	70	76	72	90	84
SIB F13 11	64	70	76	72	90	84
SIB F13 12	64	70	76	72	90	84
SIB F2S 16	64	70	76	72	90	84
SIB F2S 17	64	70	76	72	90	84
SIB F2S 18	64	70	76	72	90	84
SIB F2S 19	64	70	76	72	90	84
SIB F2S 20	64	70	76	72	90	84
SIB F2S 21	64	70	76	72	90	84
SIB F2S 22	64	70	76	72	90	84
SIB F2S 23	64	70	76	72	90	84
SIB F2S 24	64	70	76	72	90	84
SIB F2S 25	64	70	76	72	90	84
SIB F2S 26	64	70	76	72	90	84
SIB F2S 27	64	70	76	72	90	84
SIB F2S 28	64	70	76	72	90	84
SIB F2S 29	64	70	76	72	90	84
SIB F2S 30	64	70	76	72	90	84
SIB F2S 31	64	70	76	72	90	84
SIB F2S 32	64	70	76	72	90	84
SIB F2S 33	64	70	76	72	90	84
SIB F2S 34	64	70	76	72	90	84
SIB F2S 35	64	70	76	72	90	84

```
lcc0-re0:
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
FPC 1	56	62	75	63	83	76
FPC 3	56	62	75	63	83	76
FPC 4	56	62	75	63	83	76

FPC 6	56	62	75	63	83	76
FPC 7	56	62	75	63	83	76
SIB 0	48	54	65	60	80	75
SIB 1	48	54	65	60	80	75
SIB 2	48	54	65	60	80	75
SIB 3	48	54	65	60	80	75
SIB 4	48	54	65	60	80	75

lcc1-re0:

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
FPC 1	56	62	75	63	83	76
FPC 3	56	62	75	63	83	76
FPC 4	56	62	75	63	83	76
FPC 6	56	62	75	63	83	76
...						

show chassis temperature-thresholds lcc (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds lcc 1
lcc1-re0:
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
FPC 1	56	62	75	63	83	76
FPC 3	56	62	75	63	83	76
FPC 4	56	62	75	63	83	76
FPC 6	56	62	75	63	83	76
SIB 0	48	54	65	60	80	75
SIB 1	48	54	65	60	80	75
SIB 2	48	54	65	60	80	75
SIB 3	48	54	65	60	80	75
SIB 4	48	54	65	60	80	75

show chassis temperature-thresholds sfc (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds sfc 0
sfc0-re0:
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
SIB F13 0	64	70	76	72	90	84
SIB F13 3	64	70	76	72	90	84
SIB F13 6	64	70	76	72	90	84
SIB F13 8	64	70	76	72	90	84
SIB F13 11	64	70	76	72	90	84
SIB F13 12	64	70	76	72	90	84
SIB F2S 16	64	70	76	72	90	84

SIB F2S 17	64	70	76	72	90	84
SIB F2S 18	64	70	76	72	90	84
SIB F2S 19	64	70	76	72	90	84
SIB F2S 20	64	70	76	72	90	84
SIB F2S 21	64	70	76	72	90	84
SIB F2S 22	64	70	76	72	90	84
SIB F2S 23	64	70	76	72	90	84
SIB F2S 24	64	70	76	72	90	84
SIB F2S 25	64	70	76	72	90	84
SIB F2S 26	64	70	76	72	90	84
SIB F2S 27	64	70	76	72	90	84
SIB F2S 28	64	70	76	72	90	84
SIB F2S 29	64	70	76	72	90	84
SIB F2S 30	64	70	76	72	90	84
SIB F2S 31	64	70	76	72	90	84
SIB F2S 32	64	70	76	72	90	84
SIB F2S 33	64	70	76	72	90	84
SIB F2S 34	64	70	76	72	90	84
SIB F2S 35	64	70	76	72	90	84

show chassis temperature-thresholds (TX Matrix Plus routers with 3D SIBs)

```
user@host> show chassis temperature-thresholds
sfc0-re0:
```

Shutdown (degrees C) Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Chassis default	48	54	65	55	75	65	
100							
Routing Engine 0	70	75	90	87	102	97	
115							
Routing Engine 1	70	75	90	87	102	97	
115							
SIB F13 0 Board	60	65	78	75	85	80	
95							
SIB F13 0 XF Junction	70	75	82	74	105	100	
107							
SIB F13 4 Board	60	65	78	75	85	80	
95							
SIB F13 4 XF Junction	70	75	82	74	105	100	
107							
SIB F13 6 Board	60	65	78	75	85	80	
95							
SIB F13 6 XF Junction	70	75	82	74	105	100	
107							
SIB F2S 16 Board	60	65	78	75	85	80	
95							
SIB F2S 16 XF Junction	70	75	82	74	105	100	
107							
SIB F2S 17 Board	60	65	78	75	85	80	
95							
SIB F2S 17 XF Junction	70	75	82	74	105	100	
107							
SIB F2S 18 Board	60	65	78	75	85	80	
95							
SIB F2S 18 XF Junction	70	75	82	74	105	100	
107							

SIB F2S 19 Board 95	60	65	78	75	85	80
SIB F2S 19 XF Junction 107	70	75	82	74	105	100
SIB F2S 24 Board 95	60	65	78	75	85	80
SIB F2S 24 XF Junction 107	70	75	82	74	105	100
SIB F2S 25 Board 95	60	65	78	75	85	80
SIB F2S 25 XF Junction 107	70	75	82	74	105	100
SIB F2S 26 Board 95	60	65	78	75	85	80
SIB F2S 26 XF Junction 107	70	75	82	74	105	100
SIB F2S 27 Board 95	60	65	78	75	85	80
SIB F2S 27 XF Junction 107	70	75	82	74	105	100

lcc0-re0:

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Chassis default 100	48	54	65	55	75	65	
Routing Engine 0 102	55	65	85	85	100	100	
FPC 0 95	63	68	75	70	90	83	
FPC 1 95	56	62	75	63	83	76	
FPC 7 95	56	62	75	63	83	76	
SIB 0 95	64	70	76	72	87	84	
SIB 0 ASIC Junction 107	63	68	75	70	105	100	
SIB 2 95	64	70	76	72	87	84	
SIB 2 ASIC Junction 107	63	68	75	70	105	100	
SIB 3 95	64	70	76	72	87	84	
SIB 3 ASIC Junction 107	63	68	75	70	105	100	

show chassis temperature-thresholds (QFX3500 Switch and QFX3600)

user@switch> show chassis temperature-thresholds

Item	Fan speed		Yellow alarm		Red alarm	
	(degrees C)		(degrees C)		(degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Normal						
FPC Sensor TopLeft I	48	56	53	43	56	46
FPC Sensor TopRight I	46	54	51	41	54	44

FPC Sensor TopLeft E	58	65	62	52	65	55
FPC Sensor TopRight E	56	64	61	51	64	54
FPC Sensor TopMiddle I	58	64	61	51	64	54
FPC Sensor TopMiddle E	67	74	71	61	74	64
FPC Sensor Bottom I	59	67	64	54	67	57
FPC Sensor Bottom E	66	73	70	60	73	63
FPC Sensor Die Temp	69	75	72	62	75	65
FPC Sensor Mgmt Brd I	46	54	51	41	54	44
FPC Sensor Switch I	56	63	60	50	63	53

show chassis temperature-thresholds interconnect-device (QFabric System)

```

user@switch> show chassis temperature-thresholds interconnect-device interconnect1
temperature-thresholds interconnect-device interconnect1

```

Item	Fan speed		Yellow alarm		Red alarm	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65

show chassis temperature-thresholds (PTX5000 Packet Transport Router)

```

user@switch> show chassis temperature-thresholds
user@switch> show chassis temperature-thresholds

```

Shutdown (degrees C) Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Routing Engine 0	80	90	95	85	105	95	
115							
CB 0 Exhaust A	60	65	78	75	85	80	
95							
CB 0 Exhaust B	60	65	78	75	85	80	
95							
CB 1 Exhaust A	60	65	78	75	85	80	
95							
CB 1 Exhaust B	60	65	78	75	85	80	
95							
FPC 3 Exhaust A	80	90	95	85	105	95	
115							
FPC 3 Exhaust B	80	90	95	85	105	95	
115							
FPC 3 TL5	80	90	95	85	105	95	
115							
FPC 3 TQ5	80	90	95	85	105	95	
115							
FPC 3 TL6	80	90	95	85	105	95	
115							
FPC 3 TQ6	80	90	95	85	105	95	
115							
FPC 3 TL1	80	90	95	85	105	95	
115							
FPC 3 TQ1	80	90	95	85	105	95	
115							
FPC 3 TL2	80	90	95	85	105	95	
115							
FPC 3 TQ2	80	90	95	85	105	95	
115							
FPC 3 TL4	80	90	95	85	105	95	
115							

FPC 3 TQ4	80	90	95	85	105	95
115						
FPC 3 TL7	80	90	95	85	105	95
115						
FPC 3 TQ7	80	90	95	85	105	95
115						
FPC 3 TL0	80	90	95	85	105	95
115						
FPC 3 TQ0	80	90	95	85	105	95
115						
FPC 3 TL3	80	90	95	85	105	95
115						
FPC 3 TQ3	80	90	95	85	105	95
115						
SIB 0 Exhaust	60	65	78	75	85	80
95						
SIB 0 Junction	75	80	90	85	105	95
115						
SIB 1 Exhaust	60	65	78	75	85	80
95						
SIB 1 Junction	75	80	90	85	105	95
115						
SIB 2 Exhaust	60	65	78	75	85	80
95						
SIB 2 Junction	75	80	90	85	105	95
115						
SIB 3 Exhaust	60	65	78	75	85	80
95						
SIB 3 Junction	75	80	90	85	105	95
115						
SIB 4 Exhaust	60	65	78	75	85	80
95						
SIB 4 Junction	75	80	90	85	105	95
115						
SIB 5 Exhaust	60	65	78	75	85	80
95						
SIB 5 Junction	75	80	90	85	105	95
115						
SIB 6 Exhaust	60	65	78	75	85	80
95						
SIB 6 Junction	75	80	90	85	105	95
115						
SIB 7 Exhaust	60	65	78	75	85	80
95						
SIB 7 Junction	75	80	90	85	105	95
115						
SIB 8 Exhaust	60	65	78	75	85	80
95						
SIB 8 Junction	75	80	90	85	105	95
115						

show chassis temperature-thresholds (MX Routers with Media Services Blade [MSB])

```

user@switch> show chassis temperature-thresholds
Fan speed      Yellow alarm    Red alarm      Fire Shutdown
(degrees C)    (degrees C)    (degrees C)    (degrees C)
Item           Normal High   Normal Bad fan Normal Bad fan
Normal

```

Chassis default	48	54	65	55	75	65
100						
Routing Engine 0	70	80	95	95	110	110
112						
Routing Engine 1	70	80	95	95	110	110
112						
FPC 0	55	60	75	65	90	80
95						
FPC 1	55	60	75	65	90	80
95						
FPC 2	55	60	75	65	90	80
95						
FPC 4	55	60	75	65	90	80
95						
FPC 5	55	60	75	65	90	80
95						

show chassis zones

List of Syntax	Syntax on page 1023 Syntax (QFX Series) on page 1023
Syntax	show chassis zones <detail>
Syntax (QFX Series)	show chassis zones <detail> <interconnect-device <i>name</i> >
Release Information	<p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p>
Description	<p>(QFabric systems only) Display the status of the two cooling system zones on the Interconnect device. Zone 1 consists of eight (0 – 7) front cards, which are cooled by two fan trays. Zone 2 consists of two control boards and eight rear cards, which are cooled by eight (0 – 7) fan trays. On MX2010 and MX2020 routers, display the status of the cooling system zones of the chassis. Zone 0 consists of the Control Board, ten (0–9) FPCs, and their respective PICs, Switch Fabric Boards, and Adapter Cards. Zone 1 consists of the Routing Engine, Control Board, and Switch Processor Mezzanine Boards.</p>
Options	<p>detail—(MX2010 and MX2020 routers only) (Optional) Display detailed status of the cooling system zones.</p> <p>detail <i>device-name</i>— (QFabric systems only) (Optional) Display detailed status of the two cooling systems on the Interconnect device.</p> <p>interconnect-device <i>name</i>— (QFabric systems only) (Optional) Display the status of the cooling zones on the Interconnect device.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • request chassis beacon on page 383 • show chassis fan on page 696 • show chassis temperature-thresholds on page 1004
List of Sample Output	show chassis zones interconnect-device (QFabric System) on page 1024 show chassis zones (MX2010 Router) on page 1024 show chassis zones detail (MX2010 Router) on page 1025 show chassis zones (MX2020 Router) on page 1026 show chassis zones detail (MX2020 Router) on page 1026 show chassis beacon interconnect-device (QFabric System) on page 1027 show chassis beacon interconnect-device fpc (QFabric System) on page 1028 show chassis beacon node-device (QFabric System) on page 1028 show chassis beacon node-device fpc (QFabric System) on page 1028

Output Fields Table 34 on page 590 lists the output fields for the **show chassis zones** command. Output fields are listed in the approximate order in which they appear.

Table 51: show chassis zones Output Fields

Field Name	Field Description
Slot	FPC slot number of the device whose content is being displayed. On QFX3500 standalone switches, the number is always 0.
Beacon State	Status of the beacon state: <ul style="list-style-type: none"> Off—The beacon is OFF. On—The beacon is ON.
show chassis zones command output fields for MX2020 and MX2010 routers:	
Driving FRU	Field replaceable unit (FRU).
Temperature	Temperature of the specified FRU in degrees Celsius and degrees Fahrenheit.
Condition	Condition of the specified FRU. Condition can be HIGH TEMP , WARM TEMP , OK , and Offline .
Num Fans Missing	Number of fans or fan trays missing.
Num Fans Failed	Number of fans or fan trays that have failed.
Fan Duty Cycle	Fan duty cycle value.
show chassis zones detail command output fields for MX2020 and MX2010 routers:	
Item	Chassis component: <ul style="list-style-type: none"> Information about the chassis, Routing Engines, Control Boards (CBs), Switch Fabric Boards (SFBs), PICs, Flexible PIC Concentrators (FPCs), and Adapter Cards (ADCs).
Measurement	Fan tray speed utilization in percentage.
Status	Status of the specified item. Status can be OK , Absent , or Offline .

Sample Output

show chassis zones interconnect-device (QFabric System)

```
user@switch> show chassis zones interconnect-device interconnect1
Slot          Beacon State
FPC           0          OFF
```

show chassis zones (MX2010 Router)

```
user@host> show chassis zones
```

```

ZONE 0 Status
  Driving FRU          FPC 6
  Temperature          81 degrees C / 177 degrees F
  Condition            HIGH TEMP
  Num Fans Missing     0
  Num Fans Failed      0
  Fan Duty Cycle       30

ZONE 1 Status
  Driving FRU          SFB 0 Exhaust-Zone1
  Temperature          71 degrees C / 159 degrees F
  Condition            WARM TEMP
  Num Fans Missing     0
  Num Fans Failed      0
  Fan Duty Cycle       30

```

show chassis zones detail (MX2010 Router)

```

user@host > show chassis zones
ZONE 0 Status
Item              Status              Measurement
CB 0              WARM TEMP
CB 1              WARM TEMP
FPC 0             HIGH TEMP
FPC 1             HIGH TEMP
FPC 2             WARM TEMP
FPC 3             HIGH TEMP
FPC 4             HIGH TEMP
FPC 5             HIGH TEMP
FPC 6             HIGH TEMP
FPC 7             HIGH TEMP
FPC 8             HIGH TEMP
FPC 9             HIGH TEMP
ADC 0             WARM TEMP
ADC 1             WARM TEMP
ADC 2             WARM TEMP
ADC 3             WARM TEMP
ADC 4             WARM TEMP
ADC 5             WARM TEMP
ADC 6             WARM TEMP
ADC 7             WARM TEMP
ADC 8             WARM TEMP
ADC 9             WARM TEMP
SFB 0             WARM TEMP
SFB 1             WARM TEMP
SFB 2             WARM TEMP
SFB 3             Offline
SFB 4             HIGH TEMP
SFB 5             WARM TEMP
SFB 6             HIGH TEMP
SFB 7             WARM TEMP
Fan Tray 0        OK                  Spinning at 98% fan tray speed
Fan Tray 1        OK                  Spinning at 98% fan tray speed

ZONE 1 Status
Item              Status              Measurement
CB 0              WARM TEMP
CB 1              WARM TEMP
Routing Engine 0  OK
Routing Engine 1  OK
SFB 0             WARM TEMP

```

SFB 1	WARM TEMP	
SFB 2	WARM TEMP	
SFB 3	Offline	
SFB 4	HIGH TEMP	
SFB 5	WARM TEMP	
SFB 6	HIGH TEMP	
SFB 7	WARM TEMP	
SPMB 0	OK	
SPMB 1	OK	
Fan Tray 2	OK	Spinning at 64% fan tray speed
Fan Tray 3	OK	Spinning at 64% fan tray speed

show chassis zones (MX2020 Router)

```

user@host> show chassis zones
ZONE 0 Status
  Driving FRU          FPC 0
  Temperature          31 degrees C / 87 degrees F
  Condition            OK
  Num Fans Missing     0
  Num Fans Failed      0
  Fan Duty Cycle       30

ZONE 1 Status
  Driving FRU          FPC 19
  Temperature          32 degrees C / 89 degrees F
  Condition            OK
  Num Fans Missing     0
  Num Fans Failed      0
  Fan Duty Cycle       30
  
```

show chassis zones detail (MX2020 Router)

```

user@host> show chassis zones detail
ZONE 0 Status
Item              Status          Measurement
CB 0              OK
CB 1              OK
FPC 0             OK
FPC 1             OK
FPC 2             OK
FPC 3             OK
FPC 4             OK
FPC 5             OK
FPC 6             OK
FPC 7             OK
FPC 8             OK
FPC 9             OK
ADC 0             OK
ADC 1             OK
ADC 2             OK
ADC 3             OK
ADC 4             OK
ADC 5             OK
ADC 6             OK
ADC 7             OK
ADC 8             OK
ADC 9             OK
SFB 0             OK
SFB 1             OK
SFB 2             OK
  
```


SFB 3	OK	
SFB 4	OK	
SFB 5	OK	
SFB 6	OK	
SFB 7	OK	
Fan Tray 0	OK	Spinning at 38% fan tray speed
Fan Tray 1	OK	Spinning at 37% fan tray speed

ZONE 1 Status

Item	Status	Measurement
CB 0	OK	
CB 1	OK	
Routing Engine 0	OK	
Routing Engine 1	OK	
FPC 10	OK	
FPC 11	OK	
FPC 12	OK	
FPC 13	OK	
FPC 14	OK	
FPC 15	OK	
FPC 16	OK	
FPC 17	OK	
FPC 18	OK	
FPC 19	OK	
ADC 10	OK	
ADC 11	OK	
ADC 12	OK	
ADC 13	OK	
ADC 14	OK	
ADC 15	OK	
ADC 16	OK	
ADC 17	OK	
ADC 18	OK	
ADC 19	OK	
SFB 0	OK	
SFB 1	OK	
SFB 2	OK	
SFB 3	OK	
SFB 4	OK	
SFB 5	OK	
SFB 6	OK	
SFB 7	OK	
SPMB 0	OK	
SPMB 1	OK	
Fan Tray 2	OK	Spinning at 38% fan tray speed
Fan Tray 3	OK	Spinning at 38% fan tray speed

show chassis beacon interconnect-device (QFabric System)

```

user@switch> show chassis beacon interconnect-device interconnect1
Chassis          OFF
CB 0             OFF
CB 1             OFF
FC 0 FPC 0       OFF
FC 1 FPC 1       OFF
RC 0 FPC 8       OFF
RC 1 FPC 9       OFF

```

show chassis beacon interconnect-device fpc (QFabric System)

```
user@switch> show chassis beacon interconnect-device interconnect1 fpc 0
FPC 0                                ON
```

show chassis beacon node-device (QFabric System)

```
user@switch> show chassis beacon node-device node1
node1                                ON
```

show chassis beacon node-device fpc (QFabric System)

```
user@switch> show chassis beacon node-device node1 fpc 0
FPC 0                                ON
```

show host

Syntax	<code>show host <i>hostname</i></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display Domain Name System (DNS) hostname information.
Options	<i>hostname</i> —Hostname or address.
Additional Information	The <code>show host</code> command displays the raw data received from the DNS server.
Required Privilege Level	view
List of Sample Output	show host on page 1029

Sample Output

show host

```
user@host> show host snark
snark.boojum.net has address 192.168.1.254

user@host> show host 192.168.1.254
Name: snark.boojum.net
Address: 192.168.1.254
Aliases:
```

show interfaces diagnostics optics

Syntax	<code>show interfaces diagnostics optics <i>interface-name</i></code>
Release Information	Command introduced in Junos OS Release 11.1 for the QFX Series.
Description	<p>Display diagnostics data and alarms for Gigabit Ethernet, 10-Gigabit Ethernet, and QSFP+ optical transceivers installed in a QFX Series product. The information provided by this command is known as digital optical monitoring (DOM) information.</p> <p>Thresholds that trigger a high alarm, low alarm, high warning, or low warning are set by the transponder vendors. Generally, a high alarm or low alarm indicates that the optics module is not operating properly. This information can be used to diagnose why a transceiver is not working.</p>
Options	<i>interface-name</i> —Name of the interface associated with the port in which the transceiver is installed.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Monitoring Interface Status and Traffic on page 199 • <i>Installing a Transceiver in a QFX Series Device</i> • <i>Removing a Transceiver from a QFX Series Device</i> • <i>Junos OS Network Interfaces Library for Routing Devices</i>
List of Sample Output	show interfaces diagnostics optics xe-0/0/1 (SFP+ Transceiver) on page 1034 show interfaces diagnostics optics node1:xe-0/0/1 (SFP+ Transceiver) on page 1035
Output Fields	lists the output fields for the <code>show interfaces diagnostics optics</code> command. Output fields are listed in the approximate order in which they appear.

Table 52: show interfaces diagnostics optics Output Fields

Field Name	Field Description
Physical interface	Displays the name of the physical interface.
Laser bias current	Displays the magnitude of the laser bias power setting current, in milliamperes. The laser bias provides direct modulation of laser diodes and modulates currents.
Laser output power	Displays the laser output power, in milliwatts (mW) and decibels referred to 1.0 mW (dBm).
Module temperature	Displays the temperature, in Celsius and Fahrenheit.
Module voltage	Displays the voltage, in volts.
(Not available for XFP transceivers)	

Table 52: show interfaces diagnostics optics Output Fields (*continued*)

Field Name	Field Description
Laser rx power (Not available for SFP and SFP+ transceivers)	Displays the laser received optical power, in milliwatts (mW) and decibels referred to 1.0 mW (dBm).
Receiver signal average optical power (Not available for XFP transceivers)	Displays the receiver signal average optical power, in milliwatts (mW) and decibels referred to 1.0 mW (dBm).
Laser bias current high alarm	Displays whether the laser bias power setting high alarm is On or Off .
Laser bias current low alarm	Displays whether the laser bias power setting low alarm is On or Off .
Laser bias current high warning	Displays whether the laser bias power setting high warning is On or Off .
Laser bias current low warning	Displays whether the laser bias power setting low warning is On or Off .
Laser output power high alarm	Displays whether the laser output power high alarm is On or Off .
Laser output power low alarm	Displays whether the laser output power low alarm is On or Off .
Laser output power high warning	Displays whether the laser output power high warning is On or Off .
Laser output power low warning	Displays whether the laser output power low warning is On or Off .
Module temperature high alarm	Displays whether the module temperature high alarm is On or Off .
Module temperature low alarm	Displays whether the module temperature low alarm is On or Off .
Module temperature high warning	Displays whether the module temperature high warning is On or Off .
Module temperature low warning	Displays whether the module temperature low warning is On or Off .
Module voltage high alarm (Not available for XFP transceivers)	Displays whether the module voltage high alarm is On or Off .
Module voltage low alarm (Not available for XFP transceivers)	Displays whether the module voltage low alarm is On or Off .
Module voltage high warning (Not available for XFP transceivers)	Displays whether the module voltage high warning is On or Off .
Module voltage low warning (Not available for XFP transceivers)	Displays whether the module voltage low warning is On or Off .
Laser rx power high alarm	Displays whether the receive laser power high alarm is On or Off .

Table 52: show interfaces diagnostics optics Output Fields (*continued*)

Field Name	Field Description
Laser rx power low alarm	Displays whether the receive laser power low alarm is On or Off .
Laser rx power high warning	Displays whether the receive laser power high warning is On or Off .
Laser rx power low warning	Displays whether the receive laser power low warning is On or Off .
Laser bias current high alarm threshold	Displays the vendor-specified threshold for the laser bias current high alarm.
Module not ready alarm (Not available for SFP and SFP+ transceivers)	Displays whether the module not ready alarm is On or Off . When the output is On , the module has an operational fault.
Module power down alarm (Not available for SFP and SFP+ transceivers)	Displays whether the module power down alarm is On or Off . When the output is On , the module is in a limited power mode, low for normal operation.
Tx data not ready alarm (Not available for SFP and SFP+ transceivers)	Any condition leading to invalid data on the transmit path. Displays whether the Tx data not ready alarm is On or Off .
Tx not ready alarm (Not available for SFP and SFP+ transceivers)	Any condition leading to invalid data on the transmit path. Displays whether the Tx not ready alarm is On or Off .
Tx laser fault alarm (Not available for SFP and SFP+ transceivers)	Laser fault condition. Displays whether the Tx laser fault alarm is On or Off .
Tx CDR loss of lock alarm (Not available for SFP and SFP+ transceivers)	Transmit clock and data recovery (CDR) loss of lock. Loss of lock on the transmit side of the CDR. Displays whether the Tx CDR loss of lock alarm is On or Off .
Rx not ready alarm (Not available for SFP and SFP+ transceivers)	Any condition leading to invalid data on the receive path. Displays whether the Rx not ready alarm is On or Off .
Rx loss of signal alarm (Not available for SFP and SFP+ transceivers)	Receive loss of signal alarm. When on , indicates insufficient optical input power to the module. Displays whether the Rx loss of signal alarm is On or Off .
Rx CDR loss of lock alarm (Not available for SFP and SFP+ transceivers)	Receive CDR loss of lock. Loss of lock on the receive side of the CDR. Displays whether the Rx CDR loss of lock alarm is On or Off .
Laser bias current low alarm threshold	Displays the vendor-specified threshold for the laser bias current low alarm.
Laser bias current high warning threshold	Displays the vendor-specified threshold for the laser bias current high warning.

Table 52: show interfaces diagnostics optics Output Fields (*continued*)

Field Name	Field Description
Laser bias current low warning threshold	Displays the vendor-specified threshold for the laser bias current low warning.
Laser output power high alarm threshold	Displays the vendor-specified threshold for the laser output power high alarm.
Laser output power low alarm threshold	Displays the vendor-specified threshold for the laser output power low alarm.
Laser output power high warning threshold	Displays the vendor-specified threshold for the laser output power high warning.
Laser output power low warning threshold	Displays the vendor-specified threshold for the laser output power low warning.
Module temperature high alarm threshold	Displays the vendor-specified threshold for the module temperature high alarm.
Module temperature low alarm threshold	Displays the vendor-specified threshold for the module temperature low alarm.
Module temperature high warning threshold	Displays the vendor-specified threshold for the module temperature high warning.
Module temperature low warning threshold	Displays the vendor-specified threshold for the module temperature low warning.
Module voltage high alarm threshold (Not available for XFP transceivers)	Displays the vendor-specified threshold for the module voltage high alarm.
Module voltage low alarm threshold (Not available for XFP transceivers)	Displays the vendor-specified threshold for the module voltage low alarm.
Module voltage high warning threshold (Not available for XFP transceivers)	Displays the vendor-specified threshold for the module voltage high warning.
Module voltage low warning threshold (Not available for XFP transceivers)	Displays the vendor-specified threshold for the module voltage low warning.
Laser rx power high alarm threshold	Displays the vendor-specified threshold for the laser Rx power high alarm.
Laser rx power low alarm threshold	Displays the vendor-specified threshold for the laser Rx power low alarm.
Laser rx power high warning threshold	Displays the vendor-specified threshold for the laser Rx power high warning.

Table 52: show interfaces diagnostics optics Output Fields (*continued*)

Field Name	Field Description
Laser rx power low warning threshold	Displays the vendor-specified threshold for the laser Rx power low warning.

Sample Output

show interfaces diagnostics optics xe-0/0/1 (SFP+ Transceiver)

```

user@host> show interfaces diagnostics optics xe-0/0/1
Physical interface: xe-0/0/1
  Laser bias current                : 4.968 mA
  Laser output power                : 0.4940 mW / -3.06 dBm
  Module temperature                : 27 degrees C / 81 degrees F
  Module voltage                   : 3.2310 V
  Receiver signal average optical power : 0.0000
  Laser bias current high alarm     : Off
  Laser bias current low alarm      : Off
  Laser bias current high warning   : Off
  Laser bias current low warning    : Off
  Laser output power high alarm     : Off
  Laser output power low alarm      : Off
  Laser output power high warning   : Off
  Laser output power low warning    : Off
  Module temperature high alarm     : Off
  Module temperature low alarm      : Off
  Module temperature high warning   : Off
  Module temperature low warning    : Off
  Module voltage high alarm         : Off
  Module voltage low alarm          : Off
  Module voltage high warning       : Off
  Module voltage low warning        : Off
  Laser rx power high alarm         : Off
  Laser rx power low alarm          : On
  Laser rx power high warning       : Off
  Laser rx power low warning        : On
  Laser bias current high alarm threshold : 10.500 mA
  Laser bias current low alarm threshold : 2.000 mA
  Laser bias current high warning threshold : 9.000 mA
  Laser bias current low warning threshold : 2.500 mA
  Laser output power high alarm threshold : 1.4120 mW / 1.50 dBm
  Laser output power low alarm threshold : 0.0740 mW / -11.31 dBm
  Laser output power high warning threshold : 0.7070 mW / -1.51 dBm
  Laser output power low warning threshold : 0.1860 mW / -7.30 dBm
  Module temperature high alarm threshold : 75 degrees C / 167 degrees F
  Module temperature low alarm threshold : -5 degrees C / 23 degrees F
  Module temperature high warning threshold : 70 degrees C / 158 degrees F
  Module temperature low warning threshold : 0 degrees C / 32 degrees F
  Module voltage high alarm threshold : 3.630 V
  Module voltage low alarm threshold : 2.970 V
  Module voltage high warning threshold : 3.465 V
  Module voltage low warning threshold : 3.135 V
  Laser rx power high alarm threshold : 1.5849 mW / 2.00 dBm
  Laser rx power low alarm threshold : 0.0407 mW / -13.90 dBm
  Laser rx power high warning threshold : 0.7943 mW / -1.00 dBm
  Laser rx power low warning threshold : 0.1023 mW / -9.90 dBm

```


show interfaces diagnostics optics node1:xe-0/0/1 (SFP+ Transceiver)

```

user@host> show interfaces diagnostics optics node1:xe-0/0/1
Physical interface: node1:xe-0/0/1
  Laser bias current                : 4.968 mA
  Laser output power                : 0.4940 mW / -3.06 dBm
  Module temperature                : 27 degrees C / 81 degrees F
  Module voltage                    : 3.2310 V
  Receiver signal average optical power : 0.0000
  Laser bias current high alarm     : Off
  Laser bias current low alarm      : Off
  Laser bias current high warning   : Off
  Laser bias current low warning    : Off
  Laser output power high alarm     : Off
  Laser output power low alarm      : Off
  Laser output power high warning   : Off
  Laser output power low warning    : Off
  Module temperature high alarm     : Off
  Module temperature low alarm      : Off
  Module temperature high warning   : Off
  Module temperature low warning    : Off
  Module voltage high alarm         : Off
  Module voltage low alarm          : Off
  Module voltage high warning       : Off
  Module voltage low warning        : Off
  Laser rx power high alarm         : Off
  Laser rx power low alarm          : On
  Laser rx power high warning       : Off
  Laser rx power low warning        : On
  Laser bias current high alarm threshold : 10.500 mA
  Laser bias current low alarm threshold : 2.000 mA
  Laser bias current high warning threshold : 9.000 mA
  Laser bias current low warning threshold : 2.500 mA
  Laser output power high alarm threshold : 1.4120 mW / 1.50 dBm
  Laser output power low alarm threshold : 0.0740 mW / -11.31 dBm
  Laser output power high warning threshold : 0.7070 mW / -1.51 dBm
  Laser output power low warning threshold : 0.1860 mW / -7.30 dBm
  Module temperature high alarm threshold : 75 degrees C / 167 degrees F
  Module temperature low alarm threshold : -5 degrees C / 23 degrees F
  Module temperature high warning threshold : 70 degrees C / 158 degrees F
  Module temperature low warning threshold : 0 degrees C / 32 degrees F
  Module voltage high alarm threshold : 3.630 V
  Module voltage low alarm threshold : 2.970 V
  Module voltage high warning threshold : 3.465 V
  Module voltage low warning threshold : 3.135 V
  Laser rx power high alarm threshold : 1.5849 mW / 2.00 dBm
  Laser rx power low alarm threshold : 0.0407 mW / -13.90 dBm
  Laser rx power high warning threshold : 0.7943 mW / -1.00 dBm
  Laser rx power low warning threshold : 0.1023 mW / -9.90 dBm

```

show log

List of Syntax	Syntax on page 1036 Syntax (QFX Series and OCX Series) on page 1036 Syntax (TX Matrix Routers) on page 1036
Syntax	<pre>show log <filename user <username>></pre>
Syntax (QFX Series and OCX Series)	<pre>show log filename <device-type (device-id device-alias)></pre>
Syntax (TX Matrix Routers)	<pre>show log <all-lcc lcc number scc> <filename user <username>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Option <i>device-type (device-id device-alias)</i> is introduced in Junos OS Release 13.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	List log files, display log file contents, or display information about users who have logged in to the router or switch.
Options	<p>none—List all log files.</p> <p><all-lcc lcc number scc>—(TX Matrix routers only) (Optional) Display logging information about all T640 routers (or line-card chassis) or a specific T640 router (replace <i>number</i> with a value from 0 through 3) connected to a TX Matrix router. Or, display logging information about the TX Matrix router (or switch-card chassis).</p> <p>device-type—(QFabric system only) (Optional) Display log messages for only one of the following device types:</p> <ul style="list-style-type: none"> • director-device—Display logs for Director devices. • infrastructure-device—Display logs for the logical components of the QFabric system infrastructure, including the diagnostic Routing Engine, fabric control Routing Engine, fabric manager Routing Engine, and the default network Node group and its backup (NW-NG-0 and NW-NG-0-backup). • interconnect-device—Display logs for Interconnect devices. • node-device—Display logs for Node devices.



NOTE: If you specify the **device-type** optional parameter, you must also specify either the **device-id** or **device-alias** optional parameter.

(device-id | device-alias)—If a device type is specified, display logs for a device of that type. Specify either the device ID or the device alias (if configured).

filename—(Optional) Display the log messages in the specified log file. For the routing matrix, the filename must include the chassis information.



NOTE: The *filename* parameter is mandatory for the QFabric system. If you did not configure a syslog filename, specify the default filename of messages.

user <username>—(Optional) Display logging information about users who have recently logged in to the router or switch. If you include *username*, display logging information about the specified user.

Required Privilege Level trace

List of Sample Output [show log on page 1037](#)
[show log filename on page 1037](#)
[show log filename \(QFabric System\) on page 1038](#)
[show log user on page 1038](#)

Sample Output

show log

```
user@host> show log
total 57518
-rw-r--r-- 1 root bin      211663 Oct  1 19:44 dcd
-rw-r--r-- 1 root bin      999947 Oct  1 19:41 dcd.0
-rw-r--r-- 1 root bin      999994 Oct  1 17:48 dcd.1
-rw-r--r-- 1 root bin      238815 Oct  1 19:44 rpd
-rw-r--r-- 1 root bin     1049098 Oct  1 18:00 rpd.0
-rw-r--r-- 1 root bin      1061095 Oct  1 12:13 rpd.1
-rw-r--r-- 1 root bin      1052026 Oct  1 06:08 rpd.2
-rw-r--r-- 1 root bin      1056309 Sep 30 18:21 rpd.3
-rw-r--r-- 1 root bin      1056371 Sep 30 14:36 rpd.4
-rw-r--r-- 1 root bin      1056301 Sep 30 10:50 rpd.5
-rw-r--r-- 1 root bin      1056350 Sep 30 07:04 rpd.6
-rw-r--r-- 1 root bin      1048876 Sep 30 03:21 rpd.7
-rw-rw-r-- 1 root bin        19656 Oct  1 19:37 wtmp
```

show log filename

```
user@host> show log rpd
Oct  1 18:00:18 trace_on: Tracing to ?/var/log/rpd? started
Oct  1 18:00:18 EVENT <MTU> ds-5/2/0.0 index 24 <Broadcast PointToPoint Multicast
Oct  1 18:00:18
Oct  1 18:00:19 KRT rcv len 56 V9 seq 148 op add Type route/if af 2 addr
13.13.13.21 nhop type local nhop 13.13.13.21
Oct  1 18:00:19 KRT rcv len 56 V9 seq 149 op add Type route/if af 2 addr
13.13.13.22 nhop type unicast nhop 13.13.13.22
Oct  1 18:00:19 KRT rcv len 48 V9 seq 150 op add Type ifaddr index 24 devindex
43
Oct  1 18:00:19 KRT rcv len 144 V9 seq 151 op chnge Type ifdev devindex 44
```

```
Oct  1 18:00:19 KRT recv len 144 V9 seq 152 op chnge Type ifdev devindex 45
Oct  1 18:00:19 KRT recv len 144 V9 seq 153 op chnge Type ifdev devindex 46
Oct  1 18:00:19 KRT recv len 1272 V9 seq 154 op chnge Type ifdev devindex 47
...
```

show log filename (QFabric System)

```
user@qfabric> show log messages
Mar 28 18:00:06 qfabric chassisd: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:06 ED1486
  chassisd: CHASSISD_SNMP_TRAP10: SNMP trap generated: FRU power on
(jnxFruContentsIndex 8, jnxFruL1Index 1, jnxFruL2Index 1, jnxFruL3Index 0,
jnxFruName PIC: 48x 10G-SFP+ @ 0/0/*, jnxFruType 11, jnxFruSlot 0,
jnxFruOfflineReason 2, jnxFruLastPowerOff 0, jnxFruLastPowerOn 2159)
Mar 28 18:00:07 qfabric chassisd: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:07 ED1486
  chassisd: CHASSISD_SNMP_TRAP10: SNMP trap generated: FRU power on
(jnxFruContentsIndex 8, jnxFruL1Index 1, jnxFruL2Index 2, jnxFruL3Index 0,
jnxFruName PIC: @ 0/1/*, jnxFruType 11, jnxFruSlot 0, jnxFruOfflineReason 2,
jnxFruLastPowerOff 0, jnxFruLastPowerOn 2191)
Mar 28 18:00:07 qfabric chassisd: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:07 ED1492
  chassisd: CHASSISD_SNMP_TRAP10: SNMP trap generated: FRU power on
(jnxFruContentsIndex 8, jnxFruL1Index 1, jnxFruL2Index 1, jnxFruL3Index 0,
jnxFruName PIC: 48x 10G-SFP+ @ 0/0/*, jnxFruType 11, jnxFruSlot 0,
jnxFruOfflineReason 2, jnxFruLastPowerOff 0, jnxFruLastPowerOn 242726)
Mar 28 18:00:07 qfabric chassisd: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:07 ED1492
  chassisd: CHASSISD_SNMP_TRAP10: SNMP trap generated: FRU power on
(jnxFruContentsIndex 8, jnxFruL1Index 1, jnxFruL2Index 2, jnxFruL3Index 0,
jnxFruName PIC: @ 0/1/*, jnxFruType 11, jnxFruSlot 0, jnxFruOfflineReason 2,
jnxFruLastPowerOff 0, jnxFruLastPowerOn 242757)
Mar 28 18:00:16 qfabric file: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:16 ED1486
file: UI_COMMIT: User 'root' requested 'commit' operation (comment: none)
Mar 28 18:00:27 qfabric file: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:27 ED1486
file: UI_COMMIT: User 'root' requested 'commit' operation (comment: none)
Mar 28 18:00:50 qfabric file: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:50
_DCF_default__NW-INE-0_REO_ file: UI_COMMIT: User 'root' requested 'commit'
operation (comment: none)
Mar 28 18:00:50 qfabric file: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:50
_DCF_default__NW-INE-0_REO_ file: UI_COMMIT: User 'root' requested 'commit'
operation (comment: none)
Mar 28 18:00:55 qfabric file: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:55 ED1492
file: UI_COMMIT: User 'root' requested 'commit' operation (comment: none)
Mar 28 18:01:10 qfabric file: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:01:10 ED1492
file: UI_COMMIT: User 'root' requested 'commit' operation (comment: none)
Mar 28 18:02:37 qfabric chassisd: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:02:37 ED1491
  chassisd: CHASSISD_SNMP_TRAP10: SNMP trap generated: FRU power on
(jnxFruContentsIndex 8, jnxFruL1Index 1, jnxFruL2Index 1, jnxFruL3Index 0,
jnxFruName PIC: 48x 10G-SFP+ @ 0/0/*, jnxFruType 11, jnxFruSlot 0,
jnxFruOfflineReason 2, jnxFruLastPowerOff 0, jnxFruLastPowerOn 33809)
```

show log user

```
user@host> show log user
darius  mg2546                Thu Oct  1 19:37   still logged in
darius  mg2529                Thu Oct  1 19:08 - 19:36 (00:28)
darius  mg2518                Thu Oct  1 18:53 - 18:58 (00:04)
root    mg1575                Wed Sep 30 18:39 - 18:41 (00:02)
root    ttyp2      jun.site.per Wed Sep 30 18:39 - 18:41 (00:02)
alex    ttyp1      192.168.1.2   Wed Sep 30 01:03 - 01:22 (00:19)
```

show subscribers

Syntax show subscribers
 <detail | extensive | terse>
 <aci-interface-set-name *aci-interface-set-name*>
 <address *address*>
 <agent-circuit-identifier *agent-circuit-identifier-substring*>
 <client-type *client-type*>
 <count>
 <id>
 <interface *interface*>
 <logical-system *logical-system*>
 <mac-address *mac-address*>
 <physical-interface *physical-interface-name*>
 <profile-name *profile-name*>
 <routing-instance *routing-instance*>
 <stacked-vlan-id *stacked-vlan-id*>
 <subscriber-state *subscriber-state*>
 <user-name *user-name*>
 <vci *vci-identifier*>
 <vpi *vpi-identifier*>
 <vlan-id *vlan-id*>

Release Information Command introduced in Junos OS Release 9.3.
 Command introduced in Junos OS Release 9.3 for EX Series switches.
client-type, **mac-address**, **subscriber-state**, and **extensive** options introduced in Junos OS Release 10.2.
count option usage with other options introduced in Junos OS Release 10.2.
 Command introduced in Junos OS Release 11.1 for the QFX Series.
 Options **aci-interface-set-name** and **agent-circuit-identifier** introduced in Junos OS Release 12.2.
 The **physical-interface** and **user-name** options introduced in Junos OS Release 12.3.
 Options **vci** and **vpi** introduced in Junos OS Release 12.3R3 and supported in later 12.3Rx releases.
 Options **vci** and **vpi** supported in Junos OS Release 13.2 and later releases. (Not supported in Junos OS Release 13.1.)
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display information for active subscribers.

Options **detail | extensive | terse**—(Optional) Display the specified level of output.

aci-interface-set-name—(Optional) Display all dynamic subscriber sessions that use the specified agent circuit identifier (ACI) interface set. Use the ACI interface set name generated by the router, such as aci-1003-ge-1/0/0.4001, and not the actual ACI value found in the DHCP or PPPoE control packets.

address—(Optional) Display subscribers whose IP address matches the specified address. You must specify the IPv4 or IPv6 address prefix without a netmask (for example, 192.168.17.1). If you specify the IP address as a prefix with a netmask (for example,

192.168.17.1/32), the router displays a message that the IP address is invalid, and rejects the command.

agent-circuit-identifier-substring—(Optional) Display all dynamic subscriber sessions whose ACI value matches the specified substring.

client-type—(Optional) Display subscribers whose client type matches the specified client type (DHCP, L2TP, PPP, PPPOE, VLAN, or static).

count—(Optional) Display the count of total subscribers and active subscribers for any specified option. You can use the **count** option alone or with the **address**, **client-type**, **interface**, **logical-system**, **mac-address**, **profile-name**, **routing-instance**, **stacked-vlan-id**, **subscriber-state**, or **vlan-id** options.

id—(Optional) Display a specific subscriber session whose session id matches the specified subscriber ID. You can display subscriber IDs by using the **show subscribers extensive** or the **show subscribers interface extensive** commands.

interface—(Optional) Display subscribers whose interface matches the specified interface.

logical-system—(Optional) Display subscribers whose logical system matches the specified logical system.

mac-address—(Optional) Display subscribers whose MAC address matches the specified MAC address.

physical-interface-name—(M120, M320, and MX Series routers only) (Optional) Display subscribers whose physical interface matches the specified physical interface.

profile-name—(Optional) Display subscribers whose dynamic profile matches the specified profile name.

routing-instance—(Optional) Display subscribers whose routing instance matches the specified routing instance.

stacked-vlan-id—(Optional) Display subscribers whose stacked VLAN ID matches the specified stacked VLAN ID.

subscriber-state—(Optional) Display subscribers whose subscriber state matches the specified subscriber state (ACTIVE, CONFIGURED, INIT, TERMINATED, or TERMINATING).

user-name—(M120, M320, and MX Series routers only) (Optional) Display subscribers whose username matches the specified subscriber name.

vci-identifier—(MX Series routers with MPCs and ATM MICs with SFP only) (Optional) Display active ATM subscribers whose ATM virtual circuit identifier (VCI) matches the specified VCI identifier. The range of values is **0** through **255**.

vpi-identifier—(MX Series routers with MPCs and ATM MICs with SFP only) (Optional) Display active ATM subscribers whose ATM virtual path identifier (VPI) matches the specified VPI identifier. The range of values is **0** through **65535**.

vlan-id—(Optional) Display subscribers whose VLAN ID matches the specified VLAN ID, regardless of whether the subscriber uses a single-tagged or double-tagged VLAN. For subscribers using a double-tagged VLAN, this option displays subscribers where the inner VLAN tag matches the specified VLAN ID. To display only subscribers where the specified value matches only double-tagged VLANs, use the **stacked-vlan-id** **stacked-vlan-id** option to match the outer VLAN tag.



NOTE: Due to display limitations, logical system and routing instance output values are truncated when necessary.

Required Privilege Level view

Related Documentation

- [show subscribers summary](#)
- [Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration](#)

List of Sample Output

- [show subscribers \(IPv4\) on page 1045](#)
- [show subscribers \(IPv6\) on page 1045](#)
- [show subscribers \(IPv4 and IPv6 Dual Stack\) on page 1045](#)
- [show subscribers \(LNS on MX Series Routers\) on page 1046](#)
- [show subscribers \(L2TP Switched Tunnels\) on page 1046](#)
- [show subscribers client-type dhcp detail on page 1046](#)
- [show subscribers count on page 1046](#)
- [show subscribers address detail \(IPv6\) on page 1047](#)
- [show subscribers detail \(IPv4\) on page 1047](#)
- [show subscribers detail \(IPv6\) on page 1047](#)
- [show subscribers detail \(IPv6 Static Demux Interface\) on page 1048](#)
- [show subscribers detail \(L2TP LNS Subscribers on MX Series Routers\) on page 1048](#)
- [show subscribers detail \(L2TP Switched Tunnels\) on page 1048](#)
- [show subscribers detail \(Tunneled Subscriber\) on page 1049](#)
- [show subscribers detail \(IPv4 and IPv6 Dual Stack\) on page 1049](#)
- [show subscribers detail \(ACI Interface Set Session\) on page 1050](#)
- [show subscribers detail \(PPPoE Subscriber Session with ACI Interface Set\) on page 1050](#)
- [show subscribers extensive on page 1050](#)
- [show subscribers extensive \(RPF Check Fail Filter\) on page 1051](#)
- [show subscribers extensive \(L2TP LNS Subscribers on MX Series Routers\) on page 1051](#)
- [show subscribers extensive \(IPv4 and IPv6 Dual Stack\) on page 1051](#)
- [show subscribers extensive \(Effective Shaping-Rate\) on page 1052](#)
- [show subscribers aci-interface-set-name detail \(Subscriber Sessions Using Specified ACI Interface Set\) on page 1053](#)
- [show subscribers agent-circuit-identifier detail \(Subscriber Sessions Using Specified ACI Substring\) on page 1053](#)
- [show subscribers interface extensive on page 1054](#)
- [show subscribers logical-system terse on page 1054](#)
- [show subscribers physical-interface count on page 1055](#)
- [show subscribers routing-instance inst1 count on page 1055](#)

[show subscribers stacked-vlan-id detail on page 1055](#)

[show subscribers stacked-vlan-id vlan-id detail \(Combined Output\) on page 1055](#)

[show subscribers stacked-vlan-id vlan-id interface detail \(Combined Output for a Specific Interface\) on page 1055](#)

[show subscribers user-name detail on page 1055](#)

[show subscribers vlan-id on page 1056](#)

[show subscribers vlan-id detail on page 1056](#)

[show subscribers vpi vci extensive \(PPPoE-over-ATM Subscriber Session\) on page 1056](#)

Output Fields [Table 53 on page 1042](#) lists the output fields for the **show subscribers** command. Output fields are listed in the approximate order in which they appear.

Table 53: show subscribers Output Fields

Field Name	Field Description
Interface	Interface associated with the subscriber. The router or switch displays subscribers whose interface matches or begins with the specified interface. The * character indicates a continuation of addresses for the same session.
IP Address/VLAN ID	Subscriber IP address or VLAN ID associated with the subscriber in the form <i>tpid.vlan-id</i> No IP address or VLAN ID is assigned to an L2TP tunnel-switched session. For these subscriber sessions the value is Tunnel-switched .
User Name	Name of subscriber.
LS:RI	Logical system and routing instance associated with the subscriber.
Type	Subscriber client type (DHCP, L2TP, PPP, PPPoE, STATIC-INTERFACE, VLAN).
IP Address	Subscriber IPv4 address.
IP Netmask	Subscriber IP netmask.
Primary DNS Address	IP address of primary DNS server.
Secondary DNS Address	IP address of secondary DNS server.
Primary WINS Address	IP address of primary WINS server.
Secondary WINS Address	IP address of secondary WINS server.
IPv6 Address	Subscriber IPv6 address, or multiple addresses.
IPv6 Prefix	Subscriber IPv6 prefix. If you are using DHCPv6 prefix delegation, this is the delegated prefix.
IPv6 User Prefix	IPv6 prefix obtained through ND/RA.
IPv6 Address Pool	Subscriber IPv6 address pool. The IPv6 address pool is used to allocate IPv6 prefixes to the DHCPv6 clients.

Table 53: show subscribers Output Fields (*continued*)

Field Name	Field Description
IPv6 Network Prefix Length	Length of the network portion of the IPv6 address.
IPv6 Prefix Length	Length of the subscriber IPv6 prefix.
Logical System	Logical system associated with the subscriber.
Routing Instance	Routing instance associated with the subscriber.
Interface Type	Whether the subscriber interface is Static or Dynamic .
Interface Set	Internally generated name of the dynamic ACI interface set used by the subscriber session.
Interface Set Type	Interface type of the ACI interface set: Dynamic . This is the only ACI interface set type currently supported.
Interface Set Session ID	Identifier of the dynamic ACI interface set entry in the session database.
Underlying Interface	Name of the underlying interface for the subscriber session.
Dynamic Profile Name	Dynamic profile used for the subscriber.
Dynamic Profile Version	Version number of the dynamic profile used for the subscriber.
MAC Address	MAC address associated with the subscriber.
State	Current state of the subscriber session (Init , Configured , Active , Terminating , Tunneled).
L2TP State	Current state of the L2TP session, Tunneled or Tunnel-switched . When the value is Tunnel-switched , two entries are displayed for the subscriber; the first entry is at the LNS interface on the LTS and the second entry is at the LAC interface on the LTS.
Tunnel switch Profile Name	Name of the L2TP tunnel switch profile that initiates tunnel switching.
Local IP Address	IP address of the local gateway (LAC).
Remote IP Address	IP address of the remote peer (LNS).
VLAN Id	VLAN ID associated with the subscriber in the form <i>tpid.vlan-id</i> .
Stacked VLAN Id	Stacked VLAN ID associated with the subscriber in the form <i>tpid.vlan-id</i> .
RADIUS Accounting ID	RADIUS accounting ID associated with the subscriber.
Agent Circuit ID	Option 82 agent circuit ID associated with the subscriber. The ID is displayed as an ASCII string unless the value has nonprintable characters, in which case it is displayed in hexadecimal format.

Table 53: show subscribers Output Fields (*continued*)

Field Name	Field Description
Agent Remote ID	Option 82 agent remote ID associated with the subscriber. The ID is displayed as an ASCII string unless the value has nonprintable characters, in which case it is displayed in hexadecimal format.
DHCP Relay IP Address	IP address used by the DHCP relay agent.
ATM VPI	(MX Series routers with MPCs and ATM MICs with SFP only) ATM virtual path identifier (VPI) on the subscriber's physical interface.
ATM VCI	(MX Series routers with MPCs and ATM MICs with SFP only) ATM virtual circuit identifier (VCI) for each VPI configured on the subscriber interface.
Login Time	Date and time at which the subscriber logged in.
Effective shaping-rate	Actual downstream traffic shaping rate for the subscriber, in kilobits per second.
IPv4 rpf-check Fail Filter Name	Name of the filter applied by the dynamic profile to IPv4 packets that fail the RPF check.
IPv6 rpf-check Fail Filter Name	Name of the filter applied by the dynamic profile to IPv6 packets that fail the RPF check.
DHCP Options	len = number of hex values in the message. The hex values specify the type, length, value (TLV) for DHCP options, as defined in RFC 2132.
Session ID	ID number for a subscriber service session.
Underlying Session ID	For DHCPv6 subscribers on a PPPoE network, displays the session ID of the underlying PPPoE interface.
Service Sessions	Number of service sessions (that is, a service activated using RADIUS CoA) associated with the subscribers.
Service Session Name	Service session profile name.
Session Timeout (seconds)	Number of seconds of access provided to the subscriber before the session is automatically terminated.
Idle Timeout (seconds)	Number of seconds subscriber can be idle before the session is automatically terminated.
IPv6 Delegated Address Pool	Name of the pool used for DHCPv6 prefix delegation.
IPv6 Delegated Network Prefix Length	Length of the prefix configured for the IPv6 delegated address pool.
IPv6 Interface Address	Address assigned by the Framed-lpv6-Prefix AAA attribute.
IPv6 Framed Interface Id	Interface ID assigned by the Framed-Interface-Id AAA attribute.

Table 53: show subscribers Output Fields (*continued*)

Field Name	Field Description
ADF IPv4 Input Filter Name	Name assigned to the Ascend-Data-Filter (ADF) interface IPv4 input filter (client or service session). The filter name is followed by the rules (in hexadecimal format) associated with the ADF filter and the decoded rule in Junos OS filter style.
ADF IPv4 Output Filter Name	Name assigned to the Ascend-Data-Filter (ADF) interface IPv4 output filter (client or service session). The filter name is followed by the rules (in hexadecimal format) associated with the ADF filter and the decoded rule in Junos OS filter style.
ADF IPv6 Input Filter Name	Name assigned to the Ascend-Data-Filter (ADF) interface IPv6 input filter (client or service session). The filter name is followed by the rules (in hexadecimal format) associated with the ADF filter and the decoded rule in Junos OS filter style.
ADF IPv6 Output Filter Name	Name assigned to the Ascend-Data-Filter (ADF) interface IPv6 output filter (client or service session). The filter name is followed by the rules (in hexadecimal format) associated with the ADF filter and the decoded rule in Junos OS filter style.
IPv4 Input Filter Name	Name assigned to the IPv4 input filter (client or service session).
IPv4 Output Filter Name	Name assigned to the IPv4 output filter (client or service session).
IPv6 Input Filter Name	Name assigned to the IPv6 input filter (client or service session).
IPv6 Output Filter Name	Name assigned to the IPv6 output filter (client or service session).
IFL Input Filter Name	Name assigned to the logical interface input filter (client or service session).
IFL Output Filter Name	Name assigned to the logical interface output filter (client or service session).

Sample Output

show subscribers (IPv4)

```

user@host> show subscribers
Interface      IP Address/VLAN ID  User Name      LS:RI
ge-1/3/0.1073741824  100                WHOLESALE-CLIENT default:default
demux0.1073741824    10.0.0.10          RETAILER1-CLIENT test1:retailer1
demux0.1073741825    11.0.0.3           RETAILER2-CLIENT test1:retailer2
demux0.1073741826    12.0.0.3

```

show subscribers (IPv6)

```

user@host> show subscribers
Interface      IP Address/VLAN ID  User Name      LS:RI
ge-1/0/0.0     2001:db8::c0:0:0:0/74 WHOLESALE-CLIENT default:default
*              2001:db8::1/128    subscriber-25   default:default

```

show subscribers (IPv4 and IPv6 Dual Stack)

```

user@host> show subscribers
Interface      IP Address/VLAN ID  User Name
LS:RI
demux0.1073741834  0x8100.1002 0x8100.1

```

```

default:default
demux0.1073741835 0x8100.1001 0x8100.1
default:default
pp0.1073741836 61.1.1.1 dualstackuser1@EXAMPLE1.com
default:ASP-1
* 2041:1:1::/48
* 2061:1:1:1::/64
pp0.1073741837 23.1.1.3 dualstackuser2@EXAMPLE1.com
default:ASP-1
* 2001:db8:1:2:5::/64

```

show subscribers (LNS on MX Series Routers)

```

user@host> show subscribers
Interface      IP Address/VLAN ID  User Name      LS:RI
si-4/0/0.1     192.168.4.1         xyz@example.com default:default

```

show subscribers (L2TP Switched Tunnels)

```

user@host> show subscribers
Interface      IP Address/VLAN ID  User Name      LS:RI
si-2/1/0.1073741842 Tunnel-switched    ap@example.com  default:default
si-2/1/0.1073741843 Tunnel-switched    ap@example.com  default:default

```

show subscribers client-type dhcp detail

```

user@host> show subscribers client-type dhcp detail
Type: DHCP
IP Address: 10.20.9.7
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: demux0.1073744127
Interface type: Dynamic
Dynamic Profile Name: dhcp-demux-prof
MAC Address: 00:10:95:00:00:98
State: Active
Radius Accounting ID: jnpr :2304
Login Time: 2009-08-25 14:43:52 PDT

Type: DHCP
IP Address: 10.20.10.7
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: demux0.1073744383
Interface type: Dynamic
Dynamic Profile Name: dhcp-demux-prof
MAC Address: 00:10:94:00:01:f3
State: Active
Radius Accounting ID: jnpr :2560
Login Time: 2009-08-25 14:43:56 PDT

```

show subscribers count

```

user@host> show subscribers count
Total Subscribers: 188, Active Subscribers: 188

```

show subscribers address detail (IPv6)

```

user@host> show subscribers address 10.16.12.137 detail
Type: PPPoE
User Name: pppoeTerV6User1Svc
IP Address: 10.16.12.137
IP Netmask: 255.0.0.0
IPv6 User Prefix: 1016:0:0:c88::/64
Logical System: default
Routing Instance: default
Interface: pp0.1073745151
Interface type: Dynamic
Underlying Interface: demux0.8201
Dynamic Profile Name: pppoe-client-profile
MAC Address: 00:0d:02:01:00:01
Session Timeout (seconds): 31622400
Idle Timeout (seconds): 86400
State: Active
Radius Accounting ID: jnpr demux0.8201:6544
Session ID: 6544
Agent Circuit ID: if13720
Agent Remote ID: if13720
Login Time: 2012-05-21 13:37:27 PDT
Service Sessions: 1

```

show subscribers detail (IPv4)

```

user@host> show subscribers detail
Type: DHCP
IP Address: 10.20.9.7
IP Netmask: 255.255.0.0
Primary DNS Address: 192.168.17.1
Secondary DNS Address: 192.168.17.2
Primary WINS Address: 192.168.22.1
Secondary WINS Address: 192.168.22.2
Logical System: default
Routing Instance: default
Interface: demux0.1073744127
Interface type: Dynamic
Dynamic Profile Name: dhcp-demux-prof
MAC Address: 00:10:95:00:00:98
State: Active
Radius Accounting ID: jnpr :2304
Idle Timeout (seconds): 600
Login Time: 2009-08-25 14:43:52 PDT
DHCP Options: len 52
35 01 01 39 02 02 40 3d 07 01 00 10 94 00 00 08 33 04 00 00
00 3c 0c 15 63 6c 69 65 6e 74 5f 50 6f 72 74 20 2f 2f 36 2f
33 2d 37 2d 30 37 05 01 06 0f 21 2c
Service Sessions: 2

```

show subscribers detail (IPv6)

```

user@host> show subscribers detail
Type: DHCP
User Name: pd-user1
IPv6 Prefix: 2001:db8:db2:ffff:1::/64
Logical System: default
Routing Instance: default
Interface: ge-3/1/3.2
Interface type: Static

```

```
MAC Address: 00:51:ff:ff:00:03
State: Active
Radius Accounting ID: 1
Session ID: 1
Login Time: 2011-08-25 12:12:26 PDT
DHCP Options: len 42
00 08 00 02 00 00 00 01 00 0a 00 03 00 01 00 51 ff ff 00 03
00 06 00 02 00 19 00 19 00 0c 00 00 00 00 00 00 00 00 00
00 00
```

show subscribers detail (IPv6 Static Demux Interface)

```
user@host> show subscribers detail
Type: STATIC-INTERFACE
User Name: demux0.1@example.net
IPv6 Prefix: 1:2:3:4:5:6:7:aa/128
Logical System: default
Routing Instance: default
Interface: demux0.1
Interface type: Static
Dynamic Profile Name: junos-default-profile
State: Active
Radius Accounting ID: 185
Login Time: 2010-05-18 14:33:56 EDT
```

show subscribers detail (L2TP LNS Subscribers on MX Series Routers)

```
user@host> show subscribers detail
Type: L2TP
User Name: user1@example.net
IP Address: 10.1.32.58
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: si-5/2/0.1073749824
Interface type: Dynamic
Dynamic Profile Name: dyn-lns-profile2
Dynamic Profile Version: 1
State: Active
Radius Accounting ID: 8001
Session ID: 8001
Login Time: 2011-04-25 20:27:50 IST
```

show subscribers detail (L2TP Switched Tunnels)

```
user@host> show subscribers detail
Type: L2TP
User Name: ap@example.com
Logical System: default
Routing Instance: default
Interface: si-2/1/0.1073741842
Interface type: Dynamic
Dynamic Profile Name: dyn-lts-profile
State: Active
L2TP State: Tunnel-switched
Tunnel switch Profile Name: ce-lts-profile
Local IP Address: 10.50.1.1
Remote IP Address: 192.168.20.3
Radius Accounting ID: 21
Session ID: 21
Login Time: 2013-01-18 03:01:11 PST
```

```

Type: L2TP
User Name: ap@example.com
Logical System: default
Routing Instance: default
Interface: si-2/1/0.1073741843
Interface type: Dynamic
Dynamic Profile Name: dyn-lts-profile
State: Active
L2TP State: Tunnel-switched
Tunnel switch Profile Name: ce-lts-profile
Local IP Address: 10.30.1.1
Remote IP Address: 172.20.1.10
Session ID: 22
Login Time: 2013-01-18 03:01:14 PST

```

show subscribers detail (Tunneled Subscriber)

```

user@host> show subscribers detail
Type: PPPoE
User Name: user1@example.com
Logical System: default
Routing Instance: default
Interface: pp0.1
State: Active, Tunneled
Radius Accounting ID: 512

```

show subscribers detail (IPv4 and IPv6 Dual Stack)

```

user@host> show subscribers detail
Type: VLAN
Logical System: default
Routing Instance: default
Interface: demux0.1073741824
Interface type: Dynamic
Dynamic Profile Name: svlanProfile
State: Active
Session ID: 1
Stacked VLAN Id: 0x8100.1001
VLAN Id: 0x8100.1
Login Time: 2011-11-30 00:18:04 PST

Type: PPPoE
User Name: dualstackuser1@EXAMPLE1.com
IP Address: 61.1.1.1
IPv6 Prefix: 2041:1:1::/48
IPv6 User Prefix: 2061:1:1:1::/64
Logical System: default
Routing Instance: ASP-1
Interface: pp0.1073741825
Interface type: Dynamic
Dynamic Profile Name: dualStack-Profile1
MAC Address: 00:00:64:03:01:02
State: Active
Radius Accounting ID: 2
Session ID: 2
Login Time: 2011-11-30 00:18:05 PST

Type: DHCP
IPv6 Prefix: 2041:1:1::/48
Logical System: default
Routing Instance: ASP-1

```

```
Interface: pp0.1073741825
Interface type: Static
MAC Address: 00:00:64:03:01:02
State: Active
Radius Accounting ID: jnpr :3
Session ID: 3
Underlying Session ID: 2
Login Time: 2011-11-30 00:18:35 PST
DHCP Options: len 42
00 08 00 02 0b b8 00 01 00 0a 00 03 00 01 00 00 64 03 01 02
00 06 00 02 00 19 00 19 00 0c 00 00 00 00 00 00 00 00 00 00
00 00
```

show subscribers detail (ACI Interface Set Session)

```
user@host> show subscribers detail
Type: VLAN
Logical System: default
Routing Instance: default
Interface: ge-1/0/0
Interface Set: aci-1001-ge-1/0/0.2800
Interface Set Session ID: 0
Underlying Interface: ge-1/0/0.2800
Dynamic Profile Name: aci-vlan-set-profile-2
Dynamic Profile Version: 1
State: Active
Session ID: 1
Agent Circuit ID: aci-ppp-dhcp-20
Login Time: 2012-05-26 01:54:08 PDT
```

show subscribers detail (PPPoE Subscriber Session with ACI Interface Set)

```
user@host> show subscribers detail
Type: PPPoE
User Name: ppphint2
IP Address: 10.10.1.5
Logical System: default
Routing Instance: default
Interface: pp0.1073741825
Interface type: Dynamic
Interface Set: aci-1001-demux0.1073741824
Interface Set Type: Dynamic
Interface Set Session ID: 2
Underlying Interface: demux0.1073741824
Dynamic Profile Name: aci-vlan-pppoe-profile
Dynamic Profile Version: 1
MAC Address: 00:00:64:39:01:02
State: Active
Radius Accounting ID: 3
Session ID: 3
Agent Circuit ID: aci-ppp-dhcp-dvlan-50
Login Time: 2012-03-07 13:46:53 PST
```

show subscribers extensive

```
user@host> show subscribers extensive
Type: DHCP
User Name: pd-user1
IPv6 Prefix: 2001:db8:db2:ffff:1::/64
Logical System: default
Routing Instance: default
```



```

Interface: ge-3/1/3.2
Interface type: Static
MAC Address: 00:51:ff:ff:00:03
State: Active
Radius Accounting ID: 1
Session ID: 1
Login Time: 2011-08-25 12:12:26 PDT
DHCP Options: len 42
00 08 00 02 00 00 00 01 00 0a 00 03 00 01 00 51 ff ff 00 03
00 06 00 02 00 19 00 19 00 0c 00 00 00 00 00 00 00 00 00
00 00
IPv6 Address Pool: pd_pool
IPv6 Network Prefix Length: 48

```

show subscribers extensive (RPF Check Fail Filter)

```

user@host> show subscribers extensive
...
Type: VLAN
Logical System: default
Routing Instance: default
Interface: ae0.1073741824
Interface type: Dynamic
Dynamic Profile Name: vlan-prof
State: Active
Session ID: 9
VLAN Id: 100
Login Time: 2011-08-26 08:17:00 PDT
IPv4 rpf-check Fail Filter Name: rpf-allow-dhcp
IPv6 rpf-check Fail Filter Name: rpf-allow-dhcpv6
...

```

show subscribers extensive (L2TP LNS Subscribers on MX Series Routers)

```

user@host> show subscribers extensive
Type: L2TP
User Name: user1@example.net
IP Address: 10.1.32.58
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: si-5/2/0.1073749824
Interface type: Dynamic
Dynamic Profile Name: dyn-lns-profile2
Dynamic Profile Version: 1
State: Active
Radius Accounting ID: 8001
Session ID: 8001
Login Time: 2011-04-25 20:27:50 IST
IPv4 Input Filter Name: classify-si-5/2/0.1073749824-in
IPv4 Output Filter Name: classify-si-5/2/0.1073749824-out

```

show subscribers extensive (IPv4 and IPv6 Dual Stack)

```

user@host> show subscribers extensive
Type: VLAN
Logical System: default
Routing Instance: default
Interface: demux0.1073741824
Interface type: Dynamic
Dynamic Profile Name: svlanProfile
State: Active

```

```
Session ID: 1
Stacked VLAN Id: 0x8100.1001
VLAN Id: 0x8100.1
Login Time: 2011-11-30 00:18:04 PST

Type: PPPoE
User Name: dualstackuser1@EXAMPLE1.com
IP Address: 61.1.1.1
IPv6 Prefix: 2041:1:1::/48
IPv6 User Prefix: 2061:1:1:1::/64
Logical System: default
Routing Instance: ASP-1
Interface: pp0.1073741825
Interface type: Dynamic
Dynamic Profile Name: dualStack-Profile1
MAC Address: 00:00:64:03:01:02
State: Active
Radius Accounting ID: 2
Session ID: 2
Login Time: 2011-11-30 00:18:05 PST
IPv6 Delegated Network Prefix Length: 48
IPv6 Interface Address: 2061:1:1:1::1/64
IPv6 Framed Interface Id: 1:1:2:2
IPv4 Input Filter Name: FILTER-IN-pp0.1073741825-in
IPv4 Output Filter Name: FILTER-OUT-pp0.1073741825-out
IPv6 Input Filter Name: FILTER-IN6-pp0.1073741825-in
IPv6 Output Filter Name: FILTER-OUT6-pp0.1073741825-out

Type: DHCP
IPv6 Prefix: 2041:1:1::/48
Logical System: default
Routing Instance: ASP-1
Interface: pp0.1073741825
Interface type: Static
MAC Address: 00:00:64:03:01:02
State: Active
Radius Accounting ID: jnpr :3
Session ID: 3
Underlying Session ID: 2
Login Time: 2011-11-30 00:18:35 PST
DHCP Options: len 42
00 08 00 02 0b b8 00 01 00 0a 00 03 00 01 00 00 64 03 01 02
00 06 00 02 00 19 00 19 00 0c 00 00 00 00 00 00 00 00 00 00
00 00
IPv6 Delegated Network Prefix Length: 48
```

show subscribers extensive (Effective Shaping-Rate)

```
user@host> show subscribers extensive
Type: VLAN
Logical System: default
Routing Instance: default
Interface: demux0.1073741837
Interface type: Dynamic
Interface Set: ifset-1
Underlying Interface: ae1
Dynamic Profile Name: svlan-dhcp-test
State: Active
Session ID: 1
Stacked VLAN Id: 0x8100.201
```

```
VLAN Id: 0x8100.201
Login Time: 2011-11-30 00:18:04 PST
Effective shaping-rate: 31000000k
...
```

show subscribers aci-interface-set-name detail (Subscriber Sessions Using Specified ACI Interface Set)

```
user@host> show subscribers aci-interface-set-name aci-1003-ge-1/0/0.4001 detail
Type: VLAN
Logical System: default
Routing Instance: default
Interface: ge-1/0/0.
Underlying Interface: ge-1/0/0.4001
Dynamic Profile Name: aci-vlan-set-profile
Dynamic Profile Version: 1
State: Active
Session ID: 13
Agent Circuit ID: aci-ppp-vlan-10
Login Time: 2012-03-12 10:41:56 PDT

Type: PPPoE
User Name: ppphint2
IP Address: 10.10.1.7
Logical System: default
Routing Instance: default
Interface: pp0.1073741834
Interface type: Dynamic
Interface Set: aci-1003-ge-1/0/0.4001
Interface Set Type: Dynamic
Interface Set Session ID: 13
Underlying Interface: ge-1/0/0.4001
Dynamic Profile Name: aci-vlan-pppoe-profile
Dynamic Profile Version: 1
MAC Address: 00:00:65:26:01:02
State: Active
Radius Accounting ID: 14
Session ID: 14
Agent Circuit ID: aci-ppp-vlan-10
Login Time: 2012-03-12 10:41:57 PDT
```

show subscribers agent-circuit-identifier detail (Subscriber Sessions Using Specified ACI Substring)

```
user@host> show subscribers agent-circuit-identifier aci-ppp-vlan detail
Type: VLAN
Logical System: default
Routing Instance: default
Interface: ge-1/0/0.
Underlying Interface: ge-1/0/0.4001
Dynamic Profile Name: aci-vlan-set-profile
Dynamic Profile Version: 1
State: Active
Session ID: 13
Agent Circuit ID: aci-ppp-vlan-10
Login Time: 2012-03-12 10:41:56 PDT

Type: PPPoE
User Name: ppphint2
IP Address: 10.10.1.7
Logical System: default
Routing Instance: default
Interface: pp0.1073741834
```

```
Interface type: Dynamic
Interface Set: aci-1003-ge-1/0/0.4001
Interface Set Type: Dynamic
Interface Set Session ID: 13
Underlying Interface: ge-1/0/0.4001
Dynamic Profile Name: aci-vlan-pppoe-profile
Dynamic Profile Version: 1
MAC Address: 00:00:65:26:01:02
State: Active
Radius Accounting ID: 14
Session ID: 14
Agent Circuit ID: aci-ppp-vlan-10
Login Time: 2012-03-12 10:41:57 PDT
```

show subscribers interface extensive

```
user@host> show subscribers interface demux0.1073741826 extensive
Type: VLAN
User Name: test1@test.com
Logical System: default
Routing Instance: testnet
Interface: demux0.1073741826
Interface type: Dynamic
Dynamic Profile Name: profile-vdemux-relay-23qos
MAC Address: 00:00:6e:56:01:04
State: Active
Radius Accounting ID: 12
Session ID: 12
Stacked VLAN Id: 0x8100.1500
VLAN Id: 0x8100.2902
Login Time: 2011-10-20 16:21:59 EST

Type: DHCP
User Name: test1@test.com
IP Address: 172.16.200.6
IP Netmask: 255.255.255.0
Logical System: default
Routing Instance: testnet
Interface: demux0.1073741826
Interface type: Static
MAC Address: 00:00:6e:56:01:04
State: Active
Radius Accounting ID: 21
Session ID: 21
Login Time: 2011-10-20 16:24:33 EST
Service Sessions: 2

Service Session ID: 25
Service Session Name: SUB-QOS
State: Active

Service Session ID: 26
Service Session Name: service-cb-content
State: Active
IPv4 Input Filter Name: content-cb-in-demux0.1073741826-in
IPv4 Output Filter Name: content-cb-out-demux0.1073741826-out
```

show subscribers logical-system terse

```
user@host> show subscribers logical-system test1 terse
```

Interface	IP Address/VLAN ID	User Name	LS:RI
demux0.1073741825	11.0.0.3	RETAILER1-CLIENT	test1:retailer1
demux0.1073741826	12.0.0.3	RETAILER2-CLIENT	test1:retailer2

show subscribers physical-interface count

```
user@host> show subscribers physical-interface ge-1/0/0 count
Total subscribers: 3998, Active Subscribers: 3998
```

show subscribers routing-instance inst1 count

```
user@host> show subscribers routing-instance inst1 count
Total Subscribers: 188, Active Subscribers: 183
```

show subscribers stacked-vlan-id detail

```
user@host> show subscribers stacked-vlan-id 101 detail
Type: VLAN
Interface: ge-1/2/0.1073741824
Interface type: Dynamic
Dynamic Profile Name: svlan-prof
State: Active
Stacked VLAN Id: 0x8100.101
VLAN Id: 0x8100.100
Login Time: 2009-03-27 11:57:19 PDT
```

show subscribers stacked-vlan-id vlan-id detail (Combined Output)

```
user@host> show subscribers stacked-vlan-id 101 vlan-id 100 detail
Type: VLAN
Interface: ge-1/2/0.1073741824
Interface type: Dynamic
Dynamic Profile Name: svlan-prof
State: Active
Stacked VLAN Id: 0x8100.101
VLAN Id: 0x8100.100
Login Time: 2009-03-27 11:57:19 PDT
```

show subscribers stacked-vlan-id vlan-id interface detail (Combined Output for a Specific Interface)

```
user@host> show subscribers stacked-vlan-id 101 vlan-id 100 interface ge-1/2/0.* detail
Type: VLAN
Interface: ge-1/2/0.1073741824
Interface type: Dynamic
Dynamic Profile Name: svlan-prof
State: Active
Stacked VLAN Id: 0x8100.101
VLAN Id: 0x8100.100
Login Time: 2009-03-27 11:57:19 PDT
```

show subscribers user-name detail

```
user@host> show subscribers user-name larry1 detail
Type: DHCP
User Name: larry1
IP Address: 100.0.0.37
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: ge-1/0/0.1
Interface type: Static
Dynamic Profile Name: foo
```

```
MAC Address: 00:10:94:00:00:01
State: Active
Radius Accounting ID: 1
Session ID: 1
Login Time: 2011-11-07 08:25:59 PST
DHCP Options: len 52
35 01 01 39 02 02 40 3d 07 01 00 10 94 00 00 01 33 04 00 00
00 3c 0c 15 63 6c 69 65 6e 74 5f 50 6f 72 74 20 2f 2f 32 2f
37 2d 30 2d 30 37 05 01 06 0f 21 2c
```

show subscribers vlan-id

```
user@host> show subscribers vlan-id 100
Interface          IP Address          User Name
ge-1/0/0.1073741824
ge-1/2/0.1073741825
```

show subscribers vlan-id detail

```
user@host> show subscribers vlan-id 100 detail
Type: VLAN
Interface: ge-1/0/0.1073741824
Interface type: Dynamic
Dynamic Profile Name: vlan-prof-tpid
State: Active
VLAN Id: 100
Login Time: 2009-03-11 06:48:54 PDT

Type: VLAN
Interface: ge-1/2/0.1073741825
Interface type: Dynamic
Dynamic Profile Name: vlan-prof-tpid
State: Active
VLAN Id: 100
Login Time: 2009-03-11 06:48:54 PDT
```

show subscribers vpi vci extensive (PPPoE-over-ATM Subscriber Session)

```
user@host> show subscribers vpi 40 vci 50 extensive
Type: PPPoE
User Name: testuser
IP Address: 100.0.0.2
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: pp0.0
Interface type: Static
MAC Address: 00:00:65:23:01:02
State: Active
Radius Accounting ID: 2
Session ID: 2
ATM VPI: 40
ATM VCI: 50
Login Time: 2012-12-03 07:49:26 PST
IP Address Pool: pool_1
IPv6 Framed Interface Id: 200:65ff:fe23:102
```

show system alarms

Syntax	show system alarms
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display active system alarms.
Options	This command has no options.
Additional Information	<p>System alarms are preset. They include a <i>configuration</i> alarm that appears when no rescue configuration alarm is set and a <i>license</i> alarm that appears when a software feature is configured and no valid license is configured for the feature. On EX6200 switches, an alarm can be triggered by an internal link error. For more information about system alarms, see the <i>Junos OS Administration Library for Routing Devices</i>.</p> <p>In Junos OS release 11.1 and later, alarms for fans also show the slot number of the malfunctioning fans in the CLI output.</p> <p>Starting with Junos OS Release 13.2, you can view degraded fabric alarms on a routing matrix based on TX Matrix Plus router with 3D SIBs. The alarm indicates that the source FPC is running with a degraded fabric condition. This alarm is an early warning of a possible fabric black-hole condition. When the degraded fabric alarm is raised on the source FPC, you can take remedial action to avoid a fabric black-hole condition. The degraded fabric alarm is raised on the source FPC if both the following conditions are met:</p> <ul style="list-style-type: none"> • The active Packet Forwarding Engine destinations are reachable on one or no active switching planes. • At least one of the inactive switching planes has a fault that causes the destination Packet Forwarding Engine to become unreachable.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show chassis alarms on page 575
List of Sample Output	<p>show system alarms on page 1058</p> <p>show system alarms (Fan Tray) on page 1058</p> <p>show system alarms (QFX Series and OCX Series) on page 1058</p> <p>show system alarms (EX6200) on page 1058</p> <p>show system alarms (TX Matrix Plus router with 3D SIBs) on page 1058</p>
Output Fields	Table 54 on page 1058 lists the output fields for the show system alarms command. Output fields are listed in the approximate order in which they appear.

Table 54: show system alarms Output Fields

Field Name	Field Description
Alarm time	Date and time the alarm was first recorded.
Class	Severity class for this alarm: Minor or Major .
Description	Information about the alarm.

Sample Output

show system alarms

```

user@host> show system alarms
2 alarms currently active
Alarm time          Class    Description
2005-02-24 17:29:34 UTC  Minor    IPsec VPN tunneling usage requires a
license
2005-02-24 17:29:34 UTC  Minor    Rescue configuration is not sent

```

show system alarms (Fan Tray)

```

user@host> show system alarms
4 alarms currently active
Alarm time          Class    Description
2010-11-11 20:27:38 UTC  Major    Side Fan Tray 7 Failure
2010-11-11 20:27:13 UTC  Minor    Side Fan Tray 7 Overspeed
2010-11-11 20:27:13 UTC  Major    Side Fan Tray 5 Failure
2010-11-11 20:27:13 UTC  Major    Side Fan Tray 0 Failure

```

show system alarms (QFX Series and OCX Series)

```

user@switch> show system alarms
2 alarms currently active
Alarm time Class Description
2005-02-24 17:29:34 UTC Minor Rescue configuration is not sent

```

show system alarms (EX6200)

```

user@switch> show system alarms
2 alarms currently active
Alarm time          Class    Description
2013-04-05 16:51:41 PDT  Major    FPC 8 internal link errors detected
2013-04-04 18:05:35 PDT  Minor    Rescue configuration is not set

```

show system alarms (TX Matrix Plus router with 3D SIBs)

```

user@router> show system alarms

sfc0-re0:
-----
2 alarms currently active
Alarm time          Class    Description
2013-05-08 18:13:58 UTC  Major    LCC 0 Major Errors
2013-05-08 17:48:46 UTC  Major    LCC 7 Major Errors

lcc0-re1:
-----

```


1 alarm currently active

Alarm time	Class	Description
2013-05-08 18:19:24 UTC	Major	FPC 1 degraded fabric condition detected

lcc7-re0:

1 alarm currently active

Alarm time	Class	Description
2013-05-08 18:19:24 UTC	Major	FPC 7 degraded fabric condition detected

show system audit

List of Syntax	Syntax on page 1060 Syntax (EX Series Switch and MX Series Router) on page 1060 Syntax (TX Matrix Router) on page 1060 Syntax (TX Matrix Plus Router) on page 1060 Syntax (QFX Series) on page 1060 Syntax (OCX Series) on page 1060
Syntax	show system audit <root-only>
Syntax (EX Series Switch and MX Series Router)	show system audit <all-members> <local> <member <i>member-id</i> > <root-only>
Syntax (TX Matrix Router)	show system audit <all-lcc lcc <i>number</i> scc> <root-only>
Syntax (TX Matrix Plus Router)	show system audit <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i> > <root-only>
Syntax (QFX Series)	show system audit <infrastructure <i>name</i> interconnect-device <i>name</i> node-group <i>name</i> root-only>
Syntax (OCX Series)	show system audit <root-only>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the state and checksum values for file systems.
Options	none —Display the state and checksum values for all file systems. all-chassis —(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display file system MD5 hash and permissions information for all of the chassis. all-lcc —(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display file system MD5 hash and permissions information for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display file system MD5 hash and permissions information for all T1600 or T4000 routers connected to the TX Matrix Plus router.

all-members—(EX4200 switch, QFX Series, and MX Series routers only) (Optional)

Display file system MD5 hash and permissions information on all members of the Virtual Chassis configuration.

lcc *number*—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display file system MD5 hash and permissions information for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display file system MD5 hash and permissions information for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

infrastructure *name*—(QFabric systems only) (Optional) Display file system MD5 hash and permissions information for a fabric control Routing Engine or a fabric control Routing Engine.

interconnect-device *name*—(QFabric systems only) (Optional) Display file system MD5 hash and permissions information for the Interconnect device.

local—(EX4200 switch, QFX Series, and MX Series routers only) (Optional) Display file system MD5 hash and permissions information on the local Virtual Chassis member.

member *member-id*—(EX4200 switch, QFX Series, and MX Series routers only) (Optional) Display file system MD5 hash and permissions information on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

node-group *name*—(QFabric systems only) (Optional) Display file system MD5 hash and permissions information for the Node group

root-only—(Optional) Check only the root (/) file system. On a QFabric system, you can check the root (/) file system on the infrastructure (fabric manager Routing Engine and fabric control Routing Engine), Interconnect device, or Node group.

scc—(TX Matrix routers only) (Optional) Display file system MD5 hash and permissions information for the TX Matrix router (or switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Display file system MD5 hash and permissions information for the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

Additional Information To redirect the output to a file, issue the following command:

```
ssh device-name 'show system audit root-only' > output-file
```

If you save the output of the **show system audit root-only** command to a file, you can compare it to subsequent output from the command to determine whether anything has changed.

By default, when you issue the **show system audit** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

Required Privilege Level admin

List of Sample Output [show system audit root-only on page 1062](#)
[show system audit lcc \(TX Matrix Router\) on page 1063](#)
[show system audit lcc \(TX Matrix Plus Router\) on page 1065](#)
[show system audit root-only \(QFX3500 Switch\) on page 1066](#)

Sample Output

show system audit root-only

```
user@host> show system audit root-only
#          user: root
#          machine: my-host
#          tree: /
date: Fri Feb 11 21:21:46 2000

# .
/set type=file uid=0 gid=0 mode=0755 nlink=1
.          type=dir nlink=23 size=1024 time=950252640.0
.cshrc     uid=3 gid=7 mode=0644 size=177 time=939182975.0 \
           md5digest=f414e06fea6bd646244b98e13d6e6226
.kernel.jkernel.backup \
           mode=0744 size=1934552 time=944688902.0 \
           md5digest=2c343cf0bd9fea8f04f78604feed7aa4
.profile   uid=3 gid=7 mode=0644 nlink=2 size=173 time=939182975.0 \
           md5digest=55a1e3c6c67789c9d3a1cce1ea39f670
COPYRIGHT  uid=3 gid=7 mode=0444 size=3425 time=939182975.0 \
           md5digest=7df8bc77dcee71382ea73eb0ec6a9243
boot.config mode=0644 size=3 time=945902618.0 \
           md5digest=93d722493ed38477338a1405d7dcbb40
boot.help  uid=3 gid=7 mode=0444 size=411 time=939182876.0 \
           md5digest=9b7126385734bcae753f4179ab59d8e5
compat     type=link mode=0777 size=11 time=915149058.0 \
           link=/usr/compat
kernel     mode=0444 size=1947607 time=950230892.0 \
           md5digest=1a2a8aff2fec678a918ba0d6bf063980
kernel.avr uid=1112 size=1947642 time=950252597.0 \
           md5digest=82e1637682d58ec28964dfee7fccb62e
kernel.config \
           mode=0644 size=0 time=915149058.0 \
           md5digest=d41d8cd98f00b204e9800998ecf8427e
```

```
sys          type=link mode=0777 size=11 time=915149029.0 \
link=usr/src/sys
```

show system audit lcc (TX Matrix Router)

```
user@host> show system audit lcc 2
lcc2-re0:
-----
#          user: root
#          machine: rodin-lcc2
#          tree: /
#          date: Mon Sep 13 11:55:33 2004

# .
/set type=file uid=0 gid=0 mode=0555 nlink=1 flags=none
.          type=dir nlink=20 size=512 time=1094982121.0
  COPYRIGHT mode=0644 size=4735 time=986012708.0 \
            md5digest=78396df1404ad742e6eb1be28f0cd63b
  kernel    type=link mode=0700 size=17 time=1090266262.0 \
            link=/packages/jkernel

# ./altconfig
altconfig  type=dir nlink=2 size=512 time=1089801320.0
# ./altconfig
..

# ./altroot
altroot    type=dir nlink=2 size=512 time=1089801320.0
# ./altroot
..

# ./b
b          type=dir mode=0755 nlink=2 size=512 time=1093961429.0
# ./b
..

# ./bin
/set type=file uid=0 gid=0 mode=0700 nlink=1 flags=none
bin        type=dir mode=0755 nlink=2 size=512 time=1089843059.0
  [         type=link size=28 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/test
  cat       type=link size=27 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/cat
  chmod     type=link size=29 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/chmod
  cp        type=link size=26 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/cp
  csh       type=link size=27 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/csh
  date      type=link size=28 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/date
  dd        type=link size=26 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/dd
  df        type=link size=26 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/df
  echo      type=link size=28 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/echo
  ed        type=link size=26 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/ed
```

```

expr      type=link size=28 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/expr
hostname  type=link size=32 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/hostname
kill      type=link size=28 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/kill
ln        type=link size=26 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/ln
ls        type=link size=26 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/ls
mkdir     type=link size=29 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/mkdir
mv        type=link size=26 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/mv
ps        type=link size=26 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/ps
pwd       type=link size=27 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/pwd
rcp       type=link size=27 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/rcp
red       type=link size=26 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/red
rm        type=link size=26 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/rm
rmdir     type=link size=29 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/rmdir
sh        type=link size=26 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/sh
sleep     type=link size=29 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/sleep
stty      type=link size=28 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/stty
sync      type=link size=28 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/sync
tcsh      type=link size=27 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/csh
test      type=link size=28 time=1090266270.0 \
          link=/packages/mnt/jbase/bin/test
# ./bin
..

# ./boot
/set type=file uid=0 gid=0 mode=0444 nlink=1 flags=none
boot      type=dir mode=0555 nlink=3 size=512 time=1095069935.0
  boot0   size=512 time=1094978286.0 \
          md5digest=6f780822dd4ae482a20462b66e542cca
  boot1   mode=0555 size=512 time=1094978294.0 \
          md5digest=8d112b09df342cd0b60fdb9bdcde8e07
  boot2   mode=0555 size=7680 time=1094978294.0 \
          md5digest=28eb58c4068c6b85717e1484f9e028e4
  cdboot  mode=0555 size=165888 time=1094978298.0 \
          md5digest=1474c6b800dfc82ba552d7c36116d07d
  kgzldr.o size=5996 time=1094982121.0 \
          md5digest=c53dc948eb07e2ea4eb0413e4c4634a3
  loader  mode=0555 size=163840 time=1094978298.0 \
          md5digest=82d9dc2d31033476bfb61bb7264c4fed
  loader.4th size=9237 time=986013631.0 \
          md5digest=43144391465ad50267d31e0a320be1de
...

```

show system audit lcc (TX Matrix Plus Router)

```
user@host> show system audit all-chassis
```

```
sfc0-re0:
```

```
-----
#          user: root
#          machine: finalfive
#          tree: /
#          date: Mon May 18 00:13:16 2009

# .
/set type=file uid=0 gid=0 mode=0755 nlink=1 flags=none
.      type=dir nlink=23 size=512 time=1242347096.0
      COPYRIGHT mode=0644 size=6196 time=1168587741.0 \
          md5digest=bbad415e1c29bbdd9b383537100412c
          kernel type=link size=17 time=1242347011.0 link=/packages/jkernel
          staging type=link mode=0777 size=8 time=1242346935.0 link=/var/tmp

# ./snap
.snap type=dir mode=0775 nlink=2 size=512 time=1242346922.0
# ./snap
..

# ./altconfig
altconfig type=dir mode=0500 nlink=2 size=512 time=1242319843.0
# ./altconfig
..

# ./altroot
altroot type=dir mode=0500 nlink=2 size=512 time=1242319843.0
# ./altroot
..

# ./bin
bin type=dir nlink=2 size=512 time=1242346944.0
  \133 type=link size=28 time=1242346942.0 \
      link=/packages/mnt/jbase/bin/test
  cat type=link size=27 time=1242346941.0 \
      link=/packages/mnt/jbase/bin/cat
  chflags type=link size=31 time=1242346941.0 \
      link=/packages/mnt/jbase/bin/chflags
  chmod type=link size=29 time=1242346941.0 \
      link=/packages/mnt/jbase/bin/chmod
  cp type=link size=26 time=1242346941.0 \
      link=/packages/mnt/jbase/bin/cp
  csh type=link size=27 time=1242346941.0 \
      link=/packages/mnt/jbase/bin/csh
  date type=link size=28 time=1242346941.0 \
      link=/packages/mnt/jbase/bin/date
  dd type=link size=26 time=1242346941.0 \
      link=/packages/mnt/jbase/bin/dd
  df type=link size=26 time=1242346941.0 \
      link=/packages/mnt/jbase/bin/df
  echo type=link size=28 time=1242346941.0 \
      link=/packages/mnt/jbase/bin/echo
  ed type=link size=26 time=1242346941.0 \
      link=/packages/mnt/jbase/bin/ed
```

```

expr      type=link size=28 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/expr
hostname  type=link size=32 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/hostname
kill      type=link size=28 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/kill
ln        type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/ln
ls        type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/ls
mkdir     type=link size=29 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/mkdir
mv        type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/mv
pax       type=link size=27 time=1242346944.0 \
          link=/packages/mnt/jbase/bin/pax
ps        type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/ps
pwd       type=link size=27 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/pwd
rcp       type=link size=27 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/rcp
red       type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/red
rm        type=link size=26 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/rm
rmdir     type=link size=29 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/rmdir
sh        type=link size=26 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/sh
sleep     type=link size=29 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/sleep
stty      type=link size=28 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/stty
sync      type=link size=28 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/sync
tcsh      type=link size=27 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/tcsh
test      type=link size=28 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/test
# ./bin
...

```

show system audit root-only (QFX3500 Switch)

```

user@switch> show system audit root-only
#          user: root
#          machine: my-host
#          tree: /
date: Fri Feb 11 21:21:46 2000

# .
/set type=file uid=0 gid=0 mode=0755 nlink=1
.          type=dir nlink=23 size=1024 time=950252640.0
.cshrc     uid=3 gid=7 mode=0644 size=177 time=939182975.0 \
          md5digest=f414e06fea6bd646244b98e13d6e6226
.kernel.jkernel.backup \
          mode=0744 size=1934552 time=944688902.0 \
          md5digest=2c343cf0bd9fea8f04f78604feed7aa4
.profile   uid=3 gid=7 mode=0644 nlink=2 size=173 time=939182975.0 \
          md5digest=55a1e3c6c67789c9d3a1cce1ea39f670

```



```
COPYRIGHT uid=3 gid=7 mode=0444 size=3425 time=939182975.0 \  
md5digest=7df8bc77dcee71382ea73eb0ec6a9243  
boot.config mode=0644 size=3 time=945902618.0 \  
md5digest=93d722493ed38477338a1405d7dcbb40  
boot.help uid=3 gid=7 mode=0444 size=411 time=939182876.0 \  
md5digest=9b7126385734bcae753f4179ab59d8e5  
compat type=link mode=0777 size=11 time=915149058.0 \  
link=/usr/compat  
kernel mode=0444 size=1947607 time=950230892.0 \  
md5digest=1a2a8aff2fec678a918ba0d6bf063980  
kernel.avr uid=1112 size=1947642 time=950252597.0 \  
md5digest=82e1637682d58ec28964dfee7fccb62e  
kernel.config \  
mode=0644 size=0 time=915149058.0 \  
md5digest=d41d8cd98f00b204e9800998ecf8427e  
sys type=link mode=0777 size=11 time=915149029.0 \  
link=usr/src/sys
```

show system boot-messages

List of Syntax	Syntax on page 1068 Syntax (EX Series Switches) on page 1068 Syntax (TX Matrix Router) on page 1068 Syntax (TX Matrix Plus Router) on page 1068 Syntax (MX Series Router) on page 1068 Syntax (QFX Series) on page 1068
Syntax	show system boot-messages
Syntax (EX Series Switches)	show system boot-messages <all-members> <local> <member <i>member-id</i> >
Syntax (TX Matrix Router)	show system boot-messages <all-chassis all-lcc lcc <i>number</i> scc>
Syntax (TX Matrix Plus Router)	show system boot-messages <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i> >
Syntax (MX Series Router)	show system boot-messages <all-members> <local> <member <i>member-id</i> >
Syntax (QFX Series)	show system boot-messages infrastructure <i>name</i> interconnect-device <i>name</i> node-group <i>name</i>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display initial messages generated by the system kernel upon startup. These messages are the contents of <code>/var/run/dmesg.boot</code> .
Options	none —Display all boot time messages. all-chassis —(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display boot time messages for all of the chassis. all-lcc —(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display boot time messages for all T640 routers connected to a TX Matrix router. On a TX Matrix Plus router, display boot time messages for all connected T1600 or T4000 LCCs. all-members —(EX4200 switches and MX Series routers only) (Optional) Display boot time messages on all members of the Virtual Chassis configuration.

infrastructure *name*—(QFabric systems only) (Optional) Display boot time messages on the fabric control Routing Engine or fabric manager Routing engines.

interconnect-device *name*—(QFabric systems only) (Optional) Display boot time messages on the Interconnect device.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display boot time messages for a specific T640 router connected to a TX Matrix router. On a TX Matrix Plus router, display boot time messages for a specific router connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Display boot time messages on the local Virtual Chassis member.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Display boot time messages on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

node-group *name*—(QFabric systems only) (Optional) Display boot time messages on the Node group.

scc—(TX Matrix routers only) (Optional) Display boot time messages for the TX Matrix router (or switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Display boot time messages for the TX Matrix Plus router. Replace *number* with 0.

Additional Information By default, when you issue the **show system boot-messages** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

Required Privilege Level view

Related Documentation

- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

List of Sample Output

[show system boot-messages \(TX Matrix Router\) on page 1070](#)
[show system boot-messages lcc \(TX Matrix Router\) on page 1071](#)
[show system boot-messages \(TX Matrix Plus Router\) on page 1072](#)
[show system boot-messages \(QFX3500 Switch\) on page 1072](#)

Sample Output

show system boot-messages (TX Matrix Router)

```
user@host> show system boot-messages
Copyright (c) 1992-1998 FreeBSD Inc.
Copyright (c) 1996-2000 Juniper Networks, Inc.
All rights reserved.
Copyright (c) 1982, 1986, 1989, 1991, 1993
    The Regents of the University of California. All rights reserved.

JUNOS 4.1-20000216-Zf8469 #0: 2000-02-16 12:57:28 UTC

tlim@single.device1.example.com:/p/build/20000216-0905/4.1/release_kernel/sys/compile/GENERIC
CPU: Pentium Pro (332.55-MHz 686-class CPU)
    Origin = "GenuineIntel" Id = 0x66a Stepping=10
    Features=0x183f9ff<FPU,VME,DE,PSE,TSC,MSR,PAE,MCE,CX8,SEP,MTRR,PGE,MCA,CMOV,<b16>,<b17>,MMX,<b24>>
Teknor CPU Card Recognized
real memory = 805306368 (786432K bytes)
avail memory = 786280448 (767852K bytes)
Probing for devices on PCI bus 0:
chip0 <generic PCI bridge (vendor=8086 device=7192 subclass=0)> rev 3 class 6000
0 on pci0:0:0
chip1 <Intel 82371AB PCI-ISA bridge> rev 1 class 60100 on pci0:7:0
chip2 <Intel 82371AB IDE interface> rev 1 class 10180 on pci0:7:1
chip3 <Intel 82371AB USB interface> rev 1 class c0300 int d irq 11 on pci0:7:2
smb0 <Intel 82371AB SMB controller> rev 1 class 68000 on pci0:7:3
pcic0 <TI PCI-1131 PCI-CardBus Bridge> rev 1 class 60700 int a irq 15 on pci0:13:0
TI1131 PCI Config Reg: [pci only][FUNC0 pci int]
pcic1 <TI PCI-1131 PCI-CardBus Bridge> rev 1 class 60700 int b irq 12 on pci0:13:1
TI1131 PCI Config Reg: [pci only][FUNC1 pci int]
fxp0 <Intel EtherExpress Pro 10/100B Ethernet> rev 8 class 20000 int a irq 12 on
pci0:16:0
chip4 <generic PCI bridge (vendor=1011 device=0022 subclass=4)> rev 4 class 6040
0 on pci0:17:0
fxp1 <Intel EtherExpress Pro 10/100B Ethernet> rev 8 class 20000 int a irq 10 on
pci0:19:0
Probing for devices on PCI bus 1:
mcs0 <Miscellaneous Control Subsystem> rev 12 class ff0000 int a irq 12 on pci1:13:0
fxp2 <Intel EtherExpress Pro 10/100B Ethernet> rev 8 class 20000 int a irq 10 on
pci1:14:0
Probing for devices on the ISA bus:
sc0 at 0x60-0x6f irq 1 on motherboard
sc0: EGA color <16 virtual consoles, flags=0x0>
```

```

ed0 not found at 0x300
ed1 not found at 0x280
ed2 not found at 0x340
psm0 not found at 0x60
sio0 at 0x3f8-0x3ff irq 4 flags 0x20010 on isa
sio0: type 16550A, console
sio1 at 0x3e8-0x3ef irq 5 flags 0x20000 on isa
sio1: type 16550A
sio2 at 0x2f8-0x2ff irq 3 flags 0x20000 on isa
sio2: type 16550A
pcic0 at 0x3e0-0x3e1 on isa
PC-Card ctlr(0) TI PCI-1131 [CardBus bridge mode] (5 mem & 2 I/O windows)
pcic0: slot 0 controller I/O address 0x3e0
npx0 flags 0x1 on motherboard
npx0: INT 16 interface
fdc0: direction bit not set
fdc0: cmd 3 failed at out byte 1 of 3
fdc0 not found at 0x3f0
wdc0 at 0x1f0-0x1f7 irq 14 on isa
wdc0: unit 0 (wd0): <SunDisk SQFXB-80>, single-sector-i/o
wd0: 76MB (156672 sectors), 612 cyls, 8 heads, 32 S/T, 512 B/S
wdc0: unit 1 (wd1): <IBM-DCXA-210000>
wd1: 8063MB (16514064 sectors), 16383 cyls, 16 heads, 63 S/T, 512 B/S
wdc1 not found at 0x170
wdc2 not found at 0x180
ep0 not found at 0x300
fxp0: Ethernet address 00:a0:a5:12:05:5a
fxp1: Ethernet address 00:a0:a5:12:05:59
fxp2: Ethernet address 02:00:00:00:00:01
swapon: adding /dev/wd1s1b as swap device
Automatic reboot in progress...
/dev/rwd0s1a: clean, 16599 free (95 frags, 2063 blocks, 0.1% fragmentation)
/dev/rwd0s1e: clean, 9233 free (9 frags, 1153 blocks, 0.1% fragmentation)
/dev/rwd0s1a: clean, 16599 free (95 frags, 2063 blocks, 0.1% fragmentation)
/dev/rwd1s1f: clean, 4301055 free (335 frags, 537590 blocks, 0.0% fragmentation)

```

show system boot-messages lcc (TX Matrix Router)

```

user@host> show system boot-messages lcc 2
lcc2-re0:
-----
Copyright (c) 1996-2001, Juniper Networks, Inc.
All rights reserved.
Copyright (c) 1992-2001 The FreeBSD Project.
Copyright (c) 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994
    The Regents of the University of California. All rights reserved.
JUNOS 7.0-20040912.0 #0: 2004-09-12 09:16:32 UTC

builder@benten.host:/build/benten-b/7.0/20040912.0/obj-i386/sys/compile/JUNIPER
Timecounter "i8254" frequency 1193182 Hz
Timecounter "TSC" frequency 601368936 Hz
CPU: Pentium III/Pentium III Xeon/Celeron (601.37-MHz 686-class CPU)
    Origin = "GenuineIntel" Id = 0x68a Stepping = 10

Features=0x387f9ff<FPU,WE,DE,PSE,TSC,MSR,PAE,MCE,CX8,SEP,MTRR,PGE,MCA,CMOV,PAT,PSE36,PN,MMX,FXSR,SSE>
real memory = 2147467264 (2097136K bytes)
sio0: gdb debugging port
avail memory = 2084040704 (2035196K bytes)
Preloaded elf kernel "kernel" at 0xc06d9000.
DEVFS: ready for devices
Pentium Pro MTRR support enabled

```

```

md0: Malloc disk
DRAM Data Integrity Mode: ECC Mode with h/w scrubbing
npx0: <math processor> on motherboard
npx0: INT 16 interface
pcib0: <ServerWorks NB6635 3.0LE host to PCI bridge> on motherboard
pci0: <PCI bus> on pcib0
pcic-pci0: <TI PCI-1410 PCI-CardBus Bridge> irq 15 at device 1.0 on pci0
pcic-pci0: TI12XX PCI Config Reg: [pwr save][pci only]
fxp0: <Intel Embedded 10/100 Ethernet> port 0x1000-0x103f mem
0xfb800000-0xfb81ffff,0xfb820000-0xfb820fff irq 9 at device 3.0 on pci0
fxp1: <Intel Embedded 10/100 Ethernet> port 0x1040-0x107f mem
0xfb840000-0xfb85ffff,0xfb821000-0xfb821fff irq 11 at device 4.0 on pci0
...

```

show system boot-messages (TX Matrix Plus Router)

```

user@host> show system boot-messages
sfc0-re0:
-----
Copyright (c) 1996-2009, Juniper Networks, Inc.
All rights reserved.
Copyright (c) 1992-2006 The FreeBSD Project.
Copyright (c) 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994
    The Regents of the University of California. All rights reserved.
JUNOS 9.6B3.3 #0: 2009-06-17 19:52:08 UTC

builder@device1.example.com:/volume/build/junos/9.6/release/9.6B3.3/obj-i386/bsd/sys/compile/JUNIPER
MPTable: Timecounter "i8254" frequency 1193182 Hz quality 0 CPU: Intel(R) Xeon(R)
CPU          L5238 @ 2.66GHz (2660.01-MHz 686-class CPU) Origin =
"GenuineIntel" Id = 0x1067a Stepping = 10 Features=0xbfebfbff
...
lcc1-re0:
-----
Copyright (c) 1996-2009, Juniper Networks, Inc.
All rights reserved.
Copyright (c) 1992-2006 The FreeBSD Project.
Copyright (c) 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994
    The Regents of the University of California. All rights reserved.
JUNOS 9.6-20090617.0 #0: 2009-06-17 04:15:14 UTC

builder@device1.example.com:/volume/build/junos/9.6/production/20090617.0/obj-i386/bsd/sys/compile/JUNIPER
Timecounter "i8254" frequency 1193182 Hz quality 0
CPU: Intel(R) Xeon(R) CPU          @ 1.86GHz (1862.01-MHz 686-class CPU)

Origin = "GenuineIntel" Id = 0x1067a Stepping = 10
Features=0xbfebfbff
...

```

show system boot-messages (QFX3500 Switch)

```

user@switch> show sytem boot-messages
getmemsize: msgbufp[size=32768] = 0x81d07fe4

System physical memory distribution:
-----
Total physical memory: 4160749568 (3968 MB)
Physical memory used: 3472883712 (3312 MB)
Physical memory allocated to kernel: 2130706432 (2032 MB)
Physical memory allocated to user BTLB: 1342177280 (1280 MB)
-----

```

```

Copyright (c) 1996-2010, Juniper Networks, Inc.
All rights reserved.
Copyright (c) 1992-2006 The FreeBSD Project.
Copyright (c) 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994
    The Regents of the University of California. All rights reserved.
JUNOS 11.1I #0: 2010-09-17 19:18:07 UTC
  ssiano@device.example.com:/c/ssiano/DEV_QFX_SI_BRANCH/03/20100917.399988/
obj-xlr/bsd/sys/compile/JUNIPER-DCTOR
WARNING: debug.mpsafenet forced to 0 as ipsec requires Giant
JUNOS 11.1I #0: 2010-09-17 19:18:07 UTC
  ssiano@svl-junos-pool125.d:/c/ssiano/DEV_QFX_SI_BRANCH/03/20100917.399988/
obj-xlr/bsd/sys/compile/JUNIPER-DCTOR
real memory = 3472883712 (3312MB)
avail memory = 1708171264 (1629MB)
cpuid: 0, btlb_cpumap:0xffffffff8
FreeBSD/SMP: Multiprocessor System Detected: 12 CPUs
ETHERNET SOCKET BRIDGE initialising
Initializing QFX platform properties ..
cpu0 on motherboard
: RMI's XLR CPU Rev. 0.3 with no FPU implemented
  L1 Cache: I size 32kb(32 line), D size 32kb(32 line), eight way.
  L2 Cache: Size 1024kb, eight way
pic_lbus0: <XLR Local Bus>
pic_lbus0: <XLR Local Bus> on motherboard
Enter qfx control ethernet probe addr:0xc5eeec00
gmac4: <XLR GMAC GE Ethernet> on pic_lbus0
me0: Ethernet address 00:1d:b5:f7:68:40
Enter qfx control ethernet probe addr:0xc5eeeb40
gmac5: <XLR GMAC GE Ethernet> on pic_lbus0
me1: Ethernet address 00:1d:b5:f7:68:41
Enter qfx control ethernet probe addr:0xc5eeea80
gmac6: <XLR GMAC GE Ethernet> on pic_lbus0
me1: Ethernet address 00:1d:b5:f7:68:42
sio0 on pic_lbus0
Entering sioattach
sio0: type 16550A, console
xls_setup_intr: skip irq 3, xlr regs are set up somewhere else.
gblmem0 on pic_lbus0
ehci0: <RMI XLS USB 2.0 controller> on pic_lbus0
ehci_bus_attach: allocated resource. tag=1, base=bef24000
xls_ehci_init: endian hardware swapping NOT enabled.
usb0: EHCI version 1.0
usb0 on ehci0
usb0: USB revision 2.0
uhub0: vendor 0x0000 EHCI root hub, class 9/0, rev 2.00/1.00, addr 1
uhub0: 2 ports with 2 removable, self powered
umass0: USB USBFlashDrive, rev 2.00/11.00, addr 2
pcib0: PCIe link 0 up
pcib0: PCIe link 2 up
pcib0: PCIe link 3 up
pcib0: <XLS PCI Host Controller> on pic_lbus0
pci0: <PCI bus> on pcib0
pcib1: <PCI-PCI bridge> at device 0.0 on pci0
pci1: <PCI bus> on pcib1
pci1: <network, ethernet> at device 0.0 (no driver attached)
pcib2: <PCI-PCI bridge> at device 1.0 on pci0
pcib3: <PCI-PCI bridge> at device 2.0 on pci0
pci2: <PCI bus> on pcib3
pci2: <network, ethernet> at device 0.0 (no driver attached)
pcib4: <PCI-PCI bridge> at device 3.0 on pci0
pci3: <PCI bus> on pcib4

```

```
pci3: <network, ethernet> at device 0.0 (no driver attached)
cfi device address space at 0xbc000000
cfi0: <AMD/Fujitsu - 8MB> on pic_lbus0
cfi device address space at 0xbc000000
i2c0: <I2C bus controller> on pic_lbus0
i2c1: <I2C bus controller> on pic_lbus0
qfx_fmn0 on pic_lbus0
pool offset 1503776768
xlr_lbus0: <XLR Local Bus Controller> on motherboard
qfx_bcpld_probe[124]
qfx_bcpld_probe[138]: dev_type=0x0
qfx_bcpld_probe[124]
qfx_bcpld0: QFX BCPLD probe success
qfx_bcpld0qfx_bcpld_attach[174]
qfx_bcpld_attach[207] : bus_space_tag=0x0, bus_space_handle=0xbd900000
qfx_bcpld_probe[124]
qfx_bcpld1: QFX BCPLD probe success
qfx_bcpld1qfx_bcpld_attach[174]
tor_bcpld_slave_attach[1245] : bus_space_tag=0x0, bus_space_handle=0xbda00000
Initializing product: 96 ..
bmeb: bmeb_lib_init done 0xc60a5000, addr 0x809c99a0
bme0:Virtual BME driver initializing
Timecounter "mips" frequency 1200000000 Hz quality 0
Timecounter "xlr_pic_timer" frequency 66666666 Hz quality 1
Timecounters tick every 1.000 msec
Loading the NETPFE fc module
IPsec: Initialized Security Association Processing.
SMP: AP CPU #3 Launched!
SMP: AP CPU #1 Launched!
SMP: AP CPU #2 Launched!
SMP: AP CPU #4 Launched!
SMP: AP CPU #5 Launched!
SMP: AP CPU #7 Launched!
SMP: AP CPU #6 Launched!
SMP: AP CPU #11 Launched!
SMP: AP CPU #10 Launched!
SMP: AP CPU #9 Launched!
SMP: AP CPU #8 Launched!
da0 at umass-sim0 bus 0 target 0 lun 0
da0: <USB USBFlashDrive 1100> Removable Direct Access SCSI-0 device
da0: 40.000MB/s transfers
da0: 3920MB (8028160 512 byte sectors: 255H 63S/T 499C)
Trying to mount root from ufs:/dev/da0s1a
```


show system buffers

List of Syntax	Syntax on page 1075 Syntax (EX Series) on page 1075 Syntax (TX Matrix Router) on page 1075 Syntax (TX Matrix Plus Router) on page 1075 Syntax (MX Series Router) on page 1075 Syntax (QFX Series) on page 1075
Syntax	show system buffers
Syntax (EX Series)	show system buffers <all-members> <local> <member <i>member-id</i> >
Syntax (TX Matrix Router)	show system buffers <all-chassis all-lcc lcc <i>number</i> scc>
Syntax (TX Matrix Plus Router)	show system buffers <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i> >
Syntax (MX Series Router)	show system buffers <all-members> <local> <member <i>member-id</i> >
Syntax (QFX Series)	show system buffers <infrastructure <i>name</i> interconnect-device <i>name</i> node-group <i>name</i> root-only (infrastructure <i>name</i> interconnect-device <i>name</i> node-group <i>name</i>)>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display information about the buffer pool that the Routing Engine uses for local traffic. Local traffic is the routing and management traffic that is exchanged between the Routing Engine and the Packet Forwarding Engine within the router or switch, as well as the routing and management traffic from IP (that is, from OSPF, BGP, SNMP, ping operations, and so on).
Options	none —Show all buffer statistics. all-lcc —(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, show buffer statistics for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, show buffer statistics for all routers connected to the TX Matrix Plus router.

all-chassis—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Show buffer statistics for all of the chassis.

all-members—(EX4200 switches and MX Series routers only) (Optional) Show buffer statistics for all members of the Virtual Chassis configuration.

infrastructure *name*—(QFabric systems only) (Optional) Show buffer statistics for a fabric control Routing Engine or a fabric control Routing Engine.

interconnect-device *name*—(QFabric systems only) (Optional) Show buffer statistics for the Interconnect device.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, show buffer statistics for a specific T640 router (or line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, show buffer statistics for a specific router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Show buffer statistics for the local Virtual Chassis member.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Show buffer statistics for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

node-group *name*—(QFabric systems only) (Optional) Show buffer statistics for the Node group

sfc—(TX Matrix Plus routers only) (Optional) Show buffer statistics for the TX Matrix Plus router. Replace *number* with 0.

Additional Information By default, when you issue the **show system buffers** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

A special type of memory buffer called a *cluster* is 2 KB in size. For more information, see *The Design and Implementation of the 4.4BSD Operation System* by McKusic, Bostic, Karels, and Quarterman.

Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• Routing Matrix with a TX Matrix Plus Router Solutions Page
List of Sample Output	show system buffers on page 1078 show system buffers scc (TX Matrix Router) on page 1079 show system buffers sfc (TX Matrix Plus Router) on page 1079 show system buffers all-chassis (TX Matrix Plus Router) on page 1079 show system buffers node-group (QFabric System) on page 1080
Output Fields	Table 55 on page 1078 describes the output fields for the show system buffers command. Output fields are listed in the approximate order in which they appear.

Table 55: show system buffers Output Fields

Field Name	Field Description
mbufs in use	Memory buffers (mbufs) are 128-byte buffers that are used for various purposes inside the kernel. Each memory buffer has a type, and the output itemizes the amount allocated for each type. Types with no memory buffers allocated are not displayed.
mbufs allocated to packet headers	Number of memory buffers currently holding packet headers
mbufs allocated to control blocks	Number of memory buffers currently holding the state for sockets.
mbufs allocated to send data	Number of memory buffers currently holding socket send data.
mbufs allocated to pfe refill data	Number of memory buffers currently holding Packet Forwarding Engine refill data.
mbufs allocated to fxp data	Number of memory buffers currently holding fxp data.
mbufs allocated to socket names and addresses	Number of memory buffers currently holding addresses for sockets.
mbuf clusters in use	Allocation statistics for memory buffer clusters.
allocated to network	Total amount of memory in use by the networking and interprocess communication (IPC) code.
requests for memory denied	Number of times a memory allocation request within the IPC and networking code failed.
requests for memory delayed	Number of times a memory allocation request within the IPC and networking code was postponed.
calls to protocol drain routines	Number of times a memory allocation request within the IPC and networking code triggered a memory reclamation attempt.

Sample Output

show system buffers

```

user@host> show system buffers
397/893/1290 mbufs in use (current/cache/total)
395/331/726/30000 mbuf clusters in use (current/cache/total/max)
384/256 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
889K/885K/1774K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/5/1024 sfbufs in use (current/peak/max)

```

```

0 requests for sbufs denied
0 requests for sbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

```

show system buffers scc (TX Matrix Router)

```

user@host> show system buffers scc
213 mbufs in use:
    11 mbufs allocated to packet headers
    26 mbufs allocated to socket names and addresses
    2 mbufs allocated to socket options
    17 mbufs allocated to socket send data
    2 mbufs allocated to pfe data
    155 mbufs allocated to fxp data (rx)
    511 mbufs allocated to <mbuf type 86>
    256 mbufs allocated to <mbuf type 92>
924/1162 mbuf clusters in use
2788 Kbytes allocated to network (75% in use)
0 requests for memory denied
0 requests for memory delayed
0 calls to protocol drain routines

```

show system buffers sfc (TX Matrix Plus Router)

```

user@host> show system buffers sfc 0

sfc0-re0:
-----
4363/2807/7170 mbufs in use (current/cache/total)
4358/1968/6326/30000 mbuf clusters in use (current/cache/total/max)
256/128 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
9806K/4637K/14444K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/10/1024 sbufs in use (current/peak/max)
0 requests for sbufs denied
0 requests for sbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

```

show system buffers all-chassis (TX Matrix Plus Router)

```

user@host> show system buffers all-chassis

sfc0-re0:
-----
4363/2807/7170 mbufs in use (current/cache/total)
4358/1968/6326/30000 mbuf clusters in use (current/cache/total/max)
256/128 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
9806K/4637K/14444K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/10/1024 sbufs in use (current/peak/max)
0 requests for sbufs denied
0 requests for sbufs delayed

```

```
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines
```

```
lcc0-re0:
```

```
-----
772/2558/3330 mbufs in use (current/cache/total)
772/598/1370/30000 mbuf clusters in use (current/cache/total/max)
768/512 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
1737K/1835K/3572K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/4/1024 sbufs in use (current/peak/max)
0 requests for sbufs denied
0 requests for sbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines
```

```
lcc1-re0:
```

```
-----
773/2437/3210 mbufs in use (current/cache/total)
773/453/1226/30000 mbuf clusters in use (current/cache/total/max)
768/384 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
1739K/1515K/3254K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/7/1024 sbufs in use (current/peak/max)
0 requests for sbufs denied
0 requests for sbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines
```

```
lcc2-re0:
```

```
-----
816/2514/3330 mbufs in use (current/cache/total)
816/554/1370/30000 mbuf clusters in use (current/cache/total/max)
768/512 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
1836K/1736K/3572K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/4/1024 sbufs in use (current/peak/max)
0 requests for sbufs denied
0 requests for sbufs delayed
0 requests for I/O initiated by sendfile
```

show system buffers node-group (QFabric System)

```
user@switch> show system buffers node-group node1
node-group node1:
```

```
-----
2/2698/2700 mbufs in use (current/cache/total)
2/1520/1522/30000 mbuf clusters in use (current/cache/total/max)
0/1280 mbuf+clusters out of packet secondary zone in use (current/cache)
```

```

0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
4K/3714K/3719K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/6/6656 sfbufs in use (current/peak/max)
0 requests for sfbufs denied
0 requests for sfbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

```

re0:

```

-----
516/639/1155 mbufs in use (current/cache/total)
515/147/662/30000 mbuf clusters in use (current/cache/total/max)
512/128 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
1159K/453K/1612K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/4/1024 sfbufs in use (current/peak/max)
0 requests for sfbufs denied
0 requests for sfbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

```

re1:

```

-----
519/771/1290 mbufs in use (current/cache/total)
518/176/694/30000 mbuf clusters in use (current/cache/total/max)
512/128 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
1165K/544K/1710K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/4/1024 sfbufs in use (current/peak/max)
0 requests for sfbufs denied
0 requests for sfbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

```

show system certificate

Syntax	<code>show system certificate</code> <code><certificate-id></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	(Encryption interface on M Series, T Series routers, QFX Series, and OCX Series switches only) Display installed certificates signed by the Juniper Networks certificate authority.
Options	none —Display all installed certificates signed by the Juniper Networks certificate authority. certificate-id —(Optional) Display the details of a particular certificate.
Required Privilege Level	maintenance
List of Sample Output	show system certificate on page 1083 show system certificate (QFX Series) on page 1083
Output Fields	Table 56 on page 1082 lists the output fields for the show system certificate command. Output fields are listed in the approximate order in which they appear.

Table 56: show system certificate Output Fields

Field Name	Field Description
Certificate identifier	Unique identifier associated with a certificate. The certificate identifier is the common name of the subject.
Issuer Subject	Information about the certificate issuer and the distinguished name (DN) of the issuer, respectively: <ul style="list-style-type: none"> • Organization—Name of the owner's organization. • Organizational unit—Name of the owner's department. • Country—Two-character country code in which the owner's system is located. • State—State in the USA in which the owner is using the certificate. • Locality—City in which the owner's system is located. • Common name—Name of the owner of the certificate. • E-mail address—E-mail address of the owner of the certificate.
Validity	When a certificate is valid.
Signature algorithm	Encryption algorithm applied to the installed certificate.
Public key algorithm	Encryption algorithm applied to the public key.

Sample Output

show system certificate

```
user@host> show system certificate
Certificate identifier: Dallas-v3
  Issuer:
    Organization: Juniper Networks, Organizational unit: Juniper CA,
    Country: US, State: CA, Locality: Sunnyvale, Common name: Dallas CA,
    E-mail address:ca@juniper.net
  Subject:
    Organization: Juniper Networks, Organizational unit: Juniper CA,
    Country: US, State: CA, Locality: Sunnyvale, Common name: Dallas-v3,
    E-mail address:ca@juniper.net
  Validity:
    Not before: Mar 13 03:23:25 2004 GMT
    Not after: Mar 24 03:23:25 2014 GMT
  Signature algorithm: sha1WithRSAEncryption
  Public key algorithm: dsaEncryption
```

show system certificate (QFX Series)

```
user@host> show system certificate
Certificate identifier: Dallas-v3
  Issuer:
    Organization: Juniper Networks, Organizational unit: Juniper CA,
    Country: US, State: CA, Locality: Sunnyvale, Common name: Dallas CA,
    E-mail address:ca@juniper.net
  Subject:
    Organization: Juniper Networks, Organizational unit: Juniper CA,
    Country: US, State: CA, Locality: Sunnyvale, Common name: Dallas-v3,
    E-mail address:ca@juniper.net
  Validity:
    Not before: Mar 13 03:23:25 2004 GMT
    Not after: Mar 24 03:23:25 2014 GMT
  Signature algorithm: sha1WithRSAEncryption
  Public key algorithm: dsaEncryption
```

show system commit


Syntax	<pre>show system commit <revision> <server></pre>	
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Option server introduced in Junos OS Release 12.1 for the PTX Series router.</p> <p>Option revision introduced in Junos OS Release 14.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>	
Description	Display the system commit history and any pending commit operation.	
Options	<p>none—Display the last 50 commit operations listed, most recent to first.</p> <p>revision—(Optional) Display the revision number of the active configuration of the Routing Engine(s).</p> <p>server—(Optional) Display commit server status.</p>	
	<div>  <p>NOTE: By default, the status of the commit server is “Not running”. The commit server starts running only when a commit job is added to the batch.</p> </div>	
Required Privilege Level	view	
Related Documentation	<ul style="list-style-type: none"> clear system commit on page 354 show system commit revision 	
List of Sample Output	<p>show system commit on page 1086</p> <p>show system commit (At a Particular Time) on page 1086</p> <p>show system commit (At the Next Reboot) on page 1086</p> <p>show system commit (Rollback Pending) on page 1086</p> <p>show system commit (QFX Series) on page 1086</p>	
Output Fields	<p>Table 57 on page 1084 describes the output fields for the show system commit command. Output fields are listed in the approximate order in which they appear.</p>	

Table 57: show system commit Output Fields

Field Name	Field Description	Level of Output
<number>	Displays the last 50 commit operations listed, most recent to first. The identifier <number> designates a configuration created for recovery using the request system configuration rescue save command.	none

Table 57: show system commit Output Fields (*continued*)

Field Name	Field Description	Level of Output
<time-stamp>	Date and time of the commit operation.	none
<root>/<username>	User who executed the commit operation.	none
<method>	Method used to execute the commit operation: <ul style="list-style-type: none"> • CLI—CLI interactive user performed the commit operation. • Junos XML protocol—Junos XML protocol client performed the commit operation. • synchronize—The commit synchronize command was performed on the other Routing Engine. • snmp—An SNMP set request caused the commit operation. • button—A button on the router or switch was pressed to commit a rescue configuration for recovery. • autoinstall—A configuration obtained through autoinstallation was committed. • other—When there is no login name associated with the session, the values for user and client default to root and other. For example, during a reboot after package installation, mgd commits the configuration as a system commit, and there is no login associated with the commit. 	none

Sample Output

show system commit

```
user@host> show system commit
0   2003-07-28 19:14:04 PDT by root via other
1   2003-07-25 22:01:36 PDT by user via cli
2   2003-07-25 22:01:32 PDT by user via cli
3   2003-07-25 21:30:13 PDT by root via button
4   2003-07-25 13:46:48 PDT by user via cli
5   2003-07-25 05:33:21 PDT by root via autoinstall
...
rescue 2002-05-10 15:32:03 PDT by root via other
```

show system commit (At a Particular Time)

```
user@host> show system commit
commit requested by root via cli at Tue May  7 15:59:00 2002
```

show system commit (At the Next Reboot)

```
user@host> show system commit
commit requested by root via cli at reboot
```

show system commit (Rollback Pending)

```
user@host> show system commit
0 2005-01-05 15:00:37 PST by root via cli commit confirmed, rollback in 3mins
```

show system commit (QFX Series)

```
user@switch> show system commit
0 2011-11-25 19:17:49 PST by root via cli
```

show system configuration archival

Syntax show system configuration archival

Release Information Introduced in Junos OS Release 7.6.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 11.1 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display directory and number of files queued for archival transfer.



NOTE: The [edit system configuration] hierarchy is not available on QFabric systems.

Options This command has no options.

Required Privilege Level maintenance

List of Sample Output [show system configuration archival on page 1087](#)

Sample Output

show system configuration archival

```
user@host> show system configuration archival
```

```
/var/transfer/config/:
total 8
```

show system configuration rescue

Syntax show system configuration rescue

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 11.1 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display a rescue configuration, if one exists.



NOTE: The [edit system configuration] hierarchy is not available on QFabric systems.

Options This command has no options.

Required Privilege Level maintenance

Related Documentation • [show system configuration archival on page 1087](#)

List of Sample Output [show system configuration rescue on page 1088](#)

Sample Output

show system configuration rescue

```
user@switch> show system configuration rescue
version "7.3"; groups {
  global {
    system {
      host-name router1;
      domain-name customer.net;
      domain-search [ customer.net ];
      backup-router 192.168.124.254;
      name-server {
        172.17.28.11;
        172.17.28.101;
        172.17.28.100;
        172.17.28.10;
      }
      login {
        user user1 {
          uid 928;
          class ;
          shell csh;
          authentication {
            encrypted-password "$ABC123"; ## SECRET-DATA
          }
        }
      }
    }
  }
  services {
```

```
        ftp;  
        rlogin;  
        rsh;  
        telnet;  
    }  
}  
.....
```

show system connections

List of Syntax	Syntax on page 1090 Syntax (EX Series) on page 1090 Syntax (TX Matrix Router) on page 1090 Syntax (TX Matrix Plus Router) on page 1090 Syntax (MX Series Router) on page 1090 Syntax (QFX Series) on page 1090 Syntax (OCX Series) on page 1090
Syntax	<pre>show system connections <extensive> <all-chassis all-lcc lcc <i>number</i> scc> <inet inet6> <show-routing-instances></pre>
Syntax (EX Series)	<pre>show system connections <extensive> <all-members> <inet inet6> <local> <member <i>member-id</i>> <show-routing-instances></pre>
Syntax (TX Matrix Router)	<pre>show system connections <extensive> <all-chassis all-lcc lcc <i>number</i> scc> <inet inet6> <show-routing-instances></pre>
Syntax (TX Matrix Plus Router)	<pre>show system connections <extensive> <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i>> <inet inet6> <show-routing-instances></pre>
Syntax (MX Series Router)	<pre>show system connections <extensive> <all-members> <inet inet6> <local> <member <i>member-id</i>> <show-routing-instances></pre>
Syntax (QFX Series)	<pre>show system connections <extensive> <inet> <infrastructure <i>name</i>> <interconnect-device <i>name</i>> <node-group <i>name</i>> <show-routing-instances></pre>
Syntax (OCX Series)	<pre>show system connections</pre>

<extensive>
 <inet>
 <show-routing-instances>

- Release Information** Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.
 Command introduced in Junos OS Release 11.1 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
- Description** Display information about the active IP sockets on the Routing Engine. Use this command to verify which servers are active on a system and what connections are currently in progress.
- Options** **none**—Display information about all active IP sockets on the Routing Engine.
- extensive**—(Optional) Display exhaustive system process information, which, for TCP connections, includes the TCP control block. This option is useful for debugging TCP connections.
- all-chassis**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display system connection activity for all the routers in the chassis.
- all-lcc**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system connection activity for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display system connection activity for all connected T1600 or T4000 LCCs
- all-members**—(EX4200 switches and MX Series routers only) (Optional) Display system connection activity for all members of the Virtual Chassis configuration.
- inet | inet6**—(Optional) Display IPv4 connections or IPv6 connections, respectively.
- infrastructure *name***—(QFabric systems only) (Optional) Display system connection activity for the fabric control Routing Engines or fabric manager Routing Engines.
- interconnect-device *name***—(QFabric systems only) (Optional) Display system connection activity for the Interconnect device.
- lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system connection activity for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display system connection activity for a specific router that is connected to the TX Matrix Plus router. Replace *number* with the following values depending on the LCC configuration:
- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
 - 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.

- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Display system connection activity for the local Virtual Chassis member.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Display system connection activity for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

node-group *name*—(QFabric systems only) (Optional) Display system connection activity for the Node group.

scc—(TX Matrix routers only) (Optional) Display system connection activity for the TX Matrix router (or switch-card chassis).

sfc—(TX Matrix routers only) (Optional) Display system connection activity for the TX Matrix Plus router.

show-routing-instances—(Optional) Display routing instances.

Additional Information By default, when you issue the **show system connections** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

Required Privilege Level view

Related Documentation • [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

List of Sample Output [show system connections on page 1093](#)
[show system connections extensive on page 1094](#)
[show system connections lcc \(TX Matrix Router\) on page 1095](#)
[show system connections show-routing-instances on page 1095](#)
[show system connections \(TX Matrix Plus Router\) on page 1096](#)
[show system connections sfc \(TX Matrix Plus Router\) on page 1099](#)
[show system connections show-routing-instances \(TX Matrix Plus Router\) on page 1101](#)
[show system connections \(QFX3500 Switch\) on page 1106](#)

Output Fields [Table 58 on page 1093](#) describes the output fields for the **show system connections** command. Output fields are listed in the approximate order in which they appear.

Table 58: show system connections Output Fields

Field Name	Field Description
Proto	Protocol of the socket: IP , TCP , or UDP for IPv4 or IPv6.
Recv-Q	Number of input packets received by the protocol and waiting to be processed by the application.
Send-Q	Number of output packets sent by the application and waiting to be processed by the protocol.
Local Address	Local address and port of the socket, separated by a period. An asterisk (*) indicates that the bound address is the wildcard address. Server sockets typically have the wildcard address and a well-known port bound to them.
Foreign Address	Foreign address and port of the socket, separated by a period. An asterisk (*) indicates that the address or port is a wildcard.
Routing Instance	(Displayed only when the show-routing-instance option is used.) Routing instances associated with active IP sockets on the Routing Engine.
(state)	For TCP, the protocol state of the socket.

Sample Output

show system connections

```

user@host> show system connections
Active Internet connections (including servers)
Proto Recv-Q Send-Q Local Address           Foreign Address          (state)
tcp    0      0 192.168.4.16.513        208.197.169.254.894     ESTABLISHED
tcp    0      0 192.168.4.16.513        208.197.169.195.945     ESTABLISHED
tcp    0      0 *.23                    *.*                       LISTEN
tcp    0      0 *.22                    *.*                       LISTEN
tcp    0      0 *.513                   *.*                       LISTEN
tcp00 *.514                *.*                       LISTEN
tcp 0 0*.21                    *.*                       LISTEN
tcp00 *.79                *.*                       LISTEN
tcp 00 *.1023                 *.*                       LISTEN
tcp 00 *.111                  *.*                       LISTEN
udp00192.168.4.16.1634    208.197.169.249.2049
udp00192.168.4.16.1627    208.197.169.254.2049
udp00192.168.4.16.1371    208.197.169.195.2049
udp00*.*                  *.*
udp00*.9999               *.*
udp00 *.161              *.*
udp00192.168.4.16.1039    192.168.4.16.1023
udp00192.168.4.16.1038    192.168.4.16.1023
udp 00 192.168.4.16.1037      192.168.4.16.1023
udp00192.168.4.16.1036    192.168.4.16.1023
udp00*.1022               *.*
udp00*.1023               *.*
udp00*.111                *.*
udp00*.*                  *.*

```

show system connections extensive

```
user@host> show system connections extensive
```

```
Active Internet connections (including servers)
Proto Recv-Q Send-Q Local Address                               Foreign Address
      (state)
tcp4      0      6 192.168.187.15.23
172.27.133.138.3013 ESTABLISHED
  sndsbcc:          6 sndsbmbcnt:      256 sndsbmbmax:    272000
  sndsblowat:      2048 sndsbhiwat:    34000
  rcvsbcc:          0 rcvsbmbcnt:      0 rcvsbmbmax:    533120
  rcvsblowat:      1 rcvsbhiwat:    66640
  proc id:          0 proc name:
    iss: 2566994072 sndup: 2566994491
    snduna: 2566994491 sndnxt: 2566994494 sndwnd:    64094
    sndmax: 2566994494 sndcwnd:    6589 sndssthresh:    2720
    irs: 236981199 rcvup: 236981325
    rcvnxt: 236981327 rcvadv: 237046862 rcvwnd:    66640
    rtt: 140058623 srtt: 15519 rttv:    908
    rxtcur: 1200 rxtshift:    0 rtseq: 2566994491
    rttmin: 1000 mss: 1360
    flags: SACK_PERMIT [0x2000200]
tcp4      0      0 10.255.165.93.179
10.255.165.203.65141 ESTABLISHED
  sndsbcc:          0 sndsbmbcnt:      0 sndsbmbmax:    131072
  sndsblowat:      2048 sndsbhiwat:    16384
  rcvsbcc:          0 rcvsbmbcnt:      0 rcvsbmbmax:    131072
  rcvsblowat:      1 rcvsbhiwat:    16384
  proc id:          0 proc name:
    iss: 2555995917 sndup: 2555995917
    snduna: 2555995917 sndnxt: 2555995917 sndwnd:    16384
    sndmax: 2555995917 sndcwnd:    1000 sndssthresh: 1073725440
    irs: 2123825753 rcvup: 2123860681
    rcvnxt: 2123860681 rcvadv: 2123877065 rcvwnd:    16384
    rtt: 0 srtt: 3309 rttv:    72
    rxtcur: 1200 rxtshift:    0 rtseq: 2555995898
    rttmin: 1000 mss: 500
    flags: REQ_SCALE RCVD_SCALE REQ_TSTMP RCVD_TSTMP SACK_PERMIT [0x3e0]
tcp4      0      0 10.255.165.93.179
10.255.165.203.65141 ESTABLISHED
  sndsbcc:          0 sndsbmbcnt:      0 sndsbmbmax:    131072
  sndsblowat:      2048 sndsbhiwat:    16384
  rcvsbcc:          0 rcvsbmbcnt:      0 rcvsbmbmax:    131072
  rcvsblowat:      1 rcvsbhiwat:    16384
  proc id:          5022 proc name: rpd
    iss: 2123825753 sndup: 2123860662
    snduna: 2123860681 sndnxt: 2123860681 sndwnd:    16384
    sndmax: 2123860681 sndcwnd:    1000 sndssthresh: 1073725440
    irs: 2555995917 rcvup: 2555995917
    rcvnxt: 2555995917 rcvadv: 2556012301 rcvwnd:    16384
    rtt: 0 srtt: 3279 rttv:    22
    rxtcur: 1200 rxtshift:    0 rtseq: 2123860662
    rttmin: 1000 mss: 500
    flags: REQ_SCALE RCVD_SCALE REQ_TSTMP RCVD_TSTMP SACK_PERMIT [0x100003e0]
tcp4      0      0 10.255.165.113.52404
10.255.165.113.52404 ESTABLISHED
  sndsbcc:          0 sndsbmbcnt:      0 sndsbmbmax:    131072
  sndsblowat:      2048 sndsbhiwat:    16384
  rcvsbcc:          0 rcvsbmbcnt:      0 rcvsbmbmax:    131072
  rcvsblowat:      1 rcvsbhiwat:    16384
```

```

proc id:      0  proc name:
  iss: 1109297190  sndup: 1109332099
  snduna: 1109332118  sndnxt: 1109332118  sndwnd: 16384
  sndmax: 1109332118  sndcwnd: 1000  sndssthresh: 1073725440
  irs: 1476831634  rcvup: 1476866449
  rcvnxt: 1476866449  rcvadv: 1476882833  rcvwnd: 16384
  rtt: 0  srtt: 3235  rttv: 18
  rxtcur: 1200  rxtshift: 0  rtseq: 1109332099
  rttmin: 1000  mss: 500
  flags: REQ_SCALE RCVD_SCALE REQ_TSTMP RCVD_TSTMP SACK_PERMIT [0x3e0]

```

show system connections lcc (TX Matrix Router)

```
user@host> show system connections lcc 2
```

```
lcc2-re0:
```

```
-----
Active Internet connections (including servers)
```

Proto	Recv-Q	Send-Q	Local Address	Foreign Address	(state)
tcp4	0	0	192.168.66.131.1342	192.168.66.130.23	ESTABLISHED
tcp4	0	0	192.168.66.131.2059	192.168.66.130.23	ESTABLISHED
tcp4	0	0	192.168.66.131.4571	192.168.66.130.23	ESTABLISHED
tcp4	0	0	192.168.66.131.2496	192.168.66.130.23	ESTABLISHED
tcp4	0	0	*.3221	*.*	LISTEN
tcp4	0	0	*.23	*.*	LISTEN
tcp4	0	0	*.22	*.*	LISTEN
tcp4	0	0	*.514	*.*	LISTEN
tcp4	0	0	*.513	*.*	LISTEN
tcp4	0	0	*.21	*.*	LISTEN
tcp4	0	0	*.79	*.*	LISTEN
tcp4	0	0	*.6234	*.*	LISTEN
udp4	0	0	*.514	*.*	
udp4	0	0	*.6333	*.*	

show system connections show-routing-instances

```
user@host> show system connections show-routing-instances
```

```
Active Internet connections (including servers) (including routing-instances)
Proto Recv-Q Send-Q Local Address Foreign Address Routing Instance
(state)
```

Proto	Recv-Q	Send-Q	Local Address	Foreign Address	Routing Instance
tcp4	0	0	192.168.69.204.23	172.17.28.19.4267	default
			ESTABLISHED		
tcp4	0	0	192.168.69.204.58540	10.209.7.138.23	default
			ESTABLISHED		
tcp4	0	0	192.168.69.204.23	172.17.28.19.1098	default
			ESTABLISHED		
tcp4	0	0	192.168.7.1.57668	192.168.9.1.179	default
			ESTABLISHED		
tcp4	0	0	192.168.7.1.179	192.168.8.1.49209	default
			ESTABLISHED		
tcp4	0	0	128.0.0.1.6234	128.0.3.17.1024	
__juniper_private1__			ESTABLISHED		
tcp4	0	0	128.0.0.4.9000	128.0.0.4.59103	
__juniper_private1__			ESTABLISHED		
tcp4	0	0	128.0.0.4.59103	128.0.0.4.9000	
__juniper_private1__			ESTABLISHED		
tcp4	0	0	*.32012	*.*	
__juniper_private1__			LISTEN		
tcp4	0	0	*.9000	*.*	
__juniper_private1__			LISTEN		
tcp4	0	0	*.33007	*.*	

```

__juniper_private2__ LISTEN
tcp46      0      0 *.179      *.*      default
      LISTEN
tcp4      0      0 *.179      *.*      default
      LISTEN
tcp4      0      0 *.6154     *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.6153     *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.7000     *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.6152     *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.6156     *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.33005    *.*
__juniper_private2__ LISTEN
tcp4      0      0 *.31343    *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.31341    *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.32003    *.*
__juniper_private2__ LISTEN
tcp4      0      0 *.666      *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.38       *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.3221     *.*      default
      LISTEN

```

show system connections (TX Matrix Plus Router)

```

user@host> show system connections
sfc0-re0:

```

```

-----
Active Internet connections (including servers)
Proto Recv-Q Send-Q Local Address           Foreign Address
      (state)
tcp4      0      3 192.168.178.11.23
172.17.28.19.3565        ESTABLISHED
tcp4      0      0 192.168.178.11.23
172.17.28.204.62719      ESTABLISHED
tcp4      0      0 192.168.178.11.23
192.168.69.199.51255    ESTABLISHED
tcp4      0      0 192.168.178.11.23
172.24.26.227.42860     ESTABLISHED
tcp4      0      0 *.6156      *.*
      LISTEN
tcp4      0      0 162.0.0.4.32012
ESTABLISHED             162.0.0.5.58935
tcp4      0      0 *.32012     *.*
      LISTEN
tcp4      0      0 *.33007     *.*
      LISTEN
tcp4      0      0 *.666       *.*
      LISTEN
tcp4      0      0 162.0.0.4.6161
ESTABLISHED             162.0.0.5.62026
tcp4      0      0 *.33005     *.*
      LISTEN
tcp4      0      0 162.0.0.4.9000
ESTABLISHED             162.0.0.4.51611

```

```

                                ESTABLISHED
tcp4      0      0 162.0.0.4.51611              162.0.0.4.9000
                                ESTABLISHED
tcp4      0      0 *.6151                        *.*
                                LISTEN
tcp4      0      0 *.6154                        *.*
                                LISTEN
tcp4      0      0 *.6153                        *.*
                                LISTEN
tcp4      0      0 *.31343                       *.*
                                LISTEN
tcp4      0      0 *.31341                       *.*
                                LISTEN
tcp4      0      0 *.9000                        *.*
                                LISTEN
tcp4      0      0 *.6152                        *.*
                                LISTEN
tcp4      0      0 *.32003                       *.*
                                LISTEN
tcp4      0      0 *.33009                       *.*
                                LISTEN
tcp4      0      0 *.3221                        *.*
                                LISTEN
tcp4      0      0 *.23                          *.*
                                LISTEN
tcp4      0      0 *.22                          *.*
                                LISTEN
tcp4      0      0 *.514                         *.*
                                LISTEN
tcp4      0      0 *.513                         *.*
                                LISTEN
tcp4      0      0 *.21                          *.*
                                LISTEN
tcp4      0      0 *.79                          *.*
                                LISTEN
tcp4      0      0 *.514                         *.*
                                LISTEN
tcp4      0      0 *.513                         *.*
                                LISTEN
tcp4      0      0 *.6234                        *.*
                                LISTEN
udp4      0      0 127.0.0.1.123                *.*
udp4      0      0 10.255.178.11.123            *.*
udp4      0      0 *.123                         *.*
udp46     0      0 *.514                         *.*
udp4      0      0 *.514                         *.*
udp46     0      0 *.62027                       *.*
udp4      0      0 *.59363                       *.*
udp4      0      0 *.31342                       *.*
udp46     0      0 *.161                         *.*
udp4      0      0 *.161                         *.*
udp4      0      0 *.31340                       *.*
udp4      0      0 *.31340                       *.*
udp46     0      0 *.49152                       *.*
udp46     0      0 *.4784                        *.*
udp46     0      0 *.3784                        *.*
udp4      0      0 *.49152                       *.*
udp4      0      0 *.4784                        *.*
udp4      0      0 *.3784                        *.*
udp4      0      0 *.6333                        *.*
ip4       0      0 *.*                           *.*

```

```

ip4          0      0  *.*                               *.*

lcc0-re0:
-----
Active Internet connections (including servers)
Proto Recv-Q Send-Q Local Address           Foreign Address
      (state)
tcp4      0      0 192.168.178.3.23
172.24.26.227.50399      ESTABLISHED
tcp4      0      0 *.*.6234
                                LISTEN
tcp4      0      0 *.*.7000
                                LISTEN
tcp4      0      0 *.*.9000
                                LISTEN
tcp4      0      0 *.*.33009
                                LISTEN
tcp4      0      0 *.*.3221
                                LISTEN
tcp4      0      0 *.*.23
                                LISTEN
tcp4      0      0 *.*.22
                                LISTEN
tcp4      0      0 *.*.514
                                LISTEN
tcp4      0      0 *.*.513
                                LISTEN
tcp4      0      0 *.*.21
                                LISTEN
tcp4      0      0 *.*.79
                                LISTEN
tcp4      0      0 *.*.514
                                LISTEN
tcp4      0      0 *.*.513
                                LISTEN
udp4      0      0 *.*.514
udp4      0      0 *.*.514
udp4      0      0 *.*.59924
udp4      0      0 *.*.59412
udp4      0      0 *.*.161
udp4      0      0 *.*.161
udp4      0      0 *.*.31342
udp4      0      0 *.*.6333

```

```

lcc1-re0:
-----
Active Internet connections (including servers)
Proto Recv-Q Send-Q Local Address           Foreign Address
      (state)
tcp4      0      0 *.*.6234
                                LISTEN
tcp4      0      0 *.*.7000
                                LISTEN
tcp4      0      0 *.*.9000
                                LISTEN
tcp4      0      0 *.*.3221
                                LISTEN
tcp4      0      0 *.*.23
                                LISTEN
tcp4      0      0 *.*.22
                                LISTEN

```



```

tcp4      0      0 *.514          LISTEN      *. *
tcp4      0      0 *.513          LISTEN      *. *
tcp4      0      0 *.21           LISTEN      *. *
tcp4      0      0 *.79           LISTEN      *. *
tcp4      0      0 *.514          LISTEN      *. *
tcp4      0      0 *.513          LISTEN      *. *
tcp4      0      0 *.33009        LISTEN      *. *
udp46     0      0 *.514          *. *
udp4      0      0 *.514          *. *
udp46     0      0 *.59924        *. *
udp4      0      0 *.59412        *. *
udp4      0      0 *.31342        *. *
udp46     0      0 *.161          *. *
udp4      0      0 *.161          *. *
udp4      0      0 *.6333         *. *

```

lcc2-re0:

```

-----
Active Internet connections (including servers)
Proto Recv-Q Send-Q Local Address           Foreign Address
      (state)
tcp4      0      0 *.6234          *. *
      LISTEN
tcp4      0      0 *.7000          *. *
      LISTEN
tcp4      0      0 *.9000          *. *
      LISTEN
tcp4      0      0 *.33009        *. *
      LISTEN
tcp4      0      0 *.3221          *. *
      LISTEN
tcp4      0      0 *.23           *. *
      LISTEN
tcp4      0      0 *.22           *. *
      LISTEN
tcp4      0      0 *.514          *. *
...

```

show system connections sfc (TX Matrix Plus Router)

```

user@host> show system connections sfc 0
sfc0-re0:

```

```

-----
Active Internet connections (including servers)
Proto Recv-Q Send-Q Local Address           Foreign Address
      (state)
tcp4      0      0 162.0.0.4.514      132.0.0.4.952
      TIME_WAIT
tcp4      0      0 162.0.0.4.514      131.0.0.4.694
      TIME_WAIT
tcp4      0      0 162.0.0.4.514      130.0.0.4.860
      TIME_WAIT
tcp4      0      0 162.0.0.4.514      129.0.0.4.716
      TIME_WAIT

```

tcp4	0	0	162.0.0.4.996		132.0.0.4.514
			TIME_WAIT		
tcp4	0	0	162.0.0.4.798		131.0.0.4.514
			TIME_WAIT		
tcp4	0	0	162.0.0.4.995		130.0.0.4.514
			TIME_WAIT		
tcp4	0	0	162.0.0.4.895		129.0.0.4.514
			TIME_WAIT		
tcp4	0	0	192.168.178.11.21		
172.17.28.204.64662				TIME_WAIT	
tcp4	0	0	192.168.178.11.21		
172.17.28.204.51612				TIME_WAIT	
tcp4	0	0	*,6156		*,*
			LISTEN		
tcp4	0	0	*,9000		*,*
			LISTEN		
tcp4	0	0	*,666		*,*
			LISTEN		
tcp4	0	2	192.168.178.11.23		
172.17.28.19.3565				ESTABLISHED	
tcp4	0	0	192.168.178.11.23		
172.17.28.204.62719				ESTABLISHED	
tcp4	0	0	192.168.178.11.23		
192.168.69.199.51255				ESTABLISHED	
tcp4	0	0	192.168.178.11.23		
172.24.26.227.42860				ESTABLISHED	
tcp4	0	0	162.0.0.4.32012		162.0.0.5.58935
			ESTABLISHED		
tcp4	0	0	*,32012		*,*
			LISTEN		
tcp4	0	0	*,33007		*,*
			LISTEN		
tcp4	0	1432	162.0.0.4.6161		162.0.0.5.62026
			ESTABLISHED		
tcp4	0	0	*,33005		*,*
			LISTEN		
tcp4	0	0	162.0.0.4.9000		162.0.0.4.51611
			FIN_WAIT_2		
tcp4	0	0	162.0.0.4.51611		162.0.0.4.9000
			CLOSE_WAIT		
tcp4	0	0	*,6151		*,*
			LISTEN		
tcp4	0	0	*,6154		*,*
			LISTEN		
tcp4	0	0	*,6153		*,*
			LISTEN		
tcp4	0	0	*,31343		*,*
			LISTEN		
tcp4	0	0	*,31341		*,*
			LISTEN		
tcp4	0	0	*,6152		*,*
			LISTEN		
tcp4	0	0	*,32003		*,*
			LISTEN		
tcp4	0	0	*,33009		*,*
			LISTEN		
tcp4	0	0	*,3221		*,*
			LISTEN		
tcp4	0	0	*,23		*,*
			LISTEN		
tcp4	0	0	*,22		*,*

```

tcp4      0      0 *.514      LISTEN      *.*
tcp4      0      0 *.513      LISTEN      *.*
tcp4      0      0 *.21       LISTEN      *.*
tcp4      0      0 *.79       LISTEN      *.*
tcp4      0      0 *.514      LISTEN      *.*
tcp4      0      0 *.513      LISTEN      *.*
tcp4      0      0 *.6234     LISTEN      *.*
udp4      0      0 127.0.0.1.123 LISTEN      *.*
udp4      0      0 10.255.178.11.123 LISTEN      *.*
udp4      0      0 *.123      LISTEN      *.*
udp46     0      0 *.514      LISTEN      *.*
udp4      0      0 *.514      LISTEN      *.*
udp46     0      0 *.50895    LISTEN      *.*
udp4      0      0 *.50794    LISTEN      *.*
udp4      0      0 *.31342    LISTEN      *.*
udp46     0      0 *.161      LISTEN      *.*
udp4      0      0 *.161      LISTEN      *.*
udp4      0      0 *.31340    LISTEN      *.*
udp4      0      0 *.31340    LISTEN      *.*
udp46     0      0 *.49152    LISTEN      *.*
udp46     0      0 *.4784     LISTEN      *.*
udp46     0      0 *.3784     LISTEN      *.*
udp4      0      0 *.49152    LISTEN      *.*
udp4      0      0 *.4784     LISTEN      *.*
udp4      0      0 *.3784     LISTEN      *.*
udp4      0      0 *.6333     LISTEN      *.*
ip4       104    0 *.*        LISTEN      *.*
ip4       0      0 *.*        LISTEN      *.*
ip4       0      0 *.*        LISTEN      *.*

```

show system connections show-routing-instances (TX Matrix Plus Router)

```

user@host> show system connections show-routing-instances
sfc0-re0:
-----
Active Internet connections (including servers) (including routing-instances)
Proto Recv-Q Send-Q Local Address           Foreign Address
      Routing Instance      (state)
tcp4      0      0 *.6156                  __juniper_private1__    LISTEN      *.*
tcp4      0      0 *.9000                  __juniper_private1__    LISTEN      *.*
tcp4      0      0 *.666                   __juniper_private1__    LISTEN      *.*
tcp4      0      2 192.168.178.11.23       default                  ESTABLISHED
172.17.28.19.3565
tcp4      0      0 192.168.178.11.23       default                  ESTABLISHED
172.17.28.204.62719
tcp4      0      0 192.168.178.11.23       default                  ESTABLISHED
192.168.69.199.51255
tcp4      0      0 192.168.178.11.23       default                  ESTABLISHED
172.24.26.227.42860
tcp4      0      0 162.0.0.4.32012         162.0.0.5.58935

```

tcp4	0	0	*.32012	__juniper_private1__	ESTABLISHED	*.*
tcp4	0	0	*.33007	__juniper_private1__	LISTEN	*.*
tcp4	0	0	162.0.0.4.6161	__juniper_private2__	LISTEN	162.0.0.5.62026
tcp4	0	0	*.33005	__juniper_private1__	ESTABLISHED	*.*
tcp4	0	0	162.0.0.4.9000	__juniper_private2__	LISTEN	162.0.0.4.51611
tcp4	0	0	162.0.0.4.51611	__juniper_private1__	FIN_WAIT_2	162.0.0.4.9000
tcp4	0	0	*.6151	__juniper_private1__	CLOSE_WAIT	*.*
tcp4	0	0	*.6154	__juniper_private1__	LISTEN	*.*
tcp4	0	0	*.6153	__juniper_private1__	LISTEN	*.*
tcp4	0	0	*.31343	__juniper_private1__	LISTEN	*.*
tcp4	0	0	*.31341	__juniper_private1__	LISTEN	*.*
tcp4	0	0	*.6152	__juniper_private1__	LISTEN	*.*
tcp4	0	0	*.32003	__juniper_private1__	LISTEN	*.*
tcp4	0	0	*.33009	__juniper_private2__	LISTEN	*.*
tcp4	0	0	*.3221	__juniper_private2__	LISTEN	*.*
tcp4	0	0	*.23	default	LISTEN	*.*
tcp4	0	0	*.22	default	LISTEN	*.*
tcp4	0	0	*.514	default	LISTEN	*.*
tcp4	0	0	*.513	default	LISTEN	*.*
tcp4	0	0	*.21	default	LISTEN	*.*
tcp4	0	0	*.79	default	LISTEN	*.*
tcp4	0	0	*.514	default	LISTEN	*.*
tcp4	0	0	*.513	__juniper_private1__	LISTEN	*.*
tcp4	0	0	*.6234	__juniper_private1__	LISTEN	*.*
tcp4	0	0		__juniper_private1__	LISTEN	*.*
udp4	0	0	127.0.0.1.123	default		*.*
udp4	0	0	10.255.178.11.123	default		*.*
udp4	0	0	*.123	default		*.*
udp4	0	0	*.514	default		*.*
udp4	0	0	*.514	default		*.*
udp46	0	0	*.50895	default		*.*
udp46	0	0		default		*.*

```

udp4      0      0 *.50794      *.*
          default
udp4      0      0 *.31342      *.*
          __juniper_private1__
udp46     0      0 *.161        *.*
          default
udp4      0      0 *.161        *.*
          default
udp4      0      0 *.31340      *.*
          __juniper_private2__
udp4      0      0 *.31340      *.*
          __juniper_private1__
udp46     0      0 *.49152      *.*
          default
udp46     0      0 *.4784       *.*
          default
udp46     0      0 *.3784       *.*
          default
udp4      0      0 *.49152      *.*
          default
udp4      0      0 *.4784       *.*
          default
udp4      0      0 *.3784       *.*
          default
udp4      0      0 *.6333       *.*
          __juniper_private1__
ip4       0      0 *.*          *.*
          default
ip4       0      0 *.*          *.*
          default
ip4       0      0 *.*          *.*
          default

```

lcc0-re0:

```

-----
Active Internet connections (including servers) (including routing-instances)
Proto Recv-Q Send-Q Local Address           Foreign Address
          Routing Instance      (state)
tcp4      0      0 *.7000            *.*
          __juniper_private1__  LISTEN
tcp4      0      0 192.168.178.3.23  *.*
172.24.26.227.50399 default      ESTABLISHED
tcp4      0      0 *.6234            *.*
          __juniper_private1__  LISTEN
tcp4      0      0 *.9000            *.*
          __juniper_private1__  LISTEN
tcp4      0      0 *.33009           *.*
          __juniper_private2__  LISTEN
tcp4      0      0 *.3221            *.*
          default              LISTEN
tcp4      0      0 *.23              *.*
          default              LISTEN
tcp4      0      0 *.22              *.*
          default              LISTEN
tcp4      0      0 *.514             *.*
          default              LISTEN
tcp4      0      0 *.513             *.*
          default              LISTEN
tcp4      0      0 *.21              *.*
          default              LISTEN
tcp4      0      0 *.79              *.*

```

```

tcp4      0      0 *.514      default    LISTEN     *.*
tcp4      0      0 *.513      __juniper_private1__ LISTEN     *.*
udp46     0      0 *.514      __juniper_private1__ LISTEN     *.*
udp4      0      0 *.514      default    *.*
udp46     0      0 *.59924    default    *.*
udp4      0      0 *.59412    default    *.*
udp46     0      0 *.161      default    *.*
udp4      0      0 *.161      default    *.*
udp4      0      0 *.31342    default    *.*
udp4      0      0 *.6333     __juniper_private1__ *.*
udp4      0      0 *.6333     __juniper_private1__

```

```
lcc1-re0:
```

```
-----
Active Internet connections (including servers) (including routing-instances)
Proto Recv-Q Send-Q Local Address
```

```

Foreign Address
Routing Instance (state)
tcp4      0      0 *.7000     __juniper_private1__ LISTEN     *.*
tcp4      0      0 *.6234     __juniper_private1__ LISTEN     *.*
tcp4      0      0 *.9000     __juniper_private1__ LISTEN     *.*
tcp4      0      0 *.3221     __juniper_private1__ LISTEN     *.*
tcp4      0      0 *.23       default     LISTEN     *.*
tcp4      0      0 *.22       default     LISTEN     *.*
tcp4      0      0 *.514      default     LISTEN     *.*
tcp4      0      0 *.513      default     LISTEN     *.*
tcp4      0      0 *.21       default     LISTEN     *.*
tcp4      0      0 *.79       default     LISTEN     *.*
tcp4      0      0 *.514      __juniper_private1__ LISTEN     *.*
tcp4      0      0 *.513      __juniper_private1__ LISTEN     *.*
tcp4      0      0 *.33009    __juniper_private2__ LISTEN     *.*
udp46     0      0 *.514      default    *.*
udp4      0      0 *.514      default    *.*
udp46     0      0 *.59924    default    *.*
udp4      0      0 *.59412    default    *.*

```

```

udp4      0      0 *.31342      *.*
           __juniper_private1__
udp46     0      0 *.161        *.*
           default
udp4      0      0 *.161        *.*
           default
udp4      0      0 *.6333       *.*
           __juniper_private1__

lcc2-re0:
-----
Active Internet connections (including servers) (including routing-instances)
Proto Recv-Q Send-Q Local Address           Foreign Address
Routing Instance         (state)
tcp4      0      0 *.7000       *.*
           __juniper_private1__ LISTEN
tcp4      0      0 *.6234       *.*
           __juniper_private1__ LISTEN
tcp4      0      0 *.9000       *.*
           __juniper_private1__ LISTEN
tcp4      0      0 *.33009      *.*
           __juniper_private2__ LISTEN
tcp4      0      0 *.3221       *.*
           default          LISTEN
tcp4      0      0 *.23         *.*
           default          LISTEN
tcp4      0      0 *.22         *.*
           default          LISTEN
tcp4      0      0 *.514        *.*
           default          LISTEN
tcp4      0      0 *.513        *.*
           default          LISTEN
tcp4      0      0 *.21         *.*
           default          LISTEN
tcp4      0      0 *.79         *.*
           default          LISTEN
tcp4      0      0 *.514        *.*
           __juniper_private1__ LISTEN
tcp4      0      0 *.513        *.*
           __juniper_private1__ LISTEN
udp46     0      0 *.514        *.*
           default
udp4      0      0 *.514        *.*
           default
udp4      0      0 *.31342      *.*
           __juniper_private1__
udp46     0      0 *.62103      *.*
           default
udp4      0      0 *.59924      *.*
           default
udp46     0      0 *.161        *.*
           default
udp4      0      0 *.161        *.*
           default
udp4      0      0 *.6333       *.*
           __juniper_private1__

```

```

lcc3-re0:
-----
Active Internet connections (including servers) (including routing-instances)
Proto Recv-Q Send-Q Local Address           Foreign Address

```

				Routing Instance	(state)	
tcp4	0	0	*.7000			*.*
tcp4	0	0	*.6234	__juniper_private1__	LISTEN	*.*
tcp4	0	0	*.9000	__juniper_private1__	LISTEN	*.*
tcp4	0	0	*.33009	__juniper_private1__	LISTEN	*.*
tcp4	0	0	*.3221	__juniper_private2__	LISTEN	*.*
tcp4	0	0	*.23	default	LISTEN	*.*
tcp4	0	0	*.22	default	LISTEN	*.*
tcp4	0	0	*.514	default	LISTEN	*.*
tcp4	0	0	*.513	default	LISTEN	*.*
tcp4	0	0	*.21	default	LISTEN	*.*
tcp4	0	0	*.79	default	LISTEN	*.*
tcp4	0	0	*.514	__juniper_private1__	LISTEN	*.*
tcp4	0	0	*.513	__juniper_private1__	LISTEN	*.*
udp46	0	0	*.514	default		*.*
udp4	0	0	*.514	default		*.*
udp46	0	0	*.62103	default		*.*
udp4	0	0	*.59924	default		*.*
udp4	0	0	*.31342	__juniper_private1__		*.*
udp46	0	0	*.161	default		*.*
udp4	0	0	*.161	default		*.*
udp4	0	0	*.6333	__juniper_private1__		*.*

show system connections (QFX3500 Switch)

```

user@switch> show system connections
Active Internet connections (including servers)
Proto Recv-Q Send-Q Local Address           Foreign Address
          (state)
tcp4      0      0 10.94.204.110.23        172.17.28.19.1308      ESTABLISHED
tcp4      0      0 128.0.0.1.6234          128.0.0.1.65142        ESTABLISHED
tcp4      0      0 128.0.0.1.65142          128.0.0.1.6234        ESTABLISHED
tcp4      0      0 128.0.0.1.33003          128.0.0.1.61441        ESTABLISHED
tcp4      0      0 128.0.0.1.61441          128.0.0.1.33003        ESTABLISHED
tcp46     0      0 *.179                    *.*
```


			LISTEN	
tcp4	0	0 *.179		*.*
			LISTEN	
tcp4	0	0 128.0.0.16.9000		128.0.0.16.50970
			ESTABLISHED	
tcp4	0	0 128.0.0.16.50970		128.0.0.16.9000
			ESTABLISHED	
tcp4	0	0 *.38		*.*
			LISTEN	
tcp4	0	0 *.3491		*.*
			LISTEN	
tcp4	0	0 *.6156		*.*
			LISTEN	
tcp4	0	0 128.0.0.1.33001		128.0.0.1.59437
			ESTABLISHED	
tcp4	0	0 128.0.0.1.59437		128.0.0.1.33001
			ESTABLISHED	
tcp4	0	0 128.0.0.1.33023		128.0.0.1.63605
			ESTABLISHED	
tcp4	0	0 128.0.0.1.63605		128.0.0.1.33023
			ESTABLISHED	
tcp4	0	0 128.0.0.1.33001		128.0.0.1.63830
			ESTABLISHED	
tcp4	0	0 128.0.0.1.63830		128.0.0.1.33001
			ESTABLISHED	
tcp4	0	0 *.667		*.*
			LISTEN	
tcp4	0	0 *.6156		*.*
			LISTEN	
tcp4	0	0 128.0.0.1.7000		128.0.0.1.51580
			ESTABLISHED	
tcp4	0	0 128.0.0.1.51580		128.0.0.1.7000
			ESTABLISHED	
tcp4	0	0 128.0.0.1.6234		128.0.0.1.53646
			ESTABLISHED	
tcp4	0	0 *.33001		*.*
			LISTEN	
tcp4	0	0 *.33003		*.*
			LISTEN	
tcp4	0	0 128.0.0.1.53646		128.0.0.1.6234
			ESTABLISHED	
tcp4	0	0 128.0.0.16.9000		128.0.0.16.63454
			ESTABLISHED	
tcp4	0	0 128.0.0.16.63454		128.0.0.16.9000
			ESTABLISHED	
tcp4	0	0 *.666		*.*
			LISTEN	
tcp4	0	0 *.7000		*.*
			LISTEN	
tcp4	0	0 *.51627		*.*
			LISTEN	
tcp4	0	0 *.3492		*.*
			LISTEN	
tcp4	0	0 *.33023		*.*
			LISTEN	
tcp4	0	0 *.33013		*.*
			LISTEN	
tcp4	0	0 *.7202		*.*
			LISTEN	
tcp4	0	0 *.6151		*.*
			LISTEN	

tcp4	0	0	*.9000		*.*
				LISTEN	
tcp4	0	0	*.6161		*.*
				LISTEN	
tcp4	0	0	*.6011		*.*
				LISTEN	
tcp4	0	0	*.3221		*.*
				LISTEN	
tcp4	0	0	*.23		*.*
				LISTEN	
tcp4	0	0	*.22		*.*
				LISTEN	
tcp4	0	0	*.514		*.*
				LISTEN	
tcp4	0	0	*.513		*.*
				LISTEN	
tcp4	0	0	*.21		*.*
				LISTEN	
tcp4	0	0	*.79		*.*
				LISTEN	
tcp4	0	0	*.514		*.*
				LISTEN	
tcp4	0	0	*.513		*.*
				LISTEN	
tcp4	0	0	*.1127		*.*
				LISTEN	
tcp4	0	0	*.1129		*.*
				LISTEN	
tcp4	0	0	*.1128		*.*
				LISTEN	
tcp4	0	0	*.6234		*.*
				LISTEN	
udp46	0	0	*.514		*.*
udp4	0	0	*.514		*.*
udp4	0	0	128.0.0.1.123		*.*
udp46	0	0	*.53344		*.*
udp4	0	0	*.54261		*.*
udp46	0	0	*.161		*.*
udp4	0	0	*.161		*.*
udp4	0	0	*.31342		*.*
udp4	0	0	*.59137		*.*
udp4	0	0	*.*		*.*
udp46	0	0	*.49152		*.*
udp46	0	0	*.4784		*.*
udp46	0	0	*.3784		*.*
udp4	0	0	*.49152		*.*
udp4	0	0	*.4784		*.*
udp4	0	0	*.3784		*.*
udp4	0	0	10.255.204.110.123		*.*
udp4	0	0	*.123		*.*
udp4	0	0	*.67		*.*
udp4	0	0	*.6333		*.*
udp4	0	0	*.2293		*.*
ip4	0	0	*.*		*.*
ip4	0	0	*.*		*.*
ip4	0	0	*.*		*.*

show system core-dumps

List of Syntax	Syntax on page 1109 Syntax (EX Series Switches) on page 1109 Syntax (TX Matrix Router) on page 1109 Syntax (TX Matrix Plus Router) on page 1109 Syntax (QFX Series and OCX Series) on page 1109
Syntax	<pre>show system core-dumps <brief detail> <core-filename> <core-file-info> <re0> <re1> <routing-engine></pre>
Syntax (EX Series Switches)	<pre>show system core-dumps <all-members> <brief detail> <core-filename> <core-file-info> <local> <member member-id></pre>
Syntax (TX Matrix Router)	<pre>show system core-dumps <all-chassis all-lcc lcc number scc> <brief detail> <core-filename> <core-file-info></pre>
Syntax (TX Matrix Plus Router)	<pre>show system core-dumps <all-chassis all-lcc lcc number sfc number> <brief detail> <core-filename> <core-file-info></pre>
Syntax (QFX Series and OCX Series)	<pre>show system core-dumps <brief detail> <component (UUID serial number all)> <core-file-info component (UUID serial number) core-file-name> <display-period (hours minutes seconds)> <display-order> <kernel-crashinfo component (UUID serial number)> <repository (core log)></pre>
Release Information	<p>Command introduced before Junos OS Release 8.5.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>re0, re1, and routing-engine options introduced for dual Routing Engines in Junos OS Release 13.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>

Description Show core files on all routers or switches running Junos OS. You can use the **show system core-dumps** command to show a list of system core files created when the router or switch has failed. This command can be useful for diagnostic purposes. Each list item includes the file permissions, number of links, owner, group, size, modification date, and path and filename. If dual Routing Engines are present, you can view core-dump files for either routing engine or both routing engines together. On a QFabric system, you can view core-dump files on individual QFabric system devices as well as on the entire QFabric system.

You can use the option **core-filename** and its options **core-file-info**, **brief**, and **detail** to display more information about the specified core-dump files.

Options **none**—Display a list of all existing core-dump files.



NOTE: If dual Routing Engines are present, then only the core-dump files for the active Routing Engine are listed.

all-chassis—(TX Matrix and TX Matrix Plus routers only) (Optional) On a routing matrix based on a TX Matrix router, display system core files for the TX Matrix router switch-card chassis [SCC] and all the T640 routers [LCCs] connected to the TX Matrix router.

On a routing matrix based on a TX Matrix Plus router, display system core files for the TX Matrix Plus router (switch-fabric chassis [SFC]) and all the T1600 routers [LCCs] connected to the TX Matrix Plus router.

<all-lcc | lcc number>—(TX Matrix and TX Matrix Plus routers only) (Optional) On a routing matrix based on the TX Matrix router, display core dump files for all T640 routers (line-card chassis [LCCs]) or a specific T640 router [LCC] connected to the TX Matrix router.

On a routing matrix based on the TX Matrix Plus router, display logging information for all T1600 routers (line-card chassis [LCCs]) or a specific T1600 router (LCC) connected to the TX Matrix Plus router. When using the **lcc number** option, replace **number** with a value from 0 through 3.



NOTE: The **all-chassis** option displays system core files for the SCC or SFC and the LCCs connected to the SCC or SFC in the routing matrix while the **all-lcc** option only displays system core files for the LCCs in the routing matrix.

all-members—(EX4200 switches) (Optional) Display system core files on all members of the Virtual Chassis configuration.

brief—(Optional) View details of a binary file.

component (*UUID | serial number | all*)—(QFabric systems only) (Optional) Display a list of core-dump files located on individual QFabric system device or on the entire QFabric system.

core-file-info—(Optional) Display the stack trace of a core file.

core-filename—(Optional) Name of a specific core file to display.

detail—(Optional) View stack trace with details of the binary file.

display-order (*timestamp-sort | alphanumeric-sort*)—(QFabric systems only) (Optional) Display list of debug artifacts generated within the specified period—for example, within the last hour, within the last 20 minutes, or within the last 32 seconds—or according to their filename.

display-period (*hours | minutes | seconds*)—(QFabric systems only) (Optional) Display core-dump files generated within the specified period—for example, within the last hour, within the last 20 minutes, or within the last 32 seconds.

kernel-crashinfo component (*UUID | serial number*)—(QFabric systems only) (Optional) Display kernel crash information from the EEPROM on a QFabric system device.

local—(EX4200 switches only) (Optional) Display system core files on the local Virtual Chassis member.

member *member-id*—(EX4200 switches only) (Optional) Display system core files on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value from 0 through 9.

re0—(Dual Routing Engines only) Display the core-dump files on re0.

re1—(Dual Routing Engines only) Display the core-dump files on re1.

repository (*core | log*)—(QFabric systems only) (Optional) Specify either the core or log repository in which to view core-dump files.

routing-engine (*backup | both | local | master | other*)—(Dual routing engines only) Display a list of core-dump files for either the backup, local, master, or other routing engine or both routing engines.

scc—(TX Matrix routers only) (Optional) Display system core files on the TX Matrix router (or switch-card chassis).

sfc—(TX Matrix Plus routers only) (Optional) Display system core files on the TX Matrix Plus router (or switch-fabric chassis).

Required Privilege Level

view

List of Sample Output

[show system core-dumps on page 1113](#)

[show system core-dumps on page 1114](#)

[show system core-dumps routing-engine both on page 1114](#)

[show system core-dumps \(TX Matrix Plus Router\) on page 1114](#)

[show system core-dumps \(QFX3500 Switch\) on page 1116](#)
[show system core-dumps \(QFabric Systems\) on page 1116](#)
[show system core-dumps core-file-info component serial number core-file-name \(QFabric Systems\) on page 1117](#)
[show system core-dumps component serial number display-order alphanumeric-sort repository core \(QFabric Systems\) on page 1117](#)
[show system core-dumps display-period \(QFabric Systems\) on page 1117](#)
[show system core-dumps kernel-crashinfo component serial number \(QFabric Systems\) on page 1119](#)
[show system core-dumps repository core \(QFabric Systems\) on page 1121](#)
[show system core-dumps repository log \(QFabric Systems\) on page 1121](#)

Output Fields Table 59 on page 1112 describes the output fields for the **show system core-dumps** command. Output fields are listed in the approximate order in which they appear.

Table 59: show system core-dumps Output Fields

Field Name	Field Description
<i>Permissions</i>	Read/write permissions for the file named.
<i>Links</i>	Number of links to the file.
<i>Owner</i>	Name of the file owner.
<i>Group</i>	Name of the group with file access.
<i>File size</i>	File size in bytes.
<i>Modified</i>	Last file modification date and time.
<i>Path/filename</i>	File path where the file resides and the filename.
Repository scope:	Repository where core-dump files and log files are stored. The core-dump files are located in the core repository, and the log files are located in the log repository. The default Repository scope is shared since both the core and log repositories are shared by all of the QFabric system devices.
Repository head:	Path to the top-level repository location.
Repository name:	Name of the repository: core or log .
List of nodes for core repository:	List of core-dump files associated with a particular QFabric system device located in the core repository.
Node Group	Name of the QFabric system device.
Node Identifier	UUID or serial number of the QFabric system device.
Num	Number of core-dump and log files.

Table 59: show system core-dumps Output Fields (*continued*)

Field Name	Field Description
Model	Model number of the QFabric system device.
Usage	Usage of the repository in megabytes.
Total usage of core repository:	Total usage of core-dump files associated with a particular QFabric system device located in the core repository. Usage is specified in megabytes and as a percentage.
Total usage of log repository:	Total usage of log files associated with a particular QFabric system device located in the log repository. Usage is specified in megabytes and as a percentage.
List of nodes for core repository:	List of core-dump files associated with a particular QFabric system device located in the core repository.
List of nodes for log repository:	List of log files associated with a particular QFabric system device located in the log repository.
Filename	Name of the core-dump file.
Date	Last core-dump file modification date and time.
Size	Size of the core-dump file.
Core filename	Filename of the core-dump file.
Process name	Name of the process that is generating a core-dump file or log file.
Release	Junos OS release.
Build server	Junos OS build server.
Build date	Junos OS build date.
Stack trace	Stack trace of the core-dump file.

Sample Output

show system core-dumps

This example shows the command output if core files exist.

```
user@switch> show system core-dumps
-rw----- 1 root wheel 268369920 Jun 18 17:59 /var/crash/vmcore.0
-rw-rw---- 1 root field 3371008 Jun 18 17:53 /var/tmp/rpd.core.0
-rw-r--r-- 1 root wheel 27775914 Jun 18 17:59 /var/crash/kernel.0
```

show system core-dumps

This example shows the command output if core files do not exist.

```
user@host> show system core-dumps
/var/crash/*core*: No such file or directory
/var/tmp/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory
```

show system core-dumps routing-engine both

This example shows the command output if dual Routing Engines are present.

```
user@host> show system core-dumps routing-engine both
re0:
-----
/var/crash/*core*: No such file or directory
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory

/var/tmp/cores:
total blocks: 496776
-rw-rw----  1 root  field   11910589 Nov  8  13:20 chassisd.core.0.201311081320
...

-rw-rw----  1 root  field   11737227 Oct 28 14:21
rpd.core-tarball.4.tgz.201310281421.3458162
total files: 10

re1:
-----
/var/crash/*core*: No such file or directory
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory

/var/tmp/cores:
total blocks: 3178420
-rw-rw----  1 root  field   19039721 Nov  8 14:29
chassisd.core.0.201311081429.3485600.gz
-rw-rw----  1 root  field   19039793 Nov  8 14:37
chassisd.core.1.201311081437.3485599.gz
..

-rw-rw----  1 root  field   11710113 Oct 17 15:26
rpd.core-tarball.1.1.tgz.201310171526.3430028
```

show system core-dumps (TX Matrix Plus Router)

```
user@host> show system core-dumps
sfc0-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 8

/var/tmp/cores:
total 1627592
-rw-r--r--  1 root  field   535346090 May 15 07:36
rpd.core-tarball.0.090515.0736.tgz
```



```

-rw-r--r-- 1 root field 105632057 May 15 07:37
rpd.core-tarball.1.090515.0737.tgz
-rw-r--r-- 1 root field 101981681 May 15 07:38
rpd.core-tarball.2.090515.0738.tgz
-rw-r--r-- 1 root field 85854573 May 15 07:40
rpd.core-tarball.3.090515.0740.tgz
-rw-r--r-- 1 root field 4157845 May 15 08:18
rpd.core-tarball.4.090515.0818.tgz

lcc0-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 8

/var/tmp/cores:
total 12

lcc1-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 8

/var/tmp/cores:
total 10024
-rw-r--r-- 1 root field 1875794 Apr 22 15:47
chassisd.core-tarball.0.090422.1547.tgz
-rw-r--r-- 1 root field 1894183 Apr 22 19:02
chassisd.core-tarball.0.090422.1902.tgz
-rw-r--r-- 1 root field 1290240 Apr 26 16:01 ksyncd_1558.core.0.090426.1601

lcc2-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 21124008
-rw-r--r-- 1 root wheel 1022376528 May 2 06:43
core-LCC2-EGFPC7.core.0.090502.0643
-rw-r--r-- 1 root wheel 1022376528 May 2 08:13
core-LCC2-EGFPC7.core.0.090502.0813
-rw-r--r-- 1 root wheel 1022376544 May 5 06:15
core-LCC2-EGFPC7.core.0.090505.0615
-rw-r--r-- 1 root wheel 1022376544 May 6 10:59
core-LCC2-EGFPC7.core.0.090506.1059
-rw-r--r-- 1 root wheel 1022376528 May 2 06:58
core-LCC2-EGFPC7.core.1.090502.0658
-rw-r--r-- 1 root wheel 754271232 May 5 06:33
core-LCC2-EGFPC7.core.1.090505.0633
-rw-r--r-- 1 root wheel 264897536 May 6 11:12
core-LCC2-EGFPC7.core.1.090506.1112
-rw-r--r-- 1 root wheel 1022376528 May 2 07:22
core-LCC2-EGFPC7.core.2.090502.0722
-rw-r--r-- 1 root wheel 163633152 May 5 06:52
core-LCC2-EGFPC7.core.2.090505.0652

```

```
-rw-r--r-- 1 root wheel 171312128 May 6 12:13
core-LCC2-EGFPC7.core.2.090506.1213
-rw-r--r-- 1 root wheel 1022376528 May 2 07:39
core-LCC2-EGFPC7.core.3.090502.0739
-rw-r--r-- 1 root wheel 1022376528 May 2 07:55
core-LCC2-EGFPC7.core.4.090502.0755
-rw-r--r-- 1 root wheel 427277312 May 7 04:47
core-LCC2-STFPC4.core.0.090507.0447
-rw-r--r-- 1 root wheel 419609600 May 7 04:47
core-LCC2-STFPC5.core.0.090507.0447
-rw-r--r-- 1 root wheel 432356352 May 7 04:47
core-LCC2-STFPC6.core.0.090507.0447

/var/tmp/cores:
total 2568
-rw-r--r-- 1 root field 1290240 May 14 14:26 ksyncd_1540.core.0.090514.1426
...
```

show system core-dumps (QFX3500 Switch)

```
user@switch> show system core-dumps
/var/crash/*core*: No such file or directory
-rw-rw---- 1 root field 1545143 Jun 4 2012 /var/tmp/pafxpc.core.0.gz
-rw-rw---- 1 root field 1545146 Jun 4 2012 /var/tmp/pafxpc.core.1.gz
-rw-rw---- 1 root field 1545141 Jun 4 2012 /var/tmp/pafxpc.core.2.gz
-rw-rw---- 1 root field 1545146 Jun 4 2012 /var/tmp/pafxpc.core.3.gz
-rw-rw---- 1 root field 1545142 Jun 5 2012 /var/tmp/pafxpc.core.4.gz
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory
total 5
```

show system core-dumps (QFabric Systems)

```
user@switch> show system core-dumps
Repository scope: shared
Repository head: /pbdata/export
List of nodes for core repository: /pbdata/export/rdumps/
```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	0	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	0	fx-jvre	OM
NW-NG-0	BBAK0394	0	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	0	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	0	fx-jvre	OM
FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	0	fx-jvre	OM
FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	0	fx-jvre	OM
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YW3803	0	qfxc08-3008	OM
IC-WS001	WS001/YN5999	0	qfxc08-3008	OM
node-device1	BBAK0372	0	qfx3500	OM
node-device1	EE3093	0	qfx3500	OM

```
Total usage of core repository: 0M of 70000M (0.0%)

List of nodes for log repository: /pbdata/export/rlogs/
```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	1	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	1	fx-jvre	OM

```

NW-NG-0      BBAK0394      1      qfx3500      OM
NW-NG-0      cd78871a-0710-11e1-878e-00e081c5297e  1      fx-jvre      OM
NW-NG-0      d0afda1e-0710-11e1-a1d0-00e081c5297e  3      fx-jvre      OM
FC-0         d31ab7a6-0710-11e1-ad1b-00e081c5297e  1      fx-jvre      OM
FC-1         d4d0f254-0710-11e1-90c3-00e081c5297e  1      fx-jvre      OM
IC-WS001     WS001         0      -            -
IC-WS001     WS001/YN5999  1      qfxc08-3008  OM
IC-WS001     WS001/YW3803  1      qfxc08-3008  OM
node-device1 BBAK0372      1      qfx3500      OM
node-device1 EE3093       1      qfx3500      OM
Total usage of log repository:0M of 70000M (0.0%)

```

show system core-dumps core-file-info component serial number core-file-name (QFabric Systems)

```

user@switch> show system core-dumps core-file-info component
e8ff4b3e-7d92-11e0-be5d-00e081c1fe0e cosd.core.0.1519.05162011131846.gz
Repository scope: shared
Repository head: /pbstorage
Repository name: core
Core filename: /pbstorage/rdumps/e8ff4b3e-7d92-11e0-be5d-
00e081c1fe0e/5658.cosd.core.0.1519.05162011131846
Process name: cosd
Release: 11.3I0
Build server: /c/ssengupta/dfx_ha_v1/obj-i386-dcp/dcp/usr.sbin/cosd
Build date: 2011-05-14 01:11:44 UTC
Stack trace:
#0 0x8885d183 in select () from /usr/lib/libc.so.6
#0 0x8885d183 in select () from /usr/lib/libc.so.6
#1 0x887d4a45 in pselect () from /usr/lib/libc.so.6
#2 0x88774719 in pselect () from /usr/lib/libthr.so.2
#3 0x885de5db in __evGetNext () from /usr/lib/libisc.so.2
#4 0x885debf0 in __evMainLoop () from /usr/lib/libisc.so.2
#5 0x081125b2 in cosd_loop ()
#6 0x0812e19a in main ()

```

show system core-dumps component serial number display-order alphanumeric-sort repository core (QFabric Systems)

```

user@switch> show system core-dumps component BBAK8891 display-order alphanumeric-sort
repository core
Repository scope: shared
Repository head: /pbdata/export
Repository name: core
List of core dumps for component BBAK8891
Repository location: /pbdata/export/rdumps/BBAK8891

```

Filename	Date	Size
eswd.core.0.1361.11172011214257.gz	Nov 17 21:43:10 2011	4779553
eswd.core.1.80267.11172011214514.gz	Nov 17 21:45:19 2011	3541648
eswd.core.2.80682.11172011214535.gz	Nov 17 21:45:43 2011	2156683
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:35 2011	375617

Number of core dumps in repository:4

show system core-dumps display-period (QFabric Systems)

```

user@switch> show system core-dumps display-period 24h
show system core-dumps display-period 24h
Repository scope: shared
Repository head: /pbdata/export
List of core dumps at repository: /pbdata/export/rdumps
Delta timespec: Last 24h

```

Component: BBAK8273		
Filename	Size	Date
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:35 2011	375794
Component: cedb7b0e-0025-11e1-9a5f-00e081c52990		
Filename	Size	Date
vccpd.core.0.1461.11182011151131.gz	Nov 18 15:11:31 2011	120951
Component: ee19c4f8-0025-11e1-aef6-00e081c52990		
Filename	Size	Date
vccpd.core.0.1462.11182011151131.gz	Nov 18 15:11:31 2011	109420
Component: BBAK8281		
Filename	Size	Date
vccpd.core.0.1196.11182011151131.gz	Nov 18 15:11:36 2011	375373
Component: BBAK8891		
Filename	Size	Date
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:35 2011	375617
Component: BBAK8276		
Filename	Size	Date
vccpd.core.0.1196.11182011151131.gz	Nov 18 15:11:35 2011	375350
Component: BBAK8868		
Filename	Size	Date
vccpd.core.0.1196.11182011151130.gz	Nov 18 15:11:34 2011	376211
Component: BBAK8835		
Filename	Size	Date
vccpd.core.0.1195.11182011151130.gz	Nov 18 15:11:35 2011	375700
Component: BBAK8283		
Filename	Size	Date
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:36 2011	368298
Component: YW3781/YW3781		
Filename	Size	Date
vccpd.core.0.1220.11182011151131.gz	Nov 18 15:11:38 2011	380002
Component: 09726be2-0026-11e1-82d9-00e081c52990		
Filename	Size	Date
vccpd.core.0.1461.11182011151130.gz	Nov 18 15:11:31 2011	119965
Component: BBAK8309		
Filename	Size	Date
vccpd.core.0.1196.11182011151131.gz	Nov 18 15:11:36 2011	378930
Component: 303d476a-0026-11e1-abf4-00e081c52990		
Filename	Size	Date
vccpd.core.0.1460.11182011151131.gz	Nov 18 15:11:31 2011	118385
Component: YW3798/YW3798		
Filename	Size	Date
vccpd.core.0.1219.11182011151131.gz	Nov 18 15:11:36 2011	380455
List of log dumps at repository: /pbdata/export/rlogs		
Delta timespec: Last 24h		
Component: BBAK8273		
Filename	Size	Date

vccpd.tarball.0.1195.11182011151138.tgz	Nov 18 15:11:39 2011	20415
Component: cedb7b0e-0025-11e1-9a5f-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1461.11182011151131.tgz	Nov 18 15:11:33 2011	19651
Component: ee19c4f8-0025-11e1-aef6-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1462.11182011151133.tgz	Nov 18 15:11:36 2011	24650
Component: BBAK8281		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151137.tgz	Nov 18 15:11:41 2011	19445
Component: BBAK8891		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151138.tgz	Nov 18 15:11:41 2011	21916
Component: BBAK8276		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151137.tgz	Nov 18 15:11:39 2011	20461
Component: BBAK8868		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151137.tgz	Nov 18 15:11:41 2011	21924
Component: BBAK8835		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151137.tgz	Nov 18 15:11:39 2011	19424
Component: BBAK8283		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151138.tgz	Nov 18 15:11:42 2011	31186
Component: YW3781/YW3781		
Filename	Size	Date
vccpd.tarball.0.1220.11182011151141.tgz	Nov 18 15:11:45 2011	27565
Component: 09726be2-0026-11e1-82d9-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1461.11182011151130.tgz	Nov 18 15:11:34 2011	19613
Component: BBAK8309		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151138.tgz	Nov 18 15:11:46 2011	50362
Component: 303d476a-0026-11e1-abf4-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1460.11182011151133.tgz	Nov 18 15:11:33 2011	19360
Component: YW3798/YW3798		
Filename	Size	Date
vccpd.tarball.0.1219.11182011151140.tgz	Nov 18 15:11:49 2011	24473

show system core-dumps kernel-crashinfo component serial number (QFabric Systems)

```
user@switch> show system core-dumps kernel-crashinfo component A0001/YA0197
Node: A0001/YA0197
```

Information about previous kernel crash:

-- Kernel panic data --

Panic string: kdb_sysctl_panic

System uptime: 3 day 20 hr 59 min 40 sec Kernel crash time: 2011-11-15 Wed 15:25:17

Kernel build linkstamp: JUNOS 11.3I #0: 2011-11-10 20:42:27 UTC

-- Stacktrace of panicing context --

Processor 1 (crash monarch):

savectx+0x0 (c9552800,80214efc,802a7fbc,c88ad05c) ra 801b93a8 sz 0

kdm_kcore_save_crashinfo+0x254 (c9552800,0,802a7fbc,c88ad05c) ra 801b9f44 sz 784

kdm_kcore_kern_panic_event_handler+0x4b0 (c9552800,0,802a7fbc,c88ad05c) ra 8022a9b8 sz 88

panic+0x1d0 (c9552800,0,4,77fed534) ra 802540c0 sz 56

kdb_sysctl_panic+0x70 (c9552800,0,4,77fed534) ra 80237e58 sz 40 sysctl_root+0x12c (c9552800,0,4,e8bc5cf8) ra 80238e50 sz 48

userland_sysctl+0x164 (c9552800,0,4,e8bc5cf8) ra 8023956c sz 104

__sysctl+0xe4 (c9552800,0,4,e8bc5cf8) ra 806d62e8 sz 160

trap+0xe1c (c9552800,0,4,e8bc5cf8) ra 80896e68 sz 128

MipsUserGenException+0x1a4 (c9552800,0,4,405cd12c) ra 0 sz 0

pid 82340, process: sysctl

Processor 0:

restoreintr+0x14 (1,81bca820,3,0) ra 806cdc3c sz 0

spinlock_exit+0x30 (1,81bca820,3,0) ra 8025d354 sz 24

sleepq_release+0x64 (1,81bca820,3,0) ra 8025e670 sz 24

sleepq_timeout+0x224 (1,81bca820,3,0) ra 80240294 sz 48

softclock+0x434 (1,81bca820,3,0) ra 802067f8 sz 80

ithread_loop+0x244 (1,81bca820,3,0) ra 80200e28 sz 64 fork_exit+0xc0

(1,81bca820,3,0) ra 80897c28 sz 48

MipsNMIException+0x34 (1,81bca820,3,0) ra 0 sz 0

pid 82340, process: sysctl

Processor 2:

cpu_idle+0x20 (80960000,51bbc,2031df,81bca1b8) ra 80204948 sz 24 idle_proc+0x130

(80960000,51bbc,2031df,81bca1b8) ra 80200e28 sz 56 fork_exit+0xc0

(80960000,51bbc,2031df,81bca1b8) ra 80897c28 sz 48

MipsNMIException+0x34 (80960000,51bbc,2031df,81bca1b8) ra 0 sz 0

pid 82340, process: sysctl

Processor 3:

cpu_idle+0x20 (80960000,51bbc,2038df,81bca300) ra 80204948 sz 24 idle_proc+0x130

(80960000,51bbc,2038df,81bca300) ra 80200e28 sz 56 fork_exit+0xc0

(80960000,51bbc,2038df,81bca300) ra 80897c28 sz 48

MipsNMIException+0x34 (80960000,51bbc,2038df,81bca300) ra 0 sz 0

pid 82340, process: sysctl

Processor 4:

cpu_idle+0x20 (80960000,51bbc,2037df,81bca448) ra 80204948 sz 24 idle_proc+0x130

(80960000,51bbc,2037df,81bca448) ra 80200e28 sz 56 fork_exit+0xc0

(80960000,51bbc,2037df,81bca448) ra 80897c28 sz 48

MipsNMIException+0x34 (80960000,51bbc,2037df,81bca448) ra 0 sz 0

pid 82340, process: sysctl

Processor 5:

restoreintr+0x14 (1,51bbc,203edf,81bca590) ra 806cdc3c sz 0

spinlock_exit+0x30 (1,51bbc,203edf,81bca590) ra 80204a34 sz 24 idle_proc+0x21c

(1,51bbc,203edf,81bca590) ra 80200e28 sz 56 fork_exit+0xc0

(1,51bbc,203edf,81bca590) ra 80897c28 sz 48

MipsNMIException+0x34 (1,51bbc,203edf,81bca590) ra 0 sz 0

pid 82340, process: sysctl

```

Processor 6:
cpu_idle+0x20 (80960000,51bbc,205cdf,81bca6d8) ra 80204948 sz 24 idle_proc+0x130
(80960000,51bbc,205cdf,81bca6d8) ra 80200e28 sz 56 fork_exit+0xc0
(80960000,51bbc,205cdf,81bca6d8) ra 80897c28 sz 48
MipsNMIEException+0x34 (80960000,51bbc,205cdf,81bca6d8) ra 0 sz 0
pid 82340, process: sysctl

Processor 7:
lockmgr+0x5ac (c97e8484,c8dd9800,0,c8dd9800) ra 8c11c81c sz 48
sal_sem_take+0x134 (c97e8484,c8dd9800,0,c8dd9800) ra 8c351108 sz 56
_bcm_esw_linkscan_thread+0x45c (c97e8484,c8dd9800,0,c8dd9800) ra 8c11cdb4 sz 104
sal_thread_start_wrap+0x74 (c97e8484,c8dd9800,0,c8dd9800) ra 80200e28 sz 32
fork_exit+0xc0 (c97e8484,c8dd9800,0,c8dd9800) ra 80897c28 sz 48
MipsNMIEException+0x34 (c97e8484,c8dd9800,0,c8dd9800) ra 0 sz 0
pid 82340, process: sysctl
-- End of stacktrace --

```

show system core-dumps repository core (QFabric Systems)

```

user@switch> show system core-dumps repository core
Repository scope: shared
Repository head: /pbdata/export
Repository name: core
List of nodes for core repository: /pbdata/export/rdumps/

```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	0M
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	0	fx-jvre	0M
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	0	fx-jvre	0M
NW-NG-0	BBAK0394	0	qfx3500	0M
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	0	fx-jvre	0M
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	0	fx-jvre	0M
FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	0	fx-jvre	0M
FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	0	fx-jvre	0M
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YW3803	0	qfxc08-3008	0M
IC-WS001	WS001/YN5999	0	qfxc08-3008	0M
node-device1	BBAK0372	0	qfx3500	0M
node-device1	EE3093	0	qfx3500	0M

Total usage of core repository: 0M of 70000M (0.0%)

show system core-dumps repository log (QFabric Systems)

```

user@switch> show system core-dumps repository log
Repository scope: shared
Repository head: /pbdata/export
Repository name: log
List of nodes for log repository: /pbdata/export/rlogs/

```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	0M
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	1	fx-jvre	0M
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	1	fx-jvre	0M
NW-NG-0	BBAK0394	1	qfx3500	0M
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	1	fx-jvre	0M
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	3	fx-jvre	0M
FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	1	fx-jvre	0M
FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	1	fx-jvre	0M
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YN5999	1	qfxc08-3008	0M
IC-WS001	WS001/YW3803	1	qfxc08-3008	0M

```

node-device1    BBAK0372                1    qfx3500    0M
node-device1    EE3093                  1    qfx3500    0M
Total usage of log repository:0M of 70000M (0.0%)

```


show system directory-usage

List of Syntax	Syntax on page 1123 Syntax (EX Series) on page 1123 Syntax (TX Matrix Router) on page 1123 Syntax (TX Matrix Plus Router) on page 1123 Syntax (MX Series Router) on page 1123 Syntax (QFX Series and OCX Series) on page 1123
Syntax	<pre>show system directory-usage <depth <i>number</i>> <path></pre>
Syntax (EX Series)	<pre>show system directory-usage <all-members> <depth <i>number</i>> <local> <member <i>member-id</i>> <path></pre>
Syntax (TX Matrix Router)	<pre>show system directory-usage <all-chassis all-lcc lcc <i>number</i> scc> <depth <i>number</i>> <path></pre>
Syntax (TX Matrix Plus Router)	<pre>show system directory-usage <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i>> <depth <i>number</i>> <path></pre>
Syntax (MX Series Router)	<pre>show system directory-usage <all-members> <depth <i>number</i>> <local> <member <i>member-id</i>> <path></pre>
Syntax (QFX Series and OCX Series)	<pre>show system directory-usage <depth <i>number</i>> <path> <infrastructure <i>name</i>> <interconnect-device <i>name</i>> <node-group <i>name</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display directory usage information.

Options **none**—Display all directory usage information.

all-chassis—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display directory usage information about all the T640 routers (in a routing matrix based on a TX Matrix router). Display directory usage information about all the T1600 or T4000 routers (in a routing matrix based on a TX Matrix Plus router) in the chassis.

all-lcc—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display directory information for all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus router, display directory information for all connected T1600 or T4000 LCCs.

all-members—(EX4200 switches and MX Series routers only) (Optional) Display directory information for all members of the Virtual Chassis configuration.

depth *number*—(Optional) Depth of the directory to traverse. This option is useful when you want to limit the output shown for a large file system.

infrastructure *name*— (QFabric systems only) (Optional) Display directory information for the fabric control Routing Engines and fabric manager Routing Engines.

interconnect-device *name*— (QFabric systems only) (Optional) Display directory information for the Interconnect device.

node-group *name*— (QFabric systems only) (Optional) Display directory information for the Node group.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display directory information for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display directory information for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Display directory information for the local Virtual Chassis member.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Display directory information for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

path—(Optional) Path or root directory to traverse.

scc—(TX Matrix router only) (Optional) Display directory information for the TX Matrix router (or switch-card chassis).

sfc number—(TX Matrix Plus routers only) (Optional) Display directory information for the TX Matrix Plus router. Replace *number* with **0**.

Required Privilege Level

view

Related Documentation

- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

List of Sample Output

[show system directory-usage scc \(TX Matrix Router\) on page 1126](#)
[show system directory-usage sfc \(TX Matrix Plus Router\) on page 1126](#)
[show system directory-usage \(QFX Series and OCX Series\) on page 1126](#)

Output Fields

[Table 60 on page 1125](#) describes the output fields for the **show system directory-usage** command. Output fields are listed in the approximate order in which they appear.

Table 60: show system directory-usage Output Fields

Field Name	Field Description
<i>bytes</i>	Number of bytes used by files in a directory.
<i>directory-name</i>	Name of the directory.

Sample Output

show system directory-usage scc (TX Matrix Router)

```
user@host> show system directory-usage /var/tmp scc
/var/tmp
1.0K    /var/tmp/vi.recover
2.0K    /var/tmp/instmp.tPMk8u
1.0K    /var/tmp/install
        /var/tmp/instmp.GUMpur
4.8M    /var/tmp/instmp.GUMpur/packages
6.4M    /var/tmp/troy1
297M    /var/tmp/dsw
        /var/tmp/pkg_tmp.2073
83K     /var/tmp/pkg_tmp.2073/bin
        /var/tmp/instmp.oMIDb1
89K     /var/tmp/instmp.oMIDb1/bin
        /var/tmp/instmp.byhMjR
4.6M    /var/tmp/instmp.byhMjR/packages
        /var/tmp/instmp.6fqHf3
1.7M    /var/tmp/instmp.6fqHf3/packages
        /var/tmp/instmp.mljECe
4.6M    /var/tmp/instmp.mljECe/packages
```

show system directory-usage sfc (TX Matrix Plus Router)

```
user@switch> show system directory-usage /var/tmp sfc 0
sfc0-re0:
-----
        /var/tmp
46K     /var/tmp/gres-tp
        /var/tmp/sec-download
2.0K    /var/tmp/sec-download/sub-download
2.0K    /var/tmp/vi.recover
2.0K    /var/tmp/install
795M    /var/tmp/cores
766K    /var/tmp/pr440594
```

show system directory-usage (QFX Series and OCX Series)

```
user@switch> show system directory-usage
/var/tmp
30K     /var/tmp/gres-tp
2.0K    /var/tmp/rtbdb
2.0K    /var/tmp/vi.recover
2.0K    /var/tmp/install
2.0K    /var/tmp/pics
```

show system processes

List of Syntax	Syntax on page 1127 Syntax (EX Series and QFX Series Switches) on page 1127 Syntax (MX Series Routers) on page 1127 Syntax (OCX Series) on page 1127 Syntax (TX Matrix Routers) on page 1127 Syntax (TX Matrix Plus Router) on page 1127
Syntax	<pre>show system processes <brief detail extensive summary> <health (pid <i>process-identifer</i> process-name <i>process-name</i>)> <providers> <resource-limits (brief detail) <i>process-name</i>> <wide></pre>
Syntax (EX Series and QFX Series Switches)	<pre>show system processes <all-members> <brief detail extensive summary> <health (pid <i>process-identifer</i> process-name <i>process-name</i>)> <local> <member <i>member-id</i>> <providers> <resource-limits (brief detail) <i>process-name</i>> <wide></pre>
Syntax (MX Series Routers)	<pre>show system processes <all-members> <brief detail extensive summary> <health (pid <i>process-identifer</i> process-name <i>process-name</i>)> <local> <member <i>member-id</i>> <providers> <resource-limits (brief detail) <i>process-name</i>> <wide></pre>
Syntax (OCX Series)	<pre>show system processes <brief detail extensive summary > <health (pid <i>process-identifer</i> process-name <i>process-name</i>)> host-processes (brief detail) <providers> <resource-limits> <wide></pre>
Syntax (TX Matrix Routers)	<pre>show system processes <brief detail extensive summary> <all-chassis all-lcc lcc <i>number</i> scc> <wide></pre>
Syntax (TX Matrix Plus Router)	<pre>show system processes <brief detail extensive summary> <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i>> <wide></pre>

Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Option sfc introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Display information about software processes that are running on the router or switch and that have controlling terminals.</p>
Options	<p>none—Display standard information about system processes.</p> <p>brief detail extensive summary—(Optional) Display the specified level of detail.</p> <p>adaptive-services—(Optional) Display the configuration management process that manages the configuration for stateful firewall, Network Address Translation (NAT), intrusion detection services (IDS), and IP Security (IPsec) services on the Adaptive Services PIC.</p> <p>alarm-control—(Optional) Display the process to configure the system alarm.</p> <p>all-chassis—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display standard system process information about all the T640 routers (in a routing matrix based on the TX Matrix router) or all the T1600 or T4000 routers (in a routing matrix based on the TX Matrix Plus router) in the chassis.</p> <p>all-lcc—(TX Matrix routers and TX Matrix Plus router only) (Optional) Display standard system process information for all T640 routers (or line-card chassis) connected to the TX Matrix router. Display standard system process information for all connected T1600 or T4000 LCCs.</p> <p>all-members—(EX4200 switches, QFX Series Virtual Chassis, and MX Series routers) (Optional) Display standard system process information for all members of the Virtual Chassis configuration.</p> <p>ancpd-service—Display the Access Node Control Protocol (ANCP) process, which works with a special Internet Group Management Protocol (IGMP) session to collect outgoing interface mapping events in a scalable manner.</p> <p>application-identification —Display the process that identifies an application using intrusion detection and prevention (IDP) to allow or deny traffic based on applications running on standard or nonstandard ports.</p> <p>audit-process—(Optional) Display the RADIUS accounting process.</p> <p>auto-configuration—Display the Interface Auto-Configuration process.</p> <p>bootp—Display the process that enables a router, switch, or interface to act as a Dynamic Host Configuration Protocol (DHCP) or bootstrap protocol (BOOTP) relay agent. DHCP relaying is disabled.</p>

captive-portal-content-delivery—Display the HTTP redirect service by specifying the location to which a subscriber's initial Web browser session is redirected, enabling initial provisioning and service selection for the subscriber.

ce-l2tp-service—(Optional) (M10, M10i, M7i, and MX Series routers only) Display the Universal Edge Layer 2 Tunneling Protocol (L2TP) process, which establishes L2TP tunnels and Point-to-Point Protocol (PPP) sessions through L2TP tunnels.

cfm—Display Ethernet Operations, Administration, and Maintenance (OAM) connectivity fault management (CFM) process, which can be used to monitor the physical link between two switches.

chassis-control—(Optional) Display the chassis management process.

class-of-service—(Optional) Display the class-of-service (CoS) process, which controls the router's or switch's CoS configuration.

clksyncd-service—Display the external clock synchronization process, which uses synchronous Ethernet (SyncE).

craft-control—Display the process for the I/O of the craft interface.

database-replication—(EX Series switches and MX Series routers only) (Optional) Display the database replication process.

datapath-trace-service—Display the packet path tracing process.

dhcp-service—(EX Series switches and MX Series routers only) (Optional) Display the Dynamic Host Configuration Protocol process, which enables a DHCP server to allocate network IP addresses and deliver configuration settings to client hosts without user intervention.

diameter-service—(Optional) Display the diameter process.

disk-monitoring—(Optional) Display the disk monitoring process, which checks the health of the hard disk drive on the Routing Engine.

dynamic-flow-capture—(Optional) Display the dynamic flow capture (DFC) process, which controls DFC configurations on Monitoring Services III PICs.

ecc-error-logging—(Optional) Display the error checking and correction (ECC) process, which logs ECC parity errors in memory on the Routing Engine.

ethernet-connectivity-fault-management—Display the process that provides IEEE 802.1ag OAM connectivity fault management (CFM) database information for CFM maintenance association end points (MEPs) in a CFM session.

ethernet-link-fault-management—(EX Series switches and MX Series routers only) (Optional) Display the process that provides the OAM link fault management (LFM) information for Ethernet interfaces.

event-processing—(Optional) Display the event process (eventd).

firewall—(Optional) Display the firewall management process, which manages the firewall configuration and enables accepting or rejecting packets that are transiting an interface on a router or switch.

general-authentication-service—(EX Series switches and MX Series routers only)
(Optional) Display the general authentication process.

health (pid *process-identifier* | process-name *process-name*)—(Optional) Display process health information, either by process id (PID) or by process name.

host-processes—Display process information of processes running on the host system.
(On OCX Series only) The following options are available:

- **brief | detail**—(Optional) Display the specified level of detail.

iccp-service—Display the Inter-Chassis Communication Protocol (ICCP) process.

idp-policy—Display the intrusion detection and prevention (IDP) protocol process.

ilmi—Display the Integrated Local Management Interface (ILMI) protocol process, which provides bidirectional exchange of management information between two ATM interfaces across a physical connection.

inet-process—Display the IP multicast family process.

init—Display the process that initializes the USB modem.

interface-control—(Optional) Display the interface process, which controls the router's or switch's physical interface devices and logical interfaces.

kernel-replication—(Optional) Display the kernel replication process, which replicates the state of the backup Routing Engine when graceful Routing Engine switchover (GRES) is configured.

l2-learning—(Optional) Display the Layer 2 address flooding and learning process.

l2cpd-service—Display the Layer 2 Control Protocol process, which enables features such as Layer 2 protocol tunneling and nonstop bridging.

lACP—(Optional) Display the Link Aggregation Control Protocol (LACP) process. LACP provides a standardized means for exchanging information between partner systems on a link to allow their link aggregation control instances to reach agreement on the identity of the LAG to which the link belongs, and then to move the link to that LAG, and to enable the transmission and reception processes for the link to function in an orderly manner.

lcc number—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display standard system process information for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display standard system process information for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—((EX4200 switches, QFX Series Virtual Chassis, and MX Series routers)) (Optional) Display standard system process information for the local Virtual Chassis member.

local-policy-decision-function—Display the process for the Local Policy Decision Function, which regulates collection of statistics related to applications and application groups and tracking of information about dynamic subscribers and static interfaces.

logical-system-mux—Display the logical router multiplexer process (lrmuxd), which manages the multiple instances of the routing protocols process (rpd) on a machine running logical routers.

mac-validation—Display the MAC validation process, which configures MAC address validation for subscriber interfaces created on demux interfaces in dynamic profiles on MX Series routers.

member *member-id*—((EX4200 switches, QFX Series Virtual Chassis, and MX Series routers)) (Optional) Display standard system process information for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace ***member-id*** with a value from 0 through 9. For an MX Series Virtual Chassis, replace ***member-id*** with a value of 0 or 1.

mib-process—(Optional) Display the MIB II process, which provides the router's MIB II agent.

mobile-ip—(Optional) Display the Mobile IP process, which configures Junos OS Mobile IP features.

moundd-service—(EX Series switches and MX Series routers only) (Optional) Display the service for NFS mounts requests.

mpls-traceroute—(Optional) Display the MPLS Periodic Traceroute process.

mspd—(Optional) Display the Multiservice process.

multicast-snooping—(EX Series switches and MX Series routers only) (Optional) Display the multicast snooping process, which makes Layer 2 devices such as VLAN switches aware of Layer 3 information, such as the media access control (MAC) addresses of members of a multicast group.

named-service—(Optional) Display the DNS Server process, which is used by a router or a switch to resolve hostnames into addresses.

neighbor-liveness—Display the process, which specifies the maximum length of time that the router waits for its neighbor to re-establish an LDP session.

nfsd-service—(Optional) Display the Remote NFS Server process, which provides remote file access for applications that need NFS-based transport.

ntp—Display the Network Time Protocol (NTP) process, which provides the mechanisms to synchronize time and coordinate time distribution in a large, diverse network.

packet-triggered-subscribers—Display the packet-triggered subscribers and policy control (PTSP) process, which allows the application of policies to dynamic subscribers that are controlled by a subscriber termination device.

peer-selection-service—(Optional) Display the Peer Selection Service process.

periodic-packet-services—Display the Periodic packet management process, which is responsible for processing a variety of time-sensitive periodic tasks so that other processes can more optimally direct their resources.

pfe—Display the Packet Forwarding Engine management process.

pgcp-service—(Optional) Display the pgcpd service process running on the Routing Engine.

pgm—Display the Pragmatic General Multicast (PGM) protocol process, which enables a reliable transport layer for multicast applications.

pic-services-logging—(Optional) Display the logging process for some PICs. With this process, also known as fsad (the file system access daemon), PICs send special logging information to the Routing Engine for archiving on the hard disk.

ppp—(Optional) Display the Point-to-Point Protocol (PPP) process, which is the encapsulation protocol process for transporting IP traffic across point-to-point links.

ppp-service—Display the Universal edge PPP process, which is the encapsulation protocol process for transporting IP traffic across universal edge routers.

pppoe—(Optional) Display the Point-to-Point Protocol over Ethernet (PPPoE) process, which combines PPP that typically runs over broadband connections with the Ethernet link-layer protocol that allows users to connect to a network of hosts over a bridge or access concentrator.

process-monitor—Display the process health monitor process (pmond).

providers—(Optional) Display provider processes.

redundancy-interface-process—(Optional) Display the ASP redundancy process.

remote-operations—(Optional) Display the remote operations process, which provides the ping and traceroute MIBs.

resource-cleanup—Display the resource cleanup process.

resource-limits (brief | detail) process-name—(Optional) Display process resource limits.

routing—(Optional) Display the routing protocol process.

sampling—(Optional) Display the sampling process, which performs packet sampling based on particular input interfaces and various fields in the packet header.

sbc-configuration-process—Display the session border controller (SBC) process of the border signaling gateway (BSG).

scc—(TX Matrix routers only) (Optional) Display standard system process information for the TX Matrix router (or switch-card chassis).

sdk-service—Display the SDK Service process, which runs on the Routing Engine and is responsible for communications between the SDK application and Junos OS. Although the SDK Service process is present on the router, it is turned off by default.

secure-neighbor-discovery—(EX Series switches and MX Series routers only) (Optional) Display the secure Neighbor Discovery Protocol (NDP) process, which provides support for protecting NDP messages.

send—(Optional) Display the Secure Neighbor Discovery Protocol (SEND) process, which provides support for protecting Neighbor Discovery Protocol (NDP) messages.

service-deployment—(Optional) Display the service deployment process, which enables Junos OS to work with the Session and Resource Control (SRC) software.

sfc number—(TX Matrix Plus routers only) (Optional) Display system process information for the TX Matrix Plus router. Replace **number** with 0.

snmp—Display the SNMP process, which enables the monitoring of network devices from a central location and provides the router's or switch's SNMP master agent.

sonet-aps—Display the SONET Automatic Protection Switching (APS) process, which monitors any SONET interface that participates in APS.

static-subscribers—(Optional) Display the Static subscribers process, which associates subscribers with statically configured interfaces and provides dynamic service activation and activation for these subscribers.

tunnel-oamd—(Optional) Display the Tunnel OAM process, which enables the Operations, Administration, and Maintenance of Layer 2 tunneled networks. Layer 2 protocol tunneling (L2PT) allows service providers to send Layer 2 protocol data units (PDUs) across the provider's cloud and deliver them to Juniper Networks EX Series Ethernet Switches that are not part of the local broadcast domain.

vrrp—(EX Series switches and MX Series routers only) (Optional) Display the Virtual Router Redundancy Protocol (VRRP) process, which enables hosts on a LAN to make use of redundant routing platforms on that LAN without requiring more than the static configuration of a single default route on the hosts.

watchdog—Display the watchdog timer process, which enables the watchdog timer when Junos OS encounters a problem.

wide—(Optional) Display process information that might be wider than 80 columns.

Additional Information By default, when you issue the **show system processes** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

Required Privilege Level view

Related Documentation

- [List of Junos OS Processes](#)
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

List of Sample Output

[show system processes on page 1136](#)
[show system processes brief on page 1137](#)
[show system processes detail on page 1137](#)
[show system processes extensive on page 1137](#)
[show system processes extensive \(EX9200 Switch\) on page 1138](#)
[show system processes host processes \(OCX1100 Switch\) on page 1138](#)
[show system processes lcc wide \(TX Matrix Routing Matrix\) on page 1139](#)
[show system processes summary on page 1139](#)
[show system processes \(TX Matrix Plus Router\) on page 1140](#)
[show system processes sfc \(TX Matrix Plus Router\) on page 1147](#)
[show system processes lcc wide \(TX Matrix Plus Routing Matrix\) on page 1150](#)
[show system processes \(QFX Series and OCX Series\) on page 1151](#)

Output Fields [Table 61 on page 1134](#) describes the output fields for the **show system processes** command. Output fields are listed in the approximate order in which they appear.

Table 61: show system processes Output Fields

Field Name	Field Description	Level of Output
last pid	Last process identifier assigned to the process.	brief extensive summary
load averages	Three load averages followed by the current time.	brief extensive summary
processes	Number of existing processes and the number of processes in each state (sleeping, running, starting, zombies, and stopped).	brief extensive summary
Mem	Information about physical and virtual memory allocation.	brief extensive summary

Table 61: show system processes Output Fields (*continued*)

Field Name	Field Description	Level of Output
Swap	Information about physical and virtual memory allocation.	brief extensive summary
PID	Process identifier.	detail extensive summary
TT	Control terminal name.	none detail
STAT	<p>Symbolic process state. The state is given by a sequence of letters. The first letter indicates the run state of the process:</p> <ul style="list-style-type: none"> • D—In disk or other short-term, uninterruptible wait • I—Idle (sleeping longer than about 20 seconds) • R—Runnable • S—Sleeping for less than 20 seconds • T—Stopped • Z—Dead (zombie) • + —The process is in the foreground process group of its control terminal. • <—The process has raised CPU scheduling priority. • >—The process has specified a soft limit on memory requirements and is currently exceeding that limit; such a process is not swapped. • A—The process requested random page replacement. • E—The process is trying to exit. • L—The process has pages locked in core. • N—The process has reduced CPU scheduling priority. • S—The process requested first-in, first-out (FIFO) page replacement. • s—The process is a session leader. • V—The process is temporarily suspended. • W—The process is swapped out. • X—The process is being traced or debugged. 	none detail
UID	User identifier.	detail
USERNAME	Process owner.	extensive summary
PPID	Parent process identifier.	detail
CPU	<p>(D)—Short-term CPU usage.</p> <p>(E and S)—Raw (unweighted) CPU usage. The value of this field is used to sort the processes in the output.</p>	detail extensive summary
RSS	Resident set size.	detail
WCHAN	Symbolic name of the wait channel.	detail
STARTED	Local time when the process started running.	detail

Table 61: show system processes Output Fields (*continued*)

Field Name	Field Description	Level of Output
PRI	Current priority of the process. A lower number indicates a higher priority.	detail extensive summary
NI or NICE	UNIX "niceness" value. A lower number indicates a higher priority.	detail extensive summary
SIZE	Total size of the process (text, data, and stack), in kilobytes.	extensive summary
RES	Current amount of resident memory, in kilobytes.	extensive summary
STATE	Current state of the process (for example, sleep , wait , run , idle , zombie , or stop).	extensive summary
TIME	(S)—Number of system and user CPU seconds that the process has used. (None, D, and E)—Total amount of time that the command has been running.	detail extensive summary
WCPU	Weighted CPU usage.	extensive summary
COMMAND	Command that is currently running.	detail extensive summary
THR	Number of threads in the process	extensive

Sample Output

show system processes

```

user@host> show system processes
PID  TT  STAT  TIME  COMMAND
  0  ??  DLs   0:00.70  (swapper)
  1  ??  Is    0:00.35  /sbin/init --
  2  ??  DL    0:00.00  (pagedaemon)
  3  ??  DL    0:00.00  (vmdaemon)
  4  ??  DL    0:42.37  (update)
  5  ??  DL    0:00.00  (if_jnx)
 80  ??  Ss    0:14.66  syslogd -s
 96  ??  Is    0:00.01  portmap
128  ??  Is    0:02.70  cron
173  ??  Is    0:02.24  /usr/local/sbin/sshd (sshd1)
189  ??  S     0:03.80  /sbin/watchdog -t180
190  ??  I     0:00.03  /usr/sbin/tnetd -N
191  ??  S     2:24.76  /sbin/ifd -N
192  ??  S<    0:55.44  /usr/sbin/xntpd -N
195  ??  S     0:53.11  /usr/sbin/snmpd -N
196  ??  S     1:15.73  /usr/sbin/mib2d -N
198  ??  I     0:00.75  /usr/sbin/inetd -N
2677 ??  I     0:00.01  /usr/sbin/mgd -N
2712 ??  Ss    0:00.24  rlogind
2735 ??  R     0:00.00  /bin/ps -ax
1985 p0-  S     0:07.41  ./rpd -N
2713 p0  Is    0:00.24  -tcsh (tcsh)
2726 p0  S+    0:00.07  cli

```

show system processes brief

```

user@host> show system processes brief
last pid: 543; load averages: 0.00, 0.00, 0.00 18:29:47
37 processes: 1 running, 36 sleeping

Mem: 25M Active, 3976K Inact, 19M Wired, 8346K Buf, 202M Free
Swap: 528M Total, 64K Used, 528M Free

```

show system processes detail

```

user@host> show system processes detail

```

PID	UID	PPID	CPU	PRI	NI	RSS	WCHAN	STARTED	TT	STAT	TIME	COMMAND
3151	1049	3129	2	28	0	672	-	1:13PM	p0	R+	0:00.00	ps -ax -r
1	0	0	0	10	0	376	wait	1:51PM	??	Is	0:00.29	/sbin/ini
2	0	0	0	-18	0	12	psleep	1:51PM	??	DL	0:00.00	(pagedae
3	0	0	0	28	0	12	psleep	1:51PM	??	DL	0:00.00	(vmdaemo
4	0	0	0	28	0	12	update	1:51PM	??	DL	0:07.15	(update)
5	0	0	0	2	0	12	pfesel	1:51PM	??	IL	0:02.90	(if_pfe)
27	0	1	0	10	0	17936	mfsidl	1:51PM	??	Is	0:00.46	mfs /dev/
81	0	1	0	2	0	496	select	1:52PM	??	Ss	0:31.21	syslogd -
119	1	1	0	2	0	492	select	1:52PM	??	Is	0:00.00	portmap
134	0	1	0	2	0	580	select	1:52PM	??	S	0:02.95	amd -p -a
151	0	1	0	18	0	532	pause	1:52PM	??	Is	0:00.34	cron
183	0	1	0	2	0	420	select	1:52PM	??	Ss	0:00.07	/usr/loca
206	0	1	0	18	0	72	pause	1:52PM	??	S	0:00.51	/sbin/wat
207	0	1	0	2	0	520	select	1:52PM	??	I	0:00.16	/usr/sbin
208	0	1	0	2	0	536	select	1:52PM	??	S	0:08.21	/sbin/dcd
210	0	1	255	2	-12	740	select	1:52PM	??	S<	0:05.83	/usr/sbin
211	0	1	0	2	0	376	select	1:52PM	??	S	0:00.03	/usr/sbin
215	0	1	0	2	0	548	select	1:52PM	??	I	0:00.50	/usr/sbin
219	0	1	0	3	0	540	ttyin	1:52PM	v0	Is+	0:00.02	/usr/libe
220	0	1	0	3	0	540	ttyin	1:52PM	v1	Is+	0:00.01	/usr/libe
221	0	1	0	3	0	540	ttyin	1:52PM	v2	Is+	0:00.01	/usr/libe
222	0	1	0	3	0	540	ttyin	1:52PM	v3	Is+	0:00.01	/usr/libe
735	0	1	0	2	0	468	select	2:47PM	??	S	0:19.14	/usr/sbin
736	0	1	0	2	0	212	select	2:47PM	??	S	0:14.13	/usr/sbin
1380	0	1	0	3	0	888	ttyin	7:32PM	d0	Is+	0:00.46	bash
3019	0	207	0	2	0	636	select	10:49AM	??	Ss	0:02.93	tnp.chass
3122	0	1380	0	2	0	1764	select	12:33PM	d0	S	0:00.77	./rpd -N
3128	0	215	0	2	0	580	select	12:45PM	??	Ss	0:00.12	rlogind
3129	1049	3128	0	18	0	944	pause	12:45PM	p0	Ss	0:00.14	-tcsh (tc
0	0	0	0	-18	0	0	sched	1:51PM	??	DLs	0:00.10	(swapper

show system processes extensive

```

user@host> show system processes extensive
Mem: 241M Active, 99M Inact, 78M Wired, 325M Cache, 69M Buf, 1251M Free
Swap: 2048M Total, 2048M Free

```

PID	USERNAME	THR	PRI	NICE	SIZE	RES	STATE	TIME	WCPU	COMMAND
11	root	1	171	52	OK	12K	RUN	807.5H	98.73%	idle
13	root	1	-20	-139	OK	12K	WAIT	36:17	0.00%	swi7: clock sio
1499	root	1	96	0	7212K	3040K	select	34:01	0.00%	license-check
1621	root	1	96	0	20968K	11216K	select	20:25	0.00%	mib2d
1465	root	2	8	-88	115M	11748K	nanslp	14:32	0.00%	chassisd
1478	root	1	96	0	6336K	3816K	select	11:28	0.00%	ppmd
20	root	1	-68	-187	OK	12K	WAIT	10:28	0.00%	irq10: em0 em1+++*
1490	root	1	96	0	11792K	4336K	select	9:44	0.00%	shm-rtssdbd

```

1618 root      1  96    0 39584K  7464K select  8:47  0.00% pfed
1622 root      1  96    0 15268K 10988K select  6:16  0.00% snmpd
1466 root      1  96    0  7408K  2896K select  5:44  0.00% alarmd
   7 root      1 -16    0    0K    12K client  5:09  0.00% ifstate notify
1480 root      1  96    0  5388K  2660K select  4:29  0.00% ksyncd
  12 root      1 -40 -159    0K    12K WAIT   4:15  0.00% swi2: netisr 0
1462 root      1  96    0 1836K   1240K select  3:57  0.00% bslockd
  55 root      1 -16    0    0K    12K -      3:44  0.00% schedcpu
1392 root      1  16    0    0K    12K bcmsem  3:37  0.00% bcmLINK.0
  47 root      1 -16    0    0K    12K psleep  3:25  0.00% vmkmemdaemon
  36 root      1  20    0    0K    12K syncer  2:46  0.00% syncer
1484 root      1  96    0  7484K  3428K select  2:38  0.00% clk syncd
1616 root      1  96    0  4848K  2848K select  2:18  0.00% irsd
1487 root      1  96    0 32800K  6992K select  2:10  0.00% smid
1623 root      1  96    0 34616K  5464K select  2:01  0.00% dcd
  15 root      1 -16    0    0K    12K -      1:59  0.00% yarrow
  49 root      1 -16    0    0K    12K .       1:51  0.00% ddostasks

```

show system processes extensive (EX9200 Switch)

```

user@switch> show system processes extensive
last pid: 3372; load averages:  0.02,  0.02,  0.00 up 0+01:42:22   16:39:57
151 processes: 4 running, 131 sleeping, 1 zombie, 15 waiting

Mem: 935M Active, 122M Inact, 108M Wired, 838M Cache, 214M Buf, 5872M Free
Swap: 8192M Total, 8192M Free

```

PID	USERNAME	THR	PRI	NICE	SIZE	RES	STATE	TIME	WCPU	COMMAND
10	root	1	171	52	0K	16K	RUN	96:34	92.19%	idle
3317	root	1	97	0	40412K	30944K	select	0:00	5.13%	mgd
3316	root	1	96	0	26672K	20516K	select	0:00	3.08%	cli
1626	root	2	8	-88	124M	20332K	nanslp	3:19	2.39%	chassisd
260	root	1	-8	0	0K	16K	mdwait	0:16	0.00%	md16
19	root	1	-68	-187	0K	16K	WAIT	0:12	0.00%	irq11: em0 em1
em2*										
1642	root	1	96	0	8052K	3936K	RUN	0:10	0.00%	clk syncd
11	root	1	-20	-139	0K	16K	WAIT	0:07	0.00%	swi7: clock sio
154	root	1	-8	0	0K	16K	mdwait	0:06	0.00%	md8
1784	root	1	96	0	98M	33720K	select	0:05	0.00%	authd
1646	root	1	96	0	7776K	2944K	select	0:03	0.00%	license-check
1807	root	1	96	0	41340K	9944K	select	0:02	0.00%	mib2d

[...Output truncated...]

show system processes host processes (OCX1100 Switch)

```

user@switch> show system processes host processes
fpc0:
-----
top - 14:14:32 up  2:05,  0 users,  load average: 0.11, 0.39, 0.39
Tasks: 101 total,  1 running,  98 sleeping,  0 stopped,  2 zombie
Cpu(s):  3.1%us,  2.2%sy,  0.0%ni, 94.2%id,  0.4%wa,  0.0%hi,  0.0%si,  0.0%st
Mem:  3881300k total, 2667040k used, 1214260k free,  53232k buffers
Swap:  15620k total,    0k used,  15620k free,  808492k cached

  PID USER      PR  NI  VIRT  RES  SHR  S  %CPU  %MEM    TIME+  COMMAND
 2780 root       20   0 1860m 1.5g 3780  S   14  41.7   20:56.05  kvm
 1482 bind       20   0 24676 5912 1944  S    2   0.2    0:00.07  named
 4631 root       20   0  648m  94m  13m  S    2   2.5    4:19.59  dcpfe
 9230 root       20   0 15208 1092  832  R    2   0.0    0:00.01  top
    1 root       20   0  4216  660  576  S    0   0.0    2:09.61  init

```



```

 2 root      20   0   0   0   0 S   0 0.0  0:00.00 kthreadd
 3 root      20   0   0   0   0 S   0 0.0  0:00.21 ksoftirqd/0
 4 root      20   0   0   0   0 S   0 0.0  0:00.00 kworker/0:0
 5 root       0 -20   0   0   0 S   0 0.0  0:00.00 kworker/0:0H
 7 root      RT   0   0   0   0 S   0 0.0  0:00.52 migration/0
 8 root      20   0   0   0   0 S   0 0.0  0:04.36 rcu_preempt
 9 root      20   0   0   0   0 S   0 0.0  0:00.00 rcu_bh
10 root      20   0   0   0   0 S   0 0.0  0:00.00 rcu_sched
11 root      RT   0   0   0   0 S   0 0.0  0:00.53 migration/1

```

[...Output truncated...]

show system processes lcc wide (TX Matrix Routing Matrix)

```
user@host> show system processes lcc 2 wide
lcc2-re0:
```

```

-----
PID  TT  STAT      TIME COMMAND
 0  ??  DLs    0:00.00 (swapper)
 1  ??  ILs    0:00.10 /sbin/preinit -- (init)
 2  ??  DL     0:00.00 (pagedaemon)
 3  ??  DL     0:00.00 (vmddaemon)
 4  ??  DL     0:00.00 (bufddaemon)
 5  ??  DL     0:00.04 (syncer)
 6  ??  DL     0:00.00 (netddaemon)
 7  ??  IL     0:00.00 (if_pic_listen)
 8  ??  IL     0:00.00 (scs_housekeeping)
 9  ??  IL     0:00.00 (if_pfe_listen)
10  ??  DL     0:00.00 (vmuncachedaemon)
11  ??  SL     0:00.02 (cb_poll)
172 ??  ILs    0:00.21 mfs -o noauto /dev/ad1s1b /tmp (newfs)
2909 ??  Is     0:00.00 pccardd
2932 ??  Ss     0:00.07 syslogd -r -s
3039 ??  Is     0:00.00 cron
3217 ??  I      0:00.00 /sbin/watchdog -d
3218 ??  I      0:00.02 /usr/sbin/tnetd -N
3221 ??  S      0:00.11 /usr/sbin/alarmd -N
3222 ??  S      0:00.85 /usr/sbin/craftd -N
3223 ??  S      0:00.05 /usr/sbin/mgd -N
3224 ??  I      0:00.02 /usr/sbin/inetd -N
3225 ??  I      0:00.00 /usr/sbin/tnp.sntpd -N
3226 ??  I      0:00.01 /usr/sbin/tnp.sntpc -N
3228 ??  I      0:00.01 /usr/sbin/smartd -N
3231 ??  I      0:00.01 /usr/sbin/eccd -N
3425 ??  S      0:00.09 /usr/sbin/dfwd -N
3426 ??  S      0:00.19 /sbin/dcd -N
3427 ??  I      0:00.04 /usr/sbin/pfed -N
3430 ??  S      0:00.10 /usr/sbin/ksyncd -N
3482 ??  S      1:53.63 /usr/sbin/chassisd -N
4285 ??  SL     0:00.01 (peer proxy)
4286 ??  SL     0:00.00 (peer proxy)
4303 ??  Ss     0:00.00 mgd: (mgd) (root) (mgd)
4304 ??  R      0:00.00 /bin/ps -ax -ww
3270 d0  Is+    0:00.00 /usr/libexec/getty std.9600 ttyd0

```

show system processes summary

```

user@host> show system processes summary
last pid: 543; load averages: 0.00, 0.00, 0.00 18:29:47
37 processes: 1 running, 36 sleeping

```

Mem: 25M Active, 3976K Inact, 19M Wired, 8346K Buf, 202M Free
 Swap: 528M Total, 64K Used, 528M Free

PID	USERNAME	PRI	NICE	SIZE	RES	STATE	TIME	WCPU	CPU	COMMAND
527	root	2	0	176K	580K	select	0:00	0.04%	0.04%	rlogind
543	root	30	0	604K	768K	RUN	0:00	0.00%	0.00%	top

show system processes (TX Matrix Plus Router)

user@host> show system processes
 sfc0-re0:

```

-----
PID  TT  STAT      TIME COMMAND
  0  ??  WLS      0:00.00 [swapper]
  1  ??  ILs      0:00.18 /packages/mnt/jbase/sbin/init --
  2  ??  DL       0:00.20 [g_event]
  3  ??  DL       0:00.39 [g_up]
  4  ??  DL       0:00.32 [g_down]
  5  ??  DL       0:00.00 [thread taskq]
  6  ??  DL       0:00.09 [kqueue taskq]
  7  ??  DL       0:00.01 [pagedaemon]
  8  ??  DL       0:00.00 [vmdaemon]
  9  ??  DL       0:06.63 [pagezero]
 10  ??  DL       0:00.00 [ktrace]
 11  ??  RL      310:52.98 [idle]
 12  ??  WL       0:11.03 [swi2: net]
 13  ??  WL       0:27.58 [swi7: clock sio]
 14  ??  WL       0:00.00 [swi6: vm]
 15  ??  DL       0:03.02 [yarrow]
 16  ??  WL       0:00.00 [swi9: +]
 17  ??  WL       0:00.00 [swi8: +]
 18  ??  WL       0:00.00 [swi5: cambio]
 19  ??  WL       0:00.00 [swi9: task queue]
 20  ??  WL       0:11.41 [irq16: uhci0 uhci*]
 21  ??  DL       0:00.00 [usb0]
 22  ??  DL       0:00.00 [usbtask]
 23  ??  WL       0:39.51 [irq17: uhci1 uhci*]
 24  ??  DL       0:00.00 [usb1]
 25  ??  WL       0:00.00 [irq18: uhci2 uhci*]
 26  ??  DL       0:00.83 [usb2]
 27  ??  DL       0:00.00 [usb3]
 28  ??  DL       0:00.00 [usb4]
 29  ??  DL       0:00.00 [usb5]
 30  ??  DL       0:00.73 [usb6]
 31  ??  DL       0:00.00 [usb7]
 32  ??  WL       0:00.00 [irq14: ata0]
 33  ??  WL       0:00.00 [irq15: ata1]
 34  ??  WL       0:00.00 [irq1: atkbd0]
 35  ??  WL       0:00.00 [swi0: sio]
 36  ??  WL       0:00.00 [irq11: isab0]
 37  ??  WL       0:00.00 [swi3: ip6opt ipopt]
 38  ??  WL       0:00.00 [swi4: ip6mismatch+]
 39  ??  WL       0:00.00 [swi1: ipfwd]
 40  ??  DL       0:00.02 [bufdaemon]
 41  ??  DL       0:00.02 [vnlr]
 42  ??  DL       0:00.39 [syncer]
 43  ??  DL       0:00.05 [softdepflush]
 44  ??  DL       0:00.00 [netdaemon]
 45  ??  DL       0:00.02 [vmuncachedaemon]
 46  ??  DL       0:00.00 [if_pic_listen]
 47  ??  DL       0:00.35 [vmkmemdaemon]

```

```

48 ?? DL 0:00.00 [cb_poll]
49 ?? DL 0:00.06 [if_pfe_listen]
50 ?? DL 0:00.00 [scs_housekeeping]
51 ?? IL 0:00.00 [kern_dump_proc]
52 ?? IL 0:00.00 [nfsiod 0]
53 ?? IL 0:00.00 [nfsiod 1]
54 ?? IL 0:00.00 [nfsiod 2]
55 ?? IL 0:00.00 [nfsiod 3]
56 ?? DL 0:00.37 [schedcpu]
57 ?? DL 0:00.56 [md0]
79 ?? DL 0:02.58 [md1]
100 ?? DL 0:00.03 [md2]
118 ?? DL 0:00.01 [md3]
139 ?? DL 0:00.95 [md4]
160 ?? DL 0:00.12 [md5]
181 ?? DL 0:00.00 [md6]
217 ?? DL 0:00.02 [md7]
227 ?? DL 0:00.05 [md8]
1341 ?? SL 0:01.34 [bcmTX]
1342 ?? SL 0:01.68 [bcmXGS3AsyncTX]
1343 ?? SL 0:41.40 [bcmLINK.0]
1345 ?? SL 0:33.83 [bcmLINK.1]
1350 ?? Is 0:00.01 /usr/sbin/cron
1502 ?? S 0:00.01 /sbin/watchdog -t-1
1503 ?? S 0:00.86 /usr/libexec/bslockd -mp -N
1504 ?? S 0:00.01 /usr/sbin/tnetd -N
1507 ?? S 0:01.32 /usr/sbin/alarmd -N
1508 ?? S 0:14.54 /usr/sbin/craftd -N
1509 ?? S 0:01.19 /usr/sbin/mgd -N
1512 ?? I 0:00.05 /usr/sbin/inetd -N
1513 ?? S 0:00.10 /usr/sbin/tnp.snmpd -N
1517 ?? S 0:00.11 /usr/sbin/smartd -N
1525 ?? S 0:01.10 /usr/sbin/idpd -N
1526 ?? S 0:01.43 /usr/sbin/license-check -U -M -p 10 -i 10
1527 ?? I 0:00.01 /usr/libexec/getty Pc ttyv0
1616 ?? DL 0:00.30 [peer proxy]
1617 ?? DL 0:00.32 [peer proxy]
1618 ?? DL 0:00.34 [peer proxy]
1619 ?? DL 0:00.30 [peer proxy]
2391 ?? Is 0:00.01 telnetd
7331 ?? Ss 0:00.03 telnetd
9538 ?? DL 0:01.16 [jsr_kkcm]
9613 ?? DL 0:00.18 [peer proxy]
23781 ?? Ss 0:00.01 telnetd
23926 ?? Ss 0:00.01 mgd: (mgd) (user)/dev/tty2 (mgd)
36867 ?? S 0:03.14 /usr/sbin/rpd -N
36874 ?? S 0:00.08 /usr/sbin/lmpd
36876 ?? S 0:00.17 /usr/sbin/lacpd -N
36877 ?? S 0:00.15 /usr/sbin/bfdd -N
36878 ?? S 0:05.05 /usr/sbin/ppmd -N
36907 ?? S 0:25.07 /usr/sbin/chassisd -N
37775 ?? S 0:00.01 /usr/sbin/bdbrepd -N
45727 ?? S 0:00.02 /usr/sbin/xntpd -j -N -g (ntpd)
45729 ?? S 0:00.38 /usr/sbin/l2ald -N
45730 ?? S< 0:00.12 /usr/sbin/apsd -N
45731 ?? SN 0:00.10 /usr/sbin/sampled -N
45732 ?? S 0:00.03 /usr/sbin/ilmid -N
45733 ?? S 0:00.09 /usr/sbin/rmopd -N
45734 ?? S 0:00.30 /usr/sbin/cosd
45735 ?? I 0:00.00 /usr/sbin/rtspd -N
45736 ?? S 0:00.06 /usr/sbin/fsad -N

```

```

45737 ?? S      0:00.05 /usr/sbin/rdd -N
45738 ?? S      0:00.10 /usr/sbin/pppd -N
45739 ?? S      0:00.05 /usr/sbin/dfcd -N
45740 ?? S      0:00.07 /usr/sbin/lfmd -N
45741 ?? S      0:00.01 /usr/sbin/implsoamd -N
45742 ?? I      0:00.01 /usr/sbin/sendd -N
45743 ?? S      0:00.08 /usr/sbin/appidd -N
45744 ?? S      0:00.05 /usr/sbin/mspd -N
45745 ?? S      0:00.25 /usr/sbin/jdiameterd -N
45746 ?? S      0:00.10 /usr/sbin/pfed -N
45747 ?? S      0:00.19 /usr/sbin/lpdfd -N
45748 ?? S      0:00.63 /sbin/dcd -N
45750 ?? S      0:00.45 /usr/sbin/mib2d -N
45751 ?? S      0:00.15 /usr/sbin/dfwd -N
45752 ?? S      0:00.15 /usr/sbin/irsd -N
45764 ?? S      0:20.59 /usr/sbin/snmpd -N
56479 ?? Ss     0:00.00 mgd: (mgd) (root) (mgd)
56480 ?? R      0:00.00 /bin/ps -ax
1142 d0- I      0:00.01 /usr/sbin/usbd -N
1160 d0- S      0:29.17 /usr/sbin/eventd -N -r -s -A
6527 d0 Is+    0:00.00 /usr/libexec/getty std.9600 ttyd0
2392 p1 Is      0:00.00 login [pam] (login)
2393 p1 I        0:00.00 -csh (csh)
2394 p1 I        0:00.00 su -
2395 p1 I+       0:00.01 -su (csh)
23782 p2 Is      0:00.00 login [pam] (login)
23881 p2 I        0:00.00 -csh (csh)
23925 p2 S+      0:00.03 cli
7332 p3 Is      0:00.00 login [pam] (login)
7333 p3 I        0:00.00 -csh (csh)
23780 p3 S+      0:00.02 telnet aj

```

```
lcc0-re0:
```

```

-----
PID TT  STAT    TIME COMMAND
  0 ??  WLS    0:00.00 [swapper]
  1 ??  ILs    0:00.16 /packages/mnt/jbase/sbin/init --
  2 ??  DL     0:00.01 [g_event]
  3 ??  DL     0:00.16 [g_up]
  4 ??  DL     0:00.11 [g_down]
  5 ??  DL     0:00.00 [thread taskq]
  6 ??  DL     0:00.00 [kqueue taskq]
  7 ??  DL     0:00.00 [pagedaemon]
  8 ??  DL     0:00.00 [vmdaemon]
  9 ??  DL     0:01.77 [pagezero]
 10 ??  DL     0:00.00 [ktrace]
 11 ??  RL    17:22.31 [idle]
 12 ??  WL     0:00.32 [swi2: net]
 13 ??  WL     0:01.21 [swi7: clock sio]
 14 ??  WL     0:00.00 [swi6: vm]
 15 ??  DL     0:00.10 [yarrow]
 16 ??  WL     0:00.00 [swi9: +]
 17 ??  WL     0:00.00 [swi8: +]
 18 ??  WL     0:00.00 [swi5: cambio]
 19 ??  WL     0:00.00 [swi9: task queue]
 20 ??  WL     0:02.73 [irq10: bcm0 uhci1*]
 21 ??  WL     0:00.02 [irq11: cb0 uhci0+*]
 22 ??  DL     0:00.00 [usb0]
 23 ??  DL     0:00.00 [usbtask]
 24 ??  DL     0:00.00 [usb1]
 25 ??  DL     0:00.05 [usb2]

```

```

26 ?? DL 0:00.00 [usb3]
27 ?? DL 0:00.00 [usb4]
28 ?? DL 0:00.00 [usb5]
29 ?? DL 0:00.04 [usb6]
30 ?? DL 0:00.00 [usb7]
31 ?? WL 0:00.00 [irq14: ata0]
32 ?? WL 0:00.00 [irq15: ata1]
33 ?? WL 0:00.00 [irq1: atkbd0]
34 ?? WL 0:00.00 [swi0: sio]
35 ?? WL 0:00.00 [swi3: ip6opt ipopt]
36 ?? WL 0:00.00 [swi4: ip6mismatch+]
37 ?? WL 0:00.00 [swi1: ipfwd]
38 ?? DL 0:00.00 [bufdaemon]
39 ?? DL 0:00.00 [vn1ru]
40 ?? DL 0:00.01 [syncer]
41 ?? DL 0:00.00 [softdepflush]
42 ?? DL 0:00.00 [netdaemon]
43 ?? DL 0:00.00 [vmuncachedaemon]
44 ?? DL 0:00.00 [if_pic_listen]
45 ?? DL 0:00.02 [vmkmemdaemon]
46 ?? DL 0:00.01 [cb_poll]
47 ?? DL 0:00.00 [if_pfe_listen]
48 ?? DL 0:00.00 [scs_housekeeping]
49 ?? IL 0:00.00 [kern_dump_proc]
50 ?? IL 0:00.00 [nfsiod 0]
51 ?? IL 0:00.00 [nfsiod 1]
52 ?? IL 0:00.00 [nfsiod 2]
53 ?? IL 0:00.00 [nfsiod 3]
54 ?? DL 0:00.01 [schedcpu]
55 ?? DL 0:00.73 [md0]
77 ?? DL 0:03.54 [md1]
98 ?? DL 0:00.37 [md2]
116 ?? DL 0:00.02 [md3]
137 ?? DL 0:00.56 [md4]
158 ?? DL 0:00.15 [md5]
179 ?? DL 0:00.00 [md6]
215 ?? DL 0:00.03 [md7]
225 ?? DL 0:00.03 [md8]
1078 ?? DL 0:00.00 [jsr_kkcm]
1363 ?? SL 0:00.09 [bcmTX]
1364 ?? SL 0:00.10 [bcmXGS3AsyncTX]
1365 ?? SL 0:03.08 [bcmLINK.0]
1370 ?? Is 0:00.00 /usr/sbin/cron
1522 ?? S 0:00.00 /sbin/watchdog -t-1
1523 ?? S 0:00.05 /usr/libexec/bslockd -mp -N
1524 ?? I 0:00.01 /usr/sbin/tnetd -N
1526 ?? S 0:04.98 /usr/sbin/chassisd -N
1527 ?? S 0:00.04 /usr/sbin/alarmd -N
1528 ?? I 0:00.40 /usr/sbin/craftd -N
1529 ?? S 0:00.08 /usr/sbin/mgd -N
1532 ?? I 0:00.04 /usr/sbin/inetd -N
1533 ?? I 0:00.00 /usr/sbin/tnp.sntpd -N
1534 ?? I 0:00.00 /usr/sbin/tnp.sntpc -N
1536 ?? S 0:00.01 /usr/sbin/smartd -N
1540 ?? I 0:00.07 /usr/sbin/jcsd -N
1541 ?? S 0:00.11 /usr/sbin/idpd -N
1542 ?? I 0:00.00 /usr/libexec/getty Pc ttyv0
2089 ?? DL 0:00.01 [peer proxy]
2090 ?? DL 0:00.01 [peer proxy]
2091 ?? DL 0:00.01 [peer proxy]
2657 ?? S 0:00.02 /usr/sbin/dfwd -N

```

```

2658 ?? S      0:00.02 /sbin/dcd -N
2659 ?? S      0:00.05 /usr/sbin/snmpd -N
2660 ?? S      0:00.01 /usr/sbin/mib2d -N
2661 ?? S      0:00.01 /usr/sbin/pfed -N
2662 ?? S      0:00.01 /usr/sbin/irsd -N
2667 ?? S      0:00.13 /usr/sbin/ksyncd -N
2690 ?? Ss     0:00.00 mgd: (mgd) (root) (mgd)
2691 ?? R      0:00.00 /bin/ps -ax
1164 d0- S     0:00.00 /usr/sbin/usbd -N
1182 d0- S     0:00.34 /usr/sbin/eventd -N -r -s -A
1543 d0 Is+    0:00.00 /usr/libexec/getty std.9600 ttyd0

```

```
lcc1-re0:
```

```

-----
PID  TT  STAT      TIME COMMAND
  0  ??  Wls     0:00.00 [swapper]
  1  ??  ILs     0:00.17 /packages/mnt/jbase/sbin/init --
  2  ??  DL      0:00.01 [g_event]
  3  ??  DL      0:00.16 [g_up]
  4  ??  DL      0:00.11 [g_down]
  5  ??  DL      0:00.00 [thread taskq]
  6  ??  DL      0:00.00 [kqueue taskq]
  7  ??  DL      0:00.00 [pagedaemon]
  8  ??  DL      0:00.00 [vmdaemon]
  9  ??  DL      0:01.77 [pagezero]
 10  ??  DL      0:00.00 [ktrace]
 11  ??  RL     17:22.83 [idle]
 12  ??  WL      0:00.35 [swi2: net]
 13  ??  WL      0:01.20 [swi7: clock sio]
 14  ??  WL      0:00.00 [swi6: vm]
 15  ??  DL      0:00.10 [yarrow]
 16  ??  WL      0:00.00 [swi9: +]
 17  ??  WL      0:00.00 [swi8: +]
 18  ??  WL      0:00.00 [swi5: cambio]
 19  ??  WL      0:00.00 [swi9: task queue]
 20  ??  WL      0:02.87 [irq10: bcm0 uhci1*]
 21  ??  WL      0:00.02 [irq11: cb0 uhci0+*]
 22  ??  DL      0:00.00 [usb0]
 23  ??  DL      0:00.00 [usbtask]
 24  ??  DL      0:00.00 [usb1]
 25  ??  DL      0:00.05 [usb2]
 26  ??  DL      0:00.00 [usb3]
 27  ??  DL      0:00.00 [usb4]
 28  ??  DL      0:00.00 [usb5]
 29  ??  DL      0:00.04 [usb6]
 30  ??  DL      0:00.00 [usb7]
 31  ??  WL      0:00.00 [irq14: ata0]
 32  ??  WL      0:00.00 [irq15: ata1]
 33  ??  WL      0:00.00 [irq1: atkbd0]
 34  ??  WL      0:00.00 [swi0: sio]
 35  ??  WL      0:00.00 [swi3: ip6opt ipopt]
 36  ??  WL      0:00.00 [swi4: ip6mismatch+]
 37  ??  WL      0:00.00 [swi1: ipfwd]
 38  ??  DL      0:00.00 [bufdaemon]
 39  ??  DL      0:00.00 [vn1ru]
 40  ??  DL      0:00.01 [syncer]
 41  ??  DL      0:00.00 [softdepflush]
 42  ??  DL      0:00.00 [netdaemon]
 43  ??  DL      0:00.00 [vmuncachedaemon]
 44  ??  DL      0:00.00 [if_pic_listen]
 45  ??  DL      0:00.02 [vmknemdaemon]

```

```

46 ?? DL 0:00.01 [cb_poll]
47 ?? DL 0:00.00 [if_pfe_listen]
48 ?? DL 0:00.00 [scs_housekeeping]
49 ?? IL 0:00.00 [kern_dump_proc]
50 ?? IL 0:00.00 [nfsiod 0]
51 ?? IL 0:00.00 [nfsiod 1]
52 ?? IL 0:00.00 [nfsiod 2]
53 ?? IL 0:00.00 [nfsiod 3]
54 ?? DL 0:00.02 [schedcpu]
55 ?? DL 0:00.75 [md0]
77 ?? DL 0:03.40 [md1]
98 ?? DL 0:00.37 [md2]
116 ?? DL 0:00.02 [md3]
137 ?? DL 0:00.56 [md4]
158 ?? DL 0:00.15 [md5]
179 ?? DL 0:00.00 [md6]
215 ?? DL 0:00.03 [md7]
225 ?? DL 0:00.03 [md8]
1052 ?? DL 0:00.00 [jsr_kkcm]
1337 ?? SL 0:00.09 [bcmTX]
1338 ?? SL 0:00.10 [bcmXGS3AsyncTX]
1339 ?? SL 0:03.10 [bcmLINK.0]
1344 ?? Is 0:00.00 /usr/sbin/cron
1496 ?? S 0:00.00 /sbin/watchdog -t-1
1497 ?? S 0:00.05 /usr/libexec/bslockd -mp -N
1498 ?? I 0:00.01 /usr/sbin/tnetd -N
1500 ?? S 0:04.97 /usr/sbin/chassisd -N
1501 ?? S 0:00.04 /usr/sbin/alarmd -N
1502 ?? I 0:00.40 /usr/sbin/craftd -N
1503 ?? S 0:00.08 /usr/sbin/mgd -N
1506 ?? I 0:00.04 /usr/sbin/inetd -N
1507 ?? I 0:00.00 /usr/sbin/tnp.snmpd -N
1508 ?? I 0:00.00 /usr/sbin/tnp.sntpc -N
1510 ?? S 0:00.01 /usr/sbin/smartd -N
1514 ?? I 0:00.07 /usr/sbin/jcsd -N
1515 ?? S 0:00.18 /usr/sbin/idpd -N
1516 ?? I 0:00.00 /usr/libexec/getty Pc ttyv0
2068 ?? DL 0:00.01 [peer proxy]
2069 ?? DL 0:00.01 [peer proxy]
2070 ?? DL 0:00.01 [peer proxy]
2666 ?? S 0:00.02 /sbin/dcd -N
2667 ?? S 0:00.01 /usr/sbin/irsd -N
2668 ?? S 0:00.01 /usr/sbin/pfed -N
2669 ?? S 0:00.05 /usr/sbin/snmpd -N
2670 ?? S 0:00.01 /usr/sbin/mib2d -N
2671 ?? S 0:00.02 /usr/sbin/dfwd -N
2675 ?? S 0:00.13 /usr/sbin/ksyncd -N
2699 ?? Ss 0:00.00 mgd: (mgd) (root) (mgd)
2700 ?? R 0:00.00 /bin/ps -ax
1138 d0- S 0:00.00 /usr/sbin/usbd -N
1156 d0- S 0:00.37 /usr/sbin/eventd -N -r -s -A
1517 d0 Is+ 0:00.00 /usr/libexec/getty std.9600 ttyd0

```

```
lcc2-re0:
```

```

-----
PID TT STAT TIME COMMAND
0 ?? Wls 0:00.00 [swapper]
1 ?? ILs 0:00.18 /packages/mnt/jbase/sbin/init --
2 ?? DL 0:00.01 [g_event]
3 ?? DL 0:00.17 [g_up]
4 ?? DL 0:00.12 [g_down]

```

```

5 ?? DL 0:00.00 [thread taskq]
6 ?? DL 0:00.00 [kqueue taskq]
7 ?? DL 0:00.00 [pagedaemon]
8 ?? DL 0:00.00 [vmdaemon]
9 ?? DL 0:01.77 [pagezero]
10 ?? DL 0:00.00 [ktrace]
11 ?? RL 17:19.13 [idle]
12 ?? WL 0:00.36 [swi2: net]
13 ?? WL 0:01.20 [swi7: clock sio]
14 ?? WL 0:00.00 [swi6: vm]
15 ?? DL 0:00.13 [yarrow]
16 ?? WL 0:00.00 [swi9: +]
17 ?? WL 0:00.00 [swi8: +]
18 ?? WL 0:00.00 [swi5: cambio]
19 ?? WL 0:00.00 [swi9: task queue]
20 ?? WL 0:03.03 [irq10: bcm0 uhci1*]
21 ?? WL 0:00.02 [irq11: cb0 uhci0+*]
22 ?? DL 0:00.00 [usb0]
23 ?? DL 0:00.00 [usbtask]
24 ?? DL 0:00.00 [usb1]
25 ?? DL 0:00.05 [usb2]
26 ?? DL 0:00.00 [usb3]
27 ?? DL 0:00.00 [usb4]
28 ?? DL 0:00.00 [usb5]
29 ?? DL 0:00.04 [usb6]
30 ?? DL 0:00.00 [usb7]
31 ?? WL 0:00.00 [irq14: ata0]
32 ?? WL 0:00.00 [irq15: ata1]
33 ?? WL 0:00.00 [irq1: atkbd0]
34 ?? WL 0:00.00 [swi0: sio]
35 ?? WL 0:00.00 [swi3: ip6opt ipopt]
36 ?? WL 0:00.00 [swi4: ip6mismatch+]
37 ?? WL 0:00.00 [swi1: ipfwd]
38 ?? DL 0:00.00 [bufdaemon]
39 ?? DL 0:00.00 [vn1ru]
40 ?? DL 0:00.01 [syncer]
41 ?? DL 0:00.00 [softdepflush]
42 ?? DL 0:00.00 [netdaemon]
43 ?? DL 0:00.00 [vmuncachedaemon]
44 ?? DL 0:00.00 [if_pic_listen]
45 ?? DL 0:00.02 [vmkmemdaemon]
46 ?? DL 0:00.01 [cb_poll]
47 ?? DL 0:00.00 [if_pfe_listen]
48 ?? DL 0:00.00 [scs_housekeeping]
49 ?? IL 0:00.00 [kern_dump_proc]
50 ?? IL 0:00.00 [nfsiod 0]
51 ?? IL 0:00.00 [nfsiod 1]
52 ?? IL 0:00.00 [nfsiod 2]
53 ?? IL 0:00.00 [nfsiod 3]
54 ?? DL 0:00.02 [schedcpu]
55 ?? DL 0:00.75 [md0]
77 ?? DL 0:03.48 [md1]
98 ?? DL 0:00.59 [md2]
116 ?? DL 0:00.02 [md3]
137 ?? DL 0:00.56 [md4]
158 ?? DL 0:00.15 [md5]
179 ?? DL 0:00.00 [md6]
215 ?? DL 0:00.03 [md7]
225 ?? DL 0:00.03 [md8]
1052 ?? DL 0:00.00 [jsr_kkcm]
1337 ?? SL 0:00.09 [bcmTX]

```



```

1338 ?? SL      0:00.10 [bcmXGS3AsyncTX]
1339 ?? SL      0:03.22 [bcmLINK.0]
1344 ?? Is      0:00.00 /usr/sbin/cron
1496 ?? S       0:00.00 /sbin/watchdog -t-1
1497 ?? S       0:00.05 /usr/libexec/bslockd -mp -N
1498 ?? S       0:00.01 /usr/sbin/tinetd -N
1500 ?? R       0:05.17 /usr/sbin/chassisd -N
1501 ?? S       0:00.04 /usr/sbin/alarmd -N
1502 ?? I       0:00.39 /usr/sbin/craftd -N
1503 ?? S       0:00.08 /usr/sbin/mgd -N
1506 ?? I       0:00.05 /usr/sbin/inetd -N
1507 ?? I       0:00.00 /usr/sbin/tnp.sntpd -N
1508 ?? I       0:00.00 /usr/sbin/tnp.sntpc -N
1510 ?? S       0:00.01 /usr/sbin/smartd -N
1514 ?? I       0:00.07 /usr/sbin/jcsd -N
1515 ?? S       0:00.17 /usr/sbin/idpd -N
1516 ?? I       0:00.00 /usr/libexec/getty Pc ttyv0
2591 ?? DL      0:00.01 [peer proxy]
2592 ?? DL      0:00.01 [peer proxy]
2593 ?? DL      0:00.01 [peer proxy]
2597 ?? DL      0:00.00 [peer proxy]
3192 ?? S       0:00.01 /usr/sbin/irsd -N
3193 ?? S       0:00.05 /usr/sbin/snmpd -N
3194 ?? S       0:00.02 /sbin/dcd -N
3195 ?? S       0:00.01 /usr/sbin/pfed -N
3196 ?? S       0:00.01 /usr/sbin/mib2d -N
3197 ?? S       0:00.02 /usr/sbin/dfwd -N
3198 ?? S       0:00.13 /usr/sbin/ksyncd -N
3228 ?? Ss      0:00.00 mgd: (mgd) (root) (mgd)
3229 ?? R       0:00.00 /bin/ps -ax
1138 d0- S      0:00.00 /usr/sbin/usbd -N
1156 d0- S      0:00.42 /usr/sbin/eventd -N -r -s -A
1517 d0 Is+     0:00.00 /usr/libexec/getty std.9600 ttyd0
...

```

show system processes sfc (TX Matrix Plus Router)

```

user@host> show system processes sfc 0
sfc0-re0:

```

```

-----
PID  TT  STAT      TIME COMMAND
  0  ??  WLS      0:00.00 [swapper]
  1  ??  SLs      0:00.18 /packages/mnt/jbase/sbin/init --
  2  ??  DL       0:00.20 [g_event]
  3  ??  DL       0:00.39 [g_up]
  4  ??  DL       0:00.32 [g_down]
  5  ??  DL       0:00.00 [thread taskq]
  6  ??  DL       0:00.09 [kqueue taskq]
  7  ??  DL       0:00.01 [pagedaemon]
  8  ??  DL       0:00.00 [vmdaemon]
  9  ??  DL       0:06.63 [pagezero]
 10  ??  DL       0:00.00 [ktrace]
 11  ??  RL      312:09.00 [idle]
 12  ??  WL       0:11.07 [swi2: net]
 13  ??  WL       0:27.70 [swi7: clock sio]
 14  ??  WL       0:00.00 [swi6: vm]
 15  ??  DL       0:03.03 [yarrow]
 16  ??  WL       0:00.00 [swi9: +]
 17  ??  WL       0:00.00 [swi8: +]
 18  ??  WL       0:00.00 [swi5: cambio]
 19  ??  WL       0:00.00 [swi9: task queue]

```

```

20 ?? WL 0:11.46 [irq16: uhci0 uhci*]
21 ?? DL 0:00.00 [usb0]
22 ?? DL 0:00.00 [usbtask]
23 ?? WL 0:39.63 [irq17: uhci1 uhci*]
24 ?? DL 0:00.00 [usb1]
25 ?? WL 0:00.00 [irq18: uhci2 uhci*]
26 ?? DL 0:00.84 [usb2]
27 ?? DL 0:00.00 [usb3]
28 ?? DL 0:00.00 [usb4]
29 ?? DL 0:00.00 [usb5]
30 ?? DL 0:00.73 [usb6]
31 ?? DL 0:00.00 [usb7]
32 ?? WL 0:00.00 [irq14: ata0]
33 ?? WL 0:00.00 [irq15: ata1]
34 ?? WL 0:00.00 [irq1: atkbd0]
35 ?? WL 0:00.00 [swi0: sio]
36 ?? WL 0:00.00 [irq11: isab0]
37 ?? WL 0:00.00 [swi3: ip6opt ipopt]
38 ?? WL 0:00.00 [swi4: ip6mismatch+]
39 ?? WL 0:00.00 [swi1: ipfwd]
40 ?? DL 0:00.02 [bufdaemon]
41 ?? DL 0:00.02 [vn1ru]
42 ?? DL 0:00.39 [syncer]
43 ?? DL 0:00.05 [softdepflush]
44 ?? DL 0:00.00 [netdaemon]
45 ?? DL 0:00.02 [vmuncachedaemon]
46 ?? DL 0:00.00 [if_pic_listen]
47 ?? DL 0:00.35 [vmkmemdaemon]
48 ?? DL 0:00.00 [cb_poll]
49 ?? DL 0:00.06 [if_pfe_listen]
50 ?? DL 0:00.00 [scs_housekeeping]
51 ?? IL 0:00.00 [kern_dump_proc]
52 ?? IL 0:00.00 [nfsiod 0]
53 ?? IL 0:00.00 [nfsiod 1]
54 ?? IL 0:00.00 [nfsiod 2]
55 ?? IL 0:00.00 [nfsiod 3]
56 ?? DL 0:00.37 [schedcpu]
57 ?? DL 0:00.56 [md0]
79 ?? DL 0:02.58 [md1]
100 ?? DL 0:00.03 [md2]
118 ?? DL 0:00.01 [md3]
139 ?? DL 0:00.95 [md4]
160 ?? DL 0:00.12 [md5]
181 ?? DL 0:00.00 [md6]
217 ?? DL 0:00.02 [md7]
227 ?? DL 0:00.05 [md8]
1341 ?? SL 0:01.35 [bcmTX]
1342 ?? SL 0:01.69 [bcmXGS3AsyncTX]
1343 ?? SL 0:41.57 [bcmLINK.0]
1345 ?? SL 0:33.97 [bcmLINK.1]
1350 ?? Is 0:00.01 /usr/sbin/cron
1502 ?? S 0:00.01 /sbin/watchdog -t-1
1503 ?? S 0:00.86 /usr/libexec/bslockd -mp -N
1504 ?? I 0:00.01 /usr/sbin/tnetd -N
1507 ?? S 0:01.32 /usr/sbin/alarmd -N
1508 ?? S 0:14.54 /usr/sbin/craftd -N
1509 ?? S 0:01.20 /usr/sbin/mgd -N
1512 ?? S 0:00.05 /usr/sbin/inetd -N
1513 ?? S 0:00.10 /usr/sbin/tnp.snptd -N
1517 ?? S 0:00.11 /usr/sbin/smartd -N
1525 ?? S 0:01.11 /usr/sbin/idpd -N

```

```

1526 ?? S      0:01.43 /usr/sbin/license-check -U -M -p 10 -i 10
1527 ?? I      0:00.01 /usr/libexec/getty Pc ttyv0
1616 ?? DL    0:00.30 [peer proxy]
1617 ?? DL    0:00.32 [peer proxy]
1618 ?? DL    0:00.34 [peer proxy]
1619 ?? DL    0:00.30 [peer proxy]
2391 ?? Is    0:00.01 telnetd
7331 ?? Ss    0:00.03 telnetd
9538 ?? DL    0:01.16 [jsr_kkcm]
9613 ?? DL    0:00.18 [peer proxy]
23781 ?? Ss   0:00.01 telnetd
23926 ?? Ss   0:00.03 mgd: (mgd) (user)/dev/tty2 (mgd)
36867 ?? S    0:03.14 /usr/sbin/rpd -N
36874 ?? S    0:00.08 /usr/sbin/lmpd
36876 ?? S    0:00.17 /usr/sbin/lacpd -N
36877 ?? S    0:00.15 /usr/sbin/bfd -N
36878 ?? S    0:05.05 /usr/sbin/ppmd -N
36907 ?? S    0:26.63 /usr/sbin/chassisd -N
37775 ?? S    0:00.01 /usr/sbin/bdbrepd -N
45727 ?? S    0:00.02 /usr/sbin/xntpd -j -N -g (ntpd)
45729 ?? S    0:00.40 /usr/sbin/l2ald -N
45730 ?? S<   0:00.13 /usr/sbin/apd -N
45731 ?? SN    0:00.10 /usr/sbin/sampled -N
45732 ?? S    0:00.03 /usr/sbin/ilmid -N
45733 ?? S    0:00.09 /usr/sbin/rmopd -N
45734 ?? S    0:00.31 /usr/sbin/cosd
45735 ?? I    0:00.00 /usr/sbin/rtsdpd -N
45736 ?? S    0:00.06 /usr/sbin/fsad -N
45737 ?? S    0:00.05 /usr/sbin/rdd -N
45738 ?? S    0:00.10 /usr/sbin/pppd -N
45739 ?? S    0:00.05 /usr/sbin/dfcd -N
45740 ?? S    0:00.08 /usr/sbin/lfmd -N
45741 ?? S    0:00.01 /usr/sbin/mpi1soamd -N
45742 ?? I    0:00.01 /usr/sbin/sendd -N
45743 ?? S    0:00.08 /usr/sbin/appidd -N
45744 ?? S    0:00.05 /usr/sbin/mspd -N
45745 ?? S    0:00.27 /usr/sbin/jdiameterd -N
45746 ?? S    0:00.10 /usr/sbin/pfed -N
45747 ?? S    0:00.19 /usr/sbin/lpdfd -N
45748 ?? S    0:00.64 /sbin/dcd -N
45750 ?? S    0:00.46 /usr/sbin/mib2d -N
45751 ?? S    0:00.16 /usr/sbin/dfwd -N
45752 ?? S    0:00.15 /usr/sbin/irsd -N
45764 ?? S    0:20.60 /usr/sbin/snmpd -N
56481 ?? Ss   0:00.02 telnetd
56548 ?? Rs   0:00.19 mgd: (mgd) (user)/dev/tty0 (mgd)
56577 ?? Ss   0:00.00 mgd: (mgd) (root) (mgd)
56578 ?? R    0:00.00 /bin/ps -ax
1142 d0- S    0:00.01 /usr/sbin/usbd -N
1160 d0- S    0:29.71 /usr/sbin/eventd -N -r -s -A
6527 d0 Is+   0:00.00 /usr/libexec/getty std.9600 ttyd0
56482 p0 Is    0:00.00 login [pam] (login)
56483 p0 S      0:00.01 -csh (csh)
56547 p0 S+    0:00.02 cli
2392 p1 Is    0:00.00 login [pam] (login)
2393 p1 I      0:00.00 -csh (csh)
2394 p1 I      0:00.00 su -
2395 p1 I+     0:00.01 -su (csh)
23782 p2 Is    0:00.00 login [pam] (login)
23881 p2 I      0:00.00 -csh (csh)
23925 p2 S+    0:00.03 cli

```

```

7332 p3 Is 0:00.00 login [pam] (login)
7333 p3 I 0:00.00 -csh (csh)
23780 p3 S+ 0:00.02 telnet aj

```

show system processes lcc wide (TX Matrix Plus Routing Matrix)

```

user@host> show system processes lcc 2 wide
lcc2-re0:

```

```

-----
PID  TT  STAT  TIME PROVIDER COMMAND
0   ??  WLS   0:00.00 (null) [swapper]
1   ??  ILs   0:00.19 /packages/mnt/jbase/sbin/init --
2   ??  DL    0:00.02 [g_event]
3   ??  DL    0:00.19 [g_up]
4   ??  DL    0:00.13 [g_down]
5   ??  DL    0:00.00 [thread taskq]
6   ??  DL    0:00.00 [kqueue taskq]
7   ??  DL    0:00.00 [pagedaemon]
8   ??  DL    0:00.00 [vmdaemon]
9   ??  DL    0:01.77 [pagezero]
10  ??  DL    0:00.00 [ktrace]
11  ??  RL    20:33.81 [idle]
12  ??  WL    0:00.38 [swi2: net]
13  ??  WL    0:01.43 [swi7: clock sio]
14  ??  WL    0:00.00 [swi6: vm]
15  ??  DL    0:00.14 [yarrow]
16  ??  WL    0:00.00 [swi9: +]
17  ??  WL    0:00.00 [swi8: +]
18  ??  WL    0:00.00 [swi5: cambio]
19  ??  WL    0:00.00 [swi9: task queue]
20  ??  WL    0:03.18 [irq10: bcm0 uhci1*]
21  ??  WL    0:00.03 [irq11: cb0 uhci0+*]
22  ??  DL    0:00.00 [usb0]
23  ??  DL    0:00.00 [usbtask]
24  ??  DL    0:00.00 [usb1]
25  ??  DL    0:00.06 [usb2]
26  ??  DL    0:00.00 [usb3]
27  ??  DL    0:00.00 [usb4]
28  ??  DL    0:00.00 [usb5]
29  ??  DL    0:00.05 [usb6]
30  ??  DL    0:00.00 [usb7]
31  ??  WL    0:00.00 [irq14: ata0]
32  ??  WL    0:00.00 [irq15: ata1]
33  ??  WL    0:00.00 [irq1: atkbd0]
34  ??  WL    0:00.00 [swi0: sio]
35  ??  WL    0:00.00 [swi3: ip6opt ipopt]
36  ??  WL    0:00.00 [swi4: ip6mismatch+]
37  ??  WL    0:00.00 [swi1: ipfwd]
38  ??  DL    0:00.00 [bufdaemon]
39  ??  DL    0:00.00 [vn1ru]
40  ??  DL    0:00.02 [syncer]
41  ??  DL    0:00.01 [softdepflush]
42  ??  DL    0:00.00 [netdaemon]
43  ??  DL    0:00.00 [vmuncachedaemon]
44  ??  DL    0:00.00 [if_pic_listen]
45  ??  DL    0:00.03 [vmkmemdaemon]
46  ??  DL    0:00.01 [cb_poll]
47  ??  DL    0:00.00 [if_pfe_listen]
48  ??  DL    0:00.00 [scs_housekeeping]
49  ??  IL    0:00.00 [kern_dump_proc]
50  ??  IL    0:00.00 [nfsiod 0]

```

```

51 ?? IL 0:00.00 [nfsiod 1]
52 ?? IL 0:00.00 [nfsiod 2]
53 ?? IL 0:00.00 [nfsiod 3]
54 ?? DL 0:00.02 [schedcpu]
55 ?? DL 0:00.75 [md0]
77 ?? DL 0:03.84 [md1]
98 ?? DL 0:00.59 [md2]
116 ?? DL 0:00.02 [md3]
137 ?? DL 0:00.72 [md4]
158 ?? DL 0:00.15 [md5]
179 ?? DL 0:00.00 [md6]
215 ?? DL 0:00.03 [md7]
225 ?? DL 0:00.03 [md8]
1052 ?? DL 0:00.00 [jsr_kkcm]
1337 ?? SL 0:00.11 [bcmTX]
1338 ?? SL 0:00.12 [bcmXGS3AsyncTX]
1339 ?? SL 0:03.82 [bcmLINK.0]
1344 ?? Is 0:00.00 /usr/sbin/cron
1496 ?? I 0:00.00 /sbin/watchdog -t-1
1497 ?? S 0:00.06 /usr/libexec/bslockd -mp -N
1498 ?? I 0:00.01 /usr/sbin/tnetd -N
1500 ?? S 0:09.93 /usr/sbin/chassisd -N
1501 ?? S 0:00.05 /usr/sbin/alarmd -N
1502 ?? I 0:00.39 /usr/sbin/craftd -N
1503 ?? S 0:00.09 /usr/sbin/mgd -N
1506 ?? I 0:00.05 /usr/sbin/inetd -N
1507 ?? I 0:00.00 /usr/sbin/tnp.sntpd -N
1508 ?? I 0:00.00 /usr/sbin/tnp.sntpc -N
1510 ?? S 0:00.01 /usr/sbin/smartd -N
1514 ?? I 0:00.07 /usr/sbin/jcsd -N
1515 ?? S 0:00.17 /usr/sbin/idpd -N
1516 ?? I 0:00.00 /usr/libexec/getty Pc ttyv0
2591 ?? DL 0:00.01 [peer proxy]
2592 ?? DL 0:00.01 [peer proxy]
2593 ?? DL 0:00.01 [peer proxy]
2597 ?? DL 0:00.01 [peer proxy]
3192 ?? S 0:00.02 /usr/sbin/irsd -N
3193 ?? S 0:00.05 /usr/sbin/snmpd -N
3194 ?? S 0:00.04 /sbin/dcd -N
3195 ?? I 0:00.01 /usr/sbin/pfed -N
3196 ?? S 0:00.02 /usr/sbin/mib2d -N
3197 ?? I 0:00.03 /usr/sbin/dfwd -N
3198 ?? S 0:00.15 /usr/sbin/ksyncd -N
3559 ?? Ss 0:00.00 mgd: (mgd) (root) (mgd)
3560 ?? R 0:00.00 /bin/ps -ax -jppw
1138 d0- S 0:00.00 /usr/sbin/usbd -N
1156 d0- S 0:00.50 /usr/sbin/eventd -N -r -s -A
1517 d0 Is+ 0:00.00 /usr/libexec/getty std.9600 ttyd0

```

show system processes (QFX Series and OCX Series)

```

user@switch> show system processes
PID TT STAT TIME COMMAND
0 ?? Wls -2341043:-31.01 [swapper]
1 ?? SLs 0:01.34 /packages/mnt/jbase/sbin/init --
2 ?? DL 2:48.31 [g_event]
3 ?? DL 1:47.44 [g_up]
4 ?? DL 1:37.82 [g_down]
5 ?? DL 0:00.00 [kdm_tcp_poller]
6 ?? DL 0:00.00 [thread taskq]
7 ?? DL 0:04.86 [kqueue taskq]

```

```

 9 ?? DL      0:03.94 [pagedaemon]
10 ?? DL      0:00.00 [ktrace]
11 ?? RL      0:00.00 [idle: cpu31]
12 ?? RL      0:00.00 [idle: cpu30]
13 ?? RL      0:00.00 [idle: cpu29]
14 ?? RL      0:00.00 [idle: cpu28]
15 ?? RL      0:00.00 [idle: cpu27]
16 ?? RL      0:00.00 [idle: cpu26]
17 ?? RL      0:00.00 [idle: cpu25]
18 ?? RL      0:00.00 [idle: cpu24]
19 ?? RL      0:00.00 [idle: cpu23]
20 ?? RL      0:00.00 [idle: cpu22]
21 ?? RL      0:00.00 [idle: cpu21]
22 ?? RL      0:00.00 [idle: cpu20]
23 ?? RL      0:00.00 [idle: cpu19]
24 ?? RL      0:00.00 [idle: cpu18]
25 ?? RL      0:00.00 [idle: cpu17]
26 ?? RL      0:00.00 [idle: cpu16]
27 ?? RL      0:00.00 [idle: cpu15]
28 ?? RL      0:00.00 [idle: cpu14]
29 ?? RL      0:00.00 [idle: cpu13]
30 ?? RL      0:00.00 [idle: cpu12]
31 ?? RL      0:00.00 [idle: cpu11]
32 ?? RL      0:00.00 [idle: cpu10]
33 ?? RL      0:00.00 [idle: cpu9]
34 ?? RL      18184:07.25 [idle: cpu8]
35 ?? RL      0:00.00 [idle: cpu7]
36 ?? RL      17862:11.31 [idle: cpu6]
37 ?? RL      19343:45.16 [idle: cpu5]
38 ?? RL      5192:38.30 [idle: cpu4]
39 ?? RL      0:00.00 [idle: cpu3]
40 ?? RL      19278:02.24 [idle: cpu2]
41 ?? RL      19291:00.72 [idle: cpu1]
42 ?? RL      18910:31.21 [idle: cpu0]
43 ?? WL      19:03.74 [swi2: net]
44 ?? WL      261:43.82 [swi7: clock sio]
45 ?? WL      0:00.00 [swi6: vm]
46 ?? DL      2:18.57 [yarrow]
47 ?? WL      0:00.00 [swi9: +]
48 ?? WL      0:00.00 [swi8: +]
49 ?? WL      0:12.36 [swi5: cambio]
50 ?? WL      0:00.00 [swi9: task queue]
51 ?? WL      0:00.00 [swi0: sio]
52 ?? WL      0:32.40 [irq39: ehci0]
53 ?? DL      0:00.21 [usb0]
54 ?? DL      0:00.00 [usbtask]
55 ?? WL      0:00.00 [irq22: xlr_lbus0]
56 ?? WL      0:00.00 [irq38: xlr_lbus0]
57 ?? WL      0:00.00 [swi3: ip6opt ipopt]
58 ?? WL      0:00.00 [swi4: ip6mismatch+]
59 ?? WL      0:00.00 [swi1: ipfwd]
60 ?? DL      0:18.65 [pagezero]
61 ?? DL      0:18.59 [bufdaemon]
62 ?? DL      1:10.44 [vnlr_u_mem]
63 ?? DL      1:51.66 [syncer]
64 ?? DL      0:20.22 [vnlr_u]
65 ?? DL      0:40.48 [softdepflush]
66 ?? DL      0:00.00 [netdaemon]
67 ?? DL      20:47.67 [vmkmemdaemon]
68 ?? DL      0:00.00 [if_pfe_listen]
69 ?? SL      0:02.80 [kdm_checkkcore]

```

```

70 ?? SL      0:03.34 [kdm_savekcore]
71 ?? SL      0:04.31 [kdm_livekcore]
72 ?? SL      0:06.14 [kdm_logger]
73 ?? SL      0:04.31 [kdm_kdb]
74 ?? SL      0:00.02 [devrt_kernel_thread]
75 ?? DL      0:21.54 [vmuncachedaemon]
76 ?? DL      0:00.00 [if_pic_listen0]
77 ?? SL      0:00.00 [nfsiod 0]
78 ?? SL      0:00.00 [nfsiod 1]
79 ?? SL      0:00.00 [nfsiod 2]
80 ?? SL      0:00.00 [nfsiod 3]
81 ?? WL      5:59.98 [irq13: +]
82 ?? RL      105:06.81 [pkt_sender: cpu0]
83 ?? DL      0:03.62 [md0]
95 ?? DL      0:37.04 [md1]
115 ?? DL     0:06.01 [md2]
135 ?? DL     0:00.75 [md3]
155 ?? DL     0:21.17 [md4]
175 ?? DL     0:01.90 [md5]
195 ?? DL     0:06.26 [md6]
231 ?? DL     0:00.01 [md7]
755 ?? Ss     0:04.17 /usr/sbin/cron
847 ?? S      0:00.10 /usr/sbin/tinetd -N
849 ?? S      0:06.82 /usr/sbin/mgd -N
850 ?? S      0:00.32 /usr/sbin/inetd -N
852 ?? S      1:05.34 /usr/sbin/dhcpd -N
853 ?? S      0:00.18 /usr/sbin/inetd -p /var/run/inetd_4.pid -N -JU __juni
855 ?? L      1181:02.21 /usr/sbin/dc-pfe -N (pafxpc)
857 ?? S      17:55.86 /usr/sbin/vccpd -N
896 ?? S      93:43.45 /usr/sbin/chassism -N
953 ?? S      0:02.89 /sbin/watchdog -t-1
954 ?? S      3:34.00 /sbin/dcd -N
955 ?? S      10:30.13 /usr/sbin/chassisd -N
956 ?? DL     0:00.21 [peer proxy]
957 ?? S      4:07.43 /usr/sbin/alarmd -N
958 ?? S      0:31.69 /usr/sbin/craftd -N
959 ?? S      0:55.16 /usr/sbin/mib2d -N
960 ?? S      3:40.64 /usr/sbin/rpd -N
961 ?? S      0:00.03 /usr/sbin/tnp.snmpd -N
962 ?? S      0:51.94 /usr/sbin/pfed -N
963 ?? S      0:47.31 /usr/sbin/rmopd -N
964 ?? S      0:33.65 /usr/sbin/cosd
965 ?? S      1:48.41 /usr/sbin/ppmd -N
966 ?? S      0:07.18 /usr/sbin/dfwd -N
967 ?? S      1:02.56 /usr/sbin/bfdd -N
968 ?? S      0:00.63 /usr/sbin/rdd -N
969 ?? S      0:40.61 /usr/sbin/dfcd -N
971 ?? S      0:07.81 /usr/sbin/bdbrepd -N
972 ?? S      0:00.28 /usr/sbin/sendd -N
973 ?? S      1:37.69 /usr/sbin/xntpd -j -N -g -JU __example_process4__ (nt
974 ?? S      5:56.28 /usr/sbin/snmpd -N -JU __example_process4__
975 ?? S      16:46.82 /usr/sbin/jdiameterd -N
976 ?? S      2:34.13 /usr/sbin/eswd -N
977 ?? S      1:03.05 /usr/sbin/sflowd -N
978 ?? S      0:22.30 /usr/sbin/fcd -N
979 ?? S      1:07.01 /usr/sbin/vccpdf -N
982 ?? S      0:25.25 /usr/sbin/mcsnoopd -N
983 ?? S      3:45.68 /usr/sbin/rpdf -N
1043 ?? S      0:37.87 /usr/sbin/lacpd -N
1048 ?? DL     0:01.29 [peer proxy]
1111 ?? WL     0:00.00 [swi2: FMNITHRD+]

```

```
1112 ?? DL 0:00.03 [peer proxy]
12816 ?? S 15:35.32 /usr/sbin/sfid -N
30893 ?? Ss 0:00.65 sshd: tlewis@tty0 (sshd)
30897 ?? Ss 0:00.15 mgd: (mgd) (tlewis)/dev/tty0 (mgd)
30905 ?? Ss 0:00.64 sshd: tlewis@tty1 (sshd)
30909 ?? Ss 0:00.15 mgd: (mgd) (tlewis)/dev/tty1 (mgd)
30910 ?? Ss 0:01.26 sshd: tcheng@tty2 (sshd)
30914 ?? Ss 0:00.80 mgd: (mgd) (tcheng)/dev/tty2 (mgd)
30937 ?? R 0:00.03 /bin/ps -ax
661 d0- S 0:21.24 /usr/sbin/eventd -N -r -s -A
860 d0 Ss+ 0:00.07 /usr/libexec/getty std.9600 ttyd0
30896 p0 Ss+ 0:00.55 -cli (cli)
30908 p1 Ss+ 0:00.50 -cli (cli)
30913 p2 Ss+ 0:00.85 -cli (cli)
```


show system reboot

List of Syntax	Syntax on page 1155 Syntax (EX Series Switches) on page 1155 Syntax (TX Matrix Router) on page 1155 Syntax (TX Matrix Plus Router) on page 1155 Syntax (MX Series Router) on page 1155 Syntax (QFX Series and OCX Series) on page 1155
Syntax	show system reboot <both-routing-engines>
Syntax (EX Series Switches)	show system reboot <all-members> <both-routing-engines> <local> <member <i>member-id</i> >
Syntax (TX Matrix Router)	show system reboot <all-chassis all-lcc lcc <i>number</i> scc> <both-routing-engines>
Syntax (TX Matrix Plus Router)	show system reboot <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i> > <both-routing-engines>
Syntax (MX Series Router)	show system reboot <all-members> <both-routing-engines> <local> <member <i>member-id</i> >
Syntax (QFX Series and OCX Series)	show system reboot <both-routing-engines> <infrastructure <i>name</i> > <interconnect-device <i>name</i> > <node-device <i>name</i> >
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display pending system reboots or halts.
Options	none —Display pending reboots or halts on the active Routing Engine. all-chassis —(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display halt or reboot request information for all the T640 routers in the chassis that are connected to the TX Matrix router. On a TX Matrix router, display

halt or reboot request information for all the T1600 or T4000 routers in the chassis that are connected to the TX Matrix Plus router.

all-members—(EX4200 switches and MX Series routers only) (Optional) Display halt or reboot request information for all members of the Virtual Chassis configuration.

all-lcc—(TX Matrix routers and TX Matrix Plus router only) (Optional) On a TX Matrix router, display system halt or reboot request information for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display halt or reboot request information for all connected T1600 or T4000 LCCs.

both-routing-engines—(Systems with multiple Routing Engines) (Optional) Display halt or reboot request information on both Routing Engines.

infrastructure *name*—(QFabric systems only) (Optional) Display reboot request information on the fabric manager Routing Engines and fabric control Routing Engines.

interconnect-device *name*—(QFabric systems only) (Optional) Display reboot request information on the Interconnect device.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display halt or reboot request information for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display halt or reboot request information for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Display halt or reboot request information for the local Virtual Chassis member.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Display halt or reboot request information for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

node-group *name*—(QFabric systems only) (Optional) Display reboot request information on the Node group.

scc—(TX Matrix router only) (Optional) Display halt or reboot request information for the TX Matrix router (or switch-card chassis).

sfc—(TX Matrix Plus router only) (Optional) Display halt or reboot request information for the TX Matrix Plus router.

Additional Information By default, when you issue the **show system reboot** command on a TX Matrix or TX Matrix Plus master Routing Engine, the command is broadcast to all the T640 (in a routing matrix based on the TX Matrix router) or T1600 (in a routing matrix based on the TX Matrix Plus router) master Routing Engines connected to it. Likewise, if you issue the same command on the TX Matrix or TX Matrix Plus backup Routing Engine, the command is broadcast to all the T640 (in a routing matrix based on the TX Matrix router) or T1600 (in a routing matrix based on the TX Matrix Plus router) backup Routing Engines that are connected to it.

Required Privilege Level maintenance

Related Documentation

- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

List of Sample Output

- [show system reboot on page 1157](#)
- [show system reboot all-lcc \(TX Matrix Router\) on page 1157](#)
- [show system reboot sfc \(TX Matrix Plus Router\) on page 1157](#)
- [show system reboot \(QFX3500 Switch\) on page 1157](#)

Sample Output

show system reboot

```
user@host> show system reboot
reboot requested by root at Wed Feb 10 17:40:46 1999
[process id 17885]
```

show system reboot all-lcc (TX Matrix Router)

```
user@host> show system reboot all-lcc
lcc0-re0:
```

```
-----
No shutdown/reboot scheduled.
```

```
lcc2-re0:
```

```
-----
No shutdown/reboot scheduled.
```

show system reboot sfc (TX Matrix Plus Router)

```
user@host> show system sfc 0
No shutdown/reboot scheduled.
```

show system reboot (QFX3500 Switch)

```
user@switch> show system reboot
No shutdown/reboot scheduled.
```

show system resource-cleanup processes

Syntax	show system resource-cleanup processes <detail> <pid <i>number</i> > <process-name <i>name</i> >
Release Information	Command introduced in Junos OS Release 9.3. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the list of processes that have been registered for resource cleanup services.
Options	<p>detail—(Optional) Display the list of processes that have been registered for resource cleanup services, along with the resources that have been requested for cleanup.</p> <p>pid <i>number</i>—(Optional) Display a process that has been registered for resource cleanup services by specifying the Process Identifier number.</p> <p>process-name <i>name</i>—(Optional) Display a process that has been registered for resource cleanup services by name of the process.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> <i>resource-cleanup</i> <i>traceoptions (Resource Cleanup)</i>
List of Sample Output	show system resource-cleanup processes on page 1158 show system resource-cleanup processes detail on page 1159
Output Fields	For a description of the output fields, see Table 62 on page 1158 . Output fields are listed in the approximate order in which they appear.

Table 62: show system resource-cleanup processes Output Fields

Field Name	Field Description
PID	Process ID, a number that identifies a process.
Process name	String that identifies the process.
Resources to clean	Resources that have been registered to be cleaned up.

Sample Output

show system resource-cleanup processes

```

user@host> show system resource-cleanup processes
PID      Process name      Resources to clean
420      jnx-exampld      GENCFG, SYSV shared memory

```

show system resource-cleanup processes detail

```
user@host> show system resource-cleanup processes detail
PID      Process name      Resources to clean
420      jnx-exampld        GENCFG blob major ID 0x8000, minor ID 0x0000
          SYSV shared memory ID 65536, key 1108955839
          SYSV shared memory ID 65537, key 1108955837
```

show system services service-deployment

Syntax	show system services service-deployment
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display information about a Session and Resource Control (SRC) client.
Options	This command has no options.
Required Privilege Level	system view
List of Sample Output	show system services service-deployment on page 1160
Output Fields	Table 63 on page 1160 lists the output fields for the show system services service-deployment command. Output fields are listed in the approximate order in which they appear.

Table 63: show system services service-deployment Output Fields

Field Name	Field Description
PDT Keepalive settings	Configured PDT keepalive interval, in seconds.
Keepalives sent	Number of keepalives sent.
Notifications sent	Number of notifications sent.
Last update from peer	Time at which the last update from a peer was received.

Sample Output

show system services service-deployment

```
user@host> show system services service-deployment
Connected to 192.4.4.4 port 10288 since 2004-05-03 11:04:34 PDT Keepalive settings:
Interval 15 seconds Keepalives sent: 750 Notifications sent: 0 Last update from
peer: 00:00:06 ago
```

show system statistics

List of Syntax	Syntax on page 1161 Syntax (EX Series Switches) on page 1161 Syntax (TX Matrix Router) on page 1161 Syntax (TX Matrix Plus Router) on page 1161 Syntax (MX Series Router) on page 1161 Syntax (QFX Series) on page 1161
Syntax	show system statistics
Syntax (EX Series Switches)	show system statistics <all-members> <local> <member <i>member-id</i> >
Syntax (TX Matrix Router)	show system statistics <all-chassis all-lcc lcc <i>number</i> scc>
Syntax (TX Matrix Plus Router)	show system statistics <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i> >
Syntax (MX Series Router)	show system statistics <all-members> <local> <member <i>member-id</i> >
Syntax (QFX Series)	show system statistics
Release Information	Command introduced before JUNOS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc option introduced for the TX Matrix Plus router in JUNOS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display system-wide protocol-related statistics.
Options	none —Display system statistics for all the following protocols: <ul style="list-style-type: none"> • arp—Address Resolution Protocol • bridge—IEEE 802.1 Bridging • clns—Connectionless Network Service • esis—End System-to-Intermediate System • ethoamcfm—Ethernet OAM protocol for connectivity fault management • ethoamlfm—Ethernet OAM protocol for link fault management • icmp—Internet Control Message Protocol • icmp6—Internet Control Message Protocol version 6

- **igmp**—Internet Group Management Protocol
- **ip**—Internet Protocol version 4
- **ip6**—Internet Protocol version 6
- **mpls**—Multiprotocol Label Switching
- **rdp**—Reliable Datagram Protocol
- **tcp**—Transmission Control Protocol
- **tnp**—Trivial Network Protocol
- **ttp**—TNP Tunneling Protocol
- **tudp**—Trivial User Datagram Protocol
- **udp**—User Datagram Protocol
- **vpls**—Virtual Private LAN Service

all-chassis—(TX Matrix and TX Matrix Plus routers only) (Optional) Display system statistics for a protocol for all the routers in the chassis.

all-lcc—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system statistics for a protocol for all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus router, display system statistics for a protocol for all routers (line-card chassis) connected to the TX Matrix Plus router

all-members—(EX4200 switches and MX Series routers only) (Optional) Display system statistics for a protocol for all members of the Virtual Chassis configuration.

lcc number—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system statistics for a protocol for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display system statistics for a protocol for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Display system statistics for a protocol for the local Virtual Chassis member.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Display system statistics for a protocol for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace ***member-id*** with a value from 0 through 9. For an MX Series Virtual Chassis, replace ***member-id*** with a value of 0 or 1.

scc—(TX Matrix routers only) (Optional) Display system statistics for a protocol for the TX Matrix router (or switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Display system statistics for a protocol for the TX Matrix Plus router (or switch-fabric chassis). Replace ***number*** with 0.

Additional Information By default, when you issue the **show system statistics** command on a TX Matrix or TX Matrix Plus master Routing Engine, the command is broadcast to all the T640 (in a routing matrix based on the TX Matrix router) or T1600 (in a routing matrix based on the TX Matrix Plus router) master Routing Engines connected to it. Likewise, if you issue the same command on the TX Matrix or TX Matrix Plus backup Routing Engine, the command is broadcast to all the T640 (in a routing matrix based on the TX Matrix router) or T1600 (in a routing matrix based on the TX Matrix Plus router) backup Routing Engines that are connected to it.

Required Privilege Level view

List of Sample Output [show system statistics on page 1163](#)
[show system statistics \(EX Series Switches\) on page 1170](#)
[show system statistics \(TX Matrix Router\) on page 1180](#)
[show system statistics \(QFX Series\) on page 1186](#)

Sample Output

show system statistics

```
user@host> show system statistics
ip:
    3682087 total packets received
    0 bad header checksums
    0 with size smaller than minimum
    0 with data size < data length
    0 with header length < data size
    0 with data length < header length
    0 with incorrect version number
    0 packets destined to dead next hop
    0 fragments received
    0 fragments dropped (dup or out of space)
    0 fragments dropped (queue overflow)
    0 fragments dropped after timeout
    0 fragments dropped due to over limit
    0 packets reassembled ok
    3664774 packets for this host
    17316 packets for unknown/unsupported protocol
    0 packets forwarded
    0 packets not forwardable
    0 redirects sent
    6528 packets sent from this host
```

```

0 packets sent with fabricated ip header
0 output packets dropped due to no bufs
0 output packets discarded due to no route
0 output datagrams fragmented
0 fragments created
0 datagrams that can't be fragmented
0 packets with bad options
1123 packets with options handled without error
0 strict source and record route options
0 loose source and record route options
0 record route options
0 timestamp options
0 timestamp and address options
0 timestamp and prespecified address options
0 option packets dropped due to rate limit
1123 router alert options
0 multicast packets dropped (no iflist)
0 packets dropped (src and int don't match)
icmp:
0 drops due to rate limit
0 calls to icmp_error
0 errors not generated because old message was icmp
Output histogram:
    echo reply: 75
0 messages with bad code fields
0 messages less than the minimum length
0 messages with bad checksum
0 messages with bad source address
0 messages with bad length
0 echo drops with broadcast or multicast destination address
0 timestamp drops with broadcast or multicast destination address
Input histogram:
    echo: 75
    router advertisement: 130
75 message responses generated
tcp:
3844 packets sent
    3618 data packets (1055596 bytes)
    0 data packets (0 bytes) retransmitted
    0 resends initiated by MTU discovery
    205 ack-only packets (148 packets delayed)
    0 URG only packets
    0 window probe packets
    0 window update packets
    1079 control packets
5815 packets received
    3377 acks (for 1055657 bytes)
    24 duplicate acks
    0 acks for unsent data
    2655 packets (15004 bytes) received in-sequence
    1 completely duplicate packet (0 bytes)
    0 old duplicate packets
    0 packets with some dup. data (0 bytes duped)
    0 out-of-order packets (0 bytes)
    0 packets (0 bytes) of data after window
    0 window probes
    7 window update packets
    0 packets received after close
    0 discarded for bad checksums
    0 discarded for bad header offset fields
    0 discarded because packet too short

```

```

1 connection request
32 connection accepts
0 bad connection attempts
0 listen queue overflows
33 connections established (including accepts)
30 connections closed (including 0 drops)
    27 connections updated cached RTT on close
    27 connections updated cached RTT variance on close
    0 connections updated cached ssthresh on close
0 embryonic connections dropped
3374 segments updated rtt (of 3220 attempts)
0 retransmit timeouts
    0 connections dropped by rexmit timeout
0 persist timeouts
    0 connections dropped by persist timeout
344 keepalive timeouts
    0 keepalive probes sent
    0 connections dropped by keepalive
1096 correct ACK header predictions
1314 correct data packet header predictions
32 syncache entries added
    0 retransmitted
    0 dupsyn
    0 dropped
    32 completed
    0 bucket overflow
    0 cache overflow
    0 reset
    0 stale
    0 aborted
    0 badack
    0 unreach
    0 zone failures
0 cookies sent
0 cookies received
0 ACKs sent in response to in-window but not exact RSTs
0 ACKs sent in response to in-window SYNs on established connections
0 rcv packets dropped by TCP due to bad address
0 out-of-sequence segment drops due to insufficient memory
1058 RST packets
0 ICMP packets ignored by TCP
0 send packets dropped by TCP due to auth errors
0 rcv packets dropped by TCP due to auth errors

udp:
3658884 datagrams received
0 with incomplete header
0 with bad data length field
0 with bad checksum
3657342 dropped due to no socket
3657342 broadcast/multicast datagrams dropped due to no socket
0 dropped due to full socket buffers
0 not for hashed pcb
4291311496 delivered
1551 datagrams output

ipsec:
0 inbound packets processed successfully
0 inbound packets violated process security policy
0 inbound packets with no SA available
0 invalid inbound packets
0 inbound packets failed due to insufficient memory
0 inbound packets failed getting SPI

```

```

0 inbound packets failed on AH replay check
0 inbound packets failed on ESP replay check
0 inbound AH packets considered authentic
0 inbound AH packets failed on authentication
0 inbound ESP packets considered authentic
0 inbound ESP packets failed on authentication
0 outbound packets processed successfully
0 outbound packets violated process security policy
0 outbound packets with no SA available
0 invalid outbound packets
0 outbound packets failed due to insufficient memory
0 outbound packets with no route

igmp:
17186 messages received
0 messages received with too few bytes
0 messages received with bad checksum
0 membership queries received
0 membership queries received with invalid field(s)
0 membership reports received
0 membership reports received with invalid field(s)
0 membership reports received for groups to which we belong
0 membership reports sent

arp:
44181302 datagrams received
2 ARP requests received
2028 ARP replies received
3156 resolution requests received
0 unrestricted proxy requests
0 received proxy requests
0 proxy requests not proxied
0 with bogus interface
787 with incorrect length
712 for non-IP protocol
0 with unsupported op code
0 with bad protocol address length
0 with bad hardware address length
0 with multicast source address
7611 with multicast target address
0 with my own hardware address
14241699 for an address not on the interface
0 with a broadcast source address
0 with source address duplicate to mine
29929250 which were not for me
0 packets discarded waiting for resolution
6 packets sent after waiting for resolution
17812 ARP requests sent
2 ARP replies sent
0 requests for memory denied
0 requests dropped on entry
0 requests dropped during retry

ip6:
0 total packets received
0 with size smaller than minimum
0 with data size < data length
0 with bad options
0 with incorrect version number
0 fragments received
0 fragments dropped (dup or out of space)
0 fragments dropped after timeout
0 fragments that exceeded limit
0 packets reassembled ok

```

```

0 packets for this host
0 packets forwarded
0 packets not forwardable
0 redirects sent
0 packets sent from this host
0 packets sent with fabricated ip header
0 output packets dropped due to no bufs, etc.
0 output packets discarded due to no route
0 output datagrams fragmented
0 fragments created
0 datagrams that can't be fragmented
0 packets that violated scope rules
0 multicast packets which we don't join
Mbuf statistics:
0 packets whose headers are not continuous
0 tunneling packets that can't find gif
0 packets discarded due to too many headers
0 failures of source address selection
0 forward cache hit
0 forward cache miss
0 packets destined to dead next hop
0 option packets dropped due to rate limit
0 packets dropped (src and int don't match)
0 packets dropped due to bad protocol

icmp6:
0 calls to icmp_error
0 errors not generated because old message was icmp error or so
0 errors not generated because rate limitation
0 messages with bad code fields
0 messages < minimum length
0 bad checksums
0 messages with bad length
Histogram of error messages to be generated:
    0 no route
    0 administratively prohibited
    0 beyond scope
    0 address unreachable
    0 port unreachable
    0 packet too big
    0 time exceed transit
    0 time exceed reassembly
    0 erroneous header field
    0 unrecognized next header
    0 unrecognized option
    0 redirect
    0 unknown
0 message responses generated
0 messages with too many ND options

ipsec6:
0 inbound packets processed successfully
0 inbound packets violated process security policy
0 inbound packets with no SA available
0 invalid inbound packets
0 inbound packets failed due to insufficient memory
0 inbound packets failed getting SPI
0 inbound packets failed on AH replay check
0 inbound packets failed on ESP replay check
0 inbound AH packets considered authentic
0 inbound AH packets failed on authentication
0 inbound ESP packets considered authentic
0 inbound ESP packets failed on authentication

```

```
0 outbound packets processed successfully
0 outbound packets violated process security policy
0 outbound packets with no SA available
0 invalid outbound packets
0 outbound packets failed due to insufficient memory
0 outbound packets with no route

c1nl:
0 total packets received
0 packets delivered
0 too small
0 bad header length
0 bad checksum
0 bad version
0 unknown or unsupported protocol
0 bogus sdl size
0 no free memory in socket buffer
0 send packets discarded
0 sbappend failure
0 mcopy failure
0 address fields were not reasonable
0 segment information forgotten
0 forwarded packets
0 total packets sent
0 output packets discarded
0 non-forwarded packets
0 packets fragmented
0 fragments sent
0 fragments discarded
0 fragments timed out
0 fragmentation prohibited
0 packets reconstructed
0 packets destined to dead nexthop
0 packets discarded due to no route
0 Error pdu rate drops
0 ER pdu generation failure

esis:
0 total pkts received
0 total packets consumed by protocol
0 pdus received with bad checksum
0 pdus received with bad version number
0 pdus received with bad type field
0 short pdus received
0 bogus sdl size
0 bad header length
0 unknown or unsupported protocol
0 no free memory in socket buffer
0 send packets discarded
0 sbappend failure
0 mcopy failure
0 ISO family not configured

tnp:
146776365 unicast packets received
0 broadcast packets received
0 fragmented packets received
0 hello packets dropped
0 fragments dropped
0 fragment reassembly queue flushes
0 hello packets received
0 control packets received
49681642 rdp packets received
337175 udp packets received
```

```

96757548 tunnel packets received
0 input packets discarded with no protocol
98397591 unicast packets sent
0 broadcast packets sent
0 fragmented packets sent
0 hello packets dropped
0 fragments dropped
0 hello packets sent
0 control packets sent
49681642 rdp packets sent
337175 udp packets sent
48378774 tunnel packets sent
0 packets sent with unknown protocol

rdp:
49681642 input packets
0 discards for bad checksum
0 discards bad sequence number
0 refused connections
2031964 acks received
0 dropped due to full socket buffers
49692 retransmits
49681642 output packets
24815968 acks sent
28 connects
0 closes
22783990 keepalives received
22783990 keepalives sent

tudp:
337175 datagrams received
0 with incomplete header
0 with bad data length field
0 with bad checksum
0 dropped due to no socket
0 broadcast/multicast datagrams dropped due to no socket
0 dropped due to full socket buffers
337175 delivered
337175 datagrams output

ttp:
398749 packets sent
0 packets sent while unconnected
0 packets sent while interface down
0 packets sent couldn't get buffer
0 packets sent couldn't find neighbor
44696687 L2 packets received
0 unknown L3 packets received
3682087 IPv4 L3 packets received
0 MPLS L3 packets received
0 MPLS->IPv4 L3 packets received
0 IPv4->MPLS L3 packets received
0 IPv6 L3 packets received
0 ARP L3 packets received
0 CLNP L3 packets received
0 TNP L3 packets received
0 NULL L3 packets received
0 cyclotron cycle L3 packets received
0 cyclotron send L3 packets received
0 packets received while unconnected
0 packets received from unknown ifl
0 input packets couldn't get buffer
0 input packets with bad type
0 input packets with discard type

```

```
0 Input packets with too many tlvs
0 Input packets with bad tlv header
70633 Input packets with bad tlv type
68877 Input packets dropped based on tlv result
0 input packets for which rt lookup is bypassed

mpls:
0 total mpls packets received
0 packets forwarded
0 packets dropped
0 with header too small
0 after tagging, can't fit link MTU
0 with IPv4 explicit NULL tag
0 with IPv4 explicit NULL cksum errors
0 with router alert tag
0 lsp ping packets (ttl-expired/router alert)
0 with ttl expired
0 with tag encoding error
0 packets discarded, no route

vpls:
0 total packets received
0 with size smaller than minimum
0 with incorrect version number
0 packets for this host
0 packets with no logical interface
0 packets with no family
0 packets with no route table
0 packets with no auxiliary table
0 packets with no corefacing entry
0 packets with no CE-facing entry
0 mac route learning requests
0 mac routes learnt
0 requests to learn an existing route
0 learning requests while learning disabled on interface
0 learning requests over capacity
0 mac routes moved
0 requests to move static route
0 mac route aging requests
0 mac routes aged
0 bogus address in aging requests
0 requests to age static route
0 requests to re-ageout aged route
0 requests involving multiple peer FEs
0 aging acks from PFE
0 aging non-acks from PFE
0 aging requests timed out waiting on FEs
0 aging requests over max-rate
0 errors finding peer FEs
```

show system statistics (EX Series Switches)

```
user@host> show system statistics
Tcp:
571779 packets sent
21517 data packets (1797102 bytes)
2 data packets retransmitted (20 bytes)
0 resends initiated by MTU discovery
3708 ack only packets (531 packets delayed)
0 URG only packets
1 window probe packets
1 window update packets
1093063 control packets
```



```

1132541 packets received
    20961 acks(for 1796102 bytes)
    5861 duplicate acks
    0 acks for unsent data
    19556 packets received in-sequence(232079 bytes)
    3018 completely duplicate packets(0 bytes)
    0 old duplicate packets
    4 packets with some duplicate data(4 bytes duped)
    2 out-of-order packets(2 bytes)
    0 packets of data after window(0 bytes)
    0 window probes
    39 window update packets
    0 packets received after close
    0 discarded for bad checksums
    0 discarded for bad header offset fields
    0 discarded because packet too short
546519 connection requests
78 connection accepts
0 bad connection attempts
0 listen queue overflows
100 connections established (including accepts)
546596 connections closed (including 6 drops)
    47 connections updated cached RTT on close
    47 connections updated cached RTT variance on close
    0 connections updated cached ssthresh on close
546497 embryonic connections dropped
20453 segments updated rtt(of 566914 attempts)
2 retransmit timeouts
    0 connections dropped by retransmit timeout
0 persist timeouts
    0 connections dropped by persist timeout
3028 keepalive timeouts
    3027 keepalive probes sent
    1 connections dropped by keepalive
7515 correct ACK header predictions
12258 correct data packet header predictions
78 syncache entries added
    0 retransmitted
    0 dupsyn
    4 dropped
    78 completed
    0 bucket overflow
    0 cache overflow
    0 reset
    0 stale
    0 aborted
    0 badack
    0 unreach
    0 zone failures
0 cookies sent
0 cookies received
1 SACK recovery episodes
1 segment retransmits in SACK recovery episodes
1 byte retransmits in SACK recovery episodes
71 SACK options (SACK blocks) received
1 SACK options (SACK blocks) sent
0 SACK scoreboard overflow
0 ACKs sent in response to in-window but not exact RSTs
0 ACKs sent in response to in-window SYNs on established connections
0 rcv packets dropped by TCP due to bad address
0 out-of-sequence segment drops due to insufficient memory

```

```
546544 RST packets
0 ICMP packets ignored by TCP
0 send packets dropped by TCP due to auth errors
0 rcv packets dropped by TCP due to auth errors
0 outgoing segments dropped due to policing

udp:
147 datagrams received
0 with incomplete header
0 with bad data length field
0 with bad checksum
9 dropped due to no socket
0 broadcast/multicast datagrams dropped due to no socket
0 dropped due to full socket buffers
0 not for hashed pcb
138 delivered
0 datagrams output

ip:
73704 total packets received
0 bad header checksums
0 with size smaller than minimum
0 with data size < data length
0 with header length < data size
0 with data length < header length
0 with incorrect version number
0 packets destined to dead next hop
0 fragments received
0 fragments dropped (dup or out of space)
0 fragments dropped (queue overflow)
0 fragments dropped after timeout
0 fragments dropped due to over limit
0 packets reassembled ok
1133057 packets for this host
0 packets for unknown/unsupported protocol
40146 packets forwarded
0 packets not forwardable
40146 redirects sent
1121700 packets sent from this host
0 packets sent with fabricated ip header
0 output packets dropped due to no bufs
0 output packets discarded due to no route
0 output datagrams fragmented
0 fragments created
0 datagrams that can't be fragmented
0 packets with bad options
0 packets with options handled without error
0 strict source and record route options
0 loose source and record route options
0 record route options
0 timestamp options
0 timestamp and address options
0 timestamp and prespecified address options
0 option packets dropped due to rate limit
0 router alert options
0 multicast packets dropped (no iflist)
0 packets dropped (src and int don't match)
0 transit re packets dropped on mgmt i/f
0 packets used first nexthop in ecmp unilist
0 incoming ttpoip packets received
0 incoming ttpoip packets dropped
0 outgoing TTPoIP packets sent
0 outgoing TTPoIP packets dropped
```

```

icmp:
    0 drops due to rate limit
    9 calls to icmp_error
    0 errors not generated because old message was icmp
    Output histogram:
        295 echo reply
        9 destination unreachable
    0 messages with bad code fields
    0 messages less than the minimum length
    0 messages with bad checksum
    0 messages with bad source address
    0 messages with bad length
    0 echo drops with broadcast or multicast destination address
    0 timestamp drops with broadcast or multicast destination address
    Input histogram:
        295 echo
    295 message responses generated

igmp:
    0 messages received
    0 messages received with too few bytes
    0 messages received with bad checksum
    0 membership queries received
    0 membership queries received with invalid fields
    0 membership reports received
    0 membership reports received with invalid fields
    0 membership reports received for groups to which we belong
    0 Membership reports sent

raw_if:
    0 RAW packets transmitted
    0 PPPOE packets transmitted
    0 ISDN packets transmitted
    0 DIALER packets transmitted
    0 PPP packets transmitted to pppd
    0 PPP packets transmitted to jppd
    0 IGMPv2 packets transmitted
    13 output drops due to tx error
    0 MPU packets transmitted
    0 PPPOE packets received
    0 ISDN packets received
    0 DIALER packets received
    0 PPP packets received from pppd
    0 MPU packets received
    0 PPP packets received from jppd
    0 IGMPv2 packets received
    0 Input drops due to bogus protocol
    0 input drops due to no mbufs available
    0 input drops due to no space in socket
    0 input drops due to no socket

arp:
    186413 datagrams received
    88 ARP requests received
    88 ARP replies received
    0 resolution request received
    0 unrestricted proxy requests
    0 restricted proxy requests
    0 received proxy requests
    0 proxy requests not proxied
    0 restricted proxy requests not proxied
    0 datagrams with bogus interface
    0 datagrams with incorrect length
    0 datagrams for non-IP protocol

```

```
0 datagrams with unsupported op code
0 datagrams with bad protocol address length
  0 datagrams with bad hardware address length
0 datagrams with multicast source address
0 datagrams with multicast source address
0 datagrams with my own hardware address
164 datagrams for an address not on the interface
0 datagrams with a broadcast source address
0 datagrams with source address duplicate to mine
186065 datagrams which were not for me
0 packets discarded waiting for resolution
0 packets sent after waiting for resolution
50 ARP requests sent
88 ARP replies sent
0 requests for memory denied
0 requests dropped on entry
0 requests dropped during retry
0 requests dropped due to interface deletion
0 requests on unnumbered interfaces
0 new requests on unnumbered interfaces
0 replies for from unnumbered interfaces
0 requests on unnumbered interface with non-subnetted donor
0 replies from unnumbered interface with non-subnetted donor

ip6:
0 total packets received
0 packets with size smaller than minimum
0 packets with data size < data length
0 packets with bad options
0 packets with incorrect version number
0 fragments received
0 fragments dropped (dup or out of space)
0 fragments dropped after timeout
0 fragments that exceeded limit
0 packets reassembled ok
0 packets for this host
0 packets forwarded
0 packets not forwardable
0 redirects sent
0 packets sent from this host
0 packets sent with fabricated ip header
0 output packets dropped due to no bufs, etc.
0 output datagrams fragmented
0 fragments created
0 datagrams that can't be fragmented
0 packets that violated scope rules
0 multicast packets which we don't join
0 packets whose headers are not continuous
0 tunneling packets that can't find gif
0 packets discarded due to too may headers
0 failures of source address selection
0 forward cache hit
0 forward cache miss
0 Packets destined to dead next hop
0 option packets dropped due to rate limit
0 Packets dropped (src and int don't match)
0 packets dropped due to bad protocol
0 transit re packet(null) dropped on mgmt i/f

icmp6:
0 Calls to icmp_error
0 Errors not generated because old message was icmp error
0 Errors not generated because rate limitation
```

```

0 Messages with bad code fields
0 Messages < minimum length
0 Bad checksums
0 Messages with bad length
    0 No route
    0 Administratively prohibited
    0 Beyond scope
    0 Address unreachable
    0 Port unreachable
    0 packet too big
    0 Time exceed transit
    0 Time exceed reassembly
    0 Erroneous header field
    0 Unrecognized next header
    0 Unrecognized option
    0 redirect
    0 Unknown
0 Message responses generated
0 Messages with too many ND options
pfkey:
0 Requests sent from userland
0 Bytes sent from userland
histogram by message type:
    0 reserved
    0 dump
0 Messages with invalid length field
0 Messages with invalid version field
0 Messages with invalid message type field
0 Messages too short
0 Messages with memory allocation failure
0 Messages with duplicate extension
0 Messages with invalid extension type
0 Messages with invalid sa type
0 Messages with invalid address extension
0 Requests sent to userland
0 Bytes sent to userland
histogram by message type:
    0 reserved
    0 dump
0 Messages toward single socket
0 Messages toward all sockets
0 Messages toward registered sockets
0 Messages with memory allocation failure
c1n1:
0 Total packets received
0 Packets delivered
0 Too small packets
0 Packets with bad header length
0 Packets with bad checksum
0 Bad version packets
0 Unknown or unsupported protocol packets
0 Packets with bogus sdl size
0 No free memory in socket buffer
0 Send packets discarded
0 Sbappend failure
0 Mcopy failure
0 Address fields were not reasonable
0 Segment information forgotten
0 Forwarded packets
0 Total packets sent
0 Output packets discarded

```

```
0 Non-forwarded packets
0 Packets fragmented
0 Fragments sent
0 Fragments discarded
0 Fragments timed out
0 Fragmentation prohibited
0 Packets reconstructed
0 Packets destined to dead nexthop
0 Packets discarded due to no route
0 Error pdu rate drops
0 ER pdu generation failure

esis:
0 Total pkts received
0 Total packets consumed by protocol
0 Pdus received with bad checksum
0 Pdus received with bad version number
0 Pdus received with bad type field
0 Short pdus received
0 Pdus with bogus sdl size
0 Pdus with bad header length
0 Pdus with unknown or unsupported protocol
0 No free memory in socket buffer
0 Send packets discarded
0 Sbappend failure
0 Mcopy failure
0 ISO family not configured

tnp:
0 Unicast packets received
0 Broadcast packets received
0 Fragmented packets received
0 Hello packets dropped
0 Fragments dropped
0 Fragment reassembly queue flushes
0 Packets with tnp src address collision received
0 Hello packets received
0 Control packets received
0 Rdp packets received
0 Udp packets received
0 Tunnel packets received
0 Input packets discarded with no protocol
0 Packets of version unspecified received
0 Packets of version 1 received
0 Packets of version 2 received
0 Packets of version 3 received
0 Unicast packets sent
0 Broadcast packets sent
0 Fragmented packets sent
0 Hello packets dropped
0 Fragments dropped
0 Hello packets sent
0 Control packets sent
0 Rdp packets sent
0 Udp packets sent
0 Tunnel packets sent
0 Packets sent with unknown protocol
0 Packets of version unspecified sent
0 Packets of version 1 sent
0 Packets of version 2 sent
0 Packets of version 3 sent

rdp:
0 Input packets
```

```

0 Packets discarded for bad checksum
0 Packets discarded due to bad sequence number
0 Refused connections
0 Acks received
0 Packets dropped due to full socket buffers
0 Retransmits
0 Output packets
0 Acks sent
0 Connects
0 Closes
0 Keepalives received
0 Keepalives sent
tudp:
67 Datagrams received
0 Datagrams with incomplete header
0 Datagrams with bad data length field
0 Datagrams with bad checksum
0 Datagrams dropped due to no socket
0 Broadcast/multicast datagrams dropped due to no socket
0 Datagrams dropped due to full socket buffers
67 Delivered
68 Datagrams output
ttp:
0 Packets sent
0 Packets sent while unconnected
0 Packets sent while interface down
0 Packets sent couldn't get buffer
0 Packets sent couldn't find neighbor
0 L2 packets received
0 Unknown L3 packets received
0 IPv4 L3 packets received
0 MPLS L3 packets received
0 MPLS->IPv4 L3 packets received
0 IPv4->MPLS L3 packets received
0 IPv6 L3 packets received
0 ARP L3 packets received
0 CLNP L3 packets received
0 TNP L3 packets received
0 NULL L3 packets received
0 Cyclotron cycle L3 packets received
0 Cyclotron send L3 packets received
0 Packets received while unconnected
0 Packets received from unknown ifl
0 Input packets couldn't get buffer
0 Input packets with bad type
0 Input packets with discard type
0 Input packets with too many tlvs
0 Input packets with bad tlv header
70633 Input packets with bad tlv type
68877 Input packets dropped based on tlv result
0 Input packets for which rt lookup is bypassed
mpls:
0 Total MPLS packets received
0 Packets forwarded
0 Packets dropped
0 Packets with header too small
0 After tagging, packets can't fit link MTU
0 Packets with IPv4 explicit NULL tag
0 Packets with IPv4 explicit NULL cksum errors
0 Packets with router alert tag
0 LSP ping packets (ttl-expired/router alert)

```

```
0 Packets with ttl expired
0 Packets with tag encoding error
0 Packets discarded due to no route
0 Packets used first nexthop in ecmp unilist

vpls:
0 Total packets received
0 Packets with size smaller than minimum
0 Packets with incorrect version number
0 Packets for this host
0 Packets with no logical interface
0 Packets with no family
0 Packets with no route table
0 Packets with no auxiliary table
0 Packets with no corefacing entry
0 packets with no CE-facing entry
0 MAC route learning requests
0 MAC routes learnt
0 Requests to learn an existing route
0 Learning requests while learning disabled on interface
0 Learning requests over capacity
0 MAC routes moved
0 Requests to move static route
0 MAC route aging requests
0 MAC routes aged
0 Bogus address in aging requests
0 Requests to age static route
0 Requests to re-ageout aged route
0 Requests involving multiple peer FEs
0 Aging acks from PFE
0 Aging non-acks from PFE
0 Aging requests timed out waiting on FEs
0 Aging requests over max-rate
0 Errors finding peer FEs
0 Unsupported platform
0 Packets dropped due to no l3 route table
0 Packets dropped due to no local ifl
0 Packets punted
0 Packets dropped due to no socket

bridge:
Input:
0 packets received
0 packets forwarded
0 packets failed to forward
0 packets dropped
0 packets with vmember lookup failures
0 packets with vlan lookup failures
0 packets with stp state lookup failures
0 packets dropped due to stp blocked/listening
0 packets dropped due to stp learning
0 packets with src MAC learning failures
0 packets with input control processing failures
Forward:
0 packets sent successfully
0 packets with send failures
0 packets forwarded to l3 interface
0 packets with l3 send failures
0 packets discarded
0 packets with l2ifl store failures
0 packets with ifl mismatch failures
0 packets with packet duplication failures
0 packets with tag lookup failures
```



```

0 packets with no route for DMAC
0 packets with no route table
0 packets with no nexthop
0 packets with dead nexthop
0 packets with eof reached error
Learning:
0 MACs learned
0 packets sent to l3 interface
0 packets with l3 send failures
0 packets hit holdq while learning
0 MAC moves
0 packets discarded
0 packets with no route for SMAC
0 packets with no nexthop
0 packets with dead nexthop
0 packets dropped due to no resolve route
0 packets with l3 ifd lookup failures
0 packets with l3 ifl lookup failures
0 packets with l3 invalid rnh
0 packets with no route for SMAC in clone learning
0 packets with no nexthop in clone learning
0 packets with dead nexthop in clone learning
0 packets dropped due to no resolve nh in clone learning
Output:
0 packets forwarded
0 packets failed to forward
0 packets with vmember lookup failures
  0 packets with vlan lookup failures
0 packets with input control processing failures
Send:
0 packets sent successfully
0 packets with send failures
0 packets dropped due to interface down
0 packets with dev output failures
0 blocked ifl discards
0 packets with tag lookup failures
0 packets with stp state lookup failures
0 packets with tag insertion failures
0 packets with tag removal failures
Flood:
0 packets flooded
0 flood failures
IGMP:
0 packets sent successfully
0 packets with send failures
0 packets forwarded
0 packets failed to forward
0 packets with mpull failures
0 packets with vmember lookup failures
0 packets with vlan lookup failures
0 packets with ifl lookup failures
0 packets with tag lookup failures
Misc:
0 packets with size smaller than minimum
0 packets with double tags
0 packets with no ifl
0 packets with no family
0 packets with no route table

```

show system statistics (TX Matrix Router)

```
user@host> show system statistics
sfc0-re0:
```

```
-----
Tcp:
  361694 packets sent
    326507 data packets (103237236 bytes)
    2343 data packets retransmitted (2673324 bytes)
    0 resends initiated by MTU discovery
    33857 ack only packets (31613 packets delayed)
    0 URG only packets
    14 window probe packets
    387 window update packets
    1108 control packets
  345879 packets received
    298207 acks(for 103141728 bytes)
    438 duplicate acks
    0 acks for unsent data
    204578 packets received in-sequence(13820995 bytes)
    6 completely duplicate packets(18 bytes)
    0 old duplicate packets
    0 packets with some duplicate data(0 bytes duped)
    0 out-of-order packets(0 bytes)
    0 packets of data after window(0 bytes)
    0 window probes
    899 window update packets
    166 packets received after close
    0 discarded for bad checksums
    0 discarded for bad header offset fields
    0 discarded because packet too short
  406 connection requests
  233 connection accepts
  0 bad connection attempts
  0 listen queue overflows
  616 connections established (including accepts)
  911 connections closed (including 41 drops)
    346 connections updated cached RTT on close
    346 connections updated cached RTT variance on close
    200 connections updated cached ssthresh on close
  23 embryonic connections dropped
  298155 segments updated rtt(of 287216 attempts)
  1163 retransmit timeouts
    27 connections dropped by retransmit timeout
  0 persist timeouts
    0 connections dropped by persist timeout
  5 keepalive timeouts
    5 keepalive probes sent
    0 connections dropped by keepalive
  69922 correct ACK header predictions
  34993 correct data packet header predictions
  233 syncache entries added
    0 retransmitted
    0 dupsyn
    0 dropped
    233 completed
    0 bucket overflow
    0 cache overflow
    0 reset
    0 stale
    0 aborted
```

```

0 badack
0 unreach
0 zone failures
0 cookies sent
0 cookies received
23 SACK recovery episodes
68 segment retransmits in SACK recovery episodes
71542 byte retransmits in SACK recovery episodes
158 SACK options (SACK blocks) received
0 SACK options (SACK blocks) sent
0 SACK scoreboard overflow
0 ACKs sent in response to in-window but not exact RSTs
0 ACKs sent in response to in-window SYNs on established connections
0 rcv packets dropped by TCP due to bad address
0 out-of-sequence segment drops due to insufficient memory
259 RST packets
0 ICMP packets ignored by TCP
0 send packets dropped by TCP due to auth errors
0 rcv packets dropped by TCP due to auth errors
0 outgoing segments dropped due to policing

```

lcc0-re0:

Tcp:

```

346 packets sent
    222 data packets (22894 bytes)
    0 data packets retransmitted (0 bytes)
    0 resends initiated by MTU discovery
    80 ack only packets (12 packets delayed)
    0 URG only packets
    0 window probe packets
    5 window update packets
    42 control packets
358 packets received
    268 acks(for 22939 bytes)
    9 duplicate acks
    0 acks for unsent data
    203 packets received in-sequence(33820 bytes)
    0 completely duplicate packets(0 bytes)
    0 old duplicate packets
    0 packets with some duplicate data(0 bytes duped)
    0 out-of-order packets(0 bytes)
    0 packets of data after window(0 bytes)
    0 window probes
    6 window update packets
    0 packets received after close
    0 discarded for bad checksums
    0 discarded for bad header offset fields
    0 discarded because packet too short
13 connection requests
18 connection accepts
0 bad connection attempts
0 listen queue overflows
31 connections established (including accepts)
35 connections closed (including 2 drops)
    3 connections updated cached RTT on close
    3 connections updated cached RTT variance on close
    0 connections updated cached ssthresh on close
0 embryonic connections dropped
268 segments updated rtt(of 247 attempts)
0 retransmit timeouts

```

- 0 connections dropped by retransmit timeout
- 0 persist timeouts
 - 0 connections dropped by persist timeout
- 0 keepalive timeouts
 - 0 keepalive probes sent
 - 0 connections dropped by keepalive
- 0 correct ACK header predictions
- 42 correct data packet header predictions
- 18 syncache entries added
 - 0 retransmitted
 - 0 dupsyn
 - 0 dropped
 - 18 completed
 - 0 bucket overflow
 - 0 cache overflow
 - 0 reset
 - 0 stale
 - 0 aborted
 - 0 badack
 - 0 unreach
 - 0 zone failures
- 0 cookies sent
- 0 cookies received
- 0 SACK recovery episodes
- 0 segment retransmits in SACK recovery episodes
- 0 byte retransmits in SACK recovery episodes
- 0 SACK options (SACK blocks) received
- 0 SACK options (SACK blocks) sent
- 0 SACK scoreboard overflow
- 0 ACKs sent in response to in-window but not exact RSTs
- 0 ACKs sent in response to in-window SYNs on established connections
- 0 rcv packets dropped by TCP due to bad address
- 0 out-of-sequence segment drops due to insufficient memory
- 5 RST packets
- 0 ICMP packets ignored by TCP
- 0 send packets dropped by TCP due to auth errors
- 0 rcv packets dropped by TCP due to auth errors
- 0 outgoing segments dropped due to policing

lcc1-re0:

Tcp:

- 348 packets sent
 - 223 data packets (22895 bytes)
 - 0 data packets retransmitted (0 bytes)
 - 0 resends initiated by MTU discovery
 - 81 ack only packets (13 packets delayed)
 - 0 URG only packets
 - 0 window probe packets
 - 5 window update packets
 - 42 control packets
- 360 packets received
 - 269 acks(for 22940 bytes)
 - 9 duplicate acks
 - 0 acks for unsent data
 - 203 packets received in-sequence(33820 bytes)
 - 0 completely duplicate packets(0 bytes)
 - 0 old duplicate packets
 - 0 packets with some duplicate data(0 bytes duped)
 - 0 out-of-order packets(0 bytes)
 - 0 packets of data after window(0 bytes)

```

        0 window probes
        6 window update packets
        0 packets received after close
        0 discarded for bad checksums
        0 discarded for bad header offset fields
        0 discarded because packet too short
13 connection requests
18 connection accepts
0 bad connection attempts
0 listen queue overflows
31 connections established (including accepts)
36 connections closed (including 2 drops)
    3 connections updated cached RTT on close
    3 connections updated cached RTT variance on close
    0 connections updated cached ssthresh on close
0 embryonic connections dropped
269 segments updated rtt(of 248 attempts)
0 retransmit timeouts
    0 connections dropped by retransmit timeout
0 persist timeouts
    0 connections dropped by persist timeout
0 keepalive timeouts
    0 keepalive probes sent
    0 connections dropped by keepalive
0 correct ACK header predictions
43 correct data packet header predictions
18 syncache entries added
    0 retransmitted
    0 dupsyn
    0 dropped
    18 completed
    0 bucket overflow
    0 cache overflow
    0 reset
    0 stale
    0 aborted
    0 badack
    0 unreach
    0 zone failures
0 cookies sent
0 cookies received
0 SACK recovery episodes
0 segment retransmits in SACK recovery episodes
0 byte retransmits in SACK recovery episodes
0 SACK options (SACK blocks) received
0 SACK options (SACK blocks) sent
0 SACK scoreboard overflow
0 ACKs sent in response to in-window but not exact RSTs
0 ACKs sent in response to in-window SYNs on established connections
0 rcv packets dropped by TCP due to bad address
0 out-of-sequence segment drops due to insufficient memory
5 RST packets
0 ICMP packets ignored by TCP
0 send packets dropped by TCP due to auth errors
0 rcv packets dropped by TCP due to auth errors
0 outgoing segments dropped due to policing

```

1cc2-re0:

 Tcp:

405 packets sent

```
271 data packets (23926 bytes)
0 data packets retransmitted (0 bytes)
0 resends initiated by MTU discovery
86 ack only packets (13 packets delayed)
0 URG only packets
0 window probe packets
5 window update packets
46 control packets
418 packets received
321 acks(for 23975 bytes)
9 duplicate acks
0 acks for unsent data
234 packets received in-sequence(34403 bytes)
0 completely duplicate packets(0 bytes)
0 old duplicate packets
0 packets with some duplicate data(0 bytes duped)
0 out-of-order packets(0 bytes)
0 packets of data after window(0 bytes)
0 window probes
7 window update packets
0 packets received after close
0 discarded for bad checksums
0 discarded for bad header offset fields
0 discarded because packet too short
15 connection requests
19 connection accepts
0 bad connection attempts
0 listen queue overflows
34 connections established (including accepts)
39 connections closed (including 2 drops)
4 connections updated cached RTT on close
4 connections updated cached RTT variance on close
0 connections updated cached ssthresh on close
0 embryonic connections dropped
321 segments updated rtt(of 299 attempts)
0 retransmit timeouts
0 connections dropped by retransmit timeout
0 persist timeouts
0 connections dropped by persist timeout
0 keepalive timeouts
0 keepalive probes sent
0 connections dropped by keepalive
0 correct ACK header predictions
48 correct data packet header predictions
19 syncache entries added
0 retransmitted
0 dupsyn
0 dropped
19 completed
0 bucket overflow
0 cache overflow
0 reset
0 stale
0 aborted
0 badack
0 unreach
0 zone failures
0 cookies sent
0 cookies received
0 SACK recovery episodes
0 segment retransmits in SACK recovery episodes
```

```

0 byte retransmits in SACK recovery episodes
0 SACK options (SACK blocks) received
0 SACK options (SACK blocks) sent
0 SACK scoreboard overflow
0 ACKs sent in response to in-window but not exact RSTs
0 ACKs sent in response to in-window SYNs on established connections
0 rcv packets dropped by TCP due to bad address
0 out-of-sequence segment drops due to insufficient memory
5 RST packets
0 ICMP packets ignored by TCP
0 send packets dropped by TCP due to auth errors
0 rcv packets dropped by TCP due to auth errors
0 outgoing segments dropped due to policing

```

lcc3-re0:

 Tcp:

```

346 packets sent
    221 data packets (22895 bytes)
    0 data packets retransmitted (0 bytes)
    0 resends initiated by MTU discovery
    81 ack only packets (13 packets delayed)
    0 URG only packets
    0 window probe packets
    5 window update packets
    42 control packets
360 packets received
    267 acks(for 22940 bytes)
    9 duplicate acks
    0 acks for unsent data
    203 packets received in-sequence(33820 bytes)
    0 completely duplicate packets(0 bytes)
    0 old duplicate packets
    0 packets with some duplicate data(0 bytes duped)
    0 out-of-order packets(0 bytes)
    0 packets of data after window(0 bytes)
    0 window probes
    6 window update packets
    0 packets received after close
    0 discarded for bad checksums
    0 discarded for bad header offset fields
    0 discarded because packet too short
13 connection requests
18 connection accepts
0 bad connection attempts
0 listen queue overflows
31 connections established (including accepts)
35 connections closed (including 2 drops)
    3 connections updated cached RTT on close
    3 connections updated cached RTT variance on close
    0 connections updated cached ssthresh on close
0 embryonic connections dropped
267 segments updated rtt(of 246 attempts)
0 retransmit timeouts
    0 connections dropped by retransmit timeout
0 persist timeouts
    0 connections dropped by persist timeout
0 keepalive timeouts
    0 keepalive probes sent
    0 connections dropped by keepalive
0 correct ACK header predictions

```

```
43 correct data packet header predictions
18 syncache entries added
    0 retransmitted
    0 dupsyn
    0 dropped
    18 completed
    0 bucket overflow
    0 cache overflow
    0 reset
    0 stale
    0 aborted
    0 badack
    0 unreach
    0 zone failures
0 cookies sent
0 cookies received
0 SACK recovery episodes
0 segment retransmits in SACK recovery episodes
0 byte retransmits in SACK recovery episodes
0 SACK options (SACK blocks) received
0 SACK options (SACK blocks) sent
0 SACK scoreboard overflow
0 ACKs sent in response to in-window but not exact RSTs
0 ACKs sent in response to in-window SYNs on established connections
0 rcv packets dropped by TCP due to bad address
0 out-of-sequence segment drops due to insufficient memory
5 RST packets
0 ICMP packets ignored by TCP
0 send packets dropped by TCP due to auth errors
0 rcv packets dropped by TCP due to auth errors
0 outgoing segments dropped due to policing
```

show system statistics (QFX Series)

```
user@switch> show system statistics
Tcp:
571779 packets sent
21517 data packets (1797102 bytes)
2 data packets retransmitted (20 bytes)
0 resends initiated by MTU discovery
3708 ack only packets (531 packets delayed)
0 URG only packets
1 window probe packets
1 window update packets
1093063 control packets
1132541 packets received
20961 acks(for 1796102 bytes)
5861 duplicate acks
0 acks for unsent data
19556 packets received in-sequence(232079 bytes)
3018 completely duplicate packets(0 bytes)
0 old duplicate packets
4 packets with some duplicate data(4 bytes duped)
2 out-of-order packets(2 bytes)
0 packets of data after window(0 bytes)
0 window probes
39 window update packets
0 packets received after close
0 discarded for bad checksums
0 discarded for bad header offset fields
0 discarded because packet too short
```



```

546519 connection requests
78 connection accepts
0 bad connection attempts
0 listen queue overflows
100 connections established (including accepts)
546596 connections closed (including 6 drops)
47 connections updated cached RTT on close
47 connections updated cached RTT variance on close
0 connections updated cached ssthresh on close
546497 embryonic connections dropped
20453 segments updated rtt(of 566914 attempts)
2 retransmit timeouts
0 connections dropped by retransmit timeout
0 persist timeouts
0 connections dropped by persist timeout
3028 keepalive timeouts
3027 keepalive probes sent
1 connections dropped by keepalive
7515 correct ACK header predictions
12258 correct data packet header predictions
78 syncache entries added
0 retransmitted
0 dupsyn
4 dropped
78 completed
0 bucket overflow
0 cache overflow
0 reset
0 stale
0 aborted
0 badack
0 unreach
0 zone failures
0 cookies sent
0 cookies received
1 SACK recovery episodes
1 segment retransmits in SACK recovery episodes
1 byte retransmits in SACK recovery episodes
71 SACK options (SACK blocks) received
1 SACK options (SACK blocks) sent
0 SACK scoreboard overflow
0 ACKs sent in response to in-window but not exact RSTs
0 ACKs sent in response to in-window SYNs on established connections
0 rcv packets dropped by TCP due to bad address
0 out-of-sequence segment drops due to insufficient memory
546544 RST packets
0 ICMP packets ignored by TCP
0 send packets dropped by TCP due to auth errors
0 rcv packets dropped by TCP due to auth errors
0 outgoing segments dropped due to policing
udp:
147 datagrams received
0 with incomplete header
0 with bad data length field
0 with bad checksum
9 dropped due to no socket
0 broadcast/multicast datagrams dropped due to no socket
0 dropped due to full socket buffers
0 not for hashed pcb
138 delivered
0 datagrams output

```

```
ip:
73704 total packets received
0 bad header checksums
0 with size smaller than minimum
0 with data size < data length
0 with header length < data size
0 with data length < header length
0 with incorrect version number
0 packets destined to dead next hop
0 fragments received
0 fragments dropped (dup or out of space)
0 fragments dropped (queue overflow)
0 fragments dropped after timeout
0 fragments dropped due to over limit
0 packets reassembled ok
1133057 packets for this host
0 packets for unknown/unsupported protocol
40146 packets forwarded
0 packets not forwardable
40146 redirects sent
1121700 packets sent from this host
0 packets sent with fabricated ip header
0 output packets dropped due to no bufs
0 output packets discarded due to no route
0 output datagrams fragmented
0 fragments created
0 datagrams that can't be fragmented
0 packets with bad options
0 packets with options handled without error
0 strict source and record route options
0 loose source and record route options
0 record route options
0 timestamp options
0 timestamp and address options
0 timestamp and prespecified address options
0 option packets dropped due to rate limit
0 router alert options
0 multicast packets dropped (no iflist)
0 packets dropped (src and int don't match)
0 transit re packets dropped on mgmt i/f
0 packets used first nexthop in ecmp unilist
0 incoming ttpoip packets received
0 incoming ttpoip packets dropped
0 outgoing TTPoIP packets sent
0 outgoing TTPoIP packets dropped
icmp:
0 drops due to rate limit
9 calls to icmp_error
0 errors not generated because old message was icmp
Output histogram:
295 echo reply
9 destination unreachable
0 messages with bad code fields
0 messages less than the minimum length
0 messages with bad checksum
0 messages with bad source address
0 messages with bad length
0 echo drops with broadcast or multicast destination address
0 timestamp drops with broadcast or multicast destination address
Input histogram:
295 echo
```

```
295 message responses generated
igmp:
0 messages received
0 messages received with too few bytes
0 messages received with bad checksum
0 membership queries received
0 membership queries received with invalid fields
0 membership reports received
0 membership reports received with invalid fields
0 membership reports received for groups to which we belong
0 Membership reports sent
raw_if:
0 RAW packets transmitted
0 PPPOE packets transmitted
0 ISDN packets transmitted
0 DIALER packets transmitted
0 PPP packets transmitted to pppd
0 PPP packets transmitted to jppd
0 IGMP2 packets transmitted
13 output drops due to tx error
0 MPU packets transmitted
0 PPPOE packets received
0 ISDN packets received
0 DIALER packets received
0 PPP packets received from pppd
0 MPU packets received
0 PPP packets received from jppd
0 IGMP2 packets received
0 Input drops due to bogus protocol
0 input drops due to no mbufs available
0 input drops due to no space in socket
0 input drops due to no socket
arp:
186413 datagrams received
88 ARP requests received
88 ARP replies received
0 resolution request received
0 unrestricted proxy requests
0 restricted proxy requests
0 received proxy requests
0 proxy requests not proxied
0 restricted proxy requests not proxied
0 datagrams with bogus interface
0 datagrams with incorrect length
0 datagrams for non-IP protocol
0 datagrams with unsupported op code
0 datagrams with bad protocol address length
0 datagrams with bad hardware address length
0 datagrams with multicast source address
0 datagrams with multicast source address
0 datagrams with my own hardware address
164 datagrams for an address not on the interface
0 datagrams with a broadcast source address
0 datagrams with source address duplicate to mine
186065 datagrams which were not for me
0 packets discarded waiting for resolution
0 packets sent after waiting for resolution
50 ARP requests sent
88 ARP replies sent
0 requests for memory denied
0 requests dropped on entry
```

```
0 requests dropped during retry
0 requests dropped due to interface deletion
0 requests on unnumbered interfaces
0 new requests on unnumbered interfaces
0 replies for from unnumbered interfaces
0 requests on unnumbered interface with non-subnetted donor
0 replies from unnumbered interface with non-subnetted donor
ip6:
0 total packets received
0 packets with size smaller than minimum
0 packets with data size < data length
0 packets with bad options
0 packets with incorrect version number
0 fragments received
0 fragments dropped (dup or out of space)
0 fragments dropped after timeout
0 fragments that exceeded limit
0 packets reassembled ok
0 packets for this host
0 packets forwarded
0 packets not forwardable
0 redirects sent
0 packets sent from this host
0 packets sent with fabricated ip header
0 output packets dropped due to no bufs, etc.
0 output datagrams fragmented
0 fragments created
0 datagrams that can't be fragmented
0 packets that violated scope rules
0 multicast packets which we don't join
0 packets whose headers are not continuous
0 tunneling packets that can't find gif
0 packets discarded due to too may headers
0 failures of source address selection
0 forward cache hit
0 forward cache miss
0 Packets destined to dead next hop
0 option packets dropped due to rate limit
0 Packets dropped (src and int don't match)
0 packets dropped due to bad protocol
0 transit re packet(null) dropped on mgmt i/f
icmp6:
0 Calls to icmp_error
0 Errors not generated because old message was icmp error
0 Errors not generated because rate limitation
0 Messages with bad code fields
0 Messages < minimum length
0 Bad checksums
0 Messages with bad length
0 No route
0 Administratively prohibited
0 Beyond scope
0 Address unreachable
0 Port unreachable
0 packet too big
0 Time exceed transit
0 Time exceed reassembly
0 Erroneous header field
0 Unrecognized next header
0 Unrecognized option
0 redirect
```

```
0 Unknown
0 Message responses generated
0 Messages with too many ND options
pfkey:
0 Requests sent from userland
0 Bytes sent from userland
histogram by message type:
0 reserved
0 dump
0 Messages with invalid length field
0 Messages with invalid version field
0 Messages with invalid message type field
0 Messages too short
0 Messages with memory allocation failure
0 Messages with duplicate extension
0 Messages with invalid extension type
0 Messages with invalid sa type
0 Messages with invalid address extension
0 Requests sent to userland
0 Bytes sent to userland
histogram by message type:
0 reserved
0 dump
0 Messages toward single socket
0 Messages toward all sockets
0 Messages toward registered sockets
0 Messages with memory allocation failure
c1n1:
0 Total packets received
0 Packets delivered
0 Too small packets
0 Packets with bad header length
0 Packets with bad checksum
0 Bad version packets
0 Unknown or unsupported protocol packets
0 Packets with bogus sdl size
0 No free memory in socket buffer
0 Send packets discarded
0 Sbappend failure
0 Mcopy failure
0 Address fields were not reasonable
0 Segment information forgotten
0 Forwarded packets
0 Total packets sent
0 Output packets discarded
0 Non-forwarded packets
0 Packets fragmented
0 Fragments sent
0 Fragments discarded
0 Fragments timed out
0 Fragmentation prohibited
0 Packets reconstructed
0 Packets destined to dead nexthop
0 Packets discarded due to no route
0 Error pdu rate drops
0 ER pdu generation failure
esis:
0 Total pkts received
0 Total packets consumed by protocol
0 Pdus received with bad checksum
0 Pdus received with bad version number
```

```
0 Pdus received with bad type field
0 Short pdus received
0 Pdus with bogus sdl size
0 Pdus with bad header length
0 Pdus with unknown or unsupported protocol
0 No free memory in socket buffer
0 Send packets discarded
0 Sbappend failure
0 Mcopy failure
0 ISO family not configured
tnp:
0 Unicast packets received
0 Broadcast packets received
0 Fragmented packets received
0 Hello packets dropped
0 Fragments dropped
0 Fragment reassembly queue flushes
0 Packets with tnp src address collision received
0 Hello packets received
0 Control packets received
0 Rdp packets received
0 Udp packets received
0 Tunnel packets received
0 Input packets discarded with no protocol
0 Packets of version unspecified received
0 Packets of version 1 received
0 Packets of version 2 received
0 Packets of version 3 received
0 Unicast packets sent
0 Broadcast packets sent
0 Fragmented packets sent
0 Hello packets dropped
0 Fragments dropped
0 Hello packets sent
0 Control packets sent
0 Rdp packets sent
0 Udp packets sent
0 Tunnel packets sent
0 Packets sent with unknown protocol
0 Packets of version unspecified sent
0 Packets of version 1 sent
0 Packets of version 2 sent
0 Packets of version 3 sent
rdp:
0 Input packets
0 Packets discarded for bad checksum
0 Packets discarded due to bad sequence number
0 Refused connections
0 Acks received
0 Packets dropped due to full socket buffers
0 Retransmits
0 Output packets
0 Acks sent
0 Connects
0 Closes
0 Keepalives received
0 Keepalives sent
tudp:
67 Datagrams received
0 Datagrams with incomplete header
0 Datagrams with bad data length field
```

```

0 Datagrams with bad checksum
0 Datagrams dropped due to no socket
0 Broadcast/multicast datagrams dropped due to no socket
0 Datagrams dropped due to full socket buffers
67 Delivered
68 Datagrams output
ttp:
0 Packets sent
0 Packets sent while unconnected
0 Packets sent while interface down
0 Packets sent couldn't get buffer
0 Packets sent couldn't find neighbor
0 L2 packets received
0 Unknown L3 packets received
0 IPv4 L3 packets received
0 MPLS L3 packets received
0 MPLS->IPv4 L3 packets received
0 IPv4->MPLS L3 packets received
0 IPv6 L3 packets received
0 ARP L3 packets received
0 CLNP L3 packets received
0 TNP L3 packets received
0 NULL L3 packets received
0 Cyclotron cycle L3 packets received
0 Cyclotron send L3 packets received
0 Packets received while unconnected
0 Packets received from unknown ifl
0 Input packets couldn't get buffer
0 Input packets with bad type
0 Input packets with discard type
0 Input packets with too many tlvs
0 Input packets with bad tlv header
70633 Input packets with bad tlv type
68877 Input packets dropped based on tlv result0 Input packets for which rt lookup
  is bypassed
mpls:
0 Total MPLS packets received
0 Packets forwarded
0 Packets dropped
0 Packets with header too small
0 After tagging, packets can't fit link MTU
0 Packets with IPv4 explicit NULL tag
0 Packets with IPv4 explicit NULL cksum errors
0 Packets with router alert tag
0 LSP ping packets (ttl-expired/router alert)
0 Packets with ttl expired
0 Packets with tag encoding error
0 Packets discarded due to no route
0 Packets used first nexthop in ecmp unilist
vpls:
0 Total packets received
0 Packets with size smaller than minimum
0 Packets with incorrect version number
0 Packets for this host
0 Packets with no logical interface
0 Packets with no family
0 Packets with no route table
582 Copyright © 2010, Juniper Networks, Inc.
0 Packets with no auxiliary table
0 Packets with no corefacing entry
0 packets with no CE-facing entry

```

```

0 MAC route learning requests
0 MAC routes learnt
0 Requests to learn an existing route
0 Learning requests while learning disabled on interface
0 Learning requests over capacity
0 MAC routes moved
0 Requests to move static route
0 MAC route aging requests
0 MAC routes aged
0 Bogus address in aging requests
0 Requests to age static route
0 Requests to re-ageout aged route
0 Requests involving multiple peer FEs
0 Aging acks from PFE
0 Aging non-acks from PFE
0 Aging requests timed out waiting on FEs
0 Aging requests over max-rate
0 Errors finding peer FEs
0 Unsupported platform
0 Packets dropped due to no l3 route table
0 Packets dropped due to no local ifl
0 Packets punted
0 Packets dropped due to no socket
bridge:
Input:
0 packets received
0 packets forwarded
0 packets failed to forward
0 packets dropped
0 packets with vmember lookup failures
0 packets with vlan lookup failures
0 packets with stp state lookup failures
0 packets dropped due to stp blocked/listening
0 packets dropped due to stp learning
0 packets with src MAC learning failures
0 packets with input control processing failures
Forward:
0 packets sent successfully
0 packets with send failures
0 packets forwarded to l3 interface
0 packets with l3 send failures
0 packets discarded
0 packets with l2ifl store failures
0 packets with ifl mismatch failures
0 packets with packet duplication failures
0 packets with tag lookup failures
0 packets with no route for DMAC
0 packets with no route table
0 packets with no nexthop
0 packets with dead nexthop
0 packets with eof reached error
Learning:
0 MACs learned
0 packets sent to l3 interface
0 packets with l3 send failures
0 packets hit holdq while learning
0 MAC moves
0 packets discarded
0 packets with no route for SMAC
0 packets with no nexthop
0 packets with dead nexthop

```



```
0 packets dropped due to no resolve route
0 packets with l3 ifd lookup failures
0 packets with l3 ifl lookup failures
0 packets with l3 invalid rnh
0 packets with no route for SMAC in clone learning
0 packets with no nexthop in clone learning
0 packets with dead nexthop in clone learning
0 packets dropped due to no resolve nh in clone learning
Output:
0 packets forwarded
0 packets failed to forward
0 packets with vmember lookup failures
0 packets with vlan lookup failures
0 packets with input control processing failures
Send:
0 packets sent successfully
0 packets with send failures
0 packets dropped due to interface down
0 packets with dev output failures
0 blocked ifl discards
0 packets with tag lookup failures
0 packets with stp state lookup failures
0 packets with tag insertion failures
0 packets with tag removal failures
Flood:
0 packets flooded
0 flood failures
IGMP:
0 packets sent successfully
0 packets with send failures
0 packets forwarded
0 packets failed to forward
0 packets with mpull failures
0 packets with vmember lookup failures
0 packets with vlan lookup failures
0 packets with ifl lookup failures
0 packets with tag lookup failures
Misc:
0 packets with size smaller than minimum
0 packets with double tags
0 packets with no ifl
0 packets with no family
0 packets with no route table
```

show system storage

List of Syntax	Syntax on page 1196 Syntax (EX Series Switches) on page 1196 Syntax (MX Series Router) on page 1196 Syntax (QFX Series) on page 1196 Syntax (SRX Series) on page 1196 Syntax (TX Matrix Router) on page 1196 Syntax (TX Matrix Plus Router and TX Matrix Plus Router with 3D SIBs) on page 1196
Syntax	<code>show system storage</code> <code><detail></code> <code><invoke-on (all-routing-engines other-routing-engine)></code>
Syntax (EX Series Switches)	<code>show system storage</code> <code><detail></code> <code><all-members></code> <code><local></code> <code><member <i>member-id</i>></code> <code><invoke-on (all-routing-engines other-routing-engine)></code>
Syntax (MX Series Router)	<code>show system storage</code> <code><detail></code> <code><all-members></code> <code><local></code> <code><member <i>member-id</i>></code> <code><invoke-on (all-routing-engines other-routing-engine)></code>
Syntax (QFX Series)	<code>show system storage</code> <code><detail></code> <code><infrastructure <i>name</i>></code> <code><interconnect-device <i>name</i>></code> <code><node-group <i>name</i>></code> <code><invoke-on (all-routing-engines other-routing-engine)></code>
Syntax (SRX Series)	<code>show system storage</code> <code><detail></code> <code><partitions></code> <code><invoke-on (all-routing-engines other-routing-engine)></code>
Syntax (TX Matrix Router)	<code>show system storage</code> <code><detail></code> <code><all-chassis all-lcc lcc <i>number</i> scc></code> <code><invoke-on (all-routing-engines other-routing-engine)></code>
Syntax (TX Matrix Plus Router and TX Matrix Plus Router with 3D SIBs)	<code>show system storage</code> <code><detail></code> <code><all-chassis all-lcc lcc <i>number</i> sfc <i>number</i>></code> <code><invoke-on (all-routing-engines other-routing-engine)></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.

sfc option introduced for the TX Matrix Plus router in JUNOS Release 9.6.

Command introduced in Junos OS Release 11.1 for the QFX Series.

Option **invoke-on (all-routing-engines | other-routing-engine)** introduced in Junos OS Release 14.1

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description	Display statistics about the amount of free disk space in the router's or switch's file systems.
Options	<p>none—Display standard information about the amount of free disk space in the router's or switch's file systems.</p> <p>detail—(Optional) Display detailed output.</p> <p>invoke-on all-routing-engines—(Optional) Display the system storage information on all master and backup Routing Engines on a routing matrix based on the TX Matrix or TX Matrix Plus router or on a router that has dual Routing Engines.</p> <p>invoke-on other-routing-engines—(Optional) Display the system storage information on the other Routing Engine. For example, if you issue this command on the master Routing Engine on an M320 router, the JUNOS Software displays the system storage information on the backup Routing Engine. On a routing matrix based on the TX Matrix or TX Matrix Plus router, if you issue this command on the TX Matrix or TX Matrix Plus router's master Routing Engine, the JUNOS Software displays all the system storage information on all the backup Routing Engines.</p> <p>all-chassis—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display system storage statistics for all the routers in the chassis.</p> <p>all-lcc—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system storage statistics for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display system storage statistics for all routers connected to the TX Matrix Plus router.</p> <p>all-members—(EX4200 switches and MX Series routers only) (Optional) Display system storage statistics for all members of the Virtual Chassis configuration.</p> <p>infrastructure <i>name</i>—(QFabric systems only) (Optional) Display system storage statistics for the fabric control Routing Engines or fabric manager Routing Engines.</p> <p>interconnect-device <i>name</i>—(QFabric systems only) (Optional) Display system storage statistics for the Interconnect device.</p> <p>lcc <i>number</i>—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system storage statistics for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display system storage statistics for a specific router that is connected to the TX Matrix Plus router.</p>

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Display system storage statistics for the local Virtual Chassis member.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Display system storage statistics for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

node-group *name*—(QFabric systems only) (Optional) Display system storage statistics for the Node group.

scc—(TX Matrix routers only) (Optional) Display system storage statistics for the TX Matrix router (or switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Display system storage statistics for the TX Matrix Plus router. Replace *number* with 0.

Additional Information By default, when you issue the **show system storage** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

Required Privilege Level view

Related Documentation

- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)
- [show system storage partitions \(View SRX Series\)](#)

List of Sample Output

- [show system storage on page 1199](#)
- [show system storage \(TX Matrix Plus Router\) on page 1199](#)
- [show system storage \(QFX3500 Switch\) on page 1201](#)
- [show system storage invoke-on all-routing-engines on page 1202](#)
- [show system storage invoke-on other-routing-engine on page 1203](#)

Output Fields Table 64 on page 1199 describes the output fields for the **show system storage** command. Output fields are listed in the approximate order in which they appear.

Table 64: show system storage Output Fields

Field Name	Field Description
Filesystem	Name of the filesystem.
Size	Size of the filesystem.
Used	Amount of space used in the filesystem.
Avail	Amount of space available in the filesystem.
Capacity	Percentage of the filesystem space that is being used.
Mounted on	Directory in which the filesystem is mounted.

Sample Output

show system storage

```

user@host> show system storage
Filesystem      Size      Used      Avail  Capacity  Mounted on
/dev/ad0s1a      77M       37M       34M     52%      /
devfs           16K       16K        0B    100%    /dev/
/dev/vn0        12M       12M        0B    100%    /packages/mnt/jbase
/dev/vn1        39M       39M        0B    100%
/packages/mnt/jkernel-7.2R1.7
/dev/vn2        12M       12M        0B    100%
/packages/mnt/jpfe-M40-7.2R1.7
/dev/vn3        2.3M      2.3M        0B    100%
/packages/mnt/jdocs-7.2R1.7
/dev/vn4        14M       14M        0B    100%
/packages/mnt/jroute-7.2R1.7
/dev/vn5        4.5M      4.5M        0B    100%
/packages/mnt/jcrypto-7.2R1.7
mfs:172         1.5G      4.0K       1.3G      0%      /tmp
/dev/ad0s1e      12M       20K        11M      0%      /config
procfs          4.0K      4.0K        0B    100%    /proc
/dev/ad1s1f      9.4G      4.9G       3.7G     57%     /var

```

show system storage (TX Matrix Plus Router)

```

user@host> show system storage
sfc0-re0:
-----
Filesystem      Size      Used      Avail  Capacity  Mounted on
/dev/ad0s1a      3.4G      178M       2.9G      6%      /
devfs           1.0K      1.0K        0B    100%    /dev
devfs           1.0K      1.0K        0B    100%    /dev/
/dev/md0         33M       33M        0B    100%    /packages/mnt/jbase
/dev/md1        216M      216M        0B    100%
/packages/mnt/jkernel-9.6-20090519.0
/dev/md2         66M       66M        0B    100%
/packages/mnt/jpfe-T-9.6-20090519.0

```

/dev/md3	4.1M	4.1M	0B	100%	
/packages/mnt/jdocs-9.6-20090519.0					
/dev/md4	57M	57M	0B	100%	
/packages/mnt/jroute-9.6-20090519.0					
/dev/md5	15M	15M	0B	100%	
/packages/mnt/jcrypto-9.6-20090519.0					
/dev/md6	34M	34M	0B	100%	
/packages/mnt/jpfe-common-9.6-20090519.0					
/dev/md7	2.0G	10.0K	1.8G	0%	/tmp
/dev/md8	2.0G	1.0M	1.8G	0%	/mfs
/dev/ad0s1e	383M	82K	352M	0%	/config
procfs	4.0K	4.0K	0B	100%	/proc
/dev/ad1s1f	52G	7.5G	40G	16%	/var

lcc0-re0:

Filesystem	Size	Used	Avail	Capacity	Mounted on
/dev/ad0s1a	3.4G	178M	2.9G	6%	/
devfs	1.0K	1.0K	0B	100%	/dev
devfs	1.0K	1.0K	0B	100%	/dev/
/dev/md0	33M	33M	0B	100%	/packages/mnt/jbase
/dev/md1	216M	216M	0B	100%	
/packages/mnt/jkernel-9.6-20090519.0					
/dev/md2	66M	66M	0B	100%	
/packages/mnt/jpfe-T-9.6-20090519.0					
/dev/md3	4.1M	4.1M	0B	100%	
/packages/mnt/jdocs-9.6-20090519.0					
/dev/md4	57M	57M	0B	100%	
/packages/mnt/jroute-9.6-20090519.0					
/dev/md5	15M	15M	0B	100%	
/packages/mnt/jcrypto-9.6-20090519.0					
/dev/md6	34M	34M	0B	100%	
/packages/mnt/jpfe-common-9.6-20090519.0					
/dev/md7	2.0G	10.0K	1.8G	0%	/tmp
/dev/md8	2.0G	540K	1.8G	0%	/mfs
/dev/ad0s1e	383M	88K	352M	0%	/config
procfs	4.0K	4.0K	0B	100%	/proc
/dev/ad1s1f	52G	6.3G	41G	13%	/var

lcc1-re0:

Filesystem	Size	Used	Avail	Capacity	Mounted on
/dev/ad0s1a	3.4G	178M	2.9G	6%	/
devfs	1.0K	1.0K	0B	100%	/dev
devfs	1.0K	1.0K	0B	100%	/dev/
/dev/md0	33M	33M	0B	100%	/packages/mnt/jbase
/dev/md1	216M	216M	0B	100%	
/packages/mnt/jkernel-9.6-20090519.0					
/dev/md2	66M	66M	0B	100%	
/packages/mnt/jpfe-T-9.6-20090519.0					
/dev/md3	4.1M	4.1M	0B	100%	
/packages/mnt/jdocs-9.6-20090519.0					
/dev/md4	57M	57M	0B	100%	
/packages/mnt/jroute-9.6-20090519.0					
/dev/md5	15M	15M	0B	100%	
/packages/mnt/jcrypto-9.6-20090519.0					
/dev/md6	34M	34M	0B	100%	
/packages/mnt/jpfe-common-9.6-20090519.0					
/dev/md7	2.0G	10.0K	1.8G	0%	/tmp
/dev/md8	2.0G	540K	1.8G	0%	/mfs
/dev/ad0s1e	383M	88K	352M	0%	/config

```

procfs          4.0K      4.0K      0B      100% /proc
/dev/ad1s1f     23G      13G      7.7G     64%  /var

lcc2-re0:
-----
Filesystem      Size      Used      Avail  Capacity  Mounted on
/dev/ad0s1a     3.4G      178M      2.9G      6%        /
devfs           1.0K      1.0K      0B      100%     /dev
devfs           1.0K      1.0K      0B      100%     /dev/
/dev/md0        33M       33M       0B      100%     /packages/mnt/jbase
/dev/md1        216M      216M      0B      100%
/packages/mnt/jkernel-9.6-20090519.0
/dev/md2        66M       66M       0B      100%
/packages/mnt/jpfe-T-9.6-20090519.0
/dev/md3        4.1M      4.1M      0B      100%
/packages/mnt/jdocs-9.6-20090519.0
/dev/md4        57M       57M       0B      100%
/packages/mnt/jroute-9.6-20090519.0
/dev/md5        15M       15M       0B      100%
/packages/mnt/jcrypto-9.6-20090519.0
/dev/md6        34M       34M       0B      100%
/packages/mnt/jpfe-common-9.6-20090519.0
/dev/md7        2.0G      10.0K     1.8G      0%        /tmp
/dev/md8        2.0G      540K     1.8G      0%        /mfs
/dev/ad0s1e     383M      64K      352M      0%        /config
procfs          4.0K      4.0K      0B      100%     /proc
/dev/ad1s1f     23G      3.7G     17G      18%      /var

lcc3-re0:
-----
Filesystem      Size      Used      Avail  Capacity  Mounted on
/dev/ad0s1a     3.4G      178M      2.9G      6%        /
devfs           1.0K      1.0K      0B      100%     /dev
devfs           1.0K      1.0K      0B      100%     /dev/
/dev/md0        33M       33M       0B      100%     /packages/mnt/jbase
/dev/md1        216M      216M      0B      100%
/packages/mnt/jkernel-9.6-20090519.0
/dev/md2        66M       66M       0B      100%
/packages/mnt/jpfe-T-9.6-20090519.0
/dev/md3        4.1M      4.1M      0B      100%
/packages/mnt/jdocs-9.6-20090519.0
/dev/md4        57M       57M       0B      100%
/packages/mnt/jroute-9.6-20090519.0
/dev/md5        15M       15M       0B      100%
/packages/mnt/jcrypto-9.6-20090519.0
/dev/md6        34M       34M       0B      100%
/packages/mnt/jpfe-common-9.6-20090519.0
/dev/md7        2.0G      10.0K     1.8G      0%        /tmp
/dev/md8        2.0G      540K     1.8G      0%        /mfs
/dev/ad0s1e     383M      34K      352M      0%        /config
procfs          4.0K      4.0K      0B      100%     /proc
/dev/ad1s1f     23G      18G      3.5G     84%      /var

```

show system storage (QFX3500 Switch)

```

user@switch> show system storage
Filesystem      Size      Used      Avail  Capacity  Mounted on
/dev/da0s2a     343M      192M     123M      61%        /
devfs           1.0K      1.0K      0B      100%     /dev
/dev/md0        119M      119M      0B      100%     /packages/mnt/jbase
/dev/md1        513M      513M      0B      100%

```

```

/packages/mnt/jkernel-qfx-11.1R1.5
/dev/md2          37M          37M          0B          100%
/packages/mnt/jpfe-qfx-e9xxx-11.1R1.5
/dev/md3          6.0M          6.0M          0B          100%
/packages/mnt/jdocs-qfx-11.1R1.5
/dev/md4          216M         216M          0B          100%
/packages/mnt/jroute-qfx-11.1R1.5
/dev/md5          59M          59M          0B          100%
/packages/mnt/jcrypto-qfx-11.1R1.5
/dev/md6          85M          85M          0B          100%
/packages/mnt/jswitch-qfx-11.1R1.5
/dev/md7          63M          8.0K          58M          0% /tmp
/dev/da0s2f       228M          14M         196M          7% /var
/dev/da0s3d       590M          3.0M         540M          1% /var/tmp
/dev/da0s3e       104M          162K          95M          0% /config
procfs            4.0K          4.0K          0B          100% /proc

```

show system storage invoke-on all-routing-engines

```
user@host> show system storage invoke-on all-routing-engines
```

```
re0:
```

```

-----
Filesystem      Size      Used      Avail  Capacity  Mounted on
/dev/ad0s1a     3.3G      440M      2.6G      14%      /
devfs           1.0K      1.0K      0B        100%     /dev
/dev/md0        76M       76M       0B        100%     /packages/mnt/jbase
/dev/md1        40M       40M       0B        100%
/packages/mnt/jkernel64-14.1-20140407.1
/dev/md2        219M      219M      0B        100%
/packages/mnt/jpfe-T-14.1-20140407.1
/dev/md3        5.4M      5.4M      0B        100%
/packages/mnt/jdocs-14.1-20140407.1
/dev/md4        116M      116M      0B        100%
/packages/mnt/jroute-14.1-20140407.1
/dev/md5        44M       44M       0B        100%
/packages/mnt/jcrypto64-14.1-20140407.1
/dev/md6        70M       70M       0B        100%
/packages/mnt/jpfe-common-14.1-20140407.1
/dev/md7        182K      182K      0B        100%
/packages/mnt/jplatform-14.1-20140407.1
/dev/md8        499M      499M      0B        100%
/packages/mnt/jruntime-14.1-20140407.1
/dev/md9        41M       41M       0B        100%
/packages/mnt/jruntime64-14.1-20140407.1
/dev/md10       12M       12M       0B        100%
/packages/mnt/py-base-i386-14.1-20140407.1
/dev/md11       3.2G      8.0K      2.9G       0% /tmp
/dev/md12       3.2G      1.1M      2.9G       0% /mfs
/dev/ad0s1e     376M      220K      346M       0% /config
procfs          4.0K      4.0K      0B        100% /proc
/dev/ad1s1f     50G       43G      3.2G      93% /var

```

```
re1:
```

```

-----
Filesystem      Size      Used      Avail  Capacity  Mounted on
/dev/ad0s1a     3.3G      440M      2.6G      14%      /
devfs           1.0K      1.0K      0B        100%     /dev
/dev/md0        76M       76M       0B        100%     /packages/mnt/jbase
/dev/md1        40M       40M       0B        100%
/packages/mnt/jkernel64-14.1-20140407.1
/dev/md2        219M      219M      0B        100%

```



```

/packages/mnt/jpfe-T-14.1-20140407.1
/dev/md3          5.4M      5.4M          0B      100%
/packages/mnt/jdocs-14.1-20140407.1
/dev/md4          116M     116M          0B      100%
/packages/mnt/jroute-14.1-20140407.1
/dev/md5          44M      44M          0B      100%
/packages/mnt/jcrypto64-14.1-20140407.1
/dev/md6          70M      70M          0B      100%
/packages/mnt/jpfe-common-14.1-20140407.1
/dev/md7          182K     182K          0B      100%
/packages/mnt/jplatform-14.1-20140407.1
/dev/md8          499M     499M          0B      100%
/packages/mnt/jruntime-14.1-20140407.1
/dev/md9          41M      41M          0B      100%
/packages/mnt/jruntime64-14.1-20140407.1
/dev/md10         12M      12M          0B      100%
/packages/mnt/py-base-i386-14.1-20140407.1
/dev/md11         3.2G      8.0K        2.9G      0% /tmp
/dev/md12         3.2G     662K        2.9G      0% /mfs
/dev/ad0s1e       375M     230K       344M      0% /config
procfs           4.0K      4.0K          0B     100% /proc
/dev/ad1s1f      52G      46G        2.2G     95% /var

```

show system storage invoke-on other-routing-engine

```

user@host> show system storage invoke-on other-routing-engine
rel:

```

```

-----
Filesystem      Size      Used      Avail  Capacity  Mounted on
/dev/ad0s1a     3.3G      440M      2.6G     14%      /
devfs           1.0K      1.0K          0B     100%    /dev
/dev/md0        76M       76M          0B     100%    /packages/mnt/jbase
/dev/md1        40M       40M          0B     100%
/packages/mnt/jkernel64-14.1-20140407.1
/dev/md2        219M     219M          0B     100%
/packages/mnt/jpfe-T-14.1-20140407.1
/dev/md3        5.4M      5.4M          0B     100%
/packages/mnt/jdocs-14.1-20140407.1
/dev/md4        116M     116M          0B     100%
/packages/mnt/jroute-14.1-20140407.1
/dev/md5        44M      44M          0B     100%
/packages/mnt/jcrypto64-14.1-20140407.1
/dev/md6        70M      70M          0B     100%
/packages/mnt/jpfe-common-14.1-20140407.1
/dev/md7        182K     182K          0B     100%
/packages/mnt/jplatform-14.1-20140407.1
/dev/md8        499M     499M          0B     100%
/packages/mnt/jruntime-14.1-20140407.1
/dev/md9        41M      41M          0B     100%
/packages/mnt/jruntime64-14.1-20140407.1
/dev/md10       12M      12M          0B     100%
/packages/mnt/py-base-i386-14.1-20140407.1
/dev/md11       3.2G      8.0K        2.9G      0% /tmp
/dev/md12       3.2G     662K        2.9G      0% /mfs
/dev/ad0s1e     375M     230K       344M      0% /config
procfs         4.0K      4.0K          0B     100% /proc
/dev/ad1s1f    52G      46G        2.2G     95% /var

```

show system uptime

List of Syntax	Syntax on page 1204 Syntax (EX Series Switches) on page 1204 Syntax (QFX Series) on page 1204 Syntax (TX Matrix Router) on page 1204 Syntax (TX Matrix Plus Router) on page 1204 Syntax (MX Series Router) on page 1204
Syntax	show system uptime
Syntax (EX Series Switches)	show system uptime <all-members> <local> <member <i>member-id</i> >
Syntax (QFX Series)	show system uptime <director-group <i>name</i> > <infrastructure <i>name</i> > <interconnect-device <i>name</i> > <node-group <i>name</i> >
Syntax (TX Matrix Router)	show system uptime <all-chassis all-lcc lcc <i>number</i> scc>
Syntax (TX Matrix Plus Router)	show system uptime <detail> <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i> >
Syntax (MX Series Router)	show system uptime <all-members> <invoke-on> <local> <member <i>member-id</i> >
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc option introduced for the TX Matrix Plus router in JUNOS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the current time and information about how long the router or switch, router or switch software, and routing protocols have been running.
Options	none —Show time since the system rebooted and processes started. all-chassis —(TX Matrix routers and TX Matrix Plus routers only) (Optional) Show time since the system rebooted and processes started on all the routers in the chassis. all-lcc —(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, show time since the system rebooted and processes started for all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus

router, show time since the system rebooted and processes started for all connected T1600 or T4000 LCCs.

all-members—(EX4200 switches and MX Series routers only) (Optional) Show time since the system rebooted and processes started on all members of the Virtual Chassis configuration.

director-group *name*—(QFabric systems only) (Optional) Show time since the system rebooted and processes started on the Director group.

infrastructure *name*—(QFabric systems only) (Optional) Show time since the system rebooted and processes started on the fabric control Routing Engine and fabric manager Routing Engine.

interconnect-device *name*—(QFabric systems only) (Optional) Show time since the system rebooted and processes started on the Interconnect device.

invoke-on—(MX Series routers only) (Optional) Display the time since the system rebooted and processes started on the master Routing Engine, backup Routing Engine, or both, on a router with two Routing Engines.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, show time since the system rebooted and processes started for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, show time since the system rebooted and processes started for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Show time since the system rebooted and processes started on the local Virtual Chassis member.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Show time since the system rebooted and processes started on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

node-group *name*—(QFabric systems only) (Optional) Show time since the system rebooted and processes started on the Node group.

scc—(TX Matrix routers only) (Optional) Show time since the system rebooted and processes started for the TX Matrix router (or switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Show time since the system rebooted and processes started for the TX Matrix Plus router. Replace *number* with 0.

Additional Information By default, when you issue the **show system uptime** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

Required Privilege Level view

Related Documentation

- [Monitoring System Process Information on page 197](#)
- [Monitoring System Properties on page 198](#)
- [10-Gigabit Ethernet LAN/WAN PIC with XFP \(T640 Router\)](#)
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

List of Sample Output

- [show system uptime on page 1207](#)
- [show system uptime all-lcc \(TX Matrix Router\) on page 1207](#)
- [show system uptime all-lcc \(TX Matrix Plus Router\) on page 1207](#)
- [show system uptime \(EX Series\) on page 1208](#)
- [show system uptime \(QFX Series\) on page 1208](#)

Output Fields Table 65 on page 1206 describes the output fields for the **show system uptime** command. Output fields are listed in the approximate order in which they appear.

Table 65: show system uptime Output Fields

Field Name	Field Description
Current time	Current system time in UTC.
System booted	Date and time when the Routing Engine on the router or switch was last booted and how long it has been running.
Protocols started	Date and time when the routing protocols were last started and how long they have been running.
Last configured	Date and time when a configuration was last committed. Also shows the name of the user who issued the last commit command.
time and up	Current time, in the local time zone, and how long the router or switch has been operational.
users	Number of users logged in to the router or switch.
load averages	Load averages for the last 1 minute, 5 minutes, and 15 minutes.

Sample Output

show system uptime

```
user@host> show system uptime
Current time:      1998-10-13 19:45:47 UTC
System booted:     1998-10-12 20:51:41 UTC (22:54:06 ago)
Protocols started: 1998-10-13 19:33:45 UTC (00:12:02 ago)
Last configured:   1998-10-13 19:33:45 UTC (00:12:02 ago) by abc
12:45PM up 22:54, 2 users, load averages: 0.07, 0.02, 0.01
```

show system uptime all-lcc (TX Matrix Router)

```
user@host> show system uptime all-lcc
lcc0-re0:
-----
Current time: 2004-09-13 09:55:35 PDT
System booted: 2004-09-13 03:13:55 PDT (06:41:40 ago)
Last configured: 2004-09-13 03:17:48 PDT (06:37:47 ago) by root
9:55AM PDT up 6:42, 1 user, load averages: 0.02, 0.03, 0.00
lcc2-re0:
-----
Current time: 2004-09-13 09:55:35 PDT
System booted: 2004-09-12 03:23:43 PDT (1d 06:31 ago)
Last configured: 2004-09-13 03:05:36 PDT (06:49:59 ago) by root
9:55AM PDT up 1 day, 6:32, 1 user, load averages: 0.02, 0.01, 0.00
```

show system uptime all-lcc (TX Matrix Plus Router)

```
user@host> show system uptime all-lcc
sfc0-re0:
-----
Current time: 2009-05-25 00:24:30 PDT
System booted: 2009-05-24 06:39:33 PDT (17:44:57 ago)
Protocols started: 2009-05-24 06:40:30 PDT (17:44:00 ago)
Last configured: 2009-05-24 06:33:27 PDT (17:51:03 ago) by gregdo
12:24AM up 17:45, 2 users, load averages: 0.07, 0.05, 0.01

lcc0-re0:
-----
Current time: 2009-05-25 00:24:30 PDT
System booted: 2009-05-24 06:39:46 PDT (17:44:44 ago)
error: the routing subsystem is not running
Last configured: 2009-05-24 06:40:47 PDT (17:43:43 ago) by root
12:24AM up 17:45, 0 users, load averages: 0.00, 0.00, 0.00

lcc1-re0:
-----
Current time: 2009-05-25 00:24:30 PDT
System booted: 2009-05-24 06:39:38 PDT (17:44:52 ago)
error: the routing subsystem is not running
Last configured: 2009-05-24 06:40:18 PDT (17:44:12 ago) by root
12:24AM up 17:45, 0 users, load averages: 0.00, 0.00, 0.00

lcc2-re0:
-----
Current time: 2009-05-25 00:24:30 PDT
System booted: 2009-05-24 06:39:48 PDT (17:44:42 ago)
error: the routing subsystem is not running
Last configured: 2009-05-24 06:40:44 PDT (17:43:46 ago) by root
12:24AM up 17:45, 0 users, load averages: 0.00, 0.00, 0.00
```

lcc3-re0:

```
-----
Current time: 2009-05-25 00:24:30 PDT
System booted: 2009-05-24 06:39:44 PDT (17:44:46 ago)
error: the routing subsystem is not running
Last configured: 2009-05-24 06:40:08 PDT (17:44:22 ago) by root
12:24AM up 17:45, 0 users, load averages: 0.00, 0.00, 0.00
```

show system uptime (EX Series)

```
user@switch> show system uptime
Current time: 2014-03-12 16:39:56 UTC
System booted: 2014-03-12 14:58:05 UTC (01:41:51 ago)
Protocols started: 2014-03-12 14:59:48 UTC (01:40:08 ago)
Last configured: 2014-03-12 14:58:58 UTC (01:40:58 ago) by root
4:39PM up 1:42, 4 users, load averages: 0.02, 0.02, 0.00
```

show system uptime (QFX Series)

```
user@switch> show system uptime
Current time: 2010-08-27 03:12:30 PDT
System booted: 2010-08-13 17:11:54 PDT (1w6d 10:00 ago)
Protocols started: 2010-08-13 17:13:56 PDT (1w6d 09:58 ago)
Last configured: 2010-08-26 05:54:00 PDT (21:18:30 ago) by user
3:12AM up 13 days, 10:01, 3 users, load averages: 0.00, 0.00, 0.00
```

show system users

List of Syntax	Syntax on page 1209 Syntax (TX Matrix Router) on page 1209 Syntax (TX Matrix Plus Router) on page 1209 Syntax (MX Series Router) on page 1209
Syntax	show system users <no-resolve>
Syntax (TX Matrix Router)	show system users <all-chassis all-lcc lccnumber scc> <no-resolve>
Syntax (TX Matrix Plus Router)	show system users <detail> <all-chassis all-lcc lcc number sfc number> <no-resolve>
Syntax (MX Series Router)	show system users <all-members> <local> <member member-id> <no-resolve>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in JUNOS OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	List information about the users who are currently logged in to the router or switch.



NOTE: The **show system users** command lists the information about administrative users that are logged in to a router or switch using the CLI, J-Web, or an SSH client. The output does not list information about web users or automated users that are logged in from a remote client application using Junos XML APIs, such as NETCONF.

- Options** **none**—List information about the users who are currently logged in to the router or switch.
- all-chassis**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Show users currently logged in to all the routers in the chassis.
- all-lcc**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, show users currently logged in to all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus router, show users currently logged in to all connected T1600 or T4000 LCCs.

all-members—(MX Series routers only) (Optional) Display users currently logged in to all members of the Virtual Chassis configuration.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, show users currently logged in to a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, show users currently logged in to a specific router that is connected to the TX Matrix Plus router. Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display users currently logged in to the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display users currently logged in to the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

no-resolve—(Optional) Do not attempt to resolve IP addresses to hostnames.

scc—(TX Matrix routers only) (Optional) Show users currently logged in to the TX Matrix router (or switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Show users currently logged in to the TX Matrix Plus router. Replace *number* with 0.

Additional Information By default, when you issue the **show system users** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

Required Privilege Level view

Related Documentation • [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

List of Sample Output [show system users on page 1211](#)
[show system users lcc no-resolve \(TX Matrix, TX Matrix Plus Router\) on page 1211](#)
[show system users \(TX Matrix Plus Router\) on page 1211](#)

[show system users \(QFX Series\) on page 1212](#)

[show system users no-resolve \(QFX Series\) on page 1212](#)

Output Fields [Table 66 on page 1211](#) describes the output fields for the **show system users** command. Output fields are listed in the approximate order in which they appear.

Table 66: show system users Output Fields

Field Name	Field Description
<i>time and up</i>	Current time, in the local time zone, and how long the router or switch has been operational.
<i>users</i>	Number of users logged in to the router or switch.
<i>load averages</i>	Load averages for the last 1 minute, 5 minutes, and 15 minutes.
<i>USER</i>	Username.
<i>TTY</i>	Terminal through which the user is logged in.
<i>FROM</i>	System from which the user has logged in. A hyphen indicates that the user is logged in through the console.
<i>LOGIN@</i>	Time when the user logged in.
<i>IDLE</i>	How long the user has been idle.
<i>WHAT</i>	Processes that the user is running.

Sample Output

show system users

```
user@host> show system users
 7:30PM up 4 days, 2:26, 2 users, load averages: 0.07, 0.02, 0.01
USER   TTY FROM           LOGIN@  IDLE WHAT
root   d0  -               Fri05PM 4days -csh (csh)
blue   p0  leve15.company.net 7:30PM  - cli
```

show system users lcc no-resolve (TX Matrix, TX Matrix Plus Router)

```
user@host> show system users lcc 2 no-resolve
```

```
lcc2-re0:
-----
10:34AM PDT up 1 day, 7:11, 5 users, load averages: 0.03, 0.01, 0.00
USER   TTY FROM           LOGIN@  IDLE WHAT
root   d0  -               3:21AM  7:12 /bin/csh
user1   p0  scc-re0         10:15AM  - telnet hostA
user1   p1  scc-re0         10:16AM  - telnet hostA
user1   p2  scc-re0         10:19AM  - telnet hostA
user1   p3  scc-re0         10:24AM  - telnet hostA
```

show system users (TX Matrix Plus Router)

```
user@host> show system users
```

```
sfc0-re0:
```

```
-----
1:41AM up 26 mins, 3 users, load averages: 0.08, 0.04, 0.03
USER    TTY    FROM                                LOGIN@  IDLE WHAT
user2    p0      10.209.208.123                     1:18AM   21 cli
user2    p1      172.17.29.207                      1:37AM    2 cli
user2    p2      172.17.28.19                      1:40AM    - cli
```

```
lcc0-re0:
```

```
-----
1:41AM up 26 mins, 0 users, load averages: 0.00, 0.00, 0.03
```

```
lcc1-re0:
```

```
-----
1:41AM up 26 mins, 0 users, load averages: 0.00, 0.02, 0.03
```

```
lcc2-re0:
```

```
-----
1:41AM up 26 mins, 0 users, load averages: 0.16, 0.06, 0.02
```

```
lcc3-re0:
```

```
-----
1:41AM up 26 mins, 0 users, load averages: 0.12, 0.04, 0.04
```

```
user3@aj> show system users
```

```
sfc0-re0:
```

```
-----
1:42AM up 28 mins, 4 users, load averages: 0.02, 0.03, 0.02
USER    TTY    FROM                                LOGIN@  IDLE WHAT
user    p0      device1.example.com                1:18AM   22 cli
user    p1      device2.example.com                1:37AM    - cli
user    p2      device3.example.com                1:40AM    - cli
user    p3      device4.example.com                1:42AM    - -csh (csh)
```

```
lcc0-re0:
```

```
-----
1:42AM up 28 mins, 0 users, load averages: 0.02, 0.01, 0.03
```

```
lcc1-re0:
```

```
-----
1:42AM up 28 mins, 0 users, load averages: 0.07, 0.04, 0.03
```

```
lcc2-re0:
```

```
-----
1:42AM up 27 mins, 0 users, load averages: 0.07, 0.06, 0.02
```

```
lcc3-re0:
```

```
-----
1:42AM up 28 mins, 0 users, load averages: 0.05, 0.04, 0.04
```

show system users (QFX Series)

```
user@switch> show system users
```

```
USER    TTY    FROM                                LOGIN@  IDLE WHAT
tlewis   p0      172.22.18.117                     2:54AM   39 -cli (cli)
tlewis   p1      172.22.18.117                     3:01AM    - -cli (cli)
tcheng   p2      172.22.17.197                     3:08AM   11 -cli (cli)
```

show system users no-resolve (QFX Series)

```
user@switch> show system users no-resolve
```

USER	TTY	FROM	LOGIN@	IDLE	WHAT
tlewis	p0	172.22.18.117	2:54AM	39	-cli (cli)
tlewis	p1	172.22.18.117	3:01AM	-	-cli (cli)
tcheng	p2	172.22.17.197	3:08AM	11	-cli (cli)

show system virtual-memory

List of Syntax	Syntax on page 1214 Syntax (EX Series) on page 1214 Syntax (TX Matrix Router) on page 1214 Syntax (TX Matrix Plus Router) on page 1214 Syntax (MX Series Router) on page 1214 Syntax (QFX Series) on page 1214
Syntax	show system virtual-memory
Syntax (EX Series)	show system virtual-memory <all-members> <local> <member <i>member-id</i> >
Syntax (TX Matrix Router)	show system virtual-memory <all-chassis all-lcc lcc <i>number</i> scc>
Syntax (TX Matrix Plus Router)	show system virtual-memory <all-chassis all-lcc lcc <i>number</i> sfc <i>number</i> >
Syntax (MX Series Router)	show system virtual-memory <all-members> <local> <member <i>member-id</i> >
Syntax (QFX Series)	show system virtual-memory <infrastructure <i>name</i> > <interconnect-device <i>name</i> > <node-group <i>name</i> >
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the usage of Junos OS kernel memory listed first by size of allocation and then by type of usage. Use the show system virtual-memory command for troubleshooting with Juniper Networks Customer Support.
Options	none —Display kernel dynamic memory usage information. all-chassis —(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display kernel dynamic memory usage information for all chassis. all-lcc —(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display kernel dynamic memory usage information for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display kernel dynamic memory usage information for all connected T1600 or T4000 LCCs.

all-members—(EX4200 switches and MX Series routers only) (Optional) Display kernel dynamic memory usage information for all members of the Virtual Chassis configuration.

infrastructure *name*—(QFabric systems only) (Optional) Display kernel dynamic memory usage information for the fabric control Routing Engine and fabric manager Routing Engine.

interconnect-device *name*—(QFabric systems only) (Optional) Display kernel dynamic memory usage information for the Interconnect device.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display kernel dynamic memory usage information for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display kernel dynamic memory usage information for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Display kernel dynamic memory usage information for the local Virtual Chassis member.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Display kernel dynamic memory usage information for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

node-group *name*—(QFabric systems only) (Optional) Display kernel dynamic memory usage information for the Node group.

scc—(TX Matrix routers only) (Optional) Display kernel dynamic memory usage information for the TX Matrix router (or switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Display kernel dynamic memory usage information for the TX Matrix Plus router. Replace *number* with 0.

Additional Information By default, when you issue the **show system virtual-memory** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix

or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.



NOTE: The `show system virtual-memory` command with the `| display XML` pipe option now displays XML output for the command in the parent tags: `<vmstat-memstat-malloc>`, `<vmstat-memstat-zone>`, `<vmstat-sumstat>`, `<vmstat-intr>`, and `<vmstat-kernel-state>` with each child element as a separate XML tag. In Junos OS Releases 10.1 and earlier, the `| display XML` option for this command does not have an XML API element and the entire output is displayed in a single `<output>` tag element.

Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Routing Matrix with a TX Matrix Plus Router Solutions Page
List of Sample Output	show system virtual-memory on page 1218 show system virtual-memory scc (TX Matrix Router) on page 1222 show system virtual-memory sfc (TX Matrix Plus Router) on page 1223 show system virtual-memory display xml on page 1226 show system virtual-memory (QFX Series) on page 1249
Output Fields	Table 67 on page 1217 lists the output fields for the <code>show system virtual-memory</code> command. Output fields are listed in the approximate order in which they appear.

Table 67: show system virtual-memory Output Fields

Field Name	Field Description
Memory statistics by bucket size	
Size	Memory block size (bytes). The kernel memory allocator appropriates blocks of memory whose size is exactly a power of 2.
In Use	Number of memory blocks of this size that are in use (bytes).
Free	Number of memory blocks of this size that are free (bytes).
Requests	Number of memory allocation requests made.
HighWater	Maximum value the free list can have. Once the system starts reclaiming physical memory, it continues until the free list is increased to this value.
Couldfree	Total number of times that the free elements for a bucket size exceed the high-water mark for that bucket size.
Memory usage type by bucket size	
Size	Memory block size (bytes).
Type(s)	Kernel modules that are using these memory blocks. For a definition of each type, refer to a FreeBSD book.
Memory statistics by type	
Type	Kernel module that is using dynamic memory.
InUse	Number of memory blocks used by this type. The number is rounded up.
MemUse	Amount of memory in use, in kilobytes (KB).
HighUse	Maximum memory ever used by this type.
Limit	Maximum memory that can be allocated to this type.
Requests	Total number of dynamic memory allocation requests this type has made.
Type Limit	Number of times requests were blocked for reaching the maximum limit.
Kern Limit	Number of times requests were blocked for the kernel map.
Size(s)	Memory block sizes this type is using.
Memory Totals	
In Use	Total kernel dynamic memory in use (bytes, rounded up).
Free	Total kernel dynamic memory free (bytes, rounded up).

Table 67: show system virtual-memory Output Fields (*continued*)

Field Name	Field Description
Requests	Total number of memory allocation requests.
ITEM	Kernel module that is using memory.
Size	Memory block size (bytes).
Limit	Maximum memory that can be allocated to this type.
Used	Number of memory blocks used by this type. The number is rounded up.
Free	Number of memory blocks available to this type.
Requests	Total number of memory allocation requests this type has made.
interrupt	Timer events and scheduling interruptions.
total	Total number of interruptions for each type.
rate	Interruption rate.
Total	Total for all interruptions.

Sample Output

show system virtual-memory

```

user@host> show system virtual-memory
Memory statistics by bucket size
Size    In Use    Free    Requests  HighWater  Couldfree
16      906      118     154876    1280       0
32      455      313     209956    640        0
64      4412     260     75380     320        20
128     3200     32      19361     160        81
256     1510     10      8844      80         4
512     446      2        5085      40         0
1K      18       2        5901      20         0
2K      1128     2        4445      10        1368
4K      185      1         456       5          0
8K       5       1        2653      5          0
16K     181      0         233       5          0
32K      2       0        1848      5          0
64K     20       0         22        5          0
128K     5       0          5        5          0
256K     2       0          2        5          0
512K     1       0          1        5          0

Memory usage type by bucket size
Size    Type(s)
16      uc_devlist, nexusdev, iftable, temp, devbuf, atexit, COS, BPF,
        DEVFS mount, DEVFS node, vnodes, mount, pcb, soname, proc-args, kld,
        MD disk, rman, ATA generic, bus, sysctl, ippool, pfestat, ifstate,

```



```

pfe_ipc, mkey, rtable, ifmaddr, ipfw, rnode
32 atkbddev, dirrem, mkdir, diradd, freefile, freefrag, indirdep,
bmsafemap, newblk, temp, devbuf, COS, vnodes, cluster_save buffer,
pcb, soname, proc-args, sigio, kld, Gzip trees, taskqueue, SWAP,
eventhandler, bus, sysctl, uidinfo, subproc, pgrp, pfestat, itable32,
ifstate, pfe_ipc, mkey, rtable, ifmaddr, ipfw, rnode, rtnexthop
64 isadev, iftable, MFS node, allocindir, allocdirect, pagedep, temp,
devbuf, lockf, COS, NULLFS hash, DEVFS name, vnodes,
cluster_save buffer, vfscache, pcb, soname, proc-args, file,
AR driver, AD driver, Gzip trees, rman, eventhandler, bus, sysctl,
subproc, pfestat, pic, ifstate, pfe_ipc, mkey, ifaddr, rtable, ipfw
128 ZONE, freeblks, inodedep, temp, devbuf, zombie, COS, DEVFS node,
vnodes, mount, vfscache, pcb, soname, proc-args, ttys, dev_t,
timecounter, kld, Gzip trees, ISOFS node, bus, uidinfo, cred,
session, pic, itable16, ifstate, pfe_ipc, rtable, ifstat, metrics,
rtnexthop, iffamilly
256 iflogical, iftable, MFS node, FFS node, newblk, temp, devbuf,
NFS daemon, vnodes, proc-args, kqueue, file desc, Gzip trees, bus,
subproc, itable16, ifstate, pfe_ipc, sysctl, rtnexthop
512 UFS mount, temp, devbuf, mount, BIO buffer, ptys, ttys, AR driver,
Gzip trees, ISOFS mount, msg, iocltops, ATA generic, bus, proc,
pfestat, lr, ifstate, pfe_ipc, rtable, ipfw, ifstat, rtnexthop
1K iftable, temp, devbuf, NQ NFS Lease, kqueue, kld, AD driver,
Gzip trees, sem, MD disk, bus, ifstate, pfe_ipc, ipfw
2K uc_devlist, UFS mount, temp, devbuf, BIO buffer, pcb, AR driver,
Gzip trees, iocltops, bus, ipfw, ifstat, rcache
4K memdesc, iftable, UFS mount, temp, devbuf, kld, Gzip trees, sem, msg
8K temp, devbuf, syncache, Gzip trees
16K indirdep, temp, devbuf, shm, msg
32K pagedep, kld, Gzip trees
64K VM pgdata, devbuf, MSDOSFS mount
128K UFS ihash, inodedep, NFS hash, kld, ISOFS mount
256K mbuf, vfscache
512K SWAP

```

Memory statistics by type					Type	Kern		
Type	InUse	MemUse	HighUse	Limit	Requests	Limit	Limit	Size(s)
isadev	13	1K	1K127753K	13	0	0	0	64
atkbddev	2	1K	1K127753K	2	0	0	0	32
uc_devlist	24	3K	3K127753K	24	0	0	0	16,2K
nexusdev	3	1K	1K127753K	3	0	0	0	16
memdesc	1	4K	4K127753K	1	0	0	0	4K
mbuf	1	152K	152K127753K	1	0	0	0	256K
iflogical	6	2K	2K127753K	6	0	0	0	256
iftable	17	9K	9K127753K	18	0	0	0	16,64,256,1K,4K
ZONE	15	2K	2K127753K	15	0	0	0	128
VM pgdata	1	64K	64K127753K	1	0	0	0	64K
UFS mount	12	26K	26K127753K	12	0	0	0	512,2K,4K
UFS ihash	1	128K	128K127753K	1	0	0	0	128K
MFS node	6	2K	3K127753K	35	0	0	0	64,256
FFS node	906	227K	227K127753K	1352	0	0	0	256
dirrem	0	0K	4K127753K	500	0	0	0	32
mkdir	0	0K	1K127753K	38	0	0	0	32
diradd	0	0K	6K127753K	521	0	0	0	32
freefile	0	0K	4K127753K	374	0	0	0	32
freeblks	0	0K	8K127753K	219	0	0	0	128
freefrag	0	0K	1K127753K	193	0	0	0	32
allocindir	0	0K	25K127753K	1518	0	0	0	64
indirdep	0	0K	17K127753K	76	0	0	0	32,16K
allocdirect	0	0K	10K127753K	760	0	0	0	64
bmsafemap	0	0K	1K127753K	72	0	0	0	32

newblk	1	1K	1K127753K	2279	0	0	32,256
inodedep	1	128K	175K127753K	2367	0	0	128,128K
pagedep	1	32K	33K127753K	47	0	0	64,32K
temp	1239	92K	96K127753K	8364	0	0	16,32,64K
devbuf	1413	5527K	5527K127753K	1535	0	0	16,32,64,128,256
lockf	38	3K	3K127753K	2906	0	0	64
atexit	1	1K	1K127753K	1	0	0	16
zombie	0	0K	2K127753K	3850	0	0	128
NFS hash	1	128K	128K127753K	1	0	0	128K
NQNFS Lease	1	1K	1K127753K	1	0	0	1K
NFS daemon	1	1K	1K127753K	1	0	0	256
syncache	1	8K	8K127753K	1	0	0	8K
COS	353	44K	44K127753K	353	0	0	16,32,64,128
BPF	189	3K	3K127753K	189	0	0	16
MSDOSFS mount	1	64K	64K127753K	1	0	0	64K
NULLFS hash	1	1K	1K127753K	1	0	0	64
DEVFS mount	2	1K	1K127753K	2	0	0	16
DEVFS name	487	31K	31K127753K	487	0	0	64
DEVFS node	471	58K	58K127753K	479	0	0	16,128
vnodes	28	7K	7K127753K	429	0	0	16,32,64,128,256
mount	15	8K	8K127753K	18	0	0	16,128,512
cluster_save buffer	0	0K	1K127753K	55	0	0	32,64
vfscache	1898	376K	376K127753K	3228	0	0	64,128,256K
BIO buffer	49	98K	398K127753K	495	0	0	512,2K
pcb	159	16K	17K127753K	399	0	0	16,32,64,128,2K
soname	82	10K	10K127753K	42847	0	0	16,32,64,128
proc-args	57	2K	3K127753K	2105	0	0	16,32,64,128,256
ptys	32	16K	16K127753K	32	0	0	512
ttys	254	33K	33K127753K	522	0	0	128,512
kqueue	5	3K	4K127753K	23	0	0	256,1K
sigio	1	1K	1K127753K	27	0	0	32
file	383	24K	24K127753K	16060	0	0	64
file desc	76	19K	20K127753K	3968	0	0	256
shm	1	12K	12K127753K	1	0	0	16K
dev_t	286	36K	36K127753K	286	0	0	128
timecounter	10	2K	2K127753K	10	0	0	128
kld	11	117K	122K127753K	34	0	0	16,32,128,1K,4K
AR driver	1	1K	3K127753K	5	0	0	64,512,2K
AD driver	2	2K	3K127753K	2755	0	0	64,1K
Gzip trees	0	0K	46K127753K	133848	0	0	32,64,128,256
ISOFS node	1136	142K	142K127753K	1189	0	0	128
ISOFS mount	9	132K	132K127753K	10	0	0	512,128K
sem	3	6K	6K127753K	3	0	0	1K,4K
MD disk	2	2K	2K127753K	2	0	0	16,1K
msg	4	25K	25K127753K	4	0	0	512,4K,16K
rman	59	4K	4K127753K	461	0	0	16,64
ioctlops	0	0K	2K127753K	992	0	0	512,2K
taskqueue	2	1K	1K127753K	2	0	0	32
SWAP	2	413K	413K127753K	2	0	0	32,512K
ATA generic	6	3K	3K127753K	6	0	0	16,512
eventhandler	17	1K	1K127753K	17	0	0	32,64
bus	340	30K	31K127753K	794	0	0	16,32,64,128,256
sysctl	0	0K	1K127753K	130262	0	0	16,32,64
uidinfo	4	1K	1K127753K	10	0	0	32,128
cred	22	3K	3K127753K	3450	0	0	128
subproc	156	10K	10K127753K	7882	0	0	32,64,256
proc	2	1K	1K127753K	2	0	0	512
session	12	2K	2K127753K	34	0	0	128
pgrp	16	1K	1K127753K	45	0	0	32
ippool	1	1K	1K127753K	1	0	0	16
pfestat	0	0K	1K127753K	47349	0	0	16,32,64,512

pic	5	1K	1K127753K	5	0	0	64,128
lr	1	1K	1K127753K	1	0	0	512
itable32	110	4K	4K127753K	110	0	0	32
itable16	161	26K	26K127753K	161	0	0	128,256
ifstate	694	159K	160K127753K	1735	0	0	16,32,64,128,1K
pfe_ipc	0	0K	1K127753K	56218	0	0	16,32,64,128,1K
mkey	250	4K	4K127753K	824	0	0	16,32,64
ifaddr	9	1K	1K127753K	9	0	0	64
sysctl	0	0K	1K127753K	30	0	0	256
rtable	49	6K	6K127753K	307	0	0	16,32,64,128,512
ifmaddr	22	1K	1K127753K	22	0	0	16,32
ipfw	23	10K	10K127753K	48	0	0	16,32,64,512,2K
ifstat	698	805K	805K127753K	698	0	0	128,512,2K
rcache	4	8K	8K127753K	4	0	0	2K
rnode	27	1K	1K127753K	285	0	0	16,32
metrics	1	1K	1K127753K	3	0	0	128
rtnexthop	57	9K	9K127753K	312	0	0	32,128,256,512
iffamily	12	2K	2K127753K	12	0	0	128

Memory Totals:	In Use	Free	Requests
	9311K	54K	489068

ITEM	SIZE	LIMIT	USED	FREE	REQUESTS
PIPE:	192,	0,	4,	81,	4422
SWAPMETA:	160,	95814,	0,	0,	0
unpcb:	160,	0,	114,	36,	279
ripcb:	192,	25330,	5,	37,	5
syncache:	128,	15359,	0,	64,	5
tcpcb:	576,	25330,	23,	12,	32
udpcb:	192,	25330,	14,	28,	255
socket:	256,	25330,	246,	26,	819
KNOTE:	96,	0,	27,	57,	71
NFSNODE:	352,	0,	0,	0,	0
NFSMOUNT:	544,	0,	0,	0,	0
VNODE:	224,	0,	2778,	43,	2778
NAMEI:	1024,	0,	0,	8,	40725
VMSPACE:	192,	0,	57,	71,	3906
PROC:	448,	0,	73,	17,	3923
DP fakepg:	64,	0,	0,	0,	0
PV ENTRY:	28,	499566,	44530,	152053,	1525141
MAP ENTRY:	48,	0,	1439,	134,	351075
KMAP ENTRY:	48,	35645,	179,	119,	10904
MAP:	108,	0,	7,	3,	7
VM OBJECT:	92,	0,	2575,	109,	66912

```

792644 cpu context switches
9863474 device interrupts
286510 software interrupts
390851 traps
3596829 system calls
  16 kernel threads created
 3880 fork() calls
   27 vfork() calls
    0 rfork() calls
    0 swap pager pageins
    0 swap pager pages paged in
    0 swap pager pageouts
    0 swap pager pages paged out
 380 vnode pager pageins
 395 vnode pager pages paged in
 122 vnode pager pageouts

```

```

1476 vnode pager pages paged out
    0 page daemon wakeups
    0 pages examined by the page daemon
101 pages reactivated
161722 copy-on-write faults
    0 copy-on-write optimized faults
84623 zero fill pages zeroed
83063 zero fill pages prezeroed
    7 intransit blocking page faults
535606 total VM faults taken
    0 pages affected by kernel thread creation
238254 pages affected by fork()
    2535 pages affected by vfork()
    0 pages affected by rfork()
283379 pages freed
    0 pages freed by daemon
190091 pages freed by exiting processes
17458 pages active
29166 pages inactive
    0 pages in VM cache
10395 pages wired down
134610 pages free
    4096 bytes per page
183419 total name lookups
    cache hits (90% pos + 7% neg) system 0% per-directory
    deletions 0%, falsehits 0%, toolong 0%

```

interrupt	total	rate
ata0 irq14	113338	3
mux irq7	727643	21
fxp1 irq10	1178671	34
sio0 irq4	833	0
clk irq0	3439769	99
rtc irq8	4403221	127
Total	9863475	286

```

Kernel direct memory map:
    4423 pages used
    4057340 pages maximum

```

Note: Kernel direct memory map only displays for 64 bit platform.

show system virtual-memory scc (TX Matrix Router)

```
user@host> show system virtual-memory scc
```

Memory statistics by bucket size

Size	In Use	Free	Requests	HighWater	Couldfree
16	898	126	749493	1280	0
32	2018	1310	980643	640	632
64	3490	13342	935420	320	5365

...

Memory usage type by bucket size

Size	Type(s)
16	uc_devlist, COS, BPF, DEVFS mount, DEVFS node, vnodes, mount, pcb, soname, rman, bus, sysctl, ifstate, pfe_ipc, mkey, socket, rtable, ifmaddr, ipfw, rnode, iftable, temp, devbuf, atexit, proc-args, kld, MD disk
32	atkbddev, Gzip trees, dirrem, mkdir, diradd, freefile, freefrag, indirdep, bmsafemap, newblk, tseg_qent, COS, vnodes,

...

```

Memory statistics by type
      Type  InUse MemUse HighUse Limit Requests Limit Limit Size(s)
      isadev  12   1K   1K166400K   12    0    0   64
      atkbddev  2   1K   1K166400K    2    0    0   32
      uc_devlist 24   3K   3K166400K   24    0    0  16,2K
....

Memory Totals:  In Use    Free    Requests
                  6091K   1554K   2897122

```

show system virtual-memory sfc (TX Matrix Plus Router)

```

user@host> show system virtual-memory sfc 0
sfc0-re0:

```

```

-----
      Type InUse MemUse HighUse Requests Size(s)
CAM dev queue    1    1K      -         1    64
  entropy  1024   64K      -       1024   64
  linker    487  6272K      -       1163  16,32,64,4096,32768,131072
    USB    127   10K      -        127  16,32,64,128,256,1024,2048
  lockf     46    3K      -       98418   64
  USBdev    10    2K      -         34  16,128,2048,16384
ifstateSLLNode    0    0K      -       1096   16
  devbuf  21243 15683K      -       21810
16,32,64,128,256,512,1024,2048,4096,8192,16384,32768,65536,131072
  temp    1283   151K      -      2483472
16,32,64,128,256,512,2048,4096,8192,16384,32768,65536,131072
  ip6ndp     0    0K      -          4   64
in6ifmulti     1    1K      -          1   64
in6grentry     1    1K      -          1   64
iflogical     20    5K      -         29  2048
iffamily      45    6K      -         69  32,1024,2048
rtnexthop    266   46K      -      608013  32,256,512,1024,2048,4096
  metrics    31    4K      -          54  256
  rnode     212    4K      -      607848  16,32
  rcache      4    8K      -          4  65536
  iflist      0    0K      -          6  16,64
ifdevice      11    8K      -         17  16,32768
ifstat       424   472K      -        427  512,16384,65536
  ipfw       42   23K      -         145
16,32,64,128,256,512,1024,16384,32768,65536,131072
  ifmaddr   415   11K      -        415  16,32
  rtable    329   28K      -      608066  16,32,64,128,1024,16384
  sysctl      0    0K      -      887976  16,32,64,4096,16384,32768
  ifaddr     64    5K      -          70  32,64,128
  mkey      331    6K      -      12528  16,128
  pfe_ipc     0    0K      -     7299115
16,32,64,128,256,512,1024,2048,4096,8192,16384,32768,65536,131072
  ifstate 1245054 70088K      -     3040437
16,32,64,128,256,512,1024,2048,4096,8192,16384,32768
  idxbucket    1    1K      -          1   16
  itable16  5069 1250K      -       5103  1024,4096
  itable32   157   10K      -        157   64
  itable64     2    1K      -          2  128
    lr        1    1K      -          4  16384
    pic       37    6K      -          37  64,16384
  pfestat      0    0K      -      6220  32,64,128,256,131072
  gencfg   1486   424K      -       2614  16,32,64,256,512,16384,32768,65536

```

```

        jsr      2      1K      -      22  16
        idl      1      4K      -      165
32, 64, 128, 256, 512, 1024, 2048, 8192, 16384, 32768, 65536, 131072
        rtmsg    0      0K      -      16  131072
        module  250     16K      -      250  64, 128
        mtx_pool 1       8K      -       1  64, 128
        DEVFS3   113    13K      -      114  256
        DEVFS1   106    24K      -      106  2048
        pgrp     15     1K      -      8600  64
        session  11     2K      -      2829  512
        proc      2     1K      -       2  16384
        subproc  296    572K     -     24689  2048, 131072
        cred     38     5K      -     619244  256
        plimit   18     4K      -     21311  2048
        uidinfo   3     1K      -       10  32, 512
        sysctluid 2701   82K      -     2701  16, 32, 64
        sysctltmp 0      0K      -     15572  16, 32, 64, 1024
        umtx     171    11K      -      171  64
        SWAP      2    277K      -       2  64
        bus      779   125K     -     3072  16, 32, 64, 128, 32768
        bus-sc    67    62K      -     1477
16, 32, 64, 512, 1024, 2048, 8192, 16384, 65536, 131072
        devstat   8    17K      -       8  16, 131072
        eventhandler 46    2K      -      47  32, 128
        kobj      93   186K      -     111  65536
        DEVFS      8     1K      -       9  16, 64
        rman     106     7K      -      490  16, 32, 64
        sbuf       0     0K      -     28234  16, 32, 32768, 131072

```

...

lcc0-re0:

```

-----
      Type InUse MemUse HighUse Requests Size(s)
CAM dev queue    1     1K      -       1  64
      entropy  1024    64K      -    1024  64
      linker   487   6272K     -    1163  16, 32, 64, 4096, 32768, 131072
      USB     127    10K      -     127  16, 32, 64, 128, 256, 1024, 2048
      lockf    23     2K      -   169585  64
      USBdev   10     2K      -       34  16, 128, 2048, 16384
      devbuf  5128  10760K     -     5310
16, 32, 64, 128, 256, 512, 1024, 2048, 4096, 8192, 16384, 32768, 65536, 131072
      temp   1285    151K     -    10770
16, 32, 64, 128, 256, 512, 2048, 4096, 8192, 16384, 32768, 65536, 131072
      ip6ndp    0     0K      -       4  64
      iflogical 20     5K      -      29  2048
      iffamilly 45     6K      -      69  32, 1024, 2048
      rtnexthop 189    29K      -  1211988  32, 256, 512, 1024, 2048, 4096
      metrics   11     2K      -      16  256
      rnode    135     3K      -   606391  16, 32
      rcache     4     8K      -       4  65536
      iflist     0     0K      -       6  16, 64
      ifdevice  11     8K      -      17  16, 32768
      ifstat   412   471K      -     415  512, 16384, 65536
      ipfw      42    23K      -      91
16, 32, 64, 128, 256, 512, 1024, 16384, 32768, 65536, 131072
      ifmaddr  415    11K      -      415  16, 32
      rtable   225    20K      -   606584  16, 32, 64, 128, 1024, 16384
      sysctl    0     0K      -  2302479  16, 32, 64
      ifaddr    53     4K      -       69  32, 64, 128
      mkey     133     3K      -     8974  16, 128
      pfe_ipc    0     0K      -   19035108
16, 32, 64, 128, 512, 1024, 2048, 8192, 16384, 32768, 65536, 131072

```

```

    ifstate 710270 42176K - 9583703
16,32,64,128,256,512,1024,2048,8192,16384,32768
    idxbucket 1 1K - 1 16
    itable16 5045 1245K - 1825178 1024,4096
    itable32 157 10K - 157 64
    itable64 2 1K - 2 128
    lr 1 1K - 4 16384
    pic 37 6K - 37 64,16384
    pfestat 0 0K - 1682 32,64,128,256,131072
    gencfg 1486 424K - 2812 16,32,64,256,512,16384,32768,65536
    jsr 0 0K - 22 16
    idl 0 0K - 4 32768,131072
    rtsmsg 0 0K - 3 131072
    module 250 16K - 250 64,128
    mtx_pool 1 8K - 1 64,128
    DEVFS3 108 12K - 109 256
    DEVFS1 101 23K - 101 2048
    pgrp 5 1K - 917 64
    session 5 1K - 917 512
    proc 2 1K - 2 16384
    subproc 217 441K - 4867 2048,131072
    cred 21 3K - 48719 256
    plimit 9 2K - 5255 2048
    uidinfo 2 1K - 2 32,512
    sysctluid 2786 85K - 2786 16,32,64
    sysctltmp 0 0K - 1833 16,32,64,1024
    umtx 126 8K - 126 64
    SWAP 2 277K - 2 64
    bus 780 125K - 2734 16,32,64,128,32768
    bus-sc 69 69K - 1194
16,32,64,512,1024,2048,8192,16384,65536,131072
    devstat 8 17K - 8 16,131072
    eventhandler 45 2K - 46 32,128
    kobj 93 186K - 111 65536
    DEVFS 8 1K - 9 16,64
    rman 94 6K - 477 16,32,64
    sbuf 0 0K - 532 16,32,32768,131072
    NULLFS hash 1 1K - 1 64
    taskqueue 5 1K - 5 64
    turnstiles 127 8K - 127 64
    Unitno 6 1K - 44 16,64
    ioctlops 0 0K - 1771718 16,32,64,128,8192,16384,65536,131072

    iov 0 0K - 79425 16,64,128,256,512,1024,2048,131072
    msg 4 25K - 4 32768,131072
    sem 4 7K - 4 16384,32768,131072
    shm 2 13K - 4 32768
    ttys 93 16K - 195 512,32768
    soname 31 3K - 389284 16,32,64,256
    pcb 101 16K - 4374
16,32,64,128,1024,2048,4096,16384,65536
    BIO buffer 40 80K - 750 65536
    vfscache 1 512K - 1 65536
    cluster_save buffer 0 OK - 55 32,64
    VFS hash 1 256K - 1 32,64
    vnodes 1 1K - 1 512
    mount 266 21K - 481 16,32,64,128,256,4096,32768
    vnodemarker 0 0K - 2497 16384
    pfs_nodes 25 3K - 25 128
    pfs_vncache 144 5K - 386 32
    STP 1 1K - 1 64

```

GEOM	173	15K	-	1068	
16,32,64,128,256,512,2048,16384,32768,131072					
syncache	1	8K	-	1	
16,32,64,128,256,512,2048,16384,32768,131072					
tlv_stat	0	0K	-	223	
16,32,64,128,256,512,2048,16384,32768,131072					
NFS daemon	1	8K	-	1	
16,32,64,128,256,512,2048,16384,32768,131072					
p1003.1b	1	1K	-	1	16
MD disk	9	18K	-	9	65536
ata_generic	2	2K	-	25	16,16384,32768
ISOFS mount	7	1K	-	13	512
ISOFS node	1439	135K	-	1453	128
CAM SIM	1	1K	-	1	64
CAM XPT	6	1K	-	9	16,64,16384
CAM periph	1	1K	-	1	128
ad_driver	2	1K	-	2	256
pagedep	1	64K	-	105	64
inodedep	1	256K	-	552	256
newblk	1	1K	-	327	64,4096
bmsafemap	0	0K	-	19	64
allocdirect	0	0K	-	326	128
freefrag	0	0K	-	31	32
freeblks	0	0K	-	103	2048
freefile	0	0K	-	175	32
diradd	0	0K	-	590	64
mkdir	0	0K	-	166	32
dirrem	0	0K	-	382	32
savedino	0	0K	-	283	512
UFS mount	15	36K	-	15	2048,65536,131072
ata_dma	6	1K	-	6	256
UMAHash	1	4K	-	5	4096,16384,32768,65536,131072
cdev	26	3K	-	26	256
file desc	111	25K	-	5199	16,1024,2048,16384
VM pgdata	2	65K	-	2	64
sigio	1	1K	-	27	32
kenv	30	5K	-	33	16,32,64,131072
atkbddev	2	1K	-	2	32
kqueue	0	0K	-	88	1024,4096,32768
proc-args	28	2K	-	3970	32,64,128,256,512,1024
isadev	23	2K	-	23	64
zombie	1	1K	-	4651	128
ithread	92	7K	-	92	16,64,256
legacydrv	3	1K	-	3	16
memdesc	1	4K	-	1	131072
nexusdev	2	1K	-	2	16
CAM queue	3	1K	-	3	16
KTRACE	100	10K	-	100	128
kbdmux	5	9K	-	5	128,2048,65536,131072
ITEM	SIZE	LIMIT	USED	FREE	REQUESTS
UMA Kegs:	136,	0,	71,	1,	71
...					

show system virtual-memory | display xml

```

user@host> show system virtual-memory | display xml
<rpc-reply xmlns:junos="http://xml.juniper.net/junos/10.2R1/junos">
  <system-virtual-memory-information>
    <vmstat-memstat-malloc>
      <memstat-name>CAM dev queue</memstat-name>
      <inuse>1</inuse>
    </vmstat-memstat-malloc>
  </system-virtual-memory-information>
</rpc-reply>

```



```

<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>entropy</memstat-name>
<inuse>1024</inuse>
<memuse>64</memuse>
<high-use>--</high-use>
<memstat-req>1024</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>linker</memstat-name>
<inuse>481</inuse>
<memuse>1871</memuse>
<high-use>--</high-use>
<memstat-req>1145</memstat-req>
<memstat-size>16,32,64,4096,32768,131072</memstat-size>
<memstat-name>lockf</memstat-name>
<inuse>56</inuse>
<memuse>4</memuse>
<high-use>--</high-use>
<memstat-req>5998</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>devbuf</memstat-name>
<inuse>2094</inuse>
<memuse>3877</memuse>
<high-use>--</high-use>
<memstat-req>2099</memstat-req>

<memstat-size>16,32,64,128,512,1024,4096,8192,16384,32768,65536,131072</memstat-size>

<memstat-name>temp</memstat-name>
<inuse>21</inuse>
<memuse>66</memuse>
<high-use>--</high-use>
<memstat-req>3127</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,4096,8192,16384,32768,65536,131072</memstat-size>

<memstat-name>ip6ndp</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>in6ifmulti</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>in6grenty</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>iflogical</memstat-name>
<inuse>13</inuse>
<memuse>3</memuse>
<high-use>--</high-use>
<memstat-req>13</memstat-req>

```

```
<memstat-size>64,2048</memstat-size>
<memstat-name>iffamily</memstat-name>
<inuse>28</inuse>
<memuse>4</memuse>
<high-use>--</high-use>
<memstat-req>28</memstat-req>
<memstat-size>32,1024,2048</memstat-size>
<memstat-name>rtnexthop</memstat-name>
<inuse>127</inuse>
<memuse>18</memuse>
<high-use>--</high-use>
<memstat-req>129</memstat-req>
<memstat-size>32,256,512,1024,2048,4096</memstat-size>
<memstat-name>metrics</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>5</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>inifmulti</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>3</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>ingrentry</memstat-name>
<inuse>6</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>6</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>rnode</memstat-name>
<inuse>68</inuse>
<memuse>2</memuse>
<high-use>--</high-use>
<memstat-req>76</memstat-req>
<memstat-size>16,32</memstat-size>
<memstat-name>rcache</memstat-name>
<inuse>4</inuse>
<memuse>8</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>ifdevice</memstat-name>
<inuse>4</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>ifstat</memstat-name>
<inuse>40</inuse>
<memuse>22</memuse>
<high-use>--</high-use>
<memstat-req>40</memstat-req>
<memstat-size>512,16384,32768</memstat-size>
<memstat-name>ipfw</memstat-name>
<inuse>42</inuse>
<memuse>23</memuse>
<high-use>--</high-use>
<memstat-req>91</memstat-req>
```

```

<memstat-size>16,32,64,128,256,512,1024,16384,32768,65536,131072</memstat-size>
  <memstat-name>ifmaddr</memstat-name>
  <inuse>103</inuse>
  <memuse>3</memuse>
  <high-use>--</high-use>
  <memstat-req>103</memstat-req>
  <memstat-size>16,32</memstat-size>
  <memstat-name>rtable</memstat-name>
  <inuse>129</inuse>
  <memuse>14</memuse>
  <high-use>--</high-use>
  <memstat-req>139</memstat-req>
  <memstat-size>16,32,64,128,1024,16384</memstat-size>
  <memstat-name>sysctl</memstat-name>
  <inuse>0</inuse>
  <memuse>0</memuse>
  <high-use>--</high-use>
  <memstat-req>14847</memstat-req>
  <memstat-size>16,32,64,4096,16384,32768</memstat-size>
  <memstat-name>ifaddr</memstat-name>
  <inuse>29</inuse>
  <memuse>3</memuse>
  <high-use>--</high-use>
  <memstat-req>29</memstat-req>
  <memstat-size>64,128</memstat-size>
  <memstat-name>mkey</memstat-name>
  <inuse>345</inuse>
  <memuse>6</memuse>
  <high-use>--</high-use>
  <memstat-req>2527</memstat-req>
  <memstat-size>16,128</memstat-size>
  <memstat-name>pfe_ipc</memstat-name>
  <inuse>0</inuse>
  <memuse>0</memuse>
  <high-use>--</high-use>
  <memstat-req>1422</memstat-req>

<memstat-size>16,32,64,128,512,1024,2048,8192,16384,32768,65536,131072</memstat-size>
  <memstat-name>ifstate</memstat-name>
  <inuse>594</inuse>
  <memuse>51</memuse>
  <high-use>--</high-use>
  <memstat-req>655</memstat-req>

<memstat-size>16,32,64,128,256,1024,2048,4096,16384,32768</memstat-size>
  <memstat-name>itable16</memstat-name>
  <inuse>276</inuse>
  <memuse>52</memuse>
  <high-use>--</high-use>
  <memstat-req>294</memstat-req>
  <memstat-size>1024,4096</memstat-size>
  <memstat-name>itable32</memstat-name>
  <inuse>160</inuse>
  <memuse>10</memuse>
  <high-use>--</high-use>
  <memstat-req>160</memstat-req>
  <memstat-size>64</memstat-size>
  <memstat-name>itable64</memstat-name>
  <inuse>2</inuse>
  <memuse>1</memuse>

```

```

<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>lr</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>16384</memstat-size>
<memstat-name>pic</memstat-name>
<inuse>5</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>5</memstat-req>
<memstat-size>64,512</memstat-size>
<memstat-name>pfestat</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>162</memstat-req>
<memstat-size>16,32,128,256,16384</memstat-size>
<memstat-name>gencfg</memstat-name>
<inuse>224</inuse>
<memuse>56</memuse>
<high-use>--</high-use>
<memstat-req>540</memstat-req>
<memstat-size>16,32,64,256,512,32768,65536</memstat-size>
<memstat-name>jsr</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>idl</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>13</memstat-req>
<memstat-size>16,32,64,128,256,4096,16384,32768,131072</memstat-size>

<memstat-name>rtsmsg</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>131072</memstat-size>
<memstat-name>module</memstat-name>
<inuse>249</inuse>
<memuse>16</memuse>
<high-use>--</high-use>
<memstat-req>249</memstat-req>
<memstat-size>64,128</memstat-size>
<memstat-name>mtx_pool</memstat-name>
<inuse>1</inuse>
<memuse>8</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64,128</memstat-size>
<memstat-name>DEVFS3</memstat-name>
<inuse>109</inuse>
<memuse>12</memuse>

```

```

<high-use>--</high-use>
<memstat-req>117</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>DEVFS1</memstat-name>
<inuse>102</inuse>
<memuse>23</memuse>
<high-use>--</high-use>
<memstat-req>109</memstat-req>
<memstat-size>2048</memstat-size>
<memstat-name>pgrp</memstat-name>
<inuse>12</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>21</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>session</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>15</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>proc</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>16384</memstat-size>
<memstat-name>subproc</memstat-name>
<inuse>244</inuse>
<memuse>496</memuse>
<high-use>--</high-use>
<memstat-req>1522</memstat-req>
<memstat-size>2048,131072</memstat-size>
<memstat-name>cred</memstat-name>
<inuse>30</inuse>
<memuse>4</memuse>
<high-use>--</high-use>
<memstat-req>11409</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>plimit</memstat-name>
<inuse>17</inuse>
<memuse>4</memuse>
<high-use>--</high-use>
<memstat-req>133</memstat-req>
<memstat-size>2048</memstat-size>
<memstat-name>uidinfo</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>6</memstat-req>
<memstat-size>32,512</memstat-size>
<memstat-name>sysctlpid</memstat-name>
<inuse>1117</inuse>
<memuse>34</memuse>
<high-use>--</high-use>
<memstat-req>1117</memstat-req>
<memstat-size>16,32,64</memstat-size>
<memstat-name>sysctltmp</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>

```

```
<memstat-req>743</memstat-req>
<memstat-size>16,32,64,1024</memstat-size>
<memstat-name>umtx</memstat-name>
<inuse>144</inuse>
<memuse>9</memuse>
<high-use>--</high-use>
<memstat-req>144</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>SWAP</memstat-name>
<inuse>2</inuse>
<memuse>209</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>bus</memstat-name>
<inuse>496</inuse>
<memuse>55</memuse>
<high-use>--</high-use>
<memstat-req>1196</memstat-req>
<memstat-size>16,32,64,128,32768</memstat-size>
<memstat-name>bus-sc</memstat-name>
<inuse>23</inuse>
<memuse>33</memuse>
<high-use>--</high-use>
<memstat-req>335</memstat-req>

<memstat-size>16,32,64,512,1024,2048,8192,16384,65536,131072</memstat-size>
<memstat-name>devstat</memstat-name>
<inuse>10</inuse>
<memuse>21</memuse>
<high-use>--</high-use>
<memstat-req>10</memstat-req>
<memstat-size>16,131072</memstat-size>
<memstat-name>eventhandler</memstat-name>
<inuse>35</inuse>
<memuse>2</memuse>
<high-use>--</high-use>
<memstat-req>36</memstat-req>
<memstat-size>32,128</memstat-size>
<memstat-name>kobj</memstat-name>
<inuse>93</inuse>
<memuse>186</memuse>
<high-use>--</high-use>
<memstat-req>111</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>DEVFS</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>9</memstat-req>
<memstat-size>16,64</memstat-size>
<memstat-name>rman</memstat-name>
<inuse>71</inuse>
<memuse>5</memuse>
<high-use>--</high-use>
<memstat-req>433</memstat-req>
<memstat-size>16,32,64</memstat-size>
<memstat-name>sbuf</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
```

```

<memstat-req>522</memstat-req>
<memstat-size>16,32,32768,131072</memstat-size>
<memstat-name>NULLFS hash</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>taskqueue</memstat-name>
<inuse>5</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>5</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>turnstiles</memstat-name>
<inuse>145</inuse>
<memuse>10</memuse>
<high-use>--</high-use>
<memstat-req>145</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>Unitno</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>44</memstat-req>
<memstat-size>16,64</memstat-size>
<memstat-name>iocltops</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>27622</memstat-req>
<memstat-size>16,64,8192,16384,131072</memstat-size>
<memstat-name>iov</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>18578</memstat-req>
<memstat-size>16,64,128,256,512,1024,2048,131072</memstat-size>
<memstat-name>msg</memstat-name>
<inuse>4</inuse>
<memuse>25</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>32768,131072</memstat-size>
<memstat-name>sem</memstat-name>
<inuse>4</inuse>
<memuse>7</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16384,32768,131072</memstat-size>
<memstat-name>shm</memstat-name>
<inuse>9</inuse>
<memuse>20</memuse>
<high-use>--</high-use>
<memstat-req>14</memstat-req>
<memstat-size>32768</memstat-size>
<memstat-name>ttys</memstat-name>
<inuse>321</inuse>
<memuse>61</memuse>
<high-use>--</high-use>
<memstat-req>528</memstat-req>

```

```
<memstat-size>512,32768</memstat-size>
<memstat-name>ptys</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>mbuf_tag</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>23383</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>soname</memstat-name>
<inuse>115</inuse>
<memuse>12</memuse>
<high-use>--</high-use>
<memstat-req>24712</memstat-req>
<memstat-size>16,32,64,256</memstat-size>
<memstat-name>pcb</memstat-name>
<inuse>216</inuse>
<memuse>33</memuse>
<high-use>--</high-use>
<memstat-req>484</memstat-req>

<memstat-size>16,32,64,128,1024,2048,4096,16384,32768,65536</memstat-size>
<memstat-name>BIO buffer</memstat-name>
<inuse>43</inuse>
<memuse>86</memuse>
<high-use>--</high-use>
<memstat-req>405</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>vfscache</memstat-name>
<inuse>1</inuse>
<memuse>256</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>cluster_save buffer</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>32,64</memstat-size>
<memstat-name>VFS hash</memstat-name>
<inuse>1</inuse>
<memuse>128</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>32,64</memstat-size>
<memstat-name>vnodes</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>mount</memstat-name>
<inuse>290</inuse>
<memuse>23</memuse>
<high-use>--</high-use>
<memstat-req>535</memstat-req>
```



```

<memstat-size>16,32,64,128,256,4096,32768</memstat-size>
<memstat-name>vnodemarker</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>498</memstat-req>
<memstat-size>16384</memstat-size>
<memstat-name>pfs_nodes</memstat-name>
<inuse>25</inuse>
<memuse>3</memuse>
<high-use>--</high-use>
<memstat-req>25</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>pfs_vncache</memstat-name>
<inuse>27</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>53</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>STP</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>GEOM</memstat-name>
<inuse>146</inuse>
<memuse>11</memuse>
<high-use>--</high-use>
<memstat-req>1042</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
<memstat-name>syncache</memstat-name>
<inuse>1</inuse>
<memuse>8</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
<memstat-name>tlv_stat</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>8</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
<memstat-name>NFS_daemon</memstat-name>
<inuse>1</inuse>
<memuse>8</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
<memstat-name>p1003.1b</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>MD_disk</memstat-name>
<inuse>10</inuse>

```

```
<memuse>20</memuse>
<high-use>--</high-use>
<memstat-req>10</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>ata_generic</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>6</memstat-req>
<memstat-size>16,16384,32768</memstat-size>
<memstat-name>ISOFs mount</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>15</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>ISOFs node</memstat-name>
<inuse>1440</inuse>
<memuse>135</memuse>
<high-use>--</high-use>
<memstat-req>1457</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>CAM SIM</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>CAM XPT</memstat-name>
<inuse>6</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>9</memstat-req>
<memstat-size>16,64,16384</memstat-size>
<memstat-name>CAM periph</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>ad_driver</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>pagedep</memstat-name>
<inuse>1</inuse>
<memuse>32</memuse>
<high-use>--</high-use>
<memstat-req>106</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>inodedep</memstat-name>
<inuse>1</inuse>
<memuse>128</memuse>
<high-use>--</high-use>
<memstat-req>464</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>newblk</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
```

```

<high-use>--</high-use>
<memstat-req>336</memstat-req>
<memstat-size>64,4096</memstat-size>
<memstat-name>bmsafemap</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>63</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>allocdirect</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>320</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>indirdep</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>17</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>allocindir</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>15</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>freefrag</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>12</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>freeblks</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>40</memstat-req>
<memstat-size>2048</memstat-size>
<memstat-name>freefile</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>101</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>diradd</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>465</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>mkdir</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>136</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>dirrem</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>

```

```
<memstat-req>168</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>newdirblk</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>saveditino</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>157</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>UFS mount</memstat-name>
<inuse>15</inuse>
<memuse>36</memuse>
<high-use>--</high-use>
<memstat-req>15</memstat-req>
<memstat-size>2048,65536,131072</memstat-size>
<memstat-name>ata_dma</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>UMAHash</memstat-name>
<inuse>1</inuse>
<memuse>2</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>4096,16384,32768,65536</memstat-size>
<memstat-name>cdev</memstat-name>
<inuse>22</inuse>
<memuse>3</memuse>
<high-use>--</high-use>
<memstat-req>22</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>file desc</memstat-name>
<inuse>141</inuse>
<memuse>32</memuse>
<high-use>--</high-use>
<memstat-req>1583</memstat-req>
<memstat-size>16,1024,2048,16384</memstat-size>
<memstat-name>VM pgdata</memstat-name>
<inuse>2</inuse>
<memuse>65</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>sigio</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>20</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>kenv</memstat-name>
<inuse>24</inuse>
<memuse>5</memuse>
<high-use>--</high-use>
<memstat-req>27</memstat-req>
```

```

<memstat-size>16,32,64,131072</memstat-size>
<memstat-name>atkbddev</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>kqueue</memstat-name>
<inuse>15</inuse>
<memuse>9</memuse>
<high-use>--</high-use>
<memstat-req>19</memstat-req>
<memstat-size>1024,4096,32768</memstat-size>
<memstat-name>proc-args</memstat-name>
<inuse>57</inuse>
<memuse>3</memuse>
<high-use>--</high-use>
<memstat-req>1001</memstat-req>
<memstat-size>16,32,64,128,256,512,1024</memstat-size>
<memstat-name>isadev</memstat-name>
<inuse>21</inuse>
<memuse>2</memuse>
<high-use>--</high-use>
<memstat-req>21</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>zombie</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>1278</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>ithread</memstat-name>
<inuse>69</inuse>
<memuse>5</memuse>
<high-use>--</high-use>
<memstat-req>69</memstat-req>
<memstat-size>16,64,256</memstat-size>
<memstat-name>legacydrv</memstat-name>
<inuse>4</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>memdesc</memstat-name>
<inuse>1</inuse>
<memuse>4</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>131072</memstat-size>
<memstat-name>nexusdev</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>CAM queue</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>3</memstat-req>
<memstat-size>16</memstat-size>

```

```

    <memstat-name>$PIR</memstat-name>
    <inuse>4</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>4</memstat-req>
    <memstat-size>32</memstat-size>
    <memstat-name>KTRACE</memstat-name>
    <inuse>100</inuse>
    <memuse>10</memuse>
    <high-use>--</high-use>
    <memstat-req>100</memstat-req>
    <memstat-size>128</memstat-size>
    <memstat-name>kbdmux</memstat-name>
    <inuse>5</inuse>
    <memuse>9</memuse>
    <high-use>--</high-use>
    <memstat-req>5</memstat-req>
    <memstat-size>128,2048,65536,131072</memstat-size>
  </vmstat-memstat-malloc>
  <vmstat-memstat-zone>
    <zone-name>UMA Kegs:</zone-name>
    <zone-size>136</zone-size>
    <count-limit>0</count-limit>
    <used>71</used>
    <free>1</free>
    <zone-req>71</zone-req>
    <zone-name>UMA Zones:</zone-name>
    <zone-size>120</zone-size>
    <count-limit>0</count-limit>
    <used>71</used>
    <free>19</free>
    <zone-req>71</zone-req>
    <zone-name>UMA Slabs:</zone-name>
    <zone-size>64</zone-size>
    <count-limit>0</count-limit>
    <used>490</used>
    <free>41</free>
    <zone-req>579</zone-req>
    <zone-name>UMA RCntSlabs:</zone-name>
    <zone-size>104</zone-size>
    <count-limit>0</count-limit>
    <used>276</used>
    <free>20</free>
    <zone-req>276</zone-req>
    <zone-name>UMA Hash:</zone-name>
    <zone-size>128</zone-size>
    <count-limit>0</count-limit>
    <used>4</used>
    <free>26</free>
    <zone-req>5</zone-req>
    <zone-name>16 Bucket:</zone-name>
    <zone-size>76</zone-size>
    <count-limit>0</count-limit>
    <used>30</used>
    <free>20</free>
    <zone-req>30</zone-req>
    <zone-name>32 Bucket:</zone-name>
    <zone-size>140</zone-size>
    <count-limit>0</count-limit>
    <used>33</used>
    <free>23</free>

```

```

<zone-req>33</zone-req>
<zone-name>64 Bucket:</zone-name>
<zone-size>268</zone-size>
<count-limit>0</count-limit>
<used>33</used>
<free>9</free>
<zone-req>33</zone-req>
<zone-name>128 Bucket:</zone-name>
<zone-size>524</zone-size>
<count-limit>0</count-limit>
<used>49</used>
<free>0</free>
<zone-req>49</zone-req>
<zone-name>VM OBJECT:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>2111</used>
<free>79</free>
<zone-req>25214</zone-req>
<zone-name>MAP:</zone-name>
<zone-size>160</zone-size>
<count-limit>0</count-limit>
<used>7</used>
<free>41</free>
<zone-req>7</zone-req>
<zone-name>KMAP ENTRY:</zone-name>
<zone-size>68</zone-size>
<count-limit>35336</count-limit>
<used>19</used>
<free>149</free>
<zone-req>2397</zone-req>
<zone-name>MAP ENTRY:</zone-name>
<zone-size>68</zone-size>
<count-limit>0</count-limit>
<used>2031</used>
<free>153</free>
<zone-req>62417</zone-req>
<zone-name>PV ENTRY:</zone-name>
<zone-size>24</zone-size>
<count-limit>509095</count-limit>
<used>57177</used>
<free>6333</free>
<zone-req>1033683</zone-req>
<zone-name>DP fakepg:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>mt_zone:</zone-name>
<zone-size>64</zone-size>
<count-limit>0</count-limit>
<used>238</used>
<free>57</free>
<zone-req>238</zone-req>
<zone-name>16:</zone-name>
<zone-size>16</zone-size>
<count-limit>0</count-limit>
<used>2114</used>
<free>119</free>
<zone-req>80515</zone-req>

```

```
<zone-name>32:</zone-name>
<zone-size>32</zone-size>
<count-limit>0</count-limit>
<used>1335</used>
<free>134</free>
<zone-req>10259</zone-req>
<zone-name>64:</zone-name>
<zone-size>64</zone-size>
<count-limit>0</count-limit>
<used>3529</used>
<free>129</free>
<zone-req>29110</zone-req>
<zone-name>96:</zone-name>
<zone-size>96</zone-size>
<count-limit>0</count-limit>
<used>2062</used>
<free>58</free>
<zone-req>4365</zone-req>
<zone-name>112:</zone-name>
<zone-size>112</zone-size>
<count-limit>0</count-limit>
<used>361</used>
<free>164</free>
<zone-req>24613</zone-req>
<zone-name>128:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>359</used>
<free>61</free>
<zone-req>942</zone-req>
<zone-name>160:</zone-name>
<zone-size>160</zone-size>
<count-limit>0</count-limit>
<used>364</used>
<free>44</free>
<zone-req>577</zone-req>
<zone-name>224:</zone-name>
<zone-size>224</zone-size>
<count-limit>0</count-limit>
<used>422</used>
<free>20</free>
<zone-req>1950</zone-req>
<zone-name>256:</zone-name>
<zone-size>256</zone-size>
<count-limit>0</count-limit>
<used>204</used>
<free>36</free>
<zone-req>1225</zone-req>
<zone-name>288:</zone-name>
<zone-size>288</zone-size>
<count-limit>0</count-limit>
<used>2</used>
<free>24</free>
<zone-req>10</zone-req>
<zone-name>512:</zone-name>
<zone-size>512</zone-size>
<count-limit>0</count-limit>
<used>49</used>
<free>7</free>
<zone-req>911</zone-req>
<zone-name>1024:</zone-name>
```



```
<zone-size>1024</zone-size>
<count-limit>0</count-limit>
<used>213</used>
<free>11</free>
<zone-req>1076</zone-req>
<zone-name>2048:</zone-name>
<zone-size>2048</zone-size>
<count-limit>0</count-limit>
<used>199</used>
<free>113</free>
<zone-req>640</zone-req>
<zone-name>4096:</zone-name>
<zone-size>4096</zone-size>
<count-limit>0</count-limit>
<used>144</used>
<free>7</free>
<zone-req>2249</zone-req>
<zone-name>Files:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>665</used>
<free>77</free>
<zone-req>16457</zone-req>
<zone-name>MAC labels:</zone-name>
<zone-size>20</zone-size>
<count-limit>0</count-limit>
<used>3998</used>
<free>227</free>
<zone-req>21947</zone-req>
<zone-name>PROC:</zone-name>
<zone-size>544</zone-size>
<count-limit>0</count-limit>
<used>116</used>
<free>10</free>
<zone-req>1394</zone-req>
<zone-name>THREAD:</zone-name>
<zone-size>416</zone-size>
<count-limit>0</count-limit>
<used>127</used>
<free>17</free>
<zone-req>131</zone-req>
<zone-name>KSEGRP:</zone-name>
<zone-size>88</zone-size>
<count-limit>0</count-limit>
<used>127</used>
<free>73</free>
<zone-req>131</zone-req>
<zone-name>UPCALL:</zone-name>
<zone-size>44</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>SLEEPQUEUE:</zone-name>
<zone-size>32</zone-size>
<count-limit>0</count-limit>
<used>145</used>
<free>194</free>
<zone-req>145</zone-req>
<zone-name>VMSPACE:</zone-name>
<zone-size>268</zone-size>
```

```
<count-limit>0</count-limit>
<used>57</used>
<free>13</free>
<zone-req>1335</zone-req>
<zone-name>mbuf_packet:</zone-name>
<zone-size>256</zone-size>
<count-limit>180000</count-limit>
<used>256</used>
<free>128</free>
<zone-req>49791</zone-req>
<zone-name>mbuf:</zone-name>
<zone-size>256</zone-size>
<count-limit>180000</count-limit>
<used>50</used>
<free>466</free>
<zone-req>105183</zone-req>
<zone-name>mbuf_cluster:</zone-name>
<zone-size>2048</zone-size>
<count-limit>25190</count-limit>
<used>387</used>
<free>165</free>
<zone-req>5976</zone-req>
<zone-name>mbuf_jumbo_pagesize:</zone-name>
<zone-size>4096</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>mbuf_jumbo_9k:</zone-name>
<zone-size>9216</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>mbuf_jumbo_16k:</zone-name>
<zone-size>16384</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>ACL UMA zone:</zone-name>
<zone-size>388</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>g_bio:</zone-name>
<zone-size>132</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>174</free>
<zone-req>69750</zone-req>
<zone-name>ata_request:</zone-name>
<zone-size>200</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>57</free>
<zone-req>5030</zone-req>
<zone-name>ata_composite:</zone-name>
<zone-size>192</zone-size>
<count-limit>0</count-limit>
```

```

<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>GENCFG:</zone-name>
<zone-size>72</zone-size>
<count-limit>1000004</count-limit>
<used>57</used>
<free>102</free>
<zone-req>57</zone-req>
<zone-name>VNODE:</zone-name>
<zone-size>292</zone-size>
<count-limit>0</count-limit>
<used>2718</used>
<free>25</free>
<zone-req>2922</zone-req>
<zone-name>VNODEPOLL:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>S VFS Cache:</zone-name>
<zone-size>68</zone-size>
<count-limit>0</count-limit>
<used>2500</used>
<free>76</free>
<zone-req>3824</zone-req>
<zone-name>L VFS Cache:</zone-name>
<zone-size>291</zone-size>
<count-limit>0</count-limit>
<used>51</used>
<free>14</free>
<zone-req>63</zone-req>
<zone-name>NAMEI:</zone-name>
<zone-size>1024</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>8</free>
<zone-req>53330</zone-req>
<zone-name>NFSMOUNT:</zone-name>
<zone-size>480</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>NFSNODE:</zone-name>
<zone-size>460</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>PIPE:</zone-name>
<zone-size>404</zone-size>
<count-limit>0</count-limit>
<used>27</used>
<free>9</free>
<zone-req>717</zone-req>
<zone-name>KNOTE:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>42</used>

```

```
<free>64</free>
<zone-req>3311</zone-req>
<zone-name>socket:</zone-name>
<zone-size>412</zone-size>
<count-limit>25191</count-limit>
<used>343</used>
<free>8</free>
<zone-req>2524</zone-req>
<zone-name>unpcb:</zone-name>
<zone-size>140</zone-size>
<count-limit>25200</count-limit>
<used>170</used>
<free>26</free>
<zone-req>2157</zone-req>
<zone-name>ipq:</zone-name>
<zone-size>52</zone-size>
<count-limit>216</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>udpcb:</zone-name>
<zone-size>232</zone-size>
<count-limit>25194</count-limit>
<used>19</used>
<free>32</free>
<zone-req>31</zone-req>
<zone-name>inpcb:</zone-name>
<zone-size>232</zone-size>
<count-limit>25194</count-limit>
<used>40</used>
<free>28</free>
<zone-req>105</zone-req>
<zone-name>tcpcb:</zone-name>
<zone-size>520</zone-size>
<count-limit>25193</count-limit>
<used>40</used>
<free>16</free>
<zone-req>105</zone-req>
<zone-name>tcptw:</zone-name>
<zone-size>56</zone-size>
<count-limit>5092</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>syncache:</zone-name>
<zone-size>128</zone-size>
<count-limit>15360</count-limit>
<used>0</used>
<free>60</free>
<zone-req>55</zone-req>
<zone-name>tcpreass:</zone-name>
<zone-size>20</zone-size>
<count-limit>1690</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>sackhole:</zone-name>
<zone-size>20</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
```

```

<zone-req>0</zone-req>
<zone-name>ripcb:</zone-name>
<zone-size>232</zone-size>
<count-limit>25194</count-limit>
<used>5</used>
<free>29</free>
<zone-req>5</zone-req>
<zone-name>SWAPMETA:</zone-name>
<zone-size>276</zone-size>
<count-limit>94948</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>FFS inode:</zone-name>
<zone-size>132</zone-size>
<count-limit>0</count-limit>
<used>1146</used>
<free>72</free>
<zone-req>1306</zone-req>
<zone-name>FFS1 dinode:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>1146</used>
<free>24</free>
<zone-req>1306</zone-req>
<zone-name>FFS2 dinode:</zone-name>
<zone-size>256</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
</vmstat-memstat-zone>
<vmstat-sumstat>
  <cpu-context-switch>934906</cpu-context-switch>
  <dev-intr>1707986</dev-intr>
  <soft-intr>33819</soft-intr>
  <traps>203604</traps>
  <sys-calls>1200636</sys-calls>
  <kernel-thrds>60</kernel-thrds>
  <fork-calls>1313</fork-calls>
  <vfork-calls>21</vfork-calls>
  <rfork-calls>0</rfork-calls>
  <swap-pageins>0</swap-pageins>
  <swap-pagedin>0</swap-pagedin>
  <swap-pageouts>0</swap-pageouts>
  <swap-pagedout>0</swap-pagedout>
  <vnode-pageins>23094</vnode-pageins>
  <vnode-pagedin>23119</vnode-pagedin>
  <vnode-pageouts>226</vnode-pageouts>
  <vnode-pagedout>3143</vnode-pagedout>
  <page-daemon-wakeup>0</page-daemon-wakeup>
  <page-daemon-examined-pages>0</page-daemon-examined-pages>
  <pages-reactivated>8821</pages-reactivated>
  <copy-on-write-faults>48364</copy-on-write-faults>
  <copy-on-write-optimized-faults>31</copy-on-write-optimized-faults>
  <zero-fill-pages-zeroed>74665</zero-fill-pages-zeroed>
  <zero-fill-pages-prezeroed>70061</zero-fill-pages-prezeroed>
  <transit-blocking-page-faults>85</transit-blocking-page-faults>
  <total-vm-faults>191824</total-vm-faults>

<pages-affected-by-kernel-thrd-creat>0</pages-affected-by-kernel-thrd-creat>

```

```

<pages-affected-by-fork>95343</pages-affected-by-fork>
<pages-affected-by-vfork>3526</pages-affected-by-vfork>
<pages-affected-by-rfork>0</pages-affected-by-rfork>
<pages-freed>221502</pages-freed>
<pages-freed-by-daemon>0</pages-freed-by-daemon>
<pages-freed-by-exiting-proc>75630</pages-freed-by-exiting-proc>
<pages-active>45826</pages-active>
<pages-inactive>13227</pages-inactive>
<pages-in-vm-cache>49278</pages-in-vm-cache>
<pages-wired-down>10640</pages-wired-down>
<pages-free>70706</pages-free>
<bytes-per-page>4096</bytes-per-page>
<swap-pages-used>0</swap-pages-used>
<peak-swap-pages-used>0</peak-swap-pages-used>
<total-name-lookups>214496</total-name-lookups>
<positive-cache-hits>92</positive-cache-hits>
<negative-cache-hits>5</negative-cache-hits>
<pass2>0</pass2>
<cache-deletions>0</cache-deletions>
<cache-falsehits>0</cache-falsehits>
<toolong>0</toolong>
</vmstat-sumstat>
<vmstat-intr>
  <intr-name>irq0: clk          </intr-name>
  <intr-cnt>1243455</intr-cnt>
  <intr-rate>999</intr-rate>
  <intr-name>irq4: sio0        </intr-name>
  <intr-cnt>1140</intr-cnt>
  <intr-rate>0</intr-rate>
  <intr-name>irq8: rtc         </intr-name>
  <intr-cnt>159164</intr-cnt>
  <intr-rate>127</intr-rate>
  <intr-name>irq9: cbb1 fxp0   </intr-name>
  <intr-cnt>28490</intr-cnt>
  <intr-rate>22</intr-rate>
  <intr-name>irq10: fxp1       </intr-name>
  <intr-cnt>20593</intr-cnt>
  <intr-rate>16</intr-rate>
  <intr-name>irq14: ata0       </intr-name>
  <intr-cnt>5031</intr-cnt>
  <intr-rate>4</intr-rate>
  <intr-name>Total</intr-name>
  <intr-cnt>1457873</intr-cnt>
  <intr-rate>1171</intr-rate>
</vmstat-intr>
<vm-kernel-state>
  <vm-kmem-map-free>248524800</vm-kmem-map-free>
</vm-kernel-state>
<kernel-direct-mm-size-information>
  <vm-directmm-size-used>4644</vm-directmm-size-used>
  <vm-directmm-size-max>4057334</vm-directmm-size-max>
</kernel-direct-mm-size-information>
</system-virtual-memory-information>
<cli>
  <banner></banner>
</cli>
</rpc-reply>

```

Note: <kernel-direct-mm-size-information> only displays for 64 bit platform.

show system virtual-memory (QFX Series)

```

user@switch> show system virtual-memory | display xml
<rpc-reply xmlns:junos="http://xml.juniper.net/junos/11.1R1/junos">
  <system-virtual-memory-information>
    <vmstat-memstat-malloc>
      <memstat-name>CAM dev queue</memstat-name>
      <inuse>1</inuse>
      <memuse>1</memuse>
      <high-use>-</high-use>
      <memstat-req>1</memstat-req>
      <memstat-size>64</memstat-size>
      <memstat-name>entropy</memstat-name>
      <inuse>1024</inuse>
      <memuse>64</memuse>
      <high-use>-</high-use>
      <memstat-req>1024</memstat-req>
      <memstat-size>64</memstat-size>
      <memstat-name>linker</memstat-name>
      <inuse>481</inuse>
      <memuse>1871</memuse>
      <high-use>-</high-use>
      <memstat-req>1145</memstat-req>
      <memstat-size>16,32,64,4096,32768,131072</memstat-size>
      <memstat-name>lockf</memstat-name>
      <inuse>56</inuse>
      <memuse>4</memuse>
      <high-use>-</high-use>
      <memstat-req>5998</memstat-req>
      <memstat-size>64</memstat-size>
      <memstat-name>devbuf</memstat-name>
      <inuse>2094</inuse>
      <memuse>3877</memuse>
      <high-use>-</high-use>
      <memstat-req>2099</memstat-req>

      <memstat-size>16,32,64,128,512,1024,4096,8192,16384,32768,65536,131072</memstat-size>

      <memstat-name>temp</memstat-name>
      <inuse>21</inuse>
      <memuse>66</memuse>
      <high-use>-</high-use>
      <memstat-req>3127</memstat-req>

      <memstat-size>16,32,64,128,256,512,2048,4096,8192,16384,32768,65536,131072</memstat-size>

      <memstat-name>ip6ndp</memstat-name>
      <inuse>0</inuse>
      <memuse>0</memuse>
      <high-use>-</high-use>
      <memstat-req>4</memstat-req>
      <memstat-size>64</memstat-size>
      <memstat-name>in6ifmulti</memstat-name>
      <inuse>1</inuse>
      <memuse>1</memuse>
      <high-use>-</high-use>
      <memstat-req>1</memstat-req>
      <memstat-size>64</memstat-size>
      <memstat-name>in6grentry</memstat-name>
      <inuse>1</inuse>
      <memuse>1</memuse>

```

```
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>iflogical</memstat-name>
<inuse>13</inuse>
<memuse>3</memuse>
<high-use>--</high-use>
<memstat-req>13</memstat-req>
<memstat-size>64,2048</memstat-size>
<memstat-name>iffamily</memstat-name>
<inuse>28</inuse>
<memuse>4</memuse>
<high-use>--</high-use>
<memstat-req>28</memstat-req>
<memstat-size>32,1024,2048</memstat-size>
<memstat-name>rtnextthop</memstat-name>
<inuse>127</inuse>
<memuse>18</memuse>
<high-use>--</high-use>
<memstat-req>129</memstat-req>
<memstat-size>32,256,512,1024,2048,4096</memstat-size>
<memstat-name>metrics</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>5</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>inifmulti</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>3</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>ingrentry</memstat-name>
<inuse>6</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>6</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>rnode</memstat-name>
<inuse>68</inuse>
<memuse>2</memuse>
<high-use>--</high-use>
<memstat-req>76</memstat-req>
<memstat-size>16,32</memstat-size>
<memstat-name>rcache</memstat-name>
<inuse>4</inuse>
<memuse>8</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>ifdevice</memstat-name>
<inuse>4</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>ifstat</memstat-name>
<inuse>40</inuse>
<memuse>22</memuse>
<high-use>--</high-use>
```



```

<memstat-req>40</memstat-req>
<memstat-size>512,16384,32768</memstat-size>
<memstat-name>ipfw</memstat-name>
<inuse>42</inuse>
<memuse>23</memuse>
<high-use>--</high-use>
<memstat-req>91</memstat-req>

<memstat-size>16,32,64,128,256,512,1024,16384,32768,65536,131072</memstat-size>
<memstat-name>ifmaddr</memstat-name>
<inuse>103</inuse>
<memuse>3</memuse>
<high-use>--</high-use>
<memstat-req>103</memstat-req>
<memstat-size>16,32</memstat-size>
<memstat-name>rtable</memstat-name>
<inuse>129</inuse>
<memuse>14</memuse>
<high-use>--</high-use>
<memstat-req>139</memstat-req>
<memstat-size>16,32,64,128,1024,16384</memstat-size>
<memstat-name>sysctl</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>14847</memstat-req>
<memstat-size>16,32,64,4096,16384,32768</memstat-size>
<memstat-name>ifaddr</memstat-name>
<inuse>29</inuse>
<memuse>3</memuse>
<high-use>--</high-use>
<memstat-req>29</memstat-req>
<memstat-size>64,128</memstat-size>
<memstat-name>mkey</memstat-name>
<inuse>345</inuse>
<memuse>6</memuse>
<high-use>--</high-use>
<memstat-req>2527</memstat-req>
<memstat-size>16,128</memstat-size>
<memstat-name>pfe_ipc</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>1422</memstat-req>

<memstat-size>16,32,64,128,512,1024,2048,8192,16384,32768,65536,131072</memstat-size>

<memstat-name>ifstate</memstat-name>
<inuse>594</inuse>
<memuse>51</memuse>
<high-use>--</high-use>
<memstat-req>655</memstat-req>

<memstat-size>16,32,64,128,256,1024,2048,4096,16384,32768</memstat-size>
<memstat-name>itable16</memstat-name>
<inuse>276</inuse>
<memuse>52</memuse>
<high-use>--</high-use>
<memstat-req>294</memstat-req>
<memstat-size>1024,4096</memstat-size>
<memstat-name>itable32</memstat-name>

```

```
<inuse>160</inuse>
<memuse>10</memuse>
<high-use>--</high-use>
<memstat-req>160</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>itable64</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>lr</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>16384</memstat-size>
<memstat-name>pic</memstat-name>
<inuse>5</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>5</memstat-req>
<memstat-size>64,512</memstat-size>
<memstat-name>pfestat</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>162</memstat-req>
<memstat-size>16,32,128,256,16384</memstat-size>
<memstat-name>gencfg</memstat-name>
<inuse>224</inuse>
<memuse>56</memuse>
<high-use>--</high-use>
<memstat-req>540</memstat-req>
<memstat-size>16,32,64,256,512,32768,65536</memstat-size>
<memstat-name>jsr</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>idl</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>13</memstat-req>
<memstat-size>16,32,64,128,256,4096,16384,32768,131072</memstat-size>

<memstat-name>rtsmsg</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>131072</memstat-size>
<memstat-name>module</memstat-name>
<inuse>249</inuse>
<memuse>16</memuse>
<high-use>--</high-use>
<memstat-req>249</memstat-req>
<memstat-size>64,128</memstat-size>
<memstat-name>mtx_pool</memstat-name>
```

```

<inuse>1</inuse>
<memuse>8</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64,128</memstat-size>
<memstat-name>DEVFS3</memstat-name>
<inuse>109</inuse>
<memuse>12</memuse>
<high-use>--</high-use>
<memstat-req>117</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>DEVFS1</memstat-name>
<inuse>102</inuse>
<memuse>23</memuse>
<high-use>--</high-use>
<memstat-req>109</memstat-req>
<memstat-size>2048</memstat-size>
<memstat-name>pgrp</memstat-name>
<inuse>12</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>21</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>session</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>15</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>proc</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>16384</memstat-size>
<memstat-name>subproc</memstat-name>
<inuse>244</inuse>
<memuse>496</memuse>
<high-use>--</high-use>
<memstat-req>1522</memstat-req>
<memstat-size>2048,131072</memstat-size>
<memstat-name>cred</memstat-name>
<inuse>30</inuse>
<memuse>4</memuse>
<high-use>--</high-use>
<memstat-req>11409</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>plimit</memstat-name>
<inuse>17</inuse>
<memuse>4</memuse>
<high-use>--</high-use>
<memstat-req>133</memstat-req>
<memstat-size>2048</memstat-size>
<memstat-name>uidinfo</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>6</memstat-req>
<memstat-size>32,512</memstat-size>
<memstat-name>sysctluid</memstat-name>
<inuse>1117</inuse>

```

```
<memuse>34</memuse>
<high-use>--</high-use>
<memstat-req>1117</memstat-req>
<memstat-size>16,32,64</memstat-size>
<memstat-name>sysctltmp</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>743</memstat-req>
<memstat-size>16,32,64,1024</memstat-size>
<memstat-name>umtx</memstat-name>
<inuse>144</inuse>
<memuse>9</memuse>
<high-use>--</high-use>
<memstat-req>144</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>SWAP</memstat-name>
<inuse>2</inuse>
<memuse>209</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>bus</memstat-name>
<inuse>496</inuse>
<memuse>55</memuse>
<high-use>--</high-use>
<memstat-req>1196</memstat-req>
<memstat-size>16,32,64,128,32768</memstat-size>
<memstat-name>bus-sc</memstat-name>
<inuse>23</inuse>
<memuse>33</memuse>
<high-use>--</high-use>
<memstat-req>335</memstat-req>

<memstat-size>16,32,64,512,1024,2048,8192,16384,65536,131072</memstat-size>
<memstat-name>devstat</memstat-name>
<inuse>10</inuse>
<memuse>21</memuse>
<high-use>--</high-use>
<memstat-req>10</memstat-req>
<memstat-size>16,131072</memstat-size>
<memstat-name>eventhandler</memstat-name>
<inuse>35</inuse>
<memuse>2</memuse>
<high-use>--</high-use>
<memstat-req>36</memstat-req>
<memstat-size>32,128</memstat-size>
<memstat-name>kobj</memstat-name>
<inuse>93</inuse>
<memuse>186</memuse>
<high-use>--</high-use>
<memstat-req>111</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>DEVFS</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>9</memstat-req>
<memstat-size>16,64</memstat-size>
<memstat-name>rman</memstat-name>
<inuse>71</inuse>
```

```

<memuse>5</memuse>
<high-use>--</high-use>
<memstat-req>433</memstat-req>
<memstat-size>16,32,64</memstat-size>
<memstat-name>sbuf</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>522</memstat-req>
<memstat-size>16,32,32768,131072</memstat-size>
<memstat-name>NULLFS hash</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>taskqueue</memstat-name>
<inuse>5</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>5</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>turnstiles</memstat-name>
<inuse>145</inuse>
<memuse>10</memuse>
<high-use>--</high-use>
<memstat-req>145</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>Unitno</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>44</memstat-req>
<memstat-size>16,64</memstat-size>
<memstat-name>iocltops</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>27622</memstat-req>
<memstat-size>16,64,8192,16384,131072</memstat-size>
<memstat-name>iov</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>18578</memstat-req>
<memstat-size>16,64,128,256,512,1024,2048,131072</memstat-size>
<memstat-name>msg</memstat-name>
<inuse>4</inuse>
<memuse>25</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>32768,131072</memstat-size>
<memstat-name>sem</memstat-name>
<inuse>4</inuse>
<memuse>7</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16384,32768,131072</memstat-size>
<memstat-name>shm</memstat-name>
<inuse>9</inuse>
<memuse>20</memuse>

```

```

<high-use>--</high-use>
<memstat-req>14</memstat-req>
<memstat-size>32768</memstat-size>
<memstat-name>ttys</memstat-name>
<inuse>321</inuse>
<memuse>61</memuse>
<high-use>--</high-use>
<memstat-req>528</memstat-req>
<memstat-size>512,32768</memstat-size>
<memstat-name>ptys</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>mbuf_tag</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>23383</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>soname</memstat-name>
<inuse>115</inuse>
<memuse>12</memuse>
<high-use>--</high-use>
<memstat-req>24712</memstat-req>
<memstat-size>16,32,64,256</memstat-size>
<memstat-name>pcb</memstat-name>
<inuse>216</inuse>
<memuse>33</memuse>
<high-use>--</high-use>
<memstat-req>484</memstat-req>
<memstat-size>16,32,64,128,1024,2048,4096,16384,32768,65536</memstat-size>
<memstat-name>BIO buffer</memstat-name>
<inuse>43</inuse>
<memuse>86</memuse>
<high-use>--</high-use>
<memstat-req>405</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>vfscache</memstat-name>
<inuse>1</inuse>
<memuse>256</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>cluster_save buffer</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>32,64</memstat-size>
<memstat-name>VFS hash</memstat-name>
<inuse>1</inuse>
<memuse>128</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>32,64</memstat-size>
<memstat-name>vnodes</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>

```

```

<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>mount</memstat-name>
<inuse>290</inuse>
<memuse>23</memuse>
<high-use>--</high-use>
<memstat-req>535</memstat-req>
<memstat-size>16,32,64,128,256,4096,32768</memstat-size>
<memstat-name>vnodemarker</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>498</memstat-req>
<memstat-size>16384</memstat-size>
<memstat-name>pfs_nodes</memstat-name>
<inuse>25</inuse>
<memuse>3</memuse>
<high-use>--</high-use>
<memstat-req>25</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>pfs_vncache</memstat-name>
<inuse>27</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>53</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>STP</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>GEOM</memstat-name>
<inuse>146</inuse>
<memuse>11</memuse>
<high-use>--</high-use>
<memstat-req>1042</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
<memstat-name>syncache</memstat-name>
<inuse>1</inuse>
<memuse>8</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
<memstat-name>tlv_stat</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>8</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
<memstat-name>NFS_daemon</memstat-name>
<inuse>1</inuse>
<memuse>8</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>

```

```
<memstat-name>p1003.1b</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>MD disk</memstat-name>
<inuse>10</inuse>
<memuse>20</memuse>
<high-use>--</high-use>
<memstat-req>10</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>ata_generic</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>6</memstat-req>
<memstat-size>16,16384,32768</memstat-size>
<memstat-name>ISofs mount</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>15</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>ISofs node</memstat-name>
<inuse>1440</inuse>
<memuse>135</memuse>
<high-use>--</high-use>
<memstat-req>1457</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>CAM SIM</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>CAM XPT</memstat-name>
<inuse>6</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>9</memstat-req>
<memstat-size>16,64,16384</memstat-size>
<memstat-name>CAM periph</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>ad_driver</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>pagedep</memstat-name>
<inuse>1</inuse>
<memuse>32</memuse>
<high-use>--</high-use>
<memstat-req>106</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>inodedep</memstat-name>
```



```

<inuse>1</inuse>
<memuse>128</memuse>
<high-use>--</high-use>
<memstat-req>464</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>newblk</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>336</memstat-req>
<memstat-size>64,4096</memstat-size>
<memstat-name>bmsafemap</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>63</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>allocdirect</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>320</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>indirdep</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>17</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>allocindir</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>15</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>freefrag</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>12</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>freeblks</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>40</memstat-req>
<memstat-size>2048</memstat-size>
<memstat-name>freefile</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>101</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>diradd</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>465</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>mkdir</memstat-name>
<inuse>0</inuse>

```

```
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>136</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>dirrem</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>168</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>newdirblk</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>savedino</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>157</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>UFS mount</memstat-name>
<inuse>15</inuse>
<memuse>36</memuse>
<high-use>--</high-use>
<memstat-req>15</memstat-req>
<memstat-size>2048,65536,131072</memstat-size>
<memstat-name>ata_dma</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>UMAHash</memstat-name>
<inuse>1</inuse>
<memuse>2</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>4096,16384,32768,65536</memstat-size>
<memstat-name>cdev</memstat-name>
<inuse>22</inuse>
<memuse>3</memuse>
<high-use>--</high-use>
<memstat-req>22</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>file desc</memstat-name>
<inuse>141</inuse>
<memuse>32</memuse>
<high-use>--</high-use>
<memstat-req>1583</memstat-req>
<memstat-size>16,1024,2048,16384</memstat-size>
<memstat-name>VM pgdata</memstat-name>
<inuse>2</inuse>
<memuse>65</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>sigio</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
```

```

<high-use>--</high-use>
<memstat-req>20</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>kenv</memstat-name>
<inuse>24</inuse>
<memuse>5</memuse>
<high-use>--</high-use>
<memstat-req>27</memstat-req>
<memstat-size>16,32,64,131072</memstat-size>
<memstat-name>atkbddev</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>kqueue</memstat-name>
<inuse>15</inuse>
<memuse>9</memuse>
<high-use>--</high-use>
<memstat-req>19</memstat-req>
<memstat-size>1024,4096,32768</memstat-size>
<memstat-name>proc-args</memstat-name>
<inuse>57</inuse>
<memuse>3</memuse>
<high-use>--</high-use>
<memstat-req>1001</memstat-req>
<memstat-size>16,32,64,128,256,512,1024</memstat-size>
<memstat-name>isadev</memstat-name>
<inuse>21</inuse>
<memuse>2</memuse>
<high-use>--</high-use>
<memstat-req>21</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>zombie</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>1278</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>ithread</memstat-name>
<inuse>69</inuse>
<memuse>5</memuse>
<high-use>--</high-use>
<memstat-req>69</memstat-req>
<memstat-size>16,64,256</memstat-size>
<memstat-name>legacydrv</memstat-name>
<inuse>4</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>memdesc</memstat-name>
<inuse>1</inuse>
<memuse>4</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>131072</memstat-size>
<memstat-name>nexusdev</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>

```

```

<memstat-req>2</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>CAM queue</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>3</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>$PIR</memstat-name>
<inuse>4</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>KTRACE</memstat-name>
<inuse>100</inuse>
<memuse>10</memuse>
<high-use>--</high-use>
<memstat-req>100</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>kbdmux</memstat-name>
<inuse>5</inuse>
<memuse>9</memuse>
<high-use>--</high-use>
<memstat-req>5</memstat-req>
<memstat-size>128,2048,65536,131072</memstat-size>
</vmstat-memstat-malloc>
<vmstat-memstat-zone>
  <zone-name>UMA Kegs:</zone-name>
  <zone-size>136</zone-size>
  <count-limit>0</count-limit>
  <used>71</used>
  <free>1</free>
  <zone-req>71</zone-req>
  <zone-name>UMA Zones:</zone-name>
  <zone-size>120</zone-size>
  <count-limit>0</count-limit>
  <used>71</used>
  <free>19</free>
  <zone-req>71</zone-req>
  <zone-name>UMA Slabs:</zone-name>
  <zone-size>64</zone-size>
  <count-limit>0</count-limit>
  <used>490</used>
  <free>41</free>
  <zone-req>579</zone-req>
  <zone-name>UMA RCntSlabs:</zone-name>
  <zone-size>104</zone-size>
  <count-limit>0</count-limit>
  <used>276</used>
  <free>20</free>
  <zone-req>276</zone-req>
  <zone-name>UMA Hash:</zone-name>
  <zone-size>128</zone-size>
  <count-limit>0</count-limit>
  <used>4</used>
  <free>26</free>
  <zone-req>5</zone-req>
  <zone-name>16 Bucket:</zone-name>
  <zone-size>76</zone-size>
  <count-limit>0</count-limit>

```

```

<used>30</used>
<free>20</free>
<zone-req>30</zone-req>
<zone-name>32 Bucket:</zone-name>
<zone-size>140</zone-size>
<count-limit>0</count-limit>
<used>33</used>
<free>23</free>
<zone-req>33</zone-req>
<zone-name>64 Bucket:</zone-name>
<zone-size>268</zone-size>
<count-limit>0</count-limit>
<used>33</used>
<free>9</free>
<zone-req>33</zone-req>
<zone-name>128 Bucket:</zone-name>
<zone-size>524</zone-size>
<count-limit>0</count-limit>
<used>49</used>
<free>0</free>
<zone-req>49</zone-req>
<zone-name>VM OBJECT:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>2111</used>
<free>79</free>
<zone-req>25214</zone-req>
<zone-name>MAP:</zone-name>
<zone-size>160</zone-size>
<count-limit>0</count-limit>
<used>7</used>
<free>41</free>
<zone-req>7</zone-req>
<zone-name>KMAP ENTRY:</zone-name>
<zone-size>68</zone-size>
<count-limit>35336</count-limit>
<used>19</used>
<free>149</free>
<zone-req>2397</zone-req>
<zone-name>MAP ENTRY:</zone-name>
<zone-size>68</zone-size>
<count-limit>0</count-limit>
<used>2031</used>
<free>153</free>
<zone-req>62417</zone-req>
<zone-name>PV ENTRY:</zone-name>
<zone-size>24</zone-size>
<count-limit>509095</count-limit>
<used>57177</used>
<free>6333</free>
<zone-req>1033683</zone-req>
<zone-name>DP fakepg:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>mt_zone:</zone-name>
<zone-size>64</zone-size>
<count-limit>0</count-limit>
<used>238</used>

```

```
<free>57</free>
<zone-req>238</zone-req>
<zone-name>16:</zone-name>
<zone-size>16</zone-size>
<count-limit>0</count-limit>
<used>2114</used>
<free>119</free>
<zone-req>80515</zone-req>
<zone-name>32:</zone-name>
<zone-size>32</zone-size>
<count-limit>0</count-limit>
<used>1335</used>
<free>134</free>
<zone-req>10259</zone-req>
<zone-name>64:</zone-name>
<zone-size>64</zone-size>
<count-limit>0</count-limit>
<used>3529</used>
<free>129</free>
<zone-req>29110</zone-req>
<zone-name>96:</zone-name>
<zone-size>96</zone-size>
<count-limit>0</count-limit>
<used>2062</used>
<free>58</free>
<zone-req>4365</zone-req>
<zone-name>112:</zone-name>
<zone-size>112</zone-size>
<count-limit>0</count-limit>
<used>361</used>
<free>164</free>
<zone-req>24613</zone-req>
<zone-name>128:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>359</used>
<free>61</free>
<zone-req>942</zone-req>
<zone-name>160:</zone-name>
<zone-size>160</zone-size>
<count-limit>0</count-limit>
<used>364</used>
<free>44</free>
<zone-req>577</zone-req>
<zone-name>224:</zone-name>
<zone-size>224</zone-size>
<count-limit>0</count-limit>
<used>422</used>
<free>20</free>
<zone-req>1950</zone-req>
<zone-name>256:</zone-name>
<zone-size>256</zone-size>
<count-limit>0</count-limit>
<used>204</used>
<free>36</free>
<zone-req>1225</zone-req>
<zone-name>288:</zone-name>
<zone-size>288</zone-size>
<count-limit>0</count-limit>
<used>2</used>
<free>24</free>
```

```
<zone-req>10</zone-req>
<zone-name>512:</zone-name>
<zone-size>512</zone-size>
<count-limit>0</count-limit>
<used>49</used>
<free>7</free>
<zone-req>911</zone-req>
<zone-name>1024:</zone-name>
<zone-size>1024</zone-size>
<count-limit>0</count-limit>
<used>213</used>
<free>11</free>
<zone-req>1076</zone-req>
<zone-name>2048:</zone-name>
<zone-size>2048</zone-size>
<count-limit>0</count-limit>
<used>199</used>
<free>113</free>
<zone-req>640</zone-req>
<zone-name>4096:</zone-name>
<zone-size>4096</zone-size>
<count-limit>0</count-limit>
<used>144</used>
<free>7</free>
<zone-req>2249</zone-req>
<zone-name>Files:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>665</used>
<free>77</free>
<zone-req>16457</zone-req>
<zone-name>MAC labels:</zone-name>
<zone-size>20</zone-size>
<count-limit>0</count-limit>
<used>3998</used>
<free>227</free>
<zone-req>21947</zone-req>
<zone-name>PROC:</zone-name>
<zone-size>544</zone-size>
<count-limit>0</count-limit>
<used>116</used>
<free>10</free>
<zone-req>1394</zone-req>
<zone-name>THREAD:</zone-name>
<zone-size>416</zone-size>
<count-limit>0</count-limit>
<used>127</used>
<free>17</free>
<zone-req>131</zone-req>
<zone-name>KSEGRP:</zone-name>
<zone-size>88</zone-size>
<count-limit>0</count-limit>
<used>127</used>
<free>73</free>
<zone-req>131</zone-req>
<zone-name>UPCALL:</zone-name>
<zone-size>44</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
```

```
<zone-name>SLEEPQUEUE:</zone-name>
<zone-size>32</zone-size>
<count-limit>0</count-limit>
<used>145</used>
<free>194</free>
<zone-req>145</zone-req>
<zone-name>VMSPACE:</zone-name>
<zone-size>268</zone-size>
<count-limit>0</count-limit>
<used>57</used>
<free>13</free>
<zone-req>1335</zone-req>
<zone-name>mbuf_packet:</zone-name>
<zone-size>256</zone-size>
<count-limit>180000</count-limit>
<used>256</used>
<free>128</free>
<zone-req>49791</zone-req>
<zone-name>mbuf:</zone-name>
<zone-size>256</zone-size>
<count-limit>180000</count-limit>
<used>50</used>
<free>466</free>
<zone-req>105183</zone-req>
<zone-name>mbuf_cluster:</zone-name>
<zone-size>2048</zone-size>
<count-limit>25190</count-limit>
<used>387</used>
<free>165</free>
<zone-req>5976</zone-req>
<zone-name>mbuf_jumbo_pagesize:</zone-name>
<zone-size>4096</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>mbuf_jumbo_9k:</zone-name>
<zone-size>9216</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>mbuf_jumbo_16k:</zone-name>
<zone-size>16384</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>ACL UMA zone:</zone-name>
<zone-size>388</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>g_bio:</zone-name>
<zone-size>132</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>174</free>
<zone-req>69750</zone-req>
<zone-name>ata_request:</zone-name>
```



```

<zone-size>200</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>57</free>
<zone-req>5030</zone-req>
<zone-name>ata_composite:</zone-name>
<zone-size>192</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>GENCFG:</zone-name>
<zone-size>72</zone-size>
<count-limit>1000004</count-limit>
<used>57</used>
<free>102</free>
<zone-req>57</zone-req>
<zone-name>VNODE:</zone-name>
<zone-size>292</zone-size>
<count-limit>0</count-limit>
<used>2718</used>
<free>25</free>
<zone-req>2922</zone-req>
<zone-name>VNODEPOLL:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>S VFS Cache:</zone-name>
<zone-size>68</zone-size>
<count-limit>0</count-limit>
<used>2500</used>
<free>76</free>
<zone-req>3824</zone-req>
<zone-name>L VFS Cache:</zone-name>
<zone-size>291</zone-size>
<count-limit>0</count-limit>
<used>51</used>
<free>14</free>
<zone-req>63</zone-req>
<zone-name>NAMEI:</zone-name>
<zone-size>1024</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>8</free>
<zone-req>53330</zone-req>
<zone-name>NFSMOUNT:</zone-name>
<zone-size>480</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>NFSNODE:</zone-name>
<zone-size>460</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>PIPE:</zone-name>
<zone-size>404</zone-size>

```

```
<count-limit>0</count-limit>
<used>27</used>
<free>9</free>
<zone-req>717</zone-req>
<zone-name>KNOTE:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>42</used>
<free>64</free>
<zone-req>3311</zone-req>
<zone-name>socket:</zone-name>
<zone-size>412</zone-size>
<count-limit>25191</count-limit>
<used>343</used>
<free>8</free>
<zone-req>2524</zone-req>
<zone-name>unpcb:</zone-name>
<zone-size>140</zone-size>
<count-limit>25200</count-limit>
<used>170</used>
<free>26</free>
<zone-req>2157</zone-req>
<zone-name>ipq:</zone-name>
<zone-size>52</zone-size>
<count-limit>216</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>udpcb:</zone-name>
<zone-size>232</zone-size>
<count-limit>25194</count-limit>
<used>19</used>
<free>32</free>
<zone-req>31</zone-req>
<zone-name>inpcb:</zone-name>
<zone-size>232</zone-size>
<count-limit>25194</count-limit>
<used>40</used>
<free>28</free>
<zone-req>105</zone-req>
<zone-name>tcpcb:</zone-name>
<zone-size>520</zone-size>
<count-limit>25193</count-limit>
<used>40</used>
<free>16</free>
<zone-req>105</zone-req>
<zone-name>tcptw:</zone-name>
<zone-size>56</zone-size>
<count-limit>5092</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>syncache:</zone-name>
<zone-size>128</zone-size>
<count-limit>15360</count-limit>
<used>0</used>
<free>60</free>
<zone-req>55</zone-req>
<zone-name>tcpreass:</zone-name>
<zone-size>20</zone-size>
<count-limit>1690</count-limit>
```

```

<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>sackhole:</zone-name>
<zone-size>20</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>ripcb:</zone-name>
<zone-size>232</zone-size>
<count-limit>25194</count-limit>
<used>5</used>
<free>29</free>
<zone-req>5</zone-req>
<zone-name>SWAPMETA:</zone-name>
<zone-size>276</zone-size>
<count-limit>94948</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>FFS inode:</zone-name>
<zone-size>132</zone-size>
<count-limit>0</count-limit>
<used>1146</used>
<free>72</free>
<zone-req>1306</zone-req>
<zone-name>FFS1 dinode:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>1146</used>
<free>24</free>
<zone-req>1306</zone-req>
<zone-name>FFS2 dinode:</zone-name>
<zone-size>256</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
</vmstat-memstat-zone>
<vmstat-sumstat>
  <cpu-context-switch>934906</cpu-context-switch>
  <dev-intr>1707986</dev-intr>
  <soft-intr>33819</soft-intr>
  <traps>203604</traps>
  <sys-calls>1200636</sys-calls>
  <kernel-thrds>60</kernel-thrds>
  <fork-calls>1313</fork-calls>
  <vfork-calls>21</vfork-calls>
  <rfork-calls>0</rfork-calls>
  <swap-pageins>0</swap-pageins>
  <swap-pagedin>0</swap-pagedin>
  <swap-pageouts>0</swap-pageouts>
  <swap-pagedout>0</swap-pagedout>
  <vnode-pageins>23094</vnode-pageins>
  <vnode-pagedin>23119</vnode-pagedin>
  <vnode-pageouts>226</vnode-pageouts>
  <vnode-pagedout>3143</vnode-pagedout>
  <page-daemon-wakeup>0</page-daemon-wakeup>
  <page-daemon-examined-pages>0</page-daemon-examined-pages>
  <pages-reactivated>8821</pages-reactivated>

```

```

<copy-on-write-faults>48364</copy-on-write-faults>
<copy-on-write-optimized-faults>31</copy-on-write-optimized-faults>
<zero-fill-pages-zeroed>74665</zero-fill-pages-zeroed>
<zero-fill-pages-prezeroed>70061</zero-fill-pages-prezeroed>
<transit-blocking-page-faults>85</transit-blocking-page-faults>
<total-vm-faults>191824</total-vm-faults>

<pages-affected-by-kernel-thrd-creat>0</pages-affected-by-kernel-thrd-creat>
<pages-affected-by-fork>95343</pages-affected-by-fork>
<pages-affected-by-vfork>3526</pages-affected-by-vfork>
<pages-affected-by-rfork>0</pages-affected-by-rfork>
<pages-freed>221502</pages-freed>
<pages-freed-by-deamon>0</pages-freed-by-deamon>
<pages-freed-by-exiting-proc>75630</pages-freed-by-exiting-proc>
<pages-active>45826</pages-active>
<pages-inactive>13227</pages-inactive>
<pages-in-vm-cache>49278</pages-in-vm-cache>
<pages-wired-down>10640</pages-wired-down>
<pages-free>70706</pages-free>
<bytes-per-page>4096</bytes-per-page>
<swap-pages-used>0</swap-pages-used>
<peak-swap-pages-used>0</peak-swap-pages-used>
<total-name-lookups>214496</total-name-lookups>
<positive-cache-hits>92</positive-cache-hits>
<negative-cache-hits>5</negative-cache-hits>
<pass2>0</pass2>
<cache-deletions>0</cache-deletions>
<cache-falsehits>0</cache-falsehits>
<toolong>0</toolong>
</vmstat-sumstat>
<vmstat-intr>
  <intr-name>irq0: clk      </intr-name>
  <intr-cnt>1243455</intr-cnt>
  <intr-rate>999</intr-rate>
  <intr-name>irq4: sio0     </intr-name>
  <intr-cnt>1140</intr-cnt>
  <intr-rate>0</intr-rate>
  <intr-name>irq8: rtc      </intr-name>
  <intr-cnt>159164</intr-cnt>
  <intr-rate>127</intr-rate>
  <intr-name>irq9: cbb1 fxp0 </intr-name>
  <intr-cnt>28490</intr-cnt>
  <intr-rate>22</intr-rate>
  <intr-name>irq10: fxp1    </intr-name>
  <intr-cnt>20593</intr-cnt>
  <intr-rate>16</intr-rate>
  <intr-name>irq14: ata0    </intr-name>
  <intr-cnt>5031</intr-cnt>
  <intr-rate>4</intr-rate>
  <intr-name>Total</intr-name>
  <intr-cnt>1457873</intr-cnt>
  <intr-rate>1171</intr-rate>
</vmstat-intr>
<vm-kernel-state>
  <vm-kmem-map-free>248524800</vm-kmem-map-free>
</vm-kernel-state>
</system-virtual-memory-information>
<cli>
  <banner></banner>
</cli>
</rpc-reply>

```


show version

List of Syntax	Syntax on page 1272 Syntax (EX Series Switches) on page 1272 Syntax (TX Matrix Router) on page 1272 Syntax (TX Matrix Plus Router) on page 1272 Syntax (MX Series Router) on page 1272 Syntax (QFX Series) on page 1272
Syntax	<code>show version</code> <code><brief detail></code>
Syntax (EX Series Switches)	<code>show version</code> <code><all-members></code> <code><brief detail></code> <code><local></code> <code><member <i>member-id</i>></code>
Syntax (TX Matrix Router)	<code>show version</code> <code><brief detail></code> <code><all-chassis all-lcc lcc <i>number</i> scc></code>
Syntax (TX Matrix Plus Router)	<code>show version</code> <code><all-chassis all-lcc lcc <i>number</i> sfc <i>number</i>></code> <code><brief detail></code>
Syntax (MX Series Router)	<code>show version</code> <code><brief detail></code> <code><all-members></code> <code><local></code> <code><member <i>member-id</i>></code>
Syntax (QFX Series)	<code>show version</code> <code><brief detail></code> <code><component <i>component-name</i> all></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the hostname and version information about the software running on the router or switch. Beginning in Junos OS Release 13.3, the show version command output includes the Junos field that displays the Junos OS version running on the device. This field provides a consistent means of identifying the Junos OS version, rather than extracting that information from the list of installed sub-packages.

- Options** **none**—Display standard information about the hostname and version of the software running on the router or switch.
- brief | detail**—(Optional) Display the specified level of output.
- all-members**—(EX4200 switches and MX Series routers only) (Optional) Display standard information about the hostname and version of the software running on all members of the Virtual Chassis configuration.
- component all**—(QFabric systems only) (Optional) Display the host name and version information about the software running on all the components on the QFabric system.
- component *component-name***—(QFabric systems only) (Optional) Display the host name and version information about the software running on a specific QFabric system component. Replace *component-name* with the name of the QFabric system component. The *component-name* can be the name of a diagnostics Routing Engine, Director group, fabric control Routing Engine, fabric manager Routing Engine, Interconnect device, or Node group.
- local**—(EX4200 switches and MX Series routers only) (Optional) Display standard information about the hostname and version of the software running on the local Virtual Chassis member.
- member *member-id***—(EX4200 switches and MX Series routers only) (Optional) Display standard information about the hostname and version of the software running on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.
- scc**—(TX Matrix routers only) (Optional) Display the hostname and version information about the software running on the TX Matrix router (or switch-card chassis).
- lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display the host name and version information about the software running on for a specified T640 router (line-card chassis or LCC) that is connected to the TX Matrix router. On a TX Matrix Plus router, display the host name and version information about the software running for a specified T1600 or T4000 router (LCC) that is connected to the TX Matrix Plus router.
- Replace *number* with the following values depending on the LCC configuration:
- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
 - 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
 - 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
 - 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

sfc *number*—(TX Matrix Plus routers only) (Optional) Display the hostname and version information about the software running on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

Additional Information By default, when you issue the **show version** command on a TX Matrix or TX Matrix Plus master Routing Engine, the command is broadcast to all the T640 (in a routing matrix based on a TX Matrix router) or T1600 or T4000 (in a routing matrix based on a TX Matrix Plus router) master Routing Engines connected to it. Likewise, if you issue the same command on the TX Matrix or TX Matrix Plus backup Routing Engine, the command is broadcast to all the T640 (in a routing matrix based on a TX Matrix router) or T1600 or T4000 (in a routing matrix based on a TX Matrix Plus router) backup Routing Engines that are connected to it.

Required Privilege Level view

List of Sample Output [show version \(Devices Running Junos OS Release 13.3 and Later\) on page 1275](#)
[show version on page 1275](#)
[show version \(TX Matrix Plus Router\) on page 1276](#)
[show version \(TX Matrix Plus Router with 3D SIBs\) on page 1278](#)
[show version \(MX Series Router\) on page 1282](#)
[show version \(QFX3500 Switch\) on page 1282](#)
[show version \(QFabric System\) on page 1282](#)
[show version component all \(QFabric System\) on page 1283](#)

Sample Output

show version (Devices Running Junos OS Release 13.3 and Later)

The following output is from the MX240 Router and shows the **Junos** field introduced in Junos OS 13.3. Depending on the platform running Junos OS 13.3, you might see different installed sub-packages, but the **Junos** field is common across all platforms that run Junos OS 13.3 and later.

```
user@host > show version
Hostname: lab
Model: mx240
Junos: 13.3R1.4
JUNOS Base OS boot [13.3R1.4]
JUNOS Base OS Software Suite [13.3R1.4]
JUNOS Kernel Software Suite [13.3R1.4]
JUNOS Crypto Software Suite [13.3R1.4]
JUNOS Packet Forwarding Engine Support (M/T/EX Common) [13.3R1.4]
JUNOS Packet Forwarding Engine Support (MX Common) [13.3R1.4]
JUNOS Online Documentation [13.3R1.4]
JUNOS Services ACL Container package [13.3R1.4]
JUNOS Services Application Level Gateways [13.3R1.4]
JUNOS AppId Services [13.3R1.4]
JUNOS Border Gateway Function package [13.3R1.4]
JUNOS Services Captive Portal and Content Delivery Container package [13.3R1.4]
JUNOS Services HTTP Content Management package [13.3R1.4]
JUNOS IDP Services [13.3R1.4]
JUNOS Services Jflow Container package [13.3R1.4]
JUNOS Services LL-PDF Container package [13.3R1.4]
JUNOS Services MobileNext Software package [13.3R1.4]
JUNOS Services Mobile Subscriber Service Container package [13.3R1.4]
JUNOS Services NAT [13.3R1.4]
JUNOS Services PTSP Container package [13.3R1.4]
JUNOS Services RPM [13.3R1.4]
JUNOS Services Stateful Firewall [13.3R1.4]
JUNOS Voice Services Container package [13.3R1.4]
JUNOS Services Crypto [13.3R1.4]
JUNOS Services SSL [13.3R1.4]
JUNOS Services IPSec [13.3R1.4]
JUNOS platform Software Suite [13.3R1.4]
JUNOS Runtime Software Suite [13.3R1.4]
JUNOS Routing Software Suite [13.3R1.4]
JUNOS py-base-i386 [13.3R1.4]
```

show version

```
user@host> show version
Hostname: router1
Model: m20
JUNOS Base OS boot [7.2-20050312.0]
JUNOS Base OS Software Suite [7.2-20050312.0]
JUNOS Kernel Software Suite [7.2R1.7]
JUNOS Packet Forwarding Engine Support (M20/M40) [7.2R1.7]
JUNOS Routing Software Suite [7.2R1.7]
JUNOS Online Documentation [7.2R1.7]
JUNOS Crypto Software Suite [7.2R1.7]

{master}

user@host> show version psd 1
```

psd1-re0:

```
-----
Hostname: china
Model: t640
JUNOS Base OS boot [9.1I20080311_1959_builder]
JUNOS Base OS Software Suite [9.1-20080321.0]
JUNOS Kernel Software Suite [9.1-20080321.0]
JUNOS Crypto Software Suite [9.1-20080321.0]
JUNOS Packet Forwarding Engine Support (M/T Common) [9.1-20080321.0]
JUNOS Packet Forwarding Engine Support (T-series) [9.1-20080321.0]
JUNOS Online Documentation [9.1-20080321.0]
JUNOS Routing Software Suite [9.1-20080321.0]
labpkg [7.0]
```

show version (TX Matrix Plus Router)

user@host> show version

sfc0-re0:

```
-----
Hostname: host
Model: txp
JUNOS Base OS boot [12.3-20121019.0]
JUNOS Base OS Software Suite [12.3-20121019.0]
JUNOS Kernel Software Suite [12.3-20121019.0]
JUNOS Crypto Software Suite [12.3-20121019.0]
JUNOS Packet Forwarding Engine Support (M/T Common) [12.3-20121019.0]
JUNOS Packet Forwarding Engine Support (T-Series) [12.3-20121019.0]
JUNOS Online Documentation [12.3-20121019.0]
JUNOS Services AACL Container package [12.3-20121019.0]
JUNOS Services Application Level Gateways [12.3-20121019.0]
JUNOS AppId Services [12.3-20121019.0]
JUNOS Border Gateway Function package [12.3-20121019.0]
JUNOS Services Captive Portal and Content Delivery Container package
[12.3-20121019.0]
JUNOS Services HTTP Content Management package [12.3-20121019.0]
JUNOS IDP Services [12.3-20121019.0]
JUNOS Services LL-PDF Container package [12.3-20121019.0]
JUNOS Services NAT [12.3-20121019.0]
JUNOS Services PTSP Container package [12.3-20121019.0]
JUNOS Services RPM [12.3-20121019.0]
JUNOS Services Stateful Firewall [12.3-20121019.0]
JUNOS Voice Services Container package [12.3-20121019.0]
JUNOS Services Example Container package [12.3-20121019.0]
JUNOS Services Crypto [12.3-20121019.0]
JUNOS Services SSL [12.3-20121019.0]
JUNOS Services IPSec [12.3-20121019.0]
JUNOS Runtime Software Suite [12.3-20121019.0]
JUNOS Routing Software Suite [12.3-20121019.0]
```

lcc0-re0:

```
-----
Hostname: host1
Model: t1600
JUNOS Base OS boot [12.3-20121019.0]
JUNOS Base OS Software Suite [12.3-20121019.0]
JUNOS Kernel Software Suite [12.3-20121019.0]
JUNOS Crypto Software Suite [12.3-20121019.0]
JUNOS Packet Forwarding Engine Support (M/T Common) [12.3-20121019.0]
JUNOS Packet Forwarding Engine Support (T-Series) [12.3-20121019.0]
JUNOS Online Documentation [12.3-20121019.0]
JUNOS Services AACL Container package [12.3-20121019.0]
```

```

JUNOS Services Application Level Gateways [12.3-20121019.0]
JUNOS AppId Services [12.3-20121019.0]
JUNOS Border Gateway Function package [12.3-20121019.0]
JUNOS Services Captive Portal and Content Delivery Container package
[12.3-20121019.0]
JUNOS Services HTTP Content Management package [12.3-20121019.0]
JUNOS IDP Services [12.3-20121019.0]
JUNOS Services LL-PDF Container package [12.3-20121019.0]
JUNOS Services NAT [12.3-20121019.0]
JUNOS Services PTSP Container package [12.3-20121019.0]
JUNOS Services RPM [12.3-20121019.0]
JUNOS Services Stateful Firewall [12.3-20121019.0]
JUNOS Voice Services Container package [12.3-20121019.0]
JUNOS Services Example Container package [12.3-20121019.0]
JUNOS Services Crypto [12.3-20121019.0]
JUNOS Services SSL [12.3-20121019.0]
JUNOS Services IPSec [12.3-20121019.0]
JUNOS Runtime Software Suite [12.3-20121019.0]
JUNOS Routing Software Suite [12.3-20121019.0]

```

```
lcc1-re0:
```

```

-----
Hostname: host2
Model: t1600
JUNOS Base OS boot [12.3-20121019.0]
JUNOS Base OS Software Suite [12.3-20121019.0]
JUNOS Kernel Software Suite [12.3-20121019.0]
JUNOS Crypto Software Suite [12.3-20121019.0]
JUNOS Packet Forwarding Engine Support (M/T Common) [12.3-20121019.0]
JUNOS Packet Forwarding Engine Support (T-Series) [12.3-20121019.0]
JUNOS Online Documentation [12.3-20121019.0]
JUNOS Services ACL Container package [12.3-20121019.0]
JUNOS Services Application Level Gateways [12.3-20121019.0]
JUNOS AppId Services [12.3-20121019.0]
JUNOS Border Gateway Function package [12.3-20121019.0]
JUNOS Services Captive Portal and Content Delivery Container package
[12.3-20121019.0]
JUNOS Services HTTP Content Management package [12.3-20121019.0]
JUNOS IDP Services [12.3-20121019.0]
JUNOS Services LL-PDF Container package [12.3-20121019.0]
JUNOS Services NAT [12.3-20121019.0]
JUNOS Services PTSP Container package [12.3-20121019.0]
JUNOS Services RPM [12.3-20121019.0]
JUNOS Services Stateful Firewall [12.3-20121019.0]
JUNOS Voice Services Container package [12.3-20121019.0]
JUNOS Services Example Container package [12.3-20121019.0]
JUNOS Services Crypto [12.3-20121019.0]
JUNOS Services SSL [12.3-20121019.0]
JUNOS Services IPSec [12.3-20121019.0]
JUNOS Runtime Software Suite [12.3-20121019.0]
JUNOS Routing Software Suite [12.3-20121019.0]

```

```
lcc2-re0:
```

```

-----
Hostname: host3
Model: t1600
JUNOS Base OS boot [12.3-20121019.0]
JUNOS Base OS Software Suite [12.3-20121019.0]
JUNOS Kernel Software Suite [12.3-20121019.0]
JUNOS Crypto Software Suite [12.3-20121019.0]
JUNOS Packet Forwarding Engine Support (M/T Common) [12.3-20121019.0]

```

```
JUNOS Packet Forwarding Engine Support (T-Series) [12.3-20121019.0]
JUNOS Online Documentation [12.3-20121019.0]
JUNOS Services AACL Container package [12.3-20121019.0]
JUNOS Services Application Level Gateways [12.3-20121019.0]
JUNOS AppId Services [12.3-20121019.0]
JUNOS Border Gateway Function package [12.3-20121019.0]
JUNOS Services Captive Portal and Content Delivery Container package
[12.3-20121019.0]
JUNOS Services HTTP Content Management package [12.3-20121019.0]
JUNOS IDP Services [12.3-20121019.0]
JUNOS Services LL-PDF Container package [12.3-20121019.0]
JUNOS Services NAT [12.3-20121019.0]
JUNOS Services PTSP Container package [12.3-20121019.0]
JUNOS Services RPM [12.3-20121019.0]
JUNOS Services Stateful Firewall [12.3-20121019.0]
JUNOS Voice Services Container package [12.3-20121019.0]
JUNOS Services Example Container package [12.3-20121019.0]
JUNOS Services Crypto [12.3-20121019.0]
JUNOS Services SSL [12.3-20121019.0]
JUNOS Services IPSec [12.3-20121019.0]
JUNOS Runtime Software Suite [12.3-20121019.0]
JUNOS Routing Software Suite [12.3-20121019.0]
```

lcc3-re0:

```
-----
Hostname: host4
Model: t1600
JUNOS Base OS boot [12.3-20121019.0]
JUNOS Base OS Software Suite [12.3-20121019.0]
JUNOS Kernel Software Suite [12.3-20121019.0]
JUNOS Crypto Software Suite [12.3-20121019.0]
JUNOS Packet Forwarding Engine Support (M/T Common) [12.3-20121019.0]
JUNOS Packet Forwarding Engine Support (T-Series) [12.3-20121019.0]
JUNOS Online Documentation [12.3-20121019.0]
JUNOS Services AACL Container package [12.3-20121019.0]
JUNOS Services Application Level Gateways [12.3-20121019.0]
JUNOS AppId Services [12.3-20121019.0]
JUNOS Border Gateway Function package [12.3-20121019.0]
JUNOS Services Captive Portal and Content Delivery Container package
[12.3-20121019.0]
JUNOS Services HTTP Content Management package [12.3-20121019.0]
JUNOS IDP Services [12.3-20121019.0]
JUNOS Services LL-PDF Container package [12.3-20121019.0]
JUNOS Services NAT [12.3-20121019.0]
JUNOS Services PTSP Container package [12.3-20121019.0]
JUNOS Services RPM [12.3-20121019.0]
JUNOS Services Stateful Firewall [12.3-20121019.0]
JUNOS Voice Services Container package [12.3-20121019.0]
JUNOS Services Example Container package [12.3-20121019.0]
JUNOS Services Crypto [12.3-20121019.0]
JUNOS Services SSL [12.3-20121019.0]
JUNOS Services IPSec [12.3-20121019.0]
JUNOS Runtime Software Suite [12.3-20121019.0]
JUNOS Routing Software Suite [12.3-20121019.0]
```

show version (TX Matrix Plus Router with 3D SIBs)

```
user@host>show version
sfc0-re0:
```

```
-----
Hostname: sfc0
```

```

Model: txp
JUNOS Base OS boot [13.1-20130306.0]
JUNOS Base OS Software Suite [13.1-20130306.0]
JUNOS Kernel Software Suite [13.1-20130306.0]
JUNOS Crypto Software Suite [13.1-20130306.0]
JUNOS Packet Forwarding Engine Support (M/T Common) [13.1-20130306.0]
JUNOS Packet Forwarding Engine Support (T-Series) [13.1-20130306.0]
JUNOS Online Documentation [13.1-20130306.0]
JUNOS Services ACL Container package [13.1-20130306.0]
JUNOS Services Application Level Gateways [13.1-20130306.0]
JUNOS AppId Services [13.1-20130306.0]
JUNOS Border Gateway Function package [13.1-20130306.0]
JUNOS Services Captive Portal and Content Delivery Container package
[13.1-20130306.0]
JUNOS Services HTTP Content Management package [13.1-20130306.0]
JUNOS IDP Services [13.1-20130306.0]
JUNOS Services Jflow Container package [13.1-20130306.0]
JUNOS Services LL-PDF Container package [13.1-20130306.0]
JUNOS Services MobileNext Software package [13.1-20130306.0]
JUNOS Services Mobile Subscriber Service Container package [13.1-20130306.0]
JUNOS Services NAT [13.1-20130306.0]
JUNOS Services PTSP Container package [13.1-20130306.0]
JUNOS Services RPM [13.1-20130306.0]
JUNOS Services Stateful Firewall [13.1-20130306.0]
JUNOS Voice Services Container package [13.1-20130306.0]
JUNOS Services Example Container package [13.1-20130306.0]
JUNOS Services Crypto [13.1-20130306.0]
JUNOS Services SSL [13.1-20130306.0]
JUNOS Services IPSec [13.1-20130306.0]
JUNOS Runtime Software Suite [13.1-20130306.0]
JUNOS Routing Software Suite [13.1-20130306.0]

```

```
lcc0-re0:
```

```

-----
Hostname: lcc0
Model: t4000
JUNOS Base OS boot [13.1-20130306.0]
JUNOS Base OS Software Suite [13.1-20130306.0]
JUNOS Kernel Software Suite [13.1-20130306.0]
JUNOS Crypto Software Suite [13.1-20130306.0]
JUNOS Packet Forwarding Engine Support (M/T Common) [13.1-20130306.0]
JUNOS Packet Forwarding Engine Support (T-Series) [13.1-20130306.0]
JUNOS Online Documentation [13.1-20130306.0]
JUNOS Services ACL Container package [13.1-20130306.0]
JUNOS Services Application Level Gateways [13.1-20130306.0]
JUNOS AppId Services [13.1-20130306.0]
JUNOS Border Gateway Function package [13.1-20130306.0]
JUNOS Services Captive Portal and Content Delivery Container package
[13.1-20130306.0]
JUNOS Services HTTP Content Management package [13.1-20130306.0]
JUNOS IDP Services [13.1-20130306.0]
JUNOS Services Jflow Container package [13.1-20130306.0]
JUNOS Services LL-PDF Container package [13.1-20130306.0]
JUNOS Services MobileNext Software package [13.1-20130306.0]
JUNOS Services Mobile Subscriber Service Container package [13.1-20130306.0]
JUNOS Services NAT [13.1-20130306.0]
JUNOS Services PTSP Container package [13.1-20130306.0]
JUNOS Services RPM [13.1-20130306.0]
JUNOS Services Stateful Firewall [13.1-20130306.0]
JUNOS Voice Services Container package [13.1-20130306.0]
JUNOS Services Example Container package [13.1-20130306.0]

```

JUNOS Services Crypto [13.1-20130306.0]
 JUNOS Services SSL [13.1-20130306.0]
 JUNOS Services IPSec [13.1-20130306.0]
 JUNOS Runtime Software Suite [13.1-20130306.0]
 JUNOS Routing Software Suite [13.1-20130306.0]

lcc2-re0:

 Hostname: lcc2
 Model: t4000
 JUNOS Base OS boot [13.1-20130306.0]
 JUNOS Base OS Software Suite [13.1-20130306.0]
 JUNOS Kernel Software Suite [13.1-20130306.0]
 JUNOS Crypto Software Suite [13.1-20130306.0]
 JUNOS Packet Forwarding Engine Support (M/T Common) [13.1-20130306.0]
 JUNOS Packet Forwarding Engine Support (T-Series) [13.1-20130306.0]
 JUNOS Online Documentation [13.1-20130306.0]
 JUNOS Services AACL Container package [13.1-20130306.0]
 JUNOS Services Application Level Gateways [13.1-20130306.0]
 JUNOS AppId Services [13.1-20130306.0]
 JUNOS Border Gateway Function package [13.1-20130306.0]
 JUNOS Services Captive Portal and Content Delivery Container package [13.1-20130306.0]
 JUNOS Services HTTP Content Management package [13.1-20130306.0]
 JUNOS IDP Services [13.1-20130306.0]
 JUNOS Services Jflow Container package [13.1-20130306.0]
 JUNOS Services LL-PDF Container package [13.1-20130306.0]
 JUNOS Services MobileNext Software package [13.1-20130306.0]
 JUNOS Services Mobile Subscriber Service Container package [13.1-20130306.0]
 JUNOS Services NAT [13.1-20130306.0]
 JUNOS Services PTSP Container package [13.1-20130306.0]
 JUNOS Services RPM [13.1-20130306.0]
 JUNOS Services Stateful Firewall [13.1-20130306.0]
 JUNOS Voice Services Container package [13.1-20130306.0]
 JUNOS Services Example Container package [13.1-20130306.0]
 JUNOS Services Crypto [13.1-20130306.0]
 JUNOS Services SSL [13.1-20130306.0]
 JUNOS Services IPSec [13.1-20130306.0]
 JUNOS Runtime Software Suite [13.1-20130306.0]
 JUNOS Routing Software Suite [13.1-20130306.0]

lcc4-re0:

 Hostname: lcc4
 Model: t4000
 JUNOS Base OS boot [13.1-20130306.0]
 JUNOS Base OS Software Suite [13.1-20130306.0]
 JUNOS Kernel Software Suite [13.1-20130306.0]
 JUNOS Crypto Software Suite [13.1-20130306.0]
 JUNOS Packet Forwarding Engine Support (M/T Common) [13.1-20130306.0]
 JUNOS Packet Forwarding Engine Support (T-Series) [13.1-20130306.0]
 JUNOS Online Documentation [13.1-20130306.0]
 JUNOS Services AACL Container package [13.1-20130306.0]
 JUNOS Services Application Level Gateways [13.1-20130306.0]
 JUNOS AppId Services [13.1-20130306.0]
 JUNOS Border Gateway Function package [13.1-20130306.0]
 JUNOS Services Captive Portal and Content Delivery Container package [13.1-20130306.0]
 JUNOS Services HTTP Content Management package [13.1-20130306.0]
 JUNOS IDP Services [13.1-20130306.0]

```

JUNOS Services Jflow Container package [13.1-20130306.0]
JUNOS Services LL-PDF Container package [13.1-20130306.0]
JUNOS Services MobileNext Software package [13.1-20130306.0]
JUNOS Services Mobile Subscriber Service Container package [13.1-20130306.0]
JUNOS Services NAT [13.1-20130306.0]
JUNOS Services PTSP Container package [13.1-20130306.0]
JUNOS Services RPM [13.1-20130306.0]
JUNOS Services Stateful Firewall [13.1-20130306.0]
JUNOS Voice Services Container package [13.1-20130306.0]
JUNOS Services Example Container package [13.1-20130306.0]
JUNOS Services Crypto [13.1-20130306.0]
JUNOS Services SSL [13.1-20130306.0]
JUNOS Services IPSec [13.1-20130306.0]
JUNOS Runtime Software Suite [13.1-20130306.0]
JUNOS Routing Software Suite [13.1-20130306.0]

```

lcc6-re0:

```

-----
Hostname: lcc6
Model: t1600
JUNOS Base OS boot [13.1-20130306.0]
JUNOS Base OS Software Suite [13.1-20130306.0]
JUNOS Kernel Software Suite [13.1-20130306.0]
JUNOS Crypto Software Suite [13.1-20130306.0]
JUNOS Packet Forwarding Engine Support (M/T Common) [13.1-20130306.0]
JUNOS Packet Forwarding Engine Support (T-Series) [13.1-20130306.0]
JUNOS Online Documentation [13.1-20130306.0]
JUNOS Services AACL Container package [13.1-20130306.0]
JUNOS Services Application Level Gateways [13.1-20130306.0]
JUNOS AppId Services [13.1-20130306.0]
JUNOS Border Gateway Function package [13.1-20130306.0]
JUNOS Services Captive Portal and Content Delivery Container package
[13.1-20130306.0]
JUNOS Services HTTP Content Management package [13.1-20130306.0]
JUNOS IDP Services [13.1-20130306.0]
JUNOS Services Jflow Container package [13.1-20130306.0]
JUNOS Services LL-PDF Container package [13.1-20130306.0]
JUNOS Services MobileNext Software package [13.1-20130306.0]
JUNOS Services Mobile Subscriber Service Container package [13.1-20130306.0]
JUNOS Services NAT [13.1-20130306.0]
JUNOS Services PTSP Container package [13.1-20130306.0]
JUNOS Services RPM [13.1-20130306.0]
JUNOS Services Stateful Firewall [13.1-20130306.0]
JUNOS Voice Services Container package [13.1-20130306.0]
JUNOS Services Example Container package [13.1-20130306.0]
JUNOS Services Crypto [13.1-20130306.0]
JUNOS Services SSL [13.1-20130306.0]
JUNOS Services IPSec [13.1-20130306.0]
JUNOS Runtime Software Suite [13.1-20130306.0]
JUNOS Routing Software Suite [13.1-20130306.0]

```

lcc7-re0:

```

-----
Hostname: lcc7
Model: t1600
JUNOS Base OS boot [13.1-20130306.0]
JUNOS Base OS Software Suite [13.1-20130306.0]
JUNOS Kernel Software Suite [13.1-20130306.0]
JUNOS Crypto Software Suite [13.1-20130306.0]
JUNOS Packet Forwarding Engine Support (M/T Common) [13.1-20130306.0]

```

```

JUNOS Packet Forwarding Engine Support (T-Series) [13.1-20130306.0]
JUNOS Online Documentation [13.1-20130306.0]
JUNOS Services AACL Container package [13.1-20130306.0]
JUNOS Services Application Level Gateways [13.1-20130306.0]
JUNOS AppId Services [13.1-20130306.0]
JUNOS Border Gateway Function package [13.1-20130306.0]
JUNOS Services Captive Portal and Content Delivery Container package
[13.1-20130306.0]
JUNOS Services HTTP Content Management package [13.1-20130306.0]
JUNOS IDP Services [13.1-20130306.0]
JUNOS Services Jflow Container package [13.1-20130306.0]
JUNOS Services LL-PDF Container package [13.1-20130306.0]
JUNOS Services MobileNext Software package [13.1-20130306.0]
JUNOS Services Mobile Subscriber Service Container package [13.1-20130306.0]
JUNOS Services NAT [13.1-20130306.0]
JUNOS Services PTSP Container package [13.1-20130306.0]
JUNOS Services RPM [13.1-20130306.0]
JUNOS Services Stateful Firewall [13.1-20130306.0]
JUNOS Voice Services Container package [13.1-20130306.0]
JUNOS Services Example Container package [13.1-20130306.0]
JUNOS Services Crypto [13.1-20130306.0]
JUNOS Services SSL [13.1-20130306.0]
JUNOS Services IPSec [13.1-20130306.0]
JUNOS Runtime Software Suite [13.1-20130306.0]
JUNOS Routing Software Suite [13.1-20130306.0]

```

show version (MX Series Router)

```

user@host5> show version
Hostname: host5
Model: mx80
JUNOS Base OS boot [11.3-20110717.0]
JUNOS Base OS Software Suite [11.3-20110717.0]
JUNOS Kernel Software Suite [11.3-20110717.0]
JUNOS Crypto Software Suite [11.3-20110717.0]
JUNOS Packet Forwarding Engine Support (MX80) [11.3-20110717.0]
JUNOS Online Documentation [11.3-20110717.0]
JUNOS Routing Software Suite [11.3-20110717.0]

```

show version (QFX3500 Switch)

```

user@switch> show version
Hostname: switch
Model: qfx_s3500
JUNOS Base OS boot [11.1R1]
JUNOS Base OS Software Suite [11.1R1]
JUNOS Kernel Software Suite [11.1R1]
JUNOS Crypto Software Suite [11.1R1]
JUNOS Online Documentation [11.1R1]
JUNOS Enterprise Software Suite [11.1R1]
JUNOS Packet Forwarding Engine Support (QFX) [11.1R1]
JUNOS Routing Software Suite [11.1R1]

```

show version (QFabric System)

```

user@qfabric> show version
Hostname: qfabric
Model: qfx3000-g
Serial Number: qfsn-0123456789
QFabric System ID: f158527a-f99e-11e0-9fbd-00e081c57cda
JUNOS Base Version [12.2I20111018_0215_dc-builder]

```


show version component all (QFabric System)

```

user@switch> show version component all
dg1:
-
Hostname: qfabric
Model: qfx3100
JUNOS Base Version [11.3R1.6]

dg0:
-
Hostname: qfabric
Model: qfx3100
JUNOS Base Version [11.3R1.6]

NW-NG-0:
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3R1.6]
JUNOS Base OS Software Suite [11.3R1.6]
JUNOS Kernel Software Suite [11.3R1.6]
JUNOS Crypto Software Suite [11.3R1.6]
JUNOS Online Documentation [11.3R1.6]
JUNOS Enterprise Software Suite [11.3R1.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3R1.6]
JUNOS Routing Software Suite [11.3R1.6]

FC-0:
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3R1.6]
JUNOS Base OS Software Suite [11.3R1.6]
JUNOS Kernel Software Suite [11.3R1.6]
JUNOS Crypto Software Suite [11.3R1.6]
JUNOS Online Documentation [11.3R1.6]
JUNOS Enterprise Software Suite [11.3R1.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3R1.6]
JUNOS Routing Software Suite [11.3R1.6]

FC-1:
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3R1.6]
JUNOS Base OS Software Suite [11.3R1.6]
JUNOS Kernel Software Suite [11.3R1.6]
JUNOS Crypto Software Suite [11.3R1.6]
JUNOS Online Documentation [11.3R1.6]
JUNOS Enterprise Software Suite [11.3R1.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3R1.6]
JUNOS Routing Software Suite [11.3R1.6]

DRE-0:
-
Hostname: dre-0
Model: qfx-jvre
JUNOS Base OS boot [11.3R1.6]
JUNOS Base OS Software Suite [11.3R1.6]
JUNOS Kernel Software Suite [11.3R1.6]
JUNOS Crypto Software Suite [11.3R1.6]

```

```
JUNOS Online Documentation [11.3R1.6]
JUNOS Enterprise Software Suite [11.3R1.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3R1.6]
JUNOS Routing Software Suite [11.3R1.6]
```

```
FM-0:
```

```
-
Hostname: qfabric
Model: qfx-jvre
JUNOS Base OS boot [11.3R1.6]
JUNOS Base OS Software Suite [11.3R1.6]
JUNOS Kernel Software Suite [11.3R1.6]
JUNOS Crypto Software Suite [11.3R1.6]
JUNOS Online Documentation [11.3R1.6]
JUNOS Enterprise Software Suite [11.3R1.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3R1.6]
JUNOS Routing Software Suite [11.3R1.6]
```


```
nodedevice1:
```

```
-
Hostname: qfabric
Model: QFX3500
JUNOS Base OS boot [11.3R1.6]
JUNOS Base OS Software Suite [11.3R1.6]
JUNOS Kernel Software Suite [11.3R1.6]
JUNOS Crypto Software Suite [11.3R1.6]
JUNOS Online Documentation [11.3R1.6]
JUNOS Enterprise Software Suite [11.3R1.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3R1.6]
JUNOS Routing Software Suite [11.3R1.6]
```

```
interconnectdevice1:
```

```
-
Hostname: qfabric
Model: QFX3108
JUNOS Base OS boot [11.3R1.6]
JUNOS Base OS Software Suite [11.3R1.6]
JUNOS Kernel Software Suite [11.3R1.6]
JUNOS Crypto Software Suite [11.3R1.6]
JUNOS Online Documentation [11.3R1.6]
JUNOS Enterprise Software Suite [11.3R1.6]
JUNOS Packet Forwarding Engine Support (QFX RE) [11.3R1.6]
JUNOS Routing Software Suite [11.3R1.6]
warning: from interconnectdevice0: Disconnected
```

start shell

Syntax	start shell (csh sh) <user <i>username</i> >
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Exit from the CLI environment and create a UNIX-level shell. To return to the CLI, type exit from the shell.
<div>  NOTE: <ul style="list-style-type: none"> To issue this command, the user must have the required login access privileges configured by including the permissions statement at the [edit system login class <i>class-name</i>] hierarchy level. UNIX wheel group membership or permissions are no longer required to issue this command. </div>	
Options	csh —Create a UNIX C shell. sh —Create a UNIX Bourne shell. user <i>username</i> —(Optional) Start the shell as another user.
Additional Information	When you are in the shell, the shell prompt has the following format: <i>username@hostname%</i> An example of the prompt is: root@host%
Required Privilege Level	shell and maintenance
List of Sample Output	start shell csh on page 1285
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

start shell csh

```

user@host> start shell csh
%
exit
%
```

```
username@hostname% start shell sh
%

exit
user@host>
```

test configuration

Syntax	<code>test configuration <i>filename</i></code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Verify that the syntax of a configuration file is correct. If the configuration contains any syntax or commit check errors, a message is displayed to indicate the line number and column number in which the error was found. This command only accepts text files.
Options	<p><i>filename</i>—Name of the configuration file.</p> <p>syntax-only—Check the syntax of a partial configuration file, without checking for commit errors. This option introduced in Junos OS Release 12.1.</p>
Required Privilege Level	view
List of Sample Output	test configuration on page 1287
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

test configuration

```

user@host> test configuration terminal
[Type ^D to end input]
system {
host-name bluesky;
paris-23;
login;
}
terminal:3:(8) syntax error: paris
[edit system]
    'paris-23;'
    syntax error
terminal:4:(11) statement must contain additional statements: ;
[edit system login]
    'login ;'
    statement must contain additional statements
configuration syntax failed

```

traceroute

List of Syntax [Syntax on page 1288](#)
[Syntax \(QFX Series and OCX Series\) on page 1288](#)

Syntax `traceroute host`
 `<as-number-lookup>`
 `<bypass-routing>`
 `<clns>`
 `<gateway address>`
 `<inet | inet6>`
 `<interface interface-name>`
 `<logical system logical-system-name>`
 `<monitor host>`
 `<mpls (ldp FEC address | rsvp label-switched-path-name)>`
 `<no-resolve>`
 `<propagate-ttl>`
 `<routing-instance routing-instance-name>`
 `<source source-address>`
 `<tos value>`
 `<ttl value>`
 `<wait seconds>`

Syntax (QFX Series and OCX Series) `traceroute host`
 `<as-number-lookup>`
 `<bypass-routing>`
 `<gateway address>`
 `<inet>`
 `<inet6>`
 `<interface interface-name>`
 `<monitor host>`
 `<no-resolve>`
 `<routing-instance routing-instance-name>`
 `<source source-address>`
 `<tos value>`
 `<ttl value>`
 `<wait seconds>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 mpls option introduced in Junos OS Release 9.2.
 Command introduced in Junos OS Release 11.1 for the QFX Series.
 propagate-ttl option introduced in Junos OS Release 12.1.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display the route that packets take to a specified network host. Use **traceroute** as a debugging tool to locate points of failure in a network.

Options **host**—IP address or name of remote host.

as-number-lookup—(Optional) Display the autonomous system (AS) number of each intermediate hop on the path from the host to the destination.

bypass-routing—(Optional) Bypass the normal routing tables and send requests directly to a system on an attached network. If the system is not on a directly attached network, an error is returned. Use this option to display a route to a local system through an interface that has no route through it.

clns—(Optional) Trace the route belonging to the Connectionless Network Service (CLNS).

gateway address—(Optional) Address of a router or switch through which the route transits.

inet | inet6—(Optional) Trace the route belonging to IPv4 or IPv6, respectively.

interface *interface-name*—(Optional) Name of the interface over which to send packets.

logical-system *logical-system-name*—(Optional) Perform this operation on all logical systems or on a particular logical system.

monitor *host*—(Optional) Display real-time monitoring information for the specified host.

mpls (*ldp FEC address* | *rsvp label-switched-path name*)—(Optional) See *traceroute mpls ldp* and *traceroute mpls rsvp*.

no-resolve—(Optional) Do not attempt to determine the hostname that corresponds to the IP address.

propagate-ttl—(Optional) On the PE routing device, use this option to view locally generated Routing Engine transit traffic. This is applicable for MPLS L3VPN traffic only.

Use for troubleshooting, when you want to view hop-by-hop information from the local provider router to the remote provider router, when TTL decrementing is disabled on the core network using the **no-propagate-ttl** configuration statement.



NOTE: Using **propagate-ttl** with **traceroute** on the CE router does not show hop-by-hop information.

routing-instance *routing-instance-name*—(Optional) Name of the routing instance for the traceroute attempt.

source *source-address*—(Optional) Source address of the outgoing traceroute packets.

tos *value*—(Optional) Value to include in the IP type-of-service (ToS) field. The range of values is 0 through 255.

ttl *value*—(Optional) Maximum time-to-live value to include in the traceroute request. The range of values is 0 through 128.

wait *seconds*—(Optional) Maximum time to wait for a response to the traceroute request.

Required Privilege Level network

- Related Documentation**
- [traceroute monitor on page 1292](#)
- List of Sample Output**
- [traceroute on page 1290](#)
 - [traceroute as-number-lookup host on page 1290](#)
 - [traceroute no-resolve on page 1290](#)
 - [traceroute propagate-ttl on page 1291](#)
 - [traceroute \(Between CE Routers, Layer 3 VPN\) on page 1291](#)
 - [traceroute \(Through an MPLS LSP\) on page 1291](#)
- Output Fields**
- Table 68 on page 1290 describes the output fields for the **traceroute** command. Output fields are listed in the approximate order in which they appear.

Table 68: traceroute Output Fields

Field Name	Field Description
traceroute to	IP address of the receiver.
hops max	Maximum number of hops allowed.
byte packets	Size of packets being sent.
<i>number-of-hops</i>	Number of hops from the source to the named router or switch.
<i>router-name</i>	Name of the router or switch for this hop.
<i>address</i>	Address of the router or switch for this hop.
Round trip time	Average round-trip time, in milliseconds (ms).

Sample Output

traceroute

```

user@host> traceroute santacruz
traceroute to green.company.net (10.156.169.254), 30 hops max, 40 byte packets
 1 blue23 (10.168.1.254)  2.370 ms  2.853 ms  0.367 ms
 2 red14 (10.168.255.250) 0.778 ms  2.937 ms  0.446 ms
 3 yellow (10.156.169.254) 7.737 ms  89.905 ms  0.834 ms

```

traceroute as-number-lookup host

```

user@host> traceroute as-number-lookup 10.100.1.1
traceroute to 10.100.1.1 (10.100.1.1), 30 hops max, 40 byte packets
 1 10.39.1.1 (10.39.1.1) 0.779 ms 0.728 ms 0.562 ms
 2 10.39.1.6 (10.39.1.6) [AS 32] 0.657 ms 0.611 ms 0.617 ms
 3 10.100.1.1 (10.100.1.1) [AS 10, 40, 50] 0.880 ms 0.808 ms 0.774 ms

```

traceroute no-resolve

```

user@host> traceroute santacruz no-resolve

```



```

traceroute to green.company.net (10.156.169.254), 30 hops max, 40 byte packets
 1  10.168.1.254  0.458 ms  0.370 ms  0.365 ms
 2  10.168.255.250  0.474 ms  0.450 ms  0.444 ms
 3  10.156.169.254  0.931 ms  0.876 ms  0.862 ms

```

traceroute propagate-ttl

```

user@host> traceroute propagate-ttl 100.200.2.2 routing-instance VPN-A
traceroute to 100.200.2.2 (100.200.2.2) from 1.1.0.2, 30 hops max, 40 byte packets

 1  1.2.0.2 (1.2.0.2)  2.456 ms  1.753 ms  1.672 ms
    MPLS Label=299776 CoS=0 TTL=1 S=0
    MPLS Label=299792 CoS=0 TTL=1 S=1
 2  1.3.0.2 (1.3.0.2)  1.213 ms  1.225 ms  1.166 ms
    MPLS Label=299792 CoS=0 TTL=1 S=1
 3  100.200.2.2 (100.200.2.2)  1.422 ms  1.521 ms  1.443 ms

```

traceroute (Between CE Routers, Layer 3 VPN)

```

user@host> traceroute vpn09
traceroute to vpn09.skybank.net (10.255.14.179), 30 hops max, 40
byte packets
 1  10.39.10.21 (10.39.10.21)  0.598 ms  0.500 ms  0.461 ms
 2  10.39.1.13 (10.39.1.13)  0.796 ms  0.775 ms  0.806 ms
    MPLS Label=100006 CoS=0 TTL=1 S=1
 3  vpn09.skybank.net (10.255.14.179)  0.783 ms  0.716 ms  0.686

```

traceroute (Through an MPLS LSP)

```

user@host> traceroute mpls1
traceroute to 10.168.1.224 (10.168.1.224), 30 hops max, 40 byte packets
 1  mpls1-sr0.company.net (10.168.200.101)  0.555 ms  0.393 ms  0.367 ms
    MPLS Label=1024 CoS=0 TTL=1
 2  mpls5-lo0.company.net (10.168.1.224)  0.420 ms  0.394 ms  0.401 ms

```

traceroute monitor

List of Syntax	Syntax on page 1292 Syntax (QFX Series) on page 1292
Syntax	<code>traceroute monitor <i>host</i></code> <code><count <i>value</i>></code> <code><inet inet6></code> <code><interval <i>seconds</i>></code> <code><no resolve></code> <code><size <i>value</i>></code> <code><source <i>source-address</i>></code> <code><summary></code>
Syntax (QFX Series)	<code>traceroute monitor <i>host</i></code> <code><count <i>value</i>></code> <code><inet></code> <code><inet6></code> <code><interval <i>seconds</i>></code> <code><no resolve></code> <code><size <i>value</i>></code> <code><source <i>source-address</i>></code> <code><summary></code>
Release Information	Command introduced in Junos OS Release 8.0 Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display live monitoring of each hop in the route that packets take to a specified network host. Use as a debugging tool to locate points of failure in a network.
Options	<p><i>host</i>—IP address or name of remote host.</p> <p><i>count value</i>—Number of ping requests, in packets, to send in summary mode. The default value is 10.</p> <p><i>inet inet6</i>—(Optional) Trace the route belonging to IPv4 or IPv6, respectively.</p> <p><i>interval seconds</i>—(Optional) Number of seconds to wait before sending ping requests. The default value is 1.</p> <p><i>no resolve</i>—(Optional) Do not attempt to display addresses symbolically.</p> <p><i>size value</i>—(Optional) Receive the specified number of bytes for each packet. The range is 0 through 65468 bytes. The default value is 64.</p> <p><i>source source-address</i>—(Optional) Source address of the outgoing ping packets.</p> <p><i>summary</i>—(Optional) Generate and display a summary of live monitoring of each hop on the route that packets take to a specified network host.</p>

Required Privilege Level network

List of Sample Output [traceroute monitor on page 1293](#)

Output Fields [Table 69 on page 1293](#) describes the output fields for the **traceroute monitor** command. Output fields are listed in the approximate order in which they appear.

Table 69: traceroute monitor Output Fields

Field Name	Field Description
Host	Hostname or IP address of the router at each hop.
Loss%	Percent of packet loss. The number of ping responses divided by the number of ping requests, specified as a percentage.
Snt	Number of ping requests sent to the router at this hop.
Last	Most recent round-trip time, in milliseconds, to the router at this hop.
Avg	Average round-trip time, in milliseconds, to the router at this hop.
Best	Shortest round-trip time, in milliseconds, to the router at this hop.
Wrst	Longest round-trip time, in milliseconds, to the router at this hop.
StDev	Standard deviation of round-trip times, in milliseconds, to the router at this hop.

Sample Output

traceroute monitor

```
user@host> traceroute monitor 10.16.0.1
```

	Loss%	Snt	Last	Avg	Best	Wrst	StDev
Host							
1. 10.17.41.254	0.0%	17	0.7	1.0	0.6	5.4	1.2
2. secret.net	0.0%	17	0.6	1.0	0.6	6.6	1.4
3. top-secret.net	0.0%	17	0.6	0.6	0.6	0.6	0.0

CHAPTER 31

Standard Software Installation and Upgrade Operational Commands

- request system software add
- request system software delete
- request system software download
- request system software rollback
- request system software validate
- rollback
- show system rollback
- show system software
- show system software usb-software-version

request system software add

List of Syntax [Syntax on page 1296](#)
 [Syntax \(EX Series Switches\) on page 1296](#)
 [Syntax \(TX Matrix Router\) on page 1296](#)
 [Syntax \(TX Matrix Plus Router\) on page 1297](#)
 [Syntax \(MX Series Router\) on page 1297](#)
 [Syntax \(QFX Series\) on page 1297](#)
 [Syntax \(OCX Series\) on page 1297](#)

Syntax request system software add *package-name*
 <best-effort-load>
 <delay-restart>
 <force>
 <no-copy>
 <no-validate>
 <re0 | re1>
 <reboot>
 <set [*package-name package-name*]>
 <unlink>
 <upgrade-with-config>
 <upgrade-with-config-format *format*>
 <validate>

Syntax (EX Series Switches) request system software add *package-name*
 <best-effort-load>
 <delay-restart>
 <force>
 <no-copy>
 <no-validate>
 <re0 | re1>
 <reboot>
 <set [*package-name package-name*]>
 <upgrade-with-config>
 <upgrade-with-config-format *format*>
 <validate>

Syntax (TX Matrix Router) request system software add *package-name*
 <best-effort-load>
 <delay-restart>
 <force>
 <lcc *number* | scc>
 <no-copy>
 <no-validate>
 <re0 | re1>
 <reboot>
 <set [*package-name package-name*]>
 <unlink>
 <upgrade-with-config>
 <upgrade-with-config-format *format*>
 <validate>

Syntax (TX Matrix Plus Router) request system software add *package-name*
 <best-effort-load>
 <delay-restart>
 <force>
 <lcc *number* | sfc *number*>
 <no-copy>
 <no-validate>
 <re0 | re1>
 <reboot>
 <set [*package-name package-name*]>
 <unlink>
 <upgrade-with-config>
 <upgrade-with-config-format *format*>
 <validate>

Syntax (MX Series Router) request system software add *package-name*
 <best-effort-load>
 <delay-restart>
 <force>
 <member *member-id*>
 <no-copy>
 <no-validate>
 <re0 | re1>
 <reboot>
 <set [*package-name package-name*]>
 <unlink>
 <upgrade-with-config>
 <upgrade-with-config-format *format*>
 <validate>

Syntax (QFX Series) request system software add *package-name*
 <best-effort-load>
 <component all>
 <delay-restart>
 <force>
 <force-host>
 <no-copy>
 <no-validate>
 <partition>
 <reboot>
 <unlink>
 <upgrade-with-config>
 <upgrade-with-config-format *format*>
 <validate>

Syntax (OCX Series) request system software add *package-name*
 <best-effort-load>
 <delay-restart>
 <force>
 <force-host>
 <no-copy>
 <no-validate>
 <reboot>
 <unlink>
 <upgrade-with-config>

<upgrade-with-config-format *format*>
<validate>

Release Information Command introduced before Junos OS Release 7.4.
best-effort-load and **unlink** options added in Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.
 Command introduced in Junos OS Release 11.1 for the QFX Series.
set [package-name package-name] option added in Junos OS Release 11.1 for EX Series switches.
set [package-name package-name] option added in Junos OS Release 12.2 for M Series, MX Series, T Series routers, and Branch SRX Series Services Gateways.



NOTE: On EX Series switches, the set [package-name package-name] option allows you to install only two software packages on a mixed EX4200 and EX4500 Virtual Chassis, whereas, on M Series, MX Series, T Series routers, and Branch SRX Series Services Gateways, the set [package-name package-name] option allows you to install multiple software packages and software add-on packages at the same time.

upgrade-with-config and **upgrade-with-config-format format** options added in Junos OS Release 12.3 for M Series routers, MX Series routers, T Series routers, EX Series Ethernet switches, and QFX Series devices.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description



NOTE: We recommend that you always download the software image to /var/tmp only. On EX Series and QFX Series switches, you must use the /var/tmp directory. Other directories are not supported.

Install a software package or bundle on the router or switch.



WARNING: Any configuration changes performed after inputting the request system software add command will be lost when the system reboots with an upgraded version of JUNOS.

Options **package-name**—Location from which the software package or bundle is to be installed.
 For example:

- **/var/tmp/package-name**—For a software package or bundle that is being installed from a local directory on the router or switch.
- **protocol://hostname/pathname/package-name**—For a software package or bundle that is to be downloaded and installed from a remote location. Replace **protocol** with one of the following:

- **ftp**—File Transfer Protocol.
Use **ftp://hostname/pathname/package-name**. To specify authentication credentials, use **ftp://<username>:<password>@hostname/pathname/package-name**. To have the system prompt you for the password, specify **prompt** in place of the password. If a password is required, and you do not specify the password or **prompt**, an error message is displayed.
- **http**—Hypertext Transfer Protocol.
Use **http://hostname/pathname/package-name**. To specify authentication credentials, use **http://<username>:<password>@hostname/pathname/package-name**. If a password is required and you omit it, you are prompted for it.
- **scp**—Secure copy (available only for Canada and U.S. version).
Use **scp://hostname/pathname/package-name**. To specify authentication credentials, use **scp://<username>:<password>@hostname/pathname/package-name**.

**NOTE:**

- The **pathname** in the protocol is the relative path to the user's home directory on the remote system and not the root directory.
- Do not use the **scp** protocol in the request system software add command to download and install a software package or bundle from a remote location. The previous statement does not apply to the QFabric switch. The software upgrade is handled by the MGD process which does not support **scp**.
Use the file copy command to copy the software package or bundle from the remote location to the **/var/tmp** directory on the hard disk:
file copy scp://source/package-name /var/tmp
Then install the software package or bundle using the request system software add command:
request system software add /var/tmp/package-name
- On a J Series Services Router, when you install the software from a remote location, the package is removed at the earliest opportunity in order to make room for the installation to be completed. If you copy the software to a local directory on the router and then install the new package, use the **unlink** option to achieve the same effect and allow the installation to be completed.

best-effort-load—(Optional) Activate a partial load and treat parsing errors as warnings instead of errors.

component all—(QFabric systems only) (Optional) Install software package on all of the QFabric components.

delay-restart—(Optional) Install a software package or bundle, but do not restart software processes.

force—(Optional) Force the addition of the software package or bundle (ignore warnings).

force-host—(Optional) Force the addition of host software package or bundle (ignore warnings) on the QFX5100 device.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) In a routing matrix based on the TX Matrix router, install a software package or bundle on a T640 router that is connected to the TX Matrix router. In a routing matrix based on the TX Matrix Plus router, install a software package or bundle on a router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

member *member-id*—(MX Series routers only) (Optional) Install a software package on the specified Virtual Chassis member. Replace *member-id* with a value of 0 or 1.

partition—(QFX3500 switches only) (Optional) Format and repartition the media before installation.

scc—(TX Matrix routers only) (Optional) Install a software package or bundle on a Routing Engine on a TX Matrix router (or switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Install a software package or bundle on a Routing Engine on a TX Matrix Plus router. Replace *number* with 0.

no-copy—(Optional) Install a software package or bundle, but do not save copies of the package or bundle files.

no-validate—(Optional) When loading a software package or bundle with a different release, suppress the default behavior of the **validate** option.

re0 | re1—(Optional) On routers or switches that support dual or redundant Routing Engines, load a software package or bundle on the Routing Engine in slot 0 (re0) or the Routing Engine in slot 1 (re1).

reboot—(Optional) After adding the software package or bundle, reboot the system. On a QFabric switch, the software installation is not complete until you reboot the component for which you have installed the software.

set [*package-name package-name*]—(Mixed EX4200 and EX4500 Virtual Chassis only) (Optional) Install two software packages—a package for an EX4200 switch and the same release of the package for an EX4500 switch—to upgrade all member switches in a mixed EX4200 and EX4500 Virtual Chassis.

set [*package-name package-name*]—(M Series, MX Series, T Series routers, and Branch SRX Series Services Gateways only) (Optional) Install multiple software packages and software add-on packages at the same time.

unlink—(Optional) On J Series Services Routers, this option ensures that the software package is removed at the earliest opportunity in order to make room for the installation to be completed. On M Series, T Series, and MX Series routers, use the **unlink** option to remove the software package from this directory after a successful upgrade is completed.

upgrade-with-config—(Optional) Install one or more configuration files.

upgrade-with-config-format *format*—(Optional) Specify the configuration file format, **text** or **xml**. The default format is **text**.



NOTE: The **upgrade-with-config** and **upgrade-with-config-format** options are only available locally on the router or switch. In a routing matrix, the configuration is applied only to the local router and is not propagated to other routers.

The options are validated during the validation process and applied to the router or switch during the upgrade process. If the upgrade process is successful, the options are removed from the configuration. If the upgrade process fails, the configuration file is renamed with the **.failed** suffix.

validate—(Optional) Validate the software package or bundle against the current configuration as a prerequisite to adding the software package or bundle. This is the default behavior when the software package or bundle being added is a different release.



NOTE: The **validate** option only works on systems that do not have **graceful-switchover** (GRES) enabled. To use the **validate** option on a system with GRES, either disable GRES for the duration of the installation, or install using the command **request system software in-service-upgrade**, which requires nonstop active routing (NSR) to be enabled when using GRES.

Additional Information Before upgrading the software on the router or switch, when you have a known stable system, issue the **request system snapshot** command to back up the software, including

the configuration, to the **/altroot** and **/altconfig** file systems. After you have upgraded the software on the router or switch and are satisfied that the new package or bundle is successfully installed and running, issue the **request system snapshot** command again to back up the new software to the **/altroot** and **/altconfig** file systems.



NOTE: The **request system snapshot** command is currently not supported on the QFabric system. Also, you cannot add or install multiple packages on a QFabric system.

After you run the **request system snapshot** command, you cannot return to the previous version of the software, because the running and backup copies of the software are identical.

If you are upgrading more than one package at the same time, delete the operating system package, **jkernel**, last. Add the operating system package, **jkernel**, first and the routing software package, **jroute**, last. If you are upgrading all packages at once, delete and add them in the following order:

```
user@host> request system software add /var/tmp/jbase
user@host> request system software add /var/tmp/jkernel
user@host> request system software add /var/tmp/jpfe
user@host> request system software add /var/tmp/jdocs
user@host> request system software add /var/tmp/jroute
user@host> request system software add /var/tmp/jcrypto
```

By default, when you issue the **request system software add package-name** command on a TX Matrix master Routing Engine, all the T640 master Routing Engines that are connected to it are upgraded to the same version of software. If you issue the same command on the TX Matrix backup Routing Engine, all the T640 backup Routing Engines that are connected to it are upgraded to the same version of software.

Likewise, when you issue the **request system software add package-name** command on a TX Matrix Plus master Routing Engine, all the T1600 or T4000 master Routing Engines that are connected to it are upgraded to the same version of software. If you issue the same command on the TX Matrix Plus backup Routing Engine, all the T1600 or T4000 backup Routing Engines that are connected to it are upgraded to the same version of software.

Required Privilege Level

maintenance

Related Documentation

- [request system software delete on page 1305](#)
- [request system software rollback on page 1311](#)
- [request system storage cleanup on page 416](#)
- [Upgrading Software on page 217](#)
- [Upgrading Software on a QFabric System on page 223](#)

- *request system software add (Maintenance)*
- *Routing Matrix with a TX Matrix Plus Router Solutions Page*

List of Sample Output [request system software add validate on page 1303](#)
[request system software add \(Mixed EX4200 and EX4500 Virtual Chassis\) on page 1304](#)
[request system software add component all \(QFabric Systems\) on page 1304](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

`request system software add validate`

```
user@host> request system software add validate /var/tmp/jinstall-7.2R1.7-domestic-signed.tgz
Checking compatibility with configuration
Initializing...
Using jbase-7.1R2.2
Using /var/tmp/jinstall-7.2R1.7-domestic-signed.tgz
Verified jinstall-7.2R1.7-domestic.tgz signed by PackageProduction_7_2_0
Using /var/validate/tmp/jinstall-signed/jinstall-7.2R1.7-domestic.tgz
Using /var/validate/tmp/jinstall/jbundle-7.2R1.7-domestic.tgz
Checking jbundle requirements on /
Using /var/validate/tmp/jbundle/jbase-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jkernel-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jcrypto-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jpfe-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jdocs-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jroute-7.2R1.7.tgz
Validating against /config/juniper.conf.gz
mgd: commit complete
Validation succeeded
Validating against /config/rescue.conf.gz
mgd: commit complete
Validation succeeded
Installing package '/var/tmp/jinstall-7.2R1.7-domestic-signed.tgz' ...
Verified jinstall-7.2R1.7-domestic.tgz signed by PackageProduction_7_2_0
Adding jinstall...

WARNING: This package will load JUNOS 7.2R1.7 software.
WARNING: It will save JUNOS configuration files, and SSH keys
WARNING: (if configured), but erase all other files and information
WARNING: stored on this machine. It will attempt to preserve dumps
WARNING: and log files, but this can not be guaranteed. This is the
WARNING: pre-installation stage and all the software is loaded when
WARNING: you reboot the system.

Saving the config files ...
Installing the bootstrap installer ...

WARNING: A REBOOT IS REQUIRED TO LOAD THIS SOFTWARE CORRECTLY. Use the
WARNING: 'request system reboot' command when software installation is
WARNING: complete. To abort the installation, do not reboot your system,
WARNING: instead use the 'request system software delete jinstall'
WARNING: command as soon as this operation completes.

Saving package file in /var/sw/pkg/jinstall-7.2R1.7-domestic-signed.tgz ...
Saving state for rollback ...
```

Sample Output


request system software add (Mixed EX4200 and EX4500 Virtual Chassis)

```
user@switch> request system software add set
[/var/tmp/jinstall-ex-4200-11.1R1.1-domestic-signed.tgz
/var/tmp/jinstall-ex-4500-11.1R1.1-domestic-signed.tgz]
...
```

request system software add component all (QFabric Systems)

```
user@switch> request system software add /pbdata/packages/jinstall-qfabric-12.2X50-D1.3.rpm
component all
...
```

request system software delete

List of Syntax	Syntax on page 1305 Syntax (TX Matrix Router) on page 1305 Syntax (TX Matrix Plus Router) on page 1305
Syntax	<pre>request system software delete <i>software-package</i> <force> <reboot> <set [<i>package-name package-name</i>]></pre>
Syntax (TX Matrix Router)	<pre>request system software delete <i>software-package</i> <force> <lcc <i>number</i> scc> <reboot> <set [<i>package-name package-name</i>]></pre>
Syntax (TX Matrix Plus Router)	<pre>request system software delete <i>software-package</i> <force> <lcc <i>number</i> sfc <i>number</i>> <reboot> <set [<i>package-name package-name</i>]></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Option sfc introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Option set [<i>package-name package-name</i>] added in Junos OS Release 12.2 for M Series, MX Series, T Series routers, and Branch SRX Services Gateways.</p> <p>Option reboot introduced in Junos OS Release 12.3.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Remove a software package or bundle from the router or switch.
<div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p>CAUTION: Before removing a software package or bundle, make sure that you have already placed the new software package or bundle that you intend to load onto the router or switch.</p> </div> </div>	
Options	<p><i>software-package</i>—Software package or bundle name. You can delete any or all of the following software bundles or packages:</p> <ul style="list-style-type: none"> • jbase—(Optional) Junos base software suite • crypto—(Optional, in domestic version only) Junos security software • docs—(Optional) Junos online documentation file • kernel—(Optional) Junos kernel software suite • pf—(Optional) Junos Packet Forwarding Engine support

- **jroute**—(Optional) Junos routing software suite
- **junos**—(Optional) Junos base software



NOTE: On EX Series switches, some of the package names are different than those listed. To see the list of packages that you can delete on an EX Series switch, enter the command **show system software**.

force—(Optional) Ignore warnings and force removal of the software.

lcc number—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, remove an extension or upgrade package from a specific T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, remove an extension or upgrade package from a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

reboot—As of Junos OS 12.3 and greater, automatically reboot upon completing the **request system software delete** command.

scc—(TX Matrix routers only) (Optional) Remove an extension or upgrade package from the TX Matrix router (or switch-card chassis).

set [package-name package-name]—(M Series, MX Series, T Series routers, and Branch SRX Series Services Gateways only) (Optional) Install multiple software packages or software add-on packages at the same time.

sfc number—(TX Matrix Plus routers only) (Optional) Remove an extension or upgrade package from the TX Matrix Plus router. Replace *number* with 0.

Additional Information

Before upgrading the software on the router or switch, when you have a known stable system, issue the **request system snapshot** command to back up the software, including the configuration, to the `/altroot` and `/altconfig` file systems (on routers) or the `/`, `/altroot`, `/config`, `/var`, and `/var/tmp` file systems (on switches). After you have upgraded the software on the router or switch and are satisfied that the new packages are successfully installed and running, issue the **request system snapshot** command again to back up the new software to the `/altroot` and `/altconfig` file systems (on routers) or the `/`, `/altroot`,

/config, /var, and /var/tmp file systems (on switches). After you run the **request system snapshot** command, you cannot return to the previous version of the software, because the running and backup copies of the software are identical.

Required Privilege Level maintenance

Related Documentation

- [request system software add on page 1296](#)
- [request system software rollback on page 1311](#)
- [request system software validate on page 1315](#)
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

List of Sample Output [request system software delete jdocs on page 1307](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

[request system software delete jdocs](#)

The following example displays the system software packages before and after the **jdocs** package is deleted through the **request system software delete** command:

```
user@host> show system software
Information for jbase:
```

```
Comment:
JUNOS Base OS Software Suite [7.2R1.7]
```

```
Information for jcrypto:
```

```
Comment:
JUNOS Crypto Software Suite [7.2R1.7]
```

```
Information for jdocs:
```

```
Comment:
JUNOS Online Documentation [7.2R1.7]
```

```
Information for jkernel:
```

```
Comment:
JUNOS Kernel Software Suite [7.2R1.7]
```

```
...
```

```
user@host> request system software delete jdocs
Removing package 'jdocs' ...
```

```
user@host> show system software
```

Information for jbase:

Comment:

JUNOS Base OS Software Suite [7.2R1.7]

Information for jcrypto:

Comment:

JUNOS Crypto Software Suite [7.2R1.7]

Information for jkernel:

Comment:

JUNOS Kernel Software Suite [7.2R1.7]

...

request system software download

Syntax (QFabric System)	<code>request system software download <i>path package-name</i></code>
Release Information	Command introduced in Junos OS Release 11.3 for the QFX Series.
Description	Download a software package from a location on the Director device, mounted external USB flash drive, remote FTP or SCP location, or other location.
Options	<p><i>path</i>—Location where the software package is located. For example:</p> <ul style="list-style-type: none"> • <i>/pbdata/packages/package-name</i>—For a software package that is being installed from a local directory on the switch. • <i>protocol://hostname/pathname/package-name</i>—For a software package or bundle that is to be downloaded and installed from a remote location. Replace <i>protocol</i> with one of the following: <ul style="list-style-type: none"> • <i>ftp</i>—File Transfer Protocol. Use <i>ftp://hostname/pathname/package-name</i>. To specify authentication credentials, use <i>ftp://<username>:<password>@hostname/pathname/package-name</i>. To have the system prompt you for the password, specify <i>prompt</i> in place of the password. If a password is required, and you do not specify the password or <i>prompt</i>, an error message is displayed. • <i>scp</i>—Secure copy (available only for Canada and U.S. version). Use <i>scp://hostname/pathname/package-name</i>. To specify authentication credentials, use <i>scp://<username>:<password>@hostname/pathname/package-name</i>.
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none"> • request system software add on page 1296 • request system software delete on page 1305 • request system software rollback on page 1311 • request system storage cleanup on page 416 • Upgrading Software on page 217 • Upgrading Software on a QFabric System on page 223
List of Sample Output	request system software download on page 1310
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system software download

```

user@switch> request system software download
ftp://ftp.install-directory/jinstall-qfabric-11.3X30.6.rpm
% Total      % Received % Xferd  Average Speed   Time    Time     Time  Current
                               Dload  Upload   Total   Spent    Left   Speed
100  186M  100  186M    0     0  18.4M      0  0:00:10  0:00:10 --:--:-- 18.6M

```

request system software rollback

List of Syntax	Syntax on page 1311 Syntax (EX Series Switches) on page 1311 Syntax (TX Matrix Router) on page 1311 Syntax (TX Matrix Plus Router) on page 1311 Syntax (MX Series Router) on page 1311
Syntax	request system software rollback
Syntax (EX Series Switches)	request system software rollback <all-members> <local> <member <i>member-id</i> > <reboot>
Syntax (TX Matrix Router)	request system software rollback <lcc <i>number</i> scc> <reboot>
Syntax (TX Matrix Plus Router)	request system software rollback <lcc <i>number</i> sfc <i>number</i> > <reboot>
Syntax (MX Series Router)	request system software rollback <all-members> <local> <member <i>member-id</i> > <reboot>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Option sfc introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command behavior changed in Junos OS Release 12.1. Option reboot introduced in Junos OS Release 12.3.
Description	<p>For all versions of Junos OS up to and including Junos OS 11.4, revert to the software that was loaded at the last successful request system software add command.</p> <p>As of Junos OS 12.1 and greater, revert to the last known good state before the most recent request system software (add delete) command. For example, using rollback in Junos OS 12.1 after using request system software add restores the system to a known good state prior to using the add command. Similarly, using rollback in Junos OS 12.1 after using request system software delete restores the system to a known good state prior to using the delete command.</p> <p>A software rollback fails if any required package (or a bundle package containing the required package) cannot be found in <code>/var/sw/pkg</code>.</p> <p><i>Additional Information</i></p>

- On M Series and T Series routers, if **request system software add <jinstall> reboot** was used for the previous installation, then **request system software rollback** has no effect. In this case, use **jinstall** to reinstall the required package.
- On M Series and T Series routers, if **request system software add <sdk1>** was used for the previous installation, then **request system software rollback** removes the last installed SDK package (**sdk1** in this example).
- On SRX Series devices with dual root systems, when **request system software rollback** is run, the system switches to the alternate root. Each root can have a different version of Junos OS. Rollback takes each root back to the previously installed image.
- On QFX3500 and QFX3600 devices in a mixed Virtual Chassis, when the **request system software rollback** command is issued, the system does not rollback to the image stored in the alternate partition.
- On QFX5100 switches, the **reboot** option has been removed. To reboot the switch after a software rollback, issue the **request system reboot** command as a separate, secondary command.

Options **all-members**—(EX4200 switches and MX Series routers only) (Optional) Attempt to roll back to the previous set of packages on all members of the Virtual Chassis configuration.

lcc number—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, attempt to roll back to the previous set of packages on a T640 router connected to the TX Matrix router. On a TX Matrix Plus router, attempt to roll back to the previous set of packages on a connected router connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Attempt to roll back to the previous set of packages on the local Virtual Chassis member.

member member-id—(EX4200 switches and MX Series routers only) (Optional) Attempt to roll back to the previous set of packages on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

none—For all versions of Junos OS up to and including Junos OS 11.4, revert to the set of software as of the last successful **request system software add**. As of Junos OS 12.1 and greater, revert to the last known good state before the most recent **request system software (add | delete)** command.

reboot—As of Junos OS 12.3 and greater, automatically reboot upon completing the **request system software rollback** command.

scc—(TX Matrix routers only) (Optional) Attempt to roll back to the previous set of packages on the TX Matrix router (or switch-card chassis).

sfc number—(TX Matrix Plus routers only) (Optional) Attempt to roll back to the previous set of packages on the TX Matrix Plus router. Replace *number* with 0.

Required Privilege Level

maintenance

Related Documentation

- [request system software abort](#)
- [request system software add on page 1296](#)
- [request system software delete on page 1305](#)
- [request system software validate on page 1315](#)
- [request system configuration rescue delete on page 399](#)
- [request system configuration rescue save on page 400](#)
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

List of Sample Output [request system software rollback on page 1314](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system software rollback

```
user@host> request system software rollback
Verified SHA1 checksum of ./jbase-7.2R1.7.tgz
Verified SHA1 checksum of ./jdocs-7.2R1.7.tgz
Verified SHA1 checksum of ./jroute-7.2R1.7.tgz
Installing package './jbase-7.2R1.7.tgz' ...
Available space: 35495 require: 7335
Installing package './jdocs-7.2R1.7.tgz' ...
Available space: 35339 require: 3497
Installing package './jroute-7.2R1.7.tgz' ...
Available space: 35238 require: 6976
NOTICE: uncommitted changes have been saved in
/var/db/config/juniper.conf.pre-install
Reloading /config/juniper.conf.gz ...
Activating /config/juniper.conf.gz ...
mgd: commit complete
Restarting mgd ...
Restarting aprobed ...
Restarting apsd ...
Restarting cosd ...
Restarting fsad ...
Restarting fud ...
Restarting gcdrd ...
Restarting ilmid ...
Restarting irsd ...
Restarting l2tpd ...
Restarting mib2d ...
Restarting nasd ...
Restarting pppoed ...
Restarting rdd ...
Restarting rmopd ...
Restarting rtspd ...
Restarting sampled ...
Restarting serviced ...
Restarting snmpd ...
Restarting spd ...
Restarting vrrpd ...

WARNING: cli has been replaced by an updated version:
CLI release 7.2R1.7 built by builder on 2005-04-22 02:03:44 UTC
Restart cli using the new version ? [yes,no] (yes) yes

Restarting cli ...
user@host
```


request system software validate

List of Syntax	Syntax on page 1315 Syntax (TX Matrix Router) on page 1315 Syntax (TX Matrix Plus Router) on page 1315 Syntax (MX Series Router) on page 1315
Syntax	<pre>request system software validate <i>package-name</i> <set [<i>package-name package-name</i>]> <upgrade-with-config> <upgrade-with-config-format <i>format</i>></pre>
Syntax (TX Matrix Router)	<pre>request system software validate <i>package-name</i> <lcc <i>number</i> scc> <set [<i>package-name package-name</i>]> <upgrade-with-config> <upgrade-with-config-format <i>format</i>></pre>
Syntax (TX Matrix Plus Router)	<pre>request system software validate <i>package-name</i> <lcc <i>number</i> sfc <i>number</i>> <set [<i>package-name package-name</i>]> <upgrade-with-config> <upgrade-with-config-format <i>format</i>></pre>
Syntax (MX Series Router)	<pre>request system software validate <i>package-name</i> <member <i>member-id</i>> <set [<i>package-name package-name</i>]> <upgrade-with-config> <upgrade-with-config-format <i>format</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>set [<i>package-name package-name</i>] option added in Junos OS Release 12.2 for M Series, MX Series, T Series routers, and Branch SRX Series Services Gateways.</p> <p>upgrade-with-config and upgrade-with-config-format <i>format</i> options added in Junos OS Release 12.3 for M Series routers, MX Series routers, and T Series routers.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Validate candidate software against the current configuration of the router.
Options	<p>lcc <i>number</i>—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, validate the software bundle or package on a specific T640 router (or line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, validate the software bundle or package for a specific router that is connected to the TX Matrix Plus router.</p>

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

member *member-id*—(MX Series routers only) (Optional) Validate the software bundle or package on the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

package-name—Name of the software bundle or package to test.

scc—(TX Matrix routers only) (Optional) Validate the software bundle or package for the TX Matrix router (or switch-card chassis).

set [*package-name package-name*]—(M Series, MX Series, T Series routers, and Branch SRX Series Services Gateways only) (Optional) Install multiple software packages or software add-on packages at the same time.

sfc *number*—(TX Matrix Plus routers only) (Optional) Validate the software bundle or package for the TX Matrix Plus router.

upgrade-with-config—(Optional) Install one or more configuration files.

upgrade-with-config-format *format*—(Optional) Specify the configuration file format, **text** or **xml**. The default format is **text**.



NOTE: The **upgrade-with-config** and **upgrade-with-config-format** options are only available locally on the router or switch. In a routing matrix, the configuration is applied only to the local router and is not propagated to other routers.

The options are validated during the validation process and applied to the router or switch during the upgrade process. If the upgrade process is successful, the options are removed from the configuration. If the upgrade process fails, the configuration file is renamed with the **.failed** suffix.

Additional Information By default, when you issue the **request system software validate** command on a TX Matrix master Routing Engine, all the T640 master Routing Engines that are connected to it are validated. If you issue the same command on the TX Matrix backup Routing Engine, all

the T640 backup Routing Engines that are connected to it are upgraded to the same version of software.

Likewise, if you issue the **request system software validate** command on a TX Matrix Plus master Routing Engine, all the T1600 or T4000 master Routing Engines that are connected to it are validated. If you issue the same command on a TX Matrix Plus backup Routing Engine, all the T1600 or T4000 backup Routing Engines that are connected to it are upgraded to the same version of software.

Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none"> • request system software abort • request system software add on page 1296 • request system software delete on page 1305 • request system software rollback on page 1311 • Routing Matrix with a TX Matrix Plus Router Solutions Page
List of Sample Output	request system software validate (Successful Case) on page 1317 request system software validate (Failure Case) on page 1317
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system software validate (Successful Case)

```

user@host> request system software validate /var/sw/pkg/jbundle-5.3I20020124_0520_sjg.tgz
Checking compatibility with configuration
Initializing...
Using /packages/jbase-5.3I20020122_1901_sjg
Using /var/sw/pkg/jbundle-5.3I20020124_0520_sjg.tgz
Using /var/chroot/var/tmp/jbundle/jbase-5.3I20020124_0520_sjg.tgz
Using /var/chroot/var/tmp/jbundle/jkernel-5.3I20020124_0520_sjg.tgz
Using /var/chroot/var/tmp/jbundle/jcrypto-5.3I20020124_0520_sjg.tgz
Using /var/chroot/var/tmp/jbundle/jpfe-5.3I20020124_0520_sjg.tgz
Using /var/chroot/var/tmp/jbundle/jdocs-5.3I20020124_0520_sjg.tgz
Using /var/chroot/var/tmp/jbundle/jroute-5.3I20020124_0520_sjg.tgz
Validating against /config/juniper.conf.gz
mgd: commit complete

WARNING: cli has been replaced by an updated version:
CLI release 5.3I0 built by sjg on 2002-01-24 05:23:53 UTC
Restart cli using the new version ? [yes,no] (yes)

```

request system software validate (Failure Case)

```

user@host> request system software validate 6.3/
Pushing bundle to lcc0-re0
error: Failed to transfer package to lcc0-re0

user@host> request system software validate test

```

```
Pushing bundle to lcc0-re0
Pushing bundle to lcc2-re0

lcc0-re0:
gzip: stdin: not in gzip format
tar: child returned status 1
ERROR: Not a valid package: /var/tmp/test
```

rollback

Syntax	<code>rollback <number rescue></code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	<p>Return to a previously committed configuration. The software saves the last 50 committed configurations, including the rollback number, date, time, and name of the user who issued the commit configuration command.</p> <p>The currently operational Junos OS configuration is stored in the file juniper.conf, and the last three committed configurations are stored in the files juniper.conf.1, juniper.conf.2, and juniper.conf.3. These four files are located in the directory /config, which is on the router's flash drive. The remaining 46 previous committed configurations, the files juniper.conf.4 through juniper.conf.49, are stored in the directory /var/db/config, which is on the router's hard disk.</p> <p>During rollback, the configuration you specify is loaded from the associated file. Only objects in the rollback configuration that differ from the previously loaded configuration are marked as changed (equivalent to load update).</p>
Options	<p>none (Optional)—Return to the most recently saved configuration.</p> <p>number—(Optional) Configuration to return to. The range of values is from 0 through 49. The most recently saved configuration is number 0, and the oldest saved configuration is number 49. The default is 0.</p> <p>rescue—(Optional) Return to the rescue configuration.</p>
Required Privilege Level	rollback—To roll back to configurations other than the one most recently committed.
Related Documentation	<ul style="list-style-type: none"> <i>Returning to a Previously Committed Junos OS Configuration</i> <i>Creating and Returning to a Rescue Configuration</i>

show system rollback

Syntax `show system rollback number`
`<compare number>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.
 Command introduced in Junos OS Release 11.1 for the QFX Series.

Description Display the contents of a previously committed configuration, or the differences between two previously committed configurations.



NOTE: The `show system rollback` command is a purely operational mode command and cannot be issued with `run` from the configuration mode.

Options *number*—Number of a configuration to view. The output displays the configuration. The range of values is 0 through 49.

compare number —(Optional) Number of another previously committed (rollback) configuration to compare to rollback *number*. The output displays the differences between the two configurations. The range of values is 0 through 49.

Required Privilege Level view

List of Sample Output [show system rollback compare on page 1320](#)

Sample Output

show system rollback compare

```
user@host> show system rollback 3 compare 1
[edit]
+ interfaces {
+   ge-1/1/1 {
+     unit 0 {
+       family inet {
+         filter {
+           input mf_plp;
+         }
+         address 14.1.1.1/30;
+       }
+     }
+   }
+   ge-1/2/1 {
+     unit 0 {
+       family inet {
+         filter {
+           input mf_plp;
+         }
+         address 13.1.1.1/30;
```

```
+      }
+    }
+  }
+  ge-1/3/0 {
+    unit 0 {
+      family inet {
+        filter {
+          input mf_plp;
+        }
+        address 12.1.1.1/30;
+      }
+    }
+  }
+}
```

show system software

List of Syntax	Syntax on page 1322 Syntax (EX Series Switches) on page 1322 Syntax (TX Matrix Router) on page 1322 Syntax (TX Matrix Plus Router) on page 1322 Syntax (J Series Routers) on page 1322 Syntax (QFX Series) on page 1322
Syntax	<code>show system software</code> <code><detail></code>
Syntax (EX Series Switches)	<code>show system software</code> <code><all-members></code> <code><detail></code> <code><local></code> <code><member <i>member-id</i>></code>
Syntax (TX Matrix Router)	<code>show system software</code> <code><all-chassis all-lcc lcc <i>number</i> scc></code> <code><detail></code>
Syntax (TX Matrix Plus Router)	<code>show system software</code> <code><all-chassis all-lcc lcc <i>number</i> sfc <i>number</i>></code> <code><detail></code>
Syntax (J Series Routers)	<code>show system software</code> <code><backup></code> <code><detail></code>
Syntax (QFX Series)	<code>show system software</code> <code><detail></code> <code><infrastructure <i>name</i>></code> <code><interconnect-device <i>name</i>></code> <code><node-group <i>name</i>></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the Junos OS extensions loaded on your router or switch.
Options	none —Display standard information about all loaded Junos OS extensions. all-chassis —(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display system software information for all the T640 routers (TX Matrix Router) or all the routers (TX Matrix Plus Router) in the chassis. all-lcc —(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system software information for all T640 routers connected to the

TX Matrix router. On a TX Matrix Plus router, display system software information for all connected T1600 or T4000 LCCs.

all-members—(EX4200 switches only) (Optional) Display the system software running on all members of the Virtual Chassis configuration.

backup—(J Series routers only) (Optional) Display the status of old system software packages only.

detail—(Optional) Display detailed information about available Junos OS extensions.

infrastructure *name*—(QFabric systems only) (Optional) Display the system software running on the fabric control Routing Engine and the fabric manager Routing Engine.

interconnect-device *name*—(QFabric systems only) (Optional) Display the system software running on the Interconnect device.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system software information for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display system software information for a specific router that is connected to the TX Matrix Plus router. Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches only) (Optional) Display the system software running on the local Virtual Chassis member.

member *member-id*—(EX4200 switches only) (Optional) Display the system software running on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value from 0 through 9.

node-group *name*—(QFabric systems only) (Optional) Display the system software running on the Node group.

scc—(Routing matrix only) (Optional) Display the system software running on a TX Matrix router (or switch-card chassis).

sfc—(TX Matrix Plus routers only) (Optional) Display system software information for the TX Matrix Plus router.

Required Privilege Level maintenance

Related Documentation	<ul style="list-style-type: none">• Routing Matrix with a TX Matrix Plus Router Solutions Page
List of Sample Output	show system software on page 1324 show system software (TX Matrix Plus Router) on page 1324 show system software (QFX Series) on page 1328
Output Fields	When you enter this command, you are provided a list of Junos OS packages installed on the router and their corresponding Junos OS release number.

Sample Output

[show system software](#)

```
user@host> show system software
Information for jbase:

Comment:
JUNOS Base OS Software Suite [7.2R1.7]

Information for jcrypto:

Comment:
JUNOS Crypto Software Suite [7.2R1.7]
Information for jdocs:

Comment:
JUNOS Online Documentation [7.2R1.7]

Information for jkernel:

Comment:
JUNOS Kernel Software Suite [7.2R1.7]

Information for jpfe:

Comment:
JUNOS Packet Forwarding Engine Support (M20/M40) [7.2R1.7]

Information for jroute:

Comment:
JUNOS Routing Software Suite [7.2R1.7]

Information for junos:

Comment:
JUNOS Base OS boot [7.2R1.7]
```

[show system software \(TX Matrix Plus Router\)](#)

```
user@host> show system software
sfc0-re0:
-----
Information for jbase:
```

Comment:
JUNOS Base OS Software Suite [9.6-20090515.0]

Information for jcrypto:

Comment:
JUNOS Crypto Software Suite [9.6-20090515.0]

Information for jdocs:

Comment:
JUNOS Online Documentation [9.6-20090515.0]
Information for jkernel:

Comment:
JUNOS Kernel Software Suite [9.6-20090515.0]

Information for jpfe:

Comment:
JUNOS Packet Forwarding Engine Support (T-Series) [9.6-20090515.0]

Information for jpfe-common:

Comment:
JUNOS Packet Forwarding Engine Support (M/T Common) [9.6-20090515.0]

Information for jroute:Comment:
JUNOS Routing Software Suite [9.6-20090515.0]

Information for jservices-aac1:

Comment:
JUNOS Services ACL Container package [9.6-20090515.0]

Information for jservices-appid:

Comment:
JUNOS AppId Services [9.6-20090515.0]

Information for jservices-bgf:

Comment:
JUNOS Border Gateway Function package [9.6-20090515.0]

Information for jservices-idp:

Comment:
JUNOS IDP Services [9.6-20090515.0]

Information for jservices-llpdf:

Comment:
JUNOS Services LL-PDF Container package [9.6-20090515.0]

Information for jservices-sfw:

Comment:
JUNOS Services Stateful Firewall [9.6-20090515.0]
Information for jservices-voice:

Comment:
JUNOS Voice Services Container package [9.6-20090515.0]

Information for junos:

Comment:
JUNOS Base OS boot [9.6-20090515.0]
...
lcc0-re0:

Information for jbase:

Comment:
JUNOS Base OS Software Suite [9.6-20090515.0]

Information for jcrypto:

Comment:
JUNOS Crypto Software Suite [9.6-20090515.0]

Information for jdocs:

Comment:
JUNOS Online Documentation [9.6-20090515.0]

Information for jkernel:

Comment:
JUNOS Kernel Software Suite [9.6-20090515.0]

Information for jpfe:

Comment:
JUNOS Packet Forwarding Engine Support (T-Series) [9.6-20090515.0]

Information for jpfe-common:

Comment:
JUNOS Packet Forwarding Engine Support (M/T Common) [9.6-20090515.0]

Information for jroute:

Comment:
JUNOS Routing Software Suite [9.6-20090515.0]

Information for jservices-aacl:

Comment:
JUNOS Services AAACL Container package [9.6-20090515.0]

Information for jservices-appid:

Comment:
JUNOS AppId Services [9.6-20090515.0]

Information for jservices-bgf:

Comment:
JUNOS Border Gateway Function package [9.6-20090515.0]

Information for jservices-idp:

Comment:
JUNOS IDP Services [9.6-20090515.0]

Information for jservices-llpdf:

Comment:
JUNOS Services LL-PDF Container package [9.6-20090515.0]

Information for jservices-sfw:

Comment:
JUNOS Services Stateful Firewall [9.6-20090515.0]

Information for jservices-voice:

Comment:

JUNOS Voice Services Container package [9.6-20090515.0]

Information for junos:

Comment:

JUNOS Base OS boot [9.6-20090515.0]

lcc1-re0:

Information for jbase:

Comment:

JUNOS Base OS Software Suite [9.6-20090515.0]

Information for jcrypto:

Comment:

JUNOS Crypto Software Suite [9.6-20090515.0]

...

show system software (QFX Series)

user@switch> **show system software**

Information for jbase:

Comment:

JUNOS Base OS Software Suite [11.3-20110730.0]

Information for jcrypto:

Comment:

JUNOS Crypto Software Suite [11.3-20110730.0]

Information for jdocs:

Comment:

JUNOS Online Documentation [11.3-20110730.0]

Information for jkernel:

Comment:

JUNOS Kernel Software Suite [11.3-20110730.0]

Information for jpfe:

Comment:

JUNOS Packet Forwarding Engine Support (QFX) [11.3-20110730.0]

Information for jroute:

Comment:

JUNOS Routing Software Suite [11.3-20110730.0]

Information for jswitch:

Comment:

JUNOS Enterprise Software Suite [11.3-20110730.0]

Information for junos:

Comment:

JUNOS Base OS boot [11.3-20110730.0]

Information for jweb:

Comment:

JUNOS Web Management [11.3-20110730.0]

show system software usb-software-version

Syntax `show system software usb-software-version`

Release Information Command introduced in Junos OS Release 14.1X53-D40 for the QFX Series.

Description (QFabric systems only) Display the version of software present on a standard USB installer key attached to each Director Group (DG) device.

Additional Information When issuing the **show system software usb-software-version** command, the USB installer key must be attached to either or both DGs.

The format of the USB installer key (including partitions) must conform to the standard specifications of the Juniper-provided USB installer.

A Juniper-provided or Juniper-recommended USB installer device should have the following partitions:

Device	Boot	Start	End	Blocks	Id	System
/dev/sdb1	*	1	75	295244	4	FAT16 <32M
/dev/sdb2		76	709	2496058	83	Linux

Required Privilege Level view

Related Documentation

- [Performing a Nonstop Software Upgrade on the QFabric System on page 134](#)
- [Verifying Nonstop Software Upgrade for QFabric Systems on page 140](#)
- [Upgrading Software on a QFabric System on page 223](#)

List of Sample Output [show system software usb-software-version on page 1331](#)

Output Fields [Table 70 on page 1330](#) lists the output fields for the **show system software usb-software-version** command. Output fields are listed in the approximate order in which they appear.

Table 70: show system software usb-software-version Output Fields

Field Name	Field Description
Node	Node supporting the device.
Device	Device on which the software is present.
Version	Version of the software present.
Filename	Software filename.

Sample Output

show system software usb-software-version

```
user@host> show system software usb-software-version


      NODE      DEVICE      FILENAME      VERSION
      ----      -
      dg0    /dev/sdb    14.1-20160516_x141X53_vjqfd.0
jinstall-qfabric-14.1-20160516_x141X53_vjqfd.0.rpm
      dg1    /dev/sdb    14.1-20160516_x141X53_vjqfd.0
jinstall-qfabric-14.1-20160516_x141X53_vjqfd.0.rpm
```


CHAPTER 32

Software Downgrade Operational Commands

- request system software recover-from-restore-point
- request system software restore-point
- show system software restore-point-status

request system software recover-from-restore-point

Syntax	<code>request system software recover-from-restore-point</code>
Release Information	Command introduced in Junos OS Release 14.1X53-D15 for the QFX Series.
Description	Rollback to a previously created restore-point.
<div>  NOTE: Rolling back to a previously created restore-point might disrupt traffic, as both Director devices reboot from the restore-point partition. </div>	
Required Privilege Level	configure
Related Documentation	<ul style="list-style-type: none"> request system software restore-point on page 569
List of Sample Output	request system software recover-from-restore-point on page 1334

Sample Output

request system software recover-from-restore-point

```

root@qfabric> request system software recover-from-restore-point
Start Restore
Checking if the restore-point exists
LogVol100 has the root filesystem
Found Restore-Point: Fri Aug 15 07:42:39 UTC 2014 /dev/VolGroup00/LogVol103
Mounting restore-volume LogVol103
Checking the sanity of restore-point
Checking if the restore DB is present
Checking if the restore grub is present
Checking the current state of the system
Checking the state of cluster services
Checking the inventory
Checking if the peer is reachable
Checking if peer is reachable via Compute Node Monitor
Successfully communicated with peer over 169.254.0.2
Intimating the peer to do stage INITIATE_PEER_INITIAL_STAGE of downgrade
Preparing the system to downgrade
Prepping all Junos devices
Checking status at Peer
Downgrade first stage at peer concluded successfully
Initiating final stage of downgrade in peer
Intimating the peer to do stage INITIATE_PEER_FINAL_STAGE of downgrade
Modify loader to boot from restore-point
Move mount points to new filesystem
Force Reboot
Rebooting....

```

request system software restore-point

Syntax	<code>request system software restore-point</code>
Release Information	Command introduced in Junos OS Release 14.1X53-D15 for the QFX Series.
Description	Creates a restore-point. A restore-point is a snapshot of snapshot of the QFabric system.
Required Privilege Level	configure
Related Documentation	<ul style="list-style-type: none"> request system software recover-from-restore-point on page 568
List of Sample Output	request system software restore-point on page 1335

Sample Output

request system software restore-point

```

root@qfabric> request system software restore-point
Checking if director-device upgrade is currently in progress.
Checking VM status.
Checking for communication between director devices.
Checking inventory status of all components.
Checking Server INE passwords.
Checking FC passwords.
Checking CCPC passwords.
Checking FM-0 passwords.
Checking DRE-0 passwords.
Checking NW-NG-0 passwords.
Checking chassis alarms.
0
sent command to peer to start operation
sanity checks passed
Performing fdisk
restore partition created
creating restore partition on physical disk
device /dev/sda: start 0 size -388718592
gpt: 0 slices
dos: 4 slices
# 1:      63-   208844 (   208782 sectors,    106 MB)
# 2:   208845-1048771394 (1048562550 sectors, 536864 MB)
# 3: 1048771395-1146446594 ( 97675200 sectors,  50009 MB)
# 4: 1146446595-2146460714 (1000014120 sectors, 512007 MB)
performing physical volume creation
Physical volume "/dev/sda4" successfully created
"/dev/sda4" is a new physical volume of "476.84 GB"
PV Name                /dev/sda4
extending volume group 00
Volume group "VolGroup00" successfully extended
Creating Logical Volume
Logical volume "LogVo103" created
LV Name                /dev/VolGroup00/LogVo103
Restore volume selected is /dev/VolGroup00/LogVo103
Formatting restore volume
mke2fs 1.39 (29-May-2006)
Filesystem label=

```

```
OS type: Linux
Block size=4096 (log=2)
Fragment size=4096 (log=2)
62504960 inodes, 124993536 blocks
6249676 blocks (5.00%) reserved for the super user
First data block=0
Maximum filesystem blocks=4294967296
3815 block groups
32768 blocks per group, 32768 fragments per group
16384 inodes per group
Superblock backups stored on blocks:
    32768, 98304, 163840, 229376, 294912, 819200, 884736, 1605632, 2654208,
    4096000, 7962624, 11239424, 20480000, 23887872, 71663616, 78675968,
    102400000

Creating journal (32768 blocks): done
Writing superblocks and filesystem accounting information: done

This filesystem will be automatically checked every 22 mounts or
180 days, whichever comes first.  Use tune2fs -c or -i to override.
/dev/VolGroup00/LogVol03: UUID="a9fafbaf-da3c-417f-bd53-def01fbf3936"
SEC_TYPE="ext2" TYPE="ext3"
Restore Volume mounted
backing up root filesystem..this will take a few minutes
Copying files from tmp..this may take a few minutes
Dumping databases...this may take a few minutes
backing up shared filesystem..this may take a few minutes
Restore point creation finished for dg0 on /dev/VolGroup00/LogVol03
waiting 10 mins for for peer dg to finish
Restore point creation success on both DGs
```

show system software restore-point-status

Syntax	show system software restore-point-status
Release Information	Command introduced in Junos OS Release 14.1X53-D15 for the QFX Series.
Description	Display the status of the restore point for the QFabric system. A restore-point contains both a snapshot of the software and a configuration file for the QFabric system. You can only create one restore-point. When you create a new restore-point, the existing restore-point, if available, is erased.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • request system software restore-point on page 569
List of Sample Output	show system software restore-point status on page 1337
Output Fields	Table 32 on page 571 lists the output fields for the show system software restore-point status command. Output fields are listed in the approximate order in which they appear.

Table 71: show system software restore-point status Output Fields

Field Name	Field Description
Member	Name of the Director device.
Creation Time	Time when the restore-point was created.
Status	Status of restore-point creation.
Restore volume	Name and path to restore volume used to create the restore-point.

Sample Output

show system software restore-point status

```

user@qfabric> show system software restore-point status
Member  Creation Time   Status  Restore volume
-----  -
dg0    Aug 15 07:42:39 2014  success  /dev/VolGroup00/LogVol103
dg1    Aug 15 07:42:27 2014  success  /dev/VolGroup00/LogVol103

```


CHAPTER 33

System Snapshot Operational Commands

- request system snapshot

request system snapshot

Syntax	<pre>request system snapshot <config-partition> <media> <partition> <root-partition> slice alternate</pre>
Release Information	Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Copy the currently running Junos OS and configuration to alternate media. This command takes a snapshot of the contents of the / (root), and /var partitions on the media used to boot the switch and then copies the snapshot to alternate media. If the switch was booted from internal flash memory, the snapshot is copied to an external USB flash drive. If the switch was booted from an external USB flash drive, the snapshot is copied to internal flash memory.
Options	<p>none—Create a snapshot on the alternate media—that is, the external media if you booted the switch using software stored on internal media or internal media if you booted the switch using software stored on external media.</p> <p>config-partition—(Optional) Create a snapshot of the configuration partition only and store it onto the default /altconfig on the hard disk device or an /altconfig on a USB device.</p> <p>media type—(Optional) Specify the boot device the software is copied to:</p> <ul style="list-style-type: none">• compact-flash—Copy software to the primary compact flash drive.• external—Copy software to an external mass storage device, such as a USB flash drive. If a USB drive is not connected, the switch displays an error message.• internal—Copy software to an internal flash drive.• removable-compact-flash—Copy software to the removable compact flash drive. <p>partition—(Optional) Partition the destination media before copying over the snapshot.</p> <p>root-partition—(Optional) Create a snapshot of the root partition only and store it onto the default /altroot on the hard disk device or an /altroot on a USB device.</p> <p>slice alternate—(Optional) Take a snapshot of the active root partition and copy it to the alternate slice on the boot media.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• <i>show system snapshot</i>• Creating a Snapshot and Using It to Boot a QFX3500 and QFX3600 Series Switch on page 174

- [Verifying That a System Snapshot Was Created on a QFX Series Switch on page 245](#)

List of Sample Output [request system snapshot partition on page 1341](#)

Sample Output

[request system snapshot partition](#)

```
user@switch> request system snapshot partition
Clearing current label...
Partitioning external media (da1) ...
Verifying compatibility of destination media partitions...
Running newfs (334MB) on external media / partition ...
Running newfs (404MB) on external media /config partition ...
Running newfs (222MB) on external media /var partition ...
Copying '/dev/da0s2a' to '/dev/da1s1a' .. (this may take a few minutes)
Copying '/dev/da0s3e' to '/dev/da1s3e' .. (this may take a few minutes)
Copying '/dev/da0s2f' to '/dev/da1s1f' .. (this may take a few minutes)
The following filesystems were archived: / /config /var
```

