

# Traffic Sampling



---

Published: 2014-05-02

Juniper Networks, Inc.  
1194 North Mathilda Avenue  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Traffic Sampling*  
Copyright © 2014, Juniper Networks, Inc.  
All rights reserved.

The information in this document is current as of the date on the title page.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

	About the Documentation . . . . .	ix
	Documentation and Release Notes . . . . .	ix
	Supported Platforms . . . . .	ix
	Using the Examples in This Manual . . . . .	ix
	Merging a Full Example . . . . .	x
	Merging a Snippet . . . . .	x
	Documentation Conventions . . . . .	xi
	Documentation Feedback . . . . .	xiii
	Requesting Technical Support . . . . .	xiii
	Self-Help Online Tools and Resources . . . . .	xiii
	Opening a Case with JTAC . . . . .	xiv
<b>Part 1</b>	<b>Configuration</b>	
<b>Chapter 1</b>	<b>Configuration Tasks . . . . .</b>	<b>3</b>
	Configuring Traffic Sampling . . . . .	3
	Configuring Firewall Filter for Traffic Sampling . . . . .	3
	Configuring Traffic Sampling on a Logical Interface . . . . .	5
	Disabling Traffic Sampling . . . . .	6
	Sampling Once . . . . .	6
	Preserving Prerewrite ToS Value for Egress Sampled or Mirrored Packets . . . . .	6
	Configuring Traffic Sampling Output . . . . .	7
	Traffic Sampling Output Format . . . . .	9
	Tracing Traffic Sampling Operations . . . . .	9
	Traffic Sampling Examples . . . . .	10
	Example: Sampling a Single SONET/SDH Interface . . . . .	10
	Example: Sampling All Traffic from a Single IP Address . . . . .	11
	Example: Sampling All FTP Traffic . . . . .	12
	Sampling Instance Configuration . . . . .	13
<b>Chapter 2</b>	<b>Configuration Statements . . . . .</b>	<b>15</b>
	[edit forwarding-options] Hierarchy Level . . . . .	16
	[edit interfaces] Hierarchy Level . . . . .	20
	address (Interfaces) . . . . .	21
	address (Interfaces) . . . . .	21
	aggregate-export-interval . . . . .	22
	aggregation . . . . .	23
	autonomous-system-type . . . . .	24
	destination (Interfaces) . . . . .	25
	disable (Forwarding Options) . . . . .	26

disable (Forwarding Options) .....	26
engine-id (Forwarding Options) .....	27
engine-id (Forwarding Options) .....	27
engine-type .....	28
extension-service .....	29
family (Sampling) .....	30
file (Sampling) .....	31
file (Trace Options) .....	32
filename .....	32
files .....	33
filter .....	34
flow-active-timeout .....	35
flow-export-rate .....	36
flow-inactive-timeout .....	37
flow-server .....	38
inline-jflow .....	39
input (Sampling) .....	39
instance (Sampling) .....	40
interface (Accounting or Sampling) .....	41
label-position .....	42
local-dump .....	42
match .....	43
maximum-packet-length .....	44
max-packets-per-second .....	45
no-remote-trace (Trace Options) .....	45
output (Sampling) .....	46
pre-rewrite-tos .....	47
port .....	48
port .....	48
rate (Forwarding Options) .....	49
run-length .....	50
sample-once .....	50
sampling (Forwarding Options) .....	51
size .....	54
source-address (Forwarding Options) .....	55
source-address (Forwarding Options) .....	55
stamp .....	56
template (Forwarding Options) .....	56
traceoptions (Forwarding Options) .....	57
traceoptions (Forwarding Options) .....	57
version .....	58
version9 (Forwarding Options) .....	58
world-readable .....	59

## Part 2

## Index

Index .....	63
-------------	----

# List of Figures

Part 1	Configuration	
Chapter 1	Configuration Tasks .....	3
	Figure 1: Configuring Sampling Rate .....	5



# List of Tables

<b>About the Documentation . . . . .</b>	<b>ix</b>
Table 1: Notice Icons . . . . .	xi
Table 2: Text and Syntax Conventions . . . . .	xi





# About the Documentation

- Documentation and Release Notes on page ix
- Supported Platforms on page ix
- Using the Examples in This Manual on page ix
- Documentation Conventions on page xi
- Documentation Feedback on page xiii
- Requesting Technical Support on page xiii

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

## Supported Platforms

---

For the features described in this document, the following platforms are supported:

- M Series
- T Series

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

## Documentation Conventions

Table 1 on page xi defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xi defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	<code>user@host&gt; show chassis alarms</code> <code>No alarms currently active</code>
<i>Italic text like this</i>	<ul style="list-style-type: none"><li>Introduces or emphasizes important new terms.</li><li>Identifies guide names.</li><li>Identifies RFC and Internet draft titles.</li></ul>	<ul style="list-style-type: none"><li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li><li><i>Junos OS CLI User Guide</i></li><li>RFC 1997, <i>BGP Communities Attribute</i></li></ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"><li>To configure a stub area, include the <b>stub</b> statement at the [edit protocols ospf area area-id] hierarchy level.</li><li>The console port is labeled <b>CONSOLE</b>.</li></ul>
< > (angle brackets)	Encloses optional keywords or variables.	<b>stub &lt;default-metric metric&gt;;</b>
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast   multicast</b>  <b>(string1   string2   string3)</b>
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<b>community name members [</b> <i>community-ids</i> <b>]</b>
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop address; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"><li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li><li>To cancel the configuration, click <b>Cancel</b>.</li></ul>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net), or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version (if applicable)

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>

- Search technical bulletins for relevant hardware and software notifications:  
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:  
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

## PART 1

# Configuration

- [Configuration Tasks on page 3](#)
- [Configuration Statements on page 15](#)





## CHAPTER 1

# Configuration Tasks

- [Configuring Traffic Sampling on page 3](#)
- [Sampling Instance Configuration on page 13](#)

## Configuring Traffic Sampling

---

Traffic sampling enables you to copy traffic to a Physical Interface Card (PIC) that performs flow accounting while the router forwards the packet to its original destination. You can configure the router to perform sampling in either of two locations:

- On the Routing Engine, using the sampled process. To select this method, use a filter (input or output) with a matching term that contains the **then sample** statement.
- On the Monitoring Services, Adaptive Services, or Multiservices PIC.



**NOTE:** Routing Engine based sampling is not supported on VPN routing and forwarding (VRF) instances.

The following sections provide configuration instructions for traffic sampling:

- [Configuring Firewall Filter for Traffic Sampling on page 3](#)
- [Configuring Traffic Sampling on a Logical Interface on page 5](#)
- [Disabling Traffic Sampling on page 6](#)
- [Sampling Once on page 6](#)
- [Preserving Prerewrite ToS Value for Egress Sampled or Mirrored Packets on page 6](#)
- [Configuring Traffic Sampling Output on page 7](#)
- [Tracing Traffic Sampling Operations on page 9](#)
- [Traffic Sampling Examples on page 10](#)

## Configuring Firewall Filter for Traffic Sampling

To configure firewall filter for traffic sampling, you must perform the following tasks:

- Create a firewall filter to apply to the logical interfaces being sampled by including the **filter** statement at the **[edit firewall family *family-name*]** hierarchy level. In the filter **then** statement, you must specify the action modifier **sample** and the action **accept**.

```
filter filter-name {  
  term term-name {  
    then {  
      sample;  
      accept;  
    }  
  }  
}
```

For more information about firewall filter actions and action modifiers, see the *Routing Policy Feature Guide for Routing Devices*.

- Apply the filter to the interfaces on which you want to sample traffic by including the **address** and **filter** statements at the **[edit interfaces *interface-name* unit *logical-unit-number* family *family-name*]** hierarchy level:

```
address address {  
}  
filter {  
  input filter-name;  
}
```

The following prerequisites apply to M, MX, and T Series routers when you configure traffic sampling on interfaces and in firewall filters:

- If you configure a sample action in a firewall filter for an inet or inet6 family on an interface without configuring the forwarding-options settings, operational problems might occur if you also configure port mirroring or flow-tap functionalities. In such a scenario, all the packets that match the firewall filter are incorrectly sent to the service PIC.
- If you include the **then sample** statement at the **[edit firewall family inet filter *filter-name* term *term-name*]** hierarchy level to specify a sample action in a firewall filter for IPv4 packets, you must also include the **family inet** statement at the **[edit forwarding-options sampling]** hierarchy level or the **instance *instance-name* family inet** statement at the **[edit forwarding-options sampling]** hierarchy level. Similarly, if you include the **then sample** statement at the **[edit firewall family inet6 filter *filter-name* term *term-name*]** hierarchy level to specify a sample action in a firewall filter for IPv6 packets, you must also include **family inet6** statement at the **[edit forwarding-options sampling]** hierarchy level or the **instance *instance-name* family inet6** statement at the **[edit forwarding-options sampling]** hierarchy level. Otherwise, a commit error occurs when you attempt to commit the configuration.
- Also, if you configure traffic sampling on a logical interface by including the sampling input or sampling output statements at the **[edit interface *interface-name* unit *logical-unit-number*]** hierarchy level, you must also include the **family inet | inet6** statement at the **[edit forwarding-options sampling]** hierarchy level, or the **instance *instance-name* family inet | inet6** statement at the **[edit forwarding-options sampling]** hierarchy level.

## Configuring Traffic Sampling on a Logical Interface

To configure traffic sampling on any logical interface, enable sampling and specify a non zero sampling rate by including the sampling statement at the **[edit forwarding-options]** hierarchy level:

```
sampling {
  input {
    rate number;
    run-length number;
    max-packets-per-second number;
    maximum-packet-length bytes;
  }
}
```

When you use Routing Engine-based sampling, specify the threshold traffic value by including the **max-packets-per-second** statement. The value is the maximum number of packets to be sampled, beyond which the sampling mechanism begins dropping packets. The range is from 0 through 65,535. A value of 0 instructs the Packet Forwarding Engine not to sample any packets. The default value is 1000.




**NOTE:** When you configure active monitoring and specify a Monitoring Services, Adaptive Services, or Multiservices PIC in the output statement, the **max-packets-per-second** value is ignored.

Specify the sampling rate by setting the values for **rate** and **run-length** (see [Figure 1 on page 5](#)).

**Figure 1: Configuring Sampling Rate**

### Rate and Run-length

Case #1 Rate =10, run-length =4

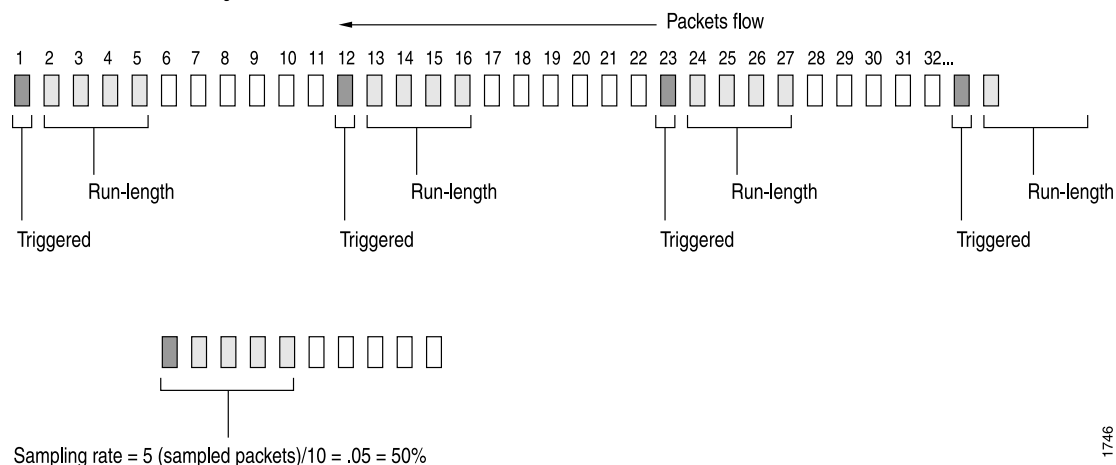

The **rate** statement specifies the ratio of packets to be sampled. For example, if you configure a rate of 10, x number of packets out of every 10 is sampled, where x=run length + 1. By default, the rate is 0, which means that no traffic is sampled.

The **run-length** statement specifies the number of matching packets to sample following the initial one-packet trigger event. By default, the run length is 0, which means that no more traffic is sampled after the trigger event. The range is from 0 through 20. Configuring a run length greater than 0 allows you to sample packets following those already being sampled.



**NOTE:** The **run-length** and **maximum-packet-length** configuration statements are not supported on MX80 routers.

If you do not include the **input** statement, sampling is disabled.

To collect the sampled packets in a file, include the **file** statement at the **[edit forwarding-options sampling output]** hierarchy level. Output file formats are discussed later in the chapter.

## Disabling Traffic Sampling

To explicitly disable traffic sampling on the router, include the **disable** statement at the **[edit forwarding-options sampling]** hierarchy level:

```
disable;
```

## Sampling Once

To explicitly sample a packet for active monitoring only once, include the **sample-once** statement at the **[edit forwarding-options sampling]** hierarchy level:

```
sample-once;
```

Setting this option avoids duplication of packets in cases where sampling is enabled at both the ingress and egress interfaces and simplifies analysis of the sampled traffic.

## Preserving Prerewrite ToS Value for Egress Sampled or Mirrored Packets

To preserve the prenormalized type-of-service (ToS) value in egress sampled or mirrored packets, include the **pre-rewrite-tos** statement at the **[edit forwarding-options sampling]** hierarchy level.

On MPC-based interfaces, you can configure ToS rewrite either using class-of-service (CoS) configuration by including the **rewrite-rules dscp rule\_name** statement at the **[edit class-of-service interfaces interface-name unit logical-unit-number]** hierarchy level or using firewall filter configuration by including the **dscp** statement at the **[edit firewall family family-name filter filter-name term term-name then]** hierarchy level. If ToS rewrite is configured, the egress mirrored or sampled copies contain the post-rewrite ToS values by default. With the **pre-rewrite-tos** configuration, you can retain the prerewrite ToS value in the sampled or mirrored packets.

**NOTE:**

- If ToS rewrite is configured on the egress interface by using both CoS and firewall filter configuration, and if the `pre-rewrite-tos` statement is also configured, then the egress sampled packets contain the DSCP value set using the firewall filter configuration. However, if the `pre-rewrite-tos` statement is not configured, the egress sampled packets contain the DSCP value set by the CoS configuration.
- With the `pre-rewrite-tos` statement, you can configure retaining prenormalization ToS values only for sampling done under family `inet` and family `inet6`.
- This feature cannot be configured at the `[edit logical-systems]` hierarchy level. It can be configured only at the global level under the `forwarding-option` configuration.
- When ToS rewrite is configured by using a firewall filter on both ingress and egress interfaces, the egress sampled packets contain the DSCP value set by the ingress ToS rewrite configuration if the `pre-rewrite-tos` statement is configured. However, if the `pre-rewrite-tos` statement is not configured, the egress sampled packets contain the DSCP value set by the ToS rewrite configuration for the egress firewall filter.
- If the `pre-rewrite-tos` statement is configured, and a deactivate or delete operation is performed at the `[edit forwarding-options]` hierarchy level, `pre-rewrite-tos` configuration still remains active. To disable the `pre-rewrite-tos` configuration for such a case, you must explicitly deactivate or delete the `pre-rewrite-tos` statement at the `[edit forwarding-options sampling]` hierarchy level before performing a deactivate or delete operation at the `[edit forwarding-options]` hierarchy level.

## Configuring Traffic Sampling Output

To configure traffic sampling output, include the following statements at the `[edit forwarding-options sampling family (inet | inet6 | mpls) output]` hierarchy level:

```

aggregate-export-interval seconds;
flow-active-timeout seconds;
flow-inactive-timeout seconds;
extension-service service-name;
flow-server hostname {
  aggregation {
    autonomous-system;
    destination-prefix;
    protocol-port;
    source-destination-prefix {
      caida-compliant;
    }
    source-prefix;
  }
  autonomous-system-type (origin | peer);
}

```

```
(local-dump | no-local-dump);
port port-number;
source-address address;
version format;
version9 {
    template template-name;
}
}
interface interface-name {
    engine-id number;
    engine-type number;
    source-address address;
}
file {
    disable;
    filename filename;
    files number;
    size bytes;
    (stamp | no-stamp);
    (world-readable | no-world-readable);
}
```

To configure inline flow monitoring on MX Series routers, include the **inline-jflow** statement at the **[edit forwarding-options sampling instance *instance-name* family (inet | inet6 | mpls) output]** hierarchy level. Inline sampling exclusively supports a new format called IP\_FIX that uses UDP as the transport protocol. When you configure inline sampling, you must include the **version-ipfix** statement at the **[edit forwarding-options sampling instance *instance-name* family (inet | inet6 | mpls) output flow-server address]** hierarchy level and also at the **[edit services flow-monitoring]** hierarchy level. For more information about configuring inline flow monitoring, see *Configuring Inline Sampling*.

To direct sampled traffic to a flow-monitoring interface, include the **interface** statement. The **engine-id** and **engine-type** statements specify the identity and type numbers of the interface; they are dynamically generated based on the Flexible PIC Concentrator (FPC), PIC, and slot numbers and the chassis type. The **source-address** statement specifies the traffic source.

To configure flow sampling version 9 output, you need to include the **template** statement at the **[edit forwarding-options sampling output version9]** hierarchy level. For information on cflowd, see *Enabling Flow Aggregation*.

The **aggregate-export-interval** statement is described in *Configuring Discard Accounting*, and the **flow-active-timeout** and **flow-inactive-timeout** statements are described in *Configuring Flow Monitoring*.

Traffic sampling results are automatically saved to a file in the **/var/tmp** directory. To collect the sampled packets in a file, include the **file** statement at the **[edit forwarding-options sampling family inet output]** hierarchy level:

```
file {
    disable;
    filename filename;
    files number;
    size bytes;
```

```
(stamp | no-stamp);
(world-readable | no-world-readable);
}
```

### Traffic Sampling Output Format

Traffic sampling output is saved to an ASCII text file. The following is an example of the traffic sampling output that is saved to a file in the **/var/tmp** directory. Each line in the output file contains information for one sampled packet. You can optionally display a timestamp for each line.

The column headers are repeated after each group of 1000 packets.

```
# Apr  7 15:48:50
Time                Dest                Src Dest Src Proto TOS Pkt Intf  IP   TCP
                  addr                addr port port
Apr 7 15:48:54 192.168.9.194 192.168.9.195 0  0  1  0x0 84 8  0x0 0x0
Apr 7 15:48:55 192.168.9.194 192.168.9.195 0  0  1  0x0 84 8  0x0 0x0
Apr 7 15:48:56 192.168.9.194 192.168.9.195 0  0  1  0x0 84 8  0x0 0x0
Apr 7 15:48:57 192.168.9.194 192.168.9.195 0  0  1  0x0 84 8  0x0 0x0
Apr 7 15:48:58 192.168.9.194 192.168.9.195 0  0  1  0x0 84 8  0x0 0x0
```

To set the timestamp option for the file **my-sample**, enter the following:

```
[edit forwarding-options sampling output file]
user@host# set filename my-sample files 5 size 2m world-readable stamp;
```

Whenever you toggle the timestamp option, a new header is included in the file. If you set the **stamp** option, the **Time** field is displayed.

```
# Apr  7 15:48:50
# Time                Dest                Src Dest Src Proto TOS  Pkt Intf  IP   TCP
#                   addr                addr port port      len  num frag flags
# Feb  1 20:31:21
#                   Dest                Src Dest Src Proto TOS  Pkt Intf  IP   TCP
#                   addr                addr port port      len  num frag flags
```

## Tracing Traffic Sampling Operations

Tracing operations track all traffic sampling operations and record them in a log file in the **/var/log** directory. By default, this file is named **/var/log/sampled**. The default file size is 128K, and 10 files are created before the first one gets overwritten.

To trace traffic sampling operations, include the **traceoptions** statement at the **[edit forwarding-options sampling]** hierarchy level:

```
traceoptions {
  no-remote-trace;
  file filename <files number> <size bytes> <match expression> <world-readable |
  no-world-readable>;
}
```

## Traffic Sampling Examples

The following sections provide examples of configuring traffic sampling:

- [Example: Sampling a Single SONET/SDH Interface on page 10](#)
- [Example: Sampling All Traffic from a Single IP Address on page 11](#)
- [Example: Sampling All FTP Traffic on page 12](#)

---

### Example: Sampling a Single SONET/SDH Interface

The following configuration gathers statistical sampling information from a small percentage of all traffic on a single SONET/SDH interface and collects it in a file named **sonet-samples.txt**.

Create the filter:

```
[edit firewall family inet]
filter {
  input sample-sonet {
    then {
      sample;
      accept;
    }
  }
}
```

Apply the filter to the SONET/SDH interface:

```
[edit interfaces]
so-0/0/1 {
  unit 0 {
    family inet {
      filter {
        input sample-sonet;
      }
      address 10.127.68.254/32 {
        destination 172.16.74.7;
      }
    }
  }
}
```

Finally, configure traffic sampling:

```
[edit forwarding-options]
sampling {
  input {
    family inet {
      rate 100;
      run-length 2;
    }
  }
  family inet {
    output {
      file {
```



```

        filename sonet-samples.txt;
        files 40;
        size 5m;
    }
}
}

```

### Example: Sampling All Traffic from a Single IP Address

The following configuration gathers statistical information about every packet entering the router on a specific Gigabit Ethernet port originating from a single source IP address of **172.16.92.31**, and collects it in a file named **samples-172-16-92-31.txt**.

Create the filter:

```

[edit firewall family inet]
filter one-ip {
  term get-ip {
    from {
      source-address 172.16.92.31;
    }
    then {
      sample;
      accept;
    }
  }
}

```

Apply the filter to the Gigabit Ethernet interface:

```

[edit interfaces]
ge-4/1/1 {
  unit 0 {
    family inet {
      filter {
        input one-ip;
      }
      address 10.45.92.254;
    }
  }
}

```

Finally, gather statistics on all the candidate samples; in this case, gather all statistics:

```

[edit forwarding-options]
sampling {
  input {
    family inet {
      rate 1;
    }
  }
  family inet {
    output {
      file {
        filename samples-172-16-92-31.txt;
        files 100;
      }
    }
  }
}

```

```
        size 100k;
    }
}
}
```

### Example: Sampling All FTP Traffic

---

The following configuration gathers statistical information about a moderate percentage of packets using the FTP data transfer protocol in the output path of a specific T3 interface, and collects the information in a file named **t3-ftp-traffic.txt**.

Create a filter:

```
[edit firewall family inet]
filter ftp-stats {
  term ftp-usage {
    from {
      destination-port [ftp ftp-data];
    }
    then {
      sample;
      accept;
    }
  }
}
```

Apply the filter to the T3 interface:

```
[edit interfaces]
t3-7/0/2 {
  unit 0 {
    family inet {
      filter {
        input ftp-stats;
      }
      address 10.35.78.254/32 {
        destination 10.35.78.4;
      }
    }
  }
}
```

Finally, gather statistics on 10 percent of the candidate samples:

```
[edit forwarding-options]
sampling {
  input {
    family inet {
      rate 10;
    }
  }
  family inet {
    output {
      file {
        filename t3-ftp-traffic.txt;
        files 50;
      }
    }
  }
}
```

```

        size 1m;
    }
}
}

```

- Related Documentation**
- [Traffic Sampling, Forwarding, and Monitoring Overview](#)
  - [Sampling Instance Configuration on page 13](#)

## Sampling Instance Configuration

You can configure active sampling by defining a sampling instance that specifies a name for the sampling parameters and bind the instance name to an FPC, MPC, or DPC. This configuration enables you to define multiple named sampling parameter sets associated with multiple destinations and protocol families per sampling destination. With the cflowd version 5 and version 8 and flow aggregation version 9, you can use templates to organize the data gathered from sampling.

To implement this feature, you include the **instance** statement at the **[edit forwarding-options sampling]** hierarchy level.

The following considerations apply to the sampling instance configuration:

- This configuration is supported on the IP version 4 (**inet**), IP version 6 (**ipv6**), and MPLS protocol families.
- You can configure the router to perform sampling in either of two locations:
  - On the Routing Engine, using the sampled process. To select this method, use a filter (input or output) with a matching term that contains the **then** sample statement.
  - On the Monitoring Services, Adaptive Services, or Multiservices PIC. Specify the interface name at the **[forwarding-options sampling instance *instance-name* family *inet output interface*]** hierarchy level. You can configure the same or different services PICs in a set of sampling instances.
- You can configure the **rate** and **run-length** options at the **[edit forwarding-options sampling input]** hierarchy level to apply common values for all families on a global basis. Alternatively, you can configure these options at the **[edit forwarding-options sampling instance *instance-name* input]** hierarchy level to apply specific values for each instance or at the **[edit forwarding-options sampling instance *instance-name* family *family input*]** hierarchy level to apply specific values for each protocol family you configure.
- For MX Series devices with Modular Port Concentrators (MPCs), port-mirrored or sampled packets can be truncated (or clipped) to any length in the range of 1 through 255 bytes. Only the values 1 to 255 are valid for packet truncation on these devices. For other devices, the range is from 0 through 9216. A maximum-packet-length value of zero (0) represents that truncation is disabled, and the entire packet is mirrored or sampled.



**NOTE:** The `run-length` and `maximum-packet-length` configuration statements are not supported on MX80 routers.

To associate the defined instance with a particular FPC, MPC, or DPC, you include the **sampling-instance** statement at the `[edit chassis fpc number]` hierarchy level, as in the following example:

```
chassis {
  fpc 2 {
    sampling-instance samp1;
  }
}
```

To associate a sampling instance with an FPC in the MX Series Virtual Chassis master or backup router, use the **sampling-instance *instance-name*** statement at the `[edit chassis member member-number fpc slot slot-number]` hierarchy level, where *member-number* is 0 (for the master router) or 1 (for the backup router), and *slot-number* is a number in the range 0 through 11.

**Related  
Documentation**

- *Traffic Sampling, Forwarding, and Monitoring Overview*
- *Flow Monitoring Feature Guide for Routing Devices*
- *More Information About Passive and Active Flow Monitoring*
- *Configuring Active Flow Monitoring*
- *Configuring Flow Aggregation (cflowd)*
- [Configuring Traffic Sampling on page 3](#)
- *Example: Sampling Instance Configuration*
- *[edit forwarding-options sampling] Hierarchy Level*
- *Inline Flow Monitoring for Virtual Chassis Overview*

## CHAPTER 2

# Configuration Statements

- [\[edit forwarding-options\] Hierarchy Level on page 16](#)
- [\[edit interfaces\] Hierarchy Level on page 20](#)
- [address \(Interfaces\) on page 21](#)
- [address \(Interfaces\) on page 21](#)
- [aggregate-export-interval on page 22](#)
- [aggregation on page 23](#)
- [autonomous-system-type on page 24](#)
- [destination \(Interfaces\) on page 25](#)
- [disable \(Forwarding Options\) on page 26](#)
- [disable \(Forwarding Options\) on page 26](#)
- [engine-id \(Forwarding Options\) on page 27](#)
- [engine-id \(Forwarding Options\) on page 27](#)
- [engine-type on page 28](#)
- [extension-service on page 29](#)
- [family \(Sampling\) on page 30](#)
- [file \(Sampling\) on page 31](#)
- [file \(Trace Options\) on page 32](#)
- [filename on page 32](#)
- [files on page 33](#)
- [filter on page 34](#)
- [flow-active-timeout on page 35](#)
- [flow-export-rate on page 36](#)
- [flow-inactive-timeout on page 37](#)
- [flow-server on page 38](#)
- [inline-jflow on page 39](#)
- [input \(Sampling\) on page 39](#)
- [instance \(Sampling\) on page 40](#)
- [interface \(Accounting or Sampling\) on page 41](#)

- [label-position](#) on page 42
- [local-dump](#) on page 42
- [match](#) on page 43
- [maximum-packet-length](#) on page 44
- [max-packets-per-second](#) on page 45
- [no-remote-trace](#) (Trace Options) on page 45
- [output](#) (Sampling) on page 46
- [pre-rewrite-tos](#) on page 47
- [port](#) on page 48
- [port](#) on page 48
- [rate](#) (Forwarding Options) on page 49
- [run-length](#) on page 50
- [sample-once](#) on page 50
- [sampling](#) (Forwarding Options) on page 51
- [size](#) on page 54
- [source-address](#) (Forwarding Options) on page 55
- [source-address](#) (Forwarding Options) on page 55
- [stamp](#) on page 56
- [template](#) (Forwarding Options) on page 56
- [traceoptions](#) (Forwarding Options) on page 57
- [traceoptions](#) (Forwarding Options) on page 57
- [version](#) on page 58
- [version9](#) (Forwarding Options) on page 58
- [world-readable](#) on page 59

---

## [edit forwarding-options] Hierarchy Level

To configure flow monitoring and accounting properties, include the following statements at the **[edit forwarding-options]** hierarchy level:

```
[edit forwarding-options]
accounting name {
  output {
    aggregate-export-interval seconds;
    cflowd hostname {
      aggregation {
        autonomous-system;
        destination-prefix;
        protocol-port;
        source-destination-prefix {
          caida-compliant;
        }
        source-prefix;
      }
    }
  }
}
```

```

    autonomous-system-type (origin | peer);
    port port-number;
    version format;
  }
  flow-active-timeout seconds;
  flow-inactive-timeout seconds;
  interface interface-name {
    engine-id number;
    engine-type number;
    source-address address;
  }
}
}
monitoring name {
  family family {
    output {
      cflowd hostname port port-number;
      export-format format;
      flow-active-timeout seconds;
      flow-export-destination {
        collector-pic;
      }
      flow-inactive-timeout seconds;
      interface interface-name {
        engine-id number;
        engine-type number;
        input-interface-index number;
        output-interface-index number;
        source-address address;
      }
    }
  }
}
next-hop-group group-names {
  interface interface-name {
    next-hop address;
  }
}
port-mirroring {
  input {
    rate rate;
    run-length number;
    maximum-packet-length bytes
  }
  family (inet | inet6) {
    output {
      interface interface-name {
        next-hop address;
      }
      no-filter-check;
    }
  }
}
traceoptions {
  file filename {
    files number;
    size bytes;
    (world-readable | no-world-readable);
  }
}

```

```
    }
  }
}
sampling {
  disable;
  sample-once;
  input {
    rate number;
    run-length number;
    max-packets-per-second number;
    maximum-packet-length bytes;
  }
  traceoptions {
    no-remote-trace;
    file filename <files number> <size bytes> <match expression> <world-readable |
    no-world-readable>;
  }
  family (inet | inet6 | mpls) {
    disable;
    output {
      aggregate-export-interval seconds;
      flow-active-timeout seconds;
      flow-inactive-timeout seconds;
      extension-service service-name;
      flow-server hostname {
        aggregation {
          autonomous-system;
          destination-prefix;
          protocol-port;
          source-destination-prefix {
            caida-compliant;
          }
          source-prefix;
        }
        autonomous-system-type (origin | peer);
        (local-dump | no-local-dump);
        port port-number;
        source-address address;
        version format;
        version9 {
          template template-name;
        }
      }
    }
  }
  interface interface-name {
    engine-id number;
    engine-type number;
    source-address address;
  }
  file {
    disable;
    filename filename;
    files number;
    size bytes;
    (stamp | no-stamp);
    (world-readable | no-world-readable);
  }
}
```



```

    }
  }
  instance instance-name {
    disable;
    input {
      rate number;
      run-length number;
      max-packets-per-second number;
      maximum-packet-length bytes;
    }
    family (inet | inet6 | mpls) {
      disable;
      output {
        aggregate-export-interval seconds;
        flow-active-timeout seconds;
        flow-inactive-timeout seconds;
        extension-service service-name;
        flow-server hostname {
          aggregation {
            autonomous-system;
            destination-prefix;
            protocol-port;
            source-destination-prefix {
              caida-compliant;
            }
            source-prefix;
          }
          autonomous-system-type (origin | peer);
          (local-dump | no-local-dump);
          port port-number;
          source-address address;
          version format;
          version9 {
            template template-name;
          }
        }
      }
      interface interface-name {
        engine-id number;
        engine-type number;
        source-address address;
      }
      inline-jflow {
        source-address address;
        flow-export-rate rate;
      }
    }
  }
}

```



**NOTE:** For the complete [edit forwarding-options] hierarchy, see the *Routing Policy Feature Guide for Routing Devices*. This section documents only the statements used in flow monitoring and accounting services.

- Related Documentation**
- [\[edit interfaces\] Hierarchy Level on page 20](#)
  - [\[edit services flow-monitoring\] Hierarchy Level](#)

---

## [\[edit interfaces\] Hierarchy Level](#)

To configure flow monitoring and accounting interfaces, include the following statements at the **[edit interfaces]** hierarchy level:

```
[edit interfaces]
mo-fpc/pic/port {
  unit logical-unit-number {
    family inet {
      accounting {
        destination-class-usage;
        source-class-usage direction;
      }
    }
    address address {
      destination address;
    }
    filter {
      group filter-group-number;
      input filter-name;
      output filter-name;
    }
    receive-options-packets;
    receive-ttl-exceeded;
    sampling direction;
  }
}
multiservice-options {
  (core-dump | no-core-dump);
  (syslog | no-syslog);
  flow-control-options {
    down-on-flow-control;
    dump-on-flow-control;
    reset-on-flow-control;
  }
}
(at-fpc/pic/port | fe-fpc/pic/port | ge-fpc/pic/port) {
  passive-monitor-mode;
}
so-fpc/pic/port {
  unit logical-unit-number {
    passive-monitor-mode;
  }
}
```

- Related Documentation**
- [\[edit forwarding-options\] Hierarchy Level on page 16](#)
  - [\[edit services flow-monitoring\] Hierarchy Level](#)

## address (Interfaces)

---

<b>Syntax</b>	<pre>address address {     destination address; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the interface address.
<b>Options</b>	<p><b>address</b>—Address of the interface.</p> <p>The remaining statement is explained separately.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Network Interfaces Library for Routing Devices</i> for other options not associated with flow monitoring.</li> <li>• <i>Configuring Flow Monitoring</i></li> <li>• <a href="#">Configuring Traffic Sampling on page 3</a></li> </ul>

## address (Interfaces)

---

<b>Syntax</b>	<pre>address address {     destination address; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the interface address.
<b>Options</b>	<p><b>address</b>—Address of the interface.</p> <p>The remaining statement is explained separately.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Network Interfaces Library for Routing Devices</i> for other options not associated with flow monitoring.</li> <li>• <i>Configuring Flow Monitoring</i></li> <li>• <a href="#">Configuring Traffic Sampling on page 3</a></li> </ul>

## aggregate-export-interval

---

<b>Syntax</b>	<code>aggregate-export-interval <i>seconds</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options accounting <i>name</i> output], [edit forwarding-options <b>sampling instance</b> <i>instance-name</i> <b>family</b> (inet   inet6   mpls) <b>output</b> ], [edit forwarding-options <b>sampling family</b> (inet   inet6   mpls) <b>output</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the duration, in seconds, of the interval for exporting aggregate accounting information.
<b>Options</b>	<i>seconds</i> —Duration.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Discard Accounting</i></li></ul>

## aggregation

<b>Syntax</b>	<pre>aggregation {   autonomous-system;   destination-prefix;   protocol-port;   source-destination-prefix {     caida-compliant;   }   source-prefix; }</pre>
<b>Hierarchy Level</b>	<p>[edit forwarding-options accounting output cflowd <i>hostname</i>],  [edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> <a href="#">family</a> (inet   inet6   mpls) <a href="#">output flow-server</a> <i>hostname</i>],  [edit forwarding-options <a href="#">sampling family</a> (inet   inet6   mpls) <a href="#">output flow-server</a> <i>hostname</i>]</p>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For cflowd version 8 only, specify the type of data to be aggregated; cflowd records and sends only those flows that match the specified criteria.
<b>Options</b>	<p><b>autonomous-system</b>—Aggregate by autonomous system (AS) number.</p> <p><b>caida-compliant</b>—Record source and destination mask-length values in compliance with the Version 2.1b1 release of CAIDA's cflowd application. If this statement is not configured, the Junos OS records source and destination mask length values in compliance with the <i>cflowd Configuration Guide</i>, dated August 30, 1999.</p> <p><b>destination-prefix</b>—Aggregate by destination prefix.</p> <p><b>protocol-port</b>—Aggregate by protocol and port number.</p> <p><b>source-destination-prefix</b>—Aggregate by source and destination prefix.</p> <p><b>source-prefix</b>—Aggregate by source prefix.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Enabling Flow Aggregation</i></li> </ul>

## autonomous-system-type

---

<b>Syntax</b>	<code>autonomous-system-type (origin   peer);</code>
<b>Hierarchy Level</b>	[edit forwarding-options <b>sampling instance</b> <i>instance-name</i> <b>family</b> (inet   inet6   mpls) <b>output flow-server</b> <i>hostname</i> ], [edit forwarding-options <b>sampling family</b> (inet   inet6   mpls) <b>output flow-server</b> <i>hostname</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the type of AS numbers that cflowd exports.
<b>Default</b>	<code>origin</code>
<b>Options</b>	<b>origin</b> —Export origin AS numbers of the packet source address in the Source Autonomous System cflowd field.  <b>peer</b> —Export peer AS numbers through which the packet passed in the Source Autonomous System cflowd field.
<b>Required Privilege Level</b>	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Enabling Flow Aggregation</i></li></ul>

## destination (Interfaces)

<b>Syntax</b>	<code>destination address;</code>
<b>Hierarchy Level</b>	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel] [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel] [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i>]</pre>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For CoS on ATM interfaces, specify the remote address of the connection.</p> <p>For point-to-point interfaces only, specify the address of the interface at the remote end of the connection.</p> <p>For tunnel and encryption interfaces, specify the remote address of the tunnel.</p>
<b>Options</b>	<b><i>address</i></b> —Address of the remote side of the connection.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Linear RED Profiles on ATM Interfaces</i></li> <li>• <i>Multilink and Link Services Logical Interface Configuration Overview</i></li> <li>• <i>Configuring Encryption Interfaces</i></li> <li>• <a href="#">Configuring Traffic Sampling on page 3</a></li> <li>• <i>Configuring Flow Monitoring</i></li> <li>• <i>Configuring Unicast Tunnels</i></li> </ul>

## disable (Forwarding Options)

---

<b>Syntax</b>	disable;
<b>Hierarchy Level</b>	[edit forwarding-options port-mirror], [edit forwarding-options port-mirror instance <i>instance-name</i> ], [edit forwarding-options <a href="#">sampling</a> ], [edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> ], [edit forwarding-options <a href="#">sampling family</a> (inet  inet6  mpls) ], [edit forwarding-options <a href="#">sampling family</a> (inet  inet6  mpls) <a href="#">output file</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement added to <b>port-mirror</b> hierarchy in Junos OS Release 9.6.
<b>Description</b>	Disable traffic accounting, port mirroring, or sampling.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Traffic Sampling on page 3</a></li><li>• <a href="#">Configuring Port Mirroring</a></li></ul>

## disable (Forwarding Options)

---

<b>Syntax</b>	disable;
<b>Hierarchy Level</b>	[edit forwarding-options port-mirror], [edit forwarding-options port-mirror instance <i>instance-name</i> ], [edit forwarding-options <a href="#">sampling</a> ], [edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> ], [edit forwarding-options <a href="#">sampling family</a> (inet  inet6  mpls) ], [edit forwarding-options <a href="#">sampling family</a> (inet  inet6  mpls) <a href="#">output file</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement added to <b>port-mirror</b> hierarchy in Junos OS Release 9.6.
<b>Description</b>	Disable traffic accounting, port mirroring, or sampling.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Traffic Sampling on page 3</a></li><li>• <a href="#">Configuring Port Mirroring</a></li></ul>



## engine-id (Forwarding Options)


<b>Syntax</b>	<code>engine-id <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options accounting <i>name</i> output <a href="#">interface</a> <i>interface-name</i> ], [edit forwarding-options monitoring <i>name</i> output <a href="#">interface</a> <i>interface-name</i> ], [edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> <a href="#">family</a> (inet   inet6   mpls) <a href="#">output</a> <a href="#">interface</a> <i>interface-name</i> ], [edit forwarding-options <a href="#">sampling family</a> (inet   inet6   mpls) <a href="#">output interface</a> <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the engine ID number for flow monitoring and accounting services.
<b>Options</b>	<i>number</i> —Identity of accounting interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Traffic Sampling on page 3</a></li> <li>• <a href="#">Configuring Flow Monitoring</a></li> <li>• <a href="#">Configuring Discard Accounting</a></li> </ul>

## engine-id (Forwarding Options)

<b>Syntax</b>	<code>engine-id <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options accounting <i>name</i> output <a href="#">interface</a> <i>interface-name</i> ], [edit forwarding-options monitoring <i>name</i> output <a href="#">interface</a> <i>interface-name</i> ], [edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> <a href="#">family</a> (inet   inet6   mpls) <a href="#">output</a> <a href="#">interface</a> <i>interface-name</i> ], [edit forwarding-options <a href="#">sampling family</a> (inet   inet6   mpls) <a href="#">output interface</a> <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the engine ID number for flow monitoring and accounting services.
<b>Options</b>	<i>number</i> —Identity of accounting interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Traffic Sampling on page 3</a></li> <li>• <a href="#">Configuring Flow Monitoring</a></li> <li>• <a href="#">Configuring Discard Accounting</a></li> </ul>


## engine-type

---

Syntax	engine-type <i>number</i> ;
Hierarchy Level	[edit forwarding-options accounting <i>name</i> output <b>interface</b> <i>interface-name</i> ], [edit forwarding-options monitoring <i>name</i> output <b>interface</b> <i>interface-name</i> ], [edit forwarding-options <b>sampling instance</b> <i>instance-name</i> <b>family</b> (inet   inet6   mpls) <b>output</b> <b>interface</b> <i>interface-name</i> ], [edit forwarding-options <b>sampling family</b> (inet   inet6   mpls) <b>output interface</b> <i>interface-name</i> ]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the engine type number for flow monitoring and accounting services. The engine type attribute refers to the type of the flow switching engine, such as the route processor or a line module. The configured engine type is inserted in output <b>cflowd</b> packets. The <b>Source ID</b> , a 32-bit value to ensure uniqueness for all flows exported from a particular device, is the equivalent of the engine type and the engine ID fields.
<div> <b>NOTE:</b> You must configure a source address in the output interface statements. The interface-level statement of engine-type is added automatically but you may override this value with manually configured statements to track different flows with a single cflowd collector.</div>	
Options	<i>number</i> —Platform-specific accounting interface type.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Configuring Traffic Sampling on page 3</a></li><li>• <a href="#">Configuring Flow Monitoring</a></li><li>• <a href="#">Configuring Discard Accounting</a></li></ul>

## extension-service

---

<b>Syntax</b>	extension-service <i>service-name</i> { <i>provider-specific rules</i> ; }
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> <a href="#">family</a> (inet  inet6) <a href="#">output</a> ] [edit forwarding-options <a href="#">sampling family</a> (inet  inet6) <a href="#">output</a> ] [edit services service-set <i>service-set-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0.
<b>Description</b>	Define a customer specific sampling configuration.  Define a service set or traffic monitoring for applications using application-specific configuration guidelines.
<div style="display: flex; align-items: center;">  <div> <p><b>NOTE:</b> If the <code>extension-service</code> statement is specified while configuring a service set, the <code>service-order</code> statement is mandatory.</p> </div> </div>	
<b>Options</b>	<p><i>provider-specific rules</i>—Provider-specific subhierarchy for services and service sets. See the application-specific documentation for details.</p> <p><i>service-name</i>—Name of the service.</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">service-order</a></li> <li><a href="#">sampling on page 51</a></li> </ul>

## family (Sampling)

**Syntax** family (inet | inet6 | mpls) {  
 disable;  
 output {  
 aggregate-export-interval *seconds*;  
 flow-active-timeout *seconds*;  
 flow-inactive-timeout *seconds*;  
 extension-service *service-name*;  
 flow-server *hostname* {  
 aggregation {  
 autonomous-system;  
 destination-prefix;  
 protocol-port;  
 source-destination-prefix {  
 caida-compliant;  
 }  
 source-prefix;  
 }  
 autonomous-system-type (origin | peer);  
 (local-dump | no-local-dump);  
 port *port-number*;  
 source-address *address*;  
 version *format*;  
 version9 {  
 template *template-name*;  
 }  
 }  
 interface *interface-name* {  
 engine-id *number*;  
 engine-type *number*;  
 source-address *address*;  
 }  
 file {  
 disable;  
 filename *filename*;  
 files *number*;  
 size *bytes*;  
 (stamp | no-stamp);  
 (world-readable | no-world-readable);  
 }  
 inline-jflow {  
 source-address *address*;  
 flow-export-rate *rate*;  
 }  
 }  
}

**Hierarchy Level** [edit forwarding-options [sampling](#)],  
 [edit forwarding-options [sampling instance](#) *instance-name*]

**Release Information** Statement introduced before Junos OS Release 7.4.  
 mpls option introduced in Release 8.3.  
 inet6 option introduced in Release 9.4.

**Description** Configure the protocol family to be sampled. IPv4 (**inet**) is supported for most purposes, but you can configure **family mpls** to collect and export MPLS label information or **family inet6** to collect and export IPv6 traffic using flow aggregation version 9.

The remaining statements are explained separately.



**NOTE:** The `inline-jflow` statement is valid only under the `[edit forwarding-options sampling instance instance-name family inet output]` hierarchy level. The `file` statement is valid only under the `[edit forwarding-options sampling family inet output]` hierarchy level.

**Required Privilege** interface—To view this statement in the configuration.  
**Level** interface-control—To add this statement to the configuration.

**Related Documentation** • [Configuring Traffic Sampling on page 3](#)

## file (Sampling)

**Syntax**

```
file {
  disable;
  filename filename;
  files number;
  size bytes;
  (stamp | no-stamp);
  (world-readable | no-world-readable);
}
```

**Hierarchy Level** [edit forwarding-options **sampling family inet output**]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Collect the traffic samples in a file.

The statements are explained separately.

**Required Privilege** interface—To view this statement in the configuration.  
**Level** interface-control—To add this statement to the configuration.

**Related Documentation** • [Configuring Traffic Sampling on page 3](#)

## file (Trace Options)

---

<b>Syntax</b>	file <i>filename</i> <files number <size bytes> <world-readable   no-world-readable>;
<b>Hierarchy Level</b>	[edit forwarding-options port-mirroring <a href="#">traceoptions</a> ], [edit forwarding-options <a href="#">sampling traceoptions</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure information about the files that contain trace logging information.
<b>Options</b>	<b><i>filename</i></b> —The name of the file containing the trace information. <b>Default:</b> /var/log/sampled  The remaining statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Tracing Traffic Sampling Operations on page 9</a></li></ul>

## filename

---

<b>Syntax</b>	filename <i>filename</i> ;
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">sampling family</a> (inet   inet6   mpls) <b>output file</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the name of the output file.
<b>Options</b>	<b><i>filename</i></b> —Name of the file in which to place the traffic samples. All files are placed in the directory /var/tmp.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Traffic Sampling on page 3</a></li></ul>

## files

---

<b>Syntax</b>	<code>files <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options port-mirroring <a href="#">traceoptions file</a> ], [edit forwarding-options <a href="#">sampling family</a> (inet  inet6  mpls) <a href="#">output file</a> ], [edit forwarding-options <a href="#">sampling traceoptions file</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the total number of files to be saved with samples or trace data.
<b>Options</b>	<p><b><i>number</i></b>—Maximum number of traffic sampling or trace log files. When a file named <b><i>sampling-file</i></b> reaches its maximum size, it is renamed <b><i>sampling-file.0</i></b>, then <b><i>sampling-file.1</i></b>, and so on, until the maximum number of traffic sampling files is reached. Then the oldest sampling file is overwritten.</p> <p><b>Range:</b> 1 through 100 files</p> <p><b>Default:</b> 5 files for sampling output; 10 files for trace log information</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Port Mirroring</a></li> <li>• <a href="#">Configuring Traffic Sampling on page 3</a></li> </ul>

## filter

---

<b>Syntax</b>	<pre>filter {     input <i>filter-name</i>;     output <i>filter-name</i>;     group <i>filter-group-number</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Apply a firewall filter to an interface. You can also use filters for encrypted traffic.
<b>Options</b>	<p><b>group <i>filter-group-number</i></b>—Define an interface to be part of a filter group. The default filter group number is 0.</p> <p><b>input <i>filter-name</i></b>—Name of one filter to evaluate when packets are received on the interface.</p> <p><b>output <i>filter-name</i></b>—Name of one filter to evaluate when packets are transmitted on the interface.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Routing Policy Feature Guide for Routing Devices</i> or the <i>Junos OS Administration Library for Routing Devices</i></li><li>• <i>Configuring Flow Monitoring</i></li></ul>



## flow-active-timeout

<b>Syntax</b>	<code>flow-active-timeout seconds;</code>
<b>Hierarchy Level</b>	<p>[edit forwarding-options accounting <i>name</i> output],          [edit forwarding-options monitoring <i>name</i> output],          [edit forwarding-options <b>sampling instance</b> <i>instance-name</i> <b>family</b> (inet   inet6   mpls) <b>output</b>],          [edit forwarding-options <b>sampling family</b> (inet   inet6   mpls) <b>output</b>],          [edit services flow-monitoring <b>version9</b>]          [edit services flow-monitoring version-ipfix <b>template</b> <i>template-name</i>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.          Support at the [edit services flow-monitoring version-ipfix template <i>template-name</i>] hierarchy level added in Junos OS Release 10.2.</p>
<b>Description</b>	Set the interval after which an active flow is exported.



**NOTE:** The router must include an Adaptive Services, Multiservices, or Monitoring Services PIC for this statement to take effect.

<b>Options</b>	<p><b>seconds</b>—Duration of the timeout period.</p> <p><b>Range:</b> 60 through 1800 seconds (for <b>forwarding-options</b> configurations); 10 through 600 seconds (for <b>services</b> configurations)</p> <p><b>Default:</b> 1800 seconds (for <b>forwarding-options</b> configurations); 60 seconds (for <b>services</b> configurations)</p>
----------------	--



**NOTE:** In active flow monitoring, the cflowd or flow monitoring version 9 records are exported after a time period that is a multiple of 60 seconds and greater than or equal to the configured active timeout value. For example, if the active timeout value is 90 seconds, the cflowd or flow monitoring version 9 records are exported at 120-second intervals. If the active timeout value is 150 seconds, the cflowd or flow monitoring version 9 records are exported at 180-second intervals, and so forth.


<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Time Periods when Flow Monitoring is Active and Inactive</i></li> <li>• <i>Configuring the Version 9 Template Properties</i></li> </ul>

## flow-export-rate

---

<b>Syntax</b>	<code>flow-export-rate <i>rate</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> <a href="#">family</a> inet <a href="#">output inline-jflow</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the flow export rate of monitored packets in kpps.
<b>Options</b>	<i>rate</i> —Flow export rate of monitored packets in kpps (from 1 to 400).
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Discard Accounting</i></li><li>• <i>Configuring Flow Monitoring</i></li><li>• <a href="#">Configuring Traffic Sampling on page 3</a></li></ul>

## flow-inactive-timeout

<b>Syntax</b>	<code>flow-inactive-timeout <i>seconds</i>;</code>
<b>Hierarchy Level</b>	<p>[edit forwarding-options accounting <i>name</i> output],          [edit forwarding-options monitoring <i>name</i> output],          [edit forwarding-options <b>sampling instance</b> <i>instance-name</i> <b>family</b> (inet   inet6   mpls) <b>output</b>],          [edit forwarding-options <b>sampling family</b> (inet   inet6   mpls) <b>output</b>],          [edit services flow-monitoring <b>version9</b>]          [edit services flow-monitoring version-ipfix <b>template</b> <i>template-name</i>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.          Support at the [edit services flow-monitoring version-ipfix template <i>template-name</i>] hierarchy level added in Junos OS Release 10.2.</p>
<b>Description</b>	Set the interval of inactivity that marks a flow inactive.
<div>  <p><b>NOTE:</b> The router must include an Adaptive Services, Multiservices, or Monitoring Services PIC for this statement to take effect.</p> </div>	
<b>Options</b>	<p><b><i>seconds</i></b>—Duration of the timeout period.</p> <p><b>Range:</b> 60 through 1800 seconds (for <b>forwarding-options</b> configurations); 10 through 600 seconds (for <b>services</b> configurations)</p> <p><b>Default:</b> 1800 seconds (for <b>forwarding-options</b> configurations); 60 seconds (for <b>services</b> configurations)</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Configuring Time Periods when Flow Monitoring is Active and Inactive</li> <li>Configuring the Version 9 Template Properties</li> </ul>

## flow-server

<b>Syntax</b>	<pre> flow-server <i>hostname</i> {     aggregation {         autonomous-system;         destination-prefix;         protocol-port;         source-destination-prefix {             caida-compliant;         }         source-prefix;     }     autonomous-system-type (origin   peer);     (local-dump   no-local-dump);     port <i>port-number</i>;     source-address <i>address</i>;     version <i>format</i>;     version9 {         template <i>template-name</i>;     } } </pre>
<b>Hierarchy Level</b>	[edit forwarding-options <b>sampling instance</b> <i>instance-name</i> <b>family</b> (inet   inet6   mpls) <b>output</b> ], [edit forwarding-options <b>sampling family</b> (inet   inet6   mpls) <b>output</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. <b>version9</b> statement introduced in Junos OS Release 8.3.
<b>Description</b>	<p>Collect an aggregate of sampled flows and send the aggregate to a specified host system that runs the collection utility cfdcollect. Specify a host system to collect sampled flows using the version 9 format.</p> <p>You can configure up to one version 5 and one version 8 flow format at the <b>[edit forwarding-options sampling family (inet   inet6   mpls) output flow-server <i>hostname</i>]</b> hierarchy level. For the same configuration, you can specify only either version 9 flow record formats or formats using versions 5 and 8, not both types of formats.</p>
<b>Options</b>	<p><b>hostname</b>—The IP address—IPv4 or IPv6—or identifier of the host system (the workstation either running the cflowd utility or collecting traffic flows using version 9).</p> <p>You can configure only one host system for version 9.</p>



**NOTE:** IPv6 configuration for **flow-server** is supported only in Junos OS Release 12.3 and later.

Note that when you configure an IPv6 address for the **flow-server** statement, you must also configure an IPv6 address for the **inline-jflow source-address** statement at the **[edit forwarding-options sampling instance *instance-name* family (inet | inet6 | mpls) output]** hierarchy level.

The remaining statements are explained separately.

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Traffic Sampling on page 3</a></li> </ul>

## inline-jflow

<b>Syntax</b>	<pre>inline-jflow {   source-address address;   flow-export-rate rate; }</pre>
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> <a href="#">family</a> inet <a href="#">output</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.2.
<b>Description</b>	Specify inline flow monitoring for traffic from the designated address.
<b>Options</b>	<i>address</i> —Source IP address.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Inline Sampling</a></li> </ul>

## input (Sampling)

<b>Syntax</b>	<pre>input {   max-packets-per-second number;   rate number;   run-length number;   maximum-packet-length bytes; }</pre>
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">sampling</a> ], [edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure traffic sampling on a logical interface.  The statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Traffic Sampling on page 3</a></li> </ul>

## instance (Sampling)

---

```
Syntax  instance instance-name {
        disable;
        input {
            rate number;
            run-length number;
            max-packets-per-second number;
            maximum-packet-length bytes;
        }
        family (inet | inet6 | mpls) {
            disable;
            output {
                aggregate-export-interval seconds;
                flow-active-timeout seconds;
                flow-inactive-timeout seconds;
                extension-service service-name;
                flow-server hostname {
                    aggregation {
                        autonomous-system;
                        destination-prefix;
                        protocol-port;
                        source-destination-prefix {
                            caida-compliant;
                        }
                        source-prefix;
                    }
                    autonomous-system-type (origin | peer);
                    (local-dump | no-local-dump);
                    port port-number;
                    source-address address;
                    version format;
                    version9 {
                        template template-name;
                    }
                }
            }
            interface interface-name {
                engine-id number;
                engine-type number;
                source-address address;
            }
            inline-jflow {
                source-address address;
                flow-export-rate rate;
            }
        }
    }
```

**Hierarchy Level** [edit forwarding-options [sampling](#)]

**Release Information** Statement introduced in Junos OS Release 9.6.

**Description** Configure a sampling instance.

The remaining statements are explained separately.

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Sampling Instance Configuration on page 13</a></li> </ul>

## interface (Accounting or Sampling)

<b>Syntax</b>	<pre>interface <i>interface-name</i> {     <i>engine-id</i> <i>number</i>;     <i>engine-type</i> <i>number</i>;     <i>source-address</i> <i>address</i>; }</pre>
<b>Hierarchy Level</b>	[edit forwarding-options accounting <i>name</i> output], [edit forwarding-options <i>sampling family</i> (inet  inet6  mpls) output], [edit forwarding-options <i>sampling instance instance-name family</i> (inet  inet6  mpls) output]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the output interface for monitored traffic.
<b>Options</b>	<i>interface-name</i> —Name of the interface.  The remaining statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Discard Accounting</i></li> <li>• <a href="#">Configuring Traffic Sampling on page 3</a></li> </ul>

## label-position

---

<b>Syntax</b>	label-position [ <i>positions</i> ];
<b>Hierarchy Level</b>	[edit services flow-monitoring <a href="#">version9 template</a> <i>template-name</i> mpls-ipv4-template], [edit services flow-monitoring <a href="#">version9 template</a> <i>template-name</i> mpls-template]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3.
<b>Description</b>	Specify positions for up to three labels in the active flow monitoring version 9 template.
<b>Default</b>	[1 2 3]
<b>Options</b>	<i>positions</i> —Numbered positions for the labels.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Flow Aggregation to Use Version 9 Flow Templates</i></li></ul>

## local-dump

---

<b>Syntax</b>	(local-dump   no-local-dump);
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> <a href="#">family</a> (inet   inet6   mpls) <a href="#">output flow-server</a> <i>hostname</i> ], [edit forwarding-options <a href="#">sampling family</a> (inet   inet6   mpls) <a href="#">output flow-server</a> <i>hostname</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Enable collection of cflowd records in a log file.
<b>Options</b>	<b>no-local-dump</b> —Do not dump cflowd records to a log file before exporting. <b>local-dump</b> —Dump cflowd records to a log file before exporting.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Enabling Flow Aggregation</i></li></ul>





---

## match


---

<b>Syntax</b>	<code>match <i>expression</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options port-mirroring <a href="#">traceoptions file</a> ], [edit forwarding-options <a href="#">sampling traceoptions file</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Regular expression for lines to be logged for tracing.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Port Mirroring</a></li><li>• <a href="#">Configuring Traffic Sampling on page 3</a></li></ul>

## maximum-packet-length

<b>Syntax</b>	<code>maximum-packet-length bytes;</code>
<b>Hierarchy Level</b>	[edit forwarding-options port-mirroring input], [edit forwarding-options port-mirroring instance <i>instance-name</i> input], [edit forwarding-options <b>sampling input</b> ], [edit forwarding-options <b>sampling instance</b> <i>instance-name</i> input]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
<b>Description</b>	Set the maximum length of the packet used for port mirroring or traffic sampling. Packets with lengths greater than the specified maximum are truncated.
<div>  <p><b>NOTE:</b> The <code>maximum-packet-length</code> statement is not supported on MX80 routers.</p> </div>	
<div>  <p><b>NOTE:</b> For MX-Series devices with Modular Port Interface Concentrators (MPCs), when <code>maximum-packet-length</code> (clip length) is configured for port-mirrored packets and the mirror-destination interface is a next-hop-group, the clip length would be effective only for the first member interface of the next-hop-group. The mirrored packet copy sent to the rest of the interfaces would not be clipped.</p> </div>	
<b>Options</b>	<p><i>bytes</i>—Maximum length (in bytes) of the mirrored packet or the sampled packet.</p> <p><b>Range:</b> 0 through 9216</p> <p><b>Default:</b> 0</p> <p>For MX-Series devices with Modular Port Concentrators (MPCs), port-mirrored or sampled packets can be truncated (or clipped) to any length in the range of 1 to 255 bytes. Only 1 to 255 are valid values for packet truncation on these devices. For other devices, the range is from 0 to 9216. A <code>maximum-packet-length</code> value of zero represents that truncation is disabled, and the entire packet is mirrored or sampled.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Port Mirroring</i></li> <li>• <i>Configuring Traffic Sampling</i></li> </ul>

## max-packets-per-second

<b>Syntax</b>	<code>max-packets-per-second <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">sampling</a> input], [edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> input]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the traffic threshold that must be exceeded before packets are dropped. A value of 0 instructs the Packet Forwarding Engine not to sample any traffic.
<div>  <b>NOTE:</b> When you configure active monitoring and specify a Monitoring Services, Adaptive Services, or Multiservices PIC in the output statement, the <code>max-packets-per-second</code> value is ignored. </div>	
<b>Options</b>	<i>number</i> —Maximum number of packets per second. <b>Range:</b> 0 through 65,535 <b>Default:</b> 1000
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">Configuring Traffic Sampling on page 3</a></li> </ul>

## no-remote-trace (Trace Options)

<b>Syntax</b>	<code>no-remote-trace;</code>
<b>Hierarchy Level</b>	[edit forwarding-options port-mirroring <a href="#">traceoptions</a> ], [edit forwarding-options <a href="#">sampling traceoptions</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Disable remote tracing.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">Tracing Traffic Sampling Operations on page 9</a></li> </ul>

## output (Sampling)

```
Syntax  output {
    aggregate-export-interval seconds;
    flow-active-timeout seconds;
    flow-inactive-timeout seconds;
    extension-service service-name;
    flow-server hostname {
        aggregation {
            autonomous-system;
            destination-prefix;
            protocol-port;
            source-destination-prefix {
                caida-compliant;
            }
            source-prefix;
        }
        autonomous-system-type (origin | peer);
        (local-dump | no-local-dump);
        port port-number;
        source-address address;
        version format;
        version9 {
            template template-name;
        }
    }
    interface interface-name {
        engine-id number;
        engine-type number;
        source-address address;
    }
    file {
        disable;
        filename filename;
        files number;
        size bytes;
        (stamp | no-stamp);
        (world-readable | no-world-readable);
    }
    inline-jflow {
        source-address address;
        flow-export-rate rate;
    }
}
```

**Hierarchy Level** [edit forwarding-options **sampling instance** *instance-name* **family** (inet | inet6 | mpls)],  
[edit forwarding-options **sampling family** (inet | inet6 | mpls)]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Configure cflowd or flow monitoring, output files and interfaces, and flow properties.

The statements are explained separately.



**NOTE:** The `inline-jflow` statement is valid only under the [edit forwarding-options sampling instance *instance-name* family inet output] hierarchy level. The `file` statement is valid only under the [edit forwarding-options sampling family inet output] hierarchy level.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation** • [Configuring Traffic Sampling on page 3](#)

## pre-rewrite-tos

**Syntax** pre-rewrite-tos;

**Hierarchy Level** [edit forwarding-options [sampling](#)]

**Release Information** Statement introduced in Junos OS Release 14.1

**Description** Preserve prenormalized type-of-service (ToS) value for egress sampled or mirrored packets. This configuration preserves the prerewrite ToS value for all forms of sampling, such as Routing Engine-based sampling, port mirroring, flow monitoring, and so on. This statement is effective for egress sampling only.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation** • [Configuring Traffic Sampling on page 3](#)

## port

---

<b>Syntax</b>	<code>port <i>port-number</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options accounting <i>name</i> output cflowd <i>hostname</i> ], [edit forwarding-options monitoring <i>name</i> family inet output cflowd <i>hostname</i> ], [edit forwarding-options <b>sampling instance</b> <i>instance-name</i> <b>family</b> (inet   inet6   mpls) <b>output flow-server</b> <i>hostname</i> ], [edit forwarding-options <b>sampling family</b> (inet   inet6   mpls) <b>output flow-server</b> <i>hostname</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the User Datagram Protocol (UDP) port number on the cflowd host system or flow server.
<b>Options</b>	<b><i>port-number</i></b> —Any valid UDP port number on the host system.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Enabling Flow Aggregation</i></li></ul>

## port

---

<b>Syntax</b>	<code>port <i>port-number</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options accounting <i>name</i> output cflowd <i>hostname</i> ], [edit forwarding-options monitoring <i>name</i> family inet output cflowd <i>hostname</i> ], [edit forwarding-options <b>sampling instance</b> <i>instance-name</i> <b>family</b> (inet   inet6   mpls) <b>output flow-server</b> <i>hostname</i> ], [edit forwarding-options <b>sampling family</b> (inet   inet6   mpls) <b>output flow-server</b> <i>hostname</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the User Datagram Protocol (UDP) port number on the cflowd host system or flow server.
<b>Options</b>	<b><i>port-number</i></b> —Any valid UDP port number on the host system.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Enabling Flow Aggregation</i></li></ul>

---

## rate (Forwarding Options)

---

<b>Syntax</b>	<code>rate number;</code>
<b>Hierarchy Level</b>	[edit forwarding-options port-mirroring input], [edit forwarding-options <b>sampling</b> input], [edit forwarding-options <b>sampling instance</b> <i>instance-name</i> input], [edit forwarding-options port-mirroring family (inet inet6) input]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
<b>Description</b>	Set a ratio of the number of packets to be sampled. For example, if you specify a rate of 10, every tenth packet (1 packet out of 10) is sampled.
<b>Options</b>	<b>number</b> —Denominator of the ratio. <b>Range:</b> 1 through 65,535
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Port Mirroring</i></li><li>• <i>Configuring Traffic Sampling</i></li></ul>

## run-length

---

<b>Syntax</b>	run-length <i>number</i> ;
<b>Hierarchy Level</b>	[edit forwarding-options port-mirroring input], [edit forwarding-options port-mirroring instance <i>port-mirroring-instance-name</i> input], [edit forwarding-options port-mirroring family (inet inet6) input], [edit forwarding-options <a href="#">sampling</a> input], [edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> input]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.
<b>Description</b>	Set the number of samples following the initial trigger event. The configuration enables you to sample packets following those already being sampled.
<b>Options</b>	<i>number</i> —Number of samples. <b>Range:</b> 0 through 20 <b>Default:</b> 0
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Applying Filters to Forwarding Tables</a></li><li>• <a href="#">Configuring Port Mirroring</a></li><li>• <a href="#">Configuring Traffic Sampling on page 3</a></li></ul>

## sample-once

---

<b>Syntax</b>	sample-once;
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">sampling</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6.
<b>Description</b>	Sample traffic for active monitoring only once.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Traffic Sampling on page 3</a></li></ul>



## sampling (Forwarding Options)

```

Syntax  sampling {
        disable;
        sample-once;
        family (inet | inet6 | mpls) {
            disable;
            output {
                aggregate-export-interval seconds;
                extension-service service-name;
                file {
                    disable;
                    filename filename;
                    files number;
                    size bytes;
                    (stamp | no-stamp);
                    (world-readable | no-world-readable);
                }
                flow-active-timeout seconds;
                flow-inactive-timeout seconds;
                flow-server hostname {
                    aggregation {
                        autonomous-system;
                        destination-prefix;
                        protocol-port;
                        source-destination-prefix {
                            caida-compliant;
                        }
                        source-prefix;
                    }
                    autonomous-system-type (origin | peer);
                    (local-dump | no-local-dump);
                    port port-number;
                    source-address address;
                    version format;
                    version9 {
                        template template-name;
                    }
                }
                interface interface-name {
                    engine-id number;
                    engine-type number;
                    source-address address;
                }
            }
        }
        input {
            max-packets-per-second number;
            maximum-packet-length bytes;
            rate number;
            run-length number;
        }
        instance instance-name {
            disable;

```

```
family (inet | inet6 | mpls) {
  disable;
  output {
    aggregate-export-interval seconds;
    extension-service service-name;
    flow-active-timeout seconds;
    flow-inactive-timeout seconds;
    flow-server hostname {
      aggregation {
        autonomous-system;
        destination-prefix;
        protocol-port;
        source-destination-prefix {
          caida-compliant;
        }
        source-prefix;
      }
      autonomous-system-type (origin | peer);
      (local-dump | no-local-dump);
      port port-number;
      source-address address;
      version format;
      version-ipfix {
        template template-name;
      }
      version9 {
        template template-name;
      }
    }
    inline-jflow {
      source-address address;
      flow-export-rate rate;
    }
    interface interface-name {
      engine-id number;
      engine-type number;
      source-address address;
    }
  }
}
input {
  max-packets-per-second number;
  maximum-packet-length bytes;
  rate number;
  run-length number;
}
pre-rewrite-tos;
traceoptions {
  no-remote-trace;
  file filename <files number> <size bytes> <match expression> <world-readable |
  no-world-readable>;
}
}
```

<b>Hierarchy Level</b>	[edit forwarding-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	Configure traffic sampling.  The statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Traffic Sampling on page 3</a></li><li>• <i>Applying Filters to Forwarding Tables</i></li><li>• <i>Configuring Active Flow Monitoring Using Version 9</i></li><li>• <i>Configuring Flow Aggregation (cflowd)</i></li><li>• <i>Configuring Port Mirroring</i></li><li>• <i>Tracing Traffic-Sampling Operations</i></li></ul>

## size

---

<b>Syntax</b>	<code>size bytes;</code>
<b>Hierarchy Level</b>	[edit forwarding-options port-mirroring <a href="#">traceoptions file</a> ], [edit forwarding-options <a href="#">sampling family</a> (inet  inet6  mpls) <a href="#">output file</a> ], [edit forwarding-options <a href="#">sampling traceoptions file</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Specify the maximum size of each file containing sample or log data. The file size is limited by the number of files to be created and the available hard disk space.</p> <p>When a traffic sampling file named <b>sampling-file</b> reaches the maximum size, it is renamed <b>sampling-file.0</b>. When the <b>sampling-file</b> again reaches its maximum size, <b>sampling-file.0</b> is renamed <b>sampling-file.1</b> and <b>sampling-file</b> is renamed <b>sampling-file.0</b>. This renaming scheme continues until the maximum number of traffic sampling files is reached. Then the oldest traffic sampling file is overwritten.</p>
<b>Options</b>	<p><b>bytes</b>—Maximum size of each traffic sampling file or trace log file, in kilobytes (KB), megabytes (MB), or gigabytes (GB).</p> <p><b>Syntax:</b> <i>xk</i> to specify KB, <i>xm</i> to specify MB, or <i>xg</i> to specify GB</p> <p><b>Range:</b> 10 KB through the maximum file size supported on your router</p> <p><b>Default:</b> 1 MB for sampling data; 128 KB for log information</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Port Mirroring</a></li><li>• <a href="#">Configuring Traffic Sampling on page 3</a></li></ul>

## source-address (Forwarding Options)

<b>Syntax</b>	<code>source-address <i>address</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options accounting <i>name</i> output <code>interface interface-name</code> ], [edit forwarding-options monitoring <i>name</i> family <i>family</i> inet output <code>interface interface-name</code> ], [edit forwarding-options <code>sampling instance instance-name family</code> (inet   inet6   mpls) output <code>interface interface-name</code> ], [edit forwarding-options <code>sampling family</code> (inet   inet6   mpls) output <code>interface interface-name</code> ], [edit forwarding-options <code>sampling instance instance-name family</code> inet output <code>inline-jflow</code> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the source address for monitored packets.
<b>Options</b>	<i>address</i> —Interface source address.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Discard Accounting</a></li> <li>• <a href="#">Configuring Flow Monitoring</a></li> <li>• <a href="#">Configuring Traffic Sampling on page 3</a></li> </ul>

## source-address (Forwarding Options)

<b>Syntax</b>	<code>source-address <i>address</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options accounting <i>name</i> output <code>interface interface-name</code> ], [edit forwarding-options monitoring <i>name</i> family <i>family</i> inet output <code>interface interface-name</code> ], [edit forwarding-options <code>sampling instance instance-name family</code> (inet   inet6   mpls) output <code>interface interface-name</code> ], [edit forwarding-options <code>sampling family</code> (inet   inet6   mpls) output <code>interface interface-name</code> ], [edit forwarding-options <code>sampling instance instance-name family</code> inet output <code>inline-jflow</code> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the source address for monitored packets.
<b>Options</b>	<i>address</i> —Interface source address.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Discard Accounting</a></li> <li>• <a href="#">Configuring Flow Monitoring</a></li> <li>• <a href="#">Configuring Traffic Sampling on page 3</a></li> </ul>

## stamp

---

<b>Syntax</b>	(stamp   no-stamp);
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">sampling family</a> (inet   inet6   mpls) <a href="#">output file</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Include a timestamp with each line in the output file.
<b>Options</b>	<b>no-stamp</b> —Do not include timestamps. This is the default. <b>stamp</b> —Include a timestamp with each line of packet sampling information. <b>Default:</b> No timestamp is included.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Traffic Sampling on page 3</a></li></ul>

## template (Forwarding Options)

---

<b>Syntax</b>	template <i>template-name</i> ;
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> <a href="#">family</a> (inet   inet6   mpls) <a href="#">output flow-server hostname version9</a> ], [edit forwarding-options <a href="#">sampling family</a> (inet   inet6   mpls) <a href="#">output flow-server hostname version9</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3.
<b>Description</b>	Specify flow monitoring version 9 template to be used for output of sampling records.
<b>Options</b>	<b>template-name</b> —Name of the version 9 template.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Flow Aggregation to Use Version 9 Flow Templates</a></li></ul>

## traceoptions (Forwarding Options)

---

<b>Syntax</b>	<pre>traceoptions {   no-remote-trace;   file filename &lt;files number&gt; &lt;size bytes&gt; &lt;match expression&gt; &lt;world-readable     no-world-readable&gt;; }</pre>
<b>Hierarchy Level</b>	[edit forwarding-options port-mirroring], [edit forwarding-options <a href="#">sampling</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure traffic sampling tracing operations.  The statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Tracing Traffic Sampling Operations on page 9</a></li> </ul>

## traceoptions (Forwarding Options)

---

<b>Syntax</b>	<pre>traceoptions {   no-remote-trace;   file filename &lt;files number&gt; &lt;size bytes&gt; &lt;match expression&gt; &lt;world-readable     no-world-readable&gt;; }</pre>
<b>Hierarchy Level</b>	[edit forwarding-options port-mirroring], [edit forwarding-options <a href="#">sampling</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure traffic sampling tracing operations.  The statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Tracing Traffic Sampling Operations on page 9</a></li> </ul>

## version

---

<b>Syntax</b>	<code>version <i>format</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options accounting <i>name</i> output <a href="#">flow-server</a> <i>hostname</i> ], [edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> <a href="#">family</a> (inet   inet6   mpls) <a href="#">output</a> <a href="#">flow-server</a> <i>hostname</i> ], [edit forwarding-options <a href="#">sampling family</a> (inet   inet6   mpls) <a href="#">output flow-server</a> <i>hostname</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the version format of the aggregated flows exported to a cflowd server.
<b>Options</b>	<i>format</i> —Format of the flows. <b>Values:</b> 5 or 8 <b>Default:</b> 5
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>export-format</i></li><li>• <i>Enabling Flow Aggregation</i></li></ul>

## version9 (Forwarding Options)

---

<b>Syntax</b>	<code>version9 {     <a href="#">template</a> <i>template-name</i>; }</code>
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">sampling instance</a> <i>instance-name</i> <a href="#">family</a> (inet   inet6   mpls) <a href="#">output</a> <a href="#">flow-server</a> <i>hostname</i> ], [edit forwarding-options <a href="#">sampling family</a> (inet   inet6   mpls) <a href="#">output flow-server</a> <i>hostname</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3.
<b>Description</b>	Specify flow monitoring version 9 properties to apply to output sampling records. The remaining statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Flow Aggregation to Use Version 9 Flow Templates</i></li></ul>



## world-readable

---

<b>Syntax</b>	(world-readable   no-world-readable);
<b>Hierarchy Level</b>	[edit forwarding-options port-mirroring <a href="#">traceoptions file</a> ], [edit forwarding-options <a href="#">sampling family</a> (inet  inet6  mpls) <a href="#">output file</a> ], [edit forwarding-options <a href="#">sampling traceoptionsfile</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Enable unrestricted file access.
<b>Options</b>	<p><b>no-world-readable</b>—Restrict file access to owner. This is the default.</p> <p><b>world-readable</b>—Enable unrestricted file access.</p> <p><b>Default:</b> no-world-readable</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Port Mirroring</a></li> <li>• <a href="#">Configuring Traffic Sampling on page 3</a></li> </ul>



## PART 2

# Index

- [Index on page 63](#)



# Index

## Symbols

#, comments in configuration statements.....	xii
( ), in syntax descriptions.....	xii
< >, in syntax descriptions.....	xii
[ ], in configuration statements.....	xii
{ }, in configuration statements.....	xii
(pipe), in syntax descriptions.....	xii

## A

accept	
action.....	3
address statement	
flow monitoring.....	21
usage guidelines.....	3
aggregate-export-interval statement.....	22
aggregation statement	
flow monitoring.....	23
autonomous-system-type statement.....	24

## B

braces, in configuration statements.....	xii
brackets	
angle, in syntax descriptions.....	xii
square, in configuration statements.....	xii

## C

comments, in configuration statements.....	xii
conventions	
text and syntax.....	xi
curly braces, in configuration statements.....	xii
customer support.....	xiii
contacting JTAC.....	xiii

## D

destination statement.....	25
flow monitoring	
usage guidelines.....	3
disable statement	
flow monitoring.....	26
traffic sampling	
usage guidelines.....	6

documentation	
comments on.....	xiii

## E

engine-id statement	
flow monitoring.....	27
engine-type statement.....	28
extension-service statement.....	29

## F

family statement	
flow monitoring	
usage guidelines.....	3
file statement.....	32
traffic sampling.....	31
traffic sampling output	
usage guidelines.....	7, 9
filename statement.....	32
files	
logging information output file.....	9
traffic sampling output files.....	7
var/log/sampled file.....	9
var/tmp/sampled.pkts file.....	7
files statement.....	33
usage guidelines.....	7
filter statement	
flow monitoring.....	34
usage guidelines.....	3
firewall filters	
actions.....	3
in traffic sampling.....	3
flow-active-timeout statement.....	35
flow-export-rate statement	
flow monitoring.....	36
flow-inactive-timeout statement.....	37
flow-server statement	
flow monitoring.....	38
font conventions.....	xi
forwarding-options statement	
usage guidelines.....	16
FTP traffic, sampling.....	12

## I

inline-jflow statement	
flow monitoring.....	39
instance statement	
sampling.....	40
usage guidelines.....	13

interfaces statement	
flow monitoring	
usage guidelines.....	3

IP addresses	
sampling traffic from single IP addresses.....	11

## L

label-position statement.....	42
local-dump statement.....	42
log output	
traffic sampling.....	9

## M

manuals	
comments on.....	xiii
match statement.....	43
max-packets-per-second statement.....	45
usage guidelines.....	5
maximum-packet-length statement.....	44

## N

no-local-dump statement.....	42
no-remote-trace statement	
flow monitoring.....	45
no-stamp statement.....	56
usage guidelines.....	7
no-world-readable statement	
flow monitoring.....	59
usage guidelines.....	7

## O

output files	
logging information output file.....	9
traffic sampling output files.....	7
output statement	
sampling.....	46

## P

parentheses, in syntax descriptions.....	xii
port mirroring	
disabling.....	26
port statement	
flow monitoring.....	48
pre-rewrite-tos statement.....	47
usage guidelines.....	6

## R

rate statement.....	49
usage guidelines.....	5

run-length statement.....	50
usage guidelines.....	5

## S

sample (firewall filter action).....	3
sample-once statement	
flow monitoring.....	50
usage guidelines.....	6
sampled file.....	9
sampled.pkts file.....	7
sampling	
logical interface.....	5
sampling rate.....	5
sampling statement	
usage guidelines.....	3
size statement.....	54
usage guidelines.....	9
SONET interfaces	
sampling SONET interfaces.....	10
source-address statement	
flow monitoring.....	55
stamp option.....	9
stamp statement.....	56
usage guidelines.....	7
statement	
flow monitoring	
usage guidelines.....	9
support, technical See technical support	
syntax conventions.....	xi

## T

technical support	
contacting JTAC.....	xiii
timestamp option.....	9
traceoptions statement	
flow monitoring.....	57
traffic sampling	
configuring.....	3
disabling.....	6, 26
example configurations.....	10
FTP traffic.....	12
logging information output file.....	9
output files.....	7
SONET interfaces.....	10
traffic from single IP addresses.....	11

**U**

unit statement	
flow monitoring	
usage guidelines.....	3

**V**

var/log/sampled file.....	9
var/tmp/sampled.pkts file.....	7
version statement	
flow monitoring.....	58

**W**

world-readable statement	
flow monitoring.....	59
usage guidelines.....	7

