



Junos[®] OS for EX Series Ethernet Switches

Network Interfaces for EX4300 Switches

Release

14.1X53



Modified: 2015-07-09

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos[®] OS for EX Series Ethernet Switches Network Interfaces for EX4300 Switches
Release 14.1X53
Copyright © 2015, Juniper Networks, Inc.
All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xv
	Documentation and Release Notes	xv
	Supported Platforms	xv
	Using the Examples in This Manual	xv
	Merging a Full Example	xvi
	Merging a Snippet	xvi
	Documentation Conventions	xvii
	Documentation Feedback	xix
	Requesting Technical Support	xix
	Self-Help Online Tools and Resources	xix
	Opening a Case with JTAC	xx
Part 1	Overview	
Chapter 1	Interfaces Overview	3
	EX Series Switches Interfaces Overview	3
	Network Interfaces	3
	Special Interfaces	4
	Understanding Interface Naming Conventions on EX Series Switches	6
	Physical Part of an Interface Name	6
	Logical Part of an Interface Name	8
	Wildcard Characters in Interface Names	8
	Understanding Aggregated Ethernet Interfaces and LACP	8
	Link Aggregation Group (LAG)	9
	Link Aggregation Control Protocol (LACP)	10
	Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop	
	ECMP Traffic	11
	Understanding the Hashing Algorithm	11
	IP (IPv4 and IPv6)	12
	MPLS	13
	MAC-in-MAC Packet Hashing	14
	Layer 2 Header Hashing	15
	Understanding How Energy Efficient Ethernet Reduces Power Consumption on	
	Interfaces	16
	Understanding Local Link Bias	16
	Understanding Layer 3 Subinterfaces	18
	Understanding Unicast RPF	19
	Unicast RPF for Switches Overview	19
	Unicast RPF Implementation	20
	Unicast RPF Packet Filtering	20
	Bootstrap Protocol (BOOTP) and DHCP Requests	20

	Default Route Handling	20
	When to Enable Unicast RPF	20
	When Not to Enable Unicast RPF	21
	Limitations of the Unicast RPF Implementation on EX3200, EX4200, and EX4300 Switches	22
	Understanding IP Directed Broadcast for EX Series Switches	23
	IP Directed Broadcast for EX Series Switches Overview	23
	IP Directed Broadcast Implementation for EX Series Switches	23
	When to Enable IP Directed Broadcast	24
	When Not to Enable IP Directed Broadcast	24
	Understanding Interface Ranges on EX Series Switches	24
	802.1Q VLANs Overview	26
Part 2	Configuration	
Chapter 2	Configuration Tasks	31
	Configuring Gigabit Ethernet Interfaces (CLI Procedure)	32
	Configuring VLAN Options and Interface Mode	32
	Configuring the Link Settings	33
	Configuring the IP Options	34
	Configuring Gigabit Ethernet Interfaces (J-Web Procedure)	35
	Port Role Configuration with the J-Web Interface (with CLI References)	41
	Adding a Logical Unit Description to the Configuration	45
	Disabling a Physical Interface	46
	Example: Disabling a Physical Interface	47
	Disabling a Logical Interface	47
	Configuring Flow Control	48
	Configuring the Interface Address	48
	Configuring Interface IPv4 Addresses	50
	Operational Behavior of Interfaces When the Same IPv4 Address Is Assigned to Them	50
	Configuring Interface IPv6 Addresses	53
	Configuring the Interface Bandwidth	53
	Configuring the Media MTU	54
	Media MTU Overview	55
	How to Configure the Media MTU	56
	Encapsulation Overhead by Encapsulation Type	57
	Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers	58
	Media MTU Sizes by Interface Type for M40e Routers	58
	Media MTU Sizes by Interface Type for M160 Routers	60
	Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers	60
	Media MTU Sizes by Interface Type for MX Series Routers	61
	Media MTU Sizes by Interface Type for T320 Routers	62
	Media MTU Sizes by Interface Type for T640 Platforms	62
	Media MTU Sizes by Interface Type for J2300 Platforms	63
	Media MTU Sizes by Interface Type for J4300 and J6300 Platforms	63
	Media MTU Sizes by Interface Type for J4350 and J6350 Platforms	64

Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers	66
Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers	66
Setting the Protocol MTU	67
Interface Ranges	68
Configuring Interface Ranges	68
Expanding Interface Range Member and Member Range Statements	71
Configuration Inheritance for Member Interfaces	72
Member Interfaces Inheriting Configuration from Configuration Groups	73
Interfaces Inheriting Common Configuration	74
Configuring Inheritance Range Priorities	75
Configuration Expansion Where Interface Range Is Used	75
Configuring Accounting for the Physical Interface	76
Applying an Accounting Profile to the Physical Interface	76
Example: Applying an Accounting Profile to the Physical Interface	77
Configuring Accounting for the Logical Interface	77
Applying an Accounting Profile to the Logical Interface	78
Example: Applying an Accounting Profile to the Logical Interface	78
Configuring Ethernet Loopback Capability	79
Configuring Gratuitous ARP	79
Configuring Static ARP Table Entries	80
Example: Configuring Static ARP Table Entries	81
Disabling the Transmission of Redirect Messages on an Interface	82
Configuring Restricted and Unrestricted Proxy ARP	82
Enabling or Disabling SNMP Notifications on Logical Interfaces	83
Configuring Aggregated Ethernet Links (CLI Procedure)	84
Configuring Aggregated Ethernet Interfaces (J-Web Procedure)	85
Configuring Aggregated Ethernet LACP (CLI Procedure)	88
Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)	89
Configuring LACP Link Protection for a Single Link at the Global Level	91
Configuring LACP Link Protection for a Single Link at the Aggregated Interface Level	91
Configuring Subgroup Bundles to Provide LACP Link Protection to Multiple Links in an Aggregated Ethernet Interface	92
Configuring Aggregated Ethernet Link Protection	93
Configuring Link Protection for Aggregated Ethernet Interfaces	94
Configuring Primary and Backup Links for Link Aggregated Ethernet Interfaces	94
Reverting Traffic to a Primary Link When Traffic is Passing Through a Backup Link	94
Disabling Link Protection for Aggregated Ethernet Interfaces	94
Configuring Aggregated Ethernet Link Speed	95
Configuring Aggregated Ethernet Minimum Links	96
Configuring Energy Efficient Ethernet on Interfaces (CLI Procedure)	97
Enabling EEE on an EEE-Capable Base-T Copper Ethernet Port	97
Disabling EEE on a Base-T Copper Ethernet Port	98

	Configuring Local Link Bias (CLI Procedure)	98
	Enabling Local Link Bias Globally	98
	Enabling Local Link Bias on a Single LAG Bundle in a Virtual Chassis or Virtual Chassis Fabric	99
	Disabling Local Link Bias Globally in a Virtual Chassis or Virtual Chassis Fabric	99
	Disabling Local Link Bias on a Single LAG Bundle in a Virtual Chassis or Virtual Chassis Fabric	99
	Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic (CLI Procedure)	100
	Configuring the Hashing Algorithm to Use Fields in the Layer 2 Header for Hashing	100
	Configuring the Hashing Algorithm to Use Fields in the IP Payload for Hashing	101
	Configuring the Hashing Algorithm to Use Fields in the IPv6 Payload for Hashing	101
	Configuring Tagged Aggregated Ethernet Interfaces	101
	Configuring a Layer 3 Subinterface (CLI Procedure)	102
	Configuring Unicast RPF (CLI Procedure)	103
	Disabling Unicast RPF (CLI Procedure)	104
	Configuring IP Directed Broadcast (CLI Procedure)	105
	Tracing Operations of an Individual Router or Switch Interface	106
	Tracing Operations of the Interface Process	106
Chapter 3	Configuration Statements	109
	[edit chassis] Configuration Statement Hierarchy on EX Series Switches	111
	Supported Statements in the [edit chassis] Hierarchy Level	112
	[edit forwarding-options] Configuration Statement Hierarchy on EX Series Switches	113
	Supported Subhierarchies in the [edit forwarding-options] Hierarchy Level	113
	Unsupported Subhierarchies in the [edit forwarding-options] Hierarchy Level	114
	[edit interfaces] Configuration Statement Hierarchy on EX Series Switches	114
	[edit interfaces ae] Configuration Statement Hierarchy on EX Series Switches	115
	Supported Statements in the [edit interfaces ae] Hierarchy Level	115
	Unsupported Statements in the [edit interfaces ae] Hierarchy Level	119
	[edit interfaces et] Configuration Statement Hierarchy on EX Series Switches	120
	Supported Statements in the [edit interfaces et] Hierarchy Level	121
	Unsupported Statements in the [edit interfaces et] Hierarchy Level	124
	[edit interfaces ge] Configuration Statement Hierarchy on EX Series Switches	126
	Supported Statements in the [edit interfaces ge] Hierarchy Level	126
	Unsupported Statements in the [edit interfaces ge] Hierarchy Level	130

[edit interfaces interface-range] Configuration Statement Hierarchy on EX Series	
Switches	132
Supported Statements in the [edit interfaces interface-range] Hierarchy	
Level	132
Unsupported Statements in the [edit interfaces interface-range] Hierarchy	
Level	135
[edit interfaces irb] Configuration Statement Hierarchy on EX Series	
Switches	140
Supported Statements in the [edit interfaces irb] Hierarchy Level	140
Unsupported Statements in the [edit interfaces irb] Hierarchy Level	143
[edit interfaces lo] Configuration Statement Hierarchy on EX Series	
Switches	144
Supported Statements in the [edit interfaces lo] Hierarchy Level	144
Unsupported Statements in the [edit interfaces lo] Hierarchy Level	146
[edit interfaces me] Configuration Statement Hierarchy on EX Series	
Switches	147
Supported Statements in the [edit interfaces me] Hierarchy Level	147
Unsupported Statements in the [edit interfaces me] Hierarchy Level	149
[edit interfaces vme] Configuration Statement Hierarchy on EX Series	
Switches	150
Supported Statements in the [edit interfaces vme] Hierarchy Level	151
Unsupported Statements in the [edit interfaces vme] Hierarchy Level	153
[edit interfaces xe] Configuration Statement Hierarchy on EX Series	
Switches	154
Supported Statements in the [edit interfaces xe] Hierarchy Level	154
Unsupported Statements in the [edit interfaces xe] Hierarchy Level	157
[edit protocols lacp] Configuration Statement Hierarchy on EX Series	
Switches	159
Supported Statements in the [edit protocols lacp] Hierarchy Level	159
Unsupported Statements in the [edit protocols lacp] Hierarchy Level	160
802.3ad	161
accounting-profile	162
address	163
aggregated-devices	165
aggregated-ether-options	166
arp (Interfaces)	168
auto-negotiation	169
backup-liveness-detection	170
backup-peer-ip	171
bandwidth (Interfaces)	172
broadcast	173
chassis	174
description (Interfaces)	176
device-count	177
disable (Interface)	178
enhanced-hash-key	180
ether-options	182
ethernet (Aggregated Devices)	183
eui-64	183

family	184
filter	190
flow-control	191
force-up	192
gratuitous-arp-reply	192
hash-mode	193
hold-time (Physical Interface)	195
iccp	197
ieee-802-3az-eee	198
inet (enhanced-hash-key)	199
inet6 (enhanced-hash-key)	201
interface (Multichassis Protection)	202
interface-mode	203
interface-range	205
lACP (Aggregated Ethernet)	207
lACP (802.3ad)	209
layer2 (enhanced-hash-key)	210
link-mode	212
link-protection	214
link-speed (Aggregated Ethernet)	216
liveness-detection	217
local-bias (edit interfaces ae)	218
local-bias (forwarding-options)	219
local-ip-addr (ICCP)	220
loopback (Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet)	221
mc-ae	222
mc-ae-id	224
member (Interface Ranges)	225
member-range	226
members	227
minimum-interval (Liveness Detection)	229
minimum-receive-interval (Liveness Detection)	229
mtu	230
multi-chassis	232
multi-chassis-protection	233
native-vlan-id	234
no-gratuitous-arp-request	235
no-redirects	235
peer (ICCP)	236
periodic	237
preferred	238
primary (Address on Interface)	239
proxy-arp	240
rpf-check	241
session-establishment-hold-time	242
speed (Ethernet)	243
traceoptions (Individual Interfaces)	244
traceoptions (Interface Process)	246
transmit-interval (Liveness Detection)	247

	traps	248
	unit	249
	vlan (802.1Q Tagging)	250
	vlan-id (VLAN Tagging and Layer 3 Subinterfaces)	251
	vlan-tagging	252
Part 3	Administration	
Chapter 4	Routine Monitoring	255
	Monitoring Interface Status and Traffic	255
	Verifying the Status of a LAG Interface	257
	Verifying That EEE Is Saving Energy on Configured Ports	257
	Verifying That LACP Is Configured Correctly and Bundle Members Are Exchanging LACP Protocol Packets	259
	Verifying the LACP Setup	259
	Verifying That LACP Packets Are Being Exchanged	260
	Verifying That Layer 3 Subinterfaces Are Working	260
	Verifying Unicast RPF Status	261
	Verifying IP Directed Broadcast Status	263
Chapter 5	Operational Commands	265
	monitor interface	266
	request diagnostics tdr	275
	show diagnostics tdr	277
	show forwarding-options enhanced-hash-key	282
	show interfaces diagnostics optics	285
	show interfaces ge-	299
	show interfaces irb	311
	show interfaces mc-ae	317
	show interfaces me0	320
	show interfaces queue	327
	show interfaces xe-	333
	show lacp interfaces	347
	test interface restart-auto-negotiation	352
Part 4	Troubleshooting	
Chapter 6	Troubleshooting Procedures	355
	Troubleshooting an Aggregated Ethernet Interface	355
	Show Interfaces Command Shows the LAG is Down	355
	Logical Interface Statistics Do Not Reflect All Traffic	355
	IPv6 Interface Traffic Statistics Are Not Supported	356
	SNMP Counters ifHCInBroadcastPkts and ifInBroadcastPkts Are Always 0	356
	Troubleshooting Interface Configuration and Cable Faults	356
	Interface Configuration or Connectivity Is Not Working	356
	Troubleshooting Unicast RPF	357
	Legitimate Packets Are Discarded	357
	Diagnosing a Faulty Twisted-Pair Cable (CLI Procedure)	358

List of Figures

Part 1	Overview	
Chapter 1	Interfaces Overview	3
	Figure 1: Egress Traffic Flow with Local Link Bias	17
	Figure 2: Egress Traffic Flow without Local Link Bias	17
	Figure 3: Symmetrically Routed Interfaces	21
	Figure 4: Asymmetrically Routed Interfaces	22

List of Tables

	About the Documentation	xv
	Table 1: Notice Icons	xvii
	Table 2: Text and Syntax Conventions	xvii
Part 1	Overview	
Chapter 1	Interfaces Overview	3
	Table 3: Network Interface Types and Purposes	4
	Table 4: Special Interface Types and Purposes	4
	Table 5: Maximum Interfaces per LAG and Maximum LAGs per Switch	9
	Table 6: IPv4 and IPv6 Hashing Fields	13
	Table 7: MPLS Hashing Fields	14
	Table 8: MAC-in-MAC Hashing Fields	15
	Table 9: Layer 2 Header Hashing Fields	15
Part 2	Configuration	
Chapter 2	Configuration Tasks	31
	Table 10: Factory Default Configuration Link Settings for EX Series Switches	33
	Table 11: Port Edit Options	37
	Table 12: Recommended CoS Settings for Port Roles	40
	Table 13: Port Role Configuration Summary	41
	Table 14: Recommended CoS Settings for Port Roles	44
	Table 15: Effect of set interfaces disable <interface_name> on T series PICs	46
	Table 16: Encapsulation Overhead by Encapsulation Type	57
	Table 17: Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers	58
	Table 18: Media MTU Sizes by Interface Type for M40e Routers	58
	Table 19: Media MTU Sizes by Interface Type for M160 Routers	60
	Table 20: Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers	60
	Table 21: Media MTU Sizes by Interface Type for MX Series Routers	61
	Table 22: Media MTU Sizes by Interface Type for T320 Routers	62
	Table 23: Media MTU Sizes by Interface Type for T640 Platforms	62
	Table 24: Media MTU Sizes by Interface Type for J2300 Platforms	63
	Table 25: Media MTU Sizes by Interface Type for J4300 and J6300 Platforms	63
	Table 26: Media MTU Sizes by Interface Type for J4350 and J6350 Platforms	64
	Table 27: Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers	66

	Table 28: Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers	66
	Table 29: Aggregated Ethernet Interface Options	86
	Table 30: VLAN Options	87
	Table 31: IP Options	87
Chapter 3	Configuration Statements	109
	Table 32: Unsupported [edit forwarding-options] Subhierarchies on EX Series Switches	114
	Table 33: Unsupported [edit interfaces ae] Configuration Statements for EX Series Switches	119
	Table 34: Unsupported [edit interfaces et] Configuration Statements for EX Series Switches	124
	Table 35: Unsupported [edit interfaces ge] Configuration Statements for EX Series Switches	130
	Table 36: Unsupported [edit interfaces interface-range] Configuration Statements for EX Series Switches	136
	Table 37: Unsupported [edit interfaces irb] Configuration Statements for EX Series Switches	143
	Table 38: Unsupported [edit interfaces lo] Configuration Statements for EX Series Switches	146
	Table 39: Unsupported [edit interfaces me] Configuration Statements for EX Series Switches	149
	Table 40: Unsupported [edit interfaces xe] Configuration Statements for EX Series Switches	158
	Table 41: Protocol Families and Supported Interface Types	188
Part 3	Administration	
Chapter 5	Operational Commands	265
	Table 42: Output Control Keys for the monitor interface Command	266
	Table 43: Output Control Keys for the monitor interface traffic Command	267
	Table 44: monitor interface Output Fields	268
	Table 45: request diagnostics tdr Output Fields	276
	Table 46: show diagnostics tdr Output Fields	278
	Table 47: show forwarding-options enhanced-hash-key Output Fields	282
	Table 48: show interfaces diagnostics optics Output Fields	285
	Table 49: show interfaces ge- Output Fields	300
	Table 50: show interfaces irb Output Fields	311
	Table 51: show interfaces mc-ae Output Fields	318
	Table 52: show interfaces me0 Output Fields	320
	Table 53: show interfaces queue Output Fields	327
	Table 54: show interfaces xe- Output Fields	334
	Table 55: show lacp interfaces Output Fields	348

About the Documentation

- Documentation and Release Notes on page xv
- Supported Platforms on page xv
- Using the Examples in This Manual on page xv
- Documentation Conventions on page xvii
- Documentation Feedback on page xix
- Requesting Technical Support on page xix

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- EX Series

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:


```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

Documentation Conventions

Table 1 on page xvii defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xvii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	<pre>user@host> show chassis alarms</pre> <p>No alarms currently active</p>
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	<p>Configure the machine's domain name:</p> <pre>[edit] root@# set system domain-name domain-name</pre>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the <code>[edit protocols ospf area area-id]</code> hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast <i>(string1 string2 string3)</i>
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [community-ids]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	<pre>[edit] routing-options { static { route default { nexthop <i>address</i>; retain; } } }</pre>
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page at the Juniper Networks Technical Documentation site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>

- Download the latest versions of software and review release notes:
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [Interfaces Overview on page 3](#)

CHAPTER 1

Interfaces Overview

- [EX Series Switches Interfaces Overview on page 3](#)
- [Understanding Interface Naming Conventions on EX Series Switches on page 6](#)
- [Understanding Aggregated Ethernet Interfaces and LACP on page 8](#)
- [Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic on page 11](#)
- [Understanding How Energy Efficient Ethernet Reduces Power Consumption on Interfaces on page 16](#)
- [Understanding Local Link Bias on page 16](#)
- [Understanding Layer 3 Subinterfaces on page 18](#)
- [Understanding Unicast RPF on page 19](#)
- [Understanding IP Directed Broadcast for EX Series Switches on page 23](#)
- [Understanding Interface Ranges on EX Series Switches on page 24](#)
- [802.1Q VLANs Overview on page 26](#)

EX Series Switches Interfaces Overview

Juniper Networks EX Series Ethernet Switches have two types of interfaces: network interfaces and special interfaces. This topic provides brief information about these interfaces. For additional information, see the [Junos OS Interfaces Fundamentals Configuration Guide](#).

For information about interface-naming conventions on EX Series switches, see [“Understanding Interface Naming Conventions on EX Series Switches” on page 6](#).

This topic describes:

- [Network Interfaces on page 3](#)
- [Special Interfaces on page 4](#)

Network Interfaces

Network interfaces connect to the network and carry network traffic. [Table 3 on page 4](#) lists the types of network interfaces supported on EX Series switches.

Table 3: Network Interface Types and Purposes

Type	Purpose
Aggregated Ethernet interfaces	All EX Series switches allow you to group Ethernet interfaces at the physical layer to form a single link layer interface, also known as a <i>link aggregation group (LAG)</i> or <i>bundle</i> . These aggregated Ethernet interfaces help to balance traffic and increase the uplink bandwidth.
LAN access interfaces	Use these EX Series switch interfaces to connect a personal computer, laptop, file server, or printer to the network. When you power on an EX Series switch and use the factory-default configuration, the software automatically configures interfaces in access mode for each of the network ports. The default configuration also enables autonegotiation for both speed and link mode.
Power over Ethernet (PoE) interfaces	EX Series switches provide PoE network ports with various switch models. These ports can be used to connect voice over IP (VoIP) telephones, wireless access points, video cameras, and point-of-sale devices to safely receive power from the same access ports that are used to connect personal computers to the network. PoE interfaces are enabled by default in the factory configuration.
Trunk interfaces	EX Series access switches can be connected to a distribution switch or customer-edge (CE) switches or routers. To use a port for this type of connection, you must explicitly configure the network interface for trunk mode. The interfaces from the distribution switch or CE switch to the access switches must also be configured for trunk mode.

Special Interfaces

Table 4 on page 4 lists the types of special interfaces supported on EX Series switches.

Table 4: Special Interface Types and Purposes

Type	Purpose
Console port	Each EX Series switch has a serial port, labeled CON or CONSOLE , for connecting tty-type terminals to the switch using standard PC-type tty cables. The console port does not have a physical address or IP address associated with it. However, it is an interface in the sense that it provides access to the switch. On an EX3300 Virtual Chassis, an EX4200 Virtual Chassis, or an EX4500 Virtual Chassis, you can access the master and configure all members of the Virtual Chassis through any member's console port. For more information about the console port in a Virtual Chassis, see <i>Understanding Global Management of a Virtual Chassis</i> .
Loopback	All EX Series switches have this software-only virtual interface that is always up. The loopback interface provides a stable and consistent interface and IP address on the switch.
Management interface	The Juniper Networks Junos operating system (Junos OS) for EX Series switches automatically creates the switch's management Ethernet interface, me0 . The management Ethernet interface provides an out-of-band method for connecting to the switch. To use me0 as a management port, you must configure its logical port, me0.0 , with a valid IP address. You can connect to the management interface over the network using utilities such as SSH or Telnet. SNMP can use the management interface to gather statistics from the switch. (The management interface me0 is analogous to the fxp0 interfaces on routers running Junos OS.)

Table 4: Special Interface Types and Purposes (*continued*)

Type	Purpose
Integrated Routing and Bridging (IRB) Interface or Routed VLAN Interface (RVI)	<p>EX Series switches use an integrated routing and bridging (IRB) interface or Routed VLAN Interface (RVI) to route traffic from one broadcast domain to another and to perform other Layer 3 functions such as traffic engineering. These functions are typically performed by a router interface in a traditional network.</p> <p>The IRB interface or RVI functions as a logical router, eliminating the need for having both a switch and a router. These interfaces must be configured as part of a broadcast domain or virtual private LAN service (VPLS) routing instance for Layer 3 traffic to be routed from.</p>
Virtual Chassis port (VCP) interfaces	<p>Virtual Chassis ports (VCPs) are used to interconnect switches in a Virtual Chassis:</p> <ul style="list-style-type: none"> EX3300 switches—Port 2 and port 3 of the SFP+ uplink ports are preconfigured as VCPs and can be used to interconnect up to six EX3300 switches in an EX3300 Virtual Chassis. See <i>Setting an Uplink Port on an EX Series Switch as a Virtual Chassis Port (CLI Procedure)</i>. EX4200 and EX4500 switches—Each EX4200 switch or each EX4500 switch with a Virtual Chassis module installed has two dedicated VCPs on its rear panel. These ports can be used to interconnect up to ten EX4200 switches in an EX4200 Virtual Chassis, up to ten EX4500 switches in an EX4500 Virtual Chassis, and up to ten switches in a mixed EX4200 and EX4500 Virtual Chassis. When you power on switches that are interconnected in this manner, the software automatically configures the VCP interfaces for the dedicated ports that have been interconnected. These VCP interfaces are not configurable or modifiable. See <i>Understanding the High-Speed Interconnection of the Dedicated Virtual Chassis Ports Connecting EX4200, EX4500, and EX4550 Member Switches</i>. <p>You can also interconnect EX4200 and EX4500 switches by using uplink module ports. Using uplink ports allows you to connect switches over longer distances than you can by using the dedicated VCPs. To use the uplink ports as VCPs, you must explicitly configure the uplink module ports on the members you want to connect as VCPs. See <i>Setting an Uplink Port on an EX Series Switch as a Virtual Chassis Port (CLI Procedure)</i> or <i>Setting an Uplink Port as a Virtual Chassis Port on an EX4500 or EX4550 Switch (CLI Procedure)</i>.</p> <ul style="list-style-type: none"> EX4300 switches—All QSFP+ ports are configured as VCPs, by default. See <i>Understanding EX4300 Virtual Chassis</i>. <p>You can also interconnect EX4300 switches into a Virtual Chassis by using SFP+ uplink module ports as VCPs. Using uplink ports as VCPs allows you to connect switches over longer distances than you can by using the QSFP+ ports as VCPs. To use the uplink ports as VCPs, you must explicitly configure the uplink module ports on the members you want to connect as VCPs. See <i>Setting an Uplink Port on an EX Series Switch as a Virtual Chassis Port (CLI Procedure)</i>.</p> <ul style="list-style-type: none"> EX8200 switches—EX8200 switches can be connected to an XRE200 External Routing Engine to create an EX8200 Virtual Chassis. The XRE200 External Routing Engine has dedicated VCPs that connect to ports on the internal Routing Engines of the EX8200 switches and can connect to another XRE200 External Routing Engine for redundancy. These ports require no configuration. <p>You can also connect two members of an EX8200 Virtual Chassis so that they can exchange Virtual Chassis Control Protocol (VCCP) traffic. To do so, you explicitly configure network ports on the EX8200 switches as VCPs. See <i>Understanding Virtual Chassis Ports in an EX8200 Virtual Chassis</i>.</p>
Virtual management Ethernet (VME) interface	<p>EX3300, EX4200, EX4300, and EX4500 switches have a VME interface. This is a logical interface that is used for Virtual Chassis configurations and allows you to manage all the members of the Virtual Chassis through the master. For more information about the VME interface, see <i>Understanding Global Management of a Virtual Chassis</i>.</p> <p>EX8200 switches do not use a VME interface. An EX8200 Virtual Chassis is managed through the management Ethernet (me0) interface on the XRE200 External Routing Engine.</p>

**Related
Documentation**

- [EX2200 Switches Hardware Overview](#)
- [EX3200 Switches Hardware Overview](#)
- [EX3300 Switches Hardware Overview](#)
- [EX4200 Switches Hardware Overview](#)
- [EX4300 Switches Hardware Overview](#)
- [EX4500 Switches Hardware Overview](#)
- [EX6210 Switch Hardware Overview](#)
- [EX8208 Switch Hardware Overview](#)
- [EX8216 Switch Hardware Overview](#)
- [XRE200 External Routing Engine Hardware Overview](#)
- [Understanding PoE on EX Series Switches](#)
- [Understanding Aggregated Ethernet Interfaces and LACP on page 8](#)
- [Understanding Layer 3 Subinterfaces on page 18](#)

Understanding Interface Naming Conventions on EX Series Switches

Juniper Networks EX Series Ethernet Switches use a naming convention for defining the interfaces that is similar to that of other platforms running under Juniper Networks Junos operating system (Junos OS). This topic provides brief information about the naming conventions used for interfaces on EX Series switches. For additional information, see the [Junos OS Network Interfaces Configuration Guide](#).

This topic describes:

- [Physical Part of an Interface Name on page 6](#)
- [Logical Part of an Interface Name on page 8](#)
- [Wildcard Characters in Interface Names on page 8](#)

Physical Part of an Interface Name

Network interfaces in Junos OS are specified as follows:

type-fpc / pic / port

EX Series switches apply this convention as follows:

- *type*—EX Series interfaces use the following media types:
 - **ge**—Gigabit Ethernet interface
 - **xe**—10 Gigabit Ethernet interface

- **et**—40 Gigabit Ethernet interface
- **fpc**—Flexible PIC Concentrator. EX Series interfaces use the following convention for the FPC number in interface names:
 - On an EX2200 switch, an EX3200 switch, a standalone EX3300 switch, a standalone EX4200 switch, a standalone EX4300 switch, a standalone EX4500, and a standalone EX4550 switch, FPC refers to the switch itself. The FPC number is **0** by default on these switches.
 - On an EX3300 Virtual Chassis, an EX4200 Virtual Chassis, an EX4300 Virtual Chassis, an EX4500 Virtual Chassis, an EX4550 Virtual Chassis, or a mixed Virtual Chassis, the FPC number indicates the member ID of the switch in the Virtual Chassis.
 - On an EX6200 switch and a standalone EX8200 switch, the FPC number indicates the slot number of the line card that contains the physical interface. On an EX6200 switch, the FPC number also indicates the slot number of the Switch Fabric and Routing Engine (SRE) module that contains the uplink port.
 - On an EX8200 Virtual Chassis, the FPC number indicates the slot number of the line card on the Virtual Chassis. The line card slots on Virtual Chassis member 0 are numbered 0 through 15; on member 1, they are numbered 16 through 31, and so on.
- **pic**—EX Series interfaces use the following convention for the PIC (Physical Interface Card) number in interface names:
 - On EX2200, EX3200, EX3300, EX4200, EX4500 switch, and EX4550 switches, the PIC number is **0** for all built-in interfaces (interfaces that are not uplink ports).
 - On EX2200, EX3200, EX3300, and EX4200 switches, the PIC number is **1** for uplink ports.
 - On EX4300 switches, the PIC number is **0** for built-in network ports, **1** for built-in QSFP+ ports (located on the rear panel of the switch), and **2** for uplink module ports.
 - On EX4500 switches, the PIC number is **1** for ports on the left-hand uplink module and **2** for ports on the right-hand uplink module.
 - On EX4550 switches, the PIC number is **1** for ports in the expansion module or Virtual Chassis module installed in the module slot on the front panel of the switch and **2** for those in the expansion module or Virtual Chassis module installed in the module slot on the rear panel of the switch.
 - On EX6200 and EX8200 switches, the PIC number is always **0**.
- **port**—EX Series interfaces use the following convention for port numbers:
 - On EX2200, EX3200, EX3300, EX4200, EX4300, EX4500, and EX4550 switches, built-in network ports are numbered from left to right. On models that have two rows of ports, the ports on the top row start with **0** followed by the remaining even-numbered ports, and the ports on the bottom row start with **1** followed by the remaining odd-numbered ports.
 - Uplink ports in EX2200, EX3200, EX3300, EX4200, EX4300, EX4500, and EX4550 switches are labeled from left to right, starting with **0**.

- On EX6200 and EX8200 switches, the network ports are numbered from left to right on each line card. On line cards that have two rows of ports, the ports on the top row start with 0 followed by the remaining even-numbered ports, and the ports on the bottom row start with 1 followed by the remaining odd-numbered ports.
- Uplink ports on an SRE module in an EX6200 switch are labeled from left to right, starting with 0.

Logical Part of an Interface Name

The logical unit part of the interface name corresponds to the logical unit number, which can be a number from 0 through 16384. In the virtual part of the name, a period (.) separates the port and logical unit numbers: *type-fpc/pic/port.logical-unit-number*. For example, if you issue the **show ethernet-switching interfaces** command on a system with a default VLAN, the resulting display shows the logical interfaces associated with the VLAN:

Interface	State	VLAN members	Blocking
ge-0/0/0.0	down	remote-analyzer	unblocked
ge-0/0/1.0	down	default	unblocked
ge-0/0/10.0	down	default	unblocked

Wildcard Characters in Interface Names

In the **show interfaces** and **clear interfaces** commands, you can use wildcard characters in the *interface-name* option to specify groups of interface names without having to type each name individually. You must enclose all wildcard characters except the asterisk (*) in quotation marks (" ").

Related Documentation

- [EX Series Switches Interfaces Overview on page 3](#)
- [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\)](#)
- [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\) on page 32](#)

Understanding Aggregated Ethernet Interfaces and LACP

IEEE 802.3ad link aggregation enables you to group Ethernet interfaces to form a single link layer interface, also known as a *link aggregation group (LAG)* or *bundle*.

Aggregating multiple links between physical interfaces creates a single logical point-to-point trunk link or a LAG. The LAG balances traffic across the member links within an aggregated Ethernet bundle and effectively increases the uplink bandwidth. Another advantage of link aggregation is increased availability, because the LAG is composed of multiple member links. If one member link fails, the LAG continues to carry traffic over the remaining links.

Link Aggregation Control Protocol (LACP), a component of IEEE 802.3ad, provides additional functionality for LAGs.

This topic describes:

- [Link Aggregation Group \(LAG\) on page 9](#)
- [Link Aggregation Control Protocol \(LACP\) on page 10](#)

Link Aggregation Group (LAG)

You configure a LAG by specifying the link number as a physical device and then associating a set of interfaces (ports) with the link. All the interfaces must have the same speed and be in full-duplex mode. Juniper Networks Junos operating system (Junos OS) for EX Series Ethernet Switches assigns a unique ID and port priority to each interface. The ID and priority are not configurable.

The number of interfaces that can be grouped into a LAG and the total number of LAGs supported on a switch varies according to switch model. [Table 5 on page 9](#) lists the EX Series switches and the maximum number of interfaces per LAG and the maximum number of LAGs they support. MX Series devices can support up to 64 LAGs.

Table 5: Maximum Interfaces per LAG and Maximum LAGs per Switch

Switch	Maximum Interfaces per LAG	Maximum LAGs
EX2200	8	32
EX3200	8	32
EX3300 and EX3300 Virtual Chassis	8	111
EX4200 and EX4200 Virtual Chassis	8	111
EX4300 and EX4300 Virtual Chassis	16	112
EX4500, EX4500 Virtual Chassis, EX4550, and EX4550 Virtual Chassis	8	111
EX6200	8	111
EX8200	12	255
EX8200 Virtual Chassis	12	239

When configuring LAGs, consider the following guidelines:

- You must configure the LAG on both sides of the link.
- You must set the interfaces on either side of the link to the same speed.
- You can configure and apply firewall filters on a LAG.

- You can optionally configure LACP for link negotiation.
- You can optionally configure LACP for link protection.

You can combine physical Ethernet ports belonging to different member switches of a Virtual Chassis configuration to form a LAG. See *Understanding EX Series Virtual Chassis Port Link Aggregation* and *Understanding Link Aggregation in an EX8200 Virtual Chassis*.



NOTE: The interfaces that are included within a LAG are sometimes referred to as *member interfaces*. Do not confuse this term with *member switches*, which refers to switches that are interconnected as a Virtual Chassis. It is possible to create a LAG that is composed of member interfaces that are located in different member switches of a Virtual Chassis.

A LAG hashing algorithm determines how traffic entering a LAG is placed onto the bundle's member links. The LAG hashing algorithm tries to manage bandwidth by evenly load-balancing all incoming traffic across the member links in the bundle. You can configure the fields used by the LAG hashing algorithm on some EX Series switches. See [“Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic \(CLI Procedure\)” on page 100](#).

A LAG creates a single logical point-to-point connection. A typical deployment for a LAG would be to aggregate trunk links between an access switch and a distribution switch or customer edge (CE) router.

Link Aggregation Control Protocol (LACP)

When LACP is configured, it detects misconfigurations on the local end or the remote end of the link. Thus, LACP can help prevent communication failure:

- When LACP is not enabled, a local LAG might attempt to transmit packets to a remote single interface, which causes the communication to fail.
- When LACP is enabled, a local LAG cannot transmit packets unless a LAG with LACP is also configured on the remote end of the link.

By default, Ethernet links do not exchange LACP protocol data units (PDUs), which contain information about the state of the link. You can configure Ethernet links to actively transmit LACP PDUs, or you can configure the links to passively transmit them, sending out LACP PDUs only when the Ethernet link receives them from the remote end. The transmitting link is known as the *actor* and the receiving link is known as the *partner*.

In a scenario where a dual-homed server is deployed with a switch, the network interface cards form a LAG with the switch. During a server upgrade, the server might not be able to exchange LACP PDUs. In such a situation, you can configure an interface to be in the **up** state even if no PDUs are exchanged. Use the **force-up** statement to configure an interface when the peer has limited LACP capability. The interface selects the associated LAG by default, whether the switch and peer are both in active or passive mode. When PDUs are not received, the partner is considered to be working in the passive mode. Therefore, LACP PDU transmissions are controlled by the transmitting link.

If the remote end of the LAG link is a security device, LACP might not be supported because security devices require a deterministic configuration. In such a scenario, do not configure LACP. All links in the LAG are permanently operational unless the switch detects a link failure within the Ethernet physical layer or data link layers.

Related Documentation

- [Configuring Aggregated Ethernet Links \(CLI Procedure\) on page 84](#)
- [Configuring Aggregated Ethernet LACP \(CLI Procedure\) on page 88](#)
- [Configuring LACP Link Protection of Aggregated Ethernet Interfaces \(CLI Procedure\) on page 89](#)
- [Junos OS Network Interfaces Configuration Guide](#)

Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic

Juniper Networks EX Series and QFX Series use a hashing algorithm to determine how to forward traffic over a link aggregation group (LAG) bundle or to the next-hop device when equal-cost multipath (ECMP) is enabled.

The hashing algorithm makes hashing decisions based on values in various packet fields, as well as on some internal values like source port ID and source device ID. You can configure some of the fields that are used by the hashing algorithm.

This topic contains the following sections:

- [Understanding the Hashing Algorithm on page 11](#)
- [IP \(IPv4 and IPv6\) on page 12](#)
- [MPLS on page 13](#)
- [MAC-in-MAC Packet Hashing on page 14](#)
- [Layer 2 Header Hashing on page 15](#)

Understanding the Hashing Algorithm

The hashing algorithm is used to make traffic-forwarding decisions for traffic entering a LAG bundle or for traffic exiting a switch when ECMP is enabled.

For LAG bundles, the hashing algorithm determines how traffic entering a LAG bundle is placed onto the bundle's member links. The hashing algorithm tries to manage bandwidth by evenly load-balancing all incoming traffic across the member links in the bundle.

For ECMP, the hashing algorithm determines how incoming traffic is forwarded to the next-hop device.

The hashing algorithm makes hashing decisions based on values in various packet fields, as well as on some internal values like source port ID and source device ID. The packet fields used by the hashing algorithm varies by the packet's EtherType and, in some instances, by the configuration on the switch. The hashing algorithm recognizes the following EtherTypes:

- IP (IPv4 and IPv6)
- MPLS
- MAC-in-MAC

Traffic that is not recognized as belonging to any of these EtherTypes is hashed based on the Layer 2 header. IP and MPLS traffic are also hashed based on the Layer 2 header when a user configures the hash mode as Layer 2 header.

You can configure some fields that are used by the hashing algorithm to make traffic forwarding decisions. You cannot, however, configure how certain values within a header are used by the hashing algorithm.

Note the following points regarding the hashing algorithm:

- The fields selected for hashing are based on the packet type only. The fields are not based on any other parameters, including forwarding decision (bridged or routed) or egress LAG bundle configuration (Layer 2 or Layer 3).
- The same fields are used for hashing unicast and multicast packets. Unicast and multicast packets are, however, hashed differently.
- The same fields are used by the hashing algorithm to hash ECMP and LAG traffic, but the hashing algorithm hashes ECMP and LAG traffic differently. The different hashing ensures that traffic is not polarized when a LAG bundle is part of the ECMP next-hop path.
- The same fields are used for hashing regardless of whether the switch is or is not participating in a mixed or non-mixed Virtual Chassis or Virtual Chassis Fabric (VCF).

The fields used for hashing by each EtherType as well as the fields used by the Layer 2 header are discussed in the following sections.

IP (IPv4 and IPv6)

Payload fields in IPv4 and IPv6 packets are used by the hashing algorithm when IPv4 or IPv6 packets need to be placed onto a member link in a LAG bundle or sent to the next-hop device when ECMP is enabled.

The hash mode is set to Layer 2 payload field, by default. IPv4 and IPv6 payload fields are used for hashing when the hash mode is set to Layer 2 payload.

If the hash mode is configured to Layer 2 header, IPv4, IPv6, and MPLS packets are hashed using the Layer 2 header fields. If you want incoming IPv4, IPv6, and MPLS packets hashed by the source MAC address, destination MAC address, or EtherType fields, you must set the hash mode to Layer 2 header.

[Table 6 on page 13](#) displays the IPv4 and IPv6 payload fields that are used by the hashing algorithm, by default.

- ✓—Field is used by the hashing algorithm, by default.
- X—Field is not used by the hashing algorithm, by default.

- (configurable)—Field can be configured to be used or not used by the hashing algorithm.

Table 6: IPv4 and IPv6 Hashing Fields

Fields	EX4300		QFX5100	
	LAG	ECMP	LAG	ECMP
Source MAC	X	X	X	X
Destination MAC	X	X	X	X
EtherType	X	X	X	X
VLAN ID	X (configurable)	X (configurable)	X (configurable)	X (configurable)
Source IP or IPv6	✓ (configurable)	✓ (configurable)	✓ (configurable)	✓ (configurable)
Destination IP or IPv6	✓ (configurable)	✓ (configurable)	✓ (configurable)	✓ (configurable)
Protocol (IPv4 only)	✓ (configurable)	✓ (configurable)	✓ (configurable)	✓ (configurable)
Next header (IPv6 only)	✓ (configurable)	✓ (configurable)	✓ (configurable)	✓ (configurable)
Layer 4 Source Port	✓ (configurable)	✓ (configurable)	✓ (configurable)	✓ (configurable)
Layer 4 Destination Port	✓ (configurable)	✓ (configurable)	✓ (configurable)	✓ (configurable)
IPv6 Flow label (IPv6 only)	X	X	X	X

MPLS

The hashing algorithm hashes MPLS packets using the source IP, destination IP, MPLS label 0, MPLS label 1, and MPLS label 2 fields.

[Table 7 on page 14](#) displays the MPLS payload fields that are used by the hashing algorithm, by default:

- ✓—Field is used by the hashing algorithm, by default.

- X—Field is not used by the hashing algorithm, by default.

The fields used by the hashing algorithm for MPLS packet hashing are not user-configurable.

The source IP and destination IP fields are not always used for hashing. For non-terminated MPLS packets, the payload is checked if the bottom of stack (BoS) flag is seen in the packet. If the payload is IPv4 or IPv6, then the IP source address and IP destination address fields are used for hashing along with the MPLS labels. If the BoS flag is not seen in the packet, only the MPLS labels are used for hashing.

Table 7: MPLS Hashing Fields

Field	EX4300	QFX5100
Source MAC	X	X
Destination MAC	X	X
EtherType	X	X
VLAN ID	X	X
Source IP	✓	✓
Destination IP	✓	✓
Protocol (for IPv4 packets)	X	X
Next header (for IPv6 packets)	X	X
Layer 4 Source Port	X	X
Layer 4 Destination Port	X	X
IPv6 Flow lab	X	X
MPLS label 0	✓	✓
MPLS label 1	✓	✓
MPLS label 2	✓	✓

MAC-in-MAC Packet Hashing

Packets using the MAC-in-MAC EtherType are hashed by the hashing algorithm using the Layer 2 payload source MAC, Layer 2 payload destination MAC, and Layer 2 payload EtherType fields. See [Table 8 on page 15](#).

Hashing using the fields in the MAC-in-MAC EtherType packet is first supported on EX4300 switches in Release 13.2X51-D20. Hashing using the fields in the MAC-in-MAC EtherType is not supported on earlier releases.

The fields used by the hashing algorithm for MAC-in-MAC hashing are not user-configurable.

- ✓—Field is used by the hashing algorithm, by default.
- X—Field is not used by the hashing algorithm, by default.

Table 8: MAC-in-MAC Hashing Fields

Field	EX4300	QFX5100
Layer 2 Payload Source MAC	✓	✓
Layer 2 Payload Destination MAC	✓	✓
Layer 2 Payload EtherType	✓	✓
Layer 2 Payload Outer VLAN	X	X

Layer 2 Header Hashing

Layer 2 header fields are used by the hashing algorithm when a packet's EtherType is not recognized as IP (IPv4 or IPv6), MPLS, or MAC-in-MAC. The Layer 2 header fields are also used for hashing IPv4, IPv6, and MPLS traffic instead of the payload fields when the hash mode is set to Layer 2 header.

- ✓—Field is used by the hashing algorithm, by default.
- X—Field is not used by the hashing algorithm, by default.
- (configurable)—Field can be configured to be used or not used by the hashing algorithm.

Table 9: Layer 2 Header Hashing Fields

Field	EX4300	QFX5100
Source MAC	✓ (configurable)	✓ (configurable)
Destination MAC	✓ (configurable)	✓ (configurable)
EtherType	✓ (configurable)	✓ (configurable)
VLAN ID	X (configurable)	X (configurable)

- Related Documentation**
- [Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic \(CLI Procedure\) on page 100](#)

Understanding How Energy Efficient Ethernet Reduces Power Consumption on Interfaces

Energy Efficient Ethernet (EEE), an Institute of Electrical and Electronics Engineers (IEEE) 802.3az standard, reduces the power consumption of physical layer devices (PHYs) during periods of low link utilization. EEE saves energy by putting part of the transmission circuit into low power mode when the link is idle.

An Ethernet link consumes power even when a link is idle. EEE provides a method to utilize power in such a way that Ethernet links use power only during data transmission. EEE specifies a signaling protocol, Low Power Idle (LPI) for achieving the power saving during the idle time of Ethernet links. EEE allows PHYs to exchange LPI indications to signal the transition to low power mode when there is no traffic. LPI indicates when a link can go idle and when the link needs to resume after a predefined delay without impacting data transmission.

The following copper PHYs are standardized by IEEE 802.3az:


- 100BASE-T
- 1000BASE-T
- 10GBASE-T

- Related Documentation**
- [Configuring Energy Efficient Ethernet on Interfaces \(CLI Procedure\) on page 97](#)

Understanding Local Link Bias


Local link bias conserves bandwidth on Virtual Chassis ports (VCPs) by using local links to forward unicast traffic exiting a Virtual Chassis or Virtual Chassis Fabric (VCF) that has a link aggregation group (LAG) bundle composed of member links on different member switches in the same Virtual Chassis or VCF. A local link is a member link in the LAG bundle that is on the member switch that received the traffic. Because traffic is received and forwarded on the same member switch when local link bias is enabled, no VCP bandwidth is consumed by traffic traversing the VCPs to exit the Virtual Chassis or VCF using a different member link in the LAG bundle. The flow of traffic exiting a Virtual Chassis or VCF over a LAG bundle when local link bias is enabled is illustrated in [Figure 1 on page 17](#).

Figure 1: Egress Traffic Flow with Local Link Bias

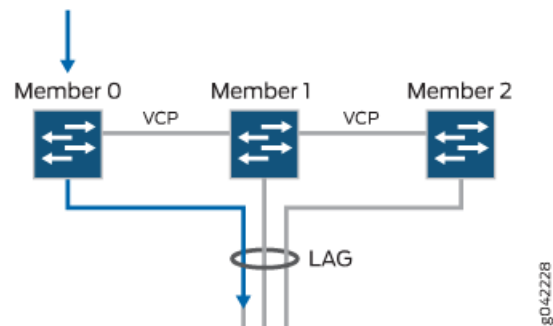

When local link bias is disabled, egress traffic exiting a Virtual Chassis or VCF on a LAG bundle can be forwarded out of any member link in the LAG bundle. Traffic forwarding decisions are made by an internal algorithm that attempts to load-balance traffic between the member links in the bundle. VCP bandwidth is frequently consumed by egress traffic when local link bias is disabled because the egress traffic traverses the VCPs to reach the destination egress member link in the LAG bundle. The flow of traffic exiting a Virtual Chassis or VCF over a LAG bundle when local link bias is disabled is illustrated in [Figure 2 on page 17](#).

Figure 2: Egress Traffic Flow without Local Link Bias

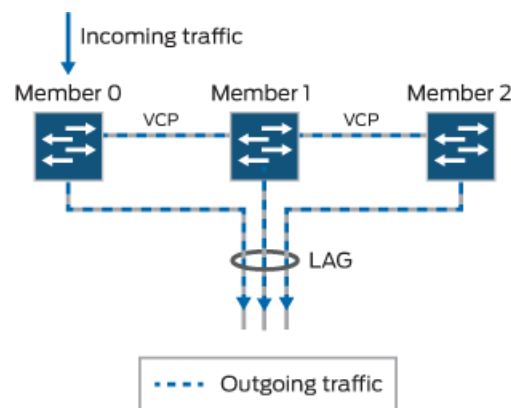

Starting in Junos OS Release 14.1X53-D25, local link bias can be enabled globally for all LAG bundles in a Virtual Chassis or VCF, or individually per LAG bundle in a Virtual Chassis. In prior Junos OS releases, local link bias could be enabled individually per LAG bundle only.

A Virtual Chassis or VCF that has multiple LAG bundles can contain bundles that have and have not enabled local link bias. Local link bias only impacts the forwarding of unicast traffic exiting a Virtual Chassis or VCF; ingress traffic handling is not impacted by the local link bias setting. Egress multicast, unknown unicast, and broadcast traffic exiting a Virtual Chassis or VCF over a LAG bundle is not impacted by the local link bias setting and is always load-balanced among the member links. Local link bias is disabled, by default.

You should enable local link bias if you want to conserve VCP bandwidth by always forwarding egress unicast traffic on the LAG bundle out of a local link. You should not

enable local link bias if you want egress traffic load-balanced across the member links in the LAG bundle as it exits the Virtual Chassis or VCF.

- Related Documentation**
- [Configuring Local Link Bias \(CLI Procedure\) on page 98](#)

Understanding Layer 3 Subinterfaces

A Layer 3 subinterface is a logical division of a physical interface that operates at the network level and therefore can receive and forward 802.1Q VLAN tags. You can use Layer 3 subinterfaces to route traffic among multiple VLANs along a single trunk line that connects a Juniper Networks EX Series Ethernet Switch to a Layer 2 switch. Only one physical connection is required between the switches. This topology is often called a *router on a stick* or a *one-armed router* when the Layer 3 device is a router.

To create Layer 3 subinterfaces on an EX Series switch, you enable VLAN tagging, partition the physical interface into logical partitions, and bind the VLAN ID to the logical interface.

You can partition one physical interface into up to 4094 different subinterfaces, one for each VLAN. We recommend that you use the VLAN ID as the subinterface number when you configure the subinterface. Juniper Networks Junos operating system (Junos OS) reserves VLAN IDs 0 and 4095.

VLAN tagging places the VLAN ID in the frame header, allowing each physical interface to handle multiple VLANs. When you configure multiple VLANs on an interface, you must also enable tagging on that interface. Junos OS on EX Series switches supports a subset of the 802.1Q standard for receiving and forwarding routed or bridged Ethernet frames with single VLAN tags and running Virtual Router Redundancy Protocol (VRRP) over 802.1Q-tagged interfaces. Double-tagging is not supported.

- Related Documentation**
- [EX Series Switches Interfaces Overview on page 3](#)
 - [Example: Configuring Layer 3 Subinterfaces for a Distribution Switch and an Access Switch](#)
 - [Junos OS Ethernet Interfaces Configuration Guide](#)

Understanding Unicast RPF

Unicast reverse-path forwarding (RPF) helps protect the switch against denial-of-service (DoS) and distributed denial-of-service (DDoS) attacks by verifying the unicast source address of each packet that arrives on an ingress interface where unicast RPF is enabled. It also helps ensure that traffic arriving on ingress interfaces comes from a network source that the receiving interface can reach.

When you enable unicast RPF, the switch forwards a packet only if the receiving interface is the best return path to the packet's unicast source address. This is known as strict mode unicast RPF.



NOTE: On Juniper Networks EX3200, EX4200, and EX4300 Ethernet Switches, the switch applies unicast RPF *globally* to all interfaces when unicast RPF is configured on any interface. For additional information, see [“Limitations of the Unicast RPF Implementation on EX3200, EX4200, and EX4300 Switches”](#) on page 22.

This topic covers:

- [Unicast RPF for Switches Overview on page 19](#)
- [Unicast RPF Implementation on page 20](#)
- [When to Enable Unicast RPF on page 20](#)
- [When Not to Enable Unicast RPF on page 21](#)
- [Limitations of the Unicast RPF Implementation on EX3200, EX4200, and EX4300 Switches on page 22](#)

Unicast RPF for Switches Overview

Unicast RPF functions as an ingress filter that reduces the forwarding of IP packets that might be spoofing an address. By default, unicast RPF is disabled on the switch interfaces.

The type of unicast RPF provided on the switches—that is, strict mode unicast RPF is especially useful on untrusted interfaces. An untrusted interface is an interface where untrusted users or processes can place packets on the network segment.

The switch supports only the active paths method of determining the best return path back to a unicast source address. The active paths method looks up the best reverse path entry in the forwarding table. It does not consider alternate routes specified using routing-protocol-specific methods when determining the best return path.

If the forwarding table lists the receiving interface as the interface to use to forward the packet back to its unicast source, it is the best return path interface.

Use strict mode unicast RPF only on symmetrically routed interfaces. (For information about symmetrically routed interfaces, see [“When to Enable Unicast RPF”](#) on page 20.)

For more information about strict unicast RPF, see RFC 3704, *Ingress Filtering for Multihomed Networks* at <http://www.ietf.org/rfc/rfc3704.txt>.

Unicast RPF Implementation

This section includes:

- [Unicast RPF Packet Filtering on page 20](#)
- [Bootstrap Protocol \(BOOTP\) and DHCP Requests on page 20](#)
- [Default Route Handling on page 20](#)

Unicast RPF Packet Filtering

When you enable unicast RPF on the switch, the switch handles traffic in the following manner:

- If the switch receives a packet on the interface that is the best return path to the unicast source address of that packet, the switch forwards the packet.
- If the best return path from the switch to the packet's unicast source address is not the receiving interface, the switch discards the packet.
- If the switch receives a packet that has a source IP address that does not have a routing entry in the forwarding table, the switch discards the packet.

Bootstrap Protocol (BOOTP) and DHCP Requests

Bootstrap protocol (BOOTP) and DHCP request packets are sent with a broadcast MAC address and therefore the switch does not perform unicast RPF checks on them. The switch forwards all BOOTP packets and DHCP request packets without performing unicast RPF checks.

Default Route Handling


If the best return path to the source is the default route (**0.0.0.0**) and the default route points to **reject**, the switch discards the packets. If the default route points to a valid network interface, the switch performs a normal unicast RPF check on the packets.

When to Enable Unicast RPF

Enable unicast RPF when you want to ensure that traffic arriving on a network interface comes from a source that resides on a network that that interface can reach. You can enable unicast RPF on untrusted interfaces to filter spoofed packets. For example, a common application for unicast RPF is to help defend an enterprise network from DoS/DDoS attacks coming from the Internet.

Enable unicast RPF only on symmetrically routed interfaces. A symmetrically routed interface uses the same route in both directions between the source and the destination, as shown in [Figure 3 on page 21](#). Symmetrical routing means that if an interface receives a packet, the switch uses the same interface to send a reply to the packet source (the receiving interface matches the forwarding-table entry for the best return path to the source).

Figure 3: Symmetrically Routed Interfaces

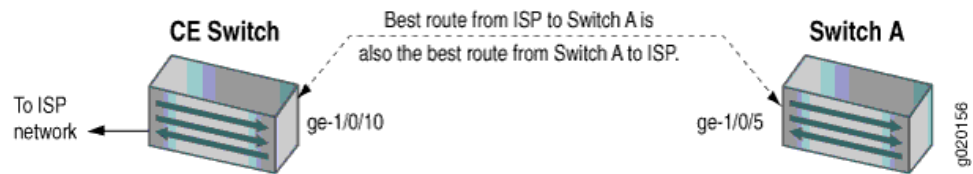

Enabling unicast RPF on asymmetrically routed interfaces (where different interfaces receive a packet and reply to its source) results in packets from legitimate sources being filtered (discarded) because the best return path is not the same interface that received the packet.

The following switch interfaces are most likely to be symmetrically routed and thus are candidates for unicast RPF enabling:

- The service provider edge to a customer
- The customer edge to a service provider
- A single access point out of the network (usually on the network perimeter)
- A terminal network that has only one link



NOTE: Because unicast RPF is enabled globally on EX3200, EX4200, and EX4300 switches, ensure that *all* interfaces are symmetrically routed before you enable unicast RPF on these switches. Enabling unicast RPF on asymmetrically routed interfaces results in packets from legitimate sources being filtered.



TIP: Enabling unicast RPF as close as possible to the traffic source stops spoofed traffic before it can proliferate or reach interfaces that do not have unicast RPF enabled.

When Not to Enable Unicast RPF


Typically, you will not enable unicast RPF if:

- Switch interfaces are multihomed.
- Switch interfaces are trusted interfaces.
- BGP is carrying prefixes and some of those prefixes are not advertised or are not accepted by the ISP under its policy. (The effect in this case is the same as filtering an interface by using an incomplete access list.)
- Switch interfaces face the network core. Core-facing interfaces are usually asymmetrically routed.

An asymmetrically routed interface uses different paths to send and receive packets between the source and the destination, as shown in [Figure 4 on page 22](#). This means

that if an interface receives a packet, that interface does not match the forwarding table entry as the best return path back to the source. If the receiving interface is not the best return path to the source of a packet, unicast RPF causes the switch to discard the packet even though it comes from a valid source.

Figure 4: Asymmetrically Routed Interfaces

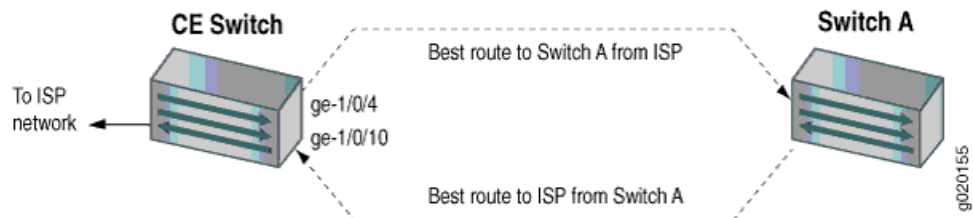

NOTE: Do not enable unicast RPF on EX3200, EX4200, and EX4300 switches if any switch interfaces are asymmetrically routed, because unicast RPF is enabled globally on all interfaces of these switches. All switch interfaces must be symmetrically routed for you to enable unicast RPF without the risk of the switch discarding traffic that you want to forward.

Limitations of the Unicast RPF Implementation on EX3200, EX4200, and EX4300 Switches

On EX3200, EX4200, and EX4300 switches, the switch implements unicast RPF on a global basis. You cannot enable unicast RPF on a per-interface basis. Unicast RPF is globally disabled by default.

- When you enable unicast RPF on any interface, it is automatically enabled on all switch interfaces, including link aggregation groups (LAGs), integrated routing and bridging (IRB) interfaces, and routed VLAN interfaces (RVIs).
- When you disable unicast RPF on the interface (or interfaces) on which you enabled unicast RPF, it is automatically disabled on all switch interfaces.



NOTE: You must explicitly disable unicast RPF on every interface on which it was explicitly enabled or unicast RPF remains enabled on all switch interfaces.

QFX switches, OCX switches, and EX3200 and EX4200 switches do not perform unicast RPF filtering on equal-cost multipath (ECMP) traffic. The unicast RPF check examines only one best return path to the packet source, but ECMP traffic employs an address block consisting of multiple paths. Using unicast RPF to filter ECMP traffic on these switches can result in the switch discarding packets that you want to forward because the unicast RPF filter does not examine the entire ECMP address block.

Related Documentation

- [Example: Configuring Unicast RPF on an EX Series Switch](#)
- [Configuring Unicast RPF \(CLI Procedure\) on page 103](#)

- [Disabling Unicast RPF \(CLI Procedure\) on page 104](#)

Understanding IP Directed Broadcast for EX Series Switches

IP directed broadcast helps you implement remote administration tasks such as backups and wake-on-LAN (WOL) application tasks by sending broadcast packets targeted at the hosts in a specified destination subnet. IP directed broadcast packets traverse the network in the same way as unicast IP packets until they reach the destination subnet. When they reach the destination subnet and IP directed broadcast is enabled on the receiving switch, the switch translates (*explodes*) the IP directed broadcast packet into a broadcast that floods the packet on the target subnet. All hosts on the target subnet receive the IP directed broadcast packet.

This topic covers:

- [IP Directed Broadcast for EX Series Switches Overview on page 23](#)
- [IP Directed Broadcast Implementation for EX Series Switches on page 23](#)
- [When to Enable IP Directed Broadcast on page 24](#)
- [When Not to Enable IP Directed Broadcast on page 24](#)

IP Directed Broadcast for EX Series Switches Overview

IP directed broadcast packets have a destination IP address that is a valid broadcast address for the subnet that is the target of the directed broadcast (the target subnet). The intent of an IP directed broadcast is to flood the target subnet with the broadcast packets without broadcasting to the entire network. IP directed broadcast packets cannot originate from the target subnet.

When you send an IP directed broadcast packet, as it travels to the target subnet, the network forwards it in the same way as it forwards a unicast packet. When the packet reaches a switch that is directly connected to the target subnet, the switch checks to see whether IP directed broadcast is enabled on the interface that is directly connected to the target subnet:

- If IP directed broadcast is enabled on that interface, the switch broadcasts the packet on that subnet by rewriting the destination IP address as the configured broadcast IP address for the subnet. The switch converts the packet to a link-layer broadcast packet that every host on the network processes.
- If IP directed broadcast is disabled on the interface that is directly connected to the target subnet, the switch drops the packet.

IP Directed Broadcast Implementation for EX Series Switches

You configure IP directed broadcast on a per-subnet basis by enabling IP directed broadcast on the Layer 3 interface of the subnet's VLAN. When the switch that is connected to that subnet receives a packet that has the subnet's broadcast IP address as the destination address, the switch broadcasts the packet to all hosts on the subnet.

By default, IP directed broadcast is disabled.

When to Enable IP Directed Broadcast

IP directed broadcast is disabled by default. Enable IP directed broadcast when you want to perform remote management or administration services such as backups or WOL tasks on hosts in a subnet that does not have a direct connection to the Internet.

Enabling IP directed broadcast on a subnet affects only the hosts within that subnet. Only packets received on the subnet's Layer 3 interface that have the subnet's broadcast IP address as the destination address are flooded on the subnet.

When Not to Enable IP Directed Broadcast

Typically, you do not enable IP directed broadcast on subnets that have direct connections to the Internet. Disabling IP directed broadcast on a subnet's Layer 3 interface affects only that subnet. If you disable IP directed broadcast on a subnet and a packet that has the broadcast IP address of that subnet arrives at the switch, the switch drops the broadcast packet.

If a subnet has a direct connection to the Internet, enabling IP directed broadcast on it increases the network's susceptibility to denial-of-service (DoS) attacks.

For example, a malicious attacker can spoof a source IP address (use a source IP address that is not the actual source of the transmission to deceive a network into identifying the attacker as a legitimate source) and send IP directed broadcasts containing Internet Control Message Protocol (ICMP) echo (ping) packets. When the hosts on the network with IP directed broadcast enabled receive the ICMP echo packets, they all send replies to the victim that has the spoofed source IP address. This creates a flood of ping replies in a DoS attack that can overwhelm the spoofed source address; this is known as a *smurf* attack. Another common DoS attack on exposed networks with IP directed broadcast enabled is a *fraggle* attack, which is similar to a smurf attack except that the malicious packet is a User Datagram Protocol (UDP) echo packet instead of an ICMP echo packet.

Related Documentation

- [Example: Configuring IP Directed Broadcast on an EX Series Switch](#)
- [Configuring IP Directed Broadcast \(CLI Procedure\)](#)
- [Configuring IP Directed Broadcast \(CLI Procedure\) on page 105](#)

Understanding Interface Ranges on EX Series Switches



NOTE: This concept uses Junos OS for EX Series switches with support for the Enhanced Layer 2 Software (ELS) configuration style. If your switch runs software that does not support ELS, see *Understanding Interface Ranges on EX Series Switches*. For ELS details, see *Getting Started with Enhanced Layer 2 Software*.

You can use the interface ranges to group interfaces of the same type that share a common configuration profile. This helps reduce the time and effort in configuring

interfaces on Juniper Networks EX Series Ethernet Switches. The configurations common to all the interfaces can be included in the interface range definition.

The interface range definition contains the name of the interface range defined, the names of the individual member interfaces that do not fall in a series of interfaces, a range of interfaces defined in the member range, and the configuration statements common to all the interfaces. An interface range defined with member ranges and individual members but without any common configurations, is also a valid definition.



NOTE: The interface range definition is supported only for Gigabit, 10-Gigabit, 40-Gigabit, and Fast Ethernet interfaces.

The common configurations defined in the interface range will be overridden by the local configuration.

The defined interface ranges can be used at places where the **interface** node is used in the following configuration hierarchies:

- forwarding-options analyzer *name* input egress interface
- forwarding-options analyzer *name* input ingress interface
- poe interface
- protocols dot1x authenticator interface
- protocols igmp interface
- protocols isis interface
- protocols layer2-control bpdu-block interface
- protocols link-management peer *name* lmp-control-channel
- protocols link-management te-link *name* interface
- protocols lldp interface
- protocols lldp-med interface
- protocols mstp interface
- protocols oam ethernet link-fault-management interface
- protocols ospf area *area-id* interface
- protocols pim interface
- protocols router-advertisement interface
- protocols router-discovery interface
- protocols rsvp interface
- protocols sflow interfaces
- protocols vstp vlan *vlan-id* interface

- [switch-options redundant-trunk-group *group-name* interface](#)
- [switch-options voip interface](#)

**Related
Documentation**

- [Interface Ranges on page 68](#)
- [EX Series Switches Interfaces Overview on page 3](#)
- [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\) on page 32](#)
- [Configuring Aggregated Ethernet Links \(CLI Procedure\) on page 84](#)
- [Configuring a Layer 3 Subinterface \(CLI Procedure\) on page 102](#)
- [interface-range on page 205](#)

802.1Q VLANs Overview

For Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet interfaces supporting VPLS, the Junos OS supports a subset of the IEEE 802.1Q standard for channelizing an Ethernet interface into multiple logical interfaces, allowing many hosts to be connected to the same Gigabit Ethernet switch, but preventing them from being in the same routing or bridging domain.

**Related
Documentation**

- [Configuring Dynamic 802.1Q VLANs](#)
- [802.1Q VLAN IDs and Ethernet Interface Types](#)
- [Enabling VLAN Tagging](#)
- [Binding VLAN IDs to Logical Interfaces](#)
- [Configuring VLAN Encapsulation](#)
- [Configuring Extended VLAN Encapsulation](#)
- [Guidelines for Configuring VLAN ID List-Bundled Logical Interfaces That Connect CCCs](#)
- [Configuring a Layer 2 VPN Routing Instance on a VLAN-Bundled Logical Interface](#)
- [Configuring a VLAN-Bundled Logical Interface to Support a Layer 2 VPN Routing Instance](#)
- [Specifying the Interface Over Which VPN Traffic Travels to the CE Router](#)
- [Specifying the Interface to Handle Traffic for a CCC](#)
- [Configuring a Layer 2 Circuit on a VLAN-Bundled Logical Interface](#)
- [Configuring a VLAN-Bundled Logical Interface to Support a Layer 2 VPN Routing Instance](#)
- [Specifying the Interface to Handle Traffic for a CCC Connected to the Layer 2 Circuit](#)
- [Example: Configuring a Layer 2 VPN Routing Instance on a VLAN-Bundled Logical Interface](#)
- [Example: Configuring a Layer 2 Circuit on a VLAN-Bundled Logical Interface](#)
- [Configuring a Logical Interface for Access Mode](#)
- [Configuring a Logical Interface for Trunk Mode](#)
- [Configuring the VLAN ID List for a Trunk Interface](#)

- *Configuring a Trunk Interface on a Bridge Network*
- *Ethernet Interfaces Feature Guide for Routing Devices*

PART 2

Configuration

- [Configuration Tasks on page 31](#)
- [Configuration Statements on page 109](#)

CHAPTER 2

Configuration Tasks

- [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\) on page 32](#)
- [Configuring Gigabit Ethernet Interfaces \(J-Web Procedure\) on page 35](#)
- [Port Role Configuration with the J-Web Interface \(with CLI References\) on page 41](#)
- [Adding a Logical Unit Description to the Configuration on page 45](#)
- [Disabling a Physical Interface on page 46](#)
- [Disabling a Logical Interface on page 47](#)
- [Configuring Flow Control on page 48](#)
- [Configuring the Interface Address on page 48](#)
- [Configuring the Interface Bandwidth on page 53](#)
- [Configuring the Media MTU on page 54](#)
- [Setting the Protocol MTU on page 67](#)
- [Interface Ranges on page 68](#)
- [Configuring Accounting for the Physical Interface on page 76](#)
- [Configuring Accounting for the Logical Interface on page 77](#)
- [Configuring Ethernet Loopback Capability on page 79](#)
- [Configuring Gratuitous ARP on page 79](#)
- [Configuring Static ARP Table Entries on page 80](#)
- [Disabling the Transmission of Redirect Messages on an Interface on page 82](#)
- [Configuring Restricted and Unrestricted Proxy ARP on page 82](#)
- [Enabling or Disabling SNMP Notifications on Logical Interfaces on page 83](#)
- [Configuring Aggregated Ethernet Links \(CLI Procedure\) on page 84](#)
- [Configuring Aggregated Ethernet Interfaces \(J-Web Procedure\) on page 85](#)
- [Configuring Aggregated Ethernet LACP \(CLI Procedure\) on page 88](#)
- [Configuring LACP Link Protection of Aggregated Ethernet Interfaces \(CLI Procedure\) on page 89](#)
- [Configuring Aggregated Ethernet Link Protection on page 93](#)
- [Configuring Aggregated Ethernet Link Speed on page 95](#)
- [Configuring Aggregated Ethernet Minimum Links on page 96](#)

- [Configuring Energy Efficient Ethernet on Interfaces \(CLI Procedure\) on page 97](#)
- [Configuring Local Link Bias \(CLI Procedure\) on page 98](#)
- [Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic \(CLI Procedure\) on page 100](#)
- [Configuring Tagged Aggregated Ethernet Interfaces on page 101](#)
- [Configuring a Layer 3 Subinterface \(CLI Procedure\) on page 102](#)
- [Configuring Unicast RPF \(CLI Procedure\) on page 103](#)
- [Disabling Unicast RPF \(CLI Procedure\) on page 104](#)
- [Configuring IP Directed Broadcast \(CLI Procedure\) on page 105](#)
- [Tracing Operations of an Individual Router or Switch Interface on page 106](#)
- [Tracing Operations of the Interface Process on page 106](#)

Configuring Gigabit Ethernet Interfaces (CLI Procedure)



NOTE: This task uses Junos OS for EX Series switches with support for the Enhanced Layer 2 Software (ELS) configuration style. If your switch runs software that does not support ELS, see *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*. For ELS details, see *Getting Started with Enhanced Layer 2 Software*.

An Ethernet interface must be configured for optimal performance in a high-traffic network. EX Series switches include a factory default configuration that:

- Enables all the network interfaces on the switch
- Sets a default interface mode (access)
- Sets default link settings
- Specifies a logical unit (**unit 0**) and assigns it to **family ethernet-switching** (except on EX8200 switches and Virtual Chassis)
- Specifies Rapid Spanning Tree Protocol (RSTP) and Link Layer Discovery Protocol (LLDP)

This topic describes:

- [Configuring VLAN Options and Interface Mode on page 32](#)
- [Configuring the Link Settings on page 33](#)
- [Configuring the IP Options on page 34](#)

Configuring VLAN Options and Interface Mode

By default, when you boot a switch and use the factory default configuration, or when you boot the switch and do not explicitly configure a port mode, all interfaces on the switch are in access mode and accept only untagged packets from the VLAN named **default**. You can optionally configure another VLAN and use that instead of **default**. You

can also configure a port to accept untagged packets from the user-configured VLAN. For details on this concept (native VLAN), see *Understanding Bridging and VLANs on EX Series Switches*.

If you are connecting either a desktop phone, wireless access point or a security camera to a Power over Ethernet (PoE) port, you can configure some parameters for the PoE interface. PoE interfaces are enabled by default. For detailed information about PoE settings, see *Configuring PoE on EX Series Switches (CLI Procedure)*.

If you are connecting a device to other switches and to routers on the LAN, you need to assign the interface to a logical port and configure the logical port as a trunk port. See [“Port Role Configuration with the J-Web Interface \(with CLI References\)” on page 41](#) for more information about port configuration.

If you are connecting to a server that contains virtual machines and a VEPA for packet aggregation from those virtual machines, configure the port as a tagged-access port. See *Understanding Bridging and VLANs on EX Series Switches* for more information about tagged access.

To configure a 1-Gigabit, 10-Gigabit, or 40-Gigabit Ethernet interface for trunk port mode:

```
[edit]
user@switch# set interfaces interface-name unit logical-unit-number family ethernet-switching
interface-mode trunk
```

Configuring the Link Settings

EX Series switches include a factory default configuration that enables interfaces with the link settings provided in [Table 10 on page 33](#).

Table 10: Factory Default Configuration Link Settings for EX Series Switches

Ethernet Interface	Autonegotiation	Flow Control	Link Mode	Link Speed
1 gigabit	Enabled	Enabled	Autonegotiation (full duplex or half duplex)	Autonegotiation (10 Mbps, 100 Mbps, or 1 Gbps)
10 gigabit (using a DAC cable)	Enabled	Enabled	Full duplex	10 Gbps
10 gigabit (using a fiber-optic cable)	Disabled	Enabled	Full duplex	10 Gbps
40 gigabit (using a DAC cable)	Enabled	Enabled	Full duplex	40 Gbps
40 gigabit (using a fiber-optic cable)	Disabled	Enabled	Full duplex	40 Gbps



NOTE: On EX4300 switches, the interfaces operate in full duplex mode only.

To configure the link mode and speed settings for a 1-Gigabit, 10-Gigabit, or 40-Gigabit Ethernet interface:

```
[edit]
user@switch# set interfaces interface-name
```

To configure additional link settings for a 1-Gigabit, 10-Gigabit, or 40-Gigabit Ethernet interface:

```
[edit]
user@switch# set interfaces interface-name ether-options
```

For detailed information about the FPC, PIC, and port numbers used for EX Series switches, see [“Understanding Interface Naming Conventions on EX Series Switches” on page 6](#).

Configurable link settings include:

- **802.3ad**—Specify an aggregated Ethernet bundle. See [“Configuring Aggregated Ethernet Links \(CLI Procedure\)” on page 84](#).
- **auto-negotiation**—Enable or disable autonegotiation of flow control, link mode, and speed.
- **flow-control**—Enable or disable flow control.
- **link-mode**—Specify full duplex, half duplex, or autonegotiation. On EX4300 switches, the interfaces operate in full duplex mode only.
- **loopback**—Enable or disable loopback mode.
- **speed**—Specify 10 Mbps, 100 Mbps, 1 Gbps, or autonegotiation.

Configuring the IP Options

To specify an IP address for the logical unit using IPv4:

```
[edit]
user@switch# set interfaces interface-name unit logical-unit-number family inet address ip-address
```

To specify an IP address for the logical unit using IPv6:

```
[edit]
user@switch# set interfaces interface-name unit logical-unit-number family inet6 address ip-address
```



NOTE: Access interfaces on EX4300 switches are set to family ethernet-switching by default. You might have to delete this or any other user-configured family setting before changing the setting to family inet or family inet6.

Related Documentation

- [Configuring Gigabit Ethernet Interfaces \(J-Web Procedure\) on page 35](#)
- [Monitoring Interface Status and Traffic on page 255](#)

- [show interfaces ge- on page 299](#)
- [show interfaces xe- on page 333](#)
- [Understanding Interface Naming Conventions on EX Series Switches on page 6](#)

Configuring Gigabit Ethernet Interfaces (J-Web Procedure)

You can configure specific properties on your Ethernet interface to ensure optimal performance of your network in a high-traffic environment.

To configure properties on a Gigabit Ethernet interface, a 10-Gigabit Ethernet interface, and a 40-Gigabit Ethernet interface on an EX Series switch:

1. Select **Interfaces > Ports**.

The page that is displayed lists Gigabit Ethernet, 10-Gigabit Ethernet interfaces, and 40-Gigabit Ethernet interfaces, and their link statuses.



NOTE: After you make changes to the configuration on this page, you must commit the changes immediately for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See *Using the Commit Options to Commit Configuration Changes (J-Web Procedure)* for details about all commit options.

2. Select the interface you want to configure. For an EX8200 Virtual Chassis configuration, select the member and the FPC slot if the interface you want to configure is not listed under **Ports** in the top table on the page.

Details for the selected interface, such as administrative status, link status, speed, duplex, and flow control, are displayed in the **Details of port** table on the page.



NOTE: You can select multiple interfaces and modify their settings at the same time. However, while doing this, you cannot modify the IP address or enable or disable the administrative status of the selected interfaces.



NOTE: In the J-Web interface, you cannot configure interface ranges and interface groups.

3. Click **Edit** and select the set of options you want to configure first:

- Port Role—Enables you to assign a profile for the selected interface.



NOTE: When you select a particular port role, preconfigured port security parameters are set for the VLAN that the interface belongs to. For example, if you select the port role **Desktop**, the port security options **examine-dhcp** and **arp-inspection** are enabled on the VLAN that the interface belongs to. If there are interfaces in the VLAN that have static IP addresses, those interfaces might lose connectivity because those static IP addresses might not be present in the DHCP pool. Therefore, when you select a port role, ensure that the corresponding port security settings for the VLAN are applicable to the interface.

For basic information about port security features such as DHCP snooping (CLI option **examine-dhcp**) or dynamic ARP inspection (DAI) (CLI option **arp-inspection**), see *Configuring Port Security (J-Web Procedure)*. For detailed descriptions of port security features, see the Port Security topics in the EX Series documentation at <http://www.juniper.net/techpubs/>.

Click **Details** to view the configuration parameters for the selected port role.

- VLAN—Enables you to configure VLAN options for the selected interface.
 - Link—Enables you to modify the following link options for the selected interface:
 - Speed
 - MTU
 - Autonegotiation
 - Flow Control
 - Duplex
 - Media Type
 - IP—Enables you to configure an IP address for the interface.
4. Configure the interface by configuring options in the selected option set. See [Table 11 on page 37](#) for details of the options.
 5. Repeat Steps 3 and 4 for the remaining option sets that you want to configure for the interface.



NOTE: To enable or disable the administrative status of a selected interface, click **Enable Port** or **Disable Port**.

Table 11: Port Edit Options

Field	Function	Your Action
Port Role Options		
Port Role	<p>Specifies a profile (role) to assign to the interface.</p> <p>NOTE: After a port role is configured on the interface, you cannot specify VLAN options or IP options.</p> <p>NOTE: Port roles are not supported by the <code>et</code> interfaces (40-Gigabit Ethernet interfaces) on EX4300 and EX4550 switches.</p> <p>NOTE: Only the following port roles can be applied on EX8200 switch interfaces:</p> <ul style="list-style-type: none"> • Default • Layer 2 uplink • Routed uplink 	
Default	<p>Applies the default role.</p> <p>The interface family is set to ethernet-switching, port mode is set to access, and RSTP is enabled.</p>	<ol style="list-style-type: none"> 1. Click Details to view CLI commands for this role. 2. Click OK.
Desktop	<p>Applies the desktop role.</p> <p>The interface family is set to ethernet-switching, port mode is set to access, RSTP is enabled with the edge and point-to-point options, and port security parameters (MAC limit =1; dynamic ARP inspection and DHCP snooping enabled) are set.</p>	<ol style="list-style-type: none"> 1. Select an existing VLAN configuration or type the name of a new VLAN configuration to be associated with the interface. 2. Click Details to view CLI commands for this role. 3. Click OK.
Desktop and Phone	<p>Applies the desktop and phone role.</p> <p>The interface family is set to ethernet-switching, port mode is set to access, port security parameters (MAC limit =1; dynamic ARP Inspection and DHCP snooping enabled) are set, and recommended class-of-service (CoS) parameters are specified for forwarding classes, schedulers, and classifiers. See Table 12 on page 40 for more CoS information.</p>	<ol style="list-style-type: none"> 1. Select an existing VLAN configuration or type the name of a new VLAN configuration to be associated with the interface. <p>You can also select an existing VoIP VLAN configuration or a new VoIP VLAN configuration to be associated with the interface.</p> <p>NOTE: VoIP is not supported on EX8200 switches.</p> <ol style="list-style-type: none"> 2. Click Details to view CLI commands for this role. 3. Click OK.
Wireless Access Point	<p>Applies the wireless access point role.</p> <p>The interface family is set to ethernet-switching, port mode is set to access, and RSTP is enabled with the edge and point-to-point options.</p>	<ol style="list-style-type: none"> 1. Select an existing VLAN configuration or type the name of a new VLAN configuration to be associated with the interface. Type the VLAN ID for a new VLAN. 2. Click Details to view CLI commands for this role. 3. Click OK.

Table 11: Port Edit Options (*continued*)

Field	Function	Your Action
Routed Uplink	<p>Applies the routed uplink role.</p> <p>The interface family is set to inet, and recommended CoS parameters are set for schedulers and classifiers. See Table 12 on page 40 for more CoS information.</p>	<p>To specify an IPv4 address:</p> <ol style="list-style-type: none"> 1. Select the IPv4 address check box. 2. Type an IP address—for example: 10.10.10.10. 3. Enter the subnet mask or address prefix. For example, 24 bits represents 255.255.255.0. 4. Click OK. <p>To specify an IPv6 address:</p> <ol style="list-style-type: none"> 1. Select the IPv6 address check box. 2. Type an IP address—for example: 2001:ab8:85a3::8a2e:370:7334. 3. Enter the subnet mask or address prefix. 4. Click OK. <p>NOTE: IPv6 is not supported on EX2200 VC switches.</p>
Layer 2 Uplink	<p>Applies the Layer 2 uplink role.</p> <p>The interface family is set to ethernet-switching, port mode is set to trunk, RSTP is enabled with the point-to-point option, and trusted DHCP is configured for port security.</p>	<ol style="list-style-type: none"> 1. For this port role, you can select a VLAN member and associate a native VLAN with the interface. 2. Click Details to view CLI commands for this role. 3. Click OK.
None	Specifies that no port role is configured for the selected interface.	
NOTE: For an EX8200 switch, dynamic ARP inspection and DHCP snooping parameters are not configured.		
VLAN Options		

Table 11: Port Edit Options (*continued*)

Field	Function	Your Action
Port Mode	Specifies the mode of operation for the interface: trunk or access.	<p>If you select Trunk, you can:</p> <ol style="list-style-type: none"> 1. Click Add to add a VLAN member. 2. Select the VLAN and click OK. 3. (Optional) Associate a native VLAN with the interface. 4. Click OK. <p>If you select Access, you can:</p> <ol style="list-style-type: none"> 1. Select the VLAN member to be associated with the interface. 2. (Optional) Associate a VoIP VLAN with the interface. Only a VLAN with a VLAN ID can be associated as a VoIP VLAN. <p>NOTE: VoIP is not supported on EX8200 switches.</p> <ol style="list-style-type: none"> 3. Click OK.
Link Options		
MTU (bytes)	Specifies the maximum transmission unit size (MTU) for the interface.	Type a value from 256 through 9216 . The default MTU size for Gigabit Ethernet interfaces is 1514 .
Speed	Specifies the speed for the mode.	<p>Select one of the following values: 10 Mbps, 100 Mbps, 1000 Mbps, or Auto-Negotiation.</p> <p>NOTE: EX4300 switches supports Auto-Negotiation 10M-100M apart from the values mentioned above.</p>
Duplex	Specifies the link mode.	<p>Select one: automatic, half, or full.</p> <p>NOTE: Link mode half is not supported on EX4300 switches.</p>
Description	<p>Describes the link.</p> <p>NOTE: If the interface is part of a link aggregation group (LAG), only the Description option is enabled. Other Port Edit options are unavailable.</p>	Enter a brief description for the link.
Enable Auto Negotiation	Enables or disables autonegotiation.	Select the check box to enable autonegotiation, or clear the check box to disable it. By default, autonegotiation is enabled.
Enable Flow Control	Enables or disables flow control.	Select the check box to enable flow control to regulate the amount of traffic sent out of the interface, or clear the check box to disable flow control and permit unrestricted traffic. Flow control is enabled by default.

Table 11: Port Edit Options (*continued*)

Field	Function	Your Action
Media Type	Specifies the media type selected.	Select the check box to enable the media type. Then select Copper or Fiber .
IP Options		
IPv4 Address	Specifies an IPv4 address for the interface. <i>NOTE:</i> If the IPv4 Address check box is cleared, the interface still belongs to the inet family.	<ol style="list-style-type: none"> 1. Select the IPv4 address check box to specify an IPv4 address. 2. Type an IP address—for example: 10.10.10.10. 3. Enter the subnet mask or address prefix. For example, 24 bits represents 255.255.255.0. 4. Click OK.
IPv6 Address	Specifies an IPv6 address for the interface. <i>NOTE:</i> If the IPv6 Address check box is cleared, the interface still belongs to the inet family.	<ol style="list-style-type: none"> 1. Select the IPv6 address check box to specify an IPv6 address. 2. Type an IP address—for example: 2001:ab8:85a3::8a2e:370:7334. 3. Enter the subnet mask or address prefix. 4. Click OK. <p><i>NOTE:</i> IPv6 address is not supported on EX2200 and EX4500 switches.</p>

Table 12: Recommended CoS Settings for Port Roles

CoS Parameter	Recommended Settings
Forwarding Classes	<p>There are four forwarding classes:</p> <ul style="list-style-type: none"> • voice—Queue number is set to 7. • expedited-forwarding—Queue number is set to 5. • assured-forwarding—Queue number is set to 1. • best-effort—Queue number is set to 0.
Schedulers	<p>The schedulers and their settings are:</p> <ul style="list-style-type: none"> • Strict-priority—Transmission rate is set to 10 percent and buffer size to 5 percent. • Expedited-scheduler—Transmission rate is set to 30 percent, buffer size to 30 percent, and priority to low. • Assured-scheduler—Transmission rate is set to 25 percent, buffer size to 25 percent, and priority to low. • Best-effort scheduler—Transmission rate is set to 35 percent, buffer size to 40 percent, and priority to low.
Scheduler maps	When a desktop and phone, routed uplink, or Layer 2 uplink role is applied on an interface, the forwarding classes and schedulers are mapped using the scheduler map.
ieee-802.1 classifier	Imports the default ieee-802.1 classifier configuration and sets the loss priority to low for the code point 101 for the voice forwarding class.

Table 12: Recommended CoS Settings for Port Roles (*continued*)

CoS Parameter	Recommended Settings
dscp classifier	Imports the default dscp classifier configuration and sets the loss priority to low for the code point 101110 for the voice forwarding class.
Related Documentation	<ul style="list-style-type: none"> • Configuring Gigabit Ethernet Interfaces (CLI Procedure) • Configuring Gigabit Ethernet Interfaces (CLI Procedure) on page 32 • Monitoring Interface Status and Traffic on page 255 • EX Series Switches Interfaces Overview on page 3 • Junos OS CoS for EX Series Switches Overview • Understanding Interface Naming Conventions on EX Series Switches on page 6

Port Role Configuration with the J-Web Interface (with CLI References)

When you configure Gigabit Ethernet interface properties with the J-Web interface (Configure > Interfaces) you can optionally select pre-configured port roles for those interfaces. When you select a role from the **Port Role** field and apply it to a port, the J-Web interface modifies the switch configuration using CLI commands. [Table 13 on page 41](#) lists the CLI commands applied for each port role.



NOTE: If there is an existing port role configuration, it is cleared before the new port role configuration is applied.

Table 13: Port Role Configuration Summary

Configuration Description	CLI Commands
Default Port Role	
Set the port role to Default .	<code>set interfaces <i>interface</i> apply-macro juniper-port-profile Default</code>
Set port family to ethernet-switching .	<code>set interfaces <i>interface</i> unit 0 family ethernet-switching</code>
Set port mode to access .	<code>port-mode access</code>
Enable RSTP if redundant trunk groups are not configured.	<code>delete protocols rstp interface <i>interface</i> disable</code>
Disable RSTP if redundant trunk groups are configured.	<code>set protocols rstp interface <i>interface</i> disable</code>
Desktop Port Role	

Table 13: Port Role Configuration Summary (*continued*)

Configuration Description	CLI Commands
Set the port role to desktop.	<code>set interfaces <i>interface</i> apply-macro juniper-port-profile Desktop</code>
Set VLAN if new VLAN is specified.	<code>set vlans <<i>vlan name</i>> vlan-id <<i>vlan-id</i>></code>
Set port family to ethernet-switching . Set Port Mode to Access .	<code>set interfaces <i>interface</i> unit 0 family ethernet-switching port-mode access</code>
Set VLAN if new VLAN is specified.	<code>set interfaces <i>interface</i> unit 0 family ethernet-switching vlan members <i>vlan-members</i></code>
Set port security parameters.	<code>set ethernet-switching-options secure-access-port vlan MacTest arp-inspection</code>
Set RSTP protocol with edge option.	<code>set protocols rstp interface <i>interface</i> edge</code>
RSTP protocol is disabled if redundant trunk groups are configured.	<code>set protocols rstp interface <i>interface</i> disable</code>
Desktop and Phone Port Role	
Set the port role to desktop and phone.	<code>set interfaces <i>interface</i> apply-macro juniper-port-profile Desktop and Phone</code>
Set data VLAN if new VLAN is specified. Set voice VLAN if new voice VLAN is specified.	<code>set vlans <i>vlan-name</i> vlan-id <i>vlan id</i></code>
Set port family to ethernet-switching . Set Port Mode to access .	<code>set interfaces <i>interface</i> unit 0 family ethernet-switching port-mode access</code>
Set data VLAN on port stanza.	<code>set interfaces <i>interface</i> unit 0 family ethernet-switching vlan members <i>vlan-members</i></code>
Set port security parameters.	<code>set ethernet-switching-options secure-access-port vlan MacTest arp-inspection</code>
Set VOIP VLAN.	<code>set ethernet-switching-options voip interface <i>interface</i>.0 vlan <i>vlan</i> <i>vlan name</i></code>
Set class of service parameters SCHEDULER_MAP=juniper-port-profile-map IEEE_CLASSIFIER=juniper-ieee-classifier DSCP_CLASSIFIER=juniper-dscp-classifier	<code>set class-of-service interfaces <i>interfaces</i> scheduler-map juniper-port-profile-map set class-of-service interfaces <i>interface</i> unit 0 classifiers ieee-802.1 juniper_ieee_classifier set class-of-service interfaces <i>interface</i> unit 0 classifiers dscp juniper-dscp-classifier</code>
Set CoS Configuration	Refer Table 14 on page 44 for details.
Wireless Access Point Port Role	
Set the port role to wireless access point.	<code>set interfaces <i>interface</i> apply-macro juniper-port-profile Wireless Access Point</code>

Table 13: Port Role Configuration Summary (*continued*)

Configuration Description	CLI Commands
Set VLAN on VLANs stanza.	<code>set vlans <i>vlan name</i> vlan-id <i>vlan-id</i></code>
Set port family to ethernet-switching Set port mode to Access .	<code>set interfaces <i>interface</i> unit 0 family ethernet-switching port-mode access</code>
Set VLAN on port stanza.	<code>set interfaces <i>interface</i> unit 0 family ethernet-switching vlan members <i>vlan-members</i></code>
Set RSTP protocol with edge option.	<code>set protocols rstp interface <i>interface</i> edge</code>
RSTP protocol is disabled if redundant trunk groups are configured.	<code>set protocols rstp interface <i>interface</i> disable</code>
Routed Uplink Port Role	
Set the port role to Routed Uplink.	<code>set interfaces <i>interface</i> apply-macro juniper-port-profile Routed Uplink</code>
Set port family to inet . Set IP address on the port.	<code>set interfaces <i>interface</i> unit 0 family inet address <i>ipaddress</i></code>
Set class-of-service parameters SCHEDULER_MAP= <code>juniper-port-profile-map</code> IEEE_CLASSIFIER= <code>juniper-ieee-classifier</code> DSCP_CLASSIFIER= <code>juniper-dscp-classifier</code>	<code>set class-of-service interfaces <i>interfaces</i> scheduler-map juniper-port-profile-map set class-of-service interfaces <i>interface</i> unit 0 classifiers ieee-802.1 juniper_ieee_classifier set class-of-service interfaces <i>interface</i> unit 0 classifiers dscp juniper-dscp-classifier</code>
Set CoS configuration	Refer Table 14 on page 44 for details.
Layer 2 Uplink Port Role	
Set the port role to Layer 2 Uplink .	<code>set interfaces <i>interface</i> apply-macro juniper-port-profile Layer2 Uplink</code>
Set port family to ethernet-switching Set port mode to trunk .	<code>set interfaces <i>interface</i> unit 0 family ethernet-switching port-mode trunk</code>
Set Native VLAN name.	<code>set interfaces <i>interface</i> unit 0 family ethernet-switching native-vlan-id <i>vlan-name</i></code>
Set the port as part of all valid VLANs; "valid" refers to all VLANs except native VLAN and voice VLANs.	<code>set interfaces <i>interface</i> unit 0 family ethernet-switching vlan members <i>vlan-members</i></code>
Set port security parameter.	<code>set ethernet-switching-options secure-access-port dhcp-trusted</code>
Set RSTP protocol with point-to-point option.	<code>set protocols rstp interface <i>interface</i> mode point-to-point</code>
Disable RSTP if redundant trunk groups are configured.	<code>set protocols rstp interface <i>interface</i> disable</code>

Table 13: Port Role Configuration Summary (*continued*)

Configuration Description	CLI Commands
Set class-of-service parameters. SCHEDULER_MAP =juniper-port-profile-map IEEE_CLASSIFIER =juniper_ieee_classifier DSCP_CLASSIFIER =juniper_dscp_classifier	set class-of-service interfaces <i>interfaces</i> scheduler-map juniper-port-profile-map set class-of-service interfaces <i>interface</i> unit 0 classifiers ieee-802.1 juniper_ieee_classifier set class-of-service interfaces <i>interface</i> unit 0 classifiers dscp juniper-dscp-classifier
Set CoS configuration	Refer to Table 14 on page 44 for details.

[Table 14 on page 44](#) lists the CLI commands for the recommended CoS settings that are committed when the CoS configuration is set.

Table 14: Recommended CoS Settings for Port Roles

CoS Parameter	CLI Command
Forwarding Classes	
voice	set class-of-service forwarding-classes class voice queue-num 7
expedited-forwarding	set class-of-service forwarding-classes class expedited-forwarding queue-num 5
assured-forwarding	set class-of-service forwarding-classes class assured-forwarding queue-num 1
best-effort	set class-of-service forwarding-classes class best-effort queue-num 0
Schedulers	
strict-priority-scheduler	<p>The CLI commands are:</p> <ul style="list-style-type: none"> set class-of-service schedulers strict-priority-scheduler transmit-rate percent 10 set class-of-service schedulers strict-priority-scheduler buffer-size percent 5 set class-of-service schedulers strict-priority-scheduler priority strict-high
expedited-scheduler	<p>The CLI commands are:</p> <ul style="list-style-type: none"> set class-of-service schedulers expedited-scheduler transmit-rate percent 30 set class-of-service schedulers expedited-scheduler buffer-size percent 30 set class-of-service schedulers expedited-scheduler priority low
assured-scheduler	<p>The CLI commands are:</p> <pre>set class-of-service schedulers assured-scheduler transmit-rate percent 25 set class-of-service schedulers strict-priority-scheduler buffer-size percent 25 set class-of-service schedulers strict-priority-scheduler priority low</pre>

Table 14: Recommended CoS Settings for Port Roles (*continued*)

CoS Parameter	CLI Command
best-effort-scheduler	<p>The CLI commands are:</p> <pre>set class-of-service schedulers best-effort-scheduler transmit-rate percent 35 set class-of-service schedulers best-effort-scheduler buffer-size percent 40 set class-of-service schedulers best-effort-scheduler priority low</pre>
Classifiers	<p>The classifiers are:</p> <pre>set class-of-service classifiers ieee-802.1 juniper_ieee_classifier import default forwarding-class voice loss-priority low code-points 101 set class-of-service classifiers dscp juniper_dscp_classifier import default forwarding-class voice loss-priority low code-points 101110</pre>

- Related Documentation**
- [Configuring Gigabit Ethernet Interfaces \(J-Web Procedure\) on page 35](#)
 - [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\)](#)
 - [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\) on page 32](#)

Adding a Logical Unit Description to the Configuration

You can include a text description of each logical unit in the configuration file. Any descriptive text you include is displayed in the output of the **show interfaces** commands, and is also exposed in the **ifAlias** Management Information Base (MIB) object. It has no impact on the interface's configuration. To add a text description, include the **description** statement:

description *text*;

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

The description can be a single line of text. If the text contains spaces, enclose it in quotation marks.



NOTE: You can configure the extended DHCP relay to include the interface description in the option 82 Agent Circuit ID suboption. See “*Using DHCP Relay Agent Option 82 Information*” in the *Junos OS Subscriber Management and Services Library*.

For information about describing physical interfaces, see *Configuring Interface Description*.

Disabling a Physical Interface

You can disable a physical interface, marking it as being down, without removing the interface configuration statements from the configuration. To do this, include the **disable** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
disable;
```



CAUTION: Dynamic subscribers and logical interfaces use physical interfaces for connection to the network. The Junos OS allows you to set the interface to disable and commit the change while dynamic subscribers and logical interfaces are still active. This action results in the loss of all subscriber connections on the interface. Use care when disabling interfaces.



NOTE: On the router, when you use the disable statement at the edit interfaces hierarchy level, depending on the PIC type, the interface might or might not turn off the laser. Older PIC transceivers do not support turning off the laser, but newer Gigabit Ethernet PICs with SFP and XFP transceivers do support it and the laser will be turned off when the interface is disabled.

Table 15: Effect of set interfaces disable <interface_name> on T series PICs

PIC Model Number	PIC Description	Type of PIC	Behaviour
PF-12XGE-SFPP	10-Gigabit Ethernet LAN/WAN PIC with SFP+ (T4000 Router)	5	Tx laser disabled
PF-24XGE-SFPP	10-Gigabit Ethernet LAN/WAN PIC with Oversubscription and SFP+ (T4000 Router)	5	Tx laser disabled
PF-1CGE-CFP	100-Gigabit Ethernet PIC with CFP (T4000 Router)	5	Tx laser disabled
PD-4XGE-XFP	10-Gigabit Ethernet, 4-port LAN/WAN XFP	4	Tx laser disabled
PD-5-10XGE-SFPP	10-Gigabit LAN/WAN with SFP+	4	Tx laser disabled
PD-1XLE-CFP	40-Gigabit with CFP	4	Tx laser disabled
PD-1CE-CFP-FPC4	100-Gigabit with CFP	4	Tx laser disabled
PD-TUNNEL	40-Gigabit Tunnel Services	4	NA
PD-4OC192-SON-XFP	OC192/STM64, 4-port XFP	4	Tx laser not disabled
PD-1OC768-SON-SR	OC768c/STM256, 1-port	4	Tx laser not disabled



WARNING: Do not stare into the laser beam or view it directly with optical instruments even if the interface has been disabled.

Example: Disabling a Physical Interface

Sample interface configuration:

```
[edit interfaces]
user@host# show
ge-0/3/2 {
  unit 0 {
    description CE2-to-PE1;
    family inet {
      address 20.1.1.6/24;
    }
  }
}
```

Disabling the interface:

```
[edit interfaces]
user@host# set ge-0/3/2 disable
```

Verifying the interface configuration:

```
[edit interfaces]
user@host# show
ge-0/3/2 {
  disable; # Interface is marked as disabled.
  unit 0 {
    description CE2-to-PE1;
    family inet {
      address 20.1.1.6/24;
    }
  }
}
```

Disabling a Logical Interface

You can unconfigure a logical interface, effectively disabling that interface, without removing the logical interface configuration statements from the configuration. To do this, include the **disable** statement:

disable;

You can include this statement at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]**

When an interface is disabled, a route (pointing to the reserved target “**REJECT**”) with the IP address of the interface and a 32-bit subnet mask is installed in the routing table. See *Routing Protocols*.

Configuring Flow Control

By default, the router or switch imposes flow control to regulate the amount of traffic sent out on a Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, and 10-Gigabit Ethernet interface. Flow control is not supported on the 4-port Fast Ethernet PIC. This is useful if the remote side of the connection is a Fast Ethernet or Gigabit Ethernet switch.

You can disable flow control if you want the router or switch to permit unrestricted traffic. To disable flow control, include the **no-flow-control** statement:

```
no-flow-control;
```

To explicitly reinstate flow control, include the **flow-control** statement:

```
flow-control;
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* aggregated-ether-options]
- [edit interfaces *interface-name* ether-options]
- [edit interfaces *interface-name* fastether-options]
- [edit interfaces *interface-name* ggether-options]



NOTE: On the Type 5 FPC, to prioritize control packets in case of ingress oversubscription, you must ensure that the neighboring peers support MAC flow control. If the peers do not support MAC flow control, then you must disable flow control.

Related Documentation

- [flow-control on page 191](#)
- [Ethernet Interfaces Overview](#)
- [EX Series Switches Interfaces Overview on page 3](#)
- [Ethernet Interfaces Feature Guide for Routing Devices](#)

Configuring the Interface Address

You assign an address to an interface by specifying the address when configuring the protocol family. For the **inet** or **inet6** family, configure the interface IP address. For the **iso** family, configure one or more addresses for the loopback interface. For the **ccc**, **ethernet-switching**, **tcc**, **mpls**, **tnp**, and **vpls** families, you never configure an address.



NOTE: The point-to-point (PPP) address is taken from the loopback interface address that has the primary attribute. When the loopback interface is configured as an unnumbered interface, it takes the primary address from the donor interface.

To assign an address to an interface, include the **address** statement:

```
address address {
  broadcast address;
  destination address;
  destination-profile name;
  eui-64;
  preferred;
  primary;
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

In the **address** statement, specify the network address of the interface.

For each address, you can optionally configure one or more of the following:

- Broadcast address for the interface subnet—Specify this in the **broadcast** statement; this applies only to Ethernet interfaces, such as the management interface **fxp0**, **em0**, or **me0** the Fast Ethernet interface, and the Gigabit Ethernet interface.
- Address of the remote side of the connection (for point-to-point interfaces only)—Specify this in the **destination** statement.
- PPP properties to the remote end—Specify this in the **destination-profile** statement. You define the profile at the [edit access group-profile *name* **ppp**] hierarchy level (for point-to-point interfaces only).
- Whether the router or switch automatically generates the host number portion of interface addresses—The **eui-64** statement applies only to interfaces that carry IPv6 traffic, in which the prefix length of the address is 64 bits or less, and the low-order 64 bits of the address are zero. This option does not apply to the loopback interface (**lo0**) because IPv6 addresses configured on the loopback interface must have a 128-bit prefix length.
- Whether this address is the preferred address—Each subnet on an interface has a preferred local address. If you configure more than one address on the same subnet, the preferred local address is chosen by default as the source address when you originate packets to destinations on the subnet.

By default, the preferred address is the lowest-numbered address on the subnet. To override the default and explicitly configure the preferred address, include the **preferred** statement when configuring the address.

- Whether this address is the primary address—Each interface has a primary local address. If an interface has more than one address, the primary local address is used by default as the source address when you send packets from an interface where the destination provides no information about the subnet (for example, some **ping** commands).

By default, the primary address on an interface is the lowest-numbered non-127 (in other words, non-loopback) preferred address on the interface. To override the default and explicitly configure the preferred address, include the **primary** statement when configuring the address.



NOTE: If you configure a duplicate IP address on an interface, even when the earlier interface with that IP address is disabled, a **Warning** message is added to the syslog and not displayed on the screen. Do not configure the same IP address of a disabled interface on another interface.

- [Configuring Interface IPv4 Addresses on page 50](#)
- [Configuring Interface IPv6 Addresses on page 53](#)

Configuring Interface IPv4 Addresses

You can configure router or switch interfaces with a 32-bit IP version 4 (IPv4) address and optionally with a destination prefix, sometimes called a *subnet mask*. An IPv4 address utilizes a 4-octet dotted decimal address syntax (for example, **192.16.1.1**). An IPv4 address with destination prefix utilizes a 4-octet dotted decimal address syntax with a destination prefix appended (for example, **192.16.1.1/30**).

To configure an IPv4 address on routers and switches running Junos OS, use the **edit interface *interface-name* unit *number* family inet address *a.b.c.d/nn*** statement at the **[edit interfaces]** hierarchy level.



NOTE: Juniper Networks routers and switches support /31 destination prefixes when used in point-to-point Ethernet configurations; however, they are not supported by many other devices, such as hosts, hubs, routers, or switches. You must determine if the peer system also supports /31 destination prefixes before configuration.

Operational Behavior of Interfaces When the Same IPv4 Address Is Assigned to Them

You can configure the same IPv4 address on multiple physical interfaces. When you assign the same IPv4 address to multiple physical interfaces, the operational behavior of those interfaces differs, depending on whether they are implicitly or explicitly point-to-point.



NOTE: By default, all interfaces are assumed to be point-to-point (PPP) interfaces. For all interfaces except aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet, you can explicitly configure an interface to be a point-to-point connection.



NOTE: If you configure the same IP address on multiple interfaces in the same routing instance, Junos OS uses only the first configuration. The remaining IP address configurations are ignored, leaving some interfaces without an assigned address. Interfaces without an assigned address cannot be used as a donor interface for an unnumbered Ethernet interface.

In the following example, the IP address configuration for interface xe-0/0/1.0 is ignored:

```
interfaces {
  xe-0/0/0 {
    unit 0 {
      family inet {
        address 192.168.1.1/24;
      }
    }
  }
  xe-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.1.1/24;
      }
    }
  }
}
```

The following examples show the sample configuration of assigning the same IPv4 address to implicitly and explicitly point-to-point interfaces, and their corresponding **show interfaces terse** command outputs to see their operational status.

Configuring same IPv4 address on implicitly PPP interfaces:

```
[edit]
user@host# show
ge-0/1/0 {
  unit 0 {
    family inet {
      address 200.1.1.1/24;
    }
  }
}
ge-3/0/1 {
  unit 0 {
    family inet {
      address 200.1.1.1/24;
    }
  }
}
```



```

    }
}

```

The sample output shown below for the above configuration reveals that only **ge-0/1/0.0** was assigned the same IPv4 address **200.1.1.1/24** and its **link** state was **up**, while **ge-3/0/1.0** was not assigned the IPv4 address, though its **link** state was **up**, which means that it will be operational only when it gets a unique IPv4 address other than **200.1.1.1/24**.

```

user@host> show interfaces terse ge*
Interface      Admin Link Proto  Local          Remote
ge-0/1/0       up    up    up
ge-0/1/0.0     up    up    inet    200.1.1.1/24
                multiservice
ge-0/1/1       up    down
ge-3/0/0       up    down
ge-3/0/1       up    up
ge-3/0/1.0     up    up    inet
                multiservice

```

Configuring same IPv4 address on explicitly PPP interfaces:

```

[edit]
user@host# show
so-0/0/0 {
  unit 0 {
    family inet {
      address 200.1.1.1/24;
    }
  }
}
so-0/0/3 {
  unit 0 {
    family inet {
      address 200.1.1.1/24;
    }
  }
}

```

The sample output shown below for the above configuration reveals that both **so-0/0/0.0** and **so-0/0/3.0** were assigned the same IPv4 address **200.1.1.1/24** and that their **link** states were **down**, which means that to make them operational at least one of them will have to be configured with a unique IPv4 address other than **200.1.1.1/24**.

```

user@host> show interfaces terse so*
Interface      Admin Link Proto  Local          Remote
so-0/0/0       up    up
so-0/0/0.0     up    down inet    200.1.1.1/24
so-0/0/1       up    up
so-0/0/2       up    down
so-0/0/3       up    up
so-0/0/3.0     up    down inet    200.1.1.1/24
so-1/1/0       up    down
so-1/1/1       up    down
so-1/1/2       up    up
so-1/1/3       up    up
so-2/0/0       up    up
so-2/0/1       up    up

```


so-2/0/2	up	up
so-2/0/3	up	down

Configuring Interface IPv6 Addresses



NOTE: IPv6 is not currently supported for the QFX Series.

You represent IP version 6 (IPv6) addresses in hexadecimal notation using a colon-separated list of 16-bit values.

You assign a 128-bit IPv6 address to an interface by including the **address** statement:

```
address aaaa:bbb:...:zzzz/nn;
```



NOTE: You cannot configure a subnet zero IPv6 address because RFC 2461 reserves the subnet-zero address for anycast addresses, and Junos OS complies with the RFC.

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family inet6]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family inet6]

The double colon (::) represents all bits set to 0, as shown in the following example:

```
interfaces fe-0/0/1 {
  unit 0 {
    family inet6 {
      address fec0:1:1::2/64;
    }
  }
}
```



NOTE: You must manually configure the router or switch advertisement and advertise the default prefix for autoconfiguration to work on a specific interface.

Related Documentation

- [Configuring IPCP Options](#)
- [Configuring Default, Primary, and Preferred Addresses and Interfaces](#)

Configuring the Interface Bandwidth

By default, the Junos OS uses the physical interface's speed for the MIB-II object, **ifSpeed**. You can configure the logical unit to populate the **ifSpeed** variable by configuring a bandwidth value for the logical interface. The **bandwidth** statement sets an

informational-only parameter; you cannot adjust the actual bandwidth of an interface with this statement.



NOTE: We recommend that you be careful when setting this value. Any interface bandwidth value that you configure using the **bandwidth** statement affects how the interface cost is calculated for a dynamic routing protocol, such as OSPF. By default, the interface cost for a dynamic routing protocol is calculated using the following formula:

$$\text{cost} = \text{reference-bandwidth} / \text{bandwidth},$$

where bandwidth is the physical interface speed. However, if you specify a value for bandwidth using the **bandwidth** statement, that value is used to calculate the interface cost, rather than the actual physical interface bandwidth.

To configure the bandwidth value for a logical interface, include the **bandwidth** statement:

bandwidth *rate*;

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

rate is the peak rate, in bps or cps. You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000). You can also specify a value in cells per second by entering a decimal number followed by the abbreviation **c**; values expressed in cells per second are converted to bits per second using the formula 1 cps = 384 bps. The value can be any positive integer. The **bandwidth** statement is valid for all logical interfaces, except multilink interfaces.

Configuring the Media MTU

The media maximum transmission unit (MTU) is the largest data unit that can be forwarded without fragmentation.

This topic contains the following sections:

- [Media MTU Overview on page 55](#)
- [How to Configure the Media MTU on page 56](#)
- [Encapsulation Overhead by Encapsulation Type on page 57](#)
- [Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers on page 58](#)
- [Media MTU Sizes by Interface Type for M40e Routers on page 58](#)
- [Media MTU Sizes by Interface Type for M160 Routers on page 60](#)

- [Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers on page 60](#)
- [Media MTU Sizes by Interface Type for MX Series Routers on page 61](#)
- [Media MTU Sizes by Interface Type for T320 Routers on page 62](#)
- [Media MTU Sizes by Interface Type for T640 Platforms on page 62](#)
- [Media MTU Sizes by Interface Type for J2300 Platforms on page 63](#)
- [Media MTU Sizes by Interface Type for J4300 and J6300 Platforms on page 63](#)
- [Media MTU Sizes by Interface Type for J4350 and J6350 Platforms on page 64](#)
- [Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers on page 66](#)
- [Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers on page 66](#)

Media MTU Overview

The default media MTU size used on a physical interface depends on the encapsulation used on that interface. In some cases, the default IP Protocol MTU depends on whether the protocol used is IP version 4 (IPv4) or International Organization for Standardization (ISO).

The default media MTU is calculated as follows:

Default media MTU = Default IP MTU + encapsulation overhead

When you are configuring point-to-point connections, the MTU sizes on both sides of the connections must be the same. Also, when you are configuring point-to-multipoint connections, all interfaces in the subnet must use the same MTU size. For details about encapsulation overhead, see [“Encapsulation Overhead by Encapsulation Type” on page 57](#).



NOTE: The actual frames transmitted also contain cyclic redundancy check (CRC) bits, which are not part of the media MTU. For example, the media MTU for a Gigabit Ethernet Version 2 interface is specified as 1514 bytes, but the largest possible frame size is actually 1518 bytes; you need to consider the extra bits in calculations of MTUs for interoperability.

The physical MTU for Ethernet interfaces does not include the 4-byte frame check sequence (FCS) field of the Ethernet frame.

A SONET/SDH interface operating in concatenated mode has a “c” added to the rate descriptor. For example, a concatenated OC48 interface is referred to as OC48c.

If you do not configure an MPLS MTU, the Junos OS derives the MPLS MTU from the physical interface MTU. From this value, the software subtracts the encapsulation-specific overhead and space for the maximum number of labels that might be pushed in the Packet Forwarding Engine. Currently, the software provides for three labels of four bytes each, for a total of 12 bytes.

In other words, the formula used to determine the MPLS MTU is the following:

$$\text{MPLS MTU} = \text{physical interface MTU} - \text{encapsulation overhead} - 12$$

If you configure an MTU value by including the `mtu` statement at the `[edit interfaces interface-name unit logical-unit-number family mpls]` hierarchy level, the configured value is used.

How to Configure the Media MTU

To modify the default media MTU size for a physical interface, include the `mtu` statement at the `[edit interfaces interface-name]` hierarchy level:

```
[edit interfaces interface-name]  
  mtu bytes;
```

If you change the size of the media MTU, you must ensure that the size is equal to or greater than the sum of the protocol MTU and the encapsulation overhead.



NOTE: Changing the media MTU or protocol MTU causes an interface to be deleted and added again.

You configure the protocol MTU by including the `mtu` statement at the following hierarchy levels:

- `[edit interfaces interface-name unit logical-unit-number family family]`
- `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family family]`

Because tunnel services interfaces are considered logical interfaces, you cannot configure the MTU setting for the physical interface. This means you cannot include the **mtu** statement at the **[edit interfaces *interface-name*]** hierarchy level for the following interface types: generic routing encapsulation (**gr-**), IP-IP (**ip-**), loopback (**lo-**), link services (**ls-**), multilink services (**ml-**), and multicast (**pe-**, **pd-**). You can, however, configure the protocol MTU on tunnel interfaces, as described in [“Setting the Protocol MTU” on page 67](#).

Encapsulation Overhead by Encapsulation Type

Table 16: Encapsulation Overhead by Encapsulation Type

Interface Encapsulation	Encapsulation Overhead (Bytes)
802.1Q/Ethernet 802.3	21
802.1Q/Ethernet Subnetwork Access Protocol (SNAP)	26
802.1Q/Ethernet version 2	18
ATM Cell Relay	4
ATM permanent virtual connection (PVC)	12
Cisco HDLC	4
Ethernet 802.3	17
Ethernet circuit cross-connect (CCC) and virtual private LAN service (VPLS)	4
Ethernet over ATM	32
Ethernet SNAP	22
Ethernet translational cross-connect (TCC)	18
Ethernet version 2	14
Extended virtual local area network (VLAN) CCC and VPLS	4
Extended VLAN TCC	22
Frame Relay	4
PPP	4
VLAN CCC	4
VLAN VPLS	4
VLAN TCC	22

Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers

Table 17: Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Adaptive Services (MTU size not configurable)	9192	N/A	N/A
ATM	4482	9192	4470
E1/T1	1504	9192	1500
E3/T3	4474	9192	4470
Fast Ethernet	1514	1533 (4-port) 1532 (8-port) 1532 (12-port) <i>NOTE:</i> The maximum MTU for two 100Base-TX Fast Ethernet port FIC is 9192 bytes.	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192 <i>NOTE:</i> The maximum MTU for one Gigabit Ethernet port FIC is 9192 bytes.	1500 (IPv4), 1497 (ISO)
Serial	1504	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470

Media MTU Sizes by Interface Type for M40e Routers

Table 18: Media MTU Sizes by Interface Type for M40e Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Adaptive Services (MTU size not configurable)	9192	N/A	N/A
ATM	4482	9192	4470

Table 18: Media MTU Sizes by Interface Type for M40e Routers (*continued*)

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
E1/T1	1504	4500	1500
E3/T3	4474	4500 9192 (4-port)	4470
E3/DS3 IQ	4474	9192	4470
Fast Ethernet	1514	1533	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192 (1- or 2-port) 9192 (4-port)	1500 (IPv4), 1497 (ISO)
Serial	1504	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	4500 (1-port nonconcatenated) 9192 (4-port OC3) 9192 (4-port OC3c) 4500 (1-port OC12) 4500 (4-port OC12) 4500 (4-port OC12c) 4500 (1-port OC48) 9192 (2-port OC3) 9192 (2-port OC3c) 9192 (1-port OC12c) 9192 (1-port OC48c) 4500 (1-port OC192) 9192 (1-port OC192c)	4470

Media MTU Sizes by Interface Type for M160 Routers

Table 19: Media MTU Sizes by Interface Type for M160 Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Adaptive Services (MTU size not configurable)	9192	N/A	N/A
ATM	4482	9192	4470
E1/T1	1504	4500	1500
E3/T3	4474	4500	4470
E3/DS3 IQ	4474	9192	4470
Fast Ethernet	1514	1533	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192 (1- or 2-port) 4500 (4-port)	1500 (IPv4), 1497 (ISO)
Serial	1504	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	4500 (1-port nonconcatenated) 9192 (1- or 2-port) 4500 (4-port)	4470

Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers

Table 20: Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ATM2 IQ	4482	9192	4470
Channelized DS3 IQ	4471	4500	4470
Channelized E1 IQ	1504	4500	1500
Channelized OC12 IQ	4474	9192	4470

Table 20: Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers (*continued*)

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Channelized STM1 IQ	4474	9192	4470
DS3	4471	4500	4470
E1	1504	4500	1500
E3 IQ	4471	4500	4470
Fast Ethernet	1514	1533 (4-port) 1532 (8-, 12- and 48-port)	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470
T1	1504	4500	1500
CT3 IQ (excluding M120)	4474	9192	4470

Media MTU Sizes by Interface Type for MX Series Routers

Table 21: Media MTU Sizes by Interface Type for MX Series Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
10-Gigabit Ethernet	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
Multi-Rate Ethernet	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
Tri-Rate Ethernet	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)

Table 21: Media MTU Sizes by Interface Type for MX Series Routers (*continued*)

Channelized SONET/SDH OC3/STM1 (Multi-Rate)	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
DS3/E3 (Multi-Rate)	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)

Media MTU Sizes by Interface Type for T320 Routers**Table 22: Media MTU Sizes by Interface Type for T320 Routers**

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ATM	4482	9192	4470
ATM2 IQ	4482	9192	4470
Channelized OC12 IQ	4474	9192	4470
Channelized STM1 IQ	4474	9192	4470
DS3	4471	4500	4470
Fast Ethernet	1514	1533 (4-port) 1532 (12- and 48-port)	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470
CT3 IQ	4474	9192	4470

Media MTU Sizes by Interface Type for T640 Platforms**Table 23: Media MTU Sizes by Interface Type for T640 Platforms**

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ATM2 IQ	4482	9192	4470
48-port Fast Ethernet	1514	1532	1500 (IPv4), 1497 (ISO)

Table 23: Media MTU Sizes by Interface Type for T640 Platforms *(continued)*

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470
CT3 IQ	4474	9192	4470

Media MTU Sizes by Interface Type for J2300 Platforms

Table 24: Media MTU Sizes by Interface Type for J2300 Platforms

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Fast Ethernet (10/100)	1514	9192	1500
G.SHDSL	4482	9150	4470
ISDN BRI	1504	4092	1500
Serial	1504	9150	1500
T1 or E1	1504	9150	1500

Media MTU Sizes by Interface Type for J4300 and J6300 Platforms

Table 25: Media MTU Sizes by Interface Type for J4300 and J6300 Platforms

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ADSL2+ PIM	4482	9150	4470
Dual-port Fast Ethernet (10/100) PIM	1514	9192	1500
Dual-port Serial PIM	1504	9150	1500
Dual-port T1 or E1 PIM	1504	9150	1500
Dual-port Channelized T1/E1 PIM (channelized to DS0s)	1504	4500	1500

Table 25: Media MTU Sizes by Interface Type for J4300 and J6300 Platforms (*continued*)

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Dual-port Channelized T1/E1 PIM (clear channel T1 or E1)	1504	9150	1500
Fast Ethernet (10/100) built-in interface	1514	9192	1500
G.SHDSL PIM	4482	9150	4470
4-port ISDN BRI PIM	1504	4092	1500
T3 (DS3) or E3 PIM	4474	9192	4470

Media MTU Sizes by Interface Type for J4350 and J6350 Platforms**Table 26: Media MTU Sizes by Interface Type for J4350 and J6350 Platforms**

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
4-port ISDN BRI PIM	1504	4092	1500
ADSL2+ PIM	4482	9150	4470
Dual-port Fast Ethernet (10/100) PIM	1514	9192	1500
Dual-port Serial PIM	1504	9150	1500
Dual-port T1 or E1 PIM	1504	9150	1500
Dual-port Channelized T1/E1 PIM (channelized to DS0s)	1504	4500	1500
Dual-port Channelized T1/E1 PIM (clear channel T1 or E1)	1504	9150	1500
4-port Fast Ethernet (10/100) ePIM	1518	1518	1500

Table 26: Media MTU Sizes by Interface Type for J4350 and J6350 Platforms (*continued*)

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet (10/100/1000) built-in interface	1514	9018	1500
Gigabit Ethernet (10/100/1000) Enhanced Physical Interface Module (ePIM)	1514	9018	1500
Gigabit Ethernet (10/100/1000) SFP ePIM	1514	9018	1500
G.SHDSL PIM	4482	9150	4470
T3 (DS3) or E3 PIM	4474	9192	4470



NOTE: On Gigabit Ethernet ePIMs in J4350 and J6350 Services Routers, you can configure a maximum transmission unit (MTU) size of only 9018 bytes even though the CLI indicates that you can configure an MTU of up to 9192 bytes. If you configure an MTU greater than 9018 bytes, the router does not accept the configuration and generates a system log error message similar to the following:

```
/kernel: ge-0/0/0: Illegal media change. MTU invalid: 9192. Max MTU supported on this PIC: 9018
```

On 4-port Fast Ethernet ePIMs in J4350 and J6350 Services Routers, you can configure a maximum transmission unit (MTU) size of only 1518 bytes even though the CLI indicates that you can configure an MTU of up to 9192 bytes. If you configure an MTU greater than 1518 bytes, the router does not accept the configuration and generates a system log error message similar to the following:

```
/kernel: fe-3/0/1: Illegal media change. MTU invalid: 9192. Max MTU supported on this PIC: 1518
```


Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers

Table 27: Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
10-Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)



NOTE: On ACX Series routers, you can configure the protocol MTU by including the `mtu` statement at the `[edit interfaces interface-name unit logical-unit-number family inet]` or `[edit interfaces interface-name unit logical-unit-number family inet6]` hierarchy level.

- If you configure the protocol MTU at any of these hierarchy levels, the configured value is applied to all families that are configured on the logical interface.
- If you are configuring the protocol MTU for both `inet` and `inet6` families on the same logical interface, you must configure the same value for both the families. It is not recommended to configure different MTU size values for `inet` and `inet6` families that are configured on the same logical interface.

Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers

Table 28: Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
10-Gigabit Ethernet	1514	9500	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
40-Gigabit Ethernet	1514	9500	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
100-Gigabit Ethernet	1514	9500	1500 (IPv4), 1488 (MPLS), 1497 (ISO)

Related Documentation

- [Configuring Interface Encapsulation on Physical Interfaces](#)

- [Setting the Protocol MTU on page 67](#)

Setting the Protocol MTU

When you initially configure an interface, the protocol maximum transmission unit (MTU) is calculated automatically. If you subsequently change the media MTU, the protocol MTU on existing address families automatically changes.

For a list of default protocol MTU values, see [“Configuring the Media MTU” on page 54](#).

To modify the MTU for a particular protocol family, include the **mtu** statement:

```
mtu bytes;
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number* family *family*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]**

If you increase the size of the protocol MTU, you must ensure that the size of the media MTU is equal to or greater than the sum of the protocol MTU and the encapsulation overhead. For a list of encapsulation overhead values, see [Table 16 on page 57](#). If you reduce the media MTU size, but there are already one or more address families configured and active on the interface, you must also reduce the protocol MTU size. (You configure the media MTU by including the **mtu** statement at the **[edit interfaces *interface-name*]** hierarchy level, as discussed in [“Configuring the Media MTU” on page 54](#).)



NOTE: Changing the media MTU or protocol MTU causes an interface to be deleted and added again.

The maximum number of data-link connection identifiers (DLCIs) is determined by the MTU on the interface. If you have keepalives enabled, the maximum number of DLCIs is 1000, with the MTU set to 5012.

The actual frames transmitted also contain cyclic redundancy check (CRC) bits, which are not part of the MTU. For example, the default protocol MTU for a Gigabit Ethernet interface is 1500 bytes, but the largest possible frame size is actually 1504 bytes; you need to consider the extra bits in calculations of MTUs for interoperability.

Related Documentation

- [Configuring the Media MTU on page 54](#)

Interface Ranges



NOTE: This task uses Junos OS for EX Series switches with support for the Enhanced Layer 2 Software (ELS) configuration style. If your switch runs software that does not support ELS, see *Interface Ranges*. For ELS details, see *Getting Started with Enhanced Layer 2 Software*.

Junos OS allows you to group a range of identical interfaces into an *interface range*. You first specify the group of identical interfaces in the interface range. Then you can apply a common configuration to the specified interface range, reducing the number of configuration statements required and saving time while producing a compact configuration.

- [Configuring Interface Ranges on page 68](#)
- [Expanding Interface Range Member and Member Range Statements on page 71](#)
- [Configuration Inheritance for Member Interfaces on page 72](#)
- [Member Interfaces Inheriting Configuration from Configuration Groups on page 73](#)
- [Interfaces Inheriting Common Configuration on page 74](#)
- [Configuring Inheritance Range Priorities on page 75](#)
- [Configuration Expansion Where Interface Range Is Used on page 75](#)

Configuring Interface Ranges

To configure an interface range, include the **interface-range** statement at the **[edit interfaces]** hierarchy level.

The **interface-range** statement accepts only physical networking interface names in its definition.

Interfaces can be grouped either as a range of interfaces or using a number range under the **interface-range** statement definition.

Interfaces in an **interface-range** definition can be added as part of a member range or as individual members or multiple members using a number range.

To specify a member range, use the **member-range** statement at the **[edit interfaces interface-range name]** hierarchy level.

To specify interfaces in lexical order, use the **member-range start-range to end-range** statement.

A range for a member statement must contain the following:

- *****—All, specifies sequential interfaces from 0 through 47.



CAUTION: The wildcard ***** in a member statement does not take into account the interface numbers supported by a specific interface type. Irrespective of the interface type, ***** includes interface numbers ranging from 0 through 47 to the interface group. Therefore, use ***** in a member statement with caution.

- **num**—Number; specifies one specific interface by its number.
- **[low-high]**—Numbers between low to high; specifies a range of sequential interfaces.
- **[num1, num2, num3]**—Numbers **num1**, **num2**, and **num3** specify multiple specific interfaces.

**Example: Specifying an
Interface Range
Member Range**

```
member-range ge-0/0/0 to ge-4/0/40;
```

To specify one or multiple members, use the **member** statement at the **[edit interfaces interface-range name]** hierarchy level.

To specify the list of interface range members individually or for multiple interfaces using regex, use the **member list of interface names** statement.

**Example: Specifying an
Interface Range
Member**

```
member ge-0/0/0;
member ge-0/*/*
member ge-0/[1-10]/0;
member ge-0/[1,2,3]/3;
```

Regex or wildcards are not supported for interface-type prefixes. For example, prefixes **ge**, **fe**, and **xe** must be mentioned explicitly.

An **interface-range** definition can contain both **member** and **member-range** statements within it. There is no maximum limit on the number of **member** or **member-range** statements within an interface-range. However, at least one **member** or **member-range** statement must exist within an **interface-range** definition.

**Example: Interface
Range Common
Configuration**

Configuration common to an interface range can be added as a part of the **interface-range** definition, as follows:

```
[edit]
interfaces {
  + interface-range foo {
  + member-range ge-1/0/0 to ge-4/0/40;
  + member ge-0/1/1;
  + member ge-5/[1-10]/*;
    /*Common configuration is added as part of interface-range definition*/
    mtu 256;
    hold-time up 10;
    ether-options {
      flow-control;
```



```
        speed {
            100m;
        }
        802.3ad primary;
    }
}
```

An **interface-range** definition having just **member** or **member-range** statements and no common configurations statements is valid.

These defined interface ranges can be used in other configuration hierarchies, in places where an **interface** node exists.

Example:
Interface-Range foo
Used Under the
Protocols Hierarchy

```
protocols {
    dot1x {
        authenticator {
            interface foo {
                retries 1;
            }
        }
    }
}
```

foo should be an **interface-range** defined at the **[interfaces]** hierarchy level. In the above example, the **interface** node can accept both individual interfaces and interface ranges.



TIP: To view an interface range in expanded configuration, use the **(show | display inheritance)** command. For more information, see the *CLI User Guide*.

The defined interface ranges can be used at places where the **interface** node is used in the following configuration hierarchies:

- forwarding-options analyzer *name* input egress interface
- forwarding-options analyzer *name* input ingress interface
- poe interface
- protocols dot1x authenticator interface
- protocols igmp interface
- protocols isis interface
- protocols layer2-control bpdv-block interface
- protocols link-management peer *name* lmp-control-channel
- protocols link-management te-link *name* interface
- protocols lldp interface
- protocols lldp-med interface
- protocols mstp interface

- protocols oam ethernet link-fault-management interface
- protocols ospf area *area-id* interface
- protocols pim interface
- protocols router-advertisement interface
- protocols router-discovery interface
- protocols rsvp interface
- protocols sflow interfaces
- protocols vstp vlan *vlan-id* interface
- switch-options redundant-trunk-group group-name interface
- switch-options voip interface

Expanding Interface Range Member and Member Range Statements

All **member** and **member-range** statements in an interface range definition are expanded to generate the final list of interface names for the specified interface range.

Example: Expanding Interface Range Member and Member Range Statements

```
[edit]
interfaces {
  interface-range range-1 {
    member-range ge-0/0/0 to ge-4/0/20;
    member ge-10/1/1;
    member ge-5/[0-5]/*;
    /*Common configuration is added part of the interface-range definition*/
    mtu 256;
    hold-time up 10;
    ether-options {
      flow-control;
      speed {
        100m;
      }
      802.3ad primary;
    }
  }
}
```

For the **member-range** statement, all possible interfaces between **start-range** and **end-range** are considered in expanding the members. For example, the following **member-range** statement:

member-range ge-0/0/0 to ge-4/0/20
expands to:

```
[ge-0/0/0, ge-0/0/1 ... ge-0/0/max_ports
ge-0/1/0 ge-0/1/1 ... ge-0/1/max_ports
ge-0/2/0 ge-0/2/1 ... ge-0/2/max_ports
.
.
ge-0/MAX_PICS/0 ... ge-0/max_pics/max_ports
ge-1/0/0 ge-1/0/1 ... ge-1/0/max_ports
```



```
ge-1/MAX_PICS/0 ... ge-1/max_pics/max_ports
.
.
ge-4/0/0 ge-4/0/1 ... ge-4/0/max_ports]
```

The following **member** statement:

ge-5/[0-5]/*

expands to:

```
ge-5/0/0 ... ge-5/0/max_ports
ge-5/1/0 ... ge-5/0/max_ports
.
.
ge-5/5/0 ... ge-5/5/max_ports
```

The following **member** statement:

ge-5/1/[2,3,6,10]

expands to:

```
ge-5/1/2
ge-5/1/3
ge-5/1/6
ge-5/1/10
```

Configuration Inheritance for Member Interfaces

When the Junos OS expands the **member** and **member-range** statements present in an **interface-range**, it creates *interface objects* if they are not explicitly defined in the configuration. The common configuration is copied to all its member interfaces in the **interface-range**.

Example: Foreground interface configuration takes priority compared to configuration inherited by the interface through the **interface-range**.

Configuration Priorities

```
interfaces {
  interface-range range-1 {
    member-range ge-1/0/0/ to ge-10/0/47;
    mtu 256;
  }
  ge-1/0/1 {
    mtu 1024;
  }
}
```

In the preceding example, interface **ge-1/0/1** will have an MTU value of 1024.

This can be verified with output of the **show interfaces | display inheritance** command, as follows:

```
user@host: # show interfaces | display inheritance
## 'ge-1/0/0' was expanded from interface-range 'range-1'
##
ge-1/0/0 {
  ##
```



```

    ## '256' was expanded from interface-range 'range-1'
    ##
    mtu 256;
}
ge-1/0/1 {
    mtu 1024;
}
##
## 'ge-1/0/2' was expanded from interface-range 'range-1'
##
ge-1/0/2 {
    ##
    ## '256' was expanded from interface-range 'range-1'
    ##
    mtu 256;
}
    .....
    .....
##
## 'ge-10/0/47' was expanded from interface-range 'range-1'
##
ge-10/0/47 {
    ##
    ## '256' was expanded from interface-range 'range-1'
    ##
    mtu 256;
}

```

Member Interfaces Inheriting Configuration from Configuration Groups

Interface range member interfaces inherit the config-groups configuration like any other foreground configuration. **interface-range** is similar to any other foreground configuration statement. The only difference is that the **interface-range** goes through a member interfaces expansion before Junos OS reads this configuration.

```

groups {
  global {
    interfaces {
      <*> {
        hold-time up 10;
      }
    }
  }
  apply-groups [global];
  interfaces {
    interface-range range-1 {
      member-range ge-1/0/0 to ge-10/0/47;
      mtu 256;
    }
  }
}

```

The **hold-time** configuration is applied to all members of **interface-range range-1**.

This can be verified with **show interfaces | display inheritance** as follows:

```

user@host# show interfaces | display inheritance
ge-1/0/0 {
  ##

```



```
## '256' was expanded from interface-range 'range-1'
##
mtu 256;
##
## 'hold-time' was inherited from group 'global'
## '10' was inherited from group 'global'
##
hold-time up 10;
}
ge-1/0/1 {
##
## '256' was expanded from interface-range 'range-1'
##
mtu 256;
##
## 'hold-time' was inherited from group 'global'
## '10' was inherited from group 'global'
##
hold-time up 10;
}
ge-10/0/47 {
##
## '256' was expanded from interface-range 'range-1'
##
mtu 256;
##
## 'hold-time' was inherited from group 'global'
## '10' was inherited from group 'global'
##
hold-time up 10;
}
```

Interfaces Inheriting Common Configuration

If an interface is a member of several interface ranges, that interface will inherit the common configuration from all of those interface ranges.

```
[edit]
interfaces {
  interface-range range-1 {
    member-range ge-1/0/0 to ge-10/0/47;
    mtu 256;
  }
}
interfaces {
  interface-range range-1 {
    member-range ge-10/0/0 to ge-10/0/47;
    hold-time up 10;
  }
}
```

In this example, interfaces **ge-10/0/0** through **ge-10/0/47** will have both **hold-time** and **mtu**.

Configuring Inheritance Range Priorities

The interface ranges are defined in the order of inheritance priority, with the first interface range configuration data taking priority over subsequent interface ranges.

```
[edit]
interfaces {
  interface-range int-grp-one {
    member-range ge-0/0/0 to ge-4/0/40;
    member ge-1/1/1;
    /*Common config is added part of the interface-range definition*/
    mtu 256;
    hold-time up 10;
  }
}
interfaces {
  interface-range int-grp-two {
    member-range ge-5/0/0 to ge-10/0/40;
    member ge-1/1/1;
    mtu 1024;
  }
}
```

Interface **ge-1/1/1** exists in both **interface-range *int-grp-one*** and **interface-range *int-grp-two***. This interface inherits **mtu 256** from **interface-range *int-grp-one*** because it was defined first.

Configuration Expansion Where Interface Range Is Used

In this example, **interface-range *range-1*** is used under the **protocols** hierarchy:

```
[edit]
interfaces {
  interface-range range-1 {
    member ge-10/1/1;
    member ge-5/5/1;
    mtu 256;
    hold-time up 10;
    ether-options {
      flow-control;
      speed {
        100m;
      }
    }
    802.3ad primary;
  }
}
protocols {
  dot1x {
    authenticator {
      interface range-1 {
        retries 1;
      }
    }
  }
}
}
```


The **interface** node present under **authenticator** is expanded into member interfaces of the **interface-range** *range-1* as follows:

```
protocols {
  dot1x {
    authenticator {
      interface ge-10/1/1 {
        retries 1;
      }
      interface ge-5/5/1 {
        retries 1;
      }
    }
  }
}
```

The **interface** *range-1* statement is expanded into two interfaces, ge-10/1/1 and ge-5/5/1, and configuration **retries 1** is copied under those two interfaces.

This configuration can be verified using the **show protocols dot1x | display inheritance** command.

Configuring Accounting for the Physical Interface

Juniper Networks routers and switches can collect various kinds of data about traffic passing through the router and switch. You can set up one or more *accounting profiles* that specify some common characteristics of this data, including the following:

- The fields used in the accounting records
- The number of files that the router or switch retains before discarding, and the number of bytes per file
- The polling period that the system uses to record the data

You configure the profiles and define a unique name for each profile using statements at the **[edit accounting-options]** hierarchy level. There are two types of accounting profiles: interface profiles and filter profiles. You configure interface profiles by including the **interface-profile** statement at the **[edit accounting-options]** hierarchy level. You configure filter profiles by including the **filter-profile** statement at the **[edit accounting-options]** hierarchy level. For more information, see the *Network Management Administration Guide for Routing Devices*.

You apply filter profiles by including the **accounting-profile** statement at the **[edit firewall filter *filter-name*]** and **[edit firewall family *family filter filter-name*]** hierarchy levels. For more information, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices*.

Applying an Accounting Profile to the Physical Interface

To enable accounting on an interface, include the **accounting-profile** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]
```


accounting-profile *name*;

You can also reference profiles by logical unit; for more information, see “[Configuring Accounting for the Logical Interface](#)” on page 77.

Example: Applying an Accounting Profile to the Physical Interface

Configure an accounting profile for an interface and apply it to a physical interface:

```
[edit]
accounting-options {
  file if_stats {
    size 4m files 10 transfer-interval 15;
    archive-sites {
      "ftp://login:password@host/path";
    }
  }
  interface-profile if_profile {
    interval 15;
    file if_stats {
      fields {
        input-bytes;
        output-bytes;
        input-packets;
        output-packets;
        input-errors;
        output-errors;
      }
    }
  }
}
[edit interfaces ge-1/0/1]
accounting-profile if_profile;
```

Configuring Accounting for the Logical Interface

Juniper Networks routers or switches can collect various kinds of data about traffic passing through the router or switch. You can set up one or more *accounting profiles* that specify some common characteristics of this data, including the following:

- The fields used in the accounting records
- The number of files that the router or switch retains before discarding, and the number of bytes per file
- The period that the system uses to record the data

You configure the profiles and define a unique name for each profile using statements at the **[edit accounting-options]** hierarchy level. There are two types of accounting profiles: interface profiles and filter profiles. You configure interface profiles by including the **interface-profile** statement at the **[edit accounting-options]** hierarchy level. You configure filter profiles by including the **filter-profile** statement at the **[edit accounting-options]** hierarchy level. For more information, see the *Network Management Administration Guide for Routing Devices*.

You apply filter profiles by including the **accounting-profile** statement at the **[edit firewall filter *filter-name*]** and **[edit firewall family *family* filter *filter-name*]** hierarchy levels. For more information, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices*.

Applying an Accounting Profile to the Logical Interface

To enable accounting on a logical interface, include the **accounting-profile** statement:

```
accounting-profile name;
```

You can include this statement at the following hierarchy level:

- **[edit interfaces *interface-name* unit *logical-unit-number*]**

You can also reference profiles for the physical interface; for more information, see [“Configuring Accounting for the Physical Interface” on page 76](#).

Example: Applying an Accounting Profile to the Logical Interface

Configure an accounting profile for an interface and apply it to a logical interface:

```
[edit]
accounting-options {
  file if_stats {
    size 4m files 10 transfer-interval 15;
    archive-sites {
      "ftp://login:password@host/path";
    }
  }
}
interface-profile if_profile {
  interval 15;
  file if_stats {
    fields {
      input-bytes;
      output-bytes;
      input-packets;
      output-packets;
      input-errors;
      output-errors;
    }
  }
}
[edit interfaces ge-1/0/1 unit 1]
accounting-profile if_profile;
```

To reference profiles by physical interface, see [“Applying an Accounting Profile to the Physical Interface” on page 76](#). For information about configuring a firewall filter accounting profile, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices*.

Configuring Ethernet Loopback Capability

By default, local aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces connect to a remote system. To place an interface in loopback mode, include the **loopback** statement:

```
loopback;
```



NOTE: If you configure a local loopback on a 1-port 10-Gigabit IQ2 and IQ2-E PIC using the loopback statement at the [edit interfaces *interface-name* *gigether-options*] hierarchy level, the transmit-path stops working, causing the remote end to detect a link down.

To return to the default—that is, to disable loopback mode—delete the **loopback** statement from the configuration:

```
[edit]
user@host# delete interfaces fe-fpc/pic/port fastether-options loopback
```

To explicitly disable loopback mode, include the **no-loopback** statement:

```
no-loopback;
```

You can include the **loopback** and **no-loopback** statements at the following hierarchy levels:

- [edit interfaces *interface-name* aggregated-ether-options]
- [edit interfaces *interface-name* ether-options]
- [edit interfaces *interface-name* fastether-options]
- [edit interfaces *interface-name* gigether-options]

Related Documentation

- [loopback on page 221](#)
- [Ethernet Interfaces Overview](#)
- [EX Series Switches Interfaces Overview on page 3](#)
- [Ethernet Interfaces Feature Guide for Routing Devices](#)

Configuring Gratuitous ARP

Gratuitous Address Resolution Protocol (ARP) requests provide duplicate IP address detection. A gratuitous ARP request is a broadcast request for a router's own IP address. If a router or switch sends an ARP request for its own IP address and no ARP replies are received, the router- or switch-assigned IP address is not being used by other nodes. If a router or switch sends an ARP request for its own IP address and an ARP reply is received, the router- or switch-assigned IP address is already being used by another node.

By default, the router or switch responds to gratuitous ARP requests. On Ethernet interfaces, you can disable responses to gratuitous ARP requests. To disable responses to gratuitous ARP requests, include the **no-gratuitous-arp-request** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
no-gratuitous-arp-request;
```

To return to the default—that is, to respond to gratuitous ARP requests—delete the **no-gratuitous-arp-request** statement from the configuration:

```
[edit]  
user@host# delete interfaces interface-name no-gratuitous-arp-request
```

Gratuitous ARP replies are reply packets sent to the broadcast MAC address with the target IP address set to be the same as the sender's IP address. When the router or switch receives a gratuitous ARP reply, the router or switch can insert an entry for that reply in the ARP cache.

By default, updating the ARP cache on gratuitous ARP replies is disabled on the router or switch. On Ethernet interfaces, you can enable handling of gratuitous ARP replies on a specific interface by including the **gratuitous-arp-reply** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
gratuitous-arp-reply;
```

To restore the default behavior, include the **no-gratuitous-arp-reply** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
no-gratuitous-arp-reply;
```

Related Documentation

- [gratuitous-arp-reply on page 192](#)
- [no-gratuitous-arp-request on page 235](#)
- [Ethernet Interfaces Overview](#)
- [EX Series Switches Interfaces Overview on page 3](#)
- [Ethernet Interfaces Feature Guide for Routing Devices](#)

Configuring Static ARP Table Entries

To configure static ARP table entries, include the **arp** statement:

```
arp ip-address (mac | multicast-mac) mac-address <publish>;
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number* family inet address *address*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family inet address *address*]**

The IP address that you specify must be part of the subnet defined in the enclosing **address** statement.

To associate a multicast MAC address with a unicast IP address, include the **multicast-mac** statement.

Specify the MAC address as six hexadecimal bytes in one of the following formats: *nnnnn.nnnnn.nnnnn* or *nn:nn:nn:nn:nn:nn*; for example, **0011.2233.4455** or **00:11:22:33:44:55**.

For unicast MAC addresses only, if you include the **publish** option, the router or switch replies to proxy ARP requests.



NOTE: By default, an ARP policer is installed that is shared among all the Ethernet interfaces on which you have configured the **family inet** statement. By including the **arp** statement at the [edit interfaces *interface-name* unit *logical-unit-number* family inet policer] hierarchy level, you can apply a specific ARP-packet policer to an interface. This feature is not available on EX Series switches.

When you need to conserve IP addresses, you can configure an Ethernet interface to be unnumbered by including the **unnumbered-address** statement at the [edit interfaces *interface-name* unit *logical-unit-number* family inet] hierarchy level.



NOTE: The Junos OS supports the IPv6 static neighbor discovery cache entries, similar to the static ARP entries in IPv4.

Example: Configuring Static ARP Table Entries

Configure two static ARP table entries on the router or switch's management interface:

```
[edit interfaces]
fxp0 {
  unit 0 {
    family inet {
      address 10.10.0.11/24 {
        arp 10.10.0.99 mac 0001.0002.0003;
        arp 10.10.0.101 mac 00:11:22:33:44:55 publish;
      }
    }
  }
}
```

Related Documentation

- [Management Ethernet Interface Overview](#)
- [EX Series Switches Interfaces Overview on page 3](#)
- [Applying Policers](#)
- [Configuring an Unnumbered Interface](#)

- *Ethernet Interfaces Feature Guide for Routing Devices*

Disabling the Transmission of Redirect Messages on an Interface

By default, the interface sends protocol redirect messages. To disable the sending of these messages on an interface, include the **no-redirects** statement:

no-redirects;

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

To disable the sending of protocol redirect messages for the entire router or switch, include the **no-redirects** statement at the [edit system] hierarchy level.

Related
Documentation

- [no-redirects on page 235](#)

Configuring Restricted and Unrestricted Proxy ARP

To configure restricted or unrestricted proxy ARP, include the **proxy-arp** statement:

proxy-arp (restricted |unrestricted);

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

To return to the default—that is, to disable restricted or unrestricted proxy ARP—delete the **proxy-arp** statement from the configuration:

```
[edit]
user@host# delete interfaces interface-name unit logical-unit-number proxy-arp
```

You can track the number of restricted or unrestricted proxy ARP requests processed by the router or switch by issuing the **show system statistics arp** operational mode command.



NOTE: When proxy ARP is enabled as default or unrestricted, the router or switch responds to any ARP request as long as the device has an active route to the target address of the ARP request. This gratuitous ARP behavior can result in an error when the receiving interface and target response interface are the same and the end device (for example, a client) performs a duplicate address check. To prevent this error, configure the router or switch interface with the `no-gratuitous-arp-reply` statement. See “[Configuring Gratuitous ARP](#)” on page 79 for information about how to disable responses to gratuitous ARP requests.

**Related
Documentation**

- [proxy-arp on page 240](#)
- *Restricted and Unrestricted Proxy ARP Overview*
- [Configuring Gratuitous ARP on page 79](#)
- *Ethernet Interfaces Feature Guide for Routing Devices*

Enabling or Disabling SNMP Notifications on Logical Interfaces

By default, Simple Network Management Protocol (SNMP) notifications are sent when the state of an interface or a connection changes. To explicitly enable these notifications on the logical interface, include the **traps** statement; to disable these notifications on the logical interface, include the **no-traps** statement:

`(traps | no-traps);`

You can include these statements at the following hierarchy levels:

- `[edit interfaces interface-name unit logical-unit-number]`
- `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]`



NOTE: Gigabit Ethernet interfaces on J Series routers do not support SNMP.

Configuring Aggregated Ethernet Links (CLI Procedure)

Use the link aggregation feature to aggregate one or more links to form a virtual link or link aggregation group (LAG). The MAC client can treat this virtual link as if it were a single link to increase bandwidth, provide graceful degradation as failure occurs, and increase availability.



NOTE: An interface with an already configured IP address cannot form part of the aggregation group.

To configure aggregated Ethernet interfaces, using the CLI:

1. Specify the number of aggregated Ethernet interfaces to be created:

```
[edit chassis]
user@switch# set aggregated-devices ethernet device-count number
```

2. Specify the minimum number of links for the aggregated Ethernet interface (aex), that is, the defined bundle, to be labeled *up*:



NOTE: By default, only one link must be up for the bundle to be labeled *up*.

```
[edit interfaces]
user@switch# set ae0 aggregated-ether-options minimum-links number
```

3. Specify the link speed for the aggregated Ethernet bundle:

```
[edit interfaces]
user@switch# set ae0 aggregated-ether-options link-speed speed
```

4. Specify the members to be included within the aggregated Ethernet bundle:

```
[edit interfaces]
user@switch# set xe-fpc/pic/port ether-options 802.3ad ae0
user@switch# set xe-fpc/pic/port ether-options 802.3ad ae0
```

5. Specify an interface family for the aggregated Ethernet bundle:

```
[edit interfaces]
user@switch# set ae0 unit 0 family inet address address
```

For information about adding LACP to a LAG, see “Configuring Aggregated Ethernet LACP (CLI Procedure)” on page 88.

Related Documentation

- [Configuring Aggregated Ethernet Interfaces \(J-Web Procedure\) on page 85](#)
- [Configuring Aggregated Ethernet LACP \(CLI Procedure\) on page 88](#)
- [Configuring LACP Link Protection of Aggregated Ethernet Interfaces \(CLI Procedure\) on page 89](#)
- [Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch](#)
- [Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch](#)

- [Verifying the Status of a LAG Interface on page 257](#)
- [Understanding Aggregated Ethernet Interfaces and LACP on page 8](#)

Configuring Aggregated Ethernet Interfaces (J-Web Procedure)



NOTE: This topic applies only to the J-Web Application package.

Use the link aggregation feature to aggregate one or more Ethernet interfaces to form a virtual link or link aggregation group (LAG) on an EX Series switch. The MAC client can treat this virtual link as if it were a single link. Link aggregation increases bandwidth, provides graceful degradation as failure occurs, and increases availability. You can use the J-Web interface to configure aggregated Ethernet interfaces, or a LAG, on the switch.



NOTE: Interfaces that are already configured with MTU, duplex, flow control, or logical interfaces are listed but are not available for aggregation.

To configure an aggregated Ethernet interface (also referred to as a LAG):

1. Select **Configure > Interfaces > Link Aggregation**.

The list of aggregated interfaces is displayed.



NOTE: After you make changes to the configuration on this page, you must commit the changes immediately for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See [Using the Commit Options to Commit Configuration Changes](#) for details about all commit options.

2. Click one of the following:

- **Add**—Creates an aggregated Ethernet interface, or LAG. Enter information as specified in [Table 29 on page 86](#).
- **Edit**—Modifies a selected LAG.
 - **Aggregation**—Modifies settings for the selected LAG. Enter information as specified in [Table 29 on page 86](#).
 - **VLAN**—Specifies VLAN options for the selected LAG. Enter information as specified in [Table 30 on page 87](#).
 - **IP Option**—Specifies IP options for the selected LAG. Enter information as specified in [Table 31 on page 87](#).
- **Delete**—Deletes the selected LAG.

- **Disable Port** or **Enable Port**—Disables or enables the administrative status on the selected interface.
- **Device Count**—Configures the number of aggregated logical devices available to the switch. Select the number and click **OK**.

Table 29: Aggregated Ethernet Interface Options

Field	Function	Your Action
Aggregated Interface	Specifies the name of the aggregated interface.	None. The name is supplied by the software.
LACP Mode	<p>Specifies the mode in which LACP packets are exchanged between the interfaces. The modes are:</p> <ul style="list-style-type: none"> • None—Indicates that no mode is applicable. • Active—Indicates that the interface initiates transmission of LACP packets • Passive—Indicates that the interface responds only to LACP packets. 	Select from the list.
Description	Specifies a description for the LAG.	Enter a description.
Interface	Specifies the interfaces in the LAG.	<p>To add interfaces to the LAG, select the interfaces and click Add. For an EX8200 Virtual Chassis configuration, select the member, FPC, and the interface from the list. Click OK.</p> <p>To remove an interface from the LAG, select the interface and click Remove.</p> <p>NOTE: Only interfaces that are configured with the same speed can be selected together for a LAG.</p>
Enable Log	Specifies whether to enable generation of log entries for the LAG.	Select the check box to enable log generation, or clear the check box to disable log generation.

Table 30: VLAN Options

Field	Function	Your Action
Port Mode	Specifies the mode of operation for the port: trunk or access.	<p>If you select Trunk, you can:</p> <ol style="list-style-type: none"> 1. Click Add to add a VLAN member. 2. Select the VLAN and click OK. 3. (Optional) Associate a native VLAN ID with the port. <p>If you select Access, you can:</p> <ol style="list-style-type: none"> 1. Select the VLAN member to be associated with the port. 2. (Optional) Associate a VoIP VLAN with the interface. Only a VLAN with a VLAN ID can be associated as a VoIP VLAN. <p>Click OK.</p>

Table 31: IP Options

Field	Function	Your Action
IPv4 Address	Specifies an IPv4 address for the selected LAG.	<ol style="list-style-type: none"> 1. Select the check box IPv4 address. 2. Type an IP address—for example, 10.10.10.10. 3. Enter the subnet mask or address prefix. For example, 24 bits represents 255.255.255.0. 4. Click OK.
IPv6 Address	Specifies an IPv6 address for the selected LAG.	<ol style="list-style-type: none"> 1. Select the check box IPv6 address. 2. Type an IP address—for example, 2001:ab8:85a3::8a2e:370:7334. 3. Enter the subnet mask or address prefix. 4. Click OK.

- Related Documentation**
- [Configuring Aggregated Ethernet Links \(CLI Procedure\) on page 84](#)
 - [Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch](#)
 - [Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch](#)
 - [Verifying the Status of a LAG Interface on page 257](#)
 - [Configuring Aggregated Ethernet LACP \(CLI Procedure\) on page 88](#)

- [Understanding Aggregated Ethernet Interfaces and LACP on page 8](#)

Configuring Aggregated Ethernet LACP (CLI Procedure)

For aggregated Ethernet interfaces on EX Series switches, you can configure the Link Aggregation Control Protocol (LACP). LACP is one method of bundling several physical interfaces to form one logical interface. You can configure aggregated Ethernet interfaces with or without LACP enabled.

LACP was designed to achieve the following:

- Automatic addition and deletion of individual links to the bundle without user intervention
- Link monitoring to check whether both ends of the bundle are connected to the correct group



NOTE: You can also configure LACP link protection on aggregated Ethernet interfaces. For information, see [“Configuring LACP Link Protection of Aggregated Ethernet Interfaces \(CLI Procedure\)” on page 89](#).

The Junos OS implementation of LACP provides link monitoring but not automatic addition and deletion of links.

Before you configure LACP, be sure you have:

- Configured the aggregated Ethernet bundles—also known as link aggregation groups (LAGs). See [“Configuring Aggregated Ethernet Links \(CLI Procedure\)” on page 84](#)

When LACP is enabled, the local and remote sides of the aggregated Ethernet links exchange protocol data units (PDUs), which contain information about the state of the link. You can configure Ethernet links to actively transmit PDUs, or you can configure the links to passively transmit them (sending out LACP PDUs only when they receive them from another link). One side of the link must be configured as **active** for the link to be up.



NOTE: Do not add LACP to a LAG if the remote end of the LAG link is a security device, unless the security device supports LACP. Security devices often do not support LACP because they require a deterministic configuration.

To configure LACP:

1. Configure at least one side of the aggregated Ethernet link as active:

```
[edit interfaces]
user@switch# set aeX aggregated-ether-options lacp active
```

2. Specify the interval at which the interfaces send LACP packets:

```
[edit interfaces]
user@switch# set aeX aggregated-ether-options lacp periodic interval
```




NOTE: The LACP process exists in the system only if you configure the system in either active or passive LACP mode.

Related Documentation

- [Configuring Aggregated Ethernet Links \(CLI Procedure\) on page 84](#)
- [Configuring LACP Link Protection of Aggregated Ethernet Interfaces \(CLI Procedure\) on page 89](#)
- [Configuring Aggregated Ethernet Interfaces \(J-Web Procedure\) on page 85](#)
- [Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch](#)
- [Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch](#)
- [Verifying the Status of a LAG Interface on page 257](#)
- [Understanding Aggregated Ethernet Interfaces and LACP on page 8](#)

Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)

You can configure LACP link protection and system priority at the global level on the switch or for a specific aggregated Ethernet interface. When using LACP link protection to protect a single link in the aggregated ethernet bundle, you configure only two member links for an aggregated Ethernet interface: one active and one standby. LACP link protection ensures that only one link—the link with the higher priority—is used for traffic. The other link is forced to stay in a *waiting* state.

When using LACP link protection to protect multiple links in an aggregated ethernet bundle, you configure links into primary and backup subgroups. A link protection subgroup is a collection of ethernet links within the aggregated ethernet bundle. When you use link protection subgroups, you configure a primary subgroup and a backup subgroup. The configuration process includes assigning member links to each subgroup. When the configuration process is complete, the primary subgroup is used to forward traffic until a switchover event, such as a link failure, occurs and causes the backup subgroup to assume control of traffic that was travelling on the links in the primary subgroup within the bundle.

By default LACP link protection reverts to a higher-priority (lower-numbered) link when the higher-priority link becomes operational or when a higher-priority link is added to the aggregated Ethernet bundle. For priority purposes, LACP link protection treats subgroups like links. You can suppress link calculation by adding the **non-revertive** statement to the link protection configuration. In nonrevertive mode, when a link is active in sending and receiving LACP packets, adding a higher-priority link to the bundle does not change the status of the currently active link. It remains active.

If LACP link configuration is specified to be nonrevertive at the global **[edit chassis]** hierarchy level, you can specify the **revertive** statement in the LACP link protection configuration at the aggregated Ethernet interface level to override the nonrevertive

setting for the interface. In revertive mode, adding a higher-priority link to the aggregated Ethernet bundle results in LACP recalculating the priority and switching the status from the currently active link to the newly added, higher-priority link.



NOTE: When LACP link protection is enabled on both local and remote sides of the link, both sides must use the same mode (either revertive or nonrevertive).

Configuring LACP link configuration at the aggregated Ethernet level results in only the configured interfaces using the defined configuration. LACP interface configuration also enables you to override global (chassis) LACP settings.

Before you configure LACP link protection, be sure you have:

- Configured the aggregated Ethernet bundles—also known as link aggregation groups (LAGs). See [“Configuring Aggregated Ethernet Links \(CLI Procedure\)” on page 84](#).
- Configured LACP for the interface. See [“Configuring Aggregated Ethernet LACP \(CLI Procedure\)” on page 88](#).

You can configure LACP link protection for all aggregated Ethernet interfaces on the switch by enabling it at the global level on the switch or configure it for a specific aggregated Ethernet interface by enabling it on that interface.

- [Configuring LACP Link Protection for a Single Link at the Global Level on page 91](#)
- [Configuring LACP Link Protection for a Single Link at the Aggregated Interface Level on page 91](#)
- [Configuring Subgroup Bundles to Provide LACP Link Protection to Multiple Links in an Aggregated Ethernet Interface on page 92](#)

Configuring LACP Link Protection for a Single Link at the Global Level

To configure LACP link protection for aggregated Ethernet interfaces at the global level:

1. Enable LACP link protection on the switch:

```
[edit chassis aggregated-devices ethernet lacp]
user@switch# set link-protection
```

2. (Optional) Configure the LACP link protection for the aggregated Ethernet interfaces to be in nonrevertive mode:



NOTE: LACP link protection is in revertive mode by default.

```
[edit chassis aggregated-devices ethernet lacp link-protection]
user@switch# set non-revertive
```

3. (Optional) To configure LACP system priority for the aggregated Ethernet interfaces:

```
[edit chassis aggregated-devices ethernet lacp]
user@switch# set system-priority
```

Configuring LACP Link Protection for a Single Link at the Aggregated Interface Level

To enable LACP link protection for a specific aggregated Ethernet interface:

1. Enable LACP link protection for the interface:

```
[edit interfaces aeX aggregated-ether-options lacp]
user@switch# set link-protection
```

2. (Optional) Configure the LACP link protection for the aggregated Ethernet interface to be in revertive or nonrevertive mode:

- To specify revertive mode:

```
[edit interfaces aeX aggregated-ether-options lacp link-protection]
user@switch# set revertive
```

- To specify nonrevertive mode:

```
[edit interfaces aeX aggregated-ether-options lacp link-protection]
user@switch# set non-revertive
```

3. (Optional) To configure LACP system priority for an aggregated Ethernet interface:

```
[edit interfaces aeX aggregated-ether-options lacp link-protection]
user@switch# set system-priority
```

4. (Optional) To configure LACP port priority for an aggregated Ethernet interface:

```
[edit interfaces ge-fpc/pic/port ether-options 802.3ad lacp]
user@switch# set port-priority
```


Configuring Subgroup Bundles to Provide LACP Link Protection to Multiple Links in an Aggregated Ethernet Interface

You can configure link protection subgroup bundles to provide link protection for multiple links in an aggregated ethernet bundle.

Link protection subgroups allow you to provide link protection to a collection of Ethernet links within a LAG bundle, instead of providing protection to a single link in the aggregated ethernet bundle only. You can, for instance, configure a primary subgroup with three member links and a backup subgroup with three different member links and use the backup subgroup to provide link protection for the primary subgroup.

To configure link protection using subgroups:

1. Configure the primary link protection subgroup in the aggregated ethernet interface:

```
[edit interfaces aeX aggregated-ether-options]
user@switch# set link-protection-sub-group group-name primary
```

For instance, to create a primary link protection subgroup named **subgroup-primary** for interface **ae0**:

```
[edit interfaces ae0 aggregated-ether-options]
user@switch# set link-protection-sub-group subgroup-primary primary
```

2. Configure the backup link protection subgroup in the aggregated ethernet interface:

```
[edit interfaces aeX aggregated-ether-options]
user@switch# set link-protection-sub-group group-name backup
```

For instance, to create a backup link protection subgroup named **subgroup-backup** for interface **ae0**:

```
[edit interfaces ae0 aggregated-ether-options]
user@switch# set link-protection-sub-group subgroup-backup backup
```



NOTE: You can create one primary and one backup link protection subgroup per aggregated ethernet interface.

3. Attach interfaces to the link protection subgroups:

```
[edit interfaces interface-name ether-options 802.3ad]
user@switch# set link-protection-sub-group group-name
```



NOTE: The primary and backup link protection subgroups must contain the same number of interfaces. For instance, if the primary link protection subgroup contains three interfaces, the backup link protection subgroup must also contain three interfaces.

For instance, to configure interfaces **ge-0/0/0** and **ge-0/0/1** into link protection subgroup **subgroup-primary** and interfaces **ge-0/0/2** and **ge-0/0/3** into link protection subgroup **subgroup-backup**:

```
[edit interfaces ge-0/0/0 ether-options 802.3ad]
user@switch# set link-protection-sub-group subgroup-primary
```


- ```
[edit interfaces ge-0/0/1 ether-options 802.3ad]
user@switch# set link-protection-sub-group subgroup-primary
[edit interfaces ge-0/0/2 ether-options 802.3ad]
user@switch# set link-protection-sub-group subgroup-backup
[edit interfaces ge-0/0/3 ether-options 802.3ad]
user@switch# set link-protection-sub-group subgroup-backup
```
4. (Optional) Configure the port priority for link protection:

```
[edit interfaces interface-name ether-options 802.3ad]
user@switch# set port-priority priority
```

The port priority is used to select the active link.

5. Enable link protection

To enable link protection at the LAG level:

```
[edit interfaces aeX aggregated-ether-options]
user@switch# set link-protection
```

To enable link protection at the LACP level:

```
[edit interfaces aeX aggregated-ether-options lacp]
user@switch# set link-protection
```

For instance, to enable link protection on **ae0** at the LAG level:

```
[edit interfaces ae0 aggregated-ether-options]
user@switch# set link-protection
```

For instance, to enable link protection on **ae0** at the LACP level:

```
[edit interfaces ae0 aggregated-ether-options lacp]
user@switch# set link-protection
```

**Related  
Documentation**

- [Understanding Aggregated Ethernet Interfaces and LACP on page 8](#)

## Configuring Aggregated Ethernet Link Protection

You can configure link protection for aggregated Ethernet interfaces to provide QoS on the links during operation.

On aggregated Ethernet interfaces, you designate a primary and backup link to support link protection. Egress traffic passes only through the designated primary link. This includes transit traffic and locally generated traffic on the router or switch. When the primary link fails, traffic is routed through the backup link. Because some traffic loss is unavoidable, egress traffic is not automatically routed back to the primary link when the primary link is reestablished. Instead, you manually control when traffic should be diverted back to the primary link from the designated backup link.



**NOTE:** Link protection is not supported on MX80.

- [Configuring Link Protection for Aggregated Ethernet Interfaces on page 94](#)
- [Configuring Primary and Backup Links for Link Aggregated Ethernet Interfaces on page 94](#)



- [Reverting Traffic to a Primary Link When Traffic is Passing Through a Backup Link on page 94](#)
- [Disabling Link Protection for Aggregated Ethernet Interfaces on page 94](#)

## Configuring Link Protection for Aggregated Ethernet Interfaces

Aggregated Ethernet interfaces support link protection to ensure QoS on the interface.

To configure link protection:

1. Specify that you want to configure the options for an aggregated Ethernet interface.

```
user@host# edit interfaces aex aggregated-ether-options
```

2. Configure the link protection mode.

```
[edit interfaces aex aggregated-ether-options]
user@host# set link-protection
```

## Configuring Primary and Backup Links for Link Aggregated Ethernet Interfaces

To configure link protection, you must specify a primary and a secondary, or backup, link.

To configure a primary link and a backup link:

1. Configure the primary logical interface.

```
[edit interfaces interface-name]
user@host# set (fastether-options | gigether-options) 802.3ad aex primary
```

2. Configure the backup logical interface.

```
[edit interfaces interface-name]
user@host# set (fastether-options | gigether-options) 802.3ad aex backup
```

## Reverting Traffic to a Primary Link When Traffic is Passing Through a Backup Link

On aggregated Ethernet interfaces, you designate a primary and backup link to support link protection. Egress traffic passes only through the designated primary link. This includes transit traffic and locally generated traffic on the router or switch. When the primary link fails, traffic is routed through the backup link. Because some traffic loss is unavoidable, egress traffic is not automatically routed back to the primary link when the primary link is reestablished. Instead, you manually control when traffic should be diverted back to the primary link from the designated backup link.

To manually control when traffic should be diverted back to the primary link from the designated backup link, enter the following operational command:

```
user@host> request interface revert aex
```

## Disabling Link Protection for Aggregated Ethernet Interfaces

To disable link protection, issue the **delete interface revert aex** configuration command.

```
user@host# delete interfaces aex aggregated-ether-options link-protection
```



## Configuring Aggregated Ethernet Link Speed

On aggregated Ethernet interfaces, you can set the required link speed for all interfaces included in the bundle. Generally, all interfaces that make up a bundle must have the same speed. If you include in the aggregated Ethernet interface an individual link that has a speed different from the speed that you specify in the **link-speed** parameter, an error message is logged. However, starting with Junos OS Release 13.2, aggregated Ethernet supports the following mixed rates and mixed modes on T640, T1600, T4000, and TX Matrix Plus routers:

- Member links of different modes (WAN and LAN) for 10-Gigabit Ethernet links.
- Member links of different rates: 10-Gigabit Ethernet, 40-Gigabit Ethernet, 50-Gigabit Ethernet, 100-Gigabit Ethernet, and OC192 (10-Gigabit Ethernet WAN mode)



### NOTE:

- Member links of 50-Gigabit Ethernet can only be configured using the 50-Gigabit Ethernet interfaces of 100-Gigabit Ethernet PIC with CFP (PD-ICE-CFP-FPC4).
- Starting with Junos OS Release 13.2, 100-Gigabit Ethernet member links can be configured using the two 50-Gigabit Ethernet interfaces of 100-Gigabit Ethernet PIC with CFP. This 100-Gigabit Ethernet member link can be included in an aggregated Ethernet link that includes member links of other interfaces as well. In releases before Junos OS Release 13.2, the 100-Gigabit Ethernet member link configured using the two 50-Gigabit Ethernet interfaces of 100-Gigabit Ethernet PIC with CFP cannot be included in an aggregated Ethernet link that includes member links of other interfaces.

To configure member links of mixed rates and mixed modes on T640, T1600, T4000, and TX Matrix Plus routers, you need to configure the **mixed** option for the **[edit interfaces aex aggregated-ether-options link-speed]** statement.

To set the required link speed:

1. Specify that you want to configure the aggregated Ethernet options.

```
user@host# edit interfaces interface-name aggregated-ether-options
```

2. Configure the link speed.

```
[edit interfaces interface-name aggregated-ether-options]
user@host# set link-speed speed
```

**speed** can be in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).

Aggregated Ethernet interfaces on the M120 router can have one of the following speeds:



- **100m**—Links are 100 Mbps.
- **10g**—Links are 10 Gbps.
- **1g**—Links are 1 Gbps.
- **oc192**—Links are OC192 or STM64c.

Aggregated Ethernet links on EX Series switches can be configured to operate at one of the following speeds:

- **10m**—Links are 10 Mbps.
- **100m**—Links are 100 Mbps.
- **1g**—Links are 1 Gbps.
- **10g**—Links are 10 Gbps.
- **50g**—Links are 50 Gbps.

Aggregated Ethernet links on T Series routers can be configured to operate at one of the following speeds:

- **100g**—Links are 100 Gbps.
- **100m**—Links are 100 Mbps.
- **10g**—Links are 10 Gbps.
- **1g**—Links are 1 Gbps.
- **40g**—Links are 40 Gbps.
- **50g**—Links are 50 Gbps.
- **80g**—Links are 80 Gbps.
- **8g**—Links are 8 Gbps.
- **mixed**—Links are of various speeds.
- **oc192**—Links are OC192.

**Related  
Documentation**

- *aggregated-ether-options*
- *Configuring Mixed Aggregated Ethernet Links*
- *Ethernet Interfaces Feature Guide for Routing Devices*

---

## Configuring Aggregated Ethernet Minimum Links

On aggregated Ethernet interfaces, you can configure the minimum number of links that must be up for the bundle as a whole to be labeled **up**. By default, only one link must be up for the bundle to be labeled **up**.

To configure the minimum number of links:

1. Specify that you want to configure the aggregated Ethernet options.



```
user@host# edit interfaces interface-name aggregated-ether-options
```

2. Configure the minimum number of links.

```
[edit interfaces interface-name aggregated-ether-options]
```

```
user@host# set minimum-links number
```

On M120, M320, MX Series, T Series, and TX Matrix routers with Ethernet interfaces, and EX 9200 switches, the valid range for **minimum-links *number*** is 1 through 16. When the maximum value (16) is specified, all configured links of a bundle must be up for the bundle to be labeled **up**.

On all other routers and on EX Series switches, other than EX8200 switches, the range of valid values for **minimum-links *number*** is 1 through 8. When the maximum value (8) is specified, all configured links of a bundle must be up for the bundle to be labeled **up**.

On EX8200 switches, the range of valid values for **minimum-links *number*** is 1 through 12. When the maximum value (12) is specified, all configured links of a bundle must be up for the bundle to be labeled **up**.

If the number of links configured in an aggregated Ethernet interface is less than the minimum link value configured under the **aggregated-ether-options** statement, the configuration commit fails and an error message is displayed.

#### Related Documentation

- *aggregated-ether-options*
- *minimum-links*
- *Ethernet Interfaces Feature Guide for Routing Devices*

## Configuring Energy Efficient Ethernet on Interfaces (CLI Procedure)

Energy Efficient Ethernet (EEE), an Institute of Electrical and Electronics Engineers (IEEE) 802.3az standard, reduces the power consumption of physical layer devices (PHYs) during periods of low link utilization. EEE saves energy by putting part of the transmission circuit into low power mode when a link is idle.



**NOTE:** Configure EEE only on EEE-capable Base-T copper Ethernet ports. If you configure EEE on unsupported ports, the console displays the message: “EEE not supported”.

This topic describes:

- [Enabling EEE on an EEE-Capable Base-T Copper Ethernet Port on page 97](#)
- [Disabling EEE on a Base-T Copper Ethernet Port on page 98](#)

### Enabling EEE on an EEE-Capable Base-T Copper Ethernet Port

To enable EEE on an EEE-capable Base-T copper Ethernet interface:

```
[edit]
```

```
user@switch# set interfaces interface-name ether-options ieee-802-3az-eee
```



You can view the EEE status by using the **show interfaces *interface-name* detail** command.

## Disabling EEE on a Base-T Copper Ethernet Port

To disable EEE on a Base-T copper Ethernet interface:

```
[edit]
user@switch# delete interfaces interface-name ether-options ieee-802-3az-eee
```

By default, EEE is disabled on EEE-capable ports.

### Related Documentation

- [Verifying That EEE Is Saving Energy on Configured Ports on page 257](#)
- [Understanding How Energy Efficient Ethernet Reduces Power Consumption on Interfaces on page 16](#)

---

## Configuring Local Link Bias (CLI Procedure)

Local link bias is used to conserve bandwidth on Virtual Chassis ports (VCPs) by using local links to forward unicast traffic exiting a Virtual Chassis or Virtual Chassis Fabric (VCF) that has a link aggregation group (LAG) bundle composed of member links on different member switches in the same Virtual Chassis or VCF. A local link is a member link in the LAG bundle that is on the member switch that received the traffic. Because traffic is received and forwarded on the same member switch when local link bias is enabled, no VCP bandwidth is consumed by traffic traversing the VCPs to exit the Virtual Chassis or VCF on a different member link in the LAG bundle.

You should enable local link bias if you want to conserve VCP bandwidth by always forwarding egress unicast traffic on the LAG bundle out of a local link. You should not enable local link bias if you want egress traffic load-balanced across the member links in the LAG bundle as it exits the Virtual Chassis or VCF.

Local link bias can be enabled or disabled globally or per LAG bundle on a Virtual Chassis or VCF. In cases where local link bias is enabled at both the global and per LAG bundle levels, the per LAG bundle configuration takes precedence. For instance, if local link bias is enabled globally but disabled on a LAG bundle named **ae1**, local link bias is disabled on the LAG bundle named **ae1**.

- [Enabling Local Link Bias Globally on page 98](#)
- [Enabling Local Link Bias on a Single LAG Bundle in a Virtual Chassis or Virtual Chassis Fabric on page 99](#)
- [Disabling Local Link Bias Globally in a Virtual Chassis or Virtual Chassis Fabric on page 99](#)
- [Disabling Local Link Bias on a Single LAG Bundle in a Virtual Chassis or Virtual Chassis Fabric on page 99](#)

## Enabling Local Link Bias Globally

When local link bias is enabled globally, local link bias is enabled on all LAG bundles in the Virtual Chassis or VCF except the LAG bundles that have explicitly disabled local link bias.



To enable local link bias globally in a Virtual Chassis or VCF:

```
[edit]
user@switch# set forwarding-options local-bias (forwarding-options)
```

### Enabling Local Link Bias on a Single LAG Bundle in a Virtual Chassis or Virtual Chassis Fabric

When local link bias is enabled for a single LAG bundle, it remains enabled for that LAG bundle regardless of the global local link bias setting. If local link bias is enabled on a single LAG bundle but disabled globally, for instance, local link bias is enabled for the LAG bundle that was individually configured to enable local link bias but disabled for all other LAG bundles in the Virtual Chassis or VCF.

To enable local link bias on an individual LAG bundle:

```
[edit]
user@switch# set interface aex aggregated-ether-options local-bias (edit interfaces ae)
where aex is the name of the aggregated Ethernet link bundle.
```

For instance, to enable local link bias on aggregated Ethernet interface ae0:

```
[edit]
user@switch# set interface ae0 aggregated-ether-options local-bias
```

### Disabling Local Link Bias Globally in a Virtual Chassis or Virtual Chassis Fabric

You can disable local link bias globally if it was previously globally enabled.

When local link bias is disabled globally, local link bias is disabled on all LAG bundles in the Virtual Chassis or VCF except the LAG bundles that have explicitly enabled local link bias.

To disable local link bias globally in a Virtual Chassis or VCF:

```
[edit]
user@switch# set forwarding-options local-bias (forwarding-options) disable
```

### Disabling Local Link Bias on a Single LAG Bundle in a Virtual Chassis or Virtual Chassis Fabric

When local link bias is disabled for a single LAG bundle, it remains disabled for that LAG bundle regardless of the global local link bias setting. If local link bias is disabled on the LAG bundle named **ae1**, for instance, but enabled globally, local link bias is disabled on the LAG bundle named **ae1**.

To disable local link bias on an individual LAG bundle:

```
[edit]
user@switch# set interface aex aggregated-ether-options local-bias (edit interfaces ae) disable
where aex is the name of the aggregated Ethernet link bundle.
```

For instance, to disable local link bias on aggregated Ethernet interface ae0:

```
[edit]
user@switch# set interface ae0 aggregated-ether-options local-bias disable
```

#### Related Documentation

- [Understanding Local Link Bias on page 16](#)



## Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic (CLI Procedure)

---

Juniper Networks EX Series and QFX Series switches use a hashing algorithm to determine how to forward traffic over a Link Aggregation group (LAG) bundle or to the next-hop device when equal-cost multipath (ECMP) is enabled.

The hashing algorithm makes hashing decisions based on values in various packet fields, as well as on some internal values like source port ID and source device ID. You can configure some of the fields that are used by the hashing algorithm.

Configuring the fields used by the hashing algorithm is useful in scenarios where most of the traffic entering the bundle is similar and the traffic needs to be managed in the LAG bundle. For instance, if the only difference in the IP packets for all incoming traffic is the source and destination IP address, you can tune the hashing algorithm to make hashing decisions more efficiently by configuring the algorithm to make hashing decisions using only those fields.

- [Configuring the Hashing Algorithm to Use Fields in the Layer 2 Header for Hashing on page 100](#)
- [Configuring the Hashing Algorithm to Use Fields in the IP Payload for Hashing on page 101](#)
- [Configuring the Hashing Algorithm to Use Fields in the IPv6 Payload for Hashing on page 101](#)

### Configuring the Hashing Algorithm to Use Fields in the Layer 2 Header for Hashing

To configure the hashing algorithm to use fields in the Layer 2 header for hashing:

1. Configure the hash mode to Layer 2 header:

```
[edit forwarding-options enhanced-hash-key]
user@switch# set hash-mode layer2-header
```

The default hash mode is Layer 2 payload. Therefore, this step must be performed if you have not previously configured the hash mode.

2. Configure the fields in the Layer 2 header that the hashing algorithm uses for hashing:

```
[edit forwarding-options enhanced-hash-key]
user@switch# set layer2 {no-destination-mac-address | no-ether-type |
no-source-mac-address | vlan-id}
```

By default, the hashing algorithm uses the values in the destination MAC address, Ethertype, and source MAC address fields in the header to hash traffic on the LAG. You can configure the hashing algorithm to not use the values in these fields by configuring **no-destination-mac-address**, **no-ether-type**, or **no-source-mac-address**.

You can also configure the hashing algorithm to include the VLAN ID field in the header by configuring the **vlan-id** option.

If you want the hashing algorithm to not use the Ethertype field for hashing:

```
[edit forwarding-options enhanced-hash-key]
user@switch# set layer2 no-ether-type
```



## Configuring the Hashing Algorithm to Use Fields in the IP Payload for Hashing

To configure the hashing algorithm to use fields in the IP payload for hashing:

1. Configure the hash mode to Layer 2 payload:

```
[edit forwarding-options enhanced-hash-key]
user@switch# set hash-mode layer2-payload
```

The IP payload is not checked by the hashing algorithm unless the hash mode is set to Layer 2 payload. The default hash mode is Layer 2 payload.

2. Configure the fields in the IP payload that the hashing algorithm uses for hashing:

```
[edit forwarding-options enhanced-hash-key]
user@switch# set inet {no-ipv4-destination-address | no-ipv4-source-address |
no-l4-destination-port | no-l4-source-port | no-protocol | vlan-id}
```

For instance, if you want the hashing algorithm to ignore the Layer 4 destination port, Layer 4 source port, and protocol fields and instead hash traffic based only on the IPv4 source and destination addresses:

```
[edit forwarding-options enhanced-hash-key]
user@switch# set inet no-l4-destination-port no-l4-source-port no-protocol
```

## Configuring the Hashing Algorithm to Use Fields in the IPv6 Payload for Hashing

To configure the hashing algorithm to use fields in the IPv6 payload for hashing:

1. Configure the hash mode to Layer 2 payload:

```
[edit forwarding-options enhanced-hash-key]
user@switch# set hash-mode layer2-payload
```

The IPv6 payload is not checked by the hashing algorithm unless the hash mode is set to Layer 2 payload. The default hash mode is Layer 2 payload.

2. Configure the fields in the IPv6 payload that the hashing algorithm uses for hashing:

```
[edit forwarding-options enhanced-hash-key]
user@switch# set inet6 {no-ipv6-destination-address | no-ipv6-source-address |
no-l4-destination-port | no-l4-source-port | no-next-header | vlan-id}
```

For instance, if you want the hashing algorithm to ignore the Layer 4 destination port, Layer 4 source port, and the Next Header fields and instead hash traffic based only on the IPv6 source and IPv6 destination address fields only:

```
[edit forwarding-options enhanced-hash-key]
user@switch# set inet6 no-l4-destination-port no-l4-source-port no-next-header
```

### Related Documentation

- [Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic on page 11](#)
- [Understanding Aggregated Ethernet Interfaces and LACP on page 8](#)

## Configuring Tagged Aggregated Ethernet Interfaces

To specify aggregated Ethernet interfaces, include the **vlan-tagging** statement at the **[edit interfaces aex]** hierarchy level:



```
[edit interfaces aex]
vlan-tagging;
```

You must also include the **vlan-id** statement:

```
vlan-id number;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

For more information about the **vlan-tagging** and **vlan-id** statements, see “[802.1Q VLANs Overview](#)” on page 26.

**Related  
Documentation**

- *vlan-id*
- [vlan-tagging on page 252](#)

---

## Configuring a Layer 3 Subinterface (CLI Procedure)

EX Series switches use Layer 3 subinterfaces to divide a physical interface into multiple logical interfaces, each corresponding to a VLAN. The switch uses the Layer 3 subinterfaces to route traffic between subnets.

To configure Layer 3 subinterfaces, you enable VLAN tagging and partition one or more physical ports into multiple logical interfaces, each corresponding to a VLAN ID.

Before you begin, make sure you set up your VLANs. See *Configuring VLANs for EX Series Switches (CLI Procedure)* or *Configuring VLANs for EX Series Switches (J-Web Procedure)*.

To configure Layer 3 subinterfaces:

1. Enable VLAN tagging:

```
[edit interfaces interface-name]
user@switch# set vlan-tagging
```

2. Bind each VLAN ID to a logical interface:

```
[edit interfaces interface-name]
user@switch# set unit logical-unit-number vlan-id (VLAN Tagging and Layer 3 Subinterfaces)
vlan-id-number
```

**Related  
Documentation**

- *Example: Configuring Layer 3 Subinterfaces for a Distribution Switch and an Access Switch*
- [Verifying That Layer 3 Subinterfaces Are Working on page 260](#)
- [Understanding Layer 3 Subinterfaces on page 18](#)



## Configuring Unicast RPF (CLI Procedure)

Unicast reverse-path forwarding (RPF) can help protect your LAN from denial-of-service (DoS) and distributed denial-of-service (DDoS) attacks on untrusted interfaces. Enabling unicast RPF on the switch interfaces filters traffic with source addresses that do not use the incoming interface as the best return path back to the source. When a packet comes into an interface, if that interface is not the best return path to the source, the switch discards the packet. If the incoming interface is the best return path to the source, the switch forwards the packet.



**NOTE:** On EX3200, EX4200, and EX4300 switches, you can enable unicast RPF only globally—that is, on all switch interfaces. You cannot enable unicast RPF on a per-interface basis.

Before you begin:

- On an EX8200, EX6200, QFX Series switch, or OCX Series switch, ensure that the selected switch interface is symmetrically routed before you enable unicast RPF. A symmetrically routed interface is an interface that uses the same route in both directions between the source and the destination. Do not enable unicast RPF on asymmetrically routed interfaces. An asymmetrically routed interface uses different paths to send and receive packets between the source and the destination.
- On an EX3200, EX4200, or EX4300 switch, ensure that *all* switch interfaces are symmetrically routed before you enable unicast RPF on an interface. When you enable unicast RPF on any interface, it is enabled globally on all switch interfaces. Do not enable unicast RPF on asymmetrically routed interfaces. An asymmetrically routed interface uses different paths to send and receive packets between the source and the destination.

To enable unicast RPF, configure it explicitly on a selected customer-edge interface:

[edit interfaces]

```
user@switch# set ge-1/0/10 unit 0 family inet rpf-check
```



**BEST PRACTICE:** On EX3200, EX4200, and EX4300 switches, unicast RPF is enabled globally on *all* switch interfaces, regardless of whether you configure it explicitly on only one interface or only on some interfaces.

On EX3200, EX4200, and EX4300 switches, we recommend that you enable unicast RPF explicitly on either all interfaces or only one interface. To avoid possible confusion, do not enable it on only some interfaces:

- Enabling unicast RPF explicitly on only one interface makes it easier if you choose to disable it in the future because you must explicitly disable unicast RPF on every interface on which you explicitly enabled it. If you explicitly enable unicast RPF on two interfaces and you disable it on only one



interface, unicast RPF is still implicitly enabled globally on the switch. The drawback of this approach is that the switch displays the flag that indicates that unicast RPF is enabled only on interfaces on which unicast RPF is explicitly enabled, so even though unicast RPF is enabled on all interfaces, this status is not displayed.

- Enabling unicast RPF explicitly on all interfaces makes it easier to know whether unicast RPF is enabled on the switch because every interface shows the correct status. (Only interfaces on which you explicitly enable unicast RPF display the flag that indicates that unicast RPF is enabled.) The drawback of this approach is that if you want to disable unicast RPF, you must explicitly disable it on every interface. If unicast RPF is enabled on any interface, it is implicitly enabled on all interfaces.

---

**Related  
Documentation**

- *Example: Configuring Unicast RPF on an EX Series Switch*
- [Verifying Unicast RPF Status on page 261](#)
- [Disabling Unicast RPF \(CLI Procedure\) on page 104](#)
- [Troubleshooting Unicast RPF on page 357](#)
- [Understanding Unicast RPF on page 19](#)

---

## Disabling Unicast RPF (CLI Procedure)

Unicast reverse-path forwarding (RPF) can help protect your LAN from denial-of-service (DoS) and distributed denial-of-service (DDoS) attacks on untrusted interfaces. Unicast RPF filters traffic with source addresses that do not use the incoming interface as the best return path back to the source. If the network configuration changes so that an interface that has unicast RPF enabled becomes a trusted interface or becomes asymmetrically routed (the interface that receives a packet is not the best return path to the packet's source), disable unicast RPF.

To disable unicast RPF on an EX3200, EX4200, or EX4300 switch, you must delete it from every interface on which you explicitly configured it. If you do not disable unicast RPF on every interface on which you explicitly enabled it, it remains implicitly enabled on all interfaces. If you attempt to delete unicast RPF from an interface on which it was not explicitly enabled, the **warning: statement not found** message appears. If you do not disable unicast RPF on every interface on which you explicitly enabled it, unicast RPF remains implicitly enabled on all interfaces of the EX3200, EX4200, or EX4300 switch.

On EX8200, EX6200, QFX Series switches, and OCX Series switches, the switch does not apply unicast RPF to an interface unless you explicitly enable that interface for unicast RPF.



To disable unicast RPF, delete its configuration from the interface:

[edit interfaces]

user@switch# **delete ge-1/0/10 unit 0 family inet rpf-check**



**NOTE:** On EX3200, EX4200, and EX4300 switches, if you do not disable unicast RPF on every interface on which you explicitly enabled it, unicast RPF remains implicitly enabled on all interfaces.

#### Related Documentation

- [Example: Configuring Unicast RPF on an EX Series Switch](#)
- [Verifying Unicast RPF Status on page 261](#)
- [Configuring Unicast RPF \(CLI Procedure\) on page 103](#)
- [Understanding Unicast RPF on page 19](#)

## Configuring IP Directed Broadcast (CLI Procedure)



**NOTE:** This task uses Junos OS for EX Series switches with support for the Enhanced Layer 2 Software (ELS) configuration style. If your switch runs software that does not support ELS, see *Configuring IP Directed Broadcast (CLI Procedure)*. For ELS details, see *Getting Started with Enhanced Layer 2 Software*.

You can use IP directed broadcast on an EX Series switch to facilitate remote network management by sending broadcast packets to hosts on a specified subnet without broadcasting to the entire network. IP directed broadcast packets are broadcast on only the target subnet. The rest of the network treats IP directed broadcast packets as unicast packets and forwards them accordingly.

Before you begin to configure IP directed broadcast:

- Ensure that the subnet on which you want broadcast packets using IP direct broadcast is not directly connected to the Internet.
- Configure an integrated routing and bridging (IRB) interface or routed VLAN interface (RVI) for the subnet that will be enabled for IP direct broadcast. See *Configuring Integrated Routing and Bridging Interfaces (CLI Procedure)*, *Configuring Routed VLAN Interfaces (CLI Procedure)*, or *Configuring VLANs for EX Series Switches (J-Web Procedure)*.



**NOTE:** We recommend that you do not enable IP directed broadcast on subnets that have a direct connection to the Internet because of increased exposure to denial-of-service (DoS) attacks.



To enable IP directed broadcast for a specified subnet:

1. Add the target subnet's logical interfaces to the VLAN:

```
[edit interfaces]
user@switch# set ge-0/0/0.0 family ethernet-switching vlan members vl
user@switch# set ge-0/0/1.0 family ethernet-switching vlan members vl
```

2. Configure the Layer 3 interface on the VLAN that is the target of the IP directed broadcast packets:

```
[edit interfaces]
user@switch# set irb.1 family inet address 10.1.2.1/24
```

3. Associate a Layer 3 interface with the VLAN:

```
[edit vlans]
user@switch# set vl l3-interface (VLANs) irb.1
```

4. Enable the Layer 3 interface for the VLAN to receive IP directed broadcasts:

```
[edit interfaces]
user@switch# set irb.1 family inet targeted-broadcast
```

**Related  
Documentation**

- *Example: Configuring IP Directed Broadcast on an EX Series Switch*
- [Understanding IP Directed Broadcast for EX Series Switches on page 23](#)

---

## Tracing Operations of an Individual Router or Switch Interface

To trace the operations of individual router or switch interfaces, include the **traceoptions** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]
traceoptions {
 flag flag;
}
```

You can specify the following interface tracing flags:

- **all**—Trace all interface operations.
- **event**—Trace all interface events.
- **ipc**—Trace all interface interprocess communication (IPC) messages.
- **media**—Trace all interface media changes.

The interfaces **traceoptions** statement does not support a trace file. The logging is done by the kernel, so the tracing information is placed in the system **syslog** files.

**Related  
Documentation**

- *Tracing Operations of the Interface Process*
- *Tracing Interface Operations Overview*

---

## Tracing Operations of the Interface Process

To trace the operations of the router or switch interface process, dcd, include the **traceoptions** statement at the **[edit interfaces]** hierarchy level:



```
[edit interfaces]
traceoptions {
 file <filename> <files number> <match regular-expression> <size size> <world-readable |
 no-world-readable>;
 flag <flag> <disable>;
 no-remote-trace;
}
```

By default, interface process operations are placed in the file named dcd and three 1-MB files of tracing information are maintained.

You can specify the following flags in the **interfaces traceoptions** statement:

- **change-events**—Log changes that produce configuration events.
- **config-states**—Log the configuration state machine changes.
- **kernel**—Log configuration IPC messages to kernel.
- **kernel-detail**—Log details of configuration messages to kernel.

For general information about tracing, see the tracing and logging information in the *Junos OS Administration Library for Routing Devices*.

**Related  
Documentation**

- *Tracing Interface Operations Overview*
- [Tracing Operations of an Individual Router or Switch Interface on page 106](#)







## CHAPTER 3

# Configuration Statements

- [\[edit chassis\] Configuration Statement Hierarchy on EX Series Switches on page 111](#)
- [\[edit forwarding-options\] Configuration Statement Hierarchy on EX Series Switches on page 113](#)
- [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches on page 114](#)
- [\[edit interfaces ae\] Configuration Statement Hierarchy on EX Series Switches on page 115](#)
- [\[edit interfaces et\] Configuration Statement Hierarchy on EX Series Switches on page 120](#)
- [\[edit interfaces ge\] Configuration Statement Hierarchy on EX Series Switches on page 126](#)
- [\[edit interfaces interface-range\] Configuration Statement Hierarchy on EX Series Switches on page 132](#)
- [\[edit interfaces irb\] Configuration Statement Hierarchy on EX Series Switches on page 140](#)
- [\[edit interfaces lo\] Configuration Statement Hierarchy on EX Series Switches on page 144](#)
- [\[edit interfaces me\] Configuration Statement Hierarchy on EX Series Switches on page 147](#)
- [\[edit interfaces vme\] Configuration Statement Hierarchy on EX Series Switches on page 150](#)
- [\[edit interfaces xe\] Configuration Statement Hierarchy on EX Series Switches on page 154](#)
- [\[edit protocols lisp\] Configuration Statement Hierarchy on EX Series Switches on page 159](#)
- [802.3ad on page 161](#)
- [accounting-profile on page 162](#)
- [address on page 163](#)
- [aggregated-devices on page 165](#)
- [aggregated-ether-options on page 166](#)
- [arp \(Interfaces\) on page 168](#)
- [auto-negotiation on page 169](#)
- [backup-liveness-detection on page 170](#)



- [backup-peer-ip](#) on page 171
- [bandwidth \(Interfaces\)](#) on page 172
- [broadcast](#) on page 173
- [chassis](#) on page 174
- [description \(Interfaces\)](#) on page 176
- [device-count](#) on page 177
- [disable \(Interface\)](#) on page 178
- [enhanced-hash-key](#) on page 180
- [ether-options](#) on page 182
- [ethernet \(Aggregated Devices\)](#) on page 183
- [eui-64](#) on page 183
- [family](#) on page 184
- [filter](#) on page 190
- [flow-control](#) on page 191
- [force-up](#) on page 192
- [gratuitous-arp-reply](#) on page 192
- [hash-mode](#) on page 193
- [hold-time \(Physical Interface\)](#) on page 195
- [iccp](#) on page 197
- [ieee-802-3az-eee](#) on page 198
- [inet \(enhanced-hash-key\)](#) on page 199
- [inet6 \(enhanced-hash-key\)](#) on page 201
- [interface \(Multichassis Protection\)](#) on page 202
- [interface-mode](#) on page 203
- [interface-range](#) on page 205
- [lACP \(Aggregated Ethernet\)](#) on page 207
- [lACP \(802.3ad\)](#) on page 209
- [layer2 \(enhanced-hash-key\)](#) on page 210
- [link-mode](#) on page 212
- [link-protection](#) on page 214
- [link-speed \(Aggregated Ethernet\)](#) on page 216
- [liveness-detection](#) on page 217
- [local-bias \(edit interfaces ae\)](#) on page 218
- [local-bias \(forwarding-options\)](#) on page 219
- [local-ip-addr \(ICCP\)](#) on page 220
- [loopback \(Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet\)](#) on page 221
- [mc-ae](#) on page 222



- [mc-ae-id](#) on page 224
- [member \(Interface Ranges\)](#) on page 225
- [member-range](#) on page 226
- [members](#) on page 227
- [minimum-interval \(Liveness Detection\)](#) on page 229
- [minimum-receive-interval \(Liveness Detection\)](#) on page 229
- [mtu](#) on page 230
- [multi-chassis](#) on page 232
- [multi-chassis-protection](#) on page 233
- [native-vlan-id](#) on page 234
- [no-gratuitous-arp-request](#) on page 235
- [no-redirects](#) on page 235
- [peer \(ICCP\)](#) on page 236
- [periodic](#) on page 237
- [preferred](#) on page 238
- [primary \(Address on Interface\)](#) on page 239
- [proxy-arp](#) on page 240
- [rpf-check](#) on page 241
- [session-establishment-hold-time](#) on page 242
- [speed \(Ethernet\)](#) on page 243
- [traceoptions \(Individual Interfaces\)](#) on page 244
- [traceoptions \(Interface Process\)](#) on page 246
- [transmit-interval \(Liveness Detection\)](#) on page 247
- [traps](#) on page 248
- [unit](#) on page 249
- [vlan \(802.1Q Tagging\)](#) on page 250
- [vlan-id \(VLAN Tagging and Layer 3 Subinterfaces\)](#) on page 251
- [vlan-tagging](#) on page 252

---

## [\[edit chassis\]](#) Configuration Statement Hierarchy on EX Series Switches

This topic lists supported and unsupported configuration statements in the **[edit chassis]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).



This topic lists:

- [Supported Statements in the \[edit chassis\] Hierarchy Level on page 112](#)

## Supported Statements in the [edit chassis] Hierarchy Level

The following hierarchy shows the **[edit chassis]** configuration statements supported on EX Series switches:

```
chassis {
 aggregated-devices {
 ethernet {
 device-count number;
 lACP {
 link-protection non-revertive;
 system-priority system-priority-number
 }
 }
 }
 alarm {
 ethernet {
 link-down (ignore | red | yellow);
 }
 management-ethernet {
 link-down (ignore | red | yellow);
 }
 }
 container-devices {
 device-count device-count-number;
 }
 disk-partition {
 /config {
 level (full | high) {
 free-space (free-space-threshold-value | mb | percent);
 }
 }
 /var {
 level (full | high) {
 free-space (free-space-threshold-value | mb | percent);
 }
 }
 }
 fpc slot-number {
 pic pic-number {
 no-multi-rate;
 q-pic-large-buffer (large-scale | small-scale);
 }
 }
 maximum-ecmp maximum-ecmp-routes;
 lcd-menu {
 fpc slot-number {
 menu-item menu-name;
 disable;
 }
 }
 pseudowire-service {
```



```

 device-count device-count-number;
 }
 psu {
 redundancy {
 n-plus-n;
 }
 redundancy {
 graceful-switchover;
 }
 slow-pfe-alarm;
 }
}

```

**Related  
Documentation**

- [Configuring Aggregated Ethernet Links \(CLI Procedure\) on page 84](#)
- [Configuring the LCD Panel on EX Series Switches \(CLI Procedure\)](#)
- [Configuring Graceful Routing Engine Switchover in a Virtual Chassis \(CLI Procedure\)](#)
- [Configuring Power Supply Redundancy \(CLI Procedure\)](#)
- [Configuring the Power Priority of Line Cards \(CLI Procedure\)](#)
- [Configuring Line-Card Upgrade Groups for Nonstop Software Upgrade \(CLI Procedure\)](#)

## [\[edit forwarding-options\] Configuration Statement Hierarchy on EX Series Switches](#)

This topic lists supported and unsupported configuration subhierarchies in the **[edit forwarding-options]** hierarchy level on EX Series switches.

- *Supported* subhierarchies are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* subhierarchies are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).
- [Supported Subhierarchies in the \[edit forwarding-options\] Hierarchy Level on page 113](#)
- [Unsupported Subhierarchies in the \[edit forwarding-options\] Hierarchy Level on page 114](#)

### Supported Subhierarchies in the [edit forwarding-options] Hierarchy Level

The following list shows the **[edit forwarding-options]** subhierarchies supported on EX Series switches:

Each of the following topics lists the statements at a subhierarchy of the **[edit forwarding-options]** hierarchy.

- [\[edit forwarding-options analyzer\] Configuration Statement Hierarchy](#)
- [\[edit forwarding-options dhcp-relay\] Configuration Statement Hierarchy for EX Series Switches](#)
- [\[edit forwarding-options enhanced-hash-key\] Configuration Statement Hierarchy on EX Series Switches](#)



- [\[edit forwarding-options port-mirroring\] Configuration Statement Hierarchy](#)
- [\[edit forwarding-options storm-control-profiles\] Configuration Statement Hierarchy for EX Series Switches](#)

## Unsupported Subhierarchies in the [edit forwarding-options] Hierarchy Level

All subhierarchies in the **[edit forwarding-options]** hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented with the following exceptions:

**Table 32: Unsupported [edit forwarding-options] Subhierarchies on EX Series Switches**

| Subhierarchy | Hierarchy Level           |
|--------------|---------------------------|
| accounting   | [edit forwarding-options] |
| helpers      | [edit forwarding-options] |
| sampling     | [edit forwarding-options] |

### Related Documentation

- [Notational Conventions Used in Junos OS Configuration Hierarchies](#)

## [edit interfaces] Configuration Statement Hierarchy on EX Series Switches

Each of the following topics lists the statements at a subhierarchy of the **[edit interfaces]** hierarchy:

- [\[edit interfaces ae\] Configuration Statement Hierarchy on EX Series Switches on page 115](#)
- [\[edit interfaces et\] Configuration Statement Hierarchy on EX Series Switches on page 120](#)
- [\[edit interfaces ge\] Configuration Statement Hierarchy on EX Series Switches on page 126](#)
- [\[edit interfaces interface-range\] Configuration Statement Hierarchy on EX Series Switches on page 132](#)
- [\[edit interfaces irb\] Configuration Statement Hierarchy on EX Series Switches on page 140](#)
- [\[edit interfaces lo\] Configuration Statement Hierarchy on EX Series Switches on page 144](#)
- [\[edit interfaces me\] Configuration Statement Hierarchy on EX Series Switches on page 147](#)
- [\[edit interfaces vme\] Configuration Statement Hierarchy on EX Series Switches on page 150](#)
- [\[edit interfaces xe\] Configuration Statement Hierarchy on EX Series Switches on page 154](#)



- Related Documentation**
- [EX Series Switches Interfaces Overview on page 3](#)
  - [Configuring Aggregated Ethernet Links \(CLI Procedure\) on page 84](#)
  - [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\)](#)
  - [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\) on page 32](#)
  - [Configuring a Layer 3 Subinterface \(CLI Procedure\) on page 102](#)
  - [Configuring Integrated Routing and Bridging Interfaces \(CLI Procedure\)](#)
  - [Configuring the Virtual Management Ethernet Interface for Global Management of an EX Series Virtual Chassis \(CLI Procedure\)](#)
  - [Junos OS Interfaces Fundamentals Configuration Guide](#)
  - [Junos OS Ethernet Interfaces Configuration Guide](#)

## [edit interfaces ae] Configuration Statement Hierarchy on EX Series Switches

This topic lists supported and unsupported configuration statements in the **[edit interfaces ae]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).

This topic lists:

- [Supported Statements in the \[edit interfaces ae\] Hierarchy Level on page 115](#)
- [Unsupported Statements in the \[edit interfaces ae\] Hierarchy Level on page 119](#)

### Supported Statements in the [edit interfaces ae] Hierarchy Level

The following hierarchy shows the **[edit interfaces ae]** configuration statements supported on EX Series switches.

```

interfaces {
 aeX {
 accounting-profile name;
 aggregated-ether-options {
 ethernet-switch-profile {
 tag-protocol-id identifiers;
 }
 (flow-control | no-flow-control);
 lacp {
 (active | passive);
 link-protection {
 disable;
 (revertive | non-revertive);
 }
 }
 }
 }
}

```



```

 }
 periodic interval;
 system-priority number;
}
(link-protection | no-link-protection);
link-speed speed;
local-bias (edit interfaces ae);
(loopback | no-loopback);
mc-ae {
 chassis-id chassis-id;
 events {
 iccp-peer-down {
 force-icl-down;
 prefer-status-control-active;
 }
 }
 init-delay-time seconds;
 mc-ae-id mc-ae-id;
 mode (active-active | active-standby);
 redundancy-group group-id;
 revert-time revert-time;
 status-control (active | standby);
 switchover-mode (non-revertive | revertive);
}
minimum-links number;
rebalance-periodic;
}
description text;
disable;
encapsulation type;
flexible-vlan-tagging;
(gratuitous-arp-reply | no-gratuitous-arp-reply);
mtu bytes;
native-vlan-id
no-gratuitous-arp-request;
traceoptions {
 flag flag;
}
(traps | no-traps);
unit logical-unit-number {
 accounting-profile name;
 arp-resp (restricted | unrestricted);
 bandwidth rate;
 description text;
 disable;
 encapsulation type;
 family ccc {
 filter {
 group group-number;
 input filter-name;
 input-list [filter-names];
 output filter-name;
 output-list [filter-names];
 }
 policer {
 input policer-name;

```



```

 output policer-name;
 }
}
family ethernet-switching {
 filter {
 input filter-name;
 output filter-name;
 }
 interface-mode (access | trunk);
 recovery-timeout seconds;
 storm-control profile-name;
 vlan {
 members [members];
 }
}
family inet {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
 address ipv4-address {
 arp ip-address (mac | multicast-mac) mac-address <publish>;
 broadcast address;
 preferred;
 primary;
 vrrp-group group-number {
 (accept-data | no-accept-data);
 advertise-interval seconds;
 advertisements-threshold number;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 (preempt | no-preempt) {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-address [addresses];
 vrrp-inherit-from {
 active-group group-number;
 active-interface interface-name;
 }
 }
 }
}
filter {
 input filter-name;
 output filter-name;
}

```



```

mtu bytes;
no-neighbor-learn;
no-redirects;
primary;
rpf-check {
 fail-filter filter-name;
 mode {
 loose;
 }
}
}
family inet6 {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
}
address address {
 eui-64;
 ndp ip-address (mac | multicast-mac) mac-address <publish>;
 preferred;
 primary;
 vrrp-inet6-group group-id {
 accept-data | no-accept-data;
 advertisements-threshold number;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 inet6-advertise-interval milliseconds;
 preempt | no-preempt {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-inet6-address [addresses];
 virtual-link-local-address ipv6-address;
 vrrp-inherit-from {
 active-group group-name;
 active-interface interface-name;
 }
 }
}
(dad-disable | no-dad-disable);
filter {
 input filter-name;
 output filter-name;
}
mtu bytes;

```



```

nd6-stale-time time;
no-neighbor-learn;
no-redirects;
policer {
 input policer-name;
 output policer-name;
}
rpf-check {
 fail-filter filter-name;
 mode {
 loose;
 }
}
}
family iso {
 address interface-address;
 mtu bytes;
}
input-vlan-map action;
output-vlan-map action;
proxy-arp (restricted | unrestricted);
(traps | no-traps);
vlan-id vlan-id;
vlan-id-list [vlan-id vlan-id-vlan-id];
vlan-id (VLAN Tagging and Layer 3 Subinterfaces) vlan-id-number;
vlan-tagging;
}
}

```

### Unsupported Statements in the [edit interfaces ae] Hierarchy Level

All statements in the [edit interfaces ae] hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented with the following exceptions:

Table 33: Unsupported [edit interfaces ae] Configuration Statements for EX Series Switches

| Statement            | Hierarchy                                          |
|----------------------|----------------------------------------------------|
| stacked-vlan-tagging | [edit interfaces ae]                               |
| admin-key            | [edit interfaces ae aggregated-ether-options lacp] |
| system-id            | [edit interfaces ae aggregated-ether-options lacp] |
| layer2-policer       | [edit interfaces ae unit]                          |
| native-inner-vlan-id | [edit interfaces ae unit]                          |
| swap-by-poppush      | [edit interfaces ae unit]                          |
| vlan-id-range        | [edit interfaces ae unit]                          |
| vlan-tags            | [edit interfaces ae unit]                          |



Table 33: Unsupported [edit interfaces ae] Configuration Statements for EX Series Switches (*continued*)

| Statement           | Hierarchy                                                                 |
|---------------------|---------------------------------------------------------------------------|
| mpls                | [edit interfaces ae unit family]                                          |
| vpls                | [edit interfaces ae unit family]                                          |
| bridge-domain-type  | [edit interfaces ae unit family ethernet-switching]                       |
| inner-vlan-id-list  | [edit interfaces ae unit family ethernet-switching]                       |
| vlan-rewrite        | [edit interfaces ae unit family ethernet-switching]                       |
| policer             | [edit interfaces ae unit family inet]                                     |
| sampling            | [edit interfaces ae unit family inet]                                     |
| service             | [edit interfaces ae unit family inet]                                     |
| simple-filter       | [edit interfaces ae unit family inet]                                     |
| targeted-broadcast  | [edit interfaces ae unit family inet]                                     |
| unnumbered-address  | [edit interfaces ae unit family inet]                                     |
| bandwidth-threshold | [edit interfaces ae unit family inet address vrrp-group track interface]  |
| service             | [edit interfaces ae unit family inet6]                                    |
| bandwidth-threshold | [edit interfaces ae unit family inet6 address vrrp-group track interface] |
| group               | [edit interfaces ae unit family inet6 filter]                             |
| pop                 | [edit interfaces ae unit input-vlan-map]                                  |
| push                | [edit interfaces ae unit output-vlan-map]                                 |

**Related Documentation** • [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches on page 114](#)

## [\[edit interfaces et\] Configuration Statement Hierarchy on EX Series Switches](#)

This topic lists supported and unsupported configuration statements in the **[edit interfaces et]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.



- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).

This topic lists:

- [Supported Statements in the \[edit interfaces et\] Hierarchy Level on page 121](#)
- [Unsupported Statements in the \[edit interfaces et\] Hierarchy Level on page 124](#)

## Supported Statements in the [edit interfaces et] Hierarchy Level

The following hierarchy shows the [edit interfaces et] configuration statements supported on EX Series switches.

```

interfaces {
 et-fpc/pic/port {
 accounting-profile name;
 description text;
 disable;
 encapsulation type;
 ether-options {
 802.3ad {
 aex;
 (backup | primary);
 lacp {
 force-up;
 port-priority number;
 }
 }
 }
 ethernet-switch-profile {
 tag-protocol-id [tpids];
 }
 (flow-control | no-flow-control);
 (loopback | no-loopback);
 no-auto-mdix;
 }
 flexible-vlan-tagging;
 (gratuitous-arp-reply | no-gratuitous-arp-reply);
 hold-time up milliseconds down milliseconds;
 mtu bytes;
 native-vlan-id
 no-gratuitous-arp-request;
 traceoptions {
 flag flag;
 }
 (traps | no-traps);
 unit logical-unit-number {
 accounting-profile name;
 bandwidth rate;
 description text;
 disable;
 encapsulation type;
 family ccc;
 }
}

```



```

filter {
 group group-number;
 input filter-name;
 input-list [filter-names];
 output filter-name;
 output-list [filter-names];
}
policer {
 input policer-name;
 output policer-name;
}
}
family ethernet-switching {
 filter {
 input filter-name;
 output filter-name;
 }
 interface-mode (access | trunk);
 recovery-timeout seconds;
 storm-control profile-name;
 vlan {
 members (vlan-name | [-vlan-names] | all);
 }
}
family inet {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
}
address ipv4-address {
 arp ip-address (mac | multicast-mac) mac-address <publish>;
 broadcast address;
 preferred;
 primary;
 vrrp-group group-number {
 (accept-data | no-accept-data);
 advertise-interval seconds;
 advertisements-threshold number;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 (preempt | no-preempt) {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-address [addresses];
 }
}

```



```

 vrrp-inherit-from {
 active-group group-number;
 active-interface interface-name;
 }
 }
}
filter {
 input filter-name;
 output filter-name;
}
mtu bytes;
no-neighbor-learn;
no-redirects;
primary;
rpf-check {
 fail-filter filter-name;
 mode {
 loose;
 }
}
}
family inet6 {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
}
address address {
 eui-64;
 ndp ip-address (mac | multicast-mac) mac-address <publish>;
 preferred;
 primary;
 vrrp-inet6-group group-id {
 accept-data | no-accept-data;
 advertisements-threshold number;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 inet6-advertise-interval milliseconds;
 preempt | no-preempt {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-inet6-address [addresses];
 virtual-link-local-address ipv6-address;
 vrrp-inherit-from {
 active-group group-name;

```



```

 active-interface interface-name;
 }
}
(dad-disable | no-dad-disable);
filter {

 input filter-name;

 output filter-name;

}
mtu bytes;
nd6-stale-time time;
no-neighbor-learn;
no-redirects;
policer {
 input policer-name;
 output policer-name;
}
rpf-check {
 fail-filter filter-name;
 mode {
 loose;
 }
}
}
family iso {
 address interface-address;
 mtu bytes;
}
input-vlan-map action;
output-vlan-map action;
proxy-arp (restricted | unrestricted);
swap-by-poppush;
(traps | no-traps);
vlan-id vlan-id-number;
vlan-id-list [vlan-id vlan-id–vlan-id];
}
vlan-tagging;
}
}

```

### Unsupported Statements in the [edit interfaces et] Hierarchy Level

All statements in the [edit interfaces et] hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented with the following exceptions:

Table 34: Unsupported [edit interfaces et] Configuration Statements for EX Series Switches

| Statement            | Hierarchy            |
|----------------------|----------------------|
| passive-monitor-mode | [edit interfaces et] |



Table 34: Unsupported [edit interfaces et] Configuration Statements for EX Series Switches (*continued*)

| Statement                 | Hierarchy                                           |
|---------------------------|-----------------------------------------------------|
| stacked-vlan-tagging      | [edit interfaces et]                                |
| asynchronous-notification | [edit interfaces et ether-options]                  |
| ignore-l3-incompletes     | [edit interfaces et ether-options]                  |
| mpls                      | [edit interfaces et ether-options]                  |
| source-address-filter     | [edit interfaces et ether-options]                  |
| source-filtering          | [edit interfaces et ether-options]                  |
| no-source-filtering       | [edit interfaces et ether-options]                  |
| accept-source-mac         | [edit interfaces et unit]                           |
| layer2-policer            | [edit interfaces et unit]                           |
| native-inner-vlan-id      | [edit interfaces et unit]                           |
| vlan-id-range             | [edit interfaces et unit]                           |
| vlan-tags                 | [edit interfaces et unit]                           |
| mpls                      | [edit interfaces et unit family]                    |
| tcc                       | [edit interfaces et unit family]                    |
| vpls                      | [edit interfaces et unit family]                    |
| bridge-domain-type        | [edit interfaces et unit family ethernet-switching] |
| inner-vlan-id-list        | [edit interfaces et unit family ethernet-switching] |
| vlan-rewrite              | [edit interfaces et unit family ethernet-switching] |
| policer                   | [edit interfaces et unit family inet]               |
| sampling                  | [edit interfaces et unit family inet]               |
| service                   | [edit interfaces et unit family inet]               |
| targeted-broadcast        | [edit interfaces et unit family inet]               |
| unnumbered-address        | [edit interfaces et unit family inet]               |



Table 34: Unsupported [edit interfaces et] Configuration Statements for EX Series Switches (*continued*)

| Statement           | Hierarchy                                                                 |
|---------------------|---------------------------------------------------------------------------|
| bandwidth-threshold | [edit interfaces et unit family inet address vrrp-group track interface]  |
| service             | [edit interfaces et unit family inet6]                                    |
| bandwidth-threshold | [edit interfaces et unit family inet6 address vrrp-group track interface] |
| group               | [edit interfaces et unit family inet6 filter]                             |
| pop                 | [edit interfaces et unit input-vlan-map]                                  |
| push                | [edit interfaces et unit output-vlan-map]                                 |

**Related Documentation**

- [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches on page 114](#)

## [\[edit interfaces ge\] Configuration Statement Hierarchy on EX Series Switches](#)

This topic lists supported and unsupported configuration statements in the **[edit interfaces ge]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).

This topic lists:

- [Supported Statements in the \[edit interfaces ge\] Hierarchy Level on page 126](#)
- [Unsupported Statements in the \[edit interfaces ge\] Hierarchy Level on page 130](#)

### Supported Statements in the [edit interfaces ge] Hierarchy Level

The following hierarchy shows the **[edit interfaces ge]** configuration statements supported on EX Series switches.

```

interfaces {
 ge-fpc/pic/port {
 accounting-profile name;
 description text;
 disable;
 encapsulation type;
 ether-options {
 802.3ad {
 aex;
 }
 }
 }
}

```



```

 (backup | primary);
 lacp {
 force-up;
 port-priority number;
 }
}
(auto-negotiation | no-auto-negotiation);
ethernet-switch-profile {
 tag-protocol-id [tpids];
}
(flow-control | no-flow-control);
ieee-802-3az-eee;
(loopback | no-loopback);
no-auto-mdix;
}
flexible-vlan-tagging;
(gratuitous-arp-reply | no-gratuitous-arp-reply);
hold-time up milliseconds down milliseconds;
link-mode {
 full-duplex;
}
mtu bytes;
native-vlan-id
no-gratuitous-arp-request;
speed speed;
traceoptions {
 flag flag;
}
(traps | no-traps);
unit logical-unit-number {
 accounting-profile name;
 arp-resp (restricted | unrestricted);
 bandwidth rate;
 description text;
 disable;
 encapsulation type;
 family ccc;
 filter {
 group group-number;
 input filter-name;
 input-list [filter-names];
 output filter-name;
 output-list [filter-names];
 }
 policer {
 input policer-name;
 output policer-name;
 }
}
family ethernet-switching {
 filter {
 input filter-name;
 output filter-name;
 }
 interface-mode (access | trunk);
 recovery-timeout seconds;

```



```
storm-control profile-name;
vlan {
 members (vlan-name | [-vlan-names] | all);
}
}
family inet {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
}
address ipv4-address {
 arp ip-address (mac | multicast-mac) mac-address <publish>;
 broadcast address;
 preferred;
 primary;
 vrrp-group group-number {
 (accept-data | no-accept-data);
 advertise-interval seconds;
 advertisements-threshold number;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 (preempt | no-preempt) {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-address [addresses];
 vrrp-inherit-from {
 active-group group-number;
 active-interface interface-name;
 }
 }
}
}
filter {
 input filter-name;
 output filter-name;
}
mtu bytes;
no-neighbor-learn;
no-redirects;
primary;
rpf-check {
 fail-filter filter-name;
 mode {
 loose;
 }
}
```



```

 }
 }
 family inet6 {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
 }
 address address {
 eui-64;
 ndp ip-address (mac | multicast-mac) mac-address <publish>;
 preferred;
 primary;
 vrrp-inet6-group group-id {
 accept-data | no-accept-data;
 advertisements-threshold number;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 inet6-advertise-interval milliseconds;
 preempt | no-preempt {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-inet6-address [addresses];
 virtual-link-local-address ipv6-address;
 vrrp-inherit-from {
 active-group group-name;
 active-interface interface-name;
 }
 }
 }
 (dad-disable | no-dad-disable);
 filter {
 input filter-name;
 output filter-name;
 }
 mtu bytes;
 nd6-stale-time time;
 no-neighbor-learn;
 no-redirects;
 policer {
 input policer-name;
 output policer-name;
 }
 rpf-check {
 fail-filter filter-name;
 }

```



```

 mode {
 loose;
 }
 }
}
family iso {
 address interface-address;
 mtu bytes;
}
input-vlan-map action;
interface-shared-with {
 psd-name;
}
output-vlan-map action;
proxy-arp (restricted | unrestricted);
swap-by-poppush;
(traps | no-traps);
vlan-id vlan-id-number;
vlan-id-list [vlan-id vlan-id-vlan-id];
}
vlan-tagging;
}
}

```

### Unsupported Statements in the [edit interfaces ge] Hierarchy Level

All statements in the [edit interfaces ge] hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented with the following exceptions:

Table 35: Unsupported [edit interfaces ge] Configuration Statements for EX Series Switches

| Statement                 | Hierarchy                          |
|---------------------------|------------------------------------|
| passive-monitor-mode      | [edit interfaces ge]               |
| stacked-vlan-tagging      | [edit interfaces ge]               |
| asynchronous-notification | [edit interfaces ge ether-options] |
| ignore-l3-incompletes     | [edit interfaces ge ether-options] |
| mpls                      | [edit interfaces ge ether-options] |
| source-address-filter     | [edit interfaces ge ether-options] |
| source-filtering          | [edit interfaces ge ether-options] |
| no-source-filtering       | [edit interfaces ge ether-options] |
| accept-source-mac         | [edit interfaces ge unit]          |
| layer2-policer            | [edit interfaces ge unit]          |



Table 35: Unsupported [edit interfaces ge] Configuration Statements for EX Series Switches (*continued*)

| Statement            | Hierarchy                                                                 |
|----------------------|---------------------------------------------------------------------------|
| native-inner-vlan-id | [edit interfaces ge unit]                                                 |
| vlan-id-range        | [edit interfaces ge unit]                                                 |
| vlan-tags            | [edit interfaces ge unit]                                                 |
| mpls                 | [edit interfaces ge unit family]                                          |
| tcc                  | [edit interfaces ge unit family]                                          |
| vpls                 | [edit interfaces ge unit family]                                          |
| bridge-domain-type   | [edit interfaces ge unit family ethernet-switching]                       |
| inner-vlan-id-list   | [edit interfaces ge unit family ethernet-switching]                       |
| vlan-rewrite         | [edit interfaces ge unit family ethernet-switching]                       |
| policer              | [edit interfaces ge unit family inet]                                     |
| sampling             | [edit interfaces ge unit family inet]                                     |
| service              | [edit interfaces ge unit family inet]                                     |
| simple-filter        | [edit interfaces ge unit family inet]                                     |
| targeted-broadcast   | [edit interfaces ge unit family inet]                                     |
| unnumbered-address   | [edit interfaces ge unit family inet]                                     |
| bandwidth-threshold  | [edit interfaces ge unit family inet address vrrp-group track interface]  |
| service              | [edit interfaces ge unit family inet6]                                    |
| bandwidth-threshold  | [edit interfaces ge unit family inet6 address vrrp-group track interface] |
| group                | [edit interfaces ge unit family inet6 filter]                             |
| pop                  | [edit interfaces ge unit input-vlan-map]                                  |
| push                 | [edit interfaces ge unit output-vlan-map]                                 |

**Related Documentation** • [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches on page 114](#)



## [edit interfaces interface-range] Configuration Statement Hierarchy on EX Series Switches

This topic lists supported and unsupported configuration statements in the **[edit interfaces interface-range]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).

This topic lists:

- [Supported Statements in the \[edit interfaces interface-range\] Hierarchy Level on page 132](#)
- [Unsupported Statements in the \[edit interfaces interface-range\] Hierarchy Level on page 135](#)

### Supported Statements in the [edit interfaces interface-range] Hierarchy Level

The following hierarchy shows the **[edit interfaces interface-range]** configuration statements supported on EX Series switches.

```

interfaces {
 interface-range name {
 accounting-profile name;
 aggregated-ether-options {
 ethernet-switch-profile {
 tag-protocol-id identifier;
 }
 (flow-control | no-flow-control);
 lacp {
 (active | passive);
 admin-key key;
 periodic interval;
 system-id mac-address;
 }
 (link-protection | no-link-protection);
 link-speed speed;
 (loopback | no-loopback);
 minimum-links number;
 rebalance-periodic;
 source-address-filter filter;
 source-filtering | no-source-filtering;
 }
 description text;
 disable;
 ether-options {
 802.3ad {

```



```

 aex;
 (backup | primary);
 lacp {
 force-up;
 }
}
(auto-negotiation | no-auto-negotiation);
(flow-control | no-flow-control);
(loopback | no-loopback);
}
(gratuitous-arp-reply | no-gratuitous-arp-reply);
hold-time up milliseconds down milliseconds;
link-mode mode;
member interface-name;
member-range starting-interface name to ending-interface name;
mtu bytes;
native-vlan-id
no-gratuitous-arp-request;
speed speed;
traceoptions {
 flag flag;
}
(traps | no-traps);
unit logical-unit-number {
 accept-source-mac {
 mac-address mac-address {
 policer {
 input policer-name;
 output policer-name;
 }
 }
 }
}
accounting-profile name;
arp-resp;
bandwidth rate;
description text;
disable;
family ccc;
family ethernet-switching {
 filter {
 input filter-name;
 output filter-name;
 }
 interface-mode (access | trunk);
 recovery-timeout seconds;
 storm-control profile-name;
 vlan {
 members [members];
 }
}
family inet {
 accounting {
 destination-class-usage;
 source-class-usage;
 }
 address ipv4-address {

```



```

arp ip-address (mac | multicast-mac) mac-address <publish>;
broadcast address;
destination-class-usage;
destination-profile;
master-only;
preferred;
primary;
vrrp-group group-number {
 (accept-data | no-accept-data);
 advertise-interval seconds;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 (preempt | no-preempt) {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-address [addresses];
 virtual-link-local-address address;
 vrrp-inherit-from {
 active-group group-number;
 active-interface interface-name;
 }
}
}
filter {
 input filter-name;
 output filter-name;
}
mtu bytes;
no-neighbor-learn;
no-redirects;
primary;
rpf-check;
}
family inet6 {
 accounting {
 destination-class-usage;
 source-class-usage;
 }
 address address {
 eui-64;
 ndp ip-address (mac | multicast-mac) mac-address <publish>;
 preferred;
 primary;
 vrrp-inet6-group group-id {
 accept-data | no-accept-data;
 authentication-key key;
 authentication-type authentication;

```



```

 fast-interval milliseconds;
 inet6-advertise-interval milliseconds;
 preempt | no-preempt {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route (address | routing-instance routing-instance-name);
 }
 virtual-inet6-address [addresses];
 virtual-link-local-address ipv6-address;
}
vrrp-inherit-from {
 active-group group-name;
 active-interface interface-name;
}
}
(dad-disable | no-dad-disable);
filter {
 input filter-name;
 output filter-name;
}
mtu bytes;
no-neighbor-learn;
policer {
 input policer-name;
 output policer-name;
}
rpf-check;
}
family iso {
 address interface-address;
 mtu bytes;
}
minimum-links;
mtu;
proxy-arp (restricted | unrestricted);
swap-by-poppush;
(traps | no-traps);
vlan-id vlan-id-number;
}
vlan-tagging;
}

```

### Unsupported Statements in the [edit interfaces interface-range] Hierarchy Level

All statements in the [edit interfaces interface-range] hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented with the following exceptions:



Table 36: Unsupported [edit interfaces interface-range] Configuration Statements for EX Series Switches

| Statement                                                                                                | Hierarchy                                       |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------|
| <b>NOTE:</b> Variables, such as <i>interface-range</i> , are not shown in the statements or hierarchies. |                                                 |
| cesopsn-options                                                                                          | [edit interfaces interface-range]               |
| container-options                                                                                        | [edit interfaces interface-range]               |
| framing                                                                                                  | [edit interfaces interface-range]               |
| lmi                                                                                                      | [edit interfaces interface-range]               |
| logical-tunnel-options                                                                                   | [edit interfaces interface-range]               |
| lsq-failure-options                                                                                      | [edit interfaces interface-range]               |
| multiservice-options                                                                                     | [edit interfaces interface-range]               |
| passive-monitor-mode                                                                                     | [edit interfaces interface-range]               |
| ppp-options                                                                                              | [edit interfaces interface-range]               |
| receive-bucket                                                                                           | [edit interfaces interface-range]               |
| satop-options                                                                                            | [edit interfaces interface-range]               |
| serial-options                                                                                           | [edit interfaces interface-range]               |
| stacked-vlan-tagging                                                                                     | [edit interfaces interface-range]               |
| transmit-bucket                                                                                          | [edit interfaces interface-range]               |
| vdsl-options                                                                                             | [edit interfaces interface-range]               |
| asynchronous-notification                                                                                | [edit interfaces interface-range ether-options] |
| ethernet-switch-profile                                                                                  | [edit interfaces interface-range ether-options] |
| ieee-802-3az-eee                                                                                         | [edit interfaces interface-range ether-options] |
| ignore-l3-incompletes                                                                                    | [edit interfaces interface-range ether-options] |
| mpls                                                                                                     | [edit interfaces interface-range ether-options] |
| no-source-filtering                                                                                      | [edit interfaces interface-range ether-options] |
| source-address-filter                                                                                    | [edit interfaces interface-range ether-options] |



Table 36: Unsupported [edit interfaces interface-range] Configuration Statements for EX Series Switches (*continued*)

| Statement                   | Hierarchy                                       |
|-----------------------------|-------------------------------------------------|
| source-filtering            | [edit interfaces interface-range ether-options] |
| accept-source-mac           | [edit interfaces interface-range unit]          |
| allow-any-vci               | [edit interfaces interface-range unit]          |
| atm-l2circuit-mode          | [edit interfaces interface-range unit]          |
| atm-scheduler-map           | [edit interfaces interface-range unit]          |
| cell-bundle-size            | [edit interfaces interface-range unit]          |
| clear-don-fragment-bit      | [edit interfaces interface-range unit]          |
| compression-device          | [edit interfaces interface-range unit]          |
| copy-tos-to-outer-ip-header | [edit interfaces interface-range unit]          |
| disable-mlppp-inner-ppp-pfc | [edit interfaces interface-range unit]          |
| dlci                        | [edit interfaces interface-range unit]          |
| drop-timeout                | [edit interfaces interface-range unit]          |
| epd-threshold               | [edit interfaces interface-range unit]          |
| fragment-threshold          | [edit interfaces interface-range unit]          |
| input-vlan-map              | [edit interfaces interface-range unit]          |
| interface-shared-with       | [edit interfaces interface-range unit]          |
| interleave-fragments        | [edit interfaces interface-range unit]          |
| inverse-arp                 | [edit interfaces interface-range unit]          |
| layer2-policer              | [edit interfaces interface-range unit]          |
| link-layer-overhead         | [edit interfaces interface-range unit]          |
| load-balancing-options      | [edit interfaces interface-range unit]          |
| mrru                        | [edit interfaces interface-range unit]          |
| multicast-dlci              | [edit interfaces interface-range unit]          |



Table 36: Unsupported [edit interfaces interface-range] Configuration Statements for EX Series Switches (*continued*)

| Statement             | Hierarchy                              |
|-----------------------|----------------------------------------|
| multicast-vci         | [edit interfaces interface-range unit] |
| multilink-max-classes | [edit interfaces interface-range unit] |
| multipoint            | [edit interfaces interface-range unit] |
| native-inner-vlan-id  | [edit interfaces interface-range unit] |
| oam-liveness          | [edit interfaces interface-range unit] |
| oam-period            | [edit interfaces interface-range unit] |
| output-vlan-map       | [edit interfaces interface-range unit] |
| peer-unit             | [edit interfaces interface-range unit] |
| plp-to-clp            | [edit interfaces interface-range unit] |
| point-to-point        | [edit interfaces interface-range unit] |
| ppp-options           | [edit interfaces interface-range unit] |
| receive-lap           | [edit interfaces interface-range unit] |
| service-domain        | [edit interfaces interface-range unit] |
| shaping               | [edit interfaces interface-range unit] |
| short-sequence        | [edit interfaces interface-range unit] |
| transmit-lsp          | [edit interfaces interface-range unit] |
| transmit-weight       | [edit interfaces interface-range unit] |
| trunk-bandwidth       | [edit interfaces interface-range unit] |
| trunk-id              | [edit interfaces interface-range unit] |
| tunnel                | [edit interfaces interface-range unit] |
| vci                   | [edit interfaces interface-range unit] |
| vci-range             | [edit interfaces interface-range unit] |
| vlan-id-list          | [edit interfaces interface-range unit] |



Table 36: Unsupported [edit interfaces interface-range] Configuration Statements for EX Series Switches (*continued*)

| Statement               | Hierarchy                                                                             |
|-------------------------|---------------------------------------------------------------------------------------|
| vpi                     | [edit interfaces interface-range unit]                                                |
| mlfr-end-to-end         | [edit interfaces interface-range unit family]                                         |
| mlfr-uni-nni            | [edit interfaces interface-range unit family]                                         |
| mlppp                   | [edit interfaces interface-range unit family]                                         |
| mpls                    | [edit interfaces interface-range unit family]                                         |
| tcc                     | [edit interfaces interface-range unit family]                                         |
| vpls                    | [edit interfaces interface-range unit family]                                         |
| bridge-domain-type      | [edit interfaces interface-range unit family ethernet-switching]                      |
| inner-vlan-id-list      | [edit interfaces interface-range unit family ethernet-switching]                      |
| vlan-rewrite            | [edit interfaces interface-range unit family ethernet-switching]                      |
| ipsec-sa                | [edit interfaces interface-range unit family inet]                                    |
| multicast-only          | [edit interfaces interface-range unit family inet]                                    |
| negotiate-address       | [edit interfaces interface-range unit family inet]                                    |
| next-hop-tunnel         | [edit interfaces interface-range unit family inet]                                    |
| policer                 | [edit interfaces interface-range unit family inet]                                    |
| receive-options-packets | [edit interfaces interface-range unit family inet]                                    |
| receive-ttl-exceeded    | [edit interfaces interface-range unit family inet]                                    |
| sampling                | [edit interfaces interface-range unit family inet]                                    |
| service                 | [edit interfaces interface-range unit family inet]                                    |
| simple-filter           | [edit interfaces interface-range unit family inet]                                    |
| targeted-broadcast      | [edit interfaces interface-range unit family inet]                                    |
| unnumbered-address      | [edit interfaces interface-range unit family inet]                                    |
| bandwidth-threshold     | [edit interfaces interface-range unit family inet address vrrp-group track interface] |



Table 36: Unsupported [edit interfaces interface-range] Configuration Statements for EX Series Switches (*continued*)

| Statement           | Hierarchy                                                                              |
|---------------------|----------------------------------------------------------------------------------------|
| service             | [edit interfaces interface-range unit family inet6]                                    |
| group               | [edit interfaces interface-range unit family inet6 filter]                             |
| bandwidth-threshold | [edit interfaces interface-range unit family inet6 address vrrp-group track interface] |

**Related Documentation**

- [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches on page 114](#)

## [\[edit interfaces irb\] Configuration Statement Hierarchy on EX Series Switches](#)

This topic lists supported and unsupported configuration statements in the **[edit interfaces irb]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).

This topic lists:

- [Supported Statements in the \[edit interfaces irb\] Hierarchy Level on page 140](#)
- [Unsupported Statements in the \[edit interfaces irb\] Hierarchy Level on page 143](#)

## Supported Statements in the [edit interfaces irb] Hierarchy Level

The following hierarchy shows the **[edit interfaces irb]** configuration statements supported on EX Series switches.

```

interfaces {
 irb {
 accounting-profile name;
 description text;
 disable;

 (gratuitous-arp-reply | no-gratuitous-arp-reply);
 hold-time up milliseconds down milliseconds;
 mtu bytes;
 no-gratuitous-arp-request;
 traceoptions {
 flag flag;
 }
 (traps | no-traps);
 }
}

```



```

unit logical-unit-number {
 accounting-profile name;
 bandwidth rate;
 description text;
 disable;
 family inet {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
 }
 address ipv4-address {
 arp ip-address (mac | multicast-mac) mac-address <publish>;
 broadcast address;
 preferred;
 primary;
 vrrp-group group-number {
 (accept-data | no-accept-data);
 advertise-interval seconds;
 advertisements-threshold number;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 (preempt | no-preempt) {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-address [addresses];
 vrrp-inherit-from {
 active-group group-number;
 active-interface interface-name;
 }
 }
 }
 filter {
 input filter-name;
 output filter-name;
 }
 mtu bytes;
 no-neighbor-learn;
 no-redirects;
 primary;
 rpf-check {
 fail-filter filter-name;
 mode {
 loose;
 }
 }
}

```



```
 }
 }
 family inet6 {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
 }
 address address {
 eui-64;
 ndp ip-address (mac | multicast-mac) mac-address <publish>;
 preferred;
 primary;
 vrrp-inet6-group group-id {
 accept-data | no-accept-data;
 advertisements-threshold number;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 inet6-advertise-interval milliseconds;
 preempt | no-preempt {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-inet6-address [addresses];
 virtual-link-local-address ipv6-address;
 vrrp-inherit-from {
 active-group group-number;
 active-interface interface-name;
 }
 }
 }
 (dad-disable | no-dad-disable);
 filter {
 input filter-name;
 output filter-name;
 }
 mtu bytes;
 nd6-stale-time seconds;
 no-neighbor-learn;
 no-redirects;
 policer {
 input policer-name;
 output policer-name;
 }
 rpf-check {
 fail-filter filter-name;
```



```

 mode {
 loose;
 }
 }
}
family iso {
 address interface-address;
 mtu bytes;
}
native-inner-vlan-id vlan-id;
proxy-arp (restricted | unrestricted);
(traps | no-traps);
vlan-id-list [vlan-id's];
vlan-id-range [vlan-id-range];
}
}
}

```

### Unsupported Statements in the [edit interfaces irb] Hierarchy Level

All statements in the [edit interfaces irb] hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented with the following exceptions:

Table 37: Unsupported [edit interfaces irb] Configuration Statements for EX Series Switches

| Statement           | Hierarchy                                                                 |
|---------------------|---------------------------------------------------------------------------|
| encapsulation       | [edit interfaces irb]                                                     |
| layer2-policer      | [edit interfaces irb unit]                                                |
| ccc                 | [edit interfaces irb unit family]                                         |
| mpls                | [edit interfaces irb unit family]                                         |
| tcc                 | [edit interfaces irb unit family]                                         |
| vpls                | [edit interfaces irb unit family]                                         |
| policer             | [edit interfaces irb unit family inet]                                    |
| sampling            | [edit interfaces irb unit family inet]                                    |
| service             | [edit interfaces irb unit family inet]                                    |
| targeted-broadcast  | [edit interfaces irb unit family inet]                                    |
| unnumbered-address  | [edit interfaces irb unit family inet]                                    |
| bandwidth-threshold | [edit interfaces irb unit family inet address vrrp-group track interface] |
| service             | [edit interfaces irb unit family inet6]                                   |



Table 37: Unsupported [edit interfaces irb] Configuration Statements for EX Series Switches (*continued*)

| Statement           | Hierarchy                                                                        |
|---------------------|----------------------------------------------------------------------------------|
| bandwidth-threshold | [edit interfaces irb unit family inet6 address vrrp-inet6-group track interface] |
| group               | [edit interfaces irb unit family inet6 filter]                                   |

**Related Documentation**

- [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches on page 114](#)

## [edit interfaces lo] Configuration Statement Hierarchy on EX Series Switches

This topic lists supported and unsupported configuration statements in the [edit interfaces lo] hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).

This topic lists:

- [Supported Statements in the \[edit interfaces lo\] Hierarchy Level on page 144](#)
- [Unsupported Statements in the \[edit interfaces lo\] Hierarchy Level on page 146](#)

## Supported Statements in the [edit interfaces lo] Hierarchy Level

The following hierarchy shows the [edit interfaces lo] configuration statements supported on EX Series switches.

```

interfaces {
 lo0 {
 accounting-profile name;
 description text;
 disable;
 hold-time down milliseconds up milliseconds ;
 traceoptions {
 flag flag;
 }
 (traps | no-traps);
 unit logical-unit-number {
 accounting-profile name;
 arp-resp;
 bandwidth rate;
 description text;
 disable;
 family ccc;
 }
 }
}

```



```

family inet {
 address ipv4-address {
 preferred;
 primary;
 vrrp-group group-number {
 (accept-data | no-accept-data);
 advertise-interval seconds;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 (preempt | no-preempt) {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 bandwidth-threshold bandwidth;
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-address [addresses];
 virtual-link-local-address address;
 vrrp-inherit-from {
 active-group group-number;
 active-interface interface-name;
 }
 }
 }
}
dhcp {
 client-identifier (ascii client-id | hexadecimal client-id);
 lease-time (seconds | infinite);
 retransmission-attempt number;
 retransmission-interval seconds;
 server-address ip-address;
 update-server
 vendor-id
}
filter {
 input filter-name;
 output filter-name;
}
no-neighbor-learn;
no-redirects;
primary;
}
family inet6 {
 address address {
 preferred;
 primary;
 vrrp-inet6-group group-id {
 accept-data | no-accept-data;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;

```



```

 inet6-advertise-interval milliseconds;
 preempt | no-preempt {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 bandwidth-threshold bandwidth priority-cost number;
 priority-cost number;
 }
 priority-hold-time seconds;
 route (address | routing-instance routing-instance-name);
 }
 virtual-inet6-address [addresses];
 virtual-link-local-address ipv6-address;
 vrrp-inherit-from {
 active-group group-name;
 active-interface interface-name;
 }
}
(dad-disable | no-dad-disable);
filter {
 group group-name;
 input filter-name;
 output filter-name;
}
no-neighbor-learn;
policer {
 input policer-name;
 output policer-name;
}
}
family iso {
 address interface-address;
}
family mpls;
(traps | no-traps);
}
}

```

### Unsupported Statements in the [edit interfaces lo] Hierarchy Level

All statements in the [edit interfaces lo] hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented with the following exceptions:

Table 38: Unsupported [edit interfaces lo] Configuration Statements for EX Series Switches

| Statement      | Hierarchy                        |
|----------------|----------------------------------|
| layer2-policer | [edit interfaces lo unit]        |
| any            | [edit interfaces lo unit family] |



Table 38: Unsupported [edit interfaces lo] Configuration Statements for EX Series Switches (*continued*)

| Statement          | Hierarchy                             |
|--------------------|---------------------------------------|
| tcc                | [edit interfaces lo unit family]      |
| policer            | [edit interfaces lo unit family inet] |
| unnumbered-address | [edit interfaces lo unit family inet] |

- Related Documentation**
- [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches](#)
  - [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches on page 114](#)

## [\[edit interfaces me\] Configuration Statement Hierarchy on EX Series Switches](#)

This topic lists supported and unsupported configuration statements in the **[edit interfaces me]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).

This topic lists:

- [Supported Statements in the \[edit interfaces me\] Hierarchy Level on page 147](#)
- [Unsupported Statements in the \[edit interfaces me\] Hierarchy Level on page 149](#)

## Supported Statements in the [edit interfaces me] Hierarchy Level

The following hierarchy shows the **[edit interfaces me]** configuration statements supported on EX Series switches.

```

interfaces {
 me0 {
 accounting-profile name;
 description text;
 disable;
 (gratuitous-arp-reply | no-gratuitous-arp-reply);
 hold-time up milliseconds down milliseconds;
 no-gratuitous-arp-request;
 traceoptions {
 flag flag;
 }
 (traps | no-traps);
 unit logical-unit-number {
 accounting-profile name;
 }
 }
}

```



```
arp-resp;
bandwidth rate;
description text;
disable;
family ethernet-switching {
 filter {
 input filter-name;
 output filter-name;
 }
 native-vlan-id vlan-id-number;
 port-mode (access | trunk);
 vlan {
 members [members];
 }
}
family inet {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
 address ipv4-address {
 arp ip-address (mac | multicast-mac) mac-address <publish>;
 broadcast address;
 master-only;
 preferred;
 primary;
 }
 dhcp {
 client-identifier (ascii client-id | hexadecimal client-id);
 lease-time (seconds | infinite);
 retransmission-attempt number;
 retransmission-interval sections;
 server-address ip-address;
 update-server
 vendor-id
 }
 filter {
 input filter-name;
 output filter-name;
 }
 mtu bytes;
 no-neighbor-learn;
 primary;
 rpf-check;
}
family inet6 {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
}
```



```

address address {
 eui-64;
 ndp ip-address (mac | multicast-mac) mac-address <publish>;
 preferred;
 primary;
}
(dad-disable | no-dad-disable);
filter {
 group group-name;
 input filter-name;
 output filter-name;
}
mtu bytes;
no-neighbor-learn;
policer {
 input policer-name;
 output policer-name;
}
rpf-check;
}
family iso {
 address interface-address;
 mtu bytes;
}
family mpls {
 mtu bytes;
}
swap-by-poppush;
(traps | no-traps);
vlan-id vlan-id-number;
}
vlan-tagging;
}
}

```

### Unsupported Statements in the [edit interfaces me] Hierarchy Level

All statements in the [edit interfaces me] hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented with the following exceptions:

Table 39: Unsupported [edit interfaces me] Configuration Statements for EX Series Switches

| Statement            | Hierarchy                 |
|----------------------|---------------------------|
| encapsulation        | [edit interfaces me]      |
| link-mode            | [edit interfaces me]      |
| encapsulation        | [edit interfaces me unit] |
| layer2-policer       | [edit interfaces me unit] |
| native-inner-vlan-id | [edit interfaces me unit] |



Table 39: Unsupported [edit interfaces me] Configuration Statements for EX Series Switches (*continued*)

| Statement          | Hierarchy                                      |
|--------------------|------------------------------------------------|
| vlan-id-list       | [edit interfaces me unit]                      |
| vlan-id-range      | [edit interfaces me unit]                      |
| ccc                | [edit interfaces me unit family]               |
| tcc                | [edit interfaces me unit family]               |
| vpls               | [edit interfaces me unit family]               |
| no-redirects       | [edit interfaces me unit family inet]          |
| policer            | [edit interfaces me unit family inet]          |
| sampling           | [edit interfaces me unit family inet]          |
| service            | [edit interfaces me unit family inet]          |
| unnumbered-address | [edit interfaces me unit family inet]          |
| vrrp-group         | [edit interfaces me unit family inet address]  |
| service            | [edit interfaces me unit family inet6]         |
| vrrp-inet6-group   | [edit interfaces me unit family inet6 address] |

- Related Documentation**
- [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches](#)
  - [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches on page 114](#)

## [\[edit interfaces vme\] Configuration Statement Hierarchy on EX Series Switches](#)

This topic lists supported and unsupported configuration statements in the **[edit interfaces vme]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).



This topic lists:

- [Supported Statements in the \[edit interfaces vme\] Hierarchy Level on page 151](#)
- [Unsupported Statements in the \[edit interfaces vme\] Hierarchy Level on page 153](#)

## Supported Statements in the [edit interfaces vme] Hierarchy Level

The following hierarchy shows the **[edit interfaces vme]** configuration statements supported on EX Series switches.

```

interfaces {
 vme {
 accounting-profile name;
 description text;
 disable;
 (gratuitous-arp-reply | no-gratuitous-arp-reply);
 hold-time up milliseconds down milliseconds;
 mtu bytes;
 no-gratuitous-arp-request;
 traceoptions {
 flag flag;
 }
 (traps | no-traps);
 unit logical-unit-number {
 accounting-profile name;
 arp-resp;
 bandwidth rate;
 description text;
 disable;
 family inet {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
 }
 address ipv4-address {
 arp ip-address (mac | multicast-mac) mac-address <publish>;
 broadcast address;
 master-only;
 preferred;
 primary;
 vrrp-group group-number {
 (accept-data | no-accept-data);
 advertise-interval seconds;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 (preempt | no-preempt) {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {

```



```
 bandwidth-threshold bandwidth;
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-address [addresses];
 virtual-link-local-address address;
 vrrp-inherit-from {
 active-group group-number;
 active-interface interface-name;
 }
 }
}
dhcp {
 client-identifier (ascii client-id | hexadecimal client-id);
 lease-time (seconds | infinite);
 retransmission-attempt number;
 retransmission-interval seconds;
 server-address ip-address;
 update-server
 vendor-id
}
filter {
 input filter-name;
 output filter-name;
}
mtu bytes;
no-neighbor-learn;
primary;
rpf-check;
}
family inet6 {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
}
address address {
 eui-64;
 ndp ip-address (mac | multicast-mac) mac-address <publish>;
 preferred;
 primary;
 vrrp-inet6-group group-id {
 accept-data | no-accept-data;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 inet6-advertise-interval milliseconds;
 preempt | no-preempt {
 hold-time seconds;
 }
 priority number;
 track {
```



```

 interface interface-name {
 bandwidth-threshold bandwidth priority-cost number;
 priority-cost number;
 }
 priority-hold-time seconds;
 route (address | routing-instance routing-instance-name);
}
virtual-inet6-address [addresses];
virtual-link-local-address ipv6-address;
vrrp-inherit-from {
 active-group group-name;
 active-interface interface-name;
}
}
}
(dad-disable | no-dad-disable);
filter {
 group group-name;
 input filter-name;
 output filter-name;
}
mtu bytes;
no-neighbor-learn;
policer {
 input policer-name;
 output policer-name;
}
rpf-check;
}
family iso {
 address interface-address;
 mtu bytes;
}
family mpls {
 mtu bytes;
}
}
(traps | no-traps);
vlan-id vlan-id-number;
}
vlan-tagging;
}
}

```

## Unsupported Statements in the [edit interfaces vme] Hierarchy Level

All statements in the [edit interfaces vme] hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented.

- Related Documentation**
- [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches](#)
  - [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches on page 114](#)



## [edit interfaces xe] Configuration Statement Hierarchy on EX Series Switches

This topic lists supported and unsupported configuration statements in the **[edit interfaces xe]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).

This topic lists:

- [Supported Statements in the \[edit interfaces xe\] Hierarchy Level on page 154](#)
- [Unsupported Statements in the \[edit interfaces xe\] Hierarchy Level on page 157](#)

### Supported Statements in the [edit interfaces xe] Hierarchy Level

The following hierarchy shows the **[edit interfaces xe]** configuration statements supported on EX Series switches.

```

interfaces {
 xe-fpc/pic/port {
 accounting-profile name;
 description text;
 disable;
 encapsulation type;
 ether-options {
 802.3ad {
 (backup | primary);
 lacp {
 force-up;
 port-priority number;
 }
 }
 (auto-negotiation | no-auto-negotiation);
 ethernet-switch-profile {
 tag-protocol-id [tpids];
 }
 (flow-control | no-flow-control);
 (loopback | no-loopback);
 }
 flexible-vlan-tagging;
 (gratuitous-arp-reply | no-gratuitous-arp-reply);
 hold-time up milliseconds down milliseconds;
 link mode {
 full-duplex;
 }
 mtu bytes;
 native-vlan-id
 no-gratuitous-arp-request;
 }
}

```



```

traceoptions {
 flag flag;
}
(traps | no-traps);
unit logical-unit-number {
 accounting-profile name;
 bandwidth rate;
 description text;
 disable;
 encapsulation type;
 family ccc {
 filter {
 input filter-name;
 output filter-name;
 }
 policer {
 input policer-name;
 output policer-name;
 }
 }
}
family ethernet-switching {
 filter {
 input filter-name;
 output filter-name;
 }
 interface-mode (access | trunk) ;
 recovery-timeout seconds;
 storm-control profile-name;
 vlan {
 members (vlan-name | [vlan-names] | all;
 }
}
family inet {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
}
address ipv4-address {
 arp ip-address (mac | multicast-mac) mac-address <publish>;
 broadcast address;
 preferred;
 primary;
 vrrp-group group-number {
 (accept-data | no-accept-data);
 advertise-interval seconds;
 advertisements-thresholds number;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 (preempt | no-preempt) {
 hold-time seconds;
 }
 priority number;
 }
}

```



```

 track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-address [addresses];
 vrrp-inherit-from {
 active-group group-number;
 active-interface interface-name;
 }
}
filter {
 input filter-name;
 output filter-name;
}
mtu bytes;
no-neighbor-learn;
no-redirects;
primary;
rpf-check {
 fail-filter filter-name;
 mode {
 loose;
 }
}
}
family inet6 {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
}
address address {
 eui-64;
 ndp ip-address (mac | multicast-mac) mac-address <publish>;
 preferred;
 primary;
 vrrp-inet6-group group-id {
 accept-data | no-accept-data;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 inet6-advertise-interval milliseconds;
 preempt | no-preempt {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 priority-cost number;
 }
 }
 }
}

```



```

 priority-hold-time seconds;
 route (address | routing-instance routing-instance-name);
 }
 virtual-inet6-address [addresses];
 virtual-link-local-address ipv6-address;
 vrrp-inherit-from {
 active-group group-name;
 active-interface interface-name;
 }
}
}
(dad-disable | no-dad-disable);
filter {
 input filter-name;
 output filter-name;
}
mtu bytes;
no-neighbor-learn;
no-redirects;
policer {
 input policer-name;
 output policer-name;
}
rpf-check {
 fail-filter filter-name;
 mode {
 loose;
 }
}
}
family iso {
 address interface-address;
 mtu bytes;
}
input-vlan-map action;
interface-shared-with psdnumerical-index;
output-vlan-map action;
proxy-arp (restricted | unrestricted);
swap-by-poppush;
(traps | no-traps);
vlan-id (VLAN Tagging and Layer 3 Subinterfaces) vlan-id-number;
vlan-id-list [vlan-id vlan-id-vlan-id];
}
vlan-tagging;
}
}

```

### Unsupported Statements in the [edit interfaces xe] Hierarchy Level

All statements in the [edit interfaces xe] hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented with the following exceptions:



Table 40: Unsupported [edit interfaces xe] Configuration Statements for EX Series Switches

| Statement                 | Hierarchy                                           |
|---------------------------|-----------------------------------------------------|
| clocking                  | [edit interfaces xe]                                |
| framing                   | [edit interfaces xe]                                |
| passive-monitor-mode      | [edit interfaces xe]                                |
| stacked-vlan-tagging      | [edit interfaces xe]                                |
| asynchronous-notification | [edit interfaces xe ether-options]                  |
| ignore-l3-incompletes     | [edit interfaces xe ether-options]                  |
| mpls                      | [edit interfaces xe ether-options]                  |
| source-address-filter     | [edit interfaces xe ether-options]                  |
| source-filtering          | [edit interfaces xe ether-options]                  |
| no-source-filtering       | [edit interfaces xe ether-options]                  |
| accept-source-mac         | [edit interfaces xe unit]                           |
| layer2-policer            | [edit interfaces xe unit]                           |
| native-inner-vlan-id      | [edit interfaces xe unit]                           |
| vlan-id-range             | [edit interfaces xe unit]                           |
| vlan-tags                 | [edit interfaces xe unit]                           |
| mpls                      | [edit interfaces xe unit family]                    |
| tcc                       | [edit interfaces xe unit family]                    |
| vpls                      | [edit interfaces xe unit family]                    |
| bridge-domain-type        | [edit interfaces xe unit family ethernet-switching] |
| inner-vlan-id-list        | [edit interfaces xe unit family ethernet-switching] |
| vlan-rewrite              | [edit interfaces xe unit family ethernet-switching] |
| policer                   | [edit interfaces xe unit family inet]               |
| sampling                  | [edit interfaces xe unit family inet]               |
| service                   | [edit interfaces xe unit family inet]               |



Table 40: Unsupported [edit interfaces xe] Configuration Statements for EX Series Switches (*continued*)

| Statement           | Hierarchy                                                                 |
|---------------------|---------------------------------------------------------------------------|
| simple-filter       | [edit interfaces xe unit family inet]                                     |
| targeted-broadcast  | [edit interfaces xe unit family inet]                                     |
| unnumbered-address  | [edit interfaces xe unit family inet]                                     |
| bandwidth-threshold | [edit interfaces xe unit family inet address vrrp-group track interface]  |
| service             | [edit interfaces xe unit family inet6]                                    |
| bandwidth-threshold | [edit interfaces xe unit family inet6 address vrrp-group track interface] |
| group               | [edit interfaces xe unit family inet6 filter]                             |
| pop                 | [edit interfaces xe unit input-vlan-map]                                  |
| push                | [edit interfaces xe unit output-vlan-map]                                 |

**Related Documentation** • [\[edit interfaces\] Configuration Statement Hierarchy on EX Series Switches on page 114](#)

## [\[edit protocols lacp\] Configuration Statement Hierarchy on EX Series Switches](#)

This topic lists supported and unsupported configuration statements in the **[edit protocols lacp]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see *EX Series Switch Software Features Overview*.

This topic lists:

- [Supported Statements in the \[edit protocols lacp\] Hierarchy Level on page 159](#)
- [Unsupported Statements in the \[edit protocols lacp\] Hierarchy Level on page 160](#)

### Supported Statements in the [edit protocols lacp] Hierarchy Level

The following hierarchy shows the **[edit protocols lacp]** configuration statements supported on EX Series switches:

```
protocols {
```



```
lcp {
 ppm {
 centralized
 }
 traceoptions {
 file <filename> <files number> <match regular-expression> <size maximum-file-size>
 <world-readable | no-world-readable>;
 flag flag;
 no-remote-trace;
 }
}
```

### Unsupported Statements in the [edit protocols lcp] Hierarchy Level

All statements in the **[edit protocols lcp]** hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented.

#### Related Documentation

- *[edit protocols] Configuration Statement Hierarchy on EX Series Switches*



## 802.3ad

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> 802.3ad {     aex;     (backup   primary);     lacp {         force-up;         port-priority     } } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> ether-options]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | Configure membership in a link aggregation group (LAG).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <ul style="list-style-type: none"> <li>• <b>aex</b>—Name of the LAG.</li> <li>• <b>backup</b>—Designate the interface as the backup interface for link-protection mode.</li> <li>• <b>primary</b>—Designate the interface as the primary interface for link-protection mode.</li> </ul> <p>The remaining statements are described separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i></li> <li>• <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i></li> <li>• <i>Example: Configuring Multicast Load Balancing for Use with Aggregated 10-Gigabit Ethernet Interfaces on EX8200 Switches</i></li> <li>• <a href="#">Configuring Aggregated Ethernet Links (CLI Procedure) on page 84</a></li> <li>• <a href="#">Configuring Aggregated Ethernet LACP (CLI Procedure) on page 88</a></li> <li>• <a href="#">Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure) on page 89</a></li> </ul> |



## accounting-profile

---

|                                 |                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>accounting-profile <i>name</i>;</code>                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> ],<br>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ],<br>[edit interfaces interface-range <i>name</i> ]                                                           |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                          |
| <b>Description</b>              | Enable collection of accounting data for the specified physical or logical interface or interface range.                                                                                                                           |
| <b>Options</b>                  | <i>name</i> —Name of the accounting profile.                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Applying an Accounting Profile to the Physical Interface on page 76</a></li><li>• <a href="#">Applying an Accounting Profile to the Logical Interface on page 78</a></li></ul> |



## address

```

Syntax address address {
 arp ip-address (mac | multicast-mac) mac-address <publish>;
 broadcast address;
 destination address;
 destination-profile name;
 eui-64;
 master-only;
 multipoint-destination address dlcid dlcid-identifier;
 multipoint-destination address {
 epd-threshold cells;
 inverse-arp;
 oam-liveness {
 up-count cells;
 down-count cells;
 }
 oam-period (disable | seconds);
 shaping {
 (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
 length);
 queue-length number;
 }
 vci vpi-identifier.vci-identifier;
 }
 primary;
 preferred;
 (vrrp-group | vrrp-inet6-group) group-number {
 (accept-data | no-accept-data);
 advertise-interval seconds;
 authentication-type authentication;
 authentication-key key;
 fast-interval milliseconds;
 (preempt | no-preempt) {
 hold-time seconds;
 }
 priority-number number;
 track {
 priority-cost seconds;
 priority-hold-time interface-name {
 interface priority;
 bandwidth-threshold bits-per-second {
 priority;
 }
 }
 }
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-address [addresses];
 }
}

```

**Hierarchy Level** [edit interfaces *interface-name* unit *logical-unit-number* family *family*],  
 [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*  
 family *family*]



**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Configure the interface address.

**Options** *address*—Address of the interface.

- In Junos OS Release 13.3 and later, when you configure an IPv6 host address and an IPv6 subnet address on an interface, the commit operation fails.
- In releases earlier than Junos OS Release 13.3, when you use the same configuration on an interface, the commit operation succeeds, but only one of the IPv6 addresses that was entered is assigned to the interface. The other address is not applied.



**NOTE:** If you configure the same address on multiple interfaces in the same routing instance, Junos OS uses only the first configuration, the remaining address configurations are ignored and can leave interfaces without an address. Interfaces that do not have an assigned address cannot be used as a donor interface for an unnumbered Ethernet interface.

For example, in the following configuration the address configuration of interface xe-0/0/1.0 is ignored:

```
interfaces {
 xe-0/0/0 {
 unit 0 {
 family inet {
 address 192.168.1.1/24;
 }
 }
 }
 xe-0/0/1 {
 unit 0 {
 family inet {
 address 192.168.1.1/24;
 }
 }
 }
}
```

For more information on configuring the same address on multiple interfaces, see [“Configuring the Interface Address” on page 48](#).

---

The remaining statements are explained separately.



**NOTE:** The `edit logical-systems` hierarchy is not available on QFabric systems.

---

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.



- Related Documentation**
- *Configuring the Protocol Family*
  - *Junos OS Administration Library for Routing Devices*
  - *family*
  - *negotiate-address*
  - *unnumbered-address (Ethernet)*

## aggregated-devices

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>aggregated-devices {   ethernet (Aggregated Devices) {     device-count <i>number</i>;     lacp   } }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit <a href="#">chassis</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | <p>Configure properties for aggregated devices on the switch.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Default</b>                  | Aggregated devices are disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i></li> <li>• <a href="#">Configuring Aggregated Ethernet Links (CLI Procedure) on page 84</a></li> <li>• <a href="#">Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure) on page 89</a></li> <li>• <a href="#">Understanding Aggregated Ethernet Interfaces and LACP on page 8</a></li> <li>• <i>Junos OS Ethernet Interfaces Configuration Guide</i></li> </ul> |



## aggregated-ether-options

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> aggregated-ether-options {     ethernet-switch-profile {         tag-protocol-id;     }     (flow-control   no-flow-control);     lacp {         (active   passive);         admin-key <i>key</i>;         periodic <i>interval</i>;         system-id <i>mac-address</i>;     }     (link-protection   no-link-protection);     link-speed <i>speed</i>;     local-bias (<a href="#">edit interfaces ae</a>);     logical-interface-fpc-redundancy;     (loopback   no-loopback);     mc-ae {         chassis-id <i>chassis-id</i>;         events {             iccp-peer-down {                 force-icl-down;                 prefer-status-control-active;             }         }         init-delay-time <i>seconds</i>;         mc-ae-id <i>mc-ae-id</i>;         mode (active-active   active-standby);         redundancy-group <i>group-id</i>;         revert-time <i>revert-time</i>;         status-control (active   standby);         switchover-mode (non-revertive   revertive);     }     minimum-links <i>number</i>;     system-priority } </pre> |
| <b>Hierarchy Level</b>          | [ <a href="#">edit interfaces aex</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 12.3R2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Configure the aggregated Ethernet properties of a specific aggregated Ethernet interface.<br><br>The remaining statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><i>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |



- *Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch*
- [Configuring Aggregated Ethernet Links \(CLI Procedure\) on page 84](#)
- [Configuring Aggregated Ethernet LACP \(CLI Procedure\) on page 88](#)
- [Configuring LACP Link Protection of Aggregated Ethernet Interfaces \(CLI Procedure\) on page 89](#)
- [Configuring Q-in-Q Tunneling \(CLI Procedure\)](#)
- [Junos OS Ethernet Interfaces Configuration Guide](#)



## arp (Interfaces)

|                                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                         | <code>arp <i>ip-address</i> (mac   multicast-mac) <i>mac-address</i> publish;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>                                                                                                                                                                | [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i> ],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>                                                                                                                                                            | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>                                                                                                                                                                    | For Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only, configure Address Resolution Protocol (ARP) table entries, mapping IP addresses to MAC addresses.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Options</b>                                                                                                                                                                        | <p><b><i>ip-address</i></b>—IP address to map to the MAC address. The IP address specified must be part of the subnet defined in the enclosing <b>address</b> statement.</p> <p><b>mac <i>mac-address</i></b>—MAC address to map to the IP address. Specify the MAC address as six hexadecimal bytes in one of the following formats: <i>nnnn.nnnn.nnnn</i> or <i>nn:nn:nn:nn:nn:nn</i>. For example, <b>0011.2233.4455</b> or <b>00:11:22:33:44:55</b>.</p> <p><b>multicast-mac <i>mac-address</i></b>—Multicast MAC address to map to the IP address. Specify the multicast MAC address as six hexadecimal bytes in one of the following formats: <i>nnnn.nnnn.nnnn</i> or <i>nn:nn:nn:nn:nn:nn</i>. For example, <b>0011.2233.4455</b> or <b>00:11:22:33:44:55</b>.</p> <p><b>publish</b>—(Optional) Have the router or switch reply to ARP requests for the specified IP address. If you omit this option, the router or switch uses the entry to reach the destination but does not reply to ARP requests.</p> |
| <div>  <b>NOTE:</b> The edit logical-systems hierarchy is not available on QFabric systems. </div> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b>                                                                                                                                                       | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>                                                                                                                                                          | <ul style="list-style-type: none"> <li><a href="#">Configuring Static ARP Table Entries on page 80</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |



## auto-negotiation

|                            |                                                                                                                                                                                                                                                                                                |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | (auto-negotiation   no-auto-negotiation) <remote-fault (local-interface-online   local-interface-offline)>;                                                                                                                                                                                    |
| <b>Hierarchy Level</b>     | [edit interfaces <i>interface-name</i> ether-options],<br>[edit interfaces <i>interface-name</i> gigheter-options],<br>[edit interfaces <i>ge-pim</i> /0/0 switch-options switch-port <i>port-number</i> ]                                                                                     |
| <b>Release Information</b> | Statement introduced in Junos OS Release 7.6.<br>Statement introduced in Junos OS Release 8.4 for J Series Services Routers.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers. |
| <b>Description</b>         | For Gigabit Ethernet interfaces on M Series, MX Series, T Series, TX Matrix routers, and ACX Series routers explicitly enable autonegotiation and remote fault. For EX Series switches and J Series Services Routers, explicitly enable autonegotiation only.                                  |

- **auto-negotiation**—Enables autonegotiation. This is the default.
- **no-auto-negotiation**—Disable autonegotiation. When autonegotiation is disabled, you must explicitly configure the link mode and speed.

When you configure Tri-Rate Ethernet copper interfaces to operate at 1 Gbps, autonegotiation must be enabled.



**NOTE:** On EX Series switches, an interface configuration that disables autonegotiation and manually sets the link speed to 1 Gbps is accepted when you commit the configuration; however, if the interface you are configuring is a Tri-Rate Ethernet copper interface, the configuration is ignored as invalid and autonegotiation is enabled by default.

To correct the invalid configuration and disable autonegotiation:

1. Delete the **no-auto-negotiation** statement and commit the configuration.
2. Set the link speed to 10 or 100 Mbps, set **no-auto-negotiation**, and commit the configuration.

On J Series Services Routers with universal Physical Interface Modules (uPIMs) and on EX Series switches, if the link speed and duplex mode are also configured, the interfaces use the values configured as the desired values in the negotiation. If autonegotiation is disabled, the link speed and link mode must be configured.



**NOTE:** On T4000 routers, the **auto-negotiation** command is ignored for interfaces other than Gigabit Ethernet.



|                                 |                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Default</b>                  | Autonegotiation is automatically enabled. No explicit action is taken after the autonegotiation is complete or if the negotiation fails.                                                                                                                                                                                                                       |
| <b>Options</b>                  | <b>remote-fault (local-interface-online   local-interface-offline)</b> —(Optional) For M Series, MX Series, T Series, TX Matrix routers, and ACX Series routers only, manually configure remote fault on an interface.<br><b>Default:</b> local-interface-online                                                                                               |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>Gigabit Ethernet Autonegotiation Overview</i></li><li>• <i>Configuring Gigabit Ethernet Interfaces on J Series Services Routers</i></li><li>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i></li><li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure) on page 32</a></li></ul> |

---

## backup-liveness-detection

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>backup-liveness-detection {<br/>    backup-peer-ip ipv4-address;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit protocols <b>iccp</b> peer]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.2 for the QFX Series.<br>Statement introduced in Junos OS Release 13.2R1 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | <p>Backup liveness detection determines the peer status (whether it is up or down) by exchanging keep alive messages (UDP-based packets) over the management link between the two Inter-Chassis Control Protocol (ICCP) peers. When an ICCP connection is operationally down, the status of the peers hosting a multichassis link aggregation group (MC-LAG) is detected by sending liveness detection requests to each other. Peers must respond to liveness detection requests within a specified amount of time. If the responses are not received within that time for a given number of consecutive attempts, the liveness detection check fails, and a failure action is implemented. Backup liveness detection must be configured on both peers hosting the MC-LAG.</p> <p>The remaining statement is explained separately.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |



## backup-peer-ip

---

|                                 |                                                                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>backup-peer-ip <i>ipv4-address</i>;</code>                                                                                             |
| <b>Hierarchy Level</b>          | [edit protocols <code>iccp peer backup-liveness-detection</code> ]                                                                           |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.2 for the QFX Series.<br>Statement introduced in Junos OS Release 13.2R1 for EX Series switches. |
| <b>Description</b>              | Specify the IP address of the peer being used as a backup peer in the Bidirectional Forwarding Detection (BFD) configuration.                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                          |



## bandwidth (Interfaces)

---

|                            |                                                                                                                                                                                                  |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>bandwidth rate;</code>                                                                                                                                                                     |
| <b>Hierarchy Level</b>     | [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ] |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                        |
| <b>Description</b>         | Configure an informational-only bandwidth value for an interface. This statement is valid for all logical interface types except multilink and aggregated interfaces.                            |



**NOTE:** We recommend that you be careful when setting this value. Any interface bandwidth value that you configure using the `bandwidth` statement affects how the interface cost is calculated for a dynamic routing protocol, such as OSPF. By default, the interface cost for a dynamic routing protocol is calculated using the following formula:

$$\text{cost} = \text{reference-bandwidth} / \text{bandwidth},$$

where bandwidth is the physical interface speed. However, if you specify a value for bandwidth using the `bandwidth` statement, that value is used to calculate the interface cost, rather than the actual physical interface bandwidth.

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Options</b>                  | <b>rate</b> —Peak rate, in bits per second (bps) or cells per second (cps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000). You can also specify a value in cells per second by entering a decimal number followed by the abbreviation <b>c</b> ; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps.<br><b>Range:</b> Not limited. |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Interface Bandwidth on page 53</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                      |



## broadcast

|                            |                                                                                                                                                                                                                                                                                                 |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>broadcast address;</code>                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>     | [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> <b>address</b> <i>address</i> ] |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                  |
| <b>Description</b>         | Set the broadcast address on the network or subnet. On a subnet you cannot specify a host address of 0, nor can you specify a broadcast address.                                                                                                                                                |
| <b>Default</b>             | The default broadcast address has a host portion of all ones.                                                                                                                                                                                                                                   |
| <b>Options</b>             | <b>address</b> —Broadcast address. The address must have a host portion of either all ones or all zeros. You cannot specify the addresses <b>0.0.0.0</b> or <b>255.255.255.255</b> .                                                                                                            |



**NOTE:** The edit logical-systems hierarchy is not available on QFabric systems.

|                                 |                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration. |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Interface Address on page 48</a></li> </ul>        |



## chassis

```
Syntax chassis {
 aggregated-devices {
 ethernet (Aggregated Devices) {
 device-count number;
 }
 }
 auto-image-upgrade;
 fpc slot {
 pic pic-number {
 sfpplus {
 pic-mode mode;
 }
 }
 power-budget-priority priority;
 }
 lcd-menu {
 fpc slot-number {
 menu-item (menu-name | menu-option) {
 disable;
 }
 }
 }
 nssu {
 upgrade-group group-name {
 fpcs (NSSU Upgrade Groups) (slot-number | [list-of-slot-numbers]);
 member (NSSU Upgrade Groups) member-id {
 fpcs (NSSU Upgrade Groups) (slot-number | [list-of-slot-numbers]);
 }
 }
 }
 psu {
 redundancy {
 n-plus-n (Power Management);
 }
 }
 redundancy {
 graceful-switchover;
 }
 }
```

**Hierarchy Level** [edit]

**Release Information** Statement introduced in Junos OS Release 9.0 for EX Series switches.

**Description** Configure chassis-specific properties for the switch.

The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.



- Related Documentation**
- [Configuring Aggregated Ethernet Links \(CLI Procedure\) on page 84](#)
  - *Upgrading Software by Using Automatic Software Download*
  - *Configuring the LCD Panel on EX Series Switches (CLI Procedure)*
  - *Configuring Graceful Routing Engine Switchover in a Virtual Chassis (CLI Procedure)*
  - *Configuring Power Supply Redundancy (CLI Procedure)*
  - *Configuring the Power Priority of Line Cards (CLI Procedure)*
  - *Configuring Line-Card Upgrade Groups for Nonstop Software Upgrade (CLI Procedure)*



## description (Interfaces)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>description text;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | <code>[edit interfaces <i>interface-name</i>],</code><br><code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code><br><code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 11.1 for the QFX Series.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.<br>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | <p>Provide a textual description of the interface or the logical unit. Any descriptive text you include is displayed in the output of the <b>show interfaces</b> commands, and is also exposed in the <b>ifAlias</b> Management Information Base (MIB) object. It has no effect on the operation of the interface on the router or switch.</p> <p>The textual description can also be included in the extended DHCP relay option 82 Agent Circuit ID suboption.</p>                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <b>text</b> —Text to describe the interface. If the text includes spaces, enclose the entire text in quotation marks.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | <b>interface</b> —To view this statement in the configuration.<br><b>interface-control</b> —To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>Configuring Interface Description</i></li><li>• <a href="#">Adding a Logical Unit Description to the Configuration on page 45</a></li><li>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i></li><li>• <i>Configuring Gigabit and 10-Gigabit Ethernet Interfaces</i></li><li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure) on page 32</a></li><li>• <i>Configuring Gigabit and 10-Gigabit Ethernet Interfaces</i></li><li>• <i>Using DHCP Relay Agent Option 82 Information</i></li><li>• <i>Junos OS Network Interfaces Library for Routing Devices</i></li><li>• <i>Example: Connecting Access Switches to a Distribution Switch</i></li></ul> |



## device-count

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>device-count <i>number</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit <a href="#">chassis aggregated-devices ethernet (Aggregated Devices)</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Range updated in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                             |
| <b>Description</b>              | Configure the number of aggregated Ethernet logical devices available to the switch.                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <p><b><i>number</i></b>—Maximum number of aggregated Ethernet logical interfaces on the switch.</p> <p><b>Range:</b> 1 through 32 for EX2200, EX3200, and standalone EX3300 switches and for EX3300 Virtual Chassis</p> <p><b>Range:</b> 1 through 64 for standalone EX4200, standalone EX4500, and EX6200 switches and for EX4200 and EX4500 Virtual Chassis</p> <p><b>Range:</b> 1 through 239 for EX8200 Virtual Chassis</p> <p><b>Range:</b> 1 through 255 for standalone EX8200 switches</p> |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i></li> <li>• <a href="#">Configuring Aggregated Ethernet Links (CLI Procedure) on page 84</a></li> <li>• <a href="#">Junos OS Network Interfaces Configuration Guide</a></li> </ul>                                                                                                   |



## disable (Interface)

|                            |                                                                                                                                                                                                                                               |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | disable;                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>     | [edit interfaces <i>interface-name</i> ],<br>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ] |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.                           |
| <b>Description</b>         | Disable a physical or a logical interface, effectively unconfiguring it.                                                                                                                                                                      |



### CAUTION:

- Dynamic subscribers and logical interfaces use physical interfaces for connection to the network. The Junos OS allows you to set the interface to disable and commit the change while dynamic subscribers and logical interfaces are still active. This action results in the loss of all subscriber connections on the interface. Use care when disabling interfaces.
- If aggregated SONET links are configured between a T1600 router and a T4000 router, interface traffic is disrupted when you disable the physical interface configured on the T1600 router. If you want to remove the interface, we recommend that you deactivate the interface instead of disabling it.



### NOTE:

- When you use the disable statement at the [edit interfaces] hierarchy level, depending on the PIC type, the interface might or might not turn off the laser. Older PIC transceivers do not support turning off the laser, but newer Gigabit Ethernet (GE) PICs with SFP and XFP transceivers and ATM MIC with SFP do support it and the laser will be turned off when the interface is disabled. If the ATM MIC with SFP is part of an APS group, then the laser will not be turned off when you use the disable statement at the [edit interfaces] hierarchy level..
- When you disable or deactivate an interface, then all the references made to the deactivated interface must be removed from the routing instance.



**WARNING:** Do not stare into the laser beam or view it directly with optical instruments even if the interface has been disabled.



|                                 |                                                                                                                                                                                |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Disabling a Physical Interface on page 46</a></li><li>• <a href="#">Disabling a Logical Interface on page 47</a></li></ul> |



## enhanced-hash-key

```

Syntax enhanced-hash-key {
 ecmp-resilient-hash;
 fabric-load-balance {
 flowlet {
 inactivity-interval interval;
 }
 per-packet;
 }
 hash-mode {
 layer2-header;
 layer2-payload;
 }
 inet {
 no-ipv4-destination-address;
 no-ipv4-source-address;
 no-l4-destination-port;
 no-l4-source-port;
 no-protocol;
 vlan-id;
 }
 inet6 {
 no-ipv6-destination-address;
 no-ipv6-source-address;
 no-l4-destination-port;
 no-l4-source-port;
 no-next-header;
 vlan-id;
 }
 layer2 {
 no-destination-mac-address;
 no-ether-type;
 no-source-mac-address;
 vlan-id;
 }
 }

```

**Hierarchy Level** [edit forwarding-options]

**Release Information** Statement introduced in Junos OS Release 13.2X51-D15 for EX Series switches.  
Statement introduced in Junos OS Release 13.2X51-D20 for QFX Series devices.  
The **fabric-load-balance** statement introduced in Junos OS Release 14.1X53-D10.

**Description** Configure the hashing key used to hash link aggregation group (LAG) and equal-cost multipath (ECMP) traffic, or enable adaptive load balancing (ALB) in a Virtual Chassis Fabric (VCF).

The hashing algorithm is used to make traffic-forwarding decisions for traffic entering a LAG bundle or for traffic exiting a switch when ECMP is enabled.



For LAG bundles, the hashing algorithm determines how traffic entering a LAG bundle is placed onto the bundle's member links. The hashing algorithm tries to manage bandwidth by evenly load-balancing all incoming traffic across the member links in the bundle.

When ECMP is enabled, the hashing algorithm determines how incoming traffic is forwarded to the next-hop device.

The remaining statements are explained separately.

|                           |                                                               |
|---------------------------|---------------------------------------------------------------|
| <b>Required Privilege</b> | interface—To view this statement in the configuration.        |
| <b>Level</b>              | interface-control—To add this statement to the configuration. |

|                              |                                                                                                                                                                                                                                                                                                          |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic (CLI Procedure) on page 100</a></li><li>• <a href="#">Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic on page 11</a></li></ul> |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|



## ether-options

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>ether-options {   802.3ad {     aex;     (backup   primary);     lacp {       force-up;       port-priority     }   }   (auto-negotiation   no-auto-negotiation);   ethernet-switch-profile {     tag-protocol-id;   }   (flow-control   no-flow-control);   ieee-802-3az-eee;   link-mode mode;   (loopback   no-loopback);   speed (speed   auto-negotiation); }</pre>                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | <pre>[edit interfaces interface-name], [edit interfaces interface-range range]</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.3R2.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | <p>Configure Ethernet properties for a Gigabit Ethernet interface or a 10-Gigabit Ethernet interface.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i></li> <li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure) on page 32</a></li> <li>• <a href="#">Configuring Gigabit Ethernet Interfaces (J-Web Procedure) on page 35</a></li> <li>• <a href="#">Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure) on page 89</a></li> <li>• <i>Configuring Q-in-Q Tunneling (CLI Procedure)</i></li> <li>• <a href="#">Junos OS Ethernet Interfaces Configuration Guide</a></li> </ul> |



## ethernet (Aggregated Devices)

|                                 |                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>ethernet {   device-count <i>number</i>;   lacp {     link-protection {       non-revertive;     }     system-priority;   } }</pre>                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit <a href="#">chassis aggregated-devices</a> ]                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | <p>Configure properties for Ethernet aggregated devices on the switch.</p> <p>The remaining statement is explained separately.</p>                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Aggregated Ethernet Links (CLI Procedure) on page 84</a></li> <li>• <a href="#">Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure) on page 89</a></li> <li>• <a href="#">Junos OS Ethernet Interfaces Configuration Guide</a></li> </ul> |

## eui-64

|                                 |                                                                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | eui-64;                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> unit <i>number</i> family inet6 address <i>address</i> ]                                                                                                                                                                                               |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.3 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.2 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> |
| <b>Description</b>              | For interfaces that carry IP version 6 (IPv6) traffic, automatically generate the host number portion of interface addresses.                                                                                                                                                                 |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Interface Address on page 48</a></li> </ul>                                                                                                                                                                              |



## family

|                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                    | <a href="#">family ccc on page 184</a><br><a href="#">family ethernet-switching on page 184</a><br><a href="#">family inet on page 184</a><br><a href="#">family inet6 on page 186</a><br><a href="#">family iso on page 187</a>                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>family ccc</b>                | <pre>family ccc;   filter {     group <i>group-number</i>;     input <i>filter-name</i>;     input-list [<i>filter-names</i>];     output <i>filter-name</i>;     output-list [<i>filter-names</i>];   }   policer {     input <i>policer-name</i>;     output <i>policer-name</i>;   } }</pre>                                                                                                                                                                                                                                                                                                                                                                      |
| <b>family ethernet-switching</b> | <pre>family ethernet-switching {   filter {     input <i>filter-name</i>;     output <i>filter-name</i>;   }   <a href="#">interface-mode</a> (access   trunk);   recovery-timeout <i>seconds</i>;   storm-control <i>profile-name</i>;   vlan {     members (<i>vlan-name</i>   [<i>-vlan-names</i>]   all);   } }</pre>                                                                                                                                                                                                                                                                                                                                            |
| <b>family inet</b>               | <pre>family inet {   accounting {     destination-class-usage;     source-class-usage {       input;       output;     }   }   <a href="#">address</a> <i>ipv4-address</i> {     <a href="#">arp</a> <i>ip-address</i> (mac   multicast-mac) <i>mac-address</i> &lt;publish&gt;;     <a href="#">broadcast</a> <i>address</i>;     <a href="#">preferred</a>;     <a href="#">primary</a>;     vrrp-group <i>group-number</i> {       (accept-data   no-accept-data);       advertise-interval <i>seconds</i>;       advertisements-threshold <i>number</i>;       authentication-key <i>key</i>;       authentication-type <i>authentication</i>;     }   } }</pre> |



```
fast-interval milliseconds;
(preempt | no-preempt) {
 hold-time seconds;
}
priority number;
track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
}
virtual-address [addresses];
vrrp-inherit-from {
 active-group group-number;
 active-interface interface-name;
}
}
}
filter {
 input filter-name;
 output filter-name;
}
mtu bytes;
no-neighbor-learn;
no-redirects;
primary;
rpf-check {
 fail-filter filter-name;
 mode {
 loose;
 }
}
}
```



```
family inet6 {
 accounting {
 destination-class-usage;
 source-class-usage {
 input;
 output;
 }
 }
 address address {
 eui-64;
 ndp ip-address (mac | multicast-mac) mac-address <publish>;
 preferred;
 primary;
 vrrp-inet6-group group-id {
 accept-data | no-accept-data;
 advertisements-threshold number;
 authentication-key key;
 authentication-type authentication;
 fast-interval milliseconds;
 inet6-advertise-interval milliseconds;
 preempt | no-preempt {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/mask routing-instance instance-name priority-cost cost;
 }
 virtual-inet6-address [addresses];
 virtual-link-local-address ipv6-address;
 vrrp-inherit-from {
 active-group group-name;
 active-interface interface-name;
 }
 }
 }
 (dad-disable | no-dad-disable);
 filter {
 input filter-name;
 output filter-name;
 }
 mtu bytes;
 nd6-stale-time time;
 no-neighbor-learn;
 no-redirects;
 policer {
 input policer-name;
 output policer-name;
 }
 rpf-check {
 fail-filter filter-name;
 mode {
 loose;
 }
 }
}
```



```

 }
 }
}

```

```

family iso {
 address interface-address;
 mtu bytes;
}

```

|                     |                                                                                                                                                                                                                                                                                                                      |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hierarchy Level     | [edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ],<br>[edit interfaces interface-range <i>name</i> unit <i>logical-unit-number</i> ]                                                                                                                                                   |
| Release Information | Statement introduced in Junos OS Release 9.0 for EX Series switches, including options <b>ethernet-switching</b> , <b>inet</b> , and <b>iso</b> .<br>Option <b>inet6</b> introduced in Junos OS Release 9.3 for EX Series switches.<br>Options <b>ccc</b> introduced in Junos OS Release 9.5 for EX Series switches. |
| Description         | Configure protocol family information for the logical interface on the switch.<br><br>You must configure a logical interface to be able to use the physical device.                                                                                                                                                  |
| Default             | Interfaces on EX4300 switches are set to <b>family ethernet-switching</b> by the default factory configuration. Before you can change the family setting for an interface to another family type, you must delete this default setting or any user-configured family setting.                                        |



**Options** See [Table 41 on page 188](#) for protocol families available on the switch interfaces. Different protocol families support different subsets of the interface types on the switch. Interface types on the switch are:

- Aggregated Ethernet (**ae0**)
- 40-Gigabit Ethernet (**et**)
- Gigabit Ethernet (**ge**)
- Interface-range configuration (**interface-range**)
- Loopback (**lo0**)
- Management Ethernet (**me0**)
- Integrated Routing and Bridging (IRB) interfaces (IRB) (**irb**)
- Virtual management Ethernet (**vme**)
- 10-Gigabit Ethernet (**xe**)

If you are using an interface range, the supported protocol families are the ones supported by the interface types that compose the range.

Not all interface types support all **family** substatements. Check your switch CLI for supported substatements for a particular protocol family configuration.

**Table 41: Protocol Families and Supported Interface Types**

| Family                    | Description                                | Supported Interface Types |    |    |     |     |     |     |    |
|---------------------------|--------------------------------------------|---------------------------|----|----|-----|-----|-----|-----|----|
|                           |                                            | ae0                       | et | ge | irb | lo0 | me0 | vme | xe |
| <b>ccc</b>                | Circuit cross-connect protocol family      | ✓                         | ✓  | ✓  |     |     |     |     | ✓  |
| <b>ethernet-switching</b> | Ethernet switching protocol family         | ✓                         | ✓  | ✓  |     |     |     |     | ✓  |
| <b>inet</b>               | IPv4 protocol family                       | ✓                         | ✓  | ✓  | ✓   | ✓   | ✓   | ✓   | ✓  |
| <b>inet6</b>              | IPv6 protocol family                       | ✓                         | ✓  | ✓  | ✓   | ✓   | ✓   | ✓   | ✓  |
| <b>iso</b>                | Junos OS protocol family for IS-IS traffic | ✓                         | ✓  | ✓  | ✓   | ✓   | ✓   | ✓   | ✓  |

The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.



**Related  
Documentation**

- *Configuring a DHCP Server on Switches (CLI Procedure)*
- [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\) on page 32](#)
- [Configuring Aggregated Ethernet Links \(CLI Procedure\) on page 84](#)
- *Configuring Integrated Routing and Bridging Interfaces (CLI Procedure)*



## filter

|                            |                                                                                                                                                                                                                                                    |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>filter {   group <i>filter-group-number</i>;   input <i>filter-name</i>;   input-list [ <i>filter-names</i> ];   output <i>filter-name</i>;   output-list [ <i>filter-names</i> ]; }</pre>                                                    |
| <b>Hierarchy Level</b>     | <pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]</pre>   |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>                                      |
| <b>Description</b>         | <p>Apply a filter to an interface. You can also use filters for encrypted traffic. When you configure filters, you can configure them under the <b>family ethernet-switching</b>, <b>inet</b>, <b>inet6</b>, <b>mpls</b>, or <b>vpls</b> only.</p> |




**NOTE:** On QFX3500 and QFX3600 switches running Enhanced Layer 2 Software and on OCX Series switches, VPLS is not supported.

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Options</b>                  | <p><b>group <i>filter-group-number</i></b>—Define an interface to be part of a filter group.<br/> <b>Range:</b> 1 through 255</p> <p><b>input <i>filter-name</i></b>—Name of one filter to evaluate when packets are received on the interface.</p> <p><b>output <i>filter-name</i></b>—Name of one filter to evaluate when packets are transmitted on the interface.</p> <p>The remaining statements are explained separately.</p>                                                                                                |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Applying a Filter to an Interface</i></li> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> <li>• <i>Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices</i></li> <li>• <i>Junos OS Administration Library for Routing Devices</i></li> <li>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i></li> <li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure) on page 32</a></li> </ul> |



- [Configuring Gigabit and 10-Gigabit Ethernet Interfaces](#)
- [Configuring Firewall Filters \(CLI Procedure\)](#)
- [Configuring Firewall Filters and Policers for VPLS](#)
- [family](#)
- [family on page 184](#)

## flow-control

|                                                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                                                                                                                                                                     | (flow-control   no-flow-control);                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>                                                                                                                                                                                                                                                                                                                                            | [edit interfaces <i>interface-name</i> aggregated-ether-options],<br>[edit interfaces <i>interface-name</i> ether-options],<br>[edit interfaces <i>interface-name</i> fastether-options],<br>[edit interfaces <i>interface-name</i> gigether-options],<br>[edit interfaces <i>interface-name</i> multiservice-options],<br>[edit interfaces interface-range <i>name</i> aggregated-ether-options],<br>[edit interfaces interface-range <i>name</i> ether-options] |
| <b>Release Information</b>                                                                                                                                                                                                                                                                                                                                        | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 in EX Series switches.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.                                                                                                                                                                                                                                                |
| <b>Description</b>                                                                                                                                                                                                                                                                                                                                                | For aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only, explicitly enable flow control, which regulates the flow of packets from the router or switch to the remote side of the connection. Enabling flow control is useful when the remote device is a Gigabit Ethernet switch. Flow control is not supported on the 4-port Fast Ethernet PIC.                                                                                             |
| <div>  <p><b>NOTE:</b> On the Type 5 FPC, to prioritize control packets in case of ingress oversubscription, you must ensure that the neighboring peers support MAC flow control. If the peers do not support MAC flow control, then you must disable flow control.</p> </div> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Default</b>                                                                                                                                                                                                                                                                                                                                                    | Flow control is enabled.                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b>                                                                                                                                                                                                                                                                                                                                   | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>                                                                                                                                                                                                                                                                                                                                      | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Flow Control on page 48</a></li> <li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure)</a></li> <li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure) on page 32</a></li> </ul>                                                                                                                                                                          |



## force-up

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | force-up;                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> ether-options <a href="#">802.3ad lacp</a> ]                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Set the state of the interface as UP when the peer has limited LACP capability.                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i></li><li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure) on page 32</a></li><li>• <a href="#">Configuring Gigabit Ethernet Interfaces (J-Web Procedure) on page 35</a></li><li>• <a href="#">Understanding Aggregated Ethernet Interfaces and LACP on page 8</a></li><li>• <i>Junos OS Ethernet Interfaces Configuration Guide</i></li></ul> |

## gratuitous-arp-reply

---

|                                 |                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | (gratuitous-arp-reply   no-gratuitous-arp-reply);                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> ]                                                                                                                                                                           |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 in EX Series switches.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers. |
| <b>Description</b>              | For Ethernet interfaces, enable updating of the Address Resolution Protocol (ARP) cache for gratuitous ARPs.                                                                                                       |
| <b>Default</b>                  | Updating of the ARP cache is disabled on all Ethernet interfaces.                                                                                                                                                  |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Gratuitous ARP on page 79</a></li><li>• <a href="#">no-gratuitous-arp-request on page 235</a></li></ul>                                            |



## hash-mode

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>hash-mode {     layer2-header;     layer2-payload; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | [edit forwarding-options <a href="#">enhanced-hash-key</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 13.2X51-D15 for EX Series switches.<br>Statement introduced in Junos OS Release 13.2X51-D20 for QFX Series devices.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | <p>Select the mode for the hashing algorithm.</p> <p>The hashing algorithm is used to make traffic-forwarding decisions for traffic entering a LAG bundle or for traffic exiting a switch when ECMP is enabled.</p> <p>For LAG bundles, the hashing algorithm determines how traffic entering a LAG bundle is placed onto the bundle's member links. The hashing algorithm tries to manage bandwidth by evenly load-balancing all incoming traffic across the member links in the bundle.</p> <p>When ECMP is enabled, the hashing algorithm determines how incoming traffic is forwarded to the next-hop device.</p> <p>The hash mode that is set using this statement determines which fields are inspected by the hashing algorithm. You must set the hash mode to <b>layer2-payload</b> if you want the hashing algorithm to inspect fields in the Layer 2 payload when making hashing decisions. You must set the hash mode to <b>layer2-header</b> if you want the hashing algorithm to inspect fields in the Layer 2 header when making hashing decisions.</p> <p>If the hash mode is set to <b>layer2-payload</b>, you can set the fields used by the hashing algorithm to hash IPv4 traffic using the <b>set forwarding-options enhanced-hash-key inet</b> statement. You can set the fields used by the hashing algorithm to hash IPv6 traffic using the <b>set forwarding-options enhanced-hash-key inet6</b> statement.</p> <p>If the hash mode is set to <b>layer2-header</b>, you can set the fields that the hashing algorithm inspects in the Layer 2 header using the <b>set forwarding-options enhanced-hash-key layer2</b> statement.</p> |
| <b>Default</b>                  | layer2-payload                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <p><b>layer-2-payload</b>—Set the hashing algorithm to use fields in the Layer 2 payload to make hashing decisions.</p> <p><b>layer-2-header</b>—Set the hashing algorithm to use fields in the Layer 2 header to make hashing decisions.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |




**Related  
Documentation**

- [Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic \(CLI Procedure\) on page 100](#)
- [Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic on page 11](#)
- [enhanced-hash-key on page 180](#)
- [inet on page 199](#)
- [inet6 on page 201](#)
- [layer2 on page 210](#)



## hold-time (Physical Interface)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | hold-time up <i>milliseconds</i> down <i>milliseconds</i> ;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> ],<br>[edit interfaces interface-range <i>interface-range-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 10.4R5 for EX Series switches.<br>Statement introduced in Junos OS Release 11.1 for the QFX Series.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.<br>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                                                                                                                                                                                                                                                   |
| <b>Description</b>              | Specify the <b>hold-time</b> value to use to damp shorter interface transitions milliseconds.<br>When an interface goes from up to down, it is not advertised to the rest of the system as being down until it has remained down for the hold-time period. Similarly, an interface is not advertised as being up until it has remained up for the hold-time period.                                                                                                                                                                                                                                                       |
|                                 | <div>  <b>NOTE:</b> <ul style="list-style-type: none"> <li>We recommend that you configure the hold-time value after determining an appropriate value by performing repeated tests in the actual hardware environment. This is because the appropriate value for hold-time depends on the hardware (XFP, SFP, SR, ER, or LR) used in the networking environment.</li> <li>The hold-time option is not available for controller interfaces.</li> </ul> </div>                                                                             |
| <b>Default</b>                  | Interface transitions are not damped.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <p><b>down <i>milliseconds</i></b>—Hold time to use when an interface transitions from up to down. Junos OS advertises the transition within 100 milliseconds of the time value you specify.</p> <p><b>Range:</b> 0 through 4,294,967,295</p> <p><b>Default:</b> 0 (interface transitions are not damped)</p> <p><b>up <i>milliseconds</i></b>—Hold time to use when an interface transitions from down to up. Junos OS advertises the transition within 100 milliseconds of the time value you specify.</p> <p><b>Range:</b> 0 through 4,294,967,295</p> <p><b>Default:</b> 0 (interface transitions are not damped)</p> |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><i>advertise-interval</i></li> <li><i>interfaces (for EX Series switches)</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |



- *Physical Interface Damping Overview*
- *Damping Shorter Physical Interface Transitions*
- *Damping Longer Physical Interface Transitions*



## iccp

```
Syntax iccp {
 authentication-key string;
 local-ip-addr local-ip-addr;
 peer ip-address {
 authentication-key string;
 backup-liveness-detection {
 backup-peer-ip ip-address;
 }
 liveness-detection {
 detection-time {
 threshold milliseconds;
 }
 minimum-interval milliseconds;
 minimum-receive-interval milliseconds;
 multiplier number;
 no-adaptation;
 transmit-interval {
 minimum-interval milliseconds;
 threshold milliseconds;
 }
 version (1 | automatic);
 }
 local-ip-addr ipv4-address;
 session-establishment-hold-time seconds;
 }
 session-establishment-hold-time seconds;
 traceoptions {
 file <filename> <files number> <match regular-expression> <microsecond-stamp>
 <size size> <world-readable | no-world-readable>;
 flag flag;
 no-remote-trace;
 }
}
```

**Hierarchy Level** [edit protocols]

**Release Information** Statement introduced in Junos OS Release 10.0 for MX Series routers.  
Statement introduced in Junos OS Release 12.2 for the QFX Series.  
Statement introduced in Junos OS Release 12.3R2 for EX Series switches.

**Description** Configure Inter-Chassis Control Protocol (ICCP) between the multichassis link aggregation group (MC-LAG) peers. ICCP replicates forwarding information, validates configurations, and propagates the operational state of the MC-LAG members.



**NOTE:** Backup liveness detection is not supported on MX Series routers.

The remaining statements are explained separately.



|                           |                                                             |
|---------------------------|-------------------------------------------------------------|
| <b>Required Privilege</b> | routing—To view this statement in the configuration.        |
| <b>Level</b>              | routing-control—To add this statement to the configuration. |

## ieee-802-3az-eee

---

|                              |                                                                                                                                                  |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                | ieee-802-3az-eee;                                                                                                                                |
| <b>Hierarchy Level</b>       | [edit interfaces <i>interface-name</i> ether-options]                                                                                            |
| <b>Release Information</b>   | Statement introduced in Junos OS Release 12.2 for EX Series switches.                                                                            |
| <b>Description</b>           | Configure Energy Efficient Ethernet (EEE) on an EEE-capable Base-T copper interface.                                                             |
| <b>Default</b>               | EEE is disabled on EEE-capable interfaces.                                                                                                       |
| <b>Required Privilege</b>    | system—To view this statement in the configuration.                                                                                              |
| <b>Level</b>                 | system-control—To add this statement to the configuration.                                                                                       |
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• <a href="#">Configuring Energy Efficient Ethernet on Interfaces (CLI Procedure) on page 97</a></li></ul> |



## inet (enhanced-hash-key)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>inet {     no-ipv4-destination-address;     no-ipv4-source-address;     no-l4-destination-port;     no-l4-source-port;     no-protocol;     vlan-id; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>     | [edit forwarding-options <a href="#">enhanced-hash-key</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b> | <p>Statement introduced in Junos OS Release 13.2X51-D15 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2X51-D20 for QFX Series devices.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>         | <p>Select the payload fields in IPv4 traffic used by the hashing algorithm to make hashing decisions.</p> <p>When IPv4 traffic enters a LAG and the hash mode is set to Layer 2 payload, the hashing algorithm checks the fields configured using the <b>inet</b> statement and uses the information in the fields to decide how to place traffic onto the LAG bundle's member links or how to forward traffic to the next hop device when ECMP is enabled.</p> <p>The hashing algorithm, when used to hash LAG bundle traffic, always tries to manage bandwidth by evenly load-balancing all incoming traffic across the member links in the bundle.</p> <p>The hashing algorithm only inspects the IPv4 fields in the payload to make hashing decisions when the hash mode is set to <b>layer2-payload</b>. The hash mode is set to Layer 2 payload by default. You can set the hash mode to Layer 2 payload using the <b>set forwarding-options enhanced-hash-key hash-mode layer2-payload</b> statement.</p> |
| <b>Default</b>             | <p>The following fields are used by the hashing algorithm to make hashing decisions for IPv4 traffic:</p> <ul style="list-style-type: none"> <li>• IP destination address</li> <li>• IP source address</li> <li>• Layer 4 destination port</li> <li>• Layer 4 source port</li> <li>• Protocol</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>             | <p><b>no-ipv4-destination-address</b>—Exclude the IPv4 destination address field from the hashing algorithm.</p> <p><b>no-ipv4-source-address</b>—Exclude the IPv4 source address field from the hashing algorithm.</p> <p><b>no-l4-destination-port</b>—Exclude the Layer 4 destination port field from the hashing algorithm.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |



**no-l4-source-port**—Exclude the Layer 4 source port field from the hashing algorithm.

**no-protocol**—Exclude the protocol field from the hashing algorithm.

**vlan-id**—Include the VLAN ID field in the hashing algorithm.

|                           |                                                               |
|---------------------------|---------------------------------------------------------------|
| <b>Required Privilege</b> | interface—To view this statement in the configuration.        |
| <b>Level</b>              | interface-control—To add this statement to the configuration. |

- |                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic (CLI Procedure) on page 100</a></li><li>• <a href="#">Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic on page 11</a></li><li>• <a href="#">enhanced-hash-key on page 180</a></li><li>• <a href="#">hash-mode on page 193</a></li><li>• <a href="#">inet6 on page 201</a></li></ul> |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|



## inet6 (enhanced-hash-key)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>inet6 {     no-ipv6-destination-address;     no-ipv6-source-address;     no-l4-destination-port;     no-l4-source-port;     no-next-header;     vlan-id; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>     | [edit forwarding-options <a href="#">enhanced-hash-key</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b> | <p>Statement introduced in Junos OS Release 13.2X51-D15 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2X51-D20 for QFX Series devices.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>         | <p>Select the payload fields in an IPv6 packet used by the hashing algorithm to make hashing decisions.</p> <p>When IPv6 traffic enters a LAG and the hash mode is set to Layer 2 payload, the hashing algorithm checks the fields configured using this statement and uses the information in the fields to decide how to place traffic onto the LAG bundle's member links or to forward traffic to the next hop device when ECMP is enabled.</p> <p>The hashing algorithm, when used to hash LAG traffic, always tries to manage bandwidth by evenly load-balancing all incoming traffic across the member links in the bundle.</p> <p>The hashing algorithm only inspects the IPv6 fields in the payload to make hashing decisions when the hash mode is set to Layer 2 payload. The hash mode is set to Layer 2 payload by default. You can set the hash mode to Layer 2 payload using the <b>set forwarding-options enhanced-hash-key hash-mode layer2-payload</b> statement.</p> |
| <b>Default</b>             | <p>The data in the following fields are used by the hashing algorithm to make hashing decisions for IPv6 traffic:</p> <ul style="list-style-type: none"> <li>• IP destination address</li> <li>• IP source address</li> <li>• Layer 4 destination port</li> <li>• Layer 4 source port</li> <li>• Next header</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Options</b>             | <p><b>no-ipv6-destination-address</b>—Exclude the IPv6 destination address field from the hashing algorithm.</p> <p><b>no-ipv6-source-address</b>—Exclude the IPv6 source address field from the hashing algorithm.</p> <p><b>no-l4-destination-port</b>—Exclude the Layer 4 destination port field from the hashing algorithm.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |



**no-l4-source-port**—Exclude the Layer 4 source port field from the hashing algorithm.

**no-next-header**—Exclude the Next Header field from the hashing algorithm.

**vlan-id**—Include the VLAN ID field in the hashing algorithm.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic \(CLI Procedure\) on page 100](#)
- [Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic on page 11](#)
- [enhanced-hash-key on page 180](#)
- [hash-mode on page 193](#)
- [inet on page 199](#)

---

## interface (Multichassis Protection)

---

**Syntax** interface *interface-name*;

**Hierarchy Level** [edit [multi-chassis multi-chassis-protection](#) peer]



**Release Information** Statement introduced in Junos OS Release 9.6 for MX Series routers.  
Statement introduced in Junos OS Release 12.2 for the QFX Series.  
Statement introduced in Junos OS Release 12.3R2 for EX Series switches.

**Description** Specify the name of the interface that is being used as an interchassis link-protection link (ICL-PL). The two switches hosting a multichassis link aggregation group (MC-LAG) use this link to pass Inter-Chassis Control Protocol (ICCP) and data traffic.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.



## interface-mode

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax                   | interface-mode (access   trunk);                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Hierarchy Level          | [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family bridge],<br>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family ethernet-switching],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family bridge]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Release Information      | Statement introduced in Junos OS Release 9.2.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Statement introduced in Junos OS Release 13.2 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Description              | <p> <b>NOTE:</b> This statement supports the Enhanced Layer 2 Software (ELS) configuration style. If your switch runs software that does not support ELS, see <i>port-mode</i>. For ELS details, see <i>Getting Started with Enhanced Layer 2 Software</i>.</p> <p>(QFX Series 3500 and 3600 standalone switches)—Determine whether the logical interface accepts or discards packets based on VLAN tags. Specify the <b>trunk</b> option to accept packets with a VLAN ID that matches the list of VLAN IDs specified in the <b>vlan-id</b> or <b>vlan-id-list</b> statement, then forward the packet within the bridge domain or VLAN configured with the matching VLAN ID. Specify the <b>access</b> option to accept packets with no VLAN ID, then forward the packet within the bridge domain or VLAN configured with the VLAN ID that matches the VLAN ID specified in the <b>vlan-id</b> statement.</p> <p> <b>NOTE:</b> On MX Series routers, if you want IGMP snooping to be functional for a bridge domain, then you should not configure <b>interface-mode</b> and <b>irb</b> for that bridge. Such a configuration commit succeeds, but IGMP snooping is not functional, and a message informing the same is displayed. For more information, see <i>Configuring a Trunk Interface on a Bridge Network</i>.</p> |
| Options                  | <p><b>access</b>—Configure a logical interface to accept untagged packets. Specify the VLAN to which this interface belongs using the <b>vlan-id</b> statement.</p> <p><b>trunk</b>—Configure a single logical interface to accept packets tagged with any VLAN ID specified with the <b>vlan-id</b> or <b>vlan-id-list</b> statement.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Required Privilege Level | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Related Documentation    | <ul style="list-style-type: none"> <li>• <i>Configuring a Logical Interface for Access Mode</i></li> <li>• <i>Configuring a Logical Interface for Trunk Mode</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |



- *Example: Connecting Access Switches to a Distribution Switch*



## interface-range

```
Syntax interface-range name {
 accounting-profile name;
 description text;
 disable;
 ether-options {
 802.3ad {
 aex;
 (backup | primary);
 lacp {
 force-up;
 }
 }
 (auto-negotiation | no-auto-negotiation);
 (flow-control | no-flow-control);
 ieee-802-3az-eee;
 link-mode mode;
 (loopback | no-loopback);
 speed (auto-negotiation | speed);
 }
 (gratuitous-arp-reply | no-gratuitous-arp-reply);
 hold-time up milliseconds down milliseconds;
 member interface-name;
 member-range starting-interface name to ending-interface name;
 mtu bytes;
 no-gratuitous-arp-request;
 traceoptions {
 flag flag;
 }
 (traps | no-traps);
 unit logical-unit-number {
 accounting-profile name;
 bandwidth rate;
 description text;
 disable;
 family family-name {...}
 proxy-arp (restricted | unrestricted);
 (traps | no-traps);
 vlan-id (VLAN Tagging and Layer 3 Subinterfaces) vlan-id-number;
 }
 vlan-tagging;
}
```

**Hierarchy Level** [edit interfaces]

**Release Information** Statement introduced in Junos OS Release 10.0 for EX Series switches.

**Description** Group interfaces that share a common configuration profile.



**NOTE:** You can specify interface ranges only for Gigabit and 10-Gigabit Ethernet interfaces.



**Options**    *name*—Name of the interface range.



**NOTE:** You can use regular expressions and wildcards to specify the interfaces in the member configuration. Do not use wildcards for interface types.


The remaining statements are explained separately.

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                         interface-control—To add this statement to the configuration.

- Related Documentation**
- [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\)](#)
  - [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\) on page 32](#)
  - [Understanding Interface Ranges on EX Series Switches](#)
  - [Understanding Interface Ranges on EX Series Switches on page 24](#)
  - [EX Series Switches Interfaces Overview on page 3](#)
  - [Junos OS Interfaces Fundamentals Configuration Guide](#)



## lacp (Aggregated Ethernet)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>lacp {   (active   passive);   admin-key <i>key</i>;   accept-data;   fast-failover;   link-protection {     disable;     (revertive   non-revertive);   }   periodic <i>interval</i>;   system-id <i>mac-address</i>;   system-priority <i>priority</i>; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>     | <p>[edit interfaces <i>aeX</i> aggregated-ether-options]</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>aeX</i> aggregated-ether-options]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>fast-failover</b> option introduced in Junos OS Release 12.2.</p> <p>Support for logical systems introduced in Junos OS Release 14.1.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Description</b>         | <p>Configure the Link Aggregation Control Protocol (LACP) for aggregated Ethernet interfaces only.</p> <p>When you configure the <b>accept-data</b> statement at the [edit interfaces <i>aeX</i> aggregated-ether-options lacp] hierarchy level, the router processes packets received on a member link irrespective of the LACP state if the aggregated Ethernet bundle is up.</p> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;"> <p> <b>NOTE:</b> When you configure the <b>accept-data</b> statement at the [edit interfaces <i>aeX</i> aggregated-ether-options lacp] hierarchy level, this behavior occurs:</p> <ul style="list-style-type: none"> <li>• By default, the <b>accept-data</b> statement is not configured when LACP is enabled.</li> <li>• You can configure the <b>accept-data</b> statement to improve convergence and reduce the number of dropped packets when member links in the bundle are enabled or disabled.</li> <li>• When LACP is down and a member link receives packets, the router or switch does not process packets as defined in the IEEE 802.1ax standard. According to this standard, the packets should be dropped, but they are processed instead because the <b>accept-data</b> statement is configured.</li> </ul> </div> |
| <b>Default</b>             | If you do not specify LACP as either <b>active</b> or <b>passive</b> , LACP remains passive.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>             | <b>active</b> —Initiate transmission of LACP packets.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |



**admin-key *number***—Specify an administrative key for the router or switch.



**NOTE:** You must also configure multichassis link aggregation (MC-LAG) when you configure the **admin-key**.

**fast-failover**—Specify to override the IEEE 802.3ad standard and allow the standby link to receive traffic. Overriding the default behavior facilitates subsecond failover.

**passive**—Respond to LACP packets.

The remaining statements are explained separately.

|                                 |                                                                                                                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.                                                                                                                           |
|                                 | interface-control—To add this statement to the configuration.                                                                                                                    |
| <b>Related Documentation</b>    | • <i>Configuring LACP for Aggregated Ethernet Interfaces</i>                                                                                                                     |
|                                 | • <a href="#">Configuring Aggregated Ethernet LACP (CLI Procedure) on page 88</a>                                                                                                |
|                                 | • <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i> |



## lacp (802.3ad)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>lacp {     force-up;     port-priority }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | <p>[edit interfaces <i>interface-name</i> ether-options <a href="#">802.3ad</a>]</p> <p>[edit interfaces aeX aggregated-ether-options]</p> <p>[edit chassis aggregated-devices ethernet]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Support for LACP link protection introduced in Junos OS Release 11.4 for EX Series switches.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | <p>Configure the Link Aggregation Control Protocol (LACP) parameters for aggregated Ethernet interfaces on the global level (for all the aggregated Ethernet interfaces on the switch) or for a specific aggregated Ethernet interface.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i></li> <li>• <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i></li> <li>• <a href="#">Configuring Aggregated Ethernet Links (CLI Procedure) on page 84</a></li> <li>• <a href="#">Configuring Aggregated Ethernet LACP (CLI Procedure) on page 88</a></li> <li>• <a href="#">Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure) on page 89</a></li> <li>• <a href="#">Understanding Aggregated Ethernet Interfaces and LACP on page 8</a></li> <li>• <i>Junos OS Ethernet Interfaces Configuration Guide</i></li> </ul> |



## layer2 (enhanced-hash-key)

---

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>layer2 {<br/>    no-destination-mac-address;<br/>    no-ether-type;<br/>    no-source-mac-address;<br/>    vlan-id;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>     | [edit forwarding-options <b>enhanced-hash-key</b> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b> | Statement introduced in Junos OS Release 13.2X51-D15 for EX Series switches.<br>Statement introduced in Junos OS Release 13.2X51-D20 for QFX Series devices.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>         | <p>Select the fields in the Layer 2 header that are used by the hashing algorithm to make hashing decisions.</p> <p>When traffic enters a link aggregation group (LAG) bundle, the hashing algorithm checks the fields configured using this statement and uses the information in the fields to decide how to place traffic onto the LAG bundle's member links. The hashing algorithm always tries to manage bandwidth by evenly load-balancing all incoming traffic across the member links in the bundle.</p> <p>When traffic is exiting a device that has enabled ECMP, the hashing algorithm checks the fields configured using this statement and uses the information in the fields to decide how to forward traffic to the next hop device.</p> <p>The hashing algorithm only inspects the fields in the Layer 2 header when the hash mode is set to Layer 2 header. You can set the hash mode to Layer 2 header using the <b>set forwarding-options enhanced-hash-key hash-mode layer2-header</b> statement.</p> |
| <b>Default</b>             | <p>The hash mode of the hashing algorithm is set to Layer 2 payload, by default. When the hash mode is set to Layer 2 payload, the hashing algorithm does not use fields in the Layer 2 header to make hashing decisions.</p> <p>The following fields are used by the hashing algorithm when the hash mode of the hashing algorithm is set to Layer 2 header, by default:</p> <ul style="list-style-type: none"><li>• Destination MAC address</li><li>• Ethertype</li><li>• Source MAC address</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>             | <p><b>no-destination-mac-address</b>—Exclude the destination MAC address field from the hashing algorithm.</p> <p><b>no-ether-type</b>—Exclude the Ethertype field from the hashing algorithm.</p> <p><b>no-source-mac-address</b>—Exclude the source MAC address field from the hashing algorithm.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |



**vlan-id**—Include the VLAN ID field in the hashing algorithm.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic \(CLI Procedure\) on page 100](#)
- [Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic on page 11](#)
- [enhanced-hash-key on page 180](#)
- [hash-mode on page 193](#)



## link-mode

---

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax              | link-mode <i>mode</i> ;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Hierarchy Level     | [edit interfaces <i>interface-name</i> ],<br>[edit interfaces <i>interface-name</i> ether-options],<br>[edit interfaces <i>ge-pim</i> /0/0 switch-options switch-port <i>port-number</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Release Information | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Description         | Set the device's link connection characteristic.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Options             | <i>mode</i> —Link characteristics: <ul style="list-style-type: none"><li>• <b>automatic</b>—Link mode is negotiated. This is the default for EX Series switches.</li><li>• <b>full-duplex</b>—Connection is full duplex.</li><li>• <b>half-duplex</b>—Connection is half duplex.</li></ul> <p><b>Default:</b> Fast Ethernet interfaces, except the J Series ePIM Fast Ethernet interfaces, can operate in either full-duplex or half-duplex mode. The router's management Ethernet interface, <b>fxp0</b> or <b>em0</b>, the built-in Fast Ethernet interfaces on the FIC (M7i router), and the Gigabit Ethernet ports on J Series Services Routers with uPIMs installed and configured for access switching mode autonegotiate whether to operate in full-duplex or half-duplex mode. Unless otherwise noted here, all other interfaces operate only in full-duplex mode.</p> |



**NOTE:** On J Series ePIM Fast Ethernet interfaces, if you specify half-duplex (or if full-duplex mode is not autonegotiated), the following message is written to the system log: "Half-duplex mode not supported on this PIC, forcing full-duplex mode."



**NOTE:**

- On EX4300 switches, the interfaces operate in full-duplex mode only.
- On EX Series switches, if no-auto-negotiation is specified in [edit interfaces *interface-name* ether-options], you can select only full-duplex or half-duplex. If auto-negotiation is specified, you can select any mode.



**NOTE:** Member links of an aggregated Ethernet bundle must not be explicitly configured with a link mode. You must remove any such link-mode configuration before committing the aggregated Ethernet configuration.



|                                 |                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>Configuring the Link Characteristics on Ethernet Interfaces</i></li><li>• <i>Understanding Management Ethernet Interfaces</i></li><li>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i></li><li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure) on page 32</a></li></ul> |



## link-protection

---

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax                   | <pre>link-protection {<br/>    disable;<br/>    (revertive  non-revertive);<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Hierarchy Level          | <pre>[edit interfaces aex aggregated-ether-options]<br/>[edit interfaces aex aggregated-ether-options lacp]</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Release Information      | <p>Statement introduced in Junos OS Release 8.3.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Support for <b>disable</b>, <b>revertive</b>, and <b>non-revertive</b> statements added in Junos OS Release 9.3.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Description              | <p>On the router, for aggregated Ethernet interfaces only, configure link protection. In addition to enabling link protection, a primary and a secondary (backup) link must be configured to specify what links egress traffic should traverse. To configure primary and secondary links on the router, include the <b>primary</b> and <b>backup</b> statements at the <b>[edit interfaces ge-fpc/pic/port gigether-options 802.3ad aex]</b> hierarchy level or the <b>[edit interfaces fe-fpc/pic/port fastether-options 802.3ad aex]</b> hierarchy level.</p> <p>On the switch, you can configure either Junos OS link protection for aggregated Ethernet interfaces or the LACP standards link protection for aggregated Ethernet interfaces.</p> <p>For Junos OS link protection, specify <b>link-protection</b> at the following hierarchy levels:</p> <ul style="list-style-type: none"><li>• <b>[edit interfaces ge-fpc/pic/port ether-options 802.3ad aex]</b></li><li>• <b>[edit interfaces xe-fpc/pic/port ether-options 802.3ad aex]</b></li></ul> <p>For LACP standards link protection, specify <b>link-protection</b> at the following hierarchy levels:</p> <ul style="list-style-type: none"><li>• For global LACP link protection, specify at <b>[edit chassis aggregated-devices ethernet lacp]</b></li><li>• For a specific aggregated Ethernet interface, specify at <b>[edit interfaces aeX aggregated-ether-options lacp]</b></li></ul> <p>To disable link protection, use the <b>delete interface ae aggregate-ether-options link-protection</b> statement at the <b>[edit interfaces aex aggregated-ether-options]</b> hierarchy level or the <b>[edit interfaces aex aggregated-ether-options lacp]</b> hierarchy level.</p> |
| Options                  | The statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Required Privilege Level | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Related Documentation    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Aggregated Ethernet Link Protection on page 93</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |



- [Configuring LACP Link Protection of Aggregated Ethernet Interfaces \(CLI Procedure\)](#)  
on page 89



## link-speed (Aggregated Ethernet)

---

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | link-speed <i>speed</i> ;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>     | [edit interfaces aex aggregated-ether-options],<br>[edit interfaces interface-range <i>name</i> aggregated-ether-options],<br>[edit interfaces interface-range <i>name</i> aggregated-sonet-options]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>         | For aggregated Ethernet interfaces only, set the required link speed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Options</b>             | <p><b><i>speed</i></b>—For aggregated Ethernet links, you can specify <b><i>speed</i></b> in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000).</p> <p>Aggregated Ethernet links on the M120 router can have one of the following speeds:</p> <ul style="list-style-type: none"><li>• <b>100m</b>—Links are 100 Mbps.</li><li>• <b>10g</b>—Links are 10 Gbps.</li><li>• <b>1g</b>—Links are 1 Gbps.</li><li>• <b>oc192</b>—Links are OC192 or STM64c.</li></ul> <p>Aggregated Ethernet links on EX Series switches can be configured to operate at one of the following speeds:</p> <ul style="list-style-type: none"><li>• <b>10m</b>—Links are 10 Mbps.</li><li>• <b>100m</b>—Links are 100 Mbps.</li><li>• <b>1g</b>—Links are 1 Gbps.</li><li>• <b>10g</b>—Links are 10 Gbps.</li></ul> <p>Aggregated Ethernet links on T Series routers can be configured to operate at one of the following speeds:</p> <ul style="list-style-type: none"><li>• <b>100g</b>—Links are 100 Gbps.</li><li>• <b>100m</b>—Links are 100 Mbps.</li><li>• <b>10g</b>—Links are 10 Gbps.</li><li>• <b>1g</b>—Links are 1 Gbps.</li><li>• <b>40g</b>—Links are 40 Gbps.</li><li>• <b>50g</b>—Links are 50 Gbps.</li><li>• <b>80g</b>—Links are 80 Gbps.</li><li>• <b>8g</b>—Links are 8 Gbps.</li></ul> |



- **mixed**—Links are of various speeds.
- **oc192**—Links are OC192.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Aggregated Ethernet Interfaces Overview*
- [Configuring Aggregated Ethernet Link Speed on page 95](#)
- *Configuring Mixed Aggregated Ethernet Links*
- [Configuring Aggregated Ethernet Links \(CLI Procedure\) on page 84](#)
- *Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch*

## liveness-detection

**Syntax**

```
liveness-detection {
 detection-time {
 threshold milliseconds;
 }
 minimum-interval milliseconds;
 minimum-receive-interval milliseconds;
 multiplier number;
 no-adaptation;
 transmit-interval {
 minimum-interval milliseconds;
 threshold milliseconds;
 }
 version (1 | automatic);
}
```

**Hierarchy Level** [edit protocols [iccp peer](#)]

**Release Information** Statement introduced in Junos OS Release 10.0 for MX Series routers.  
Statement introduced in Junos OS Release 12.2 for the QFX Series.  
Statement introduced in Junos OS Release 12.3R2 for EX Series switches.

**Description** Enable Bidirectional Forwarding Detection (BFD). BFD enables rapid detection of communication failures between peers.

The remaining statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.



## local-bias (edit interfaces ae)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | local-bias<br><disable>;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | [edit interfaces aex aggregated-ether-options]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 13.2X51-D20 for EX Series switches and QFX Series devices.<br><b>disable</b> option introduced in Junos OS Release 14.1X53-D25.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | <p>Enable or disable local link bias for individual aggregated Ethernet interfaces.</p> <p>Local link bias can be enabled or disabled globally for the entire Virtual Chassis or VCF using the <b>set forwarding-options local-bias</b> statement or <b>set forwarding-options local-bias disable</b> statement, or per LAG bundle using the <b>set interfaces aex aggregated-ether-options local-bias (edit interfaces ae)</b> statement or <b>set interfaces aex aggregated-ether-options local-bias (edit interfaces ae) disable</b> statement.</p> <p>When local link bias is set at both the global and per LAG bundle levels, the per LAG bundle configuration takes precedence. For instance, if local link bias is enabled globally on the Virtual Chassis or VCF using the <b>set forwarding-options local-bias</b> statement but disabled on a LAG bundle named <b>ae1</b> using the <b>set interfaces ae1 aggregated-ether-options local-bias (edit interfaces ae) disable</b> statement, local link bias is disabled on the LAG bundle named <b>ae1</b>.</p> <p>Local link bias conserves bandwidth on Virtual Chassis ports (VCPs) by using local links to forward unicast traffic exiting a Virtual Chassis or Virtual Chassis Fabric (VCF) that has a link aggregation group (LAG) bundle composed of member links on different member switches in the same Virtual Chassis or VCF. A local link is a member link in the LAG bundle that is on the member switch that received the traffic.</p> <p>You should enable local link bias if you want to conserve VCP bandwidth by always forwarding egress unicast traffic on a LAG bundle out of a local link. You should not enable local link bias if you want egress traffic load-balanced as it exits the Virtual Chassis or VCF.</p> |
| <b>Default</b>                  | Local link bias is disabled by default.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <b>none</b> —Enable local link bias for the aggregated Ethernet interface.<br><b>disable</b> —(Optional) Disable local link bias for the aggregated Ethernet interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | system—To view this statement in the configuration.<br>system-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Local Link Bias (CLI Procedure) on page 98</a></li><li>• <a href="#">Understanding Local Link Bias on page 16</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |



## local-bias (forwarding-options)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | local-bias<br><disable>;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit forwarding-options]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.1X53-D25 for EX Series switches and QFX Series devices.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>              | <p>Enable or disable local link bias globally for all aggregated Ethernet interfaces in a Virtual Chassis or Virtual Chassis Fabric (VCF).</p> <p>Local link bias can be enabled or disabled globally for the entire Virtual Chassis or VCF using the <b>set forwarding-options local-bias</b> statement or <b>set forwarding-options local-bias disable</b> statement, or per LAG bundle using the <b>set interfaces aex aggregated-ether-options local-bias (edit interfaces ae)</b> statement or <b>set interfaces aex aggregated-ether-options local-bias (edit interfaces ae) disable</b> statement.</p> <p>When local link bias is set at both the global and per LAG bundle levels, the per LAG bundle configuration takes precedence. For instance, if local link bias is enabled globally on the Virtual Chassis or VCF using the <b>set forwarding-options local-bias</b> statement but disabled on a LAG bundle named <b>ae1</b> using the <b>set interfaces ae1 aggregated-ether-options local-bias (edit interfaces ae) disable</b> statement, local link bias is disabled on the LAG bundle named <b>ae1</b>.</p> <p>Local link bias conserves bandwidth on Virtual Chassis ports (VCPs) by using local links to forward unicast traffic exiting a Virtual Chassis or Virtual Chassis Fabric (VCF) that has a link aggregation group (LAG) bundle composed of member links on different member switches in the same Virtual Chassis or VCF. A local link is a member link in the LAG bundle that is on the member switch that received the traffic.</p> <p>You should enable local link bias if you want to conserve VCP bandwidth by always forwarding egress unicast traffic on a LAG bundle out of a local link. You should not enable local link bias if you want egress traffic load-balanced as it exits the Virtual Chassis or VCF.</p> |
| <b>Default</b>                  | Local link bias is disabled by default.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <p><b>none</b>—Enable local link bias globally for the aggregated Ethernet interfaces in the Virtual Chassis or VCF.</p> <p><b>disable</b>—(Optional) Disable local link bias globally for the aggregated Ethernet interfaces in the Virtual Chassis or VCF.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | <p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Local Link Bias (CLI Procedure) on page 98</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |



- [Understanding Local Link Bias on page 16](#)

## local-ip-addr (ICCP)

---

|                                 |                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>local-ip-addr <i>local-ip-address</i>;</code>                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit protocols <a href="#">iccp</a> ],<br>[edit protocols <a href="#">iccp</a> <a href="#">peer</a> <i>peer-IP-address</i> ]                                                                                        |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.0 for MX Series routers.<br>Statement introduced in Junos OS Release 12.2 for the QFX Series.<br>Statement introduced in Junos OS Release 12.3R2 for EX Series switches. |
| <b>Description</b>              | Specify the local IP address of the interchassis link (ICL) interface that Inter-Chassis Control Protocol (ICCP) uses to communicate to the peers that host a multichassis link aggregation group (MC-LAG).          |
| <b>Options</b>                  | <i>local-ip-address</i> —Default local IP address to be used by all peers.                                                                                                                                           |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                  |



## loopback (Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet)

|                            |                                                                                                                                                                                                                                                                                                                       |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | (loopback   no-loopback);                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>     | [edit interfaces <i>interface-name</i> aggregated-ether-options],<br>[edit interfaces <i>interface-name</i> ether-options],<br>[edit interfaces <i>interface-name</i> fastether-options],<br>[edit interfaces <i>interface-name</i> gigether-options],<br>[edit interfaces interface-range <i>name</i> ether-options] |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.                                                                                                   |
| <b>Description</b>         | For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces, enable or disable loopback mode.                                                                                                                                                                                        |



### NOTE:

- By default, local aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces connect to a remote system.
- IPv6 Neighbor Discovery Protocol (NDP) addresses are not supported on Gigabit Ethernet interfaces when loopback mode is enabled on the interface. That is, if the loopback statement is configured at the [edit interfaces *ge-fpc/pic/port* gigether-options] hierarchy level, an NDP address cannot be configured at the [edit interfaces *ge-fpc/pic/port* unit *logical-unit-number* family inet6 address] hierarchy level.

|                                 |                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration. |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Ethernet Loopback Capability on page 79</a></li> </ul> |



## mc-ae

**Syntax**

```
mc-ae {
 chassis-id chassis-id;
 events {
 iccp-peer-down;
 force-icl-down;
 prefer-status-control-active;
 }
 init-delay-time seconds;
 mc-ae-id mc-ae-id;
 mode (active-active | active-standby);
 redundancy-group group-id;
 status-control (active | standby);
 switchover-mode (non-revertive | revertive);
}
```

**Hierarchy Level** [edit interfaces aeX aggregated-ether-options],  
[edit logical-systems *logical-system-name* interfaces aeX aggregated-ether-options]

**Release Information** Statement introduced in Junos OS Release 9.6 for MX Series routers.  
**events** statement introduced in Junos OS Release 11.4R4 for MX Series routers.  
Statement introduced in Junos OS Release 12.3R2 for EX Series switches.  
**prefer-status-control-active** statement introduced in Junos OS Release 13.2R1 for EX Series switches.  
**init-delay-time seconds** statement introduced in Junos OS Release 13.2R3 for EX Series switches.  
Statement introduced in Junos OS Release 12.2 for the QFX Series. Only the **chassis-id**, **mc-ae-id**, **mode active-active**, and **status-control (active | standby)** options are supported on QFX Series devices.

**Description** Enable multichassis link aggregation groups (MC-LAGs), which enables one device to form a logical LAG interface with two or more other devices.

**Options** **chassis-id *chassis-id***—Specify the chassis ID for Link Aggregation Control Protocol (LACP) to calculate the port number of MC-LAG physical member links.

**Values:** 0 or 1

**events**—Specify an action if a specific MC-LAG event occurs.

**iccp-peer-down**—Specify an action if the ICCP peer of this node goes down.

**force-icl-down**—If the node's ICCP peer goes down, bring down the interchassis-link logical interface.

**prefer-status-control-active**—Specify that the node configured as **status-control active** become the active node if the peer of this node goes down.



**NOTE:** The **prefer-status-control-active** statement can be configured with the **status-control standby** statement to prevent the LACP MC-LAG system ID from reverting to the default LACP



system ID on ICCP failure. Use this statement only if you can ensure that ICCP will not go down unless the router or switch is down. You must also configure the **hold-time down** value (at the **[edit interfaces *interface-name*]** hierarchy level) for the interchassis link with the **status-control standby** configuration to be higher than the ICCP BFD timeout. This configuration prevents data traffic loss by ensuring that when the router or switch with the **status-control active** configuration goes down, the router or switch with the **status-control standby** statement does not go into standby mode.

To make the **prefer-status-control-active** statement work with the **status-control standby** statement when an interchassis-link logical interface is configured on a aggregate Ethernet interface, you must either configure the **lACP periodic interval** statement at the **[edit interface *interface-name* aggregated-ether-options]** hierarchy level as slow or configure the **detection-time threshold** statement at the **[edit protocols iccp peer liveness-detection]** hierarchy level as less than 3 seconds.

**init-delay-time *seconds***—To minimize traffic loss, specify the number of seconds in which to delay bringing the multichassis aggregated Ethernet interface back to the up state when you reboot an MC-LAG peer.

**mc-ae-id *mc-ae-id***—Specify the identification number of the MC-LAG device. The two MC-LAG network devices that manage a given MC-LAG must have the same identification number.

**Range:** 1 through 65,535

**mode (active-active | active-standby)**—Specify whether the MC-LAG is in active-active or active-standby mode.



**NOTE:** You can configure IPv4 (**inet**) and IPv6 (**inet6**) addresses on **mc-ae** interfaces when the **active-standby** mode is configured.

**redundancy-group *group-id***—Specify the redundancy group identification number. The Inter-Chassis Control Protocol (ICCP) uses the redundancy group ID to associate multiple chassis that perform similar redundancy functions.

**Range:** 1 through 4,294,967,294

**revert-time**—Wait interval (in minutes) before the switchover to the preferred node is performed when the **switchover-mode** is configured as revertive.

**Range:** 1 through 10



**status-control (active | standby)**—Specify whether the chassis becomes active or remains in standby mode when an interchassis link failure occurs.

**switchover-mode (non-revertive | revertive)**—Specify whether Junos OS should trigger a link switchover to the preferred node when the active node is available.



**NOTE:** For revertive mode to automatically switch over to the preferred node, the **status-control** statement needs to be configured as **active**.

---

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Active-Active Bridging and VRRP over IRB Functionality on MX Series Routers Overview*
- *Configuring Multichassis Link Aggregation on MX Series Routers*
- *Configuring Multichassis Link Aggregation on EX Series Switches*

---

## mc-ae-id

---

**Syntax** mc-ae-id *mc-ae-id*;

**Hierarchy Level** [edit interfaces aggregated-ether-options mc-ae]

**Release Information** Statement introduced in Junos OS Release 12.2 for the QFX Series.  
Statement introduced in Junos OS Release 12.3R2 for EX Series switches.

**Description** Specify the multichassis aggregated Ethernet (MC-AE) identification number of the MC-AE that a given aggregated Ethernet interface belongs to. The two peers that host a given multichassis link aggregation group (MC-LAG) must have the same multichassis aggregated Ethernet ID.

**Options** **Range:** 1 through 65535.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.



---

## member (Interface Ranges)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>member <i>interface-name</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit interfaces <a href="#">interface-range</a> <i>interface-range-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | Specify the name of the member interface belonging to an interface range on the EX Series switch.                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>                  | <i>interface-name</i> —Name of the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure)</a></li><li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure) on page 32</a></li><li>• <a href="#">Understanding Interface Ranges on EX Series Switches</a></li><li>• <a href="#">Understanding Interface Ranges on EX Series Switches on page 24</a></li><li>• <a href="#">EX Series Switches Interfaces Overview on page 3</a></li><li>• <a href="#">Junos OS Interfaces Fundamentals Configuration Guide</a></li></ul> |



## member-range

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>member-range <i>starting-interface-name</i> to <i>ending-interface-name</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit interfaces <a href="#">interface-range</a> <i>interface-range-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | Specify the names of the first and last members of a sequence of interfaces belonging to an interface range.                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <b>Range:</b> <i>Starting interface-name</i> to <i>ending interface-name</i> —The name of the first member and the name of the last member in the interface sequence.                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure)</a></li><li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure) on page 32</a></li><li>• <a href="#">Understanding Interface Ranges on EX Series Switches</a></li><li>• <a href="#">Understanding Interface Ranges on EX Series Switches on page 24</a></li><li>• <a href="#">EX Series Switches Interfaces Overview on page 3</a></li><li>• <a href="#">Junos OS Interfaces Fundamentals Configuration Guide</a></li></ul> |



## members

|                            |                                                                                                                                                                                                  |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>members [(all   <i>names</i>   <i>vlan-ids</i>)];</code>                                                                                                                                   |
| <b>Hierarchy Level</b>     | [edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> family ethernet-switching <b>vlan</b> ]                                                                            |
| <b>Release Information</b> | Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement updated with enhanced ? (CLI completion feature) functionality in Junos OS Release 9.5 for EX Series switches. |
| <b>Description</b>         | For trunk interfaces, configure the VLANs that can carry traffic.                                                                                                                                |



**TIP:** To display a list of all configured VLANs on the system, including VLANs that are configured but not committed, type ? after `vlan` or `vlands` in your configuration mode command line. Note that only one VLAN is displayed for a VLAN range.



**NOTE:** The number of VLANs supported per switch varies for each model. Use the configuration-mode command `set vlans id vlan-id ?` to determine the maximum number of VLANs allowed on a switch. You cannot exceed this VLAN limit because each VLAN is assigned an ID number when it is created. You can, however, exceed the recommended VLAN member maximum.

On an EX Series switch that runs Junos OS that does not support the Enhanced Layer 2 Software (ELS) configuration style, the maximum number of VLAN members allowed on the switch is 8 times the maximum number of VLANs the switch supports (`vmember limit = vlan max * 8`). If the switch configuration exceeds the recommended VLAN member maximum, you see a warning message when you commit the configuration. If you ignore the warning and commit such a configuration, the configuration succeeds but you run the risk of crashing the Ethernet switching process (`eswd`) due to memory allocation failure.

On an EX Series switch that runs Junos OS that supports ELS, the maximum number of VLAN members allowed on the switch is 24 times the maximum number of VLANs the switch supports (`vmember limit = vlan max * 24`). If the configuration of one of these switches exceeds the recommended VLAN member maximum, a warning message appears in the system log (`syslog`).

|                |                                                                                                                                                                                                                                      |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Options</b> | <code>all</code> —Specifies that this trunk interface is a member of all the VLANs that are configured on this switch. When a new VLAN is configured on the switch, this trunk interface automatically becomes a member of the VLAN. |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|





**NOTE:** Since VLAN members are limited, specifying all could cause the number of VLAN members to exceed the limit at some point.

**names**—Name of one or more VLANs. VLAN IDs are applied automatically in this case.



**NOTE:** all cannot be a VLAN name.

**vlan-ids**—Numeric identifier of one or more VLANs. For a series of tagged VLANs, specify a range; for example, 10–20 or 10–20 23 27–30.



**NOTE:** Each configured VLAN must have a specified VLAN ID to successfully commit the configuration; otherwise, the configuration commit fails.

**Required Privilege Level**

interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *show ethernet-switching interfaces*
- *show ethernet-switching interface*
- *show vlans*
- *Example: Setting Up Basic Bridging and a VLAN for an EX Series Switch*
- *Example: Setting Up Basic Bridging and a VLAN for an EX Series Switch*
- *Example: Connecting an Access Switch to a Distribution Switch*
- *Example: Connecting Access Switches to a Distribution Switch*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\) on page 32](#)
- [Configuring Gigabit Ethernet Interfaces \(J-Web Procedure\) on page 35](#)
- *Configuring VLANs for EX Series Switches (CLI Procedure)*
- *Configuring VLANs for EX Series Switches (CLI Procedure)*
- *Creating a Series of Tagged VLANs (CLI Procedure)*
- *Understanding Bridging and VLANs on EX Series Switches*
- [Junos OS Ethernet Interfaces Configuration Guide](#)



## minimum-interval (Liveness Detection)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>minimum-interval <i>milliseconds</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | [edit protocols <code>iccp peer liveness-detection</code> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.0 for MX Series routers.<br>Statement introduced in Junos OS Release 12.2 for the QFX Series.<br>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Configure simultaneously the minimum interval at which the peer transmits liveness detection requests and the minimum interval at which the peer expects to receive a reply from a peer with which it has established a Bidirectional Forwarding Detection (BFD) session. Optionally, instead of using this statement, you can specify the minimum transmit and receive intervals separately by using the <code>transmit-interval</code> <code>minimal-interval</code> and <code>minimum-receive-interval</code> statements, respectively. |
| <b>Options</b>                  | <i>milliseconds</i> —Specify the minimum interval value for Bidirectional Forwarding Detection (BFD).<br><b>Range:</b> 1 through 255,000                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                        |

## minimum-receive-interval (Liveness Detection)

|                                 |                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>minimum-receive-interval <i>milliseconds</i>;</code>                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit protocols <code>iccp peer liveness-detection</code> ]                                                                                                                                                          |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.0 for MX Series routers.<br>Statement introduced in Junos OS Release 12.2 for the QFX Series.<br>Statement introduced in Junos OS Release 12.3R2 for EX Series switches. |
| <b>Description</b>              | Configure the minimum interval at which the peer must receive a reply from a peer with which it has established a Bidirectional Forwarding Detection (BFD) session.                                                  |
| <b>Options</b>                  | <i>milliseconds</i> —Specify the minimum interval value.<br><b>Range:</b> 1 through 255,000                                                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                  |



## mtu

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>mtu bytes;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>     | <pre>[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit interfaces <i>interface-range name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> protocols l2circuit local-switching interface <i>interface-name</i> backup-neighbor <i>address</i>], [edit logical-systems <i>logical-system-name</i> protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i>], [edit logical-systems <i>logical-system-name</i> protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i> backup-neighbor <i>address</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols l2vpn interface <i>interface-name</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols vpls], [edit protocols l2circuit local-switching interface <i>interface-name</i> backup-neighbor <i>address</i>], [edit protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i>] [edit protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i> backup-neighbor <i>address</i>], [edit routing-instances <i>routing-instance-name</i> protocols l2vpn interface <i>interface-name</i>], [edit routing-instances <i>routing-instance-name</i> protocols l2vpn site <i>site-name</i>], [edit routing-instances <i>routing-instance-name</i> protocols vpls]</pre> |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Support for Layer 2 VPNs and VPLS introduced in Junos OS Release 10.4.</p> <p>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p> <p>Support at the <code>[set interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>ccc</i>]</code> hierarchy level introduced in Junos OS Release 12.3R3 for MX Series routers.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>         | <p>Specify the maximum transmission unit (MTU) size for the media or protocol. The default MTU size depends on the device type. Changing the media MTU or protocol MTU causes an interface to be deleted and added again.</p> <p>To route jumbo data packets on an integrated routing and bridging (IRB) interface or routed VLAN interface (RVI) on EX Series switches, you must configure the jumbo MTU size on the member physical interfaces of the VLAN that you have associated with the IRB interface or RVI, as well as on the IRB interface or RVI itself (the interface named <code>irb</code> or <code>vlan</code>, respectively).</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |



**CAUTION:** For EX Series switches, setting or deleting the jumbo MTU size on an IRB interface or RVI while the switch is transmitting packets might cause packets to be dropped.





## NOTE:

The MTU for an IRB interface is calculated by removing the Ethernet header overhead [6(DMAC)+6(SMAC)+2(EtherType)]. Because, the MTU is the lower value of the MTU configured on the IRB interface and the MTU configured on the IRB's associated bridge domain IFDs or IFLs, the IRB MTU is calculated as follows:

- In case of Layer 2 IFL configured with the `flexible-vlan-tagging` statement, the IRB MTU is calculated by including 8 bytes overhead (SVLAN+CVLAN).
- In case of Layer 2 IFL configured with the `vlan-tagging` statement, the IRB MTU is calculated by including a single VLAN 4 bytes overhead.



## NOTE:

- If a packet whose size is larger than the configured MTU size is received on the receiving interface, the packet is eventually dropped. The value considered for MRU (maximum receive unit) size is also the same as the MTU size configured on that interface.
- Not all devices allow you to set an MTU value, and some devices have restrictions on the range of allowable MTU values. You cannot configure an MTU for management Ethernet interfaces (fxp0, em0, or me0) or for loopback, multilink, and multicast tunnel devices.
- On ACX Series routers, you can configure the protocol MTU by including the `mtu` statement at the [edit interfaces *interface-name* unit *logical-unit-number* family inet] or [edit interfaces *interface-name* unit *logical-unit-number* family inet6] hierarchy level.
  - If you configure the protocol MTU at any of these hierarchy levels, the configured value is applied to all families that are configured on the logical interface.
  - If you are configuring the protocol MTU for both inet and inet6 families on the same logical interface, you must configure the same value for both the families. It is not recommended to configure different MTU size values for inet and inet6 families that are configured on the same logical interface.

For more information about configuring MTU for specific interfaces and router or switch combinations, see [“Configuring the Media MTU” on page 54](#).



|                                 |                                                                                                                                                                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Options</b>                  | <b>bytes</b> —MTU size.<br><b>Range:</b> 256 through 9192 bytes, 256 through 9216 (EX Series switch interfaces), 256 through 9500 bytes (Junos OS 12.1X48R2 for PTX Series routers)<br><b>Default:</b> 1500 bytes (INET, INET6, and ISO families), 1448 bytes (MPLS), 1514 bytes (EX Series switch interfaces) |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i></li><li>• <a href="#">Configuring the Media MTU on page 54</a></li><li>• <i>Configuring the MTU for Layer 2 Interfaces</i></li><li>• <a href="#">Setting the Protocol MTU on page 67</a></li></ul>      |

---

## multi-chassis

---

|                                 |                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>multi-chassis {<br/>  multi-chassis-protection peer-ip-address {<br/>    interface interface-name;<br/>  }<br/>}</pre>                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit]                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.6 for MX Series routers.<br>Statement introduced in Junos OS Release 12.2 for the QFX Series.<br>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.                                                                                             |
| <b>Description</b>              | Configure an interchassis link-protection link (ICL-PL) between the two peers that host a multichassis link aggregation group (MC-LAG). You can configure either an aggregated Ethernet interface or a 10-Gigabit Ethernet interface to be an ICL-PL.<br><br>The remaining statements are explained separately. |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                         |



---

## multi-chassis-protection

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>multi-chassis-protection <i>peer-ip-address</i> {<br/>    <b>interface</b> <i>interface-name</i>;<br/>}</code>                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit <a href="#">multi-chassis</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.6 for MX Series routers.<br>Statement introduced in Junos OS Release 12.2 for the QFX Series.<br>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | <p>Configure multichassis link protection between the two peers that host a multichassis link aggregation group (MC-LAG). If the Interchassis Control Protocol (ICCP) connection is up and the interchassis link (ICL) comes up, the peer configured as standby brings up the multichassis aggregated Ethernet interfaces shared with the peer. Multichassis protection must be configured on one interface for each peer.</p> <p>The remaining statement is explained separately.</p> |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                |



## native-vlan-id

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>native-vlan-id <i>number</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit interfaces <i>ge-fpc/pic/port</i> ],<br>[edit interfaces <i>interface-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.3.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.<br>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.<br>Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | <p>Configure mixed tagging support for untagged packets on a port for the following:</p> <ul style="list-style-type: none"> <li>• M Series routers with Gigabit Ethernet IQ PICs with SFP and Gigabit Ethernet IQ2 PICs with SFP configured for 802.1Q flexible VLAN tagging</li> <li>• MX Series routers with Gigabit Ethernet DPCs and MICs, Tri-Rate Ethernet DPCs and MICs, and 10-Gigabit Ethernet DPCs and MICs and MPCs configured for 802.1Q flexible VLAN tagging</li> <li>• T4000 routers with 100-Gigabit Ethernet Type 5 PIC with CFP</li> <li>• EX Series switches with Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces</li> </ul> <p>When the <b>native-vlan-id</b> statement is included with the <i>flexible-vlan-tagging</i> statement, untagged packets are accepted on the same mixed VLAN-tagged port.</p> <p>The logical interface on which untagged packets are received must be configured with the same VLAN ID as the native VLAN ID configured on the physical interface. To configure the logical interface, include the <b>vlan-id</b> statement (matching the <b>native-vlan-id</b> statement on the physical interface) at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>] hierarchy level.</p> <p>When the <b>native-vlan-id</b> statement is included with the <b>interface-mode</b> statement, untagged packets are accepted and forwarded within the bridge domain or VLAN that is configured with the matching VLAN ID.</p> |
| <b>Options</b>                  | <p><i>number</i>—VLAN ID number.</p> <p><b>Range:</b> (ACX Series routers and EX Series switches) 0 through 4094.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Configuring Mixed Tagging Support for Untagged Packets</i></li> <li>• <i>Configuring a Logical Interface for Access Mode</i></li> <li>• <i>Configuring the Native VLAN Identifier (CLI Procedure)</i></li> <li>• <i>Understanding Bridging and VLANs on EX Series Switches</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |



- *flexible-vlan-tagging*
- *Understanding Q-in-Q Tunneling on EX Series Switches*

## no-gratuitous-arp-request

|                                 |                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-gratuitous-arp-request;                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> ]                                                                                                                              |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.6 for EX Series switches.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.        |
| <b>Description</b>              | For Ethernet interfaces and pseudowire logical interfaces, do not respond to gratuitous ARP requests.                                                                 |
| <b>Default</b>                  | Gratuitous ARP responses are enabled on all Ethernet interfaces.                                                                                                      |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Gratuitous ARP on page 79</a></li> <li>• <a href="#">gratuitous-arp-reply on page 192</a></li> </ul> |

## no-redirects

|                                 |                                                                                                                                                                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-redirects;                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ]                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                    |
| <b>Description</b>              | Do not send protocol redirect messages on the interface.<br><br>To disable the sending of protocol redirect messages for the entire router or switch, include the <b>no-redirects</b> statement at the <b>[edit system]</b> hierarchy level. |
| <b>Default</b>                  | Interfaces send protocol redirect messages.                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Disabling the Transmission of Redirect Messages on an Interface on page 82</a></li> <li>• <i>Junos OS Administration Library for Routing Devices</i></li> </ul>                         |



## peer (ICCP)

**Syntax**

```
peer ip-address {
 authentication-key string;
 backup-liveness-detection {
 backup-peer-ip ip-address;
 }
 liveness-detection {
 detection-time {
 threshold milliseconds;
 }
 minimum-interval milliseconds;
 minimum-receive-interval milliseconds;
 multiplier number;
 no-adaptation;
 transmit-interval {
 minimum-interval milliseconds;
 threshold milliseconds;
 }
 version (1 | automatic);
 }
 local-ip-address ipv4-address;
 session-establishment-hold-time seconds;
}
```

**Hierarchy Level** [edit protocols [iccp](#)]

**Release Information** Statement introduced in Junos OS Release 10.0 for MX Series routers.  
Statement introduced in Junos OS Release 12.2 for the QFX Series.  
Statement introduced in Junos OS Release 12.3R2 for EX Series switches.

**Description** Configure the peers that host a multichassis link aggregation group (MC-LAG). You must configure Inter-Chassis Control Protocol (ICCP) for both peers that host the MC-LAG.



**NOTE:** Backup liveness detection is not supported on MX Series routers.

The remaining statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.



## periodic


---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>periodic interval;</code>                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit interfaces aex aggregated-ether-options <a href="#">lACP</a> ],<br>[edit interfaces interface-range <i>name</i> aggregated-ether-options <a href="#">lACP</a> ]                                                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                           |
| <b>Description</b>              | For aggregated Ethernet interfaces only, configure the interval for periodic transmission of LACP packets.                                                                                                                                                                                                                                                                          |
| <b>Options</b>                  | <p><i>interval</i>—Interval for periodic transmission of LACP packets.</p> <ul style="list-style-type: none"> <li><b>fast</b>—Transmit packets every second.</li> <li><b>slow</b>—Transmit packets every 30 seconds.</li> </ul> <p><b>Default:</b> <b>fast</b></p>                                                                                                                  |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><i>Configuring LACP for Aggregated Ethernet Interfaces</i></li> <li><a href="#">Configuring Aggregated Ethernet LACP (CLI Procedure) on page 88</a></li> <li><i>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i></li> </ul> |




## preferred

---

|                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                             |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                     | preferred;                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>                                                                                                                                                            | [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i><br>family <i>family</i> address <i>address</i> ] |
| <b>Release Information</b>                                                                                                                                                        | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 11.1 for the QFX Series.                                                                                              |
| <b>Description</b>                                                                                                                                                                | Configure this address to be the preferred address on the interface. If you configure more than one address on the same subnet, the preferred source address is chosen by default as the source address when you initiate frame transfers to destinations on the subnet.                    |
| <div> <b>NOTE:</b> The edit logical-systems hierarchy is not available on QFabric systems.</div> |                                                                                                                                                                                                                                                                                             |
| <b>Default</b>                                                                                                                                                                    | The lowest-numbered address on the subnet is the preferred address.                                                                                                                                                                                                                         |
| <b>Required Privilege Level</b>                                                                                                                                                   | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                     |
| <b>Related Documentation</b>                                                                                                                                                      | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Interface Address on page 48</a></li></ul>                                                                                                                                                                              |




## primary (Address on Interface)

|                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                       | primary;                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>                                                                                                                                                              | [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ]                    |
| <b>Release Information</b>                                                                                                                                                          | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                      |
| <b>Description</b>                                                                                                                                                                  | Configure this address to be the primary address of the protocol on the interface. If the logical unit has more than one address, the primary address is used by default as the source address when packet transfer originates from the interface and the destination address does not indicate the subnet. |
| <div>  <b>NOTE:</b> The edit logical-systems hierarchy is not available on QFabric systems. </div> |                                                                                                                                                                                                                                                                                                             |
| <b>Default</b>                                                                                                                                                                      | For unicast traffic, the primary address is the lowest non-127 (in other words, non-loopback) preferred address on the unit.                                                                                                                                                                                |
| <b>Required Privilege Level</b>                                                                                                                                                     | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                     |
| <b>Related Documentation</b>                                                                                                                                                        | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Interface Address on page 48</a></li> </ul>                                                                                                                                                                                            |



## proxy-arp

---

|                                                                                                                                                                                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                | proxy-arp (restricted   unrestricted);                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>                                                                                                                                                                                       | [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>                                                                                                                                                                                   | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.6 for EX Series switches.<br><b>restricted</b> added in Junos OS Release 10.0 for EX Series switches.<br>Statement introduced in Junos OS Release 12.2 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>                                                                                                                                                                                           | For Ethernet interfaces only, configure the router or switch to respond to any ARP request, as long as the router or switch has an active route to the ARP request's target address.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <div> <b>NOTE:</b> You must configure the IP address and the inet family for the interface when you enable proxy ARP.</div> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Default</b>                                                                                                                                                                                               | Proxy ARP is not enabled. The router or switch responds to an ARP request only if the destination IP address is its own.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                                                                                                                                                                                               | <ul style="list-style-type: none"><li>• <b>none</b>—The router or switch responds to any ARP request for a local or remote address if the router or switch has a route to the target IP address.</li><li>• <b>restricted</b>—(Optional) The router or switch responds to ARP requests in which the physical networks of the source and target are different and does not respond if the source and target IP addresses are in the same subnet. The router or switch must also have a route to the target IP address.</li><li>• <b>unrestricted</b>—(Optional) The router or switch responds to any ARP request for a local or remote address if the router or switch has a route to the target IP address.</li></ul> |
| <b>Default:</b> unrestricted                                                                                                                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b>                                                                                                                                                                              | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>                                                                                                                                                                                 | <ul style="list-style-type: none"><li>• <a href="#">Configuring Restricted and Unrestricted Proxy ARP on page 82</a></li><li>• <a href="#">Configuring Proxy ARP (CLI Procedure)</a></li><li>• <a href="#">Configuring Proxy ARP (CLI Procedure)</a></li><li>• <a href="#">Example: Configuring Proxy ARP on an EX Series Switch</a></li><li>• <a href="#">Configuring Gratuitous ARP on page 79</a></li></ul>                                                                                                                                                                                                                                                                                                       |



## rpf-check

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | rpf-check;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet],<br>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet6]                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.3 for EX Series switches.<br>Statement introduced in Junos OS Release 13.2 for the QFX Series.<br>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | <p>On EX3200 and EX4200 switches, enable a reverse-path forwarding (RPF) check on unicast traffic (except ECMP packets) on all ingress interfaces.</p> <p>On EX4300 switches, enable a reverse-path forwarding (RPF) check on unicast traffic, including ECMP packets, on all ingress interfaces.</p> <p>On EX8200 and EX6200 switches, enable an RPF check on unicast traffic, including ECMP packets, on the selected ingress interfaces.</p> <p>On QFX Series switches, enable an RPF check on unicast traffic (except ECMP packets) on the selected ingress interfaces.</p> |
| <b>Default</b>                  | Unicast RPF is disabled on all interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring Unicast RPF on an EX Series Switch</i></li> <li>• <a href="#">Configuring Unicast RPF (CLI Procedure) on page 103</a></li> <li>• <a href="#">Disabling Unicast RPF (CLI Procedure) on page 104</a></li> <li>• <a href="#">Understanding Unicast RPF on page 19</a></li> </ul>                                                                                                                                                                                                                                  |



## session-establishment-hold-time

---

|                                 |                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>session-establishment-hold-time <i>seconds</i>;</code>                                                                                                                                                         |
| <b>Hierarchy Level</b>          | [edit protocols <a href="#">iccp</a> ],<br>[edit protocols <a href="#">iccp</a> <a href="#">peer</a> ]                                                                                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.0 for MX Series routers.<br>Statement introduced in Junos OS Release 12.2 for the QFX Series.<br>Statement introduced in Junos OS Release 12.3R2 for EX Series switches. |
| <b>Description</b>              | Specify the time during which an Inter-Chassis Control Protocol (ICCP) connection must be established between peers.                                                                                                 |
| <b>Options</b>                  | <i>seconds</i> —Time (in seconds) within which a successful ICCP connection must be established.                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                  |



## speed (Ethernet)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>speed (10m   100m   1g   auto   auto-10m-100m);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> ],<br>[edit interfaces <i>ge-pim/0/0</i> switch-options switch-port <i>port-number</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | <p>Configure the interface speed. This statement applies to the management Ethernet interface (<b>fxp0</b> or <b>em0</b>), Fast Ethernet 12-port and 48-port PICs, the built-in Fast Ethernet port on the FIC (M7i router), the built-in Ethernet interfaces on J Series Services Routers, Combo Line Rate DPCs and Tri-Rate Ethernet Copper interfaces on MX Series routers, Gigabit Ethernet ports on J Series Services Routers with uPIMs installed and configured for access switching mode, and Gigabit Ethernet interfaces on EX Series switches.</p> <p>When you configure the Tri-Rate Ethernet copper interface to operate at 1 Gbps, autonegotiation must be enabled. When you configure 100BASE-FX SFP, you must set the port speed at 100 Mbps.</p>                       |
| <b>Options</b>                  | <p>You can specify the speed as either <b>10m</b> (10 Mbps), <b>100m</b> (100 Mbps), or on J Series routers with uPIMs installed and on MX Series routers, <b>1g</b> (1 Gbps). You can also specify the <b>auto</b> option on MX Series routers.</p> <p>For Gigabit Ethernet interfaces on EX Series switches, you can specify one of the following options:</p> <ul style="list-style-type: none"> <li>• <b>10m</b>—10 Mbps</li> <li>• <b>100m</b>—100 Mbps</li> <li>• <b>1g</b>—1 Gbps</li> <li>• <b>auto</b>—Automatically negotiate the speed (10 Mbps, 100 Mbps, or 1 Gbps) based on the speed of the other end of the link.</li> <li>• <b>auto-10m-100m</b>—Automatically negotiate the speed (10 Mbps or 100 Mbps) based on the speed of the other end of the link.</li> </ul> |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Configuring the Interface Speed</i></li> <li>• <i>Configuring the Interface Speed on Ethernet Interfaces</i></li> <li>• <i>Configuring Gigabit Ethernet Autonegotiation</i></li> <li>• <i>Configuring Gigabit Ethernet Interfaces on J Series Services Routers</i></li> <li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure) on page 32</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                               |



## traceoptions (Individual Interfaces)

---

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>traceoptions {<br/>    file <i>filename</i> &lt;files <i>name</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;<br/>    flag <i>flag</i>;<br/>    match;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>     | [edit interfaces <i>interface-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>         | <p>Define tracing operations for individual interfaces.</p> <p>To specify more than one tracing operation, include multiple <b>flag</b> statements.</p> <p>The interfaces <b>traceoptions</b> statement does not support a trace file. The logging is done by the kernel, so the tracing information is placed in the system <b>syslog</b> file in the directory <b>/var/log/dcd</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Default</b>             | If you do not include this statement, no interface-specific tracing operations are performed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>             | <p><b>file name</b>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <b>/var/log/dcd</b>. By default, interface process tracing output is placed in the file <b>files number</b>—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b>, then <b>trace-file.1</b>, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p><b>match</b>—(Optional) Regular expression for lines to be traced.</p> <p><b>no-world-readable</b>—(Optional) Prevent any user from reading the log file.</p> <p><b>world-readable</b>—(Optional) Allow any user to read the log file.</p> <p><b>size size</b>—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named <b>trace-file</b> reaches this size, it is renamed <b>trace-file.0</b>. When the <b>trace-file</b> again reaches its maximum size, <b>trace-file.0</b> is renamed <b>trace-file.1</b> and <b>trace-file</b> is renamed <b>trace-file.0</b>. This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten.</p> <p><b>flag</b>—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. The following are the interface-specific tracing options.</p> <ul style="list-style-type: none"><li>• <b>all</b>—All interface tracing operations</li><li>• <b>event</b>—Interface events</li><li>• <b>ipc</b>—Interface interprocess communication (IPC) messages</li></ul> |



- **media**—Interface media changes
- **q921**—Trace ISDN Q.921 frames
- **q931**—Trace ISDN Q.931 frames

**Required Privilege** interface—To view this statement in the configuration.  
**Level** interface-control—To add this statement to the configuration.

**Related Documentation** • *Tracing Operations of an Individual Router Interface*



## traceoptions (Interface Process)

---

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax              | <pre>traceoptions {<br/>    file &lt;filename&gt; &lt;files number&gt; &lt;match regular-expression&gt; &lt;size size&gt; &lt;world-readable  <br/>        no-world-readable&gt;;<br/>    flag flag &lt;disable&gt;;<br/>    no-remote-trace;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Hierarchy Level     | [edit interfaces]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Release Information | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Description         | Define tracing operations for the interface process (dcd).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Default             | If you do not include this statement, no interface-specific tracing operations are performed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Options             | <p><b>disable</b>—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as <b>all</b>.</p> <p><b>filename</b>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <b>/var/log</b>. By default, interface process tracing output is placed in the file <b>dcd</b>.</p> <p><b>files number</b>—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b>, then <b>trace-file.1</b>, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p>If you specify a maximum number of files, you also must specify a maximum file size with the <b>size</b> option.</p> <p><b>Range:</b> 2 through 1000</p> <p><b>Default:</b> 3 files</p> <p><b>flag</b>—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. You can include the following flags:</p> <ul style="list-style-type: none"><li>• <b>all</b></li><li>• <b>change-events</b>—Log changes that produce configuration events</li><li>• <b>config-states</b>—Log the configuration state machine changes</li><li>• <b>kernel</b>—Log configuration IPC messages to kernel</li><li>• <b>kernel-detail</b>—Log details of configuration messages to kernel</li></ul> <p><b>no-world-readable</b>—(Optional) Disallow any user to read the log file.</p> |



**size size**—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten.

If you specify a maximum file size, you also must specify a maximum number of trace files with the **files** option.

**Syntax:** **xk** to specify kilobytes, **xm** to specify megabytes, or **xg** to specify gigabytes

**Range:** 10 KB through the maximum file size supported on your router

**Default:** 1 MB

**world-readable**—(Optional) Allow any user to read the log file.

**match regex**—(Optional) Refine the output to include only those lines that match the given regular expression.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Tracing Operations of the Interface Process*

## transmit-interval (Liveness Detection)

**Syntax** transmit-interval {  
    **minimum-interval** *milliseconds*;  
    **threshold** *milliseconds*;  
}

**Hierarchy Level** [edit protocols **iccp** peer **liveness-detection**]

**Release Information** Statement introduced in Junos OS Release 10.0 for MX Series routers.  
Statement introduced in Junos OS Release 12.2 for the QFX Series.  
Statement introduced in Junos OS Release 12.3R2 for EX Series switches.

**Description** Configure the Bidirectional Forwarding Detection (BFD) transmit interval. The negotiated transmit interval for a peer is the interval between the sending of BFD liveness detection requests to peers. The receive interval for a peer is the minimum interval between receiving packets sent from its peer; the receive interval is not negotiated between peers. To determine the transmit interval, each peer compares its configured minimum transmit interval with its peer's minimum receive interval. The larger of the two numbers is accepted as the transmit interval for that peer.

The remaining statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.



## traps

---

|                                 |                                                                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | (traps   no-traps);                                                                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> ],<br>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ],<br>[edit interfaces interface-range <i>name</i> ],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.                                                                              |
| <b>Description</b>              | Enable or disable the sending of Simple Network Management Protocol (SNMP) notifications when the state of the connection changes.                                                                                                                                                               |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>Enabling or Disabling SNMP Notifications on Physical Interfaces</i></li><li>• <a href="#">Enabling or Disabling SNMP Notifications on Logical Interfaces on page 83</a></li></ul>                                                                     |



## unit

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> unit <i>logical-unit-number</i> {     <a href="#">accounting-profile</a> <i>name</i>;     <a href="#">bandwidth</a> <i>rate</i>;     <a href="#">description</a> <i>text</i>;     <a href="#">disable</a>;     family <i>family-name</i> {...}     <a href="#">proxy-arp</a> (restricted   unrestricted);     (<a href="#">traps</a>   no-traps);     <a href="#">vlan-id</a> (<a href="#">VLAN Tagging and Layer 3 Subinterfaces</a>) <i>vlan-id-number</i>; } </pre>  |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> ],<br>[edit interfaces interface-range <i>name</i> ]                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>              | Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.                                                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <p><b><i>logical-unit-number</i></b>—Number of the logical unit.</p> <p><b>Range:</b> 0 through 16,384</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure)</a></li> <li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure)</a> on page 32</li> <li>• <a href="#">Configuring Aggregated Ethernet Links (CLI Procedure)</a> on page 84</li> <li>• <a href="#">EX Series Switches Interfaces Overview</a> on page 3</li> <li>• <a href="#">Junos OS Ethernet Interfaces Configuration Guide</a></li> </ul> |



## vlan (802.1Q Tagging)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>vlan {<br/>    members [(all   names   vlan-ids)];<br/>}</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> family ethernet-switching]                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | <p>Bind an 802.1Q VLAN tag ID to a logical interface.</p> <p>The remaining statement is explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>show ethernet-switching interfaces</i></li><li>• <i>show ethernet-switching interface</i></li><li>• <i>Example: Setting Up Bridging with Multiple VLANs for EX Series Switches</i></li><li>• <i>Configuring Routed VLAN Interfaces (CLI Procedure)</i></li><li>• <i>Configuring Integrated Routing and Bridging Interfaces (CLI Procedure)</i></li><li>• <i>Understanding Bridging and VLANs on EX Series Switches</i></li><li>• <a href="#">Junos OS Ethernet Interfaces Configuration Guide</a></li></ul> |



## vlan-id (VLAN Tagging and Layer 3 Subinterfaces)

|                            |                                                                                 |
|----------------------------|---------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>vlan-id <i>vlan-id-number</i>;</code>                                     |
| <b>Hierarchy Level</b>     | [edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ] |
| <b>Release Information</b> | Statement introduced in Junos OS Release 9.2 for EX Series switches.            |
| <b>Description</b>         | Bind an 802.1Q VLAN tag ID to a logical interface.                              |



**NOTE:** The VLAN tag ID cannot be configured on logical interface unit 0. The logical unit number must be 1 or higher.

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Options</b>                  | <p><i>vlan-id-number</i>—A valid VLAN identifier.</p> <p><b>Range:</b> 1 through 4094</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">vlan-tagging on page 252</a></li> <li>• <i>Example: Configuring Layer 3 Subinterfaces for a Distribution Switch and an Access Switch</i></li> <li>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i></li> <li>• <a href="#">Configuring Gigabit Ethernet Interfaces (CLI Procedure) on page 32</a></li> <li>• <a href="#">Configuring Gigabit Ethernet Interfaces (J-Web Procedure) on page 35</a></li> <li>• <a href="#">Configuring a Layer 3 Subinterface (CLI Procedure) on page 102</a></li> <li>• <i>Configuring Q-in-Q Tunneling (CLI Procedure)</i></li> <li>• <a href="#">Junos OS Ethernet Interfaces Configuration Guide</a></li> </ul> |



## vlan-tagging

---

|                            |                                                                                                                                                                                                                                                                                              |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | vlan-tagging;                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>     | [edit interfaces <i>interface-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> ]                                                                                                                                                             |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.<br>Statement introduced in Junos OS Release 13.2 for PTX Series Routers. |
| <b>Description</b>         | For Fast Ethernet and Gigabit Ethernet interfaces, aggregated Ethernet interfaces configured for VPLS, and pseudowire subscriber interfaces, enable the reception and transmission of 802.1Q VLAN-tagged frames on the interface.                                                            |



**NOTE:** On EX Series switches except for EX4300 and EX9200 switches, the **vlan-tagging** and **family ethernet-switching** statements cannot be configured on the same interface. Interfaces on EX2200, EX3200, EX3300, EX4200, and EX4500 switches are set to **family ethernet-switching** by the default factory configuration. EX6200 and EX8200 switch interfaces do not have a default family setting.

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>Example: Configuring Layer 3 Subinterfaces for a Distribution Switch and an Access Switch</i></li><li>• <i>Example: Configuring BGP Autodiscovery for LDP VPLS</i></li><li>• <a href="#">Configuring a Layer 3 Subinterface (CLI Procedure) on page 102</a></li><li>• <a href="#">Configuring Tagged Aggregated Ethernet Interfaces on page 101</a></li><li>• <i>Configuring Interfaces for VPLS Routing</i></li><li>• <i>Enabling VLAN Tagging</i></li><li>• <a href="#">802.1Q VLANs Overview on page 26</a></li><li>• <a href="#">vlan-id on page 251</a></li></ul> |



## PART 3

# Administration

- [Routine Monitoring on page 255](#)
- [Operational Commands on page 265](#)







# Routine Monitoring

- [Monitoring Interface Status and Traffic on page 255](#)
- [Verifying the Status of a LAG Interface on page 257](#)
- [Verifying That EEE Is Saving Energy on Configured Ports on page 257](#)
- [Verifying That LACP Is Configured Correctly and Bundle Members Are Exchanging LACP Protocol Packets on page 259](#)
- [Verifying That Layer 3 Subinterfaces Are Working on page 260](#)
- [Verifying Unicast RPF Status on page 261](#)
- [Verifying IP Directed Broadcast Status on page 263](#)

## Monitoring Interface Status and Traffic

---

Purpose



NOTE: This topic applies only to the J-Web Application package.

Use the monitoring functionality to view interface status or to monitor interface bandwidth utilization and traffic statistics on the EX Series switches.

The J-Web interface monitors interface bandwidth utilization and plots real-time charts to display input and output rates in bytes per second. In addition, the Interface monitoring page displays input and output packet counters and error counters in the form of charts.

Alternatively, you can enter the **show** commands in the CLI to view interface status and traffic statistics.



NOTE: For logical interfaces on EX Series switches, the traffic statistics fields in **show interfaces** commands show only control traffic; the traffic statistics do not include data traffic.



NOTE: EX Series switches do not support the collection and reporting of IPv6 transit statistics. Therefore, the IPv6 transit statistics field in the **show interfaces** commands displays all values as 0.



**Action** To view general interface information in the J-Web interface such as available interfaces, select **Monitor > Interfaces**. Click any interface to view details about its status.

To set up interface monitoring for Virtual Chassis and EX8200 switches, select a member from the **Port for Member** list. Details such as the admin status and link status are displayed in the table. For an EX8200 Virtual Chassis setup, select the member, **FPC**, and the required interface.



**NOTE:** By default, the details of the first member in the FPC list is displayed. In an EX8200 Virtual Chassis setup, details of the first member and the first FPC is displayed.

You have the following options:

- **Start/Stop**—Starts or stops monitoring the selected interface.
- **Show Graph**—Displays input and output packet counters and error counters in the form of charts. Click the pop-up icon to view the graph in a separate window.
- **Details**—Displays interface information such as general details, traffic statistics, I/O errors, CoS counters, and Ethernet statistics.
- **Refresh Interval (sec)**—Displays the time interval you have set for page refresh.
- **Clear Statistics**—Clears the statistics for the interface selected from the table.

Using the CLI:

- To view interface status for all the interfaces, enter **show interfaces xe-**.
- To view status and statistics for a specific interface, enter **show interfaces xe-interface-name**.
- To view status and traffic statistics for all interfaces, enter either **show interfaces xe-detail** or **show interfaces xe- extensive**.

**Meaning** In the J-Web interface the charts displayed are:

- Bar charts—Display the input and output error counters.
- Pie charts—Display the number of broadcast, unicast, and multicast packet counters.

For details about output from the CLI commands, see **show interfaces ge-** (Gigabit Ethernet) or **show interfaces xe-** (10-Gigabit Ethernet).

**Related Documentation**

- [Configuring Gigabit Ethernet Interfaces \(J-Web Procedure\) on page 35](#)
- [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\)](#)
- [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\) on page 32](#)



## Verifying the Status of a LAG Interface

**Purpose** Verify that a LAG (ae0) has been created on the switch.

**Action** Enter the following command:

```
user@switch> show interfaces ae0 terse
```

| Interface | Admin | Link | Proto | Local         | Remote |
|-----------|-------|------|-------|---------------|--------|
| ae0       | up    | up   |       |               |        |
| ae0.0     | up    | up   | inet  | 10.10.10.2/24 |        |

**Meaning** The output confirms that the ae0 link is up and shows the family and IP address assigned to this link.

- Related Documentation**
- [Configuring Aggregated Ethernet Links \(CLI Procedure\) on page 84](#)
  - [Configuring Aggregated Ethernet Interfaces \(J-Web Procedure\) on page 85](#)
  - *Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch*

## Verifying That EEE Is Saving Energy on Configured Ports

**Purpose** Verify that enabling EEE saves energy on Base-T Copper Ethernet ports.

**Action** You can see the amount of energy saved by EEE on an EX Series switch using the **show chassis power-budget-statistics** command.

1. View the power budget of an EX Series switch before enabling EEE.

- On an EX6210 switch:

```
user@switch>show chassis power-budget-statistics
```

|                                         |   |                     |   |        |         |
|-----------------------------------------|---|---------------------|---|--------|---------|
| PSU                                     | 2 | (EX6200-PWR-AC2500) | : | 2500 W | Online  |
| PSU                                     | 3 | )                   | : | 0 W    | Offline |
| Total Power supplied by all Online PSUs |   |                     | : | 2500 W |         |
| Power Redundancy Configuration          |   |                     | : | N+1    |         |
| Power Reserved for the Chassis          |   |                     | : | 500 W  |         |

|                     |   |  |            |            |
|---------------------|---|--|------------|------------|
| Fan Tray Statistics |   |  | Base power | Power Used |
| FTC                 | 0 |  | : 300 W    | nan W      |

|                |          |                    |            |            |         |
|----------------|----------|--------------------|------------|------------|---------|
| FPC Statistics |          |                    | Base power | Power Used | PoE     |
| power          | Priority |                    |            |            |         |
| FPC            | 3        | (EX6200-48T)       | :          | 150 W      | 61.54 W |
| 0 W            | 9        |                    |            |            |         |
| FPC            | 4        | (EX6200-SRE64-4XS) | :          | 100 W      | 48.25 W |
| 0 W            | 0        |                    |            |            |         |
| FPC            | 5        | (EX6200-SRE64-4XS) | :          | 100 W      | 48.00 W |
| 0 W            | 0        |                    |            |            |         |
| FPC            | 7        | (EX6200-48T)       | :          | 150 W      | 63.11 W |
| 0 W            | 9        |                    |            |            |         |
| FPC            | 8        | (EX6200-48T)       | :          | 150 W      | 12.17 W |
| 0 W            | 9        |                    |            |            |         |

|                                  |  |  |   |       |
|----------------------------------|--|--|---|-------|
| Total (non-PoE) Power allocated  |  |  | : | 950 W |
| Total Power allocated for PoE    |  |  | : | 0 W   |
| Power Available (Redundant case) |  |  | : | 0 W   |



Total Power Available : 1550 W

- On an EX4300 switch:

```
user@switch>show chassis power-budget-statistics fpc 1
PSU 1 (JPSU-1100-AC-AF0-A) : 1100 W Online
Power redundancy configuration : N+0
Total power supplied by all online PSUs : 1100 W
Base power reserved : 175 W
Non-PoE power being consumed : 95 W
Total Power allocated for PoE : 925 W
Total PoE power consumed : 0 W
Total PoE power remaining : 925 W
```

2. Enable EEE on Base-T Copper Ethernet ports and save the configuration.
3. View the power budget of the switch after enabling EEE.

- On an EX6210 switch:

```
user@switch> show chassis power-budget-statistics
PSU 2 (EX6200-PWR-AC2500) : 2500 W Online
PSU 3 (EX6200-PWR-AC2500) : 0 W Offline
Total Power supplied by all Online PSUs : 2500 W
Power Redundancy Configuration : N+1
Power Reserved for the Chassis : 500 W
Fan Tray Statistics
FTC 0 : Base power 300 W Power Used nan W
FPC Statistics
power Priority Base power Power Used PoE
FPC 3 (EX6200-48T) : 150 W 50.36 W
0 W 9
FPC 4 (EX6200-SRE64-4XS) : 100 W 48.60 W
0 W 0
FPC 5 (EX6200-SRE64-4XS) : 100 W 48.09 W
0 W 0
FPC 7 (EX6200-48T) : 150 W 51.38 W
0 W 9
FPC 8 (EX6200-48T) : 150 W 12.17 W
0 W 9
Total (non-PoE) Power allocated : 950 W
Total Power allocated for PoE : 0 W
Power Available (Redundant case) : 0 W
Total Power Available : 1550 W
```

- On an EX4300 switch:

```
user@switch> show chassis power-budget-statistics fpc 1
PSU 1 (JPSU-1100-AC-AF0-A) : 1100 W Online
Power redundancy configuration : N+0
Total power supplied by all online PSUs : 1100 W
Base power reserved : 175 W
Non-PoE power being consumed : 86 W
Total Power allocated for PoE : 925 W
Total PoE power consumed : 0 W
Total PoE power remaining : 925 W
```



**Meaning** On an EX6210 switch, the **Power Used** field in the output shows the actual power being consumed by the line card or SRE module, including PoE power. If you compare the values in the **Power Used** field before and after enabling EEE for FPC 3 and FPC 7, you will notice that power is saved when EEE is enabled.



**NOTE:** The **Power Used** field is displayed in the output only for EX6210 switches.

On an EX4300 switch, if you compare the values in the **Non-PoE power being consumed** field before and after enabling EEE, you will notice that power is saved when EEE is enabled.

- Related Documentation**
- [Configuring Energy Efficient Ethernet on Interfaces \(CLI Procedure\) on page 97](#)
  - [Understanding How Energy Efficient Ethernet Reduces Power Consumption on Interfaces on page 16](#)

## Verifying That LACP Is Configured Correctly and Bundle Members Are Exchanging LACP Protocol Packets

Verify that LACP has been set up correctly and that the bundle members are transmitting LACP protocol packets.

1. [Verifying the LACP Setup on page 259](#)
2. [Verifying That LACP Packets Are Being Exchanged on page 260](#)

### Verifying the LACP Setup

**Purpose** Verify that the LACP has been set up correctly.

**Action** To verify that LACP has been enabled as active on one end:

```
user@switch> show lacp interfaces xe-0/1/0
Aggregated interface: ae0
```

|                |               |     |                |      |     |     |           |         |          |
|----------------|---------------|-----|----------------|------|-----|-----|-----------|---------|----------|
| LACP state:    | Role          | Exp | Def            | Dist | Col | Syn | Aggr      | Timeout | Activity |
| xe-0/1/0       | Actor         | No  | Yes            | No   | No  | No  | Yes       | Fast    | Active   |
| xe-0/1/0       | Partner       | No  | Yes            | No   | No  | No  | Yes       | Fast    | Passive  |
| LACP protocol: | Receive State |     | Transmit State |      |     |     | Mux State |         |          |
| xe-0/1/0       | Defaulted     |     | Fast periodic  |      |     |     | Detached  |         |          |



**Meaning** This output shows that LACP has been configured with one side as active and the other as passive. When LACP is enabled, at least one side must be set as active for the bundled link to be up.

## Verifying That LACP Packets Are Being Exchanged

**Purpose** Verify that LACP packets are being exchanged between interfaces.

**Action** Use the `show interfaces aex statistics` command to display LACP BPDU exchange information.

`show interfaces ae0 statistics`

```
Physical interface: ae0, Enabled, Physical link is Down
 Interface index: 153, SNMP ifIndex: 30
 Link-level type: Ethernet, MTU: 1514, Speed: Unspecified, Loopback: Disabled,
 Source filtering: Disabled, Flow control: Disabled, Minimum links needed: 1,
 Minimum bandwidth needed: 0
 Device flags : Present Running
 Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
 Current address: 02:19:e2:50:45:e0, Hardware address: 02:19:e2:50:45:e0
 Last flapped : Never
 Statistics last cleared: Never
 Input packets : 0
 Output packets: 0
 Input errors: 0, Output errors: 0

Logical interface ae0.0 (Index 71) (SNMP ifIndex 34)
 Flags: Hardware-Down Device-Down SNMP-Traps Encapsulation: ENET2
 Statistics Packets pps Bytes bps
 Bundle:
 Input : 0 0 0 0
 Output: 0 0 0 0
 Protocol inet,
 Flags: None
 Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
 Destination: 10.10.10/24, Local: 10.10.10.1, Broadcast: 10.10.10.255
```

**Meaning** The output here shows that the link is down and that no PDUs are being exchanged (when there is no other traffic flowing on the link).

**Related Documentation**

- [Configuring Aggregated Ethernet LACP](#)
- [Configuring Aggregated Ethernet LACP \(CLI Procedure\) on page 88](#)
- [Verifying the Status of a LAG Interface](#)
- [Verifying the Status of a LAG Interface on page 257](#)

## Verifying That Layer 3 Subinterfaces Are Working

---

**Purpose** After configuring Layer 3 subinterfaces, verify they are set up properly and transmitting data.



- Action** 1. Use the **show interfaces** command to determine whether you successfully created the subinterfaces and the links are up:

```
user@switch> show interfaces interface-name terse
Interface Admin Link Proto Local Remote
ge-0/0/0 up up
ge-0/0/0.0 up up inet 1.1.1.1/24
ge-0/0/0.1 up up inet 2.1.1.1/24
ge-0/0/0.2 up up inet 3.1.1.1/24
ge-0/0/0.3 up up inet 4.1.1.1/24
ge-0/0/0.4 up up inet 5.1.1.1/24
ge-0/0/0.32767 up up
```

2. Use the **ping** command from a device on one subnet to an address on another subnet to determine whether packets were transmitted correctly on the subinterface VLANs:

```
user@switch> ping ip-address
PING 1.1.1.1 (1.1.1.1): 56 data bytes
64 bytes from 1.1.1.1: icmp_seq=0 ttl=64 time=0.157 ms
64 bytes from 1.1.1.1: icmp_seq=1 ttl=64 time=0.238 ms
64 bytes from 1.1.1.1: icmp_seq=2 ttl=64 time=0.255 ms
64 bytes from 1.1.1.1: icmp_seq=3 ttl=64 time=0.128 ms
--- 1.1.1.1 ping statistics ---
4 packets transmitted, 4 packets received, 0% packet loss
```

**Meaning** The output confirms that the subinterfaces are created and the links are up.

- Related Documentation**
- [Configuring a Layer 3 Subinterface \(CLI Procedure\) on page 102](#)
  - *Example: Configuring Layer 3 Subinterfaces for a Distribution Switch and an Access Switch*

## Verifying Unicast RPF Status

**Purpose** Verify that unicast reverse-path forwarding (RPF) is enabled and is working on the interface.

- Action** Use one of the **show interfaces interface-name** commands with either the **extensive** or **detail** options to verify that unicast RPF is enabled and working on the switch. The following example displays output from the **show interfaces ge- extensive** command.

```
user@switch> show interfaces ge-1/0/10 extensive
Physical interface: ge-1/0/10, Enabled, Physical link is Down
Interface index: 139, SNMP ifIndex: 58, Generation: 140
Link-level type: Ethernet, MTU: 1514, Speed: Auto, MAC-REWRITE Error: None,
Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled,
Auto-negotiation: Enabled, Remote fault: Online
Device flags : Present Running
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:19:e2:50:95:ab, Hardware address: 00:19:e2:50:95:ab
Last flapped : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
```



```

Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Input errors:
 Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
 L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
 FIFO errors: 0, Resource errors: 0
Output errors:
 Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

 FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:
 Queued packets Transmitted packets Dropped packets

 0 best-effort 0 0 0
 1 assured-forw 0 0 0
 5 expedited-fo 0 0 0
 7 network-cont 0 0 0

Active alarms : LINK
Active defects : LINK
MAC statistics:
 Receive Transmit
 Total octets 0 0
 Total packets 0 0
 Unicast packets 0 0
 Broadcast packets 0 0
 Multicast packets 0 0
 CRC/Align errors 0 0
 FIFO errors 0 0
 MAC control frames 0 0
 MAC pause frames 0 0
 Oversized frames 0
 Jabber frames 0
 Fragment frames 0
 VLAN tagged frames 0
 Code violations 0
Filter statistics:
 Input packet count 0
 Input packet rejects 0
 Input DA rejects 0
 Input SA rejects 0
 Output packet count 0
 Output packet pad count 0
 Output packet error count 0
 CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
 Negotiation status: Incomplete
Packet Forwarding Engine configuration:
 Destination slot: 1

Logical interface ge-1/0/10.0 (Index 69) (SNMP ifIndex 59) (Generation 135)
Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
Traffic statistics:

```



```

Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Protocol inet, Generation: 144, Route table: 0
Flags: uRPF
Addresses, Flags: Is-Preferred Is-Primary

```

**Meaning** The `show interfaces ge-1/0/10 extensive` command (and the `show interfaces ge-1/0/10 detail` command) displays in-depth information about the interface. The **Flags:** output field near the bottom of the display reports the unicast RPF status. If unicast RPF has not been enabled, the **uRPF** flag is not displayed.

On EX3200, EX4200, and EX4300 switches, unicast RPF is implicitly enabled on *all* switch interfaces, including aggregated Ethernet interfaces (also referred to as link aggregation groups or LAGs), integrated routing and bridging (IRB) interfaces, and routed VLAN interfaces (RVIs) when you enable unicast RPF on a single interface. However, the unicast RPF status is shown as enabled only on interfaces for which you have explicitly configured unicast RPF. Thus, the **uRPF** flag is not displayed on interfaces for which you have not explicitly configured unicast RPF even though unicast RPF is implicitly enabled on all interfaces on EX3200 and EX4200 switches.

- Related Documentation**
- [show interfaces xe- on page 333](#)
  - [Example: Configuring Unicast RPF on an EX Series Switch](#)
  - [Configuring Unicast RPF \(CLI Procedure\) on page 103](#)
  - [Disabling Unicast RPF \(CLI Procedure\) on page 104](#)
  - [Troubleshooting Unicast RPF on page 357](#)

## Verifying IP Directed Broadcast Status

**Purpose** Verify that IP directed broadcast is enabled and is working on the subnet.



**Action** Use the **show vlans extensive** command to verify that IP directed broadcast is enabled and working on the subnet as shown in *Example: Configuring IP Directed Broadcast on an EX Series Switch*.

- Related Documentation**
- *Configuring IP Directed Broadcast (CLI Procedure)*
  - [Configuring IP Directed Broadcast \(CLI Procedure\) on page 105](#)
  - *Example: Configuring IP Directed Broadcast on an EX Series Switch*



## CHAPTER 5

# Operational Commands

- `monitor interface`
- `request diagnostics tdr`
- `show diagnostics tdr`
- `show forwarding-options enhanced-hash-key`
- `show interfaces diagnostics optics`
- `show interfaces ge-`
- `show interfaces irb`
- `show interfaces mc-ae`
- `show interfaces me0`
- `show interfaces queue`
- `show interfaces xe-`
- `show lacp interfaces`
- `test interface restart-auto-negotiation`



## monitor interface

**Syntax** `monitor interface`  
`<interface-name> | traffic <detail>`

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
 Command introduced in Junos OS Release 11.1 for the QFX Series.  
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Display real-time statistics about interfaces, updating the statistics every second. Check for and display common interface failures, such as SONET/SDH and T3 alarms, loopbacks detected, and increases in framing errors.



**NOTE:** This command is not supported on the QFX3000 QFabric system.

**Options** **none**—Display real-time statistics for all interfaces.

**detail**—(Optional) With traffic option only, display detailed output.

**interface-name**—(Optional) Display real-time statistics for the specified interface. In a TX Matrix or TX Matrix Plus router, display real-time statistics for the physical interfaces on the specified line-card chassis (LCC) only.

**traffic**—(Optional) Display traffic data for all active interfaces. In a TX Matrix or TX Matrix Plus router, display real-time statistics for the physical interfaces on the specified LCC only.

**Additional Information** The output of this command shows how much each field has changed since you started the command or since you cleared the counters by pressing the **c** key. For a description of the statistical information provided in the output of this command, see the **show interfaces extensive** command for a particular interface type in the [CLI Explorer](#). To control the output of the **monitor interface** command while it is running, use the keys listed in [Table 42 on page 266](#). The keys are not case-sensitive.

**Table 42: Output Control Keys for the monitor interface Command**

| Key | Action                                                                                                                                                                                                                     |
|-----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| c   | Clears (returns to zero) the delta counters since <b>monitor interface</b> was started. This does not clear the accumulative counter. To clear the accumulative counter, use the <b>clear interfaces interval</b> command. |
| f   | Freezes the display, halting the display of updated statistics and delta counters.                                                                                                                                         |
| i   | Displays information about a different interface. The command prompts you for the name of a specific interface.                                                                                                            |



**Table 42: Output Control Keys for the monitor interface Command** (*continued*)

| Key      | Action                                                                                                                                                                                         |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| n        | Displays information about the next interface. The <b>monitor interface</b> command displays the physical or logical interfaces in the same order as the <b>show interfaces terse</b> command. |
| q or Esc | Quits the command and returns to the command prompt.                                                                                                                                           |
| t        | Thaws the display, resuming the update of the statistics and delta counters.                                                                                                                   |

To control the output of the **monitor interface traffic** command while it is running, use the keys listed in [Table 43 on page 267](#). The keys are not case-sensitive.

**Table 43: Output Control Keys for the monitor interface traffic Command**

| Key      | Action                                                                                                               |
|----------|----------------------------------------------------------------------------------------------------------------------|
| b        | Displays the statistics in units of bits and bits per second (bps).                                                  |
| c        | Clears (return to 0) the delta counters in the <b>Current Delta</b> column. The statistics counters are not cleared. |
| d        | Displays the <b>Current Delta</b> column (instead of the rate column) in Bps or packets per second (pps).            |
| p        | Displays the statistics in units of packets and packets per second (pps).                                            |
| q or Esc | Quits the command and returns to the command prompt.                                                                 |
| r        | Displays the rate column (instead of the <b>Current Delta</b> column) in Bps and pps.                                |

**Required Privilege Level** trace

**List of Sample Output** [monitor interface \(Physical\) on page 269](#)  
[monitor interface \(OTN Interface\) on page 270](#)  
[monitor interface \(MX2020 Routers with MPC6E and OTN MICInterface\) on page 271](#)  
[monitor interface \(Logical\) on page 272](#)  
[monitor interface \(QFX3500 Switch\) on page 272](#)  
[monitor interface traffic on page 273](#)  
[monitor interface traffic \(QFX3500 Switch\) on page 273](#)  
[monitor interface traffic detail \(QFX3500 Switch\) on page 274](#)

**Output Fields** [Table 44 on page 268](#) describes the output fields for the **monitor interface** command. Output fields are listed in the approximate order in which they appear.



Table 44: monitor interface Output Fields

| Field Name               | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Level of Output |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>routerl</b>           | Hostname of the router.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | All levels      |
| <b>Seconds</b>           | How long the monitor interface command has been running or how long since you last cleared the counters.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | All levels      |
| <b>Time</b>              | Current time (UTC).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | All levels      |
| <b>Delay x/y/z</b>       | Time difference between when the statistics were displayed and the actual clock time. <ul style="list-style-type: none"> <li>• <b>x</b>—Time taken for the last polling (in milliseconds).</li> <li>• <b>y</b>—Minimum time taken across all pollings (in milliseconds).</li> <li>• <b>z</b>—Maximum time taken across all pollings (in milliseconds).</li> </ul>                                                                                                                                                                                                                                                                                                                        | All levels      |
| <b>Interface</b>         | Short description of the interface, including its name, status, and encapsulation.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | All levels      |
| <b>Link</b>              | State of the link: <b>Up</b> , <b>Down</b> , or <b>Test</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | All levels      |
| <b>Current delta</b>     | Cumulative number for the counter in question since the time shown in the Seconds field, which is the time since you started the command or last cleared the counters.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | All levels      |
| <b>Local Statistics</b>  | (Logical interfaces only) Number and rate of bytes and packets destined to the router or switch through the specified interface. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It usually takes less than 1 second for this counter to stabilize. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> | All levels      |
| <b>Remote Statistics</b> | (Logical interfaces only) Statistics for traffic transiting the router or switch. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It usually takes less than 1 second for this counter to stabilize. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>                                                | All levels      |



Table 44: monitor interface Output Fields (*continued*)

| Field Name         | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Level of Output |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Traffic statistics | <p>Total number of bytes and packets received and transmitted on the interface. These statistics are the sum of the local and remote statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It usually takes less than 1 second for this counter to stabilize.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> | All levels      |
| Description        | With the <b>traffic</b> option, displays the interface description configured at the <b>[edit interfaces <i>interface-name</i>]</b> hierarchy level.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | detail          |

## Sample Output

### monitor interface (Physical)

```

user@host> monitor interface so-0/0/0
router1 Seconds: 19 Time: 15:46:29

Interface: so-0/0/0, Enabled, Link is Up
Encapsulation: PPP, Keepalives, Speed: 0C48
Traffic statistics:
 Input packets: 6045 (0 pps)
 Input bytes: 6290065 (0 bps)
 Output packets: 10376 (0 pps)
 Output bytes: 10365540 (0 bps)
Encapsulation statistics:
 Input keepalives: 1901
 Output keepalives: 1901
 NCP state: Opened
 LCP state: Opened
Error statistics:
 Input errors: 0
 Input drops: 0
 Input framing errors: 0
 Policed discards: 0
 L3 incompletes: 0
 L2 channel errors: 0
 L2 mismatch timeouts: 0
 Carrier transitions: 1
 Output errors: 0
 Output drops: 0
 Aged packets: 0
Active alarms : None
Active defects: None
SONET error counts/seconds:
 LOS count 1
 LOF count 1
 SEF count 1
 ES-S 0
 SES-S 0
SONET statistics:
 BIP-B1 458871

```



```

BIP-B2 460072 [0]
REI-L 465610 [0]
BIP-B3 458978 [0]
REI-P 458773 [0]

```

## Received SONET overhead:

```

F1 : 0x00 J0 : 0x00 K1 : 0x00
K2 : 0x00 S1 : 0x00 C2 : 0x00
C2(cmp) : 0x00 F2 : 0x00 Z3 : 0x00
Z4 : 0x00 S1(cmp) : 0x00

```

## Transmitted SONET overhead:

```

F1 : 0x00 J0 : 0x01 K1 : 0x00
K2 : 0x00 S1 : 0x00 C2 : 0xcf
F2 : 0x00 Z3 : 0x00 Z4 : 0x00

```

Next='n', Quit='q' or ESC, Freeze='f', Thaw='t', Clear='c', Interface='i'

## monitor interface (OTN Interface)

```
user@host> monitor interface ge-7/0/0
```

```

Interface: ge-7/0/0, Enabled, Link is Up
Encapsulation: Ethernet, Speed: 10000mbps
Traffic statistics:
 Input bytes: 0 (0 bps)
 Output bytes: 0 (0 bps)
 Input packets: 0 (0 pps)
 Output packets: 0 (0 pps)
Error statistics:
 Input errors: 0
 Input drops: 0
 Input framing errors: 0
 Policed discards: 0
 L3 incompletes: 0
 L2 channel errors: 0
 L2 mismatch timeouts: 0
 Carrier transitions: 5
 Output errors: 0
 Output drops: 0
 Aged packets: 0
Active alarms : None
Active defects: None
Input MAC/Filter statistics:
 Unicast packets 0
 Broadcast packets 0
 Multicast packets 0
 Oversized frames 0
 Packet reject count 0
 DA rejects 0
 SA rejects 0
Output MAC/Filter Statistics:
 Unicast packets 0
 Broadcast packets 0
 Multicast packets 0
 Packet pad count 0
 Packet error count 0
OTN Link 0
 OTN Alarms: OTU_BDI, OTU_TTIM, ODU_BDI
 OTN Defects: OTU_BDI, OTU_TTIM, ODU_BDI, ODU_TTIM
 OTN OC - Seconds
 LOS 2

```



```

 LOF 9
OTN OTU - FEC Statistics
 Corr err ratio N/A
 Corr bytes 0
 Uncorr words 0
OTN OTU - Counters
 BIP 0
 BBE 0
 ES 0
 SES 0
 UAS 422
OTN ODU - Counters
 BIP 0
 BBE 0
 ES 0
 SES 0
 UAS 422
OTN ODU - Received Overhead APSPPC 0-3: 0

```

### monitor interface (MX2020 Routers with MPC6E and OTN MICInterface)

```

user@host> monitor interface xe-3/0/0
host name Seconds: 67 Time: 23:46:46
 Delay: 0/0/13

Interface: xe-3/0/0, Enabled, Link is Up
Encapsulation: Ethernet, Speed: 10000mbps
Traffic statistics: Current delta
 Input bytes: 0 (0 bps) [0]
 Output bytes: 0 (0 bps) [0]
 Input packets: 0 (0 pps) [0]
 Output packets: 0 (0 pps) [0]
Error statistics:
 Input errors: 0 [0]
 Input drops: 0 [0]
 Input framing errors: 0 [0]
 Policed discards: 0 [0]
 L3 incompletes: 0 [0]
 L2 channel errors: 0 [0]
 L2 mismatch timeouts: 0 [0]
 Carrier transitions: 3 [0]
 Output errors: 0 [0]
 Output drops: 0 [0]
 Aged packets: 0 [0]
OTN Link 0
 OTN Alarms:
 OTN Defects:
 OTN OC - Seconds
 LOS 0 [0]
 LOF 0 [0]
 OTN OTU - FEC Statistics
 Corr err ratio N/A
 Corr bytes 0 [0]
 Uncorr words 0 [0]
 OTN OTU - Counters
 BIP 0 [0]
 BBE 0 [0]
 ES 0 [0]
 SES 0 [0]
 UAS 0 [0]
 OTN ODU - Counters
 BIP 0 [0]

```



```

BBE 0 [0]
ES 0 [0]
SES 0 [0]
UAS 0 [0]
OTN ODU - Received Overhead 0 [0]
APSPCC 0-3: 00 00 00 00

```

Next='n', Quit='q' or ESC, Freeze='f', Thaw='t', Clear='c', Interface='i'

### monitor interface (Logical)

```

user@host> monitor interface so-1/0/0.0
host name Seconds: 16 Time: 15:33:39
 Delay: 0/0/1

Interface: so-1/0/0.0, Enabled, Link is Down
Flags: Hardware-Down Point-To-Point SNMP-Traps
Encapsulation: PPP
Local statistics:
Input bytes: 0 [0]
Output bytes: 0 [0]
Input packets: 0 [0]
Output packets: 0 [0]
Remote statistics:
Input bytes: 0 (0 bps) [0]
Output bytes: 0 (0 bps) [0]
Input packets: 0 (0 pps) [0]
Output packets: 0 (0 pps) [0]
Traffic statistics:
Destination address: 192.168.8.193, Local: 192.168.8.21

Next='n', Quit='q' or ESC, Freeze='f', Thaw='t', Clear='c', Interface='i'

```

### monitor interface (QFX3500 Switch)

```

user@switch> monitor interface ge-0/0/0
Interface: ge-0/0/0, Enabled, Link is Down
Encapsulation: Ethernet, Speed: Unspecified
Traffic statistics:
Input bytes: 0 (0 bps) [0]
Output bytes: 0 (0 bps) [0]
Input packets: 0 (0 pps) [0]
Output packets: 0 (0 pps) [0]
Error statistics:
Input errors: 0 [0]
Input drops: 0 [0]
Input framing errors: 0 [0]
Policed discards: 0 [0]
L3 incompletes: 0 [0]
L2 channel errors: 0 [0]
L2 mismatch timeouts: 0 [0]
Carrier transitions: 0 [0]
Output errors: 0 [0]
Output drops: 0 [0]
Aged packets: 0 [0]
Active alarms : LINK
Active defects: LINK
Input MAC/Filter statistics:
Unicast packets 0 [0]
Broadcast packets 0 Multicast packet [0]

```



Interface warnings:  
 o Outstanding LINK alarm

### monitor interface traffic

```
user@host> monitor interface traffic
host name Seconds: 15 Time: 12:31:09
```

| Interface | Link | Input packets | (pps) | Output packets | (pps) |
|-----------|------|---------------|-------|----------------|-------|
| so-1/0/0  | Down | 0             | (0)   | 0              | (0)   |
| so-1/1/0  | Down | 0             | (0)   | 0              | (0)   |
| so-1/1/1  | Down | 0             | (0)   | 0              | (0)   |
| so-1/1/2  | Down | 0             | (0)   | 0              | (0)   |
| so-1/1/3  | Down | 0             | (0)   | 0              | (0)   |
| t3-1/2/0  | Down | 0             | (0)   | 0              | (0)   |
| t3-1/2/1  | Down | 0             | (0)   | 0              | (0)   |
| t3-1/2/2  | Down | 0             | (0)   | 0              | (0)   |
| t3-1/2/3  | Down | 0             | (0)   | 0              | (0)   |
| so-2/0/0  | Up   | 211035        | (1)   | 36778          | (0)   |
| so-2/0/1  | Up   | 192753        | (1)   | 36782          | (0)   |
| so-2/0/2  | Up   | 211020        | (1)   | 36779          | (0)   |
| so-2/0/3  | Up   | 211029        | (1)   | 36776          | (0)   |
| so-2/1/0  | Up   | 189378        | (1)   | 36349          | (0)   |
| so-2/1/1  | Down | 0             | (0)   | 18747          | (0)   |
| so-2/1/2  | Down | 0             | (0)   | 16078          | (0)   |
| so-2/1/3  | Up   | 0             | (0)   | 80338          | (0)   |
| at-2/3/0  | Up   | 0             | (0)   | 0              | (0)   |
| at-2/3/1  | Down | 0             | (0)   | 0              | (0)   |

Bytes=b, Clear=c, Delta=d, Packets=p, Quit=q or ESC, Rate=r, Up=^U, Down=^D

### monitor interface traffic (QFX3500 Switch)

```
user@switch> monitor interface traffic
switch Seconds: 7 Time: 16:04:37
```

| Interface | Link | Input packets | (pps) | Output packets | (pps) |
|-----------|------|---------------|-------|----------------|-------|
| ge-0/0/0  | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/1  | Up   | 392187        | (0)   | 392170         | (0)   |
| ge-0/0/2  | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/3  | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/4  | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/5  | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/6  | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/7  | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/8  | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/9  | Up   | 392184        | (0)   | 392171         | (0)   |
| ge-0/0/10 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/11 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/12 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/13 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/14 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/15 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/16 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/17 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/18 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/19 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/20 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/21 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/22 | Up   | 392172        | (0)   | 392187         | (0)   |
| ge-0/0/23 | Up   | 392185        | (0)   | 392173         | (0)   |



|       |      |   |     |         |     |
|-------|------|---|-----|---------|-----|
| vcp-0 | Down | 0 |     | 0       |     |
| vcp-1 | Down | 0 |     | 0       |     |
| ae0   | Down | 0 | (0) | 0       | (0) |
| bme0  | Up   | 0 |     | 1568706 |     |

#### monitor interface traffic detail (QFX3500 Switch)

user@switch> monitor interface traffic detail  
switch

Seconds: 74

Time: 16:03:02

| Interface<br>Description | Link | Input packets | (pps) | Output packets | (pps) |
|--------------------------|------|---------------|-------|----------------|-------|
| ge-0/0/0                 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/1                 | Up   | 392183        | (0)   | 392166         | (0)   |
| ge-0/0/2                 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/3                 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/4                 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/5                 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/6                 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/7                 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/8                 | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/9                 | Up   | 392181        | (0)   | 392168         | (0)   |
| ge-0/0/10                | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/11                | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/12                | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/13                | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/14                | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/15                | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/16                | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/17                | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/18                | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/19                | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/20                | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/21                | Down | 0             | (0)   | 0              | (0)   |
| ge-0/0/22                | Up   | 392169        | (0)   | 392184         | (1)   |
| ge-0/0/23                | Up   | 392182        | (0)   | 392170         | (0)   |
| vcp-0                    | Down | 0             |       | 0              |       |
| vcp-1                    | Down | 0             |       | 0              |       |
| ae0                      | Down | 0             | (0)   | 0              | (0)   |
| bme0                     | Up   | 0             |       | 1568693        |       |



## request diagnostics tdr


|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>request diagnostics tdr (abort   start) interface <i>interface-name</i></code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | <p>Start a time domain reflectometry (TDR) diagnostic test on the specified interface. This test characterizes and locates faults on twisted-pair Ethernet cables. For example, it can detect a broken twisted pair and provide the approximate distance to the break. It can also detect polarity swaps, pair swaps, and excessive skew.</p> <p>The TDR test is supported on the following switches and interfaces:</p> <ul style="list-style-type: none"> <li>EX2200, EX3200, EX3300, and EX4200 switches—RJ-45 network interfaces. The TDR test is not supported on management interfaces and SFP interfaces.</li> <li>EX6200 and EX8200 switches—RJ-45 interfaces on line cards.</li> </ul> |
|                                 | <p> <b>NOTE:</b> We recommend running the TDR test when there is no traffic on the interface under test.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                                 | You view the results of the TDR test with the <a href="#">show diagnostics tdr</a> command.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <p><b>abort</b>—Stop the TDR test currently in progress on the specified interface. No results are reported, and previous results, if any, are cleared.</p> <p><b><i>interface-name</i></b>—The name of the interface.</p> <p><b>start</b>—Start a TDR test on the specified interface.</p>                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | maintenance                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><a href="#">show diagnostics tdr on page 277</a></li> <li><a href="#">Diagnosing a Faulty Twisted-Pair Cable (CLI Procedure) on page 358</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>List of Sample Output</b>    | <a href="#">request diagnostics tdr start interface ge-0/0/19 on page 276</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Output Fields</b>            | Table 45 on page 276 lists the output fields for the <b>request diagnostics tdr</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |



Table 45: request diagnostics tdr Output Fields

| Field Name  | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Test Status | <p>Information about the status of the TDR test request:</p> <ul style="list-style-type: none"><li>• <b>Admin Down <i>interface-name</i></b>—The interface is administratively down. The TDR test cannot run on interfaces that are administratively down.</li><li>• <b>Interface <i>interface-name</i> not found</b>—The interface does not exist.</li><li>• <b>Test successfully executed <i>interface-name</i></b>—The test has successfully started on the interface. You can view the test results with the <b>show diagnostics tdr</b> command.</li><li>• <b>VCT not supported on <i>interface-name</i></b>—The TDR test is not supported on the interface.</li></ul> |

## Sample Output

request diagnostics tdr start interface ge-0/0/19

```
user@switch> request diagnostics tdr start interface ge-0/0/19
```

Interface TDR detail:

Test status : Test successfully executed ge-0/0/19



## show diagnostics tdr

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show diagnostics tdr</code><br><code>&lt;interface <i>interface-name</i>&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | <p>Display the results of a time domain reflectometry (TDR) diagnostic test run on an interface. A TDR test characterizes and locates faults on twisted-pair Ethernet cables. For example, it can detect a broken twisted pair and provide the approximate distance to the break. It can also detect polarity swaps, pair swaps, and excessive skew.</p> <p>The TDR test is supported on the following switches and interfaces:</p> <ul style="list-style-type: none"> <li>EX2200, EX3200, EX3300, and EX4200 switches—RJ-45 network interfaces. The TDR test is not supported on management interfaces and SFP interfaces.</li> <li>EX6200 and EX8200 switches— RJ-45 interfaces on line cards.</li> </ul> <p>Use the <a href="#">request diagnostics tdr</a> command to request a TDR test on a specified interface. Use the <b>show diagnostic tdr</b> command to display the last TDR test results for a specified interface or the last TDR test results for all network interfaces on the switch that support the TDR test.</p> |
| <b>Options</b>                  | <p><b>none</b>—Show summarized last results for all interfaces on the switch that support the TDR test.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Show detailed last results for the specified interface or a range of interfaces. Specify a range of interfaces by entering the beginning and ending interface in the range, separated by a dash—for example, <b>ge-0/0/15-ge-0/0/20</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><a href="#">request diagnostics tdr on page 275</a></li> <li><a href="#">Diagnosing a Faulty Twisted-Pair Cable (CLI Procedure) on page 358</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>List of Sample Output</b>    | <a href="#">show diagnostics tdr interface ge-0/0/19 (Normal Cable) on page 279</a><br><a href="#">show diagnostics tdr interface ge-2/0/2 (Faulty Cable) on page 280</a><br><a href="#">show diagnostics tdr (All Supported Interfaces) on page 280</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Output Fields</b>            | <a href="#">Table 46 on page 278</a> lists the output fields for the <b>show diagnostics tdr</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |



Table 46: show diagnostics tdr Output Fields

| Field Name                                  | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Interface name or Interface</b>          | Name of interface for which TDR test results are being reported.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Test status</b>                          | <p>Status of TDR test:</p> <ul style="list-style-type: none"> <li>• <b>Aborted</b>—Test was terminated by operator before it was complete.</li> <li>• <b>Failed</b>—Test was not completed successfully.</li> <li>• <b>Interface <i>interface-name</i> not found</b>—Specified interface does not exist.</li> <li>• <b>Not Started</b>—No TDR test results are available for the interface.</li> <li>• <b>Passed</b>—Test completed successfully. The cable, however, might still have a fault—see the <b>Cable status</b> field for information on the cable.</li> <li>• <b>Started</b>—Test is currently running and not yet complete.</li> <li>• <b>VCT not supported on <i>interface-name</i></b>—TDR test is not supported on the interface.</li> </ul>                                                                                                                                                                                                                                                                                                          |
| <b>Link status</b>                          | Operating status of link: <b>UP</b> or <b>Down</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>MDI pair</b>                             | Twisted pair for which test results are being reported, identified by pin numbers. (Displayed only when the <b>interface</b> option is used.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Cable status</b>                         | <p>When detailed information is displayed, status for a twisted pair:</p> <ul style="list-style-type: none"> <li>• <b>Failed</b>—TDR test failed on the cable pair.</li> <li>• <b>Impedance Mismatch</b>—Impedance on the twisted pair is not correct. Possible reasons for an impedance mismatch include: <ul style="list-style-type: none"> <li>• The twisted pair is not connected properly.</li> <li>• The twisted pair is damaged.</li> <li>• The connector is faulty.</li> </ul> </li> <li>• <b>Normal</b>—No cable fault detected for the twisted pair.</li> <li>• <b>Open</b>—Lack of continuity between the pins at each end of the twisted-pair.</li> <li>• <b>Short on Pair-<i>n</i></b>—A short-circuit was detected on the twisted pair.</li> </ul> <p>When summary information for all interfaces is displayed, status for the cable as a whole:</p> <ul style="list-style-type: none"> <li>• <b>Fault</b>—A fault was detected on one or more of the twisted-pairs.</li> <li>• <b>OK</b>—No fault was detected on any of the twisted pairs.</li> </ul> |
| <b>Distance fault or Max distance fault</b> | <p>Distance to the fault in whole meters. If there is no fault, this value is 0.</p> <p>When summary information for all interfaces is displayed, this value is the distance to the most distant fault if there is more than one twisted pair with a fault.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |



Table 46: show diagnostics tdr Output Fields (*continued*)

| Field Name           | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Polarity swap</b> | <p>Indicates the polarity status of the twisted pair:</p> <ul style="list-style-type: none"> <li>• <b>Normal</b>—Polarity is normal. Each conductor in the twisted pair has been connected the same pins at the both ends of the connection. For example, a conductor connected to pin 1 at the near end of the connection is connected to pin 1 at the far end.</li> <li>• <b>Reversed</b>—Polarity has been reversed. For the twisted pair, the conductors have switched which pins they are connected to at the near and far ends of the connection. For example, the conductor connected to pin 1 at the near end is connected to pin 2 at the far end.</li> </ul> <p>(Not available on EX8200 switches.) (Displayed only when the <b>interface</b> option is used)</p> |
| <b>Skew time</b>     | <p>Difference in nanoseconds between the propagation delay on this twisted pair and the twisted pair with the shortest propagation delay. (Not available on EX8200 switches.) (Displayed only when the <b>interface</b> option is used.)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Channel Pair</b>  | <p>Number of the 10/100BASE-T transmit/receive pair being reported on.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Pair Swap</b>     | <p>Indicates whether or not the twisted pairs are swapped:</p> <ul style="list-style-type: none"> <li>• <b>MDI</b>—The pairs are not swapped (straight-through cable).</li> <li>• <b>MDIX</b>—The pairs are swapped (cross-over cable).</li> </ul> <p>(Displayed only when the <b>interface</b> option is used.)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Downshift</b>     | <p>Indicates whether the connection speed is being downshifted:</p> <ul style="list-style-type: none"> <li>• <b>No Downshift</b>—No downshifting of connection speed.</li> <li>• <b>Downshift occurs</b>—Connection speed is downshifted to 10 or 100 Mbs. This occurs if the cable is a two-pair cable rather than the four-pair cable required by Gigabit Ethernet.</li> </ul> <p>(Displayed only when the <b>interface</b> option is used.)</p>                                                                                                                                                                                                                                                                                                                          |

## Sample Output

### show diagnostics tdr interface ge-0/0/19 (Normal Cable)

```

user@switch> show diagnostics tdr interface ge-0/0/19
Interface TDR detail:
Interface name : ge-0/0/19
Test status : Passed
Link status : UP
MDI pair : 1-2
Cable status : Normal
Distance fault : 0 Meters
Polarity swap : Normal
Skew time : 0 ns
MDI pair : 3-6

```



```

Cable status : Normal
Distance fault : 0 Meters
Polartiy swap : Normal
Skew time : 8 ns
MDI pair : 4-5
Cable status : Normal
Distance fault : 0 Meters
Polartiy swap : Normal
Skew time : 8 ns
MDI pair : 7-8
Cable status : Normal
Distance fault : 0 Meters
Polartiy swap : Normal
Skew time : 8 ns
Channel pair : 1
Pair swap : MDI
Channel pair : 2
Pair swap : MDI
Downshift : No Downshift

```

#### show diagnostics tdr interface ge-2/0/2 (Faulty Cable)

```

user@switch> show diagnostics tdr interface ge-2/0/2
Interface TDR detail:
Interface name : ge-2/0/2
Test status : Passed
Link status : Down
MDI Pair : 1-2
 Cable status : 1-2
 Distance fault : 2 Meters
 Polartiy swap : N/A
 Skew time : N/A
MDI Pair : 3-6
 Cable status : Impedance Mismatch
 Distance fault : 3 Meters
 Polartiy swap : N/A
 Skew time : N/A
MDI Pair : 4-5
 Cable status : Impedance Mismatch
 Distance fault : 3 Meters
 Polartiy swap : N/A
 Skew time : N/A
MDI Pair : 7-8
 Cable status : Short on Pair-2
 Distance fault : 3 Meters
 Polartiy swap : N/A
 Skew time : N/A
Channel pair : 1
Pair swap : N/A
Channel pair : 2
Pair swap : N/A
Downshift : N/A

```

#### show diagnostics tdr (All Supported Interfaces)

```

user@switch> show diagnostics tdr

```

| Interface | Test status | Link status | Cable status | Max distance fault |
|-----------|-------------|-------------|--------------|--------------------|
| ge-0/0/0  | Not Started | N/A         | N/A          | N/A                |
| ge-0/0/1  | Not Started | N/A         | N/A          | N/A                |
| ge-0/0/2  | Started     | N/A         | N/A          | N/A                |
| ge-0/0/3  | Started     | N/A         | N/A          | N/A                |



|           |        |      |       |     |
|-----------|--------|------|-------|-----|
| ge-0/0/4  | Passed | UP   | OK    | 0   |
| ge-0/0/5  | Passed | UP   | Fault | 173 |
| ge-0/0/6  | Passed | UP   | OK    | 0   |
| ge-0/0/7  | Passed | UP   | OK    | 0   |
| ge-0/0/8  | Passed | UP   | OK    | 0   |
| ge-0/0/9  | Passed | UP   | OK    | 0   |
| ge-0/0/10 | Passed | UP   | OK    | 0   |
| ge-0/0/11 | Passed | UP   | OK    | 0   |
| ge-0/0/12 | Passed | UP   | OK    | 0   |
| ge-0/0/13 | Passed | UP   | OK    | 0   |
| ge-0/0/14 | Passed | UP   | OK    | 0   |
| ge-0/0/15 | Passed | UP   | OK    | 0   |
| ge-0/0/16 | Passed | UP   | OK    | 0   |
| ge-0/0/17 | Passed | UP   | OK    | 0   |
| ge-0/0/18 | Passed | UP   | OK    | 0   |
| ge-0/0/19 | Passed | UP   | OK    | 0   |
| ge-0/0/20 | Passed | Down | Fault | 0   |
| ge-0/0/21 | Passed | Down | Fault | 5   |
| ge-0/0/22 | Passed | UP   | OK    | 0   |
| ge-0/0/23 | Passed | UP   | OK    | 0   |



## show forwarding-options enhanced-hash-key

|                                 |                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show forwarding-options enhanced-hash-key</b>                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | <p>Command introduced in Junos OS Release 13.2X51-D15 for EX Series switches.</p> <p>Command introduced in Junos OS Release 13.2X51-D20 for QFX Series devices.</p> <p><b>Fabric Load Balancing Options</b> output fields introduced in Junos OS Release 14.1X53-D10.</p>                                                                                            |
| <b>Description</b>              | <p>Display information about which packet fields are used by the hashing algorithm to make hashing decisions.</p> <p>You can configure the fields that are inspected by the hashing algorithm to make hashing decisions for traffic entering a LAG bundle using the <b>forwarding-options enhanced-hash-key</b> statement.</p>                                       |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic (CLI Procedure) on page 100</a></li> <li>• <a href="#">Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic on page 11</a></li> <li>• <a href="#">enhanced-hash-key on page 180</a></li> </ul> |
| <b>List of Sample Output</b>    | <p><a href="#">show forwarding-options enhanced-hash-key (Layer 2 Payload Hash Mode) on page 283</a></p> <p><a href="#">show forwarding-options enhanced-hash-key (Layer 2 Header Hash Mode) on page 284</a></p> <p><a href="#">show forwarding-options enhanced-hash-key (Fabric Load Balancing Options) on page 284</a></p>                                        |
| <b>Output Fields</b>            | <p>Table 47 on page 282 lists the output fields for the <b>show forwarding-options enhanced-hash-key</b> command. Output fields are listed in the approximate order in which they first appear.</p>                                                                                                                                                                  |

**Table 47: show forwarding-options enhanced-hash-key Output Fields**

| Field Name                   | Field Description                                                                                        |
|------------------------------|----------------------------------------------------------------------------------------------------------|
| <b>Hash-Mode</b>             | Current hash mode: Layer 2 header or Layer 2 payload.                                                    |
| <b>Protocol</b>              | Indicates whether the Protocol field is or is not used by the hashing algorithm: Yes or No.              |
| <b>Destination L4 Port</b>   | Indicates whether the Destination L4 Port field is or is not used by the hashing algorithm: Yes or No.   |
| <b>Source L4 Port</b>        | Indicates whether the Source L4 Port field is or is not used by the hashing algorithm: Yes or No.        |
| <b>Destination IPv4 Addr</b> | Indicates whether the Destination IPv4 Addr field is or is not used by the hashing algorithm: Yes or No. |



Table 47: show forwarding-options enhanced-hash-key Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                           |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Source IPv4 Addr</b>        | Indicates whether the Source IPv4 Addr field is or is not used by the hashing algorithm: Yes or No.                                                                                                                         |
| <b>Vlan id</b>                 | Indicates whether the Vlan id field is or is not used by the hashing algorithm: Yes or No.                                                                                                                                  |
| <b>Next Hdr</b>                | Indicates whether the Next Hdr field is or is not used by the hashing algorithm: Yes or No.                                                                                                                                 |
| <b>Destination IPv6 Addr</b>   | Indicates whether the Destination IPv6 Addr field is or is not used by the hashing algorithm: Yes or No.                                                                                                                    |
| <b>Source IPv6 Addr</b>        | Indicates whether the Source IPv6 Addr field is or is not used by the hashing algorithm: Yes or No.                                                                                                                         |
| <b>Ether Type</b>              | Indicates whether the Ether Type field is or is not used by the hashing algorithm: Yes or No.                                                                                                                               |
| <b>Destination MAC Address</b> | Indicates whether the Destination MAC Address field is or is not used by the hashing algorithm: Yes or No.                                                                                                                  |
| <b>Source MAC Address</b>      | Indicates whether the Source MAC Address field is or is not used by the hashing algorithm: Yes or No.                                                                                                                       |
| <b>Load Balancing Method</b>   | Indicates the load balancing method for adaptive load balancing (ALB): flowlet or per-packet.<br><br>The load balancing method is flowlet by default, and can be configured using the <i>fabric-load-balance</i> statement. |
| <b>Fabric Link Scale</b>       | Indicates the fabric link scale, in mbps.                                                                                                                                                                                   |
| <b>Inactivity Interval</b>     | Indicates the fabric load balance inactivity interval, in microseconds (us).<br><br>The inactivity interval is 16 microseconds by default, and can be configured using the <i>inactivity-interval</i> statement.            |
| <b>Hash Region Size/Trunk</b>  | Indicates the hash region size, in buckets per fabric trunk.                                                                                                                                                                |

## Sample Output

### show forwarding-options enhanced-hash-key (Layer 2 Payload Hash Mode)

```
user@switch> show forwarding-options enhanced-hash-key
Slot 0
```

#### Current Hash Settings

```

Hash-Mode : layer2-payload
```



```
inet Hash settings-

inet packet fields
 Protocol : Yes
 Destination L4 Port : Yes
 Source L4 Port : Yes
 Destination IPv4 Addr : Yes
 Source IPv4 Addr : Yes
 Vlan id : No
```

```
inet6 Hash settings-

inet6 packet fields
 Next Hdr : Yes
 Destination L4 Port : Yes
 Source L4 Port : Yes
 Destination IPv6 Addr : Yes
 Source IPv6 Addr : Yes
 Vlan id : No
```

#### show forwarding-options enhanced-hash-key (Layer 2 Header Hash Mode)

```
user@switch> show forwarding-options enhanced-hash-key
Slot 0
```

##### Current Hash Settings

```

Hash-Mode : layer2-header
```

##### layer2 Hash settings-

```

layer2 packet fields
 Ether Type : Yes
 Destination MAC Address : Yes
 Source MAC Address : Yes
 VLAN ID : No
```

#### show forwarding-options enhanced-hash-key (Fabric Load Balancing Options)

```
user@switch> show forwarding-options enhanced-hash-key
<some output removed for brevity>
```

##### Fabric Load Balancing Options

```

Load Balancing Method : Flowlet
Fabric Link Scale : 40960 (mbps)
Inactivity Interval : 16 (us)
Hash Region Size/Trunk : 1024 (buckets)
```



## show interfaces diagnostics optics

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show interfaces diagnostics optics <i>interface-name</i></code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | <p>Command introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 13.2X50-D15 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | <p>Display diagnostics data and alarms for Gigabit Ethernet optical transceivers (SFP, SFP+, XFP, QSFP+, or CFP) installed in EX Series or QFX Series switches. The information provided by this command is known as digital optical monitoring (DOM) information. For a list of transceivers supported on EX Series switches and their specifications, including DOM support, see <i>Pluggable Transceivers Supported on EX Series Switches</i>.</p> <p>Thresholds that trigger a high alarm, low alarm, high warning, or low warning are set by the transponder vendors. Generally, a high alarm or low alarm indicates that the optics module is not operating properly. This information can be used to diagnose why a transceiver is not working.</p> |
| <b>Options</b>                  | <i>interface-name</i> —Name of the interface associated with the port in which the transceiver is installed: <i>ge-fpc/pic/port</i> , <i>xe-fpc/pic/port</i> , or <i>et-fpc/pic/port</i> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Monitoring Interface Status and Traffic on page 255</a></li> <li>• <i>Monitoring Interface Status and Traffic</i></li> <li>• <i>Installing a Transceiver in an EX Series Switch</i></li> <li>• <i>Installing a Transceiver in a QFX Series Device</i></li> <li>• <i>Removing a Transceiver from a Switch</i></li> <li>• <i>Removing a Transceiver from a QFX Series Device</i></li> <li>• <a href="#">Junos OS Ethernet Interfaces Configuration Guide</a></li> </ul>                                                                                                                                                                                                                                 |
| <b>List of Sample Output</b>    | <p><a href="#">show interfaces diagnostics optics ge-0/1/0 (SFP Transceiver) on page 292</a></p> <p><a href="#">show interfaces diagnostics optics xe-0/1/0 (SFP+ Transceiver) on page 293</a></p> <p><a href="#">show interfaces diagnostics optics xe-0/1/0 (XFP Transceiver) on page 294</a></p> <p><a href="#">show interfaces diagnostics optics et-3/0/0 (QSFP+ Transceiver) on page 295</a></p> <p><a href="#">show interfaces diagnostics optics et-4/1/0 (CFP Transceiver) on page 296</a></p>                                                                                                                                                                                                                                                    |
| <b>Output Fields</b>            | Table 48 on page 285 lists the output fields for the <b>show interfaces diagnostics optics</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

Table 48: show interfaces diagnostics optics Output Fields

| Field Name         | Field Description                            |
|--------------------|----------------------------------------------|
| Physical interface | Displays the name of the physical interface. |



Table 48: show interfaces diagnostics optics Output Fields (*continued*)

| Field Name                                                                                           | Field Description                                                                                                                                                  |
|------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Laser bias current</b>                                                                            | Displays the magnitude of the laser bias power setting current, in milliamperes. The laser bias provides direct modulation of laser diodes and modulates currents. |
| <b>Laser output power</b><br>(Not available for QSFP+ transceivers)                                  | Displays the laser output power, in milliwatts (mW) and decibels referred to 1.0 mW (dBm).                                                                         |
| <b>Laser temperature</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)               | Displays the laser temperature, in Celsius and Fahrenheit.                                                                                                         |
| <b>Module temperature</b>                                                                            | Displays the temperature, in Celsius and Fahrenheit.                                                                                                               |
| <b>Module voltage</b><br>(Not available for XFP transceivers)                                        | Displays the voltage, in Volts.                                                                                                                                    |
| <b>Laser rx power</b><br>(Not available for SFP, SFP+, QSFP+, and CFP transceivers)                  | Displays the laser received optical power, in milliwatts (mW) and decibels referred to 1.0 mW (dBm).                                                               |
| <b>Receiver signal average optical power</b><br>(Not available for XFP, QSFP+, and CFP transceivers) | Displays the receiver signal average optical power, in milliwatts (mW) and decibels referred to 1.0 mW (dBm).                                                      |
| <b>Laser bias current high alarm</b>                                                                 | Displays whether the laser bias power setting high alarm is <b>On</b> or <b>Off</b> .                                                                              |
| <b>Laser bias current low alarm</b>                                                                  | Displays whether the laser bias power setting low alarm is <b>On</b> or <b>Off</b> .                                                                               |
| <b>Laser bias current high warning</b>                                                               | Displays whether the laser bias power setting high warning is <b>On</b> or <b>Off</b> .                                                                            |
| <b>Laser bias current low warning</b>                                                                | Displays whether the laser bias power setting low warning is <b>On</b> or <b>Off</b> .                                                                             |
| <b>Laser output power high alarm</b><br>(Not available for QSFP+ transceivers)                       | Displays whether the laser output power high alarm is <b>On</b> or <b>Off</b> .                                                                                    |
| <b>Laser output power low alarm</b><br>(Not available for QSFP+ transceivers)                        | Displays whether the laser output power low alarm is <b>On</b> or <b>Off</b> .                                                                                     |
| <b>Laser output power high warning</b><br>(Not available for QSFP+ transceivers)                     | Displays whether the laser output power high warning is <b>On</b> or <b>Off</b> .                                                                                  |



Table 48: show interfaces diagnostics optics Output Fields (*continued*)

| Field Name                                                                                          | Field Description                                                                 |
|-----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| <b>Laser output power low warning</b><br>(Not available for QSFP+ transceivers)                     | Displays whether the laser output power low warning is <b>On</b> or <b>Off</b> .  |
| <b>Laser temperature high alarm</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)   | Displays whether the laser temperature high alarm is <b>On</b> or <b>Off</b> .    |
| <b>Laser temperature low alarm</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)    | Displays whether the laser temperature low alarm is <b>On</b> or <b>Off</b> .     |
| <b>Laser temperature high warning</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers) | Displays whether the laser temperature high warning is <b>On</b> or <b>Off</b> .  |
| <b>Laser temperature low warning</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)  | Displays whether the laser temperature low warning is <b>On</b> or <b>Off</b> .   |
| <b>Module temperature high alarm</b><br>(Not available for QSFP+ transceivers)                      | Displays whether the module temperature high alarm is <b>On</b> or <b>Off</b> .   |
| <b>Module temperature low alarm</b><br>(Not available for QSFP+ transceivers)                       | Displays whether the module temperature low alarm is <b>On</b> or <b>Off</b> .    |
| <b>Module temperature high warning</b><br>(Not available for QSFP+ transceivers)                    | Displays whether the module temperature high warning is <b>On</b> or <b>Off</b> . |
| <b>Module temperature low warning</b><br>(Not available for QSFP+ transceivers)                     | Displays whether the module temperature low warning is <b>On</b> or <b>Off</b> .  |
| <b>Module voltage high alarm</b><br>(Not available for XFP and QSFP+ transceivers)                  | Displays whether the module voltage high alarm is <b>On</b> or <b>Off</b> .       |
| <b>Module voltage low alarm</b><br>(Not available for XFP and QSFP+ transceivers)                   | Displays whether the module voltage low alarm is <b>On</b> or <b>Off</b> .        |
| <b>Module voltage high warning</b><br>(Not available for XFP and QSFP+ transceivers)                | Displays whether the module voltage high warning is <b>On</b> or <b>Off</b> .     |
| <b>Module voltage low warning</b><br>(Not available for XFP and QSFP+ transceivers)                 | Displays whether the module voltage low warning is <b>On</b> or <b>Off</b> .      |



Table 48: show interfaces diagnostics optics Output Fields (*continued*)

| Field Name                                                                                                  | Field Description                                                                                                                            |
|-------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Laser rx power high alarm</b><br>(Not available for QSFP+ and CFP transceivers)                          | Displays whether the receive laser power high alarm is <b>On</b> or <b>Off</b> .                                                             |
| <b>Laser rx power low alarm</b><br>(Not available for QSFP+ and CFP transceivers)                           | Displays whether the receive laser power low alarm is <b>On</b> or <b>Off</b> .                                                              |
| <b>Laser rx power high warning</b><br>(Not available for QSFP+ and CFP transceivers)                        | Displays whether the receive laser power high warning is <b>On</b> or <b>Off</b> .                                                           |
| <b>Laser rx power low warning</b><br>(Not available for QSFP+ and CFP transceivers)                         | Displays whether the receive laser power low warning is <b>On</b> or <b>Off</b> .                                                            |
| <b>Laser bias current high alarm threshold</b><br>(Not available for QSFP+ transceivers)                    | Displays the vendor-specified threshold for the laser bias current high alarm.                                                               |
| <b>Module not ready alarm</b><br>(Not available for SFP, SFP+, and QSFP+ transceivers)                      | Displays whether the module not ready alarm is <b>On</b> or <b>Off</b> . When the output is <b>On</b> , the module has an operational fault. |
| <b>Module low power alarm</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)                 | Displays whether the module low power alarm is <b>On</b> or <b>Off</b> .                                                                     |
| <b>Module initialization incomplete alarm</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers) | Displays whether the module initialization incomplete alarm is <b>On</b> or <b>Off</b> .                                                     |
| <b>Module fault alarm</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)                     | Displays whether the module fault alarm is <b>On</b> or <b>Off</b> .                                                                         |
| <b>PLD Flash initialization fault alarm</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)   | Displays whether the PLD Flash initialization fault alarm is <b>On</b> or <b>Off</b> .                                                       |
| <b>Power supply fault alarm</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)               | Displays whether the power supply fault alarm is <b>On</b> or <b>Off</b> .                                                                   |
| <b>Checksum fault alarm</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)                   | Displays whether the checksum fault alarm is <b>On</b> or <b>Off</b> .                                                                       |
| <b>Tx laser disabled alarm</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)                | Displays whether the Tx laser disabled alarm is <b>On</b> or <b>Off</b> .                                                                    |



Table 48: show interfaces diagnostics optics Output Fields (*continued*)

| Field Name                                                                                   | Field Description                                                                                                                                                                                |
|----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Module power down alarm</b><br>(Not available for SFP, SFP+, QSFP+, and CFP transceivers) | Displays whether the module power down alarm is <b>On</b> or <b>Off</b> . When the output is <b>On</b> , module is in a limited power mode, low for normal operation.                            |
| <b>Tx data not ready alarm</b><br>(Not available for SFP, SFP+, QSFP+, and CFP transceivers) | Any condition leading to invalid data on the transmit path. Displays whether the Tx data not ready alarm is <b>On</b> or <b>Off</b> .                                                            |
| <b>Tx not ready alarm</b><br>(Not available for SFP, SFP+, QSFP+, and CFP transceivers)      | Any condition leading to invalid data on the transmit path. Displays whether the Tx not ready alarm is <b>On</b> or <b>Off</b> .                                                                 |
| <b>Tx laser fault alarm</b><br>(Not available for SFP, SFP+, QSFP+, and CFP transceivers)    | Laser fault condition. Displays whether the Tx laser fault alarm is <b>On</b> or <b>Off</b> .                                                                                                    |
| <b>Tx CDR loss of lock alarm</b><br>(Not available for SFP, SFP+, and QSFP+ transceivers)    | Transmit clock and data recovery (CDR) loss of lock. Loss of lock on the transmit side of the CDR. Displays whether the Tx CDR loss of lock alarm is <b>On</b> or <b>Off</b> .                   |
| <b>Rx not ready alarm</b><br>(Not available for SFP, SFP+, QSFP+, and CFP transceivers)      | Any condition leading to invalid data on the receive path. Displays whether the Rx not ready alarm is <b>On</b> or <b>Off</b> .                                                                  |
| <b>Rx loss of signal alarm</b><br>(Not available for SFP and SFP+ transceivers)              | Receive loss of signal alarm. When the output is <b>On</b> , indicates insufficient optical input power to the module. Displays whether the Rx loss of signal alarm is <b>On</b> or <b>Off</b> . |
| <b>Rx CDR loss of lock alarm</b><br>(Not available for SFP, SFP+, and QSFP+ transceivers)    | Receive CDR loss of lock. Loss of lock on the receive side of the CDR. Displays whether the Rx CDR loss of lock alarm is <b>On</b> or <b>Off</b> .                                               |
| <b>Laser bias current low alarm threshold</b><br>(Not available for QSFP+ transceivers)      | Displays the vendor-specified threshold for the laser bias current low alarm.                                                                                                                    |
| <b>Laser bias current high warning threshold</b><br>(Not available for QSFP+ transceivers)   | Displays the vendor-specified threshold for the laser bias current high warning.                                                                                                                 |
| <b>Laser bias current low warning threshold</b><br>(Not available for QSFP+ transceivers)    | Displays the vendor-specified threshold for the laser bias current low warning.                                                                                                                  |
| <b>Laser output power high alarm threshold</b><br>(Not available for QSFP+ transceivers)     | Displays the vendor-specified threshold for the laser output power high alarm.                                                                                                                   |
| <b>Laser output power low alarm threshold</b><br>(Not available for QSFP+ transceivers)      | Displays the vendor-specified threshold for the laser output power low alarm.                                                                                                                    |



Table 48: show interfaces diagnostics optics Output Fields (*continued*)

| Field Name                                                                                     | Field Description                                                                |
|------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| <b>Laser output power high warning threshold</b><br>(Not available for QSFP+ transceivers)     | Displays the vendor-specified threshold for the laser output power high warning. |
| <b>Laser output power low warning threshold</b><br>(Not available for QSFP+ transceivers)      | Displays the vendor-specified threshold for the laser output power low warning.  |
| <b>Module temperature high alarm threshold</b><br>(Not available for QSFP+ transceivers)       | Displays the vendor-specified threshold for the module temperature high alarm.   |
| <b>Module temperature low alarm threshold</b><br>(Not available for QSFP+ transceivers)        | Displays the vendor-specified threshold for the module temperature low alarm.    |
| <b>Module temperature high warning threshold</b><br>(Not available for QSFP+ transceivers)     | Displays the vendor-specified threshold for the module temperature high warning. |
| <b>Module temperature low warning threshold</b><br>(Not available for QSFP+ transceivers)      | Displays the vendor-specified threshold for the module temperature low warning.  |
| <b>Module voltage high alarm threshold</b><br>(Not available for XFP and QSFP+ transceivers)   | Displays the vendor-specified threshold for the module voltage high alarm.       |
| <b>Module voltage low alarm threshold</b><br>(Not available for XFP and QSFP+ transceivers)    | Displays the vendor-specified threshold for the module voltage low alarm.        |
| <b>Module voltage high warning threshold</b><br>(Not available for XFP and QSFP+ transceivers) | Displays the vendor-specified threshold for the module voltage high warning.     |
| <b>Module voltage low warning threshold</b><br>(Not available for XFP and QSFP+ transceivers)  | Displays the vendor-specified threshold for the module voltage low warning.      |
| <b>Laser rx power high alarm threshold</b><br>(Not available for QSFP+ transceivers)           | Displays the vendor-specified threshold for the laser rx power high alarm.       |
| <b>Laser rx power low alarm threshold</b><br>(Not available for QSFP+ transceivers)            | Displays the vendor-specified threshold for the laser rx power low alarm.        |
| <b>Laser rx power high warning threshold</b><br>(Not available for QSFP+ transceivers)         | Displays the vendor-specified threshold for the laser rx power high warning.     |



Table 48: show interfaces diagnostics optics Output Fields (*continued*)

| Field Name                                                                                                    | Field Description                                                                                          |
|---------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| <b>Laser rx power low warning threshold</b><br>(Not available for QSFP+ transceivers)                         | Displays the vendor-specified threshold for the laser rx power low warning.                                |
| <b>Laser temperature high alarm threshold</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)   | Displays the vendor-specified threshold for the laser temperature high alarm, in Celsius and Fahrenheit.   |
| <b>Laser temperature low alarm threshold</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)    | Displays the vendor-specified threshold for the laser temperature low alarm, in Celsius and Fahrenheit.    |
| <b>Laser temperature high warning threshold</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers) | Displays the vendor-specified threshold for the laser temperature high warning, in Celsius and Fahrenheit. |
| <b>Laser temperature low warning threshold</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)  | Displays the vendor-specified threshold for the laser temperature low warning, in Celsius and Fahrenheit.  |
| <b>SOA bias current high alarm threshold</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)    | Displays the vendor-specified threshold for SOA bias current high alarm.                                   |
| <b>SOA bias current low alarm threshold</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)     | Displays the vendor-specified threshold for SOA bias current low alarm.                                    |
| <b>SOA bias current high warning threshold</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)  | Displays the vendor-specified threshold for SOA bias current high warning.                                 |
| <b>SOA bias current low warning threshold</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)   | Displays the vendor-specified threshold for SOA bias current low warning.                                  |
| <b>Laser receiver power high alarm</b><br>(Not available for SFP, SFP+, and XFP transceivers)                 | Displays whether the laser receiver power high alarm is <b>On</b> or <b>Off</b> .                          |
| <b>Laser receiver power low alarm</b><br>(Not available for SFP, SFP+, and XFP transceivers)                  | Displays whether the laser receiver power low alarm is <b>On</b> or <b>Off</b> .                           |
| <b>Laser receiver power high warning</b><br>(Not available for SFP, SFP+, and XFP transceivers)               | Displays whether the laser receiver power high warning is <b>On</b> or <b>Off</b> .                        |
| <b>Laser receiver power low warning</b><br>(Not available for SFP, SFP+, and XFP transceivers)                | Displays whether the laser receiver power low warning is <b>On</b> or <b>Off</b> .                         |



Table 48: show interfaces diagnostics optics Output Fields (*continued*)

| Field Name                                                                                          | Field Description                                                                            |
|-----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| <b>Laser receiver power</b><br>(Not available for SFP, SFP+, and XFP transceivers)                  | Displays the laser receiver power, in milliwatts (mW) and decibels referred to 1.0 mW (dBm). |
| <b>Tx loss of signal functionality alarm</b><br>(Not available for SFP, SFP+, and XFP transceivers) | Displays whether the Tx loss of signal functionality alarm is <b>On</b> or <b>Off</b> .      |
| <b>APD supply fault alarm</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)         | Displays whether the APD supply fault alarm is <b>On</b> or <b>Off</b> .                     |
| <b>TEC fault alarm</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)                | Displays whether the TEC fault alarm is <b>On</b> or <b>Off</b> .                            |
| <b>Wavelength unlocked alarm</b><br>(Not available for SFP, SFP+, XFP, and QSFP+ transceivers)      | Displays whether the Wavelength unlocked alarm is <b>On</b> or <b>Off</b> .                  |

## Sample Output

### show interfaces diagnostics optics ge-0/1/0 (SFP Transceiver)

```

user@switch> show interfaces diagnostics optics ge-0/1/0
Physical interface: ge-0/1/0
 Laser bias current : 5.444 mA
 Laser output power : 0.3130 mW / -5.04 dBm
 Module temperature : 36 degrees C / 97 degrees F
 Module voltage : 3.2120 V
 Receiver signal average optical power : 0.3840 mW / -4.16 dBm
 Laser bias current high alarm : Off
 Laser bias current low alarm : Off
 Laser bias current high warning : Off
 Laser bias current low warning : Off
 Laser output power high alarm : Off
 Laser output power low alarm : Off
 Laser output power high warning : Off
 Laser output power low warning : Off
 Module temperature high alarm : Off
 Module temperature low alarm : Off
 Module temperature high warning : Off
 Module temperature low warning : Off
 Module voltage high alarm : Off
 Module voltage low alarm : Off
 Module voltage high warning : Off
 Module voltage low warning : Off
 Laser rx power high alarm : Off
 Laser rx power low alarm : Off
 Laser rx power high warning : Off
 Laser rx power low warning : Off
 Laser bias current high alarm threshold : 15.000 mA
 Laser bias current low alarm threshold : 1.000 mA
 Laser bias current high warning threshold : 12.000 mA

```



```

Laser bias current low warning threshold : 2.000 mA
Laser output power high alarm threshold : 0.6300 mW / -2.01 dBm
Laser output power low alarm threshold : 0.0660 mW / -11.80 dBm
Laser output power high warning threshold : 0.6300 mW / -2.01 dBm
Laser output power low warning threshold : 0.0780 mW / -11.08 dBm
Module temperature high alarm threshold : 109 degrees C / 228 degrees F
Module temperature low alarm threshold : -29 degrees C / -20 degrees F
Module temperature high warning threshold : 103 degrees C / 217 degrees F
Module temperature low warning threshold : -13 degrees C / 9 degrees F
Module voltage high alarm threshold : 3.900 V
Module voltage low alarm threshold : 2.700 V
Module voltage high warning threshold : 3.700 V
Module voltage low warning threshold : 2.900 V
Laser rx power high alarm threshold : 1.2589 mW / 1.00 dBm
Laser rx power low alarm threshold : 0.0100 mW / -20.00 dBm
Laser rx power high warning threshold : 0.7939 mW / -1.00 dBm
Laser rx power low warning threshold : 0.0157 mW / -18.04 dBm

```

## Sample Output

### show interfaces diagnostics optics xe-0/1/0 (SFP+ Transceiver)

```

user@switch> show interfaces diagnostics optics xe-0/1/0
Physical interface: xe-0/1/0
Laser bias current : 4.968 mA
Laser output power : 0.4940 mW / -3.06 dBm
Module temperature : 27 degrees C / 81 degrees F
Module voltage : 3.2310 V
Receiver signal average optical power : 0.0000
Laser bias current high alarm : Off
Laser bias current low alarm : Off
Laser bias current high warning : Off
Laser bias current low warning : Off
Laser output power high alarm : Off
Laser output power low alarm : Off
Laser output power high warning : Off
Laser output power low warning : Off
Module temperature high alarm : Off
Module temperature low alarm : Off
Module temperature high warning : Off
Module temperature low warning : Off
Module voltage high alarm : Off
Module voltage low alarm : Off
Module voltage high warning : Off
Module voltage low warning : Off
Laser rx power high alarm : Off
Laser rx power low alarm : On
Laser rx power high warning : Off
Laser rx power low warning : On
Laser bias current high alarm threshold : 10.500 mA
Laser bias current low alarm threshold : 2.000 mA
Laser bias current high warning threshold : 9.000 mA
Laser bias current low warning threshold : 2.500 mA
Laser output power high alarm threshold : 1.4120 mW / 1.50 dBm
Laser output power low alarm threshold : 0.0740 mW / -11.31 dBm
Laser output power high warning threshold : 0.7070 mW / -1.51 dBm
Laser output power low warning threshold : 0.1860 mW / -7.30 dBm
Module temperature high alarm threshold : 75 degrees C / 167 degrees F
Module temperature low alarm threshold : -5 degrees C / 23 degrees F
Module temperature high warning threshold : 70 degrees C / 158 degrees F
Module temperature low warning threshold : 0 degrees C / 32 degrees F

```



```

Module voltage high alarm threshold : 3.630 V
Module voltage low alarm threshold : 2.970 V
Module voltage high warning threshold : 3.465 V
Module voltage low warning threshold : 3.135 V
Laser rx power high alarm threshold : 1.5849 mW / 2.00 dBm
Laser rx power low alarm threshold : 0.0407 mW / -13.90 dBm
Laser rx power high warning threshold : 0.7943 mW / -1.00 dBm
Laser rx power low warning threshold : 0.1023 mW / -9.90 dBm

```

## Sample Output

### show interfaces diagnostics optics xe-0/1/0 (XFP Transceiver)

```
user@switch> show interfaces diagnostics optics xe-0/1/0
```

```
Physical interface: xe-0/1/0
```

```

Laser bias current : 8.029 mA
Laser output power : 0.6430 mW / -1.92 dBm
Module temperature : 4 degrees C / 39 degrees F
Laser rx power : 0.0012 mW / -29.21 dBm
Laser bias current high alarm : Off
Laser bias current low alarm : Off
Laser bias current high warning : Off
Laser bias current low warning : Off
Laser output power high alarm : Off
Laser output power low alarm : Off
Laser output power high warning : Off
Laser output power low warning : Off
Module temperature high alarm : Off
Module temperature low alarm : Off
Module temperature high warning : Off
Module temperature low warning : Off
Laser rx power high alarm : Off
Laser rx power low alarm : On
Laser rx power high warning : Off
Laser rx power low warning : On
Module not ready alarm : On
Module power down alarm : Off
Tx data not ready alarm : Off
Tx not ready alarm : Off
Tx laser fault alarm : Off
Tx CDR loss of lock alarm : Off
Rx not ready alarm : On
Rx loss of signal alarm : On
Rx CDR loss of lock alarm : On
Laser bias current high alarm threshold : 13.000 mA
Laser bias current low alarm threshold : 2.000 mA
Laser bias current high warning threshold : 12.000 mA
Laser bias current low warning threshold : 3.000 mA
Laser output power high alarm threshold : 0.8310 mW / -0.80 dBm
Laser output power low alarm threshold : 0.1650 mW / -7.83 dBm
Laser output power high warning threshold : 0.7410 mW / -1.30 dBm
Laser output power low warning threshold : 0.1860 mW / -7.30 dBm
Module temperature high alarm threshold : 90 degrees C / 194 degrees F
Module temperature low alarm threshold : 0 degrees C / 32 degrees F
Module temperature high warning threshold : 85 degrees C / 185 degrees F
Module temperature low warning threshold : 0 degrees C / 32 degrees F
Laser rx power high alarm threshold : 0.8912 mW / -0.50 dBm
Laser rx power low alarm threshold : 0.0912 mW / -10.40 dBm
Laser rx power high warning threshold : 0.7943 mW / -1.00 dBm
Laser rx power low warning threshold : 0.1023 mW / -9.90 dBm

```



## Sample Output

### show interfaces diagnostics optics et-3/0/0 (QSFP+ Transceiver)

```

user@switch> show interfaces diagnostics optics et-3/0/0
Physical interface: et-3/0/0
 Module temperature : 33 degrees C / 92 degrees F
 Module voltage : 3.3060 V
Lane 0
 Laser bias current : 7.182 mA
 Laser receiver power : 0.743 mW / -1.29 dBm
 Laser bias current high alarm : Off
 Laser bias current low alarm : Off
 Laser bias current high warning : Off
 Laser bias current low warning : Off
 Laser receiver power high alarm : Off
 Laser receiver power low alarm : Off
 Laser receiver power high warning : Off
 Laser receiver power low warning : Off
 Tx loss of signal functionality alarm : Off
 Rx loss of signal alarm : Off
Lane 1
 Laser bias current : 7.326 mA
 Laser receiver power : 0.752 mW / -1.24 dBm
 Laser bias current high alarm : Off
 Laser bias current low alarm : Off
 Laser bias current high warning : Off
 Laser bias current low warning : Off
 Laser receiver power high alarm : Off
 Laser receiver power low alarm : Off
 Laser receiver power high warning : Off
 Laser receiver power low warning : Off
 Tx loss of signal functionality alarm : Off
 Rx loss of signal alarm : Off
Lane 2
 Laser bias current : 7.447 mA
 Laser receiver power : 0.790 mW / -1.03 dBm
 Laser bias current high alarm : Off
 Laser bias current low alarm : Off
 Laser bias current high warning : Off
 Laser bias current low warning : Off
 Laser receiver power high alarm : Off
 Laser receiver power low alarm : Off
 Laser receiver power high warning : Off
 Laser receiver power low warning : Off
 Tx loss of signal functionality alarm : Off
 Rx loss of signal alarm : Off
Lane 3
 Laser bias current : 7.734 mA
 Laser receiver power : 0.768 mW / -1.15 dBm
 Laser bias current high alarm : Off
 Laser bias current low alarm : Off
 Laser bias current high warning : Off
 Laser bias current low warning : Off
 Laser receiver power high alarm : Off
 Laser receiver power low alarm : Off
 Laser receiver power high warning : Off
 Laser receiver power low warning : Off
 Tx loss of signal functionality alarm : Off
 Rx loss of signal alarm : Off

```



## Sample Output

### show interfaces diagnostics optics et-4/1/0 (CFP Transceiver)

```

user@switch> show interfaces diagnostics optics et-4/1/0
Physical interface: et-4/1/0
 Module temperature : 38 degrees C / 101 degrees F
 Module voltage : 3.2500 V
 Module temperature high alarm : Off
 Module temperature low alarm : Off
 Module temperature high warning : Off
 Module temperature low warning : Off
 Module voltage high alarm : Off
 Module voltage low alarm : Off
 Module voltage high warning : Off
 Module voltage low warning : Off
 Module not ready alarm : Off
 Module low power alarm : Off
 Module initialization incomplete alarm : Off
 Module fault alarm : Off
 PLD Flash initialization fault alarm : Off
 Power supply fault alarm : Off
 Checksum fault alarm : Off
 Tx laser disabled alarm : Off
 Tx loss of signal functionality alarm : Off
 Tx CDR loss of lock alarm : Off
 Rx loss of signal alarm : Off
 Rx CDR loss of lock alarm : Off
 Module temperature high alarm threshold : 75 degrees C / 167 degrees F
 Module temperature low alarm threshold : -5 degrees C / 23 degrees F
 Module temperature high warning threshold : 70 degrees C / 158 degrees F
 Module temperature low warning threshold : 0 degrees C / 32 degrees F
 Module voltage high alarm threshold : 3.5000 V
 Module voltage low alarm threshold : 3.0990 V
 Module voltage high warning threshold : 3.4000 V
 Module voltage low warning threshold : 3.2000 V
 Laser bias current high alarm threshold : 250.000 mA
 Laser bias current low alarm threshold : 37.500 mA
 Laser bias current high warning threshold : 225.000 mA
 Laser bias current low warning threshold : 50.000 mA
 Laser output power high alarm threshold : 3.9800 mW / 6.00 dBm
 Laser output power low alarm threshold : 0.4670 mW / -3.31 dBm
 Laser output power high warning threshold : 3.5480 mW / 5.50 dBm
 Laser output power low warning threshold : 0.5240 mW / -2.81 dBm
 Laser rx power high alarm threshold : 3.5481 mW / 5.50 dBm
 Laser rx power low alarm threshold : 0.0616 mW / -12.10 dBm
 Laser rx power high warning threshold : 3.1622 mW / 5.00 dBm
 Laser rx power low warning threshold : 0.0691 mW / -11.61 dBm
 Laser temperature high alarm threshold : 67 degrees C / 153 degrees F
 Laser temperature low alarm threshold : 35 degrees C / 95 degrees F
 Laser temperature high warning threshold : 62 degrees C / 144 degrees F
 Laser temperature low warning threshold : 40 degrees C / 104 degrees F
 SOA bias current high alarm threshold : 0.000 mA
 SOA bias current low alarm threshold : 0.000 mA
 SOA bias current high warning threshold : 0.000 mA
 SOA bias current low warning threshold : 0.000 mA
Lane 0
 Laser bias current : 131.684 mA
 Laser output power : 1.002 mW / 0.01 dBm
 Laser temperature : 54 degrees C / 128 degrees F
 Laser receiver power : 0.497 mW / -3.03 dBm

```



```

Laser bias current high alarm : Off
Laser bias current low alarm : Off
Laser bias current high warning : Off
Laser bias current low warning : Off
Laser output power high alarm : Off
Laser output power low alarm : Off
Laser output power high warning : Off
Laser output power low warning : Off
Laser temperature high alarm : Off
Laser temperature low alarm : Off
Laser temperature high warning : Off
Laser temperature low warning : Off
Laser receiver power high alarm : Off
Laser receiver power low alarm : Off
Laser receiver power high warning : Off
Laser receiver power low warning : Off
Tx loss of signal functionality alarm : Off
Rx CDR loss of lock alarm : Off
Rx loss of signal alarm : Off
Rx CDR loss of lock alarm : Off
APD supply fault alarm : Off
TEC fault alarm : Off
Wavelength unlocked alarm : Off

Lane 1
Laser bias current : 122.345 mA
Laser output power : 1.002 mW / 0.01 dBm
Laser temperature : 51 degrees C / 124 degrees F
Laser receiver power : 0.611 mW / -2.14 dBm
Laser bias current high alarm : Off
Laser bias current low alarm : Off
Laser bias current high warning : Off
Laser bias current low warning : Off
Laser output power high alarm : Off
Laser output power low alarm : Off
Laser output power high warning : Off
Laser output power low warning : Off
Laser temperature high alarm : Off
Laser temperature low alarm : Off
Laser temperature high warning : Off
Laser temperature low warning : Off
Laser receiver power high alarm : Off
Laser receiver power low alarm : Off
Laser receiver power high warning : Off
Laser receiver power low warning : Off
Tx loss of signal functionality alarm : Off
Tx CDR loss of lock alarm : Off
Rx loss of signal alarm : Off
Rx CDR loss of lock alarm : Off
APD supply fault alarm : Off
TEC fault alarm : Off
Wavelength unlocked alarm : Off

Lane 2
Laser bias current : 112.819 mA
Laser output power : 1.000 mW / 0.00 dBm
Laser temperature : 50 degrees C / 122 degrees F
Laser receiver power : 0.540 mW / -2.67 dBm
Laser bias current high alarm : Off
Laser bias current low alarm : Off
Laser bias current high warning : Off
Laser bias current low warning : Off
Laser output power high alarm : Off

```



|                                       |                                |
|---------------------------------------|--------------------------------|
| Laser output power low alarm          | : Off                          |
| Laser output power high warning       | : Off                          |
| Laser output power low warning        | : Off                          |
| Laser temperature high alarm          | : Off                          |
| Laser temperature low alarm           | : Off                          |
| Laser temperature high warning        | : Off                          |
| Laser temperature low warning         | : Off                          |
| Laser receiver power high alarm       | : Off                          |
| Laser receiver power low alarm        | : Off                          |
| Laser receiver power high warning     | : Off                          |
| Laser receiver power low warning      | : Off                          |
| Tx loss of signal functionality alarm | : Off                          |
| Tx CDR loss of lock alarm             | : Off                          |
| Rx loss of signal alarm               | : Off                          |
| Rx CDR loss of lock alarm             | : Off                          |
| APD supply fault alarm                | : Off                          |
| TEC fault alarm                       | : Off                          |
| Wavelength unlocked alarm             | : Off                          |
| Lane 3                                |                                |
| Laser bias current                    | : 100.735 mA                   |
| Laser output power                    | : 1.002 mW / 0.01 dBm          |
| Laser temperature                     | : 50 degrees C / 122 degrees F |
| Laser receiver power                  | : 0.637 mW / -1.96 dBm         |
| Laser bias current high alarm         | : Off                          |
| Laser bias current low alarm          | : Off                          |
| Laser bias current high warning       | : Off                          |
| Laser bias current low warning        | : Off                          |
| Laser output power high alarm         | : Off                          |
| Laser output power low alarm          | : Off                          |
| Laser output power high warning       | : Off                          |
| Laser output power low warning        | : Off                          |
| Laser temperature high alarm          | : Off                          |
| Laser temperature low alarm           | : Off                          |
| Laser temperature high warning        | : Off                          |
| Laser temperature low warning         | : Off                          |
| Laser receiver power high alarm       | : Off                          |
| Laser receiver power low alarm        | : Off                          |
| Laser receiver power high warning     | : Off                          |
| Laser receiver power low warning      | : Off                          |
| Tx loss of signal functionality alarm | : Off                          |
| Tx CDR loss of lock alarm             | : Off                          |
| Rx loss of signal alarm               | : Off                          |
| Rx CDR loss of lock alarm             | : Off                          |
| APD supply fault alarm                | : Off                          |
| TEC fault alarm                       | : Off                          |
| Wavelength unlocked alarm             | : Off                          |



## show interfaces ge-

|                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                                     | <code>show interfaces ge-<i>fpc/pic/port</i></code><br><brief   detail   extensive   terse><br><media><br><statistics>                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>                                                                                                                                                                                                        | Command introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>                                                                                                                                                                                                                | Display status information about the specified Gigabit Ethernet interface.                                                                                                                                                                                                                                                                                                                                                                                    |
| <div>  <b>NOTE:</b> You must have a transceiver plugged into an SFP or SFP+ port before information about the interface can be displayed. </div> |                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                                                                                                                                                                                                                    | <p><code>ge-<i>fpc/pic/port</i></code>—Display standard information about the specified Gigabit Ethernet interface.</p> <p><code>brief   detail   extensive   terse</code>—(Optional) Display the specified level of output.</p> <p><code>media</code>—(Optional) Display media-specific information about network interfaces.</p> <p><code>statistics</code>—(Optional) Display static interface statistics.</p>                                             |
| <b>Required Privilege Level</b>                                                                                                                                                                                                   | view                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>                                                                                                                                                                                                      | <ul style="list-style-type: none"> <li>• <a href="#">Monitoring Interface Status and Traffic on page 255</a></li> <li>• <a href="#">Troubleshooting Network Interfaces on EX3200 Switches</a></li> <li>• <a href="#">Troubleshooting Network Interfaces on EX4200 Switches</a></li> <li>• <a href="#">Troubleshooting an Aggregated Ethernet Interface on page 355</a></li> <li>• <a href="#">Junos OS Ethernet Interfaces Configuration Guide</a></li> </ul> |
| <b>List of Sample Output</b>                                                                                                                                                                                                      | <p><a href="#">show interfaces ge-0/0/0 on page 306</a></p> <p><a href="#">show interfaces ge-0/0/0 brief on page 306</a></p> <p><a href="#">show interfaces ge-0/0/0 brief (with EEE Enabled on the EEE-capable Base-T copper Ethernet interfaces) on page 307</a></p> <p><a href="#">show interfaces ge-0/0/0 detail on page 307</a></p> <p><a href="#">show interfaces ge-0/0/4 extensive on page 308</a></p>                                              |
| <b>Output Fields</b>                                                                                                                                                                                                              | Table 49 on page 300 lists the output fields for the <b>show interfaces ge-</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                              |



Table 49: show interfaces ge- Output Fields

| Field Name                                    | Field Description                                                                                                                                                                                                     | Level of Output               |
|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| <b>Physical Interface</b>                     |                                                                                                                                                                                                                       |                               |
| <b>Physical interface</b>                     | Name of the physical interface.                                                                                                                                                                                       | All levels                    |
| <b>Enabled</b>                                | State of the interface: <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                           | All levels                    |
| <b>Interface index</b>                        | Index number of the physical interface, which reflects its initialization sequence.                                                                                                                                   | <b>detail extensive none</b>  |
| <b>SNMP ifIndex</b>                           | SNMP index number for the physical interface.                                                                                                                                                                         | <b>detail extensive none</b>  |
| <b>Generation</b>                             | Unique number for use by Juniper Networks technical support only.                                                                                                                                                     | <b>detail extensive</b>       |
| <b>Description</b>                            | Optional user-specified description.                                                                                                                                                                                  | <b>brief detail extensive</b> |
| <b>Link-level type</b>                        | Encapsulation being used on the physical interface.                                                                                                                                                                   | All levels                    |
| <b>MTU</b>                                    | Maximum transmission unit size on the physical interface. Default is 1514.                                                                                                                                            | All levels                    |
| <b>Speed</b>                                  | Speed of the interface: Auto if autonegotiation of speed is enabled; speed in megabits per second if the interface speed is explicitly configured.                                                                    | All levels                    |
| <b>Duplex</b>                                 | Link mode of the interface: Auto if autonegotiation of link mode is enabled; Full-Duplex or Half-Duplex if the link mode is explicitly configured.                                                                    | All levels                    |
| <b>Loopback</b>                               | Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .                                                                                        | All levels                    |
| <b>Source filtering</b>                       | Source filtering status: <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                          | All levels                    |
| <b>Flow control</b>                           | Flow control status: <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                              | All levels                    |
| <b>Auto-negotiation</b>                       | Autonegotiation status: <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                           | All levels                    |
| <b>Remote-fault</b>                           | Remote fault status: <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul> | All levels                    |
| <b>IEEE 802.3az Energy Efficient Ethernet</b> | IEEE 802.3az Energy Efficient Ethernet status: <b>Enabled</b> or <b>Disabled</b> (appears only for EEE-capable Base-T copper Ethernet interfaces).                                                                    | All levels                    |
| <b>Device flags</b>                           | Information about the physical device.                                                                                                                                                                                | All levels                    |
| <b>Interface flags</b>                        | Information about the interface.                                                                                                                                                                                      | All levels                    |
| <b>Link flags</b>                             | Information about the link.                                                                                                                                                                                           | All levels                    |
| <b>CoS queues</b>                             | Number of CoS queues configured.                                                                                                                                                                                      | <b>detail extensive none</b>  |



Table 49: show interfaces ge- Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Level of Output              |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| <b>Hold-times</b>              | Current interface hold-time up and hold-time down, in milliseconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>detail extensive</b>      |
| <b>Current address</b>         | Configured MAC address.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>detail extensive none</b> |
| <b>Hardware address</b>        | MAC address of the hardware.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | <b>detail extensive none</b> |
| <b>Last flapped</b>            | Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: <i>year-month-day hour:minute:second timezone (hour:minute:second ago)</i></b> . For example, <b>Last flapped: 2008-01-16 10:52:40 UTC (3d 22:58 ago)</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | <b>detail extensive none</b> |
| <b>Statistics last cleared</b> | Time when the statistics for the interface were last set to zero.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>detail extensive</b>      |
| <b>Traffic statistics</b>      | <p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> <p><b>NOTE:</b> The bandwidth bps counter is not enabled on the switch.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>detail extensive</b>      |
| <b>Input errors</b>            | <p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 sanity checks of the headers. For example, a frame with less than 20 bytes of available IP header is discarded.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul> | <b>extensive</b>             |



Table 49: show interfaces ge- Output Fields (*continued*)

| Field Name                              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Level of Output              |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| <b>Output errors</b>                    | <p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Collisions</b>—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the switch interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul> | <b>extensive</b>             |
| <b>Egress queues</b>                    | Total number of egress queues supported on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>detail extensive</b>      |
| <b>Queue counters (Egress )</b>         | <p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>detail extensive</b>      |
| <b>Active alarms and Active defects</b> | <p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain time, it is promoted to an alarm. Based on the switch configuration, a defect can activate the red or yellow alarm bell on the switch or turn on the red or yellow alarm LED on the front of the switch. These fields can contain the value <b>None</b> or <b>Link</b>.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>detail extensive none</b> |



Table 49: show interfaces ge- Output Fields (*continued*)

| Field Name        | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Level of Output |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| MAC statistics    | <p>Receive and Transmit statistics reported by the PIC's MAC subsystem.</p> <ul style="list-style-type: none"> <li>• <b>Total octets</b> and <b>total packets</b>—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type.</li> <li>• <b>Unicast packets</b>, <b>Broadcast packets</b>, and <b>Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—Number of frames that exceed 1518 octets.</li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul> | extensive       |
| Filter Statistics | Receive and Transmit statistics reported by the PIC's MAC address filter subsystem.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | extensive       |



Table 49: show interfaces ge- Output Fields (*continued*)

| Field Name                             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Level of Output |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Autonegotiation information            | <p>Information about link autonegotiation:</p> <ul style="list-style-type: none"> <li>• <b>Negotiation status:</b> <ul style="list-style-type: none"> <li>• <b>Complete</b>—The autonegotiation process between the local and remote Ethernet interfaces was successful.</li> <li>• <b>Incomplete</b>—Remote Ethernet interface has the speed or link mode configured or does not perform autonegotiation.</li> <li>• <b>No autonegotiation</b>—Local Ethernet interface has autonegotiation disabled and the link mode and speed are manually configured.</li> </ul> </li> <li>• <b>Link partner</b>—Information from the link partner: <ul style="list-style-type: none"> <li>• <b>Link mode</b>—Depending on the capability of the attached Ethernet device, either <b>Full-duplex</b> or <b>Half-duplex</b>. If the link mode of the remote device cannot be determined, the value is <b>Unknown</b>.</li> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, the types are: <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit); <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit); and <b>Symmetric/Asymmetric</b> (link partner supports <b>PAUSE</b> on both receive and transmit or <b>PAUSE</b> only on receive).</li> <li>• <b>Remote fault</b>—Remote fault information from the link partner—<b>Failure</b> indicates a receive link error. <b>OK</b> indicates that the link partner is receiving. <b>Negotiation error</b> indicates a negotiation error. <b>Offline</b> indicates that the link partner is going offline.</li> <li>• <b>Link partner speed</b>—Speed of the link partner.</li> </ul> </li> <li>• <b>Local resolution</b>—Resolution of the autonegotiation process on the local interface: <ul style="list-style-type: none"> <li>• <b>Flow control</b>—Type of flow control that is used by the local interface. For Gigabit Ethernet interfaces, the types are: <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit); <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit); and <b>Symmetric/Asymmetric</b> (link partner supports <b>PAUSE</b> on both receive and transmit or <b>PAUSE</b> only on receive).</li> <li>• <b>Link mode</b>—Link mode of local interface: either <b>Full-duplex</b> or <b>Half-duplex</b>. Displayed when <b>Negotiation status</b> is <b>Incomplete</b>.</li> <li>• <b>Local link speed</b>—Speed of the local interface. Displayed when <b>Negotiation status</b> is <b>Incomplete</b>.</li> <li>• <b>Remote fault</b>—Remote fault information. <b>Link OK</b> (no error detected on receive), <b>Offline</b> (local interface is offline), and <b>Link Failure</b> (link error detected on receive).</li> </ul> </li> </ul> | extensive       |
| Packet Forwarding Engine configuration | <p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number: <ul style="list-style-type: none"> <li>• On standalone switches with built-in interfaces, the slot number refers to the switch itself and is always 0.</li> <li>• On Virtual Chassis composed of switches with built-in interfaces, the slot number refers to the member ID of the switch.</li> <li>• On switches with line cards or on Virtual Chassis composed of switches with line cards, the slot number refers to the line card slot number on the switch or Virtual Chassis.</li> </ul> </li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | extensive       |

---

Logical Interface



Table 49: show interfaces ge- Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                            | Level of Output              |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| <b>Logical interface</b>       | Name of the logical interface.                                                                                                                                                                                                                                                                                                                                                                                               | All levels                   |
| <b>Index</b>                   | Index number of the logical interface, which reflects its initialization sequence.                                                                                                                                                                                                                                                                                                                                           | <b>detail extensive none</b> |
| <b>SNMP ifIndex</b>            | SNMP interface index number for the logical interface.                                                                                                                                                                                                                                                                                                                                                                       | <b>detail extensive none</b> |
| <b>Generation</b>              | Unique number for use by Juniper Networks technical support only.                                                                                                                                                                                                                                                                                                                                                            | <b>detail extensive</b>      |
| <b>Flags</b>                   | Information about the logical interface.                                                                                                                                                                                                                                                                                                                                                                                     | All levels                   |
| <b>Encapsulation</b>           | Encapsulation on the logical interface.                                                                                                                                                                                                                                                                                                                                                                                      | All levels                   |
| <b>Protocol</b>                | Protocol family.                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail extensive none</b> |
| <b>Traffic statistics</b>      | <p>Number and rate of bytes and packets received (input) and transmitted (output) on the specified interface.</p> <p><b>NOTE:</b> For logical interfaces on EX Series switches, the traffic statistics fields in <b>show interfaces</b> commands show only control traffic; the traffic statistics do not include data traffic.</p>                                                                                          | <b>detail extensive</b>      |
| <b>IPv6 transit statistics</b> | EX Series switches do not support the collection and reporting of IPv6 transit statistics.                                                                                                                                                                                                                                                                                                                                   | <b>extensive</b>             |
| <b>Local statistics</b>        | Number and rate of bytes and packets destined to and from the switch.                                                                                                                                                                                                                                                                                                                                                        | <b>extensive</b>             |
| <b>Transit statistics</b>      | Number and rate of bytes and packets transiting the switch.                                                                                                                                                                                                                                                                                                                                                                  | <b>extensive</b>             |
| <b>Generation</b>              | Unique number for use by Juniper Networks technical support only.                                                                                                                                                                                                                                                                                                                                                            | <b>detail extensive</b>      |
| <b>Route Table</b>             | Route table in which the logical interface address is located. For example, 0 refers to the routing table <b>inet.0</b> .                                                                                                                                                                                                                                                                                                    | <b>detail extensive none</b> |
| <b>Input Filters</b>           | Names of any input filters applied to this interface.                                                                                                                                                                                                                                                                                                                                                                        | <b>detail extensive</b>      |
| <b>Output Filters</b>          | Names of any output filters applied to this interface.                                                                                                                                                                                                                                                                                                                                                                       | <b>detail extensive</b>      |
| <b>Flags</b>                   | <p>Information about protocol family flags.</p> <p>If unicast reverse-path forwarding (RPF) is explicitly configured on the specified interface, the uRPF flag is displayed. If unicast RPF was configured on a different interface (and therefore is enabled on all switch interfaces) but was not explicitly configured on the specified interface, the uRPF flag is not displayed even though unicast RPF is enabled.</p> | <b>detail extensive</b>      |
| <b><i>protocol-family</i></b>  | Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.                                                                                                                                                                                                                                                                                     | <b>brief</b>                 |
| <b>Flags</b>                   | Information about the address flags.                                                                                                                                                                                                                                                                                                                                                                                         | <b>detail extensive none</b> |



Table 49: show interfaces ge- Output Fields (*continued*)

| Field Name         | Field Description                                                 | Level of Output              |
|--------------------|-------------------------------------------------------------------|------------------------------|
| <b>Destination</b> | IP address of the remote side of the connection.                  | <b>detail extensive none</b> |
| <b>Local</b>       | IP address of the logical interface.                              | <b>detail extensive none</b> |
| <b>Broadcast</b>   | Broadcast address of the logical interlace.                       | <b>detail extensive none</b> |
| <b>Generation</b>  | Unique number for use by Juniper Networks technical support only. | <b>detail extensive</b>      |

## Sample Output

### show interfaces ge-0/0/0

```

user@switch> show interfaces ge-0/0/0
Physical interface: ge-0/0/0, Enabled, Physical link is Down
 Interface index: 129, SNMP ifIndex: 21
 Link-level type: Ethernet, MTU: 1514, Speed: Unspecified, Loopback: Disabled,
 Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled
 Remote fault: Online
 Device flags : Present Running Down
 Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
 CoS queues : 8 supported, 8 maximum usable queues
 Hold-times : Up 0 ms, Down 0 ms
 Current address: 00:19:e2:50:3f:41, Hardware address: 00:19:e2:50:3f:41
 Last flapped : 2008-01-16 11:40:53 UTC (4d 02:30 ago)
 Input rate : 0 bps (0 pps)
 Output rate : 0 bps (0 pps)
 Ingress rate at Packet Forwarding Engine : 0 bps (0 pps)
 Ingress drop rate at Packet Forwarding Engine : 0 bps (0 pps)
 Active alarms : None
 Active defects : None

 Logical interface ge-0/0/0.0 (Index 65) (SNMP ifIndex 22)
 Flags: SNMP-Traps
 Encapsulation: ENET2
 Input packets : 0
 Output packets: 0
 Protocol eth-switch
 Flags: None

```

### show interfaces ge-0/0/0 brief

```

user@switch> show interfaces ge-0/0/0 brief
Physical interface: ge-0/0/0, Enabled, Physical link is Down
 Description: voice priority and tcp and icmp traffic rate-limiting filter at i
 ngress port
 Link-level type: Ethernet, MTU: 1514, Speed: Unspecified, Loopback: Disabled,
 Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
 Remote fault: Online
 Device flags : Present Running Down
 Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
 Link flags : None

 Logical interface ge-0/0/0.0

```



Flags: Device-Down SNMP-Traps Encapsulation: ENET2  
eth-switch

### show interfaces ge-0/0/0 brief (with IEEE Enabled on the IEEE-capable Base-T copper Ethernet interfaces)

```
user@switch> show interfaces ge-0/0/0 brief
Physical interface: ge-0/0/0, Enabled, Physical link is Up
Link-level type: Ethernet, MTU: 1514, Speed: Auto, Duplex: Auto,
Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled,
Auto-negotiation: Enabled, Remote fault: Online,
IEEE 802.3az Energy Efficient Ethernet: Enabled, NO LPI
Device flags : Present Running
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags : None
```

### show interfaces ge-0/0/0 detail

```
user@switch> show interfaces ge-0/0/0 detail
Physical interface: ge-0/0/0, Enabled, Physical link is Up
Interface index: 193, SNMP ifIndex: 206, Generation: 196
Link-level type: Ethernet, MTU: 1514, Speed: Auto, Duplex: Auto,
BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x0
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:1f:12:30:ff:40, Hardware address: 00:1f:12:30:ff:40
Last flapped : 2009-05-05 06:03:05 UTC (00:22:13 ago)
Statistics last cleared: Never
Traffic statistics:
 Input bytes : 0 0 bps
 Output bytes : 0 0 bps
 Input packets: 0 0 pps
 Output packets: 0 0 pps
IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Egress queues: 8 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped packets

 0 best-effort 0 0 0
 1 assured-forw 0 0 0
 5 expedited-fo 0 0 0
 7 network-cont 0 0 0

Active alarms : None
Active defects : None

Logical interface ge-0/0/0.0 (Index 65) (SNMP ifIndex 235) (Generation 130)
Flags: SNMP-Traps Encapsulation: ENET2
Bandwidth: 0
Traffic statistics:
 Input bytes : 0
```



```

Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol eth-switch, Generation: 146, Route table: 0
Flags: Is-Primary
Input Filters: f1,
Output Filters: f2,,,,

```

### show interfaces ge-0/0/4 extensive

```

user@switch> show interfaces ge-0/0/4 extensive
Physical interface: ge-0/0/4, Enabled, Physical link is Up
Interface index: 165, SNMP ifIndex: 152, Generation: 168
Link-level type: Ethernet, MTU: 1514, Speed: Auto, Duplex: Auto,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x0
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:1f:12:33:65:44, Hardware address: 00:1f:12:33:65:44
Last flapped : 2008-09-17 11:02:25 UTC (16:32:54 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 2989761 984 bps
Input packets: 0 0 pps
Output packets: 24307 1 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 best-effort 0 0 0

1 assured-forw 0 0 0

5 expedited-fo 0 0 0

```



```

7 network-cont 0 24307 0

Active alarms : None
Active defects : None
MAC statistics:
 Receive Transmit
Total octets 0 2989761
Total packets 0 24307
Unicast packets 0 0
Broadcast packets 0 0
Multicast packets 0 24307
CRC/Align errors 0 0
FIFO errors 0 0
MAC control frames 0 0
MAC pause frames 0 0
Oversized frames 0
Jabber frames 0
Fragment frames 0
Code violations 0

Autonegotiation information:
Negotiation status: Complete
Link partner:
 Link mode: Full-duplex, Flow control: None, Remote fault: OK,
 Link partner Speed: 1000 Mbps
Local resolution:
 Flow control: None, Remote fault: Link OK
Packet Forwarding Engine configuration:
Destination slot: 0
Direction : Output
CoS transmit queue Bandwidth Buffer Priority
Limit
 % bps % usec
0 best-effort 95 950000000 95 NA low
none
7 network-control 5 50000000 5 NA low
none

Logical interface ge-0/0/4.0 (Index 82) (SNMP ifIndex 184) (Generation 147)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes : 0
Output bytes : 4107883
Input packets: 0
Output packets: 24307
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 4107883
Input packets: 0
Output packets: 24307
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0

```



```
Input packets: 0
Output packets: 0
Protocol eth-switch, Generation: 159, Route table: 0
Flags: None
Input Filters: f2,
Output Filters: f1,,,,
```



## show interfaces irb

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show interfaces irb &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;routing-instance <i>instance-name</i>&gt; &lt;snmp-index <i>snmp-index</i>&gt; &lt;statistics&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | <p>Command introduced in Junos OS Release 12.3R2.</p> <p>Command introduced in Junos OS Release 12.3R2 for EX Series switches.</p> <p>Command introduced in Junos OS Release 13.2 for the QFX Series</p>                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | Display integrated routing and bridging interfaces information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>routing-instance <i>instance-name</i></b>—(Optional) Display information for the interface with the specified SNMP index.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information for the interface with the specified SNMP index.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p> |
| <b>Additional Information</b>   | Integrated routing and bridging (IRB) provides simultaneous support for Layer 2 bridging and Layer 3 IP routing on the same interface. IRB enables you to route local packets to another routed interface or to another VLAN that has a Layer 3 protocol configured.                                                                                                                                                                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>List of Sample Output</b>    | <p><a href="#">show interfaces irb extensive on page 315</a></p> <p><a href="#">show interfaces irb snmp-index on page 316</a></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Output Fields</b>            | <a href="#">Table 50 on page 311</a> lists the output fields for the <b>show interfaces irb</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                    |

**Table 50: show interfaces irb Output Fields**

| Field Name                | Field Description                                                                                                                             | Level of Output |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Physical Interface</b> |                                                                                                                                               |                 |
| <b>Physical interface</b> | Name of the physical interface.                                                                                                               | All levels      |
| <b>Enabled</b>            | State of the physical interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> . | All levels      |



Table 50: show interfaces irb Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                          | Level of Output                    |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|
| <b>Proto</b>                   | Protocol configured on the interface.                                                                                                                                                                                                                      | <b>terse</b>                       |
| <b>Interface index</b>         | Physical interface index number, which reflects its initialization sequence.                                                                                                                                                                               | <b>detail extensive none</b>       |
| <b>SNMP ifIndex</b>            | SNMP index number for the physical interface.                                                                                                                                                                                                              | <b>detail extensive none</b>       |
| <b>Type</b>                    | Physical interface type.                                                                                                                                                                                                                                   | <b>detail extensive none</b>       |
| <b>Link-level type</b>         | Encapsulation being used on the physical interface.                                                                                                                                                                                                        | <b>detail extensive brief none</b> |
| <b>MTU</b>                     | MTU size on the physical interface.                                                                                                                                                                                                                        | <b>detail extensive brief none</b> |
| <b>Clocking</b>                | Reference clock source: <b>Internal</b> or <b>External</b> . Always unspecified on IRB interfaces.                                                                                                                                                         | <b>detail extensive brief</b>      |
| <b>Speed</b>                   | Speed at which the interface is running. Always unspecified on IRB interfaces.                                                                                                                                                                             | <b>detail extensive brief</b>      |
| <b>Device flags</b>            | Information about the physical device. Possible values are described in the "Device Flags" section under <i>Common Output Fields Description</i> .                                                                                                         | <b>detail extensive brief none</b> |
| <b>Interface flags</b>         | Information about the interface. Possible values are described in the "Interface Flags" section under <i>Common Output Fields Description</i> .                                                                                                            | <b>detail extensive brief none</b> |
| <b>Link type</b>               | Physical interface link type: <b>full duplex</b> or <b>half duplex</b> .                                                                                                                                                                                   | <b>detail extensive none</b>       |
| <b>Link flags</b>              | Information about the link. Possible values are described in the "Links Flags" section under <i>Common Output Fields Description</i> .                                                                                                                     | <b>detail extensive none</b>       |
| <b>Physical Info</b>           | Physical interface information.                                                                                                                                                                                                                            | All levels                         |
| <b>Hold-times</b>              | Current interface hold-time up and hold-time down, in milliseconds.                                                                                                                                                                                        | <b>detail extensive</b>            |
| <b>Current address</b>         | Configured MAC address.                                                                                                                                                                                                                                    | <b>detail extensive none</b>       |
| <b>Hardware address</b>        | MAC address of the hardware.                                                                                                                                                                                                                               | <b>detail extensive none</b>       |
| <b>Alternate link address</b>  | Backup address of the link.                                                                                                                                                                                                                                | <b>detail extensive</b>            |
| <b>Last flapped</b>            | Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hours:minutes:seconds timezone (hours:minutes:seconds ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> . | <b>detail extensive none</b>       |
| <b>Statistics last cleared</b> | Time when the statistics for the interface were last set to zero.                                                                                                                                                                                          | <b>detail extensive</b>            |



Table 50: show interfaces irb Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Level of Output         |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Traffic statistics</b>      | <p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>detail extensive</b> |
| <b>IPv6 transit statistics</b> | <p>Number of IPv6 transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>detail extensive</b> |
| <b>Input errors</b>            | <p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>           | <b>detail extensive</b> |
| <b>Output errors</b>           | <p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the DPC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul> | <b>detail extensive</b> |

#### Logical Interface



Table 50: show interfaces irb Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Level of Output                 |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------|
| <b>Logical interface</b>       | Name of the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | All levels                      |
| <b>Index</b>                   | Index number of the logical interface (which reflects its initialization sequence).                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail extensive</b><br>none |
| <b>SNMP ifIndex</b>            | SNMP interface index number of the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>detail extensive</b><br>none |
| <b>Generation</b>              | Unique number for use by Juniper Networks technical support only.                                                                                                                                                                                                                                                                                                                                                                                                                               | <b>detail extensive</b>         |
| <b>Flags</b>                   | Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <i>Common Output Fields Description</i> .                                                                                                                                                                                                                                                                                                                                 | <b>detail extensive</b>         |
| <b>Encapsulation</b>           | Encapsulation on the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>detail extensive</b>         |
| <b>Bandwidth</b>               | Speed at which the interface is running.                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail extensive</b>         |
| <b>Routing Instance</b>        | Routing instance IRB is configured under.                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>detail extensive</b>         |
| <b>Bridging Domain</b>         | Bridging domain IRB is participating in.                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail extensive</b>         |
| <b>Traffic statistics</b>      | Number and rate of bytes and packets received and transmitted on the logical interface. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>                                             | <b>detail extensive</b>         |
| <b>IPv6 transit statistics</b> | Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> | <b>detail extensive</b>         |
| <b>Local statistics</b>        | Statistics for traffic received from and transmitted to the Routing Engine.                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>detail extensive</b>         |
| <b>Transit statistics</b>      | Statistics for traffic transiting the router.                                                                                                                                                                                                                                                                                                                                                                                                                                                   | <b>detail extensive</b>         |
| <b>Protocol</b>                | Protocol family configured on the local interface. Possible values are described in the "Protocol Field" section under <i>Common Output Fields Description</i> .                                                                                                                                                                                                                                                                                                                                | <b>detail extensive</b>         |
| <b>MTU</b>                     | Maximum transmission unit size on the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail extensive</b>         |
| <b>Maximum labels</b>          | Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                 | <b>detail extensive</b><br>none |



Table 50: show interfaces irb Output Fields (*continued*)

| Field Name              | Field Description                                                                                                                                               | Level of Output         |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Generation</b>       | Unique number for use by Juniper Networks technical support only.                                                                                               | <b>detail extensive</b> |
| <b>Route table</b>      | Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.                                             | <b>detail extensive</b> |
| <b>Addresses, Flags</b> | Information about address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .                 | <b>detail extensive</b> |
| <b>Policer</b>          | The policer that is to be evaluated when packets are received or transmitted on the interface.                                                                  | <b>detail extensive</b> |
| <b>Flags</b>            | Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> . | <b>detail extensive</b> |

## Sample Output

### show interfaces irb extensive

```

user@host> show interfaces irb extensive
Physical interface: irb, Enabled, Physical link is Up
 Interface index: 129, SNMP ifIndex: 23, Generation: 130
 Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
 Speed: Unspecified
 Device flags : Present Running
 Interface flags: SNMP-Traps
 Link type : Full-Duplex
 Link flags : None
 Physical info : Unspecified
 Hold-times : Up 0 ms, Down 0 ms
 Current address: 02:00:00:00:00:30, Hardware address: 02:00:00:00:00:30
 Alternate link address: Unspecified
 Last flapped : Never
 Statistics last cleared: Never
 Traffic statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets : 0
 Output packets: 0
 IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets : 0
 Output packets: 0
 Input errors:
 Errors: 0, Drops: 0, Framing errors: 0, Runt: 0, Giants: 0, Policed discards:
0, Resource errors: 0
 Output errors:
 Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0

Logical interface irb.0 (Index 68) (SNMP ifIndex 70) (Generation 143)
 Flags: Hardware-Down SNMP-Traps 0x4000 Encapsulation: ENET2
 Bandwidth: 1000mbps
 Routing Instance: customer_0 Bridging Domain: bd0

```



```

Traffic statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Local statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Transit statistics:
 Input bytes : 0 0 bps
 Output bytes : 0 0 bps
 Input packets: 0 0 pps
 Output packets: 0 0 pps
IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Protocol inet, MTU: 1500, Generation: 154, Route table: 0
 Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
 Destination: 10.51.1/24, Local: 10.51.1.2, Broadcast: 10.51.1.255,
 Generation: 155
Protocol multiservice, MTU: 1500, Generation: 155, Route table: 0
 Flags: Is-Primary
 Policer: Input: __default_arp_policer

```

#### show interfaces irb snmp-index

```

user@host> show interfaces irb snmp-index 25
Physical interface: irb, Enabled, Physical link is Up
 Interface index: 128, SNMP ifIndex: 25
 Type: Ethernet, Link-level type: Ethernet, MTU: 1514
 Device flags : Present Running
 Interface flags: SNMP-Traps
 Link type : Full-Duplex
 Link flags : None
 Current address: 02:00:00:00:00:30, Hardware address: 02:00:00:00:00:30
 Last flapped : Never
 Input packets : 0
 Output packets: 0

Logical interface irb.0 (Index 68) (SNMP ifIndex 70)
 Flags: Hardware-Down SNMP-Traps 0x4000 Encapsulation: ENET2
 Bandwidth: 1000mbps
 Routing Instance: customer_0 Bridging Domain: bd0
 Input packets : 0
 Output packets: 0
 Protocol inet, MTU: 1500
 Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
 Destination: 10.51.1/24, Local: 10.51.1.2, Broadcast: 10.51.1.255
 Protocol multiservice, MTU: 1500
 Flags: Is-Primary

```



## show interfaces mc-ae

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show interfaces mc-ae id <i>identifier</i> unit <i>number</i></b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | <p>Command introduced in Junos OS Release 9.6 for the MX Series.</p> <p>Command introduced in Junos OS Release 12.2 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | On peers with multichassis aggregated Ethernet ( <b>mc-aeX</b> ) interfaces, use this command to display information about the multichassis aggregated Ethernet interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <p><b>id <i>identifier</i></b>—(Optional) Specify the name of the multichassis aggregated Ethernet interface.</p> <p><b>unit <i>number</i></b>—(Optional) Specify the logical interface by unit number.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Understanding Multichassis Link Aggregation</i> (QFX Series Switches)</li> <li>• <i>Understanding Multichassis Link Aggregation</i> (EX Series Switches)</li> <li>• <i>Configuring Multichassis Link Aggregation</i> (QFX Series Switches)</li> <li>• <i>Configuring Multichassis Link Aggregation on EX Series Switches</i> (EX Series Switches)</li> <li>• <i>Example: Configuring Multichassis Link Aggregation</i> (QFX Series Switches)</li> <li>• <i>Example: Configuring Multichassis Link Aggregation with Layer 3 MAC Address Synchronization</i> (QFX Series Switches)</li> <li>• <i>Example: Configuring Multichassis Link Aggregation for Layer 3 Unicast using MAC Address Synchronization</i> (QFX Series Switches)</li> <li>• <i>Example: Configuring Multichassis Link Aggregation for Layer 3 Unicast Using VRRP</i> (QFX Series Switches)</li> <li>• <i>Example: Configuring Multichassis Link Aggregation for Layer 3 Unicast Using VRRP on EX9200 Switches</i> (EX Series Switches)</li> <li>• <i>Example: Configuring Multichassis Link Aggregation for Layer 3 Multicast Using VRRP</i> (QFX Series Switches)</li> <li>• <i>Example: Configuring Multichassis Link Aggregation for Layer 3 Multicast Using VRRP on EX9200 Switches</i> (EX Series Switches)</li> </ul> |
| <b>List of Sample Output</b>    | <p><a href="#">show interfaces mc-ae (QFX Series Switch) on page 318</a></p> <p><a href="#">show interfaces mc-ae (MX Series) on page 318</a></p> <p><a href="#">show interfaces mc-ae (Active/Active Bridging and VRRP over IRB on MX Series) on page 319</a></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Output Fields</b>            | <p><a href="#">Table 51 on page 318</a> lists the output fields for the <b>show interfaces mc-ae</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |



Table 51: show interfaces mc-ae Output Fields

| Output Field Name             | Field Description                                                                                                                                                                        |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Current State Machine's State | Specifies the state of the MC-LAG initialization state machine.                                                                                                                          |
| Member Link                   | Specifies the identifiers of the configured multichassis link aggregated interface members.                                                                                              |
| Local Status                  | Specifies the status of the local link: <b>active</b> or <b>standby</b> .                                                                                                                |
| Peer Status                   | Specifies the status of the peer link: <b>active</b> or <b>standby</b> .                                                                                                                 |
| Peer State                    | Specifies the status of the local and peer links in an <b>active/active</b> MC-LAG configuration.                                                                                        |
| Logical Interface             | Specifies the identifier and unit of the AE interface.                                                                                                                                   |
| Topology Type                 | Specifies the bridge configured on the AE.                                                                                                                                               |
| Local State                   | Specifies if the local device is up or down.                                                                                                                                             |
| Peer State                    | Specifies if the peer device is up or down.                                                                                                                                              |
| Peer Ip/MCP/State             | Specifies the multichassis protection (MCP) link or the interchassis link-protection link (ICL-PL) for all of the multichassis aggregated Ethernet interfaces that are part of the peer. |

## Sample Output

### show interfaces mc-ae (QFX Series Switch)

```

user@host> show interfaces mc-ae ae1 512
Member Link : ae0
Current State Machine's State: mcae active state
Local Status : active
Local State : up
Peer Status : active
Peer State : up
 Logical Interface : ae0.0
 Topology Type : bridge
 Local State : up
 Peer State : up
 Peer Ip/MCP/State : 3.3.3.2 ae1.0 up

```

### show interfaces mc-ae (MX Series)

```

user@host> show interfaces mc-ae ae0 unit 512
Member Links : ae0
Local Status : active
Peer Status : active
Logical Interface : ae0.512
Core Facing Interface : Label Ethernet Interface
ICL-PL : Label Ethernet Interface

```



**show interfaces mc-ae (Active/Active Bridging and VRRP over IRB on MX Series)**

```
user@host# show interfaces mc-ae ge-0/0/0.0
Member Link : ae0
Current State Machine's State: active
Local Status : active
Local State : up
Peer Status : active
Peer State : up
 Logical Interface : ae0.0
 Topology Type : bridge
 Local State : up
 Peer State : up
 Peer Ip/ICL-PL/State : 192.168.100.10 ge-0/0/0.0 up
```



## show interfaces me0

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show interfaces me0<br><brief   detail   extensive   terse><br><descriptions><br><media><br><routing-instance><br><statistics>                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Display status information about the management Ethernet interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <p><b>none</b>—Display standard information about the management Ethernet interface.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>routing-instance</b>—(Optional) Display the name of the routing instance.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring a Firewall Filter on a Management Interface on an EX Series Switch</i></li> <li>• <i>Configuring Firewall Filters (CLI Procedure)</i></li> </ul>                                                                                                                                                                                                                                                                                                                 |
| <b>List of Sample Output</b>    | <a href="#">show interfaces me0 on page 324</a><br><a href="#">show interfaces me0 brief on page 324</a><br><a href="#">show interfaces me0 detail on page 324</a><br><a href="#">show interfaces me0 extensive on page 325</a>                                                                                                                                                                                                                                                                                                   |
| <b>Output Fields</b>            | <a href="#">Table 52 on page 320</a> lists the output fields for the <b>show interfaces me0</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                  |

**Table 52: show interfaces me0 Output Fields**

| Field Name                | Field Description                                                                   | Level of Output              |
|---------------------------|-------------------------------------------------------------------------------------|------------------------------|
| <b>Physical Interface</b> |                                                                                     |                              |
| <b>Physical interface</b> | Name of the physical interface.                                                     | All levels                   |
| <b>Enabled</b>            | State of the interface: <b>Enabled</b> or <b>Disabled</b> .                         | All levels                   |
| <b>Interface index</b>    | Index number of the physical interface, which reflects its initialization sequence. | <b>detail extensive none</b> |



Table 52: show interfaces me0 Output Fields (*continued*)

| Field Name              | Field Description                                                                                                                                                                                                                                                   | Level of Output        |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| SNMP ifIndex            | SNMP index number for the physical interface.                                                                                                                                                                                                                       | detail extensive none  |
| Generation              | Unique number for use by Juniper Networks technical support only.                                                                                                                                                                                                   | detail extensive       |
| Description             | Optional user-specified description.                                                                                                                                                                                                                                | brief detail extensive |
| Type                    | Information about the type of functional interface.                                                                                                                                                                                                                 | All levels             |
| Link-level type         | Encapsulation being used on the physical interface.                                                                                                                                                                                                                 | All levels             |
| MTU                     | Maximum transmission unit size on the physical interface. The default is 1514.                                                                                                                                                                                      | All levels             |
| Clocking                | Interface that acts as a clock source. This field is not supported on EX Series switches and the default value is always <b>Unspecified</b> .                                                                                                                       | detail extensive       |
| Speed                   | Speed at which the interface is running.                                                                                                                                                                                                                            | All levels             |
| Device flags            | Information about the physical device.                                                                                                                                                                                                                              | All levels             |
| Interface flags         | Information about the interface.                                                                                                                                                                                                                                    | All levels             |
| Link type               | Information about whether the link is duplex and whether the negotiation is manual or automatic.                                                                                                                                                                    | detail extensive none  |
| Physical info           | Information about the device dependent physical interface selector. This field is applied only when a clocking option is specified. This field is not supported on EX Series switches and the default value is always <b>Unspecified</b> .                          | detail extensive       |
| Hold-times              | Current interface hold-time up and hold-time down, in milliseconds.                                                                                                                                                                                                 | detail extensive       |
| Current address         | Configured MAC address.                                                                                                                                                                                                                                             | detail extensive none  |
| Hardware address        | MAC address of the hardware.                                                                                                                                                                                                                                        | detail extensive none  |
| Alternate link address  | Information about alternate hardware address.                                                                                                                                                                                                                       | detail extensive       |
| Last flapped            | Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second timezone (weeksw:daysdhour:minute:second ago)</b> . For example, <b>Last flapped: 2008-01-16 10:52:40 UTC (3w:3d 22:58 ago)</b> . | detail extensive none  |
| Statistics last cleared | Time when the statistics for the interface was last set to zero. The format is <b>Last flapped: year-month-day hour:minute:second timezone (weeksw:daysdhour:minute:second ago)</b> . For example, <b>Last flapped: 2008-01-16 10:52:40 UTC (3w:3d 22:58 ago)</b> . | detail extensive       |



Table 52: show interfaces me0 Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Level of Output         |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Traffic statistics</b>      | <p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <p>Following are fields in <b>Traffic statistics</b>:</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>detail extensive</b> |
| <b>IPv6 transit statistics</b> | <p>Number and rate of bytes and IPv6 packets received and transmitted on the physical interface.</p> <p>Following are fields in <b>IPv6 transit statistics</b>:</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail extensive</b> |
| <b>Input errors</b>            | <p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and frame checksum (FCS) errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid FCS.</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of packets that exceed the size for the medium. For example, if the medium is Ethernet, the <b>Giant</b> field shows the count of packets with size greater than 1518 bytes.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>                                 | <b>extensive</b>        |
| <b>Output errors</b>           | <p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly. It increases only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increment quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul> | <b>extensive</b>        |



Table 52: show interfaces me0 Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                           | Level of Output              |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------|------------------------------|
| <b>Logical Interface</b>       |                                                                                                                             |                              |
| <b>Logical interface</b>       | Name of the logical interface.                                                                                              | All levels                   |
| <b>Index</b>                   | Index number of the logical interface, which reflects its initialization sequence.                                          | <b>detail extensive</b> none |
| <b>SNMP ifIndex</b>            | SNMP interface index number for the logical interface.                                                                      | <b>detail extensive</b> none |
| <b>Generation</b>              | Unique number for use by Juniper Networks technical support only.                                                           | <b>detail extensive</b>      |
| <b>Flags</b>                   | Information about the logical interface.                                                                                    | All levels                   |
| <b>Encapsulation</b>           | Encapsulation on the logical interface.                                                                                     | All levels                   |
| <b>Traffic statistics</b>      | Number and rate of bytes and packets received (input) and transmitted (output) on the specified interface.                  | <b>detail extensive</b>      |
| <b>IPv6 transit statistics</b> | If IPv6 statistics tracking is enabled, number of IPv6 bytes and packets received and transmitted on the logical interface. | <b>detail extensive</b>      |
| <b>Local statistics</b>        | Number and rate of bytes and packets destined to and exiting from the switch.                                               | <b>extensive</b>             |
| <b>Protocol</b>                | Protocol family.                                                                                                            | <b>detail extensive</b> none |
| <b>Generation</b>              | Unique number for use by Juniper Networks technical support only.                                                           | <b>detail extensive</b>      |
| <b>Route Table</b>             | Routing table in which the logical interface address is located. For example, 0 refers to the routing table <b>inet.0</b> . | <b>detail extensive</b>      |
| <b>Flags</b>                   | Information about protocol family flags.                                                                                    | <b>detail extensive</b>      |
| <b>Input Filter</b>            | Ingress filter name.                                                                                                        | <b>extensive</b>             |
| <b>Output Filter</b>           | Egress filter name.                                                                                                         | <b>extensive</b>             |
| <b>Addresses</b>               | Information about the management interface addresses.                                                                       | <b>detail extensive</b> none |
| <b>Flags</b>                   | Information about the address flags.                                                                                        | <b>detail extensive</b> none |
| <b>Destination</b>             | IP address of the remote side of the connection.                                                                            | <b>detail extensive</b> none |
| <b>Local</b>                   | IP address of the logical interface.                                                                                        | <b>detail extensive</b> none |
| <b>Broadcast</b>               | Broadcast address of the logical interface.                                                                                 | <b>detail extensive</b> none |
| <b>Generation</b>              | Unique number for use by Juniper Networks technical support only.                                                           | <b>detail extensive</b>      |



## Sample Output

### show interfaces me0

```
user@switch> show interfaces me0
Physical interface: me0, Enabled, Physical link is Up
 Interface index: 1, SNMP ifIndex: 33
 Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps
 Device flags : Present Running
 Interface flags: SNMP-Traps
 Link type : Full-Duplex
 Current address: 00:1f:12:35:3c:bf, Hardware address: 00:1f:12:35:3c:bf
 Last flapped : 2010-07-31 23:45:50 PDT (5d 00:32 ago)
 Input packets : 1661830
 Output packets: 3200

Logical interface me0.0 (Index 3) (SNMP ifIndex 34)
 Flags: SNMP-Traps Encapsulation: ENET2
 Input packets : 1661830
 Output packets: 3200
 Protocol inet
 Flags: Is-Primary
 Addresses, Flags: Is-Preferred Is-Primary
 Destination: 10.204.32/20, Local: 10.204.33.103,
 Broadcast: 10.204.47.255
 Protocol inet6
 Flags: Is-Primary
 Addresses, Flags: Is-Preferred
 Destination: fe80::/64, Local: fe80::21f:12ff:fe35:3cbf
```

### show interfaces me0 brief

```
user@switch> show interfaces me0 brief
Physical interface: me0, Enabled, Physical link is Up
 Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
 Speed: 1000mbps
 Device flags : Present Running
 Interface flags: SNMP-Traps

Logical interface me0.0
 Flags: SNMP-Traps Encapsulation: ENET2
 inet 10.204.33.103/20
 inet6 fe80::21f:12ff:fe35:3cbf/64
```

### show interfaces me0 detail

```
user@switch> show interfaces me0 detail
Physical interface: me0, Enabled, Physical link is Up
 Interface index: 1, SNMP ifIndex: 33, Generation: 1
 Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
 Speed: 1000mbps
 Device flags : Present Running
 Interface flags: SNMP-Traps
 Link type : Full-Duplex
 Physical info : Unspecified
 Hold-times : Up 0 ms, Down 0 ms
 Current address: 00:1f:12:35:3c:bf, Hardware address: 00:1f:12:35:3c:bf
 Alternate link address: Unspecified
 Last flapped : 2010-07-31 23:45:50 PDT (5d 00:37 ago)
 Statistics last cleared: Never
```



```

Traffic statistics:
Input bytes : 366663167
Output bytes : 498590
Input packets: 1664031
Output packets: 3259
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

Logical interface me0.0 (Index 3) (SNMP ifIndex 34) (Generation 1)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes : 366665637
Output bytes : 500569
Input packets: 1664048
Output packets: 3275
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 366665637
Output bytes : 500569
Input packets: 1664048
Output packets: 3275
Protocol inet, Generation: 1, Route table: 0
Flags: Is-Primary
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.204.32/20, Local: 10.204.33.103, Broadcast: 10.204.47.255,
Generation: 1
Protocol inet6, Generation: 2, Route table: 0
Flags: Is-Primary
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::21f:12ff:fe35:3cbf
Generation: 2

```

#### show interfaces me0 extensive

```

user@switch> show interfaces me0 extensive
Physical interface: me0, Enabled, Physical link is Up
Interface index: 1, SNMP ifIndex: 33, Generation: 1
Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
Speed: 100mbps
Device flags : Present Running
Interface flags: SNMP-Traps
Link type : Full-Duplex
Physical info : Unspecified
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:1f:12:38:58:bf, Hardware address: 00:1f:12:38:58:bf
Alternate link address: Unspecified
Last flapped : 2010-08-15 06:27:33 UTC (03:06:22 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 82310392
Output bytes : 1966952
Input packets: 110453
Output packets: 17747
IPv6 transit statistics:

```



```
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
Policed discards: 0, Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, MTU errors: 0,
Resource errors: 0

Logical interface me0.0 (Index 3) (SNMP ifIndex 34) (Generation 1)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes : 82310392
Output bytes : 1966952
Input packets: 110453
Output packets: 17747
Local statistics:
Input bytes : 82310392
Output bytes : 1966952
Input packets: 110453
Output packets: 17747
Protocol inet, Generation: 1, Route table: 0
Flags: Is-Primary
Input Filters: mgmt_filter,
Addresses, Flags: Is-Default Is-Preferred Is-Primary
Destination: 10.204.96/20, Local: 10.204.96.234,
Broadcast: 10.204.111.255, Generation: 1
```



## show interfaces queue

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show interfaces queue &lt;both-ingress-egress&gt; &lt;egress&gt; &lt;forwarding-class forwarding-class&gt; &lt;ingress&gt; &lt;interface-name&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Display class-of-service (CoS) queue information for physical interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>                  | <p><b>none</b>—Show detailed CoS queue statistics for all physical interfaces.</p> <p><b>both-ingress-egress</b>—(Optional) Show both ingress and egress queue statistics. (Ingress statistics are not available for all interfaces.)</p> <p><b>egress</b>—(Optional) Show egress queue statistics only.</p> <p><b>forwarding-class forwarding-class</b>—(Optional) Show queue statistics only for the specified forwarding class.</p> <p><b>ingress</b>—(Optional) Show ingress queue statistics only. (Ingress statistics are not available for all interfaces.)</p> <p><b>interface-name</b>—(Optional) Show queue statistics for the specified interface.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Monitoring Interface Status and Traffic on page 255</a></li> <li>• <a href="#">Monitoring Interfaces That Have CoS Components</a></li> <li>• <a href="#">Defining CoS Schedulers and Scheduler Maps (CLI Procedure)</a></li> <li>• <a href="#">Configuring CoS Traffic Classification for Ingress Queuing on Oversubscribed Ports on EX8200 Line Cards (CLI Procedure)</a></li> </ul>                                                                                                                                                                                                                        |
| <b>List of Sample Output</b>    | <p><a href="#">show interfaces queue ge-0/0/0 (EX2200 Switch) on page 329</a></p> <p><a href="#">show interfaces queue xe-6/0/39 (Line Card with Oversubscribed Ports in an EX8200 Switch) on page 330</a></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Output Fields</b>            | <p><a href="#">Table 53 on page 327</a> lists the output fields for the <b>show interfaces queue</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

**Table 53: show interfaces queue Output Fields**

| Field Name                                                 | Field Description               |
|------------------------------------------------------------|---------------------------------|
| <b>Physical Interface and Forwarding Class Information</b> |                                 |
| Physical interface                                         | Name of the physical interface. |



Table 53: show interfaces queue Output Fields (*continued*)

| Field Name                                                       | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enabled                                                          | <p>State of the interface. Possible values are:</p> <ul style="list-style-type: none"> <li>• <b>Administratively down, Physical link is Down</b>—The interface is turned off, and the physical link is inoperable.</li> <li>• <b>Administratively down, Physical link is Up</b>—The interface is turned off, but the physical link is operational and can pass packets when it is enabled.</li> <li>• <b>Enabled, Physical link is Down</b>—The interface is turned on, but the physical link is inoperable and cannot pass packets.</li> <li>• <b>Enabled, Physical link is Up</b>—The interface is turned on, and the physical link is operational and can pass packets.</li> </ul> |
| Interface index                                                  | Index number of the physical interface, which reflects its initialization sequence.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| SNMP ifIndex                                                     | SNMP index number for the physical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Description                                                      | User-configured interface description.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Forwarding classes                                               | Number of forwarding classes supported and in use for the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Ingress Queues Information (not shown for all interfaces)</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Ingress queues                                                   | Number of input queues supported and in use on the specified interface. For an interface on a line card with oversubscribed ports, the ingress queue handles low priority traffic on the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Transmitted                                                      | <p>Transmission statistics for the queue:</p> <ul style="list-style-type: none"> <li>• <b>Packets</b>—Number of packets transmitted by this queue.</li> <li>• <b>Bytes</b>—Number of bytes transmitted by this queue.</li> <li>• <b>Tail-dropped packets</b>—Number of packets dropped because the queue buffers were full.</li> </ul>                                                                                                                                                                                                                                                                                                                                                |
| PFE chassis queues                                               | For an interface on a line card with oversubscribed ports, the number of Packet Forwarding Engine chassis queues supported and in use for the port group to which the interface belongs. The Packet Forwarding Engine chassis queue for a port group handles high priority traffic from all the interfaces in the port group.                                                                                                                                                                                                                                                                                                                                                         |
| <b>Egress Queues Information</b>                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Egress queues                                                    | Number of output queues supported and in use on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Queue                                                            | CoS queue number.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Queued                                                           | This counter is not supported on EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |



Table 53: show interfaces queue Output Fields (*continued*)

| Field Name                                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Transmitted</b>                             | <p>Number of packets and bytes transmitted by this queue. Information on transmitted packets and bytes can include:</p> <ul style="list-style-type: none"> <li>• <b>Packets</b>—Number of packets transmitted.</li> <li>• <b>Bytes</b>—Number of bytes transmitted.</li> <li>• <b>Tail-dropped packets</b>—Number of arriving packets dropped because output queue buffers were full.</li> <li>• <b>RED-dropped packets</b>—Number of packets dropped because of random early detection (RED). <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low loss priority packets dropped because of RED.</li> <li>• <b>High</b>—Number of high loss priority packets dropped because of RED.</li> </ul> </li> <li>• <b>RED-dropped bytes</b>—Number of bytes dropped because of random early detection (RED). <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low loss priority bytes dropped because of RED.</li> <li>• <b>High</b>—Number of high loss priority bytes dropped because of RED.</li> </ul> </li> </ul> |
| <b>Packet Forwarding Engine Chassis Queues</b> | <p>For an interface on a line card with oversubscribed ports, the number of Packet Forwarding Engine chassis queues supported and in use for the port group to which the interface belongs. The queue statistics reflect the traffic flowing on all the interfaces in the port group.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

## Sample Output

### show interfaces queue ge-0/0/0 (EX2200 Switch)

```

user@switch> show interfaces queue ge-0/0/0
Physical interface: ge-0/0/0, Enabled, Physical link is Down
 Interface index: 130, SNMP ifIndex: 501
Forwarding classes: 16 supported, 4 in use
Egress queues: 8 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
 Queued:
 Transmitted:
 Packets : 0
 Bytes : 0
 Tail-dropped packets : 0
Queue: 1, Forwarding classes: assured-forwarding
 Queued:
 Transmitted:
 Packets : 0
 Bytes : 0
 Tail-dropped packets : 0
Queue: 5, Forwarding classes: expedited-forwarding
 Queued:
 Transmitted:
 Packets : 0
 Bytes : 0
 Tail-dropped packets : 0
Queue: 7, Forwarding classes: network-control
 Queued:
 Transmitted:
 Packets : 0

```



```

Bytes : 0
Tail-dropped packets : 0

```

### show interfaces queue xe-6/0/39 (Line Card with Oversubscribed Ports in an EX8200 Switch)

```

user@switch> show interfaces queue xe-6/0/39

Physical interface: xe-6/0/39, Enabled, Physical link is Up
 Interface index: 291, SNMP ifIndex: 1641
Forwarding classes: 16 supported, 7 in use
Ingress queues: 1 supported, 1 in use
 Transmitted:
 Packets : 337069086018
 Bytes : 43144843010304
 Tail-dropped packets : 8003867575
PFE chassis queues: 1 supported, 1 in use
 Transmitted:
 Packets : 0
 Bytes : 0
 Tail-dropped packets : 0
Forwarding classes: 16 supported, 7 in use
Egress queues: 8 supported, 7 in use
Queue: 0, Forwarding classes: best-effort
 Queued:
 Transmitted:
 Packets : 334481399932
 Bytes : 44151544791024
 Tail-dropped packets : 0
 Queue: 1, Forwarding classes: assured-forwarding
 Queued:
 Transmitted:
 Packets : 0
 Bytes : 0
 Tail-dropped packets : 0
 Queue: 2, Forwarding classes: mcast-be
 Queued:
 Transmitted:
 Packets : 274948977
 Bytes : 36293264964
 Tail-dropped packets : 0
 Queue: 4, Forwarding classes: mcast-ef
 Queued:
 Transmitted:
 Packets : 0
 Bytes : 0
 Tail-dropped packets : 0
 Queue: 5, Forwarding classes: expedited-forwarding
 Queued:
 Transmitted:
 Packets : 0
 Bytes : 0
 Tail-dropped packets : 0
 Queue: 6, Forwarding classes: mcast-af
 Queued:
 Transmitted:
 Packets : 0
 Bytes : 0
 Tail-dropped packets : 0
 Queue: 7, Forwarding classes: network-control
 Queued:
 Transmitted:

```



```

Packets : 46714
Bytes : 6901326
Tail-dropped packets : 0

Packet Forwarding Engine Chassis Queues:
Queues: 8 supported, 7 in use
Queue: 0, Forwarding classes: best-effort
 Queued:
 Transmitted:
 Packets : 739338141426
 Bytes : 94635282101928
 Tail-dropped packets : 0
 RED-dropped packets : 5606426444
 Low : 5606426444
 High : 0
 RED-dropped bytes : 683262846464
 Low : 683262846464
 High : 0
Queue: 1, Forwarding classes: assured-forwarding
 Queued:
 Transmitted:
 Packets : 0
 Bytes : 0
 Tail-dropped packets : 0
 RED-dropped packets : 0
 Low : 0
 High : 0
 RED-dropped bytes : 0
 Low : 0
 High : 0
Queue: 2, Forwarding classes: mcast-be
 Queued:
 Transmitted:
 Packets : 0
 Bytes : 0
 Tail-dropped packets : 0
 RED-dropped packets : 0
 Low : 0
 High : 0
 RED-dropped bytes : 0
 Low : 0
 High : 0
Queue: 4, Forwarding classes: mcast-ef
 Queued:
 Transmitted:
 Packets : 0
 Bytes : 0
 Tail-dropped packets : 0
 RED-dropped packets : 0
 Low : 0
 High : 0
 RED-dropped bytes : 0
 Low : 0
 High : 0
Queue: 5, Forwarding classes: expedited-forwarding
 Queued:
 Transmitted:
 Packets : 0
 Bytes : 0
 Tail-dropped packets : 0
 RED-dropped packets : 0

```



|                   |   |   |
|-------------------|---|---|
| Low               | : | 0 |
| High              | : | 0 |
| RED-dropped bytes | : | 0 |
| Low               | : | 0 |
| High              | : | 0 |

Queue: 6, Forwarding classes: mcast-af

Queued:

Transmitted:

|                      |   |   |
|----------------------|---|---|
| Packets              | : | 0 |
| Bytes                | : | 0 |
| Tail-dropped packets | : | 0 |
| RED-dropped packets  | : | 0 |
| Low                  | : | 0 |
| High                 | : | 0 |
| RED-dropped bytes    | : | 0 |
| Low                  | : | 0 |
| High                 | : | 0 |

Queue: 7, Forwarding classes: network-control

Queued:

Transmitted:

|                      |   |          |
|----------------------|---|----------|
| Packets              | : | 97990    |
| Bytes                | : | 14987506 |
| Tail-dropped packets | : | 0        |
| RED-dropped packets  | : | 0        |
| Low                  | : | 0        |
| High                 | : | 0        |
| RED-dropped bytes    | : | 0        |
| Low                  | : | 0        |
| High                 | : | 0        |



## show interfaces xe-

**Syntax** `show interfaces xe-fpc/pic/port`  
`<brief | detail | extensive | terse>`  
`<media>`  
`<statistics>`

**Release Information** Command introduced in Junos OS Release 9.0 for EX Series switches.

**Description** Display status information about the specified 10-Gigabit Ethernet interface.



**NOTE:** You must have a transceiver plugged into an SFP+ or an XFP port before information about the interface can be displayed.



**NOTE:** On an EX Series switch, the traffic statistics for a LAG might vary slightly from the cumulative traffic statistics of the member interfaces of the LAG. This difference is more likely to be seen when the traffic is bursty in nature, and because the statistics are not fetched from the LAG and the members in the same instant. For accurate traffic statistics for a LAG, use the aggregated Ethernet counters.

**Options** `xe-fpc/pic/port`—Display standard information about the specified 10-Gigabit Ethernet interface.

**brief | detail | extensive | terse**—(Optional) Display the specified level of output.

**media**—(Optional) Display media-specific information about network interfaces. For 10-Gigabit Ethernet interfaces, using the **media** option does not provide you with new or additional information. The output is the same as when the **media** option is not used.

**statistics**—(Optional) Display static interface statistics. For 10-Gigabit Ethernet interfaces, using the **statistics** option does not provide you with new or additional information. The output is the same as when the **statistics** option is not used.

**Required Privilege Level** view

**Related Documentation**

- [Monitoring Interface Status and Traffic on page 255](#)
- [Troubleshooting Network Interfaces on EX3200 Switches](#)
- [Troubleshooting Network Interfaces on EX4200 Switches](#)
- [Troubleshooting an Aggregated Ethernet Interface on page 355](#)
- [Junos OS Ethernet Interfaces Configuration Guide](#)



**List of Sample Output** [show interfaces xe-4/1/0 on page 342](#)  
[show interfaces xe-0/1/0 brief on page 343](#)  
[show interfaces xe-4/1/0 detail on page 343](#)  
[show interfaces xe-6/0/39 extensive on page 344](#)

**Output Fields** [Table 54 on page 334](#) lists the output fields for the **show interfaces xe-** command. Output fields are listed in the approximate order in which they appear.

**Table 54: show interfaces xe- Output Fields**

| Field Name                             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Level of Output                                                  |
|----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------|
| Fields for the Terse Output Level Only |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                                                  |
| <b>Interface</b>                       | Name of the physical or logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>terse</b>                                                     |
| <b>Admin</b>                           | Administrative state of the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>terse</b>                                                     |
| <b>Link</b>                            | State of the physical link.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>terse</b>                                                     |
| <b>Proto</b>                           | Protocol family configured on the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>terse</b>                                                     |
| <b>Local</b>                           | Local IP address of the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>terse</b>                                                     |
| <b>Remote</b>                          | Remote IP address of the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>terse</b>                                                     |
| Fields for the Physical Interface      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                                                  |
| <b>Physical interface</b>              | Name of the physical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | <b>brief</b><br><b>detail</b><br><b>extensive</b><br><b>none</b> |
| <b>Enabled</b>                         | State of the interface. Can be one of the following: <ul style="list-style-type: none"> <li><b>Administratively down, Physical link is Down</b>—The interface is turned off, and the physical link is inoperable and cannot pass packets even when it is enabled.</li> <li><b>Administratively down, Physical link is Up</b>—The interface is turned off, but the physical link is operational and can pass packets when it is enabled.</li> <li><b>Enabled, Physical link is Down</b>—The interface is turned on, but the physical link is inoperable and cannot pass packets.</li> <li><b>Enabled, Physical link is Up</b>—The interface is turned on, and the physical link is operational and can pass packets.</li> </ul> | <b>brief</b><br><b>detail</b><br><b>extensive</b><br><b>none</b> |
| <b>Interface index</b>                 | Index number of the physical interface, which reflects its initialization sequence.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>detail</b><br><b>extensive</b><br><b>none</b>                 |
| <b>SNMP ifIndex</b>                    | SNMP index number for the physical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | <b>detail</b><br><b>extensive</b><br><b>none</b>                 |
| <b>Generation</b>                      | Unique number for use by Juniper Networks technical support only.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | <b>detail</b><br><b>extensive</b>                                |



Table 54: show interfaces xe- Output Fields (*continued*)

| Field Name               | Field Description                                                                                                              | Level of Output                                           |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
| <b>Description</b>       | User-configured interface description.                                                                                         | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |
| <b>Link-level type</b>   | Encapsulation being used on the physical interface.                                                                            | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |
| <b>MTU</b>               | Maximum transmission unit size on the physical interface.                                                                      | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |
| <b>Speed</b>             | Speed at which the interface is running.                                                                                       | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |
| <b>Duplex</b>            | Duplex mode of the interface.                                                                                                  | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |
| <b>BPDU Error</b>        | Not supported on EX Series switches.                                                                                           | <b>detail</b><br><b>extensive</b><br>none                 |
| <b>MAC-REWRITE Error</b> | Not supported on EX Series switches.                                                                                           | <b>detail</b><br><b>extensive</b><br>none                 |
| <b>Loopback</b>          | Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> . | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |
| <b>Source filtering</b>  | Source filtering status: <b>Enabled</b> or <b>Disabled</b> .                                                                   | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |
| <b>Flow control</b>      | Flow control status: <b>Enabled</b> or <b>Disabled</b> .                                                                       | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |
| <b>Device flags</b>      | Information about the physical device.                                                                                         | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |



Table 54: show interfaces xe- Output Fields (*continued*)

| Field Name              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Level of Output                      |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|
| Interface flags         | Information about the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | brief<br>detail<br>extensive<br>none |
| Link flags              | Information about the link.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | brief<br>detail<br>extensive<br>none |
| CoS queues              | Number of CoS queues configured.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | detail<br>extensive<br>none          |
| Hold-times              | Current interface hold-time up and hold-time down, in milliseconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | detail<br>extensive                  |
| Current address         | Configured MAC address.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | detail<br>extensive<br>none          |
| Hardware address        | Hardware MAC address.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | detail<br>extensive<br>none          |
| Last flapped            | Date, time, and how long ago the interface went from down to up. The format is <i>year-month-day hour:minute:second timezone (weekswdaysd hours:minutes:seconds ago)</i> . For example, 2008-01-16 10:52:40 UTC (3d 22:58 ago).                                                                                                                                                                                                                                                                                                                                            | detail<br>extensive<br>none          |
| Input Rate              | Input rate in bits per second (bps) and packets per second (pps).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | none                                 |
| Output Rate             | Output rate in bps and pps.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | none                                 |
| Statistics last cleared | Date, time, and how long ago the statistics for the interface were cleared. The format is <i>year-month-day hour:minute:second timezone (weekswdaysd hours:minutes:seconds ago)</i> . For example, 2010-05-17 07:51:28 PDT (00:04:33 ago).                                                                                                                                                                                                                                                                                                                                 | detail<br>extensive                  |
| Traffic statistics      | <p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li><b>Input bytes</b>—Number of bytes received on the interface and rate in bits per second.</li> <li><b>Output bytes</b>—Number of bytes transmitted on the interface and rate in bits per second.</li> <li><b>Input packets</b>—Number of packets received on the interface and rate in packets per second.</li> <li><b>Output packets</b>—Number of packets transmitted on the interface and rate in packets per second.</li> </ul> | detail<br>extensive                  |



Table 54: show interfaces xe- Output Fields (*continued*)

| Field Name              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Level of Output     |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| IPv6 transit statistics | EX Series switches do not support the collection and reporting of IPv6 transit statistics.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | detail<br>extensive |
| Input errors            | Input errors on the interface: <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored if you configure the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul> | extensive           |



Table 54: show interfaces xe- Output Fields (*continued*)

| Field Name               | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Level of Output                   |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|
| <b>Output errors</b>     | <p>Output errors on the interface:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Collisions</b>—Number of Ethernet collisions. A 10-Gigabit Ethernet interface supports only full-duplex operation, so for 10-Gigabit Ethernet interfaces, this number should always remain 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the switch interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul> | <b>extensive</b>                  |
| <b>Ingress queues</b>    | Number of CoS ingress queues supported on the specified interface. Displayed only for an interface on a line card with oversubscribed ports.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | <b>detail</b><br><b>extensive</b> |
| <b>Egress queues</b>     | Number of CoS egress queues supported on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>detail</b><br><b>extensive</b> |
| <b>PFE Egress queues</b> | Number of Packet Forwarding Engine egress queues shared by the interfaces in a port group. Displayed only for an interface on a line card with oversubscribed ports.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>detail</b><br><b>extensive</b> |
| <b>Queue counters</b>    | <p>Statistics for queues:</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets. This counter is not supported on EX switches and always contains 0.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <b>detail</b><br><b>extensive</b> |



Table 54: show interfaces xe- Output Fields (*continued*)

| Field Name                                    | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Level of Output                                           |
|-----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
| <b>Active alarms and Active defects</b>       | <p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the switch configuration, an alarm can ring the red or yellow alarm bell on the switch or turn on the red or yellow alarm LED on the front of the switch. These fields can contain the value <b>None</b> or <b>Link</b>.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <p><b>detail</b><br/><b>extensive</b><br/><b>none</b></p> |
| <b>MAC statistics</b>                         | <p>Receive and Transmit statistics reported by the PIC's MAC subsystem.</p> <ul style="list-style-type: none"> <li>• <b>Total octets</b> and <b>total packets</b>—Total number of octets and packets.</li> <li>• <b>Unicast packets</b>, <b>Broadcast packets</b>, and <b>Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—Number of frames that exceed 1518 octets.</li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul> | <b>extensive</b>                                          |
| <b>Packet Forwarding Engine configuration</b> | <p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number: <ul style="list-style-type: none"> <li>• On standalone switches with built-in interfaces, the slot number refers to the switch itself and is always 0.</li> <li>• On Virtual Chassis composed of switches with built-in interfaces, the slot number refers to the member ID of the switch.</li> <li>• On switches with line cards or on Virtual Chassis composed of switches with line cards, the slot number refers to the line card slot number on the switch or Virtual Chassis.</li> </ul> </li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | <b>extensive</b>                                          |



Table 54: show interfaces xe- Output Fields (*continued*)

| Field Name                           | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Level of Output                   |
|--------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|
| <b>CoS Information</b>               | <p>Scheduler information for the CoS egress queues on the physical interface:</p> <ul style="list-style-type: none"> <li>• <b>Direction</b>—Queue direction, always <b>Output</b>.</li> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth</b>—Information about bandwidth allocated to the queue: <ul style="list-style-type: none"> <li>• <b>%</b>—Bandwidth allocated to the queue as a percentage</li> <li>• <b>bps</b>—Bandwidth allocated to the queue in bps</li> </ul> </li> <li>• <b>Buffer</b>—Information about buffer space allocated to the queue: <ul style="list-style-type: none"> <li>• <b>%</b>—Buffer space allocated to the queue as a percentage.</li> <li>• <b>usec</b>—Buffer space allocated to the queue in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> </ul> </li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul> | <b>extensive</b>                  |
| <b>Fields for MACsec statistics</b>  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                   |
| <b>Protected Packets</b>             | The number of packets sent from the interface that were secured using MACsec when encryption was disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | <b>detail</b><br><b>extensive</b> |
| <b>Encrypted Packets</b>             | The number of packets sent from the interface that were secured and encrypted using MACsec.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail</b><br><b>extensive</b> |
| <b>Protected Bytes</b>               | The number of bytes sent from the interface that were secured using MACsec, but not encrypted.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <b>detail</b><br><b>extensive</b> |
| <b>Encrypted Bytes</b>               | The number of packets sent from the interface that were secured and encrypted using MACsec.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail</b><br><b>extensive</b> |
| <b>Accepted Packets</b>              | <p>The number of received packets that have been accepted on the interface. A packet is considered accepted for this counter when it has been received by this interface and it has passed the MACsec integrity check.</p> <p>This counter increments for traffic that is and is not encrypted using MACsec.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail</b><br><b>extensive</b> |
| <b>Validated Bytes</b>               | <p>The number of bytes that have been validated by the MACsec integrity check and received on the interface.</p> <p>This counter does not increment when MACsec encryption is disabled.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail</b><br><b>extensive</b> |
| <b>Decrypted Bytes</b>               | The number of bytes received on the interface that have been decrypted. An encrypted byte has to be decrypted before it can be received on the receiving interface. The decrypted bytes counter is incremented for received traffic that was encrypted using MACSec.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>detail</b><br><b>extensive</b> |
| <b>Fields for Logical Interfaces</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                   |



Table 54: show interfaces xe- Output Fields (*continued*)

| Field Name                | Field Description                                                                                                                                                                                                                                                                                                            | Level of Output                                           |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
| <b>Logical interface</b>  | Name of the logical interface.                                                                                                                                                                                                                                                                                               | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |
| <b>Index</b>              | Index number of the logical interface, which reflects its initialization sequence.                                                                                                                                                                                                                                           | <b>detail</b><br><b>extensive</b><br>none                 |
| <b>SNMP ifIndex</b>       | SNMP interface index number for the logical interface.                                                                                                                                                                                                                                                                       | <b>detail</b><br><b>extensive</b><br>none                 |
| <b>Generation</b>         | Unique number for use by Juniper Networks technical support only.                                                                                                                                                                                                                                                            | <b>detail</b><br><b>extensive</b>                         |
| <b>Description</b>        | User-configured description of the interface.                                                                                                                                                                                                                                                                                | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |
| <b>Flags</b>              | Information about the logical interface.                                                                                                                                                                                                                                                                                     | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |
| <b>Encapsulation</b>      | Encapsulation on the logical interface.                                                                                                                                                                                                                                                                                      | <b>brief</b><br><b>detail</b><br><b>extensive</b><br>none |
| <b>Traffic statistics</b> | Number and rate of bytes and packets received (input) and transmitted (output) on the specified interface.<br><br><b>NOTE:</b> For logical interfaces on EX Series switches, the traffic statistics fields in <b>show interfaces</b> commands show only control traffic; the traffic statistics do not include data traffic. | <b>detail</b><br><b>extensive</b>                         |
| <b>Local statistics</b>   | Number and rate of bytes and packets destined to and from the switch.                                                                                                                                                                                                                                                        | <b>extensive</b>                                          |
| <b>Transit statistics</b> | Number and rate of bytes and packets transiting the switch.                                                                                                                                                                                                                                                                  | <b>extensive</b>                                          |
| <b>Protocol</b>           | Protocol family.                                                                                                                                                                                                                                                                                                             | <b>detail</b><br><b>extensive</b><br>none                 |
| <b>Generation</b>         | Unique number for use by Juniper Networks technical support only.                                                                                                                                                                                                                                                            | <b>detail</b><br><b>extensive</b>                         |



Table 54: show interfaces xe- Output Fields (*continued*)

| Field Name                    | Field Description                                                                                                                                                                                                                                                                                                                                                                                                     | Level of Output                           |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|
| <b>Route Table</b>            | Route table in which the logical interface address is located. For example, <b>0</b> refers to the routing table <b>inet.0</b> .                                                                                                                                                                                                                                                                                      | <b>detail</b><br><b>extensive</b><br>none |
| <b>Input Filters</b>          | Names of any input filters applied to this interface.                                                                                                                                                                                                                                                                                                                                                                 | <b>detail</b><br><b>extensive</b>         |
| <b>Output Filters</b>         | Names of any output filters applied to this interface.                                                                                                                                                                                                                                                                                                                                                                | <b>detail</b><br><b>extensive</b>         |
| <b>Flags</b>                  | Information about protocol family flags.<br><br>If unicast reverse-path forwarding (RPF) is explicitly configured on the specified interface, the uRPF flag is displayed. If unicast RPF was configured on a different interface (and therefore is enabled on all switch interfaces) but was not explicitly configured on the specified interface, the uRPF flag is not displayed even though unicast RPF is enabled. | <b>detail</b><br><b>extensive</b>         |
| <b>Addresses, Flags</b>       | Information about the address flags.                                                                                                                                                                                                                                                                                                                                                                                  | <b>detail</b><br><b>extensive</b><br>none |
| <b><i>protocol-family</i></b> | Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.                                                                                                                                                                                                                                                                              | <b>brief</b>                              |
| <b>Flags</b>                  | Information about the address flags.                                                                                                                                                                                                                                                                                                                                                                                  | <b>detail</b><br><b>extensive</b><br>none |
| <b>Destination</b>            | IP address of the remote side of the connection.                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b><br><b>extensive</b><br>none |
| <b>Local</b>                  | IP address of the logical interface.                                                                                                                                                                                                                                                                                                                                                                                  | <b>detail</b><br><b>extensive</b><br>none |
| <b>Broadcast</b>              | Broadcast address of the logical interlace.                                                                                                                                                                                                                                                                                                                                                                           | <b>detail</b><br><b>extensive</b><br>none |
| <b>Generation</b>             | Unique number for use by Juniper Networks technical support only.                                                                                                                                                                                                                                                                                                                                                     | <b>detail</b><br><b>extensive</b>         |

## Sample Output

show interfaces xe-4/1/0

```

user@switch show interfaces xe-4/1/0
Physical interface: xe-4/1/0, Enabled, Physical link is Up
Interface index: 387, SNMP ifIndex: 369

```



```

Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, Duplex: Full-Duplex,
BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x0
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Current address: 00:23:9c:03:8e:70, Hardware address: 00:23:9c:03:8e:70
Last flapped : 2009-05-12 08:01:04 UTC (00:13:44 ago)
Input rate : 36432 bps (3 pps)
Output rate : 0 bps (0 pps)
Active alarms : None
Active defects : None

```

```

Logical interface xe-4/1/0.0 (Index 66) (SNMP ifIndex 417)
 Flags: SNMP-Traps Encapsulation: ENET2
 Input packets : 0
 Output packets: 0
 Protocol eth-switch
 Flags: None

```

#### show interfaces xe-0/1/0 brief

```

user@switch> show interfaces xe-0/1/0 brief
Physical interface: xe-0/1/0, Enabled, Physical link is Up
 Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,
 Source filtering: Disabled, Flow control: Enabled
 Device flags : Present Running
 Interface flags: SNMP-Traps Internal: 0x0
 Link flags : None

Logical interface xe-0/1/0.0
 Flags: SNMP-Traps Encapsulation: ENET2
 eth-switch

```

#### show interfaces xe-4/1/0 detail

```

user@switch> show interfaces xe-4/1/0 detail
Physical interface: xe-4/1/0, Enabled, Physical link is Up
 Interface index: 387, SNMP ifIndex: 369, Generation: 390
 Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, Duplex: Full-Duplex,
 BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
 Source filtering: Disabled, Flow control: Enabled
 Device flags : Present Running
 Interface flags: SNMP-Traps Internal: 0x0
 Link flags : None
 CoS queues : 8 supported, 8 maximum usable queues
 Hold-times : Up 0 ms, Down 0 ms
 Current address: 00:23:9c:03:8e:70, Hardware address: 00:23:9c:03:8e:70
 Last flapped : 2009-05-12 08:01:04 UTC (00:13:49 ago)
 Statistics last cleared: Never
 Traffic statistics:
 Input bytes : 4945644 48576 bps
 Output bytes : 0 0 bps
 Input packets : 3258 4 pps
 Output packets: 0 0 pps
 IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets : 0
 Output packets: 0

```



```

Egress queues: 8 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped packets

 0 best-effort 0 0 0

 1 assured-forw 0 0 0

 5 expedited-fo 0 0 0

 7 network-cont 0 0 0

Active alarms : None
Active defects : None

Logical interface xe-4/1/0.0 (Index 66) (SNMP ifIndex 417) (Generation 158)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Local statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Transit statistics:
 Input bytes : 0 0 bps
 Output bytes : 0 0 bps
 Input packets: 0 0 pps
 Output packets: 0 0 pps
Protocol eth-switch, Generation: 174, Route table: 0
Flags: None
Input Filters: f1,
Output Filters: f2,,,,

```

#### show interfaces xe-6/0/39 extensive

```

user@switch> show interfaces xe-6/0/39 extensive
Physical interface: xe-6/0/39, Enabled, Physical link is Up
Interface index: 291, SNMP ifIndex: 1641, Generation: 316
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, Duplex: Full-Duplex,
BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x0
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:19:e2:72:f2:88, Hardware address: 00:19:e2:72:f2:88
Last flapped : 2010-05-13 14:49:43 PDT (1d 00:14 ago)
Statistics last cleared: Never
Traffic statistics:
 Input bytes : 49625962140160 4391057408 bps
 Output bytes : 47686985710805 4258984960 bps
 Input packets: 387702829264 4288139 pps
 Output packets: 372554570944 4159166 pps
IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0

```



```

Output packets: 0
Input errors:
 Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
 L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
 FIFO errors: 0, Resource errors: 0
Output errors:
 Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

 FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 2 supported, 2 in use
Queue counters:
 Queued packets Transmitted packets Dropped packets
 Low priority 0 336342805223 7986622358
 High priority 0 0 0
Egress queues: 8 supported, 8 in use
Queue counters:
 Queued packets Transmitted packets Dropped packets
 0 best-effort 0 333760130103 0
 1 assured-forw 0 0 0
 2 mcast-be 0 274948977 0
 3 queue3 0 0 0
 4 mcast-ef 0 0 0
 5 expedited-fo 0 0 0
 6 mcast-af 0 0 0
 7 network-cont 0 46613 0
PFE Egress queues: 8 supported, 8 in use
Queue counters:
 Queued packets Transmitted packets Dropped packets
 0 best-effort 0 737867061290 5595302082
 1 assured-forw 0 0 0
 2 mcast-be 0 0 0
 3 queue3 0 0 0
 4 mcast-ef 0 0 0
 5 expedited-fo 0 0 0
 6 mcast-af 0 0 0
 7 network-cont 0 97800 0
Active alarms : None
Active defects : None
MAC statistics:
 Receive Transmit
 Total octets 49625962140160 47686985710805
 Total packets 387702829264 372554570944
 Unicast packets 387702829264 372554518472
 Broadcast packets 0 2
 Multicast packets 0 52470
 CRC/Align errors 0 0
 FIFO errors 0 0
 MAC control frames 0 0
 MAC pause frames 0 0
 Oversized frames 0
 Jabber frames 0
 Fragment frames 0
 Code violations 0
Packet Forwarding Engine configuration:
 Destination slot: 6
CoS information:
 Direction : Output
 CoS transmit queue Bandwidth Buffer Priority Limit
 % bps % usec
 0 best-effort 75 7500000000 75 0 low none
 2 mcast-be 20 2000000000 20 0 low none
 7 network-cont 5 500000000 5 0 low none

```

Logical interface xe-6/0/39.0 (Index 1810) (SNMP ifIndex 2238) (Generation 1923)



```
Flags: SNMP-Traps 0x0 Encapsulation: ENET2
Traffic statistics:
 Input bytes : 0
 Output bytes : 9375416
 Input packets: 0
 Output packets: 48901
Local statistics:
 Input bytes : 0
 Output bytes : 9375416
 Input packets: 0
 Output packets: 48901
Transit statistics:
 Input bytes : 0 0 bps
 Output bytes : 0 0 bps
 Input packets: 0 0 pps
 Output packets: 0 0 pps
Protocol eth-switch, Generation: 1937, Route table: 0
 Flags: Trunk-Mode
```



## show lacp interfaces

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show lacp interfaces<br><interface-name>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>      | Command introduced in Junos OS Release 10.0 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Display Link Aggregation Control Protocol (LACP) information about the specified aggregated Ethernet or Gigabit Ethernet interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <p>none—Display LACP information for all interfaces.</p> <p><i>interface-name</i>—(Optional) Display LACP information for the specified interface:</p> <ul style="list-style-type: none"> <li>• Aggregated Ethernet—<i>aex</i></li> <li>• Gigabit Ethernet—<i>ge-fpc/pic/port</i></li> <li>• 10-Gigabit Ethernet—<i>xe-fpc/pic/port</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i></li> <li>• <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i></li> <li>• <i>Example: Configuring Link Aggregation Between a QFX Series Product and an Aggregation Switch</i></li> <li>• <a href="#">Configuring Aggregated Ethernet Links (CLI Procedure) on page 84</a></li> <li>• <a href="#">Configuring Link Aggregation</a></li> <li>• <a href="#">Configuring Aggregated Ethernet LACP (CLI Procedure) on page 88</a></li> <li>• <a href="#">Configuring Aggregated Ethernet LACP</a></li> <li>• <a href="#">Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure) on page 89</a></li> <li>• <a href="#">Understanding Aggregated Ethernet Interfaces and LACP on page 8</a></li> <li>• <a href="#">Understanding Aggregated Ethernet Interfaces and LACP</a></li> <li>• <a href="#">Junos OS Interfaces Fundamentals Configuration Guide</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show lacp interfaces (EX Series Switches) on page 349</a><br><a href="#">show lacp interfaces (QFX Series) on page 350</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |



**Output Fields** Table 55 on page 348 lists the output fields for the **show lacp interfaces** command. Output fields are listed in the approximate order in which they appear.

**Table 55: show lacp interfaces Output Fields**

| Field Name           | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aggregated interface | Aggregated Ethernet interface name.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| LACP State           | <p>LACP state information for each aggregated Ethernet interface:</p> <ul style="list-style-type: none"> <li>For a child interface configured with the <b>force-up</b> statement, LACP state displays <b>FUP</b> along with the interface name.</li> <li><b>Role</b>—Role played by the interface. It can be one of the following: <ul style="list-style-type: none"> <li><b>Actor</b>—Local device participating in the LACP negotiation.</li> <li><b>Partner</b>—Remote device participating in the LACP negotiation.</li> </ul> </li> <li><b>Exp</b>—Expired state. <b>Yes</b> indicates that the actor or partner is in an expired state. <b>No</b> indicates that the actor or partner is not in an expired state.</li> <li><b>Def</b>—Default. <b>Yes</b> indicates that the actor's receive machine is using the default operational partner information, which is administratively configured for the partner. <b>No</b> indicates that the operational partner information in use has been received in an LACP PDU.</li> <li><b>Dist</b>—Distribution of outgoing frames. <b>No</b> indicates that the distribution of outgoing frames on the link is currently disabled and is not expected to be enabled. Otherwise, the value is <b>Yes</b>.</li> <li><b>Col</b>—Collection of incoming frames. <b>Yes</b> indicates that the collection of incoming frames on the link is currently enabled and is not expected to be disabled. Otherwise, the value is <b>No</b>.</li> <li><b>Syn</b>—Synchronization. If the value is <b>Yes</b>, the link is considered to be synchronized. The link has been allocated to the correct link aggregation group, the group has been associated with a compatible aggregator, and the identity of the link aggregation group is consistent with the system ID and operational key information transmitted. If the value is <b>No</b>, the link is not synchronized. The link is currently not in the right aggregation.</li> <li><b>Aggr</b>—Ability of the aggregation port to aggregate (<b>Yes</b>) or to operate only as an individual link (<b>No</b>).</li> <li><b>Timeout</b>—LACP timeout preference. Periodic transmissions of LACP PDUs occur at either a slow or a fast transmission rate, depending upon the expressed LACP timeout preference (<b>Long Timeout</b> or <b>Short Timeout</b>).</li> <li><b>Activity</b>—Actor's or partner's port activity. <b>Passive</b> indicates the port's preference for not transmitting LAC PDUs unless its partner's control value is <b>Active</b>. <b>Active</b> indicates the port's preference to participate in the protocol regardless of the partner's control value.</li> </ul> |



Table 55: show lacp interfaces Output Fields (*continued*)

| Field Name    | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LACP Protocol | <p>LACP protocol information for each aggregated interface:</p> <ul style="list-style-type: none"> <li>Link state (active or standby) indicated in parentheses next to the interface when link protection is configured.</li> <li><b>Receive State</b>—One of the following values: <ul style="list-style-type: none"> <li><b>Current</b>—The state machine receives an LACP PDU and enters the <b>Current</b> state.</li> <li><b>Defaulted</b>—If no LACP PDU is received before the timer for the <b>Current</b> state expires a second time, the state machine enters the <b>Defaulted</b> state.</li> <li><b>Expired</b>—If no LACP PDU is received before the timer for the <b>Current</b> state expires once, the state machine enters the <b>Expired</b> state.</li> <li><b>Initialize</b>—When the physical connectivity of a link changes or a Begin event occurs, the state machine enters the <b>Initialize</b> state.</li> <li><b>LACP Disabled</b>—If the port is operating in half duplex, the operation of LACP is disabled on the port, forcing the state to <b>LACP Disabled</b>. This state is similar to the <b>Defaulted</b> state, except that the port is forced to operate as an individual port.</li> <li><b>Port Disabled</b>—If the port becomes inoperable and a Begin event has not occurred, the state machine enters the <b>Port Disabled</b> state.</li> </ul> </li> <li><b>Transmit State</b>—Transmit state of the state machine. The transmit state is one of the following values: <ul style="list-style-type: none"> <li><b>Fast periodic</b>—Periodic transmissions are enabled at a fast transmission rate.</li> <li><b>No periodic</b>—Periodic transmissions are disabled.</li> <li><b>Periodic timer</b>—Transitory state entered when the periodic timer expires.</li> <li><b>Slow periodic</b>—Periodic transmissions are enabled at a slow transmission rate.</li> </ul> </li> <li><b>Mux State</b>—State of the multiplexer state machine for the aggregation port. The state is one of the following values: <ul style="list-style-type: none"> <li><b>Attached</b>—The multiplexer state machine initiates the process of attaching the port to the selected aggregator.</li> <li><b>Collecting—Yes</b> indicates that the receive function of this link is enabled with respect to its participation in an aggregation. Received frames are passed to the aggregator for collection. <b>No</b> indicates the receive function of this link is not enabled.</li> <li><b>Collecting distributing</b>—Collecting and distributing states are merged together to form a combined state (coupled control). Because independent control is not possible, the coupled control state machine does not wait for the partner to signal that collection has started before enabling both collection and distribution.</li> <li><b>Detached</b>—Process of detaching the port from the aggregator is in progress.</li> <li><b>Distributing—Yes</b> indicates that the transmit function of this link is enabled with respect to its participation in an aggregation. Frames can be passed down from the aggregator's distribution function for transmission. <b>No</b> indicates the transmit function of this link is not enabled.</li> <li><b>Waiting</b>—The multiplexer state machine is in a holding process, awaiting an outcome.</li> </ul> </li> </ul> |

## Sample Output

### show lacp interfaces (EX Series Switches)

```

user@switch> show lacp interfaces ae5
Aggregated interface: ae5
 LACP state: Role Exp Def Dist Col Syn Aggr Timeout Activity
 xe-2/0/7 Actor No No Yes Yes Yes Yes Fast Active
 xe-2/0/7 Partner No No Yes Yes Yes Yes Fast Passive

```



|          |         |    |    |    |     |     |     |      |         |
|----------|---------|----|----|----|-----|-----|-----|------|---------|
| xe-4/0/7 | Actor   | No | No | No | No  | No  | Yes | Fast | Active  |
| xe-4/0/7 | Partner | No | No | No | Yes | Yes | Yes | Fast | Passive |

|                    |               |                |                         |
|--------------------|---------------|----------------|-------------------------|
| LACP protocol:     | Receive State | Transmit State | Mux State               |
| xe-2/0/7(Active)   | Current       | Fast periodic  | Collecting distributing |
| xe-34/0/7(Standby) | Current       | Fast periodic  | Waiting                 |

### show lacp interfaces (QFX Series)

```
user@switch> show lacp interfaces nodegroup1:ae0 extensive
```

```
Aggregated interface: nodegroup1:ae0
```

| LACP state:       | Role    | Exp | Def | Dist | Col | Syn | Aggr | Timeout | Activity |
|-------------------|---------|-----|-----|------|-----|-----|------|---------|----------|
| node1:xe-0/0/1FUP | Actor   | No  | Yes | No   | No  | No  | No   | Yes     | Fast     |
| Active            |         |     |     |      |     |     |      |         |          |
| node1xe-0/0/1FUP  | Partner | No  | Yes | No   | No  | No  | No   | Yes     | Fast     |
| Passive           |         |     |     |      |     |     |      |         |          |
| node2:xe-0/0/2    | Actor   | No  | Yes | No   | No  | No  | No   | Yes     | Fast     |
| Active            |         |     |     |      |     |     |      |         |          |
| node2:xe-0/0/2    | Partner | No  | Yes | No   | No  | No  | No   | Yes     | Fast     |
| Passive           |         |     |     |      |     |     |      |         |          |



|              | LACP protocol:           | Receive State | Transmit State | Mux State  |
|--------------|--------------------------|---------------|----------------|------------|
|              | node1:xe-0/0/1FUP        | Current       | Fast periodic  | Collecting |
| distributing | node2:xe-0/0/2           | Current       | Fast periodic  | Collecting |
| distributing | node1:xe-0/0/1 (active)  | Current       | Fast periodic  | Collecting |
| distributing | node2:xe-0/0/2 (standby) | Current       | Fast periodic  | WAITING    |



## test interface restart-auto-negotiation

---

|                                 |                                                                                                                   |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | test interface restart-auto-negotiation <i>interface-name</i>                                                     |
| <b>Release Information</b>      | Command introduced in Junos OS Release 7.6.<br>Command introduced in Junos OS Release 9.0 for EX Series switches. |
| <b>Description</b>              | Restarts auto-negotiation on a Fast Ethernet or Gigabit Ethernet interface.                                       |
| <b>Options</b>                  | <i>interface-name</i> —Interface name: <i>fe-fpc/pic/port</i> or <i>ge-fpc/pic/port</i> .                         |
| <b>Required Privilege Level</b> | view                                                                                                              |
| <b>List of Sample Output</b>    | <a href="#">test interface restart-auto-negotiation on page 352</a>                                               |
| <b>Output Fields</b>            | Use the <code>show interfaces extensive</code> command to see the state for auto-negotiation.                     |

### Sample Output

#### test interface restart-auto-negotiation

```
user@host> test interface restart-auto-negotiation fe-1/0/0
```



## PART 4

# Troubleshooting

- [Troubleshooting Procedures on page 355](#)







## CHAPTER 6

# Troubleshooting Procedures

- [Troubleshooting an Aggregated Ethernet Interface on page 355](#)
- [Troubleshooting Interface Configuration and Cable Faults on page 356](#)
- [Troubleshooting Unicast RPF on page 357](#)
- [Diagnosing a Faulty Twisted-Pair Cable \(CLI Procedure\) on page 358](#)

### Troubleshooting an Aggregated Ethernet Interface

---

Troubleshooting issues for aggregated Ethernet interfaces:

- [Show Interfaces Command Shows the LAG is Down on page 355](#)
- [Logical Interface Statistics Do Not Reflect All Traffic on page 355](#)
- [IPv6 Interface Traffic Statistics Are Not Supported on page 356](#)
- [SNMP Counters ifHCInBroadcastPkts and ifInBroadcastPkts Are Always 0 on page 356](#)

#### Show Interfaces Command Shows the LAG is Down

**Problem**    **Description:** The `show interfaces terse` command shows that the LAG is down.

**Solution**    Check the following:

- Verify that there is no configuration mismatch.
- Verify that all member ports are up.
- Verify that a LAG is part of family ethernet—switching (Layer 2 LAG) or family inet (Layer 3 LAG).
- Verify that the LAG member is connected to the correct LAG at the other end.
- Verify that the LAG members belong to the same switch (or the same Virtual Chassis).

#### Logical Interface Statistics Do Not Reflect All Traffic

**Problem**    **Description:** The traffic statistics for a logical interface do not include all of the traffic.



**Solution** Traffic statistics fields for logical interfaces in **show interfaces** commands show only control traffic; the traffic statistics do not include data traffic. You can view the statistics for all traffic only per physical interface.

### IPv6 Interface Traffic Statistics Are Not Supported

**Problem** **Description:** The IPv6 transit statistics in the **show interfaces** command display all 0 values.

**Solution** EX Series switches do not support the collection and reporting of IPv6 transit statistics.

### SNMP Counters ifHCInBroadcastPkts and ifInBroadcastPkts Are Always 0

**Problem** **Description:** The values for the SNMP counters ifHCInBroadcastPkts and ifInBroadcastPkts are always 0.

**Solution** The SNMP counters ifHCInBroadcastPkts and ifInBroadcastPkts are not supported for aggregated Ethernet interfaces on EX Series switches.

**Related Documentation**

- [Verifying the Status of a LAG Interface on page 257](#)
- *Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch*
- *Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch*

---

## Troubleshooting Interface Configuration and Cable Faults



**NOTE:** This topic applies only to the J-Web Application package.

Troubleshooting interface configuration and connectivity on the EX Series switch:

1. [Interface Configuration or Connectivity Is Not Working on page 356](#)

### Interface Configuration or Connectivity Is Not Working

**Problem** **Description:**



**NOTE:** This topic applies only to the J-Web Application package.

You encounter errors when you attempt to configure an interface on the switch, or the interface is exhibiting connectivity problems.



**Solution** Use the port troubleshooter feature in the J-Web interface to identify and rectify port configuration and connectivity related problems.

To use the J-Web interface port troubleshooter:

1. Select the option **Troubleshoot** from the main menu.
2. Click **Troubleshoot Port**. The Port Troubleshooting wizard is displayed. Click **Next**.
3. Select the ports to troubleshoot.
4. Select the test cases to be executed on the selected port. Click **Next**.

When the selected test cases are executed, the final result and the recommended action is displayed.

If there is a cable fault, the port troubleshooter displays details and the recommended action. For example, the cable must be replaced.

If the port configuration needs to be modified, the port troubleshooter displays details and the recommended action.

- Related Documentation**
- [Monitoring Interface Status and Traffic on page 255](#)
  - [Configuring Gigabit Ethernet Interfaces \(J-Web Procedure\) on page 35](#)
  - [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\)](#)
  - [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\) on page 32](#)
  - [Connecting and Configuring an EX Series Switch \(CLI Procedure\)](#)
  - [Connecting and Configuring an EX Series Switch \(J-Web Procedure\)](#)

## Troubleshooting Unicast RPF

Troubleshooting issues for unicast reverse-path forwarding (RPF) on EX Series switches include:

1. [Legitimate Packets Are Discarded on page 357](#)

### Legitimate Packets Are Discarded

**Problem** **Description:** The switch filters valid packets from legitimate sources, which results in the switch's discarding packets that should be forwarded.

**Solution** The interface or interfaces on which legitimate packets are discarded are asymmetrically routed interfaces. An asymmetrically routed interface uses different paths to send and receive packets between the source and the destination, so the interface that receives a packet is not the same interface the switch uses to reply to the packet's source.

Unicast RPF works properly only on symmetrically routed interfaces. A symmetrically routed interface is an interface that uses the same route in both directions between the source and the destination. Unicast RPF filters packets by checking the forwarding table



for the best return path to the source of an incoming packet. If the best return path uses the same interface as the interface that received the packet, the switch forwards the packet. If the best return path uses a different interface than the interface that received the packet, the switch discards the packet.



**NOTE:** On EX3200, EX4200, and EX4300 switches, unicast RPF works properly only if all switch interfaces—including aggregated Ethernet interfaces (also referred to as link aggregation groups or LAGs), integrated routing and bridging (IRB) interfaces, and routed VLAN interfaces (RVIs)—are symmetrically routed, because unicast RPF is enabled globally on all switch interfaces.

- Related Documentation**
- [Verifying Unicast RPF Status on page 261](#)
  - [Understanding Unicast RPF on page 19](#)

---

## Diagnosing a Faulty Twisted-Pair Cable (CLI Procedure)

---

**Problem**    **Description:** A 10/100/1000BASE-T Ethernet interface has connectivity problems that you suspect might be caused by a faulty cable.

**Solution**    Use the time domain reflectometry (TDR) test to determine whether a twisted-pair Ethernet cable is faulty.

The TDR test:

- Detects and reports faults for each twisted pair in an Ethernet cable. Faults detected include open circuits, short circuits, and impedance mismatches.
- Reports the distance to fault to within 1 meter.
- Detects and reports pair swaps, pair polarity reversals, and excessive pair skew.

The TDR test is supported on the following switches and interfaces:

- EX2200, EX3200, EX3300, and EX4200 switches—RJ-45 network interfaces. The TDR test is not supported on management interfaces and SFP interfaces.
- EX6200 and EX8200 switches—RJ-45 network interfaces on line cards.



**NOTE:** We recommend running the TDR test on an interface when there is no traffic on the interface.

To diagnose a cable problem by running the TDR test:

1. Run the `request diagnostics tdr` command.



```
user@switch> request diagnostics tdr start interface ge-0/0/10
```

```
Interface TDR detail:
```

```
Test status : Test successfully executed ge-0/0/10
```

2. View the results of the TDR test with the `show diagnostics tdr` command.

```
user@switch> show diagnostics tdr interface ge-0/0/10
```

```
Interface TDR detail:
```

```
Interface name : ge-0/0/10
```

```
Test status : Passed
```

```
Link status : Down
```

```
MDI pair : 1-2
```

```
 Cable status : Normal
```

```
 Distance fault : 0 Meters
```

```
 Polartiy swap : N/A
```

```
 Skew time : N/A
```

```
MDI pair : 3-6
```

```
 Cable status : Normal
```

```
 Distance fault : 0 Meters
```

```
 Polartiy swap : N/A
```

```
 Skew time : N/A
```

```
MDI pair : 4-5
```

```
 Cable status : Open
```

```
 Distance fault : 1 Meters
```

```
 Polartiy swap : N/A
```

```
 Skew time : N/A
```

```
MDI pair : 7-8
```

```
 Cable status : Normal
```

```
 Distance fault : 0 Meters
```

```
 Polartiy swap : N/A
```

```
 Skew time : N/A
```

```
Channel pair : 1
```

```
 Pair swap : N/A
```

```
Channel pair : 2
```

```
 Pair swap : N/A
```

```
Downshift : N/A
```

3. Examine the **Cable status** field for the four MDI pairs to determine if the cable has a fault. In the preceding example, the twisted pair on pins 4 and 5 is broken or cut at approximately one meter from the `ge-0/0/10` port connection.



**NOTE:** The **Test Status** field indicates the status of the TDR test, not the cable. The value **Passed** means the test completed—it does not mean that the cable has no faults.

The following is additional information about the TDR test:

- The TDR test can take some seconds to complete. If the test is still running when you execute the `show diagnostics tdr` command, the **Test status** field displays **Started**. For example:

```
user@switch> show diagnostics tdr interface ge-0/0/22
```

```
Interface TDR detail:
```



```
Interface name : ge-0/0/22
Test status : Started
```

- You can terminate a running TDR test before it completes by using the **request diagnostics tdr abort interface *interface-name*** command. The test terminates with no results, and the results from any previous test are cleared.
- You can display summary information about the last TDR test results for all interfaces on the switch that support the TDR test by not specifying an interface name with the **show diagnostics tdr** command. For example:

```
user@switch> show diagnostics tdr
```

| Interface | Test status | Link status | Cable status | Max distance | fault |
|-----------|-------------|-------------|--------------|--------------|-------|
| ge-0/0/0  | Passed      | UP          | OK           | 0            |       |
| ge-0/0/1  | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/2  | Passed      | UP          | OK           | 0            |       |
| ge-0/0/3  | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/4  | Passed      | UP          | OK           | 0            |       |
| ge-0/0/5  | Passed      | UP          | OK           | 0            |       |
| ge-0/0/6  | Passed      | UP          | OK           | 0            |       |
| ge-0/0/7  | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/8  | Passed      | Down        | OK           | 0            |       |
| ge-0/0/9  | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/10 | Passed      | Down        | Fault        | 1            |       |
| ge-0/0/11 | Passed      | UP          | OK           | 0            |       |
| ge-0/0/12 | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/13 | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/14 | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/15 | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/16 | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/17 | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/18 | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/19 | Passed      | Down        | OK           | 0            |       |
| ge-0/0/20 | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/21 | Not Started | N/A         | N/A          | N/A          |       |
| ge-0/0/22 | Passed      | UP          | OK           | 0            |       |
| ge-0/0/23 | Not Started | N/A         | N/A          | N/A          |       |

#### Related Documentation

- [Troubleshooting Interface Configuration and Cable Faults on page 356](#)
- [request diagnostics tdr on page 275](#)
- [show diagnostics tdr on page 277](#)