

Schedulers on Aggregated Ethernet Interfaces on EX9200 Switches



Published: 2015-05-15

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Schedulers on Aggregated Ethernet Interfaces on EX9200 Switches
Copyright © 2015, Juniper Networks, Inc.
All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	ix
	Documentation and Release Notes	ix
	Supported Platforms	ix
	Using the Examples in This Manual	ix
	Merging a Full Example	x
	Merging a Snippet	x
	Documentation Conventions	xi
	Documentation Feedback	xiii
	Requesting Technical Support	xiii
	Self-Help Online Tools and Resources	xiii
	Opening a Case with JTAC	xiv
Part 1	Overview	
Chapter 1	Overview	3
	Limitations on CoS for Aggregated Interfaces	3
Part 2	Configuration	
Chapter 2	Configuration Task	9
	Configuring Schedulers on Aggregated Interfaces	9
Chapter 3	Examples	11
	Examples: Configuring CoS on Aggregated Interfaces	11
	Example: Configuring Scheduling Modes on Aggregated Interfaces	13
Chapter 4	Configuration Statements	21
	[edit class-of-service] Hierarchy Level	21
	buffer-size (Schedulers)	26
	drop-profile (Schedulers)	27
	drop-profile-map (Schedulers)	27
	excess-priority	28
	excess-rate	29
	forwarding-class (Interfaces)	30
	interfaces (CoS)	31
	loss-priority (Scheduler Drop Profiles)	33
	priority (Schedulers)	34
	protocol (Schedulers)	35
	scheduler-map (Interfaces and Traffic-Control Profiles)	36
	scheduler-maps (For Most Interface Types)	36
	schedulers (CoS)	37
	transmit-rate (Schedulers)	38

unit	40
------------	----

List of Figures

Part 2	Configuration	
Chapter 3	Examples	11
	Figure 1: Scaled Mode for Aggregated Ethernet Interfaces	17
	Figure 2: Replicated Mode for Aggregated Ethernet Interfaces	18

List of Tables

About the Documentation	ix
Table 1: Notice Icons	xi
Table 2: Text and Syntax Conventions	xi

About the Documentation

- Documentation and Release Notes on page ix
- Supported Platforms on page ix
- Using the Examples in This Manual on page ix
- Documentation Conventions on page xi
- Documentation Feedback on page xiii
- Requesting Technical Support on page xiii

Documentation and Release Notes

To obtain the most current version of all Juniper Networks[®] technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- EX Series

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

Documentation Conventions

Table 1 on page xi defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xi defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	<code>user@host> show chassis alarms</code> <code>No alarms currently active</code>
<i>Italic text like this</i>	<ul style="list-style-type: none">Introduces or emphasizes important new terms.Identifies guide names.Identifies RFC and Internet draft titles.	<ul style="list-style-type: none">A policy <i>term</i> is a named structure that defines match conditions and actions.<i>Junos OS CLI User Guide</i>RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none">To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level.The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric <i>metric</i>>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none">In the Logical Interfaces box, select All Interfaces.To cancel the configuration, click Cancel.

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page at the Juniper Networks Technical Documentation site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>

- Download the latest versions of software and review release notes:
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [Overview on page 3](#)

CHAPTER 1

Overview

- [Limitations on CoS for Aggregated Interfaces on page 3](#)

Limitations on CoS for Aggregated Interfaces

Both Ethernet and SONET/SDH interfaces can be aggregated. The limitations covered here apply to both.

There are some restrictions when you configure CoS on aggregated Ethernet and SONET/SDH interfaces:

- Chassis scheduling, described in *Applying Scheduler Maps to Packet Forwarding Component Queues*, is not supported on aggregated interfaces, because a chassis scheduler applies to the entire PIC and not just to one interface.
- An aggregated interface is a pseudo-interface. Therefore, CoS queues are not associated with the aggregated interface. Instead, CoS queues are associated with the member link interfaces of the aggregated interface.
- When you apply CoS parameters to the aggregated interface, they are applied to the CoS queues of the member link interfaces. You can apply CoS classifiers and rewrite rules directly to the member link interfaces, and the software uses the values you configure.
- You cannot apply a scheduler map to a member link of an aggregate interface.
- Rate-based CoS components such as scheduler, shaper, and policer are not supported on mixed rate aggregated Ethernet links. However, the default CoS settings are supported by default on the mixed rate aggregated Ethernet links.

When the scheduler map of the aggregate interface has schedulers configured for absolute transmit rate, the scheduler for the member link interfaces is scaled to the speed of each member link interface. Each member link interface has an automatic scheduler map that is not visible in the CLI. This scheduler map is allocated when the member link is added to the aggregate interface and is deleted when the member link is removed from the aggregate interface.

- If you configure the scheduler transmit rate of the aggregate interface as an absolute rate, the software uses the following formula to scale the transmit rate of each member link:

transmit rate of member link interface =
(configured transmit rate of aggregate interface /
total speed of aggregate interface) *
(total speed of member link interface / total configured percent) * 100

- If you configure the scheduler transmit rate of the aggregate interface as a percentage, the software uses the following formula to scale the transmit rate of each member link:

transmit rate percent of member link interface =
(configured transmit rate percent of aggregate interface /
total configured percent) * 100

The total configured percent is the sum of the configured transmit rate of all schedulers in terms of percentage of the total speed of the aggregate interface.

For more information, see [“Examples: Configuring CoS on Aggregated Interfaces” on page 11](#).

- All the other parameters for the schedulers, including priority, drop profile, and buffer size, are copied without change from the scheduler of the aggregated interface to the member link interfaces.
- The configuration related to the logical interfaces, including classifiers and rewrite rules, is copied from the aggregated logical interface configuration to the member link logical interfaces.
- For the scheduler map applied to an aggregated interface, if you configure a transmission rate in absolute terms, then the traffic of all the member link interfaces might be affected if any of the member link interfaces go up or down.

When applying CoS configurations to bundles, you must apply the CoS configuration directly to the bundle, not to the physical ports that are part of the bundle. The device may give you a false commit if you apply a CoS configuration directly to a physical port that is part of a bundle. This limitation applies if you attempt to configure a physical port that is already a member of a bundle or if you attempt to add a physical port to a bundle that already has a CoS configuration applied to it.

If you want to add a physical port to a bundle that already has a CoS configuration, you must:

1. Remove the CoS configuration from the port.
2. Commit your changes on the device.
3. Add the port to the bundle. The CoS configurations that are present on the bundle will be applied to the port you are adding to the bundle.
4. Commit your changes on the device.

In addition, if you want to remove a physical port from a bundle and ensure the physical port has the appropriate CoS configurations, you must:

1. Remove the port from the bundle.
2. Commit your changes on the device.

3. Apply the applicable CoS configuration to the port.
4. Commit your changes on the device.

PART 2

Configuration

- [Configuration Task on page 9](#)
- [Examples on page 11](#)
- [Configuration Statements on page 21](#)

CHAPTER 2

Configuration Task

- [Configuring Schedulers on Aggregated Interfaces on page 9](#)

Configuring Schedulers on Aggregated Interfaces

You can apply a class-of-service (CoS) configuration to aggregated Ethernet and aggregated SONET/SDH interfaces. The CoS configuration applies to all member links included in the aggregated interface. You cannot apply different CoS configurations to the individual member links.

You can configure shaping for aggregated Ethernet interfaces that use interfaces originating from Gigabit Ethernet IQ2 PICs. However, you cannot enable shaping on aggregated Ethernet interfaces when there is a mixture of ports from Intelligent Queuing (IQ) and Intelligent Queuing 2 (IQ2) PICs in the same bundle.

You cannot configure a shaping rate and guaranteed rate on an aggregated Ethernet interface with member interfaces on IQ or IQ2 PICs. The commit will fail. These statements are allowed only when the member interfaces are Enhanced Queuing DPC Gigabit Ethernet interfaces.

To view the summation of the queue statistics for the member links of an aggregate interface, issue the **show interfaces queue** command. To view the queue statistics for each member link, issue the **show interfaces queue aggregated-interface-name** command.

To configure CoS schedulers on aggregated interfaces, include the following statements at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
interfaces {
  interface-name {
    scheduler-map map-name;
    unit logical-unit-number {
      scheduler-map map-name;
    }
  }
}
scheduler-maps {
  map-name {
    forwarding-class class-name scheduler scheduler-name;
  }
}
```

```
schedulers {  
  scheduler-name {  
    buffer-size (percent percentage | remainder | temporal microseconds);  
    drop-profile-map loss-priority (any | low | medium-low | medium-high | high) protocol  
      (any | non-tcp | tcp) drop-profile profile-name;  
    excess-priority (low | high);  
    excess-rate percent percentage;  
    priority priority-level;  
    transmit-rate (rate | percent percentage | remainder) <exact>;  
  }  
}
```


CHAPTER 3

Examples

- [Examples: Configuring CoS on Aggregated Interfaces on page 11](#)
- [Example: Configuring Scheduling Modes on Aggregated Interfaces on page 13](#)

Examples: Configuring CoS on Aggregated Interfaces

This example illustrates how CoS scheduler parameters are configured and applied to aggregated interfaces.

Applying Scaling Formula to Absolute Rates

Configure queues as follows when the total speed of member link interfaces is 100 Mbps (the available bandwidth is 100 Mbps):

```
[edit class-of-service]
schedulers {
  be {
    transmit-rate 10m;
  }
  af {
    transmit-rate 20m;
  }
  ef {
    transmit-rate 80m;
  }
  nc {
    transmit-rate 30m;
  }
}
```

The total configured transmit rates of the aggregated interface is **10m + 20m + 80m + 30m = 140 Mbps**, meaning the transmit rate is overconfigured by 40 percent. Therefore, the software scales down the configuration to match the 100 Mbps of available bandwidth, as follows:

```
be = (10/140) * 100 = 7 percent of 100 Mbps = 7 Mbps
af = (20/140) * 100 = 14 percent of 100 Mbps = 14 Mbps
ef = (80/140) * 100 = 57 percent of 100 Mbps = 57 Mbps
nc = (30/140) * 100 = 21 percent of 100 Mbps = 21 Mbps
```

Applying Scaling Formula to Mixture of Percent and Absolute Rates

Configure the following mixture of percent and absolute rates:

```
[edit class-of-service]
schedulers {
  be {
```

```
        transmit-rate 20 percent;
    }
    af {
        transmit-rate 40 percent;
    }
    ef {
        transmit-rate 150m;
    }
    nc {
        transmit-rate 10 percent;
    }
}
```

Assuming 300 Mbps of available bandwidth, the configured percentages correlate with the following absolute rates:

```
schedulers {
    be {
        transmit-rate 60m;
    }
    af {
        transmit-rate 120m;
    }
    ef {
        transmit-rate 150m;
    }
    nc {
        transmit-rate 30m;
    }
}
```

The software scales the bandwidth allocation as follows:

```
be = (60/360) * 100 = 17 percent of 300 Mbps = 51 Mbps
af = (120/360) * 100 = 33 percent of 300 Mbps = 99 Mbps
ef = (150/360) * 100 = 42 percent of 300 Mbps = 126 Mbps
nc = (30/360) * 100 = 8 percent of 300 Mbps = 24 Mbps
```

Configuring an Aggregated Ethernet Interface

Configure an aggregated Ethernet interface with the following scheduler map:

```
[edit class-of-service]
scheduler-maps {
    aggregated-sched {
        forwarding-class be scheduler be;
        forwarding-class af scheduler af;
        forwarding-class ef scheduler ef;
        forwarding-class nc scheduler nc;
    }
}
schedulers {
    be {
        transmit-rate percent 10;
        buffer-size percent 25;
    }
    af {
        transmit-rate percent 20;
        buffer-size percent 25;
    }
}
```

```

    }
    ef {
        transmit-rate 80m;
        buffer-size percent 25;
    }
    nc {
        transmit-rate percent 30;
        buffer-size percent 25;
    }
}

```

In this case, the transmission rate for the member link scheduler map is as follows:

- **be**—7 percent
- **af**—14 percent
- **ef**—57 percent
- **nc**—21 percent

If you add a Fast Ethernet interface to the aggregate, the aggregate bandwidth is 200 Mbps, and the transmission rate for the member link scheduler map is as follows:

- **be**—10 percent
- **af**—20 percent
- **ef**—40 percent
- **nc**—30 percent

Example: Configuring Scheduling Modes on Aggregated Interfaces

You can configure class-of-service parameters, such as queuing or shaping parameters on aggregated interfaces, in either link-protect or non-link-protect mode. You can configure these parameters for per-unit schedulers, hierarchical schedulers, or shaping at the physical and logical interface level. You can control the way these parameters are applied by configuring the aggregated interface to operate in **scale** or **replicate** mode.

You can apply these parameters on the following routers:

- MX Series router interfaces on EQ DPCs
- MX Series router interfaces on MICs or MPCs through Junos OS Release 10.2 (non-link-protect mode only)
- M120 or M320 routers
- T Series router interfaces on IQ2 PICs
- PTX Series Packet Transport Routers

You can configure the applied parameters for aggregated interfaces operating in non-link-protected mode. In link-protected mode, only one link in the bundle is active at a time (the other link is a backup link) so schedulers cannot be scaled or replicated. In non-link-protected mode, all the links in the bundle are active and send traffic; however,

there is no backup link. If a link fails or is added to the bundle in non-link-protected mode, the links' traffic is redistributed among the active links.

To set the scheduling mode for aggregated interfaces, include the **scale** or **replicate** option of the **member-link-scheduler** statement at the **[edit class-of-service interfaces aen]** hierarchy level, where *n* is the configured number of the interface:

```
[edit class-of-service interfaces aen]
  member-link-scheduler (replicate | scale);
```

By default, if you do not include the **member-link-scheduler** statement, scheduler parameters are applied to the member links in the **scale** mode (also called "equal division mode").

The aggregated Ethernet interfaces are otherwise configured as usual. For more information on configuring aggregated Ethernet interfaces, see the *Junos OS Network Interfaces Library for Routing Devices*.

The following examples set **scale** mode on the **ae0** interface and **replicate** mode on the **ae1** interface.

```
[edit class-of-service]
interfaces ae0 {
  member-link-scheduler scale;
}
```

```
[edit class-of-service]
interfaces ae1 {
  member-link-scheduler replicate;
}
```



NOTE: The **member-link-scheduler** statement only appears for aggregated interfaces. You configure this statement for aggregated interfaces in non-link-protected mode. For more information about link protection modes, see the *Network Interfaces Configuration Guide*.

Aggregated interfaces support both hierarchical and per-unit schedulers. For more information about configuring schedulers, see *Configuring Schedulers*.



NOTE: The **traffic-control-profiles** statement is not supported for PTX Series Packet Transport Routers.

When interface parameters are using the **scale** option of the **member-link-scheduler** statement, the following parameters under the **[edit class-of-service traffic-control-profiles traffic-control-profile-name]** configuration are scaled on egress when hierarchical schedulers are configured:

- **shaping-rate** (PIR)
- **guaranteed-rate** (CIR)

- **delay-buffer-rate**

When interface parameters are using the **scale** option of the **member-link-scheduler** statement, the following parameters under the **[edit class-of-service schedulers scheduler-name]** configuration are scaled on egress when per-unit schedulers are configured:

- **transmit-rate**
- **buffer-size**



NOTE: You cannot apply a hierarchical scheduler at the interface set level for an **ae** interface. (Interface sets cannot be configured under an **ae** interface.)

The following configuration parameters are not supported on **ae** interfaces in non-link-protection mode:

- Input scheduler maps
- Input traffic control profiles
- Input shaping rates

The following configuration conventions are also not supported:

- Scaling of the **input-traffic-control-profile-remaining** statement.
- The **scheduler-map-chassis** statement and the **derived** option for the **ae** interface. Chassis scheduler maps should be applied under the physical interfaces.
- Dynamic and demux interfaces are not supported as part of the **ae** bundle.

Depending on whether the **scale** or **replicate** option is configured, the **member-link-scheduler** statement operates in either scaled mode (also called “equal division mode”) or replicated mode, respectively.

In scaled mode, a VLAN can have multiple flows that can be sent over multiple member links of the **ae** interface. Likewise, a member link can receive traffic from any VLAN in the **ae** bundle. In scaled mode, the physical interface bandwidth is divided equally among all member links of the **ae** bundle.

In scaled mode, the following scheduler parameter values are divided equally among the member links:

- When the parameters are configured using traffic control profiles, then the parameters scaled are the shaping rate, guaranteed rate, and delay buffer rate.
- When the parameters are configured using scheduler maps, then the parameters scaled are the transmit rate and buffer size. Shaping rate is also scaled if you configure it in bits per second (bps). Shaping rate is not scaled if you configure it as a percentage of the available interface bandwidth.

For example, consider an **ae** bundle between routers R1 and R2 consisting of three links. These are **ge-0/0/1**, **ge-0/0/2** and **ge-0/0/3** (**ae0**) on R1; and **ge-1/0/0**, **ge-1/0/1**, and **ge-1/0/2** (**ae2**) on R2. Two logical interfaces (units) are also configured on the **ae0** bundle on R1: **ae0.0** and **ae0.1**.

On **ae0**, traffic control profiles on R1 are configured as follows:

- **ae0** (the physical interface level) has a PIR of 450 Mbps.
- **ae0.0** (VLAN 100 at the logical interface level) has a PIR of 150 Mbps and a CIR of 90 Mbps.
- **ae0.1** (VLAN 200 at the logical interface level) has a PIR of 90 Mbps and a CIR of 60 Mbps.

In scaled mode, the **ae0** PIR is first divided among the member physical interfaces. Because there are three members, each receives $450 / 3 = 150$ Mbps as a derived value. So the scaled PIR for the members interfaces is 150 Mbps each.

However, there are also two logical interfaces (**ae0.0** and **ae0.1**) and VLANs (100 and 200) on **ae0**. Traffic can leave on any of the three physical interfaces (**ge-0/0/1**, **ge-0/0/2**, or **ge-0/0/3**) in the bundle. Therefore, two derived logical interfaces are added to the member links to represent the two VLANs.

There are now six logical interfaces on the physical interfaces of the links making up the **ae** bundle, one set for VLAN 100 and the other for VLAN 200:

- **ge-0/0/1.0** and **ge-0/0/1.1**
- **ge-0/0/2.0** and **ge-0/0/2.1**
- **ge-0/0/3.0** and **ge-0/0/3.1**


The traffic control profile parameters configured on **ae0.0** are divided across all the underlying logical interfaces (the unit 0s). In the same way, the traffic control profile parameters configured on **ae0.1** are divided across all the underlying logical interfaces (the unit 1s).

Therefore, the derived values of the scaled parameters on the interfaces are:

- For **ge-0/0/1.0** and **ge-0/0/2.0** and **ge-0/0/3.0**, each CIR = $90 / 3 = 30$ Mbps, and each PIR = $150 / 3 = 50$ Mbps.
- For **ge-0/0/1.1** and **ge-0/0/2.1** and **ge-0/0/3.1**, each CIR = $60 / 3 = 20$ Mbps, and each PIR = $90 / 3 = 30$ Mbps.

The scaled values are shown in [Figure 1 on page 17](#).

Figure 1: Scaled Mode for Aggregated Ethernet Interfaces

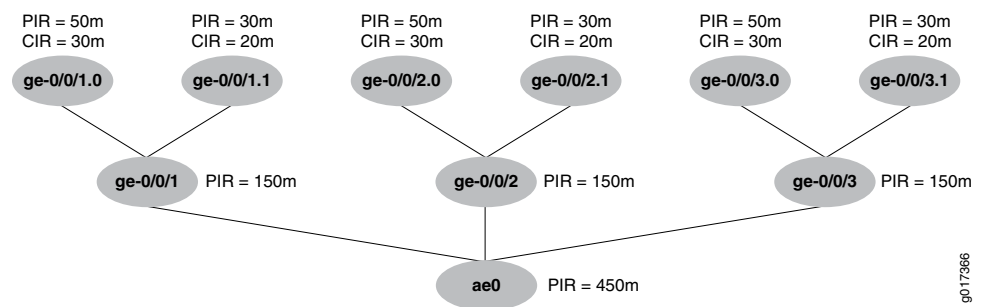

In scaled mode, when a new member link is added to the bundle, or an existing member link is either removed or fails, then the scaling factor (based on the number of active links) is recomputed and the new scheduler or traffic control profile parameters are reassigned. Only the PIR, CIR, and buffer parameters are recomputed: all other parameters are simply copied at each level.



NOTE: In `show class-of-service scheduler-map` commands, values derived in scaled mode instead of explicitly configured are flagged with `&sf**n` suffix, where *n* indicates the value of the scaling factor.

The following sample shows the output for the scheduler map named `smap-all-abs` with and without a scaling factor:

```
user@host> show class-of-service scheduler-map
Scheduler map: smap-all-abs, Index: 65452
```

```
Scheduler: q0_sch_abs, Forwarding class: be, Index: 6775
Transmit rate: 40000000 bps, Rate Limit: none, Buffer size: remainder,
Priority: low
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      <default-drop-profile>
    Medium low    any       1      <default-drop-profile>
    Medium high   any       1      <default-drop-profile>
    High          any       1      <default-drop-profile>
```

```
user@host> show class-of-service scheduler-map
Scheduler map: smap-all-abs, Index: 65452
```

```
Scheduler: q0_sch_abs&sf**3, Forwarding class: be, Index: 2128
Transmit rate: 13333333 bps, Rate Limit: none, Buffer size: remainder,
Priority: low
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      <default-drop-profile>
    Medium low    any       1      <default-drop-profile>
    Medium high   any       1      <default-drop-profile>
    High          any       1      <default-drop-profile>
```



NOTE: There can be multiple scheduler maps created with different scaling factors, depending on when the child interfaces come up. For example, if there are only two active children on a parent interface, a new scheduler map with a scaling factor of 2 is created. The scheduler map name is **smap-all-abs&**sf**2**.

In replicated mode, in contrast to scaled mode, the configured scheduler parameters are simply replicated, not divided, among all member links of the **ae** bundle.

In replicated mode, the following scheduler parameter values are replicated among the member links and logical interfaces:


- When the parameters are configured using traffic control profiles, then the parameters replicated are the shaping rate, guaranteed rate, and delay buffer rate.
- When the parameters are configured using scheduler maps, then the parameters replicated are the transmit rate and buffer size.

If the scheduler parameters in the example configuration between routers R1 and R2 are applied with the **member-link-scheduler replicate** statement and option, the following parameters are applied:

- The **ae0** PIR is copied among the member physical interfaces. Each receives 450 Mbps as a PIR.
- For each logical interface unit **.0**, the configured PIR and CIR for **ae0.0** is replicated (copied). Each logical interface unit **.0** receives a PIR of 150 Mbps and a CIR of 90 Mbps.
- For each logical interface unit **.1**, the configured PIR and CIR for **ae0.1** is replicated (copied). Each logical interface unit **.1** receives a PIR of 90 Mbps and a CIR of 60 Mbps.

The replicated values are shown in [Figure 2 on page 18](#).

Figure 2: Replicated Mode for Aggregated Ethernet Interfaces

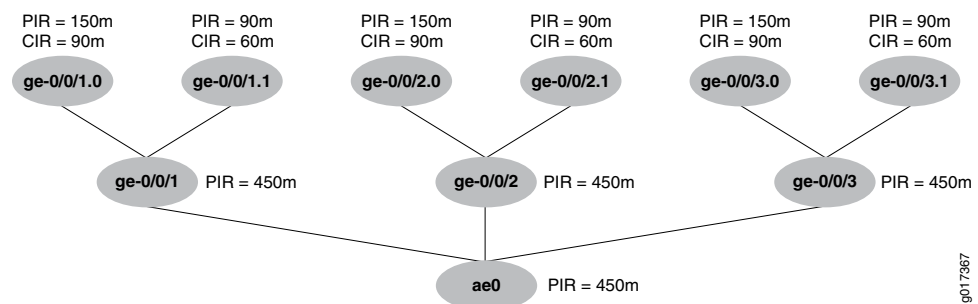

In replicated mode, when a new member link is added to the bundle, or an existing member link is either removed or fails, the values are either copied or deleted from the required levels.

- Related Documentation**
- *Schedulers Overview*
 - *Default Schedulers Overview*
 - *Configuring a Scheduler*

CHAPTER 4

Configuration Statements

- [\[edit class-of-service\] Hierarchy Level](#) on page 21
- [buffer-size \(Schedulers\)](#) on page 26
- [drop-profile \(Schedulers\)](#) on page 27
- [drop-profile-map \(Schedulers\)](#) on page 27
- [excess-priority](#) on page 28
- [excess-rate](#) on page 29
- [forwarding-class \(Interfaces\)](#) on page 30
- [interfaces \(CoS\)](#) on page 31
- [loss-priority \(Scheduler Drop Profiles\)](#) on page 33
- [priority \(Schedulers\)](#) on page 34
- [protocol \(Schedulers\)](#) on page 35
- [scheduler-map \(Interfaces and Traffic-Control Profiles\)](#) on page 36
- [scheduler-maps \(For Most Interface Types\)](#) on page 36
- [schedulers \(CoS\)](#) on page 37
- [transmit-rate \(Schedulers\)](#) on page 38
- [unit](#) on page 40

[\[edit class-of-service\] Hierarchy Level](#)

```
class-of-service {
  adaptive-shapers {
    adaptive-shaper-name {
      trigger type shaping-rate (bps | percent percentage);
    }
  }
  classifiers {
    type classifier-name {
      forwarding-class class-name {
        loss-priority (high | low | medium-high | medium-low) code-points [ aliases bits ];
      }
      import (classifier-name | default);
    }
  }
  code-point-aliases {
```

```

    (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) {
        alias-name bits;
    }
}
copy-plp-all;
drop-profiles {
    profile-name {
        fill-level percentage drop-probability percentage;
        interpolate {
            drop-probability value;
            fill-level value;
        }
    }
}
fabric {
    scheduler-map {
        priority (high | low) scheduler scheduler-name;
    }
}
forwarding-class-map {
    map-name {
        class class-name queue-num queue-number <restricted-queue queue-number>;
    }
}
forwarding-classes {
    class class-name queue-num queue-number priority (high | low);
    queue queue-number class-name priority (high | low);
}
forwarding-policy {
    class class-name {
        classification-override {
            forwarding-class class-name;
        }
    }
    next-hop-map map-name {
        forwarding-class class-name {
            discard;
            lsp-next-hop [ lsp-regular-expressions ];
            next-hop [ next-hop-names ];
            non-lsp-next-hop;
        }
    }
}
fragmentation-maps {
    map-name {
        forwarding-class class-name {
            drop-timeout milliseconds;
            fragment-threshold bytes;
            multilink-class number;
            no-fragmentation;
        }
    }
}
host-outbound-traffic {
    dscp-code-point value;
    forwarding-class class-name;
}

```

```

ieee-802.1 {
    default value;
    rewrite-rules;
}
translation-table to-802.1p-from-dscp table-name;
}
interfaces {
    ... the interfaces subhierarchy appears after the main [edit class-of-service] hierarchy
    ...
}
loss-priority-maps {
    frame-relay-de name {
        loss-priority level code-points [alias | bits ];
    }
}
}
loss-priority-rewrites {
    frame-relay-de name {
        loss-priority level code-point (alias | bits );
    }
}
}
restricted-queues {
    forwarding-class class-name queue queue-number;
}
}
rewrite-rules {
    (dscp | dscp-ipv6 | exp | frame-relay-de | ieee-802.1 | inet-precedence) rewrite-rule {
        forwarding-class class-name {
            loss-priority level code-point (alias | bits );
        }
        import (rewrite-rule | default);
    }
}
}
routing-instances routing-instance-name {
    classifiers {
        dscp (classifier-name | default);
        dscp-ipv6 (classifier-name | default);
        exp (classifier-name | default);
        ieee-208.1 (classifier-name | default | encapsulated | vlan-tag);
    }
}
}
scheduler-maps {
    map-name {
        forwarding-class class-name scheduler scheduler-name;
    }
}
}
schedulers {
    scheduler-name {
        buffer-size (exact | percent percentage | remainder | temporal microseconds);
        drop-profile-map loss-priority (any | high | low | medium-high | medium-low)
            protocol (any | non-tcp | tcp) drop-profile profile-name;
        excess-priority (high | low | medium-high | medium-low);
        excess-rate percent percentage;
        priority (high | low | medium-high | medium-low | strict-high);
        shaping-rate (bps | percent percentage);
        transmit-rate (bps | percent percentage | remainder) <exact | rate-limit>;
    }
}
}

```

```

}
traceoptions {
  file <filename> <files number> <match regular-expression> <size maximum-file-size>
    <world-readable | no-world-readable>;
  flag <flag>;
  no-remote-trace;
}
traffic-control-profiles {
  profile-name {
    delay-buffer-rate (bps | percent percentage);
    excess-rate (percent percentage | proportion value);
    guaranteed-rate (bps | percent percentage) <burst-size bytes>;
    overhead-accounting (frame-mode | cell-mode) <bytes byte-value>;
    scheduler-map map-name;
    shaping-rate (bps | percent percentage) <burst-size bytes>;
  }
}
translation-table {
  to-802.1p-from-dscp table-name {
    to-code-point 3-bit-pattern from-code-points [ 6-bit-patterns ];
  }
  to-dscp-from-dscp table-name {
    to-code-point 6-bit-pattern from-code-points [ 6-bit-patterns ];
  }
  to-dscp-ipv6-from-dscp-ipv6 table-name {
    to-code-point 6-bit-pattern from-code-points [ 6-bit-patterns ];
  }
  to-exp-from-exp table-name {
    to-code-point 3-bit-pattern from-code-points [ 3-bit-patterns ];
  }
  to-inet-precedence-from-inet-precedence table-name {
    to-code-point 3-bit-pattern from-code-points [ 3-bit-patterns ];
  }
}
tri-color;
}

class-of-service {
  interfaces {
    interface-name {
      excess-bandwidth-share (equal | proportional value);
      input-excess-bandwidth-share (equal | proportional value);
      input-scheduler-map map-name;
      input-shaping-rate bps;
      input-traffic-control-profile profile-name;
      input-traffic-control-profile-remaining profile-name;
      output-forwarding-class-map map-name;
      output-traffic-control-profile profile-name;
      output-traffic-control-profile-remaining profile-name;
      scheduler-map map-name;
      scheduler-map-chassis map-name;
      shaping-rate bps;
      unit logical-unit-number {
        adaptive-shaper adaptive-shaper-name;
        classifiers {
          dscp (classifier-name | default) {

```

```



        family [ inet mpls ];
    }
    dscp-ipv6 (classifier-name | default) {
        family [ inet mpls ];
    }
    exp (classifier-name | default);
    ieee-208.1 (classifier-name | default) <vlan-tag (inner | outer)>;
    ieee-208.1ad (classifier-name | default);
    inet-precedence (classifier-name | default);
}
forwarding-class class-name;
fragmentation-map map-name;
input-scheduler-map map-name;
input-shaping-rate bps;
input-traffic-control-profile profile-name shared-instance instance-name;
loss-priority-maps {
    (map-name | default);
}
loss-priority-rewrites {
    (map-name | default);
}
output-forwarding-class-map map-name;
output-traffic-control-profile profile-name shared-instance instance-name;
per-session-scheduler;
rewrite-rules {
    dscp (rule-name | default) <protocol mpls>;
    dscp-ipv6 (rule-name | default);
    exp (rule-name | default) <protocol [ mpls-any | mpls-inet-both |
        mpls-inet-both-non-vpn ]>;
    exp-push-push-push default;
    exp-swap-push-push default;
    frame-relay-de (rewrite-name | default);
    ieee-802.1 (rewrite-name | default) <vlan-tag (outer | outer-and-inner)>;
    ieee-802.1ad (rewrite-name | default) <vlan-tag (outer | outer-and-inner)>;
    inet-precedence (rewrite-name | default) <protocol mpls>;
}
scheduler-map map-name;
shaping-rate bps;
translation-table (to-dscp-from-dscp | to-dscp-ipv6-from-dscp-ipv6 |
    to-exp-from-exp | to-inet-precedence-from-inet-precedence) table-name;
}
}
interface-set interface-set-name {
    excess-bandwidth-share (equal | proportional value);
    input-excess-bandwidth-share (equal | proportional value);
    input-traffic-control-profile profile-name;
    input-traffic-control-profile-remaining profile-name;
    internal-node;
    output-traffic-control-profile profile-name;
    output-traffic-control-profile-remaining profile-name;
}
}
}

```

Related Documentation

- *Notational Conventions Used in Junos OS Configuration Hierarchies*

buffer-size (Schedulers)

Syntax	buffer-size (percent <i>percentage</i> remainder temporal <i>microseconds</i>);
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Specify buffer size.
<div>  <p>NOTE: On PTX Series Packet Transport Routers, buffer-size cannot be configured on rate-limited queues.</p> </div>	
Default	If you do not include this statement, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are 95, 0, 0, 5, 0, 0, 0, and 0 percent, respectively.
Options	percent <i>percentage</i> —Buffer size as a percentage of the total buffer. Range: 0 through 100
<div>  <p>NOTE: For the routers with channelized OC12/STM4 IQE PIC with SFP (PB-4CHOC12-STM4-IQE-SFP) and channelized OC48/STM16 IQE PIC with SFP (PB-1CHOC48-STM16-IQE-SFP), the minimum buffer allocated to any queue is 18,432 bytes. If a queue is configured to have a buffer size less than 18K, the queue retains a buffer size of 18,432 bytes.</p> </div>	
	remainder —Remaining buffer available.
	temporal <i>microseconds</i> —Buffer size as a temporal value. The queuing algorithm starts dropping packets when it queues more than a computed number of bytes. This maximum is computed by multiplying the logical interface speed by the configured temporal value. Range: The ranges vary by platform.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Managing Congestion on the Egress Interface by Configuring the Scheduler Buffer Size</i> • <i>Buffer Size Temporal Value Ranges by Router Type</i>

drop-profile (Schedulers)

Syntax	<code>drop-profile <i>profile-name</i>;</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i> drop-profile-map loss-priority (any low medium-low medium-high high) protocol (any non-tcp tcp)]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Define drop profiles for RED. When a packet arrives, RED checks the queue fill level. If the fill level corresponds to a nonzero drop probability, the RED algorithm determines whether to drop the arriving packet.
Options	<i>profile-name</i> —Name of the drop profile.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Determining Packet Drop Behavior by Configuring Drop Profile Maps for Schedulers</i> • <i>Managing Congestion Using RED Drop Profiles and Packet Loss Priorities</i>

drop-profile-map (Schedulers)

Syntax	<code>drop-profile-map loss-priority (any low medium-low medium-high high) protocol(any non-tcp tcp) drop-profile (Schedulers) <i>profile-name</i>;</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Define the loss-priority value for a drop profile. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Default Schedulers Overview</i> • <i>Determining Packet Drop Behavior by Configuring Drop Profile Maps for Schedulers</i>

excess-priority


Syntax	<code>excess-priority [low medium-low medium-high high none];</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>]
Release Information	Statement introduced in Junos OS Release 9.3. Option none introduced in Junos OS Release 11.4.
Description	Determine the priority of excess bandwidth traffic on a scheduler.



NOTE: For Link Services IQ (LSQ) PICs or Multiservices PIC (MS-PICs), the **excess-priority** statement is allowed for consistency, but ignored. If an explicit priority is not configured for these interfaces, a default low priority is used. This default priority is also used in the excess region.

Options	<p>low—Excess traffic for this scheduler has low priority.</p> <p>medium-low—Excess traffic for this scheduler has medium-low priority.</p> <p>medium-high—Excess traffic for this scheduler has medium-high priority.</p> <p>high—Excess traffic for this scheduler has high priority.</p> <p>none—System does not demote the priority of guaranteed traffic when the bandwidth exceeds the shaping rate or the guaranteed rate.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Excess Bandwidth Sharing on IQE PICs</i>• <i>Bandwidth Sharing on Nonqueueing Packet Forwarding Engines Overview</i>• <i>Managing Excess Bandwidth Distribution on Static Interfaces on MICs and MPCs</i>

excess-rate

Syntax	<code>excess-rate (percent <i>percentage</i> proportion <i>value</i>);</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>], [edit class-of-service traffic-control-profiles <i>traffic-control-profile-name</i>]
Release Information	Statement introduced in Junos OS Release 9.3. Application to the Multiservices PIC added in Junos OS Release 9.5. Application to the MIC and MPC interfaces added in Junos OS Release 10.1. Statement introduced in Junos OS Release 12.1X48R2 for PTX Series Packet Transport Routers.
Description	For an Enhanced IQ PIC interfaces, Multiservices PIC interfaces, or MX Series router interfaces on MPCs or MICs, and T4000 router interfaces on Type 5 FPCs and EX Series switches, determine the percentage or proportion of excess bandwidth traffic to share.
<div>  <p>NOTE: The proportion option provides a greater range of values over the percent option and hence influences the priorities assigned to the queues.</p> </div>	
Options	<p>percentage—Percentage of the excess bandwidth to share. Range: 0 through 100 percent Default: Excess bandwidth is shared in proportion to the configured transmit rate of each queue.</p> <p>value—(M Series, MX Series, T Series routers and EX Series switches only) Proportion of the excess bandwidth to share. Option available at the [edit class-of-service traffic-class-profiles <i>traffic-control-profile-name</i>] hierarchy level only. Range: 0 through 1000</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring Scheduler Transmission Rate Configuring Excess Bandwidth Sharing on IQE PICs Allocating Excess Bandwidth Among Frame Relay DLCIs on Multiservices PICs Managing Excess Bandwidth Distribution on Static Interfaces on MICs and MPCs

forwarding-class (Interfaces)

Syntax	<code>forwarding-class <i>class-name</i>;</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series routers.
Description	Associate a forwarding class configuration or default mapping with a specific interface.
Options	<i>class-name</i> —Name of the forwarding class.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Applying Forwarding Classes to Interfaces</i>

interfaces (CoS)

```
Syntax interfaces {
    interface-name {
        classifiers{
            dscp(classifier-name | default) {
            }
            ieee-802.1 (classifier-name | default) vlan-tag (inner | outer | classifier-name);
            inet-precedence (rewrite-name | default);
        }
        input-scheduler-map map-name;
        input-shaping-rate rate;
        irb {
            unit logical-unit-number {
                classifiers {
                    type (classifier-name | default);
                }
                rewrite-rules {
                    dscp (rewrite-name | default);
                    dscp-ipv6 (rewrite-name | default);
                    exp (rewrite-name | default) protocol protocol-types;
                    ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);
                    inet-precedence (rewrite-name | default);
                }
            }
        }
        member-link-scheduler (replicate | scale);
        rewrite-rules {
            dscp (rewrite-name | default);
            ieee-802.1 (rewrite-name | default) vlan-tag (outer);
            inet-precedence (rewrite-name | default);
        }
    }
    scheduler-map map-name;
    scheduler-map-chassis map-name;
    shaping-rate rate;
    unit logical-unit-number {
        classifiers {
            type (classifier-name | default) family (mpls | inet);
        }
        forwarding-class class-name;
        fragmentation-map map-name;
        input-shaping-rate (percent percentage | rate);
        input-traffic-control-profile profile-name shared-instance instance-name;
        output-traffic-control-profile profile-name shared-instance instance-name;
        per-session-scheduler;
        rewrite-rules {
            dscp (rewrite-name | default);
            dscp-ipv6 (rewrite-name | default);
            exp (rewrite-name | default) protocol protocol-types;
            exp-push-push-push default;
            exp-swap-push-push default;
            ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);
            inet-precedence (rewrite-name | default);
        }
    }
}
```

```
    }  
    scheduler-map map-name;  
    shaping-rate rate;  
    translation-table (to-dscp-from-dscp | to-dscp-ipv6-from-dscp-ipv6 | to-exp-from-exp  
        | to-inet-precedence-from-inet-precedence) table-name;  
    }  
}  
interface-set interface-set-name {  
    excess-bandwidth-share;  
    internal-node;  
    output-traffic-control-profile profile-name;  
    output-traffic-control-profile-remaining profile-name;  
}  
}
```

Hierarchy Level [edit class-of-service]

Release Information Statement introduced before Junos OS Release 7.4.
Interface-set level added in Junos OS Release 8.5.

Description Configure interface-specific CoS properties for incoming packets.

Options The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Understanding How Behavior Aggregate Classifiers Prioritize Trusted Traffic*
- *Configuring Rewrite Rules*

loss-priority (Scheduler Drop Profiles)

Syntax	loss-priority (any high low medium-high medium-low);
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i> drop-profile-map]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Specify a loss priority to which to apply a drop profile. The drop profile map sets the drop profile for a specific PLP and protocol type. The inputs for the map are the PLP designation and the protocol type. The output is the drop profile.
Options	any —The drop profile applies to packets with any PLP.



NOTE: On ACX Series Routers, only the **any** option is supported when you configure the **non-tcp** option for [protocol](#).

high—The drop profile applies to packets with high PLP.

low—The drop profile applies to packets with low PLP.


medium-high—The drop profile applies to packets with medium-high PLP.

medium-low—The drop profile applies to packets with medium-low PLP.

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.

Related Documentation	<ul style="list-style-type: none"> • <i>Default Schedulers Overview</i> • <i>Determining Packet Drop Behavior by Configuring Drop Profile Maps for Schedulers</i> • <i>Configuring Schedulers for Priority Scheduling</i> • <i>Configuring Tricolor Marking</i> • protocol (Schedulers) on page 35
------------------------------	---

priority (Schedulers)

Syntax	<code>priority <i>priority-level</i>;</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Specify the packet-scheduling priority value.
Options	<p><i>priority-level</i> can be one of the following:</p> <ul style="list-style-type: none">• low—Scheduler has low priority.• medium-low—Scheduler has medium-low priority.• medium-high—Scheduler has medium-high priority.• high—Scheduler has high priority. Assigning high priority to a queue prevents the queue from being underserved.• strict-high—Scheduler has strictly high priority. Configure a high priority queue with unlimited transmission bandwidth available to it. As long as it has traffic to send, the strict-high priority queue receives precedence over low, medium-low, and medium-high priority queues, but not high priority queues. You can configure strict-high priority on only one queue per interface.
<div> NOTE: The strict-high priority level is the only priority level supported on ACX Series Routers. However, multiple strict-high priority queues can be configured per interface on ACX Series Routers.</div>	
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Schedulers for Priority Scheduling</i>

protocol (Schedulers)

Syntax	protocol (any non-tcp tcp);
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i> drop-profile-map]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Specify the protocol type for the specified scheduler.
Options	any —Accept any protocol type. non-tcp —(ACX Series Routers, M Series and T Series (except T4000) routers only) Accept any protocol type other than TCP/IP.



NOTE: On ACX Series Routers, when you configure the **non-tcp** option, only the **any** option is supported for [loss-priority](#).

tcp—(ACX Series Routers, M Series and T Series (except T4000) routers only) Accept TCP/IP protocol type.

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Schedulers</i>

scheduler-map (Interfaces and Traffic-Control Profiles)

Syntax	<code>scheduler-map <i>map-name</i>;</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i>], [edit class-of-service interfaces <i>interface-name</i> <i>unit logical-unit-number</i>], [edit class-of-service traffic-control-profiles]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For Gigabit Ethernet IQ, Channelized IQ PICs, and FRF.15 and FRF.16 LSQ interfaces only, associate a scheduler map name with an interface or with a traffic-control profile.</p> <p>For channelized OC12 intelligent queuing (IQ), channelized T3 IQ, channelized E1 IQ, and Gigabit Ethernet IQ interfaces only, you can associate a scheduler map name with a logical interface.</p>
Options	<i>map-name</i> —Name of the scheduler map.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Schedulers</i>• <i>Oversubscribing Interface Bandwidth</i>• <i>output-traffic-control-profile</i>

scheduler-maps (For Most Interface Types)

Syntax	<pre>scheduler-maps { <i>map-name</i> { forwarding-class <i>class-name</i> scheduler <i>scheduler-name</i>; } }</pre>
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify a scheduler map name and associate it with the scheduler configuration and forwarding class.
Options	<i>map-name</i> —Name of the scheduler map. The remaining statements are explained separately. <i>See Configuring Schedulers .</i>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

schedulers (CoS)

Syntax	<pre> schedulers { scheduler-name { adjust-minimum <i>rate</i>; adjust-percent <i>percentage</i>; buffer-size (<i>seconds</i> percent <i>percentage</i> remainder temporal <i>microseconds</i>); drop-profile-map loss-priority (any low medium-low medium-high high) <i>protocol</i> (any non-tcp tcp) drop-profile <i>profile-name</i>; excess-priority [low medium-low medium-high high none]; excess-rate (percent <i>percentage</i> proportion <i>value</i>); priority <i>priority-level</i>; shaping-rate (percent <i>percentage</i> <i>rate</i>); transmit-rate (percent <i>percentage</i> <i>rate</i> remainder) <exact rate-limit>; } } </pre>
Hierarchy Level	[edit class-of-service]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.1X48 for PTX Series routers.</p>
Description	Specify the scheduler name and parameter values.
Options	<p><i>scheduler-name</i>—Name of the scheduler to be configured.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Schedulers Overview</i> • <i>Default Schedulers Overview</i> • <i>Configuring Schedulers</i> • <i>Configuring a Scheduler</i>

transmit-rate (Schedulers)

Syntax	<code>transmit-rate (rate percent <i>percentage</i> remainder) <exact rate-limit>;</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>rate-limit option introduced in Junos OS Release 8.3. Applied to the Multiservices PICs in Junos OS Release 9.4.</p> <p>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Routers.</p>
Description	Specify the transmit rate or percentage for a scheduler.
Default	If you do not include this statement, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are 95, 0, 0, 5, 0, 0, 0, and 0 percent, respectively.
Options	<p>exact—(Optional) Enforce the exact transmission rate. Under sustained congestion, a rate-controlled queue that goes into negative credit fills up and eventually drops packets. This value should never exceed the rate-controlled amount. For PTX Series Packet Transport Routers, this option is allowed only on the non-strict-high (high, medium-high, medium-low, or low) queues.</p> <p>percent <i>percentage</i>—Percentage of transmission capacity. A percentage of zero drops all packets in the queue.</p> <p>Range: 0 through 100 percent for M, MX and T Series routers and EX Series switches; 1 through 100 percent for PTX Series Packet Transport Routers; 0 through 200 percent for the SONET/SDH OC48/STM16 IQE PIC</p>



NOTE:

- On M Series Multiservice Edge Routers, for interfaces configured on 4-port E1 and 4-port T1 PICs only, you can configure a *percentage* value only from 11 through 100. These two PICs do not support transmission rates less than 11 percent.
- The configuration of the `transmit-rate percent 0 exact` statement at the [edit class-of-service `schedulers` *scheduler-name*] hierarchy is ineffective on T4000 routers with Type 5 FPC.
- On MIC and MPC interfaces on MX Series routers, when the transmit rate is configured as a percentage and `exact` or `rate-limit` is enabled on a queue, the shaping rate of the parent node is used to compute the transmit rate. If `exact` or `rate-limit` is not configured, the guaranteed rate of the parent node is used to compute the transmit rate.

rate—Transmission rate, in bps. You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).

Range: 3200 through 6,400,000,000,000 bps



NOTE: For all MX Series interfaces, the rate can be from 65,535 through 6,400,000,000,000 bps.

rate-limit—(Optional) Limit the transmission rate to the rate-controlled amount by applying a policing action to the queue. Packets are hard-dropped when traffic exceeds the specified maximum transmission rate.



NOTE: For PTX Series Packet Transport Routers, this option is allowed only on the strict-high queue. We recommend that you configure rate limit on strict-high queues because the other queues may not meet their guaranteed bandwidths. The **rate-limit** option cannot rate limit the queue if strict-priority scheduling is configured with the *strict-priority-scheduler* statement.



NOTE: The configuration of the **rate-limit** statement is supported on T4000 routers only with a Type 5 FPC.

remainder—Use the remaining rate available.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Schedulers*
- *Configuring Scheduler Transmission Rate*
- *Understanding Scheduling on PTX Series Routers*

unit

Syntax

```
unit logical-unit-number {
    classifiers {
        type (classifier-name | default) family (mpls | all);
    }
    forwarding-class class-name;
    fragmentation-map map-name;
    input-traffic-control-profile profile-name shared-instance instance-name;
    output-traffic-control-profile profile-name shared-instance instance-name;
    per-session-scheduler;
    rewrite-rules {
        dscp (rewrite-name | default);
        dscp-ipv6 (rewrite-name | default);
        exp (rewrite-name | default) protocol protocol-types;
        exp-push-push-push default;
        exp-swap-push-push default;
        ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);
        inet-precedence (rewrite-name | default);
    }
    scheduler-map map-name;
    shaping-rate rate;
}
```

Hierarchy Level [edit class-of-service [interfaces](#) interface-name]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.

Options *logical-unit-number*—Number of the logical unit.

Range: 0 through 16,384

The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Understanding How Behavior Aggregate Classifiers Prioritize Trusted Traffic*
- *Configuring Rewrite Rules*