

# Traffic Management Feature Guide for QFX Switches

Release

15.1X53-D30



Modified: 2016-06-09

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Traffic Management Feature Guide for QFX Switches*  
15.1X53-D30  
Copyright © 2016, Juniper Networks, Inc.  
All rights reserved.

The information in this document is current as of the date on the title page.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

	About the Documentation . . . . .	xxi
	Documentation and Release Notes . . . . .	xxi
	Supported Platforms . . . . .	xxi
	Using the Examples in This Manual . . . . .	xxi
	Merging a Full Example . . . . .	xxii
	Merging a Snippet . . . . .	xxii
	Documentation Conventions . . . . .	xxiii
	Documentation Feedback . . . . .	xxv
	Requesting Technical Support . . . . .	xxv
	Self-Help Online Tools and Resources . . . . .	xxv
	Opening a Case with JTAC . . . . .	xxvi
<b>Part 1</b>	<b>CoS Overview</b>	
<b>Chapter 1</b>	<b>Basic Concepts . . . . .</b>	<b>3</b>
	Overview of Junos OS CoS . . . . .	4
	CoS Standards . . . . .	4
	How Junos OS CoS Works . . . . .	5
	Default CoS Behavior . . . . .	6
	CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems . . . . .	6
	Configuring CoS . . . . .	14
	Understanding Junos CoS Components . . . . .	17
	Code-Point Aliases . . . . .	18
	Policers . . . . .	18
	Classifiers . . . . .	18
	Forwarding Classes . . . . .	19
	Forwarding Class Sets . . . . .	20
	Flow Control (Ethernet PAUSE, PFC, and ECN) . . . . .	20
	WRED Profiles and Tail Drop . . . . .	21
	Schedulers . . . . .	22
	Rewrite Rules . . . . .	22
	Assigning CoS Components to Interfaces . . . . .	23
	Understanding CoS Packet Flow . . . . .	24
	Understanding Default CoS Settings . . . . .	26
	Default Forwarding Classes and Queue Mapping . . . . .	27
	Default Forwarding Class Sets (Priority Groups) . . . . .	27
	Default Code-Point Aliases . . . . .	28
	Default Classifiers . . . . .	29
	Default Rewrite Rules . . . . .	32
	Default Drop Profile . . . . .	32

Default Schedulers . . . . .	32
Default Scheduler Maps . . . . .	34
CoS Inputs and Outputs Overview . . . . .	35
Overview of Policers . . . . .	35
Policer Overview . . . . .	36
Policer Types . . . . .	36
Policer Actions . . . . .	37
Policer Colors . . . . .	38
Filter-Specific Policers . . . . .	38
Suggested Naming Convention for Policers . . . . .	39
Policer Counters . . . . .	39
Policer Algorithms . . . . .	39
How Many Policers Are Supported? . . . . .	40
Policers Can Limit Egress Firewall Filters . . . . .	40
 <b>Part 2</b>	
 <b>Chapter 2</b>	
<b>Classifying and Rewriting Traffic</b>	
<b>Using Classifiers, Forwarding Classes, and Rewrite Rules . . . . .</b>	<b>45</b>
Understanding CoS Classifiers . . . . .	46
Interfaces and Output Queues . . . . .	46
Classifier Support by Type . . . . .	47
Behavior Aggregate Classifiers . . . . .	47
Default Behavior Aggregate Classification . . . . .	48
Importing a Classifier . . . . .	48
PFC Priorities . . . . .	49
Fixed Classifiers on Ethernet Interfaces . . . . .	50
Multifield Classifiers . . . . .	50
MPLS EXP Classifiers . . . . .	51
Packet Classification for IRB Interfaces . . . . .	51
Defining CoS BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p) . . . . .	52
Example: Configuring Classifiers . . . . .	53
Understanding CoS MPLS EXP Classifiers and Rewrite Rules . . . . .	56
EXP Classifiers . . . . .	57
EXP Rewrite Rules . . . . .	58
Schedulers . . . . .	59
Configuring a Global MPLS EXP Classifier . . . . .	59
Configuring Rewrite Rules for MPLS EXP Classifiers . . . . .	60
Understanding Host Inbound Traffic Classification . . . . .	61
Understanding Default CoS Scheduling and Classification . . . . .	62
Default Classification . . . . .	62
Default Scheduling . . . . .	65
Default DCBX Advertisement . . . . .	67
Default Scheduling and Classification Summary . . . . .	67

Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces . . . . .	68
Supported Classifier and Rewrite Rule Types . . . . .	68
Ethernet Interfaces Supported for Classifier and Rewrite Rule	
Configuration . . . . .	70
Interface Types That Support Classifier and Rewrite Rule	
Configuration . . . . .	70
Classifier and Rewrite Rule Physical and Logical Ethernet Interface	
Support . . . . .	71
Routed VLAN Interfaces (RVIs) and Integrated Routing and Bridging	
(IRB) Interfaces . . . . .	73
Default Classifiers . . . . .	73
Default Rewrite Rules . . . . .	74
Classifier Precedence . . . . .	74
Classifier Precedence on Physical Ethernet Interfaces (QFX5200,	
QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric	
Systems) . . . . .	74
Classifier Precedence on Logical Ethernet Interfaces (All Switches) . . .	75
Classifier Behavior and Limitations . . . . .	76
Rewrite Rule Precedence and Behavior . . . . .	77
Classifier and Rewrite Rule Configuration Interaction with Ethernet Interface	
Configuration . . . . .	77
QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switch	
Scenarios . . . . .	79
Understanding CoS Code-Point Aliases . . . . .	81
Defining CoS Code-Point Aliases . . . . .	83
Understanding CoS Forwarding Classes . . . . .	84
Default Forwarding Classes . . . . .	84
Forwarding Class Configuration Rules . . . . .	85
Queue Assignment Rules . . . . .	85
Scheduling Rules . . . . .	86
Rewrite Rules . . . . .	87
Lossless Transport Support . . . . .	87
Defining CoS Forwarding Classes . . . . .	87
Example: Configuring Forwarding Classes . . . . .	88
Understanding CoS Forwarding Class Sets (Priority Groups) . . . . .	91
Defining CoS Forwarding Class Sets . . . . .	92
Example: Configuring Forwarding Class Sets . . . . .	93
Understanding CoS Rewrite Rules . . . . .	97
Defining CoS Rewrite Rules . . . . .	100
Troubleshooting an Unexpected Rewrite Value . . . . .	101

## Part 3

### Chapter 3

## Scheduling Traffic

Using Schedulers . . . . .	107
Understanding Default CoS Scheduling and Classification . . . . .	108
Default Classification . . . . .	108
Default Scheduling . . . . .	111
Default DCBX Advertisement . . . . .	113

Default Scheduling and Classification Summary . . . . .	113
Understanding CoS Scheduling Behavior and Configuration Considerations . . . .	114
Understanding CoS Virtual Output Queues (VOQs) on QFX10000 Switches . . . .	120
VOQ Architecture . . . . .	120
Round-Trip Time Buffering . . . . .	121
Requesting and Granting Egress Port Bandwidth . . . . .	121
VOQ Advantages . . . . .	122
Eliminate Head-of-Line Blocking . . . . .	122
Increase Fabric Efficiency and Utilization . . . . .	124
Understanding CoS Port Schedulers on QFX Switches . . . . .	125
Queue Scheduling Components . . . . .	126
Default Schedulers . . . . .	128
Scheduling Priority . . . . .	129
Bandwidth Scheduling . . . . .	131
Minimum Guaranteed Bandwidth . . . . .	131
Maximum Bandwidth (Rate Shaping on Low Priority Queues and LAGs) . . . . .	132
Limiting Bandwidth Consumed by Strict-High Priority Queues . . . . .	133
Sharing Extra Bandwidth (Excess Rate on Low Priority Queues) . . . . .	134
Scheduler Drop-Profile Maps . . . . .	135
Buffer Size . . . . .	135
Explicit Congestion Notification . . . . .	137
Scheduler Maps . . . . .	137
Defining CoS Queue Schedulers for Port Scheduling . . . . .	138
Example: Configuring Queue Schedulers for Port Scheduling . . . . .	140
Troubleshooting Egress Bandwidth That Exceeds the Configured Minimum Bandwidth . . . . .	145
Troubleshooting Egress Bandwidth That Exceeds the Configured Maximum Bandwidth . . . . .	147
Defining CoS Queue Scheduling Priority . . . . .	148
Example: Configuring Queue Scheduling Priority . . . . .	149
Understanding CoS Traffic Control Profiles . . . . .	153
Understanding CoS Priority Group Scheduling . . . . .	154
Priority Group Scheduling Components . . . . .	155
Default Traffic Control Profile . . . . .	155
Guaranteed Rate (Minimum Guaranteed Bandwidth) . . . . .	155
Sharing Extra Bandwidth . . . . .	156
Shaping Rate (Maximum Bandwidth) . . . . .	156
Scheduler Maps . . . . .	156
Defining CoS Traffic Control Profiles (Priority Group Scheduling) . . . . .	157
Example: Configuring Traffic Control Profiles (Priority Group Scheduling) . . . .	158
Understanding CoS Hierarchical Port Scheduling (ETS) . . . . .	161
Hierarchical Scheduling Tiers . . . . .	161
Hierarchical Scheduling and ETS . . . . .	162
ETS Advertisement in DCBX . . . . .	164
Hierarchical Scheduling Process . . . . .	164
Strict-High Priority Queues and Hierarchical Scheduling . . . . .	165
Default Hierarchical Scheduling . . . . .	166
Example: Configuring CoS Hierarchical Port Scheduling (ETS) . . . . .	167

Understanding CoS Priority Group and Queue Guaranteed Minimum Bandwidth . . . . .	191
Bandwidth . . . . .	191
Guaranteeing Bandwidth Using Hierarchical Scheduling . . . . .	192
Priority Group Guaranteed Rate (Guaranteed Minimum Bandwidth) . . . . .	193
Queue Transmit Rate (Guaranteed Minimum Bandwidth) . . . . .	193
Example: Configuring Minimum Guaranteed Output Bandwidth . . . . .	194
Understanding CoS Priority Group Shaping and Queue Shaping (Maximum Bandwidth) . . . . .	199
Priority Group Shaping . . . . .	199
Queue Shaping . . . . .	199
Shaping Maximum Bandwidth Using Hierarchical Scheduling . . . . .	200
Example: Configuring Maximum Output Bandwidth . . . . .	201
Understanding CoS WRED Drop Profiles . . . . .	205
Drop Profile Parameters . . . . .	205
Default Drop Profile . . . . .	206
Packet Drop Method . . . . .	207
Drop Profile Maps . . . . .	207
Congestion Prevention . . . . .	207
Configuring a WRED Drop Profile and Applying it to an Output Queue . . . . .	207
Drop Profiles on Explicit Congestion Notification Enabled Queues . . . . .	208
Configuring CoS WRED Drop Profiles . . . . .	209
Example: Configuring WRED Drop Profiles . . . . .	210
Configuring CoS Drop Profile Maps . . . . .	213
Example: Configuring Drop Profile Maps . . . . .	213
Understanding CoS Explicit Congestion Notification . . . . .	216
How ECN Works . . . . .	216
ECN Bits in the DiffServ Field . . . . .	217
End-to-End ECN Behavior . . . . .	218
ECN Compared to PFC and Ethernet PAUSE . . . . .	220
WRED Drop Profile Control of ECN Thresholds . . . . .	221
Support, Limitations, and Notes . . . . .	224
Example: Configuring ECN . . . . .	224

## Part 4

## Data Center Bridging (PFC, DCBX) and Flow Control

### Chapter 4

Using Data Center Bridging and Flow Control . . . . .	233
Understanding DCB Features and Requirements . . . . .	234
Lossless Transport . . . . .	235
PFC . . . . .	235
Buffer Management . . . . .	235
Physical Interfaces . . . . .	235
ETS . . . . .	236
DCBX . . . . .	236
Understanding CoS Hierarchical Port Scheduling (ETS) . . . . .	237
Hierarchical Scheduling Tiers . . . . .	237
Hierarchical Scheduling and ETS . . . . .	238
ETS Advertisement in DCBX . . . . .	240
Hierarchical Scheduling Process . . . . .	240
Strict-High Priority Queues and Hierarchical Scheduling . . . . .	241

Default Hierarchical Scheduling . . . . .	242
Example: Configuring CoS Hierarchical Port Scheduling (ETS) . . . . .	243
Disabling the ETS Recommendation TLV . . . . .	268
Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows . . . . .	269
Default Lossless Priority Configuration . . . . .	269
Configuring Lossless Priorities . . . . .	272
Configuring Lossless Forwarding Classes (Packet Drop Attribute) . . . . .	272
Congestion Notification Profiles (PFC Configuration) . . . . .	274
Configuring DCBX (Application Protocol TLV Exchange) . . . . .	280
Fate Sharing Among Traffic Classes . . . . .	281
Transit Switch Configuration Versus FCoE-FC Gateway Configuration . . . . .	282
Configuration Results and Commit Checks . . . . .	283
Configuration Rules and Recommendations . . . . .	285
Lossless Transport Features Introduced in Junos OS Release 12.3 (Legacy Non-ELS CLI) . . . . .	286
Backward Compatibility with Junos OS Releases Earlier Than Release 12.3 (Legacy Non-ELS CLI) . . . . .	287
Understanding CoS Flow Control (Ethernet PAUSE and PFC) . . . . .	289
General Information about Ethernet PAUSE and PFC and When to Use Them . . . . .	289
Ethernet PAUSE . . . . .	290
Symmetric Flow Control . . . . .	291
Asymmetric Flow Control . . . . .	291
PFC . . . . .	295
Lossless Transport Support Summary . . . . .	298
Configuring CoS PFC (Congestion Notification Profiles) . . . . .	301
Example: Configuring CoS PFC for FCoE Traffic . . . . .	304
Troubleshooting Dropped FCoE Traffic . . . . .	313
Understanding PFC Functionality Across Layer 3 Interfaces . . . . .	317
Example: Configuring PFC Across Layer 3 Interfaces . . . . .	319
Example: Configuring CoS for FCoE Transit Switch Traffic Across an MC-LAG . . . . .	339
Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic (FCoE Transit Switch) . . . . .	365
Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface . . . . .	373
Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces . . . . .	382
Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications (FCoE and iSCSI) . . . . .	396
Understanding DCBX . . . . .	412
DCBX Basics . . . . .	412
DCBX Modes and Support . . . . .	414
DCBX Modes (Versions) . . . . .	414
Autonegotiation . . . . .	416
CNA Support for DCBX Modes . . . . .	416
Interface Support for DCBX . . . . .	416



	DCBX Attribute Types . . . . .	416
	Asymmetric Attributes . . . . .	417
	Symmetric Attributes . . . . .	417
	DCBX Application Protocol TLV Exchange . . . . .	418
	Application Protocol TLV Exchange . . . . .	418
	FCoE Application Protocol TLV Exchange . . . . .	418
	Disabling Application Protocol TLV Exchange . . . . .	419
	DCBX and PFC . . . . .	419
	DCBX and ETS . . . . .	419
	Default DCBX ETS Advertisement . . . . .	419
	ETS Advertisement and Peer Configuration . . . . .	420
	ETS Recommendation TLV . . . . .	420
	Configuring the DCBX Mode . . . . .	422
	Configuring DCBX Autonegotiation . . . . .	423
	Understanding DCBX Application Protocol TLV Exchange . . . . .	426
	Applications . . . . .	426
	Application Maps . . . . .	427
	Classifying and Prioritizing Application Traffic . . . . .	428
	Enabling Interfaces to Exchange Application Protocol Information . . . . .	429
	Disabling DCBX Application Protocol Exchange . . . . .	429
	Defining an Application for DCBX Application Protocol TLV Exchange . . . . .	430
	Configuring an Application Map for DCBX Application Protocol TLV Exchange . . . . .	431
	Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange . . . . .	432
	Example: Configuring DCBX Application Protocol TLV Exchange . . . . .	433
<b>Chapter 5</b>	<b>Learn About Technology . . . . .</b>	<b>445</b>
	Data Center Technology Overview Videos . . . . .	445
	Learn About Video: Why Do We Need an IP Fabric? . . . . .	445
	Learn About Video: What is the Best Control Plane Protocol to Use in a Data Center IP Fabric? . . . . .	445
	Learn About Video: Why Use an Overlay Network in a Data Center? . . . . .	445
	Conceptual Documents That Contain Technology Overview Videos . . . . .	446
<b>Part 5</b>	<b>Configuration Statements and Operational Commands</b>	
<b>Chapter 6</b>	<b>Configuration Statements (Basic Concepts) . . . . .</b>	<b>449</b>
	class-of-service . . . . .	450
	traceoptions (Class of Service) . . . . .	454
<b>Chapter 7</b>	<b>Configuration Statements (Classifiers and Rewrite Rules) . . . . .</b>	<b>457</b>
	class (Forwarding Classes) . . . . .	458
	class (Forwarding Class Sets) . . . . .	459
	classifiers . . . . .	460
	code-point (Rewrite Rules) . . . . .	462
	code-point-aliases . . . . .	463
	code-points (CoS) . . . . .	464
	dscp . . . . .	465
	dscp-ipv6 . . . . .	467

	exp	469
	forwarding-class	471
	forwarding-class-sets	472
	forwarding-classes	473
	ieee-802.1	475
	import	477
	interfaces (Class of Service)	478
	loss-priority (Classifiers)	480
	loss-priority (Rewrite Rules)	481
	queue-num	482
	rewrite-rules	484
	unit	485
<b>Chapter 8</b>	<b>Configuration Statements (Scheduling)</b>	<b>487</b>
	buffer-size	488
	drop-probability	493
	drop-profile	494
	drop-profile-map	494
	drop-profiles	495
	excess-rate	496
	explicit-congestion-notification	497
	fill-level	498
	forwarding-class	500
	forwarding-class-set	501
	guaranteed-rate	502
	interpolate	503
	loss-priority (Drop Profiles)	504
	output-traffic-control-profile	504
	priority (Schedulers)	505
	protocol (Drop Profile Map)	506
	scheduler	507
	scheduler-map	507
	scheduler-maps	508
	schedulers	509
	shaping-rate	510
	traffic-control-profiles	512
	transmit-rate	513
<b>Chapter 9</b>	<b>Configuration Statements (Data Center Bridging and Flow Control)</b>	<b>517</b>
	application (Application Maps)	518
	application (Applications)	519
	application-map	520
	application-maps	521
	applications (Applications)	522
	applications (DCBX)	523
	cable-length (Congestion Notification)	524
	code-point (Input Congestion Notification)	525
	code-point (Output Congestion Notification)	526
	code-points (Application Maps)	527
	congestion-notification-profile	528

	dcbx .....	530
	dcbx-version .....	531
	destination-port (Applications) .....	532
	disable (DCBX) .....	533
	enhanced-transmission-selection .....	534
	ether-type .....	535
	flow-control .....	536
	flow-control-queue (Output Congestion Notification) .....	538
	ieee-802.1 (Input Congestion Notification) .....	539
	ieee-802.1 (Output Congestion Notification) .....	540
	input (Congestion Notification) .....	541
	interface (DCBX) .....	542
	interfaces (Class of Service) .....	543
	mru .....	545
	output (Congestion Notification) .....	546
	pfc (Input Congestion Notification) .....	547
	policy-options .....	548
	priority-flow-control .....	549
	protocol (Applications) .....	550
	recommendation-tlv .....	551
	rx-buffers .....	552
	tx-buffers .....	554
<b>Chapter 10</b>	<b>Operational Commands (Basic Concepts) .....</b>	<b>557</b>
	Monitoring Interfaces That Have CoS Components .....	557
	show class-of-service .....	559
	show class-of-service interface .....	563
	show class-of-service shared-buffer .....	592
	show pfe filter hw summary .....	595
	show pfe next-hop .....	597
	show pfe route .....	602
	show pfe terse .....	611
	show pfe version .....	613
	show interfaces voq .....	614
<b>Chapter 11</b>	<b>Operational Commands (Classifiers and Rewrite Rules) .....</b>	<b>627</b>
	Monitoring CoS Classifiers .....	627
	Monitoring CoS Forwarding Classes .....	628
	Monitoring CoS Rewrite Rules .....	631
	Monitoring CoS Code-Point Value Aliases .....	632
	show class-of-service classifier .....	634
	show class-of-service code-point-aliases .....	637
	show class-of-service forwarding-class .....	639
	show class-of-service forwarding-class-set .....	641
	show class-of-service forwarding-table .....	643
	show class-of-service forwarding-table classifier .....	647
	show class-of-service forwarding-table classifier mapping .....	649
	show class-of-service forwarding-table rewrite-rule .....	651
	show class-of-service forwarding-table rewrite-rule mapping .....	653
	show class-of-service interface .....	654

	show class-of-service multi-destination . . . . .	683
	show class-of-service rewrite-rule . . . . .	684
<b>Chapter 12</b>	<b>Operational Commands (Scheduling) . . . . .</b>	<b>687</b>
	Monitoring CoS Scheduler Maps . . . . .	687
	show class-of-service drop-profile . . . . .	689
	show class-of-service forwarding-table . . . . .	692
	show class-of-service forwarding-table drop-profile . . . . .	696
	show class-of-service forwarding-table scheduler-map . . . . .	698
	show class-of-service interface . . . . .	700
	show class-of-service scheduler-map . . . . .	729
	show class-of-service traffic-control-profile . . . . .	732
	show interfaces queue . . . . .	736
	show interfaces voq . . . . .	775
<b>Chapter 13</b>	<b>Operational Commands (Data Center Bridging and Flow Control) . . . . .</b>	<b>789</b>
	show class-of-service congestion-notification . . . . .	790
	show dcbx . . . . .	793
	show dcbx neighbors . . . . .	794

# List of Figures

<b>Part 1</b>	<b>CoS Overview</b>	
<b>Chapter 1</b>	<b>Basic Concepts</b>	<b>3</b>
	Figure 1: Packet Flow Across the Network	6
	Figure 2: CoS Classifier, Queues, and Scheduler	25
	Figure 3: Packet Flow Through Configurable CoS Components	26
	Figure 4: Flow of Tricolor Marking Policer Operation	36
<b>Part 3</b>	<b>Scheduling Traffic</b>	
<b>Chapter 3</b>	<b>Using Schedulers</b>	<b>107</b>
	Figure 5: Congestion Occurs on EP-2	122
	Figure 6: EP-2 Backpressures IP-1	122
	Figure 7: Backpressure from EP-2 Causes IP-1 to Buffer Traffic Instead of Sending Traffic, Affecting EP-3	123
	Figure 8: Congestion on EP-2 Clears, Allowing IP-1 to Resume Sending Traffic to Both Egress Ports	123
	Figure 9: Each Egress Port Has a Separate Virtual Output Queue on IP-1	123
	Figure 10: Congestion on EP-2 Does Not Affect Uncongested Port EP-3	124
	Figure 11: Hierarchical Scheduling Tiers	163
	Figure 12: Hierarchical Scheduling Packet Flow	165
	Figure 13: Hierarchical Port Scheduling Components Block Diagram	172
	Figure 14: Hierarchical Port Scheduling Packet Flow Block Diagram	172
	Figure 15: Allocating Guaranteed Bandwidth Using Hierarchical Scheduling	192
	Figure 16: Setting Maximum Bandwidth Using Hierarchical Scheduling	200
	Figure 17: Explicit Congestion Notification	218
<b>Part 4</b>	<b>Data Center Bridging (PFC, DCBX) and Flow Control</b>	
<b>Chapter 4</b>	<b>Using Data Center Bridging and Flow Control</b>	<b>233</b>
	Figure 18: Hierarchical Scheduling Tiers	239
	Figure 19: Hierarchical Scheduling Packet Flow	241
	Figure 20: Hierarchical Port Scheduling Components Block Diagram	248
	Figure 21: Hierarchical Port Scheduling Packet Flow Block Diagram	248
	Figure 22: PFC for FCoE Traffic Configuration Components Block Diagram	306
	Figure 23: Enabling PFC Across Layer 3 Interface Hops	318
	Figure 24: Enabling PFC Across Layer 3 Interface Hops	321
	Figure 25: Supported Topology for an MC-LAG on an FCoE Transit Switch	342
	Figure 26: Topology of the Two Lossless FCoE Priorities Example	384
	Figure 27: Topology of the Lossless FCoE and iSCSI Priorities Example	398



# List of Tables

	<b>About the Documentation</b> . . . . .	<b>xxi</b>
	Table 1: Notice Icons . . . . .	xxiii
	Table 2: Text and Syntax Conventions . . . . .	xxiii
<b>Part 1</b>	<b>CoS Overview</b>	
<b>Chapter 1</b>	<b>Basic Concepts</b> . . . . .	<b>3</b>
	Table 3: QFX10000, QFX5100, QFX5200, and EX4600 Switch CoS Features (As of Software Release 15.1X53-D30) . . . . .	7
	Table 4: QFX3500 and QFX3600 Switch, and QFabric System CoS Features (As of Software Release 15.1X53-D30) . . . . .	8
	Table 5: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX10000 Switches) . . . . .	10
	Table 6: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems) . . . . .	10
	Table 7: CoS Operational Comparison Between QFX5100 and QFX5200 . . . . .	11
	Table 8: Classifier Support by Classifier Type . . . . .	14
	Table 9: Rewrite Rule Support by Rewrite Rule Type . . . . .	14
	Table 10: Default Forwarding Classes and Queue Mapping . . . . .	27
	Table 11: Default IEEE 802.1 Code-Point Aliases . . . . .	28
	Table 12: Default DSCP and DCSP IPv6 Code-Point Aliases . . . . .	28
	Table 13: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier) . . . . .	29
	Table 14: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier) . . . . .	30
	Table 15: Default DSCP IP and IPv6 Classifiers . . . . .	30
	Table 16: Default EXP Classifiers . . . . .	31
	Table 17: Default Drop Profile . . . . .	32
	Table 18: Default Schedulers . . . . .	32
	Table 19: Default Scheduler Maps . . . . .	34
	Table 20: CoS Mappings—Inputs and Outputs . . . . .	35
	Table 21: Policer Actions . . . . .	37
<b>Part 2</b>	<b>Classifying and Rewriting Traffic</b>	
<b>Chapter 2</b>	<b>Using Classifiers, Forwarding Classes, and Rewrite Rules</b> . . . . .	<b>45</b>
	Table 22: Classifier Support by Classifier Type . . . . .	47
	Table 23: Default BA Classification . . . . .	48
	Table 24: Default IEEE 802.1p Code Point to PFC Priority, Output Queue, and Forwarding Class Mapping . . . . .	49

Table 25: ba-classifier Loss Priority Assignments . . . . .	54
Table 26: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier) . . . . .	63
Table 27: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier) . . . . .	63
Table 28: Default DSCP IP and IPv6 Classifiers . . . . .	64
Table 29: Default EXP Classifiers . . . . .	65
Table 30: Default Scheduler Configuration . . . . .	65
Table 31: Supported Classifiers and Rewrite Rules . . . . .	68
Table 32: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems) . . . . .	72
Table 33: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX10000 Switches) . . . . .	72
Table 34: Default IEEE 802.1 Code-Point Aliases . . . . .	81
Table 35: Default DSCP and DSCP IPv6 Code-Point Aliases . . . . .	82
Table 36: Default Forwarding Classes . . . . .	84
Table 37: Forwarding-Class-to-Queue Example Configuration . . . . .	90
Table 38: Components of the Forwarding Class Sets Configuration Example . . . . .	94
Table 39: Configuring Rewrite Rules . . . . .	98

## Part 3

### Chapter 3

## Scheduling Traffic

Using Schedulers . . . . .	107
Table 40: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier) . . . . .	109
Table 41: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier) . . . . .	109
Table 42: Default DSCP IP and IPv6 Classifiers . . . . .	110
Table 43: Default EXP Classifiers . . . . .	111
Table 44: Default Scheduler Configuration . . . . .	111
Table 45: Output Queue Scheduler Components . . . . .	126
Table 46: Related Scheduling Components . . . . .	127
Table 47: Default Scheduler Configuration . . . . .	128
Table 48: Components of the Port Output Queue Scheduler Configuration Example . . . . .	143
Table 49: Components of the Queue Scheduler Priority Configuration Example . . . . .	150
Table 50: Priority Group Scheduler Components . . . . .	155
Table 51: Other Scheduling Components . . . . .	155
Table 52: Hierarchical Scheduling Tiers . . . . .	162
Table 53: Components of the Hierarchical Port Scheduling (ETS) Configuration Topology . . . . .	169
Table 54: Components of the Minimum Guaranteed Output Bandwidth Configuration Example . . . . .	196
Table 55: Components of the Maximum Output Bandwidth Configuration Example . . . . .	202
Table 56: ECN Bit Codes . . . . .	217
Table 57: Traffic Behavior on ECN-Enabled Queues . . . . .	220



	Table 58: Components of the ECN Configuration Example . . . . .	226
<b>Part 4</b>	<b>Data Center Bridging (PFC, DCBX) and Flow Control</b>	
<b>Chapter 4</b>	<b>Using Data Center Bridging and Flow Control . . . . .</b>	<b>233</b>
	Table 59: Hierarchical Scheduling Tiers . . . . .	238
	Table 60: Components of the Hierarchical Port Scheduling (ETS) Configuration Topology . . . . .	245
	Table 61: Mapping of Default Forwarding Class to Queue, IEEE 802.1p Priority, and Drop Attribute . . . . .	271
	Table 62: FCoE and No-Loss Forwarding Class Configuration in Junos OS Release 12.3 . . . . .	274
	Table 63: Default Output Flow Control Profile . . . . .	279
	Table 64: User-Configured Output Flow Control Profile . . . . .	280
	Table 65: Results of Lossless Priority Configuration . . . . .	284
	Table 66: Asymmetric Ethernet PAUSE Flow Control Configuration . . . . .	292
	Table 67: Flow Control State Advertised to the Connected Peer (Autonegotiation) . . . . .	293
	Table 68: Asymmetric Ethernet PAUSE Behavior on Local and Peer Interfaces . . . . .	294
	Table 69: Default PFC Priority to Queue and Forwarding Class Mapping . . . . .	296
	Table 70: Components of the PFC for FCoE Traffic Configuration Topology . . . . .	305
	Table 71: Components of the PFC Across Layer 3 Interfaces Topology . . . . .	321
	Table 72: Components of the CoS for FCoE Traffic Across an MC-LAG Configuration Topology . . . . .	342
	Table 73: Components of the Configuration Topology for FCoE Traffic That Does Not Use Priority 3 . . . . .	366
	Table 74: Components of the Two Lossless FCoE Priorities on an Interface Configuration Topology . . . . .	374
	Table 75: Components of the Two Lossless FCoE Priorities Configuration Topology . . . . .	384
	Table 76: Components of the Lossless FCoE and iSCSI Priorities Configuration Topology . . . . .	398
	Table 77: Summary of Differences Between IEEE DCBX and DCBX Version 1.01 . . . . .	414
	Table 78: Default IEEE 802.1 Classifiers for Trunk Ports and Tagged-Access Ports (Default Trusted Classifier) . . . . .	434
	Table 79: Default IEEE 802.1 Unicast Classifiers for Access Ports (Default Untrusted Classifier) . . . . .	435
	Table 80: Components of DCBX Application Protocol Exchange Configuration Topology . . . . .	436
<b>Part 5</b>	<b>Configuration Statements and Operational Commands</b>	
<b>Chapter 8</b>	<b>Configuration Statements (Scheduling) . . . . .</b>	<b>487</b>
	Table 81: Default Output Queue Buffer Sizes (QFX10000 Switches) . . . . .	491
	Table 82: Default Output Queue Buffer Sizes (QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems) . . . . .	492

	Table 83: Default Transmit Rates for QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems . . . . .	515
	Table 84: Default Transmit Rates for QFX10000 Switches . . . . .	516
<b>Chapter 10</b>	<b>Operational Commands (Basic Concepts) . . . . .</b>	<b>557</b>
	Table 85: Summary of Key CoS Interfaces Output Fields . . . . .	557
	Table 86: show class-of-service Output Fields . . . . .	559
	Table 87: show class-of-service interface Output Fields . . . . .	564
	Table 88: show class-of-service shared-buffer Output Fields . . . . .	592
	Table 89: show pfe filter hw summary Output Fields . . . . .	595
	Table 90: show pfe next-hop Output Fields . . . . .	599
	Table 91: show pfe route Output Fields . . . . .	604
	Table 92: QFX Series, EX4600 switches, and OCX Series show pfe route Hardware Table Output Fields . . . . .	605
	Table 93: show interfaces voq Output Fields . . . . .	615
<b>Chapter 11</b>	<b>Operational Commands (Classifiers and Rewrite Rules) . . . . .</b>	<b>627</b>
	Table 94: Summary of Key CoS Classifier Output Fields . . . . .	628
	Table 95: Summary of Key CoS Forwarding Class Output Fields on Switches that Separate Unicast and Multidestination Traffic . . . . .	629
	Table 96: Summary of Key CoS Forwarding Class Output Fields on Switches That Do Not Separate Unicast and Multidestination Traffic . . . . .	630
	Table 97: Summary of Key CoS Rewrite Rule Output Fields . . . . .	632
	Table 98: Summary of Key CoS Value Alias Output Fields . . . . .	633
	Table 99: show class-of-service classifier Output Fields . . . . .	634
	Table 100: show class-of-service code-point-aliases Output Fields . . . . .	637
	Table 101: show class-of-service forwarding-class Output Fields . . . . .	639
	Table 102: show class-of-service forwarding-class-set Output Fields . . . . .	641
	Table 103: show class-of-service forwarding-table classifier Output Fields . . . . .	647
	Table 104: show class-of-service forwarding-table classifier mapping Output Fields . . . . .	649
	Table 105: show class-of-service forwarding-table rewrite-rule Output Fields . . . . .	651
	Table 106: show class-of-service forwarding-table rewrite-rule mapping Output Fields . . . . .	653
	Table 107: show class-of-service interface Output Fields . . . . .	655
	Table 108: show class-of-service multi-destination Output Fields . . . . .	683
	Table 109: show class-of-service rewrite-rule Output Fields . . . . .	684
<b>Chapter 12</b>	<b>Operational Commands (Scheduling) . . . . .</b>	<b>687</b>
	Table 110: Summary of Key CoS Scheduler Maps Output Fields . . . . .	687
	Table 111: show class-of-service drop-profile Output Fields . . . . .	689
	Table 112: show class-of-service forwarding-table drop-profile Output Fields . . . . .	696
	Table 113: show class-of-service forwarding-table scheduler-map Output Fields . . . . .	698
	Table 114: show class-of-service interface Output Fields . . . . .	701
	Table 115: show class-of-service scheduler-map Output Fields . . . . .	729
	Table 116: show class-of-service traffic-control-profile Output Fields . . . . .	732
	Table 117: Layer 2 Overhead and Transmitted Packets or Byte Counts . . . . .	737
	Table 118: show interfaces queue Output Fields . . . . .	740

**Chapter 13**

Table 119: Byte Count by Interface Hardware . . . . .	743
Table 120: show interfaces voq Output Fields . . . . .	776
<b>Operational Commands (Data Center Bridging and Flow Control) . . . . .</b>	<b>789</b>
Table 121: show class-of-service congestion-notification Output Fields . . . . .	790
Table 122: show dcbx output fields . . . . .	793
Table 123: show dcbx neighbors Output Fields . . . . .	794



# About the Documentation

- Documentation and Release Notes on page xxi
- Supported Platforms on page xxi
- Using the Examples in This Manual on page xxi
- Documentation Conventions on page xxiii
- Documentation Feedback on page xxv
- Requesting Technical Support on page xxv

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

## Supported Platforms

---

For the features described in this document, the following platforms are supported:

- [QFX Series](#)

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

## Documentation Conventions

Table 1 on page xxiii defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xxiii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> <b>show chassis alarms</b>  No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"><li>Introduces or emphasizes important new terms.</li><li>Identifies guide names.</li><li>Identifies RFC and Internet draft titles.</li></ul>	<ul style="list-style-type: none"><li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li><li><i>Junos OS CLI User Guide</i></li><li>RFC 1997, <i>BGP Communities Attribute</i></li></ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"><li>To configure a stub area, include the <b>stub</b> statement at the [edit protocols ospf area area-id] hierarchy level.</li><li>The console port is labeled <b>CONSOLE</b>.</li></ul>
< > (angle brackets)	Encloses optional keywords or variables.	<b>stub &lt;default-metric <i>metric</i>&gt;;</b>
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast   multicast</b>  <b>(<i>string1</i>   <i>string2</i>   <i>string3</i>)</b>
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<b>community name members [</b> <i>community-ids</i> <b>]</b>
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
<b>GUI Conventions</b>		
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"><li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li><li>To cancel the configuration, click <b>Cancel</b>.</li></ul>



Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page of the Juniper Networks TechLibrary site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <http://www.juniper.net/techpubs/feedback/>.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>

- Download the latest versions of software and review release notes:  
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:  
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:  
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

## PART 1

# CoS Overview

- [Basic Concepts on page 3](#)



## CHAPTER 1

# Basic Concepts

- [Overview of Junos OS CoS on page 4](#)
- [CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems on page 6](#)
- [Configuring CoS on page 14](#)
- [Understanding Junos CoS Components on page 17](#)
- [Assigning CoS Components to Interfaces on page 23](#)
- [Understanding CoS Packet Flow on page 24](#)
- [Understanding Default CoS Settings on page 26](#)
- [CoS Inputs and Outputs Overview on page 35](#)
- [Overview of Policers on page 35](#)

## Overview of Junos OS CoS

---

When a network experiences congestion and delay, some packets must be dropped. Junos OS class of service (CoS) enables you to divide traffic into classes and set various levels of throughput and packet loss when congestion occurs. You have greater control over packet loss because you can configure rules tailored to your needs.

You can configure CoS features to provide multiple classes of service for different applications. CoS also allows you to rewrite the Differentiated Services code point (DSCP) or IEEE 802.1p code-point bits of packets leaving an interface, thus allowing you to tailor packets for the network requirements of the remote peers.

CoS provides multiple classes of service for different applications. You can configure multiple forwarding classes for transmitting packets, define which packets are placed into each output queue, schedule the transmission service level for each queue, and manage congestion using a weighted random early detection (WRED) algorithm.

In designing CoS applications, you must carefully consider your service needs, and you must thoroughly plan and design your CoS configuration to ensure consistency and interoperability across all platforms in a CoS domain.

Because CoS is implemented in hardware rather than in software, you can experiment with and deploy CoS features without affecting packet forwarding and switching performance.



**NOTE:** CoS policies can be enabled or disabled on each switch interface. Also, each physical and logical interface on the switch can have associated custom CoS rules.

When you change or when you deactivate and then reactivate the class-of-service configuration, the system experiences packet drops because the system momentarily blocks traffic to change the mapping of incoming traffic to input queues.

---

This topic describes:

- [CoS Standards on page 4](#)
- [How Junos OS CoS Works on page 5](#)
- [Default CoS Behavior on page 6](#)

## CoS Standards

The following RFCs define the standards for CoS capabilities:

- RFC 2474, *Definition of the Differentiated Services Field in the IPv4 and IPv6 Headers*
- RFC 2597, *Assured Forwarding PHB Group*
- RFC 2598, *An Expedited Forwarding PHB*

- RFC 2698, *A Two Rate Three Color Marker*
- RFC 3168, *The Addition of Explicit Congestion Notification (ECN) to IP*

The following data center bridging (DCB) standards are also supported to provide the CoS (and other characteristics) that Fibre Channel over Ethernet (FCoE) requires for transmitting storage traffic over an Ethernet network:

- IEEE 802.1Qbb, priority-based flow control (PFC)
- IEEE 802.1Qaz, enhanced transmission selection (ETS)
- IEEE 802.1AB (LLDP) extension called Data Center Bridging Capability Exchange Protocol (DCBX)



**NOTE:** OCX Series switches and NFX250 Network Services platforms do not support PFC and DCBX.

Juniper Networks QFX10000 switches support both enhanced transmission selection (ETS) hierarchical port scheduling and direct port scheduling.

## How Junos OS CoS Works


Junos OS CoS works by examining traffic entering the edge of your network. The switch classifies traffic into defined service groups to provide the special treatment of traffic across the network. For example, you can send voice traffic across certain links and data traffic across other links. In addition, the data traffic streams can be serviced differently along the network path to ensure that higher-paying customers receive better service. As the traffic leaves the network at the far edge, you can reclassify the traffic to meet the policies of the targeted peer by rewriting the DSCP or IEEE 802.1 code-point bits.

To support CoS, you must configure each switch in the network. Generally, each switch examines the packets that enter it to determine their CoS settings. These settings dictate which packets are transmitted first to the next downstream switch. Switches at the edges of the network might be required to alter the CoS settings of the packets that enter the network to classify the packets into the appropriate service groups.

In [Figure 1 on page 6](#), Switch A is receiving traffic. As each packet enters, Switch A examines the packet's current CoS settings and classifies the traffic into one of the groupings defined on the switch. This definition allows Switch A to prioritize its resources for servicing the traffic streams it receives. Switch A might alter the CoS settings (forwarding class and loss priority) of the packets to better match the defined traffic groups.

When Switch B receives the packets, it examines the CoS settings, determines the appropriate traffic groups, and processes the packet according to those settings. It then transmits the packets to Switch C, which performs the same actions. Switch D also examines the packets and determines the appropriate groups. Because Switch D sits at the far end of the network, it can reclassify (rewrite) the CoS code-point bits of the packets before transmitting them.

Figure 1: Packet Flow Across the Network

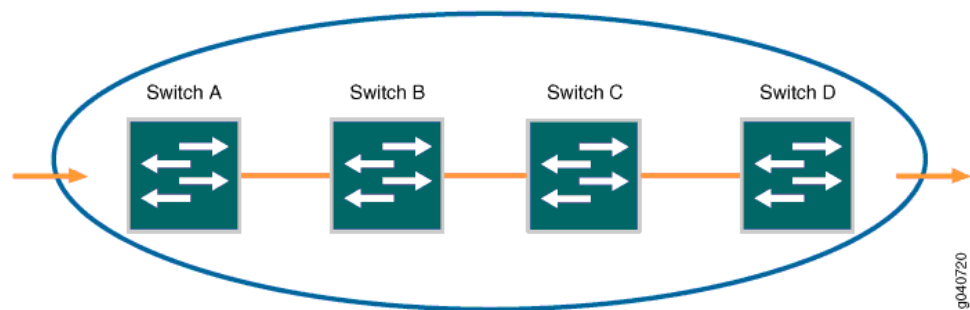

## Default CoS Behavior

If you do not configure CoS settings, the software performs some CoS functions to ensure that the system forwards traffic and protocol packets with minimum delay when the network is experiencing congestion. Some CoS settings, such as classifiers, are automatically applied to each logical interface that you configure. Other settings, such as rewrite rules, are applied only if you explicitly associate them with an interface.

### Related Documentation

- [CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems on page 6](#)
- [Overview of Policers on page 35](#)
- [Understanding Junos CoS Components on page 17](#)
- [Understanding CoS Packet Flow on page 24](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)

## CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems

Juniper Networks data center switches differ in some aspects of class-of-service (CoS) support because of differences in the way the switches are used in networks, and because of hardware differences such as different chipsets or different interface capabilities.

This topic provides summaries of CoS support on QFX10000, QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 switches, and QFabric systems for:

- CoS features
- Ethernet interface types
- Classifier and rewrite rule entries on QFX10000 switches

### CoS Feature Support

The first two tables list CoS feature support for newer ELS-CLI-based platforms ([Table 3 on page 7](#)) such as the QFX5100, QFX5200, EX4600, and QFX10000 switches, and for legacy-CLI-based platforms ([Table 4 on page 8](#)) such as QFX3500 switches and QFabric systems. Some legacy-CLI-based platforms can also run the ELS CLI.



**Table 3: QFX10000, QFX5100, QFX5200, and EX4600 Switch CoS Features (As of Software Release 15.1X53-D30)**

Feature	QFX10000	QFX5100, QFX5200, EX4600
Class of service (CoS)—Class-based queuing with prioritization	Yes	Yes
CoS—Separate unicast and multi-destination classifiers, forwarding classes, and output queues	No	Yes
CoS—Shared unicast and multideestination classifiers, forwarding classes, and output queues	Yes	No
CoS support on link aggregation groups (LAGs)	Yes	Yes
Enhanced transmission selection (ETS) hierarchical port scheduling	No	No
Direct port scheduling	Yes	Yes
Queue shaping	Yes  <b>NOTE:</b> Uses the <b>transmit-rate</b> statement with the <b>exact</b> option.	Yes  <b>NOTE:</b> Uses the <b>shaping-rate</b> statement.
Explicit congestion notification (ECN)	Yes	Yes
Priority-based flow control (PFC)	Yes	Yes
Re-marking of bridged packets	Yes	Yes
Weighted random early detection (WRED) packet drop profiles and tail drop	Yes	Yes
802.3X Ethernet PAUSE	Yes	Yes
Layer 2 ingress packet classification and egress rewrite rules	Yes	Yes

**Table 3: QFX10000, QFX5100, QFX5200, and EX4600 Switch CoS Features (As of Software Release 15.1X53-D30) (continued)**

Feature	QFX10000	QFX5100, QFX5200, EX4600
MPLS EXP ingress packet classification and egress rewrite rules	Yes	Yes
Layer 3 ingress packet classification and egress rewrite rules	Yes	Yes
Virtual output queue (VOQ) architecture	Yes	No
Software shared buffer configurability	No (uses VOQ)	Yes
Queue shaping	Yes	Yes
CoS command to detect the source of RED-dropped packets	Yes	No

Table 4 on page 8 shows CoS support for legacy-CLI-based switches.

**Table 4: QFX3500 and QFX3600 Switch, and QFabric System CoS Features (As of Software Release 15.1X53-D30)**

Feature	QFX3500	QFX3600	QFabric System
Class of service (CoS)—Class-based queuing with prioritization	Yes	Yes	Yes
CoS—Separate unicast and multideestination classifiers, forwarding classes, and output queues	Yes	Yes	Yes
CoS support on link aggregation groups (LAGs)	Yes	Yes	Yes
Enhanced transmission selection (ETS) hierarchical port scheduling	Yes	Yes	Yes

**Table 4: QFX3500 and QFX3600 Switch, and QFabric System CoS Features (As of Software Release 15.1X53-D30) (continued)**

Feature	QFX3500	QFX3600	QFabric System
Direct port scheduling	No	No	No
Queue shaping	Yes	Yes	Yes
Explicit congestion notification (ECN)	Yes	Yes	Yes
Priority-based flow control (PFC)	Yes	Yes	Yes
Re-marking of bridged packets	Yes	Yes	Yes
Priority remapping on native Fibre Channel interfaces	Yes	No	No
Weighted random early detection (WRED) tail-drop profiles	Yes	Yes	Yes
802.3X Ethernet PAUSE	Yes	Yes	Yes
Layer 2 ingress packet classification and egress rewrite rules	Yes	Yes	Yes
MPLS EXP ingress packet classification and egress rewrite rules	Yes	Yes	Yes
Layer 3 ingress packet classification and egress rewrite rules	Yes	Yes	Yes
Software buffer configurability	Yes	Yes	No

#### Classifier and Rewrite Rule Ethernet Interface Type Support

The next two tables in this topic list CoS Ethernet support for classifiers and rewrite rules on different interface types for QFX10000 switches ([Table 5 on page 10](#)), and for

QFX5100, QFX5200, QFX3500, QFX3600, and EX4600 switches, and QFabric systems ([Table 6 on page 10](#)).

On QFX10000 switches, you cannot apply classifiers or rewrite rules to Layer 2 or Layer 3 physical interfaces. You can apply classifiers and rewrite rules only to Layer 2 logical interface unit 0. You can apply different classifiers and rewrite rules to different Layer 3 logical interfaces. [Table 5 on page 10](#) shows on which interfaces you can configure and apply classifiers and rewrite rules.

**Table 5: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX10000 Switches)**

CoS Classifiers and Rewrite Rules	Layer 2 Physical Interfaces	Layer 2 Logical Interface (Unit 0 Only)	Layer 3 Physical Interfaces	Layer 3 Logical Interfaces
Fixed classifier	No	Yes	No	Yes
DSCP classifier	No	Yes	No	Yes
DSCP IPv6 classifier	No	Yes	No	Yes
IEEE 802.1p classifier	No	Yes	No	Yes
EXP classifier	No	Yes	No	Yes
DSCP rewrite rule	No	Yes	No	Yes
DSCP IPv6 rewrite rule	No	Yes	No	Yes
IEEE 802.1p rewrite rule	No	Yes	No	Yes
EXP rewrite rule	No	Yes	No	Yes

On QFX5100, QFX5200, QFX3500, QFX3600, and EX4600 switches, and QFabric systems, you cannot apply classifiers or rewrite rules to Layer 2 physical interfaces or to Layer 3 logical interfaces. [Table 6 on page 10](#) shows on which interfaces you can configure and apply classifiers and rewrite rules.

**Table 6: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems)**

CoS Classifiers and Rewrite Rules	Layer 2 Physical Interfaces	Layer 2 Logical Interface (Unit 0 Only)	Layer 3 Physical Interfaces (If at Least One Logical Layer 3 Interface Is Defined)	Layer 3 Logical Interfaces
Fixed classifier	No	Yes	Yes	No
DSCP classifier	No	Yes	Yes	No
DSCP IPv6 classifier	No	Yes	Yes	No

**Table 6: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems) (continued)**

CoS Classifiers and Rewrite Rules	Layer 2 Physical Interfaces	Layer 2 Logical Interface (Unit 0 Only)	Layer 3 Physical Interfaces (If at Least One Logical Layer 3 Interface Is Defined)	Layer 3 Logical Interfaces
IEEE 802.1p classifier	No	Yes	Yes	No
EXP classifier	Global classifier, applies only to all switch interfaces that are configured as <b>family mpls</b> . Cannot be configured on individual interfaces.			
DSCP rewrite rule	No	Yes	Yes	No
DSCP IPv6 rewrite rule	No	Yes	Yes	No
IEEE 802.1p rewrite rule	No	Yes	Yes	No
EXP rewrite rule	No	Yes	Yes	No



**NOTE:** IEEE 802.1p multidestination and DSCP multidestination classifiers are applied to all interfaces and cannot be applied to individual interfaces. No DSCP IPv6 multidestination classifier is supported. IPv6 multidestination traffic uses the DSCP multidestination classifier.

Even though feature support for QFX5100 and QFX5200 switches is the same, they use different chipsets, and therefore have some CoS operational differences.

[Table 7 on page 11](#) details both the similarities and differences for CoS on QFX5100 and QFX5200.

**Table 7: CoS Operational Comparison Between QFX5100 and QFX5200**

CoS Feature	QFX5100	QFX5200	Change in Operation
Memory Management	Central MMU shared by all ports	Crosspoint architecture with quad pipe	No customer visible change.
Pipes	2	4	No customer visible change.
Cell Accounting	Global access pipes	Local to Cross point (4MB / cross point)	No customer visible change.
Shared Buffer	60k Cells (Each cell 208Bytes), 12MB	80K Cells (Each cell 208 Bytes), 16MB	No customer visible change. QFX-5200 just supports larger packet buffer space than QFX-5100.
Shared buffer pool per pipe	4 pools per pipe (no change)		N/A

Table 7: CoS Operational Comparison Between QFX5100 and QFX5200 (*continued*)

CoS Feature	QFX5100	QFX5200	Change in Operation
Queuing and Scheduling	LLS and three level hierarchy	Fixed hierarchical scheduling (FHS) and two-level hierarchy	ETS and FC-Set are not supported on QFX-5200 due to FHS.
# Unicast Queues	8		N/A
# Multicast Queues	4	2	
CPU Queues	44		N/A
Host Path Scheduling	48 queues directly attached to port	48 queues attached to LO	No customer visible change. SDK API change just affects software development effort.
FC2Q	4 profiles (no change)		N/A
DSCP classifier table	64 profiles (no change)		N/A
802.1p classifier table	64 profiles	64 profiles	No customer visible change. SDK API change just affects software development effort.
PFC	Common headroom buffer	Per pipe headroom buffer	Available and used head room buffer is maintained separately for each pipe on QFX-5200.
Rewrite	128 profiles		No customer visible change. SDK API change just affects software development effort.
WRED	128 profiles per pipe (same)		N/A
Scheduler Levels		Eight traffic classes per port. For each traffic class, a pair of unicast and multicast queue is associated per XPE. Another two Queues named Queue Management(QM) and System Control(SC) totalling 10 Unicast and 10 Multicast Queues for each XPE. These physical queues are mapped to logical queues (10 Unicast and 10 Multicast) at each MMU slice controllers level	
Queueing Levels		Three levels, logical queue level, CoS level, and port level.	

Table 7: CoS Operational Comparison Between QFX5100 and QFX5200 (*continued*)

CoS Feature	QFX5100	QFX5200	Change in Operation
Multidestination Traffic	Default scheduler map reserves 20% bandwidth for multicast and 80% of unicast traffic reserved between BE, FCoE, NoLoss and NC traffic types.	Each level 0 node is receiving both multicast and unicast traffic, so it is not possible to differentiate at the port level to apply shaping on multicast traffic.	

The following limitations on QFX5200 switches do not exist on QFX5100 switches.

- CoS ETS is not supported on QFX5200.
- On QFX5200 switches, it is not possible to support multiple queues with **strict-high** priority because QFX5200 doesn't support flexible hierarchical scheduling. When multiple strict-high priority queues are configured, all of those queues are treated as strict-high priority but the higher number queue among them is given highest priority.
- QFX5200 CoS policers do not support global management counters accessed by all ports. Only management counters local to a pipeline are supported—this means that QFX5200 management counters work only on traffic received on ports that belong to the pipeline in which the counter is created.
- Due to QFX5200 cross-point architecture, all buffer usage counters are maintained separately. When usage counters are displayed with the command **show class-of-service shared-buffer**, various pipe counters are displayed separately.
- On QFX5200, port schedulers are supported instead of FC-SET.
- On QFX5200, it is not possible to group multiple forwarding classes into a forwarding class set and apply output traffic control profile on the fc-set. ETS for an fc-set is not supported. Because each L0 node schedules both the unicast and multicast queue of L1 node, it is not possible to differentiate multicast/unicast traffic at the port level and apply minimum bandwidth between unicast and multicast. It can only be supported at CoS level L0.
- Because QFX5200 does not support flexible hierarchical scheduling, it is not possible to apply a traffic control profile for a group of forwarding classes.

#### QFX10000 Switch Classifier and Rewrite Rule Support (Scaling)

You can configure enough classifiers on QFX10000 switches to handle most, if not all, network scenarios. [Table 8 on page 14](#) shows how many of each type of classifiers you can configure, and how many entries you can configure per classifier.

**Table 8: Classifier Support by Classifier Type**

Classifier Type	Default Classifier Name	Maximum Number of Classifiers	Maximum Number of Entries per Classifier
IEEE 802.1p (Layer 2)	ieee8021p-default (for ports in trunk mode)  ieee8021p-untrust (for ports in access mode)	64	16
DSCP (Layer 3)	dscp-default	64	64
DSCP IPv6 (Layer 3)	dscp-ipv6-default	64	64
EXP (MPLS)	exp-default	64	8
Fixed	There is no default fixed classifier	8	16

The number of fixed classifiers supported (8) equals the number of supported forwarding classes (fixed classifiers assign all incoming traffic on an interface to one forwarding class).

There are no default rewrite rules. You can configure enough rewrite rules on QFX10000 switches to handle most, if not all, network scenarios. [Table 9 on page 14](#) shows how many of each type of rewrite rule you can configure, and how many entries you can configure per rewrite rule.

**Table 9: Rewrite Rule Support by Rewrite Rule Type**

Rewrite Rule Type	Maximum Number of Rewrite Rule Sets	Maximum Number of Entries per Rewrite Rule Set
IEEE 802.1p (Layer 2)	64	128
DSCP (Layer 3)	32	128
DSCP IPv6 (Layer 3)	32	128
EXP (MPLS)	64	128

## Configuring CoS

The traffic management class-of-service topics describe how to configure the Junos OS class-of-service (CoS) components. Junos CoS provides a flexible set of tools that enable you to fine tune control over the traffic on your network.

You can define classifiers that classify incoming traffic into forwarding classes to place traffic in groups for transmission. You can map forwarding classes to output queues to define the type of traffic on each output queue. You can configure schedulers for each



output queue to control the service level (priority, bandwidth characteristics) of each type of traffic. You can provide different service levels for the same forwarding classes on different interfaces. Some switches support data center bridging standards so that you can configure lossless transport across the Ethernet network using priority-based flow control (PFC), Data Center Bridging Exchange protocol (DCBX), and enhanced transmission selection (ETS) hierarchical scheduling (OCX Series switches and NFX250 Network Services platform do not support lossless transport, PFC, and DCBX).

You can configure various CoS components individually or in combination to define CoS services.



**NOTE:** When you change the CoS configuration or when you deactivate and then reactivate the CoS configuration, the system experiences packet drops because the system momentarily blocks traffic to change the mapping of incoming traffic to input queues.

The following topics describe how to configure CoS components.



**NOTE:** Links to features that are not supported on the platform for which you are looking up information might not be functional. The platforms that support each feature are listed before each topic link. Feature topics that do not list platforms apply to all platforms.

- (QFX3500, QFX3600, EX4600, NFX250, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Defining CoS Unicast BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p)*
- (QFX10000 switches) [“Example: Configuring Classifiers” on page 53](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Example: Configuring Multidestination (Multicast, Broadcast, DLF) Classifiers*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Example: Configuring WRED Drop Profiles*
- (QFX10000 switches) [“Example: Configuring WRED Drop Profiles” on page 210](#)
- (All switches) [“Example: Configuring Drop Profile Maps” on page 213](#)
- (QFX3500, QFX3600, EX4600, NFX250, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Example: Configuring Forwarding Classes*
- (QFX10000 switches) [“Example: Configuring Forwarding Classes” on page 88](#)
- (All switches) [“Example: Configuring Forwarding Class Sets” on page 93](#)
- (QFX3500, QFX3600, EX4600, NFX250, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Example: Configuring Queue Schedulers*
- (QFX10000 switches) [“Example: Configuring Queue Schedulers for Port Scheduling” on page 140](#)

- (All switches and NFX250 Network Services platform) [“Example: Configuring Queue Scheduling Priority” on page 149](#)
- (All switches) [“Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\)” on page 158](#)
- (All switches and NFX250 Network Services platform) [“Example: Configuring Minimum Guaranteed Output Bandwidth” on page 194](#)
- (All switches) [“Example: Configuring Maximum Output Bandwidth” on page 201](#)
- (QFX3500, QFX3600, EX4600, QFX5100, and QFX10000 switches, and QFabric systems) [“Example: Configuring DCBX Application Protocol TLV Exchange” on page 433](#)
- (All switches) [“Example: Configuring CoS Hierarchical Port Scheduling \(ETS\)” on page 167](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) [“Example: Configuring CoS PFC for FCoE Traffic” on page 304](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) [Example: Configuring CoS for FCoE Transit Switch Traffic Across an MC-LAG](#)
- (QFX3500 switches and QFabric systems) [Example: Configuring IEEE 802.1p Priority Remapping on an FCoE-FC Gateway](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) [“Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces” on page 382](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) [“Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic \(FCoE Transit Switch\)” on page 365](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) [“Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface” on page 373](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) [“Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications \(FCoE and iSCSI\)” on page 396](#)
- (All switches and NFX250 Network Services platform) [“Defining CoS Code-Point Aliases” on page 83](#)
- (All switches and NFX250 Network Services platform) [“Defining CoS Rewrite Rules” on page 100](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) [“Configuring CoS PFC \(Congestion Notification Profiles\)” on page 301](#)
- (QFX3500 switches, NFX250 Network Services platform, and QFabric systems) [Configuring CoS Fixed Classifier Rewrite Values for Native FC Interfaces \(NP\\_Ports\)](#)
- (All switches and NFX250 Network Services platform) [“Assigning CoS Components to Interfaces” on page 23](#)

- (NFX250, QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Changing the Host Outbound Traffic Default Queue Mapping*
- (All switches) [“Defining CoS Traffic Control Profiles \(Priority Group Scheduling\)” on page 157](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Enabling and Disabling CoS Symmetric Ethernet PAUSE Flow Control*
- (QFX3500, QFX3600, EX4600, QFX5200, and QFX5100 switches, and QFabric systems) *Configuring CoS Asymmetric Ethernet PAUSE Flow Control*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) [“Configuring the DCBX Mode” on page 422](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) [“Configuring DCBX Autonegotiation” on page 423](#)
- (QFX3500, QFX3600, EX4600, QFX5100, and QFX10000 switches, and QFabric systems) [“Disabling the ETS Recommendation TLV” on page 268](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) [“Defining an Application for DCBX Application Protocol TLV Exchange” on page 430](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) [“Configuring an Application Map for DCBX Application Protocol TLV Exchange” on page 431](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) [“Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange” on page 432](#)

---

## Understanding Junos CoS Components

This topic describes the Junos OS class-of-service (CoS) components:

- [Code-Point Aliases on page 18](#)
- [Policers on page 18](#)
- [Classifiers on page 18](#)
- [Forwarding Classes on page 19](#)
- [Forwarding Class Sets on page 20](#)
- [Flow Control \(Ethernet PAUSE, PFC, and ECN\) on page 20](#)
- [WRED Profiles and Tail Drop on page 21](#)
- [Schedulers on page 22](#)
- [Rewrite Rules on page 22](#)

## Code-Point Aliases

A *code-point alias* assigns a name to a pattern of code-point bits. You can use this name instead of the bit pattern when you configure other CoS components such as classifiers and rewrite rules.

## Policers

*Policers* limit traffic of a certain class to a specified bandwidth and burst size. Packets exceeding the policer limits can be discarded, or can be assigned to a different forwarding class, a different loss priority, or both. You define policers with filters that you can associate with input interfaces.

## Classifiers

Packet classification associates incoming packets with a particular CoS servicing level. In Junos OS, *classifiers* associate packets with a forwarding class and loss priority and assign packets to output queues based on the associated forwarding class. Junos OS supports two general types of classifiers:

- Behavior aggregate (BA) or CoS value traffic classifiers—Examine the CoS value in the packet header. The value in this single field determines the CoS settings applied to the packet. BA classifiers allow you to set the forwarding class and loss priority of a packet based on the Differentiated Services code point (DSCP) value, IEEE 802.1p value, or MPLS EXP value.



**NOTE:** OCX Series switches and NFX250 Network Services platform do not support MPLS.

---

- Multifield traffic classifiers—Examine multiple fields in the packet, such as source and destination addresses and source and destination port numbers of the packet. With multifield classifiers, you set the forwarding class and loss priority of a packet based on firewall filter rules.

On switches that require the separation of unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic, you create separate unicast classifiers and multdestination classifiers. You cannot assign unicast traffic and multdestination traffic to the same classifier. You can apply unicast classifiers to one or more interfaces. Multdestination classifiers apply to all of the switch interfaces and cannot be applied to individual interfaces. Switches that require the separation of unicast and multdestination traffic have 12 output queues to provide 4 output queues reserved for multdestination traffic.

On switches that do not separate unicast and multdestination traffic, unicast and multdestination traffic use the same classifiers, and you do not create a separate special classifier for multdestination traffic. Switches that do not separate unicast and multdestination traffic have eight output queues because no extra queues are required to separate the traffic.

## Forwarding Classes

*Forwarding classes* group packets for transmission and CoS. You assign each packet to an output queue based on the packet's forwarding class. Forwarding classes affect the forwarding, scheduling, and rewrite marking policies applied to packets as they transit the switch.

Switches provide up to five default forwarding classes:

- best-effort—Best-effort traffic
- fcoe—Fibre Channel over Ethernet traffic
- no-loss—Lossless traffic
- network-control—Network control traffic
- mcast—Multicast traffic



**NOTE:** The default mcast forwarding class applies only to switches that require the separation of unicast and multidestination (multicast, broadcast, and destination lookup fail) traffic. On these switches, you create separate forwarding classes for the two types of traffic. The default mcast forwarding class transports only multidestination traffic, and the default best-effort, fcoe, no-loss, and network-control forwarding classes transport only unicast traffic. Unicast forwarding classes map to unicast output queues, and multidestination forwarding classes map to multidestination output queues. You cannot assign unicast traffic and multidestination traffic to the same forwarding class or to the same output queue. Switches that require the separation of unicast and multidestination traffic have 12 output queues, 8 for unicast traffic and 4 for multidestination traffic.

On switches that do not separate unicast and multidestination traffic, unicast and multidestination traffic use the same forwarding classes and output queues, so the mcast forwarding class is not valid. You do not create separate forwarding classes for multidestination traffic. Switches that do not separate unicast and multidestination traffic have eight output queues because no extra queues are required to separate the traffic.



**NOTE:** On OCX Series switches only, do not map traffic to the default fcoe and no-loss forwarding classes. By default, the DSCP default classifier does not map traffic to the fcoe and no-loss forwarding classes, so by default, OCX Series switches do not classify traffic into those forwarding classes. (On other switches, the fcoe and no-loss forwarding classes provide lossless transport for Layer 2 traffic. OCX Series switches do not support lossless Layer 2 transport.)

Switches support a total of either 12 forwarding classes (8 unicast forwarding classes and 4 multicast forwarding classes), or 8 forwarding classes (unicast and multdestination traffic use the same forwarding classes), which provides flexibility in classifying traffic.

NFX250 Network Services platform provide the following forwarding classes:

- best-effort (be)—Provides no service profile. Loss priority is typically not carried in a CoS value.
- expedited-forwarding (ef)—Provides a low loss, low latency, low jitter, assured bandwidth, end-to-end service.
- assured-forwarding (af)—Provides a group of values you can define and includes four subclasses: AF1, AF2, AF3, and AF4, each with two drop probabilities: low and high.
- network-control (nc)—Supports protocol control and thus is typically high priority.

## Forwarding Class Sets

You can group forwarding classes (output queues) into *forwarding class sets* to apply CoS to groups of traffic that require similar treatment. Forwarding class sets map traffic into priority groups to support enhanced transmission selection (ETS), which is described in IEEE 802.1Qaz.

You can configure up to three unicast forwarding class sets and one multicast forwarding class set. For example, you can configure different forwarding class sets to apply CoS to unicast groups of local area network (LAN) traffic, storage area network (SAN) traffic, and high-performance computing (HPC) traffic, and configure another group for multicast traffic.

Within each forwarding class set, you can configure special CoS treatment for the traffic mapped to each individual queue. This provides the ability to configure CoS in a two-tier hierarchical manner. At the forwarding class set tier, you configure CoS for groups of traffic using a *traffic control profile*. At the queue tier, you configure CoS for individual output queues within a forwarding class set using a *scheduler* that you map to a queue (forwarding class) using a *scheduler map*.

## Flow Control (Ethernet PAUSE, PFC, and ECN)

*Ethernet PAUSE* (described in IEEE 802.3X) is a link-level flow control mechanism. During periods of network congestion, Ethernet PAUSE stops all traffic on a full-duplex Ethernet link for a period of time specified in the PAUSE message.



**NOTE:** QFX10000 switches do not support Ethernet PAUSE.

---

*Priority-based flow control* (PFC) is described in IEEE 802.1Qbb as part of the IEEE data center bridging (DCB) specifications for creating a lossless Ethernet environment to transport loss-sensitive flows such as Fibre Channel over Ethernet (FCoE) traffic.



**NOTE:** OCX Series switches do not support PFC.

PFC is a link-level flow control mechanism similar to Ethernet PAUSE. However, Ethernet PAUSE stops all traffic on a link for a period of time. PFC decouples the pause function from the physical link and divides the traffic on the link into eight priorities (3-bit IEEE 802.1p code points). You can think of the eight priorities as eight “lanes” of traffic. You can apply pause selectively to the traffic on any priority without pausing the traffic on other priorities on the same link.

The granularity that PFC provides allows you to configure different levels of CoS for different types of traffic on the link. You can create lossless lanes for traffic such as FCoE, LAN backup, or management, while using standard frame-drop methods of congestion management for IP traffic on the same link.



**NOTE:** If you transport FCoE traffic, you must enable PFC on the priority assigned to FCoE traffic (usually IEEE 802.1p code point 011 on interfaces that carry FCoE traffic).

*Explicit congestion notification* (ECN) enables end-to-end congestion notification between two endpoints on TCP/IP based networks. ECN must be enabled on both endpoints and on all of the intermediate devices between the endpoints for ECN to work properly. Any device in the transmission path that does not support ECN breaks the end-to-end ECN functionality. ECN notifies networks about congestion with the goal of reducing packet loss and delay by making the sending device decrease the transmission rate until the congestion clears, without dropping packets. RFC 3168, *The Addition of Explicit Congestion Notification (ECN) to IP*, defines ECN.

## WRED Profiles and Tail Drop

A weighted random early detection (WRED) profile (drop profile) defines parameters that enable the network to drop packets during periods of congestion. A *drop profile* defines the conditions under which packets of different loss priorities drop, by determining the probability of dropping a packet for each loss priority when output queues become congested. Drop profiles essentially set a value for a level of queue fullness—when the queue fills to the level of the queue fullness value, packets drop. The combination of queue fill level, the probability of dropping a packet at that fill level, and loss priority of the packet, determine whether a packet is dropped or forwarded. Each pairing of a fill level with a drop probability creates a point on a drop profile curve.

You can associate different drop profiles with different loss priorities to set the probability of dropping packets. You can apply a drop profile for each loss priority to a forwarding class (output queue) by applying a drop profile to a scheduler, and then mapping the scheduler to a forwarding class using a scheduler map. When the queue mapped to the forwarding class experiences congestion, the drop profile determines the level of packet drop for traffic of each loss priority in that queue.

Loss priority affects the scheduling of a packet without affecting the packet's relative ordering. Typically you mark packets exceeding a particular service level with a high loss priority.

Tail drop is a simple drop mechanism that drops all packets indiscriminately during periods of congestion, without differentiating among the packet loss priorities of traffic flows. Tail drop requires only one curve point that corresponds to the maximum depth of the output queue, and drop probability when traffic exceeds the buffer depth is 100 percent (all packets that cannot be stored in the queue are dropped). WRED is superior to tail-drop because WRED enables you to treat traffic of different priorities in a differentiated manner, so that higher priority traffic receives preference, and because of the ability to set multiple points on the drop curve.

## Schedulers

Each switch interface has multiple queues assigned to store packets. The switch determines which queue to service based on a particular method of scheduling. This process often involves determining the sequence in which different types of packets should be transmitted.

You can define the scheduling priority (**priority**), minimum guaranteed bandwidth (**transmit-rate**), maximum bandwidth (**shaping-rate**), and WRED profiles to be applied to a particular queue (forwarding class) for packet transmission. By default, extra bandwidth is shared among queues in proportion to the minimum guaranteed bandwidth of each queue. On switches that support the **excess-rate** statement, you can configure the percentage of shared extra bandwidth an output queue receives independently from the minimum guaranteed bandwidth transmit rate, or you can use default bandwidth sharing based on the transmit rate.

A scheduler map associates a specified forwarding class with a scheduler configuration. You can associate up to four user-defined scheduler maps with the interfaces.

## Rewrite Rules

A *rewrite rule* sets the appropriate CoS bits in the outgoing packet. This allows the next downstream device to classify the packet into the appropriate service group. Rewriting (marking) outbound packets is useful when the switch is at the border of a network and must change the CoS values to meet the policies of the targeted peer.



**NOTE:** Ingress firewall filters can also rewrite forwarding class and loss priority values.

---

### Related Documentation

- [CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems on page 6](#)
- [Understanding CoS Packet Flow on page 24](#)



## Assigning CoS Components to Interfaces

After you define the following CoS components, you assign them to physical or logical interfaces. Components that you assign to physical interfaces are valid for all of the logical interfaces configured on the physical interface. Components that you assign to a logical interface are valid only for that logical interface.

- Classifiers—Assign only to logical interfaces; on some switches, you can apply classifiers to physical Layer 3 interfaces and the classifiers are applied to all logical interfaces on the physical interface.
- Congestion notification profiles—Assign only to physical interfaces.



**NOTE:** OCX Series switches and NFX250 Network Services platform do not support congestion notification profiles.

- Forwarding classes—Assign to interfaces by mapping to forwarding class sets.
- Forwarding class sets—Assign only to physical interfaces.
- Output traffic control profiles—Assign only to physical interfaces (with a forwarding class set).
- Port schedulers—Assign only to physical interfaces on switches that support port scheduling. Associate the scheduler with a forwarding class in a scheduler map and apply the scheduler map to the physical interface.
- Rewrite rules—Assign only to logical interfaces; on some switches, you can apply classifiers to physical Layer 3 interfaces and the classifiers are applied to all logical interfaces on the physical interface.

You can assign a CoS component to a single interface or to multiple interfaces using wildcards. You can also assign a congestion notification profile or a forwarding class set globally to all interfaces.

To assign CoS components to interfaces:

Assign a CoS component to a physical interface by associating a CoS component (for example, a forwarding class set named **be-priority-group**) with an interface:

```
[edit class-of-service interfaces]
user@switch# set xe-0/0/7 forwarding-class-set be-priority-group
```

Assign a CoS component to a logical interface by associating a CoS component (for example, a classifier named **be\_classifier**) with a logical interface:

```
[edit class-of-service interfaces]
user@switch# set xe-0/0/7 unit 0 classifiers dscp be_classifier
```

Assign a CoS component to multiple interfaces by associating a CoS component (for example, a rewrite rule named **customup-rw**) to all 10-Gigabit Ethernet interfaces on the switch, use wildcard characters for the interface name and logical interface (unit) number:

```
[edit class-of-service interfaces]
user@switch# set xe-* unit * rewrite-rules ieee-802.1 customup-rw
```

Assign a congestion notification profile or a forwarding class set globally to all interfaces using the **set class-of-service interfaces all** statement. For example, to assign a forwarding class set named **be-priority-group** to all interfaces:

```
[edit class-of-service interfaces]
user@switch# set all forwarding-class-set be-priority-group
```



**NOTE:** If there is an existing CoS configuration of any type on an interface, the global configuration is not applied to that particular interface. The global configuration is applied to all interfaces that do not have an existing CoS configuration.

For example, if you configure a rewrite rule, assign it to interfaces **xe-0/0/20.0** and **xe-0/0/22.0**, and then configure a forwarding class set and apply it to all interfaces, the forwarding class set is applied to every interface except **xe-0/0/20** and **xe-0/0/22**.

**Related  
Documentation**

- [Monitoring Interfaces That Have CoS Components on page 557](#)
- [Understanding Junos CoS Components on page 17](#)

---

## Understanding CoS Packet Flow

---

When a packet traverses a switch, the switch provides the appropriate level of service to the packet using either default class-of-service (CoS) settings or CoS settings that you configure. On ingress ports, the switch classifies packets into appropriate forwarding classes and assigns a loss priority to the packets. On egress ports, the switch applies packet scheduling and (if you have configured them) rewrite rules to re-mark packets.

You can configure CoS on Layer 2 logical interfaces, and you can configure CoS on Layer 3 physical interfaces if you have defined at least one logical interface on the Layer 3 physical interface. You cannot configure CoS on Layer 2 physical interfaces and Layer 3 logical interfaces.

For Layer 2 traffic, either use the default CoS settings or configure CoS on each logical interface. You can apply different CoS settings to different Layer 2 logical interfaces.



**NOTE:** OCX Series switches do not support Layer 2 interfaces (family ethernet-switching).

For Layer 3 traffic, either use the default CoS settings or configure CoS on the physical interface (not on the logical unit). The switch uses the CoS applied on the physical Layer 3 interface for all logical Layer 3 interfaces configured on the physical Layer 3 interface.

The switch applies CoS to packets as they flow through the system:

- An interface has one or more classifiers of different types applied to it (configure this at the **[edit class-of-service interfaces]** hierarchy level). The classifier types are based on the portion of the incoming packet that the classifier examines (IEEE 802.1p code point bits or DSCP code point bits).
- When a packet enters an ingress port, the classifier assigns the packet to a forwarding class and a loss priority based on the code point bits of the packet (configure this at the **[edit class-of-service classifiers]** hierarchy level).
- The switch assigns each forwarding class to an output queue (configure this at the **[edit class-of-service forwarding-classes]** hierarchy level).
- Input (and output) policers meter traffic and can change the forwarding class and loss priority if a traffic flow exceeds its service level.
- A scheduler map is applied to each interface. When a packet exits an egress port, the scheduler map controls how it is treated (configure this at the **[edit class-of-service interfaces]** hierarchy level). A scheduler map assigns schedulers to forwarding classes (configure this at the **[edit class-of-service scheduler-maps]** hierarchy level).
- A scheduler defines how traffic is treated at the egress interface output queue (configure this at the **[edit class-of-service schedulers]** hierarchy level). You control the transmit rate, shaping rate, priority, and drop profile of each forwarding class by mapping schedulers to forwarding classes in scheduler maps, then applying scheduler maps to interfaces.
- A drop-profile defines how aggressively to drop packets that are mapped to a particular scheduler (configure this at the **[edit class-of-service drop-profiles]** hierarchy level).
- A rewrite rule takes effect as the packet leaves an interface that has a rewrite rule configured (configure this at the **[edit class-of-service rewrite-rules]** hierarchy level). The rewrite rule writes information to the packet (for example, a rewrite rule can re-mark the code point bits of outgoing traffic) according to the forwarding class and loss priority of the packet.

Figure 2 on page 25 is a high-level flow diagram of how packets from various sources enter switch interfaces, are classified at the ingress, and then scheduled (provided bandwidth) at the egress queues.

**Figure 2: CoS Classifier, Queues, and Scheduler**


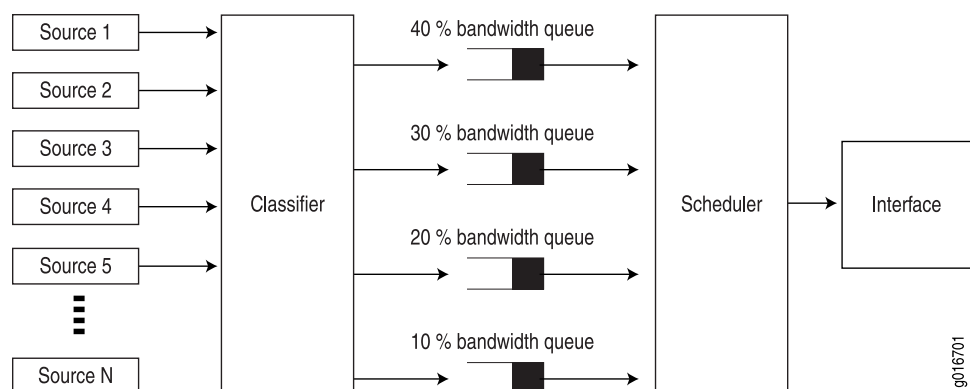


Figure 3 on page 26 shows the packet flow through the CoS components that you can configure.

**Figure 3: Packet Flow Through Configurable CoS Components**

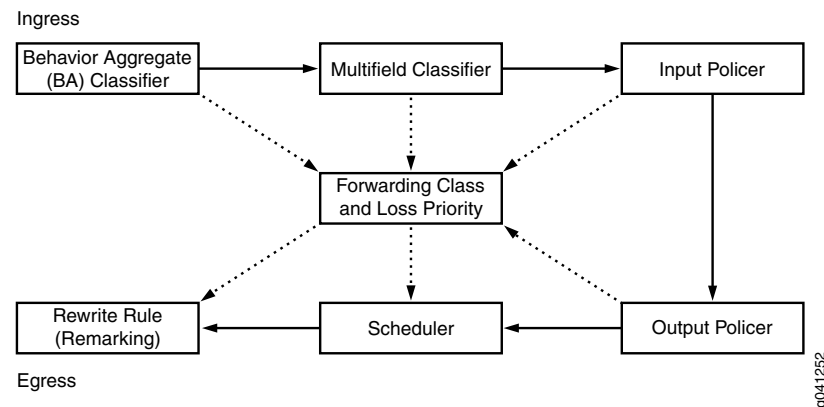

The middle box (Forwarding Class and Loss Priority) represents two values that you can use on ingress and egress interfaces. The system uses these values for classifying traffic on ingress interfaces and for rewrite rule re-marking on egress interfaces. Each outer box represents a process component. The components in the top row apply to incoming packets. The components in the bottom row apply to outgoing packets.

The solid-line arrows show the direction of packet flow from ingress to egress. The dotted-line arrows that point to the forwarding class and loss priority box indicate processes that configure (set) the forwarding class and loss priority. The dotted-line arrows that point away from the forwarding class and loss priority box indicate processes that use forwarding class and loss priority as input values on which to base actions.

For example, the BA classifier sets the forwarding class and loss priority of incoming packets, so the forwarding class and loss priority are outputs of the classifier and the arrow points away from the classifier. The scheduler receives the forwarding class and loss priority settings, and queues the outgoing packets based on those settings, so the arrow points toward the scheduler.

## Understanding Default CoS Settings

If you do not configure CoS settings, Junos OS performs some CoS functions to ensure that traffic and protocol packets are forwarded with minimum delay when the network experiences congestion. Some default mappings are automatically applied to each logical interface that you configure.

You can display default CoS settings by issuing the **show class-of-service** operational mode command.

This topic describes the default configurations for the following CoS components:

- [Default Forwarding Classes and Queue Mapping on page 27](#)
- [Default Forwarding Class Sets \(Priority Groups\) on page 27](#)
- [Default Code-Point Aliases on page 28](#)

- [Default Classifiers on page 29](#)
- [Default Rewrite Rules on page 32](#)
- [Default Drop Profile on page 32](#)
- [Default Schedulers on page 32](#)
- [Default Scheduler Maps on page 34](#)

## Default Forwarding Classes and Queue Mapping

[Table 10 on page 27](#) shows the default forwarding class to queue mapping along with the packet drop attribute.

**Table 10: Default Forwarding Classes and Queue Mapping**

Default Forwarding Class	Description	Default Queue Mapping	Packet Drop Attribute
best-effort (be)	Best-effort traffic class (priority 0, IEEE 802.1p code point 000)	0	drop
fcoe	Guaranteed delivery for FCoE traffic (priority 3, IEEE 802.1p code point 011)	3	no-loss
no-loss	Guaranteed delivery for TCP no-loss traffic (priority 4, IEEE 802.1p code point 100)	4	no-loss
network-control (nc)	Network control traffic (priority 7, IEEE 802.1p code point 111)	7	drop

Unicast and multidestination (multicast, broadcast, and destination lookup fail) traffic use the same forwarding classes and output queues.

## Default Forwarding Class Sets (Priority Groups)

If you do not explicitly configure forwarding class sets, the system automatically creates a default forwarding class set that contains all of the forwarding classes on the switch. The system assigns 100 percent of the port output bandwidth to the default forwarding class set.

Ingress traffic is classified based on the default classifier settings. The forwarding classes (queues) in the default forwarding class set receive bandwidth based on the default scheduler settings. Forwarding classes that are not part of the default scheduler receive no bandwidth.

The default forwarding class set is transparent. It does not appear in the configuration and is used for Data Center Bridging Capability Exchange (DCBX) protocol advertisement.

## Default Code-Point Aliases

[Table 11 on page 28](#) shows the default mapping of code-point aliases to IEEE code points.

**Table 11: Default IEEE 802.1 Code-Point Aliases**

CoS Value Types	Mapping
be	000
be1	001
ef	010
ef1	011
af11	100
af12	101
nc1	110
nc2	111

[Table 12 on page 28](#) shows the default mapping of code-point aliases to DSCP and DSCP IPv6 code points.

**Table 12: Default DSCP and DCSP IPv6 Code-Point Aliases**

CoS Value Types	Mapping
ef	101110
af11	001010
af12	001100
af13	001110
af21	010010
af22	010100
af23	010110
af31	011010
af32	011100
af33	011110

Table 12: Default DSCP and DCSP IPv6 Code-Point Aliases (*continued*)

CoS Value Types	Mapping
af41	100010
af42	100100
af43	100110
be	000000
cs1	001000
cs2	010000
cs3	011000
cs4	100000
cs5	101000
nc1	110000
nc2	111000

## Default Classifiers

The switch applies default IEEE 802.1 and DSCP classifiers to each interface that does not have explicitly configured classifiers. If you explicitly configure one type of classifier but not other types of classifiers, the system uses only the configured classifier and does not use default classifiers for other types of traffic. The switch applies the default MPLS EXP classifier to a logical interface if you enable the MPLS protocol family on that interface.

There are two different default IEEE 802.1 classifiers, a trusted classifier for ports in trunk mode, and an untrusted classifier for ports in access mode. [Table 13 on page 29](#) shows the default mapping of IEEE 802.1 code-point values to forwarding classes and loss priorities for ports in trunk mode.

Table 13: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier)

Code Point	Forwarding Class	Loss Priority
be (000)	best-effort	low
be1 (001)	best-effort	low
ef (010)	best-effort	low

**Table 13: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier) (continued)**

Code Point	Forwarding Class	Loss Priority
ef1 (011)	fcoe	low
af11 (100)	no-loss	low
af12 (101)	best-effort	low
nc1 (110)	network-control	low
nc2 (111)	network-control	low

Table 14 on page 30 shows the default mapping of IEEE 802.1p code-point values to forwarding classes and loss priorities for ports in access mode (all incoming traffic is mapped to best-effort forwarding classes).

**Table 14: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier)**

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	low
010	best-effort	low
011	best-effort	low
100	best-effort	low
101	best-effort	low
110	best-effort	low
111	best-effort	low

Table 15 on page 30 shows the default mapping of DSCP code-point values to forwarding classes and loss priorities for DSCP IP and DCSP IPv6.

**Table 15: Default DSCP IP and IPv6 Classifiers**

Code Point	Forwarding Class	Loss Priority
ef (101110)	best-effort	low
af11 (001010)	best-effort	low



Table 15: Default DSCP IP and IPv6 Classifiers (*continued*)

Code Point	Forwarding Class	Loss Priority
af12 (001100)	best-effort	low
af13 (001110)	best-effort	low
af21 (010010)	best-effort	low
af22 (010100)	best-effort	low
af23 (010110)	best-effort	low
af31 (011010)	best-effort	low
af32 (011100)	best-effort	low
af33 (011110)	best-effort	low
af41 (100010)	best-effort	low
af42 (100100)	best-effort	low
af43 (100110)	best-effort	low
be (000000)	best-effort	low
cs1 (001000)	best-effort	low
cs2 (010000)	best-effort	low
cs3 (011000)	best-effort	low
cs4 (100000)	best-effort	low
cs5 (101000)	best-effort	low
nc1 (110000)	network-control	low
nc2 (111000)	network-control	low

Table 16 on page 31 shows the default mapping of MPLS EXP code-point values to forwarding classes and loss priorities.

Table 16: Default EXP Classifiers

Code Point	Forwarding Class	Loss Priority
000	best-effort	low

Table 16: Default EXP Classifiers (*continued*)

Code Point	Forwarding Class	Loss Priority
001	best-effort	high
010	expedited-forwarding	low
011	expedited-forwarding	high
100	assured-forwarding	low
101	assured-forwarding	high
110	network-control	low
111	network-control	high

## Default Rewrite Rules

There are no default rewrite rules. If you do not explicitly configure rewrite rules, the switch does not reclassify egress traffic.

## Default Drop Profile

Table 17 on page 32 shows the default drop profile configuration.

Table 17: Default Drop Profile

Fill Level	Drop Probability
100	100

## Default Schedulers

Table 18 on page 32 shows the default scheduler configuration.

Table 18: Default Schedulers

Default Scheduler and Queue Number	Transmit Rate (Guaranteed Minimum Bandwidth)	Rate Shaping (Maximum Bandwidth)	Excess Bandwidth Sharing	Priority	Buffer Size
best-effort forwarding class scheduler (queue 0)	15%	None	15%	low	15%
fcoe forwarding class scheduler (queue 3)	35%	None	35%	low	35%
no-loss forwarding class scheduler (queue 4)	35%	None	35%	low	35%

Table 18: Default Schedulers (*continued*)

Default Scheduler and Queue Number	Transmit Rate (Guaranteed Minimum Bandwidth)	Rate Shaping (Maximum Bandwidth)	Excess Bandwidth Sharing	Priority	Buffer Size
network-control forwarding class scheduler (queue 7)	15%	None	15%	low	15%



**NOTE:** By default, the minimum guaranteed bandwidth (transmit rate) also determines the amount of excess (extra) bandwidth that the queue can share. Extra bandwidth is allocated to queues in proportion to the transmit rate of each queue. You can use the `excess-rate` statement to override the default setting and configure the excess bandwidth percentage independently of the transmit rate.

By default, only the four default schedulers shown in [Table 18 on page 32](#) have traffic mapped to them. Only the forwarding classes and queues associated with the default schedulers receive default bandwidth, based on the default scheduler transmit rate. (You can configure schedulers and forwarding classes to allocate bandwidth to other queues or to change the default bandwidth of a default queue.) If a forwarding class does not transport traffic, the bandwidth allocated to that forwarding class is available to other forwarding classes. Unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic use the same forwarding classes and output queues.

Default scheduling is port scheduling.

Default hierarchical scheduling, known as enhanced transmission selection (ETS, defined in IEEE 802.1Qaz), allocates the total port bandwidth to the four default forwarding classes served by the four default schedulers, as defined by the four default schedulers. The result is the same as direct port scheduling. Configuring hierarchical port scheduling, however, enables you to group forwarding classes that carry similar types of traffic into forwarding class sets (also called priority groups), and to assign port bandwidth to each forwarding class set. The port bandwidth assigned to the forwarding class set is then assigned to the forwarding classes within the forwarding class set. This hierarchy enables you to control port bandwidth allocation with greater granularity, and enables hierarchical sharing of extra bandwidth to better utilize link bandwidth.

Default scheduling uses weighted round-robin (WRR) scheduling. Each queue receives a portion (weight) of the total available interface bandwidth. The scheduling weight is based on the transmit rate of the default scheduler for that queue. For example, queue 7 receives a default scheduling weight of 15 percent of the available bandwidth, and queue 4 receives a default scheduling weight of 35 percent of the available bandwidth. Queues are mapped to forwarding classes (for example, queue 7 is mapped to the network-control forwarding class and queue 4 is mapped to the no-loss forwarding class), so forwarding classes receive the default bandwidth for the queues to which they are mapped. Unused bandwidth is shared with other default queues.

If you want non-default (unconfigured) queues to forward traffic, you should explicitly map traffic to those queues (configure the forwarding classes and queue mapping) and create schedulers to allocate bandwidth to those queues. By default, queues 1, 2, 5, and 6 are unconfigured. Unconfigured queues have a default scheduling weight of 1 so that they can receive a small amount of bandwidth in case they need to forward traffic.

If you map traffic to an unconfigured queue and do not schedule port resources for the queue (configure a scheduler, map it to the forwarding class that is mapped to the queue, and apply the scheduler mapping to the port), the queue receives only the amount of excess bandwidth proportional to its default weight (1). The actual amount of bandwidth an unconfigured queue gets depends on how much bandwidth the other queues on the port are using.

If the other queues use less than their allocated amount of bandwidth, the unconfigured queues can share the unused bandwidth. Configured queues have higher priority for bandwidth than unconfigured queues, so if a configured queue needs more bandwidth, then less bandwidth is available for unconfigured queues. Unconfigured queues always receive a minimum amount of bandwidth based on their scheduling weight (1). If you map traffic to an unconfigured queue, to allocate bandwidth to that queue, configure a scheduler for the forwarding class that is mapped to the queue and apply it to the port.

## Default Scheduler Maps

Table 19 on page 34 shows the default mapping of forwarding classes to schedulers.

**Table 19: Default Scheduler Maps**

Forwarding Class	Scheduler
best-effort	Default BE scheduler
fcoe	Default FCoE scheduler
no-loss	No-loss scheduler
network-control	Default network-control scheduler

### Related Documentation

- [Overview of Junos OS CoS on page 4](#)
- [CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems on page 6](#)
- [Understanding Junos CoS Components on page 17](#)
- [Understanding Default CoS Scheduling and Classification on page 62](#)
- [Understanding CoS Classifiers on page 46](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68](#)
- [Understanding CoS Code-Point Aliases on page 81](#)
- [Understanding CoS Forwarding Classes on page 84](#)
- [Understanding CoS Rewrite Rules on page 97](#)

- [Understanding CoS Port Schedulers on QFX Switches on page 125](#)
- [Understanding CoS WRED Drop Profiles on page 205](#)

## CoS Inputs and Outputs Overview

Some CoS components map one set of values to another set of values. Each mapping contains one or more inputs and one or more outputs. When you configure a mapping, you set the outputs for a given set of inputs, as shown in [Table 20 on page 35](#).

**Table 20: CoS Mappings—Inputs and Outputs**

CoS Mappings	Inputs	Outputs	Comments
<b>classifiers</b>	<b>code-points</b>	<b>forwarding-class, loss-priority</b>	The map sets the forwarding class and packet loss priority (PLP) for a specific set of code points.
<b>drop-profile-map</b>	<b>loss-priority, protocol</b>	<b>drop-profile</b>	The map sets the drop profile for a specific PLP and protocol type.
<b>rewrite-rules</b>	<b>loss-priority, forwarding-class</b>	<b>code-points</b>	The map sets the code points for a specific forwarding class and PLP.
<b>rewrite-value (Fibre Channel Interfaces)</b>	<b>forwarding-class</b>	<b>code-point</b>	(Systems that support native Fibre Channel interfaces only) The map sets the code point for the forwarding class specified in the fixed classifier attached to the native Fibre Channel (NP_Port) interface.

### Related Documentation

- [Understanding CoS Packet Flow on page 24](#)

## Overview of Policers

A switch polices traffic by limiting the input or output transmission rate of a class of traffic according to user-defined criteria. Policing (or rate-limiting) traffic allows you to control the maximum rate of traffic sent or received on an interface and to provide multiple priority levels or classes of service.


- [Policer Overview on page 36](#)
- [Policer Types on page 36](#)
- [Policer Actions on page 37](#)
- [Policer Colors on page 38](#)
- [Filter-Specific Policers on page 38](#)
- [Suggested Naming Convention for Policers on page 39](#)
- [Policer Counters on page 39](#)
- [Policer Algorithms on page 39](#)
- [How Many Policers Are Supported? on page 40](#)
- [Policers Can Limit Egress Firewall Filters on page 40](#)

## Policer Overview

You use policers to apply limits to traffic flow and set consequences for packets that exceed these limits—usually applying a higher loss priority—so that if packets encounter downstream congestion, they can be discarded first. Policers apply only to unicast packets.

Policers provide two functions: metering and marking. A policer meters (measures) each packet against traffic rates and burst sizes that you configure. It then passes the packet and the metering result to the marker, which assigns a packet loss priority that corresponds to the metering result. [Figure 4 on page 36](#) illustrates this process.

**Figure 4: Flow of Tricolor Marking Policer Operation**

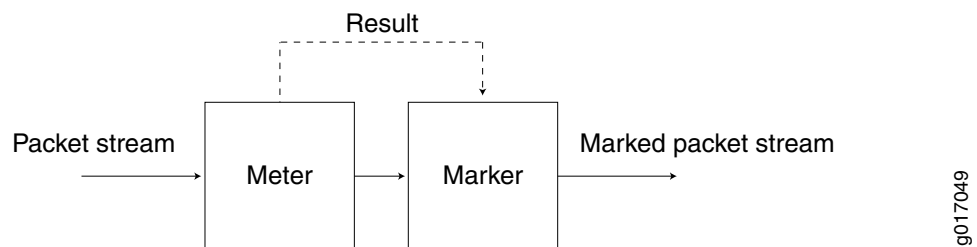

After you name and configure a policer, you can use it by specifying it as an action in one or more firewall filters.

## Policer Types

A switch supports three types of policers:

- **Single-rate two-color marker**—A two-color policer (or “policer” when used without qualification) meters the traffic stream and classifies packets into two categories of packet loss priority (PLP) according to a configured bandwidth and burst-size limit. You can mark packets that exceed the bandwidth and burst-size limit with a specified PLP or simply discard them.

You can specify this type of policer in an ingress or egress firewall.



**NOTE:** A two-color policer is most useful for metering traffic at the port (physical interface) level.

- **Single-rate three-color marker**—This type of policer is defined in RFC 2697, *A Single Rate Three Color Marker*, as part of an assured forwarding (AF) per-hop-behavior (PHB) classification system for a Differentiated Services (DiffServ) environment. This type of policer meters traffic based on one rate—the configured committed information rate (CIR) as well as the committed burst size (CBS) and the excess burst size (EBS). The CIR specifies the average rate at which bits are admitted to the switch. The CBS specifies the usual burst size in bytes and the EBS specifies the maximum burst size in bytes. The EBS must be greater than or equal to the CBS, and neither can be 0.

You can specify this type of policer in an ingress or egress firewall.



**NOTE:** A single-rate three-color marker (TCM) is most useful when a service is structured according to packet length and not peak arrival rate.

- Two-rate three-color marker—This type of policer is defined in RFC 2698, *A Two Rate Three Color Marker*, as part of an assured forwarding per-hop-behavior classification system for a Differentiated Services environment. This type of policer meters traffic based on two rates—the CIR and peak information rate (PIR) along with their associated burst sizes, the CBS and peak burst size (PBS). The PIR specifies the maximum rate at which bits are admitted to the network and must be greater than or equal to the CIR.

You can specify this type of policer in an ingress or egress firewall.



**NOTE:** A two-rate three-color policer is most useful when a service is structured according to arrival rates and not necessarily packet length.

See [Table 21 on page 37](#) for information about how metering results are applied for each of these policer types.

## Policer Actions

Policer actions are implicit or explicit and vary by policer type. *Implicit* means that Junos OS assigns the loss priority automatically. [Table 21 on page 37](#) describes the policer actions.

**Table 21: Policer Actions**

Policer	Marking	Implicit Action	Configurable Action
Single-rate two-color	Green (conforming)	Assign low loss priority	None
	Red (nonconforming)	None	Discard
Single-rate three-color	Green (conforming)	Assign low loss priority	None
	Yellow (above the CIR and CBS)	Assign medium-high loss priority	None
	Red (above the EBS)	Assign high loss priority	Discard

Table 21: Policer Actions (*continued*)

Policer	Marking	Implicit Action	Configurable Action
Two-rate three-color	Green (conforming)	Assign low loss priority	None
	Yellow (above the CIR and CBS)	Assign medium-high loss priority	None
	Red (above the PIR and PBS)	Assign high loss priority	Discard



**NOTE:** If you specify a policer in an egress firewall filter, the only supported action is **discard**.

## Policer Colors

Single-rate and two-rate three-color policers can operate in two modes:

- **Color-blind**—In color-blind mode, the three-color policer assumes that all packets examined have not been previously marked or metered. In other words, the three-color policer is “blind” to any previous coloring a packet might have had.
- **Color-aware**—In color-aware mode, the three-color policer assumes that all packets examined have been previously marked or metered. In other words, the three-color policer is “aware” of the previous coloring a packet might have had. In color-aware mode, the three-color policer can increase the PLP of a packet but cannot decrease it. For example, if a color-aware three-color policer meters a packet with a medium PLP marking, it can raise the PLP level to high but cannot reduce the PLP level to low.

## Filter-Specific Policers

You can configure policers to be filter-specific, which means that Junos OS creates only one policer instance regardless of how many times the policer is referenced. When you do this on some QFX switches, rate limiting is applied in aggregate, so if you configure a policer to discard traffic that exceeds 1 Gbps and reference that policer in three different terms, the total bandwidth allowed by the filter is 1 Gbps. However, the behavior of a filter-specific policer is affected by how the firewall filter terms that reference the policer are stored in TCAM. If you create a filter-specific policer and reference it in multiple firewall filter terms, the policer allows more traffic than expected if the terms are stored in different TCAM slices. For example, if you configure a policer to discard traffic that exceeds 1 Gbps and reference that policer in three different terms that are stored in three separate memory slices, the total bandwidth allowed by the filter is 3 Gbps, not 1 Gbps. (This behavior does not occur in QFX10000 switches.)

To prevent this unexpected behavior from occurring, use the information about TCAM slices presented in *Planning the Number of Firewall Filters to Create* to organize your



configuration file so that all the firewall filter terms that reference a given filter-specific policer are stored in the same TCAM slice.

## Suggested Naming Convention for Policers

We recommend that you use the naming convention ***policertypeTCM#-color type*** when configuring three-color policers and ***policer#*** when configuring two-color policers. TCM stands for three-color marker. Because policers can be numerous and must be applied correctly to work, a simple naming convention makes it easier to apply the policers properly. For example, the first single-rate, color-aware three-color policer configured would be named ***srTCM1-ca***. The second two-rate, color-blind three-color configured would be named ***trTCM2-cb***. The elements of this naming convention are explained below:

- sr (single-rate)
- tr (two-rate)
- TCM (tricolor marking)
- 1 or 2 (number of marker)
- ca (color-aware)
- cb (color-blind)

## Policer Counters

On some QFX switches, each policer that you configure includes an implicit counter that counts the number of packets that exceed the rate limits that are specified for the policer. If you use the same policer in multiple terms—either within the same filter or in different filters—the implicit counter counts all the packets that are policed in all of these terms and provides the total amount. (This does not apply to QFX10000 switches.) If you want to obtain separate packet counts for each term on an affected switch, use these options:

- Configure a unique policer for each term.
- Configure only one policer, but use a unique, explicit counter in each term.

## Policer Algorithms

Policing uses the *token-bucket algorithm*, which enforces a limit on average bandwidth while allowing bursts up to a specified maximum value. It offers more flexibility than the *leaky bucket algorithm* in allowing a certain amount of bursty traffic before it starts discarding packets.



**NOTE:** In an environment of light bursty traffic, QFX5200 might not replicate all multicast packets to two or more downstream interfaces. This occurs only at a line rate burst—if traffic is consistent, the issue does not occur. In addition, the issue occurs only when packet size increases beyond 6k in a one gigabit traffic flow.

## How Many Policers Are Supported?

QFX10000 switches support 8K policers (all policer types). QFX5100 and QFX5200 switches support 1535 ingress policers and 1024 egress policers (assuming one policer per firewall filter term).

QFX3500 and QFX3600 standalone switches and QFabric Node devices support the following numbers of policers (assuming one policer per firewall filter term):

- Two-color policers used in ingress firewall filters: 767
- Three-color policers used in ingress firewall filters: 767
- Two-color policers used in egress firewall filters: 1022
- Three-color policers used in egress firewall filters: 512

## Policers Can Limit Egress Firewall Filters

On some switches, the number of egress policers that you configure can affect the total number of allowed egress firewall filters. (This issue does not affect QFX10000 switches.) On the affected switches, every policer has two implicit counters that consume two entries in a 1024-entry TCAM that is used for counters, including counters that are configured as action modifiers in firewall filter terms. (Policers consume two entries because one is used for green packets and one is used for nongreen packets regardless of policer type.) If the TCAM becomes full, you cannot commit any more egress firewall filters that have terms with counters. For example, if you configure and commit 512 egress policers (two-color, three-color, or a combination of both policer types), all of the memory entries for counters are used up. If later in your configuration file you insert additional egress firewall filters with terms that also include counters, *none* of the terms in those filters are committed because there is no available memory space for the counters.

Here are some additional examples:

- Assume that you configure egress filters that include a total of 512 policers and no counters. Later in your configuration file you include another egress filter with 10 terms, 1 of which has a counter action modifier. None of the terms in this filter are committed because there is not enough TCAM space for the counter.
- Assume that you configure egress filters that include a total of 500 policers, so 1000 TCAM entries are occupied. Later in your configuration file you include the following two egress filters:
  - Filter A with 20 terms and 20 counters. All the terms in this filter are committed because there is enough TCAM space for all the counters.
  - Filter B comes after Filter A and has five terms and five counters. *None* of the terms in this filter are committed because there is not enough memory space for *all* the counters. (Five TCAM entries are required but only four are available.)

You can prevent this problem by ensuring that egress firewall filter terms with counter actions are placed earlier in your configuration file than terms that include policers. In

this circumstance, Junos OS commits policers even if there is not enough TCAM space for the implicit counters. For example, assume the following:

- You have 1024 egress firewall filter terms with counter actions.
- Later in your configuration file you have an egress filter with 10 terms. None of the terms have counters but one has a policer action modifier.

You can successfully commit the filter with 10 terms even though there is not enough TCAM space for the implicit counters of the policer. The policer is committed without the counters.

**Related  
Documentation**

- *Understanding Color-Blind Mode for Single-Rate Tricolor Marking*
- *Understanding Color-Blind Mode for Two-Rate Tricolor Marking*
- *Understanding Color-Aware Mode for Single-Rate Tricolor Marking*
- *Understanding Color-Aware Mode for Two-Rate Tricolor Marking*
- *Configuring Two-Color and Three-Color Policers to Control Traffic Rates*



## PART 2

# Classifying and Rewriting Traffic

- [Using Classifiers, Forwarding Classes, and Rewrite Rules on page 45](#)



## CHAPTER 2

# Using Classifiers, Forwarding Classes, and Rewrite Rules

- [Understanding CoS Classifiers on page 46](#)
- [Defining CoS BA Classifiers \(DSCP, DSCP IPv6, IEEE 802.1p\) on page 52](#)
- [Example: Configuring Classifiers on page 53](#)
- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules on page 56](#)
- [Configuring a Global MPLS EXP Classifier on page 59](#)
- [Configuring Rewrite Rules for MPLS EXP Classifiers on page 60](#)
- [Understanding Host Inbound Traffic Classification on page 61](#)
- [Understanding Default CoS Scheduling and Classification on page 62](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68](#)
- [Understanding CoS Code-Point Aliases on page 81](#)
- [Defining CoS Code-Point Aliases on page 83](#)
- [Understanding CoS Forwarding Classes on page 84](#)
- [Defining CoS Forwarding Classes on page 87](#)
- [Example: Configuring Forwarding Classes on page 88](#)
- [Understanding CoS Forwarding Class Sets \(Priority Groups\) on page 91](#)
- [Defining CoS Forwarding Class Sets on page 92](#)
- [Example: Configuring Forwarding Class Sets on page 93](#)
- [Understanding CoS Rewrite Rules on page 97](#)
- [Defining CoS Rewrite Rules on page 100](#)
- [Troubleshooting an Unexpected Rewrite Value on page 101](#)

## Understanding CoS Classifiers

---

Packet classification maps incoming packets to a particular class-of-service (CoS) servicing level. Classifiers map packets to a forwarding class and a loss priority, and they assign packets to output queues based on the forwarding class. There are three general types of classifiers:

- Behavior aggregate (BA) classifiers—DSCP and DSCP IPv6 classify IP and IPv6 traffic, EXP classifies MPLS traffic, and IEEE 802.1p classifies all other traffic. (Although this topic covers EXP classifiers, see [“Understanding CoS MPLS EXP Classifiers and Rewrite Rules” on page 56](#) for more details. EXP classifiers are applied only on **family mpls** interfaces.)
- Fixed classifiers—Fixed classifiers classify all ingress traffic on a physical interface into one forwarding class, regardless of the CoS bits in the packet header.
- Multifield (MF) classifiers—MF classifiers classify traffic based on more than one field in the packet header and take precedence over BA and fixed classifiers.

Classifiers assign incoming unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic to forwarding classes, so that different classes of traffic can receive different treatment. Classification is based on CoS bits, DSCP bits, EXP bits, a forwarding class (fixed classifier), or packet headers (multifield classifiers). Each classifier assigns all incoming traffic that matches the classifier configuration to a particular forwarding class. A classifier can assign both unicast and multdestination traffic to the same forwarding class.

- [Interfaces and Output Queues on page 46](#)
- [Classifier Support by Type on page 47](#)
- [Behavior Aggregate Classifiers on page 47](#)
- [Fixed Classifiers on Ethernet Interfaces on page 50](#)
- [Multifield Classifiers on page 50](#)
- [MPLS EXP Classifiers on page 51](#)
- [Packet Classification for IRB Interfaces on page 51](#)

## Interfaces and Output Queues

On Gigabit Ethernet interfaces, 10-Gigabit Ethernet interfaces, and link aggregation (LAG) interfaces, you can apply classifiers to Layer 2 logical interface unit 0 (but not to other logical interfaces), and to Layer 3 logical interfaces (you can apply different classifiers to different Layer 3 logical interfaces). You cannot apply classifiers to physical interfaces. [“Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces” on page 68](#) describes the interaction between classifiers and interfaces in greater detail.

You can configure both a BA classifier and an MF classifier on an interface. If you do this, the BA classification is performed first, and then the MF classification is performed. If the two classification results conflict, the MF classification result overrides the BA classification result.



You cannot configure a fixed classifier and a BA classifier on the same interface.

You can configure either a DSCP or a DSCP IPv6 classifier and also an IEEE 802.1p classifier on the same interface. IP traffic uses the DSCP or DSCP IPv6 classifier. If you configure an interface as **family mpls**, then the interface uses the default MPLS EXP classifier. If you configure an MPLS EXP classifier, then all MPLS traffic on the switch uses the global EXP classifier. All other traffic uses the IEEE classifier. You can configure up to 64 EXP classifiers with up to 8 entries per classifier (one entry for each forwarding class) and apply them to logical interfaces. After you configure an MPLS EXP classifier, you can configure it as the global EXP classifier by including the EXP classifier at the **[edit class-of-service system-defaults classifiers exp]** hierarchy level. All switch interfaces that are configured as **family mpls** use either the default EXP classifier or the global EXP classifier specified in this configuration statement to classify MPLS traffic.

You can apply classifiers to one or more interfaces.

## Classifier Support by Type

You can configure enough classifiers to handle most, if not all, network scenarios. [Table 22 on page 47](#) shows how many of each type of classifiers you can configure, and how many entries you can configure per classifier.

**Table 22: Classifier Support by Classifier Type**

Classifier Type	Default Classifier Name	Maximum Number of Classifiers	Maximum Number of Entries per Classifier
IEEE 802.1p (Layer 2)	ieee8021p-default (for ports in trunk mode)  ieee8021p-untrust (for ports in access mode)	64	16
DSCP (Layer 3)	dscp-default	64	64
DSCP IPv6 (Layer 3)	dscp-ipv6-default	64	64
EXP (MPLS)	exp-default	64	8
Fixed	There is no default fixed classifier	8	16

The number of fixed classifiers supported (8) equals the number of supported forwarding classes (fixed classifiers assign all incoming traffic on an interface to one forwarding class).

## Behavior Aggregate Classifiers

Behavior aggregate classifiers map a class-of-service (CoS) value to a forwarding class and loss priority. The forwarding class determines the output queue. A scheduler uses the loss priority to control packet discard during periods of congestion by associating different drop profiles with different loss priorities.

The switch supports three types of BA classifiers:

- Differentiated Services code point (DSCP) for IP DiffServ (IP and IPv6)
- IEEE 802.1p CoS bits
- MPLS EXP (applies only to interfaces configured as **family mpls**)

BA classifiers are based on fixed-length fields, which makes them computationally more efficient than MF classifiers. Therefore, core devices, which handle high traffic volumes, are normally configured to perform BA classification.

### Default Behavior Aggregate Classification

Juniper Networks Junos OS automatically assigns implicit default classifiers to all logical interfaces based on the type of interface. [Table 23 on page 48](#) lists different types of interfaces and the corresponding implicit default BA classifiers.

**Table 23: Default BA Classification**

Type of Interface	Default BA Classification
Layer 2 interface in trunk mode	ieee8021p-default
Layer 2 interface in access mode	ieee8021p-untrusted
Layer 3 interface	dscp-default dscp-ipv6-default
MPLS interface	exp-default



**NOTE:** Default BA classifiers assign traffic only to the **best-effort**, **fcoe**, **no-loss**, and **network-control** forwarding classes.

When you explicitly associate a classifier with a logical interface, you override the default classifier with the explicit classifier.



**NOTE:** You can apply only one DSCP and one IEEE 802.1p classifier to a Layer 2 interface. If both types of classifiers are present, DSCP classifiers take precedence over IEEE 802.1p classifiers. If you configure an EXP classifier and apply it on interfaces configured as **family mpls**, then MPLS traffic uses the EXP classifier on those interfaces.

### Importing a Classifier

You can use any existing classifier, including the default classifiers, as the basis for defining a new classifier. You accomplish this using the **import** statement.

The imported classifier is used as a template and is not modified. The modifications you make become part of a new classifier (and a new template) identified by the name of the new classifier. Whenever you commit a configuration that assigns a new forwarding class-name and loss-priority value to a code-point alias or set of bits, it replaces the old entry in the new classifier template. As a result, you must explicitly specify every CoS value in every packet classification that requires modification.

### PFC Priorities

The eight IEEE 802.1p code points correspond to the eight priorities that priority-based flow control (PFC) uses to differentiate traffic classes for lossless transport. When you map a forwarding class (which maps to an output queue) to an IEEE 802.1p CoS value, the IEEE 802.1p CoS value identifies the PFC priority.

Although you can map a priority to any output queue (by mapping the IEEE 802.1p code point value to a forwarding class), we recommend that the priority and the forwarding class match in a one-to-one correspondence. For example, priority 0 is assigned to queue 0, priority 1 is assigned to queue 1, and so on, as shown in [Table 24 on page 49](#). A one-to-one correspondence of queue and priority numbers makes it easier to configure and maintain the mapping of forwarding classes to priorities and queues.

**Table 24: Default IEEE 802.1p Code Point to PFC Priority, Output Queue, and Forwarding Class Mapping**

IEEE 802.1p Code Point	PFC Priority	Output Queue	Forwarding Class and Packet Drop Attribute
000	0	0	best-effort (drop)
001	1	1	best-effort (drop)
010	2	2	best-effort (drop)
011	3	3	fcoe (no-loss)
100	4	4	no-loss (no-loss)
101	5	5	best-effort (drop)
110	6	6	network-control (drop)
111	7	7	network-control (drop)



**NOTE:** By convention, deployments with converged server access typically use IEEE 802.1p priority 3 (011) for FCoE traffic. The default mapping of the fcoe forwarding class is to queue 3. Apply priority-based flow control (PFC) to the entire FCoE data path to configure the end-to-end lossless behavior that FCoE requires. We recommend that you use priority 3 for FCoE traffic unless your network architecture requires that you use a different priority.

## Fixed Classifiers on Ethernet Interfaces

Fixed classifiers map all traffic on a physical interface to a forwarding class and a loss priority (as opposed to BA classifiers, which map traffic into multiple different forwarding classes based on the IEEE 802.1p CoS bits field value in the VLAN header or the DSCP field value in the type-of-service bits in the packet IP header). Each forwarding class maps to an output queue. However, when you use a fixed classifier, regardless of the CoS or DSCP bits, all Incoming traffic is classified into the forwarding class specified in the fixed classifier. A scheduler uses the loss priority to control packet discard during periods of congestion by associating different drop profiles with different loss priorities.

You cannot configure a fixed classifier and a DSCP or IEEE 802.1p BA classifier on the same interface. If you configure a fixed classifier on an interface, you cannot configure a DSCP or an IEEE classifier on that interface. If you configure a DSCP classifier, an IEEE classifier, or both classifiers on an interface, you cannot configure a fixed classifier on that interface.



**NOTE:** You can configure both an EXP classifier for MPLS traffic and a fixed classifier on the same interface. When both an EXP classifier and a fixed classifier are applied to an interface, MPLS traffic on interfaces configured as `family mpls` uses the EXP classifier, and all other traffic uses the fixed classifier.

To switch from a fixed classifier to a BA classifier, or to switch from a BA classifier to a fixed classifier, deactivate the existing classifier attachment on the interface, and then attach the new classifier to the interface.



**NOTE:** If you configure a fixed classifier that classifies all incoming traffic into the `fcoe` forwarding class (or any forwarding class designed to handle FCoE traffic), you must ensure that all traffic that enters the interface is FCoE traffic and is tagged with the FCoE IEEE 802.1p code point (priority).

## Multifield Classifiers

Multifield classifiers examine multiple fields in a packet such as source and destination addresses and source and destination port numbers of the packet. With MF classifiers, you set the forwarding class and loss priority of a packet based on firewall filter rules.

MF classification is normally performed at the network edge because of the general lack of DiffServ code point (DSCP) support in end-user applications. On a switch at the edge of a network, an MF classifier provides the filtering functionality that scans through a variety of packet fields to determine the forwarding class for a packet. Typically, a classifier performs matching operations on the selected fields against a configured value.

## MPLS EXP Classifiers

You can configure up to 64 EXP classifiers for MPLS traffic and apply them to **family mpls** interfaces. On **family mpls** interfaces, if a fixed classifier is present on the interface, the EXP classifier overrides the fixed classifier for MPLS traffic only.

You can use the default MPLS EXP classifier or you can configure an EXP classifier and apply it globally to all interfaces that are configured as **family mpls** by including it in the **[edit class-of-service system-defaults classifiers exp]** hierarchy level. On **family mpls** interfaces, if a fixed classifier is present on the interface, the EXP classifier overrides the fixed classifier for MPLS traffic only.

Because the EXP classifier is global, you cannot configure some ports to use a fixed IEEE 802.1p classifier for MPLS traffic on some interfaces and the global EXP classifier for MPLS traffic on other interfaces. When you configure a global EXP classifier, all MPLS traffic on all interfaces uses the EXP classifier, even interfaces that have a fixed classifier.

For details about EXP classifiers, see [“Understanding CoS MPLS EXP Classifiers and Rewrite Rules” on page 56](#). EXP classifiers are applied only on **family mpls** interfaces.)

## Packet Classification for IRB Interfaces

You cannot apply classifiers directly to integrated routing and bridging (IRB) interfaces because the members of IRBs are VLANs, not ports. However, you can apply classifiers to the VLAN port members of an IRB interface. You can also apply MF classifiers to IRBs.

### Related Documentation

- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules on page 56](#)
- [Understanding CoS Packet Flow on page 24](#)
- [Understanding Default CoS Settings on page 26](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68](#)
- [Example: Configuring Classifiers on page 53](#)
- [Configuring a Global MPLS EXP Classifier on page 59](#)

## Defining CoS BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p)

Packet classification associates incoming packets with a particular CoS servicing level. Behavior aggregate (BA) classifiers examine the Differentiated Services code point (DSCP or DSCP IPv6) value, the IEEE 802.1p CoS value, or the MPLS EXP value in the packet header to determine the CoS settings applied to the packet. (See [“Configuring a Global MPLS EXP Classifier” on page 59](#) to learn how to define EXP classifiers for MPLS traffic.) BA classifiers allow you to set the forwarding class and loss priority of a packet based on the incoming CoS value.

Unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic use the same classifiers and forwarding classes.

To configure a DSCP, DSCP IPv6, or IEEE 802.1p BA classifier using the CLI:

1. Create a BA classifier:

- To create a DSCP, DSCP IPv6, or IEEE 802.1p BA classifier based on the default classifier, import the default DSCP, DSCP IPv6, or IEEE 802.1p classifier and associate it with a forwarding class, a loss priority, and a code point:

```
[edit class-of-service classifiers]
user@switch# set (dscp | dscp-ipv6 | ieee-802.1) classifier-name import default
forwarding-class forwarding-class-name loss-priority level code-points [aliases]
[bit-patterns]
```

- To create a BA classifier that is not based on the default classifier, create a DSCP, DSCP IPv6, or IEEE 802.1p classifier and associate it with a forwarding class, a loss priority, and a code point:

```
[edit class-of-service classifiers]
user@switch# set (dscp | dscp-ipv6 | ieee-802.1) classifier-name forwarding-class
forwarding-class-name loss-priority level code-points [aliases] [bit-patterns]
```

2. Apply the classifier to a specific Ethernet interface or to all Ethernet interfaces on the switch.

- To apply the classifier to a specific interface:

```
[edit class-of-service interfaces]
user@switch# set interface-name unit unit classifiers (dscp | dscp-ipv6 | ieee-802.1)
classifier-name
```

- To apply the classifier to all Ethernet interfaces on the switch, use wildcards for the interface name and the logical interface (unit) number:

```
[edit class-of-service interfaces]
user@switch# set xe-* unit * classifiers (dscp | dscp-ipv6 | ieee-802.1) classifier-name
```

### Related Documentation

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Classifiers on page 53](#)
- [Configuring a Global MPLS EXP Classifier on page 59](#)
- [Monitoring CoS Classifiers on page 627](#)
- [Understanding CoS Classifiers on page 46](#)

- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules on page 56](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68](#)

## Example: Configuring Classifiers

Packet classification associates incoming packets with a particular CoS servicing level. Classifiers associate packets with a forwarding class and loss priority and assign packets to output queues based on the associated forwarding class. You apply classifiers to ingress interfaces.

- [Requirements on page 53](#)
- [Overview on page 53](#)
- [Configuring Classifiers on page 54](#)
- [Verification on page 54](#)

### Requirements

This example uses the following hardware and software components:

- One switch.
- Junos OS Release 15.1X53-D10 or later for the QFX Series.

### Overview

Junos OS supports three general types of classifiers:

- Behavior aggregate or CoS value traffic classifiers—Examine the CoS value in the packet header. The value in this single field determines the CoS settings applied to the packet. BA classifiers allow you to set the forwarding class and loss priority of a packet based on the Differentiated Services code point (DSCP or DSCP IPv6) value, IEEE 802.1p value, or MPLS EXP value. (EXP classifiers can be applied only to **family mpls** interfaces.)
- Fixed classifiers. Fixed classifiers classify all ingress traffic on a physical interface into one forwarding class, regardless of the CoS bits in the VLAN header or the DSCP bits in the IP packet header.
- Multifield traffic classifiers—Examine multiple fields in the packet, such as source and destination addresses and source and destination port numbers of the packet. With multifield classifiers, you set the forwarding class and loss priority of a packet based on firewall filter rules.

This example describes how to configure a BA classifier called **ba-classifier** as the default IEEE 802.1 mapping of incoming traffic to forwarding classes, and apply it to ingress interface **xe-0/0/10**. The BA classifier assigns loss priorities, as shown in [Table 25 on page 54](#), to incoming packets in the four default forwarding classes. You can adapt the example to DSCP traffic by specifying a DSCP classifier instead of an IEEE classifier, and by applying DSCP bits instead of CoS bits.

To set multifield classifiers, use firewall filter rules.

Table 25: ba-classifier Loss Priority Assignments

Forwarding Class	CoS Traffic Type	ba-classifier Loss Priority to IEEE 802.1p Code Point Mapping	Packet Drop Attribute
<b>be</b>	Best-effort traffic	Low loss priority code point: <b>000</b>	drop
<b>fcoe</b>	Guaranteed delivery for Fibre Channel over Ethernet (FCoE) traffic	Low loss priority code point: <b>011</b>	no-loss
<b>no-loss</b>	Guaranteed delivery for TCP traffic	Low loss priority code point: <b>100</b>	no-loss
<b>nc</b>	Network-control traffic	Low loss priority code point: <b>110</b>	drop

## Configuring Classifiers

To configure an IEEE 802.1 BA classifier named **ba-classifier** as the default IEEE 802.1 classifier:

- Associate code point **000** with forwarding class **be** and loss priority **low**:  

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 ba-classifier import default forwarding-class be loss-priority low code-points 000
```
- Associate code point **011** with forwarding class **fcoe** and loss priority **low**:  

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 ba-classifier forwarding-class fcoe loss-priority low code-points 011
```
- Associate code point **100** with forwarding class **no-loss** and loss priority **low**:  

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 ba-classifier forwarding-class no-loss loss-priority low code-points 100
```
- Associate code point **110** with forwarding class **nc** and loss priority **low**:  

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 ba-classifier forwarding-class nc loss-priority low code-points 110
```
- Apply the classifier to ingress interface **xe-0/0/10**:  

```
[edit class-of-service interfaces]
user@switch# set xe-0/0/10 unit 0 classifiers ieee-802.1 ba-classifier
```

## Verification

To verify the classifier configuration, perform these tasks:

- [Verifying the Classifier Configuration on page 55](#)
- [Verifying the Ingress Interface Configuration on page 55](#)



### Verifying the Classifier Configuration

**Purpose** Verify that you configured the classifier with the correct forwarding classes, loss priorities, and code points.

**Action** List the classifier configuration using the operational mode command **show configuration class-of-service classifiers ieee-802.1 ba-classifier**:

```
user@switch> show configuration class-of-service classifiers ieee-802.1 ba-classifier
  forwarding-class be {
    loss-priority low code-points 000;
  }
  forwarding-class fcoe {
    loss-priority low code-points 011;
  }
  forwarding-class no-loss {
    loss-priority low code-points 100;
  }
  forwarding-class nc
    loss-priority low code-points 110;
  }
```

### Verifying the Ingress Interface Configuration

**Purpose** Verify that the classifier **ba-classifier** is attached to ingress interface **xe-0/0/10**.

**Action** List the ingress interface using the operational mode command **show configuration class-of-service interfaces xe-0/0/10**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/10
congestion-notification-profile fcoe-cnp;
unit 0 {
  classifiers {
    ieee-802.1 ba-classifier;
  }
}
```

#### Related Documentation

- [Defining CoS BA Classifiers \(DSCP, DSCP IPv6, IEEE 802.1p\) on page 52](#)
- [Configuring a Global MPLS EXP Classifier on page 59](#)
- [Configuring Rewrite Rules for MPLS EXP Classifiers on page 60](#)
- [Monitoring CoS Classifiers on page 627](#)
- [Understanding CoS Classifiers on page 46](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68](#)

## Understanding CoS MPLS EXP Classifiers and Rewrite Rules

---

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion by applying packet classifiers and rewrite rules to the MPLS traffic. MPLS classifiers are global and apply to all interfaces configured as **family mpls** interfaces.

When a packet enters a customer-edge interface on the ingress provider edge (PE) switch, the switch associates the packet with a particular CoS servicing level before placing the packet onto the label-switched path (LSP). The switches within the LSP utilize the CoS value set at the ingress PE switch to determine the CoS service level. The CoS value embedded in the classifier is translated and encoded in the MPLS header by means of the experimental (EXP) bits.

EXP classifiers map incoming MPLS packets to a forwarding class and a loss priority, and assign MPLS packets to output queues based on the forwarding class mapping. EXP classifiers are behavior aggregate (BA) classifiers.

EXP rewrite rules change (rewrite) the CoS value of the EXP bits in outgoing packets on the egress queues of the switch so that the new (rewritten) value matches the policies of a targeted peer. Policy matching allows the downstream routing platform or switch in a neighboring network to classify each packet into the appropriate service group.



**NOTE:** On QFX5200, QFX5100, QFX3500, QF3600, and EX4600 switches, and on QFabric systems, there is no default EXP classifier. If you want to classify incoming MPLS packets using the EXP bits, you must configure a global EXP classifier. The global EXP classifier applies to all MPLS traffic on interfaces configured as **family mpls**.

On QFX10000 switches, there is a no default EXP classifier. If you want to classify incoming MPLS packets using the EXP bits, you must configure EXP classifiers and apply them to logical interfaces configured as **family mpls**. (You cannot apply classifiers to physical interfaces.). You can configure up to 64 EXP classifiers.

There is no default EXP rewrite rule. If you want to rewrite the EXP bit value at the egress interface, you must configure EXP rewrite rules and apply them to logical interfaces.

EXP classifiers and rewrite rules are applied only to interfaces that are configured as **family mpls** (for example, set interfaces **xe-0/0/35 unit 0 family mpls.**)

---

This topic includes:

- [EXP Classifiers on page 57](#)
- [EXP Rewrite Rules on page 58](#)
- [Schedulers on page 59](#)

## EXP Classifiers

On QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, unlike DSCP and IEEE 802.1p BA classifiers, EXP classifiers are global to the switch and apply to all switch interfaces that are configured as **family mpls**. On QFX10000 switches, you apply EXP classifiers to individual logical interfaces, and different interfaces can use different EXP classifiers.

When you configure and apply an EXP classifier, MPLS traffic on all **family mpls** interfaces uses the EXP classifier, even on interfaces that also have a fixed classifier. If an interface has both an EXP classifier and a fixed classifier, the EXP classifier is applied to MPLS traffic and the fixed classifier is applied to all other traffic.

Also unlike DSCP and IEEE 802.1p BA classifiers, there is no default EXP classifier. If you want to classify MPLS traffic based on the EXP bits, you must explicitly configure an EXP classifier and apply it to the switch interfaces. Each EXP classifier has eight entries that correspond to the eight EXP CoS values (0 through 7, which correspond to CoS bits 000 through 111).

You can configure up to 64 EXP classifiers.

However, on QFX5200, QFX5100, EX4600, and legacy CLI switches, the switch uses only one MPLS EXP classifier as a global classifier on all interfaces. After you configure an MPLS EXP classifier, you can configure that classifier as the global EXP classifier by including the EXP classifier in the **[edit class-of-service system-defaults classifiers exp]** hierarchy level. All switch interfaces configured as **family mpls** use the global EXP classifier to classify MPLS traffic.

On these switches, only one EXP classifier can be configured as the global EXP classifier at any time. If you want to change the global EXP classifier, delete the global EXP classifier configuration (use the **user@switch# delete class-of-service system-defaults classifiers exp** configuration statement), then configure the new global EXP classifier.

QFX10000 switches do not support global EXP classifiers. You can configure one EXP classifier and apply it to multiple logical interfaces, or configure multiple EXP classifiers and apply different EXP classifiers to different logical interfaces.

If an EXP classifier is not configured, then if a fixed classifier is applied to the interface, the MPLS traffic uses the fixed classifier. (Switches that have a default EXP classifier use the default classifier.) If no EXP classifier and no fixed classifier are applied to the interface, MPLS traffic is treated as best-effort traffic using the 802.1 default untrusted classifier. DSCP classifiers are not applied to MPLS traffic.

On QFX5200, QFX5100, EX4600, and legacy CLI switches, because the EXP classifier is global, you cannot configure some ports to use a fixed IEEE 802.1p classifier for MPLS traffic on some interfaces and the global EXP classifier for MPLS traffic on other interfaces. When you configure a global EXP classifier, all MPLS traffic on all interfaces uses the EXP classifier.



NOTE: The switch uses only the outermost label of incoming EXP packets for classification.



NOTE: MPLS packets with 802.1Q tags are not supported.

## EXP Rewrite Rules

As MPLS packets enter or exit a network, edge switches might be required to alter the class-of-service (CoS) settings of the packets. EXP rewrite rules set the value of the EXP CoS bits within the header of the outgoing MPLS packet on **family mpls** interfaces. Each rewrite rule reads the current forwarding class and loss priority associated with the packet, locates the chosen CoS value from a table, and writes that CoS value into the packet header, replacing the old CoS value. EXP rewrite rules apply only to MPLS traffic.

EXP rewrite rules apply only to logical interfaces. You cannot apply EXP rewrite rules to physical interfaces.

There are no default EXP rewrite rules. If you want to rewrite the EXP value in MPLS packets, you must configure EXP rewrite rules and apply them to logical interfaces. If no rewrite rules are applied, all MPLS labels that are pushed have a value of zero (0). The EXP value remains unchanged on MPLS labels that are swapped.

You can configure up to 64 EXP rewrite rules, but you can only apply 16 EXP rewrite rules at any time on the switch. On a given logical interface, all pushed MPLS labels have the same EXP rewrite rule applied to them. You can apply different EXP rewrite rules to different logical interfaces on the same physical interface.

You can apply an EXP rewrite rule to an interface that has a DSCP, DSCP IPv6, or IEEE 802.1p rewrite rule. Only MPLS traffic uses the EXP rewrite rule. MPLS traffic does not use DSCP or DSCP IPv6 rewrite rules.

If the switch is performing penultimate hop popping (PHP), EXP rewrite rules do not take effect. If both an EXP classifier and an EXP rewrite rule are configured on the switch, then the EXP value from the last popped label is copied into the inner label. If either an EXP classifier or an EXP rewrite rule (but not both) is configured on the switch, then the inner label EXP value is sent unchanged.



NOTE: On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.

## Schedulers

The schedulers for using CoS with MPLS are the same as for the other CoS configurations on the switch. Default schedulers are provided only for the best-effort, fcoe, no-loss, and network-control default forwarding classes. If you configure a custom forwarding class for MPLS traffic, you need to configure a scheduler to support that forwarding class and provide bandwidth to that forwarding class.

### Related Documentation

- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68](#)

## Configuring a Global MPLS EXP Classifier

EXP packet classification associates incoming packets with a particular MPLS CoS servicing level. EXP behavior aggregate (BA) classifiers examine the MPLS EXP value in the packet header to determine the CoS settings applied to the packet. EXP BA classifiers allow you to set the forwarding class and loss priority of an MPLS packet based on the incoming CoS value.

You can configure up to 64 EXP classifiers, however, the switch uses only one MPLS EXP classifier as a global classifier, which is applied only on interfaces configured as **family mpls**. All **family mpls** switch interfaces use the global EXP classifier to classify MPLS traffic.

There is no default EXP classifier. If you want to classify incoming MPLS packets using the EXP bits, you must configure a global EXP classifier. The global classifier applies to all MPLS traffic on all **family mpls** interfaces.

If a global EXP classifier is configured, MPLS traffic on **family mpls** interfaces uses the EXP classifier. If a global EXP classifier is not configured, then if a fixed classifier is applied to the interface, the MPLS traffic uses the fixed classifier. If no EXP classifier and no fixed classifier is applied to the interface, MPLS traffic is treated as best-effort traffic. DSCP classifiers are not applied to MPLS traffic.

To configure an MPLS EXP classifier using the CLI:

1. Create an EXP classifier and associate it with a forwarding class, a loss priority, and a code point:

```
[edit class-of-service classifiers]
user@switch# set (dscp | ieee-802.1 | exp) classifier-name forwarding-class
forwarding-class-name loss-priority level code-points [aliases] [bit-patterns]
```

2. Apply the EXP classifier to the switch interfaces:

```
[edit class-of-service]
user@switch# set system-defaults classifiers exp classifier-name
```

### Related Documentation

- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules on page 56](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68](#)
- [Defining CoS Unicast BA Classifiers \(DSCP, DSCP IPv6, IEEE 802.1p\)](#)

- [Defining CoS BA Classifiers \(DSCP, DSCP IPv6, IEEE 802.1p\) on page 52](#)
- [Configuring Rewrite Rules for MPLS EXP Classifiers on page 60](#)

## Configuring Rewrite Rules for MPLS EXP Classifiers

---

You configure EXP rewrite rules to alter CoS values in outgoing MPLS packets on the outbound **family mpls** interfaces of a switch to match the policies of a targeted peer. Policy matching allows the downstream routing platform or switch in a neighboring network to classify each packet into the appropriate service group.

To configure an EXP CoS rewrite rule, create the rule by giving it a name and associating it with a forwarding class, loss priority, and code point. This creates a rewrite table. After the rewrite rule is created, enable it on a logical **family mpls** interface. EXP rewrite rules can only be enabled on logical **family mpls** interfaces, not on physical interfaces or on interfaces of other family types. You can also apply an existing EXP rewrite rule on a logical interface.



**NOTE:** There are no default rewrite rules.

You can configure up to 64 EXP rewrite rules, but you can only use 16 EXP rewrite rules at any time on the switch. On a given **family mpls** logical interface, all pushed MPLS labels have the same EXP rewrite rule applied to them. You can apply different EXP rewrite rules to different logical interfaces on the same physical interface.



**NOTE:** On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured, or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.



**NOTE:** To replace an existing rewrite rule on the interface with a new rewrite rule of the same type, first explicitly remove the existing rewrite rule and then apply the new rule.

To create an EXP rewrite rule for MPLS traffic and enable it on a logical interface:

1. Create an EXP rewrite rule:

```
user@switch# set class-of-service rewrite-rules exp rewrite-rule-name forwarding-class  
forwarding-class-name loss-priority level code-points [aliases] [bit-patterns]
```

For example, to configure an EXP rewrite rule named **exp-rr-1** for a forwarding class named **mpls-1** with a loss priority of **low** that rewrites the EXP code point value to **001**:

```
user@switch# set class-of-service rewrite-rules exp exp-rr-1 forwarding-class mpls-1  
loss-priority low code-points 001
```

2. Apply the rewrite rule to a logical interface:

```
user@switch # set class-of-service interfaces interface-name unit logical-unit rewrite-rules
exp rewrite-rule-name
```

For example, to apply a rewrite rule named **exp-rr-1** to logical interface **xe-0/0/10.0**:

```
user@switch# set class-of-service interfaces xe-0/0/10 unit 0 rewrite-rules exp exp-rr-1
```



**NOTE:** In this example, all forwarding classes assigned to port xe-0/0/10 must have rewrite rules. Do not mix forwarding classes that have rewrite rules with forwarding classes that do not have rewrite rules on the same interface.

#### Related Documentation

- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules on page 56](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68](#)
- [Monitoring CoS Rewrite Rules on page 631](#)
- [Defining CoS Rewrite Rules on page 100](#)

## Understanding Host Inbound Traffic Classification

The destination address of traffic that enters the switch can be an external device such as another switch, a router, or a server, or the destination can be the host (the switch Routing Engine or CPU). When the destination is an external device, the DSCP and IEEE 802.1p code-point bits of incoming traffic are preserved as the traffic travels through the switch to the egress port. At the egress port, the code-point bits are either preserved when the packets are sent to the next hop or they are rewritten according to the rewrite rule attached to the egress interface.

When the destination of incoming traffic is the host, DSCP bits are preserved. However, IEEE 802.1p bits are not preserved. The IEEE 802.1p bits of traffic destined for the host are set to zero (0). This does not affect system behavior because the switch prioritizes traffic destined for the host based on the protocol type. For example, the switch gives a higher priority to BPDU traffic than to ping traffic.

## Understanding Default CoS Scheduling and Classification

---

If you do not explicitly configure classifiers and apply them to interfaces, the switch uses the default classifier to group ingress traffic into forwarding classes. If you do not configure scheduling on an interface, the switch uses the default schedulers to provide egress port resources for traffic. Default classification maps all traffic into the default forwarding classes (best-effort, fcoe, no-loss, and network-control). Each default forwarding class has a default scheduler, so traffic mapped to each default forwarding class receives port bandwidth, prioritization, and packet drop characteristics.

The switch supports direct port scheduling and enhanced transmission selection (ETS), also known as hierarchical port scheduling.

Hierarchical scheduling groups IEEE 802.1p priorities (IEEE 802.1p code points, which classifiers map to forwarding classes, which in turn are mapped to output queues) into priority groups (forwarding class sets). If you use only the default traffic scheduling and classification, the switch automatically creates a default priority group that contains all of the priorities (which are mapped to forwarding classes and output queues), and assigns 100 percent of the port output bandwidth to that priority group. The forwarding classes (queues) in the default forwarding class set receive bandwidth based on the default classifier settings. The default priority group is transparent. It does not appear in the configuration and is used for Data Center Bridging Capability Exchange (DCBX) protocol advertisement.



**NOTE:** If you explicitly configure ETS by configuring one or more priority groups on an interface, any forwarding class that is not assigned to a priority group on that interface receives *no bandwidth*. This means that if you configure hierarchical scheduling on an interface, every forwarding class (priority) that you want to forward traffic on that interface must belong to a forwarding class set (priority group). ETS is not supported on QFX5200.

---

This topic describes:

- [Default Classification on page 62](#)
- [Default Scheduling on page 65](#)
- [Default DCBX Advertisement on page 67](#)
- [Default Scheduling and Classification Summary on page 67](#)

### Default Classification

The default classifiers assign ingress traffic to default forwarding classes and loss priorities. The switch applies default IEEE 802.1, DSCP, and DSCP IPv6 classifiers to each interface that does not have explicitly configured classifiers. If you do not configure and apply EXP classifiers for MPLS traffic to logical interfaces, MPLS traffic on interfaces configured as **family mpls** uses the IEEE classifier.



If you explicitly configure one type of classifier but not other types of classifiers, the system uses only the configured classifier and does not use default classifiers for other types of traffic. There are two default IEEE 802.1 classifiers, a trusted classifier for ports that are in trunk mode, and an untrusted classifier for ports that are in access mode.

[Table 26 on page 63](#) shows the default mapping of IEEE 802.1 code-point values to forwarding classes and loss priorities for ports in trunk mode.

**Table 26: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier)**

Code Point	Forwarding Class	Loss Priority
be (000)	best-effort	low
be1 (001)	best-effort	low
ef (010)	best-effort	low
ef1 (011)	fcoe	low
af11 (100)	no-loss	low
af12 (101)	best-effort	low
nc1 (110)	network-control	low
nc2 (111)	network-control	low

[Table 27 on page 63](#) shows the default mapping of IEEE 802.1p code-point values to forwarding classes and loss priorities for ports in access mode (all incoming traffic is mapped to best-effort forwarding classes).

**Table 27: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier)**

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	low
010	best-effort	low
011	best-effort	low
100	best-effort	low
101	best-effort	low
110	best-effort	low

**Table 27: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier) (*continued*)**

Code Point	Forwarding Class	Loss Priority
111	best-effort	low

Table 28 on page 64 shows the default mapping of DSCP code-point values to forwarding classes and loss priorities for DSCP IP and DCSP IPv6.

**Table 28: Default DSCP IP and IPv6 Classifiers**

Code Point	Forwarding Class	Loss Priority
ef (101110)	best-effort	low
af11 (001010)	best-effort	low
af12 (001100)	best-effort	low
af13 (001110)	best-effort	low
af21 (010010)	best-effort	low
af22 (010100)	best-effort	low
af23 (010110)	best-effort	low
af31 (011010)	best-effort	low
af32 (011100)	best-effort	low
af33 (011110)	best-effort	low
af41 (100010)	best-effort	low
af42 (100100)	best-effort	low
af43 (100110)	best-effort	low
be (000000)	best-effort	low
cs1 (001000)	best-effort	low
cs2 (010000)	best-effort	low
cs3 (011000)	best-effort	low
cs4 (100000)	best-effort	low
cs5 (101000)	best-effort	low

Table 28: Default DSCP IP and IPv6 Classifiers (*continued*)

Code Point	Forwarding Class	Loss Priority
nc1 (110000)	network-control	low
nc2 (111000)	network-control	low

Table 29 on page 65 shows the default mapping of MPLS EXP code-point values to forwarding classes and loss priorities.

Table 29: Default EXP Classifiers

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	high
010	expedited-forwarding	low
011	expedited-forwarding	high
100	assured-forwarding	low
101	assured-forwarding	high
110	network-control	low
111	network-control	high

## Default Scheduling

The default schedulers allocate egress bandwidth resources to egress traffic as shown in Table 30 on page 65:

Table 30: Default Scheduler Configuration

Default Scheduler and Queue Number	Transmit Rate (Guaranteed Minimum Bandwidth)	Rate Shaping (Maximum Bandwidth)	Excess Bandwidth Sharing	Priority	Buffer Size
best-effort forwarding class scheduler (queue 0)	15%	None	15%	low	15%
fcoe forwarding class scheduler (queue 3)	35%	None	35%	low	35%
no-loss forwarding class scheduler (queue 4)	35%	None	35%	low	35%

Table 30: Default Scheduler Configuration (*continued*)

Default Scheduler and Queue Number	Transmit Rate (Guaranteed Minimum Bandwidth)	Rate Shaping (Maximum Bandwidth)	Excess Bandwidth Sharing	Priority	Buffer Size
network-control forwarding class scheduler (queue 7)	15%	None	15%	low	15%



**NOTE:** By default, the minimum guaranteed bandwidth (transmit rate) determines the amount of excess (extra) bandwidth a queue can share. Extra bandwidth is allocated to queues in proportion to the transmit rate of each queue. On switches that support the `excess-rate` statement, you can override the default setting and configure the excess bandwidth percentage independently of the transmit rate on queues that are not strict-high priority queues.

By default, only the four default schedulers shown in [Table 30 on page 65](#) have traffic mapped to them. Only the forwarding classes and queues associated with the default schedulers receive default bandwidth, based on the default scheduler transmit rate. (You can configure schedulers and forwarding classes to allocate bandwidth to other queues or to change the bandwidth and other scheduling properties of a default queue.) If a forwarding class does not transport traffic, the bandwidth allocated to that forwarding class is available to other forwarding classes. Unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic use the same forwarding classes and output queues.

Default scheduling is port scheduling.

Default hierarchical scheduling, known as enhanced transmission selection (ETS, defined in IEEE 802.1Qaz), allocates the total port bandwidth to the four default forwarding classes served by the four default schedulers, as defined by the four default schedulers. The result is the same as direct port scheduling. Configuring hierarchical port scheduling, however, enables you to group forwarding classes that carry similar types of traffic into forwarding class sets (also called priority groups), and to assign port bandwidth to each forwarding class set. The port bandwidth assigned to the forwarding class set is then assigned to the forwarding classes within the forwarding class set. This hierarchy enables you to control port bandwidth allocation with greater granularity, and enables hierarchical sharing of extra bandwidth to better utilize link bandwidth.

Default scheduling uses weighted round-robin (WRR) scheduling. Each queue receives a portion (weight) of the total available interface bandwidth. The scheduling weight is based on the transmit rate (minimum guaranteed bandwidth) of the default scheduler for that queue. For example, queue 7 receives a default scheduling weight of 15 percent of the available bandwidth, and queue 4 receives a default scheduling weight of 35 percent of the available bandwidth. Queues are mapped to forwarding classes (for example, queue 7 is mapped to the network-control forwarding class and queue 4 is mapped to the no-loss forwarding class). Each forwarding class receives the default

bandwidth for the queue to which it is mapped. Unused bandwidth is shared with other default queues.

If you want non-default (unconfigured) queues to forward traffic, you should explicitly map traffic to those queues (configure the forwarding classes and queue mapping) and create schedulers to allocate bandwidth to those queues. By default, queues 1, 2, 5, and 6 are unconfigured. Unconfigured queues have a default scheduling weight of 1 so that they can receive a small amount of bandwidth in case they need to forward traffic.

If you map traffic to an unconfigured queue and do not schedule port resources for the queue (configure a scheduler, map it to the forwarding class that is mapped to the queue, and apply the scheduler mapping to the port), the queue receives only the amount of excess bandwidth proportional to its default weight (1). The actual amount of bandwidth an unconfigured queue gets depends on how much bandwidth the other queues on the port are using.

If the other queues use less than their allocated amount of bandwidth, the unconfigured queues can share the unused bandwidth. Configured queues have higher priority for bandwidth than unconfigured queues, so if a configured queue needs more bandwidth, then less bandwidth is available for unconfigured queues. Unconfigured queues always receive a minimum amount of bandwidth based on their scheduling weight (1). If you map traffic to an unconfigured queue, to allocate bandwidth to that queue, configure a scheduler for the forwarding class that is mapped to the queue, and apply it to the port.

## Default DCBX Advertisement

When you configure hierarchical scheduling on an interface, DCBX advertises each priority group, the priorities in each priority group, and the bandwidth properties of each priority and priority group.

If you do not configure hierarchical scheduling on an interface, DCBX advertises the automatically created default priority group and its priorities. DCBX also advertises the default bandwidth allocation of the priority group, which is 100 percent of the port bandwidth.

## Default Scheduling and Classification Summary

If you do not configure scheduling on an interface:

- Default classifiers classify ingress traffic.
- Default schedulers schedule egress traffic.
- DCBX advertises a single default priority group with 100 percent of the port bandwidth allocated to that priority group. All priorities (forwarding classes) are assigned to the default priority group and receive bandwidth based on their default schedulers. The default priority group is generated automatically and is not user-configurable.

### Related Documentation

- [Understanding CoS Packet Flow on page 24](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)
- [Understanding Default CoS Settings on page 26](#)

- [CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems on page 6](#)
- [Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches on page 120](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68](#)
- [Understanding DCB Features and Requirements on page 234](#)
- [Example: Configuring Classifiers on page 53](#)
- [Example: Configuring Queue Schedulers for Port Scheduling on page 140](#)

## Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces

At ingress interfaces, classifiers group incoming traffic into classes based on the IEEE 802.1p, DSCP, or MPLS EXP class of service (CoS) code point bits in the packet header. At egress interfaces, you can use rewrite rules to change (re-mark) the code point bits before the interface forwards the packets.

You can apply classifiers and rewrite rules to interfaces to control the level of CoS applied to each packet as it traverses the system and the network. This topic describes:

- [Supported Classifier and Rewrite Rule Types on page 68](#)
- [Ethernet Interfaces Supported for Classifier and Rewrite Rule Configuration on page 70](#)
- [Default Classifiers on page 73](#)
- [Default Rewrite Rules on page 74](#)
- [Classifier Precedence on page 74](#)
- [Classifier Behavior and Limitations on page 76](#)
- [Rewrite Rule Precedence and Behavior on page 77](#)
- [Classifier and Rewrite Rule Configuration Interaction with Ethernet Interface Configuration on page 77](#)

### Supported Classifier and Rewrite Rule Types

[Table 31 on page 68](#) shows the supported types of classifiers and rewrite rules supports:

**Table 31: Supported Classifiers and Rewrite Rules**

Classifier or Rewrite Rule Type	Description
Fixed classifier	Classifies all ingress traffic on a physical interface into one fixed forwarding class, regardless of the CoS bits in the packet header.
DSCP and DSCP IPv6 unicast classifiers	Classifies IP and IPv6 traffic into forwarding classes and assigns loss priorities to the traffic based on DSCP code point bits.

Table 31: Supported Classifiers and Rewrite Rules (*continued*)

Classifier or Rewrite Rule Type	Description
IEEE 802.1p unicast classifier	Classifies Ethernet traffic into forwarding classes and assigns loss priorities to the traffic based on IEEE 802.1p code point bits.
MPLS EXP classifier	<p>Classifies MPLS traffic into forwarding classes and assigns loss priorities to the traffic on interfaces configured as <b>family mpls</b>.</p> <p>QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and QFabric systems, use one global EXP classifier on all <b>family mpls</b> switch interfaces.</p> <p>QFX10000 switches do not support global EXP classifiers. You can apply the same EXP classifier or different EXP classifiers to different <b>family mpls</b> interfaces.</p>
DSCP multidestination classifier (also used for IPv6 multidestination traffic)	Classifies IP and IPv6 multicast, broadcast, and destination lookup fail (DLF) traffic into multidestination forwarding classes. Multidestination classifiers are applied to all interfaces and cannot be applied to individual interfaces.
<p><b>NOTE:</b> This applies only to switches that use different classifiers for unicast and multidestination traffic. It does not apply to switches that use the same classifiers for unicast and multidestination traffic.</p> <p>IEEE 802.1p multidestination classifier</p>	<p>Classifies Ethernet multicast, broadcast, and destination lookup fail (DLF) traffic into multidestination forwarding classes. Multidestination classifiers are applied to all interfaces and cannot be applied to individual interfaces.</p> <p><b>NOTE:</b> This applies only to switches that use different classifiers for unicast and multidestination traffic. It does not apply to switches that use the same classifiers for unicast and multidestination traffic.</p>
DSCP and DSCP IPv6 rewrite rules	Re-marks the DSCP code points of IP and IPv6 packets before forwarding the packets.
IEEE 802.1p rewrite rule	Re-marks the IEEE 802.1p code points of Ethernet packets before forwarding the packets.
MPLS EXP rewrite rule	Re-marks the EXP code points of MPLS packets before forwarding the packets on interfaces configured as <b>family mpls</b> .



**NOTE:** On switches that support native Fibre Channel (FC) interfaces, you can specify a rewrite value on native FC interfaces (NP\_Ports) to set the IEEE 802.1p code point of incoming FC traffic when the NP\_Port encapsulates the FC packet in Ethernet before forwarding it to the FCoE network (see *Understanding CoS IEEE 802.1p Priority Remapping on an FCoE-FC Gateway*).

DSCP, IEEE 802.1p, and MPLS EXP classifiers are behavior aggregate (BA) classifiers. On QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, unlike DSCP and IEEE 802.1p classifiers, EXP classifiers are global and apply only to all interfaces that are configured as **family mpls**. On QFX10000 switches, you apply EXP classifiers to individual logical interfaces, and different interfaces can use different EXP classifiers.

Unlike DSCP and IEEE 802.1p BA classifiers, there is no default EXP classifier. Also unlike DSCP and IEEE 802.1p classifiers, for MPLS traffic on **family mpls** interfaces only, EXP classifiers overwrite fixed classifiers. (An interface that has a fixed classifier uses the EXP classifier for MPLS traffic, not the fixed classifier, and the fixed classifier is used for all other traffic.)

On switches that use different classifiers for unicast and multdestination traffic, multdestination classifiers are global and apply to all interfaces; you cannot apply a multdestination classifier to individual interfaces.

Classifying packets into forwarding classes assigns packets to the output queues mapped to those forwarding classes. The traffic classified into a forwarding class receives the CoS scheduling configured for the output queue mapped to that forwarding class.



**NOTE:** In addition to BA classifiers and fixed classifiers, which classify traffic based on the CoS field in the packet header, you can use firewall filters to configure multifield (MF) classifiers. MF classifiers classify traffic based on more than one field in the packet header and take precedence over BA and fixed classifiers.

---

## Ethernet Interfaces Supported for Classifier and Rewrite Rule Configuration

To apply a classifier to incoming traffic or a rewrite rule to outgoing traffic, you need to apply the classifier or rewrite rule to one or more interfaces. When you apply a classifier or rewrite rule to an interface, the interface uses the classifier to group incoming traffic into forwarding classes and uses the rewrite rule to re-mark the CoS code point value of each packet before it leaves the system.

Not all interfaces types support all types of CoS configuration. This section describes:

- [Interface Types That Support Classifier and Rewrite Rule Configuration on page 70](#)
- [Classifier and Rewrite Rule Physical and Logical Ethernet Interface Support on page 71](#)
- [Routed VLAN Interfaces \(RVIs\) and Integrated Routing and Bridging \(IRB\) Interfaces on page 73](#)

---

### Interface Types That Support Classifier and Rewrite Rule Configuration

You can apply classifiers and rewrite rules to Ethernet interfaces. For Layer 3 LAGs, configure BA or fixed classifiers on the LAG (ae) interface. The classifier configured on the LAG is valid on all of the LAG member interfaces.



On switches that support native FC interfaces, you can apply fixed classifiers to native FC interfaces (NP\_Ports). You cannot apply other types of classifiers or rewrite rules to native FC interfaces. You can rewrite the value of the IEEE 802.1p code point of incoming FC traffic when the interface encapsulates it in Ethernet before forwarding it to the FCoE network as described in *Understanding CoS IEEE 802.1p Priority Remapping on an FCoE-FC Gateway*.

### Classifier and Rewrite Rule Physical and Logical Ethernet Interface Support

The Ethernet ports can function as:

- Layer 2 physical interfaces (family ethernet-switching)
- Layer 2 logical interfaces (family ethernet-switching)
- Layer 3 physical interfaces (family inet/inet6)
- Layer 3 logical interfaces (family inet/inet6)
- MPLS interfaces (family mpls)

You can apply CoS classifiers and rewrite rules only to the following interfaces:

- Layer 2 logical interface unit 0



**NOTE:** On a Layer 2 interface, the CoS you configure on logical interface unit 0 applies to all of the logical units on that interface.

- On QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, Layer 3 physical interfaces if at least one logical Layer 3 interface is configured on the physical interface



**NOTE:** The CoS you configure on a Layer 3 physical interface is applied to all of the Layer 3 logical interfaces on that physical interface. This means that each Layer 3 interface uses the same classifiers and rewrite rules for all of the Layer 3 traffic on that interface.

- On QFX10000 switches, Layer 3 logical interfaces. You can apply different classifiers and rewrite rules to different Layer 3 logical interfaces.

### Ethernet Interface Support for Most QFX Series Switches, and QFabric Systems

You cannot apply classifiers or rewrite rules to Layer 2 physical interfaces or to Layer 3 logical interfaces. [Table 32 on page 72](#) shows on which interfaces you can configure and apply classifiers and rewrite rules.

Table 32: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems)

CoS Classifiers and Rewrite Rules	Layer 2 Physical Interfaces	Layer 2 Logical Interface (Unit 0 Only)	Layer 3 Physical Interfaces (If at Least One Logical Layer 3 Interface Is Defined)	Layer 3 Logical Interfaces
Fixed classifier	No	Yes	Yes	No
DSCP classifier	No	Yes	Yes	No
DSCP IPv6 classifier	No	Yes	Yes	No
IEEE 802.1p classifier	No	Yes	Yes	No
EXP classifier	Global classifier, applies only to all switch interfaces that are configured as <b>family mpls</b> . Cannot be configured on individual interfaces.			
DSCP rewrite rule	No	Yes	Yes	No
DSCP IPv6 rewrite rule	No	Yes	Yes	No
IEEE 802.1p rewrite rule	No	Yes	Yes	No
EXP rewrite rule	No	Yes	Yes	No



**NOTE:** IEEE 802.1p multidestination and DSCP multidestination classifiers are applied to all interfaces and cannot be applied to individual interfaces. No DSCP IPv6 multidestination classifier is supported. IPv6 multidestination traffic uses the DSCP multidestination classifier.

#### **Ethernet Interface Support for QFX10000 Switches**

You cannot apply classifiers or rewrite rules to Layer 2 or Layer 3 physical interfaces. You can apply classifiers and rewrite rules only to Layer 2 logical interface unit 0. You can apply different classifiers and rewrite rules to different Layer 3 logical interfaces. [Table 33 on page 72](#) shows on which interfaces you can configure and apply classifiers and rewrite rules.

Table 33: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX10000 Switches)

CoS Classifiers and Rewrite Rules	Layer 2 Physical Interfaces	Layer 2 Logical Interface (Unit 0 Only)	Layer 3 Physical Interfaces	Layer 3 Logical Interfaces
Fixed classifier	No	Yes	No	Yes
DSCP classifier	No	Yes	No	Yes

**Table 33: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX10000 Switches) (continued)**

CoS Classifiers and Rewrite Rules	Layer 2 Physical Interfaces	Layer 2 Logical Interface (Unit 0 Only)	Layer 3 Physical Interfaces	Layer 3 Logical Interfaces
DSCP IPv6 classifier	No	Yes	No	Yes
IEEE 802.1p classifier	No	Yes	No	Yes
EXP classifier	No	Yes	No	Yes
DSCP rewrite rule	No	Yes	No	Yes
DSCP IPv6 rewrite rule	No	Yes	No	Yes
IEEE 802.1p rewrite rule	No	Yes	No	Yes
EXP rewrite rule	No	Yes	No	Yes

### Routed VLAN Interfaces (RVIs) and Integrated Routing and Bridging (IRB) Interfaces

You cannot apply classifiers and rewrite rules directly to routed VLAN interfaces (RVIs) or integrated routing and bridging (IRB) interfaces because the members of RVIs and IRBs are VLANs, not ports. However, you can apply classifiers and rewrite rules to the VLAN port members of an RVI or an IRB. You can also apply MF classifiers to RVIs and IRBs.

### Default Classifiers

If you do not explicitly configure classifiers on an Ethernet interface, the switch applies default classifiers so that the traffic receives basic CoS treatment. The factors that determine the default classifier applied to the interface include the interface type (Layer 2 or Layer 3), the port mode (trunk, tagged-access, or access), and whether logical interfaces have been configured.

The switch applies default classifiers using the following rules:

- If the physical interface has at least one Layer 3 logical interface configured, the logical interfaces use the default DSCP classifier.
- If the physical interface has a Layer 2 logical interface in trunk mode or tagged-access mode, it uses the default IEEE 802.1p trusted classifier.



**NOTE:** Tagged-access mode is available only on QFX3500 and QFX3600 devices when used as standalone switches or as QFabric system Node devices.

- If the physical interface has a Layer 2 logical interface in access mode, it uses the default IEEE 802.1p untrusted classifier.
- If the physical interface has no logical interface configured, no default classifier is applied.
- On switches that use different classifiers for unicast and multidestination traffic, the default multidestination classifier is the IEEE 802.1p multidestination classifier.
- There is no default MPLS EXP classifier. If you want to classify MPLS traffic using EXP bits on these switches, on QFX10000 switches, configure an EXP classifier and apply it to a logical interface that is configured as **family mpls**. On QFX5100, QFX5200, EX4600, QFX3500 and QFX3600 switches, and on QFabric systems, configure an EXP classifier and configure it as the global system default EXP classifier.

## Default Rewrite Rules

No default rewrite rules are applied to interfaces. If you want to re-mark packets at the egress interface, you must explicitly configure a rewrite rule.

## Classifier Precedence

You can apply multiple classifiers (MF, fixed, IEEE 802.1p, DSCP, or EXP) to an Ethernet interface to handle different types of traffic. (EXP classifiers are global and apply only to all MPLS traffic on all **family mpls** interfaces.) When you apply more than one classifier to an interface, the system uses an order of precedence to determine which classifier to use on interfaces:

- [Classifier Precedence on Physical Ethernet Interfaces \(QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems\) on page 74](#)
- [Classifier Precedence on Logical Ethernet Interfaces \(All Switches\) on page 75](#)

### Classifier Precedence on Physical Ethernet Interfaces (QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems)

QFX10000 switches do not support configuring classifiers on physical interfaces. The precedence of classifiers on physical interfaces, from the highest-priority classifier to the lowest-priority classifier, is:

- MF classifier on a logical interface (no classifier has a higher priority than MF classifiers)
- Fixed classifier on the physical interface
- DSCP or DSCP IPv6 classifier on the physical interface
- IEEE 802.1p classifier on the physical interface



**NOTE:** If an EXP classifier is configured, MPLS traffic uses the EXP classifier on all **family mpls** interfaces, even if an MF or fixed classifier is applied to the interface. If an EXP classifier is not configured, then if a fixed classifier is applied to the interface, the MPLS traffic uses the fixed classifier. If no EXP classifier and no fixed classifier is applied to the interface, MPLS traffic is treated as best-effort traffic. DSCP classifiers are not applied to MPLS traffic.

You can apply a DSCP classifier, an IEEE 802.1p classifier, and an EXP classifier on a physical interface. When all three classifiers are on an interface, IP traffic uses the DSCP classifier, MPLS traffic on **family mpls** interfaces uses the EXP classifier, and all other traffic uses the IEEE classifier.



**NOTE:** You cannot apply a fixed classifier and a DSCP or IEEE classifier to the same interface. If a DSCP classifier, an IEEE classifier, or both are on an interface, you cannot apply a fixed classifier to that interface unless you first delete the DSCP and IEEE classifiers. If a fixed classifier is on an interface, you cannot apply a DSCP classifier or an IEEE classifier unless you first delete the fixed classifier.

### Classifier Precedence on Logical Ethernet Interfaces (All Switches)

The precedence of classifiers on logical interfaces, from the highest priority classifier to the lowest priority classifier, is:

- MF classifier on a logical interface (no classifier has a higher priority than MF classifiers).
- Fixed classifier on the logical interface.
- DSCP or DSCP IPv6 classifier on the physical or logical interface..
- IEEE 802.1p classifier on the physical or logical interface.



**NOTE:** If a global EXP classifier is configured, MPLS traffic uses the EXP classifier on all **family mpls** interfaces, even if a fixed classifier is applied to the interface. If a global EXP classifier is not configured, then:

- If a fixed classifier is applied to the interface, the MPLS traffic uses the fixed classifier. If no EXP classifier and no fixed classifier is applied to the interface, MPLS traffic is treated as best-effort traffic.

You can apply both a DSCP classifier and an IEEE 802.1p classifier on a logical interface. When both a DSCP and an IEEE classifier are on an interface, IP traffic uses the DSCP classifier, and all other traffic uses the IEEE classifier. Only MPLS traffic on interfaces configured as **family mpls** uses the EXP classifier.

## Classifier Behavior and Limitations

Consider the following behaviors and constraints when you apply classifiers to Ethernet interfaces. Behaviors for applying classifiers to physical interfaces do not pertain to QFX10000 switches.

- You can configure only one DSCP classifier (IP or IPv6) on a physical interface. You cannot configure both types of DSCP classifier on one physical interface. Both IP and IPv6 traffic use whichever DSCP classifier is configured on the interface.
- When you configure a DSCP or a DSCP IPv6 classifier on a physical interface and the physical interface has at least one logical Layer 3 interface, all packets (IP, IPv6, and non-IP) use that classifier.
- An interface with both a DSCP classifier (IP or IPv6) and an IEEE 802.1p classifier uses the DSCP classifier for IP and IPv6 packets, and uses the IEEE classifier for all other packets.
- Fixed classifiers and BA classifiers (DSCP and IEEE classifiers) are not permitted simultaneously on an interface. If you configure a fixed classifier on an interface, you cannot configure a DSCP or an IEEE classifier on that interface. If you configure a DSCP classifier, an IEEE classifier, or both classifiers on an interface, you cannot configure a fixed classifier on that interface.
- When you configure an IEEE 802.1p classifier on a physical interface and a DSCP classifier is not explicitly configured on that interface, the interface uses the IEEE classifier for all types of packets. No default DSCP classifier is applied to the interface. (In this case, if you want a DSCP classifier on the interface, you must explicitly configure it and apply it to the interface.)
- The system does not apply a default classifier to a physical interface until you create a logical interface on that physical interface. If you configure a Layer 3 logical interface, the system uses the default DSCP classifier. If you configure a Layer 2 logical interface, the system uses the default IEEE 802.1p trusted classifier if the port is in trunk mode or tagged-access mode, or the default IEEE 802.1p untrusted classifier if the port is in access mode.
- MF classifiers configured on logical interfaces take precedence over BA and fixed classifiers, with the exception of the global EXP classifier, which is always used for MPLS traffic on **family mpls** interfaces. (Use firewall filters to configure MF classifiers.) When BA or fixed classifiers are present on an interface, you can still configure an MF classifier on that interface.
- There is no default EXP classifier for MPLS traffic.
- You can configure up to 64 EXP classifiers. On QFX10000 switches, you can apply different EXP classifiers to different interfaces.

However, on On QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, the switch uses only one MPLS EXP classifier as a global classifier on all **family mpls** interfaces. After you configure an MPLS EXP classifier, you can configure it as the global EXP classifier by including the EXP classifier in the **[edit class-of-service system-defaults classifiers exp]** hierarchy level.

All **family mpls** switch interfaces use the EXP classifier specified using this configuration statement to classify MPLS traffic, even on interfaces that have a fixed classifier. No other traffic uses the EXP classifier.

## Rewrite Rule Precedence and Behavior

The following rules apply on Ethernet interfaces for rewrite rules:

- If you configure one DSCP (or DSCP IPv6) rewrite rule and one IEEE 802.1p rewrite rule on an interface, both rewrite rules take effect. Traffic with IP and IPv6 headers use the DSCP rewrite rule, and traffic with a VLAN tag uses the IEEE rewrite rule.
- If you do not explicitly configure a rewrite rule, there is no default rewrite rule, so the system does not apply any rewrite rule to the interface.
- You can apply a DSCP rewrite rule or a DSCP IPv6 rewrite rule to an interface, but you cannot apply both a DSCP and a DSCP IPv6 rewrite rule to the same interface. Both IP and IPv6 packets use the same DSCP rewrite rule, regardless of whether the configured rewrite rule is DSCP or DSCP IPv6.
- MPLS EXP rewrite rules apply only to logical interfaces on **family mpls** interfaces. You cannot apply to an EXP rewrite rule to a physical interface. You can configure up to 64 EXP rewrite rules, but you can only use 16 EXP rewrite rules at any time on the switch.
- A logical interface can use both DSCP (or DSCP IPv6) and EXP rewrite rules.
- DSCP and DSCP IPv6 rewrite rules are not applied to MPLS traffic.
- If the switch is performing penultimate hop popping (PHP), EXP rewrite rules do not take effect. If both an EXP classifier and an EXP rewrite rule are configured on the switch, then the EXP value from the last popped label is copied into the inner label. If either an EXP classifier or an EXP rewrite rule (but not both) is configured on the switch, then the inner label EXP value is sent unchanged.



**NOTE:** On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.



**NOTE:** Rewrite rules are applied *before* the egress filter is matched to traffic. Because the code point rewrite occurs before the egress filter is matched to traffic, the egress filter match is based on the rewrite value, not on the original code point value in the packet.

## Classifier and Rewrite Rule Configuration Interaction with Ethernet Interface Configuration

On QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 switches used as standalone switches or as QFabric system Node devices, you can apply classifiers and rewrite rules

only on Layer 2 logical interface unit 0 and Layer 3 physical interfaces (if the Layer 3 physical interface has at least one defined logical interface). On QFX10000 switches, you can apply classifiers and rewrite rules only to Layer 2 logical interface unit 0 and to Layer 3 logical interfaces. This section focuses on BA classifiers, but the interaction between BA classifiers and interfaces described in this section also applies to fixed classifiers and rewrite rules.



**NOTE:** On QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 switches used as standalone switches or as QFabric system Node devices, EXP classifiers, are global and apply to all switch interfaces. See *Defining CoS Multidestination (Multicast, Broadcast, DLF) BA Classifiers* for how to configure multidestination classifiers and see [“Configuring a Global MPLS EXP Classifier” on page 59](#) for how to configure EXP classifiers.

On switches that use different classifiers for unicast and multidestination traffic, multidestination classifiers are global and apply to all switch interfaces.

There are two components to applying classifiers or rewrite rules to interfaces:

1. Setting the interface family (inet, inet6, or ethernet-switching; ethernet-switching is the default interface family) in the **[edit interfaces]** configuration hierarchy.
2. Applying a classifier or rewrite rule to the interface in the **[edit class-of-service]** hierarchy.

These are separate operations that can be set and committed at different times. Because the type of classifier or rewrite rule you can apply to an interface depends on the interface family configuration, the system performs checks to ensure that the configuration is valid. The method the system uses to notify you of an invalid configuration depends on the **set** operation that causes the invalid configuration.



**NOTE:** QFX10000 switches cannot be misconfigured in the following two ways because you can configure classifiers only on logical interfaces. Only switches that allow classifier configuration on physical and logical interfaces can experience the following misconfigurations.

If applying the classifier or rewrite rule to the interface in the **[edit class-of-service]** hierarchy causes an invalid configuration, the system rejects the configuration and returns a commit check error.

If setting the interface family in the **[edit interfaces]** configuration hierarchy causes an invalid configuration, the system creates a syslog error message. If you receive the error message, you need to remove the classifier or rewrite rule configuration from the logical interface and apply it to the physical interface, or remove the classifier or rewrite rule configuration from the physical interface and apply it to the logical interface. For classifiers, if you do not take action to correct the error, the system programs the default classifier for the interface family on the interface. (There are no default rewrite rules. If the commit check fails, no rewrite rule is applied to the interface.)



Two scenarios illustrate these situations:

- Applying a classifier to an Ethernet interface causes a commit check error
- Configuring the Ethernet interface family causes a syslog error

These scenarios differ on different switches because some switches support classifiers on physical Layer 3 interfaces but not on logical Layer 3 interfaces, while other switches support classifiers on logical Layer 3 interfaces but not on physical Layer 3 interfaces.

Two scenarios illustrate these situations:

- [QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switch Scenarios on page 79](#)



**NOTE:** Both of these scenarios also apply to fixed classifiers and rewrite rules.

### [QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switch Scenarios](#)

The following scenarios also apply the QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 switches when they are used as QFabric system Node devices.

#### *Scenario 1: Applying a Classifier to an Ethernet Interface Causes a Commit Check Error*

In Scenario 1, we set the interface family, and then specify an invalid classifier.

1. Set and commit the interface as a Layer 3 (family **inet**) interface:

```
[edit interfaces]
user@switch# set xe-0/0/20 unit 0 family inet
user@switch# commit
```

This commit operation succeeds.

2. Set and commit a DSCP classifier on the logical interface (this example uses a DSCP classifier named **dscp1**):

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 unit 0 classifiers dscp dscp1
user@switch# commit
```

This configuration is not valid, because it attempts to apply a classifier to a Layer 3 logical interface. Because the failure is caused by the class-of-service configuration and not by the interface configuration, the system rejects the commit operation and issues a commit error, not a syslog message.

Note that the commit operation succeeds if you apply the classifier to the physical Layer 3 interface as follows:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 classifiers dscp dscp1
user@switch# commit
```

Because the logical unit is not specified, the classifier is applied to the physical Layer 3 interface in a valid configuration, and the commit check succeeds.

#### *Scenario 2: Configuring the Ethernet Interface Family Causes a Syslog Error*

In Scenario 2, we set the classifier first, and then set an invalid interface type.

1. Set and commit a DSCP classifier on a logical interface that has no existing configuration:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 unit 0 classifiers dscp dscp1
user@switch# commit
```

This commit succeeds. Because no explicit configuration existed on the interface, it is by default a Layer 2 (**family ethernet-switching**) interface. Layer 2 logical interfaces support BA classifiers, so applying the classifier is a valid configuration.

2. Set and commit the interface as a Layer 3 interface (family **inet**) interface:

```
[edit interfaces]
user@switch# set xe-0/0/20 unit 0 family inet
user@switch# commit
```

This configuration is not valid because it attempts to change an interface from Layer 2 (**family ethernet-switching**) to Layer 3 (**family inet**) when a classifier has already been applied to a logical interface. Layer 3 logical interfaces do not support classifiers. Because the failure is caused by the interface configuration and not by the class-of-service configuration, the system does not issue a commit error, but instead issues a syslog message.

When the system issues the syslog message, it programs the default classifier for the interface type on the interface. In this scenario, the interface has been configured as a Layer 3 interface, so the system applies the default DSCP profile to the physical Layer 3 interface.

In this scenario, to install a configured DSCP classifier, remove the misconfigured classifier from the Layer 3 logical interface and apply it to the Layer 3 physical interface. For example:

```
[edit]
user@switch# delete class-of-service interfaces xe-0/0/20 unit 0 classifiers dscp dscp1
user@switch# commit
user@switch# set class-of-service interfaces xe-0/0/20 classifiers dscp dscp1
user@switch# commit
```

- Related Documentation**
- [Understanding CoS Packet Flow on page 24](#)
  - [Configuring CoS on page 14](#)

## Understanding CoS Code-Point Aliases

A code-point alias assigns a name to a pattern of code-point bits. You can use this name instead of the bit pattern when you configure other CoS components such as classifiers and rewrite rules.



**NOTE:** This topic applies to all EX Series switches except the EX4600. Because the EX4600 uses a different chipset than other EX Series switches, the code-point aliases on EX4600 match those on QFX Series switches. For EX4600 code-point aliases, see [“Understanding CoS Code-Point Aliases” on page 81](#).

Behavior aggregate classifiers use class-of-service (CoS) values such as Differentiated Services Code Points (DSCPs) or IEEE 802.1 bits to associate incoming packets with a particular forwarding class and the CoS servicing level associated with that forwarding class. You can assign a meaningful name or alias to the CoS values and use that alias instead of bits when configuring CoS components. These aliases are not part of the specifications but are well known through usage. For example, the alias for DSCP 101110 is widely accepted as ef (expedited forwarding).

When you configure forwarding classes and define classifiers, you can refer to the markers by alias names. You can configure code point alias names for user-defined classifiers. If the value of an alias changes, it alters the behavior of any classifier that references it.

You can configure code-point aliases for the following type of CoS markers:

- dscp or dscp-ipv6—Handles incoming IP and IPv6 packets.
- ieee-802.1—Handles Layer 2 frames.

[Table 34 on page 81](#) shows the default mapping of code-point aliases to IEEE code points.

**Table 34: Default IEEE 802.1 Code-Point Aliases**

CoS Value Types	Mapping
be	000
be1	001
ef	010
ef1	011
af11	100
af12	101

**Table 34: Default IEEE 802.1 Code-Point Aliases (*continued*)**

CoS Value Types	Mapping
nc1	110
nc2	111

Table 35 on page 82 shows the default mapping of code-point aliases to DSCP and DSCP IPv6 code points.

**Table 35: Default DSCP and DSCP IPv6 Code-Point Aliases**

CoS Value Types	Mapping
ef	101110
af11	001010
af12	001100
af13	001110
af21	010010
af22	010100
af23	010110
af31	011010
af32	011100
af33	011110
af41	100010
af42	100100
af43	100110
be	000000
cs1	001000
cs2	010000
cs3	011000
cs4	100000

Table 35: Default DSCP and DSCP IPv6 Code-Point Aliases (*continued*)

CoS Value Types	Mapping
cs5	101000
nc1	110000
nc2	111000

- Related Documentation**
- [Understanding Junos CoS Components on page 17](#)
  - [Defining CoS Code-Point Aliases on page 83](#)

## Defining CoS Code-Point Aliases

You can use code-point aliases to streamline the process of configuring CoS features on your switch. A code-point alias assigns a name to a pattern of code-point bits. You can use this name instead of the bit pattern when you configure other CoS components such as classifiers and rewrite rules.

You can configure code-point aliases for the following CoS marker types:

- DSCP or DSCP IPv6—Handles incoming IPv4 or IPv6 packets.
- IEEE 802.1p—Handles Layer 2 frames.

To configure a code-point alias:

1. Specify a CoS marker type (IEEE 802.1 or DSCP).
2. Assign an alias.
3. Specify the code point that corresponds to the alias.

```
[edit class-of-service code-point-aliases]
user@switch# set (dscp | dscp-ipv6 | ieee-802.1) alias-name code-point-bits
```

For example, to configure a code-point alias for an IEEE 802.1 CoS marker type that has the alias name be2 and maps to the code-point bits 001:

```
[edit class-of-service code-point-aliases]
user@switch# set ieee-802.1 be2 001
```

- Related Documentation**
- [Monitoring CoS Code-Point Value Aliases on page 632](#)
  - [Understanding CoS Code-Point Aliases on page 81](#)

## Understanding CoS Forwarding Classes

Forwarding classes group traffic and assign the traffic to output queues. Each forwarding class is mapped to an output queue. Classification maps incoming traffic to forwarding classes based on the code point bits in the packet or frame header. Forwarding class to queue mapping defines the output queue used for the traffic classified into a forwarding class.

A classifier must associate each packet with one of the following four default forwarding classes or with a user-configured forwarding class to assign an output queue to the packet:

- **fcoe**—Guaranteed delivery for Fibre Channel over Ethernet (FCoE) traffic.
- **no-loss**—Guaranteed delivery for TCP lossless traffic.
- **best-effort**—Provides best-effort delivery without a service profile. Loss priority is typically not carried in a class-of-service (CoS) value.
- **network-control**—Supports protocol control.

The switch supports up to eight forwarding classes, thus enabling flexible, differentiated, packet classification. For example, you can configure multiple classes of best-effort traffic such as **best-effort**, **best-effort1**, and **best-effort2**.

The switch supports eight output queues (queues 0 through 7). Unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic use the same forwarding classes and output queues.

- [Default Forwarding Classes on page 84](#)
- [Forwarding Class Configuration Rules on page 85](#)
- [Lossless Transport Support on page 87](#)

### Default Forwarding Classes

[Table 36 on page 84](#) shows the four default forwarding classes. You can rename the forwarding classes. Assigning a new forwarding class name does not alter the default classification or scheduling applied to the queue that is mapped to that forwarding class. CoS configurations can be complex, so unless it is required by your scenario, we recommend that you use the default class names and queue number associations.

**Table 36: Default Forwarding Classes**

Forwarding Class Name	Default Queue Mapping	Comments
best-effort	0	<p>The software does not apply any special CoS handling to best-effort traffic. This is a backward compatibility feature. Best-effort traffic is usually the first traffic to be dropped during periods of network congestion.</p> <p>By default, this is a lossy forwarding class with a packet drop attribute of <b>drop</b>.</p>

Table 36: Default Forwarding Classes (*continued*)

Forwarding Class Name	Default Queue Mapping	Comments
fcoe	3	<p>By default, the <b>fcoe</b> forwarding class is a lossless forwarding class designed to handle Fibre Channel over Ethernet (FCoE) traffic. The <b>no-loss</b> packet drop attribute is applied by default.</p> <p><b>NOTE:</b> By convention, deployments with converged server access typically use IEEE 802.1p priority 3 (011) for FCoE traffic. The default mapping of the <b>fcoe</b> forwarding class is to queue 3. Apply priority-based flow control (PFC) to the entire FCoE data path to configure the end-to-end lossless behavior that FCoE requires.</p> <p>We recommend that you use priority 3 for FCoE traffic unless your network architecture requires that you use a different priority.</p>
no-loss	4	<p>By default, this is a lossless forwarding class with a packet drop attribute of <b>no-loss</b>.</p>
network-control	7	<p>The software delivers packets in this service class with a high priority. (These packets are not delay-sensitive.)</p> <p>Typically, these packets represent routing protocol hello or keepalive messages. Because loss of these packets jeopardizes proper network operation, packet delay is preferable to packet discard.</p> <p>By default, this is a lossy forwarding class with a packet drop attribute of <b>drop</b>.</p>

## Forwarding Class Configuration Rules

Take the following rules into account when you configure forwarding classes:

- [Queue Assignment Rules on page 85](#)
- [Scheduling Rules on page 86](#)
- [Rewrite Rules on page 87](#)

### Queue Assignment Rules

The following rules govern queue assignment:

- CoS configurations that specify more queues than the switch can support are not accepted. The commit operation fails with a detailed message that states the total number of queues available.
- All default CoS configurations are based on queue number. The name of the forwarding class that appears in the default configuration is the forwarding class currently mapped to that queue.
- If you map more than one forwarding class to a queue, all of the forwarding classes mapped to the same queue must have the same packet drop attribute (all of the

forwarding classes must be lossy, or all of the forwarding classes mapped to a queue must be lossless).

You limit the amount of traffic that receives strict-high priority treatment on a strict-high priority queue by configuring a transmit rate. The transmit rate sets the amount of traffic on the queue that receives strict-high priority treatment. The switch treats traffic that exceeds the transmit rate as low priority traffic that receives the queue excess rate bandwidth. Limiting the amount of traffic that receives strict-high priority treatment prevents other queues from being starved while also ensuring that the amount of traffic specified in the transmit rate receives strict-high priority treatment.

If you configure one strict-high priority queue on a port, we strongly recommend that you configure a transmit rate on the queue to prevent it from starving low priority queues on that port. Although it is not mandatory to configure a transmit rate on a strict-high priority queue when there is only one strict-high priority queue on a port, if you do not configure a transmit rate, the strict-high priority queue can consume all of the port bandwidth and starve the other queues.

If you configure more than one strict-high priority queue on a port, you must configure a transmit rate on each of the strict-high priority queues. If you configure more than one strict-high priority queue on a port and you do not configure a transmit rate on the strict-high priority queues, the switch treats only the first queue you configure as a strict-high priority queue. The switch treats the other queues as low priority queues. If you configure a transmit rate on some strict-high priority queues but not on other strict-high priority queues on a port, the switch treats the queues that have a transmit rate as strict-high priority queues, and treats the queues that do not have a transmit rate as low priority queues.

### Scheduling Rules

---

When you configure a forwarding class and map traffic to it (that is, you are not using a default classifier and forwarding class), you must also define a scheduling policy for the forwarding class. You can configure either port scheduling or enhanced transmission selection (ETS) hierarchical port scheduling.

Defining a scheduling policy using port scheduling means:

- Mapping a scheduler to the forwarding class in a scheduler map.
- Applying the scheduler map to one or more interfaces.

Defining a scheduling policy using ETS means:

- Mapping a scheduler to the forwarding class in a scheduler map.
- Including the forwarding class in a forwarding class set.
- Associating the scheduler map with a traffic control profile.
- Attaching the traffic control profile to a forwarding class set and applying the traffic control profile to an interface.



### Rewrite Rules

---

On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured, or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.

### Lossless Transport Support

The switch supports up to six lossless forwarding classes. For lossless transport, you must enable PFC on the IEEE 802.1p code point of lossless forwarding classes. The following limitations apply to support lossless transport:

- The external cable length from the switch to other devices cannot exceed 300 meters.
- For FCoE traffic, the interface maximum transmission unit (MTU) must be at least 2180 bytes to accommodate the packet payload, headers, and checks.
- Changing any portion of a PFC configuration on a port blocks the entire port until the change is completed. After a PFC change is completed, the port is unblocked and traffic resumes. Changing the PFC configuration means any change to a congestion notification profile that is configured on a port (enabling or disabling PFC on a code point, changing the MRU or cable-length value, or specifying an output flow control queue). Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

#### Related Documentation

- [Understanding Junos CoS Components on page 17](#)
- [Understanding CoS Packet Flow on page 24](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)
- [Example: Configuring Forwarding Classes on page 88](#)

### Defining CoS Forwarding Classes

---

Forwarding classes allow you to group packets for transmission. The switch supports a total of eight forwarding classes. To forward traffic, you map (assign) the forwarding classes to output queues.

The switch has eight output queues, queues 0 through 7. The default forwarding classes are:

- **best-effort**—Best-effort traffic
- **fcoe**—Guaranteed delivery for Fibre Channel over Ethernet traffic
- **no-loss**—Guaranteed delivery for TCP no-loss traffic
- **network-control**—Network control traffic

The NFX250 Network Services platform has the following default forwarding classes:

- best-effort (be)—Provides no service profile. Loss priority is typically not carried in a CoS value.
- expedited-forwarding (ef)—Provides a low loss, low latency, low jitter, assured bandwidth, end-to-end service.
- assured-forwarding (af)—Provides a group of values you can define and includes four subclasses: AF1, AF2, AF3, and AF4, each with two drop probabilities: low and high.
- network-control (nc)—Supports protocol control and thus is typically high priority.

Map forwarding classes to queues using the **class** statement. You can map more than one forwarding class to a single queue, but all forwarding classes mapped to a particular queue must have the same packet drop attribute (all of the forwarding classes must be lossy, or all of the forwarding classes mapped to a queue must be lossless).

```
[edit class-of-service forwarding-classes]
user@switch# set class class-name queue-num queue-number <no-loss>
```

For example, to create a forwarding class named **be2** and map it to queue 1:

```
[edit class-of-service forwarding-classes]
user@switch# set class be2 queue-num 1
```

Another example is to create a lossless forwarding class named **fcoe2** and map it to queue 5:

```
[edit class-of-service forwarding-classes]
user@switch# set class fcoe2 queue-num 5 no-loss
```

#### Related Documentation

- [Example: Configuring Forwarding Classes on page 88](#)
- [Monitoring CoS Forwarding Classes on page 628](#)
- [Understanding CoS Forwarding Classes on page 84](#)
- [Understanding CoS Port Schedulers on QFX Switches on page 125](#)

---

## Example: Configuring Forwarding Classes

Forwarding classes group packets for transmission. Forwarding classes map to output queues, so the packets assigned to a forwarding class use the output queue mapped to that forwarding class.

- [Requirements on page 88](#)
- [Overview on page 89](#)
- [Configuration on page 90](#)
- [Verification on page 90](#)

### Requirements

This example uses the following hardware and software components:

- One switch.
- Junos OS Release 15.1X53-D10 or later for the QFX Series.

## Overview

The switch supports a total of eight forwarding classes; you can configure up to six forwarding classes as lossless forwarding classes. To forward traffic, you must map (assign) the forwarding classes to output queues. The switch has eight output queues, queues 0 through 7. The switch provides four default forwarding classes. You can define the remaining four forwarding classes and map them to output queues.

The four default forwarding classes are:

- **be**—Best-effort traffic
- **fcoe**—Guaranteed delivery for Fibre Channel over Ethernet traffic
- **no-loss**—Guaranteed delivery for TCP no-loss traffic
- **nc**—Network control traffic

Map forwarding classes to queues using the **class** statement. You can map more than one forwarding class to a single queue, but all forwarding classes mapped to a particular queue must have the same packet drop attribute (all of the forwarding classes must be lossy, or all of the forwarding classes mapped to a queue must be lossless). The statement format is:

```
[edit class-of-service forwarding-classes]
user@switch# set class class-name queue-num queue-number;
```



**NOTE:** When you configure a forwarding class and map traffic to it (that is, you are not using a default classifier and forwarding class), you must also define a scheduling policy for the forwarding class. You can configure either port scheduling or enhanced transmission selection (ETS) hierarchical port scheduling.

Defining a scheduling policy using port scheduling means:

- Mapping a scheduler to the forwarding class in a scheduler map.
- Applying the scheduler map to one or more interfaces.

Defining a scheduling policy using ETS means:

- Mapping a scheduler to the forwarding class in a scheduler map.
- Including the forwarding class in a forwarding class set.
- Associating the scheduler map with a traffic control profile.
- Attaching the traffic control profile to a forwarding class set and applying the traffic control profile to an interface.

[Table 37 on page 90](#) shows the configuration forwarding-class-to-queue mapping for this example:

Table 37: Forwarding-Class-to-Queue Example Configuration

Forwarding Class	Queue
best-effort	0
be1	1
nc	7

## Configuration

To configure CoS forwarding classes:

1. Map the **best-effort** forwarding class to queue 0:

```
[edit class-of-service forwarding-classes]
user@switch# set class best-effort queue-num 0
```

2. Map the **be1** forwarding class to queue 1:

```
[edit class-of-service forwarding-classes]
user@switch# set class be1 queue-num 1
```

3. Map the **nc** forwarding class to queue 7:

```
[edit class-of-service forwarding-classes]
user@switch# set class nc queue-num 7
```

## Verification

### Verifying the Forwarding-Class-to-Queue Mapping

**Purpose** Verify the forwarding-class-to-queue mapping. (The system shows only the explicitly configured forwarding classes; it does not show default forwarding classes such as **fcoe** and **no-loss**.)

**Action** Verify the results of the forwarding class configuration using the operational mode command **show configuration class-of-service forwarding-classes**:

```
user@switch> show configuration class-of-service forwarding-classes
class best-effort queue-num 0;
class be1 queue-num 1;
class network-control queue-num 7;
```

**Related Documentation**

- [Defining CoS Forwarding Classes on page 87](#)
- [Monitoring CoS Forwarding Classes on page 628](#)
- [Understanding CoS Forwarding Classes on page 84](#)

## Understanding CoS Forwarding Class Sets (Priority Groups)

---

A forwarding class set is the Junos OS configuration construct that equates to a priority group in enhanced transmission selection (ETS, described in IEEE 802.1Qaz). The switch implements ETS using a two-tier hierarchical scheduler.

A priority group is a group of forwarding classes. Each forwarding class is mapped to an output queue and an IEEE 802.1p priority (code points). Classifying traffic into a forwarding class based on its code points, and mapping the forwarding class to a queue, defines the traffic assigned to that queue. The forwarding classes that belong to a priority group share the port bandwidth allocated to that priority group. The traffic mapped to forwarding classes in one priority group usually shares similar traffic-handling requirements.

You can configure up to three unicast forwarding class sets and one multicast forwarding class set. Only unicast forwarding classes can belong to unicast forwarding class sets. Only multicast forwarding classes can belong to the multicast forwarding class set.

If you configure a strict-high priority forwarding class (you can configure only one strict-high priority forwarding class), you must observe the following rules when configuring forwarding class sets:

- You must create a separate forwarding class set for the strict-high priority forwarding class.
- Only one forwarding class set can contain the strict-high priority forwarding class.
- A strict-high priority forwarding class cannot belong to the same forwarding class set as forwarding classes that are not strict-high priority.
- A strict-high priority forwarding class cannot belong to a multidestination forwarding class set.
- You cannot configure a guaranteed minimum bandwidth (guaranteed rate) for a forwarding class set that includes a strict-high priority forwarding class. (You also cannot configure a guaranteed minimum bandwidth for a strict-high forwarding class.)
- We recommend that you always apply a shaping rate to a strict-high priority forwarding class to prevent it from starving the queues mapped to other forwarding classes. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority forwarding class can use, then the strict-high priority forwarding class can use all of the available port bandwidth and starve other forwarding classes on the port.

You must use hierarchical scheduling if you explicitly configure CoS. The two-tier hierarchical scheduler defines bandwidth resources for the forwarding class set (priority group), and then allocates those resources among the forwarding classes (priorities) that belong to the forwarding class set.

If you do not explicitly configure forwarding class sets, the system automatically creates a default forwarding class set that contains all of the forwarding classes on the switch. The system assigns 100 percent of the port output bandwidth to the default forwarding class set. Ingress traffic is classified based on the default classifier settings. The forwarding classes in the default forwarding class set receive bandwidth based on the default

scheduler settings. Forwarding classes that are not part of the default scheduler receive no bandwidth. The default priority group is transparent. It does not appear in the configuration and is used for Data Center Bridging Capability Exchange Protocol (DCBX) advertisement (except on OCX Series switches, which do not support DCBX).

When you explicitly configure forwarding class sets and apply them to interfaces, on those interfaces, forwarding classes that you do not map to a forwarding class set receive no guaranteed bandwidth. Forwarding classes that belong to the default forwarding class set might receive bandwidth if the other forwarding class sets are not using all of the port bandwidth. However, the amount of bandwidth received by forwarding classes that are not members of a forwarding class set is not guaranteed. In this case, the bandwidth a forwarding class receives if it is not a member of a forwarding class set depends on whether unused port bandwidth is available and therefore is not deterministic.

To guarantee bandwidth for forwarding classes in a predictable manner, be sure to map all forwarding classes that you expect to carry traffic on an interface to a forwarding class set, and apply the forwarding class set to the interface.

**Related  
Documentation**

- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Forwarding Class Sets on page 93](#)
- [Defining CoS Forwarding Class Sets on page 92](#)

---

## Defining CoS Forwarding Class Sets

---

A forwarding class set is a priority group for enhanced transmission selection (ETS) traffic control. Each forwarding class set consists of one or more forwarding classes. Classifiers map traffic into forwarding classes based on code points (priority), and forwarding classes are mapped to output queues.

You can configure up to three unicast forwarding class sets and one multicast forwarding class set.

To configure a forwarding class set using the CLI:

1. Assign one or more forwarding classes to the forwarding class set:

```
[edit class-of-service]
user@switch# set forwarding-class-sets forwarding-class-set-name class
forwarding-class-name
```

2. Map the forwarding class set to an interface:

```
[edit class-of-service]
user@switch# set interfaces interface-name forwarding-class-set forwarding-class-set-name
```

**Related  
Documentation**

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Forwarding Class Sets on page 93](#)
- [Defining CoS Queue Schedulers](#)

- [Defining CoS Traffic Control Profiles \(Priority Group Scheduling\) on page 157](#)
- [Understanding CoS Forwarding Class Sets \(Priority Groups\) on page 91](#)

## Example: Configuring Forwarding Class Sets

A forwarding class set (fc-set) is a priority group for enhanced transmission selection (ETS) traffic control. Each fc-set consists of one or more forwarding classes (priorities). Classifiers map traffic to forwarding classes based on code points, and forwarding classes are mapped to output queues.

ETS enables you to configure link resources (bandwidth and bandwidth sharing characteristics) for an fc-set, and then allocate the fc-set's resources among the forwarding classes that belong to the fc-set. This is called two-tier, or hierarchical, scheduling. Traffic control profiles control the scheduling for the fc-set (priority group), and schedulers control the scheduling for individual forwarding classes (priorities).

- [Requirements on page 93](#)
- [Overview on page 93](#)
- [Configuring Forwarding Class Sets on page 94](#)
- [Verification on page 95](#)

### Requirements

This example uses the following hardware and software components:

- One switch (this example was tested on a Juniper Networks QFX3500 Switch)
- Junos OS Release 11.1 or later for the QFX Series or Junos OS Release 14.1X53-D20 or later for the OCX Series.

### Overview

You can configure up to three unicast fc-sets and one multicast fc-set. A common way to configure unicast priority groups is to configure separate fc-sets for local area network (LAN) traffic, storage area network (SAN) traffic, and high-performance computing (HPC) traffic, and then assign the appropriate forwarding classes to each fc-set.



**NOTE:** If you configure a strict-high priority forwarding class, you must create an fc-set that is dedicated only to strict-high priority traffic. You can only configure one strict-high priority forwarding class, and only one fc-set can contain a strict-high priority queue. Queues that are not strict-high priority cannot belong to the same fc-set as a strict-high priority queue. The multdestination fc-set cannot contain a strict-high priority queue.

To apply ETS, you use a traffic control profile to map one or more fc-sets to a physical egress port. You can map up to three unicast forwarding class sets and one multdestination forwarding class set to each port. When you map an fc-set to a port,

the port uses hierarchical scheduling to allocate port resources to the priority group (fc-set) and to allocate the priority group resources to the queues (forwarding classes) that belong to the priority group.

This example describes how to:

- Configure three fc-sets called **lan-pg**, **san-pg**, and **hpc-pg**.
- Assign forwarding classes to each of the fc-sets.
- Apply the fc-sets and their output traffic control profiles to an egress interface.

This example does not describe how to configure the forwarding classes assigned to the fc-sets or how to configure traffic control profiles (scheduling). [“Example: Configuring CoS Hierarchical Port Scheduling \(ETS\)” on page 167](#) provides a complete example of how to configure ETS, including forwarding class and scheduling configuration.

[Table 38 on page 94](#) shows the configuration components for this example:

**Table 38: Components of the Forwarding Class Sets Configuration Example**

Component	Settings
Hardware	QFX3500 switch
LAN traffic priority group	Forwarding class set: <b>lan-pg</b> Forwarding classes: <b>best-effort-1</b> , <b>best-effort-2</b>
SAN traffic priority group	Forwarding class set: <b>san-pg</b> Forwarding classes: <b>fcoe</b> , <b>fcoe-2</b>  <b>NOTE:</b> OCX Series switches do not support FCoE traffic or lossless Layer 2 transport. If you were configuring this example on an OCX Series switch, you could omit this priority group, or rename it and map different forwarding classes to it.
HPC traffic priority group	Forwarding class set: <b>hpc-pg</b> Forwarding classes: <b>nc</b> , <b>high-perf</b>
Egress interface	<b>xe-0/0/7</b>

## Configuring Forwarding Class Sets

1. Define the **lan-pg** priority group (fc-set) and assign to it the forwarding classes **best-effort-1** and **best-effort-2**:  

```
[edit class-of-service]
user@switch# set forwarding-class-sets lan-pg class best-effort-1
user@switch# set forwarding-class-sets lan-pg class best-effort-2
```
2. Define the **san-pg** priority group and assign to it the forwarding classes **fcoe** and **fcoe-2**:  

```
[edit class-of-service]
user@switch# set forwarding-class-sets san-pg class fcoe
user@switch# set forwarding-class-sets san-pg class fcoe-2
```
3. Define the **hpc-pg** priority group and assign to it the forwarding classes **nc** and **high-perf**:



```
[edit class-of-service]
user@switch# set forwarding-class-sets hpc-pg class nc
user@switch# set forwarding-class-sets hpc-pg class high-perf
```

4. Map the three forwarding class sets to an interface (the output traffic control profiles associated with the forwarding class sets determine the class of service scheduling for the priority groups):

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/7 forwarding-class-set lan-pg
output-traffic-control-profile lan-tcp
user@switch# set interfaces xe-0/0/7 forwarding-class-set san-pg
output-traffic-control-profile san-tcp
user@switch# set interfaces xe-0/0/7 forwarding-class-set hpc-pg
output-traffic-control-profile hpc-tcp
```

## Verification

To verify the priority group configuration, perform these tasks:

- [Verifying Forwarding Class Set Membership on page 95](#)
- [Verifying the Egress Interface Configuration on page 95](#)

### Verifying Forwarding Class Set Membership

**Purpose** Verify that you configured the **lan-pg**, **san-pg**, and **hpc-pg** priority groups with the correct forwarding classes.

**Action** List the forwarding class set member configuration using the operational mode command **show configuration class-of-service forwarding-class-sets**:

```
user@switch> show configuration class-of-service forwarding-class-sets
lan-pg {
    class best-effort-1;
    class best-effort-2;
}
san-pg {
    class fcoe;
    class fcoe-2;
}
hpc-pg {
    class high-perf;
    class nc;
}
```

### Verifying the Egress Interface Configuration

**Purpose** Verify that egress interface **xe-0/0/7** is associated with the **lan-pg**, **san-pg**, and **hpc-pg** priority groups and with the correct output traffic control profiles.

**Action** Display the egress interface using the operational mode command **show configuration class-of-service interfaces xe-0/0/7**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/7
forwarding-class-set {
    lan-pg {
```

```
        output-traffic-control-profile lan-tcp;
    }
    san-pg {
        output-traffic-control-profile san-tcp;
    }
    hpc-pg {
        output-traffic-control-profile hpc-tcp;
    }
}
```

**Related  
Documentation**

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
- [Defining CoS Forwarding Class Sets on page 92](#)
- [Understanding CoS Forwarding Class Sets \(Priority Groups\) on page 91](#)

## Understanding CoS Rewrite Rules

As packets enter or exit a network, edge switches might be required to alter the class-of-service (CoS) settings of the packets. Rewrite rules set the value of the code point bits (Layer 3 DSCP bits, Layer 2 CoS bits, or MPLS EXP bits) within the header of the outgoing packet. Each rewrite rule:

1. Reads the current forwarding class and loss priority associated with the packet.
2. Locates the new (rewrite) code point value from a table.
3. Writes that code point value into the packet header, replacing the old code point value.

Rewrite rules must be assigned to an interface for rewrites to take effect.

You can apply (bind) one DSCP or DSCP IPv6 rewrite rule and one IEEE 802.1p rewrite rule to each interface. You can also bind EXP rewrite rules to **family mpls** logical interfaces to rewrite the CoS bits of MPLS traffic.



**NOTE:** OCX Series switches do not support MPLS and do not support EXP rewrite rules.

You cannot apply both a DSCP and a DSCP IPv6 rewrite rule to the same physical interface. Each physical interface supports only one DSCP rewrite rule. Both IP and IPv6 packets use the same DSCP rewrite rule, regardless if the configured rewrite rule is DSCP or DSCP IPv6. You can apply an EXP rewrite rule on an interface that has DSCP or IEEE rewrite rules. Only MPLS traffic on **family mpls** interfaces uses the EXP rewrite rule.

You can apply both a DSCP rewrite rule and a DSCP IPv6 rewrite rule to a logical interface. IPv6 packets are rewritten with DSCP-IPv6 rewrite-rules and IPv4 packets are remarked with DSCP rewrite-rules.



**NOTE:** There are no default rewrite rules. If you want to apply a rewrite rule to outgoing packets, you must explicitly configure the rewrite rule.

You can look at behavior aggregate (BA) classifiers and rewrite rules as two sides of the same coin. A BA classifier reads the code point bits of incoming packets and classifies the packets into forwarding classes, then the system applies the CoS configured for the forwarding class to those packets. Rewrite rules change (rewrite) the code point bits just before the packets leave the system so that the next switch or router can apply the appropriate level of CoS to the packets. When you apply a rewrite rule to an interface, the rewrite rule is the last CoS action performed on the packet before it is forwarded.

Rewrite rules alter CoS values in outgoing packets on the outbound interfaces of an edge switch to accommodate the policies of a targeted peer. This allows the downstream switch in a neighboring network to classify each packet into the appropriate service group.



**NOTE:** On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.



**NOTE:** Rewrite rules are applied *before* the egress filter is matched to traffic. Because the code point rewrite occurs before the egress filter is matched to traffic, the egress filter match is based on the rewrite value, not on the original code point value in the packet.

For packets that carry both an inner VLAN tag and an outer VLAN tag, the rewrite rule rewrites only the outer VLAN tag.

MPLS EXP rewrite rules apply only to **family mpls** logical interfaces. You cannot apply to an EXP rewrite rule to a physical interface. You can configure up to 64 EXP rewrite rules, but you can only use 16 EXP rewrite rules at any time on the switch. On a given logical interface, all pushed MPLS labels have the same EXP rewrite rule applied to them. You can apply different EXP rewrite rules to different logical interfaces on the same physical interface.



**NOTE:** If the switch is performing penultimate hop popping (PHP), EXP rewrite rules do not take effect. If both an EXP classifier and an EXP rewrite rule are configured on the switch, then the EXP value from the last popped label is copied into the inner label. If either an EXP classifier or an EXP rewrite rule (but not both) is configured on the switch, then the inner label EXP value is sent unchanged.

You can configure enough rewrite rules to handle most, if not all, network scenarios. [Table 39 on page 98](#) shows how many of each type of rewrite rules you can configure, and how many entries you can configure per rewrite rule.

**Table 39: Configuring Rewrite Rules**

Rewrite Rule Type	Maximum Number of Rewrite Rules	Maximum Number of Entries per Rewrite Rule
IEEE 802.1p	64	128
DSCP	32	128
DSCP IPv6	32	128
MPLS EXP	64	128

You cannot apply rewrite rules directly to integrated routing and bridging (IRB), also known as routed VLAN interfaces (RVIs), because the members of IRBs/RVIs are VLANs, not ports. However, you can apply rewrite rules to the VLAN port members of an IRB/RVI.



**NOTE:** OCX Series switches do not support IRBs/RVIs.

**Related  
Documentation**

- [Understanding Junos CoS Components on page 17](#)
- [Defining CoS Rewrite Rules on page 100](#)
- [Configuring Rewrite Rules for MPLS EXP Classifiers on page 60](#)

## Defining CoS Rewrite Rules

Edge switches might need to change the class-of-service (CoS) settings of the packets. You can configure rewrite rules to alter code point bit values in outgoing packets on the outbound interfaces of a switch so that the CoS treatment matches the policies of a targeted peer. Policy matching allows the downstream routing platform or switch in a neighboring network to classify each packet into the appropriate service group.

To configure a CoS rewrite rule, create the rule by giving it a name and associating it with a forwarding class, loss priority, and code point. This creates a rewrite table. After the rewrite rule is created, enable it on an interface (EXP rewrite rules can only be enabled on **family mpls** logical interfaces, not on physical interfaces). You can also apply an existing rewrite rule on an interface.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP rewrite rules.



**NOTE:** On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured, or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.



**NOTE:** To replace an existing rewrite rule on the interface with a new rewrite rule of the same type, first explicitly remove the existing rewrite rule and then apply the new rule.



**NOTE:** For packets that carry both an inner VLAN tag and an outer VLAN tag, the rewrite rule rewrites only the outer VLAN tag.

To create rewrite rules and enable them on interfaces:

- To create an 802.1p rewrite rule named **customup-rw** in the rewrite table for all Layer 2 interfaces:

```
[edit class-of-service rewrite-rules]
user@switch# set ieee-802.1 customup-rw forwarding-class be loss-priority low code-point 000
user@switch# set ieee-802.1 customup-rw forwarding-class be loss-priority high code-point 001
user@switch# set ieee-802.1 customup-rw forwarding-class be loss-priority low code-point 010
user@switch# set ieee-802.1 customup-rw forwarding-class fcse loss-priority low code-point 011
```

```

user@switch# set ieee-802.1 customup-rw forwarding-class ef-no-loss loss-priority low
code-point 100
user@switch# set ieee-802.1 customup-rw forwarding-class ef-no-loss loss-priority high
code-point 101
user@switch# set ieee-802.1 customup-rw forwarding-class nc loss-priority low code-point
110
user@switch# set ieee-802.1 customup-rw forwarding-class nc loss-priority high code-point
111

```

- To enable an 802.1p rewrite rule named **customup-rw** on a Layer 2 interface:

```

[edit]
user@switch# set class-of-service interfaces xe-0/0/7 unit 0 rewrite-rules ieee-802.1
customup-rw

```



**NOTE:** All forwarding classes assigned to port xe-0/0/7 must have rewrite rules. Do not mix forwarding classes that have rewrite rules with forwarding classes that do not have rewrite rules on the same physical interface.

- To enable an 802.1p rewrite rule named **customup-rw** on all 10-Gigabit Ethernet interfaces on the switch, use wildcards for the interface name and logical interface (unit) number:

```

[edit]
user@switch# set class-of-service interfaces xe-* unit * rewrite-rules customup-rw

```



**NOTE:** In this case, *all* forwarding classes assigned to *all* 10-Gigabit Ethernet ports must have rewrite rules. Do not mix forwarding classes that have rewrite rules with forwarding classes that do not have rewrite rules on the same physical interface.

#### Related Documentation

- [Monitoring CoS Rewrite Rules on page 631](#)
- [Configuring Rewrite Rules for MPLS EXP Classifiers on page 60](#)
- [Understanding CoS Rewrite Rules on page 97](#)
- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules on page 56](#)

## Troubleshooting an Unexpected Rewrite Value

**Problem**    **Description:** Traffic from one or more forwarding classes on an egress port is assigned an unexpected rewrite value.



**NOTE:** For packets that carry both an inner VLAN tag and an outer VLAN tag, the rewrite rules rewrite only the outer VLAN tag.

**Cause** If you configure a rewrite rule for a forwarding class on an egress port, but you do not configure a rewrite rule for every forwarding class on that egress port, then the forwarding classes that do not have a configured rewrite rule are assigned random rewrite values.

For example:

1. Configure forwarding classes **fc1**, **fc2**, and **fc3**.
2. Configure rewrite rules for forwarding classes **fc1** and **fc2**, but not for forwarding class **fc3**.
3. Assign forwarding classes **fc1**, **fc2**, and **fc3** to a port.

When traffic for these forwarding classes flows through the port, traffic for forwarding classes **fc1** and **fc2** is rewritten correctly. However, traffic for forwarding class **fc3** is assigned a random rewrite value.

**Solution** If any forwarding class on an egress port has a configured rewrite rule, then all forwarding classes on that egress port must have a configured rewrite rule. Configuring a rewrite rule for any forwarding class that is assigned a random rewrite value solves the problem.



**TIP:** If you want the forwarding class to use the same code point value assigned to it by the ingress classifier, specify that value as the rewrite rule value. For example, if a forwarding class has the IEEE 802.1 ingress classifier code point value 011, configure a rewrite rule for that forwarding class that uses the IEEE 802.1p code point value 011.



**NOTE:** There are no default rewrite rules. You can bind one rewrite rule for DSCP traffic and one rewrite rule for IEEE 802.1p traffic to an interface. A rewrite rule can contain multiple forwarding-class-to-rewrite-value mappings.

1. To assign a rewrite value to a forwarding class, add the new rewrite value to the same rewrite rule as the other forwarding classes on the port:

```
[edit class-of-service rewrite-rules]
user@switch# set (dscp|ieee-802.1)rewrite-name forwarding-class class-name loss-priority
priority code-point (alias | bits)
```

For example, if the other forwarding classes on the port use rewrite values defined in the rewrite rule **custom-rw**, the forwarding class **be2** is being randomly rewritten, and you want to use IEEE 802.1 code point **002** for the **be2** forwarding class:

```
[edit class-of-service rewrite-rules]
user@switch# set ieee-802.1 custom-rw forwarding-class be2 loss-priority low code-point
002
```

2. Enable the rewrite rule on an interface if it is not already enabled on the desired interface:

```
[edit]
```



```
user@switch# set class-of-service interfaces interface-name unit unit rewrite-rules (dscp |  
ieee-802.1) rewrite-rule-name
```

For example, to enable the rewrite rule **custom-rw** on interface **xe-0/0/24.0**:

```
[edit]  
user@switch# set class-of-service interfaces xe-0/0/24 unit 0 rewrite-rules ieee-802.1  
custom-rw
```

- Related Documentation**
- [interfaces on page 478](#)
  - [rewrite-rules on page 484](#)
  - [Defining CoS Rewrite Rules on page 100](#)
  - [Monitoring CoS Rewrite Rules on page 631](#)



## PART 3

# Scheduling Traffic

- [Using Schedulers on page 107](#)



## CHAPTER 3

# Using Schedulers

- [Understanding Default CoS Scheduling and Classification on page 108](#)
- [Understanding CoS Scheduling Behavior and Configuration Considerations on page 114](#)
- [Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches on page 120](#)
- [Understanding CoS Port Schedulers on QFX Switches on page 125](#)
- [Defining CoS Queue Schedulers for Port Scheduling on page 138](#)
- [Example: Configuring Queue Schedulers for Port Scheduling on page 140](#)
- [Troubleshooting Egress Bandwidth That Exceeds the Configured Minimum Bandwidth on page 145](#)
- [Troubleshooting Egress Bandwidth That Exceeds the Configured Maximum Bandwidth on page 147](#)
- [Defining CoS Queue Scheduling Priority on page 148](#)
- [Example: Configuring Queue Scheduling Priority on page 149](#)
- [Understanding CoS Traffic Control Profiles on page 153](#)
- [Understanding CoS Priority Group Scheduling on page 154](#)
- [Defining CoS Traffic Control Profiles \(Priority Group Scheduling\) on page 157](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Understanding CoS Priority Group and Queue Guaranteed Minimum Bandwidth on page 191](#)
- [Example: Configuring Minimum Guaranteed Output Bandwidth on page 194](#)
- [Understanding CoS Priority Group Shaping and Queue Shaping \(Maximum Bandwidth\) on page 199](#)
- [Example: Configuring Maximum Output Bandwidth on page 201](#)
- [Understanding CoS WRED Drop Profiles on page 205](#)
- [Configuring CoS WRED Drop Profiles on page 209](#)
- [Example: Configuring WRED Drop Profiles on page 210](#)
- [Configuring CoS Drop Profile Maps on page 213](#)
- [Example: Configuring Drop Profile Maps on page 213](#)

- [Understanding CoS Explicit Congestion Notification on page 216](#)
- [Example: Configuring ECN on page 224](#)

## Understanding Default CoS Scheduling and Classification

---

If you do not explicitly configure classifiers and apply them to interfaces, the switch uses the default classifier to group ingress traffic into forwarding classes. If you do not configure scheduling on an interface, the switch uses the default schedulers to provide egress port resources for traffic. Default classification maps all traffic into the default forwarding classes (best-effort, fcoe, no-loss, and network-control). Each default forwarding class has a default scheduler, so traffic mapped to each default forwarding class receives port bandwidth, prioritization, and packet drop characteristics.

The switch supports direct port scheduling and enhanced transmission selection (ETS), also known as hierarchical port scheduling.

Hierarchical scheduling groups IEEE 802.1p priorities (IEEE 802.1p code points, which classifiers map to forwarding classes, which in turn are mapped to output queues) into priority groups (forwarding class sets). If you use only the default traffic scheduling and classification, the switch automatically creates a default priority group that contains all of the priorities (which are mapped to forwarding classes and output queues), and assigns 100 percent of the port output bandwidth to that priority group. The forwarding classes (queues) in the default forwarding class set receive bandwidth based on the default classifier settings. The default priority group is transparent. It does not appear in the configuration and is used for Data Center Bridging Capability Exchange (DCBX) protocol advertisement.



.....

**NOTE:** If you explicitly configure ETS by configuring one or more priority groups on an interface, any forwarding class that is not assigned to a priority group on that interface receives *no bandwidth*. This means that if you configure hierarchical scheduling on an interface, every forwarding class (priority) that you want to forward traffic on that interface must belong to a forwarding class set (priority group). ETS is not supported on QFX5200.

.....

This topic describes:

- [Default Classification on page 108](#)
- [Default Scheduling on page 111](#)
- [Default DCBX Advertisement on page 113](#)
- [Default Scheduling and Classification Summary on page 113](#)

## Default Classification

The default classifiers assign ingress traffic to default forwarding classes and loss priorities. The switch applies default IEEE 802.1, DSCP, and DSCP IPv6 classifiers to each interface that does not have explicitly configured classifiers. If you do not configure and apply EXP classifiers for MPLS traffic to logical interfaces, MPLS traffic on interfaces configured as **family mpls** uses the IEEE classifier.

If you explicitly configure one type of classifier but not other types of classifiers, the system uses only the configured classifier and does not use default classifiers for other types of traffic. There are two default IEEE 802.1 classifiers, a trusted classifier for ports that are in trunk mode, and an untrusted classifier for ports that are in access mode.

[Table 26 on page 63](#) shows the default mapping of IEEE 802.1 code-point values to forwarding classes and loss priorities for ports in trunk mode.

**Table 40: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier)**

Code Point	Forwarding Class	Loss Priority
be (000)	best-effort	low
be1 (001)	best-effort	low
ef (010)	best-effort	low
ef1 (011)	fcoe	low
af11 (100)	no-loss	low
af12 (101)	best-effort	low
nc1 (110)	network-control	low
nc2 (111)	network-control	low

[Table 27 on page 63](#) shows the default mapping of IEEE 802.1p code-point values to forwarding classes and loss priorities for ports in access mode (all incoming traffic is mapped to best-effort forwarding classes).

**Table 41: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier)**

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	low
010	best-effort	low
011	best-effort	low
100	best-effort	low
101	best-effort	low
110	best-effort	low

**Table 41: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier) (*continued*)**

Code Point	Forwarding Class	Loss Priority
111	best-effort	low

Table 28 on page 64 shows the default mapping of DSCP code-point values to forwarding classes and loss priorities for DSCP IP and DCSP IPv6.

**Table 42: Default DSCP IP and IPv6 Classifiers**

Code Point	Forwarding Class	Loss Priority
ef (101110)	best-effort	low
af11 (001010)	best-effort	low
af12 (001100)	best-effort	low
af13 (001110)	best-effort	low
af21 (010010)	best-effort	low
af22 (010100)	best-effort	low
af23 (010110)	best-effort	low
af31 (011010)	best-effort	low
af32 (011100)	best-effort	low
af33 (011110)	best-effort	low
af41 (100010)	best-effort	low
af42 (100100)	best-effort	low
af43 (100110)	best-effort	low
be (000000)	best-effort	low
cs1 (001000)	best-effort	low
cs2 (010000)	best-effort	low
cs3 (011000)	best-effort	low
cs4 (100000)	best-effort	low
cs5 (101000)	best-effort	low



Table 42: Default DSCP IP and IPv6 Classifiers (*continued*)

Code Point	Forwarding Class	Loss Priority
nc1 (110000)	network-control	low
nc2 (111000)	network-control	low

Table 29 on page 65 shows the default mapping of MPLS EXP code-point values to forwarding classes and loss priorities.

Table 43: Default EXP Classifiers

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	high
010	expedited-forwarding	low
011	expedited-forwarding	high
100	assured-forwarding	low
101	assured-forwarding	high
110	network-control	low
111	network-control	high

## Default Scheduling

The default schedulers allocate egress bandwidth resources to egress traffic as shown in Table 30 on page 65:

Table 44: Default Scheduler Configuration

Default Scheduler and Queue Number	Transmit Rate (Guaranteed Minimum Bandwidth)	Rate Shaping (Maximum Bandwidth)	Excess Bandwidth Sharing	Priority	Buffer Size
best-effort forwarding class scheduler (queue 0)	15%	None	15%	low	15%
fcoe forwarding class scheduler (queue 3)	35%	None	35%	low	35%
no-loss forwarding class scheduler (queue 4)	35%	None	35%	low	35%

Table 44: Default Scheduler Configuration (*continued*)

Default Scheduler and Queue Number	Transmit Rate (Guaranteed Minimum Bandwidth)	Rate Shaping (Maximum Bandwidth)	Excess Bandwidth Sharing	Priority	Buffer Size
network-control forwarding class scheduler (queue 7)	15%	None	15%	low	15%



**NOTE:** By default, the minimum guaranteed bandwidth (transmit rate) determines the amount of excess (extra) bandwidth a queue can share. Extra bandwidth is allocated to queues in proportion to the transmit rate of each queue. On switches that support the `excess-rate` statement, you can override the default setting and configure the excess bandwidth percentage independently of the transmit rate on queues that are not strict-high priority queues.

By default, only the four default schedulers shown in [Table 30 on page 65](#) have traffic mapped to them. Only the forwarding classes and queues associated with the default schedulers receive default bandwidth, based on the default scheduler transmit rate. (You can configure schedulers and forwarding classes to allocate bandwidth to other queues or to change the bandwidth and other scheduling properties of a default queue.) If a forwarding class does not transport traffic, the bandwidth allocated to that forwarding class is available to other forwarding classes. Unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic use the same forwarding classes and output queues.

Default scheduling is port scheduling.

Default hierarchical scheduling, known as enhanced transmission selection (ETS, defined in IEEE 802.1Qaz), allocates the total port bandwidth to the four default forwarding classes served by the four default schedulers, as defined by the four default schedulers. The result is the same as direct port scheduling. Configuring hierarchical port scheduling, however, enables you to group forwarding classes that carry similar types of traffic into forwarding class sets (also called priority groups), and to assign port bandwidth to each forwarding class set. The port bandwidth assigned to the forwarding class set is then assigned to the forwarding classes within the forwarding class set. This hierarchy enables you to control port bandwidth allocation with greater granularity, and enables hierarchical sharing of extra bandwidth to better utilize link bandwidth.

Default scheduling uses weighted round-robin (WRR) scheduling. Each queue receives a portion (weight) of the total available interface bandwidth. The scheduling weight is based on the transmit rate (minimum guaranteed bandwidth) of the default scheduler for that queue. For example, queue 7 receives a default scheduling weight of 15 percent of the available bandwidth, and queue 4 receives a default scheduling weight of 35 percent of the available bandwidth. Queues are mapped to forwarding classes (for example, queue 7 is mapped to the network-control forwarding class and queue 4 is mapped to the no-loss forwarding class). Each forwarding class receives the default

bandwidth for the queue to which it is mapped. Unused bandwidth is shared with other default queues.

If you want non-default (unconfigured) queues to forward traffic, you should explicitly map traffic to those queues (configure the forwarding classes and queue mapping) and create schedulers to allocate bandwidth to those queues. By default, queues 1, 2, 5, and 6 are unconfigured. Unconfigured queues have a default scheduling weight of 1 so that they can receive a small amount of bandwidth in case they need to forward traffic.

If you map traffic to an unconfigured queue and do not schedule port resources for the queue (configure a scheduler, map it to the forwarding class that is mapped to the queue, and apply the scheduler mapping to the port), the queue receives only the amount of excess bandwidth proportional to its default weight (1). The actual amount of bandwidth an unconfigured queue gets depends on how much bandwidth the other queues on the port are using.

If the other queues use less than their allocated amount of bandwidth, the unconfigured queues can share the unused bandwidth. Configured queues have higher priority for bandwidth than unconfigured queues, so if a configured queue needs more bandwidth, then less bandwidth is available for unconfigured queues. Unconfigured queues always receive a minimum amount of bandwidth based on their scheduling weight (1). If you map traffic to an unconfigured queue, to allocate bandwidth to that queue, configure a scheduler for the forwarding class that is mapped to the queue, and apply it to the port.

## Default DCBX Advertisement

When you configure hierarchical scheduling on an interface, DCBX advertises each priority group, the priorities in each priority group, and the bandwidth properties of each priority and priority group.

If you do not configure hierarchical scheduling on an interface, DCBX advertises the automatically created default priority group and its priorities. DCBX also advertises the default bandwidth allocation of the priority group, which is 100 percent of the port bandwidth.

## Default Scheduling and Classification Summary

If you do not configure scheduling on an interface:

- Default classifiers classify ingress traffic.
- Default schedulers schedule egress traffic.
- DCBX advertises a single default priority group with 100 percent of the port bandwidth allocated to that priority group. All priorities (forwarding classes) are assigned to the default priority group and receive bandwidth based on their default schedulers. The default priority group is generated automatically and is not user-configurable.

### Related Documentation

- [Understanding CoS Packet Flow on page 24](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)
- [Understanding Default CoS Settings on page 26](#)

- [CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems on page 6](#)
- [Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches on page 120](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68](#)
- [Understanding DCB Features and Requirements on page 234](#)
- [Example: Configuring Classifiers on page 53](#)
- [Example: Configuring Queue Schedulers for Port Scheduling on page 140](#)

## Understanding CoS Scheduling Behavior and Configuration Considerations

Many factors affect scheduling configuration and bandwidth requirements, including:

- When you configure bandwidth for a forwarding class (each forwarding class is mapped to a queue) or a forwarding class set (priority group), the switch considers only the data as the configured bandwidth. The switch does not account for the bandwidth consumed by the preamble and the interframe gap (IFG). Therefore, when you calculate and configure the bandwidth requirements for a forwarding class or for a forwarding class set, consider the preamble and the IFG as well as the data in the calculations.
- When you configure a forwarding class to carry traffic on the switch (instead of using only default forwarding classes), you must also define a scheduling policy for the user-configured forwarding class. Some switches support enhanced transmission selection (ETS) hierarchical port scheduling, some switches support direct port scheduling, and some switches support both methods of scheduling.

For ETS hierarchical port scheduling, defining a hierarchical scheduling policy using ETS means:

- Mapping a scheduler to the forwarding class in a scheduler map
- Including the forwarding class in a forwarding class set
- Associating the scheduler map with a traffic control profile
- Attaching the traffic control profile to a forwarding class set and an interface

On switches that support port scheduling, defining a scheduling policy means:

- Mapping a scheduler to the forwarding class in a scheduler map.
- Applying the scheduler map to one or more interfaces.
- On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured, or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.
- For packets that carry both an inner VLAN tag and an outer VLAN tag, rewrite rules rewrite only the outer VLAN tag.

- For ETS hierarchical port scheduling, configuring the minimum guaranteed bandwidth (**transmit-rate**) for a forwarding class does not work unless you also configure the minimum guaranteed bandwidth (**guaranteed-rate**) for the forwarding class set in the traffic control profile.

Additionally, the sum of the transmit rates of the forwarding classes in a forwarding class set should not exceed the guaranteed rate for the forwarding class set. (You cannot guarantee a minimum bandwidth for the queues that is greater than the minimum bandwidth guaranteed for the entire set of queues.) If you configure transmit rates whose sum exceeds the guaranteed rate of the forwarding class set, the commit check fails and the system rejects the configuration.

- For ETS hierarchical port scheduling, the sum of the forwarding class set guaranteed rates cannot exceed the total port bandwidth. If you configure guaranteed rates whose sum exceeds the port bandwidth, the system sends a syslog message to notify you that the configuration is not valid. However, the system does not perform a commit check. If you commit a configuration in which the sum of the guaranteed rates exceeds the port bandwidth, the hierarchical scheduler behaves unpredictably.
- For ETS hierarchical port scheduling, if you configure the **guaranteed-rate** of a forwarding class set as a percentage, configure all of the transmit rates associated with that forwarding class set as percentages. In this case, if any of the transmit rates are configured as absolute values instead of percentages, the configuration is not valid and the system sends a syslog message.
- There are several factors to consider if you want to configure a strict-high priority queue (forwarding class):
  - You can configure only one strict-high priority queue (forwarding class) on QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems.

On QFX10000 switches, there is no limit to the number of strict-high priority queues you can configure.
  - You cannot configure a minimum guaranteed bandwidth (**transmit-rate**) for a strict-high priority queue on QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems.

On QFX5200 and QFX10000 switches, you can set the **transmit-rate** on strict-high priority queues to set a limit on the amount of traffic that the queue treats as strict-high priority traffic. Traffic in excess of the **transmit-rate** is treated as best-effort traffic, and receives an excess bandwidth sharing weight of "1", which is the proportion of extra bandwidth the strict-high priority queue can share on the port. Queues that are not strict-high priority queues use the transmit rate (default) or the configured excess rate to determine the proportion (weight) of extra port bandwidth the queue can share. However, you cannot configure an excess rate on a strict-high priority queue, and you cannot change the excess bandwidth sharing weight of "1" on a strict-high priority queue.

For ETS hierarchical port scheduling, you cannot configure a minimum guaranteed bandwidth (**guaranteed-rate**) for a forwarding class set that includes a strict-high priority queue.

- Except on QFX10000 switches, for ETS hierarchical port scheduling only, you must create a separate forwarding class set for a strict-high priority queue. On QFX10000 switches, you can mix strict-high priority and low priority queues in the same forwarding class set.
- Except on QFX10000 switches, for ETS hierarchical port scheduling, only one forwarding class set can contain a strict-high priority queue. On QFX10000 switches, this restriction does not apply.
- Except on QFX10000 switches, for ETS hierarchical port scheduling, a strict-high priority queue cannot belong to the same forwarding class set as queues that are not strict-high priority. (You cannot mix a strict-high priority forwarding class with forwarding classes that are not strict-high priority in one forwarding class set.) On QFX10000 switches, you can mix strict-high priority and low priority queues in the same forwarding class set.
- For ETS hierarchical port scheduling on switches that use different forwarding class sets for unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic, a strict-high priority queue cannot belong to a multdestination forwarding class set.
- On QFX10000 systems, we recommend that you always configure a transmit rate on strict-high priority queues to prevent them from starving other queues. If you do not apply a transmit rate to limit the amount of bandwidth strict-high priority queues can use, then strict-high priority queues can use all of the available port bandwidth and starve other queues on the port.

On QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, we recommend that you always apply a shaping rate to the strict-high priority queue to prevent it from starving other queues. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.

- On QFabric systems, if any queue that contains outgoing packets does not transmit packets for 12 consecutive seconds, the port automatically resets. Failure of a queue to transmit packets for 12 consecutive seconds might be due to:
  - A strict-high priority queue consuming all of the port bandwidth
  - Several queues consuming all of the port bandwidth
  - Any queue or port receiving continuous priority-based flow control (PFC) or 802.3x Ethernet PAUSE messages (received PFC and PAUSE messages prevent a queue or a port, respectively, from transmitting packets because of network congestion)
  - Other conditions that prevent a queue from obtaining port bandwidth for 12 consecutive seconds

If the cause is a strict-high priority queue consuming all of the port bandwidth, use rate shaping to configure a maximum rate for the strict-high priority queue and prevent it from using all of the port bandwidth. To configure rate shaping, include the **shaping-rate (rate | percent percentage)** statement at the **[edit class-of-service schedulers scheduler-name]** hierarchy level and apply the shaping rate to the strict-high priority

scheduler. We recommend that you always apply a shaping rate to strict-high priority traffic to prevent the strict-high priority queue from starving other queues.

If several queues consume all of the port bandwidth, you can use a scheduler to rate shape those queues and prevent them from using all of the port bandwidth.

- For transmit rates below 1 Gbps, we recommend that you configure the transmit rate as a percentage instead of as a fixed rate. This is because the system converts fixed rates into percentages and might round small fixed rates to a lower percentage. For example, a fixed rate of 350 Mbps is rounded down to 3 percent instead of 3.5 percent.
- When you set the maximum bandwidth for a queue or for a priority group (**shaping-rate**) at 100 Kbps or lower, the traffic shaping behavior is accurate only within +/– 20 percent of the configured **shaping-rate**.
- On QFX10000 switches, configuring rate shaping (`[set class-of-service schedulers scheduler-name transmit-rate (rate | percentage) exact]`) on a LAG interface using the `[edit class-of-service interfaces lag-interface-name scheduler-map scheduler-map-name]` statement can result in scheduled traffic streams receiving more LAG link bandwidth than expected.

You configure rate shaping in a scheduler to set the maximum bandwidth for traffic assigned to a forwarding class on a particular output queue on a port. For example, you can use a scheduler to configure rate shaping on traffic assigned to the best-effort forwarding class mapped to queue 0, and then apply the scheduler to an interface using a scheduler map, to set the maximum bandwidth for best-effort traffic mapped to queue 0 on that port. Traffic in the best-effort forwarding can use no more than the amount of port bandwidth specified by the transmit rate when you use the **exact** option.

LAG interfaces are composed of two or more Ethernet links bundled together to function as a single interface. The switch can hash traffic entering a LAG interface onto any member link in the LAG interface. When you configure rate shaping and apply it to a LAG interface, the way that the switch applies the rate shaping to traffic depends on how the switch hashes the traffic onto the LAG links.

To illustrate how link hashing affects the way the switch applies a shaping rate to LAG traffic, let's look at a LAG interface (**ae0**) that has two member links (**xe-0/0/20** and **xe-0/0/21**). On LAG **ae0**, we configure rate shaping of **2g** for traffic assigned to the **best-effort** forwarding class, which is mapped to output queue 0. When traffic in the **best-effort** forwarding class reaches the LAG interface, the switch hashes the traffic onto one of the two member links.

If the switch hashes all of the **best-effort** traffic onto the same LAG link, the traffic receives a maximum of 2g bandwidth on that link. In this case, the intended cumulative limit of 2g for best-effort traffic on the LAG is enforced.

However, if the switch hashes the **best-effort** traffic onto both of the LAG links, the traffic receives a maximum of 2g bandwidth on *each* LAG link, not 2g as a cumulative total for the entire LAG, so the best-effort traffic receives a maximum of 4g on the LAG, not the 2g set by the rate shaping configuration. When hashing spreads the traffic assigned to an output queue (which is mapped to a forwarding class) across multiple LAG links, the effective rate shaping (cumulative maximum bandwidth) on the LAG is:

(number of LAG member interfaces) x (rate shaping for the output queue) = cumulative LAG rate shaping

- On switches that do not use virtual output queues (VOQs), ingress port congestion can occur during periods of egress port congestion if an ingress port forwards traffic to more than one egress port, and at least one of those egress ports experiences congestion. If this occurs, the congested egress port can cause the ingress port to exceed its fair allocation of ingress buffer resources. When the ingress port exceeds its buffer resource allocation, frames are dropped at the ingress. Ingress port frame drop affects not only the congested egress ports, but also all of the egress ports to which the congested ingress port forwards traffic.

If a congested ingress port drops traffic that is destined for one or more uncongested egress ports, configure a weighted random early detection (WRED) drop profile and apply it to the egress queue that is causing the congestion. The drop profile prevents the congested egress queue from affecting egress queues on other ports by dropping frames at the egress instead of causing congestion at the ingress port.



**NOTE:** On systems that support lossless transport, do not configure drop profiles for lossless forwarding classes such as the default **fcoe** and **no-loss** forwarding classes. FCoE and other lossless traffic queues require lossless behavior. Use priority-based flow control (PFC) to prevent frame drop on lossless priorities.

- On systems that use different classifiers for unicast and multdestination traffic and that support lossless transport, on an ingress port, do not configure classifiers that map the same IEEE 802.1p code point to both a multdestination traffic flow and a lossless unicast traffic flow (such as the default lossless **fcoe** or **no-loss** forwarding classes). Any code point used for multdestination traffic on a port should not be used to classify unicast traffic into a lossless forwarding class on the same port.

If a multdestination traffic flow and a lossless unicast traffic flow use the same code point on a port, the multdestination traffic is treated the same way as the lossless traffic. For example, if priority-based flow control (PFC) is applied to the lossless traffic, the multdestination traffic of the same code point is also paused. During periods of congestion, treating multdestination traffic the same as lossless unicast traffic can create ingress port congestion for the multdestination traffic and affect the multdestination traffic on all of the egress ports the multdestination traffic uses.

For example, the following configuration can cause ingress port congestion for the multdestination flow:

1. For unicast traffic, IEEE 802.1p code point 011 is classified into the **fcoe** forwarding class:  

```
user@switch# set class-of-service classifiers ieee-802.1 ucast_cl forwarding-class fcoe loss-priority low code-points 011
```
2. For multdestination traffic, IEEE 802.1p code point 011 is classified into the **mcast** forwarding class:



```
user@switch# set class-of-service classifiers ieee-802.1 mcast-cl forwarding-class mcast
loss-priority low code-points 011
```

3. The unicast classifier that maps traffic with code point **011** to the **fcoe** forwarding class is mapped to interface **xe-0/0/1**:

```
user@switch# set class-of-service interfaces xe-0/0/1 unit 0 classifiers ieee-802.1 ucast-cl
```

4. The multdestination classifier that maps traffic with code point **011** to the **mcast** forwarding class is mapped to all interfaces (multidestination traffic maps to all interfaces and cannot be mapped to individual interfaces):

```
user@switch# set class-of-service multi-destination classifiers ieee-802.1 mcast-cl
```

Because the same code point (**011**) maps unicast traffic to a lossless traffic flow and also maps multidestination traffic to a multidestination traffic flow, the multidestination traffic flow might experience ingress port congestion during periods of congestion.

To avoid ingress port congestion, do not map the code point used by the multidestination traffic to lossless unicast traffic. For example:

1. Instead of classifying code point **011** into the **fcoe** forwarding class, classify code point **011** into the **best-effort** forwarding class:

```
user@switch# set class-of-service classifiers ieee-802.1 ucast-cl forwarding-class
best-effort loss-priority low code-points 011
```

2. user@switch# set class-of-service classifiers ieee-802.1 mcast-cl forwarding-class mcast loss-priority low code-points 011
  3. user@switch# set class-of-service interfaces xe-0/0/1 unit 0 classifiers ieee-802.1 ucast-cl
  4. user@switch# set class-of-service multi-destination classifiers ieee-802.1 mcast-cl
- Because the code point **011** does not map unicast traffic to a lossless traffic flow, the multidestination traffic flow does not experience ingress port congestion during periods of congestion.

The best practice is to classify unicast traffic with IEEE 802.1p code points that are also used for multidestination traffic into best-effort forwarding classes.

## Understanding CoS Virtual Output Queues (VOQs) on QFX10000 Switches

---

The traditional method of forwarding traffic through a switch is based on buffering ingress traffic in input queues on ingress interfaces, forwarding the traffic across the switch fabric to output queues on egress interfaces, and then buffering traffic again on the output queues before transmitting the traffic to the next hop. The traditional method of queueing packets on an ingress port is storing traffic destined for different egress ports in the same input queue (buffer).

During periods of congestion, the switch might drop packets at the egress port, so the switch might spend resources transporting traffic across the switch fabric to an egress port, only to drop that traffic instead of forwarding it. And because input queues store traffic destined for different egress ports, congestion on one egress port could affect traffic on a different egress port, a condition called *head-of-line blocking (HOLB)*.

*Virtual output queue (VOQ)* architecture takes a different approach:

- Instead of separate physical buffers for input and output queues, the switch uses the physical buffers on the ingress pipeline of each Packet Forwarding Engine (PFE) chip to store traffic for every egress port. Every output queue on an egress port has buffer storage space on every ingress pipeline on all of the PFE chips on the switch. The mapping of ingress pipeline storage space to output queues is 1-to-1, so each output queue receives buffer space on each ingress pipeline.
- Instead of one input queue containing traffic destined for multiple different output queues (a one-to-many mapping), each output queue has a dedicated VOQ comprised of the input buffers on each packet forwarding chip that are dedicated to that output queue (a 1-to-1 mapping). This architecture prevents communication between any two ports from affecting another port.
- Instead of storing traffic on a physical output queue until it can be forwarded, a VOQ does not transmit traffic from the ingress port across the fabric to the egress port until the egress port has the resources to forward the traffic.

A VOQ is a collection of input queues (buffers) that receive and store traffic destined for one output queue on one egress port. Each output queue on each egress port has its own dedicated VOQ, which consists of all of the input queues that are sending traffic to that output queue.

- [VOQ Architecture on page 120](#)
- [VOQ Advantages on page 122](#)

### VOQ Architecture

A VOQ represents the ingress buffering for a particular output queue. A unique buffer ID identifies each output queue on a PFE chip. Each of the six PFE chips uses the same unique buffer ID for a particular output queue. The traffic stored using a particular buffer ID on the six PFE chips comprises the traffic destined for one particular output queue on one port, and is the VOQ for that output queue.

A switch that has 72 egress ports with 8 output queues on each port, has 576 VOQs on each PFE chip ( $72 \times 8 = 576$ ). Because the switch has six PFE chips, the switch has a total of 3,456 VOQs ( $576 \times 6 = 3,456$ ).

A VOQ is distributed across all of the PFE chips that are actively sending traffic to that output queue. Each output queue is the sum of the total buffers assigned to that output queue (by its unique buffer ID) across all of the PFE chips. So the output queue itself is virtual, not physical, although the output queue is comprised of physical input queues.

- [Round-Trip Time Buffering on page 121](#)
- [Requesting and Granting Egress Port Bandwidth on page 121](#)

### Round-Trip Time Buffering

---

Although there is no output queue buffering during periods of congestion (no long-term storage), there is a small physical output queue buffer on egress line cards to accommodate the round-trip time for traffic to traverse the switch fabric from ingress to egress. The round-trip time consists of the time it takes the ingress port to request egress port resources, receive a grant from the egress port for resources, and transmit the data across the switch fabric.

That means if a packet is not dropped at the switch ingress, and the switch forwards the packet across the fabric to the egress port, the packet will not be dropped and will be forwarded to the next hop. All packet drops take place in the ingress pipeline.

The switch has 4 GB of external DRAM to use as a delay bandwidth buffer (DBB). The DBB provides storage for ingress ports until the ports can forward traffic to egress ports.

### Requesting and Granting Egress Port Bandwidth

---

When packets arrive at an ingress port, the ingress pipeline stores the packet in the ingress queue with the unique buffer ID of the destination output queue. The switch makes the buffering decision after performing the packet lookup. If the packet belongs to a class for which the maximum traffic threshold has been exceeded, the packet might not be buffered and might be dropped. To transport packets across the switch fabric to egress ports:

1. The ingress line card PFE request scheduler sends a request to the egress line card PFE grant scheduler to notify the egress PFE that data is available for transmission.
2. When there is available egress bandwidth, the egress line card grant scheduler responds by sending a bandwidth grant to the ingress line card PFE.
3. The ingress line card PFE receives the grant from the egress line card PFE, and transmits the data to the egress line card.

Ingress packets remain in the VOQ on the ingress port input queues until the output queue is ready to accept and forward more traffic.

Under most conditions, the switch fabric is fast enough to be transparent to egress class-of-service (CoS) policies, so the process of forwarding traffic from the ingress pipeline, across the switch fabric, to egress ports, does not affect the configured CoS

policies for the traffic. The fabric only affects CoS policy if there is a fabric failure or if there is an issue of port fairness.

When a packet ingresses and egresses the same PFE chip (local switching), the packet does not traverse the switch fabric. However, the switch uses the same request and grant mechanism to receive egress bandwidth as packets that cross the fabric, so locally switched packets and packets that arrive at a PFE chip after crossing the switch fabric are treated fairly when the traffic is contending for the same output queue.

## VOQ Advantages

VOQ architecture provides two major advantages:

- [Eliminate Head-of-Line Blocking on page 122](#)
- [Increase Fabric Efficiency and Utilization on page 124](#)


### Eliminate Head-of-Line Blocking

VOQ architecture eliminates head-of-line blocking (HOLB) issues. On non-VOQ switches, HOLB occurs when congestion at an egress port affects a different egress port that is not congested. HOLB occurs when the congested port and the uncongested port share the same input queue on an ingress interface.

An example of a HOLB scenario is a switch that has streams of traffic entering one ingress port (IP-1) that are destined for two different egress ports (EP-2 and EP-3):


1. Congestion occurs on egress port EP-2. There is no congestion on egress port EP-3, as shown in [Figure 5 on page 122](#).

**Figure 5: Congestion Occurs on EP-2**

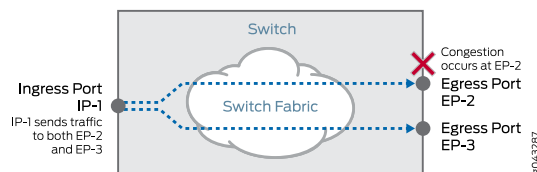

2. Egress port EP-2 sends a backpressure signal to ingress port IP-1, as shown in [Figure 6 on page 122](#).


**Figure 6: EP-2 Backpressures IP-1**

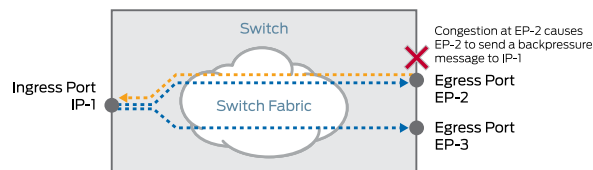

3. The backpressure signal causes the ingress port IP-1 to stop sending traffic and to buffer traffic until it receives a signal to resume sending, as shown in [Figure 7 on page 123](#). Traffic that arrives at ingress port IP-1 destined for uncongested


egress port EP-3 is buffered along with the traffic destined for congested port EP-2, instead of being forwarded to port EP-3.

**Figure 7: Backpressure from EP-2 Causes IP-1 to Buffer Traffic Instead of Sending Traffic, Affecting EP-3**

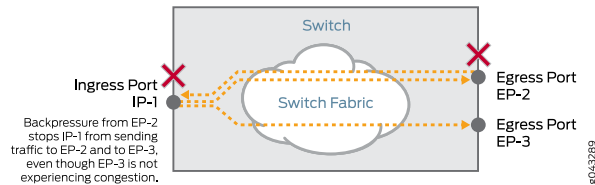

4. Ingress port IP-1 transmits traffic to uncongested egress port EP-3 only when egress port EP-2 clears enough to allow ingress port IP-1 to resume sending traffic, as shown in [Figure 8 on page 123](#).


**Figure 8: Congestion on EP-2 Clears, Allowing IP-1 to Resume Sending Traffic to Both Egress Ports**

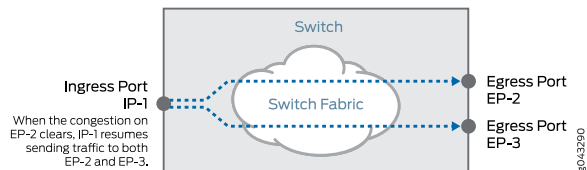

In this way, congested egress port EP-2 negatively affects uncongested egress port EP-3, because both egress ports share the same input queue on ingress port IP-1.


VOQ architecture avoids HOLB by creating a different dedicated virtual queue for each output queue on each interface, as shown in [Figure 9 on page 123](#).

**Figure 9: Each Egress Port Has a Separate Virtual Output Queue on IP-1**

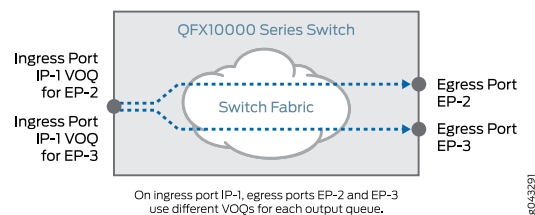

Because different egress queues do not share the same input queue, a congested egress queue on one port cannot affect an egress queue on a different port, as shown in [Figure 10 on page 124](#). (For the same reason, a congested egress queue on one port cannot affect another egress queue on the same port—each output queue has its own dedicated virtual output queue composed of ingress interface input queues.)

Figure 10: Congestion on EP-2 Does Not Affect Uncongested Port EP-3

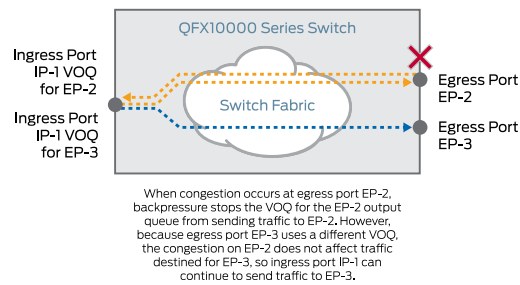

Performing queue buffering at the ingress interface ensures that the switch only sends traffic across the fabric to an egress queue if that egress queue is ready to receive that traffic. If the egress queue is not ready to receive traffic, the traffic remains buffered at the ingress interface.

### Increase Fabric Efficiency and Utilization

Traditional output queue architecture has some inherent inefficiencies that VOQ architecture addresses.

- **Packet buffering**—Traditional queueing architecture buffers each packet twice in long-term DRAM storage, once at the ingress interface and once at the egress interface. VOQ architecture buffers each packet only once in long-term DRAM storage, at the ingress interface. The switch fabric is fast enough to be transparent to egress CoS policies, so instead of buffering packets a second time at the egress interface, the switch can forward traffic at a rate that does not require deep egress buffers, without affecting the configured egress CoS policies (scheduling).
- **Consumption of resources**—Traditional queueing architecture sends packets from the ingress interface input queue (buffer), across the switch fabric, to the egress interface output queue (buffer). At the egress interface, packets might be dropped, even though the switch has expended resources transporting the packets across the fabric and storing them in the egress queue. VOQ architecture does not send packets across the fabric to the egress interface until the egress interface is ready to transmit the traffic. This increases system utilization because no resources are wasted transporting and storing packets that are dropped later.

Independent of VOQ architecture, the Juniper Networks switching architecture also provides better fabric utilization because the switch converts packets into cells. Cells have a predictable size, which enables the switch to spray the cells evenly across the fabric links and more fully utilize the fabric links. Packets vary greatly in size, and packet size is not predictable. Packet-based fabrics can deliver no better than 65-70 percent utilization because of the variation and unpredictability of packet sizes. Juniper Networks' cell-based fabrics can deliver a fabric utilization rate of almost 95 percent because of the predictability of and control over cell size.

#### Related Documentation

- [Understanding CoS Port Schedulers on QFX Switches on page 125](#)
- [Example: Configuring Queue Schedulers for Port Scheduling on page 140](#)

- [Understanding Default CoS Scheduling and Classification on page 62](#)

## Understanding CoS Port Schedulers on QFX Switches

Port scheduling defines the class-of-service (CoS) properties of output queues. You configure CoS properties in a scheduler, then map the scheduler to a forwarding class. Forwarding classes are in turn mapped to output queues. Classifiers map incoming traffic into forwarding classes based on IEEE 802.1p, DSCP, or EXP code points.

Output queue properties include the amount of interface bandwidth assigned to the queue, the size of the memory buffer allocated for storing packets, the scheduling priority of the queue, and the weighted random early detection (WRED) drop profiles associated with the queue to control packet drop during periods of congestion.

Scheduler maps map schedulers to forwarding classes. The output queue mapped to a forwarding class receives the port resources and properties defined in the scheduler mapped to that forwarding class. You apply a scheduler map to an interface to apply queue scheduling to a port. You can associate different scheduler maps with different interfaces to configure port-specific scheduling for forwarding classes (output queues).



**NOTE:** Port scheduling is simpler to configure than enhanced transmission selection (ETS) two-tier hierarchical port scheduling. Port scheduling allocates port bandwidth to output queues directly, instead of allocating port bandwidth to output queues through a scheduling hierarchy. While port scheduling is simpler, ETS is more flexible.

ETS allocates port bandwidth in a two-tier hierarchy:

- Port bandwidth is first allocated to a priority group using the CoS properties defined in a traffic control profile. A priority group is a group of forwarding classes (which are mapped to output queues) that require similar CoS treatment.
- Priority group bandwidth is allocated to the output queues (which are mapped to forwarding classes) using the properties defined in the output queue scheduler.



**NOTE:** When you configure bandwidth for a queue, the switch considers only the data as the configured bandwidth. The switch does not account for the bandwidth consumed by the preamble and the interframe gap (IFG). Therefore, when you calculate and configure the bandwidth requirements for a queue, consider the preamble and the IFG as well as the data in the calculations.

- [Queue Scheduling Components on page 126](#)
- [Default Schedulers on page 128](#)

- [Scheduling Priority on page 129](#)
- [Bandwidth Scheduling on page 131](#)
- [Scheduler Drop-Profile Maps on page 135](#)
- [Buffer Size on page 135](#)
- [Explicit Congestion Notification on page 137](#)
- [Scheduler Maps on page 137](#)

## Queue Scheduling Components

[Table 45 on page 126](#) provides a quick reference to the scheduler components you can configure to determine the bandwidth properties of output queues (forwarding classes).

**Table 45: Output Queue Scheduler Components**

Output Queue Scheduler Component	Description
Buffer size	Sets the size of the queue buffer.
Drop profile map	Maps a drop profile to a packet loss priority. Drop profile map components include: <ul style="list-style-type: none"> <li>• Drop profile—Sets the probability of dropping packets as the queue fills up.</li> <li>• Loss priority—Sets the traffic packet loss priority to which a drop profile applies.</li> </ul>
Excess rate	Sets the percentage of extra bandwidth (bandwidth that is not used by other queues) a queue can receive. If not set, the switch uses the transmit rate to determine how much extra bandwidth the queue can use. Extra bandwidth is the bandwidth remaining after all guaranteed bandwidth requirements are met.
Explicit congestion notification	Enables explicit congestion notification (ECN) on the queue.
Priority	Sets the scheduling priority applied to the queue.



Table 45: Output Queue Scheduler Components (*continued*)

Output Queue Scheduler Component	Description
Transmit rate	<p>Sets the minimum guaranteed bandwidth on low priority queues. By default, if you do not configure an excess rate, extra bandwidth is shared among queues in proportion to the transmit rate of each queue.</p> <p>On strict-high priority queues, sets the amount of bandwidth that receives strict-high priority forwarding treatment. Traffic that exceeds the transmit rate shares in the port excess bandwidth pool based on the strict-high priority excess bandwidth sharing weight of “1”, which is not configurable. The actual amount of extra bandwidth that traffic exceeding the transmit rate receives depends on how many other queues consume excess bandwidth and the excess rates of those queues.</p> <p>If you configure two or more strict-high priority queues on a port, you must configure a transmit rate on those queues. However, we strongly recommend that you always configure a transmit rate on strict-high priority queues to prevent them from starving other queues.</p>

Table 46 on page 127 provides a quick reference to some related scheduling configuration components.

Table 46: Related Scheduling Components

Related Scheduling Components	Description
Forwarding class	<p>Maps traffic classified into the forwarding class at the switch ingress to an output queue. Classifiers map forwarding classes to IEEE 802.1p, DSCP, or EXP code points. A forwarding class, an output queue, and code point bits are mapped to each other and identify the same traffic. (The code point bits identify incoming traffic. Classifiers assign traffic to forwarding classes based on the code point bits. Forwarding classes map to output queues. This mapping determines the output queue each class of traffic uses on the switch egress interfaces.)</p>
Output queue (virtual output queue)	<p>Output queues are virtual, and are comprised of the physical buffers on the ingress pipeline of each Packet Forwarding Engine (PFE) chip to store traffic for every egress port. Every output queue on an egress port has buffer storage space on every ingress pipeline on all of the PFE chips on the switch. The mapping of ingress pipeline storage space to output queues is 1-to-1, so each output queue receives buffer space on each ingress pipeline. See <a href="#">“Understanding CoS Virtual Output Queues (VOQs) on QFX10000 Switches” on page 120</a> for more information.</p>

Table 46: Related Scheduling Components (*continued*)

Related Scheduling Components	Description
Scheduler map	Maps schedulers to forwarding classes (forwarding classes are mapped to queues, so a forwarding class represents a queue, and the scheduler mapped to a forwarding class determines the CoS properties of the output queue mapped to that forwarding class).

## Default Schedulers

If you do not configure CoS, the switch uses its default settings. Each forwarding class requires a scheduler to set the CoS properties of the forwarding class and its output queue. The default configuration has four forwarding classes: best-effort (queue 0), fcoe (queue 3), no-loss (queue 4), and network-control (queue 7). Each default forwarding class is mapped to a default scheduler. You can use the default schedulers or you can define new schedulers for these four forwarding classes. For explicitly configured forwarding classes, you must explicitly configure a queue scheduler to allocate CoS resources to the traffic mapped to each forwarding class.

Table 47 on page 128 shows the default queue schedulers.

Table 47: Default Scheduler Configuration

Default Scheduler and Queue Number	Transmit Rate (Guaranteed Minimum Bandwidth)	Rate Shaping (Maximum Bandwidth)	Excess Bandwidth Sharing	Priority	Buffer Size
best-effort forwarding class scheduler (queue 0)	15%	None	15%	low	15%
fcoe forwarding class scheduler (queue 3)	35%	None	35%	low	35%
no-loss forwarding class scheduler (queue 4)	35%	None	35%	low	35%
network-control forwarding class scheduler (queue 7)	15%	None	15%	low	15%



**NOTE:** By default, the minimum guaranteed bandwidth (transmit rate) determines the amount of excess (extra) bandwidth a queue can share. Extra bandwidth is allocated to queues in proportion to the transmit rate of each queue. You can configure bandwidth sharing (excess rate) to override the default setting and configure the excess bandwidth percentage independently of the transmit rate.

By default, only the four default schedulers shown in Table 47 on page 128 have traffic mapped to them. Only the forwarding classes and queues associated with the default

schedulers receive default bandwidth, based on the default scheduler transmit rate. (You can configure schedulers and forwarding classes to allocate bandwidth to other queues or to change the default bandwidth of a default queue.) If a forwarding class does not transport traffic, the bandwidth allocated to that forwarding class is available to other forwarding classes. Unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic use the same forwarding classes and output queues.

Default scheduling is port scheduling. If you configure scheduling instead of using default scheduling, you can configure port scheduling or enhanced transmission selection (ETS) hierarchical port scheduling.

Default scheduling uses weighted round-robin (WRR) scheduling. Each queue receives a portion (weight) of the total available port bandwidth. The scheduling weight is based on the transmit rate (minimum guaranteed bandwidth) of the default scheduler for that queue. For example, queue 7 receives a default scheduling weight of 15 percent of available port bandwidth, and queue 4 receives a default scheduling weight of 35 percent of available bandwidth. Queues are mapped to forwarding classes (for example, queue 7 is mapped to the network-control forwarding class and queue 4 is mapped to the no-loss forwarding class), so forwarding classes receive the default bandwidth for the queues to which they are mapped. Unused bandwidth is shared with other default queues.

You should explicitly map traffic to non-default (unconfigured) queues and schedule bandwidth resources for those queues if you want to use them to forward traffic. By default, queues 1, 2, 5, and 6 are unconfigured. Unconfigured queues have a default scheduling weight of 1 so that they can receive a small amount of bandwidth in case they need to forward traffic.

If you map traffic to an unconfigured queue and do not schedule bandwidth for the queue, the queue receives only the amount of bandwidth proportional to its default weight (1). The actual amount of bandwidth an unconfigured queue receives depends on how much bandwidth the other queues on the port are using.

If the other queues use less than their allocated amount of bandwidth, the unconfigured queues can share the unused bandwidth. Because of their scheduling weights, configured queues have higher priority for bandwidth than unconfigured queues. If a configured queue needs more bandwidth, then less bandwidth is available for unconfigured queues. However, unconfigured queues always receive a minimum amount of bandwidth based on their scheduling weight (1). If you map traffic to an unconfigured queue, to allocate bandwidth to that queue, configure a scheduler and map it to the forwarding class that is mapped to the queue, and then apply the scheduler map to the port.

## Scheduling Priority

Scheduling priority determines the order in which an interface transmits traffic from its output queues. Priority settings ensure that queues containing important traffic receive prioritized access to the outgoing interface bandwidth. The priority setting in the scheduler determines queue priority (a scheduler map maps the scheduler to a forwarding class, the forwarding class is mapped to an output queue, and the output queue uses the CoS properties defined in the scheduler).

By default, all queues are low priority queues. The switch supports two levels of scheduling priority:

- Low—In the default CoS state, all queues are low priority queues. Low priority queues transmit traffic based on the weighted round-robin (WRR) algorithm. If you configure scheduling priorities higher than low priority on queues, then the higher priority queues are served before the low priority queues.
- Strict-high—You can configure queues as **strict-high** priority. Strict-high priority queues receive preferential treatment over all other queues, and receive all of their configured bandwidth before other queues are serviced. Other queues do not transmit traffic until strict-high priority queues are empty, and they receive the bandwidth that remains after the strict-high priority queues are serviced. Because strict-high priority queues are always serviced first, strict-high priority queues can starve other queues on a port. Carefully consider how much bandwidth you want to allocate to strict-high priority queues to avoid starving other queues.

When you define scheduling priorities for queues instead of using the default priorities (by default all queues are low priority), the switch uses the priorities to determine the order of packet transmission from the queues. The switch services traffic of different scheduling priorities in a strict order, using round-robin (RR) scheduling to arbitrate queue transmission service among queues of the same priority. The switch transmits packets in the following order:

1. Strict-high priority traffic within the configured queue transmit rate (on strict-high priority queues, the transmit rate limits the amount of traffic treated as strict-high priority traffic). When traffic arrives on a strict-high priority queue, the switch forwards it before servicing other queues.
2. Low priority traffic within the configured queue transmit rate (on low priority queues, the transmit rate sets the minimum guaranteed bandwidth)
3. All traffic that exceeds the queue transmit rate using weighted round-robin (WRR) scheduling. Traffic that exceeds the queue transmit rate contends for excess port bandwidth (bandwidth that is not consumed after the port meets all guaranteed bandwidth requirements). The switch allocates and weights excess bandwidth for low priority queues based on the configured queue excess rate, or on the transmit rate if no excess rate is configured. The switch allocates and weights excess bandwidth for strict-high priority queues based on the hard-coded weight “1”, which is not configurable. The actual amount of extra bandwidth that traffic exceeding the transmit rate gets depends on how many other queues consume excess bandwidth and the weighting of those queues.



**NOTE:** If you use the default CoS configuration, all queues are low priority queues and transmit traffic based on the weighted round-robin (WRR) algorithm.

---

## Bandwidth Scheduling

A queue scheduler allocates port bandwidth to a queue (the scheduler is mapped to a forwarding class, and the forwarding class is mapped to a queue). The bandwidth profile, which consists of minimum guaranteed bandwidth, maximum bandwidth (queue shaping), and excess bandwidth sharing properties configured in the scheduler, defines the amount of port bandwidth a queue can consume during normal and congested transmission periods.

The scheduler regularly reevaluates whether each individual queue is within its defined bandwidth profile by comparing the amount of data the queue receives to the amount of bandwidth the scheduler allocates to the queue. When the received amount is less than the guaranteed minimum amount of bandwidth, the queue is considered to be in profile. A queue is out of profile when its received amount is larger than its guaranteed minimum amount. Out of profile queue data is transmitted only if extra (excess) bandwidth is available. Otherwise, it is buffered if buffer space is available. If no buffer space is available, the traffic might be dropped.

The switch provides features that enable you to control the allocation of port bandwidth to queues, so that you can meet the demands of different types of traffic on a port:

- [Minimum Guaranteed Bandwidth on page 131](#)
- [Maximum Bandwidth \(Rate Shaping on Low Priority Queues and LAGs\) on page 132](#)
- [Limiting Bandwidth Consumed by Strict-High Priority Queues on page 133](#)
- [Sharing Extra Bandwidth \(Excess Rate on Low Priority Queues\) on page 134](#)

---

### Minimum Guaranteed Bandwidth

The transmit rate determines the minimum guaranteed bandwidth for each forwarding class that is mapped to an output queue, and so determines the minimum bandwidth guarantee on that queue.

If you do not want to use the default configuration, you can set the minimum guaranteed bandwidth in several ways, and with several options, using the **[set class-of-service schedulers *scheduler-name* transmit-rate (rate | percent *percentage*) <exact>]** statement:

- **Rate**—Set the minimum guaranteed bandwidth as a fixed amount (rate) in bits-per-second of port bandwidth (for example, 2 Gbps or 800 Mbps).
- **Percent**—Set the minimum guaranteed bandwidth as a percentage of port bandwidth (for example, 25 percent).
- **Exact**—Shape the queue to the transmit rate so that the transmit rate is the maximum amount of bandwidth a queue can use. The queue cannot share extra port bandwidth if you configure the exact option. Configuring a transmit rate as *exact* is how you set a shaping rate to configure the maximum amount of bandwidth the low priority queue can consume, and the maximum is the transmit rate. You cannot use the **exact** option on a strict-high priority queue.
- **Extra bandwidth sharing**—On low-priority queues, if you configure an excess rate, the excess rate determines the amount of extra port bandwidth a queue can use. If you

do not configure an excess rate, the transmit rate determines how much excess (extra) bandwidth a low-priority queue can share. If you do not configure an excess rate, then each queue shares extra bandwidth in proportion to its transmit rate.

You cannot configure an excess rate on strict-high priority queues. Strict-high priority queues share extra bandwidth based on a scheduling weight of “1”, which is not configurable. The actual amount of extra bandwidth that traffic exceeding the transmit rate gets depends on how many other queues consume excess bandwidth and the excess rates of those queues.



**NOTE:** The sum of the transmit rates of the queues on a port should not exceed the total bandwidth of that port. (You cannot guarantee a combined minimum bandwidth for the queues on a port that is greater than the total port bandwidth.)



**NOTE:** For transmit rates below 1 Gbps, we recommend that you configure the transmit rate as a percentage instead of as a fixed rate. This is because the system converts fixed rates into percentages and might round small fixed rates to a lower percentage. For example, a fixed rate of 350 Mbps is rounded down to 3 percent.

The bandwidth a low-priority queue consumes can exceed the configured minimum rate if additional bandwidth is available, and if you do not configure the transmit rate as **exact**. During periods of congestion, the configured transmit rate is the guaranteed minimum bandwidth for the queue. This behavior enables you to ensure that each queue receives the amount of bandwidth appropriate to its required level of service and is also able to share unused bandwidth.

### Maximum Bandwidth (Rate Shaping on Low Priority Queues and LAGs)

---

The optional **exact** keyword in the **[set class-of-service schedulers *scheduler-name* transmit-rate (rate | percent *percentage*) <exact>]** configuration statement shapes the transmission rate of low-priority queues. When you specify the **exact** option, the switch drops traffic that exceeds the configured transmit rate, even if excess bandwidth is available. Rate shaping prevents a queue from using more bandwidth than is appropriate for the planned service level of the traffic on the queue. You cannot use the **exact** option on a strict-high priority queue.

Configuring rate shaping on a LAG interface using the **[edit class-of-service interfaces *lag-interface-name* scheduler-map *scheduler-map-name*]** statement can result in scheduled traffic streams receiving more LAG link bandwidth than expected.

LAG interfaces are composed of two or more Ethernet links bundled together to function as a single interface. The switch can hash traffic entering a LAG interface onto any member link in the LAG interface. When you configure a rate shaping and apply it to a LAG interface, the way that the switch applies the rate shaping to traffic depends on how the switch hashes the traffic onto the LAG links.

To illustrate how link hashing affects the way the switch applies rate shaping to LAG traffic, let's look at a LAG interface named **ae0** that has two member links, **xe-0/0/20** and **xe-0/0/21**. On LAG **ae0**, we configure rate shaping of **2g** by including the **transmit-rate 2g exact** statement in the queue scheduler, and apply the scheduler to traffic assigned to the **best-effort** forwarding class, which is mapped to output queue **0**. When traffic in the **best-effort** forwarding class reaches the LAG interface, the switch hashes the traffic onto one of the two member links.

If the switch hashes all of the **best-effort** traffic onto the same LAG link, the traffic receives a maximum of 2g bandwidth on that link. In this case, the intended cumulative limit of 2g for best effort traffic on the LAG is enforced.

However, if the switch hashes the **best-effort** traffic onto both of the LAG links, the traffic receives a maximum of 2g bandwidth on *each* LAG link, not 2g as a cumulative total for the entire LAG. The result is that best-effort traffic receives a maximum of 4g on the LAG, not the 2g set by the rate shaping statement. When hashing spreads the traffic assigned to an output queue (which is mapped to a forwarding class) across multiple LAG links, the effective shaping rate (cumulative maximum bandwidth) on the LAG is:

(number of LAG member interfaces) x (shaping rate for the output queue) = cumulative LAG shaping rate

### Limiting Bandwidth Consumed by Strict-High Priority Queues

---

You can limit the amount of traffic that receives strict-high priority treatment on a queue by configuring a transmit rate on the strict-high priority queue. The transmit rate sets the amount of traffic that receives strict-high priority treatment. Traffic that exceeds the transmit rate shares in the port excess bandwidth pool based on the strict-high priority excess bandwidth sharing weight of "1", which is not configurable. The actual amount of extra bandwidth that traffic exceeding the transmit rate gets depends on how many other queues consume excess bandwidth and the excess rates of those queues. Limiting the amount of traffic that receives strict-high priority treatment prevents other queues from being starved, while also ensuring that the amount of traffic specified in the transmit rate receives strict-high priority treatment.



**NOTE:** Configuring a transmit rate on a low-priority queue sets the guaranteed minimum bandwidth of the queue, as described in [“Minimum Guaranteed Bandwidth”](#) on page 131.



**CAUTION:** If you configure strict-high priority queues, we strongly recommend that you configure a transmit rate on the queues to prevent them from starving low priority queues on that port. This is especially important if you configure more than one strict-high priority queue on a port. Although it is not mandatory to configure a transmit rate on strict-high priority queues, if you do not configure a transmit rate, the strict-high priority queues can consume all of the port bandwidth and starve the other queues.

### Sharing Extra Bandwidth (Excess Rate on Low Priority Queues)

---

Extra bandwidth is essentially the bandwidth remaining after the switch meets all guaranteed bandwidth requirements. Extra bandwidth is available to low-priority traffic when the queues on a port do not use all of the available port bandwidth.

By default, extra port bandwidth is shared among the forwarding classes on a port in proportion to the transmit rate of each queue. You can explicitly configure the amount of extra bandwidth a queue can share by setting an **excess-rate** in the scheduler of a low-priority queue. The configured excess rate overrides the transmit rate and determines the percentage of extra bandwidth the queue can consume.



**NOTE:** You cannot configure an excess rate on a strict-high priority queue. Strict-high priority queues share excess bandwidth based on an excess bandwidth sharing weight of “1”, which is not configurable. The actual amount of extra bandwidth that strict-high priority traffic exceeding the transmit rate receives depends on how many other queues consume excess bandwidth and the excess rates of those queues.

An example of extra bandwidth allocation based on transmit rates is a port that has traffic running on three forwarding classes, **best-effort**, **fcoe**, and **network-control**. In this example, the **best-effort** forwarding class has a transmit rate of 2 Gbps, forwarding class **fcoe** has a transmit rate of 4 Gbps, and **network-control** has a transmit rate of 2 Gbps, for a total of 8 Gbps of the port bandwidth. After servicing the minimum guaranteed bandwidth of these three queues, the port has 2 Gbps of available extra bandwidth.

If all three queues still have packets to forward, the queues receive the extra bandwidth in proportion to their transmit rates, so the **best-effort** queue receives an extra 500 Mbps, the **fcoe** queue receives an extra 1 Gbps, and the **network-control** queue receives an extra 500 Mbps.

If you configure an excess rate for a queue, the excess rate determines the proportion of extra bandwidth that the queue receives in the same way that the default (transmit rate) determines the proportion of extra bandwidth a queue receives. In the previous example, if you configured an excess rate of 20 percent on the **fcoe** forwarding class, and the transmit rates of the **best-effort** and **network-control** forwarding classes remained 2g (with no configured excess rate, so the 2g transmit rate for each queue still determines the excess rate), then the 2 Gbps of extra bandwidth would be allocated evenly among the three queues because all three queues have the same excess rate.

In the previous example, if you configured an excess rate of 10 percent on the **fcoe** forwarding class, and the transmit rates of the **best-effort** and **network-control** forwarding classes remained 2g (again with no configured excess rate, so the 2g transmit rate for each queue still determines the excess rate), the 2 Gbps of extra bandwidth would be allocated 800 Mbps to the **best-effort** queue, 400 Mbps to the **fcoe** queue, and 800 Mbps to the **network-control** queue (again, in proportion to the queue excess rates).



## Scheduler Drop-Profile Maps

Drop-profile maps associate drop profiles with queue schedulers and packet loss priorities (PLPs). Drop profiles set thresholds for dropping packets during periods of congestion, based on the queue fill level and a percentage probability of dropping packets at the specified queue fill level. At different fill levels, a drop profile sets different probabilities of dropping a packet during periods of congestion.

Classifiers assign incoming traffic to forwarding classes (which are mapped to output queues), and also assign a PLP to the incoming traffic. The PLP can be low, medium-high, or high. You can classify traffic with different PLPs into the same forwarding class to differentiate treatment of traffic within the forwarding class.

In a drop profile map, you can configure a different drop profile for each PLP and associate (map) the drop profiles to a queue scheduler. A scheduler map maps the queue scheduler to a forwarding class (output queue). Traffic classified into the forwarding class uses the drop characteristics defined in the drop profiles that the drop profile map associates with the queue scheduler. The drop profile the traffic uses depends on the PLP that the classifier assigns to the traffic. (You can map different drop profiles to the forwarding class for different PLPs.)

In summary:

- Classifiers assign one of three PLPs (low, medium-high, high) to incoming traffic when classifiers assign traffic to a forwarding class.
- Drop profiles set thresholds for packet drop at different queue fill levels.
- Drop profile maps associate a drop profile with each PLP, and then map the drop profiles to schedulers.
- Scheduler maps map schedulers to forwarding classes, and forwarding classes are mapped to output queues. The scheduler mapped to a forwarding class determines the CoS characteristics of the output queue mapped to the forwarding class, including the drop profile mapping.

You associate a scheduler map with an interface to apply the drop profiles and other scheduler elements to traffic in the forwarding class mapped to the scheduler on that interface.

## Buffer Size

On QFX10000 switches, the buffer size is the amount of time in milliseconds of port bandwidth that a queue can use to continue to transmit packets during periods of congestion, before the buffer runs out and packets begin to drop.

The switch can use up to 100 ms total (combined) buffer space for all queues on a port. A buffer-size configured as one percent is equal to 1 ms of buffer usage. A buffer-size of 15 percent (the default value for the best effort and network control queues) is equal to 15 ms of buffer usage.

The total buffer size of the switch is 4 GB. A 40-Gigabit port can use up to 500 MB of buffer space, which is equivalent to 100 ms of port bandwidth on a 40-Gigabit port. A

10-Gigabit port can use up to 125 MB of buffer space, which is equivalent to 100 ms of port bandwidth on a 10-Gigabit port. The total buffer sizes of the eight output queues on a port cannot exceed 100 percent, which is equal to the full 100 ms total buffer available to a port. The maximum amount of buffer space any queue can use is also 100 ms (which equates to a 100 percent buffer-size configuration), but if one queue uses all of the buffer, then no other queue receives buffer space.

There is no minimum buffer allocation, so you can set the buffer-size to zero (0) for a queue. However, we recommend that on queues on which you enable PFC to support lossless transport, you allocate a minimum of 5 ms (a minimum buffer-size of 5 percent). The two default lossless queues, fcoe and no-loss, have default buffer-size values of 35 ms (35 percent).



**NOTE:** If you do not configure buffer-size and you do not explicitly configure a queue scheduler, the default buffer-size is the default transmit rate of the queue. If you explicitly configure a queue scheduler, the default buffer allocations are not used. If you explicitly configure a queue scheduler, configure the buffer-size for each queue in the scheduler, keeping in mind that the total buffer-size of the queues cannot exceed 100 percent (100 ms).

If you do not use the default configuration, you can explicitly configure the queue buffer size in either of two ways:

- As a percentage—The queue receives the specified percentage of dedicated port buffers when the queue is mapped to the scheduler and the scheduler is mapped to a port.
- As a remainder—After the port services the queues that have an explicit percentage buffer size configuration, the remaining port dedicated buffer space is divided equally among the other queues to which a scheduler is attached. (No default or explicit scheduler means no dedicated buffer allocation for the queue.) If you configure a scheduler and you do not specify a buffer size as a percentage, *remainder* is the default setting.

Queue buffer allocation is dynamic, shared among ports as needed. However, a queue cannot use more than its configured amount of buffer space. For example, if you are using the default CoS configuration, the best-effort queue receives a maximum of 15 ms of buffer space because the default transmit rate for the best-effort queue is 15 percent.

If a switch experiences congestion, queues continue to receive their full buffer allocation until 90 percent of the 4 GB buffer space is consumed. When 90 percent of the buffer space is in use, the amount of buffer space per port, per queue, is reduced in proportion to the configured buffer size for each queue. As the percentage of consumed buffer space rises above 90 percent, the amount of buffer space per port, per queue, continues to be reduced.

On 40-Gigabit ports, because the total buffer is 4 GB and the maximum buffer a port can use is 500 MB, up to seven 40-Gigabit ports can consume their full 100 ms allocation of buffer space. However, if an eighth 40-Gigabit port requires the full 500 MB of buffer

space, then the buffer allocations are proportionally reduced because the buffer consumption is above 90 percent.

On 10-Gigabit ports, because the total buffer is 4 GB and the maximum buffer a port can use is 125 MB, up to 28 10-Gigabit ports can consume their full 100 ms allocation of buffer space. However, if a 29th 10-Gigabit port requires the full 125 MB of buffer space, then the buffer allocations are proportionally reduced because the buffer consumption is above 90 percent.

## Explicit Congestion Notification

ECN enables end-to-end congestion notification between two endpoints on TCP/IP based networks. The two endpoints are an ECN-enabled sender and an ECN-enabled receiver. ECN must be enabled on both endpoints and on all of the intermediate devices between the endpoints for ECN to work properly. Any device in the transmission path that does not support ECN breaks the end-to-end ECN functionality. ECN notifies networks about congestion with the goal of reducing packet loss and delay by making the sending device decrease the transmission rate until the congestion clears, without dropping packets.

ECN is disabled by default. Normally, you enable ECN only on queues that handle best-effort traffic because other traffic types use different methods of congestion notification—lossless traffic uses priority-based flow control (PFC) and strict-high priority traffic receives all of the port bandwidth it requires up to the point of a configured rate (see [“Scheduling Priority” on page 129](#)).

## Scheduler Maps

A scheduler map maps a forwarding class to a queue scheduler. After configuring a scheduler, you must include it in a scheduler map, and apply the scheduler map to an interface to implement the configured queue scheduling.

### Related Documentation

- [Understanding Junos CoS Components on page 17](#)
- [Understanding CoS Priority Group Scheduling on page 154](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)
- [Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches on page 120](#)
- [Understanding CoS Explicit Congestion Notification on page 216](#)
- [Understanding CoS Scheduling Behavior and Configuration Considerations on page 114](#)
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Minimum Guaranteed Output Bandwidth on page 194](#)
- [Example: Configuring Maximum Output Bandwidth on page 201](#)
- [Example: Configuring Queue Scheduling Priority on page 149](#)
- [Example: Configuring Queue Schedulers for Port Scheduling on page 140](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
- [Example: Configuring WRED Drop Profiles on page 210](#)

- [Example: Configuring ECN on page 224](#)

## Defining CoS Queue Schedulers for Port Scheduling

---

Schedulers define the CoS properties of output queues. You configure CoS properties in a scheduler, then map the scheduler to a forwarding class. Forwarding classes are in turn mapped to output queues. Classifiers map incoming traffic into forwarding classes based on IEEE 802.1p, DSCP, or EXP code points. CoS scheduling properties include the amount of interface bandwidth assigned to the queue, the priority of the queue, whether explicit congestion notification (ECN) is enabled on the queue, and the WRED packet drop profiles associated with the queue.

The parameters you configure in a scheduler define the following characteristics for the queues mapped to the scheduler:

- **priority**—One of two bandwidth priorities that queues associated with a scheduler can receive:
  - **low**—The scheduler has low priority.
  - **strict-high**—The scheduler has strict-high priority. Strict-high priority queues receive preferential treatment over low-priority queues and receive all of their configured bandwidth before low-priority queues are serviced. Low-priority queues do not transmit traffic until strict-high priority queues are empty.



**NOTE:** We strongly recommend that you configure a transmit rate on all strict-high priority queues to limit the amount of traffic the switch treats as strict-high priority traffic and prevent strict-high priority queues from starving other queues on the port. This is especially important if you configure more than one strict-high priority queue on a port. If you do not configure a transmit rate to limit the amount of bandwidth strict-high priority queues can use, then the strict-high priority queues can use all of the available port bandwidth and starve other queues on the port.

The switch treats traffic in excess of the transmit rate as best-effort traffic that receives bandwidth from the leftover (excess) port bandwidth pool. On strict-high priority queues, all traffic that exceeds the transmit rate shares in the port excess bandwidth pool based on the strict-high priority excess bandwidth sharing weight of “1”, which is not configurable. The actual amount of extra bandwidth that traffic exceeding the transmit rate receives depends on how many other queues consume excess bandwidth and the excess rates of those queues.

- **transmit-rate**—Minimum guaranteed bandwidth, also known as the *committed information rate (CIR)*, set as a percentage rate or as an absolute value in bits per second. By default, the transmit rate also determines the amount of excess (extra) port bandwidth the queue can share if you do not explicitly configure an excess rate.

Extra bandwidth is allocated among the queues on the port in proportion to the transmit rate of each queue. On queues that are not strict-high priority queues, you can configure a transmit rate as **exact**, which shapes the transmission by setting the transmit rate as the maximum bandwidth the queue can consume on the port.

On strict-high priority queues, the transmit rate sets the amount of bandwidth used for strict-high priority forwarding; traffic in excess of the transmit rate is treated as best-effort traffic that receives the queue excess rate.



**NOTE:** Include the preamble bytes and interframe gap (IFG) bytes as well as the data bytes in your bandwidth calculations.

- **excess-rate**—Percentage of extra bandwidth (bandwidth that is not used by other queues) a low-priority queue can receive. If not set, the switch uses the transmit rate to determine extra bandwidth sharing. You cannot set an excess rate on a strict-high priority queue.
- **drop-profile-map**—Drop profile mapping to a packet loss priority to apply WRED to the scheduler and control packet drop for different packet loss priorities during periods of congestion.
- **buffer-size**—Size of the queue buffer as a percentage of the dedicated buffer space on the port, or as a proportional share of the dedicated buffer space on the port that remains after the explicitly configured queues are served.
- **explicit-congestion-notification**—ECN enable on a best-effort queue. ECN enables end-to-end congestion notification between two ECN-enabled endpoints on TCP/IP based networks. ECN must be enabled on both endpoints and on all of the intermediate devices between the endpoints for ECN to work properly. ECN is disabled by default.



**NOTE:** Do not configure drop profiles for the fcoe and no-loss forwarding classes. FCoE and other lossless traffic queues require lossless behavior. Use priority-based flow control (PFC) to prevent frame drop on lossless priorities.

To apply scheduling properties to traffic, map schedulers to forwarding classes using a scheduler map, and then apply the scheduler map to interfaces. Using different scheduler maps, you can map different schedulers to the same forwarding class on different interfaces, to apply different scheduling to that traffic on different interfaces.

To configure a scheduler using the CLI:

1. Name the scheduler and set the minimum guaranteed bandwidth for the queue; optionally, set a maximum bandwidth limit (shaping rate) on a low priority queue by specifying the **exact** option:

```
[edit class-of-service]
user@switch# set schedulers scheduler-name transmit-rate (rate | percent percentage)
<exact>
```

2. Set the amount of excess bandwidth a low-priority queue can share:

```
[edit class-of-service]
user@switch# set schedulers scheduler-name excess-rate percent percentage
```

3. Set the queue priority:

```
[edit class-of-service schedulers scheduler-name]
user@switch# set priority level
```

4. Specify drop profiles for packet loss priorities using a drop profile map:

```
[edit class-of-service schedulers scheduler-name]
user@switch# set drop-profile-map loss-priority (low | medium-high | high) drop-profile
drop-profile-name
```

5. Configure the size of the buffer space for the queue:

```
[edit class-of-service schedulers scheduler-name]
user@switch# set buffer-size (percent percent | remainder)
```

6. Enable ECN, if desired (on best-effort traffic only):

```
[edit class-of-service schedulers scheduler-name]
user@switch# set explicit-congestion-notification
```

7. Configure a scheduler map to map the scheduler to a forwarding class, which applies the scheduler's properties to the traffic in that forwarding class:

```
[edit class-of-service]
user@switch# set scheduler-maps scheduler-map-name forwarding-class
forwarding-class-name scheduler scheduler-name
```

8. Assign the scheduler map and its associated schedulers to one or more interfaces.

```
[edit class-of-service]
user@switch# set interfaces interface-name scheduler-map scheduler-map-name
```

#### Related Documentation

- [Example: Configuring Queue Schedulers for Port Scheduling on page 140](#)
- [Example: Configuring ECN on page 224](#)
- [Defining CoS Queue Scheduling Priority on page 148](#)
- [Configuring CoS WRED Drop Profiles on page 209](#)
- [Monitoring CoS Scheduler Maps on page 687](#)
- [Understanding CoS Port Schedulers on QFX Switches on page 125](#)
- [Understanding CoS Explicit Congestion Notification on page 216](#)

---

## Example: Configuring Queue Schedulers for Port Scheduling

Schedulers define the CoS properties of output queues. You configure CoS properties in a scheduler, then map the scheduler to a forwarding class. Forwarding classes are in turn mapped to output queues. Classifiers map incoming traffic into forwarding classes based on IEEE 802.1p, DSCP, or EXP code points. CoS scheduling properties include the amount of interface bandwidth assigned to the queue, the priority of the queue, whether explicit

congestion notification (ECN) is enabled on the queue, and the WRED packet drop profiles associated with the queue.

- [Requirements on page 141](#)
- [Overview on page 141](#)
- [Configuring a CoS Scheduler on page 143](#)
- [Verification on page 144](#)

## Requirements

This example uses the following hardware and software components:

- One switch.
- Junos OS Release 15.1X53-D10 or later for the QFX Series

## Overview

Scheduler parameters define the following characteristics for the queues mapped to the scheduler:

The parameters you configure in a scheduler define the following characteristics for the queues mapped to the scheduler:

- **priority**—One of three bandwidth priorities that queues associated with a scheduler can receive:
  - **low**—The scheduler has low priority.
  - **strict-high**—The scheduler has strict-high priority. Strict-high priority queues receive preferential treatment over low-priority queues and receive all of their configured bandwidth before low-priority queues are serviced. Low-priority queues do not transmit traffic until strict-high priority queues are empty.



**NOTE:** We strongly recommend that you configure a transmit rate on all strict-high priority queues to limit the amount of traffic the switch treats as strict-high priority traffic and prevent strict-high priority queues from starving other queues on the port. This is especially important if you configure more than one strict-high priority queue on a port. If you do not configure a transmit rate to limit the amount of bandwidth strict-high priority queues can use, then the strict-high priority queues can use all of the available port bandwidth and starve other queues on the port.

The switch treats traffic in excess of the transmit rate as best-effort traffic that receives bandwidth from the leftover (excess) port bandwidth pool. On strict-high priority queues, all traffic that exceeds the transmit rate shares in the port excess bandwidth pool based on the strict-high priority excess bandwidth sharing weight of “1”, which is not configurable. The actual amount of extra bandwidth that traffic exceeding the transmit rate receives depends on how many other queues consume excess bandwidth and the excess rates of those queues.

- **transmit-rate**—Minimum guaranteed bandwidth, also known as the *committed information rate (CIR)*, set as a percentage rate or as an absolute value in bits per second. By default, the transmit rate also determines the amount of excess (extra) port bandwidth the queue can share if you do not explicitly configure an excess rate. Extra bandwidth is allocated among the queues on the port in proportion to the transmit rate of each queue. On queues that are not strict-high priority queues, you can configure a transmit rate as **exact**, which shapes the transmission by setting the transmit rate as the maximum bandwidth the queue can consume on the port.

On strict-high priority queues, the transmit rate sets the amount of bandwidth used for strict-high priority forwarding; traffic in excess of the transmit rate is treated as best-effort traffic that receives the queue excess rate.



**NOTE:** Include the preamble bytes and interframe gap (IFG) bytes as well as the data bytes in your bandwidth calculations.

- **excess-rate**—Percentage of extra bandwidth (bandwidth that is not used by other queues) a low-priority queue can receive. If not set, the switch uses the transmit rate to determine extra bandwidth sharing. You cannot set an excess rate on a strict-high priority queue.
- **drop-profile-map**—Drop profile mapping to a packet loss priority to apply WRED to the scheduler and control packet drop for different packet loss priorities during periods of congestion.



- **buffer-size**—Size of the queue buffer as a percentage of the dedicated buffer space on the port, or as a proportional share of the dedicated buffer space on the port that remains after the explicitly configured queues are served.
- **explicit-congestion-notification**—ECN enable on a best-effort queue. ECN enables end-to-end congestion notification between two ECN-enabled endpoints on TCP/IP based networks. ECN must be enabled on both endpoints and on all of the intermediate devices between the endpoints for ECN to work properly. ECN is disabled by default.



**NOTE:** Do not configure drop profiles for the `fcoe` and `no-loss` forwarding classes. FCoE and other lossless traffic queues require lossless behavior. Use priority-based flow control (PFC) to prevent frame drop on lossless priorities.

Scheduler maps map schedulers to forwarding classes, and forwarding classes are mapped to output queues. After you configure schedulers and map them to forwarding classes in a scheduler map, you attach the scheduler map to an interface to implement the configured scheduling on output queues on that interface.

This process configures the bandwidth properties, scheduling, priority, and WRED characteristics that you map to forwarding classes (and thus to output queues) in a scheduler map.

Table 48 on page 143 shows the configuration components for this example.

**Table 48: Components of the Port Output Queue Scheduler Configuration Example**

Component	Settings
Hardware	One switch
Scheduler	Name: <b>be-sched</b> Transmit rate: <b>20%</b> Buffer size: <b>20%</b> Excess rate: <b>20%</b> Priority: <b>low</b> Drop profile: <b>be-dp</b> ECN: <b>disable</b> (default)
Scheduler map	Name: <b>be-map</b> Forwarding class to associate with the <b>be-sched</b> scheduler: <b>best-effort</b>

Configuring a CoS Scheduler

CLI Quick Configuration

To quickly configure a queue scheduler, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level:

```
[edit class-of-service]
set schedulers be-sched transmit-rate percent 20
```

```

set schedulers be-sched buffer-size percent 20
set schedulers be-sched excess-rate percent 20
set schedulers be-sched priority low
set schedulers be-sched drop-profile-map loss-priority low protocol any drop-profile be-dp
set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
set interfaces xe-0/0/7 scheduler-map be-map

```

To configure a CoS scheduler:

1. Create scheduler (**be-sched**) and map it to the drop profile **be-dp**:

```

[edit class-of-service schedulers]
user@switch# set be-sched transmit-rate percent 20
user@switch# set be-sched buffer-size percent 20
user@switch# set be-sched excess-rate percent 20
user@switch# set be-sched priority low
user@switch# set be-sched drop-profile-map loss-priority low protocol any drop-profile
be-dp

```



**NOTE:** Because ECN is disabled by default, no ECN configuration is shown.

2. Configure scheduler map (**be-map**) to associate the scheduler (**be-sched**) with the forwarding class (**best-effort**):

```

[edit class-of-service scheduler-maps]
user@switch# set be-map forwarding-class best-effort scheduler be-sched

```

3. Associate the scheduler map with an interface to apply scheduling to the best-effort forwarding class output queue:

```

[edit class-of-service]
set interfaces xe-0/0/7 scheduler-map be-map

```

## Verification

To verify that the queue scheduler has been created and is mapped to the correct interfaces, perform these tasks:

- [Verifying the Scheduler Configuration on page 144](#)
- [Verifying the Scheduler Map Configuration on page 145](#)
- [Verifying That the Scheduler Is Associated with the Interface on page 145](#)

### Verifying the Scheduler Configuration

**Purpose** Verify that the queue scheduler **be-sched** has been created with a minimum guaranteed bandwidth (**transmit-rate**) of 2 Gbps, an extra bandwidth sharing rate (**excess-rate**) of 20 percent, the priority set to **low**, and the drop profile **be-dp**.

**Action** Display the scheduler using the operational mode command **show configuration class-of-service schedulers be-sched**:

```

user@switch> show configuration class-of-service schedulers be-sched
transmit-rate percent 20;
buffer-size percent 20;
excess-rate percent 20;

```

```
priority low;  
drop-profile-map loss-priority low protocol any drop-profile be-dp;
```

### Verifying the Scheduler Map Configuration

**Purpose** Verify that the scheduler map **be-map** has been created and associates the forwarding class **best-effort** with the scheduler **be-sched**.

**Action** Display the scheduler map using the operational mode command **show configuration class-of-service scheduler-maps be-map**:

```
user@switch> show configuration class-of-service scheduler-maps be-map  
forwarding-class best-effort scheduler be-sched;
```

### Verifying That the Scheduler Is Associated with the Interface

**Purpose** Verify that the scheduler map **be-sched** is attached to interface **xe-0/0/7**.

**Action** List the interface using the operational mode command **show configuration class-of-service interfaces xe-0/0/7**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/7  
scheduler-map be-map;
```

- Related Documentation**
- [Example: Configuring WRED Drop Profiles on page 210](#)
  - [Example: Configuring ECN on page 224](#)
  - [Defining CoS Queue Schedulers for Port Scheduling on page 138](#)
  - [Monitoring CoS Scheduler Maps on page 687](#)
  - [Understanding CoS Port Schedulers on QFX Switches on page 125](#)
  - [Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches on page 120](#)

## Troubleshooting Egress Bandwidth That Exceeds the Configured Minimum Bandwidth

**Problem Description:** The guaranteed minimum bandwidth of a queue (forwarding class) or a priority group (forwarding class set) when measured at the egress port exceeds the guaranteed minimum bandwidth configured for the queue (transmit-rate) or for the priority group (guaranteed-rate).



**NOTE:** On switches that support enhanced transmission selection (ETS) hierarchical scheduling, the switch allocates guaranteed minimum bandwidth first to a priority group using the guaranteed rate setting in the traffic control profile, and then allocates priority group minimum guaranteed bandwidth to forwarding classes in the priority group using the transmit rate setting in the queue scheduler.

On switches that support direct port scheduling, there is no scheduling hierarchy. The switch allocates port bandwidth to forwarding classes directly, using the transmit rate setting in the queue scheduler.

In this topic, if you are using direct port scheduling on your switch, ignore the references to priority groups and forwarding class sets (priority groups and forwarding class sets are only used for ETS hierarchical port scheduling). For direct port scheduling, only the transmit rate queue scheduler setting can cause the issue described in this topic.

**Cause** When you configure bandwidth for a queue or a priority group, the switch accounts for the configured bandwidth as data only. The switch does not include the preamble and the interframe gap (IFG) associated with frames, so the switch does not account for the bandwidth consumed by the preamble and the IFG in its minimum bandwidth calculations.

The measured egress bandwidth can exceed the configured minimum bandwidth when small packet sizes (64 or 128 bytes) are transmitted because the preamble and the IFG are a larger percentage of the total traffic. For larger packet sizes, the preamble and IFG overhead are a small portion of the total traffic, and the effect on egress bandwidth is minor.



**NOTE:** For ETS, the sum of the queue transmit rates in a priority group should not exceed the guaranteed rate for the priority group. (You cannot guarantee a minimum bandwidth for the queues that is greater than the minimum bandwidth guaranteed for the entire set of queues.)

For port scheduling, the sum of the queue transmit rates should not exceed the port bandwidth.

**Solution** When you calculate the bandwidth requirements for queues and priority groups on which you expect a significant amount of traffic with small packet sizes, consider the transmit rate and the guaranteed rate as the minimum bandwidth for the data only. Add sufficient bandwidth to your calculations to account for the preamble and IFG so that the port bandwidth is sufficient to handle the combined minimum data rate and the preamble and IFG.

If the minimum bandwidth measured at the egress port exceeds the amount of bandwidth that you want to allocate to a queue or to a priority group, reduce the transmit rate for that queue and reduce the guaranteed rate of the priority group that contains the queue.

- Related Documentation**
- [transmit-rate on page 513](#)
  - [Example: Configuring Minimum Guaranteed Output Bandwidth on page 194](#)

## **Troubleshooting Egress Bandwidth That Exceeds the Configured Maximum Bandwidth**

**Problem**    **Description:** The maximum bandwidth of a queue when measured at the egress port exceeds the maximum bandwidth rate shaper (**shaping-rate** statement on QFX5200, QFX5100, EX4600, QFX3500, QFX3600, and OCX1100 switches, and on QFabric systems, and **transmit-rate (rate | percentage percent exact** statement on QFX10000 switches) configured for the queue.

**Cause**    When you configure bandwidth for a queue (forwarding class) or a priority group (forwarding class set), the switch accounts for the configured bandwidth as data only. The switch does not rate-shape the preamble and the interframe gap (IFG) associated with frames, so the switch does not account for the bandwidth consumed by the preamble and the IFG in its maximum bandwidth calculations.

The measured egress bandwidth can exceed the configured maximum bandwidth when small packet sizes (64 or 128 bytes) are transmitted because the preamble and the IFG are a larger percentage of the total traffic. For larger packet sizes, the preamble and IFG overhead are a small portion of the total traffic, and the effect on egress bandwidth is minor.

**Solution**    When you calculate the bandwidth requirements for queues on which you expect a significant amount of traffic with small packet sizes, consider the shaping rate as the maximum bandwidth for the data only. Add sufficient bandwidth to your calculations to account for the preamble and IFG so that the port bandwidth is sufficient to handle the combined maximum data rate (shaping rate) and the preamble and IFG.

If the maximum bandwidth measured at the egress port exceeds the amount of bandwidth that you want to allocate to the queue, reduce the shaping rate for that queue.

## Defining CoS Queue Scheduling Priority

---

You can configure the scheduling priority of individual queues by specifying the priority in a scheduler, and then associating the scheduler with a queue by using a scheduler map.



**NOTE:** By default, all queues are low priority queues.

The switch services low priority queues after servicing any queue that has strict-high priority traffic. Strict-high priority queues receive preferential treatment over all other queues and receive all of their configured bandwidth before other queues are serviced. Low-priority queues do not transmit traffic until strict-high priority queues are empty, and receive the bandwidth that remains after the strict-high queues have been serviced.

Different switches handle traffic configured as **strict-high** priority traffic in different ways:

- QFX5100, QFX5200, QFX3500, QFX3600, and EX4600 switches, and QFabric systems—You can configure only one queue as a strict-high priority queue.

On these switches, we recommend that you always apply a shaping rate to strict-high priority queues to prevent them from starving other queues. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.

- QFX10000 switches—You can configure as many queues as you want as strict-high priority. However, keep in mind that too much strict-high priority traffic can starve low priority queues on the port.



**NOTE:** We strongly recommend that you configure a transmit rate on all strict-high priority queues to limit the amount of traffic the switch treats as strict-high priority traffic and prevent strict-high priority queues from starving other queues on the port. This is especially important if you configure more than one strict-high priority queue on a port. If you do not configure a transmit rate to limit the amount of bandwidth strict-high priority queues can use, then the strict-high priority queues can use all of the available port bandwidth and starve other queues on the port.

The switch treats traffic in excess of the transmit rate as best-effort traffic that receives bandwidth from the leftover (excess) port bandwidth pool. On strict-high priority queues, all traffic that exceeds the transmit rate shares in the port excess bandwidth pool based on the strict-high priority excess bandwidth sharing weight of “1”, which is not configurable. The actual amount of extra bandwidth that traffic exceeding the transmit rate receives depends on how many other queues consume excess bandwidth and the excess rates of those queues.

- To configure queue priority using the CLI:

```
[edit class-of-service]
user@switch# set schedulers scheduler-name priority level
```

**Related  
Documentation**

- [Example: Configuring Queue Scheduling Priority on page 149](#)
- [Monitoring CoS Scheduler Maps on page 687](#)

---

## Example: Configuring Queue Scheduling Priority

You can configure the bandwidth scheduling priority of individual queues by specifying the priority in a scheduler, and then using a scheduler map to associate the scheduler with a queue.

- [Requirements on page 149](#)
- [Overview on page 149](#)
- [Configuring Queue Scheduling Priority on page 151](#)
- [Verification on page 152](#)

### Requirements

This example uses the following hardware and software components:

- One switch.
- Junos OS Release 11.1 or later for the QFX Series or Junos OS Release 14.1X53-D20 or later for the OCX Series.

### Overview

Queues can have one of several bandwidth priorities:

- **strict-high**—Strict-high priority allocates bandwidth to the queue before any other queue receives bandwidth. Other queues receive the bandwidth that remains after the strict-high queue has been serviced. On QFX10000 switches, you can configure as many queues as you want as strict-high priority queues. On QFX5200, QFX5100, QFX3500, QFX3600, and EX4600 switches and on QFabric systems, you can configure only one queue as a strict-high queue.



**NOTE:** On QFX5200 switches, it is not possible to support multiple queues with strict-high priority because QFX5200 doesn't support flexible hierarchical scheduling. When multiple strict-high priority queues are configured, all of those queues are treated as strict-high priority but the higher number queue among them is given highest priority.

On QFX10000 switches, if you configure strict-high priority queues on a port, we strongly recommend that you configure a transmit rate on those queues. The transmit rate sets the amount of traffic that the switch forwards as strict-high priority; traffic in excess of the transmit rate is treated as best-effort traffic that receives the queue excess rate.

Even if you configure only one strict-high priority queue, we strongly recommend that you configure a transmit rate for the queue to prevent it from starving other queues. If you do not configure a transmit rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.

On QFX5200, QFX5100, QFX3500, QFX3600, and EX4600 switches and on QFabric systems, we recommend that you always apply a shaping rate to strict-high priority queues to prevent them from starving other queues. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.



**NOTE:** On switches that support enhanced transmission selection (ETS) hierarchical scheduling, if you use ETS and you configure a strict-high priority queue, you must create an fc-set that is dedicated only to strict-high priority traffic. Only one fc-set can contain strict-high priority queue. Queues that are not strict-high priority cannot belong to the same fc-set as strict-high priority queues.

On switches that use different output queues for unicast and multidestination traffic, the multidestination fc-set cannot contain strict-high priority queues.

- **low**—Low priority. Traffic with low priority is serviced after any queue that has a strict-high priority.



**NOTE:** By default, all queues are low priority queues.

Table 49 on page 150 shows the configuration components for this example.

This example describes how to set the queue priority for two forwarding classes (queues) named **fcoe** and **no-loss**. Both queues have a priority of **low**. The scheduler for the **fcoe** queue is named **fcoe-sched** and the scheduler for the **no-loss** queue is named **nl-sched**. One scheduler map, **schedmap1**, associates the schedulers to the queues.

**Table 49: Components of the Queue Scheduler Priority Configuration Example**

Component	Settings
Hardware	One switch
Schedulers	<b>fcoe-sched</b> for FCoE traffic <b>nl-sched</b> for no-loss traffic
Priority	<b>low</b> for FCoE traffic <b>low</b> for no-loss traffic



Table 49: Components of the Queue Scheduler Priority Configuration Example (*continued*)

Component	Settings
Scheduler map	<b>schedmap1:</b>  FCoE mapping: scheduler <b>fcoe-sched</b> to forwarding class <b>fcoe</b>  No-loss mapping: scheduler <b>nl-sched</b> to forwarding class <b>no-loss</b>



**NOTE:** OCX Series switches do not support lossless transport. On OCX Series switches, the default DSCP classifier does not map traffic to the default fcoe and no-loss forwarding classes. On an OCX Series switch, you could use this example by substituting other forwarding classes (for example, best-effort or network-control) for the fcoe and no-loss forwarding classes, and naming the schedulers appropriately. The active forwarding classes (**best-effort**, **network-control**, and **mcast**) share the unused bandwidth assigned to the fcoe and no-loss forwarding classes.

## Configuring Queue Scheduling Priority

**CLI Quick Configuration** To quickly configure queue scheduling priority, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level:

```
[edit class-of-service]
set schedulers fcoe-sched priority low
set schedulers nl-sched priority low
set scheduler-maps schedmap1 forwarding-class fcoe scheduler fcoe-sched
set scheduler-maps schedmap1 forwarding-class no-loss scheduler nl-sched
```

To configure queue priority using the CLI:

1. Create the FCoE scheduler with **low** priority:

```
[edit class-of-service]
user@switch# set schedulers fcoe-sched priority low
```

2. Create the no-loss scheduler with **low** priority:

```
[edit class-of-service]
user@switch# set schedulers nl-sched priority low
```

3. Associate the schedulers with the desired queues in the scheduler map:

```
[edit class-of-service]
user@switch# set scheduler-maps schedmap1 forwarding-class fcoe scheduler fcoe-sched
user@switch# set scheduler-maps schedmap1 forwarding-class no-loss scheduler nl-sched
```

## Verification

To verify that you configured the queue scheduling priority for bandwidth and mapped the schedulers to the correct forwarding classes, perform these tasks:

- [Verifying the Queue Scheduling Priority on page 152](#)
- [Verifying the Scheduler-to-Forwarding-Class Mapping on page 152](#)

---

### Verifying the Queue Scheduling Priority

**Purpose** Verify that you configured the queue schedulers **fcoe-sched** and **nl-sched** with **low** queue scheduling priority.

**Action** Display the **fcoe-sched** scheduler priority configuration using the operational mode command **show configuration class-of-service schedulers fcoe-sched priority**:

```
user@switch> show configuration class-of-service schedulers fcoe-sched priority
priority low;
```

Display the **nl-sched** scheduler priority configuration using the operational mode command **show configuration class-of-service schedulers nl-sched priority**:

```
user@switch> show configuration class-of-service schedulers nl-sched priority
priority low;
```

---

### Verifying the Scheduler-to-Forwarding-Class Mapping

**Purpose** Verify that you configured the scheduler map **schedmap1** to map scheduler **fcoe-sched** to forwarding class **fcoe** and schedule **nl-sched** to forwarding class **no-loss**.

**Action** Display the scheduler map **schedmap1** using the operational mode command **show configuration class-of-service scheduler-maps schedmap1**:

```
user@switch> show configuration class-of-service scheduler-maps schedmap1
forwarding-class fcoe scheduler fcoe-sched;
forwarding-class no-loss scheduler nl-sched;
```

**Related Documentation**

- [Defining CoS Queue Scheduling Priority on page 148](#)
- [Monitoring CoS Scheduler Maps on page 687](#)

## Understanding CoS Traffic Control Profiles

---

A traffic control profile defines the output bandwidth and scheduling characteristics of forwarding class sets (priority groups). The forwarding classes (which are mapped to output queues) that belong to a forwarding class set (fc-set) share the bandwidth that you assign to the fc-set in the traffic control profile.

This two-tier hierarchical scheduling architecture provides flexibility in allocating resources among forwarding classes, and also:

- Assigns a portion of port bandwidth to an fc-set. You define the port resources for the fc-set in a traffic control profile.
- Allocates fc-set bandwidth among the forwarding classes (queues) that belong to the fc-set. A scheduler map attached to the traffic control profile defines the amount of the fc-set's resources that each forwarding class can use.

Attaching an fc-set and a traffic control profile to a port defines the hierarchical scheduling properties of the group and the forwarding classes that belong to the group.

The ability to create fc-sets supports enhanced transmission selection (ETS), which is described in IEEE 802.1Qaz. When an fc-set does not use its allocated port bandwidth, ETS shares the excess port bandwidth among other fc-sets on the port in proportion to their guaranteed minimum bandwidth (guaranteed rate). This utilizes the port bandwidth better than scheduling schemes that reserve bandwidth for groups even if that bandwidth is not used. ETS shares unused port bandwidth, so traffic groups that need extra bandwidth can use it if the bandwidth is available, while preserving the ability to specify the minimum guaranteed bandwidth for traffic groups.

Traffic control profiles define the following CoS properties for fc-sets:

- Minimum guaranteed bandwidth—Also known as the *committed information rate (CIR)*. This is the minimum amount of port bandwidth the priority group receives. Priorities in the priority group receive their minimum guaranteed bandwidth as a portion of the priority group's minimum guaranteed bandwidth. The **guaranteed-rate** statement defines the minimum guaranteed bandwidth.



**NOTE:** You cannot apply a traffic control profile with a minimum guaranteed bandwidth to a priority group that includes strict-high priority queues.

- Shared excess (extra) bandwidth—When the priority groups on a port do not consume the full amount of bandwidth allocated to them or there is unallocated link bandwidth available, priority groups can contend for that extra bandwidth if they need it. Priorities in the priority group contend for extra bandwidth as a portion of the priority group's extra bandwidth. The amount of extra bandwidth for which a priority group can contend is proportional to the priority group's guaranteed minimum bandwidth (guaranteed rate).

- Maximum bandwidth—Also known as *peak information rate (PIR)*. This is the maximum amount of port bandwidth the priority group receives. Priorities in the priority group receive their maximum bandwidth as a portion of the priority group's maximum bandwidth. The **shaping-rate** statement defines the maximum bandwidth.
- Queue scheduling—Each traffic control profile includes a scheduler map. The scheduler map maps forwarding classes (priorities) to schedulers to define the scheduling characteristics of the individual forwarding classes in the fc-set. The resources scheduled for each forwarding class represent portions of the resources that the traffic control profile schedules for the entire fc-set, not portions of the total link bandwidth. The **scheduler-maps** statement defines the mapping of forwarding classes to schedulers.

**Related Documentation**

- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
- [Defining CoS Traffic Control Profiles \(Priority Group Scheduling\) on page 157](#)

---

## Understanding CoS Priority Group Scheduling

---

Priority group scheduling defines the class-of-service (CoS) properties of a group of output queues (priorities). Priority group scheduling works with output queue scheduling to create a two-tier hierarchical scheduler. The hierarchical scheduler allocates bandwidth to a group of queues (a priority group, called a forwarding class set in Junos OS configuration). Queue scheduling determines the portion of the priority group bandwidth that the particular queue can use.

You configure priority group scheduling in a traffic control profile and then associate the traffic control profile with a forwarding class set and an interface. You attach a scheduler map to the traffic control profile to specify the queue scheduling characteristics.



**NOTE:** When you configure bandwidth for a queue or a priority group, the switch considers only the data as the configured bandwidth. The switch does not account for the bandwidth consumed by the preamble and the interframe gap (IFG). Therefore, when you calculate and configure the bandwidth requirements for a queue or for a priority group, consider the preamble and the IFG as well as the data in the calculations.

- 
- [Priority Group Scheduling Components on page 155](#)
  - [Default Traffic Control Profile on page 155](#)
  - [Guaranteed Rate \(Minimum Guaranteed Bandwidth\) on page 155](#)
  - [Sharing Extra Bandwidth on page 156](#)
  - [Shaping Rate \(Maximum Bandwidth\) on page 156](#)
  - [Scheduler Maps on page 156](#)

## Priority Group Scheduling Components

[Table 50 on page 155](#) provides a quick reference to the traffic control profile components you can configure to determine the bandwidth properties of priority groups, and [Table 51 on page 155](#) provides a quick reference to some related scheduling configuration components.

**Table 50: Priority Group Scheduler Components**

Traffic Control Profile Component	Description
Guaranteed rate	Sets the minimum guaranteed port bandwidth for the priority group. Extra port bandwidth is shared among priority groups in proportion to the guaranteed rate of each priority group on the port.
Shaping rate	Sets the maximum port bandwidth the priority group can consume.
Scheduler map	Maps schedulers to queues (forwarding classes, also called priorities). This determines the portion of the priority group bandwidth that a queue receives.

**Table 51: Other Scheduling Components**

Other Scheduling Components	Description
Forwarding class	Maps traffic to a queue (priority).
Forwarding class set	Name of a priority group. You map forwarding classes to priority groups. A forwarding class set consists of one or more forwarding classes.
Scheduler	Sets the bandwidth and scheduling priority of individual queues (forwarding classes).

## Default Traffic Control Profile

There is no default traffic control profile.

### Guaranteed Rate (Minimum Guaranteed Bandwidth)

The guaranteed rate determines the minimum guaranteed bandwidth for each priority group. It also determines how much excess (extra) port bandwidth the priority group can share; each priority group shares extra port bandwidth in proportion to its guaranteed rate. You specify the rate in bits per second as a fixed value such as 3 Mbps or as a percentage of the total port bandwidth.

The minimum transmission bandwidth can exceed the configured rate if additional bandwidth is available from other priority groups on the port. In case of congestion, the configured guaranteed rate is guaranteed for the priority group. This property enables you to ensure that each priority group receives the amount of bandwidth appropriate to its level of service.



**NOTE:** Configuring the minimum guaranteed bandwidth (transmit rate) for a forwarding class does not work unless you also configure the minimum guaranteed bandwidth (guaranteed rate) for the forwarding class set in the traffic control profile.

Additionally, the sum of the transmit rates of the queues in a forwarding class set should not exceed the guaranteed rate for the forwarding class set. (You cannot guarantee a minimum bandwidth for the queues that is greater than the minimum bandwidth guaranteed for the entire set of queues.)

You cannot configure a guaranteed rate for forwarding class sets that include strict-high priority queues.

---

## Sharing Extra Bandwidth

Extra bandwidth is available to priority groups when the priority groups do not use the full amount of available port bandwidth. This extra port bandwidth is shared among the priority groups based on the minimum guaranteed bandwidth of each priority group.

For example, Port A has three priority groups: fc-set-1, fc-set-2, and fc-set-3. Fc-set-1 has a guaranteed rate of 2 Gbps, fc-set-2 has a guaranteed rate of 2 Gbps, and fc-set-3 has a guaranteed rate of 4 Gbps. After servicing the minimum guaranteed bandwidth of these priority groups, the port has an extra 2 Gbps of available bandwidth, and all three priority groups have still have packets to forward. The priority groups receive the extra bandwidth in proportion to their guaranteed rates, so fc-set-1 receives an extra 500 Mbps, fc-set-2 receives an extra 500 Mbps, and fc-set-3 receives an extra 1 Gbps.

## Shaping Rate (Maximum Bandwidth)

The shaping rate determines the maximum bandwidth the priority group can consume. You specify the rate in bits per second as a fixed value such as 5 Mbps or as a percentage of the total port bandwidth.

The maximum bandwidth for a priority group depends on the total bandwidth available on the port and how much bandwidth the other priority groups on the port consume.

## Scheduler Maps

A scheduler map maps schedulers to queues. When you associate a scheduler map with a traffic control profile, then associate the traffic control profile with an interface and a forwarding class set, the scheduling defined by the scheduler map determines the portion of the priority group resources that each individual queue can use.

You can associate up to four user-defined scheduler maps with traffic control profiles.

### Related Documentation

- [Understanding Junos CoS Components on page 17](#)
- [Understanding CoS Output Queue Schedulers](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)
- [Understanding CoS Scheduling Behavior and Configuration Considerations on page 114](#)

- [Understanding CoS Scheduling on QFabric System Node Device Fabric \(fte\) Ports](#)
- [Understanding Default CoS Scheduling on QFabric System Interconnect Devices \(Junos OS Release 13.1 and Later Releases\)](#)
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Minimum Guaranteed Output Bandwidth on page 194](#)
- [Example: Configuring Maximum Output Bandwidth on page 201](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
- [Example: Configuring WRED Drop Profiles](#)
- [Example: Configuring Drop Profile Maps on page 213](#)

## Defining CoS Traffic Control Profiles (Priority Group Scheduling)

---

A traffic control profile defines the output bandwidth and scheduling characteristics of forwarding class sets (priority groups). The forwarding classes (which are mapped to output queues) contained in a forwarding class set (fc-set) share the bandwidth resources that you configure in the traffic control profile. A scheduler map associates forwarding classes with schedulers to define how the individual forwarding classes that belong to an fc-set share the bandwidth allocated to that fc-set.

The parameters you configure in a traffic control profile define the following characteristics for the fc-set:

- **guaranteed-rate**—Minimum bandwidth, also known as the *committed information rate (CIR)*. The guaranteed rate also determines the amount of excess (extra) port bandwidth that the fc-set can share. Extra port bandwidth is allocated among the fc-sets on a port in proportion to the guaranteed rate of each fc-set.



**NOTE:** You cannot configure a guaranteed rate for a fc-set that includes strict-high priority queues. If the traffic control profile is for an fc-set that contains strict-high priority queues, do not configure a guaranteed rate.

- **shaping-rate**—Maximum bandwidth, also known as the *peak information rate (PIR)*.
- **scheduler-map**—Bandwidth and scheduling characteristics for the queues, defined by mapping forwarding classes to schedulers. (The queue scheduling characteristics represent amounts or percentages of the fc-set bandwidth, not the amounts or percentages of total link bandwidth.)



**NOTE:** Because a port can have more than one fc-set, when you assign resources to an fc-set, keep in mind that the total port bandwidth must serve all of the queues associated with that port.

To configure a traffic control profile using the CLI:

1. Name the traffic control profile and define the minimum guaranteed bandwidth for the fc-set:

```
[edit class-of-service ]
user@switch# set traffic-control-profiles traffic-control-profile-name guaranteed-rate (rate
| percent percentage)
```

2. Define the maximum bandwidth for the fc-set:

```
[edit class-of-service traffic-control-profiles traffic-control-profile-name]
user@switch# set shaping-rate (rate | percent percentage)
```

3. Attach a scheduler map to the traffic control profile:

```
[edit class-of-service traffic-control-profiles traffic-control-profile-name]
user@switch# set scheduler-map scheduler-map-name
```

#### Related Documentation

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
- [Example: Configuring Minimum Guaranteed Output Bandwidth on page 194](#)
- [Example: Configuring Maximum Output Bandwidth on page 201](#)
- [Defining CoS Queue Schedulers](#)
- [Understanding CoS Traffic Control Profiles on page 153](#)

---

## Example: Configuring Traffic Control Profiles (Priority Group Scheduling)

---

A traffic control profile defines the output bandwidth and scheduling characteristics of forwarding class sets (priority groups). The forwarding classes (queues) mapped to a forwarding class set share the bandwidth resources that you configure in the traffic control profile. A scheduler map associates forwarding classes with schedulers to define how the individual queues in a forwarding class set share the bandwidth allocated to that forwarding class set.

- [Requirements on page 158](#)
- [Overview on page 159](#)
- [Configuring a Traffic Control Profile on page 160](#)
- [Verification on page 160](#)

### Requirements

This example uses the following hardware and software components:

- A Juniper Networks QFX3500 Switch
- Junos OS Release 11.1 or later for the QFX Series



## Overview

The parameters you configure in a traffic control profile define the following characteristics for the priority group:

- **guaranteed-rate**—Minimum bandwidth, also known as the *committed information rate (CIR)*. Each fc-set receives a minimum of either the configured amount of absolute bandwidth or the configured percentage of bandwidth. The guaranteed rate also determines the amount of excess (extra) port bandwidth that the fc-set can share. Extra port bandwidth is allocated among the fc-sets on a port in proportion to the guaranteed rate of each fc-set.



**NOTE:** In order for the **transmit-rate** option (minimum bandwidth for a queue that you set using scheduler configuration) to work properly, you must configure the **guaranteed-rate** for the fc-set. If an fc-set does not have a guaranteed minimum bandwidth, the forwarding classes that belong to the fc-set cannot have a guaranteed minimum bandwidth.



**NOTE:** Include the preamble bytes and interframe gap bytes as well as the data bytes in your bandwidth calculations.

- **shaping-rate**—Maximum bandwidth, also known as the *peak information rate (PIR)*. Each fc-set receives a maximum of the configured amount of absolute bandwidth or the configured percentage of bandwidth, even if more bandwidth is available.



**NOTE:** Include the preamble bytes and interframe gap bytes as well as the data bytes in your bandwidth calculations.

- **scheduler-map**—Bandwidth and scheduling characteristics for the queues, defined by mapping forwarding classes to schedulers. (The queue scheduling characteristics represent amounts or percentages of the fc-set bandwidth, not the amounts or percentages of total link bandwidth.)



**NOTE:** Because a port can have more than one fc-set, when you assign resources to an fc-set, keep in mind that the total port bandwidth must serve all of the queues associated with that port.

For example, if you map three fc-sets to a 10-Gigabit Ethernet port, the queues associated with all three of the fc-sets share the 10-Gbps bandwidth as defined by the traffic control profiles. Therefore, the total combined **guaranteed-rate** value of the three fc-sets should not exceed 10 Gbps. If you configure guaranteed rates whose sum exceeds the port bandwidth, the system sends a syslog message to notify you that the configuration is not valid. However, the system does not perform a commit check. If you commit a configuration in which the sum of the guaranteed rates exceeds the port bandwidth, the hierarchical scheduler behaves unpredictably.

The sum of the forwarding class (queue) transmit rates cannot exceed the total **guaranteed-rate** of the fc-set to which the forwarding classes belong. If you configure transmit rates whose sum exceeds the fc-set guaranteed rate, the commit check fails and the system rejects the configuration.

If you configure the **guaranteed-rate** of an fc-set as a percentage, configure all of the transmit rates associated with that fc-set as percentages. In this case, if any of the transmit rates are configured as absolute values instead of percentages, the configuration is not valid and the system sends a syslog message.

---

## Configuring a Traffic Control Profile

This example describes how to configure a traffic control profile named **san-tcp** with a scheduler map named **san-map1** and allocate to it a minimum bandwidth of 4 Gbps and a maximum bandwidth of 8 Gbps:

1. Create the traffic control profile and set the **guaranteed-rate** (minimum guaranteed bandwidth) to **4g**:

```
[edit class-of-service]
user@switch# set traffic-control-profiles san-tcp guaranteed-rate 4g
```

2. Set the **shaping-rate** (maximum guaranteed bandwidth) to **8g**:

```
[edit class-of-service]
user@switch# set traffic-control-profiles san-tcp shaping-rate 8g
```

3. Associate the scheduler map **san-map1** with the traffic control profile:

```
[edit class-of-service]
user@switch# set traffic-control-profiles san-tcp scheduler-map san-map1
```

## Verification

---

### Verifying the Traffic Control Profile Configuration

**Purpose** Verify that you created the traffic control profile **san-tcp** with a minimum guaranteed bandwidth of 4 Gbps, a maximum bandwidth of 8 Gbps, and the scheduler map **san-map1**.

**Action** List the traffic control profile using the operational mode command **show configuration class-of-service traffic-control-profiles san-tcp**:

```
user@switch> show configuration class-of-service traffic-control-profiles san-tcp
scheduler-map san-map1;
shaping-rate percent 8g;
guaranteed-rate 4g;
```

**Related  
Documentation**

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Minimum Guaranteed Output Bandwidth on page 194](#)
- [Example: Configuring Maximum Output Bandwidth on page 201](#)
- [Example: Configuring Queue Schedulers](#)
- [Defining CoS Traffic Control Profiles \(Priority Group Scheduling\) on page 157](#)
- [Understanding CoS Traffic Control Profiles on page 153](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)

---

## Understanding CoS Hierarchical Port Scheduling (ETS)

Scheduling defines the class-of-service (CoS) properties of output queues. Output queues are mapped to forwarding classes. CoS scheduler properties include the amount of interface bandwidth assigned to the queue, the queue priority, and the drop profiles associated with the queue.

Hierarchical port scheduling is a two-tier process that provides better port bandwidth utilization and greater flexibility to allocate resources to queues (forwarding classes) and to groups of queues (forwarding class sets). Hierarchical scheduling includes the Junos OS implementation of enhanced transmission selection (ETS), as described in IEEE 802.1Qaz.



Video: [What is Enhanced Transmission Selection?](#)

This topic describes:

- [Hierarchical Scheduling Tiers on page 161](#)
- [Hierarchical Scheduling and ETS on page 162](#)
- [ETS Advertisement in DCBX on page 164](#)
- [Hierarchical Scheduling Process on page 164](#)
- [Strict-High Priority Queues and Hierarchical Scheduling on page 165](#)
- [Default Hierarchical Scheduling on page 166](#)

### Hierarchical Scheduling Tiers

The two tiers used in hierarchical scheduling are priorities and priority groups, as shown in [Table 52 on page 162](#).

Table 52: Hierarchical Scheduling Tiers

Junos OS Configuration Construct	Equivalent ETS Construct	Description
Forwarding class	Priority	<p>Think about priorities (forwarding classes) as output queues. You map forwarding classes to queues, so each forwarding class represents an output queue.</p> <p>When you use a classifier to map a forwarding class to an IEEE 802.1p code point, the code point identifies that traffic's priority for priority-based flow control (PFC). Thus the forwarding class, the queue mapped to the forwarding class, and the priority (code point) mapped to the forwarding class all identify the same traffic.</p> <p><b>NOTE:</b> OCX Series switches do not support lossless transport or PFC.</p>
Forwarding class set	Priority group	<p>Priority groups (forwarding class sets) are groups of priorities (forwarding classes). Forwarding class membership in a forwarding class set defines the priority group to which each priority belongs.</p> <p>You can configure up to three unicast priority groups and one multicast priority group.</p>

You apply scheduling properties to each hierarchical scheduling tier as described in the next section.



**NOTE:** If you explicitly configure one or more priority groups on an interface, any priority (forwarding class) that is not assigned to a priority group (forwarding class set) on that interface is assigned to an automatically generated default priority group and receives *no bandwidth*. This means that if you configure hierarchical scheduling on an interface, every forwarding class that you want to forward traffic on that interface must belong to a forwarding class set.



**NOTE:** On OCX Series switches, by default, classifiers use DSCP code points to map traffic to forwarding classes. However, hierarchical scheduling works in the same manner as when you use IEEE 802.1p code points to classify traffic. The OCX Series classifies traffic into forwarding classes based on DSCP code points, the forwarding classes are mapped to forwarding class sets, and you apply scheduling properties to each of the two tiers.


## Hierarchical Scheduling and ETS

Two-tier hierarchical scheduling manages bandwidth efficiently by enabling you to define the CoS properties for each priority group and for each priority. The first tier of the hierarchical scheduler allocates port bandwidth to a priority group. The second tier of

the hierarchical scheduler determines the portion of the priority group bandwidth that a priority (queue) can use.

The CoS properties of a priority group define the amount of port bandwidth resources available to the queues in that priority group. The CoS properties you configure for each queue specify the amount of the bandwidth available to the queue from the bandwidth allocated to the priority group. [Figure 11 on page 163](#) shows the relationship of port resource allocation to priority groups, and priority group resource allocation to queues (priorities).

**Figure 11: Hierarchical Scheduling Tiers**

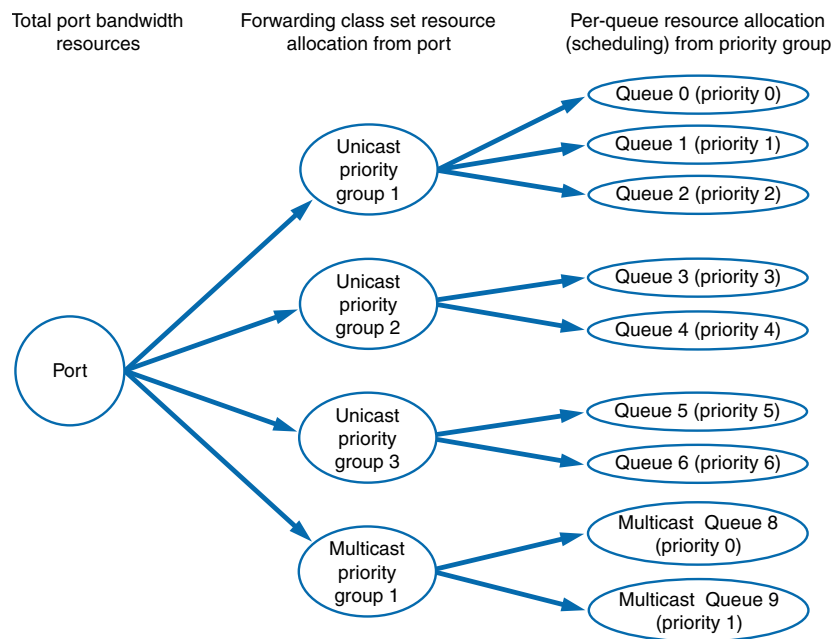

9040722

If a queue (priority) does not use its allocated bandwidth, ETS shares the unused bandwidth among the other queues in the priority group in proportion to the minimum guaranteed rate (transmit rate) scheduled for each queue. If a priority group does not use its allocated bandwidth, ETS shares the unused bandwidth among the priority groups on the port in proportion to the minimum guaranteed rate (guaranteed rate) scheduled for each priority group.

In this way, ETS improves link bandwidth utilization, and it provides each queue and each priority group with the maximum available bandwidth. For example, priorities that consist of bursty traffic can share bandwidth during periods of low traffic transmission, instead of reserving their entire bandwidth allocation when traffic loads are light. All Juniper switches use ETS scheduling, except for QFX5200 and the QFX10000 switches.



**NOTE:** The available link bandwidth is the bandwidth remaining after servicing strict-high priority flows. Strict-high priority takes precedence over all other traffic (we recommend that you configure a shaping rate to limit the maximum amount of bandwidth that a strict-high priority forwarding class can use to prevent starving other queues).

## ETS Advertisement in DCBX

When you configure hierarchical scheduling on a port, Data Center Bridging Capability Exchange protocol (DCBX) advertises:

- Each priority group
- The priorities in each priority group
- The bandwidth properties of each priority group and priority

When you configure hierarchical scheduling on a port, any priority that is not part of an explicitly configured priority group is assigned to the automatically generated default priority group and receives no bandwidth. The default priority group is transparent. It does not appear in the configuration.



**NOTE:** OCX Series switches do support DCBX, so hierarchical scheduling information is not exchanged with connected peers on OCX Series switches.

## Hierarchical Scheduling Process

Hierarchical scheduling consists of multiple configuration steps that create the priorities and the priority groups, schedule their resources, and assign them to interfaces. The steps below correspond to the six blocks in the packet flow diagram shown in [Figure 12 on page 165](#):


1. Packet classification:
  - Configure classification of incoming traffic into forwarding classes (priorities). This consists of either using the default classifiers or configuring classifiers to map code points and loss priorities to the forwarding classes.
  - Apply the classifiers to ingress interfaces or use the default classifiers. Applying a classifier to an interface groups incoming traffic on the interface into forwarding classes and loss priorities, by applying the classifier code point mapping to the incoming traffic.
2. Configure the output queues for the forwarding classes (priorities). This consists of either using the default forwarding classes and forwarding-class-to-queue mapping, or creating your own forwarding classes and mapping them to output queues.
3. Allocate resources to the forwarding classes:
  - Define resources for the priorities. This consists of configuring schedulers to set minimum guaranteed bandwidth, maximum bandwidth, drop profiles for Weighted Random Early Detection (WRED), and bandwidth priority to apply to a forwarding class. Extra bandwidth is shared among queues in proportion to the minimum guaranteed bandwidth (transmit rate) of each queue.
  - Map resources to priorities. This consists of mapping forwarding classes to schedulers, using a scheduler map.

4. Configure priority groups. This consists of mapping forwarding classes (priorities) to forwarding class sets (priority groups) to define the priorities that belong to each priority group.
5. Define resources for the priority groups. This consists of configuring traffic control profiles to set minimum guaranteed bandwidth (guaranteed rate) and maximum bandwidth (shaping rate) for a priority group. Traffic control profiles also specify a scheduler map, which defines the resources (schedulers) mapped to the priorities in the priority group. Extra port bandwidth is shared among priority groups in proportion to the minimum guaranteed bandwidth of each priority group.

The traffic control profile bandwidth settings determine the port resources available to the priority group. The schedulers specified in the scheduler map determine the amount of priority group resources that each priority receives.

6. Apply hierarchical scheduling to a port. This consists of attaching one or more priority groups (forwarding class sets) to an interface. For each priority group, you also attach a traffic control profile, which contains the scheduling properties of the priority group and the priorities in the priority group. Different priority groups on the same port can use different traffic control profiles, which provides fine tuned control of scheduling for each queue on each interface.

Figure 12: Hierarchical Scheduling Packet Flow

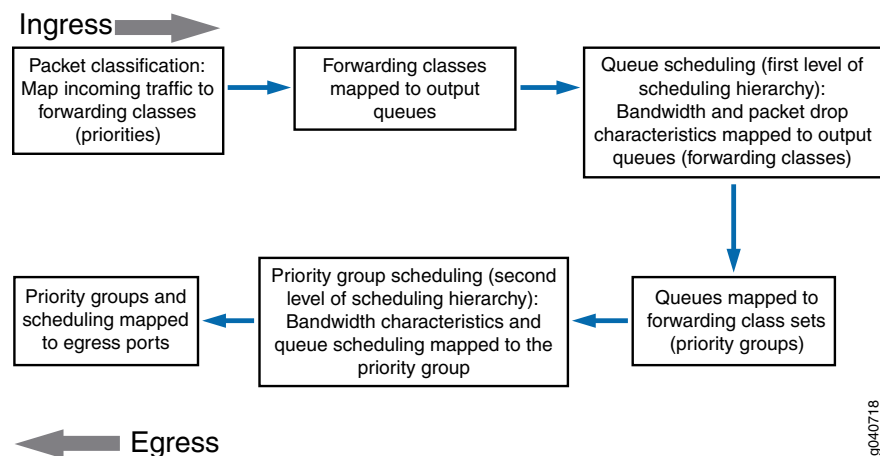

### Strict-High Priority Queues and Hierarchical Scheduling

If you configure a strict-high priority queue, you must observe the following rules:

- You must create a separate forwarding class set (priority group) for the strict-high priority queue.
- Only one forwarding class set can contain strict-high priority queues.
- Strict-high priority queues cannot belong to the same forwarding class set as queues that are not strict-high priority.

- A strict-high priority queue cannot belong to a multidestination forwarding class set.
- We recommend that you always apply a shaping rate to strict-high priority queues to prevent them from starving other queues. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.



**NOTE:** On a QFabric system, if a fabric (fte) interface handles strict-high priority traffic, you must define a separate forwarding class set (priority group) for strict-high priority traffic. Strict-high priority traffic cannot be mixed with traffic of other priorities in a forwarding class set. For example, you might choose to create different forwarding class sets for best effort, lossless, strict-high priority, and multidestination traffic.

---

## Default Hierarchical Scheduling

If you do not explicitly configure hierarchical scheduling, the switch uses the default settings:

- The switch automatically creates a default forwarding class set that contains all of the forwarding classes on the switch. The switch assigns 100 percent of the port output bandwidth to the default forwarding class set. The default forwarding class set is transparent. It does not appear in the configuration and is used for Data Center Bridging Capability Exchange protocol (DCBX) advertisement.



**NOTE:** OCX Series switches do not support DCBX, so the ETS configuration is not advertised to connected peers.

- Ingress traffic is classified based on the default classifier settings.
- The forwarding classes (queues) in the default forwarding class set receive bandwidth based on the default scheduler settings.

### Related Documentation

- [Understanding CoS Packet Flow on page 24](#)
- [Understanding CoS Output Queue Schedulers](#)
- [Understanding CoS Priority Group Scheduling on page 154](#)
- [Benefits of Configuring CoS Hierarchical Port Scheduling](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)
- [Understanding CoS Classifiers](#)
- [Understanding CoS Classifiers](#)
- [Understanding Default CoS Scheduling and Classification](#)
- [Understanding Default CoS Scheduling and Classification](#)



- *Understanding CoS Scheduling on QFabric System Node Device Fabric (fte) Ports*
- *Understanding Default CoS Scheduling on QFabric System Interconnect Devices (Junos OS Release 13.1 and Later Releases)*
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
- [Example: Configuring Minimum Guaranteed Output Bandwidth on page 194](#)
- [Example: Configuring Maximum Output Bandwidth on page 201](#)

---

## Example: Configuring CoS Hierarchical Port Scheduling (ETS)

---

Hierarchical port scheduling defines the class-of-service (CoS) properties of output queues, which are mapped to forwarding classes. Traffic is classified into forwarding classes based on code point (priority), so mapping queues to forwarding classes also maps queues to priorities). Hierarchical port scheduling enables you to group priorities that require similar CoS treatment into priority groups. You define the port bandwidth resources for a priority group, and you define the amount of the priority group's resources that each priority in the group can use.

Hierarchical port scheduling is the Junos OS implementation of enhanced transmission selection (ETS), as described in IEEE 802.1Qaz. One major benefit of hierarchical port scheduling is greater port bandwidth utilization. If a priority group on a port does not use all of its allocated bandwidth, other priority groups on that port can use that bandwidth. Also, if a priority within a priority group does not use its allocated bandwidth, other priorities within that priority group can use that bandwidth.

Configuring hierarchical scheduling is a multistep procedure that includes:

- Mapping forwarding classes to queues
- Defining forwarding class sets (priority groups)
- Defining behavior aggregate classifiers
- Configuring priority-based flow control (PFC) for lossless priorities (queues)
- Applying classifiers and PFC configuration to ingress interfaces
- Defining drop profiles
- Defining schedulers
- Mapping forwarding classes to schedulers
- Defining traffic control profiles
- Assigning priority groups and traffic control profiles to egress ports



NOTE: OCX Series switches do not support lossless transport and do not support PFC. Although this example includes configuring lossless transport with PFC, the portions of the example that do not pertain to lossless transport still apply to OCX Series switches. (You can configure hierarchical scheduling on OCX Series switches, but you cannot configure lossless transport or lossless forwarding classes.)

This example describes how to configure hierarchical scheduling:

- [Requirements on page 168](#)
- [Overview on page 168](#)
- [Configuration on page 172](#)
- [Verification on page 182](#)

## Requirements

This example uses the following hardware and software components:

- One switch (this example was tested on a Juniper Networks QFX3500 Switch)
- Junos OS Release 11.1 or later for the QFX Series or Junos OS Release 14.1X53-D20 or later for the OCX Series

## Overview

Keep the following considerations in mind when you plan the port bandwidth allocation for priority groups and for individual priorities:

- How much traffic and what types of traffic you expect to traverse the system.
- How you want to divide different types of traffic into priorities (forwarding classes) to apply different CoS treatment to different types of traffic. Dividing traffic into priorities includes:
  - Mapping the code points of ingress traffic to forwarding classes using behavior aggregate (BA) classifiers. This classifies incoming traffic into the appropriate forwarding class based on code point.
  - Mapping forwarding classes to output queues. This defines the output queue for each type of traffic.
  - Attaching the BA classifier to the desired ingress interfaces so that incoming traffic maps to the desired forwarding classes and queues.
- How you want to organize priorities into priority groups (forwarding class sets).

Traffic that requires similar treatment usually belongs in the same priority group. To do this, place forwarding classes that require similar bandwidth, loss, and other

characteristics in the same forwarding class set. For example, you can map all types of best-effort traffic forwarding classes into one forwarding class set.

- How much of the port bandwidth you want to allocate to each priority group and to each of the priorities in each priority group. The following considerations apply to bandwidth allocation:
  - Estimate how much traffic you expect in each forwarding class, and how much traffic you expect in each forwarding class set (the amount of traffic you expect in a forwarding class set is the aggregate amount of traffic in the forwarding classes that belong to the forwarding class set).
  - The combined minimum guaranteed bandwidth of the priorities (forwarding classes) in a priority group should not exceed the minimum guaranteed bandwidth of the priority group (forwarding class set). The transmit rate scheduler parameter defines the minimum guaranteed bandwidth for forwarding classes. Scheduler maps associate schedulers with forwarding classes.
  - The combined minimum guaranteed bandwidth of the priority groups (forwarding class sets) on a port should not exceed the port's total bandwidth. The guaranteed rate parameter in the traffic control profile defines the minimum bandwidth for a forwarding class set. Associating a scheduler map with a traffic control profile sets the scheduling for the individual forwarding classes in the forwarding class set.

This example creates hierarchical port scheduling by defining priority groups for best effort, guaranteed delivery, and high-performance computing (HPC) traffic. Each priority group includes priorities that need to receive similar CoS treatment. Each priority group and each priority within each priority group receive the CoS resources needed to service their flows. Lossless priorities use PFC to prevent packet loss when the network experiences congestion.

### Topology

Table 53 on page 169 shows the configuration components for this example.



**NOTE:** OCX Series switches do not support lossless transport and do not support PFC. If you eliminate the configuration elements for the default lossless fcoe and no-loss forwarding classes (including classifier, forwarding class set, scheduler, and traffic control profile configuration for those forwarding classes) and for PFC, this example works for OCX Series switches. However, because the default fcoe and no-loss forwarding classes do not carry traffic on OCX Series switches, you can apply the bandwidth allocated to those forwarding classes to other forwarding classes. By default, the active forwarding classes (best-effort, network-control, and mcast) share the unused bandwidth assigned to the fcoe and no-loss forwarding classes.

**Table 53: Components of the Hierarchical Port Scheduling (ETS) Configuration Topology**

Property	Settings
Hardware	QFX3500 switch

Table 53: Components of the Hierarchical Port Scheduling (ETS) Configuration Topology (*continued*)

Property	Settings
Mapping of forwarding classes (priorities) to queues	<p><b>best-effort</b> to queue 0</p> <p><b>be2</b> to queue 1</p> <p><b>fcoe</b> (Fibre Channel over Ethernet) to queue 3</p> <p><b>no-loss</b> to queue 4</p> <p><b>hpc</b> (high-performance computing) to queue 5</p> <p><b>network-control</b> to queue 7</p> <p><b>NOTE:</b> On switches that do not support the ELS CLI, if you are using Junos OS Release 12.2 or later, use the default forwarding-class-to-queue mapping for the lossless <b>fcoe</b> and <b>no-loss</b> forwarding classes. If you explicitly configure the default lossless forwarding classes, the traffic mapped to those forwarding classes is treated as lossy (<b>best-effort</b>) traffic and does <i>not</i> receive lossless treatment.</p> <p>On switches that do not support the ELS CLI, in Junos OS Release 12.3 and later, you can include the <i>no-loss</i> packet drop attribute in the explicit forwarding class configuration to configure a lossless forwarding class.</p>
Forwarding class sets (priority groups)	<p><b>best-effort-pg:</b> contains forwarding classes <b>best-effort</b>, <b>be2</b>, and <b>network control</b></p> <p><b>guar-delivery-pg:</b> contains forwarding classes <b>fcoe</b> and <b>no-loss</b></p> <p><b>hpc-pg:</b> contains forwarding class <b>hpc</b></p>
Behavior aggregate classifier (maps forwarding classes and loss priorities to incoming packets by IEEE 802.1 code point)	<p>Name—<b>hsclassifier1</b></p> <p>Code point mapping:</p> <ul style="list-style-type: none"> <li>• <b>000</b> to forwarding class <b>best-effort</b> and loss priority <b>low</b></li> <li>• <b>001</b> to forwarding class <b>be2</b> and loss priority <b>high</b></li> <li>• <b>011</b> to forwarding class <b>fcoe</b> and loss priority <b>low</b></li> <li>• <b>100</b> to forwarding class <b>no-loss</b> and loss priority <b>low</b></li> <li>• <b>101</b> to forwarding class <b>hpc</b> and loss priority <b>low</b></li> <li>• <b>110</b> to forwarding class <b>network-control</b> and loss priority <b>low</b></li> </ul>
PFC	<p>Congestion notification profile name—<b>gd-cnp</b></p> <p>PFC enabled on code points: <b>011</b> (<b>fcoe</b> priority), <b>010</b> (<b>no-loss</b> priority)</p>
Drop profiles	<p><b>dp-be-low:</b> drop start point 25, drop end point 50, maximum drop rate 80</p> <p><b>NOTE:</b> The <b>fcoe</b> and <b>no-loss</b> priorities (queues) do not use drop profiles because they are lossless traffic classes.</p> <p><b>dp-be-high:</b> drop start point 10, drop end point 40, maximum drop rate 100</p> <p><b>dp-hpc:</b> drop start point 75, drop end point 90, maximum drop rate 75</p> <p><b>dp-nc:</b> drop start point 80, drop end point 100, maximum drop rate 100</p>

**Table 53: Components of the Hierarchical Port Scheduling (ETS) Configuration Topology** (*continued*)

Property	Settings
Queue schedulers	<p><b>be-sched</b>: minimum bandwidth <b>3g</b>, maximum bandwidth <b>100%</b>, priority <b>low</b>, drop profiles <b>dp-be-low</b> and <b>dp-be-high</b></p> <p><b>fcoe-sched</b>: minimum bandwidth <b>2.5g</b>, maximum bandwidth <b>100%</b>, priority <b>low</b></p> <p><b>hpc-sched</b>: minimum bandwidth <b>2g</b>, maximum bandwidth <b>100%</b>, priority <b>low</b>, drop profile <b>dp-hpc</b></p> <p><b>nc-sched</b>: minimum bandwidth <b>500m</b>, maximum bandwidth <b>100%</b>, priority <b>low</b>, drop profile <b>dp-nc</b></p> <p><b>nl-sched</b>: minimum bandwidth <b>2g</b>, maximum bandwidth <b>100%</b>, priority <b>low</b></p>
Forwarding class-to-scheduler mapping	<p>Scheduler map <b>be-map</b>: Forwarding class <b>best-effort</b>, scheduler <b>be-sched</b> Forwarding class <b>be2</b>, scheduler <b>be-sched</b> Forwarding class <b>network-control</b>, scheduler <b>nc-sched</b></p> <p>Scheduler map <b>gd-map</b>: Forwarding class <b>fcoe</b>, scheduler <b>fcoe-sched</b> Forwarding class <b>no-loss</b>, scheduler <b>nl-sched</b></p> <p>Scheduler map <b>hpc-map</b>: Forwarding class <b>hpc</b>, scheduler <b>hpc-sched</b></p>
Traffic control profiles	<p><b>be-tcp</b>: scheduler map <b>be-map</b>, minimum bandwidth <b>3.5g</b>, maximum bandwidth <b>100%</b></p> <p><b>gd-tcp</b>: scheduler map <b>gd-map</b>, minimum bandwidth <b>4.5g</b>, maximum bandwidth <b>100%</b></p> <p><b>hpc-tcp</b>: scheduler map <b>hpc-map</b>, minimum bandwidth <b>2g</b>, maximum bandwidth <b>100%</b></p>
Interfaces	<p>This example configures hierarchical port scheduling on interfaces <b>xe-0/0/20</b> and <b>xe-0/0/21</b>. Because traffic is bidirectional, you apply the ingress and egress configuration components to both interfaces:</p> <ul style="list-style-type: none"> <li>• Classifier Name—<b>hsclassifier1</b></li> <li>• Forwarding class sets—<b>best-effort-pg</b>, <b>guar-deliver-pg</b>, <b>hpc-pg</b></li> <li>• Congestion notification profile—<b>gd-cnp</b></li> </ul>

Figure 13 on page 172 shows a block diagram of the configuration components and the configuration flow of the CLI statements used in the example. You can perform the configuration steps in a different sequence if you want.

Figure 13: Hierarchical Port Scheduling Components Block Diagram


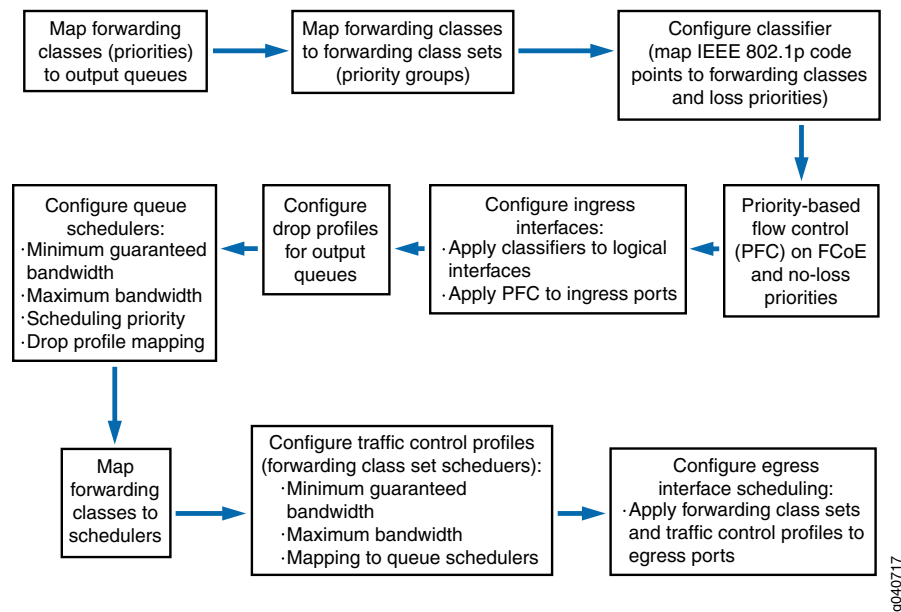


Figure 14 on page 172 shows a block diagram of the hierarchical scheduling packet flow from ingress to egress.

Figure 14: Hierarchical Port Scheduling Packet Flow Block Diagram

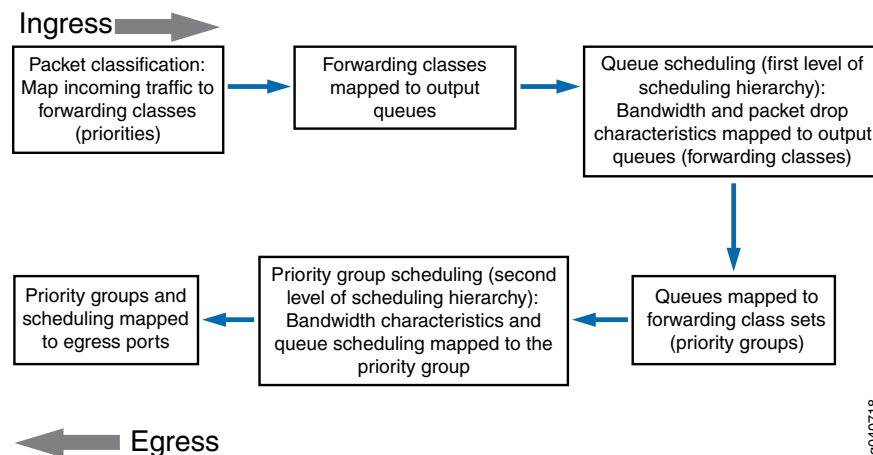

## Configuration

### CLI Quick Configuration

To quickly configure hierarchical port scheduling on systems that support lossless transport, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the [edit class-of-service] hierarchy level:

```
[edit class-of-service]
set forwarding-classes class best-effort queue-num 0
set forwarding-classes class be2 queue-num 1
set forwarding-classes class hpc queue-num 5
set forwarding-classes class network-control queue-num 7
```

```

set forwarding-class-sets best-effort-pg class best-effort
set forwarding-class-sets best-effort-pg class be2
set forwarding-class-sets best-effort-pg class network-control
set forwarding-class-sets guar-delivery-pg class fcoe
set forwarding-class-sets guar-delivery-pg class no-loss
set forwarding-class-sets hpc-pg class hpc
set classifiers ieee-802.1 hsclassifier1 forwarding-class best-effort loss-priority low code-points
000
set classifiers ieee-802.1 hsclassifier1 forwarding-class be2 loss-priority high code-points 001
set classifiers ieee-802.1 hsclassifier1 forwarding-class fcoe loss-priority low code-points 011
set classifiers ieee-802.1 hsclassifier1 forwarding-class no-loss loss-priority low code-points 100
set classifiers ieee-802.1 hsclassifier1 forwarding-class hpc loss-priority low code-points 101
set classifiers ieee-802.1 hsclassifier1 forwarding-class network-control loss-priority low
code-points 110
set congestion-notification-profile gd-cnp input ieee-802.1 code-point 011 pfc
set congestion-notification-profile gd-cnp input ieee-802.1 code-point 100 pfc
set interfaces xe-0/0/20 unit 0 classifiers ieee-802.1 hsclassifier1
set interfaces xe-0/0/21 unit 0 classifiers ieee-802.1 hsclassifier1
set interfaces xe-0/0/20 congestion-notification-profile gd-cnp
set interfaces xe-0/0/21 congestion-notification-profile gd-cnp
set drop-profiles dp-be-low interpolate fill-level 25 fill-level 50 drop-probability 0 drop-probability
80
set drop-profiles dp-be-high interpolate fill-level 10 fill-level 40 drop-probability 0 drop-probability
100
set drop-profiles dp-nc interpolate fill-level 80 fill-level 100 drop-probability 0 drop-probability
100
set drop-profiles dp-hpc interpolate fill-level 75 fill-level 90 drop-probability 0 drop-probability
75
set schedulers be-sched priority low transmit-rate 3g
set schedulers be-sched shaping-rate percent 100
set schedulers be-sched drop-profile-map loss-priority low protocol any drop-profile dp-be-low
set schedulers be-sched drop-profile-map loss-priority high protocol any drop-profile dp-be-high
set schedulers fcoe-sched priority low transmit-rate 2500m
set schedulers fcoe-sched shaping-rate percent 100
set schedulers hpc-sched priority low transmit-rate 2g
set schedulers hpc-sched shaping-rate percent 100
set schedulers hpc-sched drop-profile-map loss-priority low protocol any drop-profile dp-hpc
set schedulers nc-sched priority low transmit-rate 500m
set schedulers nc-sched shaping-rate percent 100
set schedulers nc-sched drop-profile-map loss-priority low protocol any drop-profile dp-nc
set schedulers nl-sched priority low transmit-rate 2g
set schedulers nl-sched shaping-rate percent 100
set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
set scheduler-maps be-map forwarding-class be2 scheduler be-sched
set scheduler-maps be-map forwarding-class network-control scheduler nc-sched
set scheduler-maps gd-map forwarding-class fcoe scheduler fcoe-sched
set scheduler-maps gd-map forwarding-class no-loss scheduler nl-sched
set scheduler-maps hpc-map forwarding-class hpc scheduler hpc-sched
set traffic-control-profiles be-tcp scheduler-map be-map guaranteed-rate 3500m
set traffic-control-profiles be-tcp shaping-rate percent 100
set traffic-control-profiles gd-tcp scheduler-map gd-map guaranteed-rate 4500m
set traffic-control-profiles gd-tcp shaping-rate percent 100
set traffic-control-profiles hpc-tcp scheduler-map hpc-map guaranteed-rate 2g
set traffic-control-profiles hpc-tcp shaping-rate percent 100
set interfaces xe-0/0/20 forwarding-class-set best-effort-pg output-traffic-control-profile be-tcp
set interfaces xe-0/0/20 forwarding-class-set guar-delivery-pg output-traffic-control-profile
gd-tcp
set interfaces xe-0/0/20 forwarding-class-set hpc-pg output-traffic-control-profile hpc-tcp
set interfaces xe-0/0/21 forwarding-class-set best-effort-pg output-traffic-control-profile be-tcp

```

```

set interfaces xe-0/0/21 forwarding-class-set guar-delivery-pg output-traffic-control-profile
gd-tcp
set interfaces xe-0/0/21 forwarding-class-set hpc-pg output-traffic-control-profile hpc-tcp

```

## OCX Series Switches

Because OCX Series switches do not support lossless transport, the following subset of the configuration eliminates the lossless configuration elements and provides hierarchical port scheduling for the best-effort, be2, hpc, and network-control forwarding classes. In addition, on OCX Series switches, you would probably use DSCP classifiers and code points instead of IEEE classifiers and code points. To quickly configure hierarchical port scheduling on an OCX Series switch, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the [edit class-of-service] hierarchy level:

```

[edit class-of-service]
set forwarding-classes class best-effort queue-num 0
set forwarding-classes class be2 queue-num 1
set forwarding-classes class hpc queue-num 5
set forwarding-classes class network-control queue-num 7
set forwarding-class-sets best-effort-pg class best-effort
set forwarding-class-sets best-effort-pg class be2
set forwarding-class-sets best-effort-pg class network-control
set forwarding-class-sets hpc-pg class hpc
set classifiers ieee-802.1 hsclassifier1 forwarding-class best-effort loss-priority low code-points
000
set classifiers ieee-802.1 hsclassifier1 forwarding-class be2 loss-priority high code-points 001
set classifiers ieee-802.1 hsclassifier1 forwarding-class hpc loss-priority low code-points 101
set classifiers ieee-802.1 hsclassifier1 forwarding-class network-control loss-priority low
code-points 110
set interfaces xe-0/0/20 unit 0 classifiers ieee-802.1 hsclassifier1
set interfaces xe-0/0/21 unit 0 classifiers ieee-802.1 hsclassifier1
set drop-profiles dp-be-low interpolate fill-level 25 fill-level 50 drop-probability 0 drop-probability
80
set drop-profiles dp-be-high interpolate fill-level 10 fill-level 40 drop-probability 0 drop-probability
100
set drop-profiles dp-nc interpolate fill-level 80 fill-level 100 drop-probability 0 drop-probability
100
set drop-profiles dp-hpc interpolate fill-level 75 fill-level 90 drop-probability 0 drop-probability
75
set schedulers be-sched priority low transmit-rate 3g
set schedulers be-sched shaping-rate percent 100
set schedulers be-sched drop-profile-map loss-priority low protocol any drop-profile dp-be-low
set schedulers be-sched drop-profile-map loss-priority high protocol any drop-profile dp-be-high
set schedulers hpc-sched priority low transmit-rate 2g
set schedulers hpc-sched shaping-rate percent 100
set schedulers hpc-sched drop-profile-map loss-priority low protocol any drop-profile dp-hpc
set schedulers nc-sched priority low transmit-rate 500m
set schedulers nc-sched shaping-rate percent 100
set schedulers nc-sched drop-profile-map loss-priority low protocol any drop-profile dp-nc
set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
set scheduler-maps be-map forwarding-class be2 scheduler be-sched
set scheduler-maps be-map forwarding-class network-control scheduler nc-sched
set scheduler-maps hpc-map forwarding-class hpc scheduler hpc-sched
set traffic-control-profiles be-tcp scheduler-map be-map guaranteed-rate 3500m
set traffic-control-profiles be-tcp shaping-rate percent 100
set traffic-control-profiles hpc-tcp scheduler-map hpc-map guaranteed-rate 2g
set traffic-control-profiles hpc-tcp shaping-rate percent 100

```



```

set interfaces xe-0/0/20 forwarding-class-set best-effort-pg output-traffic-control-profile be-tcp
set interfaces xe-0/0/20 forwarding-class-set hpc-pg output-traffic-control-profile hpc-tcp
set interfaces xe-0/0/21 forwarding-class-set best-effort-pg output-traffic-control-profile be-tcp
set interfaces xe-0/0/21 forwarding-class-set hpc-pg output-traffic-control-profile hpc-tcp

```

### Step-by-Step Procedure

To perform a step-by-step configuration of the forwarding classes (priorities), forwarding class sets (priority groups), classifiers, queue schedulers, PFC, traffic control profiles, and interfaces to set up hierarchical port scheduling (ETS):

1. Configure the forwarding classes (priorities) and map them to unicast output queues (do not explicitly map the **fcoe** and **no-loss** forwarding classes to output queues; use the default configuration):

```

[edit class-of-service]
user@switch# set forwarding-classes class best-effort queue-num 0
user@switch# set forwarding-classes class be2 queue-num 1
user@switch# set forwarding-classes class hpc queue-num 5
user@switch# set forwarding-classes class network-control queue-num 7

```

2. Configure forwarding class sets (priority groups) to group forwarding classes (priorities) that require similar CoS treatment:

```

[edit class-of-service]
user@switch# set forwarding-class-sets best-effort-pg class best-effort
user@switch# set forwarding-class-sets best-effort-pg class be2
user@switch# set forwarding-class-sets best-effort-pg class network-control
user@switch# set forwarding-class-sets guar-delivery-pg class fcoe
user@switch# set forwarding-class-sets guar-delivery-pg class no-loss
user@switch# set forwarding-class-sets hpc-pg class hpc

```



**NOTE:** On OCX Series switches, you would not configure the **guar-delivery-pg** forwarding class set for lossless traffic.

3. Configure a classifier to set the loss priority and IEEE 802.1 code points assigned to each forwarding class at the ingress:

```

[edit class-of-service]
user@switch# set classifiers ieee-802.1 hsclassifier1 forwarding-class best-effort
loss-priority low code-points 000
user@switch# set classifiers ieee-802.1 hsclassifier1 forwarding-class be2 loss-priority
high code-points 001
user@switch# set classifiers ieee-802.1 hsclassifier1 forwarding-class fcoe loss-priority
low code-points 011
user@switch# set classifiers ieee-802.1 hsclassifier1 forwarding-class no-loss loss-priority
low code-points 100
user@switch# set classifiers ieee-802.1 hsclassifier1 forwarding-class hpc loss-priority low
code-points 101
user@switch# set classifiers ieee-802.1 hsclassifier1 forwarding-class network-control
loss-priority low code-points 110

```



**NOTE:** On OCX Series switches, you would not configure the **fcoe** and **no-loss** portions of the classifier.

4. Configure a congestion notification profile to enable PFC on the FCoE and no-loss queue IEEE 802.1 code points:

```
[edit class-of-service]
user@switch# set congestion-notification-profile gd-cnp input ieee-802.1 code-point 011 pfc
user@switch# set congestion-notification-profile gd-cnp input ieee-802.1 code-point 100 pfc
```



**NOTE:** This step does not apply to OCX Series switches, which do not support PFC.

5. Assign the classifier to the interfaces:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 unit 0 classifiers ieee-802.1 hsclassifier1
user@switch# set interfaces xe-0/0/21 unit 0 classifiers ieee-802.1 hsclassifier1
```

6. Apply the PFC configuration to the interfaces:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 congestion-notification-profile gd-cnp
user@switch# set interfaces xe-0/0/21 congestion-notification-profile gd-cnp
```



**NOTE:** This step does not apply to OCX Series switches, which do not support PFC.

7. Configure the drop profile for the best-effort low loss-priority queue:

```
[edit class-of-service]
user@switch# set drop-profiles dp-be-low interpolate fill-level 25 fill-level 50
drop-probability 0 drop-probability 80
```

8. Configure the drop profile for the best-effort high loss-priority queue:

```
[edit class-of-service]
user@switch# set drop-profiles dp-be-high interpolate fill-level 10 fill-level 40
drop-probability 0 drop-probability 100
```

9. Configure the drop profile for the network-control queue:

```
[edit class-of-service]
user@switch# set drop-profiles dp-nc interpolate fill-level 80 fill-level 100 drop-probability
0 drop-probability 100
```

10. Configure the drop profile for the high-performance computing queue:

```
[edit class-of-service]
user@switch# set drop-profiles dp-hpc interpolate fill-level 75 fill-level 90 drop-probability
0 drop-probability 75
```

11. Define the minimum guaranteed bandwidth, priority, maximum bandwidth, and drop profiles for the best-effort queue:

```
[edit class-of-service]
user@switch# set schedulers be-sched priority low transmit-rate 3g
user@switch# set schedulers be-sched shaping-rate percent 100
```

```

user@switch# set schedulers be-sched drop-profile-map loss-priority low protocol any
drop-profile dp-be-low
user@switch# set schedulers be-sched drop-profile-map loss-priority high protocol any
drop-profile dp-be-high

```

12. Define the minimum guaranteed bandwidth, priority, and maximum bandwidth for the FCoE queue:

```

[edit class-of-service]
user@switch# set schedulers fcoe-sched priority low transmit-rate 2500m
user@switch# set schedulers fcoe-sched shaping-rate percent 100

```



**NOTE:** This step does not apply to OCX Series switches, which do not support lossless transport.

13. Define the minimum guaranteed bandwidth, priority, maximum bandwidth, and drop profile for the high-performance computing queue:

```

[edit class-of-service]
user@switch# set schedulers hpc-sched priority low transmit-rate 2g
user@switch# set schedulers hpc-sched shaping-rate percent 100
user@switch# set schedulers hpc-sched drop-profile-map loss-priority low protocol any
drop-profile dp-hpc

```

14. Define the minimum guaranteed bandwidth, priority, maximum bandwidth, and drop profile for the network-control queue:

```

[edit class-of-service]
user@switch# set schedulers nc-sched priority low transmit-rate 500m
user@switch# set schedulers nc-sched shaping-rate percent 100
user@switch# set schedulers nc-sched drop-profile-map loss-priority low protocol any
drop-profile dp-nc

```

15. Define the minimum guaranteed bandwidth, priority, and maximum bandwidth for the no-loss queue:

```

[edit class-of-service]
user@switch# set schedulers nl-sched priority low transmit-rate 2g
user@switch# set schedulers nl-sched shaping-rate percent 100

```



**NOTE:** This step does not apply to OCX Series switches, which do not support lossless transport.

16. Map the schedulers to the appropriate forwarding classes (queues):

```

[edit class-of-service]
user@switch# set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
user@switch# set scheduler-maps be-map forwarding-class be2 scheduler be-sched
user@switch# set scheduler-maps be-map forwarding-class network-control scheduler
nc-sched
user@switch# set scheduler-maps gd-map forwarding-class fcoe scheduler fcoe-sched
user@switch# set scheduler-maps gd-map forwarding-class no-loss scheduler nl-sched
user@switch# set scheduler-maps hpc-map forwarding-class hpc scheduler hpc-sched

```



**NOTE:** On OCX Series switches, because lossless transport is not supported, you would not configure the `gd-map` scheduler map.

17. Define the traffic control profile for the best-effort priority group (queue scheduler to mapping, minimum guaranteed bandwidth, and maximum bandwidth):

```
[edit class-of-service]
user@switch# set traffic-control-profiles be-tcp scheduler-map be-map guaranteed-rate
3500m
user@switch# set traffic-control-profiles be-tcp shaping-rate percent 100
```

18. Define the traffic control profile for the guaranteed delivery priority group (queue to scheduler mapping, minimum guaranteed bandwidth, and maximum bandwidth):

```
[edit class-of-service]
user@switch# set traffic-control-profiles gd-tcp scheduler-map gd-map guaranteed-rate
4500m
user@switch# set traffic-control-profiles gd-tcp shaping-rate percent 100
```



**NOTE:** This step does not apply to OCX Series switches, which do not support lossless transport.

19. Define the traffic control profile for the high-performance computing priority group (queue to scheduler mapping, minimum guaranteed bandwidth, and maximum bandwidth):

```
[edit class-of-service]
user@switch# set traffic-control-profiles hpc-tcp scheduler-map hpc-map guaranteed-rate
2g
user@switch# set traffic-control-profiles hpc-tcp shaping-rate percent 100
```

20. Apply the three priority groups (forwarding class sets) and the appropriate traffic control profiles to the egress ports:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 forwarding-class-set best-effort-pg
output-traffic-control-profile be-tcp
user@switch# set interfaces xe-0/0/20 forwarding-class-set guar-delivery-pg
output-traffic-control-profile gd-tcp
user@switch# set interfaces xe-0/0/20 forwarding-class-set hpc-pg
output-traffic-control-profile hpc-tcp
user@switch# set interfaces xe-0/0/21 forwarding-class-set best-effort-pg
output-traffic-control-profile be-tcp
user@switch# set interfaces xe-0/0/21 forwarding-class-set guar-delivery-pg
output-traffic-control-profile gd-tcp
user@switch# set interfaces xe-0/0/21 forwarding-class-set hpc-pg
output-traffic-control-profile hpc-tcp
```



**NOTE:** Because OCX Series switches do not support lossless transport, on OCX Series switches, you would not apply the `guar-deliver-pg` forwarding class set and the `gd-tcp` traffic control profile to interfaces.

## Results

Display the results of the configuration (the system shows only the explicitly configured parameters; it does not show default parameters such as the **fcoe** and **no-loss** lossless forwarding classes). On OCX Series switches, you would not see the lossless configuration components in the output:

```
user@switch> show configuration class-of-service
classifiers {
  ieee-802.1 hsclassifier1 {
    forwarding-class best-effort {
      loss-priority low code-points 000;
    }
    forwarding-class be2 {
      loss-priority high code-points 001;
    }
    forwarding-class fcoe {
      loss-priority low code-points 011;
    }
    forwarding-class no-loss {
      loss-priority low code-points 100;
    }
    forwarding-class hpc {
      loss-priority low code-points 101;
    }
    forwarding-class network-control {
      loss-priority low code-points 110;
    }
  }
}
drop-profiles {
  dp-be-low {
    interpolate {
      fill-level [ 25 50 ];
      drop-probability [ 0 80 ];
    }
  }
  dp-be-high {
    interpolate {
      fill-level [ 10 40 ];
      drop-probability [ 0 100 ];
    }
  }
  dp-hpc {
    interpolate {
      fill-level [ 75 90 ];
      drop-probability [ 0 75 ];
    }
  }
  dp-nc {
    interpolate {
      fill-level [ 80 100 ];
      drop-probability [ 0 100 ];
    }
  }
}
```

```
forwarding-classes {
  class best-effort queue-num 0;
  class be2 queue-num 1;
  class hpc queue-num 5;
  class network-control queue-num 7;
}
traffic-control-profiles {
  be-tcp {
    scheduler-map be-map;
    shaping-rate percent 100;
    guaranteed-rate 3500000000;
  }
  gd-tcp {
    scheduler-map gd-map;
    shaping-rate percent 100;
    guaranteed-rate 4500000000;
  }
  hpc-tcp {
    scheduler-map hpc-map;
    shaping-rate percent 100;
    guaranteed-rate 2g;
  }
}
forwarding-class-sets {
  guar-delivery-pg {
    class fcoe;
    class no-loss;
  }
  best-effort-pg {
    class best-effort;
    class be2;
    class network-control;
  }
  hpc-pg {
    class hpc;
  }
}
congestion-notification-profile {
  gd-cnp {
    input {
      ieee-802.1 {
        code-point 011 {
          pfc;
        }
        code-point 100 {
          pfc;
        }
      }
    }
  }
}
interfaces {
  xe-0/0/20 {
    forwarding-class-set {
      best-effort-pg {
        output-traffic-control-profile be-tcp;
      }
    }
  }
}
```

```
    }
    guar-delivery-pg {
        output-traffic-control-profile gd-tcp;
    }
    hpc-pg {
        output-traffic-control-profile hpc-tcp;
    }
}
congestion-notification-profile gd-cnp;
unit 0 {
    classifiers {
        ieee-802.1 hsclassifier1;
    }
}
}
xe-0/0/21 {
    forwarding-class-set {
        best-effort-pg {
            output-traffic-control-profile be-tcp;
        }
        guar-delivery-pg {
            output-traffic-control-profile gd-tcp;
        }
        hpc-pg {
            output-traffic-control-profile hpc-tcp;
        }
    }
    congestion-notification-profile gd-cnp;
    unit 0 {
        classifiers {
            ieee-802.1 hsclassifier1;
        }
    }
}
}
scheduler-maps {
    be-map {
        forwarding-class best-effort scheduler be-sched;
        forwarding-class network-control scheduler nc-sched;
        forwarding-class be2 scheduler be-sched;
    }
    gd-map {
        forwarding-class fcoe scheduler fcoe-sched;
        forwarding-class no-loss scheduler nl-sched;
    }
    hpc-map {
        forwarding-class hpc scheduler hpc-sched;
    }
}
schedulers {
    be-sched {
        transmit-rate 3g;
        shaping-rate percent 100;
        priority low;
        drop-profile-map loss-priority low protocol any drop-profile dp-be-low;
        drop-profile-map loss-priority high protocol any drop-profile dp-be-high;
```

```
}
fcoe-sched {
    transmit-rate 2500000000;
    shaping-rate percent 100;
    priority low;
}
hpc-sched {
    transmit-rate 2g;
    shaping-rate percent 100;
    priority low;
    drop-profile-map loss-priority low protocol any drop-profile dp-hpc;
}
nc-sched {
    transmit-rate 500m;
    shaping-rate percent 100;
    priority low;
    drop-profile-map loss-priority low protocol any drop-profile dp-nc;
}
nl-sched {
    transmit-rate 2g;
    shaping-rate percent 100;
    priority low;
}
}
```



**TIP:** To quickly configure the interfaces, issue the `load merge terminal` command, and then copy the hierarchy and paste it into the switch terminal window.

## Verification



**NOTE:** The verification output is based on the full example configuration. On OCX Series switches, you do not see lossless configuration components in the output. Comments about lossless configuration components do not apply to OCX Series switches.

To verify that you created the hierarchical port scheduling components and they are operating properly, perform these tasks:

- [Verifying the Forwarding Classes \(Priorities\) on page 183](#)
- [Verifying the Forwarding Class Sets \(Priority Groups\) on page 183](#)
- [Verifying the Classifier on page 184](#)
- [Verifying Priority-Based Flow Control on page 184](#)
- [Verifying the Output Queue Schedulers on page 185](#)
- [Verifying the Drop Profiles on page 188](#)



- [Verifying the Priority Group Output Schedulers \(Traffic Control Profiles\) on page 189](#)
- [Verifying the Interface Configuration on page 190](#)

### Verifying the Forwarding Classes (Priorities)

**Purpose** Verify that you created the forwarding classes and mapped them to the correct queues. (The system shows only the explicitly configured forwarding classes. It does not show default forwarding classes such as **fcoe** and **no-loss**.)

**Action** List the forwarding classes using the operational mode command **show class-of-service forwarding-class**:

```
user@switch> show class-of-service forwarding-class
```

Forwarding class	ID	Queue	Policing priority	No-Loss
best-effort	0	0	normal	Disabled
be2	1	3	normal	Disabled
hpc	2	4	normal	Disabled
network-control	3	7	normal	Disabled
mcast	8	8	normal	Disabled

**Meaning** The **show class-of-service forwarding-class** command lists all of the configured forwarding classes, the internal identification number of each forwarding class, the queues that are mapped to the forwarding classes, the policing priority, and whether the forwarding class is lossless (no-loss packet drop attribute enabled) or lossy forwarding class (no-loss packet drop attribute disabled). The command output shows that:

- Forwarding class **best-effort** maps to queue **0** and is lossy
- Forwarding class **be2** maps to queue **1** and is lossy
- Forwarding class **hpc** maps to queue **5** and is lossy
- Forwarding class **network-control** maps to queue **7** and is lossy

In addition, the command lists the default multicast (multidestination) forwarding class and the default queue to which it is mapped.

### Verifying the Forwarding Class Sets (Priority Groups)

**Purpose** Verify that you created the priority groups and that the correct priorities (forwarding classes) belong to the appropriate priority group.

**Action** List the forwarding class sets using the operational mode command **show class-of-service forwarding-class-set**:

```
user@switch> show class-of-service forwarding-class-set
```

```
Forwarding class set: best-effort-pg, Type: normal-type, Forwarding class set
index: 19907
```

Forwarding class	Index
best-effort	0

be2	1
network-control	5

Forwarding class set: guar-delivery-pg, Type: normal-type, Forwarding class set index: 43700

Forwarding class	Index
fcoe	2
no-loss	3

Forwarding class set: hpc-pg, Type: normal-type, Forwarding class set index: 60758

Forwarding class	Index
hpc	4

**Meaning** The `show class-of-service forwarding-class-set` command lists all of the configured forwarding class sets (priority groups), the forwarding classes (priorities) that belong to each priority group, and the internal index number of each priority group. The command output shows that:

- The forwarding class set **best-effort-pg** includes the forwarding classes **best-effort**, **be2**, and **network-control**.
- The forwarding class set **guar-delivery-pg** includes the forwarding classes **fcoe** and **no-loss**.
- The forwarding class set **hpc-pg** includes the forwarding class **hpc**.

### Verifying the Classifier

**Purpose** Verify that the classifier maps forwarding classes to the correct IEEE 802.1p code points and packet loss priorities.

**Action** List the classifier configured for hierarchical port scheduling using the operational mode command `show class-of-service classifier name hsclassifier1`:

```
user@switch> show class-of-service classifier name hsclassifier1
Classifier: hsclassifier1, Code point type: ieee-802.1, Index: 43607
Code point      Forwarding class      Loss priority
000             best-effort           low
001             be2                   high
011             fcoe                  low
100             no-loss               low
101             hpc                   low
110             network-control      low
```

**Meaning** The `show class-of-service classifier name hsclassifier1` command lists all of the IEEE 802.1p code points and the loss priorities mapped to all of the forwarding classes in the classifier. The command output shows that the forwarding classes **best-effort**, **be2**, **no-loss**, **fcoe**, **hpc**, and **network-control** have been created and mapped to IEEE 802.1p code points and loss priorities.

### Verifying Priority-Based Flow Control

**Purpose** Verify that PFC is enabled on the correct priorities for lossless transport.

**Action** List the congestion notification profiles using the operational mode command **show class-of-service congestion-notification**:

```
user@switch> show class-of-service congestion-notification
```

```
Type: Input, Name: gd-cnp, Index: 51687
```

```
Cable Length: 100 m
```

Priority	PFC	MRU
000	Disabled	
001	Disabled	
010	Disabled	
011	Enabled	2500
100	Enabled	2500
101	Disabled	
110	Disabled	
111	Disabled	

```
Type: Output
```

Priority	Flow-Control-Queues
000	0
001	0
010	1
011	2
100	3
101	4
110	5
111	6
	7

**Meaning** The **show class-of-service congestion-notification** command lists all of the congestion notification profiles and the IEEE 802.1p code points with PFC enabled. The command output shows that PFC is enabled for code points **011** (**fcoe** priority and queue) and **100** (**no-loss** priority and queue) for the **gd-cnp** congestion notification profile.

The command also shows the default cable length (100 meters), the default maximum receive unit (2500 bytes), and the default mapping of priorities to output queues because this example does not include configuring these options.

### Verifying the Output Queue Schedulers

**Purpose** Verify that you created the output queue schedulers with the correct bandwidth parameters and priorities, mapped to the correct queues, and mapped to the correct drop profiles.

**Action** List the scheduler maps using the operational mode command **show class-of-service scheduler-map**:

```
user@switch> show class-of-service scheduler-map
```

```
Scheduler map: be-map, Index: 64023
```

```
Scheduler: be-sched, Forwarding class: best-effort, Index: 13005
Transmit rate: 3000000000 bps, Rate Limit: none, Buffer size: remainder,
```

Buffer Limit: none, Priority: low  
 Excess Priority: unspecified  
 Shaping rate: 100 percent,  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	55387	dp-be-low
Medium high	any	1	<default-drop-profile>
High	any	4369	dp-be-high

Scheduler: be-sched, Forwarding class: be2, Index: 13005  
 Transmit rate: 3000000000 bps, Rate Limit: none, Buffer size: remainder,  
 Buffer Limit: none, Priority: low  
 Excess Priority: unspecified  
 Shaping rate: 100 percent,  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	55387	dp-be-low
Medium high	any	1	<default-drop-profile>
High	any	4369	dp-be-high

Scheduler: nc-sched, Forwarding class: network-control, Index: 45740  
 Transmit rate: 5000000000 bps, Rate Limit: none, Buffer size: remainder,  
 Buffer Limit: none, Priority: low  
 Excess Priority: unspecified  
 Shaping rate: 100 percent,  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	44207	dp-nc
Medium high	any	1	<default-drop-profile>
High	any	1	<default-drop-profile>

Scheduler map: gd-map, Index: 61447

Scheduler: fcoe-sched, Forwarding class: fcoe, Index: 37289  
 Transmit rate: 25000000000 bps, Rate Limit: none, Buffer size: remainder,  
 Buffer Limit: none, Priority: low  
 Excess Priority: unspecified  
 Shaping rate: 100 percent,  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	44207	<default-drop-profile>
Medium high	any	1	<default-drop-profile>
High	any	1	<default-drop-profile>

Scheduler: nl-sched, Forwarding class: no-loss, Index: 29359  
 Transmit rate: 20000000000 bps, Rate Limit: none, Buffer size: remainder,  
 Buffer Limit: none, Priority: low  
 Excess Priority: unspecified  
 Shaping rate: 100 percent,  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	44207	<default-drop-profile>
Medium high	any	1	<default-drop-profile>
High	any	1	<default-drop-profile>

Scheduler map: hpc-map, Index: 56941

```
Scheduler: hpc-sched, Forwarding class: hpc, Index: 55900
Transmit rate: 2000000000 bps, Rate Limit: none, Buffer size: remainder,
Buffer Limit: none, Priority: low
Excess Priority: unspecified
Shaping rate: 100 percent,
drop-profile-map-set-type: mark
Drop profiles:
  Loss priority  Protocol  Index  Name
  Low           any       57716  dp-hpc
  Medium high   any       1      <default-drop-profile>
  High          any       1      <default-drop-profile>
```

**Meaning** The **show class-of-service scheduler-map** command lists all of the configured scheduler maps. For each scheduler map, the command output includes:

- The name of the scheduler map (**scheduler-map** field)
- The name of the scheduler (**scheduler** field)
- The forwarding classes mapped to the scheduler (**forwarding-class** field)
- The minimum guaranteed queue bandwidth (**transmit-rate** field)
- The scheduling priority (**priority** field)
- The maximum bandwidth in the priority group the queue can consume (**shaping-rate** field)
- The drop profile loss priority (**loss priority** field) for each drop profile name (**name** field)

The command output shows that:

- The scheduler map **be-map** was created and has these properties:
  - There are two schedulers, **be-sched** and **nc-sched**.
  - The scheduler **be-sched** has two forwarding classes, **best-effort** and **be2**.
  - Scheduler **be-sched** forwarding classes **best-effort** and **be2** share a minimum guaranteed bandwidth of **3,000,000,000 bps**, can consume a maximum of **100 percent** of the priority group bandwidth, and use the drop profile **dp-be-low** for low loss-priority traffic, the default drop profile for medium-high loss-priority traffic, and the drop profile **dp-be-high** for high loss-priority traffic.
  - The scheduler **nc-sched** has one forwarding class, **network-control**.
  - The **network-control** forwarding class has a minimum guaranteed bandwidth of **500,000,000 bps**, can consume a maximum of **100 percent** of the priority group bandwidth, and uses the drop profile **dp-nc** for low loss-priority traffic and the default drop profile for medium-high and high loss priority traffic.
- The scheduler map **gd-map** was created and has these properties:
  - There are two schedulers, **fcoe-sched** and **nl-sched**.
  - The scheduler **fcoe-sched** has one forwarding class, **fcoe**.

- The **fcoe** forwarding class has a minimum guaranteed bandwidth of **2,500,000,000 bps**, and can consume a maximum of **100 percent** of the priority group bandwidth.
- The scheduler **nl-sched** has one forwarding class, **no-loss**.
- The **no-loss** forwarding class has a minimum guaranteed bandwidth of **2,000,000,000 bps**, and can consume a maximum of **100 percent** of the priority group bandwidth.
- The scheduler map **hpc-map** was created and has these properties:
  - There is one scheduler, **hpc-sched**.
  - The scheduler **hpc-sched** has one forwarding class, **hpc**.
  - The **hpc** forwarding class has a minimum guaranteed bandwidth of **2,000,000,000 bps**, can consume a maximum of **100 percent** of the priority group bandwidth, and uses the drop profile **dp-hpc** for low loss-priority traffic and the default drop profile for medium-high and high loss-priority traffic.

---

### Verifying the Drop Profiles

**Purpose** Verify that you created the drop profiles **dp-be-high**, **dp-be-low**, **dp-hpc**, and **dp-nc** with the correct fill levels and drop probabilities.

**Action** List the drop profiles using the operational mode command **show configuration class-of-service drop-profiles**:

```
user@switch> show configuration class-of-service drop-profiles
dp-be-low {
    interpolate {
        fill-level [ 25 50 ];
        drop-probability [ 0 80 ];
    }
}
dp-be-high {
    interpolate {
        fill-level [ 10 40 ];
        drop-probability [ 0 100 ];
    }
}
dp-hpc {
    interpolate {
        fill-level [ 75 90 ];
        drop-probability [ 0 75 ];
    }
}
dp-nc {
    interpolate {
        fill-level [ 80 100 ];
        drop-probability [ 0 100 ];
    }
}
```

**Meaning** The **show configuration class-of-service drop-profiles** command lists the drop profiles and their properties. The command output shows that there are four drop profiles configured, **dp-be-high**, **dp-be-low**, **dp-hpc**, and **dp-nc**. The output also shows that:

- For **dp-be-low**, the drop start point (the first fill level) is when the queue is 25 percent filled, the drop end point (the second fill level) occurs when the queue is 50 percent filled, and the drop probability at the drop end point is 80 percent.
- For **dp-be-high**, the drop start point (the first fill level) is when the queue is 10 percent filled, the drop end point (the second fill level) occurs when the queue is 40 percent filled, and the drop probability at the drop end point is 100 percent.
- For **dp-hpc**, the drop start point (the first fill level) is when the queue is 75 percent filled, the drop end point (the second fill level) occurs when the queue is 90 percent filled, and the drop probability at the drop end point is 75 percent.
- For **dp-nc**, the drop start point (the first fill level) is when the queue is 80 percent filled, the drop end point (the second fill level) occurs when the queue is 100 percent filled, and the drop probability at the drop end point is 100 percent.

### Verifying the Priority Group Output Schedulers (Traffic Control Profiles)

<b>Purpose</b>	Verify that you created the traffic control profiles <b>be-tcp</b> , <b>gd-tcp</b> , and <b>hpc-tcp</b> with the correct bandwidth parameters and scheduler mapping.
<b>Action</b>	<p>List the traffic control profiles using the operational mode command <b>show class-of-service traffic-control-profile</b>:</p> <pre> user@switch&gt; show class-of-service traffic-control-profile Traffic control profile: be-tcp, Index: 40535   Shaping rate: 100 percent   Scheduler map: be-map   Guaranteed rate: 3500000000  Traffic control profile: gd-tcp, Index: 37959   Shaping rate: 100 percent   Scheduler map: gd-map   Guaranteed rate: 4500000000  Traffic control profile: hpc-tcp, Index: 47661   Shaping rate: 100 percent   Scheduler map: hpc-map   Guaranteed rate: 2000000000 </pre>
<b>Meaning</b>	<p>The <b>show class-of-service traffic-control-profile</b> command lists all of the configured traffic control profiles. For each traffic control profile, the command output includes:</p> <ul style="list-style-type: none"> <li>• The name of the traffic control profile (<b>traffic-control-profile</b>)</li> <li>• The maximum port bandwidth the priority group can consume (<b>shaping-rate</b>)</li> <li>• The scheduler map associated with the traffic control profile (<b>scheduler-map</b>)</li> <li>• The minimum guaranteed priority group port bandwidth (<b>guaranteed-rate</b>)</li> </ul> <p>The command output shows that:</p> <ul style="list-style-type: none"> <li>• The traffic control profile <b>be-tcp</b> can consume a maximum of <b>100 percent</b> of the port bandwidth, is associated with the scheduler map <b>be-map</b>, and has a minimum guaranteed bandwidth of <b>3,500,000,000 bps</b>.</li> </ul>

- The traffic control profile **gd-tcp** can consume a maximum of **100 percent** of the port bandwidth, is associated with the scheduler map **gd-map**, and has a minimum guaranteed bandwidth of **4,500,000,000 bps**.
- The traffic control profile **hpc-tcp** can consume a maximum of **100 percent** of the port bandwidth, is associated with the scheduler map **hpc-map**, and has a minimum guaranteed bandwidth of **2,000,000,000 bps**.

### Verifying the Interface Configuration

---

**Purpose** Verify that the classifier, the congestion notification profile, and the forwarding class sets are configured on interfaces **xe-0/0/20** and **xe-0/0/21**.

**Action** List the interfaces using the operational mode commands **show configuration class-of-service interfaces xe-0/0/20** and **show configuration class-of-service interfaces xe-0/0/21**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/20
forwarding-class-set {
    best-effort-gp {
        output-traffic-control-profile be-tcp;
    }
    guar-delivery-pg {
        output-traffic-control-profile gd-tcp;
    }
    hpc-pg {
        output-traffic-control-profile hpc-tcp;
    }
}
congestion-notification-profile gd_cnp;
unit 0 {
    classifiers {
        ieee-802.1 hsclassifier1;
    }
}
```

```
user@switch> show configuration class-of-service interfaces xe-0/0/21
forwarding-class-set {
    best-effort-gp {
        output-traffic-control-profile be-tcp;
    }
    guar-delivery-pg {
        output-traffic-control-profile gd-tcp;
    }
    hpc-pg {
        output-traffic-control-profile hpc-tcp;
    }
}
congestion-notification-profile gd_cnp;
unit 0 {
    classifiers {
        ieee-802.1 hsclassifier1;
    }
}
```



<b>Meaning</b>	The <b>show configuration class-of-service interfaces</b> <i>interface-name</i> command shows that each interface includes the forwarding class sets <b>best-effort-pg</b> , <b>guar-delivery-pg</b> , and <b>hpc-pg</b> , congestion notification profile <b>gd-cnp</b> , and the IEEE 802.1p classifier <b>hsclassifier1</b> .
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Defining CoS Unicast BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p)</a></li><li>• <a href="#">Benefits of Configuring CoS Hierarchical Port Scheduling</a></li><li>• <a href="#">Assigning CoS Components to Interfaces on page 23</a></li><li>• <a href="#">Example: Configuring WRED Drop Profiles</a></li><li>• <a href="#">Example: Configuring Drop Profile Maps on page 213</a></li><li>• <a href="#">Example: Configuring Forwarding Classes</a></li><li>• <a href="#">Example: Configuring Forwarding Class Sets on page 93</a></li><li>• <a href="#">Example: Configuring Queue Schedulers</a></li><li>• <a href="#">Example: Configuring Queue Scheduling Priority on page 149</a></li><li>• <a href="#">Example: Configuring Traffic Control Profiles (Priority Group Scheduling) on page 158</a></li><li>• <a href="#">Example: Configuring Minimum Guaranteed Output Bandwidth on page 194</a></li><li>• <a href="#">Example: Configuring Maximum Output Bandwidth on page 201</a></li><li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li><li>• <a href="#">Overview of CoS Changes Introduced in Junos OS Release 12.2</a></li><li>• <a href="#">Understanding CoS Hierarchical Port Scheduling (ETS) on page 161</a></li><li>• <a href="#">Understanding CoS Scheduling Behavior and Configuration Considerations on page 114</a></li><li>• <a href="#">Understanding CoS Scheduling on QFabric System Node Device Fabric (fte) Ports</a></li><li>• <a href="#">Understanding Default CoS Scheduling on QFabric System Interconnect Devices (Junos OS Release 13.1 and Later Releases)</a></li></ul>

---

## Understanding CoS Priority Group and Queue Guaranteed Minimum Bandwidth

You can set a guaranteed minimum bandwidth for individual forwarding classes (queues) and for groups of forwarding classes called *forwarding class sets* (priority groups). Setting a minimum guaranteed bandwidth ensures that priority groups and queues receive the bandwidth required to support the expected traffic.

This topic covers:

- [Guaranteeing Bandwidth Using Hierarchical Scheduling on page 192](#)
- [Priority Group Guaranteed Rate \(Guaranteed Minimum Bandwidth\) on page 193](#)
- [Queue Transmit Rate \(Guaranteed Minimum Bandwidth\) on page 193](#)

## Guaranteeing Bandwidth Using Hierarchical Scheduling


The **guaranteed-rate** value for the priority group (configured in a traffic control profile) defines the minimum amount of bandwidth allocated to a forwarding class set on a port, whereas the **transmit-rate** value of the queue (configured in a scheduler) defines the minimum amount of bandwidth allocated to a particular queue in a priority group. The queue bandwidth is a portion of the priority group bandwidth.



**NOTE:** You cannot configure a minimum guaranteed bandwidth (transmit rate) for a forwarding class that is mapped to a strict-high priority queue, and you cannot configure a minimum guaranteed bandwidth (guaranteed rate) for a priority group that includes strict-high priority queues.

Figure 15 on page 192 shows how the total port bandwidth is allocated to priority groups (forwarding class sets) based on the guaranteed rate of each priority group. It also shows how the guaranteed bandwidth of each priority group is allocated to the queues in the priority group based on the transmit rate of each queue.

**Figure 15: Allocating Guaranteed Bandwidth Using Hierarchical Scheduling**

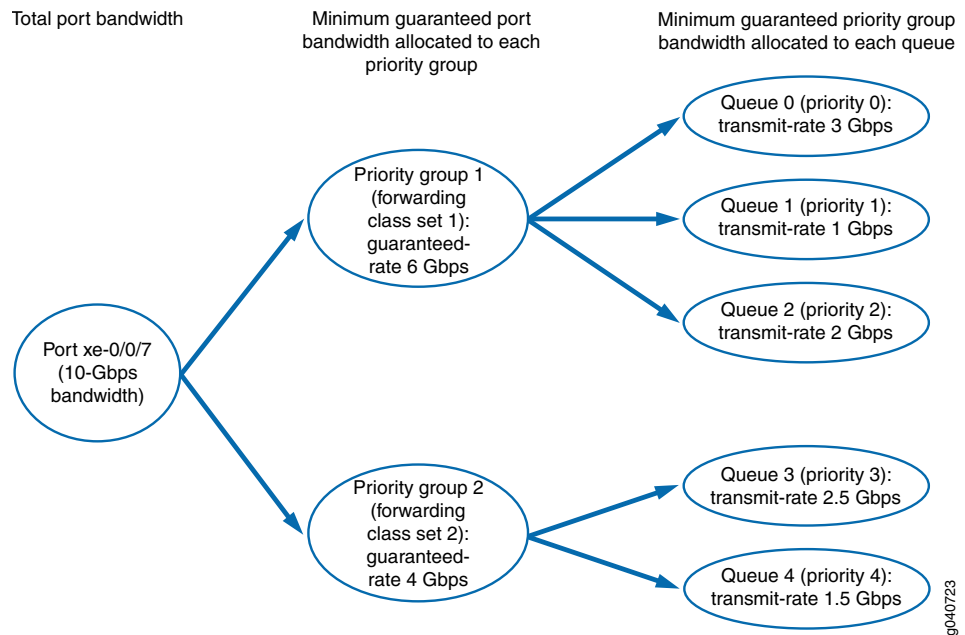

The sum of the priority group guaranteed rates cannot exceed the total port bandwidth. If you configure guaranteed rates whose sum exceeds the port bandwidth, the system sends a syslog message to notify you that the configuration is not valid. However, the system does not perform a commit check. If you commit a configuration in which the sum of the guaranteed rates exceeds the port bandwidth, the hierarchical scheduler behaves unpredictably.

The sum of the queue transmit rates cannot exceed the total guaranteed rate of the priority group to which the queues belong. If you configure transmit rates whose sum

exceeds the priority group guaranteed rate, the commit check fails and the system rejects the configuration.



**NOTE:** You must set both the priority group **guaranteed-rate** value and the queue **transmit-rate** value in order to configure the minimum bandwidth for individual queues. If you set the **transmit-rate** value but do not set the **guaranteed-rate** value, the configuration fails.

You can set the **guaranteed-rate** value for a priority group without setting the **transmit-rate** value for individual queues in the priority group. However, queues that do not have a configured **transmit-rate** value can become starved for bandwidth if other higher-priority queues need the priority group's bandwidth. To avoid starving a queue, it is a good practice to configure a **transmit-rate** value for most queues.

If you configure the guaranteed rate of a priority group as a percentage, configure all of the transmit rates associated with that priority group as percentages. In this case, if any of the transmit rates are configured as absolute values instead of percentages, the configuration is not valid and the system sends a syslog message.

---

## Priority Group Guaranteed Rate (Guaranteed Minimum Bandwidth)

Setting a priority group (forwarding class set) **guaranteed-rate** enables you to reserve a portion of the port bandwidth for the forwarding classes (queues) in that forwarding class set. The minimum bandwidth (**guaranteed-rate**) that you configure for a priority group sets the minimum bandwidth available to all of the forwarding classes in the forwarding class set.

The combined **guaranteed-rate** value of all of the forwarding class sets associated with an interface cannot exceed the amount of bandwidth available on that interface.

You configure the priority group **guaranteed-rate** in the traffic control profile. You cannot apply a traffic control profile that has a guaranteed rate to a priority group that includes a strict-high priority queue.

## Queue Transmit Rate (Guaranteed Minimum Bandwidth)

Setting a queue (forwarding class) **transmit-rate** enables you to reserve a portion of the priority group bandwidth for the individual queue. For example, a queue that handles Fibre Channel over Ethernet (FCoE) traffic might require a minimum rate of 4 Gbps to ensure the class of service that storage area network (SAN) traffic requires.

The priority group **guaranteed-rate** sets the aggregate minimum amount of bandwidth available to the queues that belong to the priority group. The cumulative total minimum bandwidth the queues consume cannot exceed the minimum bandwidth allocated to the priority group to which they belong. (The combined transmit rates of the queues in a priority group cannot exceed the priority group's guaranteed rate.)

You must configure the **guaranteed-rate** value of the priority group in order to set a **transmit-rate** value for individual queues that belong to the priority group. The reason is that if there is no guaranteed bandwidth for a priority group, there is no way to guarantee bandwidth for queues in that priority group.

You configure the queue **transmit-rate** in the scheduler configuration. You cannot configure a transmit rate for a strict-high priority queue.

#### Related Documentation

- [Understanding CoS Output Queue Schedulers](#)
- [Understanding CoS Traffic Control Profiles on page 153](#)
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
- [Defining CoS Queue Schedulers](#)
- [Defining CoS Traffic Control Profiles \(Priority Group Scheduling\) on page 157](#)

---

## Example: Configuring Minimum Guaranteed Output Bandwidth

Scheduling the minimum guaranteed output bandwidth for a queue (forwarding class) requires configuring both tiers of the two-tier hierarchical scheduler. One tier is scheduling the resources for the individual queue. The other tier is scheduling the resources for the priority group (forwarding class set) to which the queue belongs. You set a minimum guaranteed bandwidth to ensure that priority groups and queues receive the bandwidth required to support the expected traffic.

- [Requirements on page 194](#)
- [Overview on page 194](#)
- [Configuring Guaranteed Minimum Bandwidth on page 196](#)
- [Verification on page 197](#)

### Requirements

This example uses the following hardware and software components:

- A Juniper Networks QFX3500 Switch
- Junos OS Release 11.1 or later for the QFX Series or Junos OS Release 14.1X53-D20 or later for the OCX Series

### Overview

The priority group minimum guaranteed bandwidth defines the minimum total amount of bandwidth available for all of the queues in the priority group to meet their minimum bandwidth requirements.

The **transmit-rate** setting in the scheduler configuration determines the minimum guaranteed bandwidth for an individual queue. The transmit rate also determines the

amount of excess (extra) priority group bandwidth that the queue can share. Extra priority group bandwidth is allocated among the queues in the priority group in proportion to the transmit rate of each queue.

The **guaranteed-rate** setting in the traffic control profile configuration determines the minimum guaranteed bandwidth for a priority group. The guaranteed rate also determines the amount of excess (extra) port bandwidth that the priority group can share. Extra port bandwidth is allocated among the priority groups on a port in proportion to the guaranteed rate of each priority group.



**NOTE:** You must configure both the **transmit-rate** value for the queue and the **guaranteed-rate** value for the priority group to set a valid minimum bandwidth guarantee for a queue. (If the priority group does not have a guaranteed minimum bandwidth, there is no guaranteed bandwidth pool from which the queue can take its guaranteed minimum bandwidth.)

The sum of the queue transmit rates in a priority group should not exceed the guaranteed rate for the priority group. (You cannot guarantee a minimum bandwidth for the queues that is greater than the minimum bandwidth guaranteed for the entire set of queues.)



**NOTE:** When you configure bandwidth for a queue or a priority group, the switch considers only the data as the configured bandwidth. The switch does not account for the bandwidth consumed by the preamble and the interframe gap (IFG). Therefore, when you calculate and configure the bandwidth requirements for a queue or for a priority group, consider the preamble and the IFG as well as the data in the calculations.



**NOTE:** You cannot configure minimum guaranteed bandwidth on strict-high priority queues or on a priority group that contains strict-high priority queues.

This example describes how to:

- Configure a transmit rate (minimum guaranteed queue bandwidth) of 2 Gbps for queues in a scheduler named **be-sched**.
- Configure a guaranteed rate (minimum guaranteed priority group bandwidth) of 4 Gbps for a priority group in a traffic control profile named **be-tcp**.
- Assign the scheduler to a queue named **best-effort** by using a scheduler map named **be-map**.
- Associate the scheduler map **be-map** with the traffic control profile **be-tcp**.
- Assign the queue **best-effort** to a priority group named **be-pg**.
- Assign the priority group and the minimum guaranteed bandwidth scheduling to the egress interface **xe-0/0/7**.

Table 54 on page 196 shows the configuration components for this example:

**Table 54: Components of the Minimum Guaranteed Output Bandwidth Configuration Example**

Component	Settings
Hardware	QFX3500 switch
Minimum guaranteed queue bandwidth	Transmit rate: <b>2g</b>
Minimum guaranteed priority group bandwidth	Guaranteed rate: <b>4g</b>
Scheduler	<b>be-sched</b>
Scheduler map	<b>be-map</b>
Traffic control profile	<b>be-tcp</b>
Forwarding class set (priority group)	<b>be-pg</b>
Queue (forwarding class)	<b>best-effort</b>
Egress interface	<b>xe-0/0/7</b>

## Configuring Guaranteed Minimum Bandwidth

**CLI Quick Configuration** To quickly configure the minimum guaranteed bandwidth for a priority group and a queue, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level:

```
[edit class-of-service]
set schedulers be-sched transmit-rate percent 2g
set traffic-control-profiles be-tcp guaranteed-rate 4g
set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
set traffic-control-profiles be-tcp scheduler-map be-map
set forwarding-class-sets be-pg class best-effort
set interfaces xe-0/0/7 forwarding-class-set be-pg output-traffic-control-profile be-tcp
```

To configure the minimum guaranteed bandwidth hierarchical scheduling for a queue and a priority group:

1. Configure the minimum guaranteed queue bandwidth of 2 Gbps for scheduler **be-sched**:

```
[edit class-of-service schedulers]
user@switch# set be-sched transmit-rate 2g
```

2. Configure the minimum guaranteed priority group bandwidth of 4 Gbps for traffic control profile **be-tcp**:

```
[edit class-of-service traffic-control-profiles]
user@switch# set be-tcp guaranteed-rate 4g
```

3. Associate the scheduler **be-sched** with the **best-effort** queue in the scheduler map **be-map**:

```
[edit class-of-service scheduler-maps]
user@switch# set be-map forwarding-class best-effort scheduler be-sched
```

4. Associate the scheduler map with the traffic control profile:

```
[edit class-of-service traffic-control-profiles]
user@switch# set be-tcp scheduler-map be-map
```

5. Assign the **best-effort** queue to the priority group **be-pg**:

```
[edit class-of-service forwarding-class-sets]
user@switch# set be-pg class best-effort
```

6. Apply the configuration to interface **xe-0/0/7**:

```
[edit class-of-service interfaces]
user@switch# set xe-0/0/7 forwarding-class-set be-pg output-traffic-control-profile be-tcp
```

## Verification

To verify the minimum guaranteed output bandwidth configuration, perform these tasks:

- [Verifying the Minimum Guaranteed Queue Bandwidth on page 197](#)
- [Verifying the Priority Group Minimum Guaranteed Bandwidth and Scheduler Map Association on page 197](#)
- [Verifying the Scheduler Map Configuration on page 198](#)
- [Verifying Queue \(Forwarding Class\) Membership in the Priority Group on page 198](#)
- [Verifying the Egress Interface Configuration on page 198](#)

### Verifying the Minimum Guaranteed Queue Bandwidth

**Purpose** Verify that you configured the minimum guaranteed queue bandwidth as **2g** in the scheduler **be-sched**.

**Action** Display the minimum guaranteed bandwidth in the **be-sched** scheduler configuration using the operational mode command **show configuration class-of-service schedulers be-sched transmit-rate**:

```
user@switch> show configuration class-of-service schedulers be-sched transmit-rate
2g;
```

### Verifying the Priority Group Minimum Guaranteed Bandwidth and Scheduler Map Association

**Purpose** Verify that the minimum guaranteed priority group bandwidth is **4g** and the attached scheduler map is **be-map** in the traffic control profile **be-tcp**.

**Action** Display the minimum guaranteed bandwidth in the **be-tcp** traffic control profile configuration using the operational mode command **show configuration class-of-service traffic-control-profiles be-tcp guaranteed-rate**:

```
user@switch> show configuration class-of-service traffic-control-profiles be-tcp guaranteed-rate
4g;
```

Display the scheduler map in the **be-tcp** traffic control profile configuration using the operational mode command **show configuration class-of-service traffic-control-profiles be-tcp scheduler-map**:

```
user@switch> show configuration class-of-service traffic-control-profiles be-tcp scheduler-map
```

```
scheduler-map be-map;
```

---

### Verifying the Scheduler Map Configuration

---

**Purpose** Verify that the scheduler map **be-map** maps the forwarding class **best-effort** to the scheduler **be-sched**.

**Action** Display the **be-map** scheduler map configuration using the operational mode command **show configuration class-of-service schedulers maps be-map**:

```
user@switch> show configuration class-of-service scheduler-maps be-map
forwarding-class best-effort scheduler be-sched;
```

---

### Verifying Queue (Forwarding Class) Membership in the Priority Group

---

**Purpose** Verify that the forwarding class set **be-pg** includes the forwarding class **best-effort**.

**Action** Display the **be-pg** forwarding class set configuration using the operational mode command **show configuration class-of-service forwarding-class-sets be-pg**:

```
user@switch> show configuration class-of-service forwarding-class-sets be-pg
class best-effort;
```

---

### Verifying the Egress Interface Configuration

---

**Purpose** Verify that the forwarding class set **be-pg** and the traffic control profile **be-tcp** are attached to egress interface **xe-0/0/7**.

**Action** Display the egress interface using the operational mode command **show configuration class-of-service interfaces xe-0/0/7**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/7
forwarding-class-set {
    be-pg {
        output-traffic-control-profile be-tcp;
    }
}
```

- Related Documentation**
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
  - [Example: Configuring Queue Schedulers](#)
  - [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
  - [Example: Configuring Queue Scheduling Priority on page 149](#)
  - [Example: Configuring Forwarding Class Sets on page 93](#)
  - [Understanding CoS Traffic Control Profiles on page 153](#)
  - [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)



## Understanding CoS Priority Group Shaping and Queue Shaping (Maximum Bandwidth)

If the amount of traffic on an interface exceeds the maximum bandwidth available on the interface, it leads to congestion. You can use priority group (forwarding class set) shaping and queue (forwarding class) shaping to manage traffic and avoid congestion.

Configuring a maximum bandwidth sets the most bandwidth a priority group or a queue can use after all of the priority group and queue minimum bandwidth requirements are met, even if more bandwidth is available.

This topic covers:

- [Priority Group Shaping on page 199](#)
- [Queue Shaping on page 199](#)
- [Shaping Maximum Bandwidth Using Hierarchical Scheduling on page 200](#)

### Priority Group Shaping

Priority group shaping enables you to shape the aggregate traffic of a forwarding class set on a port to a maximum rate that is less than the line or port rate. The maximum bandwidth (**shaping-rate**) that you configure for a priority group sets the maximum bandwidth available to all of the forwarding classes (queues) in the forwarding class set.

If a port has more than one priority group and the combined **shaping-rate** value of the priority groups is greater than the amount of port bandwidth available, the bandwidth is shared proportionally among the priority groups.

You configure the priority group **shaping-rate** in the traffic control profile.

### Queue Shaping

Queue shaping throttles the rate at which queues transmit packets. For example, using queue shaping, you can rate-limit a strict-high priority queue so that the strict-priority queue does not lock out (or starve) low-priority queues.



**NOTE:** We recommend that you always apply a shaping rate to strict-high priority queues to prevent them from starving other queues. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.

Similarly, for any queue, you can configure queue shaping (**shaping-rate**) to set the maximum bandwidth for a particular queue.

The **shaping-rate** value of the priority group sets the aggregate maximum amount of bandwidth available to the queues that belong to the priority group. On a port, the cumulative total bandwidth the queues consume cannot exceed the maximum bandwidth of the priority group to which they belong.

If a priority group has more than one queue, and the combined **shaping-rate** of the queues is greater than the amount of bandwidth available to the priority group, the bandwidth is shared proportionally among the queues.


You configure the queue **shaping-rate** in the scheduler configuration, and you set the **shaping-rate** for priority groups in the traffic control profile configuration.

## Shaping Maximum Bandwidth Using Hierarchical Scheduling

Priority group shaping defines the maximum bandwidth allocated to a forwarding class set on a port, whereas queue shaping defines a limit on maximum bandwidth usage per queue. The queue bandwidth is a portion of the priority group bandwidth.

Figure 16 on page 200 shows how the port bandwidth is allocated to priority groups (forwarding class sets) based on the shaping rate of each priority group, and how the bandwidth of each priority group is allocated to the queues in the priority group based on the shaping rate of each queue.

**Figure 16: Setting Maximum Bandwidth Using Hierarchical Scheduling**

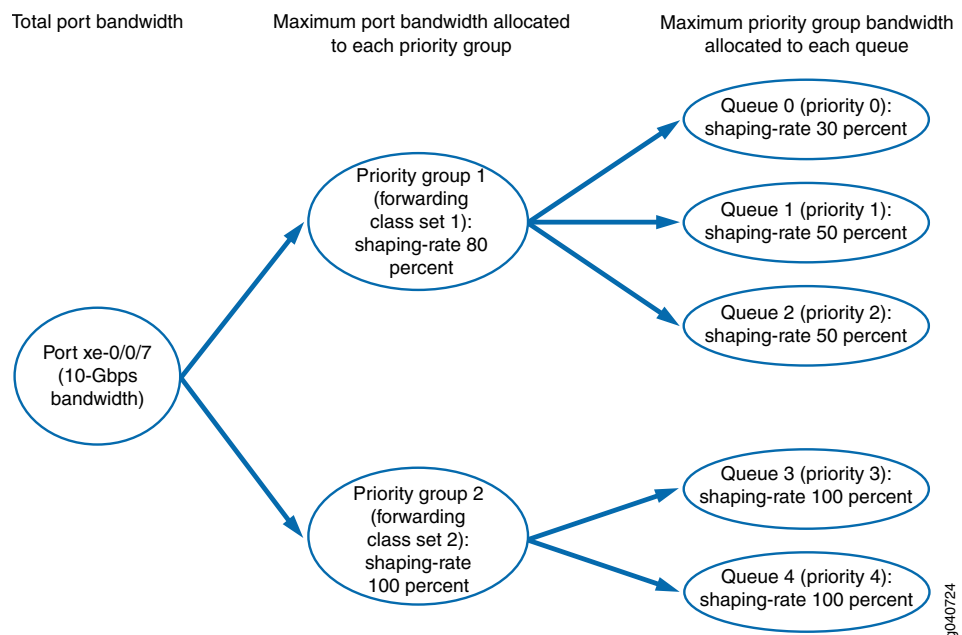

- Related Documentation**
- [Understanding CoS Output Queue Schedulers](#)
  - [Understanding CoS Traffic Control Profiles on page 153](#)
  - [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
  - [Example: Configuring Queue Schedulers](#)
  - [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
  - [Defining CoS Queue Schedulers](#)
  - [Defining CoS Traffic Control Profiles \(Priority Group Scheduling\) on page 157](#)

## Example: Configuring Maximum Output Bandwidth

---

Scheduling the maximum output bandwidth for a queue (forwarding class) requires configuring both tiers of the hierarchical scheduler. One tier is scheduling the resources for the individual queue. The other tier is scheduling the resources for the priority group (forwarding class set) to which the queue belongs. You can use priority group and queue shaping to prevent traffic from using more bandwidth than you want the traffic to receive.

- [Requirements on page 201](#)
- [Overview on page 201](#)
- [Configuring Maximum Bandwidth on page 202](#)
- [Verification on page 203](#)

### Requirements

This example uses the following hardware and software components:

- A Juniper Networks QFX3500 Switch
- Junos OS Release 11.1 or later for the QFX Series

### Overview

The priority group maximum bandwidth defines the maximum total amount of bandwidth available for all of the queues in the priority group.

The **shaping-rate** setting in the scheduler configuration determines the maximum bandwidth for an individual queue.

The **shaping-rate** setting in the traffic control profile configuration determines the maximum bandwidth for a priority group.



**NOTE:** When you configure bandwidth for a queue or a priority group, the switch considers only the data as the configured bandwidth. The switch does not account for the bandwidth consumed by the preamble and the interframe gap (IFG). Therefore, when you calculate and configure the bandwidth requirements for a queue or for a priority group, consider the preamble and the IFG as well as the data in the calculations.



**NOTE:** When you set the maximum bandwidth (**shaping-rate**) for a queue or for a priority group at 100 Kbps or less, the traffic shaping behavior is accurate only within +/- 20 percent of the configured shaping-rate value.

This example describes how to:

- Configure a maximum rate of 4 Gbps for queues in a scheduler named **be-sched**.
- Configure a maximum rate of 6 Gbps for a priority group in a traffic control profile named **be-tcp**.
- Assign the scheduler to a queue named **best-effort** by using a scheduler map named **be-map**.
- Associate the scheduler map **be-map** with the traffic control profile **be-tcp**.
- Assign the queue **best-effort** to a priority group named **be-pg**.
- Assign the priority group and the bandwidth scheduling to the interface **xe-0/0/7**.

Table 55 on page 202 shows the configuration components for this example:

**Table 55: Components of the Maximum Output Bandwidth Configuration Example**

Component	Settings
Hardware	QFX3500 switch
Maximum queue bandwidth	Shaping rate: <b>4g</b>
Maximum priority group bandwidth	Shaping rate: <b>6g</b>
Scheduler	<b>be-sched</b>
Scheduler map	<b>be-map</b>
Traffic control profile	<b>be-tcp</b>
Forwarding class set (priority group)	<b>be-pg</b>
Queue (forwarding class)	<b>best-effort</b>
Egress interface	<b>xe-0/0/7</b>

## Configuring Maximum Bandwidth

**CLI Quick Configuration** To quickly configure the maximum bandwidth for a priority group and a queue, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level:

```
[edit class-of-service]
set schedulers be-sched shaping-rate percent 4g
set traffic-control-profiles be-tcp shaping-rate 6g
set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
set traffic-control-profiles be-tcp scheduler-map be-map
set forwarding-class-sets be-pg class best-effort
set interfaces xe-0/0/7 forwarding-class-set be-pg output-traffic-control-profile be-tcp
```

To configure the maximum bandwidth hierarchical scheduling for a queue and a priority group:

1. Configure the maximum queue bandwidth of 4 Gbps for scheduler **be-sched**:

```
[edit class-of-service schedulers]
user@switch# set be-sched shaping-rate 4g
```

2. Configure the maximum priority group bandwidth of 6 Gbps for traffic control profile **be-tcp**:

```
[edit class-of-service traffic-control-profiles]
user@switch# set be-tcp shaping-rate 6g
```

3. Associate the scheduler **be-sched** with the **best-effort** queue in the scheduler map **be-map**:

```
[edit class-of-service scheduler-maps]
user@switch# set be-map forwarding-class best-effort scheduler be-sched
```

4. Associate the scheduler map with the traffic control profile:

```
[edit class-of-service traffic-control-profiles]
user@switch# set be-tcp scheduler-map be-map
```

5. Assign the **best-effort** queue to the priority group **be-pg**:

```
[edit class-of-service forwarding-class-sets]
user@switch# set be-pg class best-effort
```

6. Apply the configuration to interface **xe-0/0/7**:

```
[edit class-of-service interfaces]
user@switch# set xe-0/0/7 forwarding-class-set be-pg output-traffic-control-profile be-tcp
```

## Verification

To verify the maximum output bandwidth configuration, perform these tasks:

- [Verifying the Maximum Queue Bandwidth on page 203](#)
- [Verifying the Priority Group Maximum Bandwidth and Scheduler Map Association on page 203](#)
- [Verifying the Scheduler Map Configuration on page 204](#)
- [Verifying Queue \(Forwarding Class\) Membership in the Priority Group on page 204](#)
- [Verifying the Egress Interface Configuration on page 204](#)

### Verifying the Maximum Queue Bandwidth

**Purpose** Verify that you configured the maximum queue bandwidth as **4g** in the scheduler **be-sched**.

**Action** List the maximum bandwidth in the **be-sched** scheduler configuration using the operational mode command **show configuration class-of-service schedulers be-sched shaping-rate**:

```
user@switch> show configuration class-of-service schedulers be-sched shaping-rate
4g;
```

### Verifying the Priority Group Maximum Bandwidth and Scheduler Map Association

**Purpose** Verify that the maximum priority group bandwidth is **6g** and the attached scheduler map is **be-map** in the traffic control profile **be-tcp**.

**Action** List the maximum bandwidth in the **be-tcp** traffic control profile configuration using the operational mode command **show configuration class-of-service traffic-control-profiles be-tcp shaping-rate**:

```
user@switch> show configuration class-of-service traffic-control-profiles be-tcp shaping-rate
4g;
```

List the scheduler map in the **be-tcp** traffic control profile configuration using the operational mode command **show configuration class-of-service traffic-control-profiles be-tcp scheduler-map**:

```
user@switch> show configuration class-of-service traffic-control-profiles be-tcp scheduler-map
scheduler-map be-map;
```

---

### Verifying the Scheduler Map Configuration

**Purpose** Verify that the scheduler map **be-map** maps the forwarding class **best-effort** to the scheduler **be-sched**.

**Action** List the **be-map** scheduler map configuration using the operational mode command **show configuration class-of-service schedulers maps be-map**:

```
user@switch> show configuration class-of-service scheduler-maps be-map
forwarding-class best-effort scheduler be-sched;
```

---

### Verifying Queue (Forwarding Class) Membership in the Priority Group

**Purpose** Verify that the forwarding class set **be-pg** includes the forwarding class **best-effort**.

**Action** List the **be-pg** forwarding class set configuration using the operational mode command **show configuration class-of-service forwarding-class-sets be-pg**:

```
user@switch> show configuration class-of-service forwarding-class-sets be-pg
class best-effort;
```

---

### Verifying the Egress Interface Configuration

**Purpose** Verify that the forwarding class set **be-pg** and the traffic control profile **be-tcp** are attached to egress interface **xe-0/0/7**.

**Action** List the egress interface using the operational mode command **show configuration class-of-service interfaces xe-0/0/7**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/7
forwarding-class-set {
    be-pg {
        output-traffic-control-profile be-tcp;
    }
}
```

**Related Documentation**

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)

- [Example: Configuring Forwarding Class Sets on page 93](#)
- [Understanding CoS Traffic Control Profiles on page 153](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)

## Understanding CoS WRED Drop Profiles

---

When the number of packets queued is greater than the ability of the switch to empty an output queue, the queue requires a method for determining which packets to drop to relieve the congestion. Weighted random early detection (WRED) drop profiles define the drop probability of packets of different packet loss probabilities (PLPs) as the output queue fills. During periods of congestion, as the output queue fills, the switch drops incoming packets as determined by a drop profile, until the output queue becomes less congested.



**NOTE:** Do not apply drop profiles to lossless traffic (traffic that belongs to a forwarding class that has the no-loss drop attribute.). Lossless traffic uses priority-based flow control (PFC) to control congestion.

Depending on the drop probabilities, a drop profile can drop many packets long before the buffer becomes full, or it can drop only a few packets even if the buffer is almost full.

You configure drop profiles in the drop profile section of the class-of-service (CoS) configuration hierarchy. You apply drop profiles using a drop profile map in queue scheduler configuration. For each queue scheduler, you can configure separate drop profiles for each PLP (low, medium-high, and high). This enables you to treat traffic of different PLPs in different ways during periods of congestion.

Drop profiles define the meaning (packet drop action) of each PLP by setting different values for when to drop packets and the probability that packets will drop for each PLP.

You can configure a maximum of 32 drop profiles.

- [Drop Profile Parameters on page 205](#)
- [Default Drop Profile on page 206](#)
- [Packet Drop Method on page 207](#)
- [Drop Profile Maps on page 207](#)
- [Congestion Prevention on page 207](#)
- [Configuring a WRED Drop Profile and Applying it to an Output Queue on page 207](#)
- [Drop Profiles on Explicit Congestion Notification Enabled Queues on page 208](#)

### Drop Profile Parameters

Drop profiles specify two values, which work as pairs:

- **Fill level**—The queue fullness value, which represents a percentage of the memory used to store packets in relation to the total amount of memory allocated to the queue.

- Drop probability—The percentage value that corresponds to the likelihood that an individual packet is dropped.

Each queue fill level pairs with a drop probability. As the queue fills to different levels, every time it reaches a fill level configured in a drop profile, the queue applies the drop probability paired with that fill level to the traffic in the queue that exceeds the fill level. You can configure up to 32 pairs of fill levels and drop probabilities to create a customized packet drop probability curve with up to 32 points of differentiation.

Packets are not dropped until they reach the first configured queue fill level. When the queue reaches the first fill level, packets begin to drop at the configured drop probability rate paired with the first fill level. When the queue reaches the second fill level, packets begin to drop at the configured drop probability rate paired with the second fill level. This process continues for the number of fill level/drop probability pairs that you configure in the drop profile.

Drop profiles are interpolated, not segmented. An interpolated drop profile gradually increases the drop probability along a curve between each configured fill level. When the queue reaches the next fill level, the drop probability reaches the drop probability paired with that fill level. A segmented drop profile “jumps” from one fill level/drop probability setting to another in a stepped fashion. The drop probability of traffic does not change as the queue fills until the next fill level is reached.

An example of interpolation is a drop profile with three fill level/drop probability pairs:

- 25 percent queue fill level paired with a 30 percent drop probability
- 50 percent queue fill level paired with a 60 percent drop probability
- 75 percent queue fill level paired with a 100 percent drop probability (all packets that exceed the 75 percent queue fill level are dropped)

The queue drops no packets until its fill level reaches 25 percent. During periods of congestion, when the queue fills above 25 percent full, the queue begins to drop packets at a rate of 30 percent of the packets above the fill level.

However, as the queue continues to fill, it does not continue to drop packets at the 30 percent drop probability. Instead, the drop probability gradually increases as the queue fills to the 50 percent fullness level. When the queue reaches the 50 percent fill level, the drop probability has increased to the configured drop probability pair for the fill level, which is 60 percent.

As the queue continues to fill, the drop probability does not remain at 60 percent, but continues to rise as the queue fills. When the queue reaches the final fill level at 75 percent full, the drop probability has risen to 100 percent and all packets that exceed the 75 percent fill level are dropped.

## Default Drop Profile

If you do not configure default profiles and apply them to queue schedulers, the switch uses the default drop profile for lossy traffic classes. In the default drop profile, when the fill level is 0 percent, the drop probability is 0 percent. When the fill level is 100 percent,



the drop probability is 100 percent. During periods of congestion, as soon as packets arrive on a queue, the default profile might begin to drop packets.

## Packet Drop Method

When a packet reaches the head of a queue, the switch calculates a random number between 0 and 100. The switch plots the random number against the drop profile using the current fill level of the queue. When the random number falls above the graph line, the queue transmits the packet out the egress interface. When the number falls below graph the line, the switch drops the packet.

## Drop Profile Maps

Drop profile maps are part of scheduler configuration. A drop profile map maps drop profiles to packet loss priorities. Specifying the drop profile map in a scheduler associates the drop profile with the forwarding classes (queues) that you map to the scheduler in a scheduler map.

You configure loss priority for a queue in the classifier section of the CoS configuration hierarchy, and the loss priority is applied to the traffic assigned to the forwarding class at the ingress interface.

Each scheduler can have multiple drop profile maps.

## Congestion Prevention

Configuring drop profiles on output queues enables you to control how congestion affects other queues on a port. If you do not configure drop profiles and map them to output queues, the switch uses the default drop profile on queues that forward lossy traffic.



**NOTE:** Do not configure drop profiles for the `fcoe` and `no-loss` forwarding classes. FCoE and other lossless traffic queues (traffic queues that are configured with the `no-loss` packet drop attribute) require lossless behavior. Use priority-based flow control (PFC) to prevent frame drop on lossless priorities.

## Configuring a WRED Drop Profile and Applying it to an Output Queue

To configure a WRED packet drop profile and apply it to an output queue:

1. Configure a drop profile using the statement **`set class-of-service drop-profiles profile-name interpolate fill-level level1 level2 ... level32 drop-probability probability1 probability2 ... probability32`**. You can specify as few as two fill level/drop probability pairs or as many as 32 pairs.
2. Map the drop profile to a queue scheduler using the statement **`set class-of-service schedulers scheduler-name drop-profile-map loss-priority (low | medium-high | high) protocol any drop-profile profile-name`**. The name of the drop-profile is the name of the WRED profile configured in Step 1.

3. Map the scheduler, which Step 2 associates with the drop profile, to the output queue using the statement **set class-of-service scheduler-maps *map-name* forwarding-class *forwarding-class-name* scheduler *scheduler-name***. The forwarding class identifies the output queue. Forwarding classes are mapped to output queues by default, and can be remapped to different queues by explicit user configuration. The scheduler name is the scheduler configured in Step 2.
4. Associate the scheduler map with an interface using the statement **set class-of-service interfaces *interface-name* scheduler-map *scheduler-map-name***.

The interface uses the scheduler map to apply the drop profile (and other attributes) to the output queue mapped to the forwarding class on that interface. Because you can use different scheduler maps on different interfaces, the same queue number on different interfaces can handle traffic in different ways.

## Drop Profiles on Explicit Congestion Notification Enabled Queues

You must configure a WRED drop profile on queues that you enable for explicit congestion notification (ECN). On ECN-enabled queues, the drop profile sets the threshold for when the queue should mark a packet as experiencing congestion (see [“Understanding CoS Explicit Congestion Notification” on page 216](#)). When a queue fills to the level at which the WRED drop profile has a packet drop probability greater than zero (0), the switch might mark a packet as experiencing congestion. Whether or not a switch marks a packet as experiencing congestion is the same probability as the drop probability of the queue at that fill level.

On ECN-enabled queues, the switch does not use the drop profile to control dropping packets that are not ECN-capable packets (packets marked non-ECT, ECN code bits 00) during periods of congestion. Instead, the switch uses the tail-drop algorithm to drop non-ECT-capable packets during periods of congestion. When a queue fills to its maximum level of fullness, tail-drop simply drops all subsequently arriving packets until there is space in the queue to buffer more packets. All non-ECT-capable packets are treated the same way.

To apply a WRED drop profile to non-ECT traffic, configure a multifield (MF) classifier to assign non-ECT traffic to a different output queue that is not ECN-enabled, and then apply the WRED drop profile to that queue.

### Related Documentation

- [Understanding Junos CoS Components on page 17](#)
- [Understanding CoS Explicit Congestion Notification on page 216](#)
- [Example: Configuring WRED Drop Profiles on page 210](#)
- [Example: Configuring Drop Profile Maps on page 213](#)
- [Example: Configuring Classifiers on page 53](#)

## Configuring CoS WRED Drop Profiles

You can configure an interpolated weighted random early detection (WRED) profile to control traffic congestion by controlling packet drop characteristics for different packet loss priorities.



**NOTE:** Do not enable WRED on lossless traffic flows (forwarding classes configured with the no-loss packet drop attribute). Use priority-based flow control (PFC) to prevent packet loss on lossless forwarding classes.

Drop profiles specify two values, which work as pairs:

- Fill level—The queue fullness value, which represents a percentage of the memory used to store packets in relation to the total amount of memory allocated to the queue.
- Drop probability—The percentage value that corresponds to the likelihood that an individual packet is dropped.

Each queue fill level pairs with a drop probability. As the queue fills to different levels, every time it reaches a fill level configured in a drop profile, the queue applies the drop probability paired with that fill level to the traffic in the queue that exceeds the fill level. You can configure up to 32 pairs of fill levels and drop probabilities to create a customized packet drop probability curve with up to 32 points of differentiation.

Packets are not dropped until they reach the first configured queue fill level. When the queue reaches the first fill level, packets begin to drop at the configured drop probability rate paired with the first fill level. When the queue reaches the second fill level, packets begin to drop at the configured drop probability rate paired with the second fill level. This process continues for the number of fill level/drop probability pairs that you configure in the drop profile.

Drop profiles are *interpolated*. An interpolated drop profile gradually increases the drop probability along a curve between each configured fill level. When the queue reaches the next fill level, the drop probability reaches the drop probability paired with that fill level.



**NOTE:** On ECN-enabled queues, the drop profile sets the threshold for when the queue should mark a packet as experiencing congestion (see [“Understanding CoS Explicit Congestion Notification” on page 216](#)). On ECN-enabled queues, the switch does not use the drop profile to control dropping packets that are not ECN-capable packets during periods of congestion. Instead, the switch uses the tail-drop algorithm to drop non-ECN-capable packets during periods of congestion. When a queue fills to its maximum level of fullness, tail-drop simply drops all subsequently arriving packets until there is space in the queue to buffer more packets. All non-ECN-capable packets are treated the same way.

To configure a WRED profile using the CLI:

Name the drop profile and set the fill levels and their associated drop probabilities as percentages. For every fill level, there must be a paired drop probability (you must configure the same number of fill levels and drop probabilities).

```
[edit class-of-service]
user@switch# set drop-profile drop-profile-name interpolate fill-level level1 level2 ... level32
drop-probability probability1 probability2 ... probability32
```

**Related  
Documentation**

- [Example: Configuring WRED Drop Profiles on page 210](#)
- [Defining CoS Queue Schedulers for Port Scheduling on page 138](#)
- [Configuring CoS Drop Profile Maps on page 213](#)
- [Understanding CoS WRED Drop Profiles on page 205](#)

---

## Example: Configuring WRED Drop Profiles

You can configure interpolated weighted random early detection (WRED) profiles to control congestion on best-effort traffic by controlling packet drop characteristics for different packet loss priorities.



**NOTE:** Do not enable WRED on lossless traffic flows. Use priority-based flow control (PFC) to prevent packet loss on lossless forwarding classes.

- [Requirements on page 210](#)
- [Overview on page 210](#)
- [Configuration on page 212](#)
- [Verification on page 212](#)

### Requirements

This example uses the following hardware and software components:

- One switch.
- Junos OS Release 15.1X53-D10 or later for the QFX Series.

### Overview

You associate WRED drop profiles with loss priorities in a scheduler. When you map the scheduler to a forwarding class (queue), you apply the interpolated drop profile to traffic of the specified loss priority on that queue. Drop profiles specify two values, which work as pairs:

- Fill level—The queue fullness value, which represents a percentage of the memory used to store packets in relation to the total amount of memory allocated to the queue.

- Drop probability—The percentage value that corresponds to the likelihood that an individual packet is dropped.

Each queue fill level pairs with a drop probability. As the queue fills to different levels, every time it reaches a fill level configured in a drop profile, the queue applies the drop probability paired with that fill level to the traffic in the queue that exceeds the fill level. You can configure up to 32 pairs of fill levels and drop probabilities to create a customized packet drop probability curve with up to 32 points of differentiation.

Packets are not dropped until they reach the first configured queue fill level. When the queue reaches the first fill level, packets begin to drop at the configured drop probability rate paired with the first fill level. When the queue reaches the second fill level, packets begin to drop at the configured drop probability rate paired with the second fill level. This process continues for the number of fill level/drop probability pairs that you configure in the drop profile.

Drop profiles are *interpolated*. An interpolated drop profile gradually increases the drop probability along a curve between each configured fill level. When the queue reaches the next fill level, the drop probability reaches the drop probability paired with that fill level.



**NOTE:** On ECN-enabled queues, the drop profile sets the threshold for when the queue should mark a packet as experiencing congestion (see [“Understanding CoS Explicit Congestion Notification” on page 216](#)). On ECN-enabled queues, the switch does not use the drop profile to control dropping packets that are not ECN-capable packets during periods of congestion. Instead, the switch uses the tail-drop algorithm to drop non-ECN-capable packets during periods of congestion. When a queue fills to its maximum level of fullness, tail-drop simply drops all subsequently arriving packets until there is space in the queue to buffer more packets. All non-ECN-capable packets are treated the same way.

This example describes how to configure a drop profile with three fill level/drop probability pairs:

- Drop profile name—**be-dp1**
- Queue fill levels—25 percent, 50 percent, 75 percent
- Drop probabilities—30 percent, 60 percent, 100 percent

Each of the three fill levels pairs with a drop probability to program the interpolated drop profile curve.

You apply a drop profile by configuring a drop profile map that maps the drop profile to a packet loss priority, and associate the drop profile and packet loss priority with a scheduler. When you map the scheduler to a forwarding class (queue), the switch applies the drop profile to the packets in the forwarding class that have a matching packet loss priority.

## Configuration

To configure a drop profile:

1. Set the drop start point at a **25** percent fill level, an intermediate fill level of **50** percent, and a drop end point of **75** percent. Set the paired drop probabilities to **30** percent, **60** percent, and **100** percent, respectively, for drop profile **be-dp1**:

[edit **class-of-service**]

```
user@switch# set drop-profile be-dp1 interpolate fill-level [ 25 50 75 ] drop-probability [ 30 60 100 ]
```

## Verification

---

### Verifying the Drop Profile Configuration

**Purpose** Verify that you configured the drop profile **be-dp1** with the correct fill levels and drop probabilities.

**Action** Verify the results of the drop profile configuration using the operational mode command **show configuration class-of-service drop-profiles be-dp1**:

```
user@switch> show configuration class-of-service drop-profiles be-dp1
interpolate {
    fill-level [ 25 50 75 ];
    drop-probability [ 30 60 100 ];
}
```

**Related Documentation**

- [Example: Configuring Queue Schedulers for Port Scheduling on page 140](#)
- [Example: Configuring Drop Profile Maps on page 213](#)
- [Configuring CoS WRED Drop Profiles on page 209](#)
- [Understanding CoS WRED Drop Profiles on page 205](#)

## Configuring CoS Drop Profile Maps

A drop-profile map associates weighted random early detection (WRED) profiles for traffic of specified packet loss priorities with a scheduler. When you use a scheduler map to map a scheduler to a forwarding class, the drop profile map associated with the scheduler applies the specified WRED drop profile to traffic in the forwarding class that matches the specified packet loss priority.

Drop profile maps enable you to configure different drop profiles for traffic of different packet loss priorities within the same scheduler. You can associate different drop profiles with low-priority, medium-high priority, and high-priority traffic within a single scheduler, and then map that scheduler to a forwarding class. This applies the appropriate drop profile to traffic of each loss priority in a forwarding class. Drop profile maps apply to all traffic protocols.

To configure a drop-profile map:

- For the desired scheduler, configure the traffic loss priority and specify the drop profile you want to use to control the drop characteristics for traffic of that loss priority:

```
[edit class-of-service]
user@switch# set schedulers scheduler-name drop-profile-map loss-priority level protocol
any drop-profile drop-profile-name
```



**NOTE:** QFX10000 switches do not support the protocol any portion of the configuration. Drop profiles apply to all protocols.

## Example: Configuring Drop Profile Maps

A drop-profile map associates a tail-drop profile for traffic of a specified loss priority with a scheduler. When you use a scheduler map to map a scheduler to a forwarding class, the drop profile map associated with the scheduler applies the specified tail-drop profile to traffic in the forwarding class that matches the specified loss priority.

- [Requirements on page 213](#)
- [Overview on page 214](#)
- [Configuring a Drop Profile Map on page 214](#)
- [Verification on page 214](#)

### Requirements

This example uses the following hardware and software components:

- A Juniper Networks QFX3500 Switch
- Junos OS Release 11.1 or later for the QFX Series

## Overview

Drop profile maps enable you to configure different drop profiles for traffic of different loss priorities within the same scheduler. You can associate different drop profiles with low-priority, medium-high priority, and high-priority traffic within a single scheduler, and then map that scheduler to a forwarding class. This applies the appropriate drop profile to traffic of each loss priority in a forwarding class. Drop profile maps apply to all traffic protocols.

The following example describes how to configure a drop profile map for a scheduler named **mylan** that includes:

- A drop profile called **lp-profile** for low-priority traffic
- A drop profile called **mh-profile** for medium-high priority traffic
- A drop profile called **h-profile** for high-priority traffic

You apply the drop profiles in the drop profile map to a forwarding class by associating the scheduler **mylan** with a forwarding class in a scheduler map.

## Configuring a Drop Profile Map

To configure a drop profile map:

1. Configure the drop profile for low-priority traffic:

```
[edit class-of-service]
user@switch# set schedulers mylan drop-profile-map loss-priority low protocol any
drop-profile lp-profile
```

2. Configure the drop profile for medium-high priority traffic:

```
[edit class-of-service]
user@switch# set schedulers mylan drop-profile-map loss-priority medium-high protocol
any drop-profile mh-profile
```

3. Configure the drop profile for high-priority traffic:

```
[edit class-of-service]
user@switch# set schedulers mylan drop-profile-map loss-priority high protocol any
drop-profile h-profile
```

## Verification

---

### Verifying the Drop Profile Map Configuration

**Purpose** Verify that you configured the drop profile map for the scheduler **mylan** with the correct loss priorities and drop profiles.

**Action** Verify the results of the drop profile map configuration using the operational mode command **show configuration class-of-service schedulers mylan**:

```
user@switch> show configuration class-of-service schedulers mylan
transmit-rate 3g;
shaping-rate percent 100;
priority low;
drop-profile-map loss-priority low protocol any drop-profile lp-profile;
```



```
drop-profile-map loss-priority medium-high protocol any drop-profile mh-profile;  
drop-profile-map loss-priority high protocol any drop-profile h-profile;
```



**NOTE:** This example does not include configuring scheduler bandwidth and priority. This information (transmit rate, shaping rate, and priority) is shown for completeness.

**Related  
Documentation**

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring WRED Drop Profiles](#)
- [Configuring CoS Drop Profile Maps on page 213](#)
- [Understanding CoS WRED Drop Profiles](#)

## Understanding CoS Explicit Congestion Notification

---

Explicit congestion notification (ECN) enables end-to-end congestion notification between two endpoints on TCP/IP based networks. The two endpoints are an ECN-enabled sender and an ECN-enabled receiver. ECN must be enabled on both endpoints and on all of the intermediate devices between the endpoints for ECN to work properly. Any device in the transmission path that does not support ECN breaks the end-to-end ECN functionality.

ECN notifies networks about congestion with the goal of reducing packet loss and delay by making the sending device decrease the transmission rate until the congestion clears, without dropping packets. RFC 3168, *The Addition of Explicit Congestion Notification (ECN) to IP*, defines ECN.

ECN is disabled by default. Normally, you enable ECN only on queues that handle best-effort traffic because other traffic types use different methods of congestion notification—lossless traffic uses priority-based flow control (PFC) and strict-high priority traffic receives all of the port bandwidth it requires up to the point of a configured maximum rate.



**NOTE:** OCX Series switches do not support lossless transport and do not support PFC.

---

You enable ECN on individual output queues (as represented by forwarding classes) by enabling ECN in the queue scheduler configuration, mapping the scheduler to forwarding classes (queues), and then applying the scheduler to interfaces.

---



**NOTE:** For ECN to work on a queue, you must also apply a weighted random early detection (WRED) packet drop profile to the queue.

---

- [How ECN Works on page 216](#)
- [WRED Drop Profile Control of ECN Thresholds on page 221](#)
- [Support, Limitations, and Notes on page 224](#)

### How ECN Works

Without ECN, switches respond to network congestion by dropping TCP/IP packets. Dropped packets signal the network that congestion is occurring. Devices on the IP network respond to TCP packet drops by reducing the packet transmission rate to allow the congestion to clear. However, the packet drop method of congestion notification and management has some disadvantages. For example, packets are dropped and must be retransmitted. Also, bursty traffic can cause the network to reduce the transmission rate too much, resulting in inefficient bandwidth utilization.

Instead of dropping packets to signal network congestion, ECN marks packets to signal network congestion, without dropping the packets. For ECN to work, all of the switches

in the path between two ECN-enabled endpoints must have ECN enabled. ECN is negotiated during the establishment of the TCP connection between the endpoints.

ECN-enabled switches determine the queue congestion state based on the WRED packet drop profile configuration applied to the queue, so each ECN-enabled queue must also have a WRED drop profile. If a queue fills to the level at which the WRED drop profile has a packet drop probability greater than zero (0), the switch might mark a packet as experiencing congestion. Whether or not a switch marks a packet as experiencing congestion is the same probability as the drop probability of the queue at that fill level.

ECN communicates whether or not congestion is experienced by marking the two least-significant bits in the differentiated services (DiffServ) field in the IP header. The most significant six bits in the DiffServ field contain the Differentiated Services Code Point (DSCP) bits. The state of the two ECN bits signals whether or not the packet is an ECN-capable packet and whether or not congestion has been experienced.

ECN-capable senders mark packets as ECN-capable. If a sender is not ECN-capable, it marks packets as not not ECN-capable. If an ECN-capable packet experiences congestion at the egress queue of a switch, the switch marks the packet as experiencing congestion. When the packet reaches the ECN-capable receiver (destination endpoint), the receiver echoes the congestion indicator to the sender (source endpoint) by sending a packet marked to indicate congestion.

After receiving the congestion indicator from the receiver, the source endpoint reduces the transmission rate to relieve the congestion. This is similar to the result of TCP congestion notification and management, but instead of dropping the packet to signal network congestion, ECN marks the packet and the receiver echoes the congestion notification to the sender. Because the packet is not dropped, the packet does not need to be retransmitted.

- [ECN Bits in the DiffServ Field on page 217](#)
- [End-to-End ECN Behavior on page 218](#)
- [ECN Compared to PFC and Ethernet PAUSE on page 220](#)

### ECN Bits in the DiffServ Field

The two ECN bits in the DiffServ field provide four codes that determine if a packet is marked as an ECN-capable transport (ECT) packet, meaning that both endpoints of the transport protocol are ECN-capable, and if there is congestion experienced (CE), as shown in [Table 56 on page 217](#):

**Table 56: ECN Bit Codes**

ECN Bits (Code)	Meaning
00	Non-ECT—Packet is marked as not ECN-capable
01	ECT(1)—Endpoints of the transport protocol are ECN-capable
10	ECT(0)—Endpoints of the transport protocol are ECN-capable

Table 56: ECN Bit Codes (*continued*)

ECN Bits (Code)	Meaning
11	CE—Congestion experienced

Codes 01 and 10 have the same meaning: the sending and receiving endpoints of the transport protocol are ECN-capable. There is no difference between these codes.

### End-to-End ECN Behavior

After the sending and receiving endpoints negotiate ECN, the sending endpoint marks packets as ECN-capable by setting the DiffServ ECN field to ECT(1) (01) or ECT(0) (10). Every intermediate switch between the endpoints must have ECN enabled or it does not work.


When a packet traverses a switch and experiences congestion at an output queue that uses the WRED packet drop mechanism, the switch marks the packet as experiencing congestion by setting the DiffServ ECN field to CE (11). Instead of dropping the packet (as with TCP congestion notification), the switch forwards the packet.



**NOTE:** At the egress queue, the WRED algorithm determines whether or not a packet is drop eligible based on the queue fill level (how full the queue is). If a packet is drop eligible and marked as ECN-capable, the packet can be marked CE and forwarded. If a packet is drop eligible and is not marked as ECN-capable, it might be dropped. See “[WRED Drop Profile Control of ECN Thresholds](#)” on page 221 for more information about the WRED algorithm.

When the packet reaches the receiver endpoint, the CE mark tells the receiver that there is network congestion. The receiver then sends (echoes) a message to the sender that indicates there is congestion on the network. The sender acknowledges the congestion notification message and reduces its transmission rate. [Figure 17 on page 218](#) summarizes how ECN works to mitigate network congestion:

Figure 17: Explicit Congestion Notification

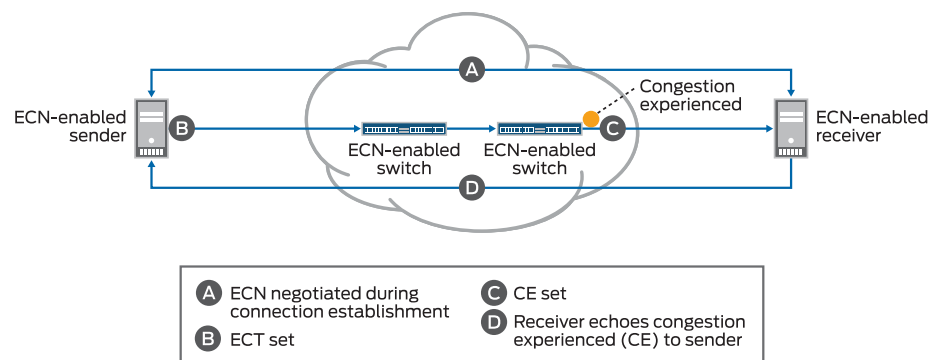

8042495

End-to-end ECN behavior includes:

1. The ECN-capable sender and receiver negotiate ECN capability during the establishment of their connection.
2. After successful negotiation of ECN capability, the ECN-capable sender sends IP packets with the ECT field set to the receiver.



**NOTE:** All of the intermediate devices in the path between the sender and the receiver must be ECN-enabled.

3. If the WRED algorithm on a switch egress queue determines that the queue is experiencing congestion and the packet is drop eligible, the switch can mark the packet as “congestion experienced” (CE) to indicate to the receiver that there is congestion on the network. If the packet has already been marked CE (congestion has already been experienced at the egress of another switch), the switch forwards the packet with CE marked.

If there is no congestion at the switch egress queue, the switch forwards the packet and does not change the ECT-enabled marking of the ECN bits, so the packet is still marked as ECN-capable but not as experiencing congestion.

On QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, packets that are not marked as ECN-capable (ECT, 00) are treated according to the WRED drop profile configuration and might be dropped during periods of congestion.

On QFX10000 switches, the switch uses the tail-drop algorithm to drop packets that are marked ECT (00) during periods of congestion. (When a queue fills to its maximum level of fullness, tail-drop simply drops all subsequently arriving packets until there is space in the queue to buffer more packets. All non-ECN-capable packets are treated the same.)

4. The receiver receives a packet marked CE to indicate that congestion was experienced along the congestion path.
5. The receiver echoes (sends) a packet back to the sender with the ECE bit (bit 9) marked in the flag field of the TCP header. The ECE bit is the ECN echo flag bit, which notifies the sender that there is congestion on the network.
6. The sender reduces the data transmission rate and sends a packet to the receiver with the CWR bit (bit 8) marked in the flag field of the TCP header. The CWR bit is the congestion window reduced flag bit, which acknowledges to the receiver that the congestion experienced notification was received.
7. When the receiver receives the CWR flag, the receiver stops setting the ECE bit in replies to the sender.

Table 57 on page 220 summarizes the behavior of traffic on ECN-enabled queues.

Table 57: Traffic Behavior on ECN-Enabled Queues

Incoming IP Packet Marking of ECN Bits	ECN Configuration on the Output Queue	Action if WRED Algorithm Determines Packet is Drop Eligible	Outgoing Packet Marking of ECN Bits
Non-ECT (00)	Does not matter	Drop (QFX5200, QFX5100, EX4600, QFX3500, QFX3600, QFabric systems).  Tail drop occurs when queue reaches maximum fullness because no WRED drop probability is applied (QFX10000 switches).	No ECN bits marked
ECT (10 or 01)	ECN disabled	Drop	Packet dropped—no ECN bits marked
ECT (10 or 01)	ECN enabled	Do not drop. Mark packet as experiencing congestion (CE, bits 11).	Packet marked ECT (11) to indicate congestion
CE (11)	ECN disabled	Drop	Packet dropped—no ECN bits marked
CE (11)	ECN enabled	Do not drop. Packet is already marked as experiencing congestion, forward packet without changing the ECN marking.	Packet marked ECT (11) to indicate congestion

When an output queue is not experiencing congestion as defined by the WRED drop profile mapped to the queue, all packets are forwarded, and no packets are dropped.

### ECN Compared to PFC and Ethernet PAUSE

ECN is an end-to-end network congestion notification mechanism for IP traffic. Priority-based flow control (PFC) (IEEE 802.1Qbb) and Ethernet PAUSE (IEEE 802.3X) are different types of congestion management mechanisms.



**NOTE:** QFX10000 switches do not support Ethernet PAUSE.

OCX Series switches do not support PFC. OCX Series switches support Ethernet PAUSE on tagged Layer 3 interfaces.

ECN requires that an output queue must also have an associated WRED packet drop profile. Output queues used for traffic on which PFC is enabled should not have an associated WRED drop profile. Interfaces on which Ethernet PAUSE is enabled should not have an associated WRED drop profile.

PFC is a peer-to-peer flow control mechanism to support lossless traffic. PFC enables connected peer devices to pause flow transmission during periods of congestion. PFC enables you to pause traffic on a specified type of flow on a link instead of on all traffic

on a link. For example, you can (and should) enable PFC on lossless traffic classes such as the **fcoe** forwarding class. Ethernet PAUSE is also a peer-to-peer flow control mechanism, but instead of pausing only specified traffic flows, Ethernet PAUSE pauses all traffic on a physical link.

With PFC and Ethernet PAUSE, the sending and receiving endpoints of a flow do not communicate congestion information to each other across the intermediate switches. Instead, PFC controls flows between two PFC-enabled peer devices (for example, switches) that support data center bridging (DCB) standards. PFC works by sending a pause message to the connected peer when the flow output queue becomes congested. Ethernet PAUSE simply pauses all traffic on a link during periods of congestion and does not require DCB.

PFC works this way: if a switch output queue fills to a certain threshold, the switch sends a PFC pause message to the connected peer device that is transmitting data. The pause message tells the transmitting switch to pause transmission of the flow. When the congestion clears, the switch sends another PFC message to tell the connected peer to resume transmission. (If the output queue of the transmitting switch also reaches a certain threshold, that switch can in turn send a PFC pause message to the connected peer that is transmitting to it. In this way, PFC can propagate a transmission pause back through the network.)

See [“Understanding CoS Flow Control \(Ethernet PAUSE and PFC\)” on page 289](#) for more information. For QFX5100 and EX4600 switches only, you can also refer to [“Understanding PFC Functionality Across Layer 3 Interfaces” on page 317](#).

## WRED Drop Profile Control of ECN Thresholds

You apply WRED drop profiles to forwarding classes (which are mapped to output queues) to control how the switch marks ECN-capable packets. A scheduler map associates a drop profile with a scheduler and a forwarding class, and then you apply the scheduler map to interfaces to implement the scheduling properties for the forwarding class on those interfaces.

Drop profiles define queue fill level (the percentage of queue fullness) and drop probability (the percentage probability that a packet is dropped) pairs. When a queue fills to a specified level, traffic that matches the drop profile has the drop probability paired with that fill level. When you configure a drop profile, you configure pairs of fill levels and drop probabilities to control how packets drop at different levels of queue fullness.

The first fill level and drop probability pair is the drop start point. Until the queue reaches the first fill level, packets are not dropped. When the queue reaches the first fill level, packets that exceed the fill level have a probability of being dropped that equals the drop probability paired with the fill level.

The last fill level and drop probability pair is the drop end point. When the queue reaches the last fill level, all packets are dropped unless they are configured for ECN.



**NOTE:** Lossless queues (forwarding class configured with the no-loss packet drop attribute) and strict-high priority queues do not use drop profiles. Lossless queues use PFC to control the flow of traffic. Strict-high priority queues receive all of the port bandwidth they require up to the configured maximum bandwidth limit (scheduler transmit-rate on QFX10000 switches, and shaping-rate on QFX5200, QFX5100, QFX3500, QFX3600, and EX4600 switches, and QFabric systems).

Different switches support different amounts of fill level/drop probability pairs in drop profiles. For example, QFX10000 switches support 32 fill level/drop probability pairs, so there can be as many as 30 intermediate fill level/drop probability pairs between the drop start and drop endpoints. QFX5200, QFX5100, QFX3500, QFX3600, and EX4600 switches, and QFabric systems support two fill level/drop probability pairs—by definition, the two pairs you configure on these switches are the drop start and drop end points.



**NOTE:** Do not configure the last fill level as 100 percent.

The drop profile configuration affects ECN packets as follows:

- Drop start point—ECN-capable packets might be marked as congestion experienced (CE).
- Drop end point—ECN-capable packets are always marked CE.

As a queue fills from the drop start point to the drop end point, the probability that an ECN packet is marked CE is the same as the probability that a non-ECN packet is dropped if you apply the drop profile to best-effort traffic. As the queue fills, the probability of an ECN packet being marked CE increases, just as the probability of a non-ECN packet being dropped increases when you apply the drop profile to best-effort traffic.

At the drop end point, all ECN packets are marked CE, but the ECN packets are not dropped. When the queue fill level exceeds the drop end point, all ECN packets are marked CE. (At this point on QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, all non-ECN packets are dropped.) ECN packets (and all other packets) are tail-dropped if the queue fills completely.

To configure a WRED packet drop profile and apply it to an output queue (using hierarchical scheduling on switches that support ETS):

1. Configure a drop profile using the statement **set class-of-service drop-profiles *profile-name* interpolate fill-level *drop-start-point* fill-level *drop-end-point* drop-probability 0 drop-probability *percentage***.
2. Map the drop profile to a queue scheduler using the statement **set class-of-service schedulers *scheduler-name* drop-profile-map loss-priority (low | medium-high | high) protocol any drop-profile *profile-name***. The name of the drop-profile is the name of the WRED profile configured in Step 1.



3. Map the scheduler, which Step 2 associates with the drop profile, to the output queue using the statement **set class-of-service scheduler-maps *map-name* forwarding-class *forwarding-class-name* scheduler *scheduler-name***. The forwarding class identifies the output queue. Forwarding classes are mapped to output queues by default, and can be remapped to different queues by explicit user configuration. The scheduler name is the scheduler configured in Step 2.
4. Associate the scheduler map with a traffic control profile using the statement **set class-of-service traffic-control-profiles *tcp-name* scheduler-map *map-name***. The scheduler map name is the name configured in Step 3.
5. Associate the traffic control profile with an interface using the statement **set class-of-service interface *interface-name* forwarding-class-set *forwarding-class-set-name* output-traffic-control-profile *tcp-name***. The output traffic control profile name is the name of the traffic control profile configured in Step 4.

The interface uses the scheduler map in the traffic control profile to apply the drop profile (and other attributes, including the enable ECN attribute) to the output queue (forwarding class) on that interface. Because you can use different traffic control profiles to map different schedulers to different interfaces, the same queue number on different interfaces can handle traffic in different ways.

To configure a WRED packet drop profile and apply it to an output queue on switches that support port scheduling (ETS hierarchical scheduling is either not supported or not used):

1. Configure a drop profile using the statement **set class-of-service drop-profiles *profile-name* interpolate fill-level *level1* *level2* ... *level32* drop-probability *probability1* *probability2* ... *probability32***. You can specify as few as two fill level/drop probability pairs or as many as 32 pairs.
2. Map the drop profile to a queue scheduler using the statement **set class-of-service schedulers *scheduler-name* drop-profile-map loss-priority (low | medium-high | high) drop-profile *profile-name***. The name of the drop-profile is the name of the WRED profile configured in Step 1.
3. Map the scheduler, which Step 2 associates with the drop profile, to the output queue using the statement **set class-of-service scheduler-maps *map-name* forwarding-class *forwarding-class-name* scheduler *scheduler-name***. The forwarding class identifies the output queue. Forwarding classes are mapped to output queues by default, and can be remapped to different queues by explicit user configuration. The scheduler name is the scheduler configured in Step 2.
4. Associate the scheduler map with an interface using the statement **set class-of-service interfaces *interface-name* scheduler-map *scheduler-map-name***.

The interface uses the scheduler map to apply the drop profile (and other attributes) to the output queue mapped to the forwarding class on that interface. Because you can use different scheduler maps on different interfaces, the same queue number on different interfaces can handle traffic in different ways.

## Support, Limitations, and Notes

If the WRED algorithm that is mapped to a queue does not find a packet drop eligible, then the ECN configuration and ECN bits marking does not matter. The packet transport behavior is the same as when ECN is not enabled.

ECN is disabled by default. Normally, you enable ECN only on queues that handle best-effort traffic, and you do not enable ECN on queues that handle lossless traffic or strict-high priority traffic.

ECN supports the following:

- IPv4 and IPv6 packets
- Untagged, single-tagged, and double-tagged packets
- The outer IP header of IP tunneled packets (but not the inner IP header)

ECN does not support the following:

- IP packets with MPLS encapsulation
- The inner IP header of IP tunneled packets (however, ECN works on the outer IP header)
- Multicast, broadcast, and destination lookup fail (DLF) traffic
- Non-IP traffic



**NOTE:** On QFX10000 switches, when you enable a queue for ECN and apply a WRED drop profile to the queue, the WRED drop profile only sets the thresholds for marking ECN traffic as experiencing congestion (CE, 11). On ECN-enabled queues, the WRED drop profile does not set drop thresholds for non-ECT (00) traffic (traffic that is not ECN-capable). Instead, the switch uses the tail-drop algorithm on traffic that is marked non-ECT on ECN-enabled queues during periods of congestion.

To apply a WRED drop profile to non-ECT traffic, configure a multifield (MF) classifier to assign non-ECT traffic to a different output queue that is not ECN-enabled, and then apply the WRED drop profile to that queue.

---

### Related Documentation

- [Example: Configuring ECN on page 224](#)

---

## Example: Configuring ECN

This example shows how to enable explicit congestion notification (ECN) on an output queue.

- [Requirements on page 225](#)
- [Overview on page 225](#)

- [Configuration on page 227](#)
- [Verification on page 229](#)

## Requirements

This example uses the following hardware and software components:

- One switch.
- Junos OS Release 13.2X51-D25 or later for the QFX Series or Junos OS Release 14.1X53-D20 for the OCX Series

## Overview

ECN enables end-to-end congestion notification between two endpoints on TCP/IP based networks. The two endpoints are an ECN-enabled sender and an ECN-enabled receiver. ECN must be enabled on both endpoints and on all of the intermediate devices between the endpoints for ECN to work properly. Any device in the transmission path that does not support ECN breaks the end-to-end ECN functionality.

A weighted random early detection (WRED) packet drop profile must be applied to the output queues on which ECN is enabled. ECN uses the WRED drop profile thresholds to mark packets when the output queue experiences congestion.

ECN reduces packet loss by forwarding ECN-capable packets during periods of network congestion instead of dropping those packets. (TCP notifies the network about congestion by dropping packets.) During periods of congestion, ECN marks ECN-capable packets that egress from congested queues. When the receiver receives an ECN packet that is marked as experiencing congestion, the receiver echoes the congestion state back to the sender. The sender then reduces its transmission rate to clear the congestion.

ECN is disabled by default. You can enable ECN on best-effort traffic. ECN should not be enabled on lossless traffic queues, which uses priority-based flow control (PFC) for congestion notification, and ECN should not be enabled on strict-high priority traffic queues.

To enable ECN on an output queue, you not only need to enable ECN in the queue scheduler, you also need to:

- Configure a WRED packet drop profile.
- Configure a queue scheduler that includes the WRED drop profile and enables ECN. (This example shows only ECN and drop profile configuration; you can also configure bandwidth, priority, and buffer settings in a scheduler.)
- Map the queue scheduler to a forwarding class (output queue) in a scheduler map.
- If you are using enhanced transmission selection (ETS) hierarchical scheduling, add the forwarding class to a forwarding class set (priority group).

- If you are using ETS, associate the queue scheduler map with a traffic control profile (priority group scheduler for hierarchical scheduling).
- If you are using ETS, apply the traffic control profile and the forwarding class set to an interface. On that interface, the output queue uses the scheduler mapped to the forwarding class, as specified by the scheduler map attached to the traffic control profile. This enables ECN on the queue and applies the WRED drop profile to the queue.

If you are using port scheduling, apply the scheduler map to an interface. On that interface, the output queue uses the scheduler mapped to the forwarding class in the scheduler map, which enables ECN on the queue and applies the WRED drop profile to the queue.

Table 58 on page 226 shows the configuration components for this example.

**Table 58: Components of the ECN Configuration Example**

Component	Settings
Hardware	QFX Series switch
Drop profile (with two fill level/drop probability pairs)	Name: <b>be-dp</b> Drop start fill level: <b>30</b> percent Drop end fill level: <b>75</b> percent Drop probability at drop start (minimum drop rate): <b>0</b> percent Drop probability at drop end (maximum drop rate): <b>80</b> percent
Scheduler	Name: <b>be-sched</b> ECN: enabled Drop profile: <b>be-dp</b> Transmit rate: <b>25%</b> Buffer size: <b>25%</b> Priority: <b>low</b>
Scheduler map	Name: <b>be-map</b> Forwarding class: <b>best-effort</b> Scheduler: <b>be-sched</b>  <b>NOTE:</b> By default, the <b>best-effort</b> forwarding class is mapped to output queue <b>0</b> .
Forwarding class set (ETS only)	Name: <b>be-pg</b> Forwarding class: <b>best-effort</b> (queue 0)
Traffic control profile (ETS only)	Name: <b>be-tcp</b> Scheduler map: <b>be-map</b>
Interface (ETS only)	Name: <b>xe-0/0/20</b> Forwarding class set: <b>be-pg</b> (Output) traffic control profile: <b>be-tcp</b>
Interface (port scheduling only)	Name: <b>xe-0/0/20</b>



**NOTE:** Only switches that support ETS hierarchical scheduling support forwarding class set and traffic control profile configuration. Direct port scheduling does not use the hierarchical scheduling structure.



**NOTE:** On QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, the WRED drop profile also controls packet drop behavior for traffic that is not ECN-capable (packets marked non-ECT, ECN bit code 00).

On QFX10000 switches, when ECN is enabled on a queue, the WRED drop profile only sets the ECN thresholds, it does not control packet drop on non-ECN packets. On ECN-enabled queues, QFX10000 switches use the tail-drop algorithm on non-ECN packets during periods of congestion. If you do not enable ECN, then the queue uses the WRED packet drop mechanism.

## Configuration

### CLI Quick Configuration

To quickly configure the drop profile, scheduler with ECN enabled, and to map the scheduler to an output queue on an interface, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

### ETS Quick Configuration

```
[edit class-of-service]
set drop-profile be-dp interpolate fill-level 30 fill-level 75 drop-probability 0 drop-probability 80
set schedulers be-sched explicit-congestion-notification
set schedulers be-sched drop-profile-map loss-priority low protocol any drop-profile be-dp
set schedulers be-sched transmit-rate percent 25
set schedulers be-sched buffer-size percent 25
set schedulers be-sched priority low
set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
set forwarding-class-sets be-pg class best-effort
set traffic-control-profiles be-tcp scheduler-map be-map
set interfaces xe-0/0/20 forwarding-class-set be-pg output-traffic-control-profile be-tcp
```

### Port Scheduling Quick Configuration (QFX10000 Switches)

```
[edit class-of-service]
set drop-profile be-dp interpolate fill-level 30 fill-level 75 drop-probability 0 drop-probability 80
set schedulers be-sched explicit-congestion-notification
set schedulers be-sched drop-profile-map loss-priority low protocol any drop-profile be-dp
set schedulers be-sched transmit-rate percent 25
set schedulers be-sched buffer-size percent 25
set schedulers be-sched priority low
set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
set interfaces xe-0/0/20 scheduler-map be-map
```

## Configuring ECN

### Step-by-Step Procedure

To configure ECN:

1. Configure the WRED packet drop profile **be-dp**. This example uses a drop start point of **30** percent, a drop end point of **75** percent, a minimum drop rate of **0** percent, and a maximum drop rate of **80** percent:

```
[edit class-of-service]
user@switch# set drop-profile be-dp interpolate fill-level 30 fill-level 75 drop-probability
0 drop-probability 80
```

2. Create the scheduler **be-sched** with ECN enabled and associate the drop profile **be-dp** with the scheduler:

```
[edit class-of-service]
user@switch# set schedulers be-sched explicit-congestion-notification
user@switch# set schedulers be-sched drop-profile-map loss-priority low protocol any
drop-profile be-dp
user@switch# set be-sched transmit-rate percent 25
user@switch# set be-sched buffer-size percent 25
user@switch# set be-sched priority low
```

3. Map the scheduler **be-sched** to the **best-effort** forwarding class (output queue 0) using scheduler map **be-map**:

```
[edit class-of-service]
user@switch# set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
```

4. If you are using ETS, add the forwarding class **best-effort** to the forwarding class set **be-pg**; if you are using direct port scheduling, skip this step:

```
[edit class-of-service]
user@switch# set forwarding-class-sets be-pg class best-effort
```

5. If you are using ETS, associate the scheduler map **be-map** with the traffic control profile **be-tcp**; if you are using direct port scheduling, skip this step:

```
[edit class-of-service]
user@switch# set traffic-control-profiles be-tcp scheduler-map be-map
```

6. If you are using ETS, associate the traffic control profile **be-tcp** and the forwarding class set **be-pg** with the interface on which you want to enable ECN on the best-effort queue:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 forwarding-class-set be-pg
output-traffic-control-profile be-tcp
```

If you are using direct port scheduling, associate the scheduler map **be-map** with the interface on which you want to enable ECN on the best-effort queue:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 scheduler map be-map
```

## Verification

### Verifying That ECN Is Enabled

**Purpose** Verify that ECN is enabled in the scheduler **be-sched** by showing the configuration for the scheduler map **be-map**.

**Action** Display the scheduler map configuration using the operational mode command **show class-of-service scheduler-map be-map**:

```
user@switch> show class-of-service scheduler-map be-map
Scheduler map: be-map, Index: 12240
```

```
Scheduler:be-sched, Forwarding class: best-effort, Index: 115
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent,
  Buffer Limit: none, Priority: low
  Excess Priority: unspecified, Explicit Congestion Notification: enable
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       3312   be-dp
    Medium-high   any       1      <default-drop-profile>
    High          any       1      <default-drop-profile>
```

**Meaning** The **show class-of-service scheduler-map** operational command shows the configuration of the scheduler associated with the scheduler map and the forwarding class mapped to that scheduler. The output shows that:

- The scheduler associated with the scheduler map is **be-sched**.
- The scheduler map applies to the forwarding class **best-effort** (output queue 0).
- The scheduler **be-sched** has a transmit rate of **25** percent, a queue buffer size of **25** percent, and a drop priority of **low**.
- Explicit congestion notification state is **enable**.
- The WRED drop profile used for low drop priority traffic is **be-dp**.

**Related Documentation**

- [Understanding CoS Explicit Congestion Notification on page 216](#)





## PART 4

# Data Center Bridging (PFC, DCBX) and Flow Control

- [Using Data Center Bridging and Flow Control on page 233](#)



## CHAPTER 4

# Using Data Center Bridging and Flow Control

- [Understanding DCB Features and Requirements on page 234](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 237](#)
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 243](#)
- [Disabling the ETS Recommendation TLV on page 268](#)
- [Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)
- [Configuring CoS PFC \(Congestion Notification Profiles\) on page 301](#)
- [Example: Configuring CoS PFC for FCoE Traffic on page 304](#)
- [Troubleshooting Dropped FCoE Traffic on page 313](#)
- [Understanding PFC Functionality Across Layer 3 Interfaces on page 317](#)
- [Example: Configuring PFC Across Layer 3 Interfaces on page 319](#)
- [Example: Configuring CoS for FCoE Transit Switch Traffic Across an MC-LAG on page 339](#)
- [Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic \(FCoE Transit Switch\) on page 365](#)
- [Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373](#)
- [Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382](#)
- [Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications \(FCoE and iSCSI\) on page 396](#)
- [Understanding DCBX on page 412](#)
- [Configuring the DCBX Mode on page 422](#)
- [Configuring DCBX Autonegotiation on page 423](#)
- [Understanding DCBX Application Protocol TLV Exchange on page 426](#)
- [Defining an Application for DCBX Application Protocol TLV Exchange on page 430](#)
- [Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 431](#)

- [Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange on page 432](#)
- [Example: Configuring DCBX Application Protocol TLV Exchange on page 433](#)

---

## Understanding DCB Features and Requirements

---

Data center bridging (DCB) is a set of enhancements to the IEEE 802.1 bridge specifications. DCB modifies and extends Ethernet behavior to support I/O convergence in the data center. I/O convergence includes but is not limited to the transport of Ethernet LAN traffic and Fibre Channel (FC) storage area network (SAN) traffic on the same physical Ethernet network infrastructure.



Video: [What is Data Center Bridging?](#)

A converged architecture saves cost by reducing the number of networks and switches required to support both types of traffic, reducing the number of interfaces required, reducing cable complexity, and reducing administration activities.

The Juniper Networks QFX Series and EX4600 switches support the DCB features required to transport converged Ethernet and FC traffic while providing the class-of-service (CoS) and other characteristics FC requires for transmitting storage traffic. To accommodate FC traffic, DCB specifications provide:

- A flow control mechanism called priority-based flow control (PFC, described in IEEE 802.1Qbb) to help provide lossless transport.
- A discovery and exchange protocol for conveying configuration and capabilities among neighbors to ensure consistent configuration across the network, called Data Center Bridging Capability Exchange protocol (DCBX), which is an extension of Link Layer Data Protocol (LLDP, described in IEEE 802.1AB).
- A bandwidth management mechanism called enhanced transmission selection (ETS, described in IEEE 802.1Qaz).
- A congestion management mechanism called quantized congestion notification (QCN, described in IEEE 802.1Qau).

The switch supports the PFC, DCBX, and ETS standards but does not support QCN. The switch also provides the high-bandwidth interfaces (10-Gbps minimum) required to support DCB and converged traffic.

This topic describes the DCB standards and requirements the switch supports:

- [Lossless Transport on page 235](#)
- [ETS on page 236](#)
- [DCBX on page 236](#)

## Lossless Transport

FC traffic requires lossless transport (defined as no frames dropped because of congestion). Standard Ethernet does not support lossless transport, but the DCB extensions to Ethernet along with proper buffer management enable an Ethernet network to provide the level of class of service (CoS) necessary to transport FC frames encapsulated in Ethernet over an Ethernet network.

This section describes these factors in creating lossless transport over Ethernet:

- [PFC on page 235](#)
- [Buffer Management on page 235](#)
- [Physical Interfaces on page 235](#)

---

### PFC

PFC is a link-level flow control mechanism similar to Ethernet PAUSE (described in IEEE 802.3x). Ethernet PAUSE stops all traffic on a link for a period of time. PFC enables you to divide traffic on a link into eight priorities and stop the traffic of a selected priority without stopping the traffic assigned to other priorities on the link.

Pausing the traffic of a selected priority enables you to provide lossless transport for traffic assigned that priority and at the same time use standard lossy Ethernet transport for the rest of the link traffic.

---

### Buffer Management

Buffer management is critical to the proper functioning of PFC, because if buffers are allowed to overflow, frames are dropped and transport is not lossless.

For each lossless flow priority, the switch requires sufficient buffer space to:

- Store frames sent during the time it takes to send the PFC pause frame across the cable between devices.
- Store the frames that are already on the wire when the sender receives the PFC pause frame.

The propagation delay due to cable length and speed, as well as processing speed, determines the amount of buffer space needed to prevent frame loss due to congestion.

The switch automatically sets the threshold for sending PFC pause frames to accommodate delay from cables as long as 150 meters (492 feet) and to accommodate large frames that might be on the wire when the switch sends the pause frame. This ensures that the switch sends pause frames early enough to allow the sender to stop transmitting before the receive buffers on the switch overflow.

---

### Physical Interfaces

QFX Series switches support 10-Gbps or faster, full-duplex interfaces. The switch enables DCB capability only on 10-Gbps or faster Ethernet interfaces.

## ETS

PFC divides traffic into up to eight separate streams (priorities, configured on the switch as forwarding classes) on a physical link. ETS enables you to manage the link bandwidth by:

- Grouping the priorities into priority groups (configured on the switch as forwarding class sets).
- Specifying the bandwidth available to each of the priority groups as a percentage of the total available link bandwidth.
- Allocating the bandwidth to the individual priorities in the priority group.

The available link bandwidth is the bandwidth remaining after servicing strict-high priority queues. On QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, we recommend that you always configure a shaping rate to limit the amount of bandwidth a strict-high priority queue can consume by including the [shaping-rate](#) statement in the **[edit class-of-service schedulers]** hierarchy on the strict-high priority scheduler. This prevents a strict-high priority queue from starving other queues on the port. (On QFX10000 switches, configure a transmit rate on strict-high priority queues to set a maximum amount of bandwidth for strict-high priority traffic.)

Managing link bandwidth with ETS provides several advantages:

- There is uniform management of all types of traffic on the link, both congestion-managed traffic and standard Ethernet traffic.
- When a priority group does not use all of its allocated bandwidth, other priority groups on the link can use that bandwidth as needed.

When a priority in a priority group does not use all of its allocated bandwidth, other priorities in the group can use that bandwidth.

The result is better bandwidth utilization, because priorities that consist of bursty traffic can share bandwidth during periods of low traffic transmission instead of consuming their entire bandwidth allocation when traffic loads are light.

- You can assign traffic types with different service needs to different priorities so that each traffic type receives appropriate treatment.
- Strict priority traffic retains its allocated bandwidth.

## DCBX

DCB devices use DCBX to exchange configuration information with directly connected peers (switches and endpoints such as servers). DCBX is an extension of LLDP. If you disable LLDP on an interface, that interface cannot run DCBX. If you attempt to enable DCBX on an interface on which LLDP is disabled, the configuration commit fails.

DCBX can:

- Discover the DCB capabilities of peers.

- Detect DCB feature misconfiguration or mismatches between peers.
- Configure DCB features on peers.

You can configure DCBX operation for PFC, ETS, and for Layer 2 and Layer 4 applications such as FCoE and iSCSI. DCBX is enabled or disabled on a per-interface basis.

#### Related Documentation

- [Understanding FCoE](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)
- [Understanding DCBX on page 412](#)
- [Example: Configuring CoS PFC for FCoE Traffic on page 304](#)

## Understanding CoS Hierarchical Port Scheduling (ETS)

Scheduling defines the class-of-service (CoS) properties of output queues. Output queues are mapped to forwarding classes. CoS scheduler properties include the amount of interface bandwidth assigned to the queue, the queue priority, and the drop profiles associated with the queue.

Hierarchical port scheduling is a two-tier process that provides better port bandwidth utilization and greater flexibility to allocate resources to queues (forwarding classes) and to groups of queues (forwarding class sets). Hierarchical scheduling includes the Junos OS implementation of enhanced transmission selection (ETS), as described in IEEE 802.1Qaz.



Video: [What is Enhanced Transmission Selection?](#)

This topic describes:

- [Hierarchical Scheduling Tiers on page 237](#)
- [Hierarchical Scheduling and ETS on page 238](#)
- [ETS Advertisement in DCBX on page 240](#)
- [Hierarchical Scheduling Process on page 240](#)
- [Strict-High Priority Queues and Hierarchical Scheduling on page 241](#)
- [Default Hierarchical Scheduling on page 242](#)

### Hierarchical Scheduling Tiers

The two tiers used in hierarchical scheduling are priorities and priority groups, as shown in [Table 52 on page 162](#).

Table 59: Hierarchical Scheduling Tiers

Junos OS Configuration Construct	Equivalent ETS Construct	Description
Forwarding class	Priority	<p>Think about priorities (forwarding classes) as output queues. You map forwarding classes to queues, so each forwarding class represents an output queue.</p> <p>When you use a classifier to map a forwarding class to an IEEE 802.1p code point, the code point identifies that traffic's priority for priority-based flow control (PFC). Thus the forwarding class, the queue mapped to the forwarding class, and the priority (code point) mapped to the forwarding class all identify the same traffic.</p> <p><b>NOTE:</b> OCX Series switches do not support lossless transport or PFC.</p>
Forwarding class set	Priority group	<p>Priority groups (forwarding class sets) are groups of priorities (forwarding classes). Forwarding class membership in a forwarding class set defines the priority group to which each priority belongs.</p> <p>You can configure up to three unicast priority groups and one multicast priority group.</p>

You apply scheduling properties to each hierarchical scheduling tier as described in the next section.



**NOTE:** If you explicitly configure one or more priority groups on an interface, any priority (forwarding class) that is not assigned to a priority group (forwarding class set) on that interface is assigned to an automatically generated default priority group and receives *no bandwidth*. This means that if you configure hierarchical scheduling on an interface, every forwarding class that you want to forward traffic on that interface must belong to a forwarding class set.



**NOTE:** On OCX Series switches, by default, classifiers use DSCP code points to map traffic to forwarding classes. However, hierarchical scheduling works in the same manner as when you use IEEE 802.1p code points to classify traffic. The OCX Series classifies traffic into forwarding classes based on DSCP code points, the forwarding classes are mapped to forwarding class sets, and you apply scheduling properties to each of the two tiers.

## Hierarchical Scheduling and ETS


Two-tier hierarchical scheduling manages bandwidth efficiently by enabling you to define the CoS properties for each priority group and for each priority. The first tier of the hierarchical scheduler allocates port bandwidth to a priority group. The second tier of



the hierarchical scheduler determines the portion of the priority group bandwidth that a priority (queue) can use.

The CoS properties of a priority group define the amount of port bandwidth resources available to the queues in that priority group. The CoS properties you configure for each queue specify the amount of the bandwidth available to the queue from the bandwidth allocated to the priority group. [Figure 11 on page 163](#) shows the relationship of port resource allocation to priority groups, and priority group resource allocation to queues (priorities).

**Figure 18: Hierarchical Scheduling Tiers**

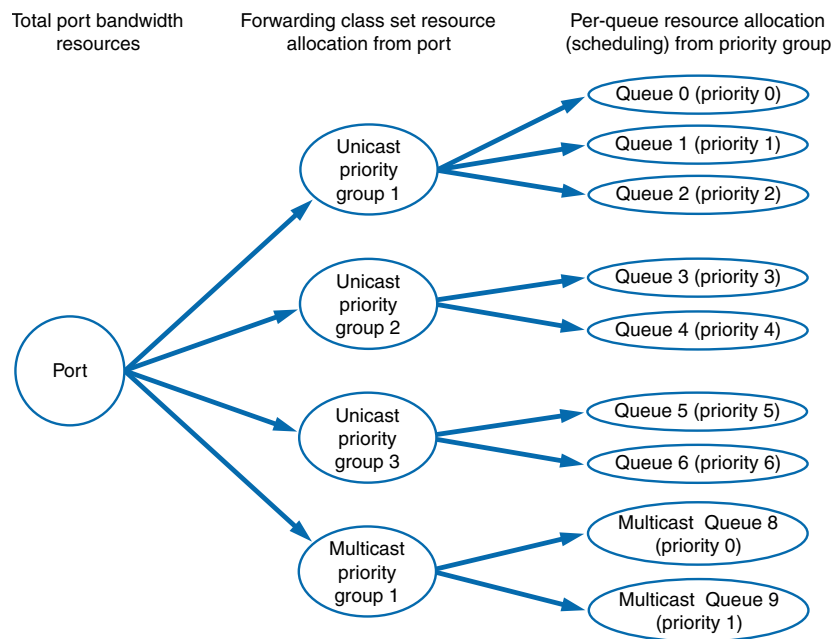

9040722

If a queue (priority) does not use its allocated bandwidth, ETS shares the unused bandwidth among the other queues in the priority group in proportion to the minimum guaranteed rate (transmit rate) scheduled for each queue. If a priority group does not use its allocated bandwidth, ETS shares the unused bandwidth among the priority groups on the port in proportion to the minimum guaranteed rate (guaranteed rate) scheduled for each priority group.

In this way, ETS improves link bandwidth utilization, and it provides each queue and each priority group with the maximum available bandwidth. For example, priorities that consist of bursty traffic can share bandwidth during periods of low traffic transmission, instead of reserving their entire bandwidth allocation when traffic loads are light. All Juniper switches use ETS scheduling, except for QFX5200 and the QFX10000 switches.



**NOTE:** The available link bandwidth is the bandwidth remaining after servicing strict-high priority flows. Strict-high priority takes precedence over all other traffic (we recommend that you configure a shaping rate to limit the maximum amount of bandwidth that a strict-high priority forwarding class can use to prevent starving other queues).

## ETS Advertisement in DCBX

When you configure hierarchical scheduling on a port, Data Center Bridging Capability Exchange protocol (DCBX) advertises:

- Each priority group
- The priorities in each priority group
- The bandwidth properties of each priority group and priority

When you configure hierarchical scheduling on a port, any priority that is not part of an explicitly configured priority group is assigned to the automatically generated default priority group and receives no bandwidth. The default priority group is transparent. It does not appear in the configuration.



**NOTE:** OCX Series switches do support DCBX, so hierarchical scheduling information is not exchanged with connected peers on OCX Series switches.

## Hierarchical Scheduling Process

Hierarchical scheduling consists of multiple configuration steps that create the priorities and the priority groups, schedule their resources, and assign them to interfaces. The steps below correspond to the six blocks in the packet flow diagram shown in [Figure 12 on page 165](#):


1. Packet classification:
  - Configure classification of incoming traffic into forwarding classes (priorities). This consists of either using the default classifiers or configuring classifiers to map code points and loss priorities to the forwarding classes.
  - Apply the classifiers to ingress interfaces or use the default classifiers. Applying a classifier to an interface groups incoming traffic on the interface into forwarding classes and loss priorities, by applying the classifier code point mapping to the incoming traffic.
2. Configure the output queues for the forwarding classes (priorities). This consists of either using the default forwarding classes and forwarding-class-to-queue mapping, or creating your own forwarding classes and mapping them to output queues.
3. Allocate resources to the forwarding classes:
  - Define resources for the priorities. This consists of configuring schedulers to set minimum guaranteed bandwidth, maximum bandwidth, drop profiles for Weighted Random Early Detection (WRED), and bandwidth priority to apply to a forwarding class. Extra bandwidth is shared among queues in proportion to the minimum guaranteed bandwidth (transmit rate) of each queue.
  - Map resources to priorities. This consists of mapping forwarding classes to schedulers, using a scheduler map.

4. Configure priority groups. This consists of mapping forwarding classes (priorities) to forwarding class sets (priority groups) to define the priorities that belong to each priority group.
5. Define resources for the priority groups. This consists of configuring traffic control profiles to set minimum guaranteed bandwidth (guaranteed rate) and maximum bandwidth (shaping rate) for a priority group. Traffic control profiles also specify a scheduler map, which defines the resources (schedulers) mapped to the priorities in the priority group. Extra port bandwidth is shared among priority groups in proportion to the minimum guaranteed bandwidth of each priority group.

The traffic control profile bandwidth settings determine the port resources available to the priority group. The schedulers specified in the scheduler map determine the amount of priority group resources that each priority receives.

6. Apply hierarchical scheduling to a port. This consists of attaching one or more priority groups (forwarding class sets) to an interface. For each priority group, you also attach a traffic control profile, which contains the scheduling properties of the priority group and the priorities in the priority group. Different priority groups on the same port can use different traffic control profiles, which provides fine tuned control of scheduling for each queue on each interface.

Figure 19: Hierarchical Scheduling Packet Flow

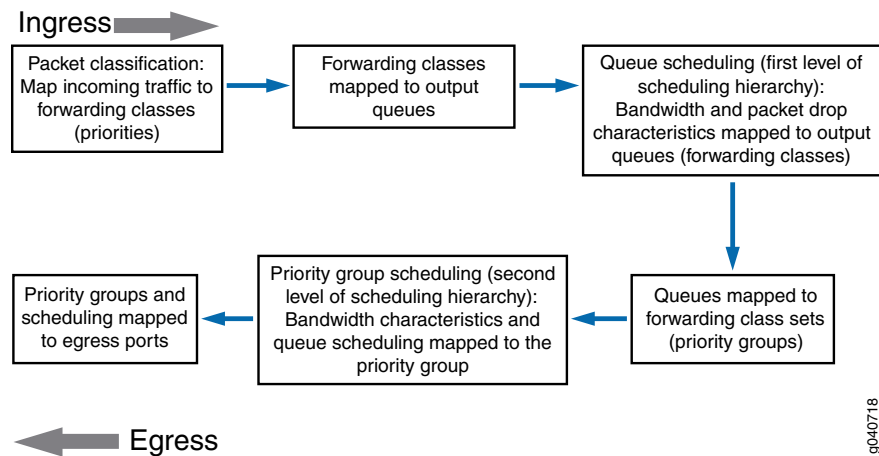

### Strict-High Priority Queues and Hierarchical Scheduling

If you configure a strict-high priority queue, you must observe the following rules:

- You must create a separate forwarding class set (priority group) for the strict-high priority queue.
- Only one forwarding class set can contain strict-high priority queues.
- Strict-high priority queues cannot belong to the same forwarding class set as queues that are not strict-high priority.

- A strict-high priority queue cannot belong to a multidestination forwarding class set.
- We recommend that you always apply a shaping rate to strict-high priority queues to prevent them from starving other queues. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.



**NOTE:** On a QFabric system, if a fabric (fte) interface handles strict-high priority traffic, you must define a separate forwarding class set (priority group) for strict-high priority traffic. Strict-high priority traffic cannot be mixed with traffic of other priorities in a forwarding class set. For example, you might choose to create different forwarding class sets for best effort, lossless, strict-high priority, and multidestination traffic.

---

## Default Hierarchical Scheduling

If you do not explicitly configure hierarchical scheduling, the switch uses the default settings:

- The switch automatically creates a default forwarding class set that contains all of the forwarding classes on the switch. The switch assigns 100 percent of the port output bandwidth to the default forwarding class set. The default forwarding class set is transparent. It does not appear in the configuration and is used for Data Center Bridging Capability Exchange protocol (DCBX) advertisement.



**NOTE:** OCX Series switches do not support DCBX, so the ETS configuration is not advertised to connected peers.

- Ingress traffic is classified based on the default classifier settings.
- The forwarding classes (queues) in the default forwarding class set receive bandwidth based on the default scheduler settings.

### Related Documentation

- [Understanding CoS Packet Flow on page 24](#)
- [Understanding CoS Output Queue Schedulers](#)
- [Understanding CoS Priority Group Scheduling on page 154](#)
- [Benefits of Configuring CoS Hierarchical Port Scheduling](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)
- [Understanding CoS Classifiers](#)
- [Understanding CoS Classifiers](#)
- [Understanding Default CoS Scheduling and Classification](#)
- [Understanding Default CoS Scheduling and Classification](#)

- *Understanding CoS Scheduling on QFabric System Node Device Fabric (fte) Ports*
- *Understanding Default CoS Scheduling on QFabric System Interconnect Devices (Junos OS Release 13.1 and Later Releases)*
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
- [Example: Configuring Minimum Guaranteed Output Bandwidth on page 194](#)
- [Example: Configuring Maximum Output Bandwidth on page 201](#)

---

## Example: Configuring CoS Hierarchical Port Scheduling (ETS)

---

Hierarchical port scheduling defines the class-of-service (CoS) properties of output queues, which are mapped to forwarding classes. Traffic is classified into forwarding classes based on code point (priority), so mapping queues to forwarding classes also maps queues to priorities). Hierarchical port scheduling enables you to group priorities that require similar CoS treatment into priority groups. You define the port bandwidth resources for a priority group, and you define the amount of the priority group's resources that each priority in the group can use.

Hierarchical port scheduling is the Junos OS implementation of enhanced transmission selection (ETS), as described in IEEE 802.1Qaz. One major benefit of hierarchical port scheduling is greater port bandwidth utilization. If a priority group on a port does not use all of its allocated bandwidth, other priority groups on that port can use that bandwidth. Also, if a priority within a priority group does not use its allocated bandwidth, other priorities within that priority group can use that bandwidth.

Configuring hierarchical scheduling is a multistep procedure that includes:

- Mapping forwarding classes to queues
- Defining forwarding class sets (priority groups)
- Defining behavior aggregate classifiers
- Configuring priority-based flow control (PFC) for lossless priorities (queues)
- Applying classifiers and PFC configuration to ingress interfaces
- Defining drop profiles
- Defining schedulers
- Mapping forwarding classes to schedulers
- Defining traffic control profiles
- Assigning priority groups and traffic control profiles to egress ports



NOTE: OCX Series switches do not support lossless transport and do not support PFC. Although this example includes configuring lossless transport with PFC, the portions of the example that do not pertain to lossless transport still apply to OCX Series switches. (You can configure hierarchical scheduling on OCX Series switches, but you cannot configure lossless transport or lossless forwarding classes.)

This example describes how to configure hierarchical scheduling:

- [Requirements on page 244](#)
- [Overview on page 244](#)
- [Configuration on page 248](#)
- [Verification on page 258](#)

## Requirements

This example uses the following hardware and software components:

- One switch (this example was tested on a Juniper Networks QFX3500 Switch)
- Junos OS Release 11.1 or later for the QFX Series or Junos OS Release 14.1X53-D20 or later for the OCX Series

## Overview

Keep the following considerations in mind when you plan the port bandwidth allocation for priority groups and for individual priorities:

- How much traffic and what types of traffic you expect to traverse the system.
- How you want to divide different types of traffic into priorities (forwarding classes) to apply different CoS treatment to different types of traffic. Dividing traffic into priorities includes:
  - Mapping the code points of ingress traffic to forwarding classes using behavior aggregate (BA) classifiers. This classifies incoming traffic into the appropriate forwarding class based on code point.
  - Mapping forwarding classes to output queues. This defines the output queue for each type of traffic.
  - Attaching the BA classifier to the desired ingress interfaces so that incoming traffic maps to the desired forwarding classes and queues.
- How you want to organize priorities into priority groups (forwarding class sets).

Traffic that requires similar treatment usually belongs in the same priority group. To do this, place forwarding classes that require similar bandwidth, loss, and other

characteristics in the same forwarding class set. For example, you can map all types of best-effort traffic forwarding classes into one forwarding class set.

- How much of the port bandwidth you want to allocate to each priority group and to each of the priorities in each priority group. The following considerations apply to bandwidth allocation:
  - Estimate how much traffic you expect in each forwarding class, and how much traffic you expect in each forwarding class set (the amount of traffic you expect in a forwarding class set is the aggregate amount of traffic in the forwarding classes that belong to the forwarding class set).
  - The combined minimum guaranteed bandwidth of the priorities (forwarding classes) in a priority group should not exceed the minimum guaranteed bandwidth of the priority group (forwarding class set). The transmit rate scheduler parameter defines the minimum guaranteed bandwidth for forwarding classes. Scheduler maps associate schedulers with forwarding classes.
  - The combined minimum guaranteed bandwidth of the priority groups (forwarding class sets) on a port should not exceed the port's total bandwidth. The guaranteed rate parameter in the traffic control profile defines the minimum bandwidth for a forwarding class set. Associating a scheduler map with a traffic control profile sets the scheduling for the individual forwarding classes in the forwarding class set.

This example creates hierarchical port scheduling by defining priority groups for best effort, guaranteed delivery, and high-performance computing (HPC) traffic. Each priority group includes priorities that need to receive similar CoS treatment. Each priority group and each priority within each priority group receive the CoS resources needed to service their flows. Lossless priorities use PFC to prevent packet loss when the network experiences congestion.

### Topology

Table 53 on page 169 shows the configuration components for this example.



**NOTE:** OCX Series switches do not support lossless transport and do not support PFC. If you eliminate the configuration elements for the default lossless fcoe and no-loss forwarding classes (including classifier, forwarding class set, scheduler, and traffic control profile configuration for those forwarding classes) and for PFC, this example works for OCX Series switches. However, because the default fcoe and no-loss forwarding classes do not carry traffic on OCX Series switches, you can apply the bandwidth allocated to those forwarding classes to other forwarding classes. By default, the active forwarding classes (best-effort, network-control, and mcast) share the unused bandwidth assigned to the fcoe and no-loss forwarding classes.

Table 60: Components of the Hierarchical Port Scheduling (ETS) Configuration Topology

Property	Settings
Hardware	QFX3500 switch

Table 60: Components of the Hierarchical Port Scheduling (ETS) Configuration Topology (*continued*)

Property	Settings
Mapping of forwarding classes (priorities) to queues	<p><b>best-effort</b> to queue 0</p> <p><b>be2</b> to queue 1</p> <p><b>fcoe</b> (Fibre Channel over Ethernet) to queue 3</p> <p><b>no-loss</b> to queue 4</p> <p><b>hpc</b> (high-performance computing) to queue 5</p> <p><b>network-control</b> to queue 7</p> <p><b>NOTE:</b> On switches that do not support the ELS CLI, if you are using Junos OS Release 12.2 or later, use the default forwarding-class-to-queue mapping for the lossless <b>fcoe</b> and <b>no-loss</b> forwarding classes. If you explicitly configure the default lossless forwarding classes, the traffic mapped to those forwarding classes is treated as lossy (<b>best-effort</b>) traffic and does <i>not</i> receive lossless treatment.</p> <p>On switches that do not support the ELS CLI, in Junos OS Release 12.3 and later, you can include the <i>no-loss</i> packet drop attribute in the explicit forwarding class configuration to configure a lossless forwarding class.</p>
Forwarding class sets (priority groups)	<p><b>best-effort-pg:</b> contains forwarding classes <b>best-effort</b>, <b>be2</b>, and <b>network control</b></p> <p><b>guar-delivery-pg:</b> contains forwarding classes <b>fcoe</b> and <b>no-loss</b></p> <p><b>hpc-pg:</b> contains forwarding class <b>hpc</b></p>
Behavior aggregate classifier (maps forwarding classes and loss priorities to incoming packets by IEEE 802.1 code point)	<p>Name—<b>hsclassifier1</b></p> <p>Code point mapping:</p> <ul style="list-style-type: none"> <li>• <b>000</b> to forwarding class <b>best-effort</b> and loss priority <b>low</b></li> <li>• <b>001</b> to forwarding class <b>be2</b> and loss priority <b>high</b></li> <li>• <b>011</b> to forwarding class <b>fcoe</b> and loss priority <b>low</b></li> <li>• <b>100</b> to forwarding class <b>no-loss</b> and loss priority <b>low</b></li> <li>• <b>101</b> to forwarding class <b>hpc</b> and loss priority <b>low</b></li> <li>• <b>110</b> to forwarding class <b>network-control</b> and loss priority <b>low</b></li> </ul>
PFC	<p>Congestion notification profile name—<b>gd-cnp</b></p> <p>PFC enabled on code points: <b>011</b> (<b>fcoe</b> priority), <b>010</b> (<b>no-loss</b> priority)</p>
Drop profiles	<p><b>dp-be-low:</b> drop start point 25, drop end point 50, maximum drop rate 80</p> <p><b>NOTE:</b> The <b>fcoe</b> and <b>no-loss</b> priorities (queues) do not use drop profiles because they are lossless traffic classes.</p> <p><b>dp-be-high:</b> drop start point 10, drop end point 40, maximum drop rate 100</p> <p><b>dp-hpc:</b> drop start point 75, drop end point 90, maximum drop rate 75</p> <p><b>dp-nc:</b> drop start point 80, drop end point 100, maximum drop rate 100</p>



**Table 60: Components of the Hierarchical Port Scheduling (ETS) Configuration Topology** (*continued*)

Property	Settings
Queue schedulers	<p><b>be-sched</b>: minimum bandwidth <b>3g</b>, maximum bandwidth <b>100%</b>, priority <b>low</b>, drop profiles <b>dp-be-low</b> and <b>dp-be-high</b></p> <p><b>fcoe-sched</b>: minimum bandwidth <b>2.5g</b>, maximum bandwidth <b>100%</b>, priority <b>low</b></p> <p><b>hpc-sched</b>: minimum bandwidth <b>2g</b>, maximum bandwidth <b>100%</b>, priority <b>low</b>, drop profile <b>dp-hpc</b></p> <p><b>nc-sched</b>: minimum bandwidth <b>500m</b>, maximum bandwidth <b>100%</b>, priority <b>low</b>, drop profile <b>dp-nc</b></p> <p><b>nl-sched</b>: minimum bandwidth <b>2g</b>, maximum bandwidth <b>100%</b>, priority <b>low</b></p>
Forwarding class-to-scheduler mapping	<p>Scheduler map <b>be-map</b>: Forwarding class <b>best-effort</b>, scheduler <b>be-sched</b> Forwarding class <b>be2</b>, scheduler <b>be-sched</b> Forwarding class <b>network-control</b>, scheduler <b>nc-sched</b></p> <p>Scheduler map <b>gd-map</b>: Forwarding class <b>fcoe</b>, scheduler <b>fcoe-sched</b> Forwarding class <b>no-loss</b>, scheduler <b>nl-sched</b></p> <p>Scheduler map <b>hpc-map</b>: Forwarding class <b>hpc</b>, scheduler <b>hpc-sched</b></p>
Traffic control profiles	<p><b>be-tcp</b>: scheduler map <b>be-map</b>, minimum bandwidth <b>3.5g</b>, maximum bandwidth <b>100%</b></p> <p><b>gd-tcp</b>: scheduler map <b>gd-map</b>, minimum bandwidth <b>4.5g</b>, maximum bandwidth <b>100%</b></p> <p><b>hpc-tcp</b>: scheduler map <b>hpc-map</b>, minimum bandwidth <b>2g</b>, maximum bandwidth <b>100%</b></p>
Interfaces	<p>This example configures hierarchical port scheduling on interfaces <b>xe-0/0/20</b> and <b>xe-0/0/21</b>. Because traffic is bidirectional, you apply the ingress and egress configuration components to both interfaces:</p> <ul style="list-style-type: none"> <li>• Classifier Name—<b>hsclassifier1</b></li> <li>• Forwarding class sets—<b>best-effort-pg</b>, <b>guar-deliver-pg</b>, <b>hpc-pg</b></li> <li>• Congestion notification profile—<b>gd-cnp</b></li> </ul>

Figure 13 on page 172 shows a block diagram of the configuration components and the configuration flow of the CLI statements used in the example. You can perform the configuration steps in a different sequence if you want.

Figure 20: Hierarchical Port Scheduling Components Block Diagram


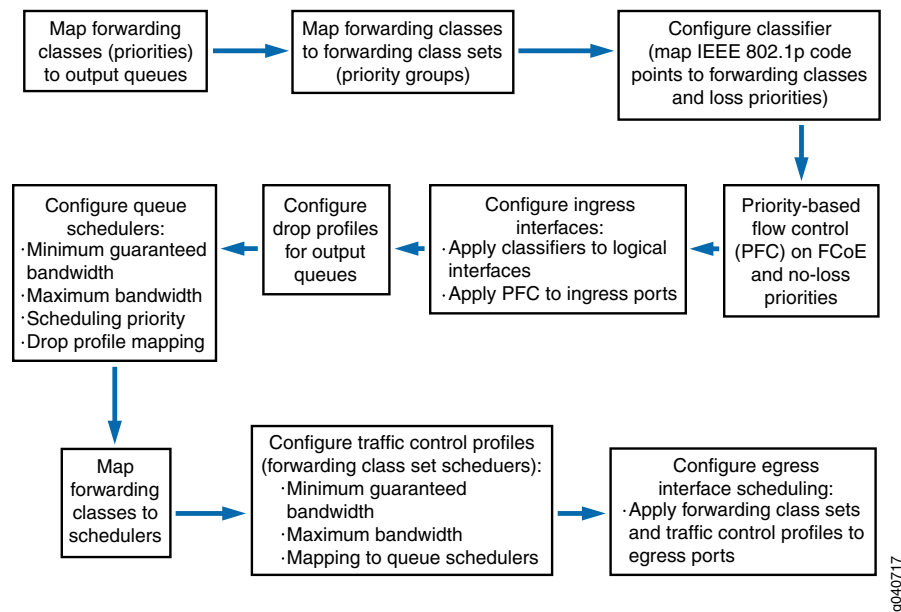


Figure 14 on page 172 shows a block diagram of the hierarchical scheduling packet flow from ingress to egress.

Figure 21: Hierarchical Port Scheduling Packet Flow Block Diagram

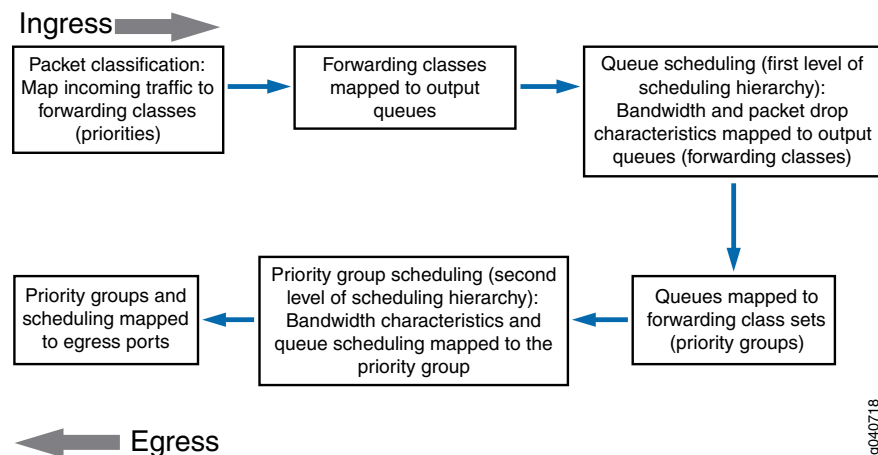

## Configuration

### CLI Quick Configuration

To quickly configure hierarchical port scheduling on systems that support lossless transport, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the [edit class-of-service] hierarchy level:

```
[edit class-of-service]
set forwarding-classes class best-effort queue-num 0
set forwarding-classes class be2 queue-num 1
set forwarding-classes class hpc queue-num 5
set forwarding-classes class network-control queue-num 7
```

```

set forwarding-class-sets best-effort-pg class best-effort
set forwarding-class-sets best-effort-pg class be2
set forwarding-class-sets best-effort-pg class network-control
set forwarding-class-sets guar-delivery-pg class fcoe
set forwarding-class-sets guar-delivery-pg class no-loss
set forwarding-class-sets hpc-pg class hpc
set classifiers ieee-802.1 hsclassifier1 forwarding-class best-effort loss-priority low code-points
000
set classifiers ieee-802.1 hsclassifier1 forwarding-class be2 loss-priority high code-points 001
set classifiers ieee-802.1 hsclassifier1 forwarding-class fcoe loss-priority low code-points 011
set classifiers ieee-802.1 hsclassifier1 forwarding-class no-loss loss-priority low code-points 100
set classifiers ieee-802.1 hsclassifier1 forwarding-class hpc loss-priority low code-points 101
set classifiers ieee-802.1 hsclassifier1 forwarding-class network-control loss-priority low
code-points 110
set congestion-notification-profile gd-cnp input ieee-802.1 code-point 011 pfc
set congestion-notification-profile gd-cnp input ieee-802.1 code-point 100 pfc
set interfaces xe-0/0/20 unit 0 classifiers ieee-802.1 hsclassifier1
set interfaces xe-0/0/21 unit 0 classifiers ieee-802.1 hsclassifier1
set interfaces xe-0/0/20 congestion-notification-profile gd-cnp
set interfaces xe-0/0/21 congestion-notification-profile gd-cnp
set drop-profiles dp-be-low interpolate fill-level 25 fill-level 50 drop-probability 0 drop-probability
80
set drop-profiles dp-be-high interpolate fill-level 10 fill-level 40 drop-probability 0 drop-probability
100
set drop-profiles dp-nc interpolate fill-level 80 fill-level 100 drop-probability 0 drop-probability
100
set drop-profiles dp-hpc interpolate fill-level 75 fill-level 90 drop-probability 0 drop-probability
75
set schedulers be-sched priority low transmit-rate 3g
set schedulers be-sched shaping-rate percent 100
set schedulers be-sched drop-profile-map loss-priority low protocol any drop-profile dp-be-low
set schedulers be-sched drop-profile-map loss-priority high protocol any drop-profile dp-be-high
set schedulers fcoe-sched priority low transmit-rate 2500m
set schedulers fcoe-sched shaping-rate percent 100
set schedulers hpc-sched priority low transmit-rate 2g
set schedulers hpc-sched shaping-rate percent 100
set schedulers hpc-sched drop-profile-map loss-priority low protocol any drop-profile dp-hpc
set schedulers nc-sched priority low transmit-rate 500m
set schedulers nc-sched shaping-rate percent 100
set schedulers nc-sched drop-profile-map loss-priority low protocol any drop-profile dp-nc
set schedulers nl-sched priority low transmit-rate 2g
set schedulers nl-sched shaping-rate percent 100
set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
set scheduler-maps be-map forwarding-class be2 scheduler be-sched
set scheduler-maps be-map forwarding-class network-control scheduler nc-sched
set scheduler-maps gd-map forwarding-class fcoe scheduler fcoe-sched
set scheduler-maps gd-map forwarding-class no-loss scheduler nl-sched
set scheduler-maps hpc-map forwarding-class hpc scheduler hpc-sched
set traffic-control-profiles be-tcp scheduler-map be-map guaranteed-rate 3500m
set traffic-control-profiles be-tcp shaping-rate percent 100
set traffic-control-profiles gd-tcp scheduler-map gd-map guaranteed-rate 4500m
set traffic-control-profiles gd-tcp shaping-rate percent 100
set traffic-control-profiles hpc-tcp scheduler-map hpc-map guaranteed-rate 2g
set traffic-control-profiles hpc-tcp shaping-rate percent 100
set interfaces xe-0/0/20 forwarding-class-set best-effort-pg output-traffic-control-profile be-tcp
set interfaces xe-0/0/20 forwarding-class-set guar-delivery-pg output-traffic-control-profile
gd-tcp
set interfaces xe-0/0/20 forwarding-class-set hpc-pg output-traffic-control-profile hpc-tcp
set interfaces xe-0/0/21 forwarding-class-set best-effort-pg output-traffic-control-profile be-tcp

```

```

set interfaces xe-0/0/21 forwarding-class-set guar-delivery-pg output-traffic-control-profile
gd-tcp
set interfaces xe-0/0/21 forwarding-class-set hpc-pg output-traffic-control-profile hpc-tcp

```

## OCX Series Switches

Because OCX Series switches do not support lossless transport, the following subset of the configuration eliminates the lossless configuration elements and provides hierarchical port scheduling for the best-effort, be2, hpc, and network-control forwarding classes. In addition, on OCX Series switches, you would probably use DSCP classifiers and code points instead of IEEE classifiers and code points. To quickly configure hierarchical port scheduling on an OCX Series switch, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the [edit class-of-service] hierarchy level:

```

[edit class-of-service]
set forwarding-classes class best-effort queue-num 0
set forwarding-classes class be2 queue-num 1
set forwarding-classes class hpc queue-num 5
set forwarding-classes class network-control queue-num 7
set forwarding-class-sets best-effort-pg class best-effort
set forwarding-class-sets best-effort-pg class be2
set forwarding-class-sets best-effort-pg class network-control
set forwarding-class-sets hpc-pg class hpc
set classifiers ieee-802.1 hsclassifier1 forwarding-class best-effort loss-priority low code-points
000
set classifiers ieee-802.1 hsclassifier1 forwarding-class be2 loss-priority high code-points 001
set classifiers ieee-802.1 hsclassifier1 forwarding-class hpc loss-priority low code-points 101
set classifiers ieee-802.1 hsclassifier1 forwarding-class network-control loss-priority low
code-points 110
set interfaces xe-0/0/20 unit 0 classifiers ieee-802.1 hsclassifier1
set interfaces xe-0/0/21 unit 0 classifiers ieee-802.1 hsclassifier1
set drop-profiles dp-be-low interpolate fill-level 25 fill-level 50 drop-probability 0 drop-probability
80
set drop-profiles dp-be-high interpolate fill-level 10 fill-level 40 drop-probability 0 drop-probability
100
set drop-profiles dp-nc interpolate fill-level 80 fill-level 100 drop-probability 0 drop-probability
100
set drop-profiles dp-hpc interpolate fill-level 75 fill-level 90 drop-probability 0 drop-probability
75
set schedulers be-sched priority low transmit-rate 3g
set schedulers be-sched shaping-rate percent 100
set schedulers be-sched drop-profile-map loss-priority low protocol any drop-profile dp-be-low
set schedulers be-sched drop-profile-map loss-priority high protocol any drop-profile dp-be-high
set schedulers hpc-sched priority low transmit-rate 2g
set schedulers hpc-sched shaping-rate percent 100
set schedulers hpc-sched drop-profile-map loss-priority low protocol any drop-profile dp-hpc
set schedulers nc-sched priority low transmit-rate 500m
set schedulers nc-sched shaping-rate percent 100
set schedulers nc-sched drop-profile-map loss-priority low protocol any drop-profile dp-nc
set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
set scheduler-maps be-map forwarding-class be2 scheduler be-sched
set scheduler-maps be-map forwarding-class network-control scheduler nc-sched
set scheduler-maps hpc-map forwarding-class hpc scheduler hpc-sched
set traffic-control-profiles be-tcp scheduler-map be-map guaranteed-rate 3500m
set traffic-control-profiles be-tcp shaping-rate percent 100
set traffic-control-profiles hpc-tcp scheduler-map hpc-map guaranteed-rate 2g
set traffic-control-profiles hpc-tcp shaping-rate percent 100

```

```

set interfaces xe-0/0/20 forwarding-class-set best-effort-pg output-traffic-control-profile be-tcp
set interfaces xe-0/0/20 forwarding-class-set hpc-pg output-traffic-control-profile hpc-tcp
set interfaces xe-0/0/21 forwarding-class-set best-effort-pg output-traffic-control-profile be-tcp
set interfaces xe-0/0/21 forwarding-class-set hpc-pg output-traffic-control-profile hpc-tcp

```

### Step-by-Step Procedure

To perform a step-by-step configuration of the forwarding classes (priorities), forwarding class sets (priority groups), classifiers, queue schedulers, PFC, traffic control profiles, and interfaces to set up hierarchical port scheduling (ETS):

1. Configure the forwarding classes (priorities) and map them to unicast output queues (do not explicitly map the **fcoe** and **no-loss** forwarding classes to output queues; use the default configuration):

```

[edit class-of-service]
user@switch# set forwarding-classes class best-effort queue-num 0
user@switch# set forwarding-classes class be2 queue-num 1
user@switch# set forwarding-classes class hpc queue-num 5
user@switch# set forwarding-classes class network-control queue-num 7

```

2. Configure forwarding class sets (priority groups) to group forwarding classes (priorities) that require similar CoS treatment:

```

[edit class-of-service]
user@switch# set forwarding-class-sets best-effort-pg class best-effort
user@switch# set forwarding-class-sets best-effort-pg class be2
user@switch# set forwarding-class-sets best-effort-pg class network-control
user@switch# set forwarding-class-sets guar-delivery-pg class fcoe
user@switch# set forwarding-class-sets guar-delivery-pg class no-loss
user@switch# set forwarding-class-sets hpc-pg class hpc

```



**NOTE:** On OCX Series switches, you would not configure the **guar-delivery-pg** forwarding class set for lossless traffic.

3. Configure a classifier to set the loss priority and IEEE 802.1 code points assigned to each forwarding class at the ingress:

```

[edit class-of-service]
user@switch# set classifiers ieee-802.1 hsclassifier1 forwarding-class best-effort
loss-priority low code-points 000
user@switch# set classifiers ieee-802.1 hsclassifier1 forwarding-class be2 loss-priority
high code-points 001
user@switch# set classifiers ieee-802.1 hsclassifier1 forwarding-class fcoe loss-priority
low code-points 011
user@switch# set classifiers ieee-802.1 hsclassifier1 forwarding-class no-loss loss-priority
low code-points 100
user@switch# set classifiers ieee-802.1 hsclassifier1 forwarding-class hpc loss-priority low
code-points 101
user@switch# set classifiers ieee-802.1 hsclassifier1 forwarding-class network-control
loss-priority low code-points 110

```



**NOTE:** On OCX Series switches, you would not configure the **fcoe** and **no-loss** portions of the classifier.

4. Configure a congestion notification profile to enable PFC on the FCoE and no-loss queue IEEE 802.1 code points:

```
[edit class-of-service]
user@switch# set congestion-notification-profile gd-cnp input ieee-802.1 code-point 011
pfc
user@switch# set congestion-notification-profile gd-cnp input ieee-802.1 code-point 100
pfc
```



**NOTE:** This step does not apply to OCX Series switches, which do not support PFC.

5. Assign the classifier to the interfaces:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 unit 0 classifiers ieee-802.1 hsclassifier1
user@switch# set interfaces xe-0/0/21 unit 0 classifiers ieee-802.1 hsclassifier1
```

6. Apply the PFC configuration to the interfaces:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 congestion-notification-profile gd-cnp
user@switch# set interfaces xe-0/0/21 congestion-notification-profile gd-cnp
```



**NOTE:** This step does not apply to OCX Series switches, which do not support PFC.

7. Configure the drop profile for the best-effort low loss-priority queue:

```
[edit class-of-service]
user@switch# set drop-profiles dp-be-low interpolate fill-level 25 fill-level 50
drop-probability 0 drop-probability 80
```

8. Configure the drop profile for the best-effort high loss-priority queue:

```
[edit class-of-service]
user@switch# set drop-profiles dp-be-high interpolate fill-level 10 fill-level 40
drop-probability 0 drop-probability 100
```

9. Configure the drop profile for the network-control queue:

```
[edit class-of-service]
user@switch# set drop-profiles dp-nc interpolate fill-level 80 fill-level 100 drop-probability
0 drop-probability 100
```

10. Configure the drop profile for the high-performance computing queue:

```
[edit class-of-service]
user@switch# set drop-profiles dp-hpc interpolate fill-level 75 fill-level 90 drop-probability
0 drop-probability 75
```

11. Define the minimum guaranteed bandwidth, priority, maximum bandwidth, and drop profiles for the best-effort queue:

```
[edit class-of-service]
user@switch# set schedulers be-sched priority low transmit-rate 3g
user@switch# set schedulers be-sched shaping-rate percent 100
```

```

user@switch# set schedulers be-sched drop-profile-map loss-priority low protocol any
drop-profile dp-be-low
user@switch# set schedulers be-sched drop-profile-map loss-priority high protocol any
drop-profile dp-be-high

```

12. Define the minimum guaranteed bandwidth, priority, and maximum bandwidth for the FCoE queue:

```

[edit class-of-service]
user@switch# set schedulers fcoe-sched priority low transmit-rate 2500m
user@switch# set schedulers fcoe-sched shaping-rate percent 100

```



**NOTE:** This step does not apply to OCX Series switches, which do not support lossless transport.

13. Define the minimum guaranteed bandwidth, priority, maximum bandwidth, and drop profile for the high-performance computing queue:

```

[edit class-of-service]
user@switch# set schedulers hpc-sched priority low transmit-rate 2g
user@switch# set schedulers hpc-sched shaping-rate percent 100
user@switch# set schedulers hpc-sched drop-profile-map loss-priority low protocol any
drop-profile dp-hpc

```

14. Define the minimum guaranteed bandwidth, priority, maximum bandwidth, and drop profile for the network-control queue:

```

[edit class-of-service]
user@switch# set schedulers nc-sched priority low transmit-rate 500m
user@switch# set schedulers nc-sched shaping-rate percent 100
user@switch# set schedulers nc-sched drop-profile-map loss-priority low protocol any
drop-profile dp-nc

```

15. Define the minimum guaranteed bandwidth, priority, and maximum bandwidth for the no-loss queue:

```

[edit class-of-service]
user@switch# set schedulers nl-sched priority low transmit-rate 2g
user@switch# set schedulers nl-sched shaping-rate percent 100

```



**NOTE:** This step does not apply to OCX Series switches, which do not support lossless transport.

16. Map the schedulers to the appropriate forwarding classes (queues):

```

[edit class-of-service]
user@switch# set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
user@switch# set scheduler-maps be-map forwarding-class be2 scheduler be-sched
user@switch# set scheduler-maps be-map forwarding-class network-control scheduler
nc-sched
user@switch# set scheduler-maps gd-map forwarding-class fcoe scheduler fcoe-sched
user@switch# set scheduler-maps gd-map forwarding-class no-loss scheduler nl-sched
user@switch# set scheduler-maps hpc-map forwarding-class hpc scheduler hpc-sched

```



**NOTE:** On OCX Series switches, because lossless transport is not supported, you would not configure the `gd-map` scheduler map.

17. Define the traffic control profile for the best-effort priority group (queue scheduler to mapping, minimum guaranteed bandwidth, and maximum bandwidth):

```
[edit class-of-service]
user@switch# set traffic-control-profiles be-tcp scheduler-map be-map guaranteed-rate
3500m
user@switch# set traffic-control-profiles be-tcp shaping-rate percent 100
```

18. Define the traffic control profile for the guaranteed delivery priority group (queue to scheduler mapping, minimum guaranteed bandwidth, and maximum bandwidth):

```
[edit class-of-service]
user@switch# set traffic-control-profiles gd-tcp scheduler-map gd-map guaranteed-rate
4500m
user@switch# set traffic-control-profiles gd-tcp shaping-rate percent 100
```



**NOTE:** This step does not apply to OCX Series switches, which do not support lossless transport.

19. Define the traffic control profile for the high-performance computing priority group (queue to scheduler mapping, minimum guaranteed bandwidth, and maximum bandwidth):

```
[edit class-of-service]
user@switch# set traffic-control-profiles hpc-tcp scheduler-map hpc-map guaranteed-rate
2g
user@switch# set traffic-control-profiles hpc-tcp shaping-rate percent 100
```

20. Apply the three priority groups (forwarding class sets) and the appropriate traffic control profiles to the egress ports:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 forwarding-class-set best-effort-pg
output-traffic-control-profile be-tcp
user@switch# set interfaces xe-0/0/20 forwarding-class-set guar-delivery-pg
output-traffic-control-profile gd-tcp
user@switch# set interfaces xe-0/0/20 forwarding-class-set hpc-pg
output-traffic-control-profile hpc-tcp
user@switch# set interfaces xe-0/0/21 forwarding-class-set best-effort-pg
output-traffic-control-profile be-tcp
user@switch# set interfaces xe-0/0/21 forwarding-class-set guar-delivery-pg
output-traffic-control-profile gd-tcp
user@switch# set interfaces xe-0/0/21 forwarding-class-set hpc-pg
output-traffic-control-profile hpc-tcp
```



**NOTE:** Because OCX Series switches do not support lossless transport, on OCX Series switches, you would not apply the `guar-deliver-pg` forwarding class set and the `gd-tcp` traffic control profile to interfaces.



## Results

Display the results of the configuration (the system shows only the explicitly configured parameters; it does not show default parameters such as the **fcoe** and **no-loss** lossless forwarding classes). On OCX Series switches, you would not see the lossless configuration components in the output:

```
user@switch> show configuration class-of-service
classifiers {
  ieee-802.1 hsclassifier1 {
    forwarding-class best-effort {
      loss-priority low code-points 000;
    }
    forwarding-class be2 {
      loss-priority high code-points 001;
    }
    forwarding-class fcoe {
      loss-priority low code-points 011;
    }
    forwarding-class no-loss {
      loss-priority low code-points 100;
    }
    forwarding-class hpc {
      loss-priority low code-points 101;
    }
    forwarding-class network-control {
      loss-priority low code-points 110;
    }
  }
}
drop-profiles {
  dp-be-low {
    interpolate {
      fill-level [ 25 50 ];
      drop-probability [ 0 80 ];
    }
  }
  dp-be-high {
    interpolate {
      fill-level [ 10 40 ];
      drop-probability [ 0 100 ];
    }
  }
  dp-hpc {
    interpolate {
      fill-level [ 75 90 ];
      drop-probability [ 0 75 ];
    }
  }
  dp-nc {
    interpolate {
      fill-level [ 80 100 ];
      drop-probability [ 0 100 ];
    }
  }
}
```

```
forwarding-classes {
  class best-effort queue-num 0;
  class be2 queue-num 1;
  class hpc queue-num 5;
  class network-control queue-num 7;
}
traffic-control-profiles {
  be-tcp {
    scheduler-map be-map;
    shaping-rate percent 100;
    guaranteed-rate 3500000000;
  }
  gd-tcp {
    scheduler-map gd-map;
    shaping-rate percent 100;
    guaranteed-rate 4500000000;
  }
  hpc-tcp {
    scheduler-map hpc-map;
    shaping-rate percent 100;
    guaranteed-rate 2g;
  }
}
forwarding-class-sets {
  guar-delivery-pg {
    class fcoe;
    class no-loss;
  }
  best-effort-pg {
    class best-effort;
    class be2;
    class network-control;
  }
  hpc-pg {
    class hpc;
  }
}
congestion-notification-profile {
  gd-cnp {
    input {
      ieee-802.1 {
        code-point 011 {
          pfc;
        }
        code-point 100 {
          pfc;
        }
      }
    }
  }
}
interfaces {
  xe-0/0/20 {
    forwarding-class-set {
      best-effort-pg {
        output-traffic-control-profile be-tcp;
      }
    }
  }
}
```

```

    }
    guar-delivery-pg {
        output-traffic-control-profile gd-tcp;
    }
    hpc-pg {
        output-traffic-control-profile hpc-tcp;
    }
}
congestion-notification-profile gd-cnp;
unit 0 {
    classifiers {
        ieee-802.1 hsclassifier1;
    }
}
}
xe-0/0/21 {
    forwarding-class-set {
        best-effort-pg {
            output-traffic-control-profile be-tcp;
        }
        guar-delivery-pg {
            output-traffic-control-profile gd-tcp;
        }
        hpc-pg {
            output-traffic-control-profile hpc-tcp;
        }
    }
    congestion-notification-profile gd-cnp;
    unit 0 {
        classifiers {
            ieee-802.1 hsclassifier1;
        }
    }
}
}
scheduler-maps {
    be-map {
        forwarding-class best-effort scheduler be-sched;
        forwarding-class network-control scheduler nc-sched;
        forwarding-class be2 scheduler be-sched;
    }
    gd-map {
        forwarding-class fcoe scheduler fcoe-sched;
        forwarding-class no-loss scheduler nl-sched;
    }
    hpc-map {
        forwarding-class hpc scheduler hpc-sched;
    }
}
schedulers {
    be-sched {
        transmit-rate 3g;
        shaping-rate percent 100;
        priority low;
        drop-profile-map loss-priority low protocol any drop-profile dp-be-low;
        drop-profile-map loss-priority high protocol any drop-profile dp-be-high;
    }
}

```

```

}
fcoe-sched {
    transmit-rate 2500000000;
    shaping-rate percent 100;
    priority low;
}
hpc-sched {
    transmit-rate 2g;
    shaping-rate percent 100;
    priority low;
    drop-profile-map loss-priority low protocol any drop-profile dp-hpc;
}
nc-sched {
    transmit-rate 500m;
    shaping-rate percent 100;
    priority low;
    drop-profile-map loss-priority low protocol any drop-profile dp-nc;
}
nl-sched {
    transmit-rate 2g;
    shaping-rate percent 100;
    priority low;
}
}

```



**TIP:** To quickly configure the interfaces, issue the `load merge terminal` command, and then copy the hierarchy and paste it into the switch terminal window.

## Verification



**NOTE:** The verification output is based on the full example configuration. On OCX Series switches, you do not see lossless configuration components in the output. Comments about lossless configuration components do not apply to OCX Series switches.

To verify that you created the hierarchical port scheduling components and they are operating properly, perform these tasks:

- [Verifying the Forwarding Classes \(Priorities\) on page 259](#)
- [Verifying the Forwarding Class Sets \(Priority Groups\) on page 259](#)
- [Verifying the Classifier on page 260](#)
- [Verifying Priority-Based Flow Control on page 260](#)
- [Verifying the Output Queue Schedulers on page 261](#)
- [Verifying the Drop Profiles on page 264](#)

- [Verifying the Priority Group Output Schedulers \(Traffic Control Profiles\) on page 265](#)
- [Verifying the Interface Configuration on page 266](#)

### Verifying the Forwarding Classes (Priorities)

**Purpose** Verify that you created the forwarding classes and mapped them to the correct queues. (The system shows only the explicitly configured forwarding classes. It does not show default forwarding classes such as **fcoe** and **no-loss**.)

**Action** List the forwarding classes using the operational mode command **show class-of-service forwarding-class**:

```
user@switch> show class-of-service forwarding-class
```

Forwarding class	ID	Queue	Policing priority	No-Loss
best-effort	0	0	normal	Disabled
be2	1	3	normal	Disabled
hpc	2	4	normal	Disabled
network-control	3	7	normal	Disabled
mcast	8	8	normal	Disabled

**Meaning** The **show class-of-service forwarding-class** command lists all of the configured forwarding classes, the internal identification number of each forwarding class, the queues that are mapped to the forwarding classes, the policing priority, and whether the forwarding class is lossless (no-loss packet drop attribute enabled) or lossy forwarding class (no-loss packet drop attribute disabled). The command output shows that:

- Forwarding class **best-effort** maps to queue **0** and is lossy
- Forwarding class **be2** maps to queue **1** and is lossy
- Forwarding class **hpc** maps to queue **5** and is lossy
- Forwarding class **network-control** maps to queue **7** and is lossy

In addition, the command lists the default multicast (multidestination) forwarding class and the default queue to which it is mapped.

### Verifying the Forwarding Class Sets (Priority Groups)

**Purpose** Verify that you created the priority groups and that the correct priorities (forwarding classes) belong to the appropriate priority group.

**Action** List the forwarding class sets using the operational mode command **show class-of-service forwarding-class-set**:

```
user@switch> show class-of-service forwarding-class-set
```

```
Forwarding class set: best-effort-pg, Type: normal-type, Forwarding class set
index: 19907
```

Forwarding class	Index
best-effort	0

be2	1
network-control	5

Forwarding class set: guar-delivery-pg, Type: normal-type, Forwarding class set index: 43700

Forwarding class	Index
fcoe	2
no-loss	3

Forwarding class set: hpc-pg, Type: normal-type, Forwarding class set index: 60758

Forwarding class	Index
hpc	4

**Meaning** The **show class-of-service forwarding-class-set** command lists all of the configured forwarding class sets (priority groups), the forwarding classes (priorities) that belong to each priority group, and the internal index number of each priority group. The command output shows that:

- The forwarding class set **best-effort-pg** includes the forwarding classes **best-effort**, **be2**, and **network-control**.
- The forwarding class set **guar-delivery-pg** includes the forwarding classes **fcoe** and **no-loss**.
- The forwarding class set **hpc-pg** includes the forwarding class **hpc**.

### Verifying the Classifier

**Purpose** Verify that the classifier maps forwarding classes to the correct IEEE 802.1p code points and packet loss priorities.

**Action** List the classifier configured for hierarchical port scheduling using the operational mode command **show class-of-service classifier name hsclassifier1**:

```
user@switch> show class-of-service classifier name hsclassifier1
Classifier: hsclassifier1, Code point type: ieee-802.1, Index: 43607
  Code point      Forwarding class      Loss priority
  000             best-effort                low
  001             be2                    high
  011             fcoe                    low
  100             no-loss                 low
  101             hpc                    low
  110             network-control         low
```

**Meaning** The **show class-of-service classifier name hsclassifier1** command lists all of the IEEE 802.1p code points and the loss priorities mapped to all of the forwarding classes in the classifier. The command output shows that the forwarding classes **best-effort**, **be2**, **no-loss**, **fcoe**, **hpc**, and **network-control** have been created and mapped to IEEE 802.1p code points and loss priorities.

### Verifying Priority-Based Flow Control

**Purpose** Verify that PFC is enabled on the correct priorities for lossless transport.

**Action** List the congestion notification profiles using the operational mode command **show class-of-service congestion-notification**:

```
user@switch> show class-of-service congestion-notification
```

```
Type: Input, Name: gd-cnp, Index: 51687
```

```
Cable Length: 100 m
```

Priority	PFC	MRU
000	Disabled	
001	Disabled	
010	Disabled	
011	Enabled	2500
100	Enabled	2500
101	Disabled	
110	Disabled	
111	Disabled	

```
Type: Output
```

Priority	Flow-Control-Queues
000	0
001	0
010	1
011	2
100	3
101	4
110	5
111	6
	7

**Meaning** The **show class-of-service congestion-notification** command lists all of the congestion notification profiles and the IEEE 802.1p code points with PFC enabled. The command output shows that PFC is enabled for code points **011** (**fcoe** priority and queue) and **100** (**no-loss** priority and queue) for the **gd-cnp** congestion notification profile.

The command also shows the default cable length (100 meters), the default maximum receive unit (2500 bytes), and the default mapping of priorities to output queues because this example does not include configuring these options.

### Verifying the Output Queue Schedulers

**Purpose** Verify that you created the output queue schedulers with the correct bandwidth parameters and priorities, mapped to the correct queues, and mapped to the correct drop profiles.

**Action** List the scheduler maps using the operational mode command **show class-of-service scheduler-map**:

```
user@switch> show class-of-service scheduler-map
```

```
Scheduler map: be-map, Index: 64023
```

```
Scheduler: be-sched, Forwarding class: best-effort, Index: 13005
  Transmit rate: 3000000000 bps, Rate Limit: none, Buffer size: remainder,
```

Buffer Limit: none, Priority: low  
 Excess Priority: unspecified  
 Shaping rate: 100 percent,  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	55387	dp-be-low
Medium high	any	1	<default-drop-profile>
High	any	4369	dp-be-high

Scheduler: be-sched, Forwarding class: be2, Index: 13005  
 Transmit rate: 3000000000 bps, Rate Limit: none, Buffer size: remainder,  
 Buffer Limit: none, Priority: low  
 Excess Priority: unspecified  
 Shaping rate: 100 percent,  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	55387	dp-be-low
Medium high	any	1	<default-drop-profile>
High	any	4369	dp-be-high

Scheduler: nc-sched, Forwarding class: network-control, Index: 45740  
 Transmit rate: 5000000000 bps, Rate Limit: none, Buffer size: remainder,  
 Buffer Limit: none, Priority: low  
 Excess Priority: unspecified  
 Shaping rate: 100 percent,  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	44207	dp-nc
Medium high	any	1	<default-drop-profile>
High	any	1	<default-drop-profile>

Scheduler map: gd-map, Index: 61447

Scheduler: fcoe-sched, Forwarding class: fcoe, Index: 37289  
 Transmit rate: 25000000000 bps, Rate Limit: none, Buffer size: remainder,  
 Buffer Limit: none, Priority: low  
 Excess Priority: unspecified  
 Shaping rate: 100 percent,  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	44207	<default-drop-profile>
Medium high	any	1	<default-drop-profile>
High	any	1	<default-drop-profile>

Scheduler: nl-sched, Forwarding class: no-loss, Index: 29359  
 Transmit rate: 20000000000 bps, Rate Limit: none, Buffer size: remainder,  
 Buffer Limit: none, Priority: low  
 Excess Priority: unspecified  
 Shaping rate: 100 percent,  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	44207	<default-drop-profile>
Medium high	any	1	<default-drop-profile>
High	any	1	<default-drop-profile>

Scheduler map: hpc-map, Index: 56941



```
Scheduler: hpc-sched, Forwarding class: hpc, Index: 55900
Transmit rate: 2000000000 bps, Rate Limit: none, Buffer size: remainder,
Buffer Limit: none, Priority: low
Excess Priority: unspecified
Shaping rate: 100 percent,
drop-profile-map-set-type: mark
Drop profiles:
  Loss priority  Protocol  Index  Name
  Low           any       57716  dp-hpc
  Medium high   any       1      <default-drop-profile>
  High          any       1      <default-drop-profile>
```

**Meaning** The **show class-of-service scheduler-map** command lists all of the configured scheduler maps. For each scheduler map, the command output includes:

- The name of the scheduler map (**scheduler-map** field)
- The name of the scheduler (**scheduler** field)
- The forwarding classes mapped to the scheduler (**forwarding-class** field)
- The minimum guaranteed queue bandwidth (**transmit-rate** field)
- The scheduling priority (**priority** field)
- The maximum bandwidth in the priority group the queue can consume (**shaping-rate** field)
- The drop profile loss priority (**loss priority** field) for each drop profile name (**name** field)

The command output shows that:

- The scheduler map **be-map** was created and has these properties:
  - There are two schedulers, **be-sched** and **nc-sched**.
  - The scheduler **be-sched** has two forwarding classes, **best-effort** and **be2**.
  - Scheduler **be-sched** forwarding classes **best-effort** and **be2** share a minimum guaranteed bandwidth of **3,000,000,000 bps**, can consume a maximum of **100 percent** of the priority group bandwidth, and use the drop profile **dp-be-low** for low loss-priority traffic, the default drop profile for medium-high loss-priority traffic, and the drop profile **dp-be-high** for high loss-priority traffic.
  - The scheduler **nc-sched** has one forwarding class, **network-control**.
  - The **network-control** forwarding class has a minimum guaranteed bandwidth of **500,000,000 bps**, can consume a maximum of **100 percent** of the priority group bandwidth, and uses the drop profile **dp-nc** for low loss-priority traffic and the default drop profile for medium-high and high loss priority traffic.
- The scheduler map **gd-map** was created and has these properties:
  - There are two schedulers, **fcoe-sched** and **nl-sched**.
  - The scheduler **fcoe-sched** has one forwarding class, **fcoe**.

- The **fcoe** forwarding class has a minimum guaranteed bandwidth of **2,500,000,000 bps**, and can consume a maximum of **100 percent** of the priority group bandwidth.
- The scheduler **nl-sched** has one forwarding class, **no-loss**.
- The **no-loss** forwarding class has a minimum guaranteed bandwidth of **2,000,000,000 bps**, and can consume a maximum of **100 percent** of the priority group bandwidth.
- The scheduler map **hpc-map** was created and has these properties:
  - There is one scheduler, **hpc-sched**.
  - The scheduler **hpc-sched** has one forwarding class, **hpc**.
  - The **hpc** forwarding class has a minimum guaranteed bandwidth of **2,000,000,000 bps**, can consume a maximum of **100 percent** of the priority group bandwidth, and uses the drop profile **dp-hpc** for low loss-priority traffic and the default drop profile for medium-high and high loss-priority traffic.

---

### Verifying the Drop Profiles

**Purpose** Verify that you created the drop profiles **dp-be-high**, **dp-be-low**, **dp-hpc**, and **dp-nc** with the correct fill levels and drop probabilities.

**Action** List the drop profiles using the operational mode command **show configuration class-of-service drop-profiles**:

```
user@switch> show configuration class-of-service drop-profiles
dp-be-low {
    interpolate {
        fill-level [ 25 50 ];
        drop-probability [ 0 80 ];
    }
}
dp-be-high {
    interpolate {
        fill-level [ 10 40 ];
        drop-probability [ 0 100 ];
    }
}
dp-hpc {
    interpolate {
        fill-level [ 75 90 ];
        drop-probability [ 0 75 ];
    }
}
dp-nc {
    interpolate {
        fill-level [ 80 100 ];
        drop-probability [ 0 100 ];
    }
}
```

**Meaning** The **show configuration class-of-service drop-profiles** command lists the drop profiles and their properties. The command output shows that there are four drop profiles configured, **dp-be-high**, **dp-be-low**, **dp-hpc**, and **dp-nc**. The output also shows that:

- For **dp-be-low**, the drop start point (the first fill level) is when the queue is 25 percent filled, the drop end point (the second fill level) occurs when the queue is 50 percent filled, and the drop probability at the drop end point is 80 percent.
- For **dp-be-high**, the drop start point (the first fill level) is when the queue is 10 percent filled, the drop end point (the second fill level) occurs when the queue is 40 percent filled, and the drop probability at the drop end point is 100 percent.
- For **dp-hpc**, the drop start point (the first fill level) is when the queue is 75 percent filled, the drop end point (the second fill level) occurs when the queue is 90 percent filled, and the drop probability at the drop end point is 75 percent.
- For **dp-nc**, the drop start point (the first fill level) is when the queue is 80 percent filled, the drop end point (the second fill level) occurs when the queue is 100 percent filled, and the drop probability at the drop end point is 100 percent.

### Verifying the Priority Group Output Schedulers (Traffic Control Profiles)

<b>Purpose</b>	Verify that you created the traffic control profiles <b>be-tcp</b> , <b>gd-tcp</b> , and <b>hpc-tcp</b> with the correct bandwidth parameters and scheduler mapping.
<b>Action</b>	<p>List the traffic control profiles using the operational mode command <b>show class-of-service traffic-control-profile</b>:</p> <pre> user@switch&gt; show class-of-service traffic-control-profile Traffic control profile: be-tcp, Index: 40535   Shaping rate: 100 percent   Scheduler map: be-map   Guaranteed rate: 3500000000  Traffic control profile: gd-tcp, Index: 37959   Shaping rate: 100 percent   Scheduler map: gd-map   Guaranteed rate: 4500000000  Traffic control profile: hpc-tcp, Index: 47661   Shaping rate: 100 percent   Scheduler map: hpc-map   Guaranteed rate: 2000000000 </pre>
<b>Meaning</b>	<p>The <b>show class-of-service traffic-control-profile</b> command lists all of the configured traffic control profiles. For each traffic control profile, the command output includes:</p> <ul style="list-style-type: none"> <li>• The name of the traffic control profile (<b>traffic-control-profile</b>)</li> <li>• The maximum port bandwidth the priority group can consume (<b>shaping-rate</b>)</li> <li>• The scheduler map associated with the traffic control profile (<b>scheduler-map</b>)</li> <li>• The minimum guaranteed priority group port bandwidth (<b>guaranteed-rate</b>)</li> </ul> <p>The command output shows that:</p> <ul style="list-style-type: none"> <li>• The traffic control profile <b>be-tcp</b> can consume a maximum of <b>100 percent</b> of the port bandwidth, is associated with the scheduler map <b>be-map</b>, and has a minimum guaranteed bandwidth of <b>3,500,000,000 bps</b>.</li> </ul>

- The traffic control profile **gd-tcp** can consume a maximum of **100 percent** of the port bandwidth, is associated with the scheduler map **gd-map**, and has a minimum guaranteed bandwidth of **4,500,000,000 bps**.
- The traffic control profile **hpc-tcp** can consume a maximum of **100 percent** of the port bandwidth, is associated with the scheduler map **hpc-map**, and has a minimum guaranteed bandwidth of **2,000,000,000 bps**.

### Verifying the Interface Configuration

---

**Purpose** Verify that the classifier, the congestion notification profile, and the forwarding class sets are configured on interfaces **xe-0/0/20** and **xe-0/0/21**.

**Action** List the interfaces using the operational mode commands **show configuration class-of-service interfaces xe-0/0/20** and **show configuration class-of-service interfaces xe-0/0/21**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/20
forwarding-class-set {
    best-effort-gp {
        output-traffic-control-profile be-tcp;
    }
    guar-delivery-pg {
        output-traffic-control-profile gd-tcp;
    }
    hpc-pg {
        output-traffic-control-profile hpc-tcp;
    }
}
congestion-notification-profile gd_cnp;
unit 0 {
    classifiers {
        ieee-802.1 hsclassifier1;
    }
}
```

```
user@switch> show configuration class-of-service interfaces xe-0/0/21
forwarding-class-set {
    best-effort-gp {
        output-traffic-control-profile be-tcp;
    }
    guar-delivery-pg {
        output-traffic-control-profile gd-tcp;
    }
    hpc-pg {
        output-traffic-control-profile hpc-tcp;
    }
}
congestion-notification-profile gd_cnp;
unit 0 {
    classifiers {
        ieee-802.1 hsclassifier1;
    }
}
```

**Meaning** The `show configuration class-of-service interfaces interface-name` command shows that each interface includes the forwarding class sets **best-effort-pg**, **guar-delivery-pg**, and **hpc-pg**, congestion notification profile **gd-cnp**, and the IEEE 802.1p classifier **hsclassifier1**.

- Related Documentation**
- *Defining CoS Unicast BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p)*
  - *Benefits of Configuring CoS Hierarchical Port Scheduling*
  - *Assigning CoS Components to Interfaces on page 23*
  - *Example: Configuring WRED Drop Profiles*
  - *Example: Configuring Drop Profile Maps on page 213*
  - *Example: Configuring Forwarding Classes*
  - *Example: Configuring Forwarding Class Sets on page 93*
  - *Example: Configuring Queue Schedulers*
  - *Example: Configuring Queue Scheduling Priority on page 149*
  - *Example: Configuring Traffic Control Profiles (Priority Group Scheduling) on page 158*
  - *Example: Configuring Minimum Guaranteed Output Bandwidth on page 194*
  - *Example: Configuring Maximum Output Bandwidth on page 201*
  - *Configuring CoS PFC (Congestion Notification Profiles) on page 301*
  - *Overview of CoS Changes Introduced in Junos OS Release 12.2*
  - *Understanding CoS Hierarchical Port Scheduling (ETS) on page 161*
  - *Understanding CoS Scheduling Behavior and Configuration Considerations on page 114*
  - *Understanding CoS Scheduling on QFabric System Node Device Fabric (fte) Ports*
  - *Understanding Default CoS Scheduling on QFabric System Interconnect Devices (Junos OS Release 13.1 and Later Releases)*

## Disabling the ETS Recommendation TLV

---

The enhanced transmission selection (ETS) Recommendation TLV communicates the ETS settings that the switch wants the connected peer interface to use. If the peer interface is “willing,” the peer interface changes its configuration to match the configuration in the ETS Recommendation TLV. By default, the switch interfaces send the ETS Recommendation TLV to the peer. The settings communicated are the egress ETS settings defined by configuring hierarchical scheduling on the interface.

We recommend that you use the same ETS settings on the connected peer that you use on the switch interface and that you leave the ETS Recommendation TLV enabled. However, on interfaces that use IEEE DCBX as the DCBX mode, if you want an asymmetric configuration between the switch interface and the connected peer, you can disable the ETS Recommendation TLV.



**NOTE:** Disabling the ETS Recommendation TLV on interfaces that use DCBX version 1.01 as the DCBX mode has no effect and does not change DCBX behavior.

If you disable the ETS Recommendation TLV, the switch still sends the ETS Configuration TLV to the connected peer. The result is that the connected peer is informed about the switch DCBX ETS configuration, but even if the peer is “willing,” the peer does not change its configuration to match the switch configuration. This is asymmetric configuration—the two interfaces can have different parameter values for the ETS attribute.

To disable the ETS Recommendation TLV:

- [edit protocols dcbx interface *interface-name*]  
user@switch# **set enhanced-transmission-selection no-recommendation-tlv**

### Related Documentation

- [Configuring the DCBX Mode on page 422](#)
- [Configuring DCBX Autonegotiation on page 423](#)
- [Understanding DCBX on page 412](#)
- [Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches](#)

## Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows

The switch supports up to six lossless forwarding classes. (Junos OS Release 12.3 increased support for lossless priorities from two lossless forwarding classes—the default **fcoe** and **no-loss** forwarding classes—to a maximum of six lossless forwarding classes.) Each forwarding class is mapped to an IEEE 802.1p code point (priority).



**NOTE:** Junos OS Release 13.1 introduced support for up to six lossless forwarding classes on QFabric systems. Throughout this document, features introduced on standalone switches in Junos OS Release 12.3 are introduced on QFabric systems in Junos OS Release 13.1 unless otherwise noted.

Only switches with native Fibre Channel (FC) interfaces, such as the QFX3500, support native FC traffic and configuration as an FCoE-FC gateway. Throughout this document, features that pertain to native FC traffic and to FCoE-FC gateway configuration apply only to switches that support native FC interfaces.



**Video:** [Why Use PFC in a Data Center Network?](#)

The default configuration is the same as the default configuration in Junos OS Release 12.2 and is backward-compatible. If you need only two (or fewer) lossless forwarding classes, use the default configuration, in which the **fcoe** and **no-loss** forwarding classes are lossless. If you need more than two lossless forwarding classes, you can use the two default lossless forwarding classes and configure additional lossless forwarding classes. If you do not want to use the default lossless forwarding classes, you can change them, or use only the lossless forwarding classes that you explicitly configure.

- [Default Lossless Priority Configuration on page 269](#)
- [Configuring Lossless Priorities on page 272](#)
- [Configuration Rules and Recommendations on page 285](#)
- [Lossless Transport Features Introduced in Junos OS Release 12.3 \(Legacy Non-ELS CLI\) on page 286](#)
- [Backward Compatibility with Junos OS Releases Earlier Than Release 12.3 \(Legacy Non-ELS CLI\) on page 287](#)

### Default Lossless Priority Configuration

If you do not explicitly configure forwarding classes, the system uses the default forwarding class configuration, which provides two default lossless forwarding classes (**fcoe** and **no-loss**). (If you change the forwarding class configuration, the changes apply to all traffic on that device because forwarding classes are global to a particular device.)

If you do not explicitly configure classifiers, and you do not explicitly configure flow control to pause output queues (configured in the output stanza of the CNP), the default classifier

and the default output queue pause configurations are applied to all Ethernet interfaces on the switches (or Node devices). You can override the default classifier and the default output queue pause configuration on a per-interface basis by applying an explicit configuration to an Ethernet interface. The default configuration is used on all Ethernet interfaces that do not have an explicit configuration.



**NOTE:** If you do not configure flow control on output queues, the default configuration uses a one-to-one mapping of IEEE 802.1p code points (priorities) to output queues by number. For example, priority 0 (code point 000) is mapped to queue 0, priority 1 (code point 001) is mapped to queue 1, and so on. If you do not use the default configuration, you must explicitly configure flow control on each output queue that you want to enable for PFC pause in the output stanza of the CNP.

In the default configuration, only queue 3 and queue 4 are enabled to respond to pause messages from the connected peer. For queue 3 to respond to pause messages, priority 3 (code point 011) must be enabled for PFC in the input stanza of the CNP. For queue 4 to respond to pause messages, priority 4 (code point 100) must be enabled for PFC in the input stanza of the CNP.

The default configuration provides the following lossless behavior:

- Two default lossless forwarding classes (the **no-loss** packet drop attribute is applied to these forwarding classes automatically):  
fcoe—Mapped to output queue 3  
no-loss—Mapped to output queue 4
- A default classifier that maps the fcoe forwarding class to IEEE 802.1p priority 3 (011) and the no-loss forwarding class to IEEE 802.1p priority 4 (100)
- Priority-based flow control (PFC) enabled on Ethernet interface output queues 3 and 4 when those queues carry lossless traffic (traffic that is mapped to the fcoe and no-loss forwarding classes, respectively).

On switches that can be configured as an FCoE-FC gateway, native FC interfaces (NP\_Ports), with default flow control enabled on output queue 3 (IEEE 802.1p priority 3) for FCoE/FC traffic.

- DCBX is enabled on all interfaces in autonegotiation mode, and automatically exchanges FCoE application protocol type, length, and values (TLVs) on interfaces that carry FCoE traffic. However, if you explicitly configure DCBX protocol TLV exchange for any application, then you must explicitly configure protocol TLV exchange for every application for which you want DCBX to exchange TLVs, including FCoE.
- On Ethernet ports, PFC buffer calculations use the following default values to determine the headroom buffer size:  
Cable length—100 meters (approximately 328 feet)  
MRU for priority 3 traffic—2500 bytes  
MRU for priority 4 traffic—9216 bytes  
Maximum transmission unit (MTU)—1522 (or the configured MTU value for the interface)





**NOTE:** If you configure flow control on a priority that is not one of the default flow control priorities, the default MRU value is 2500 bytes. For example, if you configure flow control on priority 5 and you do not configure an MRU value, the default MRU value is 2500 bytes.



**NOTE:** In addition, to support lossless transport, PFC must be enabled explicitly on the lossless IEEE 802.1p priorities (code points) on ingress Ethernet interfaces; no default PFC configuration is applied at ingress interfaces. If you do not enable PFC on lossless priorities, those priorities might experience packet loss during periods of congestion. For example, if you want lossless FCoE traffic and you are using the default fcoe forwarding class, you use a CNP to enable PFC on priority 3 (code point 011), and apply that CNP to all ingress interfaces that carry FCoE traffic.

You can override the default classifier and the default output queue pause configuration on a per-interface basis by applying an explicit configuration to an Ethernet interface.

The default CoS configuration is backward-compatible with the *default* CoS configuration of software releases before Junos OS Release 12.3. If you explicitly configure lossless transport, ensure that the input and output queues corresponding to the lossless forwarding classes are explicitly configured for PFC pause.

Table 61 on page 271 summarizes the default forwarding classes and their mapping to output queues, IEEE 802.1p priorities, and drop attributes.

**Table 61: Mapping of Default Forwarding Class to Queue, IEEE 802.1p Priority, and Drop Attribute**

Forwarding Class Name	Output Queue	Priority	Drop Attribute
best-effort	0	0	drop
fcoe	3	3	no-loss
no-loss	4	4	no-loss
network-control	7	7	drop

On switches that use the same forwarding classes and output queues for unicast and multidestination (multicast, broadcast, and destination lookup fail) traffic, these forwarding classes carry both unicast and multidestination traffic. Only unicast traffic is treated as lossless traffic. Multidestination traffic is not treated as lossless traffic, even on lossless output queues.

On switches that use different forwarding classes and output queues for unicast and multidestination traffic, there is one default multidestination forwarding class named *mcast*, which is mapped to output queue 8 with a drop attribute of drop. (Incoming

multidestination traffic on all IEEE 802.1p priorities is mapped to the mcast forwarding class by default.)

## Configuring Lossless Priorities

To configure more than two lossless priorities (forwarding classes), or to change the default mapping of lossless forwarding classes to priorities and paused output queues, you must explicitly configure the switch instead of using the default configuration. Configuring lossless priorities includes:

- Configuring forwarding classes with the no-loss packet drop attribute.
- Using a CNP to configure PFC on ingress interfaces and flow control (PFC) on egress interfaces.
- Configuring a classifier to map IEEE 802.1p priorities (code points) to the correct forwarding classes (the forwarding classes for which you want lossless transport).



**NOTE:** If you expect a large amount of lossless traffic on your network and configure multiple lossless traffic classes, ensure that you reserve enough scheduling resources (bandwidth) and buffer space to support the lossless flows. (For switches that support shared buffer configuration, *Understanding CoS Buffer Configuration* describes how to configure buffers and provides a recommended buffer configuration for networks with larger amounts of lossless traffic. Buffer optimization is automatic on switches that use virtual output queues.)

In addition, on Ethernet interfaces, DCBX must exchange the appropriate application protocol TLVs for the lossless traffic. On switches that can act as an FCoE-FC gateway, you need to remap the FCoE priority on native FC interfaces if your network uses a priority other than 3 (IEEE code point 011) for FCoE traffic. This section describes:

- [Configuring Lossless Forwarding Classes \(Packet Drop Attribute\) on page 272](#)
- [Congestion Notification Profiles \(PFC Configuration\) on page 274](#)
- [Configuring DCBX \(Application Protocol TLV Exchange\) on page 280](#)
- [Fate Sharing Among Traffic Classes on page 281](#)
- [Transit Switch Configuration Versus FCoE-FC Gateway Configuration on page 282](#)
- [Configuration Results and Commit Checks on page 283](#)

### Configuring Lossless Forwarding Classes (Packet Drop Attribute)

---

Junos OS Release 12.3 introduced the *no-loss* parameter for forwarding class configuration. (Although it uses the same name, this is not the no-loss default forwarding class. It is a packet drop attribute you can specify to configure any forwarding class as a lossless forwarding class.)



**NOTE:** On switches that use different forwarding classes for unicast and multdestination traffic, the forwarding class must be a unicast forwarding class. On switches that use the same forwarding classes for unicast and multdestination traffic, only unicast traffic receives lossless treatment.

You can configure up to six forwarding classes (depending on system architecture and the availability of system resources) as lossless forwarding classes by including the **no-loss** drop attribute at the **[edit class-of-service forwarding-classes class forwarding-class-name queue-num queue-number]** hierarchy level.

If you use the default fcoe or no-loss forwarding classes, they include the no-loss drop attribute by default. If you explicitly configure the fcoe or no-loss forwarding classes and you want to retain their lossless behavior, you *must* include the no-loss drop attribute in the configuration.



**NOTE:** All forwarding classes mapped to the same output queue must have the same packet drop attribute. (All forwarding classes mapped to the same output queue must be either lossy or lossless. You cannot map both a lossy and a lossless forwarding class to the same queue.)

To avoid fate sharing (a congested flow affecting an uncongested flow), use a one-to-one mapping of lossless forwarding classes to IEEE 802.1p code points (priorities) and queues. Map each lossless forwarding class to a different queue, and classify incoming traffic into forwarding classes so that each forwarding class transports traffic of only one priority (code point).

The fcoe and no-loss forwarding classes are special cases, because in the default configuration, they are configured for lossless behavior (providing that you also enable PFC on the priorities mapped to the fcoe and no-loss forwarding classes in the CNP input stanza).

[Table 62 on page 274](#) summarizes the possible configurations of the fcoe and no-loss forwarding classes in Junos OS Release 12.3 and later, and the result of those configurations in terms of lossless traffic behavior. It is assumed that PFC, DCBX, and classifiers are properly configured.

**Table 62: FCoE and No-Loss Forwarding Class Configuration in Junos OS Release 12.3**

Explicit (User-Configured) or Default Forwarding Class Configuration	Packet Drop Attribute	Result and Notes
Default	Default	The fcoe and no-loss forwarding classes are lossless.  <b>NOTE:</b> Even if you explicitly configure other forwarding classes (lossy or lossless forwarding classes), the fcoe and no-loss forwarding classes remain lossless because they are not explicitly configured.
Explicit	Not specified in the explicit forwarding class configuration	The fcoe and no-loss forwarding classes are lossy because they do not include the no-loss drop attribute.
Explicit	No-loss	The fcoe and no-loss forwarding classes are lossless.
Explicit, configured in Junos OS Release 12.2 or earlier	Not specified (packet drop attribute was not available before Junos OS Release 12.3)	The fcoe and no-loss forwarding classes are lossy in Junos OS Release 12.3 and later because they do not include the no-loss drop attribute.  <b>NOTE:</b> To retain lossless behavior, before you upgrade to Junos OS Release 12.3, delete the explicit configuration so that the system uses the default configuration. Alternatively, you can reconfigure the forwarding classes with the no-loss packet drop attribute after upgrading to Junos OS Release 12.3 or later.

For all other forwarding classes except the **fcoe** and **no-loss** forwarding classes, you must explicitly configure lossless transport by specifying the no-loss packet drop attribute, because the default configuration for all other forwarding classes is lossy (the no-loss packet drop attribute is not applied).

### Congestion Notification Profiles (PFC Configuration)

Use CNPs to configure lossless PFC characteristics on input and output interfaces.

The input stanza of a CNP enables PFC on specified IEEE 802.1p priorities (code points) and fine-tunes headroom buffer settings by configuring the maximum receive unit (MRU) value and cable length on ingress interfaces.

The output stanza of a CNP enables PFC (flow control) on output queues for specified IEEE 802.1p priorities so that the queues can respond to PFC pause messages from the connected peer on the priority of your choice. (By default, output queues 3 and 4 respond to received PFC messages when those queues carry lossless traffic in the fcoe and no-loss forwarding classes, respectively.)

To achieve lossless transport, the priority paused at the ingress interfaces must match the priority paused at the egress interfaces for a given traffic flow. For example, if you configure ingress interfaces to pause traffic tagged with IEEE 802.1p priority 5 (code point 101) and priority 5 traffic is mapped to output queue 5, then you must also configure the corresponding output interfaces to pause priority 5 on queue 5. In addition, the forwarding class mapped to queue 5 must be configured as a lossless forwarding class (using the no-loss drop attribute).



**CAUTION:** Any change to the PFC configuration on a port temporarily blocks the entire port (not just the priorities affected by the PFC change) so that the port can implement the change, then unblocks the port. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

A change to the PFC configuration means any change to a CNP, including changing the input portion of the CNP (enabling or disabling PFC on a priority, or changing the MRU or cable-length values) or changing the output portion the CNP that enables or disables output flow control on a queue. A PFC configuration change only affects ports that use the changed CNP.

The following actions change the PFC configuration:

- Deleting or disabling a PFC configuration (input or output) in a CNP that is in use on one or more interfaces. For example:
  1. An existing CNP with an input stanza that enables PFC on priorities 3, 5, and 6 is configured on interfaces xe-0/0/20 and xe-0/0/21.
  2. We disable the PFC configuration for priority 6 in the input CNP, and then commit the configuration.
  3. The PFC configuration change causes all traffic on interfaces xe-0/0/20 and xe-0/0/21 to stop until the PFC change has been implemented. When the PFC change has been implemented, traffic resumes.
- Configuring a CNP on an interface. (This changes the PFC state by enabling PFC on one or more priorities.)
- Deleting a CNP from an interface. (This changes the PFC state by disabling PFC on one or more priorities.)

### ***Configuring Input Interface Flow Control (PFC and Headroom Buffer Calculation)***

On Ethernet interfaces, the input stanza of the CNP enables PFC on specified priorities so that the ingress interface can send a pause message to the connected peer during periods of congestion. Input CNPs also fine-tune the headroom buffers used for PFC support by allowing you to configure the MRU value and cable length (if you do not want to use the default configuration).

Headroom buffers support lossless transport by storing the traffic that arrives at an interface after the interface sends a PFC flow control message to pause incoming traffic.

Until the connected peer receives the flow control message and pauses traffic, the interface continues to receive traffic and must buffer it (and the traffic that is still on the wire after the peer pauses) to prevent packet loss.

The system uses the MRU and the length of the attached physical cable to calculate buffer headroom allocation. The default configuration values are:

- MRU for priority 3 traffic—2500 bytes
- MRU for priority 4 traffic—9216 bytes
- Cable length—100 meters (approximately 328 feet)



**NOTE:** If you configure flow control on a priority that is not one of the default flow control priorities, the default MRU value is 2500 bytes. For example, if you configure flow control on priority 5 and you do not explicitly configure an MRU value, the default MRU value is 2500 bytes.

You can fine-tune the MRU and the cable length to adjust the size of the headroom buffer on an interface. The switch has a shared global buffer pool and dynamically allocates headroom buffer space to lossless queues as needed.

A lower MRU or a shorter cable length reduces the amount of headroom buffer required on an interface and leaves more headroom buffer space for other interfaces. A higher MRU or a longer cable length increases the amount of headroom buffer space required on an interface and leaves less headroom buffer space for other interfaces.

In many cases, you can better utilize the headroom buffers by reducing the MRU value (for example, an MRU of 2180 is sufficient for most FCoE networks) and by reducing the cable length value if the physical cable is less than 100 meters long.



**NOTE:** When you configure the headroom buffers by changing the MRU or the cable length, and commit the configuration, the system performs a commit check and rejects the configuration if sufficient headroom buffer space is not available.

However, the system does not perform a commit check but instead returns a syslog error if:

- The buffers are configured on a LAG interface.
- The default classifier is used on the interface (instead of a user-configured classifier).
- The interface has not been created yet.

---

### ***Configuring Output Interface Flow Control (PFC)***

On Ethernet interfaces, you can use the output stanza of the CNP to configure flow control on output queues and enable PFC pause response on specified IEEE 802.1p priorities.



**NOTE:** On switches that use different output queues for unicast and multdestination traffic, the queue must be a unicast output queue.

By default, output queues 3 and 4 are enabled for PFC pause on priorities 3 (IEEE 802.1p code point 011) and 4 (IEEE 802.1p code point 100). The default PFC pause response supports the default lossless forwarding class configuration, which maps the fcoe forwarding class to queue 3 and priority 3, and maps the no-loss forwarding class to queue 4 and priority 4.

Configuring PFC on output queues enables you to pause any priority on any output queue on any Ethernet interface. Output flow control enables you to use more than two output queues to support lossless traffic flows (you can configure up to six lossless forwarding classes and map them to different output queues that are enabled for PFC pause). Output queue flow control also enables you to support multiple lossless forwarding classes (each mapped to a different priority and output queue) for one class of traffic.



**NOTE:** Output flow control only works when PFC is enabled in the CNP input stanza on the corresponding priorities on the interface. For example, if you enable output flow control on priority 5 (IEEE 802.1p code point 101), then you must also enable PFC in the CNP on the input stanza on priority 5.

For example, if the converged Ethernet network uses two different priorities for FCoE traffic (for example, priority 3 and priority 5), then you can classify those priorities into different lossless forwarding classes that are mapped to different output queues:

1. Configure two lossless forwarding classes for FCoE traffic, with each forwarding class mapped to a different output queue. For example, you could use the default fcoe forwarding class, which is mapped to queue 3, and you could configure a second lossless forwarding class called fcoe1 and map it to queue 5. The fcoe forwarding class is for priority 3 FCoE traffic (code point 011), and the fcoe1 forwarding class is for priority 5 (code point 101) FCoE traffic.
2. Configure a classifier that maps each forwarding class to the desired IEEE 802.1p code point (priority). If FCoE traffic on both priorities uses one interface, the classifier must classify both forwarding classes to the correct priorities. If FCoE traffic of different priorities uses different interfaces, the classifier configuration on each interface must map the correct priority to the corresponding lossless forwarding class.
3. Apply the classifier to the interfaces that carry FCoE traffic. The classifier determines the mapping of forwarding classes to priorities on each interface.

To configure lossless transport for these forwarding classes, you also need to:

- Enable PFC on the two priorities (3 and 5 in this example) at the ingress interfaces in the CNP input stanza.
- Configure PFC on the output queues and priorities for the forwarding classes in the CNP output stanza so that the interface can respond to pause messages received from the connected peer.



**NOTE:** When you configure the CNP on an interface, all ingress and egress traffic is blocked until the configuration is implemented, then the interface is unblocked and traffic resumes. During the time the interface is blocked, all queues on the interface experience packet loss.

- Configure DCBX to exchange application protocol TLVs on both FCoE priorities.



**NOTE:** If you do not configure flow control to pause output queues, the default configuration uses a one-to-one mapping of IEEE 802.1p code points (priorities) to output queues by number. For example, priority 0 (code point 000) is mapped to queue 0, priority 1 (code point 001) is mapped to queue 1, and so on. By default, only queues 3 and 4 are enabled to respond to pause messages from the connected peer, and you must explicitly enable PFC on the corresponding priorities in the CNP input stanza to achieve lossless behavior.

If you do not use the default configuration, you must explicitly configure flow control on each output queue that you want to enable for PFC pause. For example, if you explicitly configure flow control on output queue 5, the default configuration is no longer valid, and only output queue 5 is enabled for PFC pause. Output queues 3 and 4 are no longer enabled for PFC pause, so traffic using those queues no longer responds to PFC pause messages even if the corresponding forwarding class is configured with the no-loss drop attribute. To retain the pause configuration on output queues 3 and 4 and configure flow control on queue 5, you need to explicitly configure flow control on queues 3, 4, and 5.

On switches that use different output queues for unicast and multdestination traffic, you cannot configure flow control to pause a multdestination output queue. You can configure flow control to pause only unicast output queues. On switches that use the same output queues for unicast and multdestination traffic, only unicast traffic receives lossless treatment.

### ***Output Interface Flow Control Profiles***

Configuring the CNP output stanza creates an output flow control profile that tells egress ports the queues on which the Ethernet interface should respond to PFC pause messages. Although you can create an unlimited number of CNPs that contain input stanzas only, the number of CNPs that you can configure with output stanzas is limited:

- For standalone switches that are not part of a QFabric system, you can configure up to two output interface flow control profiles. (You can configure up to two CNPs with output stanzas.)
- For QFabric systems, you can configure one output interface flow control profile per Node device. (You can configure one CNP with an output stanza per Node device.)

There are a total of four output flow control profiles.



The system has a default output flow control profile that is applied to all Ethernet interfaces when the CNP attached to the interface has only an input stanza and does not include an output stanza. The default profile responds to PFC pause messages received on queue 3 (for priority 3, for the default fcoe forwarding class) and on queue 4 (for priority 4, for the default no-loss forwarding class), and is effective only if PFC is configured on those priorities in the CNP input stanza.

Additionally, the system has two internal output flow control profiles that it applies automatically to fabric (FTE) ports and to native FC interfaces (NP\_Ports). When the switch is not part of a QFabric system, the profile normally used for FTE ports is available for user configuration and provides a second user-configurable profile. (That is why standalone switches have two user-configurable output flow control profiles, but Node devices on a QFabric system have only one user-configurable output flow control profile.)

Because one output CNP can configure PFC pause response on multiple output queues (priorities), one user-configurable output CNP is usually flexible enough to specify the desired PFC response on all programmed interfaces.



**NOTE:** Each port can use one output flow control profile. You cannot apply more than one profile to one port.

Output flow control profiles can be expressed in table format. For example, [Table 63 on page 279](#) shows the default output flow control profile that pauses priorities 3 and 4 on queues 3 and 4 (remember that PFC must also be enabled on code points 3 and 4 in the CNP input stanza in order for PFC to work):

**Table 63: Default Output Flow Control Profile**

IEEE 802.1p Priority Specified in Received PFC Frame	Paused Output Queue
0 (000)	—
1 (001)	—
2 (010)	—
3 (011)	3
4 (100)	4
5 (101)	—
6 (110)	—
7 (111)	—

[Table 64 on page 280](#) is an example of a user-configured output flow control profile. Using the example from the preceding section, the CNP output stanza configures flow control on output queue 5, and also explicitly configures output flow control on queues 3 and 4

for the fcoe and no-loss forwarding classes. (If you explicitly configure an output CNP, you must explicitly configure every output queue that you want to respond to PFC messages, because the user-configured profile overrides the default profile. If this example did not include queues 3 and 4, those queues would no longer respond to received PFC messages.)

**Table 64: User-Configured Output Flow Control Profile**

IEEE 802.1p Priority Specified in Received PFC Frame	Paused Output Queue
0 (000)	—
1 (001)	—
2 (010)	—
3 (011)	3
4 (100)	4
5 (101)	5
6 (110)	—
7 (111)	—

Remember that you must also enable PFC on code points 3, 4, and 5 in the CNP input stanza for this configuration to work. When you configure the CNP on an interface, all ingress and egress traffic is blocked until the configuration is implemented, then the interface is unblocked and traffic resumes. During the time the interface is blocked, all queues on the interface experience packet loss.

#### ***Configuring PFC Across Layer 3 Interfaces on QFX5200, QFX5100, EX4600, and QFX10000 Switches***

Enabling PFC on traffic flows is based on the IEEE 802.1p code point (priority) in the priority code point (PCP) field of the Ethernet frame header (sometimes known as the CoS bits). To enable PFC on traffic that crosses Layer 3 interfaces, the traffic must be classified by its IEEE 802.1p code point, not by its DSCP (or DSCP IPv6) code point.

See [“Understanding PFC Functionality Across Layer 3 Interfaces” on page 317](#) for a conceptual overview of how to enable PFC on traffic across Layer 3 interfaces. See [“Example: Configuring PFC Across Layer 3 Interfaces” on page 319](#) for an example of how to configure PFC on traffic that traverses Layer 3 interfaces.

#### **Configuring DCBX (Application Protocol TLV Exchange)**

For applications that require lossless transport, DCBX exchanges application protocol TLVs with the connected peer interface. By default, DCBX advertises FCoE application protocol TLVs on all interfaces that are enabled for DCBX, and by default, DCBX is enabled on all interfaces. DCBX advertises no other applications by default.

For each application (for example, iSCSI) that you want to configure for lossless transport, you must enable the interfaces which carry that application traffic to exchange DCBX protocol TLVs with the connected peer. The TLV exchange allows the peer interfaces to negotiate a compatible configuration to support the application.

If you configure DCBX to advertise any application, the default DCBX advertisement is overridden, and DCBX advertises only the configured applications. If you want an interface to advertise only the FCoE application, you do not have to configure DCBX application protocol TLV exchange; instead, you can use the default configuration.

If you want DCBX to advertise other applications, you must explicitly configure an application map and apply it to the interfaces on which you want to exchange protocol TLVs for those applications. If you want to exchange FCoE application protocol TLVs in addition to other application protocol TLVs, you must also explicitly configure the FCoE application in the application map. [“Understanding DCBX Application Protocol TLV Exchange” on page 426](#) describes how application mapping works.



**NOTE:** Lossless transport also requires that you enable PFC on the correct priority (IEEE 802.1p code point) on the ingress interfaces using an input CNP. If the priority you pause at the ingress interfaces is not mapped to queue 3 or queue 4 (the two output queues that are enabled for PFC pause flow control by default), then you must also enable the output queues that correspond to paused input priorities to pause using the output stanza of the CNP.

### Fate Sharing Among Traffic Classes

You can configure different lossless (or lossy) traffic flows to share fate—that is, to receive the same CoS treatment.

Fate sharing is not desirable for I/O convergence. Instead of independent control of the fate of each type of flow, different types of flows receive the same treatment. Fate sharing is particularly undesirable for lossless flows. If one lossless flow experiences congestion and must be paused, that affects flows that share fate with the congested flow even if the other flows are not experiencing congestion, and also can cause ingress port congestion. If your network requires that all 802.1p priorities be lossless, you can achieve that by allowing some fate sharing among the eight priorities by spreading them across up to six lossless forwarding classes.

If the number of lossless priorities is less than or equal to the number of configured lossless forwarding classes, then you can avoid fate sharing by configuring a one-to-one mapping of forwarding classes to IEEE 802.1p code points (priorities) and output queues. (Each forwarding class should be mapped to a different output queue and classified to a different priority.)

If you want to configure different traffic flows to share fate, two fate-sharing configurations are supported: mapping one forwarding class to more than one IEEE 802.1p code point (priority), and mapping two forwarding classes to the same output queue:

1. If you map one lossless forwarding class to more than one priority, the traffic tagged with each of the priorities uses the same CoS properties associated (the CoS properties associated with the forwarding class). For example, configuring a forwarding class called `fc1`, mapping it to queue 1, and mapping it to code points 101 and 110 using a classifier named `classify1` results in the traffic tagged with priorities 101 and 110 sharing fate:

```
user@switch# set class-of-service forwarding-classes class fc1 queue-num 1 no-loss
user@switch# set class-of-service classifiers ieee-802.1 classify1 forwarding class fc1
loss-priority low code-points 101
user@switch# set class-of-service classifiers ieee-802.1 classify1 forwarding class fc1
loss-priority low code-points 110
```

In this case, if the traffic mapped to either priority experiences congestion, both priorities are paused because they are mapped to the same forwarding class and are therefore treated similarly.

2. If you map multiple lossless forwarding classes to the same output queue, the traffic mapped to the forwarding classes uses the same output queue. This increases the amount of traffic on the queue, and can create congestion that affects all of the traffic flows that are mapped to the queue. For example, configuring two forwarding classes called `fc1` and `fc2`, mapping both forwarding classes to queue 1, and mapping the forwarding classes to code points 101 and 110 (respectively) using a classifier named `classify1`, results in the traffic tagged with priorities 101 and 110 sharing fate on the same output queue:

```
user@switch# set class-of-service forwarding-classes class fc1 queue-num 1 no-loss
user@switch# set class-of-service forwarding-classes class fc2 queue-num 1 no-loss
user@switch# set class-of-service classifiers ieee-802.1 classify1 forwarding class fc1
loss-priority low code-points 101
user@switch# set class-of-service classifiers ieee-802.1 classify1 forwarding class fc2
loss-priority low code-points 110
```

In this case, even though the two forwarding classes use different IEEE 802.1p priorities, if one forwarding class experiences congestion, it affects the other forwarding class. The reason is that if the output queue is paused because of congestion on either forwarding class, all traffic that uses that queue is paused. Since both forwarding classes are mapped to the queue, the traffic mapped to both forwarding classes is paused.



**NOTE:** If you map more than one forwarding class to a queue, all of the forwarding classes mapped to the same queue must have the same packet drop attribute (all of the forwarding classes must be lossy, or all of the forwarding classes mapped to a queue must be lossless).

### Transit Switch Configuration Versus FCoE-FC Gateway Configuration

On a transit switch (all Ethernet ports, no native FC ports) that forwards FCoE traffic (or other traffic that requires lossless transport across the Ethernet network), the configuration of classifiers, lossless forwarding classes, DCBX, and PFC on ingress and egress interfaces to support lossless transport is as described in this document.

When a switch acts as an FCoE-FC gateway (if native FC interfaces are supported on your switch), the system uses native FC interfaces (NP\_Ports) to connect to the FC switch (or FCoE forwarder) at the FC network edge. You cannot apply CNPs or DCBX to native FC interfaces, only to Ethernet interfaces.

On an FCoE-FC gateway, the Ethernet interface configuration of classifiers, DCBX, and PFC is the same as the Ethernet interface configuration on a transit switch. The configuration of lossless forwarding classes is also the same.

However, supporting lossless transport on native FC interfaces requires that you rewrite the IEEE 802.1p priority value *if* your network uses any priority other than 3 (IEEE code point 011) for FCoE traffic. If your network uses priority 3 for FCoE traffic, you can and should use the default configuration on native FC interfaces.

By default, native FC interfaces tag packets with priority 3 when they encapsulate the incoming FC packets in Ethernet. If your FCoE network uses a different priority than 3 for FCoE traffic, you need to rewrite the priority value to the value that your network uses on the FC interface, classify the FCoE traffic to the correct priority on the Ethernet interfaces, and enable PFC on the correct priority on the Ethernet interfaces, as described in *Understanding CoS IEEE 802.1p Priority Remapping on an FCoE-FC Gateway*.

### Configuration Results and Commit Checks

Different configurations of forwarding classes and their drop attributes, classifiers, CNPs (PFC flow control), and Ethernet PAUSE (IEEE 802.3X flow control) result in different system behaviors.

[Table 65 on page 284](#) describes the results of the possible lossless transport configurations in each case. The assumption in the *Result* column is that the system's buffer headroom calculation resulted in a successful configuration.

However, if the system calculates that there is insufficient buffer space to support the configuration, a commit check prevents you from committing the configuration on an individual Ethernet interface. For LAG interfaces, the system does not issue a commit check error but instead issues a syslog message.



**NOTE:** After you configure lossless transport for a LAG interface, be sure to check the syslog messages to confirm that the commit was successful.

Table 65: Results of Lossless Priority Configuration

Classifier Configuration	Congestion Notification Profile Configuration	Ethernet PAUSE (IEEE 802.3X) Configuration	Result
None (default classifier)	None	None	System default configuration. No flows are lossless. To achieve lossless behavior for the default fcoe and no-loss forwarding classes, you must configure an input CNP to enable PFC on their IEEE 802.1p code points (011 and 100 respectively).
Classifier with no lossless forwarding classes	None	None	No lossless traffic flows are configured; all traffic is best effort.
Classifier with at least one lossless forwarding class	None	None	Because no CNP is attached to interfaces, PFC is not enabled on the code point of the lossless traffic and no headroom buffer is allocated to the lossless queue, so packets can drop during periods of congestion. This configuration does not achieve lossless behavior.
None (default classifier)	PFC enabled on the fcoe and no-loss forwarding class code points (priorities)	None	The default classifier classifies traffic into two lossless forwarding classes, fcoe and no-loss. The CNP enables PFC on the priorities mapped to both lossless forwarding classes, resulting in lossless behavior for traffic mapped to the fcoe and no-loss forwarding classes.
None (default classifier)	None	Flow control enabled	The system calculates buffer headroom for the physical link based on the interface MTU and the default cable length. The system does not calculate buffer headroom for individual output queues. Because Ethernet PAUSE is enabled on the link instead of PFC being enabled on the lossless priorities, the entire link is paused during periods of congestion. This configuration results in lossless behavior for all of the forwarding classes on the link, but because all traffic is paused, this can cause greater overall network congestion.
Classifier with at least one lossless forwarding class	PFC enabled on the lossless forwarding class code points (priorities)	None	Headroom buffer allocated only to priorities that are mapped to the lossless forwarding classes and on which PFC is enabled. This configuration achieves lossless behavior for the lossless forwarding classes.

Table 65: Results of Lossless Priority Configuration (*continued*)

Classifier Configuration	Congestion Notification Profile Configuration	Ethernet PAUSE (IEEE 802.3X) Configuration	Result
Classifier with no lossless forwarding classes	None	Flow control enabled	The system calculates buffer headroom for the physical link based on the interface MTU and the default cable length, and it pauses all traffic on the link during periods of congestion.
Classifier with at least one lossless forwarding class	None	Flow control enabled	The system calculates buffer headroom for the physical link based on the interface MTU and the default cable length, and it pauses all traffic on the link during periods of congestion.
Classifier with at least one lossless forwarding class	PFC enabled on the lossless forwarding class code points (priorities)	Flow control enabled on a <i>different</i> interface than the interface with the CNP	The system checks the available buffer space for both the PFC-enabled priorities and for the other link. If sufficient buffer space is available, the lossless forwarding classes configured with PFC on one interface and also all of the traffic on the link with Ethernet PAUSE enabled achieve lossless behavior.



**NOTE:** If you attempt to configure both PFC and Ethernet PAUSE on a link, the system returns a commit error. PFC and Ethernet PAUSE are mutually exclusive configurations on an interface.

## Configuration Rules and Recommendations

Keep in mind the following configuration rules and recommendations when you configure lossless traffic flows:

- You can configure a maximum of six lossless forwarding classes (forwarding classes with the no-loss packet drop attribute).
- All forwarding classes that you map to the same queue must have the same packet drop attribute (all of the forwarding classes must be lossy, or all of the forwarding classes must be lossless).
- Do not configure weighted random early detection (WRED) on lossless forwarding classes. (Do not associate a drop profile with a forwarding class that has the no-loss packet drop attribute.)

- On switches that use different forwarding classes and output queues for unicast and multdestination traffic, you cannot configure flow control to pause a multdestination output queue. You can configure PFC flow control only to pause unicast output queues.
- On switches that use different forwarding classes and output queues for unicast and multdestination traffic, forwarding classes mapped to multdestination queues (queues 8 through 11) cannot have the no-loss packet drop attribute. (Multdestination forwarding classes cannot be configured as lossless forwarding classes.)

## Lossless Transport Features Introduced in Junos OS Release 12.3 (Legacy Non-ELS CLI)

Support for lossless transport introduced in Junos OS Release 12.3 includes:

- Configuring up to six lossless forwarding classes.
- Configuring PFC pause on output queues to program the output queues that can respond to PFC pause messages received from the connected peer. The priorities you pause on output queues must match the priorities on which you enable PFC on the corresponding ingress interfaces. For example, if you program output queues to pause priorities 3 (011) and 5 (101), then you must also enable pause on priorities 3 and 5 on the corresponding ingress interfaces. Configuring flow control on the output queues and enabling PFC on the corresponding input queues allows you to pause up to six priorities (forwarding classes).
- Controlling the headroom buffer on Ethernet interfaces by configuring the maximum receive unit (MRU) size for the traffic mapped to an IEEE 802.1p priority (configured per priority) and the length of the attached cable (configured per interface). The MRU size can range up to full jumbo packet size (9216 bytes).
- Remapping (rewriting) IEEE 802.1p priorities on native Fibre Channel (FC) interfaces when the system is acting as an FCoE-FC gateway. If the Ethernet (FCoE) network uses a different IEEE 802.1p priority than priority 3 (011) for FCoE traffic, then you can use priority remapping to classify FCoE traffic into a lossless forwarding class mapped to that different priority (see *Understanding CoS IEEE 802.1p Priority Remapping on an FCoE-FC Gateway*).

Lossless transport still requires configuring previously existing features, including enabling PFC on the lossless priorities on ingress interfaces, and configuring classifiers to classify incoming traffic into lossless forwarding classes based on the IEEE 802.1p priority tag of the packet.



**NOTE:** If you expect a large amount of lossless traffic on your network and configure multiple lossless traffic classes, ensure that you reserve enough scheduling resources (bandwidth) and lossless headroom buffer space to support the lossless flows. (*Understanding CoS Buffer Configuration* describes how to configure buffers and provides a recommended buffer configuration for networks with larger amounts of lossless traffic.)

---



## Backward Compatibility with Junos OS Releases Earlier Than Release 12.3 (Legacy Non-ELS CLI)

The addition of the no-loss packet drop attribute to forwarding class configuration means that when you upgrade from an earlier release to Junos OS Release 12.3, the new software might not preserve the lossless forwarding class configuration of the fcoe and no-loss forwarding classes.

If you used the default forwarding class configuration for the fcoe and no-loss forwarding classes, the CoS configuration is backward-compatible. You do not have to do anything to preserve the lossless behavior of traffic that uses those forwarding classes when you upgrade to Junos OS Release 12.3. (This is because the default configuration of these two forwarding classes includes the no-loss packet drop attribute.)

However, if you explicitly configured the fcoe or the no-loss forwarding class by including the **set forwarding-classes class forwarding-class-name queue-num queue-number** statement at the **[edit class-of-service]** hierarchy level, then those forwarding classes are no longer lossless, they are lossy. (They are lossy because explicit configuration in releases earlier than Junos OS Release 12.3 did not use the no-loss packet drop attribute.) In Junos OS Release 12.3 and later, you must include the no-loss packet drop attribute in explicit forwarding class configurations to configure a lossless forwarding class.

For example, before Junos OS Release 12.3, the following explicit configuration resulted in a lossless forwarding class:

```
user@switch# set class-of-service forwarding-classes class fcoe queue-num 3
```

However, in Junos OS Release 12.3, this configuration is lossy because it does not include the no-loss packet drop attribute. To preserve lossless behavior, after upgrading to Junos OS Release 12.3, you need to add the no-loss drop attribute:

```
user@switch# set class-of-service forwarding-classes class fcoe queue-num 3 no-loss
```

Alternatively, you can delete the explicit configuration before you upgrade to Junos OS Release 12.3 so that the system uses the default forwarding class, which is lossless:

```
user@switch# delete class-of-service forwarding-classes class fcoe queue-num 3
```



**NOTE:** The explicit configuration of other forwarding classes does not affect the lossless (or lossy) state of the fcoe and no-loss forwarding classes, because only the fcoe and no-loss forwarding classes were lossless forwarding classes before Junos OS Release 12.3. For example, if you explicitly configured the best-effort forwarding class but you used the default fcoe and no-loss forwarding classes in Junos OS Release 12.2, then when you upgrade to Junos OS Release 12.3, the fcoe and no-loss forwarding classes are still lossless (and the best-effort forwarding classes retains its explicit configuration).



**NOTE:** To achieve lossless behavior for the traffic belonging to any forwarding class, you must also use a CNP to enable PFC on the IEEE 802.1p priority mapped to the forwarding class and apply the CNP to the relevant interfaces, and ensure that DCBX exchanges the protocol TLVs for the application with the connected peer.

**Related  
Documentation**

- [Understanding DCBX Application Protocol TLV Exchange on page 426](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)
- [Understanding PFC Functionality Across Layer 3 Interfaces on page 317](#)
- [Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic \(FCoE Transit Switch\) on page 365](#)
- [Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373](#)
- [Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382](#)
- [Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications \(FCoE and iSCSI\) on page 396](#)
- [Example: Configuring PFC Across Layer 3 Interfaces on page 319](#)
- [Configuring CoS PFC \(Congestion Notification Profiles\) on page 301](#)

## Understanding CoS Flow Control (Ethernet PAUSE and PFC)

Flow control supports lossless transmission by regulating traffic flows to avoid dropping frames during periods of congestion. Flow control stops and resumes the transmission of network traffic between two connected peer nodes on a full-duplex Ethernet physical link. Controlling the flow by pausing and restarting it prevents buffers on the nodes from overflowing and dropping frames. You configure flow control on a per-interface basis.

Two methods of peer-to-peer flow control are supported:

- IEEE 802.3X Ethernet PAUSE



**NOTE:** QFX10000 switches do not support Ethernet PAUSE. Information about Ethernet PAUSE does not apply to QFX10000 switches.

OCX Series switches support symmetric Ethernet PAUSE flow control on Layer 3 tagged interfaces. OCX Series switches do not support asymmetric Ethernet PAUSE flow control. Information about asymmetric flow control does not apply to OCX Series switches.

- IEEE 802.1Qbb priority-based flow control (PFC)



**NOTE:** OCX Series switches do not support PFC or lossless Layer 2 transport. Information about PFC, lossless transport, and congestion notification profiles do not apply to OCX Series switches.



Video: [Why Use PFC in a Data Center Network?](#)

- [General Information about Ethernet PAUSE and PFC and When to Use Them on page 289](#)
- [Ethernet PAUSE on page 290](#)
- [PFC on page 295](#)
- [Lossless Transport Support Summary on page 298](#)

### General Information about Ethernet PAUSE and PFC and When to Use Them

Ethernet PAUSE and PFC are link-level flow control mechanisms.



**NOTE:** For end-to-end congestion control for best-effort traffic, see [“Understanding CoS Explicit Congestion Notification” on page 216](#).

Ethernet PAUSE pauses transmission of all traffic on a physical Ethernet link.

PFC decouples the pause function from the physical Ethernet link and enables you to divide traffic on one link into eight priorities. You can think of the eight priorities as eight “lanes” of traffic that are mapped to forwarding classes and output queues. Each priority maps to a 3-bit IEEE 802.1p CoS code point value in the VLAN header. You can enable PFC on one or more priorities (IEEE 802.1p code points) on a link. When PFC-enabled traffic is paused on a link, traffic that is not PFC-enabled continues to flow (or is dropped if congestion is severe enough).

Use Ethernet PAUSE when you want to prevent packet loss on all of the traffic on a link. Use PFC to prevent traffic loss only on a specified type of traffic that require lossless treatment, for example, Fibre Channel over Ethernet (FCoE) traffic.



**NOTE:** Depending on the amount of traffic on a link or assigned to a priority, pausing traffic can cause ingress port congestion and spread congestion through the network.

Ethernet PAUSE and PFC are mutually exclusive configurations on an interface. Attempting to configure both Ethernet PAUSE and PFC on a link causes a commit error.

By default, all forms of flow control are disabled. You must explicitly enable flow control on interfaces to pause traffic.

## Ethernet PAUSE

Ethernet PAUSE is a congestion relief feature that works by providing link-level flow control for all traffic on a full-duplex Ethernet link. Ethernet PAUSE works in both directions on the link. In one direction, an interface generates and sends Ethernet PAUSE messages to stop the connected peer from sending more traffic. In the other direction, the interface responds to Ethernet PAUSE messages it receives from the connected peer to stop sending traffic.



**NOTE:** QFX10000 switches do not support Ethernet PAUSE. Information about Ethernet PAUSE does not apply to QFX10000 switches.

OCX Series switches support symmetric Ethernet PAUSE flow control on Layer 3 tagged interfaces. OCX Series switches do not support asymmetric Ethernet PAUSE flow control. Information about asymmetric flow control does not apply to OCX Series switches.

Ethernet PAUSE also works on aggregated Ethernet interfaces. For example, if the connected peer interfaces are called Node A and Node B:

- When the receive buffers on interface Node A reach a certain level of fullness, the interface generates and sends an Ethernet PAUSE message to the connected peer (interface Node B) to tell the peer to stop sending frames. The Node B buffers store frames until the time period specified in the Ethernet PAUSE frame elapses; then Node B resumes sending frames to Node A.

- When interface Node A receives an Ethernet PAUSE message from interface Node B, interface Node A stops transmitting frames until the time period specified in the Ethernet PAUSE frame elapses; then Node A resumes transmission. (The Node A transmit buffers store frames until Node A resumes sending frames to Node B.)

In this scenario, if Node B sends an Ethernet PAUSE frame with a time value of 0 to Node A, the 0 time value indicates to Node A that it can resume transmission. This happens when the Node B buffer empties to below a certain threshold and the buffer can once again accept traffic.

*Symmetric flow control* means an interface has the same Ethernet PAUSE configuration in both directions. The Ethernet PAUSE generation and Ethernet PAUSE response functions are both configured as enabled, or they are both disabled. You configure symmetric flow control by including the **flow-control** statement at the **[edit interfaces interface-name ether-options]** hierarchy level.

*Asymmetric flow control* allows you to configure the Ethernet PAUSE functionality in each direction independently on an interface. The configuration for generating Ethernet PAUSE messages and for responding to Ethernet PAUSE messages does not have to be the same. It can be enabled in both directions, disabled in both directions, or enabled in one direction and disabled in the other direction. You configure asymmetric flow control by including the **configured-flow-control** statement at the **[edit interfaces interface-name ether-options]** hierarchy level.

On any particular interface, symmetric and asymmetric flow control are mutually exclusive. Asymmetric flow control overrides and disables symmetric flow control. (If PFC is configured on an interface, you cannot commit an Ethernet PAUSE configuration on the interface. Attempting to commit an Ethernet PAUSE configuration on an interface with PFC enabled on one or more queues results in a commit error. To commit the PAUSE configuration, you must first delete the PFC configuration.) Both symmetric and asymmetric flow control are supported.

- [Symmetric Flow Control on page 291](#)
- [Asymmetric Flow Control on page 291](#)

---

### Symmetric Flow Control

Symmetric flow control configures both the receive and transmit buffers in the same state. The interface can both send Ethernet PAUSE messages and respond to them (flow control is enabled), or the interface cannot send Ethernet PAUSE messages or respond to them (flow control is disabled).

When you enable symmetric flow control on an interface, the Ethernet PAUSE behavior depends on the configuration of the connected peer. With symmetric flow control enabled, the interface can perform any Ethernet PAUSE functions that the connected peer can perform. (When symmetric flow control is disabled, the interface does not send or respond to Ethernet PAUSE messages.)

---

### Asymmetric Flow Control

Asymmetric flow control enables you to specify independently whether or not the interface receive buffer generates and sends Ethernet PAUSE messages to stop the connected

peer from transmitting traffic, and whether or not the interface transmit buffer responds to Ethernet PAUSE messages it receives from the connected peer and stops transmitting traffic. The receive buffer configuration determines if the interface transmits Ethernet PAUSE messages, and the transmit buffer configuration determines if the interface receives and responds to Ethernet PAUSE messages:

- Receive buffers on—Enable Ethernet PAUSE transmission (generate and send Ethernet PAUSE frames)
- Transmit buffers on—Enable Ethernet PAUSE reception (respond to received Ethernet PAUSE frames)

You must explicitly set the flow control for both the receive buffer and the transmit buffer (**on** or **off**) to configure asymmetric Ethernet PAUSE. [Table 66 on page 292](#) describes the configured flow control state when you set the receive (Rx) and transmit (Tx) buffers on an interface:

**Table 66: Asymmetric Ethernet PAUSE Flow Control Configuration**

Receive (Rx) Buffer	Transmit (Tx) Buffer	Configured Flow Control State
<b>On</b>	<b>Off</b>	Interface generates and sends Ethernet PAUSE messages. Interface does not respond to Ethernet PAUSE messages (interface continues to transmit even if peer requests that the interface stop sending traffic).
<b>Off</b>	<b>On</b>	Interface responds to Ethernet PAUSE messages received from the connected peer, but does not generate or send Ethernet PAUSE messages. (The interface does not request that the connected peer stop sending traffic.)
<b>On</b>	<b>On</b>	Same functionality as symmetric Ethernet PAUSE. Interface generates and sends Ethernet PAUSE messages and responds to received Ethernet PAUSE messages.
<b>Off</b>	<b>Off</b>	Ethernet PAUSE flow control is disabled.

The configured flow control is the Ethernet PAUSE state configured on the interface.

On 1-Gigabit Ethernet interfaces, autonegotiation of Ethernet PAUSE with the connected peer is supported. (Autonegotiation on 10-Gigabit Ethernet interfaces is not supported.) Autonegotiation enables the interface to exchange state advertisements with the connected peer so that the two devices can agree on the Ethernet PAUSE configuration. Each interface advertises its flow control state to the connected peer using a combination of the Ethernet PAUSE and ASM\_DIR bits, as described in [Table 67 on page 293](#):

**Table 67: Flow Control State Advertised to the Connected Peer (Autonegotiation)**

Rx Buffer State	Tx Buffer State	PAUSE Bit	ASM_DIR Bit	Description
Off	Off	0	0	The interface advertises no Ethernet PAUSE capability. This is equivalent to disabling flow control on an interface.
On	On	1	0	The interface advertises symmetric flow control (both the transmission of Ethernet PAUSE messages and the ability to receive and respond to Ethernet PAUSE messages).
On	Off	0	1	The interface advertises asymmetric flow control (the transmission of Ethernet PAUSE messages, but not the ability to receive and respond to Ethernet PAUSE messages).
Off	On	1	1	The interface advertises both symmetric and asymmetric flow control. Although the interface does not generate and send Ethernet PAUSE requests to the peer, the interface supports both symmetric and asymmetric Ethernet PAUSE configuration on the peer because the peer is not affected if the peer does not receive Ethernet PAUSE requests. (If the interface responds to the peer's Ethernet PAUSE requests, that is sufficient to support either symmetric or asymmetric flow control on the peer.)

The flow control configuration on each switch interface interacts with the flow control configuration of the connected peer. Each peer advertises its state to the other peer. The interaction of the flow control configuration of the peers determines the flow control

behavior (resolution) between them, as shown in [Table 68 on page 294](#). The first four columns show the Ethernet PAUSE configuration on the local QFX Series or EX4600 switch and on the connected peer (also known as the *link partner*). The last two columns show the Ethernet PAUSE resolution that results from the local and peer configurations on each interface. This illustrates how the Ethernet PAUSE configuration of each interface affects the Ethernet PAUSE behavior on the other interface.



**NOTE:** In the Resolution columns of the table, disabling Ethernet PAUSE transmit means that the interface receive buffers do not generate and send Ethernet PAUSE messages to the peer. Disabling Ethernet PAUSE receive means that the interface transmit buffers do not respond to Ethernet PAUSE messages received from the peer.

**Table 68: Asymmetric Ethernet PAUSE Behavior on Local and Peer Interfaces**

Local Interface (QFX Series or EX4600 Switch)		Peer Interface		Local Resolution	Peer Resolution
PAUSE Bit	ASM_DIR Bit	PAUSE Bit	ASM_DIR Bit		
0	0	Don't care	Don't care	Disable Ethernet PAUSE transmit and receive	Disable Ethernet PAUSE transmit and receive
0	1	0	Don't care	Disable Ethernet PAUSE transmit and receive	Disable Ethernet PAUSE transmit and receive
0	1	1	0	Disable Ethernet PAUSE transmit and receive	Disable Ethernet PAUSE transmit and receive
0	1	1	1	Enable Ethernet PAUSE transmit and disable Ethernet PAUSE receive	Disable Ethernet PAUSE transmit and enable Ethernet PAUSE receive
1	0	0	Don't care	Disable Ethernet PAUSE transmit and receive	Disable Ethernet PAUSE transmit and receive
1	0	1	Don't care	Enable Ethernet PAUSE transmit and receive	Enable Ethernet PAUSE transmit and receive
1	1	0	0	Disable Ethernet PAUSE transmit and receive	Disable Ethernet PAUSE transmit and receive
1	1	0	1	Enable Ethernet PAUSE receive and disable Ethernet PAUSE transmit	Enable Ethernet PAUSE transmit and disable Ethernet PAUSE receive
1	1	Don't care	Don't care	Enable Ethernet PAUSE transmit and receive	Enable Ethernet PAUSE transmit and receive





**NOTE:** For your convenience, [Table 68 on page 294](#) replicates Table 28B-3 of Section 2 of the IEEE 802.X specification.

## PFC

PFC is a lossless transport and congestion relief feature that works by providing granular link-level flow control for each IEEE 802.1p code point (priority) on a full-duplex Ethernet link. When the receive buffer on a switch interface fills to a threshold, the switch transmits a pause frame to the sender (the connected peer) to temporarily stop the sender from transmitting more frames. The buffer threshold must be low enough so that the sender has time to stop transmitting frames and the receiver can accept the frames already on the wire before the buffer overflows. The switch automatically sets queue buffer thresholds to prevent frame loss.

When congestion forces one priority on a link to pause, all of the other priorities on the link continue to send frames. Only frames of the paused priority are not transmitted. When the receive buffer empties below another threshold, the switch sends a message that starts the flow again.

You configure PFC using a congestion notification profile (CNP). A CNP has two parts:

- **Input**—Specify the code point (or code points) on which to enable PFC, and optionally specify the maximum receive unit (MRU) and the cable length between the interface and the connected peer interface.
- **Output**—Specify the output queue or output queues that respond to pause messages from the connected peer.

You apply a PFC configuration by configuring a CNP on one or more interfaces. Each interface that uses a particular CNP is enabled to pause traffic identified by the priorities (code points) specified in that CNP. You can configure one CNP on an interface, and you can configure different CNPs on different interfaces. When you configure a CNP on an interface, ingress traffic that is mapped to a priority that the CNP enables for PFC is paused whenever the queue buffer fills to the pause threshold. (The pause threshold is not user-configurable.)

Configure PFC for a priority end to end along the entire data path to create a lossless lane of traffic on the network. You can selectively pause the traffic in any queue without pausing the traffic for other queues on the same link. You can create lossless lanes for traffic such as FCoE, LAN backup, or management, while using standard frame-drop congestion management for IP traffic on the same link.

Potential consequences of flow control are:

- Ingress port congestion (configuring too many lossless flows can cause ingress port congestion)
- A paused priority that causes upstream devices to pause the same priority, thus spreading congestion back through the network

By definition, PFC supports symmetric pause only (as opposed to Ethernet PAUSE, which supports symmetric and asymmetric pause). With symmetric pause, a device can:

- Transmit pause frames to pause incoming traffic. (You configure this using the input stanza of a congestion notification profile.)
- Receive pause frames and stop sending traffic to a device whose buffer is too full to accept more frames. (You configure this using the output stanza of a congestion notification profile.)

Receiving a PFC frame from a connected peer pauses traffic on egress queues based on the IEEE 802.1p priorities that the PFC pause frame identifies. The priorities are 0 through 7. By default, the priorities map to queue numbers 0 through 7, respectively, and to specific forwarding classes, as shown in [Table 69 on page 296](#):

**Table 69: Default PFC Priority to Queue and Forwarding Class Mapping**

IEEE 802.1p Priority (Code Point)	Queue	Forwarding Class
0 (000)	0	best-effort
1 (001)	1	best-effort
2 (010)	2	best-effort
3 (011)	3	fcoe
4 (100)	4	no-loss
5 (101)	5	best-effort
6 (110)	6	network-control
7 (111)	7	network-control

For example, a received PFC pause frame that pauses priority 3 pauses output queue 3. If you do not want to use the default configuration, you can configure customized mapping of priorities to queues and forwarding classes.



**NOTE:** By convention, deployments with converged server access typically use IEEE 802.1p priority 3 for FCoE traffic. The default configuration sets the fcoe forwarding class as a lossless forwarding class that is mapped to queue 3. The default classifier maps incoming priority 3 traffic to the fcoe forwarding class. *However, you must apply PFC to the entire FCoE data path to configure the end-to-end lossless behavior that FCoE traffic requires.*

If your network uses priority 3 for FCoE traffic, we recommend that you use the default configuration. If your network uses a priority other than 3 for FCoE traffic, you can configure lossless FCoE transport on any IEEE 802.1p priority as described in [“Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows” on page 269](#) and [Understanding CoS IEEE 802.1p Priority Remapping on an FCoE-FC Gateway](#).

To enable PFC on a priority:

1. Specify the IEEE 802.1p code point to pause in the input stanza of a CNP.
2. If you are not using the default lossless forwarding classes, specify the IEEE 802.1p code point to pause and the corresponding output queue in the output stanza of the CNP.
3. Apply the CNP to the ingress interfaces on which you want to pause the traffic.
4. If you are not using the default lossless forwarding classes, apply the CNP to the ingress interfaces on which you want to pause the traffic.



**CAUTION:** Any change to the PFC configuration on a port temporarily blocks the entire port (not just the priorities affected by the PFC change) so that the port can implement the change, then unblocks the port. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

A change to the PFC configuration means any change to a CNP, including changing the input portion of the CNP (enabling or disabling PFC on a priority, or changing the MRU or cable-length values) or changing the output portion of the CNP that enables or disables output flow control on a queue. A PFC configuration change only affects ports that use the changed CNP.

The following actions change the PFC configuration:

- Deleting or disabling a PFC configuration (input or output) in a CNP that is in use on one or more interfaces. For example:
  1. An existing CNP with an input stanza that enables PFC on priorities 3, 5, and 6 is configured on interfaces xe-0/0/20 and xe-0/0/21.
  2. We disable the PFC configuration for priority 6 in the input CNP, and then commit the configuration.

3. The PFC configuration change causes all traffic on interfaces xe-0/0/20 and xe-0/0/21 to stop until the PFC change has been implemented. When the PFC change has been implemented, traffic resumes.

- Configuring a CNP on an interface. (This changes the PFC state by enabling PFC on one or more priorities.)
- Deleting a CNP from an interface. (This changes the PFC state by disabling PFC on one or more priorities.)

---

When you associate the CNP with an interface, the interface uses PFC to send pause requests when the output queue buffer for the lossless traffic fills to the pause threshold.

On switches that use different classifiers for unicast and multdestination traffic, you can map a unicast queue (queue 0 through 7) and a multdestination queue (queue 8, 9, 10, or 11) to the same IEEE 802.1p code point (priority) so that both unicast and multicast traffic use that priority. However, do not map multdestination traffic to lossless output queues. Starting with Junos OS Release 12.3, you can map one priority to multiple output queues.



**NOTE:** You can attach a maximum of one CNP to an interface, but you can create an unlimited number of CNPs that explicitly configure only the input stanza and use the default output stanza.

The output stanza of the CNP maps to a profile that interfaces use to respond to pause messages received from the connected peer. On standalone switches, you can create two CNPs with an explicitly configured output stanza.

When a switch is a Node device in a QFabric system, you can create one CNP with an explicitly configured output stanza. (One fewer profile is available on QFabric systems because the system needs a default profile for fabric interfaces, which are not used as fabric interfaces when the switches are not part of a QFabric system. “[Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows](#)” on page 269 describes configuring output flow control.

---

## Lossless Transport Support Summary

The switch supports up to six lossless forwarding classes. For lossless transport, you must enable PFC on the IEEE 802.1p priorities (code points) mapped to lossless forwarding classes.



**CAUTION:** Any change to the PFC configuration on a port temporarily blocks the entire port (not just the priorities affected by the PFC change) so that the port can implement the change, then unblocks the port. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

---

The following limitation applies to support lossless transport on QFabric systems only:

- The internal fiber cable length from the QFabric system Node device to the QFabric system Interconnect device cannot exceed 150 meters.

The default CoS configuration provides two lossless forwarding classes, *fcoe* and *no-loss*. If you explicitly configure lossless forwarding classes, you must include the **no-loss** packet drop attribute to enable lossless behavior, or the traffic is not lossless. For both default and explicit lossless forwarding class configuration, you must configure CNP input stanzas to enable PFC on the priority of the lossless traffic and apply the CNPs to ingress interfaces.



**NOTE:** The information in this note applies only to systems that do not run the ELS CLI.

Junos OS Release 12.2 introduced changes to the way the switch handles lossless forwarding classes (including the default *fcoe* and *no-loss* forwarding classes).

In Junos OS Release 12.1, either explicitly configuring the *fcoe* and *no-loss* forwarding classes or using the default configuration for these forwarding classes resulted in the same lossless behavior for traffic mapped to those forwarding classes.

However, in Junos OS Release 12.2, if you explicitly configure the *fcoe* or the *no-loss* forwarding class, that forwarding class is no longer treated as a lossless forwarding class. Traffic mapped to these forwarding classes is treated as lossy (best-effort) traffic. This is true even if the explicit configuration is exactly the same as the default configuration.

If your CoS configuration from Junos OS Release 12.1 or earlier includes the explicit configuration of the *fcoe* or the *no-loss* forwarding class, then when you upgrade to Junos OS Release 12.2, those forwarding classes are not lossless. To preserve the lossless treatment of these forwarding classes, delete the the explicit *fcoe* and *no-loss* forwarding class configuration before you upgrade to Junos OS Release 12.2.

See *Overview of CoS Changes Introduced in Junos OS Release 12.2* for detailed information about this change and how to delete an existing lossless configuration.

In Junos OS Release 12.3, the default behavior of the *fcoe* and *no-loss* forwarding classes is the same as in Junos OS Release 12.2. However, in Junos OS Release 12.3, you can configure up to six lossless forwarding classes. All explicitly configured lossless forwarding classes must include the new *no-loss* packet drop attribute or the forwarding class is lossy.

[“Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows” on page 269](#) provides detailed information about the explicit configuration of lossless priorities and about the

default configuration of lossless priorities, including the input and output stanzas of the CNP.



**NOTE:** PFC and Ethernet PAUSE are used only on Ethernet interfaces. Fabric (fte) ports on QFabric systems (Node device fabric ports and Interconnect device fabric ports) use link-layer flow control (LLFC) to ensure the appropriate treatment of lossless traffic.

**Related  
Documentation**

- [Understanding DCB Features and Requirements on page 234](#)
- [Understanding CoS Explicit Congestion Notification on page 216](#)
- [Configuring CoS PFC \(Congestion Notification Profiles\) on page 301](#)
- [Example: Configuring CoS PFC for FCoE Traffic on page 304](#)

## Configuring CoS PFC (Congestion Notification Profiles)

A congestion notification profile (CNP) enables priority-based flow control (PFC) on specified IEEE 802.1p priorities (code points). A CNP has two components:

- Input CNP:
  - Enable PFC on a specified priority.
  - Configure the maximum receive unit (MRU) on an interface for traffic that matches the PFC priority (optional).
  - Specify the length of the attached cable on the ingress interface (optional)
- Output CNP (optional): Configure flow control to enable PFC pause on specific output queues for specified priorities.



**NOTE:** By default, output queues 3 and 4 (which are mapped to default lossless forwarding classes `fcoe` and `no-loss`, respectively) are configured to respond to PFC pause messages received from the connected peer on priorities 3 and 4 (code points 011 and 100, respectively). If you explicitly configure flow control on any output queue, you must configure flow control on every output queue that you want to respond to pause messages. (The explicit configuration overrides the default configuration.)

To achieve lossless behavior, the output queue priorities on which you enable PFC flow control must match the PFC priorities on which you enable PFC on the input interfaces. For example, if you program output queues to pause priorities 3 (011) and 5 (101) in the output component of the CNP, then you must also enable pause on priorities 3 and 5 on the input component of the CNP. (In addition, the forwarding classes mapped to the paused output queues must be lossless forwarding classes.)

Associating a CNP with an interface enables PFC on the ingress traffic that matches the priority specified in the input CNP, and programs the queues listed in the output CNP to pause when the interface receives a PFC pause message from the connected peer. Configure PFC on a priority end to end along the entire data path to create a lossless lane of traffic on the network.



**NOTE:** You must enable PFC on the priority used by FCoE traffic on ingress interfaces (input CNP). Enable PFC on the FCoE priority on every interface that carries FCoE traffic. By convention, FCoE traffic uses priority 3 (code point 011), which maps to queue 3. If your network uses priority 3 for FCoE traffic, the default forwarding class and classifier configuration support lossless transport, but you must still configure a CNP and apply it to the correct ingress interfaces to enable PFC and achieve lossless transport.

If your network does not use priority 3 for FCoE traffic, you need to configure a classifier that classifies FCoE traffic into a lossless forwarding class, based on the priority your network uses for FCoE traffic. If you are not using the default lossless forwarding class configuration, then you also need to ensure that the output queue mapped to the lossless FCoE forwarding class is programmed to pause.

---

You can attach only one CNP to an interface. There is no limit to the total number of CNPs you can create.

Configuring a CNP consists of:

- Naming the CNP.
- Specifying the IEEE 802.1 code point (priority) on which you want to enable PFC on ingress interfaces (input CNP).
- Optionally, specifying the MRU and the length of the attached cable on ingress interfaces (input CNP).
- Optionally, configuring flow control (PFC pause) on specified output queues if you want queues other than queues 3 and 4 to respond to pause messages received from the connected peer (output CNP).
- Mapping the CNP to an interface.



**NOTE:** Configuring or changing PFC on an interface blocks the entire port until the PFC change is completed. After a PFC change is completed, the port is unblocked and traffic resumes. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.



**NOTE:** On QFX5100 and QFX5200, once the headroom buffer is exhausted, any new CNP configuration is not allocated headroom buffer, even if headroom buffer is freed by deletion of an existing CNP. CNP configuration has to be applied again to re-allocate the headroom buffer.



1. Enable PFC on the desired priority in the input CNP and optionally configure the interface MRU for traffic on that priority:

```
[edit class-of-service]
user@switch# set congestion-notification-profile cnp-name input ieee-802.1 code-point
code-point bits pfc mru mru-value
```

For example, to configure a CNP named **fcoe-cnp** that enables PFC on IEEE 802.1 code point **011** and configures an MRU value of **2240**:

```
[edit class-of-service]
user@switch# set congestion-notification-profile fcoe-cnp input ieee-802.1 code-point 011
pfc mru 2240
```

2. (Optional) Configure the length of the cable attached to the ingress interface:

```
[edit class-of-service]
user@switch# set congestion-notification-profile cnp-name input cable-length
cable-length-value
```

For example, to configure a CNP named **fcoe-cnp** that sets the length of the ingress interface cable to **100** meters:

```
[edit class-of-service]
user@switch# set congestion-notification-profile fcoe-cnp input cable-length 100
```

3. (Optional) Configure flow control on output queues:

```
[edit class-of-service]
user@switch# set congestion-notification-profile cnp-name output ieee-802.1 code-point
code-point-bits flow-control-queue [queue | list-of-queues]
```

For example, to configure a CNP named **fcoe-cnp** that enables PFC pause flow control on output queues 3 and 5 for FCoE traffic that uses priority 3 (code point **011**) and on output queue 4 for traffic that uses priority 4 (code point **100**):

```
[edit class-of-service]
user@switch# set congestion-notification-profile cnp-name output ieee-802.1 code-point
011 flow-control-queue [3 5]
user@switch# set congestion-notification-profile cnp-name output ieee-802.1 code-point
100 flow-control-queue 4
```

4. Map the CNP to an interface:

```
[edit class-of-service]
user@switch# set interfaces interface congestion-notification-profile cnp-name
```

For example, to map the CNP **fcoe-cnp** to the interface **xe-0/0/7**:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/7 congestion-notification-profile fcoe-cnp
```

#### Related Documentation

- [Example: Configuring CoS PFC for FCoE Traffic on page 304](#)
- [Assigning CoS Components to Interfaces on page 23](#)
- [Monitoring Interfaces That Have CoS Components on page 557](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)
- [Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269](#)

## Example: Configuring CoS PFC for FCoE Traffic

---

Priority-based flow control (PFC, described in IEEE 802.1Qbb) is a link-level flow control mechanism that you apply at ingress interfaces. PFC enables you to divide traffic on one physical link into eight priorities. You can think of the eight priorities as eight “lanes” of traffic that correspond to queues (forwarding classes). Each priority is mapped to a 3-bit IEEE 802.1p CoS value in the VLAN header.

You can selectively apply PFC to the traffic in any queue without pausing the traffic in other queues on the same link. You must apply PFC to FCoE traffic to ensure lossless transport.

This example describes how to configure PFC for FCoE traffic:

- [Requirements on page 304](#)
- [Overview on page 304](#)
- [Configuration on page 306](#)
- [Verification on page 311](#)

### Requirements

This example uses the following hardware and software components:

- One switch
- Junos OS Release 11.1 or later for the QFX Series

### Overview

FCoE traffic requires PFC to ensure lossless packet transport. This example shows you how to configure PFC on FCoE traffic, use the default FCoE forwarding-class-to-queue mapping and:

- Configure a classifier that associates the FCoE forwarding class with FCoE traffic, which is identified by IEEE 802.1p code point 011 (priority 3).
- Configure a congestion notification profile to apply PFC to the FCoE traffic.
- Apply the classifier and the PFC configuration to ingress interfaces.



**NOTE:** Configuring or changing PFC on an interface blocks the entire port until the PFC change is completed. After a PFC change is completed, the port is unblocked and traffic resumes. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

---

- Configure the CoS bandwidth scheduling for the FCoE forwarding class output queue.
- On switches that support enhanced transmission selection (ETS) hierarchical port scheduling, create a forwarding class set (priority group) that includes the FCoE

forwarding class; this is required to configure enhanced transmission selection (ETS) and support data center bridging (DCB).

- For ETS, configure the bandwidth scheduling for the FCoE priority group.
- Apply the configuration to ingress and egress interfaces. How this is done differs depending on whether you use ETS or direct port scheduling for the CoS configuration.

For direct port scheduling, you apply a scheduler map directly to the interface. A scheduler map maps schedulers to forwarding classes, and applies the CoS properties of the scheduler to the output queue mapped to the forwarding class.

For ETS hierarchical port scheduling, you apply the scheduler map to a traffic control profile, and then apply the traffic control profile to the interface. The scheduler map maps CoS properties to forwarding classes (and their associated output queues) just as it does for direct port scheduling. The traffic control profile maps CoS properties to the priority group (a group of forwarding classes defined in a forwarding class set) that contains the forwarding class, creating a CoS hierarchy that allocates port bandwidth to a group of forwarding classes (priority group), and then allocates the priority group bandwidth to the individual forwarding classes (see [“Understanding CoS Hierarchical Port Scheduling \(ETS\)” on page 161](#)).

Each interface in this example acts as both an ingress interface and an egress interface, so the classifier, congestion notification profile, and scheduling are applied to all of the interfaces.

### Topology

Table 70 on page 305 shows the configuration components for this example.

**Table 70: Components of the PFC for FCoE Traffic Configuration Topology**


Component	Settings
Hardware	One switch
Behavior aggregate classifier (maps the FCoE forwarding class to incoming packets by IEEE 802.1 code point)	Code point <b>011</b> to forwarding class <b>fcoe</b> and loss priority <b>low</b> Ingress interfaces: <b>xe-0/0/31, xe-0/0/32, xe-0/0/33, xe-0/0/34</b>
PFC congestion notification profile	<b>fcoe-cnp:</b> Code point <b>011</b> Ingress interfaces: <b>xe-0/0/31, xe-0/0/32, xe-0/0/33, xe-0/0/34</b>
FCoE queue scheduler	<b>fcoe-sched:</b> Minimum bandwidth <b>3g</b> Maximum bandwidth <b>100%</b> Priority <b>low</b>

Table 70: Components of the PFC for FCoE Traffic Configuration Topology (*continued*)

Component	Settings
Forwarding class-to-scheduler mapping	<p>Scheduler map <b>fcoe-map</b>:  Forwarding class <b>fcoe</b>  Scheduler <b>fcoe-sched</b></p> <p>On switches that support direct port scheduling, if you use port scheduling, attach the scheduler map directly to interfaces <b>xe-0/0/31</b>, <b>xe-0/0/32</b>, <b>xe-0/0/33</b>, and <b>xe-0/0/34</b>.</p>
ETS only: Forwarding class set (FCoE priority group)	<p><b>fcoe-pg</b>:  Forwarding class <b>fcoe</b>  Egress interfaces: <b>xe-0/0/31</b>, <b>xe-0/0/32</b>, <b>xe-0/0/33</b>, <b>xe-0/0/34</b></p>
ETS only: Traffic control profile	<p><b>fcoe-tcp</b>:  Scheduler map <b>fcoe-map</b>  Minimum bandwidth <b>3g</b>  Maximum bandwidth <b>100%</b></p> <p>For ETS hierarchical scheduling, attach the traffic control profile (using the <b>output-traffic-control-profile</b> keyword) to interfaces <b>xe-0/0/31</b>, <b>xe-0/0/32</b>, <b>xe-0/0/33</b>, and <b>xe-0/0/34</b>.</p>

Figure 22 on page 306 shows a block diagram of the configuration components and the configuration flow of the CLI statements used in the example.

Figure 22: PFC for FCoE Traffic Configuration Components Block Diagram

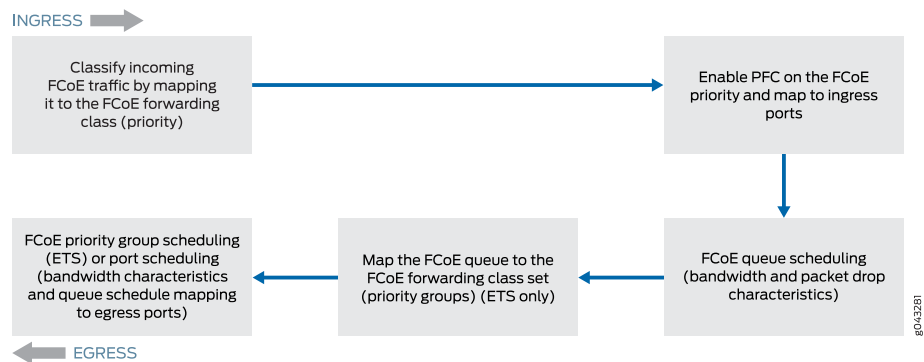

## Configuration

### CLI Quick Configuration

To quickly configure PFC for FCoE traffic, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level. The configuration is separated into the configuration common to ETS and direct port scheduling, and the portions of the configuration that apply only to ETS and only to port scheduling.

### Common Configuration (Applies

### to ETS Hierarchical Scheduling and to Port Scheduling

```
[edit class-of-service]
set classifiers ieee-802.1 fcoe-classifier forwarding-class fcoe loss-priority low code-points 011
set congestion-notification-profile fcoe-cnp input ieee-802.1 code-point 011 pfc
set interfaces xe-0/0/31 unit 0 classifiers ieee-802.1 fcoe-classifier
set interfaces xe-0/0/32 unit 0 classifiers ieee-802.1 fcoe-classifier
set interfaces xe-0/0/33 unit 0 classifiers ieee-802.1 fcoe-classifier
set interfaces xe-0/0/34 unit 0 classifiers ieee-802.1 fcoe-classifier
set interfaces xe-0/0/31 congestion-notification-profile fcoe-cnp
set interfaces xe-0/0/32 congestion-notification-profile fcoe-cnp
set interfaces xe-0/0/33 congestion-notification-profile fcoe-cnp
set interfaces xe-0/0/34 congestion-notification-profile fcoe-cnp
set schedulers fcoe-sched priority low transmit-rate 3g
set schedulers fcoe-sched shaping-rate percent 100
set scheduler-maps fcoe-map forwarding-class fcoe scheduler fcoe-sched
```

### Configuration for ETS Hierarchical Scheduling

The ETS-specific portion of this example configures forwarding class set (priority group) membership, priority group CoS settings (traffic control profile), and assigns the priority group and its CoS configuration to the interfaces.

```
[edit class-of-service]
set forwarding-class-sets fcoe-pg class fcoe
set traffic-control-profiles fcoe-tcp scheduler-map fcoe-map guaranteed-rate 3g
set traffic-control-profiles fcoe-tcp shaping-rate percent 100
set interfaces xe-0/0/31 forwarding-class-set fcoe-pg output-traffic-control-profile fcoe-tcp
set interfaces xe-0/0/32 forwarding-class-set fcoe-pg output-traffic-control-profile fcoe-tcp
set interfaces xe-0/0/33 forwarding-class-set fcoe-pg output-traffic-control-profile fcoe-tcp
set interfaces xe-0/0/34 forwarding-class-set fcoe-pg output-traffic-control-profile fcoe-tcp
```

### Configuration for Port Scheduling

The port-scheduling-specific portion of this example assigns the scheduler map (which sets the CoS treatment of the forwarding classes in the scheduler map) to the interfaces.

```
[edit class-of-service]
set interfaces xe-0/0/31 scheduler-map fcoe-map
set interfaces xe-0/0/32 scheduler-map fcoe-map
set interfaces xe-0/0/33 scheduler-map fcoe-map
set interfaces xe-0/0/34 scheduler-map fcoe-map
```

### Common Configuration (Applies to ETS Hierarchical Scheduling and to Port Scheduling)

- Step-by-Step Procedure** To configure the ingress classifier for FCoE traffic, PFC on the FCoE traffic, apply the PFC and classifier configurations to interfaces, and configure queue scheduling, for both ETS hierarchical scheduling and port scheduling (common configuration):
1. Configure a classifier to set the loss priority and IEEE 802.1 code point assigned to the FCoE forwarding class at the ingress:
 

```
[edit class-of-service]
user@switch# set classifiers ieee-802.1 fcoe-classifier forwarding-class fcoe loss-priority low code-points 011
```
  2. Configure PFC on the FCoE queue by applying FCoE to the IEEE 802.1 code point 011:
 

```
[edit class-of-service]
user@switch# set congestion-notification-profile fcoe-cnp input ieee-802.1 code-point 011 pfc
```
  3. Apply the PFC configuration to the ingress interfaces:
 

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/31 congestion-notification-profile fcoe-cnp
user@switch# set interfaces xe-0/0/32 congestion-notification-profile fcoe-cnp
user@switch# set interfaces xe-0/0/33 congestion-notification-profile fcoe-cnp
user@switch# set interfaces xe-0/0/34 congestion-notification-profile fcoe-cnp
```
  4. Assign the classifier to the ingress interfaces:
 

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/31 unit 0 classifiers ieee-802.1 fcoe-classifier
user@switch# set interfaces xe-0/0/32 unit 0 classifiers ieee-802.1 fcoe-classifier
user@switch# set interfaces xe-0/0/33 unit 0 classifiers ieee-802.1 fcoe-classifier
user@switch# set interfaces xe-0/0/34 unit 0 classifiers ieee-802.1 fcoe-classifier
```
  5. Configure output scheduling for the FCoE queue:
 

```
[edit class-of-service]
user@switch# set schedulers fcoe-sched priority low transmit-rate 3g
user@switch# set schedulers fcoe-sched shaping-rate percent 100
```
  6. Map the FCoE forwarding class to the FCoE scheduler:
 

```
[edit class-of-service]
user@switch# set scheduler-maps fcoe-map forwarding-class fcoe scheduler fcoe-sched
```

### ETS Hierarchical Scheduling Configuration

- Step-by-Step Procedure** To configure the forwarding class set (priority group) and priority group scheduling (in a traffic control profile), and apply the ETS hierarchical scheduling for FCoE traffic to interfaces:
1. Configure the forwarding class set for the FCoE traffic:
 

```
[edit class-of-service]
user@switch# set forwarding-class-sets fcoe-pg class fcoe
```
  2. Define the traffic control profile for the FCoE forwarding class set:

```
[edit class-of-service]
user@switch# set traffic-control-profiles fcoe-tcp scheduler-map fcoe-map
guaranteed-rate 3g
user@switch# set traffic-control-profiles fcoe-tcp shaping-rate percent 100
```

3. Apply the FCoE forwarding class set and traffic control profile to the egress ports:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/31 forwarding-class-set fcoe-pg
output-traffic-control-profile fcoe-tcp
user@switch# set interfaces xe-0/0/32 forwarding-class-set fcoe-pg
output-traffic-control-profile fcoe-tcp
user@switch# set interfaces xe-0/0/33 forwarding-class-set fcoe-pg
output-traffic-control-profile fcoe-tcp
user@switch# set interfaces xe-0/0/34 forwarding-class-set fcoe-pg
output-traffic-control-profile fcoe-tcp
```

### Port Scheduling Configuration

#### Step-by-Step Procedure

To apply port scheduling for FCoE traffic to interfaces:

1. Apply the scheduler map to the egress ports:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/31 scheduler-map fcoe-map
user@switch# set interfaces xe-0/0/32 scheduler-map fcoe-map
user@switch# set interfaces xe-0/0/33 scheduler-map fcoe-map
user@switch# set interfaces xe-0/0/34 scheduler-map fcoe-map
```

### Results

Display the results of the configuration (the system shows only the explicitly configured parameters; it does not show default parameters such as the **fcoe** lossless forwarding class). The results are from the ETS hierarchical scheduling configuration to show the more complex configuration. Direct port scheduling results would not show the traffic control profile or forwarding class set portions of the configuration, and would display the name of the scheduler map under each interface (instead of the names of the forwarding class set and output traffic control profile), but is otherwise the same.

```
user@switch> show configuration class-of-service
classifiers {
  ieee-802.1 fcoe-classifier {
    forwarding-class fcoe {
      loss-priority low code-points 011;
    }
  }
}
traffic-control-profiles {
  fcoe-tcp {
    scheduler-map fcoe-map;
    shaping-rate percent 100;
    guaranteed-rate 3000000000;
  }
}
forwarding-class-sets {
  fcoe-pg {
    class fcoe;
  }
}
```

```
}
congestion-notification-profile {
  fcoe-cnp {
    input {
      ieee-802.1 {
        code-point 011 {
          pfc;
        }
      }
    }
  }
}
}
}
interfaces {
  xe-0/0/31 {
    congestion-notification-profile fcoe-cnp;
    forwarding-class-set {
      fcoe-pg {
        output-traffic-control-profile fcoe-tcp;
      }
    }
    unit 0 {
      classifiers {
        ieee-802.1 fcoe-classifier;
      }
    }
  }
  xe-0/0/32 {
    congestion-notification-profile fcoe-cnp;
    forwarding-class-set {
      fcoe-pg {
        output-traffic-control-profile fcoe-tcp;
      }
    }
    unit 0 {
      classifiers {
        ieee-802.1 fcoe-classifier;
      }
    }
  }
  xe-0/0/33 {
    congestion-notification-profile fcoe-cnp;
    forwarding-class-set {
      fcoe-pg {
        output-traffic-control-profile fcoe-tcp;
      }
    }
    unit 0 {
      classifiers {
        ieee-802.1 fcoe-classifier;
      }
    }
  }
  xe-0/0/34 {
    congestion-notification-profile fcoe-cnp;
    forwarding-class-set {
      fcoe-pg {
```



```

        output-traffic-control-profile fcoe-tcp;
    }
}
unit 0 {
    classifiers {
        ieee-802.1 fcoe-classifier;
    }
}
}
}
scheduler-maps {
    fcoe-map {
        forwarding-class fcoe scheduler fcoe-sched;
    }
}
schedulers {
    fcoe-sched {
        transmit-rate 3000000000;
        shaping-rate percent 100;
        priority low;
    }
}
}

```



**TIP:** To quickly configure the interfaces, issue the **load merge terminal** command and then copy the hierarchy and paste it into the switch terminal window.

## Verification

To verify that the PFC configuration for FCoE traffic components has been created and is operating properly, perform these tasks:

- [Verifying That Priority-Based Flow Control Has Been Enabled on page 311](#)
- [Verifying the Ingress Interface PFC Configuration on page 312](#)

### Verifying That Priority-Based Flow Control Has Been Enabled

**Purpose** Verify that PFC is enabled on the FCoE queue to enable lossless transport.

**Action** List the congestion notification profiles using the operational mode command **show class-of-service congestion-notification**:

```

user@switch> show class-of-service congestion-notification
Type: Input, Name: fcoe-cnp, Index: 51697
Cable Length: 100 m
  Priority    PFC          MRU
  000        Disabled
  001        Disabled
  010        Disabled
  011        Enabled    2500
  100        Disabled
  101        Disabled

```

110	Disabled
111	Disabled
Type: Output	
Priority	Flow-Control-Queues
000	0
001	0
010	1
011	2
100	3
101	4
110	5
111	6
	7

**Meaning** The **show class-of-service congestion-notification** operational command lists all of the congestion notification profiles and which IEEE 802.1p code points have PFC enabled. The command output shows that PFC is enabled on code point **011** for the **fcoe-cnp** congestion notification profile.

The command also shows the default cable length (100 meters), the default maximum receive unit (2500 bytes), and the default mapping of priorities to output queues because this example does not include configuring these options.

---

### Verifying the Ingress Interface PFC Configuration

---

**Purpose** Verify that the classifier **fcoe-classifier** and the congestion notification profile **fcoe-cnp** are configured on ingress interfaces **xe-0/0/31**, **xe-0/0/32**, **xe-0/0/33**, and **xe-0/0/34**.

**Action** List the ingress interfaces using the operational mode command **show configuration class-of-service interfaces**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/31
congestion-notification-profile fcoe-cnp;
unit 0 {
    classifiers {
        ieee-802.1 fcoe-classifier;
    }
}

user@switch> show configuration class-of-service interfaces xe-0/0/32
congestion-notification-profile fcoe-cnp;
unit 0 {
    classifiers {
        ieee-802.1 fcoe-classifier;
    }
}

user@switch> show configuration class-of-service interfaces xe-0/0/33
congestion-notification-profile fcoe-cnp;
unit 0 {
```

```

        classifiers {
            ieee-802.1 fcoe-classifier;
        }
    }

user@switch> show configuration class-of-service interfaces xe-0/0/34
congestion-notification-profile fcoe-cnp;
unit 0 {
    classifiers {
        ieee-802.1 fcoe-classifier;
    }
}

```

**Meaning** The **show configuration class-of-service interfaces** commands list the congestion notification profile that is mapped to the interface (**fcoe-cnp**) and the IEEE 802.1p classifier associated with the interface (**fcoe-classifier**).

**Related Documentation**

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Configuring CoS PFC \(Congestion Notification Profiles\) on page 301](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)

## Troubleshooting Dropped FCoE Traffic

**Problem** **Description:** Fibre Channel over Ethernet (FCoE) traffic for which you want guaranteed delivery is dropped.

**Cause** There are several possible causes of dropped FCoE traffic (the list numbers of the possible causes correspond to the list numbers of the solutions in the *Solution* section.):

1. Priority-based flow control (PFC) is not enabled on the FCoE priority (IEEE 802.1p code point) in both the input and output stanzas of the congestion notification profile.
2. The FCoE traffic is not classified correctly at the ingress interface. FCoE traffic should either use the default **fcoe** forwarding class and classifier configuration (maps the **fcoe** forwarding class to IEEE 802.1p code point 011) or be mapped to a lossless forwarding class and to the code point enabled for PFC on the input and output interfaces.
3. The congestion notification profile that enables PFC on the FCoE priority is not attached to the interface.
4. The forwarding class set (priority group) used for guaranteed delivery traffic does not include the forwarding class used for FCoE traffic.



**NOTE:** This issue can occur only on switches that support enhanced transmission selection (ETS) hierarchical port scheduling. (Direct port scheduling does not use forwarding class sets.)

5. Insufficient bandwidth has been allocated for the FCoE queue or for the forwarding class set to which the FCoE queue belongs.



**NOTE:** This issue can occur for forwarding class sets only on switches that support ETS hierarchical port scheduling. (Direct port scheduling does not use forwarding class sets.)

6. If you are using Junos OS Release 12.2, the **fcoe** forwarding class has been explicitly configured instead of using the default **fcoe** forwarding class configuration (forwarding-class-to-queue mapping).



**NOTE:** If you are using Junos OS Release 12.2, use the default forwarding-class-to-queue mapping for the lossless **fcoe** and **no-loss** forwarding classes. If you explicitly configure the lossless forwarding classes, the traffic mapped to those forwarding classes is treated as lossy (best effort) traffic and does *not* receive lossless treatment.

7. If you are using Junos OS Release 12.3 or later and you are not using the default **fcoe** forwarding class configuration, the forwarding class used for FCoE is not configured with the **no-loss** packet drop attribute. In Junos OS 12.3 or later, explicit forwarding classes configurations must include the **no-loss** packet drop attribute to be treated as lossless forwarding classes.

**Solution** The list numbers of the possible solutions correspond to the list numbers of the causes in the *Cause* section.

1. Check the congestion notification profile (CNP) to see if PFC is enabled on the FCoE priority (the correct IEEE 802.1p code point) on both input and output interfaces. Use the **show class-of-service congestion-notification** operational command to show the code points that are enabled for PFC in each CNP.

If you are using the default configuration, FCoE traffic is mapped to code point 011 (priority 3). In this case, the input stanza of the CNP should show that PFC is enabled on code point 011, and the output stanza should show that priority 011 is mapped to flow control queue 3.

If you explicitly configured a forwarding class for FCoE traffic, ensure that:

- You specified the **no-loss** packet drop attribute in the forwarding class configuration
- The code point mapped to the FCoE forwarding class in the ingress classifier is the code point enabled for PFC in the CNP input stanza
- The code point and output queue used for FCoE traffic are mapped to each other in the CNP output stanza (if you are not using the default priority and queue, you must explicitly configure each output queue that you want to respond to PFC messages)

For example, if you explicitly configure a forwarding class for FCoE traffic that is mapped to output queue 5 and to code point 101 (priority 5), the output of the **show class-of-service congestion-notification** looks like:

```
Name: fcoe_p5_cnp, Index: 12183
Type: Input
Cable Length: 100 m
  Priority  PFC      MRU
  000      Disabled
  001      Disabled
  010      Disabled
  011      Disabled
  100      Disabled
  101      Enabled   2500
  110      Disabled
  111      Disabled
Type: Output
  Priority  Flow-Control-Queues
  101      5
```

2. Use the **show class-of-service classifier type ieee-802.1p** operational command to check if the classifier maps the forwarding class used for FCoE traffic to the correct IEEE 802.1p code point.
3. Ensure that the congestion notification profile and classifier are attached to the correct ingress interface. Use the operational command **show configuration class-of-service interfaces interface-name**.
4. Check that the forwarding class set includes the forwarding class used for FCoE traffic. Use the operational command **show configuration class-of-service forwarding-class-sets** to show the configured priority groups and their forwarding classes.

5. Verify the amount of bandwidth allocated to the queue mapped to the FCoE forwarding class and to the forwarding class set to which the FCoE traffic queue belongs. Use the **show configuration class-of-service schedulers *scheduler-name*** operational command (specify the scheduler for FCoE traffic as the *scheduler-name*) to see the minimum guaranteed bandwidth (**transmit-rate**) and maximum bandwidth (**shaping-rate**) for the queue.

Use the **show configuration class-of-service traffic-control-profiles *traffic-control-profile*** operational command (specify the traffic control profile used for FCoE traffic as the *traffic-control-profile*) to see the minimum guaranteed bandwidth (**guaranteed-rate**) and maximum bandwidth (**shaping-rate**) for the forwarding class set.

6. Delete the explicit FCoE forwarding-class-to-queue mapping so that the system uses the default FCoE forwarding-class-to-queue mapping. Include the **delete forwarding-classes class fcoe queue-num 3** statement at the **[edit class-of-service]** hierarchy level to remove the explicit configuration. The system then uses the default configuration for the FCoE forwarding class and preserves the lossless treatment of FCoE traffic.
7. Use the **show class-of-service forwarding-class** operational command to display the configured forwarding classes. The *No-Loss* column shows whether lossless transport is enabled or disabled for each forwarding class. If the forwarding class used for FCoE traffic is not enabled for lossless transport, include the **no-loss** packet drop attribute in the forwarding class configuration (**set class-of-service forwarding-classes class *fcoe-forwarding-class-name* queue-num *queue-number* no-loss**).

See “[Example: Configuring CoS PFC for FCoE Traffic](#)” on page 304 for step-by-step instructions on how to configure PFC for FCoE traffic, including classifier, interface, congestion notification profile, PFC, and bandwidth scheduling configuration.

#### Related Documentation

- [show class-of-service congestion-notification on page 790](#)
- [Configuring CoS PFC \(Congestion Notification Profiles\) on page 301](#)
- [Example: Configuring CoS PFC for FCoE Traffic on page 304](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)

## Understanding PFC Functionality Across Layer 3 Interfaces

Priority-based flow control (PFC) allows you to select traffic flows within a link and pause them, so that the output queues associated with the flows do not overflow and drop packets. (PFC is more granular than Ethernet PAUSE, which pauses all traffic on a physical link.) PFC helps you configure lossless transport for traffic flows across a data center bridging network.

However, you might want to create a traffic flow that losslessly traverses the Layer 2 data center bridging network *and* also losslessly traverses a Layer 3 network that connects Ethernet hosts in different Layer 2 networks. On a QFX5200, QFX5100, EX4600, or QFX10000 switch running the Enhanced Layer 2 Software (ELS) CLI, in addition to configuring PFC on Layer 2 (bridging) interfaces, you can configure PFC on traffic that traverses Layer 3 interfaces. This enables you to preserve the lossless characteristics that PFC provides on traffic, even when the traffic crosses Layer 3 interfaces that connect two Layer 2 networks.



Video: [Preserving Lossless Behavior on an SDN or Overlay Network](#)

PFC works the same way across Layer 3 interfaces as it works across Layer 2 interfaces. When an output queue buffer reaches a certain fill level threshold, the switch sends a PFC pause message to the connected peer to pause transmission of the traffic on which PFC is enabled. Pausing the incoming traffic prevents the queue buffer from overflowing and dropping packets, just as on Layer 2 interfaces. When the queue buffer fill level decreases below a certain threshold, the interface sends a message to the connected peer to restart traffic transmission.

Although PFC is a data center bridging technology, PFC also works on Layer 3 interfaces because PFC operates at the queue level. When you use an IEEE 802.1p classifier to classify incoming traffic (map incoming traffic to a forwarding class and a loss priority based on the IEEE 802.1p code point in the Ethernet frame header) and you enable PFC on the appropriate priority (IEEE 802.1p code point), PFC works on Layer 2 and Layer 3 interfaces.



**NOTE:** Lossless traffic on Layer 3 interfaces *must* use an IEEE 802.1p classifier to classify incoming traffic, because PFC does not use DSCP or DSCP IPv6 code points to identify traffic for flow control. PFC cannot pause traffic flows unless the incoming traffic is classified by an IEEE 802.1p classifier. Do not apply a DSCP (or a DSCP IPv6) classifier to Layer 3 traffic on which you want to enable PFC.


Because PFC functionality relies on the mapping (classifying) of incoming traffic to IEEE 802.1p code points and on enabling PFC on the correct code point(s) at each interface, you must ensure that incoming traffic has the correct 3-bit IEEE 802.1p code point (priority) in the priority code point (PCP) field of the Ethernet frame header (sometimes known as the CoS bits).



**NOTE:** Layer 3 interfaces do not support FCoE traffic. FCoE traffic must use Layer 2 interfaces and cannot use Layer 3 interfaces. Therefore, you cannot enable PFC on FCoE traffic across Layer 3 interfaces.

Figure 23 on page 318 shows a topology in which two Ethernet hosts in Layer 2 networks communicate across a Layer 3 network, with PFC enabled on all of the Layer 2 and Layer 3 switch interfaces.

**Figure 23: Enabling PFC Across Layer 3 Interface Hops**

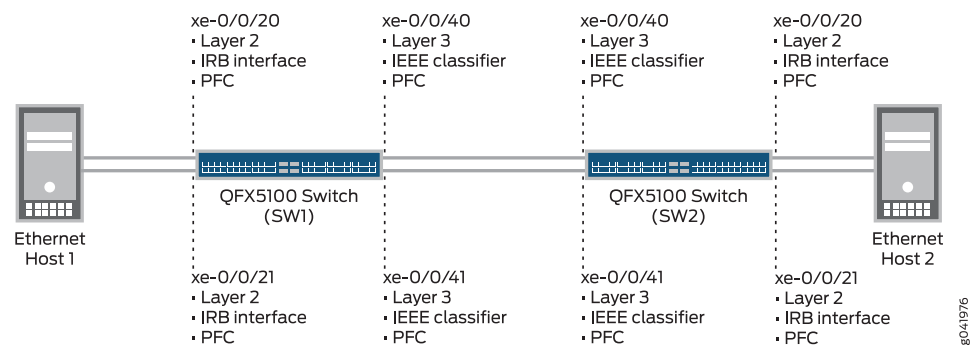

The Ethernet host-facing interfaces (xe-0/0/20 and xe-0/0/21 on both switches) and the Layer 3 network-facing interfaces (interfaces xe-0/0/40 and xe-0/0/41 on both switches) require different interface configurations to enable PFC on the Layer 3 interfaces. In addition, the class of service (CoS) for each interface must be configured correctly, including enabling PFC on the traffic that you want to treat as lossless traffic:

Ethernet-host facing interfaces (xe-0/0/20 and xe-0/0/21) require the following configuration:

- Set interfaces as family ethernet-switching
- Set the interface mode as trunk mode
- Create VLANs to carry the traffic
- Create IRB interfaces to place the Layer 2 VLAN traffic on Layer 3 for transport between IP networks
- Create an IEEE 802.1p classifier to classify incoming traffic into the correct forwarding class, based on the IEEE 802.1p code point
- Create a congestion notification profile (CNP) to configure PFC on the IEEE 802.1p code point of the traffic that you want treat as lossless traffic
- Apply the classifier and the CNP to the Layer 2 interfaces
- Configure CoS: lossless forwarding classes, hierarchical port scheduling (also known as enhanced transmission selection), or direct port scheduling, depending on your switch, and apply it to the Layer 2 interfaces



Layer 3 IP network-facing interfaces (xe-0/0/40 and xe-0/0/41) require the following configuration:

- Set interfaces as family inet
- Set VLAN tagging on the interfaces
- Create VLANs to carry the traffic
- Create an IEEE 802.1p classifier to classify incoming traffic into the correct forwarding class, based on the IEEE 802.1p code point (do not use a DSCP or DSCP IPv6 classifier)
- Create a congestion notification profile (CNP) to configure PFC on the IEEE 802.1p code point of the traffic that you want treat as lossless traffic on the Layer 3 interfaces
- Apply the IEEE 802.1p classifier and the CNP to the Layer 3 interfaces
- Configure CoS: lossless forwarding classes, hierarchical port scheduling (enhanced transmission selection), or direct port scheduling, depending on your switch, and apply it to the Layer 3 interfaces



**NOTE:** Configuring or changing PFC on an interface blocks the entire port until the PFC change is completed. After a PFC change is completed, the port is unblocked and traffic resumes. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

When you configure the Layer 2 and Layer 3 interfaces correctly, the switch enables PFC on the traffic between Ethernet Host 1 and Ethernet Host 2 across the entire path between the two hosts. If any output queue in the path on which PFC is enabled experiences congestion, PFC pauses the traffic and prevents packet loss for the flow.

#### Related Documentation

- [Example: Configuring PFC Across Layer 3 Interfaces on page 319](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)
- [Understanding Integrated Routing and Bridging](#) (Topic also applies to IRB interfaces.)

## Example: Configuring PFC Across Layer 3 Interfaces

Priority-based flow control (PFC) helps ensure lossless transport across data center bridging interfaces by pausing incoming traffic when output queue buffers fill to a certain threshold. On a QFX5200, QFX5100, EX4600, or QFX10000 switch running the Enhanced Layer 2 Software (ELS) CLI, in addition to configuring PFC on Layer 2 (bridging) interfaces, you can configure PFC on traffic that traverses Layer 3 interfaces. This enables you to preserve the lossless characteristics that PFC provides on traffic, even when the traffic crosses Layer 3 interfaces that connect two Layer 2 networks.

- [Requirements on page 320](#)
- [Overview on page 320](#)

- [Configuration on page 323](#)
- [Verification on page 332](#)

## Requirements

This example uses the following hardware and software components:

- Two switches
- Junos OS Release 13.2 or later for the QFX Series
- Two Ethernet hosts

## Overview

On a network that uses two QFX5200, QFX5100, EX4600, or QFX10000 switches to connect hosts on two different Ethernet networks across a Layer 3 network, to configure PFC across the Layer 2 and Layer 3 interfaces, you must:

- Configure the Layer 2 and Layer 3 interfaces on the switches
- Configure VLANs to carry the traffic across the Layer 2 and Layer 3 networks
- Configure integrated routing and bridging (IRB) interfaces on the Layer 2 interfaces to move the Layer 2 VLAN traffic to Layer 3
- Configure and apply the appropriate classifiers to the interfaces
- Configure and apply congestion notification profiles (CNPs) on the interfaces to enable PFC on the traffic that you want to be lossless



**NOTE:** Configuring or changing PFC on an interface blocks the entire port until the PFC change is completed. After a PFC change is completed, the port is unblocked and traffic resumes. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

- Configure lossless forwarding classes and either hierarchical port scheduling (also known as enhanced transmission selection) or direct port scheduling, depending on your switch, on the interfaces



**NOTE:** PFC operates at the queue level, based on the IEEE 802.1p code point in the priority code point (PCP) field of the Ethernet frame header (sometimes known as the CoS bits). For this reason, traffic on Layer 3 interfaces on which you want to enable PFC must use an IEEE 802.1p classifier to map incoming traffic to forwarding classes (which are in turn mapped to output queues) and loss priorities. You cannot use a DSCP or DSCP IPv6 classifier to classify Layer 3 traffic if you want to enable PFC on traffic flows.

Topology

Figure 24 on page 321 shows the topology for this example.

Figure 24: Enabling PFC Across Layer 3 Interface Hops

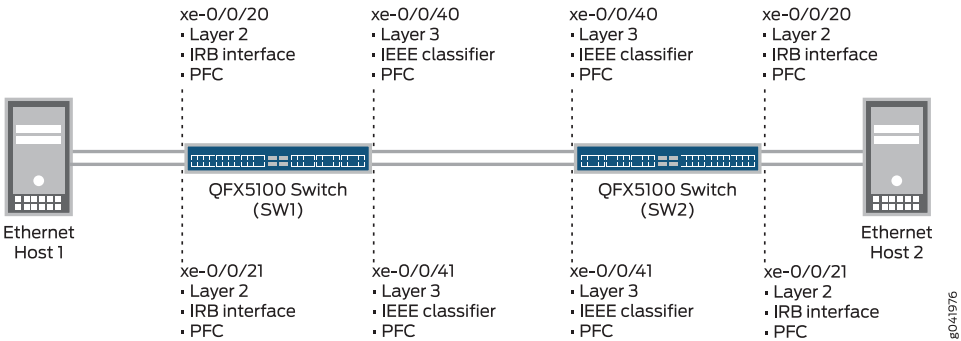


Table 71 on page 321 shows the configuration components for this example. On the two switches, the Ethernet host-facing interfaces use the same interface names and configuration, and the Layer 3 network-facing interfaces use the same interface names and configuration.

Table 71: Components of the PFC Across Layer 3 Interfaces Topology

Component	Settings
Hardware	Two switches, Switch SW1 and Switch SW2. Two Ethernet hosts
Layer 3 interfaces (xe-0/0/40 and xe-0/0/41) and VLANs	Interface xe-0/0/40: <ul style="list-style-type: none"><li>Interface family—inet</li><li>Interface IP address—100.103.1.2/24</li><li>VLAN tagging—enabled</li><li>Interface VLAN ID—103</li></ul> Interface xe-0/0/41: <ul style="list-style-type: none"><li>Interface family—inet</li><li>Interface IP address—100.104.1.2/24</li><li>VLAN tagging—enabled</li><li>Interface VLAN ID—104</li></ul>
Layer 2 interfaces (xe-0/0/20 and xe-0/0/21) and VLAN membership	Family: Ethernet switching Interface mode—trunk Interface xe-0/0/20 VLAN membership—vlan105 Interface xe-0/0/21 VLAN membership—vlan106
VLANs for the IRB interfaces	VLAN unit 105—family inet, IP address 100.105.1.1/24 VLAN unit 106—family inet, IP address 100.106.1.1/24

**Table 71: Components of the PFC Across Layer 3 Interfaces Topology (*continued*)**

Component	Settings
Layer 2 IRB interfaces	<p>Interface xe-0/0/20:</p> <ul style="list-style-type: none"> <li>IRB interface unit—105</li> <li>IRB interface family—inert</li> <li>IRB interface IP address—100.105.1.1/24</li> <li>IRB interface VLAN ID—105</li> <li>Layer 3 interface name—irb.105</li> </ul> <p>Interface xe-0/0/21:</p> <ul style="list-style-type: none"> <li>IRB interface unit—106</li> <li>IRB interface family—inert</li> <li>IRB interface IP address—100.106.1.1/24</li> <li>IRB interface VLAN ID—106</li> <li>Layer 3 interface name—irb.106</li> </ul>
Forwarding classes (both switches)	<p>Name—lossless-3 Queue mapping—queue 3 Packet drop attribute—no-loss</p> <p>Name—lossless-4 Queue mapping—queue 4 Packet drop attribute—no-loss</p> <p><b>NOTE:</b> Matching the forwarding class names (lossless-3 and lossless-4) to the queue number and to the classified IEEE 802.1p code point (priority) creates a configuration that is logical and easy to map because the forwarding class, queue, and priority all use the same number.</p> <p>Name—all-others Queue mapping—queue 0 Packet drop attribute—none</p> <p><b>NOTE:</b> The forwarding class <i>all-others</i> is for best-effort traffic that traverses the interfaces.</p>
Layer 2 interface behavior aggregate (BA) classifier	<p>Name—lossless-3-4-ieee Forwarding class lossless-3—mapped to code point 011 (IEEE 802.1p priority 3) and a packet loss priority of low Forwarding class lossless-4—mapped to code point 100 (IEEE 802.1p priority 4) and a packet loss priority of low</p> <p>Apply the Layer 2 IEEE 802.1p classifier to both the Layer 2 and the Layer 3 interfaces (xe-0/0/20, xe-0/0/21, xe-0/0/40, and xe-0/0/41).</p>
Congestion notification profile (PFC, both switches)	<p>Name—lossless-cnp PFC enabled on IEEE 802.1p code points—011 (lossless-3 forwarding class and priority), 100 (lossless-4 forwarding class and priority)</p> <p>Apply the CNP to both the Layer 2 and the Layer 3 interfaces (xe-0/0/20, xe-0/0/21, xe-0/0/40, and xe-0/0/41) to enable PFC on IEEE 802.1p code points 011 and 100.</p>

**Table 71: Components of the PFC Across Layer 3 Interfaces Topology (*continued*)**

Component	Settings
Enhanced transmission selection (ETS) hierarchical port scheduling (only if using ETS)	<p>Hierarchical port scheduling (ETS) includes configuring:</p> <ul style="list-style-type: none"> <li>• Schedulers to assign bandwidth to traffic</li> <li>• Scheduler mapping to forwarding classes</li> <li>• Grouping of the forwarding classes (priorities) in forwarding class sets (priority groups)</li> <li>• A traffic control profile to assign bandwidth to the forwarding class set and to associate the forwarding class set with the scheduler mapping</li> </ul> <p>Hierarchical port scheduling also includes applying the hierarchical scheduler (defined in the traffic control profile) to the interfaces.</p> <p>This example focuses on configuring PFC across the Layer 2 and Layer 3 interfaces. To maintain this focus, this example includes the CLI statements needed to configure hierarchical port scheduling, but does not include descriptive explanations of the configuration. The <i>Related Documentation</i> section provides links to example documents that show how to configure hierarchical port scheduling.</p> <p>Apply the scheduling configuration to both the Layer 2 and the Layer 3 interfaces (xe-0/0/20, xe-0/0/21, xe-0/0/40, and xe-0/0/41).</p>
Direct port scheduling (only if using port scheduling instead of ETS)	<p>Direct port scheduling includes configuring:</p> <ul style="list-style-type: none"> <li>• Schedulers to assign bandwidth to traffic</li> <li>• Scheduler mapping to forwarding classes</li> </ul> <p>Port scheduling also includes applying the scheduler map to the interfaces.</p> <p>This example focuses on configuring PFC across the Layer 2 and Layer 3 interfaces. To maintain this focus, this example includes the CLI statements needed to configure direct port scheduling, but does not include descriptive explanations of the configuration. The <i>Related Documentation</i> section provides links to example documents that show how to configure port scheduling.</p> <p>Apply the scheduling configuration to both the Layer 2 and the Layer 3 interfaces (xe-0/0/20, xe-0/0/21, xe-0/0/40, and xe-0/0/41).</p>

## Configuration

- [Common Configuration \(Applies to ETS Hierarchical Scheduling and to Port Scheduling\) on page 326](#)
- [ETS Hierarchical Scheduling Configuration on page 328](#)
- [Port Scheduling Configuration on page 328](#)
- [Results on page 328](#)

**CLI Quick Configuration** To configure PFC across Layer 3 interfaces, copy the following commands, paste them in a text file, remove the line breaks, change variables and details to match your network

configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level. The same configuration applies to both Switch SW1 and Switch SW2. The configuration is separated into the configuration common to ETS and direct port scheduling, and the portions of the configuration that apply only to ETS and only to port scheduling.

**Common  
Configuration (Applies  
to ETS Hierarchical  
Scheduling and to Port  
Scheduling)**

```

set interfaces xe-0/0/40 vlan-tagging
set interfaces xe-0/0/40 unit 0 vlan-id 103
set interfaces xe-0/0/40 unit 0 family inet address 100.103.1.2/24
set interfaces xe-0/0/41 vlan-tagging
set interfaces xe-0/0/41 unit 0 vlan-id 104
set interfaces xe-0/0/41 unit 0 family inet address 100.104.1.2/24
set interfaces xe-0/0/20 unit 0 family ethernet-switching interface-mode trunk
set interfaces xe-0/0/20 unit 0 family ethernet-switching vlan members vlan105
set interfaces xe-0/0/21 unit 0 family ethernet-switching interface-mode trunk
set interfaces xe-0/0/21 unit 0 family ethernet-switching vlan members vlan106
set interfaces irb unit 105 family inet address 100.105.1.1/24
set interfaces irb unit 106 family inet address 100.106.1.1/24
set vlans vlan105 vlan-id 105
set vlans vlan106 vlan-id 106
set vlans vlan105 l3-interface irb.105
set vlans vlan106 l3-interface irb.106
set class-of-service forwarding-classes class lossless-3 queue-num 3 no-loss
set class-of-service forwarding-classes class lossless-4 queue-num 4 no-loss
set class-of-service forwarding-classes class all-others queue-num 0
set class-of-service classifiers ieee-802.1 lossless-3-4-ieee forwarding-class lossless-3 loss-priority
low code-points 011
set class-of-service classifiers ieee-802.1 lossless-3-4-ieee forwarding-class lossless-4 loss-priority
low code-points 100
set class-of-service congestion-notification-profile lossless-cnp input ieee-802.1 code-point 011
pfc
set class-of-service congestion-notification-profile lossless-cnp input ieee-802.1 code-point 100
pfc
set class-of-service schedulers lossless_sch transmit-rate 6g
set class-of-service schedulers lossless_sch shaping-rate percent 100
set class-of-service schedulers all-others_sch transmit-rate 4g
set class-of-service scheduler-maps lossless_map forwarding-class lossless-3 scheduler
lossless_sch
set class-of-service scheduler-maps lossless_map forwarding-class lossless-4 scheduler
lossless_sch
set class-of-service scheduler-maps all-others_map forwarding-class all-others scheduler
all-others_sch
set class-of-service interfaces xe-0/0/20 congestion-notification-profile lossless-cnp
set class-of-service interfaces xe-0/0/20 unit 0 classifiers ieee-802.1 lossless-3-4-ieee
set class-of-service interfaces xe-0/0/21 congestion-notification-profile lossless-cnp
set class-of-service interfaces xe-0/0/21 unit 0 classifiers ieee-802.1 lossless-3-4-ieee
set class-of-service interfaces xe-0/0/40 congestion-notification-profile lossless-cnp
set class-of-service interfaces xe-0/0/40 classifiers ieee-802.1 lossless-3-4-ieee
set class-of-service interfaces xe-0/0/41 congestion-notification-profile lossless-cnp
set class-of-service interfaces xe-0/0/41 classifiers ieee-802.1 lossless-3-4-ieee

```

### Configuration for ETS Hierarchical Scheduling

The ETS-specific portion of this example configures forwarding class set (priority group) membership and priority group CoS settings (traffic control profile), and assigns the priority group and its CoS configuration to the interfaces.

```
set class-of-service forwarding-class-sets lossless_fc_set class lossless-3
set class-of-service forwarding-class-sets lossless_fc_set class lossless-4
set class-of-service forwarding-class-sets all-others_fc_set class all-others
set class-of-service traffic-control-profiles lossless_tcp scheduler-map lossless_map
set class-of-service traffic-control-profiles lossless_tcp guaranteed-rate percent 60
set class-of-service traffic-control-profiles lossless_tcp shaping-rate percent 100
set class-of-service traffic-control-profiles all-others_tcp scheduler-map all-others_map
set class-of-service traffic-control-profiles all-others_tcp guaranteed-rate percent 40
set class-of-service interfaces xe-0/0/20 forwarding-class-set lossless_fc_set
output-traffic-control-profile lossless_tcp
set class-of-service interfaces xe-0/0/20 forwarding-class-set all-others_fc_set
output-traffic-control-profile all-others_tcp
set class-of-service interfaces xe-0/0/21 forwarding-class-set lossless_fc_set
output-traffic-control-profile lossless_tcp
set class-of-service interfaces xe-0/0/21 forwarding-class-set all-others_fc_set
output-traffic-control-profile all-others_tcp
set class-of-service interfaces xe-0/0/40 forwarding-class-set lossless_fc_set
output-traffic-control-profile lossless_tcp
set class-of-service interfaces xe-0/0/40 forwarding-class-set all-others_fc_set
output-traffic-control-profile all-others_tcp
set class-of-service interfaces xe-0/0/41 forwarding-class-set lossless_fc_set
output-traffic-control-profile lossless_tcp
set class-of-service interfaces xe-0/0/41 forwarding-class-set all-others_fc_set
output-traffic-control-profile all-others_tcp
```

### Configuration for Port Scheduling

The port-scheduling-specific portion of this example assigns the scheduler maps (which set the CoS treatment of the forwarding classes in the scheduler map) to the interfaces.

```
[edit class-of-service]
set interfaces xe-0/0/20 scheduler-map lossless_map
set interfaces xe-0/0/20 scheduler-map all-others_map
set interfaces xe-0/0/21 scheduler-map lossless_map
set interfaces xe-0/0/21 scheduler-map all-others_map
set interfaces xe-0/0/40 scheduler-map lossless_map
set interfaces xe-0/0/40 scheduler-map all-others_map
set interfaces xe-0/0/41 scheduler-map lossless_map
set interfaces xe-0/0/41 scheduler-map all-others_map
```

## Common Configuration (Applies to ETS Hierarchical Scheduling and to Port Scheduling)

**Step-by-Step Procedure** The following step-by-step procedure shows you how to configure the VLANs, IRB interfaces, lossless forwarding classes, classifiers, PFC settings to enable PFC across Layer 3 interfaces, and the queue scheduling configuration common to ETS and direct port scheduling. For completeness, the ETS hierarchical port scheduling and direct port scheduling configurations are included separately, in the following procedures, but without explanatory text. See the *Related Documentation* links for detailed examples of the scheduling elements of the configuration.

1. Configure the Layer 3 interface VLANs and IP addresses:

```
[edit interfaces]
user@switch# set xe-0/0/40 vlan-tagging
user@switch# set xe-0/0/40 unit 0 vlan-id 103
user@switch# set xe-0/0/40 unit 0 family inet address 100.103.1.2/24
user@switch# set xe-0/0/41 vlan-tagging
user@switch# set xe-0/0/41 unit 0 vlan-id 104
user@switch# set xe-0/0/41 unit 0 family inet address 100.104.1.2/24
```

2. Configure the Layer 2 interface VLAN membership and interface mode:

```
[edit interfaces]
user@switch# set xe-0/0/20 unit 0 family ethernet-switching interface-mode trunk
user@switch# set xe-0/0/20 unit 0 family ethernet-switching vlan members vlan105
user@switch# set xe-0/0/21 unit 0 family ethernet-switching interface-mode trunk
user@switch# set xe-0/0/21 unit 0 family ethernet-switching vlan members vlan106
```

3. Configure the IRB interfaces and VLANs to transport incoming Layer 2 traffic assigned to VLANs vlan105 (of which interface xe-0/0/20 is a member) and vlan106 (of which interface xe-0/0/21 is a member) across Layer 3:

```
[edit]
user@switch# set interfaces irb unit 105 family inet address 100.105.1.1/24
user@switch# set interfaces irb unit 106 family inet address 100.106.1.1/24
user@switch# set vlans vlan105 vlan-id 105
user@switch# set vlans vlan106 vlan-id 106
user@switch# set vlans vlan105 l3-interface irb.105
user@switch# set vlans vlan106 l3-interface irb.106
```

4. Configure the lossless forwarding classes and a best-effort forwarding class for any other traffic that might use the interfaces:

```
[edit class-of-service]
user@switch# set forwarding-classes class lossless-3 queue-num 3 no-loss
user@switch# set forwarding-classes class lossless-4 queue-num 4 no-loss
user@switch# set forwarding-classes class all-others queue-num 0
```

5. Configure the IEEE classifier for the Layer 2 and Layer 3 interfaces to classify incoming traffic into the lossless forwarding classes based on the IEEE 802.1p code point of the traffic:

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 lossless-3-4-ieee forwarding-class lossless-3 loss-priority low code-points 011
user@switch# set ieee-802.1 lossless-3-4-ieee forwarding-class lossless-4 loss-priority low code-points 100
```



6. Configure the CNP to enable PFC on the lossless priorities (the lossless forwarding classes mapped to IEEE 802.1p code points 3 and 4):

```
[edit class-of-service congestion-notification-profile]
user@switch# set lossless-cnp input ieee-802.1 code-point 011 pfc
user@switch# set lossless-cnp input ieee-802.1 code-point 100 pfc
```

7. Apply the Layer 2 IEEE 802.1p classifier and the CNP to the Layer 3 interfaces:

```
[edit class-of-service interfaces]
user@switch# set xe-0/0/40 classifiers ieee-802.1 lossless-3-4-ieee
user@switch# set xe-0/0/40 congestion-notification-profile lossless-cnp
user@switch# set xe-0/0/41 classifiers ieee-802.1 lossless-3-4-ieee
user@switch# set xe-0/0/41 congestion-notification-profile lossless-cnp
```

8. Apply the Layer 2 IEEE 802.1p classifier and the CNP to the Layer 2 interfaces:

```
[edit class-of-service interfaces]
user@switch# xe-0/0/20 unit 0 classifiers ieee-802.1 lossless-3-4-ieee
user@switch# xe-0/0/20 congestion-notification-profile lossless-cnp
user@switch# xe-0/0/21 unit 0 classifiers ieee-802.1 lossless-3-4-ieee
user@switch# xe-0/0/21 congestion-notification-profile lossless-cnp
```

9. Configure queue scheduling to support the lossless configuration and map the schedulers to the forwarding classes (statements included here for completeness; see the *Related Documentation* links for detailed examples of scheduling configuration):

```
[edit class-of-service]
user@switch# set schedulers lossless_sch transmit-rate 6g
user@switch# set schedulers lossless_sch shaping-rate percent 100
user@switch# set schedulers all-others_sch transmit-rate 4g
user@switch# set scheduler-maps lossless_map forwarding-class lossless-3 scheduler
lossless_sch
user@switch# set scheduler-maps lossless_map forwarding-class lossless-4 scheduler
lossless_sch
user@switch# set scheduler-maps all-others_map forwarding-class all-others scheduler
all-others_sch
```

## ETS Hierarchical Scheduling Configuration

- Step-by-Step Procedure**
1. Configure hierarchical scheduling to support the lossless configuration (included here for completeness; see the *Related Documentation* links for detailed examples of scheduling configuration) and apply it to the Layer 2 and Layer 3 interfaces:

```
[edit class-of-service interfaces]
user@switch# set forwarding-class-sets lossless_fc_set class lossless-3
user@switch# set forwarding-class-sets lossless_fc_set class lossless-4
user@switch# set forwarding-class-sets all-others_fc_set class all-others
user@switch# set traffic-control-profiles lossless_tcp scheduler-map lossless_map
user@switch# set traffic-control-profiles lossless_tcp guaranteed-rate percent 60
user@switch# set traffic-control-profiles lossless_tcp shaping-rate percent 100
user@switch# set traffic-control-profiles all-others_tcp scheduler-map all-others_map
user@switch# set traffic-control-profiles all-others_tcp guaranteed-rate percent 40
user@switch# set interfaces xe-0/0/20 forwarding-class-set lossless_fc_set
output-traffic-control-profile lossless_tcp
user@switch# set interfaces xe-0/0/20 forwarding-class-set all-others_fc_set
output-traffic-control-profile all-others_tcp
user@switch# set interfaces xe-0/0/21 forwarding-class-set lossless_fc_set
output-traffic-control-profile lossless_tcp
user@switch# set interfaces xe-0/0/21 forwarding-class-set all-others_fc_set
output-traffic-control-profile all-others_tcp
user@switch# set interfaces xe-0/0/40 forwarding-class-set lossless_fc_set
output-traffic-control-profile lossless_tcp
user@switch# set interfaces xe-0/0/40 forwarding-class-set all-others_fc_set
output-traffic-control-profile all-others_tcp
user@switch# set interfaces xe-0/0/41 forwarding-class-set lossless_fc_set
output-traffic-control-profile lossless_tcp
user@switch# set interfaces xe-0/0/41 forwarding-class-set all-others_fc_set
output-traffic-control-profile all-others_tcp
```

## Port Scheduling Configuration

- Step-by-Step Procedure**
1. Apply port scheduling to support the lossless configuration on interfaces:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 scheduler-map lossless_map
user@switch# set interfaces xe-0/0/20 scheduler-map all-others_map
user@switch# set interfaces xe-0/0/21 scheduler-map lossless_map
user@switch# set interfaces xe-0/0/21 scheduler-map all-others_map
user@switch# set interfaces xe-0/0/40 scheduler-map lossless_map
user@switch# set interfaces xe-0/0/40 scheduler-map all-others_map
user@switch# set interfaces xe-0/0/41 scheduler-map lossless_map
user@switch# set interfaces xe-0/0/41 scheduler-map all-others_map
```

## Results

Display the results of the interface, VLAN, and class-of-service configurations (the system shows only the explicitly configured parameters; it does not show default parameters). The results are valid for both Switch SW1 and Switch SW2 because the same configuration is used on both switches. The results are from the ETS hierarchical scheduling configuration, which show the more complex configuration. Direct port scheduling results would not show the traffic control profile or forwarding class set portions of the configuration, but would display the name of the scheduler map under each interface

(instead of the names of the forwarding class set and output traffic control profile). Other than that, the results are the same.

Display the results of the interface configuration:

```
user@switch# show configuration interfaces
xe-0/0/20 {
  unit 0 {
    family ethernet-switching {
      interface-mode trunk;
      vlan {
        members vlan105;
      }
    }
  }
}
xe-0/0/21 {
  unit 0 {
    family ethernet-switching {
      interface-mode trunk;
      vlan {
        members vlan106;
      }
    }
  }
}
xe-0/0/40 {
  vlan-tagging;
  unit 0 {
    vlan-id 103;
    family inet {
      address 100.103.1.2/24;
    }
  }
}
xe-0/0/41 {
  vlan-tagging;
  unit 0 {
    vlan-id 104;
    family inet {
      address 100.104.1.2/24;
    }
  }
}
irb {
  unit 105 {
    family inet {
      address 100.105.1.1/24;
    }
  }
  unit 106 {
    family inet {
      address 100.106.1.1/24;
    }
  }
}
vlan {
  unit 105 {
    family inet {
      address 100.105.1.1/24;
    }
  }
}
```

```
    }
    unit 106 {
        family inet {
            address 100.106.1.1/24;
        }
    }
}
```

Display the results of the vlan configuration:

```
user@switch# show configuration vlans
vlan105 {
    vlan-id 105;
    l3-interface irb.105;
}
vlan106 {
    vlan-id 106;
    l3-interface irb.106;
}
```

Display the results of the class-of-service configuration:

```
user@switch# show configuration class-of-service
classifiers {
    ieee-802.1 lossless-3-4-ieee {
        forwarding-class lossless-3 {
            loss-priority low code-points 011;
        }
        forwarding-class lossless-4 {
            loss-priority low code-points 100;
        }
    }
}
forwarding-classes {
    class lossless-3 queue-num 3 no-loss;
    class lossless-4 queue-num 4 no-loss;
    class all-others queue-num 0;
}
traffic-control-profiles {
    lossless_tcp {
        scheduler-map lossless_map;
        shaping-rate percent 100;
        guaranteed-rate percent 60;
    }
    all-others_tcp {
        scheduler-map all-others_map;
        guaranteed-rate percent 40;
    }
}
forwarding-class-sets {
    lossless_fc_set {
        class lossless-3;
        class lossless-4;
    }
    all-others_fc_set {
        class all-others;
    }
}
congestion-notification-profile {
    lossless-cnp {
```

```

        input {
            ieee-802.1 {
                code-point 011 {
                    pfc;
                }
                code-point 100 {
                    pfc;
                }
            }
        }
    }
}
interfaces {
    xe-0/0/20 {
        forwarding-class-set {
            lossless_fc_set {
                output-traffic-control-profile lossless_tcp;
            }
            all-others_fc_set {
                output-traffic-control-profile all-others_tcp;
            }
        }
        congestion-notification-profile lossless-cnp;
        unit 0 {
            classifiers {
                ieee-802.1 lossless-3-4-ieee;
            }
        }
    }
    xe-0/0/21 {
        forwarding-class-set {
            all-others_fc_set {
                output-traffic-control-profile all-others_tcp;
            }
            lossless_fc_set {
                output-traffic-control-profile lossless_tcp;
            }
        }
        congestion-notification-profile lossless-cnp;
        unit 0 {
            classifiers {
                ieee-802.1 lossless-3-4-ieee;
            }
        }
    }
    xe-0/0/40 {
        forwarding-class-set {
            lossless_fc_set {
                output-traffic-control-profile lossless_tcp;
            }
            all-others_fc_set {
                output-traffic-control-profile all-others_tcp;
            }
        }
        congestion-notification-profile lossless-cnp;
        classifiers {
            ieee-802.1 lossless-3-4-ieee;
        }
    }
    xe-0/0/41 {
        forwarding-class-set {

```

```
        lossless_fc_set {
            output-traffic-control-profile lossless_tcp;
        }
        all-others_fc_set {
            output-traffic-control-profile all-others_tcp;
        }
    }
    congestion-notification-profile lossless-cnp;
    classifiers {
        ieee-802.1 lossless-3-4-ieee;
    }
}
scheduler-maps {
    lossless_map {
        forwarding-class lossless-3 scheduler lossless_sch;
        forwarding-class lossless-4 scheduler lossless_sch;
    }
    all-others_map {
        forwarding-class all-others scheduler all-others_sch;
    }
}
schedulers {
    lossless_sch {
        transmit-rate 6g;
        shaping-rate percent 100;
    }
    all-others_sch {
        transmit-rate 4g;
    }
}
```



**TIP:** To quickly configure the switch, issue the `load merge terminal` command, and then copy the hierarchies and paste them into the switch terminal window.

## Verification

To verify that the PFC across Layer 3 interfaces configuration has been created and is operating properly, perform these tasks:

- [Verifying the Interface Configuration on page 333](#)
- [Verifying the VLAN Configuration on page 335](#)
- [Verifying the PFC Configuration \(Congestion Notification Profile\) on page 335](#)
- [Verify the Forwarding Class Configuration on page 336](#)
- [Verifying the Classifier Configuration on page 336](#)
- [Verifying the Interface CoS Configuration \(Hierarchical Scheduling, PFC, and Classifier Mapping to Interfaces\) on page 337](#)

### Verifying the Interface Configuration

**Purpose** Verify that the Layer 2 Ethernet interfaces, Layer 3 IP interfaces, IRB interfaces, and VLAN interfaces have been created on the switch and are correctly configured.

**Action** Display the switch interface configuration using the **show configuration interfaces** command:

```
user@switch> show configuration interfaces
xe-0/0/20 {
  unit 0 {
    family ethernet-switching {
      interface-mode trunk;
      vlan {
        members vlan105;
      }
    }
  }
}
xe-0/0/21 {
  unit 0 {
    family ethernet-switching {
      interface-mode trunk;
      vlan {
        members vlan106;
      }
    }
  }
}
xe-0/0/40 {
  vlan-tagging;
  unit 0 {
    vlan-id 103;
    family inet {
      address 100.103.1.2/24;
    }
  }
}
xe-0/0/41 {
  vlan-tagging;
  unit 0 {
    vlan-id 104;
    family inet {
      address 100.104.1.2/24;
    }
  }
}
irb {
  unit 105 {
    family inet {
      address 100.105.1.1/24;
    }
  }
  unit 106 {
    family inet {
      address 100.106.1.1/24;
    }
  }
}
vlan {
  unit 105 {
    family inet {
      address 100.105.1.1/24;
    }
  }
}
```



```

    unit 106 {
        family inet {
            address 100.106.1.1/24;
        }
    }
}

```

**Meaning** The **show configuration interfaces** command displays all of the interfaces configured on the switch. The command output shows that:

- Interfaces xe-0/0/20 and xe-0/0/21 are Ethernet interfaces (family ethernet-switching) in trunk interface mode. Interface xe-0/0/20 is a member of VLAN vlan105, and interface xe-0/0/21 is a member of VLAN vlan106.
- Interfaces xe-0/0/40 and xe-0/0/41 are IP interfaces (family inet) with VLAN tagging enabled. Interface xe-0/0/40 has an IP address of 100.103.1.2/24 and a VLAN ID of 103. Interface xe-0/0/41 has an IP address of 100.104.1.2/24 and a VLAN ID of 104.
- Two IRB interfaces are configured, IRB unit 105 with an IP address of 100.105.1.1/24 and IRB unit 106 with an IP address of 100.106.1.1/24.
- Two VLAN interfaces are configured, VLAN unit 105 with an IP address of 100.105.1.1/24 (for IRB interface unit 105) and VLAN unit 106 with an IP address of 100.106.1.1/24 (for IRB interface unit 106).

### Verifying the VLAN Configuration

**Purpose** Verify that VLANs have been created on the switch and are correctly configured.

**Action** Display the VLAN configuration using the **show configuration vlans** command:

```

user@switch> show configuration vlans
vlan105 {
    vlan-id 105;
    l3-interface irb.105;
}
vlan106 {
    vlan-id 106;
    l3-interface irb.106;
}

```

**Meaning** The **show configuration vlans** command displays all of the VLANs configured on the switch. The command output shows that:

- VLAN vlan105 has been configured with VLAN ID 105 on IRB interface irb.105.
- VLAN vlan106 has been configured with VLAN ID 106 on IRB interface irb.106.

### Verifying the PFC Configuration (Congestion Notification Profile)

**Purpose** Verify that PFC has been enabled on the correct IEEE 802.1p code points (priorities) in the CNP.

**Action** Display the PFC configuration using the **show configuration class-of-service congestion-notification-profile** command:

```
user@switch> show configuration class-of-service congestion-notification-profile
lossless-cnp {
    input {
        ieee-802.1 {
            code-point 011 {
                pfc;
            }
            code-point 100 {
                pfc;
            }
        }
    }
}
```

**Meaning** The **show configuration class-of-service congestion-notification-profile** command displays all of the CNPs configured on the switch. The command output shows that:

- The CNP named **lossless-cnp** is configured on the switch.
- The CNP **lossless-cnp** enables PFC on IEEE 802.1p code points 100 and 100.

### Verify the Forwarding Class Configuration

---

**Purpose** Verify that the two lossless forwarding classes and the best-effort forwarding class have been configured on the switch.

**Action** Display the forwarding class configuration using the **show configuration class-of-service forwarding-classes** command:

```
user@switch> show configuration class-of-service forwarding-classes
class lossless-3 queue-num 3 no-loss;
class lossless-4 queue-num 4 no-loss;
class all-others queue-num 0;
```

**Meaning** The **show configuration class-of-service forwarding-classes** command displays all of the forwarding classes configured on the switch (default forwarding classes are not displayed). The command output shows that:

- Forwarding class **lossless-3** is mapped to queue 3 and is configured as a lossless forwarding class (the **no-loss** attribute is applied)
- Forwarding class **lossless-4** is mapped to queue 4 and is configured as a lossless forwarding class (the **no-loss** attribute is applied)
- Forwarding class **all-others** is mapped to queue 0. It is not a lossless forwarding class (the **no-loss** attribute is not applied).

### Verifying the Classifier Configuration

---

**Purpose** Verify that the IEEE 802.1p classifier has been configured on the switch.

**Action** Display the classifier configuration using the **show configuration class-of-service classifiers** command:

```
user@switch> show configuration class-of-service classifiers
ieee-802.1 lossless-3-4-ieee {
    forwarding-class lossless-3 {
        loss-priority low code-points 011;
    }
    forwarding-class lossless-4 {
        loss-priority low code-points 100;
    }
}
```

**Meaning** The **show configuration class-of-service classifiers** command displays all of the classifiers configured on the switch. The command output shows that the Layer 2 IEEE 802.1p classifier **lossless-3-4-ieee** classifies traffic with the code point 011 into the **lossless-3** forwarding class with a loss priority of **low**, and classifies traffic with the code point 100 into the **lossless-4** forwarding class with a loss priority of **low**.

### Verifying the Interface CoS Configuration (Hierarchical Scheduling, PFC, and Classifier Mapping to Interfaces)

**Purpose** Verify that the interfaces have the correct hierarchical scheduling, PFC, and classifier configurations.



**NOTE:** The results are from the ETS hierarchical scheduling configuration, which shows the more complex configuration. Direct port scheduling results would not show the traffic control profile or forwarding class set portions of the interface configuration, but would display the name of the scheduler map under each interface instead of the names of the forwarding class set and output traffic control profile. Other than that, they are the same.

**Action** Display the interface CoS configuration using the **show configuration class-of-service interfaces** command:

```
user@switch> show configuration class-of-service interfaces
xe-0/0/20 {
  forwarding-class-set {
    lossless_fc_set {
      output-traffic-control-profile lossless_tcp;
    }
    all-others_fc_set {
      output-traffic-control-profile all-others_tcp;
    }
  }
  congestion-notification-profile lossless-cnp;
  unit 0 {
    classifiers {
      ieee-802.1 lossless-3-4-ieee;
    }
  }
}
xe-0/0/21 {
  forwarding-class-set {
    all-others_fc_set {
      output-traffic-control-profile all-others_tcp;
    }
    lossless_fc_set {
      output-traffic-control-profile lossless_tcp;
    }
  }
  congestion-notification-profile lossless-cnp;
  unit 0 {
    classifiers {
      ieee-802.1 lossless-3-4-ieee;
    }
  }
}
xe-0/0/40 {
  forwarding-class-set {
    lossless_fc_set {
      output-traffic-control-profile lossless_tcp;
    }
    all-others_fc_set {
      output-traffic-control-profile all-others_tcp;
    }
  }
  congestion-notification-profile lossless-cnp;
  classifiers {
    ieee-802.1 lossless-3-4-ieee;
  }
}
xe-0/0/41 {
  forwarding-class-set {
    lossless_fc_set {
      output-traffic-control-profile lossless_tcp;
    }
    all-others_fc_set {
      output-traffic-control-profile all-others_tcp;
    }
  }
  congestion-notification-profile lossless-cnp;
}
```

```

classifiers {
    ieee-802.1 lossless-3-4-ieee;
}

```

**Meaning** The `show configuration class-of-service interfaces` command displays all of the CoS components configured on the switch interfaces. The command output shows that:

- The configuration on Layer 2 Ethernet interfaces xe-0/0/20 and xe-0/0/21 includes:
  - Hierarchical scheduling—The forwarding class set **lossless\_fc\_set** with the traffic control profile **lossless\_tcp** for the lossless traffic, and the forwarding class set **all-others\_fc\_set** with the traffic control profile **all-others\_tcp** for the best-effort traffic are applied to both interfaces.
  - PFC—The **lossless-cnp** congestion notification profile is applied to both interfaces.
  - Classifiers—The Layer 2 IEEE 802.1p classifier **lossless-3-4-ieee** is applied to both interfaces.
- The configuration on Layer 3 IP interfaces xe-0/0/40 and xe-0/0/41 includes:
  - Hierarchical scheduling—The forwarding class set **lossless\_fc\_set** with the traffic control profile **lossless\_tcp** for the lossless traffic, and the forwarding class set **all-others\_fc\_set** with the traffic control profile **all-others\_tcp** for the best-effort traffic are applied to both interfaces.
  - PFC—The **lossless-cnp** congestion notification profile is applied to both interfaces.
  - Classifiers—The Layer 2 IEEE 802.1p classifier **lossless-3-4-ieee** is applied to both interfaces. Traffic that would use a DSCP or a DSCP IPv6 classifier if it were configured uses the IEEE 802.1p classifier instead. Using the IEEE 802.1p classifier allows the interface to use PFC to pause traffic during periods of congestion to prevent packet loss.

**Related Documentation**

- [Understanding PFC Functionality Across Layer 3 Interfaces on page 317](#)

## Example: Configuring CoS for FCoE Transit Switch Traffic Across an MC-LAG

Multichassis link aggregation groups (MC-LAGs) provide redundancy and load balancing between two QFX Series switches, multihoming support for client devices such as servers, and a loop-free Layer 2 network without running Spanning Tree Protocol (STP).



**NOTE:** This example uses the Junos OS Enhanced Layer 2 Software (ELS) configuration style for QFX Series switches. If your switch runs software that does not support ELS, see *Example: Configuring CoS for FCoE Transit Switch Traffic Across an MC-LAG*. For ELS details, see *Getting Started with Enhanced Layer 2 Software*.

You can use an MC-LAG to provide a redundant aggregation layer for Fibre Channel over Ethernet (FCoE) traffic in an *inverted-U* topology. To support lossless transport of FCoE traffic across an MC-LAG, you must configure the appropriate class of service (CoS) on both of the QFX Series switches with MC-LAG port members. The CoS configuration must be the same on both of the MC-LAG switches because an MC-LAG does not carry forwarding class and IEEE 802.1p priority information.

Ports that are members of an MC-LAG act as FCoE passthrough transit switch ports.



**NOTE:** This example describes how to configure CoS to provide lossless transport for FCoE traffic across an MC-LAG that connects two QFX Series switches. It also describes how to configure CoS on the FCoE transit switches that connect FCoE hosts to the QFX Series switches that form the MC-LAG.

This example does *not* describe how to configure the MC-LAG itself. For a detailed example of MC-LAG configuration, see *Example: Configuring Multichassis Link Aggregation*. However, this example includes a subset of MC-LAG configuration that only shows how to configure interface membership in the MC-LAG.



**NOTE:** Juniper Networks QFX10000 aggregation switches do not support FIP snooping, so they cannot be used as FIP snooping access switches (Transit Switches TS1 and TS2) in this example. However, QFX10000 switches can play the role of the MC-LAG switches (MC-LAG Switch S1 and MC-LAG Switch S2) in this example.

QFX3500 and QFX3600 Virtual Chassis switches do not support FCoE.

This topic describes:

- [Requirements on page 340](#)
- [Overview on page 341](#)
- [Configuration on page 346](#)
- [Verification on page 356](#)

## Requirements

This example uses the following hardware and software components:

- Two Juniper Networks QFX5100 Switches running the ELS CLI that form an MC-LAG for FCoE traffic.
- Two Juniper Networks QFX5100 Switches running the ELS CLI that provide FCoE server access in transit switch mode and that connect to the MC-LAG switches.
- FCoE servers (or other FCoE hosts) connected to the transit switches.
- Junos OS Release 13.2 or later for the QFX Series.

## Overview

FCoE traffic requires lossless transport. This example shows you how to:

- Configure CoS for FCoE traffic on the two QFX5100 switches that form the MC-LAG, including priority-based flow control (PFC). The example also includes configuration for both enhanced transmission selection (ETS) hierarchical scheduling of resources for the FCoE forwarding class priority and for the forwarding class set priority group, and also direct port scheduling. You can only use one of the scheduling methods on a port. Different switches support different scheduling methods.



**NOTE:** Configuring or changing PFC on an interface blocks the entire port until the PFC change is completed. After a PFC change is completed, the port is unblocked and traffic resumes. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

- Configure CoS for FCoE on the two FCoE transit switches that connect FCoE hosts to the MC-LAG switches and enable FIP snooping on the FCoE VLAN at the FCoE transit switch access ports.
- Configure the appropriate port mode, MTU, and FCoE trusted or untrusted state for each interface to support lossless FCoE transport.




**NOTE:** Do not enable IGMP snooping on the FCoE VLAN. (IGMP snooping is enabled on the default VLAN by default, but is disabled by default on all other VLANs.)

## Topology

QFX5100 switches that act as transit switches support MC-LAGs for FCoE traffic in an inverted-U network topology, as shown in [Figure 25 on page 342](#).

Figure 25: Supported Topology for an MC-LAG on an FCoE Transit Switch

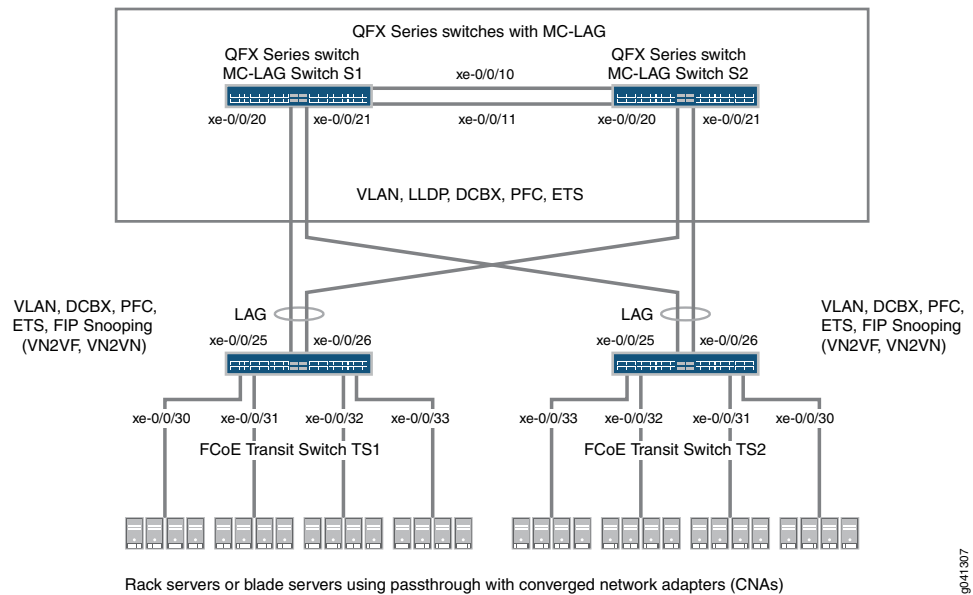

**NOTE:** Juniper Networks QFX10000 aggregation switches do not support FIP snooping, so they cannot be used as FIP snooping access switches (Transit Switches TS1 and TS2) in this example. However, QFX10000 switches can play the role of the MC-LAG switches (MC-LAG Switch S1 and MC-LAG Switch S2) in this example.

Table 72 on page 342 shows the configuration components for this example.

Table 72: Components of the CoS for FCoE Traffic Across an MC-LAG Configuration Topology

Component	Settings
Hardware	Four QFX5100 switches running the ELS CLI (two to form the MC-LAG as passthrough transit switches and two transit switches for FCoE access).
Forwarding class (all switches)	Default <b>fcoe</b> forwarding class.
Classifier (forwarding class mapping of incoming traffic to IEEE priority)	Default IEEE 802.1p trusted classifier on all FCoE interfaces.



**Table 72: Components of the CoS for FCoE Traffic Across an MC-LAG Configuration Topology (continued)**

Component	Settings
LAGs and MC-LAG	<p>S1—Ports xe-0/0/10 and x-0/0/11 are members of LAG <b>ae0</b>, which connects Switch S1 to Switch S2. Ports xe-0/0/20 and xe-0/0/21 are members of MC-LAG <b>ae1</b>. All ports are configured in <b>trunk</b> interface mode, as <b>fcoe-trusted</b>, and with an MTU of <b>2180</b>.</p> <p>S2—Ports xe-0/0/10 and x-0/0/11 are members of LAG <b>ae0</b>, which connects Switch S2 to Switch S1. Ports xe-0/0/20 and xe-0/0/21 are members of MC-LAG <b>ae1</b>. All ports are configured in <b>trunk</b> interface mode, as <b>fcoe-trusted</b>, and with an MTU of <b>2180</b>.</p> <p><b>NOTE:</b> Ports xe-0/0/20 and xe-0/0/21 on Switches S1 and S2 are the members of the MC-LAG.</p> <p>TS1—Ports xe-0/0/25 and x-0/0/26 are members of LAG <b>ae1</b>, configured in <b>trunk</b> interface mode, as <b>fcoe-trusted</b>, and with an MTU of <b>2180</b>. Ports xe-0/0/30, xe-0/0/31, xe-0/0/32, and xe-0/0/33 are configured in <b>trunk</b> interface mode, with an MTU of <b>2180</b>.</p> <p>TS2—Ports xe-0/0/25 and x-0/0/26 are members of LAG <b>ae1</b>, configured in <b>trunk</b> interface mode, as <b>fcoe-trusted</b>, and with an MTU of <b>2180</b>. Ports xe-0/0/30, xe-0/0/31, xe-0/0/32, and xe-0/0/33 are configured in <b>trunk</b> interface mode, with an MTU of <b>2180</b>.</p>
FCoE queue scheduler (all switches)	<p><b>fcoe-sched:</b> Minimum bandwidth <b>3g</b> Maximum bandwidth <b>100%</b> Priority <b>low</b></p>
Forwarding class-to-scheduler mapping (all switches)	<p>Scheduler map <b>fcoe-map</b>: Forwarding class <b>fcoe</b> Scheduler <b>fcoe-sched</b></p> <p><b>NOTE:</b> If you are using direct port scheduling,</p>
PFC congestion notification profile (all switches)	<p><b>fcoe-cnp:</b> Code point <b>011</b></p> <p>Ingress interfaces:</p> <ul style="list-style-type: none"> <li>• S1—LAG <b>ae0</b> and MC-LAG <b>ae1</b></li> <li>• S2—LAG <b>ae0</b> and MC-LAG <b>ae1</b></li> <li>• TS1—LAG <b>ae1</b>, interfaces <b>xe-0/0/30</b>, <b>xe-0/0/31</b>, <b>xe-0/0/32</b>, and <b>xe-0/0/33</b></li> <li>• TS2—LAG <b>ae1</b>, interfaces <b>xe-0/0/30</b>, <b>xe-0/0/31</b>, <b>xe-0/0/32</b>, and <b>xe-0/0/33</b></li> </ul>

**Table 72: Components of the CoS for FCoE Traffic Across an MC-LAG Configuration Topology** (*continued*)

Component	Settings
FCoE VLAN name and tag ID	<p>Name—<b>fcoe_vlan</b> ID—<b>100</b></p> <p>Include the FCoE VLAN on the interfaces that carry FCoE traffic on all four switches.</p>
ETS only—forwarding class set (FCoE priority group, all switches)	<p><b>fcoe-pg:</b> Forwarding class <b>fcoe</b></p> <p>Egress interfaces:</p> <ul style="list-style-type: none"> <li>• S1—LAG <b>ae0</b> and MC-LAG <b>ae1</b></li> <li>• S2—LAG <b>ae0</b> and MC-LAG <b>ae1</b></li> <li>• TS1—LAG <b>ae1</b>, interfaces <b>xe-0/0/30</b>, <b>xe-0/0/31</b>, <b>xe-0/0/32</b>, and <b>xe-0/0/33</b></li> <li>• TS2—LAG <b>ae1</b>, interfaces <b>xe-0/0/30</b>, <b>xe-0/0/31</b>, <b>xe-0/0/32</b>, and <b>xe-0/0/33</b></li> </ul>
ETS only—traffic control profile (all switches)	<p><b>fcoe-tcp:</b> Scheduler map <b>fcoe-map</b> Minimum bandwidth <b>3g</b> Maximum bandwidth <b>100%</b></p> <p>The traffic control profile is applied to the same interfaces as the forwarding class set, using the same CLI statement. This applies ETS hierarchical scheduling to the interfaces.</p>
Port scheduling only—apply scheduling to interfaces	<p>On switches that support direct port scheduling, if you use port scheduling, apply scheduling by attaching the scheduler map directly to interfaces:</p> <ul style="list-style-type: none"> <li>• S1—LAG <b>ae0</b> and MC-LAG <b>ae1</b></li> <li>• S2—LAG <b>ae0</b> and MC-LAG <b>ae1</b></li> <li>• TS1—LAG <b>ae1</b>, interfaces <b>xe-0/0/30</b>, <b>xe-0/0/31</b>, <b>xe-0/0/32</b>, and <b>xe-0/0/33</b></li> <li>• TS2—LAG <b>ae1</b>, interfaces <b>xe-0/0/30</b>, <b>xe-0/0/31</b>, <b>xe-0/0/32</b>, and <b>xe-0/0/33</b></li> </ul>
FIP snooping	<p>Enable FIP snooping on Transit Switches TS1 and TS2 on the FCoE VLAN. Configure the LAG interfaces that connect to the MC-LAG switches as FCoE trusted interfaces so that they do not perform FIP snooping.</p> <p>This example enables VN2VN_Port FIP snooping on the FCoE transit switch interfaces connected to the FCoE servers. The example is equally valid with VN2VF_Port FIP snooping enabled on the transit switch access ports. The method of FIP snooping you enable depends on your network configuration.</p> <p><b>NOTE:</b> Juniper Networks QFX10000 aggregation switches do not support FIP snooping, so they cannot be used as FIP snooping access switches (Transit Switches TS1 and TS2) in this example.</p>



**NOTE:** This example uses the default IEEE 802.1p trusted BA classifier, which is automatically applied to trunk mode interfaces if you do not apply an explicitly configured classifier.

To configure CoS for FCoE traffic across an MC-LAG:

- Use the default FCoE forwarding class and forwarding-class-to-queue mapping (do not explicitly configure the FCoE forwarding class or output queue). The default FCoE forwarding class is `fcoe`, and the default output queue is queue `3`.
- Use the default trusted BA classifier, which maps incoming packets to forwarding classes by the IEEE 802.1p code point (CoS priority) of the packet. The trusted classifier is the default classifier for interfaces in trunk interface mode. The default trusted classifier maps incoming packets with the IEEE 802.1p code point 3 (`011`) to the FCoE forwarding class. If you choose to configure the BA classifier instead of using the default classifier, you must ensure that FCoE traffic is classified into forwarding classes in exactly the same way on both MC-LAG switches. Using the default classifier ensures consistent classifier configuration on the MC-LAG ports.
- Configure a congestion notification profile that enables PFC on the FCoE code point (code point `011` in this example). The congestion notification profile configuration must be the same on both MC-LAG switches.
- Apply the congestion notification profile to the interfaces.
- Configure the interface mode, MTU, and FCoE trusted or untrusted state for each interface to support lossless FCoE transport.
- For ETS hierarchical port scheduling, configure ETS on the interfaces to provide the bandwidth required for lossless FCoE transport. Configuring ETS includes configuring bandwidth scheduling for the FCoE forwarding class, a forwarding class set (priority group) that includes the FCoE forwarding class, and a traffic control profile to assign bandwidth to the forwarding class set that includes FCoE traffic, and applying the traffic control profile and forwarding class set to interfaces..

On switches that support direct port scheduling, configure CoS properties on interfaces by applying scheduler maps directly to interfaces.

In addition, this example describes how to enable FIP snooping on the Transit Switch TS1 and TS2 ports that are connected to the FCoE servers. To provide secure access, FIP snooping must be enabled on the FCoE access ports.

This example focuses on the CoS configuration to support lossless FCoE transport across an MC-LAG. This example does not describe how to configure the properties of MC-LAGs and LAGs, although it does show you how to configure the port characteristics required to support lossless transport and how to assign interfaces to the MC-LAG and to the LAGs.

Before you configure CoS, configure:

- The MC-LAGs that connect Switches S1 and S2 to Switches TS1 and TS2. (*Example: Configuring Multichassis Link Aggregation* describes how to configure MC-LAGs.)

- The LAGs that connect the Transit Switches TS1 and TS2 to MC-LAG Switches S1 and S2. (*Configuring Link Aggregation* describes how to configure LAGs.)
- The LAG that connects Switch S1 to Switch S2.

## Configuration

To configure CoS for lossless FCoE transport across an MC-LAG, perform these tasks:

- [MC-LAG Switches S1 and S2 Common Configuration \(Applies to ETS and Port Scheduling\) on page 348](#)
- [MC-LAG Switches S1 and S2 ETS Hierarchical Scheduling Configuration on page 349](#)
- [MC-LAG Switches S1 and S2 Port Scheduling Configuration on page 350](#)
- [FCoE Transit Switches TS1 and TS2 Common Configuration \(Applies to ETS and Port Scheduling\) on page 350](#)
- [FCoE Transit Switches TS1 and TS2 ETS Hierarchical Scheduling Configuration on page 352](#)
- [FCoE Transit Switches TS1 and TS2 Port Scheduling Configuration on page 352](#)
- [Results on page 353](#)

### CLI Quick Configuration



**NOTE:** The CLI configurations for the MC-LAG switches and for the FCoE transit switches are each separated into three sections:

- Configuration common to all port scheduling methods
- Configuration specific to ETS hierarchical port scheduling
- Configuration specific to direct port scheduling

### MC-LAG Switch S1 and Switch S2

To quickly configure CoS for lossless FCoE transport across an MC-LAG, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI for MC-LAG Switch S1 and MC-LAG Switch S2 at the **[edit]** hierarchy level. The configurations on Switches S1 and S2 are identical because the CoS configuration must be identical, and because this example uses the same ports on both switches.

### MC-LAG Switches Configuration Common to ETS Hierarchical Port Scheduling and to Direct Port Scheduling

```
set class-of-service schedulers fcoe-sched priority low transmit-rate 3g
set class-of-service schedulers fcoe-sched shaping-rate percent 100
set class-of-service scheduler-maps fcoe-map forwarding-class fcoe scheduler fcoe-sched
set class-of-service congestion-notification-profile fcoe-cnp input ieee-802.1 code-point 011 pfc
set class-of-service interfaces ae0 congestion-notification-profile fcoe-cnp
set class-of-service interfaces ae1 congestion-notification-profile fcoe-cnp
set vlans fcoe_vlan vlan-id 100
set interfaces xe-0/0/10 ether-options 802.3ad ae0
set interfaces xe-0/0/11 ether-options 802.3ad ae0
set interfaces xe-0/0/20 ether-options 802.3ad ae1
set interfaces xe-0/0/21 ether-options 802.3ad ae1
set interfaces ae0 unit 0 family ethernet-switching interface-mode trunk vlan members fcoe_vlan
set interfaces ae1 unit 0 family ethernet-switching interface-mode trunk vlan members fcoe_vlan
```

```

set interfaces ae0 mtu 2180
set interfaces ae1 mtu 2180
set vlans fcoe_vlan forwarding-options fip-security interface ae0 fcoe-trusted
set vlans fcoe_vlan forwarding-options fip-security interface ae1 fcoe-trusted

```

### MC-LAG Switches Configuration for ETS Hierarchical Port Scheduling

```

set class-of-service forwarding-class-sets fcoe-pg class fcoe
set class-of-service traffic-control-profiles fcoe-tcp scheduler-map fcoe-map guaranteed-rate
3g
set class-of-service traffic-control-profiles fcoe-tcp shaping-rate percent 100
set class-of-service interfaces ae0 forwarding-class-set fcoe-pg output-traffic-control-profile
fcoe-tcp
set class-of-service interfaces ae1 forwarding-class-set fcoe-pg output-traffic-control-profile
fcoe-tcp

```

### MC-LAG Switches Configuration for Direct Port Scheduling

```

set class-of-service interfaces ae0 scheduler-map fcoe-map
set class-of-service interfaces ae1 scheduler-map fcoe-map

```

#### FCoE Transit Switch TS1 and Switch TS2

To quickly configure CoS for lossless FCoE transport across an MC-LAG, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI for Transit Switch TS1 and Transit Switch TS2 at the **[edit]** hierarchy level. The configurations on Switches TS1 and TS2 are identical because the CoS configuration must be identical, and because this example uses the same ports on both switches.

### FCoE Transit Switches Configuration Common to ETS Hierarchical Port Scheduling and to Direct Port Scheduling

```

set class-of-service schedulers fcoe-sched priority low transmit-rate 3g
set class-of-service schedulers fcoe-sched shaping-rate percent 100
set class-of-service scheduler-maps fcoe-map forwarding-class fcoe scheduler fcoe-sched
set class-of-service congestion-notification-profile fcoe-cnp input ieee-802.1 code-point 011 pfc
set class-of-service interfaces ae1 congestion-notification-profile fcoe-cnp
set class-of-service interfaces xe-0/0/30 congestion-notification-profile fcoe-cnp
set class-of-service interfaces xe-0/0/31 congestion-notification-profile fcoe-cnp
set class-of-service interfaces xe-0/0/32 congestion-notification-profile fcoe-cnp
set class-of-service interfaces xe-0/0/33 congestion-notification-profile fcoe-cnp
set vlans fcoe_vlan vlan-id 100
set interfaces xe-0/0/25 ether-options 802.3ad ae1
set interfaces xe-0/0/26 ether-options 802.3ad ae1
set interfaces ae1 unit 0 family ethernet-switching interface-mode trunk vlan members fcoe_vlan
set interfaces xe-0/0/30 unit 0 family ethernet-switching interface-mode trunk vlan members
fcoe_vlan
set interfaces xe-0/0/31 unit 0 family ethernet-switching interface-mode trunk vlan members
fcoe_vlan
set interfaces xe-0/0/32 unit 0 family ethernet-switching interface-mode trunk vlan members
fcoe_vlan
set interfaces xe-0/0/33 unit 0 family ethernet-switching interface-mode trunk vlan members
fcoe_vlan
set interfaces ae1 mtu 2180
set interfaces xe-0/0/30 mtu 2180
set interfaces xe-0/0/31 mtu 2180
set interfaces xe-0/0/32 mtu 2180
set interfaces xe-0/0/33 mtu 2180
set vlans fcoe_vlan forwarding-options fip-security interface ae1 fcoe-trusted
set vlans fcoe_vlan forwarding-options fip-security examine-vn2v2 beacon-period 90000

```

### FCoE Transit Switches Configuration for ETS Hierarchical Port Scheduling

```
set class-of-service forwarding-class-sets fcoe-pg class fcoe
set class-of-service traffic-control-profiles fcoe-tcp scheduler-map fcoe-map guaranteed-rate
3g
set class-of-service traffic-control-profiles fcoe-tcp shaping-rate percent 100
set class-of-service interfaces ae1 forwarding-class-set fcoe-pg output-traffic-control-profile
fcoe-tcp
set class-of-service interfaces xe-0/0/30 forwarding-class-set fcoe-pg
output-traffic-control-profile fcoe-tcp
set class-of-service interfaces xe-0/0/31 forwarding-class-set fcoe-pg
output-traffic-control-profile fcoe-tcp
set class-of-service interfaces xe-0/0/32 forwarding-class-set fcoe-pg
output-traffic-control-profile fcoe-tcp
set class-of-service interfaces xe-0/0/33 forwarding-class-set fcoe-pg
output-traffic-control-profile fcoe-tcp
```

### FCoE Transit Switches Configuration for Direct Port Scheduling

```
set class-of-service interfaces ae1 scheduler-map fcoe-map
set class-of-service interfaces xe-0/0/30 scheduler-map fcoe-map
set class-of-service interfaces xe-0/0/31 scheduler-map fcoe-map
set class-of-service interfaces xe-0/0/32 scheduler-map fcoe-map
set class-of-service interfaces xe-0/0/33 scheduler-map fcoe-map
```

### MC-LAG Switches S1 and S2 Common Configuration (Applies to ETS and Port Scheduling)

---

#### Step-by-Step Procedure

To configure queue scheduling, PFC, the FCoE VLAN, and LAG and MC-LAG interface membership and characteristics to support lossless FCoE transport across an MC-LAG (this example uses the default **fcoe** forwarding class and the default classifier to map incoming FCoE traffic to the FCoE IEEE 802.1p code point **011**), for both ETS hierarchical port scheduling and port scheduling (common configuration):

1. Configure output scheduling for the FCoE queue:  

```
[edit class-of-service]
user@switch# set schedulers fcoe-sched priority low transmit-rate 3g
user@switch# set schedulers fcoe-sched shaping-rate percent 100
```
2. Map the FCoE forwarding class to the FCoE scheduler (**fcoe-sched**):  

```
[edit class-of-service]
user@switch# set scheduler-maps fcoe-map forwarding-class fcoe scheduler fcoe-sched
```
3. Enable PFC on the FCoE priority by creating a congestion notification profile (**fcoe-cnp**) that applies FCoE to the IEEE 802.1 code point **011**:  

```
[edit class-of-service]
user@switch# set congestion-notification-profile fcoe-cnp input ieee-802.1 code-point
011 pfc
```
4. Apply the PFC configuration to the LAG and MC-LAG interfaces:  

```
[edit class-of-service]
user@switch# set interfaces ae0 congestion-notification-profile fcoe-cnp
user@switch# set interfaces ae1 congestion-notification-profile fcoe-cnp
```
5. Configure the VLAN for FCoE traffic (**fcoe\_vlan**):

- ```
[edit vlans]
user@switch# set fcoe_vlan vlan-id 100
```
6. Add the member interfaces to the LAG between the two MC-LAG switches:
 

```
[edit interfaces]
user@switch# set xe-0/0/10 ether-options 802.3ad ae0
user@switch# set xe-0/0/11 ether-options 802.3ad ae0
```
  7. Add the member interfaces to the MC-LAG:
 

```
[edit interfaces]
user@switch# set xe-0/0/20 ether-options 802.3ad ae1
user@switch# set xe-0/0/21 ether-options 802.3ad ae1
```
  8. Configure the interface mode as **trunk** and membership in the FCoE VLAN (**fcoe\_vlan**) for the LAG (**ae0**) and for the MC-LAG (**ae1**):
 

```
[edit interfaces]
user@switch# set interfaces ae0 unit 0 family ethernet-switching interface-mode trunk
vlan members fcoe_vlan
user@switch# set interfaces ae1 unit 0 family ethernet-switching interface-mode trunk
vlan members fcoe_vlan
```
  9. Set the MTU to **2180** for the LAG and MC-LAG interfaces. 2180 bytes is the minimum size required to handle FCoE packets because of the payload and header sizes; you can configure the MTU to a higher number of bytes if desired, but not less than 2180 bytes:
 

```
[edit interfaces]
user@switch# set ae0 mtu 2180
user@switch# set ae1 mtu 2180
```
  10. Set the LAG and MC-LAG interfaces as FCoE trusted ports. Ports that connect to other switches should be trusted and should not perform FIP snooping:
 

```
[edit]
user@switch# set vlans fcoe_vlan forwarding-options fip-security interface ae0 fcoe-trusted
user@switch# set vlans fcoe_vlan forwarding-options fip-security interface ae1 fcoe-trusted
```

### MC-LAG Switches S1 and S2 ETS Hierarchical Scheduling Configuration

#### Step-by-Step Procedure

To configure the forwarding class set (priority group) and priority group scheduling (in a traffic control profile), and apply the ETS hierarchical scheduling for FCoE traffic to interfaces:

1. Configure the forwarding class set (**fcoe-pg**) for the FCoE traffic:
 

```
[edit class-of-service]
user@switch# set forwarding-class-sets fcoe-pg class fcoe
```
2. Define the traffic control profile (**fcoe-tcp**) to use on the FCoE forwarding class set:
 

```
[edit class-of-service]
user@switch# set traffic-control-profiles fcoe-tcp scheduler-map fcoe-map
guaranteed-rate 3g
user@switch# set traffic-control-profiles fcoe-tcp shaping-rate percent 100
```
3. Apply the FCoE forwarding class set and traffic control profile to the LAG and MC-LAG interfaces:
 

```
[edit class-of-service]
```

```

user@switch# set interfaces ae0 forwarding-class-set fcoe-pg output-traffic-control-profile
fcoe-tcp
user@switch# set interfaces ae1 forwarding-class-set fcoe-pg output-traffic-control-profile
fcoe-tcp

```

### MC-LAG Switches S1 and S2 Port Scheduling Configuration

#### Step-by-Step Procedure

To apply port scheduling for FCoE traffic to interfaces:

1. Apply the scheduler map to the egress ports:

```

set class-of-service interfaces ae0 scheduler-map fcoe-map
set class-of-service interfaces ae1 scheduler-map fcoe-map

```

### FCoE Transit Switches TS1 and TS2 Common Configuration (Applies to ETS and Port Scheduling)

#### Step-by-Step Procedure

The CoS configuration on FCoE Transit Switches TS1 and TS2 is similar to the CoS configuration on MC-LAG Switches S1 and S2. However, the port configurations differ, and you must enable FIP snooping on the Switch TS1 and Switch TS2 FCoE access ports.

To configure queue scheduling, PFC, the FCoE VLAN, and LAG interface membership and characteristics to support lossless FCoE transport across the MC-LAG (this example uses the default **fcoe** forwarding class and the default classifier to map incoming FCoE traffic to the FCoE IEEE 802.1p code point 011, so you do not configure them), or both ETS hierarchical scheduling and port scheduling (common configuration):

1. Configure output scheduling for the FCoE queue:

```

[edit class-of-service]
user@switch# set schedulers fcoe-sched priority low transmit-rate 3g
user@switch# set schedulers fcoe-sched shaping-rate percent 100

```

2. Map the FCoE forwarding class to the FCoE scheduler (**fcoe-sched**):

```

[edit class-of-service]
user@switch# set scheduler-maps fcoe-map forwarding-class fcoe scheduler fcoe-sched

```

3. Enable PFC on the FCoE priority by creating a congestion notification profile (**fcoe-cnp**) that applies FCoE to the IEEE 802.1 code point 011:

```

[edit class-of-service]
user@switch# set congestion-notification-profile fcoe-cnp input ieee-802.1 code-point
011 pfc

```

4. Apply the PFC configuration to the LAG interface and to the FCoE access interfaces:

```

[edit class-of-service]
user@switch# set interfaces ae1 congestion-notification-profile fcoe-cnp
user@switch# set class-of-service interfaces xe-0/0/30 congestion-notification-profile
fcoe-cnp
user@switch# set class-of-service interfaces xe-0/0/31 congestion-notification-profile
fcoe-cnp
user@switch# set class-of-service interfaces xe-0/0/32 congestion-notification-profile
fcoe-cnp
user@switch# set class-of-service interfaces xe-0/0/33 congestion-notification-profile
fcoe-cnp

```

5. Configure the VLAN for FCoE traffic (**fcoe\_vlan**):




- ```
[edit vlans]
user@switch# set fcoe_vlan vlan-id 100
```
6. Add the member interfaces to the LAG:
 

```
[edit interfaces]
user@switch# set xe-0/0/25 ether-options 802.3ad ae1
user@switch# set xe-0/0/26 ether-options 802.3ad ae1
```
  7. On the LAG (**ae1**), configure the interface mode as **trunk** and membership in the FCoE VLAN (**fcoe\_vlan**):
 

```
[edit interfaces]
user@switch# set interfaces ae1 unit 0 family ethernet-switching interface-mode trunk
vlan members fcoe_vlan
```
  8. On the FCoE access interfaces (**xe-0/0/30**, **xe-0/0/31**, **xe-0/0/32**, **xe-0/0/33**), configure the interface mode as **trunk** and membership in the FCoE VLAN (**fcoe\_vlan**):
 

```
[edit interfaces]
user@switch# set interfaces xe-0/0/30 unit 0 family ethernet-switching interface-mode trunk
vlan members fcoe_vlan
user@switch# set interfaces xe-0/0/31 unit 0 family ethernet-switching interface-mode trunk
vlan members fcoe_vlan
user@switch# set interfaces xe-0/0/32 unit 0 family ethernet-switching interface-mode trunk
vlan members fcoe_vlan
user@switch# set interfaces xe-0/0/33 unit 0 family ethernet-switching interface-mode trunk
vlan members fcoe_vlan
```
  9. Set the MTU to **2180** for the LAG and FCoE access interfaces. 2180 bytes is the minimum size required to handle FCoE packets because of the payload and header sizes; you can configure the MTU to a higher number of bytes if desired, but not less than 2180 bytes:
 

```
[edit interfaces]
user@switch# set ae1 mtu 2180
user@switch# set xe-0/0/30 mtu 2180
user@switch# set xe-0/0/31 mtu 2180
user@switch# set xe-0/0/32 mtu 2180
user@switch# set xe-0/0/33 mtu 2180
```
  10. Set the LAG interface as an FCoE trusted port. Ports that connect to other switches should be trusted and should not perform FIP snooping:
 

```
[edit]
user@switch# set vlans fcoe_vlan forwarding-options fip-security interface ae1 fcoe-trusted
```
- 

**NOTE:** Access ports **xe-0/0/30**, **xe-0/0/31**, **xe-0/0/32**, and **xe-0/0/33** are not configured as FCoE trusted ports. The access ports remain in the default state as untrusted ports because they connect directly to FCoE devices and must perform FIP snooping to ensure network security.
11. Enable FIP snooping on the FCoE VLAN to prevent unauthorized FCoE network access (this example uses **VN2VN\_Port** FIP snooping; the example is equally valid if you use **VN2VF\_Port** FIP snooping):
 

```
[edit]
```

```
user@switch# set vlans fcoe_vlan forwarding-options fip-security examine-vn2vn
beacon-period 90000
```



**NOTE:** QFX10000 switches do not support FIP snooping and cannot be used as FCoE access transit switches. (QFX10000 switches can be used as FCoE aggregation switches.)

### FCoE Transit Switches TS1 and TS2 ETS Hierarchical Scheduling Configuration

#### Step-by-Step Procedure

To configure the forwarding class set (priority group) and priority group scheduling (in a traffic control profile), and apply the ETS hierarchical scheduling for FCoE traffic to interfaces:

1. Configure the forwarding class set (**fcoe-pg**) for the FCoE traffic:
 

```
[edit class-of-service]
user@switch# set forwarding-class-sets fcoe-pg class fcoe
```
2. Define the traffic control profile (**fcoe-tcp**) to use on the FCoE forwarding class set:
 

```
[edit class-of-service]
user@switch# set traffic-control-profiles fcoe-tcp scheduler-map fcoe-map
guaranteed-rate 3g
user@switch# set traffic-control-profiles fcoe-tcp shaping-rate percent 100
```
3. Apply the FCoE forwarding class set and traffic control profile to the LAG interface and to the FCoE access interfaces:
 

```
[edit class-of-service]
user@switch# set interfaces ae1 forwarding-class-set fcoe-pg output-traffic-control-profile fcoe-tcp
user@switch# set class-of-service interfaces xe-0/0/30 forwarding-class-set fcoe-pg output-traffic-control-profile fcoe-tcp
user@switch# set class-of-service interfaces xe-0/0/31 forwarding-class-set fcoe-pg output-traffic-control-profile fcoe-tcp
user@switch# set class-of-service interfaces xe-0/0/32 forwarding-class-set fcoe-pg output-traffic-control-profile fcoe-tcp
user@switch# set class-of-service interfaces xe-0/0/33 forwarding-class-set fcoe-pg output-traffic-control-profile fcoe-tcp
```

### FCoE Transit Switches TS1 and TS2 Port Scheduling Configuration

#### Step-by-Step Procedure

To apply port scheduling for FCoE traffic to interfaces:

1. Apply the scheduler map to the egress ports:
 

```
user@switch# set class-of-service interfaces ae1 scheduler-map fcoe-map
user@switch# set class-of-service interfaces xe-0/0/30 scheduler-map fcoe-map
user@switch# set class-of-service interfaces xe-0/0/31 scheduler-map fcoe-map
user@switch# set class-of-service interfaces xe-0/0/32 scheduler-map fcoe-map
user@switch# set class-of-service interfaces xe-0/0/33 scheduler-map fcoe-map
```

## Results

Display the results of the CoS configuration on MC-LAG Switch S1 and on MC-LAG Switch S2 (the results on both switches are the same). The results are from the ETS hierarchical scheduling configuration, which shows the more complex configuration. Direct port scheduling results would not show the traffic control profile or forwarding class set portions of the configuration, but would display the name of the scheduler map under each interface (instead of the names of the forwarding class set and output traffic control profile). Other than that, they are the same.

```
user@switch> show configuration class-of-service
traffic-control-profiles {
  fcoe-tcp {
    scheduler-map fcoe-map;
    shaping-rate percent 100;
    guaranteed-rate 3000000000;
  }
}
forwarding-class-sets {
  fcoe-pg {
    class fcoe;
  }
}
congestion-notification-profile {
  fcoe-cnp {
    input {
      ieee-802.1 {
        code-point 011 {
          pfc;
        }
      }
    }
  }
}
interfaces {
  ae0 {
    forwarding-class-set {
      fcoe-pg {
        output-traffic-control-profile fcoe-tcp;
      }
    }
    congestion-notification-profile fcoe-cnp;
  }
  ae1 {
    forwarding-class-set {
      fcoe-pg {
        output-traffic-control-profile fcoe-tcp;
      }
    }
    congestion-notification-profile fcoe-cnp;
  }
}
scheduler-maps {
  fcoe-map {
```

```

        forwarding-class fcoe scheduler fcoe-sched;
    }
}
schedulers {
    fcoe-sched {
        transmit-rate 3000000000;
        shaping-rate percent 100;
        priority low;
    }
}

```



**NOTE:** The forwarding class and classifier configurations are not shown because the show command does not display default portions of the configuration.

For MC-LAG verification commands, see *Example: Configuring Multichassis Link Aggregation*.

Display the results of the CoS configuration on FCoE Transit Switch TS1 and on FCoE Transit Switch TS2 (the results on both transit switches are the same). The results are from the ETS hierarchical port scheduling configuration, which shows the more complex configuration. Direct port scheduling results would not show the traffic control profile or forwarding class set portions of the configuration, but would display the name of the scheduler map under each interface (instead of the names of the forwarding class set and output traffic control profile). Other than that, they are the same.

```

user@switch> show configuration class-of-service
traffic-control-profiles {
    fcoe-tcp {
        scheduler-map fcoe-map;
        shaping-rate percent 100;
        guaranteed-rate 3000000000;
    }
}
forwarding-class-sets {
    fcoe-pg {
        class fcoe;
    }
}
congestion-notification-profile {
    fcoe-cnp {
        input {
            ieee-802.1 {
                code-point 011 {
                    pfc;
                }
            }
        }
    }
}
}
interfaces {
    xe-0/0/30 {

```

```

    forwarding-class-set {
        fcoe-pg {
            output-traffic-control-profile fcoe-tcp;
        }
    }
    congestion-notification-profile fcoe-cnp;
}
xe-0/0/31 {
    forwarding-class-set {
        fcoe-pg {
            output-traffic-control-profile fcoe-tcp;
        }
    }
    congestion-notification-profile fcoe-cnp;
}
xe-0/0/32 {
    forwarding-class-set {
        fcoe-pg {
            output-traffic-control-profile fcoe-tcp;
        }
    }
    congestion-notification-profile fcoe-cnp;
}
xe-0/0/33 {
    forwarding-class-set {
        fcoe-pg {
            output-traffic-control-profile fcoe-tcp;
        }
    }
    congestion-notification-profile fcoe-cnp;
}
ae1 {
    forwarding-class-set {
        fcoe-pg {
            output-traffic-control-profile fcoe-tcp;
        }
    }
    congestion-notification-profile fcoe-cnp;
}
}
scheduler-maps {
    fcoe-map {
        forwarding-class fcoe scheduler fcoe-sched;
    }
}
schedulers {
    fcoe-sched {
        transmit-rate 3000000000;
        shaping-rate percent 100;
        priority low;
    }
}
}

```



**NOTE:** The forwarding class and classifier configurations are not shown because the `show` command does not display default portions of the configuration.

## Verification

To verify that the CoS components and FIP snooping have been configured and are operating properly, perform these tasks. Because this example uses the default `fcoe` forwarding class and the default IEEE 802.1p trusted classifier, the verification of those configurations is not shown:

- [Verifying That the Output Queue Schedulers Have Been Created on page 356](#)
- [Verifying That the Priority Group Output Scheduler \(Traffic Control Profile\) Has Been Created \(ETS Configuration Only\) on page 357](#)
- [Verifying That the Forwarding Class Set \(Priority Group\) Has Been Created \(ETS Configuration Only\) on page 357](#)
- [Verifying That Priority-Based Flow Control Has Been Enabled on page 358](#)
- [Verifying That the Interface Class of Service Configuration Has Been Created on page 359](#)
- [Verifying That the Interfaces Are Correctly Configured on page 361](#)
- [Verifying That FIP Snooping Is Enabled on the FCoE VLAN on FCoE Transit Switches TS1 and TS2 Access Interfaces on page 363](#)
- [Verifying That the FIP Snooping Mode Is Correct on FCoE Transit Switches TS1 and TS2 on page 364](#)

### Verifying That the Output Queue Schedulers Have Been Created

**Purpose** Verify that the output queue scheduler for FCoE traffic has the correct bandwidth parameters and priorities, and is mapped to the correct forwarding class (output queue). Queue scheduler verification is the same on each of the four switches.

**Action** List the scheduler map using the operational mode command `show class-of-service scheduler-map fcoe-map`:

```
user@switch> show class-of-service scheduler-map fcoe-map
Scheduler map: fcoe-map, Index: 9023
```

```
Scheduler: fcoe-sched, Forwarding class: fcoe, Index: 37289
Transmit rate: 3000000000 bps, Rate Limit: none, Buffer size: remainder,
Buffer Limit: none, Priority: low
Excess Priority: unspecified
Shaping rate: 100 percent,
drop-profile-map-set-type: mark
Drop profiles:
  Loss priority  Protocol  Index  Name
  Low           any       1      <default-drop-profile>
  Medium high   any       1      <default-drop-profile>
  High          any       1      <default-drop-profile>
```

**Meaning** The `show class-of-service scheduler-map fcoe-map` command lists the properties of the scheduler map `fcoe-map`. The command output includes:

- The name of the scheduler map (`fcoe-map`)
- The name of the scheduler (`fcoe-sched`)
- The forwarding classes mapped to the scheduler (`fcoe`)
- The minimum guaranteed queue bandwidth (transmit rate **3000000000 bps**)
- The scheduling priority (`low`)
- The maximum bandwidth in the priority group the queue can consume (shaping rate **100 percent**)
- The drop profile loss priority for each drop profile name. This example does not include drop profiles because you do not apply drop profiles to FCoE traffic.

#### Verifying That the Priority Group Output Scheduler (Traffic Control Profile) Has Been Created (ETS Configuration Only)

**Purpose** Verify that the traffic control profile `fcoe-tcp` has been created with the correct bandwidth parameters and scheduler mapping. Priority group scheduler verification is the same on each of the four switches.

**Action** List the FCoE traffic control profile properties using the operational mode command `show class-of-service traffic-control-profile fcoe-tcp`:

```
user@switch> show class-of-service traffic-control-profile fcoe-tcp
Traffic control profile: fcoe-tcp, Index: 18303
  Shaping rate: 100 percent
  Scheduler map: fcoe-map
  Guaranteed rate: 3000000000
```

**Meaning** The `show class-of-service traffic-control-profile fcoe-tcp` command lists all of the configured traffic control profiles. For each traffic control profile, the command output includes:

- The name of the traffic control profile (`fcoe-tcp`)
- The maximum port bandwidth the priority group can consume (shaping rate **100 percent**)
- The scheduler map associated with the traffic control profile (`fcoe-map`)
- The minimum guaranteed priority group port bandwidth (guaranteed rate **3000000000** in bps)

#### Verifying That the Forwarding Class Set (Priority Group) Has Been Created (ETS Configuration Only)

**Purpose** Verify that the FCoE priority group has been created and that the `fcoe` priority (forwarding class) belongs to the FCoE priority group. Forwarding class set verification is the same on each of the four switches.

**Action** List the forwarding class sets using the operational mode command **show class-of-service forwarding-class-set fcoe-pg**:

```
user@switch> show class-of-service forwarding-class-set fcoe-pg
Forwarding class set: fcoe-pg, Type: normal-type, Forwarding class set index:
31420
  Forwarding class          Index
  fcoe                      1
```

**Meaning** The **show class-of-service forwarding-class-set fcoe-pg** command lists all of the forwarding classes (priorities) that belong to the **fcoe-pg** priority group, and the internal index number of the priority group. The command output shows that the forwarding class set **fcoe-pg** includes the forwarding class **fcoe**.

### Verifying That Priority-Based Flow Control Has Been Enabled

**Purpose** Verify that PFC is enabled on the FCoE code point. PFC verification is the same on each of the four switches.

**Action** List the FCoE congestion notification profile using the operational mode command **show class-of-service congestion-notification fcoe-cnp**:

```
user@switch> show class-of-service congestion-notification fcoe-cnp
Type: Input, Name: fcoe-cnp, Index: 6879
Cable Length: 100 m
  Priority    PFC          MRU
  000        Disabled
  001        Disabled
  010        Disabled
  011        Enabled    2500
  100        Disabled
  101        Disabled
  110        Disabled
  111        Disabled
Type: Output
  Priority    Flow-Control-Queues
  000
  001        0
  010        1
  011        2
  100        3
  101        4
  110        5
  111        6
          7
```

**Meaning** The **show class-of-service congestion-notification fcoe-cnp** command lists all of the IEEE 802.1p code points in the congestion notification profile that have PFC enabled. The command output shows that PFC is enabled on code point **011** (**fcoe** queue) for the **fcoe-cnp** congestion notification profile.



The command also shows the default cable length (100 meters), the default maximum receive unit (2500 bytes), and the default mapping of priorities to output queues because this example does not include configuring these options.

### Verifying That the Interface Class of Service Configuration Has Been Created

**Purpose** Verify that the CoS properties of the interfaces are correct. The verification output on MC-LAG Switches S1 and S2 differs from the output on FCoE Transit Switches TS1 and TS2.



**NOTE:** The output is from the ETS hierarchical port scheduling configuration to show the more complex configuration. Direct port scheduling results do not show the traffic control profile or forwarding class sets because those elements are configured only for ETS. Instead, the name of the scheduler map is displayed under each interface.

**Action** List the interface CoS configuration on MC-LAG Switches S1 and S2 using the operational mode command **show configuration class-of-service interfaces**:

```
user@switch> show configuration class-of-service interfaces
ae0 {
    forwarding-class-set {
        fcoe-pg {
            output-traffic-control-profile fcoe-tcp;
        }
    }
    congestion-notification-profile fcoe-cnp;
}

ae1 {
    forwarding-class-set {
        fcoe-pg {
            output-traffic-control-profile fcoe-tcp;
        }
    }
    congestion-notification-profile fcoe-cnp;
}
```

List the interface CoS configuration on FCoE Transit Switches TS1 and TS2 using the operational mode command **show configuration class-of-service interfaces**:

```
user@switch> show configuration class-of-service interfaces
xe-0/0/30 {
    forwarding-class-set {
        fcoe-pg {
            output-traffic-control-profile fcoe-tcp;
        }
    }
    congestion-notification-profile fcoe-cnp;
}
xe-0/0/31 {
    forwarding-class-set {
        fcoe-pg {
```

```

        output-traffic-control-profile fcoe-tcp;
    }
}
congestion-notification-profile fcoe-cnp;
}
xe-0/0/32 {
    forwarding-class-set {
        fcoe-pg {
            output-traffic-control-profile fcoe-tcp;
        }
    }
    congestion-notification-profile fcoe-cnp;
}
xe-0/0/33 {
    forwarding-class-set {
        fcoe-pg {
            output-traffic-control-profile fcoe-tcp;
        }
    }
    congestion-notification-profile fcoe-cnp;
}
ae1 {
    forwarding-class-set {
        fcoe-pg {
            output-traffic-control-profile fcoe-tcp;
        }
    }
    congestion-notification-profile fcoe-cnp;
}

```

**Meaning** The **show configuration class-of-service interfaces** command lists the class of service configuration for all interfaces. For each interface, the command output includes:

- The name of the interface (for example, **ae0** or **xe-0/0/30**)
- The name of the forwarding class set associated with the interface (**fcoe-pg**)
- The name of the traffic control profile associated with the interface (output traffic control profile, **fcoe-tcp**)
- The name of the congestion notification profile associated with the interface (**fcoe-cnp**)



**NOTE:** Interfaces that are members of a LAG are not shown individually. The LAG or MC-LAG CoS configuration is applied to all interfaces that are members of the LAG or MC-LAG. For example, the interface CoS configuration output on MC-LAG Switches S1 and S2 shows the LAG CoS configuration but does not show the CoS configuration of the member interfaces separately. The interface CoS configuration output on FCoE Transit Switches TS1 and TS2 shows the LAG CoS configuration but also shows the configuration for interfaces xe-0/0/30, xe-0/0/31, xe-0/0/32, and xe-0/0/33, which are not members of a LAG.

### Verifying That the Interfaces Are Correctly Configured

**Purpose** Verify that the LAG membership, MTU, VLAN membership, and port mode of the interfaces are correct. The verification output on MC-LAG Switches S1 and S2 differs from the output on FCoE Transit Switches T1 and T2.

**Action** List the interface configuration on MC-LAG Switches S1 and S2 using the operational mode command **show configuration interfaces**:

```
user@switch> show configuration interfaces
xe-0/0/10 {
    ether-options {
        802.3ad ae0;
    }
}
xe-0/0/11 {
    ether-options {
        802.3ad ae0;
    }
}
xe-0/0/20 {
    ether-options {
        802.3ad ae1;
    }
}
xe-0/0/21 {
    ether-options {
        802.3ad ae1;
    }
}
ae0 {
    mtu 2180;
    unit 0 {
        family ethernet-switching {
            interface-mode trunk;
            vlan {
                members fcoe_vlan;
            }
        }
    }
}
ae1 {
    mtu 2180;
    unit 0 {
        family ethernet-switching {
            interface-mode trunk;
            vlan {
                members fcoe_vlan;
            }
        }
    }
}
```

List the interface configuration on FCoE Transit Switches TS1 and TS2 using the operational mode command **show configuration interfaces**:

```
user@switch> show configuration interfaces
```

```
xe-0/0/25 {
  ether-options {
    802.3ad ae1;
  }
}
xe-0/0/26 {
  ether-options {
    802.3ad ae1;
  }
}
xe-0/0/30 {
  mtu 2180;
  unit 0 {
    family ethernet-switching {
      interface-mode trunk;
      vlan {
        members fcoe_vlan;
      }
    }
  }
}
xe-0/0/31 {
  mtu 2180;
  unit 0 {
    family ethernet-switching {
      interface-mode trunk;
      vlan {
        members fcoe_vlan;
      }
    }
  }
}
xe-0/0/32 {
  mtu 2180;
  unit 0 {
    family ethernet-switching {
      interface-mode trunk;
      vlan {
        members fcoe_vlan;
      }
    }
  }
}
xe-0/0/33 {
  mtu 2180;
  unit 0 {
    family ethernet-switching {
      interface-mode trunk;
      vlan {
        members fcoe_vlan;
      }
    }
  }
}
ae1 {
  mtu 2180;
  unit 0 {
    family ethernet-switching {
      interface-mode trunk;
      vlan {
```

```

        members fcoe_vlan;
    }
}
}

```

**Meaning** The **show configuration interfaces** command lists the configuration of each interface by interface name.

For each interface that is a member of a LAG, the command lists only the name of the LAG to which the interface belongs.

For each LAG interface and for each interface that is not a member of a LAG, the command output includes:

- The MTU (**2180**)
- The unit number of the interface (**0**)
- The interface mode (**trunk** mode both for interfaces that connect two switches and for interfaces that connect to FCoE hosts)
- The name of the VLAN in which the interface is a member (**fcoe\_vlan**)

#### Verifying That FIP Snooping Is Enabled on the FCoE VLAN on FCoE Transit Switches TS1 and TS2 Access Interfaces

**Purpose** Verify that FIP snooping is enabled on the FCoE VLAN access interfaces. FIP snooping is enabled only on the FCoE access interfaces, so it is enabled only on FCoE Transit Switches TS1 and TS2. FIP snooping is not enabled on MC-LAG Switches S1 and S2 because FIP snooping is done at the Transit Switch TS1 and TS2 FCoE access ports.

**Action** List the port security configuration on FCoE Transit Switches TS1 and TS2 using the operational mode command **show configuration vlans fcoe\_vlan forwarding-options fip-security**:

```

user@switch> show configuration vlans fcoe_vlan forwarding-options fip-security
interface ae1.0 {
    fcoe-trusted;
}
examine-vn2vn {
    beacon-period 90000;
}

```

**Meaning** The **show configuration vlans fcoe\_vlan forwarding-options fip-security** command lists VLAN FIP security information, including whether a port member of the VLAN is trusted. The command output shows that:

- LAG port **ae1.0**, which connects the FCoE transit switch to the MC-LAG switches, is configured as an FCoE trusted interface. FIP snooping is not performed on the member interfaces of the LAG (**xe-0/0/25** and **xe-0/0/26**).
- VN2VN\_Port FIP snooping is enabled (**examine-vn2vn**) on the FCoE VLAN and the beacon period is set to 90000 milliseconds. On Transit Switches TS1 and TS2, all

interface members of the FCoE VLAN perform FIP snooping unless the interface is configured as FCoE trusted. On Transit Switches TS1 and TS2, interfaces **xe-0/0/30**, **xe-0/0/31**, **xe-0/0/32**, and **xe-0/0/33** perform FIP snooping because they are not configured as FCoE trusted. The interface members of LAG **ae1** (**xe-0/0/25** and **xe-0/0/26**) do not perform FIP snooping because the LAG is configured as FCoE trusted.

### Verifying That the FIP Snooping Mode Is Correct on FCoE Transit Switches TS1 and TS2

---

**Purpose** Verify that the FIP snooping mode is correct on the FCoE VLAN. FIP snooping is enabled only on the FCoE access interfaces, so it is enabled only on FCoE Transit Switches TS1 and TS2. FIP snooping is not enabled on MC-LAG Switches S1 and S2 because FIP snooping is done at the Transit Switch TS1 and TS2 FCoE access ports.

**Action** List the FIP snooping configuration on FCoE Transit Switches TS1 and TS2 using the operational mode command **show fip snooping brief**:

```
user@switch> show fip snooping brief
VLAN: fcoe_vlan,      Mode: VN2VN Snooping
FC-MAP: 0e:fc:00
...
```



**NOTE:** The output has been truncated to show only the relevant information.

---

**Meaning** The **show fip snooping brief** command lists FIP snooping information, including the FIP snooping VLAN and the FIP snooping mode. The command output shows that:

- The VLAN on which FIP snooping is enabled is **fcoe\_vlan**
- The FIP snooping mode is VN2VN\_Port FIP snooping (**VN2VN Snooping**)

**Related  
Documentation**

- *Example: Configuring Multichassis Link Aggregation*
- *Configuring Link Aggregation*
- [Example: Configuring CoS PFC for FCoE Traffic on page 304](#)
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Queue Schedulers for Port Scheduling on page 140](#)
- *Understanding Multichassis Link Aggregation*
- *Understanding MC-LAGs on an FCoE Transit Switch*

## Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic (FCoE Transit Switch)

The default system configuration supports FCoE traffic on priority 3 (IEEE 802.1p code point 011). If the FCoE traffic on your converged Ethernet network uses priority 3, the only user configuration required for lossless transport is to enable PFC on code point 011 on the FCoE ingress interfaces.

However, if your network uses a different priority than 3 for FCoE traffic, you need to configure lossless FCoE transport on that priority. This example shows you how to configure lossless FCoE transport on a converged Ethernet network that uses priority 5 (IEEE 802.1p code point 101) for FCoE traffic instead of using priority 3.

- [Requirements on page 365](#)
- [Overview on page 365](#)
- [Configuration on page 367](#)
- [Verification on page 369](#)

### Requirements

This example uses the following hardware and software components:

- One switch used as an FCoE transit switch
- Junos OS Release 12.3 or later for the QFX Series

### Overview

Although FCoE traffic typically uses IEEE 802.1p priority 3 on converged Ethernet networks, some networks use a different priority for FCoE traffic. Regardless of the priority used, FCoE traffic must receive lossless treatment. Supporting lossless behavior for FCoE traffic when your network does not use priority 3 requires configuring:

- A lossless forwarding class for FCoE traffic.
- A behavior aggregate (BA) classifier to map the FCoE forwarding class to the appropriate IEEE 802.1p priority.
- A congestion notification profile (CNP) to enable PFC on the FCoE code point at the interface ingress and to configure flow control on the interface egress. Flow control on the interface egress enables the interface to respond to PFC messages received from the connected peer and pause the correct IEEE 802.1p priority on the correct output queue.



**NOTE:** Configuring or changing PFC on an interface blocks the entire port until the PFC change is completed. After a PFC change is completed, the port is unblocked and traffic resumes. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

- A DCBX application and an application map to support DCBX application TLV exchange for the lossless FCoE traffic on the configured FCoE priority. By default, DCBX is enabled on all Ethernet interfaces, but only on priority 3 (IEEE 802.1p code point 011). To support DCBX application TLV exchange when you are not using the default configuration, you must configure all of the applications and map them to interfaces and priorities.

The priorities specified in the BA classifiers, CNP, and DCBX application map must match, or the configuration does not work. You must specify the same lossless FCoE forwarding class in each configuration and use the same IEEE 802.1p code point (priority) so that the FCoE traffic is properly classified into flows and so that those flows receive lossless treatment.

### Topology

This example shows how to configure one lossless FCoE traffic class, map it to a priority other than priority 3, and configure flow control to ensure lossless behavior on the interfaces. This example uses two Ethernet interfaces, xe-0/0/25 and xe-0/0/26. The interfaces connect to a converged Ethernet network that uses IEEE 802.1p priority 5 (code point 101) for FCoE traffic.

The configuration on the two interfaces is the same. Both interfaces use the same explicitly configured lossless FCoE forwarding class and the same ingress classifier. Both interfaces enable PFC on priority 5 and enable flow control on the same output queue (which is mapped to the lossless FCoE forwarding class).

Table 73 on page 366 shows the configuration components for this example.

**Table 73: Components of the Configuration Topology for FCoE Traffic That Does Not Use Priority 3**

Component	Settings
Hardware	One switch
Forwarding class	Name— <b>fcoe1</b>  Queue mapping—queue 5  Packet drop attribute— <b>no-loss</b>  <b>NOTE:</b> A lossless forwarding class can be mapped to any output queue. However, because the <b>fcoe1</b> forwarding class uses priority 5 in this example, matching that traffic to a forwarding class that uses queue 5 creates a configuration that is logical and easy to map because the priority and the queue are identified by the same number.



**Table 73: Components of the Configuration Topology for FCoE Traffic That Does Not Use Priority 3 (*continued*)**

Component	Settings
BA classifier	Name— <b>fcoe_p5</b>  FCoE priority mapping—Forwarding class <b>fcoe1</b> mapped to code point <b>101</b> (IEEE 802.1p priority 5) and a packet loss priority of <b>low</b> .
PFC configuration (CNPs)	CNP name— <b>fcoe_p5_cnp</b>  Input CNP code point— <b>101</b>  MRU— <b>2240</b> bytes  Cable length— <b>100</b> meters  Output CNP code point— <b>101</b>  Output CNP flow control queue— <b>5</b>  <b>NOTE:</b> When you apply a CNP with an explicit output queue flow control configuration to an interface, the explicit CNP overwrites the default output CNP. The output queues that are enabled for pause in the default configuration (queues 3 and 4) are not enabled for pause unless they are included in the explicitly configured output CNP.
DCBX application mapping	Application name— <b>fcoe_p5_app</b>  Application EtherType— <b>0x8906</b>  Application map name— <b>fcoe_p5_app_map</b>  Application map code points— <b>101</b>  <b>NOTE:</b> LLDP and DCBX must be enabled on the interface. By default, LLDP and DCBX are enabled on all Ethernet interfaces.



**NOTE:** This example does not include scheduling (bandwidth allocation) configuration or the FIP snooping configuration. This example focuses only on the lossless FCoE priority configuration.

QFX10000 switches do not support FIP snooping. For this reason, QFX10000 switches cannot be used as FCoE access transit switches. QFX10000 switches can be used as intermediate or aggregation transit switches in the FCoE path, between an FCoE access transit switch that performs FIP snooping and an FCF.

## Configuration

### CLI Quick Configuration

To quickly configure a lossless FCoE forwarding class that uses a different priority than IEEE 802.1p priority 3 for FCoE traffic on an FCoE transit switch, copy the following commands, paste them in a text file, remove line breaks, change variables and details

to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set class-of-service forwarding-classes class fcoe1 queue-num 5 no-loss
set class-of-service classifiers ieee-802.1 fcoe_p5 forwarding-class fcoe1 loss-priority low
code-points 101
set class-of-service interfaces xe-0/0/25 unit 0 classifiers ieee-802.1 fcoe_p5
set class-of-service interfaces xe-0/0/26 unit 0 classifiers ieee-802.1 fcoe_p5
set class-of-service congestion-notification-profile fcoe_p5_cnp input ieee-802.1 code-point 101
pfc mru 2240
set class-of-service congestion-notification-profile fcoe_p5_cnp input cable-length 100
set class-of-service congestion-notification-profile fcoe_p5_cnp output ieee-802.1 code-point
101 pfc flow-control-queue 5
set class-of-service interfaces xe-0/0/25 congestion-notification-profile fcoe_p5_cnp
set class-of-service interfaces xe-0/0/26 congestion-notification-profile fcoe_p5_cnp
set applications application fcoe_p5_app ether-type 0x8906
set policy-options application-maps fcoe_p5_app_map application fcoe_p5_app code-points 101
set protocols dcbx interface xe-0/0/25 application-map fcoe_p5_app_map
set protocols dcbx interface xe-0/0/26 application-map fcoe_p5_app_map
```

### Configuring A Lossless FCoE Forwarding Class On IEEE 802.1p Priority 5

#### Step-by-Step Procedure

To configure a lossless forwarding class for FCoE traffic on IEEE 802.1p priority 5 (code point 101), classify FCoE traffic into the lossless forwarding class, configure a congestion notification profile to enable PFC on the FCoE priority and output queue, and configure DCBX application protocol TLV exchange for traffic on the FCoE priority:

1. Configure the lossless forwarding class (named **fcoe1** and mapped to output queue 5) for FCoE traffic on IEEE 802.1p priority 5:

```
[edit class-of-service]
user@switch# set forwarding-classes class fcoe1 queue-num 5 no-loss
```

2. Configure the ingress classifier (**fcoe\_p5**). The classifier maps the FCoE priority (code point 101) to the lossless FCoE forwarding class **fcoe1**:

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 fcoe_p5 forwarding-class fcoe1 loss-priority low code-points
101
```

3. Apply the classifier to interfaces **xe-0/0/25** and **xe-0/0/26**:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/25 unit 0 classifiers ieee-802.1 fcoe_p5
user@switch# set interfaces xe-0/0/26 unit 0 classifiers ieee-802.1 fcoe_p5
```

4. Configure the CNP. The input stanza enables PFC on the FCoE priority (IEEE 802.1p code point 101), sets the MRU value (2240 bytes), and sets the cable length value (100 meters). The output stanza configures flow control on output queue 5 on the FCoE priority:

```
[edit class-of-service]
user@switch# set congestion-notification-profile fcoe_p5_cnp input ieee-802.1 code-point
101 pfc mru 2240
user@switch# set congestion-notification-profile fcoe_p5_cnp input cable-length 100
user@switch# set congestion-notification-profile fcoe_p5_cnp output ieee-802.1 code-point
101 pfc flow-control-queue 5
```

5. Apply the CNP to the interfaces:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/25 congestion-notification-profile fcoe_p5_cnp
user@switch# set interfaces xe-0/0/26 congestion-notification-profile fcoe_p5_cnp
```

6. Configure the DCBX application for FCoE to map to the Ethernet interfaces, so that DCBX can exchange application protocol TLVs on the IEEE 802.1p priority 5 instead of on the default priority 3:

```
[edit]
user@switch# set applications application fcoe_p5_app ether-type 0x8906
```

7. Configure a DCBX application map to map the FCoE application to the correct IEEE 802.1p FCoE priority:

```
[edit]
user@switch# set policy-options application-maps fcoe_p5_app_map application
fcoe_p5_app code-points 101
```

8. Apply the application map to the Ethernet interfaces so that DCBX exchanges FCoE application TLVs on the correct code point:

```
[edit]
user@switch# set protocols dcbx interface xe-0/0/25 application-map fcoe_p5_app_map
user@switch# set protocols dcbx interface xe-0/0/26 application-map fcoe_p5_app_map
```

## Verification

To verify the configuration and proper operation of the lossless forwarding class and IEEE 802.1p priority, perform these tasks:

- [Verifying the Forwarding Class Configuration on page 369](#)
- [Verifying the Behavior Aggregate Classifier Configuration on page 370](#)
- [Verifying the PFC Flow Control Configuration \(CNP\) on page 370](#)
- [Verifying the Interface Configuration on page 371](#)
- [Verifying the DCBX Application Configuration on page 372](#)
- [Verifying the DCBX Application Map Configuration on page 372](#)
- [Verifying the DCBX Application Protocol Exchange Interface Configuration on page 372](#)

### Verifying the Forwarding Class Configuration

**Purpose** Verify that the lossless forwarding class **fcoe1** has been created.

**Action** Show the forwarding class configuration by using the operational command **show class-of-service forwarding-class**:

```
user@switch# show class-of-service forwarding-class
```

Forwarding class	ID	Queue	Policing priority	No-Loss
best-effort	0	0	normal	Disabled
fcoe	1	3	normal	Enabled
no-loss	2	4	normal	Enabled
network-control	3	7	normal	Disabled
fcoe1	4	5	normal	Enabled
mcast	8	8	normal	Disabled

**Meaning** The **show class-of-service forwarding-class** command shows all of the forwarding classes. The command output shows that the **fcoe1** forwarding class is configured on output queue 5 with the no-loss packet drop attribute enabled.

Because we did not explicitly configure the default forwarding classes, they remain in their default state, including the lossless configuration of the **fcoe** and **no-loss** default forwarding classes.

### Verifying the Behavior Aggregate Classifier Configuration

**Purpose** Verify that the classifier maps the forwarding classes to the correct IEEE 802.1p code points (priorities) and packet loss priorities.

**Action** List the classifier configured to support lossless FCoE transport using the operational mode command **show class-of-service classifier**:

```
user@switch> show class-of-service classifier
```

```
Classifier: fcoe_p5, Code point type: ieee-802.1, Index: 63065
```

Code point	Forwarding class	Loss priority
101	fcoe1	low

**Meaning** The **show class-of-service classifier** command shows the IEEE 802.1p code points and the loss priorities that are mapped to the forwarding classes in each classifier.

Classifier **fcoe\_p5** maps code point 101 (priority 5) to explicitly configured lossless forwarding class **fcoe1** and a packet loss priority of **low**, and all other priorities to the **best-effort** forwarding class with a packet loss priority of **high**.

### Verifying the PFC Flow Control Configuration (CNP)

**Purpose** Verify that PFC is enabled on the correct input priority and that flow control is configured on the correct output queue in the CNP.

**Action** Display the congestion notification profile using the operational mode command **show class-of-service congestion-notification**:

```
user@switch> show class-of-service congestion-notification
Name: fcoe_p5_cnp, Index: 12137
Type: Input
Cable Length: 100 m
  Priority    PFC          MRU
  000        Disabled
  001        Disabled
  010        Disabled
  011        Disabled
  100        Disabled
  101        Enabled    2240
  110        Disabled
  111        Disabled
Type: Output
  Priority    Flow-Control-Queues
  101
  5
```

**Meaning** The **show class-of-service congestion-notification** command shows the input and output stanzas of the configured CNPs.

The **fcoe\_p5\_cnp** CNP input stanza shows that PFC is enabled on code point **101** (priority 5), the MRU is **2240** bytes, and the cable length is **100** meters. The CNP output stanza shows that output flow control is configured on queue **5** for code point **101** (priority 5).

### Verifying the Interface Configuration

**Purpose** Verify that the correct classifier and congestion notification profile are configured on the interfaces.

**Action** List the ingress interfaces using the operational mode commands **show configuration class-of-service interfaces xe-0/0/25** and **show configuration class-of-service interfaces xe-0/0/26**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/25
congestion-notification-profile fcoe_p5_cnp;
unit 0 {
  classifiers {
    ieee-802.1 fcoe_p5;
  }
}

user@switch> show configuration class-of-service interfaces xe-0/0/26
congestion-notification-profile fcoe_p5_cnp;
unit 0 {
  classifiers {
    ieee-802.1 fcoe_p5;
  }
}
```

**Meaning** Both the **show configuration class-of-service interfaces xe-0/0/25** command and the **show configuration class-of-service interfaces xe-0/0/26** command show that the

congestion notification profile **fcoe\_p5\_cnp** is configured on each interface, and that the IEEE 802.1p classifier associated with each interface is **fcoe\_p5**.

### Verifying the DCBX Application Configuration

- Purpose** Verify that the DCBX application for FCoE is configured.
- Action** List the DCBX applications by using the configuration mode command **show applications**:
- ```
user@switch# show applications
application fcoe_p5_app {
    ether-type 0x8906;
```
- Meaning** The **show applications** configuration mode command shows all of the configured applications. The output shows that the application **fcoe\_p5\_app** is configured with an EtherType of **0x8906**.

### Verifying the DCBX Application Map Configuration

- Purpose** Verify that the application map is configured.
- Action** List the application maps by using the configuration mode command **show policy-options application-maps**:
- ```
user@switch# show policy-options application-maps
fcoe_p5_app_map {
    application fcoe_p5_app code-points 101;
}
```
- Meaning** The **show policy-options application-maps** configuration mode command lists all of the configured application maps and the applications that belong to each application map. The output shows that application map **fcoe\_p5\_app\_map** consists of the application named **fcoe\_p5\_app**, which is mapped to IEEE 802.1p code point 101.

### Verifying the DCBX Application Protocol Exchange Interface Configuration

- Purpose** Verify that the application map is applied to the correct interfaces.
- Action** List the application maps on each interface using the configuration mode command **show protocols dcbx**:
- ```
user@switch# show protocols dcbx
interface xe-0/0/25.0 {
    application-map fcoe_p5_app_map;
}
interface xe-0/0/26.0 {
    application-map fcoe_p5_app_map;
}
```
- Meaning** The **show protocols dcbx** configuration mode command lists the application map association with interfaces. The output shows that interfaces **xe-0/0/25.0** and **xe-0/0/26.0** use application map **fcoe\_p5\_app\_map**.

- Related Documentation**
- [Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382](#)
  - [Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373](#)
  - [Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications \(FCoE and iSCSI\) on page 396](#)
  - [Example: Configuring DCBX Application Protocol TLV Exchange on page 433](#)
  - [Configuring CoS PFC \(Congestion Notification Profiles\) on page 301](#)
  - [Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269](#)
  - [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)

## Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface

---

The default system configuration supports FCoE traffic on priority 3 (IEEE 802.1p code point 011). If the FCoE traffic on your converged Ethernet network uses priority 3, the only user configuration required for lossless transport is to enable PFC on code point 011 on the FCoE ingress interfaces.

However, if your converged Ethernet network uses more than one priority for FCoE traffic, you need to configure lossless transport for each FCoE priority. This example shows you how to configure lossless FCoE transport on a converged Ethernet network that uses both priority 3 (IEEE 802.1p code point 011) and priority 5 (IEEE 802.1p code point 101) for FCoE traffic.

- [Requirements on page 373](#)
- [Overview on page 373](#)
- [Configuration on page 376](#)
- [Verification on page 378](#)

### Requirements

This example uses the following hardware and software components:

- One switch used as an FCoE transit switch
- Junos OS Release 12.3 or later for the QFX Series

### Overview

Some network topologies support FCoE traffic on more than one IEEE 802.1p priority. For example, a converged Ethernet network might include two separate FCoE networks that use different priorities to identify traffic. Interfaces that carry traffic for both FCoE networks need to support lossless FCoE transport on both priorities.

Supporting lossless behavior for two FCoE traffic classes requires configuring:

- At least one lossless forwarding class for FCoE traffic (this example uses the default **fcoe** forwarding class as one of the lossless FCoE forwarding classes, so we need to explicitly configure only one FCoE forwarding class).
- A behavior aggregate (BA) classifier to map the FCoE forwarding classes to the appropriate IEEE 802.1p code points (priorities).
- A congestion notification profile (CNP) to enable PFC on the FCoE code points at the interface ingress and to configure PFC flow control on the interface egress so that the interface can respond to PFC messages received from the connected peer.



**NOTE:** Configuring or changing PFC on an interface blocks the entire port until the PFC change is completed. After a PFC change is completed, the port is unblocked and traffic resumes. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

- DCBX applications and an application map to support DCBX application TLV exchange for the lossless FCoE traffic on the configured FCoE priorities. By default, DCBX is enabled on all Ethernet interfaces, but only on priority 3 (IEEE 802.1p code point 011). To support DCBX application TLV exchange when you are not using the default configuration, you must configure all of the applications and map them to interfaces and priorities.

The priorities specified in the BA classifier, CNP, and DCBX application map must match, or the configuration does not work. You must specify the same lossless FCoE forwarding class in each configuration and use the same IEEE 802.1p code point (priority) so that the FCoE traffic is properly classified into flows and so that those flows receive lossless treatment.

### Topology

This example shows how to configure two lossless FCoE traffic classes on an interface, map them to two different priorities, and configure flow control to ensure lossless behavior. This example uses two Ethernet interfaces, xe-0/0/20 and xe-0/0/21, that are connected to the converged Ethernet network. Both interfaces transport FCoE traffic on priorities 3 (011) and 5 (101), and must support lossless transport of that traffic.

Table 74 on page 374 shows the configuration components for this example.

**Table 74: Components of the Two Lossless FCoE Priorities on an Interface Configuration Topology**

| Component | Settings   |
|-----------|------------|
| Hardware  | One switch |



Table 74: Components of the Two Lossless FCoE Priorities on an Interface Configuration Topology (*continued*)

| Component               | Settings                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Forwarding classes      | <p>Name—<b>fcoe1</b><br/> Queue mapping—queue 5<br/> Packet drop attribute—<b>no-loss</b></p> <p><b>NOTE:</b> A lossless forwarding class can be mapped to any output queue. However, because the <b>fcoe1</b> forwarding class uses priority 5 in this example, matching that traffic to a forwarding class that uses queue 5 creates a configuration that is logical and easy to map because the priority and the queue are identified by the same number.</p> <p>Name—<b>fcoe</b><br/> This is the default lossless FCoE forwarding class, so no configuration required. The <b>fcoe</b> forwarding class is mapped to priority 3 (IEEE 802.1p code point 011) and to output queue 3 with a packet drop attribute of <b>no-loss</b>.</p>                                     |
| BA classifier           | <p>Name—<b>fcoe_classifier</b></p> <p>FCoE priority mapping for forwarding class <b>fcoe</b>—mapped to code point <b>011</b> (IEEE 802.1p priority 3) and a packet loss priority of <b>low</b>.</p> <p>FCoE priority mapping for forwarding class <b>fcoe1</b>—mapped to code point <b>101</b> (IEEE 802.1p priority 5) and a packet loss priority of <b>low</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                           |
| PFC configuration (CNP) | <p>CNP name—<b>fcoe_cnp</b></p> <p>Input CNP code points—<b>011</b> and <b>101</b></p> <p>MRU—2240 bytes</p> <p>Cable length—100 meters</p> <p>Output CNP code points—<b>011</b> and <b>101</b></p> <p>Output CNP flow control queues—<b>3</b> and <b>5</b></p> <p><b>NOTE:</b> When you apply a CNP with an explicit output queue flow control configuration to an interface, the explicit CNP overwrites the default output CNP. The output queues that are enabled for PFC pause in the default configuration (queues 3 and 4) are not enabled for PFC pause unless they are included in the explicitly configured output CNP. In this example, because the explicit output CNP overwrites the default output CNP, we must explicitly configure flow control on queue 3.</p> |

**Table 74: Components of the Two Lossless FCoE Priorities on an Interface Configuration Topology (continued)**

| Component                | Settings                                                                                                                                                                                                                                                                                                                    |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DCBX application mapping | Application name— <b>fcoe_app</b><br><br>Application EtherType— <b>0x8906</b><br><br>Application map name— <b>fcoe_app_map</b><br><br>Application map code points— <b>011 and 101</b><br><br><b>NOTE:</b> LLDP and DCBX must be enabled on the interface. By default, LLDP and DCBX are enabled on all Ethernet interfaces. |
| Interfaces               | Interfaces <b>xe-0/0/20</b> and <b>xe-0/0/21</b> use the same configuration: <ul style="list-style-type: none"> <li>• Classifier—<b>fcoe_classifier</b></li> <li>• CNP—<b>fcoe_cnp</b></li> <li>• DCBX application map—<b>fcoe_app_map</b></li> </ul>                                                                       |



**NOTE:** This example does not include scheduling (bandwidth allocation) configuration or the FIP snooping configuration. This examples focuses only on the lossless FCoE priority configuration.

QFX10000 switches do not support FIP snooping. For this reason, QFX10000 switches cannot be used as FCoE access transit switches. QFX10000 switches can be used as intermediate or aggregation transit switches in the FCoE path, between an FCoE access transit switch that performs FIP snooping and an FCF.

## Configuration

### CLI Quick Configuration

To quickly configure two lossless FCoE forwarding classes that use different priorities on an FCoE transit switch interface, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set class-of-service forwarding-classes class fcoe1 queue-num 5 no-loss
set class-of-service classifiers ieee-802.1 fcoe_classifier forwarding-class fcoe loss-priority low
code-points 011
set class-of-service classifiers ieee-802.1 fcoe_classifier forwarding-class fcoe1 loss-priority low
code-points 101
set class-of-service interfaces xe-0/0/20 unit 0 classifiers ieee-802.1 fcoe_classifier
set class-of-service interfaces xe-0/0/21 unit 0 classifiers ieee-802.1 fcoe_classifier
set class-of-service congestion-notification-profile fcoe_cnp input ieee-802.1 code-point 011 pfc
mru 2240
set class-of-service congestion-notification-profile fcoe_cnp input ieee-802.1 code-point 101 pfc
mru 2240
set class-of-service congestion-notification-profile fcoe_cnp input cable-length 100
set class-of-service congestion-notification-profile fcoe_cnp output ieee-802.1 code-point 011
pfc flow-control-queue 3
set class-of-service congestion-notification-profile fcoe_cnp output ieee-802.1 code-point 101
pfc flow-control-queue 5
```

```

set class-of-service interfaces xe-0/0/20 congestion-notification-profile fcoe_cnp
set class-of-service interfaces xe-0/0/21 congestion-notification-profile fcoe_cnp
set applications application fcoe_app ether-type 0x8906
set policy-options application-maps fcoe_app_map application fcoe_app code-points [011 101]
set protocols dcbx interface xe-0/0/20 application-map fcoe_app_map
set protocols dcbx interface xe-0/0/21 application-map fcoe_app_map

```

**Step-by-Step Procedure** To configure two lossless forwarding classes for FCoE traffic on the same interface, classify FCoE traffic into the forwarding classes, configure CNPs to enable PFC on the FCoE priorities and output queues, and configure DCBX application protocol TLV exchange for traffic on both FCoE priorities:

1. Configure lossless forwarding class **fcoe1** and map it to output queue **5** for FCoE traffic that uses IEEE 802.1p priority 5:

```

[edit class-of-service]
user@switch# set forwarding-classes class fcoe1 queue-num 5 no-loss

```



**NOTE:** This examples uses the default **fcoe** forwarding class as the other lossless FCoE forwarding class.

2. Configure the ingress classifier. The classifier maps the FCoE priorities (IEEE 802.1p code points **011** and **101**) to lossless FCoE forwarding classes **fcoe** and **fcoe1**, respectively:

```

[edit class-of-service classifiers]
user@switch# set ieee-802.1 fcoe_classifier forwarding-class fcoe loss-priority low
code-points 011
user@switch# set ieee-802.1 fcoe_classifier forwarding-class fcoe1 loss-priority low
code-points 101

```

3. Apply the classifier to the interfaces:

```

[edit class-of-service]
user@switch# set interfaces xe-0/0/20 unit 0 classifiers ieee-802.1 fcoe_classifier
user@switch# set interfaces xe-0/0/21 unit 0 classifiers ieee-802.1 fcoe_classifier

```

4. Configure the CNP. The input stanza enables PFC on the FCoE priorities (IEEE 802.1p code points **011** and **101**), sets the MRU value (2240 bytes), and sets the cable length value (100 meters). The output stanza configures flow control on output queues **3** and **5** on the FCoE priorities:

```

[edit class-of-service]
user@switch# set congestion-notification-profile fcoe_cnp input ieee-802.1 code-point
011 pfc mru 2240
user@switch# set congestion-notification-profile fcoe_cnp input ieee-802.1 code-point
101 pfc mru 2240
user@switch# set congestion-notification-profile fcoe_cnp input cable-length 100
user@switch# set congestion-notification-profile fcoe_cnp output ieee-802.1 code-point
011 pfc flow-control-queue 3
user@switch# set congestion-notification-profile fcoe_cnp output ieee-802.1 code-point
101 pfc flow-control-queue 5

```

5. Apply the CNP to the interfaces:

```

[edit class-of-service]

```

```
user@switch# set interfaces xe-0/0/20 congestion-notification-profile fcoe_cnp
user@switch# set interfaces xe-0/0/21 congestion-notification-profile fcoe_cnp
```

6. Configure a DCBX application for FCoE to map to the Ethernet interfaces, so that DCBX can exchange application protocol TLVs on both of the IEEE 802.1p priorities used for FCoE transport:

```
[edit]
user@switch# set applications application fcoe_app ether-type 0x8906
```

7. Configure a DCBX application map to map the FCoE application to the correct IEEE 802.1p FCoE priorities:

```
[edit]
user@switch# set policy-options application-maps fcoe_app_map application fcoe_app
code-points [011 101]
```

8. Apply the application map to the interfaces so that DCBX exchanges FCoE application TLVs on the correct code points:

```
[edit]
user@switch# set protocols dcbx interface xe-0/0/20 application-map fcoe_app_map
user@switch# set protocols dcbx interface xe-0/0/21 application-map fcoe_app_map
```

## Verification

To verify the configuration and proper operation of the lossless forwarding classes and IEEE 802.1p priorities, perform these tasks:

- [Verifying the Forwarding Class Configuration on page 378](#)
- [Verifying the Behavior Aggregate Classifier Configuration on page 379](#)
- [Verifying the PFC Flow Control Configuration \(CNP\) on page 379](#)
- [Verifying the Interface Configuration on page 380](#)
- [Verifying the DCBX Application Configuration on page 381](#)
- [Verifying the DCBX Application Map Configuration on page 381](#)
- [Verifying the DCBX Application Protocol Exchange Interface Configuration on page 381](#)

---

### Verifying the Forwarding Class Configuration

**Purpose** Verify that the lossless forwarding class **fcoe1** has been created.

**Action** Show the forwarding class configuration by using the operational command **show class-of-service forwarding class**:

```
user@switch# show class-of-service forwarding-class
```

| Forwarding class | ID | Queue | Policing priority | No-Loss  |
|------------------|----|-------|-------------------|----------|
| best-effort      | 0  | 0     | normal            | Disabled |
| fcoe             | 1  | 3     | normal            | Enabled  |
| no-loss          | 2  | 4     | normal            | Enabled  |
| network-control  | 3  | 7     | normal            | Disabled |
| fcoe1            | 4  | 5     | normal            | Enabled  |
| mcast            | 8  | 8     | normal            | Disabled |

**Meaning** The **show class-of-service forwarding-class** command shows all of the forwarding classes. The command output shows that the **fcoe1** forwarding class is configured on output queue 5 with the no-loss packet drop attribute enabled.

Because we did not explicitly configure the default forwarding classes, they remain in their default state, including the lossless configuration of the **fcoe** and **no-loss** default forwarding classes.

### Verifying the Behavior Aggregate Classifier Configuration

**Purpose** Verify that the three classifiers map the forwarding classes to the correct IEEE 802.1p code points (priorities) and packet loss priorities.

**Action** List the classifiers using the operational mode command **show class-of-service classifier**:

```
user@switch> show class-of-service classifier
```

```
Classifier: fcoe_classifier, Code point type: ieee-802.1p, Index: 10964
Code point      Forwarding class      Loss priority
011             fcoe                  low
101             fcoe1                 low
```

**Meaning** The **show class-of-service classifier** command shows the IEEE 802.1p code points and the loss priorities that are mapped to the forwarding classes in each classifier.

Classifier **fcoe\_classifier** maps code point **011** to default lossless forwarding class **fcoe** and a packet loss priority of **low**, and maps code point **101** to explicitly configured lossless forwarding class **fcoe1** and a packet loss priority of **low**.

### Verifying the PFC Flow Control Configuration (CNP)

**Purpose** Verify that PFC is enabled on the correct input priorities and that flow control is configured on the correct output queues and priorities.

**Action** List the CNPs using the operational mode command **show class-of-service congestion-notification**:

```
user@switch> show class-of-service congestion-notification
Name: fcoe_cnp, Index: 46504
Type: Input
Cable Length: 100 m
  Priority    PFC          MRU
  000        Disabled
  001        Disabled
  010        Disabled
  011        Enabled    2240
  100        Disabled
  101        Enabled    2240
  110        Disabled
  111        Disabled
Type: Output
  Priority    Flow-Control-Queues
  011        3
  101        5
```

**Meaning** The **show class-of-service congestion-notification** command shows the input and output stanzas of the CNP.

The CNP **fcoe\_cnp** input stanza shows that PFC is enabled on code points **011** and **101**, the MRU is **2240** bytes on both priorities, and the interface cable length is **100** meters. The CNP output stanza shows that output flow control is configured on queues **3** and **5** for code points **011** and **101**, respectively.

---

### Verifying the Interface Configuration

**Purpose** Verify that the classifier and congestion notification profile are configured on the interfaces. Both interfaces should show the same configuration.

**Action** List the ingress interfaces using the operational mode commands **show configuration class-of-service interfaces xe-0/0/20** and **show configuration class-of-service interfaces xe-0/0/21**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/20
congestion-notification-profile fcoe_cnp;
unit 0 {
    classifiers {
        ieee-802.1 fcoe_classifier;
    }
}

user@switch> show configuration class-of-service interfaces xe-0/0/21
congestion-notification-profile fcoe_cnp;
unit 0 {
    classifiers {
        ieee-802.1 fcoe_classifier;
    }
}
```

**Meaning** The `show configuration class-of-service interfaces xe-0/0/20` command shows that the congestion notification profile `fcoe_cnp` is configured on the interface, and that the IEEE 802.1p classifier associated with the interface is `fcoe_classifier`.

The `show configuration class-of-service interfaces xe-0/0/21` command shows that the congestion notification profile `fcoe_cnp` is configured on the interface, and that the IEEE 802.1p classifier associated with the interface is `fcoe_classifier`.

### Verifying the DCBX Application Configuration

**Purpose** Verify that the DCBX application for FCoE is configured.

**Action** List the DCBX applications by using the configuration mode command `show applications`:

```
user@switch# show applications
application fcoe_app {
    ether-type 0x8906;
```

**Meaning** The `show applications` configuration mode command shows all of the configured applications. The output shows that the application `fcoe_app` is configured with an EtherType of `0x8906`.

### Verifying the DCBX Application Map Configuration

**Purpose** Verify that the application map is configured.

**Action** List the application maps by using the configuration mode command `show policy-options application-maps`:

```
user@switch# show policy-options application-maps
fcoe_app_map {
    application fcoe_app code-points [011 101];
}
```

**Meaning** The `show policy-options application-maps` configuration mode command lists all of the configured application maps and the applications that belong to each application map. The output shows that application map `fcoe_app_map` consists of the application named `fcoe_app`, which is mapped to IEEE 802.1p code points `011` and `101` (priorities 3 and 5, respectively).

### Verifying the DCBX Application Protocol Exchange Interface Configuration

**Purpose** Verify that the application map is applied to the interfaces.

**Action** List the application maps on each interface using the configuration mode command `show protocols dcbx`:

```
user@switch# show protocols dcbx
interface xe-0/0/20.0 {
    application-map fcoe_app_map;
}
interface xe-0/0/21.0 {
```

```
    application-map fcoe_app_map;  
}
```

**Meaning** The **show protocols dcbx** configuration mode command lists the application map association with interfaces. The output shows that interfaces **xe-0/0/20.0** and **xe-0/0/21.0** use application map **fcoe\_app\_map**.

- Related Documentation**
- [Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382](#)
  - [Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic \(FCoE Transit Switch\) on page 365](#)
  - [Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications \(FCoE and iSCSI\) on page 396](#)
  - [Example: Configuring DCBX Application Protocol TLV Exchange on page 433](#)
  - [Configuring CoS PFC \(Congestion Notification Profiles\) on page 301](#)
  - [Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269](#)
  - [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)

---

## Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces

---

Although the default configuration provides two lossless forwarding classes mapped to two different IEEE 802.1p priorities (code points), you can explicitly configure up to six lossless forwarding classes and map them to different priorities. You can support up to six different types of lossless traffic, and you can support the same type of traffic if it uses different priorities in different parts of your converged network.

This example shows you how to configure two lossless forwarding classes for FCoE traffic and map them to two different priorities on an FCoE transit switch.

- [Requirements on page 382](#)
- [Overview on page 383](#)
- [Configuration on page 387](#)
- [Verification on page 390](#)

### Requirements

This example uses the following hardware and software components:

- One switch used as an FCoE transit switch
- Junos OS Release 12.3 or later for the QFX Series



## Overview

Some network topologies support FCoE traffic on more than one IEEE 802.1p priority. For example, when the switch acts as a transit switch, it could be connected to two QFX3500 switches in FCoE-FC gateway mode. Each of the gateway switches could connect a set of FCoE clients to a different SAN, and each set of FCoE clients could use a different priority for FCoE traffic to avoid fate sharing and maintain separation of the two FCoE networks. In this case, you need to configure two forwarding classes for FCoE traffic, each mapped to a different output queue and a different priority.

Supporting lossless behavior for two FCoE traffic classes requires configuring:

- At least one lossless forwarding class for FCoE traffic (this example uses the default **fcoe** forwarding class as one of the two lossless FCoE forwarding classes, so we need to explicitly configure only one FCoE forwarding class)
- Behavior aggregate (BA) classifiers to map the FCoE forwarding classes to the appropriate IEEE 802.1p code points (priorities) on each interface
- Congestion notification profiles (CNPs) for each interface to enable PFC on the FCoE code points at the interface ingress and to configure PFC flow control on the interface egress so that the interface can respond to PFC messages received from the connected peer



**NOTE:** Configuring or changing PFC on an interface blocks the entire port until the PFC change is completed. After a PFC change is completed, the port is unblocked and traffic resumes. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

- DCBX applications and an application map to support DCBX application TLV exchange for the lossless FCoE traffic on the configured FCoE priorities. By default, DCBX is enabled on all Ethernet interfaces, but only on priority 3 (IEEE 802.1p code point 011). To support DCBX application TLV exchange when you are not using the default configuration, you must configure all of the applications and map them to interfaces and priorities.

The priorities specified in the BA classifiers, CNPs, and DCBX application map must match, or the configuration does not work. You must specify the same lossless FCoE forwarding class in each configuration and use the same IEEE 802.1p code point (priority) so that the FCoE traffic is properly classified into flows and so that those flows receive lossless treatment.

## Topology

This example shows how to configure two lossless FCoE traffic classes, map them to two different priorities, and configure flow control to ensure lossless behavior for those priorities on the interfaces. This example uses three Ethernet interfaces, xe-0/0/20, xe-0/0/21, and xe-0/0/22:

- Interface xe-0/0/20 connects to an FCoE-FC gateway that connects to Fibre Channel (FC) SAN 1. FCoE traffic to and from FC SAN 1 uses the default **fcoe** forwarding class and the default mapping to priority 3 (IEEE 802.1p code point 011) and output queue 3.
- Interface xe-0/0/21 connects to another FCoE-FC gateway that connects to Fibre Channel (FC) SAN 2. FCoE traffic to and from FC SAN-2 uses an explicitly configured FCoE forwarding class that is mapped to priority 5 (code point 101) and output queue 5.
- Interface xe-0/0/22 connects to FCoE devices on the converged Ethernet network and handles traffic destined for FC SAN 1 and FC SAN 2. Interface xe-0/0/22 must properly handle lossless FCoE traffic of both priorities (both FCoE forwarding classes), including pausing the traffic on ingress or egress as required.

Figure 26 on page 384 shows the topology for this example, and Table 75 on page 384 shows the configuration components for this example.

Figure 26: Topology of the Two Lossless FCoE Priorities Example

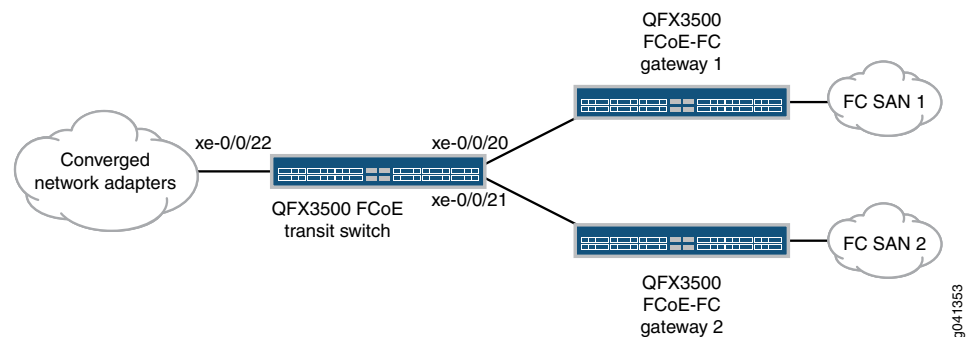


Table 75: Components of the Two Lossless FCoE Priorities Configuration Topology

| Component          | Settings                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hardware           | One switch                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Forwarding classes | <p>Name—<b>fcoe1</b><br/> Queue mapping—queue 5<br/> Packet drop attribute—<b>no-loss</b></p> <p><b>NOTE:</b> A lossless forwarding class can be mapped to any output queue. However, because the <b>fcoe1</b> forwarding class uses priority 5 in this example, matching that traffic to a forwarding class that uses queue 5 creates a configuration that is logical and easy to map because the priority and the queue are identified by the same number.</p> <p>Name—<b>fcoe</b><br/> This is the default lossless FCoE forwarding class, so no configuration required. The <b>fcoe</b> forwarding class is mapped to priority 3 (IEEE 802.1p code point 011) and to output queue 3 with a packet drop attribute of <b>no-loss</b></p> |

**Table 75: Components of the Two Lossless FCoE Priorities Configuration Topology (*continued*)**

| Component      | Settings                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| BA classifiers | <p>Each interface requires a different classifier because each interface handles a different subset of FCoE traffic.</p> <ul style="list-style-type: none"> <li>Interface xe-0/0/20 classifier:<br/>Name—<b>fcoe_p3</b><br/>FCoE priority mapping—Forwarding class <b>fcoe</b> mapped to code point <b>011</b> (IEEE 802.1p priority 3) and a packet loss priority of <b>low</b>.</li> <li>Interface xe-0/0/21 classifier:<br/>Name—<b>fcoe_p5</b><br/>FCoE priority mapping—Forwarding class <b>fcoe1</b> mapped to code point <b>101</b> (IEEE 802.1p priority 5) and a packet loss priority of <b>low</b>.</li> <li>Interface xe-0/0/22 classifier:<br/>Name—<b>fcoe_p3_p5</b><br/>FCoE priority mapping—Forwarding class <b>fcoe1</b> mapped to code point <b>101</b> and a packet loss priority of <b>low</b>, and forwarding class <b>fcoe</b> mapped to code point <b>011</b> and a packet loss priority of <b>low</b>.</li> </ul> |

**Table 75: Components of the Two Lossless FCoE Priorities Configuration Topology (*continued*)**

| Component                | Settings                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PFC configuration (CNPs) | <p>Each interface requires a different CNP because each interface handles a different subset of FCoE traffic and must pause that traffic on different priorities.</p> <ul style="list-style-type: none"> <li>Interface xe-0/0/20 CNP:<br/> CNP name—<b>fcoe_p3_cnp</b><br/> Input CNP code point—<b>011</b><br/> MRU—2240 bytes<br/> Cable length—100 meters</li> </ul> <p><b>NOTE:</b> Because interface xe-0/0/20 uses the default FCoE configuration, output queue 3 is paused by default and you do not need to configure the output stanza of the CNP.</p> <ul style="list-style-type: none"> <li>Interface xe-0/0/21 CNP:<br/> CNP name—<b>fcoe_p5_cnp</b><br/> Input CNP code point—<b>101</b><br/> MRU—2240 bytes<br/> Cable length—150 meters<br/> Output CNP code point—<b>101</b><br/> Output CNP flow control queue—<b>5</b></li> <li>Interface xe-0/0/22 CNP:<br/> CNP name—<b>fcoe_p3_p5_cnp</b><br/> Input CNP code points—<b>011</b> and <b>101</b><br/> MRU—2240 bytes (both priorities)<br/> Cable length—100 meters<br/> Output CNP code points—<b>011</b> (for queue 3) and <b>101</b> (for queue 5)<br/> Output CNP flow control queues—<b>3</b> for priority 3 (code point 011) and <b>5</b> for priority 5 (code point 101)</li> </ul> <p><b>NOTE:</b> When you apply a CNP with an explicit output queue flow control configuration to an interface, the explicit CNP overwrites the default output CNP. The output queues that are enabled for pause in the default configuration (queues 3 and 4) are not enabled for pause unless they are included in the explicitly configured output CNP.</p> |

**Table 75: Components of the Two Lossless FCoE Priorities Configuration Topology (continued)**

| Component                | Settings                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DCBX application mapping | <p>Interface xe-0/0/20 does not need an application map because DCBX exchanges application protocol TLVs only on the default FCoE priority (priority 3).</p> <p>Interface xe-0/0/21 requires an application map that enables DCBX application protocol TLV exchange on priority 5 (code point 101) for FCoE traffic. Interface xe-0/0/22 requires an application map that enables DCBX application protocol TLV exchange both on priority 3 (code point 011) and on priority 5 (code point 101) for FCoE traffic.</p> <ul style="list-style-type: none"> <li>Interface xe-0/0/21 DCBX application mapping:<br/>Application name—<b>fcoe_p5_app</b><br/>Application ether-type—<b>0x8906</b><br/>Application map name—<b>fcoe_p5_app_map</b><br/>Application map code points—<b>101</b></li> <li>Interface xe-0/0/22 DCBX application mapping:<br/>Application name—<b>fcoe_all_app</b><br/>Application ether-type—<b>0x8906</b><br/>Application map name—<b>fcoe_all_app_map</b><br/>Application map code points—<b>011</b> and <b>101</b></li> </ul> <p><b>NOTE:</b> LLDP and DCBX must be enabled on the interface. By default, LLDP and DCBX are enabled on all Ethernet interfaces.</p> |



**NOTE:** This example does not include scheduling (bandwidth allocation) configuration or the FIP snooping configuration. This examples focuses only on the lossless FCoE priority configuration.

QFX10000 switches do not support FIP snooping. For this reason, QFX10000 switches cannot be used as FCoE access transit switches. QFX10000 switches can be used as intermediate or aggregation transit switches in the FCoE path, between an FCoE access transit switch that performs FIP snooping and an FCF.

## Configuration

### CLI Quick Configuration

To quickly configure two lossless FCoE forwarding classes that use different priorities on an FCoE transit switch, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set class-of-service forwarding-classes class fcoe1 queue-num 5 no-loss
set class-of-service classifiers ieee-802.1 fcoe_p3 forwarding-class fcoe loss-priority low
code-points 011
set class-of-service classifiers ieee-802.1 fcoe_p5 forwarding-class fcoe1 loss-priority low
code-points 101
set class-of-service classifiers ieee-802.1 fcoe_p3_p5 forwarding-class fcoe loss-priority low
code-points 011
```

```

set class-of-service classifiers ieee-802.1p fcoe_p3_p5 forwarding-class fcoe1 loss-priority low
code-points 101
set class-of-service interfaces xe-0/0/20 unit 0 classifiers ieee-802.1p fcoe_p3
set class-of-service interfaces xe-0/0/21 unit 0 classifiers ieee-802.1p fcoe_p5
set class-of-service interfaces xe-0/0/22 unit 0 classifiers ieee-802.1p fcoe_p3_p5
set class-of-service congestion-notification-profile fcoe_p3_cnp input ieee-802.1p code-point 011
pfc mru 2240
set class-of-service congestion-notification-profile fcoe_p3_cnp input cable-length 100
set class-of-service congestion-notification-profile fcoe_p5_cnp input ieee-802.1p code-point 101
pfc mru 2240
set class-of-service congestion-notification-profile fcoe_p5_cnp input cable-length 150
set class-of-service congestion-notification-profile fcoe_p5_cnp output ieee-802.1p code-point
101 pfc flow-control-queue 5
set class-of-service congestion-notification-profile fcoe_p3_p5_cnp input ieee-802.1p code-point
011 pfc mru 2240
set class-of-service congestion-notification-profile fcoe_p3_p5_cnp input ieee-802.1p code-point
101 pfc mru 2240
set class-of-service congestion-notification-profile fcoe_p3_p5_cnp input cable-length 100
set class-of-service congestion-notification-profile fcoe_p3_p5_cnp output ieee-802.1p code-point
011 pfc flow-control-queue 3
set class-of-service congestion-notification-profile fcoe_p3_p5_cnp output ieee-802.1p code-point
101 pfc flow-control-queue 5
set class-of-service interfaces xe-0/0/20 congestion-notification-profile fcoe_p3_cnp
set class-of-service interfaces xe-0/0/21 congestion-notification-profile fcoe_p5_cnp
set class-of-service interfaces xe-0/0/22 congestion-notification-profile fcoe_p3_p5_cnp
set applications application fcoe_p5_app ether-type 0x8906
set applications application fcoe_all_app ether-type 0x8906
set policy-options application-maps fcoe_p5_app_map application fcoe_p5_app code-points 101
set policy-options application-maps fcoe_all_app_map application fcoe_all_app code-points [011
101]
set protocols dcbx interface xe-0/0/21 application-map fcoe_p5_app_map
set protocols dcbx interface xe-0/0/22 application-map fcoe_all_app_map

```

### Step-by-Step Procedure

To configure two lossless forwarding classes for FCoE traffic on different interfaces, classify FCoE traffic into the forwarding classes, configure congestion notification profiles to enable PFC on the FCoE priorities and output queues, and configure DCBX application protocol TLV exchange for traffic on both FCoE priorities:

1. Configure lossless forwarding class **fcoe1** and map it to output queue **5** for FCoE traffic that uses IEEE 802.1p priority 5:

```

[edit class-of-service]
user@switch# set forwarding-classes class fcoe1 queue-num 5 no-loss

```



**NOTE:** This example uses the default **fcoe** forwarding class as the other lossless FCoE forwarding class.

2. Configure the ingress classifier (**fcoe\_p3**) for interface **xe-0/0/20**. The classifier maps the FCoE priority (IEEE 802.1p code point **011**) to lossless FCoE forwarding class **fcoe**:

```

[edit class-of-service classifiers]
user@switch# set ieee-802.1p fcoe_p3 forwarding-class fcoe loss-priority low code-points
011

```

3. Configure the ingress classifier (**fcoe\_p5**) for interface **xe-0/0/21**. The classifier maps the FCoE priority (IEEE 802.1p code point **101**) to lossless FCoE forwarding class **fcoe1**:

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 fcoe_p5 forwarding-class fcoe1 loss-priority low code-points
101
```

4. Configure the ingress classifier (**fcoe\_p3\_p5**) for interface **xe-0/0/22**. The classifier maps the two FCoE priorities (IEEE 802.1p code points **011** and **101**) to the two lossless FCoE forwarding classes **fcoe** and **fcoe1**, respectively:

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 fcoe_p3_p5 forwarding-class fcoe loss-priority low code-points
011
user@switch# set ieee-802.1 fcoe_p3_p5 forwarding-class fcoe1 loss-priority low code-points
101
```

5. Apply each classifier to the appropriate interface:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 unit 0 classifiers ieee-802.1 fcoe_p3
user@switch# set interfaces xe-0/0/21 unit 0 classifiers ieee-802.1 fcoe_p5
user@switch# set interfaces xe-0/0/22 unit 0 classifiers ieee-802.1 fcoe_p3_p5
```

6. Configure the CNP input stanza for interface **xe-0/0/20** to enable PFC on the FCoE priority (IEEE 802.1p code point **011**), set the MRU value (2240 bytes), and set the cable length value (100 meters). No output stanza is needed because queue 3 is paused by default on priority 3, and we are not explicitly configuring output queue flow control for any other queues.

```
[edit class-of-service]
user@switch# set congestion-notification-profile fcoe_p3_cnp input ieee-802.1 code-point
011 pfc mru 2240
user@switch# set congestion-notification-profile fcoe_p3_cnp input cable-length 100
```

7. Configure the CNP for interface **xe-0/0/21**. The input stanza enables PFC on the FCoE priority (IEEE 802.1p code point **101**), sets the MRU value (2240 bytes), and sets the cable length value (150 meters). The output stanza configures flow control on output queue 5 on the FCoE priority:

```
[edit class-of-service]
user@switch# set congestion-notification-profile fcoe_p5_cnp input ieee-802.1 code-point
101 pfc mru 2240
user@switch# set congestion-notification-profile fcoe_p5_cnp input cable-length 150
user@switch# set congestion-notification-profile fcoe_p5_cnp output ieee-802.1 code-point
101 pfc flow-control-queue 5
```

8. Configure the CNP for interface **xe-0/0/22**. The input stanza enables PFC on the FCoE priorities (IEEE 802.1p code points **011** and **101**), sets the MRU value (2240 bytes), and sets the cable length value (100 meters). The output stanza configures flow control on output queues 3 and 5 on the FCoE priorities:

```
[edit class-of-service]
user@switch# set congestion-notification-profile fcoe_p3_p5_cnp input ieee-802.1
code-point 011 pfc mru 2240
user@switch# set congestion-notification-profile fcoe_p3_p5_cnp input ieee-802.1
code-point 101 pfc mru 2240
user@switch# set congestion-notification-profile fcoe_p3_p5_cnp input cable-length 100
```

```

user@switch# set congestion-notification-profile fcoe_p3_p5_cnp output ieee-802.1
code-point 011 pfc flow-control-queue 3
user@switch# set congestion-notification-profile fcoe_p3_p5_cnp output ieee-802.1
code-point 101 pfc flow-control-queue 5

```

9. Apply each CNP to the appropriate interface:

```

[edit class-of-service]
user@switch# set interfaces xe-0/0/20 congestion-notification-profile fcoe_p3_cnp
user@switch# set interfaces xe-0/0/21 congestion-notification-profile fcoe_p5_cnp
user@switch# set interfaces xe-0/0/22 congestion-notification-profile fcoe_p3_p5_cnp

```

10. Configure the DCBX FCoE application and application map to apply to interface xe-0/0/21. Interface xe-0/0/21 uses priority 5 (IEEE 802.1p code point 101) for FCoE traffic, which requires DCBX to exchange FCoE application protocol TLVs on priority 5 on interface xe-0/0/21. Configure an application named **fcoe\_p5\_app** for FCoE traffic (EtherType 0x8906) and configure an application map named **fcoe\_p5\_app\_map** to map the application to code point 101:

```

[edit]
user@switch# set applications application fcoe_p5_app ether-type 0x8906
user@switch# set policy-options application-maps fcoe_p5_app_map application
fcoe_p5_app code-points 101

```



**NOTE:** Interface xe-0/0/20 uses the default FCoE configuration (priority 3). DCBX exchanges protocol TLVs for the FCoE application by default, so you do not need to configure DCBX explicitly on interface xe-0/0/20.

11. Configure the DCBX FCoE application and application map to apply to interface xe-0/0/22. Interface xe-0/0/22 uses both priority 3 (IEEE 802.1p code point 011) and priority 5 for FCoE traffic, which requires DCBX to exchange FCoE application protocol TLVs on both priority 3 and priority 5. Configure an application named **fcoe\_all\_app** for FCoE traffic (EtherType 0x8906) and configure an application map named **fcoe\_all\_app\_map** to map the application to code points 011 and 101:

```

[edit]
user@switch# set applications application fcoe_all_app ether-type 0x8906
user@switch# set policy-options application-maps fcoe_all_app_map application
fcoe_all_app code-points [011 101]

```

12. Apply the application maps to the interfaces xe-0/0/21 and xe-0/0/22 so that DCBX exchanges FCoE application TLVs on the correct code points on each interface:

```

[edit]
user@switch# set protocols dcbx interface xe-0/0/21 application-map fcoe_p5_app_map
user@switch# set protocols dcbx interface xe-0/0/22 application-map fcoe_all_app_map

```

## Verification

To verify the configuration and proper operation of the lossless forwarding classes and IEEE 802.1p priorities, perform these tasks:

- [Verifying the Forwarding Class Configuration on page 391](#)
- [Verifying the Behavior Aggregate Classifier Configuration on page 391](#)



- [Verifying the PFC Flow Control Configuration \(CNP\) on page 392](#)
- [Verifying the Interface Configuration on page 394](#)
- [Verifying the DCBX Application Configuration on page 395](#)
- [Verifying the DCBX Application Map Configuration on page 395](#)
- [Verifying the DCBX Application Protocol Exchange Interface Configuration on page 395](#)

### Verifying the Forwarding Class Configuration

**Purpose** Verify that the lossless forwarding class **fcoe1** has been created.

**Action** Show the forwarding class configuration by using the operational command **show class-of-service forwarding class**:

```
user@switch# show class-of-service forwarding-class
```

| Forwarding class | ID | Queue | Policing priority | No-Loss  |
|------------------|----|-------|-------------------|----------|
| best-effort      | 0  | 0     | normal            | Disabled |
| fcoe             | 1  | 3     | normal            | Enabled  |
| no-loss          | 2  | 4     | normal            | Enabled  |
| network-control  | 3  | 7     | normal            | Disabled |
| fcoe1            | 4  | 5     | normal            | Enabled  |
| mcast            | 8  | 8     | normal            | Disabled |

**Meaning** The **show class-of-service forwarding-class** command shows all of the forwarding classes. The command output shows that the **fcoe1** forwarding class is configured on output queue **5** with the no-loss packet drop attribute enabled.

Because we did not explicitly configure the default forwarding classes, they remain in their default state, including the lossless configuration of the **fcoe** and **no-loss** default forwarding classes.

### Verifying the Behavior Aggregate Classifier Configuration

**Purpose** Verify that the three classifiers map the forwarding classes to the correct IEEE 802.1p code points (priorities) and packet loss priorities.

**Action** List the classifiers configured to support lossless FCoE transport using the operational mode command **show class-of-service classifier**:

```
user@switch> show class-of-service classifier
```

|                                                                |                  |               |
|----------------------------------------------------------------|------------------|---------------|
| Classifier: fcoe_p3, Code point type: ieee-802.1, Index: 13913 |                  |               |
| Code point                                                     | Forwarding class | Loss priority |
| 011                                                            | fcoe             | low           |
| Classifier: fcoe_p5, Code point type: ieee-802.1, Index: 63065 |                  |               |
| Code point                                                     | Forwarding class | Loss priority |
| 101                                                            | fcoe1            | low           |

```

Classifier: fcoe_p3_p5, Code point type: ieee-802.1, Index: 10964
Code point      Forwarding class      Loss priority
011             fcoe                  low
101             fcoe1                 low

```

**Meaning** The **show class-of-service classifier** command shows the IEEE 802.1p code points and the loss priorities that are mapped to the forwarding classes in each classifier. The command output shows that there are three classifiers, **fcoe\_p3**, **fcoe\_p5**, and **fcoe\_p3\_p5**.

Classifier **fcoe\_p3** maps code point **011** (priority 3) to default lossless forwarding class **fcoe** and a packet loss priority of **low**.

Classifier **fcoe\_p5** maps code point **101** (priority 5) to explicitly configured lossless forwarding class **fcoe1** and a packet loss priority of **low**.

Classifier **fcoe\_p3\_p5** maps code point **011** to default lossless forwarding class **fcoe** and a packet loss priority of **low**, and maps code point **101** to explicitly configured lossless forwarding class **fcoe1** and a packet loss priority of **low**.

### Verifying the PFC Flow Control Configuration (CNP)

**Purpose** Verify that PFC is enabled on the correct input priorities and that flow control is configured on the correct output queues and priorities in each CNP.

**Action** List the congestion notification profiles using the operational mode command **show class-of-service congestion-notification**:

```

user@switch> show class-of-service congestion-notification
Name: fcoe_p3_cnp, Index: 12037
Type: Input
Cable Length: 100 m
Priority  PFC      MRU
000      Disabled
001      Disabled
010      Disabled
011      Enabled   2240
100      Disabled
101      Disabled
110      Disabled
111      Disabled
Type: Output
Priority  Flow-Control-Queues
000
001      0
010      1
011      2
100      3
101      4
110      5
111      6

```

7

Name: fcoe\_p3\_p5\_cnp, Index: 46484

Type: Input

Cable Length: 100 m

| Priority | PFC      | MRU  |
|----------|----------|------|
| 000      | Disabled |      |
| 001      | Disabled |      |
| 010      | Disabled |      |
| 011      | Enabled  | 2240 |
| 100      | Disabled |      |
| 101      | Enabled  | 2240 |
| 110      | Disabled |      |
| 111      | Disabled |      |

Type: Output

| Priority | Flow-Control-Queues |
|----------|---------------------|
| 011      |                     |
|          | 3                   |
| 101      |                     |
|          | 5                   |

Name: fcoe\_p5\_cnp, Index: 12133

Type: Input

Cable Length: 150 m

| Priority | PFC      | MRU  |
|----------|----------|------|
| 000      | Disabled |      |
| 001      | Disabled |      |
| 010      | Disabled |      |
| 011      | Disabled |      |
| 100      | Disabled |      |
| 101      | Enabled  | 2240 |
| 110      | Disabled |      |
| 111      | Disabled |      |

Type: Output

| Priority | Flow-Control-Queues |
|----------|---------------------|
| 101      |                     |
|          | 5                   |

**Meaning** The **show class-of-service congestion-notification** command shows the input and output stanzas of the three CNPs. For CNP **fcoe\_p3\_cnp**, the input stanza shows that PFC is enabled on IEEE 802.1p code point **011** (priority 3), the MRU is **2240** bytes, and the cable length is **100** meters. The CNP output stanza shows the default mapping of priorities to output queues.



**NOTE:** By default, only queues 3 and 4 are enabled to respond to pause messages from the connected peer. For queue 3 to respond to pause messages, priority 3 (code point 011) must be enabled for PFC in the input stanza. For queue 4 to respond to pause messages, priority 4 (code point 100) must be enabled for PFC in the input stanza. In this example, only queue 3 responds to pause messages from the connected peer on interfaces that use CNP **fcoe\_p3\_cnp**, because the input stanza enables PFC priority 3 only.

For CNP **fcoe\_p3\_p5\_cnp**, the input stanza shows that PFC is enabled on code points **011** and **101**, the MRU is **2240** bytes on both priorities, and the cable length is **100** meters. The

CNP output stanza shows that output flow control is configured on queues **3** and **5** for code points **011** and **101**, respectively.

For CNP **fcoe\_p5\_cnp**, the input stanza shows that PFC is enabled on code point **101** (priority 5), the MRU is **2240** bytes, and the cable length is **150** meters. The CNP output stanza shows that output flow control is configured on queue **5** for code point **101** (priority 5).

---

### Verifying the Interface Configuration

**Purpose** Verify that the correct classifiers and congestion notification profiles are configured on the correct interfaces.

**Action** List the ingress interfaces using the operational mode commands **show configuration class-of-service interfaces xe-0/0/20**, **show configuration class-of-service interfaces xe-0/0/21**, and **show configuration class-of-service interfaces xe-0/0/22**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/20
congestion-notification-profile fcoe_p3_cnp;
unit 0 {
    classifiers {
        ieee-802.1p fcoe_p3;
    }
}
```

```
user@switch> show configuration class-of-service interfaces xe-0/0/21
congestion-notification-profile fcoe_p5_cnp;
unit 0 {
    classifiers {
        ieee-802.1p fcoe_p5;
    }
}
```

```
user@switch> show configuration class-of-service interfaces xe-0/0/22
congestion-notification-profile fcoe_p3_p5_cnp;
unit 0 {
    classifiers {
        ieee-802.1p fcoe_p3_p5;
    }
}
```

**Meaning** The **show configuration class-of-service interfaces xe-0/0/20** command shows that the congestion notification profile **fcoe\_p3\_cnp** is configured on the interface, and that the IEEE 802.1p classifier associated with the interface is **fcoe\_p3**.

The **show configuration class-of-service interfaces xe-0/0/21** command shows that the congestion notification profile **fcoe\_p5\_cnp** is configured on the interface, and that the IEEE 802.1p classifier associated with the interface is **fcoe\_p5**.

The **show configuration class-of-service interfaces xe-0/0/22** command shows that the congestion notification profile **fcoe\_p3\_p5\_cnp** is configured on the interface, and that the IEEE 802.1p classifier associated with the interface is **fcoe\_p3\_p5**.

### Verifying the DCBX Application Configuration

- Purpose** Verify that the two DCBX applications for FCoE are configured.
- Action** List the DCBX applications by using the configuration mode command **show applications**:
- ```
user@switch# show applications
application fcoe_all_app {
    ether-type 0x8906;

    application fcoe_p5_app {
        ether-type 0x8906;
```
- Meaning** The **show applications** configuration mode command shows all of the configured applications. The output shows that the application **fcoe\_all\_app** is configured with an EtherType of **0x8906** (the correct EtherType for FCoE traffic) and that the application **fcoe\_p5\_app** is also configured with an EtherType of **0x8906**.

### Verifying the DCBX Application Map Configuration

- Purpose** Verify that the application maps are configured.
- Action** List the application maps by using the configuration mode command **show policy-options application-maps**:
- ```
user@switch# show policy-options application-maps
fcoe_all_app_map {
    application fcoe_all_app code-points [011 101];
}
fcoe_p5_app_map {
    application fcoe_p5_app code-points 101;
}
```
- Meaning** The **show policy-options application-maps** configuration mode command lists all of the configured application maps and the applications that belong to each application map. The output shows that there are two application maps.
- Application map **fcoe\_all\_app\_map** consists of the application named **fcoe\_all\_app** mapped to IEEE 802.1p code points **011** (priority 3) and **101** (priority 5).
- Application map **fcoe\_p5\_app\_map** consists of the application named **fcoe\_p5\_app** mapped to IEEE 802.1p code point **101** (priority 5).

### Verifying the DCBX Application Protocol Exchange Interface Configuration

- Purpose** Verify that the application maps are applied to the correct interfaces.
- Action** List the application maps on each interface using the configuration mode command **show protocols dcbx**:
- ```
user@switch# show protocols dcbx
interface xe-0/0/21.0 {
    application-map fcoe_p5_app_map;
```

```
}  
interface xe-0/0/22.0 {  
    application-map fcoe_all_app_map;  
}
```

**Meaning** The `show protocols dcbx` configuration mode command lists the application map association with interfaces. The output shows that interface `xe-0/0/21.0` uses application map `fcoe_p5_app_map` and interface `xe-0/0/22.0` uses application map `fcoe_all_app_map`.



**NOTE:** Because interface `xe-0/0/20` uses the default lossless FCoE configuration, you do not configure application mapping to interface `xe-0/0/20`. The default configuration automatically exchanges application protocol TLVs for the default FCoE configuration on priority 3 (IEEE 802.1p code point 011).

**Related Documentation**

- [Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373](#)
- [Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic \(FCoE Transit Switch\) on page 365](#)
- [Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications \(FCoE and iSCSI\) on page 396](#)
- [Example: Configuring DCBX Application Protocol TLV Exchange on page 433](#)
- [Configuring CoS PFC \(Congestion Notification Profiles\) on page 301](#)
- [Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)

---

## Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications (FCoE and iSCSI)

---

Although the default configuration provides two lossless forwarding classes mapped to two different IEEE 802.1p priorities (code points), you can explicitly configure up to six lossless forwarding classes and map them to different priorities. You can support up to six different types of lossless traffic, and you can support the same type of traffic on different priorities in different parts of your converged network.

This example shows you how to configure two lossless forwarding classes for FCoE traffic and one lossless forwarding class for iSCSI traffic, and map the forwarding classes to three different priorities. (The converged Ethernet network includes two FCoE networks, each of which uses a different priority to identify FCoE traffic, and an iSCSI network.)

- [Requirements on page 397](#)
- [Overview on page 397](#)

- [Configuration on page 401](#)
- [Verification on page 405](#)

## Requirements

This example uses the following hardware and software components:

- One switch used as an FCoE transit switch
- Junos OS Release 12.3 or later for the QFX Series

## Overview

Some converged Ethernet networks support FCoE on more than one IEEE 802.1p priority and also require supporting other lossless traffic classes. Interfaces that carry multiple lossless forwarding classes need to support lossless behavior for the priorities mapped to those forwarding classes. To support the two FCoE forwarding classes and the iSCSI forwarding class used in this example, you need to configure:

- At least one lossless forwarding class for FCoE traffic (this example uses the default **fcoe** forwarding class as one of the two lossless FCoE forwarding classes, so we need to explicitly configure only one FCoE forwarding class)
- A lossless forwarding class for iSCSI traffic
- Behavior aggregate (BA) classifiers to map the lossless forwarding classes to the appropriate IEEE 802.1p code points (priorities) on each interface
- Congestion notification profiles (CNPs) for each interface to enable PFC on the FCoE and iSCSI code points at the interface ingress, and to configure PFC flow control on the interface egress so that the interface can respond to PFC messages received from the connected peer



**NOTE:** Configuring or changing PFC on an interface blocks the entire port until the PFC change is completed. After a PFC change is completed, the port is unblocked and traffic resumes. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

- DCBX applications and an application map to support DCBX application TLV exchange for the FCoE and iSCSI traffic on the configured lossless priorities. By default, DCBX is enabled on all Ethernet interfaces for FCoE, but only on priority 3 (IEEE 802.1p code point 011). To support DCBX application TLV exchange when you are not using the default configuration, you must configure all of the applications and map them to interfaces and priorities.

The priorities specified in the BA classifiers, CNPs, and DCBX application map must match, or the configuration does not work. You must specify the same lossless FCoE forwarding class in each configuration and use the same IEEE 802.1p code point (priority) so that the FCoE traffic is properly classified into flows and so that those flows receive lossless treatment.


## Topology

This example shows how to configure two lossless FCoE traffic classes and one lossless iSCSI traffic class, map them to three different priorities, and configure flow control to ensure lossless behavior for those priorities on the interfaces. This example uses four Ethernet interfaces, xe-0/0/31, xe-0/0/32, xe-0/0/33, and xe-0/0/34:

- Interface xe-0/0/31 handles FCoE traffic on priority 3 (IEEE 802.1p code point 011) and iSCSI traffic on priority 4 (code point 100).
- Interface xe-0/0/32 handles FCoE traffic on priority 5 (code point 101) and iSCSI traffic on priority 4.
- Interface xe-0/0/33 handles FCoE traffic on priority 3 and priority 5.
- Interface xe-0/0/34 handles iSCSI traffic on priority 4.

Figure 27 on page 398 shows the topology for this example, and Table 76 on page 398 shows the configuration components for this example.

**Figure 27: Topology of the Lossless FCoE and iSCSI Priorities Example**

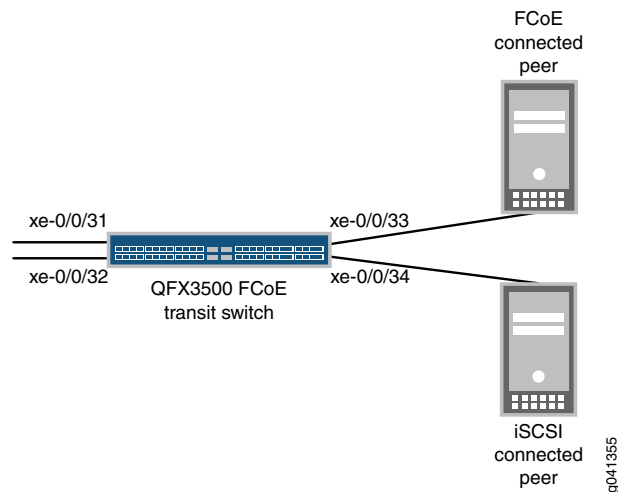

**Table 76: Components of the Lossless FCoE and iSCSI Priorities Configuration Topology**

Component	Settings
Hardware	One switch



**Table 76: Components of the Lossless FCoE and iSCSI Priorities Configuration Topology (*continued*)**

Component	Settings
Forwarding classes	<p>This example uses one explicitly configured lossless FCoE forwarding class, the default lossless FCoE forwarding class, and one explicitly configured iSCSI forwarding class.</p> <ul style="list-style-type: none"> <li>iSCSI forwarding class: Name—<b>iscsi</b> Queue mapping—queue 4 Packet drop attribute—<b>no-loss</b></li> <li>FCoE forwarding class (explicitly configured): Name—<b>fcoe1</b> Queue mapping—queue 5 Packet drop attribute—<b>no-loss</b></li> </ul> <p><b>NOTE:</b> A lossless forwarding class can be mapped to any output queue. However, because the <b>fcoe1</b> forwarding class uses priority 5 in this example, matching that traffic to a forwarding class that uses queue 5 creates a configuration that is logical and easy to map because the priority and the queue are identified by the same number.</p> <ul style="list-style-type: none"> <li>FCoE forwarding class (default) Name—<b>fcoe</b> The default <b>fcoe</b> forwarding class is mapped to priority 3 (IEEE 802.1p code point 011) and to output queue 3 with a packet drop attribute of <b>no-loss</b>.</li> </ul>
BA classifiers	<p>Each interface requires a different classifier because each interface handles a different subset of FCoE traffic.</p> <ul style="list-style-type: none"> <li>Interface xe-0/0/31 classifier: Name—<b>fcoe_p3_iscsi</b> FCoE priority mapping—Forwarding class <b>fcoe</b> mapped to code point <b>011</b> (IEEE 802.1p priority 3) and a packet loss priority of <b>low</b>. iSCSI priority mapping—Forwarding class <b>iscsi</b> mapped to code point <b>100</b> (priority 4) and a packet loss priority of <b>low</b>.</li> <li>Interface xe-0/0/32 classifier: Name—<b>fcoe_p5_iscsi</b> FCoE priority mapping—Forwarding class <b>fcoe1</b> mapped to code point <b>101</b> (IEEE 802.1p priority 5) and a packet loss priority of <b>low</b>. iSCSI priority mapping—Forwarding class <b>iscsi</b> mapped to code point <b>100</b> (priority 4) and a packet loss priority of <b>low</b>.</li> <li>Interface xe-0/0/33 classifier: Name—<b>fcoe_p3_p5</b> FCoE priority mapping—Forwarding class <b>fcoe1</b> mapped to code point <b>101</b> (priority 5) and a packet loss priority of <b>low</b>, and forwarding class <b>fcoe</b> mapped to code point <b>011</b> and a packet loss priority of <b>low</b>.</li> <li>Interface xe-0/0/34 classifier: Name—<b>iscsi_classifier</b> iSCSI priority mapping—Forwarding class <b>iscsi</b> mapped to code point <b>100</b> (priority 4) and a packet loss priority of <b>low</b>.</li> </ul>

**Table 76: Components of the Lossless FCoE and iSCSI Priorities Configuration Topology (*continued*)**

Component	Settings
PFC configuration (CNPs)	<p>Each interface requires a different CNP because each interface handles a different subset of FCoE and iSCSI traffic, and must pause that traffic on different priorities.</p> <ul style="list-style-type: none"> <li>Interface xe-0/0/31 CNP:  CNP name—<b>fcoe_p3_cnp</b>  Input CNP code points—<b>011</b> and <b>100</b>  MRU—2240 bytes for code point <b>011</b>, default value (2500 bytes) for code point <b>100</b>  Cable length—100 meters</li> </ul> <p><b>NOTE:</b> On interface xe-0/0/31, the FCoE forwarding class is mapped to queue 3 and priority 3 (code point 011), and the iSCSI forwarding class is mapped to queue 4 and priority 4 (code point 100). Therefore, interface xe-0/0/31 does not require an output CNP configuration because queue 3 and queue 4 are enabled for PFC flow control by default on code points 011 and 100, respectively.</p> <ul style="list-style-type: none"> <li>Interface xe-0/0/32 CNP:  CNP name—<b>fcoe_p5_cnp</b>  Input CNP code points—<b>100</b> and <b>101</b>  MRU—Default value (2500 bytes) for code point <b>100</b>, <b>2240</b> bytes for code point <b>101</b>  Cable length—150 meters  Output CNP code points—<b>100</b> and <b>101</b>  Output CNP flow control queues—<b>4</b> and <b>5</b></li> <li>Interface xe-0/0/33 CNP:  CNP name—<b>fcoe_p3_p5_cnp</b>  Input CNP code points—<b>011</b> and <b>101</b>  MRU—<b>2240</b> bytes (both priorities)  Cable length—100 meters  Output CNP code points—<b>011</b> and <b>101</b>  Output CNP flow control queues—<b>3</b> and <b>5</b></li> <li>Interface xe-0/0/34 CNP:  CNP name—<b>iscsi_cnp</b>  Input CNP code point—<b>100</b>  MRU—<b>2500</b> bytes (default value)  Cable length—100 meters</li> </ul> <p><b>NOTE:</b> On interface xe-0/0/34, the iSCSI forwarding class is mapped to queue 4 and priority 4 (code point 100). Interface xe-0/0/34 does not require an output CNP configuration because queue 4 is enabled for PFC flow control by default on code point 100.</p> <p><b>NOTE:</b> When you apply a CNP with an explicit output queue flow control configuration to an interface, the explicit CNP overwrites the default output CNP. The output queues that are enabled for PFC pause in the default configuration (queues 3 and 4) are not enabled for pause unless they are included in the explicitly configured output CNP.</p>

**Table 76: Components of the Lossless FCoE and iSCSI Priorities Configuration Topology (continued)**

Component	Settings
DCBX application mapping	<p>This example requires configuring applications for FCoE and iSCSI, including them in the same application map, and applying the application map to all four interfaces.</p> <p>Application map name—<b>dcbx_iscsi_fcoe_app_map</b></p> <ul style="list-style-type: none"> <li>FCoE application name—<b>fcoe_app</b> Application ether-type—<b>0x8906</b> Application map code points—<b>011</b> and <b>101</b></li> <li>iSCSI application name—<b>iscsi_app</b> Application protocol type—<b>tcp</b> Application destination port—<b>3260</b> Application map code point—<b>100</b></li> </ul> <p><b>NOTE:</b> LLDP and DCBX must be enabled on the interface. By default, LLDP and DCBX are enabled on all Ethernet interfaces.</p>



**NOTE:** This example does not include scheduling (bandwidth allocation) configuration or the FIP snooping configuration. This examples focuses only on the lossless FCoE priority configuration.

QFX10000 switches do not support FIP snooping. For this reason, QFX10000 switches cannot be used as FCoE access transit switches. QFX10000 switches can be used as intermediate or aggregation transit switches in the FCoE path, between an FCoE access transit switch that performs FIP snooping and an FCF.

## Configuration

### CLI Quick Configuration

To quickly configure two lossless FCoE forwarding classes and one lossless iSCSI forwarding class and map them to different priorities, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set class-of-service forwarding-classes class iscsi queue-num 4 no-loss
set class-of-service forwarding-classes class fcoe1 queue-num 5 no-loss
set class-of-service classifiers ieee-802.1 fcoe_p3_iscsi forwarding-class fcoe loss-priority low
code-points 011
set class-of-service classifiers ieee-802.1 fcoe_p3_iscsi forwarding-class iscsi loss-priority low
code-points 100
set class-of-service classifiers ieee-802.1 fcoe_p5_iscsi forwarding-class iscsi loss-priority low
code-points 100
set class-of-service classifiers ieee-802.1 fcoe_p5_iscsi forwarding-class fcoe1 loss-priority low
code-points 101
set class-of-service classifiers ieee-802.1 fcoe_p3_p5 forwarding-class fcoe loss-priority low
code-points 011
set class-of-service classifiers ieee-802.1 fcoe_p3_p5 forwarding-class fcoe1 loss-priority low
code-points 101
```

```

set class-of-service classifiers ieee-802.1 iscsi_classifier forwarding-class iscsi loss-priority low
code-points 100
set class-of-service interfaces xe-0/0/31 unit 0 classifiers ieee-802.1 fcoe_p3_iscsi
set class-of-service interfaces xe-0/0/32 unit 0 classifiers ieee-802.1 fcoe_p5_iscsi
set class-of-service interfaces xe-0/0/33 unit 0 classifiers ieee-802.1 fcoe_p3_p5set
class-of-service interfaces xe-0/0/34 unit 0 classifiers ieee-802.1 iscsi_classifier
set class-of-service congestion-notification-profile fcoe_p3_cnp input ieee-802.1 code-point 011
pfc mru 2240
set class-of-service congestion-notification-profile fcoe_p3_cnp input ieee-802.1 code-point 100
pfc
set class-of-service congestion-notification-profile fcoe_p3_cnp input cable-length 100
set class-of-service congestion-notification-profile fcoe_p5_cnp input ieee-802.1 code-point 100
pfc
set class-of-service congestion-notification-profile fcoe_p5_cnp input ieee-802.1 code-point 101
pfc mru 2240
set class-of-service congestion-notification-profile fcoe_p5_cnp input cable-length 150
set class-of-service congestion-notification-profile fcoe_p5_cnp output ieee-802.1 code-point
100 pfc flow-control-queue 4
set class-of-service congestion-notification-profile fcoe_p5_cnp output ieee-802.1 code-point
101 pfc flow-control-queue 5
set class-of-service congestion-notification-profile fcoe_p3_p5_cnp input ieee-802.1 code-point
011 pfc mru 2240
set class-of-service congestion-notification-profile fcoe_p3_p5_cnp input ieee-802.1 code-point
101 pfc mru 2240
set class-of-service congestion-notification-profile fcoe_p3_p5_cnp input cable-length 100
set class-of-service congestion-notification-profile fcoe_p3_p5_cnp output ieee-802.1 code-point
011 pfc flow-control-queue 3
set class-of-service congestion-notification-profile fcoe_p3_p5_cnp output ieee-802.1 code-point
101 pfc flow-control-queue 5
set class-of-service congestion-notification-profile iscsi_cnp input ieee-802.1 code-point 100 pfc
set class-of-service congestion-notification-profile iscsi_cnp input cable-length 100
set class-of-service interfaces xe-0/0/31 congestion-notification-profile fcoe_p3_cnp
set class-of-service interfaces xe-0/0/32 congestion-notification-profile fcoe_p5_cnp
set class-of-service interfaces xe-0/0/33 congestion-notification-profile fcoe_p3_p5_cnp
set class-of-service interfaces xe-0/0/34 congestion-notification-profile iscsi_cnp
set applications application iscsi_app protocol tcp destination-port 3260
set applications application fcoe_app ether-type 0x8906
set policy-options application-maps dcbx_iscsi_fcoe_app_map application iscsi_app code-points
100
set policy-options application-maps dcbx_iscsi_fcoe_app_map application fcoe_app code-points
[011 101]
set protocols dcbx interface xe-0/0/31 application-map dcbx_iscsi_fcoe_app_map
set protocols dcbx interface xe-0/0/32 application-map dcbx_iscsi_fcoe_app_map
set protocols dcbx interface xe-0/0/33 application-map dcbx_iscsi_fcoe_app_map
set protocols dcbx interface xe-0/0/34 application-map dcbx_iscsi_fcoe_app_map

```

### Step-by-Step Procedure

To configure two lossless forwarding classes for FCoE traffic and one lossless forwarding class for iSCSI traffic, classify the traffic into the three forwarding classes, configure congestion notification profiles to enable PFC on the FCoE priorities and output queues, and configure DCBX application protocol TLV exchange for traffic on both FCoE priorities:

1. Configure lossless forwarding classes **iscsi** for iSCSI traffic and **fcoe1** for FCoE traffic (this example uses the default **fcoe** forwarding class as the other lossless FCoE forwarding class) and map them to output queues:

```

[edit class-of-service]
user@switch# set forwarding-classes class iscsi queue-num 4 no-loss
user@switch# set forwarding-classes class fcoe1 queue-num 5 no-loss

```

2. Configure the ingress classifier (**fcoe\_p3\_iscsi**) for interface **xe-0/0/31**. The classifier maps the FCoE priority (code point **011**) to lossless FCoE forwarding class **fcoe** and the iSCSI priority (code point **100**) to lossless iSCSI forwarding class **iscsi**:

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 fcoe_p3_iscsi forwarding-class fcoe loss-priority low
code-points 011
user@switch# set ieee-802.1 fcoe_p3_iscsi forwarding-class iscsi loss-priority low
code-points 100
```

3. Configure the ingress classifier (**fcoe\_p5\_iscsi**) for interface **xe-0/0/32**. The classifier maps the FCoE priority (code point **101**) to lossless FCoE forwarding class **fcoe1** and the iSCSI priority (code point **100**) to lossless iSCSI forwarding class **iscsi**:

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 fcoe_p5_iscsi forwarding-class iscsi loss-priority low
code-points 100
user@switch# set ieee-802.1 fcoe_p5_iscsi forwarding-class fcoe1 loss-priority low
code-points 101
```

4. Configure the ingress classifier (**fcoe\_p3\_p5**) for interface **xe-0/0/33**. The classifier maps the two FCoE priorities (code points **011** and **101**) to lossless FCoE forwarding classes **fcoe** and **fcoe1**, respectively:

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 fcoe_p3_p5 forwarding-class fcoe loss-priority low code-points
011
user@switch# set ieee-802.1 fcoe_p3_p5 forwarding-class fcoe1 loss-priority low code-points
101
```

5. Configure the ingress classifier (**iscsi\_classifier**) for interface **xe-0/0/34**. The classifier maps the iSCSI priority (code point **101**) to lossless iSCSI forwarding class **iscsi**:

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 iscsi_classifier forwarding-class iscsi loss-priority low
code-points 100
```

6. Apply each classifier to the appropriate interface:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/31 unit 0 classifiers ieee-802.1 fcoe_p3_iscsi
user@switch# set interfaces xe-0/0/32 unit 0 classifiers ieee-802.1 fcoe_p5_iscsi
user@switch# set interfaces xe-0/0/33 unit 0 classifiers ieee-802.1 fcoe_p3_p5
user@switch# set interfaces xe-0/0/34 unit 0 classifiers ieee-802.1 iscsi_classifier
```

7. Configure the CNP input stanza for interface **xe-0/0/31** to enable PFC on the FCoE and iSCSI priorities that the interface handles (code points **011** and **100**), set the MRU value for the FCoE traffic (2240 bytes), and set the cable length value (100 meters). No output stanza is needed because queues 3 and 4 are paused by default on priorities 3 and 4, respectively, and we are not explicitly configuring output queue flow control for any other queues.

```
[edit class-of-service]
user@switch# set congestion-notification-profile fcoe_p3_cnp input ieee-802.1 code-point
011 pfc mru 2240
user@switch# set congestion-notification-profile fcoe_p3_cnp input ieee-802.1 code-point
100 pfc
user@switch# set congestion-notification-profile fcoe_p3_cnp input cable-length 100
```

8. Configure the CNP for interface xe-0/0/32. The input stanza enables PFC on the FCoE priority (code point 101), sets the MRU value for FCoE traffic (2240 bytes), enables PFC on the iSCSI priority (code point 100), and sets the cable length value (150 meters). The output stanza configures flow control on output queue 5 on the FCoE priority and on output queue 4 on the iSCSI priority:

```
[edit class-of-service]
user@switch# set congestion-notification-profile fcoe_p5_cnp input ieee-802.1 code-point
100 pfc
user@switch# set congestion-notification-profile fcoe_p5_cnp input ieee-802.1 code-point
101 pfc mru 2240
user@switch# set congestion-notification-profile fcoe_p5_cnp input cable-length 150
user@switch# set congestion-notification-profile fcoe_p5_cnp output ieee-802.1 code-point
100 pfc flow-control-queue 4
user@switch# set congestion-notification-profile fcoe_p5_cnp output ieee-802.1 code-point
101 pfc flow-control-queue 5
```

9. Configure the CNP for interface xe-0/0/33. The input stanza enables PFC on the FCoE priorities (IEEE 802.1p code points 011 and 101), sets the MRU value (2240 bytes), and sets the cable length value (100 meters). The output stanza configures flow control on output queues 3 and 5 on the FCoE priorities:

```
[edit class-of-service]
user@switch# set congestion-notification-profile fcoe_p3_p5_cnp input ieee-802.1
code-point 011 pfc mru 2240
user@switch# set congestion-notification-profile fcoe_p3_p5_cnp input ieee-802.1
code-point 101 pfc mru 2240
user@switch# set congestion-notification-profile fcoe_p3_p5_cnp input cable-length 100
user@switch# set congestion-notification-profile fcoe_p3_p5_cnp output ieee-802.1
code-point 011 pfc flow-control-queue 3
user@switch# set congestion-notification-profile fcoe_p3_p5_cnp output ieee-802.1
code-point 101 pfc flow-control-queue 5
```

10. Configure the CNP input stanza for interface xe-0/0/34 to enable PFC on the iSCSI priority (code point 100) and set the cable length value (100 meters). No output stanza is needed because queue 4 is paused by default on priority 4, and we are not explicitly configuring output queue flow control for any other queues.

```
[edit class-of-service]
user@switch# set congestion-notification-profile iscsi_cnp input ieee-802.1 code-point
100 pfc
user@switch# set congestion-notification-profile iscsi_cnp input cable-length 100
```

11. Apply each CNP to the appropriate interface:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/31 congestion-notification-profile fcoe_p3_cnp
user@switch# set interfaces xe-0/0/32 congestion-notification-profile fcoe_p5_cnp
user@switch# set interfaces xe-0/0/33 congestion-notification-profile fcoe_p3_p5_cnp
user@switch# set interfaces xe-0/0/34 congestion-notification-profile iscsi_cnp
```

12. Configure the DCBX applications for FCoE and iSCSI to map to the interfaces so that DCBX can exchange application protocol TLVs on the IEEE 802.1p priorities used for FCoE and iSCSI traffic:

```
[edit]
user@switch# set applications application fcoe_app ether-type 0x8906
user@switch# set applications application iscsi_app protocol tcp destination-port 3260
```

13. Configure a DCBX application map to map the FCoE and iSCSI applications to the correct priorities:

```
[edit]
user@switch# set policy-options application-maps dcbx_iscsi_fcoe_app_map application
fcoe_app code-points [011 101]
user@switch# set policy-options application-maps dcbx_iscsi_fcoe_app_map application
iscsi_app code-points 100
```

14. Apply the application map to the interfaces so that DCBX exchanges FCoE application TLVs on the correct code points:

```
[edit]
user@switch# set protocols dcbx interface xe-0/0/31 application-map
dcbx_iscsi_fcoe_app_map
user@switch# set protocols dcbx interface xe-0/0/32 application-map
dcbx_iscsi_fcoe_app_map
user@switch# set protocols dcbx interface xe-0/0/33 application-map
dcbx_iscsi_fcoe_app_map
user@switch# set protocols dcbx interface xe-0/0/34 application-map
dcbx_iscsi_fcoe_app_map
```

## Verification

To verify the configuration and proper operation of the lossless forwarding classes and IEEE 802.1p priorities, perform these tasks:

- [Verifying the Forwarding Class Configuration on page 405](#)
- [Verifying the Behavior Aggregate Classifier Configuration on page 406](#)
- [Verifying the PFC Flow Control Configuration \(CNP\) on page 407](#)
- [Verifying the Interface Configuration on page 409](#)
- [Verifying the DCBX Application Configuration on page 410](#)
- [Verifying the DCBX Application Map Configuration on page 411](#)
- [Verifying the DCBX Application Protocol Exchange Interface Configuration on page 411](#)

### Verifying the Forwarding Class Configuration

**Purpose** Verify that the lossless forwarding classes **iscsi** and **fcoe1** have been created and that the default lossless forwarding class **fcoe** is still enabled for lossless transport.

**Action** Show the forwarding class configuration by using the operational command **show class-of-service forwarding-class**:

```
user@switch> show class-of-service forwarding-class
```

Forwarding class	ID	Queue	Policing priority	No-Loss
best-effort	0	0	normal	Disabled
fcoe	1	3	normal	Enabled
iscsi	2	4	normal	Enabled
network-control	3	7	normal	Disabled
fcoe1	4	5	normal	Enabled
mcast	8	8	normal	Disabled

**Meaning** The **show class-of-service forwarding-class** command shows all of the forwarding classes. The command output shows that the **iscsi** and **fcoe1** forwarding classes are configured on output queues 4 and 5, respectively, with the no-loss packet drop attribute enabled.

Because we did not explicitly configure the default **fcoe** forwarding class, it remains in its default state (lossless configuration).

### Verifying the Behavior Aggregate Classifier Configuration

**Purpose** Verify that the four classifiers map the forwarding classes to the correct IEEE 802.1p code points (priorities) and packet loss priorities.

**Action** List the classifiers configured to support lossless FCoE transport using the operational mode command **show class-of-service classifier**:

```
user@switch> show class-of-service classifier
```

Classifier: fcoe\_p3\_iscsi, Code point type: ieee-802.1, Index: 13915

Code point	Forwarding class	Loss priority
011	fcoe	low
100	iscsi	low

Classifier: fcoe\_p5\_iscsi, Code point type: ieee-802.1, Index: 62035

Code point	Forwarding class	Loss priority
100	iscsi	low
101	fcoe1	low

Classifier: fcoe\_p3\_p5, Code point type: ieee-802.1, Index: 17774

Code point	Forwarding class	Loss priority
011	fcoe	low
101	fcoe1	low

Classifier: iscsi\_classifier, Code point type: ieee-802.1, Index: 31635

Code point	Forwarding class	Loss priority
100	iscsi	low

**Meaning** The **show class-of-service classifier** command shows the IEEE 802.1p code points and the loss priorities that are mapped to the forwarding classes in each classifier. The



command output shows that there are four classifiers, **fcoe\_p3\_iscsi**, **fcoe\_p5\_iscsi**, **fcoe\_p3\_p5**, and **iscsi\_classifier**.

Classifier **fcoe\_p3\_iscsi** maps code point **011** (priority 3) to default lossless forwarding class **fcoe** and a packet loss priority of **low**, and code point **100** (priority 4) to explicitly configured lossless forwarding class **iscsi**.

Classifier **fcoe\_p5\_iscsi** maps code point **100** to explicitly configured forwarding class **iscsi** and a packet loss priority of **low**, and code point **101** (priority 5) to explicitly configured lossless forwarding class **fcoe1** and a packet loss priority of **low**.

Classifier **fcoe\_p3\_p5** maps code point **011** to default lossless forwarding class **fcoe** and a packet loss priority of **low**, and maps code point **101** to explicitly configured lossless forwarding class **fcoe1** and a packet loss priority of **low**.

Classifier **iscsi\_classifier** maps code point **100** to explicitly configured forwarding class **iscsi** and a packet loss priority of **low**.

### Verifying the PFC Flow Control Configuration (CNP)

**Purpose** Verify that PFC is enabled on the correct input priorities and that flow control is configured on the correct output queues and priorities in each CNP.

**Action** List the congestion notification profiles using the operational mode command **show class-of-service congestion-notification**:

```
user@switch> show class-of-service congestion-notification
```

```
Name: fcoe_p3_cnp, Index: 12037
```

```
Type: Input
```

```
Cable Length: 100 m
```

Priority	PFC	MRU
000	Disabled	
001	Disabled	
010	Disabled	
011	Enabled	2240
100	Enabled	9216
101	Disabled	
110	Disabled	
111	Disabled	

```
Type: Output
```

Priority	Flow-Control-Queues
000	0
001	1
010	2
011	3
100	4
101	5
110	6
111	

7

Name: fcoe\_p3\_p5\_cnp, Index: 46484

Type: Input

Cable Length: 100 m

Priority	PFC	MRU
000	Disabled	
001	Disabled	
010	Disabled	
011	Enabled	2240
100	Disabled	
101	Enabled	2240
110	Disabled	
111	Disabled	

Type: Output

Priority	Flow-Control-Queues
011	
	3
101	
	5

Name: fcoe\_p5\_cnp, Index: 12133

Type: Input

Cable Length: 150 m

Priority	PFC	MRU
000	Disabled	
001	Disabled	
010	Disabled	
011	Disabled	
100	Enabled	9216
101	Enabled	2240
110	Disabled	
111	Disabled	

Type: Output

100	
	4
101	
	5

Name: iscsi\_cnp, Index: 19342

Type: Input

Cable Length: 100 m

Priority	PFC	MRU
000	Disabled	
001	Disabled	
010	Disabled	
011	Disabled	
100	Enabled	9216
101	Disabled	
110	Disabled	
111	Disabled	

Type: Output

Priority	Flow-Control-Queues
000	
	0
001	
	1
010	
	2
011	
	3

100	4
101	5
110	6
111	7

**Meaning** The `show class-of-service congestion-notification` command shows the input and output stanzas of the four CNPs.

For CNP `fcoe_p3_cnp`, the input stanza shows that PFC is enabled on IEEE 802.1p code point `011` (priority 3) with an MRU of `2240` bytes, and cable length of `100` meters. The input stanza also shows that PFC is enabled on code point `100` (priority 4) with the default MRU value of `9216` bytes. The CNP output stanza shows the default mapping of priorities to output queues because no explicit output CNP is configured.



**NOTE:** By default, only queues 3 and 4 are enabled respond to pause messages from the connected peer. For queue 3 to respond to pause messages, priority 3 (code point `011`) must be enabled for PFC in the input stanza. For queue 4 to respond to pause messages, priority 4 (code point `100`) must be enabled for PFC in the input stanza. In this example, only queues 3 and 4 respond to pause messages from the connected peer on interfaces that use CNP `fcoe_p3_cnp` because the input stanza enables PFC only on priorities 3 and 4.

For CNP `fcoe_p3_p5_cnp`, the input stanza shows that PFC is enabled on code points `011` and `101` (priority 5), the MRU is `2240` bytes on both priorities, and the cable length is `100` meters. The CNP output stanza shows that output flow control is configured on queues `3` and `5` for code points `011` and `101`, respectively.

For CNP `fcoe_p5_cnp`, the input stanza shows that PFC is enabled on code points `100` and `101`. The MRU for code point `101` (FCoE traffic) is `2240` bytes and the MRU for code point `100` is `9216`. The interface cable length is `150` meters. The CNP output stanza shows that output flow control is configured on queue `4` for code point `100` and on queue `5` for code point `101`.

For CNP `iscsi_cnp`, the input stanza shows that PFC is enabled on code point `100`, the MRU value is `9216` bytes, and the interface cable length is `100` meters. The CNP output stanza shows the default mapping of priorities to output queues because no explicit output CNP is configured.

### Verifying the Interface Configuration

**Purpose** Verify that the correct classifiers and congestion notification profiles are configured on the correct interfaces.

**Action** List the ingress interfaces using the operational mode commands **show configuration class-of-service interfaces xe-0/0/31**, **show configuration class-of-service interfaces xe-0/0/32**, **show configuration class-of-service interfaces xe-0/0/33**, and **show configuration class-of-service interfaces xe-0/0/34**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/31
congestion-notification-profile fcoe_p3_cnp;
unit 0 {
    classifiers {
        ieee-802.1 fcoe_p3_iscsi;
    }
}

user@switch> show configuration class-of-service interfaces xe-0/0/32
congestion-notification-profile fcoe_p5_cnp;
unit 0 {
    classifiers {
        ieee-802.1 fcoe_p5_iscsi;
    }
}

user@switch> show configuration class-of-service interfaces xe-0/0/33
congestion-notification-profile fcoe_p3_p5_cnp;
unit 0 {
    classifiers {
        ieee-802.1 fcoe_p3_p5;
    }
}

user@switch> show configuration class-of-service interfaces xe-0/0/34
congestion-notification-profile iscsi_cnp;
unit 0 {
    classifiers {
        ieee-802.1 iscsi_classifier;
    }
}
```

**Meaning** The **show configuration class-of-service interfaces xe-0/0/31** command shows that the congestion notification profile **fcoe\_p3\_cnp** is configured on the interface, and that the IEEE 802.1p classifier associated with the interface is **fcoe\_p3\_iscsi**.

The **show configuration class-of-service interfaces xe-0/0/32** command shows that the congestion notification profile **fcoe\_p5\_cnp** is configured on the interface, and that the IEEE 802.1p classifier associated with the interface is **fcoe\_p5\_iscsi**.

The **show configuration class-of-service interfaces xe-0/0/33** command shows that the congestion notification profile **fcoe\_p3\_p5\_cnp** is configured on the interface, and that the IEEE 802.1p classifier associated with the interface is **fcoe\_p3\_p5**.

The **show configuration class-of-service interfaces xe-0/0/34** command shows that the congestion notification profile **iscsi\_cnp** is configured on the interface, and that the IEEE 802.1p classifier associated with the interface is **iscsi\_classifier**.

---

### Verifying the DCBX Application Configuration

**Purpose** Verify that the DCBX applications for FCoE and iSCSI are configured.

**Action** List the DCBX applications by using the configuration mode command **show applications**:

```
user@switch# show applications
application iscsi_app {
    protocol tcp;
    destination-port 3260;
}
application fcoe_app {
    ether-type 0x8906;
```

**Meaning** The **show applications** configuration mode command shows all of the configured applications. The output shows that the application **iscsi\_app** is configured with a protocol value of **tcp** and a destination port value of **3260**, and that the application **fcoe\_app** is configured with an EtherType of **0x8906** (the correct EtherType for FCoE traffic).

### Verifying the DCBX Application Map Configuration

**Purpose** Verify that the application map is configured.

**Action** List the application maps by using the configuration mode command **show policy-options application-maps**:

```
user@switch# show policy-options application-maps
dcbx-iscsi-fcoe-app-map {
    application iscsi_app code-points 100;
    application fcoe_app code-points [011 101];
}
```

**Meaning** The **show policy-options application-maps** configuration mode command lists all of the configured application maps and the applications that belong to each application map. The output shows that there is one application map named **dcbx-iscsi-fcoe\_app\_map**. It consists of the application **iscsi\_app** mapped to code point **100** and the application **fcoe\_app** mapped to code points **011** and **101**.

### Verifying the DCBX Application Protocol Exchange Interface Configuration

**Purpose** Verify that the application maps are applied to the correct interfaces.

**Action** List the application maps on each interface using the configuration mode command **show protocols dcbx**:

```
user@switch# show protocols dcbx
interface xe-0/0/31.0 {
    application-map dcbx-iscsi-fcoe-app-map;
}
interface xe-0/0/32.0 {
    application-map dcbx-iscsi-fcoe-app-map;
}
interface xe-0/0/33.0 {
    application-map dcbx-iscsi-fcoe-app-map;
}
interface xe-0/0/34.0 {
    application-map dcbx-iscsi-fcoe-app-map;
}
```

<b>Meaning</b>	The <b>show protocols dcbx</b> configuration mode command lists the application map association with interfaces. The output shows that all four interfaces use the application map <b>dcbx-iscsi-fcoe-app-map</b> .
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373</a></li><li>• <a href="#">Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic (FCoE Transit Switch) on page 365</a></li><li>• <a href="#">Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382</a></li><li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange on page 433</a></li><li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li><li>• <a href="#">Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269</a></li><li>• <a href="#">Understanding CoS Flow Control (Ethernet PAUSE and PFC) on page 289</a></li></ul>

---

## Understanding DCBX

Data Center Bridging Capability Exchange protocol (DCBX) is an extension of Link Layer Data Protocol (LLDP). If you disable LLDP on an interface, that interface cannot run DCBX. If you attempt to enable DCBX on an interface on which LLDP is disabled, the configuration commit operation fails. Data center bridging (DCB) devices use DCBX to exchange configuration information with directly connected peers.



Video: [What is DCBX Protocol?](#)

---

This topic describes:

- [DCBX Basics on page 412](#)
- [DCBX Modes and Support on page 414](#)
- [DCBX Attribute Types on page 416](#)
- [DCBX Application Protocol TLV Exchange on page 418](#)
- [DCBX and PFC on page 419](#)
- [DCBX and ETS on page 419](#)

### DCBX Basics

DCBX can:

- Discover the DCB capabilities of peers.
- Detect DCB feature misconfiguration or mismatches between peers.
- Configure DCB features on peers.

You can configure DCBX operation for priority-based flow control (PFC), Layer 2 and Layer 4 applications such as FCoE and iSCSI, and ETS. DCBX is enabled or disabled on a per-interface basis.



**NOTE:** The Juniper Networks QFX10000 does not support enhanced transmission selection (ETS) hierarchical scheduling. Use port scheduling to manage bandwidth on QFX10000 switches.

By default, for PFC and ETS, DCBX automatically negotiates administrative state and configuration with each interface's connected peer. To enable DCBX negotiation for applications, you must configure the applications, map them to IEEE 802.1p code points in an application map, and apply the application map to interfaces.

The FCoE application only needs to be included in an application map when you want an interface to exchange type, length, and values (TLVs) for other applications in addition to FCoE. If FCoE is the only application you want an interface to advertise, then you do not need to use an application map. For ETS, DCBX pushes the switch configuration to peers if they are set to learn the configuration from the switch (unless you disable sending the ETS recommendation TLV on interfaces in IEEE DCBX mode).

You can override the default behavior for PFC, for ETS, or for all applications mapped to an interface by turning off autonegotiation to force an interface to enable or disable that feature. You can also disable DCBX autonegotiation for applications on an interface by excluding those applications from the application map you apply to that interface or by deleting the application map from the interface.

The default autonegotiation behavior for applications that are mapped to an interface is:

- DCBX is enabled on the interface if the connected peer device also supports DCBX.
- DCBX is disabled on the interface if the connected peer device does not support DCBX.

During negotiation of capabilities, the switch can push the PFC configuration to an attached peer if the peer is configured as “willing” to learn the PFC configuration from other peers. The Juniper Networks switch does not support self autoprovisioning and does not change its configuration during autonegotiation to match the peer configuration. (The Juniper switch is not “willing” to learn the PFC configuration from peers.)



**NOTE:** When a port with DCBX enabled begins to exchange type, length, and value (TLV) entries, optional LLDP TLVs on that port are not advertised to neighbors, so that the switch can interoperate with a wider variety of converged network adapters (CNAs) and Layer 2 switches that support DCBX.

## DCBX Modes and Support

This section describes DCBX support:

- [DCBX Modes \(Versions\) on page 414](#)
- [Autonegotiation on page 416](#)
- [CNA Support for DCBX Modes on page 416](#)
- [Interface Support for DCBX on page 416](#)

### DCBX Modes (Versions)

The two most common DCBX modes are supported:

- **IEEE DCBX**—The newest DCBX version. Different TLVs have different subtypes (for example, the subtype for the ETS configuration TLV is 9); the IEEE DCBX Organizationally Unique Identifier (OUI) is 0x0080c2.
- **DCBX version 1.01**—The Converged Enhanced Ethernet (CEE) version of DCBX. It has a subtype of 2 and an OUI of 0x001b21.

IEEE DCBX and DCBX version 1.01 differ mainly in frame format. DCBX version 1.01 uses one TLV that includes all DCBX attribute information, which is sent as sub-TLVs. IEEE DCBX uses a unique TLV for each DCB attribute.



**NOTE:** The switch does not support pre-CEE (pre-DCB) DCBX versions. Unsupported older versions of DCBX have a subtype of 1 and an OUI of 0x001b21. The switch drops LLDP frames that contain pre-CEE DCBX TLVs.

[Table 77 on page 414](#) summarizes the differences between IEEE DCBX and DCBX version 1.01, including show command output:

**Table 77: Summary of Differences Between IEEE DCBX and DCBX Version 1.01**

Characteristic	IEEE DCBX	DCBX Version 1.01
OUI	0x0080c2	0x001b21
Frame Format	Sends a separate, unique TLV for each DCBX attribute. For example, IEEE DCBX uses separate TLVs for ETS, PFC, and each application. Configuration and Recommendation information is sent in different TLVs	Sends one TLV that includes all DCBX attribute information organized in sub-TLVs. The “willing” bit determines whether or not an interface can change its configuration to match the connected peer.
Symmetric/asymmetric configuration with peer	Asymmetric or symmetric	Symmetric only



Table 77: Summary of Differences Between IEEE DCBX and DCBX Version 1.01 (*continued*)

Characteristic	IEEE DCBX	DCBX Version 1.01
Differences in the <b>show dcbx interface interface-name</b> operational command	<ul style="list-style-type: none"> <li>Synchronization information is not shown because symmetric configuration is not required.</li> <li>Operational state information is not shown because the operational states do not have to be symmetric.</li> <li>TLV type is shown because unique TLVs are sent for each DCBX attribute.</li> <li>ETS peer Configuration TLV and Recommendation TLV information is shown separately because they are different TLVs.</li> </ul>	<ul style="list-style-type: none"> <li>Synchronization information is shown because symmetric configuration is required.</li> <li>Operational state information is shown because the operational states do have to be symmetric.</li> <li>TLV type is not shown because one TLV is used for all attribute information.</li> <li>Recommendation TLV is not sent (DCBX Version 1.01 uses the "willing" bit to determine whether or not an interface uses the peer interface configuration).</li> </ul>

For more information about how each DCBX mode exchanges TLVs, see the following specifications:

- For DCBX version 1.01—<http://www.ieee802.org/1/files/public/docs2008/az-wedlar-dcb-capability-exchange-discovery-protocol-108-v1.01.pdf>
- For IEEE DCBX—<http://www.ieee802.org/1/files/private/az-drafts/d2/802-1az-d2-4.pdf>



**NOTE:** As of Junos OS Release 12.2, this document is located in a private area of the IEEE website, and access requires a password from the IEEE organization. If you are not an IEEE member, you might not be able to access this document until it moves to the public area of the IEEE website.

You can configure interfaces to use the following DCBX modes:

- IEEE DCBX—The interface uses IEEE DCBX regardless of the configuration on the connected peer.
- DCBX version 1.01—The interface uses DCBX version 1.01 regardless of the configuration on the connected peer.
- Autonegotiation—The interface automatically negotiates with the connected peer to determine the DCBX version the peers use. Autonegotiation is the default DCBX mode.

If you configure a DCBX mode on an interface, the interface ignores DCBX protocol data units (PDUs) it receives from the connected peer if the PDUs do not match the DCBX version configured on the interface. For example, if you configure an interface to use IEEE DCBX and the connected peer sends DCBX version 1.01 LLDP PDUs, the interface ignores the version 1.01 PDUs. If you configure an interface to use DCBX version 1.01 and the peer sends IEEE DCBX LLDP PDUs, the interface ignores the IEEE DCBX PDUs.



**NOTE:** On interfaces that use the IEEE DCBX mode, the `show dcbx neighbors interface interface-name` operational command does not include application, PFC, or ETS operational state in the output.

---

### Autonegotiation

Autonegotiation is the default DCBX mode. Each interface automatically negotiates with its connected peer to determine the DCBX version that both interfaces use to exchange DCBX information.

When an interface connects to its peer interface, the interface advertises IEEE DCBX TLVs to the peer. If the interface receives one IEEE DCBX PDU from the peer, the interface sets the DCBX mode as IEEE DCBX. If the interface receives three DCBX version 1.01 TLVs from the peer, the interface sets DCBX version 1.01 as the DCBX mode.

Autonegotiation works slightly differently on standalone switches compared to QFabric systems:

- Standalone switches—When an interface connects to its peer interface, the interface advertises IEEE DCBX TLVs to the peer. If the interface receives an IEEE DCBX TLV from the peer, the interface sets IEEE DCBX as the DCBX mode. If the interface receives three consecutive DCBX version 1.01 TLVs from the peer, the interface sets DCBX version 1.01 as the DCBX mode.
- QFabric system—When an interface connects to its peer interface, the interface advertises DCBX version 1.01 TLVs to the peer. If the interface receives an IEEE DCBX TLVs from the peer, the interface sets IEEE DCBX as the DCBX mode. If the interface receives three consecutive DCBX version 1.01 TLVs from the peer, the interface retains DCBX version 1.01 as the DCBX mode.



**NOTE:** If the link flaps or the LLDP process restarts, the interface starts the autonegotiation process again. The interface does not use the last received DCBX communication mode.

---

### CNA Support for DCBX Modes

Different CNA vendors support different versions and capabilities of DCBX. The DCBX configuration you use on switch interfaces depends on the DCBX features that the CNAs in your network support.

---

### Interface Support for DCBX

You can configure DCBX on 10-Gigabit Ethernet interfaces and on link aggregation group (LAG) interfaces whose member interfaces are all 10-Gigabit Ethernet interfaces.

## DCBX Attribute Types

DCBX has three attribute types:

- **Informational**—These attributes are exchanged using LLDP, but do not affect DCBX state or operation; they only communicate information to the peer. For example, application priority TLVs are informational TLVs.
- **Asymmetric**—The values for these types of attributes do not have to be the same on the connected peer interfaces. Peers exchange asymmetric attributes when the attribute values can differ on each peer interface. The peer interface configurations might match or they might differ. For example, ETS Configuration and Recommendation TLVs are asymmetric TLVs.
- **Symmetric**—The intention is that the values for these types of attributes should be the same on both of the connected peer interfaces. Peer interfaces exchange symmetric attributes to ensure symmetric DCBX configuration for those attributes. For example, PFC Configuration TLVs are symmetric TLVs.

The following sections describe asymmetric and symmetric DCBX attributes:

- [Asymmetric Attributes on page 417](#)
- [Symmetric Attributes on page 417](#)

---

### Asymmetric Attributes

DCBX passes asymmetric attributes between connected peer interfaces to communicate parameter information about those attributes (features). The resulting configuration for an attribute might be different on each peer, so the parameters configured on one interface might not match the parameters on the connected peer interface.

There are two types of asymmetric attribute TLVs:

- **Configuration TLV**—Configuration TLVs communicate the current operational state and the state of the “willing” bit. The “willing” bit communicates whether or not the interface is willing to accept and use the configuration from the peer interface. If an interface is “willing,” the interface uses the configuration it receives from the peer interface. (The peer interface configuration can override the configuration on the “willing” interface.) If an interface is “not willing”, the configuration on the interface cannot be overridden by the peer interface configuration.
- **Recommendation TLV**—Recommendation TLVs communicate the parameters the interface recommends that the connected peer interface should use. When an interface sends a Recommendation TLV, if the connected peer is “willing,” the connected peer changes its configuration to match the parameters in the Recommendation TLV.

---

### Symmetric Attributes

DCBX passes symmetric attributes between connected peer interfaces to communicate parameter information about those attributes (features), with the objective that both interfaces should use the same configuration. The intent is that the parameters configured on one interface should match the parameters on the connected peer interface.

There is one type of symmetric attribute TLV, the Configuration TLV. As with asymmetric attributes, symmetric attribute Configuration TLVs communicate the current operational state and the state of the “willing” bit. “Willing” interfaces use the peer interface parameter

values for the attribute. (The attribute configuration of the peer overrides the configuration on the “willing” interface.)

## DCBX Application Protocol TLV Exchange

DCBX advertises the switch's capabilities for Layer 2 applications such as FCoE and Layer 4 applications such as iSCSI:

- [Application Protocol TLV Exchange on page 418](#)
- [FCoE Application Protocol TLV Exchange on page 418](#)
- [Disabling Application Protocol TLV Exchange on page 419](#)

---

### Application Protocol TLV Exchange

For all applications, DCBX advertises the application's state and IEEE 802.1p code points on the interfaces to which the application is mapped. If an application is not mapped to an interface, that interface does not advertise the application's TLVs. There is an exception for FCoE application protocol TLV exchange when FCoE is the only application you want DCBX to advertise on an interface.

---

### FCoE Application Protocol TLV Exchange

Protocol TLV exchange for the FCoE application depends on whether FCoE is the only application you want the interface to advertise or whether you want the interface to exchange other application TLVs in addition to FCoE TLVs.

If FCoE is the only application you want DCBX to advertise on an interface, DCBX exchanges FCoE application protocol TLVs by default if the interface:

- Carries FCoE traffic (traffic mapped by CoS configuration to the FCoE forwarding class)
- Has a congestion notification profile with PFC enabled on the FCoE priority (IEEE 802.1p code point)
- Does *not* have an application map



**NOTE:** If no CoS configuration for FCoE is mapped to an interface, that interface does not exchange FCoE application protocol TLVs.

---

If you want DCBX to advertise FCoE and other applications on an interface, you must specify all of the applications, including FCoE, in an application map, and apply the application map to the desired interfaces.

---



**NOTE:** If an application map is applied to an interface, the FCoE application must be explicitly configured in the application map, or the interface does not exchange FCoE TLVs.

---

When DCBX advertises the FCoE application, it advertises the FCoE state and IEEE 802.1p code points. If a peer device connected to a switch interface does not support FCoE,

DCBX uses autonegotiation to mark the interface as “FCoE down,” and FCoE is disabled on that interface.

### Disabling Application Protocol TLV Exchange

---

To disable DCBX application protocol exchange for all applications on an interface, issue the **set protocols dcbx interface *interface-name* applications no-auto-negotiation** command.

You can also disable DCBX application protocol exchange for applications on an interface by deleting the application map from the interface, or by deleting a particular application from the application map. However, when you delete an application from an application map, the application protocol is no longer exchanged on any interface which uses that application map.

## DCBX and PFC

After you enable PFC on a switch interface, DCBX uses autonegotiation to control the operational state of the PFC functionality.

If the peer device connected to the interface supports PFC and is provisioned compatibly with the switch, DCBX sets the PFC operational state to enabled. If the peer device connected to the interface does not support PFC or is not provisioned compatibly with the switch, DCBX sets the operational state to disabled. (PFC must be symmetrical.)

If the peer advertises that it is “willing” to learn its PFC configuration from the switch, DCBX pushes the switch’s PFC configuration to the peer and does not check the peer’s administrative state.

You can manually override DCBX control of the PFC operational state on a per-interface basis by disabling autonegotiation. If you disable autonegotiation on an interface on which you have configured PFC, then PFC is enabled on that interface regardless of the peer configuration. To disable PFC on an interface, do not configure PFC on that interface.

## DCBX and ETS

This section describes:

- [Default DCBX ETS Advertisement on page 419](#)
- [ETS Advertisement and Peer Configuration on page 420](#)
- [ETS Recommendation TLV on page 420](#)

### Default DCBX ETS Advertisement

---

If you do not configure ETS on an interface, the switch automatically creates a default priority group that contains all of the priorities (forwarding classes, which represent output queues) and assigns 100 percent of the port output bandwidth to that priority group. The default priority group is transparent. It does not appear in the configuration and is used for DCBX advertisement. DCBX advertises the default priority group, its priorities, and the assigned bandwidth.

If you configure ETS on an interface, DCBX advertises:

- Each priority group on the interface

- The priorities in each priority group
- The bandwidth properties of each priority group and priority

Any priority on that interface that is not part of an explicitly configured priority group (forwarding class set) is assigned to the automatically generated default priority group and receives no bandwidth. If you configure ETS on an interface, every forwarding class (priority) on that interface for which you want to forward traffic must belong to a forwarding class set (priority group).

---

### ETS Advertisement and Peer Configuration

DCBX does not control the switch's ETS (hierarchical scheduling) operational state. If the connected peer is configured as "willing," DCBX pushes the switch's ETS configuration to the switch's peers if the ETS Recommendation TLV is enabled (it is enabled by default). If the peer does not support ETS or is not consistently provisioned with the switch, DCBX does not change the ETS operational state on the switch. The ETS operational state remains enabled or disabled based only on the switch hierarchical scheduling configuration and is enabled by default.

When ETS is configured, DCBX advertises the priority groups, the priorities in the priority groups, and the bandwidth configuration for the priority groups and priorities. Any priority (essentially a forwarding class or queue) that is not part of a priority group has no scheduling properties and receives no bandwidth.

You can manually override whether DCBX advertises the ETS state to the peer on a per-interface basis by disabling autonegotiation. This does not affect the ETS state on the switch or on the peer, but it does prevent the switch from sending the Recommendation TLV or the Configuration TLV to the connected peer. To disable ETS on an interface, do not configure priority groups (forwarding class sets) on the interface.

---

### ETS Recommendation TLV

The ETS Recommendation TLV communicates the ETS settings that the switch wants the connected peer interface to use. If the peer interface is "willing," it changes its configuration to match the configuration in the ETS Recommendation TLV. By default, the switch interfaces send the ETS Recommendation TLV to the peer. The settings communicated are the egress ETS settings defined by configuring hierarchical scheduling on the interface.

We recommend that you use the same ETS settings on the connected peer that you use on the switch interface and that you leave the ETS Recommendation TLV enabled. However, on interfaces that use IEEE DCBX as the DCBX mode, if you want an asymmetric configuration between the switch interface and the connected peer, you can disable the ETS Recommendation TLV by including the **no-recommendation-tlv** statement at the **[edit protocols dcbx interface *interface-name* enhanced-transmission-selection]** hierarchy level.



**NOTE:** You can disable the ETS Recommendation TLV only when the DCBX mode on the interface is IEEE DCBX. Disabling the ETS Recommendation TLV has no effect if the DCBX mode on the interface is DCBX version 1.01. (IEEE DCBX uses separate application attribute TLVs, but DCBX version 1.01 sends all application attributes in the same TLV and uses sub-TLVs to separate the information.)

If you disable the ETS Recommendation TLV, the switch still sends the ETS Configuration TLV to the connected peer. The result is that the connected peer is informed about the switch DCBX ETS configuration, but even if the peer is “willing,” the peer does not change its configuration to match the switch configuration. This is asymmetric configuration—the two interfaces can have different parameter values for the ETS attribute.

For example, if you want a CNA connected to a switch interface to have different bandwidth allocations than the switch ETS configuration, you can disable the ETS Recommendation TLV and configure the CNA for the desired bandwidth. The switch interface and the CNA exchange configuration parameters, but the CNA does not change its configuration to match the switch interface configuration.

#### Related Documentation

- [Understanding DCBX Application Protocol TLV Exchange on page 426](#)
- [Understanding DCB Features and Requirements on page 234](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)
- [Understanding CoS Port Schedulers on QFX Switches on page 125](#)
- [Understanding FCoE](#)
- [Configuring the DCBX Mode on page 422](#)
- [Configuring DCBX Autonegotiation on page 423](#)
- [Disabling the ETS Recommendation TLV on page 268](#)
- [Example: Configuring DCBX Application Protocol TLV Exchange on page 433](#)

## Configuring the DCBX Mode

You can configure the DCBX mode that an interface uses to communicate with the connected peer. Three DCBX modes are supported:

- **Autonegotiation**—The interface negotiates with the connected peer to determine the DCBX mode. This is the default DCBX mode.
- **IEEE DCBX**—The interface uses IEEE DCBX type, length, and value (TLV) to exchange DCBX information with the connected peer. QFX3500 Node devices come up with IEEE DCBX enabled by default and then autonegotiate with the connected peer to determine the final DCBX mode.
- **DCBX Version 1.01**—The interface uses Converged Enhanced Ethernet (CEE) DCBX version 1.01 TLVs to exchange DCBX information with the connected peer. QFabric system Node devices other than QFX3500 switches come up with DCBX version 1.01 enabled by default and then autonegotiate with the connected peer to determine the final DCBX mode.



**NOTE:** Pre-CEE (pre-DCB) versions of DCBX such as DCBX version 1.00 are not supported. If an interface receives an LLDP frame with pre-CEE DCBX TLVs, the system drops the frame.

Configure the DCBX mode by specifying the mode for one interface or for all interfaces.

- To configure the DCBX mode, specify the interface and the mode:

```
[edit protocols dcbx]
user@switch# set interface interface-name mode (auto-negotiate | ieee-dcbx |
dcbx-version-1.01)
```

For example, to configure DCBX version 1.01 on interface **xe-0/0/21**:

```
user@switch# set protocols dcbx interface xe-0/0/21 mode dcbx-version-1.01
```

To configure IEEE DCBX on all interfaces:

```
user@switch# set protocols dcbx interface all mode ieee-dcbx
```

### Related Documentation

- [Configuring DCBX Autonegotiation on page 423](#)
- [Disabling the ETS Recommendation TLV on page 268](#)
- [Understanding DCBX on page 412](#)
- [Understanding DCBX Application Protocol TLV Exchange on page 426](#)
- [show dcbx neighbors on page 794](#)



## Configuring DCBX Autonegotiation

Data Center Bridging Capability Exchange protocol (DCBX) discovers the data center bridging (DCB) capabilities of peers by exchanging feature configuration information. DCBX also detects feature misconfiguration and mismatches, and can configure DCB on peers. DCBX is an extension of the Link Layer Discovery Protocol (LLDP), and LLDP must remain enabled on every interface for which you want to use DCBX. If you attempt to enable DCBX on an interface on which LLDP is disabled, the configuration commit operation fails.



**NOTE:** LLDP and DCBX are enabled by default on all interfaces.

The switch supports DCBX autonegotiation for:

- Priority-based flow control (PFC) configuration
- Layer 2 and Layer 4 applications such as Fibre Channel over Ethernet (FCoE) and Internet Small Computer System Interface (iSCSI)
- Enhanced transmission selection (ETS) advertisement

DCBX autonegotiation is configured on a per-interface basis for each supported feature or application. The PFC and application DCBX exchanges use autonegotiation by default. The default autonegotiation behavior is:

- DCBX is enabled on the interface if the connected peer device also supports DCBX.
- DCBX is disabled on the interface if the connected peer device does not support DCBX.

You can override the default behavior for each feature by turning off autonegotiation to force an interface to enable or disable the feature.

Autonegotiation of ETS means that when ETS is enabled on an interface (priority groups are configured), the interface advertises its ETS configuration to the peer device. In this case, priorities (forwarding classes) that are not part of a priority group (forwarding class set) receive no bandwidth and are advertised in an automatically generated default forwarding class. If ETS is not enabled on an interface (no priority groups are configured), all of the priorities are advertised in one automatically generated default priority group that receives 100 percent of the port bandwidth.

Disabling ETS autonegotiation prevents the interface from sending the Recommendation TLV or the Configuration TLV to the connected peer.

On interfaces that use IEEE DCBX mode to exchange DCBX parameters, you can disable autonegotiation of the ETS Recommendation TLV to the peer if you want an asymmetric ETS configuration between the peers. DCBX still exchanges the ETS Configuration TLV if you disable the ETS Recommendation TLV.

Autonegotiation of PFC means that when PFC is enabled on an interface, if the peer device connected to the interface supports PFC and is provisioned compatibly with the

switch, DCBX sets the PFC operational state to enabled. If the peer device connected to the interface does not support PFC or is not provisioned compatibly with the switch, DCBX sets the operational state to disabled.

In addition, if the peer advertises that it is “willing” to learn its PFC configuration from the switch, DCBX pushes the switch’s PFC configuration to the peer and does not check the peer’s administrative state. The switch does not learn PFC configuration from peers (the switch does not advertise its state as “willing”).

Disabling PFC autonegotiation prevents the interface from exchanging PFC configuration information with the peer. It forces the interface to enable PFC if PFC is configured on the interface or to disable PFC if PFC is not configured on the interface. If you disable PFC autonegotiation, the assumption is that the peer is also configured manually.

Autonegotiation of applications depends on whether or not you apply an application map to an interface. If you apply an application map to an interface, the interface autonegotiates DCBX for each application in the application map. PFC must be enabled on the FCoE priority (the FCoE IEEE 802.1p code point) for the interface to advertise the FCoE application. The interface only advertises applications that are included in the application map.

For example, if you apply an application map to an interface and the application map does not include the FCoE application, then that interface does not perform DCBX advertisement of FCoE.

If you do not apply an application map to an interface, DCBX does not advertise applications on that interface, with the exception of FCoE, which is handled differently than other applications.



**NOTE:** If you do not apply an application map to an interface, the interface performs autonegotiation of FCoE if the interface carries traffic in the FCoE forwarding class and also has PFC enabled on the FCoE priority. On such interfaces, if DCBX detects that the peer device connected to the interface supports FCoE, the switch advertises its FCoE capability and IEEE 802.1p code point on that interface. If DCBX detects that the peer device connected to the interface does not support FCoE, DCBX marks that interface as “FCoE down” and disables FCoE on the interface.

---

When DCBX marks an interface as “FCoE down,” the behavior of the switch depends on how you use it in the network:

- When the switch acts as an FCoE transit switch, the interface drops all of the FIP packets it receives. In addition, FIP packets received from an FCoE forwarder (FCF) are not forwarded to interfaces marked as “FCoE down.”
- When the switch acts as an FCoE-FC gateway (only switches that support native Fibre Channel interfaces), it does not send or receive FCoE Initialization Protocol (FIP) packets.

Disabling autonegotiation prevents the interface from exchanging application information with the peer. In this case, the assumption is that the peer is also configured manually.

To disable DCBX autonegotiation of PFC, applications (including FCoE), and ETS using the CLI:

1. Turn off autonegotiation for PFC.

```
[edit]
user@switch# set protocols dcbx interface interface-name priority-flow-control
no-auto-negotiation
```

2. Turn off autonegotiation for applications.

```
[edit]
user@switch# set protocols dcbx interface interface-name applications no-auto-negotiation
```

3. Turn off autonegotiation for ETS.

```
[edit]
user@switch# set protocols dcbx interface interface-name enhanced-transmission-selection
no-auto-negotiation
```

To disable autonegotiation of the ETS Recommendation TLV so that DCBX exchanges only the ETS Configuration TLV:

- [edit protocols dcbx interface *interface-name*]  
user@switch# set enhanced-transmission-selection no-recommendation-tlv

**Related  
Documentation**

- [Example: Configuring DCBX Application Protocol TLV Exchange on page 433](#)
- [Example: Configuring CoS PFC for FCoE Traffic on page 304](#)
- [Disabling the ETS Recommendation TLV on page 268](#)
- [Understanding DCBX Application Protocol TLV Exchange on page 426](#)

## Understanding DCBX Application Protocol TLV Exchange

---

Data Center Bridging Capability Exchange protocol (DCBX) discovers the data center bridging (DCB) capabilities of connected peers. DCBX also advertises the capabilities of applications on interfaces by exchanging application protocol information through application type, length, and value (TLV) elements. DCBX is an extension of Link Layer Discovery Protocol (LLDP). LLDP must remain enabled on every interface on which you want to use DCBX.



**NOTE:** LLDP and DCBX are enabled by default on all interfaces.

Setting up application protocol exchange consists of:

- Defining applications
- Mapping the applications to IEEE 802.1p code points in an *application map*
- Configuring classifiers to prioritize incoming traffic and map the incoming traffic to the application by the traffic code points
- Applying the application maps and classifiers to interfaces

You need to explicitly define the applications that you want an interface to advertise. The FCoE application is a special case (see [“Applications” on page 426](#)) and only needs to be defined on an interface if you want DCBX to exchange application protocol TLVs for other applications in addition to FCoE on that interface.

You also need to explicitly map all of the defined applications that you want an interface to advertise to IEEE 802.1p code points in an application map. The FCoE application is a special case that only requires inclusion in an application map when you want an interface to use DCBX for other applications in addition to FCoE, as described later in this topic (see [“Application Maps” on page 427](#)).

This topic describes:

- [Applications on page 426](#)
- [Application Maps on page 427](#)
- [Classifying and Prioritizing Application Traffic on page 428](#)
- [Enabling Interfaces to Exchange Application Protocol Information on page 429](#)
- [Disabling DCBX Application Protocol Exchange on page 429](#)

### Applications

Before an interface can exchange application protocol information, you need to define the applications that you want to advertise. The exception is the FCoE application. If FCoE is the only application that you want the interface to advertise, then you do not need to define the FCoE application. You need to define the FCoE application only if you want interfaces to advertise other applications in addition to FCoE.



**NOTE:** If FCoE is the only application that you want DCBX to advertise on an interface, DCBX exchanges FCoE application protocol TLVs by default if the interface:

- Carries FCoE traffic (traffic mapped by CoS configuration to the FCoE forwarding class and applied to the interface)
- Has a congestion notification profile with PFC enabled on the FCoE priority (IEEE 802.1p code point)
- Does *not* have an application map

If you apply an application map to an interface, then all applications that you want DCBX to advertise must be defined and configured in the application map, including the FCoE application.

If no CoS configuration for FCoE is mapped to an interface, that interface does not exchange FCoE application protocol TLVs.

You can define:

- Layer 2 applications by EtherType
- Layer 4 applications by a combination of protocol (TCP or UDP) and destination port number

The EtherType is a two-octet field in the Ethernet frame that denotes the protocol encapsulated in the frame. For a list of common EtherTypes, see <http://standards.ieee.org/develop/regauth/ethertype/eth.txt> on the IEEE standards organization website. For a list of port numbers and protocols, see the *Service Name and Transport Protocol Port Number Registry* at <http://www.iana.org/assignments/service-names-port-numbers/service-names-port-numbers.xml> on the Internet Assigned Numbers Authority (IANA) website.

You must explicitly define each application that you want to advertise, except FCoE. The FCoE application is defined by default (EtherType 0x8906).

## Application Maps

An application map maps defined applications to one or more IEEE 802.1p code points. Each application map contains one or more applications. DCBX includes the configured application code points in the protocol TLVs exchanged with the connected peer.

To exchange protocol TLVs for an application, you must include the application in an application map. The FCoE application is a special case:

- If you want DCBX to exchange application protocol TLVs for more than one application on a particular interface, you must configure the applications, define an application map to map the applications to code points, and apply the application map to the interface. In this case, you must also define the FCoE application and add it to the application map.

This is the same process and treatment required for all other applications. In addition, for DCBX to exchange FCoE application TLVs, you must enable priority-based flow control (PFC) on the FCoE priority (the FCoE IEEE 802.1p code point) on the interface.

- If FCoE is the only application that you want DCBX to advertise on an interface, then you do not need to configure an application map and apply it to the interface. By default, when an interface has no application map, and the interface carries traffic mapped to the FCoE forwarding class, and PFC is enabled on the FCoE priority, the interface advertises FCoE TLVs (autonegotiation mode). DCBX exchanges FCoE application protocol TLVs by default until you apply an application map to the interface, remove the FCoE traffic from the interface (you can do this by removing the or editing the classifier for FCoE traffic), or disable PFC on the FCoE priority.

If you apply an application map to an interface that did not have an application map and was exchanging FCoE application TLVs, and you do not include the FCoE application in the application map, the interface stops exchanging FCoE TLVs. Every interface that has an application map must have FCoE included in the application map (and PFC enabled on the FCoE priority) in order for DCBX to exchange FCoE TLVs.

Mapping an application to code points does two things:

- Maps incoming traffic with the same code points to that application
- Allows you to configure classifiers that map incoming application traffic, by code point, to a forwarding class and a loss priority, in order to apply class of service (CoS) to application traffic and prioritize application traffic

You apply an application map to an interface to enable DCBX application protocol exchange on that interface for each application specified in the application map. All of the applications that you want an interface to advertise must be configured in the application map that you apply to the interface, with the previously noted exception for the FCoE application when FCoE is the only application for which you want DCBX to exchange protocol TLVs on an interface.

## Classifying and Prioritizing Application Traffic

When traffic arrives at an interface, the interface classifies the incoming traffic based on its code points. Classifiers map code points to loss priorities and forwarding classes. The loss priority prioritizes the traffic. The forwarding class determines the traffic output queue and CoS service level.

When you map an application to an IEEE 802.1p code point in an application map and apply the application map to an interface, incoming traffic on the interface that matches the application code points is mapped to the appropriate application. The application receives the loss priority and the CoS associated with the forwarding class for those code points, and is placed in the output queue associated with the forwarding class.

You can use the default classifier or you can configure a classifier to map the application code points defined in the application map to forwarding classes and loss priorities.

## Enabling Interfaces to Exchange Application Protocol Information

Each interface with the **fcoe** forwarding class and PFC enabled on the FCoE code point is enabled for FCoE application protocol exchange by default until you apply an application map to the interface. If you apply an application map to an interface and you want that interface to exchange FCoE application protocol TLVs, you must include the FCoE application in the application map. (In all cases, to achieve lossless transport, you must also enable PFC on the FCoE code point or code points.)

Except when FCoE is the only protocol you want DCBX to advertise on an interface, interfaces on which you want to exchange application protocol TLVs must include the following two items:

- The application map that contains the application(s)
- A classifier



**NOTE:** You must also enable PFC on the code point of any traffic for which you want to achieve lossless transport.

## Disabling DCBX Application Protocol Exchange

To disable DCBX application protocol exchange for all applications on an interface, issue the **set protocols dcbx interface *interface-name* applications no-auto-negotiation** command.

You can also disable DCBX application protocol exchange for applications on an interface by deleting the application map from the interface, or by deleting a particular application from the application map. However, when you delete an application from an application map, the application protocol is no longer exchanged on any interface which uses that application map.

On interfaces that use IEEE DCBX mode to exchange DCBX parameters, you can disable sending the enhanced transmission selection (ETS) Recommendation TLV to the peer if you want an asymmetric ETS configuration between the peers.

### Related Documentation

- [Understanding DCBX on page 412](#)
- [Configuring DCBX Autonegotiation on page 423](#)
- [Disabling the ETS Recommendation TLV on page 268](#)
- [Defining an Application for DCBX Application Protocol TLV Exchange on page 430](#)
- [Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 431](#)
- [Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange on page 432](#)
- [Example: Configuring DCBX Application Protocol TLV Exchange on page 433](#)

## Defining an Application for DCBX Application Protocol TLV Exchange

Define each application for which you want DCBX to exchange application protocol information. You can define Layer 2 and Layer 4 applications. After you define applications, you map them to IEEE 802.1p code points, and then apply the application map to the interfaces on which you want DCBX to exchange application protocol information with connected peers. (See *Related Documentation* for how to configure application maps and apply them to interfaces, and for an example of the entire procedure that also includes classifier configuration.)



**NOTE:** In Junos OS Release 12.1, the FCoE application was configured by default, so you did not need to configure it in an application map. In Junos OS Release 12.2, if you want DCBX to advertise the FCoE application on an interface and you apply an application map to that interface, you must explicitly configure FCoE in the application map. You also must enable priority-based flow control (PFC) on the FCoE code point on all interfaces that you want to advertise FCoE. If you apply an application map to an interface, the interface sends DCBX TLVs only for the applications configured in the application map.

Define Layer 2 applications by mapping an application name to an EtherType. Define Layer 4 applications by mapping an application name to a protocol (TCP or UDP) and a destination port.

- To define a Layer 2 application, specify the name of the application and its EtherType:

```
[edit applications]
user@switch# set application application-name ether-type ether-type
```

For example, to configure an application named **PTP** (for Precision Time Protocol) that uses the EtherType **0x88F7**:

```
user@switch# set applications application ptp ether-type 0x88F7
```

- To define a Layer 4 application, specify the name of the application, its protocol (TCP or UDP), and its destination port:

```
[edit]
user@switch# set applications application application-name protocol (tcp | udp)
destination-port port-value
```

For example, to configure an application named **iscsi** (for Internet Small Computer System Interface) that uses the protocol **TCP** and the destination port **3260**:

```
user@switch# set applications application iscsi protocol tcp destination-port 3260
```

### Related Documentation

- [Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 431](#)
- [Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange on page 432](#)



- [Configuring DCBX Autonegotiation on page 423](#)
- [Example: Configuring DCBX Application Protocol TLV Exchange on page 433](#)
- [Example: Configuring DCBX to Support an iSCSI Application](#)
- [Understanding DCBX Application Protocol TLV Exchange on page 426](#)
- [show dcbx neighbors on page 794](#)

## Configuring an Application Map for DCBX Application Protocol TLV Exchange

After you define applications for which you want to exchange DCBX application protocol information, map the applications to IEEE 802.1p code points. The IEEE 802.1p code points identify incoming traffic and allow you to map that traffic to the desired application. You then apply the application map to the interfaces on which you want DCBX to exchange application protocol information with connected peers. (See *Related Documentation* for how to define applications and apply the application map to interfaces, and for an example of the entire procedure that also includes classifier configuration.)



**NOTE:** In Junos OS Release 12.1, the FCoE application was configured by default, so you did not need to configure it in an application map. In Junos OS Release 12.2, if you want DCBX to advertise the FCoE application on an interface and you apply an application map to that interface, you must explicitly configure FCoE in the application map. You also must enable priority-based flow control (PFC) on the FCoE code point on all interfaces that you want to advertise FCoE. If you apply an application map to an interface, the interface sends DCBX TLVs only for the applications configured in the application map.

Configure an application map by creating an application map name and mapping an application to one or more IEEE 802.1p code points.

- To define an application map, specify the name of the application map, the name of the application, and the IEEE 802.1p code points of the incoming traffic that you want to associate with the application in the application map:

```
[edit policy-options]
user@switch# set application-maps application-map-name application application-name
code-points [ aliases ] [ bit-patterns ]
```

For example, to configure an application map named **ptp-app-map** that includes an application named **PTP** (for Precision Time Protocol) and map the application to IEEE 802.1p code points **001** and **101**:

```
user@switch# set policy-options application-maps ptp-app-map application ptp code points
[ 001 101 ]
```

### Related Documentation

- [Defining an Application for DCBX Application Protocol TLV Exchange on page 430](#)
- [Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange on page 432](#)

- [Configuring DCBX Autonegotiation on page 423](#)
- [Example: Configuring DCBX Application Protocol TLV Exchange on page 433](#)
- [Example: Configuring DCBX to Support an iSCSI Application](#)
- [show dcbx neighbors on page 794](#)

## Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange

---

After you define applications and map them to IEEE 802.1p code points in an application map, apply the application map to the interfaces on which you want DCBX to exchange the application protocol information with connected peers. (See *Related Documentation* for how to define applications and configure application maps to interfaces, and for an example of the entire procedure that also includes classifier configuration.)



**NOTE:** In Junos OS Release 12.1, the FCoE application was configured by default, so you did not need to configure it in an application map. In Junos OS Release 12.2, if you want DCBX to advertise the FCoE application on an interface and you apply an application map to that interface, you must explicitly configure FCoE in the application map. You also must enable priority-based flow control (PFC) on the FCoE code point on all interfaces that you want to advertise FCoE. If you apply an application map to an interface, the interface sends DCBX TLVs only for the applications configured in the application map.

- To apply an application map to a DCBX interface, specify the DCBX interface and the application map name:

[edit protocols]

```
user@switch# set dcbx interface interface-name application-map application-map-name
```

For example, to apply an application map named **ptp-app-map** on interface **xe-0/0/11**:

```
user@switch# set protocols dcbx interface xe-0/0/11 application-map ptp-app-map
```

### Related Documentation

- [Defining an Application for DCBX Application Protocol TLV Exchange on page 430](#)
- [Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 431](#)
- [Configuring DCBX Autonegotiation on page 423](#)
- [Example: Configuring DCBX Application Protocol TLV Exchange on page 433](#)
- [Example: Configuring DCBX to Support an iSCSI Application](#)
- [show dcbx neighbors on page 794](#)

## Example: Configuring DCBX Application Protocol TLV Exchange

Data Center Bridging Capability Exchange protocol (DCBX) discovers the data center bridging (DCB) capabilities of connected peers by exchanging application configuration information. DCBX detects feature misconfiguration and mismatches and can configure DCB on peers. DCBX is an extension of the Link Layer Discovery Protocol (LLDP). LLDP must remain enabled on every interface on which you want to use DCBX.



**NOTE:** LLDP and DCBX are enabled by default on all interfaces.

The switch supports DCBX application protocol exchange for Layer 2 and Layer 4 applications such as the Internet Small Computer System Interface (iSCSI). You specify applications by EtherType (for Layer 2 applications) or by the destination port and protocol (for Layer 4 applications; the protocol can be either TCP or UDP).

The switch handles Fibre Channel over Ethernet (FCoE) application protocol exchange differently than other protocols in some cases:

- If FCoE is the only application for which you want to enable DCBX application protocol TLV exchange on an interface, you do not have to explicitly configure the FCoE application or an application map. By default, the switch exchanges FCoE application protocol TLVs on all interfaces that carry FCoE traffic (traffic mapped to the **fcoe** forwarding class) and have priority-based flow control (PFC) enabled on the FCoE priority (the FCoE IEEE 802.1p code point). The default priority mapping for the FCoE application is IEEE 802.1p code point 011 (the default **fcoe** forwarding class code point).
- If you want an interface to use DCBX to exchange application protocol TLVs for any other applications in addition to FCoE, you must configure the applications (including FCoE), define an application map (including FCoE), and apply the application map to the interface. If you apply an application map to an interface, you must explicitly configure the FCoE application, or the interface does not exchange FCoE application protocol TLVs.

This example shows how to configure interfaces to exchange both Layer 2 and Layer 4 applications by configuring one interface to exchange iSCSI and FCoE application protocol information and configuring another interface to exchange iSCSI and Precision Time Protocol (PTP) application protocol information.

- [Requirements on page 433](#)
- [Overview on page 434](#)
- [Configuration on page 437](#)
- [Verification on page 439](#)

## Requirements

This example uses the following hardware and software components:

- Juniper Networks QFX Series device

- Junos OS Release 12.1 or later for the QFX Series

## Overview

The switch supports DCBX application protocol exchange for:

- Layer 2 applications, defined by EtherType
- Layer 4 applications, defined by destination port and protocol



**NOTE:** DCBX also advertises PFC and enhanced transmission selection (ETS) information. See [“Configuring DCBX Autonegotiation” on page 423](#) for how DCBX negotiates and advertises configuration information for these features and for the applications.

DCBX is configured on a per-interface basis for each supported feature or application. For applications that you want to enable for DCBX application protocol exchange, you must:

- Define the application name and configure the EtherType or the destination port and protocol (TCP or UDP) of the application. Use the EtherType for Layer 2 applications, and use the destination port and protocol for Layer 4 protocols.
- Map the application to an IEEE 802.1p code point in an application map.
- Add the application map to DCBX interface.

In addition, for all applications (including FCoE, even when you do not use an application map), you either must create an IEEE 802.1p classifier and apply it to the appropriate ingress interfaces or use the default classifier. A classifier maps the code points of incoming traffic to a forwarding class and a loss priority so that ingress traffic is assigned to the correct class of service (CoS). The forwarding class determines the output queue on the egress interface.

If you do not create classifiers, trunk and tagged-access ports use the unicast IEEE 802.1 default trusted classifier. [Table 78 on page 434](#) shows the default mapping of IEEE 802.1 code-point values to unicast forwarding classes and loss priorities for ports in trunk mode or tagged-access mode. [Table 79 on page 435](#) shows the default untrusted classifier IEEE 802.1 code-point values to unicast forwarding class mapping for ports in access mode.

**Table 78: Default IEEE 802.1 Classifiers for Trunk Ports and Tagged-Access Ports (Default Trusted Classifier)**

Code Point	Forwarding Class	Loss Priority
be (000)	best-effort	low
be1 (001)	best-effort	low
ef (010)	best-effort	low

**Table 78: Default IEEE 802.1 Classifiers for Trunk Ports and Tagged-Access Ports (Default Trusted Classifier) (continued)**

Code Point	Forwarding Class	Loss Priority
ef1 (011)	fcoe	low
af11 (100)	no-loss	low
af12 (101)	best-effort	low
nc1 (110)	network-control	low
nc2 (111)	network-control	low

**Table 79: Default IEEE 802.1 Unicast Classifiers for Access Ports (Default Untrusted Classifier)**

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	low
010	best-effort	low
011	best-effort	low
100	best-effort	low
101	best-effort	low
110	best-effort	low
111	best-effort	low

### Topology

This example shows how to configure DCBX application protocol exchange for three protocols (iSCSI, PTP, and FCoE) on two interfaces. One interface exchanges iSCSI and FCoE application protocol information, and the other interface exchanges iSCSI and PTP application protocol information.



**NOTE:** You must map FCoE traffic to the interfaces on which you want to forward FCoE traffic. You must also enable PFC on the FCoE interfaces and create an ingress classifier for FCoE traffic, or else use the default classifier.

Table 80 on page 436 shows the configuration components for this example.

**Table 80: Components of DCBX Application Protocol Exchange Configuration Topology**

Component	Settings
Hardware	QFX Series device
LLDP	Enabled by default on Ethernet interfaces
DCBX	Enabled by default on Ethernet interfaces
iSCSI application (Layer 4)	Application name— <b>iscsi</b> protocol— <b>TCP</b> destination-port— <b>3260</b> code-points— <b>111</b>
PTP application (Layer 2)	Application name— <b>ptp</b> ether-type— <b>0x88F7</b> code-points— <b>001, 101</b>
FCoE application (Layer 2)	Application name— <b>fcoe</b> ether-type— <b>0x8906</b> code-points— <b>011</b>  <b>NOTE:</b> You explicitly configure the FCoE application because you are applying an application map to the interface. When you apply an application map to an interface, all applications must be explicitly configured and included in the application map.
Application maps	<b>dcbx-iscsi-fcoe-app-map</b> —Maps the iSCSI and FCoE applications to IEEE 802.1p code points  <b>dcbx-iscsi-ptp-app-map</b> —Maps iSCSI and PTP applications to IEEE 802.1p code points
Interfaces	<b>xe-0/0/10</b> —Configured to exchange FCoE and iSCSI application TLVs (uses application map <b>dcbx-iscsi-fcoe-app-map</b> , carries FCoE traffic, and has PFC enabled on the FCoE priority)  <b>xe-0/0/11</b> —Configured to exchange iSCSI and PTP application TLVs (uses application map <b>dcbx-iscsi-ptp-app-map</b> )
PFC congestion notification profile for FCoE application exchange	<b>fcoe-cnp:</b> <ul style="list-style-type: none"> <li>Code point—<b>011</b></li> <li>Interface—<b>xe-0/0/10</b></li> </ul>

**Table 80: Components of DCBX Application Protocol Exchange Configuration Topology (*continued*)**

Component	Settings
Behavior aggregate classifiers (map forwarding classes to incoming packets by the packet's IEEE 802.1 code point)	<p><b>fcoe-iscsi-cl1:</b></p> <ul style="list-style-type: none"> <li>Maps the <b>fcoe</b> forwarding class to the IEEE 802.1p code point used for the FCoE application (011) and a loss priority of <b>high</b></li> <li>Maps the <b>network-control</b> forwarding class to the IEEE 802.1p code point used for the iSCSI application (111) and a loss priority of <b>high</b></li> <li>Applied to interface <b>xe-0/0/10</b></li> </ul> <p><b>iscsi-ntp-cl2:</b></p> <ul style="list-style-type: none"> <li>Maps the <b>network-control</b> forwarding class to the IEEE 802.1p code point used for the iSCSI application (111) and a loss priority of <b>low</b></li> <li>Maps the <b>best-effort</b> forwarding class to the IEEE 802.1p code points used for the PTP application (001 and 101) and a loss priority of <b>low</b></li> <li>Applied to interface <b>xe-0/0/11</b></li> </ul>



**NOTE:** This example does not include scheduling (bandwidth allocation) configuration or lossless configuration for the iSCSI forwarding class.

## Configuration

### CLI Quick Configuration

To quickly configure DCBX application protocol exchange, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```

set applications application iSCSI protocol tcp destination-port 3260
set applications application FCoE ether-type 0x8906
set applications application PTP ether-type 0x88F7
set policy-options application-maps dcbx-iscsi-fcoe-app-map application iSCSI code-points 111
set policy-options application-maps dcbx-iscsi-fcoe-app-map application FCoE code-points 011
set policy-options application-maps dcbx-iscsi-ntp-app-map application iSCSI code-points 111
set policy-options application-maps dcbx-iscsi-ntp-app-map application PTP code-points [001 101]
set protocols dcbx interface xe-0/0/10 application-map dcbx-iscsi-fcoe-app-map
set protocols dcbx interface xe-0/0/11 application-map dcbx-iscsi-ntp-app-map
set class-of-service congestion-notification-profile fcoe-cnp input ieee-802.1 code-point 011 pfc
set class-of-service interfaces xe-0/0/10 congestion-notification-profile fcoe-cnp
set class-of-service classifiers ieee-802.1 fcoe-iscsi-cl1 import default forwarding-class fcoe
loss-priority high code-points 011
set class-of-service classifiers ieee-802.1 fcoe-iscsi-cl1 import default forwarding-class
network-control loss-priority high code-points 111
set class-of-service classifiers ieee-802.1 iscsi-ntp-cl2 import default forwarding-class
network-control loss-priority low code-points 111
set class-of-service classifiers ieee-802.1 iscsi-ntp-cl2 import default forwarding-class best-effort
loss-priority low code-points [001 101]
set class-of-service interfaces xe-0/0/10 unit 0 classifiers ieee-802.1 fcoe-iscsi-cl1

```

```
set class-of-service interfaces xe-0/0/11 unit 0 classifiers ieee-802.1 iscsi-ptp-cl2
```

### Configuring DCBX Application Protocol TLV Exchange

#### Step-by-Step Procedure

To define the applications, map the applications to IEEE 802.1p code points, apply the applications to interfaces, and create classifiers for DCBX application protocol exchange:

1. Define the iSCSI application by specifying its protocol and destination port, and define the FCoE and PTP applications by specifying their EtherTypes.  
  

```
[edit applications]
user@switch# set application iSCSI protocol tcp destination-port 3260
user@switch# set application FCoE ether-type 0x8906
user@switch# set application PTP ether-type 0x88F7
```
2. Define an application map that maps the iSCSI and FCoE applications to IEEE 802.1p code points.  
  

```
[edit policy-options]
user@switch# set application-maps dcbx-iscsi-fcoe-app-map application iSCSI code-points 111
user@switch# set application-maps dcbx-iscsi-fcoe-app-map application FCoE code-points 011
```
3. Define the application map that maps the iSCSI and PTP applications to IEEE 802.1p code points.  
  

```
[edit policy-options]
user@switch# set application-maps dcbx-iscsi-ptp-app-map application iSCSI code-points 111
user@switch# set application-maps dcbx-iscsi-ptp-app-map application PTP code-points [001 101]
```
4. Apply the iSCSI and FCoE application map to interface **xe-0/0/10**, and apply the iSCSI and PTP application map to interface **xe-0/0/11**.  
  

```
[edit protocols dcbx]
user@switch# set interface xe-0/0/10 application-map dcbx-iscsi-fcoe-app-map
user@switch# set interface xe-0/0/11 application-map dcbx-iscsi-ptp-app-map
```
5. Create the congestion notification profile to enable PFC on the FCoE code point (011), and apply the congestion notification profile to interface **xe-0/0/10**.  
  

```
[edit class-of-service]
user@switch# set congestion-notification-profile fcoe-cnp input ieee-802.1 code-point 011 pfc
user@switch# set interfaces xe-0/0/10 congestion-notification-profile fcoe-cnp
```
6. Configure the classifier to apply to the interface that exchanges iSCSI and FCoE application information.  
  

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 fcoe-iscsi-cl1 import default forwarding-class fcoe loss-priority high code-points 011
user@switch# set ieee-802.1 fcoe-iscsi-cl1 import default forwarding-class network-control loss-priority high code-points 111
```
7. Configure the classifier to apply to the interface that exchanges iSCSI and PTP application information.  
  

```
[edit class-of-service classifiers]
```



```

user@switch# set ieee-802.1 iscsi-ptp-cl2 import default forwarding-class network-control
loss-priority low code-points 111
user@switch# set ieee-802.1 iscsi-ptp-cl2 import default forwarding-class best-effort
loss-priority low code-points [001 101]

```

8. Apply the classifiers to the appropriate interfaces.

```

[edit class-of-service]
user@switch# set interfaces xe-0/0/10 unit 0 classifiers ieee-802.1 fcoe-iscsi-cl1
user@switch# set interfaces xe-0/0/11 unit 0 classifiers ieee-802.1 iscsi-ptp-cl2

```

## Verification

To verify that DCBX application protocol exchange configuration has been created and is operating properly, perform these tasks:

- [Verifying the Application Configuration on page 439](#)
- [Verifying the Application Map Configuration on page 439](#)
- [Verifying DCBX Application Protocol Exchange Interface Configuration on page 440](#)
- [Verifying the PFC Configuration on page 440](#)
- [Verifying the Classifier Configuration on page 441](#)

### Verifying the Application Configuration

**Purpose** Verify that DCBX applications have been configured.

**Action** List the applications by using the configuration mode command **show applications**:

```

user@switch# show applications
application iSCSI {
    protocol tcp;
    destination-port 3260;
}

application fcoe {
    ether-type 0x8906;
}

application ptp {
    ether-type 0x88F7;
}

```

**Meaning** The **show applications** configuration mode command lists all of the configured applications and either their protocol and destination port (Layer 4 applications) or their EtherType (Layer 2 applications). The command output shows that the iSCSI application is configured with the **tcp** protocol and destination port **3260**, the FCoE application is configured with the EtherType **0x8906**, and that the PTP application is configured with the EtherType **0x88F7**.

### Verifying the Application Map Configuration

**Purpose** Verify that the application maps have been configured.

**Action** List the application maps by using the configuration mode command **show policy-options application-maps**:

```
user@switch# show policy-options application-maps
dcbx-iscsi-fcoe-app-map {
    application iSCSI code-points 111;
    application FCoE code-points 011;
}

dcbx-iscsi-ntp-app-map {
    application iSCSI code-points 111;
    application PTP code-points [001 101];
}
```

**Meaning** The **show policy-options application-maps** configuration mode command lists all of the configured application maps and the applications that belong to each application map. The command output shows that there are two application maps, **dcbx-iscsi-fcoe-app-map** and **dcbx-iscsi-ntp-app-map**.

The application map **dcbx-iscsi-fcoe-app-map** consists of the iSCSI application, which is mapped to IEEE 802.1p code point 111, and the FCoE application, which is mapped to IEEE 802.1p code point 011.

The application map **dcbx-iscsi-ntp-app-map** consists of the iSCSI application, which is mapped to IEEE 802.1p code point 111, and the PTP application, which is mapped to IEEE 802.1p code points 001 and 101.

---

### Verifying DCBX Application Protocol Exchange Interface Configuration

**Purpose** Verify that the application maps have been applied to the correct interfaces.

**Action** List the application maps by using the configuration mode command **show protocols dcbx**:

```
user@switch# show protocols dcbx
interface xe-0/0/10.0 {
    application-map dcbx-iscsi-fcoe-app-map;
}

interface xe-0/0/11.0 {
    application-map dcbx-iscsi-ntp-app-map;
}
```

**Meaning** The **show protocols dcbx** configuration mode command lists whether the interfaces are enabled for DCBX and lists the application map applied to each interface. The command output shows that interfaces **xe-0/0/10.0** and **xe-0/0/11.0** are enabled for DCBX, and that interface **xe-0/0/10.0** uses application map **dcbx-iscsi-fcoe-app-map**, and interface **xe-0/0/11.0** uses application map **dcbx-iscsi-ntp-app-map**.

---

### Verifying the PFC Configuration

**Purpose** Verify that PFC has been enabled on the FCoE code point and applied to the correct interface.

**Action** Display the PFC configuration to verify that PFC is enabled on the FCoE code point (011) in the congestion notification profile **fcoe-cnp** by using the configuration mode command **show class-of-service congestion-notification-profile**:

```
user@switch# show class-of-service congestion-notification-profile
fcoe-cnp {
  input {
    ieee-802.1 {
      code-point 011 {
        pfc;
      }
    }
  }
}
```

Display the class-of-service (CoS) interface information to verify that the correct interface has PFC enabled for the FCoE application by using the configuration mode command **show class-of-service interfaces**:

```
user@switch# show class-of-service interfaces
xe-0/0/10 {
  congestion-notification-profile fcoe-cnp;
}
```



**NOTE:** The sample output does not include all of the information this command can show. The output is abbreviated to focus on verifying the PFC configuration.

**Meaning** The **show class-of-service congestion-notification-profile** configuration mode command lists the configured congestion notification profiles. The command output shows that the congestion notification profile **fcoe-cnp** has been configured and has enabled PFC on the IEEE 802.1p code point **011** (the default FCoE code point).

The **show class-of-service interfaces** configuration mode command shows the interface CoS configuration. The command output shows that the congestion notification profile **fcoe-cnp**, which enables PFC on the FCoE code point, is applied to interface **xe-0/0/10**.

### Verifying the Classifier Configuration

**Purpose** Verify that the classifiers have been configured and applied to the correct interfaces.

**Action** Display the classifier configuration by using the configuration mode command **show class-of-service**:

```
user@switch# show class-of-service
classifiers {
  ieee-802.1 fcoe-iscsi-cl1 {
    import default;
    forwarding-class network-control {
      loss-priority high code-points 111;
    }
    forwarding-class fcoe {
```

```

        loss-priority high code-points 011;
    }
}
ieee-802.1 iscsi-ntp-cl2 {
    import default;
    forwarding-class network-control {
        loss-priority low code-points 111;
    }
    forwarding-class best-effort {
        loss-priority low code-points [ 001 101 ];
    }
}
}
interfaces {
    xe-0/0/10 {
        congestion-notification-profile fcoe-cnp;
        unit 0 {
            classifiers {
                ieee-802.1 fcoe-iscsi-cl1;
            }
        }
    }
    xe-0/0/11 {
        unit 0 {
            classifiers {
                ieee-802.1 iscsi-ntp-cl2;
            }
        }
    }
}
}

```



**NOTE:** The sample output does not include all of the information this command can show. The output is abbreviated to focus on verifying the classifier configuration.

**Meaning** The **show class-of-service** configuration mode command lists the classifier and CoS interface configuration, as well as other information not shown in this example. The command output shows that there are two classifiers configured, **fcoe-iscsi-cl1** and **iscsi-ntp-cl2**.

Classifier **fcoe-iscsi-cl1** uses the **default** classifier as a template and edits the template as follows:

- The forwarding class **network-control** is set to a loss priority of **high** and is mapped to code point **111** (the code point mapped to the iSCSI application).
- The forwarding class **fcoe** is set to a loss priority of **high** and is mapped to code point **011** (the code point mapped by default to the FCoE application).

Classifier **iscsi-ntp-cl2** uses the **default** classifier as a template and edits the template as follows:

- The forwarding class **network-control** is set to a loss priority of **low** and is mapped to IEEE 802.1p code point **111** (the code point mapped to the iSCSI application).
- The forwarding class **best-effort** is set to a loss priority of **low** and is mapped to IEEE 802.1p code points **001** and **101** (the code points mapped by default to the PTP application).

The command output also shows that classifier **fcoe-iscsi-cl1** is mapped to interface **xe-0/0/10.0** and that classifier **iscsi-ptp-cl2** is mapped to interface **xe-0/0/11.0**.

#### Related Documentation

- [Defining an Application for DCBX Application Protocol TLV Exchange on page 430](#)
- [Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 431](#)
- [Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange on page 432](#)
- [Configuring DCBX Autonegotiation on page 423](#)
- [show dcbx on page 793](#)
- [show dcbx neighbors on page 794](#)
- [Understanding DCBX Application Protocol TLV Exchange on page 426](#)



## CHAPTER 5

# Learn About Technology

- [Data Center Technology Overview Videos on page 445](#)

### Data Center Technology Overview Videos

---

Juniper Information Experience (IX) videos provide brief, high-level overviews of data center technologies and concepts. Each video runs approximately one-and-a-half to two minutes in length. This document contains SDN-related videos and links to conceptual documents that contain other data center technology videos:

- [Learn About Video: Why Do We Need an IP Fabric? on page 445](#)
- [Learn About Video: What is the Best Control Plane Protocol to Use in a Data Center IP Fabric? on page 445](#)
- [Learn About Video: Why Use an Overlay Network in a Data Center? on page 445](#)
- [Conceptual Documents That Contain Technology Overview Videos on page 446](#)

#### Learn About Video: Why Do We Need an IP Fabric?

The video *Why Do We Need an IP Fabric?* presents a brief overview of IP Fabric use cases.



Video: [Why Do We Need an IP Fabric?](#)

#### Learn About Video: What is the Best Control Plane Protocol to Use in a Data Center IP Fabric?

The video *What is the Best Control Plane Protocol to Use in a Data Center IP Fabric?* presents a brief overview of the arguments for using Border Gateway Protocol (BGP) as the data center IP fabric control plane protocol.



Video: [What is the Best Control Plane Protocol to Use in a Data Center IP Fabric?](#)

#### Learn About Video: Why Use an Overlay Network in a Data Center?

The video *Why Use an Overlay Network in a Data Center?* presents a brief overview of the advantages of data center overlay networks.



Video: [Why Use an Overlay Network in a Data Center?](#)

## Conceptual Documents That Contain Technology Overview Videos

The following conceptual documents include brief video overviews of the technology:

- [Understanding DCB Features and Requirements on page 234](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\) on page 161](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)
- [Understanding DCBX on page 412](#)
- [Understanding PFC Functionality Across Layer 3 Interfaces on page 317](#)
- [Virtual Chassis Fabric Overview](#)
- [Understanding In-Service Software Upgrade \(ISSU\) and In-Service Software Upgrade \(ISSU\) System Requirements \(same video\)](#)



## PART 5

# Configuration Statements and Operational Commands

- [Configuration Statements \(Basic Concepts\) on page 449](#)
- [Configuration Statements \(Classifiers and Rewrite Rules\) on page 457](#)
- [Configuration Statements \(Scheduling\) on page 487](#)
- [Configuration Statements \(Data Center Bridging and Flow Control\) on page 517](#)
- [Operational Commands \(Basic Concepts\) on page 557](#)
- [Operational Commands \(Classifiers and Rewrite Rules\) on page 627](#)
- [Operational Commands \(Scheduling\) on page 687](#)
- [Operational Commands \(Data Center Bridging and Flow Control\) on page 789](#)



## CHAPTER 6

# Configuration Statements (Basic Concepts)

- [class-of-service](#) on page 450
- [traceoptions \(Class of Service\)](#) on page 454

## class-of-service

```
Syntax  class-of-service {
        classifiers {
            (dscp | dscp-ipv6 | ieee-802.1 | exp) classifier-name {
                import (classifier-name | default);
                forwarding-class class-name {
                    loss-priority level {
                        code-points [ aliases ] [ bit-patterns ];
                    }
                }
            }
        }
        code-point-aliases {
            (dscp | dscp-ipv6 | ieee-802.1) {
                alias-name bits;
            }
        }
        congestion-notification-profile profile-name {
            input {
                ieee-802.1 {
                    code-point [code-point-bits] {
                        pfc {
                            mru mru-value;
                        }
                    }
                }
                cable-length cable-length-value;
            }
            output {
                ieee-802.1 {
                    code-point [code-point-bits] {
                        flow-control-queue [queue | list-of-queues];
                    }
                }
            }
        }
        drop-profiles {
            profile-name {
                interpolate {
                    fill-level low-value fill-level high-value drop-probability 0 drop-probability high-value;
                }
            }
        }
        forwarding-class class-name {
            loss-priority level {
                code-points [ aliases ] [ bit-patterns ];
            }
        }
        forwarding-class class-name {
            scheduler scheduler-name;
        }
        forwarding-class-sets forwarding-class-set-name {
            class class-name;
        }
    }
```

```

}
forwarding-classes {
  class {
    class-name {
      queue-num queue-number <no-loss>;
    }
  }
}
host-outbound-traffic {
  forwarding-class class-name;
  dscp-code-point code-point;
}
interfaces {
  interface-name {
    congestion-notification-profile profile-name {
    }
    forwarding-class lossless-forwarding-class-name;
    forwarding-class-set forwarding-class-set-name {
      output-traffic-control-profile profile-name;
    }
    rewrite-value {
      input {
        ieee-802.1 {
          code-point code-point-bits;
        }
      }
    }
    scheduler-map scheduler-map-name
    unit logical-unit-number {
      classifiers {
        (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);
      }
      forwarding-class class-name;
      rewrite-rules {
        (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);
      }
    }
  }
}
multi-destination {
  classifiers {
    (dscp | ieee-802.1) classifier-name;
  }
}
rewrite-rules {
  (dscp | dscp-ipv6 | ieee-802.1 | exp) classifier-name {
    import (rewrite-name | default);
    forwarding-class class-name {
      loss-priority priority code-point (alias | bits);
    }
  }
}
scheduler-map-forwarding-class-sets {
  fabric-scheduler-map-name {
    forwarding-class-set fabric-forwarding-class-set-name scheduler scheduler-name;
  }
}

```

```

}
scheduler-maps {
  map-name {
    forwarding-class class-name scheduler scheduler-name;
  }
}
schedulers {
  scheduler-name {
    buffer-size (percent percentage | remainder);
    drop-profile-map loss-priority (low | medium-high | high) protocol protocol drop-profile
    drop-profile-name;
    excess-rate percent percentage;
    explicit-congestion-notification;
    priority priority;
    shaping-rate (rate | percent percentage);
    transmit-rate (percent percentage) <exact>;
  }
}
shared-buffer {
  egress {
    percent percent;
    buffer-partition (lossless | lossy | multicast) {
      percent percent
    }
  }
  ingress {
    percent percent;
    buffer-partition (lossless | lossless-headroom | lossy) {
      percent percent
    }
  }
}
system-defaults {
  classifiers exp classifier-name;
}
traffic-control-profiles profile-name {
  guaranteed-rate(rate| percent percentage);
  scheduler-map map-name;
  shaping-rate (rate| percent percentage);
}
}

```

Hierarchy Level [\[edit\]](#)

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.



**NOTE:** Not all switches support all portions of the class of service hierarchy. For example, some switches use the same classifiers for unicast and multidestination traffic, and those switches do not support the multi-destination classifier hierarchy, and some switches do not support shared buffer configuration, and those switches do not support the shared-buffer hierarchy.



**NOTE:** OCX Series switches do not support MPLS exp classifiers and rewrite rules (including MPLS system defaults), and they do not support congestion notification profiles.

**Description** Configure class-of-service parameters on the switch.

The remaining statements are explained separately.

**Default** If you do not configure any CoS features, the default CoS settings are used.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Assigning CoS Components to Interfaces on page 23](#)
- [Overview of Junos OS CoS on page 4](#)

## traceoptions (Class of Service)

---

Syntax	<pre>traceoptions {     file <i>filename</i> &lt;size <i>size</i>&gt; &lt;files <i>number</i>&gt;     &lt;world-readable   no-world-readable&gt;;     flag <i>flag</i> &lt;flag-modifier&gt;;     no-remote-trace }</pre>
Hierarchy Level	[edit <a href="#">class-of-service</a> ]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set class-of-service (CoS) tracing options.



**NOTE:** The `traceoptions` statement is not supported on the QFabric system.

Default	Traceoptions is disabled.
Options	<p><b>file <i>filename</i></b>—Name of the file to receive the tracing operation output. Enclose the name in quotation marks. Traceoption output files are located in the <code>/var/log/</code> directory.</p> <p><b>files <i>number</i></b>—(Optional) Maximum number of trace files. When a trace file named <b><i>trace-file</i></b> reaches its maximum size, it is renamed <b><i>trace-file.0</i></b>. The traceoption output continues in a second trace file named <b><i>trace-file.1</i></b>. When <b><i>trace-file.1</i></b> reaches its maximum size, output continues in a third file named <b><i>trace-file.2</i></b>, and so on. When the maximum number of trace files is reached, the oldest trace file is overwritten.</p> <p>If you specify a maximum number of files, you must also specify a maximum file size with the size option.</p> <p><b>Range:</b> 2 through 1000 files</p> <p><b>Default:</b> 1 trace file</p> <p><b><i>flag</i></b>—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements:</p> <ul style="list-style-type: none"><li>• <b>all</b>—Trace all operations.</li><li>• <b>asynch</b>—Trace asynchronous configuration processing.</li><li>• <b>chassis-scheduler</b>—Trace chassis stream scheduler processing.</li><li>• <b>cos-adjustment</b>—Trace CoS rate adjustments.</li><li>• <b>dynamic</b>—Trace dynamic CoS functions.</li><li>• <b>hardware-database</b>—Trace the chassis hardware database related processing.</li></ul>



- **init**—Trace initialization events.
- **performance-monitor**—Trace performance monitor counters.
- **process**—Trace configuration processing.
- **restart**—Trace restart processing.
- **route-socket**—Trace route-socket events.
- **show**—Trace show command servicing.
- **snmp**—Trace SNMP-related processing.
- **util**—Trace utilities.

The following are the global tracing options:

- **all**—Perform all tracing operations
- **parse**—Trace parser processing.

**no-remote-trace**—(Optional) Disable remote tracing.

**no-world-readable**—(Optional) Prevent any user from reading the log file.

**size *size***—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches its maximum size, it is renamed **trace-file.0**. Incoming tracefile data is logged in the now empty **trace-file**. When **trace-file** again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum file size, you must also specify a maximum number of trace files with the **files** option.

**Syntax:** *xk* to specify KB, *xm* to specify MB, or *xg* to specify GB

**Range:** 10 KB through the maximum file size of 4 GB (maximum is lower if 4 GB is not supported on your system)

**Default:** 1 MB

**world-readable**—(Optional) Allow any user to read the log file.

<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
---------------------------------	---



## CHAPTER 7

# Configuration Statements (Classifiers and Rewrite Rules)

- `class` (Forwarding Classes) on page 458
- `class` (Forwarding Class Sets) on page 459
- `classifiers` on page 460
- `code-point` (Rewrite Rules) on page 462
- `code-point-aliases` on page 463
- `code-points` (CoS) on page 464
- `dscp` on page 465
- `dscp-ipv6` on page 467
- `exp` on page 469
- `forwarding-class` on page 471
- `forwarding-class-sets` on page 472
- `forwarding-classes` on page 473
- `ieee-802.1` on page 475
- `import` on page 477
- `interfaces` (Class of Service) on page 478
- `loss-priority` (Classifiers) on page 480
- `loss-priority` (Rewrite Rules) on page 481
- `queue-num` on page 482
- `rewrite-rules` on page 484
- `unit` on page 485

## class (Forwarding Classes)

**Syntax**

```
class {
    class-name {
        queue-num queue-number <no-loss>;
    }
}
```

**Hierarchy Level** [edit [class-of-service forwarding-classes](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
No-loss option introduced in Junos OS Release 12.3 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Map one or more forwarding classes to a single queue. You can map unicast forwarding classes to a unicast queue (0 through 7) and multdestination forwarding classes to a multicast queue (8 through 11). The queue to which you map a forwarding class determines if the forwarding class is a unicast or multicast forwarding class.



**NOTE:** On systems that do not use the ELS CLI, if you are using Junos OS Release 12.2, use the default forwarding-class-to-queue mapping for the lossless fcoe and no-loss forwarding classes. If you explicitly configure the lossless forwarding classes, the traffic mapped to those forwarding classes is treated as lossy (best effort) traffic and does *not* receive lossless treatment.



**NOTE:** On systems that do not use the ELS CLI, if you are using Junos OS Release 12.3 or later, the default configuration is the same as the default configuration for Junos OS Release 12.2, and the default behavior is the same (the fcoe and no-loss forwarding classes receive lossless treatment). However, if you explicitly configure lossless forwarding classes, you can configure up to six lossless forwarding classes by specifying the no-loss option. If you do not specify the no-loss option in an explicit forwarding class configuration, the forwarding class is lossy. For example, if you explicitly configure the fcoe forwarding class and you do not include the no-loss option, the fcoe forwarding class is lossy, not lossless.

**Options** *class-name* —Name of the forwarding class.

The remaining statement is explained separately.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

- Related Documentation**
- [Example: Configuring Forwarding Classes](#)
  - [Example: Configuring Forwarding Classes on page 88](#)
  - [Understanding CoS Forwarding Classes](#)
  - [Understanding CoS Forwarding Classes on page 84](#)
  - [Understanding CoS Forwarding Classes](#)

## class (Forwarding Class Sets)

<b>Syntax</b>	<code>class <i>class-name</i>;</code>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service forwarding-class-sets</a> <i>forwarding-class-set-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Group forwarding classes into sets of forwarding classes (priority groups). You can group some or all of the configured forwarding classes into up to three unicast forwarding class sets and one multidestination forwarding class set.
<b>Options</b>	<i>class-name</i> —Name of the forwarding class.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS Hierarchical Port Scheduling (ETS) on page 167</a></li> <li>• <a href="#">Example: Configuring Forwarding Class Sets on page 93</a></li> <li>• <a href="#">Understanding CoS Forwarding Class Sets (Priority Groups) on page 91</a></li> </ul>

## classifiers

<b>List of Syntax</b>	<a href="#">Syntax (BA Classifiers) on page 460</a> <a href="#">Syntax (Multidestination BA Classifiers) on page 460</a> <a href="#">Syntax (Interface Classifier Association: DSCP, DSCP IPv6, IEEE) on page 460</a> <a href="#">Syntax (Global EXP Interface Classifier Association with Interfaces) on page 460</a>
<b>Syntax (BA Classifiers)</b>	<pre> classifiers {   (dscp   dscp-ipv6   ieee-802.1) classifier-name {     import (classifier-name   default);     forwarding-class class-name {       loss-priority level {         code-points [ aliases ] [ bit-patterns ];       }     }   } } </pre>
<b>Syntax (Multidestination BA Classifiers)</b>	<pre> classifiers {   (dscp   ieee-802.1) classifier-name; } </pre>
<b>Syntax (Interface Classifier Association: DSCP, DSCP IPv6, IEEE)</b>	<pre> classifiers {   (dscp   dscp-ipv6   ieee-802.1) (default   classifier-name); } </pre>
<b>Syntax (Global EXP Interface Classifier Association with Interfaces)</b>	<pre> classifiers {   exp classifier-name; } </pre>
<b>Hierarchy Level (BA Classifiers)</b>	[edit <a href="#">class-of-service</a> ],
<b>Hierarchy Level (Multidestination BA Classifiers)</b>	[edit <a href="#">class-of-service</a> multi-destination],
<b>Hierarchy Level (Interface Classifier Association: DSCP, DSCP IPv6, IEEE)</b>	[edit <a href="#">class-of-service interfaces</a> interface-name unit logical-unit-number]
<b>Hierarchy Level (Global EXP Classifier)</b>	[edit <a href="#">class-of-service</a> system-defaults]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>EXP statement introduced in Junos OS Release 12.3 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Define a unicast or multidestination CoS behavior aggregate (BA) classifier.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifier configuration.

<b>Options</b>	The statements are explained separately.
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Defining CoS Unicast BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p)</i></li> <li>• <a href="#">Defining CoS BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p) on page 52</a></li> <li>• <a href="#">Configuring a Global MPLS EXP Classifier on page 59</a></li> <li>• <i>Example: Configuring Unicast Classifiers</i></li> <li>• <i>Example: Configuring Multidestination (Multicast, Broadcast, DLF) Classifiers</i></li> <li>• <i>Understanding CoS Classifiers</i></li> <li>• <a href="#">Understanding CoS Classifiers on page 46</a></li> <li>• <i>Understanding CoS Classifiers</i></li> <li>• <a href="#">Understanding CoS MPLS EXP Classifiers and Rewrite Rules on page 56</a></li> </ul>

## code-point (Rewrite Rules)

---

<b>Syntax</b>	<code>code-point [ <i>alias</i> ] [ <i>bit-pattern</i> ];</code>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service rewrite-rules</a> ( <a href="#">dscp</a>   <a href="#">ieee-802.1</a> ) <a href="#">forwarding-class</a> <i>class-name</i> <a href="#">loss-priority</a> <i>level</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure a code-point alias or bit set to apply to a forwarding class for a rewrite rule.




**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP rewrite rules.

---

<b>Options</b>	<i>alias</i> —Name of the alias.  <i>bit-pattern</i> —Value of the code-point bits, in decimal form.
<b>Required Privilege Level</b>	<i>interfaces</i> —To view this statement in the configuration. <i>interface-control</i> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Defining CoS Rewrite Rules on page 100</a></li><li>• <a href="#">Understanding CoS Classifiers</a></li><li>• <a href="#">Understanding CoS Classifiers</a></li></ul>



## code-point-aliases

<b>Syntax</b>	code-point-aliases { (dscp  dscp-ipv6   ieee-802.1   exp) { alias-name bits; } }
<b>Hierarchy Level</b>	[edit class-of-service]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Define an alias for a CoS marker. You can use the alias instead of the bit pattern when you specify the code point during configuration.
<div>  <p><b>NOTE:</b> OCX Series switches do not support MPLS, so they do not support EXP code-point aliases.</p> </div>	
<b>Options</b>	<p>(dscp   dscp-ipv6   ieee-802.1   exp)—Set the type of classifier for which you are creating an alias.</p> <p><i>alias-name</i>—Name of the code-point alias.</p> <p><i>bits</i> —Value of the code-point bits, in decimal form.</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Defining CoS Code-Point Aliases on page 83</a></li> <li>• <a href="#">Understanding CoS Code-Point Aliases on page 81</a></li> </ul>

## code-points (CoS)

---

<b>Syntax</b>	<code>code-points [ <i>aliases</i> ] [ <i>bit-patterns</i> ];</code>
<b>Hierarchy Level</b>	[edit class-of-service classifiers (dscp   ieee-802.1) <i>classifier-name</i> forwarding-class <i>class-name</i> loss-priority <i>level</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure one or more code-point aliases or bit sets to apply to a forwarding class.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP code points or code point aliases.

---

<b>Options</b>	<i>aliases</i> —Name of the alias or aliases.  <i>bit-patterns</i> —Value of the code-point bits, in decimal form.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Understanding Interfaces</i></li><li>• <i>Example: Configuring BA Classifiers on Transparent Mode Devices</i></li></ul>

## dscp

List of Syntax	<a href="#">Syntax (Classifier) on page 465</a> <a href="#">Syntax (Code-Point Alias) on page 465</a> <a href="#">Syntax (Multidestination Classifier) on page 465</a> <a href="#">Syntax (Interface Classifier Association) on page 465</a> <a href="#">Syntax (Rewrite Rule) on page 465</a>
Syntax (Classifier)	<pre>dscp classifier-name {   import (classifier-name   default);   forwarding-class class-name {     loss-priority level {       code-points [ aliases ] [ bit-patterns ];     }   } }</pre>
Syntax (Code-Point Alias Configuration)	<pre>dscp alias-name bit-pattern;</pre>
Syntax (Multidestination Classifier Configuration)	<pre>dscp classifier-name;</pre>
Syntax (Interface Classifier Association)	<pre>dscp (classifier-name   default);</pre>
Syntax (Rewrite Rule Configuration)	<pre>dscp rewrite-name {   import (rewrite-name   default);   forwarding-class class-name {     loss-priority level {       code-point [ aliases ] [ bit-patterns ];     }   } }</pre>
Hierarchy Level (Classifier)	[edit <a href="#">class-of-service classifiers</a> ],
Hierarchy Level (Code-Point Aliases)	[edit <a href="#">class-of-service code-point-aliases</a> ],
Hierarchy Level (Multidestination Classifier)	[edit <a href="#">class-of-service multi-destination classifiers</a> ],
Hierarchy Level (Interface Classifier Association)	[edit <a href="#">class-of-service interfaces interface-name unit logical-unit-number classifiers</a> ], [edit <a href="#">class-of-service interfaces interface-name unit logical-unit-number rewrite-rules</a> ],
Hierarchy Level (Rewrite Rule)	[edit <a href="#">class-of-service rewrite-rules</a> ]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

<b>Description</b>	Define the Differentiated Services code point (DSCP) mapping that is applied to the packets.
<b>Options</b>	<p><i>classifier-name</i>—Name of the classifier.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Example: Configuring Unicast Classifiers</i></li><li>• <a href="#">Example: Configuring Classifiers on page 53</a></li><li>• <a href="#">Defining CoS Code-Point Aliases on page 83</a></li><li>• <a href="#">Defining CoS Rewrite Rules on page 100</a></li><li>• <a href="#">Assigning CoS Components to Interfaces on page 23</a></li><li>• <i>Understanding CoS Classifiers</i></li><li>• <a href="#">Understanding CoS Classifiers on page 46</a></li><li>• <i>Understanding CoS Classifiers</i></li><li>• <a href="#">Understanding CoS Rewrite Rules on page 97</a></li><li>• <a href="#">Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68</a></li><li>• <i>Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces</i></li></ul>

## dscp-ipv6

<b>List of Syntax</b>	<a href="#">Syntax (Classifier) on page 467</a> <a href="#">Syntax (Code-Point Alias) on page 467</a> <a href="#">Syntax (Interface Classifier Association) on page 467</a> <a href="#">Syntax (Rewrite Rule) on page 467</a>
<b>Syntax (Classifier)</b>	<pre>dscp-ipv6 classifier-name {   import (classifier-name   default);   forwarding-class class-name {     loss-priority level {       code-points [ aliases ] [ bit-patterns ];     }   } }</pre>
<b>Syntax (Code-Point Alias)</b>	<pre>dscp-ipv6 alias-name bit-pattern;</pre>
<b>Syntax (Interface Classifier Association)</b>	<pre>dscp-ipv6 (classifier-name   default);</pre>
<b>Syntax (Rewrite Rule)</b>	<pre>dscp-ipv6 rewrite-name {   import (rewrite-name   default);   forwarding-class class-name {     loss-priority level {       code-point [ aliases ] [ bit-patterns ];     }   } }</pre>
<b>Hierarchy (Classifier)</b>	[edit <a href="#">class-of-service classifiers</a> ],
<b>Hierarchy (Code-Point Alias)</b>	[edit <a href="#">class-of-service code-point-aliases</a> ],
<b>Hierarchy (Interface Classifier Association)</b>	[edit <a href="#">class-of-service interfaces interface-name unit logical-unit-number classifiers</a> ], [edit <a href="#">class-of-service interfaces interface-name unit logical-unit-number rewrite-rules</a> ],
<b>Hierarchy (Rewrite Rule)</b>	[edit <a href="#">class-of-service rewrite-rules</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.2 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series
<b>Description</b>	Define the Differentiated Services code point (DSCP) IPv6 mapping that is applied to the packets.



**NOTE:** On switches that use different classifiers for unicast and multidestination (multicast, broadcast, and destination lookup fail) traffic, there is no DSCP IPv6 classifier for multidestination (multicast, broadcast,

and destination lookup fail) traffic. Multidestination IPv6 traffic uses the multidestination DSCP classifier.

.....

**Options**    The statements are explained separately.

**Required Privilege**    interfaces—To view this statement in the configuration.  
**Level**                interface-control—To add this statement to the configuration.

**Related**                • [Defining CoS Code-Point Aliases on page 83](#)  
**Documentation**        • [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68](#)  
                              • *Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces*

## exp

Syntax	<pre>exp classifier-name {     import (classifier-name   default);     forwarding-class class-name {         loss-priority level {             code-points [ aliases ] [ bit-patterns ];         }     } }</pre>
Rewrite Rule Configuration	<pre>exp rewrite-name {     import (rewrite-name   default);     forwarding-class class-name {         loss-priority level {             code-point [ aliases ] [ bit-patterns ];         }     } }</pre>
Global Classifier Association with Interfaces	exp classifier-name;
Hierarchy Level	<pre>[edit class-of-service classifiers] [edit class-of-service rewrite-rules] [edit class-of-service system-defaults classifiers]</pre>
Release Information	Statement introduced in Junos OS Release 12.3X50 for the QFX Series.
Description	<p>Define the EXP code point mapping that is applied to MPLS packets. EXP classifiers are not applied to any traffic except MPLS traffic. EXP classifiers are applied only to interfaces that are configured as <b>family mpls</b> (for example, <b>set interfaces xe-0/0/35 unit 0 family mpls</b>.)</p> <p>There are no default EXP classifiers. You can configure up to 64 EXP classifiers.</p> <p>On QFX10000 switches, you can configure and apply EXP classifiers to interfaces in the same way that you configure and apply DSCP, DSCP IPv6, and IEEE classifiers to interfaces. Different interfaces can have different EXP classifiers. QFX10000 switches do not support global EXP classifiers.</p> <p>However, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, the switch uses only one EXP classifier as a global MPLS classifier on all interfaces. You specify the global EXP classifier in the <b>[edit class-of-service system-defaults]</b> hierarchy.</p>
Options	<b>classifier-name</b> —Name of the EXP classifier.
Required Privilege Level	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

**Related  
Documentation**

- [Configuring Rewrite Rules for MPLS EXP Classifiers on page 60](#)
- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules on page 56](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68](#)



## forwarding-class

<b>List of Syntax</b>	<a href="#">Classifier on page 471</a> <a href="#">Rewrite Rule on page 471</a> <a href="#">Scheduler Map on page 471</a> <a href="#">Interface on page 471</a>
<b>Classifier</b>	<pre>forwarding-class class-name {   loss-priority level {     code-points [ aliases ] [ bit-patterns ];   } }</pre>
<b>Rewrite Rule</b>	<pre>forwarding-class class-name {   loss-priority level {     code-point [ aliases ] [ bit-patterns ];   } }</pre>
<b>Scheduler Map</b>	<pre>forwarding-class class-name {   scheduler scheduler-name; }</pre>
<b>Interface</b>	<pre>forwarding-class class-name;</pre>
<b>Classifier Hierarchy Level</b>	[edit <a href="#">class-of-service classifiers</a> (dscp   dscp-ipv6   ieee-802.1   exp) classifier-name],
<b>Rewrite Rule Hierarchy Level</b>	[edit <a href="#">class-of-service rewrite-rules</a> ] (dscp   dscp-ipv6   ieee-802.1) rewrite-name   exp],
<b>Scheduler Map Hierarchy Level</b>	[edit <a href="#">class-of-service scheduler-maps</a> map-name],
<b>Interface Hierarchy Level</b>	[edit <a href="#">class-of-service interfaces</a> interface-name unit logical-unit-number]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<ul style="list-style-type: none"> <li>Classifiers—Assign incoming traffic to the specified forwarding class based on the specified code point values and assign that traffic the specified loss priority</li> <li>Rewrite rules—At the egress interface, change (rewrite) the value of the code point bits and the loss priority to specified new values for traffic assigned to the specified forwarding class, before forwarding the traffic to the next hop.</li> <li>Scheduler maps—Apply the specified scheduler to the specified forwarding class.</li> <li>Interfaces—Assign the specified forwarding class to the interface to use as a fixed classifier (all incoming traffic on the interface is classified into that forwarding class).</li> </ul>



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifiers or rewrite rules.

**Options** *class-name*—Name of the forwarding class.

The remaining statements are explained separately.

**Required Privilege** interfaces—To view this statement in the configuration.

**Level** interface-control—To add this statement to the configuration.

---

## forwarding-class-sets

---

**Syntax** forwarding-class-sets *forwarding-class-set-name* {  
    class *class-name*;  
}

**Hierarchy Level** [edit [class-of-service](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series

**Description** Assign forwarding classes to forwarding class sets (priority groups).

**Options** *forwarding-class-set-name*—Name of the forwarding class set.

The remaining statement is explained separately.

**Required Privilege** interfaces—To view this statement in the configuration.

**Level** interface-control—To add this statement to the configuration.

**Related Documentation**

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
- [Example: Configuring Forwarding Class Sets on page 93](#)
- [Understanding CoS Forwarding Class Sets \(Priority Groups\) on page 91](#)

## forwarding-classes

**Syntax**

```
forwarding-classes {
  class {
    class-name {
      queue-num queue-number
      no-loss {
      }
    }
  }
}
```

**Hierarchy Level** [edit [class-of-service](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
 No-loss option introduced in Junos OS Release 12.3 for the QFX Series.  
 Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series

**Description** Map one or more forwarding classes to a single output queue.

Switches that use different forwarding classes for unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic support 12 forwarding classes and 12 output queues (0 through 11). You map unicast forwarding classes to a unicast queue (0 through 7) and multdestination forwarding classes to a multdestination queue (8 through 11). The queue to which you map a forwarding class determines if the forwarding class is a unicast or multdestination forwarding class.

Switches that use the same forwarding classes for unicast and multdestination traffic support eight forwarding classes and eight output queues (0 through 7). You map forwarding classes to output queues. All traffic classified into one forwarding class (unicast and multdestination) uses the same output queue.

You cannot configure weighted random early detection (WRED) packet drop on forwarding classes configured with the no-loss packet drop attribute. Do not associate a drop profile with lossless forwarding classes.



**NOTE:** If you map more than one forwarding class to a queue, all of the forwarding classes mapped to the queue must have the same packet drop attribute (all of the forwarding classes must be lossy, or all of the forwarding classes mapped to a queue must be lossless).

OCX Series switches do not support the no-loss packet drop attribute and do not support lossless forwarding classes. On OCX Series switches, do not configure the no-loss packet drop attribute on forwarding classes, and do not map traffic to the default fcoe and no-loss forwarding classes (both of these default forwarding classes carry the no-loss packet drop attribute).



NOTE: On switches that do not use the ELS CLI, if you are using Junos OS Release 12.2, use the default forwarding-class-to-queue mapping for the lossless fcoe and no-loss forwarding classes. If you explicitly configure the lossless forwarding classes, the traffic mapped to those forwarding classes is treated as lossy (best effort) traffic and does *not* receive lossless treatment.



NOTE: On switches that do not use the ELS CLI, if you are using Junos OS Release 12.3 or later, the default configuration is the same as the default configuration for Junos OS Release 12.2, and the default behavior is the same (the fcoe and no-loss forwarding classes receive lossless treatment). However, if you explicitly configure lossless forwarding classes, you can configure up to six lossless forwarding classes by specifying the no-loss option. If you do not specify the no-loss option in an explicit forwarding class configuration, the forwarding class is lossy. For example, if you explicitly configure the fcoe forwarding class and you do not include the no-loss option, the fcoe forwarding class is lossy, not lossless.

**Options**     The statements are explained separately.


**Required Privilege**     interfaces—To view this statement in the configuration.  
**Level**                     interface-control—To add this statement to the configuration.

## ieee-802.1

List of Syntax	<a href="#">Syntax (Classifier) on page 475</a> <a href="#">Syntax (Code-Point Alias) on page 475</a> <a href="#">Syntax (Multidestination Classifier) on page 475</a> <a href="#">Syntax (Interface Classifier Association) on page 475</a> <a href="#">Syntax (Rewrite Rule) on page 475</a>
Syntax (Classifier)	<pre> ieee-802.1 classifier-name {   import (classifier-name   default);   forwarding-class class-name {     loss-priority level {       code-points [ aliases ] [ bit-patterns ];     }   } }</pre>
Syntax (Code-Point Alias Configuration)	<pre> ieee-802.1 alias-name bit-pattern;</pre>
Syntax (Multidestination Classifier Configuration)	<pre> ieee-802.1 classifier-name;</pre>
Syntax (Interface Classifier Association)	<pre> ieee-802.1 (classifier-name   default);</pre>
Syntax (Rewrite Rule Configuration)	<pre> ieee-802.1 rewrite-name {   import (rewrite-name   default);   forwarding-class class-name {     loss-priority level {       code-point [ aliases ] [ bit-patterns ];     }   } }</pre>
Hierarchy Level (Classifier)	[edit <a href="#">class-of-service classifiers</a> ],
Hierarchy Level (Code-Point Alias)	[edit <a href="#">class-of-service code-point-aliases</a> ],
Hierarchy Level (Multidestination Classifier)	[edit <a href="#">class-of-service multi-destination classifiers</a> ],
Hierarchy Level (Interface Classifier Association)	[edit <a href="#">class-of-service interfaces interface-name unit logical-unit-number classifiers</a> ], [edit <a href="#">class-of-service interfaces interface-name unit logical-unit-number rewrite-rules</a> ],
Hierarchy Level (Rewrite Rule)	[edit <a href="#">class-of-service rewrite-rules</a> ]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

<b>Description</b>	Configure an IEEE 802.1 classifier, configure an IEEE 802.1 code-point alias, apply a fixed IEEE 802.1 classifier to an interface, or apply an IEEE-802.1 rewrite rule.
<b>Options</b>	<p><i>classifier-name</i>—Name of the classifier.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Example: Configuring Unicast Classifiers</i></li><li>• <a href="#">Defining CoS Code-Point Aliases on page 83</a></li><li>• <a href="#">Defining CoS Rewrite Rules on page 100</a></li><li>• <a href="#">Assigning CoS Components to Interfaces on page 23</a></li><li>• <a href="#">Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68</a></li><li>• <i>Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces</i></li><li>• <i>Understanding CoS Classifiers</i></li><li>• <i>Understanding CoS Classifiers</i></li><li>• <a href="#">Understanding CoS Rewrite Rules on page 97</a></li></ul>

## import

<b>Syntax</b>	<code>import (<i>import</i>   default);</code>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service classifiers</a> ( <a href="#">dscp</a>   <a href="#">dscp-ipv6</a>   <a href="#">ieee-802.1</a>   <a href="#">exp</a> ) <i>classifier-name</i> ], [edit <a href="#">class-of-service rewrite-rules</a> ( <a href="#">dscp</a>   <a href="#">dscp-ipv6</a>   <a href="#">ieee-802.1</a>   <a href="#">exp</a> ) <i>classifier-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Specify a default or previously defined classifier.
<div>  <b>NOTE:</b> OCX Series switches do not support MPLS, so they do not support EXP classifiers and rewrite rules. </div>	
<b>Options</b>	<p><b><i>import</i></b>—Name of the classifier mapping configured at the [edit <a href="#">class-of-service classifiers</a>] hierarchy level.</p> <p><b><i>default</i></b>—Default classifier mapping.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p><b>interfaces</b>—To view this statement in the configuration.</p> <p><b>interface-control</b>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring Unicast Classifiers</a></li> <li>• <a href="#">Defining CoS BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p) on page 52</a></li> <li>• <a href="#">Defining CoS Rewrite Rules on page 100</a></li> <li>• <a href="#">Understanding CoS Classifiers</a></li> <li>• <a href="#">Understanding CoS Classifiers</a></li> <li>• <a href="#">Understanding CoS Classifiers on page 46</a></li> <li>• <a href="#">Understanding CoS Rewrite Rules on page 97</a></li> </ul>

## interfaces (Class of Service)

```
Syntax interfaces {
  interface-name {
    congestion-notification-profile profile-name {
    }
    forwarding-class forwarding-class-name;
    forwarding-class-set forwarding-class-set-name {
      output-traffic-control-profile profile-name;
    }
    rewrite-value {
      input {
        ieee-802.1{
          code-point code-point-bits;
        }
      }
    }
    scheduler-map scheduler-map-name
    unit logical-unit-number {
      classifiers {
        (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);
      }
      forwarding-class class-name;
      rewrite-rules {
        (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);
      }
    }
  }
}
```

**Hierarchy Level** [edit [class-of-service](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series

**Description** Configure interface-specific CoS properties for incoming packets.



**NOTE:** Only switches that support direct port scheduling also support applying a scheduler map directly to an interface. When using enhanced transmission selection (ETS) hierarchical port scheduling, you cannot apply a scheduler map directly to an interface; instead, you associate the scheduler map with a traffic control profile and apply the traffic control profile to the interface.



**NOTE:** Only switches that support native Fibre Channel interfaces support the rewrite-value statement, which enables you to rewrite the IEEE 802.1p code points on native Fibre Channel interfaces.





**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifiers or rewrite rules. OCX Series switches do not support the congestion-notification-profile configuration statement, which applies priority-based flow control (PFC) to interface output queues.

**Options** *interface-name*—Name of the interface.

The statements are explained separately.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Assigning CoS Components to Interfaces on page 23](#)
- *Interfaces Overview*

## loss-priority (Classifiers)

---

<b>Syntax</b>	<code>loss-priority level {     code-points [ aliases ] [ bit-patterns ]; }</code>
<b>Hierarchy Level</b>	[edit <code>class-of-service classifiers</code> ( <code>dscp</code>   <code>dscp-ipv6</code>   <code>ieee-802.1</code> ) <i>classifier-name</i> <i>forwarding-class class-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure packet loss priority value for a specific set of code-point aliases and bit patterns.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifiers.

<b>Options</b>	<p><i>level</i>—Can be one of the following:</p> <ul style="list-style-type: none"><li>• <b>low</b>—Packet has low loss priority.</li><li>• <b>medium-high</b>—Packet has medium-high loss priority.</li><li>• <b>high</b>—Packet has high loss priority.</li></ul> <p>The remaining statement is explained separately.</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Example: Configuring Unicast Classifiers</i></li><li>• <a href="#">Defining CoS BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p) on page 52</a></li><li>• <i>Understanding CoS Classifiers</i></li><li>• <a href="#">Understanding CoS Classifiers on page 46</a></li><li>• <i>Understanding CoS Classifiers</i></li></ul>

## loss-priority (Rewrite Rules)

<b>Syntax</b>	<code>loss-priority <i>level</i> {     code-point (<i>alias</i>   <i>bit-pattern</i>); }</code>
<b>Hierarchy Level</b>	[edit <code>class-of-service rewrite-rules (dscp   ieee-802.1) rewrite-name forwarding-class class-name</code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Specify a loss priority to which to apply a rewrite rule. The rewrite rule sets the code-point aliases and bit patterns for a specific forwarding class and loss priority. Packets that match the forwarding class and loss priority are rewritten with the rewrite code-point alias or bit pattern.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP rewrite rules.

<b>Options</b>	<p><i>level</i>—Can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>low</b>—Packet has low loss priority.</li> <li>• <b>medium-high</b>—Packet has medium-high loss priority.</li> <li>• <b>high</b>—Packet has high loss priority.</li> </ul> <p>The remaining statement is explained separately.</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Defining CoS Rewrite Rules on page 100</a></li> <li>• <a href="#">Understanding CoS Rewrite Rules on page 97</a></li> </ul>

## queue-num

<b>Syntax</b>	<code>queue-num <i>queue-number</i> &lt;no-loss&gt;;</code>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service forwarding-classes class</a> <i>class-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. No-loss option introduced in Junos OS Release 12.3 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>Map a forwarding class to an output queue number. Optionally, configure the forwarding class as a lossless forwarding class. Each switch provides enough output queues so that you can map forwarding classes to queues on a one-to-one basis, so each forwarding class can have a dedicated output queue.</p> <p>On switches that use different forwarding classes and output queues for unicast and multdestination (multicast, broadcast, destination lookup fail) traffic, the switch supports 12 forwarding classes and 12 output queues, eight of each for unicast traffic and four of each for multdestination traffic. You can map some or all of the eight unicast forwarding classes to a unicast queue (0 through 7) and some or all of the four multdestination forwarding classes to the a multdestination queue (8 through 11). You cannot map a forwarding class to more than one queue (each forwarding class maps to one and only one queue), but you can map multiple forwarding classes to one queue. The queue to which you map a forwarding class determines if the forwarding class is a unicast or multdestination forwarding class.</p> <p>On switches that use the same forwarding classes and output queues for unicast and multdestination traffic, the switch supports eight forwarding classes and eight output queues. You can map some or all of the eight of the forwarding classes to queues (0 through 7). You cannot map a forwarding class to more than one queue (each forwarding class maps to one and only one queue), but you can map multiple forwarding classes to one queue.</p> <p>You cannot configure weighted random early detection (WRED) packet drop on forwarding classes configured with the no-loss packet drop attribute. Do not associate a drop profile with lossless forwarding classes. Instead, use priority-based flow control (PFC) to prevent frame drop on lossless forwarding classes.</p>



**NOTE:** If you map more than one forwarding class to a queue, all of the forwarding classes mapped to the same queue must have the same packet drop attribute (all of the forwarding classes must be lossy, or all of the forwarding classes mapped to a queue must be lossless).

OCX Series switches do not support the no-loss packet drop attribute and do not support lossless forwarding classes. On OCX Series switches, do not configure the no-loss packet drop attribute on forwarding classes, and do not map traffic to the default fcoe and no-loss forwarding classes (both of these default forwarding classes carry the no-loss packet drop attribute).



**NOTE:** On systems that do not use the ELS CLI, if you are using Junos OS Release 12.2, use the default forwarding-class-to-queue mapping for the lossless fcoe and no-loss forwarding classes. If you explicitly configure lossless forwarding classes, the traffic mapped to those forwarding classes is treated as lossy (best effort) traffic and does *not* receive lossless treatment.



**NOTE:** On systems that do not use the ELS CLI, if you are using Junos OS Release 12.3 or later, the default configuration is the same as the default configuration for Junos OS Release 12.2, and the default behavior is the same (the fcoe and no-loss forwarding classes receive lossless treatment). However, if you explicitly configure lossless forwarding classes, you can configure up to six lossless forwarding classes by specifying the no-loss option. If you do not specify the no-loss option in an explicit forwarding class configuration, the forwarding class is lossy. For example, if you explicitly configure the fcoe forwarding class and you do not include the no-loss option, the fcoe forwarding class is lossy, not lossless.


**Options** *queue-number*—(Switches that use different output queues for unicast and multidestination traffic) Number of the CoS unicast queue (0 through 7) or the CoS multidestination queue (8 through 11).

*queue-number*—(Switches that use the same output queues for unicast and multidestination traffic) Number of the CoS queue (0 through 7).

**no-loss**—Optional packet drop attribute keyword to configure the forwarding class as lossless.

**Required Privilege** interfaces—To view this statement in the configuration.  
**Level** interface-control—To add this statement to the configuration.

## rewrite-rules

<b>List of Syntax</b>	<a href="#">Syntax (Rewrite Rule Configuration) on page 484</a> <a href="#">Syntax (Rewrite Rule Association with Interface) on page 484</a>
<b>Syntax (Rewrite Rule Configuration)</b>	<pre>rewrite-rules {   (dscp   dscp-ipv6   ieee-802.1   exp) rewrite-name {     import (rewrite-name   default);     forwarding-class class-name {       loss-priority priority code-point (alias   bits);     }   } }</pre>
<b>Syntax (Rewrite Rule Association with Interface)</b>	<pre>rewrite-rules {   (dscp   dscp-ipv6   ieee-802.1   exp) rewrite-name; }</pre>
<b>Hierarchy Level (Rewrite Rule Configuration)</b>	[edit <a href="#">class-of-service</a> ],
<b>Hierarchy Level (Rewrite Rule Association with Interface)</b>	[edit <a href="#">class-of-service interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>EXP statement introduced in Junos OS Release 12.3 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<p>Configure rewrite rules that map traffic to code points when traffic exits the system, and apply the rewrite rules to a specific interface.</p> <p>MPLS EXP rewrite rules can only be bound to logical interfaces, not to physical interfaces. You can configure up to 64 EXP rewrite rules, but you can use only 16 EXP rewrite rules on switch interfaces at any given time.</p>
	<div>  <p><b>NOTE:</b> OCX Series switches do not support MPLS, so they do not support EXP rewrite rules.</p> </div>
<b>Options</b>	The statements are explained separately.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Defining CoS Rewrite Rules on page 100</a></li> <li>• <a href="#">Configuring Rewrite Rules for MPLS EXP Classifiers on page 60</a></li> </ul>

- [Understanding CoS Rewrite Rules on page 97](#)
- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules on page 56](#)

## unit

**Syntax** `unit logical-unit-number {  
     classifiers {  
         (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);  
     }  
     forwarding-class class-name;  
     rewrite-rules {  
         (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);  
     }  
 }`

**Hierarchy Level** [edit [class-of-service interfaces](#) *interface-name*]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
 Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Configure a logical interface on the physical device. You must configure a logical interface to use the physical device.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifiers and rewrite rules.

**Options** *logical-unit-number*—Number of the logical unit.

**Range:** 0 through 16,385

The remaining statements are explained separately.

**Required Privilege Level** *interfaces*—To view this statement in the configuration.  
*interface-control*—To add this statement to the configuration.

**Related Documentation** • [Assigning CoS Components to Interfaces on page 23](#)





## CHAPTER 8

# Configuration Statements (Scheduling)

- [buffer-size on page 488](#)
- [drop-probability on page 493](#)
- [drop-profile on page 494](#)
- [drop-profile-map on page 494](#)
- [drop-profiles on page 495](#)
- [excess-rate on page 496](#)
- [explicit-congestion-notification on page 497](#)
- [fill-level on page 498](#)
- [forwarding-class on page 500](#)
- [forwarding-class-set on page 501](#)
- [guaranteed-rate on page 502](#)
- [interpolate on page 503](#)
- [loss-priority \(Drop Profiles\) on page 504](#)
- [output-traffic-control-profile on page 504](#)
- [priority \(Schedulers\) on page 505](#)
- [protocol \(Drop Profile Map\) on page 506](#)
- [scheduler on page 507](#)
- [scheduler-map on page 507](#)
- [scheduler-maps on page 508](#)
- [schedulers on page 509](#)
- [shaping-rate on page 510](#)
- [traffic-control-profiles on page 512](#)
- [transmit-rate on page 513](#)

## buffer-size

<b>Syntax</b>	<code>buffer-size (percent <i>percent</i>   remainder);</code>
<b>Hierarchy Level</b>	[edit <code>class-of-service schedulers <i>scheduler-name</i></code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>On all switches, you configure the proportion of port buffers allocated to a particular output queue using the following process:</p> <ol style="list-style-type: none"> <li>1. Configure a scheduler and set the <b>buffer-size</b> option.</li> <li>2. Use a scheduler map to map the scheduler to the forwarding class that is mapped to the queue to which you want to apply the buffer size.</li> </ol> <p>For example, suppose that you want to change the dedicated buffer allocation for FCoE traffic. FCoE traffic is mapped to the <code>fcoe</code> forwarding class, and the <code>fcoe</code> forwarding class is mapped to queue 3 (this is the default configuration). To use default FCoE traffic mapping, in the scheduler map configuration, map the scheduler to the <b>fcoe</b> forwarding class.</p> <ol style="list-style-type: none"> <li>3. If you are using enhanced transmission selection (ETS) hierarchical scheduling, associate the scheduler map with the traffic control profile you want to use on the egress ports that carry FCoE traffic. If you are using direct port scheduling, skip this step.</li> <li>4. If you are using ETS, associate the traffic control profile that includes the scheduler map with the desired egress ports. For this example, you associate the traffic control profile with the ports that carry FCoE traffic. If you are using port scheduling, associate the scheduler map with the desired egress ports.</li> </ol> <p>Queue 3, which is mapped to the <code>fcoe</code> forwarding class and therefore to the FCoE traffic, receives the dedicated buffer allocation specified in the <b>buffer-size</b> statement.</p>



**NOTE:** The total of all of the explicitly configured buffer size percentages for all of the queues on a port cannot exceed 100 percent.

### QFX10000 Switches

On QFX10000 switches, the buffer size is the amount of time in milliseconds of port bandwidth that a queue can use to continue to transmit packets during periods of congestion, before the buffer runs out and packets begin to drop.

The switch can use up to 100 ms total (combined) buffer space for all queues on a port. A buffer-size configured as one percent is equal to 1 ms of buffer usage. A buffer-size of 15 percent (the default value for the best effort and network control queues) is equal to 15 ms of buffer usage.

The total buffer size of the switch is 4 GB. A 40-Gigabit port can use up to 500 MB of buffer space, which is equivalent to 100 ms of port bandwidth on a 40-Gigabit port. A 10-Gigabit port can use up to 125 MB of buffer space, which is equivalent to 100 ms of port bandwidth on a 10-Gigabit port. The total buffer sizes of the eight output queues on a port cannot exceed 100 percent, which is equal to the full 100 ms total buffer available to a port. The maximum amount of buffer space any queue can use is also 100 ms (which equates to a 100 percent buffer-size configuration), but if one queue uses all of the buffer, then no other queue receives buffer space.

There is no minimum buffer allocation, so you can set the buffer-size to zero (0) for a queue. However, we recommend that on queues on which you enable PFC to support lossless transport, you allocate a minimum of 5 ms (a minimum buffer-size of 5 percent). The two default lossless queues, fcoe and no-loss, have buffer-size default values of 35 ms (35 percent).

Queue buffer allocation is dynamic, shared among ports as needed. However, a queue cannot use more than its configured amount of buffer space. For example, if you are using the default CoS configuration, the best-effort queue receives a maximum of 15 ms of buffer space because the default transmit rate for the best-effort queue is 15 percent.

If a switch experiences congestion, queues continue to receive their full buffer allocation until 90 percent of the 4 GB buffer space is consumed. When 90 percent of the buffer space is in use, the amount of buffer space per port, per queue, is reduced in proportion to the configured buffer size for each queue. As the percentage of consumed buffer space rises above 90 percent, the amount of buffer space per port, per queue, continues to be reduced.

On 40-Gigabit ports, because the total buffer is 4 GB and the maximum buffer a port can use is 500 MB, up to seven 40-Gigabit ports can consume their full 100 ms allocation of buffer space. However, if an eighth 40-Gigabit port requires the full 500 MB of buffer space, then the buffer allocations are proportionally reduced because the buffer consumption is above 90 percent.

On 10-Gigabit ports, because the total buffer is 4 GB and the maximum buffer a port can use is 125 MB, up to 28 10-Gigabit ports can consume their full 100 ms allocation of buffer space. However, if a 29th 10-Gigabit port requires the full 125 MB of buffer space, then the buffer allocations are proportionally reduced because the buffer consumption is above 90 percent.

**QFX5100, EX4600,  
QFX3500, and  
QFX3600 Switches,  
and QFabric Systems**

Set the dedicated buffer size of the egress queue that you bind the scheduler to in the scheduler map configuration. The switch allocates space from the global dedicated buffer pool to ports and queues in a hierarchical manner. The switch allocates an equal number of dedicated buffers to each egress port, so each egress port receives the same amount of dedicated buffer space. The amount of dedicated buffer space per port is not configurable.

However, the **buffer-size** statement allows you to control the way each port allocates its share of dedicated buffers to its queues. For example, if a port only uses two queues to forward traffic, you can configure the port to allocate all of its dedicated buffer space to those two ports and avoid wasting buffer space on queues that are not in use. We recommend that the buffer size should be the same size as the minimum guaranteed transmission rate (the **transmit-rate**).

**Default** The default behavior of the differs on different switches.

#### QFX10000 Switches

If you do not configure buffer-size and you do not explicitly configure a queue scheduler, the default buffer-size is the default transmit rate of the queue. If you explicitly configure a queue scheduler, the default buffer allocations are not used. If you explicitly configure a queue scheduler, configure the buffer-size for each queue in the scheduler, keeping in mind that the total buffer-size of the queues cannot exceed 100 percent (100 ms).

[Table 81 on page 491](#) shows the default queue buffer sizes on QFX10000 switches. The default buffer size is the same as the default transmit rate for each default queue:

**Table 81: Default Output Queue Buffer Sizes (QFX10000 Switches)**

Queue Number	Forwarding Class	Transmit Rate	Buffer Size
0	best-effort	15%	15%
3	fcoe	35%	35%
4	no-loss	35%	35%
7	network-control	15%	15%

By default, only the queues mapped to the default forwarding classes receive buffer space from the port buffer pool. (Buffers are not wasted on queues that do not carry traffic.)

#### QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems

The port allocates dedicated buffers to queues that have an explicitly configured scheduler buffer size. If you do not explicitly configure a scheduler buffer size for a queue, the port serves the explicitly configured queues first. Then the port divides the remaining dedicated buffers equally among the queues that have an explicitly attached scheduler *without* an explicitly configured buffer size configuration. (If you configure a scheduler, but you do not configure the buffer size parameter, the default is equivalent to configuring the buffer size with the **remainder** option.)

If you use the default scheduler and scheduler map on a port (no explicit scheduler configuration), then the port allocates its dedicated buffer pool to queues based on the default scheduling. [Table 82 on page 492](#) shows the default queue buffer sizes. The default buffer size is the same as the default transmit rate for each default queue:

Table 82: Default Output Queue Buffer Sizes (QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems)

Queue Number	Forwarding Class	Transmit Rate	Buffer Size
0	best-effort	5%	5%
3	fcoe	35%	35%
4	no-loss	35%	35%
7	network-control	5%	5%
8	mcast	20%	20%

By default, only the queues mapped to the default forwarding classes receive buffer space from the port buffer pool. (Buffers are not wasted on queues that do not carry traffic.)



**NOTE:** OCX Series switches do not support lossless transport. On OCX Series switches, do not map traffic to the lossless default fcoe and no-loss forwarding classes. OCX Series default DSCP classification does not map traffic to the fcoe and no-loss forwarding classes, so by default, the OCX system does not classify traffic into those forwarding classes. (On other switches, the fcoe and no-loss forwarding classes provide lossless transport for Layer 2 traffic. OCX Series switches do not support lossless Layer 2 transport.) The active forwarding classes (best-effort, network-control, and mcast) share the unused bandwidth assigned to the fcoe and no-loss forwarding classes.

**Options**    **percent percent**—Percentage of the port dedicated buffer pool allocated to the queue (or queues) mapped to the scheduler.

**remainder**—Remaining dedicated buffer pool after the port satisfies the needs of the explicitly configured buffers. The port divides the remaining buffers equally among the queues that are explicitly attached to a scheduler but that do not have an explicit buffer size configuration (or are configured with **remainder** as the buffer size).

**Required Privilege Level**    interfaces—To view this statement in the configuration.  
    interface-control—To add this statement to the configuration.

## drop-probability

<b>List of Syntax</b>	QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems on page 493 QFX10000 Switches on page 493
QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems	drop-probability 0 drop-probability <i>high-value</i> ;
QFX10000 Switches	drop-probability <i>percentage1 percentage2 ... percentage32</i> ;
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service drop-profiles profile-name interpolate</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>When configuring WRED, map the packet <b>drop-probability</b> to the fullness of a queue (<b>fill-level</b>). You configure the <b>fill-level</b> and <b>drop-probability</b> statements in related pairs. The pairs of fill level and drop probability values set a probability of dropping packets at a specified queue fullness value.</p> <p>On switches that support only two fill level/drop probability pairs, the first drop probability is always zero. The first fill level/drop probability pair sets the drop start point, and the second fill level/drop probability pair sets the drop end point.</p> <p>On switches that support 32 fill level/drop probability pairs, the first fill level/drop probability pair sets the drop start point, and the last fill level/drop probability pair sets the drop end point.</p> <p>As the queue fills from the drop start point to the drop end point, the rate of packet drop increases in a curve pattern. The higher the queue fill level, the higher the probability of dropping packets.</p>
<b>Options</b>	<p>0 (switches that support only two fill level/drop probability pairs)—Probability that packets will drop at the lowest <b>fill-level</b> value. This is always zero, because until the queue reaches the specified low <b>fill-level</b> value, no packets are scheduled to drop.</p> <p><b>Range:</b> 0</p> <p><b>high-value</b> (switches that support only two fill level/drop probability pairs)—The maximum probability that packets will drop before queue fullness exceeds the high value of the queue <b>fill-level</b>, expressed as a percentage. If the queue fills beyond the high <b>fill-level</b> value, all packets drop.</p> <p><b>Range:</b> 0 through 100 percent</p> <p><i>percentage1 percentage2 ... percentage32</i> (switches that support 32 fill level/drop probability pairs)—The probability that packets will drop before the queue fullness exceeds the <b>fill-level</b> value, expressed as a percentage. Each drop probability pairs with a queue fill level to define the probability of a packet dropping at a specified queue fullness.</p>

**Range:** 0 through 100 percent

**Required Privilege** interface—To view this statement in the configuration.  
**Level** interface-control—To add this statement to the configuration.

---

## drop-profile

---

<b>Syntax</b>	<code>drop-profile <i>profile-name</i>;</code>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service schedulers scheduler-name</a> <b>drop-profile-map loss-priority</b> (low   medium-high   high) <a href="#">protocol protocol</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Define drop profiles for weighted random early detection (WRED). When a packet arrives, WRED checks the queue fill level specified in the drop profile. If the fill level corresponds to a nonzero drop probability, the WRED algorithm determines whether to drop the arriving packet.
<b>Options</b>	<b><i>profile-name</i></b> —Name of the drop profile.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Example: Configuring Drop Profile Maps on page 213</a></li></ul>

---

## drop-profile-map

---

<b>Syntax</b>	<code>drop-profile-map <b>loss-priority</b> (low   medium-high   high) <a href="#">protocol protocol</a> <b>drop-profile</b> <i>drop-profile-name</i>;</code>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service schedulers scheduler-name</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Map a drop profile to a loss priority and protocol for weighted random early detection (WRED). When a packet arrives, WRED checks the queue fill level. If the fill level corresponds to a nonzero drop probability, the WRED algorithm determines whether to drop the arriving packet.
<b>Options</b>	The statements are explained separately.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Example: Configuring Drop Profile Maps on page 213</a></li></ul>



## drop-profiles

<b>List of Syntax</b>	QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems on page 495 QFX10000 Switches on page 495
QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems	<pre>drop-profiles {   profile-name {     interpolate {       fill-level low-value fill-level high-value drop-probability 0 drop-probability high-value;     }   } }</pre>
QFX10000 Switches	<pre>drop-profiles {   profile-name {     interpolate {       fill-level level1 level2 ... level32 drop-probability percent1 percent2 ... percent32;     }   } }</pre>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>Define drop profiles for weighted random early detection (WRED).</p> <p>For a packet to be dropped, it must match the drop profile. When a packet arrives, WRED checks the queue fill level. If the fill level corresponds to a nonzero drop probability, the WRED algorithm determines whether to drop the arriving packet.</p>
<b>Options</b>	<p><i>profile-name</i>—Name of the drop profile.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

## excess-rate

---

<b>Syntax</b>	<code>excess-rate percent <i>percentage</i>;</code>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service traffic-control-profiles <i>profile-name</i></a> ], [edit <a href="#">class-of-service schedulers <i>scheduler-name</i></a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X53-D10 for the QFX Series.
<b>Description</b>	<p>Determine the percentage of excess port bandwidth for which a queue (forwarding class) that is not a strict-high priority queue or forwarding class set (priority group) can contend. Excess bandwidth is the extra port bandwidth left after strict-high priority queues and the guaranteed minimum bandwidth requirements of other queues (as determined by each queue's transmit rate) are satisfied. With the exception of strict-high priority queues, the switch allocates extra port bandwidth to queues or to priority groups based on the configured excess rate. If you do not configure an excess rate for a queue, the default excess rate is the same as the transmit rate.</p> <p>You cannot configure an excess rate on strict-high priority queues. Strict-high priority queues receive extra bandwidth based on an extra bandwidth sharing weight of "1", which is not configurable. However, the switch serves traffic on strict-high priority queues up to the configured transmit rate before it serves any other queues, so by configuring an appropriate transmit rate on a strict-high priority queue, you can guarantee strict-high priority traffic on that queue is treated in the manner you want.</p>
<b>Options</b>	<b>percent <i>percentage</i></b> —Percentage of the excess bandwidth to share. <b>Range:</b> 0 through 100 percent
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Defining CoS Queue Schedulers for Port Scheduling on page 138</a></li><li>• <a href="#">Example: Configuring Traffic Control Profiles (Priority Group Scheduling) on page 158</a></li><li>• <a href="#">Understanding CoS Port Schedulers on QFX Switches on page 125</a></li><li>• <a href="#">Understanding CoS Traffic Control Profiles on page 153</a></li></ul>

## explicit-congestion-notification

<b>Syntax</b>	explicit-congestion-notification;
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service schedulers</a> <i>scheduler-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 13.2X51 for EX Series switches. Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>Enable explicit congestion notification (ECN) on the output queue (forwarding class) or output queues (forwarding classes) mapped to the scheduler. ECN enables end-to-end congestion notification between two endpoints on TCP/IP based networks. The two endpoints are an ECN-enabled sender and an ECN-enabled receiver. ECN must be enabled on both endpoints and on all of the intermediate devices between the endpoints for ECN to work properly. Any device in the transmission path that does not support ECN breaks the end-to-end ECN functionality.</p> <p>A weighted random early detection (WRED) packet drop profile must be applied to the output queues on which ECN is enabled. ECN uses the WRED drop profile thresholds to mark packets when the output queue experiences congestion.</p> <p>ECN reduces packet loss by forwarding ECN-capable packets during periods of network congestion instead of dropping those packets. (TCP notifies the network about congestion by dropping packets.) During periods of congestion, ECN marks ECN-capable packets that egress from congested queues. When the receiver receives an ECN packet that is marked as experiencing congestion, the receiver echoes the congestion state back to the sender. The sender then reduces its transmission rate to clear the congestion.</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring ECN on page 224</a></li> <li>• <a href="#">Understanding CoS Explicit Congestion Notification on page 216</a></li> </ul>

## fill-level

<b>List of Syntax</b>	QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems on page 498 QFX10000 Switches on page 498
QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems	fill-level <i>low-value</i> fill-level <i>high-value</i> ;
QFX10000 Switches	fill-level <i>level1 level2 ... level32</i> ;
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service drop-profiles profile-name interpolate</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>When configuring weighted random early detection (WRED), map the fullness of a queue to a packet <a href="#">drop-probability</a> value. You configure the <b>fill-level</b> and <b>drop-probability</b> statements in related pairs. The pairs of fill level and drop probability values set a probability of dropping packets at a specified queue fullness value.</p> <p>The first fill level is the packet drop start point. Packets do not drop until the queue fullness reaches the first fill level. The last fill level is the packet drop end point. After the queue exceeds the fullness set by the drop end point, all non-ECN packets are dropped. As the queue fills from the drop start point to the drop end point, the rate of packet drop increases in a curve pattern. The higher the queue fill level, the higher the probability of dropping packets.</p> <p>On switches that support only two fill level/drop probability pairs, the two pairs are the drop start point and the drop end point. On switches that support up to 32 fill level/drop probability pairs, you can configure intermediate interpolations between the drop start point and the drop end point, which provides greater flexibility in controlling the packet drop curve.</p>



**NOTE:** Do not configure the last fill level as 100 percent.

<b>Options</b>	<p><b>low-value</b> (switches that support only two fill level/drop probability pairs)—Fullness of the queue before packets begin to drop, expressed as a percentage. The low value must be less than the high value.</p> <p><b>Range:</b> 0 through 100</p> <p><b>high-value</b> (switches that support only two fill level/drop probability pairs)—Fullness of the queue before it reaches the maximum drop probability. If the queue fills beyond the fill level high value, all packets drop. The high value must be greater than the low value.</p> <p><b>Range:</b> 0 through 100</p>
----------------	---

*level1 level2 ... level32* (switches that support 32 fill level/drop probability pairs)—The queue fullness level, expressed as a percentage. Each fill level pairs with a drop probability to define the probability of a packet dropping at a specified queue fullness.

**Range:** 0 through 100

<b>Required Privilege</b>	interface—To view this statement in the configuration.
<b>Level</b>	interface-control—To add this statement to the configuration.

## forwarding-class

<b>List of Syntax</b>	<a href="#">Classifier on page 500</a> <a href="#">Rewrite Rule on page 500</a> <a href="#">Scheduler Map on page 500</a> <a href="#">Interface on page 500</a>
<b>Classifier</b>	<pre>forwarding-class class-name {   loss-priority level {     code-points [ aliases ] [ bit-patterns ];   } }</pre>
<b>Rewrite Rule</b>	<pre>forwarding-class class-name {   loss-priority level {     code-point [ aliases ] [ bit-patterns ];   } }</pre>
<b>Scheduler Map</b>	<pre>forwarding-class class-name {   scheduler scheduler-name; }</pre>
<b>Interface</b>	<pre>forwarding-class class-name;</pre>
<b>Classifier Hierarchy Level</b>	[edit <a href="#">class-of-service classifiers</a> (dscp   dscp-ipv6   ieee-802.1   exp) classifier-name],
<b>Rewrite Rule Hierarchy Level</b>	[edit <a href="#">class-of-service rewrite-rules</a> ] (dscp   dscp-ipv6   ieee-802.1) rewrite-name   exp],
<b>Scheduler Map Hierarchy Level</b>	[edit <a href="#">class-of-service scheduler-maps</a> map-name],
<b>Interface Hierarchy Level</b>	[edit <a href="#">class-of-service interfaces</a> interface-name unit logical-unit-number]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<ul style="list-style-type: none"> <li>Classifiers—Assign incoming traffic to the specified forwarding class based on the specified code point values and assign that traffic the specified loss priority</li> <li>Rewrite rules—At the egress interface, change (rewrite) the value of the code point bits and the loss priority to specified new values for traffic assigned to the specified forwarding class, before forwarding the traffic to the next hop.</li> <li>Scheduler maps—Apply the specified scheduler to the specified forwarding class.</li> <li>Interfaces—Assign the specified forwarding class to the interface to use as a fixed classifier (all incoming traffic on the interface is classified into that forwarding class).</li> </ul>



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifiers or rewrite rules.

**Options** *class-name*—Name of the forwarding class.

The remaining statements are explained separately.

**Required Privilege** interfaces—To view this statement in the configuration.

**Level** interface-control—To add this statement to the configuration.

## forwarding-class-set

**Syntax** `forwarding-class-set forwarding-class-set-name {  
    output-traffic-control-profile profile-name;  
}`

**Hierarchy Level** [edit [class-of-service interfaces](#) *interface-name*]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Apply a previously defined forwarding class set to an output traffic control profile.

**Options** *forwarding-class-set-name*—Name of the forwarding class set.



The remaining statement is explained separately.

**Required Privilege** interfaces—To view this statement in the configuration.

**Level** interface-control—To add this statement to the configuration.

- Related Documentation**
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
  - [Assigning CoS Components to Interfaces on page 23](#)
  - [Understanding CoS Forwarding Class Sets \(Priority Groups\) on page 91](#)

## guaranteed-rate

<b>Syntax</b>	<code>guaranteed-rate (rate  percent <i>percentage</i>);</code>
<b>Hierarchy Level</b>	[edit <code>class-of-service traffic-control-profiles traffic-control-profile-name</code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure a guaranteed minimum rate of transmission for a traffic control profile. The sum of the guaranteed rates of all of the forwarding class sets (priority groups) on a port should not exceed the total port bandwidth. The guaranteed rate also determines the amount of excess (extra) port bandwidth that the priority group (forwarding class set) can share. Extra port bandwidth is allocated among the priority groups on a port in proportion to the guaranteed rate of each priority group.
	<p> <b>NOTE:</b> You cannot configure a guaranteed rate for a forwarding class set (priority group) that includes strict-high priority queues. If the traffic control profile is for a forwarding class set that contains strict-high priority queues, do not configure a guaranteed rate.</p>
<b>Default</b>	If you do not specify a guaranteed rate, the guaranteed rate is zero (0) and there is no minimum guaranteed bandwidth.
	<p> <b>NOTE:</b> If you do not configure a guaranteed rate for a traffic control profile, the queues that belong to any forwarding class set (priority group) that uses that traffic control profile cannot have a configured transmit rate. The result is that there is no minimum guaranteed bandwidth for those queues and that those queues can be starved during periods of congestion.</p>
<b>Options</b>	<p><b>percent <i>percentage</i></b>—Minimum percentage of transmission capacity allocated to the forwarding class set or logical interface. <b>Range:</b> 1 through 100 percent</p> <p><b><i>rate</i></b>—Minimum transmission rate allocated to the forwarding class set or logical interface, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000). <b>Range:</b> 1000 through 10,000,000,000 bps</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>



- Related Documentation**
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
  - [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
  - [Example: Configuring Minimum Guaranteed Output Bandwidth on page 194](#)
  - [Understanding CoS Traffic Control Profiles on page 153](#)
  - [output-traffic-control-profile on page 504](#)

## interpolate

<b>List of Syntax</b>	QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems on page 503 QFX10000 Switches on page 503
QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems	<pre>interpolate {   fill-level low-value fill-level high-value;   drop-probability 0 drop-probability high-value; }</pre>
QFX10000 Switches	<pre>interpolate {   fill-level level1 level2 ... level32 drop-probability percent1 percent2 ... percent32; }</pre>
<b>Hierarchy Level</b>	[edit class-of-service <a href="#">drop-profiles</a> <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Specify values for interpolating the relationship between queue fill level and drop probability for weighted random early detection (WRED) drop profiles.  The statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

## loss-priority (Drop Profiles)

---

<b>Syntax</b>	<code>loss-priority level protocol protocol drop-profile profile-name;</code>
<b>Hierarchy Level</b>	[edit <code>class-of-service schedulers scheduler-name drop-profile-map</code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure packet loss priority value for a weighted random early detection (WRED) drop profile mapped to a system drop profile.
<b>Options</b>	<p><i>level</i>—Can be one of the following:</p> <ul style="list-style-type: none"><li>• <b>low</b>—Packet has low loss priority.</li><li>• <b>medium-high</b>—Packet has medium-high loss priority.</li><li>• <b>high</b>—Packet has high loss priority.</li></ul> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p><i>interfaces</i>—To view this statement in the configuration.</p> <p><i>interface-control</i>—To add this statement to the configuration.</p>

## output-traffic-control-profile

---

<b>Syntax</b>	<code>output-traffic-control-profile profile-name;</code>
<b>Hierarchy Level</b>	[edit <code>class-of-service interfaces interface-name forwarding-class-set forwarding-class-set-name</code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Apply an output traffic scheduling and shaping profile to a forwarding class set (priority group).
<b>Options</b>	<p><i>profile-name</i>—Name of the traffic-control profile to apply to the specified forwarding class set.</p>
<b>Required Privilege Level</b>	<p><i>interfaces</i>—To view this statement in the configuration.</p> <p><i>interface-control</i>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS Hierarchical Port Scheduling (ETS) on page 167</a></li><li>• <a href="#">Example: Configuring Traffic Control Profiles (Priority Group Scheduling) on page 158</a></li><li>• <a href="#">Assigning CoS Components to Interfaces on page 23</a></li><li>• <a href="#">Understanding CoS Traffic Control Profiles on page 153</a></li></ul>

## priority (Schedulers)

<b>Syntax</b>	<code>priority <i>priority</i>;</code>
<b>Hierarchy Level</b>	[edit <code>class-of-service schedulers scheduler-name</code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Specify the packet bandwidth-scheduling priority value.



**NOTE:** On QFabric systems, the `priority` statement is valid only for Node device queue scheduling. The `priority` statement is not allowed for Interconnect device queue scheduling. If you map a scheduler that includes a `priority` configuration to a fabric forwarding class at the [edit `class-of-service scheduler-map-fcset`] hierarchy level, the system generates a commit error. (On the Interconnect device, fabric `fc-sets` are not user-definable. Only the `fabric_fcset_strict_high` fabric `fc-set` is configured with high priority, and this configuration cannot be changed.)

**Options** `priority`—It can be one of the following:

- **low**—Scheduler has low priority.
- **strict-high**—Scheduler has strict high priority. On QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, you can configure only one queue as a strict-high priority queue. On QFX10000 switches, you can configure as many strict-high priority queues as you want. However, because strict-high priority traffic takes precedence over all other traffic, too much strict-high priority traffic can starve the other output queues.

Strict-high priority allocates the scheduled bandwidth to the packets on the queue before any other queue receives bandwidth. Other queues receive the bandwidth that remains after the strict-high queue has been serviced.



**NOTE:** On QFX10000 switches, we strongly recommend that you apply a transmit rate to strict-high priority queues to prevent them from starving other queues. A transmit rate configured on a strict-high priority queue limits the amount of traffic that receives strict-high priority treatment to the amount or percentage set by the transmit rate. The switch treats traffic in excess of the transmit rate as best-effort traffic that receives bandwidth from the leftover (excess) port bandwidth pool. On strict-high priority queues, all traffic that exceeds the transmit rate shares in the port excess bandwidth pool based on the strict-high priority excess bandwidth sharing weight of “1”, which is not configurable. The actual amount of extra bandwidth that traffic exceeding the transmit rate receives depends on

how many other queues consume excess bandwidth and the excess rates of those queues.

On QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, we recommend that you always apply a shaping rate to strict-high priority queues to prevent them from starving other queues. A shaping rate (shaper) sets the maximum amount of bandwidth a queue can consume. (Unlike using the transmit rate on a QFX10000 switch to limit traffic that receives strict-high priority treatment, traffic that exceeds the shaping rate is dropped, and is not treated as best-effort traffic that shares in excess bandwidth.) If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.

---

<b>Required Privilege</b>	interfaces—To view this statement in the configuration.
<b>Level</b>	interface-control—To add this statement to the configuration.

---

## protocol (Drop Profile Map)

---

<b>Syntax</b>	<code>protocol <i>protocol</i> drop-profile <i>profile-name</i>;</code>
<b>Hierarchy Level</b>	[edit <code>class-of-service schedulers <i>scheduler-name</i> drop-profile-map loss-priority (low   medium-high   high)</code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure the protocol type for the specified weighted random early detection (WRED) drop profile.
<b>Options</b>	<b><i>protocol</i></b> —Type of protocol. The protocol can be: <ul style="list-style-type: none"><li>• <b>any</b>—Accept any protocol type.</li></ul> The remaining statement is explained separately.
<b>Required Privilege</b>	interfaces—To view this statement in the configuration.
<b>Level</b>	interface-control—To add this statement to the configuration.

## scheduler

<b>Syntax</b>	<code>scheduler <i>scheduler-name</i>;</code>
<b>Hierarchy Level</b>	[edit <code>class-of-service scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i></code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Map a scheduler to a forwarding class using a scheduler map.



**NOTE:** On QFX5200 only, absolute CoS rate limits for transmit rate and shaping rate do not reflect 50g and 100g interfaces. Therefore this statement does not affect those interfaces for QFX5200 in release 15.1X53-D30.

<b>Options</b>	<code><i>scheduler-name</i></code> —Name of the scheduler to map to the forwarding class.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.

## scheduler-map

<b>Syntax</b>	<code>scheduler-map <i>map-name</i>;</code>
<b>Enhanced Transmission Selection (ETS) Hierarchical Scheduling</b>	[edit <code>class-of-service traffic-control-profiles <i>traffic-control-profile-name</i></code> ]
<b>Port Scheduling</b>	[edit <code>class-of-service interfaces <i>interface-name</i></code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Associate a scheduler map with a traffic control profile.
<b>Options</b>	<code><i>map-name</i></code> —Name of the scheduler map.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.

## scheduler-maps

---

<b>Syntax</b>	<pre>scheduler-maps {   map-name {     forwarding-class class-name scheduler scheduler-name;   } }</pre>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Specify a scheduler map name to map a scheduler configuration to a forwarding class.
<b>Options</b>	<p><i>map-name</i>—Name of the scheduler map.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

## schedulers

List of Syntax	QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems on page 509 QFX10000 Switches on page 509
QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems	<pre> schedulers {   scheduler-name {     buffer-size (percent <i>percentage</i>   remainder);     drop-profile-map loss-priority (low   medium-high   high) protocol <i>protocol</i> drop-profile       drop-profile-name;     explicit-congestion-notification;     priority <i>priority</i>;     shaping-rate (rate   percent <i>percentage</i>);     transmit-rate (percent <i>percentage</i>);   } } </pre>
QFX10000 Switches	<pre> schedulers {   scheduler-name {     buffer-size (percent <i>percentage</i>   remainder);     drop-profile-map loss-priority (low   medium-high   high) protocol <i>protocol</i> drop-profile       drop-profile-name;     excess-rate;     explicit-congestion-notification;     priority <i>priority</i>;     shaping-rate (rate   percent <i>percentage</i>);     transmit-rate (percent <i>percentage</i>) &lt;exact&gt;;   } } </pre>
Hierarchy Level	[edit <a href="#">class-of-service</a> ]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify scheduler name and parameter values such as minimum bandwidth ( <b>transmit-rate</b> ), maximum bandwidth ( <b>shaping-rate</b> ), and priority ( <b>priority</b> ).
Options	<p><b>scheduler-name</b> —Name of the scheduler.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

## shaping-rate

**Syntax** `shaping-rate (rate | percent percentage);`

**Hierarchy Level** `[edit class-of-service schedulers scheduler-name],`  
`[edit class-of-service traffic-control-profiles profile-name]`



**NOTE:** Only switches that support enhanced transmission selection (ETS) hierarchical scheduling support the **traffic-control-profiles** hierarchy.

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Configure the shaping rate. The shaping rate throttles the rate of packet transmission by setting a maximum bandwidth (rate in bits per second) or a maximum percentage of bandwidth for a queue or a forwarding class set. You specify the maximum bandwidth for a queue by using a scheduler map to associate a forwarding class (queue) with a scheduler that has a configured shaping rate.

For ETS configuration, you specify the maximum bandwidth for a forwarding class set by setting the shaping rate for a traffic control profile, then you associate the scheduler map with the traffic control profile, and then you apply the traffic control profile and a forwarding class set to an interface.

For simple port scheduling configuration, you apply the scheduler map directly to an interface (instead of indirectly through the traffic control profile as in ETS).

We recommend that you configure the shaping rate as an absolute maximum usage and not as additional usage beyond the configured transmit rate (the minimum guaranteed bandwidth for a queue) or the configured guaranteed rate (the minimum guaranteed bandwidth for a forwarding class set).



**NOTE:** When you set the maximum bandwidth (**shaping-rate** value) for a queue or for a priority group at 100 Kbps or less, the traffic shaping behavior is accurate only within +/- 20 percent of the configured **shaping-rate** value.



**NOTE:** On QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, we recommend that you always apply a shaping rate to strict-high priority queues to prevent them from starving other queues. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.





**NOTE:** On QFX5200 Series switches, a granularity of 64kbps is supported for the shaping rate. Therefore, the shaping rate on queues for 100g interfaces might not be applied correctly.



**NOTE:** QFX10000 Series switches do not support the shaping-rate statement. However, you can configure the transmit-rate exact option to prevent a queue from consuming more bandwidth than you want the queue to consume.

On QFX10000 Series switches, we recommend that you use the transmit rate to set a limit on the amount of bandwidth that receives strict-high priority treatment on a strict-high priority queue. Traffic up to the transmit rate receives strict-high priority treatment. Traffic in excess of the transmit rate is treated as best-effort traffic that receives the strict-high priority queue excess rate weight of “1”. Do not use a shaping rate to set a maximum bandwidth limit on strict-high priority queues on QFX10000 Series switches.

**Default** If you do not configure a shaping rate, the default shaping rate is 100 percent (all of the available bandwidth), which is the equivalent of no rate shaping.

**Options** **percent *percentage***—Shaping rate as a percentage of the available interface bandwidth.  
**Range:** 1 through 100 percent

**rate**—Peak (maximum) rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).

**Range:** 1000 through 10,000,000,000 bps

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

- Related Documentation**
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\) on page 167](#)
  - [Example: Configuring Queue Schedulers](#)
  - [Example: Configuring Queue Schedulers for Port Scheduling on page 140](#)
  - [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 158](#)
  - [Understanding CoS Output Queue Schedulers](#)
  - [Understanding CoS Port Schedulers on QFX Switches on page 125](#)
  - [Understanding CoS Traffic Control Profiles on page 153](#)

## traffic-control-profiles

---

<b>Syntax</b>	<pre>traffic-control-profiles <i>profile-name</i> {     <b>guaranteed-rate</b> (<i>rate</i>  percent <i>percentage</i>);     <b>scheduler-map</b> <i>map-name</i>;     <b>shaping-rate</b> (<i>rate</i>  percent <i>percentage</i>); }</pre>
<b>Hierarchy Level</b>	[edit <b>class-of-service</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure traffic shaping and scheduling profiles for forwarding class sets (priority groups) to implement enhanced transmission selection (ETS) or for logical interfaces.
<b>Options</b>	<p><b>profile-name</b>—Name of the traffic-control profile. This name is also used to specify an output traffic control profile.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS Hierarchical Port Scheduling (ETS) on page 167</a></li><li>• <a href="#">Example: Configuring Traffic Control Profiles (Priority Group Scheduling) on page 158</a></li><li>• <a href="#">Example: Configuring Forwarding Class Sets on page 93</a></li><li>• <a href="#">Assigning CoS Components to Interfaces on page 23</a></li><li>• <a href="#">output-traffic-control-profile on page 504</a></li><li>• <a href="#">Understanding CoS Traffic Control Profiles on page 153</a></li></ul>

## transmit-rate

<b>List of Syntax</b>	QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems on page 513 QFX10000 Switches on page 513
QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems	<code>transmit-rate (rate   percent <i>percentage</i>);</code>
QFX10000 Switches	<code>transmit-rate (rate   percent <i>percentage</i>) &lt;exact&gt;;</code>
<b>Hierarchy Level</b>	[edit <code>class-of-service schedulers <i>scheduler-name</i></code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series. Exact option introduced in Junos OS Release 15.1X53-D10 for the QFX Series.
<b>Description</b>	<p>On QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, the transmit rate specifies the minimum guaranteed transmission rate or percentage for a queue (forwarding class) scheduler. The queue transmit rate also determines the amount of excess (extra) priority group bandwidth that the queue can share on switches that support enhanced transmission selection (ETS) hierarchical scheduling.</p> <p>On QFX10000 switches, the transmit rate specifies the minimum guaranteed transmission rate or percentage for a queue (forwarding class) scheduler. The queue transmit rate also determines the amount of excess (extra) port bandwidth the queue can share if you do not explicitly configure an excess rate in the scheduler. The transmit rate also determines the amount of excess (extra) priority group bandwidth that the queue can share on switches that support enhanced transmission selection (ETS) hierarchical scheduling.</p> <p>On QFX10000 switch strict-high priority queues, the transmit rate limits the amount of traffic the switch treats as strict-high priority traffic. Traffic up to the transmit rate receives strict-high priority treatment. The switch treats traffic that exceeds the transmit rate as best-effort traffic that receives an excess bandwidth sharing weight of “1”; you cannot configure an excess rate on a strict-high priority queue, and unlike queues with other scheduling priorities, the switch does not use the transmit rate to determine extra bandwidth sharing for strict-high priority queues.</p>



**CAUTION:** We strongly recommend that you configure a transmit rate on strict-high priority queues to limit the amount of traffic the switch treats as strict-high priority traffic on those queues. This is especially important if you configure more than one strict-high priority queue on a port. To prevent a strict-high priority queue from starving the other queues on a port, we recommend that you always configure a transmit rate, even if you only configure one strict-high priority queue.



NOTE: For ETS, the transmit-rate setting works only if you also configure the **guaranteed-rate** in the traffic control profile that is attached to the forwarding class set to which the queue belongs. If you do not configure the guaranteed rate, the minimum guaranteed rate for individual queues that you set using the transmit-rate statement does not work. The sum of all queue transmit rates in a forwarding class set should not exceed the traffic control profile guaranteed rate.



NOTE: On QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, you cannot configure a transmit rate for a strict-high priority queue. Queues (forwarding classes) with a configured transmit rate cannot be included in a forwarding class set that has a strict-high priority queue. To prevent strict-high priority queues from consuming all of the available bandwidth on these switches, we recommend that you configure a shaping rate to set a maximum amount of bandwidth for strict-high priority queues.



NOTE: For transmit rates below 1 Gbps, we recommend that you configure the transmit rate as a percentage instead of as a fixed rate. This is because the system converts fixed rates into percentages and may round small fixed rates to a lower percentage. For example, a fixed rate of 350 Mbps is rounded down to 3 percent instead of 3.5 percent.

**Default** On QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, if you do not configure the transmit rate, the default scheduler transmission rate and buffer size percentages for queues 0 through 11 are:

**Table 83: Default Transmit Rates for QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems**

Queue Number	Default Minimum Guaranteed Bandwidth (Transmit Rate)
0 (best-effort)	5 %
1	0
2	0
3 (fcoe)	35 %
4 (no-loss)	35 %
5	0
6	0
7 (network control)	5 %
8 (mcast)	20 %
9	0
10	0
11	0



**NOTE:** OCX Series switches do not support lossless transport. The OCX Series default DSCP classifier does not classify traffic into the default lossless fcoe and no-loss forwarding classes. The bandwidth that the default scheduler allocates to the default fcoe and no-loss forwarding classes on other switches is allocated to the default best-effort, network-control, and mcast forwarding classes on OCX Series switches.

On QFX10000 switches, if you do not configure the transmit rate, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are:

Table 84: Default Transmit Rates for QFX10000 Switches

Queue Number	Default Minimum Guaranteed Bandwidth (Transmit Rate)
0 (best-effort)	15 %
1	0
2	0
3 (fcoe)	35 %
4 (no-loss)	35 %
5	0
6	0
7 (network control)	15 %

Configure schedulers if you want to change the minimum guaranteed bandwidth and other queue characteristics.

**Options** **rate**—Minimum transmission rate for the queue, in bps. You can specify a value in bits-per-second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).

**Range:** 1000 through 10,000,000,000 bps on 10-Gigabit interfaces, 1000 through 40,000,000,000 bps on 40-Gigabit interfaces.

**percent** **percentage**—Minimum percentage of transmission capacity allocated to the queue. A percentage of zero means that there is no minimum bandwidth guarantee for the queue.

**Range:** 0 through 100 percent

**exact**—(QFX10000 switches only) Shape queues that are not strict-high priority queues to the transmit rate so that the transmit rate is the maximum bandwidth limit. Traffic that exceeds the exact transmit rate is dropped. You cannot set an excess rate on queues configured as **transmit-rate (rate | percentage) exact** because the purpose of setting an exact transmit rate is to set a maximum bandwidth (shaping rate) on the traffic.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

## CHAPTER 9

# Configuration Statements (Data Center Bridging and Flow Control)

- `application` (Application Maps) on page 518
- `application` (Applications) on page 519
- `application-map` on page 520
- `application-maps` on page 521
- `applications` (Applications) on page 522
- `applications` (DCBX) on page 523
- `cable-length` (Congestion Notification) on page 524
- `code-point` (Input Congestion Notification) on page 525
- `code-point` (Output Congestion Notification) on page 526
- `code-points` (Application Maps) on page 527
- `congestion-notification-profile` on page 528
- `dcbx` on page 530
- `dcbx-version` on page 531
- `destination-port` (Applications) on page 532
- `disable` (DCBX) on page 533
- `enhanced-transmission-selection` on page 534
- `ether-type` on page 535
- `flow-control` on page 536
- `flow-control-queue` (Output Congestion Notification) on page 538
- `ieee-802.1` (Input Congestion Notification) on page 539
- `ieee-802.1` (Output Congestion Notification) on page 540
- `input` (Congestion Notification) on page 541
- `interface` (DCBX) on page 542
- `interfaces` (Class of Service) on page 543
- `mru` on page 545
- `output` (Congestion Notification) on page 546

- [pfc \(Input Congestion Notification\) on page 547](#)
- [policy-options on page 548](#)
- [priority-flow-control on page 549](#)
- [protocol \(Applications\) on page 550](#)
- [recommendation-tlv on page 551](#)
- [rx-buffers on page 552](#)
- [tx-buffers on page 554](#)

---

## application (Application Maps)

---

<b>Syntax</b>	<code>application <i>application-name</i> {     <a href="#">code-points</a> [ <i>aliases</i> ] [ <i>bit-patterns</i> ]; }</code>
<b>Hierarchy Level</b>	[edit policy-options <a href="#">application-maps</a> <i>application-map-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 12.1 for the QFX Series.
<b>Description</b>	Add an application to an application map and define the application's code points.
<b>Options</b>	<i>application-name</i> —Name of the application.  The remaining statement is explained separately.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 431</a></li><li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange on page 433</a></li><li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on page 426</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches</a></li></ul>



## application (Applications)

---

<b>Syntax</b>	<pre> application <i>application-name</i> {     <i>destination-port</i> <i>port-value</i>;     <i>protocol</i> (tcp   udp);     <i>ether-type</i> <i>type</i>; } </pre>
<b>Hierarchy Level</b>	[edit applications]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 12.1 for the QFX Series.
<b>Description</b>	Configure properties to define an application.
<b>Options</b>	<p><i>application-name</i>—Name of the application.</p> <p>The statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Defining an Application for DCBX Application Protocol TLV Exchange on page 430</a></li> <li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange on page 433</a></li> <li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on page 426</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches</a></li> </ul>

## application-map

---

<b>Syntax</b>	<code>application-map <i>application-map-name</i>;</code>
<b>Hierarchy Level</b>	[edit protocols <b>dcbx</b> interface <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 12.1 for the QFX Series.
<b>Description</b>	Specify an application map to apply to an interface.
<b>Options</b>	<i>application-map-name</i> —Name of the application map.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show dcbx neighbors on page 794</a></li><li>• <a href="#">Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange on page 432</a></li><li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange on page 433</a></li><li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on page 426</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches</a></li></ul>

## application-maps

---

<b>Syntax</b>	<pre> application-maps <i>application-map-name</i> {   application <i>application-name</i> {     code-points [ <i>aliases</i> ] [ <i>bit-patterns</i> ];   } } </pre>
<b>Hierarchy Level</b>	[edit policy-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 12.1 for the QFX Series.
<b>Description</b>	Define an application map by specifying the applications that belong to the application map.
<b>Options</b>	<p><i>application-map-name</i>—Name of the application map.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 431</a></li> <li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange on page 433</a></li> <li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on page 426</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches</a></li> </ul>

## applications (Applications)

---

<b>Syntax</b>	<pre>applications {   application application-name {     destination-port port-value;     protocol (tcp   udp);     ether-type type;   } }</pre>
<b>Hierarchy Level</b>	[edit]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 12.1 for the QFX Series.
<b>Description</b>	Define applications that DCBX advertises.
<b>Options</b>	The statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Defining an Application for DCBX Application Protocol TLV Exchange on page 430</a></li><li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange on page 433</a></li><li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on page 426</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches</a></li></ul>


## applications (DCBX)

---

<b>Syntax</b>	<pre>applications {   fcoe {     no-auto-negotiation;   } }</pre>
<b>Hierarchy Level</b>	[edit protocols <a href="#">dcbx</a> <a href="#">interface</a> <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 12.1 for the EX Series
<b>Description</b>	Configure Data Center Bridging Capability Exchange protocol (DCBX) applications on an interface.
<b>Options</b>	The remaining statements are explained separately.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show dcbx neighbors on page 794</a></li><li>• <a href="#">Understanding DCB Features and Requirements on page 234</a></li></ul>

## cable-length (Congestion Notification)

---

<b>Syntax</b>	<code>cable-length <i>cable-length-value</i>;</code>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service congestion-notification-profile <i>profile-name</i> input</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3 for the QFX Series.
<b>Description</b>	<p>Specify the length of the cable between the interface and its peer interface in meters. The system uses the cable length and the maximum receive unit (MRU) to calculate the amount of buffer headroom reserved to support priority-based flow control (PFC). The the shorter the cable length and lower the MRU, the less headroom buffer space is required for PFC.</p>
<div> <b>NOTE:</b> You can also set a maximum transmission unit (MTU) value (the largest packet size the interface sends) for interfaces by including the <code>mtu</code> statement at the [edit interfaces <i>interface-name</i>] hierarchy level.</div>	
<b>Default</b>	The default cable length value is 100 meters (approximately 328 feet).
<b>Options</b>	<code><i>cable-length-value</i></code> —Length of the cable in meters. (Generally from 1 to 300 meters, but there is no configuration restriction.)
<b>Required Privilege Level</b>	<code>interfaces</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li><li>• <a href="#">Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382</a></li><li>• <a href="#">Understanding CoS Flow Control (Ethernet PAUSE and PFC) on page 289</a></li><li>• <a href="#">Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269</a></li></ul>

## code-point (Input Congestion Notification)

---

<b>Syntax</b>	code-point [ <i>code-point-bits</i> ] { pfc { mru <i>mru-value</i> ; } }
<b>Hierarchy Level</b>	[edit <b>class-of-service congestion-notification-profile</b> <i>profile-name</i> <b>input ieee-802.1</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	Enable priority-based flow control (PFC) on an IEEE 802.1p code point (priority).
<b>Options</b>	<p><b>code-point-bits</b>—3-bit value in decimal form.</p> <p>The remaining statements are described separately.</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS PFC for FCoE Traffic on page 304</a></li> <li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li> <li>• <a href="#">Understanding CoS Flow Control (Ethernet PAUSE and PFC) on page 289</a></li> </ul>

## code-point (Output Congestion Notification)

---

<b>Syntax</b>	<code>code-point [ <i>code-point-bits</i> ] {     <i>flow-control-queue</i> [ <i>queue</i>   <i>list-of-queues</i> ]; }</code>
<b>Hierarchy Level</b>	[edit <i>class-of-service congestion-notification-profile profile-name output ieee-802.1</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3 for the QFX Series.
<b>Description</b>	Specify the IEEE 802.1p code point bits that identify the traffic you want to enable for priority-based flow control (PFC) pause.
<b>Default</b>	<p>By default, IEEE 802.1p priorities 3 and 4 (code points 011 and 100, respectively) are enabled for PFC pause on all Ethernet interfaces. If you explicitly configure priorities to pause and the output queues on which to enable pause, the explicit configuration overrides the default configuration. When you apply an explicit output congestion notification profile to an interface, only the priorities and queues specified in the output congestion notification profile are enabled for pause on that interface.</p> <p>For example, if you configure an output congestion notification profile that specifies priority 2 (code point 010), then traffic with IEEE 802.1p priority 2 is paused on the configured output queue during periods of congestion. However, traffic with priority 3 and priority 4 is not programmed to pause, because the explicit configuration overwrites the default configuration, and the explicit configuration does not pause priority 3 and priority 4. If you configure an explicit output congestion notification profile, all of the priorities you want to enable for PFC and all of the output queues you want to pause must be explicitly configured.</p>
<b>Options</b>	<p><i>code-point-bits</i>—3-bit value in decimal form.</p> <p>The remaining statements are described separately.</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li><li>• <a href="#">Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382</a></li><li>• <a href="#">Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373</a></li><li>• <a href="#">Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic (FCoE Transit Switch) on page 365</a></li><li>• <a href="#">Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications (FCoE and iSCSI) on page 396</a></li><li>• <a href="#">Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269</a></li></ul>



## code-points (Application Maps)

---

<b>Syntax</b>	<code>code-points [ <i>aliases</i> ] [ <i>bit-patterns</i> ];</code>
<b>Hierarchy Level</b>	[edit policy-options <b>application-maps</b> <i>application-map-name</i> <b>application</b> <i>application-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 12.1 for the QFX Series.
<b>Description</b>	Define one or more code-point aliases or bit sets for an application.
<b>Options</b>	<i>aliases</i> —Name of the alias or aliases.  <i>bit-patterns</i> —Value of the code-point bits, in decimal form.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 431</a></li> <li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange on page 433</a></li> <li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on page 426</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches</a></li> </ul>

## congestion-notification-profile

<b>Syntax</b>	<pre> congestion-notification-profile <i>profile-name</i> {   input {     ieee-802.1 {       code-point [<i>code-point-bits</i>] {         pfc {           mru <i>mru-value</i>;         }       }     }     cable-length <i>cable-length-value</i>;   }   output {     ieee-802.1 {       code-point [<i>code-point-bits</i>] {         flow-control-queue [<i>queue</i>   <i>list-of-queues</i>];       }     }   } } </pre>
<b>Interface Congestion Notification Profile Association</b>	<pre> congestion-notification-profile <i>profile-name</i> { </pre>
<b>Hierarchy Level</b>	<pre> [edit <i>class-of-service</i>], [edit <i>class-of-service interfaces interface-name</i>] </pre>
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	Configure a congestion notification profile to enable priority-based flow control (PFC) on traffic specified by an IEEE 802.1 code point, and apply the profile to an interface.



**NOTE:** You must configure PFC for FCoE traffic. Each interface that carries FCoE traffic should be configured for PFC on the FCoE code point (usually 011).

You can attach a maximum of one congestion notification profile to an interface. There is no limit to the total number of congestion notification profiles you can create.



**NOTE:** Configuring or changing PFC on an interface blocks the entire port until the PFC change is completed. After a PFC change is completed, the port is unblocked and traffic resumes. Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

**Options**    *profile-name*—Name of the congestion notification profile.

The remaining statements are explained separately.

**Required Privilege**    interface—To view this statement in the configuration.  
**Level**    interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring CoS PFC \(Congestion Notification Profiles\) on page 301](#)
- [Example: Configuring CoS PFC for FCoE Traffic on page 304](#)
- [Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382](#)
- [Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373](#)
- [Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic \(FCoE Transit Switch\) on page 365](#)
- [Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications \(FCoE and iSCSI\) on page 396](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)
- [Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269](#)

## dcbx

<b>Syntax</b>	<pre> dcbx {   disable;   interface (interface-name   all) {     disable;     application-map application-map-name;     applications {       no-auto-negotiation;     }     enhanced-transmission-selection {       no-auto-negotiation;       no-recommendation-tlv;       recommendation-tlv {         no-auto-negotiation;       }     }     dcbx-version (auto-negotiate   ieee-dcbx   dcbx-version-1.01);     priority-flow-control {       no-auto-negotiation;     }   } } </pre>
<b>Hierarchy Level</b>	[edit protocols]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 11.3 for EX Series switches.</p> <p><b>mode</b> and <b>recommendation-tlv</b> statements introduced in Junos OS Release 12.2 for the QFX Series.</p>
<b>Description</b>	<p>Configure DCBX properties. DCBX is an extension of Link Layer Discovery Protocol (LLDP), and LLDP must remain enabled on every interface for which you want to use DCBX. If you attempt to enable DCBX on an interface on which LLDP is disabled, the configuration commit fails.</p>
<b>Options</b>	The statements are explained separately.
<b>Required Privilege Level</b>	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show dcbx neighbors on page 794</a></li> <li>• <a href="#">Understanding DCB Features and Requirements on page 234</a></li> <li>• <a href="#">Configuring DCBX Autonegotiation on page 423</a></li> <li>• <i>Understanding DCB Features and Requirements on EX Series Switches</i></li> <li>• <i>Disabling DCBX to Disable PFC Autonegotiation on EX Series Switches (CLI Procedure)</i></li> </ul>


## dcbx-version

---

<b>Syntax</b>	<code>dcbx-version (auto-negotiate   ieee-dcbx   dcbx-version-1.01);</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">dcbx interface</a> (all   <i>interface-name</i> )]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.2 for the QFX Series.
<b>Description</b>	<p>Set the DCBX version for the specified interface or interfaces.</p> <p>QFX3500 switches come up in IEEE DCBX mode and then autonegotiate with the connected peer to set the DCBX version.</p> <p>QFabric system Node devices come up using DCBX version 1.01, and then autonegotiate with the connected peer to set the DCBX mode.</p>
<b>Default</b>	The default DCBX mode is autonegotiation.
<b>Options</b>	<p><b>auto-negotiate</b>—Automatically negotiate the DCBX version with the connected peer.</p> <p><b>ieee-dcbx</b>—Force the interface to use IEEE DCBX mode, regardless of the peer configuration.</p> <p><b>dcbx-version-1.01</b>—Force the interface to use version 1.01 DCBX mode, regardless of the peer configuration.</p>
<b>Required Privilege Level</b>	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show dcbx neighbors on page 794</a></li> <li>• <a href="#">Configuring DCBX Autonegotiation on page 423</a></li> <li>• <a href="#">Understanding DCBX on page 412</a></li> </ul>

## destination-port (Applications)

---

<b>Syntax</b>	<code>destination-port <i>port-value</i>;</code>
<b>Hierarchy Level</b>	[edit applications <b>application</b> <i>application-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 12.1 for the QFX Series.
<b>Description</b>	<p>Transmission Control Protocol (TCP) or User Datagram Protocol (UDP) destination port number, which combines with <b>protocol</b> to identify an application type. The Internet Assigned Numbers Authority (IANA) assigns port numbers. See the IANA <i>Service Name and Transport Protocol Port Number Registry</i> at <a href="http://www.iana.org/assignments/service-names-port-numbers/service-names-port-numbers.xml">http://www.iana.org/assignments/service-names-port-numbers/service-names-port-numbers.xml</a> for a list of assigned port numbers.</p>
<hr/>	
<div> <b>NOTE:</b> To create an application for iSCSI, use the protocol <code>tcp</code> with the destination port number <code>3260</code>.</div> <hr/>	
<b>Options</b>	<i>port-value</i> —Identifier for the port.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Defining an Application for DCBX Application Protocol TLV Exchange on page 430</a></li><li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange on page 433</a></li><li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on page 426</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches</a></li></ul>

## disable (DCBX)

---

<b>Syntax</b>	disable
<b>Hierarchy Level</b>	[edit protocols <a href="#">dcbx</a> ]  [edit protocols <a href="#">dcbx interface</a> <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 11.3 for EX Series switches.
<b>Description</b>	Disable Data Center Bridging Capability Exchange protocol (DCBX) on one or more 10-Gigabit Ethernet interfaces.
<b>Default</b>	DCBX is enabled by default on all 10-Gigabit or higher Ethernet interfaces.  DCBX is enabled by default on all 10-Gigabit Ethernet interfaces on EX4500 CEE-enabled switches.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring DCBX Autonegotiation on page 423</a></li> <li>• <i>Disabling DCBX to Disable PFC Autonegotiation on EX Series Switches (CLI Procedure)</i></li> <li>• <a href="#">Understanding DCB Features and Requirements on page 234</a></li> <li>• <i>Understanding DCB Features and Requirements on EX Series Switches</i></li> </ul>

## enhanced-transmission-selection


---

<b>Syntax</b>	<pre>enhanced-transmission-selection {   no-auto-negotiation;   no-recommendation-tlv;   recommendation-tlv {     no-auto-negotiation;   } }</pre>
<b>Hierarchy Level</b>	[edit protocols <b>dcbx</b> <b>interface</b> <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	<p>Disable advertising the enhanced transmission selection (ETS) state of the interface to the peer. To disable ETS on the interface, do not enable ETS on the interface in the class-of-service (CoS) configuration.</p> <p>Disabling ETS autonegotiation stops the QFX Series from advertising the ETS Configuration TLV and the ETS Recommendation TLV.</p> <p>Disabling the ETS recommendation TLV stops the QFX Series from advertising the ETS Recommendation TLV, but the ETS Configuration TLV is still advertised.</p>
<b>Options</b>	<p><b>no-auto-negotiation</b>—Disable automatic negotiation of ETS (Configuration TLV and Recommendation TLV)</p> <p><b>no-recommendation-tlv</b>—Disable automatic negotiation of the ETS Recommendation TLV</p> <p><b>recommendation-tlv</b>—Enable automatic negotiation of ETS Recommendation TLV</p>
<b>Required Privilege Level</b>	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show dcbx neighbors on page 794</a></li><li>• <a href="#">Configuring DCBX Autonegotiation on page 423</a></li><li>• <a href="#">Example: Configuring CoS Hierarchical Port Scheduling (ETS) on page 167</a></li><li>• <a href="#">Understanding DCB Features and Requirements on page 234</a></li></ul>




## ether-type

---

<b>Syntax</b>	<code>ether-type <i>ether-type</i>;</code>
<b>Hierarchy Level</b>	[edit applications <a href="#">application</a> <i>application-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 12.1 for the QFX Series.
<b>Description</b>	Two-octet field in an Ethernet frame that defines the protocol encapsulated in the frame payload. See <a href="http://standards.ieee.org/develop/regauth/ethertype/eth.txt">http://standards.ieee.org/develop/regauth/ethertype/eth.txt</a> for a list of Institute of Electrical and Electronics Engineers (IEEE) EtherTypes.
<div>  <b>NOTE:</b> To create a FIP application, use the EtherType 0x8914. </div>	
<b>Options</b>	<i>type</i> —Identifier for the EtherType.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Defining an Application for DCBX Application Protocol TLV Exchange on page 430</a></li> <li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange on page 433</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on page 426</a></li> </ul>

## flow-control

<b>Syntax</b>	(flow-control   no-flow-control);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ether-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>Explicitly enable or disable symmetric Ethernet PAUSE flow control, which regulates the flow of packets from the switch to the remote side of the connection by pausing all traffic flows on a link during periods of network congestion. Symmetric flow control means that Ethernet PAUSE is enabled in both directions. The interface generates and sends Ethernet PAUSE messages when the receive buffers fill to a certain threshold and the interface responds to PAUSE messages received from the connected peer. By default, flow control is disabled.</p> <p>You can configure asymmetric flow control by including the <b>configured-flow-control</b> statement at the [edit interfaces <i>interface-name</i> ether-options hierarchy level. Symmetric flow control and asymmetric flow control are mutually exclusive features. If you attempt to configure both, the switch returns a commit error.</p> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;"> <p> <b>NOTE:</b> Ethernet PAUSE temporarily stops transmitting all traffic on a link when the buffers fill to a certain threshold. To temporarily pause traffic on individual “lanes” of traffic (each lane contains the traffic associated with a particular IEEE 802.1p code point, so there can be eight lanes of traffic on a link), use priority-based flow control (PFC).</p> <p>Ethernet PAUSE and PFC are mutually exclusive features, so you cannot configure both of them on the same interface. If you attempt to configure both Ethernet PAUSE and PFC on an interface, the switch returns a commit error.</p> <p>OCX Series switches do not support PFC.</p> </div> <ul style="list-style-type: none"> <li>• <b>flow-control</b>—Enable flow control; flow control is useful when the remote device is a Gigabit Ethernet switch.</li> <li>• <b>no-flow-control</b>—Disable flow control.</li> </ul>
<b>Default</b>	Flow control is disabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>configured-flow-control</i></li> <li>• <i>Configuring Gigabit and 10-Gigabit Ethernet Interfaces</i></li> </ul>

- *Configuring Gigabit and 10-Gigabit Ethernet Interfaces*
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)
- *Junos OS Network Interfaces Library for Routing Devices*

## flow-control-queue (Output Congestion Notification)

---

<b>Syntax</b>	<code>flow-control-queue [ <i>queue</i>   <i>list-of-queues</i> ];</code>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service congestion-notification-profile <i>profile-name</i> output ieee-802.1 code-point <i>code-point-bits</i></a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3 for the QFX Series.
<b>Description</b>	<p>Specify one or more output queues to pause, to support priority-based flow control (PFC). The specified queues pause when the interface receives a PFC frame with a matching IEEE 802.1p code point.</p>
<b>Default</b>	<p>Queue 3 (mapped to the fcoe forwarding class) and queue 4 (mapped to the no-loss forwarding class) are programmed as flow control queues to pause. No other output queues are programmed to pause by default.</p> <p>If you configure flow control queues explicitly, only the queues that you specify are programmed to pause. The explicit flow control queue to pause configuration overrides the default setting, so the queues paused in the default configuration are no longer paused by default.</p> <p>For example, if you configure queue 2 as a flow control queue, then queue 2 pauses when congestion occurs, but queues 3 and 4 do not pause because they were not explicitly specified. To enable pause on output queues 2, 3, and 4, you must explicitly configure all three of the queues as flow control queues.</p> <p>The same behavior applies to the IEEE 802.1p code points (priorities) on which PFC is enabled. By default, priorities 3 (011) and 4 (100) are enabled for PFC pause. If you explicitly configure flow control queues to pause, you must also explicitly configure pause for each priority (code point) that you want to pause, because the explicit configuration overrides the default configuration.</p>
<b>Options</b>	<code>[ <i>queue</i>   <i>list-of-queues</i> ]</code> —The output queue or a list of output queues to pause.
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li><li>• <a href="#">Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382</a></li><li>• <a href="#">Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373</a></li><li>• <a href="#">Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic (FCoE Transit Switch) on page 365</a></li><li>• <a href="#">Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications (FCoE and iSCSI) on page 396</a></li></ul>

- [Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269](#)

## ieee-802.1 (Input Congestion Notification)

<b>Syntax</b>	<pre> ieee-802.1 {   code-point [code-point-bits] {     pfc {       mru mru-value;     }   } } </pre>
<b>Hierarchy Level</b>	[edit <b>class-of-service congestion-notification-profile</b> <i>profile-name</i> <b>input</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	Configure an IEEE 802.1 code point and apply priority-based flow control (PFC) to packets with that code point.
<b>Options</b>	The statements are described separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS PFC for FCoE Traffic on page 304</a></li> <li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li> <li>• <a href="#">Understanding CoS Flow Control (Ethernet PAUSE and PFC) on page 289</a></li> </ul>

## ieee-802.1 (Output Congestion Notification)

---

<b>Syntax</b>	<pre>ieee-802.1 {     code-point [ code-point-bits ] {         flow-control-queue [ queue   list-of-queues ];     } }</pre>
<b>Hierarchy Level</b>	[edit <b>class-of-service congestion-notification-profile</b> <i>profile-name</i> <b>output</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3 for the QFX Series.
<b>Description</b>	Configure an IEEE 802.1 code point and apply priority-based flow control (PFC) to packets with that code point on output queues.
<b>Options</b>	The statements are described separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li><li>• <a href="#">Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382</a></li><li>• <a href="#">Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373</a></li><li>• <a href="#">Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic (FCoE Transit Switch) on page 365</a></li><li>• <a href="#">Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications (FCoE and iSCSI) on page 396</a></li><li>• <a href="#">Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269</a></li></ul>

## input (Congestion Notification)

```
Syntax  input {
        ieee-802.1 {
            code-point [code-point-bits] {
                pfc {
                    mru mru-value;
                }
            }
        }
        cable-length cable-length-value;
    }
```

**Hierarchy Level** [edit [class-of-service congestion-notification-profile profile-name](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.

**Description** Configure priority-based flow control (PFC) on incoming traffic.

**Options** The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Example: Configuring CoS PFC for FCoE Traffic on page 304](#)
- [Configuring CoS PFC \(Congestion Notification Profiles\) on page 301](#)
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)

## interface (DCBX)

---

Syntax	<pre>interface (<i>interface-name</i>   all) {   disable;   application-map <i>application-map-name</i>;   applications {     no-auto-negotiation;   }   enhanced-transmission-selection {     no-auto-negotiation;     no-recommendation-tlv;     recommendation-tlv {       no-auto-negotiation;     }   }   dcbx-version (auto-negotiate   ieee-dcbx   dcbx-version-1.01);   priority-flow-control {     no-auto-negotiation;   } }</pre>
Hierarchy Level	[edit protocols <a href="#">dcbx</a> ]
Release Information	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 11.3 for the EX Series switches.</p> <p><b>Mode</b> and <b>recommendation-tlv</b> statements introduced in Junos OS Release 12.2 for the QFX Series.</p>
Description	Configure DCBX properties on an interface.
Options	<p><b><i>interface-name</i></b>—Name of the interface.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">show dcbx neighbors on page 794</a></li><li>• <a href="#">Configuring DCBX Autonegotiation on page 423</a></li><li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application</a></li><li>• <a href="#">Understanding DCB Features and Requirements on page 234</a></li><li>• <a href="#">Understanding DCB Features and Requirements on EX Series Switches</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches</a></li></ul>



## interfaces (Class of Service)

```
Syntax interfaces {
  interface-name {
    congestion-notification-profile profile-name {
    }
    forwarding-class forwarding-class-name;
    forwarding-class-set forwarding-class-set-name {
      output-traffic-control-profile profile-name;
    }
    rewrite-value {
      input {
        ieee-802.1{
          code-point code-point-bits;
        }
      }
    }
    scheduler-map scheduler-map-name
    unit logical-unit-number {
      classifiers {
        (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);
      }
      forwarding-class class-name;
      rewrite-rules {
        (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);
      }
    }
  }
}
```

**Hierarchy Level** [edit [class-of-service](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series

**Description** Configure interface-specific CoS properties for incoming packets.



**NOTE:** Only switches that support direct port scheduling also support applying a scheduler map directly to an interface. When using enhanced transmission selection (ETS) hierarchical port scheduling, you cannot apply a scheduler map directly to an interface; instead, you associate the scheduler map with a traffic control profile and apply the traffic control profile to the interface.



**NOTE:** Only switches that support native Fibre Channel interfaces support the `rewrite-value` statement, which enables you to rewrite the IEEE 802.1p code points on native Fibre Channel interfaces.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifiers or rewrite rules. OCX Series switches do not support the congestion-notification-profile configuration statement, which applies priority-based flow control (PFC) to interface output queues.


**Options**    *interface-name*—Name of the interface.

The statements are explained separately.

**Required Privilege Level**    interfaces—To view this statement in the configuration.  
   interface-control—To add this statement to the configuration.

**Related Documentation**    • [Assigning CoS Components to Interfaces on page 23](#)  
   • *Interfaces Overview*

## mrp

<b>Syntax</b>	<code>mrp mru-value;</code>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service congestion-notification-profile profile-name input ieee-802.1 code-point code-point-bits pfc</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3 for the QFX Series.
<b>Description</b>	Configure the maximum receive unit (MRU) of the interface in bytes (incoming packet sizes must be less than or equal to the MRU, or the packets are dropped). The system uses the MRU and the cable length to calculate the amount of buffer headroom reserved to support priority-based flow control (PFC). The lower the MRU and the shorter the cable length, the less headroom buffer space is required for PFC.
<div>  <p><b>NOTE:</b> You can also set a maximum transmission unit (MTU) value (the largest packet size the interface sends) for interfaces by including the <code>mtu</code> statement at the [edit <a href="#">interfaces interface-name</a>] hierarchy level.</p> </div>	
<b>Default</b>	<p>For priority 3 traffic, the default MRU value is 2500 bytes.</p> <p>For priority 4 traffic, the default MRU value is 9216 bytes.</p> <p>For user-configured priorities, the default MRU value is 2500 bytes.</p>
<b>Options</b>	<b>mrp-value</b> —Value of the maximum packet receive unit size in bytes (generally from 1500 to 9216 bytes, but there is no configuration restriction).
<b>Required Privilege Level</b>	<p><code>interfaces</code>—To view this statement in the configuration.</p> <p><code>interface-control</code>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li> <li>• <a href="#">Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382</a></li> <li>• <a href="#">Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373</a></li> <li>• <a href="#">Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic (FCoE Transit Switch) on page 365</a></li> <li>• <a href="#">Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications (FCoE and iSCSI) on page 396</a></li> <li>• <a href="#">Understanding CoS Flow Control (Ethernet PAUSE and PFC) on page 289</a></li> <li>• <a href="#">Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269</a></li> </ul>

## output (Congestion Notification)

---

<b>Syntax</b>	<pre>output {     ieee-802.1 {         code-point [code-point-bits] {             flow-control-queue [queue   list-of-queues];         }     } }</pre>
<b>Hierarchy Level</b>	[edit <b>class-of-service congestion-notification-profile</b> <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3 for the QFX Series.
<b>Description</b>	Configure priority-based flow control (PFC) on output queues.
<b>Options</b>	The remaining statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li><li>• <a href="#">Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382</a></li><li>• <a href="#">Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373</a></li><li>• <a href="#">Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic (FCoE Transit Switch) on page 365</a></li><li>• <a href="#">Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications (FCoE and iSCSI) on page 396</a></li><li>• <a href="#">Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269</a></li></ul>

## pfc (Input Congestion Notification)

<b>Syntax</b>	<code>pfc {     <b>mru</b> <i>mru-value</i>; }</code>
<b>Hierarchy Level</b>	[edit <b>class-of-service</b> <b>congestion-notification-profile</b> <i>profile-name</i> <b>input</b> <b>ieee-802.1</b> <b>code-point</b> <i>code-point-bits</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.3 for the QFX Series.
<b>Description</b>	Enable and configure ingress interface priority-based flow control (PFC).
<b>Options</b>	The remaining statement is explained separately.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li> <li>• <a href="#">Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382</a></li> <li>• <a href="#">Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373</a></li> <li>• <a href="#">Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic (FCoE Transit Switch) on page 365</a></li> <li>• <a href="#">Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications (FCoE and iSCSI) on page 396</a></li> <li>• <a href="#">Understanding CoS Flow Control (Ethernet PAUSE and PFC) on page 289</a></li> <li>• <a href="#">Understanding CoS IEEE 802.1p Priorities for Lossless Traffic Flows on page 269</a></li> </ul>

## policy-options

```
Syntax  policy-options
        application-maps application-map-name {
            application application-name {
                code-points [ aliases ] [ bit-patterns ];
            }
        }
        policy-statement policy-name {
            term term-name {
                from {
                    family family-name;
                    match-conditions;
                    policy subroutine-policy-name;
                    prefix-list prefix-list-name;
                    prefix-list-filter prefix-list-name match-type <actions>;
                    route-filter destination-prefix match-type <actions>;
                    source-address-filter source-prefix match-type <actions>;
                }
                to {
                    match-conditions;
                    policy subroutine-policy-name;
                }
                then actions;
            }
        }
    }
```

**Hierarchy Level** [edit]

**Release Information** Statement introduced in Junos OS Release 12.1 for the QFX Series.  
Statement introduced in Junos OS Release 12.1 for the EX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Configure options such as application maps for DCBX application protocol exchange and policy statements.

**Required Privilege Level** storage—To view this statement in the configuration.  
storage-control—To add this statement to the configuration.

**Related Documentation**

- [Defining an Application for DCBX Application Protocol TLV Exchange on page 430](#)
- [Example: Configuring DCBX Application Protocol TLV Exchange on page 433](#)
- [Example: Configuring DCBX to Support an iSCSI Application](#)
- [Understanding DCBX Application Protocol TLV Exchange on page 426](#)
- [Understanding DCBX Application Protocol TLV Exchange on EX Series Switches](#)


## priority-flow-control

---

<b>Syntax</b>	<code>priority-flow-control {     no-auto-negotiation; }</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">dcbx interface</a> (all   <i>interface-name</i> )]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 11.3 for EX Series switches.
<b>Description</b>	Disable autonegotiation of priority-based flow control (PFC) on one or more Ethernet interfaces. Autonegotiation enables PFC on an interface only if the switch and the peer device connected to the switch both support PFC and have the same PFC configuration. Disabling autonegotiation on an interface forces the interface to use the PFC state (enabled or disabled) that is configured on the switch by the configuration and assignment of the congestion notification profile.
<b>Options</b>	<b>no-auto-negotiation</b> —Disable automatic negotiation of PFC.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show dcbx neighbors on page 794</a></li> <li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li> <li>• <a href="#">Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure)</a></li> <li>• <a href="#">Configuring DCBX Autonegotiation on page 423</a></li> <li>• <a href="#">Example: Configuring CoS PFC for FCoE Traffic on page 304</a></li> <li>• <a href="#">Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches</a></li> <li>• <a href="#">Understanding Priority-Based Flow Control</a></li> <li>• <a href="#">Understanding DCB Features and Requirements on page 234</a></li> </ul>

## protocol (Applications)

---

<b>Syntax</b>	<code>protocol (tcp   udp);</code>
<b>Hierarchy Level</b>	[edit applications <a href="#">application</a> <i>application-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 12.1 for the QFX Series.
<b>Description</b>	Networking protocol type, which combines with <b>destination-port</b> to identify an application type.
<div> <b>NOTE:</b> To create an application for iSCSI, use the protocol <code>tcp</code> with the destination port number 3260.</div>	
<b>Options</b>	<code>tcp</code> —Transmission Control Protocol  <code>udp</code> —User Datagram Protocol
<b>Required Privilege Level</b>	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Defining an Application for DCBX Application Protocol TLV Exchange on page 430</a></li><li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange on page 433</a></li><li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on page 426</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches</a></li></ul>




## recommendation-tlv

---

<b>Syntax</b>	recommendation-tlv { no-auto-negotiation; }
<b>Hierarchy Level</b>	[edit protocols <a href="#">dcbx</a> <a href="#">interface</a> <i>interface-name</i> <a href="#">enhanced-transmission-selection</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.2 for the QFX Series.
<b>Description</b>	Enable DCBX to send the ETS Recommendation TLV (also known as the Information TLV) on egress. This feature is valid only if the interface DCBX mode is IEEE DCBX. If the interface DCBX mode is DCBX version 1.01, this statement has no effect. (DCBX version 1.01 does not advertise separate TLVs for individual attributes.)
<b>Default</b>	DCBX-enabled interfaces send the ETS recommendation TLV unless it is disabled.
<b>Options</b>	<b>no-auto-negotiation</b> —Disable sending of the ETS recommendation TLV.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show dcbx neighbors on page 794</a></li> <li>• <a href="#">Configuring DCBX Autonegotiation on page 423</a></li> </ul>


## rx-buffers

<b>Syntax</b>	rx-buffers (on   off);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ether-options configured-flow-control]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1 for the QFX Series.
<b>Description</b>	<p>Enable or disable an interface to generate and send Ethernet PAUSE messages. If you enable the receive buffers to generate and send PAUSE messages, when the receive buffers reach a certain level of fullness, the interface sends a PAUSE message to the connected peer. If the connected peer is properly configured, it stops transmitting frames to the interface on the entire link. When the interface receive buffer empties below a certain threshold, the interface sends a message to the connected peer to resume sending frames.</p> <p>Ethernet PAUSE prevents buffers from overflowing and dropping packets during periods of network congestion. If the other devices in the network are also configured to support PAUSE, PAUSE supports lossless operation. Use the <b>rx-buffers</b> statement with the <b>tx-buffers</b> statement to configure asymmetric Ethernet PAUSE on an interface. (Use the <b>flow-control</b> statement to enable symmetric PAUSE and the <b>no-flow-control</b> statement to disable symmetric PAUSE on an interface. Symmetric flow control and asymmetric flow control are mutually exclusive features. If you attempt to configure both, the switch returns a commit error.)</p>
<div>  <p><b>NOTE:</b> Ethernet PAUSE temporarily stops transmitting all traffic on a link when the buffers fill to a certain threshold. To temporarily pause traffic on individual “lanes” of traffic (each lane contains the traffic associated with a particular IEEE 802.1p code point, so there can be eight lanes of traffic on a link), use priority-based flow control (PFC).</p> <p>Ethernet PAUSE and PFC are mutually exclusive features, so you cannot configure both of them on the same interface. If you attempt to configure both Ethernet PAUSE and PFC on an interface, the switch returns a commit error.</p> </div>	
<b>Default</b>	Flow control is disabled. You must explicitly configure Ethernet PAUSE flow control on interfaces.
<b>Options</b>	on   off—Enable or disable an interface to generate and send Ethernet PAUSE messages.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">flow-control on page 536</a></li> <li>• <a href="#">tx-buffers on page 554</a></li> </ul>

- *Configuring CoS Asymmetric Ethernet PAUSE Flow Control*
- *Enabling and Disabling CoS Symmetric Ethernet PAUSE Flow Control*
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)

## tx-buffers

---

<b>Syntax</b>	tx-buffers (on   off);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ether-options configured-flow-control]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1 for the QFX Series.
<b>Description</b>	<p>Enable or disable an interface to respond to received Ethernet PAUSE messages. If you enable the transmit buffers to respond to PAUSE messages, when the interface receives a PAUSE message from the connected peer, the interface stops transmitting frames on the entire link. When the receive buffer on the connected peer empties below a certain threshold, the peer interface sends a message to the paused interface to resume sending frames.</p> <p>Ethernet PAUSE prevents buffers from overflowing and dropping packets during periods of network congestion. If the other devices in the network are also configured to support PAUSE, PAUSE supports lossless operation. Use the <b>tx-buffers</b> statement with the <b>rx-buffers</b> statement to configure asymmetric Ethernet PAUSE on an interface. (Use the <b>flow-control</b> statement to enable symmetric PAUSE and the <b>no-flow-control</b> statement to disable symmetric PAUSE on an interface. Symmetric flow control and asymmetric flow control are mutually exclusive features. If you attempt to configure both, the switch returns a commit error.)</p>
	<div> <b>NOTE:</b> Ethernet PAUSE temporarily stops transmitting all traffic on a link when the buffers fill to a certain threshold. To temporarily pause traffic on individual “lanes” of traffic (each lane contains the traffic associated with a particular IEEE 802.1p code point, so there can be eight lanes of traffic on a link), use priority-based flow control (PFC).</div> <p>Ethernet PAUSE and PFC are mutually exclusive features, so you cannot configure both of them on the same interface. If you attempt to configure both Ethernet PAUSE and PFC on an interface, the switch returns a commit error.</p>
<b>Default</b>	Flow control is disabled. You must explicitly configure Ethernet PAUSE flow control on interfaces.
<b>Options</b>	<b>on   off</b> —Enable or disable an interface to respond to an Ethernet PAUSE message.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">flow-control on page 536</a></li><li>• <a href="#">rx-buffers on page 552</a></li></ul>

- *Configuring CoS Asymmetric Ethernet PAUSE Flow Control*
- *Enabling and Disabling CoS Symmetric Ethernet PAUSE Flow Control*
- [Understanding CoS Flow Control \(Ethernet PAUSE and PFC\) on page 289](#)



## CHAPTER 10

# Operational Commands (Basic Concepts)

- [Monitoring Interfaces That Have CoS Components on page 557](#)
- [show class-of-service](#)
- [show class-of-service interface](#)
- [show class-of-service shared-buffer](#)
- [show pfe filter hw summary](#)
- [show pfe next-hop](#)
- [show pfe route](#)
- [show pfe terse](#)
- [show pfe version](#)
- [show interfaces voq](#)

### Monitoring Interfaces That Have CoS Components

**Purpose** Use the monitoring functionality to display details about the physical and logical interfaces and the CoS components assigned to them.

**Action** To monitor interfaces that have CoS components in the CLI, enter the command:

```
user@switch> show class-of-service interface
```

To monitor a specific interface in the CLI, enter the command:

```
user@switch> show class-of-service interface interface-name
```

**Meaning** [Table 85 on page 557](#) summarizes key output fields for CoS interfaces.

**Table 85: Summary of Key CoS Interfaces Output Fields**

Field	Values
Physical interface	Name of a physical interface to which CoS components are assigned.
Index	Index of this interface or the internal index of a specific object.
Queues supported	Number of queues you can configure on the interface.

Table 85: Summary of Key CoS Interfaces Output Fields (*continued*)

Field	Values
Queues in use	Number of queues currently configured.
Scheduler map	Name of the scheduler map associated with this interface.
Congestion-notification	Status of congestion notification (enabled or disabled).  <b>NOTE:</b> OCX Series switches do not support congestion notification profiles.
Rewrite Input IEEE Code-point	(Fibre Channel NP_Port interfaces only) IEEE 802.1p code point (priority) the interface assigns to incoming Fibre Channel (FC) traffic when the interface encapsulates the FC traffic in Ethernet before forwarding it onto the FCoE network.
Logical Interface	Name of a logical interface on the physical interface to which CoS components are assigned.
Object	Category of an object—for example, <b>classifier</b> , <b>scheduler-map</b> , or <b>rewrite</b> .
Name	Name of the object—for example, <b>ba-classifier</b> .
Type	Type of the object—for example, <b>ieee8021p</b> for a classifier.

**Related Documentation** • [Assigning CoS Components to Interfaces on page 23](#)



## show class-of-service

<b>Syntax</b>	<b>show class-of-service</b>
<b>Release Information</b>	Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display the class-of-service (CoS) information.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Monitoring CoS Code-Point Value Aliases on page 632</a></li> <li>• <a href="#">Monitoring CoS Classifiers on page 627</a></li> <li>• <a href="#">Monitoring CoS Forwarding Classes on page 628</a></li> <li>• <a href="#">Monitoring Interfaces That Have CoS Components on page 557</a></li> <li>• <a href="#">Monitoring CoS Scheduler Maps on page 687</a></li> <li>• <a href="#">Monitoring CoS Rewrite Rules on page 631</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show class-of- service on page 560</a>
<b>Output Fields</b>	<a href="#">Table 86 on page 559</a> lists the output fields for the <b>show class-of-service</b> command. Output fields are listed in the approximate order in which they appear.

**Table 86: show class-of-service Output Fields**

Field Name	Field Description	Level of Output
<b>Forwarding class</b>	The forwarding class configuration: <ul style="list-style-type: none"> <li>• <b>Forwarding class</b>—Name of the forwarding class.</li> <li>• <b>ID</b>—Forwarding class ID.</li> <li>• <b>Queue</b>—Queue number.</li> </ul>	All levels
<b>Code point type</b>	The type of code-point alias: <ul style="list-style-type: none"> <li>• <b>dscp</b>—Aliases for DiffServ code point (DSCP) values.</li> <li>• <b>ieee-802.1</b>—Aliases for IEEE 802.1p values.</li> <li>• <b>exp</b>—Aliases for MPLS EXP values.</li> </ul>	All levels
<b>Alias</b>	Names given to CoS values.	All levels
<b>Bit pattern</b>	Set of bits associated with an alias.	All levels
<b>Classifier</b>	Name of the classifier.	All levels
<b>Code point</b>	Code-point values.	All levels
<b>Loss priority</b>	Loss priority assigned to specific CoS values and aliases of the classifier.	All levels

Table 86: show class-of-service Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Rewrite rule</b>	Name of the rewrite rule if one has been configured.	All levels
<b>Drop profile</b>	Name of the drop profile.	All levels
<b>Type</b>	Type of drop profile. QFX Series supports only the <b>discrete</b> type of drop-profile.	All levels
<b>Fill level</b>	Percentage of queue buffer fullness in a drop profile at which packets begin to drop during periods of congestion.	All levels
<b>Scheduler map</b>	Name of the scheduler map.	All levels
<b>Scheduler</b>	Name of the scheduler.	All levels
<b>Transmit rate</b>	Transmission rate of the scheduler.	All levels
<b>Buffer size</b>	Delay buffer size in the queue.	All levels
<b>Drop profiles</b>	Drop profiles configured for the specified scheduler.	All levels
<b>Protocol</b>	Transport protocol corresponding to the drop profile.	All levels
<b>Name</b>	Name of the drop profile.	All levels
<b>Queues supported</b>	Number of queues that can be configured on the interface.	All levels
<b>Queues in use</b>	Number of queues currently configured.	All levels
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Scheduler map</b>	Name of the scheduler map.	All levels
<b>Congestion-notification</b>	Enabled if a congestion notification profile is applied to the interface; disabled if no congestion notification profile is applied to the interface.  <b>NOTE:</b> OCX Series switches do not support congestion notification profiles.	All levels
<b>Forwarding class set</b>	Name of the forwarding class set (priority group).  <b>NOTE:</b> Only on systems that support enhanced transmission selection (ETS) hierarchical port scheduling.	
<b>Index</b>	Internal index of an object.	All levels

## Sample Output

### show class-of- service

```
user@switch> show class-of-service
```

Forwarding class	ID	Queue
best-effort	0	0
fcoe	1	3
no-loss	2	4
network-control	3	7
mcast	8	8

Code point type: dscp

Alias	Bit pattern
af11	001010
af12	001100
...	...

Code point type: ieee-802.1

Alias	Bit pattern
af11	100
...	...

Classifier: dscp-default, Code point type: dscp, Index: 7

Code point	Forwarding class	Loss priority
000000	best-effort	low
000001	best-effort	low
...	...	...

Classifier: ieee8021p-default, Code point type: ieee-802.1, Index: 11

Code point	Forwarding class	Loss priority
000	best-effort	low
001	best-effort	low
010	best-effort	low
011	fcoe	low
100	no-loss	low
101	best-effort	low
110	network-control	low
111	network-control	low

Drop profile: <default-drop-profile>, Type: discrete, Index: 1

Fill level  
100

Scheduler map: <default>, Index: 2

Scheduler: <default-be>, Forwarding class: best-effort, Index: 21

Transmit rate: 5 percent, Rate Limit: none, Buffer size: 5 percent, Buffer Limit: none,

Priority: low

Excess Priority: low

drop-profile-map-set-type: mark

Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	<default-drop-profile>
Medium high	any	1	<default-drop-profile>
High	any	1	<default-drop-profile>

Scheduler: <default-fcoe>, Forwarding class: fcoe, Index: 50

Transmit rate: 35 percent, Rate Limit: none, Buffer size: 35 percent, Buffer Limit: none,

Priority: low

Excess Priority: low

drop-profile-map-set-type: mark

Drop profiles:

Loss priority	Protocol	Index	Name
---------------	----------	-------	------

Low	any	1	<default-drop-profile>
Medium high	any	1	<default-drop-profile>
High	any	1	<default-drop-profile>

Scheduler: <default-noloss>, Forwarding class: no-loss, Index: 51  
 Transmit rate: 35 percent, Rate Limit: none, Buffer size: 35 percent, Buffer  
 Limit: none,  
 Priority: low  
 Excess Priority: low  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	<default-drop-profile>
Medium high	any	1	<default-drop-profile>
High	any	1	<default-drop-profile>

Scheduler: <default-nc>, Forwarding class: network-control, Index: 23  
 Transmit rate: 5 percent, Rate Limit: none, Buffer size: 5 percent, Buffer  
 Limit: none,  
 Priority: low  
 Excess Priority: low  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	<default-drop-profile>
Medium high	any	1	<default-drop-profile>
High	any	1	<default-drop-profile>

Scheduler: <default-mcast>, Forwarding class: mcast, Index: 49  
 Transmit rate: 20 percent, Rate Limit: none, Buffer size: 20 percent, Buffer  
 Limit: none,  
 Priority: low  
 Excess Priority: low  
 drop-profile-map-set-type: mark  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	<default-drop-profile>
Medium high	any	1	<default-drop-profile>
High	any	1	<default-drop-profile>

Physical interface: xe-0/0/0, Index: 129  
 Queues supported: 12, Queues in use: 12  
 Scheduler map: <default>, Index: 2  
 Congestion-notification: Disabled

Physical interface: xe-0/0/1, Index: 130  
 Queues supported: 12, Queues in use: 12  
 Scheduler map: <default>, Index: 2  
 Congestion-notification: Disabled

...

Forwarding class set: lan-fcset, Type: normal-type, Forwarding class set index:  
 7

Forwarding class	Index
best-effort	0

## show class-of-service interface

**Syntax** `show class-of-service interface`  
`<comprehensive | detail> <interface-name>`

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
 Forwarding class map information added in Junos OS Release 9.4.  
 Command introduced in Junos OS Release 11.1 for the QFX Series.  
 Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Switches.  
 Command introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.  
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
 Options **detail** and **comprehensive** introduced in Junos OS Release 11.4.  
 Command introduced in Junos OS Release 15.1R3 on MX Series routers for enhanced subscriber management.

**Description** Display the logical and physical interface associations for the classifier, rewrite rules, and scheduler map objects.



**NOTE:** On routing platforms with dual Routing Engines, running this command on the backup Routing Engine, with or without any of the available options, is not supported and produces the following error message:

**error: the class-of-service subsystem is not running**

**Options** **none**—Display CoS associations for all physical and logical interfaces.

**comprehensive**—(M Series, MX Series, and T Series routers) (Optional) Display comprehensive quality-of-service (QoS) information about all physical and logical interfaces.

**detail**—(M Series, MX Series, and T Series routers) (Optional) Display QoS and CoS information based on the interface.

If the **interface** *interface-name* is a physical interface, the output includes:

- Brief QoS information about the physical interface
- Brief QoS information about the logical interface
- CoS information about the physical interface
- Brief information about filters or policers of the logical interface
- Brief CoS information about the logical interface

If the **interface** *interface-name* is a logical interface, the output includes:

- Brief QoS information about the logical interface

- Information about filters or policers for the logical interface
- CoS information about the logical interface

**interface-name**—(Optional) Display class-of-service (CoS) associations for the specified interface.

**none**—Display CoS associations for all physical and logical interfaces.

**Required Privilege Level** view

**Related Documentation**

- *Verifying and Managing Junos OS Enhanced Subscriber Management*

**List of Sample Output** [show class-of-service interface \(Physical\) on page 575](#)  
[show class-of-service interface \(Logical\) on page 576](#)  
[show class-of-service interface \(Gigabit Ethernet\) on page 576](#)  
[show class-of-service interface \(ANCP\) on page 576](#)  
[show class-of-service interface \(PPPoE Interface\) on page 576](#)  
[show class-of-service interface \(T4000 Routers with Type 5 FPCs\) on page 576](#)  
[show class-of-service interface detail on page 577](#)  
[show class-of-service interface comprehensive on page 577](#)  
[show class-of-service interface \(ACX Series Routers\) on page 588](#)  
[show class-of-service interface \(PPPoE Subscriber Interface for Enhanced Subscriber Management\) on page 591](#)

**Output Fields** [Table 87 on page 564](#) describes the output fields for the **show class-of-service interface** command. Output fields are listed in the approximate order in which they appear.

**Table 87: show class-of-service interface Output Fields**

Field Name	Field Description	
Physical interface	Name of a physical interface.	
Index	Index of this interface or the internal index of this object.  (Enhanced subscriber management for MX Series routers) Index values for dynamic CoS traffic control profiles and dynamic scheduler maps are larger for enhanced subscriber management than they are for legacy subscriber management.	
Dedicated Queues	Status of dedicated queues configured on an interface. Supported only on Trio MPC/MIC interfaces on MX Series routers.	Number of queues you can configure on the interface.
Queues supported	Number of queues you can configure on the interface.	
Queues in use	Number of queues currently configured.	

Table 87: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Total non-default queues created</b>	<p>Number of queues created in addition to the default queues. Supported only on Trio MPC/MIC interfaces on MX Series routers.</p> <p>(Enhanced subscriber management for MX Series routers) This field is not displayed for enhanced subscriber management.</p>
<b>Rewrite Input IEEE Code-point</b>	(QFX Series only) IEEE 802.1p code point (priority) rewrite value. Incoming traffic from the Fibre Channel (FC) SAN is classified into the forwarding class specified in the native FC interface (NP_Port) fixed classifier and uses the priority specified as the IEEE 802.1p rewrite value.
<b>Shaping rate</b>	Maximum transmission rate on the physical interface. You can configure the shaping rate on the physical interface, or on the logical interface, but not on both. Therefore, the <b>Shaping rate</b> field is displayed for either the physical interface or the logical interface.
<b>Scheduler map</b>	<p>Name of the output scheduler map associated with this interface.</p> <p>(Enhanced subscriber management for MX Series routers) The name of the dynamic scheduler map object is associated with a generated UID (for example, <b>SMAP-1_UID1002</b>) instead of with a subscriber interface.</p>
<b>Scheduler map forwarding class sets</b>	(QFX Series only) Name of the output fabric scheduler map associated with a QFabric system Interconnect device interface.
<b>Input shaping rate</b>	For Gigabit Ethernet IQ2 PICs, maximum transmission rate on the input interface.
<b>Input scheduler map</b>	For Gigabit Ethernet IQ2 PICs, name of the input scheduler map associated with this interface.
<b>Chassis scheduler map</b>	Name of the scheduler map associated with the packet forwarding component queues.
<b>Rewrite</b>	Name and type of the rewrite rules associated with this interface.
<b>Traffic-control-profile</b>	<p>Name of the associated traffic control profile.</p> <p>(Enhanced subscriber management for MX Series routers) The name of the dynamic traffic control profile object is associated with a generated UID (for example, <b>TC_PROF_100_199_SERIES_UID1006</b>) instead of with a subscriber interface.</p>
<b>Classifier</b>	Name and type of classifiers associated with this interface.
<b>Forwarding-class-map</b>	Name of the forwarding map associated with this interface.
<b>Congestion-notification</b>	(QFX Series and EX4600 switches only) Congestion notification state, <b>enabled</b> or <b>disabled</b> .
<b>Logical interface</b>	Name of a logical interface.
<b>Object</b>	Category of an object: <b>Classifier</b> , <b>Fragmentation-map</b> (for LSQ interfaces only), <b>Scheduler-map</b> , <b>Rewrite</b> , <b>Translation Table</b> (for IQE PICs only), or <b>traffic-class-map</b> (for T4000 routers with Type 5 FPCs).
<b>Name</b>	Name of an object.

Table 87: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Type</b>	Type of an object: <b>dscp</b> , <b>dscp-ipv6</b> , <b>exp</b> , <b>ieee-802.1</b> , <b>ip</b> , <b>inet-precedence</b> , or <b>ieee-802.1ad</b> (for traffic class map on T4000 routers with Type 5 FPCs)..
<b>Link-level type</b>	Encapsulation on the physical interface.
<b>MTU</b>	MTU size on the physical interface.
<b>Speed</b>	Speed at which the interface is running.
<b>Loopback</b>	Whether loopback is enabled and the type of loopback.
<b>Source filtering</b>	Whether source filtering is enabled or disabled.
<b>Flow control</b>	Whether flow control is enabled or disabled.
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Whether autonegotiation is enabled or disabled.
<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status. <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>
<b>Device flags</b>	The <b>Device flags</b> field provides information about the physical device and displays one or more of the following values: <ul style="list-style-type: none"> <li>• <b>Down</b>—Device has been administratively disabled.</li> <li>• <b>Hear-Own-Xmit</b>—Device receives its own transmissions.</li> <li>• <b>Link-Layer-Down</b>—The link-layer protocol has failed to connect with the remote endpoint.</li> <li>• <b>Loopback</b>—Device is in physical loopback.</li> <li>• <b>Loop-Detected</b>—The link layer has received frames that it sent, thereby detecting a physical loopback.</li> <li>• <b>No-Carrier</b>—On media that support carrier recognition, no carrier is currently detected.</li> <li>• <b>No-Multicast</b>—Device does not support multicast traffic.</li> <li>• <b>Present</b>—Device is physically present and recognized.</li> <li>• <b>Promiscuous</b>—Device is in promiscuous mode and recognizes frames addressed to all physical addresses on the media.</li> <li>• <b>Quench</b>—Transmission on the device is quenched because the output buffer is overflowing.</li> <li>• <b>Recv-All-Multicasts</b>—Device is in multicast promiscuous mode and therefore provides no multicast filtering.</li> <li>• <b>Running</b>—Device is active and enabled.</li> </ul>



Table 87: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Interface flags</b>	<p>The <b>Interface flags</b> field provides information about the physical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>Admin-Test</b>—Interface is in test mode and some sanity checking, such as loop detection, is disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Hardware-Down</b>—Interface is nonfunctional or incorrectly connected.</li> <li>• <b>Link-Layer-Down</b>—Interface keepalives have indicated that the link is incomplete.</li> <li>• <b>No-Multicast</b>—Interface does not support multicast traffic.</li> <li>• <b>No-receive No-transmit</b>—Passive monitor mode is configured on the interface.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>Pop all MPLS labels from packets of depth</b>—MPLS labels are removed as packets arrive on an interface that has the <b>pop-all-labels</b> statement configured. The depth value can be one of the following: <ul style="list-style-type: none"> <li>• <b>1</b>—Takes effect for incoming packets with one label only.</li> <li>• <b>2</b>—Takes effect for incoming packets with two labels only.</li> <li>• <b>[ 1 2 ]</b>—Takes effect for incoming packets with either one or two labels.</li> </ul> </li> <li>• <b>Promiscuous</b>—Interface is in promiscuous mode and recognizes frames addressed to all physical addresses.</li> <li>• <b>Recv-All-Multicasts</b>—Interface is in multicast promiscuous mode and provides no multicast filtering.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul>
<b>Flags</b>	<p>The <b>Logical interface flags</b> field provides information about the logical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>ACFC Encapsulation</b>—Address control field Compression (ACFC) encapsulation is enabled (negotiated successfully with a peer).</li> <li>• <b>Device-down</b>—Device has been administratively disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Clear-DF-Bit</b>—GRE tunnel or IPsec tunnel is configured to clear the Don't Fragment (DF) bit.</li> <li>• <b>Hardware-Down</b>—Interface protocol initialization failed to complete successfully.</li> <li>• <b>PFC</b>—Protocol field compression is enabled for the PPP session.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul>
<b>Encapsulation</b>	Encapsulation on the logical interface.
<b>Admin</b>	Administrative state of the interface ( <b>Up</b> or <b>Down</b> ).
<b>Link</b>	Status of physical link ( <b>Up</b> or <b>Down</b> ).
<b>Proto</b>	Protocol configured on the interface.

Table 87: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Input Filter</b>	Names of any firewall filters to be evaluated when packets are received on the interface, including any filters attached through activation of dynamic service.
<b>Output Filter</b>	Names of any firewall filters to be evaluated when packets are transmitted on the interface, including any filters attached through activation of dynamic service.
<b>Link flags</b>	Provides information about the physical link and displays one or more of the following values: <ul style="list-style-type: none"> <li>• <b>ACFC</b>—Address control field compression is configured. The Point-to-Point Protocol (PPP) session negotiates the ACFC option.</li> <li>• <b>Give-Up</b>—Link protocol does not continue connection attempts after repeated failures.</li> <li>• <b>Loose-LCP</b>—PPP does not use the Link Control Protocol (LCP) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-LMI</b>—Frame Relay does not use the Local Management Interface (LMI) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-NCP</b>—PPP does not use the Network Control Protocol (NCP) to indicate whether the device is operational.</li> <li>• <b>Keepalives</b>—Link protocol keepalives are enabled.</li> <li>• <b>No-Keepalives</b>—Link protocol keepalives are disabled.</li> <li>• <b>PFC</b>—Protocol field compression is configured. The PPP session negotiates the PFC option.</li> </ul>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.
<b>CoS queues</b>	Number of CoS queues configured.
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .
<b>Statistics last cleared</b>	Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>
<b>IPv6 transit statistics</b>	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.

Table 87: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Input errors</b>	<p>Input errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Bucket Drops</b>—Drops resulting from the traffic load exceeding the interface transmit or receive leaky bucket configuration.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. Layer 3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>HS link FIFO overflows</b>—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> </ul>
<b>Output errors</b>	<p>Output errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Drops</b> field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>HS link FIFO underflows</b>—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeds the MTU of the interface.</li> </ul>
<b>Egress queues</b>	Total number of egress queues supported on the specified interface.

Table 87: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Queue counters</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Dropped packets</b> field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>
<b>SONET alarms</b> <b>SONET defects</b>	<p>(SONET) SONET media-specific alarms and defects that prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: <b>SONET PHY</b>, <b>SONET section</b>, <b>SONET line</b>, and <b>SONET path</b>.</p>
<b>SONET PHY</b>	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET PHY</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>
<b>SONET section</b>	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET section</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-BI</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>

Table 87: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>SONET line</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET line</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>
<b>SONET path</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET path</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>ES-PFE</b>—Errored seconds (far-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>

Table 87: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
Received SONET overhead	<p>Values of the received and transmitted SONET overhead:</p> <ul style="list-style-type: none"> <li><b>C2</b>—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li><b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li><b>K1 and K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li><b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-N signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li><b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 number of an STS-N signal.</li> <li><b>Z3 and Z4</b>—Allocated for future use.</li> </ul>
Transmitted SONET overhead	
Received path trace	<p>SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>
Transmitted path trace	
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> <li><b>Policing bucket</b>—Configured state of the receiving policer.</li> <li><b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li><b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li><b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> </ul>
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li><b>Destination slot</b>—FPC slot number.</li> <li><b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> <li><b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li><b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li><b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li><b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li><b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li><b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li><b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>
Forwarding classes	Total number of forwarding classes supported on the specified interface.
Egress queues	Total number of egress queues supported on the specified interface.

Table 87: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
Queue	Queue number.
Forwarding classes	Forwarding class name.
Queued Packets	Number of packets queued to this queue.
Queued Bytes	Number of bytes queued to this queue. The byte counts vary by PIC type.
Transmitted Packets	Number of packets transmitted by this queue. When fragmentation occurs on the egress interface, the first set of packet counters shows the postfragmentation values. The second set of packet counters (displayed under the <b>Packet Forwarding Engine Chassis Queues</b> field) shows the prefragmentation values.
Transmitted Bytes	Number of bytes transmitted by this queue. The byte counts vary by PIC type.
Tail-dropped packets	Number of packets dropped because of tail drop.
RED-dropped packets	<p>Number of packets dropped because of random early detection (RED).</p> <ul style="list-style-type: none"> <li>• (M Series and T Series routers only) On M320 and M120 routers and the T Series routers, the total number of dropped packets is displayed. On all other M Series routers, the output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low, non-TCP</b>—Number of low-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>Low, TCP</b>—Number of low-loss priority TCP packets dropped because of RED.</li> <li>• <b>High, non-TCP</b>—Number of high-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>High, TCP</b>—Number of high-loss priority TCP packets dropped because of RED.</li> </ul> </li> <li>• (MX Series routers with enhanced DPCs, and T Series routers with enhanced FPCs only) The output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low-loss priority packets dropped because of RED.</li> <li>• <b>Medium-low</b>—Number of medium-low loss priority packets dropped because of RED.</li> <li>• <b>Medium-high</b>—Number of medium-high loss priority packets dropped because of RED.</li> <li>• <b>High</b>—Number of high-loss priority packets dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>

Table 87: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>RED-dropped bytes</b>	<p>Number of bytes dropped because of RED. The byte counts vary by PIC type.</p> <ul style="list-style-type: none"> <li>(M Series and T Series routers only) On M320 and M120 routers and the T Series routers, only the total number of dropped bytes is displayed. On all other M Series routers, the output classifies dropped bytes into the following categories: <ul style="list-style-type: none"> <li><b>Low, non-TCP</b>—Number of low-loss priority non-TCP bytes dropped because of RED.</li> <li><b>Low, TCP</b>—Number of low-loss priority TCP bytes dropped because of RED.</li> <li><b>High, non-TCP</b>—Number of high-loss priority non-TCP bytes dropped because of RED.</li> <li><b>High, TCP</b>—Number of high-loss priority TCP bytes dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>
<b>Transmit rate</b>	Configured transmit rate of the scheduler. The rate is a percentage of the total interface bandwidth.
<b>Rate Limit</b>	<p>Rate limiting configuration of the queue. Possible values are :</p> <ul style="list-style-type: none"> <li><b>None</b>—No rate limit.</li> <li><b>exact</b>—Queue transmits at the configured rate.</li> </ul>
<b>Buffer size</b>	Delay buffer size in the queue.
<b>Priority</b>	Scheduling priority configured as <b>low</b> or <b>high</b> .
<b>Excess Priority</b>	Priority of the excess bandwidth traffic on a scheduler: <b>low</b> , <b>medium-low</b> , <b>medium-high</b> , <b>high</b> , or <b>none</b> .
<b>Drop profiles</b>	<p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li><b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li><b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li><b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li><b>Name</b>—Name of the drop profile.</li> <li><b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li><b>Fill Level</b>—Percentage fullness of a queue.</li> <li><b>Drop probability</b>—Drop probability at this fill level.</li> </ul>
<b>Excess Priority</b>	Priority of the excess bandwidth traffic on a scheduler.



Table 87: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Drop profiles</b>	<p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li>• <b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li>• <b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li>• <b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li>• <b>Name</b>—Name of the drop profile.</li> <li>• <b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li>• <b>Fill Level</b>—Percentage fullness of a queue.</li> <li>• <b>Drop probability</b>—Drop probability at this fill level.</li> </ul>
<b>Adjustment information</b>	<p>Display the assignment of shaping-rate adjustments on a scheduler node or queue.</p> <ul style="list-style-type: none"> <li>• <b>Adjusting application</b>—Application that is performing the shaping-rate adjustment. <ul style="list-style-type: none"> <li>• The adjusting application can appear as <b>ancp LS-0</b>, which is the Junos OS Access Node Control Profile process (<b>ancpd</b>) that performs shaping-rate adjustments on schedule nodes.</li> <li>• The adjusting application can also appear as <b>pppoe</b>, which adjusts the shaping-rate and overhead-accounting class-of-service attributes on dynamic subscriber interfaces in a broadband access network based on access line parameters in Point-to-Point Protocol over Ethernet (PPPoE) Tags [TR-101]. This feature is supported on MPC/MIC interfaces on MX Series routers. The shaping rate is based on the actual-data-rate-downstream attribute. The overhead accounting value is based on the access-loop-encapsulation attribute and specifies whether the access loop uses Ethernet (frame mode) or ATM (cell mode).</li> </ul> </li> <li>• <b>Adjustment type</b>—Type of adjustment: <b>absolute</b> or <b>delta</b>.</li> <li>• <b>Configured shaping rate</b>—Shaping rate configured for the scheduler node or queue.</li> <li>• <b>Adjustment value</b>—Value of adjusted shaping rate.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment overhead-accounting mode</b>—Configured shaping mode: <b>frame</b> or <b>cell</b>.</li> <li>• <b>Adjustment overhead bytes</b>—Number of bytes that the ANCP agent adds to or subtracts from the actual downstream frame overhead before reporting the adjusted values to CoS.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment multicast index</b>—</li> </ul>

## Sample Output

### show class-of-service interface (Physical)

```

user@host> show class-of-service interface so-0/2/3
Physical interface: so-0/2/3, Index: 135
Queues supported: 8, Queues in use: 4
Total non-default queues created: 4
Scheduler map: <default>, Index: 2032638653

Logical interface: fe-0/0/1.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000
Object          Name                Type                Index
Scheduler-map   <default>           exp                 27
Rewrite         exp-default         exp                 21
Classifier      exp-default         exp                 5

```

Classifier	ipprec-compatibility	ip	8
Forwarding-class-map	exp-default	exp	5

#### show class-of-service interface (Logical)

```

user@host> show class-of-service interface so-0/2/3.0
Logical interface: so-0/2/3.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000
Object      Name      Type      Index
Scheduler-map <default>      27
Rewrite     exp-default    exp      21
Classifier   exp-default    exp      5
Classifier   ipprec-compatibility ip      8
Forwarding-class-map exp-default    exp      5

```

#### show class-of-service interface (Gigabit Ethernet)

```

user@host> show class-of-service interface ge-6/2/0
Physical interface: ge-6/2/0, Index: 175
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Input scheduler map: <default>, Index: 3
Chassis scheduler map: <default-chassis>, Index: 4

```

#### show class-of-service interface (ANCP)

```

user@host> show class-of-service interface pp0.1073741842
Logical interface: pp0.1073741842, Index: 341
Object      Name      Type      Index
Traffic-control-profile TCP-CVLAN    Output    12408
Classifier   dscp-ipv6-compatibility dscp-ipv6 9
Classifier   ipprec-compatibility ip      13

Adjusting application: ancp LS-0
Adjustment type: absolute
Configured shaping rate: 4000000
Adjustment value: 11228000
Adjustment overhead-accounting mode: Frame Mode
Adjustment overhead bytes: 50
Adjustment target: node

```

#### show class-of-service interface (PPPoE Interface)

```

user@host> show class-of-service interface pp0.1
Logical interface: pp0.1, Index: 85
Object      Name      Type      Index
Traffic-control-profile tcp-pppoe.o.pp0.1    Output    2726446535
Classifier   ipprec-compatibility ip      13

Adjusting application: PPPoE
Adjustment type: absolute
Adjustment value: 5000000
Adjustment overhead-accounting mode: cell
Adjustment target: node

```

#### show class-of-service interface (T4000 Routers with Type 5 FPCs)

```

user@host> show class-of-service interface xe-4/0/0
Physical interface: xe-4/0/0, Index: 153
Queues supported: 8, Queues in use: 4
Shaping rate: 5000000000 bps
Scheduler map: <default>, Index: 2

```

```

Congestion-notification: Disabled

Logical interface: xe-4/0/0.0, Index: 77
  Object      Name      Type
Index
  Classifier  ipprec-compatibility ip
13

```

### show class-of-service interface detail

```
user@host> show class-of-service interface ge-0/3/0 detail
```

```

Physical interface: ge-0/3/0, Enabled, Physical link is Up
Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000

```

```

Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps
Scheduler map: interface-scheduler-map, Index: 58414
Input shaping rate: 10000 bps
Input scheduler map: scheduler-map, Index: 15103
Chassis scheduler map: <default-chassis>, Index: 4
Congestion-notification: Disabled

```

```
Logical interface ge-0/3/0.0
```

```
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
```

```
inet
```

```
mpls
```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.0	up	up	inet		
			mpls		
Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.0	up	up	inet		
			mpls		

```
Logical interface: ge-0/3/0.0, Index: 68
```

Object	Name	Type	Index
Rewrite	exp-default	exp (mpls-any)	33
Classifier	exp-default	exp	10
Classifier	ipprec-compatibility	ip	13

```
Logical interface ge-0/3/0.1
```

```
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2
```

```
inet
```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.1	up	up	inet		
Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.1	up	up	inet		

```
Logical interface: ge-0/3/0.1, Index: 69
```

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

### show class-of-service interface comprehensive

```
user@host> show class-of-service interface ge-0/3/0 comprehensive
```

```

Physical interface: ge-0/3/0, Enabled, Physical link is Up
  Interface index: 138, SNMP ifIndex: 601, Generation: 141
  Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, BPDU Error: None,
  MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
  control: Enabled,
  Auto-negotiation: Enabled, Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Schedulers     : 256
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:14:f6:f4:b4:5d, Hardware address: 00:14:f6:f4:b4:5d
  Last flapped   : 2010-09-07 06:35:22 PDT (15:14:42 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
IPv6 total statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Ingress traffic statistics at Packet Forwarding Engine:
  Input bytes : 0 0 bps
  Input packets: 0 0 pps
  Drop bytes : 0 0 bps
  Drop packets: 0 0 pps
Label-switched interface (LSI) traffic statistics:
  Input bytes : 0 0 bps
  Input packets: 0 0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runt: 0, Policed discards: 0, L3
  incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
  Resource errors: 0
Output errors:
  Carrier transitions: 5, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 5 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 af3                0                0                0
  1 af2                0                0                0
  2 ef2                0                0                0
  3 ef1                0                0                0

Egress queues: 4 supported, 5 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 af3                0                0                0
  1 af2                0                0                0
  2 ef2                0                0                0
  3 ef1                0                0                0

```

```

Active alarms : None
Active defects : None
MAC statistics:
    Total octets          Receive      Transmit
    Total packets        0          0
    Unicast packets      0          0
    Broadcast packets    0          0
    Multicast packets    0          0
    CRC/Align errors     0          0
    FIFO errors          0          0
    MAC control frames   0          0
    MAC pause frames     0          0
    Oversized frames     0
    Jabber frames        0
    Fragment frames      0
    VLAN tagged frames   0
    Code violations      0
Filter statistics:
    Input packet count    0
    Input packet rejects  0
    Input DA rejects     0
    Input SA rejects     0
    Output packet count   0
    Output packet pad count 0
    Output packet error count 0
    CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
    Negotiation status: Complete
    Link partner:
        Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote fault:
OK
    Local resolution:
        Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
    Destination slot: 0
CoS information:
    Direction : Output
    CoS transmit queue      Bandwidth      Buffer Priority
Limit
    %      bps      %      usec
    2 ef2    39    19500    0    120    high
none
    Direction : Input
    CoS transmit queue      Bandwidth      Buffer Priority
Limit
    %      bps      %      usec
    0 af3    30    3000    45    0    low
none

Physical interface: ge-0/3/0, Enabled, Physical link is Up
    Interface index: 138, SNMP ifIndex: 601
Forwarding classes: 16 supported, 5 in use
Ingress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
    Queued:
        Packets      :      0      0 pps
        Bytes        :      0      0 bps
    Transmitted:
        Packets      :      0      0 pps
        Bytes        :      0      0 bps
    Tail-dropped packets : Not Available

```

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Forwarding classes: 16 supported, 5 in use
Egress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets : 0 0 pps

```

```

    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets   :                0                0 pps
    RL-dropped bytes     :                0                0 bps
    RED-dropped packets  :                0                0 pps
    RED-dropped bytes    :                0                0 bps
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets   :                0                0 pps
    RL-dropped bytes     :                0                0 bps
    RED-dropped packets  :                0                0 pps
    RED-dropped bytes    :                0                0 bps

Packet Forwarding Engine Chassis Queues:
Queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets :                0                0 pps
    RED-dropped packets  : Not Available
    RED-dropped bytes    : Not Available
Queue: 1, Forwarding classes: af2
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets :                0                0 pps
    RED-dropped packets  : Not Available
    RED-dropped bytes    : Not Available
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets :                0                0 pps
    RED-dropped packets  : Not Available
    RED-dropped bytes    : Not Available
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets              :            108546                0 pps
    Bytes                :        12754752        376 bps
  Transmitted:
    Packets              :            108546                0 pps
    Bytes                :        12754752        376 bps

```

```

Tail-dropped packets : 0 0 pps
RED-dropped packets : Not Available
RED-dropped bytes : Not Available

```

```

Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps

```

```
Scheduler map: interface-scheduler-map, Index: 58414
```

```

Scheduler: ef2, Forwarding class: ef2, Index: 39155
  Transmit rate: 39 percent, Rate Limit: none, Buffer size: 120 us, Buffer
  Limit: none, Priority: high
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Input shaping rate: 10000 bps
  Input scheduler map: scheduler-map

```

```
Scheduler map: scheduler-map, Index: 15103
```

```

Scheduler: af3, Forwarding class: af3, Index: 35058
  Transmit rate: 30 percent, Rate Limit: none, Buffer size: 45 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       40582  green
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       18928  yellow
  Drop profile: green, Type: discrete, Index: 40582
    Fill level  Drop probability
    50          0
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: yellow, Type: discrete, Index: 18928
    Fill level  Drop probability
    50          0
    100         100

```



Chassis scheduler map: < default-drop-profile>  
 Scheduler map: < default-drop-profile>, Index: 4

Scheduler: < default-drop-profile>, Forwarding class: af3, Index: 25  
 Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer  
 Limit: none, Priority: low  
 Excess Priority: low  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	< default-drop-profile>
Medium low	any	1	< default-drop-profile>
Medium high	any	1	< default-drop-profile>
High	any	1	< default-drop-profile>

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                   100                   100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                   100                   100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                   100                   100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                   100                   100

Scheduler: < default-drop-profile>, Forwarding class: af2, Index: 25  
 Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer  
 Limit: none, Priority: low  
 Excess Priority: low  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	< default-drop-profile>
Medium low	any	1	< default-drop-profile>
Medium high	any	1	< default-drop-profile>
High	any	1	< default-drop-profile>

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                   100                   100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                   100                   100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                   100                   100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                   100                   100

Scheduler: < default-drop-profile>, Forwarding class: ef2, Index: 25  
 Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer  
 Limit: none, Priority: low  
 Excess Priority: low  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	< default-drop-profile>
Medium low	any	1	< default-drop-profile>
Medium high	any	1	< default-drop-profile>
High	any	1	< default-drop-profile>

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability

```

100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100          100

Scheduler: < default-drop-profile>, Forwarding class: ef1, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
Drop profile: , Type: discrete, Index: 1
  Fill level  Drop probability
100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100          100
  Congestion-notification: Disabled
Forwarding class
priority Policing priority      ID      Queue  Restricted queue  Fabric
af3      normal                0       0           0          low
af2      normal                1       1           1          low
ef2      normal                2       2           2          high
ef1      normal                3       3           3          high
af1      normal                4       4           0          low
normal

Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152) (Generation 159)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Local statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Transit statistics:
    Input bytes : 0 0 bps

```

```

Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 172, Route table: 0
  Flags: Sendbroadcast-pkt-to-re
  Input Filters: filter-in-ge-0/3/0.0-i,
  Policer: Input: pl-ge-0/3/0.0-inet-i
Protocol mpls, MTU: 1488, Maximum labels: 3, Generation: 173, Route table: 0
  Flags: Is-Primary
  Output Filters: exp-filter,,,,,

Logical interface ge-1/2/0.0 (Index 347) (SNMP ifIndex 638) (Generation 156)

Forwarding class ID Queue Restricted queue Fabric priority Policing priority
  SPU priority
best-effort 0 0 0 low normal
  low

Aggregate Forwarding-class statistics per forwarding-class
Aggregate Forwarding-class statistics:
Forwarding-class statistics:

Forwarding-class best-effort statistics:
  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:
  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

IPv4 protocol forwarding-class statistics:
Forwarding-class statistics:
Forwarding-class best-effort statistics:

  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:
  Input unicast bytes: 0

```

```

Output unicast bytes:    0
Input unicast packets:  0
Output unicast packets: 0

```

```

Input multicast bytes:   0
Output multicast bytes:  0
Input multicast packets: 0
Output multicast packets: 0

```

```

IPv6 protocol forwarding-class statistics:
Forwarding-class statistics:
  Forwarding-class best-effort statistics:

```

```

Input unicast bytes:    0
Output unicast bytes:   0
Input unicast packets:  0
Output unicast packets: 0

```

```

Input multicast bytes:   0
Output multicast bytes:  0
Input multicast packets: 0
Output multicast packets: 0

```

```
Forwarding-class expedited-forwarding statistics:
```

```

Input unicast bytes:    0
Output unicast bytes:   0
Input unicast packets:  0
Output unicast packets: 0

```

```
Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152)
```

```

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
Input packets : 0
Output packets: 0

```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.0	up	up	inet	filter-in-ge-0/3/0.0-i	
			mpls		exp-filter

Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.0	up	up			
			inet	p1-ge-0/3/0.0-inet-i	
			mpls		

```
Filter: filter-in-ge-0/3/0.0-i
```

```
Counters:
```

Name	Bytes	Packets
count-filter-in-ge-0/3/0.0-i	0	0

```
Filter: exp-filter
```

```
Counters:
```

Name	Bytes	Packets
count-exp-seven-match	0	0
count-exp-zero-match	0	0

```
Policers:
```

Name	Packets
p1-ge-0/3/0.0-inet-i	0

```
Logical interface: ge-0/3/0.0, Index: 68
```

Object	Name	Type	Index
Rewrite	exp-default	exp (mpls-any)	33

Rewrite rule: exp-default, Code point type: exp, Index: 33

Forwarding class	Loss priority	Code point		
af3	low	000		
af3	high	001		
af2	low	010		
af2	high	011		
ef2	low	100		
ef2	high	101		
ef1	low	110		
ef1	high	111		
Object	Name	Type		Index
Classifier	exp-default	exp		10

Classifier: exp-default, Code point type: exp, Index: 10

Code point	Forwarding class	Loss priority		
000	af3	low		
001	af3	high		
010	af2	low		
011	af2	high		
100	ef2	low		
101	ef2	high		
110	ef1	low		
111	ef1	high		
Object	Name	Type		Index
Classifier	ipprec-compatibility	ip		13

Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13

Code point	Forwarding class	Loss priority			
000	af3	low			
001	af3	high			
010	af3	low			
011	af3	high			
100	af3	low			
101	af3	high			
110	ef1	low			
111	ef1	high			
Forwarding class	ID	Queue	Restricted queue	Fabric	
priority					
af3	0	0	0	low	
normal					
af2	1	1	1	low	
normal					
ef2	2	2	2	high	
normal					
ef1	3	3	3	high	
normal					
af1	4	4	0	low	
normal					

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154) (Generation 160)

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2

Traffic statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0
Local statistics:	
Input bytes :	0

```

Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 174, Route table: 0
Flags: Sendbcst-pkt-to-re

```

```

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2
Input packets : 0
Output packets: 0

```

```

Interface      Admin Link Proto Input Filter      Output Filter
ge-0/3/0.1     up   up   mpls
Interface      Admin Link Proto Input Policer      Output Policer
ge-0/3/0.1     up   up   mpls

```

```
Logical interface: ge-0/3/0.1, Index: 69
```

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

```
Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13
```

Code point	Forwarding class	Loss priority
000	af3	low
001	af3	high
010	af3	low
011	af3	high
100	af3	low
101	af3	high
110	ef1	low
111	ef1	high

Forwarding class	ID	Queue	Restricted queue	Fabric
priority				
af3	0	0	0	low
af2	1	1	1	low
ef2	2	2	2	high
ef1	3	3	3	high
af1	4	4	0	low

### show class-of-service interface (ACX Series Routers)

```

user@host-g11# show class-of-service interface
Physical interface: at-0/0/0, Index: 130
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled

```

Logical interface: at-0/0/0.0, Index: 69

Logical interface: at-0/0/0.32767, Index: 70

Physical interface: at-0/0/1, Index: 133

Queues supported: 4, Queues in use: 4

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Logical interface: at-0/0/1.0, Index: 71

Logical interface: at-0/0/1.32767, Index: 72

Physical interface: ge-0/1/0, Index: 146

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Rewrite	dscp-default	dscp	31
Classifier	d1	dscp	11331
Classifier	ci	ieee8021p	583

Logical interface: ge-0/1/0.0, Index: 73

Object	Name	Type	Index
Rewrite	custom-exp	exp (mpls-any)	46413

Logical interface: ge-0/1/0.1, Index: 74

Logical interface: ge-0/1/0.32767, Index: 75

Physical interface: ge-0/1/1, Index: 147

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Logical interface: ge-0/1/1.0, Index: 76

Physical interface: ge-0/1/2, Index: 148

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Rewrite	ri	ieee8021p (outer)	35392
Classifier	ci	ieee8021p	583

Physical interface: ge-0/1/3, Index: 149

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Logical interface: ge-0/1/3.0, Index: 77

Object	Name	Type	Index
Rewrite	custom-exp2	exp (mpls-any)	53581

Physical interface: ge-0/1/4, Index: 150

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Physical interface: ge-0/1/5, Index: 151			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Physical interface: ge-0/1/6, Index: 152			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Physical interface: ge-0/1/7, Index: 153			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	d1	dscp	11331
Physical interface: ge-0/2/0, Index: 154			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Physical interface: ge-0/2/1, Index: 155			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Logical interface: ge-0/2/1.0, Index: 78			
Logical interface: ge-0/2/1.32767, Index: 79			
Physical interface: xe-0/3/0, Index: 156			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Logical interface: xe-0/3/0.0, Index: 80			
Physical interface: xe-0/3/1, Index: 157			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Logical interface: xe-0/3/1.0, Index: 81			



```
[edit]
user@host-g11#
```

### show class-of-service interface (PPPoE Subscriber Interface for Enhanced Subscriber Management)

```
user@host> show class-of-service interface pp0.3221225474
  Logical interface: pp0.3221225475, Index: 3221225475
Object      Name                               Type      Index
Traffic-control-profile TC_PROF_100_199_SERIES_UID1006 Output    4294967312
Scheduler-map      SMAP-1_UID1002      Output    4294967327
Rewrite-Output     ieee-rewrite         ieee8021p 60432
Rewrite-Output     rule1                ip         50463

  Adjusting application: PPPoE IA tags
    Adjustment type: absolute
    Configured shaping rate: 11000000
    Adjustment value: 5000000
    Adjustment target: node

  Adjusting application: ucac
    Adjustment type: delta
    Configured shaping rate: 5000000
    Adjustment value: 100000
    Adjustment target: node
```

## show class-of-service shared-buffer

**Syntax** `show class-of-service shared-buffer`  
`<egress | ingress>`

**Release Information** Command introduced in Junos OS Release 12.3 for the QFX Series.  
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Display the shared buffer allocation and partitioning configuration.



**NOTE:** Due to QFX5200 cross-point architecture, all buffer usage counters are maintained separately. When usage counters are displayed with the command `show class-of-service shared-buffer` on QFX5200, various pipe counters are displayed separately.

**Options** **none**—Display ingress and egress shared buffer settings.  
**egress**—(Optional) Display the egress shared buffer settings.  
**ingress**—(Optional) Display the ingress shared buffer settings.

**Required Privilege Level** view

**Related Documentation**

- *Example: Recommended Configuration of the Shared Buffer Pool for Networks with Mostly Best-Effort Unicast Traffic*
- *Example: Recommended Configuration of the Shared Buffer Pool for Networks with Mostly Multicast Traffic*
- *Example: Recommended Configuration of the Shared Buffer Pool for Networks with Mostly Lossless Traffic*
- *Configuring Global Ingress and Egress Shared Buffers*
- *Understanding CoS Buffer Configuration*

**List of Sample Output** [show class-of-service shared-buffer on page 593](#)

**Output Fields** [Table 88 on page 592](#) describes the output fields for the `show class-of-service shared-buffer` command. Output fields are listed in the approximate order in which they appear.

**Table 88: show class-of-service shared-buffer Output Fields**

Field Name	Field Description
Ingress	Ingress shared buffer configuration.
Total Buffer	Total buffer space available to the ports in KB. This is the combined dedicated buffer pool and shared buffer pool.

Table 88: show class-of-service shared-buffer Output Fields (*continued*)

Field Name	Field Description
<b>Dedicated Buffer</b>	Buffer space allocated to the dedicated buffer pool in KB.
<b>Shared Buffer</b>	Buffer space allocated to the shared buffer pool in KB.
<b>Lossless</b>	Buffer space allocated to the lossless traffic buffer pool in KB.
<b>Lossless Headroom</b>	Buffer space allocated to the lossless headroom traffic buffer pool to support priority-based flow control (PFC) and Ethernet PAUSE in KB. (Ingress ports only.)  <i>NOTE:</i> OCX Series switches do not support PFC.
<b>Lossy</b>	Buffer space allocated to the lossy (best-effort) traffic buffer pool in KB.
<b>Lossless Headroom Utilization</b>	Utilization of the ingress lossless headroom buffer pool. (These fields can help you to determine how much headroom buffer space you need to reserve to support PFC and Ethernet PAUSE for lossless flows.)  <i>NOTE:</i> OCX Series switches do not support PFC.
<b>Node Device</b>	Index number that identifies the switch. On a QFX3500 switch, this field always has a value of zero (0).
<b>Total</b>	Size of the lossless headroom ingress buffer pool in KB.
<b>Used</b>	Amount in KB of lossless headroom ingress buffer used.
<b>Free</b>	Amount in KB of lossless headroom ingress buffer free (unused).
<b>Egress</b>	Egress shared buffer configuration.
<b>Multicast</b>	Buffer space allocated to the multicast traffic buffer pool in KB. (Egress ports only.)

## Sample Output

### show class-of-service shared-buffer

```
user@switch> show class-of-service shared-buffer
```

```
Ingress:
```

```

Total Buffer      : 9360.00 KB
Dedicated Buffer  : 2158.00 KB
Shared Buffer     : 7202.00 KB
  Lossless       : 648.18 KB
  Lossless Headroom : 3240.90 KB
  Lossy          : 3312.92 KB

```

```
Lossless Headroom Utilization:
```

```

Node Device      Total      Used      Free
0                3240.90 KB  0.00 KB  3240.90 KB

```

Egress:

Total Buffer	:	9360.00 KB
Dedicated Buffer	:	2704.00 KB
Shared Buffer	:	6656.00 KB
Lossless	:	3328.00 KB
Multicast	:	1264.64 KB
Lossy	:	2063.36 KB

## show pfe filter hw summary

<b>Syntax</b>	show pfe filter hw summary
<b>Release Information</b>	Command introduced in Junos OS Release 14.1X53-D10 for the QFX Series.
<b>Description</b>	<p>Display a summary of the access control list (ACL; also known as firewall filter) ternary content-addressable memory (TCAM) hardware utilization to show the allocated, used, and free TCAM entry space.</p> <p>Command supported on standalone QFX Series switches, QFX5100-only (pure QFX5100) Virtual Chassis Fabric (VCF), QFX5100-only (pure QFX5100) Virtual Chassis (VC), and QFX3500-only (pure QFX3500) VC.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Planning the Number of Firewall Filters to Create</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show pfe filter hw summary on page 596</a>
<b>Output Fields</b>	<p><a href="#">Table 89 on page 595</a> lists the output fields for the <b>show pfe filter hw summary</b> command. Output fields are listed in the approximate order in which they appear.</p>

**Table 89: show pfe filter hw summary Output Fields**

Field Name	Field Description
<b>Group</b>	<p>ACL ingress and egress filter groups:</p> <ul style="list-style-type: none"> <li>• iRACL group—ingress routing ACL filter group</li> <li>• iVACL group—ingress VLAN ACL filter group</li> <li>• iPACL group—ingress port ACL filter group</li> <li>• ePACL group—egress port ACL filter group</li> <li>• eVACL group—egress VLAN ACL filter group</li> <li>• eRACL group—egress routing ACL filter group</li> <li>• eRACL IPv6 group—egress IPv6 routing ACL filter group</li> </ul>
<b>Group-ID</b>	Internal identification number of the filter group.
<b>Allocated</b>	Number of TCAM filter entries allocated to the filter group.
<b>Used</b>	Number of TCAM filter entries used by the filter group.
<b>Free</b>	Number of TCAM filter entries available for use by the filter group.

## Sample Output

### show pfe filter hw summary

```
user@switch> show pfe filter hw summary
```

Group	Group-ID	Allocated	Used	Free
-----				
> Ingress filter groups:				
iRACL group	14	512	4	508
iVACL group	13	512	2	510
iPACL group	12	256	2	254
> Egress filter groups:				
ePACL group	20	256	3	253
eVACL group	21	256	4	252
eRACL group	22	256	245	11
eRACL IPV6 group	24	256	3	253

## show pfe next-hop

<b>List of Syntax</b>	<a href="#">Syntax on page 597</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Routers) on page 597</a>
<b>Syntax</b>	<pre>show pfe next-hop &lt;interface <i>interface-name</i>&gt;</pre>
<b>Syntax (TX Matrix and TX Matrix Plus Routers)</b>	<pre>show pfe next-hop &lt;fpc <i>slot</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;lcc <i>number</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display Packet Forwarding Engine next-hop information.
<b>Options</b>	<p><b>none</b>—Display all Packet Forwarding Engine next-hop information.</p> <p><b>fpc <i>slot</i></b>—(TX Matrix and TX Matrix Plus routers only) (Optional) Show the next hops for a Flexible PIC Concentrator (FPC) slot.</p> <p>On a TX Matrix router, if you specify the number of a T640 router by using the <b>lcc <i>number</i></b> option (the recommended method), replace <b><i>slot</i></b> with a value from 0 through 7. Otherwise, replace <b><i>slot</i></b> with a value from 0 through 31. On a TX Matrix Plus router, if you specify the number of a T1600 router by using the <b>lcc <i>number</i></b> option (the recommended method), replace <b><i>slot</i></b> with a value from 0 through 7. Otherwise, replace <b><i>slot</i></b> with a value from 0 through 31. For example, the following commands have the same result:</p> <pre>user@host&gt; show pfe next-hop fpc 1 lcc 1 user@host&gt; show pfe next-hop fpc 9</pre> <p><b>interface <i>interface-name</i></b>—(Optional) Display the Packet Forwarding Engine next-hop interface.</p> <p><b>lcc <i>number</i></b>—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, the slot number of the T640 router (or line-card chassis) that houses the FPC. On a TX Matrix Plus router, the slot number of the T1600 router (or line-card chassis) that houses the FPC. Replace <b><i>number</i></b> with a value from 0 through 3.</p>
<b>Required Privilege Level</b>	admin
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Routing Matrix with TXP-T1600 Configuration</i></li> <li>• <i>Routing Matrix with TXP-T1600-3D Configuration</i></li> <li>• <i>Routing Matrix with TXP-T4000-3D Configuration</i></li> </ul>

- *Routing Matrix with a TXP-Mixed-LCC-3D Configuration*

**List of Sample Output**    [show pfe next-hop on page 599](#)  
                                  [show pfe next-hop fpc \(TX Matrix Router\) on page 599](#)  
                                  [show pfe next-hop fpc \(TX Matrix Plus Router\) on page 600](#)



**Output Fields** Table 90 on page 599 lists the output fields for the **show pfe next hop** command. Output fields are listed in the approximate order in which they appear.

**Table 90: show pfe next-hop Output Fields**

Field Name	Field Description
ID	The next-hop ID for the entry.
Type	The next-hop type for the entry.
Interface	The interface to which the next-hop entry is assigned.
Protocol	The protocol type for the next-hop entry.
Encap	Encapsulation type for the next-hop entry.
Next Hop Addr	Next-hop address for the next-hop entry.
MTU	MTU value for the nexthop entry.

## Sample Output

### show pfe next-hop

```

user@host> show pfe next-hop
Nexthop Info:
  ID      Type      Interface      Protocol      Encap      Next Hop Addr      MTU
  ----      -      -      -      -      -      -
  4         Mcast      -              IPv4          -          0.0.0.0             0
  5         Bcast      -              IPv4          -          -                   0
  7         Discard     -              IPv4          -          -                   0
  8         MDiscard    -              IPv4          -          -                   0
  9         Reject      -              IPv4          -          -                   0
  13        Local      -              IPv4          -          192.168.4.60        0
  14        Resolve    fxp0.0         IPv4          Unspecified   -                   0
  17        Local      -              IPv4          -          127.0.0.1           0
  18        Unicast     fxp0.0         IPv4          Unspecified   192.168.4.254       0
  21        Local      -              IPv4          -          11.1.0.1            0
  22        Unicast     at-0/1/0.0     IPv4          ATM SNAP     11.1.0.2            4482
  ...

```

### show pfe next-hop fpc (TX Matrix Router)

```

user@host> show pfe next-hop fpc 1
Slot 1
Nexthop Info:
  ID      Type      Interface      Next Hop Addr      Protocol      Encap      MTU
  ----      -      -      -      -      -      -
  5         Mcast      -              default            IPv4          -          0
  6         Bcast      -              -                  IPv4          -          0
  8         Discard     -              -                  IPv4          -          0
  9         MDiscard    -              -                  IPv4          -          0
  13        Mcast      -              default            IPV6          -          0
  17        MDiscard    -              -                  IPV6          -          0
  18        Reject      -              -                  IPV6          -          0
  24        Discard     -              -                  None          -          0

```

68	Local	-	192.168.66.113	IPv4	-	0
69	Resolve	fxp0.0	-	IPv4	Unspecified	0
70	Unicast	fxp0.0	192.168.71.254	IPv4	Unspecified	0
256	Local	-	10.71.71.1	IPv4	-	0
257	Local	-	127.0.0.1	IPv4	-	0
258	Mcast.local..1	default		IPv4	Unspecified	0
259	Bcast.local..1	-		IPv4	Unspecified	0
261	Discard.local..1	-		IPv4	Unspecified	0
262	MDiscard.local..1	-		IPv4	Unspecified	0
269	Mcast.local..1	default		IPv6	Unspecified	0
271	Discard.local..1	-		IPv6	Unspecified	0
...						

### show pfe next-hop fpc (TX Matrix Plus Router)

```
user@host> show pfe next-hop fpc 0
```

Slot 0

ID	Type	Interface	Next Hop Addr	Protocol	Encap	MTU
-----						
31	Mcast	-	default	IPv4	-	0
32	Bcast	-	-	IPv4	-	0
34	Discard	-	-	IPv4	-	0
35	MDiscard	-	-	IPv4	-	0
36	Reject	-	-	IPv4	-	0
39	Mcast	-	default	IPv6	-	0
42	Discard	-	-	IPv6	-	0
43	MDiscard	-	-	IPv6	-	0
44	Reject	-	-	IPv6	-	0
49	Receive	-	-	MPLS	-	0
50	Discard	-	-	MPLS	-	0
111	Mcast	.local..1	default	IPv4	Unspecified	0
112	Bcast	.local..1	-	IPv4	Unspecified	0
114	Discard	.local..1	-	IPv4	Unspecified	0
115	MDiscard	.local..1	-	IPv4	Unspecified	0
116	Reject	.local..1	-	IPv4	Unspecified	0
119	Mcast	.local..1	default	IPv6	Unspecified	0
122	Discard	.local..1	-	IPv6	Unspecified	0
123	MDiscard	.local..1	-	IPv6	Unspecified	0
124	Reject	.local..1	-	IPv6	Unspecified	0
191	Mcast	.local..2	default	IPv4	Unspecified	0
192	Bcast	.local..2	-	IPv4	Unspecified	0
194	Discard	.local..2	-	IPv4	Unspecified	0
195	MDiscard	.local..2	-	IPv4	Unspecified	0
196	Reject	.local..2	-	IPv4	Unspecified	0
322	Local	-	10.1.0.5	IPv4	-	0
323	Resolve	bcm0.0	-	IPv4	Unspecified	0
326	Local	-	129.0.0.5	IPv4	-	0
327	Resolve	bcm0.0	-	IPv4	Unspecified	0
328	Local	-	fe80::201:ff:fe01:5	IPv6	-	0
329	Receive	bcm0.0	ff02::1:ff01:5	IPv6	Unspecified	0
330	Receive	bcm0.0	fe80::	IPv6	Unspecified	0
331	Resolve	bcm0.0	-	IPv6	Unspecified	0
332	Local	-	fec0::a:1:0:5	IPv6	-	0
333	Receive	bcm0.0	ff02::1:ff00:5	IPv6	Unspecified	0
334	Receive	bcm0.0	fec0::	IPv6	Unspecified	0
335	Resolve	bcm0.0	-	IPv6	Unspecified	0
348	Local	-	192.168.178.4	IPv4	-	0
349	Resolve	em0.0	-	IPv4	Unspecified	0

350	Unicast	em0.0	192.168.178.126	IPv4	Unspecified	0
357	Local	-	fe80::201:1ff:fe01:5	IPv6	-	0
512	Local	-	10.255.178.11	IPv4	-	0
513	Local	-	127.0.0.1	IPv4	-	0
515	Local	-	abcd::10:255:178:11	IPv6	-	0
516	Local	-	fe80::200:ff:fe00:0	IPv6	-	0
517	Local	-	127.0.0.1	IPv4	-	0
518	Mcast	.local..3	default	IPv4	Unspecified	0
519	Bcast	.local..3	-	IPv4	Unspecified	0
521	Discard	.local..3	-	IPv4	Unspecified	0
522	MDiscard	.local..3	-	IPv4	Unspecified	0
523	Reject	.local..3	-	IPv4	Unspecified	0
531	Mcast	.local..3	default	IPv6	Unspecified	0
533	Discard	.local..3	-	IPv6	Unspecified	0
534	MDiscard	.local..3	-	IPv6	Unspecified	0
535	Reject	.local..3	-	IPv6	Unspecified	0
539	Mgroup	-	-	IPv4	-	0
540	Bcast	ge-15/0/3.0	-	IPv4	Ethernet	0
541	Receive	ge-15/0/3.0	14.2.1.0	IPv4	Ethernet	0
542	Local	-	14.2.1.1	IPv4	-	0
543	Resolve	ge-15/0/3.0	-	IPv4	Ethernet	0
544	Bcast	ge-31/0/4.0	-	IPv4	Ethernet	0
545	Receive	ge-31/0/4.0	14.1.1.0	IPv4	Ethernet	0
546	Local	-	14.1.1.1	IPv4	-	0
547	Resolve	ge-31/0/4.0	-	IPv4	Ethernet	0
548	Unicast	ge-31/0/4.0	14.1.1.2	IPv4	Ethernet	0
549	Unicast	ge-15/0/3.0	14.2.1.2	IPv4	Ethernet	0
550	Bcast	ae1.0	-	IPv4	Ethernet	0
551	Receive	ae1.0	11.1.1.0	IPv4	Ethernet	0
552	Local	-	11.1.1.1	IPv4	-	0
553	Resolve	ae1.0	-	IPv4	Ethernet	0
554	Aggreg.	ae1.0	-	IPv4	Ethernet	0
555	Unicast	ge-23/0/8.0	11.1.1.2	IPv4	Ethernet	0
556	Unicast	ge-7/0/9.0	11.1.1.2	IPv4	Ethernet	0
557	Aggreg.	ae1.0	-	MPLS	Ethernet	0
558	Unicast	ge-23/0/8.0	-	MPLS	Ethernet	0
559	Unicast	ge-7/0/9.0	-	MPLS	Ethernet	0
560	Aggreg.	ae1.0	-	MPLS	Ethernet	0
561	Unicast	ge-23/0/8.0	-	MPLS	Ethernet	0
562	Unicast	ge-7/0/9.0	-	MPLS	Ethernet	0

## show pfe route

<b>List of Syntax</b>	<a href="#">Syntax on page 602</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 602</a> <a href="#">Syntax (QFX Series) on page 602</a> <a href="#">Syntax (MX Series) on page 602</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Routers) on page 602</a>
<b>Syntax</b>	<pre>show pfe route &lt;&lt;inet6   ip   iso&gt; &lt;prefix prefix&gt;   &lt;table &lt;table-name&gt; &lt;index index&gt; &lt;prefix prefix&gt;&gt;&gt; &lt;mpls&gt; &lt;summary&gt;</pre>
<b>Syntax (EX Series Switch and QFX Series)</b>	<pre>show pfe route &lt;&lt;inet6   ip&gt; &lt;prefix prefix&gt;   &lt;table &lt;table-name&gt; &lt;index index&gt; &lt;prefix prefix&gt;&gt;&gt; &lt;mpls&gt; &lt;summary&gt;</pre>
<b>Syntax (QFX Series)</b>	<pre>show pfe route &lt;&lt;inet6   ip&gt; &lt;prefix prefix&gt;   &lt;table &lt;table-name&gt; &lt;index index&gt; &lt;prefix prefix&gt;&gt;&gt; &lt;hw (host   lpm   multicast)&gt;&gt; &lt;&lt;clnp&gt; &lt;prefix prefix&gt;   &lt;table &lt;table-name&gt; &lt;index index&gt; &lt;prefix prefix&gt;&gt;&gt; &lt;mpls&gt; &lt;summary&gt; &lt;hw&gt;</pre>
<b>Syntax (MX Series)</b>	<pre>show pfe route &lt;&lt;inet6   ip&gt; &lt;prefix prefix&gt;   &lt;table &lt;table-name&gt; &lt;index index&gt; &lt;prefix prefix&gt;&gt;&gt; &lt;dhcp&gt; &lt;mpls&gt; &lt;summary&gt;</pre>
<b>Syntax (TX Matrix and TX Matrix Plus Routers)</b>	<pre>show pfe route &lt;fpc slot&gt; &lt;&lt;inet6   ip   iso&gt; &lt;prefix prefix&gt;   &lt;table &lt;table-name&gt; &lt;index index&gt; &lt;prefix prefix&gt;&gt;&gt; &lt;lcc number&gt; &lt;mpls&gt; &lt;summary&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 13.3 for the MX Series.</p> <p>Command option <b>hw</b> introduced in Junos OS Release 14.1X53-D10 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<p>Display the routes in the Packet Forwarding Engine forwarding table. The Packet Forwarding Engine forwards packets between input and output interfaces.</p>



**NOTE:** The Routing Engine maintains a master copy of the forwarding table. It copies the forwarding table to the Packet Forwarding Engine, which is the part of the router or switch responsible for forwarding packets. To display the routes in the Routing Engine forwarding table, use the **show route forwarding table** command. For more information, see the [CLI Explorer](#).

**Options** **none**—Display all Packet Forwarding Engine forwarding table information.

**clnp**—(Optional) Show International Standards Organization (ISO) connectionless-mode network protocol (CLNP) route table information.

**dhcp**—(Optional) Display Packet Forwarding Engine DHCP-Snooping route table information.

**fpc slot**—(TX Matrix and TX Matrix Plus routers only) (Optional) Show the next hops for a Flexible PIC Concentrator (FPC) slot.

- On a TX Matrix router, if you specify the number of a T640 router by using the **lcc number** option (the recommended method), replace **slot** with a value from **0** through **7**. Otherwise, replace **slot** with a value from **0** through **31**.
- On a TX Matrix Plus router, if you specify the number of a T1600 router by using the **lcc number** option (the recommended method), replace **slot** with a value from **0** through **7**. Otherwise, replace **slot** with a value from **0** through **31**.
- On a TX Matrix Plus router in the TXP-T1600-3D, TXP-T4000-3D, or TXP-Mixed-LCC-3D configuration, if you specify the number of a T1600 or T4000 router by using the **lcc number** option (the recommended method), replace **slot** with a value from **0** through **7**. Otherwise, replace **slot** with a value from **0** through **63**.

For example, the following commands have the same result:

```
user@host> show pfe route fpc 1 lcc 1
user@host> show pfe route fpc 9
```

**host**—(QFX standalone switches, pure mode QFX5100-only VCF and VC, and pure mode QFX3500-only VC) (Optional) Display host routes installed in the on-chip hardware table.

**hw**—(QFX standalone switches, pure mode QFX5100-only VCF and VC, and pure mode QFX3500-only VC) (Optional) Display routes installed in the on-chip hardware table (as opposed to displaying routes from the routing table and the PFE forwarding table before they are installed in the hardware).

**index index**—(Optional) Display table index.

**inet6**—(Optional) Display Packet Forwarding Engine IPv6 routes.

**ip**—(Optional) Display Packet Forwarding Engine IPv4 routes.

**iso**—(Optional) Display ISO version routing tables.

**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, the slot number of the T640 router (or line-card chassis) that houses the FPC. On a TX Matrix Plus router, the slot number of the T1600 router (or line-card chassis) that houses the FPC. Replace *number* with a value from 0 through 3.

**mpls**—(Optional) Display Packet Forwarding Engine MPLS information.

**multicast**—(QFX standalone switches, pure mode QFX5100-only VCF and VC, and pure mode QFX3500-only VC) (Optional) Display multicast routes installed in the on-chip hardware table.

**prefix *prefix***—(Optional) IPv4 or IPv6 prefix for which to show table entries.

**summary**—(Optional) Display summary of Packet Forwarding Engine information.

**table <table-name>**—(Optional) Display table information.

**Required Privilege Level**

admin

**Related Documentation**

- *Routing Matrix with TXP-T1600 Configuration*
- *Routing Matrix with TXP-T1600-3D Configuration*
- *Routing Matrix with TXP-T4000-3D Configuration*
- *Routing Matrix with a TXP-Mixed-LCC-3D Configuration*

**List of Sample Output**

[show pfe route ip on page 606](#)  
[show pfe route iso on page 606](#)  
[show pfe route lcc summary \(TX Matrix Router\) on page 606](#)  
[show pfe route lcc summary \(TX Matrix Plus Router\) on page 608](#)  
[show pfe route summary \(MX Series Router\) on page 609](#)  
[show pfe route summary hw \(QFX Series, EX4600 Switches, OCX Series\) on page 609](#)  
[show pfe route ip hw host \(QFX Series\) on page 610](#)

**Output Fields**

[Table 91 on page 604](#) lists the output fields for the **show pfe route** command. Output fields are listed in the approximate order in which they appear.

**Table 91: show pfe route Output Fields**

Field Name	Field Description
Destination	Destination address for the entry.
NH IP Addr	Next-hop IP address for the entry.
Type	Next-hop type for the entry
NH ID	Next-hop ID for the entry

Table 91: show pfe route Output Fields (*continued*)

Field Name	Field Description
<b>Encap</b>	Encapsulation type for the next-hop entry.
<b>Interface</b>	Interface to which the next-hop entry is assigned.

Table 92 on page 605 lists the output fields for the QFX Series **show pfe route** hardware table (**hw**) commands. Output fields are listed in the approximate order in which they appear.

Table 92: QFX Series, EX4600 switches, and OCX Series show pfe route Hardware Table Output Fields

Field Name	Field Description
<b>Max</b>	Maximum routing entries per route type.
<b>Used</b>	Number of routing entries consumed per route type.
<b>Free</b>	Number of unused routing entries per route type.
<b>% Free</b>	Percentage of unused routing entries per route type.
<b>Rtt</b>	Internal routing engine index number of the route table.
<b>VRF</b>	Internal hardware index number for the corresponding route table.
<b>Destination</b>	Destination address for the entry.
<b>Type</b>	( <b>show pfe route summary hw</b> )—Route type for the entry: IPv4 or IPv6 route, and host, LPM, or multicast route.  ( <b>show pfe route (ip   inet6) hw</b> )—Next-hop type for the entry.
<b>NH ID</b>	Next-hop ID for the entry
<b>Interface</b>	Interface to which the next-hop entry is assigned.
<b>HW NH-ID</b>	Internal hardware index number of the next-hop.
<b>Src-MAC-Address</b>	Source MAC address.
<b>Port</b>	Port number.
<b>Dst-MAC-Address</b>	Destination MAC address.
<b>VLAN</b>	ID of the multicast group VLAN.
<b>GROUP</b>	Internal hardware index number of the multicast group next-hop.

Table 92: QFX Series, EX4600 switches, and OCX Series show pfe route Hardware Table Output Fields (*continued*)

Field Name	Field Description
CLASS	Internal class number of the multicast group.

## Sample Output

### show pfe route ip

```
user@host> show pfe route ip
```

```
IPv4 Route Table 0, default.0, 0x0:
Destination                NH IP Addr      Type      NH ID Interface
-----
default                    127.0.0.1      Discard    8
127.0.0.1                  127.0.0.1      Local      256
172.16/12                  192.168.71.254 Unicast    68 fxp0.0
192.168.0/18               192.168.71.254 Unicast    68 fxp0.0
192.168.40/22              192.168.71.254 Unicast    68 fxp0.0
192.168.64/18              192.168.71.254 Unicast    68 fxp0.0
192.168.64/21              192.168.71.254 Resolve    67 fxp0.0
192.168.71.249             192.168.71.249 Local      66
192.168.220.0/30           192.168.220.0 Resolve    303 fe-0/0/0.0
192.168.220.0              192.168.220.0 Receive    301 fe-0/0/0.0
224.0.0.1                  Mcast         5
255.255.255.255           Bcast         6
```

```
...
```

### show pfe route iso

```
user@host# show pfe route iso
```

```
CLNS Route Table 0, CLNP.0, 0x0:
Destination                Type      NH ID Interface
-----
default                    Reject     60
47.0005.80ff.f800.0000.0108.0001.0102.5508.2159/152 Local     514
49.0001.00a0.c96b.c491/72 Local     536
```

### show pfe route lcc summary (TX Matrix Router)

```
user@host> show pfe route lcc 2 summary
```

```
Slot 0
```

```
IPv4 Route Tables:
Index      Routes      Size(b)
-----
Default    43           3081
1          4            281
```

```
MPLS Route Tables:
Index      Routes      Size(b)
-----
Default    1           68
```



IPv6 Route Tables:		
Index	Routes	Size(b)
Default	9	717
1	5	389

Slot 1

IPv4 Route Tables:		
Index	Routes	Size(b)
Default	43	3081
1	4	281

MPLS Route Tables:		
Index	Routes	Size(b)
Default	1	68

IPv6 Route Tables:		
Index	Routes	Size(b)
Default	9	717
1	5	389

Slot 16

IPv4 Route Tables:		
Index	Routes	Size(b)
Default	41	2938
1	4	281

MPLS Route Tables:		
Index	Routes	Size(b)
Default	1	68

IPv6 Route Tables:		
Index	Routes	Size(b)
Default	9	717
1	5	389

Slot 17

IPv4 Route Tables:		
Index	Routes	Size(b)
Default	41	2938
1	4	281

MPLS Route Tables:		
Index	Routes	Size(b)
Default	1	68

IPv6 Route Tables:

Index	Routes	Size(b)
-----	-----	-----
Default	9	717
1	5	389

### show pfe route lcc summary (TX Matrix Plus Router)

user@host> show pfe route lcc 2 summary

Slot 0

IPv4 Route Tables:		
Index	Routes	Size(b)
-----	-----	-----
Default	25	2266
1	9	815
2	6	545
3	5	453
4	15	1371
5	5	453
6	13	1187

MPLS Route Tables:		
Index	Routes	Size(b)
-----	-----	-----
Default	1	88
4	5	452

IPv6 Route Tables:		
Index	Routes	Size(b)
-----	-----	-----
Default	7	697
1	13	1305
3	4	385
4	4	385
5	4	385
6	18	1833

Slot 6

IPv4 Route Tables:		
Index	Routes	Size(b)
-----	-----	-----
Default	25	2266
1	9	815
2	6	545
3	5	453
4	15	1371
5	5	453
6	13	1187

MPLS Route Tables:		
Index	Routes	Size(b)
-----	-----	-----
Default	1	88
4	5	452

IPv6 Route Tables:		
Index	Routes	Size(b)

```

-----
Default      7      697
1            13     1305
3            4      385
4            4      385
5            4      385
6           18     1833
...

```

### show pfe route summary (MX Series Router)

```
user@host> show pfe route summary
```

```
Slot 0
```

```

DHCP-Snooping Route Tables:
Index      Routes      Size(b)
-----
Default      1      144

```

```

IPv4 Route Tables:
Index      Routes      Size(b)
-----
Default      25     2266
1            9       815
2            6       545
3            5       453
4           15     1371
5            5       453
6           13     1187

```

```

MPLS Route Tables:
Index      Routes      Size(b)
-----
Default      1       88
4            5      452

```

```

IPv6 Route Tables:
Index      Routes      Size(b)
-----
Default      7       697
1           13     1305
3            4      385
4            4      385
5            4      385
6           18     1833

```

```
...
```

### show pfe route summary hw (QFX Series, EX4600 Switches, OCX Series)

```
user@switch> show pfe route summary hw
```

```
Slot 0
```

```
Unit: 0
```

```
Profile active: l2-profile-three
```

```

Type      Max      Used      Free      % free
-----
IPv4 Host    8192    103     8073     98.55
IPv4 LPM   16384      9    16369     99.91
IPv4 Mcast  4096      2     4037     98.56

```

IPv6 Host	4096	6	4037	98.56
IPv6 LPM(< 64)	8192	3	8185	99.91
IPv6 LPM(> 64)	256	1	255	99.61
IPv6 Mcast	2048	0	2019	98.58

### show pfe route ip hw host (QFX Series)

```
user@switch> show pfe route ip host hw
```

```
Slot 0
```

```
Unit: 0
```

```
IPv4 Host entries present: 103
```

Rtt	VRF	Destination	Type	NH-ID	Interface
		HW NH-ID Src-MAC-Address Port Dst-MAC-Address			
4	3	255.255.255.255	Bcast	1695	.local. .4
ifl 550	100003	00:00:00:01:02:03 127	00:00:00:01:02:03		
0	1	200.1.1.42	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.56	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.61	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	11.1.1.2	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.73	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.76	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.18	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.5	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.23	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	101.1.1.255	Bcast	1664	ae0 .0
ifl 544	100003	00:00:00:01:02:03 127	00:00:00:01:02:03		
0	1	200.1.1.40	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.58	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
. . .					

## show pfe terse

<b>List of Syntax</b>	<a href="#">Syntax on page 611</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Router) on page 611</a> <a href="#">Syntax (MX Series Router) on page 611</a>
<b>Syntax</b>	show pfe terse
<b>Syntax (TX Matrix and TX Matrix Plus Router)</b>	show pfe terse <lcc <i>number</i>   scc> <sfc <i>number</i> >
<b>Syntax (MX Series Router)</b>	show pfe terse <all-members> <local> <member <i>member-id</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display Packet Forwarding Engine status information.
<b>Options</b>	<p><b>none</b>—Display brief information about the Packet Forwarding Engine.</p> <p><b>all-members</b>—(MX Series routers only) (Optional) Display Packet Forwarding Engine status information for all members in the Virtual Chassis configuration.</p> <p><b>lcc <i>number</i></b>—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display Packet Forwarding Engine information for a specific T640 router (or line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display Packet Forwarding Engine information for a specific T1600 router (or line-card chassis) that is connected to a TX Matrix Plus router. Replace <i>number</i> with a value from 0 through 3.</p> <p><b>local</b>—(MX Series routers only) (Optional) Display Packet Forwarding Engine status information for the local Virtual Chassis member.</p> <p><b>member <i>member-id</i></b>—(MX Series routers only) (Optional) Display Packet Forwarding Engine status information for the specified member of the Virtual Chassis configuration. Replace <i>member-id</i> with a value of 0 or 1.</p> <p><b>scc</b>—(TX Matrix routers only) (Optional) Display Packet Forwarding Engine information for the TX Matrix router (or switch-card chassis).</p> <p><b>sfc</b>—(TX Matrix Plus routers only) (Optional) Display Packet Forwarding Engine information for the TX Matrix Plus router (or switch-fabric chassis).</p>
<b>Required Privilege Level</b>	admin

- List of Sample Output**
- [show pfe terse \(TX Matrix Router\) on page 612](#)
  - [show pfe terse \(TX Matrix Plus Router\) on page 612](#)
  - [show pfe terse sfc \(TX Matrix Plus Router\) on page 612](#)

## Sample Output

### show pfe terse (TX Matrix Router)

```
user@host> show pfe terse
Slot Type Slot   State  Flags Uptime
0  SFM  Present Online 0x0bf 01:25:42
2  SFM  Present Online 0x0bf 01:25:40
0  FPC  Present Online 0x102 01:25:57
1  FPC  Present Online 0x102 01:25:55
2  FPC  Present Online 0x102 01:25:53
```

### show pfe terse (TX Matrix Plus Router)

```
user@host> show pfe terse
sfc0-re0:
-----
Slot Type Slot   State  Uptime
0  LCC  Present Online 2d 05:26

lcc0-re0:
-----
Slot Type Slot   State  Uptime
0  GFPC Present Online 2d 05:25
1  GFPC Present Online 2d 05:25
```

### show pfe terse sfc (TX Matrix Plus Router)

```
user@host> show pfe terse sfc 0
sfc0-re0:
-----
Slot Type Slot   State  Uptime
0  LCC  Present Online 2d 05:25
```

## show pfe version

---

<b>Syntax</b>	show pfe version <brief   detail>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display Packet Forwarding Engine version information.
<b>Options</b>	brief   detail—Display the specified level of output.
<b>Required Privilege Level</b>	admin
<b>List of Sample Output</b>	<a href="#">show pfe version brief on page 613</a> <a href="#">show pfe version detail on page 613</a>

### Sample Output

#### show pfe version brief

```
user@host> show pfe version brief
PFED release 11.1D0 built by builder on 2010-11-11 05:16:11 UTC
```

#### show pfe version detail

```
user@host> show pfe version detail
PFED release 11.1D0 built by builder on 2010-11-11 05:16:11 UTC

device01.example.com:/volume/build/junos/rpd_feb11/11.1/development/20101111.0/obj-i386/
junos/usr/sbin/pfed
```

## show interfaces voq

**Syntax** `show interfaces voq interface-name  
<forwarding-class forwarding-class-name>  
<non-zero>  
<source-fpc source-fpc-number>`

**Release Information** Command introduced in Junos OS Release 14.1 for the PTX Series Routers  
Command introduced in Junos OS Release 15.1X53-D20 for QFX10000 switches.

**Description** Display the random early detection (RED) drop statistics from all ingress Packet Forwarding Engines associated with the specified physical egress interface. In the VOQ architecture, egress output queues (shallow buffers) buffer data in virtual queues on ingress Packet Forwarding Engines. In cases of congestion, you can use this command to identify which ingress Packet Forwarding Engine is the source of RED-dropped packets contributing to congestion.



**NOTE:** On the PTX Series routers and QFX10000 switches, these statistics include tail-dropped packets.

**Options** `interface interface-name`—Display the ingress VOQ RED drop statistics for the specified egress interface.

`forwarding-class forwarding-class-name`—Display VOQ RED drop statistics for a specified forwarding class.

`non-zero`—Display only non-zero VOQ RED drop statistics counters.

`source-fpc source-fpc-number`—Display VOQ RED drop statistics for the specified source FPC.

**Additional Information**

- On PTX Series routers, you can display VOQ statistics for only the WAN physical interface.
- VOQ statistics for aggregated physical interfaces are not supported. Statistics for an aggregated interface are the summation of the queue statistics of the child links of that aggregated interface. You can use the **show interfaces queue** command to identify the child link which is experiencing congestion and then view the VOQ statistics on the respective child link using the **show interfaces voq** command.

For information on virtual output queuing on PTX routers, see *Understanding Virtual Output Queues on PTX Series Packet Transport Routers*. For information on virtual output queueing on QFX10000 switches, see [“Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches” on page 120](#).

**Required Privilege Level** view



- Related Documentation**
- [Understanding Virtual Output Queues on PTX Series Packet Transport Routers](#)
  - [Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches on page 120](#)

**List of Sample Output**

[show interfaces voq \(For a Specific Physical Interface\) \(PTX Series Routers\) on page 616](#)  
[show interfaces voq \(For a Specific Physical Interface\) \(QFX10000 Switches\) on page 620](#)  
[show interfaces voq et-7/0/0 \(For a Specific Forwarding Class\) on page 622](#)  
[show interfaces voq et-5/0/12 \(For a Specific Source FPC\) on page 623](#)  
[show interfaces voq et-5/0/12 \(For a Specific Forwarding Class and Source FPC\) on page 625](#)  
[show interfaces voq et-7/0/0 \(Non-Zero\) on page 625](#)  
[show interfaces voq et-7/0/0 \(For a Specific Forwarding Class and Non-Zero\) on page 626](#)

**Output Fields** [Table 93 on page 615](#) lists the output fields for the show interfaces queue command. Output fields are listed in the approximate order in which they appear.

**Table 93: show interfaces voq Output Fields**

Field Name	Field Description
Physical interface	Name of the physical interface.
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .
Interface index	Physical interface's index number, which reflects its initialization sequence.
SNMP ifIndex	SNMP index number for the interface.
Queue	Egress queue number.
Forwarding classes	Forwarding class name.
FPC number	Number of the Flexible PIC Concentrator (FPC) located on ingress.
PFE	Number of the Packet Forwarding Engine providing virtual output queues on the ingress.
RED-dropped packets	Number of packets per second (pps) dropped because of random early detection (RED).  <b>NOTE:</b> On the PTX Series routers, these statistics include tail-dropped packets.
RED-dropped bytes	Number of bytes per second dropped because of RED. The byte counts vary by interface hardware.  <b>NOTE:</b> On the PTX Series routers, these statistics include tail-dropped packets.

## Sample Output

### show interfaces voq (For a Specific Physical Interface) (PTX Series Routers)

The following example shows ingress RED-dropped statistics for the egress Ethernet interface configured on port 0 of Physical Interface Card (PIC) 0, located on the FPC in slot 7.

The sample output below shows that the cause of the congestion is ingress Packet Forwarding Engine PFE 0, which resides on FPC number 4, as denoted by the count of RED-dropped packets and RED-dropped bytes for egress queue 0, forwarding classes best-effort and egress queue 3, forwarding class network control.

```

user@host> show interfaces voq et-7/0/0
Physical interface: et-7/0/0, Enabled, Physical link is Up
  Interface index: 155, SNMP ifIndex: 699

Queue: 0, Forwarding classes: best-effort

FPC number: 1
  PFE: 0
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 3
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

FPC number: 4
  PFE: 0
    RED-dropped packets :           19969426           2323178 pps
    RED-dropped bytes   :           2196636860           2044397464 bps
  PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 3
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

FPC number: 6
  PFE: 0
    RED-dropped packets :           19969424           2321205 pps
    RED-dropped bytes   :           2196636640           2042660808 bps
  PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 3
    RED-dropped packets :                0                0 pps

```

```

    RED-dropped bytes      :          0          0 bps
PFE: 4
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 5
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 6
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 7
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

FPC number: 7
PFE: 0
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 2
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 3
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

Queue: 1, Forwarding classes: expedited-forwarding

FPC number: 1
PFE: 0
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 2
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 3
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

FPC number: 4
PFE: 0
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 2
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 3
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

FPC number: 6
PFE: 0
    RED-dropped packets :          0          0 pps

```

```

    RED-dropped bytes      :          0          0 bps
PFE: 1
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 2
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 3
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 4
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 5
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 6
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 7
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps

FPC number: 7
PFE: 0
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 1
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 2
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 3
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps

Queue: 2, Forwarding classes: assured-forwarding

FPC number: 1
PFE: 0
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 1
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 2
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 3
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps

FPC number: 4
PFE: 0
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 1
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 2

```

```

        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 3
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps

FPC number: 6
    PFE: 0
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 1
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 2
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 3
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 4
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 5
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 6
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 7
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps

FPC number: 7
    PFE: 0
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 1
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 2
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 3
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps

Queue: 3, Forwarding classes: network-control

FPC number: 1
    PFE: 0
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 1
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 2
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 3
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps

```

```

FPC number: 4
PFE: 0
  RED-dropped packets :          16338670          1900314 pps
  RED-dropped bytes   :          1797253700        1672276976 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

FPC number: 6
PFE: 0
  RED-dropped packets :          16338698          1899163 pps
  RED-dropped bytes   :          1797256780        1671263512 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 4
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 5
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 6
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 7
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

FPC number: 7
PFE: 0
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

```

#### show interfaces voq (For a Specific Physical Interface) (QFX10000 Switches)

The sample output below shows congestion on ingress PFE 1 on FPC number 0, and on ingress PFE 2 on FPC number 1, as denoted by the count of RED-dropped packets and RED-dropped bytes for best-effort egress queue 0.

```
user@host> show interfaces voq et-1/0/0
```

```
Physical interface: et-1/0/0, Enabled, Physical link is Up
```

```
Interface index: 659, SNMP ifIndex: 539
```

```
Queue: 0, Forwarding classes: best-effort
```

```
FPC number: 0
```

```
PFE: 0
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 1
```

```
RED-dropped packets : 411063248 16891870 pps
```

```
RED-dropped bytes : 52616095744 17297275600 bps
```

```
PFE: 2
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
FPC number: 1
```

```
PFE: 0
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 1
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 2
```

```
RED-dropped packets : 411063012 16891870 pps
```

```
RED-dropped bytes : 52616065536 17297275376 bps
```

```
Queue: 3, Forwarding classes: fcoe
```

```
FPC number: 0
```

```
PFE: 0
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 1
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 2
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
FPC number: 1
```

```
PFE: 0
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 1
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 2
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
Queue: 4, Forwarding classes: no-loss
```

```
FPC number: 0
```

```
PFE: 0
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 1
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```

PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

FPC number: 1
PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

Queue: 7, Forwarding classes: network-control

FPC number: 0
PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

FPC number: 1
PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

```

#### show interfaces voq et-7/0/0 (For a Specific Forwarding Class)

```

user@host> show interfaces voq et-7/0/0 forwarding-class best-effort
Physical interface: et-7/0/0, Enabled, Physical link is Up
Interface index: 155, SNMP ifIndex: 699

```

Queue: 0, Forwarding classes: best-effort

```

FPC number: 1
PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 3
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

```



```

FPC number: 4
PFE: 0
  RED-dropped packets :          66604786          2321519 pps
  RED-dropped bytes   :          7326526460        2042936776 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

FPC number: 6
PFE: 0
  RED-dropped packets :          66604794          371200 pps
  RED-dropped bytes   :          7326527340        326656000 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 4
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 5
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 6
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 7
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

FPC number: 7
PFE: 0
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

```

#### show interfaces voq et-5/0/12 (For a Specific Source FPC)

```

user@host> show interfaces voq et-5/0/12 source-fpc 0
Physical interface: et-5/0/12, Enabled, Physical link is Up
  Interface index: 166, SNMP ifIndex: 1104

Queue: 0, Forwarding classes: best-effort

```

FPC number: 0

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 3

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

Queue: 1, Forwarding classes: expedited-forwarding

FPC number: 0

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 3

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

Queue: 2, Forwarding classes: assured-forwarding

FPC number: 0

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 3

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

Queue: 3, Forwarding classes: network-control

FPC number: 0

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 3

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

#### show interfaces voq et-5/0/12 (For a Specific Forwarding Class and Source FPC)

```

user@host> show interfaces voq et-5/0/12 forwarding-class best-effort source-fpc 5
Physical interface: et-5/0/12, Enabled, Physical link is Up
Interface index: 166, SNMP ifIndex: 1104

```

Queue: 0, Forwarding classes: best-effort

FPC number: 5

PFE: 0

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 1

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 2

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 3

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 4

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 5

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 6

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 7

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

#### show interfaces voq et-7/0/0 (Non-Zero)

```

user@host> show interfaces voq et-7/0/0 non-zero

```

```

Physical interface: et-7/0/0, Enabled, Physical link is Up
Interface index: 155, SNMP ifIndex: 699

```

Queue: 0, Forwarding classes: best-effort

FPC number: 4

PFE: 0

```

RED-dropped packets : 95862238 2301586 pps
RED-dropped bytes : 10544846180 2025396264 bps

```

FPC number: 6

PFE: 0

```

RED-dropped packets : 95866639 2322569 pps
RED-dropped bytes : 10545330290 2043860728 bps

```

Queue: 3, Forwarding classes: network-control

FPC number: 4

PFE: 0

```
RED-dropped packets :          78433066          1899727 pps
RED-dropped bytes   :          8627637260        1671760384 bps

FPC number: 6
PFE: 0
RED-dropped packets :          78436704          1900628 pps
RED-dropped bytes   :          8628037440        1672553432 bps
```

#### **show interfaces voq et-7/0/0 (For a Specific Forwarding Class and Non-Zero)**

```
user@host show interfaces voq et-7/0/0 forwarding-class best-effort non-zero
```

```
Physical interface: et-7/0/0, Enabled, Physical link is Up
```

```
Interface index: 155, SNMP ifIndex: 699
```

```
Queue: 0, Forwarding classes: best-effort
```

```
FPC number: 4
PFE: 0
RED-dropped packets :          119540012          2322319 pps
RED-dropped bytes   :          13149401320        2043640784 bps

FPC number: 6
PFE: 0
RED-dropped packets :          119540049          2322988 pps
RED-dropped bytes   :          13149405390        2044229744 bps
```

## CHAPTER 11

# Operational Commands (Classifiers and Rewrite Rules)

- [Monitoring CoS Classifiers on page 627](#)
- [Monitoring CoS Forwarding Classes on page 628](#)
- [Monitoring CoS Rewrite Rules on page 631](#)
- [Monitoring CoS Code-Point Value Aliases on page 632](#)
- [show class-of-service classifier](#)
- [show class-of-service code-point-aliases](#)
- [show class-of-service forwarding-class](#)
- [show class-of-service forwarding-class-set](#)
- [show class-of-service forwarding-table](#)
- [show class-of-service forwarding-table classifier](#)
- [show class-of-service forwarding-table classifier mapping](#)
- [show class-of-service forwarding-table rewrite-rule](#)
- [show class-of-service forwarding-table rewrite-rule mapping](#)
- [show class-of-service interface](#)
- [show class-of-service multi-destination](#)
- [show class-of-service rewrite-rule](#)

### Monitoring CoS Classifiers

---

**Purpose** Display the mapping of incoming CoS values to forwarding class and loss priority for each classifier.

**Action** To monitor CoS classifiers in the CLI, enter the CLI command:

```
user@switch> show class-of-service classifier
```

To monitor a particular classifier in the CLI, enter the CLI command:

```
user@switch> show class-of-service classifier name classifier-name
```

To monitor a particular type of classifier in the CLI, enter the CLI command:

```
user@switch> show class-of-service classifier type classifier-type
```

**Meaning** Table 94 on page 628 summarizes key output fields for CoS classifiers.

**Table 94: Summary of Key CoS Classifier Output Fields**

Field	Values
Classifier	Name of a classifier.
Code point type	<p>Type of classifier:</p> <ul style="list-style-type: none"> <li>• <b>dscp</b>—All classifiers of the DSCP type.</li> <li>• <b>ieee-802.1</b>—All classifiers of the IEEE 802.1 type.</li> <li>• <b>ieee-mcast</b>—All classifiers of the IEEE 802.1 multicast type.</li> </ul> <p><b>NOTE:</b> QFX10000 switches do not use different classifiers for unicast and multdestination (multicast, broadcast, destination lookup fail) traffic, so multicast-specific classifiers are not supported.</p> <ul style="list-style-type: none"> <li>• <b>exp</b>—All classifiers of the MPLS exp type.</li> </ul> <p><b>NOTE:</b> OCX Series switches do not support MPLS.</p>
Index	Internal index of the classifier.
Code point	DSCP or IEEE 802.1 code point value of the incoming packets, in bits. These values are used for classification.
Forwarding Class	Name of the forwarding class that the classifier assigns to an incoming packet. This class affects the forwarding and scheduling policies that are applied to the packet as it transits the switch.
Loss Priority	Loss priority value that the classifier assigns to the incoming packet based on its code point value.

## Monitoring CoS Forwarding Classes

**Purpose** Use the monitoring functionality to view the current assignment of CoS forwarding classes to queue numbers on the system.

**Action** To monitor CoS forwarding classes in the CLI, enter the following CLI command:

```
user@switch> show class-of-service forwarding-class
```

**Meaning** Some switches use different forwarding classes, output queues, and classifiers for unicast and multdestination (multicast, broadcast, destination lookup fail) traffic. These switches support 12 forwarding classes and output queues, eight for unicast traffic and four for multdestination traffic.

Some switches use the same forwarding classes, output queues, and classifiers for unicast and multdestination traffic. These switches support eight forwarding classes and eight output queues.

[Table 95 on page 629](#) summarizes key output fields on switches that use different forwarding classes and output queues for unicast and multdestination traffic.

**Table 95: Summary of Key CoS Forwarding Class Output Fields on Switches that Separate Unicast and Multidestination Traffic**

Field	Values
Forwarding Class	<p>Names of forwarding classes assigned to queue numbers. By default, the following unicast forwarding classes are assigned to queues 0, 3, 4, and 7, respectively:</p> <ul style="list-style-type: none"> <li>• <b>best-effort</b>—Provides no special CoS handling of packets. Loss priority is typically not carried in a CoS value.</li> <li>• <b>fcoe</b>—Provides guaranteed delivery for Fibre Channel over Ethernet (FCoE) traffic.</li> <li>• <b>no-loss</b>—Provides guaranteed delivery for TCP lossless traffic</li> <li>• <b>network-control</b>—Packets can be delayed but not dropped.</li> </ul> <p>By default, the following multdestination forwarding class is assigned to queue 8:</p> <ul style="list-style-type: none"> <li>• <b>mcast</b>—Provides no special CoS handling of packets.</li> </ul>
Queue	<p>Queue number corresponding to (mapped to) the forwarding class name.</p> <p>By default, four queues (0, 3, 4, and 7) are assigned to unicast forwarding classes and one queue (8) is assigned to a multdestination forwarding class:</p> <ul style="list-style-type: none"> <li>• Queue 0—<b>best-effort</b></li> <li>• Queue 3—<b>fcoe</b></li> <li>• Queue 4—<b>no-loss</b></li> <li>• Queue 7—<b>network-control</b></li> <li>• Queue 8—<b>mcast</b></li> </ul>

**Table 95: Summary of Key CoS Forwarding Class Output Fields on Switches that Separate Unicast and Multidestination Traffic (*continued*)**

Field	Values
No-Loss	<p>Packet drop attribute associated with each forwarding class:</p> <ul style="list-style-type: none"> <li>Disabled—The forwarding class is configured for lossy transport (packets might drop during periods of congestion)</li> <li>Enabled—The forwarding class is configured for lossless transport</li> </ul> <p><b>NOTE:</b> To achieve lossless transport, you must ensure that priority-based flow control (PFC) and DCBX are properly configured on the lossless priority (IEEE 802.1p code point), and that sufficient port bandwidth is reserved for the lossless traffic flows.</p> <p>OCX Series switches do not support lossless transport.</p>



**NOTE:** OCX Series switches do not support the default lossless forwarding classes `fcoe` and `no-loss`, and do not support the no-loss packet drop attribute used to configure lossless forwarding classes. On OCX Series switches, do not map traffic to the default `fcoe` and `no-loss` forwarding classes (both of these default forwarding classes carry the no-loss packet drop attribute), and do not configure the no-loss packet drop attribute on forwarding classes.

Table 96 on page 630 summarizes key output fields on switches that use the same forwarding classes and output queues for unicast and multidestination traffic.

**Table 96: Summary of Key CoS Forwarding Class Output Fields on Switches That Do Not Separate Unicast and Multidestination Traffic**

Field	Values
Forwarding Class	<p>Names of forwarding classes assigned to queue numbers. By default, the following forwarding classes are assigned to queues 0, 3, 4, and 7, respectively:</p> <ul style="list-style-type: none"> <li><b>best-effort</b>—Provides no special CoS handling of packets. Loss priority is typically not carried in a CoS value.</li> <li><b>fcoe</b>—Provides guaranteed delivery for Fibre Channel over Ethernet (FCoE) traffic.</li> <li><b>no-loss</b>—Provides guaranteed delivery for TCP lossless traffic</li> <li><b>network-control</b>—Packets can be delayed but not dropped.</li> </ul>



**Table 96: Summary of Key CoS Forwarding Class Output Fields on Switches That Do Not Separate Unicast and Multidestination Traffic (*continued*)**

Field	Values
Queue	<p>Queue number corresponding to (mapped to) the forwarding class name.</p> <p>By default, four queues (0, 3, 4, and 7) are assigned to forwarding classes:</p> <ul style="list-style-type: none"> <li>• Queue 0—<b>best-effort</b></li> <li>• Queue 3—<b>fcoe</b></li> <li>• Queue 4—<b>no-loss</b></li> <li>• Queue 7—<b>network-control</b></li> </ul>
No-Loss	<p>Packet drop attribute associated with each forwarding class:</p> <ul style="list-style-type: none"> <li>• Disabled—The forwarding class is configured for lossy transport (packets might drop during periods of congestion).</li> <li>• Enabled—The forwarding class is configured for lossless transport.</li> </ul> <p><b>NOTE:</b> To achieve lossless transport, you must ensure that priority-based flow control (PFC) and DCBX are properly configured on the lossless priority (IEEE 802.1p code point), and that sufficient port bandwidth is reserved for the lossless traffic flows.</p> <p>OCX Series switches do not support lossless transport.</p>

## Monitoring CoS Rewrite Rules

- Purpose** Use the monitoring functionality to display information about CoS value rewrite rules, which are based on the forwarding class and loss priority.
- Action** To monitor CoS rewrite rules in the CLI, enter the CLI command:
- ```
user@switch> show class-of-service rewrite-rule
```
- To monitor a particular rewrite rule in the CLI, enter the CLI command:
- ```
user@switch> show class-of-service rewrite-rule name rewrite-rule-name
```
- To monitor a particular type of rewrite rule (for example, DSCP, DSCP IPv6, IEEE-802.1, or MPLS EXP) in the CLI, enter the CLI command:
- ```
user@switch> show class-of-service rewrite-rule type rewrite-rule-type
```

**Meaning** [Table 97 on page 632](#) summarizes key output fields for CoS rewrite rules.

**Table 97: Summary of Key CoS Rewrite Rule Output Fields**

| Field            | Values                                                                                                                                                                                                                                                                                                                      |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Rewrite rule     | Name of the rewrite rule.                                                                                                                                                                                                                                                                                                   |
| Code point type  | Rewrite rule type: <ul style="list-style-type: none"> <li>• <b>dscp</b>—For IPv4 DiffServ traffic.</li> <li>• <b>dscp-ipv6</b>—For IPv6 Diffserv traffic.</li> <li>• <b>ieee-802.1</b>—For Layer 2 traffic.</li> <li>• <b>exp</b>—For MPLS traffic.</li> </ul> <p><b>NOTE:</b> OCX Series switches do not support MPLS.</p> |
| Index            | Internal index for the rewrite rule.                                                                                                                                                                                                                                                                                        |
| Forwarding class | Name of the forwarding class that is used to determine CoS values for rewriting in combination with loss priority.<br><br>Rewrite rules are applied to CoS values in outgoing packets based on forwarding class and loss priority setting.                                                                                  |
| Loss priority    | Level of loss priority that is used to determine CoS values for rewriting in combination with forwarding class.                                                                                                                                                                                                             |
| Code point       | Rewrite code point value.                                                                                                                                                                                                                                                                                                   |

**Related Documentation** • [Defining CoS Rewrite Rules on page 100](#)

## Monitoring CoS Code-Point Value Aliases

**Purpose** Use the monitoring functionality to display information about the CoS code-point value aliases that the system is currently using to represent DSCP and IEEE 802.1p code point bits.

**Action** To monitor CoS value aliases in the CLI, enter the CLI command:

```
user@switch> show class-of-service code-point-aliases
```

To monitor a specific type of code-point alias (DSCP, DSCP IPv6, IEEE 802.1, or MPLS EXP) in the CLI, enter the CLI command:

```
user@switch> show class-of-service code-point-aliases ieee-802.1
```

**Meaning** [Table 98 on page 633](#) summarizes key output fields for CoS value aliases.

Table 98: Summary of Key CoS Value Alias Output Fields

| Field           | Values                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Code point type | Type of the CoS value: <ul style="list-style-type: none"><li>• <b>dscp</b>—Examines Layer 3 packet headers for IP packet classification.</li><li>• <b>dscp-ipv6</b>—Examines Layer 3 packet headers for IPv6 packet classification.</li><li>• <b>ieee-802.1</b>—Examines Layer 2 packet headers for packet classification.</li><li>• <b>exp</b>—Examines MPLS packet headers for packet classification.</li></ul> <p><b>NOTE:</b> OCX Series switches do not support MPLS.</p> |
| Alias           | Name given to a set of bits—for example, <b>af11</b> is a name for bits <b>001010</b> .                                                                                                                                                                                                                                                                                                                                                                                        |
| Bit pattern     | Set of bits associated with the alias.                                                                                                                                                                                                                                                                                                                                                                                                                                         |

**Related Documentation** • [Defining CoS Code-Point Aliases on page 83](#)

## show class-of-service classifier

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show class-of-service classifier &lt;name <i>name</i>&gt; &lt;type dscp   type dscp-ipv6   type exp   type ieee-802.1   type inet-precedence&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | For each class-of-service (CoS) classifier, display the mapping of code point value to forwarding class and loss priority.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <p><b>none</b>—Display all classifiers.</p> <p><b>name <i>name</i></b>—(Optional) Display named classifier.</p> <p><b>type dscp</b>—(Optional) Display all classifiers of the Differentiated Services code point (DSCP) type.</p> <p><b>type dscp-ipv6</b>—(Optional) Display all classifiers of the DSCP for IPv6 type.</p> <p><b>type exp</b>—(Optional) Display all classifiers of the MPLS experimental (EXP) type.</p> <p><b>type ieee-802.1</b>—(Optional) Display all classifiers of the ieee-802.1 type.</p> <p><b>type inet-precedence</b>—(Optional) Display all classifiers of the inet-precedence type.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>List of Sample Output</b>    | <p><a href="#">show class-of-service classifier type ieee-802.1 on page 635</a></p> <p><a href="#">show class-of-service classifier type ieee-802.1 (QFX Series) on page 635</a></p>                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Output Fields</b>            | Table 99 on page 634 describes the output fields for the <b>show class-of-service classifier</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                       |

**Table 99: show class-of-service classifier Output Fields**

| Field Name      | Field Description                                                                                                                                                       |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Classifier      | Name of the classifier.                                                                                                                                                 |
| Code point type | Type of the classifier: <b>exp</b> (not on EX Series switch), <b>dscp</b> , <b>dscp-ipv6</b> (not on EX Series switch), <b>ieee-802.1</b> , or <b>inet-precedence</b> . |
| Index           | Internal index of the classifier.                                                                                                                                       |
| Code point      | Code point value used for classification                                                                                                                                |

Table 99: show class-of-service classifier Output Fields (*continued*)

| Field Name              | Field Description                                                                                                                                                                                                 |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Forwarding class</b> | Classification of a packet affecting the forwarding, scheduling, and marking policies applied as the packet transits the router.                                                                                  |
| <b>Loss priority</b>    | Loss priority value used for classification. For most platforms, the value is <b>high</b> or <b>low</b> . For some platforms, the value is <b>high</b> , <b>medium-high</b> , <b>medium-low</b> , or <b>low</b> . |

## Sample Output

### show class-of-service classifier type ieee-802.1

```

user@host> show class-of-service classifier type ieee-802.1
Classifier: ieee802.1-default, Code point type: ieee-802.1, Index: 3
Code Point      Forwarding Class      Loss priority
000             best-effort           low
001             best-effort           high
010             expedited-forwarding  low
011             expedited-forwarding  high
100             assured-forwarding    low
101             assured-forwarding    medium-high
110             network-control       low
111             network-control       high

Classifier: users-ieee802.1, Code point type: ieee-802.1
Code point      Forwarding class      Loss priority
100             expedited-forwarding  low

```

### show class-of-service classifier type ieee-802.1 (QFX Series)

```

user@switch> show class-of-service classifier type ieee-802.1
Classifier: ieee8021p-default, Code point type: ieee-802.1, Index: 11
Code point      Forwarding class      Loss priority
000             best-effort           low
001             best-effort           low
010             best-effort           low
011             fcoe                  low
100             no-loss               low
101             best-effort           low
110             network-control       low
111             network-control       low

Classifier: ieee8021p-untrust, Code point type: ieee-802.1, Index: 16
Code point      Forwarding class      Loss priority
000             best-effort           low
001             best-effort           low
010             best-effort           low
011             best-effort           low
100             best-effort           low
101             best-effort           low
110             best-effort           low
111             best-effort           low

Classifier: ieee-mcast, Code point type: ieee-802.1, Index: 46
Code point      Forwarding class      Loss priority
000             mcast                 low

```

|     |       |     |
|-----|-------|-----|
| 001 | mcast | low |
| 010 | mcast | low |
| 011 | mcast | low |
| 100 | mcast | low |
| 101 | mcast | low |
| 110 | mcast | low |
| 111 | mcast | low |

## show class-of-service code-point-aliases

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show class-of-service code-point-aliases</code><br><code>&lt;dscp   dscp-ipv6   exp   ieee-802.1   inet-precedence&gt;</code>                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.0 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                                                                                                                                                                                              |
| <b>Description</b>              | Display the mapping of class-of-service (CoS) code point aliases to corresponding bit patterns.                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                  | <p><b>none</b>—Display code point aliases of all code point types.</p> <p><b>dscp</b>—(Optional) Display Differentiated Services code point (DSCP) aliases.</p> <p><b>dscp-ipv6</b>—(Optional) Display IPv6 DSCP aliases.</p> <p><b>exp</b>—(Optional) Display MPLS EXP code point aliases.</p> <p><b>ieee-802.1</b>—(Optional) Display IEEE-802.1 code point aliases.</p> <p><b>inet-precedence</b>—(Optional) Display IPv4 precedence code point aliases.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service code-point-aliases exp on page 638</a>                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Output Fields</b>            | <a href="#">Table 100 on page 637</a> describes the output fields for the <b>show class-of-service code-point-aliases</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                      |

**Table 100: show class-of-service code-point-aliases Output Fields**

| Field Name             | Field Description                                                                                                                                                                                                           |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Code point type</b> | Type of the code points displayed: <b>dscp</b> , <b>dscp-ipv6</b> (not on EX Series switch), <b>exp</b> (not on EX Series switch or the QFX Series), <b>ieee-802.1</b> , or <b>inet-precedence</b> (not on the QFX Series). |
| <b>Alias</b>           | Alias for a bit pattern.                                                                                                                                                                                                    |
| <b>Bit pattern</b>     | Bit pattern for which the alias is displayed.                                                                                                                                                                               |

## Sample Output

### show class-of-service code-point-aliases exp

```
user@host> show class-of-service code-point-aliases exp
Code point type: exp
Alias      Bit pattern
af11      100
af12      101
be        000
be1       001
cs6       110
cs7       111
ef        010
ef1       011
nc1       110
nc2       111
```



## show class-of-service forwarding-class

|                                 |                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service forwarding-class                                                                                                                                                                                                      |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.0 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                             |
| <b>Description</b>              | Display information about forwarding classes, including the mapping of forwarding classes to queue numbers.                                                                                                                                 |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Monitoring CoS Forwarding Classes</i></li> <li>• <a href="#">Monitoring CoS Forwarding Classes on page 628</a></li> </ul>                                                                       |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service forwarding-class on page 640</a><br><a href="#">show class-of-service forwarding-class (EX8200 Switch) on page 640</a><br><a href="#">show class-of-service forwarding-class (QFX Series) on page 640</a> |
| <b>Output Fields</b>            | <a href="#">Table 101 on page 639</a> describes the output fields for the <b>show class-of-service forwarding-class</b> command. Output fields are listed in the approximate order in which they appear.                                    |

**Table 101: show class-of-service forwarding-class Output Fields**

| Field Name               | Field Description                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Forwarding class</b>  | Name of the forwarding class.                                                                                                                                                                                                                                                                                                                                                                                |
| <b>ID</b>                | Forwarding class identifier.                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Queue</b>             | CoS output queue mapped to the forwarding class.                                                                                                                                                                                                                                                                                                                                                             |
| <b>Policing priority</b> | Not supported on EX Series switches or the QFX Series and can be ignored.                                                                                                                                                                                                                                                                                                                                    |
| <b>Fabric priority</b>   | (EX8200 switches only) Fabric priority for the forwarding class, either <b>high</b> or <b>low</b> . Determines the priority of packets entering the switch fabric.                                                                                                                                                                                                                                           |
| <b>No-Loss</b>           | (QFX Series only) Packet loss attribute to differentiate lossless forwarding classes from lossy forwarding classes: <ul style="list-style-type: none"> <li>• Disabled—Lossless transport is not configured on the forwarding class (packet drop attribute is <b>drop</b>).</li> <li>• Enabled—Lossless transport is configured on the forwarding class (packet drop attribute is <b>no-loss</b>).</li> </ul> |

## Sample Output

### show class-of-service forwarding-class

```

user@switch> show class-of-service forwarding-class
Forwarding class      ID      Queue Policing priority
best-effort           0        0      normal
expedited-forwarding  1        5      normal
assured-forwarding    2        1      normal
network-control       3        7      normal

```

## Sample Output

### show class-of-service forwarding-class (EX8200 Switch)

```

user@switch> show class-of-service forwarding-class
Forwarding class      ID      Queue Fabric priority
best-effort           0        0      low
expedited-forwarding  1        5      low
assured-forwarding    2        1      low
network-control       3        7      low
mcast-be              4        2      low
mcast-ef              5        4      low
mcast-af              6        6      low

```

## Sample Output

### show class-of-service forwarding-class (QFX Series)

```

user@switch> show class-of-service forwarding-class
Forwarding class      ID      Queue Policing priority No-Loss
best-effort           0        0      normal      Disabled
fcoe                  1        3      normal      Enabled
no-loss               2        4      normal      Enabled
network-control       3        7      normal      Disabled
mcast                  8        8      normal      Disabled

```

On switches that do not use different forwarding classes and output queues for unicast and multidestination (multicast, broadcast, destination lookup fail) traffic, there is no **mcast** forwarding class and there is no queue 8. (Switches that use different forwarding classes and output queues for unicast and multidestination traffic support 12 forwarding classes and output queues, of which four of each are dedicated to multidestination traffic. Switches that use the same forwarding classes and output queues for unicast and multidestination traffic support eight forwarding classes and eight output queues.)

## show class-of-service forwarding-class-set

|                                 |                                                                                                                                                                                                                                                                                                    |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service forwarding-class-set<br><forwarding-class-set-name>                                                                                                                                                                                                                          |
| <b>Release Information</b>      | Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                                                                                                                                                          |
| <b>Description</b>              | Display the forwarding classes associated with each forwarding class set.                                                                                                                                                                                                                          |
| <b>Options</b>                  | <b>none</b> —Display all forwarding class sets.<br><br><b>forwarding-class-set-name</b> —(Optional) Display the forwarding classes associated with the specified forwarding class set.                                                                                                             |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Understanding CoS Forwarding Class Sets (Priority Groups) on page 91</a></li> <li>• <a href="#">Defining CoS Forwarding Class Sets on page 92</a></li> <li>• <a href="#">Example: Configuring Forwarding Class Sets on page 93</a></li> </ul> |
| <b>Output Fields</b>            | Table 102 on page 641 describes the output fields for the <b>show class-of-service forwarding-class-set</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                       |

Table 102: show class-of-service forwarding-class-set Output Fields

| Field Name                 | Field Description                   |
|----------------------------|-------------------------------------|
| Forwarding class set       | Name of the forwarding class set.   |
| Type                       | Internal Junos OS type.             |
| Forwarding class set index | Index of this forwarding class set. |
| Forwarding class           | Name of a forwarding class.         |
| Index                      | Index of this forwarding class.     |

## Sample Output

### show class-of-service forwarding-class-set

```

user@switch> show class-of-service forwarding-class-set
Forwarding class set: san_fcset, Type: normal-type, Forwarding class set index:
37839
  Forwarding class      Index
  fcoe                  1

```

Forwarding class set: lan\_fcset, Type: normal-type, Forwarding class set index: 37840

| Forwarding class | Index |
|------------------|-------|
| best-effort      | 0     |

Forwarding class set: multicast\_fcset, Type: normal-type, Forwarding class set index: 37841

| Forwarding class | Index |
|------------------|-------|
| mcast            | 8     |

## show class-of-service forwarding-table

|                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>                               | <a href="#">Syntax on page 643</a><br><a href="#">Syntax (TX Matrix and TX Matrix Plus Router) on page 643</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Syntax</b>                                       | show class-of-service forwarding-table                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Syntax (TX Matrix and TX Matrix Plus Router)</b> | show class-of-service forwarding-table<br><lcc number>   <sfc number>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>                          | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>                                  | <p>Display the entire class-of-service (CoS) configuration as it exists in the forwarding table. Executing this command is equivalent to executing all <b>show class-of-service forwarding-table</b> commands in succession.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                                      | <p><b>lcc number</b>—(TX Matrix and TX Matrix Plus router only) (Optional) On a TX Matrix router, display the forwarding table configuration for a specific T640 router (or line-card chassis) configured in a routing matrix. On a TX Matrix Plus router, display the forwarding table configuration for a specific router (or line-card chassis) configured in the routing matrix.</p> <p>Replace <i>number</i> with the following values depending on the LCC configuration:</p> <ul style="list-style-type: none"> <li>• 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.</li> <li>• 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.</li> <li>• 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.</li> <li>• 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.</li> </ul> <p><b>sfc number</b>—(TX Matrix Plus routers only) (Optional) Display the forwarding table configuration for the TX Matrix Plus router. Replace <i>number</i> with 0.</p> |
| <b>Required Privilege Level</b>                     | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>List of Sample Output</b>                        | <a href="#">show class-of-service forwarding-table on page 644</a><br><a href="#">show class-of-service forwarding-table lcc (TX Matrix Plus Router) on page 645</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Output Fields</b>                                | <p>See the output field descriptions for <b>show class-of-service forwarding-table</b> commands:</p> <ul style="list-style-type: none"> <li>• <a href="#">show class-of-service forwarding-table classifier</a></li> <li>• <a href="#">show class-of-service forwarding-table classifier mapping</a></li> <li>• <a href="#">show class-of-service forwarding-table drop-profile</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

- *show class-of-service forwarding-table fabric scheduler-map*
- *show class-of-service forwarding-table rewrite-rule*
- *show class-of-service forwarding-table rewrite-rule mapping*
- *show class-of-service forwarding-table scheduler-map*

## Sample Output

### show class-of-service forwarding-table

```

user@host> show class-of-service forwarding-table
Classifier table index: 9, # entries: 8, Table type: EXP
Entry #   Code point   Forwarding-class #   PLP
0         000           0                   0
1         001           0                   1
2         010           1                   0
3         011           1                   1
4         100           2                   0
5         101           2                   1
6         110           3                   0
7         111           3                   1

Interface      Index      Table Index/      Q num      Table type
sp-0/0/0.1001   66         11                11         IPv4 precedence
sp-0/0/0.2001   67         11                11         IPv4 precedence
sp-0/0/0.16383  68         11                11         IPv4 precedence
fe-0/0/0.0      69         11                11         IPv4 precedence

Interface: sp-0/0/0 (Index: 129, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Interface: fe-0/0/0 (Index: 137, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Interface: fe-0/0/1 (Index: 138, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
  Priority low

```

PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

...

RED drop profile index: 1, # entries: 1

| Entry | Fullness(%) | Drop<br>Probability(%) |
|-------|-------------|------------------------|
| 0     | 100         | 100                    |

### show class-of-service forwarding-table lcc (TX Matrix Plus Router)

user@host> show class-of-service forwarding-table lcc 0  
lcc0-re0:

-----

Classifier table index: 9, # entries: 64, Table type: IPv6 DSCP

| Entry # | Code point | Forwarding-class # | PLP |
|---------|------------|--------------------|-----|
| 0       | 000000     | 0                  | 0   |
| 1       | 000001     | 0                  | 0   |
| 2       | 000010     | 0                  | 0   |
| 3       | 000011     | 0                  | 0   |
| 4       | 000100     | 0                  | 0   |
| 5       | 000101     | 0                  | 0   |
| 6       | 000110     | 0                  | 0   |
| 7       | 000111     | 0                  | 0   |
| 8       | 001000     | 0                  | 0   |
| 9       | 001001     | 0                  | 0   |
| 10      | 001010     | 0                  | 0   |
| 11      | 001011     | 0                  | 0   |
| 12      | 001100     | 0                  | 0   |
| 13      | 001101     | 0                  | 0   |
| 14      | 001110     | 0                  | 0   |
| 15      | 001111     | 0                  | 0   |
| 16      | 010000     | 0                  | 0   |
| 17      | 010001     | 0                  | 0   |
| 18      | 010010     | 0                  | 0   |
| 19      | 010011     | 0                  | 0   |
| 20      | 010100     | 0                  | 0   |
| 21      | 010101     | 0                  | 0   |
| 22      | 010110     | 0                  | 0   |
| 23      | 010111     | 0                  | 0   |
| 24      | 011000     | 0                  | 0   |
| 25      | 011001     | 0                  | 0   |
| 26      | 011010     | 0                  | 0   |
| 27      | 011011     | 0                  | 0   |
| 28      | 011100     | 0                  | 0   |
| 29      | 011101     | 0                  | 0   |
| 30      | 011110     | 0                  | 0   |
| 31      | 011111     | 0                  | 0   |
| 32      | 100000     | 0                  | 0   |
| 33      | 100001     | 0                  | 0   |
| 34      | 100010     | 0                  | 0   |
| 35      | 100011     | 0                  | 0   |
| 36      | 100100     | 0                  | 0   |
| 37      | 100101     | 0                  | 0   |
| 38      | 100110     | 0                  | 0   |
| 39      | 100111     | 0                  | 0   |
| 40      | 101000     | 0                  | 0   |
| 41      | 101001     | 0                  | 0   |
| 42      | 101010     | 0                  | 0   |
| 43      | 101011     | 0                  | 0   |

|     |        |   |   |
|-----|--------|---|---|
| 44  | 101100 | 0 | 0 |
| 45  | 101101 | 0 | 0 |
| 46  | 101110 | 0 | 0 |
| ... |        |   |   |



## show class-of-service forwarding-table classifier

|                                 |                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service forwarding-table classifier                                                                                                                                                                   |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                        |
| <b>Description</b>              | Display the mapping of code point value to queue number and loss priority for each classifier as it exists in the forwarding table.                                                                                 |
| <b>Options</b>                  | This command has no options.                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service forwarding-table classifier on page 647</a>                                                                                                                                       |
| <b>Output Fields</b>            | <a href="#">Table 103 on page 647</a> describes the output fields for the <b>show class-of-service forwarding-table classifier</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 103: show class-of-service forwarding-table classifier Output Fields**

| Field Name                    | Field Description                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Classifier table index</b> | Index of the classifier table.                                                                                                                                                                                                                                                                                                                                                   |
| <b>entries</b>                | Total number of entries.                                                                                                                                                                                                                                                                                                                                                         |
| <b>Table type</b>             | Type of code points in the table: <b>DSCP</b> , <b>EXP</b> (not on the QFX Series), <b>IEEE 802.1</b> , <b>IPv4 precedence</b> (not on the QFX Series), or <b>IPv6 DSCP</b> .                                                                                                                                                                                                    |
| <b>Entry #</b>                | Entry number.                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Code point</b>             | Code point value used for classification.                                                                                                                                                                                                                                                                                                                                        |
| <b>Forwarding-class #</b>     | Forwarding class to which the code point is assigned.                                                                                                                                                                                                                                                                                                                            |
| <b>PLP</b>                    | Packet loss priority value set by classification. For most platforms, the value can be <b>0</b> or <b>1</b> . For some platforms, the value is <b>0</b> , <b>1</b> , <b>2</b> , or <b>3</b> . The value <b>0</b> represents low PLP. The value <b>1</b> represents <b>high</b> PLP. The value <b>2</b> represents medium-low PLP. The value <b>3</b> represents medium-high PLP. |

## Sample Output

### show class-of-service forwarding-table classifier

```
user@host> show class-of-service forwarding-table classifier
Classifier table index: 62436, # entries: 64, Table type: DSCP
```

| Entry # | Code point | Forwarding-class # | PLP |
|---------|------------|--------------------|-----|
| 0       | 000000     | 0                  | 0   |
| 1       | 000001     | 0                  | 0   |
| 2       | 000010     | 0                  | 0   |
| 3       | 000011     | 0                  | 0   |
| 4       | 000100     | 0                  | 0   |
| 5       | 000101     | 0                  | 0   |
| 6       | 000110     | 0                  | 0   |
| 7       | 000111     | 0                  | 0   |
| 8       | 001000     | 0                  | 0   |
| 9       | 001001     | 0                  | 0   |
| 10      | 001010     | 1                  | 1   |
| 11      | 001011     | 0                  | 0   |
| ...     |            |                    |     |
| 60      | 111100     | 0                  | 0   |
| 61      | 111101     | 0                  | 0   |
| 62      | 111110     | 0                  | 0   |
| 63      | 111111     | 0                  | 0   |

## show class-of-service forwarding-table classifier mapping

|                                 |                                                                                                                                                                                                                             |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service forwarding-table classifier mapping                                                                                                                                                                   |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                                |
| <b>Description</b>              | For each logical interface, display either the table index of the classifier for a given code point type or the queue number (if it is a fixed classification) in the forwarding table.                                     |
| <b>Options</b>                  | This command has no options.                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                        |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service forwarding-table classifier mapping on page 649</a>                                                                                                                                       |
| <b>Output Fields</b>            | <a href="#">Table 104 on page 649</a> describes the output fields for the <b>show class-of-service forwarding-table classifier mapping</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 104: show class-of-service forwarding-table classifier mapping Output Fields**

| Field Name                | Field Description                                                                                                                                                                            |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Table index/ Q num</b> | If the table type is <b>Fixed</b> , the number of the queue to which the interface is mapped. For all other types, this value is the classifier index number.                                |
| <b>Interface</b>          | Name of the logical interface. This field can also show the physical interface (QFX Series).                                                                                                 |
| <b>Index</b>              | Logical interface index.                                                                                                                                                                     |
| <b>Table type</b>         | Type of code points in the table: <b>DSCP</b> , <b>EXP</b> (not on the QFX Series), <b>Fixed</b> , <b>IEEE 802.1</b> , <b>IPv4 precedence</b> (not on the QFX Series), or <b>IPv6 DSCP</b> . |

## Sample Output

### show class-of-service forwarding-table classifier mapping

```

user@host> show class-of-service forwarding-table classifier mapping
Table index/
Interface      Index  Q num  Table type
so-5/0/0.0     10    62436  DSCP
so-0/1/0.0     11    62436  DSCP
so-0/2/0.0     12      1  Fixed
so-0/2/1.0     13    62436  DSCP
so-0/2/1.0     13    62437  IEEE 802.1

```

|            |    |       |                 |
|------------|----|-------|-----------------|
| so-0/2/2.0 | 14 | 62436 | DSCP            |
| so-0/2/2.0 | 14 | 62438 | IPv4 precedence |

## show class-of-service forwarding-table rewrite-rule

|                                 |                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service forwarding-table rewrite-rule                                                                                                                                                                   |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                          |
| <b>Description</b>              | Display mapping of queue number and loss priority to code point value for each rewrite rule as it exists in the forwarding table.                                                                                     |
| <b>Options</b>                  | This command has no options.                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                  |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service forwarding-table rewrite-rule on page 651</a>                                                                                                                                       |
| <b>Output Fields</b>            | <a href="#">Table 105 on page 651</a> describes the output fields for the <b>show class-of-service forwarding-table rewrite-rule</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 105: show class-of-service forwarding-table rewrite-rule Output Fields**

| Field Name                 | Field Description                                                                                                                                                                                           |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Rewrite table index</b> | Index for this rewrite rule.                                                                                                                                                                                |
| <b># entries</b>           | Number of entries in this rewrite rule.                                                                                                                                                                     |
| <b>Table type</b>          | Type of table: <b>DSCP</b> , <b>EXP</b> (not on the QFX Series), <b>EXP-PUSH-3</b> (not on the QFX Series), <b>IEEE 802.1,IPv4 precedence</b> (not on the QFX Series), <b>IPv6 DSCP</b> , or <b>Fixed</b> . |
| <b>Q#</b>                  | Queue number to which this entry is assigned.                                                                                                                                                               |
| <b>Low bits</b>            | Code point value for low-priority loss profile.                                                                                                                                                             |
| <b>State</b>               | State of this code point: <b>enabled</b> , <b>rewritten</b> , or <b>disabled</b> .                                                                                                                          |
| <b>High bits</b>           | Code point value for high-priority loss profile.                                                                                                                                                            |

## Sample Output

### show class-of-service forwarding-table rewrite-rule

```

user@host> show class-of-service forwarding-table rewrite-rule
Rewrite table index: 3753, # entries: 4, Table type: DSCP
Q#      Low bits  State      High bits  State
0       000111   Enabled    001010     Enabled
2       000000   Disabled   001100     Enabled

```

|   |        |         |        |         |
|---|--------|---------|--------|---------|
| 1 | 101110 | Enabled | 110111 | Enabled |
| 3 | 110000 | Enabled | 111000 | Enabled |

## show class-of-service forwarding-table rewrite-rule mapping

|                                 |                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service forwarding-table rewrite-rule mapping                                                                                                                                                                   |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                                  |
| <b>Description</b>              | For each logical interface, display the table identifier of the rewrite rule map for each code point type.                                                                                                                    |
| <b>Options</b>                  | This command has no options.                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                          |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service forwarding-table rewrite-rule mapping on page 653</a>                                                                                                                                       |
| <b>Output Fields</b>            | <a href="#">Table 106 on page 653</a> describes the output fields for the <b>show class-of-service forwarding-table rewrite-rule mapping</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 106: show class-of-service forwarding-table rewrite-rule mapping Output Fields**

| Field Name         | Field Description                                                                                                                                                                                                                                                         |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Interface</b>   | Name of the logical interface. This field can also show the physical interface (QFX Series).                                                                                                                                                                              |
| <b>Index</b>       | Logical interface index.                                                                                                                                                                                                                                                  |
| <b>Table index</b> | Rewrite table index.                                                                                                                                                                                                                                                      |
| <b>Type</b>        | Type of classifier: <b>DSCP</b> , <b>EXP</b> (not on the QFX Series), <b>EXP-PUSH-3</b> (not on the QFX Series), <b>EXP-SWAP-PUSH-2</b> (not on the QFX Series), <b>IEEE 802.1</b> , <b>IPv4 precedence</b> (not on the QFX Series), <b>IPv6 DSCP</b> , or <b>Fixed</b> . |

## Sample Output

### show class-of-service forwarding-table rewrite-rule mapping

```

user@host> show class-of-service forwarding-table rewrite-rule mapping
Interface      Index  Table index  Type
so-5/0/0.0     10     3753        DSCP
so-0/1/0.0     11     3753        DSCP
so-0/2/0.0     12     3753        DSCP
so-0/2/1.0     13     3753        DSCP
so-0/2/2.0     14     3753        DSCP
so-0/2/3.0     15     3753        DSCP

```

## show class-of-service interface

---

**Syntax**    `show class-of-service interface`  
              `<comprehensive | detail> <interface-name>`

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.0 for EX Series switches.  
                              Forwarding class map information added in Junos OS Release 9.4.  
                              Command introduced in Junos OS Release 11.1 for the QFX Series.  
                              Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Switches.  
                              Command introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.  
                              Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
                              Options **detail** and **comprehensive** introduced in Junos OS Release 11.4.  
                              Command introduced in Junos OS Release 15.1R3 on MX Series routers for enhanced subscriber management.

**Description**    Display the logical and physical interface associations for the classifier, rewrite rules, and scheduler map objects.



**NOTE:** On routing platforms with dual Routing Engines, running this command on the backup Routing Engine, with or without any of the available options, is not supported and produces the following error message:

**error: the class-of-service subsystem is not running**

**Options**    **none**—Display CoS associations for all physical and logical interfaces.

**comprehensive**—(M Series, MX Series, and T Series routers) (Optional) Display comprehensive quality-of-service (QoS) information about all physical and logical interfaces.

**detail**—(M Series, MX Series, and T Series routers) (Optional) Display QoS and CoS information based on the interface.

If the **interface** *interface-name* is a physical interface, the output includes:

- Brief QoS information about the physical interface
- Brief QoS information about the logical interface
- CoS information about the physical interface
- Brief information about filters or policers of the logical interface
- Brief CoS information about the logical interface

If the **interface** *interface-name* is a logical interface, the output includes:

- Brief QoS information about the logical interface



- Information about filters or policers for the logical interface
- CoS information about the logical interface

**interface-name**—(Optional) Display class-of-service (CoS) associations for the specified interface.

**none**—Display CoS associations for all physical and logical interfaces.

**Required Privilege Level** view

**Related Documentation**

- *Verifying and Managing Junos OS Enhanced Subscriber Management*

**List of Sample Output** [show class-of-service interface \(Physical\) on page 666](#)  
[show class-of-service interface \(Logical\) on page 667](#)  
[show class-of-service interface \(Gigabit Ethernet\) on page 667](#)  
[show class-of-service interface \(ANCP\) on page 667](#)  
[show class-of-service interface \(PPPoE Interface\) on page 667](#)  
[show class-of-service interface \(T4000 Routers with Type 5 FPCs\) on page 667](#)  
[show class-of-service interface detail on page 668](#)  
[show class-of-service interface comprehensive on page 668](#)  
[show class-of-service interface \(ACX Series Routers\) on page 679](#)  
[show class-of-service interface \(PPPoE Subscriber Interface for Enhanced Subscriber Management\) on page 682](#)

**Output Fields** [Table 87 on page 564](#) describes the output fields for the **show class-of-service interface** command. Output fields are listed in the approximate order in which they appear.

**Table 107: show class-of-service interface Output Fields**

| Field Name         | Field Description                                                                                                                                                                                                                                                                                          |                                                      |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------|
| Physical interface | Name of a physical interface.                                                                                                                                                                                                                                                                              |                                                      |
| Index              | Index of this interface or the internal index of this object.<br><br>(Enhanced subscriber management for MX Series routers) Index values for dynamic CoS traffic control profiles and dynamic scheduler maps are larger for enhanced subscriber management than they are for legacy subscriber management. |                                                      |
| Dedicated Queues   | Status of dedicated queues configured on an interface. Supported only on Trio MPC/MIC interfaces on MX Series routers.                                                                                                                                                                                     | Number of queues you can configure on the interface. |
| Queues supported   | Number of queues you can configure on the interface.                                                                                                                                                                                                                                                       |                                                      |
| Queues in use      | Number of queues currently configured.                                                                                                                                                                                                                                                                     |                                                      |

Table 107: show class-of-service interface Output Fields (*continued*)

| Field Name                                 | Field Description                                                                                                                                                                                                                                                                                     |
|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Total non-default queues created</b>    | Number of queues created in addition to the default queues. Supported only on Trio MPC/MIC interfaces on MX Series routers.<br><br>(Enhanced subscriber management for MX Series routers) This field is not displayed for enhanced subscriber management.                                             |
| <b>Rewrite Input IEEE Code-point</b>       | (QFX Series only) IEEE 802.1p code point (priority) rewrite value. Incoming traffic from the Fibre Channel (FC) SAN is classified into the forwarding class specified in the native FC interface (NP_Port) fixed classifier and uses the priority specified as the IEEE 802.1p rewrite value.         |
| <b>Shaping rate</b>                        | Maximum transmission rate on the physical interface. You can configure the shaping rate on the physical interface, or on the logical interface, but not on both. Therefore, the <b>Shaping rate</b> field is displayed for either the physical interface or the logical interface.                    |
| <b>Scheduler map</b>                       | Name of the output scheduler map associated with this interface.<br><br>(Enhanced subscriber management for MX Series routers) The name of the dynamic scheduler map object is associated with a generated UID (for example, <b>SMAP-1_UID1002</b> ) instead of with a subscriber interface.          |
| <b>Scheduler map forwarding class sets</b> | (QFX Series only) Name of the output fabric scheduler map associated with a QFabric system Interconnect device interface.                                                                                                                                                                             |
| <b>Input shaping rate</b>                  | For Gigabit Ethernet IQ2 PICs, maximum transmission rate on the input interface.                                                                                                                                                                                                                      |
| <b>Input scheduler map</b>                 | For Gigabit Ethernet IQ2 PICs, name of the input scheduler map associated with this interface.                                                                                                                                                                                                        |
| <b>Chassis scheduler map</b>               | Name of the scheduler map associated with the packet forwarding component queues.                                                                                                                                                                                                                     |
| <b>Rewrite</b>                             | Name and type of the rewrite rules associated with this interface.                                                                                                                                                                                                                                    |
| <b>Traffic-control-profile</b>             | Name of the associated traffic control profile.<br><br>(Enhanced subscriber management for MX Series routers) The name of the dynamic traffic control profile object is associated with a generated UID (for example, <b>TC_PROF_100_199_SERIES_UID1006</b> ) instead of with a subscriber interface. |
| <b>Classifier</b>                          | Name and type of classifiers associated with this interface.                                                                                                                                                                                                                                          |
| <b>Forwarding-class-map</b>                | Name of the forwarding map associated with this interface.                                                                                                                                                                                                                                            |
| <b>Congestion-notification</b>             | (QFX Series and EX4600 switches only) Congestion notification state, <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                                              |
| <b>Logical interface</b>                   | Name of a logical interface.                                                                                                                                                                                                                                                                          |
| <b>Object</b>                              | Category of an object: <b>Classifier</b> , <b>Fragmentation-map</b> (for LSQ interfaces only), <b>Scheduler-map</b> , <b>Rewrite</b> , <b>Translation Table</b> (for IQE PICs only), or <b>traffic-class-map</b> (for T4000 routers with Type 5 FPCs).                                                |
| <b>Name</b>                                | Name of an object.                                                                                                                                                                                                                                                                                    |

Table 107: show class-of-service interface Output Fields (*continued*)

| Field Name              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Type</b>             | Type of an object: <b>dscp</b> , <b>dscp-ipv6</b> , <b>exp</b> , <b>ieee-802.1</b> , <b>ip</b> , <b>inet-precedence</b> , or <b>ieee-802.1ad</b> (for traffic class map on T4000 routers with Type 5 FPCs)..                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Link-level type</b>  | Encapsulation on the physical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>MTU</b>              | MTU size on the physical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Speed</b>            | Speed at which the interface is running.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Loopback</b>         | Whether loopback is enabled and the type of loopback.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Source filtering</b> | Whether source filtering is enabled or disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Flow control</b>     | Whether flow control is enabled or disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Auto-negotiation</b> | (Gigabit Ethernet interfaces) Whether autonegotiation is enabled or disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Remote-fault</b>     | (Gigabit Ethernet interfaces) Remote fault status. <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Device flags</b>     | The <b>Device flags</b> field provides information about the physical device and displays one or more of the following values: <ul style="list-style-type: none"> <li>• <b>Down</b>—Device has been administratively disabled.</li> <li>• <b>Hear-Own-Xmit</b>—Device receives its own transmissions.</li> <li>• <b>Link-Layer-Down</b>—The link-layer protocol has failed to connect with the remote endpoint.</li> <li>• <b>Loopback</b>—Device is in physical loopback.</li> <li>• <b>Loop-Detected</b>—The link layer has received frames that it sent, thereby detecting a physical loopback.</li> <li>• <b>No-Carrier</b>—On media that support carrier recognition, no carrier is currently detected.</li> <li>• <b>No-Multicast</b>—Device does not support multicast traffic.</li> <li>• <b>Present</b>—Device is physically present and recognized.</li> <li>• <b>Promiscuous</b>—Device is in promiscuous mode and recognizes frames addressed to all physical addresses on the media.</li> <li>• <b>Quench</b>—Transmission on the device is quenched because the output buffer is overflowing.</li> <li>• <b>Recv-All-Multicasts</b>—Device is in multicast promiscuous mode and therefore provides no multicast filtering.</li> <li>• <b>Running</b>—Device is active and enabled.</li> </ul> |

Table 107: show class-of-service interface Output Fields (*continued*)

| Field Name             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Interface flags</b> | <p>The <b>Interface flags</b> field provides information about the physical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>Admin-Test</b>—Interface is in test mode and some sanity checking, such as loop detection, is disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Hardware-Down</b>—Interface is nonfunctional or incorrectly connected.</li> <li>• <b>Link-Layer-Down</b>—Interface keepalives have indicated that the link is incomplete.</li> <li>• <b>No-Multicast</b>—Interface does not support multicast traffic.</li> <li>• <b>No-receive No-transmit</b>—Passive monitor mode is configured on the interface.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>Pop all MPLS labels from packets of depth</b>—MPLS labels are removed as packets arrive on an interface that has the <b>pop-all-labels</b> statement configured. The depth value can be one of the following: <ul style="list-style-type: none"> <li>• <b>1</b>—Takes effect for incoming packets with one label only.</li> <li>• <b>2</b>—Takes effect for incoming packets with two labels only.</li> <li>• <b>[ 1 2 ]</b>—Takes effect for incoming packets with either one or two labels.</li> </ul> </li> <li>• <b>Promiscuous</b>—Interface is in promiscuous mode and recognizes frames addressed to all physical addresses.</li> <li>• <b>Recv-All-Multicasts</b>—Interface is in multicast promiscuous mode and provides no multicast filtering.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul> |
| <b>Flags</b>           | <p>The <b>Logical interface flags</b> field provides information about the logical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>ACFC Encapsulation</b>—Address control field Compression (ACFC) encapsulation is enabled (negotiated successfully with a peer).</li> <li>• <b>Device-down</b>—Device has been administratively disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Clear-DF-Bit</b>—GRE tunnel or IPsec tunnel is configured to clear the Don't Fragment (DF) bit.</li> <li>• <b>Hardware-Down</b>—Interface protocol initialization failed to complete successfully.</li> <li>• <b>PFC</b>—Protocol field compression is enabled for the PPP session.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Encapsulation</b>   | Encapsulation on the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Admin</b>           | Administrative state of the interface ( <b>Up</b> or <b>Down</b> ).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Link</b>            | Status of physical link ( <b>Up</b> or <b>Down</b> ).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Proto</b>           | Protocol configured on the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

Table 107: show class-of-service interface Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Input Filter</b>            | Names of any firewall filters to be evaluated when packets are received on the interface, including any filters attached through activation of dynamic service.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Output Filter</b>           | Names of any firewall filters to be evaluated when packets are transmitted on the interface, including any filters attached through activation of dynamic service.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Link flags</b>              | Provides information about the physical link and displays one or more of the following values: <ul style="list-style-type: none"> <li>• <b>ACFC</b>—Address control field compression is configured. The Point-to-Point Protocol (PPP) session negotiates the ACFC option.</li> <li>• <b>Give-Up</b>—Link protocol does not continue connection attempts after repeated failures.</li> <li>• <b>Loose-LCP</b>—PPP does not use the Link Control Protocol (LCP) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-LMI</b>—Frame Relay does not use the Local Management Interface (LMI) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-NCP</b>—PPP does not use the Network Control Protocol (NCP) to indicate whether the device is operational.</li> <li>• <b>Keepalives</b>—Link protocol keepalives are enabled.</li> <li>• <b>No-Keepalives</b>—Link protocol keepalives are disabled.</li> <li>• <b>PFC</b>—Protocol field compression is configured. The PPP session negotiates the PFC option.</li> </ul> |
| <b>Hold-times</b>              | Current interface hold-time up and hold-time down, in milliseconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>CoS queues</b>              | Number of CoS queues configured.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Last flapped</b>            | Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Statistics last cleared</b> | Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>IPv6 transit statistics</b> | Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

Table 107: show class-of-service interface Output Fields (*continued*)

| Field Name           | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Input errors</b>  | <p>Input errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Bucket Drops</b>—Drops resulting from the traffic load exceeding the interface transmit or receive leaky bucket configuration.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. Layer 3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>HS link FIFO overflows</b>—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> </ul> |
| <b>Output errors</b> | <p>Output errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Drops</b> field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>HS link FIFO underflows</b>—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeds the MTU of the interface.</li> </ul>                                                                                                                                                                                                                                                                                                                |
| <b>Egress queues</b> | Total number of egress queues supported on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

Table 107: show class-of-service interface Output Fields (*continued*)

| Field Name                                  | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Queue counters</b>                       | <p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Dropped packets</b> field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>                                                                                                                                                                                                                                   |
| <b>SONET alarms</b><br><b>SONET defects</b> | <p>(SONET) SONET media-specific alarms and defects that prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: <b>SONET PHY</b>, <b>SONET section</b>, <b>SONET line</b>, and <b>SONET path</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>SONET PHY</b>                            | <p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET PHY</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>                                                                                                                                                                                                                                                                                        |
| <b>SONET section</b>                        | <p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET section</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-BI</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul> |

Table 107: show class-of-service interface Output Fields (*continued*)

| Field Name        | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SONET line</b> | <p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET line</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>      |
| <b>SONET path</b> | <p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET path</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>ES-PFE</b>—Errored seconds (far-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul> |



Table 107: show class-of-service interface Output Fields (*continued*)

| Field Name                             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Received SONET overhead                | Values of the received and transmitted SONET overhead: <ul style="list-style-type: none"> <li>• <b>C2</b>—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li>• <b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li>• <b>K1 and K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li>• <b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-N signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li>• <b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 number of an STS-N signal.</li> <li>• <b>Z3 and Z4</b>—Allocated for future use.</li> </ul>                                                                                                                                                                                  |
| Transmitted SONET overhead             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Received path trace                    | SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Transmitted path trace                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| HDLC configuration                     | Information about the HDLC configuration. <ul style="list-style-type: none"> <li>• <b>Policing bucket</b>—Configured state of the receiving policer.</li> <li>• <b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Packet Forwarding Engine configuration | Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| CoS information                        | Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul> |
| Forwarding classes                     | Total number of forwarding classes supported on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Egress queues                          | Total number of egress queues supported on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

Table 107: show class-of-service interface Output Fields (*continued*)

| Field Name           | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Queue                | Queue number.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Forwarding classes   | Forwarding class name.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Queued Packets       | Number of packets queued to this queue.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Queued Bytes         | Number of bytes queued to this queue. The byte counts vary by PIC type.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Transmitted Packets  | Number of packets transmitted by this queue. When fragmentation occurs on the egress interface, the first set of packet counters shows the postfragmentation values. The second set of packet counters (displayed under the <b>Packet Forwarding Engine Chassis Queues</b> field) shows the prefragmentation values.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Transmitted Bytes    | Number of bytes transmitted by this queue. The byte counts vary by PIC type.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Tail-dropped packets | Number of packets dropped because of tail drop.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| RED-dropped packets  | <p>Number of packets dropped because of random early detection (RED).</p> <ul style="list-style-type: none"> <li>• (M Series and T Series routers only) On M320 and M120 routers and the T Series routers, the total number of dropped packets is displayed. On all other M Series routers, the output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low, non-TCP</b>—Number of low-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>Low, TCP</b>—Number of low-loss priority TCP packets dropped because of RED.</li> <li>• <b>High, non-TCP</b>—Number of high-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>High, TCP</b>—Number of high-loss priority TCP packets dropped because of RED.</li> </ul> </li> <li>• (MX Series routers with enhanced DPCs, and T Series routers with enhanced FPCs only) The output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low-loss priority packets dropped because of RED.</li> <li>• <b>Medium-low</b>—Number of medium-low loss priority packets dropped because of RED.</li> <li>• <b>Medium-high</b>—Number of medium-high loss priority packets dropped because of RED.</li> <li>• <b>High</b>—Number of high-loss priority packets dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> |

Table 107: show class-of-service interface Output Fields (*continued*)

| Field Name        | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RED-dropped bytes | <p>Number of bytes dropped because of RED. The byte counts vary by PIC type.</p> <ul style="list-style-type: none"> <li>(M Series and T Series routers only) On M320 and M120 routers and the T Series routers, only the total number of dropped bytes is displayed. On all other M Series routers, the output classifies dropped bytes into the following categories: <ul style="list-style-type: none"> <li><b>Low, non-TCP</b>—Number of low-loss priority non-TCP bytes dropped because of RED.</li> <li><b>Low, TCP</b>—Number of low-loss priority TCP bytes dropped because of RED.</li> <li><b>High, non-TCP</b>—Number of high-loss priority non-TCP bytes dropped because of RED.</li> <li><b>High, TCP</b>—Number of high-loss priority TCP bytes dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> |
| Transmit rate     | Configured transmit rate of the scheduler. The rate is a percentage of the total interface bandwidth.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Rate Limit        | <p>Rate limiting configuration of the queue. Possible values are :</p> <ul style="list-style-type: none"> <li><b>None</b>—No rate limit.</li> <li><b>exact</b>—Queue transmits at the configured rate.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Buffer size       | Delay buffer size in the queue.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Priority          | Scheduling priority configured as <b>low</b> or <b>high</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Excess Priority   | Priority of the excess bandwidth traffic on a scheduler: <b>low</b> , <b>medium-low</b> , <b>medium-high</b> , <b>high</b> , or <b>none</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Drop profiles     | <p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li><b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li><b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li><b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li><b>Name</b>—Name of the drop profile.</li> <li><b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li><b>Fill Level</b>—Percentage fullness of a queue.</li> <li><b>Drop probability</b>—Drop probability at this fill level.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                              |
| Excess Priority   | Priority of the excess bandwidth traffic on a scheduler.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

Table 107: show class-of-service interface Output Fields (*continued*)

| Field Name                    | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Drop profiles</b>          | <p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li>• <b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li>• <b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li>• <b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li>• <b>Name</b>—Name of the drop profile.</li> <li>• <b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li>• <b>Fill Level</b>—Percentage fullness of a queue.</li> <li>• <b>Drop probability</b>—Drop probability at this fill level.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Adjustment information</b> | <p>Display the assignment of shaping-rate adjustments on a scheduler node or queue.</p> <ul style="list-style-type: none"> <li>• <b>Adjusting application</b>—Application that is performing the shaping-rate adjustment. <ul style="list-style-type: none"> <li>• The adjusting application can appear as <b>ancp LS-0</b>, which is the Junos OS Access Node Control Profile process (<b>ancpd</b>) that performs shaping-rate adjustments on schedule nodes.</li> <li>• The adjusting application can also appear as <b>pppoe</b>, which adjusts the shaping-rate and overhead-accounting class-of-service attributes on dynamic subscriber interfaces in a broadband access network based on access line parameters in Point-to-Point Protocol over Ethernet (PPPoE) Tags [TR-101]. This feature is supported on MPC/MIC interfaces on MX Series routers. The shaping rate is based on the actual-data-rate-downstream attribute. The overhead accounting value is based on the access-loop-encapsulation attribute and specifies whether the access loop uses Ethernet (frame mode) or ATM (cell mode).</li> </ul> </li> <li>• <b>Adjustment type</b>—Type of adjustment: <b>absolute</b> or <b>delta</b>.</li> <li>• <b>Configured shaping rate</b>—Shaping rate configured for the scheduler node or queue.</li> <li>• <b>Adjustment value</b>—Value of adjusted shaping rate.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment overhead-accounting mode</b>—Configured shaping mode: <b>frame</b> or <b>cell</b>.</li> <li>• <b>Adjustment overhead bytes</b>—Number of bytes that the ANCP agent adds to or subtracts from the actual downstream frame overhead before reporting the adjusted values to CoS.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment multicast index</b>—</li> </ul> |

## Sample Output

### show class-of-service interface (Physical)

```

user@host> show class-of-service interface so-0/2/3
Physical interface: so-0/2/3, Index: 135
Queues supported: 8, Queues in use: 4
Total non-default queues created: 4
Scheduler map: <default>, Index: 2032638653

Logical interface: fe-0/0/1.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000

```

| Object        | Name        | Type | Index |
|---------------|-------------|------|-------|
| Scheduler-map | <default>   |      | 27    |
| Rewrite       | exp-default | exp  | 21    |
| Classifier    | exp-default | exp  | 5     |

|                      |                      |     |   |
|----------------------|----------------------|-----|---|
| Classifier           | ipprec-compatibility | ip  | 8 |
| Forwarding-class-map | exp-default          | exp | 5 |

### show class-of-service interface (Logical)

```

user@host> show class-of-service interface so-0/2/3.0
Logical interface: so-0/2/3.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000

```

| Object               | Name                 | Type | Index |
|----------------------|----------------------|------|-------|
| Scheduler-map        | <default>            |      | 27    |
| Rewrite              | exp-default          | exp  | 21    |
| Classifier           | exp-default          | exp  | 5     |
| Classifier           | ipprec-compatibility | ip   | 8     |
| Forwarding-class-map | exp-default          | exp  | 5     |

### show class-of-service interface (Gigabit Ethernet)

```

user@host> show class-of-service interface ge-6/2/0
Physical interface: ge-6/2/0, Index: 175
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Input scheduler map: <default>, Index: 3
Chassis scheduler map: <default-chassis>, Index: 4

```

### show class-of-service interface (ANCP)

```

user@host> show class-of-service interface pp0.1073741842
Logical interface: pp0.1073741842, Index: 341

```

| Object                  | Name                    | Type      | Index |
|-------------------------|-------------------------|-----------|-------|
| Traffic-control-profile | TCP-CVLAN               | Output    | 12408 |
| Classifier              | dscp-ipv6-compatibility | dscp-ipv6 | 9     |
| Classifier              | ipprec-compatibility    | ip        | 13    |

```

Adjusting application: ancp LS-0
Adjustment type: absolute
Configured shaping rate: 4000000
Adjustment value: 11228000
Adjustment overhead-accounting mode: Frame Mode
Adjustment overhead bytes: 50
Adjustment target: node

```

### show class-of-service interface (PPPoE Interface)

```

user@host> show class-of-service interface pp0.1
Logical interface: pp0.1, Index: 85

```

| Object                  | Name                 | Type   | Index      |
|-------------------------|----------------------|--------|------------|
| Traffic-control-profile | tcp-pppoe.o.pp0.1    | Output | 2726446535 |
| Classifier              | ipprec-compatibility | ip     | 13         |

```

Adjusting application: PPPoE
Adjustment type: absolute
Adjustment value: 5000000
Adjustment overhead-accounting mode: cell
Adjustment target: node

```

### show class-of-service interface (T4000 Routers with Type 5 FPCs)

```

user@host> show class-of-service interface xe-4/0/0
Physical interface: xe-4/0/0, Index: 153
Queues supported: 8, Queues in use: 4
Shaping rate: 5000000000 bps
Scheduler map: <default>, Index: 2

```

```

Congestion-notification: Disabled

Logical interface: xe-4/0/0.0, Index: 77
  Object      Name      Type
Index
  Classifier  ipprec-compatibility ip
13

```

### show class-of-service interface detail

```
user@host> show class-of-service interface ge-0/3/0 detail
```

```

Physical interface: ge-0/3/0, Enabled, Physical link is Up
  Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000

```

```

Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps
Scheduler map: interface-scheduler-map, Index: 58414
Input shaping rate: 10000 bps
Input scheduler map: scheduler-map, Index: 15103
Chassis scheduler map: <default-chassis>, Index: 4
Congestion-notification: Disabled

```

```

Logical interface ge-0/3/0.0
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
  inet
  mpls

```

| Interface  | Admin | Link | Proto | Input Filter  | Output Filter  |
|------------|-------|------|-------|---------------|----------------|
| ge-0/3/0.0 | up    | up   | inet  |               |                |
|            |       |      | mpls  |               |                |
| Interface  | Admin | Link | Proto | Input Policer | Output Policer |
| ge-0/3/0.0 | up    | up   | inet  |               |                |
|            |       |      | mpls  |               |                |

```

Logical interface: ge-0/3/0.0, Index: 68
  Object      Name      Type      Index
  Rewrite     exp-default exp (mpls-any) 33
  Classifier   exp-default exp          10
  Classifier   ipprec-compatibility ip          13

```

```

Logical interface ge-0/3/0.1
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2
  inet

```

| Interface  | Admin | Link | Proto | Input Filter  | Output Filter  |
|------------|-------|------|-------|---------------|----------------|
| ge-0/3/0.1 | up    | up   | inet  |               |                |
| Interface  | Admin | Link | Proto | Input Policer | Output Policer |
| ge-0/3/0.1 | up    | up   | inet  |               |                |

```

Logical interface: ge-0/3/0.1, Index: 69
  Object      Name      Type      Index
  Classifier   ipprec-compatibility ip          13

```

### show class-of-service interface comprehensive

```
user@host> show class-of-service interface ge-0/3/0 comprehensive
```

```

Physical interface: ge-0/3/0, Enabled, Physical link is Up
  Interface index: 138, SNMP ifIndex: 601, Generation: 141
  Link-level type: Ethernet, MTU: 1518, Speed: 1000Mbps, BPDU Error: None,
  MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
  control: Enabled,
  Auto-negotiation: Enabled, Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Schedulers     : 256
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:14:f6:f4:b4:5d, Hardware address: 00:14:f6:f4:b4:5d
  Last flapped   : 2010-09-07 06:35:22 PDT (15:14:42 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
IPv6 total statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Ingress traffic statistics at Packet Forwarding Engine:
  Input bytes : 0 0 bps
  Input packets: 0 0 pps
  Drop bytes : 0 0 bps
  Drop packets: 0 0 pps
Label-switched interface (LSI) traffic statistics:
  Input bytes : 0 0 bps
  Input packets: 0 0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runt: 0, Policed discards: 0, L3
  incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
  Resource errors: 0
Output errors:
  Carrier transitions: 5, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 5 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 af3                0                0                0
  1 af2                0                0                0
  2 ef2                0                0                0
  3 ef1                0                0                0

Egress queues: 4 supported, 5 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 af3                0                0                0
  1 af2                0                0                0
  2 ef2                0                0                0
  3 ef1                0                0                0

```

```

Active alarms : None
Active defects : None
MAC statistics:
    Receive      Transmit
    Total octets      0          0
    Total packets     0          0
    Unicast packets   0          0
    Broadcast packets 0          0
    Multicast packets 0          0
    CRC/Align errors  0          0
    FIFO errors       0          0
    MAC control frames 0          0
    MAC pause frames  0          0
    Oversized frames  0
    Jabber frames     0
    Fragment frames   0
    VLAN tagged frames 0
    Code violations    0
Filter statistics:
    Input packet count      0
    Input packet rejects    0
    Input DA rejects        0
    Input SA rejects        0
    Output packet count     0
    Output packet pad count 0
    Output packet error count 0
    CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
    Negotiation status: Complete
    Link partner:
        Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote fault:
OK
    Local resolution:
        Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
    Destination slot: 0
CoS information:
    Direction : Output
    CoS transmit queue      Bandwidth      Buffer Priority
Limit
    %      bps      %      usec
    2 ef2      39      19500      0      120      high
none
    Direction : Input
    CoS transmit queue      Bandwidth      Buffer Priority
Limit
    %      bps      %      usec
    0 af3      30      3000      45      0      low
none

Physical interface: ge-0/3/0, Enabled, Physical link is Up
    Interface index: 138, SNMP ifIndex: 601
Forwarding classes: 16 supported, 5 in use
Ingress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
Queued:
    Packets      :      0      0 pps
    Bytes        :      0      0 bps
Transmitted:
    Packets      :      0      0 pps
    Bytes        :      0      0 bps
Tail-dropped packets : Not Available

```



```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Forwarding classes: 16 supported, 5 in use
Egress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets : 0 0 pps

```

```

    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets   :                0                0 pps
    RL-dropped bytes     :                0                0 bps
    RED-dropped packets  :                0                0 pps
    RED-dropped bytes    :                0                0 bps
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets   :                0                0 pps
    RL-dropped bytes     :                0                0 bps
    RED-dropped packets  :                0                0 pps
    RED-dropped bytes    :                0                0 bps

Packet Forwarding Engine Chassis Queues:
Queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets :                0                0 pps
    RED-dropped packets  : Not Available
    RED-dropped bytes    : Not Available
Queue: 1, Forwarding classes: af2
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets :                0                0 pps
    RED-dropped packets  : Not Available
    RED-dropped bytes    : Not Available
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets :                0                0 pps
    RED-dropped packets  : Not Available
    RED-dropped bytes    : Not Available
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets              :            108546                0 pps
    Bytes                :        12754752            376 bps
  Transmitted:
    Packets              :            108546                0 pps
    Bytes                :        12754752            376 bps

```

```

Tail-dropped packets : 0 0 pps
RED-dropped packets : Not Available
RED-dropped bytes : Not Available

```

```

Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps

```

```
Scheduler map: interface-scheduler-map, Index: 58414
```

```

Scheduler: ef2, Forwarding class: ef2, Index: 39155
  Transmit rate: 39 percent, Rate Limit: none, Buffer size: 120 us, Buffer
  Limit: none, Priority: high
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Input shaping rate: 10000 bps
  Input scheduler map: scheduler-map

```

```
Scheduler map: scheduler-map, Index: 15103
```

```

Scheduler: af3, Forwarding class: af3, Index: 35058
  Transmit rate: 30 percent, Rate Limit: none, Buffer size: 45 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       40582  green
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       18928  yellow
  Drop profile: green, Type: discrete, Index: 40582
    Fill level  Drop probability
    50          0
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: yellow, Type: discrete, Index: 18928
    Fill level  Drop probability
    50          0
    100         100

```

```

Chassis scheduler map: < default-drop-profile>
Scheduler map: < default-drop-profile>, Index: 4

Scheduler: < default-drop-profile>, Forwarding class: af3, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100

Scheduler: < default-drop-profile>, Forwarding class: af2, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100

Scheduler: < default-drop-profile>, Forwarding class: ef2, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100

```

```

    100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100      100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100      100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100      100

Scheduler: < default-drop-profile>, Forwarding class: ef1, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
Drop profile: , Type: discrete, Index: 1
  Fill level  Drop probability
    100      100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100      100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100      100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100      100
  Congestion-notification: Disabled
Forwarding class
priority Policing priority      ID      Queue  Restricted queue  Fabric
af3      normal                0       0           0           low
af2      normal                1       1           1           low
ef2      normal                2       2           2           high
ef1      normal                3       3           3           high
af1      normal                4       4           0           low

Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152) (Generation 159)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Local statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Transit statistics:
    Input bytes : 0 0 bps

```

```

Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 172, Route table: 0
  Flags: Sendbcst-pkt-to-re
  Input Filters: filter-in-ge-0/3/0.0-i,
  Policer: Input: p1-ge-0/3/0.0-inet-i
Protocol mpls, MTU: 1488, Maximum labels: 3, Generation: 173, Route table: 0
  Flags: Is-Primary
  Output Filters: exp-filter,,,,,

Logical interface ge-1/2/0.0 (Index 347) (SNMP ifIndex 638) (Generation 156)

Forwarding class ID Queue Restricted queue Fabric priority Policing priority
  SPU priority
best-effort 0 0 0 low normal
  low

Aggregate Forwarding-class statistics per forwarding-class
Aggregate Forwarding-class statistics:
Forwarding-class statistics:

Forwarding-class best-effort statistics:
  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:
  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

IPv4 protocol forwarding-class statistics:
Forwarding-class statistics:
Forwarding-class best-effort statistics:

  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:
  Input unicast bytes: 0

```

```

Output unicast bytes:    0
Input unicast packets:  0
Output unicast packets: 0

```

```

Input multicast bytes:   0
Output multicast bytes:  0
Input multicast packets: 0
Output multicast packets: 0

```

```

IPv6 protocol forwarding-class statistics:
Forwarding-class statistics:
  Forwarding-class best-effort statistics:

```

```

Input unicast bytes:    0
Output unicast bytes:   0
Input unicast packets:  0
Output unicast packets: 0

```

```

Input multicast bytes:   0
Output multicast bytes:  0
Input multicast packets: 0
Output multicast packets: 0

```

```
Forwarding-class expedited-forwarding statistics:
```

```

Input unicast bytes:    0
Output unicast bytes:   0
Input unicast packets:  0
Output unicast packets: 0

```

```
Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152)
```

```
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
```

```
Input packets : 0
```

```
Output packets: 0
```

| Interface  | Admin | Link | Proto | Input Filter           | Output Filter |
|------------|-------|------|-------|------------------------|---------------|
| ge-0/3/0.0 | up    | up   | inet  | filter-in-ge-0/3/0.0-i |               |
|            |       |      | mpls  |                        | exp-filter    |

| Interface  | Admin | Link | Proto | Input Policier       | Output Policier |
|------------|-------|------|-------|----------------------|-----------------|
| ge-0/3/0.0 | up    | up   | inet  | p1-ge-0/3/0.0-inet-i |                 |
|            |       |      | mpls  |                      |                 |

```
Filter: filter-in-ge-0/3/0.0-i
```

```
Counters:
```

| Name                         | Bytes | Packets |
|------------------------------|-------|---------|
| count-filter-in-ge-0/3/0.0-i | 0     | 0       |

```
Filter: exp-filter
```

```
Counters:
```

| Name                  | Bytes | Packets |
|-----------------------|-------|---------|
| count-exp-seven-match | 0     | 0       |
| count-exp-zero-match  | 0     | 0       |

```
Policers:
```

| Name                 | Packets |
|----------------------|---------|
| p1-ge-0/3/0.0-inet-i | 0       |

```
Logical interface: ge-0/3/0.0, Index: 68
```

| Object  | Name        | Type           | Index |
|---------|-------------|----------------|-------|
| Rewrite | exp-default | exp (mpls-any) | 33    |

Rewrite rule: exp-default, Code point type: exp, Index: 33

| Forwarding class | Loss priority | Code point |       |
|------------------|---------------|------------|-------|
| af3              | low           | 000        |       |
| af3              | high          | 001        |       |
| af2              | low           | 010        |       |
| af2              | high          | 011        |       |
| ef2              | low           | 100        |       |
| ef2              | high          | 101        |       |
| ef1              | low           | 110        |       |
| ef1              | high          | 111        |       |
| Object           | Name          | Type       | Index |
| Classifier       | exp-default   | exp        | 10    |

Classifier: exp-default, Code point type: exp, Index: 10

| Code point | Forwarding class     | Loss priority |       |
|------------|----------------------|---------------|-------|
| 000        | af3                  | low           |       |
| 001        | af3                  | high          |       |
| 010        | af2                  | low           |       |
| 011        | af2                  | high          |       |
| 100        | ef2                  | low           |       |
| 101        | ef2                  | high          |       |
| 110        | ef1                  | low           |       |
| 111        | ef1                  | high          |       |
| Object     | Name                 | Type          | Index |
| Classifier | ipprec-compatibility | ip            | 13    |

Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13

| Code point       | Forwarding class | Loss priority |                  |        |
|------------------|------------------|---------------|------------------|--------|
| 000              | af3              | low           |                  |        |
| 001              | af3              | high          |                  |        |
| 010              | af3              | low           |                  |        |
| 011              | af3              | high          |                  |        |
| 100              | af3              | low           |                  |        |
| 101              | af3              | high          |                  |        |
| 110              | ef1              | low           |                  |        |
| 111              | ef1              | high          |                  |        |
| Forwarding class | ID               | Queue         | Restricted queue | Fabric |
| priority         |                  |               |                  |        |
| af3              | 0                | 0             | 0                | low    |
| normal           |                  |               |                  |        |
| af2              | 1                | 1             | 1                | low    |
| normal           |                  |               |                  |        |
| ef2              | 2                | 2             | 2                | high   |
| normal           |                  |               |                  |        |
| ef1              | 3                | 3             | 3                | high   |
| normal           |                  |               |                  |        |
| af1              | 4                | 4             | 0                | low    |
| normal           |                  |               |                  |        |

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154) (Generation 160)

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2

Traffic statistics:

|                   |   |
|-------------------|---|
| Input bytes :     | 0 |
| Output bytes :    | 0 |
| Input packets:    | 0 |
| Output packets:   | 0 |
| Local statistics: |   |
| Input bytes :     | 0 |



```

Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 174, Route table: 0
Flags: Sendbcst-pkt-to-re

```

```

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2
Input packets : 0
Output packets: 0

```

```

Interface      Admin Link Proto Input Filter      Output Filter
ge-0/3/0.1     up   up   mpls
Interface      Admin Link Proto Input Policer      Output Policer
ge-0/3/0.1     up   up   mpls

```

```
Logical interface: ge-0/3/0.1, Index: 69
```

| Object     | Name                 | Type | Index |
|------------|----------------------|------|-------|
| Classifier | ipprec-compatibility | ip   | 13    |

```
Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13
```

| Code point | Forwarding class | Loss priority |
|------------|------------------|---------------|
| 000        | af3              | low           |
| 001        | af3              | high          |
| 010        | af3              | low           |
| 011        | af3              | high          |
| 100        | af3              | low           |
| 101        | af3              | high          |
| 110        | ef1              | low           |
| 111        | ef1              | high          |

| Forwarding class | ID | Queue | Restricted queue | Fabric |
|------------------|----|-------|------------------|--------|
| priority         |    |       |                  |        |
| af3              | 0  | 0     | 0                | low    |
| af2              | 1  | 1     | 1                | low    |
| ef2              | 2  | 2     | 2                | high   |
| ef1              | 3  | 3     | 3                | high   |
| af1              | 4  | 4     | 0                | low    |

### show class-of-service interface (ACX Series Routers)

```

user@host-g11# show class-of-service interface
Physical interface: at-0/0/0, Index: 130
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled

```

Logical interface: at-0/0/0.0, Index: 69

Logical interface: at-0/0/0.32767, Index: 70

Physical interface: at-0/0/1, Index: 133

Queues supported: 4, Queues in use: 4

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Logical interface: at-0/0/1.0, Index: 71

Logical interface: at-0/0/1.32767, Index: 72

Physical interface: ge-0/1/0, Index: 146

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object     | Name         | Type      | Index |
|------------|--------------|-----------|-------|
| Rewrite    | dscp-default | dscp      | 31    |
| Classifier | d1           | dscp      | 11331 |
| Classifier | ci           | ieee8021p | 583   |

Logical interface: ge-0/1/0.0, Index: 73

| Object  | Name       | Type           | Index |
|---------|------------|----------------|-------|
| Rewrite | custom-exp | exp (mpls-any) | 46413 |

Logical interface: ge-0/1/0.1, Index: 74

Logical interface: ge-0/1/0.32767, Index: 75

Physical interface: ge-0/1/1, Index: 147

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object     | Name                 | Type | Index |
|------------|----------------------|------|-------|
| Classifier | ipprec-compatibility | ip   | 13    |

Logical interface: ge-0/1/1.0, Index: 76

Physical interface: ge-0/1/2, Index: 148

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object     | Name | Type              | Index |
|------------|------|-------------------|-------|
| Rewrite    | ri   | ieee8021p (outer) | 35392 |
| Classifier | ci   | ieee8021p         | 583   |

Physical interface: ge-0/1/3, Index: 149

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object     | Name                 | Type | Index |
|------------|----------------------|------|-------|
| Classifier | ipprec-compatibility | ip   | 13    |

Logical interface: ge-0/1/3.0, Index: 77

| Object  | Name        | Type           | Index |
|---------|-------------|----------------|-------|
| Rewrite | custom-exp2 | exp (mpls-any) | 53581 |

Physical interface: ge-0/1/4, Index: 150

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

```

Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Physical interface: ge-0/1/5, Index: 151
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Physical interface: ge-0/1/6, Index: 152
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Physical interface: ge-0/1/7, Index: 153
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  d1        dscp      11331

Physical interface: ge-0/2/0, Index: 154
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Physical interface: ge-0/2/1, Index: 155
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Logical interface: ge-0/2/1.0, Index: 78

Logical interface: ge-0/2/1.32767, Index: 79

Physical interface: xe-0/3/0, Index: 156
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Logical interface: xe-0/3/0.0, Index: 80

Physical interface: xe-0/3/1, Index: 157
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Logical interface: xe-0/3/1.0, Index: 81

```

```
[edit]
user@host-g11#
```

#### show class-of-service interface (PPPoE Subscriber Interface for Enhanced Subscriber Management)

```
user@host> show class-of-service interface pp0.3221225474
  Logical interface: pp0.3221225475, Index: 3221225475
Object      Name                               Type      Index
Traffic-control-profile TC_PROF_100_199_SERIES_UID1006 Output    4294967312
Scheduler-map      SMAP-1_UID1002      Output    4294967327
Rewrite-Output     ieee-rewrite        ieee8021p 60432
Rewrite-Output     rule1               ip        50463

  Adjusting application: PPPoE IA tags
    Adjustment type: absolute
    Configured shaping rate: 11000000
    Adjustment value: 5000000
    Adjustment target: node

  Adjusting application: ucac
    Adjustment type: delta
    Configured shaping rate: 5000000
    Adjustment value: 100000
    Adjustment target: node
```

## show class-of-service multi-destination

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service multi-destination                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | For each class-of-service (CoS) multideestination classifier, display the classifier type.                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                  | <b>none</b> —Display all multideestination classifiers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Defining CoS Multideestination (Multicast, Broadcast, DLF) BA Classifiers</i></li> <li>• <i>Example: Configuring Multideestination (Multicast, Broadcast, DLF) Classifiers</i></li> <li>• <i>Understanding CoS Classifiers</i></li> <li>• <i>Understanding CoS Classifiers</i></li> <li>• <a href="#">Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 68</a></li> <li>• <i>Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces</i></li> </ul> |
| <b>Output Fields</b>            | <a href="#">Table 108 on page 683</a> describes the output fields for the <b>show class-of-service multi-destination</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                   |

**Table 108: show class-of-service multi-destination Output Fields**

| Field Name       | Field Description                                          |
|------------------|------------------------------------------------------------|
| Family ethernet  | Family to which the classifier belongs.                    |
| Classifier Name  | Name of the classifier.                                    |
| Classifier Type  | Type of the classifier: <b>dscp</b> or <b>ieee-802.1</b> . |
| Classifier Index | Internal index of the classifier.                          |

## Sample Output

### show class-of-service multi-destination

```
user@switch> show class-of-service multi-destination
```

```
Family ethernet:
Classifier Name      Classifier Type      Classifier Index
ba-mcast-classifier  ieee-802.1          62376
```

## show class-of-service rewrite-rule

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service rewrite-rule<br><name <i>name</i> ><br><type <i>type</i> >                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Display the mapping of forwarding classes and loss priority to code point values.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <p><b>none</b>—Display all rewrite rules.</p> <p><b>name <i>name</i></b>—(Optional) Display the specified rewrite rule.</p> <p><b>type <i>type</i></b>—(Optional) Display the rewrite rule of the specified type. The rewrite rule type can be one of the following:</p> <ul style="list-style-type: none"> <li><b>dscp</b>—For IPv4 traffic.</li> <li><b>dscp-ipv6</b>—For IPv6 traffic.</li> <li><b>exp</b>—For MPLS traffic.</li> <li><b>frame-relay-de</b>— For Frame Relay traffic.</li> <li><b>ieee-802.1</b>—For Layer 2 traffic.</li> <li><b>inet-precedence</b>—For IPv4 traffic.</li> </ul> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><a href="#">Rewrite Rules Overview</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service rewrite-rule type dscp on page 685</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Output Fields</b>            | <a href="#">Table 109 on page 684</a> describes the output fields for the <b>show class-of-service rewrite-rule</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                  |

**Table 109: show class-of-service rewrite-rule Output Fields**

| Field Name              | Field Description                                                                                                                          |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Rewrite rule</b>     | Name of the rewrite rule.                                                                                                                  |
| <b>Code point type</b>  | Type of rewrite rule: <b>dscp</b> , <b>dscp-ipv6</b> , <b>exp</b> , <b>frame-relay-de</b> , or <b>inet-precedence</b> .                    |
| <b>Forwarding class</b> | Classification of a packet affecting the forwarding, scheduling, and marking policies applied as the packet transits the router or switch. |
| <b>Index</b>            | Internal index for this particular rewrite rule.                                                                                           |

Table 109: show class-of-service rewrite-rule Output Fields (*continued*)

| Field Name    | Field Description            |
|---------------|------------------------------|
| Loss priority | Loss priority for rewriting. |
| Code point    | Code point value to rewrite. |

## Sample Output

### show class-of-service rewrite-rule type dscp

```

user@host> show class-of-service rewrite-rule type dscp
Rewrite rule: dscp-default, Code point type: dscp
  Forwarding class      Loss priority      Code point
  gold                  high              000000
  silver                low               110000
  silver                high              111000
  bronze                low               001010
  bronze                high              001100
  lead                  high              101110

Rewrite rule: abc-dscp-rewrite, Code point type: dscp, Index: 3245
  Forwarding class      Loss priority      Code point
  gold                  low               000111
  gold                  high              001010
  silver                low               110000
  silver                high              111000
  bronze                high              001100
  lead                  low               101110
  lead                  high              110111

```





## Operational Commands (Scheduling)

- [Monitoring CoS Scheduler Maps on page 687](#)
- [show class-of-service drop-profile](#)
- [show class-of-service forwarding-table](#)
- [show class-of-service forwarding-table drop-profile](#)
- [show class-of-service forwarding-table scheduler-map](#)
- [show class-of-service interface](#)
- [show class-of-service scheduler-map](#)
- [show class-of-service traffic-control-profile](#)
- [show interfaces queue](#)
- [show interfaces voq](#)

### Monitoring CoS Scheduler Maps

---

**Purpose** Use the monitoring functionality to display assignments of CoS forwarding classes to schedulers.

**Action** To monitor CoS scheduler maps in the CLI, enter the CLI command:

```
user@switch> show class-of-service scheduler-map
```

To monitor a specific scheduler map in the CLI, enter the CLI command:

```
user@switch> show class-of-service scheduler-map scheduler-map-name
```

**Meaning** [Table 110 on page 687](#) summarizes key output fields for CoS scheduler maps.

**Table 110: Summary of Key CoS Scheduler Maps Output Fields**

| Field         | Values                                                                   |
|---------------|--------------------------------------------------------------------------|
| Scheduler map | Name of a scheduler map that maps forwarding classes to schedulers.      |
| Index         | Index of a specific object—scheduler maps, schedulers, or drop profiles. |

Table 110: Summary of Key CoS Scheduler Maps Output Fields (*continued*)

| Field            | Values                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Scheduler        | Name of a scheduler that controls queue properties such as bandwidth and scheduling priority.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Forwarding class | Name(s) of the forwarding class(es) to which the scheduler is mapped.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Transmit rate    | Guaranteed minimum bandwidth configured on the queue mapped to the scheduler. On strict-high priority queues on QFX10000 switches, defines the maximum amount of traffic on the queue that is treated as strict-high priority traffic.                                                                                                                                                                                                                                                                                                                                                                              |
| Priority         | <p>Scheduling priority of traffic on a queue:</p> <ul style="list-style-type: none"> <li>• <b>strict-high</b>—Packets on a strict-high priority queue are transmitted first, before all other traffic, up to the configured maximum bandwidth (shaping rate). On QFX3500, QFX3600, EX4600, and OCX series switches, and on QFabric system, only one queue can be configured as <b>strict-high</b> priority. On QFX10000 switches, you can configure more than one strict-high priority queue.</li> <li>• <b>low</b>—Packets in this queue are transmitted after packets in the <b>strict-high</b> queue.</li> </ul> |
| Drop Profiles    | Name and index of a drop profile that is mapped to a specific loss priority and protocol pair. The drop profile determines the way best effort queues drop packets during periods of congestion.                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Loss Priority    | Packet loss priority mapped to the drop profile. You can configure different drop profiles for <b>low</b> , <b>medium-high</b> , and <b>high</b> loss priority traffic.                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Protocol         | Transport protocol of the drop profile for the particular priority.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Name             | Name of the drop profile.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## show class-of-service drop-profile

|                                 |                                                                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show class-of-service drop-profile</code><br><code>&lt;profile-name <i>profile-name</i>&gt;</code>                                                                                                                                                           |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.0 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series. |
| <b>Description</b>              | Display data points for each class-of-service (CoS) random early detection (RED) drop profile.                                                                                                                                                                     |
| <b>Options</b>                  | <b>none</b> —Display all drop profiles.<br><br><b>profile-name <i>profile-name</i></b> —(Optional) Display the specified profile only.                                                                                                                             |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                               |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service drop-profile on page 690</a><br><a href="#">show class-of-service drop-profile (EX4200 Switch) on page 690</a><br><a href="#">show class-of-service drop-profile (EX8200 Switch) on page 690</a>                                 |
| <b>Output Fields</b>            | <a href="#">Table 111 on page 689</a> describes the output fields for the <b>show class-of-service drop-profile</b> command. Output fields are listed in the approximate order in which they appear.                                                               |

**Table 111: show class-of-service drop-profile Output Fields**

| Field Name              | Field Description                                                                                                                                                                                                                     |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Drop profile</b>     | Name of a drop profile.                                                                                                                                                                                                               |
| <b>Type</b>             | Type of drop profile: <ul style="list-style-type: none"> <li>• <b>discrete</b> (default)</li> <li>• <b>interpolated</b> (EX8200 switches, QFX Series switches, QFabric systems, EX4600 switches, OCX Series switches only)</li> </ul> |
| <b>Index</b>            | Internal index of this drop profile.                                                                                                                                                                                                  |
| <b>Fill Level</b>       | Percentage fullness of a queue.                                                                                                                                                                                                       |
| <b>Drop probability</b> | Drop probability at this fill level.                                                                                                                                                                                                  |

## Sample Output

### show class-of-service drop-profile

```
user@host> show class-of-service drop-profile
Drop profile: <default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
    100         100
Drop profile: user-drop-profile, Type: interpolated, Index: 2989
  Fill level    Drop probability
     0           0
     1           1
     2           2
     4           4
     5           5
     6           6
     8           8
    10          10
    12          15
    14          20
    15          23
... 64 entries total
    90          96
    92          96
    94          97
    95          98
    96          98
    98          99
    99          99
   100         100
```

### show class-of-service drop-profile (EX4200 Switch)

```
user@switch> show class-of-service drop-profile
Drop profile: <default-drop-profile>, Type: discrete, Index: 1
  Fill level
    100
Drop profile: dp1, Type: discrete, Index: 40496
  Fill level
    10
```

### show class-of-service drop-profile (EX8200 Switch)

```
user@switch> show class-of-service drop-profile
Drop profile: <default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
    100         100
Drop profile: dp1, Type: interpolated, Index: 40496
  Fill level    Drop probability
     0           0
     1          80
     2          90
     4          90
     5          90
     6          90
     8          90
    10          90
    12          91
    14          91
    15          91
    16          91
```

|                                                 |                  |
|-------------------------------------------------|------------------|
| 18                                              | 91               |
| 20                                              | 91               |
| 22                                              | 92               |
| 24                                              | 92               |
| 25                                              | 92               |
| 26                                              | 92               |
| 28                                              | 92               |
| 30                                              | 92               |
| 32                                              | 93               |
| 34                                              | 93               |
| 35                                              | 93               |
| 36                                              | 93               |
| 38                                              | 93               |
| 40                                              | 93               |
| 42                                              | 94               |
| 44                                              | 94               |
| 45                                              | 94               |
| 46                                              | 94               |
| 48                                              | 94               |
| 49                                              | 94               |
| 51                                              | 95               |
| 52                                              | 95               |
| 54                                              | 95               |
| 55                                              | 95               |
| 56                                              | 95               |
| 58                                              | 95               |
| 60                                              | 95               |
| 62                                              | 96               |
| 64                                              | 96               |
| 65                                              | 96               |
| 66                                              | 96               |
| 68                                              | 96               |
| 70                                              | 96               |
| 72                                              | 97               |
| 74                                              | 97               |
| 75                                              | 97               |
| 76                                              | 97               |
| 78                                              | 97               |
| 80                                              | 97               |
| 82                                              | 98               |
| 84                                              | 98               |
| 85                                              | 98               |
| 86                                              | 98               |
| 88                                              | 98               |
| 90                                              | 98               |
| 92                                              | 99               |
| 94                                              | 99               |
| 95                                              | 99               |
| 96                                              | 99               |
| 98                                              | 99               |
| 99                                              | 99               |
| 100                                             | 100              |
| Drop profile: dp2, Type: discrete, Index: 40499 |                  |
| Fill level                                      | Drop probability |
| 10                                              | 5                |
| 50                                              | 50               |

## show class-of-service forwarding-table

---

|                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| List of Syntax                               | <a href="#">Syntax on page 692</a><br><a href="#">Syntax (TX Matrix and TX Matrix Plus Router) on page 692</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Syntax                                       | show class-of-service forwarding-table                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Syntax (TX Matrix and TX Matrix Plus Router) | show class-of-service forwarding-table<br><lcc number>   <sfc number>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Release Information                          | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Description                                  | Display the entire class-of-service (CoS) configuration as it exists in the forwarding table. Executing this command is equivalent to executing all <b>show class-of-service forwarding-table</b> commands in succession.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Options                                      | <p><b>lcc number</b>—(TX Matrix and TX Matrix Plus router only) (Optional) On a TX Matrix router, display the forwarding table configuration for a specific T640 router (or line-card chassis) configured in a routing matrix. On a TX Matrix Plus router, display the forwarding table configuration for a specific router (or line-card chassis) configured in the routing matrix.</p> <p>Replace <i>number</i> with the following values depending on the LCC configuration:</p> <ul style="list-style-type: none"><li>• 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.</li><li>• 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.</li><li>• 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.</li><li>• 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.</li></ul> <p><b>sfc number</b>—(TX Matrix Plus routers only) (Optional) Display the forwarding table configuration for the TX Matrix Plus router. Replace <i>number</i> with 0.</p> |
| Required Privilege Level                     | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| List of Sample Output                        | <a href="#">show class-of-service forwarding-table on page 693</a><br><a href="#">show class-of-service forwarding-table lcc (TX Matrix Plus Router) on page 694</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Output Fields                                | See the output field descriptions for <b>show class-of-service forwarding-table</b> commands: <ul style="list-style-type: none"><li>• <a href="#">show class-of-service forwarding-table classifier</a></li><li>• <a href="#">show class-of-service forwarding-table classifier mapping</a></li><li>• <a href="#">show class-of-service forwarding-table drop-profile</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

- *show class-of-service forwarding-table fabric scheduler-map*
- *show class-of-service forwarding-table rewrite-rule*
- *show class-of-service forwarding-table rewrite-rule mapping*
- *show class-of-service forwarding-table scheduler-map*

## Sample Output

### show class-of-service forwarding-table

```

user@host> show class-of-service forwarding-table
Classifier table index: 9, # entries: 8, Table type: EXP
Entry #   Code point   Forwarding-class #   PLP
0         000           0                   0
1         001           0                   1
2         010           1                   0
3         011           1                   1
4         100           2                   0
5         101           2                   1
6         110           3                   0
7         111           3                   1

Interface      Index      Table Index/      Q num      Table type
sp-0/0/0.1001   66         11               11         IPv4 precedence
sp-0/0/0.2001   67         11               11         IPv4 precedence
sp-0/0/0.16383  68         11               11         IPv4 precedence
fe-0/0/0.0      69         11               11         IPv4 precedence

Interface: sp-0/0/0 (Index: 129, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Interface: fe-0/0/0 (Index: 137, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Interface: fe-0/0/1 (Index: 138, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
  Priority low

```

PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

...

RED drop profile index: 1, # entries: 1

| Entry | Fullness(%) | Drop<br>Probability(%) |
|-------|-------------|------------------------|
| 0     | 100         | 100                    |

### show class-of-service forwarding-table lcc (TX Matrix Plus Router)

user@host> show class-of-service forwarding-table lcc 0  
lcc0-re0:

-----

Classifier table index: 9, # entries: 64, Table type: IPv6 DSCP

| Entry # | Code point | Forwarding-class # | PLP |
|---------|------------|--------------------|-----|
| 0       | 000000     | 0                  | 0   |
| 1       | 000001     | 0                  | 0   |
| 2       | 000010     | 0                  | 0   |
| 3       | 000011     | 0                  | 0   |
| 4       | 000100     | 0                  | 0   |
| 5       | 000101     | 0                  | 0   |
| 6       | 000110     | 0                  | 0   |
| 7       | 000111     | 0                  | 0   |
| 8       | 001000     | 0                  | 0   |
| 9       | 001001     | 0                  | 0   |
| 10      | 001010     | 0                  | 0   |
| 11      | 001011     | 0                  | 0   |
| 12      | 001100     | 0                  | 0   |
| 13      | 001101     | 0                  | 0   |
| 14      | 001110     | 0                  | 0   |
| 15      | 001111     | 0                  | 0   |
| 16      | 010000     | 0                  | 0   |
| 17      | 010001     | 0                  | 0   |
| 18      | 010010     | 0                  | 0   |
| 19      | 010011     | 0                  | 0   |
| 20      | 010100     | 0                  | 0   |
| 21      | 010101     | 0                  | 0   |
| 22      | 010110     | 0                  | 0   |
| 23      | 010111     | 0                  | 0   |
| 24      | 011000     | 0                  | 0   |
| 25      | 011001     | 0                  | 0   |
| 26      | 011010     | 0                  | 0   |
| 27      | 011011     | 0                  | 0   |
| 28      | 011100     | 0                  | 0   |
| 29      | 011101     | 0                  | 0   |
| 30      | 011110     | 0                  | 0   |
| 31      | 011111     | 0                  | 0   |
| 32      | 100000     | 0                  | 0   |
| 33      | 100001     | 0                  | 0   |
| 34      | 100010     | 0                  | 0   |
| 35      | 100011     | 0                  | 0   |
| 36      | 100100     | 0                  | 0   |
| 37      | 100101     | 0                  | 0   |
| 38      | 100110     | 0                  | 0   |
| 39      | 100111     | 0                  | 0   |
| 40      | 101000     | 0                  | 0   |
| 41      | 101001     | 0                  | 0   |
| 42      | 101010     | 0                  | 0   |
| 43      | 101011     | 0                  | 0   |



|     |        |   |   |
|-----|--------|---|---|
| 44  | 101100 | 0 | 0 |
| 45  | 101101 | 0 | 0 |
| 46  | 101110 | 0 | 0 |
| ... |        |   |   |

## show class-of-service forwarding-table drop-profile

|                                 |                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service forwarding-table drop-profile                                                                                                                                                                   |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                          |
| <b>Description</b>              | Display the data points of all random early detection (RED) drop profiles as they exist in the forwarding table.                                                                                                      |
| <b>Options</b>                  | This command has no options.                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                  |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service forwarding-table drop-profile on page 696</a>                                                                                                                                       |
| <b>Output Fields</b>            | <a href="#">Table 112 on page 696</a> describes the output fields for the <b>show class-of-service forwarding-table drop-profile</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 112: show class-of-service forwarding-table drop-profile Output Fields**

| Field Name             | Field Description                                         |
|------------------------|-----------------------------------------------------------|
| RED drop profile index | Index of this drop profile.                               |
| # entries              | Number of entries in a particular RED drop profile index. |
| Entry                  | Drop profile entry number.                                |
| Fullness(%)            | Percentage fullness of a queue.                           |
| Drop probability(%)    | Drop probability at this fill level.                      |

### Sample Output

#### show class-of-service forwarding-table drop-profile

```

user@host> show class-of-service forwarding-table drop-profile
RED drop profile index: 4, # entries: 1
      Drop
Entry    Fullness(%)  Probability(%)
  0         100           100

RED drop profile index: 8742, # entries: 3
      Drop
Entry    Fullness(%)  Probability(%)
  0         10           10
  1         20           20
  2         30           30

```

RED drop profile index: 24627, # entries: 64

| Drop  |             |                |
|-------|-------------|----------------|
| Entry | Fullness(%) | Probability(%) |
| 0     | 0           | 0              |
| 1     | 1           | 1              |
| 2     | 2           | 2              |
| 3     | 4           | 4              |
| ...   |             |                |
| 61    | 98          | 99             |
| 62    | 99          | 99             |
| 63    | 100         | 100            |

RED drop profile index: 25393, # entries: 64

| Drop  |             |                |
|-------|-------------|----------------|
| Entry | Fullness(%) | Probability(%) |
| 0     | 0           | 0              |
| 1     | 1           | 1              |
| 2     | 2           | 2              |
| 3     | 4           | 4              |
| ...   |             |                |
| 61    | 98          | 98             |
| 62    | 99          | 99             |
| 63    | 100         | 100            |

## show class-of-service forwarding-table scheduler-map

|                                 |                                                                                                                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service forwarding-table scheduler-map                                                                                                                                                                   |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                           |
| <b>Description</b>              | For each physical interface, display the scheduler map information as it exists in the forwarding table.                                                                                                               |
| <b>Options</b>                  | This command has no options.                                                                                                                                                                                           |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                   |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service forwarding-table scheduler-map on page 699</a>                                                                                                                                       |
| <b>Output Fields</b>            | <a href="#">Table 113 on page 698</a> describes the output fields for the <b>show class-of-service forwarding-table scheduler-map</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 113: show class-of-service forwarding-table scheduler-map Output Fields**

| Field Name         | Field Description                                                                                                                                                                                                                                                                           |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface          | Name of the physical interface.                                                                                                                                                                                                                                                             |
| Index              | Physical interface index.                                                                                                                                                                                                                                                                   |
| Map index          | Scheduler map index.                                                                                                                                                                                                                                                                        |
| Num of queues      | Number of queues defined in this scheduler map.                                                                                                                                                                                                                                             |
| Entry              | Number of this entry in the scheduler map.                                                                                                                                                                                                                                                  |
| Scheduler index    | Scheduler policy index.                                                                                                                                                                                                                                                                     |
| Forwarding-class # | Forwarding class number to which this entry is applied.                                                                                                                                                                                                                                     |
| Tx rate            | Configured transmit rate of the scheduler (in bps). The rate is a percentage of the total interface bandwidth, or the keyword <b>remainder</b> , which indicates that the scheduler receives the remaining bandwidth of the interface.                                                      |
| Max buffer delay   | Amount of transmit delay (in milliseconds) or buffer size of the queue. This amount is a percentage of the total interface buffer allocation or the keyword <b>remainder</b> , which indicates that the buffer is sized according to what remains after other scheduler buffer allocations. |
| Priority           | <ul style="list-style-type: none"> <li><b>high</b>—Queue priority is high.</li> <li><b>low</b>—Queue priority is low.</li> </ul>                                                                                                                                                            |

Table 113: show class-of-service forwarding-table scheduler-map Output Fields (*continued*)

| Field Name      | Field Description                                                                                           |
|-----------------|-------------------------------------------------------------------------------------------------------------|
| PLP high        | Drop profile index for a high packet loss priority profile.                                                 |
| PLP low         | Drop profile index for a low packet loss priority profile.                                                  |
| PLP medium-high | Drop profile index for a medium-high packet loss priority profile.                                          |
| PLP medium-low  | Drop profile index for a medium-low packet loss priority profile.                                           |
| TCP PLP high    | Drop profile index for a high TCP packet loss priority profile.                                             |
| TCP PLP low     | Drop profile index for a low TCP packet loss priority profile.                                              |
| Policy is exact | If this line appears in the output, exact rate limiting is enabled. Otherwise, no rate limiting is enabled. |

## Sample Output

### show class-of-service forwarding-table scheduler-map

```

user@host> show class-of-service forwarding-table scheduler-map
Interface: so-5/0/0 (Index: 9, Map index: 17638, Num of queues: 2):
  Entry 0 (Scheduler index: 6090, Forwarding-class #: 0):
    Tx rate: 0 Kb (30%), Max buffer delay: 39 bytes (0%)
    Priority low
    PLP high: 25393, PLP low: 24627, TCP PLP high: 25393, TCP PLP low: 8742
    Policy is exact
  Entry 1 (Scheduler index: 38372, Forwarding-class #: 1):
    Traffic chunk: Max = 0 bytes, Min = 0 bytes
    Tx rate: 0 Kb (40%), Max buffer delay: 68 bytes (0%)
    Priority high
    PLP high: 25393, PLP low: 24627, TCP PLP high: 25393, TCP PLP low: 8742

Interface: at-6/1/0 (Index: 10, Map index: 17638, Num of queues: 2):
  Entry 0 (Scheduler index: 6090, Forwarding-class #: 0):
    Traffic chunk: Max = 0 bytes, Min = 0 bytes
    Tx rate: 0 Kb (30%), Max buffer delay: 39 bytes (0%)
    Priority high
    PLP high: 25393, PLP low: 24627, TCP PLP high: 25393, TCP PLP low: 8742
  Entry 1 (Scheduler index: 38372, Forwarding-class #: 1):
    Traffic chunk: Max = 0 bytes, Min = 0 bytes
    Tx rate: 0 Kb (40%), Max buffer delay: 68 bytes (0%)
    Priority low
    PLP high: 25393, PLP low: 24627, TCP PLP high: 25393, TCP PLP low: 8742

```

## show class-of-service interface

---

**Syntax**    `show class-of-service interface`  
              `<comprehensive | detail> <interface-name>`

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.0 for EX Series switches.  
                              Forwarding class map information added in Junos OS Release 9.4.  
                              Command introduced in Junos OS Release 11.1 for the QFX Series.  
                              Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Switches.  
                              Command introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.  
                              Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
                              Options **detail** and **comprehensive** introduced in Junos OS Release 11.4.  
                              Command introduced in Junos OS Release 15.1R3 on MX Series routers for enhanced subscriber management.

**Description**    Display the logical and physical interface associations for the classifier, rewrite rules, and scheduler map objects.



**NOTE:** On routing platforms with dual Routing Engines, running this command on the backup Routing Engine, with or without any of the available options, is not supported and produces the following error message:

**error: the class-of-service subsystem is not running**

**Options**    **none**—Display CoS associations for all physical and logical interfaces.

**comprehensive**—(M Series, MX Series, and T Series routers) (Optional) Display comprehensive quality-of-service (QoS) information about all physical and logical interfaces.

**detail**—(M Series, MX Series, and T Series routers) (Optional) Display QoS and CoS information based on the interface.

If the **interface** *interface-name* is a physical interface, the output includes:

- Brief QoS information about the physical interface
- Brief QoS information about the logical interface
- CoS information about the physical interface
- Brief information about filters or policers of the logical interface
- Brief CoS information about the logical interface

If the **interface** *interface-name* is a logical interface, the output includes:

- Brief QoS information about the logical interface

- Information about filters or policers for the logical interface
- CoS information about the logical interface

**interface-name**—(Optional) Display class-of-service (CoS) associations for the specified interface.

**none**—Display CoS associations for all physical and logical interfaces.

**Required Privilege Level** view

**Related Documentation**

- *Verifying and Managing Junos OS Enhanced Subscriber Management*

**List of Sample Output** [show class-of-service interface \(Physical\) on page 712](#)  
[show class-of-service interface \(Logical\) on page 713](#)  
[show class-of-service interface \(Gigabit Ethernet\) on page 713](#)  
[show class-of-service interface \(ANCP\) on page 713](#)  
[show class-of-service interface \(PPPoE Interface\) on page 713](#)  
[show class-of-service interface \(T4000 Routers with Type 5 FPCs\) on page 713](#)  
[show class-of-service interface detail on page 714](#)  
[show class-of-service interface comprehensive on page 714](#)  
[show class-of-service interface \(ACX Series Routers\) on page 725](#)  
[show class-of-service interface \(PPPoE Subscriber Interface for Enhanced Subscriber Management\) on page 728](#)

**Output Fields** [Table 87 on page 564](#) describes the output fields for the **show class-of-service interface** command. Output fields are listed in the approximate order in which they appear.

**Table 114: show class-of-service interface Output Fields**

| Field Name         | Field Description                                                                                                                                                                                                                                                                                          |                                                      |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------|
| Physical interface | Name of a physical interface.                                                                                                                                                                                                                                                                              |                                                      |
| Index              | Index of this interface or the internal index of this object.<br><br>(Enhanced subscriber management for MX Series routers) Index values for dynamic CoS traffic control profiles and dynamic scheduler maps are larger for enhanced subscriber management than they are for legacy subscriber management. |                                                      |
| Dedicated Queues   | Status of dedicated queues configured on an interface. Supported only on Trio MPC/MIC interfaces on MX Series routers.                                                                                                                                                                                     | Number of queues you can configure on the interface. |
| Queues supported   | Number of queues you can configure on the interface.                                                                                                                                                                                                                                                       |                                                      |
| Queues in use      | Number of queues currently configured.                                                                                                                                                                                                                                                                     |                                                      |

Table 114: show class-of-service interface Output Fields (*continued*)

| Field Name                                 | Field Description                                                                                                                                                                                                                                                                                     |
|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Total non-default queues created</b>    | Number of queues created in addition to the default queues. Supported only on Trio MPC/MIC interfaces on MX Series routers.<br><br>(Enhanced subscriber management for MX Series routers) This field is not displayed for enhanced subscriber management.                                             |
| <b>Rewrite Input IEEE Code-point</b>       | (QFX Series only) IEEE 802.1p code point (priority) rewrite value. Incoming traffic from the Fibre Channel (FC) SAN is classified into the forwarding class specified in the native FC interface (NP_Port) fixed classifier and uses the priority specified as the IEEE 802.1p rewrite value.         |
| <b>Shaping rate</b>                        | Maximum transmission rate on the physical interface. You can configure the shaping rate on the physical interface, or on the logical interface, but not on both. Therefore, the <b>Shaping rate</b> field is displayed for either the physical interface or the logical interface.                    |
| <b>Scheduler map</b>                       | Name of the output scheduler map associated with this interface.<br><br>(Enhanced subscriber management for MX Series routers) The name of the dynamic scheduler map object is associated with a generated UID (for example, <b>SMAP-1_UID1002</b> ) instead of with a subscriber interface.          |
| <b>Scheduler map forwarding class sets</b> | (QFX Series only) Name of the output fabric scheduler map associated with a QFabric system Interconnect device interface.                                                                                                                                                                             |
| <b>Input shaping rate</b>                  | For Gigabit Ethernet IQ2 PICs, maximum transmission rate on the input interface.                                                                                                                                                                                                                      |
| <b>Input scheduler map</b>                 | For Gigabit Ethernet IQ2 PICs, name of the input scheduler map associated with this interface.                                                                                                                                                                                                        |
| <b>Chassis scheduler map</b>               | Name of the scheduler map associated with the packet forwarding component queues.                                                                                                                                                                                                                     |
| <b>Rewrite</b>                             | Name and type of the rewrite rules associated with this interface.                                                                                                                                                                                                                                    |
| <b>Traffic-control-profile</b>             | Name of the associated traffic control profile.<br><br>(Enhanced subscriber management for MX Series routers) The name of the dynamic traffic control profile object is associated with a generated UID (for example, <b>TC_PROF_100_199_SERIES_UID1006</b> ) instead of with a subscriber interface. |
| <b>Classifier</b>                          | Name and type of classifiers associated with this interface.                                                                                                                                                                                                                                          |
| <b>Forwarding-class-map</b>                | Name of the forwarding map associated with this interface.                                                                                                                                                                                                                                            |
| <b>Congestion-notification</b>             | (QFX Series and EX4600 switches only) Congestion notification state, <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                                              |
| <b>Logical interface</b>                   | Name of a logical interface.                                                                                                                                                                                                                                                                          |
| <b>Object</b>                              | Category of an object: <b>Classifier</b> , <b>Fragmentation-map</b> (for LSQ interfaces only), <b>Scheduler-map</b> , <b>Rewrite</b> , <b>Translation Table</b> (for IQE PICs only), or <b>traffic-class-map</b> (for T4000 routers with Type 5 FPCs).                                                |
| <b>Name</b>                                | Name of an object.                                                                                                                                                                                                                                                                                    |



Table 114: show class-of-service interface Output Fields (*continued*)

| Field Name              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Type</b>             | Type of an object: <b>dscp</b> , <b>dscp-ipv6</b> , <b>exp</b> , <b>ieee-802.1</b> , <b>ip</b> , <b>inet-precedence</b> , or <b>ieee-802.1ad</b> (for traffic class map on T4000 routers with Type 5 FPCs)..                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Link-level type</b>  | Encapsulation on the physical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>MTU</b>              | MTU size on the physical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Speed</b>            | Speed at which the interface is running.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Loopback</b>         | Whether loopback is enabled and the type of loopback.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Source filtering</b> | Whether source filtering is enabled or disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Flow control</b>     | Whether flow control is enabled or disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Auto-negotiation</b> | (Gigabit Ethernet interfaces) Whether autonegotiation is enabled or disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Remote-fault</b>     | (Gigabit Ethernet interfaces) Remote fault status. <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Device flags</b>     | The <b>Device flags</b> field provides information about the physical device and displays one or more of the following values: <ul style="list-style-type: none"> <li>• <b>Down</b>—Device has been administratively disabled.</li> <li>• <b>Hear-Own-Xmit</b>—Device receives its own transmissions.</li> <li>• <b>Link-Layer-Down</b>—The link-layer protocol has failed to connect with the remote endpoint.</li> <li>• <b>Loopback</b>—Device is in physical loopback.</li> <li>• <b>Loop-Detected</b>—The link layer has received frames that it sent, thereby detecting a physical loopback.</li> <li>• <b>No-Carrier</b>—On media that support carrier recognition, no carrier is currently detected.</li> <li>• <b>No-Multicast</b>—Device does not support multicast traffic.</li> <li>• <b>Present</b>—Device is physically present and recognized.</li> <li>• <b>Promiscuous</b>—Device is in promiscuous mode and recognizes frames addressed to all physical addresses on the media.</li> <li>• <b>Quench</b>—Transmission on the device is quenched because the output buffer is overflowing.</li> <li>• <b>Recv-All-Multicasts</b>—Device is in multicast promiscuous mode and therefore provides no multicast filtering.</li> <li>• <b>Running</b>—Device is active and enabled.</li> </ul> |

Table 114: show class-of-service interface Output Fields (*continued*)

| Field Name             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Interface flags</b> | <p>The <b>Interface flags</b> field provides information about the physical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>Admin-Test</b>—Interface is in test mode and some sanity checking, such as loop detection, is disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Hardware-Down</b>—Interface is nonfunctional or incorrectly connected.</li> <li>• <b>Link-Layer-Down</b>—Interface keepalives have indicated that the link is incomplete.</li> <li>• <b>No-Multicast</b>—Interface does not support multicast traffic.</li> <li>• <b>No-receive No-transmit</b>—Passive monitor mode is configured on the interface.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>Pop all MPLS labels from packets of depth</b>—MPLS labels are removed as packets arrive on an interface that has the <b>pop-all-labels</b> statement configured. The depth value can be one of the following: <ul style="list-style-type: none"> <li>• <b>1</b>—Takes effect for incoming packets with one label only.</li> <li>• <b>2</b>—Takes effect for incoming packets with two labels only.</li> <li>• <b>[ 1 2 ]</b>—Takes effect for incoming packets with either one or two labels.</li> </ul> </li> <li>• <b>Promiscuous</b>—Interface is in promiscuous mode and recognizes frames addressed to all physical addresses.</li> <li>• <b>Recv-All-Multicasts</b>—Interface is in multicast promiscuous mode and provides no multicast filtering.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul> |
| <b>Flags</b>           | <p>The <b>Logical interface flags</b> field provides information about the logical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>ACFC Encapsulation</b>—Address control field Compression (ACFC) encapsulation is enabled (negotiated successfully with a peer).</li> <li>• <b>Device-down</b>—Device has been administratively disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Clear-DF-Bit</b>—GRE tunnel or IPsec tunnel is configured to clear the Don't Fragment (DF) bit.</li> <li>• <b>Hardware-Down</b>—Interface protocol initialization failed to complete successfully.</li> <li>• <b>PFC</b>—Protocol field compression is enabled for the PPP session.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Encapsulation</b>   | Encapsulation on the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Admin</b>           | Administrative state of the interface ( <b>Up</b> or <b>Down</b> ).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Link</b>            | Status of physical link ( <b>Up</b> or <b>Down</b> ).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Proto</b>           | Protocol configured on the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

Table 114: show class-of-service interface Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Input Filter</b>            | Names of any firewall filters to be evaluated when packets are received on the interface, including any filters attached through activation of dynamic service.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Output Filter</b>           | Names of any firewall filters to be evaluated when packets are transmitted on the interface, including any filters attached through activation of dynamic service.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Link flags</b>              | Provides information about the physical link and displays one or more of the following values: <ul style="list-style-type: none"> <li>• <b>ACFC</b>—Address control field compression is configured. The Point-to-Point Protocol (PPP) session negotiates the ACFC option.</li> <li>• <b>Give-Up</b>—Link protocol does not continue connection attempts after repeated failures.</li> <li>• <b>Loose-LCP</b>—PPP does not use the Link Control Protocol (LCP) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-LMI</b>—Frame Relay does not use the Local Management Interface (LMI) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-NCP</b>—PPP does not use the Network Control Protocol (NCP) to indicate whether the device is operational.</li> <li>• <b>Keepalives</b>—Link protocol keepalives are enabled.</li> <li>• <b>No-Keepalives</b>—Link protocol keepalives are disabled.</li> <li>• <b>PFC</b>—Protocol field compression is configured. The PPP session negotiates the PFC option.</li> </ul> |
| <b>Hold-times</b>              | Current interface hold-time up and hold-time down, in milliseconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>CoS queues</b>              | Number of CoS queues configured.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Last flapped</b>            | Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Statistics last cleared</b> | Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>IPv6 transit statistics</b> | Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

Table 114: show class-of-service interface Output Fields (*continued*)

| Field Name           | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Input errors</b>  | <p>Input errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Bucket Drops</b>—Drops resulting from the traffic load exceeding the interface transmit or receive leaky bucket configuration.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. Layer 3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>HS link FIFO overflows</b>—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> </ul> |
| <b>Output errors</b> | <p>Output errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Drops</b> field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>HS link FIFO underflows</b>—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeds the MTU of the interface.</li> </ul>                                                                                                                                                                                                                                                                                                                |
| <b>Egress queues</b> | Total number of egress queues supported on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

Table 114: show class-of-service interface Output Fields (*continued*)

| Field Name                                  | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Queue counters</b>                       | <p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Dropped packets</b> field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>                                                                                                                                                                                                                                   |
| <b>SONET alarms</b><br><b>SONET defects</b> | <p>(SONET) SONET media-specific alarms and defects that prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: <b>SONET PHY</b>, <b>SONET section</b>, <b>SONET line</b>, and <b>SONET path</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>SONET PHY</b>                            | <p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET PHY</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>                                                                                                                                                                                                                                                                                        |
| <b>SONET section</b>                        | <p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET section</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-BI</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul> |

Table 114: show class-of-service interface Output Fields (*continued*)

| Field Name        | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SONET line</b> | <p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET line</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>      |
| <b>SONET path</b> | <p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET path</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>ES-PFE</b>—Errored seconds (far-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul> |

Table 114: show class-of-service interface Output Fields (*continued*)

| Field Name                             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Received SONET overhead                | Values of the received and transmitted SONET overhead: <ul style="list-style-type: none"> <li>• <b>C2</b>—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li>• <b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li>• <b>K1 and K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li>• <b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-N signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li>• <b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 number of an STS-N signal.</li> <li>• <b>Z3 and Z4</b>—Allocated for future use.</li> </ul>                                                                                                                                                                                  |
| Transmitted SONET overhead             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Received path trace                    | SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Transmitted path trace                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| HDLC configuration                     | Information about the HDLC configuration. <ul style="list-style-type: none"> <li>• <b>Policing bucket</b>—Configured state of the receiving policer.</li> <li>• <b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Packet Forwarding Engine configuration | Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| CoS information                        | Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul> |
| Forwarding classes                     | Total number of forwarding classes supported on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Egress queues                          | Total number of egress queues supported on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

Table 114: show class-of-service interface Output Fields (*continued*)

| Field Name           | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Queue                | Queue number.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Forwarding classes   | Forwarding class name.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Queued Packets       | Number of packets queued to this queue.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Queued Bytes         | Number of bytes queued to this queue. The byte counts vary by PIC type.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Transmitted Packets  | Number of packets transmitted by this queue. When fragmentation occurs on the egress interface, the first set of packet counters shows the postfragmentation values. The second set of packet counters (displayed under the <b>Packet Forwarding Engine Chassis Queues</b> field) shows the prefragmentation values.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Transmitted Bytes    | Number of bytes transmitted by this queue. The byte counts vary by PIC type.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Tail-dropped packets | Number of packets dropped because of tail drop.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| RED-dropped packets  | <p>Number of packets dropped because of random early detection (RED).</p> <ul style="list-style-type: none"> <li>• (M Series and T Series routers only) On M320 and M120 routers and the T Series routers, the total number of dropped packets is displayed. On all other M Series routers, the output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low, non-TCP</b>—Number of low-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>Low, TCP</b>—Number of low-loss priority TCP packets dropped because of RED.</li> <li>• <b>High, non-TCP</b>—Number of high-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>High, TCP</b>—Number of high-loss priority TCP packets dropped because of RED.</li> </ul> </li> <li>• (MX Series routers with enhanced DPCs, and T Series routers with enhanced FPCs only) The output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low-loss priority packets dropped because of RED.</li> <li>• <b>Medium-low</b>—Number of medium-low loss priority packets dropped because of RED.</li> <li>• <b>Medium-high</b>—Number of medium-high loss priority packets dropped because of RED.</li> <li>• <b>High</b>—Number of high-loss priority packets dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> |



Table 114: show class-of-service interface Output Fields (*continued*)

| Field Name        | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RED-dropped bytes | <p>Number of bytes dropped because of RED. The byte counts vary by PIC type.</p> <ul style="list-style-type: none"> <li>(M Series and T Series routers only) On M320 and M120 routers and the T Series routers, only the total number of dropped bytes is displayed. On all other M Series routers, the output classifies dropped bytes into the following categories: <ul style="list-style-type: none"> <li><b>Low, non-TCP</b>—Number of low-loss priority non-TCP bytes dropped because of RED.</li> <li><b>Low, TCP</b>—Number of low-loss priority TCP bytes dropped because of RED.</li> <li><b>High, non-TCP</b>—Number of high-loss priority non-TCP bytes dropped because of RED.</li> <li><b>High, TCP</b>—Number of high-loss priority TCP bytes dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> |
| Transmit rate     | Configured transmit rate of the scheduler. The rate is a percentage of the total interface bandwidth.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Rate Limit        | <p>Rate limiting configuration of the queue. Possible values are :</p> <ul style="list-style-type: none"> <li><b>None</b>—No rate limit.</li> <li><b>exact</b>—Queue transmits at the configured rate.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Buffer size       | Delay buffer size in the queue.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Priority          | Scheduling priority configured as <b>low</b> or <b>high</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Excess Priority   | Priority of the excess bandwidth traffic on a scheduler: <b>low</b> , <b>medium-low</b> , <b>medium-high</b> , <b>high</b> , or <b>none</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Drop profiles     | <p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li><b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li><b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li><b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li><b>Name</b>—Name of the drop profile.</li> <li><b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li><b>Fill Level</b>—Percentage fullness of a queue.</li> <li><b>Drop probability</b>—Drop probability at this fill level.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                              |
| Excess Priority   | Priority of the excess bandwidth traffic on a scheduler.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

Table 114: show class-of-service interface Output Fields (*continued*)

| Field Name                    | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Drop profiles</b>          | <p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li>• <b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li>• <b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li>• <b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li>• <b>Name</b>—Name of the drop profile.</li> <li>• <b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li>• <b>Fill Level</b>—Percentage fullness of a queue.</li> <li>• <b>Drop probability</b>—Drop probability at this fill level.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Adjustment information</b> | <p>Display the assignment of shaping-rate adjustments on a scheduler node or queue.</p> <ul style="list-style-type: none"> <li>• <b>Adjusting application</b>—Application that is performing the shaping-rate adjustment. <ul style="list-style-type: none"> <li>• The adjusting application can appear as <b>ancp LS-0</b>, which is the Junos OS Access Node Control Profile process (<b>ancpd</b>) that performs shaping-rate adjustments on schedule nodes.</li> <li>• The adjusting application can also appear as <b>pppoe</b>, which adjusts the shaping-rate and overhead-accounting class-of-service attributes on dynamic subscriber interfaces in a broadband access network based on access line parameters in Point-to-Point Protocol over Ethernet (PPPoE) Tags [TR-101]. This feature is supported on MPC/MIC interfaces on MX Series routers. The shaping rate is based on the actual-data-rate-downstream attribute. The overhead accounting value is based on the access-loop-encapsulation attribute and specifies whether the access loop uses Ethernet (frame mode) or ATM (cell mode).</li> </ul> </li> <li>• <b>Adjustment type</b>—Type of adjustment: <b>absolute</b> or <b>delta</b>.</li> <li>• <b>Configured shaping rate</b>—Shaping rate configured for the scheduler node or queue.</li> <li>• <b>Adjustment value</b>—Value of adjusted shaping rate.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment overhead-accounting mode</b>—Configured shaping mode: <b>frame</b> or <b>cell</b>.</li> <li>• <b>Adjustment overhead bytes</b>—Number of bytes that the ANCP agent adds to or subtracts from the actual downstream frame overhead before reporting the adjusted values to CoS.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment multicast index</b>—</li> </ul> |

## Sample Output

### show class-of-service interface (Physical)

```

user@host> show class-of-service interface so-0/2/3
Physical interface: so-0/2/3, Index: 135
Queues supported: 8, Queues in use: 4
Total non-default queues created: 4
Scheduler map: <default>, Index: 2032638653

Logical interface: fe-0/0/1.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000

```

| Object        | Name        | Type | Index |
|---------------|-------------|------|-------|
| Scheduler-map | <default>   |      | 27    |
| Rewrite       | exp-default | exp  | 21    |
| Classifier    | exp-default | exp  | 5     |

|                      |                      |     |   |
|----------------------|----------------------|-----|---|
| Classifier           | ipprec-compatibility | ip  | 8 |
| Forwarding-class-map | exp-default          | exp | 5 |

### show class-of-service interface (Logical)

```
user@host> show class-of-service interface so-0/2/3.0
Logical interface: so-0/2/3.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000
Object      Name                Type      Index
Scheduler-map <default>          27
Rewrite     exp-default         exp       21
Classifier   exp-default         exp       5
Classifier   ipprec-compatibility ip        8
Forwarding-class-map exp-default         exp       5
```

### show class-of-service interface (Gigabit Ethernet)

```
user@host> show class-of-service interface ge-6/2/0
Physical interface: ge-6/2/0, Index: 175
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Input scheduler map: <default>, Index: 3
Chassis scheduler map: <default-chassis>, Index: 4
```

### show class-of-service interface (ANCP)

```
user@host> show class-of-service interface pp0.1073741842
Logical interface: pp0.1073741842, Index: 341
Object      Name                Type      Index
Traffic-control-profile TCP-CVLAN           Output    12408
Classifier   dscp-ipv6-compatibility dscp-ipv6 9
Classifier   ipprec-compatibility ip        13

Adjusting application: ancp LS-0
Adjustment type: absolute
Configured shaping rate: 4000000
Adjustment value: 11228000
Adjustment overhead-accounting mode: Frame Mode
Adjustment overhead bytes: 50
Adjustment target: node
```

### show class-of-service interface (PPPoE Interface)

```
user@host> show class-of-service interface pp0.1
Logical interface: pp0.1, Index: 85
Object      Name                Type      Index
Traffic-control-profile tcp-pppoe.o.pp0.1   Output    2726446535
Classifier   ipprec-compatibility ip        13

Adjusting application: PPPoE
Adjustment type: absolute
Adjustment value: 5000000
Adjustment overhead-accounting mode: cell
Adjustment target: node
```

### show class-of-service interface (T4000 Routers with Type 5 FPCs)

```
user@host> show class-of-service interface xe-4/0/0
Physical interface: xe-4/0/0, Index: 153
Queues supported: 8, Queues in use: 4
Shaping rate: 5000000000 bps
Scheduler map: <default>, Index: 2
```

|                                          |            |                      |      |
|------------------------------------------|------------|----------------------|------|
| Congestion-notification: Disabled        |            |                      |      |
| Logical interface: xe-4/0/0.0, Index: 77 |            |                      |      |
| Index                                    | Object     | Name                 | Type |
|                                          | Classifier | ipprec-compatibility | ip   |
| 13                                       |            |                      |      |

[show class-of-service interface detail](#)

```
user@host> show class-of-service interface ge-0/3/0 detail
```

```
Physical interface: ge-0/3/0, Enabled, Physical link is Up
  Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
  Device flags      : Present Running
  Interface flags:  SNMP-Traps Internal: 0x4000
```

```
Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps
Scheduler map: interface-scheduler-map, Index: 58414
Input shaping rate: 10000 bps
Input scheduler map: scheduler-map, Index: 15103
Chassis scheduler map: <default-chassis>, Index: 4
Congestion-notification: Disabled
```

```
Logical interface ge-0/3/0.0
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
  inet
  mpls
```

|                         |             |            |                       |               |                |
|-------------------------|-------------|------------|-----------------------|---------------|----------------|
| Interface<br>ge-0/3/0.0 | Admin<br>up | Link<br>up | Proto<br>inet<br>mpls | Input Filter  | Output Filter  |
| Interface<br>ge-0/3/0.0 | Admin<br>up | Link<br>up | Proto<br>inet<br>mpls | Input Policer | Output Policer |

|                                          |                      |                |       |
|------------------------------------------|----------------------|----------------|-------|
| Logical interface: ge-0/3/0.0, Index: 68 |                      |                |       |
| Object                                   | Name                 | Type           | Index |
| Rewrite                                  | exp-default          | exp (mpls-any) | 33    |
| Classifier                               | exp-default          | exp            | 10    |
| Classifier                               | ipprec-compatibility | ip             | 13    |

```
Logical interface ge-0/3/0.1
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ]  Encapsulation: ENET2
  inet
```

|            |       |      |       |       |         |        |         |
|------------|-------|------|-------|-------|---------|--------|---------|
| Interface  | Admin | Link | Proto | Input | Filter  | Output | Filter  |
| ge-0/3/0.1 | up    | up   | inet  |       |         |        |         |
| Interface  | Admin | Link | Proto | Input | Policer | Output | Policer |
| ge-0/3/0.1 | up    | up   | inet  |       |         |        |         |

```
Logical interface: ge-0/3/0.1, Index: 69
  Object      Name                Type      Index
  Classifier  ipprec-compatibility  ip        13
```

show class-of-service interface comprehensive

```
user@host> show class-of-service interface ge-0/3/0 comprehensive
```

```

Physical interface: ge-0/3/0, Enabled, Physical link is Up
  Interface index: 138, SNMP ifIndex: 601, Generation: 141
  Link-level type: Ethernet, MTU: 1518, Speed: 1000Mbps, BPDU Error: None,
  MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
  control: Enabled,
  Auto-negotiation: Enabled, Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Schedulers     : 256
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:14:f6:f4:b4:5d, Hardware address: 00:14:f6:f4:b4:5d
  Last flapped   : 2010-09-07 06:35:22 PDT (15:14:42 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0 0 bps
    Output bytes  : 0 0 bps
    Input packets : 0 0 pps
    Output packets: 0 0 pps
  IPv6 total statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Ingress traffic statistics at Packet Forwarding Engine:
    Input bytes   : 0 0 bps
    Input packets : 0 0 pps
    Drop bytes    : 0 0 bps
    Drop packets  : 0 0 pps
  Label-switched interface (LSI) traffic statistics:
    Input bytes   : 0 0 bps
    Input packets : 0 0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runt: 0, Policed discards: 0, L3
  incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
  Resource errors: 0
  Output errors:
    Carrier transitions: 5, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Ingress queues: 4 supported, 5 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 af3           0                0                0
    1 af2           0                0                0
    2 ef2           0                0                0
    3 ef1           0                0                0

  Egress queues: 4 supported, 5 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 af3           0                0                0
    1 af2           0                0                0
    2 ef2           0                0                0
    3 ef1           0                0                0

```

```

Active alarms : None
Active defects : None
MAC statistics:
    Receive      Transmit
    Total octets      0          0
    Total packets     0          0
    Unicast packets   0          0
    Broadcast packets 0          0
    Multicast packets 0          0
    CRC/Align errors  0          0
    FIFO errors       0          0
    MAC control frames 0          0
    MAC pause frames   0          0
    Oversized frames   0
    Jabber frames      0
    Fragment frames    0
    VLAN tagged frames 0
    Code violations    0
Filter statistics:
    Input packet count      0
    Input packet rejects    0
    Input DA rejects        0
    Input SA rejects        0
    Output packet count     0
    Output packet pad count 0
    Output packet error count 0
    CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
    Negotiation status: Complete
    Link partner:
        Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote fault:
OK
    Local resolution:
        Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
    Destination slot: 0
CoS information:
    Direction : Output
    CoS transmit queue      Bandwidth      Buffer Priority
Limit
    %      bps      %      usec
    2 ef2      39      19500      0      120      high
none
    Direction : Input
    CoS transmit queue      Bandwidth      Buffer Priority
Limit
    %      bps      %      usec
    0 af3      30      3000      45      0      low
none

Physical interface: ge-0/3/0, Enabled, Physical link is Up
    Interface index: 138, SNMP ifIndex: 601
Forwarding classes: 16 supported, 5 in use
Ingress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
Queued:
    Packets      :      0      0 pps
    Bytes      :      0      0 bps
Transmitted:
    Packets      :      0      0 pps
    Bytes      :      0      0 bps
Tail-dropped packets : Not Available

```

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Forwarding classes: 16 supported, 5 in use
Egress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets : 0 0 pps

```

```

    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets   :                0                0 pps
    RL-dropped bytes     :                0                0 bps
    RED-dropped packets   :                0                0 pps
    RED-dropped bytes     :                0                0 bps
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets   :                0                0 pps
    RL-dropped bytes     :                0                0 bps
    RED-dropped packets   :                0                0 pps
    RED-dropped bytes     :                0                0 bps

Packet Forwarding Engine Chassis Queues:
Queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets :                0                0 pps
    RED-dropped packets   : Not Available
    RED-dropped bytes     : Not Available
Queue: 1, Forwarding classes: af2
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets :                0                0 pps
    RED-dropped packets   : Not Available
    RED-dropped bytes     : Not Available
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets :                0                0 pps
    RED-dropped packets   : Not Available
    RED-dropped bytes     : Not Available
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets              :            108546                0 pps
    Bytes                :        12754752            376 bps
  Transmitted:
    Packets              :            108546                0 pps
    Bytes                :        12754752            376 bps

```



```

Tail-dropped packets :          0          0 pps
RED-dropped packets  : Not Available
RED-dropped bytes    : Not Available

```

```

Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps

```

```
Scheduler map: interface-scheduler-map, Index: 58414
```

```

Scheduler: ef2, Forwarding class: ef2, Index: 39155
  Transmit rate: 39 percent, Rate Limit: none, Buffer size: 120 us, Buffer
  Limit: none, Priority: high
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Input shaping rate: 10000 bps
  Input scheduler map: scheduler-map

```

```
Scheduler map: scheduler-map, Index: 15103
```

```

Scheduler: af3, Forwarding class: af3, Index: 35058
  Transmit rate: 30 percent, Rate Limit: none, Buffer size: 45 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       40582  green
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       18928  yellow
  Drop profile: green, Type: discrete, Index: 40582
    Fill level  Drop probability
    50          0
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: yellow, Type: discrete, Index: 18928
    Fill level  Drop probability
    50          0
    100         100

```

```

Chassis scheduler map: < default-drop-profile>
Scheduler map: < default-drop-profile>, Index: 4

Scheduler: < default-drop-profile>, Forwarding class: af3, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100

Scheduler: < default-drop-profile>, Forwarding class: af2, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100

Scheduler: < default-drop-profile>, Forwarding class: ef2, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100

```

```

    100                100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
    100                100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
    100                100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
    100                100

Scheduler: < default-drop-profile>, Forwarding class: ef1, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol    Index    Name
    Low           any         1        < default-drop-profile>
    Medium low    any         1        < default-drop-profile>
    Medium high   any         1        < default-drop-profile>
    High          any         1        < default-drop-profile>
Drop profile: , Type: discrete, Index: 1
  Fill level    Drop probability
    100                100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
    100                100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
    100                100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
    100                100
  Congestion-notification: Disabled
Forwarding class
priority Policing priority          ID      Queue  Restricted queue  Fabric
af3      normal                  0        0            0          low
af2      normal                  1        1            1          low
ef2      normal                  2        2            2          high
ef1      normal                  3        3            3          high
af1      normal                  4        4            0          low
          normal

Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152) (Generation 159)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
  Traffic statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Local statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Transit statistics:
    Input bytes :          0                0 bps

```

```

Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 172, Route table: 0
  Flags: Sendbroadcast-pkt-to-re
  Input Filters: filter-in-ge-0/3/0.0-i,
  Policer: Input: p1-ge-0/3/0.0-inet-i
Protocol mpls, MTU: 1488, Maximum labels: 3, Generation: 173, Route table: 0
  Flags: Is-Primary
  Output Filters: exp-filter,,,,,

Logical interface ge-1/2/0.0 (Index 347) (SNMP ifIndex 638) (Generation 156)

Forwarding class ID Queue Restricted queue Fabric priority Policing priority
  SPU priority
best-effort 0 0 0 low normal
  low

Aggregate Forwarding-class statistics per forwarding-class
Aggregate Forwarding-class statistics:
Forwarding-class statistics:

Forwarding-class best-effort statistics:
  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:
  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

IPv4 protocol forwarding-class statistics:
Forwarding-class statistics:
Forwarding-class best-effort statistics:

  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:
  Input unicast bytes: 0

```

```

Output unicast bytes:    0
Input unicast packets:  0
Output unicast packets: 0

```

```

Input multicast bytes:   0
Output multicast bytes:  0
Input multicast packets: 0
Output multicast packets: 0

```

```

IPv6 protocol forwarding-class statistics:
Forwarding-class statistics:
  Forwarding-class best-effort statistics:

```

```

Input unicast bytes:    0
Output unicast bytes:   0
Input unicast packets:  0
Output unicast packets: 0

```

```

Input multicast bytes:   0
Output multicast bytes:  0
Input multicast packets: 0
Output multicast packets: 0

```

```
Forwarding-class expedited-forwarding statistics:
```

```

Input unicast bytes:    0
Output unicast bytes:   0
Input unicast packets:  0
Output unicast packets: 0

```

```
Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152)
```

```

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
Input packets : 0
Output packets: 0

```

|            |       |      |       |                        |               |
|------------|-------|------|-------|------------------------|---------------|
| Interface  | Admin | Link | Proto | Input Filter           | Output Filter |
| ge-0/3/0.0 | up    | up   | inet  | filter-in-ge-0/3/0.0-i |               |
|            |       |      | mpls  |                        | exp-filter    |

|            |       |      |       |                      |                |
|------------|-------|------|-------|----------------------|----------------|
| Interface  | Admin | Link | Proto | Input Policer        | Output Policer |
| ge-0/3/0.0 | up    | up   |       |                      |                |
|            |       |      | inet  | p1-ge-0/3/0.0-inet-i |                |
|            |       |      | mpls  |                      |                |

```
Filter: filter-in-ge-0/3/0.0-i
```

```
Counters:
```

| Name                         | Bytes | Packets |
|------------------------------|-------|---------|
| count-filter-in-ge-0/3/0.0-i | 0     | 0       |

```
Filter: exp-filter
```

```
Counters:
```

| Name                  | Bytes | Packets |
|-----------------------|-------|---------|
| count-exp-seven-match | 0     | 0       |
| count-exp-zero-match  | 0     | 0       |

```
Policers:
```

| Name                 | Packets |
|----------------------|---------|
| p1-ge-0/3/0.0-inet-i | 0       |

```
Logical interface: ge-0/3/0.0, Index: 68
```

| Object  | Name        | Type           | Index |
|---------|-------------|----------------|-------|
| Rewrite | exp-default | exp (mpls-any) | 33    |

Rewrite rule: exp-default, Code point type: exp, Index: 33

| Forwarding class | Loss priority | Code point |       |
|------------------|---------------|------------|-------|
| af3              | low           | 000        |       |
| af3              | high          | 001        |       |
| af2              | low           | 010        |       |
| af2              | high          | 011        |       |
| ef2              | low           | 100        |       |
| ef2              | high          | 101        |       |
| ef1              | low           | 110        |       |
| ef1              | high          | 111        |       |
| Object           | Name          | Type       | Index |
| Classifier       | exp-default   | exp        | 10    |

Classifier: exp-default, Code point type: exp, Index: 10

| Code point | Forwarding class     | Loss priority |       |
|------------|----------------------|---------------|-------|
| 000        | af3                  | low           |       |
| 001        | af3                  | high          |       |
| 010        | af2                  | low           |       |
| 011        | af2                  | high          |       |
| 100        | ef2                  | low           |       |
| 101        | ef2                  | high          |       |
| 110        | ef1                  | low           |       |
| 111        | ef1                  | high          |       |
| Object     | Name                 | Type          | Index |
| Classifier | ipprec-compatibility | ip            | 13    |

Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13

| Code point       | Forwarding class | Loss priority |                  |        |
|------------------|------------------|---------------|------------------|--------|
| 000              | af3              | low           |                  |        |
| 001              | af3              | high          |                  |        |
| 010              | af3              | low           |                  |        |
| 011              | af3              | high          |                  |        |
| 100              | af3              | low           |                  |        |
| 101              | af3              | high          |                  |        |
| 110              | ef1              | low           |                  |        |
| 111              | ef1              | high          |                  |        |
| Forwarding class | ID               | Queue         | Restricted queue | Fabric |
| priority         |                  |               |                  |        |
| af3              | 0                | 0             | 0                | low    |
| normal           |                  |               |                  |        |
| af2              | 1                | 1             | 1                | low    |
| normal           |                  |               |                  |        |
| ef2              | 2                | 2             | 2                | high   |
| normal           |                  |               |                  |        |
| ef1              | 3                | 3             | 3                | high   |
| normal           |                  |               |                  |        |
| af1              | 4                | 4             | 0                | low    |
| normal           |                  |               |                  |        |

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154) (Generation 160)

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2

Traffic statistics:

|                   |   |
|-------------------|---|
| Input bytes :     | 0 |
| Output bytes :    | 0 |
| Input packets:    | 0 |
| Output packets:   | 0 |
| Local statistics: |   |
| Input bytes :     | 0 |

```

Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 174, Route table: 0
Flags: Sendbcst-pkt-to-re

```

```

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2
Input packets : 0
Output packets: 0

```

```

Interface      Admin Link Proto Input Filter      Output Filter
ge-0/3/0.1     up   up   mpls
Interface      Admin Link Proto Input Policer      Output Policer
ge-0/3/0.1     up   up   mpls

```

```
Logical interface: ge-0/3/0.1, Index: 69
```

| Object     | Name                 | Type | Index |
|------------|----------------------|------|-------|
| Classifier | ipprec-compatibility | ip   | 13    |

```
Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13
```

| Code point | Forwarding class | Loss priority |
|------------|------------------|---------------|
| 000        | af3              | low           |
| 001        | af3              | high          |
| 010        | af3              | low           |
| 011        | af3              | high          |
| 100        | af3              | low           |
| 101        | af3              | high          |
| 110        | ef1              | low           |
| 111        | ef1              | high          |

| Forwarding class | ID | Queue | Restricted queue | Fabric |
|------------------|----|-------|------------------|--------|
| priority         |    |       |                  |        |
| af3              | 0  | 0     | 0                | low    |
| af2              | 1  | 1     | 1                | low    |
| ef2              | 2  | 2     | 2                | high   |
| ef1              | 3  | 3     | 3                | high   |
| af1              | 4  | 4     | 0                | low    |

### show class-of-service interface (ACX Series Routers)

```

user@host-g11# show class-of-service interface
Physical interface: at-0/0/0, Index: 130
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled

```

Logical interface: at-0/0/0.0, Index: 69

Logical interface: at-0/0/0.32767, Index: 70

Physical interface: at-0/0/1, Index: 133

Queues supported: 4, Queues in use: 4

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Logical interface: at-0/0/1.0, Index: 71

Logical interface: at-0/0/1.32767, Index: 72

Physical interface: ge-0/1/0, Index: 146

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object     | Name         | Type      | Index |
|------------|--------------|-----------|-------|
| Rewrite    | dscp-default | dscp      | 31    |
| Classifier | d1           | dscp      | 11331 |
| Classifier | ci           | ieee8021p | 583   |

Logical interface: ge-0/1/0.0, Index: 73

| Object  | Name       | Type           | Index |
|---------|------------|----------------|-------|
| Rewrite | custom-exp | exp (mpls-any) | 46413 |

Logical interface: ge-0/1/0.1, Index: 74

Logical interface: ge-0/1/0.32767, Index: 75

Physical interface: ge-0/1/1, Index: 147

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object     | Name                 | Type | Index |
|------------|----------------------|------|-------|
| Classifier | ipprec-compatibility | ip   | 13    |

Logical interface: ge-0/1/1.0, Index: 76

Physical interface: ge-0/1/2, Index: 148

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object     | Name | Type              | Index |
|------------|------|-------------------|-------|
| Rewrite    | ri   | ieee8021p (outer) | 35392 |
| Classifier | ci   | ieee8021p         | 583   |

Physical interface: ge-0/1/3, Index: 149

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object     | Name                 | Type | Index |
|------------|----------------------|------|-------|
| Classifier | ipprec-compatibility | ip   | 13    |

Logical interface: ge-0/1/3.0, Index: 77

| Object  | Name        | Type           | Index |
|---------|-------------|----------------|-------|
| Rewrite | custom-exp2 | exp (mpls-any) | 53581 |

Physical interface: ge-0/1/4, Index: 150

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2



```

Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility  ip      13

Physical interface: ge-0/1/5, Index: 151
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility  ip      13

Physical interface: ge-0/1/6, Index: 152
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility  ip      13

Physical interface: ge-0/1/7, Index: 153
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  d1      dscp      11331

Physical interface: ge-0/2/0, Index: 154
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility  ip      13

Physical interface: ge-0/2/1, Index: 155
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility  ip      13

Logical interface: ge-0/2/1.0, Index: 78

Logical interface: ge-0/2/1.32767, Index: 79

Physical interface: xe-0/3/0, Index: 156
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility  ip      13

Logical interface: xe-0/3/0.0, Index: 80

Physical interface: xe-0/3/1, Index: 157
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility  ip      13

Logical interface: xe-0/3/1.0, Index: 81

```

```
[edit]
user@host-g11#
```

#### show class-of-service interface (PPPoE Subscriber Interface for Enhanced Subscriber Management)

```
user@host> show class-of-service interface pp0.3221225474
  Logical interface: pp0.3221225475, Index: 3221225475
Object      Name                               Type      Index
Traffic-control-profile TC_PROF_100_199_SERIES_UID1006 Output    4294967312
Scheduler-map      SMAP-1_UID1002      Output    4294967327
Rewrite-Output     ieee-rewrite        ieee8021p 60432
Rewrite-Output     rule1               ip        50463

  Adjusting application: PPPoE IA tags
    Adjustment type: absolute
    Configured shaping rate: 11000000
    Adjustment value: 5000000
    Adjustment target: node

  Adjusting application: ucac
    Adjustment type: delta
    Configured shaping rate: 5000000
    Adjustment value: 100000
    Adjustment target: node
```

## show class-of-service scheduler-map

|                                 |                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show class-of-service scheduler-map</code><br><code>&lt;name&gt;</code>                                                                                                                                                |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 15.1R3 on MX Series routers for enhanced subscriber management. |
| <b>Description</b>              | Display the mapping of schedulers to forwarding classes and a summary of scheduler parameters for each entry.                                                                                                                |
| <b>Options</b>                  | <b>none</b> —Display all scheduler maps.<br><br><b>name</b> —(Optional) Display a summary of scheduler parameters for each forwarding class to which the named scheduler is assigned.                                        |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><i>Verifying and Managing Junos OS Enhanced Subscriber Management</i></li> </ul>                                                                                                      |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service scheduler-map on page 730</a>                                                                                                                                                              |
| <b>Output Fields</b>            | <a href="#">Table 115 on page 729</a> describes the output fields for the <b>show class-of-service scheduler-map</b> command. Output fields are listed in the approximate order in which they appear.                        |

Table 115: show class-of-service scheduler-map Output Fields

| Field Name              | Field Description                                                                                                                                                                                                                                                                                                                             |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Scheduler map</b>    | Name of the scheduler map.<br><br>(Enhanced subscriber management for MX Series routers) The name of the dynamic scheduler map object is associated with a generated UID (for example, <b>SMAP-1_UID1002</b> ) instead of with a subscriber interface.                                                                                        |
| <b>Index</b>            | Index of the indicated object. Objects having indexes in this output include scheduler maps, schedulers, and drop profiles.<br><br>(Enhanced subscriber management for MX Series routers) Index values for dynamic CoS traffic control profiles are larger for enhanced subscriber management than they are for legacy subscriber management. |
| <b>Scheduler</b>        | Name of the scheduler.                                                                                                                                                                                                                                                                                                                        |
| <b>Forwarding class</b> | Classification of a packet affecting the forwarding, scheduling, and marking policies applied as the packet transits the router.                                                                                                                                                                                                              |

Table 115: show class-of-service scheduler-map Output Fields (*continued*)

| Field Name                              | Field Description                                                                                                                                                                                                                                                                                          |
|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Transmit rate</b>                    | Configured transmit rate of the scheduler (in bps). The rate is a percentage of the total interface bandwidth, or the keyword <b>remainder</b> , which indicates that the scheduler receives the remaining bandwidth of the interface.                                                                     |
| <b>Rate Limit</b>                       | Rate limiting configuration of the queue. Possible values are <b>none</b> , meaning no rate limiting, and <b>exact</b> , meaning the queue only transmits at the configured rate.                                                                                                                          |
| <b>Maximum buffer delay</b>             | Amount of transmit delay (in milliseconds) or the buffer size of the queue. The buffer size is shown as a percentage of the total interface buffer allocation, or by the keyword <b>remainder</b> to indicate that the buffer is sized according to what remains after other scheduler buffer allocations. |
| <b>Priority</b>                         | Scheduling priority: <b>low</b> or <b>high</b> .                                                                                                                                                                                                                                                           |
| <b>Excess priority</b>                  | Priority of excess bandwidth: <b>low</b> , <b>medium-low</b> , <b>medium-high</b> , <b>high</b> , or <b>none</b> .                                                                                                                                                                                         |
| <b>Explicit Congestion Notification</b> | (QFX Series, OCX Series, and EX4600 switches only) Explicit congestion notification (ECN) state: <ul style="list-style-type: none"> <li>• Disable—ECN is disabled on the specified scheduler</li> <li>• Enable—ECN is enabled on the specified scheduler</li> </ul> ECN is disabled by default.            |
| <b>Adjust minimum</b>                   | Minimum shaping rate for an adjusted queue, in bps.                                                                                                                                                                                                                                                        |
| <b>Adjust percent</b>                   | Bandwidth adjustment applied to a queue, in percent.                                                                                                                                                                                                                                                       |
| <b>Drop profiles</b>                    | Table displaying the assignment of drop profiles by name and index to a given loss priority and protocol pair.                                                                                                                                                                                             |
| <b>Loss priority</b>                    | Packet loss priority for drop profile assignment.                                                                                                                                                                                                                                                          |
| <b>Protocol</b>                         | Transport protocol for drop profile assignment.                                                                                                                                                                                                                                                            |
| <b>Name</b>                             | Name of the drop profile.                                                                                                                                                                                                                                                                                  |

## Sample Output

### show class-of-service scheduler-map

```
user@host> show class-of-service scheduler-map
Scheduler map: dd-scheduler-map, Index: 84
```

```
Scheduler: aa-scheduler, Index: 8721, Forwarding class: aa-forwarding-class
Transmit rate: 30 percent, Rate Limit: none, Maximum buffer delay: 39 ms,
Priority: high
Drop profiles:
  Loss priority  Protocol  Index  Name
  Low           non-TCP   8724   aa-drop-profile
  Low           TCP      9874   bb-drop-profile
  High          non-TCP   8833   cc-drop-profile
  High          TCP      8484   dd-drop-profile
```

Scheduler: bb-scheduler, Forwarding class: aa-forwarding-class  
Transmit rate: 40 percent, Rate limit: none, Maximum buffer delay: 68 ms,  
Priority: high  
Drop profiles:

| Loss priority | Protocol | Index | Name            |
|---------------|----------|-------|-----------------|
| Low           | non-TCP  | 8724  | aa-drop-profile |
| Low           | TCP      | 9874  | bb-drop-profile |
| High          | non-TCP  | 8833  | cc-drop-profile |
| High          | TCP      | 8484  | dd-drop-profile |

## show class-of-service traffic-control-profile

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show class-of-service traffic-control-profile</code><br><code>&lt;profile-name&gt;</code>                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 12.2 for ACX Series Routers.<br>Command introduced in Junos OS Release 15.1R3 on MX Series routers for enhanced subscriber management.                                                                                                                                                                |
| <b>Description</b>              | For Gigabit Ethernet IQ PICs, Channelized IQ PICs, EQ DPCs, and Trio MPC/MIC interfaces only, display traffic shaping and scheduling profiles.<br><br>(ACX Series routers) For ATM IMA pseudowire interfaces, display traffic shaping and scheduling profiles.                                                                                                                                                                                                     |
| <b>Options</b>                  | <b>none</b> —Display all profiles.<br><br><b>profile-name</b> —(Optional) Display information about a single profile.                                                                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Verifying and Managing Junos OS Enhanced Subscriber Management</i></li> </ul>                                                                                                                                                                                                                                                                                                                                          |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service traffic-control-profile on page 734</a><br><a href="#">show class-of-service traffic-control-profile (MX Series routers with Clear Channel Multi-Rate CE MIC) on page 735</a><br><a href="#">show class-of-service traffic-control-profile (ACX Series routers with ATM IMA pseudowire interfaces) on page 735</a><br><a href="#">show class-of-service traffic-control-profile (Enhanced Subscriber Management) on page 735</a> |
| <b>Output Fields</b>            | Table 116 on page 732 describes the output fields for the <b>show class-of-service traffic-control-profile</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                    |

**Table 116: show class-of-service traffic-control-profile Output Fields**

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Traffic control profile</b> | <p>Name of the traffic control profile.</p> <p>(Enhanced subscriber management for MX Series routers) The name of the dynamic traffic control profile object is associated with a generated UID (for example, <b>TC_PROF_100_199_SERIES_UID1000</b>) instead of with a subscriber interface.</p> |

Table 116: show class-of-service traffic-control-profile Output Fields (*continued*)

| Field Name                          | Field Description                                                                                                                                                                                                                                                                                                    |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Index</b>                        | Index number of the traffic control profile.<br><br>(Enhanced subscriber management for MX Series routers) Index values for dynamic CoS traffic control profiles are larger for enhanced subscriber management than they are for legacy subscriber management.                                                       |
| <b>ATM Service</b>                  | (MX Series routers with ATM Multi-Rate CE MIC) Configured category of ATM service. Possible values: <ul style="list-style-type: none"> <li>• cbr—Constant bit rate.</li> <li>• rtvbr—Real time variable bit rate.</li> <li>• nrtvbr—Non real time variable bit rate.</li> <li>• ubr—Unspecified bit rate.</li> </ul> |
| <b>Maximum Burst Size</b>           | Configured maximum burst size, in cells.                                                                                                                                                                                                                                                                             |
| <b>Peak rate</b>                    | Configured peak rate, in cps.                                                                                                                                                                                                                                                                                        |
| <b>Sustained rate</b>               | Configured sustained rate, in cps.                                                                                                                                                                                                                                                                                   |
| <b>Shaping rate</b>                 | Configured shaping rate, in bps.<br><br><b>NOTE:</b> (MX Series routers with ATM Multi-Rate CE MIC) Configured peak rate, in cps.                                                                                                                                                                                    |
| <b>Shaping rate burst</b>           | Configured burst size for the shaping rate, in bytes.<br><br><b>NOTE:</b> (MX Series routers with ATM Multi-Rate CE MIC) Configured maximum burst rate, in cells.                                                                                                                                                    |
| <b>Shaping rate priority high</b>   | Configured shaping rate for high-priority traffic, in bps.                                                                                                                                                                                                                                                           |
| <b>Shaping rate priority medium</b> | Configured shaping rate for medium-priority traffic, in bps.                                                                                                                                                                                                                                                         |
| <b>Shaping rate priority low</b>    | Configured shaping rate for low-priority traffic, in bps.                                                                                                                                                                                                                                                            |
| <b>Shaping rate excess high</b>     | Configured shaping rate for high-priority excess traffic, in bps.                                                                                                                                                                                                                                                    |
| <b>Shaping rate excess low</b>      | Configured shaping rate for low-priority excess traffic, in bps.                                                                                                                                                                                                                                                     |
| <b>Scheduler map</b>                | Name of the associated scheduler map.<br><br>(Enhanced subscriber management for MX Series routers) The name of the dynamic scheduler map object is associated with a generated UID (for example, <b>SMAP-1_UID1002</b> ) instead of with a subscriber interface.                                                    |
| <b>Delay Buffer rate</b>            | Configured delay buffer rate, in bps.                                                                                                                                                                                                                                                                                |

Table 116: show class-of-service traffic-control-profile Output Fields (*continued*)

| Field Name                      | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Excess rate</b>              | Configured excess rate, in percent or proportion.                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Excess rate high</b>         | Configured excess rate for high priority traffic, in percent or proportion.                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Excess rate low</b>          | Configured excess rate for low priority traffic, in percent or proportion.                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Guaranteed rate</b>          | <p>Configured guaranteed rate, in bps or cps.</p> <p><b>NOTE:</b> (MX Series routers with ATM Multi-Rate CE MIC) This value depends on the ATM service category chosen. Possible values:</p> <ul style="list-style-type: none"> <li>• <b>cbr</b>—Guaranteed rate is equal to the configured peak rate in cps.</li> <li>• <b>rtvbr</b>—Guaranteed rate is equal to the configured sustained rate in cps.</li> <li>• <b>nrtvbr</b>—Guaranteed rate is equal to the configured sustained rate in cps.</li> </ul> |
| <b>Guaranteed rate burst</b>    | Configured burst size for the guaranteed rate, in bytes.                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>adjust-minimum</b>           | Configured minimum shaping rate for an adjusted queue, in bps.                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>overhead accounting mode</b> | Configured shaping mode: <b>Frame Mode</b> or <b>Cell Mode</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Overhead bytes</b>           | Configured byte adjustment value.                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Adjust parent</b>            | <p>Configured shaping-rate adjustment for parent scheduler nodes. If enabled, this field appears.</p> <p><b>flow-aware</b> indicates that the parent scheduler node is adjusted only once per multicast channel.</p>                                                                                                                                                                                                                                                                                          |

## Sample Output

### show class-of-service traffic-control-profile

```

user@host> show class-of-service traffic-control-profile
Traffic control profile: Profile1, Index: 57625
  Scheduler map: m1
  Delay Buffer rate: 500000
  Guaranteed rate: 1000000

Traffic control profile: Profile2, Index: 57624
  Scheduler map: m2
  Delay Buffer rate: 600000
  Guaranteed rate: 2000000

Traffic control profile: Profile3, Index: 57627
  Scheduler map: m3

```



```

Delay Buffer rate: 800000
Guaranteed rate: 3000000
.Excess rate high: proportion 4

Traffic control profile: Profile4, Index: 57626
Scheduler map: m4
Delay Buffer rate: 750000
Guaranteed rate: 4000000
..adjust-minimum 20000000

Traffic control profile: foo, Index: 57626
Shaping rate: 100000000
Scheduler map: <default>
Overhead accounting mode: Frame Mode
Frame mode overhead accounting bytes: -12
Adjust parent: flow-aware

```

#### show class-of-service traffic-control-profile (MX Series routers with Clear Channel Multi-Rate CE MIC)

```

user@host> show class-of-service traffic-control-profile
Traffic control profile: at-vbr1, Index: 11395
ATM Service: RTVBR
Scheduler map: m3
Shaping rate: 1000 cps
Shaping rate burst: 500 cells
Delay Buffer rate: 2000 cps
Guaranteed rate: 1000 cps

Traffic control profile: foo, Index: 38286
ATM Service: UBR
Scheduler map: m3
overhead accounting mode: Frame Mode

```

#### show class-of-service traffic-control-profile (ACX Series routers with ATM IMA pseudowire interfaces)

```

user@host> show class-of-service traffic-control-profile
Traffic control profile: foo, Index: 38286
ATM Service: RTVBR
Shaping rate: 2000 cps
Shaping rate burst: 200 cells
Scheduler map: <default>
Delay Buffer rate: 1000 cps
Guaranteed rate: 1700 cps

```

#### show class-of-service traffic-control-profile (Enhanced Subscriber Management)

```

user@host> show class-of-service traffic-control-profile
Traffic control profile: TC_PROF_100_199_SERIES_UID1000, Index: 4294967313
Shaping rate: 11000000
Shaping rate burst: 1 bytes
Scheduler map: SMAP-1_UID1002
Delay Buffer rate: 5000000
Overhead accounting mode: Cell Mode
Frame mode overhead accounting bytes: -4
Cell mode overhead accounting bytes: 20

```

## show interfaces queue

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>show interfaces queue &lt;aggregate   remaining-traffic&gt; &lt;both-ingress-egress&gt; &lt;egress&gt; &lt;forwarding-class forwarding-class&gt; &lt;ingress&gt; &lt;interface-name interface-name&gt; &lt;l2-statistics&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b> | <p>Command introduced before Junos OS Release 7.4.</p> <p><b>both-ingress-egress</b>, <b>egress</b>, and <b>ingress</b> options introduced in Junos OS Release 7.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p><b>l2-statistics</b> option introduced in Junos OS Release 12.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>         | Display class-of-service (CoS) queue information for physical interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>             | <p><b>none</b>—Show detailed CoS queue statistics for all physical interfaces.</p> <p><b>aggregate</b>—(Optional) Display the aggregated queuing statistics of all logical interfaces that have traffic-control profiles configured. (Not on the QFX Series.)</p> <p><b>both-ingress-egress</b>—(Optional) On Gigabit Ethernet Intelligent Queuing 2 (IQ2) PICs, display both ingress and egress queue statistics. (Not on the QFX Series.)</p> <p><b>egress</b>—(Optional) Display egress queue statistics.</p> <p><b>forwarding-class forwarding-class</b>—(Optional) Forwarding class name for this queue. Shows detailed CoS statistics for the queue associated with the specified forwarding class.</p> <p><b>ingress</b>—(Optional) On Gigabit Ethernet IQ2 PICs, display ingress queue statistics. (Not on the QFX Series.)</p> <p><b>interface-name interface-name</b>—(Optional) Show detailed CoS queue statistics for the specified interface.</p> <p><b>l2-statistics</b>—(Optional) Display Layer 2 statistics for MLPPP, FRF.15, and FRF.16 bundles</p> <p><b>remaining-traffic</b>—(Optional) Display the remaining-traffic queue statistics of all logical interfaces that have traffic-control profiles configured.</p> |

### Overhead for Layer 2 Statistics

Transmitted packets and transmitted byte counts are displayed for the Layer 2 level with the addition of encapsulation overheads applied for fragmentation, as shown in [Table 117 on page 737](#). Others counters, such as packets and bytes queued (input) and drop counters, are displayed at the Layer 3 level. In the case of link fragmentation and interleaving (LFI) for which fragmentation is not applied, corresponding Layer 2 overheads are added, as shown in [Table 117 on page 737](#).

Table 117: Layer 2 Overhead and Transmitted Packets or Byte Counts

| Protocol       | Fragmentation       |                                   | LFI |
|----------------|---------------------|-----------------------------------|-----|
|                | First fragmentation | Second to <i>n</i> fragmentations |     |
|                | Bytes               | Bytes                             |     |
| MLPPP (Long)   | 13                  | 12                                | 8   |
| MLPPP (short)  | 11                  | 10                                | 8   |
| MLFR (FRF15)   | 12                  | 10                                | 8   |
| MFR (FRF16)    | 10                  | 8                                 | -   |
| MCMLPPP(Long)  | 13                  | 12                                | -   |
| MCMLPPP(Short) | 11                  | 10                                | -   |

#### Layer 2 Statistics—Fragmentation Overhead Calculation

##### MLPPP/MC-MLPPP Overhead details:

=====

##### Fragment 1:

```

Outer PPP header           : 4 bytes
Long or short sequence MLPPP header : 4 bytes or 2 bytes
Inner PPP header           : 1 byte
HDLC flag and FCS bytes    : 4 bytes

```

##### Fragments 2 .. n :

```

Outer PPP header           : 4 bytes
Long or short sequence MLPPP header : 4 bytes or 2 bytes
HDLC flag and FCS bytes    : 4 bytes

```

##### MLFR (FRF15) Overhead details:

=====

##### Fragment 1:

```

Framereley header         : 2 bytes
Control,NLPID             : 2 bytes
Fragmentaion header       : 2 bytes
Inner proto               : 2 bytes
HDLC flag and FCS         : 4 bytes

```

##### Fragments 2 ...n :

```

Framereley header         : 2 bytes
Control,NLPID             : 2 bytes
Fragmentaion header       : 2 bytes
HDLC flag and FCS         : 4 bytes

```

##### MFR (FRF16) Overhead details:

=====

```

Fragment 1:
  Fragmentation header : 2 bytes
  Framereelay header   : 2 bytes
  Inner proto          : 2 bytes
  HDLC flag and FCS    : 4 bytes

Fragments 2 ...n :
  Fragmentation header : 2 bytes
  Framereelay header   : 2 bytes
  HDLC flag and FCS    : 4 bytes

```

## Overhead with LFI

```

MLPPP(Long & short sequence):
=====
  Outer PPP header : 4 bytes
  HDLC flag and FCS : 4 bytes

MLFR (FRF15):
=====
  Framereelay header : 2 bytes
  Control,NLPID      : 2 bytes
  HDLC flag and FCS  : 4 bytes

```

The following examples show overhead for different cases:

- A 1000-byte packet is sent to a mlppp bundle without any fragmentation. At the Layer 2 level, bytes transmitted is 1013 in 1 packet. This overhead is for MLPPP long sequence encap.
- A 1000-byte packet is sent to a mlppp bundle with a fragment threshold of 250byte. At the Layer 2 level, bytes transmitted is 1061 bytes in 5 packets.
- A 1000-byte LFI packet is sent to an mlppp bundle. At the Layer 2 level, bytes transmitted is 1008 in 1 packet.

**remaining-traffic**—(Optional) Display the queuing statistics of all logical interfaces that do not have traffic-control profiles configured. (Not on the QFX Series.)

## Additional Information

For rate-limited interfaces hosted on Modular Interface Cards (MICs), Modular Port Concentrators (MPCs), or Enhanced Queuing DPCs, rate-limit packet-drop operations occur *before* packets are queued for transmission scheduling. For such interfaces, the statistics for queued traffic do not include the packets that have already been dropped due to rate limiting, and consequently the displayed statistics for queued traffic are the same as the displayed statistics for transmitted traffic.



**NOTE:** For rate-limited interfaces hosted on other types of hardware, rate-limit packet-drop operations occur *after* packets are queued for transmission scheduling. For these other interface types, the statistics for queued traffic include the packets that are later dropped due to rate limiting, and consequently the displayed statistics for queued traffic equals the sum of the statistics for transmitted and rate-limited traffic.

On M Series routers (except for the M320 and M120 routers), this command is valid only for a PIC installed on an enhanced Flexible PIC Concentrator (FPC).

Queue statistics for aggregated interfaces are supported on the M Series and T Series routers only. Statistics for an aggregated interface are the summation of the queue statistics of the child links of that aggregated interface. You can view the statistics for a child interface by using the **show interfaces statistics** command for that child interface.

When you configure tricolor marking on a 10-port 1-Gigabit Ethernet PIC, for queues 6 and 7 only, the output does not display the number of queued bytes and packets, or the number of bytes and packets dropped because of RED. If you do not configure tricolor marking on the interface, these statistics are available for all queues.

For the 4-port Channelized OC12 IQE PIC and 1-port Channelized OC48 IQE PIC, the **Packet Forwarding Engine Chassis Queues** field represents traffic bound for a particular physical interface on the PIC. For all other PICs, the **Packet Forwarding Engine Chassis Queues** field represents the total traffic bound for the PIC.

For Gigabit Ethernet IQ2 PICs, the **show interfaces queue** command output does not display the number of tail-dropped packets. This limitation does not apply to Packet Forwarding Engine chassis queues.

When fragmentation occurs on the egress interface, the first set of packet counters shows the postfragmentation values. The second set of packet counters (under the **Packet Forwarding Engine Chassis Queues** field) shows the prefragmentation values.

The behavior of the **egress** queues for the **Routing Engine-Generated Traffic** is not same as the configured queue for MLPPP and MFR configurations.

For information about how to configure CoS, see the *Junos OS Network Interfaces Library for Routing Devices*. For related CoS operational mode commands, see the [CLI Explorer](#).

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>List of Sample Output</b>    | <a href="#">show interfaces queue (Rate-Limited Interface on a Gigabit Ethernet MIC in an MPC) on page 744</a><br><a href="#">show interfaces queue (Aggregated Ethernet on a T320 Router) on page 745</a><br><a href="#">show interfaces queue (Gigabit Ethernet on a T640 Router) on page 747</a><br><a href="#">show interfaces queue aggregate (Gigabit Ethernet Enhanced DPC) on page 747</a><br><a href="#">show interfaces queue (Gigabit Ethernet IQ2 PIC) on page 751</a><br><a href="#">show interfaces queue both-ingress-egress (Gigabit Ethernet IQ2 PIC) on page 754</a><br><a href="#">show interfaces queue ingress (Gigabit Ethernet IQ2 PIC) on page 756</a><br><a href="#">show interfaces queue egress (Gigabit Ethernet IQ2 PIC) on page 757</a><br><a href="#">show interfaces queue remaining-traffic (Gigabit Ethernet Enhanced DPC) on page 759</a><br><a href="#">show interfaces queue (Channelized OC12 IQE Type 3 PIC in SONET Mode) on page 761</a><br><a href="#">show interfaces queue (QFX Series) on page 771</a><br><a href="#">show interfaces queue l2-statistics (lsq interface) on page 772</a><br><a href="#">show interfaces queue lsq (lsq-ifd) on page 773</a> |
| <b>Output Fields</b>            | Table 118 on page 740 lists the output fields for the <b>show interfaces queue</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

Table 118: show interfaces queue Output Fields

| Field Name                                                                                                                                          | Field Description                                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Physical interface</b>                                                                                                                           | Name of the physical interface.                                                                                                                                                                                                                                                                                                                                           |
| <b>Enabled</b>                                                                                                                                      | State of the interface. Possible values are described in the "Enabled Field" section under <i>Common Output Fields Description</i> .                                                                                                                                                                                                                                      |
| <b>Interface index</b>                                                                                                                              | Physical interface's index number, which reflects its initialization sequence.                                                                                                                                                                                                                                                                                            |
| <b>SNMP ifIndex</b>                                                                                                                                 | SNMP index number for the interface.                                                                                                                                                                                                                                                                                                                                      |
| <b>Forwarding classes supported</b>                                                                                                                 | Total number of forwarding classes supported on the specified interface.                                                                                                                                                                                                                                                                                                  |
| <b>Forwarding classes in use</b>                                                                                                                    | Total number of forwarding classes in use on the specified interface.                                                                                                                                                                                                                                                                                                     |
| <b>Ingress queues supported</b>                                                                                                                     | On Gigabit Ethernet IQ2 PICs only, total number of ingress queues supported on the specified interface.                                                                                                                                                                                                                                                                   |
| <b>Ingress queues in use</b>                                                                                                                        | On Gigabit Ethernet IQ2 PICs only, total number of ingress queues in use on the specified interface.                                                                                                                                                                                                                                                                      |
| <b>Output queues supported</b>                                                                                                                      | Total number of output queues supported on the specified interface.                                                                                                                                                                                                                                                                                                       |
| <b>Output queues in use</b>                                                                                                                         | Total number of output queues in use on the specified interface.                                                                                                                                                                                                                                                                                                          |
| <b>Egress queues supported</b>                                                                                                                      | Total number of egress queues supported on the specified interface.                                                                                                                                                                                                                                                                                                       |
| <b>Egress queues in use</b>                                                                                                                         | Total number of egress queues in use on the specified interface.                                                                                                                                                                                                                                                                                                          |
| <b>Queue counters (Ingress)</b>                                                                                                                     | CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces. <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul> |
| <b>Burst size</b>                                                                                                                                   | (Logical interfaces on IQ PICs only) Maximum number of bytes up to which the logical interface can burst. The burst size is based on the shaping rate applied to the interface.                                                                                                                                                                                           |
| The following output fields are applicable to both interface component and Packet Forwarding component in the <b>show interfaces queue</b> command: |                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Queue</b>                                                                                                                                        | Queue number.                                                                                                                                                                                                                                                                                                                                                             |
| <b>Forwarding classes</b>                                                                                                                           | Forwarding class name.                                                                                                                                                                                                                                                                                                                                                    |

Table 118: show interfaces queue Output Fields (*continued*)

| Field Name                  | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Queued Packets</b>       | <p>Number of packets queued to this queue.</p> <p><b>NOTE:</b> For Gigabit Ethernet IQ2 interfaces, the Queued Packets count is calculated by the Junos OS interpreting one frame buffer as one packet. If the queued packets are very large or very small, the calculation might not be completely accurate for transit traffic. The count is completely accurate for traffic terminated on the router.</p> <p>For rate-limited interfaces hosted on MICs or MPCs only, this statistic does not include traffic dropped due to rate limiting. For more information, see <a href="#">“Additional Information” on page 738</a>.</p> |
| <b>Queued Bytes</b>         | <p>Number of bytes queued to this queue. The byte counts vary by interface hardware. For more information, see <a href="#">Table 119 on page 743</a>.</p> <p>For rate-limited interfaces hosted on MICs or MPCs only, this statistic does not include traffic dropped due to rate limiting. For more information, see <a href="#">“Additional Information” on page 738</a>.</p>                                                                                                                                                                                                                                                    |
| <b>Transmitted Packets</b>  | <p>Number of packets transmitted by this queue. When fragmentation occurs on the egress interface, the first set of packet counters shows the postfragmentation values. The second set of packet counters (displayed under the <b>Packet Forwarding Engine Chassis Queues</b> field) shows the prefragmentation values.</p> <p><b>NOTE:</b> For Layer 2 statistics, see <a href="#">“Overhead for Layer 2 Statistics” on page 736</a></p>                                                                                                                                                                                          |
| <b>Transmitted Bytes</b>    | <p>Number of bytes transmitted by this queue. The byte counts vary by interface hardware. For more information, see <a href="#">Table 119 on page 743</a>.</p> <p><b>NOTE:</b> On MX Series routers, this number can be inaccurate when you issue the command for a physical interface repeatedly and in quick succession, because the statistics for the child nodes are collected infrequently. Wait ten seconds between successive iterations to avoid this situation.</p> <p><b>NOTE:</b> For Layer 2 statistics, see <a href="#">“Overhead for Layer 2 Statistics” on page 736</a></p>                                        |
| <b>Tail-dropped packets</b> | <p>Number of packets dropped because of tail drop.</p> <p><b>NOTE:</b> The <b>Tail-dropped packets</b> counter is not supported on the PTX Series Packet Transport Routers.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>RL-dropped packets</b>   | <p>Number of packets dropped due to rate limiting.</p> <p>For rate-limited interfaces hosted on MICs, MPCs, and Enhanced Queuing DPCs only, this statistic is not included in the queued traffic statistics. For more information, see <a href="#">“Additional Information” on page 738</a>.</p> <p><b>NOTE:</b> The <b>RL-dropped packets</b> counter is not supported on the PTX Series Packet Transport Routers, and is omitted from the output.</p>                                                                                                                                                                            |
| <b>RL-dropped bytes</b>     | <p>Number of bytes dropped due to rate limiting.</p> <p>For rate-limited interfaces hosted on MICs, MPCs, and Enhanced Queuing DPCs only, this statistic is not included in the queued traffic statistics. For more information, see <a href="#">“Additional Information” on page 738</a>.</p>                                                                                                                                                                                                                                                                                                                                     |

Table 118: show interfaces queue Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>RED-dropped packets</b> | <p>Number of packets dropped because of random early detection (RED).</p> <ul style="list-style-type: none"> <li>(M Series and T Series routers only) On M320 and M120 routers and the T Series routers, the total number of dropped packets is displayed. On all other M Series routers, the output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li><b>Low, non-TCP</b>—Number of low-loss priority non-TCP packets dropped because of RED.</li> <li><b>Low, TCP</b>—Number of low-loss priority TCP packets dropped because of RED.</li> <li><b>High, non-TCP</b>—Number of high-loss priority non-TCP packets dropped because of RED.</li> <li><b>High, TCP</b>—Number of high-loss priority TCP packets dropped because of RED.</li> </ul> </li> <li>(MX Series routers with enhanced DPCs, and T Series routers with enhanced FPCs only) The output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li><b>Low</b>—Number of low-loss priority packets dropped because of RED.</li> <li><b>Medium-low</b>—Number of medium-low loss priority packets dropped because of RED.</li> <li><b>Medium-high</b>—Number of medium-high loss priority packets dropped because of RED.</li> <li><b>High</b>—Number of high-loss priority packets dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> |
| <b>RED-dropped bytes</b>   | <p>Number of bytes dropped because of RED. The byte counts vary by interface hardware. For more information, see <a href="#">Table 119 on page 743</a>.</p> <ul style="list-style-type: none"> <li>(M Series and T Series routers only) On M320 and M120 routers and the T Series routers, only the total number of dropped bytes is displayed. On all other M Series routers, the output classifies dropped bytes into the following categories: <ul style="list-style-type: none"> <li><b>Low, non-TCP</b>—Number of low-loss priority non-TCP bytes dropped because of RED.</li> <li><b>Low, TCP</b>—Number of low-loss priority TCP bytes dropped because of RED.</li> <li><b>High, non-TCP</b>—Number of high-loss priority non-TCP bytes dropped because of RED.</li> <li><b>High, TCP</b>—Number of high-loss priority TCP bytes dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

Byte counts vary by interface hardware. [Table 119 on page 743](#) shows how the byte counts on the outbound interfaces vary depending on the interface hardware.

[Table 119 on page 743](#) is based on the assumption that outbound interfaces are sending IP traffic with 478 bytes per packet.



Table 119: Byte Count by Interface Hardware

| Interface Hardware               | Output Level                | Byte Count Includes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Comments                                                                                                                                                                                                     |
|----------------------------------|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Gigabit Ethernet IQ and IQE PICs | Interface                   | <p>Queued: 490 bytes per packet, representing 478 bytes of Layer 3 packet + 12 bytes</p> <p>Transmitted: 490 bytes per packet, representing 478 bytes of Layer 3 packet + 12 bytes</p> <p>RED dropped: 496 bytes per packet representing 478 bytes of Layer 3 packet + 18 bytes</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | <p>The 12 additional bytes include 6 bytes for the destination MAC address + 4 bytes for the VLAN + 2 bytes for the Ethernet type.</p> <p>For RED dropped, 6 bytes are added for the source MAC address.</p> |
|                                  | Packet forwarding component | <p>Queued: 478 bytes per packet, representing 478 bytes of Layer 3 packet</p> <p>Transmitted: 478 bytes per packet, representing 478 bytes of Layer 3 packet</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | —                                                                                                                                                                                                            |
| Non-IQ PIC                       | Interface                   | <p>T Series, TX Series, T1600, and MX Series routers:</p> <ul style="list-style-type: none"> <li>• Queued: 478 bytes of Layer 3 packet.</li> <li>• Transmitted: 478 bytes of Layer 3 packet.</li> </ul> <p>T4000 routers with Type 5 FPCs :</p> <ul style="list-style-type: none"> <li>• Queued: 478 bytes of Layer 3 packet + the full Layer 2 overhead including 4 bytes CRC + the full Layer 1 overhead 8 bytes preamble + 12 bytes Inter frame Gap.</li> <li>• Transmitted: 478 bytes of Layer 3 packet + the full Layer 2 overhead including 4 bytes CRC + the full Layer 1 overhead 8 bytes preamble + 12 bytes Interframe Gap.</li> </ul> <p>M Series routers:</p> <ul style="list-style-type: none"> <li>• Queued: 478 bytes of Layer 3 packet.</li> <li>• Transmitted: 478 bytes of Layer 3 packet + the full Layer 2 overhead.</li> </ul> <p>PTX Series Packet Transport Routers:</p> <ul style="list-style-type: none"> <li>• Queued: The sum of the transmitted bytes and the RED dropped bytes.</li> <li>• Transmitted: Full Layer 2 overhead (including all L2 encapsulation and CRC) + 12 inter-packet gap + 8 for the preamble.</li> <li>• RED dropped: Full Layer 2 overhead (including all L2 encapsulation and CRC) + 12 inter-packet gap + 8 for the preamble (does not include the VLAN header or MPLS pushed bytes).</li> </ul> | <p>The Layer 2 overhead is 14 bytes for non-VLAN traffic and 18 bytes for VLAN traffic.</p>                                                                                                                  |

Table 119: Byte Count by Interface Hardware (*continued*)

| Interface Hardware                                   | Output Level                | Byte Count Includes                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Comments                                                                                                                           |
|------------------------------------------------------|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| IQ and IQE PICs with a SONET/SDH interface           | Interface                   | Queued: 482 bytes per packet, representing 478 bytes of Layer 3 packet + 4 bytes<br><br>Transmitted: 482 bytes per packet, representing 478 bytes of Layer 3 packet + 4 bytes<br><br>RED dropped: 482 bytes per packet, representing 478 bytes of Layer 3 packet + 4 bytes                                                                                                                                                                                                                | The additional 4 bytes are for the Layer 2 Point-to-Point Protocol (PPP) header.                                                   |
|                                                      | Packet forwarding component | Queued: 478 bytes per packet, representing 478 bytes of Layer 3 packet<br><br>Transmitted: 486 bytes per packet, representing 478 bytes of Layer 3 packet + 8 bytes                                                                                                                                                                                                                                                                                                                       | For transmitted packets, the additional 8 bytes includes 4 bytes for the PPP header and 4 bytes for a cookie.                      |
| Non-IQ PIC with a SONET/SDH interface                | Interface                   | T Series, TX Series, T1600, and MX Series routers: <ul style="list-style-type: none"> <li>Queued: 478 bytes of Layer 3 packet.</li> <li>Transmitted: 478 bytes of Layer 3 packet.</li> </ul> M Series routers: <ul style="list-style-type: none"> <li>Queued: 478 bytes of Layer 3 packet.</li> <li>Transmitted: 483 bytes per packet, representing 478 bytes of Layer 3 packet + 5 bytes</li> <li>RED dropped: 478 bytes per packet, representing 478 bytes of Layer 3 packet</li> </ul> | For transmitted packets, the additional 5 bytes includes 4 bytes for the PPP header and 1 byte for the packet loss priority (PLP). |
| Interfaces configured with Frame Relay Encapsulation | Interface                   | The default Frame Relay overhead is 7 bytes. If you configure the Frame Check Sequence (FCS) to 4 bytes, then the overhead increases to 10 bytes.                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                    |
| 1-port 10-Gigabit Ethernet IQ2 and IQ2-E PICs        | Interface                   | Queued: 478 bytes of Layer 3 packet + the full Layer 2 overhead including CRC.<br><br>Transmitted: 478 bytes of Layer 3 packet + the full Layer 2 overhead including CRC.                                                                                                                                                                                                                                                                                                                 | The Layer 2 overhead is 18 bytes for non-VLAN traffic and 22 bytes for VLAN traffic.                                               |
| 4-port 1G IQ2 and IQ2-E PICs                         | Packet forwarding component | Queued: 478 bytes of Layer 3 packet.                                                                                                                                                                                                                                                                                                                                                                                                                                                      | —                                                                                                                                  |
| 8-port 1G IQ2 and IQ2-E PICs                         |                             | Transmitted: 478 bytes of Layer 3 packet.                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                    |

## Sample Output

### show interfaces queue (Rate-Limited Interface on a Gigabit Ethernet MIC in an MPC)

The following example shows queue information for the rate-limited interface ge-4/2/0 on a Gigabit Ethernet MIC in an MPC. For rate-limited queues for interfaces hosted on MICs or MPCs, rate-limit packet drops occur prior to packet output queuing. In the

command output, the nonzero statistics displayed in the **RL-dropped packets** and **RL-dropped bytes** fields quantify the traffic dropped to rate-limit queue 0 output to 10 percent of 1 gigabyte (100 megabits) per second. Because the RL-dropped traffic is not included in the **Queued** statistics, the statistics displayed for queued traffic are the same as the statistics for transmitted traffic.

```
user@host> show interfaces queue ge-4/2/0
Physical interface: ge-4/2/0, Enabled, Physical link is Up
  Interface index: 203, SNMP ifIndex: 1054
Forwarding classes: 16 supported, 4 in use
Egress queues: 8 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      :      131300649      141751 pps
    Bytes       :      11287964840    99793248 bps
  Transmitted:
    Packets      :      131300649      141751 pps
    Bytes       :      11287964840    99793248 bps
    Tail-dropped packets :      0      0 pps
    RL-dropped packets  :      205050862    602295 pps
    RL-dropped bytes   :      13595326612  327648832 bps
    RED-dropped packets :      0      0 pps
      Low           :      0      0 pps
      Medium-low    :      0      0 pps
      Medium-high   :      0      0 pps
      High          :      0      0 pps
    RED-dropped bytes  :      0      0 bps
      Low           :      0      0 bps
      Medium-low    :      0      0 bps
      Medium-high   :      0      0 bps
      High          :      0      0 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      :      0      0 pps
    Bytes       :      0      0 bps
```

### show interfaces queue (Aggregated Ethernet on a T320 Router)

The following example shows that the aggregated Ethernet interface, **ae1**, has traffic on queues **af1** and **af12**:

```
user@host> show interfaces queue ae1
Physical interface: ae1, Enabled, Physical link is Up
  Interface index: 158, SNMP ifIndex: 33 Forwarding classes: 8 supported, 8 in use
Output queues: 8 supported, 8 in use
Queue: 0, Forwarding classes: be
  Queued:
    Packets      :      5      0 pps
    Bytes       :      242      0 bps
  Transmitted:
    Packets      :      5      0 pps
    Bytes       :      242      0 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets  :      0      0 pps
    RED-dropped bytes   :      0      0 bps
Queue: 1, Forwarding classes: af1
  Queued:
    Packets      :      42603765      595484 pps
```

```

Bytes                :          5453281920          609776496 bps
Transmitted:
Packets              :          42603765           595484 pps
Bytes                :          5453281920          609776496 bps
Tail-dropped packets :              0              0 pps
RED-dropped packets  :              0              0 pps
RED-dropped bytes    :              0              0 bps
Queue: 2, Forwarding classes: ef1
Queued:
Packets              :              0              0 pps
Bytes                :              0              0 bps
Transmitted:
Packets              :              0              0 pps
Bytes                :              0              0 bps
Tail-dropped packets :              0              0 pps
RED-dropped packets  :              0              0 pps
RED-dropped bytes    :              0              0 bps
Queue: 3, Forwarding classes: nc
Queued:
Packets              :              45              0 pps
Bytes                :             3930              0 bps
Transmitted:
Packets              :              45              0 pps
Bytes                :             3930              0 bps
Tail-dropped packets :              0              0 pps
RED-dropped packets  :              0              0 pps
RED-dropped bytes    :              0              0 bps
Queue: 4, Forwarding classes: af11
Queued:
Packets              :              0              0 pps
Bytes                :              0              0 bps
Transmitted:
Packets              :              0              0 pps
Bytes                :              0              0 bps
Tail-dropped packets :              0              0 pps
RED-dropped packets  :              0              0 pps
RED-dropped bytes    :              0              0 bps
Queue: 5, Forwarding classes: ef11
Queued:
Packets              :              0              0 pps
Bytes                :              0              0 bps
Transmitted:
Packets              :              0              0 pps
Bytes                :              0              0 bps
Tail-dropped packets :              0              0 pps
RED-dropped packets  :              0              0 pps
RED-dropped bytes    :              0              0 bps
Queue: 6, Forwarding classes: af12
Queued:
Packets              :          31296413          437436 pps
Bytes                :          4005940864          447935200 bps
Transmitted:
Packets              :          31296413          437436 pps
Bytes                :          4005940864          447935200 bps
Tail-dropped packets :              0              0 pps
RED-dropped packets  :              0              0 pps
RED-dropped bytes    :              0              0 bps
Queue: 7, Forwarding classes: nc2
Queued:
Packets              :              0              0 pps
Bytes                :              0              0 bps

```

```

Transmitted:
Packets      :          0          0 pps
Bytes        :          0          0 bps
Tail-dropped packets :          0          0 pps
RED-dropped packets :          0          0 pps
RED-dropped bytes  :          0          0 bps

```

### show interfaces queue (Gigabit Ethernet on a T640 Router)

```

user@host> show interfaces queue
Physical interface: ge-7/0/1, Enabled, Physical link is Up
  Interface index: 150, SNMP ifIndex: 42
  Forwarding classes: 8 supported, 8 in use
  Output queues: 8 supported, 8 in use
  Queue: 0, Forwarding classes: be
    Queued:
      Packets      :          13          0 pps
      Bytes        :         622          0 bps
    Transmitted:
      Packets      :          13          0 pps
      Bytes        :         622          0 bps
      Tail-dropped packets :          0          0 pps
      RED-dropped packets :          0          0 pps
      RED-dropped bytes  :          0          0 bps
  Queue: 1, Forwarding classes: af1
    Queued:
      Packets      :      1725947945      372178 pps
      Bytes        :      220921336960      381110432 bps
    Transmitted:
      Packets      :      1725947945      372178 pps
      Bytes        :      220921336960      381110432 bps
      Tail-dropped packets :          0          0 pps
      RED-dropped packets :          0          0 pps
      RED-dropped bytes  :          0          0 bps
  Queue: 2, Forwarding classes: ef1
    Queued:
      Packets      :          0          0 pps
      Bytes        :          0          0 bps
    Transmitted:
      Packets      :          0          0 pps
      Bytes        :          0          0 bps
      Tail-dropped packets :          0          0 pps
      RED-dropped packets :          0          0 pps
      RED-dropped bytes  :          0          0 bps
  Queue: 3, Forwarding classes: nc
    Queued:
      Packets      :          571          0 pps
      Bytes        :         49318         336 bps
    Transmitted:
      Packets      :          571          0 pps
      Bytes        :         49318         336 bps
      Tail-dropped packets :          0          0 pps
      RED-dropped packets :          0          0 pps
      RED-dropped bytes  :          0          0 bps

```

### show interfaces queue aggregate (Gigabit Ethernet Enhanced DPC)

```

user@host> show interfaces queue ge-2/2/9 aggregate

```

```

Physical interface: ge-2/2/9, Enabled, Physical link is Up
Interface index: 238, SNMP ifIndex: 71
Forwarding classes: 16 supported, 4 in use
Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      :      148450735      947295 pps
    Bytes        :      8016344944    409228848 bps
  Transmitted:
    Packets      :      76397439      487512 pps
    Bytes        :    4125461868    210602376 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :      72053285      459783 pps
      Low        :      72053285      459783 pps
      Medium-low :           0          0 pps
      Medium-high:           0          0 pps
      High       :           0          0 pps
    RED-dropped bytes :    3890877444    198626472 bps
      Low        :    3890877444    198626472 bps
      Medium-low :           0          0 bps
      Medium-high:           0          0 bps
      High       :           0          0 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      :           0          0 pps
    Bytes        :           0          0 bps
  Transmitted:
    Packets      :           0          0 pps
    Bytes        :           0          0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :           0          0 pps
      Low        :           0          0 pps
      Medium-low :           0          0 pps
      Medium-high:           0          0 pps
      High       :           0          0 pps
    RED-dropped bytes :           0          0 bps
      Low        :           0          0 bps
      Medium-low :           0          0 bps
      Medium-high:           0          0 bps
      High       :           0          0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets      :      410278257      473940 pps
    Bytes        :    22156199518    204742296 bps
  Transmitted:
    Packets      :      4850003       4033 pps
    Bytes        :    261900162    1742256 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :      405425693      469907 pps
      Low        :      405425693      469907 pps
      Medium-low :           0          0 pps
      Medium-high:           0          0 pps
      High       :           0          0 pps
    RED-dropped bytes :    21892988124    203000040 bps
      Low        :    21892988124    203000040 bps
      Medium-low :           0          0 bps
      Medium-high:           0          0 bps
      High       :           0          0 bps
Queue: 3, Forwarding classes: network-control
  Queued:
    Packets      :           0          0 pps

```

```

Bytes : 0 0 bps
Transmitted:
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
Low : 0 0 pps
Medium-low : 0 0 pps
Medium-high : 0 0 pps
High : 0 0 pps
RED-dropped bytes : 0 0 bps
Low : 0 0 bps
Medium-low : 0 0 bps
Medium-high : 0 0 bps
High : 0 0 bps
Forwarding classes: 16 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
Packets : 76605230 485376 pps
Bytes : 5209211400 264044560 bps
Transmitted:
Packets : 76444631 484336 pps
Bytes : 5198235612 263478800 bps
Tail-dropped packets : Not Available
RED-dropped packets : 160475 1040 pps
Low : 160475 1040 pps
Medium-low : 0 0 pps
Medium-high : 0 0 pps
High : 0 0 pps
RED-dropped bytes : 10912300 565760 bps
Low : 10912300 565760 bps
Medium-low : 0 0 bps
Medium-high : 0 0 bps
High : 0 0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
Packets : 0 0 pps
Bytes : 0 0 bps
Transmitted:
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
Low : 0 0 pps
Medium-low : 0 0 pps
Medium-high : 0 0 pps
High : 0 0 pps
RED-dropped bytes : 0 0 bps
Low : 0 0 bps
Medium-low : 0 0 bps
Medium-high : 0 0 bps
High : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
Packets : 4836136 3912 pps
Bytes : 333402032 2139056 bps
Transmitted:
Packets : 3600866 1459 pps
Bytes : 244858888 793696 bps
Tail-dropped packets : Not Available

```

```

RED-dropped packets :          1225034          2450 pps
  Low                :          1225034          2450 pps
  Medium-low         :              0              0 pps
  Medium-high        :              0              0 pps
  High               :              0              0 pps
RED-dropped bytes   :          83302312        1333072 bps
  Low                :          83302312        1333072 bps
  Medium-low         :              0              0 bps
  Medium-high        :              0              0 bps
  High               :              0              0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets            :              0              0 pps
  Bytes              :              0              0 bps
Transmitted:
  Packets            :              0              0 pps
  Bytes              :              0              0 bps
Tail-dropped packets : Not Available
RED-dropped packets :              0              0 pps
  Low                :              0              0 pps
  Medium-low         :              0              0 pps
  Medium-high        :              0              0 pps
  High               :              0              0 pps
RED-dropped bytes   :              0              0 bps
  Low                :              0              0 bps
  Medium-low         :              0              0 bps
  Medium-high        :              0              0 bps
  High               :              0              0 bps

```

#### Packet Forwarding Engine Chassis Queues:

Queues: 4 supported, 4 in use

Queue: 0, Forwarding classes: best-effort

```

Queued:
  Packets            :          77059796        486384 pps
  Bytes              :          3544750624      178989576 bps
Transmitted:
  Packets            :          77059797        486381 pps
  Bytes              :          3544750670      178988248 bps
Tail-dropped packets :              0              0 pps
RED-dropped packets :              0              0 pps
  Low                :              0              0 pps
  Medium-low         :              0              0 pps
  Medium-high        :              0              0 pps
  High               :              0              0 pps
RED-dropped bytes   :              0              0 bps
  Low                :              0              0 bps
  Medium-low         :              0              0 bps
  Medium-high        :              0              0 bps
  High               :              0              0 bps

```

Queue: 1, Forwarding classes: expedited-forwarding

```

Queued:
  Packets            :              0              0 pps
  Bytes              :              0              0 bps
Transmitted:
  Packets            :              0              0 pps
  Bytes              :              0              0 bps
Tail-dropped packets :              0              0 pps
RED-dropped packets :              0              0 pps
  Low                :              0              0 pps
  Medium-low         :              0              0 pps
  Medium-high        :              0              0 pps

```



```

        High : 0 0 pps
    RED-dropped bytes : 0 0 bps
        Low : 0 0 bps
    Medium-low : 0 0 bps
    Medium-high : 0 0 bps
        High : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets : 4846580 3934 pps
    Bytes : 222942680 1447768 bps
  Transmitted:
    Packets : 4846580 3934 pps
    Bytes : 222942680 1447768 bps
    Tail-dropped packets : 0 0 pps
    RED-dropped packets : 0 0 pps
        Low : 0 0 pps
    Medium-low : 0 0 pps
    Medium-high : 0 0 pps
        High : 0 0 pps
    RED-dropped bytes : 0 0 bps
        Low : 0 0 bps
    Medium-low : 0 0 bps
    Medium-high : 0 0 bps
        High : 0 0 bps
Queue: 3, Forwarding classes: network-control
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : 0 0 pps
    RED-dropped packets : 0 0 pps
        Low : 0 0 pps
    Medium-low : 0 0 pps
    Medium-high : 0 0 pps
        High : 0 0 pps
    RED-dropped bytes : 0 0 bps
        Low : 0 0 bps
    Medium-low : 0 0 bps
    Medium-high : 0 0 bps
        High : 0 0 bps

```

### show interfaces queue (Gigabit Ethernet IQ2 PIC)

```

user@host> show interfaces queue ge-7/1/3
Physical interface: ge-7/1/3, Enabled, Physical link is Up
  Interface index: 170, SNMP ifIndex: 70 Forwarding classes: 16 supported, 4 in
  use Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets : 418390039 10 pps
    Bytes : 38910269752 7440 bps
  Transmitted:
    Packets : 418390039 10 pps
    Bytes : 38910269752 7440 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: expedited-forwarding

```

```

Queued:
  Packets      :          0          0 pps
  Bytes       :          0          0 bps
Transmitted:
  Packets      :          0          0 pps
  Bytes       :          0          0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :          0          0 pps
  RED-dropped bytes  :          0          0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
  Packets      :          0          0 pps
  Bytes       :          0          0 bps
Transmitted:
  Packets      :          0          0 pps
  Bytes       :          0          0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :          0          0 pps
  RED-dropped bytes  :          0          0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets      :        7055          1 pps
  Bytes       :     451552        512 bps
Transmitted:
  Packets      :        7055          1 pps
  Bytes       :     451552        512 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :          0          0 pps
  RED-dropped bytes  :          0          0 bps
Forwarding classes: 16 supported, 4 in use Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
  Packets      :        1031          0 pps
  Bytes       :     143292          0 bps
Transmitted:
  Packets      :        1031          0 pps
  Bytes       :     143292          0 bps
  Tail-dropped packets : Not Available
  RL-dropped packets  :          0          0 pps
  RL-dropped bytes    :          0          0 bps
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
  Packets      :          0          0 pps
  Bytes       :          0          0 bps
Transmitted:
  Packets      :          0          0 pps
  Bytes       :          0          0 bps
  Tail-dropped packets : Not Available
  RL-dropped packets  :          0          0 pps
  RL-dropped bytes    :          0          0 bps
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
  Packets      :          0          0 pps
  Bytes       :          0          0 bps
Transmitted:
  Packets      :          0          0 pps
  Bytes       :          0          0 bps

```

```

Tail-dropped packets : Not Available
RL-dropped packets   :                0                0 pps
RL-dropped bytes     :                0                0 bps
RED-dropped packets   :                0                0 pps
RED-dropped bytes     :                0                0 bps
Queue: 3, Forwarding classes: network-control
Queued:
Packets               :                77009            11 pps
Bytes                 :            6894286            7888 bps
Transmitted:
Packets               :                77009            11 pps
Bytes                 :            6894286            7888 bps
Tail-dropped packets : Not Available
RL-dropped packets   :                0                0 pps
RL-dropped bytes     :                0                0 bps
RED-dropped packets   :                0                0 pps
RED-dropped bytes     :                0                0 bps

```

#### Packet Forwarding Engine Chassis Queues:

Queues: 4 supported, 4 in use

Queue: 0, Forwarding classes: best-effort

```

Queued:
Packets               :                1031            0 pps
Bytes                 :            147328            0 bps
Transmitted:
Packets               :                1031            0 pps
Bytes                 :            147328            0 bps
Tail-dropped packets :                0                0 pps
RED-dropped packets   :                0                0 pps
Low, non-TCP          :                0                0 pps
Low, TCP              :                0                0 pps
High, non-TCP         :                0                0 pps
High, TCP             :                0                0 pps
RED-dropped bytes     :                0                0 bps
Low, non-TCP          :                0                0 bps
Low, TCP              :                0                0 bps
High, non-TCP         :                0                0 bps
High, TCP             :                0                0 bps

```

Queue: 1, Forwarding classes: expedited-forwarding

```

Queued:
Packets               :                0                0 pps
Bytes                 :                0                0 bps
Transmitted:
Packets               :                0                0 pps
Bytes                 :                0                0 bps
Tail-dropped packets :                0                0 pps
RED-dropped packets   :                0                0 pps
Low, non-TCP          :                0                0 pps
Low, TCP              :                0                0 pps
High, non-TCP         :                0                0 pps
High, TCP             :                0                0 pps
RED-dropped bytes     :                0                0 bps
Low, non-TCP          :                0                0 bps
Low, TCP              :                0                0 bps
High, non-TCP         :                0                0 bps
High, TCP             :                0                0 bps

```

Queue: 2, Forwarding classes: assured-forwarding

```

Queued:
Packets               :                0                0 pps
Bytes                 :                0                0 bps
Transmitted:

```

```

Packets          : 0 0 pps
Bytes            : 0 0 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : 0 0 pps
  Low, non-TCP    : 0 0 pps
  Low, TCP        : 0 0 pps
  High, non-TCP   : 0 0 pps
  High, TCP       : 0 0 pps
RED-dropped bytes : 0 0 bps
  Low, non-TCP    : 0 0 bps
  Low, TCP        : 0 0 bps
  High, non-TCP   : 0 0 bps
  High, TCP       : 0 0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets          : 94386 12 pps
  Bytes            : 13756799 9568 bps
Transmitted:
  Packets          : 94386 12 pps
  Bytes            : 13756799 9568 bps
  Tail-dropped packets : 0 0 pps
  RED-dropped packets : 0 0 pps
    Low, non-TCP    : 0 0 pps
    Low, TCP        : 0 0 pps
    High, non-TCP   : 0 0 pps
    High, TCP       : 0 0 pps
  RED-dropped bytes : 0 0 bps
    Low, non-TCP    : 0 0 bps
    Low, TCP        : 0 0 bps
    High, non-TCP   : 0 0 bps
    High, TCP       : 0 0 bps

```

#### show interfaces queue both-ingress-egress (Gigabit Ethernet IQ2 PIC)

```

user@host> show interfaces queue ge-6/2/0 both-ingress-egress
Physical interface: ge-6/2/0, Enabled, Physical link is Up
  Interface index: 175, SNMP ifIndex: 121
Forwarding classes: 8 supported, 4 in use
Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets          : Not Available
    Bytes            : 0 0 bps
  Transmitted:
    Packets          : 254 0 pps
    Bytes            : 16274 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes   : 0 0 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets          : Not Available
    Bytes            : 0 0 bps
  Transmitted:
    Packets          : 0 0 pps
    Bytes            : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes   : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding

```

```

Queued:
  Packets          : Not Available
  Bytes           :                0                0 bps
Transmitted:
  Packets          :                0                0 pps
  Bytes           :                0                0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :                0                0 pps
  RED-dropped bytes  :                0                0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets          : Not Available
  Bytes           :                0                0 bps
Transmitted:
  Packets          :                0                0 pps
  Bytes           :                0                0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :                0                0 pps
  RED-dropped bytes  :                0                0 bps
Forwarding classes: 8 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
  Packets          : Not Available
  Bytes           :                0                0 bps
Transmitted:
  Packets          :                3                0 pps
  Bytes           :               126                0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :                0                0 pps
  RED-dropped bytes  :                0                0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
  Packets          : Not Available
  Bytes           :                0                0 bps
Transmitted:
  Packets          :                0                0 pps
  Bytes           :                0                0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :                0                0 pps
  RED-dropped bytes  :                0                0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
  Packets          : Not Available
  Bytes           :                0                0 bps
Transmitted:
  Packets          :                0                0 pps
  Bytes           :                0                0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :                0                0 pps
  RED-dropped bytes  :                0                0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets          : Not Available
  Bytes           :                0                0 bps
Transmitted:
  Packets          :                0                0 pps
  Bytes           :                0                0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :                0                0 pps
  RED-dropped bytes  :                0                0 bps

```

```

Packet Forwarding Engine Chassis Queues:
Queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      :      80564692      0 pps
    Bytes        :      3383717100    0 bps
  Transmitted:
    Packets      :      80564692      0 pps
    Bytes        :      3383717100    0 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      0      0 pps
    RED-dropped bytes  :      0      0 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      :      80564685      0 pps
    Bytes        :      3383716770    0 bps
  Transmitted:
    Packets      :      80564685      0 pps
    Bytes        :      3383716770    0 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      0      0 pps
    RED-dropped bytes  :      0      0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets      :      0      0 pps
    Bytes        :      0      0 bps
  Transmitted:
    Packets      :      0      0 pps
    Bytes        :      0      0 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      0      0 pps
    RED-dropped bytes  :      0      0 bps
Queue: 3, Forwarding classes: network-control
  Queued:
    Packets      :      9397      0 pps
    Bytes        :      3809052      232 bps
  Transmitted:
    Packets      :      9397      0 pps
    Bytes        :      3809052      232 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      0      0 pps
    RED-dropped bytes  :      0      0 bps

```

### show interfaces queue ingress (Gigabit Ethernet IQ2 PIC)

```

user@host> show interfaces queue ge-6/2/0 ingress
Physical interface: ge-6/2/0, Enabled, Physical link is Up
  Interface index: 175, SNMP ifIndex: 121
Forwarding classes: 8 supported, 4 in use
Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      : Not Available
    Bytes        :      0      0 bps
  Transmitted:
    Packets      :      288      0 pps
    Bytes        :      18450      0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :      0      0 pps
    RED-dropped bytes  :      0      0 bps

```

```

Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      : Not Available
    Bytes        :                0                0 bps
  Transmitted:
    Packets      :                0                0 pps
    Bytes        :                0                0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :                0                0 pps
    RED-dropped bytes  :                0                0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets      : Not Available
    Bytes        :                0                0 bps
  Transmitted:
    Packets      :                0                0 pps
    Bytes        :                0                0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :                0                0 pps
    RED-dropped bytes  :                0                0 bps
Queue: 3, Forwarding classes: network-control
  Queued:
    Packets      : Not Available
    Bytes        :                0                0 bps
  Transmitted:
    Packets      :                0                0 pps
    Bytes        :                0                0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :                0                0 pps
    RED-dropped bytes  :                0                0 bps

```

#### show interfaces queue egress (Gigabit Ethernet IQ2 PIC)

```

user@host> show interfaces queue ge-6/2/0 egress
Physical interface: ge-6/2/0, Enabled, Physical link is Up
  Interface index: 175, SNMP ifIndex: 121
Forwarding classes: 8 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      : Not Available
    Bytes        :                0                0 bps
  Transmitted:
    Packets      :                3                0 pps
    Bytes        :               126                0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :                0                0 pps
    RED-dropped bytes  :                0                0 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      : Not Available
    Bytes        :                0                0 bps
  Transmitted:
    Packets      :                0                0 pps
    Bytes        :                0                0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :                0                0 pps
    RED-dropped bytes  :                0                0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:

```

```

Packets          : Not Available
Bytes            :                      0          0 bps
Transmitted:
Packets          :                      0          0 pps
Bytes            :                      0          0 bps
Tail-dropped packets : Not Available
RED-dropped packets :                      0          0 pps
RED-dropped bytes  :                      0          0 bps
Queue: 3, Forwarding classes: network-control
Queued:
Packets          : Not Available
Bytes            :                      0          0 bps
Transmitted:
Packets          :                      0          0 pps
Bytes            :                      0          0 bps
Tail-dropped packets : Not Available
RED-dropped packets :                      0          0 pps
RED-dropped bytes  :                      0          0 bps
Packet Forwarding Engine Chassis Queues:
Queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
Packets          :                      80564692      0 pps
Bytes            :                      3383717100     0 bps
Transmitted:
Packets          :                      80564692      0 pps
Bytes            :                      3383717100     0 bps
Tail-dropped packets :                      0          0 pps
RED-dropped packets :                      0          0 pps
RED-dropped bytes  :                      0          0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
Packets          :                      80564685      0 pps
Bytes            :                      3383716770     0 bps
Transmitted:
Packets          :                      80564685      0 pps
Bytes            :                      3383716770     0 bps
Tail-dropped packets :                      0          0 pps
RED-dropped packets :                      0          0 pps
RED-dropped bytes  :                      0          0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
Packets          :                      0          0 pps
Bytes            :                      0          0 bps
Transmitted:
Packets          :                      0          0 pps
Bytes            :                      0          0 bps
Tail-dropped packets :                      0          0 pps
RED-dropped packets :                      0          0 pps
RED-dropped bytes  :                      0          0 bps
Queue: 3, Forwarding classes: network-control
Queued:
Packets          :                      9538          0 pps
Bytes            :                      3819840        0 bps
Transmitted:
Packets          :                      9538          0 pps
Bytes            :                      3819840        0 bps
Tail-dropped packets :                      0          0 pps
RED-dropped packets :                      0          0 pps
RED-dropped bytes  :                      0          0 bps

```



## show interfaces queue remaining-traffic (Gigabit Ethernet Enhanced DPC)

```

user@host> show interfaces queue ge-2/2/9 remaining-traffic
Physical interface: ge-2/2/9, Enabled, Physical link is Up
  Interface index: 238, SNMP ifIndex: 71
Forwarding classes: 16 supported, 4 in use
Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      :          110208969          472875 pps
    Bytes        :          5951284434        204282000 bps
  Transmitted:
    Packets      :          110208969          472875 pps
    Bytes        :          5951284434        204282000 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :
    Low          :              0              0 pps
    Medium-low   :              0              0 pps
    Medium-high  :              0              0 pps
    High         :              0              0 pps
  RED-dropped bytes :
    Low          :              0              0 bps
    Medium-low   :              0              0 bps
    Medium-high  :              0              0 bps
    High         :              0              0 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      :              0              0 pps
    Bytes        :              0              0 bps
  Transmitted:
    Packets      :              0              0 pps
    Bytes        :              0              0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :
    Low          :              0              0 pps
    Medium-low   :              0              0 pps
    Medium-high  :              0              0 pps
    High         :              0              0 pps
  RED-dropped bytes :
    Low          :              0              0 bps
    Medium-low   :              0              0 bps
    Medium-high  :              0              0 bps
    High         :              0              0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets      :              0              0 pps
    Bytes        :              0              0 bps
  Transmitted:
    Packets      :              0              0 pps
    Bytes        :              0              0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :
    Low          :              0              0 pps
    Medium-low   :              0              0 pps
    Medium-high  :              0              0 pps
    High         :              0              0 pps
  RED-dropped bytes :
    Low          :              0              0 bps
    Medium-low   :              0              0 bps
    Medium-high  :              0              0 bps

```

```

      High : 0 0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets : 0 0 pps
  Bytes : 0 0 bps
Transmitted:
  Packets : 0 0 pps
  Bytes : 0 0 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
  Low : 0 0 pps
  Medium-low : 0 0 pps
  Medium-high : 0 0 pps
  High : 0 0 pps
RED-dropped bytes : 0 0 bps
  Low : 0 0 bps
  Medium-low : 0 0 bps
  Medium-high : 0 0 bps
  High : 0 0 bps
Forwarding classes: 16 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
  Packets : 109355853 471736 pps
  Bytes : 7436199152 256627968 bps
Transmitted:
  Packets : 109355852 471736 pps
  Bytes : 7436198640 256627968 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
  Low : 0 0 pps
  Medium-low : 0 0 pps
  Medium-high : 0 0 pps
  High : 0 0 pps
RED-dropped bytes : 0 0 bps
  Low : 0 0 bps
  Medium-low : 0 0 bps
  Medium-high : 0 0 bps
  High : 0 0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
  Packets : 0 0 pps
  Bytes : 0 0 bps
Transmitted:
  Packets : 0 0 pps
  Bytes : 0 0 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
  Low : 0 0 pps
  Medium-low : 0 0 pps
  Medium-high : 0 0 pps
  High : 0 0 pps
RED-dropped bytes : 0 0 bps
  Low : 0 0 bps
  Medium-low : 0 0 bps
  Medium-high : 0 0 bps
  High : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
  Packets : 0 0 pps
  Bytes : 0 0 bps

```

```

Transmitted:
Packets          :                0                0 pps
Bytes            :                0                0 bps
Tail-dropped packets : Not Available
RED-dropped packets :                0                0 pps
  Low            :                0                0 pps
  Medium-low     :                0                0 pps
  Medium-high    :                0                0 pps
  High           :                0                0 pps
RED-dropped bytes  :                0                0 bps
  Low            :                0                0 bps
  Medium-low     :                0                0 bps
  Medium-high    :                0                0 bps
  High           :                0                0 bps
Queue: 3, Forwarding classes: network-control
Queued:
Packets          :                0                0 pps
Bytes            :                0                0 bps
Transmitted:
Packets          :                0                0 pps
Bytes            :                0                0 bps
Tail-dropped packets : Not Available
RED-dropped packets :                0                0 pps
  Low            :                0                0 pps
  Medium-low     :                0                0 pps
  Medium-high    :                0                0 pps
  High           :                0                0 pps
RED-dropped bytes  :                0                0 bps
  Low            :                0                0 bps
  Medium-low     :                0                0 bps
  Medium-high    :                0                0 bps
  High           :                0                0 bps

```

#### show interfaces queue (Channelized OC12 IQE Type 3 PIC in SONET Mode)

```

user@host> show interfaces queue t3-1/1/0:7
Physical interface: t3-1/1/0:7, Enabled, Physical link is Up

  Interface index: 192, SNMP ifIndex: 1948

  Description: full T3 interface connect to 6ce13 t3-3/1/0:7 for FR testing -
  Lam

  Forwarding classes: 16 supported, 9 in use

  Egress queues: 8 supported, 8 in use

  Queue: 0, Forwarding classes: DEFAULT

  Queued:

    Packets          :                214886                13449 pps

    Bytes            :                9884756                5164536 bps

  Transmitted:

    Packets          :                214886                13449 pps

    Bytes            :                9884756                5164536 bps

```

|                        |   |       |
|------------------------|---|-------|
| Tail-dropped packets : | 0 | 0 pps |
| RED-dropped packets :  | 0 | 0 pps |
| Low :                  | 0 | 0 pps |
| Medium-low :           | 0 | 0 pps |
| Medium-high :          | 0 | 0 pps |
| High :                 | 0 | 0 pps |
| RED-dropped bytes :    | 0 | 0 bps |
| Low :                  | 0 | 0 bps |
| Medium-low :           | 0 | 0 bps |
| Medium-high :          | 0 | 0 bps |
| High :                 | 0 | 0 bps |

Queue: 1, Forwarding classes: REALTIME

Queued:

|           |   |       |
|-----------|---|-------|
| Packets : | 0 | 0 pps |
| Bytes :   | 0 | 0 bps |

Transmitted:

|                        |   |       |
|------------------------|---|-------|
| Packets :              | 0 | 0 pps |
| Bytes :                | 0 | 0 bps |
| Tail-dropped packets : | 0 | 0 pps |
| RED-dropped packets :  | 0 | 0 pps |
| Low :                  | 0 | 0 pps |
| Medium-low :           | 0 | 0 pps |
| Medium-high :          | 0 | 0 pps |
| High :                 | 0 | 0 pps |
| RED-dropped bytes :    | 0 | 0 bps |
| Low :                  | 0 | 0 bps |
| Medium-low :           | 0 | 0 bps |
| Medium-high :          | 0 | 0 bps |
| High :                 | 0 | 0 bps |

Queue: 2, Forwarding classes: PRIVATE

## Queued:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
|---------|---|---|-------|

|       |   |   |       |
|-------|---|---|-------|
| Bytes | : | 0 | 0 bps |
|-------|---|---|-------|

## Transmitted:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
|---------|---|---|-------|

|       |   |   |       |
|-------|---|---|-------|
| Bytes | : | 0 | 0 bps |
|-------|---|---|-------|

|                      |   |   |       |
|----------------------|---|---|-------|
| Tail-dropped packets | : | 0 | 0 pps |
|----------------------|---|---|-------|

|                     |   |   |       |
|---------------------|---|---|-------|
| RED-dropped packets | : | 0 | 0 pps |
|---------------------|---|---|-------|

|     |   |   |       |
|-----|---|---|-------|
| Low | : | 0 | 0 pps |
|-----|---|---|-------|

|            |   |   |       |
|------------|---|---|-------|
| Medium-low | : | 0 | 0 pps |
|------------|---|---|-------|

|             |   |   |       |
|-------------|---|---|-------|
| Medium-high | : | 0 | 0 pps |
|-------------|---|---|-------|

|      |   |   |       |
|------|---|---|-------|
| High | : | 0 | 0 pps |
|------|---|---|-------|

|                   |   |   |       |
|-------------------|---|---|-------|
| RED-dropped bytes | : | 0 | 0 bps |
|-------------------|---|---|-------|

|     |   |   |       |
|-----|---|---|-------|
| Low | : | 0 | 0 bps |
|-----|---|---|-------|

|            |   |   |       |
|------------|---|---|-------|
| Medium-low | : | 0 | 0 bps |
|------------|---|---|-------|

|             |   |   |       |
|-------------|---|---|-------|
| Medium-high | : | 0 | 0 bps |
|-------------|---|---|-------|

|      |   |   |       |
|------|---|---|-------|
| High | : | 0 | 0 bps |
|------|---|---|-------|

## Queue: 3, Forwarding classes: CONTROL

## Queued:

|         |   |    |       |
|---------|---|----|-------|
| Packets | : | 60 | 0 pps |
|---------|---|----|-------|

|       |   |      |       |
|-------|---|------|-------|
| Bytes | : | 4560 | 0 bps |
|-------|---|------|-------|

## Transmitted:

|         |   |    |       |
|---------|---|----|-------|
| Packets | : | 60 | 0 pps |
|---------|---|----|-------|

|       |   |      |       |
|-------|---|------|-------|
| Bytes | : | 4560 | 0 bps |
|-------|---|------|-------|

|                      |   |   |       |
|----------------------|---|---|-------|
| Tail-dropped packets | : | 0 | 0 pps |
|----------------------|---|---|-------|

|                     |   |   |       |
|---------------------|---|---|-------|
| RED-dropped packets | : | 0 | 0 pps |
|---------------------|---|---|-------|

|     |   |   |       |
|-----|---|---|-------|
| Low | : | 0 | 0 pps |
|-----|---|---|-------|

|            |   |   |       |
|------------|---|---|-------|
| Medium-low | : | 0 | 0 pps |
|------------|---|---|-------|

|             |   |   |       |
|-------------|---|---|-------|
| Medium-high | : | 0 | 0 pps |
|-------------|---|---|-------|

|      |   |   |       |
|------|---|---|-------|
| High | : | 0 | 0 pps |
|------|---|---|-------|

|                   |   |   |       |
|-------------------|---|---|-------|
| RED-dropped bytes | : | 0 | 0 bps |
|-------------------|---|---|-------|

|             |   |   |       |
|-------------|---|---|-------|
| Low         | : | 0 | 0 bps |
| Medium-low  | : | 0 | 0 bps |
| Medium-high | : | 0 | 0 bps |
| High        | : | 0 | 0 bps |

Queue: 4, Forwarding classes: CLASS\_B\_OUTPUT

Queued:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
| Bytes   | : | 0 | 0 bps |

Transmitted:

|                      |   |   |       |
|----------------------|---|---|-------|
| Packets              | : | 0 | 0 pps |
| Bytes                | : | 0 | 0 bps |
| Tail-dropped packets | : | 0 | 0 pps |
| RED-dropped packets  | : | 0 | 0 pps |
| Low                  | : | 0 | 0 pps |
| Medium-low           | : | 0 | 0 pps |
| Medium-high          | : | 0 | 0 pps |
| High                 | : | 0 | 0 pps |
| RED-dropped bytes    | : | 0 | 0 bps |
| Low                  | : | 0 | 0 bps |
| Medium-low           | : | 0 | 0 bps |
| Medium-high          | : | 0 | 0 bps |
| High                 | : | 0 | 0 bps |

Queue: 5, Forwarding classes: CLASS\_C\_OUTPUT

Queued:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
| Bytes   | : | 0 | 0 bps |

Transmitted:

|                      |   |   |       |
|----------------------|---|---|-------|
| Packets              | : | 0 | 0 pps |
| Bytes                | : | 0 | 0 bps |
| Tail-dropped packets | : | 0 | 0 pps |

|                     |   |   |       |
|---------------------|---|---|-------|
| RED-dropped packets | : | 0 | 0 pps |
| Low                 | : | 0 | 0 pps |
| Medium-low          | : | 0 | 0 pps |
| Medium-high         | : | 0 | 0 pps |
| High                | : | 0 | 0 pps |
| RED-dropped bytes   | : | 0 | 0 bps |
| Low                 | : | 0 | 0 bps |
| Medium-low          | : | 0 | 0 bps |
| Medium-high         | : | 0 | 0 bps |
| High                | : | 0 | 0 bps |

Queue: 6, Forwarding classes: CLASS\_V\_OUTPUT

Queued:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
| Bytes   | : | 0 | 0 bps |

Transmitted:

|                      |   |   |       |
|----------------------|---|---|-------|
| Packets              | : | 0 | 0 pps |
| Bytes                | : | 0 | 0 bps |
| Tail-dropped packets | : | 0 | 0 pps |
| RED-dropped packets  | : | 0 | 0 pps |
| Low                  | : | 0 | 0 pps |
| Medium-low           | : | 0 | 0 pps |
| Medium-high          | : | 0 | 0 pps |
| High                 | : | 0 | 0 pps |
| RED-dropped bytes    | : | 0 | 0 bps |
| Low                  | : | 0 | 0 bps |
| Medium-low           | : | 0 | 0 bps |
| Medium-high          | : | 0 | 0 bps |
| High                 | : | 0 | 0 bps |

Queue: 7, Forwarding classes: CLASS\_S\_OUTPUT, GETS

Queued:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
|---------|---|---|-------|

|                      |   |   |       |
|----------------------|---|---|-------|
| Bytes                | : | 0 | 0 bps |
| Transmitted:         |   |   |       |
| Packets              | : | 0 | 0 pps |
| Bytes                | : | 0 | 0 bps |
| Tail-dropped packets | : | 0 | 0 pps |
| RED-dropped packets  | : | 0 | 0 pps |
| Low                  | : | 0 | 0 pps |
| Medium-low           | : | 0 | 0 pps |
| Medium-high          | : | 0 | 0 pps |
| High                 | : | 0 | 0 pps |
| RED-dropped bytes    | : | 0 | 0 bps |
| Low                  | : | 0 | 0 bps |
| Medium-low           | : | 0 | 0 bps |
| Medium-high          | : | 0 | 0 bps |
| High                 | : | 0 | 0 bps |

Packet Forwarding Engine Chassis Queues:

Queues: 8 supported, 8 in use

Queue: 0, Forwarding classes: DEFAULT

Queued:

|         |   |          |             |
|---------|---|----------|-------------|
| Packets | : | 371365   | 23620 pps   |
| Bytes   | : | 15597330 | 7936368 bps |

Transmitted:

|                      |   |          |             |
|----------------------|---|----------|-------------|
| Packets              | : | 371365   | 23620 pps   |
| Bytes                | : | 15597330 | 7936368 bps |
| Tail-dropped packets | : | 0        | 0 pps       |
| RED-dropped packets  | : | 0        | 0 pps       |
| Low                  | : | 0        | 0 pps       |
| Medium-low           | : | 0        | 0 pps       |
| Medium-high          | : | 0        | 0 pps       |



|                   |   |   |       |
|-------------------|---|---|-------|
| High              | : | 0 | 0 pps |
| RED-dropped bytes | : | 0 | 0 bps |
| Low               | : | 0 | 0 bps |
| Medium-low        | : | 0 | 0 bps |
| Medium-high       | : | 0 | 0 bps |
| High              | : | 0 | 0 bps |

Queue: 1, Forwarding classes: REALTIME

Queued:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
| Bytes   | : | 0 | 0 bps |

Transmitted:

|                      |   |   |       |
|----------------------|---|---|-------|
| Packets              | : | 0 | 0 pps |
| Bytes                | : | 0 | 0 bps |
| Tail-dropped packets | : | 0 | 0 pps |
| RED-dropped packets  | : | 0 | 0 pps |
| Low                  | : | 0 | 0 pps |
| Medium-low           | : | 0 | 0 pps |
| Medium-high          | : | 0 | 0 pps |
| High                 | : | 0 | 0 pps |
| RED-dropped bytes    | : | 0 | 0 bps |
| Low                  | : | 0 | 0 bps |
| Medium-low           | : | 0 | 0 bps |
| Medium-high          | : | 0 | 0 bps |
| High                 | : | 0 | 0 bps |

Queue: 2, Forwarding classes: PRIVATE

Queued:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
| Bytes   | : | 0 | 0 bps |

Transmitted:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
| Bytes   | : | 0 | 0 bps |

|                        |   |       |
|------------------------|---|-------|
| Tail-dropped packets : | 0 | 0 pps |
| RED-dropped packets :  | 0 | 0 pps |
| Low :                  | 0 | 0 pps |
| Medium-low :           | 0 | 0 pps |
| Medium-high :          | 0 | 0 pps |
| High :                 | 0 | 0 pps |
| RED-dropped bytes :    | 0 | 0 bps |
| Low :                  | 0 | 0 bps |
| Medium-low :           | 0 | 0 bps |
| Medium-high :          | 0 | 0 bps |
| High :                 | 0 | 0 bps |

Queue: 3, Forwarding classes: CONTROL

Queued:

|           |         |        |
|-----------|---------|--------|
| Packets : | 32843   | 0 pps  |
| Bytes :   | 2641754 | 56 bps |

Transmitted:

|                        |         |        |
|------------------------|---------|--------|
| Packets :              | 32843   | 0 pps  |
| Bytes :                | 2641754 | 56 bps |
| Tail-dropped packets : | 0       | 0 pps  |
| RED-dropped packets :  | 0       | 0 pps  |
| Low :                  | 0       | 0 pps  |
| Medium-low :           | 0       | 0 pps  |
| Medium-high :          | 0       | 0 pps  |
| High :                 | 0       | 0 pps  |
| RED-dropped bytes :    | 0       | 0 bps  |
| Low :                  | 0       | 0 bps  |
| Medium-low :           | 0       | 0 bps  |
| Medium-high :          | 0       | 0 bps  |
| High :                 | 0       | 0 bps  |

Queue: 4, Forwarding classes: CLASS\_B\_OUTPUT

## Queued:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
|---------|---|---|-------|

|       |   |   |       |
|-------|---|---|-------|
| Bytes | : | 0 | 0 bps |
|-------|---|---|-------|

## Transmitted:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
|---------|---|---|-------|

|       |   |   |       |
|-------|---|---|-------|
| Bytes | : | 0 | 0 bps |
|-------|---|---|-------|

|                      |   |   |       |
|----------------------|---|---|-------|
| Tail-dropped packets | : | 0 | 0 pps |
|----------------------|---|---|-------|

|                     |   |   |       |
|---------------------|---|---|-------|
| RED-dropped packets | : | 0 | 0 pps |
|---------------------|---|---|-------|

|     |   |   |       |
|-----|---|---|-------|
| Low | : | 0 | 0 pps |
|-----|---|---|-------|

|            |   |   |       |
|------------|---|---|-------|
| Medium-low | : | 0 | 0 pps |
|------------|---|---|-------|

|             |   |   |       |
|-------------|---|---|-------|
| Medium-high | : | 0 | 0 pps |
|-------------|---|---|-------|

|      |   |   |       |
|------|---|---|-------|
| High | : | 0 | 0 pps |
|------|---|---|-------|

|                   |   |   |       |
|-------------------|---|---|-------|
| RED-dropped bytes | : | 0 | 0 bps |
|-------------------|---|---|-------|

|     |   |   |       |
|-----|---|---|-------|
| Low | : | 0 | 0 bps |
|-----|---|---|-------|

|            |   |   |       |
|------------|---|---|-------|
| Medium-low | : | 0 | 0 bps |
|------------|---|---|-------|

|             |   |   |       |
|-------------|---|---|-------|
| Medium-high | : | 0 | 0 bps |
|-------------|---|---|-------|

|      |   |   |       |
|------|---|---|-------|
| High | : | 0 | 0 bps |
|------|---|---|-------|

## Queue: 5, Forwarding classes: CLASS\_C\_OUTPUT

## Queued:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
|---------|---|---|-------|

|       |   |   |       |
|-------|---|---|-------|
| Bytes | : | 0 | 0 bps |
|-------|---|---|-------|

## Transmitted:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
|---------|---|---|-------|

|       |   |   |       |
|-------|---|---|-------|
| Bytes | : | 0 | 0 bps |
|-------|---|---|-------|

|                      |   |   |       |
|----------------------|---|---|-------|
| Tail-dropped packets | : | 0 | 0 pps |
|----------------------|---|---|-------|

|                     |   |   |       |
|---------------------|---|---|-------|
| RED-dropped packets | : | 0 | 0 pps |
|---------------------|---|---|-------|

|     |   |   |       |
|-----|---|---|-------|
| Low | : | 0 | 0 pps |
|-----|---|---|-------|

|            |   |   |       |
|------------|---|---|-------|
| Medium-low | : | 0 | 0 pps |
|------------|---|---|-------|

|             |   |   |       |
|-------------|---|---|-------|
| Medium-high | : | 0 | 0 pps |
|-------------|---|---|-------|

|      |   |   |       |
|------|---|---|-------|
| High | : | 0 | 0 pps |
|------|---|---|-------|

|                   |   |   |       |
|-------------------|---|---|-------|
| RED-dropped bytes | : | 0 | 0 bps |
|-------------------|---|---|-------|

|             |   |   |       |
|-------------|---|---|-------|
| Low         | : | 0 | 0 bps |
| Medium-low  | : | 0 | 0 bps |
| Medium-high | : | 0 | 0 bps |
| High        | : | 0 | 0 bps |

Queue: 6, Forwarding classes: CLASS\_V\_OUTPUT

Queued:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
| Bytes   | : | 0 | 0 bps |

Transmitted:

|                      |   |   |       |
|----------------------|---|---|-------|
| Packets              | : | 0 | 0 pps |
| Bytes                | : | 0 | 0 bps |
| Tail-dropped packets | : | 0 | 0 pps |
| RED-dropped packets  | : | 0 | 0 pps |
| Low                  | : | 0 | 0 pps |
| Medium-low           | : | 0 | 0 pps |
| Medium-high          | : | 0 | 0 pps |
| High                 | : | 0 | 0 pps |
| RED-dropped bytes    | : | 0 | 0 bps |
| Low                  | : | 0 | 0 bps |
| Medium-low           | : | 0 | 0 bps |
| Medium-high          | : | 0 | 0 bps |
| High                 | : | 0 | 0 bps |

Queue: 7, Forwarding classes: CLASS\_S\_OUTPUT, GETS

Queued:

|         |   |   |       |
|---------|---|---|-------|
| Packets | : | 0 | 0 pps |
| Bytes   | : | 0 | 0 bps |

Transmitted:

|                      |   |   |       |
|----------------------|---|---|-------|
| Packets              | : | 0 | 0 pps |
| Bytes                | : | 0 | 0 bps |
| Tail-dropped packets | : | 0 | 0 pps |

|                       |   |       |
|-----------------------|---|-------|
| RED-dropped packets : | 0 | 0 pps |
| Low :                 | 0 | 0 pps |
| Medium-low :          | 0 | 0 pps |
| Medium-high :         | 0 | 0 pps |
| High :                | 0 | 0 pps |
| RED-dropped bytes :   | 0 | 0 bps |
| Low :                 | 0 | 0 bps |
| Medium-low :          | 0 | 0 bps |
| Medium-high :         | 0 | 0 bps |
| High :                | 0 | 0 bps |

### show interfaces queue (QFX Series)

```

user@switch> show interfaces queue xe-0/0/15
Physical interface: xe-0/0/15, Enabled, Physical link is Up
Interface index: 49165, SNMP ifIndex: 539
Forwarding classes: 12 supported, 8 in use
Egress queues: 12 supported, 8 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      : 0 0 pps
    Bytes       : 0 0 bps
  Transmitted:
    Packets      : 0 0 pps
    Bytes       : 0 0 bps
    Tail-dropped packets : Not Available
    Total-dropped packets: 0 0 pps
    Total-dropped bytes  : 0 0 bps
Queue: 3, Forwarding classes: fcoe
  Queued:
    Packets      : 0 0 pps
    Bytes       : 0 0 bps
  Transmitted:
    Packets      : 0 0 pps
    Bytes       : 0 0 bps
    Tail-dropped packets : Not Available
    Total-dropped packets: 0 0 pps
    Total-dropped bytes  : 0 0 bps
0 bps
Queue: 4, Forwarding classes: no-loss
  Queued:
    Packets      : 0 0 pps
    Bytes       : 0 0 bps
  Transmitted:
    Packets      : 0 0 pps
    Bytes       : 0 0 bps
    Tail-dropped packets : Not Available
    Total-dropped packets: 0 0 pps
    Total-dropped bytes  : 0 0 bps
Queue: 7, Forwarding classes: network-control

```

```

Queued:
  Packets      :      0      0 pps
  Bytes       :      0      0 bps
Transmitted:
  Packets      :      0      0 pps
  Bytes       :      0      0 bps
  Tail-dropped packets : Not Available
  Total-dropped packets:      0      0 pps
  Total-dropped bytes  :      0      0 bps
Queue: 8, Forwarding classes: mcast
Queued:
  Packets      :      0      0 pps
  Bytes       :      0      0 bps
Transmitted:
  Packets      :      0      0 pps
  Bytes       :      0      0 bps
  Tail-dropped packets : Not Available
  Total-dropped packets:      0      0 pps
  Total-dropped bytes  :      0      0 bps

```

#### show interfaces queue l2-statistics (lsq interface)

```

user@switch> show interfaces queue lsq-2/2/0.2 l2-statistics
Logical interface lsq-2/2/0.2 (Index 69) (SNMP ifIndex 1598)
Forwarding classes: 16 supported, 4 in use
Egress queues: 8 supported, 4 in use
Burst size: 0
Queue: 0, Forwarding classes: be
Queued:
  Packets      :      1      0 pps
  Bytes       :    1001      0 bps
Transmitted:
  Packets      :      5      0 pps
  Bytes       :    1062      0 bps
  Tail-dropped packets :      0      0 pps
  RED-dropped packets :      0      0 pps
  RED-dropped bytes  :      0      0 bps
Queue: 1, Forwarding classes: ef
Queued:
  Packets      :      1      0 pps
  Bytes       :    1500      0 bps
Transmitted:
  Packets      :      6      0 pps
  Bytes       :    1573      0 bps
  Tail-dropped packets :      0      0 pps
  RED-dropped packets :      0      0 pps
  RED-dropped bytes  :      0      0 bps
Queue: 2, Forwarding classes: af
Queued:
  Packets      :      1      0 pps
  Bytes       :     512      0 bps
Transmitted:
  Packets      :      3      0 pps
  Bytes       :     549      0 bps
  Tail-dropped packets :      0      0 pps
  RED-dropped packets :      0      0 pps
  RED-dropped bytes  :      0      0 bps
Queue: 3, Forwarding classes: nc
Queued:
  Packets      :      0      0 pps

```

```

Bytes          :          0          0 bps
Transmitted:
Packets       :          0          0 pps
Bytes         :          0          0 bps
Tail-dropped packets :          0          0 pps
RED-dropped packets :          0          0 pps
RED-dropped bytes  :          0          0 bps
=====

```

### show interfaces queue lsq (lsq-ifd)

```

user@switch> show interfaces queue lsq-1/0/0
Logical interface lsq-1/0/0 (Index 348) (SNMP ifIndex 660)
Forwarding classes: 16 supported, 4 in use
Egress queues: 8 supported, 4 in use
Burst size: 0
Queue: 0, Forwarding classes: be
  Queued:
    Packets      :          55576          1206 pps
    Bytes        :       29622008       5145472 bps
  Transmitted:
    Packets      :          55576          1206 pps
    Bytes        :       29622008       5145472 bps
    Tail-dropped packets :          0          0 pps
    RL-dropped packets  :          0          0 pps
    RL-dropped bytes    :          0          0 bps
    RED-dropped packets :          0          0 pps
    Low               :          0          0 pps
    Medium-low        :          0          0 pps
    Medium-high       :          0          0 pps
    High              :          0          0 pps
    RED-dropped bytes  :          0          0 bps
    Low               :          0          0 bps
    Medium-low        :          0          0 bps
    Medium-high       :          0          0 bps
    High              :          0          0 bps
Queue: 1, Forwarding classes: ef
  Queued:
    Packets      :          0          0 pps
    Bytes        :          0          0 bps
  Transmitted:
    Packets      :          0          0 pps
    Bytes        :          0          0 bps
    Tail-dropped packets :          0          0 pps
    RL-dropped packets  :          0          0 pps
    RL-dropped bytes    :          0          0 bps
    RED-dropped packets :          0          0 pps
    Low               :          0          0 pps
    Medium-low        :          0          0 pps
    Medium-high       :          0          0 pps
    High              :          0          0 pps
    RED-dropped bytes  :          0          0 bps
    Low               :          0          0 bps
    Medium-low        :          0          0 bps
    Medium-high       :          0          0 bps
    High              :          0          0 bps
Queue: 2, Forwarding classes: af
  Queued:
    Packets      :          0          0 pps
    Bytes        :          0          0 bps

```

```
Transmitted:
Packets          :          0          0 pps
Bytes            :          0          0 bps
Tail-dropped packets :          0          0 pps
RL-dropped packets :          0          0 pps
RL-dropped bytes  :          0          0 bps
RED-dropped packets :          0          0 pps
  Low            :          0          0 pps
  Medium-low     :          0          0 pps
  Medium-high    :          0          0 pps
  High           :          0          0 pps
RED-dropped bytes :          0          0 bps
  Low            :          0          0 bps
  Medium-low     :          0          0 bps
  Medium-high    :          0          0 bps
  High           :          0          0 bps
Queue: 3, Forwarding classes: nc
Queued:
Packets          :        22231        482 pps
Bytes            :       11849123     2057600 bps
Transmitted:
Packets          :        22231        482 pps
Bytes            :       11849123     2057600 bps
Tail-dropped packets :          0          0 pps
RL-dropped packets :          0          0 pps
RL-dropped bytes  :          0          0 bps
RED-dropped packets :          0          0 pps
  Low            :          0          0 pps
  Medium-low     :          0          0 pps
  Medium-high    :          0          0 pps
  High           :          0          0 pps
RED-dropped bytes :          0          0 bps
  Low            :          0          0 bps
  Medium-low     :          0          0 bps
  Medium-high    :          0          0 bps
  High           :          0          0 bps
```



## show interfaces voq

**Syntax** `show interfaces voq interface-name  
<forwarding-class forwarding-class-name>  
<non-zero>  
<source-fpc source-fpc-number>`

**Release Information** Command introduced in Junos OS Release 14.1 for the PTX Series Routers  
Command introduced in Junos OS Release 15.1X53-D20 for QFX10000 switches.

**Description** Display the random early detection (RED) drop statistics from all ingress Packet Forwarding Engines associated with the specified physical egress interface. In the VOQ architecture, egress output queues (shallow buffers) buffer data in virtual queues on ingress Packet Forwarding Engines. In cases of congestion, you can use this command to identify which ingress Packet Forwarding Engine is the source of RED-dropped packets contributing to congestion.



**NOTE:** On the PTX Series routers and QFX10000 switches, these statistics include tail-dropped packets.

**Options** `interface interface-name`—Display the ingress VOQ RED drop statistics for the specified egress interface.

`forwarding-class forwarding-class-name`—Display VOQ RED drop statistics for a specified forwarding class.

`non-zero`—Display only non-zero VOQ RED drop statistics counters.

`source-fpc source-fpc-number`—Display VOQ RED drop statistics for the specified source FPC.

**Additional Information**

- On PTX Series routers, you can display VOQ statistics for only the WAN physical interface.
- VOQ statistics for aggregated physical interfaces are not supported. Statistics for an aggregated interface are the summation of the queue statistics of the child links of that aggregated interface. You can use the **show interfaces queue** command to identify the child link which is experiencing congestion and then view the VOQ statistics on the respective child link using the **show interfaces voq** command.

For information on virtual output queuing on PTX routers, see *Understanding Virtual Output Queues on PTX Series Packet Transport Routers*. For information on virtual output queueing on QFX10000 switches, see [“Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches” on page 120](#).

**Required Privilege Level** view

- Related Documentation**
- [Understanding Virtual Output Queues on PTX Series Packet Transport Routers](#)
  - [Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches on page 120](#)

**List of Sample Output**

[show interfaces voq \(For a Specific Physical Interface\) \(PTX Series Routers\) on page 777](#)  
[show interfaces voq \(For a Specific Physical Interface\) \(QFX10000 Switches\) on page 781](#)  
[show interfaces voq et-7/0/0 \(For a Specific Forwarding Class\) on page 783](#)  
[show interfaces voq et-5/0/12 \(For a Specific Source FPC\) on page 784](#)  
[show interfaces voq et-5/0/12 \(For a Specific Forwarding Class and Source FPC\) on page 786](#)  
[show interfaces voq et-7/0/0 \(Non-Zero\) on page 786](#)  
[show interfaces voq et-7/0/0 \(For a Specific Forwarding Class and Non-Zero\) on page 787](#)

**Output Fields** [Table 93 on page 615](#) lists the output fields for the show interfaces queue command. Output fields are listed in the approximate order in which they appear.

**Table 120: show interfaces voq Output Fields**

| Field Name          | Field Description                                                                                                                                                                            |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Physical interface  | Name of the physical interface.                                                                                                                                                              |
| Enabled             | State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .                                                         |
| Interface index     | Physical interface's index number, which reflects its initialization sequence.                                                                                                               |
| SNMP ifIndex        | SNMP index number for the interface.                                                                                                                                                         |
| Queue               | Egress queue number.                                                                                                                                                                         |
| Forwarding classes  | Forwarding class name.                                                                                                                                                                       |
| FPC number          | Number of the Flexible PIC Concentrator (FPC) located on ingress.                                                                                                                            |
| PFE                 | Number of the Packet Forwarding Engine providing virtual output queues on the ingress.                                                                                                       |
| RED-dropped packets | Number of packets per second (pps) dropped because of random early detection (RED).<br><br><b>NOTE:</b> On the PTX Series routers, these statistics include tail-dropped packets.            |
| RED-dropped bytes   | Number of bytes per second dropped because of RED. The byte counts vary by interface hardware.<br><br><b>NOTE:</b> On the PTX Series routers, these statistics include tail-dropped packets. |

## Sample Output

### show interfaces voq (For a Specific Physical Interface) (PTX Series Routers)

The following example shows ingress RED-dropped statistics for the egress Ethernet interface configured on port 0 of Physical Interface Card (PIC) 0, located on the FPC in slot 7.

The sample output below shows that the cause of the congestion is ingress Packet Forwarding Engine PFE 0, which resides on FPC number 4, as denoted by the count of RED-dropped packets and RED-dropped bytes for egress queue 0, forwarding classes best-effort and egress queue 3, forwarding class network control.

```

user@host> show interfaces voq et-7/0/0
Physical interface: et-7/0/0, Enabled, Physical link is Up
  Interface index: 155, SNMP ifIndex: 699

Queue: 0, Forwarding classes: best-effort

FPC number: 1
  PFE: 0
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 3
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

FPC number: 4
  PFE: 0
    RED-dropped packets :           19969426           2323178 pps
    RED-dropped bytes   :           2196636860       2044397464 bps
  PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 3
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

FPC number: 6
  PFE: 0
    RED-dropped packets :           19969424           2321205 pps
    RED-dropped bytes   :           2196636640       2042660808 bps
  PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 3
    RED-dropped packets :                0                0 pps

```

```

        RED-dropped bytes      :                0                0 bps
PFE: 4
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 5
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 6
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 7
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps

FPC number: 7
PFE: 0
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 1
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 2
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 3
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps

Queue: 1, Forwarding classes: expedited-forwarding

FPC number: 1
PFE: 0
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 1
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 2
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 3
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps

FPC number: 4
PFE: 0
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 1
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 2
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 3
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps

FPC number: 6
PFE: 0
        RED-dropped packets    :                0                0 pps

```

```

    RED-dropped bytes      :          0          0 bps
PFE: 1
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 2
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 3
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 4
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 5
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 6
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 7
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps

FPC number: 7
PFE: 0
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 1
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 2
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 3
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps

Queue: 2, Forwarding classes: assured-forwarding

FPC number: 1
PFE: 0
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 1
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 2
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 3
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps

FPC number: 4
PFE: 0
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 1
    RED-dropped packets    :          0          0 pps
    RED-dropped bytes      :          0          0 bps
PFE: 2

```

```

        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 3
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps

FPC number: 6
    PFE: 0
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 1
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 2
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 3
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 4
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 5
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 6
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 7
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps

FPC number: 7
    PFE: 0
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 1
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 2
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 3
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps

Queue: 3, Forwarding classes: network-control

FPC number: 1
    PFE: 0
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 1
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 2
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
    PFE: 3
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps

```

```

FPC number: 4
PFE: 0
  RED-dropped packets :          16338670          1900314 pps
  RED-dropped bytes   :          1797253700         1672276976 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

FPC number: 6
PFE: 0
  RED-dropped packets :          16338698          1899163 pps
  RED-dropped bytes   :          1797256780         1671263512 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 4
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 5
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 6
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 7
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

FPC number: 7
PFE: 0
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

```

#### show interfaces voq (For a Specific Physical Interface) (QFX10000 Switches)

The sample output below shows congestion on ingress PFE 1 on FPC number 0, and on ingress PFE 2 on FPC number 1, as denoted by the count of RED-dropped packets and RED-dropped bytes for best-effort egress queue 0.

```

user@host> show interfaces voq et-1/0/0
Physical interface: et-1/0/0, Enabled, Physical link is Up
Interface index: 659, SNMP ifIndex: 539

```

```

Queue: 0, Forwarding classes: best-effort

```

```

FPC number: 0
PFE: 0
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 1
  RED-dropped packets :      411063248      16891870 pps
  RED-dropped bytes   :      52616095744      17297275600 bps
PFE: 2
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps

```

```

FPC number: 1
PFE: 0
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 1
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 2
  RED-dropped packets :      411063012      16891870 pps
  RED-dropped bytes   :      52616065536      17297275376 bps

```

```

Queue: 3, Forwarding classes: fcoe

```

```

FPC number: 0
PFE: 0
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 1
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 2
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps

```

```

FPC number: 1
PFE: 0
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 1
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 2
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps

```

```

Queue: 4, Forwarding classes: no-loss

```

```

FPC number: 0
PFE: 0
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 1
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps

```



```

PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

FPC number: 1
PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

Queue: 7, Forwarding classes: network-control

FPC number: 0
PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

FPC number: 1
PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

```

#### show interfaces voq et-7/0/0 (For a Specific Forwarding Class)

```

user@host> show interfaces voq et-7/0/0 forwarding-class best-effort
Physical interface: et-7/0/0, Enabled, Physical link is Up
Interface index: 155, SNMP ifIndex: 699

```

```

Queue: 0, Forwarding classes: best-effort

FPC number: 1
PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 3
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

```

```

FPC number: 4
PFE: 0
  RED-dropped packets :          66604786          2321519 pps
  RED-dropped bytes   :          7326526460        2042936776 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

FPC number: 6
PFE: 0
  RED-dropped packets :          66604794          371200 pps
  RED-dropped bytes   :          7326527340        326656000 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 4
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 5
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 6
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 7
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

FPC number: 7
PFE: 0
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

```

#### show interfaces voq et-5/0/12 (For a Specific Source FPC)

```

user@host> show interfaces voq et-5/0/12 source-fpc 0
Physical interface: et-5/0/12, Enabled, Physical link is Up
  Interface index: 166, SNMP ifIndex: 1104

Queue: 0, Forwarding classes: best-effort

```

```

FPC number: 0
PFE: 0
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 1
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 2
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 3
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps

```

Queue: 1, Forwarding classes: expedited-forwarding

```

FPC number: 0
PFE: 0
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 1
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 2
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 3
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps

```

Queue: 2, Forwarding classes: assured-forwarding

```

FPC number: 0
PFE: 0
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 1
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 2
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 3
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps

```

Queue: 3, Forwarding classes: network-control

```

FPC number: 0
PFE: 0
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 1
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 2
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 3

```

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

### show interfaces voq et-5/0/12 (For a Specific Forwarding Class and Source FPC)

```

user@host> show interfaces voq et-5/0/12 forwarding-class best-effort source-fpc 5
Physical interface: et-5/0/12, Enabled, Physical link is Up
Interface index: 166, SNMP ifIndex: 1104

```

Queue: 0, Forwarding classes: best-effort

FPC number: 5

PFE: 0

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 1

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 2

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 3

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 4

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 5

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 6

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

PFE: 7

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

```

### show interfaces voq et-7/0/0 (Non-Zero)

```

user@host> show interfaces voq et-7/0/0 non-zero

```

```

Physical interface: et-7/0/0, Enabled, Physical link is Up
Interface index: 155, SNMP ifIndex: 699

```

Queue: 0, Forwarding classes: best-effort

FPC number: 4

PFE: 0

```

RED-dropped packets : 95862238 2301586 pps
RED-dropped bytes : 10544846180 2025396264 bps

```

FPC number: 6

PFE: 0

```

RED-dropped packets : 95866639 2322569 pps
RED-dropped bytes : 10545330290 2043860728 bps

```

Queue: 3, Forwarding classes: network-control

FPC number: 4

PFE: 0

```

RED-dropped packets :          78433066          1899727 pps
RED-dropped bytes   :          8627637260        1671760384 bps

FPC number: 6
PFE: 0
RED-dropped packets :          78436704          1900628 pps
RED-dropped bytes   :          8628037440        1672553432 bps

```

#### show interfaces voq et-7/0/0 (For a Specific Forwarding Class and Non-Zero)

```
user@host show interfaces voq et-7/0/0 forwarding-class best-effort non-zero
```

```
Physical interface: et-7/0/0, Enabled, Physical link is Up
```

```
Interface index: 155, SNMP ifIndex: 699
```

```
Queue: 0, Forwarding classes: best-effort
```

```

FPC number: 4
PFE: 0
RED-dropped packets :          119540012          2322319 pps
RED-dropped bytes   :          13149401320        2043640784 bps

FPC number: 6
PFE: 0
RED-dropped packets :          119540049          2322988 pps
RED-dropped bytes   :          13149405390        2044229744 bps

```



## CHAPTER 13

# Operational Commands (Data Center Bridging and Flow Control)

- `show class-of-service congestion-notification`
- `show dcbx`
- `show dcbx neighbors`

## show class-of-service congestion-notification

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service congestion-notification                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b>      | Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | Display whether priority-based flow control (PFC) is enabled for each IEEE 802.1p code point.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <b>none</b> —Display the PFC state for all IEEE 802.1p code points.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring CoS PFC (Congestion Notification Profiles) on page 301</a></li> <li>• <a href="#">Example: Configuring CoS PFC for FCoE Traffic on page 304</a></li> <li>• <a href="#">Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic (FCoE Transit Switch) on page 365</a></li> <li>• <a href="#">Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface on page 373</a></li> <li>• <a href="#">Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces on page 382</a></li> <li>• <a href="#">Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications (FCoE and iSCSI) on page 396</a></li> <li>• <a href="#">Example: Configuring PFC Across Layer 3 Interfaces on page 319</a></li> <li>• <a href="#">Understanding CoS Flow Control (Ethernet PAUSE and PFC) on page 289</a></li> </ul> |
| <b>Output Fields</b>            | <a href="#">Table 121 on page 790</a> describes the output fields for the <b>show class-of-service congestion-notification</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

**Table 121: show class-of-service congestion-notification Output Fields**

| Field Name          | Field Description                                                                                                       |
|---------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Type</b>         | Type of interfaces on which congestion notification is applied. Congestion notification is applied on input interfaces. |
| <b>Index</b>        | Index of this congestion notification profile.                                                                          |
| <b>Name</b>         | Name of the congestion notification profile.                                                                            |
| <b>Cable Length</b> | Length of the attached physical cable in meters. The default value is 100 meters.                                       |
| <b>Priority</b>     | IEEE 802.1p code point.                                                                                                 |



Table 121: show class-of-service congestion-notification Output Fields (*continued*)

| Field Name          | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PFC                 | State of PFC for the corresponding code point, either <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| MRU                 | <p>Maximum receive unit of the interface in bytes. (Incoming traffic that exceeds the MRU size of an interface is dropped.) The default values are:</p> <ul style="list-style-type: none"> <li>• 2500 bytes for priority 3 traffic</li> <li>• 9216 bytes for priority 4 traffic</li> </ul> <p><b>NOTE:</b> If you configure flow control on a priority that is not one of the default flow control priorities, the default MRU value is 2500 bytes. For example, if you configure flow control on priority 5 and you do not configure an MRU value, the default MRU value is 2500 bytes.</p> |
| Flow-Control-Queues | Output queue mapping to IEEE 802.1p code points (priorities). Explicit output queue to priority mapping overwrites the default configuration, and only explicitly mapped queues are displayed in the output. Flow control is only enabled on a queue when you enable PFC on the corresponding priority in the input stanza of the congestion notification profile.                                                                                                                                                                                                                           |

## Sample Output

### show class-of-service congestion-notification

```

user@switch> show class-of-service congestion-notification
Name: fcoe_p3_cnp, Index: 12037
Type: Input
Cable Length: 100 m
  Priority  PFC      MRU
  000      Disabled
  001      Disabled
  010      Disabled
  011      Enabled   2500
  100      Enabled   9216
  101      Disabled
  110      Disabled
  111      Disabled
Type: Output
  Priority  Flow-Control-Queues
  000
  001      0
  010      1
  011      2
  100      3
  101      4
  110      5
  111      6
          7
Name: fcoe_p3_p5_cnp, Index: 46484

```

Type: Input  
Cable Length: 100 m

| Priority | PFC      | MRU  |
|----------|----------|------|
| 000      | Disabled |      |
| 001      | Disabled |      |
| 010      | Disabled |      |
| 011      | Enabled  | 2240 |
| 100      | Disabled |      |
| 101      | Enabled  | 2240 |
| 110      | Disabled |      |
| 111      | Disabled |      |

Type: Output

| Priority | Flow-Control-Queues |
|----------|---------------------|
| 011      |                     |
|          | 3                   |
| 101      |                     |
|          | 5                   |

## show dcbx

|                                 |                                                                                                                                                                             |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show dcbx                                                                                                                                                                   |
| <b>Release Information</b>      | Command introduced in Junos OS Release 11.3 for the QFX Series.                                                                                                             |
| <b>Description</b>              | List DCBX status (enabled or disabled) and the interfaces on which DCBX is enabled.                                                                                         |
| <b>Required Privilege Level</b> | view                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show dcbx neighbors on page 794</a></li> <li>• <a href="#">Configuring DCBX Autonegotiation on page 423</a></li> </ul> |
| <b>Output Fields</b>            | <a href="#">Table 122 on page 793</a> lists the output fields for the <b>show dcbx</b> command. Output fields are listed in the approximate order in which they appear.     |

Table 122: show dcbx output fields

| Field Name | Field Description                                                                                                                                                                                                                                                     |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DCBX       | Status of DCBX on the switch or for the specified interface: <ul style="list-style-type: none"> <li>• Enabled—DCBX is enabled on the switch or on the specified interface</li> <li>• Disabled—DCBX is disabled on the switch or on the specified interface</li> </ul> |
| Interface  | Name of the interface                                                                                                                                                                                                                                                 |

## Sample Output

### show dcbx

```

user@switch> show dcbx
DCBX                : Enabled
Interface           DCBX
xe-0/0/9.0          enabled
xe-0/0/32.0         enabled
xe-0/0/36.0         enabled

```

## show dcbx neighbors

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show dcbx neighbors</b><br><b>&lt;interface interface-name&gt;</b><br><b>&lt;terse&gt;</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 11.3 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | Display information about Data Center Bridging Capability Exchange protocol (DCBX) neighbor interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Options</b>                  | <b>none</b> —Display information about all DCBX neighbor interfaces.<br><br><b>interface-name</b> —(Optional) Display information for the specified interface.<br><br><b>terse</b> —Display the specified level of output.                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring DCBX Autonegotiation on page 423</a></li> <li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange on page 433</a></li> <li>• <a href="#">Example: Configuring an FCoE Transit Switch</a></li> <li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application</a></li> <li>• <a href="#">Understanding DCB Features and Requirements on page 234</a></li> <li>• <a href="#">Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches</a></li> <li>• <a href="#">dcbx on page 530</a></li> </ul>                 |
| <b>List of Sample Output</b>    | <a href="#">show dcbx neighbors interface (QFX Series, DCBX Version 1.01 Mode) on page 807</a><br><a href="#">show dcbx neighbors interface (QFX Series, IEEE DCBX Mode) on page 809</a><br><a href="#">show dcbx neighbors terse (QFX Series) on page 811</a><br><a href="#">show dcbx neighbors (EX4500 Switch: FCoE Interfaces on Both Local and Peer with PFC Configured Compatibly) on page 811</a><br><a href="#">show dcbx neighbors (EX4500 Switch: DCBX Interfaces on Local and Peer Are Configured Compatibly with iSCSI Application) on page 812</a><br><a href="#">show dcbx neighbors (EX4500 Switch: Includes ETS) on page 813</a> |
| <b>Output Fields</b>            | <a href="#">Table 123 on page 794</a> lists the output fields for the <b>show dcbx neighbors</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

Table 123: show dcbx neighbors Output Fields

| Field Name | Field Description      |
|------------|------------------------|
| Interface  | Name of the interface. |

Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Parent Interface       | Name of the link aggregation group (LAG) interface to which the DCBX interface belongs.                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Active-application-map | Name of the application map applied to the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Protocol-Mode          | <p>(QFX Series) DCBX protocol mode the interface uses:</p> <ul style="list-style-type: none"> <li>• IEEE DCBX Version—The interface uses IEEE DCBX mode.</li> <li>• DCBX Version 1.01—The interface uses DCBX version 1.01.</li> </ul> <p><b>NOTE:</b> On interfaces that use the IEEE DCBX mode, the <b>show dcbx neighbors interface <i>interface-name</i></b> operational command does not include application, PFC, or ETS operational state in the output.</p>                                        |
| Protocol-State         | <p>(DCBX Version 1.01 only) DCBX protocol state synchronization status:</p> <ul style="list-style-type: none"> <li>• <b>in-sync</b>—The local interface received an acknowledge message from the peer to indicate that the peer received a state change message sent by the local interface.</li> <li>• <b>ack-pending</b>—The local interface has not yet received an acknowledge message from the peer to indicate that the peer received a state change message sent by the local interface.</li> </ul> |
| Local-Advertisement    | <p>(DCBX Version 1.01 only)</p> <p>Status of advertisements that the local interface sends to the peer.</p>                                                                                                                                                                                                                                                                                                                                                                                                |
| Operational version    | Version of the DCBX standard used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| sequence-number        | <p>Number of state change messages sent to the peer.</p> <p>If the interface <b>Protocol-State</b> value is <b>in-sync</b>, this number should match the <b>acknowledge-id</b> number in the <b>Peer-Advertisement</b> section.</p> <p>If the interface <b>Protocol-State</b> value is <b>ack-pending</b>, this number does not match the <b>acknowledge-id</b> number in the <b>Peer-Advertisement</b> section.</p>                                                                                       |
| acknowledge-id         | <p>Number of acknowledge messages received from the peer.</p> <p>If the <b>Protocol-State</b> value is <b>in-sync</b>, this number should match the <b>sequence-number</b> value in the <b>Peer-Advertisement</b> section.</p> <p>If the <b>Protocol-State</b> value is <b>ack-pending</b>, this number does not match the <b>sequence-number</b> value in the <b>Peer-Advertisement</b> section.</p>                                                                                                      |

Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Peer-Advertisement</b>  | (DCBX Version 1.01 only)<br><br>Status of advertisements that the peer sends to the local interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Operational version</b> | Version of the DCBX standard used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>sequence-number</b>     | Number of state change messages the peer sent to the local interface.<br><br>If this number matches the <b>acknowledge-id</b> number in the <b>Local-Advertisement</b> field, this indicates that the local interface has acknowledged all of the peer's state change messages and is synchronized.<br><br>If this number does not match the <b>acknowledge-id</b> number in the <b>Local-Advertisement</b> field, this indicates that the peer has not yet received an acknowledgment for a state change message from the local interface.            |
| <b>acknowledge-id</b>      | Number of acknowledge messages the peer has received from the local interface.<br><br>If this number matches the <b>sequence-number</b> value in the <b>Local-Advertisement</b> field, this indicates that the peer has acknowledged all of the local interface's state change messages and is in synchronization.<br><br>If this number does not match the <b>sequence-number</b> value in the <b>Local-Advertisement</b> field, this indicates that the peer has not yet sent an acknowledgment for a state change message from the local interface. |

Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name                        | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Feature: PFC</b>               | Priority-based flow control (PFC) feature DCBX state information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Protocol-State</b>             | (DCBX Version 1.01 only)<br><br>DCBX protocol state synchronization status: <ul style="list-style-type: none"> <li>• <b>ack-pending</b>—The local interface has not yet received an acknowledge message from the peer to indicate that the peer received a PFC state change message sent by the local interface.</li> <li>• <b>in-sync</b>—The local interface received an acknowledge message from the peer to indicate that the peer received a PFC state change message sent by the local interface.</li> <li>• <b>not-applicable</b>—PFC autonegotiation is disabled.</li> </ul> |
| <b>Operational State</b>          | (DCBX Version 1.01 only)<br><br>Operational state of the feature: <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Local-Advertisement</b>        | Status of advertisements that the local interface sends to the peer.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Enable</b>                     | (DCBX Version 1.01 only)<br><br>State that the local interface advertises to the peer: <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>                                                                                                                                                                                                                                                                                                                                                          |
| <b>Willing</b>                    | Willingness of the local interface to learn the PFC configuration from the peer using DCBX: <ul style="list-style-type: none"> <li>• <b>Yes</b>—The local interface is willing to learn the PFC configuration from the peer.</li> <li>• <b>No</b>—The local interface is not willing to learn the PFC configuration from the peer.</li> </ul>                                                                                                                                                                                                                                        |
| <b>Mac auth Bypass Capability</b> | (IEEE DCBX only)<br><br>(QFX Series) Media access controller (MAC) authentication bypass provides access to devices based on MAC address authentication. This is not supported, so the only value seen in the local advertisement field is <b>no</b> .                                                                                                                                                                                                                                                                                                                               |
| <b>Error</b>                      | (DCBX Version 1.01 only)<br><br>Configuration compatibility error status: <ul style="list-style-type: none"> <li>• <b>No</b>—No error detected. Local and peer configuration are compatible.</li> <li>• <b>Yes</b>—Error detected. Local and peer configuration are not compatible.</li> </ul>                                                                                                                                                                                                                                                                                       |

Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name                                            | Field Description                                                                                                                                                                                                                                                                                                                                    |
|-------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Operational State</b>                              | <p>PFC operational state on the interface:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—PFC is enabled on the interface</li> <li>• <b>Disabled</b>—PFC is disabled on the interface</li> </ul>                                                                                                                                        |
| <b>Maximum Traffic Classes capable to support PFC</b> | <p>Largest number of traffic classes the local interface supports for PFC:</p> <ul style="list-style-type: none"> <li>• <b>6</b> (EX Series switches)</li> <li>• <b>6</b> (QFX Series)</li> </ul>                                                                                                                                                    |
| <b>Code Point</b>                                     | <p>PFC code point, which is specified in the 3-bit class-of-service field in the VLAN header.</p>                                                                                                                                                                                                                                                    |
| <b>Admin Mode</b>                                     | <p>PFC administrative state for each code point on the local interface:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—PFC is enabled for the code point.</li> <li>• <b>Disabled</b>—PFC is disabled for the code point.</li> </ul>                                                                                                     |
| <b>Operational Mode</b>                               | <p>(QFX Series) PFC operational mode for each code point:</p> <ul style="list-style-type: none"> <li>• <b>Enable</b>—PFC is enabled on the code point.</li> <li>• <b>Disable</b>—PFC is disabled on the code point.</li> </ul>                                                                                                                       |
| <b>Peer-Advertisement</b>                             | <p>Status of advertisements that the peer sends to the local interface.</p>                                                                                                                                                                                                                                                                          |
| <b>Enable</b>                                         | <p>(DCBX Version 1.01 only)</p> <p>State that the peer advertises to the local interface:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>                                                                                                                   |
| <b>Willing</b>                                        | <p>Willingness of the peer to learn the PFC configuration from the local interface using DCBX:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The peer is willing to learn the PFC configuration from the local interface.</li> <li>• <b>No</b>—The peer is not willing to learn the PFC configuration from the local interface.</li> </ul> |
| <b>Error</b>                                          | <p>(DCBX Version 1.01 only)</p> <p>Configuration compatibility error status:</p> <ul style="list-style-type: none"> <li>• <b>No</b>—No error detected. Local and peer configuration are compatible.</li> <li>• <b>Yes</b>—Error detected. Local and peer configuration are not compatible.</li> </ul>                                                |



Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name                                            | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Operational State</b>                              | <p>PFC operational state on the interface:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—PFC is enabled on the interface</li> <li>• <b>Disabled</b>—PFC is disabled on the interface</li> </ul>                                                                                                                                                                                                                                                                                            |
| <b>Mac auth Bypass Capability</b>                     | <p>(IEEE DCBX only)</p> <p>(QFX Series) Media access controller (MAC) authentication bypass provides access to devices based on MAC address authentication. Although the QFX Series does not support this feature, the connected peer might support it. This field reports the peer state:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The connected peer supports MAC authentication bypass.</li> <li>• <b>No</b>—The connected peer does not support MAC authentication bypass.</li> </ul> |
| <b>Maximum Traffic Classes capable to support PFC</b> | <p>Largest number of traffic classes the peer supports for PFC:</p> <ul style="list-style-type: none"> <li>• <b>6</b> (EX Series switches)</li> <li>• <b>8</b> (QFX Series)</li> </ul>                                                                                                                                                                                                                                                                                                                   |
| <b>Code Point</b>                                     | <p>PFC code point, which is specified in the 3-bit class-of-service field in the VLAN header.</p>                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Admin Mode</b>                                     | <p>PFC administrative state for each code point on the peer:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—PFC is enabled for the code point.</li> <li>• <b>Disabled</b>—PFC is disabled for the code point.</li> </ul>                                                                                                                                                                                                                                                                    |

Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name                  | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Feature: Application</b> | State information for the DCBX application.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Protocol-State</b>       | <p>(DCBX Version 1.01 only)</p> <p>DCBX protocol state synchronization status:</p> <ul style="list-style-type: none"> <li>• <b>in-sync</b>—The local interface received an acknowledge message from the peer to indicate that the peer received an FCoE state change message sent by the local interface.</li> <li>• <b>ack-pending</b>—The local interface has not yet received an acknowledge message from the peer to indicate that the peer received an FCoE state change message sent by the local interface.</li> <li>• <b>not-applicable</b>—The local interface is set to <b>no-auto-negotiation</b> (autonegotiation is disabled). If the interface is associated with an FCoE forwarding class, the interface advertises FCoE capability even if the connected peer does not advertise FCoE capability.</li> </ul> |
| <b>Local-Advertisement</b>  | <p>Status of advertisements that the local interface sends to the peer.</p> <p>If the local interface is set to <b>no-auto-negotiation</b> (autonegotiation is disabled), the local advertisement portion of the output is not shown.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Enable</b>               | <p>(DCBX Version 1.01 only)</p> <p>State that the local interface advertises to the peer:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Willing</b>              | <p>(DCBX Version 1.01 only)</p> <p>Willingness of the local interface to learn the FCoE interface state from the peer using DCBX:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The local interface is willing to learn the FCoE interface state from the peer.</li> <li>• <b>No</b>—The local interface is not willing to learn the FCoE interface state from the peer.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Error</b>                | <p>(DCBX Version 1.01 only)</p> <p>Configuration compatibility error status:</p> <ul style="list-style-type: none"> <li>• <b>No</b>—No error detected. The local and peer configuration are compatible.</li> <li>• <b>Yes</b>—Error detected. The local and peer configuration are not compatible.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Appl-Name</b>            | Name of the application:                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name                            | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Ethernet-Type</b>                  | <p>(DCBX Version 1.01 only)</p> <p>Ethernet type (EtherType) of the application. For example, <b>0x8906</b> indicates the EtherType for the FCoE application. Either the EtherType (for Layer 2 applications) or the Socket Number (for Layer 4 applications) of the application is displayed in the output.</p>                                                                                                                                                                                                                                                            |
| <b>Socket-Number</b>                  | <p>Destination port socket number of the application, if applicable. Either the EtherType (for Layer 2 applications) or the Socket Number (for Layer 4 applications) of the application is displayed in the output.</p>                                                                                                                                                                                                                                                                                                                                                     |
| <b>Priority-Field or Priority-Map</b> | <p>Priority assigned to the application.</p> <p>For EX Series switches, the priority of the FCoE application is determined by the PFC congestion notification profile that has been configured and associated with the FCoE interface. For other applications, the priority is based on the application map.</p>                                                                                                                                                                                                                                                            |
| <b>Status</b>                         | <p>(DCBX Version 1.01 only)</p> <p>Local status when autonegotiation is enabled:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—The application feature is enabled on both the local interface and the peer interface. (The local configuration and the peer configuration match.)</li> <li>• <b>Disabled</b>—The local configuration and the peer configuration do not match.</li> </ul> <p><b>NOTE:</b> If there is a configuration mismatch in one application between the switch and the peer, all the other applications including FCoE are disabled.</p> |
| <b>Peer-Advertisement</b>             | <p>Status of advertisements that the peer sends to the local interface.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Enable</b>                         | <p>(DCBX Version 1.01 only)</p> <p>State that the peer advertises to the local interface:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>                                                                                                                                                                                                                                                                                                                                          |
| <b>Willing</b>                        | <p>(DCBX Version 1.01 only)</p> <p>Willingness of the peer to learn the FCoE interface state from the local interface using DCBX:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The peer is willing to learn the FCoE interface state from the local interface.</li> <li>• <b>No</b>—The peer is not willing to learn the FCoE interface state from the local interface.</li> </ul>                                                                                                                                                                               |

Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name                            | Field Description                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Error</b>                          | (DCBX Version 1.01 only)<br><br>Configuration compatibility error status: <ul style="list-style-type: none"> <li>• <b>No</b>—No error detected. Local and peer configuration are compatible.</li> <li>• <b>Yes</b>—Error detected. Local and peer configuration are not compatible.</li> </ul>                                                                           |
| <b>Appl-Name</b>                      | Name of the application: <ul style="list-style-type: none"> <li>• <b>FCoE</b>—Fibre Channel over Ethernet</li> </ul>                                                                                                                                                                                                                                                     |
| <b>Ethernet-Type</b>                  | Ethernet type (EtherType) of the application. For example, <b>0x8906</b> indicates the EtherType for the FCoE application. Either the EtherType (for Layer 2 applications) or the Socket-Number (for Layer 4 applications) of the application is displayed in the output.                                                                                                |
| <b>Socket-Number</b>                  | Destination port socket number of the application, if applicable. Either the EtherType (for Layer 2 applications) or the Socket Number (for Layer 4 applications) of the application is displayed in the output.                                                                                                                                                         |
| <b>Priority-Field or Priority-Map</b> | Priority assigned to the application.                                                                                                                                                                                                                                                                                                                                    |
| <b>Status</b>                         | (DCBX Version 1.01 only)<br><br>Peer interface status: <ul style="list-style-type: none"> <li>• <b>Enabled</b>—The application feature is enabled on both the local interface and the peer interface. (The local configuration and the peer configuration match.)</li> <li>• <b>Disabled</b>—The local configuration and the peer configuration do not match.</li> </ul> |

Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Feature: ETS</b>        | Enhanced Transmission Selection (ETS) DCBX state information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Protocol-State</b>      | (DCBX Version 1.01 only)<br><br>ETS protocol state synchronization status: <ul style="list-style-type: none"> <li>• <b>in-sync</b>—The local interface received an acknowledge message from the peer to indicate that the peer received an ETS state change message sent by the local interface.</li> <li>• <b>ack-pending</b>—The local interface has not yet received an acknowledge message from the peer to indicate that the peer received an ETS state change message sent by the local interface.</li> </ul>                                                          |
| <b>Operational State</b>   | (DCBX Version 1.01 only)<br><br>Operational state of the feature, <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Local-Advertisement</b> | Status of advertisements that the local interface sends to the peer.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Enable</b>              | (DCBX Version 1.01 only)<br><br>State that the local interface advertises to the peer: <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>                                                                                                                                                                                                                                                                                                                                                  |
| <b>TLV Type</b>            | (IEEE DCBX only)<br><br>Type of ETS TLV: <ul style="list-style-type: none"> <li>• <b>Configuration</b>—Advertises the Configuration TLV, which communicates the local ETS configuration to the peer but does not ask the peer to use the configuration.</li> <li>• <b>Recommendation</b>—Advertises the Recommendation TLV, which communicates the local ETS configuration to the peer, and if the peer is “willing,” configures the peer interface to match the local ETS configuration.</li> <li>• <b>Recommendation-or-Configuration</b>—Advertises both TLVs.</li> </ul> |
| <b>Willing</b>             | Willingness of the local interface to learn the ETS state from the peer using DCBX (EX Series switches always advertise <b>No</b> for this field): <ul style="list-style-type: none"> <li>• <b>Yes</b>—Local interface is willing to learn the ETS state from the peer.</li> <li>• <b>No</b>—Local interface is not willing to learn the ETS state from the peer.</li> </ul>                                                                                                                                                                                                 |
| <b>Credit Based Shaper</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name                                            | Field Description                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                       | (IEEE DCBX only)<br><br>Alternative method of flow control to buffer-to-buffer credit. The QFX Series does not support a credit-based shaper, so the value of this field is always <b>No</b> .                                                                                                                  |
| <b>Error</b>                                          | (DCBX Version 1.01 only)<br><br>Configuration error status:<br><ul style="list-style-type: none"><li>• <b>No</b>—No error. This should always be the switch ETS error state.</li><li>• <b>Yes</b>—Error detected.</li></ul>                                                                                     |
| <b>Maximum Traffic Classes capable to support PFC</b> | (DCBX Version 1.01 only)<br><br>Largest number of traffic classes the local interface supports for PFC.                                                                                                                                                                                                         |
| <b>Maximum Traffic Classes supported</b>              | (IEEE DCBX only)<br><br>Largest number of traffic classes the local interface supports for ETS. (EX Series switches support only one traffic class for ETS. However, a different value might be shown for this field.)                                                                                          |
| <b>Code Point</b>                                     | PFC code point, which is specified in the 3-bit class-of-service field in the VLAN header.                                                                                                                                                                                                                      |
| <b>Priority-Group</b>                                 | Class-of-service (CoS) priority group (forwarding class set) identification number.                                                                                                                                                                                                                             |
| <b>Percentage B/W</b>                                 | Configured minimum percentage of link bandwidth allocated to the priority group. Only explicitly configured values appear in this output column. If the link bandwidth is the default percentage, it is not shown. (EX Series switches allocate 100% of link bandwidth to the default priority group, group 7.) |
| <b>Transmission Selection Algorithm</b>               | (IEEE DCBX only)<br><br>The transmission selection algorithm used by the interface. The QFX Series supports ETS but does not support using the credit-based shaper algorithm, so the only value shown in this field is <b>ETS</b> .                                                                             |
| <b>Peer-Advertisement</b>                             | Status of advertisements that the peer sends to the local interface.                                                                                                                                                                                                                                            |
| <b>Enable</b>                                         |                                                                                                                                                                                                                                                                                                                 |

Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name                                            | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                       | (DCBX Version 1.01 only)<br><br>State that the peer advertises to the local interface:<br><br><ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>                                                                                                                                                                                                                                                                                                                                               |
| <b>TLV Type</b>                                       | (IEEE DCBX only)<br><br>Type of ETS TLV:<br><br><ul style="list-style-type: none"> <li>• <b>Configuration</b>—Advertises the Configuration TLV, which communicates the local ETS configuration to the peer but does not ask the peer to use the configuration.</li> <li>• <b>Recommendation</b>—Advertises the Recommendation TLV, which communicates the local ETS configuration to the peer, and if the peer is “willing,” configures the peer interface to match the local ETS configuration.</li> <li>• <b>Configuration/Recommendation</b>—Advertises both TLVs.</li> </ul> |
| <b>Willing</b>                                        | Willingness of the peer to learn the ETS state from the local interface using DCBX:<br><br><ul style="list-style-type: none"> <li>• <b>Yes</b>—Peer is willing to learn the ETS state from the local interface.</li> <li>• <b>No</b>—Peer is not willing to learn the ETS state from the local interface.</li> </ul>                                                                                                                                                                                                                                                             |
| <b>Credit Based Shaper</b>                            | (IEEE DCBX only)<br><br>Alternative method of flow control to buffer-to-buffer credit. The QFX Series does not support a credit-based shaper, so the value of this field is always <b>No</b> .                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Error</b>                                          | (DCBX Version 1.01 only)<br><br>Configuration error status of the peer:<br><br><ul style="list-style-type: none"> <li>• <b>No</b>—No error in peer ETS TLV.</li> <li>• <b>Yes</b>—Error in peer ETS TLV.</li> </ul>                                                                                                                                                                                                                                                                                                                                                              |
| <b>Maximum Traffic Classes capable to support PFC</b> | (DCBX Version 1.01 only)<br><br>Largest number of traffic classes the local interface supports for PFC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Maximum Traffic Classes supported</b>              | (IEEE DCBX only)<br><br>Largest number of traffic classes the local interface supports for ETS. (EX Series switches support only one traffic class for ETS. However, a different value might be shown for this field.)                                                                                                                                                                                                                                                                                                                                                           |
| <b>Code Point</b>                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name                       | Field Description                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                  | PFC code point, which is specified in the 3-bit class-of-service field in the VLAN header.                                                                                                                                                                                                                                                                                                                         |
| Priority-Group                   | CoS priority group (forwarding class set) identification number.                                                                                                                                                                                                                                                                                                                                                   |
| Percentage B/W                   | Configured minimum percentage of link bandwidth allocated to the priority group. (EX Series switches allocate 100% of link bandwidth to the default priority group, group 7.)                                                                                                                                                                                                                                      |
| Transmission Selection Algorithm | (IEEE DCBX only)<br><br>Transmission selection algorithm used by the interface. The QFX Series supports ETS but does not support using the credit-based shaper algorithm, so the only value shown in this field is <b>ETS</b> .                                                                                                                                                                                    |
| PFC                              | (QFX Series, <b>terse</b> option only) DCBX TLV advertisement state for PFC: <ul style="list-style-type: none"> <li>• Disabled—PFC configuration matches the configuration on the connected peer and PFC is disabled</li> <li>• Enabled—PFC configuration matches the configuration on the connected peer and PFC is enabled</li> <li>• Not Advt—Interface does not advertise PFC to the connected peer</li> </ul> |
| ETS                              | ( <b>terse</b> option only) Local DCBX TLV advertisement state for ETS: <ul style="list-style-type: none"> <li>• Advt—Interface advertises ETS TLVs</li> <li>• Disabled—ETS is disabled on the interface (interface does not advertise ETS)</li> </ul>                                                                                                                                                             |
| ETS Rec                          | ( <b>terse</b> option only) DCBX TLV peer advertisement state for ETS (state received from the connected DCBX peer): <ul style="list-style-type: none"> <li>• Advt—Peer interface advertises ETS TLVs</li> <li>• Not Advt—Peer interface does not advertise ETS</li> </ul> <p><b>NOTE:</b> When the DCBX mode is DCBX version 1.01, no peer information is displayed.</p>                                          |



Table 123: show dcbx neighbors Output Fields (*continued*)

| Field Name | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Version    | <p>(<b>terse</b> option only) The DCBX version used on the interface and whether the DCBX version was autonegotiated or explicitly configured:</p> <ul style="list-style-type: none"> <li>• <b>IEEE</b>—The interface uses IEEE DCBX.</li> <li>• <b>1.01</b>—The interface uses DCBX version 1.01.</li> </ul> <p>When the DCBX version used is the result of autonegotiation, the term (<b>Auto</b>) appears next to the version. For example, <b>IEEE (Auto)</b> indicates that the interface autonegotiated with the connected peer to use IEEE DCBX. Autonegotiation is enabled by default.</p> |

## Sample Output

### show dcbx neighbors interface (QFX Series, DCBX Version 1.01 Mode)

```

user@switch> show dcbx neighbors interface xe-0/0/0
Interface : xe-0/0/0.0 - Parent Interface: ae0.0
Active-application-map: app-map-1
Protocol-State: in-sync
Protocol-Mode: DCBX Version 1.01

Local-Advertisement:
  Operational version: 1
  sequence-number: 130, acknowledge-id: 102

Peer-Advertisement:
  Operational version: 1
  sequence-number: 102, acknowledge-id: 130

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:
  Enable: Yes, Willing: No, Error: No
  Maximum Traffic Classes capable to support PFC: 8

Code Point      Admin Mode      Operational Mode
000             Disabled       Disable
001             Disabled       Disable
010             Disabled       Disable
011             Enabled        Enable
100             Enabled        Enable
101             Disabled       Disable
110             Disabled       Disable
111             Disabled       Disable

Peer-Advertisement:
  Enable: Yes, Willing: No, Error: No
  Maximum Traffic Classes capable to support PFC: 8

Code Point      Admin Mode
000             Disabled

```

|     |          |
|-----|----------|
| 001 | Disabled |
| 010 | Disabled |
| 011 | Enabled  |
| 100 | Enabled  |
| 101 | Disabled |
| 110 | Disabled |
| 111 | Disabled |

Feature: Application, Protocol-State: in-sync

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

| App1-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00001110     | Enabled |
| iSCSI     |               | 3260          | 10000000     | Enabled |

Peer-Advertisement:

Enable: Yes, Willing: Yes, Error: No

| App1-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        | N/A           | 00001110     | Enabled |

Feature: ETS, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 8

| Code Point | Priority-Group |
|------------|----------------|
| 000        | 0              |
| 001        | 7              |
| 010        | 7              |
| 011        | 7              |
| 100        | 0              |
| 101        | 1              |
| 110        | 1              |
| 111        | 7              |

| Priority-Group | Percentage B/W |
|----------------|----------------|
| 0              | 40%            |
| 1              | 5%             |

Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 8

| Code Point | Priority-Group |
|------------|----------------|
| 000        | 0              |
| 001        | 7              |
| 010        | 7              |
| 011        | 7              |
| 100        | 0              |
| 101        | 1              |
| 110        | 1              |

|                |                |
|----------------|----------------|
| 111            | 7              |
| Priority-Group | Percentage B/W |
| 0              | 40%            |
| 1              | 5%             |

### show dcbx neighbors interface (QFX Series, IEEE DCBX Mode)

user@switch> **show dcbx neighbors interface xe-0/0/0**

Interface : xe-0/0/0.0 - Parent Interface: ae0.0

Active-application-map: app-map-1

Protocol-Mode: IEEE-DCBX Version

Feature: PFC

Local-Advertisement:

Willing: No

Mac auth Bypass Capability: No

Operational State: Enabled

Maximum Traffic Classes capable to support PFC: 8

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Enabled    |
| 100        | Enabled    |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

Peer-Advertisement:

Willing: No

Mac auth Bypass Capability: No

Operational State: Enabled

Maximum Traffic Classes capable to support PFC: 8

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Enabled    |
| 100        | Enabled    |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

Feature: Application

Local-Advertisement:

| Appl-Name | Ethernet-Type | Socket-Number | Priority-field |
|-----------|---------------|---------------|----------------|
| FCoE      | 0x8906        |               | 00001110       |
| iSCSI     |               | 3260          | 10000000       |

Peer-Advertisement:

| Appl-Name | Ethernet-Type | Socket-Number | Priority-field |
|-----------|---------------|---------------|----------------|
|-----------|---------------|---------------|----------------|

|      |        |     |          |
|------|--------|-----|----------|
| FCoE | 0x8906 | N/A | 00001110 |
|------|--------|-----|----------|

## Feature: ETS

## Local-Advertisement:

TLV Type: Configuration/Recommendation

Willing: No

Credit Based Shaper: No

Maximum Traffic Classes supported: 3

| Code Point | Priority-Group |
|------------|----------------|
| 000        | 0              |
| 001        | 7              |
| 010        | 7              |
| 011        | 7              |
| 100        | 0              |
| 101        | 1              |
| 110        | 1              |
| 111        | 7              |

| Priority-Group | Percentage B/W |
|----------------|----------------|
| 0              | 40%            |
| 1              | 5%             |

| Priority-Group | Transmission Selection Algorithm |
|----------------|----------------------------------|
| 0              | Enhanced Transmission Selection  |
| 1              | Enhanced Transmission Selection  |

## Peer-Advertisement:

TLV Type: Configuration

Willing: No

Credit Based Shaper: No

| Code Point | Priority-Group |
|------------|----------------|
| 000        | 0              |
| 001        | 7              |
| 010        | 7              |
| 011        | 7              |
| 100        | 0              |
| 101        | 1              |
| 110        | 1              |
| 111        | 7              |

| Priority-Group | Percentage B/W |
|----------------|----------------|
| 0              | 40%            |
| 1              | 5%             |

| Priority-Group | Transmission Selection Algorithm |
|----------------|----------------------------------|
| 0              | Enhanced Transmission Selection  |
| 1              | Enhanced Transmission Selection  |

## Peer-Advertisement:

TLV Type: Recommendation

| Code Point | Priority-Group |
|------------|----------------|
| 000        | 0              |
| 001        | 7              |
| 010        | 7              |
| 011        | 7              |
| 100        | 0              |

|                |                                  |
|----------------|----------------------------------|
| 101            | 1                                |
| 110            | 1                                |
| 111            | 7                                |
| Priority-Group | Percentage B/W                   |
| 0              | 40%                              |
| 1              | 5%                               |
| Priority-Group | Transmission Selection Algorithm |
| 0              | Enhanced Transmission Selection  |
| 1              | Enhanced Transmission Selection  |

### show dcbx neighbors terse (QFX Series)

```

user@switch> show dcbx neighbors terse
Interface Parent PFC ETS ETS Version
Interface
xe-0/0/8.0 - Enabled Advt Advt IEEE (Auto)
xe-0/0/9.0 - Disabled Disabled 1.01
xe-0/0/11.0 ae0.0 Enabled Advt Advt IEEE (Auto)
xe-0/0/12.0 ae0.0 Enabled Advt Advt IEEE (Auto)
xe-0/0/32.0 - Enabled Advt Not Advt IEEE
xe-0/0/36.0 - Not Advt Advt Advt IEEE

```

### show dcbx neighbors (EX4500 Switch: FCoE Interfaces on Both Local and Peer with PFC Configured Compatibly)

```

user@switch> show dcbx neighbors interface xe-0/0/14

Interface : xe-0/0/14.0 - Parent Interface: ae0.0
Protocol-State: in-sync

Local-Advertisement:
  Operational version: 0
  sequence-number: 6, acknowledge-id: 6

Peer-Advertisement:
  Operational version: 0
  sequence-number: 6, acknowledge-id: 6

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:
  Enable: Yes, Willing: No, Error: No
  Maximum Traffic Classes capable to support PFC: 6

Code Point      Admin Mode
000             Disabled
001             Disabled
010             Disabled
011             Enabled
100             Disabled
101             Disabled
110             Disabled
111             Disabled

```

## Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 6

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Enabled    |
| 100        | Disabled   |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

Feature: Application, Protocol-State: in-sync

## Local-Advertisement:

Enable: Yes, Willing: No, Error: No <<< Error bit will not be set as there is no miss configuration between local and peer.

| Appl-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00001000     | Enabled |

## Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

| Status  | Appl-Name | Ethernet-Type | Socket-Number | Priority-Map |
|---------|-----------|---------------|---------------|--------------|
| Enabled | FCoE      | 0x8906        |               | 00001000     |

**show dcbx neighbors (EX4500 Switch: DCBX Interfaces on Local and Peer Are Configured Compatibly with iSCSI Application)**

user@switch&gt; show dcbx neighbors interface xe-0/0/14

Interface : xe-0/0/14.0 - Parent Interface: ae0.0

Protocol-State: in-sync

Active-application-map: iscsi-map

## Local-Advertisement:

Operational version: 0

sequence-number: 9, acknowledge-id: 12

## Peer-Advertisement:

Operational version: 0

sequence-number: 12, acknowledge-id: 9

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

## Local-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 6

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Enabled    |
| 100        | Disabled   |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

## Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 6

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Enabled    |
| 100        | Disabled   |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

Feature: Application, Protocol-State: in-sync

## Local-Advertisement:

Enable: Yes, Willing: No, Error: No

| Appl-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00001000     | Enabled |
| iscsi     |               | 3260          | 00100000     | Enabled |

## Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

| Appl-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00001000     | Enabled |
| iscsi     |               | 3260          | 00100000     | Enabled |

**show dcbx neighbors (EX4500 Switch: Includes ETS)**

user@switch&gt; show dcbx neighbors interface xe-0/0/3

Interface : xe-0/0/3.0  
 Protocol-State: in-sync  
 Active-application-map: map\_iscsi

## Local-Advertisement:

Operational version: 0

sequence-number: 1, acknowledge-id: 5

Peer-Advertisement:

Operational version: 0

sequence-number: 5, acknowledge-id: 1

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 6

| Code Point | Admin Mode |
|------------|------------|
| 000        | Enabled    |
| 001        | Enabled    |
| 010        | Disabled   |
| 011        | Disabled   |
| 100        | Disabled   |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

Peer-Advertisement:

Enable: Yes, Willing: Yes, Error: No

Maximum Traffic Classes capable to support PFC: 8

| Code Point | Admin Mode |
|------------|------------|
| 000        | Enabled    |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Disabled   |
| 100        | Enabled    |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

Feature: Application, Protocol-State: in-sync

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

| App1-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00000001     | Enabled |
| iscsi     |               | 3260          | 00000010     | Enabled |

Peer-Advertisement:

Enable: Yes, Willing: Yes, Error: No

| App1-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00010000     | Enabled |
| iscsi     |               | 3260          | 00010000     | Enabled |

Feature: ETS, Protocol-State: in-sync

Operational State: Enabled



## Local-Advertisement:

Enable: Yes, Willing: No, Error: No  
Maximum Traffic Classes supported : 3

| Code Point | Priority-Group |
|------------|----------------|
| 000        | 7              |
| 001        | 7              |
| 010        | 7              |
| 011        | 7              |
| 100        | 7              |
| 101        | 7              |
| 110        | 7              |
| 111        | 7              |

| Priority-Group | Percentage B/W |
|----------------|----------------|
| 7              | 100%           |

## Peer-Advertisement:

Enable: Yes, Willing: Yes, Error: No  
Maximum Traffic Classes supported : 8

| Code Point | Priority-Group |
|------------|----------------|
| 000        | 0              |
| 001        | 1              |
| 010        | 0              |
| 011        | 0              |
| 100        | 2              |
| 101        | 0              |
| 110        | 0              |
| 111        | 0              |

| Priority-Group | Percentage B/W |
|----------------|----------------|
| 0              | 30%            |
| 1              | 40%            |
| 2              | 30%            |

