

UNCLASSIFIED

**IDENTIFICATION OF VOLATILE
AND NON-VOLATILE STORAGE
AND
SANITIZATION OF SYSTEM COMPONENTS**

**JUNIPER NETWORKS
EX3300 Switches**

REVISION 1.0

April 24, 2013

UNCLASSIFIED

TABLE OF CONTENTS

| | | |
|-----|--|---|
| 1 | Introduction | 1 |
| 1.1 | Purpose | 1 |
| 1.2 | Scope | 1 |
| 2 | Equipment Overview..... | 1 |
| 2.1 | Identification of Chassis..... | 1 |
| 2.2 | Description of Field Replaceable Units (FRU) | 2 |
| 3 | Power Down and Removal of Non-Volatile Storage | 2 |
| 3.1 | System Power Down | 2 |
| 3.2 | Disassembly of the EX3300 Chassis and Identification of NV storage | 2 |
| 3.3 | Removal of the FLASH Chip from the System Board | 6 |

TABLE OF FIGURES

| | |
|--|---|
| Figure 2-1: EX3300 (48T-SKU)..... | 2 |
| Figure 3-1: EX3300 Top side screws | 3 |
| Figure 3-2: EX3300 Left side screws | 3 |
| Figure 3-3: EX3300 Right side screws..... | 4 |
| Figure 3-4: EX3300 Rear screws | 4 |
| Figure 3-5: EX3300 Open Chassis (48T-SKU) | 5 |
| Figure 3-6: EX3300 Locate NV Storage (Flash) | 6 |

1 INTRODUCTION

1.1 Purpose

The purpose of this document is to provide direction to identify and remove all non-volatile (NV) storage from the Juniper Networks EX3300 switching platform.

1.2 Scope

This document only addresses the EX3300 switching platform. While other platforms offered by Juniper Networks may contain similar hardware components, this document only applies to these devices. Furthermore, this document only provides direction for the identification and removal of NV storage components. It does not address destruction procedures for those components. As all of the NV storage components used in the EX3300 are commercial off-the-shelf (COTS) components, directions for destruction of those components are left to the governing Department, Agency, or Office.

2 EQUIPMENT OVERVIEW

2.1 Identification of Chassis

EX-series switches provide scalable connectivity for the enterprise market, including branch offices, campus locations, data centers and retail access deployments. The switches run under the JUNOS software, which provides Layer 2 and Layer 3 switching, routing, and security services. The same JUNOS code base that runs on EX-series switches also runs on all Juniper Networks J-series, M-series, MX-series, and T-series routing platforms.

EX3300 switches provide connectivity for medium and high-density environments and scalability for growing networks. The EX3300 switches can be deployed wherever you need a high density of Gigabit Ethernet ports (24 to 48 ports) or redundancy.

EX3300 switches are available in models with 24 or 48 ports equipped for Power over Ethernet Plus (PoE+). All models provide ports that have 10/100/1000Base-T Gigabit Ethernet connectors.

The EX3300 switches also include the following components:

- Factory-installed power supplies. An optional additional connection to an external power source is also available for the EX3300.
- Factory-installed two DC brushless fans.
- JUNOS software with its modular design that enables failed system processes to gracefully restart.

EX3300 switches provide four fixed ports for uplink connectivity which support 1Gbps and 10Gbps small form-factor pluggable (SFP) transceivers.



Figure 2-1: EX3300 (48T-SKU)

2.2 Description of Field Replaceable Units (FRU)

The transceivers are hot-removable and hot-insertable: You can remove and replace them without powering off the switch or disrupting switch functions.

None of these components contain NV RAM. All NV RAM is soldered to the system board.

3 POWER DOWN AND REMOVAL OF NON-VOLATILE STORAGE

In order to ensure that no user data or system configurations remain resident on an EX3300 platform, the following steps must be performed:

1. Power must be removed from the system to clear all volatile storage
2. The FLASH chip must be removed from the system board

A detailed process is included in the following sections.

3.1 System Power Down

Power down the system by setting the switch on each installed unit to the “off” position. Remove any connected power cords.

3.2 Disassembly of the EX3300 Chassis and Identification of NV storage

The EX3300 does not contain NV storage that is replaceable as it is soldered to the system board. In order to access the memory for removal, refer to the following steps:

1. Remove the four screws from the top of the system (Figure 3-1)

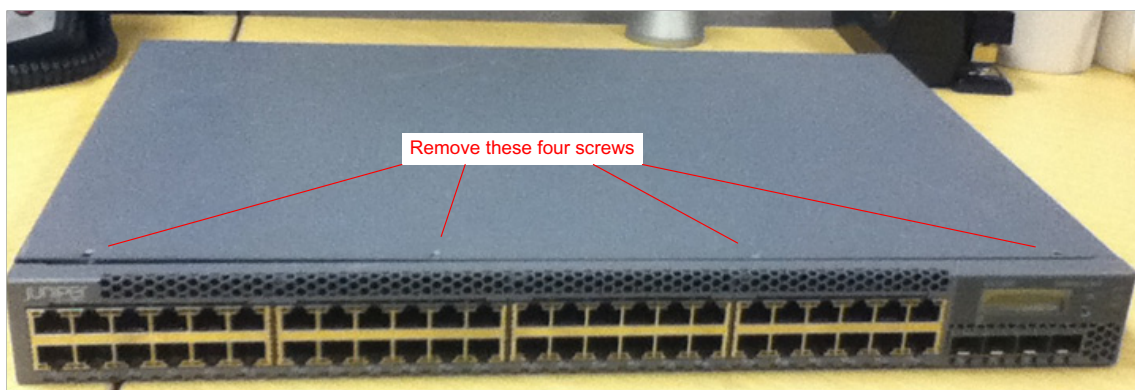


Figure 3-1: EX3300 Top side screws

2. Remove five screws from left side of chassis (Figure 3-2)

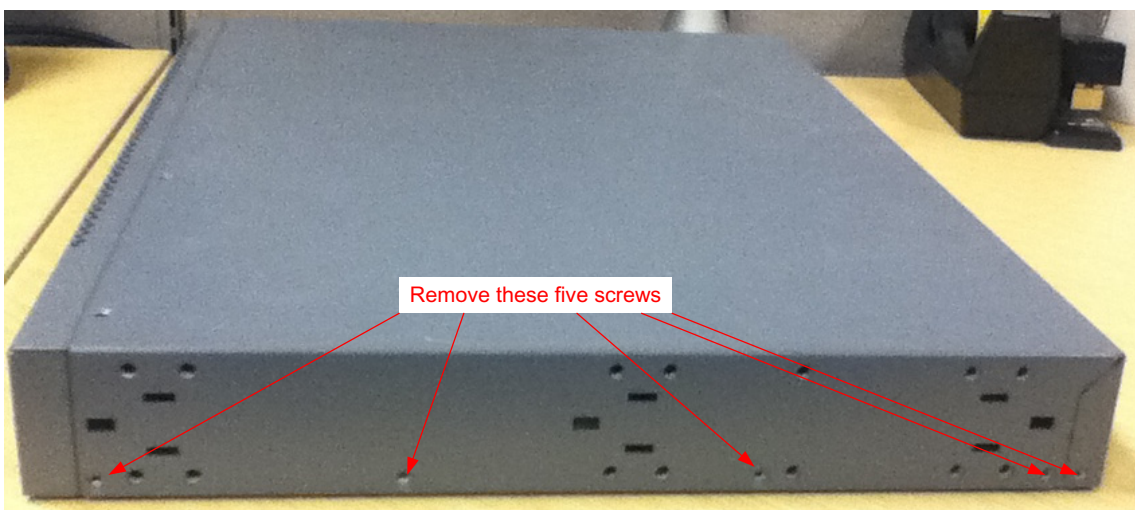


Figure 3-2: EX3300 Left side screws

3. Remove four screws from right side of chassis (Figure 3-3)

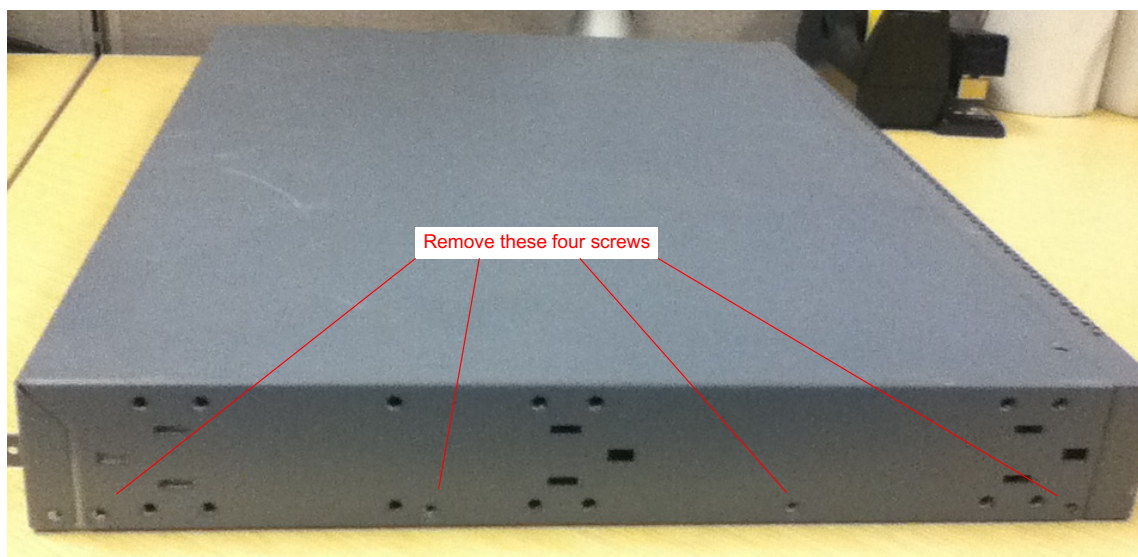


Figure 3-3: EX3300 Right side screws

4. Remove six screws from rear of chassis (figure 3-4)

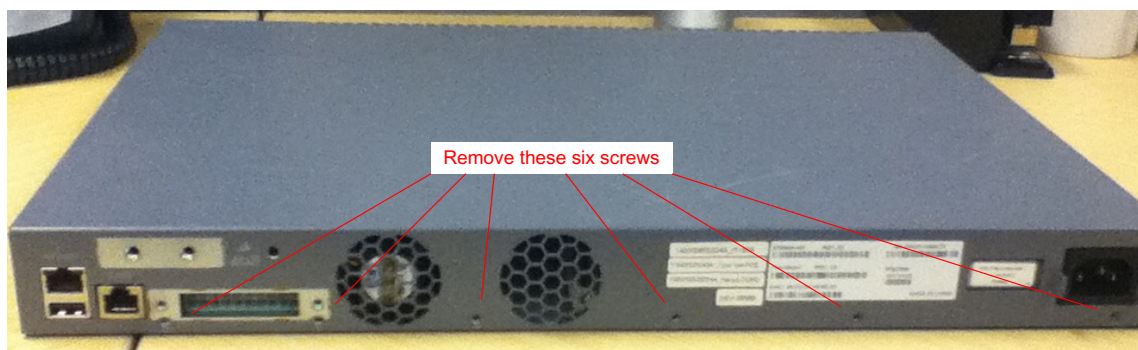


Figure 3-4: EX3300 Rear screws

5. Remove the top of the chassis (Figure 3-5)



Figure 3-5: EX3300 Open Chassis (48T-SKU)

6. Locate NV storage (Figure 3-6)

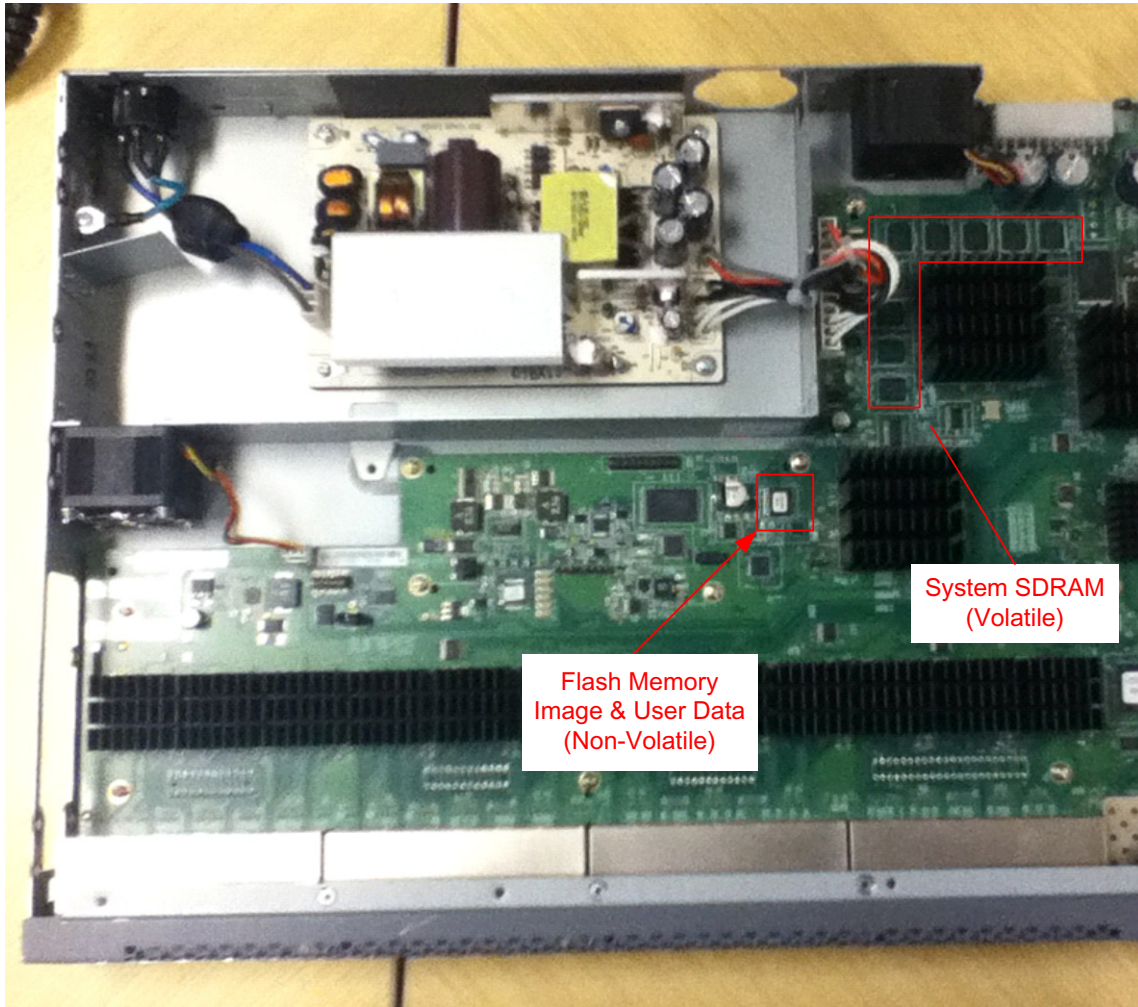


Figure 3-6: EX3300 Locate NV Storage (Flash)

3.3 Removal of the FLASH Chip from the System Board

Once the NV storage has been located, utilize a screwdriver or other means to remove it from the system board.

NOTE: Before removal, ensure J-TAC and the appropriate account team have been notified of your intentions.