



Junos[®] OS

Provider Backbone Bridging on MX Series Routers

Release
11.2



Published: 2011-05-18

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

Provider Backbone Bridging on MX Series Routers
Copyright © 2011, Juniper Networks, Inc.
All rights reserved.

Revision History
June 2011—R1 Junos OS 11.2

The information in this document is current as of the date listed in the revision history.

END USER LICENSE AGREEMENT

READ THIS END USER LICENSE AGREEMENT ("AGREEMENT") BEFORE DOWNLOADING, INSTALLING, OR USING THE SOFTWARE. BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE OR OTHERWISE EXPRESSING YOUR AGREEMENT TO THE TERMS CONTAINED HEREIN, YOU (AS CUSTOMER OR IF YOU ARE NOT THE CUSTOMER, AS A REPRESENTATIVE/AGENT AUTHORIZED TO BIND THE CUSTOMER) CONSENT TO BE BOUND BY THIS AGREEMENT. IF YOU DO NOT OR CANNOT AGREE TO THE TERMS CONTAINED HEREIN, THEN (A) DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE, AND (B) YOU MAY CONTACT JUNIPER NETWORKS REGARDING LICENSE TERMS.

1. **The Parties.** The parties to this Agreement are (i) Juniper Networks, Inc. (if the Customer's principal office is located in the Americas) or Juniper Networks (Cayman) Limited (if the Customer's principal office is located outside the Americas) (such applicable entity being referred to herein as "Juniper"), and (ii) the person or organization that originally purchased from Juniper or an authorized Juniper reseller the applicable license(s) for use of the Software ("Customer") (collectively, the "Parties").

2. **The Software.** In this Agreement, "Software" means the program modules and features of the Juniper or Juniper-supplied software, for which Customer has paid the applicable license or support fees to Juniper or an authorized Juniper reseller, or which was embedded by Juniper in equipment which Customer purchased from Juniper or an authorized Juniper reseller. "Software" also includes updates, upgrades and new releases of such software. "Embedded Software" means Software which Juniper has embedded in or loaded onto the Juniper equipment and any updates, upgrades, additions or replacements which are subsequently embedded in or loaded onto the equipment.

3. **License Grant.** Subject to payment of the applicable fees and the limitations and restrictions set forth herein, Juniper grants to Customer a non-exclusive and non-transferable license, without right to sublicense, to use the Software, in executable form only, subject to the following use restrictions:

- a. Customer shall use Embedded Software solely as embedded in, and for execution on, Juniper equipment originally purchased by Customer from Juniper or an authorized Juniper reseller.
- b. Customer shall use the Software on a single hardware chassis having a single processing unit, or as many chassis or processing units for which Customer has paid the applicable license fees; provided, however, with respect to the Steel-Belted Radius or Odyssey Access Client software only, Customer shall use such Software on a single computer containing a single physical random access memory space and containing any number of processors. Use of the Steel-Belted Radius or IMS AAA software on multiple computers or virtual machines (e.g., Solaris zones) requires multiple licenses, regardless of whether such computers or virtualizations are physically contained on a single chassis.
- c. Product purchase documents, paper or electronic user documentation, and/or the particular licenses purchased by Customer may specify limits to Customer's use of the Software. Such limits may restrict use to a maximum number of seats, registered endpoints, concurrent users, sessions, calls, connections, subscribers, clusters, nodes, realms, devices, links, ports or transactions, or require the purchase of separate licenses to use particular features, functionalities, services, applications, operations, or capabilities, or provide throughput, performance, configuration, bandwidth, interface, processing, temporal, or geographical limits. In addition, such limits may restrict the use of the Software to managing certain kinds of networks or require the Software to be used only in conjunction with other specific Software. Customer's use of the Software shall be subject to all such limitations and purchase of all applicable licenses.
- d. For any trial copy of the Software, Customer's right to use the Software expires 30 days after download, installation or use of the Software. Customer may operate the Software after the 30-day trial period only if Customer pays for a license to do so. Customer may not extend or create an additional trial period by re-installing the Software after the 30-day trial period.
- e. The Global Enterprise Edition of the Steel-Belted Radius software may be used by Customer only to manage access to Customer's enterprise network. Specifically, service provider customers are expressly prohibited from using the Global Enterprise Edition of the Steel-Belted Radius software to support any commercial network access services.

The foregoing license is not transferable or assignable by Customer. No license is granted herein to any user who did not originally purchase the applicable license(s) for the Software from Juniper or an authorized Juniper reseller.

4. **Use Prohibitions.** Notwithstanding the foregoing, the license provided herein does not permit the Customer to, and Customer agrees not to and shall not: (a) modify, unbundle, reverse engineer, or create derivative works based on the Software; (b) make unauthorized copies of the Software (except as necessary for backup purposes); (c) rent, sell, transfer, or grant any rights in and to any copy of the Software, in any form, to any third party; (d) remove any proprietary notices, labels, or marks on or in any copy of the Software or any product in which the Software is embedded; (e) distribute any copy of the Software to any third party, including as may be embedded in Juniper equipment sold in the secondhand market; (f) use any 'locked' or key-restricted feature, function, service, application, operation, or capability without first purchasing the applicable license(s) and obtaining a valid key from Juniper, even if such feature, function, service, application, operation, or capability is enabled without a key; (g) distribute any key for the Software provided by Juniper to any third party; (h) use the

Software in any manner that extends or is broader than the uses purchased by Customer from Juniper or an authorized Juniper reseller; (i) use Embedded Software on non-Juniper equipment; (j) use Embedded Software (or make it available for use) on Juniper equipment that the Customer did not originally purchase from Juniper or an authorized Juniper reseller; (k) disclose the results of testing or benchmarking of the Software to any third party without the prior written consent of Juniper; or (l) use the Software in any manner other than as expressly provided herein.

5. **Audit.** Customer shall maintain accurate records as necessary to verify compliance with this Agreement. Upon request by Juniper, Customer shall furnish such records to Juniper and certify its compliance with this Agreement.

6. **Confidentiality.** The Parties agree that aspects of the Software and associated documentation are the confidential property of Juniper. As such, Customer shall exercise all reasonable commercial efforts to maintain the Software and associated documentation in confidence, which at a minimum includes restricting access to the Software to Customer employees and contractors having a need to use the Software for Customer's internal business purposes.

7. **Ownership.** Juniper and Juniper's licensors, respectively, retain ownership of all right, title, and interest (including copyright) in and to the Software, associated documentation, and all copies of the Software. Nothing in this Agreement constitutes a transfer or conveyance of any right, title, or interest in the Software or associated documentation, or a sale of the Software, associated documentation, or copies of the Software.

8. **Warranty, Limitation of Liability, Disclaimer of Warranty.** The warranty applicable to the Software shall be as set forth in the warranty statement that accompanies the Software (the "Warranty Statement"). Nothing in this Agreement shall give rise to any obligation to support the Software. Support services may be purchased separately. Any such support shall be governed by a separate, written support services agreement. TO THE MAXIMUM EXTENT PERMITTED BY LAW, JUNIPER SHALL NOT BE LIABLE FOR ANY LOST PROFITS, LOSS OF DATA, OR COSTS OR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, OR FOR ANY SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THIS AGREEMENT, THE SOFTWARE, OR ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. IN NO EVENT SHALL JUNIPER BE LIABLE FOR DAMAGES ARISING FROM UNAUTHORIZED OR IMPROPER USE OF ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. EXCEPT AS EXPRESSLY PROVIDED IN THE WARRANTY STATEMENT TO THE EXTENT PERMITTED BY LAW, JUNIPER DISCLAIMS ANY AND ALL WARRANTIES IN AND TO THE SOFTWARE (WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE), INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. IN NO EVENT DOES JUNIPER WARRANT THAT THE SOFTWARE, OR ANY EQUIPMENT OR NETWORK RUNNING THE SOFTWARE, WILL OPERATE WITHOUT ERROR OR INTERRUPTION, OR WILL BE FREE OF VULNERABILITY TO INTRUSION OR ATTACK. In no event shall Juniper's or its suppliers' or licensors' liability to Customer, whether in contract, tort (including negligence), breach of warranty, or otherwise, exceed the price paid by Customer for the Software that gave rise to the claim, or if the Software is embedded in another Juniper product, the price paid by Customer for such other product. Customer acknowledges and agrees that Juniper has set its prices and entered into this Agreement in reliance upon the disclaimers of warranty and the limitations of liability set forth herein, that the same reflect an allocation of risk between the Parties (including the risk that a contract remedy may fail of its essential purpose and cause consequential loss), and that the same form an essential basis of the bargain between the Parties.

9. **Termination.** Any breach of this Agreement or failure by Customer to pay any applicable fees due shall result in automatic termination of the license granted herein. Upon such termination, Customer shall destroy or return to Juniper all copies of the Software and related documentation in Customer's possession or control.

10. **Taxes.** All license fees payable under this agreement are exclusive of tax. Customer shall be responsible for paying Taxes arising from the purchase of the license, or importation or use of the Software. If applicable, valid exemption documentation for each taxing jurisdiction shall be provided to Juniper prior to invoicing, and Customer shall promptly notify Juniper if their exemption is revoked or modified. All payments made by Customer shall be net of any applicable withholding tax. Customer will provide reasonable assistance to Juniper in connection with such withholding taxes by promptly: providing Juniper with valid tax receipts and other required documentation showing Customer's payment of any withholding taxes; completing appropriate applications that would reduce the amount of withholding tax to be paid; and notifying and assisting Juniper in any audit or tax proceeding related to transactions hereunder. Customer shall comply with all applicable tax laws and regulations, and Customer will promptly pay or reimburse Juniper for all costs and damages related to any liability incurred by Juniper as a result of Customer's non-compliance or delay with its responsibilities herein. Customer's obligations under this Section shall survive termination or expiration of this Agreement.

11. **Export.** Customer agrees to comply with all applicable export laws and restrictions and regulations of any United States and any applicable foreign agency or authority, and not to export or re-export the Software or any direct product thereof in violation of any such restrictions, laws or regulations, or without all necessary approvals. Customer shall be liable for any such violations. The version of the Software supplied to Customer may contain encryption or other capabilities restricting Customer's ability to export the Software without an export license.

12. **Commercial Computer Software.** The Software is "commercial computer software" and is provided with restricted rights. Use, duplication, or disclosure by the United States government is subject to restrictions set forth in this Agreement and as provided in DFARS 227.7201 through 227.7202-4, FAR 12.212, FAR 27.405(b)(2), FAR 52.227-19, or FAR 52.227-14 (ALT III) as applicable.

13. **Interface Information.** To the extent required by applicable law, and at Customer's written request, Juniper shall provide Customer with the interface information needed to achieve interoperability between the Software and another independently created program, on payment of applicable fee, if any. Customer shall observe strict obligations of confidentiality with respect to such information and shall use such information in compliance with any applicable terms and conditions upon which Juniper makes such information available.

14. **Third Party Software.** Any licensor of Juniper whose software is embedded in the Software and any supplier of Juniper whose products or technology are embedded in (or services are accessed by) the Software shall be a third party beneficiary with respect to this Agreement, and such licensor or vendor shall have the right to enforce this Agreement in its own name as if it were Juniper. In addition, certain third party software may be provided with the Software and is subject to the accompanying license(s), if any, of its respective owner(s). To the extent portions of the Software are distributed under and subject to open source licenses obligating Juniper to make the source code for such portions publicly available (such as the GNU General Public License ("GPL") or the GNU Library General Public License ("LGPL")), Juniper will make such source code portions (including Juniper modifications, as appropriate) available upon request for a period of up to three years from the date of distribution. Such request can be made in writing to Juniper Networks, Inc., 1194 N. Mathilda Ave., Sunnyvale, CA 94089, ATTN: General Counsel. You may obtain a copy of the GPL at <http://www.gnu.org/licenses/gpl.html>, and a copy of the LGPL at <http://www.gnu.org/licenses/lgpl.html>.

15. **Miscellaneous.** This Agreement shall be governed by the laws of the State of California without reference to its conflicts of laws principles. The provisions of the U.N. Convention for the International Sale of Goods shall not apply to this Agreement. For any disputes arising under this Agreement, the Parties hereby consent to the personal and exclusive jurisdiction of, and venue in, the state and federal courts within Santa Clara County, California. This Agreement constitutes the entire and sole agreement between Juniper and the Customer with respect to the Software, and supersedes all prior and contemporaneous agreements relating to the Software, whether oral or written (including any inconsistent terms contained in a purchase order), except that the terms of a separate written agreement executed by an authorized Juniper representative and Customer shall govern to the extent such terms are inconsistent or conflict with terms contained herein. No modification to this Agreement nor any waiver of any rights hereunder shall be effective unless expressly assented to in writing by the party to be charged. If any portion of this Agreement is held invalid, the Parties agree that such invalidity shall not affect the validity of the remainder of this Agreement. This Agreement and associated documentation has been written in the English language, and the Parties agree that the English version will govern. (For Canada: Les parties aux présentes confirment leur volonté que cette convention de même que tous les documents y compris tout avis qui s'y rattache, soient rédigés en langue anglaise. (Translation: The parties confirm that this Agreement and all related documentation is and will be in the English language)).

Table of Contents

Part 1	Overview	
Chapter 1	Provider Backbone Bridging Overview	3
	Understanding Provider Backbone Bridging on MX Series Routers	3
	How PBB Improves on Q-in-Q in Layer 2 Ethernet Switching	3
	How PBB Works on MX Series Routers	4
	Understanding How Interface Sets Work With E-LINE and E-LAN Services on MX Series Routers	5
	Understanding PIP and CBP Interfaces on MX Series Routers	6
Chapter 2	Class of Service Overview	9
	Understanding Class of Service and PBB for MX Series Routers	9
	Understanding JUNOS CoS Components for MX Series Routers	10
	Code-Point Aliases	10
	Policers	10
	Classifiers	10
	Forwarding Classes	11
	Drop Profiles	11
	Schedulers	11
	Rewrite Rules	11
Chapter 3	Connectivity Fault Management Overview	13
	Understanding Fault Isolation and Detection in a PBB using Connectivity Fault Management for MX Series Routers	13
Part 2	Configuration	
Chapter 4	Provider Backbone Bridging Solutions	17
	Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers	17
	Example: Configuring CoS for a PBB Network on MX Series Routers	79
	Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers	102
Chapter 5	Provider Backbone Bridging Configuration Statements	143
	bridge-domains	144
	bridge-domain-type	145
	default-bvlan	145
	default-isid	146
	family	147
	isid	151
	family	152

	mac-address	156
	pbb-options	156
	pbb-service-options	157
	peer-instance	157
	routing-instances	158
	service-groups	159
	service-type	160
	unit	161
	vlan-id (Provider Backbone Bridge)	167
	vlan-id (Bridge Domain)	168
Chapter 6	Connectivity Fault Management Configuration Statements	171
	[edit protocols oam] Hierarchy Level	171
	auto-discovery	175
	bridge-domain	175
	connectivity-fault-management	176
	continuity-check	178
	direction	179
	ethernet (Protocols OAM)	180
	interface (IEEE 802.1ag OAM Connectivity-Fault Management)	183
	interval	184
	level	185
	maintenance-association	186
	maintenance-domain	187
	mep	188
	mip-half-function	189
	virtual-switch	190
Chapter 7	CoS Configuration Statements	191
	buffer-size	192
	classifiers (Definition)	193
	code-point	194
	code-points	194
	family	195
	filter (Configuring)	196
	firewall	197
	forwarding-classes	197
	ieee-802.1	198
	interfaces	199
	interface-set	199
	interface-set (Ethernet Interfaces)	200
	loss-priority (Rewrite Rules)	201
	loss-priority (BA Classifiers)	202
	output-traffic-control-profile	203
	policer (Configuring)	204
	rewrite-rules (Definition)	205
	scheduler (Scheduler Map)	206
	scheduler-maps (For Most Interface Types)	206
	scheduler-maps (For Most Interface Types)	207
	schedulers (Class-of-Service)	208

	term	209
	traffic-control-profiles	211
	transmit-rate	212
Chapter 8	Interface Set Configuration Statements	215
	interface-set (Ethernet Interfaces)	215
	interface-set	216
Part 3	Administration	
Chapter 9	Provider Backbone Bridging Monitoring Commands	219
	show bridge mac-table	220
	show interfaces (Gigabit Ethernet)	223
	show l2-learning backbone-instance	244
	show l2-learning provider-instance	247
	show l2-learning remote-backbone-edge-bridge	250
Chapter 10	CoS Monitoring Commands	253
	show class-of-service scheduler-map	254
	show class-of-service traffic-control-profile	256
	show firewall	258
	show interfaces interface-set queue	261
Chapter 11	Connectivity Fault Management Monitoring Commands	269
	show class-of-service interface-set	270
	show oam ethernet connectivity-fault-management interfaces	272
	show oam ethernet connectivity-fault-management mep-database	281
	show oam ethernet connectivity-fault-management mip	291
	traceroute ethernet	292
Part 4	Index	
	Index	297

List of Figures

Part 1	Overview	
Chapter 1	Provider Backbone Bridging Overview	3
	Figure 1: Relationship of Forwarding Classes, Services, Interface Sets, and Physical Interface	6
Part 2	Configuration	
Chapter 4	Provider Backbone Bridging Solutions	17
	Figure 2: Network Topology for E-LAN Service in a Provider Bridged Network	19
	Figure 3: Network Topology for E-LINE Service in a Provider Bridged Network . . .	20
	Figure 4: Network Topology for CoS for Provider Backbone Bridging	80
	Figure 5: Egress Shaping	81
	Figure 6: Achieving Ingress SLA by Applying Policers for Each Traffic Class	82
	Figure 7: Network Topology for the PBBN	103
	Figure 8: Network Topology for the PBN	105

List of Tables

Part 2	Configuration	
Chapter 4	Provider Backbone Bridging Solutions	17
	Table 1: Components of the Topology for Configuring E-LINE and E-LAN Service on MX Series Routers	20
	Table 2: BEB1 Mapping	24
	Table 3: BEB2 Mapping	32
	Table 4: BEB2 Mapping	38
	Table 5: BEB4 Mapping	44
	Table 6: ES1 C-VLAN to S-VLAN Mapping	52
	Table 7: ES3 C-VLAN to S-VLAN Mapping	56
	Table 8: ES4 C-VLAN to S-VLAN Mapping	58
	Table 9: Egress SLA Enforcement	81
	Table 10: Ingress SLA Enforcement	82
	Table 11: Components of the Topology for Configuring CoS on MX Series Routers	83
	Table 12: CFM Components Configured for the PBBN	104
	Table 13: CFM Components Configured for the PBN	106
Part 3	Administration	
Chapter 9	Provider Backbone Bridging Monitoring Commands	219
	Table 14: show bridge mac-table Output fields	221
	Table 15: show interfaces Gigabit Ethernet Output Fields	224
	Table 16: Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type	237
	Table 17: show l2-learning instance Output Fields	244
	Table 18: show l2-learning instance Output Fields	247
	Table 19: show l2-learning instance Output Fields	250
Chapter 10	CoS Monitoring Commands	253
	Table 20: show class-of-service scheduler-map Output Fields	254
	Table 21: show class-of-service traffic-control-profile Output Fields	256
	Table 22: show firewall Output Fields	259
	Table 23: Ethernet show interfaces interface-set queue Output Fields	262
Chapter 11	Connectivity Fault Management Monitoring Commands	269
	Table 24: show class-of-service interface-set Output Fields	270
	Table 25: show oam ethernet connectivity-fault-management interfaces Output Fields	273
	Table 26: show oam ethernet connectivity-fault-management mep-database Output Fields	282

Table 27: show oam ethernet connectivity-fault-management mip Output Fields	291
Table 28: traceroute ethernet Output Fields	292

PART 1

Overview

- [Provider Backbone Bridging Overview on page 3](#)
- [Class of Service Overview on page 9](#)
- [Connectivity Fault Management Overview on page 13](#)

CHAPTER 1

Provider Backbone Bridging Overview

- Understanding Provider Backbone Bridging on MX Series Routers on page 3
- Understanding How Interface Sets Work With E-LINE and E-LAN Services on MX Series Routers on page 5
- Understanding PIP and CBP Interfaces on MX Series Routers on page 6

Understanding Provider Backbone Bridging on MX Series Routers

Provider backbone bridging (PBB) extends Layer 2 Ethernet switching to provide enhanced scalability, quality of service (QoS) features, and carrier-class reliability. The Juniper Networks JUNOS Software implementation of PBB supports the IEEE 802.1ah standard.

This topic describes the following concepts regarding PBB on Juniper Networks MX Series routers:

- How PBB Improves on Q-in-Q in Layer 2 Ethernet Switching on page 3
- How PBB Works on MX Series Routers on page 4

How PBB Improves on Q-in-Q in Layer 2 Ethernet Switching

When provider bridges (also known as Q-in-Q) extended Layer 2 Ethernet switching to create a two-level system of customer bridges and provider bridges, the solution adequately supported the needs of enterprise networks, but fell short of service provider network requirements.

The IEEE 802.1ad standard supporting Q-in-Q provides for an additional Q-tag that splits the VLAN plane to create two separate VLAN ID (VID) fields: a customer bridge VLAN ID (C-VID) used by customers and a provider bridge VLAN ID (S-VID) used by service providers. This hierarchical layer allows a packet from a C-VID to travel through the customer VLAN, then “stacks” a tag by adding an additional 802.1q tag for the service provider to facilitate segregated travel through a service provider’s VLAN. As the packet leaves the S-VID, the extra tag is removed in the downstream direction.

Provider bridge networks (PBNs) have the following limitations:

- Limited number of service instances—PBNs can support a maximum of 4096 service instances per PBN.
- Potential scaling issue—Service provider switches supporting 802.1ad control their own bridges (S-VIDs), but are also required to learn all customer end-station MAC

addresses. As a service provider supports more customers, the increased number of learned MAC addresses doesn't scale according to needs. When the number of entries exceeds the capacity permitted in the forwarding table, the forwarding table overflows and can potentially trigger a broadcast storm in the provider network.

- No clear demarcation between customer and provider networks—Customer networks cannot be cleanly separated from provider networks. A clear demarcation point determines what services are provisioned and how fault and performance management is performed for the services provided.

PBB (also known as MAC-in-MAC) is used by service providers to resolve these problems. PBBNs have the following benefits:

- Imposes no change to the Ethernet switching process in the core bridges.
- Supports Ethernet transparent LAN (E-LAN), Ethernet private line (E-LINE), and Ethernet tree service (E-TREE) connectivity models.
- Separates Ethernet as a service from Ethernet as infrastructure.
- Provides a clear demarcation between the customer and provider domain.
- Learns customer MAC addresses only through the backbone edge bridges (BEBs).
- Supports up to 16 million service instances.
- Achieves additional PBBN scaling and interconnection using hierarchical and peer PBBN features.

PBB duplicates the MAC layer of the customer packet and keeps it separate from the provider domain, creating an infrastructure that is transparent from a customer network. BEBs append their forwarding fields (source address [B-SA], destination address [B-DA] and a backbone VID [B-VID]) with the MAC address and a service identifier (I-SID) at the border. A service provider switch only encapsulates the MAC addresses at the edge, between the customer cloud and the provider cloud on the BEB.

To solve the issue of identifying a customer service instance, a new 24-bit I-SID field is used. I-SIDs enable a PBB to support up to 16 million service instances without any impact to the forwarding fields (B-VID, B-SA, and B-DA).

How PBB Works on MX Series Routers

A provider backbone bridged network (PBBN) is composed of a set of BEBs interconnected by some or all of the S-VLANs supported by a PBN. Each BEB provides interfaces that encapsulate (or verify the encapsulation of) customer frames, thus allowing customer MAC (C-MAC) addresses and VLANs to be independent of the backbone MAC (B-MAC) addresses and VLANs administered by the PBBN operator. The backbone is segregated into broadcast domains by means of a VLAN identifier (B-VID). A new 24-bit service identifier (I-SID) is defined and used to associate a given customer MAC frame with a provider service instance (also called the service delimiter).

To configure PBB on an MX Series router, configure an I-component routing instance and a B-component routing instance. The B-component is the provider routing instance. Each B-component routing instance contains the B-VLAN bridge domains of a PBBN network that map the backbone service instance tag (I-Tag) to a B-VLAN. The I-component is

the customer routing instance. The I-component contains the S-VLAN bridge domains of a PBN network that map to a backbone service instance tag (I-Tag). Each S-VLAN is uniquely mapped to a single ISID (1:1 mapping), or multiple S-VLANs can be mapped to an ISID (N:1 mapping).

Each I-component routing instance must be associated with a **pip** interface, and each B-component routing instance must be associated with a **cbp** interface. These interfaces provide a connection between the customer routing instances (PBN or PBBN I-component) and a provider routing instance (PBBN B-component).

MX Series routers support multiple PBBNs (B-components) on a single router. Each router can support up to 16 PBBNs.

The JUNOS Software also supports enhanced carrier-level CoS and IEEE 802.1ag connectivity fault management (CFM) for PBB.

To configure PBB, include the **routing-instance *instance-name*** statement at the **[edit]** hierarchy level. You must create a routing instance for both the I-component and B-component.

- | | |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Related Documentation | <ul style="list-style-type: none"> • Understanding How Interface Sets Work With E-LINE and E-LAN Services on MX Series Routers on page 5 • Understanding PIP and CBP Interfaces on MX Series Routers on page 6 • Understanding Class of Service and PBB for MX Series Routers on page 9 • Understanding JUNOS CoS Components for MX Series Routers on page 10 • Understanding Fault Isolation and Detection in a PBB using Connectivity Fault Management for MX Series Routers on page 13 |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Understanding How Interface Sets Work With E-LINE and E-LAN Services on MX Series Routers


Provider backbone bridging (PBB) extends Layer 2 Ethernet switching to provide enhanced scalability, quality of service (QoS) features, and carrier-class reliability in service provider networks. The JUNOS Software implementation of PBB supports the IEEE 802.1ah (PBB) standards including the provisioning of Ethernet private line (E-LINE) (point-to-point) and Ethernet transparent LAN (E-LAN) (point-to-multipoint) services.

To support hierarchical CoS schedulers on Ethernet interfaces and to transport E-LINE and E-LAN traffic over the provider backbone bridged network (PBBN) core, you can configure an existing feature in JUNOS Software called an *interface set*. An interface set groups a number of logical interfaces into one interface set name.

Figure 1 on page 6 shows the relationship of the forwarding classes in this example. The three types of forwarding classes are **Voice-EF**, **VPN-PR-DATA**, and **INET-BEST-EFFORT**. These forwarding classes are associated with E-LINE 1, E-LINE 2, E-LAN 1, and E-LAN 2. E-LINE 1 and E-LINE 2 are bundled into interface set **vuni-set1**. E-LAN 1 and E-LAN 2 are bundled into interface set **vuni-set2**. The interface set then transports packets through

the physical interface. Interface sets provide the same function as a *virtual UNI* in the carrier Ethernet.

Figure 1: Relationship of Forwarding Classes, Services, Interface Sets, and Physical Interface

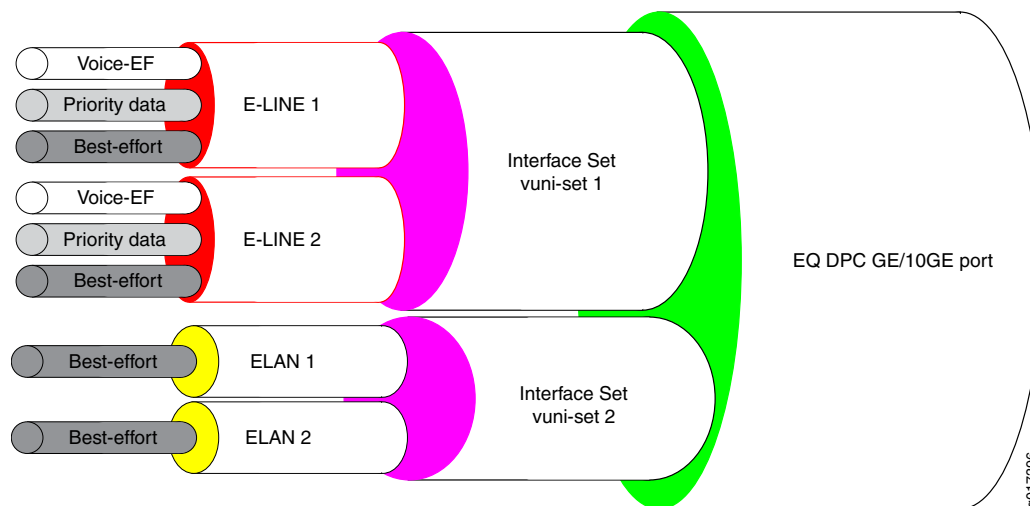

To configure an interface set, include the **interface-set** statement at the [edit interfaces] hierarchy level.

Related Documentation

- Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17
- Example: Configuring CoS for a PBB Network on MX Series Routers on page 79
- Understanding Provider Backbone Bridging on MX Series Routers on page 3

Understanding PIP and CBP Interfaces on MX Series Routers

The JUNOS Software supports provider backbone bridging (PBB) described in the IEEE 802.1ah standard. When configuring PBB in carrier Ethernet networks, configure new pseudo-logical interfaces to provide a connection between customer routing instances (PBBN I-component) and provider routing instance (PBBN B-component).

The interfaces **cpb** and **pip** are pseudo-logical interfaces in a PBBN network. A customer backbone port (CBP) is a backbone edge bridge (BEB) port that receives and transmits I-tagged frames for multiple customers, and assigns B-VIDs and translates I-SIDs on the basis of a received I-SID. A provider instance port (pip) logical interface in a PBBN can transmit and receive S-tagged frames and map them to a service identifier (I-SID) while optionally stripping the S-VLAN tag.

Multiple customer routing instances must be associated with a single PBBN provider routing instance. To do this, configure a **cpb** pseudo-logical interface in the B-component of the BEB and a **pip** pseudo-logical interface in each of the I-components of the BEB.

Configure **cpb** and **pip** pseudo-logical interfaces in the same way that you configure other logical interfaces in the JUNOS Software.

To configure a **cbp** or a **pip** pseudo-logical interface, include the **cbp** or **pip** statement at the `[edit interface interface-name unit logical-unit-number]` hierarchy level, then associate the interface to a routing instance by including the **interface [cbp | pip]** statement at the `[edit routing-instances instance-name]` hierarchy level.

**Related
Documentation**

- Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17
- Understanding Provider Backbone Bridging on MX Series Routers on page 3

CHAPTER 2

Class of Service Overview

- Understanding Class of Service and PBB for MX Series Routers on page 9
- Understanding JUNOS CoS Components for MX Series Routers on page 10

Understanding Class of Service and PBB for MX Series Routers

Provider backbone bridging (PBB) extends Layer 2 Ethernet switching to provide enhanced scalability, quality of service (QoS) features, and carrier-class reliability. The JUNOS Software implementation of PBB supports the IEEE 802.1ah standard.

Class-of-service (CoS) support for PBB enables information to be mapped and carried across a provider backbone bridge. Service information is mapped and carried across the network using three bits of priority code point (PCP) and one bit of drop eligibility indicator (DEI). The PCP and DEI bits are present in the service VLAN (S-VLAN) and the backbone service instance identifier (ISID).

To provide appropriate QoS treatment inside the MX Series router and transport QoS information across the network, it is important to provide capabilities to classify and rewrite (mark) the PCP+DEI from one tag to another.

Behavior aggregate (BA) classification is used to classify a packet into various forwarding classes (FCs) and packet loss priorities (PLPs) based on certain fields of the packet. A VLAN-tagged logical interface can be configured to classify packets based on the PCP and DEI bits using the existing IEEE 802.1p (only PCP) or IEEE 802.1ad (PCP and DEI) classifier.

To classify packets for a VLAN-tagged logical interface based only on the PCP bits, include the **ieee-802.1** statement at the [**edit class-of-service interfaces *interface-name* unit *logical-unit-number* classifiers**] hierarchy level. To classify packets based on both PCP and DEI bits, include the **ieee-802.1ad** statement at the same hierarchy level.

A rewrite rule sets the appropriate CoS bits in the outgoing packet, thus allowing the next downstream device to classify the packet into the appropriate service group. A VLAN-tagged logical interface can be configured to rewrite the PCP and DEI classifier of outgoing packets based on the forwarding class and the loss priority using IEEE 802.1p (PCP) or IEEE 802.1ad (PCP and DEI) rewrite rules.

To rewrite packets for a VLAN-tagged logical interface using the existing IEEE 802.1p (PCP) rewrite rules, include the **ieee-802.1** statement at the [**edit class-of-service interfaces**

interface-name unit *logical-unit-number* *rewrite-rules*] hierarchy level. To classify packets based on the IEEE 802.1ad (PCP and DEI) rewrite rules, include the **ieee-802.1ad** statement at the same hierarchy level.

To further support CoS for PBB, new ISID and DEI terms are available when configuring firewall filters. Include terms at the [**edit firewall family bridge filter *filter-name* term *term-name***] hierarchy level.

Related Documentation

- Understanding JUNOS CoS Components for MX Series Routers on page 10
- Understanding Bridging and VLANs on EX Series Switches
- Example: Configuring CoS for a PBB Network on MX Series Routers on page 79

Understanding JUNOS CoS Components for MX Series Routers

This topic describes the JUNOS class-of-service (CoS) components for Juniper Networks MX Series routers:

- Code-Point Aliases on page 10
- Policers on page 10
- Classifiers on page 10
- Forwarding Classes on page 11
- Drop Profiles on page 11
- Schedulers on page 11
- Rewrite Rules on page 11

Code-Point Aliases

A code-point alias assigns a name to a pattern of code-point bits. You can use this name instead of the bit pattern when you configure other CoS components such as classifiers, drop-profile maps, and rewrite rules.

Policers

Policers limit traffic of a certain class to a specified bandwidth and burst size. Packets exceeding the policer limits can be discarded. You define policers with filters that can be associated with input interfaces.

Classifiers

Packet classification associates incoming packets with a particular CoS servicing level. In JUNOS Software, classifiers associate packets with a forwarding class and loss priority and assign packets to output queues based on the associated forwarding class. JUNOS Software supports two general types of classifiers:

- Behavior aggregate or CoS value traffic classifiers—Examine the CoS value in the packet header. The value in this single field determines the CoS settings applied to the packet. BA classifiers allow you to set the forwarding class and loss priority of a packet based on the Differentiated Services code point (DSCP) value, IP precedence value, and IEEE 802.1p value.

- Multifield traffic classifiers—Examine multiple fields in the packet such as source and destination addresses and source and destination port numbers of the packet. With multifield classifiers, you set the forwarding class and loss priority of a packet based on firewall filter rules.

Forwarding Classes

Forwarding classes group the packets for transmission. Based on forwarding classes, you assign packets to output queues. Forwarding classes affect the forwarding, scheduling, and marking policies applied to packets as they transit a switch. By default, four categories of forwarding classes are defined: best effort, assured forwarding, expedited forwarding, and network control. For MX Series routers, 16 forwarding classes are supported, providing granular classification capability.

Drop Profiles

Drop profile is a mechanism that defines parameters that allow packets to be dropped from the network. Drop profiles define the meanings of the loss priorities. When you configure drop profiles, you are essentially setting the value for queue fullness. The queue fullness represents a percentage of the queue used to store packets in relation to the total amount that has been allocated for that specific queue.

Loss priorities set the priority of dropping a packet. Loss priority affects the scheduling of a packet without affecting the packet's relative ordering. You can use the loss priority setting to identify packets that have experienced congestion. Typically you mark packets exceeding some service level with a high loss priority.

Schedulers

Each switch interface has multiple queues assigned to store packets. The switch determines which queue to service based on a particular method of scheduling. This process often involves determining which type of packet should be transmitted before another. You can define the priority, bandwidth, delay buffer size, and drop profiles to be applied to a particular queue for packet transmission.

A scheduler map associates a specified forwarding class with a scheduler configuration. You can associate up to four user-defined scheduler maps with the interfaces.

Rewrite Rules

A rewrite rule sets the appropriate CoS bits in the outgoing packet, thus allowing the next downstream device to classify the packet into the appropriate service group. Rewriting, or marking, outbound packets is useful when the switch is at the border of a network and must alter the CoS values to meet the policies of the targeted peer.



NOTE: Egress firewall filters can also assign forwarding class and loss priority so that the packets are rewritten based on forwarding class and loss priority.

Related Documentation

- Example: Configuring CoS for a PBB Network on MX Series Routers on page 79
- Understanding Class of Service and PBB for MX Series Routers on page 9

CHAPTER 3

Connectivity Fault Management Overview

- Understanding Fault Isolation and Detection in a PBB using Connectivity Fault Management for MX Series Routers on page 13

Understanding Fault Isolation and Detection in a PBB using Connectivity Fault Management for MX Series Routers

Connectivity Fault Management (CFM) provides fault isolation and detection over large Layer 2 networks which may span several service provider networks. Provider backbone bridging (PBB) extends Layer 2 Ethernet switching to provide enhanced scalability, QoS features, and carrier-class reliability in service provider networks. CFM is used with PBB to support that carrier-class reliability. CFM is used to monitor, isolate and verify the faults in a network. The JUNOS Software implementation of PBB supports the IEEE 802.1ah (PBB) and IEEE 802.1ag (CFM) standards.

PBB defines an architecture and bridge protocols for connecting multiple provider bridge networks (PBN). A Provider Backbone Bridged Network (PBBN) comprises a set of Backbone Edge Bridges (BEBs) interconnected by some or all of the service VLANs (S-VLANs) supported by a Provider Bridged Network (PBN). S-VLANs are first encapsulated with an I-TAG to uniquely identify the service with PBBN and then are encapsulated within a B-VLAN to be carried over the PBBN core.

CFM uses a set of protocols (Continuity Check, Linktrace and Loopback) for operation, administration and management (OAM) to provide fault isolation and detection. OAM is enabled in a PBN or PBBN by customers, service providers, and network operators in their respective maintenance domains. The OAM operations in PBN and PBBN can coexist and are independent of each other.

In the OAM protocol, the end nodes in maintenance domains are called maintenance end points (MEPs) and initiate OAM processes.

Intermediate nodes respond to these OAM processes and are called maintenance intermediate points (MIPs). MIPs are configured for the I-Component of the BEB. Using MEPs and MIPs, CFM provides end-to-end connectivity in the S-VLAN.

To configure a MEP or a MIP, include the **mep** or **mip** statement at the **[edit protocols oam ethernet connectivity-fault-management maintenance-domain *domain-name* maintenance-association]** hierarchy level.



NOTE: UP MEPs for S-VLANs within an I-component are not supported.

To enable the continuity check protocol to provide fault detection and notification, include the **continuity-check** statement at the **[edit protocols oam ethernet connectivity-fault-management maintenance-domain *domain-name* maintenance-association]** hierarchy level.

The Linktrace protocol provides path discovery and fault verification. Linktrace is enabled by default and can be used whenever a MEP is configured.

The Loopback protocol (modeled on the standard IP ping) is used to perform fault verification and isolation after a fault is detected. Loopback, like Linktrace, is enabled by default and can be used whenever a MEP is configured.

**Related
Documentation**

- Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102
- Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17
- Understanding Provider Backbone Bridging on MX Series Routers on page 3

PART 2

Configuration

- Provider Backbone Bridging Solutions on page 17
- Provider Backbone Bridging Configuration Statements on page 143
- Connectivity Fault Management Configuration Statements on page 171
- CoS Configuration Statements on page 191
- Interface Set Configuration Statements on page 215

CHAPTER 4

Provider Backbone Bridging Solutions

- Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17
- Example: Configuring CoS for a PBB Network on MX Series Routers on page 79
- Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102

Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers

The IEEE 802.1ah provider backbone bridge (PBB) is a new standard for connecting and interoperating with provider backbone networks. PBB for MX Series routers supports Ethernet private line (E-LINE) and Ethernet transparent LAN (E-LAN) services on the same PBBN network. In an E-LINE service, premises are connected with a point-to-point Ethernet link. E-LAN services are the multipoint version of E-LINE services and are ideal for multi-site companies that require a transparent Layer 2 Virtual LAN.

The MX Series routers provides a solution to deliver these services, including:

- Class of service (CoS)—Reliably deliver the correct amount of bandwidth and quality of service to subscribers.
- Connectivity fault management (CFM)—Monitor, isolate and verify faults in the network.
- Multiple Spanning Tree Protocol (MSTP)—Ensure that services are carried through a loop-free topology for multiple optimization.

This example describes how to configure two E-LAN services and two E-LINE services for one customer on a PBBN, and demonstrates:

- How to configure an MX Series router to load-balance traffic on a per-VLAN basis to optimally utilize links in the PBBN.
- How to configure an MX Series router to carry E-LINE and E-LAN traffic (from the same customer or multiple customers) on the same PBBN.

To configure services in a PBBN, perform these tasks:

- Requirements on page 18
- Overview and Topology on page 18

- Configuring E-LINE and E-LAN Services on BEB1 (Sangiovese) on page 24
- Configuring E-LINE Service on BEB2 (Barbera) on page 32
- Configuring E-LAN Services on BEB3 (Malbec) on page 38
- Configuring E-LINE and E-LAN Services on BEB4 (Cubs) on page 43
- Configuring Routing Instances and Interfaces on ES1 (Pinot Noir) on page 52
- Configuring a Routing Instance and Interfaces on ES3 (Dolcetto) on page 56
- Configuring a Routing Instance and Interfaces on ES4 (Reds) on page 58
- Configuring a Routing Instance and Interfaces on BCB1 (Syrah) on page 63
- Configuring a Routing Instance and Interfaces on BCB2 (Cabernet) on page 66
- Verification on page 70

Requirements

This example uses the following hardware and software components:

- JUNOS Release 10.0 or later for MX Series routers
- 9 MX Series routers in a PBB configuration

Before you configure the routers for PBB and services, be sure you have:

- Installed your MX Series routers.
- Performed the initial router configuration.

Overview and Topology

Figure 2 on page 19 displays the E-LAN service topology for this example. A provider backbone bridge network (PBBN) containing Backbone Core Bridge 1 and 2 (BCB1 and BCB2) provide services for Provider Bridged Networks 1, 2, and 3 (PBN1, PBN2, and PBN3). PBN1 contains Backbone Edge Bridge 1 and 2 (BEB1 and BEB2) and Edge Switches 1 (ES1). PBN2 contains BEB3 and ES3. PBN3 contains BEB4 and ES4. All connecting lines between the PBBN, PBN1, PBN2, and PBN3 represent the E-LAN service.

The active paths shown in the topology are based on the MSTP configuration in the PBBN core network and the resulting paths for all traffic through the network.

Figure 2: Network Topology for E-LAN Service in a Provider Bridged Network

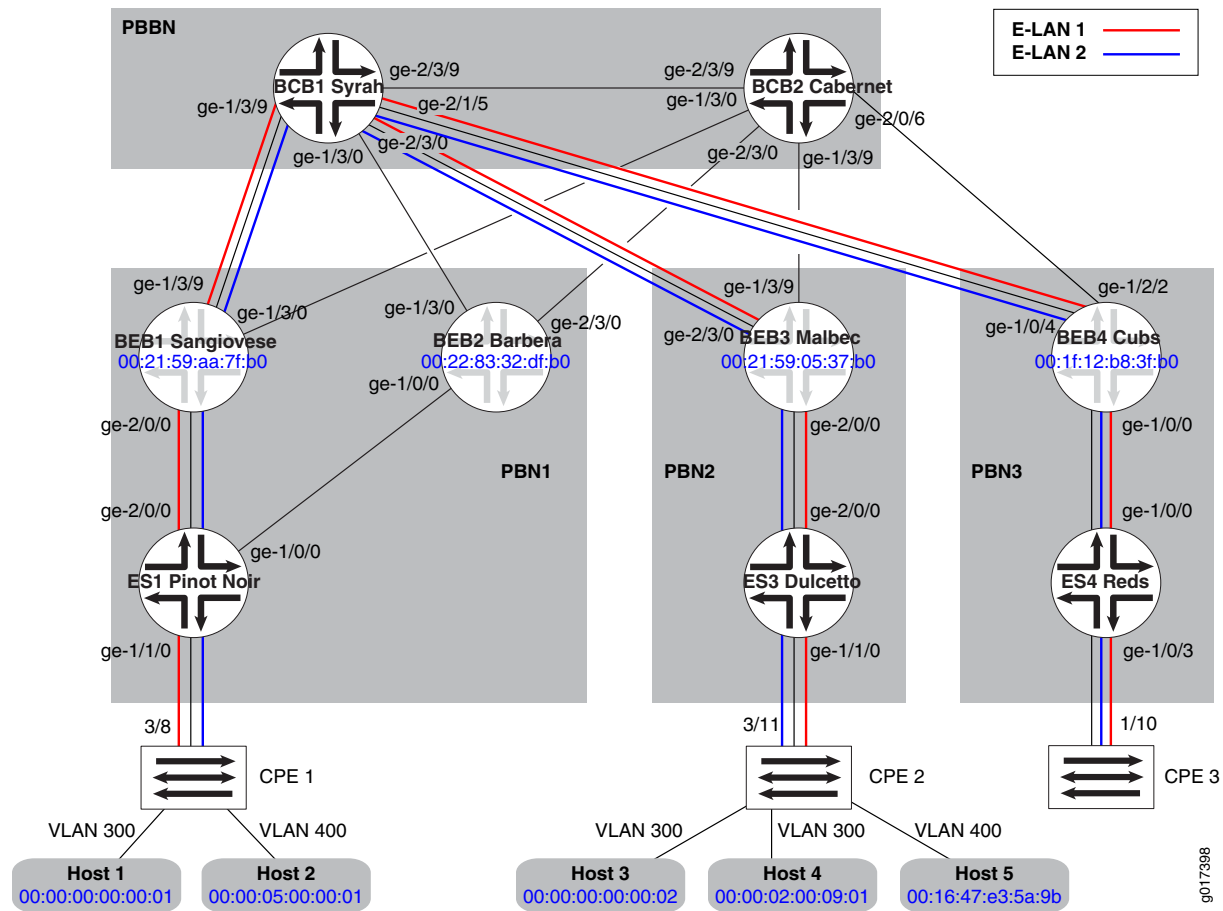


Figure 3 on page 20 displays the E-LINE service topology for this example. The two E-LINES are shown using the default path created through the MSTP configuration. The active paths shown in the topology are based on the MSTP configuration in the PBBN core network and the resulting paths resulting paths for all traffic through the network. A PBBN provides services for provider bridged networks in BEB1, BEB2, and BEB3.

Figure 3: Network Topology for E-LINE Service in a Provider Bridged Network

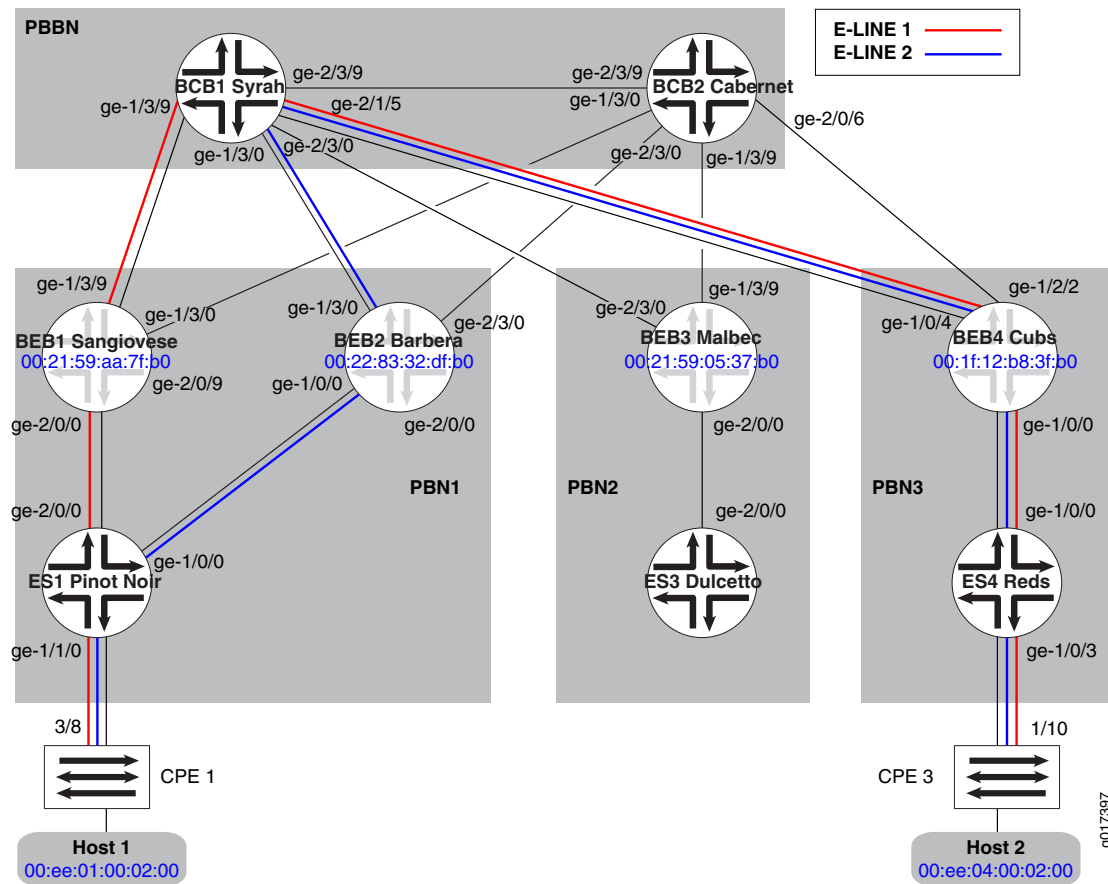


Table 1 on page 20 shows the different properties that will be configured for E-LINE and E-LAN services on the MX Series routers in the topology.

Table 1: Components of the Topology for Configuring E-LINE and E-LAN Service on MX Series Routers

Property	Settings
Backbone edge bridges	PBN1 contains: <ul style="list-style-type: none"> • BEB1 • BEB2 PBN2 contains: <ul style="list-style-type: none"> • BEB3 PBN3 contains: <ul style="list-style-type: none"> • BEB4
Backbone core bridges	The PBBN contains the following BCBs: <ul style="list-style-type: none"> • BCB1 • BCB2

Table 1: Components of the Topology for Configuring E-LINE and E-LAN Service on MX Series Routers (*continued*)

Property	Settings
Edge switches	<p>The edge switches are connected to the following BEBs:</p> <ul style="list-style-type: none"> • ES1—Connected to BEB1 and BEB2. • ES3—Connected to BEB3. • ES4—Connected to BEB4.
Backbone core bridges	<p>The PBBN contains the following BCBs:</p> <ul style="list-style-type: none"> • BCB1 • BCB2
BEB1 (Sangiovese) configuration	<p>BEB1 is physically connected to BCB1 and BCB2 in the following manner:</p> <ul style="list-style-type: none"> • Connected to BCB1 through interface ge-1/3/9 • Connected to BCB2 through interface ge-1/3/0 <p>The following routing instance is configured for the B-component (PBBN):</p> <ul style="list-style-type: none"> • The routing instance name is pbbn-1. • The pseudo-logical interface is cbp0.0. • The logical interfaces ge-1/3/0.0 and ge-1/3/9.0 are associated with pbbn-1. • MSTP is configured for the routing instance. • The routing instance has the bridging domains eline-bvlan and elan-bvlan. <p>The following routing instance is configured for the I-component (PBN) for E-LAN services:</p> <ul style="list-style-type: none"> • The routing instance name is pbn-1-for-elan. • The pseudo-logical interface is pip0.1. • The logical interfaces ge-2/0/0.3 and ge-2/0/0.4 are associated with the routing instance pbn-1-for-elan. • The bridging domain is elan-svlans. • The service groups are elan1 and elan2. • The peer PBBN routing instance is pbbn-1. <p>The following routing instance is configured for the I-component (PBN):</p> <ul style="list-style-type: none"> • The routing instance name is pbn-1-for-eline. • The pseudo-logical interface is pip0.0. • The logical interfaces ge-2/0/0.1 and ge-2/0/0.2 are associated with the routing instance pbn-1-for-eline. • The bridging domains are bd1 and eline-svlans. • The service group is eline1. • The peer PBBN routing instance is pbbn-1.

Table 1: Components of the Topology for Configuring E-LINE and E-LAN Service on MX Series Routers (*continued*)

Property	Settings
BEB2 (Barbera) configuration	<p>BEB2 is physically connected to BCB1 and BCB2 in the following manner:</p> <ul style="list-style-type: none"> Connected to BCB1 through interface ge-1/3/0 Connected to BCB2 through interface ge-2/3/0 <p>The following routing instance is configured for the B-component (PBBN):</p> <ul style="list-style-type: none"> The routing instance name is pbbn-1. The pseudo-logical interface is cbp0.0. The logical interfaces ge-1/3/0.0 and ge-1/3/9.0 are associated with pbbn-1. MSTP is configured for the routing instance. The routing instance has the bridging domains eline-bvlan and elan-bvlan. <p>The following routing instance for E-LINE service is configured for the I-component (PBN):</p> <ul style="list-style-type: none"> The routing instance name is pbn-1-for-eline. The pseudo-logical interface is pip0.0. The logical interfaces ge-1/0/0.1 and ge-1/0/0.2 are associated with the routing instance pbn-1-for-eline. The bridging domains are bd1 and eline-svlans. The service group is eline2. The peer PBBN routing instance is pbbn-1.
BEB3 (Malbec) configuration	<p>BEB3 is physically connected to BCB2 through interface ge-1/3/9.</p> <p>The following routing instance is configured for the B-component (PBBN):</p> <ul style="list-style-type: none"> The routing instance name is pbbn-1. The pseudo-logical interface is cbp0.0. The logical interfaces ge-1/3/9.0 and ge-2/3/0.0 are associated with pbbn-1. MSTP is configured for the routing instance. The routing instance has the bridging domain elan-bvlan. <p>The following routing instance is configured for the I-component (PBN) for E-LAN services:</p> <ul style="list-style-type: none"> The routing instance name is pbn-2-for-elan. The pseudo-logical interface is pip0.1. The logical interfaces ge-2/0/0.3 and ge-2/0/0.4 are associated with routing instance pbn-2for-elan. The bridging domain is elan-svlans. The service groups are elan1 and elan2. The peer PBBN routing instance is pbbn-1.

Table 1: Components of the Topology for Configuring E-LINE and E-LAN Service on MX Series Routers (*continued*)

Property	Settings
BEB 4 (Cubs) configuration	<p>BEB4 is physically connected to BCB1 and BCB2 in the following manner:</p> <ul style="list-style-type: none"> Connected to BCB1 through interfaces ge-2/0/5 and ge-2/1/5 Connected to BCB2 through interfaces ge-2/0/5 and ge-2/0/6 <p>The following routing instance is configured for the B-component (PBBN):</p> <ul style="list-style-type: none"> The routing instance name is pbbn-1. The pseudo-logical interface is cbp0.0. The logical interfaces ge-1/0/4.0 and ge-1/2/2.0 are associated with pbbn-1. MSTP is configured for the routing instance. The routing instance has the bridging domains eline-bvlan and elan-bvlan. <p>The following routing instance is configured for the I-component (PBN) for E-LAN services:</p> <ul style="list-style-type: none"> The routing instance name is pbn3-for-elan. The pseudo-logical interface is pip0.1. The logical interfaces ge-1/0/0.3 and ge-1/0/0.4 are associated with routing instance pbn-3-for-elan. The bridging domain is elan-svlans. The service groups are elan1 and elan2. The peer PBBN routing instance is pbbn-1. <p>The following routing instance is configured for the I-component (PBN):</p> <ul style="list-style-type: none"> The routing instance name is pbn-3-for-eline. The pseudo-logical interface is pip0.0. The logical interfaces ge-2/0/0.1 and ge-2/0/0.2 are associated with the routing instance pbn-1-for-eline. The bridging domain is eline-svlans. The service groups are eline1 and eline2. The peer PBBN routing instance is pbbn-1.
BCB1 (Syrah) configuration	<p>BCB1 is physically connected to the BEBs in the following manner:</p> <ul style="list-style-type: none"> Connected to BEB1 through interface ge-1/3/9 Connected to BEB2 through interface ge-1/3/0 Connected to BEB3 through interface ge-2/3/0 Connected to BEB4 through interface ge-1/0/4 <p>The following routing instance is configured for the PBBN:</p> <ul style="list-style-type: none"> The routing instance name is pbbn-1. The logical interfaces ge-1/3/0.0, ge-1/3/9.0, ge-2/1/5.0, ge-2/3/0.0, and ge-2/3/9.0 are associated with pbbn-1. MSTP is configured for the routing instance. The routing instance has the bridging domains eline-bvlan and elan-bvlan.

Table 1: Components of the Topology for Configuring E-LINE and E-LAN Service on MX Series Routers (*continued*)

Property	Settings
BCB 2 (Cabernet) configuration	<p>BCB2 is physically connected to the BEBs in the following manner:</p> <ul style="list-style-type: none"> Connected to BEB1 through interface ge-1/3/0 Connected to BEB2 through interface ge-2/3/0 Connected to BEB3 through interface ge-1/3/9 <p>The following routing instance is configured for the PBBN:</p> <ul style="list-style-type: none"> The routing instance name is pbbn-1. The logical interfaces ge-1/3/0.0, ge-1/3/9.0, ge-2/0/6.0, ge-2/3/0.0, and ge-2/3/9.0 are associated with pbbn-1. MSTP is configured for the routing instance. The routing instance has the bridging domains eline-bvlan and elan-bvlan.
ES1 (Pinot Noir) configuration	<p>ES1, ES3, and ES4 are physically connected to the BEBs in the following manner:</p> <ul style="list-style-type: none"> ES1 is connected to BEB1 through interface ge-2/0/0 and BEB2 through interface ge-1/0/0 ES3 is connected to BEB3 through interface ge-2/0/0 ES4 is connected to BEB4 through interface ge-1/0/0
ES3 (Dolcetto) configuration	
ES4 (Reds) configuration	

To configure services, configure separate routing instances for the PBBN (B-component) and PBN (I-component) on the BEB1, BEB2, BEB3, and BEB4. BCB1 and BCB2 require only a routing instance for the B-component. ES1, ES2, ES3, and ES4 require a routing instance, but not for the B-component.

Multiple Spanning Tree Protocol (MSTP) is configured to provide fast failover and load-balancing benefits to VLANs in the PBBN.

Configuring E-LINE and E-LAN Services on BEB1 (Sangiovese)

Table 2 on page 24 contains the services configured for BEB1 as well as the correlating service virtual local area networks (S-VLANs), service identifiers (I-SIDs), and backbone virtual local area networks (B-VLANs).

Table 2: BEB1 Mapping

Service	S-VLAN	I-SID	B-VLAN
elan1	1300	10300	3350
elan2	1400	10400	3350
eline1	2100	10100	3150

To configure E-LINE and E-LAN services on the MX Series router BEB1 in a PBBN, perform these tasks:

- Configuring a Routing Instance for E-LINE Services on BEB1 on page 25
- Configuring a PBN Routing Instance for E-LAN Services on BEB1 on page 26
- Configuring a PBBN Routing Instance on BEB1 on page 28
- Configuring the Interfaces on BEB1 on page 29

Configuring a Routing Instance for E-LINE Services on BEB1

CLI Quick Configuration

To quickly configure the PBN (I-component) routing instance for E-LINE services, copy the following commands and paste them into the router terminal window:

```
[edit]
set routing-instances pbn-1-for-eline instance-type virtual-switch
set routing-instances pbn-1-for-eline interface ge-2/0/0.1
set routing-instances pbn-1-for-eline interface pip0.0
set routing-instances pbn-1-for-eline bridge-domains bd1 vlan-id 10
set routing-instances pbn-1-for-eline bridge-domains eline-svlans vlan-id-list 2100
set routing-instances pbn-1-for-eline pbb-options peer-instance pbbn-1
set routing-instances pbn-1-for-eline service-groups eline1 service-type eline
set routing-instances pbn-1-for-eline service-groups eline1 pbb-service-options isid 10100 interface
ge-2/0/0.1
```

Step-by-Step Procedure

To configure the PBN (I-component) routing instance for E-LINE service:

1. Configure the PBN routing instance **pbn-1-for-eline** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```
[edit routing-instances]
user@beb1# set pbn-1-for-eline instance-type virtual-switch
```

2. Configure the logical interfaces for the PBN routing instance:

```
[edit routing-instances]
user@beb1# set pbn-1-for-eline interface ge-2/0/0.1
```

3. Configure a provider instance port (PIP) pseudo-logical interface to provide a connection between customer routing instances (PBN I-component) and the provider routing instance (PBBN B-component):

```
[edit routing-instances]
user@beb1# set pbn-1-for-eline interface pip0.0
```

4. Configure the provider bridge domain **bd1** and **eline-svlans** for E-LINE services:

```
[edit routing-instances]
user@beb1# set pbn-1-for-eline bridge-domains bd1 vlan-id 10
user@beb1# set pbn-1-for-eline bridge-domains eline-svlans vlan-id-list 2100
```

5. Configure the peer PBBN routing instance (here, the peer PBBN is **pbbn-1**):

```
[edit routing-instances]
user@beb1# set pbn-1-for-eline pbb-options peer-instance pbbn-1
```

6. Configure service groups and the type of service they will provide for the routing instance (here, service groups **eline1** and **eline2** are configured for **eline** service):

```
[edit routing-instances ]
user@beb1# set pbn-1-for-eline service-groups eline1 service-type eline
```

```
user@beb1# set pbn-1-for-eline service-groups eline1 pbb-service-options isid 10100
interface ge-2/0/0.1
```

Results Check the results of the configuration:

```
user@beb1> show configuration
routing-instances {
  pbn-1-for-eline {
    instance-type virtual-switch;
    interface ge-2/0/0.1;
    interface pip0.0;
    bridge-domains {
      bd1 {
        vlan-id 10;
      }
      eline-svlans {
        vlan-id-list [ 2100 ];
      }
    }
    pbb-options {
      peer-instance pbbn-1;
    }
    service-groups {
      eline1 {
        service-type eline;
        pbb-service-options {
          isid 10100 interface ge-2/0/0.1;
        }
      }
    }
  }
}
```

Configuring a PBN Routing Instance for E-LAN Services on BEB1

CLI Quick Configuration To quickly configure a PBN (I-component) routing instance for E-LAN services, copy the following commands and paste them into the router terminal window:

```
[edit]
set routing-instances pbn-1-for-elan instance-type virtual-switch
set routing-instances pbn-1-for-elan interface ge-2/0/0.3
set routing-instances pbn-1-for-elan interface ge-2/0/0.4
set routing-instances pbn-1-for-elan interface pip0.1
set routing-instances pbn-1-for-elan bridge-domains elan-svlans vlan-id-list 1300
set routing-instances pbn-1-for-elan bridge-domains elan-svlans vlan-id-list 1400
set routing-instances pbn-1-for-elan pbb-options peer-instance pbbn-1
set routing-instances pbn-1-for-elan service-groups elan1 service-type elan
set routing-instances pbn-1-for-elan service-groups elan1 pbb-service-options isid 10300
vlan-id-list 1300
set routing-instances pbn-1-for-elan service-groups elan2 service-type elan
set routing-instances pbn-1-for-elan service-groups elan2 pbb-service-options isid 10400
vlan-id-list 1400
```

**Step-by-Step
Procedure**

To configure the PBN (I-component) routing instance for E-LAN service:

1. Configure the PBN routing instance **pbn-1-for-elan** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```
[edit routing-instances]
user@beb1# set pbn-1-for-elan instance-type virtual-switch
```

2. Configure the logical interfaces for the PBN routing instance:

```
[edit routing-instances]
user@beb1# set pbn-1-for-elan interface ge-2/0/0.3
user@beb1# set pbn-1-for-elan interface ge-2/0/0.4
```

3. Configure a provider instance port (PIP) pseudo-logical interface to provide a connection between customer routing instances (PBN I-component) and the provider routing instance (PBBN B-component):

```
[edit routing-instances]
user@beb1# set pbn-1-for-elan interface pip0.1
```

4. Configure the provider bridge domain **elan-svlans** for E-LAN services:

```
[edit routing-instances]
user@beb1# set pbn-1-for-elan bridge-domains elan-svlans vlan-id-list 1300
user@beb1# set pbn-1-for-elan bridge-domains elan-svlans vlan-id-list 1400
```

5. Configure the peer PBBN routing instance (here, the peer PBBN is **pbbn-1**):

```
[edit routing-instances]
user@beb1# set pbn-1-for-elan pbb-options peer-instance pbbn-1
```

6. Configure service groups and the type of service they will provide for the routing instance (here, service groups **elan1** and **elan2** are configured for **elan** service):

```
[edit routing-instances ]
user@beb1# set pbn-1-for-elan service-groups elan1 service-type elan
user@beb1# set pbn-1-for-elan service-groups elan1 pbb-service-options isid 10300
vlan-id-list 1300
user@beb1# set pbn-1-for-elan service-groups elan2 service-type elan
user@beb1# set pbn-1-for-elan service-groups elan2 pbb-service-options isid 10400
vlan-id-list 1400
```

Results Check the results of the configuration:

```
user@beb1> show configuration
routing-instances {
  pbn-1-for-elan {
    instance-type virtual-switch;
    interface ge-2/0/0.3;
    interface ge-2/0/0.4;
    interface pip0.1;
    bridge-domains {
      elan-svlans {
        vlan-id-list [ 1300 1400 ];
      }
    }
  }
  pbb-options {
    peer-instance pbbn-1;
  }
}
```

```

    }
    service-groups {
        elan1 {
            service-type elan;
            pbb-service-options {
                isid 10300 vlan-id-list 1300;
            }
        }
        elan2 {
            service-type elan;
            pbb-service-options {
                isid 10400 vlan-id-list 1400;
            }
        }
    }
}
}

```

Configuring a PBBN Routing Instance on BEB1

CLI Quick Configuration

To quickly configure a routing instance for a PBBN, copy the following commands and paste them into the router terminal window:

```

[edit]
set routing-instances pbbn-1 instance-type virtual-switch
set routing-instances pbbn-1 interface ge-1/3/0.0
set routing-instances pbbn-1 interface ge-1/3/9.0
set routing-instances pbbn-1 interface cbp0.0
set routing-instances pbbn-1 protocols mstp configuration-name pbbn-1
set routing-instances pbbn-1 protocols mstp interface ge-1/3/0
set routing-instances pbbn-1 protocols mstp interface ge-1/3/9
set routing-instances pbbn-1 bridge-domains elan-bvlan vlan-id 3350
set routing-instances pbbn-1 pbb-options vlan-id 3350 isid-list 10300
set routing-instances pbbn-1 pbb-options vlan-id 3350 isid-list 10400
set routing-instances pbbn-1 pbb-options vlan-id 3150 isid-list 10100

```

Step-by-Step Procedure

To configure the PBBN (B-component) routing instance:

1. Configure the PBBN routing instance **pbbn-1** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```

[edit routing-instances]
user@beb1# set pbbn-1 instance-type virtual-switch

```

2. Configure the logical interfaces for the PBBN routing instance:

```

[edit routing-instances]
user@beb1# set pbbn-1 interface ge-1/3/0.0
user@beb1# set pbbn-1 interface ge-1/3/9.0

```

3. Configure a customer backbone port (CBP) pseudo-logical interface to provide a connection between customer routing instances (PBN I-component) and the provider routing instance (PBBN B-component):

```

[edit routing-instances]
user@beb1# set pbbn-1 interface cbp0.0

```

4. Configure Multiple Spanning Tree Protocol (MSTP) for the PBBN routing instance to ensure a loop-free topology:

```
[edit routing-instances]
user@beb1# set pbbn-1 protocols mstp configuration-name pbbn-1
user@beb1# set pbbn-1 protocols mstp interface ge-1/3/0
user@beb1# set pbbn-1 protocols mstp interface ge-1/3/9
```

5. Configure the provider bridge domains **elan-bvlan** and **eline-bvlan** for E-LINE and E-LAN services:

```
[edit routing-instances]
user@beb1# set pbbn-1 bridge-domains elan-bvlan vlan-id 3350
```

6. Configure PBB options to provide the PBBN with B-VLAN to I-SID mapping information in the bridge-domain:

```
[edit routing-instances]
user@beb1# set pbbn-1 pbb-options vlan-id 3350 isid-list 10300
user@beb1# set pbbn-1 pbb-options vlan-id 3350 isid-list 10400
user@beb1# set pbbn-1 pbb-options vlan-id 3150 isid-list 10100
```

Results Check the results of the configuration:

```
user@beb1> show configuration
routing-instances {
  pbbn-1 {
    instance-type virtual-switch;
    interface ge-1/3/0.0;
    interface ge-1/3/9.0;
    interface cbp0.0;
    protocols {
      mstp {
        configuration-name pbbn-1;
        interface ge-1/3/0;
        interface ge-1/3/9;
      }
    }
    bridge-domains {
      elan-bvlan {
        vlan-id 3350;
      }
      eline-bvlan {
        vlan-id 3150;
        bridge-options {
        }
      }
    }
    pbb-options {
      vlan-id 3350 isid-list [ 10300 10400 ];
      vlan-id 3150 isid-list [ 10100 ];
    }
  }
}
```

Configuring the Interfaces on BEB1

CLI Quick Configuration To quickly configure the interfaces on BEB1, copy the following commands and paste them into the router terminal window:

```
[edit]
set interfaces ge-1/3/0 description "Connected to BCB2 cabernet ge-1/3/0"
set interfaces ge-1/3/0 unit 0 family bridge interface-mode trunk
set interfaces ge-1/3/0 unit 0 family bridge vlan-id-list 3000-4000
set interfaces ge-1/3/9 description "Connected to BCB1 syrah ge-1/3/9"
set interfaces ge-1/3/9 unit 0 family bridge interface-mode trunk
set interfaces ge-1/3/9 unit 0 family bridge vlan-id-list 3000-4000
set interfaces ge-2/0/0 description "Connected to pinot noir ge-2/0/0"
set interfaces ge-2/0/0 flexible-vlan-tagging
set interfaces ge-2/0/0 unit 1 family bridge interface-mode trunk
set interfaces ge-2/0/0 unit 1 family bridge vlan-id-list 2100
set interfaces ge-2/0/0 unit 3 family bridge interface-mode trunk
set interfaces ge-2/0/0 unit 3 family bridge vlan-id-list 1300
set interfaces ge-2/0/0 unit 4 family bridge interface-mode trunk
set interfaces ge-2/0/0 unit 4 family bridge vlan-id-list 1400
set interfaces cbp0 unit 0 family bridge interface-mode trunk
set interfaces cbp0 unit 0 family bridge bridge-domain-type bvlan
set interfaces cbp0 unit 0 family bridge isid-list all
set interfaces pip0 unit 0 family bridge interface-mode trunk
set interfaces pip0 unit 0 family bridge bridge-domain-type svlan
set interfaces pip0 unit 0 family bridge isid-list all-service-groups
set interfaces pip0 unit 1 family bridge interface-mode trunk
set interfaces pip0 unit 1 family bridge bridge-domain-type svlan
set interfaces pip0 unit 1 family bridge isid-list all-service-groups
```

Step-by-Step Procedure

To configure interfaces on BEB1:

1. Configure interface **ge-1/3/0**:

```
[edit interfaces]
user@beb1# set ge-1/3/0 description "Connected to BCB2 cabernet ge-1/3/0"
user@beb1# set ge-1/3/0 unit 0 family bridge interface-mode trunk
user@beb1# set ge-1/3/0 unit 0 family bridge vlan-id-list 3000-4000
```

2. Configure interface **ge-1/3/9**:

```
set interfaces

[edit interfaces]
user@beb1# set ge-1/3/9 description "Connected to BCB1 syrah ge-1/3/9"
user@beb1# set ge-1/3/9 unit 0 family bridge interface-mode trunk
user@beb1# set ge-1/3/9 unit 0 family bridge vlan-id-list 3000-4000
```

3. Configure interface **ge-2/0/0**:

```
[edit interfaces]
user@beb1# set ge-2/0/0 description "Connected to pinot noir ge-2/0/0"
user@beb1# set ge-2/0/0 flexible-vlan-tagging
user@beb1# set ge-2/0/0 unit 1 family bridge interface-mode trunk
user@beb1# set ge-2/0/0 unit 1 family bridge vlan-id-list 2100
user@beb1# set ge-2/0/0 unit 3 family bridge interface-mode trunk
user@beb1# set ge-2/0/0 unit 3 family bridge vlan-id-list 1300
user@beb1# set ge-2/0/0 unit 4 family bridge interface-mode trunk
user@beb1# set ge-2/0/0 unit 4 family bridge vlan-id-list 1400
```

4. Configure interface **cpb0**:

```
[edit interfaces]
user@beb1# set cbp0 unit 0 family bridge interface-mode trunk
user@beb1# set cbp0 unit 0 family bridge bridge-domain-type bvlan
```

```
user@beb1# set cbp0 unit 0 family bridge isid-list all
```

5. Configure interface **pip0**:

```
[edit interfaces]
user@beb1# set pip0 unit 0 family bridge interface-mode trunk
user@beb1# set pip0 unit 0 family bridge bridge-domain-type svlan
user@beb1# set pip0 unit 0 family bridge isid-list all-service-groups
user@beb1# set pip0 unit 1 family bridge interface-mode trunk
user@beb1# set pip0 unit 1 family bridge bridge-domain-type svlan
user@beb1# set pip0 unit 1 family bridge isid-list all-service-groups
```

Results Check the results of the configuration:

```
user@beb1> show configuration
interfaces {
  ge-1/0/5 {
    unit 0 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 3150;
      }
    }
  }
  ge-1/3/0 {
    description "Connected to BCB2 cabernet ge-1/3/0";
    unit 0 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 3000-4000;
      }
    }
  }
  ge-1/3/9 {
    description "Connected to BCB1 syrah ge-1/3/9";
    unit 0 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 3000-4000;
      }
    }
  }
  ge-2/0/0 {
    description "Connected to ES1 pinot noir ge-2/0/0";
    flexible-vlan-tagging;
    unit 1 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 2100;
      }
    }
    unit 3 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 1300;
      }
    }
  }
}
```

```

    }
    unit 4 {
        family bridge {
            interface-mode trunk;
            vlan-id-list 1400;
        }
    }
}
cbp0 {
    unit 0 {
        family bridge {
            interface-mode trunk;
            bridge-domain-type bvlan;
            isid-list all;
        }
    }
}
pip0 {
    unit 0 {
        family bridge {
            interface-mode trunk;
            bridge-domain-type svlan;
            isid-list all-service-groups;
        }
    }
    unit 1 {
        family bridge {
            interface-mode trunk;
            bridge-domain-type svlan;
            isid-list all-service-groups;
        }
    }
}
}

```

Configuring E-LINE Service on BEB2 (Barbera)

Table 3 on page 32 contains the service configured for BEB2 as well as the correlating S-VLAN, I-SID, and B-VLAN.

Table 3: BEB2 Mapping

Service	S-VLAN	I-SID	B-VLAN
eline2	1200	10200	3150

To configure E-LINE service on the MX Series router BEB2 in a PBBN, perform these tasks:

- Configuring a PBBN Routing Instance for E-LINE Services on BEB2 on page 33
- Configuring a PBBN Routing Instance on BEB2 on page 34
- Configuring the Interfaces on BEB2 on page 35

Configuring a PBN Routing Instance for E-LINE Services on BEB2

CLI Quick Configuration To quickly configure the PBN (I-component) routing instance for E-LINE services, copy the following commands and paste them into the router terminal window:

```
[edit]
set routing-instances pbn-1-for-eline instance-type virtual-switch
set routing-instances pbn-1-for-eline interface ge-1/0/0.2
set routing-instances pbn-1-for-eline interface pip0.0
set routing-instances pbn-1-for-eline bridge-domains eline-svlans
set routing-instances pbn-1-for-eline bridge-domains eline-svlans vlan-id-list 1200
set routing-instances pbn-1-for-eline pbb-options peer-instance pbbn-1
set routing-instances pbn-1-for-eline service-groups eline2 service-type eline
set routing-instances pbn-1-for-eline service-groups eline2 pbb-service-options isid 10200 interface
ge-1/0/0.2
```

Step-by-Step Procedure To configure the PBN (I-component) routing instance for E-LINE service:

1. Configure the PBN routing instance **pbn-1-for-eline** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:


```
[edit routing-instances]
user@beb2# set pbn-1-for-eline instance-type virtual-switch
```
2. Configure the logical interfaces for the PBN routing instance:


```
[edit routing-instances]
user@beb2# set pbn-1-for-eline interface ge-1/0/0.1
```
3. Configure a provider instance port (PIP) pseudo-logical interface to provide a connection between customer routing instances (PBN I-component) and the provider routing instance (PBBN B-component):


```
[edit routing-instances]
user@beb2# set pbn-1-for-eline interface pip0.0
```
4. Configure the provider bridge domain **eline-svlans** for E-LINE services:


```
[edit routing-instances]
user@beb2# set pbn-1-for-eline bridge-domains eline-svlans
user@beb2# set pbn-1-for-eline bridge-domains eline-svlans vlan-id-list 1200
```
5. Configure the peer PBBN routing instance (here, the peer PBBN is **pbbn-1**):


```
[edit routing-instances]
user@beb1# set pbn-1-for-eline pbb-options peer-instance pbbn-1
```
6. Configure service groups and the type of service they will provide for the routing instance (here, service groups **eline1** and **eline2** are configured for **eline** service):


```
[edit routing-instances ]
user@beb2# set pbn-1-for-eline service-groups eline2 service-type eline
user@beb2# set pbn-1-for-eline service-groups eline2 pbb-service-options isid 10200
interface ge-1/0/0.2
```

Results Check the results of the configuration:

```
user@beb2> show configuration
routing-instances {
  pbn-1-for-eline {
```

```

instance-type virtual-switch;
interface ge-1/0/0.2;
interface pip0.0;
bridge-domains {
  eline-svlans {
    vlan-id-list [ 1200 ];
  }
}
pbb-options {
  peer-instance pbbn-1;
}
service-groups {
  eline2 {
    service-type eline;
    pbb-service-options {
      isid 10200 interface ge-1/0/0.2;
    }
  }
}
}
}

```

Configuring a PBBN Routing Instance on BEB2

CLI Quick Configuration

To quickly configure a routing instance for a PBBN, copy the following commands and paste them into the router terminal window:

```

[edit]
set routing-instances pbbn-1 instance-type virtual-switch
set routing-instances pbbn-1 interface ge-1/3/0.0
set routing-instances pbbn-1 interface ge-2/3/0.0
set routing-instances pbbn-1 interface cbp0.0
set routing-instances pbbn-1 protocols mstp configuration-name pbbn-1
set routing-instances pbbn-1 protocols mstp interface ge-1/3/0
set routing-instances pbbn-1 protocols mstp interface ge-2/3/0
set routing-instances pbbn-1 bridge-domains eline-bvlan vlan-id 3150
set routing-instances pbbn-1 pbb-options vlan-id 3150 isid-list 10200

```

Step-by-Step Procedure

To configure the PBBN (B-component) routing instance:

1. Configure the PBBN routing instance **pbbn-1** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```

[edit routing-instances]
user@beb2# set pbbn-1 instance-type virtual-switch

```

2. Configure the logical interfaces for the PBBN routing instance:

```

[edit routing-instances]
user@beb2# set pbbn-1 interface ge-1/3/0.0
user@beb2# set pbbn-1 interface ge-2/3/0.0

```

3. Configure a customer backbone port (CBP) pseudo-logical interface to provide a connection between customer routing instances (PBN I-component) and the provider routing instance (PBBN B-component):

```

[edit routing-instances]
user@beb2# set pbbn-1 interface cbp0.0

```

4. Configure Multiple Spanning Tree Protocol (MSTP) for the PBBN routing instance to ensure a loop-free topology:

```
[edit routing-instances]
user@beb2# set pbbn-1 protocols mstp configuration-name pbbn-1
user@beb2# set pbbn-1 protocols mstp interface ge-1/3/0
user@beb2# set pbbn-1 protocols mstp interface ge-2/3/0
```

5. Configure the provider bridge domain **eline-bvlan** for E-LINE services:

```
[edit routing-instances]
user@beb2# set pbbn-1 bridge-domains eline-bvlan vlan-id 3150
```

6. Configure PBB options to provide the PBBN with B-VLAN to I-SID mapping information in the bridge-domain:

```
[edit routing-instances]
user@beb2# set pbbn-1 pbb-options vlan-id 3150 isid-list 10200
```

Results Check the results of the configuration:

```
user@beb2> show configuration
routing-instances {
  pbbn-1 {
    instance-type virtual-switch;
    interface ge-1/3/0.0;
    interface ge-2/3/0.0;
    interface cbp0.0;
    protocols {
      mstp {
        configuration-name pbbn-1;
        interface ge-1/3/0;
        interface ge-2/3/0;
      }
    }
  }
  bridge-domains {
    eline-bvlan {
      vlan-id 3150;
      bridge-options {
      }
    }
  }
  pbb-options {
    vlan-id 3150 isid-list [ 10200 ];
  }
}
}
```

Configuring the Interfaces on BEB2

CLI Quick Configuration

To quickly configure the interfaces on BEB2, copy the following commands and paste them into the router terminal window:

```
[edit]
set interfaces ge-1/0/0 description "Connected to ES1 pinot noir ge-1/0/0"
set interfaces ge-1/0/0 flexible-vlan-tagging
set interfaces ge-1/0/0 unit 2 family bridge interface-mode trunk
set interfaces ge-1/0/0 unit 2 family bridge vlan-id-list 1200
```

```

set interfaces ge-1/3/0 description "Connected to BCB1 syrah ge-1/3/0"
set interfaces ge-1/3/0 unit 0 family bridge interface-mode trunk
set interfaces ge-1/3/0 unit 3 family bridge vlan-id-list 3000-4000
set interfaces ge-2/3/0 description "Connected to BCB2 cabernet ge-2/3/0"
set interfaces ge-2/3/0 unit 0 family bridge interface-mode trunk
set interfaces ge-2/3/0 unit 0 family bridge vlan-id-list 3000-4000
set interfaces cbp0 unit 0 family bridge interface-mode trunk
set interfaces cbp0 unit 0 family bridge bridge-domain-type bvlan
set interfaces cbp0 unit 0 family bridge isid-list all
set interfaces pip0 unit 0 family bridge interface-mode trunk
set interfaces pip0 unit 0 family bridge bridge-domain-type svlan
set interfaces pip0 unit 0 family bridge isid-list all-service-groups
set interfaces pip0 unit 1 family bridge interface-mode trunk
set interfaces pip0 unit 1 family bridge bridge-domain-type svlan
set interfaces pip0 unit 1 family bridge isid-list all-service-groups

```

Step-by-Step Procedure

To configure interfaces on BEB2:

1. Configure interface **ge-1/0/0**:

```

[edit interfaces]
user@beb2# set ge-1/0/0 description "Connected to ES1 pinotnoir ge-1/0/0"
user@beb2# set ge-1/0/0 flexible-vlan-tagging
user@beb2# set ge-1/0/0 unit 2 family bridge interface-mode trunk
user@beb2# set ge-1/0/0 unit 2 family bridge vlan-id-list 1200

```

2. Configure interface **ge-1/3/0**:

```

[edit interfaces]
user@beb2# set ge-1/3/0 description "Connected to BCB1 syrah ge-1/3/0"
user@beb2# set ge-1/3/0 unit 0 family bridge interface-mode trunk
user@beb2# set ge-1/3/0 unit 3 family bridge vlan-id-list 3000-4000

```

3. Configure interface **ge-2/3/0**:

```

[edit interfaces]
user@beb2# set ge-2/3/0 description "Connected to BCB2 cabernet ge-2/3/0"
user@beb2# set ge-2/3/0 unit 0 family bridge interface-mode trunk
user@beb2# set ge-2/3/0 unit 0 family bridge vlan-id-list 3000-4000

```

4. Configure interface **cbp0**:

```

[edit interfaces]
user@beb2# set cbp0 unit 0 family bridge interface-mode trunk
user@beb2# set cbp0 unit 0 family bridge bridge-domain-type bvlan
user@beb2# set cbp0 unit 0 family bridge isid-list all

```

5. Configure interface **pip0**:

```

[edit interfaces]
user@beb2# set pip0 unit 0 family bridge interface-mode trunk
user@beb2# set pip0 unit 0 family bridge bridge-domain-type svlan
user@beb2# set pip0 unit 0 family bridge isid-list all-service-groups
user@beb2# set pip0 unit 1 family bridge interface-mode trunk
user@beb2# set pip0 unit 1 family bridge bridge-domain-type svlan
user@beb2# set pip0 unit 1 family bridge isid-list all-service-groups

```

Results Check the results of the configuration:

```

user@beb2> show configuration
interfaces {

```

```
ge-1/0/0 {
  description "Connected to ES1 pinotnoir ge-1/0/0";
  flexible-vlan-tagging;
  unit 2 {
    family bridge {
      interface-mode trunk;
      vlan-id-list 1200;
    }
  }
}
ge-1/3/0 {
  description "Connected to CS1 syrah ge-1/3/0";
  unit 0 {
    family bridge {
      interface-mode trunk;
      vlan-id-list 3000-4000;
    }
  }
}
ge-2/3/0 {
  description "Connected to CS2 cabernet ge-2/3/0";
  unit 0 {
    family bridge {
      interface-mode trunk;
      vlan-id-list 3000-4000;
    }
  }
}
cbp0 {
  unit 0 {
    family bridge {
      interface-mode trunk;
      bridge-domain-type bvlan;
      isid-list all;
    }
  }
}
pip0 {
  unit 0 {
    family bridge {
      interface-mode trunk;
      bridge-domain-type svlan;
      isid-list all-service-groups;
    }
  }
  unit 1 {
    family bridge {
      interface-mode trunk;
      bridge-domain-type svlan;
      isid-list all-service-groups;
    }
  }
}
}
```

Configuring E-LAN Services on BEB3 (Malbec)

Table 4 on page 38 contains the services configured for BEB3 as well as the correlating S-VLANs, I-SIDs, and B-VLANs.

Table 4: BEB2 Mapping

Service	S-VLAN	I-SID	B-VLAN
elan1	1300	10300	3350
elan2	1400	10400	3350

To configure E-LAN services on the MX Series router BEB3 in a PBBN, perform these tasks:

- Configuring a PBN Routing Instance for E-LAN Services on BEB3 on page 38
- Configuring a PBBN Routing Instance on BEB3 (Malbec) on page 40
- Configuring the Interfaces on BEB3 on page 41

Configuring a PBN Routing Instance for E-LAN Services on BEB3

CLI Quick Configuration

To quickly configure a PBN (I-component) routing instance for E-LAN services, copy the following commands and paste them into the router terminal window:

```
[edit]
set routing-instances pbn-2-for-elan instance-type virtual-switch
set routing-instances pbn-2-for-elan interface ge-2/0/0.3
set routing-instances pbn-2-for-elan interface ge-2/0/0.4
set routing-instances pbn-2-for-elan interface pip0.1
set routing-instances pbn-2-for-elan bridge-domains elan-svlans vlan-id-list 1300
set routing-instances pbn-2-for-elan bridge-domains elan-svlans vlan-id-list 1400
set routing-instances pbn-2-for-elan pbb-options peer-instance pbbn-1
set routing-instances pbn-2-for-elan service-groups elan1 service-type elan
set routing-instances pbn-2-for-elan service-groups elan1 pbb-service-options isid 10300
vlan-id-list 1300
set routing-instances pbn-2-for-elan service-groups elan2 service-type elan
set routing-instances pbn-2-for-elan service-groups elan2 pbb-service-options isid 10400
vlan-id-list 1400
```

Step-by-Step Procedure

To configure the PBN (I-component) routing instance for E-LAN service:

1. Configure the PBN routing instance **pbn-2-for-elan** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```
[edit routing-instances]
user@beb3# set pbn-2-for-elan instance-type virtual-switch
```

2. Configure the logical interfaces for the PBN routing instance:

```
[edit routing-instances]
user@beb3# set pbn-2-for-elan interface ge-2/0/0.3
user@beb3# set pbn-2-for-elan interface ge-2/0/0.4
```

3. Configure a provider instance port (PIP) pseudo-logical interface to provide a connection between customer routing instances (PBN I-component) and the provider routing instance (PBBN B-component):

```
[edit routing-instances]
user@beb3# set pbn-2-for-elan interface pip0.1
```

4. Configure the provider bridge domain **elan-svlans** for E-LAN services:

```
[edit routing-instances]
user@beb3# set pbn-2-for-elan bridge-domains elan-svlans vlan-id-list 1300
user@beb3# set pbn-2-for-elan bridge-domains elan-svlans vlan-id-list 1400
```

5. Configure the peer PBBN routing instance (here, the peer PBBN is **pbbn-1**):

```
[edit routing-instances]
user@beb3# set pbn-2-for-elan pbb-options peer-instance pbbn-1
```

6. Configure service groups and the type of service they will provide for the routing instance (here, service groups **elan1** and **elan2** are configured for **elan** service):

```
[edit routing-instances ]
user@beb3# set pbn-2-for-elan service-groups elan1 service-type elan
user@beb3# set pbn-2-for-elan service-groups elan1 pbb-service-options isid 10300
vlan-id-list 1300
user@beb3# set pbn-2-for-elan service-groups elan2 service-type elan
user@beb3# set pbn-2-for-elan service-groups elan2 pbb-service-options isid 10400
vlan-id-list 1400
```

Results Check the results of the configuration:

```
user@beb3> show configuration
pbn-2-for-elan {
  instance-type virtual-switch;
  interface ge-2/0/0.3;
  interface ge-2/0/0.4;
  interface pip0.1;
  bridge-domains {
    elan1-svlan {
      vlan-id 1300;
    }
    elan2-svlan {
      vlan-id 1400;
    }
  }
  pbb-options {
    peer-instance pbbn-1;
  }
  service-groups {
    inactive: elan1 {
      service-type elan;
      pbb-service-options {
        isid 10300 vlan-id-list 1300;
      }
    }
    elan2 {
      service-type elan;
      pbb-service-options {
        isid 10400 vlan-id-list 1400;
      }
    }
  }
}
```

```
}
}
```

Configuring a PBBN Routing Instance on BEB3 (Malbec)

CLI Quick Configuration To quickly configure a routing instance for a PBBN, copy the following commands and paste them into the router terminal window:

```
[edit]
set routing-instances pbbn-1 instance-type virtual-switch
set routing-instances pbbn-1 interface ge-1/3/9.0
set routing-instances pbbn-1 interface ge-2/3/0.0
set routing-instances pbbn-1 interface cbp0.0
set routing-instances pbbn-1 protocols mstp configuration-name pbbn-1
set routing-instances pbbn-1 protocols mstp interface ge-1/3/9
set routing-instances pbbn-1 protocols mstp interface ge-2/3/0
set routing-instances pbbn-1 pbb-options vlan-id 3350 isid-list 10300
set routing-instances pbbn-1 pbb-options vlan-id 3350 isid-list 10400
```

Step-by-Step Procedure To configure the PBBN (B-component) routing instance:

1. Configure the PBBN routing instance **pbbn-1** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```
[edit routing-instances]
user@beb3# set pbbn-1 instance-type virtual-switch
```

2. Configure the logical interfaces for the PBBN routing instance:

```
[edit routing-instances]
user@beb3# set pbbn-1 interface ge-1/3/9.0
user@beb3# set pbbn-1 interface ge-2/3/0.0
```

3. Configure a customer backbone port (CBP) pseudo-logical interface to provide a connection between customer routing instances (PBBN I-component) and the provider routing instance (PBBN B-component):

```
[edit routing-instances]
user@beb3# set pbbn-1 interface cbp0.0
```

4. Configure Multiple Spanning Tree Protocol (MSTP) for the PBBN routing instance to ensure a loop-free topology:

```
[edit routing-instances]
user@beb3# set pbbn-1 protocols mstp configuration-name pbbn-1
user@beb3# set pbbn-1 protocols mstp interface ge-1/3/9
user@beb3# set pbbn-1 protocols mstp interface ge-2/3/0
```

5. Configure the provider bridge domain **elan-bvlan** for E-LAN services:

```
[edit routing-instances]
user@beb3# set pbbn-1 bridge-domains elan-bvlan vlan-id 3350
```

6. Configure PBB options to provide the PBBN with B-VLAN to I-SID mapping information in the bridge-domain:

```
[edit routing-instances]
user@beb3# set pbbn-1 pbb-options vlan-id 3350 isid-list 10300
user@beb3# set pbbn-1 pbb-options vlan-id 3350 isid-list 10400
```

Results Check the results of the configuration:

```
user@beb3> show configuration
routing-instances {
  pbbn-1 {
    instance-type virtual-switch;
    interface ge-1/3/9.0;
    interface ge-2/3/0.0;
    interface cbp0.0;
    protocols {
      mstp {
        configuration-name pbbn-1;
        interface ge-1/3/9;
        interface ge-2/3/0;
      }
    }
  }
  bridge-domains {
    elan-bvlan {
      vlan-id 3350;
    }
  }
  pbb-options {
    vlan-id 3350 isid-list [ 10300 10400 ];
  }
}
```

Configuring the Interfaces on BEB3

CLI Quick Configuration To quickly configure the interfaces on BEB3, copy the following commands and paste them into the router terminal window:

```
[edit]
set interfaces ge-1/3/9 description "Connected to BCB2 cabernet ge-1/3/9"
set interfaces ge-1/3/9 unit 0 family bridge interface-mode trunk
set interfaces ge-1/3/9 unit 0 family bridge vlan-id-list 3000-4000
set interfaces ge-2/0/0 description "Connected to ES3 dolcetto ge-2/0/0"
set interfaces ge-2/0/0 flexible-vlan-tagging
set interfaces ge-2/0/0 unit 3 family bridge interface-mode trunk
set interfaces ge-2/0/0 unit 3 family bridge vlan-id-list 1300
set interfaces ge-2/0/0 unit 4 family bridge interface-mode trunk
set interfaces ge-2/0/0 unit 4 family bridge vlan-id-list 1400
set interfaces ge-2/3/0 description "Connected to BCB1 syrah ge-2/3/0"
set interfaces ge-2/3/0 unit 0 family bridge interface-mode trunk
set interfaces ge-2/3/0 unit 0 family bridge vlan-id-list 3000-4000
set interfaces cbp0 unit 0 family bridge interface-mode trunk
set interfaces cbp0 unit 0 family bridge bridge-domain-type bvlan
set interfaces cbp0 unit 0 family bridge isid-list all
set interfaces pip0 unit 0 family bridge interface-mode trunk
set interfaces pip0 unit 0 family bridge bridge-domain-type svlan
set interfaces pip0 unit 0 family bridge isid-list all-service-groups
set interfaces pip0 unit 1 family bridge interface-mode trunk
set interfaces pip0 unit 1 family bridge bridge-domain-type svlan
set interfaces pip0 unit 1 family bridge isid-list all-service-groups
```

Step-by-Step Procedure To configure interfaces on BEB3:

1. Configure interface **ge-1/3/9**:

```
[edit interfaces]
user@beb3# set ge-1/3/9 description "Connected to CS2 cabernet ge-1/3/9"
user@beb3# set ge-1/3/9 unit 0 family bridge interface-mode trunk
user@beb3# set ge-1/3/9 unit 0 family bridge vlan-id-list 3000-4000
```
2. Configure interface **ge-2/0/0**:

```
[edit interfaces]
user@beb3# set ge-2/0/0 description "Connected to ES3 dolcetto ge-2/0/0"
user@beb3# set ge-2/0/0 flexible-vlan-tagging
user@beb3# set ge-2/0/0 unit 3 family bridge interface-mode trunk
user@beb3# set ge-2/0/0 unit 3 family bridge vlan-id-list 1300
user@beb3# set ge-2/0/0 unit 4 family bridge interface-mode trunk
user@beb3# set ge-2/0/0 unit 4 family bridge vlan-id-list 1400
```
3. Configure interface **ge-2/3/0**:

```
[edit interfaces]
user@beb3# set ge-2/3/0 description "Connected to BCB1 syrah ge-2/3/0"
user@beb3# set ge-2/3/0 unit 0 family bridge interface-mode trunk
user@beb3# set ge-2/3/0 unit 0 family bridge vlan-id-list 3000-4000
```
4. Configure interface **cpb0**:

```
[edit interfaces]
user@beb3# set cbp0 unit 0 family bridge interface-mode trunk
user@beb3# set cbp0 unit 0 family bridge bridge-domain-type bvlan
user@beb3# set cbp0 unit 0 family bridge isid-list all
```
5. Configure interface **pip0**:

```
[edit interfaces]
user@beb3# set pip0 unit 0 family bridge interface-mode trunk
user@beb3# set pip0 unit 0 family bridge bridge-domain-type svlan
user@beb3# set pip0 unit 0 family bridge isid-list all-service-groups
user@beb3# set pip0 unit 1 family bridge interface-mode trunk
user@beb3# set pip0 unit 1 family bridge bridge-domain-type svlan
user@beb3# set pip0 unit 1 family bridge isid-list all-service-groups
```

Results Check the results of the configuration:

```
user@beb3> show configuration
interfaces {
  ge-1/3/9 {
    description "Connected to BCB2 cabernet ge-1/3/9";
    unit 0 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 3000-4000;
      }
    }
  }
  ge-2/0/0 {
    description "Connected to ES3 dolcetto ge-2/0/0";
    flexible-vlan-tagging;
    unit 3 {
```

```

        family bridge {
            interface-mode trunk;
            vlan-id-list 1300;
        }
    }
    unit 4 {
        family bridge {
            interface-mode trunk;
            vlan-id-list 1400;
        }
    }
}
ge-2/3/0 {
    description "Connected to BCB1 syrah ge-2/3/0";
    unit 0 {
        family bridge {
            interface-mode trunk;
            vlan-id-list 3000-4000;
        }
    }
}
cbp0 {
    unit 0 {
        family bridge {
            interface-mode trunk;
            bridge-domain-type bvlan;
            isid-list all;
        }
    }
}
pip0 {
    unit 0 {
        family bridge {
            interface-mode trunk;
            bridge-domain-type svlan;
            isid-list all-service-groups;
        }
    }
    unit 1 {
        family bridge {
            interface-mode trunk;
            bridge-domain-type svlan;
            isid-list all-service-groups;
        }
    }
}
}

```

Configuring E-LINE and E-LAN Services on BEB4 (Cubs)

Table 5 on page 44 contains the services configured for BEB4 as well as the correlating S-VLANs, I-SIDs, and B-VLANs.

Table 5: BEB4 Mapping

Service	S-VLAN	I-SID	B-VLAN
eline1	1100 translated to 2100	10100	3150
eline2	1200	10200	3150
elan1	1300	10300	3350
elan2	1400	10400	3350

To configure E-LINE and E-LAN services on the MX Series router BEB4 in a PBBN, perform these tasks:

- Configuring a Routing Instance for E-LINE Services on BEB4 on page 44
- Configuring a PBN Routing Instance for E-LAN Services on BEB4 on page 46
- Configuring a PBBN Routing Instance on BEB4 on page 47
- Configuring the Interfaces on BEB4 on page 49

Configuring a Routing Instance for E-LINE Services on BEB4

CLI Quick Configuration

To quickly configure the PBN (I-component) routing instance for E-LINE services, copy the following commands and paste them into the router terminal window:

```
[edit]
set routing-instances pbn-3-for-eline instance-type virtual-switch
set routing-instances pbn-3-for-eline interface ge-1/0/0.1
set routing-instances pbn-3-for-eline interface ge-1/0/0.2
set routing-instances pbn-3-for-eline interface pip0.0
set routing-instances pbn-3-for-eline bridge-domains eline-svlans vlan-id-list 1200
set routing-instances pbn-3-for-eline bridge-domains eline-svlans vlan-id-list 2100
set routing-instances pbn-3-for-eline pbb-options peer-instance pbbn-1
set routing-instances pbn-3-for-eline service-groups eline1 service-type eline
set routing-instances pbn-3-for-eline service-groups eline1 pbb-service-options isid 10100 interface
ge-1/0/0.1
set routing-instances pbn-3-for-eline service-groups eline2 service-type eline
set routing-instances pbn-3-for-eline service-groups eline2 pbb-service-options isid 10200
interface ge-1/0/0.2
```

Step-by-Step Procedure

To configure the PBN (I-component) routing instance for E-LINE service:

1. Configure the PBN routing instance **pbn3-for-eline** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```
[edit routing-instances]
user@beb4# set pbn-3-for-eline instance-type virtual-switch
```

2. Configure the logical interfaces for the PBN routing instance:

```
[edit routing-instances]
user@beb4# set pbn-3-for-eline interface ge-1/0/0.1
user@beb4# set pbn-3-for-eline interface ge-1/0/0.2
```

3. Configure a provider instance port (PIP) pseudo-logical interface to provide a connection between customer routing instances (PBN I-component) and the provider routing instance (PBBN B-component):

```
[edit routing-instances]
user@beb4# set pbn-3-for-eline interface pip0.0
```

4. Configure the provider bridge domain **eline-svlans** for E-LINE services:

```
[edit routing-instances]
user@beb4# set pbn-3-for-eline bridge-domains eline-svlans vlan-id-list 1200
user@beb4# set pbn-3-for-eline bridge-domains eline-svlans vlan-id-list 2100
```

5. Configure the peer PBBN routing instance (here, the peer PBBN is **pbbn-1**):

```
[edit routing-instances]
user@beb4# set pbn-3-for-eline pbb-options peer-instance pbbn-1
```

6. Configure service groups and the type of service they will provide for the routing instance (here, service groups **eline1** and **eline2** are configured for **eline** service):

```
[edit routing-instances ]
user@beb4# set pbn-3-for-eline service-groups eline1 service-type eline
user@beb4# set pbn-3-for-eline service-groups eline1 pbb-service-options isid 10100
interface ge-1/0/0.1
user@beb1# set pbn-3-for-eline service-groups eline2 service-type eline
user@beb1# set pbn-3-for-eline service-groups eline2 pbb-service-options isid 10200
interface ge-1/0/0.2
```

Results Check the results of the configuration:

```
user@beb4> show configuration
routing-instances {
  pbn-3-for-eline {
    instance-type virtual-switch;
    interface ge-1/0/0.1;
    interface ge-1/0/0.2;
    interface pip0.0;
    bridge-domains {
      eline-svlans {
        vlan-id-list [ 1200 2100 ];
      }
    }
  }
  pbb-options {
    peer-instance pbbn-1;
  }
  service-groups {
    eline1 {
      service-type eline;
      pbb-service-options {
        isid 10100 interface ge-1/0/0.1;
      }
    }
    eline2 {
      service-type eline;
      pbb-service-options {
        isid 10200 interface ge-1/0/0.2;
      }
    }
  }
}
```

Configuring a PBN Routing Instance for E-LAN Services on BEB4

CLI Quick Configuration To quickly configure a PBN (I-component) routing instance for E-LAN services, copy the following commands and paste them into the router terminal window:

```
[edit]
set routing-instances pbn-3-for-elan instance-type virtual-switch
set routing-instances pbn-3-for-elan interface ge-1/0/0.3
set routing-instances pbn-3-for-elan interface ge-1/0/0.4
set routing-instances pbn-3-for-elan interface pip0.1
set routing-instances pbn-3-for-elan bridge-domains elan-svlans vlan-id-list 1300
set routing-instances pbn-3-for-elan bridge-domains elan-svlans vlan-id-list 1400
set routing-instances pbn-3-for-elan pbb-options peer-instance pbbn-1
set routing-instances pbn-3-for-elan service-groups elan1 service-type elan
set routing-instances pbn-3-for-elan service-groups elan1 pbb-service-options isid 10300
vlan-id-list 1300
set routing-instances pbn-3-for-elan service-groups elan2 service-type elan
set routing-instances pbn-3-for-elan service-groups elan2 pbb-service-options isid 10400
vlan-id-list 1400
```

Step-by-Step Procedure To configure the PBN (I-component) routing instance for E-LAN service:

1. Configure the PBN routing instance **pbn3-for-elan** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```
[edit routing-instances]
user@beb4# set pbn-3-for-elan instance-type virtual-switch
```

2. Configure the logical interfaces for the PBN routing instance:

```
[edit routing-instances]
user@beb4# set pbn-3-for-elan interface ge-1/0/0.3
user@beb4# set pbn-3-for-elan interface ge-1/0/0.4
```

3. Configure a provider instance port (PIP) pseudo-logical interface to provide a connection between customer routing instances (PBN I-component) and the provider routing instance (PBBN B-component):

```
[edit routing-instances]
user@beb4# set pbn-3-for-elan interface pip0.1
```

4. Configure the provider bridge domain **elan-svlans** for E-LAN services:

```
[edit routing-instances]
user@beb4# set pbn-3-for-elan bridge-domains elan-svlans vlan-id-list 1300
user@beb4# set pbn-3-for-elan bridge-domains elan-svlans vlan-id-list 1400
```

5. Configure the peer PBBN routing instance (here, the peer PBBN is **pbbn-1**):

```
[edit routing-instances]
user@beb4# set pbn-3-for-elan pbb-options peer-instance pbbn-1
```

6. Configure service groups and the type of service they will provide for the routing instance (here, service groups **elan1** and **elan2** are configured for **elan** service):

```
[edit routing-instances ]
user@beb4# set pbn-3-for-elan service-groups elan1 service-type elan
user@beb4# set pbn-3-for-elan service-groups elan1 pbb-service-options isid 10300
vlan-id-list 1300
user@beb4# set pbn-3-for-elan service-groups elan2 service-type elan
```

```
user@beb4# set pbn-3-for-elan service-groups elan2 pbb-service-options isid 10400
vlan-id-list 1400
```

Results Check the results of the configuration:

```
user@beb4> show configuration
routing-instances {
  pbn-3-for-elan {
    instance-type virtual-switch;
    interface ge-1/0/0.3;
    interface ge-1/0/0.4;
    interface pip0.1;
    bridge-domains {
      elan-svlans {
        vlan-id-list [ 1300 1400 ];
      }
    }
    pbb-options {
      peer-instance pbbn-1;
    }
  }
  service-groups {
    elan1 {
      service-type elan;
      pbb-service-options {
        isid 10300 vlan-id-list 1300;
      }
    }
    elan2 {
      service-type elan;
      pbb-service-options {
        isid 10400 vlan-id-list 1400;
      }
    }
  }
}
```

Configuring a PBBN Routing Instance on BEB4

CLI Quick Configuration To quickly configure a routing instance for a PBBN, copy the following commands and paste them into the router terminal window:

```
[edit]
set routing-instances pbbn-1 instance-type virtual-switch
set routing-instances pbbn-1 interface ge-1/0/4.0
set routing-instances pbbn-1 interface ge-1/2/2.0
set routing-instances pbbn-1 interface cbp0.0
set routing-instances pbbn-1 protocols mstp configuration-name pbbn-1
set routing-instances pbbn-1 protocols mstp interface ge-1/0/4
set routing-instances pbbn-1 protocols mstp interface ge-1/2/2
set routing-instances pbbn-1 bridge-domains elan-bvlan vlan-id 3350
set routing-instances pbbn-1 bridge-domains eline-bvlan vlan-id 3150
set routing-instances pbbn-1 pbb-options vlan-id 3350 isid-list 10300
set routing-instances pbbn-1 pbb-options vlan-id 3350 isid-list 10400
set routing-instances pbbn-1 pbb-options vlan-id 3150 isid-list 10100
set routing-instances pbbn-1 pbb-options vlan-id 3150 isid-list 10200
```

**Step-by-Step
Procedure**

To configure the PBBN (B-component) routing instance:

1. Configure the PBBN routing instance **pbbn-1** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```
[edit routing-instances]
user@beb4# set pbbn-1 instance-type virtual-switch
```

2. Configure the logical interfaces for the PBBN routing instance:

```
[edit routing-instances]
user@beb4# set pbbn-1 interface ge-1/0/4.0
user@beb4# set pbbn-1 interface ge-1/2/2.0
```

3. Configure a customer backbone port (CBP) pseudo-logical interface to provide a connection between customer routing instances (PBN I-component) and the provider routing instance (PBBN B-component):

```
[edit routing-instances]
user@beb4# set pbbn-1 interface cbp0.0
```

4. Configure Multiple Spanning Tree Protocol (MSTP) for the PBBN routing instance to ensure a loop-free topology:

```
[edit routing-instances]
user@beb4# set pbbn-1 protocols mstp configuration-name pbbn-1
user@beb4# set pbbn-1 protocols mstp interface ge-1/0/4
user@beb34# set pbbn-1 protocols mstp interface ge-1/2/2
```

5. Configure the provider bridge domains **elan-bvlan** and **eline-bvlan** for E-LINE and E-LAN services:

```
[edit routing-instances]
user@beb4# set pbbn-1 bridge-domains elan-bvlan vlan-id 3350
user@beb4# set pbbn-1 bridge-domains eline-bvlan vlan-id 3150
```

6. Configure PBB options to provide the PBBN with B-VLAN to I-SID mapping information in the bridge-domain:

```
[edit routing-instances]
user@beb4# set pbbn-1 pbb-options vlan-id 3350 isid-list 10300
user@beb4# set pbbn-1 pbb-options vlan-id 3350 isid-list 10400
user@beb4# set pbbn-1 pbb-options vlan-id 3150 isid-list 10100
user@beb4# set pbbn-1 pbb-options vlan-id 3150 isid-list 10200
```

Results Check the results of the configuration:

```
user@beb4> show configuration
routing-instances {
  pbbn-1 {
    instance-type virtual-switch;
    interface ge-1/0/4.0;
    interface ge-1/2/2.0;
    interface cbp0.0;
    protocols {
      mstp {
        configuration-name pbbn-1;
        interface ge-1/0/4;
```

```

        interface ge-1/2/2;
    }
}
bridge-domains {
    elan-bvlan {
        vlan-id 3350;
    }
    eline-bvlan {
        vlan-id 3150;
    }
}
pbb-options {
    vlan-id 3350 isid-list [ 10300 10400 ];
    vlan-id 3150 isid-list [ 10100 10200 ];
}
}
)

```

Configuring the Interfaces on BEB4

CLI Quick Configuration

To quickly configure the interfaces on BEB4, copy the following commands and paste them into the router terminal window:

```

[edit]
set interfaces ge-1/0/0 description "Connected to ES4 Reds ge-1/0/0"
set interfaces ge-1/0/0 flexible-vlan-tagging
set interfaces ge-1/0/0 encapsulation flexible-ethernet-services
set interfaces ge-1/0/0 unit 1 family bridge interface-mode trunk
set interfaces ge-1/0/0 unit 1 family bridge vlan-id-list 2100
set interfaces ge-1/0/0 unit 1 family bridge vlan-rewrite translate 1100 2100
set interfaces ge-1/0/0 unit 2 family bridge interface-mode trunk
set interfaces ge-1/0/0 unit 2 family bridge vlan-id-list 1200
set interfaces ge-1/0/0 unit 3 family bridge interface-mode trunk
set interfaces ge-1/0/0 unit 3 family bridge vlan-id-list 1300
set interfaces ge-1/0/0 unit 4 family bridge interface-mode trunk
set interfaces ge-1/0/0 unit 4 family bridge vlan-id-list 1400
set interfaces ge-1/0/4 description "Connected to BCB1 Syrah ge-2/1/5"
set interfaces ge-1/0/4 unit 0 family bridge interface-mode trunk
set interfaces ge-1/0/4 unit 0 family bridge vlan-id-list 3000-4000
set interfaces ge-1/2/2 description "Connected to BCB2 Cabernet ge-2/0/6"
set interfaces ge-1/2/2 unit 0 family bridge interface-mode trunk
set interfaces ge-1/2/2 unit 0 family bridge vlan-id-list 3000-4000
set interfaces cbp0 unit 0 family bridge interface-mode trunk
set interfaces cbp0 unit 0 family bridge bridge-domain-type bvlan
set interfaces cbp0 unit 0 family bridge isid-list all
set interfaces pip0 unit 0 family bridge interface-mode trunk
set interfaces pip0 unit 0 family bridge bridge-domain-type svlan
set interfaces pip0 unit 0 family bridge isid-list all-service-groups
set interfaces pip0 unit 1 family bridge interface-mode trunk
set interfaces pip0 unit 1 family bridge bridge-domain-type svlan
set interfaces pip0 unit 1 family bridge isid-list all-service-groups

```

Step-by-Step Procedure

To configure interfaces on BEB4:



NOTE: Traffic from ES4 on interface ge-1/0/0 is translated from VLAN 1100 to VLAN 2100 by including the statement `vlan-rewrite`.

1. Configure interface **ge-1/0/0**:



NOTE: Traffic from ES4 on interface ge-1/0/0 is translated from VLAN 1100 to VLAN 2100 by including the statement `vlan-rewrite`.

```
[edit interfaces]
user@beb4# set ge-1/0/0 description "Connected to ES4 Reds ge-1/0/0"
user@beb4# set ge-1/0/0 flexible-vlan-tagging
user@beb4# set ge-1/0/0 encapsulation flexible-ethernet-services
user@beb4# set ge-1/0/0 unit 1 family bridge interface-mode trunk
user@beb4# set ge-1/0/0 unit 1 family bridge vlan-id-list 2100
user@beb4# set ge-1/0/0 unit 1 family bridge vlan-rewrite translate 1100 2100
user@beb4# set ge-1/0/0 unit 2 family bridge interface-mode trunk
user@beb4# set ge-1/0/0 unit 2 family bridge vlan-id-list 1200
user@beb4# set ge-1/0/0 unit 3 family bridge interface-mode trunk
user@beb4# set ge-1/0/0 unit 3 family bridge vlan-id-list 1300
user@beb4# set ge-1/0/0 unit 4 family bridge interface-mode trunk
user@beb4# set ge-1/0/0 unit 4 family bridge vlan-id-list 1400
```

2. Configure interface **ge-1/0/4**:

```
[edit interfaces]
user@beb4# set ge-1/0/4 description "Connected to BCB1 Syrah ge-2/1/5"
user@beb4# set ge-1/0/4 unit 0 family bridge interface-mode trunk
user@beb4# set ge-1/0/4 unit 0 family bridge vlan-id-list 3000-4000
```

3. Configure interface **ge-1/2/2**:

```
[edit interfaces]
user@beb4# set ge-1/2/2 description "Connected to BCB2 Cabernet ge-2/0/6"
user@beb4# set ge-1/2/2 unit 0 family bridge interface-mode trunk
user@beb4# set ge-1/2/2 unit 0 family bridge vlan-id-list 3000-4000
```

4. Configure interface **cpb0**:

```
[edit interfaces]
user@beb3# set cbp0 unit 0 family bridge interface-mode trunk
user@beb3# set cbp0 unit 0 family bridge bridge-domain-type bvlan
user@beb3# set cbp0 unit 0 family bridge isid-list all
```

5. Configure interface **pip0**:

```
[edit interfaces]
user@beb3# set pip0 unit 0 family bridge interface-mode trunk
user@beb3# set pip0 unit 0 family bridge bridge-domain-type svlan
user@beb3# set pip0 unit 0 family bridge isid-list all-service-groups
user@beb3# set pip0 unit 1 family bridge interface-mode trunk
user@beb3# set pip0 unit 1 family bridge bridge-domain-type svlan
user@beb3# set pip0 unit 1 family bridge isid-list all-service-groups
```

Results Check the results of the configuration:

```

user@beb4> show configuration
interfaces {
  ge-1/0/0 {
    description "Connected to ES4 Reds ge-1/0/0";
    flexible-vlan-tagging;
    encapsulation flexible-ethernet-services;
    unit 1 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 2100;
        vlan-rewrite {
          translate 1100 2100;
          # trunk port VLAN translation from vlan1100 to vlan2100
        }
      }
    }
  }
  unit 2 {
    family bridge {
      interface-mode trunk;
      vlan-id-list 1200;
    }
  }
  unit 3 {
    family bridge {
      interface-mode trunk;
      vlan-id-list 1300;
    }
  }
  unit 4 {
    family bridge {
      interface-mode trunk;
      vlan-id-list 1400;
    }
  }
}
ge-1/0/4 {
  description "Connected to BCB1 Syrah ge-2/1/5";
  unit 0 {
    family bridge {
      interface-mode trunk;
      vlan-id-list 3000-4000;
    }
  }
}
ge-1/2/2 {
  description "Connected to BCB2 Cabernet ge-2/0/6";
  unit 0 {
    family bridge {
      interface-mode trunk;
      vlan-id-list 3000-4000;
    }
  }
}
cbp0 {

```

```

    unit 0 {
      family bridge {
        interface-mode trunk;
        bridge-domain-type bvlan;
        isid-list all;
      }
    }
  }
  pip0 {
    unit 0 {
      family bridge {
        interface-mode trunk;
        bridge-domain-type svlan;
        isid-list all-service-groups;
      }
    }
    unit 1 {
      family bridge {
        interface-mode trunk;
        bridge-domain-type svlan;
        isid-list all-service-groups;
      }
    }
  }
}

```

Configuring Routing Instances and Interfaces on ES1 (Pinot Noir)

Table 6 on page 52 contains the information about how the customer VLAN (C-VLAN) is mapped to the services VLAN (S-VLAN) on ES1.

Table 6: ES1 C-VLAN to S-VLAN Mapping

Service	C-VLAN	S-VLAN
E-LINE	100	1100
E-LINE	200	1200
E-LAN	300	1300
E-LAN	400	1400

To configure routing instances and interfaces on the MX Series router called ES1 in a PBBN in the topology shown in Figure 2 on page 19, perform these tasks:

- Configuring a Routing Instance for ES1 on page 52
- Configuring the Interfaces on ES1 on page 54

Configuring a Routing Instance for ES1

CLI Quick Configuration

To quickly configure a routing instance for ES1, copy the following commands and paste them into the router terminal window:

```
[edit]
```

```

set routing-instances cust-1 instance-type virtual-switch
set routing-instances cust-1 interface ge-1/0/0.1
set routing-instances cust-1 interface ge-1/0/0.2
set routing-instances cust-1 interface ge-1/0/0.3
set routing-instances cust-1 interface ge-1/0/0.4
set routing-instances cust-1 interface ge-1/1/0.0
set routing-instances cust-1 interface ge-2/0/0.1
set routing-instances cust-1 interface ge-2/0/0.2
set routing-instances cust-1 interface ge-2/0/0.3
set routing-instances cust-1 interface ge-2/0/0.4
set routing-instances cust-1 bridge-domains bds vlan-id-list 100
set routing-instances cust-1 bridge-domains bds vlan-id-list 200
set routing-instances cust-1 bridge-domains bds vlan-id-list 300
set routing-instances cust-1 bridge-domains bds vlan-id-list 400

```

Step-by-Step Procedure

To configure the routing instance for ES1:

1. Configure the routing instance **cust-1** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```

[edit routing-instances]
user@es1# set cust-1 instance-type virtual-switch

```

2. Configure the logical interfaces for the PBN routing instance:

```

[edit routing-instances]
user@es1# set cust-1 interface ge-1/0/0.1
user@es1# set cust-1 interface ge-1/0/0.2
user@es1# set cust-1 interface ge-1/0/0.3
user@es1# set cust-1 interface ge-1/0/0.4
user@es1# set cust-1 interface ge-1/1/0.0
user@es1# set cust-1 interface ge-2/0/0.1
user@es1# set cust-1 interface ge-2/0/0.2
user@es1# set cust-1 interface ge-2/0/0.3
user@es1# set cust-1 interface ge-2/0/0.4

```

3. Configure the bridge domain **bds**:

```

[edit routing-instances]
user@es1# set cust-1 bridge-domains bds vlan-id-list 100
user@es1# set cust-1 bridge-domains bds vlan-id-list 200
user@es1# set cust-1 bridge-domains bds vlan-id-list 300
user@es1# set cust-1 bridge-domains bds vlan-id-list 400

```

Results Check the results of the configuration:

```

user@beb4> show configuration
routing-instances {
  cust-1 {
    instance-type virtual-switch;
    interface ge-1/0/0.1;
    interface ge-1/0/0.2;
    interface ge-1/0/0.3;
    interface ge-1/0/0.4;
    interface ge-1/1/0.0;
    interface ge-2/0/0.1;
    interface ge-2/0/0.2;
    interface ge-2/0/0.3;
    interface ge-2/0/0.4;
  }
}

```

```

    bridge-domains {
        bds {
            vlan-id-list [ 100 200 300 400 ];
        }
    }
}

```

Configuring the Interfaces on ES1

CLI Quick Configuration To quickly configure the interfaces on ES1, copy the following commands and paste them into the router terminal window:

```

[edit]
set interfaces ge-1/0/0 description "Connected to BEB2 barbera ge-1/0/0"
set interfaces ge-1/0/0 flexible-vlan-tagging
set interfaces ge-1/0/0 unit 2 vlan-id 1200
set interfaces ge-1/0/0 unit 2 family bridge interface-mode trunk
set interfaces ge-1/0/0 unit 2 family bridge inner-vlan-id-list 200
set interfaces ge-1/1/0 unit 0 family bridge interface-mode trunk
set interfaces ge-1/1/0 unit 0 family bridge vlan-id-list 100
set interfaces ge-1/1/0 unit 0 family bridge vlan-id-list 200
set interfaces ge-1/1/0 unit 0 family bridge vlan-id-list 300
set interfaces ge-1/1/0 unit 0 family bridge vlan-id-list 400
set interfaces ge-2/0/0 description "Connected to AS1 sangiovese ge-2/0/0"
set interfaces ge-2/0/0 flexible-vlan-tagging
set interfaces ge-2/0/0 unit 1 vlan-id 2100
set interfaces ge-2/0/0 unit 1 family bridge interface-mode trunk
set interfaces ge-2/0/0 unit 1 family bridge inner-vlan-id-list 100
set interfaces ge-2/0/0 unit 3 vlan-id 1300
set interfaces ge-2/0/0 unit 3 family bridge interface-mode trunk
set interfaces ge-2/0/0 unit 3 family bridge inner-vlan-id-list 300
set interfaces ge-2/0/0 unit 4 vlan-id 1400
set interfaces ge-2/0/0 unit 4 family bridge interface-mode trunk
set interfaces ge-2/0/0 unit 4 family bridge inner-vlan-id-list 400

```

Step-by-Step Procedure To configure interfaces on ES1:

1. Configure interface **ge-1/0/0**:


```

[edit interfaces]
user@es1# set ge-1/0/0 description "Connected to BEB2 barbera ge-1/0/0"
user@es1# set ge-1/0/0 flexible-vlan-tagging
user@es1# set ge-1/0/0 unit 2 vlan-id 1200
user@es1# set ge-1/0/0 unit 2 family bridge interface-mode trunk
user@es1# set ge-1/0/0 unit 2 family bridge inner-vlan-id-list 200

```
2. Configure interface **ge-1/1/0**:


```

[edit interfaces]
user@es1# set ge-1/1/0 unit 0 family bridge interface-mode trunk
user@es1# set ge-1/1/0 unit 0 family bridge vlan-id-list 100
user@es1# set ge-1/1/0 unit 0 family bridge vlan-id-list 200
user@es1# set ge-1/1/0 unit 0 family bridge vlan-id-list 300
user@es1# set ge-1/1/0 unit 0 family bridge vlan-id-list 400

```
3. Configure interface **ge-2/0/0**:


```

[edit interfaces]
user@es1# set ge-2/0/0 description "Connected to BEB1 sangiovese ge-2/0/0"
user@es1# set ge-2/0/0 flexible-vlan-tagging

```

```

user@es1# set ge-2/0/0 unit 1 vlan-id 2100
user@es1# set ge-2/0/0 unit 1 family bridge interface-mode trunk
user@es1# set ge-2/0/0 unit 1 family bridge inner-vlan-id-list 100
user@es1# set ge-2/0/0 unit 3 vlan-id 1300
user@es1# set ge-2/0/0 unit 3 family bridge interface-mode trunk
user@es1# set ge-2/0/0 unit 3 family bridge inner-vlan-id-list 300
user@es1# set ge-2/0/0 unit 4 vlan-id 1400
user@es1# set ge-2/0/0 unit 4 family bridge interface-mode trunk
user@es1# set ge-2/0/0 unit 4 family bridge inner-vlan-id-list 400

```

Results Check the results of the configuration:

```

user@es1> show configuration
interfaces {
  ge-1/0/0 {
    description "Connected to BEB2 barbera ge-1/0/0";
    flexible-vlan-tagging;
    unit 2 {
      vlan-id 1200;
      family bridge {
        interface-mode trunk;
        inner-vlan-id-list [ 200 ];
      }
    }
  }
  ge-1/1/0 {
    unit 0 {
      family bridge {
        interface-mode trunk;
        vlan-id-list [ 100 200 300 400 ];
      }
    }
  }
  ge-2/0/0 {
    description "Connected to BEB1 sangiovese ge-2/0/0";
    flexible-vlan-tagging;
    unit 1 {
      vlan-id 2100;
      family bridge {
        interface-mode trunk;
        inner-vlan-id-list [ 100 ];
      }
    }
    unit 3 {
      vlan-id 1300;
      family bridge {
        interface-mode trunk;
        inner-vlan-id-list 300;
      }
    }
    unit 4 {
      vlan-id 1400;
      family bridge {
        interface-mode trunk;
        inner-vlan-id-list 400;
      }
    }
  }
}

```

```
}
}
}
```

Configuring a Routing Instance and Interfaces on ES3 (Dolcetto)

Table 7 on page 56 contains the information about how the customer VLAN (C-VLAN) is mapped to the services VLAN (S-VLAN) on ES3.

Table 7: ES3 C-VLAN to S-VLAN Mapping

Service	C-VLAN	S-VLAN
E-LAN	300	1300
E-LAN	400	1400

To configure routing instances and interfaces on the MX Series router called ES3 in a PBBN in the topology shown in Figure 2 on page 19, perform these tasks:

- Configuring a Routing Instance for ES3 on page 56
- Configuring the Interfaces on ES3 on page 57

Configuring a Routing Instance for ES3

CLI Quick Configuration

To quickly configure a routing instance for ES3, copy the following commands and paste them into the router terminal window:

```
[edit]
set routing-instances cust-1 instance-type virtual-switch
set routing-instances cust-1 interface ge-2/0/0.3
set routing-instances cust-1 interface ge-2/0/0.4
set routing-instances cust-1 interface ge-2/1/0.0
set routing-instances cust-1 bridge-domains bds vlan-id-list 300
set routing-instances cust-1 bridge-domains bds vlan-id-list 400
```

Step-by-Step Procedure

To configure the routing instance for ES3:

1. Configure the routing instance **cust-1** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```
[edit routing-instances]
user@es3# set cust-1 instance-type virtual-switch
```

2. Configure the logical interfaces for the PBN routing instance:

```
[edit routing-instances]
user@es3# set cust-1 interface ge-2/0/0.3
user@es3# set cust-1 interface ge-2/0/0.4
user@es3# set cust-1 interface ge-2/1/0.0
```

3. Configure the bridge domain **bds**:

```
[edit routing-instances]
user@es3# set cust-1 bridge-domains bds vlan-id-list 300
user@es3# set cust-1 bridge-domains bds vlan-id-list 400
```

Results Check the results of the configuration:

```

user@es3> show configuration
routing-instances {
  cust-1 {
    instance-type virtual-switch;
    interface ge-2/0/0.3;
    interface ge-2/0/0.4;
    interface ge-2/1/0.0;
    bridge-domains {
      bds {
        vlan-id-list [ 300 400 ];
      }
    }
  }
}

```

Configuring the Interfaces on ES3

CLI Quick Configuration To quickly configure the interfaces on ES3, copy the following commands and paste them into the router terminal window:

```

[edit]
set interfaces ge-1/1/0 unit 0 family bridge interface-mode trunk
set interfaces ge-1/1/0 unit 0 family bridge vlan-id-list 300
set interfaces ge-1/1/0 unit 0 family bridge vlan-id-list 400
set interfaces ge-2/0/0 description "Connected to BEB3 malbec ge-2/0/0"
set interfaces ge-2/0/0 flexible-vlan-tagging
set interfaces ge-2/0/0 unit 3 vlan-id 1300
set interfaces ge-2/0/0 unit 3 family bridge interface-mode trunk
set interfaces ge-2/0/0 unit 3 family bridge inner-vlan-id-list 300
set interfaces ge-2/0/0 unit 4 vlan-id 1400
set interfaces ge-2/0/0 unit 4 family bridge interface-mode trunk
set interfaces ge-2/0/0 unit 4 family bridge inner-vlan-id-list 400

```

Step-by-Step Procedure To configure interfaces on ES3:

1. Configure interface **ge-1/1/0**:

```

[edit interfaces]
user@es3# set ge-1/1/0 unit 0 family bridge interface-mode trunk
user@es3# set ge-1/1/0 unit 0 family bridge vlan-id-list 300
user@es3# set ge-1/1/0 unit 0 family bridge vlan-id-list 400

```

2. Configure interface **ge-2/0/0**:

```

[edit interfaces]
user@es3# set ge-2/0/0 description "Connected to BEB3 malbec ge-2/0/0"
user@es3# set ge-2/0/0 flexible-vlan-tagging
user@es3# set ge-2/0/0 unit 3 vlan-id 1300
user@es3# set ge-2/0/0 unit 3 family bridge interface-mode trunk
user@es3# set ge-2/0/0 unit 3 family bridge inner-vlan-id-list 300
user@es3# set ge-2/0/0 unit 4 vlan-id 1400
user@es3# set ge-2/0/0 unit 4 family bridge interface-mode trunk
user@es3# set ge-2/0/0 unit 4 family bridge inner-vlan-id-list 400

```

Results Check the results of the configuration:

```

user@es3> show configuration
interfaces {
  ge-1/1/0 {

```

```

    unit 0 {
        family bridge {
            interface-mode trunk;
            vlan-id-list [ 300 400 ];
        }
    }
}
ge-2/0/0 {
    description "Connected to BEB3 malbec ge-2/0/0";
    flexible-vlan-tagging;
    unit 3 {
        vlan-id 1300;
        family bridge {
            interface-mode trunk;
            inner-vlan-id-list 300;
        }
    }
    unit 4 {
        vlan-id 1400;
        family bridge {
            interface-mode trunk;
            inner-vlan-id-list 400;
        }
    }
}
}

```

Configuring a Routing Instance and Interfaces on ES4 (Reds)

Table 8 on page 58 contains the information about how the customer VLAN (C-VLAN) is mapped to the services VLAN (S-VLAN) on ES4.

Table 8: ES4 C-VLAN to S-VLAN Mapping

Service	C-VLAN	S-VLAN
E-LINE	100	1100
E-LINE	200	1200
E-LAN	300	1300
E-LAN	400	1400

To configure routing instances and interfaces on the MX Series router called ES4 in a PBBN in the topology shown in Figure 2 on page 19, perform these tasks:

- Configuring a Routing Instance for ES4 on page 58
- Configuring the Interfaces on ES4 on page 60

Configuring a Routing Instance for ES4

CLI Quick Configuration

To quickly configure a routing instance for ES4, copy the following commands and paste them into the router terminal window:

```
[edit]
set routing-instances cust-1 instance-type virtual-switch
set routing-instances cust-1 interface ge-1/0/0.1
set routing-instances cust-1 interface ge-1/0/0.2
set routing-instances cust-1 interface ge-1/0/0.3
set routing-instances cust-1 interface ge-1/0/0.4
set routing-instances cust-1 interface ge-1/0/3.1
set routing-instances cust-1 interface ge-1/0/3.2
set routing-instances cust-1 interface ge-1/0/3.3
set routing-instances cust-1 interface ge-1/0/3.4
set routing-instances cust-1 bridge-domains bds vlan-id-list 100
set routing-instances cust-1 bridge-domains bds vlan-id-list 200
set routing-instances cust-1 bridge-domains bds vlan-id-list 300
set routing-instances cust-1 bridge-domains bds vlan-id-list 400
```

Step-by-Step Procedure

To configure the routing instance for ES4:

1. Configure the routing instance **cust-1** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```
[edit routing-instances]
user@es4# set cust-1 instance-type virtual-switch
```

2. Configure the logical interfaces for the PBN routing instance:

```
[edit routing-instances]
user@es4# set cust-1 interface ge-1/0/0.1
user@es4# set cust-1 interface ge-1/0/0.2
user@es4# set cust-1 interface ge-1/0/0.3
user@es4# set cust-1 interface ge-1/0/0.4
user@es4# set cust-1 interface ge-1/0/3.1
user@es4# set cust-1 interface ge-1/0/3.2
user@es4# set cust-1 interface ge-1/0/3.3
user@es4# set cust-1 interface ge-1/0/3.4
```

3. Configure the bridge domain **bds**:

```
[edit routing-instances]
user@es4# set cust-1 bridge-domains bds vlan-id-list 100
user@es4# set cust-1 bridge-domains bds vlan-id-list 200
user@es4# set cust-1 bridge-domains bds vlan-id-list 300
user@es4# set cust-1 bridge-domains bds vlan-id-list 400
```

Results Check the results of the configuration:

```
user@es4> show configuration
routing-instances {
  cust-1 {
    instance-type virtual-switch;
    interface ge-1/0/0.1;
    interface ge-1/0/0.2;
    interface ge-1/0/0.3;
    interface ge-1/0/0.4;
    interface ge-1/0/3.1;
    interface ge-1/0/3.2;
    interface ge-1/0/3.3;
    interface ge-1/0/3.4;
    bridge-domains {
      bds {
```

```

        vlan-id-list [ 100 200 300 400 ];
    }
}
}
}

```

Configuring the Interfaces on ES4

CLI Quick Configuration

To quickly configure the interfaces on ES4, copy the following commands and paste them into the router terminal window:

```

[edit]
set interfaces interface-set vuni-set1 interface ge-1/0/3 unit 1
set interfaces interface-set vuni-set1 interface ge-1/0/3 unit 3
set interfaces interface-set vuni-set1 interface ge-1/0/3 unit 4
set interfaces interface-set vuni-set2 interface ge-1/0/3 unit 2
set interfaces ge-1/0/0 description "Connected to ES4 Reds ge-1/0/0"
set interfaces ge-1/0/0 flexible-vlan-tagging
set interfaces ge-1/0/0 unit 1 vlan-id 1100
set interfaces ge-1/0/0 unit 1 family bridge interface-mode trunk
set interfaces ge-1/0/0 unit 1 family bridge inner-vlan-id-list 100
set interfaces ge-1/0/0 unit 2 vlan-id 1200
set interfaces ge-1/0/0 unit 2 family bridge interface-mode trunk
set interfaces ge-1/0/0 unit 2 family bridge inner-vlan-id-list 200
set interfaces ge-1/0/0 unit 3 vlan-id 1300
set interfaces ge-1/0/0 unit 3 family bridge interface-mode trunk
set interfaces ge-1/0/0 unit 3 family bridge inner-vlan-id-list 300
set interfaces ge-1/0/0 unit 4 vlan-id 1400
set interfaces ge-1/0/0 unit 4 family bridge interface-mode trunk
set interfaces ge-1/0/0 unit 4 family bridge inner-vlan-id-list 400
set interfaces ge-1/0/3 flexible-vlan-tagging
set interfaces ge-1/0/3 unit 1 vlan-id 1100
set interfaces ge-1/0/3 unit 1 family bridge interface-mode trunk
set interfaces ge-1/0/3 unit 1 family bridge inner-vlan-id-list 100
set interfaces ge-1/0/3 unit 2 vlan-id 1200
set interfaces ge-1/0/3 unit 2 family bridge interface-mode trunk
set interfaces ge-1/0/3 unit 2 family bridge inner-vlan-id-list 200
set interfaces ge-1/0/3 unit 3 vlan-id 1300
set interfaces ge-1/0/3 unit 3 family bridge interface-mode trunk
set interfaces ge-1/0/3 unit 3 family bridge inner-vlan-id-list 300
set interfaces ge-1/0/3 unit 4 vlan-id 1400
set interfaces ge-1/0/3 unit 4 family bridge interface-mode trunk
set interfaces ge-1/0/3 unit 4 family bridge inner-vlan-id-list 400

```

Step-by-Step Procedure

To configure interfaces on ES4:

1. Configure the interface sets **vuni-set1** and **vuni-set2**:

```

[edit interfaces]
user@es4# set interface-set vuni-set1 interface ge-1/0/3 unit 1
user@es4# set interface-set vuni-set1 interface ge-1/0/3 unit 3
user@es4# set interface-set vuni-set1 interface ge-1/0/3 unit 4
user@es4# set interface-set vuni-set2 interface ge-1/0/3 unit 2

```

2. Configure interface **ge-1/0/0**:

```

[edit interfaces]
user@es4# set ge-1/0/0 description "Connected to BEB4 Cubs ge-1/0/0"
user@es4# set ge-1/0/0 flexible-vlan-tagging
user@es4# set ge-1/0/0 unit 1 vlan-id 1100

```

```

user@es4# set ge-1/0/0 unit 1 family bridge interface-mode trunk
user@es4# set ge-1/0/0 unit 1 family bridge inner-vlan-id-list 100
user@es4# set ge-1/0/0 unit 2 vlan-id 1200
user@es4# set ge-1/0/0 unit 2 family bridge interface-mode trunk
user@es4# set ge-1/0/0 unit 2 family bridge inner-vlan-id-list 200
user@es4# set ge-1/0/0 unit 3 vlan-id 1300
user@es4# set ge-1/0/0 unit 3 family bridge interface-mode trunk
user@es4# set ge-1/0/0 unit 3 family bridge inner-vlan-id-list 300
user@es4# set ge-1/0/0 unit 4 vlan-id 1400
user@es4# set ge-1/0/0 unit 4 family bridge interface-mode trunk
user@es4# set ge-1/0/0 unit 4 family bridge inner-vlan-id-list 400

```

3. Configure interface **ge-1/0/3**:

```

[edit interfaces]
user@es4# set ge-1/0/3 description "Connected to Gigabit switch"
user@es4# set ge-1/0/3 flexible-vlan-tagging
user@es4# set ge-1/0/3 unit 1 vlan-id 1100
user@es4# set ge-1/0/3 unit 1 family bridge interface-mode trunk
user@es4# set ge-1/0/3 unit 1 family bridge inner-vlan-id-list 100
user@es4# set ge-1/0/3 unit 2 vlan-id 1200
user@es4# set ge-1/0/3 unit 2 family bridge interface-mode trunk
user@es4# set ge-1/0/3 unit 2 family bridge inner-vlan-id-list 200
user@es4# set ge-1/0/3 unit 3 vlan-id 1300
user@es4# set ge-1/0/3 unit 3 family bridge interface-mode trunk
user@es4# set ge-1/0/3 unit 3 family bridge inner-vlan-id-list 300
user@es4# set ge-1/0/3 unit 4 vlan-id 1400
user@es4# set ge-1/0/3 unit 4 family bridge interface-mode trunk
user@es4# set ge-1/0/3 unit 4 family bridge inner-vlan-id-list 400

```

Results Check the results of the configuration:

```

user@es4> show configuration
interfaces {
  interface-set vuni-set1 {
    interface ge-1/0/3 {
      unit 1;
      unit 3;
      unit 4;
    }
  }
  interface-set vuni-set2 {
    interface ge-1/0/3 {
      unit 2;
    }
  }
  ge-1/0/0 {
    description "Connected to BEB4 Cubs ge-1/0/0";
    flexible-vlan-tagging;
    # each unit
    unit 1 {
      vlan-id 1100;
      family bridge {
        interface-mode trunk;
        inner-vlan-id-list [ 100 ];
      }
    }
  }
}

```

```
unit 2 {
  vlan-id 1200;
  family bridge {
    interface-mode trunk;
    inner-vlan-id-list [ 200 ];
  }
}
unit 3 {
  vlan-id 1300;
  family bridge {
    interface-mode trunk;
    inner-vlan-id-list 300;
  }
}
unit 4 {
  vlan-id 1400;
  family bridge {
    interface-mode trunk;
    inner-vlan-id-list 400;
  }
}
}
ge-1/0/3 {
  flexible-vlan-tagging;
  # interface-set and port level
  unit 1 {
    vlan-id 1100;
    family bridge {
      interface-mode trunk;
      inner-vlan-id-list 100;
    }
  }
  unit 2 {
    vlan-id 1200;
    family bridge {
      interface-mode trunk;
      inner-vlan-id-list 200;
    }
  }
  unit 3 {
    vlan-id 1300;
    family bridge {
      interface-mode trunk;
      inner-vlan-id-list 300;
    }
  }
  unit 4 {
    vlan-id 1400;
    family bridge {
      interface-mode trunk;
      inner-vlan-id-list 400;
    }
  }
}
```

Configuring a Routing Instance and Interfaces on BCB1 (Syrah)

To configure routing instances and interfaces on the MX Series router called BCB1 in a PBBN in the topology shown in Figure 2 on page 19, perform these tasks:

- Configuring a Routing Instance for BCB1 on page 63
- Configuring the Interfaces on BCB1 on page 64

Configuring a Routing Instance for BCB1

CLI Quick Configuration

To quickly configure a routing instance for BCB1, copy the following commands and paste them into the router terminal window:

```
[edit]
set routing-instances pbbn-1 instance-type virtual-switch
set routing-instances pbbn-1 interface ge-1/3/0.0
set routing-instances pbbn-1 interface ge-1/3/9.0
set routing-instances pbbn-1 interface ge-2/1/5.0
set routing-instances pbbn-1 interface ge-2/3/0.0
set routing-instances pbbn-1 interface ge-2/3/9.0
set routing-instances pbbn-1 protocols mstp configuration-name pbbn-1
set routing-instances pbbn-1 protocols mstp bridge-priority 4k
set routing-instances pbbn-1 protocols mstp interface ge-1/3/0
set routing-instances pbbn-1 protocols mstp interface ge-1/3/9
set routing-instances pbbn-1 protocols mstp interface ge-2/1/5
set routing-instances pbbn-1 protocols mstp interface ge-2/3/0
set routing-instances pbbn-1 protocols mstp interface ge-2/3/9
set routing-instances pbbn-1 bridge-domains elan-bvlan vlan-id 3350
set routing-instances pbbn-1 bridge-domains eline-bvlan vlan-id-list 3150
```

Step-by-Step Procedure

To configure the routing instance for BCB1:

1. Configure the routing instance **pbbn-1** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```
[edit routing-instances]
user@bcb1# set pbbn-1 instance-type virtual-switch
```

2. Configure the logical interfaces for the PBN routing instance:

```
[edit routing-instances]
user@bcb1# set pbbn-1 interface ge-1/3/0.0
user@bcb1# set pbbn-1 interface ge-1/3/9.0
user@bcb1# set pbbn-1 interface ge-2/1/5.0
user@bcb1# set pbbn-1 interface ge-2/3/0.0
user@bcb1# set pbbn-1 interface ge-2/3/9.0
```

3. Configure MSTP:

```
[edit routing-instances]
user@bcb1# set pbbn-1 protocols mstp configuration-name pbbn-1
user@bcb1# set pbbn-1 protocols mstp bridge-priority 4k
user@bcb1# set pbbn-1 protocols mstp interface ge-1/3/0
user@bcb1# set pbbn-1 protocols mstp interface ge-1/3/9
user@bcb1# set pbbn-1 protocols mstp interface ge-2/1/5
user@bcb1# set pbbn-1 protocols mstp interface ge-2/3/0
user@bcb1# set pbbn-1 protocols mstp interface ge-2/3/9
```

4. Configure the bridge domain **bds**:

```
[edit routing-instances]
user@bcb1# set pbbn-1 bridge-domains elan-bvlan vlan-id 3350
user@bcb1# set pbbn-1 bridge-domains eline-bvlan vlan-id-list 3150
```

Results Check the results of the configuration:

```
user@ebcb1> show configuration
routing-instances {
  pbbn-1 {
    instance-type virtual-switch;
    interface ge-1/3/0.0;
    interface ge-1/3/9.0;
    interface ge-2/1/5.0;
    interface ge-2/3/0.0;
    interface ge-2/3/9.0;
    protocols {
      mstp {
        configuration-name pbbn-1;
        bridge-priority 4k;
        interface ge-1/3/0;
        interface ge-1/3/9;
        interface ge-2/1/5;
        interface ge-2/3/0;
        interface ge-2/3/9;
      }
    }
    bridge-domains {
      elan-bvlan {
        vlan-id 3350;
      }
      eline-bvlan {
        vlan-id 3150;
      }
    }
  }
}
```

Configuring the Interfaces on BCB1

CLI Quick Configuration To quickly configure the interfaces on BCB1, copy the following commands and paste them into the router terminal window:

```
[edit]
set interfaces ge-1/3/0 description "Connected to BEB2 barbera ge-1/3/0"
set interfaces ge-1/3/0 enable
set interfaces ge-1/3/0 unit 0 family bridge interface-mode trunk
set interfaces ge-1/3/0 unit 0 family bridge vlan-id-list 3000-4000
set interfaces ge-1/3/9 description "Connected to BEB1 sangiovese ge-1/3/9"
set interfaces ge-1/3/9 unit 0 family bridge interface-mode trunk
set interfaces ge-1/3/9 unit 0 family bridge vlan-id-list 3000-4000
set interfaces ge-2/1/5 description "Connected to BEB4 Cubs ge-1/0/4"
set interfaces ge-2/1/5 unit 0 family bridge interface-mode trunk
set interfaces ge-2/1/5 unit 0 family bridge vlan-id-list 3000-4000
set interfaces ge-2/3/0 description "Connected to BEB3 malbec ge-2/3/0"
set interfaces ge-2/3/0 unit 0 family bridge interface-mode trunk
set interfaces ge-2/3/0 unit 0 family bridge vlan-id-list 3000-4000
```

```

set interfaces ge-2/3/9 description "Connected to BCB2 cabernet ge-2/3/9"
set interfaces ge-2/3/9 unit 0 family bridge interface-mode trunk
set interfaces ge-2/3/9 unit 0 family bridge vlan-id-list 3000-4000

```

Step-by-Step Procedure

To configure interfaces on BCB1:

1. Configure interface **ge-1/3/0**:

```

[edit interfaces]
user@bcb1# set ge-1/3/0 description "Connected to BEB2 barbera ge-1/3/0"
user@bcb1# set ge-1/3/0 enable
user@bcb1# set ge-1/3/0 unit 0 family bridge interface-mode trunk
user@bcb1# set ge-1/3/0 unit 0 family bridge vlan-id-list 3000-4000

```

2. Configure interface **ge-1/3/9**:

```

set interfaces ge-1/3/9 description "Connected to BEB1 sangiovese ge-1/3/9"

[edit interfaces]
user@bcb1# set ge-1/3/9 unit 0 family bridge interface-mode trunk
user@bcb1# set ge-1/3/9 unit 0 family bridge vlan-id-list 3000-4000

```

3. Configure interface **ge-2/1/5**:

```

[edit interfaces]
user@bcb1# set ge-2/1/5 description "Connected to BEB4 Cubs ge-1/0/4"
user@bcb1# set ge-2/1/5 unit 0 family bridge interface-mode trunk
user@bcb1# set ge-2/1/5 unit 0 family bridge vlan-id-list 3000-4000

```

4. Configure interface **ge-2/3/0**:

```

[edit interfaces]
user@bcb1# set ge-2/3/0 description "Connected to BEB3 malbec ge-2/3/0"
user@bcb1# set ge-2/3/0 unit 0 family bridge interface-mode trunk
user@bcb1# set ge-2/3/0 unit 0 family bridge vlan-id-list 3000-4000

```

5. Configure interface **ge-2/3/9**:

```

[edit interfaces]
user@bcb1# set ge-2/3/9 description "Connected to BCB2 cabernet ge-2/3/9"
user@bcb1# set ge-2/3/9 unit 0 family bridge interface-mode trunk
user@bcb1# set ge-2/3/9 unit 0 family bridge vlan-id-list 3000-4000

```

Results Check the results of the configuration:

```

user@bcb1> show configuration
interfaces {
  ge-1/3/0 {
    description "Connected to BEB2 barbera ge-1/3/0";
    enable;
    unit 0 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 3000-4000;
      }
    }
  }
  ge-1/3/9 {
    description "Connected to BEB1 sangiovese ge-1/3/9";
    unit 0 {

```

```
        family bridge {
            interface-mode trunk;
            vlan-id-list 3000-4000;
        }
    }
}
ge-2/1/5 {
    description "Connected to BEB4 Cubs ge-1/0/4";
    unit 0 {
        family bridge {
            interface-mode trunk;
            vlan-id-list 3000-4000;
        }
    }
}
ge-2/3/0 {
    description "Connected to BEB3 malbec ge-2/3/0";
    unit 0 {
        family bridge {
            interface-mode trunk;
            vlan-id-list 3000-4000;
        }
    }
}
ge-2/3/9 {
    description "Connected to BCB2 cabernet ge-2/3/9";
    unit 0 {
        family bridge {
            interface-mode trunk;
            vlan-id-list 3000-4000;
        }
    }
}
}
```

Configuring a Routing Instance and Interfaces on BCB2 (Cabernet)

To configure routing instances and interfaces on the MX Series router called BCB2 in a PBBN in the topology shown in Figure 2 on page 19, perform these tasks:

- Configuring a Routing Instance for BCB2 on page 66
- Configuring the Interfaces on BCB2 on page 68

Configuring a Routing Instance for BCB2

CLI Quick Configuration

To quickly configure a routing instance for BCB2, copy the following commands and paste them into the router terminal window:

```
[edit]
set routing-instances pbbn-1 instance-type virtual-switch
set routing-instances pbbn-1 interface ge-1/3/0.0
set routing-instances pbbn-1 interface ge-1/3/9.0
set routing-instances pbbn-1 interface ge-2/1/5.0
set routing-instances pbbn-1 interface ge-2/3/0.0
set routing-instances pbbn-1 interface ge-2/3/9.0
set routing-instances pbbn-1 protocols mstp configuration-name pbbn-1
```

```

set routing-instances pbbn-1 protocols mstp bridge-priority 4k
set routing-instances pbbn-1 protocols mstp interface ge-1/3/0
set routing-instances pbbn-1 protocols mstp interface ge-1/3/9
set routing-instances pbbn-1 protocols mstp interface ge-2/1/5
set routing-instances pbbn-1 protocols mstp interface ge-2/3/0
set routing-instances pbbn-1 protocols mstp interface ge-2/3/9
set routing-instances pbbn-1 bridge-domains elan-bvlan vlan-id 3350
set routing-instances pbbn-1 bridge-domains eline-bvlan vlan-id-list 3150

```

Step-by-Step Procedure

To configure the routing instance for BCB2:

1. Configure the routing instance **pbbn-1** and specify the instance type as **virtual-switch** to provide support for Layer 2 bridging:

```

[edit routing-instances]
user@bcb2# set pbbn-1 instance-type virtual-switch

```

2. Configure the logical interfaces for the PBN routing instance:

```

[edit routing-instances]
user@bcb2# set pbbn-1 interface ge-1/3/0.0
user@bcb2# set pbbn-1 interface ge-1/3/9.0
user@bcb2# set pbbn-1 interface ge-2/1/5.0
user@bcb2# set pbbn-1 interface ge-2/3/0.0
user@bcb2# set pbbn-1 interface ge-2/3/9.0

```

3. Configure MSTP:

```

[edit routing-instances]
user@bcb2# set pbbn-1 protocols mstp configuration-name pbbn-1
user@bcb2# set pbbn-1 protocols mstp bridge-priority 4k
user@bcb2# set pbbn-1 protocols mstp interface ge-1/3/0
user@bcb2# set pbbn-1 protocols mstp interface ge-1/3/9
user@bcb2# set pbbn-1 protocols mstp interface ge-2/1/5
user@bcb2# set pbbn-1 protocols mstp interface ge-2/3/0
user@bcb2# set pbbn-1 protocols mstp interface ge-2/3/9

```

4. Configure the bridge domain **bds**:

```

[edit routing-instances]
user@bcb2# set pbbn-1 bridge-domains elan-bvlan vlan-id 3350
user@bcb2# set pbbn-1 bridge-domains eline-bvlan vlan-id-list 3150

```

Results Check the results of the configuration:

```

user@bcb2> show configuration
routing-instances {
  pbbn-1 {
    instance-type virtual-switch;
    interface ge-1/3/0.0;
    interface ge-1/3/9.0;
    interface ge-2/0/6.0;
    interface ge-2/3/0.0;
    interface ge-2/3/9.0;
    protocols {
      mstp {
        configuration-name pbbn-1;
        bridge-priority 4k;
        interface ge-1/3/0;

```

```

        interface ge-1/3/9;
        interface ge-2/0/6;
        interface ge-2/3/0;
        interface ge-2/3/9;
    }
}
bridge-domains {
    elan-bvlan {
        vlan-id 3350;
    }
    eline-bvlan {
        vlan-id-list 3150;
    }
}
}
}

```

Configuring the Interfaces on BCB2

CLI Quick Configuration

To quickly configure the interfaces on BCB2, copy the following commands and paste them into the router terminal window:

```

[edit]
set interfaces ge-1/3/0 description "Connected to BEB2 barbera ge-1/3/0"
set interfaces ge-1/3/0 enable
set interfaces ge-1/3/0 unit 0 family bridge interface-mode trunk
set interfaces ge-1/3/0 unit 0 family bridge vlan-id-list 3000-4000
set interfaces ge-1/3/9 description "Connected to BEB1 sangiovese ge-1/3/9"
set interfaces ge-1/3/9 unit 0 family bridge interface-mode trunk
set interfaces ge-1/3/9 unit 0 family bridge vlan-id-list 3000-4000
set interfaces ge-2/1/5 description "Connected to BEB4 Cubs ge-1/0/4"
set interfaces ge-2/1/5 unit 0 family bridge interface-mode trunk
set interfaces ge-2/1/5 unit 0 family bridge vlan-id-list 3000-4000
set interfaces ge-2/3/0 description "Connected to BEB3 malbec ge-2/3/0"
set interfaces ge-2/3/0 unit 0 family bridge interface-mode trunk
set interfaces ge-2/3/0 unit 0 family bridge vlan-id-list 3000-4000
set interfaces ge-2/3/9 description "Connected to BCB1 syrah ge-2/3/9"
set interfaces ge-2/3/9 unit 0 family bridge interface-mode trunk
set interfaces ge-2/3/9 unit 0 family bridge vlan-id-list 3000-4000

```

Step-by-Step Procedure

To configure interfaces on BCB2:

1. Configure interface **ge-1/3/0**:

```

[edit interfaces]
user@bcb2# set ge-1/3/0 description "Connected to BEB2 barbera ge-1/3/0"
user@bcb2# set ge-1/3/0 enable
user@bcb2# set ge-1/3/0 unit 0 family bridge interface-mode trunk
user@bcb2# set ge-1/3/0 unit 0 family bridge vlan-id-list 3000-4000

```

2. Configure interface **ge-1/3/9**:

```

set interfaces ge-1/3/9 description "Connected to BEB1 sangiovese ge-1/3/9"

[edit interfaces]
user@bcb2# set ge-1/3/9 unit 0 family bridge interface-mode trunk
user@bcb2# set ge-1/3/9 unit 0 family bridge vlan-id-list 3000-4000

```

3. Configure interface **ge-2/1/5**:

```
[edit interfaces]
user@bcb2# set ge-2/1/5 description "Connected to BEB4 Cubs ge-1/0/4"
user@bcb2# set ge-2/1/5 unit 0 family bridge interface-mode trunk
user@bcb2# set ge-2/1/5 unit 0 family bridge vlan-id-list 3000-4000
```

4. Configure interface **ge-2/3/0**:

```
[edit interfaces]
user@bcb2# set ge-2/3/0 description "Connected to BEB3 malbec ge-2/3/0"
user@bcb2# set ge-2/3/0 unit 0 family bridge interface-mode trunk
user@bcb2# set ge-2/3/0 unit 0 family bridge vlan-id-list 3000-4000
```

5. Configure interface **ge-2/3/9**:

```
[edit interfaces]
user@bcb2# set ge-2/3/9 description "Connected to BCB1 syrah ge-2/3/9"
user@bcb2# set ge-2/3/9 unit 0 family bridge interface-mode trunk
user@bcb2# set ge-2/3/9 unit 0 family bridge vlan-id-list 3000-4000
```

Results Check the results of the configuration:

```
user@bcb2> show configuration
interfaces {
  ge-1/3/0 {
    description "Connected to BEB1 sangiovese ge-1/3/0";
    unit 0 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 3000-4000;
      }
    }
  }
  ge-1/3/9 {
    description "Connected to BEB3 malbec ge-1/3/9";
    unit 0 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 3000-4000;
      }
    }
  }
  ge-2/0/6 {
    unit 0 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 3000-4000;
      }
    }
  }
  ge-2/3/0 {
    description "Connected to BEB2 barbera ge-2/3/0";
    unit 0 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 3000-4000;
      }
    }
  }
}
```

```

}
ge-2/3/9 {
  description "Connected to BCB1 syrah ge-2/3/9";
  unit 0 {
    family bridge {
      interface-mode trunk;
      vlan-id-list 3000-4000;
    }
  }
}
}

```

Verification

To confirm that the configuration is working properly, perform these tasks:

- Verifying E-LINE and E-LAN Service on BEB1 on page 70
- Verifying E-LINE and E-LAN Service on BEB3 on page 72
- Verifying E-LINE and E-LAN Service on BEB4 on page 74
- Verifying E-LINE and E-LAN Service on BCB1 on page 76
- Verifying E-LINE and E-LAN Service on BCB2 on page 77
- Verifying E-LINE and E-LAN Service on ES1 on page 77
- Verifying E-LINE and E-LAN Service on ES3 on page 78
- Verifying E-LINE and E-LAN Service on ES4 on page 78

Verifying E-LINE and E-LAN Service on BEB1

Purpose Verify the E-LINE and E-LAN service configuration in the backbone instance (B-component) on BEB1 and in the remote backbone edge bridge (PBBN).

Action Use the following operational mode commands:

```

user@beb1> show l2-learning backbone-instance
Backbone Routing Instance : pbbn-1, PBBN-ID: 0
Backbone Bridging domain : elan-bvlan, VLAN-ID : 3350

```

```

Flags (P2P -ELINE service,          MP -ELAN service)
M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)

```

ISID	PBN Routing Instance	Provider Bridging Domain	S-VLAN	Flags	Backbone Destination MAC
10400	pbn-1-for-elan	elan-svlans-vlan-1400	1400	M1,MP	01:1e:86:00:28:a0
10300	pbn-1-for-elan	elan-svlans-vlan-1300	1300	M1,MP	01:1e:86:00:28:3c

```

Backbone Routing Instance : pbbn-1, PBBN-ID: 0
Backbone Bridging domain : eline-bvlan, VLAN-ID : 3150

```

```

Flags (P2P -ELINE service,          MP -ELAN service)
M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)

```

ISID	PBN Routing Instance	Provider Bridging Domain	S-VLAN	Flags	Backbone Destination MAC
------	----------------------------	--------------------------------	--------	-------	--------------------------------

```
10100      pbn-1-for-eline  eline-svlans-vlan-2100 2100 M1,P2P 01:1e:86:00:27:74
```

```
user@beb1> show l2-learning provider-instance
```

```
PBN Routing Instance: pbn-1-for-elan
```

```
Flags (P2P -ELINE service,      MP -ELAN service,
      M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)
```

PBN	S-VLAN	ISID	PBBN	B-VLAN	Flags
Bridging			Bridging		
Domain			Domain		
elan-svlans-vlan-1300	1300	10300	elan-bvlan	3350	M1,MP
elan-svlans-vlan-1400	1400	10400	elan-bvlan	3350	M1,MP

```
PBN Routing Instance: pbn-1-for-eline
```

```
Flags (P2P -ELINE service,      MP -ELAN service,
      M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)
```

PBN	S-VLAN	ISID	PBBN	B-VLAN	Flags
Bridging			Bridging		
Domain			Domain		
eline-svlans-vlan-2100	2100	10100	eline-bvlan	3150	M1,P2P

```
user@beb1> show l2-learning remote-backbone-edge-bridge
```

```
Remote backbone edge bridge information per provider backbone bridge network (PBBN)
```

```
RBEB flags (S -Static)
```

```
PBBN Routing instance : pbbn-1
```

RBEB MAC	Time before	Flags
Address	expiry (SS:MS)	
00:1f:12:b8:3f:b0	:	

```
user@beb1> show bridge mac-table
```

```
MAC flags (S -static MAC, D -dynamic MAC,
      SE -Statistics enabled, NM -Non configured MAC)
```

```
Routing instance : pbbn-1
```

```
Bridging domain : elan-bvlan, VLAN : 3350
```

MAC	MAC	Logical
address	flags	interface
00:1f:12:b8:38:11	D	ge-1/3/9.0
00:1f:12:b8:3a:99	D	ge-1/3/9.0
00:21:59:05:37:19	D	ge-1/3/9.0
00:21:59:aa:74:8d	D	ge-1/3/9.0
00:22:83:32:ef:22	D	ge-1/3/9.0

```
MAC flags (S -static MAC, D -dynamic MAC,
      SE -Statistics enabled, NM -Non configured MAC)
```

```
Routing instance : pbbn-1
```

```
Bridging domain : eline-bvlan, VLAN : 3150
```

MAC	MAC	Logical
address	flags	interface
00:1f:12:b8:38:11	D	ge-1/3/9.0
00:1f:12:b8:3f:b0	D	ge-1/3/9.0
00:22:83:32:d8:11	D	ge-1/3/9.0

MAC flags (S -static MAC, D -dynamic MAC,
SE -Statistics enabled, NM -Non configured MAC)

Routing instance : pbn-1-for-elan
Bridging domain : elan-svlans-vlan-1300, ISID : 10300, VLAN : 1300

MAC address	MAC flags	Logical interface	Remote MAC address
00:00:00:00:00:01	D	ge-2/0/0.3	
00:00:00:00:00:02	D	pip0.1	00:21:59:05:37:b0
00:00:02:00:09:01	D	pip0.1	00:21:59:05:37:b0

Routing instance : pbn-1-for-elan
Bridging domain : elan-svlans-vlan-1400, ISID : 10400, VLAN : 1400

MAC address	MAC flags	Logical interface	Remote MAC address
00:16:47:e3:5a:9b	D	pip0.1	00:21:59:05:37:b0
00:00:05:00:00:01	D	ge-2/0/0.4	

Verifying E-LINE and E-LAN Service on BEB3

Purpose Verify the E-LINE and E-LAN service configuration in the backbone instance (B-component) on BEB3 and in the remote backbone edge bridge (PBBN).

Action Use the following operational mode commands:

```
user@beb3> show l2-learning backbone-instance
Backbone Routing Instance : pbbn-1, PBBN-ID: 0
Backbone Bridging domain : elan-bvlan, VLAN-ID : 3350
```

Flags (P2P -ELINE service, MP -ELAN service)
M1 -Many svlans to 1 isid, O1 -One svlan to 1 isid)

ISID	PBN Routing Instance	Provider Bridging Domain	S-VLAN	Flags	Backbone Destination MAC
10400	pbn-2-for-elan	elan-svlans-vlan-1400	1400	M1,MP	01:1e:86:00:28:a0
10300	pbn-2-for-elan	elan-svlans-vlan-1300	1300	M1,MP	01:1e:86:00:28:3c

```
user@beb3> show l2-learning provider-instance
PBN Routing Instance: pbn-2-for-elan
Flags (P2P -ELINE service, MP -ELAN service,
M1 -Many svlans to 1 isid, O1 -One svlan to 1 isid)
```

PBN Bridging Domain	S-VLAN	ISID	PBBN Bridging Domain	B-VLAN	Flags
elan1-svlan	1300	10300			
elan2-svlan	1400	10400	elan-bvlan	3350	M1,MP

```
user@beb3> show l2-learning remote-backbone-edge-bridge
Remote backbone edge bridge information per provider backbone bridge network (PBBN)
```

RBEB flags (S -Static)

PBBN Routing instance : pbbn-1

RBEB MAC Address	Time before expiry (SS:MS)	Flags
00:1f:12:b8:3f:b0	770 :502	
00:21:59:aa:7f:b0	180 :503	

user@beb3> show bridge mac-table

MAC flags (S -static MAC, D -dynamic MAC,
SE -Statistics enabled, NM -Non configured MAC)

Routing instance : pbbn-1
 Bridging domain : elan-bvlan, VLAN : 3350

MAC address	MAC flags	Logical interface
00:1f:12:b8:38:11	D	ge-2/3/0.0
00:21:59:aa:77:19	D	ge-2/3/0.0
00:21:59:aa:78:11	D	ge-2/3/0.0

MAC flags (S -static MAC, D -dynamic MAC,
SE -Statistics enabled, NM -Non configured MAC)

Routing instance : pbn-2-for-elan
 Bridging domain : elan1-svlan, ISID : 10300, VLAN : 1300

MAC address	MAC flags	Logical interface	Remote MAC address
00:00:00:00:00:01	D	pip0.1	00:21:59:aa:7f:b0
00:00:00:00:00:02	D	ge-2/0/0.3	
00:00:02:00:09:01	D	ge-2/0/0.3	

Routing instance : pbn-2-for-elan
 Bridging domain : elan2-svlan, ISID : 10400, VLAN : 1400

MAC address	MAC flags	Logical interface	Remote MAC address
00:16:47:e3:5a:9b	D	ge-2/0/0.4	
00:00:05:00:00:01	D	pip0.1	00:21:59:aa:7f:b0

Meaning Both operational mode commands **show l2-learning backbone-instance** and **show l2-learning provider-instance** show the B-component and I-component routing instances configured. The command **show l2-learning backbone-instance** also shows all the mappings from the B-component routing instance to the I-component routing instances. Likewise, the command **show l2-learning provider-instance** shows the mapping from the I-component routing instance to the corresponding B-component routing instance. PBBN routing instance **pbbn-1** contains the bridging domain **elan-bvlan**. The command **show l2-learning remote-backbone-edge-bridge** shows all remote BEB MACs.

The field **Time before expiry** shows the expiring timer:

- If a timer value is displayed, it means that C-MACS are not learned behind this remote BEB.
- If a timer value is *not* displayed, it means that C-MACS are learned behind this remote BEB.

To display the learned C-MACs behind the remote BEB, issue the command **show bridge mac-table**. The command will also show that for routing instance **ppbn-2-for-elan**, learning occurs through the pseudo-logical interface **pip0.1**.

Verifying E-LINE and E-LAN Service on BEB4

Purpose Verify the E-LINE and E-LAN service configuration in the backbone instance (B-component) on BEB4 and in the remote backbone edge bridge (PBBN).

Action Use the following operational mode commands:

```

user@beb4> show l2-learning backbone-instance
Backbone Routing Instance : pbbn-1, PBBN-ID: 0
Backbone Bridging domain : elan-bvlan, VLAN-ID : 3350

Flags (P2P -ELINE service,          MP -ELAN service)
      M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)

ISID      PBN          Provider          S-VLAN  Flags  Backbone
          Routing      Bridging              Destination
          Instance     Domain
10400     pbn-3-for-elan elan-svlans-vlan-1400 1400 01,MP  01:1e:86:00:28:a0
10300     pbn-3-for-elan elan-svlans-vlan-1300 1300 M1,MP  01:1e:86:00:28:3c

Backbone Routing Instance : pbbn-1, PBBN-ID: 0
Backbone Bridging domain : eline-bvlan, VLAN-ID : 3150

Flags (P2P -ELINE service,          MP -ELAN service)
      M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)

ISID      PBN          Provider          S-VLAN  Flags  Backbone
          Routing      Bridging              Destination
          Instance     Domain
10200     pbn-3-for-eline eline-svlans-vlan-1200 1200 M1,P2P 01:1e:86:00:27:d8
10100     pbn-3-for-eline eline-svlans-vlan-2100 2100 M1,P2P 01:1e:86:00:27:74

user@beb4> show l2-learning provider-instance
PBN Routing Instance: pbn-3-for-elan
Flags (P2P -ELINE service,          MP -ELAN service,
      M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)

PBN          S-VLAN  ISID      PBBN          B-VLAN  Flags
Bridging
Domain
elan-svlans-vlan-1300 1300 10300     elan-bvlan    3350    M1,MP
elan-svlans-vlan-1400 1400 10400     elan-bvlan    3350    01,MP

PBN Routing Instance: pbn-3-for-eline
Flags (P2P -ELINE service,          MP -ELAN service,
      M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)

PBN          S-VLAN  ISID      PBBN          B-VLAN  Flags
Bridging
Domain
eline-svlans-vlan-1200 1200 10200     eline-bvlan    3150    M1,P2P
eline-svlans-vlan-2100 2100 10100     eline-bvlan    3150    M1,P2P

user@beb4> show l2-learning remote-backbone-edge-bridge

Remote backbone edge bridge information per provider backbone bridge network

```

(PBBN)

RBEB flags (S -Static)

PBBN Routing instance : pbbn-1

RBEB MAC Address	Time before expiry (SS:MS)	Flags
00:21:59:aa:7f:b0	:	
00:22:83:32:df:b0	:	

user@beb4> show bridge mac-table

MAC flags (S -static MAC, D -dynamic MAC,
SE -Statistics enabled, NM -Non configured MAC)

Routing instance : pbbn-1

Bridging domain : elan-bvlan, VLAN : 3350

MAC address	MAC flags	Logical interface
00:21:59:aa:75:d4	D	ge-1/0/4.0
00:21:59:aa:78:11	D	ge-1/0/4.0

MAC flags (S -static MAC, D -dynamic MAC,
SE -Statistics enabled, NM -Non configured MAC)

Routing instance : pbbn-1

Bridging domain : eline-bvlan, VLAN : 3150

MAC address	MAC flags	Logical interface
00:21:59:aa:75:d4	D	ge-1/0/4.0
00:21:59:aa:78:11	D	ge-1/0/4.0
00:21:59:aa:7f:b0	D	ge-1/0/4.0
00:22:83:32:d8:11	D	ge-1/0/4.0
00:22:83:32:df:b0	D	ge-1/0/4.0

MAC flags (S -static MAC, D -dynamic MAC,
SE -Statistics enabled, NM -Non configured MAC)

Routing instance : pbn-1-for-elan

Bridging domain : elan-svlans-vlan-1300, ISID : 10300, VLAN : 1300

MAC address	MAC flags	Logical interface	Remote MAC address
00:00:00:00:00:01	D	pip0.1	00:21:59:aa:7f:b0
00:00:00:00:00:02	D	pip0.1	00:21:59:05:37:b0
00:00:02:00:09:01	D	pip0.1	00:21:59:05:37:b0

Routing instance : pbn-1-for-elan

Bridging domain : elan-svlans-vlan-1400, ISID : 10400, VLAN : 1400

MAC address	MAC flags	Logical interface	Remote MAC address
00:16:47:e3:5a:9b	D	pip0.1	00:21:59:05:37:b0
00:00:05:00:00:01	D	pip0.1	00:21:59:aa:7f:b0

Meaning Both operational mode commands **show l2-learning backbone-instance** and **show l2-learning provider-instance** show the B-component and I-Component routing instances configured. The command **show l2-learning backbone-instance** also shows all the mappings from the B-component routing instance to the I-component routing instances.

Likewise, the command **show l2-learning provider-instance** shows the mapping from the I-component routing instance to the corresponding B-component routing instance. PBBN routing instance **pbbn-1** contains the bridging domain **elan-bvlan**. The command **show l2-learning remote-backbone-edge-bridge** shows all remote BEB MACs.

The field **Time before expiry** shows the expiring timer:

- If a timer value is displayed, it means that C-MACS are not learned behind this remote BEB.
- If a timer value is *not* displayed, it means that C-MACS are learned behind this remote BEB.

To display the learned C-MACs behind the remote BEB, issue the command **show bridge mac-table**. The command will also show that for routing instance **pbn-3-for-eline**, learning occurs through the pseudo-logical interface **pip0.0**.

Verifying E-LINE and E-LAN Service on BCB1

Purpose Verify the E-LINE and E-LAN service configuration on BCB1.

Action Use the following operational mode commands:

```
user@bcb1> show bridge mac-table
```

```
MAC flags (S -static MAC, D -dynamic MAC,
           SE -Statistics enabled, NM -Non configured MAC)
```

```
Routing instance : pbbn-1
Bridging domain : elan-bvlan, VLAN : 3350
  MAC      MAC      Logical
address    flags     interface
00:1f:12:b8:38:11 D      ge-2/1/5.0
00:1f:12:b8:3a:99 D      ge-2/1/5.0
00:21:59:05:37:19 D      ge-2/3/0.0
00:21:59:aa:78:11 D      ge-1/3/9.0
00:21:59:aa:7c:8d D      ge-1/3/9.0
00:22:83:32:ef:22 D      ge-2/3/9.0
```

```
MAC flags (S -static MAC, D -dynamic MAC,
           SE -Statistics enabled, NM -Non configured MAC)
```

```
Routing instance : pbbn-1
Bridging domain : eline-bvlan-vlan-3150, VLAN : 3150
  MAC      MAC      Logical
address    flags     interface
00:1f:12:b8:38:11 D      ge-2/1/5.0
00:1f:12:b8:3f:b0 D      ge-2/1/5.0
00:21:59:aa:78:11 D      ge-1/3/9.0
00:21:59:aa:7f:b0 D      ge-1/3/9.0
00:22:83:32:d8:11 D      ge-1/3/0.0
00:22:83:32:df:b0 D      ge-1/3/0.0
```

Meaning The operational mode command **show bridge mac-table** displays the learned backbone MACs in the PBBN transport network. It also shows the two bridging domains **elan-bvlan**

and **eline-bvlan** under the **pbbn-1** routing instance. Notice that C-MACs are not learned on BCB1.

Verifying E-LINE and E-LAN Service on BCB2

Purpose Verify the E-LINE and E-LAN service configuration on BCB2.

Action Use the following operational mode commands:

```
user@bcb1> show bridge mac-table
```

```
MAC flags (S -static MAC, D -dynamic MAC,
           SE -Statistics enabled, NM -Non configured MAC)
```

```
Routing instance : pbbn-1
Bridging domain : elan-bvlan, VLAN : 3350
MAC              MAC      Logical
address          flags   interface
00:1f:12:b8:38:11 D      ge-2/3/9.0
00:21:59:aa:77:22 D      ge-2/3/9.0
```

```
MAC flags (S -static MAC, D -dynamic MAC,
           SE -Statistics enabled, NM -Non configured MAC)
```

```
Routing instance : pbbn-1
Bridging domain : eline-bvlan-vlan-3150, VLAN : 3150
MAC              MAC      Logical
address          flags   interface
00:1f:12:b8:38:11 D      ge-2/3/9.0
00:1f:12:b8:3f:b0 D      ge-2/3/9.0
00:22:83:32:d8:11 D      ge-2/3/9.0
00:22:83:32:df:b0 D      ge-2/3/9.0
```

Meaning The operational mode command **show bridge mac-table** displays the learned backbone MACs in the PBBN transport network. It also shows the two bridging domains **elan-bvlan** and **eline-bvlan** under the **pbbn-1** routing instance. Notice that C-MACs are not learned on BCB2.

Verifying E-LINE and E-LAN Service on ES1

Purpose Verify the E-LINE and E-LAN service configuration on ES1.

Action Use the following operational mode commands:

```
user@es1> show bridge mac-table
```

```
Routing instance : cust-1
Bridging domain : bds-vlan-0200, VLAN : 200
```

```
MAC              MAC      Logical
address          flags   interface
00:EE:01:00:02:00 D      ge-1/1/0.0
00:EE:04:00:02:00 D      ge-1/0/0.2
```

```
Routing instance : cust-1
Bridging domain : bds-vlan-0300, VLAN : 300
```

MAC address	MAC flags	Logical interface
00:00:00:00:00:01	D	ge-1/1/0.0
00:00:00:00:00:02	D	ge-2/0/0.3
00:00:02:00:09:01	D	ge-2/0/0.3

Routing instance : cust-1
Bridging domain : bds-vlan-0400, VLAN : 400

MAC address	MAC flags	Logical interface
00:00:05:00:00:01	D	ge-1/1/0.0
00:16:47:e3:5a:9b	D	ge-2/0/0.4

Meaning The operational mode command **show bridge mac-table** displays the routing instance **cust-1** and the associated bridging domains and MAC addresses learned in the bridging domain.

Verifying E-LINE and E-LAN Service on ES3

Purpose Verify the E-LINE and E-LAN service configuration on ES3.

Action Use the following operational mode commands:

```
user@es3> show bridge mac-table
```

Routing instance : cust-1
Bridging domain : bds-vlan-0300, VLAN : 300

MAC address	MAC flags	Logical interface
00:00:00:00:00:01	D	ge-2/0/0.3
00:00:00:00:00:02	D	ge-1/1/0.0
00:00:02:00:09:01	D	ge-1/1/0.0

Routing instance : cust-1
Bridging domain : bds-vlan-0400, VLAN : 400

MAC address	MAC flags	Logical interface
00:00:05:00:00:01	D	ge-2/0/0.4
00:16:47:e3:5a:9b	D	ge-1/1/0.0

Meaning The operational mode command **show bridge mac-table** displays the routing instance **cust-1** and the associated bridging domain and MAC addresses learned in the bridging domain.

Verifying E-LINE and E-LAN Service on ES4

Purpose Verify the E-LINE and E-LAN service configuration on ES4.

Action Use the following operational mode commands:

```
user@es4> show bridge mac-table
Routing instance : cust-1
Bridging domain : bds-vlan-0200, VLAN : 200
```

MAC address	MAC flags	Logical interface
00:EE:01:00:02:00	D	ge-1/0/0.2
00:EE:04:00:02:00	D	ge-1/0/3.0

```
Routing instance : cust-1
Bridging domain : bds-vlan-0300, VLAN : 300
```

MAC address	MAC flags	Logical interface
00:00:00:00:00:01	D	ge-1/0/0.3
00:00:00:00:00:02	D	ge-1/0/0.3
00:00:02:00:09:01	D	ge-1/0/0.3

```
Routing instance : cust-1
Bridging domain : bds-vlan-0400, VLAN : 400
```

MAC address	MAC flags	Logical interface
00:00:05:00:00:01	D	ge-1/0/0.4
00:16:47:e3:5a:9b	D	ge-1/0/0.4

Meaning The operational mode command **show bridge mac-table** displays the routing instance **cust-1** and the associated bridging domains and MAC addresses learned in each bridging domain.

Related Documentation

- Understanding Provider Backbone Bridging on MX Series Routers on page 3
- Example: Configuring CoS for a PBB Network on MX Series Routers on page 79

Example: Configuring CoS for a PBB Network on MX Series Routers

The IEEE 802.1ah provider backbone bridge (PBB) is a new standard for connecting and interoperating with provider backbone networks. Configure class-of-service (CoS) on your PBB to manage traffic to assure that service-level agreements (SLAs) are supported with the correct amount of bandwidth and quality of service. Using CoS, you can categorize traffic into classes and provide various levels of throughput and packet loss. This is especially important for traffic that is sensitive to jitter and delay, such as voice traffic.

This example describes how to configure and apply a basic CoS configuration to manage customer traffic:

- Requirements on page 80
- Overview and Topology on page 80
- Configuring CoS on an MX Series Router on page 84
- Verification on page 95

Requirements

This example uses the following hardware and software components:

- JUNOS Release 10.0 or later for MX Series routers
- One MX Series router in a PBB configuration

Before you configure the switch for CoS, be sure you have:

- Installed your MX Series router.
- Performed the initial router configuration.
- Configured basic PBB in the topology, and verified that traffic is flowing in the topology. For information about configuring PBB, see ““Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers” on page 17.”

Overview and Topology

Figure 4 on page 80 displays the network topology for this example. Four service paths (**eline1**, **eline2**, **elan1**, and **elan2**) are configured on ES4. Ingress traffic is entering ES4 through interface **ge-1/0/3** and egressing through interface **ge-1/0/0**. Class of service is applied only to ES4 since it is at the edge.

Figure 4: Network Topology for CoS for Provider Backbone Bridging

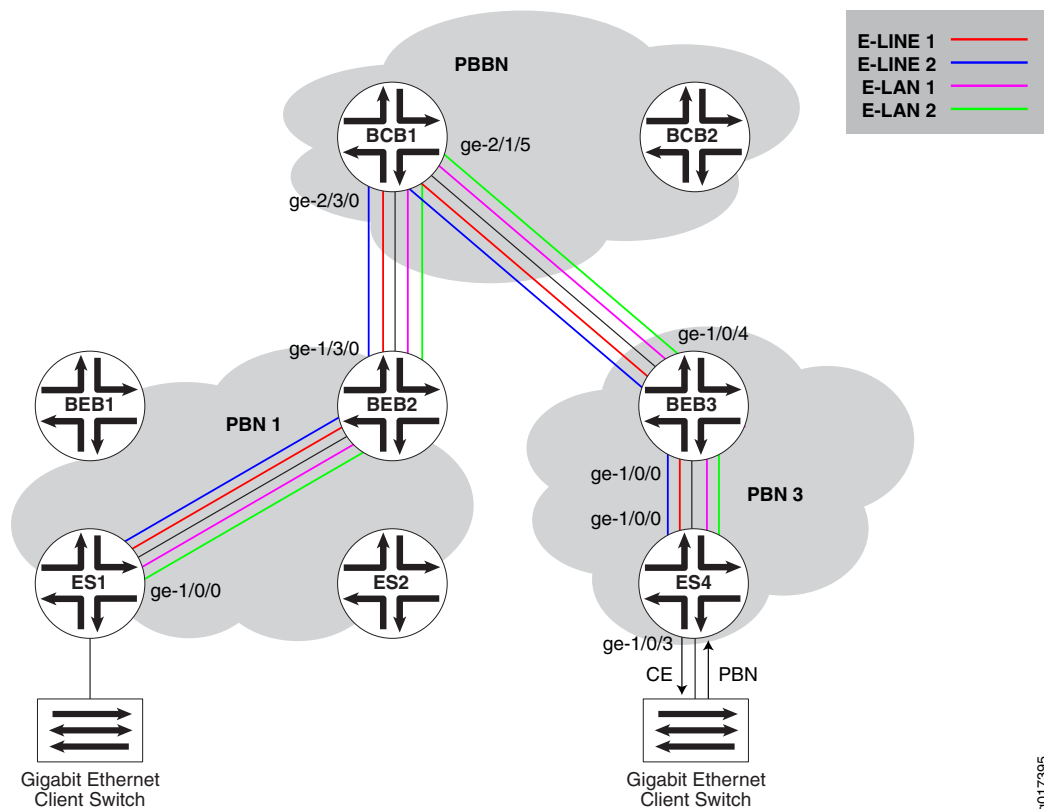


Figure 5 on page 81 shows the relationship of the forwarding classes that are used in this example. The three forwarding classes are **Voice-EF**, **VPN-PR-DATA**, and **INET-BEST-EFFORT**. These forwarding classes are associated with E-LINE 1, E-LINE 2, E-LAN 1, and E-LAN 2.

E-LINE 1 and E-LINE 2 are bundled into interface set **vuni-set1**. E-LAN 1 and E-LAN 2 are bundled into interface set **vuni-set2**. Interface sets provide the same function as a virtual UNI in the carrier Ethernet world. An interface set is used to group a set of logical interfaces under a port and then transport packets through the member logical interface.

Figure 5: Egress Shaping

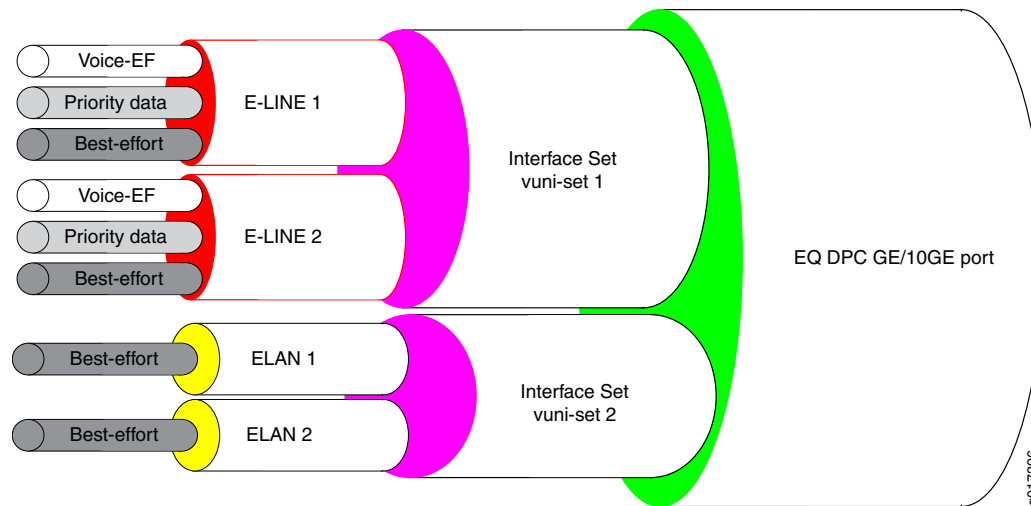


Table 9 on page 81 shows the services, traffic rates, and the egress SLA that are configured in this example.

Table 9: Egress SLA Enforcement

Service	Traffic Rate Applied for Example	Egress SLA
eline1 from ES1 → ES4	Physical interface ge-1/0/3 and interface sets vuni-set1 and interface-set2	At egress, shaping (using schedulers) is configured at the [edit interfaces interface-set] hierarchy level. The scheduler ensures that voice and data traffic is given a higher priority to protect these traffic classes during congestion.
<ul style="list-style-type: none"> VOICE-EF forwarding class is used for voice VPN-PR-DATA forwarding class is used for priority data VOICE-EF forwarding class 	<ul style="list-style-type: none"> 10 Mbps for voice 40 Mbps for priority 40 Mbps for best effort 	<ul style="list-style-type: none"> 10 Mbps for voice 40 Mbps for priority 25 Mbps for best effort
<p>NOTE: Traffic is limited to 100 Mbps due to the physical restrictions of the interface on which it travels.</p>		

Table 9: Egress SLA Enforcement (*continued*)

Service	Traffic Rate Applied for Example	Egress SLA
eline2 from ES1—> ES4	60 Mbps	25 Mbps
<ul style="list-style-type: none"> INET-BEST-EFFORT forwarding class 		<p>NOTE: After scheduling voice and data traffic, the remaining 50 Mbps is shared by the best effort traffic in eline1 and eline2.</p>

Ingress traffic travels into the ES4 router and through the network to the ES1 router. Figure 6 on page 82 shows the three levels of service that will be entering E-LINE 1 on ES4. Voice, priority data, and best-effort traffic will be policed in different ways. Voice traffic can receive 15 Mbps, priority data can receive 50 Mbps, and best-effort traffic isn't policed at all—it operates on what bandwidth is left after servicing voice and priority traffic.

Figure 6: Achieving Ingress SLA by Applying Policers for Each Traffic Class

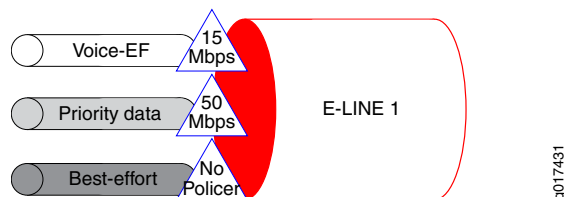


Table 10 on page 82 provides more information about the services, traffic rates, and the ingress SLA that are configured in this example.

Table 10: Ingress SLA Enforcement

Service	Traffic Rate Applied for Example	Ingress SLA
eline1 to ES4 —> ES1	Traffic is entering the topology at the following rates:	Traffic will be policed at the following rates:
<ul style="list-style-type: none"> VOICE-EF forwarding class is used for voice and uses the IEEE 802.1P classifier P-Bit 7 VPN-PR-DATA forwarding class is used for priority data the IEEE 802.1P classifier P-Bit 4 INET-BEST-EFFORT forwarding class is used for best effort traffic and uses the IEEE 802.1P classifier P-Bit 0 	<ul style="list-style-type: none"> 10 Mbps for voice 70 Mbps for priority 40 Mbps for best effort 	<ul style="list-style-type: none"> 15 Mbps for voice 50 Mbps for priority No policer for best effort—all 40 Mbps traffic is accepted
eline2 to ES4 —> ES1	60 Mbps	No policer—all 60 Mbps traffic is accepted
<ul style="list-style-type: none"> INET-BEST-EFFORT forwarding class and uses the IEEE 802.1P classifier P-Bit 0 		

Table 11 on page 83 shows the different properties that will be configured for CoS on MX Series router ES4.

Table 11: Components of the Topology for Configuring CoS on MX Series Routers

Property	Settings
Interface sets	<p>The following interface sets are configured to transport customer traffic:</p> <ul style="list-style-type: none"> Interface set vuni-set1 carries eline1 on logical interface ge-1/0/3.1 and eline2 on logical interface ge-1/0/3.2. Interface set vuni-set2 carries elan1 on logical interface ge-1/0/3.3 and elan2 on logical interface ge-1/0/3.4.
Forwarding classes	<p>The following forwarding classes are configured:</p> <ul style="list-style-type: none"> INET-BEST-EFFORT, queue number 0 VPN-PR-DATA, 50 Mbps limit, queue number 1 VOICE-EF, 15 Mbps limit, queue number 2
Firewall filters	<p>The following firewall filters are configured:</p> <ul style="list-style-type: none"> SERVICE1 SERVICE2 SERVICE3
Schedule map and schedulers	<p>The schedule map EVC contains the following schedulers:</p> <ul style="list-style-type: none"> BE is used for the forwarding class INET-BEST-EFFORT PD is used for the forwarding class VPN-PR-DATA EF is used for the forwarding class VOICE-EF <p>The schedulers are markings that can be used by the next router to reprioritize traffic.</p>
Rewrite rules	<p>Rewrite rules (one for 802.1p class packets and one for 802.1ad class packets) are used for conforming and non-conforming traffic. If low, it goes out code-point 010. If high (which means it violated the SLA of the service provider), it goes out code-point 110.</p>

In provider backbone networks, CoS information is mapped and carried across the network using behavior aggregate (BA) classifiers; specifically, 3 bits of priority code point (PCP) and 1 bit of DEI (drop eligibility indicator). Classifiers provide the capability to classify, map, and rewrite (mark) the PCP+DEI bits from one tag to another across the carrier Ethernet network.

In the following example, you will configure and apply basic CoS features to customer traffic entering interface **ge-1/0/3** and exiting interface **ge-1/0/0** on the ES4 router. Traffic is mapped to forwarding classes **INET-BEST-EFFORT**, **VPN-PR-DATA**, or **VOICE-EF**. Bandwidth is limited to 50 Mbps for forwarding classes **INET-BEST-EFFORT** and **VPN-PR-DATA**. Bandwidth is limited to 15 Mbps for forwarding class **VOICE-EF**. Rewrite rules are configured for each E-LINE to add marking that can be used by the next router (here, BEB3) to reprioritize traffic from a particular code point. The forwarding classes are marked with code points so that they all “agree” to a specific CoS policy.

CoS is only applied on the ES4 because it is located at the customer edge.

Configuring CoS on an MX Series Router

- Configuring CoS on ES4 on page 84

Configuring CoS on ES4

CLI Quick Configuration

To quickly configure CoS, copy the following commands and paste them into the router terminal window:

```
[edit]
set class-of-service forwarding-classes class INET-BEST-EFFORT queue-num 0
set class-of-service forwarding-classes class VPN-PR-DATA queue-num 1
set class-of-service forwarding-classes class VOICE-EF queue-num 2
set class-of-service forwarding-classes class UNUSED queue-num 3
set class-of-service classifiers ieee-802.1 802p_class forwarding-class INET-BEST-EFFORT
loss-priority low code-points 000
set class-of-service classifiers ieee-802.1 802p_class forwarding-class INET-BEST-EFFORT
loss-priority low code-points 001
set class-of-service classifiers ieee-802.1 802p_class forwarding-class INET-BEST-EFFORT
loss-priority high code-points 010
set class-of-service classifiers ieee-802.1 802p_class forwarding-class INET-BEST-EFFORT
loss-priority high code-points 011
set class-of-service classifiers ieee-802.1 802p_class forwarding-class VPN-PR-DATA loss-priority
low code-points 100
set class-of-service classifiers ieee-802.1 802p_class forwarding-class VPN-PR-DATA loss-priority
high code-points 101
set class-of-service classifiers ieee-802.1 802p_class forwarding-class VOICE-EF loss-priority
low code-points 111
set class-of-service classifiers ieee-802.1 802p_class forwarding-class VOICE-EF loss-priority
high code-points 110
set class-of-service traffic-control-profiles EVC:SERVICE scheduler-map EVC
set class-of-service traffic-control-profiles EVC:SERVICE shaping-rate 20m
set class-of-service traffic-control-profiles VUNI:SERVICE scheduler-map EVC
set class-of-service traffic-control-profiles VUNI:SERVICE shaping-rate 100m
set class-of-service traffic-control-profiles VUNI:SERVICE guaranteed-rate 100m
set class-of-service interfaces interface-set vuni-set1 output-traffic-control-profile VUNI:SERVICE
set class-of-service interfaces interface-set vuni-set2 output-traffic-control-profile VUNI:SERVICE
set class-of-service interfaces ge-1/0/0 unit 1 classifiers ieee-802.1 802p_class
set class-of-service interfaces ge-1/0/0 unit 1 rewrite-rules ieee-802.1 802p_rwrule
set class-of-service interfaces ge-1/0/0 unit 2 classifiers ieee-802.1 802p_class set ge-1/0/0 unit
2 rewrite-rules ieee-802.1 802p_rwrule
set class-of-service interfaces ge-1/0/0 unit 3 forwarding-class INET-BEST-EFFORT
set class-of-service interfaces ge-1/0/0 unit 4 forwarding-class INET-BEST-EFFORT
set class-of-service interfaces ge-1/0/3 unit 1 output-traffic-control-profile EVC:SERVICE
set class-of-service interfaces ge-1/0/3 unit 1 classifiers ieee-802.1 802p_class
set class-of-service interfaces ge-1/0/3 unit 1 rewrite-rules ieee-802.1 802p_rwrule
set class-of-service interfaces ge-1/0/3 unit 2 classifiers ieee-802.1 802p_class
set class-of-service interfaces ge-1/0/3 unit 2 rewrite-rules ieee-802.1 802p_rwrule
set class-of-service interfaces ge-1/0/3 unit 3 forwarding-class INET-BEST-EFFORT
set class-of-service interfaces ge-1/0/3 unit 4 forwarding-class INET-BEST-EFFORT
set class-of-service rewrite-rules ieee-802.1 802p_rwrule forwarding-class VPN-PR-DATA
loss-priority low code-point 010
set class-of-service rewrite-rules ieee-802.1 802p_rwrule forwarding-class VPN-PR-DATA
loss-priority high code-point 110
set class-of-service rewrite-rules ieee-802.1 802p_rwrule forwarding-class VOICE-EF loss-priority
low code-point 011
set class-of-service rewrite-rules ieee-802.1 802p_rwrule forwarding-class VOICE-EF loss-priority
high code-point 111
```

```

set class-of-service rewrite-rules ieee-802.1 802p_rwrule forwarding-class INET-BEST-EFFORT
loss-priority low code-point 100
set class-of-service rewrite-rules ieee-802.1 802p_rwrule forwarding-class INET-BEST-EFFORT
loss-priority high code-point 000
set class-of-service scheduler-maps EVC forwarding-class INET-BEST-EFFORT scheduler BE
set class-of-service scheduler-maps EVC forwarding-class VPN-PR-DATA scheduler PD
set class-of-service scheduler-maps EVC forwarding-class VOICE-EF scheduler EF
set class-of-service schedulers BE transmit-rate percent 30
set class-of-service schedulers BE buffer-size percent 30
set class-of-service schedulers BE priority low set PD transmit-rate percent 40
set class-of-service schedulers PD buffer-size percent 40
set class-of-service schedulers PD priority high
set class-of-service schedulers EF transmit-rate percent 10
set class-of-service schedulers EF buffer-size percent 10
set class-of-service schedulers EF priority strict-high deactivate class-of-service
set firewall policer 15m-pol if-exceeding bandwidth-limit 15m set policer 15m-pol if-exceeding
burst-size-limit 60k
set firewall policer 15m-pol then discard set policer 50m-pol if-exceeding bandwidth-limit 50m
set firewall relative set policer 50m-pol if-exceeding burst-size-limit 150k set policer 50m-pol
then discard
set firewall policer 30m-pol if-exceeding bandwidth-limit 30m
set firewall policer 30m-pol if-exceeding burst-size-limit 45k
set firewall policer 30m-pol then discard
set firewall policer 40m-pol if-exceeding bandwidth-limit 40m
set firewall policer 40m-pol if-exceeding burst-size-limit 45k
set firewall policer 40m-pol then discard
set firewall family bridge filter SERVICE1 interface-specific
set firewall family bridge filter SERVICE1 term Voice_bw_prof from forwarding-class VOICE-EF
set firewall family bridge filter SERVICE1 term Voice_bw_prof then policer 15m-pol
set firewall family bridge filter SERVICE1 term Voice_bw_prof then count srv1_voice_cnt
set firewall family bridge filter SERVICE1 term VPN_pd_bw_prof from forwarding-class
VPN-PR-DATA
set firewall family bridge filter SERVICE1 term VPN_pd_bw_prof then policer 50m-pol
set firewall family bridge filter SERVICE1 term VPN_pd_bw_prof then count srv1_vpn_cnt
set firewall family bridge filter SERVICE1 term ANY then count srv1_inet_cnt
set firewall family bridge filter SERVICE2 term Voice_sw_prof from forwarding-class VOICE-EF
set firewall family bridge filter SERVICE2 term Voice_sw_prof then policer 40m-pol
set firewall family bridge filter SERVICE2 term Voice_sw_prof then count srv2_ef_cnt
set firewall family bridge filter SERVICE2 term PR_DATA_policer from forwarding-class
VPN-PR-DATA
set firewall family bridge filter SERVICE2 term PR_DATA_policer then policer 30m-pol
set firewall family bridge filter SERVICE2 term PR_DATA_policer then count srv2_pr_data_cnt
set firewall family bridge filter SERVICE2 term ANY then count srv2_be_cnt
set firewall family bridge filter SERVICE3 term ANY then count srv3_cnt
set firewall family bridge filter SERVICE3 term ANY then forwarding-class INET-BEST-EFFORT

```

Step-by-Step Procedure

To configure and apply CoS:

1. Configure one-to-one mapping between forwarding classes and queues:

```

[edit class-of-service forwarding-classes]
user@es4# set class INET-BEST-EFFORT queue-num 0
user@es4# set class VPN-PR-DATA queue-num 1
user@es4# set class VOICE-EF queue-num 2
user@es4# set class VOICE-EF priority high
user@es4# set class UNUSED queue-num 3

```

2. Define the firewall filter **SERVICE1** and use the statement **interface-specific** to create a specific SLA so that the ELINE or EVC will receive its own policy and each interface will its own copy of the rule—without this, the rule is shared:

- ```
[edit firewall family bridge]
user@es4# set filter SERVICE1 interface-specific
```
3. Define the terms **Voice\_bw\_prof**, **Voice\_pd\_bw\_prof**, **Voice\_bw\_prof**, **VPN\_pd\_bw\_prof**, and **ANY** for the **SERVICE1** filter:
 

```
[edit firewall family bridge filter SERVICE1]
user@es4# set term Voice_bw_prof then policer 15m-pol
user@es4#set term Voice_bw_prof then count srv1_voice_cnt
user@es4#set term VPN_pd_bw_prof from forwarding-class VPN-PR-DATA
user@es4#set term Voice_bw_prof from forwarding-class VOICE-EF
user@es4# set term VPN_pd_bw_prof then policer 50m-pol
user@es4#set term VPN_pd_bw_prof then count srv1_vpn_cnt
user@es4# set term ANY then count srv1_inet_cnt
```
  4. Define the firewall filter **SERVICE2**:
 

```
[edit firewall family bridge]
user@es4# set filter SERVICE2
```
  5. Define the terms **Voice\_sw\_prof**, **PR\_DATA\_policer**, and **ANY** for the **SERVICE2** filter:
 

```
[edit firewall family bridge filter SERVICE2]
user@es4# Voice_sw_prof from forwarding-class VOICE-EF
user@es4# set term Voice_sw_prof then policer 40m-pol
user@es4# set term Voice_sw_prof then count srv2_ef_cnt
user@es4# set term PR_DATA_policer from forwarding-class VPN-PR-DATA
user@es4#set term PR_DATA_policer then policer 30m-pol
user@es4#set term PR_DATA_policer then count srv2_pr_data_cnt
user@es4#set term ANY then count srv2_be_cnt
```
  6. Define the firewall filter **SERVICE3**:
 

```
[edit firewall family bridge]
user@es4# set filter SERVICE3
```
  7. Define the term **ANY** for the **SERVICE3** filter:
 

```
[edit firewall family bridge filter SERVICE3]
user@es4# set term ANY then count srv3_cnt
user@es4# set term ANY then forwarding-class INET-BEST-EFFORT
```
  8. Apply the firewall filter **SERVICE1** and **SERVICE2** as an input filter to the interfaces for the servers hosting services:
 

```
[edit interfaces]
user@es4# set ge-1/0/3 unit 1 family bridge filter input SERVICE1
user@es4# set ge-1/0/3 unit 2 family bridge filter input SERVICE2
```
  9. Configure classifiers to classify the packets in the customer's VPN:
 

```
[edit class-of-service classifiers]
user@es4# set ieee-802.1802p_class forwarding-class INET-BEST-EFFORT loss-priority
low code-points 000
user@es4# set ieee-802.1802p_class forwarding-class INET-BEST-EFFORT loss-priority
low code-points 001
user@es4# set ieee-802.1802p_class forwarding-class INET-BEST-EFFORT loss-priority
high code-points 010
user@es4# set ieee-802.1802p_class forwarding-class INET-BEST-EFFORT loss-priority
high code-points 011
user@es4# set ieee-802.1802p_class forwarding-class VPN-PR-DATA loss-priority low
code-points 100
```

```

user@es4# set ieee-802.1 802p_class forwarding-class VPN-PR-DATA loss-priority high
code-points 101
user@es4# set ieee-802.1 802p_class forwarding-class VOICE-EF loss-priority low
code-points 111
user@es4# set ieee-802.1 802p_class forwarding-class VOICE-EF loss-priority high
code-points 110

```

10. Configure policers to limit traffic of a certain class to a specified bandwidth and burst size:

```

[edit firewall]
user@es4# set policer 15m-pol if-exceeding bandwidth-limit 15m
user@es4# set policer 15m-pol if-exceeding burst-size-limit 60k
user@es4# set policer 15m-pol then discard
user@es4# set policer 50m-pol if-exceeding bandwidth-limit 50m
user@es4# set policer 50m-pol if-exceeding burst-size-limit 150k
user@es4# set policer 50m-pol then discard
user@es4# set policer 30m-pol if-exceeding bandwidth-limit 30m
user@es4# set policer 30m-pol if-exceeding burst-size-limit 45k
user@es4# set policer 30m-pol then discard
user@es4# set policer 40m-pol if-exceeding bandwidth-limit 40m
user@es4# set policer 40m-pol if-exceeding burst-size-limit 45k
user@es4# set policer 40m-pol then discard

```

11. Configure schedulers to determine which queue to service based on the transmit rate and the buffer size:

```

[edit class-of-service schedulers]
user@es4# set BE transmit-rate percent 30
user@es4# set BE buffer-size percent 30
user@es4# set BE priority low set PD transmit-rate percent 40
user@es4# set PD buffer-size percent 40
user@es4# set PD priority high
user@es4# set EF transmit-rate percent 10
user@es4# set EF buffer-size percent 10
user@es4# set EF priority strict-high

```

12. Assign the forwarding classes to schedulers with the scheduler map EVC:

```

[edit class-of-service scheduler-maps]
user@es4# set EVC forwarding-class INET-BEST-EFFORT scheduler BE
user@es4# set EVC forwarding-class VPN-PR-DATA scheduler PD
user@es4# set EVC forwarding-class VOICE-EF scheduler EF

```

13. Configure an 802.1p rewrite rule named **802p\_rwrule** in the rewrite table and associate them with forwarding classes:

```

[edit class-of-service rewrite-rules (Definition)]
user@es4# set ieee-802.1 802p_rwrule forwarding-class VPN-PR-DATA loss-priority
low code-point 010
user@es4# set ieee-802.1 802p_rwrule forwarding-class VPN-PR-DATA loss-priority
high code-point 110
user@es4# set ieee-802.1 802p_rwrule forwarding-class VPN-PR-DATA loss-priority
high code-point 110
user@es4# set ieee-802.1 802p_rwrule forwarding-class VOICE-EF loss-priority low
code-point 011
user@es4# set ieee-802.1 802p_rwrule forwarding-class VOICE-EF loss-priority high
code-point 111
user@es4# set ieee-802.1 802p_rwrule forwarding-class INET-BEST-EFFORT loss-priority
low code-point 100

```

```
user@es4# set ieee-802.1 802p_rwrule forwarding-class INET-BEST-EFFORT loss-priority
high code-point 000
```

14. Configure traffic control profiles. These policies are applied to enqueue a packet and send it out to the next router. The profile **VUNI:SERVICE** will be applied to interface set **vuni-set1**.

```
[edit class-of-service traffic-control-profiles]
user@es4# set EVC:SERVICE scheduler-map EVC
user@es4# set EVC:SERVICE shaping-rate 20m
user@es4# set VUNI:SERVICE scheduler-map EVC
user@es4# set VUNI:SERVICE shaping-rate 100m
user@es4# set VUNI:SERVICE guaranteed-rate 100m
```

15. Configure the interface sets and associate them with the logical interfaces on which the services are configured (**vuni-set1** is used for **eline1** and **eline2** traffic, and **vuni-set2** is used for **elan1** and **elan2** traffic):

```
[edit interfaces]
user@es4# set interface-set vuni-set1 interface ge-1/0/3 unit 1
user@es4# set interface-set vuni-set1 interface ge-1/0/3 unit 3
user@es4# set interface-set vuni-set2 interface ge-1/0/3 unit 4
user@es4# set interface-set vuni-set2 interface ge-1/0/3 unit 2
```

16. Configure the output traffic control profile to apply the policy that queues packets and sends them onto the next router (here, policies **VUNI:SERVICE** and **EVC:SERVICE** are applied):

```
[edit class-of-service interfaces]
user@es4# set interface-set vuni-set1 output-traffic-control-profile VUNI:SERVICE
user@es4# set interface-set vuni-set2 output-traffic-control-profile VUNI:SERVICE
user@es4# set ge-1/0/3 unit 1 output-traffic-control-profile EVC:SERVICE
```

17. Apply classifiers and rewrite rules to the logical interfaces supporting the services:

```
[edit class-of-service interfaces]
user@es4# set ge-1/0/0 unit 1 classifiers ieee-802.1 802p_class
user@es4# set ge-1/0/0 unit 1 rewrite-rules ieee-802.1 802p_rwrule
user@es4# set ge-1/0/0 unit 2 classifiers ieee-802.1 802p_class
user@es4# set ge-1/0/0 unit 2 rewrite-rules ieee-802.1 802p_rwrule
user@es4# set ge-1/0/0 unit 3 forwarding-class INET-BEST-EFFORT
user@es4# set ge-1/0/0 unit 4 forwarding-class INET-BEST-EFFORT
user@es4# set ge-1/0/3 unit 1 classifiers ieee-802.1 802p_class
user@es4# set ge-1/0/3 unit 1 rewrite-rules ieee-802.1 802p_rwrule
user@es4# set ge-1/0/3 unit 2 classifiers ieee-802.1 802p_class
user@es4# set ge-1/0/3 unit 2 rewrite-rules ieee-802.1 802p_rwrule
user@es4# set ge-1/0/3 unit 3 forwarding-class INET-BEST-EFFORT
user@es4# set ge-1/0/3 unit 4 forwarding-class INET-BEST-EFFORT
```

**Results** Check the results of the configuration:

```
user@switch1> show configuration
class-of-service {
 classifiers {
 # P-BIT 7, 6 => VOICE ef
 # P-BIT 4, 5 => VPN Priority data
 # Others => Internet Best effort
 ieee-802.1 802p_class {
 forwarding-class INET-BEST-EFFORT {
```

```

 loss-priority low code-points [000 001];
 loss-priority high code-points [010 011];
 }
 forwarding-class VPN-PR-DATA {
 loss-priority low code-points 100;
 loss-priority high code-points 101;
 }
 forwarding-class VOICE-EF {
 loss-priority low code-points 111;
 loss-priority high code-points 110;
 }
}
forwarding-classes {
 class INET-BEST-EFFORT queue-num 0;
 class VPN-PR-DATA queue-num 1;
 class VOICE-EF queue-num 2 priority high;
 class UNUSED queue-num 3;
}
traffic-control-profiles {
 EVC:SERVICE {
 scheduler-map EVC;
 shaping-rate 20m;
 }
 VUNI:SERVICE {
 scheduler-map EVC;
 shaping-rate 100m;
 guaranteed-rate 100m;
 }
}
interfaces {
 interface-set vuni-set1 {
 # vuni-set1 is grouped E-LINE services
 output-traffic-control-profile VUNI:SERVICE;
 }
 interface-set vuni-set2 {
 # vuni-set2 is grouped E-LAN services
 output-traffic-control-profile VUNI:SERVICE;
 }
}
ge-1/0/0 {
 # ge-1/0/0 is customer edge
 unit 1 {
 classifiers {
 ieee-802.1 802p_class;
 }
 rewrite-rules {
 ieee-802.1 802p_rwrule;
 }
 }
 unit 2 {
 classifiers {
 ieee-802.1 802p_class;
 }
 rewrite-rules {
 ieee-802.1 802p_rwrule;
 }
 }
}

```

```

 }
 unit 3 {
 forwarding-class INET-BEST-EFFORT;
 }
 unit 4 {
 forwarding-class INET-BEST-EFFORT;
 }
}
ge-1/0/3 {
 unit 1 {
 # In hierarchical-scheduler mode:
 # EVC can be shaped at EVC (unit) level in addition to
 # being shaped at virtual-UNI and port-level
 # But this level is currently disabled
 # classification of incoming UNI traffic for ELINE1
 classifiers {
 ieee-802.1 802p_class;
 }
 # marking of .1p bits of outgoing UNI traffic
 rewrite-rules {
 ieee-802.1 802p_rwrule;
 }
 }
 unit 2 {
 # classification of incoming UNI traffic for ELINE2
 classifiers {
 ieee-802.1 802p_class;
 }
 # marking of .1p bits of outgoing UNI traffic
 rewrite-rules {
 ieee-802.1 802p_rwrule;
 }
 }
 unit 3 {
 # fixed-classification for ELAN1, all ELAN traffic is
 # best effort
 forwarding-class INET-BEST-EFFORT;
 }
 unit 4 {
 # fixed-classification for ELAN2, all ELAN traffic is
 # best effort
 forwarding-class INET-BEST-EFFORT;
 }
}
rewrite-rules {
 ieee-802.1 802p_rwrule {
 forwarding-class VPN-PR-DATA {
 loss-priority low code-point 010;
 loss-priority high code-point 110;
 }
 forwarding-class VOICE-EF {
 loss-priority low code-point 011;
 loss-priority high code-point 111;
 }
 }
 forwarding-class INET-BEST-EFFORT {

```

```
 loss-priority low code-point 100;
 loss-priority high code-point 000;
 }
}
scheduler-maps {
 EVC {
 forwarding-class INET-BEST-EFFORT scheduler BE;
 forwarding-class VPN-PR-DATA scheduler PD;
 forwarding-class VOICE-EF scheduler EF;
 }
}
schedulers {
 BE {
 transmit-rate percent 30;
 buffer-size percent 30;
 priority low;
 }
 PD {
 transmit-rate percent 40;
 buffer-size percent 40;
 priority high;
 }
 EF {
 transmit-rate percent 10;
 buffer-size percent 10;
 priority strict-high;
 }
}
}
firewall {
 policer 15m-pol {
 if-exceeding {
 bandwidth-limit 15m;
 burst-size-limit 5k;
 }
 then discard;
 }
 policer 50m-pol {
 if-exceeding {
 bandwidth-limit 50m;
 burst-size-limit 30k;
 }
 then discard;
 }
 policer 30m-pol {
 if-exceeding {
 bandwidth-limit 30m;
 burst-size-limit 45k;
 }
 then discard;
 }
 policer 40m-pol {
 if-exceeding {
 bandwidth-limit 40m;
 burst-size-limit 45k;
 }
 }
}
```

```
}
 then discard;
}
family bridge {
 filter SERVICE1 {
 # bandwidth profile for Voice service
 interface-specific;
 term Voice_bw_prof {
 from {
 forwarding-class VOICE-EF;
 }
 then {
 policer 15m-pol;
 count srv1_voice_cnt;
 }
 }
 # bandwidth profile for VPN priority-data service
 term VPN_pd_bw_prof {
 from {
 forwarding-class VPN-PR-DATA;
 }
 then {
 policer 50m-pol;
 count srv1_vpn_cnt;
 }
 }
 # everything else is best-effort internet
 term ANY {
 then count srv1_inet_cnt;
 }
 }
 filter SERVICE2 {
 term Voice_sw_prof {
 from {
 forwarding-class VOICE-EF;
 }
 then {
 policer 40m-pol;
 count srv2_ef_cnt;
 }
 }
 term PR_DATA_policer {
 from {
 forwarding-class VPN-PR-DATA;
 }
 then {
 policer 30m-pol;
 count srv2_pr_data_cnt;
 }
 }
 term ANY {
 then count srv2_be_cnt;
 }
 }
 filter SERVICE3 {
 term ANY {
```

```

 then {
 count srv3_cnt;
 forwarding-class INET-BEST-EFFORT;
 }
 }
}
}
}
}
}
Interface configuration shown for completeness-done for PBB E-LINE and PBB-E-LAN
example
interfaces {
 ge-1/0/0 {
 description "Connected to ES4 Reds ge-1/0/0";
 flexible-vlan-tagging;
 encapsulation flexible-ethernet-services;
 unit 1 {
 family bridge {
 interface-mode trunk;
 vlan-id-list 2100;
 vlan-rewrite {
 translate 1100 2100;
 }
 }
 }
 unit 2 {
 family bridge {
 interface-mode trunk;
 vlan-id-list 1200;
 }
 }
 unit 3 {
 family bridge {
 interface-mode trunk;
 vlan-id-list 1300;
 }
 }
 unit 4 {
 family bridge {
 interface-mode trunk;
 vlan-id-list 1400;
 }
 }
 }
}
ge-1/0/4 {
 description "Connected to BCB1 Syrah ge-2/1/5";
 unit 0 {
 family bridge {
 interface-mode trunk;
 vlan-id-list 3000-4000;
 }
 }
}
ge-1/2/2 {
 description "Connected to BCB2 Cabernet ge-2/0/6";
 unit 0 {
 family bridge {

```

```

 interface-mode trunk;
 vlan-id-list 3000-4000;
 }
}
cbp0 {
 unit 0 {
 family bridge {
 interface-mode trunk;
 bridge-domain-type bvlan;
 isid-list all;
 }
 }
}
pip0 {
 unit 0 {
 family bridge {
 interface-mode trunk;
 bridge-domain-type svlan;
 isid-list all-service-groups;
 }
 }
 unit 1 {
 family bridge {
 interface-mode trunk;
 bridge-domain-type svlan;
 isid-list all-service-groups;
 }
 }
}
}
routing-instances configuration shown for completeness
routing-instances configuration done for PBB E-LINE and PBB E-LAN example
routing-instances {
 pbn-3-for-eline {
 instance-type virtual-switch;
 interface ge-1/0/0.1;
 interface ge-1/0/0.2;
 interface pip0.0;
 bridge-domains {
 eline-svlans {
 vlan-id-list [1200 2100];
 }
 }
 }
 pbn-3-for-elan {
 instance-type virtual-switch;
 interface ge-1/0/0.3;
 interface ge-1/0/0.4;
 interface pip0.1;
 bridge-domains {
 elan-svlans {
 vlan-id-list [1300 1400];
 }
 }
 }
 pbb-options {
 peer-instance pbbn-1;
 }
}

```

```

 }
 service-groups {
 elan1 {
 service-type elan;
 pbb-service-options {
 isid 10300 vlan-id-list 1300;
 }
 }
 elan2 {
 service-type elan;
 pbb-service-options {
 isid 10400 vlan-id-list 1400;
 }
 }
 }
}
pbb-options {
 peer-instance pbbn-1;
}
service-groups {
 eline1 {
 service-type eline;
 pbb-service-options {
 isid 10100 interface ge-1/0/0.1;
 }
 }
 eline2 {
 service-type eline;
 pbb-service-options {
 isid 10200 interface ge-1/0/0.2;
 }
 }
}
}
}

```

## Verification

To confirm that the configuration is working properly, perform these tasks:

- Verifying Ingress SLA Enforcement on page 95
- Verifying Egress SLA on page 97
- Verify Traffic Shaping and Scheduling Profiles on page 97
- Verifying Schedulers and the Scheduler Map on page 98
- Egress SLA Enforcement on page 99

### Verifying Ingress SLA Enforcement

**Purpose** Verify that SLA enforcement is occurring for traffic entering ES4 and exiting towards ES1. The policers for the forwarding classes are:

- 15 Mbps for voice traffic
- 50 Mbps for priority data

- No policer for best effort—all traffic within 40 Mbps is accepted

**Action** Use the following operational mode command:

```

user@es4> show firewall
Filter: __default_bpdu_filter__

Filter: SERVICE1-ge-1/0/3.1-i
Counters:
Name Bytes Packets
srv1_vpn_cnt-ge-1/0/3.1-i 899929660584 644648754
srv1_voice_cnt-ge-1/0/3.1-i 183642199700 175737551
srv1_inet_cnt-ge-1/0/3.1-i 359309729428 257385193
Policers:
Name Packets
50m-pol-VPN_pd_bw_prof-ge-1/0/3.1-i 255914707
15m-pol-Voice_bw_prof-ge-1/0/3.1-i 0

Filter: SERVICE2
Counters:
Name Bytes Packets
srv2_pr_data_cnt 0 0
srv2_ef_cnt 2953233408 46144272
srv2_be_cnt 0 0
Policers:
Name Packets
30m-pol-PR_DATA_policer 0
---(more)--- 40m-pol-Voice_sw_prof
0

Filter: SERVICE3
Counters:
Name Bytes Packets
srv3_cnt 0 0

Filter: __default_arp_policer__

Filter: __cfm_filter_bds-vlan-0500_6__
Counters:
Name Bytes Packets
__cfm_ethtype_term__ 750 15
__cfm_erp_term__ 0 0
__ge-1/0/3.5_cc_term_lv1_0__ 0 0
__ge-1/0/3.5_cc_term_lv1_1__ 0 0
__ge-1/0/3.5_cc_term_lv1_2__ 0 0
__ge-1/0/3.5_lt_term_lv1_0__ 0 0
__ge-1/0/3.5_lt_term_lv1_1__ 0 0
__ge-1/0/3.5_lt_term_lv1_2__ 0 0
__ge-1/0/3.5_cc_term_lv1_3__ 0 0
__ge-1/0/3.5_cc_term_lv1_4__ 0 0
__ge-1/0/3.5_cc_term_lv1_5__ 0 0
__ge-1/0/3.5_cc_term_lv1_6__ 0 0
__ge-1/0/3.5_cc_term_lv1_7__ 0 0
__ge-1/0/3.5_lt_term_lv1_3__ 0 0
__ge-1/0/3.5_lt_term_lv1_4__ 0 0
__ge-1/0/3.5_lt_term_lv1_5__ 0 0
__ge-1/0/3.5_lt_term_lv1_6__ 0 0
__ge-1/0/3.5_lt_term_lv1_7__ 0 0
__mgrp_1_cc_term_lv1_0__ 0 0
__mgrp_1_cc_term_lv1_1__ 0 0

```

|                          |           |         |
|--------------------------|-----------|---------|
| __mgrp_1_cc_term_lv1_2__ | 0         | 0       |
| __mgrp_1_cc_term_lv1_3__ | 111794828 | 1152524 |
| __mgrp_1_cc_term_lv1_4__ | 0         | 0       |
| __mgrp_1_cc_term_lv1_5__ | 0         | 0       |
| __mgrp_1_cc_term_lv1_6__ | 0         | 0       |
| __mgrp_1_cc_term_lv1_7__ | 0         | 0       |
| __mgrp_1_lt_term_lv1_0__ | 0         | 0       |
| __mgrp_1_lt_term_lv1_1__ | 0         | 0       |
| __mgrp_1_lt_term_lv1_2__ | 0         | 0       |
| __mgrp_1_lt_term_lv1_3__ | 1152      | 18      |
| __mgrp_1_lt_term_lv1_4__ | 0         | 0       |
| __mgrp_1_lt_term_lv1_5__ | 0         | 0       |
| __mgrp_1_lt_term_lv1_6__ | 0         | 0       |
| __mgrp_1_lt_term_lv1_7__ | 0         | 0       |
| [truncated]              |           |         |

**Meaning** The operational mode command **show firewall** displays statistics about the firewall filters. Under the **Filter: SERVICE1** region, the values **50-pol-VPN\_pd\_bw\_prof-ge-1/0/3.1-I** and **15-pol-Voice\_bw\_prof-ge-1/0/3.1-I** indicate that each forwarding class is policed to a certain bandwidth rate. The **Bytes** value for **50-pol-VPN\_pd\_bw\_prof-ge-1/0/3.1-I** is **255914707**, which exceeds the 50 Mbps bandwidth limit for priority data. Packets exceeding 50 Mbps will be dropped.

### Verifying Egress SLA

**Purpose** Verify that SLA enforcement is occurring for traffic coming from ES1 towards ES4. Only 100 Mbps can egress ES1. Voice traffic and priority data take precedence over best-effort traffic.

**Action** Use the following operational mode commands:

```
user@es4> show class-of-service interface-set
Interface-set: vuni-set1, Index: 1
Physical interface: ge-1/0/3, Index: 151
Queues supported: 4, Queues in use: 4
Output traffic control profile: VUNI:SERVICE, Index: 49590

Interface-set: vuni-set2, Index: 2
Physical interface: ge-1/0/3, Index: 151
Queues supported: 4, Queues in use: 4
Output traffic control profile: VUNI:SERVICE, Index: 49590
```

**Meaning** The operational mode command **show class-of-service interface-set** displays the two interface sets **vuni-set1** and **vuni-set2**. It also shows that the **VUNI:SERVICE** CoS policy is applied to both interface sets.

### Verify Traffic Shaping and Scheduling Profiles

**Purpose** Verify traffic shaping and scheduling profiles on the router.

**Action** Use the following operational mode commands:

```
user@es4> show class-of-service traffic-control-profile
run show class-of-service traffic-control-profile
Traffic control profile: EVC:SERVICE, Index: 57589
```

```
Shaping rate: 20000000
Scheduler map: EVC
```

```
Traffic control profile: VUNI:SERVICE, Index: 49590
Shaping rate: 100000000
Scheduler map: EVC
Guaranteed rate: 100000000
```

**Meaning** The operational mode command **show class-of-service traffic-control-profiles** shows that **eline1**, **elan1**, and **elan2** are subject to 100 Mbps shaping rate (see guaranteed rate). While 160 Mbps can ingress, only 100 Mbps can egress.

### Verifying Schedulers and the Scheduler Map

**Purpose** Verify the schedulers and the scheduler map configured on router ES4.

**Action** Use the following operational mode command:

```
user@es4> show class-of-service scheduler-map EVC
Scheduler map: EVC, Index: 7810

Scheduler: BE, Forwarding class: INET-BEST-EFFORT, Index: 2053
 Transmit rate: 30 percent, Rate Limit: none, Buffer size: 30 percent,
 Priority: low
 Excess Priority: unspecified
 Drop profiles:
 Loss priority Protocol Index Name
 Low any 1 default-drop-profile
 Medium low any 1 default-drop-profile
 Medium high any 1 default-drop-profile
 High any 1 default-drop-profile

Scheduler: PD, Forwarding class: VPN-PR-DATA, Index: 2628
 Transmit rate: 40 percent, Rate Limit: none, Buffer size: 40 percent,
 Priority: high
 Excess Priority: unspecified
 Drop profiles:
 Loss priority Protocol Index Name
 Low any 1 default-drop-profile
 Medium low any 1 default-drop-profile
 Medium high any 1 default-drop-profile
 High any 1 default-drop-profile

Scheduler: EF, Forwarding class: VOICE-EF, Index: 2278
 Transmit rate: 10 percent, Rate Limit: none, Buffer size: 10 percent,
 Priority: strict-high
 Excess Priority: unspecified
 Drop profiles:
 Loss priority Protocol Index Name
 Low any 1 default-drop-profile
 Medium low any 1 default-drop-profile
 Medium high any 1 default-drop-profile
 High any 1 default-drop-profile
```

**Meaning** The operational mode command **show class-of-service scheduler-maps EVC** displays information about the schedulers **BE**, **PD**, and **EF** that are configured for scheduler map **EVC**. It also shows how each scheduler is tied to a forwarding class. Scheduler **BE** is tied

to the forwarding class **INET-BEST-EFFORT**. Scheduler **PD** is tied to the forwarding class **VPN-PR-DATA**. Scheduler **EF** is tied to the forwarding class **VOICE-EF**.

### Egress SLA Enforcement

**Purpose** Compare the queues for interface sets **vuni-set1** and **vuni-set2**. Dropped packets for either interface set indicates that bandwidth limits are being exceeded and enforcement is occurring.

**Action** Use the following operational mode command:

```
user@es4> show interfaces interface-set queue vuni-set1
Interface set: vuni-set1
Interface set index: 1
Forwarding classes: 16 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: INET-BEST-EFFORT
 Queued:
 Packets : 2977942923 8933 pps
 Bytes : 1949099612484 100314048 bps
 Transmitted:
 Packets : 1488278642 4464 pps
 Bytes : 973656736604 50139648 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 1489660186 4466 pps
 Low : 1489660186 4466 pps
 Medium-low : 0 0 pps
 Medium-high : 0 0 pps
 High : 0 0 pps
 RED-dropped bytes : 975440779240 50162112 bps
 Low : 975440779240 50162112 bps
 Medium-low : 0 0 bps
 Medium-high : 0 0 bps
 High : 0 0 bps
Queue: 1, Forwarding classes: VPN-PR-DATA
 Queued:
 Packets : 1231342961 3576 pps
 Bytes : 785429404088 40144224 bps
 Transmitted:
 Packets : 1231342958 3573 pps
 Bytes : 785429402552 40131936 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 Medium-low : 0 0 pps
 Medium-high : 0 0 pps
 High : 0 0 pps
 RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 Medium-low : 0 0 bps
 Medium-high : 0 0 bps
 High : 0 0 bps
Queue: 2, Forwarding classes: VOICE-EF
 Queued:
 Packets : 1639301652 893 pps
 Bytes : 294440262416 10030176 bps
 Transmitted:
 Packets : 1639301652 893 pps
 Bytes : 294440262416 10030176 bps
```

```

Tail-dropped packets : 0 0 pps
RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 Medium-low : 0 0 pps
 Medium-high : 0 0 pps
 High : 0 0 pps
RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 Medium-low : 0 0 bps
 Medium-high : 0 0 bps
 High : 0 0 bps
Queue: 3, Forwarding classes: UNUSED
Queued:
 Packets : 3091521 0 pps
 Bytes : 222589512 0 bps
Transmitted:
 Packets : 3091521 0 pps
 Bytes : 222589512 0 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 Medium-low : 0 0 pps
 Medium-high : 0 0 pps
 High : 0 0 pps
RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 Medium-low : 0 0 bps
 Medium-high : 0 0 bps
 High : 0 0 bps

user@es4> show interfaces interface-set queue vuni-set2
Interface set: vuni-set2
Interface set index: 2
Forwarding classes: 16 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: INET-BEST-EFFORT
Queued:
 Packets : 513317220 3572 pps
 Bytes : 720697385280 40120704 bps
Transmitted:
 Packets : 513317220 3572 pps
 Bytes : 720697385280 40120704 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 Medium-low : 0 0 pps
 Medium-high : 0 0 pps
 High : 0 0 pps
RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 Medium-low : 0 0 bps
 Medium-high : 0 0 bps
 High : 0 0 bps
Queue: 1, Forwarding classes: VPN-PR-DATA
Queued:
 Packets : 513317223 3571 pps
 Bytes : 720697376892 40109472 bps
Transmitted:
 Packets : 513317223 3571 pps
 Bytes : 720697376892 40109472 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : 0 0 pps

```

```

Low : 0 0 pps
Medium-low : 0 0 pps
Medium-high : 0 0 pps
High : 0 0 pps
RED-dropped bytes : 0 0 bps
Low : 0 0 bps
Medium-low : 0 0 bps
Medium-high : 0 0 bps
High : 0 0 bps
Queue: 2, Forwarding classes: VOICE-EF
Queued:
Packets : 175354436 893 pps
Bytes : 183560157444 10030176 bps
Transmitted:
Packets : 175354436 893 pps
Bytes : 183560157444 10030176 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : 0 0 pps
Low : 0 0 pps
Medium-low : 0 0 pps
Medium-high : 0 0 pps
High : 0 0 pps
RED-dropped bytes : 0 0 bps
Low : 0 0 bps
Medium-low : 0 0 bps
Medium-high : 0 0 bps
High : 0 0 bps
Queue: 3, Forwarding classes: UNUSED
Queued:
Packets : 0 0 pps
Bytes : 0 0 bps
Transmitted:
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : 0 0 pps
Low : 0 0 pps
Medium-low : 0 0 pps
Medium-high : 0 0 pps
High : 0 0 pps
RED-dropped bytes : 0 0 bps
Low : 0 0 bps
Medium-low : 0 0 bps
Medium-high : 0 0 bps
High : 0 0 bps

```

**Meaning** The operational mode commands **show interfaces interface-set queue vuni-set1** and **show interfaces interface-set queue vuni-set2** show the queue statistics for the forwarding classes **INET-BEST-EFFORT**, **VPN-PR-DATA**, and **VOICE-EF**. See **Queue 2: Forwarding classes: VOICE-EF** in the output for command **show interfaces interface-set queue vuni-set1**. Notice that packets are being dropped for forwarding class **INET-BEST-EFFORT**. Queue 1 for forwarding class **VOICE-EF** and queue 2 for forwarding class **VPN-PR-DATA** are given a high priority during scheduling. Consequently, they do not have any dropped packets. Total traffic is shaped at 100 Mbps. After the 10 Mbps for voice traffic and the 40 Mbps for priority data is subtracted from the total bandwidth of 100 Mbps, 50 Mbps remains and is shared between the best-effort traffic for **eline1** and **eline2**. Excess best-effort traffic is dropped.

**Related Documentation**

- Understanding JUNOS CoS Components for MX Series Routers on page 10
- Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17
- Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102

## Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers

---

Provider backbone bridging (PBB) extends Layer 2 Ethernet switching to provide enhanced scalability, quality of service (QoS) features, and carrier-class reliability in service provider networks. Connectivity fault management (CFM) is used with PBB to support that carrier-class reliability. Use CFM to monitor, isolate, and verify faults in the network.

The JUNOS Software implementation of PBB supports the IEEE 802.1ah (PBB) and IEEE 802.1ag (CFM) standards.

This example describes how to configure end-to-end fault management in a PBN and a PBBN:

- Requirements on page 102
- Overview and Topology on page 102
- Configuring Connectivity Fault Management for a PBBN on page 106
- Configuring Connectivity Fault Management for a PBN on page 117
- Verification on page 125

### Requirements

This example uses the following hardware and software components:

- JUNOS Release 10.0 or later for MX Series routers
- Eight MX Series routers in a PBB configuration

Before you configure the routers for PBB and services, be sure you have:

- Installed the MX Series router.
- Performed the initial router configuration.
- Performed the PBB configuration for Ethernet private line (E-LINE) and Ethernet transparent LAN (E-LAN) services. For more information, refer to ““Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers” on page 17”.

### Overview and Topology

There are two different networks that need to be configured for CFM in this example:

- A provider backbone bridge network (PBBN).

- Provider bridged networks (PBNs) that include PBN1, PBN2, and PBN3.

This example uses a series of maintenance end points (MEPs) and maintenance intermediate points (MIPs). MIPs respond to the OAM processes initiated by the MEPs. Using MEPs and MIPs, CFM provides end-to-end connectivity in the PBBN because it can exactly pinpoint a failure in the topology.

Figure 7 on page 103 displays the topology for the PBBN. The PBBN connect the PBNs and provides services to the PBNs. Two backbone core bridges (BCBs) are connected to PBN1, PBN2, and PBN3. Operation, Administration, and Maintenance (OAM) in the PBBN is limited to fault detection in the PBBN.

Figure 7: Network Topology for the PBBN

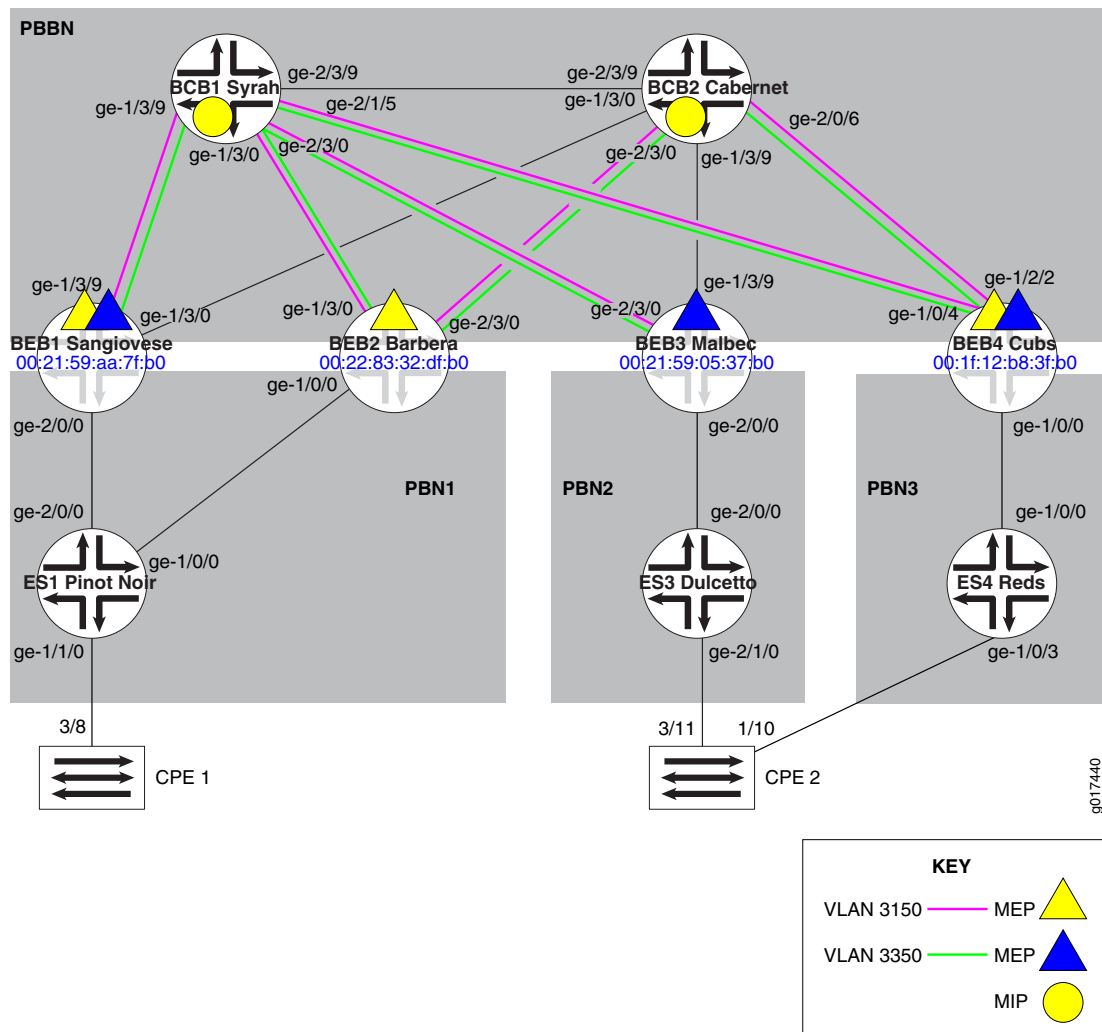


Table 12 on page 104 shows the maintenance end points (MEPs) and maintenance intermediate points (MIPs) that are configured for each router in the PBBN. The PBBN is configured with VLAN 3150 and 3350. CFM must be configured for monitoring the connectivity in both the VLANs. To do this, configure a MEP for each VLAN at the endpoints (BEBs), and configure a MIP for each VLAN on the core bridges (BCBs).

To configure a MIP for level  $x$ , the maintenance domain default- $x$  is configured on the router. For example, if MEPs in the PBBN are configured at **level 3**, the MIP is configured as **default-3**.



**NOTE:** CFM in the PBBN is used to check the connectivity in the PBBN domain only, and packets are never leaked to the PBN.

**Table 12: CFM Components Configured for the PBBN**

| VLAN | Router            | Level | MEP | MIP       |
|------|-------------------|-------|-----|-----------|
| 3150 | BEB1 (Sangiovese) | 5     | 100 | —         |
|      | BEB2 (Barbera)    | 5     | 101 | —         |
|      | BEB4 (Cubs)       | 5     | 102 | —         |
|      | BCB1 (Syrah)      | 5     | —   | default-5 |
|      | BCB2 (Cabernet)   | 5     | —   | default-5 |
| 3350 | BEB1 (Sangiovese) | 5     | 100 | —         |
|      | BEB3 (Malbec)     | 5     | 102 | —         |
|      | BEB4 (Cubs)       | 5     | 102 | —         |
|      | BCB1 (Syrah)      | 5     | —   | default-5 |
|      | BCB2 (Cabernet)   | 5     | —   | default-5 |

Figure 8 on page 105 displays the topology for PBN. BEB1, BEB2, BEB3, and BEB4 are connected to customer edge switches ES1, ES3, and ES4.

The PBN is configured with VLAN 500 and 600. CFM must be configured for monitoring the connectivity in both the VLANs. To do this, configure a MEP for each VLAN at the endpoints (ESs), and configure a MIP for each VLAN on the BEBs.

Comparing both topologies, notice that the BEBs are actually part of both the PBN and the PBBN. They perform the function of a MEP in the PBBN, but perform the function of a MIP in the PBN and participate in multiple maintenance domains. In comparison, BCBs in the PBBN participate in one maintenance domain and ESs in the PBN participate in one maintenance domain.



**NOTE:** CFM on the PBN is used to check the connectivity in the PBN domain—these packets are simply tunneled in the PBBN domain as data packets.

Figure 8: Network Topology for the PBN

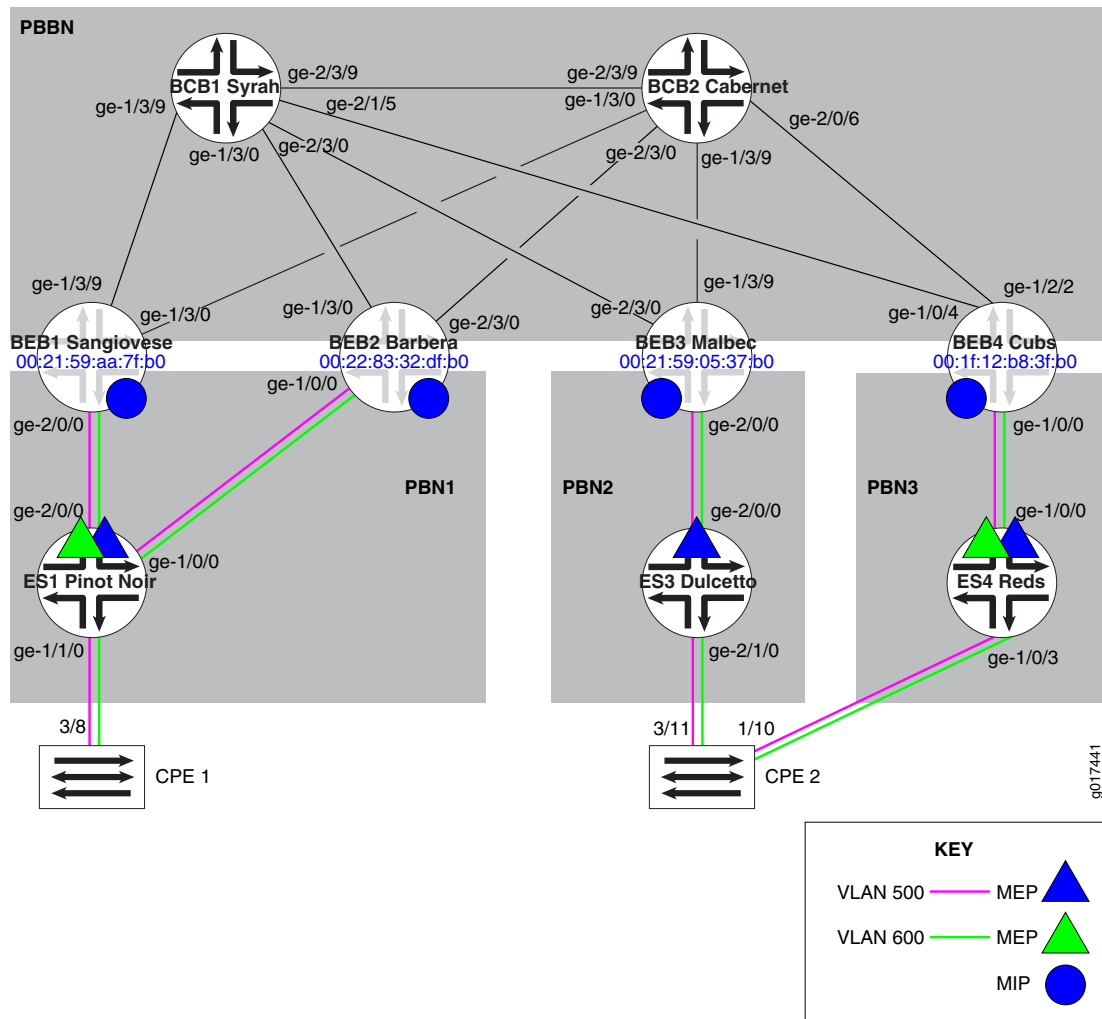


Table 13 on page 106 shows the MEPs and MIPs that are configured in the PBN.

Table 13: CFM Components Configured for the PBN

| VLAN | Router            | Level | MEP | MIP       |
|------|-------------------|-------|-----|-----------|
| 500  | ES1 (Pinot Noir)  | 3     | 1   | —         |
|      | ES3 (Dolcetto)    | 3     | 2   | —         |
|      | ES4 (Reds)        | 3     | 2   | —         |
|      | BEB1 (Sangiovese) | 3     | —   | default-3 |
|      | BEB2 (Barbera)    | 3     | —   | default-3 |
|      | BEB3 (Malbec)     | 3     | —   | default-3 |
|      | BEB4 (Cubs)       | 3     | —   | default-3 |
| 600  | ES1 (Pinot Noir)  | 3     | 1   | —         |
|      | ES4 (Reds)        | 3     | 2   | —         |
|      | BEB1 (Sangiovese) | 3     | —   | default-3 |
|      | BEB2 (Barbera)    | 3     | —   | default-3 |
|      | BEB3 (Malbec)     | 3     | —   | default-3 |
|      | BEB4 (Cubs)       | 3     | —   | default-3 |



**NOTE:** MX Series router ES3 (Dolcetto) is visible in the topology, but is not part of the CFM configuration example.

## Configuring Connectivity Fault Management for a PBBN

To configure connectivity fault management on MX Series routers in a provider backbone bridge network, perform these tasks:

- Configuring a MEP on BEB1 (Sangiovese) on page 107
- Configuring a MEP on BEB2 (Barbera) on page 109
- Configuring a MEP on BEB3 (Malbec) on page 111
- Configuring a MEP on BEB4 (Cubs) on page 112
- Configuring a MIP on BCB1 (Syrah) on page 115
- Configuring a MIP on BCB2 (Cabernet) on page 116

### Configuring a MEP on BEB1 (Sangiovese)

**CLI Quick Configuration** To quickly configure a MEP for BEB1, copy the following commands and paste them into the router terminal window:

```
[edit]
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn level 5
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 continuity-check interval 1s
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 100 interface cbp0.0
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 100 interface vlan 3350
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 100 direction up
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 100 auto-discovery
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 continuity-check interval 1s
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 100 interface cbp0.0
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 100 interface vlan 3150
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 100 direction up
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 100 auto-discovery
```

**Step-by-Step Procedure** To configure a MEP for BEB1:

1. Create a maintenance domain at level 5 for PBBN monitoring (here, the maintenance domain is **pbbn**):

```
[edit protocols oam]
user@beb1# set ethernet connectivity-fault-management maintenance-domain pbbn
level 5
```

2. Configure the continuity check interval for the maintenance association (here, **vlan3350**). The continuity check protocol is used for fault detection by a Maintenance End Point (MEP). The MEP periodically sends continuity check multicast messages, and receiving MEPs use the CC messages to build a MEP database of all MEPs in the maintenance association.

```
[edit protocols oam]
user@beb1# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 continuity-check interval 1s
```

3. Configure a MEP with the same maintenance association identifier and maintenance domain level (here, **vlan3150** and **pbbn**) and associate them to VLAN 3150 and the pseudo-logical interface **cbp0.0**).

```
[edit protocols oam]
user@beb1# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 100 interface vlan 3350
user@beb1# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 100 interface cbp0.0
```



**NOTE:** When you configure PBB, a customer backbone port (cbp) pseudo-logical interface is configured for the B-component of the BEB. This permits multiple customer routing instances to be associated with a single PBBN provider routing instance.

4. Configure the direction in which CFM packets are transmitted for the MEP. Direction up CCMs are transmitted out of every logical interface that is part of the same bridge (here, direction is specified as **up**).

```
[edit protocols oam]
user@beb1# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 100 direction up
```

5. Configure automatic discovery to enable the MEP to accept continuity check messages from all remote MEPs of the same maintenance association.

```
[edit protocols oam]
user@beb1# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 100 auto-discovery
```

6. Configure the continuity check interval for the maintenance association (here, **vlan3150**). The continuity check protocol is used for fault detection by a MEP. The MEP periodically sends continuity check multicast messages, and receiving MEPs use the CC messages to build a MEP database of all MEPs in the maintenance association.

```
[edit protocols oam]
user@beb1# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 continuity-check interval 1s
```

7. Configure a MEP with the same maintenance association identifier and maintenance domain level (here, **vlan3150** and **pbbn**).

```
[edit protocols oam]
user@beb1# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 100 interface vlan 3350
```

8. Configure the direction in which CFM packets are transmitted for the MEP. Direction up CCMs are transmitted out of every logical interface that is part of the same bridge (here, direction is specified as **up**).

```
[edit protocols oam]
user@beb1# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 100 direction up
```

9. Configure automatic discovery to enable the MEP to accept continuity check messages from all remote MEPs of the same maintenance association.



**NOTE:** You can also use the command **remote-mep** to specify a remote MEP.

```
[edit protocols oam]
```

```
user@beb1# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 100 auto-discovery
```

**Results** Check the results of the configuration:

```
user@beb1> show configuration
protocols {
 oam {
 ethernet {
 maintenance-domain pbbn {
 level 5;
 maintenance-association vlan3350 {
 continuity-check {
 interval 1s;
 }
 mep 100 {
 interface cbp0.0 vlan 3350;
 direction up;
 auto-discovery;
 }
 }
 maintenance-association vlan3150 {
 continuity-check {
 interval 1s;
 }
 mep 100 {
 interface cbp0.0 vlan 3150;
 direction up;
 auto-discovery;
 }
 }
 }
 }
 }
}
```

### Configuring a MEP on BEB2 (Barbera)

**CLI Quick Configuration** To quickly configure a MEP for BEB2, copy the following commands and paste them into the router terminal window:

```
[edit]
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn level 5
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 continuity-check interval 1s
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 101 interface cbp0.0
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 101 interface vlan 3150
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 101 auto-discovery
```

**Step-by-Step  
Procedure**

To configure a MEP for BEB2:

1. Create a maintenance domain at level 5 for PBBN monitoring (here, the maintenance domain is **pbbn**):

```
[edit protocols oam]
user@beb2# set protocols oam ethernet connectivity-fault-management
maintenance-domain pbbn level 5
```

2. Configure the continuity check (CC) interval for the maintenance association (here, **vlan3150**). The continuity check protocol is used for fault detection by a MEP. The MEP periodically sends continuity check multicast messages, and receiving MEPs use the CC messages to build a MEP database of all MEPs in the maintenance association.

```
[edit protocols oam]
user@beb2# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 continuity-check interval 1s
```

3. Configure a MEP with the same maintenance association identifier and maintenance domain level (here, **vlan3150** and **pbbn**) and associate them to VLAN 3150 and the pseudo-logical interface **cbp0.0**).

```
[edit protocols oam]
user@beb2# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 101 interface vlan 3150
user@beb2# set cfm-pbbn protocols oam ethernet connectivity-fault-management
maintenance-domain pbbn maintenance-association vlan3150 mep 101 interface cbp0.0
```



**NOTE:** When you configure PBB, a customer backbone port (cbp) pseudo-logical interface is configured for the B-component of the BEB. This permits multiple customer routing instances to be associated with a single PBBN provider routing instance.

4. Configure the direction in which CFM packets are transmitted for the MEP. Direction up CCMs are transmitted out of every logical interface that is part of the same bridge (here, direction is specified as **up**).

```
[edit protocols oam]
user@beb2# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 101 direction up
```

5. Configure automatic discovery to enable the MEP to accept continuity check messages from all remote MEPs of the same maintenance association.

```
[edit protocols oam]
user@beb2# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 101 auto-discovery
```

**Results** Check the results of the configuration:

```
user@beb2> show configuration
protocols {
 oam {
```

```

ethernet {
 maintenance-domain pbbn {
 level 5;
 maintenance-association vlan3150 {
 continuity-check {
 interval 1s;
 }
 mep 101 {
 interface cbp0.0 vlan 3150;
 direction up;
 auto-discovery;
 }
 }
 }
}

```

### Configuring a MEP on BEB3 (Malbec)

#### CLI Quick Configuration

To quickly configure a MEP on BEB3, copy the following commands and paste them into the router terminal window:

```

[edit]
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn-elan level 5
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn-elan maintenance-association vlan3350 mep 2 interface cbp0.0
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn-elan maintenance-association vlan3350 mep 2 interface vlan 3350
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn-elan maintenance-association vlan3350 mep 2 direction up
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn-elan maintenance-association vlan3350 mep 2 auto-discovery

```

#### Step-by-Step Procedure

To configure a MEP on BEB3:

1. Create a maintenance domain at level 5 for PBBN monitoring (here, the maintenance domain is **pbbn-elan**):

```

[edit groups]
user@beb3# set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn-elan level 5

```

2. Configure a MEP with the same maintenance association identifier and maintenance domain level (here, **vlan3350** and **pbbn-elan** and associate them to VLAN 3150 and the pseudo-logical interface **cbp0.0**).

```

[edit protocols oam]
user@beb3# set ethernet connectivity-fault-management maintenance-domain pbbn-elan maintenance-association vlan3350 mep 102 interface vlan 3350
user@beb3# set ethernet connectivity-fault-management maintenance-domain pbbn-elan maintenance-association vlan3350 mep 101 interface cbp0.0

```



**NOTE:** When you configure PBB, a customer backbone port (cbp) pseudo-logical interface is configured for the B-component of the BEB. This permits multiple customer routing instances to be associated with a single PBBN provider routing instance.

3. Configure the direction in which CFM packets are transmitted for the MEP. Direction up CCMs are transmitted out of every logical interface that is part of the same bridge (here, direction is specified as **up**).

```
[edit protocols oam]
user@beb3# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 101 direction up
```

4. Configure automatic discovery to enable the MEP to accept continuity check messages from all remote MEPs of the same maintenance association.

```
[edit protocols oam]
user@beb3# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 101 auto-discovery
```

**Results** Check the results of the configuration:

```
user@beb3> show configuration
protocols {
 oam {
 ethernet {
 connectivity-fault-management {
 maintenance-domain pbbn-elan {
 level 5;
 maintenance-association vlan3350 {
 }
 mep 102 {
 interface cbp0.0 vlan 3350;
 direction up;
 auto-discovery;
 }
 }
 }
 }
 }
}
```

### Configuring a MEP on BEB4 (Cubs)

**CLI Quick Configuration** To quickly configure a MEP for BEB4, copy the following commands and paste them into the router terminal window:

```
[edit]
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn level 5
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 continuity-check interval 1s
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 102 interface vlan 3350
```

```

set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 102 interface cbp0.0
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 102 direction up
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 102 auto-discovery
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 continuity-check interval 1s
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 102 interface vlan 3150
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 102 direction up
set protocols oam ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 102 auto-discovery

```

### Step-by-Step Procedure

To configure a MEP for BEB4:

1. Create a maintenance domain at level 5 for PBBN monitoring (here, the maintenance domain is **pbbn**):

```

[edit protocols oam]
user@beb4# set ethernet connectivity-fault-management maintenance-domain pbbn
level 5

```

2. Configure the continuity check interval for the maintenance association (here, **vlan3350**). The continuity check protocol is used for fault detection by a MEP. The MEP periodically sends continuity check multicast messages, and receiving MEPs use the CC messages to build a MEP database of all MEPs in the maintenance association.

```

[edit protocols oam]
user@beb4# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 continuity-check interval 1s

```

3. Configure a MEP with the same maintenance association identifier and maintenance domain level (here, **vlan3150** and **pbbn**) and associate them to VLAN 3150 and the pseudo-logical interface **cbp0.0**.

```

[edit protocols oam]
user@beb4# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 102 interface vlan 3350
user@beb4# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 102 interface cbp0.0

```



**NOTE:** When you configure PBB, a customer backbone port (cbp) pseudo-logical interface is configured for the B-component of the BEB. This permits multiple customer routing instances to be associated with a single PBBN provider routing instance.

4. Configure the direction in which CFM packets are transmitted for the MEP. Direction up CCMs are transmitted out of every logical interface that is part of the same bridge (here, direction is specified as **up**).

```

[edit protocols oam]

```

```
user@beb4# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3350 mep 102 direction up
```

5. Configure automatic discovery to enable the MEP to accept continuity check messages from all remote MEPs of the same maintenance association.

```
[edit protocols oam]
user@beb4# set protocols oam ethernet connectivity-fault-management
maintenance-domain pbbn maintenance-association vlan3350 mep 102 auto-discovery
```

6. Configure the continuity check interval for the maintenance association (here, **vlan3150**). The continuity check protocol is used for fault detection by a MEP. The MEP periodically sends continuity check multicast messages, and receiving MEPs use the CC messages to build a MEP database of all MEPs in the maintenance association.

```
[edit protocols oam]
user@beb4# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 continuity-check interval 1s
```

7. Configure a MEP with the same maintenance association identifier and maintenance domain level (here, **vlan3150** and **pbbn**).

```
[edit protocols oam]
user@beb4# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 102 interface vlan 3150
```

8. Configure the direction in which CFM packets are transmitted for the MEP. Direction up CCMs are transmitted out of every logical interface that is part of the same bridge (here, direction is specified as **up**).

```
[edit protocols oam]
user@beb4# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 102 direction up
```

9. Configure automatic discovery to enable the MEP to accept continuity check messages from all remote MEPs of the same maintenance association.

```
[edit protocols oam]
user@beb4# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association vlan3150 mep 102 auto-discovery
```

**Results** Check the results of the configuration:

```
user@beb4> show configuration
protocols {
 oam {
 ethernet {
 connectivity-fault-management {
 maintenance-domain pbbn {
 level 5;
 maintenance-association vlan3350 {
 continuity-check {
 interval 1s;
 }
 mep 102 {
 interface cbp0.0 vlan 3350;
 direction up;
 }
 }
 }
 }
 }
 }
}
```

```

 auto-discovery;
 }
}
maintenance-association vlan3150 {
 continuity-check {
 interval 1s;
 }
 mep 102 {
 interface cbp0.0 vlan 3150;
 direction up;
 auto-discovery;
 }
}
}
}
}
}
}
}
}
}
}

```

### Configuring a MIP on BCB1 (Syrah)

#### CLI Quick Configuration

To quickly configure a MIP for BCB1, copy the following commands and paste them into the router terminal window:

```

[edit]
set protocols oam ethernet connectivity-fault-management maintenance-domain default-5
virtual-switch pbbn-1 bridge-domain eline-bvlan vlan-id 3150
set protocols oam ethernet connectivity-fault-management maintenance-domain default-5
mip-half-function default

```

#### Step-by-Step Procedure

To configure a MIP for BCB1:

1. Configure a maintenance domain **default-5** and the bridge domain **eline-bvlan** and associate them to VLAN ID **3150**.

```

[edit protocols oam]
user@bcb1# set ethernet connectivity-fault-management maintenance-domain default-5
virtual-switch pbbn-1 bridge-domain eline-bvlan vlan-id 3150

```

2. Specify the OAM Ethernet CFM maintenance domain MIP half functions (here, the MIP half function is **default**):

```

[edit protocols oam]
user@bcb1# ethernet connectivity-fault-management maintenance-domain default-5
mip-half-function default

```



**NOTE:** Whenever a MIP is configured and a bridge domain is mapped to multiple maintenance domains (MDs) or maintenance associations (MAs), it is essential that the **mip-half-function** value for all MDs and MAs be the same.

**Results** Check the results of the configuration:

```

user@bcb1> show configuration
protocols {
 oam {
 ethernet {
 maintenance-domain default-5 {
 virtual-switch pbbn-1 bridge-domain{
 }
 mip-half-function default;
 }
 }
 }
}

```

### Configuring a MIP on BCB2 (Cabernet)

#### CLI Quick Configuration

To quickly configure a MIP for BCB2, copy the following commands and paste them into the router terminal window:

```

[edit]
set protocols oam ethernet connectivity-fault-management maintenance-domain default-5
virtual-switch pbbn-1 bridge-domain eline-bvlan vlan-id 3150
set protocols oam ethernet connectivity-fault-management maintenance-domain default-5
mip-half-function default

```

#### Step-by-Step Procedure

To configure a MIP for BCB2:

1. Configure maintenance domain **default-5** and the bridge domain **eline-bvlan** and associate them to VLAN ID 3150.

```

[edit protocols oam]
user@bcb2# set ethernet connectivity-fault-management maintenance-domain default-5
virtual-switch pbbn-1 bridge-domain eline-bvlan vlan-id 3150

```

2. Specify the OAM Ethernet CFM maintenance domain MIP half functions (here, the MIP half function is **default**):

```

[edit protocols oam]
user@bcb2# ethernet connectivity-fault-management maintenance-domain default-5
mip-half-function default

```



**NOTE:** Whenever a MIP is configured and a bridge domain is mapped to multiple maintenance domains (MDs) or maintenance associations (MAs), it is essential that the **mip-half-function** value for all MDs and MAs be the same.

**Results** Check the results of the configuration:

```

user@bcb2> show configuration
protocols {
 oam {
 ethernet {
 maintenance-domain default-5 {

```

```

 virtual-switch pbbn-1 bridge-domain{
 }
 mip-half-function default;
 }
}
}
}
}

```

## Configuring Connectivity Fault Management for a PBN

To configure connectivity fault management on MX Series routers in a PBN, perform these tasks:

- Configuring a MIP on BEB1 (Sangiovese) on page 117
- Configuring a MIP on BEB2 (Barbera) on page 118
- Configuring a MIP on BEB4 (Cubs) on page 119
- Configuring a MEP on ES1 (Pinot Noir) on page 120
- Configuring a MEP on ES4 (Reds) on page 123

### Configuring a MIP on BEB1 (Sangiovese)

#### CLI Quick Configuration

To quickly configure a MIP for BEB1, copy the following commands and paste them into the router terminal window:

```

[edit]
set protocols oam ethernet connectivity-fault-management maintenance-domain default-3
virtual-switch pbn-1-for-eline bridge-domain eline-svlans vlan-id 1200
set protocols oam ethernet connectivity-fault-management maintenance-domain default-3
virtual-switch pbn-1-for-eline bridge-domain eline-svlans vlan-id 2100
set protocols oam ethernet connectivity-fault-management maintenance-domain default-3
mip-half-function default

```

#### Step-by-Step Procedure

To configure a MIP for BEB1:

1. To enable CFM at the B-VLAN level, specify the B-VLAN routing instance name, the B-VLAN ID, and the service group (here, the routing instance is **pbn-1-for-eline**, the B-VLAN IDs are **1200** and **2100**, and the service group is **eline-svlans**):

```

[edit protocols oam ethernet connectivity-fault-management]
set maintenance-domain default-3 virtual-switch pbn-1-for-eline bridge-domain
eline-svlans vlan-id 1200
set maintenance-domain default-3 virtual-switch pbn-1-for-eline bridge-domain
eline-svlans vlan-id 2100

```

2. Specify the OAM Ethernet CFM maintenance domain MIP half functions (here, the MIP half function is **default**):

```

[edit protocols oam ethernet connectivity-fault-management]
user@beb1# maintenance-domain default-3 mip-half-function default

```



**NOTE:** Whenever a MIP is configured and a bridge domain is mapped to multiple maintenance domains (MDs) or maintenance associations (MAs), it is essential that the `mip-half-function` value for all MDs and MAs be the same.

**Results** Check the results of the configuration:

```
user@beb1> show configuration
protocols {
 oam {
 ethernet {
 connectivity-fault-management {
 maintenance-domain default-3 {
 virtual-switch pbn-1-for-eline {
 bridge-domain eline-svlans vlan-id [1200 2100];
 }
 }
 }
 }
 }
}
```

### Configuring a MIP on BEB2 (Barbera)

**CLI Quick Configuration** To quickly configure a MIP for BEB2, copy the following commands and paste them into the router terminal window:

```
[edit]
set protocols oam ethernet connectivity-fault-management maintenance-domain default-3
virtual-switch pbn-1-for-eline bridge-domain eline-svlans vlan-id 1200
set protocols oam ethernet connectivity-fault-management maintenance-domain default-3
virtual-switch pbn-1-for-eline bridge-domain eline-svlans vlan-id 2100
set protocols oam ethernet connectivity-fault-management maintenance-domain default-3
mip-half-function default
```

**Step-by-Step Procedure** To configure a MIP for BEB2:

1. Create a MIP for the PBN (here, at level **default-3**):
 

```
[edit protocols oam]
set ethernet connectivity-fault-management maintenance-domain default-3
virtual-switch pbn-1-for-eline bridge-domain eline-svlans vlan-id 1200
set maintenance-domain default-3 virtual-switch pbn-1-for-eline bridge-domain
eline-svlans vlan-id 2100
```
2. Specify the OAM Ethernet CFM maintenance domain MIP half functions (here, the MIP half function is **default**):
 

```
[edit protocols oam]
user@beb2# ethernet connectivity-fault-management maintenance-domain default-3
mip-half-function default
```



**NOTE:** Whenever a MIP is configured and a bridge domain is mapped to multiple MDs or MAs, it is essential that the `mip-half-function` value for all MDs and MAs be the same.

**Results** Check the results of the configuration:

```
user@beb2> show configuration
protocols {
 oam {
 ethernet {
 connectivity-fault-management {
 maintenance-domain default-3 {
 virtual-switch pbn-1-for-eline {
 bridge-domain eline-svlans vlan-id [1200 2100];
 }
 }
 }
 }
 }
}
```

### Configuring a MIP on BEB4 (Cubs)

**CLI Quick Configuration** To quickly configure a MIP for BEB4, copy the following commands and paste them into the router terminal window:

```
[edit]
set protocols oam ethernet connectivity-fault-management maintenance-domain default-3
virtual-switch pbn-3-for-eline bridge-domain eline-svlans vlan-id 1200
set protocols oam ethernet connectivity-fault-management maintenance-domain default-3
virtual-switch pbn-3-for-eline bridge-domain eline-svlans vlan-id 2100
set protocols oam ethernet connectivity-fault-management maintenance-domain default-3
mip-half-function default
```

**Step-by-Step Procedure** To configure a MIP for BEB4:

1. To enable CFM at the B-VLAN level, specify the B-VLAN routing instance name, the B-VLAN ID, and the service group (here, the routing instance is **pbn-3-for-eline** the B-VLAN IDs are **1200** and **2100**, and the service group is **eline-svlans**):

```
[edit protocols oam]
set ethernet connectivity-fault-management maintenance-domain default-3
virtual-switch pbn-3-for-eline bridge-domain eline-svlans vlan-id 1200
set ethernet connectivity-fault-management maintenance-domain default-3
virtual-switch pbn-3-for-eline bridge-domain eline-svlans vlan-id 2100
```

2. Specify the OAM Ethernet CFM maintenance domain MIP half functions (here, the MIP half function is **default**):

```
[edit protocols oam]
user@beb4# ethernet connectivity-fault-management maintenance-domain default-3
mip-half-function default
```



**NOTE:** Whenever a MIP is configured and a bridge domain is mapped to multiple maintenance domains (MDs) or maintenance associations (MAs), it is essential that the `mip-half-function` value for all MDs and MAs be the same.

**Results** Check the results of the configuration:

```
user@beb4> show configuration
protocols {
 oam {
 ethernet {
 connectivity-fault-management {
 maintenance-domain default-3 {
 virtual-switch pbn-3-for-eline {
 bridge-domain eline-svlans vlan-id [1200 2100];
 }
 mip-half-function default;
 }
 }
 }
 }
}
```

### Configuring a MEP on ES1 (Pinot Noir)

**CLI Quick Configuration** To quickly configure a MEP for ES1, copy the following commands and paste them into the router terminal window:

```
[edit]
set protocols oam ethernet ethernet connectivity-fault-management maintenance-domain
es-domain level 3
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 continuity-check interval 1s
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 1 interface ge-1/1/0.0
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 1 interface vlan 500
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 1 direction up
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 1 auto-discovery
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 continuity-check interval 1s
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 1 interface ge-1/1/0.0
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 1 interface vlan 600
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 1 direction up
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 1 auto-discovery
```

**Step-by-Step  
Procedure**

To configure a MEP for ES1:

1. Configure the maintenance domain **es-domain**, a mandatory parameter that indicates the nesting relationship between various maintenance domains and is embedded in each of the CFM frames:

```
[edit protocols oam]
user@es1# set protocols oam ethernet ethernet connectivity-fault-management
maintenance-domain es-domain level 3
```

2. Configure the continuity check interval for the maintenance association (here, **vlan3350**). The continuity check protocol is used for fault detection by a MEP. The MEP periodically sends continuity check multicast messages, and receiving MEPs use the CC messages to build a MEP database of all MEPs in the maintenance association.

```
[edit protocols oam]
user@es1# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 continuity-check interval 1s
```

3. Configure a MEP with the same maintenance domain and maintenance association identifier (here, **es-domain** and **eline-1**) and associate them to VLAN 500 and the pseudo-logical interface **ge-1/1/0.0**.

```
[edit protocols oam]
user@es1# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 1 interface ge-1/1/0.0
user@es1# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 1 interface vlan 500
```

4. Configure the direction in which CFM packets are transmitted for the MEP. Direction up CCMs are transmitted out of every logical interface that is part of the same bridge (here, direction is specified as **up**).

```
[edit protocols oam]
user@es1# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 1 direction up
```

5. Configure automatic discovery to enable the MEP to accept continuity check messages from all remote MEPs of the same maintenance association.

```
[edit protocols oam]
user@es1# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association eline-1 mep 1 auto-discovery
```

6. Configure the continuity check interval for the maintenance association (here, **vlan3150**). The continuity check protocol is used for fault detection by a MEP. The MEP periodically sends continuity check multicast messages, and receiving MEPs use the CC messages to build a MEP database of all MEPs in the maintenance association.

```
[edit protocols oam]
user@es1# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 continuity-check interval 1s
```

7. Configure a MEP with the same maintenance domain and maintenance association identifier (here, **es-domain** and **eline-2**) and associate them to VLAN 500 and the pseudo-logical interface **ge-1/0/3.6**.

```
[edit protocols oam]
user@es1# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 1 interface ge-1/1/0.0
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 1 interface vlan 600
```

8. Configure the direction in which CFM packets are transmitted for the MEP. Direction up CCMs are transmitted out of every logical interface that is part of the same bridge (here, direction is specified as **up**).

```
[edit protocols oam]
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 1 direction up
```

9. Configure automatic discovery to enable the MEP to accept continuity check messages from all remote MEPs of the same maintenance association.

```
[edit protocols oam]
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 1 auto-discovery
```

**Results** Check the results of the configuration:

```
user@es1> show configuration
protocols {
 oam {
 ethernet {
 connectivity-fault-management {
 maintenance-domain es-domain {
 level 3;
 maintenance-association eline-1 {
 continuity-check {
 interval 1s;
 }
 mep 1 {
 interface ge-1/1/0.0 vlan 500;
 direction up;
 auto-discovery;
 }
 }
 maintenance-association eline-2 {
 continuity-check {
 interval 1s;
 }
 mep 1 {
 interface ge-1/1/0.0 vlan 600;
 direction up;
 auto-discovery;
 }
 }
 }
 }
 }
 }
}
```

### Configuring a MEP on ES4 (Reds)

#### CLI Quick Configuration

To quickly configure OAM for ES4, copy the following commands and paste them into the router terminal window:

```
[edit]
set protocols oam ethernet connectivity-fault-management maintenance-domain
es-domain level 3
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 continuity-check interval 1s
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 2 interface ge-1/0/3.5
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 2 interface vlan 500
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 2 direction up
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 2 auto-discovery
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 continuity-check interval 1s
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 2 interface ge-1/0/3.6
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 2 interface vlan 600
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 2 direction up
set protocols oam ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 2 auto-discovery
```

#### Step-by-Step Procedure

To configure a MEP for ES4:

1. Configure the maintenance domain **es-domain**, a mandatory parameter that indicates the nesting relationship between various maintenance domains and is embedded in each of the CFM frames:

```
[edit protocols oam]
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
level 3
```

2. Configure the continuity check interval for the maintenance association (here, **vlan3350**). The continuity check protocol is used for fault detection by a MEP. The MEP periodically sends continuity check multicast messages, and receiving MEPs use the CC messages to build a MEP database of all MEPs in the maintenance association.

```
[edit protocols oam]
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 continuity-check interval 1s
```

3. Configure a MEP with the same maintenance domain and maintenance association identifier (here, **es-domain** and **eline-1**) and associate them to VLAN 500 and the pseudo-logical interface **ge-1/0/3.5**.

```
[edit protocols oam]
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 2 interface ge-1/0/3.5
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 2 interface vlan 500
```

4. Configure the direction in which CFM packets are transmitted for the MEP. Direction up CCMs are transmitted out of every logical interface that is part of the same bridge (here, direction is specified as **up**).

```
[edit protocols oam]
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-1 mep 2 direction up
```

5. Configure automatic discovery to enable the MEP to accept continuity check messages from all remote MEPs of the same maintenance association.

```
[edit protocols oam]
user@es4# set ethernet connectivity-fault-management maintenance-domain pbbn
maintenance-association eline-1 mep 2 auto-discovery
```

6. Configure the continuity check interval for the maintenance association (here, **vlan3150**). The continuity check protocol is used for fault detection by a MEP. The MEP periodically sends continuity check multicast messages, and receiving MEPs use the CC messages to build a MEP database of all MEPs in the maintenance association.

```
[edit protocols oam]
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 continuity-check interval 1s
```

7. Configure a MEP with the same maintenance domain and maintenance association identifier (here, **es-domain** and **eline-2**) and associate them to VLAN 500 and the pseudo-logical interface **ge-1/0/3.6**.

```
[edit protocols oam]
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 2 interface ge-1/0/3.6
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 2 interface vlan 600
```

8. Configure the direction in which CFM packets are transmitted for the MEP. Direction up CCMs are transmitted out of every logical interface that is part of the same bridge (here, direction is specified as **up**).

```
[edit protocols oam]
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 2 direction up
```

9. Configure automatic discovery to enable the MEP to accept continuity check messages from all remote MEPs of the same maintenance association.

```
[edit protocols oam]
user@es4# set ethernet connectivity-fault-management maintenance-domain es-domain
maintenance-association eline-2 mep 2 auto-discovery
```

**Results** Check the results of the configuration:

```
user@es4> show configuration
protocols {
 oam {
 ethernet {
 connectivity-fault-management {
 maintenance-domain es-domain {
```

```

level 3;
maintenance-association eline-1 {
 continuity-check {
 interval 1s;
 }
 mep 2 {
 interface ge-1/0/3.5 vlan 500;
 direction up;
 auto-discovery;
 }
}
maintenance-association eline-2 {
 continuity-check {
 interval 1s;
 }
 mep 2 {
 interface ge-1/0/3.6 vlan 600;
 direction up;
 auto-discovery;
 }
}
}
}
}
}
}
}
}

```

## Verification

To confirm that the configuration is working properly on each router in the PBBN and PBN:

- Verify that the CC protocol is **UP** for VLAN 3150 and VLAN 3350 (in the PBBN) and VLAN 500 and VLAN 600 (in the PBN). The MEP should be able to discover remote MEPs in each VLAN.
- Verify the path between a pair of MEPs using the Linktrace protocol. The MIPs should respond to linktrace messages.

To confirm that the configuration is working properly, perform these tasks:

- Verifying CFM on VLAN 3150 in the PBBN on page 125
- Verifying CFM for VLAN 3350 in the PBBN on page 130
- Verifying CFM for VLAN 500 in the PBN on page 133
- Verifying CFM for VLAN 600 in the PBN on page 137

### Verifying CFM on VLAN 3150 in the PBBN

**Purpose** Verify the CFM configuration on the following routers that are participating in VLAN-3150 using the maintenance domain **pbbn** and the maintenance association **vlan3150** level-5 for OAM monitoring:

- BEB1 (Sangiovese) MEP-100
- BEB2 (Barbera) MEP-101
- BEB4 (Cubs) MEP-102
- BCB1 (Syrah) MIP
- BCB2 (Cabernet) MIP

**Action** For BEB1:

Use the following operational mode command on BEB1 to verify the connectivity of the MEP to the remote MEPs (the remote MEPs are displayed at the bottom of the output):

```
user@beb1> show oam ethernet connectivity-fault-management mep-database
maintenance-domain pbbn maintenance-association vlan3150
Interface name: cbp0.0, vlan 3150, Interface status: Active, Link status: Up
Maintenance domain name: pbbn, Format: string, Level: 5
Maintenance association name: vlan3150, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
Interface status TLV: none, Port status TLV: none
MEP identifier: 100, Direction: up, MAC address: 00:21:59:aa:78:11
MEP status: running
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : no
 Cross-connect CCM received : no
 RDI sent by some MEP : no
 Some remote MEP's MAC in error state : no
Statistics:
 CCMs sent : 14670
 CCMs received out of sequence : 0
 LBMs sent : 0
 Valid in-order LBRs received : 0
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMs sent : 5
 LTMs received : 0
 LTRs sent : 0
 LTRs received : 10
 Sequence number of next LTM request : 5
 1DMs sent : 0
 Valid 1DMs received : 0
 Invalid 1DMs received : 0
 Out of sync 1DMs received : 0
 DMMs sent : 0
 Valid DMMs received : 0
 Invalid DMMs received : 0
 DMRs sent : 0
 Valid DMRs received : 0
 Invalid DMRs received : 0
Remote MEP count: 2
 Identifier MAC address State Interface
 101 00:22:83:32:d8:11 ok ge-1/3/9.0
 102 00:1f:12:b8:38:11 ok ge-1/3/9.0
```

Perform a linktrace to each remote MEP to display the path from the source MEP to the remote MEP:

```
user@beb1> traceroute ethernet maintenance-domain pbbn maintenance-association vlan3150
00:22:83:32:d8:11
```

```
Linktrace to 00:22:83:32:d8:11, Interface : ge-1/3/9.0
Maintenance Domain: pbbn, Level: 5
Maintenance Association: vlan3150, Local Mep: 100
Transaction Identifier: 5
```

| Hop | TTL | Source MAC address | Next-hop MAC address |
|-----|-----|--------------------|----------------------|
| .   |     |                    |                      |
| 1   | 62  | 00:21:59:aa:74:8d  | 00:21:59:aa:74:84    |
| 2   | 61  | 00:22:83:32:d8:11  | 00:00:00:00:00:00    |

```
user@beb1> traceroute ethernet maintenance-domain pbbn maintenance-association vlan3150
00:21:59:aa:74:8d
```

```
Linktrace to 00:1f:12:b8:38:11, Interface : ge-1/3/9.0
Maintenance Domain: pbbn, Level: 5
Maintenance Association: vlan3150, Local Mep: 100
Transaction Identifier: 6
```

| Hop | TTL | Source MAC address | Next-hop MAC address |
|-----|-----|--------------------|----------------------|
| .   |     |                    |                      |
| 1   | 62  | 00:21:59:aa:74:8d  | 00:21:59:aa:75:d4    |
| 2   | 61  | 00:1f:12:b8:38:11  | 00:00:00:00:00:00    |

For BEB2:

Use the following operational mode command on BEB2 to verify the connectivity of the MEP to the remote MEPs (the remote MEPs are displayed at the bottom of the output):

```
user@beb2> show oam ethernet connectivity-fault-management mep-database
maintenance-domain pbbn maintenance-association vlan3150
Interface name: cbp0.0, vlan 3150, Interface status: Active, Link status: Up
Maintenance domain name: pbbn, Format: string, Level: 5
Maintenance association name: vlan3150, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
Interface status TLV: none, Port status TLV: none
MEP identifier: 101, Direction: up, MAC address: 00:22:83:32:d8:11
MEP status: running
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : no
 Cross-connect CCM received : no
 RDI sent by some MEP : no
 Some remote MEP's MAC in error state : no
Statistics:
 CCMs sent : 6021
 CCMs received out of sequence : 0
 LBMs sent : 0
 Valid in-order LBRs received : 0
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMs sent : 1
 LTMs received : 4
 LTRs sent : 4
 LTRs received : 2
 Sequence number of next LTM request : 1
 1DMs sent : 0
 Valid 1DMs received : 0
```

```

Invalid 1DMs received : 0
Out of sync 1DMs received : 0
DMMs sent : 0
Valid DMMs received : 0
Invalid DMMs received : 0
DMRs sent : 0
Valid DMRs received : 0
Invalid DMRs received : 0
Remote MEP count: 2
Identifier MAC address State Interface
100 00:21:59:aa:78:11 ok ge-1/3/0.0
102 00:1f:12:b8:38:11 ok ge-1/3/0.0

```

Perform a linktrace to each remote MEP to display the path from the source MEP to the remote MEP:

```

user@beb2> traceroute ethernet maintenance-domain pbbn maintenance-association vlan3150
00:21:59:aa:78:11

```

```

Linktrace to 00:21:59:aa:78:11, Interface : ge-1/3/0.0
Maintenance Domain: pbbn, Level: 5
Maintenance Association: vlan3150, Local Mep: 101
Transaction Identifier: 1
Hop TTL Source MAC address Next-hop MAC address
.
1 62 00:21:59:aa:74:84 00:21:59:aa:74:8d
2 61 00:21:59:aa:78:11 00:00:00:00:00:00

```

```

user@beb2> traceroute ethernet maintenance-domain pbbn maintenance-association vlan3150
00:1f:12:b8:38:11

```

```

Linktrace to 00:1f:12:b8:38:11, Interface : ge-1/3/0.0
Maintenance Domain: pbbn, Level: 5
Maintenance Association: vlan3150, Local Mep: 101
Transaction Identifier: 2
Hop TTL Source MAC address Next-hop MAC address
.
1 62 00:21:59:aa:74:84 00:21:59:aa:75:d4
2 61 00:1f:12:b8:38:11 00:00:00:00:00:00

```

For BEB4:

Use the following operational mode command on BEB4 to verify the connectivity of the MEP to the remote MEPs (the remote MEPs are displayed at the bottom of the output):

```

user@beb4> show oam ethernet connectivity-fault-management mep-database
maintenance-domain pbbn maintenance-association vlan3150
Interface name: cbp0.0, vlan 3150, Interface status: Active, Link status: Up
Maintenance domain name: pbbn, Format: string, Level: 5
Maintenance association name: vlan3150, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
Interface status TLV: none, Port status TLV: none
MEP identifier: 102, Direction: up, MAC address: 00:1f:12:b8:38:11
MEP status: running
Defects:
Remote MEP not receiving CCM : no
Erroneous CCM received : no
Cross-connect CCM received : no
RDI sent by some MEP : no
Some remote MEP's MAC in error state : no
Statistics:
CCMs sent : 7507

```

```

CCMs received out of sequence : 0
LBMs sent : 0
Valid in-order LBRs received : 0
Valid out-of-order LBRs received : 0
LBRs received with corrupted data : 0
LBRs sent : 0
LTMs sent : 1
LTMs received : 6
LTRs sent : 6
LTRs received : 2
Sequence number of next LTM request : 1
1DMs sent : 0
Valid 1DMs received : 0
Invalid 1DMs received : 0
Out of sync 1DMs received : 0
DMMs sent : 0
Valid DMMs received : 0
Invalid DMMs received : 0
DMRs sent : 0
Valid DMRs received : 0
Invalid DMRs received : 0
Remote MEP count: 2
Identifier MAC address State Interface
100 00:21:59:aa:78:11 ok ge-1/0/4.0
101 00:22:83:32:d8:11 ok ge-1/0/4.0

```

Perform a linktrace to each remote MEP to display the path from the source MEP to the remote MEP:

```

user@beb4> traceroute ethernet maintenance-domain pbbn maintenance-association vlan3150
00:21:59:aa:78:11

```

```

Linktrace to 00:21:59:aa:78:11, Interface : ge-1/0/4.0
Maintenance Domain: pbbn, Level: 5
Maintenance Association: vlan3150, Local Mep: 102
Transaction Identifier: 1
Hop TTL Source MAC address Next-hop MAC address
.
1 62 00:21:59:aa:75:d4 00:21:59:aa:74:8d
2 61 00:21:59:aa:78:11 00:00:00:00:00:00

```

```

user@beb4> traceroute ethernet maintenance-domain pbbn maintenance-association vlan3150
00:22:83:32:d8:11

```

```

Linktrace to 00:22:83:32:d8:11, Interface : ge-1/0/4.0
Maintenance Domain: pbbn, Level: 5
Maintenance Association: vlan3150, Local Mep: 102
Transaction Identifier: 2
Hop TTL Source MAC address Next-hop MAC address
.
1 62 00:21:59:aa:75:d4 00:21:59:aa:74:8d
2 61 00:22:83:32:d8:11 00:00:00:00:00:00

```

For BCB1:

Use the following operational mode command on BCB1 to verify the MIP status:

```

user@bcb1> show oam ethernet connectivity-fault-management mip
MIP information for instance pbbn-1 eline-bvlan-vlan-3150
maintenance-domain mhf : unspecified
maintenance-association mhf : unspecified
default maintenance-domain mhf : default

```

| Interface  | Level |
|------------|-------|
| ge-2/1/5.0 | 5     |
| ge-2/3/0.0 | 5     |
| ge-2/3/9.0 | 5     |
| ge-1/3/0.0 | 5     |
| ge-1/3/9.0 | 5     |

For BCB2:

Use the following operational mode command on BCB2 to verify the MIP status:

```
user@bcb2> show oam ethernet connectivity-fault-management mip
MIP information for instance pbbn-1 e-line-bvlan-vlan-3150
 maintenance-domain mhf : unspecified
 maintenance-association mhf : unspecified
 default maintenance-domain mhf : default
```

| Interface  | Level |
|------------|-------|
| ge-2/0/6.0 | 5     |
| ge-1/3/0.0 | 5     |
| ge-1/3/9.0 | 5     |
| ge-2/3/0.0 | 5     |
| ge-2/3/9.0 | 5     |

**Meaning** The command **show oam ethernet connectivity-fault-management interfaces mep-database** displays the CFM connectivity status per service. When used with the maintenance association **vlan3150**, it displays the source MAC addresses for the **Remote MEPs** at the bottom of the output. Use the MAC addresses shown in the **Remote MEPs** section along with the maintenance association to issue the **traceroute ethernet** command. This command triggers the linktrace protocol to trace the route between two maintenance points. The operational mode command **show oam ethernet connectivity-fault-management mip** displays all the MIPs created in the system.

---

#### Verifying CFM for VLAN 3350 in the PBBN

---

**Purpose** Verify the CFM configuration on the following routers that are participating in VLAN 3350 using the maintenance domain **pbbn** and the maintenance association **vlan3350** level-5 for OAM monitoring:

- BEB1 (Sangiovese) MEP-100
- BEB4 (Cubs) MEP-102
- BCB1 (Syrah) MIP
- BCB2 (Cabernet) MIP

**Action** For BEB1:

Use the following operational mode command on BEB1 to verify the connectivity of the MEP to the remote MEPs (the remote MEPs are displayed at the bottom of the output):

```

user@beb1> show oam ethernet connectivity-fault-management mep-database
maintenance-domain pbbn maintenance-association vlan3350
Interface name: cbp0.0, vlan 3350, Interface status: Active, Link status: Up
Maintenance domain name: pbbn, Format: string, Level: 5
Maintenance association name: vlan3350, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
Interface status TLV: none, Port status TLV: none
MEP identifier: 100, Direction: up, MAC address: 00:21:59:aa:78:11
MEP status: running
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : no
 Cross-connect CCM received : no
 RDI sent by some MEP : no
 Some remote MEP's MAC in error state : no
Statistics:
 CCMs sent : 14666
 CCMs received out of sequence : 0
 LBMs sent : 0
 Valid in-order LBRs received : 0
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMs sent : 2
 LTMs received : 0
 LTRs sent : 0
 LTRs received : 2
 Sequence number of next LTM request : 2
 1DMs sent : 0
 Valid 1DMs received : 0
 Invalid 1DMs received : 0
 Out of sync 1DMs received : 0
 DMMs sent : 0
 Valid DMMs received : 0
 Invalid DMMs received : 0
 DMRs sent : 0
 Valid DMRs received : 0
 Invalid DMRs received : 0
Remote MEP count: 1
 Identifier MAC address State Interface
 102 00:1f:12:b8:38:11 ok ge-1/3/9.0

```

Perform a linktrace to each remote MEP to display the path from the source MEP to the remote MEP:

```

user@beb1> traceroute ethernet maintenance-domain pbbn maintenance-association vlan3350
00:1f:12:b8:38:11
Linktrace to 00:1f:12:b8:38:11, Interface : ge-1/3/9.0
Maintenance Domain: pbbn, Level: 5
Maintenance Association: vlan3350, Local Mep: 100
Transaction Identifier: 2
Hop TTL Source MAC address Next-hop MAC address
.
1 62 00:1f:12:b8:38:11 00:00:00:00:00:00

```

For BEB4:

Use the following operational mode command on BEB4 to verify the connectivity of the MEP to the remote MEPs (the remote MEPs are displayed at the bottom of the output):

```
user@beb4> show oam ethernet connectivity-fault-management mep-database
maintenance-domain pbbn maintenance-association vlan3350
Interface name: cbp0.0, vlan 3350, Interface status: Active, Link status: Up
Maintenance domain name: pbbn, Format: string, Level: 5
Maintenance association name: vlan3350, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
Interface status TLV: none, Port status TLV: none
MEP identifier: 102, Direction: up, MAC address: 00:1f:12:b8:38:11
MEP status: running
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : no
 Cross-connect CCM received : no
 RDI sent by some MEP : no
 Some remote MEP's MAC in error state : no
Statistics:
 CCMs sent : 7507
 CCMs received out of sequence : 0
 LBMs sent : 0
 Valid in-order LBRs received : 0
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMs sent : 0
 LTMs received : 3
 LTRs sent : 3
 LTRs received : 0
 Sequence number of next LTM request : 0
 1DMs sent : 0
 Valid 1DMs received : 0
 Invalid 1DMs received : 0
 Out of sync 1DMs received : 0
 DMMs sent : 0
 Valid DMMs received : 0
 Invalid DMMs received : 0
 DMRs sent : 0
 Valid DMRs received : 0
 Invalid DMRs received : 0
Remote MEP count: 1
 Identifier MAC address State Interface
 100 00:21:59:aa:78:11 ok ge-1/0/4.0
```

Perform a linktrace to the remote MEP to display the path from the source MEP to the remote MEP:

```
user@beb4> traceroute ethernet maintenance-domain pbbn maintenance-association vlan3350
00:21:59:aa:78:11
Linktrace to 00:21:59:aa:78:11, Interface : ge-1/0/4.0
 Maintenance Domain: pbbn, Level: 5
 Maintenance Association: vlan3350, Local Mep: 102
 Transaction Identifier: 0
Hop TTL Source MAC address Next-hop MAC address
.
1 62 00:21:59:aa:78:11 00:00:00:00:00:00
```

For BCB1:

Use the following operational mode command on BCB1 to verify the MIP status:

```
user@bcb1> show oam ethernet connectivity-fault-management mip
MIP information for instance pbbn-1 eline-bvlan-vlan-3150
 maintenance-domain mhf : unspecified
 maintenance-association mhf : unspecified
 default maintenance-domain mhf : default

Interface Level
ge-2/1/5.0 5
ge-2/3/0.0 5
ge-2/3/9.0 5
ge-1/3/0.0 5
ge-1/3/9.0 5
```

For BCB2:

Use the following operational mode command on BCB2 to verify the MIP status:

```
user@bcb2> show oam ethernet connectivity-fault-management mip
MIP information for instance pbbn-1 eline-bvlan-vlan-3150
 maintenance-domain mhf : unspecified
 maintenance-association mhf : unspecified
 default maintenance-domain mhf : default

Interface Level
ge-2/0/6.0 5
ge-1/3/0.0 5
ge-1/3/9.0 5
ge-2/3/0.0 5
ge-2/3/9.0 5
```

**Meaning** The command **show oam ethernet connectivity-fault-management interfaces mep-database** displays the CFM connectivity status per service. When used with the maintenance association **vlan3350**, it displays the source MAC addresses for the **Remote MEPs** at the bottom of the output. Use the MAC addresses shown in the **Remote MEPs** section along with the maintenance association to issue the **traceroute ethernet** command. This command triggers the linktrace protocol to trace the route between two maintenance points. The operational mode command **show oam ethernet connectivity-fault-management mip** displays all the MIPs created in the system.

### Verifying CFM for VLAN 500 in the PBN

**Purpose** Verify the CFM configuration on the following routers that are participating in VLAN 500 using the maintenance domain **es-domain** and the maintenance association **eline-1** at level-3 for OAM monitoring:

- ES1 (Pinot Noir) MEP-1
- ES4 (Reds) MEP-2
- BEB1 (Sangiovese) MIP
- BEB2 (Barbera) MIP
- BEB4 (Cubs) MIP

**Action** For ES1:

Use the following operational mode command on ES1 to verify the connectivity of the MEP to the remote MEPs (the remote MEPs are displayed at the bottom of the output):

```

user@es1> show oam ethernet connectivity-fault-management mep-database
maintenance-domain es-domain maintenance-association eline-1
Interface name: ge-1/1/0.0, vlan 500, Interface status: Active, Link status: Up
Maintenance domain name: es-domain, Format: string, Level: 3
Maintenance association name: eline-1, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
Interface status TLV: none, Port status TLV: none
MEP identifier: 1, Direction: up, MAC address: 00:21:59:01:e3:3a
MEP status: running
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : no
 Cross-connect CCM received : no
 RDI sent by some MEP : no
 Some remote MEP's MAC in error state : no
Statistics:
 CCMs sent : 29310
 CCMs received out of sequence : 0
 LBMs sent : 0
 Valid in-order LBRs received : 0
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMs sent : 3
 LTMs received : 2
 LTRs sent : 2
 LTRs received : 9
 Sequence number of next LTM request : 3
 1DMs sent : 0
 Valid 1DMs received : 0
 Invalid 1DMs received : 0
 Out of sync 1DMs received : 0
 DMMs sent : 0
 Valid DMMs received : 0
 Invalid DMMs received : 0
 DMRs sent : 0
 Valid DMRs received : 0
 Invalid DMRs received : 0
Remote MEP count: 1
 Identifier MAC address State Interface
 2 00:1f:12:b8:72:98 ok ge-2/0/0.1

```

Perform a linktrace to each remote MEP to display the path from the source MEP to the remote MEP:

```

user@es1> traceroute ethernet maintenance-domain pbbn maintenance-association eline-1
mep2
Linktrace to 00:1f:12:b8:72:98, Interface : ge-2/0/0.1
Maintenance Domain: es-domain, Level: 3
Maintenance Association: eline-1, Local Mep: 1
Transaction Identifier: 1
Hop TTL Source MAC address Next-hop MAC address
.
1 60 00:1f:12:b8:72:98 00:00:00:00:00:00
2 61 00:1f:12:b8:3f:b0 00:1f:12:b8:3a:95

```

3      62      00:21:59:aa:7d:2a      00:21:59:aa:7f:b0

For ES4:

Use the following operational mode command on ES4 to verify the connectivity of the MEP to the remote MEPs (the remote MEPs are displayed at the bottom of the output):

```
user@es4> show oam ethernet connectivity-fault-management mep-database
maintenance-domain es-domain maintenance-association eline-1
Interface name: ge-1/0/3.5, vlan 500, Interface status: Active, Link status: Up
Maintenance domain name: es-domain, Format: string, Level: 3
Maintenance association name: eline-1, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
Interface status TLV: none, Port status TLV: none
MEP identifier: 2, Direction: up, MAC address: 00:1f:12:b8:72:98
MEP status: running
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : no
 Cross-connect CCM received : no
 RDI sent by some MEP : no
 Some remote MEP's MAC in error state : no
Statistics:
 CCMs sent : 8133
 CCMs received out of sequence : 0
 LBMs sent : 8
 Valid in-order LBRs received : 0
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMs sent : 4
 LTMs received : 0
 LTRs sent : 0
 LTRs received : 8
 Sequence number of next LTM request : 4
 1DMs sent : 0
 Valid 1DMs received : 0
 Invalid 1DMs received : 0
 Out of sync 1DMs received : 0
 DMMs sent : 0
 Valid DMMs received : 0
 Invalid DMMs received : 0
 DMRs sent : 0
 Valid DMRs received : 0
 Invalid DMRs received : 0
Remote MEP count: 1
 Identifier MAC address State Interface
 1 00:21:59:01:e3:3a ok ge-1/0/0.1
```

Perform a linktrace to each remote MEP to display the path from the source MEP to the remote MEP:

```
user@es4> traceroute ethernet maintenance-domain pbbn maintenance-association eline-1
00:21:59:01:e3:3a
Linktrace to 00:21:59:01:e3:3a, Interface : ge-1/0/0.1
Maintenance Domain: es-domain, Level: 3
Maintenance Association: eline-1, Local Mep: 2
Transaction Identifier: 4
```

| Hop | TTL | Source MAC address | Next-hop MAC address |
|-----|-----|--------------------|----------------------|
| .   |     |                    |                      |
| 1   | 62  | 00:1f:12:b8:3a:95  | 00:1f:12:b8:3f:b0    |
| 2   | 61  | 00:22:83:32:df:b0  | 00:22:83:32:da:95    |

For BEB1:

Use the following operational mode command on BEB1 to verify the MIP status:

```
user@beb1> show oam ethernet connectivity-fault-management mip
MIP information for instance pbn-1-for-eline eline-svlans-vlan-1200
maintenance-domain mhf : unspecified
maintenance-association mhf : unspecified
default maintenance-domain mhf : default

Interface Level
pip0.0 3
ge-2/0/0.2 3

MIP information for instance pbn-1-for-eline eline-svlans-vlan-2100
maintenance-domain mhf : unspecified
maintenance-association mhf : unspecified
default maintenance-domain mhf : default

Interface Level
pip0.0 3
ge-2/0/0.1 3
```

For BEB2:

Use the following operational mode command on BEB2 to verify the MIP status:

```
user@beb2> show oam ethernet connectivity-fault-management mip
MIP information for instance pbn-1-for-eline eline-svlans-vlan-1200
maintenance-domain mhf : unspecified
maintenance-association mhf : unspecified
default maintenance-domain mhf : default

Interface Level
pip0.0 3
ge-1/0/0.2 3

MIP information for instance pbn-1-for-eline eline-svlans-vlan-2100
maintenance-domain mhf : unspecified
maintenance-association mhf : unspecified
default maintenance-domain mhf : default

Interface Level
pip0.0 3
ge-1/0/0.1 3
```

For BEB4:

Use the following operational mode command on BEB4 to verify the MIP status:

```
user@beb4> show oam ethernet connectivity-fault-management mip
MIP information for instance pbn-3-for-eline eline-svlans-vlan-1200
maintenance-domain mhf : unspecified
```

```

maintenance-association mhf : unspecified
default maintenance-domain mhf : default

```

```

Interface Level
pip0.0 3
ge-1/0/0.2 3

```

MIP information for instance pbn-3-for-eline eline-svlans-vlan-2100

```

maintenance-domain mhf : unspecified
maintenance-association mhf : unspecified
default maintenance-domain mhf : default

```

```

Interface Level
pip0.0 3
ge-1/0/0.1 3

```

**Meaning** The command **show oam ethernet connectivity-fault-management interfaces mep-database** displays the CFM connectivity status per service. When used with the maintenance association **eline-1**, it displays the source MAC addresses for the **Remote MEPs** at the bottom of the output. Use the MAC address shown in the **Remote MEPs** section along with the maintenance association to issue the **traceroute ethernet** command. This command triggers the linktrace protocol to trace the route between two maintenance points. The operational mode command **show oam ethernet connectivity-fault-management mip** displays all the MIPs created in the system.

### Verifying CFM for VLAN 600 in the PBN

**Purpose** Verify the CFM configuration on the following routers that are participating in VLAN 600 using the maintenance domain **es-domain** and the maintenance association **eline-2** at level-3 for OAM monitoring:

- ES1 (Pinot Noir) MEP-1
- ES4 (Reds) MEP-2
- BEB1 (Sangiovese) MIP
- BEB2 (Barbera) MIP
- BEB4 (Cubs) MIP

**Action** For ES1:

Use the following operational mode command on ES1 to verify the connectivity of the MEP to the remote MEPs (the remote MEPs are displayed at the bottom of the output):

```

user@es1> show oam ethernet connectivity-fault-management mep-database
maintenance-domain es-domain maintenance-association eline-2
Interface name: ge-1/1/0.0, vlan 600, Interface status: Active, Link status: Up
Maintenance domain name: es-domain, Format: string, Level: 3
Maintenance association name: eline-2, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
Interface status TLV: none, Port status TLV: none
MEP identifier: 1, Direction: up, MAC address: 00:21:59:01:e3:3a
MEP status: running
Defects:

```

```

Remote MEP not receiving CCM : no
Erroneous CCM received : no
Cross-connect CCM received : no
RDI sent by some MEP : no
Some remote MEP's MAC in error state : no
Statistics:
CCMs sent : 29310
CCMs received out of sequence : 0
LBMs sent : 19
Valid in-order LBRs received : 1
Valid out-of-order LBRs received : 0
LBRs received with corrupted data : 0
LBRs sent : 0
LTMs sent : 2
LTMs received : 0
LTRs sent : 0
LTRs received : 6
Sequence number of next LTM request : 2
1DMs sent : 0
Valid 1DMs received : 0
Invalid 1DMs received : 0
Out of sync 1DMs received : 0
DMMs sent : 0
Valid DMMs received : 0
Invalid DMMs received : 0
DMRs sent : 0
Valid DMRs received : 0
Invalid DMRs received : 0
Remote MEP count: 1
Identifier MAC address State Interface
2 00:1f:12:b8:72:98 ok ge-2/0/0.2

```

Perform a linktrace to each remote MEP to display the path from the source MEP to the remote MEP:

```

user@es1> traceroute ethernet maintenance-domain pbbn maintenance-association eline-2
mep2

```

```

Linktrace to 00:1f:12:b8:72:98, Interface : ge-2/0/0.2
Maintenance Domain: es-domain, Level: 3
Maintenance Association: eline-2, Local Mep: 2
Transaction Identifier: 1
Hop TTL Source MAC address Next-hop MAC address
.
1 60 00:1f:12:b8:72:98 00:00:00:00:00:00
2 61 00:1f:12:b8:3f:b0 00:1f:12:b8:3a:95
3 62 00:21:59:aa:7d:2a 00:21:59:aa:7f:b0

```

For ES4:

Use the following operational mode command on ES4 to verify the connectivity of the MEP to the remote MEPs (the remote MEPs are displayed at the bottom of the output):

```

user@es4> show oam ethernet connectivity-fault-management mep-database
maintenance-domain es-domain maintenance-association eline-2
Interface name: ge-1/0/3.6, vlan 600, Interface status: Active, Link status: Up
Maintenance domain name: es-domain, Format: string, Level: 3
Maintenance association name: eline-2, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames

```

```

Interface status TLV: none, Port status TLV: none
MEP identifier: 2, Direction: up, MAC address: 00:1f:12:b8:72:98
MEP status: running
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : no
 Cross-connect CCM received : no
 RDI sent by some MEP : no
 Some remote MEP's MAC in error state : no
Statistics:
 CCMs sent : 8135
 CCMs received out of sequence : 0
 LBMs sent : 0
 Valid in-order LBRs received : 0
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMs sent : 1
 LTMs received : 0
 LTRs sent : 0
 LTRs received : 2
 Sequence number of next LTM request : 1
 1DMs sent : 0
 Valid 1DMs received : 0
 Invalid 1DMs received : 0
 Out of sync 1DMs received : 0
 DMMs sent : 0
 Valid DMMs received : 0
 Invalid DMMs received : 0
 DMRs sent : 0
 Valid DMRs received : 0
 Invalid DMRs received : 0
Remote MEP count: 1
 Identifier MAC address State Interface
 1 00:21:59:01:e3:3a ok ge-1/0/0.2

```

Perform a linktrace to each remote MEP to display the path from the source MEP to the remote MEP:

```

user@es4> traceroute ethernet maintenance-domain pbbn maintenance-association eline-2
00:21:59:01:e3:3a
Linktrace to 00:21:59:01:e3:3a, Interface : ge-1/0/0.2
 Maintenance Domain: es-domain, Level: 3
 Maintenance Association: eline-2, Local Mep: 2
 Transaction Identifier: 1
Hop TTL Source MAC address Next-hop MAC address
.
1 62 00:1f:12:b8:3a:95 00:1f:12:b8:3f:b0
2 61 00:21:59:aa:7f:b0 00:21:59:aa:7d:2a

```

For BEB1:

Use the following operational mode command on BEB1 to verify the MIP status:

```

user@beb1> show oam ethernet connectivity-fault-management mip
MIP information for instance pbn-1-for-eline eline-svlans-vlan-1200
 maintenance-domain mhf : unspecified
 maintenance-association mhf : unspecified
 default maintenance-domain mhf : default

```

```
Interface Level
pip0.0 3
ge-2/0/0.2 3
```

```
MIP information for instance pbn-1-for-eline eline-svlans-vlan-2100
maintenance-domain mhf : unspecified
maintenance-association mhf : unspecified
default maintenance-domain mhf : default
```

```
Interface Level
pip0.0 3
ge-2/0/0.1 3
```

For BEB2:

Use the following operational mode command on BEB2 to verify the MIP status:

```
user@beb2> show oam ethernet connectivity-fault-management mip
MIP information for instance pbn-1-for-eline eline-svlans-vlan-1200
maintenance-domain mhf : unspecified
maintenance-association mhf : unspecified
default maintenance-domain mhf : default
```

```
Interface Level
pip0.0 3
ge-1/0/0.2 3
```

```
MIP information for instance pbn-1-for-eline eline-svlans-vlan-2100
maintenance-domain mhf : unspecified
maintenance-association mhf : unspecified
default maintenance-domain mhf : default
```

```
Interface Level
pip0.0 3
ge-1/0/0.1 3
```

For BEB4:

Use the following operational mode command on BEB4 to verify the MIP status:

```
user@beb4> show oam ethernet connectivity-fault-management mip
MIP information for instance pbn-3-for-eline eline-svlans-vlan-1200
maintenance-domain mhf : unspecified
maintenance-association mhf : unspecified
default maintenance-domain mhf : default
```

```
Interface Level
pip0.0 3
ge-1/0/0.2 3
```

```
MIP information for instance pbn-3-for-eline eline-svlans-vlan-2100
maintenance-domain mhf : unspecified
maintenance-association mhf : unspecified
default maintenance-domain mhf : default
```

```
Interface Level
pip0.0 3
```

ge-1/0/0.1

3

**Meaning** The command **show oam ethernet connectivity-fault-management interfaces mep-database** displays the CFM connectivity status per service. When used with the maintenance association **eline-2**, it displays the source MAC addresses for the **Remote MEPs** at the bottom of the output. Use the MAC address shown in the **Remote MEPs** section along with the maintenance association to issue the **traceroute ethernet** command. This command triggers the linktrace protocol to trace the route between two maintenance points. The operational mode command **show oam ethernet connectivity-fault-management mip** displays all the MIPs created in the system.


- Related Documentation**
- Understanding Fault Isolation and Detection in a PBB using Connectivity Fault Management for MX Series Routers on page 13
  - Understanding Provider Backbone Bridging on MX Series Routers on page 3
  - Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17
  - Example: Configuring CoS for a PBB Network on MX Series Routers on page 79



## CHAPTER 5

# Provider Backbone Bridging Configuration Statements

## bridge-domains

|                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                                                                                                                                     | <pre> bridge-domains {   bridge-domain-name {     bridge-options {       ...bridge-options-configuration...     }     domain-type bridge;     interface <i>interface-name</i>;     no-irb-layer-2-copy;     routing-interface <i>routing-interface-name</i>;     vlan-id (all   none   <i>number</i>);     vlan-id-list [ <i>vlan-id-numbers</i> ];     vlan-tags outer <i>number</i> inner <i>number</i>;     bridge-options {       interface <i>interface-name</i> {         static-mac <i>mac-address</i>;       }       interface-mac-limit <i>limit</i>;       mac-statistics;       mac-table-size <i>limit</i>;       no-mac-learning;     }   } } </pre> |
| <b>Hierarchy Level</b>                                                                                                                                                                                                                                                                                                            | <p>[edit],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i>]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>                                                                                                                                                                                                                                                                                                        | <p>Statement introduced in Junos OS Release 8.4.</p> <p>Support for logical systems added in Junos OS Release 9.6.</p> <p>Support for the <b>no-irb-layer-2-copy</b> statement added in Junos OS Release 10.2.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>                                                                                                                                                                                                                                                                                                                | (MX Series routers only) Configure a domain that includes a set of logical ports that share the same flooding or broadcast characteristics in order to perform Layer 2 bridging.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                                                                                                                                                                                                                                                                                                                    | <i>bridge-domain-name</i> —Name of the bridge domain.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <div style="display: flex; align-items: center;">  <div> <p><b>NOTE:</b> You cannot use the slash (/) character as part of the bridge domain name. If you do, the configuration will not commit.</p> </div> </div> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| The remaining statements are explained separately.                                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Required Privilege Level</b>                                                                                                                                                                                                                                                                                                   | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>                                                                                                                                                                                                                                                                                                      | <ul style="list-style-type: none"> <li>Configuring a Bridge Domain</li> <li>Configuring a Layer 2 Virtual Switch</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

- Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17

## bridge-domain-type

---

|                                 |                                                                                                                                                                                                                           |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | bridge-domain-type (bvlan   svlan);                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit interfaces <i>pseudo-logical-interface-name</i> unit <i>logical-unit-number</i> family bridge]                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 10.0.                                                                                                                                                                               |
| <b>Description</b>              | For IEEE 802.1ah Provider Backbone Bridge (PBB) configurations, configure the bridge domain type for the routing instance.                                                                                                |
| <b>Options</b>                  | <b>bvlan</b> —The backbone VLAN (B-VLAN) for the provider routing instance configured in the B-component.<br><br><b>svlan</b> —The service VLAN (S-VLAN) for the customer routing instance configured in the I-component. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li></ul>                                                                        |

## default-bvlan

---

|                                 |                                                                                                                                                    |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | default-bvlan <i>vlan-id</i> ;                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit routing-instances <i>instance-name</i> pbb-options]                                                                                          |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 10.0.                                                                                                        |
| <b>Description</b>              | For IEEE 802.1ah PBB configuration, specify the default B-VLAN for all unmapped service identifiers (I-SIDs).                                      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li></ul> |

## default-isid

---

|                                 |                                                                                                                                                                                                                           |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>default-isid <i>isid-number</i>;</code>                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | <code>[edit routing-instances <i>routing-instance-name</i> service-groups <i>service-group-name</i> pbb-service-options]</code>                                                                                           |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 10.0.                                                                                                                                                                               |
| <b>Description</b>              | For IEEE 802.1ah provider backbone bridge (PBB) configurations, configure the default service identifier (I-SID) for all unmapped service VLANs (S-VLANs ) for the customer routing instance (I-component) service group. |
| <b>Options</b>                  | <b><i>default-isid</i></b> — Default service identifier. Enter an I-SID in the range from <b>256</b> through <b>16777214</b> .                                                                                            |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li></ul>                                                                        |

## family

**Syntax**    family *family* {  
               accounting {  
                   destination-class-usage;  
                   source-class-usage {  
                       (input | output | input output);  
                   }  
               }  
               access-concentrator *name*;  
               address *address* {  
                   ... *the address subhierarchy appears after the main* [edit interfaces *interface-name* unit  
                       *logical-unit-number* family *family-name*] *hierarchy* ...  
               }  
               bridge-domain-type (bvlan | svlan);  
               bundle *interface-name*;  
               core-facing;  
               demux-destination {  
                   *destination-prefix*;  
               }  
               demux-source {  
                   *source-prefix*;  
               }  
               duplicate-protection;  
               dynamic-profile *profile-name*;  
               filter {  
                   group *filter-group-number*;  
                   input *filter-name*;  
                   input-list [ *filter-names* ];  
                   output *filter-name*;  
                   output-list [ *filter-names* ];  
               }  
               interface-mode (access | trunk);  
               ipsec-sa *sa-name*;  
               isid-list all-service-groups;  
               keep-address-and-control;  
               mac-validate (loose | strict);  
               max-sessions *number*;  
               mtu *bytes*;  
               multicast-only;  
               negotiate-address;  
               no-redirects;  
               policer {  
                   arp *policer-template-name*;  
                   input *policer-template-name*;  
                   output *policer-template-name*;  
               }  
               primary;  
               protocols [inet iso mpls];  
               proxy inet-address *address*;  
               receive-options-packets;  
               receive-ttl-exceeded;  
               remote (inet-address *address* | mac-address *address*);  
               rpf-check {

```

fail-filter filter-name
mode loose;
}
sampling {
input;
output;
}
service {
input {
post-service-filter filter-name;
service-set service-set-name <service-filter filter-name>;
}
output {
service-set service-set-name <service-filter filter-name>;
}
}
service-name-table table-name
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
unnumbered-address interface-name destination address destination-profile profile-name;
vlan-id number;
vlan-id-list [number number-number];
address address {
arp ip-address (mac | multicast-mac) mac-address <publish>;
broadcast address;
destination address;
destination-profile name;
eui-64;
master-only;
multipoint-destination address dlci dlci-identifier;
multipoint-destination address {
epd-threshold cells;
inverse-arp;
oam-liveness {
up-count cells;
down-count cells;
}
oam-period (disable | seconds);
shaping {
(cbr rate | rtvbr burst length peak rate sustained rate | vbr burst length peak rate
sustained rate);
queue-length number;
}
vci vpi-identifier.vci-identifier;
}
preferred;
primary;
(vrrp-group | vrrp-inet6-group) group-number {
(accept-data | no-accept-data);
advertise-interval seconds;
authentication-type authentication;
authentication-key key;
fast-interval milliseconds;
(preempt | no-preempt) {
hold-time seconds;
}
}

```

```

priority number;
track {
 interface interface-name {
 bandwidth-threshold bits-per-second priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/prefix-length routing-instance instance-name priority-cost cost;
}
virtual-address [addresses];
virtual-link-local-address ipv6-address;
vrrp-inherit-from {
 active-interface interface-name;
 active-group group-number;
}
}
}

```

**Hierarchy Level** [edit interfaces *interface-name* unit *logical-unit-number*],  
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Configure protocol family information for the logical interface.



**NOTE:** Not all subordinate stanzas are available to every protocol family. See the *Junos OS Configuration Statements and Commands* for details about each protocol family.

**Options**    *family*—Protocol family:

- **any**—Protocol-independent family used for Layer 2 packet filtering
- **bridge**—(M Series and T Series routers only) Configure only when the physical interface is configured with **ethernet-bridge** type encapsulation or when the logical interface is configured with **vlan-bridge** type encapsulation
- **ccc**—Circuit cross-connect protocol suite
- **inet**—Internet Protocol version 4 suite
- **inet6**—Internet Protocol version 6 suite
- **iso**—International Organization for Standardization Open Systems Interconnection (ISO OSI) protocol suite
- **mlfr-end-to-end**—Multilink Frame Relay FRF.15
- **mlfr-uni-nni**—Multilink Frame Relay FRF.16
- **multilink-ppp**—Multilink Point-to-Point Protocol
- **mpls**—Multiprotocol Label Switching (MPLS)
- **pppoe**—Point-to-Point Protocol over Ethernet
- **tcc**—Translational cross-connect protocol suite
- **tnp**—Trivial Network Protocol
- **vpls**—(M Series and T Series routers only) Virtual private LAN service

The remaining statements are explained separately.

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                         interface-control—To add this statement to the configuration.

**Related Documentation**

- Configuring the Protocol Family
- Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17
- [Junos OS Services Interfaces Configuration Guide](#)

## isid

---

|                                 |                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>isid isid-number vlan-id-list [ vlan-ids ];</code>                                                                                                                                         |
| <b>Hierarchy Level</b>          | <code>[edit routing-instances routing-instance-name service-groups service-group-name pbb-service-options]</code>                                                                                |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 10.0.                                                                                                                                                      |
| <b>Description</b>              | For IEEE 802.1ah provider backbone bridge (PBB) configurations, configure the service identifier (I-SID) for the customer routing instance (I-component) service group.                          |
| <b>Options</b>                  | <p><code>isid</code>—Service identifier. Enter an I-SID in the range from <b>256</b> through <b>16777214</b>.</p> <p><code>vlan-id-list [ vlan-ids ]</code>—List of service VLANs (S-VLANs).</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li></ul>                                               |

## family

```

Syntax family family {
 accounting {
 destination-class-usage;
 source-class-usage {
 (input | output | input output);
 }
 }
 access-concentrator name;
 address address {
 ... the address subhierarchy appears after the main [edit interfaces interface-name unit
 logical-unit-number family family-name] hierarchy ...
 }
 bridge-domain-type (bvlan | svlan);
 bundle interface-name;
 core-facing;
 demux-destination {
 destination-prefix;
 }
 demux-source {
 source-prefix;
 }
 duplicate-protection;
 dynamic-profile profile-name;
 filter {
 group filter-group-number;
 input filter-name;
 input-list [filter-names];
 output filter-name;
 output-list [filter-names];
 }
 interface-mode (access | trunk);
 ipsec-sa sa-name;
 isid-list all-service-groups;
 keep-address-and-control;
 mac-validate (loose | strict);
 max-sessions number;
 mtu bytes;
 multicast-only;
 negotiate-address;
 no-redirects;
 policer {
 arp policer-template-name;
 input policer-template-name;
 output policer-template-name;
 }
 primary;
 protocols [inet iso mpls];
 proxy inet-address address;
 receive-options-packets;
 receive-ttl-exceeded;
 remote (inet-address address | mac-address address);
 rpf-check {

```

```

fail-filter filter-name
mode loose;
}
sampling {
input;
output;
}
service {
input {
post-service-filter filter-name;
service-set service-set-name <service-filter filter-name>;
}
output {
service-set service-set-name <service-filter filter-name>;
}
}
service-name-table table-name
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
unnumbered-address interface-name destination address destination-profile profile-name;
vlan-id number;
vlan-id-list [number number-number];
address address {
arp ip-address (mac | multicast-mac) mac-address <publish>;
broadcast address;
destination address;
destination-profile name;
eui-64;
master-only;
multipoint-destination address dlci dlci-identifier;
multipoint-destination address {
epd-threshold cells;
inverse-arp;
oam-liveness {
up-count cells;
down-count cells;
}
oam-period (disable | seconds);
shaping {
(cbr rate | rtvbr burst length peak rate sustained rate | vbr burst length peak rate
sustained rate);
queue-length number;
}
vci vpi-identifier.vci-identifier;
}
preferred;
primary;
(vrrp-group | vrrp-inet6-group) group-number {
(accept-data | no-accept-data);
advertise-interval seconds;
authentication-type authentication;
authentication-key key;
fast-interval milliseconds;
(preempt | no-preempt) {
hold-time seconds;
}
}

```

```
priority number;
track {
 interface interface-name {
 bandwidth-threshold bits-per-second priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/prefix-length routing-instance instance-name priority-cost cost;
}
virtual-address [addresses];
virtual-link-local-address ipv6-address;
vrrp-inherit-from {
 active-interface interface-name;
 active-group group-number;
}
}
}
```

**Hierarchy Level** [edit interfaces *interface-name* unit *logical-unit-number*],  
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Configure protocol family information for the logical interface.



NOTE: Not all subordinate stanzas are available to every protocol family. See the *Junos OS Configuration Statements and Commands* for details about each protocol family.

**Options**    *family*—Protocol family:

- **any**—Protocol-independent family used for Layer 2 packet filtering
- **bridge**—(M Series and T Series routers only) Configure only when the physical interface is configured with **ethernet-bridge** type encapsulation or when the logical interface is configured with **vlan-bridge** type encapsulation
- **ccc**—Circuit cross-connect protocol suite
- **inet**—Internet Protocol version 4 suite
- **inet6**—Internet Protocol version 6 suite
- **iso**—International Organization for Standardization Open Systems Interconnection (ISO OSI) protocol suite
- **mlfr-end-to-end**—Multilink Frame Relay FRF.15
- **mlfr-uni-nni**—Multilink Frame Relay FRF.16
- **multilink-ppp**—Multilink Point-to-Point Protocol
- **mpls**—Multiprotocol Label Switching (MPLS)
- **pppoe**—Point-to-Point Protocol over Ethernet
- **tcc**—Translational cross-connect protocol suite
- **tnp**—Trivial Network Protocol
- **vpls**—(M Series and T Series routers only) Virtual private LAN service

The remaining statements are explained separately.

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                         interface-control—To add this statement to the configuration.

**Related Documentation**

- Configuring the Protocol Family
- Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17
- [Junos OS Services Interfaces Configuration Guide](#)

## mac-address

---

|                                 |                                                                                                                                                                                                                                                    |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>mac-address mac-address;</code>                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | <code>[edit routing-instances routing-instance-name service-groups service-group-name pbb-service-options]</code>                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 10.0.                                                                                                                                                                                                        |
| <b>Description</b>              | For IEEE 802.1ah provider backbone bridge (PBB) configurations, configure a unicast or multicast MAC address for the customer routing instance (I-component) service group.                                                                        |
| <b>Options</b>                  | <b>mac-address</b> —Specify the MAC address as six hexadecimal bytes in one of the following formats: <code>nnnn.nnnn.nnnn</code> or <code>nn:nn:nn:nn:nn:nn</code> ; for example, <code>0011.2233.4455</code> or <code>00:11:22:33:44:55</code> . |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li></ul>                                                                                                   |

## pbb-options

---

|                                 |                                                                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>pbb-options {<br/>    default-bvlan vlan-id;<br/>    peer-instance routing-instance-name;<br/>    vlan-id vlan-id isid-list [ isid-numbers ]<br/>}</pre> |
| <b>Hierarchy Level</b>          | <code>[edit routing-instances routing-instance-name]</code>                                                                                                   |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 10.0.                                                                                                                   |
| <b>Description</b>              | Configure provider backbone bridging options for a routing instance.<br><br>The remaining statements are explained separately.                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li></ul>              |

## pbb-service-options

|                                 |                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>pbb-service-options {   default-isid <i>isid-number</i>;   isid <i>isid-number</i> <i>vlan-id-list</i> [ <i>vlan-ids</i> ];   mac-address <i>mac-address</i>; }</pre>                                                    |
| <b>Hierarchy Level</b>          | [edit routing-instances <i>routing-instance-name</i> service-groups <i>service-group-name</i> ]                                                                                                                               |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 10.0.                                                                                                                                                                                   |
| <b>Description</b>              | <p>For IEEE 802.1ah provider backbone bridge (PBB) configurations, configure PBB service options for the customer routing instance (I-component) service group.</p> <p>The remaining statements are explained separately.</p> |
| <b>Options</b>                  | <b><i>service-group-name</i></b> —Name of a service group.                                                                                                                                                                    |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li> </ul>                                                                            |

## peer-instance

|                                 |                                                                                                                                                    |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | peer-instance <i>routing-instance-name</i> ;                                                                                                       |
| <b>Hierarchy Level</b>          | [edit routing-instances <i>instance-name</i> pbb-options]                                                                                          |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 10.0.                                                                                                        |
| <b>Description</b>              | For IEEE 802.1ah provider backbone bridge (PBB) configurations, configure the peer PBBN routing instance in the I-component routing instance.      |
| <b>Options</b>                  | <b><i>pbbn-instance-name</i></b> —Name of the PBBN routing instance.                                                                               |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li> </ul> |

## routing-instances

|                            |                                                                                                                                                                                                                                                                                                                                           |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>routing-instances <i>routing-instance-name</i> { ... }</code>                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>     | [edit],<br>[edit logical-systems <i>logical-system-name</i> ]                                                                                                                                                                                                                                                                             |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                         |
| <b>Description</b>         | Configure an additional routing entity for a router. You can create multiple instances of BGP, IS-IS, OSPF, OSPFv3, and RIP for a router. You can also create multiple routing instances for separating routing tables, routing policies, and interfaces for individual wholesale subscribers (retailers) in a Layer 3 wholesale network. |
| <b>Default</b>             | Routing instances are disabled for the router.                                                                                                                                                                                                                                                                                            |
| <b>Options</b>             | <i>routing-instance-name</i> —Name of the routing instance, a maximum of 128 characters. A routing instance name can contain letters, numbers, and hyphens.                                                                                                                                                                               |



**NOTE:** In Junos OS Release 9.6 and later, you can include a slash (/) in a routing-instance name only if a logical system is not configured. That is, you cannot include the slash character in a routing-instance name if a logical system other than the default is explicitly configured.

The remaining statements are explained separately.



**NOTE:** In Junos OS Release 9.0 and later, you cannot specify a routing-instance name of `default` or include special characters within the name of a routing instance.

|                                 |                                                                                                                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Complete Routing Instances Configuration Statements</li> <li>Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li> <li><a href="#">Junos OS Routing Policy Configuration Guide</a></li> </ul> |

## service-groups

|                                 |                                                                                                                                                                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> service-groups {   service-group-name {     pbb-service-options {       default-isid <i>isid-number</i>;       isid <i>isid-number</i> vlan-id-list [ <i>vlan-ids</i> ];       mac-address <i>mac-address</i>;     }     service-type (elan   eline);   } } </pre> |
| <b>Hierarchy Level</b>          | [edit routing-instances <i>routing-instance-name</i> ]                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 10.0.                                                                                                                                                                                                                              |
| <b>Description</b>              | <p>For IEEE 802.1ah provider backbone bridge (PBB) configurations, configure the service groups to be supported in the customer routing instance (I-component).</p> <p>The remaining statements are explained separately.</p>                                            |
| <b>Options</b>                  | <b><i>service-group-name</i></b> —Name of a service group.                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li> </ul>                                                                                                                       |

## service-type

---

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>service-type (elan   eline);</code>                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit <i>routing-instances routing-instance-name</i> <b>service-groups</b> ]                                                                                                                                                                                                        |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 10.0.                                                                                                                                                                                                                                         |
| <b>Description</b>              | For IEEE 802.1ah provider backbone bridge (PBB) configurations, configure the service type for the service group in the customer routing instance (I-component).                                                                                                                    |
| <b>Options</b>                  | <p><b>elan</b>—Connects a set of customer endpoints (like a bridged Ethernet network). E-LAN service is also known as point-to-multipoint service.</p> <p><b>eline</b>—Connects two customer Ethernet ports over a WAN. E-LINE service is also known as point-to-point service.</p> |
| <b>Required Privilege Level</b> | <p><b>routing</b>—To view this statement in the configuration.</p> <p><b>routing-control</b>—To add this statement to the configuration.</p>                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li><li>• Understanding Provider Backbone Bridging on MX Series Routers on page 3</li></ul>                                                |

## unit

```

Syntax unit logical-unit-number {
 accept-source-mac {
 mac-address mac-address {
 policer {
 input cos-policer-name;
 output cos-policer-name;
 }
 }
 }
 accounting-profile name;
 allow-any-vci;
 atm-scheduler-map (map-name | default);
 backup-options {
 interface interface-name;
 }
 bandwidth rate;
 cell-bundle-size cells;
 clear-dont-fragment-bit;
 compression {
 rtp {
 maximum-contexts number <force>;
 f-max-period number;
 queues [queue-numbers];
 port {
 minimum port-number;
 maximum port-number;
 }
 }
 }
 compression-device interface-name;
 copy-tos-to-outer-ip-header;
 demux-destination family;
 demux-source family;
 demux-options {
 underlying-interface interface-name;
 }
 description text;
 dial-options {
 l2tp-interface-id name;
 (dedicated | shared);
 }
 dialer-options {
 activation-delay seconds;
 callback;
 callback-wait-period time;
 deactivation-delay seconds;
 dial-string [dial-string-numbers];
 idle-timeout seconds;
 incoming-map {
 caller caller-id) | accept-all;
 initial-route-check seconds;
 load-interval seconds;
 }
 }
}

```

```

 load-threshold percent;
 pool pool-name;
 redial-delay time;
 watch-list {
 [routes];
 }
 }
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
 activation-priority priority;
 bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
family family-name {
 ... the family subhierarchy appears after the main [edit interfaces interface-name unit
 logical-unit-number] hierarchy ...
}
fragment-threshold bytes;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
 (pop | pop-pop | pop-swap | push | push-push | swap |
 swap-push | swap-swap);
 inner-tag-protocol-id tpid;
 inner-vlan-id number;
 tag-protocol-id tpid;
 vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {
 input-policer policer-name;
 input-three-color policer-name;
 output-policer policer-name;
 output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
 up-count cells;
 down-count cells;
}
oam-period (disable | seconds);
output-vlan-map {
 (pop | pop-pop | pop-swap | push | push-push | swap |
 swap-push | swap-swap);
 inner-tag-protocol-id tpid;

```

```

 inner-vlan-id number;
 tag-protocol-id tpid;
 vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
 chap {
 access-profile name;
 default-chap-secret name;
 local-name name;
 passive;
 }
 compression {
 acfc;
 pfc;
 }
 dynamic-profile profile-name;
 lcp-restart-timer milliseconds;
 loopback-clear-timer seconds;
 ncp-restart-timer milliseconds;
 pap {
 access-profile name;
 default-pap-password password;
 local-name name;
 local-password password;
 passive;
 }
}
pppoe-options {
 access-concentrator name;
 auto-reconnect seconds;
 (client | server);
 service-name name;
 underlying-interface interface-name;
}
pppoe-underlying-options {
 access-concentrator name;
 dynamic-profile profile-name;
 max-sessions number;
}
proxy-arp;
service-domain (inside | outside);
shaping {
 (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
 length);
 queue-length number;
}
short-sequence;
targeted-distribution;
transmit-weight number;
(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;

```

```

tunnel {
 backup-destination address;
 destination address;
 key number;
 routing-instance {
 destination routing-instance-name;
 }
 source source-address;
 ttl number;
}
vci vpi-identifier.vci-identifier;
vci-range start start-vci end end-vci;
vpi vpi-identifier;
vlan-id number;
vlan-id-range number-number;
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
family family {
 accounting {
 destination-class-usage;
 source-class-usage {
 (input | output | input output);
 }
 }
 access-concentrator name;
 address address {
 ... the address subhierarchy appears after the main [edit interfaces interface-name unit
 logical-unit-number family family-name] hierarchy ...
 }
 bridge-domain-type (bvlan | svlan);
 bundle interface-name;
 core-facing;
 demux-destination {
 destination-prefix;
 }
 demux-source {
 source-prefix;
 }
 duplicate-protection;
 dynamic-profile profile-name;
 filter {
 group filter-group-number;
 input filter-name;
 input-list [filter-names];
 output filter-name;
 output-list [filter-names];
 }
 interface-mode (access | trunk);
 ipsec-sa sa-name;
 isid-list all-service-groups;
 keep-address-and-control;
 mac-validate (loose | strict);
 max-sessions number;
 mtu bytes;
 multicast-only;
 no-redirects;
 policer {

```

```

 arp policer-template-name;
 input policer-template-name;
 output policer-template-name;
}
primary;
protocols [inet iso mpls];
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check {
 fail-filter filter-name
 mode loose;
}
sampling {
 input;
 output;
}
service {
 input {
 post-service-filter filter-name;
 service-set service-set-name <service-filter filter-name>;
 }
 output {
 service-set service-set-name <service-filter filter-name>;
 }
}
service-name-table table-name
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
unnumbered-address interface-name destination address destination-profile profile-name;
vlan-id number;
vlan-id-list [number number-number];
address address {
 arp ip-address (mac | multicast-mac) mac-address <publish>;
 broadcast address;
 destination address;
 destination-profile name;
 eui-64;
 master-only;
 multipoint-destination address {
 dlci dlci-identifier;
 epd-threshold cells <plp1 cells>;
 inverse-arp;
 oam-liveness {
 up-count cells;
 down-count cells;
 }
 oam-period (disable | seconds);
 shaping {
 (cbr rate | rtvbr burst length peak rate sustained rate | vbr burst length peak rate
 sustained rate);
 queue-length number;
 }
 vci vpi-identifier.vci-identifier;
 }
}

```

```

preferred;
primary;
(vrrp-group | vrrp-inet6-group) group-number {
 (accept-data | no-accept-data);
 advertise-interval seconds;
 authentication-type authentication;
 authentication-key key;
 fast-interval milliseconds;
 (preempt | no-preempt) {
 hold-time seconds;
 }
 priority number;
 track {
 interface interface-name {
 bandwidth-threshold bits-per-second priority-cost number;
 }
 priority-hold-time seconds;
 route ip-address/prefix-length routing-instance instance-name priority-cost cost;
 }
 virtual-address [addresses];
 virtual-link-local-address ipv6-address;
 vrrp-inherit-from {
 active-interface interface-name;
 active-group group-number;
 }
}
}
}

```

|                          |                                                                                                                                                                                                                                                                                |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hierarchy Level          | [edit interfaces <i>interface-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> ],<br>[edit interfaces <i>interface-set interface-set-name</i> interface <i>interface-name</i> ]                                                |
| Release Information      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                              |
| Description              | Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.                                                                                                                                            |
| Options                  | <p><b>logical-unit-number</b>—Number of the logical unit.</p> <p><b>Range:</b> 0 through 1,073,741,823 for demux and PPPoE static interfaces only. 0 through 16,385 for all other static interface types.</p> <p>The remaining statements are explained separately.</p>        |
| Required Privilege Level | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                        |
| Related Documentation    | <ul style="list-style-type: none"> <li>Configuring Logical Interface Properties</li> <li>Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li> <li><a href="#">Junos OS Services Interfaces Configuration Guide</a></li> </ul> |

## vlan-id (Provider Backbone Bridge)

---

|                                 |                                                                                                                                                                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>vlan-id <i>vlan-id</i> isid-list [ <i>isid-numbers</i> ];</code>                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit routing-instances <i>instance-name</i> pbb-options]                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 10.0.                                                                                                                                                                                             |
| <b>Description</b>              | For IEEE 802.1ah provider backbone bridge (PBB) configurations, configure the mapping for the service identifier (I-SID) between the service VLAN (S-VLAN) and the backbone VLANs (B-VLANs).                                            |
| <b>Options</b>                  | <p><i>vlan-id</i>—Configure the B-VLAN in the range from 0 through 4094.</p> <p><i>isid-list</i> [ <i>isid-numbers</i> ]—I-SIDs for the B-VLAN routing instance. Specify one or more values in the range from 256 through 16777214.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li></ul>                                                                                      |

## vlan-id (Bridge Domain)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>vlan-id (all   none   <i>number</i>);</code>                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>     | <code>[edit bridge-domains <i>bridge-domain-name</i>],</code><br><code>[edit logical-systems <i>logical-system-name</i> bridge-domainss <i>bridge-domain-name</i>],</code><br><code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i></code><br><code>bridge-domains <i>bridge-domain-name</i>],</code><br><code>[edit routing-instances <i>routing-instance-name</i> bridge-domains <i>bridge-domain-name</i>]</code> |
| <b>Release Information</b> | <p>Statement introduced in Junos OS Release 8.4.</p> <p>Support for Layer 2 trunk ports added in Junos OS Release 9.2.</p> <p>Support for logical systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                         |
| <b>Description</b>         | (MX Series routers only) Specify a VLAN identifier (VID) to include in the packets sent to and from the bridge domain or a VPLS routing instance.                                                                                                                                                                                                                                                                                                                    |



**NOTE:** When configuring a VLAN identifier for provider backbone bridge (PBB) routing instances, dual-tagged VIDs and the none option are not permitted.

**Options** *number*—A valid VLAN identifier. If you configure multiple bridge domains with a valid VLAN identifier, you must specify a unique VLAN identifier for each domain. However, you can use the same VLAN identifier for bridge domains that belong to different virtual switches. Use this option to send singly tagged frames with the specified VLAN identifier over VPLS VT interfaces.



**NOTE:** If you specify a VLAN identifier, you cannot also use the all option. They are mutually exclusive.

*all*—Specify that the bridge domain spans all the VLAN identifiers configured on the member logical interfaces.



**NOTE:** You cannot specify the all option if you include a routing interface in the bridge domain.

*none*—Specify to enable shared VLAN learning or to send untagged frames over VPLS VT interfaces.

**Required Privilege Level** routing—To view this statement in the configuration.  
 routing-control—To add this statement to the configuration.

- Related Documentation**
- [Configuring a Bridge Domain](#)
  - [Configuring VLAN Identifiers for Bridge Domains and VPLS Routing Instances](#)
  - [Configuring Bridge Domains as Switches for Layer 2 Trunk Ports](#)
  - [Configuring a Layer 2 Virtual Switch](#)
  - [Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17](#)



## CHAPTER 6

# Connectivity Fault Management Configuration Statements

- [edit protocols oam] Hierarchy Level on page 171

### [edit protocols oam] Hierarchy Level

---

The following statement hierarchy can also be included at the [edit logical-systems *logical-system-name*] hierarchy level.

```
protocols {
 oam {
 ethernet {
 connectivity-fault-management {
 ... the connectivity-fault-management subhierarchy appears after the main [edit
 protocols oam ethernet] hierarchy ...
 }
 evcs evc-id {
 evc-protocol (cfm maintenance-association association-name
 maintenance-domain domain-name) | (vpls routing-instance instance-name);
 multipoint-to-multipoint;
 remote-uni-count count;
 }
 link-fault-management {
 ... the link-fault-management subhierarchy appears after the main [edit protocols
 oam ethernet] hierarchy ...
 }
 lmi {
 interface interface-name {
 evc evc-name {
 default-evc;
 vlan-list [vlan-ids];
 }
 evc-map-type (all-to-one-bundling | bundling | service-multiplexing);
 polling-verification-timer seconds;
 status-counter number;
 uni-id uni-id;
 }
 polling-verification-timer value;
 status-counter count;
 traceoptions {
 file <filename> <files number> <match regular-expression>
 <size maximum-file-size> <world-readable | no-world-readable>;
 flag flag;
 }
 }
 }
 }
}
```

```

 no-remote-trace;
 }
}

ethernet {
 connectivity-fault-management {
 action-profile profile-name {
 default-actions {
 interface-down;
 }
 event {
 adjacency-loss;
 connection-protection-tlv (using-protection-path | using-working-path);
 interface-status-tlv [down lower-layer-down];
 port-status-tlv blocked;
 rdi;
 }
 }
 }
 connection-protection {
 mark-connection-protection-tlv;
 }
 linktrace {
 age (10s | 30s | 1m | 10m | 30m);
 path-database-size number;
 }
 maintenance-domain domain-name {
 ... the maintenance-domain subhierarchy appears after the main [edit protocols
 oam ethernet connectivity-fault-management] hierarchy ...
 }
 performance-monitoring {
 delegate-server-processing;
 hardware-assisted-timestamping;
 sla-iterator-profiles {
 profile-name {
 disable;
 calculation-weight {
 delay delay-weight;
 delay-variation delay-variation-weight;
 }
 cycle-time milliseconds;
 iteration-period connections;
 measurement-type (loss | two-way-delay);
 }
 }
 }
 policer {
 all policer-name;
 continuity-check policer-name;
 other policer-name;
 }
 traceoptions {
 file <filename> <files number> <match regular-expression>
 <size maximum-file-size> <world-readable | no-world-readable>;
 flag flag;
 no-remote-trace;
 }
}

```

```

}

connectivity-fault-management {
 maintenance-domain domain-name {
 bridge-domain domain-name <vlan-id [vlan-ids]>;
 instance routing-instance-name;
 interface interface-name;
 level number;
 maintenance-association association-name {
 ... the maintenance-association subhierarchy appears after the main [edit protocols
 oam ethernet connectivity-fault-management maintenance-domain] hierarchy
 ...
 mip-half-function (default | explicit | none);
 name-format (character-string | dns | mac+2oct | none);
 virtual-switch routing-instance-name {
 bridge-domain domain-name <vlan-id [vlan-ids]>;
 }
 }
 }
}

maintenance-domain domain-name {
 maintenance-association association-name {
 continuity-check {
 connection-protection-tlv;
 convey-loss-threshold;
 hold-interval minutes;
 interface-status-tlv;
 interval (100ms | 1s | 10s | 1m | 10m);
 loss-threshold number;
 port-status-tlv;
 }
 mep mep-id {
 auto-discovery;
 direction (down | up);
 interface interface-name (protect | working);
 lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
 rem-err-xcon | xcon);
 priority number;
 remote-mep mep-id {
 action-profile profile-name;
 sla-iterator-profile profile-name {
 data-tlv-size bytes;
 iteration-count frames;
 priority priority-value;
 }
 }
 }
 }
 mip-half-function (default | defer | explicit | none);
 policer {
 all policer-name;
 continuity-check policer-name;
 other policer-name;
 }
 short-name-format (2octet | character-string | icc | rfc-2685-vpn-id | vlan);
}
}
}

```

```

 }

 ethernet {
 link-fault-management {
 action-profile profile-name {
 action {
 link-down;
 send-critical-event;
 syslog;
 }
 event {
 link-adjacency-loss;
 link-event-rate {
 frame-error count;
 frame-period count;
 frame-period-summary count;
 symbol-period count;
 }
 protocol-down;
 }
 }
 }
 }
 interface interface-name {
 apply-action-profile profile-name;
 event-thresholds {
 frame-error count;
 frame-period count;
 frame-period-summary count;
 symbol-period count;
 }
 link-discovery (active | passive);
 negotiation-options {
 allow-remote-loopback;
 no-allow-link-events;
 }
 pdu-interval interval;
 pdu-threshold threshold-value;
 remote-loopback;
 }
 traceoptions {
 file <filename> <files number> <match regular-expression>
 <size maximum-file-size> <world-readable | no-world-readable>;
 flag flag;
 no-remote-trace;
 }
 }
}
}
}

```

#### Related Documentation

- Notational Conventions Used in Junos OS Configuration Hierarchies
- [edit protocols] Hierarchy Level

## auto-discovery

---

|                                 |                                                                                                                                                                                                     |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | auto-discovery;                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> mep <i>mep-id</i> ]                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.                                                                                                                                                       |
| <b>Description</b>              | Enable the MEP to accept continuity check messages from all remote MEPs.                                                                                                                            |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Configuring a Maintenance Endpoint</li> <li>Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102</li> </ul> |

## bridge-domain

---

|                                 |                                                                                                                                                                                                                                                                             |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | bridge-domain <i>name</i> ;<br>vlan-id [ <i>vlan-identifiers</i> ];<br>}                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>maintenance-domain-name</i> ],<br>[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>maintenance-domain-name</i> virtual-switch <i>virtual-switch-name</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.4.                                                                                                                                                                                                                               |
| <b>Description</b>              | (MX Series routers only) Specify the OAM Ethernet CFM maintenance domain bridge domain.                                                                                                                                                                                     |
| <b>Options</b>                  | <i>name</i> —Specify the name of the bridge domain.<br><br><i>vlan-identifiers</i> —Specify one or more VLAN identifiers.                                                                                                                                                   |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Configuring Maintenance Intermediate Points</li> <li>Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102</li> <li><b>maintenance-domain on page 187</b></li> </ul>                 |

## connectivity-fault-management

```

Syntax connectivity-fault-management {
 action-profile profile-name {
 default-actions {
 interface-down;
 }
 }
 performance-monitoring {
 delegate-server-processing;
 hardware-assisted-timestamping;
 sla-iterator-profiles {
 profile-name {
 disable;
 calculation-weight {
 delay delay-weight;
 delay-variation delay-variation-weight;
 }
 cycle-time milliseconds;
 iteration-period connections;
 measurement-type (loss | statistical-frame-loss | two-way-delay);
 }
 }
 }
 linktrace {
 age (30m | 10m | 1m | 30s | 10s);
 path-database-size path-database-size;
 }
 maintenance-domain domain-name {
 bridge-domain <vlan-id [vlan-ids]>;
 instance routing-instance-name;
 interface interface-name;
 level number;
 name-format (character-string | none | dns | mac+2oct);
 maintenance-association ma-name {
 short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
 continuity-check {
 convey-loss-threshold;
 hold-interval minutes;
 interface-status-tlv;
 interval (10m | 10s | 1m | 1s | 100ms);
 loss-threshold number;
 port-status-tlv;
 }
 }
 mep mep-id {
 auto-discovery;
 direction (up | down);
 interface interface-name (protect | working);
 lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
 rem-err-xcon | xcon);
 priority number;
 remote-mep mep-id {
 action-profile profile-name;
 sla-iterator-profile profile-name {

```

```

 data-tlv-size size;
 iteration-count count-value;
 priority priority-value;
 }
}
}
virtual-switch routing-instance-name {
 bridge-domain name <vlan-ids [vlan-ids]>;
}
}
}

```

**Hierarchy Level** [edit protocols oam ethernet]

**Release Information** Statement introduced in Junos OS Release 8.4.

**Description** For Ethernet interfaces on M7i and M10i routers with Enhanced CFEB (CFEB-E), and on M120, M320, MX Series, and T Series routers, specify connectivity fault management for IEEE 802.1ag Operation, Administration, and Management (OAM) support. In Junos OS Release 9.3 and later, this statement is also supported on aggregated Ethernet interfaces.

The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- IEEE 802.1ag OAM Connectivity Fault Management Overview
- Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102

## continuity-check

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>continuity-check {<br/>    convey-loss-threshold;<br/>    hold-interval <i>minutes</i>;<br/>    interface-status-tlv;<br/>    interval (10m   10s   1m   1s  100ms   10ms);<br/>    loss-threshold <i>number</i>;<br/>    port-status-tlv;<br/>}</pre>                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Specify continuity check protocol options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <p><b>convey-loss-threshold</b>—Enable loss-threshold-tlv transmission.</p> <p><b>hold-interval <i>minutes</i></b>—Specify the continuity check hold-interval, in minutes.</p> <p><b>interface-status-tlv</b>—Enable interface-status-tlv transmission.</p> <p><b>interval (<i>10m</i>   <i>10s</i>   <i>1m</i>   <i>1s</i>  <i>100ms</i>   <i>10ms</i>)</b>—Specify the continuity check interval.</p> <p><b>loss-threshold <i>minutes</i></b>—Specify the loss-threshold, in minutes.</p> <p><b>port-status-tlv</b>—Enable port-status-tlv transmission.</p> |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>Continuity Check Protocol</li><li>Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102</li></ul>                                                                                                                                                                                                                                                                                                                                                                        |

## direction

---

|                                 |                                                                                                                                                                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | direction (up   down);                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> mep <i>mep-id</i> ]                                                                                                                       |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.                                                                                                                                                                                                                                     |
| <b>Description</b>              | Configure the direction of the MEP.                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <p><b>up</b>—An UP MEP CCM is transmitted out of every logical interface which is part of the same bridging or vpls instance except for the interface configured on this MEP.</p> <p><b>down</b>—Down MEP CCMs are transmitted only out the interface configured on this MEP.</p> |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Configuring a Maintenance Endpoint</li><li>• Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102</li><li>• IEEE 802.1ag OAM Connectivity Fault Management Overview</li></ul>            |

## ethernet (Protocols OAM)

```

Syntax ethernet {
 connectivity-fault-management {
 action-profile profile-name {
 default-actions {
 interface-down;
 }
 }
 }
 performance-monitoring {
 delegate-server-processing;
 hardware-assisted-timestamping;
 sla-iterator-profiles {
 profile-name {
 disable;
 calculation-weight {
 delay delay-weight;
 delay-variation delay-variation-weight;
 }
 cycle-time milliseconds;
 iteration-period connections;
 measurement-type (loss | statistical-frame-loss | two-way-delay);
 }
 }
 }
 linktrace {
 age (30m | 10m | 1m | 30s | 10s);
 path-database-size path-database-size;
 }
 maintenance-domain domain-name {
 level number;
 name-format (character-string | none | dns | mac+2octet);
 maintenance-association ma-name {
 short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
 continuity-check {
 convey-loss-threshold;
 hold-interval minutes;
 interface-status-tlv;
 interval (10m | 10s | 1m | 1s | 100ms);
 loss-threshold number;
 port-status-tlv;
 }
 }
 mep mep-id {
 auto-discovery;
 direction (up | down);
 interface interface-name (protect | working);
 lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
 rem-err-xcon | xcon);
 priority number;
 remote-mep mep-id {
 action-profile profile-name;
 sla-iterator-profile profile-name {
 data-tlv-size size;
 iteration-count count-value;
 }
 }
 }
 }
 }

```

```
priority priority-value;
}
}
}
}
}
}
evcs evc-id {
 evc-protocol cfm management-domain domain-id (management-association
 association-id | vpls (routing-instance instance-id);
 remote-uni-count count;
 multipoint-to-multipoint;
}
link-fault-management {
 action-profile profile-name {
 action {
 link-down;
 send-critical-event;
 syslog;
 }
 event {
 link-adjacency-loss;
 link-event-rate {
 frame-error count;
 frame-period count;
 frame-period-summary count;
 symbol-period count;
 }
 protocol-down;
 }
 }
}
interface interface-name {
 apply-action-profile;
 link-discovery (active | passive);
 pdu-interval interval;
 pdu-threshold threshold-value;
 remote-loopback;
 event-thresholds {
 frame-error count;
 frame-period count;
 frame-period-summary count;
 symbol-period count;
 }
 negotiation-options {
 allow-remote-loopback;
 no-allow-link-events;
 }
}
lmi {
 status-counter count;
 polling-verification-timer value;
 interface name {
 uni-id uni-name;
 status-counter number;
 polling-verification-timer value;
```

```
 evc-map-type (all-to-one-bundling | bundling | service-multiplexing);
 evc evc-name {
 default-evc;
 vlan-list vlan-id-list;
 }
}
}
```

**Hierarchy Level** [edit protocols oam]

**Release Information** Statement introduced in Junos OS Release 8.2.

**Description** For Ethernet interfaces on M320, MX Series, and T Series routers, provide fault signaling and detection for 802.3ah Operation, Administration, and Management (OAM) support.

The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- Enabling IEEE 802.3ah OAM Support
- Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102

## interface (IEEE 802.1ag OAM Connectivity-Fault Management)

|                                 |                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>interface (interface-name   ((ge-   xe-) (fpc/pic/port   fpc/pic/port.unit-number   fpc/pic/port.unit-number vlan vlan-id)));</code>                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | <code>[edit protocols oam ethernet connectivity-fault-management maintenance-domain domain-name maintenance-association ma-name mep mep-id]</code>                                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | <p>For Ethernet interfaces on M320, MX Series, and T Series routers, configure IEEE 802.1ag Operation, Administration, and Management (OAM) support.</p> <p>For Gigabit Ethernet interfaces and 10-Gigabit Ethernet interfaces on MX Series routers, configure IEEE 802.1ag Connectivity Fault Management (CFM) support on trunk interface ports.</p> |
| <b>Options</b>                  | <b>interface-name</b> —Interface to which the MEP is attached. It could be a physical Ethernet interface, logical Ethernet interface, or on a specific VLAN of a trunk port interface (MX Series only).                                                                                                                                               |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Configuring a Maintenance Endpoint</li> <li>Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102</li> </ul>                                                                                                                                                   |

## interval

---

|                                 |                                                                                                                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | interval (10m   10s   1m   1s   100ms   10ms);                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> continuity-check]                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.<br>Ten milliseconds option introduced in Junos OS Release 9.1.                                                                            |
| <b>Description</b>              | The time between continuity check messages.                                                                                                                                             |
| <b>Options</b>                  | <b>10m</b> —10 minutes.<br><b>10s</b> —10 seconds.<br><b>1m</b> —1 minute.<br><b>1s</b> —1 second.<br><b>100ms</b> —100 milliseconds.<br><b>10ms</b> —10 milliseconds.                  |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>Continuity Check Protocol</li><li>Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102</li></ul> |

## level

---

|                                 |                                                                                                                                                                                                        |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>level <i>number</i>;</code>                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | <code>[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i>]</code>                                                                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.                                                                                                                                                          |
| <b>Description</b>              | A number used in CFM messages to identify the maintenance association.                                                                                                                                 |
| <b>Options</b>                  | <b>number</b> —A number used to identify the maintenance domain to which the CFM message belongs.<br><b>Range:</b> 0 through 7                                                                         |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>Configuring the Maintenance Domain Level</li><li>Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102</li></ul> |

## maintenance-association

```

Syntax maintenance-association ma-name {
 short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
 continuity-check {
 hold-interval minutes;
 interval (10m | 10s | 1m | 1s | 100ms);
 loss-threshold number;
 }
 mep mep-id {
 auto-discovery;
 direction (up | down);
 interface interface-name (protect | working);
 lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
 rem-err-xcon | xcon);
 priority number;
 remote-mep mep-id {
 action-profile profile-name;
 sla-iterator-profile profile-name {
 data-tlv-size size;
 iteration-count count-value;
 priority priority-value;
 }
 }
 }
}

```

**Hierarchy Level** [edit protocols oam ethernet connectivity-fault-management maintenance-domain *domain-name*]

**Release Information** Statement introduced in Junos OS Release 8.4.

**Description** Configure the name of the maintenance association in IEEE-compliant format.

**Options** **ma-name**—The name of the maintenance association within the maintenance domain.  
The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- Creating a Maintenance Association
- Configuring a Maintenance Endpoint
- Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102

## maintenance-domain

```

Syntax maintenance-domain domain-name {
 bridge-domain name <vlan-id [vlan-ids]>;
 instance vpls-instance-name;
 level number;
 maintenance-association ma-name {
 short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
 continuity-check {
 hold-interval minutes;
 interval (10m | 10s | 1m | 1s | 100ms);
 loss-threshold number
 }
 mep mep-id {
 auto-discovery;
 direction (up | down);
 interface interface-name (protect | working);
 lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
 rem-err-xcon | xcon);
 priority number;
 remote-mep mep-id {
 action-profile profile-name;
 sla-iterator-profile profile-name {
 data-tlv-size size;
 iteration-count count-value;
 priority priority-value;
 }
 }
 }
 mip-half-function(none | default | explicit);
 name-format (character-string | none | dns | mac+2oct);
 }
 virtual-switch name {
 bridge-domain name <vlan-id [vlan-ids]>;
 }
}

```

**Hierarchy Level** [edit protocols oam ethernet connectivity-fault-management]

**Release Information** Statement introduced in Junos OS Release 8.4.

**Description** Configure the name of the maintenance domain in IEEE-compliant format.

**Options** **domain-name**—Name of the maintenance domain.

The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

**Related Documentation**

- Creating the Maintenance Domain
- Configuring a Maintenance Endpoint

- Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102

## mep

**Syntax**

```
mep mep-id {
 auto-discovery;
 direction (up | down);
 interface interface-name (protect | working);
 priority number;
 remote-mep mep-id {
 action-profile profile-name;
 sla-iterator-profile profile-name {
 data-tlv-size size;
 iteration-count count-value;
 priority priority-value;
 }
 }
}
```

**Hierarchy Level** [edit protocols oam ethernet connectivity-fault-management maintenance-domain *md-name* maintenance-association *ma-name*]

**Release Information** Statement introduced in Junos OS Release 8.4.

**Description** The numeric identifier of the maintenance association end point (MEP) within the maintenance association.

**Options** **mep-id**—Specify the numeric identifier of the MEP.

**Range:** 1 through 8191


The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- Configuring a Maintenance Endpoint
- Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102

## mip-half-function

|                                 |                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | mip-half-function (none   default   explicit);                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit protocols oam ethernet connectivity-fault-managementmaintenance-domain<br>md-name],<br>[edit protocols oam ethernet connectivity-fault-managementmaintenance-association<br>ma-name]                                                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.6.                                                                                                                                                                                                                                                                                                                             |
| <b>Description</b>              | Specify the OAM Ethernet CFM maintenance domain MIP half functions.                                                                                                                                                                                                                                                                                                       |
|                                 | <div>  <p><b>NOTE:</b> Whenever a MIP is configured and a bridge domain is mapped to multiple maintenance domains or maintenance associations, it is essential that the <b>mip-half-function</b> value for all maintenance domains and maintenance associations are the same.</p> </div> |
| <b>Options</b>                  | <p><b>none</b>—Specify to not use the mip-half-function.</p> <p><b>default</b>—Specify to use the default mip-half-function.</p> <p><b>explicit</b>—Specify an explicit mip-half-function.</p>                                                                                                                                                                            |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• Creating the Maintenance Domain</li> <li>• Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102</li> <li>• maintenance-domain on page 187</li> </ul>                                                                                                                            |

## virtual-switch

---

|                                 |                                                                                                                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>virtual-switch <i>name</i> bridge-domain <i>name</i> vlan-id [<i>vlan-ids</i> ];</code>                                                                                                                            |
| <b>Hierarchy Level</b>          | <code>[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> default-x]</code>                                                                                                 |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.6.                                                                                                                                                                            |
| <b>Description</b>              | Specify the routing-instance type as a virtual switch, under which bridge-domain MIPs must be enabled.                                                                                                                   |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Configuring MIP for Bridge Domains of a Virtual Switch</li><li>• Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers on page 102</li></ul> |

## CHAPTER 7

# CoS Configuration Statements

## buffer-size

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>buffer-size (percent <i>percentage</i>   remainder   temporal <i>microseconds</i>);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | <code>[edit class-of-service schedulers <i>scheduler-name</i>]</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Specify buffer size.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Default</b>                  | If you do not include this statement, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are 95, 0, 0, 5, 0, 0, 0, and 0 percent.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <p><b>percent <i>percentage</i></b>—Buffer size as a percentage of total buffer.</p> <p><b>remainder</b>—Remaining buffer available.</p> <p><b>temporal <i>microseconds</i></b>—Buffer size as a temporal value. The queuing algorithm starts dropping packets when it queues more than a computed number of bytes. This maximum is computed by multiplying the logical interface speed by the configured temporal value.</p> <p><b>Range:</b> The ranges vary by platform as follows:</p> <ul style="list-style-type: none"><li>• For M320 and T Series routers with Type 1 and Type 2 FPCs: 1 through 80,000 microseconds.</li><li>• For M320 and T Series routers with Type 3 FPCs: 1 through 50,000 microseconds.</li><li>• For M7i, M10i, M5, and M10 routers: 1 through 100,000 microseconds.</li><li>• For other M Series routers: 1 through 200,000 microseconds.</li><li>• For IQ PICs on M320 and T Series routers: 1 through 50,000 microseconds.</li><li>• For IQ PICs on other M Series routers: 1 through 100,000 microseconds.</li></ul> |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Configuring the Scheduler Buffer Size</li><li>• Example: Configuring CoS for a PBB Network on MX Series Routers on page 79</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## classifiers (Definition)

|                                 |                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> classifiers {     type classifier-name {         import (classifier-name   default);         forwarding-class class-name {             loss-priority level code-points [ aliases ] [ bit-patterns ];         }     } } </pre> |
| <b>Hierarchy Level</b>          | [edit class-of-service],<br>[edit class-of-service routing-instances <i>routing-instance-name</i> ]                                                                                                                                 |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br><b>ieee-802.1ad</b> option introduced in Junos OS Release 9.2.                                                                                                                 |
| <b>Description</b>              | Define a CoS aggregate behavior classifier for classifying packets. You can associate the classifier with a forwarding class or code-point mapping, and import a default classifier or one that is previously defined.              |
| <b>Options</b>                  | <p><b>classifier-name</b>—Name of the aggregate behavior classifier.</p> <p><b>type</b>—Traffic type: <b>dscp</b>, <b>dscp-ipv6</b>, <b>exp</b>, <b>ieee-802.1</b>, <b>ieee-802.1ad</b>, <b>inet-precedence</b>.</p>                |
| <b>Required Privilege Level</b> | <b>interface</b> —To view this statement in the configuration.<br><b>interface-control</b> —To add this statement to the configuration.                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Overview of BA Classifier Types</li> <li>Example: Configuring CoS for a PBB Network on MX Series Routers on page 79</li> </ul>                                                               |

## code-point

---

|                                 |                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>code-point [ <i>aliases</i> ] [ <i>bit-patterns</i> ];</code>                                                                |
| <b>Hierarchy Level</b>          | <code>[edit class-of-service rewrite-rules <i>type</i> <i>rewrite-name</i> forwarding-class <i>class-name</i>]</code>              |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                  |
| <b>Description</b>              | Specify one or more code-point aliases or bit sets for association with a forwarding class.                                        |
| <b>Options</b>                  | <p><i>aliases</i>—Name of each alias.</p> <p><i>bit-patterns</i>—Value of the code-point bits, in decimal form.</p>                |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p> |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>Configuring Rewrite Rules</li></ul>                                                          |

## code-points

---

|                                 |                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>code-points ([ <i>aliases</i> ]   [ <i>bit-patterns</i> ]);</code>                                                                                           |
| <b>Hierarchy Level</b>          | <code>[edit class-of-service classifiers <i>type</i> <i>classifier-name</i> forwarding-class <i>class-name</i>]</code>                                             |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                  |
| <b>Description</b>              | Specify one or more DSCP code-point aliases or bit sets for association with a forwarding class.                                                                   |
| <b>Options</b>                  | <p><i>aliases</i>—Name of the DSCP alias.</p> <p><i>bit-patterns</i>—Value of the code-point bits, in six-bit binary form.</p>                                     |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>Overview of BA Classifier Types</li><li>Example: Configuring CoS for a PBB Network on MX Series Routers on page 79</li></ul> |

## family

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> family <i>family-name</i> {     filter <i>filter-name</i> {         accounting-profile <i>name</i>;         interface-specific;         physical-interface-filter;     }     prefix-action <i>name</i> {         count;         destination-prefix-length <i>prefix-length</i>;         policer <i>policer-name</i>;         source-prefix-length <i>prefix-length</i>;         subnet-prefix-length <i>prefix-length</i>;     }     simple-filter <i>filter-name</i> {         term <i>term-name</i> {             from {                 <i>match-conditions</i>;             }             then {                 <i>action</i>;                 <i>action-modifiers</i>;             }         }     } } </pre> |
| <b>Hierarchy Level</b>     | [edit firewall],<br>[edit logical-systems <i>logical-system-name</i> firewall]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Logical systems support introduced in Junos OS Release 9.3.<br><b>simple-filter</b> statement introduced in Junos OS Release 7.6.<br><b>any</b> family type introduced in Junos OS Release 8.0.<br><b>bridge</b> family type introduced in Junos OS Release 8.4 (MX Series routers only).                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>         | Configure a firewall filter for IP version 4 (IPv4) or IP version 6 (IPv6) traffic. On the MX Series routers only, configure a firewall filter for Layer 2 traffic in a bridging environment.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>             | <p><b><i>family-name</i></b>—Version or type of addressing protocol:</p> <ul style="list-style-type: none"> <li>• <b>any</b>—Protocol-independent match conditions.</li> <li>• <b>bridge</b>—(MX Series routers only) Layer 2 packets that are part of bridging domain.</li> <li>• <b>ccc</b>—Layer 2 switching cross-connects.</li> <li>• <b>inet</b>—IPv4 addressing protocol.</li> <li>• <b>inet6</b>—IPv6 addressing protocol.</li> <li>• <b>mpls</b>—MPLS.</li> <li>• <b>vpls</b>—Virtual private LAN service (VPLS).</li> </ul>                                                                                                                                                                                     |

The remaining statements are explained separately.

|                                 |                                                                                                                                                                                                                 |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Guidelines for Configuring Standard Firewall Filters</li><li>• Guidelines for Configuring Service Filters</li><li>• Guidelines for Configuring Simple Filters</li></ul> |

---

## filter (Configuring)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>filter <i>filter-name</i> {<br/>    accounting-profile <i>name</i>;<br/>    interface-specific;<br/>    physical-interface-filter;<br/>    term <i>term-name</i> {<br/>        filter <i>filter-name</i>;<br/>        from {<br/>            <i>match-conditions</i>;<br/>        }<br/>        then {<br/>            <i>actions</i>;<br/>        }<br/>    }<br/>}</pre> |
| <b>Hierarchy Level</b>          | [edit firewall family <i>family-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> firewall family <i>family-name</i> ]                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Logical systems support introduced in Junos OS Release 9.3.<br><b>physical-interface-filter</b> statement introduced in Junos OS Release 9.6.                                                                                                                                                                              |
| <b>Description</b>              | Configure firewall filters.                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <p><b><i>filter-name</i></b>—Name that identifies the filter. The name can contain letters, numbers, and hyphens (-) and can be up to 64 characters long. To include spaces in the name, enclose it in quotation marks (" ").</p> <p>The remaining statements are explained separately.</p>                                                                                     |
| <b>Required Privilege Level</b> | firewall—To view this statement in the configuration.<br>firewall-control—To add this statement to the configuration.                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Guidelines for Configuring Standard Firewall Filters</li><li>• Guidelines for Applying Standard Firewall Filters</li></ul>                                                                                                                                                                                                              |

## firewall

|                                 |                                                                                                                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | firewall { ... }                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | [edit],<br>[edit logical-systems <i>logical-system-name</i> ]                                                                                                                                                 |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Logical systems support introduced in Junos OS Release 9.3.                                                                                              |
| <b>Description</b>              | Configure firewall filters.<br><br>The statements are explained separately.                                                                                                                                   |
| <b>Required Privilege Level</b> | firewall—To view this statement in the configuration.<br>firewall-control—To add this statement to the configuration.                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Guidelines for Configuring Standard Firewall Filters</li> <li>Guidelines for Configuring Service Filters</li> <li>Guidelines for Configuring Simple Filters</li> </ul> |

## forwarding-classes

|                                 |                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | forwarding-classes {<br>class queue-num <i>queue-number</i> priority (high   low);<br>queue <i>queue-number</i> <i>class-name</i> priority (high   low) [ policing-priority (premium   normal) ];<br>}                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit class-of-service]                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br><b>policing-priority</b> option introduced in Junos OS Release 9.5.                                                                                                                                                                                                              |
| <b>Description</b>              | Associate the forwarding class with a queue name and number. For M320, MX Series, and T Series routers only, you can configure fabric priority queuing by including the <b>priority</b> statement. For Enhanced IQ PICs, you can include the <b>policing-priority</b> option.<br><br>The statements are explained separately.         |
| <b>Usage Guidelines</b>         | See Configuring Forwarding Classes, Overriding Fabric Priority Queuing, and “Example: Configuring CoS for a PBB Network on MX Series Routers” on page 79. For the <b>policing-priority</b> option, see Configuring Layer 2 Policers on IQE PICs. For classification by egress interface, see Classifying Packets by Egress Interface. |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                               |

## ieee-802.1

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>ieee-802.1 (<i>rewrite-name</i>   default) vlan-tag (outer   outer-and-inner);</code>                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | <code>[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules]</code>                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br><b>vlan-tag</b> statement introduced in Junos OS Release 8.1.                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | Apply an IEEE-802.1 rewrite rule. For IQ PICs, you can only configure one IEEE 802.1 rewrite rule on a physical port. All logical ports (units) on that physical port should apply the same IEEE 802.1 rewrite rule.                                                                                                                                                                                 |
| <b>Options</b>                  | <b><i>rewrite-name</i></b> —Name of a <b>rewrite-rules</b> mapping configured at the <code>[edit class-of-service rewrite-rules ieee-802.1]</code> hierarchy level.<br><br><b>default</b> —The default mapping.                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | <b>interface</b> —To view this statement in the configuration.<br><b>interface-control</b> —To add this statement to the configuration.                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Configuring Rewrite Rules</li><li>• Example: Configuring CoS for a PBB Network on MX Series Routers on page 79</li><li>• dscp (Rewrite Rules)</li><li>• dscp-ipv6</li><li>• exp</li><li>• exp-push-push-push</li><li>• exp-swap-push-push</li><li>• ieee-802.1ad</li><li>• inet-precedence</li><li>• <b>rewrite-rules (Definition) on page 205</b></li></ul> |

## interfaces

|                                 |                                                                                                                                                                 |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>interfaces { ... }</code>                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit]                                                                                                                                                          |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                               |
| <b>Description</b>              | Configure interfaces on the router.                                                                                                                             |
| <b>Default</b>                  | The management and internal Ethernet interfaces are automatically configured. You must configure all other interfaces.                                          |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Physical Interface Configuration Statements Overview</li> <li>Configuring Aggregated Ethernet Link Protection</li> </ul> |

## interface-set

|                                 |                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>interface-set <i>interface-set-name</i> {     excess-bandwidth-share (proportional <i>value</i>   equal);     internal-node;     output-traffic-control-profile <i>profile-name</i>;     output-traffic-control-profile-remaining <i>profile-name</i>; }</pre> |
| <b>Hierarchy Level</b>          | [edit class-of-service interfaces]                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.5.                                                                                                                                                                                                                       |
| <b>Description</b>              | For MX Series routers with Enhanced Queuing DPCs and M Series and T Series routers with IQ2E PIC, configure hierarchical schedulers.                                                                                                                                |
| <b>Options</b>                  | <p><i>interface-set-name</i>—Name of the interface set.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                               |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Configuring Hierarchical Schedulers for CoS</li> </ul>                                                                                                                                                                       |

## interface-set (Ethernet Interfaces)

---

|                                 |                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>interface-set <i>interface-set-name</i> {<br/>    interface <i>ethernet-interface-name</i> {<br/>        (unit <i>unit-number</i>   vlan-tags-outer <i>vlan-tag</i>);<br/>    }<br/>}</pre>                                   |
| <b>Hierarchy Level</b>          | [edit interfaces]                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.5.                                                                                                                                                                                      |
| <b>Description</b>              | <p>The set of interfaces used to configure hierarchical CoS schedulers on Ethernet interfaces on the MX Series router and IQ2E PIC on M Series and T Series routers.</p> <p>The remaining statements are described separately.</p> |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li><li>• <a href="#">Junos OS Class of Service Configuration Guide</a></li></ul>         |

## loss-priority (Rewrite Rules)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>loss-priority <i>level</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | <code>[edit class-of-service rewrite-rules <i>type rewrite-name</i> forwarding-class <i>class-name</i>]</code>                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | <p>Specify a loss priority to which to apply a rewrite rule. The rewrite rule sets the code-point aliases and bit patterns for a specific forwarding class and packet loss priority (PLP). The inputs for the map are the forwarding class and the PLP. The output of the map is the code-point alias or bit pattern.</p>                                                                                                                                                                                            |
| <b>Options</b>                  | <p><i>level</i> can be one of the following:</p> <ul style="list-style-type: none"><li>• <b>high</b>—The rewrite rule applies to packets with high loss priority.</li><li>• <b>low</b>—The rewrite rule applies to packets with low loss priority.</li><li>• <b>medium-high</b>—(For J Series routers only) The rewrite rule applies to packets with medium-high loss priority.</li><li>• <b>medium-low</b>—(For J Series routers only) The rewrite rule applies to packets with medium-low loss priority.</li></ul> |
| <b>Usage Guidelines</b>         | See Configuring Rewrite Rules, Overview of BA Classifier Types, Configuring Tricolor Marking, and “Example: Configuring CoS for a PBB Network on MX Series Routers” on page 79.                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                   |

## loss-priority (BA Classifiers)

---

|                                 |                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | loss-priority <i>level</i> ;                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit class-of-service classifiers <i>type classifier-name</i> forwarding-class <i>class-name</i> ]                                                                                                                                                                                                                           |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                             |
| <b>Description</b>              | Specify packet loss priority value for a specific set of code-point aliases and bit patterns.                                                                                                                                                                                                                                 |
| <b>Options</b>                  | <i>level</i> can be one of the following: <ul style="list-style-type: none"><li>• <b>high</b>—Packet has high loss priority.</li><li>• <b>medium-high</b>—Packet has medium-high loss priority.</li><li>• <b>medium-low</b>—Packet has medium-low loss priority.</li><li>• <b>low</b>—Packet has low loss priority.</li></ul> |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• Overview of BA Classifier Types</li><li>• Example: Configuring CoS for a PBB Network on MX Series Routers on page 79</li><li>• Configuring Tricolor Marking</li></ul>                                                                                                                 |

## output-traffic-control-profile

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>output-traffic-control-profile <i>profile-name</i> shared-instance <i>instance-name</i>;</code>                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ],<br>[edit class-of-service interfaces <i>interface-name</i> interface-set <i>interface-set-name</i> ]                                                                                                                                                                                                                                                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 7.6.<br>Interface-set option for Enhanced Queuing DPCs on MX Series routers introduced in Junos OS Release 8.5                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | For Channelized IQ PICs, Gigabit Ethernet IQ, Gigabit Ethernet IQ2, and IQ2E PICs, link services IQ (LSQ) interfaces on AS PICs, and Enhanced Queuing DPCs on MX Series routers, apply an output traffic scheduling and shaping profile to the logical interface.<br><br>The <b>shared-instance</b> statement is supported on Gigabit Ethernet IQ2 PICs only.                                                                                                           |
| <b>Options</b>                  | <b><i>profile-name</i></b> —Name of the traffic-control profile to be applied to this interface                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• Oversubscribing Interface Bandwidth</li> <li>• Configuring Traffic Control Profiles for Shared Scheduling and Shaping</li> <li>• Example: Configuring CoS for a PBB Network on MX Series Routers on page 79</li> <li>• Configuring Hierarchical Schedulers for CoS (Enhanced Queuing DPCs on MX Series routers)</li> <li>• output-traffic-control-profile-remaining</li> <li>• traffic-control-profiles on page 211</li> </ul> |

## policer (Configuring)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> policer <i>policer-name</i> {   filter-specific;   if-exceeding {     bandwidth-limit <i>bps</i>;     bandwidth-percent <i>number</i>;     burst-size-limit <i>bytes</i>;   }   logical-interface-policer;   physical-interface-policer;   then {     <i>policer-action</i>;   } } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | <p>[edit firewall],</p> <p>[edit logical-systems <i>logical-system-name</i> firewall]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Logical systems support introduced in Junos OS Release 9.3.</p> <p><b>physical-interface-policer</b> statement introduced in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | <p>Configure policer rate limits and actions. When included at the <b>[edit firewall]</b> hierarchy level, the <b>policer</b> statement creates a template, and you do not have to configure a policer individually for every firewall filter or interface. To activate a policer, you must include the <b>policer-action</b> modifier in the <b>then</b> statement in a firewall filter term or on an interface.</p>                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <p><b><i>policer-action</i></b>—One or more actions to take:</p> <ul style="list-style-type: none"> <li>• <b>discard</b>—Discard traffic that exceeds the rate limits.</li> <li>• <b>forwarding-class <i>class-name</i></b>—Specify the particular forwarding class.</li> <li>• <b>loss-priority</b>—Set the packet loss priority (PLP) to <b>low</b>, <b>medium-low</b>, <b>medium-high</b>, or <b>high</b>.</li> </ul> <p><b><i>policer-name</i></b>—Name that identifies the policer. The name can contain letters, numbers, and hyphens (-), and can be up to 255 characters long. To include spaces in the name, enclose it in quotation marks (" ").</p> <p><b>then</b>—Actions to take on matching packets.</p> <p>The remaining statements are explained separately.</p> |
| <b>Required Privilege Level</b> | <p>firewall—To view this statement in the configuration.</p> <p>firewall-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• Statement Hierarchy for Configuring Policers</li> <li>• Single-Rate Two-Color Policer Overview</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

- Bandwidth Policer Overview
- Physical Interface Policer Overview
- Logical Interface (Aggregate) Policer Overview

## rewrite-rules (Definition)

|                                 |                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>rewrite-rules {   type <i>rewrite-name</i>{     import (<i>rewrite-name</i>   default);     forwarding-class <i>class-name</i> {       loss-priority <i>level</i> code-point [ <i>aliases</i> ] [ <i>bit-patterns</i> ];     }   } }</pre>                                                                                                            |
| <b>Hierarchy Level</b>          | [edit class-of-service]                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br><b>ieee-802.1ad</b> option introduced in Junos OS Release 9.2.                                                                                                                                                                                                                                        |
| <b>Description</b>              | Specify a rewrite-rules mapping for the traffic that passes through all queues on the interface.                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <p><b><i>rewrite-name</i></b>—Name of a <b>rewrite-rules</b> mapping.</p> <p><b><i>type</i></b>—Traffic type.</p> <p><b>Values:</b> <b>dscp</b>, <b>dscp-ipv6</b>, <b>exp</b>, <b>frame-relay-de</b> (J Series routers only), <b>ieee-802.1</b>, <b>ieee-802.1ad</b>, <b>inet-precedence</b></p> <p>The remaining statements are explained separately.</p> |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• Configuring Rewrite Rules</li> <li>• Example: Configuring CoS for a PBB Network on MX Series Routers on page 79</li> <li>• J Series router documentation</li> </ul>                                                                                                                                               |

## scheduler (Scheduler Map)

---

|                                 |                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>scheduler <i>scheduler-name</i>;</code>                                                                           |
| <b>Hierarchy Level</b>          | [edit class-of-service scheduler-maps <i>map-name</i> ]                                                                 |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                       |
| <b>Description</b>              | Associate a scheduler with a scheduler map.                                                                             |
| <b>Options</b>                  | <i>scheduler-name</i> —Name of the scheduler configuration block.                                                       |
| <b>Usage Guidelines</b>         | See Configuring Schedulers and “Example: Configuring CoS for a PBB Network on MX Series Routers” on page 79.            |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration. |

## scheduler-maps (For Most Interface Types)

---

|                                 |                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>scheduler-maps {<br/>  <i>map-name</i> {<br/>    forwarding-class <i>class-name</i> scheduler <i>scheduler-name</i>;<br/>  }<br/>}</pre> |
| <b>Hierarchy Level</b>          | [edit class-of-service]                                                                                                                       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                             |
| <b>Description</b>              | Specify a scheduler map name and associate it with the scheduler configuration and forwarding class.                                          |
| <b>Options</b>                  | <i>map-name</i> —Name of the scheduler map.<br><br>The remaining statements are explained separately.                                         |
| <b>Usage Guidelines</b>         | See Configuring Schedulers and “Example: Configuring CoS for a PBB Network on MX Series Routers” on page 79.                                  |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                       |

## **scheduler-maps (For Most Interface Types)**

---

|                                 |                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>scheduler-maps {<br/>  <i>map-name</i> {<br/>    forwarding-class <i>class-name</i> scheduler <i>scheduler-name</i>;<br/>  }<br/>}</pre> |
| <b>Hierarchy Level</b>          | [edit class-of-service]                                                                                                                       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                             |
| <b>Description</b>              | Specify a scheduler map name and associate it with the scheduler configuration and forwarding class.                                          |
| <b>Options</b>                  | <p><i>map-name</i>—Name of the scheduler map.</p> <p>The remaining statements are explained separately.</p>                                   |
| <b>Usage Guidelines</b>         | See Configuring Schedulers and “Example: Configuring CoS for a PBB Network on MX Series Routers” on page 79.                                  |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                       |

## schedulers (Class-of-Service)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>schedulers {<br/>  scheduler-name {<br/>    buffer-size (<i>seconds</i>   percent <i>percentage</i>   remainder   temporal <i>microseconds</i>);<br/>    drop-profile-map loss-priority (any   low   medium-low   medium-high   high) protocol<br/>      (any   non-tcp   tcp) drop-profile <i>profile-name</i>;<br/>    excess-rate percent <i>percentage</i><br/>    priority <i>priority-level</i>;<br/>    shaping-rate (percent <i>percentage</i>   <i>rate</i>);<br/>    transmit-rate (percent <i>percentage</i>   <i>rate</i>   remainder) &lt;exact   rate-limit&gt;;<br/>  }<br/>}</pre> |
| <b>Hierarchy Level</b>          | [edit class-of-service]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Specify scheduler name and parameter values.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <p><i>scheduler-name</i>—Name of the scheduler to be configured.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>Configuring Schedulers</li><li>Example: Configuring CoS for a PBB Network on MX Series Routers on page 79</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                               |

## term

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> term <i>term-name</i> {     from {         <i>match-conditions</i>;         ip-version ipv4 {             <i>match-conditions-mpls-ipv4-address</i>;             protocol (tcp   udp) {                 <i>match conditions-mpls-ipv4-port</i>;             }         }     }     then {         <i>actions</i>;     } } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>     | <pre> [edit firewall family <i>family-name</i> filter <i>filter-name</i>], [edit firewall family <i>family-name</i> service-filter <i>filter-name</i>], [edit firewall family <i>family-name</i> simple-filter <i>filter-name</i>], [edit logical-systems <i>logical-system-name</i> firewall family <i>family-name</i> filter <i>filter-name</i>], [edit logical-systems <i>logical-system-name</i> firewall family <i>family-name</i> service-filter <i>filter-name</i>], [edit logical-systems <i>logical-system-name</i> firewall family <i>family-name</i> simple-filter <i>filter-name</i>] </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p><b>filter</b> option introduced in Junos OS Release 7.6.</p> <p>Logical systems support introduced in Junos OS Release 9.3.</p> <p><b>ip-version ipv4</b> support introduced in Junos OS Release 10.1.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>         | Define a firewall filter term.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>             | <p><b>actions</b>—(Optional) Actions to perform on the packet if conditions match. You can specify one <i>terminating action</i> supported for the specified filter type. If you do not specify a terminating action, the packets that match the conditions in the <b>from</b> statement are accepted by default. As an option, you can specify one or more <i>nonterminating actions</i> supported for the specified filter type.</p> <p><b>filter-name</b>—(Optional) For <b>family <i>family-name</i> filter <i>filter-name</i></b> only, reference another standard stateless firewall filter from within this term.</p> <p><b>from</b>—(Optional) Match packet fields to values. If not included, all packets are considered to match and the actions and action modifiers in the <b>then</b> statement are taken.</p> <p><b>match-conditions</b>—One or more conditions to use to make a match on a packet.</p> <p><b>match-conditions-mpls-ipv4-address</b>—(MPLS-tagged IPv4 traffic only) One or more IP address match conditions to match on the IPv4 packet header. Supports network-based service in a core network with IPv4 packets as an inner payload of an MPLS packet with labels stacked up to five deep.</p> |

***match-conditions-mpls-ipv4-port***—(MPLS-tagged IPv4 traffic only) One or more UDP or TCP port match conditions to use to match a packet in an MPLS flow. Supports network-based service in a core network with IPv4 packets as an inner payload of an MPLS packet with labels stacked up to five deep.

***term-name***—Name that identifies the term. The name can contain letters, numbers, and hyphens (-) and can be up to 64 characters long. To include spaces in the name, enclose it in quotation marks (" ").

***then***—(Optional) Actions to take on matching packets. If not included and a packet matches all the conditions in the ***from*** statement, the packet is accepted.



|                           |                                                              |
|---------------------------|--------------------------------------------------------------|
| <b>Required Privilege</b> | firewall—To view this statement in the configuration.        |
| <b>Level</b>              | firewall-control—To add this statement to the configuration. |

|                              |                                                                                                                                                                                                                                                                                                       |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• Guidelines for Configuring Standard Firewall Filters</li><li>• Guidelines for Configuring Service Filters</li><li>• Guidelines for Configuring Simple Filters</li><li>• Guidelines for Configuring and Applying Firewall Filters in Logical Systems</li></ul> |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## traffic-control-profiles

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> traffic-control-profiles <i>profile-name</i> {     delay-buffer-rate (percent <i>percentage</i>   <i>rate</i>);     excess-rate (percent <i>percentage</i>   proportion <i>value</i> );     guaranteed-rate (percent <i>percentage</i>   <i>rate</i>) &lt;burst-size <i>bytes</i>&gt;;     overhead-accounting (frame-mode   cell-mode) &lt;bytes <i>byte-value</i>&gt;;     scheduler-map <i>map-name</i>;     shaping-rate (percent <i>percentage</i>   <i>rate</i>) &lt;burst-size <i>bytes</i>&gt;; } </pre> |
| <b>Hierarchy Level</b>          | [edit class-of-service]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 7.6.</p> <p><b>excess-rate</b> statement introduced in Junos OS Release 9.3.</p>                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | <p>For Gigabit Ethernet IQ, Channelized IQ PICs, FRF.15 and FRF.16 LSQ interfaces, and Enhanced Queuing (EQ) DPCs only, configure traffic shaping and scheduling profiles. For Enhanced EQ PICs and EQ DPCs only, you can include the <b>excess-rate</b> statement.</p>                                                                                                                                                                                                                                                |
| <b>Options</b>                  | <p><b><i>profile-name</i></b>—Name of the traffic-control profile.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• Oversubscribing Interface Bandwidth</li> <li>• Example: Configuring CoS for a PBB Network on MX Series Routers on page 79</li> <li>• <b>output-traffic-control-profile</b> on page 203</li> </ul>                                                                                                                                                                                                                                                                             |

## transmit-rate

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>transmit-rate (rate   percent <i>percentage</i>   remainder) &lt;exact   rate-limit&gt;;</code>                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>     | [edit class-of-service schedulers <i>scheduler-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br><b>rate-limit</b> option introduced in Junos OS Release 8.3. Applied to the Multiservices PICs in Junos OS Release 9.4.                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>         | Specify the transmit rate or percentage for a scheduler.                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Default</b>             | If you do not include this statement, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are 95, 0, 0, 5, 0, 0, 0, and 0 percent.                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>             | <p><b>exact</b>—(Optional) Enforce the exact transmission rate. Under sustained congestion, a rate-controlled queue that goes into negative credit fills up and eventually drops packets. This value should never exceed the rate-controlled amount.</p> <p><b>percent <i>percentage</i></b>—Percentage of transmission capacity. A percentage of zero drops all packets in the queue.</p> <p><b>Range:</b> 0 through 100 percent. 0 through 200 percent for SONET/SDH OC48/STM16 IQE PIC.</p> |
|                            | <p> <b>NOTE:</b> On M Series Multiservice Edge Routers, for interfaces configured on 4-port E1 and 4-port T1 PICs only, you can only configure a <b>percentage</b> value from 11 through 100. These two PICs do not support transmission rates less than 11 percent.</p>                                                                                                                                    |
|                            | <p><b>rate</b>—Transmission rate, in bps. You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000).</p> <p><b>Range:</b> 3200 through 160,000,000,000 bps</p>                                                                                                                                                                                     |
|                            | <p> <b>NOTE:</b> For all MX Series interfaces, the rate can be from 65,535 through 160,000,000,000 bps.</p>                                                                                                                                                                                                                                                                                                 |
|                            | <p><b>rate-limit</b>—(Optional) Limit the transmission rate to the rate-controlled amount. In contrast to the <b>exact</b> option, the scheduler with the <b>rate-limit</b> option shares unused bandwidth above the rate-controlled amount.</p> <p><b>remainder</b>—Use remaining rate available.</p>                                                                                                                                                                                         |

|                              |                                                                                                                                                               |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege</b>    | interface—To view this statement in the configuration.                                                                                                        |
| <b>Level</b>                 | interface-control—To add this statement to the configuration.                                                                                                 |
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• Configuring Schedulers</li><li>• Example: Configuring CoS for a PBB Network on MX Series Routers on page 79</li></ul> |



# Interface Set Configuration Statements

## interface-set (Ethernet Interfaces)

---

**Syntax**    `interface-set interface-set-name {  
                  interface ethernet-interface-name {  
                    (unit unit-number | vlan-tags-outer vlan-tag);  
                  }  
                }`

**Hierarchy Level**    [edit interfaces]

**Release Information**    Statement introduced in Junos OS Release 8.5.

**Description**    The set of interfaces used to configure hierarchical CoS schedulers on Ethernet interfaces on the MX Series router and IQ2E PIC on M Series and T Series routers.

The remaining statements are described separately.

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**

- Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17
- [Junos OS Class of Service Configuration Guide](#)

## interface-set

---

|                                 |                                                                                                                                                                                                                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>interface-set <i>interface-set-name</i> {<br/>    excess-bandwidth-share (proportional <i>value</i>   equal);<br/>    internal-node;<br/>    output-traffic-control-profile <i>profile-name</i>;<br/>    output-traffic-control-profile-remaining <i>profile-name</i>;<br/>}</pre> |
| <b>Hierarchy Level</b>          | [edit class-of-service interfaces]                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.5.                                                                                                                                                                                                                                           |
| <b>Description</b>              | For MX Series routers with Enhanced Queuing DPCs and M Series and T Series routers with IQ2E PIC, configure hierarchical schedulers.                                                                                                                                                    |
| <b>Options</b>                  | <p><i>interface-set-name</i>—Name of the interface set.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                   |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>Configuring Hierarchical Schedulers for CoS</li></ul>                                                                                                                                                                                             |

## PART 3

# Administration

- Provider Backbone Bridging Monitoring Commands on page 219
- CoS Monitoring Commands on page 253
- Connectivity Fault Management Monitoring Commands on page 269



## CHAPTER 9

# Provider Backbone Bridging Monitoring Commands

## show bridge mac-table

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show bridge mac-table &lt;brief   count   detail   extensive&gt; &lt;bridge-domain (all   <i>bridge-domain-name</i>)&gt; &lt;global-count&gt; &lt;interface <i>interface-name</i>&gt; &lt;mac-address&gt; &lt;vlan-id (all-vlan   <i>vlan-id</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Command introduced in Junos OS Release 8.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | (MX Series routers only) Display Layer 2 MAC address information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <p>none—Display all learned Layer 2 MAC address information.</p> <p>brief   count   detail   extensive—(Optional) Display the specified level of output.</p> <p>bridge-domain (all   <i>bridge-domain-name</i>)—(Optional) Display learned Layer 2 MAC addresses for all bridging domains or for the specified bridging domain.</p> <p>global-count—(Optional) Display the total number of learned Layer 2 MAC addresses on the system.</p> <p>instance <i>instance-name</i>—(Optional) Display learned Layer 2 MAC addresses for the specified routing instance.</p> <p>interface <i>interface-name</i>—(Optional) Display learned Layer 2 MAC addresses for the specified interface.</p> <p>mac-address—(Optional) Display the specified learned Layer 2 MAC address information.</p> <p>vlan-id (all-vlan   <i>vlan-id</i>)—(Optional) Display learned Layer 2 MAC addresses for all VLANs or for the specified VLAN.</p> |
| <b>Additional Information</b>   | When Layer 2 protocol tunneling is enabled, the tunneling MAC address 01:00:0c:cd:cd:d0 is installed in the MAC table. When the Cisco Discovery Protocol (CDP), Spanning Tree Protocol (STP), or VLAN Trunk Protocol (VTP) is configured for Layer 2 protocol tunneling on an interface, the corresponding protocol MAC address is installed in the MAC table.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>List of Sample Output</b>    | <pre>show bridge mac-table on page 221 show bridge mac-table brief on page 221 show brief mac-table count on page 222 show bridge mac-table detail on page 222</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Output Fields</b>            | Table 14 on page 221 describes the output fields for the <b>show bridge mac-table</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

Table 14: show bridge mac-table Output fields

| Field Name         | Field Description                                                                                                                                                                                                                                                                                            |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Routing instance   | Name of the routing instance.                                                                                                                                                                                                                                                                                |
| Bridging domain    | Name of the bridging domain.                                                                                                                                                                                                                                                                                 |
| MAC address        | MAC address or addresses learned on a logical interface.                                                                                                                                                                                                                                                     |
| MAC flags          | Status of MAC address learning properties for each interface: <ul style="list-style-type: none"> <li>• <b>S</b>—Static MAC address is configured.</li> <li>• <b>D</b>—Dynamic MAC address is configured.</li> <li>• <b>SE</b>—MAC accounting is enabled.</li> <li>• <b>NM</b>—Non-configured MAC.</li> </ul> |
| Logical interface  | Name of the logical interface.                                                                                                                                                                                                                                                                               |
| MAC count          | Number of MAC addresses learned on the specific routing instance or interface.                                                                                                                                                                                                                               |
| Learning interface | Name of the logical interface on which the MAC address was learned.                                                                                                                                                                                                                                          |
| Learning VLAN      | VLAN ID of the routing instance or bridge domain in which the MAC address was learned.                                                                                                                                                                                                                       |
| Layer 2 flags      | Debugging flags signifying that the MAC address is present in various lists.                                                                                                                                                                                                                                 |
| Epoch              | Spanning Tree Protocol epoch number identifying when the MAC address was learned. Used for debugging.                                                                                                                                                                                                        |
| Sequence number    | Sequence number assigned to this MAC address. Used for debugging.                                                                                                                                                                                                                                            |
| Learning mask      | Mask of the Packet Forwarding Engines where this MAC address was learned. Used for debugging.                                                                                                                                                                                                                |
| IPC generation     | Creation time of the logical interface when this MAC address was learned. Used for debugging.                                                                                                                                                                                                                |

## Sample Output

```

show bridge mac-table user@host> show bridge mac-table
MAC flags (S -static MAC, D -dynamic MAC,
 SE -Statistics enabled, NM -Non configured MAC)

Routing instance : vs1
Bridging domain : vlan100, VLAN : 100
 Learning MAC MAC Logical
 VLAN address flags interface
 00:00:00:19:1c:db D ge-11/0/3.0
 00:00:00:59:3a:2f D xe-10/2/0.100

show bridge mac-table user@host> show bridge mac-table brief
brief MAC flags (S -static MAC, D -dynamic MAC,
 SE -Statistics enabled, NM -Non configured MAC)

```

```

Routing instance : vs1
Bridging domain : vlan100, VLAN : 100
 Learning MAC MAC Logical
 VLAN address flags interface
 00:00:00:19:1c:db D ge-11/0/3.0
 00:00:00:59:3a:2f D xe-10/2/0.100

```

```

show brief mac-table count user@host> show bridge mac-table count
count 2 MAC address learned in routing instance vs1 bridge domain vlan100

```

MAC address count per interface within routing instance:

| Logical interface | MAC count |
|-------------------|-----------|
| ge-11/0/3.0       | 1         |
| ge-11/1/4.100     | 0         |
| ge-11/1/1.100     | 0         |
| ge-11/1/0.100     | 0         |
| xe-10/2/0.100     | 1         |
| xe-10/0/0.100     | 0         |

MAC address count per learn VLAN within routing instance:

| Learn VLAN ID | MAC count |
|---------------|-----------|
| 0             | 2         |

0 MAC address learned in routing instance vs1 bridge domain vlan200

MAC address count per interface within routing instance:

| Logical interface | MAC count |
|-------------------|-----------|
| ge-11/1/0.200     | 0         |
| ge-11/1/1.200     | 0         |
| ge-11/1/4.200     | 0         |
| xe-10/0/0.200     | 0         |
| xe-10/2/0.200     | 0         |

MAC address count per learn VLAN within routing instance:

| Learn VLAN ID | MAC count |
|---------------|-----------|
| 0             | 0         |

```

show bridge mac-table detail user@host> show bridge mac-table detail
detail
MAC address: 00:00:00:19:1c:db
 Routing instance: vs1
 Bridging domain: vlan100
 Learning interface: ge-11/0/3.0 Learning VLAN: 0
 Layer 2 flags: in_ifd, in_ifl, in_vlan, kernel
 Epoch: 4 Sequence number: 0
 Learning mask: 0x800 IPC generation: 0

MAC address: 00:00:00:59:3a:2f
 Routing instance: vs1
 Bridging domain: vlan100
 Learning interface: xe-10/2/0.100 Learning VLAN: 0
 Layer 2 flags: in_ifd, in_ifl, in_vlan, kernel
 Epoch: 7 Sequence number: 0
 Learning mask: 0x400 IPC generation: 0

```

## show interfaces (Gigabit Ethernet)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show interfaces <i>ge-fpc/pic/port</i> &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; otn-options {   bytes {     transmit-payload-type <i>number</i>;   } } &lt;snmp-index <i>snmp-index</i>&gt; &lt;statistics&gt;</pre>                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | (M Series, T Series, and MX Series routers only) Display status information about the specified Gigabit Ethernet interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <p><b><i>ge-fpc/pic/port</i></b>—Display standard information about the specified Gigabit Ethernet interface.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p> |
| <b>Additional Information</b>   | In a logical system, this command displays information only about the logical interfaces and not about the physical interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>List of Sample Output</b>    | <p><b>show interfaces (Gigabit Ethernet) on page 238</b></p> <p><b>show interfaces (Gigabit Ethernet on MX Series Router) on page 238</b></p> <p><b>show interfaces brief (Gigabit Ethernet) on page 238</b></p> <p><b>show interfaces detail (Gigabit Ethernet) on page 239</b></p> <p><b>show interfaces extensive (Gigabit Ethernet IQ2) on page 240</b></p> <p><b>show interfaces (Gigabit Ethernet Unnumbered Interface) on page 243</b></p>                                                                                                                                               |
| <b>Output Fields</b>            | See Table 15 on page 224 for the output fields for the <b>show interfaces (Gigabit Ethernet)</b> command. For Gigabit Ethernet IQ and IQE PICs, the traffic and MAC statistics vary by interface type. For more information, see Table 16 on page 237.                                                                                                                                                                                                                                                                                                                                          |

Table 15: show interfaces Gigabit Ethernet Output Fields

| Field Name                | Field Description                                                                                                                                                                                                                                   | Level of Output              |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| <b>Physical Interface</b> |                                                                                                                                                                                                                                                     |                              |
| <b>Physical interface</b> | Name of the physical interface.                                                                                                                                                                                                                     | All levels                   |
| <b>Enabled</b>            | State of the interface. Possible values are described in the “Enabled Field” section under Common Output Fields Description.                                                                                                                        | All levels                   |
| <b>Interface index</b>    | Index number of the physical interface, which reflects its initialization sequence.                                                                                                                                                                 | <b>detail extensive none</b> |
| <b>SNMP ifIndex</b>       | SNMP index number for the physical interface.                                                                                                                                                                                                       | <b>detail extensive none</b> |
| <b>Generation</b>         | Unique number for use by Juniper Networks technical support only.                                                                                                                                                                                   | <b>detail extensive</b>      |
| <b>Link-level type</b>    | Encapsulation being used on the physical interface.                                                                                                                                                                                                 | All levels                   |
| <b>MTU</b>                | Maximum transmission unit size on the physical interface.                                                                                                                                                                                           | All levels                   |
| <b>Speed</b>              | Speed at which the interface is running.                                                                                                                                                                                                            | All levels                   |
| <b>Loopback</b>           | Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .                                                                                                                      | All levels                   |
| <b>Source filtering</b>   | Source filtering status: <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                                                        | All levels                   |
| <b>LAN-PHY mode</b>       | 10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.                                                       | All levels                   |
| <b>WAN-PHY mode</b>       | 10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.                           | All levels                   |
| <b>Unidirectional</b>     | Unidirectional link mode status for 10-Gigabit Ethernet interface: <b>Enabled</b> or <b>Disabled</b> for parent interface; <b>Rx-only</b> or <b>Tx-only</b> for child interfaces.                                                                   | All levels                   |
| <b>Flow control</b>       | Flow control status: <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                                                            | All levels                   |
| <b>Auto-negotiation</b>   | (Gigabit Ethernet interfaces) Autonegotiation status: <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                           | All levels                   |
| <b>Remote-fault</b>       | (Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul> | All levels                   |
| <b>Device flags</b>       | Information about the physical device. Possible values are described in the “Device Flags” section under Common Output Fields Description.                                                                                                          | All levels                   |
| <b>Interface flags</b>    | Information about the interface. Possible values are described in the “Interface Flags” section under Common Output Fields Description.                                                                                                             | All levels                   |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Level of Output       |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|
| <b>Link flags</b>              | Information about the link. Possible values are described in the “Links Flags” section under Common Output Fields Description.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | All levels            |
| <b>Wavelength</b>              | (10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | All levels            |
| <b>Frequency</b>               | (10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | All levels            |
| <b>CoS queues</b>              | Number of CoS queues configured.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | detail extensive none |
| <b>Schedulers</b>              | (Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces only) Number of CoS schedulers configured.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | extensive             |
| <b>Hold-times</b>              | Current interface hold-time up and hold-time down, in milliseconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | detail extensive      |
| <b>Current address</b>         | Configured MAC address.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | detail extensive none |
| <b>Hardware address</b>        | Hardware MAC address.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | detail extensive none |
| <b>Last flapped</b>            | Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | detail extensive none |
| <b>Input Rate</b>              | Input rate in bits per second (bps) and packets per second (pps).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | None specified        |
| <b>Output Rate</b>             | Output rate in bps and pps.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | None specified        |
| <b>Statistics last cleared</b> | Time when the statistics for the interface were last set to zero.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | detail extensive      |
| <b>Traffic statistics</b>      | <p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> <p>Gigabit Ethernet and 10-Gigabit Ethernet IQ PICs count the overhead and CRC bytes.</p> <p>For Gigabit Ethernet IQ PICs, the input byte counts vary by interface type. For more information, see Table 31 under the show interfaces (10-Gigabit Ethernet) command.</p> | detail extensive      |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name          | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Level of Output  |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>Input errors</b> | <p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul> | <b>extensive</b> |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name                      | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Level of Output         |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Output errors</b>            | <p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Collisions</b>—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul> | <b>extensive</b>        |
| <b>Egress queues</b>            | Total number of egress queues supported on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>detail extensive</b> |
| <b>Queue counters (Egress)</b>  | <p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>detail extensive</b> |
| <b>Ingress queues</b>           | Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | <b>extensive</b>        |
| <b>Queue counters (Ingress)</b> | <p>CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | <b>extensive</b>        |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name                              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Level of Output              |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| <b>Active alarms and Active defects</b> | <p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value <b>None</b> or <b>Link</b>.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul> | <b>detail extensive none</b> |
| <b>OTN FEC statistics</b>               | <p>The forward error correction (FEC) counters provide the following statistics:</p> <ul style="list-style-type: none"> <li>• <b>Corrected Errors</b>—The count of corrected errors in the last second.</li> <li>• <b>Corrected Error Ratio</b>—The corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits.</li> </ul>                                                                                                                                                                                                                                                                                                                                |                              |
| <b>PCS statistics</b>                   | <p>(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device.</p> <ul style="list-style-type: none"> <li>• <b>Bit errors</b>—High bit error rate. Indicates the number of bit errors when the PCS receiver is operating in normal mode.</li> <li>• <b>Errored blocks</b>—Loss of block lock. The number of errored blocks when PCS receiver is operating in normal mode.</li> </ul>                                                                                                                                                                                                                                    | <b>detail extensive</b>      |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name                            | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Level of Output  |
|---------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>MAC statistics</b>                 | <p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> <li>• <b>Total octets</b> and <b>total packets</b>—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. For more information, see Table 31 under the show interfaces (10-Gigabit Ethernet) command.</li> <li>• <b>Unicast packets</b>, <b>Broadcast packets</b>, and <b>Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—There are two possible conditions regarding the number of oversized frames: <ul style="list-style-type: none"> <li>• Packet length exceeds 1518 octets, or</li> <li>• Packet length exceeds MRU</li> </ul> </li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>VLAN tagged frames</b>—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not.</li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul> | <b>extensive</b> |
| <b>OTN Received Overhead Bytes</b>    | APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>extensive</b> |
| <b>OTN Transmitted Overhead Bytes</b> | APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>extensive</b> |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name               | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Level of Output  |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>Filter statistics</b> | <p><b>Receive</b> and <b>Transmit</b> statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> <li>• <b>Input packet count</b>—Number of packets received from the MAC hardware that the filter processed.</li> <li>• <b>Input packet rejects</b>—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address.</li> <li>• <b>Input DA rejects</b>—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the router from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local router (which the router is rejecting).</li> <li>• <b>Input SA rejects</b>—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect.</li> <li>• <b>Output packet count</b>—Number of packets that the filter has given to the MAC hardware.</li> <li>• <b>Output packet pad count</b>—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured.</li> <li>• <b>Output packet error count</b>—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment.</li> <li>• <b>CAM destination filters, CAM source filters</b>—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0.</li> </ul> | <b>extensive</b> |
| <b>PMA PHY</b>           | <p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PHY Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | <b>extensive</b> |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name         | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Level of Output  |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>WIS section</b> | <p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B1</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOL</b>—Loss of light</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>extensive</b> |
| <b>WIS line</b>    | <p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul> | <b>extensive</b> |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name      | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Level of Output  |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>WIS path</b> | <p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul> | <b>extensive</b> |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name                                  | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Level of Output |
|---------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Autonegotiation information                 | <p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> <li>• <b>Negotiation status:</b> <ul style="list-style-type: none"> <li>• <b>Incomplete</b>—Ethernet interface has the speed or link mode configured.</li> <li>• <b>No autonegotiation</b>—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation.</li> <li>• <b>Complete</b>—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> </ul> </li> <li>• <b>Link partner status</b>—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> <li>• <b>Link partner</b>—Information from the remote Ethernet device: <ul style="list-style-type: none"> <li>• <b>Link mode</b>—Depending on the capability of the link partner, either <b>Full-duplex</b> or <b>Half-duplex</b>.</li> <li>• <b>Flow control</b>—Types of flow control supported by the link partner. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive), and <b>None</b> (link partner does not support flow control).</li> <li>• <b>Remote fault</b>—Remote fault information from the link partner—<b>Failure</b> indicates a receive link error. <b>OK</b> indicates that the link partner is receiving. <b>Negotiation error</b> indicates a negotiation error. <b>Offline</b> indicates that the link partner is going offline.</li> </ul> </li> <li>• <b>Local resolution</b>—Information from the link partner: <ul style="list-style-type: none"> <li>• <b>Flow control</b>—Types of flow control supported by the local Ethernet device. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive), and <b>None</b> (flow control capability disabled).</li> <li>• <b>Remote fault</b>—Remote fault information. <b>Link OK</b> (no error detected on receive), <b>Offline</b> (local interface is offline), and <b>Link Failure</b> (link error detected on receive).</li> </ul> </li> </ul> | extensive       |
| Received path trace, Transmitted path trace | <p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | extensive       |
| Packet Forwarding Engine configuration      | <p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | extensive       |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name               | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Level of Output              |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| <b>CoS information</b>   | Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul> | <b>extensive</b>             |
| <b>Logical Interface</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                              |
| <b>Logical interface</b> | Name of the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | All levels                   |
| <b>Index</b>             | Index number of the logical interface, which reflects its initialization sequence.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail extensive none</b> |
| <b>SNMP ifIndex</b>      | SNMP interface index number for the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | <b>detail extensive none</b> |
| <b>Generation</b>        | Unique number for use by Juniper Networks technical support only.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>detail extensive</b>      |
| <b>Flags</b>             | Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under Common Output Fields Description.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | All levels                   |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name                  | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Level of Output                    |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|
| <b>VLAN-Tag</b>             | <p>Rewrite profile applied to incoming or outgoing frames on the outer (<b>Out</b>) VLAN tag or for both the outer and inner (<b>In</b>) VLAN tags.</p> <ul style="list-style-type: none"> <li><b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li><b>pop</b>—The outer VLAN tag of the incoming frame is removed.</li> <li><b>swap</b>—The outer VLAN tag of the incoming frame is overwritten with the user specified VLAN tag information.</li> <li><b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li><b>push-push</b>—Two VLAN tags are pushed in from the incoming frame.</li> <li><b>swap-push</b>—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame.</li> <li><b>swap-swap</b>—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user specified VLAN tag value.</li> <li><b>pop-swap</b>—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame.</li> <li><b>pop-pop</b>—Both the outer and inner VLAN tags of the incoming frame are removed.</li> </ul> | <b>brief detail extensive none</b> |
| <b>Demux:</b>               | <p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> <li>Source Family Inet</li> <li>Destination Family Inet</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail extensive none</b>       |
| <b>Encapsulation</b>        | Encapsulation on the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | All levels                         |
| <b>Protocol</b>             | Protocol family. Possible values are described in the "Protocol Field" section under Common Output Fields Description.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | <b>detail extensive none</b>       |
| <b>MTU</b>                  | Maximum transmission unit size on the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | <b>detail extensive none</b>       |
| <b>Dynamic Profile</b>      | (MX Series routers with Trio MPCs only) Name of the dynamic profile that was used to create this interface configured with Point-to-Point Protocol over Ethernet (PPPoE) family.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>detail extensive none</b>       |
| <b>Service Name Table</b>   | (MX Series routers with Trio MPCs only) Name of the service name table for the interface configured with PPPoE family.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | <b>detail extensive none</b>       |
| <b>Max Sessions</b>         | (MX Series routers with Trio MPCs only) Maximum number of PPPoE logical interfaces that can be activated on the underlying interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | <b>detail extensive none</b>       |
| <b>Duplicate Protection</b> | (MX Series routers with Trio MPCs only) State of PPPoE duplicate protection: <b>On</b> or <b>Off</b> . When duplicate protection is configured for the underlying interface, a dynamic PPPoE logical interface cannot be activated when an existing active logical interface is present for the same PPPoE client.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>detail extensive none</b>       |
| <b>Maximum labels</b>       | Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail extensive none</b>       |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name                      | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Level of Output              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| <b>Traffic statistics</b>       | Number and rate of bytes and packets received and transmitted on the specified interface set.<br><br><ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> </ul>                                                                                                                                                                                                                                                                                         | <b>detail extensive</b>      |
| <b>IPv6 transit statistics</b>  | Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | <b>extensive</b>             |
| <b>Local statistics</b>         | Number and rate of bytes and packets destined to the router.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>extensive</b>             |
| <b>Transit statistics</b>       | Number and rate of bytes and packets transiting the switch.<br><br><b>NOTE:</b> For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the <b>Output bytes</b> and <b>Output packets</b> interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler. | <b>extensive</b>             |
| <b>Generation</b>               | Unique number for use by Juniper Networks technical support only.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | <b>detail extensive</b>      |
| <b>Route Table</b>              | Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | <b>detail extensive none</b> |
| <b>Flags</b>                    | Information about protocol family flags. Possible values are described in the "Family Flags" section under Common Output Fields Description.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>detail extensive</b>      |
| <b>Donor interface</b>          | (Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail extensive none</b> |
| <b>Preferred source address</b> | (Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>detail extensive none</b> |
| <b>Input Filters</b>            | Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                              | <b>detail extensive</b>      |
| <b>Output Filters</b>           | Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail extensive</b>      |
| <b>Mac-Validate Failures</b>    | Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>detail extensive none</b> |
| <b>Addresses, Flags</b>         | Information about the address flags. Possible values are described in the "Addresses Flags" section under Common Output Fields Description.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail extensive none</b> |

Table 15: show interfaces Gigabit Ethernet Output Fields (*continued*)

| Field Name                    | Field Description                                                                                                                        | Level of Output              |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| <b><i>protocol-family</i></b> | Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed. | <b>brief</b>                 |
| <b>Flags</b>                  | Information about address flag (possible values are described in the “Addresses Flags” section under Common Output Fields Description.   | <b>detail extensive none</b> |
| <b>Destination</b>            | IP address of the remote side of the connection.                                                                                         | <b>detail extensive none</b> |
| <b>Local</b>                  | IP address of the logical interface.                                                                                                     | <b>detail extensive none</b> |
| <b>Broadcast</b>              | Broadcast address of the logical interface.                                                                                              | <b>detail extensive none</b> |
| <b>Generation</b>             | Unique number for use by Juniper Networks technical support only.                                                                        | <b>detail extensive</b>      |

Table 16: Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type

| Interface Type              | Sample Command                               | Byte and Octet Counts Include                                                                                                                                                                                 | Comments                                                                                                                                      |
|-----------------------------|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| Inbound physical interface  | <b>show interfaces ge-0/3/0 extensive</b>    | Traffic statistics:<br><br>Input bytes: 496 bytes per packet, representing the Layer 2 packet<br><br>MAC statistics:<br><br>Received octets: 500 bytes per packet, representing the Layer 2 packet + 4 bytes  | The additional 4 bytes are for the CRC.                                                                                                       |
| Inbound logical interface   | <b>show interfaces ge-0/3/0.50 extensive</b> | Traffic statistics:<br><br>Input bytes: 478 bytes per packet, representing the Layer 3 packet                                                                                                                 |                                                                                                                                               |
| Outbound physical interface | <b>show interfaces ge-0/0/0 extensive</b>    | Traffic statistics:<br><br>Input bytes: 490 bytes per packet, representing the Layer 3 packet + 12 bytes<br><br>MAC statistics:<br><br>Received octets: 478 bytes per packet, representing the Layer 3 packet | For input bytes, the additional 12 bytes includes 6 bytes for the destination MAC address + 4 bytes for VLAN + 2 bytes for the Ethernet type. |
| Outbound logical interface  | <b>show interfaces ge-0/0/0.50 extensive</b> | Traffic statistics:<br><br>Input bytes: 478 bytes per packet, representing the Layer 3 packet                                                                                                                 |                                                                                                                                               |

## Sample Output

```

show interfaces user@host> show interfaces ge-3/0/2
(Gigabit Ethernet) Physical interface: ge-3/0/2, Enabled, Physical link is Up
 Interface index: 167, SNMP ifIndex: 35
 Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
 Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled
 Remote fault: Online
 Device flags : Present Running
 Interface flags: SNMP-Traps Internal: 0x4000
 CoS queues : 4 supported, 4 maximum usable queues
 Current address: 00:05:85:4a:e9:7c, Hardware address: 00:05:85:4a:e9:7c
 Last flapped : 2006-08-10 17:25:10 PDT (00:01:08 ago)
 Input rate : 0 bps (0 pps)
 Output rate : 0 bps (0 pps)
 Ingress rate at Packet Forwarding Engine : 0 bps (0 pps)
 Ingress drop rate at Packet Forwarding Engine : 0 bps (0 pps)
 Active alarms : None
 Active defects : None

 Logical interface ge-3/0/2.0 (Index 72) (SNMP ifIndex 69)
 Flags: SNMP-Traps 0x4000
 VLAN-Tag [0x8100.512 0x8100.513] In(pop-swap 0x8100.530) Out(swap-push
 0x8100.512 0x8100.513)
 Encapsulation: VLAN-CCC
 Input packets : 0
 Output packets: 0
 Protocol ccc, MTU: 1522
 Flags: Is-Primary

show interfaces user@host> show interfaces ge-2/2/2
(Gigabit Ethernet on Physical interface: ge-2/2/2, Enabled, Physical link is Up
MX Series Router) Interface index: 156, SNMP ifIndex: 188
 Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, MAC-REWRITE Error: None,
 Loopback: Disabled,
 Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
 Remote fault: Online
 Device flags : Present Running
 Interface flags: SNMP-Traps Internal: 0x4000
 Link flags : None
 CoS queues : 8 supported, 4 maximum usable queues
 Schedulers : 0
 Current address: 00:1f:12:b7:d7:c0, Hardware address: 00:1f:12:b7:d6:76
 Last flapped : 2008-09-05 16:44:30 PDT (3d 01:04 ago)
 Input rate : 0 bps (0 pps)
 Output rate : 0 bps (0 pps)
 Active alarms : None
 Active defects : None

 Logical interface ge-2/2/2.0 (Index 82) (SNMP ifIndex 219)
 Flags: SNMP-Traps 0x20000000 Encapsulation: Ethernet-Bridge
 Input packets : 0
 Output packets: 0
 Protocol aenet, AE bundle: ae0.0 Link Index: 4

show interfaces brief user@host> show interfaces ge-3/0/2 brief
(Gigabit Ethernet) Physical interface: ge-3/0/2, Enabled, Physical link is Up
 Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
 Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,

```

```

Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None

Logical interface ge-3/0/2.0
 Flags: SNMP-Traps 0x4000
 VLAN-Tag [0x8100.512 0x8100.513] In(pop-swap 0x8100.530) Out(swap-push
0x8100.512 0x8100.513)
 Encapsulation: VLAN-CCC
 ccc

Logical interface ge-3/0/2.32767
 Flags: SNMP-Traps 0x4000 VLAN-Tag [0x0000.0] Encapsulation: ENET2

```

**show interfaces detail  
(Gigabit Ethernet)**

```

user@host> show interfaces ge-3/0/2 detail
Physical interface: ge-3/0/2, Enabled, Physical link is Up
 Interface index: 167, SNMP ifIndex: 35, Generation: 177
 Link-level type: 52, MTU: 1522, Speed: 1000Mbps, Loopback: Disabled,
 Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
 Remote fault: Online
 Device flags : Present Running
 Interface flags: SNMP-Traps Internal: 0x4000
 Link flags : None
 CoS queues : 4 supported, 4 maximum usable queues
 Hold-times : Up 0 ms, Down 0 ms
 Current address: 00:05:85:4a:e9:7c, Hardware address: 00:05:85:4a:e9:7c
 Last flapped : 2006-08-09 17:17:00 PDT (01:31:33 ago)
 Statistics last cleared: Never
 Traffic statistics:
 Input bytes : 0 0 bps
 Output bytes : 0 0 bps
 Input packets : 0 0 pps
 Output packets: 0 0 pps
 Ingress traffic statistics at Packet Forwarding Engine:
 Input bytes : 0 0 bps
 Input packets : 0 0 pps
 Drop bytes : 0 0 bps
 Drop packets : 0 0 pps
 Ingress queues: 4 supported, 4 in use
 Queue counters:

```

|                | Queued packets | Transmitted packets | Dropped packets |
|----------------|----------------|---------------------|-----------------|
| 0 best-effort  | 0              | 0                   | 0               |
| 1 expedited-fo | 0              | 0                   | 0               |
| 2 assured-forw | 0              | 0                   | 0               |
| 3 network-cont | 0              | 0                   | 0               |

```

 Egress queues: 4 supported, 4 in use
 Queue counters:

```

|                | Queued packets | Transmitted packets | Dropped packets |
|----------------|----------------|---------------------|-----------------|
| 0 best-effort  | 0              | 0                   | 0               |
| 1 expedited-fo | 0              | 0                   | 0               |
| 2 assured-forw | 0              | 0                   | 0               |
| 3 network-cont | 0              | 0                   | 0               |

Active alarms : None  
Active defects : None

Logical interface ge-3/0/2.0 (Index 72) (SNMP ifIndex 69) (Generation 140)  
Flags: SNMP-Traps 0x4000  
VLAN-Tag [0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530)  
Out(swap-push 0x8100.512 0x8100.513)  
Encapsulation: VLAN-CCC  
Traffic statistics:  
Input bytes : 0  
Output bytes : 0  
Input packets: 0  
Output packets: 0  
Local statistics:  
Input bytes : 0  
Output bytes : 0  
Input packets: 0  
Output packets: 0  
Transit statistics:  
Input bytes : 0 0 bps  
Output bytes : 0 0 bps  
Input packets: 0 0 pps  
Output packets: 0 0 pps  
Protocol ccc, MTU: 1522, Generation: 149, Route table: 0  
Flags: Is-Primary

Logical interface ge-3/0/2.32767 (Index 71) (SNMP ifIndex 70)  
(Generation 139)  
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2  
Traffic statistics:  
Input bytes : 0  
Output bytes : 0  
Input packets: 0  
Output packets: 0  
Local statistics:  
Input bytes : 0  
Output bytes : 0  
Input packets: 0  
Output packets: 0  
Transit statistics:  
Input bytes : 0 0 bps  
Output bytes : 0 0 bps  
Input packets: 0 0 pps  
Output packets: 0 0 pps

**show interfaces  
extensive  
(Gigabit Ethernet IQ2)**

```
user@host> show interfaces extensive ge-7/1/3
Physical interface: ge-7/1/3, Enabled, Physical link is Up
Interface index: 170, SNMP ifIndex: 70, Generation: 171
Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4004000
Link flags : None
CoS queues : 8 supported, 4 maximum usable queues
Schedulers : 256
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:14:f6:30:5e:74, Hardware address: 00:14:f6:30:5e:74
Last flapped : 2007-11-07 21:31:41 PST (02:03:33 ago)
Statistics last cleared: Never
Traffic statistics:
```

```

Input bytes : 38910844056 7952 bps
Output bytes : 7174605 8464 bps
Input packets: 418398473 11 pps
Output packets: 78903 12 pps
IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Ingress traffic statistics at Packet Forwarding Engine:
Input bytes : 38910799145 7952 bps
Input packets: 418397956 11 pps
Drop bytes : 0 0 bps
Drop packets: 0 0 pps
Input errors:
 Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
 L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
 FIFO errors: 0, Resource errors: 0
Output errors:
 Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

 FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped packets

 0 best-effort 418390823 418390823 0

 1 expedited-fo 0 0 0

 2 assured-forw 0 0 0

 3 network-cont 7133 7133 0

Egress queues: 4 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped packets

 0 best-effort 1031 1031 0

 1 expedited-fo 0 0 0

 2 assured-forw 0 0 0

 3 network-cont 77872 77872 0

Active alarms : None
Active defects : None
MAC statistics:
 Receive Transmit
 Total octets 38910844056 7174605
 Total packets 418398473 78903
 Unicast packets 408021893366 1026
 Broadcast packets 10 12
 Multicast packets 418398217 77865
 CRC/Align errors 0 0
 FIFO errors 0 0
 MAC control frames 0 0
 MAC pause frames 0 0
 Oversized frames 0
 Jabber frames 0
 Fragment frames 0
 VLAN tagged frames 0
 Code violations 0 OTN Received Overhead Bytes:

```

```

APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58
Payload Type: 0x08
OTN Transmitted Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x08
Filter statistics:
 Input packet count 418398473
 Input packet rejects 479
 Input DA rejects 479
 Input SA rejects 0
 Output packet count 78903
 Output packet pad count 0
 Output packet error count 0
 CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
 Negotiation status: Complete
 Link partner:
 Link mode: Full-duplex, Flow control: Symmetric/Asymmetric,
 Remote fault: OK
 Local resolution:
 Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
 Destination slot: 7
CoS information:
 Direction : Output
 CoS transmit queue Bandwidth Buffer Priority Limit
 % bps % usec
 0 best-effort 95 950000000 95 0
low none
 3 network-control 5 50000000 5 0
low none
 Direction : Input
 CoS transmit queue Bandwidth Buffer Priority Limit
 % bps % usec
 0 best-effort 95 950000000 95 0
low none
 3 network-control 5 50000000 5 0
low none

Logical interface ge-7/1/3.0 (Index 70) (SNMP ifIndex 85) (Generation 150)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
 Input bytes : 812400
 Output bytes : 1349206
 Input packets: 9429
 Output packets: 9449
IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Local statistics:
 Input bytes : 812400
 Output bytes : 1349206
 Input packets: 9429
 Output packets: 9449
Transit statistics:
 Input bytes : 0 7440 bps
 Output bytes : 0 7888 bps
 Input packets: 0 10 pps
 Output packets: 0 11 pps

```

```

IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Protocol inet, MTU: 1500, Generation: 169, Route table: 0
 Flags: Is-Primary, Mac-Validate-Strict
 Mac-Validate Failures: Packets: 0, Bytes: 0
 Addresses, Flags: Is-Preferred Is-Primary
 Input Filters: F1-ge-3/0/1.0-in, F3-ge-3/0/1.0-in
 Output Filters: F2-ge-3/0/1.0-out (53)
 Destination: 10.74.2/24, Local: 10.74.2.2, Broadcast: 10.74.2.255,
 Generation: 196
Protocol multiservice, MTU: Unlimited, Generation: 170, Route table: 0
 Flags: Is-Primary
 Policar: Input: __default_arp_policar__

```

**NOTE:** For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics displayed in the **show interfaces** command output might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the interface counters. For detailed information, see the description of the logical interface **Transit statistics** fields in Table 15 on page 224.

**show interfaces**  
**(Gigabit Ethernet**  
**Unnumbered**  
**Interface)**

```

user@host> show interfaces ge-3/2/0
Physical interface: ge-3/2/0, Enabled, Physical link is Up
 Interface index: 148, SNMP ifIndex: 50
 Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,
 Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
 Remote fault: Online
 Device flags : Present Running
 Interface flags: SNMP-Traps Internal: 0x4000
 Link flags : None
 CoS queues : 8 supported, 4 maximum usable queues
 Current address: 00:14:f6:11:26:f8, Hardware address: 00:14:f6:11:26:f8
 Last flapped : 2006-10-27 04:42:23 PDT (08:01:52 ago)
 Input rate : 0 bps (0 pps)
 Output rate : 624 bps (1 pps)
 Active alarms : None
 Active defects : None

Logical interface ge-3/2/0.0 (Index 67) (SNMP ifIndex 85)
 Flags: SNMP-Traps Encapsulation: ENET2
 Input packets : 0
 Output packets: 6
 Protocol inet, MTU: 1500
 Flags: Unnumbered
 Donor interface: lo0.0 (Index 64)
 Preferred source address: 22.22.22.22

```

## show l2-learning backbone-instance

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show l2-learning backbone-instance &lt;bridge-domain-name&gt; &lt;isid [isid-number] all-isid&gt; &lt;instance [instance-name]&gt; &lt;logical-system [system-name   all]&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b>      | (MX-series routers only) Command introduced in JUNOS Release 10.0.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | Displays the remote backbone edge bridges in a PBBN network.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <p><i>bridge-domain-name</i>—(Optional) Display information for a specified bridge domain.</p> <p><i>isid isid-number</i>—(Optional) Display MAC addresses learned on a specified service identifier (I-SID). The I-SID value can be from <b>256</b> through <b>16777215</b>.</p> <p><i>all-isid</i>—Display MAC addresses learned on all I-SIDs.</p> <p><i>instance instance-name</i>—(Optional) Display information for a specified instance.</p> <p><i>logical-system [system-name   all]</i>—(Optional) Display information for a specified logical system or all systems.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show l2-learning remote-backbone-edge-bridge on page 250</a></li> <li>• <a href="#">show l2-learning provider-instance on page 247</a></li> <li>• <a href="#">Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</a></li> </ul>                                                                                                                                                                                                                                                 |
| <b>List of Sample Output</b>    | <p><a href="#">show l2-learning backbone-instance on page 245</a></p> <p><a href="#">show l2-learning backbone-instance instance on page 245</a></p> <p><a href="#">show l2-learning backbone-instance isid on page 246</a></p> <p><a href="#">show l2-learning backbone-instance logical-system on page 246</a></p>                                                                                                                                                                                                                                                               |
| <b>Output Fields</b>            | Table 17 on page 244 describes the output fields for the <b>show l2-learning instance</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                         |

Table 17: show l2-learning instance Output Fields

| Field Name           | Field Description                                               |
|----------------------|-----------------------------------------------------------------|
| PBN Routing Instance | Name of PBN routing instance.                                   |
| bridging domain      | Name of bridging domain.                                        |
| Index                | Number associated with the routing instance or bridging domain. |

Table 17: show l2-learning instance Output Fields (*continued*)

| Field Name             | Field Description                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Logical System         | Name of the logical system or <b>Default</b> if no logical system is configured.                                                                                                                                                                                                                                                                                                                    |
| Routing instance flags | Status of Layer 2 learning properties for each routing instance: <ul style="list-style-type: none"> <li>• <b>P2P</b>—Point-to-point service (E-LINE).</li> <li>• <b>MP</b>—Multi-point service (E-LAN).</li> <li>• <b>M1</b>—Many service VLANs (S-VLANs) to one I-SID.</li> <li>• <b>O1</b>—One S-VLAN to one I-SID. This field is not yet supported and reserved for a future release.</li> </ul> |
| MAC limit              | Maximum number of MAC addresses that can be learned from each interface in the routing instance or bridging domain.                                                                                                                                                                                                                                                                                 |

### Sample Output

```

show l2-learning backbone-instance user@host> show l2-learning backbone-instance
backbone-instance Backbone Routing Instance : vin2, PBBN-ID: 0
Backbone Bridging domain : bd2, VLAN-ID : 200

Flags (P2P -ELINE service, MP -ELAN service)
 M1 -Many svlans to 1 isid, O1 -One svlan to 1 isid)

ISID PBN Provider S-VLAN Flags Backbone
Routing Bridging Bridging Destination
Instance Domain
300 vin1 bd1 100 M1,MP 01:1e:86:00:01:2c

Backbone Routing Instance : vin2, PBBN-ID: 0
Backbone Bridging domain : bd201, VLAN-ID : 201

Flags (P2P -ELINE service, MP -ELAN service)
 M1 -Many svlans to 1 isid, O1 -One svlan to 1 isid)

ISID PBN Provider S-VLAN Flags Backbone
Routing Bridging Bridging Destination
Instance Domain
301 vin1 bd101 101 M1,MP 01:1e:86:00:01:2d

show l2-learning backbone-instance user@host> show l2-learning backbone-instance vin2
instance Backbone Routing Instance : vin2, PBBN-ID: 0
Backbone Bridging domain : bd2, VLAN-ID : 200

Flags (P2P -ELINE service, MP -ELAN service)
 M1 -Many svlans to 1 isid, O1 -One svlan to 1 isid)

ISID PBN Provider S-VLAN Flags Backbone
Routing Bridging Bridging Destination
Instance Domain
300 vin1 bd1 100 M1,MP 01:1e:86:00:01:2c

Backbone Routing Instance : vin2, PBBN-ID: 0
Backbone Bridging domain : bd201, VLAN-ID : 201

```

```

Flags (P2P -ELINE service, MP -ELAN service)
 M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)

ISID PBN Provider S-VLAN Flags Backbone
Routing Instance Bridging Domain MAC
301 vin1 bd101 101 M1,MP 01:1e:86:00:01:2d

```

**show l2-learning  
backbone-instance isid**

```

user@host> show l2-learning backbone-instance isid 301
Backbone Routing Instance : vin2, PBBN-ID: 0
Backbone Bridging domain : bd201, VLAN-ID : 201

```

```

Flags (P2P -ELINE service, MP -ELAN service)
 M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)

ISID PBN Provider S-VLAN Flags Backbone
Routing Instance Bridging Domain MAC
301 vin1 bd101 101 M1,MP 01:1e:86:00:01:2d

```

**show l2-learning  
backbone-instance  
logical-system**

```

user@host> show l2-learning backbone-instance logical-system all
Backbone Routing Instance : vin2, PBBN-ID: 0
Backbone Bridging domain : bd2, VLAN-ID : 200

```

```

Flags (P2P -ELINE service, MP -ELAN service)
 M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)

ISID PBN Provider S-VLAN Flags Backbone
Routing Instance Bridging Domain MAC
300 vin1 bd1 100 M1,MP 01:1e:86:00:01:2c

```

```

Backbone Routing Instance : vin2, PBBN-ID: 0
Backbone Bridging domain : bd201, VLAN-ID : 201

```

```

Flags (P2P -ELINE service, MP -ELAN service)
 M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)

ISID PBN Provider S-VLAN Flags Backbone
Routing Instance Bridging Domain MAC
301 vin1 bd101 101 M1,MP 01:1e:86:00:01:2d

```

## show l2-learning provider-instance

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show l2-learning provider-instance &lt;isid [<i>isid-number</i>] all-isid&gt; &lt;instance [<i>instance-name</i>]&gt; &lt;logical-system [<i>system-name</i>   all]&gt;</pre>                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>      | (MX-series routers only) Command introduced in JUNOS Release 10.0.                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Displays the provider instance (I-component).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                  | <p>none—Display information for all authenticator ports.</p> <p>isid <i>isid-number</i>—(Optional) Display MAC addresses learned on a specified service identifier (I-SID). The I-SID value can be from <b>256</b> through <b>16777215</b>.</p> <p>all-isid—Display MAC addresses learned on all I-SIDs.</p> <p>instance <i>instance-name</i>—(Optional) Display information for a specified instance.</p> <p>logical-system [<i>system-name</i>   all]—(Optional) Display information for a specified logical system or all systems.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show l2-learning backbone-instance on page 244</a></li> <li>• <a href="#">show l2-learning remote-backbone-edge-bridge on page 250</a></li> <li>• <a href="#">Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</a></li> </ul>                                                                                                                                                                                                        |
| <b>List of Sample Output</b>    | <p><a href="#">show l2-learning provider-instance on page 248</a></p> <p><a href="#">show l2-learning provider-instance instance on page 248</a></p> <p><a href="#">show l2-learning provider-instance isid on page 248</a></p> <p><a href="#">show l2-learning provider-instance instance logical-system on page 249</a></p>                                                                                                                                                                                                             |
| <b>Output Fields</b>            | Table 18 on page 247 describes the output fields for the <b>show l2-learning instance</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                |

**Table 18: show l2-learning instance Output Fields**

| Field Name           | Field Description                                                                |
|----------------------|----------------------------------------------------------------------------------|
| PBN Routing Instance | Name of the PBN routing instance.                                                |
| bridging domain      | Name of the bridging domain.                                                     |
| Index                | Number associated with the routing instance or bridging domain.                  |
| Logical System       | Name of the logical system or <b>Default</b> if no logical system is configured. |

Table 18: show l2-learning instance Output Fields (*continued*)

| Field Name                    | Field Description                                                                                                                                                                                                                                                                                                                           |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Routing instance flags</b> | <p>Status of the Layer 2 learning properties for each routing instance:</p> <ul style="list-style-type: none"> <li>• <b>P2P</b>—Point-to-point service (E-LINE).</li> <li>• <b>MP</b>—Multi-point service (E-LAN).</li> <li>• <b>M1</b>—Many service VLANs (S-VLANs) to one I-SID.</li> <li>• <b>O1</b>—One S-VLAN to one I-SID.</li> </ul> |
| <b>MAC limit</b>              | Maximum number of MAC addresses that can be learned from each interface in the routing instance or bridging domain.                                                                                                                                                                                                                         |

### Sample Output

```

show l2-learning provider-instance user@host> show l2-learning provider-instance
PBN Routing Instance: pbn-3-for-elan
Flags (P2P -ELINE service, MP -ELAN service,
 M1 -Many svlans to 1 isid, O1 -One svlan to 1 isid)

PBN S-VLAN ISID PBBN B-VLAN Flags
Bridging
Domain
elan-svlans-vlan-1300 1300 10300 elan-bvlan 3350 M1,MP
elan-svlans-vlan-1400 1400 10400 elan-bvlan 3350 M1,MP

PBN Routing Instance: pbn-3-for-eline
Flags (P2P -ELINE service, MP -ELAN service,
 M1 -Many svlans to 1 isid, O1 -One svlan to 1 isid)

PBN S-VLAN ISID PBBN B-VLAN Flags
Bridging
Domain
eline-svlans-vlan-1200 1200 10200 eline-bvlan 3150 M1,P2P
eline-svlans-vlan-2100 2100 10100 eline-bvlan 3150 M1,P2P

show l2-learning provider-instance instance user@host> show l2-learning provider-instance instance vin1
PBN Routing Instance: vin1
Flags (P2P -ELINE service, MP -ELAN service,
 M1 -Many svlans to 1 isid, O1 -One svlan to 1 isid)

PBN S-VLAN ISID PBBN B-VLAN Flags
Bridging
Domain
bd1 100 300 bd2 200 M1,MP
bd101 101 301 bd201 201 M1,MP

show l2-learning provider-instance isid user@host> show l2-learning provider-instance isid 300
PBN Routing Instance: vin1
Flags (P2P -ELINE service, MP -ELAN service,
 M1 -Many svlans to 1 isid, O1 -One svlan to 1 isid)

PBN S-VLAN ISID PBBN B-VLAN Flags
Bridging
Domain
bd1 100 300 bd2 200 M1,MP

```

**show l2-learning  
provider-instance  
instance  
logical-system**

```
user@host> show l2-learning provider-instance logical-system all
PBN Routing Instance: vin1
Flags (P2P -ELINE service, MP -ELAN service,
 M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)
```

| PBN<br>Bridging<br>Domain | S-VLAN | ISID | PBBN<br>Bridging<br>Domain | B-VLAN | Flags |
|---------------------------|--------|------|----------------------------|--------|-------|
| bd1                       | 100    | 300  | bd2                        | 200    | M1,MP |
| bd101                     | 101    | 301  | bd201                      | 201    | M1,MP |

```
user@host> show l2-learning provider-instance logical-system bd1
PBN Routing Instance: vin1
Flags (P2P -ELINE service, MP -ELAN service,
 M1 -Many svlans to 1 isid, 01 -One svlan to 1 isid)
```

| PBN<br>Bridging<br>Domain | S-VLAN | ISID | PBBN<br>Bridging<br>Domain | B-VLAN | Flags |
|---------------------------|--------|------|----------------------------|--------|-------|
| bd1                       | 100    | 300  | bd2                        | 200    | M1,MP |

## show l2-learning remote-backbone-edge-bridge

|                                 |                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show l2-learning remote-backbone-edge-bridge &lt;remote-beb-mac-address&gt; &lt;instance [instance-name]&gt; &lt;logical-system [system-name   all]&gt;</pre>                                                                                                                                                                              |
| <b>Release Information</b>      | (MX-series routers only) Command introduced in JUNOS Release 10.0.                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Displays the remote backbone edge bridges in a PBBN network.                                                                                                                                                                                                                                                                                    |
| <b>Options</b>                  | <p><i>remote-beb-mac-address</i>—(Optional) Display information for a remote backbone edge bridge MAC address.</p> <p><i>instance instance-name</i>—(Optional) Display information for a specified instance.</p> <p><i>logical-system [system-name   all]</i>—(Optional) Display information for a specified logical system or all systems.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show l2-learning provider-instance on page 247</a></li> <li>• <a href="#">Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</a></li> </ul>                                                                                                  |
| <b>List of Sample Output</b>    | <p><a href="#">show l2-learning backbone-instance on page 251</a></p> <p><a href="#">show l2-learning remote backbone edge bridge instance on page 251</a></p> <p><a href="#">show l2-learning remote backbone edge bridge logical-system on page 251</a></p>                                                                                   |
| <b>Output Fields</b>            | Table 19 on page 250 describes the output fields for the <b>show l2-learning instance</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                      |

**Table 19: show l2-learning instance Output Fields**

| Field Name                  | Field Description                                                                |
|-----------------------------|----------------------------------------------------------------------------------|
| <b>PBN Routing Instance</b> | Name of the PBN routing instance.                                                |
| <b>bridging domain</b>      | Name of the bridging domain.                                                     |
| <b>Index</b>                | Number associated with the routing instance or bridging domain.                  |
| <b>Logical System</b>       | Name of the logical system or <b>Default</b> if no logical system is configured. |

Table 19: show l2-learning instance Output Fields (*continued*)

| Field Name             | Field Description                                                                                                                                                                                                                                                                                                                |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Routing instance flags | Status of Layer 2 learning properties for each routing instance: <ul style="list-style-type: none"> <li>• <b>P2P</b>—Point-to-point service (E-LINE).</li> <li>• <b>MP</b>—Multi-point service (E-LAN).</li> <li>• <b>M1</b>—Many service VLANs (S-VLANs) to one I-SID.</li> <li>• <b>O1</b>—One S-VLAN to one I-SID.</li> </ul> |
| MAC limit              | Maximum number of MAC addresses that can be learned from each interface in the routing instance or bridging domain.                                                                                                                                                                                                              |

## Sample Output

```

show l2-learning backbone-instance user@host> show l2-learning backbone-instance
Backbone Routing Instance : vin2, PBBN-ID: 0
Backbone Bridging domain : bd2, VLAN-ID : 200

Flags (P2P -ELINE service, MP -ELAN service)
 M1 -Many svlans to 1 isid, O1 -One svlan to 1 isid)

ISID PBN Provider S-VLAN Flags Backbone
 Routing Bridging S-VLAN Flags Destination
 Instance Domain
300 vin1 bd1 100 M1,MP 01:1e:86:00:01:2c

Backbone Routing Instance : vin2, PBBN-ID: 0
Backbone Bridging domain : bd201, VLAN-ID : 201

Flags (P2P -ELINE service, MP -ELAN service)
 M1 -Many svlans to 1 isid, O1 -One svlan to 1 isid)

ISID PBN Provider S-VLAN Flags Backbone
 Routing Bridging S-VLAN Flags Destination
 Instance Domain
301 vin1 bd101 101 M1,MP 01:1e:86:00:01:2d

show l2-learning remote backbone edge bridge instance user@host> show l2-learning remote-backbone-edge-bridge instance vin2
Remote backbone edge bridge information per provider backbone bridge network
(PBBN)

RBEB flags (S -Static)

PBBN Routing instance : vin2

RBEB MAC Time before Flags
Address expiry (SS:MS)
00:aa:00:00:00:00 :

show l2-learning remote backbone edge bridge logical-system user@host> show l2-learning remote-backbone-edge-bridge logical-system all
Remote backbone edge bridge information per provider backbone bridge network
(PBBN)

RBEB flags (S -Static)

```

PBBN Routing instance : vin2

| RBEB MAC<br>Address | Time before<br>expiry (SS:MS) | Flags |
|---------------------|-------------------------------|-------|
| 00:aa:00:00:00:00   | :                             |       |

## CHAPTER 10

# CoS Monitoring Commands

## show class-of-service scheduler-map

|                                 |                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service scheduler-map<br><name>                                                                                                                                        |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                   |
| <b>Description</b>              | Display the mapping of schedulers to forwarding classes and a summary of scheduler parameters for each entry.                                                                        |
| <b>Options</b>                  | none—Display all scheduler maps.<br><br>name—(Optional) Display a summary of scheduler parameters for each forwarding class to which the named scheduler is assigned.                |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                 |
| <b>List of Sample Output</b>    | show class-of-service scheduler-map on page 255                                                                                                                                      |
| <b>Output Fields</b>            | Table 20 on page 254 describes the output fields for the <b>show class-of-service scheduler-map</b> command. Output fields are listed in the approximate order in which they appear. |

Table 20: show class-of-service scheduler-map Output Fields

| Field Name           | Field Description                                                                                                                                                                                                                                                                                          |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Scheduler map        | Name of the scheduler map.                                                                                                                                                                                                                                                                                 |
| Index                | Index of the indicated object. Objects having indexes in this output include scheduler maps, schedulers, and drop profiles.                                                                                                                                                                                |
| Scheduler            | Name of the scheduler.                                                                                                                                                                                                                                                                                     |
| Forwarding class     | Classification of a packet affecting the forwarding, scheduling, and marking policies applied as the packet transits the router.                                                                                                                                                                           |
| Transmit rate        | Configured transmit rate of the scheduler (in bps). The rate is a percentage of the total interface bandwidth, or the keyword <b>remainder</b> , which indicates that the scheduler receives the remaining bandwidth of the interface.                                                                     |
| Rate Limit           | Rate limiting configuration of the queue. Possible values are <b>none</b> , meaning no rate limiting, and <b>exact</b> , meaning the queue only transmits at the configured rate.                                                                                                                          |
| Maximum buffer delay | Amount of transmit delay (in milliseconds) or the buffer size of the queue. The buffer size is shown as a percentage of the total interface buffer allocation, or by the keyword <b>remainder</b> to indicate that the buffer is sized according to what remains after other scheduler buffer allocations. |
| Priority             | Scheduling priority: <b>low</b> or <b>high</b> .                                                                                                                                                                                                                                                           |

Table 20: show class-of-service scheduler-map Output Fields (*continued*)

| Field Name           | Field Description                                                                                             |
|----------------------|---------------------------------------------------------------------------------------------------------------|
| <b>Drop profiles</b> | Table displaying the assignment of drop profile by name and index to a given loss priority and protocol pair. |
| <b>Loss priority</b> | Packet loss priority for drop profile assignment.                                                             |
| <b>Protocol</b>      | Transport protocol for drop profile assignment.                                                               |
| <b>Name</b>          | Name of the drop profile.                                                                                     |

### Sample Output

```

show class-of-service scheduler-map user@host> show class-of-service scheduler-map
Scheduler map: dd-scheduler-map, Index: 84

Scheduler: aa-scheduler, Index: 8721, Forwarding class: aa-forwarding-class
Transmit rate: 30 percent, Rate Limit: none, Maximum buffer delay: 39 ms,
Priority: high
Drop profiles:
 Loss priority Protocol Index Name
 Low non-TCP 8724 aa-drop-profile
 Low TCP 9874 bb-drop-profile
 High non-TCP 8833 cc-drop-profile
 High TCP 8484 dd-drop-profile

Scheduler: bb-scheduler, Forwarding class: aa-forwarding-class
Transmit rate: 40 percent, Rate limit: none, Maximum buffer delay: 68 ms,
Priority: high
Drop profiles:
 Loss priority Protocol Index Name
 Low non-TCP 8724 aa-drop-profile
 Low TCP 9874 bb-drop-profile
 High non-TCP 8833 cc-drop-profile
 High TCP 8484 dd-drop-profile

```

## show class-of-service traffic-control-profile

|                                 |                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service traffic-control-profile<br><profile-name>                                                                                                                                |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                             |
| <b>Description</b>              | For Gigabit Ethernet IQ, Channelized IQ PICs, EQ DPCs, and Trio MPC/MIC interfaces only, display traffic shaping and scheduling profiles.                                                      |
| <b>Options</b>                  | none—Display all profiles.<br><br>profile-name—(Optional) Display information about a single profile.                                                                                          |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                           |
| <b>List of Sample Output</b>    | show class-of-service traffic-control-profile on page 257                                                                                                                                      |
| <b>Output Fields</b>            | Table 21 on page 256 describes the output fields for the <b>show class-of-service traffic-control-profile</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 21: show class-of-service traffic-control-profile Output Fields**

| Field Name                   | Field Description                                                |
|------------------------------|------------------------------------------------------------------|
| Traffic control profile      | Name of the traffic-control profile.                             |
| Index                        | Index number of the traffic-control profile.                     |
| Shaping rate                 | Configured shaping rate, in bps.                                 |
| Shaping rate priority high   | Configured shaping rate for high-priority traffic, in bps        |
| Shaping rate priority medium | Configured shaping rate for medium-priority traffic, in bps      |
| Shaping rate priority low    | Configured shaping rate for low-priority traffic, in bps         |
| Shaping rate excess high     | Configured shaping rate for high-priority excess traffic, in bps |
| Shaping rate excess low      | Configured shaping rate for low-priority excess traffic, in bps  |
| Scheduler map                | Name of the associated scheduler map.                            |
| Delay Buffer rate            | Configured delay-buffer rate, in bps.                            |
| Excess rate                  | Configured excess rate, in percent or proportion.                |

Table 21: show class-of-service traffic-control-profile Output Fields (*continued*)

| Field Name                      | Field Description                                                       |
|---------------------------------|-------------------------------------------------------------------------|
| <b>Guaranteed rate</b>          | Configured guaranteed rate, in bps.                                     |
| <b>Overhead accounting mode</b> | Configured shaping mode, either <b>frame-mode</b> or <b>cell-mode</b> . |
| <b>Overhead bytes</b>           | Configured byte adjustment value.                                       |

### Sample Output

```

show class-of-service traffic-control-profile user@host> show class-of-service traffic-control-profile
Traffic control profile: Profile1, Index: 57625
 Scheduler map: m1
 Delay Buffer rate: 500000
 Guaranteed rate: 1000000

Traffic control profile: Profile2, Index: 57624
 Scheduler map: m2
 Delay Buffer rate: 600000
 Guaranteed rate: 2000000

Traffic control profile: Profile3, Index: 57627
 Scheduler map: m3
 Delay Buffer rate: 800000
 Guaranteed rate: 3000000

Traffic control profile: Profile4, Index: 57626
 Scheduler map: m4
 Delay Buffer rate: 750000
 Guaranteed rate: 4000000

```

## show firewall

---

|                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                    | show firewall<br><filter <i>filter-name</i> ><br><counter <i>counter-name</i> ><br><log><br><logical-system (all   <i>logical-system-name</i> )><br><terse>                                                                                                                                                                                                                                                                                                                                        |
| <b>Syntax (EX Series Switch)</b> | show firewall<br><filter <i>filter-name</i> ><br><counter <i>counter-name</i> >                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>       | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.0 for EX Series switches.<br><b>logical-system</b> option introduced in Junos OS Release 9.3.<br><b>terse</b> option introduced in Junos OS Release 9.4.                                                                                                                                                                                                                                               |
| <b>Description</b>               | Display statistics about configured firewall filters.                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                   | none—(Optional) Display statistics about configured firewall filters.<br><br>filter <i>filter-name</i> —(Optional) Name of a configured filter.<br><br>counter <i>counter-name</i> —(Optional) Name of a filter counter.<br><br>logical-system (all   <i>logical-system-name</i> )—(Optional) Perform this operation on all logical systems or on a particular system.<br><br>log—(Optional) Display log entries for firewall filters.<br><br>terse—(Optional) Display firewall filter names only. |
| <b>Required Privilege Level</b>  | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>     | <ul style="list-style-type: none"><li>• clear firewall</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>List of Sample Output</b>     | show firewall filter on page 260<br>show firewall filter (Dynamic Input Filter) on page 260<br>show firewall (Logical Systems) on page 260                                                                                                                                                                                                                                                                                                                                                         |
| <b>Output Fields</b>             | Table 22 on page 259 lists the output fields for the <b>show firewall</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                         |

Table 22: show firewall Output Fields

| Field Name      | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Filter</b>   | <p>Name of a filter that has been configured with the <b>filter</b> statement at the <b>[edit firewall]</b> hierarchy level.</p> <p>When an interface-specific filter is displayed, the name of the filter is followed by the full interface name and by either <b>-i</b> for an input filter or <b>-o</b> for an output filter.</p> <p>When dynamic filters are displayed, the name of the filter is followed by the full interface name and by either <b>-in</b> for an input filter or <b>-out</b> for an output filter. When a logical system-specific filter is displayed, the name of the filter is prefixed with two underscore (__) characters and the name of the logical system (for example, __ls1/filter1).</p> |
| <b>Counters</b> | <p>Display filter counter information:</p> <ul style="list-style-type: none"> <li>• <b>Name</b>—Name of a filter counter that has been configured with the <b>counter</b> firewall filter action.</li> <li>• <b>Bytes</b>—Number of bytes that match the filter term under which the <b>counter</b> action is specified.</li> <li>• <b>Packets</b>—Number of packets that matched the filter term under which the <b>counter</b> action is specified.</li> </ul>                                                                                                                                                                                                                                                            |
| <b>Policers</b> | <p>Display policer information:</p> <ul style="list-style-type: none"> <li>• <b>Name</b>—Name of policer.</li> <li>• <b>Bytes</b>—(I-chip DPCs only) Number of bytes that match the filter term under which the policer action is specified. This is only the number out-of-specification (out-of-spec) byte counts, not all the bytes in all packets policed by the policer.</li> <li>• <b>Packets</b>—Number of packets that matched the filter term under which the policer action is specified. This is only the number of out-of-specification (out-of-spec) packet counts, not all packets policed by the policer.</li> </ul>                                                                                         |

## Sample Output

```

show firewall filter user@host> show firewall filter test
Filter: test
Counters:
Name Bytes Packets
Counter-1 0 0
Counter-2 0 0
Policers:
Name Bytes Packets
Policer-1 2770 70

show firewall filter user@host> show firewall filter dfwd-ge-5/0/0.1-in
(Dynamic Input Filter) Filter: dfwd-ge-5/0/0.1-in
Counters:
Name Bytes Packets
c1-ge-5/0/0.1-in 0 0

show firewall (Logical user@host>show firewall
Systems) Filter: __lr1/test
Counters:
Name Bytes Packets
icmp 420 5
Filter: __default_bpdu_filter__
Filter: __lr1/inet_filter1
Counters:
Name Bytes Packets
inet_tcp_count 0 0
inet_udp_count 0 0
Filter: __lr1/inet_filter2
Counters:
Name Bytes Packets
inet_icmp_count 0 0
inet_pim_count 0 0
Filter: __lr2/inet_filter1
Counters:
Name Bytes Packets
inet_tcp_count 0 0
inet_udp_count 0 0

```

## show interfaces interface-set queue

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show interfaces interface-set queue <i>interface-set-name</i><br><aggregate   remaining-traffic><br><forwarding-class <i>class-name</i> >                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Command introduced in Junos OS Release 8.5.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | Display information about the gigabit or 10-Gigabit Ethernet interface set queue. Supported in MX Series routers with enhanced queuing DPCs.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Options</b>                  | <p><b><i>interface-set-name</i></b>—(Optional) Display information about the specified gigabit or 10-Gigabit Ethernet interface set. Wildcard values can be used in the interface set name.</p> <p><b>aggregate</b>—(Optional) Display the aggregated queuing statistics of all member logical interfaces for interface sets that have traffic-control profiles configured.</p> <p><b>both-ingress-egress</b>—(Optional) On Gigabit Ethernet Intelligent Queuing 2 (IQ2) PICs, display both ingress and egress queue statistics.</p> <p><b>egress</b>—(Optional) Display egress queue statistics.</p> <p><b>forwarding-class <i>class-name</i></b>—(Optional) Display queuing statistics for the specified forwarding class.</p> <p><b>ingress</b>—(Optional) On Gigabit Ethernet IQ2 PICs, display ingress queue statistics.</p> <p><b>remaining-traffic</b>—(Optional) Display the queuing statistics of all member logical interfaces for interface sets that do not have traffic-control profiles configured.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers on page 17</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>List of Sample Output</b>    | <p>show interfaces interface-set queue (Gigabit Ethernet) on page 262</p> <p>show interfaces interface-set queue both-ingress-egress (Enhanced DPC) on page 263</p> <p>show interfaces interface-set queue egress (Enhanced DPC) on page 265</p> <p>show interfaces interface-set queue forwarding-class (Gigabit Ethernet) on page 266</p> <p>show interfaces interface-set queue (Enhanced DPC) on page 267</p> <p>show interfaces interface-set queue remaining-traffic (Gigabit Ethernet) on page 267</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Output Fields</b>            | Table 23 on page 262 describes the information for the <b>show interfaces interface-set queue</b> command.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

Table 23: Ethernet show interfaces interface-set queue Output Fields

| Field Name                          | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Level of Output |
|-------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Physical Interface</b>           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                 |
| <b>Interface set</b>                | Name of the interface set.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | All levels      |
| <b>Interface set index</b>          | Index number of the interface set.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | All levels      |
| <b>Forwarding classes supported</b> | Total number of forwarding classes supported on the specified interface set.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | All levels      |
| <b>Forwarding classes in use</b>    | Total number of forwarding classes used on the specified interface set.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | All levels      |
| <b>Egress queues supported</b>      | Total number of egress queues supported on the specified interface set.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | All levels      |
| <b>Egress queues in use</b>         | Total number of egress queues used on the specified interface set.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | All levels      |
| <b>Ingress queues supported</b>     | Total number of ingress queues supported on the specified interface set.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | All levels      |
| <b>Ingress queues in use</b>        | Total number of ingress queues used on the specified interface set.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | All levels      |
| <b>Queue</b>                        | Egress or ingress queue number for the statistics being displayed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | All levels      |
| <b>Forwarding classes</b>           | Forwarding class name for the statistics being displayed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | All levels      |
| <b>Queued</b>                       | <b>Packet</b> and <b>Byte</b> statistics for the specified queue. <ul style="list-style-type: none"> <li><b>Packets</b>—Number of packets queued and input rate in packets per second.</li> <li><b>Bytes</b>—Number of bytes queued and input rate in bytes per second.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                         | All levels      |
| <b>Transmitted</b>                  | <b>Packet</b> and <b>Byte</b> statistics for the specified forwarding class. <ul style="list-style-type: none"> <li><b>Packets</b>—Number of packets transmitted and transmit rate in packets per second.</li> <li><b>Bytes</b>—Number of bytes transmitted and transmit rate in bytes per second.</li> <li><b>Tail-dropped packets</b>—Number of packets tail dropped.</li> <li><b>RED-dropped packets</b>—Number of RED-dropped packets for the <b>low</b>, <b>medium-low</b>, <b>medium-high</b>, and <b>high</b> loss priorities.</li> <li><b>RED-dropped bytes</b>—Number of RED-dropped bytes for the <b>low</b>, <b>medium-low</b>, <b>medium-high</b>, and <b>high</b> loss priorities.</li> </ul> | All levels      |

## Sample Output

```

show interfaces user@host> show interfaces interface-set queue ge-2/2/0-0
interface-set queue Interface set: ge-2/2/0-0
(Gigabit Ethernet) Interface set index: 3
 Forwarding classes: 8 supported, 4 in use

```

```

Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
 Queued:
 Packets : 3998482 1 pps
 Bytes : 271896884 688 bps
 Transmitted:
 Packets : 1077474 1 pps
 Bytes : 73268340 688 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 2921008 0 pps
 Low : 2921008 0 pps
 Medium-low : 0 0 pps
 Medium-high : 0 0 pps
 High : 0 0 pps
 RED-dropped bytes : 198628544 0 bps
 Low : 198628544 0 bps
 Medium-low : 0 0 bps
 Medium-high : 0 0 bps
 High : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding
 Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Transmitted:
 ...

```

**show interfaces**  
**interface-set queue**  
**both-ingress-egress**  
**(Enhanced DPC)**

```

user@host> show interfaces interface-set queue ge-2/2/0-0 both-ingress-egress
Interface set: ge-2/2/0-0
Interface set index: 3
Forwarding classes: 16 supported, 4 in use
Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
 Queued:
 Packets : 185968478 473161 pps
 Bytes : 10042313520 204441336 bps
 Transmitted:
 Packets : 5441673 13780 pps
 Bytes : 293850342 5952960 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 180526772 459372 pps
 RED-dropped bytes : 9748446282 198451512 bps
Queue: 1, Forwarding classes: expedited-forwarding
 Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 0 0 pps
 RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding
 Queued:
 Packets : 522021472 473602 pps
 Bytes : 28190332480 204599944 bps
 Transmitted:
 Packets : 5791772 4055 pps
 Bytes : 312755688 1751976 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 516227139 469546 pps
 RED-dropped bytes : 27876265560 202843872 bps

```

```

Queue: 3, Forwarding classes: network-control
Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 0 0 pps
 RED-dropped bytes : 0 0 bps
Forwarding classes: 16 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
 Packets : 5417304 13797 pps
 Bytes : 368429508 7506096 bps
Transmitted:
 Packets : 5014996 12769 pps
 Bytes : 341019728 6946560 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 402189 1028 pps
 Low : 402189 1028 pps
 Medium-low : 0 0 pps
 Medium-high : 0 0 pps
 High : 0 0 pps
 RED-dropped bytes : 27348852 559536 bps
 Low : 27348852 559536 bps
 Medium-low : 0 0 bps
 Medium-high : 0 0 bps
 High : 0 0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 Medium-low : 0 0 pps
 Medium-high : 0 0 pps
 High : 0 0 pps
 RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 Medium-low : 0 0 bps
 Medium-high : 0 0 bps
 High : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
 Packets : 5770534 3963 pps
 Bytes : 396943252 2156144 bps
Transmitted:
 Packets : 3945152 1457 pps
 Bytes : 268270336 792608 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 1815141 2506 pps
 Low : 1815141 2506 pps
 Medium-low : 0 0 pps
 Medium-high : 0 0 pps
 High : 0 0 pps

```

```

RED-dropped bytes : 123429524 1363536 bps
Low : 123429524 1363536 bps
Medium-low : 0 0 bps
Medium-high : 0 0 bps
High : 0 0 bps
Queue: 3, Forwarding classes: network-control
Queued:
Packets : 0 0 pps
Bytes : 0 0 bps
Transmitted:
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : 0 0 pps
Low : 0 0 pps
Medium-low : 0 0 pps
Medium-high : 0 0 pps
High : 0 0 pps
RED-dropped bytes : 0 0 bps
Low : 0 0 bps
Medium-low : 0 0 bps
Medium-high : 0 0 bps
High : 0 0 bps

```

**show interfaces**  
**interface-set queue**  
**egress (Enhanced**  
**DPC)**

user@host> show interfaces interface-set queue ge-2/2/0-0 egress

Interface set: ge-2/2/0-0

Interface set index: 3

Forwarding classes: 16 supported, 4 in use

Egress queues: 4 supported, 4 in use

Queue: 0, Forwarding classes: best-effort

Queued:

```

Packets : 3958253 13822 pps
Bytes : 269217592 7519712 bps

```

Transmitted:

```

Packets : 3665035 12729 pps
Bytes : 249222380 6924848 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : 293091 1093 pps
Low : 293091 1093 pps
Medium-low : 0 0 pps
Medium-high : 0 0 pps
High : 0 0 pps
RED-dropped bytes : 19930188 594864 bps
Low : 19930188 594864 bps
Medium-low : 0 0 bps
Medium-high : 0 0 bps
High : 0 0 bps

```

Queue: 1, Forwarding classes: expedited-forwarding

Queued:

```

Packets : 0 0 pps
Bytes : 0 0 bps

```

Transmitted:

```

Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : 0 0 pps
Low : 0 0 pps
Medium-low : 0 0 pps
Medium-high : 0 0 pps
High : 0 0 pps
RED-dropped bytes : 0 0 bps

```

```

 Low : 0 0 bps
 Medium-low : 0 0 bps
 Medium-high : 0 0 bps
 High : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
 Packets : 5350989 3904 pps
 Bytes : 368412924 2124048 bps
Transmitted:
 Packets : 3790469 1465 pps
 Bytes : 257751892 796960 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 1550282 2439 pps
 Low : 1550282 2439 pps
 Medium-low : 0 0 pps
 Medium-high : 0 0 pps
 High : 0 0 pps
 RED-dropped bytes : 105419176 1327088 bps
 Low : 105419176 1327088 bps
 Medium-low : 0 0 bps
 Medium-high : 0 0 bps
 High : 0 0 bps
Queue: 3, Forwarding classes: network-control
Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 Medium-low : 0 0 pps
 Medium-high : 0 0 pps
 High : 0 0 pps
 RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 Medium-low : 0 0 bps
 Medium-high : 0 0 bps
 High : 0 0 bps

```

```

show interfaces user@host> show interfaces interface-set queue ge-2/2/0-0 forwarding-class best-effort
interface-set queue Interface set: ge-2/2/0-0
forwarding-class Interface set index: 3
(Gigabit Ethernet) Forwarding classes: 8 supported, 4 in use
 Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
 Packets : 101857694 1420083 pps
 Bytes : 6927234456 772532320 bps
Transmitted:
 Packets : 3984693 55500 pps
 Bytes : 270959592 30192512 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 97870952 1364583 pps
 Low : 97870952 1364583 pps
 Medium-low : 0 0 pps
 Medium-high : 0 0 pps
 High : 0 0 pps
 RED-dropped bytes : 6655225776 742339808 bps
 Low : 6655225776 742339808 bps

```

|             |   |   |       |
|-------------|---|---|-------|
| Medium-low  | : | 0 | 0 bps |
| Medium-high | : | 0 | 0 bps |
| High        | : | 0 | 0 bps |

```

show interfaces user@host> show interfaces interface-set queue ge-2/2/0-0 ingress
interface-set queue Interface set: foo
(Enhanced DPC) Interface set index: 3
 Forwarding classes: 16 supported, 4 in use
 Ingress queues: 4 supported, 4 in use
 Queue: 0, Forwarding classes: best-effort
 Queued:
 Packets : 149036817 473711 pps
 Bytes : 8048003934 204642936 bps
 Transmitted:
 Packets : 4360749 13891 pps
 Bytes : 235480446 6000912 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 144676035 459820 pps
 RED-dropped bytes : 7812506592 198642024 bps
 Queue: 1, Forwarding classes: expedited-forwarding
 Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 0 0 pps
 RED-dropped bytes : 0 0 bps
 Queue: 2, Forwarding classes: assured-forwarding
 Queued:
 Packets : 485089207 473605 pps
 Bytes : 26195987476 204597576 bps
 Transmitted:
 Packets : 5480799 3959 pps
 Bytes : 295963146 1710504 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 479605853 469646 pps
 RED-dropped bytes : 25898716170 202887072 bps
 Queue: 3, Forwarding classes: network-control
 Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0 0 pps
 RED-dropped packets : 0 0 pps
 RED-dropped bytes : 0 0 bps

```

```

show interfaces user@host> show interfaces interface-set queue ge-2/2/0-0 remaining-traffic
interface-set queue Interface set: ge-2/2/0-0
remaining-traffic Interface set index: 12
(Gigabit Ethernet) Forwarding classes: 8 supported, 4 in use
 Egress queues: 4 supported, 4 in use
 Queue: 0, Forwarding classes: best-effort
 Queued:
 Packets : 2201552 0 pps
 Bytes : 149705536 0 bps
 Transmitted:
 Packets : 609765 0 pps

```

|                      |   |           |       |
|----------------------|---|-----------|-------|
| Bytes                | : | 41464020  | 0 bps |
| Tail-dropped packets | : | 0         | 0 pps |
| RED-dropped packets  | : | 1591787   | 0 pps |
| Low                  | : | 1591787   | 0 pps |
| Medium-low           | : | 0         | 0 pps |
| Medium-high          | : | 0         | 0 pps |
| High                 | : | 0         | 0 pps |
| RED-dropped bytes    | : | 108241516 | 0 bps |
| Low                  | : | 108241516 | 0 bps |
| Medium-low           | : | 0         | 0 bps |
| Medium-high          | : | 0         | 0 bps |
| High                 | : | 0         | 0 bps |

## CHAPTER 11

# Connectivity Fault Management Monitoring Commands

## show class-of-service interface-set

|                                 |                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show class-of-service interface-set</b><br><i>&lt;interface-set-name&gt;</i>                                                                                                      |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.4.                                                                                                                                          |
| <b>Description</b>              | Display the configured shaping rate and the adjusted shaping rate for each logical interface set configured for hierarchical class of service (CoS).                                 |
| <b>Options</b>                  | none—Display CoS associations for all logical interface sets.<br><br><i>interface-set-name</i> —(Optional) Display CoS associations for the specified interface set.                 |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                 |
| <b>List of Sample Output</b>    | <b>show class-of-service interface-set on page 271</b>                                                                                                                               |
| <b>Output Fields</b>            | Table 24 on page 270 describes the output fields for the <b>show class-of-service interface-set</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 24: show class-of-service interface-set Output Fields**

| Field Name                            | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Interface-set</b>                  | Name of a logical interface set composed of one or more logical interfaces for which hierarchical scheduling is enabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Index</b>                          | Index of this interface set or the internal index of this object.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Physical interface</b>             | Name of a physical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Queues supported</b>               | Number of queues you can configure on the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Queues in use</b>                  | Number of queues currently configured.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Output traffic control profile</b> | Name of the output traffic-control profile attached to the logical interface set.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Adjusting application</b>          | <p>Name of the application that communicates shaping-rate adjustment information to the Junos class-of-service process (<b>cosd</b>) on the broadband services router (BSR). The BSR uses the information from this application to perform shaping-rate adjustments on the scheduler node that manages the interface set. The adjusting application can be one of the following:</p> <p>ancp LS-0—Junos Access Node Control Profile process (<b>ancpd</b>) that performs shaping-rate adjustments on schedule nodes that are logical interface sets configured to represent subscriber local loops. When the synchronization speed of the DSL line changes, <b>ancpd</b> communicates the local loop speed to <b>cosd</b> over the default logical system, <b>LS-0</b>, and then the BSR throttles the shaping rate on the scheduler node to the loop speed.</p> |

Table 24: show class-of-service interface-set Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                  |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Adjustment type</b>         | Type of shaping-rate adjustment performed by the BSR on the scheduler node. The type of adjustment can be one of the following:<br><br>absolute—The configured shaping rate is adjusted by an absolute value as opposed to by a percentage of the configured rate. |
| <b>Configured shaping rate</b> | The maximum transmission rate on the physical interface as configured by the output traffic-control profile attached to the scheduler node.                                                                                                                        |
| <b>Adjustment value</b>        | Value of the shaping-rate adjustment information sent by the adjusting application to <b>cosd</b> .                                                                                                                                                                |

### Sample Output

```

show class-of-service interface-set user@host> show class-of-service interface-set example-ifset-ge-4/0/0-7
Interface-set: example-ifset-ge-4/0/0-7, Index: 8
Physical interface: ge-4/0/0, Index: 270
Queues supported: 8, Queues in use: 8
 Output traffic control profile: example-tcp-basic-rate, Index: 11395
Adjusting application: ancp LS-0
 Adjustment type: absolute
 Configured shaping rate: 50000000
 Adjustment value: 888000

```

## show oam ethernet connectivity-fault-management interfaces

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show oam ethernet connectivity-fault-management interfaces</b><br><b>&lt;ethernet-interface-name&gt;</b><br><b>&lt;level md-level&gt;</b><br><b>&lt;brief   detail   extensive&gt;</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | <p>Command introduced in Junos OS Release 8.4.</p> <p>Support for ITU-T Y.1731 frame delay measurement added in Junos OS Release 9.5.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | <p>On M7i and M10i routers with Enhanced CFEB (CFEB-E), and on M320, MX Series, T320, and T640 routers, display IEEE 802.1ag Operation, Administration, and Management (OAM) connectivity fault management (CFM) database information for Ethernet interfaces.</p> <p>In addition, for Ethernet interfaces on Dense Port Concentrators (DPCs) in MX Series routers only, also display any ITU-T Y.1731 frame delay measurement (ETH-DM) frame counts when <b>detail</b> or <b>extensive</b> mode is specified.</p>                                                                                                                                                                                                            |
| <b>Options</b>                  | <p><b>brief   detail   extensive</b>—(Optional) Specified level of output.</p> <p><b>ethernet-interface-name</b>—(Optional) CFM information only for CFM entities attached to the specified Ethernet interface.</p> <p><b>level md-level</b>—(Optional) CFM information for CFM identities enclosed within a maintenance domain of the specified level.</p>                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• clear oam ethernet connectivity-fault-management statistics</li> <li>• show oam ethernet connectivity-fault-management delay-statistics</li> <li>• <b>show oam ethernet connectivity-fault-management mep-database on page 281</b></li> <li>• show oam ethernet connectivity-fault-management mep-statistics</li> </ul>                                                                                                                                                                                                                                                                                                                                                              |
| <b>List of Sample Output</b>    | <p><b>show oam ethernet connectivity-fault-management interfaces on page 276</b></p> <p><b>show oam ethernet connectivity-fault-management interfaces detail on page 277</b></p> <p><b>show oam ethernet connectivity-fault-management interfaces detail (One-Way ETH-DM) on page 277</b></p> <p><b>show oam ethernet connectivity-fault-management interfaces detail (Connection Protection TLV Configured) on page 278</b></p> <p><b>show oam ethernet connectivity-fault-management interfaces extensive on page 279</b></p> <p><b>show oam ethernet connectivity-fault-management interfaces level on page 279</b></p> <p><b>show oam ethernet connectivity-fault-management interfaces (trunk ports) on page 280</b></p> |
| <b>Output Fields</b>            | <p>Table 25 on page 273 lists the output fields for the <b>show oam ethernet connectivity-fault-management interfaces</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

Table 25: show oam ethernet connectivity-fault-management interfaces Output Fields

| Field Name                              | Field Description                                                                                                                                                                                                                                                                               | Level of Output         |
|-----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Interface</b>                        | Interface identifier.                                                                                                                                                                                                                                                                           | All levels              |
| <b>Interface status</b>                 | Local interface status.                                                                                                                                                                                                                                                                         | All levels              |
| <b>Link status</b>                      | Local link status. <b>Up</b> , <b>down</b> , or <b>oam-down</b> .                                                                                                                                                                                                                               | All levels              |
| <b>Maintenance domain name</b>          | Maintenance domain name.                                                                                                                                                                                                                                                                        | <b>detail extensive</b> |
| <b>Format (Maintenance domain)</b>      | Maintenance domain name format configured.                                                                                                                                                                                                                                                      | <b>detail extensive</b> |
| <b>Level</b>                            | Maintenance domain level configured.                                                                                                                                                                                                                                                            | All levels              |
| <b>Maintenance association name</b>     | Maintenance association name.                                                                                                                                                                                                                                                                   | <b>detail extensive</b> |
| <b>Format (Maintenance association)</b> | Maintenance association name format configured.                                                                                                                                                                                                                                                 | <b>detail extensive</b> |
| <b>Continuity-check status</b>          | Continuity-check status.                                                                                                                                                                                                                                                                        | <b>detail extensive</b> |
| <b>Interval</b>                         | Continuity-check message interval.                                                                                                                                                                                                                                                              | <b>detail extensive</b> |
| <b>Loss-threshold</b>                   | Lost continuity-check message threshold.                                                                                                                                                                                                                                                        | <b>detail extensive</b> |
| <b>Interface status TLV</b>             | Status of the interface status TLV, if configured on the MEP interface: <b>none</b> , <b>up</b> , <b>down</b> , <b>testing</b> , <b>unknown</b> , <b>dormant</b> , <b>notPresent</b> , <b>lowerLayerDown</b>                                                                                    | <b>detail extensive</b> |
| <b>Port status TLV</b>                  | Status of the port status TLV, if configured on the MEP interface: <b>none</b> , <b>no</b> , <b>yes</b>                                                                                                                                                                                         | <b>detail extensive</b> |
| <b>Connection Protection TLV</b>        | Status of the connection protection TLV if configured on the MEP interface: <b>no</b> , <b>yes</b><br><br>If <b>yes</b> , then the transmitted connection protection TLV is decoded and the following three fields are displayed: <b>Prefer me</b> , <b>Protection in use</b> , <b>FRR Flag</b> | <b>detail extensive</b> |
| <b>Prefer me</b>                        | If set to <b>yes</b> , the path through which CCM was transmitted is preferred (unless the path fails). It is used for signaling a manual-switch command to the remote side.<br><br>Its value can be <b>yes</b> or <b>no</b> .                                                                  | <b>detail extensive</b> |
| <b>Protection in use</b>                | Used for protection decision coordination. Its value is set to <b>yes</b> if the endpoint transmitting the CCM is currently transmitting the user traffic to protection path.<br><br>Its value can be <b>yes</b> or <b>no</b> .                                                                 | <b>detail extensive</b> |

Table 25: show oam ethernet connectivity-fault-management interfaces Output Fields (*continued*)

| Field Name                               | Field Description                                                                                                                                                                                              | Level of Output         |
|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>FRR Flag</b>                          | LSR/LER forwarding the CCM Frame into a bypass tunnel is set.<br><br>Its value can be <b>yes</b> or <b>no</b> .                                                                                                | <b>detail extensive</b> |
| <b>MEP identifier</b>                    | Maintenance association end point (MEP) identifier.                                                                                                                                                            | All levels              |
| <b>Neighbours</b>                        | Number of MEP neighbors.                                                                                                                                                                                       | All levels              |
| <b>Direction</b>                         | MEP direction configured.                                                                                                                                                                                      | <b>detail extensive</b> |
| <b>MAC address</b>                       | MAC address configured for the MEP.                                                                                                                                                                            | <b>detail extensive</b> |
| <b>MEP status</b>                        | Indicates the status of the connectivity fault management (CFM) protocol running on the MEP: <b>Running</b> , <b>inactive</b> , <b>disabled</b> , or <b>unsupported</b> .                                      | <b>detail extensive</b> |
| <b>Remote MEP not receiving CCM</b>      | Whether the remote MEP is not receiving connectivity check messages (CCMs).                                                                                                                                    | <b>detail extensive</b> |
| <b>Erroneous CCM received</b>            | Whether erroneous CCMs have been received.                                                                                                                                                                     | <b>detail extensive</b> |
| <b>Cross-connect CCM received</b>        | Whether cross-connect CCMs have been received.                                                                                                                                                                 | <b>detail extensive</b> |
| <b>RDI sent by some MEP</b>              | Whether the remote defect indication (RDI) bit is set in messages that have been received. The absence of the RDI bit in a CCM indicates that the transmitting MEP is receiving CCMs from all configured MEPs. | <b>detail extensive</b> |
| <b>CCMs sent</b>                         | Number of CCMs transmitted.                                                                                                                                                                                    | <b>detail extensive</b> |
| <b>CCMs received out of sequence</b>     | Number of CCMs received out of sequence.                                                                                                                                                                       | <b>detail extensive</b> |
| <b>LBMs sent</b>                         | Number of loopback request messages (LBMs) sent.                                                                                                                                                               | <b>detail extensive</b> |
| <b>Valid in-order LBRs received</b>      | Number of loopback response messages (LBRs) received that were valid messages and in sequence.                                                                                                                 | <b>detail extensive</b> |
| <b>Valid out-of-order LBRs received</b>  | Number of LBRs received that were valid messages and not in sequence.                                                                                                                                          | <b>detail extensive</b> |
| <b>LBRs received with corrupted data</b> | Number of LBRs received that were corrupted.                                                                                                                                                                   | <b>detail extensive</b> |
| <b>LBRs sent</b>                         | Number of LBRs transmitted.                                                                                                                                                                                    | <b>detail extensive</b> |
| <b>LTMs sent</b>                         | Linktrace messages (LTMs) transmitted.                                                                                                                                                                         | <b>detail extensive</b> |

**Table 25: show oam ethernet connectivity-fault-management interfaces Output Fields (*continued*)**

| Field Name                                 | Field Description                                                                                                                                                                                                                   | Level of Output         |
|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>LTM received</b>                        | Linktrace messages received.                                                                                                                                                                                                        | <b>detail extensive</b> |
| <b>LTRs sent</b>                           | Linktrace responses (LTRs) transmitted.                                                                                                                                                                                             | <b>detail extensive</b> |
| <b>LTRs received</b>                       | Linktrace responses received.                                                                                                                                                                                                       | <b>detail extensive</b> |
| <b>Sequence number of next LTM request</b> | Sequence number of next LTM request to be transmitted.                                                                                                                                                                              | <b>detail extensive</b> |
| <b>1DMs sent</b>                           | <p>If the interface is attached to an initiator MEP for a one-way ETH-DM session: Number of one-way delay measurement (1DM) PDU frames sent to the peer MEP in this session.</p> <p>For all other cases, this field displays 0.</p> | <b>detail extensive</b> |
| <b>Valid 1DMs received</b>                 | <p>If the interface is attached to a receiver MEP for a one-way ETH-DM session: Number of valid 1DM frames received.</p> <p>For all other cases, this field displays 0.</p>                                                         | <b>detail extensive</b> |
| <b>Invalid 1DMs received</b>               | <p>If the interface is attached to a receiver MEP for a one-way ETH-DM session: Number of invalid 1DM frames received.</p> <p>For all other cases, this field displays 0.</p>                                                       | <b>detail extensive</b> |
| <b>Out of sync 1DMs received</b>           | <p>If the interface is attached to a receiver MEP for a one-way ETH-DM session: Number of out-of-sync one-way delay measurement request packets received.</p>                                                                       | <b>detail extensive</b> |
| <b>DMMs sent</b>                           | <p>If the interface is attached to an initiator MEP for a two-way ETH-DM session: Number of Delay Measurement Message (DMM) PDU frames sent to the peer MEP in this session.</p> <p>For all other cases, this field displays 0.</p> | <b>detail extensive</b> |
| <b>Valid DMMs received</b>                 | <p>If the interface is attached to an initiator MEP for a two-way ETH-DM session: Number of valid two-way delay measurement request packets received.</p>                                                                           | <b>detail extensive</b> |
| <b>Invalid DMMs received</b>               | <p>If the interface is attached to an initiator MEP for a two-way ETH-DM session: Number of invalid two-way delay measurement request packets received.</p>                                                                         | <b>detail extensive</b> |
| <b>DMRs sent</b>                           | <p>If the interface is attached to a responder MEP for a two-way ETH-DM session: Number of delay measurement reply (DMR) frames sent.</p> <p>For all other cases, this field displays 0.</p>                                        | <b>detail extensive</b> |
| <b>Valid DMRs received</b>                 | <p>If the interface is attached to an initiator MEP for a two-way ETH-DM session: Number of valid DMRs received.</p> <p>For all other cases, this field displays 0.</p>                                                             | <b>detail extensive</b> |

Table 25: show oam ethernet connectivity-fault-management interfaces Output Fields (*continued*)

| Field Name                      | Field Description                                                                                                                                                  | Level of Output         |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Invalid DMRs received</b>    | If the interface is attached to an initiator MEP for a two-way ETH-DM session: Number of invalid DMRs received.<br><br>For all other cases, this field displays 0. | <b>detail extensive</b> |
| <b>LMM sent</b>                 | If the interface is attached to an initiator MEP for a ETH-LM session: Number of loss measurement message (LMM) PDU frames sent to the peer MEP in this session.   | <b>detail extensive</b> |
| <b>Valid LMM received</b>       | If the interface is attached to an initiator MEP for a ETH-LM session: Number of valid loss measurement request packets received.                                  | <b>detail extensive</b> |
| <b>Invalid LMM received</b>     | If the interface is attached to an initiator MEP for a ETH-LM session: Number of invalid loss measurement request packets received.                                | <b>detail extensive</b> |
| <b>LMR sent</b>                 | If the interface is attached to a responder MEP for a ETH-LM session: Number of loss measurement reply (LMR) frames sent.                                          | <b>detail extensive</b> |
| <b>Valid LMR received</b>       | If the interface is attached to an initiator MEP for a ETH-LM session: Number of valid LMR frames received.                                                        | <b>detail extensive</b> |
| <b>Invalid LMR received</b>     | If the interface is attached to an initiator MEP for a ETH-LM session: Number of invalid LMR frames received.                                                      | <b>detail extensive</b> |
| <b>Remote MEP count</b>         | Number of remote MEPs.                                                                                                                                             | <b>extensive</b>        |
| <b>Identifier (remote MEP)</b>  | MEP identifier of the remote MEP.                                                                                                                                  | <b>extensive</b>        |
| <b>MAC address (remote MEP)</b> | MAC address of the remote MEP.                                                                                                                                     | <b>extensive</b>        |
| <b>State (remote MEP)</b>       | State of the remote MEP.                                                                                                                                           | <b>extensive</b>        |
| <b>Interface (remote MEP)</b>   | Interface of the remote MEP.                                                                                                                                       | <b>extensive</b>        |

### Sample Output

```

show oam ethernet connectivity-fault-management interfaces
user@host> show oam ethernet connectivity-fault-management interfaces

```

| Interface    | Link | Status | Level | MEP Identifier | Neighbours |
|--------------|------|--------|-------|----------------|------------|
| ge-1/1/0.0   | Up   | Active | 0     | 2              | 1          |
| ge-1/1/0.1   | Up   | Active | 0     | 2              | 1          |
| ge-1/1/0.10  | Up   | Active | 0     | 2              | 1          |
| ge-1/1/0.100 | Up   | Active | 0     | 2              | 1          |
| ge-1/1/0.101 | Up   | Active | 0     | 2              | 1          |
| ge-1/1/0.102 | Up   | Active | 0     | 2              | 1          |

```

ge-1/1/0.103 Up Active 0 2 1
ge-1/1/0.104 Up Active 0 2 1
ge-1/1/0.105 Up Active 0 2 1
ge-1/1/0.106 Up Active 0 2 1

```

...

**show oam ethernet  
connectivity-fault-  
management  
interfaces detail**

```

user@host> show oam ethernet connectivity-fault-management interfaces detail
Interface name: ge-5/2/9.0, Interface status: Active, Link status: Up
Maintenance domain name: md0, Format: string, Level: 5
Maintenance association name: ma1, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
MEP identifier: 1, Direction: down, MAC address: 00:90:69:0b:4b:94
MEP status: running
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : yes
 Cross-connect CCM received : no
 RDI sent by some MEP : yes
Statistics:
 CCMs sent : 76
 CCMs received out of sequence : 0
 LBMs sent : 0
 Valid in-order LBRs received : 0
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMs sent : 0
 LTMs received : 0
 LTRs sent : 0
 LTRs received : 0
 Sequence number of next LTM request : 0
 1DMs sent : 0
 Valid 1DMs received : 0
 Invalid 1DMs received : 0
 DMMs sent : 0
 DMRs sent : 0
 Valid DMRs received : 0
 Invalid DMRs received : 0
 LMM sent : 10
 Valid LMM received : 20
 Invalid LMM received : 0
 LMR sent : 20
 Valid LMR received : 10
 Invalid LMR received : 0
Remote MEP count: 2
 Identifier MAC address State Interface
 2001 00:90:69:0b:7f:71 ok ge-5/2/9.0
 4001 00:90:69:0b:09:c5 ok ge-5/2/9.0

```

**show oam ethernet  
connectivity-fault-  
management  
interfaces detail  
(One-Way ETH-DM)**

```

user@host show oam ethernet connectivity-fault-management interfaces detail
Interface name: ge-0/2/5.0, Interface status: Active, Link status: Up
Maintenance domain name: md6, Format: string, Level: 6
Maintenance association name: ma6, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
MEP identifier: 101, Direction: down, MAC address: 00:90:69:0a:48:57
MEP status: running
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : no
 Cross-connect CCM received : no

```

```

 RDI sent by some MEP : no
Statistics:
 CCMs sent : 1590
 CCMs received out of sequence : 0
 LBMs sent : 0
 Valid in-order LBRs received : 0
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMs sent : 0
 LTMs received : 0
 LTRs sent : 0
 LTRs received : 0
 Sequence number of next LTM request : 0
 1DMs sent : 10
 Valid 1DMs received : 0
 Invalid 1DMs received : 0
 DMMs sent : 0
 DMRs sent : 0
 Valid DMRs received : 0
 Invalid DMRs received : 0
Remote MEP count: 1
 Identifier MAC address State Interface
 201 00:90:69:0a:43:94 ok ge-0/2/5.0

```

**show oam ethernet  
connectivity-fault-  
management  
interfaces detail  
(Connection  
Protection TLV  
Configured)**

```

user@hostshow oam ethernet connectivity-fault-management interfaces detail
Interface name: xe-6/2/0.0 , Interface status: Active, Link status: Up
Maintenance domain name: md6, Format: string, Level: 6
Maintenance association name: ma6, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
Interface status TLV: none, Port status TLV: none
Connection Protection TLV: yes
 Prefer me: no, Protection in use: no, FRR Flag: no
MEP identifier: 1, Direction: down, MAC address: 00:19:e2:b1:14:30
MEP status: running
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : no
 Cross-connect CCM received : no
 RDI sent by some MEP : no
 Some remote MEP's MAC in error state : no
Statistics:
 CCMs sent : 225
 CCMs received out of sequence : 0
 LBMs sent : 0
 Valid in-order LBRs received : 0
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMs sent : 0
 LTMs received : 0
 LTRs sent : 0
 LTRs received : 0
 Sequence number of next LTM request : 0
 1DMs sent : 0
 Valid 1DMs received : 0
 Invalid 1DMs received : 0
 Out of sync 1DMs received : 0
 DMMs sent : 0
 Valid DMMs received : 0

```

```

Invalid DMMs received : 0
DMRs sent : 0
Valid DMRs received : 0
Invalid DMRs received : 0
LMMs sent : 0
Valid LMMs received : 0
Invalid LMMs received : 0
LMRs sent : 0
Valid LMRs received : 0
Invalid LMRs received : 0
Remote MEP count: 1
 Identifier MAC address State Interface
 2 00:90:69:7f:e4:30

```

```

show oam ethernet connectivity-fault-management interfaces extensive
user@host> show oam ethernet connectivity-fault-management interfaces extensive
Interface name: ge-5/2/9.0, Interface status: Active, Link status: Up
Maintenance domain name: md0, Format: string, Level: 5
Maintenance association name: ma1, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
Interface status TLV: none, Port status TLV: none
Connection Protection TLV: no
MEP identifier: 1, Direction: down, MAC address: 00:90:69:0b:4b:94
MEP status: running
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : yes
 Cross-connect CCM received : no
 RDI sent by some MEP : yes
Statistics:
 CCMs sent : 76
 CCMs received out of sequence : 0
 LBMs sent : 0
 Valid in-order LBRs received : 0
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMs sent : 0
 LTRs received : 0
 LTRs sent : 0
 LTRs received : 0
 Sequence number of next LTM request : 0
 1DMs sent : 0
 Valid 1DMs received : 0
 Invalid 1DMs received : 0
 DMMs sent : 0
 DMRs sent : 0
 Valid DMRs received : 0
 Invalid DMRs received : 0
Remote MEP count: 2
 Identifier MAC address State Interface
 2001 00:90:69:0b:7f:71 ok ge-5/2/9.0
 4001 00:90:69:0b:09:c5 ok ge-5/2/9.0

```

```

show oam ethernet connectivity-fault-management interfaces level
user@host> show oam ethernet connectivity-fault-management interfaces level 7
Interface Link Status Level MEP Identifier Neighbours
ge-3/0/0.0 Up Active 7 201 0
xe-0/0/0.0 Up Active 7 203 1

```

**show oam ethernet  
connectivity-fault-  
management  
interfaces (trunk  
ports)**

user@host> show oam ethernet connectivity-fault-management interfaces

| Interface                  | Link | Status   | Level | MEP | Identifier | Neighbours |
|----------------------------|------|----------|-------|-----|------------|------------|
| ge-4/0/1.0, vlan 100       | Up   | Active   | 5     | 100 | 0          |            |
| ge-10/3/10.4091, vlan 4091 | Down | Inactive | 4     | 400 | 0          |            |
| ge-4/0/0.0                 | Up   | Active   | 6     | 200 | 0          |            |

user@host> show oam ethernet connectivity-fault-management interfaces ge-4/0/0.0

| Interface  | Link | Status | Level | MEP | Identifier | Neighbours |
|------------|------|--------|-------|-----|------------|------------|
| ge-4/0/0.0 | Up   | Active | 6     | 200 | 0          |            |

user@host> show oam ethernet connectivity-fault-management interfaces ge-4/0/1.0 vlan 100

| Interface            | Link | Status | Level | MEP | Identifier | Neighbours |
|----------------------|------|--------|-------|-----|------------|------------|
| ge-4/0/1.0, vlan 100 | Up   | Active | 5     | 100 | 0          |            |

user@host> show oam ethernet connectivity-fault-management interfaces ge-10/3/10.4091  
vlan 4091

| Interface                  | Link | Status   | Level | MEP | Identifier | Neighbours |
|----------------------------|------|----------|-------|-----|------------|------------|
| ge-10/3/10.4091, vlan 4091 | Down | Inactive | 4     | 400 | 0          |            |

## show oam ethernet connectivity-fault-management mep-database

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show oam ethernet connectivity-fault-management mep-database maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> &lt;local-mep <i>local-mep-id</i>&gt; &lt;remote-mep <i>remote-mep-id</i>&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | <p>Command introduced in Junos OS Release 8.4.</p> <p>Support for ITU-T Y.1731 frame delay measurement added in Junos OS Release 9.5.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | <p>On M7i and M10i routers with Enhanced CFEB (CFEB-E), and on M320, M120, MX Series, T320, and T640 routers, display IEEE 802.1ag Operation, Administration, and Management (OAM) connectivity fault management (CFM) database information for CFM maintenance association end points (MEPs) in a CFM session.</p> <p>In addition, on M120, M320, and MX series routers, also display port status TLV, interface status TLV, and action profile information.</p> <p>In addition, for Ethernet interfaces on Dense Port Concentrators (DPCs) in MX Series routers only, also display any ITU-T Y.1731 frame delay measurement (ETH-DM) frame counts.</p> |
| <b>Options</b>                  | <p><i>maintenance-association ma-name</i>—Name of the maintenance association.</p> <p><i>maintenance-domain domain-name</i>—Name of the maintenance domain.</p> <p><i>local-mep-id</i>—(Optional) Numeric identifier of local MEP.</p> <p><i>remote-mep-id</i>—(Optional) Numeric identifier of the remote MEP.</p>                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• clear oam ethernet connectivity-fault-management statistics</li> <li>• show oam ethernet connectivity-fault-management delay-statistics</li> <li>• <b>show oam ethernet connectivity-fault-management interfaces on page 272</b></li> <li>• show oam ethernet connectivity-fault-management mep-statistics</li> </ul>                                                                                                                                                                                                                                                                                           |
| <b>List of Sample Output</b>    | <p>show oam ethernet connectivity-fault-management mep-database on page 286</p> <p>show oam ethernet connectivity-fault-management mep-database (One-Way ETH-DM) on page 287</p> <p>show oam ethernet connectivity-fault-management mep-database local-mep remote-mep on page 287</p> <p>show oam ethernet connectivity-fault-management mep-database remote-mep (Action Profile Event) on page 288</p> <p>show oam ethernet connectivity-fault-management mep-database (Connection Protection TLV Configured) on page 288</p> <p>show oam ethernet connectivity-fault-management mep-database on page 289</p>                                           |

**show oam ethernet connectivity-fault-management mep-database (enhanced continuity measurement) on page 289**

**Output Fields** Table 26 on page 282 lists the output fields for the **show oam ethernet connectivity-fault-management mep-database** command. Output fields are listed in the approximate order in which they appear.

**Table 26: show oam ethernet connectivity-fault-management mep-database Output Fields**

| Field Name                              | Field Description                                                                                                                                                                                                                                                                                |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Maintenance domain name</b>          | Maintenance domain name.                                                                                                                                                                                                                                                                         |
| <b>Format (Maintenance domain)</b>      | Maintenance domain name format configured.                                                                                                                                                                                                                                                       |
| <b>Level</b>                            | Maintenance domain level configured.                                                                                                                                                                                                                                                             |
| <b>Maintenance association name</b>     | Maintenance association name.                                                                                                                                                                                                                                                                    |
| <b>Format (Maintenance association)</b> | Maintenance association name format configured.                                                                                                                                                                                                                                                  |
| <b>Continuity-check status</b>          | Continuity-check status.                                                                                                                                                                                                                                                                         |
| <b>Interval</b>                         | Continuity-check message interval.                                                                                                                                                                                                                                                               |
| <b>Loss-threshold</b>                   | Lost continuity-check message threshold.                                                                                                                                                                                                                                                         |
| <b>Connection Protection TLV</b>        | Status of the connection protection TLV, if configured on the MEP interface: <b>no</b> , <b>yes</b><br><br>If <b>yes</b> , then the transmitted connection protection TLV is decoded and the following three fields are displayed: <b>Prefer me</b> , <b>Protection in use</b> , <b>FRR Flag</b> |
| <b>Prefer me</b>                        | If set to <b>yes</b> , the path through which CCM was transmitted is preferred (unless the path fails). It is used for signaling a manual-switch command to remote side.<br><br>Its value can be <b>yes</b> or <b>no</b> .                                                                       |
| <b>Protection in use</b>                | Used for protection decision coordination. Its value is set to <b>yes</b> if the endpoint transmitting the CCM is currently transmitting the user traffic to protection path.<br><br>Its value can be <b>yes</b> or <b>no</b> .                                                                  |
| <b>FRR Flag</b>                         | LSR/LER forwarding the CCM Frame into a bypass tunnel is set.<br><br>Its value can be <b>yes</b> or <b>no</b> .                                                                                                                                                                                  |
| <b>MEP identifier</b>                   | Maintenance association end point (MEP) identifier.                                                                                                                                                                                                                                              |
| <b>Direction</b>                        | MEP direction configured.                                                                                                                                                                                                                                                                        |

Table 26: show oam ethernet connectivity-fault-management mep-database Output Fields (*continued*)

| Field Name                    | Field Description                                                                                                                                                                                              |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MAC address                   | MAC address configured for the MEP.                                                                                                                                                                            |
| Auto-discovery                | Whether automatic discovery is enabled or disabled.                                                                                                                                                            |
| Priority                      | Priority used for CCMs and linktrace messages transmitted by the MEP.                                                                                                                                          |
| Interface name                | Interface identifier.                                                                                                                                                                                          |
| Interface status              | Local interface status.                                                                                                                                                                                        |
| Link status                   | Local link status.                                                                                                                                                                                             |
| Remote MEP not receiving CCM  | Whether the remote MEP is not receiving CCMs.                                                                                                                                                                  |
| Erroneous CCM received        | Whether erroneous CCMs have been received.                                                                                                                                                                     |
| Cross-connect CCM received    | Whether cross-connect CCMs have been received.                                                                                                                                                                 |
| RDI sent by some MEP          | Whether the remote defect indication (RDI) bit is set in messages that have been received. The absence of the RDI bit in a CCM indicates that the transmitting MEP is receiving CCMs from all configured MEPs. |
| CCMs sent                     | Number of CCMs transmitted.                                                                                                                                                                                    |
| CCMs received out of sequence | Number of CCMs received out of sequence.                                                                                                                                                                       |
| LBMs sent                     | Number of loopback messages (LBMs) sent.                                                                                                                                                                       |
| Valid in-order LBRs received  | Number of loopback response messages (LBRs) received that were valid messages and in sequence.                                                                                                                 |
| 1DMs sent                     | If the MEP is an initiator for a one-way ETH-DM session: Number of one-way delay measurement (1DM) PDU frames sent to the peer MEP in this session.<br><br>For all other cases, this field displays 0.         |
| Valid 1DMs received           | If the MEP is a receiver for a one-way ETH-DM session: Number of valid 1DM frames received.<br><br>For all other cases, this field displays 0.                                                                 |
| Invalid 1DMs received         | If the MEP is a receiver for a one-way ETH-DM session: Number of invalid 1DM frames received.<br><br>For all other cases, this field displays 0.                                                               |

Table 26: show oam ethernet connectivity-fault-management mep-database Output Fields (*continued*)

| Field Name                                 | Field Description                                                                                                                                                                                      |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Out of sync 1DMs received</b>           | If the MEP is a receiver for a one-way ETH-DM session: Number of out-of-sync one-way delay measurement request packets received.                                                                       |
| <b>DMMs sent</b>                           | If the MEP is an initiator for a two-way ETH-DM session: Number of Delay Measurement Message (DMM) PDU frames sent to the peer MEP in this session.<br><br>For all other cases, this field displays 0. |
| <b>Valid DMMs received</b>                 | If the MEP is an initiator for a two-way ETH-DM session: Number of valid two-way delay measurement packets received.                                                                                   |
| <b>Invalid DMMs received</b>               | If the MEP is an initiator for a two-way ETH-DM session: Number of invalid two-way delay measurement packets received.                                                                                 |
| <b>DMRs sent</b>                           | If the MEP is a responder for a ETH-DM session: Number of Delay Measurement Reply (DMR) frames sent.<br><br>For all other cases, this field displays 0.                                                |
| <b>Valid DMRs received</b>                 | If the MEP is an initiator for a two-way ETH-DM session: Number of valid DMRs received.<br><br>For all other cases, this field displays 0.                                                             |
| <b>Invalid DMRs received</b>               | If the MEP is an initiator for a two-way ETH-DM session: Number of invalid DMRs received.<br><br>For all other cases, this field displays 0.                                                           |
| <b>Valid out-of-order LBRs received</b>    | Number of LBRs received that were valid messages and not in sequence.                                                                                                                                  |
| <b>LBRs received with corrupted data</b>   | Number of LBRs received that were corrupted.                                                                                                                                                           |
| <b>LBRs sent</b>                           | Number of LBRs transmitted.                                                                                                                                                                            |
| <b>LTMs sent</b>                           | Linktrace messages (LTMs) transmitted.                                                                                                                                                                 |
| <b>LTMs received</b>                       | Linktrace messages received.                                                                                                                                                                           |
| <b>LTRs sent</b>                           | Linktrace responses (LTRs) transmitted.                                                                                                                                                                |
| <b>LTRs received</b>                       | Linktrace responses received.                                                                                                                                                                          |
| <b>Sequence number of next LTM request</b> | Sequence number of the next linktrace message request to be transmitted.                                                                                                                               |
| <b>LMM sent</b>                            | If the interface is attached to an initiator MEP for a ETH-LM session: Number of loss measurement message (LMM) PDU frames sent to the peer MEP in this session.                                       |

Table 26: show oam ethernet connectivity-fault-management mep-database Output Fields (*continued*)

| Field Name               | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Valid LMM received       | If the interface is attached to an initiator MEP for a ETH-LM session: Number of valid loss measurement request packets received.                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Invalid LMM received     | If the interface is attached to an initiator MEP for a ETH LM session: Number of invalid loss measurement request packets received.                                                                                                                                                                                                                                                                                                                                                                                                                 |
| LMR sent                 | If the interface is attached to a responder MEP for a ETH-LM session: Number of loss measurement reply (LMR) frames sent.                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Valid LMR received       | If the interface is attached to an initiator MEP for a ETH LM session: Number of valid LMR frames received.                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Invalid LMR received     | If the interface is attached to an initiator MEP for a ETH-LM session: Number of invalid LMR frames received.                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Remote MEP identifier    | MEP identifier of the remote MEP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| State (remote MEP)       | State of the remote MEP: <b>idle</b> , <b>start</b> , <b>ok</b> , or <b>failed</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| MAC address              | MAC address of the remote MEP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Type                     | Whether the remote MEP MAC address was learned using automatic discovery or configured.                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Interface                | Interface of the remote MEP. A seven-digit number is appended if CFM is configured to run on a routing instance of type VPLS.                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Last flapped             | Date, time, and how long ago the remote MEP interface went from down to up. The format is <b>Last flapped: year-month-day hours:minutes:seconds timezone (hours:minutes:seconds ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .                                                                                                                                                                                                                                                                               |
| Remote defect indication | Whether the remote defect indication (RDI) bit is set in messages that have been received or transmitted.                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Port status TLV          | <ul style="list-style-type: none"> <li>In the Maintenance domain section, displays the last transmitted port status TLV value.</li> <li>In the Remote MEP section, displays the last value of port status TLV received from the remote MEP.</li> </ul> <p>In the Action profile section, displays, the last occurred event <b>port-status-tlv blocked</b> event. This event occurred due to the reception of <b>blocked</b> value in the port status TLV from remote MEP.</p>                                                                       |
| Interface status TLV     | <ul style="list-style-type: none"> <li>In the Maintenance domain section, displays the last transmitted interface status TLV value.</li> <li>In the Remote MEP section, displays the last value of interface status TLV received from the remote MEP.</li> </ul> <p>In the Action profile section, if displays, the last occurred event interface-status-tlv event ( either <b>lower-layer-down</b> or <b>down</b>). This event occurred due to the reception of either lower or <b>down</b> value in the interface status TLV from remote MEP.</p> |
| Action profile           | Name of the action profile occurrence associated with a remote MEP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

Table 26: show oam ethernet connectivity-fault-management mep-database Output Fields (*continued*)

| Field Name         | Field Description                                                                                                                                                                                          |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Last event         | When an action profile occurs, displays the last event that triggered it.                                                                                                                                  |
| Last event cleared | When all the configured and occurred events (under action profile) are cleared, then the action taken gets reverted (such as down interface is made up) and the corresponding time is noted and displayed. |
| Action             | Action taken and the corresponding time of the action occurrence.                                                                                                                                          |

### Sample Output

```

show oam ethernet connectivity-fault-management mep-database
user@host> show oam ethernet connectivity-fault-management mep-database
maintenance-domain vpls-vlan2000 maintenance-association vpls-vlan200
Maintenance domain name: vpls-vlan2000, Format: string, Level: 5
Maintenance association name: vpls-vlan200, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
MEP identifier: 200, Direction: up, MAC address: 00:19:e2:b0:74:01
Auto-discovery: enabled, Priority: 0
Interface status TLV: none, Port status TLV: none
Connection Protection TLV: no Interface name: ge-0/0/1.0, Interface status:
Active, Link status: Up
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : no
 Cross-connect CCM received : no
 RDI sent by some MEP : no
Statistics:
 CCMS sent : 1476
 CCMS received out of sequence : 0
 LBMS sent : 85
 Valid in-order LBRs received : 78
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMs sent : 1
 LTMs received : 0
 LTRs sent : 0
 LTRs received : 1
 Sequence number of next LTM request : 1
 1DMs sent : 0
 Valid 1DMs received : 0
 Invalid 1DMs received : 0
 DMMs sent : 0
 DMRs sent : 0
 Valid DMRs received : 0
 Invalid DMRs received : 0
Remote MEP count: 1
Identifier MAC address State Interface
 100 00:19:e2:b2:81:4b ok vt-0/1/10.1049088

```

```

show oam ethernet connectivity-fault-management mep-database
(One-Way ETH-DM) user@host> show oam ethernet connectivity-fault-management mep-database
maintenance-domain md6 maintenance-domain ma6
Maintenance domain name: md6, Format: string, Level: 6
Maintenance association name: ma6, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
MEP identifier: 101, Direction: down, MAC address: 00:90:69:0a:48:57
Auto-discovery: enabled, Priority: 0
Interface name: ge-0/2/5.0, Interface status: Active, Link status: Up
Defects:
 Remote MEP not receiving CCM : no
 Erroneous CCM received : no
 Cross-connect CCM received : no
 RDI sent by some MEP : no
Statistics:
 CCMS sent : 1590
 CCMS received out of sequence : 0
 LBMS sent : 0
 Valid in-order LBRs received : 0
 Valid out-of-order LBRs received : 0
 LBRs received with corrupted data : 0
 LBRs sent : 0
 LTMS sent : 0
 LTMS received : 0
 LTRs sent : 0
 LTRs received : 0
 Sequence number of next LTM request : 0
 1DMs sent : 10
 Valid 1DMs received : 0
 Invalid 1DMs received : 0
 DMMs sent : 0
 DMRs sent : 0
 Valid DMRs received : 0
 Invalid DMRs received : 0
Remote MEP count: 1
 Identifier MAC address State Interface
 201 00:90:69:0a:43:94 ok ge-0/2/5.0

show oam ethernet connectivity-fault-management mep-database
local-mep remote-mep user@host> show oam ethernet connectivity-fault-management mep-database
maintenance-domain vpls-vlan2000 maintenance-association vpls-vlan200 local-mep 200
remote-mep 100
Maintenance domain name: vpls-vlan2000, Format: string, Level: 5
Maintenance association name: vpls-vlan200, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
MEP identifier: 200, Direction: up, MAC address: 00:19:e2:b0:74:01
Auto-discovery: enabled, Priority: 0
Interface name: ge-0/0/1.0, Interface status: Active, Link status: Up

Remote MEP identifier: 100, State: ok
MAC address: 00:19:e2:b2:81:4b, Type: Learned
Interface: vt-0/1/10.1049088
Last flapped: Never
Remote defect indication: false
Port status TLV: none
Interface status TLV: none

```

```

show oam ethernet connectivity-fault-management mep-database remote-mep
(Action Profile Event)
user@host> show oam ethernet connectivity-fault-management mep-database
maintenance-domain md5 maintenance-association ma5 remote-mep 200
Maintenance domain name: md5, Format: string, Level: 5
Maintenance association name: ma5, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
MEP identifier: 100, Direction: down, MAC address: 00:05:85:73:e8:ad
Auto-discovery: enabled, Priority: 0
Interface status TLV: none, Port status TLV: none
Interface name: ge-1/0/8.0, Interface status: Active, Link status: Up

Remote MEP identifier: 200, State: ok
MAC address: 00:05:85:73:96:1f, Type: Configured
Interface: ge-1/0/8.0
Last flapped: Never
Remote defect indication: false
Port status TLV: none
Interface status TLV: lower-layer-down
Action profile: juniper
Last event: Interface-status-tlv lower-layer-down
Action: Interface-down, Time: 2009-03-27 14:25:10 PDT (00:00:02 ago)

show oam ethernet connectivity-fault-management mep-database
(Action Profile Event)
user@host>show oam ethernet connectivity-fault-management mep-database
maintenance-domain md5 maintenance-association ma5
Maintenance domain name: md5, Format: string, Level: 5
Maintenance association name: ma5, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
MEP identifier: 1, Direction: down, MAC address: 00:19:e2:b1:14:30
Auto-discovery: enabled, Priority: 0
Interface status TLV: none, Port status TLV: none
Connection Protection TLV: yes
Prefer me: no, Protection in use: no, FRR Flag: no
Interface name: xe-6/2/0.0, Interface status: Active, Link status: Up
Defects:
Remote MEP not receiving CCM : no
Erroneous CCM received : no
Cross-connect CCM received : no
RDI sent by some MEP : no
Some remote MEP's MAC in error state : no
Statistics:
CCMs sent : 251
CCMs received out of sequence : 0
LBMs sent : 0
Valid in-order LBRs received : 0
Valid out-of-order LBRs received : 0
LBRs received with corrupted data : 0
LBRs sent : 0
LTMs sent : 0
LTMs received : 0
LTRs sent : 0
LTRs received : 0
Sequence number of next LTM request : 0
1DMs sent : 0
Valid 1DMs received : 0
Invalid 1DMs received : 0
Out of sync 1DMs received : 0
DMMs sent : 0
Valid DMMs received : 0
Invalid DMMs received : 0
DMRs sent : 0
Valid DMRs received : 0
Invalid DMRs received : 0

```

```

LMMs sent : 0
Valid LMMs received : 0
Invalid LMMs received : 0
LMRs sent : 0
Valid LMRs received : 0
Invalid LMRs received : 0
Remote MEP count: 1
Identifier MAC address State Interface
2 00:90:69:7f:e4:30

```

```

show oam ethernet connectivity-fault-management mep-database
user@host> show oam ethernet connectivity-fault-management mep-database
maintenance-domain md5 maintenance-association ma5
Maintenance association name: ma1, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
MEP identifier: 1, Direction: down, MAC address: 00:14:f6:b6:01:fe
Auto-discovery: enabled, Priority: 0
Interface name: ge-1/0/0.0, Interface status: Active, Link status: Up

```

```

Defects:
Remote MEP not receiving CCM : no
Erroneous CCM received : no
Cross-connect CCM received : no
RDI sent by some MEP : no

Statistics:
CCMs sent : 328703
CCMs received out of sequence : 0
LBMs sent : 85
Valid in-order LBRs received : 78
Valid out-of-order LBRs received : 0
LBRs received with corrupted data : 0
LBRs sent : 0
LTMs sent : 0
LTMs received : 0
LTRs sent : 0
LTRs received : 0
Sequence number of next LTM request : 0
1DMs sent : 10
Valid 1DMs received : 10
Invalid 1DMs received : 0
DMMs sent : 20
DMRs sent : 0
Valid DMRs received : 10
Invalid DMRs received : 0
LMM sent : 10
Valid LMM received : 20
Invalid LMM received : 0
LMR sent : 20
Valid LMR received : 10
Invalid LMR received : 0
Remote MEP count : 1

```

```

Identifier MAC address State Interface
2 00:12:1e:fb:ea:7d ok ge-1/0/0.0

```

```

show oam ethernet connectivity-fault-management mep-database
user@host> show oam ethernet connectivity-fault-management mep-database
maintenance-domain md5 maintenance-association ma5 local-mep 2001 remote-mep 1001
Maintenance domain name: md5, Format: string, Level: 5
Maintenance association name: ma5, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames

```

(enhanced continuity measurement) MEP identifier: 2001, Direction: down, MAC address: 00:19:e2:b2:81:4a  
Auto-discovery: enabled, Priority: 0  
Interface status TLV: up, Port status TLV: up  
Interface name: ge-2/0/0.0, Interface status: Active, Link status: Up

Remote MEP identifier: 1001, State: ok  
MAC address : 00:19:e2:b0:74:00, Type: Learned  
Interface : ge-2/0/0.0  
Last flapped : Never  
+ Continuity : 91%, Admin-enable duration: 2100sec, Oper-down duration: 100sec  
Remote defect indication: false  
Port status TLV: none  
Interface status TLV: none

## show oam ethernet connectivity-fault-management mip

|                                 |                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show oam ethernet connectivity-fault-management mip <qualifier>                                                                                                                                  |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.4.                                                                                                                                                      |
| <b>Description</b>              | On the MX Series routers, display all the maintenance association intermediate points (MIPs) created in the system. Qualifiers also available to display specific MIPs.                          |
| <b>Options</b>                  | This command has no options.                                                                                                                                                                     |
| <b>Required Privilege Level</b> | View                                                                                                                                                                                             |
| <b>Output Fields</b>            | Table 27 on page 291 lists the output fields for the <b>show oam ethernet connectivity-fault-management mip</b> command. Output fields are listed in the approximate order in which they appear. |

Table 27: show oam ethernet connectivity-fault-management mip Output Fields

| Field Name                   | Field Description                                    |
|------------------------------|------------------------------------------------------|
| MIP information for instance | Header for the MIP information showing the MIP name. |
| Interface                    | Interface type-dpc/pic/port.unit-number.             |
| Level                        | MIP level configured.                                |

## Sample Output

```

user@host> show oam ethernet connectivity-fault-management mip
MIP information for instance __mip_name__

MIP information for instance default-switch bd1

 Interface Level
 ge-3/0/0.0 7
 ge-3/0/1.0 6
 ge-3/0/3.0 6
MIP information for instance vpls-1

 Interface Level
 ge-3/0/2.0 7
 ge-3/0/4.0 6

```

## traceroute ethernet

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>traceroute ethernet</b> ( <i>mac-address</i>   <i>mep-id</i> )<br><b>maintenance-association</b> <i>ma-name</i><br><b>maintenance-domain</b> <i>md-name</i><br><b>ttl</b> <i>value</i><br><b>&lt;wait seconds&gt;</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.0.<br><b>mep-id</b> option introduced in Junos OS Release 9.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | <p>Triggers the linktrace protocol to trace the route between two maintenance points. The result of the traceroute protocol is stored in the path database. To display the path database, use the <b>show oam ethernet connectivity-fault-management path-database</b> command.</p> <p>Before using the traceroute command, you can verify the remote MEP's MAC address using the <b>show oam ethernet connectivity-fault-management path-database</b> command.</p>                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <p><i>mac-address</i>—Destination unicast MAC address of the remote maintenance point.</p> <p><i>mep-id</i>—MEP identifier of the remote maintenance point. The range of values is 1 through 8191.</p> <p><i>maintenance-association ma-name</i>—Specifies an existing maintenance association from the set of configured maintenance associations.</p> <p><i>maintenance-domain md-name</i>—Specifies an existing maintenance domain from the set of configured maintenance domains.</p> <p><i>ttl value</i>—Number of hops to use in the linktrace request. The range is 1 to 255 hops. The default is 4.</p> <p><i>wait seconds</i>—(Optional) Maximum time to wait for a response to the traceroute request. The range is 1 to 255 seconds. The default is 5.</p> |
| <b>Required Privilege Level</b> | network                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>List of Sample Output</b>    | <b>traceroute ethernet on page 293</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Output Fields</b>            | Table 28 on page 292 lists the output fields for the <b>traceroute ethernet</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

**Table 28: traceroute ethernet Output Fields**

| Field Name          | Field Description                                         |
|---------------------|-----------------------------------------------------------|
| <b>Linktrace to</b> | MAC address of the destination maintenance point.         |
| <b>Interface</b>    | Local interface used to send the linktrace message (LTM). |

Table 28: traceroute ethernet Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                            |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Maintenance Domain</b>      | Maintenance domain specified in the traceroute command.                                                                                                                                                                                                                      |
| <b>Level</b>                   | Maintenance domain level configured.                                                                                                                                                                                                                                         |
| <b>Maintenance Association</b> | Maintenance association specified in the traceroute command.                                                                                                                                                                                                                 |
| <b>Local Mep</b>               | The local maintenance end point identifier.                                                                                                                                                                                                                                  |
| <b>Transaction Identifier</b>  | 4-byte identifier maintained by the MEP. Each LTM uses a transaction identifier. The transaction identifier is maintained globally across all Maintenance Domains. Use the transaction identifier to match an incoming linktrace response (LTR), with a previously sent LTM. |
| <b>Hop</b>                     | Sequential hop count of the linktrace path.                                                                                                                                                                                                                                  |
| <b>TTL</b>                     | Number of hops remaining in the linktrace message. The time to live (TTL) is decremented at each hop.                                                                                                                                                                        |
| <b>Source MAC address</b>      | MAC address of the 802.1ag maintenance point that is sending the linktrace message.                                                                                                                                                                                          |
| <b>Next-hop MAC address</b>    | MAC address of the 802.1ag node that is the next hop in the LTM path.                                                                                                                                                                                                        |

## Sample Output

```

traceroute ethernet user@host> traceroute ethernet maintenance-domain md1 maintenance-association ma1
00:90:69:7e:01:ff
Linktrace to 00:01:02:03:04:05, Interface : ge-5/0/0.0
Maintenance Domain: MD1, Level: 7
Maintenance Association: MA1, Local Mep: 1

Hop TTL Source MAC address Next hop MAC address
Transaction Identifier:100001
1 63 00:00:aa:aa:aa:aa 00:00:bb:bb:bb:bb
2 62 00:00:bb:bb:bb:bb 00:00:cc:cc:cc:cc
3 61 00:00:cc:cc:cc:cc 00:01:02:03:04:05
4 60 00:01:02:03:04:05 00:00:00:00:00:00

```



## PART 4

# Index

- Index on page 297



# Index

## Symbols

10-Gigabit Ethernet interfaces  
    status information, displaying.....261

## A

auto-discovery statement.....175

## B

bridge domain  
    VLAN identifier.....168  
bridge-domain statement.....175  
bridge-domain-type statement.....145  
bridge-domains statement.....144  
buffer-size statement.....192

## C

CFM statistics  
    displaying for CFM interfaces.....281  
    displaying for interfaces.....272  
code-point statement.....194  
code-points statement.....194  
connectivity-fault-management statement.....176  
continuity-check statement.....178  
CoS  
    interface sets, displaying.....270  
    mapping, displaying  
        schedulers to forwarding classes.....254  
    scheduler map information, displaying.....254  
    traffic-control profile information,  
        displaying.....256

## D

default-bvlan statement.....145  
default-isid statement.....146  
direction statement.....179

## E

ETH-DM frame counts (with CFM statistics)  
    displaying for MEPs by enclosing CFM.....281  
    displaying for MEPs by interface or domain  
        level.....272  
Ethernet interface set queue  
    status information, displaying.....261  
Ethernet interfaces  
    CFM statistics  
        displaying for CFM interfaces.....281  
        displaying for interfaces.....272  
    ETH-DM frame counts (with CFM statistics)  
        displaying for MEPs by enclosing  
            CFM.....281  
        displaying for MEPs by interface or domain  
            level.....272  
    status information, displaying  
        Gigabit Ethernet.....223  
ethernet statement.....180

## F

family statement.....147, 152  
    firewall filter.....195  
filter statement  
    firewall.....196  
firewall  
    statistics  
        displaying.....258  
firewall statement.....197  
forwarding-classes statement.....197

## G

Gigabit Ethernet interfaces  
    status information, displaying.....223, 261

## I

ieee-802.1 statement.....198  
interface statement  
    IEEE 802.1ag.....183  
interface-set statement.....199, 216

|                           |     |
|---------------------------|-----|
| interfaces statement..... | 199 |
| interval statement.....   | 184 |
| isis statement.....       | 151 |

## L

|                                      |               |
|--------------------------------------|---------------|
| Layer 2 bridging                     |               |
| learning properties, displaying..... | 244, 247, 250 |
| MAC address table, displaying.....   | 220           |
| learning properties                  |               |
| Layer 2, displaying.....             | 244, 247, 250 |
| level statement.....                 | 185           |
| linktrace                            |               |
| tracing.....                         | 292           |

## M

|                                        |     |
|----------------------------------------|-----|
| MAC address table                      |     |
| Layer 2, displaying.....               | 220 |
| mac-address statement                  |     |
| provider backbone bridge.....          | 156 |
| maintenance-association statement..... | 186 |
| maintenance-domain statement.....      | 187 |
| mip-half-function.....                 | 189 |
| virtual-switch.....                    | 190 |
| mep statement.....                     | 188 |
| mip-half-function statement.....       | 189 |

## O

|                                               |     |
|-----------------------------------------------|-----|
| output-traffic-control-profile statement..... | 203 |
|-----------------------------------------------|-----|

## P

|                                    |     |
|------------------------------------|-----|
| pbb-options statement.....         | 156 |
| pbb-service-options statement..... | 157 |
| peer-instance statement.....       | 157 |
| policer statement                  |     |
| configuring.....                   | 204 |

## R

|                                  |     |
|----------------------------------|-----|
| routing-instances statement..... | 158 |
|----------------------------------|-----|

## S

|                                      |          |
|--------------------------------------|----------|
| scheduler-maps statement             |          |
| for most non-ATM2 IQ interfaces..... | 206, 207 |
| service-groups statement.....        | 159      |
| service-type statement.....          | 160      |
| show bridge mac-table command.....   | 220      |
| show class-of-service interface-set  |          |
| command.....                         | 270      |
| show class-of-service scheduler-map  |          |
| command.....                         | 254      |

|                                                 |     |
|-------------------------------------------------|-----|
| show class-of-service traffic-control-profile   |     |
| command.....                                    | 256 |
| show firewall command.....                      | 258 |
| show interfaces (Gigabit Ethernet) command..... | 223 |
| show interfaces interface-set queue             |     |
| command.....                                    | 261 |
| show l2-learning backbone-instance              |     |
| command.....                                    | 244 |
| show l2-learning provider-instance command..... | 247 |
| show l2-learning remote-backbone-edge-bridge    |     |
| command.....                                    | 250 |
| show oam ethernet connectivity-fault-management |     |
| interfaces command.....                         | 272 |
| show oam ethernet connectivity-fault-management |     |
| mep-database command.....                       | 281 |

## T

|                                         |     |
|-----------------------------------------|-----|
| term statement                          |     |
| firewall.....                           | 209 |
| traceroute ethernet.....                | 292 |
| traceroute ethernet command.....        | 292 |
| traffic-control-profiles statement..... | 211 |
| transmit-rate statement.....            | 212 |

## U

|                     |     |
|---------------------|-----|
| unit statement..... | 161 |
|---------------------|-----|

## V

|                               |          |
|-------------------------------|----------|
| virtual switch                |          |
| VLAN identifier.....          | 168      |
| virtual-switch statement..... | 190      |
| vlan-id statement.....        | 167, 168 |