

Flow Collection



Published: 2012-02-28

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

Flow Collection

Copyright © 2012, Juniper Networks, Inc.
All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	ix
	Documentation and Release Notes	ix
	Supported Platforms	ix
	Using the Examples in This Manual	ix
	Merging a Full Example	x
	Merging a Snippet	x
	Documentation Conventions	xi
	Documentation Feedback	xiii
	Requesting Technical Support	xiii
	Self-Help Online Tools and Resources	xiii
	Opening a Case with JTAC	xiv
Part 1	Configuration	
Chapter 1	Configuration Tasks	3
	Configuring Flow Collection	3
	Configuring Destination FTP Servers for Flow Records	3
	Configuring a Packet Analyzer	4
	Configuring File Formats	4
	Configuring Interface Mappings	5
	Configuring Transfer Logs	5
	Configuring Retry Attempts	6
	Sending cflowd Records to Flow Collector Interfaces	6
	Configuring Flow Collection Mode and Interfaces on Services PICs	6
Chapter 2	Example	9
	Example: Configuring Flow Collection	9
Chapter 3	Configuration Statements	17
	analyzer-address	17
	analyzer-id	17
	archive-sites	18
	collector	18
	data-format	19
	destinations	19
	filename-prefix	20
	file-specification (File Format)	20
	file-specification (Interface Mapping)	21
	flow-collector	22
	ftp (Flow Collector Files)	24
	ftp (Transfer Log Files)	25
	interface-map	25

	maximum-age	26
	name-format	27
	password (Flow Collector File Servers)	28
	password (Transfer Log File Servers)	28
	retry	29
	retry-delay	29
	transfer	30
	transfer-log-archive	30
	username	31
	variant	31
Part 2	Administration	
Chapter 4	Flow Collection Operational Mode Commands	35
	clear services flow-collector statistics	36
	request services flow-collector change-destination primary interface	37
	request services flow-collector change-destination secondary interface	38
	request services flow-collector test-file-transfer	39
	show services flow-collector file interface	40
	show services flow-collector input interface	42
	show services flow-collector interface	44
Chapter 5	Flow Collector Interface Operational Mode Commands	51
	show interfaces (Flow Collector)	52
Part 3	Index	
	Index	61

List of Figures

Part 1	Configuration	
Chapter 2	Example	9
	Figure 1: Flow Collector Interface Topology Diagram	9

List of Tables

	About the Documentation ix
	Table 1: Notice Icons xi
	Table 2: Text and Syntax Conventions xi
Part 2	Administration
Chapter 4	Flow Collection Operational Mode Commands 35
	Table 3: show services flow-collector file interface Output Fields 40
	Table 4: show services flow-collector input interface Output Fields 42
	Table 5: show services flow-collector interface Output Fields 44
Chapter 5	Flow Collector Interface Operational Mode Commands 51
	Table 6: Flow Collector Show interfaces Output Fields 52

About the Documentation

- Documentation and Release Notes on page ix
- Supported Platforms on page ix
- Using the Examples in This Manual on page ix
- Documentation Conventions on page xi
- Documentation Feedback on page xiii
- Requesting Technical Support on page xiii

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- M Series
- T Series

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the [Junos OS CLI User Guide](#).

Documentation Conventions

[Table 1 on page xi](#) defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.

[Table 2 on page xi](#) defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces important new terms. Identifies book names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS System Basics Configuration Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; interface names; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Enclose optional keywords or variables.	stub <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Enclose a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identify a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
J-Web GUI Conventions		
Bold text like this	Represents J-Web graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of J-Web selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to techpubs-comments@juniper.net, or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version (if applicable)

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>

- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/> .
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html> .

PART 1

Configuration

- [Configuration Tasks on page 3](#)
- [Example on page 9](#)
- [Configuration Statements on page 17](#)

CHAPTER 1

Configuration Tasks

- [Configuring Flow Collection on page 3](#)
- [Sending cflowd Records to Flow Collector Interfaces on page 6](#)
- [Configuring Flow Collection Mode and Interfaces on Services PICs on page 6](#)

Configuring Flow Collection

This section describes the following tasks for configuring flow collection:

- [Configuring Destination FTP Servers for Flow Records on page 3](#)
- [Configuring a Packet Analyzer on page 4](#)
- [Configuring File Formats on page 4](#)
- [Configuring Interface Mappings on page 5](#)
- [Configuring Transfer Logs on page 5](#)
- [Configuring Retry Attempts on page 6](#)

Configuring Destination FTP Servers for Flow Records

Flow collection destinations are where the compressed ASCII data files are sent after the cflowd records are collected and processed. To specify the destination FTP server, include the **destinations** statement at the **[edit services flow-collector]** hierarchy level. You can specify up to two FTP server destinations and include the password for each configured server. If two FTP servers are configured, the first server in the configuration is the primary server and the second is a backup server.

To configure a destination for flow collection files, include the **destinations** statement at the **[edit services flow-collector]** hierarchy level:

```
[edit services flow-collector]
destinations {
  ftp:url {
    password "password";
  }
}
```

To specify the destination FTP server, include the **ftp:url** statement. The value **url** is the FTP server address for the primary flow collection destination and can include macros.

When you include macros in the **ftp:url** statement, a directory can be created only for a single level. For example, the path **ftp://10.2.2.2/%m/%Y** expands to **ftp://10.2.2.2/01/2005**, and the software attempts to create the directory **01/2005** on the destination FTP server. If the **01/** directory already exists on the destination FTP server, the software creates the **/2005/ directory** one level down. If the **01/** directory does not exist on the destination FTP server, the software cannot create the **/2005/ directory**, and the FTP server destination will fail. For more information about macros, see [ftp](#).

To specify the FTP server password, include the **password "password"** statement. The password must be enclosed in quotation marks. You can specify up to two destination FTP servers. The first destination specified is considered the primary destination.

Configuring a Packet Analyzer

You can specify values for the IP address and identifier of a packet analyzer to which the flow collector interface sends traffic for analysis. The values you specify here override any default values configured elsewhere.

To configure an IP address and identifier for the packet analyzer, include the **analyzer-address** and **analyzer-id** statements at the **[edit services flow-collector]** hierarchy level:

```
[edit services flow-collector]
analyzer-address address;
analyzer-id name;
```

Configuring File Formats

You configure data file formats, name formats, and transfer characteristics for the flow collection files. File records are sent to the destination FTP server when the timer expires or when a preset number of records are received, whichever comes first.

To configure the flow collection file format, include the **file-specification** statement at the **[edit services flow-collector]** hierarchy level:

```
[edit services flow-collector]
file-specification {
  variant variant-number {
    data-format format;
    name-format format;
    transfer {
      record-level number;
      timeout seconds;
    }
  }
}
```

To set the data file format, include the **data-format** statement. To set the file name format, include the **name-format** statement. To set the export timer and file size thresholds, include the **transfer** statement and specify values for the **timeout** and **record-level** options.

For example, you can specify the name format as follows:

```
[edit services flow-collector file-specification variant variant-number]
name-format "cFlowd-py69Ni69-0-%D_%T-%I_%N.bcp.bi.gz";
```

In this example, **cFlowd-py69Ni69-0** is the static portion used verbatim, **%D** is the date in YYYYMMDD format, **%T** is the time in HHMMSS format, **%I** is the value of **ifAlias**, **%N** is the generation number, and **bcp.bi.gz** is a user-configured string. A number of macros are supported for expressing the date and time information in different ways; for a complete list, see the summary section for [name-format](#).

Configuring Interface Mappings

You can match an input interface with a flow collector interface and apply the preset file specifications to the input interface.

To configure an interface mapping, include the **interface-map** statement at the **[edit services flow-collector]** hierarchy level:

```
[edit services flow-collector]
interface-map {
  collector interface-name;
  file-specification variant-number;
  interface-name {
    collector interface-name;
    file-specification variant-number;
  }
}
```

To configure the default flow collector and file specifications for all input interfaces, include the **file-specification** and **collector** statements at the **[edit services flow-collector interface-map]** hierarchy level. To override the default settings and apply flow collector and file specifications to a specific input interface, include the **file-specification** and **collector** statements at the **[edit services flow-collector interface-map *interface-name*]** hierarchy level.

Configuring Transfer Logs

You can configure the filename, export interval, maximum size, and destination FTP server for log files containing the transfer activity history for a flow collector interface.

To configure a transfer log, include the **transfer-log-archive** statement at the **[edit services flow-collector]** hierarchy level:

```
[edit services flow-collector]
transfer-log-archive {
  archive-sites {
    ftp:url {
      password "password";
      username username;
    }
  }
  filename-prefix prefix;
  maximum-age minutes;
}
```

To configure the destination for archiving files, include the **archive-sites** statement. Specify the filename as follows:

```
[edit services flow-collector transfer-log]
filename "cFlowd-py69Ni69-0-%D_%T";
```

where **cFlowd-py69Ni69-0** is the static portion used verbatim, **%D** is the date in YYYYMMDD format, and **%T** is the time in HHMMSS format.

You can optionally include the following statements:

- **filename-prefix**—Sets a standard prefix for all the logged files.
- **maximum-age**—Specifies the duration a file remains on the server. The range is 1 through 360 minutes.

Configuring Retry Attempts

You can specify values for situations in which the flow collector interface needs more than one attempt to transfer log files to the FTP server:

- Maximum number of retry attempts
- Amount of time the flow collector interface waits between successive retries

To configure retry settings, include the **retry** and **retry-delay** statements at the **[edit services flow-collector]** hierarchy level:

```
retry number;
retry-delay seconds;
```

The **retry** value can be from 0 through 10. The **retry-delay** value can be from 0 through 60 seconds.

Sending cflowd Records to Flow Collector Interfaces

To specify a flow collector interface as the destination for cflowd records coming from a services PIC, include the **collector-pic** statement at the **[edit forwarding-options monitoring group-name family inet output flow-export-destination]** hierarchy level:

```
[edit forwarding-options monitoring group-name family inet output flow-export-destination]
collector-pic;
```

You can select either the flow collector interface or a cflowd server as the destination for cflowd records, but not both at the same time.

Configuring Flow Collection Mode and Interfaces on Services PICs

You can select the services PIC to run in either flow collection mode or monitoring mode, but not both.

To set the services PIC to run in flow collection mode, include the **flow-collector** statement at the **[edit chassis fpc slot-number pic pic-number monitoring-services application]** hierarchy level:

```
[edit chassis fpc slot-number pic pic-number monitoring-services application]  
flow-collector;
```

For further information on configuring chassis properties, see the [Junos OS System Basics Configuration Guide](#).

To specify flow collection interfaces, you configure the **cp** interface at the **[edit interfaces]** hierarchy level:

```
[edit interfaces]  
cp-fpc/pic/port {  
  ...  
}
```


CHAPTER 2


Example

- [Example: Configuring Flow Collection on page 9](#)

Example: Configuring Flow Collection

Figure 1 on page 9 shows the path traveled by monitored traffic as it passes through the router. Packets arrive at input interfaces **so-0/1/0**, **so-3/0/0**, and **so-3/1/0**. The raw packets are directed into a filter-based forwarding routing instance and processed into cflowd records by the monitoring services interfaces **mo-7/1/0**, **mo-7/2/0**, and **mo-7/3/0**. The cflowd records are compressed into files at the flow collector interfaces **cp-6/0/0** and **cp-7/0/0** and sent to the FTP server for analysis. Finally, a mandatory class-of-service (CoS) configuration is applied to export channels 0 and 1 on the flow collector interfaces to manage the outgoing processed files.

Figure 1: Flow Collector Interface Topology Diagram

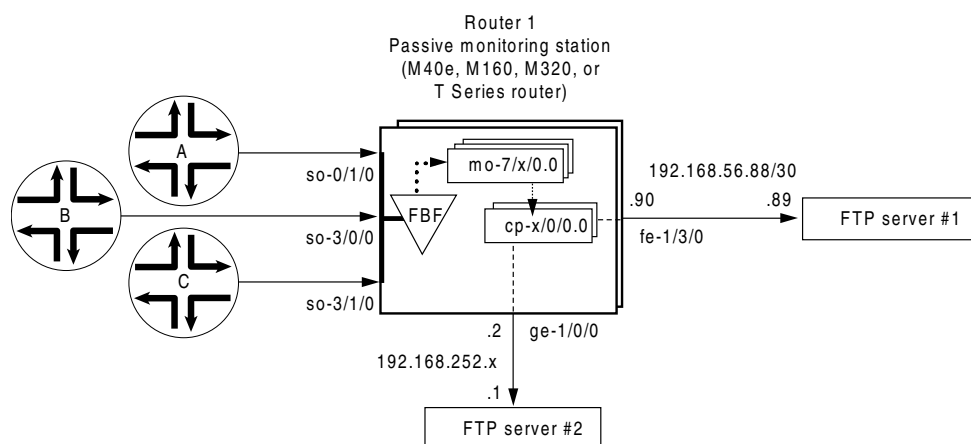

- Monitored traffic is converted into cflowd records by the Monitoring Services interfaces
- cflowd records are delivered to the flow collector interfaces
- Processed files are sent from the flow collector interfaces to the FTP servers

9003250

```
[edit]
chassis {
  fpc 6 {
    pic 0 {
      monitoring-services {
        application flow-collector; # This converts a Monitoring Services II or
```

```
        # Multiservices 400 PIC into a flow collector interface.
    }
}
}
fpc 7 {
    pic 0 {
        monitoring-services {
            application flow-collector; # This converts a Monitoring Services II or
            # Multiservices 400 PIC into a flow collector interface.
        }
    }
}
}
}
interfaces {
    cp-6/0/0 {
        unit 0 { # Logical interface .0 on a flow collector interface is export
            family inet { # channel 0 and sends records to the FTP server.
                filter {
                    output cp-ftp; # Apply the CoS filter here.
                }
                address 10.0.0.1/32 {
                    destination 10.0.0.2;
                }
            }
        }
        unit 1 { # Logical interface .1 on a flow collector interface is export
            family inet { # channel 1 and sends records to the FTP server.
                filter {
                    output cp-ftp; # Apply the CoS filter here.
                }
                address 10.1.1.1/32 {
                    destination 10.1.1.2;
                }
            }
        }
        unit 2 { # Logical interface .2 on a flow collector interface is the flow
            family inet { # receive channel that communicates with the Routing Engine.
                address 10.2.2.1/32 { # Do not apply a CoS filter on logical interface .2.
                    destination 10.2.2.2;
                }
            }
        }
    }
}
cp-7/0/0 {
    unit 0 { # Logical interface .0 on a flow collector interface is export
        family inet { # channel 0 and sends records to the FTP server.
            filter {
                output cp-ftp; # Apply the CoS filter here.
            }
            address 10.3.3.1/32 {
                destination 10.3.3.2;
            }
        }
    }
    unit 1 { # Logical interface .1 on a flow collector interface is export
        family inet { # channel 1 and sends records to the FTP server.
```



```

        filter {
            output cp-ftp;# Apply the CoS filter here.
        }
        address 10.4.4.1/32 {
            destination 10.4.4.2;
        }
    }
}
unit 2 {# Logical interface .2 on a flow collector interface is the flow
    family inet {# receive channel that communicates with the Routing Engine.
        address 10.5.5.1/32 {# Do not apply a CoS filter on logical interface .2.
            destination 10.5.5.2;
        }
    }
}
}
fe-1/3/0 { # This is the exit interface leading to the first FTP server.
    unit 0 {
        family inet {
            address 192.168.56.90/30;
        }
    }
}
ge-1/0/0 { # This is the exit interface leading to the second FTP server.
    unit 0 {
        family inet {
            address 192.168.252.2/24;
        }
    }
}
mo-7/1/0 { # This is the first interface that creates cflowd records.
    unit 0 {
        family inet;
    }
}
mo-7/2/0 { # This is the second interface that creates cflowd records.
    unit 0 {
        family inet;
    }
}
mo-7/3/0 { # This is the third interface that creates cflowd records.
    unit 0 {
        family inet;
    }
}
so-0/1/0 { # This is the first input interface that receives traffic to be monitored.
    encapsulation ppp;
    unit 0 {
        passive-monitor-mode; # This allows the interface to be passively monitored.
        family inet {
            filter {
                input catch; # The filter-based forwarding filter is applied here.
            }
        }
    }
}
}

```

```
so-3/0/0 { # This is the second interface that receives traffic to be monitored.
  encapsulation ppp;
  unit 0 {
    passive-monitor-mode; # This allows the interface to be passively monitored.
    family inet {
      filter {
        input catch; # The filter-based forwarding filter is applied here.
      }
    }
  }
}

so-3/1/0 { # This is the third interface that receives traffic to be monitored.
  encapsulation ppp;
  unit 0 {
    passive-monitor-mode; # This allows the interface to be passively monitored.
    family inet {
      filter {
        input catch; # The filter-based forwarding filter is applied here.
      }
    }
  }
}

forwarding-options {
  monitoring group1 { # Always define your monitoring group here.
    family inet {
      output {
        export-format cflowd-version-5;
        flow-active-timeout 60;
        flow-inactive-timeout 15;
        flow-export-destination collector-pic; # Sends records to the flow collector.
        interface mo-7/1/0.0 {
          source-address 192.168.252.2;
        }
        interface mo-7/2/0.0 {
          source-address 192.168.252.2;
        }
        interface mo-7/3/0.0 {
          source-address 192.168.252.2;
        }
      }
    }
  }
}

firewall {
  family inet {
    filter cp-ftp { # This filter provides CoS for flow collector interface traffic.
      term t1 {
        then forwarding-class expedited-forwarding;
      }
    }
  }
}

filter catch { # This firewall filter sends incoming traffic into the
  interface-specific; # filter-based forwarding routing instance.
  term def {
    then {
      count counter;
      routing-instance fbf_instance;
    }
  }
}
```

```

    }
  }
}
routing-options {
  interface-routes {
    rib-group inet common;
  }
  rib-groups {
    common {
      import-rib [inet.0 fbf_instance.inet.0];
    }
  }
  forwarding-table {
    export pplb;
  }
}
policy-options {
  policy-statement pplb {
    then {
      load-balance per-packet;
    }
  }
}
routing-instances {
  fbf_instance { # This instance sends traffic to the monitoring services interface.
    instance-type forwarding;
    routing-options {
      static {
        route 0.0.0.0/0 next-hop mo-7/1/0.0;
      }
    }
  }
}
class-of-service { # A class-of-service configuration for the flow collector interface
  interfaces { # is required for flow collector services.
    cp-6/0/0 {
      scheduler-map cp-map;
    }
    cp-7/0/0 {
      scheduler-map cp-map;
    }
  }
}
scheduler-maps {
  cp-map {
    forwarding-class best-effort scheduler Q0;
    forwarding-class expedited-forwarding scheduler Q1;
    forwarding-class network-control scheduler Q3;
  }
}
schedulers {
  Q0 {
    transmit-rate remainder;
    buffer-size percent 90;
  }
}

```

```

Q1 {
    transmit-rate percent 5;
    buffer-size percent 5;
    priority strict-high;
}
Q3 {
    transmit-rate percent 5;
    buffer-size percent 5;
}
}
services {
    flow-collector { # Define properties for flow collector interfaces here.
        analyzer-address 10.10.10.1; # This is the IP address of the analyzer.
        analyzer-id server1; # This helps to identify the analyzer.
        retry 3; # Maximum number of attempts by the PIC to send a file transfer log.
        retry-delay 30; # The time interval between attempts to send a file transfer log.
        destinations { # This defines the FTP servers that receive flow collector output.
            "ftp://user@192.168.56.89//tmp/collect1/" { # The primary FTP server.
                password "$9$IJK8xN-w2oZdbZDHmF30O1"; # SECRET-DATA
            }
            "ftp://user@192.168.252.1//tmp/collect2/" { # The secondary FTP server.
                password "$9$elbvL7-dsgaGVwGjkP3nOBI"; # SECRET-DATA
            }
        }
    }
    file-specification { # Define sets of flow collector characteristics here.
        def-spec {
            name-format "default-allInt-0-%D_%T-%l_%N.bcp.bi.gz";
            data-format flow-compressed; # The default compressed output format.
        } # When no overrides are specified, a collector uses default transfer values.
        f1 {
            name-format "cFlowd-py69Ni69-0-%D_%T-%l_%N.bcp.bi.gz";
            data-format flow-compressed; # The default compressed output format.
            transfer timeout 1800 record-level 1000000; # Here are configured values.
        }
    }
    interface-map { # Allows you to map interfaces to flow collector interfaces.
        file-specification def-spec; # Flows generated for default traffic are sent to the
        collector cp-7/0/0; # default flow collector interface "cp-7/0/0".
        so-0/1/0.0 { # Flows generated for the so-0/1/0 interface are sent
            collector cp-6/0/0; # to cp-6/0/0, and the file-specification used is
        } # "default."
        so-3/0/0.0 { # Flows generated for the so-3/0/0 interface are sent
            file-specification f1; # to cp-6/0/0, and the file-specification used is "f1."
            collector cp-6/0/0;
        }
        so-3/1/0.0; # Because no settings are defined, flows generated for this
    } # interface use interface cp-7/0/0 and the default file specification.
    transfer-log-archive { # Sends flow collector interface log files to an FTP server.
        filename-prefix so_3_0_0_log;
        maximum-age 15;
        archive-sites {
            "ftp://user@192.168.56.89//tmp/transfers/" {
                password "$9$IFaEyevMXNVsWLsgaU.m6/C";
            }
        }
    }
}
]

```

```
}  
}
```


CHAPTER 3

Configuration Statements

analyzer-address

Syntax	<code>analyzer-address <i>address</i>;</code>
Hierarchy Level	[edit services flow-collector]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure an IP address for the packet analyzer that overrides the default value.
Options	<i>address</i> —IP address for packet analyzer.
Usage Guidelines	See “Configuring a Packet Analyzer” on page 4.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

analyzer-id

Syntax	<code>analyzer-id <i>name</i>;</code>
Hierarchy Level	[edit services flow-collector]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure an identifier for the packet analyzer that overrides the default value.
Options	<i>name</i> —Identifier for packet analyzer.
Usage Guidelines	See “Configuring a Packet Analyzer” on page 4.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

archive-sites

Syntax	<pre>archive-sites { ftp:url { password "password"; username username; } }</pre>
Hierarchy Level	[edit services flow-collector transfer-log-archive]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the destination for transfer logs.
Options	The statements are explained separately.
Usage Guidelines	See “Configuring Transfer Logs” on page 5 .
Required Privilege Level	interface—To view this statement in the configuration.

collector

Syntax	<pre>collector interface-name;</pre>
Hierarchy Level	[edit services flow-collector interface-map]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the default flow collector interface for interface mapping.
Options	collector interface-name —Default flow collector interface.
Usage Guidelines	See “Configuring Interface Mappings” on page 5 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

data-format

Syntax	<code>data-format <i>format</i>;</code>
Hierarchy Level	[edit services flow-collector file-specification variant <i>variant-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the data format for a specific file format variant.
Options	<i>format</i> —Data format. Specify flow-compressed as the data format.
Usage Guidelines	See “Configuring File Formats” on page 4 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

destinations

Syntax	<pre>destinations { ftp:url { password "<i>password</i>"; } }</pre>
Hierarchy Level	[edit services flow-collector]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the primary and secondary destination FTP servers.
Options	The statements are explained separately.
Usage Guidelines	See “Configuring Destination FTP Servers for Flow Records” on page 3 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

filename-prefix

Syntax	<code>filename-prefix <i>prefix</i>;</code>
Hierarchy Level	[edit services flow-collector transfer-log-archive]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the filename prefix for log files.
Options	<i>prefix</i> —Filename identifier.
Usage Guidelines	See “Configuring Transfer Logs” on page 5 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

file-specification (File Format)

Syntax	<pre>file-specification { variant <i>variant-number</i> { data-format <i>format</i>; name-format <i>format</i>; transfer { record-level <i>number</i>; timeout <i>seconds</i>; } } }</pre>
Hierarchy Level	[edit services flow-collector]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the file format for the flow collection files.
Options	The statements are explained separately.
Usage Guidelines	See “Configuring File Formats” on page 4 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

file-specification (Interface Mapping)

Syntax	file-specification { variant <i>variant-number</i> ; }
Hierarchy Level	[edit services flow-collector interface-map]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the default file specification for interface mapping.
Options	variant <i>variant-number</i> —Default file format variant.
Usage Guidelines	See “Configuring Interface Mappings” on page 5 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

flow-collector

```
Syntax  flow-collector {  
        analyzer-address address;  
        analyzer-id name;  
        destinations {  
            ftp:url {  
                password "password";  
            }  
        }  
        file-specification {  
            variant variant-number {  
                data-format format;  
                name-format format;  
                transfer {  
                    record-level number;  
                    timeout seconds;  
                }  
            }  
        }  
        interface-map {  
            collector interface-name;  
            file-specification variant-number;  
            interface-name {  
                collector interface-name;  
                file-specification variant-number;  
            }  
        }  
        retry number;  
        retry-delay seconds;  
        transfer-log-archive {  
            archive-sites {  
                ftp:url {  
                    password "password";  
                    username username;  
                }  
            }  
            filename-prefix prefix;  
            maximum-age minutes;  
        }  
    }
```

Hierarchy Level [edit services]

Release Information Statement introduced before Junos OS Release 7.4.

Description Define the flow collection.

Options The statements are explained separately.

Usage Guidelines See the topics in Flow Collection.

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.

ftp (Flow Collector Files)

Syntax	<code>ftp:url;</code>
Hierarchy Level	[edit services flow-collector destination]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the primary and secondary destination FTP server addresses.
Options	<p><code>url</code>—FTP server address. The URL can include the following macros, typed in braces:</p> <ul style="list-style-type: none">• <code>{%D}</code>—Date• <code>{%T}</code>—Time when the file is created• <code>{%I}</code>—Description string for the logical interface configured using the <code>collector interface-name</code> statement at the [edit services flow-collector interface-map] hierarchy• <code>{%N}</code>—Unique, sequential number for each new file created• <code>{am_pm}</code>—AM or PM• <code>{date}</code>—Current date using the <code>{year}</code> <code>{month}</code> <code>{day}</code> macros• <code>{day}</code>—From 01 through 31• <code>{day_abbrev}</code>—Sun through Sat• <code>{day_full}</code>—Sunday through Saturday• <code>{generation number}</code>—Unique, sequential number for each new file created• <code>{hour_12}</code>—From 01 through 12• <code>{hour_24}</code>—From 00 through 23• <code>{ifalias}</code>—Description string for the logical interface configured using the <code>collector</code> statement at the [edit services flow-collector interface-map] hierarchy• <code>{minute}</code>—From 00 through 59• <code>{month}</code>—From 01 through 12• <code>{month_abbrev}</code>—Jan through Dec• <code>{month_full}</code>—January through December• <code>{num_zone}</code>—From -2359 to +2359; this macro is not supported• <code>{second}</code>—From 00 through 60• <code>{time}</code>—Time the file is created, using the <code>{hour_24}</code> <code>{minute}</code> <code>{second}</code> macros• <code>{time_zone}</code>—Time zone code name of the locale; for example, <code>gmt</code> (this macro is not supported).• <code>{year}</code>—In the format YYYY; for example, 1970

- {year_abbr}—From 00 through 99

Usage Guidelines See “[Configuring Destination FTP Servers for Flow Records](#)” on page 3.

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

ftp (Transfer Log Files)

Syntax `ftp:url;`

Hierarchy Level [edit services flow-collector [transfer-log-archive archive-sites](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description Specify the primary and secondary destination FTP server addresses.

Options *url*—FTP server address.

Usage Guidelines See “[Configuring Transfer Logs](#)” on page 5.

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

interface-map

Syntax

```
interface-map {
  collector interface-name;
  file-specification variant-number;
  interface-name {
    collector interface-name;
    file-specification variant-number;
  }
}
```

Hierarchy Level [edit services flow-collector]

Release Information Statement introduced before Junos OS Release 7.4.

Description Match an input interface with a flow collector interface and apply the preset file specifications to the input interface.

Options The statements are explained separately.

Usage Guidelines See “[Configuring Interface Mappings](#)” on page 5.

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

maximum-age

Syntax	maximum-age <i>minutes</i> ;
Hierarchy Level	[edit services flow-collector transfer-log-archive]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Maximum age of transfer log file.
Options	maximum-age <i>minutes</i> —Transfer log file age. Range: 1 through 360
Usage Guidelines	See “Configuring Transfer Logs” on page 5 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

name-format

Syntax	<code>name-format "format";</code>
Hierarchy Level	[edit services flow-collector file-specification variant <i>variant-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the name format for a specific file format. The files may include supported macros. Use macros to organize files on the external machine to which they are exported from the collector PIC.
Options	<p>format—Specify the filename format, within quotation marks. The name format can include the following macros, typed in braces:</p> <ul style="list-style-type: none"> • {%D}—Date • {%T}—Time when the file is created • {%I}—Description string for the logical interface configured using the collector statement at the [edit services flow-collector interface-map] hierarchy level • {%N}—Unique, sequential number for each new file created • {am_pm}—AM or PM • {date}—Current date using the {year} {month} {day} macros • {day}—From 01 through 31 • {day_abbrev}—Sun through Sat • {day_full}—Sunday through Saturday • {generation number}—Unique, sequential number for each new file created • {hour_12}—From 01 through 12 • {hour_24}—From 00 through 23 • {ifalias}—Description string for the logical interface configured using the collector statement at the [edit services flow-collector interface-map] hierarchy level • {minute}—From 00 through 59 • {month}—From 01 through 12 • {month_abbrev}—Jan through Dec • {month_full}—January through December • {num_zone}—From -2359 through +2359; this macro is not supported • {second}—From 00 through 60 • {time}—Time the file is created, using the {hour_24} {minute} {second} macros • {time_zone}—Time zone code name of the locale; for example, gmt (this macro is not supported).

- **{year}**—In the format YYYY; for example, 1970
- **{year_abbr}**—From 00 through 99

Usage Guidelines See [“Configuring File Formats” on page 4](#).

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

password (Flow Collector File Servers)

Syntax password "*password*";

Hierarchy Level [edit services flow-collector destination ftp:url]

Release Information Statement introduced before Junos OS Release 7.4.

Description Specify the primary and secondary destination FTP server password.

Options *password*—FTP server password.

Usage Guidelines See [“Configuring Destination FTP Servers for Flow Records” on page 3](#).

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

password (Transfer Log File Servers)

Syntax password "*password*";

Hierarchy Level [edit services flow-collector transfer-log-archive archive-sites]

Release Information Statement introduced before Junos OS Release 7.4.

Description Specify the primary and secondary destination FTP server password.

Options *password*—FTP server password.

Usage Guidelines See [“Configuring Transfer Logs” on page 5](#).

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

retry

Syntax	<code>retry <i>number</i>;</code>
Hierarchy Level	[edit services flow-collector]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the maximum number of attempts the flow collector interface will make to transfer log files to the FTP server.
Options	<i>number</i> —Maximum number of transfer retry attempts. Range: 0 through 10
Usage Guidelines	See “Configuring Retry Attempts” on page 6 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

retry-delay

Syntax	<code>retry-delay <i>seconds</i>;</code>
Hierarchy Level	[edit services flow-collector]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the amount of time the flow collector interface waits between retry attempts.
Options	<i>seconds</i> —Amount of time between transfer retry attempts. Range: 0 through 60
Usage Guidelines	See “Configuring Retry Attempts” on page 6 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

transfer

Syntax	<pre>transfer { record-level <i>number</i>; timeout <i>seconds</i>; }</pre>
Hierarchy Level	[edit services flow-collector file-specification variant <i>variant-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify when to send the flow collection file. The file is sent when either of the two conditions is met.
Options	record-level <i>number</i> —Number of flow collection files collected. timeout <i>seconds</i> —Timeout duration.
Usage Guidelines	See “Configuring File Formats” on page 4 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

transfer-log-archive

Syntax	<pre>transfer-log-archive { archive-sites { ftp:<i>url</i> { password "<i>password</i>"; username <i>username</i>; } } filename-prefix <i>prefix</i>; maximum-age <i>minutes</i>; }</pre>
Hierarchy Level	[edit services flow-collector]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the filename prefix, maximum age, and destination FTP server for log files containing the transfer activity history for a flow collector interface.
Options	The statements are explained separately.
Usage Guidelines	See “Configuring Transfer Logs” on page 5 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

username

Syntax	<code>username <i>user-name</i>;</code>
Hierarchy Level	[edit services flow-collector transfer-log-archive archive-sites]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the username for the transfer log server.
Options	<i>username</i> —FTP server username.
Usage Guidelines	See “Configuring Transfer Logs” on page 5 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

variant

Syntax	<pre>variant <i>variant-number</i> { data-format <i>format</i>; name-format <i>format</i>; transfer { record-level <i>number</i>; timeout <i>seconds</i>; } }</pre>
Hierarchy Level	[edit services flow-collector file-specification]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure a variant of the file format.
Options	The statements are explained separately.
Usage Guidelines	See “Configuring File Formats” on page 4 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

PART 2

Administration

- [Flow Collection Operational Mode Commands on page 35](#)
- [Flow Collector Interface Operational Mode Commands on page 51](#)

CHAPTER 4

Flow Collection Operational Mode Commands

clear services flow-collector statistics

Syntax	clear services flow-collector statistics (all interface <i>interface-name</i>)
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M40e, M160, and M320 routers and T Series routers only) Clear statistics for one flow collector interface or for all flow collector interfaces.
Options	all —Clear statistics for all configured flow collector interfaces. interface <i>interface-name</i> —Clear statistics for the specified flow collector interface (<i>cp-fpc/pic/port</i>).
Required Privilege Level	network
List of Sample Output	clear services flow-collector statistics on page 36
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear services flow-collector statistics	user@host> clear services flow-collector statistics interface cp-5/0/0 Flow collector interface: cp-5/0/0 Interface state: Collecting flows Statistics cleared successfully
---	--

request services flow-collector change-destination primary interface

Syntax	request services flow-collector change-destination primary interface <i>cp-fpc/pic/port</i> <clear-files> <clear-logs> <immediately gracefully>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M40e, M160, and M320 routers and T Series routers only) Switch to the primary File Transfer Protocol (FTP) server that is configured as a flow collector.
Options	<p>none—Switch to the primary FTP server.</p> <p>cp-fpc/pic/port—Specify the flow collector interface name for the primary destination.</p> <p>clear-files—(Optional) Request clearing of existing data files in the FTP wait queue when the switch takes place.</p> <p>clear-logs—(Optional) Request clearing of existing logs when the switch takes place.</p> <p>immediately gracefully—(Optional) Specify whether you want the switch to take place immediately, or to affect only newly created files.</p>
Required Privilege Level	maintenance
List of Sample Output	request services flow-collector change-destination primary interface on page 37
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request services	user@host> request services flow-collector change-destination primary interface cp-6/0/0
flow-collector	Flow collector interface: cp-6/0/0
change-destination	Interface state: Collecting flows
primary interface	Destination change successful

request services flow-collector change-destination secondary interface

Syntax	<code>request services flow-collector change-destination secondary interface <i>cp-fpc/pic/port</i></code> <code><clear-files></code> <code><clear-logs></code> <code><immediately gracefully></code>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M40e, M160, and M320 routers and T Series routers only) Switch to the secondary File Transfer Protocol (FTP) server that is configured as a flow collector.
Options	<p>none—Switch to the secondary FTP server.</p> <p><i>cp-fpc/pic/port</i>—Specify the flow collector interface name (<i>cp-fpc/pic/port</i>) for the secondary destination.</p> <p>clear-files—(Optional) Request clearing of existing data files in the FTP wait queue when the switch takes place.</p> <p>clear-logs—(Optional) Request clearing of existing logs when the switch takes place.</p> <p>immediately gracefully—(Optional) Specify whether you want the switch to take place immediately, or to affect only newly created files.</p>
Required Privilege Level	maintenance
List of Sample Output	request services flow-collector change-destination secondary interface on page 38
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request services flow-collector change-destination secondary interface	<pre>user@host> request services flow-collector change-destination secondary interface cp-6/0/0 Flow collector interface: cp-6/0/0 Interface state: Collecting flows Destination change successful</pre>
---	---

request services flow-collector test-file-transfer

Syntax	<code>request services flow-collector test-file-transfer <i>filename</i> interface (all <i>cp-fpc/pic/port</i>) (channel-zero channel-one) (primary secondary)</code>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M40e, M160, and M320 routers and T Series routers only) Transfer a test file to the primary or secondary File Transfer Protocol (FTP) server that is configured as a flow collector. This command verifies that the output side of the flow collector interface is operating properly.
Options	<p><i>filename</i>—Name of the test file to transfer.</p> <p>interface all <i>cp-fpc/pic/port</i>—Transfer a test file of flows from all configured flow collector interfaces or from only the specified interface.</p> <p>channel-zero channel-one—Transfer a file from export channel 0 (unit 0) or channel 1 (unit 1) of the PIC.</p> <p>primary secondary—Transfer a file to the primary or secondary server configured as a flow collector.</p>
Required Privilege Level	network
List of Sample Output	request services flow-collector test-file-transfer on page 39
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

```

request services  user@router> request services flow-collector test-file-transfer test_file interface cp-7/1/0
flow-collector    channel-one primary
test-file-transfer

Flow collector interface: cp-7/1/0
Interface state: Collecting flows
Response: Test file transfer successfully scheduled

```

show services flow-collector file interface

Syntax	show services flow-collector file interface (all cp-fpc/pic/port) <detail extensive terse>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M40e, M160, and M320 routers and T Series routers only) Display information about flow collector files.
Options	<p>all cp-fpc/pic/port—Display file information for all configured flow collector interfaces or for the specified interface.</p> <p>detail extensive terse—(Optional) Display the specified level of output.</p>
Additional Information	No entries are displayed for files that have been successfully transferred.
Required Privilege Level	view
List of Sample Output	show services flow-collector file interface extensive on page 41
Output Fields	Table 3 on page 40 lists the output fields for the show services flow-collector file interface command. Output fields are listed in the approximate order in which they appear.

Table 3: show services flow-collector file interface Output Fields

Output Field	Output Field Description	Level of Output
Filename	Name of the file created on the flow collector interface.	All levels
Flows	Total number of collector flows for which records are present in the file.	none specified
Throughput	Throughput statistics: <ul style="list-style-type: none"> • Flow records—Number of flow records in the file. <ul style="list-style-type: none"> • per second—Average number of flow records per second. • peak per second—Peak number of flow records per second. • Uncompressed bytes—Total file size before compression. <ul style="list-style-type: none"> • per second—Average number of uncompressed bytes per second. • peak per second—Peak number of uncompressed bytes per second. • Compressed bytes—Total file size after compression. <ul style="list-style-type: none"> • per second—Average number of compressed bytes per second. • peak per second—Peak number of compressed bytes per second. 	extensive

Table 3: show services flow-collector file interface Output Fields (*continued*)

Output Field	Output Field Description	Level of Output
Status	<p>File statistics:</p> <ul style="list-style-type: none"> • Compressed blocks—(extensive output only) Data blocks in the file that have been compressed. The file is exported only when the compressed block count and block count become the same. • Block count—(extensive output only) Total number of data blocks in the file. • State—Processing state of the file. <ul style="list-style-type: none"> • Active—The flow collector interface is writing to the file. • Export 1—File export is in progress to the primary server. • Export 2—File export is in progress to the secondary server. • Wait—File is pending export. • Transfer attempts 0—Number of attempts made to transfer the file. If the file is successfully transferred in the first attempt, this field is 0. 	All levels

Sample Output

```

show services user@host> show services flow-collector file interface cp-3/2/0 extensive
flow-collector file Filename: cFlowd-py69Ni69-0-20031112_014301-so_3_0_0_0.bcp.bi.gz
interface extensive Throughput:
                        Flow records: 188365, per second: 238, peak per second: 287
                        Uncompressed bytes: 21267756, per second: 27007, peak per second: 32526
                        Compressed bytes: 2965643, per second: 0, peak per second: 22999
Status:
  Compressed blocks: 156, Block count: 156
  State: Active, Transfer attempts: 0

```

show services flow-collector input interface

Syntax	show services flow-collector input interface (all cp-fpc/pic/port) <detail extensive terse>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M40e, M160, and M320 routers and T Series routers only) Display the number of packets received by collector interfaces from monitoring interfaces.
Options	<p>all cp-fpc/pic/port—Display packets received by all configured flow collector interfaces or by the specified interface.</p> <p>detail extensive terse—(Optional) Display the specified level of output.</p>
Required Privilege Level	view
List of Sample Output	show services flow-collector input interface on page 42 show services flow-collector input interface all on page 42
Output Fields	Table 4 on page 42 lists the output fields for the show services flow-collector input interface command. Output fields are listed in the approximate order in which they appear.

Table 4: show services flow-collector input interface Output Fields

Output Field	Output Field Description
Interface	Name of the monitoring interface.
Packets	Number of packets traveling from the monitoring interface to the flow collector interface.
Bytes	Number of bytes traveling from the monitoring interface to the flow collector interface.

Sample Output

```

show services user@host> show services flow-collector input interface cp-3/2/0
flow-collector input
interface      Interface      Packets      Bytes
mo-3/0/0.0    mo-3/0/0.0    21706        32328568
mo-3/1/0.0    mo-3/1/0.0    21706        32329096

show services user@host> show services flow-collector input interface all
flow-collector input
interface all  Flow collector interface: cp-6/1/0
               Interface state: Collecting flows
               Interface      Packets      Bytes
mo-3/0/0.0    mo-3/0/0.0    274          416232
mo-3/3/0.0    mo-3/3/0.0    274          416184
mo-1/0/0.0    mo-1/0/0.0    274          416232
mo-1/1/0.0    mo-1/1/0.0    274          416232
mo-1/2/0.0    mo-1/2/0.0    274          416232

```


mo-1/3/0.0	274	416232
mo-3/1/0.0	274	416232
mo-4/0/0.0	274	416232
mo-4/1/0.0	274	416232
mo-4/2/0.0	274	416184
mo-4/3/0.0	274	416232
mo-5/0/0.0	274	416232
mo-5/1/0.0	274	416232
mo-5/2/0.0	274	416232
mo-5/3/0.0	274	416232
mo-6/0/0.0	274	416232

Flow collector interface: cp-6/3/0
Interface state: Collecting flows

show services flow-collector interface

Syntax	show services flow-collector interface (all cp-fpc/pic/port) <detail extensive terse>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M40e, M160, and M320 routers and T Series routers only) Display overall statistics for the flow collector application.
Options	<p>all cp-fpc/pic/port—Display statistics for flow collector applications on all interfaces or for the specified interface.</p> <p>detail extensive terse—(Optional) Display the specified level of output.</p>
Required Privilege Level	view
List of Sample Output	show services flow-collector interface all detail on page 47 show services flow-collector interface all extensive on page 47 show services flow-collector interface all terse on page 49 show services flow-collector interface extensive on page 49
Output Fields	Table 5 on page 44 lists the output fields for the show services flow-collector interface command. Output fields are listed in the approximate order in which they appear.

Table 5: show services flow-collector interface Output Fields

Output Field	Output Field Description	Level of Output
Flow collector interface	Name of the flow collector interface.	All levels
Interface state	Collecting flow state for the interface.	All levels
Packets	Total number of packets received.	none specified
Flows Uncompressed Bytes	Total uncompressed data size for all files created on this PIC.	none specified
Compressed Bytes	Total compressed data size for all files created on this PIC.	none specified
FTP bytes	Total number of bytes transferred to the FTP server, including those dropped during transfer.	none specified
FTP files	Total number of FTP transfers attempted by the server.	none specified
Memory	Bytes used on the PIC and bytes free.	detail extensive

Table 5: show services flow-collector interface Output Fields (*continued*)

Output Field	Output Field Description	Level of Output
Input	Incoming flow collector packet statistics: <ul style="list-style-type: none"> • Packets—Number of packets received on the unit. <ul style="list-style-type: none"> • per second—Average number of packets per second. • peak per second—Peak number of packets per second. • Bytes—Number of bytes received on the unit. <ul style="list-style-type: none"> • per second—Average number of bytes per second. • peak per second—Peak number of bytes per second. • Flow records processed—Number of records in the flow collector packets that were processed by the flow-collector interface. <ul style="list-style-type: none"> • per second—Average number of flow records processed per second. • peak per second—Peak number of flow records per second. 	detail extensive
Allocation	Data block statistics: <ul style="list-style-type: none"> • Blocks allocated—Total number of data blocks (containing flow records) allocated to the files created on this PIC. <ul style="list-style-type: none"> • per second—Average number of blocks allocated per second. • peak per second—Peak number of blocks allocated per second. • Blocks freed—Total number of data blocks freed. <ul style="list-style-type: none"> • per second—Average number of blocks freed per second. • peak per second—Peak number of blocks freed per second. • Blocks unavailable—Total number of data block requests denied, typically because of a memory shortage. <ul style="list-style-type: none"> • per second—Average number of blocks unavailable per second. • peak per second—Peak number of blocks unavailable per second. 	extensive
Files	File statistics, incremented since the PIC last booted: <ul style="list-style-type: none"> • Files created—Total number of files created on this PIC. • Files exported— Number of files successfully created and exported. • Files destroyed— (extensive output only) Number of files successfully exported and files dropped by the flow collection interface. 	detail extensive
Throughput	Throughput statistics: <ul style="list-style-type: none"> • Uncompressed bytes—Total uncompressed data size for all files created on this PIC. <ul style="list-style-type: none"> • per second—Average number of uncompressed bytes per second. • peak per second—Peak number of uncompressed bytes per second. • Compressed bytes—Total compressed data size for all files created on this PIC. <ul style="list-style-type: none"> • per second—Average number of compressed bytes per second. • peak per second—Peak number of compressed bytes per second. 	detail extensive

Table 5: show services flow-collector interface Output Fields (*continued*)

Output Field	Output Field Description	Level of Output
Packet drops	<p>Number of packets dropped for the following causes:</p> <ul style="list-style-type: none"> • No memory—Packets dropped because of insufficient memory. • Not IP—Packets dropped because they are not IP packets. • Not IPv4—Packets dropped because they are not IP version 4 packets. • Too small—Packets dropped because each packet was smaller than the size reported in its header. • Fragments—Packets dropped because of fragmentation. Fragments are not reassembled. • ICMP—Packets dropped because they are not ICMP packets. • TCP—Packets dropped because they are not TCP packets. • Unknown—Packets dropped because of undetermined causes. • Not Junos flow—Packets dropped because they are not interpreted by the Junos OS. The Junos OS interprets only IPv4, UDP cflowd version 5 packets. 	extensive
File transfer	<p>File transfer statistics:</p> <ul style="list-style-type: none"> • FTP bytes—Total number of bytes transferred to the FTP server, including those dropped during transfer. • FTP files—Total number of FTP transfers attempted by the server. • FTP failure—Total number of FTP failures encountered by the server. 	detail extensive
Flow collector interface	Physical interface acting as a flow collector.	detail
Export channel	<p>Export channel 0 is unit 0. Export channel 1 is unit 1. Flow receive channel is unit 2. Server status statistics are the following:</p> <ul style="list-style-type: none"> • Current server Primary or Secondary—Current FTP server being used. Value is • Primary server state—State of the server: <ul style="list-style-type: none"> • OK—Server is operating without problems. • FTP error—Server encountered an FTP protocol error while sending files. • Network error—Flow-collector interface has errors when contacting the primary FTP server. • Unknown—First file transfer has not been sent to the primary server. • Secondary server state—State of the server: <ul style="list-style-type: none"> • OK—Server is operating without errors. • FTP error—Server encountered an FTP protocol error while sending files. • Network error—Flow-collector interface has errors when contacting the secondary FTP server. • Unknown—First file transfer has not been sent to the secondary server. • Not configured—Secondary server is not configured. 	detail extensive

Sample Output

```

show services user@host> show services flow-collector interface all detail
flow-collector Flow collector interface: cp-6/1/0
interface all detail Interface state: Collecting flows
Memory:
    Used: 51452732, Free: 440329088
Input:
    Packets: 4384, per second: 0, peak per second: 156
    Bytes: 6659616, per second: 0, peak per second: 249695
    Flow records processed: 131070, per second: 0, peak per second: 4914
Files:
    Files created: 1, per second: 0, peak per second: 0
    Files exported: 1, per second: 0, peak per second: 0
Throughput:
    Uncompressed bytes: 13742307, per second: 0, peak per second: 593564
    Compressed bytes: 3786177, per second: 0, peak per second: 162826
File Transfer:
    FTP bytes: 3786247, per second: 0, peak per second: 378620
    FTP files: 1, per second: 0, peak per second: 0
    FTP failure: 0
Export channel: 0
    Current server: Primary
    Primary server state: OK, Secondary server state: OK
Export channel: 1
    Current server: Primary
    Primary server state: Unknown, Secondary server state: OK

Flow collector interface: cp-6/3/0
Interface state: Collecting flows
Memory:
    Used: 51452732, Free: 440329088
Input:
    Packets: 0, per second: 0, peak per second: 0
    Bytes: 0, per second: 0, peak per second: 0
    Flow records processed: 0, per second: 0, peak per second: 0
Files:
    Files created: 0, per second: 0, peak per second: 0
    Files exported: 0, per second: 0, peak per second: 0
Throughput:
    Uncompressed bytes: 0, per second: 0, peak per second: 0
    Compressed bytes: 0, per second: 0, peak per second: 0
File Transfer:
    FTP bytes: 70, per second: 0, peak per second: 6
    FTP files: 0, per second: 0, peak per second: 0
    FTP failure: 0
Export channel: 0
    Current server: Primary
    Primary server state: Unknown, Secondary server state: OK
Export channel: 1
    Current server: Primary
    Primary server state: Unknown, Secondary server state: OK

show services user@host> show services flow-collector interface all extensive
flow-collector Flow collector interface: cp-6/1/0
interface all extensive Interface state: Collecting flows
Memory:
    Used: 51452732, Free: 440329088
Input:
    Packets: 4384, per second: 0, peak per second: 156

```

Bytes: 6659616, per second: 0, peak per second: 249695
Flow records processed: 131070, per second: 0, peak per second: 4914

Allocation:
Blocks allocated: 108, per second: 0, peak per second: 0
Blocks freed: 108, per second: 0, peak per second: 10
Blocks unavailable: 0, per second: 0, peak per second: 0

Files:
Files created: 1, per second: 0, peak per second: 0
Files exported: 1, per second: 0, peak per second: 0
Files destroyed: 1, per second: 0, peak per second: 0

Throughput:
Uncompressed bytes: 13742307, per second: 0, peak per second: 593564
Compressed bytes: 3786177, per second: 0, peak per second: 162826

Packet drops:
No memory: 0, Not IP: 0
Not IPv4: 0, Too small: 0
Fragments: 0, ICMP: 0
TCP: 0, Unknown: 0
Not JUNOS flow: 0

File Transfer:
FTP bytes: 3786247, per second: 0, peak per second: 378620
FTP files: 1, per second: 0, peak per second: 0
FTP failure: 0

Export channel: 0
Current server: Primary
Primary server state: OK, Secondary server state: OK

Export channel: 1
Current server: Primary
Primary server state: Unknown, Secondary server state: OK

Flow collector interface: cp-6/3/0
Interface state: Collecting flows

Memory:
Used: 51452732, Free: 440329088

Input:
Packets: 0, per second: 0, peak per second: 0
Bytes: 0, per second: 0, peak per second: 0
Flow records processed: 0, per second: 0, peak per second: 0

Allocation:
Blocks allocated: 0, per second: 0, peak per second: 0
Blocks freed: 0, per second: 0, peak per second: 0
Blocks unavailable: 0, per second: 0, peak per second: 0

Files:
Files created: 0, per second: 0, peak per second: 0
Files exported: 0, per second: 0, peak per second: 0
Files destroyed: 0, per second: 0, peak per second: 0

Throughput:
Uncompressed bytes: 0, per second: 0, peak per second: 0
Compressed bytes: 0, per second: 0, peak per second: 0

Packet drops:
No memory: 0, Not IP: 0
Not IPv4: 0, Too small: 0
Fragments: 0, ICMP: 0
TCP: 0, Unknown: 0
Not JUNOS flow: 0

File Transfer:
FTP bytes: 70, per second: 0, peak per second: 6
FTP files: 0, per second: 0, peak per second: 0
FTP failure: 0

Export channel: 0
Current server: Primary

```

Primary server state: Unknown, Secondary server state: OK
Export channel: 1
Current server: Primary
Primary server state: Unknown, Secondary server state: OK

```

```

show services user@host> show services flow-collector interface all terse
flow-collector Flow collector interface: cp-6/1/0
interface all terse Interface state: Collecting flows

```

Packets	Bytes	Flows	Uncompressed Bytes	Compressed Bytes	FTP bytes	FTP files
4384	6659616	131070	13742307	3786177	3786247	1

```

Flow collector interface: cp-6/3/0
Interface state: Collecting flows

```

Packets	Bytes	Flows	Uncompressed Bytes	Compressed Bytes	FTP bytes	FTP files
0	0	0	0	0	70	0

```

show services user@host> show services flow-collector interface cp-5/2/0 extensive
flow-collector Flow collector interface: cp-5/2/0
interface extensive Interface state: Collecting flows
Memory:
  Used: 458311860, Free: 40810008
Input:
  Packets: 922629, per second: 2069, peak per second: 3266
  Bytes: 1376559252, per second: 3096940, peak per second: 4880051
  Flow records processed: 25764957, per second: 42564, peak per second: 98124
Allocation:
  Blocks allocated: 20862, per second: 31, peak per second: 72
  Blocks freed: 17161, per second: 40, peak per second: 202
  Blocks unavailable: 58786, per second: 652, peak per second: 1120
Files:
  Files created: 52, per second: 0, peak per second: 0
  Files exported: 42, per second: 0, peak per second: 0
  Files destroyed: 42, per second: 0, peak per second: 0
Throughput:
  Uncompressed bytes: 2592070401, per second: 7297307,
  peak per second: 8630023
  Compressed bytes: 659600068, per second: 1858458, peak per second: 2198471
Packet drops:
  No memory: 58786, Not IP: 0
  Not IPv4: 0, Too small: 0
  Fragments: 0, ICMP: 0
  TCP: 0, Unknown: 0
  Not JUNOS flow: 0
File Transfer:
  FTP bytes: 585981447, per second: 1313320, peak per second: 4857798
  FTP files: 48, per second: 0, peak per second: 0
  FTP failure: 8
Export channel: 0
  Current server: Primary
  Primary server state: FTP error, Secondary server state: Not configured
Export channel: 1
  Current server: Primary
  Primary server state: OK, Secondary server state: Not configured

```


CHAPTER 5

Flow Collector Interface Operational Mode Commands

show interfaces (Flow Collector)

Syntax	<pre>show interfaces <i>cp-fpc/pic/port:channel</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified flow collector interface.
Options	<p><i>cp-fpc/pic/port:channel</i>—Display standard status information about the specified flow collector interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces extensive (Flow Collector) on page 56
Output Fields	Table 6 on page 52 lists the output fields for the show interfaces (Flow Collector) command. Output fields are listed in the approximate order in which they appear.

Table 6: Flow Collector Show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical Interface	Name of the physical interface type.	All levels
Link	Status of the link: up or down .	All levels
Enabled	State of the interface type. Possible values are described in the “Enabled Devices” section under Common Output Fields Description.	All levels
Interface index	Physical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none

Table 6: Flow Collector Show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface.	All levels
Link-level type	Encapsulation type used on the physical interface.	All levels
MTU	Maximum Transmit Unit (MTU). Size of the largest packet to be transmitted.	All levels
Clocking	Reference clock source of the interface.	All levels
Speed	Network speed on the interface.	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under Common Output Fields Description.	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under Common Output Fields Description.	All levels
Link type	Data transmission type.	All levels
Link flags	Information about the link. Possible values are described in the "Link Flags" section under Common Output Fields Description.	All levels
Physical info	Information about the physical interface.	All levels
Hold-times	Current interface hold-time up and hold-time down. Value is in milliseconds.	detail extensive none
Current address	Configured MAC address.	detail extensive none
Hardware address	Media access control (MAC) address of the interface.	detail extensive none
Alternate link address	Backup link address.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. 	detail extensive

Table 6: Flow Collector Show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Input errors	<ul style="list-style-type: none"> • Errors—Input errors on the interface. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Frames received smaller than the runt threshold. • Giants—Frames received larger than the giant threshold. • Policed Discards—Frames that the incoming packet match code discarded because the frames did not recognize them or were not of interest. Usually, this field reports protocols that Junos does not support. • Resource errors—Sum of transmit drops. 	extensive
Output errors	<ul style="list-style-type: none"> • Carrier transitions —Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly, possibly once every 10 seconds, the cable, the remote system, or the interface is malfunctioning. • Errors—Sum of outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet dropped by the ASIC RED mechanism. • Resource errors—Sum of transmit drops. 	extensive
Logical Interface		
Logical interface	Name of the logical interface	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface; values are described in the “Logical Interface Flags” section under Common Output Fields Description.	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Traffic statistics	<p>Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. 	detail extensive

Table 6: Flow Collector Show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Protocol	Protocol family configured on the logical interface (such as iso or inet6).	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Route table in which this address exists; for example, Route table:0 refers to inet.0.	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under Common Output Fields Description.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under Common Output Fields Description.	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

```
show interfaces extensive (Flow Collector) user@host> show interfaces extensive cp-5/0/0
Physical interface: cp-5/0/0, Enabled, Physical link is Up
Interface index: 145, SNMP ifIndex: 52, Generation: 29
Type: Flow-collector, Link-level type: Flow-collection, MTU: 9192,
Clocking: Unspecified, Speed: 800mbps
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps 16384
Link type : Full-Duplex
Link flags : None
Physical info : Unspecified
Hold-times : Up 0 ms, Down 0 ms
Current address: Unspecified, Hardware address: Unspecified
Alternate link address: Unspecified
Last flapped : 2005-05-24 16:48:11 PDT (00:12:04 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 2041661287 0 bps
Output bytes : 3795049544 43816664 bps
Input packets: 1365534 0 pps
Output packets: 3865644 3670 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
Policed discards: 0, Resource errors: 0
Output errors:
Carrier transitions: 2, Errors: 0, Drops: 0, MTU errors: 0,
Resource errors: 0

Logical interface cp-5/0/0.0 (Index 74) (SNMP ifIndex 53) (Generation 28)
Flags: Point-To-Point SNMP-Traps Encapsulation: Flow-collection
Traffic statistics:
Input bytes : 1064651568
Output bytes : 37144290
Input packets: 711324
Output packets: 713672
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 1064651568 0 bps
Output bytes : 37144290 0 bps
Input packets: 711324 0 pps
Output packets: 713672 0 pps
Protocol inet, MTU: 9192, Generation: 39, Route table: 0
Flags: Receive-options, Receive-TTL-Exceeded
Addresses, Flags: Is-Preferred Is-Primary
Destination: 4.0.0.2, Local: 4.0.0.1, Broadcast: Unspecified,
Generation: 40

Logical interface cp-5/0/0.1 (Index 75) (SNMP ifIndex 54) (Generation 29)
Flags: Point-To-Point SNMP-Traps Encapsulation: Flow-collection
Traffic statistics:
Input bytes : 976793823
Output bytes : 34099481
Input packets: 652729
Output packets: 655127
Local statistics:
```

```

Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 976793823 0 bps
Output bytes : 34099481 0 bps
Input packets: 652729 0 pps
Output packets: 655127 0 pps
Protocol inet, MTU: 9192, Generation: 40, Route table: 0
Flags: Receive-options, Receive-TTL-Exceeded
Addresses, Flags: Is-Preferred Is-Primary
Destination: 4.1.1.2, Local: 4.1.1.1, Broadcast: Unspecified,
Generation: 42

Logical interface cp-5/0/0.2 (Index 80) (SNMP ifIndex 55) (Generation 30)
Flags: Point-To-Point SNMP-Traps Encapsulation: Flow-collection
Traffic statistics:
Input bytes : 0
Output bytes : 3723079376
Input packets: 0
Output packets: 2495372
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 3723079376 43816664 bps
Input packets: 0 0 pps
Output packets: 2495372 3670 pps
Protocol inet, MTU: 9192, Generation: 41, Route table: 0
Flags: Receive-options, Receive-TTL-Exceeded
Addresses, Flags: Is-Preferred Is-Primary
Destination: 4.2.2.2, Local: 4.2.2.1, Broadcast: Unspecified,
Generation: 44

Logical interface cp-5/0/0.16383 (Index 81) (SNMP ifIndex 56) (Generation 31)
...
```


PART 3

Index

- [Index on page 61](#)

Index

Symbols

#, comments in configuration statements.....	xii
(), in syntax descriptions.....	xii
< >, in syntax descriptions.....	xii
[], in configuration statements.....	xii
{ }, in configuration statements.....	xii
(pipe), in syntax descriptions.....	xii

A

adaptive-services-pics statement	
usage guidelines.....	6
analyzer-address statement.....	17
usage guidelines.....	4
analyzer-id statement.....	17
usage guidelines.....	4
archive-sites statement.....	18
usage guidelines.....	5

B

braces, in configuration statements.....	xii
brackets	
angle, in syntax descriptions.....	xii
square, in configuration statements.....	xii

C

clear services flow-collector statistics	
command.....	36
collector statement.....	18
usage guidelines.....	5
collector-pic statement	
usage guidelines.....	6
comments, in configuration statements.....	xii
configuration	
flow collector interface.....	9
conventions	
text and syntax.....	xi
curly braces, in configuration statements.....	xii
customer support.....	xiii
contacting JTAC.....	xiii

D

data-format statement.....	19
usage guidelines.....	4
destinations statement	
flow collection.....	19
usage guidelines.....	3
documentation	
comments on.....	xiii

E

enable flow collection mode.....	6
----------------------------------	---

F

file-specification statement	
usage guidelines.....	4, 5
filename-prefix statement.....	20
usage guidelines.....	5
flow collector	
analyzer configuration.....	4
destination configuration.....	3
example configuration.....	9
file format configuration.....	4
interface mapping.....	5
transfer log.....	5
flow collector interfaces	
status information, displaying.....	52
flow collector services	
interface files, displaying.....	40
packets received, displaying.....	42
primary server, switching to.....	37
secondary server, switching to.....	38
statistics	
displaying.....	44
interface, clearing.....	36
test file, transferring.....	39
flow-collector statement.....	22
usage guidelines.....	6
font conventions.....	xi
ftp statement	
usage guidelines.....	3, 5

I

interface-map statement.....	25
usage guidelines.....	5

M

manuals	
comments on.....	xiii

maximum-age statement.....	26
usage guidelines.....	5

N

name-format statement.....	27
usage guidelines.....	4

P

parentheses, in syntax descriptions.....	xii
password statement	
usage guidelines.....	3, 5

R

request services flow-collector change-destination	
primary interface command.....	37
request services flow-collector change-destination	
secondary interface command.....	38
request services flow-collector test-file-transfer	
command.....	39
retry statement.....	29
usage guidelines.....	6
retry-delay statement.....	29
usage guidelines.....	6

S

send cflowd records to flow collector.....	6
show interfaces (Flow Collector) command.....	52
show services flow-collector file interface	
command.....	40
show services flow-collector input interface	
command.....	42
show services flow-collector interface	
command.....	44
statement	
services	
usage guidelines.....	6
support, technical See technical support	
syntax conventions.....	xi

T

technical support	
contacting JTAC.....	xiii
transfer statement.....	30
usage guidelines.....	4
transfer-log-archive statement.....	30
usage guidelines.....	5

U

username statement	
flow collection.....	31
usage guidelines.....	5

V

variant statement.....	31
usage guidelines.....	4