

# Aggregated Ethernet Interfaces



---

Published: 2013-02-14

Juniper Networks, Inc.  
1194 North Mathilda Avenue  
Sunnyvale, California 94089  
USA  
408-745-2000  
www.juniper.net

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

*Aggregated Ethernet Interfaces*  
Copyright © 2013, Juniper Networks, Inc.  
All rights reserved.

The information in this document is current as of the date on the title page.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

About the Documentation . . . . .	xiii
Documentation and Release Notes . . . . .	xiii
Supported Platforms . . . . .	xiii
Using the Examples in This Manual . . . . .	xiii
Merging a Full Example . . . . .	xiv
Merging a Snippet . . . . .	xiv
Documentation Conventions . . . . .	xv
Documentation Feedback . . . . .	xvii
Requesting Technical Support . . . . .	xvii
Self-Help Online Tools and Resources . . . . .	xvii
Opening a Case with JTAC . . . . .	xviii

## Part 1

### Chapter 1

## Overview

<b>Aggregated Ethernet Interfaces . . . . .</b>	<b>3</b>
Aggregated Ethernet Interfaces Overview . . . . .	3
Platform Support for Aggregated Ethernet Interfaces . . . . .	3
Configuration Guidelines for Aggregated Ethernet Interfaces . . . . .	4
Active-Active Bridging and VRRP over IRB Functionality on MX Series Routers	
Overview . . . . .	5
Data Traffic Forwarding Rules . . . . .	8
MAC Address Management . . . . .	10
MAC Aging . . . . .	11
Layer 3 Routing . . . . .	11
Address Resolution Protocol Active-Active MC-LAG Support	
Methodology . . . . .	11
IGMP Snooping on Active-Active MC-LAG . . . . .	11
Up and Down Event Handling . . . . .	13
Interchassis Control Protocol . . . . .	14
Interchassis Control Protocol Message . . . . .	14
IGMP Snooping in MC-LAG Active-Active on MX Series Routers Overview . . . . .	14
IGMP Snooping in MC-LAG Active-Active on MX Series Routers	
Functionality . . . . .	15
Typically Supported Network Topology for IGMP Snooping with MC-LAG	
Active-Active Bridging . . . . .	16
Control Plane State Updates Triggered by Packets Received on Remote	
Chassis . . . . .	16
Data Forwarding . . . . .	17
Pure Layer 2 Topology Without Integrated Routing and Bridging . . . . .	18
Qualified Learning . . . . .	18
Data Forwarding with Qualified Learning . . . . .	19

Static Groups on Single Homed Interfaces . . . . .	19
Router Facing Interfaces as Multichassis Links . . . . .	19

## Part 2

### Chapter 2

## Configuration

<b>Aggregated Ethernet Interfaces . . . . .</b>	<b>23</b>
Configuring an Aggregated Ethernet Interface . . . . .	23
Example: Configuring Aggregated Ethernet Interfaces . . . . .	25
Configuring Junos OS for Supporting Aggregated Devices . . . . .	26
Configuring Virtual Links for Aggregated Devices . . . . .	26
Configuring LACP Link Protection at the Chassis Level . . . . .	26
Enabling LACP Link Protection . . . . .	27
Configuring System Priority . . . . .	28
Configuring the Maximum Links Limit . . . . .	28
Deleting an Aggregated Ethernet Interface . . . . .	28
Configuring Multichassis Link Aggregation . . . . .	29
Configuring Active-Active Bridging and VRRP over IRB in Multichassis Link	
Aggregation on MX Series Routers . . . . .	30
Configuring MC-LAG . . . . .	31
Configuring Interchassis Link Label . . . . .	31
Configuring Multiple Chassis . . . . .	32
Configuring Service ID . . . . .	32
Configuring IGMP Snooping for Active-Active MC-LAG . . . . .	34
Configuring IGMP Snooping in MC-LAG Active-Active on MX Series Routers . . . .	35
Example: Configuring IGMP Snooping in MC-LAG Active-Active on MX Series	
Routers . . . . .	36
Configuring Aggregated Ethernet Link Protection . . . . .	51
Configuring Link Protection for Aggregated Ethernet Interfaces . . . . .	52
Configuring Primary and Backup Links for Link Aggregated Ethernet	
Interfaces . . . . .	52
Reverting Traffic to a Primary Link When Traffic is Passing Through a Backup	
Link . . . . .	52
Disabling Link Protection for Aggregated Ethernet Interfaces . . . . .	52
Example: Configuring Aggregated Ethernet Link Protection . . . . .	52
Configuring the Number of Aggregated Ethernet Interfaces on the Device . . . . .	53
Configuring Aggregated Ethernet LACP . . . . .	54
Configuring the LACP Interval . . . . .	55
Configuring LACP Link Protection . . . . .	56
Enabling LACP Link Protection . . . . .	56
Configuring LACP System Priority . . . . .	57
Configuring LACP System Identifier . . . . .	58
Configuring LACP administrative Key . . . . .	58
Configuring LACP Port Priority . . . . .	58
Tracing LACP Operations . . . . .	59
LACP Limitations . . . . .	59
Example: Configuring Aggregated Ethernet LACP . . . . .	59
Configuring Tagged Aggregated Ethernet Interfaces . . . . .	61
Configuring Untagged Aggregated Ethernet Interfaces . . . . .	61
Example: Configuring Untagged Aggregated Ethernet Interfaces . . . . .	62

	Configuring Aggregated Ethernet Link Speed . . . . .	63
	Configuring Aggregated Ethernet Minimum Links . . . . .	64
	Configuring Multicast Statistics Collection on Aggregated Ethernet Interfaces . . . . .	64
	Configuring Scheduler on Aggregated Ethernet Interfaces Without Link Protection . . . . .	65
	Configuring Symmetrical Load Balancing on an 802.3ad Link Aggregation Group on MX Series Routers . . . . .	66
	Symmetrical Load Balancing on an 802.3ad LAG on MX Series Routers Overview . . . . .	66
	Configuring Symmetric Load Balancing on an 802.3ad LAG on MX Series Routers . . . . .	67
	Example Configurations . . . . .	70
	Example Configurations of Chassis Wide Settings . . . . .	70
	Example Configurations of Per-Packet-Forwarding-Engine Settings . . . . .	70
<b>Chapter 3</b>	<b>Network Interfaces Configuration Statements and Hierarchy . . . . .</b>	<b>71</b>
	[edit chassis] Hierarchy Level . . . . .	71
	[edit interfaces] Hierarchy Level . . . . .	72
	[edit logical-systems] Hierarchy Level . . . . .	88
	[edit protocols connections] Hierarchy Level . . . . .	93
	[edit protocols dot1x] Hierarchy Level . . . . .	94
	[edit protocols iccp] Hierarchy Level . . . . .	94
	[edit protocols lacp] Hierarchy Level . . . . .	95
	[edit protocols oam] Hierarchy Level . . . . .	95
	[edit protocols ppp] Hierarchy Level . . . . .	97
	[edit protocols pppoe] Hierarchy Level . . . . .	97
	[edit protocols protection-group] Hierarchy Level . . . . .	98
	[edit protocols vrrp] Hierarchy Level . . . . .	99
	[edit system processes] Hierarchy Level . . . . .	99
<b>Chapter 4</b>	<b>Statement Summary . . . . .</b>	<b>101</b>
	802.3ad . . . . .	101
	aggregated-devices . . . . .	102
	aggregated-ether-options . . . . .	103
	chassis . . . . .	104
	device-count . . . . .	104
	disable (Link Protection) . . . . .	105
	ethernet (Chassis) . . . . .	105
	fast-aps-switch . . . . .	106
	igmp-snooping . . . . .	107
	inner-tag-protocol-id . . . . .	108
	inner-vlan-id . . . . .	109
	interfaces . . . . .	110
	lacp (802.3ad) . . . . .	111
	lacp (Aggregated Ethernet) . . . . .	112
	link-protection . . . . .	113
	link-speed (Aggregated Ethernet) . . . . .	114
	link-speed (Aggregated SONET/SDH) . . . . .	115

mc-ae .....	116
maximum-links .....	117
minimum-links .....	118
multicast-router-interface (IGMP Snooping) .....	119
multi-chassis-protection .....	120
non-revertive (Interfaces) .....	121
peer .....	122
periodic .....	123
pop-pop .....	124
pop-swap .....	124
port-priority .....	125
push-push .....	125
revertive .....	126
swap-push .....	126
swap-swap .....	127
system-id .....	127
system-priority .....	128
traceoptions (LACP) .....	129
vlan-id (VLAN ID to Be Bound to a Logical Interface) .....	130
vlan-tagging .....	131

## Part 3

### Chapter 5

## Administration

<b>Monitoring Commands .....</b>	<b>135</b>
show interfaces (Aggregated Ethernet) .....	136
show interfaces demux0 (Demux Interfaces) .....	146
show interfaces diagnostics optics (Gigabit Ethernet, 10-Gigabit Ethernet, and 100 Gigabit Ethernet) .....	156
show interfaces (Fast Ethernet) .....	173
show interfaces (10-Gigabit Ethernet) .....	190
show interfaces interface-set (Ethernet Interface Set) .....	217
show interfaces interface-set queue .....	220
show interfaces irb .....	229
show l2-learning instance .....	236
show lacp interfaces .....	238
show interfaces mac-database (Gigabit Ethernet) .....	242
show interfaces mc-ae .....	247
show oam ethernet connectivity-fault-management delay-statistics .....	249
show oam ethernet connectivity-fault-management forwarding-state .....	253
show oam ethernet connectivity-fault-management interfaces .....	257
show oam ethernet connectivity-fault-management linktrace path-database .....	267
show oam ethernet connectivity-fault-management mep-database .....	269
show oam ethernet connectivity-fault-management mep-statistics .....	279
show oam ethernet connectivity-fault-management path-database .....	290
show oam ethernet evc .....	292
show oam ethernet link-fault-management .....	293
show oam ethernet lmi .....	299
show oam ethernet lmi statistics .....	301

	show protection-group ethernet-ring aps . . . . .	303
	show protection-group ethernet-ring data-channel . . . . .	305
	show protection-group ethernet-ring interface . . . . .	307
	show protection-group ethernet-ring node-state . . . . .	310
	show protection-group ethernet-ring statistics . . . . .	313
	show protection-group ethernet-ring vlan . . . . .	316
<b>Chapter 6</b>	<b>Command Summary . . . . .</b>	<b>319</b>
	Ethernet Interface Operational Mode Commands . . . . .	319
	VRRP Operational Mode Commands . . . . .	324
<b>Part 4</b>	<b>Troubleshooting</b>	
<b>Chapter 7</b>	<b>Ethernet . . . . .</b>	<b>327</b>
	tracertoe ethernet . . . . .	328
	Tracing PPPoE Operations . . . . .	329
	Configuring the PPPoE Trace Log Filename . . . . .	330
	Configuring the Number and Size of PPPoE Log Files . . . . .	330
	Configuring Access to the PPPoE Log File . . . . .	331
	Configuring a Regular Expression for PPPoE Lines to Be Logged . . . . .	331
	Configuring the PPPoE Tracing Flags . . . . .	331
	Troubleshooting PPPoE Service Name Tables . . . . .	331
	Verifying a PPPoE Configuration . . . . .	333
<b>Chapter 8</b>	<b>Interface Diagnostics . . . . .</b>	<b>335</b>
	Interface Diagnostics . . . . .	335
	Configuring Loopback Testing . . . . .	335
	Interface Diagnostics . . . . .	337
	Starting and Stopping a BERT Test . . . . .	341
	Example: Configuring Bit Error Rate Testing . . . . .	341
<b>Part 5</b>	<b>Index</b>	
	Index . . . . .	345





# List of Figures

<b>Part 1</b>	<b>Overview</b>	
<b>Chapter 1</b>	<b>Aggregated Ethernet Interfaces</b> .....	<b>3</b>
	Figure 1: Single Multichassis Link .....	5
	Figure 2: Dual Multichassis Link .....	6
	Figure 3: Interchassis Data Link Between Active-Active Nodes .....	6
	Figure 4: Active-Active MC-LAG with Single MC-LAG .....	7
	Figure 5: Active-Active MC-LAG with Multiple Nodes on a Single Multichassis Link .....	7
	Figure 6: MC-LAG Device and Single-Homed Client .....	8
	Figure 7: Loop Caused by the ICL Links .....	10
	Figure 8: Multicast Topology with Source Connected via Layer 3 .....	12
	Figure 9: Multicast Topology with Source Connected via MC-Link .....	13
	Figure 10: Typical Network Over Which Active-Active Is Supported .....	16
	Figure 11: Layer 2 Configuration Without Integrated Routing and Bridging .....	18
<b>Part 2</b>	<b>Configuration</b>	
<b>Chapter 2</b>	<b>Aggregated Ethernet Interfaces</b> .....	<b>23</b>
	Figure 12: N1 and N2 for the Same Service with Same Service ID .....	34
	Figure 13: Bridge Domain with Logical Interfaces from Two MC-AE Interfaces . . .	34
	Figure 14: IGMP Snooping in MC-LAG Active-Active on MX Series Routers .....	38
	Figure 15: Symmetric Load Balancing on an 802.3ad LAG on MX Series Routers .....	67



# List of Tables

	<b>About the Documentation</b> . . . . .	<b>xiii</b>
	Table 1: Notice Icons . . . . .	xv
	Table 2: Text and Syntax Conventions . . . . .	xv
<b>Part 2</b>	<b>Configuration</b>	
<b>Chapter 2</b>	<b>Aggregated Ethernet Interfaces</b> . . . . .	<b>23</b>
	Table 3: Untagged Aggregated Ethernet and LACP Support by PIC and Platform . . . . .	61
<b>Part 3</b>	<b>Administration</b>	
<b>Chapter 5</b>	<b>Monitoring Commands</b> . . . . .	<b>135</b>
	Table 4: show interfaces (Aggregated Ethernet) Output Fields . . . . .	136
	Table 5: Demux show interfaces Output Fields . . . . .	146
	Table 6: 10-Gigabit Ethernet DWDM and DWDM OTN PICs show interfaces diagnostics optics Output Fields . . . . .	157
	Table 7: Gigabit Ethernet Bidirectional SFP Optics show interfaces diagnostics optics Output Fields . . . . .	158
	Table 8: Gigabit Ethernet SFP show interfaces diagnostics Output Fields . . . . .	160
	Table 9: 10-Gigabit Ethernet Transceivers show interfaces diagnostics optics Output Fields . . . . .	163
	Table 10: 10-Gigabit Ethernet XFP Transceivers show interfaces diagnostics optics Output Fields . . . . .	165
	Table 11: show interfaces Fast Ethernet Output Fields . . . . .	173
	Table 12: show interfaces Gigabit Ethernet Output Fields . . . . .	191
	Table 13: Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type . . . . .	205
	Table 14: Ethernet show interfaces interface-set Output Fields . . . . .	217
	Table 15: Ethernet show interfaces interface-set queue Output Fields . . . . .	221
	Table 16: show interfaces irb Output Fields . . . . .	229
	Table 17: show l2-learning instance Output Fields . . . . .	236
	Table 18: show lacp interfaces Output Fields . . . . .	238
	Table 19: show interfaces mac-database Output Fields . . . . .	242
	Table 20: show interfaces mc-ae Output Fields . . . . .	247
	Table 21: show oam ethernet connectivity-fault-management delay-statistics and mep-statistics Output Fields . . . . .	250
	Table 22: show oam ethernet connectivity-fault-management forwarding-state Output Fields . . . . .	253
	Table 23: show oam ethernet connectivity-fault-management interfaces Output Fields . . . . .	258

	Table 24: show oam ethernet connectivity-fault-management linktrace path-database Output Fields . . . . .	267
	Table 25: show oam ethernet connectivity-fault-management mep-database Output Fields . . . . .	270
	Table 26: show oam ethernet connectivity-fault-management delay-statistics and mep-statistics Output Fields . . . . .	280
	Table 27: show oam ethernet connectivity-fault-management path-database Output Fields . . . . .	290
	Table 28: show oam ethernet evc Output Fields . . . . .	292
	Table 29: show oam ethernet link-fault-management Output Fields . . . . .	293
	Table 30: show oam ethernet lmi Output Fields . . . . .	299
	Table 31: show oam ethernet lmi statistics Output Fields . . . . .	301
	Table 32: show protection-group ethernet-ring aps Output Fields . . . . .	303
	Table 33: show protection-group ethernet-ring data-channel Output Fields . . . . .	305
	Table 34: MX Series Routers show protection-group ethernet-ring interface Output Fields . . . . .	307
	Table 35: show protection-group ethernet-ring node-state Output Fields . . . . .	310
	Table 36: show protection-group ethernet-ring statistics Output Fields . . . . .	313
	Table 37: show protection-group ethernet-ring vlan Output Fields . . . . .	316
<b>Chapter 6</b>	<b>Command Summary . . . . .</b>	<b>319</b>
	Table 38: Ethernet Interface Operational Mode Commands . . . . .	319
	Table 39: VRRP Operational Mode Commands . . . . .	324
<b>Part 4</b>	<b>Troubleshooting</b>	
<b>Chapter 7</b>	<b>Ethernet . . . . .</b>	<b>327</b>
	Table 40: traceroute ethernet Output Fields . . . . .	328
<b>Chapter 8</b>	<b>Interface Diagnostics . . . . .</b>	<b>335</b>
	Table 41: Loopback Modes by Interface Type . . . . .	336
	Table 42: BERT Capabilities by Interface Type . . . . .	340

# About the Documentation

- Documentation and Release Notes on page xiii
- Supported Platforms on page xiii
- Using the Examples in This Manual on page xiii
- Documentation Conventions on page xv
- Documentation Feedback on page xvii
- Requesting Technical Support on page xvii

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks<sup>®</sup> technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

## Supported Platforms

---

For the features described in this document, the following platforms are supported:

- M Series
- MX Series
- T Series
- J Series
- PTX Series

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming

configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xsl;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the CLI User Guide.

## Documentation Conventions

Table 1 on page xv defines notice icons used in this guide.

Table 1: Notice Icons




Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.

Table 2 on page xv defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> <b>show chassis alarms</b> No alarms currently active

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Introduces or emphasizes important new terms.</li> <li>Identifies book names.</li> <li>Identifies RFC and Internet draft titles.</li> </ul>	<ul style="list-style-type: none"> <li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li><i>Junos OS System Basics Configuration Guide</i></li> <li>RFC 1997, <i>BGP Communities Attribute</i></li> </ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
<b>Text like this</b>	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> <li>To configure a stub area, include the <b>stub</b> statement at the [edit protocols ospf area area-id] hierarchy level.</li> <li>The console port is labeled <b>CONSOLE</b>.</li> </ul>
< > (angle brackets)	Enclose optional keywords or variables.	<b>stub &lt;default-metric metric&gt;;</b>
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast   multicast</b>  <i>(string1   string2   string3)</i>
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Enclose a variable for which you can substitute one or more values.	<b>community name members [ community-ids ]</b>
Indentation and braces ( { } )	Identify a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
<b>J-Web GUI Conventions</b>		
<b>Bold text like this</b>	Represents J-Web graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> <li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li> <li>To cancel the configuration, click <b>Cancel</b>.</li> </ul>
> (bold right angle bracket)	Separates levels in a hierarchy of J-Web selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .



## Documentation Feedback

---

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net), or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version (if applicable)

## Requesting Technical Support

---

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>

- Join and participate in the Juniper Networks Community Forum:  
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

## PART 1

# Overview

- [Aggregated Ethernet Interfaces on page 3](#)



## CHAPTER 1

# Aggregated Ethernet Interfaces

- [Aggregated Ethernet Interfaces Overview on page 3](#)
- [Active-Active Bridging and VRRP over IRB Functionality on MX Series Routers Overview on page 5](#)
- [IGMP Snooping in MC-LAG Active-Active on MX Series Routers Overview on page 14](#)

## Aggregated Ethernet Interfaces Overview

---

Link aggregation of Ethernet interfaces is defined in the IEEE 802.3ad standard. The Junos implementation of 802.3ad balances traffic across the member links within an aggregated Ethernet bundle based on the Layer 3 information carried in the packet. This implementation uses the same load-balancing algorithm used for per-flow load balancing.



**NOTE:** For information about configuring circuit cross-connects over aggregated Ethernet, see [Circuit and Translational Cross-Connects Overview](#).

## Platform Support for Aggregated Ethernet Interfaces

You configure an aggregated Ethernet virtual link by specifying the link number as a physical device and then associating a set of ports that have the same speed and are in full-duplex mode. The physical interfaces can be Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, Gigabit Ethernet IQ, 10-Gigabit Ethernet IQ, Gigabit Ethernet IQ2 and IQ2-E, or 10-Gigabit Ethernet IQ2 and IQ2-E. Generally, you cannot use a combination of these interfaces within the same aggregated link; however, you can combine Gigabit Ethernet and Gigabit Ethernet IQ interfaces in a single aggregated Ethernet bundle.

The following routers support a maximum of 16 physical interfaces per single aggregated Ethernet bundle:

- M120
- M320
- All MX Series 3D Universal Edge Routers
- All T Series routers

All other routers support a maximum of 8 physical interfaces per aggregated Ethernet bundle.

On M Series and T Series routers, you can create a maximum of 1024 logical interfaces on an aggregated Ethernet interface.

Aggregated Ethernet interfaces can use interfaces from different FPCs, DPCs, PICs, or MPCs.

## Configuration Guidelines for Aggregated Ethernet Interfaces

Simple filters are not supported for interfaces in aggregated Ethernet bundles:

- On M Series routers, simple filters are supported in Gigabit Ethernet Enhanced Intelligent Queuing interfaces only, except when the interface is part of an aggregated Ethernet bundle.
- On MX Series routers, simple filters are supported in Enhanced Queuing Dense Port Concentrator (EQ DPC) interfaces only, except when the interface is part of an aggregated Ethernet bundle.

For more information about simple filters, see the Junos OS Class of Service Configuration Guide.

On the aggregated bundle, no IQ-specific capabilities such as MAC accounting, VLAN rewrites, and VLAN queuing are available. For more information about IQ-specific capabilities, see Gigabit Ethernet Accounting and Policing Overview.

Use the **show interfaces aggregate-interface extensive** and **show interfaces aggregate.logical-interface** commands to show the bandwidth of the aggregate. Also, the SNMP object identifier **ifSpeed/ifHighSpeed** shows the corresponding bandwidth on the aggregate logical interface if it is configured properly.

Aggregated Ethernet interfaces can be either tagged or untagged, with LACP enabled or disabled. Aggregated Ethernet interfaces on MX Series routers support the configuration of **flexible-vlan-tagging**, **native-vlan-id**, and on dual-tagged frames, which consist of the following configuration statements:

- **inner-tag-protocol-id**
- **inner-vlan-id**
- **pop-pop**
- **pop-swap**
- **push-push**
- **swap-push**
- **swap-swap**

In all cases, you must set the number of aggregated Ethernet interfaces on the chassis. You can also set the link speed and the minimum links in a bundle.

- Related Documentation**
- [inner-tag-protocol-id on page 108](#)
  - [inner-vlan-id on page 109](#)
  - [pop-pop on page 124](#)
  - [pop-swap on page 124](#)
  - [push-push on page 125](#)
  - [swap-push on page 126](#)
  - [swap-swap on page 127](#)
  - Gigabit Ethernet Accounting and Policing Overview
  - Junos® OS Ethernet Interfaces

## Active-Active Bridging and VRRP over IRB Functionality on MX Series Routers Overview

MX Series routers support active-active bridging and virtual router redundancy protocol (VRRP) over Integrated routing and bridging (IRB). This is a common scenario used in data centers. This section provides an overview of the supported functionality.

Active-active bridging and VRRP over IRB support extends multichassis link aggregation group (MC-LAG) by adding the following functionality:

- Interchassis link (ICL) pseudowire interface or Ethernet interface (ICL-PL field) for active-active bridging
- Active-active bridging
- VRRP over IRB for active-active bridging
- A single bridge domain cannot correspond to two redundancy group IDs

The topologies shown in [Figure 1 on page 5](#) and [Figure 2 on page 6](#) are supported. These figures use the following abbreviations:

- Aggregated Ethernet (AE)
- Interchassis link (ICL)
- Multichassis link (MCL)

**Figure 1: Single Multichassis Link**


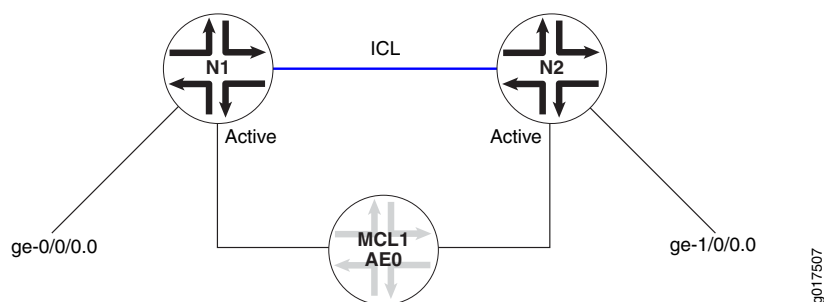


Figure 2: Dual Multichassis Link

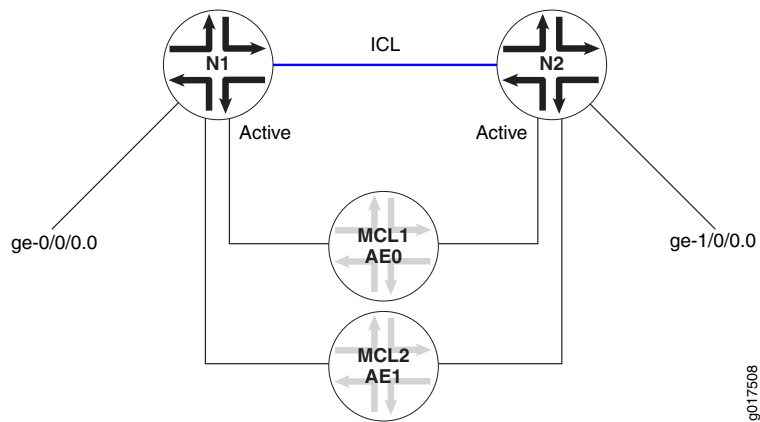

The following functionality is not supported:

- Virtual private LAN service (VPLS) within the core
- Bridged core
- Topology as described in Rule 4 of [“Data Traffic Forwarding Rules” on page 8](#)
- Routed multichassis aggregated Ethernet (RMC-AE), where the VRRP backup master is used in the edge of the network
- Track object, where in the case of an MC-LAG, the status of the uplinks from the provider edge can be monitored and the MC-LAG can act on the status
- Mixed mode (active-active MC-LAG is supported on MX series routers with MPC/MIC interfaces only). All interfaces in the bridge-domain that are mc-ae active-active, must be on MPC/MICs.

The topologies shown in [Figure 3 on page 6](#), [Figure 4 on page 7](#) and [Figure 5 on page 7](#) are not supported:

Figure 3: Interchassis Data Link Between Active-Active Nodes

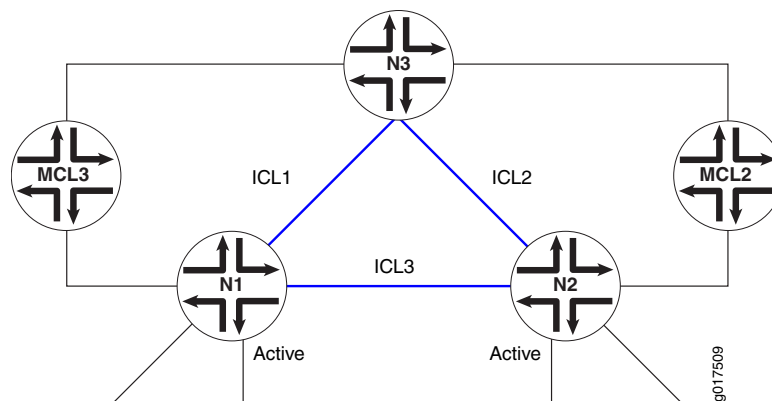




Figure 4: Active-Active MC-LAG with Single MC-LAG


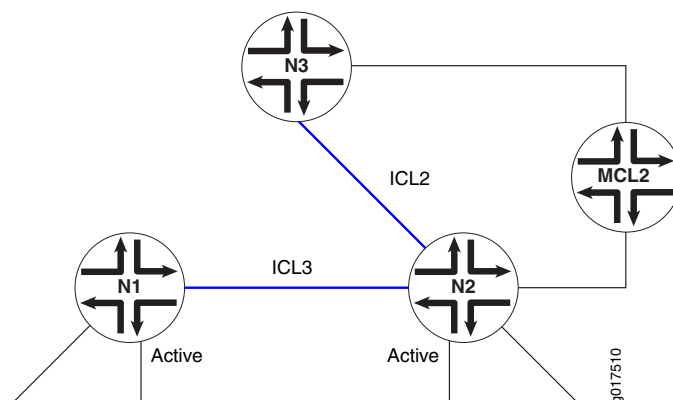


Figure 5: Active-Active MC-LAG with Multiple Nodes on a Single Multichassis Link

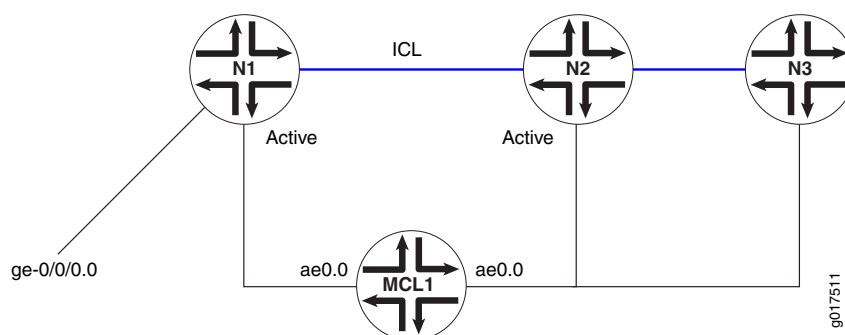

**NOTE:** A redundancy group cannot span more than two routers.

When configured to be active-active, the client device load balances the traffic to the peering MC-LAG network devices. In a bridging environment, this could potentially cause the following problems:


- Traffic received on the MC-LAG from one MC-LAG network device could be looped back to the same MC-LAG on the other MC-LAG network device.
- Duplicated packets could be received by the MC-LAG client device.
- Traffic could be unnecessarily forwarded on the interchassis link.

To better illustrate the problems listed above, consider [Figure 6 on page 8](#), where an MC-LAG device MCL1 and single-homed clients **ge-0/0/0.0** and **ge-1/0/0.0** are allowed to talk to each other through an ICL:

- Traffic received on network routing instance N1 from MCL1 could be flooded to ICL to reach network routing instance N2. Once it reaches network routing instance N2, it could be flooded back to MCL1.

- Traffic received on interface **ge-0/0/0.0** could be flooded to MCL1 and ICL on network routing instance N1. Once network routing instance N2 receives such traffic from ICL, it could be again flooded to MCL1.
- If interface **ge-1/0/0.0** does not exist on network routing instance N2, traffic received from interface **ge-0/0/0.0** or MCL1 on network routing instance N1 could be flooded to network routing instance N2 through ICL unnecessarily since interface **ge-0/0/0.0** and MCL1 could reach each other through network routing instance N1.

Figure 6: MC-LAG Device and Single-Homed Client

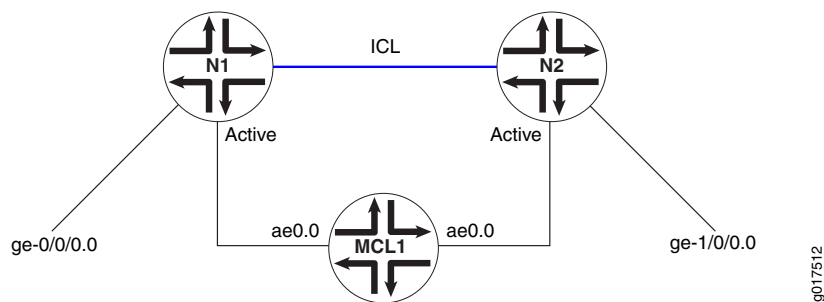

## Data Traffic Forwarding Rules

In active-active bridging and VRRP over IRB topographies, network interfaces are categorized into three different interface types, as follows:

**S-Links**—Single-homed link (S-Link) terminating on MC-LAG-N device or MC-LAG in active-standby mode. In [Figure 6 on page 8](#), interfaces **ge-0/0/0.0** and **ge-1/0/0.0** are S-Links.


**MC-Links**—MC-LAG links. In [Figure 6 on page 8](#), interface **ae0.0** is the MC-Link.

**ICL**—Interchassis data link.

Based on incoming and outgoing interface types, some constraints are added to the Layer 2 forwarding rules for MC-LAG configurations, as described in the data traffic forwarding rules. Note that if only one of the MC-LAG member link is in the UP state, it is considered an S-Link.

The following data traffic forwarding rules apply:

1. When an MC-LAG network receives a packet from a local MC-Link or S-Link, the packet is forwarded to other local interfaces, including S-Links and MC-Links based on the normal Layer 2 forwarding rules and on the configuration of the **mesh-group** and **no-local-switching** statements. If MC-Links and S-Links are in the same mesh group and their **no-local-switching** statements are enabled, the received packets are only forwarded upstream and not sent to MC-Links and S-Links.


2.  **NOTE:** The functionality described in rule 2 is not supported.

The following circumstances determine whether or not an ICL receives a packet from a local MC-Link or S-Link:

- a. If the peer MC-LAG network device has S-Links or MC-LAGs that do not reside on the local MC-LAG network device.
- b. Whether or not interfaces on two peering MC-LAG network devices are allowed to talk to each other.

Only if both a. and b. are true, is traffic always forwarded to the ICL.

3. When an MC-LAG network receives a packet from the ICL, the packet is forwarded to all local S-Links and active MC-LAGs that do not exist in the MC-LAG network that the packet comes from.

4.  **NOTE:** The topology shown in [Figure 7 on page 10](#) is not supported.


In certain cases, for example the topology shown in [Figure 7 on page 10](#), there could be a loop caused by the ICL. To break the loops, one of the following mechanisms could be used:

- a. Run certain protocols, such as spanning tree protocol (STP). In this case, whether packets received on one ICL are forwarded to other ICLs is determined by using Rule 3.
- b. Configure the ICL to be fully meshed among the MC-LAG network devices. In this case, traffic received on the ICL would be not be forwarded to any other ICLs.

In either case, duplicate packets could be forwarded to the MC-LAG clients. Consider the topology shown in [Figure 7 on page 10](#), where if network routing instance N1 receives a packet from **ge-0/0/0.0**, it could be flooded to ICL1 and ICL3.

When receiving from ICL1 and ICL3, network routing instances N3 and N2 could flood the same packet to MCL2, as shown in [Figure 7 on page 10](#). To prevent this from happening, the ICL designated forwarder should be elected between MC-LAG peers and traffic received on an ICL could be forwarded to the active-active MC-LAG client by the designated forwarder only.

Figure 7: Loop Caused by the ICL Links

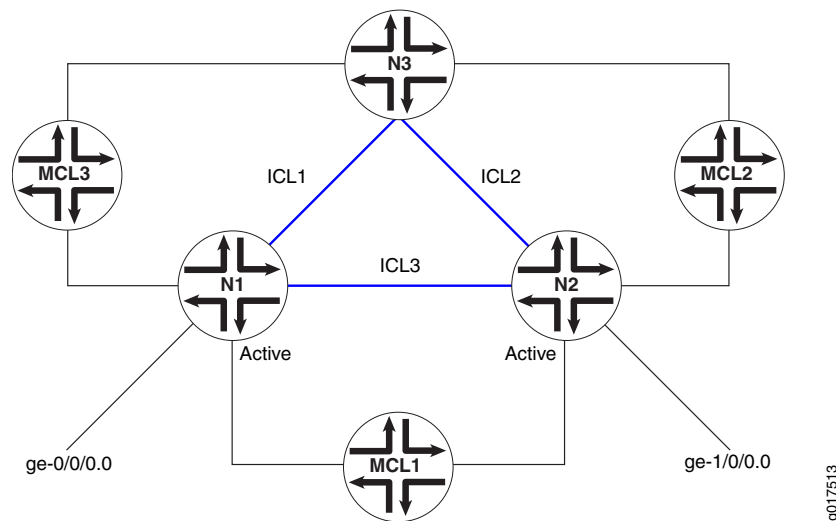

5. When received from an ICL, traffic should not be forwarded to the core-facing client link connection between two provider edge (PE) devices (C-Link) if the peer chassis's (where the traffic is coming from) C-Link is UP.

## MAC Address Management

If an MC-LAG is configured to be active-active, upstream and downstream traffic could go through different MC-LAG network devices. Since the media access control address (MAC address) is learned only on one of the MC-LAG network devices, the reverse direction's traffic could be going through the other MC-LAG network and flooded unnecessarily. Also, a single-homed client's MAC address is only learned on the MC-LAG network device it is attached to. If a client attached to the peer MC-LAG network needs to communicate with that single-homed client, then traffic would be flooded on the peer MC-LAG network device. To avoid unnecessary flooding, whenever a MAC address is learned on one of the MC-LAG network devices, it gets replicated to the peer MC-LAG network device. The following conditions should be applied when MAC address replication is performed:

- MAC addresses learned on a MC-LAG of one MC-LAG network device should be replicated as learned on the same MC-LAG of the peer MC-LAG network device.
- MAC addresses learned on single-homed customer edge (CE) clients of one MC-LAG network device should be replicated as learned on ICL-PL interface of the peer MC-LAG network device.
- MAC addresses learned on MC-LAG VE clients of one MC-LAG network device should be replicated as learned on the corresponding VE interface of the peer MC-LAG network device.
- MAC address learning on an ICL is disabled from the data path. It depends on software to install MAC addresses replicated through interchassis control protocol (ICCP).

## MAC Aging

---

MAC aging support in the Junos OS extends aggregated Ethernet logic for a specified MC-LAG. A MAC address in software is deleted until all Packet Forwarding Engines have deleted the MAC address. In the case of an MC-LAG, a remote provider edge is treated as a remote Packet Forwarding Engine and has a bit in the MAC data structure.

## Layer 3 Routing

In general, when an MC-LAG is configured to provide Layer 3 routing functions to downstream clients, the MC-LAG network peers should be configured to provide the same gateway address to the downstream clients. To the upstream routers, the MC-LAG network peers could be viewed as either equal-cost multi path (ECMP) or two routes with different preference values.

Junos OS supports active-active MC-LAGs by using VRRP over IRB. Junos OS also supports active-active MC-LAGs by using IRB MAC address synchronization. You must configure IRB using the same IP address across MC-LAG peers. IRB MAC synchronization is supported on 32-bit interfaces and interoperates with earlier MPC/MIC releases.

To ensure that Layer 3 operates properly, instead of dropping the Layer 3 packet, the VRRP slave attempts to perform routing functions if the packet is received on an MC-LAG. A VRRP slave sends and responds to address resolution protocol (ARP) requests.

For ARP, the same issue exists as with Layer 2 MAC addresses. Once ARP is learned, it must be replicated to the MC-LAG through ICCP. The peer must install an ARP route based on the ARP information received through ICCP.

For ARP aging, ARP requests on the MC-LAG peers can be aged out independently.

## Address Resolution Protocol Active-Active MC-LAG Support Methodology

Suppose one of the PE routers issues an ARP request and another PE router gets the response and, because of the aggregated Ethernet distribution logic, the ARP resolution is not successful. Junos OS uses ARP response packet snooping to perform active-active multichassis link aggregation group support, providing easy synchronization without the need to maintain any specific state.


## IGMP Snooping on Active-Active MC-LAG

For multicast to work in an active-active MC-LAG scenario, the typical topology is as shown in [Figure 8 on page 12](#) and [Figure 9 on page 13](#) with interested receivers over S-links and MC-Links. Starting in Junos OS Release 11.2, support is extended for sources connected over Layer 2 interface.

If an MC-LAG is configured to be active-active, reports from MC-LAG clients could reach any of the MC-LAG network device peers. Therefore the IGMP snooping module needs to replicate the states such that the Layer 2 multicast route state on both peers are the same. Additionally for S-Link clients, snooping needs to replicate these joins to its snooping peer, which in the case of Layer 3 connected source, passes this information to the PIM on IRB to enable the designated router to pull traffic for these groups,

The ICL should be configured as a router facing interface. For the scenario where traffic arrives via a Layer 3 interface, it is a requirement to have PIM and IGMP enabled on the IRB interface configured on the MC-LAG network device peers.

**Figure 8: Multicast Topology with Source Connected via Layer 3**

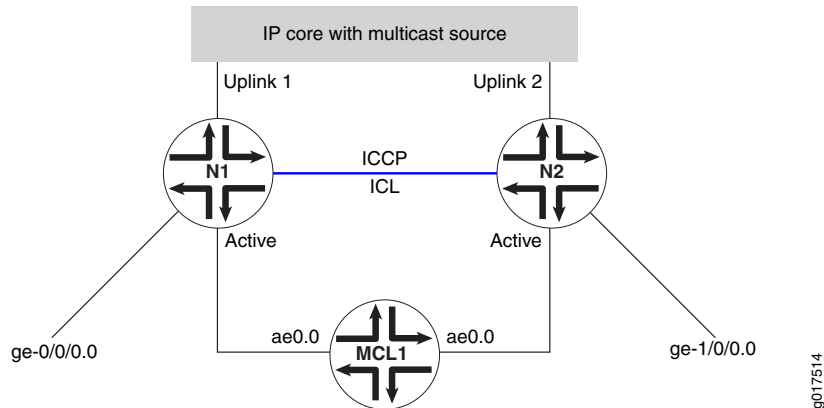


With reference to [Figure 8 on page 12](#), either N1 or N2 becomes a designated router (for this example, N1 is the designated router). Router N1 would therefore pull the multicast traffic from the core. Once multicast data hits the network device N1, the data is forwarded based on the snooping learned route.

For MC-Link clients, data is forwarded via N1. In the case of failover of the MC-Links, the data reaches the client via N2. For S-Link clients on N1, data would be forwarded via normal snooping routes.

For S-Link clients on N2, data is forwarded via the ICL interface. Layer 2 multicast routes on N1 do not show these groups unless there is interest for the same group over MC-Links or over S-Links on N1. For IRB scenario, the IGMP membership and Layer 3 multicast route on N1 does however show these groups learned over the IRB interface.

Therefore, for a case where a specific group interest is only on the S-Link on N2, data arriving on N1 reaches N2 via the default route and the Layer 2 multicast route on N2 has the S-Link in the outgoing interface list.

Figure 9: Multicast Topology with Source Connected via MC-Link

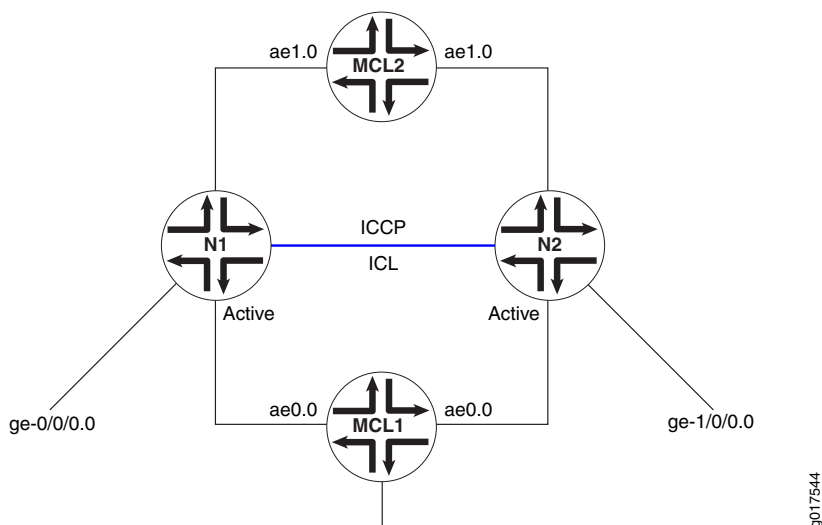

In Figure 9 on page 13, MCL1 and MCL2 are on different devices and the multicast source or IGMP querier is connected via MCL2. The data forwarding behavior seen is similar to that explained for multicast topology with source connected via Layer 3.



**NOTE:** IGMP snooping should not be configured in proxy mode. There should be no IGMP hosts or IGMP/PIM routers sitting on the ICL interface.

## Up and Down Event Handling

The following conditions apply to up and down event handling:

1. If the interchassis control protocol (ICCP) connection is UP but the ICL interface becomes DOWN, the router configured as standby will bring down all the multichassis aggregated Ethernet interfaces shared with the peer which is connected to ICL. This will make sure that there are no loops in the network. Otherwise, both PEs will become PIM designated routers and, hence, forward multiple copies of the same packet to the customer edge.
2. If the ICCP connection is UP and the ICL comes UP, the router configured as standby will bring up the multichassis aggregated Ethernet interfaces shared with the peer.
3. If both the ICCP connection and the ICL are DOWN, the router configured as standby will bring up the multichassis aggregated Ethernet interfaces shared with the peer.
4. The layer 2 address learn daemon (l2ald) does not store the information about a MAC address learned from a peer in the kernel. If l2ald restarts, and if the MAC address was not learned from the local multichassis aggregated Ethernet interface, l2ald will clear the MAC addresses and this will cause the router to flood the packets destined to this MAC address. This behavior is similar to that in a Routing Engine switchover. (Please note that currently l2ald runs on a Routing Engine only when it is a master). Also, during the time l2ald is DOWN, ARP packets received from an ICCP peer will be

dropped. ARP retry will take care of this situation. This will be the case with Routing Engine switchover too.

5. If ICCP restarts, l2ald will unremember the fact that a MAC address was learned from a peer and, if the MAC address was learned only from the peer, that MAC address will be deleted and the packets destined to this MAC address will be flooded.

## Interchassis Control Protocol

Interchassis control protocol (ICCP) is used to sync configurations, states, and data.

ICCP supports the following types of state information:

- MC-LAG members and their operational states.
- Single-homed members and their operational states.

ICCP supports the following application database synchronization parameters:

- MAC addresses learned and to be aged.
- ARP info learned over IRB.

## Interchassis Control Protocol Message

ICCP messages and attribute-value pairs (AVPs) are used for synchronizing MAC address and ARP information.

### Related Documentation

- [Configuring Multichassis Link Aggregation on page 29](#)
- [Configuring Active-Active Bridging and VRRP over IRB in Multichassis Link Aggregation on MX Series Routers on page 30](#)
- [multi-chassis-protection on page 120](#)
- [peer on page 122](#)
- [show interfaces mc-ae on page 247](#)
- Junos® OS Ethernet Interfaces

---

## IGMP Snooping in MC-LAG Active-Active on MX Series Routers Overview

- [IGMP Snooping in MC-LAG Active-Active on MX Series Routers Functionality on page 15](#)
- [Typically Supported Network Topology for IGMP Snooping with MC-LAG Active-Active Bridging on page 16](#)
- [Control Plane State Updates Triggered by Packets Received on Remote Chassis on page 16](#)
- [Data Forwarding on page 17](#)
- [Pure Layer 2 Topology Without Integrated Routing and Bridging on page 18](#)
- [Qualified Learning on page 18](#)
- [Data Forwarding with Qualified Learning on page 19](#)



- [Static Groups on Single Homed Interfaces on page 19](#)
- [Router Facing Interfaces as Multichassis Links on page 19](#)

## IGMP Snooping in MC-LAG Active-Active on MX Series Routers Functionality

MX Series routers support multichassis link aggregation group (MC-LAG) active-active and IGMP snooping in active-standby mode. MC-LAG allows one device to form a logical LAG interface with two or more network devices. MC-LAG provides additional benefits including node level redundancy, multi-homing, and loop-free layer-2 network without running STP. The following features are supported:

- State synchronization between peers for IGMP snooping in a bridge domain with only Layer 2 interfaces
- Qualified learning
- Router facing multichassis links

MX Series routers support the following enhancements to active-active bridging and virtual router redundancy protocol (VRRP) over integrated routing and bridging (IRB):

- MC-LAG support for IGMP snooping in a pure Layer 2 switch
- MC-LAG support for IGMP snooping in bridge domains doing qualified learning
- Support for MC-Links being router facing interfaces


The following functions are not supported:

- MC-LAG for VPLS instances
- MC-Links trunk ports
- Proxy mode for active-active
- Adding interchassis links to outgoing interfaces on an as needed basis. Interchassis links can be added to the outgoing interface list as router facing interfaces.

## Typically Supported Network Topology for IGMP Snooping with MC-LAG Active-Active Bridging

Figure 10 on page 16 depicts a typical network topology over which IGMP snooping with MC-LAG active-active is supported.

Figure 10: Typical Network Over Which Active-Active Is Supported

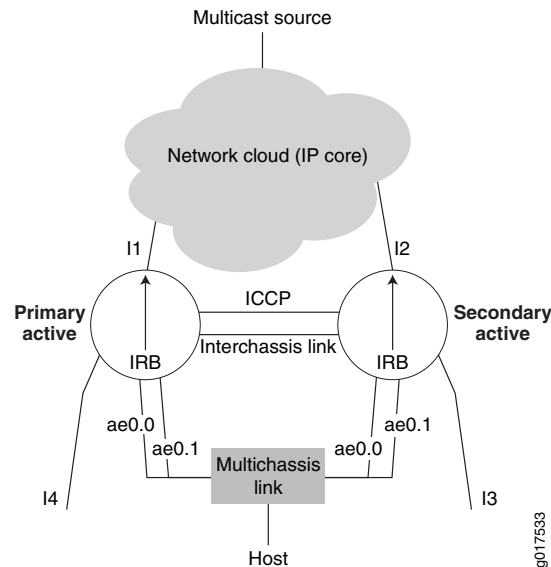

Interfaces I3 and I4 are single-homed interfaces. The multichassis links (MC-Link) ae0.0 and ae0.1 belong to the same bridge domain in both the chassis. Interfaces I3, ae0.0 and ae0.1 are in the same bridge domain in S-A. Interfaces I4, ae0.0 and ae0.1 are in the same bridge domain in the primary active (P-A) router. Interfaces I3, I4, ae0.0 and ae0.1 are in the same learning domain as is the interchassis link (ICL) connecting the two chassis.

The primary active router is the chassis in which the integrated routing and bridging has become PIM-DR. The secondary active router is the chassis in which integrated routing and bridging is not PIM DR. Router P-A is the chassis responsible for pulling traffic from the IP core. Hence, PIM-DR election is used to avoid duplication of data traffic.

Learning domains are described in [“Qualified Learning” on page 18](#).

For the IGMP speakers (hosts and routers) in the learning domain, P-A and S-A together should appear as one device with interfaces I4, I3, ae0.0 and ae0.1.

No duplicate control packets should be sent on multichassis links, meaning the control packet should be sent through only one link.

## Control Plane State Updates Triggered by Packets Received on Remote Chassis

The membership state in Layer 3 multicast routing is updated as a result of reports learned on remote legs of multichassis links and s-links attached to the remote chassis.

The membership state and routing entry in snooping is updated when reports are received on the remote legs of a multichassis link.

When reports are received on S-links attached to the remote chassis the membership state or routing entry in snooping is not updated.

The list of <s,g>s for which the state is maintained is the same in both the chassis under snooping as long as the outgoing interface lists involve only multichassis links.

## Data Forwarding

This discussion assumes integrated routing and bridging on P-A is the PIM-DR. It pulls the traffic from sources in the core. Traffic might also come on Layer 2 interfaces in the bridge domain. For hosts directly connected to the P-A chassis, there is no change in the way data is delivered.


For delivering traffic to hosts connected to S-A (which is the non-DR) on the single-homed link like I3, we rely on interchassis link. The traffic that hits P-A is sent over ICL to S-A to be delivered to the links that have reported interests in s,g and the links that are router facing.

When ae0 leg in P-A goes down, the hosts connected to the multichassis link will receive traffic via ICL. In S-A, traffic received on ICL is sent to multichassis links in the outgoing interface list for which the ae counterpart in P-A is down.

## Pure Layer 2 Topology Without Integrated Routing and Bridging

Figure 11 on page 18 illustrates the chassis connecting to the PIM-DR is the primary active router and the other is the secondary active.

Figure 11: Layer 2 Configuration Without Integrated Routing and Bridging

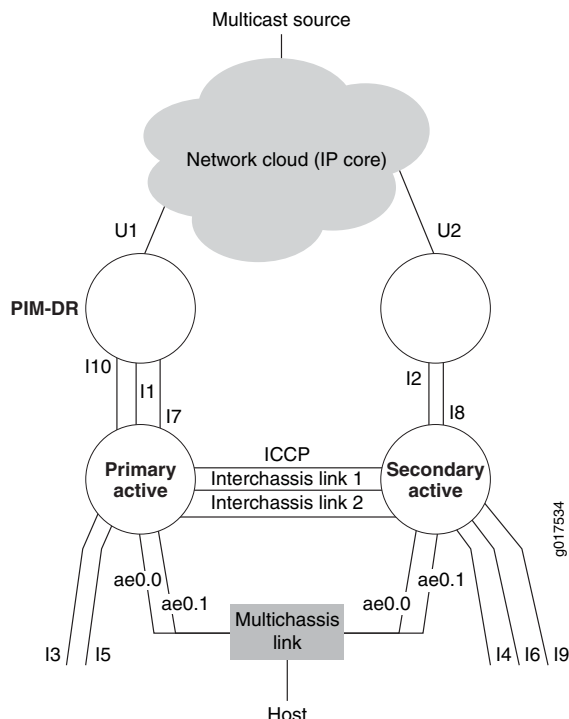

## Qualified Learning

In this application, interfaces I1, I2, I3, I4, I5, I6, I7, I8, I9 and I10 are single-homed interfaces. The multichassis links ae0.0 and ae0.1 belong to the same bridge domain in both the chassis. Interfaces I10, I1, I7, I3, I5, ae0.0 and ae0.1 are in same bridge domain, bd1 in P-A. Interfaces I9, I2, I8, I4, I6, ae0.0 and ae0.1 are in same bridge domain, bd1 in S-A.

This discussion assumes the following configuration:

- In Primary Active and S-A, qualified learning is ON in bd1.
- Interfaces I1, I2, I3, ae0.0 and I4 belong to vlan1, learning domain ld1.
- Interfaces I7, I8, I5, ae0.1 and I6 belong to vlan2, learning domain ld2.
- Interfaces I9 and I10 belong to vlan3, learning domain ld3.

For the IGMP speakers (hosts and routers) in the same learning domain ld1, P-A and S-A linked should appear to be one switch.

For the IGMP speakers (hosts and routers) in the same learning domain ld2, P-A and S-A linked should appear to be one switch.

Since there are no multichassis links in learning domain ld3, for the IGMP speakers (hosts and routers) in learning domain ld3, P-A and S-A will not appear to be one switch.

This discussion assumes interchassis link ICL1 corresponds to learning domain ld1 and interchassis link ICL2 corresponds to learning domain ld2.

Control packet flow is supported, with the exception of passing information to IRB.

## Data Forwarding with Qualified Learning

This discussion assumes one learning domain (LD), ld1, and further assumes interface I1 on router P-A is connected to the PIM-DR in the learning domain and pulls the traffic from sources in the core.

For delivering traffic to hosts connected to router S-A (which is the non-DR) on the single-homed link like I2, I4 (belonging to ld1), we rely on ICL1. The traffic that hits router P-A on interface I1 is sent over interchassis link ICL1 to router S-A to be delivered to the links that have reported interests in s,g or the links that are router facing in learning domain ld1.

When the interface ae0 leg in router P-A goes down, the hosts connected to the multichassis link receive traffic from interface I1 via the interchassis link ICL1. In router S-A, traffic received on interchassis link ICL1 is sent to multichassis links in the outgoing interface list for which the aggregated Ethernet counterpart in router P-A is down.

It is further assumed that interface I9 in router S-A belongs to the learning domain ld3 with interests in s,g, and that interface I10 in learning domain ld3 in router P-A receives traffic for s,g. Interface I9 does not receive data in this topology because there are no multichassis links (in a-a mode) and hence no interchassis link in learning domain ld3.

## Static Groups on Single Homed Interfaces

For multichassis links, the static group configuration should exist on both legs and synchronization with the other chassis is not required.

Synchronization of the static groups on single homed interfaces between the chassis is not supported, however the addition of logical interfaces to the default outgoing interface list supports traffic delivery to the interface within a static configuration.

## Router Facing Interfaces as Multichassis Links

IGMP queries could arrive on either leg of the multichassis links but in both peers, the multichassis link should be considered as router facing.

Reports should exit only once from the multichassis link, that is from only one leg.

The following MC-LAG support for IGMP snooping in IRB is provided:

- Non-proxy snooping
- Logical interfaces must be outgoing interfaces for all routes including the default route
- IGMP snooping in a pure Layer 2 switch

- IGMP snooping in bridge domains doing qualified learning
- Router facing interface MC-Links

The following features are not supported:

- Proxy mode for active-active
- MC-LAG support for VPLS instances
- Trunk ports as multichassis links
- Adding logical interfaces to outgoing interfaces on need basis. However, logical interfaces are always added as a router facing interface to the outgoing interface list.

**Related  
Documentation**

- [Configuring IGMP Snooping in MC-LAG Active-Active on MX Series Routers on page 35](#)
- [Example: Configuring IGMP Snooping in MC-LAG Active-Active on MX Series Routers on page 36](#)
- [Example: Configuring IGMP Snooping](#)
- [igmp-snooping on page 107](#)
- [multicast-router-interface on page 119](#)
- [show l2-learning instance on page 236](#)
- [Junos® OS Ethernet Interfaces](#)

## PART 2

# Configuration

- [Aggregated Ethernet Interfaces on page 23](#)
- [Network Interfaces Configuration Statements and Hierarchy on page 71](#)
- [Statement Summary on page 101](#)





## CHAPTER 2

# Aggregated Ethernet Interfaces

- [Configuring an Aggregated Ethernet Interface on page 23](#)
- [Example: Configuring Aggregated Ethernet Interfaces on page 25](#)
- [Configuring Junos OS for Supporting Aggregated Devices on page 26](#)
- [Deleting an Aggregated Ethernet Interface on page 28](#)
- [Configuring Multichassis Link Aggregation on page 29](#)
- [Configuring Active-Active Bridging and VRRP over IRB in Multichassis Link Aggregation on MX Series Routers on page 30](#)
- [Configuring IGMP Snooping in MC-LAG Active-Active on MX Series Routers on page 35](#)
- [Example: Configuring IGMP Snooping in MC-LAG Active-Active on MX Series Routers on page 36](#)
- [Configuring Aggregated Ethernet Link Protection on page 51](#)
- [Example: Configuring Aggregated Ethernet Link Protection on page 52](#)
- [Configuring the Number of Aggregated Ethernet Interfaces on the Device on page 53](#)
- [Configuring Aggregated Ethernet LACP on page 54](#)
- [Configuring Tagged Aggregated Ethernet Interfaces on page 61](#)
- [Configuring Untagged Aggregated Ethernet Interfaces on page 61](#)
- [Configuring Aggregated Ethernet Link Speed on page 63](#)
- [Configuring Aggregated Ethernet Minimum Links on page 64](#)
- [Configuring Multicast Statistics Collection on Aggregated Ethernet Interfaces on page 64](#)
- [Configuring Scheduler on Aggregated Ethernet Interfaces Without Link Protection on page 65](#)
- [Configuring Symmetrical Load Balancing on an 802.3ad Link Aggregation Group on MX Series Routers on page 66](#)

## Configuring an Aggregated Ethernet Interface

---

On Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces on M Series and T Series routers, you can associate a physical interface with an aggregated Ethernet interface.

To configure an aggregated Ethernet interface:

1. Specify that you want to configure the link aggregation group interface.

```
user@host# edit interfaces interface-name
```

2. Configure the aggregated Ethernet interface.

```
[edit interfaces interface-name]
```

```
user@host# set (fastether-options | gigether-options) 802.3ad aex
```

You specify the interface instance number *x* to complete the link association; *x* can be from 0 through 127, for a total of 128 aggregated interfaces on M Series and T Series routers and can be from 1 through 480, for a total of 480 aggregated interfaces on MX Series routers. You must also include a statement defining **aex** at the **[edit interfaces]** hierarchy level. You can optionally specify other physical properties that apply specifically to the aggregated Ethernet interfaces; for details, see Ethernet Interfaces Overview, and for a sample configuration, see [“Example: Configuring Aggregated Ethernet Interfaces” on page 25](#).



**NOTE:** In general, aggregated Ethernet bundles support the features available on all supported interfaces that can become a member link within the bundle. As an exception, Gigabit Ethernet IQ features and some newer Gigabit Ethernet features are not supported in aggregated Ethernet bundles.

Gigabit Ethernet IQ and SFP interfaces can be member links, but IQ- and SFP-specific features are not supported on the aggregated Ethernet bundle even if all the member links individually support those features.

You need to configure the correct link speed for the aggregated Ethernet interface to eliminate any warning message.



**NOTE:** Before you commit an aggregated Ethernet configuration, ensure that link mode is not configured on any member interface of the aggregated Ethernet bundle; otherwise, the configuration commit check fails.

For information about E Series routers, see Understanding Aggregated Ethernet Interfaces and LACP.

#### Related Documentation

- [Configuring the Number of Aggregated Ethernet Interfaces on the Device on page 53](#)
- [Deleting an Aggregated Ethernet Interface on page 28](#)
- [Aggregated Ethernet Interfaces Overview on page 3](#)
- Junos® OS Ethernet Interfaces

## Example: Configuring Aggregated Ethernet Interfaces

Aggregated Ethernet interfaces can use interfaces from different FPCs, DPCs, or PICs. The following configuration is sufficient to get an aggregated Gigabit Ethernet interface up and running.

```
[edit chassis]
aggregated-devices {
  ethernet {
    device-count 15;
  }
}

[edit interfaces]
ge-1/3/0 {
  gigether-options {
    802.3ad ae0;
  }
}
ge-2/0/1 {
  gigether-options {
    802.3ad ae0;
  }
}
ae0 {
  aggregated-ether-options {
    link-speed 1g;
    minimum-links 1;
  }
}
vlan-tagging;
unit 0 {
  vlan-id 1;
  family inet {
    address 14.0.100.50/24;
  }
}
unit 1 {
  vlan-id 1024;
  family inet {
    address 14.0.101.50/24;
  }
}
unit 2 {
  vlan-id 1025;
  family inet {
    address 14.0.102.50/24;
  }
}
unit 3 {
  vlan-id 4094;
  family inet {
    address 14.0.103.50/24;
  }
}
```

```
}  
}
```

**Related  
Documentation**

- [Junos® OS Ethernet Interfaces](#)
- [Configure 'link-speed' for Gigabit Ethernet based Aggregate Ethernet interface bundles](#)

## Configuring Junos OS for Supporting Aggregated Devices

---

Junos OS supports the aggregation of physical devices into defined virtual links, such as the link aggregation of Ethernet interfaces defined by the IEEE 802.3ad standard.

Tasks for configuring aggregated devices are:

- [Configuring Virtual Links for Aggregated Devices on page 26](#)
- [Configuring LACP Link Protection at the Chassis Level on page 26](#)
- [Enabling LACP Link Protection on page 27](#)
- [Configuring System Priority on page 28](#)
- [Configuring the Maximum Links Limit on page 28](#)

### Configuring Virtual Links for Aggregated Devices

To define virtual links, you need to specify the associations between physical and logical devices within the **[edit interfaces]** hierarchy, and assign the correct number of logical devices by including the **device-count** statement at the **[edit chassis aggregated-devices ethernet]** and **[edit chassis aggregated-devices sonet]** hierarchy levels:

```
[edit chassis]  
aggregated-devices {  
  ethernet {  
    device-count number;  
  }  
  sonet {  
    device-count number;  
  }  
}
```

The maximum number of Ethernet logical interfaces that you can configure is 128. On M Series and T Series routers, you can configure a maximum number of 128 aggregated interfaces. On MX Series routers, you can configure a maximum of 480 aggregated interfaces. The aggregated interfaces are numbered from **ae0** through **ae127** for M Series and T Series routers, and the aggregated interfaces (LAG bundles) are numbered from **ae0** through **ae479** on MX Series routers. The maximum number of SONET/SDH logical interfaces is 16. The aggregated SONET/SDH interfaces are numbered from **as0** through **as15**.

### Configuring LACP Link Protection at the Chassis Level

Link Aggregation Control Protocol (LACP) is one method of bundling several physical interfaces to form one logical interface. You can configure both VLAN-tagged and untagged aggregated Ethernet with or without LACP enabled. LACP exchanges are made

between actors and partners. An actor is the local interface in an LACP exchange. A partner is the remote interface in an LACP exchange.

LACP link protection enables you to force active and standby links within an aggregated Ethernet. You configure LACP link protection by using the **link-protection** and **system-priority** statements at either the chassis or interface level and by configuring port priority at the interface level using the **system-priority** statement. Configuring LACP parameters at the chassis level results in all aggregated Ethernet interfaces using the defined values unless overridden by the LACP configuration on a specific interface.

```
[edit chassis]
aggregated-devices {
  ethernet {
    lacp {
      link-protection {
        non-revertive;
      }
      system-priority priority;
    }
  }
}
```



**NOTE:** LACP link protection also uses port priority. You can configure port priority at the Ethernet interface [**gigether-options**] hierarchy level using the **port-priority** statement. If you choose not to configure port priority, LACP link protection uses the default value for port priority (127).

## Enabling LACP Link Protection

To enable LACP link protection for aggregated Ethernet interfaces on the chassis, use the **link-protection** statement at the [**edit chassis aggregated-devices ethernet lacp**] hierarchy level:

```
[edit chassis aggregated-devices ethernet lacp]
link-protection {
  non-revertive;
}
```

By default, LACP link protection reverts to a higher-priority (lower-numbered) link when that higher-priority link becomes operational or a link is added to the aggregator that is determined to be higher in priority. However, you can suppress link calculation by adding the **non-revertive** statement to the LACP link protection configuration. In nonrevertive mode, after a link is active and collecting and distributing packets, the subsequent addition of a higher-priority (better) link does not result in a switch, and the current link remains active.



**CAUTION:** If both ends of an aggregator have LACP link protection enabled, make sure to configure both ends of the aggregator to use the same mode. Mismatching LACP link protection modes can result in lost traffic.

## Configuring System Priority

To configure LACP system priority for aggregated Ethernet interfaces on the chassis, use the **system-priority** statement at the **[edit chassis aggregated-devices ethernet lacp]** hierarchy level:

```
[edit chassis aggregated-devices ethernet lacp]
system-priority priority;
```

The system priority is a 2-octet binary value that is part of the LACP system ID. The LACP system ID consists of the system priority as the two most-significant octets and the interface MAC address as the six least-significant octets. The system with the numerically lower value for system priority has the higher priority. By default, system priority is 127, with a range of 0 through 65,535.

## Configuring the Maximum Links Limit

To configure the maximum links limit, use the **maximum-links** statement at the **[edit chassis aggregated-devices]** hierarchy level:

```
[edit chassis aggregated-devices]
maximum-links maximum-links-limit;
```

### Related Documentation

- [Configuring an Aggregated Ethernet Interface on page 23](#)
- Junos® OS Ethernet Interfaces
- Configuring Aggregated Ethernet Interfaces on PTX Series Packet Transport Switches

---

## Deleting an Aggregated Ethernet Interface

There are two approaches to deleting an aggregated Ethernet interface:

- You can delete an aggregated Ethernet interface from the interface configuration. The Junos OS removes the configuration statements related to **aex** and sets this interface to down state.
- You can also permanently remove the aggregated Ethernet interface from the device configuration by deleting it from the device-count on the routing device.

To delete an aggregated Ethernet interface:

1. Delete the aggregated Ethernet configuration.

This step changes the interface state to down and removing the configuration statements related to **aex**.

```
[edit]
user@host# delete interfaces aex
```

2. Delete the interface from the device count.

```
[edit]
user@host# delete chassis aggregated-devices ethernet device-count
```

- Related Documentation**
- [Configuring an Aggregated Ethernet Interface on page 23](#)
  - [Configuring the Number of Aggregated Ethernet Interfaces on the Device on page 53](#)
  - [Aggregated Ethernet Interfaces Overview on page 3](#)
  - Junos® OS Ethernet Interfaces

## Configuring Multichassis Link Aggregation

On MX Series routers, multichassis link aggregation (MC-LAG) enables a device to form a logical LAG interface with two or more other devices. MC-LAG provides additional benefits over traditional LAG in terms of node level redundancy, multi-homing support, and loop-free Layer 2 network without running Spanning Tree Protocol (STP). MC-LAG can be configured for VPLS routing instance, CCC application, and Layer 2 circuit encapsulation types.

The MC-LAG devices use Inter-Chassis Communication Protocol (ICCP) to exchange the control information between two MC-LAG network devices.

On one end of MC-LAG is a MC-LAG client device that has one or more physical links in a link aggregation group (LAG). This client device does not need to be aware of MC-LAG. On the other side of MC-LAG are two MC-LAG network devices. Each of these network devices has one or more physical links connected to a single client device. The network devices coordinate with each other to ensure that data traffic is forwarded properly.

MC-LAG includes the following functionality:

- Active standby mode is supported using Link Aggregation Control Protocol (LACP)
- MC-LAG operates only between two chassis.
- Layer 2 circuit functions are supported with **ether-ccc** encapsulation.
- VPLS functions are supported with **ether-vpls** and **vlan-vpls**.



**NOTE:** Ethernet connectivity fault management (CFM) specified in IEEE 802.1ag standard for Operation, Administration, and Management (OAM) is *not* supported on MC-LAG interfaces.

To enable MC-LAG, include the **mc-ae** statement at the **[edit interfaces aeX aggregated-ether-options]** hierarchy level along with either the **ethernet-bridge**, **encapsulation ethernet-ccc**, **encapsulation ethernet-vpls**, or **flexible-ethernet-services** statement at the **[edit interfaces aeX]** hierarchy level. You also need to configure the **lACP** statement and the **admin-key** and **system-id** statements at the **[edit interfaces aeX aggregated-ether-options]** hierarchy level:

```
[edit interfaces aeX]
encapsulation (ethernet-bridge | ethernet-ccc | ethernet-vpls | flexible-ethernet-services);
aggregated-ether-options {
  lACP {
```

```
    active;
    admin-key number;
    system-id mac-address;
    system-priority number;
  }
  mc-ae {
    chassis-id chassis-id;
    events {
      iccp-peer-down {
        force-icl-down;
        prefer-status-control-active;
      }
    }
    mc-ae-id mc-ae-id;
    mode (active-active | active-standby);
    redundancy-group group-id;
    status-control (active | standby);
  }
}
```



**NOTE:** When you configure the `prefer-status-control-active` statement, you must also configure the `status-control active` statement. If you configure the `status-control standby` statement with the `prefer-status-control-active` statement, the system issues a warning.

To delete a MC-LAG interface from the configuration, issue the **delete interfaces aeX aggregated-ether-options mc-ae** command at the `[edit]` hierarchy level in configuration mode:

```
[edit]
user@host# delete interfaces aeX aggregated-ether-options mc-ae
```

#### Related Documentation

- [Active-Active Bridging and VRRP over IRB Functionality on MX Series Routers Overview on page 5](#)
- [Configuring Active-Active Bridging and VRRP over IRB in Multichassis Link Aggregation on MX Series Routers on page 30](#)
- [show interfaces mc-ae on page 247](#)
- [Junos® OS Ethernet Interfaces](#)

---

## Configuring Active-Active Bridging and VRRP over IRB in Multichassis Link Aggregation on MX Series Routers

---

The following sections describe the configuration of active-active bridging and VRRP over IRB in multichassis link aggregation (MC-LAG) on MX Series routers:

- [Configuring MC-LAG on page 31](#)
- [Configuring Interchassis Link Label on page 31](#)
- [Configuring Multiple Chassis on page 32](#)



- [Configuring Service ID on page 32](#)
- [Configuring IGMP Snooping for Active-Active MC-LAG on page 34](#)

## Configuring MC-LAG

An MC-LAG is composed of logical link aggregation groups (LAGs) and is configured under the `[edit interfaces aeX]` hierarchy, as follows:

```
[edit]
interfaces {
  ae0 {
    encapsulation ethernet-bridge;
    multi-chassis-protection {
      peer 10.10.10.10 {
        interface ge-0/0/0;
      }
    }
    aggregated-ether-options {
      mc-ae {
        mode active-active; # see note below
      }
    }
  }
}
```



**NOTE:** The `mode active-active` statement is valid only if encapsulation is `ethernet-bridge` or `extended-vlan-bridge`.

Use the `mode` statement to specify if a MC-LAG is **active-standby** or **active-active**. If the ICCP connection is UP and ICL comes UP, the router configured as standby will bring up the multichassis aggregated Ethernet (MC-AE) interfaces shared with the peer.

Using **multi-chassis-protection** at the physical interface level is a way to reduce the configuration at the logical interface level.

If the following assumption exists (follow the above example):

If there are  $n+1$  logical interfaces under `ae0`, from `ae0.0` through `ae0.n`, there will be  $n+1$  logical interfaces under `ge-0/0/0` as well, from `ge-0/0/0.0` through `ge-0/0/0.n`, each `ge-0/0/0` logical interface will be a protection link for the `ae0` logical interface.



**NOTE:** A bridge domain cannot have MC-AE logical interfaces which belong to different redundancy groups.

## Configuring Interchassis Link Label

Ethernet as interchassis link label (ICL-PL) (assumes interface `ge-0/0/0.0` is used to protect interface `ae0.0` of MC-LAG-1):

```
[edit]
interfaces {
  ae0 {
```

```
....
unit 0 {
    multi-chassis-protection {
        peer 10.10.10.10 {
            interface ge-0/0/0.0;
        }
    }
    ....
}
...
}
```

The protection interface can be an Ethernet type interface like **ge**, **xe**, or an aggregated Ethernet (**ae**) interface.

## Configuring Multiple Chassis

A top-level hierarchy is used to specify multichassis-related configuration, as follows:

```
[edit]
multi-chassis {
    multi-chassis-protection {
        peer 10.10.10.10 {
            interface ge-0/0/0;
        }
    }
}
```

The above example specifies interface **ge-0/0/0** as the multichassis protection interface for all the multichassis aggregated Ethernet (MC-AE) interfaces which are also part of the peer. This can be overridden by specifying protection at the physical interface level and the logical interface level.

## Configuring Service ID

You must configure the same unique network-wide configuration for a service in the set of PE routers providing the service. You can configure the service IDs under the level of the hierarchies shown in the following examples:

<b>Global Configuration (default logical system)</b>	<pre>switch-options {     service-id 10; } bridge-domains {     bd0 {         service-id 2;     } } routing-instances {     r1 {         switch-options {             service-id 10;         }         bridge-domains {             bd0 {                 service-id 2;             }         }     } }</pre>
--	---

```

    }
  }
}
}

Logical Systems  logical-system {
                  ls1 {
                    switch-options {
                      service-id 10;
                    }
                  }
                }
              }
            logical-system {
              ls1 {
                routing-instances {
                  r1 {
                    switch-options {
                      service-id 10;
                    }
                  }
                }
              }
            }
          }
        }
      }
    }
  }
}

```



**NOTE:** Using a service name per bridge domain is not supported.

The bridge level service ID is required to link related bridge domains across peers, and should be configured with the same value. The **service-id** values share the name space across all bridging and routing instances, and across peers. Thus, duplicate values for service IDs are not permitted across these entities.


The service ID at the bridge domain level is mandatory for type non-single VLAN bridge domains. The service ID is optional for bridge domains with a VID defined. If no service ID is defined in the latter case, it is picked up from the service ID configuration for that routing instance.



**NOTE:** When this default routing instance (or any other routing instance) which contains a bridge domain containing an MC-AE interface is configured, you must configure a global level **switch-options service-id *number***, irrespective of whether the contained bridge domains have specific service IDs configured.

In the example shown in [Figure 12 on page 34](#), network routing instances N1 and N2, both for the same service ID, are configured with same service-id in both N1 and N2. Use of a name string instead of a number is not supported.


Figure 12: N1 and N2 for the Same Service with Same Service ID

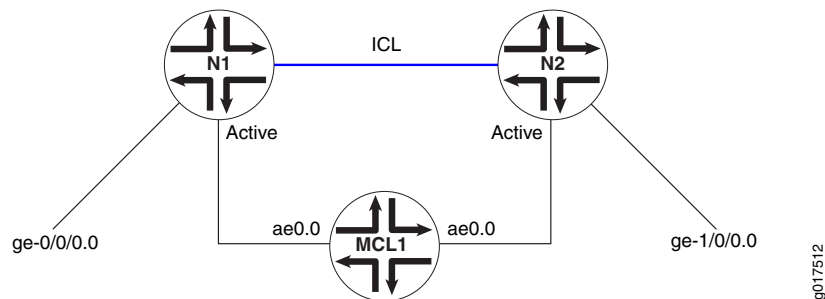

The following configuration restrictions apply:

- The service ID must be configured when the MC-AE interface is configured and an MC-AE logical interface is part of a bridge domain. This requirement is enforced.
- A single bridge domain cannot correspond to two redundancy group IDs.

Figure 13: Bridge Domain with Logical Interfaces from Two MC-AE Interfaces

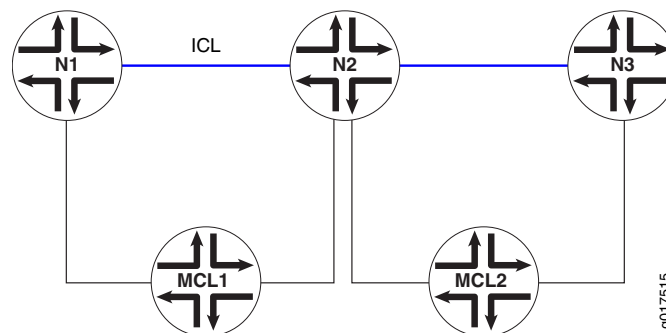

In [Figure 13 on page 34](#), it is possible to configure a bridge domain consisting of logical interfaces from two MC-AE interfaces and map them to a separate redundancy group ID, which is not supported. A service should be mapped one-to-one with the redundancy group providing the service. This requirement is enforced.

To display the MC-AE configuration, use the **show interfaces mc-ae** command. For more information, see the Junos OS Operational Mode Commands.

## Configuring IGMP Snooping for Active-Active MC-LAG

For the multicast solution to work, the following must be configured:

- The multichassis protection link should be configured as a router-facing interface.

```
[edit bridge-domain bd-name]
protocols {
  igmp-snooping {
    interface ge-0/0/0.0 {
      multicast-router-interface;
    }
  }
}
```

In this example, **ge-0/0/0.0** is an ICL interface.

- The **multichassis-lag-replicate-state** statement options should be configured under the **multicast-snooping-options** statement for that bridge domain.



**NOTE:** Snooping with active-active MC-LAG is only supported in non-proxy mode.

#### Related Documentation

- [Active-Active Bridging and VRRP over IRB Functionality on MX Series Routers Overview on page 5](#)
- [Configuring Multichassis Link Aggregation on page 29](#)
- [mc-ae on page 116](#)
- [multi-chassis-protection on page 120](#)
- [peer on page 122](#)
- [show interfaces irb on page 229](#)
- [show interfaces mc-ae on page 247](#)
- Junos® OS Ethernet Interfaces

## Configuring IGMP Snooping in MC-LAG Active-Active on MX Series Routers

You can use the bridge-domain statement's **service-id id** option to specify the multichassis aggregated Ethernet configuration.

- The **service-id** statement is mandatory for non-single VLAN type bridge domains (**none**, **all** or **vlan-id-tags:dual**).
- It is optional for bridge domains with a VID defined.
- If no **service-id** is defined in the latter case, it will be picked up from the RTT's **service-id** configuration.
- The bridge level **service-id** is required to link related bridge domains across peers, and should be configured with the same value.
- The **service-id** values share the name space across all bridging and routing instances, and across peers. Thus, duplicate values for **service-ids** are not permitted across these entities.
- A change of bridge **service-id** is considered catastrophic, and the bridge domain is reincarnated.

This procedure allows you to enable or disable the replication feature. This option applies to all instances.

To configure IGMP snooping in active-standby mode:

1. Use the **multichassis-lag-replicate-state** statement at the **multicast-snooping-options** hierarchy level in the master instance.

```
multicast-snooping-options {  
  ...  
  multichassis-lag-replicate-state; # REQUIRED  
}
```

The interchassis link, **interface *icl-intf-name***, of the learning domain should be a router facing interface.

1. Use the **interface *icl-intf-name*** statement at the **protocols igmp-snooping** hierarchy level, as shown in the following example:

```
protocols {  
  igmp-snooping {  
    interface icl-intf-name {  
      multicast-router-interface;  
    }  
  }  
}
```

#### Related Documentation

- [IGMP Snooping in MC-LAG Active-Active on MX Series Routers Overview on page 14](#)
- [Example: Configuring IGMP Snooping](#)
- [igmp-snooping on page 107](#)
- [multicast-router-interface on page 119](#)
- [show l2-learning instance on page 236](#)
- [Junos® OS Ethernet Interfaces](#)

## Example: Configuring IGMP Snooping in MC-LAG Active-Active on MX Series Routers

This example shows how to configure Internet Group Management Protocol (IGMP) snooping on MX Series routers with a multichassis link aggregation group (MC-LAG) in an active-active scenario.

- [Requirements on page 36](#)
- [Overview on page 37](#)
- [Configuring the PE Routers on page 38](#)
- [Configuring the CE Router on page 46](#)
- [Configuring the Provider Router on page 48](#)
- [Verification on page 51](#)

### Requirements

This example uses the following hardware and software components:

- Four Juniper Networks MX Series routers.
- Junos OS Release 11.2 or later running on all four routers.

Before you begin, make sure that Protocol Independent Multicast (PIM) and IGMP are running on all interfaces that will receive multicast packets. IGMP is automatically enabled on all IPv4 interfaces on which you configure PIM.

## Overview

When links are aggregated, the links can be treated as if they were a single link. Link aggregation increases bandwidth, provides graceful degradation as failure occurs, and increases availability. MC-LAG provides redundant Layer 2 access connectivity at the node level. This enables two or more systems to share a common LAG endpoint. The multiple end points present a single logical chassis to the start point, and the start node does not need to be aware that MC-LAG is being used.

In this example, the CE router is not aware that its aggregated Ethernet links are connected to two separate PE devices. The two PE devices each have a LAG connected to the CE device. The configured mode is active-active, meaning that both PE routers' LAG ports are active and carrying traffic at the same time.



**NOTE:** The other possible mode is active-standby, in which one of the router's ports only becomes active when failure is detected in the active links. In active-standby mode, the PE routers perform an election to determine the active and standby routers.

In [Figure 14 on page 38](#), from the perspective of Router CE, all four ports belonging to a LAG are connected to a single service provider device. Because the configured mode is active-active, all four ports are active, and the CE device load-balances the traffic to the peering PE devices. On the PE routers, a regular LAG is configured facing the CE device.


Internet Chassis Control (ICCP) control messages are sent between the two PE devices. These messages exchange MC-LAG configuration parameters and ensure that both chassis use the correct Link Aggregation Control Protocol (LACP) parameters when talking to the CE device.

The interchassis link (ICL) provides redundancy when a link failure occurs on one of the active links. The ICL-PL between the MC-LAG peering devices relays traffic that would otherwise be dropped due to a link failure.

## Topology Diagram

[Figure 14 on page 38](#) shows the topology used in this example.

Figure 14: IGMP Snooping in MC-LAG Active-Active on MX Series Routers

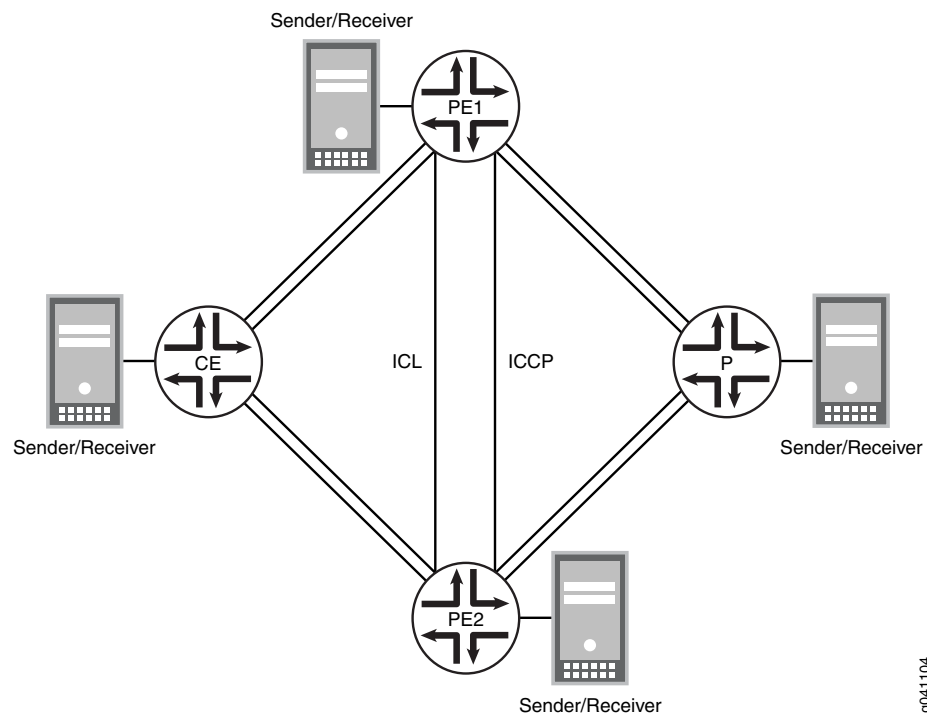

9041104

## Configuring the PE Routers

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
Router PE1
set chassis aggregated-devices ethernet device-count 5
set interfaces ge-1/0/1 gigether-options 802.3ad ae1
set interfaces ge-1/0/2 unit 0 family inet address 100.100.100.1/30
set interfaces ge-1/0/6 gigether-options 802.3ad ae0
set interfaces ge-1/1/1 flexible-vlan-tagging
set interfaces ge-1/1/1 encapsulation flexible-ethernet-services
set interfaces ge-1/1/1 unit 0 encapsulation vlan-bridge
set interfaces ge-1/1/1 unit 0 vlan-id-range 100-110
set interfaces ge-1/1/4 flexible-vlan-tagging
set interfaces ge-1/1/4 encapsulation flexible-ethernet-services
set interfaces ge-1/1/4 unit 0 encapsulation vlan-bridge
set interfaces ge-1/1/4 unit 0 vlan-id-range 100-110
set interfaces ae0 flexible-vlan-tagging
set interfaces ae0 encapsulation flexible-ethernet-services
set interfaces ae0 aggregated-ether-options lacp active
set interfaces ae0 aggregated-ether-options lacp system-priority 100
set interfaces ae0 aggregated-ether-options lacp system-id 00:00:00:00:00:05
set interfaces ae0 aggregated-ether-options lacp admin-key 1
set interfaces ae0 aggregated-ether-options mc-ae mc-ae-id 5
set interfaces ae0 aggregated-ether-options mc-ae redundancy-group 10
set interfaces ae0 aggregated-ether-options mc-ae chassis-id 1
set interfaces ae0 aggregated-ether-options mc-ae mode active-active
```



```

set interfaces ae0 aggregated-ether-options mc-ae status-control active
set interfaces ae0 unit 0 encapsulation vlan-bridge
set interfaces ae0 unit 0 vlan-id-range 100-110
set interfaces ae0 unit 0 multi-chassis-protection 100.100.100.2 interface ge-1/1/4.0
set interfaces ae1 flexible-vlan-tagging
set interfaces ae1 encapsulation flexible-ethernet-services
set interfaces ae1 aggregated-ether-options lacp active
set interfaces ae1 aggregated-ether-options lacp system-priority 100
set interfaces ae1 aggregated-ether-options lacp system-id 00:00:00:00:00:05
set interfaces ae1 aggregated-ether-options lacp admin-key 1
set interfaces ae1 aggregated-ether-options mc-ae mc-ae-id 10
set interfaces ae1 aggregated-ether-options mc-ae redundancy-group 10
set interfaces ae1 aggregated-ether-options mc-ae chassis-id 1
set interfaces ae1 aggregated-ether-options mc-ae mode active-active
set interfaces ae1 aggregated-ether-options mc-ae status-control active
set interfaces ae1 unit 0 encapsulation vlan-bridge
set interfaces ae1 unit 0 vlan-id-range 100-110
set interfaces ae1 unit 0 multi-chassis-protection 100.100.100.2 interface ge-1/1/4.0
set bridge-domains bd0 domain-type bridge
set bridge-domains bd0 vlan-id all
set bridge-domains bd0 service-id 20
set bridge-domains bd0 interface ae1.0
set bridge-domains bd0 interface ge-1/0/3.0
set bridge-domains bd0 interface ge-1/1/1.0
set bridge-domains bd0 interface ge-1/1/4.0
set bridge-domains bd0 interface ae0.0
set bridge-domains bd0 multicast-snooping-options multichassis-lag-replicate-state
set bridge-domains bd0 protocols igmp-snooping vlan 100 interface ge-1/1/4.0
    multicast-router-interface
set bridge-domains bd0 protocols igmp-snooping vlan 101 interface ge-1/1/4.0
    multicast-router-interface
set bridge-domains bd0 protocols igmp-snooping vlan 200 interface ge-1/1/4.0
    multicast-router-interface
set multicast-snooping-options multichassis-lag-replicate-state
set protocols iccp local-ip-addr 100.100.100.1
set protocols iccp peer 100.100.100.2 redundancy-group-id-list 10
set protocols iccp peer 100.100.100.2 liveness-detection minimum-interval 1000
set switch-options service-id 10

```

#### Router PE2

```

set chassis aggregated-devices ethernet device-count 5
set interfaces ge-1/0/2 unit 0 family inet address 100.100.100.2/30
set interfaces ge-1/0/3 flexible-vlan-tagging
set interfaces ge-1/0/3 encapsulation flexible-ethernet-services
set interfaces ge-1/0/3 unit 0 encapsulation vlan-bridge
set interfaces ge-1/0/3 unit 0 vlan-id-range 100-110
set interfaces ge-1/0/4 flexible-vlan-tagging
set interfaces ge-1/0/4 encapsulation flexible-ethernet-services
set interfaces ge-1/0/4 unit 0 encapsulation vlan-bridge
set interfaces ge-1/0/4 unit 0 vlan-id-range 100-110
set interfaces ge-1/0/5 gigether-options 802.3ad ae0
set interfaces ge-1/1/0 gigether-options 802.3ad ae1
set interfaces ae0 flexible-vlan-tagging
set interfaces ae0 encapsulation flexible-ethernet-services
set interfaces ae0 aggregated-ether-options lacp active
set interfaces ae0 aggregated-ether-options lacp system-priority 100
set interfaces ae0 aggregated-ether-options lacp system-id 00:00:00:00:00:05

```

```
set interfaces ae0 aggregated-ether-options lacp admin-key 1
set interfaces ae0 aggregated-ether-options mc-ae mc-ae-id 5
set interfaces ae0 aggregated-ether-options mc-ae redundancy-group 10
set interfaces ae0 aggregated-ether-options mc-ae chassis-id 0
set interfaces ae0 aggregated-ether-options mc-ae mode active-active
set interfaces ae0 aggregated-ether-options mc-ae status-control active
set interfaces ae0 unit 0 encapsulation vlan-bridge
set interfaces ae0 unit 0 vlan-id-range 100-110
set interfaces ae0 unit 0 multi-chassis-protection 100.100.100.1 interface ge-1/0/4.0
set interfaces ae1 flexible-vlan-tagging
set interfaces ae1 encapsulation flexible-ethernet-services
set interfaces ae1 aggregated-ether-options lacp active
set interfaces ae1 aggregated-ether-options lacp system-priority 100
set interfaces ae1 aggregated-ether-options lacp system-id 00:00:00:00:00:05
set interfaces ae1 aggregated-ether-options lacp admin-key 1
set interfaces ae1 aggregated-ether-options mc-ae mc-ae-id 10
set interfaces ae1 aggregated-ether-options mc-ae redundancy-group 10
set interfaces ae1 aggregated-ether-options mc-ae chassis-id 0
set interfaces ae1 aggregated-ether-options mc-ae mode active-active
set interfaces ae1 aggregated-ether-options mc-ae status-control active
set interfaces ae1 unit 0 encapsulation vlan-bridge
set interfaces ae1 unit 0 vlan-id-range 100-110
set interfaces ae1 unit 0 multi-chassis-protection 100.100.100.1 interface ge-1/0/4.0
set bridge-domains bd0 domain-type bridge
set bridge-domains bd0 vlan-id all
set bridge-domains bd0 service-id 20
set bridge-domains bd0 interface ae1.0
set bridge-domains bd0 interface ge-1/0/3.0
set bridge-domains bd0 interface ge-1/0/4.0
set bridge-domains bd0 interface ae0.0
set bridge-domains bd0 multicast-snooping-options multichassis-lag-replicate-state
set bridge-domains bd0 protocols igmp-snooping vlan 100 interface ge-1/0/4.0
    multicast-router-interface
set bridge-domains bd0 protocols igmp-snooping vlan 101 interface ge-1/0/4.0
    multicast-router-interface
set bridge-domains bd0 protocols igmp-snooping vlan 200 interface ge-1/0/4.0
    multicast-router-interface
set multicast-snooping-options multichassis-lag-replicate-state
set protocols iccp local-ip-addr 100.100.100.2
set protocols iccp peer 100.100.100.1 redundancy-group-id-list 10
set protocols iccp peer 100.100.100.1 liveness-detection minimum-interval 1000
set switch-options service-id 10
```

---

### Router PE1

#### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the CLI User Guide.

To configure Router PE1:

1. Specify the number of aggregated Ethernet interfaces to be created.

```
[edit chassis]
user@PE1# set aggregated-devices ethernet device-count 5
```

2. Specify the members to be included within the aggregated Ethernet bundles.

```
[edit interfaces]
user@PE1# set ge-1/0/1 gigether-options 802.3ad ae1
user@PE1# set ge-1/0/6 gigether-options 802.3ad ae0
```

3. Configure the interfaces that connect to multicast senders or receivers, the ICL interfaces, and the ICCP interfaces.

```
[edit interfaces]
user@PE1# set ge-1/1/1 flexible-vlan-tagging
user@PE1# set ge-1/1/1 encapsulation flexible-ethernet-services
user@PE1# set ge-1/1/1 unit 0 encapsulation vlan-bridge
user@PE1# set ge-1/1/1 unit 0 vlan-id-range 100-110
user@PE1# set ge-1/1/4 flexible-vlan-tagging
user@PE1# set ge-1/1/4 encapsulation flexible-ethernet-services
user@PE1# set ge-1/1/4 unit 0 encapsulation vlan-bridge
user@PE1# set ge-1/1/4 unit 0 vlan-id-range 100-110
user@PE1# set ge-1/0/2 unit 0 family inet address 100.100.100.1/30
```

4. Configure parameters on the aggregated Ethernet bundles.

```
[edit interfaces ae0]
user@PE1# set flexible-vlan-tagging
user@PE1# set encapsulation flexible-ethernet-services
user@PE1# set unit 0 encapsulation vlan-bridge
user@PE1# set unit 0 vlan-id-range 100-110
user@PE1# set unit 0 multi-chassis-protection 100.100.100.2 interface ge-1/1/4.0
```

```
[edit interfaces ae1]
user@PE1# set flexible-vlan-tagging
user@PE1# set encapsulation flexible-ethernet-services
user@PE1# set unit 0 encapsulation vlan-bridge
user@PE1# set unit 0 vlan-id-range 100-110
user@PE1# set unit 0 multi-chassis-protection 100.100.100.2 interface ge-1/1/4.0
```

5. Configure LACP on the aggregated Ethernet bundles.

```
[edit interfaces ae0 aggregated-ether-options]
user@PE1# set lacp active
user@PE1# set lacp system-priority 100
user@PE1# set lacp system-id 00:00:00:00:00:05
user@PE1# set lacp admin-key 1
```

```
[edit interfaces ae1 aggregated-ether-options]
user@PE1# set lacp active
user@PE1# set lacp system-priority 100
user@PE1# set lacp system-id 00:00:00:00:00:05
user@PE1# set lacp admin-key 1
```

6. Configure the MC-LAG interfaces.

```
[edit interfaces ae0 aggregated-ether-options]
user@PE1# set mc-ae mc-ae-id 5
user@PE1# set mc-ae redundancy-group 10
user@PE1# set mc-ae chassis-id 1
user@PE1# set mc-ae mode active-active
```

```
user@PE1# set mc-ae status-control active
```

```
[edit interfaces ae1 aggregated-ether-options]
```

```
user@PE1# set mc-ae mc-ae-id 10
```

```
user@PE1# set mc-ae redundancy-group 10
```

```
user@PE1# set mc-ae chassis-id 1
```

```
user@PE1# set mc-ae mode active-active
```

```
user@PE1# set mc-ae status-control active
```

The multichassis aggregated Ethernet identification number (**mc-ae-id**) specifies which link aggregation group the aggregated Ethernet interface belongs to. The **ae0** interfaces on Router PE1 and Router PE2 are configured with **mc-ae-id 5**. The **ae1** interfaces on Router PE1 and Router PE2 are configured with **mc-ae-id 10**. (To refer to the configuration on Router PE2, see [“Router PE2” on page 39](#)).

The **redundancy-group 10** statement is used by ICCP to associate multiple chassis that perform similar redundancy functions and to establish a communication channel so that applications on peering chassis can send messages to each other. The **ae0** and **ae1** interfaces on Router PE1 and Router PE2 are configured with the same redundancy group **redundancy-group 10**.

The **chassis-id** statement is used by LACP for calculating the port number of the MC-LAG's physical member links. Router PE1 uses **chassis-id 1** to identify both its **ae0** and **ae1** interfaces. Router PE2 (as shown in [“Router PE2” on page 39](#)) uses **chassis-id 0** to identify both its **ae0** and **ae1** interfaces.

The **mode** statement indicates whether an MC-LAG is in active-standby mode or active-active mode. Chassis that are in the same group must be in the same mode.

7. Configure a domain that includes the set of logical ports.

```
[edit bridge-domains bd0]
```

```
user@PE1# set domain-type bridge
```

```
user@PE1# set vlan-id all
```

```
user@PE1# set service-id 20
```

```
user@PE1# set interface ae0.0
```

```
user@PE1# set interface ae1.0
```

```
user@PE1# set interface ge-1/0/3.0
```

```
user@PE1# set interface ge-1/1/1.0
```

```
user@PE1# set interface ge-1/1/4.0
```

The ports within a bridge domain share the same flooding or broadcast characteristics in order to perform Layer 2 bridging.

The bridge-level **service-id** statement is required to link related bridge domains across peers (in this case Router PE1 and Router PE2), and should be configured with the same value.

8. At the global level and also in the bridge domain, replicate IGMP join and leave messages from the active link to the standby link of a dual-link MC-LAG interface, enabling faster recovery of membership information after failover.

```
[edit multicast-snooping-options]
```

```
user@PE1# set multichassis-lag-replicate-state
```

```
[edit bridge-domains bd0 multicast-snooping-options]
```

```
user@PE1# set multichassis-lag-replicate-state
```

9. Configure multicast snooping for the MC-LAG interfaces.

```
[edit bridge-domains bd0]
user@PE1# set protocols igmp-snooping vlan 100 interface ge-1/1/4.0
multicast-router-interface
user@PE1# set protocols igmp-snooping vlan 101 interface ge-1/1/4.0
multicast-router-interface
user@PE1# set protocols igmp-snooping vlan 200 interface ge-1/1/4.0
multicast-router-interface
```

10. Configure ICCP parameters.

```
[edit protocols iccp]
user@PE1# set local-ip-addr 100.100.100.1
user@PE1# set peer 100.100.100.2 redundancy-group-id-list 10
user@PE1# set peer 100.100.100.2 liveness-detection minimum-interval 1000
```

11. Configure the service ID at the global level.

```
[edit switch-options]
user@PE1# set service-id 10
```

You must configure the same unique network-wide configuration for a service in the set of PE routers providing the service. This service ID is required if the multichassis aggregated Ethernet interfaces are part of a bridge domain.

## Results

From configuration mode, confirm your configuration by entering the **show bridge-domains**, **show chassis**, **show interfaces**, **show multicast-snooping-options**, **show protocols**, and **show switch-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show bridge-domains
bd0 {
  domain-type bridge;
  vlan-id all;
  service-id 20;
  interface ae1.0;
  interface ge-1/1/1.0;
  interface ge-1/1/4.0;
  interface ae0.0;
  multicast-snooping-options {
    multichassis-lag-replicate-state;
  }
  protocols {
    igmp-snooping {
      vlan 100 {
        interface ge-1/1/4.0 {
          multicast-router-interface;
        }
      }
    }
    vlan 101 {
      interface ge-1/1/4.0 {
```

```
        multicast-router-interface;
    }
}
vlan 200 {
    interface ge-1/1/4.0 {
        multicast-router-interface;
    }
}
}
}
}

user@PE1# show chassis
aggregated-devices {
    ethernet {
        device-count 5;
    }
}

user@PE1# show interfaces
ge-1/0/1 {
    gigether-options {
        802.3ad ae1;
    }
}
ge-1/0/6 {
    gigether-options {
        802.3ad ae0;
    }
}
ge-1/0/2 {
    unit 0 {
        family inet {
            address 100.100.100.1/30;
        }
    }
}
ge-1/1/1 {
    flexible-vlan-tagging;
    encapsulation flexible-ethernet-services;
    unit 0 {
        encapsulation vlan-bridge;
        vlan-id-range 100-110;
    }
}
ge-1/1/4 {
    flexible-vlan-tagging;
    encapsulation flexible-ethernet-services;
    unit 0 {
        encapsulation vlan-bridge;
        vlan-id-range 100-110;
    }
}
ae0 {
    flexible-vlan-tagging;
    encapsulation flexible-ethernet-services;
    aggregated-ether-options {
```

```

lACP {
    active;
    system-priority 100;
    system-id 00:00:00:00:00:05;
    admin-key 1;
}
mc-ae {
    mc-ae-id 5;
    redundancy-group 10;
    chassis-id 1;
    mode active-active;
    status-control active;
}
}
unit 0 {
    encapsulation vlan-bridge;
    vlan-id-range 100-110;
    multi-chassis-protection 100.100.100.2 {
        interface ge-1/1/4.0;
    }
}
}
ae1 {
    flexible-vlan-tagging;
    encapsulation flexible-ethernet-services;
    aggregated-ether-options {
        lACP {
            active;
            system-priority 100;
            system-id 00:00:00:00:00:05;
            admin-key 1;
        }
        mc-ae {
            mc-ae-id 10;
            redundancy-group 10;
            chassis-id 1;
            mode active-active;
            status-control active;
        }
    }
    unit 0 {
        encapsulation vlan-bridge;
        vlan-id-range 100-110;
        multi-chassis-protection 100.100.100.2 {
            interface ge-1/1/4.0;
        }
    }
}
}

user@PE1# show multicast-snooping-options
multichassis-lag-replicate-state;

user@PE1# show protocols
iccp {
    local-ip-addr 100.100.100.1;
    peer 100.100.100.2 {
        redundancy-group-id-list 10;
    }
}

```

```
        liveness-detection {
            minimum-interval 1000;
        }
    }
}

user@PE1# show switch-options
service-id 10;
```

If you are done configuring the device, enter **commit** from configuration mode.

Repeat the procedure for Router PE2, using the appropriate interface names and addresses.

## Configuring the CE Router

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

**Router CE**

```
set chassis aggregated-devices ethernet device-count 2
set interfaces ge-2/0/2 gigether-options 802.3ad ae0
set interfaces ge-2/0/3 gigether-options 802.3ad ae0
set interfaces ge-2/1/6 flexible-vlan-tagging
set interfaces ge-2/1/6 encapsulation flexible-ethernet-services
set interfaces ge-2/1/6 unit 0 encapsulation vlan-bridge
set interfaces ge-2/1/6 unit 0 vlan-id-range 100-110
set interfaces ae0 flexible-vlan-tagging
set interfaces ae0 encapsulation flexible-ethernet-services
set interfaces ae0 aggregated-ether-options lacp active
set interfaces ae0 aggregated-ether-options lacp system-priority 100
set interfaces ae0 unit 0 encapsulation vlan-bridge
set interfaces ae0 unit 0 vlan-id-range 100-500
set bridge-domains bd0 domain-type bridge
set bridge-domains bd0 vlan-id all
set bridge-domains bd0 interface ge-2/1/6.0
set bridge-domains bd0 interface ae0.0
```

---

### Router CE

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the CLI User Guide.

To configure Router CE:

1. Specify the number of aggregated Ethernet interfaces to be created.  

```
[edit chassis]
user@CE# set aggregated-devices ethernet device-count 2
```
2. Specify the members to be included within the aggregated Ethernet bundle.  

```
[edit interfaces]
user@CE# set ge-2/0/2 gigether-options 802.3ad ae0
```



```
user@CE# set ge-2/0/3 gigether-options 802.3ad ae0
```

3. Configure an interface that connects to multicast senders or receivers.

```
[edit interfaces ge-2/1/6]
user@CE# set flexible-vlan-tagging
user@CE# set encapsulation flexible-ethernet-services
user@CE# set unit 0 encapsulation vlan-bridge
user@CE# set unit 0 vlan-id-range 100-110
```

4. Configure parameters on the aggregated Ethernet bundle.

```
[edit interfaces ae0]
user@CE# set flexible-vlan-tagging
user@CE# set encapsulation flexible-ethernet-services
user@CE# set unit 0 encapsulation vlan-bridge
user@CE# set unit 0 vlan-id-range 100-500
```

5. Configure LACP on the aggregated Ethernet bundle.

```
[edit interfaces ae0 aggregated-ether-options]
user@CE# set lacp active
user@CE# set lacp system-priority 100
```

The **active** statement initiates transmission of LACP packets.

For the **system-priority** statement, a smaller value indicates a higher priority. The device with the lower system priority value determines which links between LACP partner devices are active and which are in standby mode for each LACP group. The device on the controlling end of the link uses port priorities to determine which ports are bundled into the aggregated bundle and which ports are put in standby mode. Port priorities on the other device (the noncontrolling end of the link) are ignored.

6. Configure a domain that includes the set of logical ports.

```
[edit bridge-domains bd0]
user@CE# set domain-type bridge
user@CE# set vlan-id all
user@CE# set interface ge-2/1/6.0
user@CE# set interface ae0.0
```

The ports within a bridge domain share the same flooding or broadcast characteristics in order to perform Layer 2 bridging.

## Results

From configuration mode, confirm your configuration by entering the **show bridge-domains**, **show chassis**, and **show interfaces** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@CE# show bridge-domains
bd0 {
  domain-type bridge;
  vlan-id all;
  interface ge-2/1/6.0;
  interface ae0.0;
}
```

```
user@CE# show chassis
aggregated-devices {
  ethernet {
    device-count 2;
  }
}

user@CE# show interfaces
ge-2/0/2 {
  gigether-options {
    802.3ad ae0;
  }
}
ge-2/0/3 {
  gigether-options {
    802.3ad ae0;
  }
}
ge-2/1/6 {
  flexible-vlan-tagging;
  encapsulation flexible-ethernet-services;
  unit 0 {
    encapsulation vlan-bridge;
    vlan-id-range 100-110;
  }
}
ae0 {
  flexible-vlan-tagging;
  encapsulation flexible-ethernet-services;
  aggregated-ether-options {
    lacp {
      active;
      system-priority 100;
    }
  }
  unit 0 {
    encapsulation vlan-bridge;
    vlan-id-range 100-500;
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

## Configuring the Provider Router

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
Router P  set chassis aggregated-devices ethernet device-count 2
          set interfaces ge-1/0/5 gigether-options 802.3ad ae1
          set interfaces ge-1/0/11 gigether-options 802.3ad ae1
          set interfaces ge-1/1/3 flexible-vlan-tagging
          set interfaces ge-1/1/3 encapsulation flexible-ethernet-services
          set interfaces ge-1/1/3 unit 0 encapsulation vlan-bridge
```

```

set interfaces ge-1/1/3 unit 0 vlan-id-range 100-500
set interfaces ae1 flexible-vlan-tagging
set interfaces ae1 encapsulation flexible-ethernet-services
set interfaces ae1 aggregated-ether-options lacp active
set interfaces ae1 aggregated-ether-options lacp system-priority 100
set interfaces ae1 unit 0 encapsulation vlan-bridge
set interfaces ae1 unit 0 vlan-id-range 100-110
set bridge-domains bd0 vlan-id all
set bridge-domains bd0 domain-type bridge
set bridge-domains bd0 interface ge-1/1/3.0
set bridge-domains bd0 interface ae1.0

```

### Router P

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see Using the CLI Editor in Configuration Mode in the CLI User Guide.

To configure Router P:

1. Specify the number of aggregated Ethernet interfaces to be created.

```

[edit chassis]
user@P# set aggregated-devices ethernet device-count 2

```

2. Specify the members to be included within the aggregated Ethernet bundle.

```

[edit interfaces]
user@P# set ge-1/0/5 gigether-options 802.3ad ae1
user@P# set ge-1/0/11 gigether-options 802.3ad ae1

```

3. Configure an interface that connects to multicast senders or receivers.

```

[edit interfaces ge-1/1/3]
user@P# set flexible-vlan-tagging
user@P# set encapsulation flexible-ethernet-services
user@P# set unit 0 encapsulation vlan-bridge
user@P# set unit 0 vlan-id-range 100-500

```

4. Configure parameters on the aggregated Ethernet bundle.

```

[edit interfaces ae1]
user@P# set flexible-vlan-tagging
user@P# set encapsulation flexible-ethernet-services
user@P# set unit 0 encapsulation vlan-bridge
user@P# set unit 0 vlan-id-range 100-110

```

5. Configure LACP on the aggregated Ethernet bundle.

```

[edit interfaces ae1 aggregated-ether-options]
user@P# set lacp active
user@P# set lacp system-priority 100

```

6. Configure a domain that includes the set of logical ports.

```

[edit bridge-domains bd0]
user@P# set vlan-id all
user@P# set domain-type bridge

```

```
user@P# set interface ge-1/1/3.0
user@P# set interface ae1.0
```

## Results

---

From configuration mode, confirm your configuration by entering the **show bridge-domains**, **show chassis**, and **show interfaces** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P# show bridge-domains
bd0 {
  domain-type bridge;
  vlan-id all;
  interface ge-1/1/3.0;
  interface ae1.0;
}

user@P# show chassis
aggregated-devices {
  ethernet {
    device-count 2;
  }
}

user@P# show interfaces
ge-1/0/5 {
  gigether-options {
    802.3ad ae1;
  }
}
ge-1/0/11 {
  gigether-options {
    802.3ad ae1;
  }
}
ge-1/1/3 {
  flexible-vlan-tagging;
  encapsulation flexible-ethernet-services;
  unit 0 {
    encapsulation vlan-bridge;
    vlan-id-range 100-500;
  }
}
ae1 {
  flexible-vlan-tagging;
  encapsulation flexible-ethernet-services;
  aggregated-ether-options {
    lacp {
      active;
      system-priority 100;
    }
  }
  unit 0 {
    encapsulation vlan-bridge;
    vlan-id-range 100-110;
  }
}
```

```
}
```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

Confirm that the configuration is working properly by running the following commands:

- **show iccp**
- **show igmp snooping interface**
- **show igmp snooping membership**
- **show interfaces ae0**
- **show interfaces ae1**
- **show interfaces mc-ae**
- **show l2-learning instance extensive**
- **show multicast snooping route extensive**

### Related Documentation

- [IGMP Snooping in MC-LAG Active-Active on MX Series Routers Overview on page 14](#)
- [Configuring IGMP Snooping in MC-LAG Active-Active on MX Series Routers on page 35](#)
- [Configuring ICCP for MC-LAG](#)
- [show interfaces \(Aggregated Ethernet\) on page 136](#) in the Junos OS Operational Mode Commands

---

## Configuring Aggregated Ethernet Link Protection

You can configure link protection for aggregated Ethernet interfaces to provide QoS on the links during operation.

On aggregated Ethernet interfaces, you designate a primary and backup link to support link protection. Egress traffic passes only through the designated primary link. This includes transit traffic and locally generated traffic on the router or switch. When the primary link fails, traffic is routed through the backup link. Because some traffic loss is unavoidable, egress traffic is not automatically routed back to the primary link when the primary link is reestablished. Instead, you manually control when traffic should be diverted back to the primary link from the designated backup link.

- [Configuring Link Protection for Aggregated Ethernet Interfaces on page 52](#)
- [Configuring Primary and Backup Links for Link Aggregated Ethernet Interfaces on page 52](#)
- [Reverting Traffic to a Primary Link When Traffic is Passing Through a Backup Link on page 52](#)
- [Disabling Link Protection for Aggregated Ethernet Interfaces on page 52](#)

## Configuring Link Protection for Aggregated Ethernet Interfaces

Aggregated Ethernet interfaces support link protection to ensure QoS on the interface.

To configure link protection:

1. Specify that you want to configure the options for an aggregated Ethernet interface.

```
user@host# edit interfaces aex aggregated-ether-options
```

2. Configure the link protection mode.

```
[edit interfaces aex aggregated-ether-options]  
user@host# set link-protection
```

## Configuring Primary and Backup Links for Link Aggregated Ethernet Interfaces

To configure link protection, you must specify a primary and a secondary, or backup, link.

To configure a primary link and a backup link:

1. Configure the primary logical interface.

```
[edit interfaces interface-name]  
user@host# set (fastether-options | together-options) 802.3ad aex primary
```

2. Configure the backup logical interface.

```
[edit interfaces interface-name]  
user@host# set (fastether-options | together-options) 802.3ad aex backup
```

## Reverting Traffic to a Primary Link When Traffic is Passing Through a Backup Link

On aggregated Ethernet interfaces, you designate a primary and backup link to support link protection. Egress traffic passes only through the designated primary link. This includes transit traffic and locally generated traffic on the router or switch. When the primary link fails, traffic is routed through the backup link. Because some traffic loss is unavoidable, egress traffic is not automatically routed back to the primary link when the primary link is reestablished. Instead, you manually control when traffic should be diverted back to the primary link from the designated backup link.

To manually control when traffic should be diverted back to the primary link from the designated backup link, enter the following operational command:

```
user@host> request interface revert aex
```

## Disabling Link Protection for Aggregated Ethernet Interfaces

To disable link protection, issue the **delete interface revert aex** configuration command.

```
user@host# delete interfaces aex aggregated-ether-options link-protection
```

---

## Example: Configuring Aggregated Ethernet Link Protection

The following configuration enables link protection on the **ae0** interface, and specifies the **ge-1/0/0** interface as the primary link and **ge-1/0/1** as the secondary link.

```

[edit interfaces]
ae0 {
  aggregated-ether-options {
    link protection;
  }
}
[edit interfaces]
ge-1/0/0 {
  gigether-options {
    802.3ad ae0 primary;
  }
}
[edit interfaces]
ge-1/0/1 {
  gigether-options {
    802.3ad ae0 backup;
  }
}

```

**Related Documentation**

- Junos® OS Ethernet Interfaces

## Configuring the Number of Aggregated Ethernet Interfaces on the Device

By default, no aggregated Ethernet interfaces are created. You must set the number of aggregated Ethernet interfaces on the routing device before you can configure them.

On M Series and T Series routers, you can configure a maximum number of 128 aggregated interfaces, whereas on MX Series routers you can configure a maximum of 480 aggregated interfaces. The aggregated interfaces are numbered from **ae0** through **ae127** for M Series and T Series routers and the aggregated interfaces (LAG bundles) are numbered from **ae0** through **ae479** on MX Series routers.

1. Specify that you want to access the aggregated Ethernet configuration on the device.

```
user@host# edit chassis aggregated-devices ethernet
```

2. Set the number of aggregated Ethernet interfaces.

```
[edit chassis aggregated-devices ethernet]
user@host# set device-count number
```

You must also specify the constituent physical links by including the **802.3ad** statement at the **[edit interfaces *interface-name* fastether-options]** or **[edit interfaces *interface-name* gigether-options]** hierarchy level.

For information about E Series routers, see Understanding Aggregated Ethernet Interfaces and LACP.

**Related Documentation**

- For information about physical links, see [Configuring an Aggregated Ethernet Interface on page 23](#)
- For a sample configuration, see [Example: Configuring Aggregated Ethernet Interfaces on page 25](#)

- Junos® OS Ethernet Interfaces
- For information about configuring aggregated devices, see the Junos OS System Basics Configuration Guide.

## Configuring Aggregated Ethernet LACP

---

For aggregated Ethernet interfaces, you can configure the Link Aggregation Control Protocol (LACP). LACP is one method of bundling several physical interfaces to form one logical interface. You can configure both VLAN-tagged and untagged aggregated Ethernet with or without LACP enabled.

For Multichassis Link Aggregation (MC-LAG), you must specify the **system-id** and **admin key**. MC-LAG peers use the same **system-id** while sending the LACP messages. The **system-id** can be configured on the MC-LAG network device and synchronized between peers for validation.

LACP exchanges are made between actors and partners. An actor is the local interface in an LACP exchange. A partner is the remote interface in an LACP exchange.

LACP is defined in IEEE 802.3ad, *Aggregation of Multiple Link Segments*.

LACP was designed to achieve the following:

- Automatic addition and deletion of individual links to the aggregate bundle without user intervention
- Link monitoring to check whether both ends of the bundle are connected to the correct group

The Junos OS implementation of LACP provides link monitoring but not automatic addition and deletion of links.

The LACP mode can be active or passive. If the actor and partner are both in passive mode, they do not exchange LACP packets, which results in the aggregated Ethernet links not coming up. If either the actor or partner is active, they do exchange LACP packets. By default, LACP is turned off on aggregated Ethernet interfaces. If LACP is configured, it is in passive mode by default. To initiate transmission of LACP packets and response to LACP packets, you must configure LACP in active mode.

To enable LACP active mode, include the **lACP** statement at the **[edit interfaces interface-name aggregated-ether-options]** hierarchy level, and specify the **active** option:

```
[edit interfaces interface-name aggregated-ether-options]
lACP {
  active;
}
```



**NOTE:** The LACP process exists in the system only if you configure the system in either active or passive LACP mode.

---



To restore the default behavior, include the **lACP** statement at the **[edit interfaces *interface-name* aggregated-ether-options]** hierarchy level, and specify the **passive** option:

```
[edit interfaces interface-name aggregated-ether-options]
lACP {
  passive;
}
```

Starting with Junos OS release 12.2, you can also configure LACP to override the IEEE 802.3ad standard and to allow the standby link always to receive traffic. Overriding the default behavior facilitates subsecond failover.

To override the IEEE 802.3ad standard and facilitate subsecond failover, include the **fast-failover** statement at the **[edit interfaces *interface-name* aggregated-ether-options lACP]** hierarchy level.

For more information, see the following sections:

- [Configuring the LACP Interval on page 55](#)
- [Configuring LACP Link Protection on page 56](#)
- [Tracing LACP Operations on page 59](#)
- [LACP Limitations on page 59](#)
- [Example: Configuring Aggregated Ethernet LACP on page 59](#)

## Configuring the LACP Interval

By default, the actor and partner send LACP packets every second. You can configure the interval at which the interfaces send LACP packets by including the **periodic** statement at the **[edit interfaces *interface-name* aggregated-ether-options lACP]** hierarchy level:

```
[edit interfaces interface-name aggregated-ether-options lACP]
periodic interval;
```

The interval can be fast (every second) or slow (every 30 seconds). You can configure different periodic rates on active and passive interfaces. When you configure the active and passive interfaces at different rates, the transmitter honors the receiver's rate.



**NOTE:** Source address filtering does not work when LACP is enabled. This behavior is not applicable to T series routers and PTX Series Packet Transport Switches. For more information about source address filtering, see [Enabling Ethernet MAC Address Filtering](#).

Percentage policers are not supported on aggregated Ethernet interfaces with the CCC protocol family configured. For more information about percentage policers, see the [Routing Policy Configuration Guide](#).

Generally, LACP is supported on all untagged aggregated Ethernet interfaces. For more information, see [“Configuring Untagged Aggregated Ethernet Interfaces” on page 61](#).

For M Series Multiservice Edge Routers with enhanced Flexible PIC Concentrators (FPCs) and T Series routers, LACP over VLAN-tagged aggregated Ethernet interfaces is supported. For 8-port, 12-port, and 48-port Fast Ethernet PICs, LACP over VLAN-tagged interfaces is not supported.

LACP Fast Periodic, which is achieved by configuring fast (every second) interval for periodic transmission of LACP packets, is supported with graceful Routing Engine switchover (GRES) on MX Series routers only.

---

## Configuring LACP Link Protection



**NOTE:** When using LACP link protection, you can configure only two member links to an aggregated Ethernet interface: one active and one standby.

To force active and standby links within an aggregated Ethernet, you can configure LACP link protection and system priority at the aggregated Ethernet interface level using the **link-protection** and **system-priority** statements. Configuring values at this level results in only the configured interfaces using the defined configuration. LACP interface configuration also enables you to override global (chassis) LACP settings.

LACP link protection also uses port priority. You can configure port priority at the Ethernet interface **[gigether-options]** hierarchy level using the **port-priority** statement. If you choose not to configure port priority, LACP link protection uses the default value for port priority (127).



**NOTE:** LACP link protection supports per-unit scheduling configuration on aggregated Ethernet interfaces.

---

## Enabling LACP Link Protection

To enable LACP link protection for an aggregated Ethernet interfaces, use the **link-protection** statement at the **[edit interfaces aeX aggregated-ether-options lacp]** hierarchy level:

```
[edit interfaces aeX aggregated-ether-options lacp]
link-protection;
  disable;
  revertive;
  non-revertive;
}
```

By default, LACP link protection reverts to a higher-priority (lower-numbered) link when that higher-priority link becomes operational or a link is added to the aggregator that is determined to be higher in priority. However, you can suppress link calculation by adding the **non-revertive** statement to the LACP link protection configuration. In nonrevertive mode, once a link is active and collecting and distributing packets, the subsequent addition of a higher-priority (better) link does not result in a switch and the current link remains active.

If LACP link protection is configured to be nonrevertive at the global ([**edit chassis**] hierarchy) level, you can add the **revertive** statement to the LACP link protection configuration to override the nonrevertive setting for the interface. In revertive mode, the addition of a higher-priority link to the aggregator results in LACP performing a priority recalculation and switching from the current active link to the new active link.



**CAUTION:** If both ends of an aggregator have LACP link protection enabled, make sure to configure both ends of the aggregator to use the same mode. Mismatching LACP link protection modes can result in lost traffic.

We strongly recommend you to use LACP on both ends of the aggregator, when you connect an aggregated Ethernet interface with two member interfaces of MX Series routers to any other vendor device. Otherwise, the vendor device (say a Layer 2 switch, or a router), will not be able to manage the traffic coming from the two link aggregated Ethernet bundle. As a result, you might observe the vendor device sending back the traffic to the backup member link of the aggregated Ethernet interface.

Currently, MX-MPC2-3D, MX-MPC2-3D-Q, MX-MPC2-3D-EQ, MX-MPC1-3D, MX-MPC1-3D-Q, and MPC-3D-16XGE-SFP do not drop traffic coming back to the backup link, whereas DPCE-R-Q-20GE-2XGE, DPCE-R-Q-20GE-SFP, DPCE-R-Q-40GE-SFP, DPCE-R-Q-4XGE-XFP, DPCE-X-Q-40GE-SFP, and DPCE-X-Q-4XGE-XFP drop traffic coming to the backup link.

### Configuring LACP System Priority

To configure LACP system priority for aggregated Ethernet interfaces on the interface, use the **system-priority** statement at the [**edit interfaces aeX aggregated-ether-options lacp**] hierarchy level:

```
[edit interfaces aeX aggregated-ether-options lacp]
system-priority;
```

The system priority is a 2-octet binary value that is part of the LACP system ID. The LACP system ID consists of the system priority as the two most-significant octets and the interface MAC address as the six least-significant octets. The system with the numerically

lower value for system priority has the higher priority. By default, system priority is 127, with a range of 0 to 65,535.

### Configuring LACP System Identifier

---

To configure the LACP system identifier for aggregated Ethernet interfaces, use the **system-id** statement at the **[edit interfaces aeX aggregated-ether-options lacp]** hierarchy level:

```
[edit interfaces aeX aggregated-ether-options lacp]
system-id system-id;
```

The user-defined system identifier in LACP enables two ports from two separate routers (M Series or MX Series routers) to act as though they were part of the same aggregate group.

The system identifier is a 48-bit (6-byte) globally unique field. It is used in combination with a 16-bit system-priority value, which results in a unique LACP system identifier.

### Configuring LACP administrative Key

---

To configure an administrative key for LACP, include the **admin-key number** statement at the **edit interfaces aex aggregated-ether-options lacp** hierarchy level:

```
[edit interfaces ae x aggregated-ether-options-lacp]
admin-key number;
```



**NOTE:** You must configure MC-LAG to configure the **admin-key** statement. For more information about MC-LAG, see [“Configuring Multichassis Link Aggregation” on page 29](#).

---

### Configuring LACP Port Priority

---

To configure LACP port priority for aggregated Ethernet interfaces, use the **port-priority** statement at the **[edit interfaces interface-name ggether-options 802.3ad aeX lacp]** or **[edit interfaces interface-name fastether-options 802.3ad aeX lacp]** hierarchy levels:

```
[edit interfaces interface-name ggether-options 802.3ad aeX lacp]
port-priority priority;
```

The port priority is a 2-octet field that is part of the LACP port ID. The LACP port ID consists of the port priority as the two most-significant octets and the port number as the two least-significant octets. The system with the numerically lower value for port priority has the higher priority. By default, port priority is 127, with a range of 0 to 65,535.

Port aggregation selection is made by each system based on the highest port priority and are assigned by the system with the highest priority. Ports are selected and assigned starting with the highest priority port of the highest priority system and working down in priority from there.



**NOTE:** Port aggregation selection (discussed above) is performed for the active link when LACP link protection is enabled. Without LACP link protection, port priority is not used in port aggregation selection.

## Tracing LACP Operations

To trace the operations of the LACP process, include the **traceoptions** statement at the **[edit protocols lacp]** hierarchy level:

```
[edit protocols lacp]
traceoptions {
  file <filename> <files number> <size size> <world-readable | no-world-readable>;
  flag flag;
  no-remote-trace;
}
```

You can specify the following flags in the **protocols lacp traceoptions** statement:

- **all**—All LACP tracing operations
- **configuration**—Configuration code
- **packet**—Packets sent and received
- **process**—LACP process events
- **protocol**—LACP protocol state machine
- **routing-socket**—Routing socket events
- **startup**—Process startup events

For general information about tracing, see the tracing and logging information in the Junos OS System Basics Configuration Guide.

## LACP Limitations

LACP can link together multiple different physical interfaces, but only features that are supported across all of the linked devices will be supported in the resulting link aggregation group (LAG) bundle. For example, different PICs can support a different number of forwarding classes. If you use link aggregation to link together the ports of a PIC that supports up to 16 forwarding classes with a PIC that supports up to 8 forwarding classes, the resulting LAG bundle will only support up to 8 forwarding classes. Similarly, linking together a PIC that supports WRED with a PIC that does not support it will result in a LAG bundle that does not support WRED.

## Example: Configuring Aggregated Ethernet LACP

Configure aggregated Ethernet LACP over a VLAN-tagged interface:

### LACP with VLAN-Tagged Aggregated Ethernet

```
[edit interfaces]
fe-5/0/1 {
  fastether-options {
    802.3ad ae0;
  }
}
ae0 {
  aggregated-ether-options {
    lacp {
      active;
    }
  }
  vlan-tagging;
  unit 0 {
    vlan-id 100;
    family inet {
      address 10.1.1.2/24 {
        vrrp-group 0 {
          virtual-address 10.1.1.4;
          priority 200;
        }
      }
    }
  }
}
```

Configure aggregated Ethernet LACP over an untagged interface:

### LACP with Untagged Aggregated Ethernet

```
[edit interfaces]
fe-5/0/1 {
  fastether-options {
    802.3ad ae0;
  }
}
ae0 {
  aggregated-ether-options {
    lacp {
      active;
    }
  }
  unit 0 {
    family inet {
      address 10.1.1.2/24 {
        vrrp-group 0 {
          virtual-address 10.1.1.4;
          priority 200;
        }
      }
    }
  }
}
```

- Related Documentation**
- [lacp on page 112](#)
  - [link-protection on page 113](#)

- [traceoptions on page 129](#)
- Junos® OS Ethernet Interfaces

## Configuring Tagged Aggregated Ethernet Interfaces

To specify aggregated Ethernet interfaces, include the **vlan-tagging** statement at the **[edit interfaces aex]** hierarchy level:

```
[edit interfaces aex]
vlan-tagging;
```

You must also include the **vlan-id** statement:

```
vlan-id number;
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]**

For more information about the **vlan-tagging** and **vlan-id** statements, see 802.1Q VLANs Overview.

- Related Documentation
- [vlan-id on page 130](#)
  - [vlan-tagging on page 131](#)

## Configuring Untagged Aggregated Ethernet Interfaces

When you configure an untagged Aggregated Ethernet interface, the existing rules for untagged interfaces apply. These rules are as follows:

- You can configure only one logical interface (unit 0) on the port. The logical unit 0 is used to send and receive LACP or marker protocol data units (PDUs) to and from the individual links.
- You cannot include the **vlan-id** statement in the configuration of the logical interface.

[Table 3 on page 61](#) lists untagged aggregated Ethernet and LACP support by PIC and router.

**Table 3: Untagged Aggregated Ethernet and LACP Support by PIC and Platform**

PIC Type	M Series	LACP	T Series	LACP
4-port Fast Ethernet PIC Type 1	Yes	Yes	Yes	Yes
1-port Gigabit Ethernet PIC Type 1	Yes	Yes	Yes	Yes

**Table 3: Untagged Aggregated Ethernet and LACP Support by PIC and Platform (*continued*)**

PIC Type	M Series	LACP	T Series	LACP
2-port Gigabit Ethernet PIC Type 2	Yes	Yes	Yes	Yes
4-port Gigabit Ethernet PIC Type 2	Yes	Yes	Yes	Yes
1-port 10-Gigabit Ethernet M160	Yes	Yes	NA	NA
10-port Gigabit Ethernet PIC Type 3	Yes (M120, M320)	Yes	Yes	Yes
1-port 10-Gigabit Ethernet PIC Type 3	N/A	NA	Yes	Yes
8-port Gigabit Ethernet PIC Type 3	Yes	Yes	Yes	Yes

The 8-port Fast Ethernet PIC does not support untagged aggregated Ethernet or LACP.

Syslog messages are logged if you try to configure an untagged aggregated Ethernet interface using an unsupported PIC type.

For more information about configuring LACP, see [“Configuring Aggregated Ethernet LACP” on page 54](#).

### Example: Configuring Untagged Aggregated Ethernet Interfaces

Configure an untagged aggregated Ethernet interface by omitting the **vlan-tagging** and **vlan-id** statements from the configuration:

```
[edit interfaces]
fe-5/0/1 {
  fastether-options {
    802.3ad ae0;
  }
}
ae0 {
  # vlan-tagging; OMIT FOR UNTAGGED AE CONFIGURATIONS
  unit 0 {
    # vlan-id 100; OMIT FOR UNTAGGED AE CONFIGURATIONS
    family inet {
      address 13.1.1.2/24 {
        vrrp-group 0 {
          virtual-address 13.1.1.4;
          priority 200;
        }
      }
    }
  }
}
```

#### Related Documentation

- For more information about configuring LACP, see [Configuring Aggregated Ethernet LACP on page 54](#).



- Junos® OS Ethernet Interfaces

## Configuring Aggregated Ethernet Link Speed

On aggregated Ethernet interfaces, you can set the required link speed for all interfaces included in the bundle. All interfaces that make up a bundle must be the same speed. If you include in the aggregated Ethernet interface an individual link that has a speed different from the speed you specify in the **link-speed** parameter, an error message will be logged.

To set the required link speed:

1. Specify that you want to configure the aggregated Ethernet options.

```
user@host# edit interfaces interface-name aggregated-ether-options
```

2. Configure the link speed.

```
[edit interfaces interface-name aggregated-ether-options ]
user@host# set link-speed speed
```

**speed** can be in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).

Aggregated Ethernet interfaces on the M120 router can have one of the following speed values:

- **100m**—Links are 100 Mbps.
- **10g**—Links are 10 Gbps.
- **1g**—Links are 1 Gbps.
- **OC192**—Links are OC192 or STM64c.

Aggregated Ethernet links on EX Series switches can be configured to operate at one of the following speeds:

- **10m**
- **100m**
- **1g**
- **10g**
- **50g**

- Related Documentation
- [aggregated-ether-options on page 103](#)
  - Junos® OS Ethernet Interfaces

## Configuring Aggregated Ethernet Minimum Links

---

On aggregated Ethernet interfaces, you can configure the minimum number of links that must be up for the bundle as a whole to be labeled **up**. By default, only one link must be up for the bundle to be labeled **up**.

To configure the minimum number of links:

1. Specify that you want to configure the aggregated Ethernet options.

```
user@host# edit interfaces interface-name aggregated-ether-options
```

2. Configure the minimum number of links.

```
[edit interfaces interface-name aggregated-ether-options]  
user@host# set minimum-links number
```

On M120, M320, MX Series, T Series, and TX Matrix routers with Ethernet interfaces, the valid range for **minimum-links *number*** is 1 through 16. When the maximum value (16) is specified, all configured links of a bundle must be up for the bundle to be labeled **up**.

On all other routers and on EX Series switches, other than EX8200 switches, the range of valid values for **minimum-links *number*** is 1 through 8. When the maximum value (8) is specified, all configured links of a bundle must be up for the bundle to be labeled **up**.

On EX8200 switches, the range of valid values for **minimum-links *number*** is 1 through 12. When the maximum value (12) is specified, all configured links of a bundle must be up for the bundle to be labeled **up**.

If the number of links configured in an aggregated Ethernet interface is less than the minimum link value configured under the **aggregated-ether-options** statement, the configuration commit fails and an error message is displayed.

- Related Documentation**
- [aggregated-ether-options on page 103](#)
  - [minimum-links on page 118](#)
  - Junos® OS Ethernet Interfaces

## Configuring Multicast Statistics Collection on Aggregated Ethernet Interfaces

---

T Series and TX Matrix routers support multicast statistics collection on aggregated Ethernet interfaces in both ingress and egress directions. The multicast statistics functionality can be configured on a physical interface thus enabling multicast accounting for all the logical interfaces below the physical interface.

The multicast statistics information is displayed only when the interface is configured with the **multicast-statistics** statement, which is not enabled by default.

Multicast statistics collection requires at least one logical interface is configured with family inet or inet6; otherwise, the commit for **multicast-statistics** will fail.

The multicast in/out statistics can be obtained via interfaces statistics query through CLI and via MIB objects through SNMP query.

To configure multicast statistics:

1. Include the **multicast-statistics** statement at the **[edit interfaces interface-name]** hierarchy level.

An example of a multicast statistics configuration for an aggregated Ethernet interface follows:

```
[edit interfaces]
ae0 {
  multicast-statistics;
}
```

To display multicast statistics, use the **show interfaces *interface-name* statistics detail** command.

#### Related Documentation

- multicast-statistics
- Configuring Multicast Statistics Collection on Ethernet Interfaces
- Junos® OS Ethernet Interfaces

## Configuring Scheduler on Aggregated Ethernet Interfaces Without Link Protection

On aggregated Ethernet interfaces, you can configure scheduler in non-link-protect mode on the following platforms:

- MX-Series
- M120 and M320 with IQ2 PIC
- T-series platforms (T620 and T320) with IQ2 PIC

The scheduler functions supported are:

- Per unit scheduler
- Hierarchical scheduler
- Shaping at the physical interface

To configure the hierarchical scheduler on aggregated Ethernet interfaces in the non link-protect mode, include the **hierarchical-scheduler** statement at the **[edit interfaces aeX]** hierarchy level:

```
[edit interfaces aeX hierarchical-scheduler]
```

Prior to Junos OS Release 9.6, the hierarchical scheduler mode on these models required the **aggregated-ether-options** statement **link-protection** option. If a **link-protection** option is not specified, the scheduler is configured in non-link-protect mode.

To specify the member link bandwidth derivation based on the equal division model (**scale**) or the replication model (**replicate**) on aggregated Ethernet interfaces, include

the **member-link-scheduler (scale | replicate)** option at the **[edit class-of-service interfaces aeX]** hierarchy level. The default setting is **scale**.

**[edit class-of-service interfaces aeX member-link-scheduler (scale | replicate)]**



**NOTE:** In link-protect mode, only one link is active at a time and the other link acts as the backup link, whereas in a non link-protect mode, all the links of the aggregate bundle are active at the same time. There is no backup link. If a link goes down or a new link is added to the bundle, traffic redistribution occurs.

**Related  
Documentation**

- [Configuring Hierarchical CoS for a Subscriber Interface of Aggregated Ethernet Links](#)
- [Junos® OS Ethernet Interfaces](#)
- For more information on the hierarchical scheduler (CoS), see the Junos OS Class of Service Configuration Guide.

---

## Configuring Symmetrical Load Balancing on an 802.3ad Link Aggregation Group on MX Series Routers

---

This section describes configuration of symmetrical load balancing on an 802.3ad link aggregation group (LAG) on MX Series routers.

- [Symmetrical Load Balancing on an 802.3ad LAG on MX Series Routers Overview on page 66](#)
- [Configuring Symmetric Load Balancing on an 802.3ad LAG on MX Series Routers on page 67](#)
- [Example Configurations on page 70](#)

### Symmetrical Load Balancing on an 802.3ad LAG on MX Series Routers Overview

MX Series routers with Aggregated Ethernet PICs support symmetrical load balancing on an 802.3ad LAG. This feature is significant when two MX Series routers are connected transparently through deep packet inspection (DPI) devices over an LAG bundle. DPI devices keep track of flows and require information of a given flow in both forward and reverse directions. Without symmetrical load balancing on an 802.3ad LAG, the DPIs could misunderstand the flow, leading to traffic disruptions. By using this feature, a given flow of traffic (duplex) is ensured for the same devices in both directions.

Symmetrical load balancing on an 802.3ad LAG utilizes a mechanism of interchanging the source and destination addresses for a hash computation of fields, such as source address and destination address. The result of a hash computed on these fields is used to choose the link of the LAG. The hash-computation for the forward and reverse flow must be identical. This is achieved by swapping source fields with destination fields for the reverse flow. The swapped operation is referred to as *complement hash computation* or **symmetric-hash complement** and the regular (or unswapped) operation as *symmetric-hash computation* or **symmetric-hash**. The swappable fields are MAC address, IP address, and port.


## Configuring Symmetric Load Balancing on an 802.3ad LAG on MX Series Routers

You can specify whether symmetric hash or complement hash is done for load-balancing traffic. To configure symmetric hash, use the **symmetric-hash** statement at the **[edit forwarding-options hash-key family inet]** hierarchy level. To configure symmetric hash complement, use the **symmetric-hash complement** statement and option at the **[edit forwarding-options hash-key family inet]** hierarchy level.

These operations can also be performed at the PIC level by specifying a *hash key*. To configure a hash key at the PIC level, use the **symmetric-hash** or **symmetric-hash complement** statement at the **[edit chassis hash-key family inet]** and **[edit chassis hash-key family multiservice]** hierarchy levels.

Consider the example in [Figure 15 on page 67](#).

**Figure 15: Symmetric Load Balancing on an 802.3ad LAG on MX Series Routers**

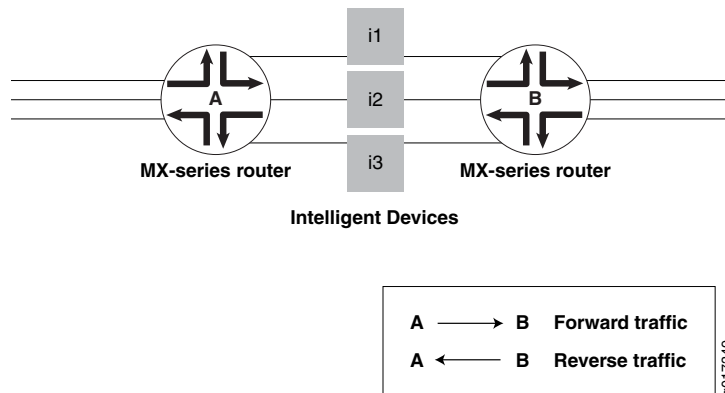

Router A is configured with symmetric hash and Router B is configured with symmetric hash complement. Thus, for a given flow  $fx$ , post hash computation is from Router A to Router B through i2. The reverse traffic for the same flow  $fx$  is from Router B to Router A through the same i2 device as its hashing (done after swapping source and destination fields) and returns the same link index; since it is performed on the interchanged source and destination addresses.

However, the link chosen may or may not correspond to what was attached to the DPI. In other words, the hashing result should point to the same links that are connected, so that the traffic flows through the same DPI devices in both directions. To make sure this happens, you need to also configure the counterpart ports (ports that are connected to same DPI-IN) with the identical link index. This is done when configuring a child-link into the LAG bundle. This ensures that the link chosen for a given hash result is always the same on either router.

Note that any two links connected to each other should have the same link index and these link indices must be unique in a given bundle.

**NOTE:**

The following restrictions apply when configuring symmetric load balancing on an 802.3ad LAG on MX Series routers:

- The Packet Forwarding Engine (PFE) can be configured to hash the traffic in either symmetric or complement mode. A single PFE complex cannot work simultaneously in both operational modes and such a configuration can yield undesirable results.
- The per-PFE setting overrides the chassis-wide setting only for the family configured. For the other families, the PFE complex still inherits the chassis-wide setting (when configured) or the default setting.
- Any change in the hash key configuration requires a reboot of the FPC for the changes to take effect.
- This feature supports VPLS, INET, and bridged traffic only.
- This feature cannot work in tandem with the `per-flow-hash-seed load-balancing` option. It requires that all the PFE complexes configured in complementary fashion share the same seed. A change in the seed between two counterpart PFE complexes may yield undesired results.

For additional information, see the Junos OS VPNs Configuration Guide and the Junos OS System Basics Configuration Guide.

**Example Configuration Statements**

To configure 802.3ad LAG parameters at the bundle level:

```
[edit interfaces]
g(x)e-fpc/pic/port {
  gicether-options {
    802.3ad {
      bundle;
      link-index number;
    }
  }
}
```

where the `link-index number` ranges from 0 through 15.

You can check the link index configured above using the `show interfaces` command:

```
[edit forwarding-options hash-key]
family inet {
  layer-3;
  layer-4;
  symmetric-hash {
    [complement;]
  }
}
family multiservice {
  source-mac;
  destination-mac;
  payload {
```

```

ip {
  layer-3 {
    source-ip-only | destination-ip-only;
  }
  layer-4;
}
}
symmetric-hash {
  [complement;]
}
}

```

For load-balancing Layer 2 traffic based on Layer 3 fields, you can configure 802.3ad LAG parameters at a per PIC level. These configuration options are available under the chassis hierarchy as follows:

```

[edit chassis]
fpc X {
  pic Y {
    .
    .
    .
    hash-key {
      family inet {
        layer-3;
        layer-4;
        symmetric-hash {
          [complement;]
        }
      }
      family multiservice {
        source-mac;
        destination-mac;
        payload {
          ip {
            layer-3 {
              source-ip-only | destination-ip-only;
            }
            layer-4;
          }
        }
        symmetric-hash {
          [complement;]
        }
      }
    }
    .
    .
    .
  }
}

```

## Example Configurations

### Example Configurations of Chassis Wide Settings

---

**Router A**     `user@host> show configuration forwarding-options hash-key`  
family multiservice {  
  payload {  
    ip {  
      layer-3;  
    }  
  }  
  symmetric hash;  
}

**Router B**     `user@host> show configuration forwarding-options hash-key`  
family multiservice {  
  payload {  
    ip {  
      layer-3;  
    }  
  }  
  symmetric-hash {  
    complement;  
  }  
}

### Example Configurations of Per-Packet-Forwarding-Engine Settings

---

**Router A**     `user@host> show configuration chassis fpc 2 pic 2 hash-key`  
family multiservice {  
  payload {  
    ip {  
      layer-3;  
    }  
  }  
  symmetric hash;  
}

**Router B**     `user@host> show configuration chassis fpc 2 pic 3 hash-key`  
family multiservice {  
  payload {  
    ip {  
      layer-3;  
    }  
  }  
  symmetric-hash {  
    complement;  
  }  
}

**Related Documentation**

- Junos® OS Ethernet Interfaces
- For additional information, see the Junos OS VPNs Configuration Guide and the Junos OS System Basics Configuration Guide.



## CHAPTER 3

# Network Interfaces Configuration Statements and Hierarchy

- [\[edit chassis\] Hierarchy Level on page 71](#)
- [\[edit interfaces\] Hierarchy Level on page 72](#)
- [\[edit logical-systems\] Hierarchy Level on page 88](#)
- [\[edit protocols connections\] Hierarchy Level on page 93](#)
- [\[edit protocols dot1x\] Hierarchy Level on page 94](#)
- [\[edit protocols iccp\] Hierarchy Level on page 94](#)
- [\[edit protocols lacp\] Hierarchy Level on page 95](#)
- [\[edit protocols oam\] Hierarchy Level on page 95](#)
- [\[edit protocols ppp\] Hierarchy Level on page 97](#)
- [\[edit protocols pppoe\] Hierarchy Level on page 97](#)
- [\[edit protocols protection-group\] Hierarchy Level on page 98](#)
- [\[edit protocols vrrp\] Hierarchy Level on page 99](#)
- [\[edit system processes\] Hierarchy Level on page 99](#)

### [\[edit chassis\] Hierarchy Level](#)

---

```
chassis {
  aggregated-devices {
    ethernet {
      device-count number;
    }
    sonet {
      device-count number;
    }
  }
  channel-group number {
    ethernet {
      device-count number;
    }
    fpc slot-number {
      pic pic-number {
        adaptive-services {
          service-package (layer-2 | layer-3);
        }
      }
    }
  }
}
```

```
}
aggregate-ports;
atm-cell-relay-accumulation;
atm-l2circuit-mode (aal5 | cell | trunk trunk);
ce1 {
  e1 link-number {
    channel-group group-number;
    timeslots time-slot-range;
  }
}
channelization;
ct1 {
  t1 link-number {
    channel-group group-number;
    timeslots time-slot-range;
  }
}
ct3 {
  port port-number {
    t1 link-number {
      channel-group group-number;
      timeslots time-slot-range;
    }
  }
  framing sdh;
}
max-queues-per-interface number;
mlfr-uni-nni-bundles num-intf;
no-concatenate;
shdsl {
  pic-mode (1-port-atm | 2-port-atm);
}
vtmapping (klm | itu-t);
}
}
fpc slot-number{
pic pic-number{
  egress-policer-overhead bytes;
  ingress-policer-overhead bytes;
}
}
}
```

---

## [edit interfaces] Hierarchy Level

The statements at the [edit interfaces *interface-name* unit *logical-unit-number*] hierarchy level can also be configured at the [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*] hierarchy level.



**NOTE:** The accounting-profile statement is an exception to this rule. The accounting-profile statement can be configured at the [edit interfaces *interface-name* unit *logical-unit-number*] hierarchy level, but it cannot be configured at the [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*] hierarchy level.

```

interfaces {
  traceoptions {
    file filename <files number> <match regular-expression> <size size> <world-readable |
      no-world-readable> ;
    flag flag <disable>;
  }
  interface-name {
    accounting-profile name;
    aggregated-ether-options {
      (flow-control | no-flow-control);
      lacp {
        (active | passive);
        link-protection {
          disable;
          (revertive | non-revertive);
          periodic interval;
          system-priority priority;
        }
      }
      link-protection;
      link-speed speed;
      (loopback | no-loopback);
      mc-ae {
        chassis-id chassis-id;
        mc-ae-id mc-ae-id;
        mode (active-active | active-standby);
        redundancy-group group-id;
        status-control (active | standby);
      }
      minimum-links number;
      source-address-filter {
        mac-address;
      }
      (source-filtering | no-source-filtering);
    }
    aggregated-sonet-options {
      link-speed speed | mixed;
      minimum-links number;
    }
    atm-options {
      cell-bundle-size cells;
      ilmi;
      linear-red-profiles profile-name {
        high-plp-max-threshold percent;
        low-plp-max-threshold percent;
        queue-depth cells high-plp-threshold percent low-plp-threshold percent;
      }
    }
    mpls {

```

```
    pop-all-labels {
        required-depth number;
    }
}
pic-type (atm1 | atm2);
plp-to-clp;
promiscuous-mode {
    vpi vpi-identifier;
}
scheduler-maps map-name {
    forwarding-class class-name {
        epd-threshold cells plp1 cells;
        linear-red-profile profile-name;
        priority (high | low);
        transmit-weight (cells number | percent number);
    }
    vc-cos-mode (alternate | strict);
}
use-null-cw;
vpi vpi-identifier {
    maximum-vcs maximum-vcs;
    oam-liveness {
        down-count cells;
        up-count cells;
    }
    oam-period (seconds | disable);
    shaping {
        (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
        burst length);
        queue-length number;
    }
}
}
clocking clock-source;
data-input (system | interface interface-name);
dce;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
        control-signal (assert | de-assert | normal);
```

```

cts (ignore | normal | require);
dcd (ignore | normal | require);
dsr (ignore | normal | require);
dtr signal-handling-option;
ignore-all;
indication (ignore | normal | require);
rts (assert | de-assert | normal);
tm (ignore | normal | require);
}
dtr-circuit (balanced | unbalanced);
dtr-polarity (negative | positive);
encoding (nrz | nrzi);
indication-polarity (negative | positive);
line-protocol protocol;
loopback mode;
rts-polarity (negative | positive);
tm-polarity (negative | positive);
transmit-clock invert;
}
description text;
dialer-options {
    pool pool-name <priority priority>;
}
disable;
ds0-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    byte-encoding (nx56 | nx64);
    fcs (16 | 32);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback payload;
    start-end-flag (filler | shared);
}
e1-options {
    bert-error-rate rate;
    bert-period seconds;
    fcs (16 | 32);
    framing (g704 | g704-no-crc4 | unframed);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback (local | remote);
    start-end-flag (filler | shared);
    timeslots time-slot-range;
}
e3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    framing feet;
    compatibility-mode (digital-link | kentrox | larscom) <subrate value>;
    fcs (16 | 32);
    framing (g.751 | g.832);
    idle-cycle-flag (filler | shared);
}

```

```
invert-data;
loopback (local | remote);
(payload-scrambler | no-payload-scrambler);
start-end-flag (filler | shared);
(unframed | no-unframed);
}
encapsulation type;
es-options {
    backup-interface es-fpc/pic/port;
}
fastether-options {
    802.3ad aex;
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    ingress-rate-limit rate;
    (loopback | no-loopback);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
    source-address-filter {
        mac-address;
    }
    (source-filtering | no-source-filtering);
}
flexible-vlan-tagging;
gigether-options {
    802.3ad aex;
    (asynchronous-notification | no-asynchronous-notification);
    (auto-negotiation | no-auto-negotiation) remote-fault <local-interface-online |
        local-interface-offline>;
    auto-reconnect seconds;
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    (loopback | no-loopback);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
    no-auto-mdix;
    source-address-filter {
        mac-address;
    }
    (source-filtering | no-source-filtering);
    ethernet-switch-profile {
        (mac-learn-enable | no-mac-learn-enable);
        tag-protocol-id [ tpids ];
        ethernet-policer-profile {
            input-priority-map {
                ieee802.1p premium [ values ];
            }
            output-priority-map {
                classifier {
                    premium {
```

77

```
    spid2 spid-string;  
    static-tei-val value;  
    switch-type (att5e | etsi | nil | ntdms100 | ntt);  
    t310 seconds;  
    tei-option (first-call | power-up);  
}  
keepalives <down-count number> <interval seconds> <up-count number>;  
link-mode mode;  
lmi {  
    lmi-type (ansi | itu | c-lmi);  
    n391dte number;  
    n392dce number;  
    n392dte number;  
    n393dce number;  
    n393dte number;  
    t391dte seconds;  
    t392dce seconds;  
}  
lsq-failure-options {  
    no-termination-request;  
    [ trigger-link-failure interface-name ];  
}  
mac mac-address;  
mlfr-uni-nni-bundle-options {  
    acknowledge-retries number;  
    acknowledge-timer milliseconds;  
    action-red-differential-delay (disable-tx | remove-link);  
    drop-timeout milliseconds;  
    fragment-threshold bytes;  
    cisco-interoperability send-lip-remove-link-for-link-reject;  
    hello-timer milliseconds;  
    link-layer-overhead percent;  
    lmi-type (ansi | itu | c-lmi);  
    minimum-links number;  
    mrru bytes;  
    n391 number;  
    n392 number;  
    n393 number;  
    red-differential-delay milliseconds;  
    t391 seconds;  
    t392 seconds;  
    yellow-differential-delay milliseconds;  
}  
modem-options {  
    dialin (console | routable);  
    init-command-string initialization-command-string;  
}  
mtu bytes;  
multi-chassis-protection {  
    peer a.b.c.d {  
        interface interface-name;  
    }  
}  
multiservice-options {  
    (core-dump | no-core-dump);  
    (syslog | no-syslog);  
}
```



```

}
native-vlan-id number;
no-gratuitous-arp-request;
no-keepalives;
no-partition {
    interface-type type;
}
no-vpivci-swapping;
otn-options {
    fec (efec | gfec | none);
    (laser-enable | no-laser-enable);
    (line-loopback | no-line-loopback);
    pass-thru;
    rate (fixed-stuff-bytes | no-fixed-stuff-bytes | pass-thru);
    transmit-payload-type number;
    trigger (oc-lof | oc-lom | oc-los | oc-wavelength-lock | odu-ais | odu-bbe-th | odu-bdi
        | odu-es-th | odu-lck | odu-oci | odu-sd | odu-ses-th | odu-ttim | odu-uas-th |
        opu-ptm | otu-ais | otu-bbe-th | otu-bdi | otu-es-th | otu-fec-deg | otu-fec-exe |
        otu-iae | otu-sd | otu-ses-th | otu-ttim | otu-uas-th);
    tti;
}
optics-options {
    wavelength nm;
    alarm alarm-name {
        (syslog | link-down);
    }
    warning warning-name {
        (syslog | link-down);
    }
}
partition partition-number oc-slice oc-slice-range interface-type type;
timeslots time-slot-range;
passive-monitor-mode;
per-unit-scheduler;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    no-termination-request;
    pap {
        access-profile name;
        local-name name;
        local-password password;
        compression;
    }
}
psn-vcip psn-vci-identifier;
psn-vpip psn-vpi-identifier;

```

```
receive-bucket {
    overflow (discard | tag);
    rate percentage;
    threshold bytes;
}
redundancy-options {
    priority sp-fpc/pic/port;
    secondary sp-fpc/pic/port;
    hot-standby;
}
satop-options {
    payload-size n;
}
schedulers number;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dtr-circuit (balanced | unbalanced);
    dtr-polarity (negative | positive);
    encoding (nrz | nrzi);
    indication-polarity (negative | positive);
    line-protocol protocol;
    loopback mode;
    rts-polarity (negative | positive);
    tm-polarity (negative | positive);
    transmit-clock invert;
}
services-options {
    inactivity-timeout seconds;
    open-timeout seconds;
```

```

session-limit {
    maximum number;
    rate new-sessions-per-second;
}
syslog {
    host hostname {
        facility-override facility-name;
        log-prefix prefix-number;
        services priority-level;
    }
}
}
shdsl-options {
    annex (annex-a | annex-b);
    line-rate line-rate;
    loopback (local | remote);
    snr-margin {
        current margin;
        snext margin;
    }
}
sonet-options {
    aggregate asx;
    aps {
        advertise-interval milliseconds;
        annex-b;
        authentication-key key;
        fast-aps-switch;
        force;
        hold-time milliseconds;
        lockout;
        neighbor address;
        paired-group group-name;
        preserve-interface;
        protect-circuit group-name;
        request;
        revert-time seconds;
        switching-mode (bidirectional | unidirectional);
        working-circuit group-name;
    }
}
bytes {
    c2 value;
    e1-quiet value;
    f1 value;
    f2 value;
    s1 value;
    z3 value;
    z4 value;
}
fcs (16 | 32);
loopback (local | remote);
mpls {
    pop-all-labels {
        required-depth number;
    }
}
}

```

```
path-trace trace-string;  
(payload-scrambler | no-payload-scrambler);  
rfc-2615;  
trigger {  
    defect ignore;  
    hold-time up milliseconds down milliseconds;  
}  
vtmapping (itu-t | klm);  
(z0-increment | no-z0-increment);  
}  
speed (10m | 100m | 1g | oc3 | oc12 | oc48);  
stacked-vlan-tagging;  
switch-options {  
    switch-port port-number {  
        (auto-negotiation | no-auto-negotiation);  
        speed (10m | 100m | 1g);  
        link-mode (full-duplex | half-duplex);  
    }  
}  
t1-options {  
    bert-algorithm algorithm;  
    bert-error-rate rate;  
    bert-period seconds;  
    buildout value;  
    byte-encoding (nx56 | nx64);  
    crc-major-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5);  
    crc-minor-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5 | 5e-6 | 1e-6);  
    fcs (16 | 32);  
    framing (esf | sf);  
    idle-cycle-flag (flags | ones);  
    invert-data;  
    line-encoding (ami | b8zs);  
    loopback (local | payload | remote);  
    remote-loopback-respond;  
    start-end-flag (filler | shared);  
    timeslots time-slot-range;  
}  
t3-options {  
    atm-encapsulation (direct | plcp);  
    bert-algorithm algorithm;  
    bert-error-rate rate;  
    bert-period seconds;  
    buildout feet;  
    (cbit-parity | no-cbit-parity);  
    compatibility-mode (adtran | digital-link | kentrox | larscom | verilink) <subrate  
        value>;  
    fcs (16 | 32);  
    (feac-loop-respond | no-feac-loop-respond);  
    idle-cycle-flag value;  
    (long-buildout | no-long-buildout);  
    (loop-timing | no-loop-timing);  
    loopback (local | payload | remote);  
    (mac | no-mac);  
    (payload-scrambler | no-payload-scrambler);  
    start-end-flag (filler | shared);  
}
```

```

traceoptions {
    flag flag <flag-modifier> <disable>;
}
transmit-bucket {
    overflow discard;
    rate percentage;
    threshold bytes;
}
(traps | no-traps);
unidirectional;
vlan-tagging;
vlan-vci-tagging;
unit logical-unit-number {
    accept-source-mac {
        mac-address mac-address {
            policer {
                input cos-policer-name;
                output cos-policer-name;
            }
        }
    }
}
accounting-profile name;
advisory-options {
    downstream-rate rate;
    upstream-rate rate;
}
allow-any-vci;
atm-scheduler-map (map-name | default);
backup-options {
    interface interface-name;
}
bandwidth rate;
cell-bundle-size cells;
clear-dont-fragment-bit;
compression {
    rtp {
        f-max-period number;
        maximum-contexts number <force>;
        queues [ queue-numbers ];
        port {
            minimum port-number;
            maximum port-number;
        }
    }
}
compression-device interface-name;
copy-tos-to-outer-ip-header;
demux-destination family;
demux-source family;
demux-options {
    underlying-interface interface-name;
}
description text;
interface {
    l2tp-interface-id name;
    (dedicated | shared);
}

```

```

}
dialer-options {
    activation-delay seconds;
    callback;
    callback-wait-period time;
    deactivation-delay seconds;
    dial-string [ dial-string-numbers ];
    idle-timeout seconds;
    incoming-map {
        caller (caller-id | accept-all);
        initial-route-check seconds;
        load-interval seconds;
        load-threshold percent;
        pool pool-name;
        redial-delay time;
        watch-list {
            [ routes ];
        }
    }
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
fragment-threshold bytes;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    down-count cells;

```

```

    up-count cells;
}
oam-period (seconds | disable);
output-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
        pap;
        default-pap-password password;
        local-name name;
        local-password password;
        passive;
    }
    dynamic-profile profile-name;
    lcp-max-conf-req number;
    lcp-restart-timer milliseconds;
    loopback-clear-timer seconds;
    ncp-max-conf-req number;
    ncp-restart-timer milliseconds;
}
pppoe-options {
    access-concentrator name;
    auto-reconnect seconds;
    (client | server);
    service-name name;
    underlying-interface interface-name;
}
proxy-arp;
service-domain (inside | outside);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
    burst length);
    queue-length number;
}
short-sequence;
transmit-weight number;
(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;

```

```
tunnel {  
    backup-destination address;  
    destination address;  
    key number;  
    routing-instance {  
        destination routing-instance-name;  
    }  
    source source-address;  
    ttl number;  
}  
vci vpi-identifier.vci-identifier;  
vci-range start start-vci end end-vci;  
vpi vpi-identifier;  
vlan-id number;  
vlan-id-list [vlan-id vlan-id-vlan-id];  
vlan-id-range number-number;  
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;  
vlan-tags-outer tpid.vlan-id inner-list [vlan-id vlan-id-vlan-id];  
family family {  
    accounting {  
        destination-class-usage;  
        source-class-usage {  
            direction;  
        }  
    }  
    access-concentrator name;  
    address address {  
        destination address;  
    }  
    bundle ml-fpc/pic/port | ls-fpc/pic/port;  
    duplicate-protection;  
    dynamic-profile profile-name;  
    filter {  
        group filter-group-number;  
        input filter-name;  
        input-list {  
            [filter-names];  
            output filter-name;  
        }  
        output-list {  
            [filter-names];  
        }  
    }  
    ipsec-sa sa-name;  
    keep-address-and-control;  
    max-sessions number;  
    max-sessions-vsa-ignore;  
    mtu bytes;  
    multicast-only;  
    negotiate-address;  
    no-redirects;  
    policer {  
        arp policer-template-name;  
        input policer-template-name;  
        output policer-template-name;  
    }  
}
```



```

primary;
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check {
    fail-filter filter-name;
    mode loose;
}
sampling {
    direction;
}
service {
    input {
        service-set service-set-name <service-filter filter-name>;
        post-service-filter filter-name;
    }
    output {
        service-set service-set-names <service-filter filter-name>;
    }
}
service-name-table table-name;
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
    maximum-seconds>;
targeted-broadcast {
    forward-and-send-to-re;
    forward-only;
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name <destination address destination-profile
    profile-name | preferred-source-address address>;
address address {
    arp ip-address (mac | multicast-mac) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    multipoint-destination address (dlci dlci-identifier | vci vci-identifier);
    multipoint-destination address {
        epd-threshold cells plp1 cells;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period (seconds | disable);
        shaping {
            (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
                rate burst length);
            queue-length number;
        }
        vci vpi-identifier.vci-identifier;
    }
    preferred;
}

```

```
primary;
(vrrp-group | vrrp-inet6-group) group-number {
  (accept-data | no-accept-data);
  advertise-interval seconds;
  authentication-type authentication;
  authentication-key key;
  fast-interval milliseconds;
  (preempt | no-preempt) {
    hold-time seconds;
  }
  priority-number number;
  track {
    priority-cost seconds;
    priority-hold-time interface-name {
      bandwidth-threshold bits-per-second {
        priority;
      }
      interface priority;
    }
    route ip-address/mask routing-instance instance-name priority-cost cost;
  }
  virtual-address [ addresses ];
}
}
```

- Related Documentation**
- [Junos OS Hierarchy and RFC Reference](#)
  - [Junos® OS Ethernet Interfaces](#)
  - [Junos® OS Network Interfaces](#)

---

## [\[edit logical-systems\]](#) Hierarchy Level

The following lists the statements that can be configured at the [\[edit logical-systems\]](#) hierarchy level that are also documented in this manual. For more information about logical systems, see the Logical Systems Configuration Guide.

```
logical-systems logical-system-name {
  interfaces interface-name {
    unit logical-unit-number {
      accept-source-mac {
        mac-address mac-address {
          policer {
            input cos-policer-name;
            output cos-policer-name;
          }
        }
      }
    }
  }
  allow-any-vci;
  atm-scheduler-map (map-name | default);
  bandwidth rate;
```

```

backup-options {
    interface interface-name;
}
cell-bundle-size cells;
clear-dont-fragment-bit;
compression {
    rtp {
        f-max-period number;
        port {
            minimum port-number;
            maximum port-number;
        }
        queues [ queue-numbers ];
    }
}
compression-device interface-name;
description text;
interface {
    l2tp-interface-id name;
    (dedicated | shared);
}
dialer-options {
    activation-delay seconds;
    deactivation-delay seconds;
    dial-string [ dial-string-numbers ];
    idle-timeout seconds;
    initial-route-check seconds;
    load-threshold number;
    pool pool;
    remote-name remote-callers;
    watch-list {
        [ routes ];
    }
}
disable;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
fragment-threshold bytes;
input-vlan-map {
    inner-tag-protocol-id;
    inner-vlan-id;
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
}

```

```
    output-policer policer-name;  
    output-three-color policer-name;  
}  
link-layer-overhead percent;  
minimum-links number;  
mrru bytes;  
multicast-dlci dlci-identifier;  
multicast-vci vpi-identifier.vci-identifier;  
multilink-max-classes number;  
multipoint;  
oam-liveness {  
    up-count cells;  
    down-count cells;  
}  
oam-period (seconds | disable);  
output-vlan-map {  
    inner-tag-protocol-id;  
    inner-vlan-id;  
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-swap);  
    tag-protocol-id tpid;  
    vlan-id number;  
}  
passive-monitor-mode;  
peer-unit unit-number;  
plp-to-clp;  
point-to-point;  
ppp-options {  
    chap {  
        access-profile name;  
        default-chap-secret name;  
        local-name name;  
        passive;  
    }  
    compression {  
        acfc;  
        pfc;  
    }  
}  
dynamic-profile profile-name;  
pap {  
    default-pap-password password;  
    local-name name;  
    local-password password;  
    passive;  
}  
}  
proxy-arp;  
service-domain (inside | outside);  
shaping {  
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst length);  
    queue-length number;  
}  
short-sequence;  
transmit-weight number;  
(traps | no-traps);
```

```

trunk-bandwidth rate;
trunk-id number;
tunnel {
    backup-destination address;
    destination address;
    key number;
    routing-instance {
        destination routing-instance-name;
    }
    source source-address;
    ttl number;
}
vci vpi-identifier.vci-identifier;
vlan-id number;
vlan-id-list [vlan-id vlan-id-vlan-id]
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
vlan-tags outer tpid.vlan-id inner-list [vlan-id vlan-id-vlan-id]
vpi vpi-identifier;
family family {
    accounting {
        destination-class-usage;
        source-class-usage {
            direction;
        }
    }
}
bundle interface-name;
filter {
    group filter-group-number;
    input filter-name;
    input-list {
        [filter-names ];
    }
    output filter-name;
    output-list {
        [filter-names ];
    }
}
ipsec-sa sa-name;
keep-address-and-control;
mtu bytes;
multicast-only;
no-redirects;
policer {
    arp policer-template-name;
    input policer-template-name;
    output policer-template-name;
}
primary;
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check <fail-filter filter-name> {
    <mode loose>;
}
sampling {

```

```
    direction;
}
service {
  input {
    service-set service-set-name <service-filter filter-name>;
    post-service-filter filter-name;
  }
  output {
    service-set service-set-name <service-filter filter-name>;
  }
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
unnumbered-address interface-name destination address destination-profile
profile-name;
address address {
  arp ip-address (mac | multicast-mac) mac-address <publish>;
  broadcast address;
  destination address;
  destination-profile name;
  eui-64;
  multipoint-destination address (dlci dlci-identifier | vci vci-identifier);
  multipoint-destination address {
    epd-threshold cells plp1 cells;
    inverse-arp;
    oam-liveness {
      up-count cells;
      down-count cells;
    }
    oam-period (seconds | disable);
    shaping {
      (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
        rate burst length);
      queue-length number;
    }
    vci vpi-identifier.vci-identifier;
  }
}
preferred;
primary;
(vrrp-group | vrrp-inet6-group) group-number {
  (accept-data | no-accept-data);
  advertise-interval seconds;
  authentication-type authentication;
  authentication-key key;
  fast-interval milliseconds;
  (preempt | no-preempt) {
    hold-time seconds;
  }
}
priority-number number;
track {
  priority-cost seconds;
  priority-hold-time interface-name {
    interface priority;
    bandwidth-threshold bits-per-second {
      priority;
    }
  }
}
```

```

    }
    route ip-address/mask routing-instance instance-name priority-cost cost;
  }
}
virtual-address [ addresses ];
}
}
}
}
}
}

```

- Related Documentation**
- *Junos OS Hierarchy and RFC Reference*
  - Junos® OS Ethernet Interfaces
  - Junos® OS Network Interfaces

### [\[edit protocols connections\] Hierarchy Level](#)

The following statements can also be configured at the **[edit logical-systems *logical-system-name* protocols connections]** hierarchy level.

```

interface-switch connection-name {
  interface interface-name.unit-number;
  interface interface-name.unit-number;
}

```

- Related Documentation**
- [Junos OS Hierarchy and RFC Reference](#)
  - [Junos® OS Ethernet Interfaces](#)
  - [Junos® OS Network Interfaces](#)

## [\[edit protocols dot1x\] Hierarchy Level](#)

---

```
dot1x {  
  authenticator  
    authentication-profile-name access-profile-name;  
    interface interface-ids {  
      maximum-requests integer;  
      retries integer;  
      quiet-period seconds;  
      transmit-period seconds;  
      reauthentication (disable | interval seconds);  
      server-timeout seconds;  
      supplicant (single);  
      supplicant-timeout seconds;  
    }  
  }  
}
```

- Related Documentation**
- [Junos OS Hierarchy and RFC Reference](#)
  - [Junos® OS Ethernet Interfaces](#)
  - [Junos® OS Network Interfaces](#)

## [\[edit protocols iccp\] Hierarchy Level](#)

---

```
iccp {  
  traceoptions;  
  local-ip-address ip address;  
  session-establishment-hold-time value;  
  authentication-key string;  
  peer ip-address {  
    local-ip-address ip address;  
    session-establishment-hold-time value;  
    authentication-key string;  
    redundancy-group-id-list redundancy-group-id-list;  
    liveness-detection;  
  }  
}
```

- Related Documentation**
- [Junos OS Hierarchy and RFC Reference](#)
  - [Junos® OS Ethernet Interfaces](#)
  - [Junos® OS Network Interfaces](#)



## [edit protocols lacp] Hierarchy Level

```
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag <disable>;
}
```

- Related Documentation**
- *Junos OS Hierarchy and RFC Reference*
  - Junos® OS Ethernet Interfaces
  - Junos® OS Network Interfaces

## [edit protocols oam] Hierarchy Level

```
ethernet {
  connectivity-fault-management {
    action-profile profile-name {
      default-actions {
        interface-down;
      }
      event {
        adjacency-loss;
        interface-status-tlv (down | lower-layer-down);
        port-status-tlv blocked;
        rdi;
      }
    }
  }
  linktrace {
    age (30m | 10m | 1m | 30s | 10s);
    path-database-size path-database-size;
  }
  maintenance-domain domain-name {
    bridge-domain name;
    routing-instance rl {
      bridge-domain name;
      instance vpls-instance;
      interface (ge | xe) fpc/pic/port.domain;
      level number;
      maintenance-association name{
        mep identifier {
          direction (up | down)
          interface (ge | xe) fpc/pic/port.domain (working | protect );
          auto-discovery;
          lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
            rem-err-xcon | xcon);
          priority number;
        }
      }
    }
    mip-half-function (none | default | explicit);
    name-format (character-string | none | dns | mac+2oct);
    short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
    protect-maintenance-association protect-ma-name;
    remote-maintenance-association remote-ma-name;
  }
}
```

```
continuity-check {
  hold-interval minutes;
  interval (10m | 10s | 1m | 1s | 100ms);
  loss-threshold number;
}
maintenance-association ma-name {
  mip-half-function (none | default | explicit);
  mep mep-id {
    auto-discovery;
    direction (up | down);
    interface interface-name (working | protect);
    priority number;
    remote-mep mep-id {
      action-profile profile-name;
      sla-iterator-profile profile-name {
        data-tlv-size bytes;
        iteration-count frames;
        priority priority-value;
      }
    }
  }
}
}
performance-monitoring {
  hardware-assisted-timestamping;
  sla-iterator-profiles {
    profile-name {
      disable;
      calculation-weight {
        delay delay-weight;
        delay-variation delay-variation-weight;
      }
      cycle-time milliseconds;
      iteration-period connections;
      measurement-type (loss | statistical-frame-loss | two-way-delay);
    }
  }
}
link-fault-management {
  action-profile profile-name {
    action {
      syslog;
      link-down;
      send-critical-event;
    }
    event {
      link-adjacency-loss;
      link-event-rate {
        frame-error count;
        frame-period count;
        frame-period-summary count;
        symbol-period count;
      }
      protocol-down;
    }
  }
}
```

```

}
interface interface-name {
  apply-action-profile profile-name;
  event-thresholds {
    frame-error count;
    frame-period count;
    frame-period-summary count;
    symbol-period count;
  }
  link-discovery (active | passive);
  negotiation-options {
    allow-remote-loopback;
    no-allow-link-events;
  }
  pdu-interval interval;
  pdu-threshold threshold-value;
  remote-loopback;
}
}
fnp {
  interval <100ms | 1s | 10s | 1m | 10m>;
  loss-threshold number
  interface interface name {
    domain-id domain-id
  }
}
}

```

- Related Documentation**
- [Junos OS Hierarchy and RFC Reference](#)
  - [Junos® OS Ethernet Interfaces](#)
  - [Junos® OS Network Interfaces](#)

### [\[edit protocols ppp\] Hierarchy Level](#)

```

monitor-session (interface-name | all);
tracoptions {
  file filename <files number> <match regular-expression> <size size> <world-readable |
  no-world-readable> ;
  flag flag <disable>;
}

```

- Related Documentation**
- [Junos OS Hierarchy and RFC Reference](#)
  - [Junos® OS Ethernet Interfaces](#)
  - [Junos® OS Network Interfaces](#)

### [\[edit protocols pppoe\] Hierarchy Level](#)

```

pppoe {
  no-send-pads-error;
  no-send-pads-ac-info
}

```

```
pado-advertise;
service-name-tables table-name {
  service service-name {
    drop;
    delay seconds;
    terminate;
    dynamic-profile profile-name;
    routing-instance routing-instance-name;
    max-sessions number;
    agent-specifier {
      aci circuit-id-string ari remote-id-string {
        drop;
        delay seconds;
        terminate;
        dynamic-profile profile-name;
        routing-instance routing-instance-name;
        static-interface interface-name;
      }
    }
  }
}
}
traceoptions {
  file <filename> <files number> <match regular-expression> <size maximum-file-size>
  <world-readable | no-world-readable>;
  filter {
    aci regular-expression;
    ari regular-expression;
    service-name regular-expression;
    underlying-interface interface-name;
  }
  flag flag;
  level (all | error | info | notice | verbose | warning);
  no-remote-trace;
}
}
```

---

## [edit protocols protection-group] Hierarchy Level

```
ethernet-ringring-name {
  east-interface {
    control-channel channel-name {
      vlan number;
    }
  }
  guard-interval number;
  node-id mac-address;
  restore-interval number;
  ring-protection-link-owner;
  west-interface {
    control-channel channel-name {
      vlan number;
    }
  }
}
```

- Related Documentation**
- *Junos OS Hierarchy and RFC Reference*
  - Junos® OS Ethernet Interfaces
  - Junos® OS Network Interfaces

## [edit protocols vrrp] Hierarchy Level

The following statement hierarchy can also be included at the [edit logical-systems *logical-system-name*] hierarchy level.

```
protocols {
  vrrp {
    failover-delay milliseconds;
    global-advertisements-threshold advertisement-value;
    skew-timer-disable;
    startup-silent-period seconds;
    traceoptions {
      file <filename> <files number> <match regular-expression> <microsecond-stamp>
        <size maximum-file-size> <world-readable | no-world-readable>;
      flag flag;
      no-remote-trace;
    }
    version-3;
  }
}
```

- Related Documentation**
- Notational Conventions Used in Junos OS Configuration Hierarchies
  - [edit protocols] Hierarchy Level
  - *Junos OS Hierarchy and RFC Reference*
  - Junos® OS Ethernet Interfaces
  - Junos® OS Network Interfaces

## [edit system processes] Hierarchy Level

```
dialer-services {
  disable;
}
isdn-signaling {
  disable;
  reject-incoming;
}
```



## CHAPTER 4

# Statement Summary

### 802.3ad

---

Syntax	<pre>802.3ad {     aex (primary   backup);     lacp {         port-priority;     } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options]
Release Information	Statement introduced before Junos OS Release 7.4. <b>primary</b> and <b>backup</b> options added in Junos OS Release 8.3.
Description	Specify aggregated Ethernet logical interface number.
Options	<b>aex</b> —Aggregated Ethernet logical interface number. <b>Range:</b> 0 through 15  <b>primary</b> —For link protection configurations, specify the primary link for egress traffic.  <b>backup</b> —For link protection configurations, specify the backup link for egress traffic.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Configuring an Aggregated Ethernet Interface on page 23</a></li><li>• <a href="#">Configuring Aggregated Ethernet Link Protection on page 51</a></li></ul>

## aggregated-devices

---

<b>Syntax</b>	<pre>aggregated-devices {   ethernet {     device-count <i>number</i>;     lacp {       link-protection {         non-revertive;       }       system-priority;     }   }   sonet {     device-count <i>number</i>;   }   maximum-links <i>maximum-links-limit</i>; }</pre>
<b>Hierarchy Level</b>	[edit chassis]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Support for LACP link protection and system priority introduced in Junos OS Release 9.3.
<b>Description</b>	Configure properties for aggregated devices on the router.
<b>Options</b>	The remaining statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Junos OS for Supporting Aggregated Devices on page 26</a></li></ul>



## aggregated-ether-options

```

Syntax  aggregated-ether-options {
        ethernet-switch-profile {
            ethernet-policer-profile {
                input-priority-map {
                    ieee802.1p premium [ values ];
                }
                output-priority-map {
                    classifier {
                        premium {
                            forwarding-class class-name {
                                loss-priority (high | low);
                            }
                        }
                    }
                }
            }
            policer cos-policer-name {
                aggregate {
                    bandwidth-limit bps;
                    burst-size-limit bytes;
                }
                premium {
                    bandwidth-limit bps;
                    burst-size-limit bytes;
                }
            }
        }
        (mac-learn-enable | no-mac-learn-enable);
    }
    (flow-control | no-flow-control);
    lacp {
        (active | passive);
        link-protection {
            disable;
            (revertive | non-revertive);
            periodic interval;
            system-priority priority;
            system-id system-id;
        }
        link-protection;
        link-speed speed;
        logical-interface-fpc-redundancy;
        (loopback | no-loopback);
        minimum-links number;
        rebalance-periodic time hour:minute <interval hours>;
        source-address-filter {
            mac-address;
            (source-filtering | no-source-filtering);
        }
    }
}

```

Hierarchy Level [edit interfaces *aex*]

<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure aggregated Ethernet-specific interface properties.  The statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Ethernet Interfaces Overview</li></ul>

---

## chassis

---

<b>Syntax</b>	chassis { ... }
<b>Hierarchy Level</b>	[edit]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure router chassis properties.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Router Chassis Configuration Statements</li></ul>

---

## device-count

---

<b>Syntax</b>	device-count <i>number</i> ;
<b>Hierarchy Level</b>	[edit chassis <a href="#">aggregated-devices ethernet</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the number of aggregated logical devices available to the router.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Junos OS for Supporting Aggregated Devices on page 26</a></li></ul>

## disable (Link Protection)


<b>Syntax</b>	disable;
<b>Hierarchy Level</b>	[edit interfaces aeX aggregated-ether-options lacp link-protection]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 11.4 for EX Series switches.
<b>Description</b>	Disable LACP link protection on the interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Configuring Aggregated Ethernet LACP</li> <li>Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)</li> </ul>

## ethernet (Chassis)

<b>Syntax</b>	<pre>ethernet {   device-count number;   lacp {     link-protection {       non-revertive;     }     system-priority;   } }</pre>
<b>Hierarchy Level</b>	[edit chassis <a href="#">aggregated-devices</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.4 for EX Series switches.
<b>Description</b>	Configure properties for Ethernet aggregated devices on the router.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">Configuring Junos OS for Supporting Aggregated Devices on page 26</a></li> <li>Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)</li> </ul>

## fast-aps-switch

---

<b>Syntax</b>	fast-aps-switch;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options aps]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1.
<b>Description</b>	(M320 routers with Channelized OC3/STM1 Circuit Emulation PIC with SFP only) Reduce the Automatic Protection Switching (APS) switchover time in Layer 2 circuits.
	<div><p>NOTE:</p><ul style="list-style-type: none"><li>• Configuring this statement reduces the APS switchover time only when the Layer 2 circuit encapsulation type for the interface receiving traffic from a Layer 2 circuit neighbor is SAToP.</li><li>• When the fast-aps-switch statement is configured in revertive APS mode, you must configure an appropriate value for revert time to achieve reduction in APS switchover time.</li><li>• To prevent the logical interfaces in the data path from being shut down, configure appropriate hold-time values on all the interfaces in the data path that support TDM.</li><li>• The fast-aps-switch statement cannot be configured when the APS annex-b option is configured.</li><li>• The interfaces that have the fast-aps-switch statement configured cannot be used in virtual private LAN service (VPLS) environments.</li></ul></div>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Reducing APS Switchover Time in Layer 2 Circuits</li></ul>

## igmp-snooping

```

Syntax  igmp-snooping {
        immediate-leave;
        interface interface-name {
            group-limit limit;
            host-only-interface;
            immediate-leave;
            multicast-router-interface;
            static {
                group ip-address {
                    source ip-address;
                }
            }
        }
        proxy {
            source-address ip-address;
        }
        query-interval seconds;
        query-last-member-interval seconds;
        query-response-interval seconds;
        robust-count number;
        vlan vlan-id {
            immediate-leave;
            interface interface-name {
                group-limit limit;
                host-only-interface;
                immediate-leave;
                multicast-router-interface;
                static {
                    group ip-address {
                        source ip-address;
                    }
                }
            }
            proxy {
                source-address ip-address;
            }
            query-interval seconds;
            query-last-member-interval seconds;
            query-response-interval seconds;
            robust-count number;
        }
    }

```

**Hierarchy Level** [edit bridge-domains *bridge-domain-name* protocols],  
 [edit routing-instances *routing-instance-name* bridge-domains *bridge-domain-name* protocols]  
 [edit routing-instances *routing-instance-name* protocols]  
 [edit protocols]

**Release Information** Statement introduced in Junos OS Release 8.5.

**Description** Enable IGMP snooping on the router.

<b>Default</b>	IGMP snooping is disabled on the router.
<b>Options</b>	The statements are explained separately.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>Understanding IGMP Snooping</li><li><a href="#">IGMP Snooping in MC-LAG Active-Active on MX Series Routers Overview on page 14</a></li></ul>

---

## inner-tag-protocol-id

---

<b>Syntax</b>	<code>inner-tag-protocol-id <i>tpid</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1.
<b>Description</b>	For Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, configure the IEEE 802.1Q TPID value to rewrite for the inner tag. All TPIDs you include in input and output VLAN maps must be among those you specify at the <b>[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile tag-protocol-id [ <i>tpids</i> ]]</b> hierarchy level.
<b>Default</b>	If the <b>inner-tag-protocol-id</b> statement is not configured, the TPID value is 0x8100.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>Configuring Inner and Outer TPIDs and VLAN IDs</li></ul>

## inner-vlan-id

<b>Syntax</b>	<code>inner-vlan-id <i>number</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>input-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>output-vlan-map]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1.
<b>Description</b>	<p>For Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, specify the VLAN ID to rewrite for the inner tag of the final packet.</p> <p>You cannot include the <b>inner-vlan-id</b> statement with the <b>swap</b> statement, <b>swap-push</b> statement, <b>push-push</b> statement, or <b>push-swap</b> statement and the <b>inner-vlan-id</b> statement at the <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map]</code> hierarchy level. If you include any of those statements in the output VLAN map, the VLAN ID in the outgoing frame is rewritten to the <b>inner-vlan-id</b> statement you include at the <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code> hierarchy level.</p>
<b>Options</b>	<p><i>number</i>—VLAN ID number.</p> <p><b>Range:</b> 0 through 4094</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Configuring Inner and Outer TPIDs and VLAN IDs</li> </ul>

## interfaces

---

<b>Syntax</b>	interfaces { ... }
<b>Hierarchy Level</b>	[edit]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure interfaces on the router.
<b>Default</b>	The management and internal Ethernet interfaces are automatically configured. You must configure all other interfaces.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>Physical Interface Configuration Statements Overview</li><li><a href="#">Configuring Aggregated Ethernet Link Protection on page 51</a></li></ul>



## lcp (802.3ad)

---

<b>Syntax</b>	<pre>lcp {     traceoptions {         file lacpd;         flag all;     }     ppm (centralized   distributed); }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> fastether-options <a href="#">802.3ad</a> ], [edit interfaces <i>interface-name</i> gigheter-options <a href="#">802.3ad</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3. The <b>ppm (centralized   distributed)</b> option introduced in Junos OS Release 9.4.
<b>Description</b>	<p>For aggregated Ethernet interfaces only, configure the Link Aggregation Control Protocol (LACP).</p> <p>On MX and T Series routers you can specify distributed or centralized periodic packet management (PPM).</p>
<b>Default</b>	<p>If you do not specify <b>lcp</b> as either <b>active</b> or <b>passive</b>, LACP remains passive.</p> <p>If you do not specify <b>ppm</b> as either <b>centralized</b> or <b>distributed</b>, PPM is distributed.</p>
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>active</b>—Initiate transmission of LACP packets.</li> <li>• <b>passive</b>—Respond to LACP packets.</li> <li>• <b>ppm</b>—Set PPM to centralized or distributed.</li> </ul> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Aggregated Ethernet LACP on page 54</a></li> </ul>

## lACP (Aggregated Ethernet)

---

**Syntax**    lACP {  
              (active | passive);  
              admin-key *key*;  
              fast-failover;  
              link-protection {  
                  disable;  
                  (revertive | non-revertive);  
              }  
              periodic *interval*;  
              system-id *mac-address*;  
              system-priority *priority*;  
          }

**Hierarchy Level**    [edit interfaces aex [aggregated-ether-options](#)]

**Release Information**    Statement introduced before Junos OS Release 7.4.  
                              Statement introduced in Junos OS Release 9.0 for EX Series switches.  
                              **fast-failover** option introduced in Junos OS Release 12.2.

**Description**    For aggregated Ethernet interfaces only, configure Link Aggregation Control Protocol (LACP).

**Default**    If you do not specify LACP as either **active** or *passive*, LACP remains passive.

**Options**    **active**—Initiate transmission of LACP packets.

**admin-key** *number*—Specify an administrative key for the router or switch.



.....  
**NOTE:** You must also configure Multichassis Link Aggregation (MC-LAG) when you configure the **admin-key**.  
.....

**passive**—Respond to LACP packets.

**fast-failover**—Specify to override the IEEE 802.3ad standard and allow the standby link to receive traffic. Overriding the default behavior facilitates subsecond failover.

The remaining statements are explained separately.

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**    • [Configuring Aggregated Ethernet LACP on page 54](#)  
                                  • [Configuring Aggregated Ethernet LACP \(CLI Procedure\)](#)

- Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch

## link-protection

<b>Syntax</b>	<pre>link-protection {   disable;   (revertive  non-revertive); }</pre>
<b>Hierarchy Level</b>	<p>[edit interfaces aex <b>aggregated-ether-options</b>]          [edit interfaces aex aggregated-ether-options <b>lcp</b>]</p>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.3.          Statement introduced in Junos OS Release 9.0 for EX Series switches.          Support for <b>disable</b>, <b>revertive</b>, and <b>non-revertive</b> statements added in Junos OS Release 9.3.</p>
<b>Description</b>	<p>On the router, for aggregated Ethernet interfaces only, configure link protection. In addition to enabling link protection, a primary and a secondary (backup) link must be configured to specify what links egress traffic should traverse. To configure primary and secondary links on the router, include the <b>primary</b> and <b>backup</b> statements at the [edit interfaces <b>ge-fpc/pic/port gigheter-options 802.3ad aex</b>] hierarchy level or the [edit interfaces <b>fe-fpc/pic/port fastether-options 802.3ad aex</b>] hierarchy level.</p> <p>On the switch, you can configure either Junos OS link protection for aggregated Ethernet interfaces or the LACP standards link protection for aggregated Ethernet interfaces.</p> <p>For Junos OS link protection, specify <b>link-protection</b> at the following hierarchy levels:</p> <ul style="list-style-type: none"> <li>• [edit interfaces <b>ge-fpc/pic/port ether-options 802.3ad aex</b>]</li> <li>• [edit interfaces <b>xe-fpc/pic/port ether-options 802.3ad aex</b>]</li> </ul> <p>For LACP standards link protection, specify <b>link-protection</b> at the following hierarchy levels:</p> <ul style="list-style-type: none"> <li>• For global LACP link protection, specify at [edit chassis aggregated-devices ethernet <b>lcp</b>]</li> <li>• For a specific aggregated Ethernet interface, specify at [edit interfaces aeX <b>aggregated-ether-options lcp</b>]</li> </ul>
<b>Options</b>	The statements are explained separately.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.          interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Aggregated Ethernet Link Protection on page 51</a></li> <li>• Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)</li> </ul>

## link-speed (Aggregated Ethernet)

---

<b>Syntax</b>	link-speed <i>speed</i> ;
<b>Hierarchy Level</b>	[edit interfaces aex <a href="#">aggregated-ether-options</a> ], [edit interfaces interface-range <i>name</i> aggregated-ether-options], [edit interfaces interface-range <i>name</i> aggregated-sonet-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	For aggregated Ethernet interfaces only, set the required link speed.
<b>Options</b>	<p><b><i>speed</i></b>—For aggregated Ethernet links, you can specify <b><i>speed</i></b> in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000).</p> <p>Aggregated Ethernet links on the M120 router can have one of the following speed values:</p> <ul style="list-style-type: none"><li>• <b>100m</b>—Links are 100 Mbps.</li><li>• <b>10g</b>—Links are 10 Gbps.</li><li>• <b>1g</b>—Links are 1 Gbps.</li><li>• <b>oc192</b>—Links are OC192 or STM64c.</li></ul> <p>Aggregated Ethernet links on EX Series switches can be configured to operate at one of the following speed values:</p> <ul style="list-style-type: none"><li>• <b>10m</b></li><li>• <b>100m</b></li><li>• <b>1g</b></li><li>• <b>10g</b></li></ul>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Aggregated Ethernet Link Speed on page 63</a></li><li>• Configuring Aggregated Ethernet Links (CLI Procedure)</li><li>• Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</li></ul>

## link-speed (Aggregated SONET/SDH)

---

<b>Syntax</b>	link-speed ( <i>speed</i>   mixed);
<b>Hierarchy Level</b>	[edit interfaces asx aggregated-sonet-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. mixed option added in Release 8.0.
<b>Description</b>	For aggregated SONET/SDH interfaces only, set the required link speed.
<b>Options</b>	<p><b>speed</b>—Aggregated SONET/SDH links can have one of the following speed values.</p> <ul style="list-style-type: none"> <li>• <b>oc3</b>—Links are OC3c or STM1c.</li> <li>• <b>oc12</b>—Links are OC12c or STM4c.</li> <li>• <b>oc48</b>—Links are OC48c or STM16c.</li> <li>• <b>oc192</b>—Links are OC192c or STM64c.</li> <li>• <b>oc768</b>—Links are OC768c or STM256c.</li> </ul> <p><b>mixed</b>—For aggregated SONET/SDH links on T Series routers, you can mix interface speeds in SONET/SDH aggregation bundles. Interface speeds from OC3 through OC768 are supported.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Aggregated Ethernet Link Speed on page 63</a></li> <li>• Configuring Aggregated SONET/SDH Link Speed</li> </ul>

## mc-ae

**Syntax**

```
mc-ae {
  chassis-id chassis-id;
  events {
    iccp-peer-down {
      force-icl-down;
      prefer-status-control-active;
    }
  }
  mc-ae-id mc-ae-id;
  mode (active-active | active-standby);
  redundancy-group group-id;
  status-control (active | standby);
}
```

**Hierarchy Level** [edit interfaces aeX aggregated-ether-options]

**Release Information** Statement introduced in Junos OS Release 9.6.  
**events** statement introduced in Junos OS Release 11.4R4.

**Description** Enable Multichassis Link Aggregation (MC-LAG ), which allows one device to form a logical LAG interface with two or more other devices.

**Options** **chassis-id**—Specify the chassis ID for Link Aggregation Control Protocol (LACP) to calculate the port number of MC-LAG physical member links.

**Values:** 0 | 1

**events**—Specify an action if a specific MC-LAG event occurs.

**iccp-peer-down**—Specify an action if the peer of this node goes down.

**force-icl-down**—If the node's peer goes down, bring down the interchassis-link logical linterface.

**prefer-status-control-active**—If the node's peer goes down, prefer that the node configured as **status-control active** become the active node.



**NOTE:** To configure the **prefer-status-control-active** statement, you must configure the **status-control active** statement. Do not configure **status-control** as **standby**.

**mc-ae-id**—Specify the identification number of the MC-LAG device. The two MC-LAG network devices that manage a given MC-LAG must have the same identification number.

**Range:** 1 through 65535

**mode (active-active | active-standby)**—Specify whether the MC-LAG is in active-active or active-standby mode.

**redundancy-group**—Specify the redundancy group identification number. The Inter-Chassis Control Protocol (ICCP) uses the redundancy group ID to associate multiple chassis that perform similar redundancy functions.

**Range:** 1 through 4294967294

**status-control (active | standby)**—Specify whether the chassis becomes active or remains in standby when an interchassis link failure occurs.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring Multichassis Link Aggregation on page 29](#)

## maximum-links

**Syntax** maximum-links *maximum-links-limit*;

**Hierarchy Level** [edit chassis [aggregated-devices](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for T Series routers.  
Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Switches.  
Statement introduced in Junos OS Release 12.2 for the M Series and MX Series routers.

**Description** Configure the maximum links limit for aggregated devices.

**Options** *maximum-links-limit*—Maximum links limit for aggregated devices.  
**Range:** 16, 32; (PTX Series systems only in Junos OS Release 12.3) 64

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring Junos OS for Supporting Aggregated Devices on page 26](#)
- [Configuring an Aggregated Ethernet Interface on page 23](#)

## minimum-links

---

<b>Syntax</b>	<code>minimum-links <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces aex <a href="#">aggregated-ether-options</a> ], [edit interfaces aex aggregated-sonet-options], [edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit interfaces interface-range <i>range</i> <a href="#">aggregated-ether-options</a> ], [edit interfaces interface-range <i>range</i> aggregated-sonet-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	For aggregated Ethernet, SONET/SDH, multilink, link services, and voice services interfaces only, set the minimum number of links that must be up for the bundle to be labeled up.
<b>Options</b>	<b><i>number</i></b> —Number of links. <b>Range:</b> On M120, M320, MX Series, T Series, and TX Matrix routers with Ethernet interfaces, the valid range for minimum-links number is 1 through 16. When the maximum value (16) is specified, all configured links of a bundle must be up for the bundle to be labeled up. On all other routers and on EX Series switches, other than EX8200 switches, the range of valid values for minimum-links number is 1 through 8. When the maximum value (8) is specified, all configured links of a bundle must be up for the bundle to be labeled up. On EX8200 switches, the range of valid values for minimum-links number is 1 through 12. When the maximum value (12) is specified, all configured links of a bundle must be up for the bundle to be labeled up. <b>Default:</b> 1
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Aggregated Ethernet Minimum Links on page 64</a></li><li>• Configuring Aggregated SONET/SDH Minimum Links</li><li>• Configuring Aggregated Ethernet Links (CLI Procedure)</li><li>• Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</li><li>• Junos Services Interfaces Configuration Release 12.3</li></ul>



## multicast-router-interface (IGMP Snooping)

<b>Syntax</b>	multicast-router-interface;
<b>Hierarchy Level</b>	<p>[edit bridge-domains <i>bridge-domain-name</i> protocols <b>igmp-snooping</b> interface <i>interface-name</i>],</p> <p>[edit bridge-domains <i>bridge-domain-name</i> protocols <b>igmp-snooping</b> vlan <i>vlan-id</i> interface <i>interface-name</i>],</p> <p>[edit protocols <b>igmp-snooping</b> vlan (all   <i>vlan-name</i>) interface (all   <i>interface-name</i>)]</p> <p>[edit routing-instances <i>routing-instance-name</i> bridge-domains <i>bridge-domain-name</i> protocols <b>igmp-snooping</b> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> bridge-domains <i>bridge-domain-name</i> protocols vlan <i>vlan-id</i> <b>igmp-snooping</b> interface <i>interface-name</i>]</p>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.5.</p> <p>Statement introduced in Junos OS Release 9.1 for EX Series switches.</p>
<b>Description</b>	Statically configure the interface as an IGMP snooping multicast-router interface—that is, an interface that faces toward a multicast router or other IGMP querier.



**NOTE:** If the specified interface is a trunk port, the interface becomes a multicast-router interface for all VLANs configured on the trunk port. In addition, all unregistered multicast packets, whether they are IPv4 or IPv6 packets, are forwarded to the multicast router interface, even if the interface is configured as a multicast router interface only for IGMP snooping.

Configure an interface as a bridge interface toward other multicast routers.

<b>Default</b>	The interface can either be a host-side or multicast-router interface.
<b>Required Privilege Level</b>	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• Example: Configuring IGMP Snooping on EX Series Switches</li> <li>• Example: Configuring IGMP Snooping</li> <li>• Configuring IGMP Snooping (CLI Procedure)</li> <li>• <a href="#">IGMP Snooping in MC-LAG Active-Active on MX Series Routers Overview on page 14</a></li> <li>• host-only-interface</li> <li>• show igmp-snooping membership</li> </ul>

## multi-chassis-protection

---

**Syntax**    multi-chassis-protection {  
              peer *a.b.c.d* {  
                  interface *interface-name*;  
              }  
          }

**Hierarchy Level**    [edit interfaces *interface-name*]

**Release Information**    Statement introduced in Junos OS Release 11.1.

**Description**    For MX Series routers with multichassis aggregated Ethernet (MC-AE) interfaces, you can use this statement under the physical interface level to reduce the configuration at the logical interface level if the following assumption exists:

If there are  $n + 1$  logical interfaces under **ae0**, from **ae0.0** through **ae0.n**, there will be  $n + 1$  logical interfaces under **ge-0/0/0** as well, from **ge-0/0/0.0** through **ge-0/0/0.n**, and each **ge-0/0/0** logical interface will be a protection link for the **ae0** logical interface.



**NOTE:** A bridge domain cannot have MC-AE logical interfaces which belong to different redundancy groups.

If the Inter-Chassis Control Protocol (ICCP) connection is UP and the interchassis data link (ICL) comes UP, the router configured as standby will bring up the MC-AE interfaces shared with the peer.

The remaining statements are explained separately.

**Options**    interface *interface-name*—Specify the interface: **interface *interface-name*-fpc/pic/port**

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring Multichassis Link Aggregation on page 29](#)
- [Configuring Active-Active Bridging and VRRP over IRB in Multichassis Link Aggregation on MX Series Routers on page 30](#)
- [Configuring Aggregated Ethernet Link Protection on page 51](#)
- [Example: Configuring Aggregated Ethernet Link Protection on page 52](#)
- [peer on page 122](#)

## non-revertive (Interfaces)

---

<b>Syntax</b>	non-revertive;
<b>Hierarchy Level</b>	[edit interfaces aeX aggregated-ether-options lacp link-protection]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 11.4 for EX Series switches.
<b>Description</b>	Disable the ability to switch to a better priority link (if one is available) once a link is established as active and collection distribution is enabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">link-protection on page 113</a></li><li>• <a href="#">Configuring Aggregated Ethernet Link Protection on page 51</a></li><li>• <a href="#">Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)</a></li></ul>

## peer

---

<b>Syntax</b>	<code>peer <i>a.b.c.d</i> {     interface <i>interface-name</i>; }</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>multi-chassis-protection</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1.
<b>Description</b>	For MX Series routers with multichassis aggregated Ethernet (MC-AE) interfaces, use the <b>multi-chassis-protection</b> statement under the physical interface level to reduce the configuration at the logical interface level. If the interchassis control protocol connection (ICCP) is UP and the interchassis data link (ICL) comes UP, the router configured as standby will bring up the MC-AE interfaces shared with the peer active-active node specified by the <b>peer</b> statement. You must also specify the peer's physical interface.
<b>Options</b>	<b><i>a.b.c.d</i></b> —Specify the IP address of the peer.  <b>interface <i>interface-name</i></b> —Specify the peer's physical interface: interface <i>interface-name-fpc/pic/port</i>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Multichassis Link Aggregation on page 29</a></li><li>• <a href="#">Configuring Active-Active Bridging and VRRP over IRB in Multichassis Link Aggregation on MX Series Routers on page 30</a></li><li>• <a href="#">Configuring Aggregated Ethernet Link Protection on page 51</a></li><li>• <a href="#">Example: Configuring Aggregated Ethernet Link Protection on page 52</a></li><li>• <a href="#">multi-chassis-protection on page 120</a></li></ul>

## periodic

---

<b>Syntax</b>	<code>periodic interval;</code>
<b>Hierarchy Level</b>	[edit interfaces aex <a href="#">aggregated-ether-options lacp</a> ], [edit interfaces interface-range <i>name</i> <a href="#">aggregated-ether-options lacp</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	For aggregated Ethernet interfaces only, configure the interval for periodic transmission of LACP packets.
<b>Options</b>	<p><i>interval</i>—Interval for periodic transmission of LACP packets.</p> <ul style="list-style-type: none"> <li><b>fast</b>—Transmit packets every second.</li> <li><b>slow</b>—Transmit packets every 30 seconds.</li> </ul> <p><b>Default:</b> <b>fast</b></p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">Configuring Aggregated Ethernet LACP on page 54</a></li> <li>Configuring Aggregated Ethernet LACP (CLI Procedure)</li> <li>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</li> </ul>

## pop-pop

---

<b>Syntax</b>	pop-pop;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1.
<b>Description</b>	For Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, specify the VLAN rewrite operation to remove both the outer and inner VLAN tags of the frame.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>Removing the Outer and Inner VLAN Tags</li></ul>

## pop-swap

---

<b>Syntax</b>	pop-swap;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1.
<b>Description</b>	For Gigabit Ethernet IQ, IQ2, and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, specify the VLAN rewrite operation to remove the outer VLAN tag of the frame, and replace the inner VLAN tag of the frame with a user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>Removing the Outer VLAN Tag and Rewriting the Inner VLAN Tag</li></ul>

## port-priority


<b>Syntax</b>	<code>port-priority <i>priority</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>gigether-options</b> <a href="#">802.3ad</a> <b>lACP</b> ] [edit interfaces <i>interface-name</i> <b>ether-options</b> <a href="#">802.3ad</a> <b>lACP</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 11.4 for EX Series switches.
<b>Description</b>	Define LACP port priority at the interface level.
<b>Options</b>	<b>priority</b> —Priority for being elected to be the active port and both collect and distribute traffic. A smaller value indicates a higher priority for being elected. <b>Range:</b> 1 through 255 <b>Default:</b> 127
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)</li> </ul>

## push-push

<b>Syntax</b>	<code>push-push;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>input-vlan-map</b> ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>input-vlan-map</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1.
<b>Description</b>	For Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, specify the VLAN rewrite operation to push two VLAN tags in front of the frame.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Stacking Two VLAN Tags</li> </ul>

## revertive

---

<b>Syntax</b>	revertive;
<b>Hierarchy Level</b>	[edit interfaces aeX aggregated-ether-options lacp link-protection]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 12.3 for EX Series switches.
<b>Description</b>	Enable the ability to switch to a better priority link (if one is available).
	<div><p><b>NOTE:</b> By default, LACP link protection is revertive. However, you can use this statement to define a specific aggregated Ethernet interface as revertive to override a global non-revertive statement specified at the [edit chassis] hierarchy level.</p></div>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• non-revertive (Chassis)</li><li>• Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)</li></ul>

## swap-push

---

<b>Syntax</b>	swap-push;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1.
<b>Description</b>	For Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, specify the VLAN rewrite operation to replace the outer VLAN tag of the frame with a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Rewriting a VLAN Tag and Adding a New Tag</li></ul>



## swap-swap

<b>Syntax</b>	swap-swap;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1.
<b>Description</b>	For Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, specify the VLAN rewrite operation to replace both the inner and the outer VLAN tags of the frame with a user-specified VLAN tag value.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Rewriting the Inner and Outer VLAN Tags</li> </ul>

## system-id

<b>Syntax</b>	system-id <i>system-id</i> ;
<b>Hierarchy Level</b>	[edit interfaces aeX aggregated-ether-options lacp]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.2R1
<b>Description</b>	<p>Define the LACP system identifier at the aggregated Ethernet interface level.</p> <p>The user-defined system identifier in LACP enables two ports from two separate routers (M Series or MX Series routers) to act as though they were part of the same aggregate group.</p> <p>The system identifier is a 48-bit (6-byte) globally unique field. It is used in combination with a 16-bit system-priority value, which results in a unique LACP system identifier.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">Configuring Aggregated Ethernet LACP on page 54</a></li> </ul>

## system-priority

---

<b>Syntax</b>	<code>system-priority <i>priority</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces aeX aggregated-ether-options lacp]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 11.4 for EX Series switches.
<b>Description</b>	<p>Define LACP system priority at the aggregated Ethernet interface level. This system priority value takes precedence over a system priority value configured at the global <b>[edit chassis]</b> hierarchy level.</p> <p>The device with the lower system priority value determines which links between LACP partner devices are active and which are in standby for each LACP group. The device on the controlling end of the link uses port priorities to determine which ports are bundled into the aggregated bundle and which ports are put in standby mode. Port priorities on the other device (the noncontrolling end of the link) are ignored. In priority comparisons, numerically lower values have higher priority. Therefore, the system with the numerically lower value (higher priority value) for LACP system priority becomes the controlling system. If both devices have the same LACP system priority (for example, they are both configured with the default setting of 127), the device MAC address determines which switch is in control.</p>
<b>Options</b>	<p><b><i>priority</i></b>—Priority for the aggregated Ethernet system. A smaller value indicates a higher priority.</p> <p><b>Range:</b> 0 through 65535</p> <p><b>Default:</b> 127</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)</li></ul>

## traceoptions (LACP)

<b>Syntax</b>	<pre> traceoptions {     file &lt;filename&gt; &lt;files number&gt; &lt;size size&gt; &lt;world-readable   no-world-readable&gt;;     flag flag;     no-remote-trace; } </pre>
<b>Hierarchy Level</b>	[edit protocols lacp]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.6.
<b>Description</b>	Define tracing operations for the LACP protocol.
<b>Default</b>	If you do not include this statement, no LACP protocol tracing operations are performed.
<b>Options</b>	<p><b>disable</b>—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as <b>all</b>.</p> <p><b>filename</b>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <b>/var/log</b>. By default, interface process tracing output is placed in the file <b>lacpd</b>.</p> <p><b>files number</b>—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b>, then <b>trace-file.1</b>, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p>If you specify a maximum number of files, you also must specify a maximum file size with the <b>size</b> option.</p> <p><b>Range:</b> 2 through 1000</p> <p><b>Default:</b> 3 files</p> <p><b>flag</b>—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. You can include the following flags:</p> <ul style="list-style-type: none"> <li>• <b>all</b>—All LACP tracing operations</li> <li>• <b>configuration</b>—Configuration code</li> <li>• <b>packet</b>—Packets sent and received</li> <li>• <b>process</b>—LACP process events</li> <li>• <b>protocol</b>—LACP protocol state machine</li> <li>• <b>routing-socket</b>—Routing socket events</li> <li>• <b>startup</b>—Process startup events</li> </ul> <p><b>no-world-readable</b>—(Optional) Prevent any user from reading the log file.</p>

**size size**—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum file size, you also must specify a maximum number of trace files with the **files** option:

**Syntax:** **xk** to specify kilobytes, **xm** to specify megabytes, or **xg** to specify gigabytes

**Range:** 10 KB through the maximum file size supported on your router

**Default:** 1 MB

**world-readable**—(Optional) Allow any user to read the log file.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Tracing LACP Operations on page 59](#)

---

## vlan-id (VLAN ID to Be Bound to a Logical Interface)

---

**Syntax** `vlan-id number;`

**Hierarchy Level** [edit interfaces *interface-name* unit *logical-unit-number*],  
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** For Fast Ethernet, Gigabit Ethernet, and Aggregated Ethernet interfaces only, bind a 802.1Q VLAN tag ID to a logical interface.

**Options** **number**—A valid VLAN identifier.

**Range:** For aggregated Ethernet, 4-port, 8-port, and 12-port Fast Ethernet PICs, and for management and internal Ethernet interfaces, 1 through 1023.

For 48-port Fast Ethernet and Gigabit Ethernet PICs, 1 through 4094.

VLAN ID 0 is reserved for tagging the priority of frames.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring Mixed Tagging](#)

## vlan-tagging

---

<b>Syntax</b>	vlan-tagging;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
<b>Description</b>	For Fast Ethernet and Gigabit Ethernet interfaces, aggregated Ethernet interfaces configured for VPLS, and pseudowire subscriber interfaces, enable the reception and transmission of 802.1Q VLAN-tagged frames on the interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• Example: Configuring Layer 3 Subinterfaces for a Distribution Switch and an Access Switch</li> <li>• Example: Configuring BGP Autodiscovery for LDP VPLS</li> <li>• Configuring a Layer 3 Subinterface (CLI Procedure)</li> <li>• <a href="#">Configuring Tagged Aggregated Ethernet Interfaces on page 61</a></li> <li>• Configuring Interfaces for VPLS Routing</li> <li>• Enabling VLAN Tagging</li> <li>• 802.1Q VLANs Overview</li> <li>• vlan-id</li> </ul>



## PART 3

# Administration

- [Monitoring Commands on page 135](#)
- [Command Summary on page 319](#)





## CHAPTER 5

# Monitoring Commands

## show interfaces (Aggregated Ethernet)

<b>Syntax</b>	<pre>show interfaces ae <i>number</i> &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index <i>snmp-index</i>&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	(M Series, T Series, and MX Series routers and EX Series switches) Display status information about the specified aggregated Fast Ethernet or Gigabit Ethernet interface.
<b>Options</b>	<p><b>ae <i>number</i></b>—Display standard information about the specified aggregated Fast Ethernet or Gigabit Ethernet interface.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information about the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<p><a href="#">show interfaces (Aggregated Ethernet) on page 141</a></p> <p><a href="#">show interfaces brief (Aggregated Ethernet) on page 141</a></p> <p><a href="#">show interfaces detail (Aggregated Ethernet) on page 141</a></p> <p><a href="#">show interfaces extensive (Aggregated Ethernet) on page 142</a></p> <p><a href="#">show interfaces extensive (Aggregated Ethernet with VLAN Stacking) on page 143</a></p>
<b>Output Fields</b>	Table 4 on page 136 lists the output fields for the <b>show interfaces</b> (Aggregated Ethernet) command. Output fields are listed in the approximate order in which they appear.

Table 4: show interfaces (Aggregated Ethernet) Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
<b>Physical interface</b>	Name of the physical interface and state of the interface.	All levels
<b>Enabled</b>	State of the physical interface. Possible values are described in the “Enabled Field” section under Common Output Fields Description.	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	All levels

Table 4: show interfaces (Aggregated Ethernet) Output Fields (*continued*)

Field Name	Field Description	Level of Output
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .	All levels
Source filtering	Source filtering status: <b>Enabled</b> or <b>Disabled</b> .	All levels
Flow control	Flow control status: <b>Enabled</b> or <b>Disabled</b> .	All levels
Minimum links needed	Number of child links that must be operational for the aggregate interface to be operational.	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under Common Output Fields Description.	All levels
Interface flags	Information about the interface. Possible values are described in the "Interfaces Flags" section under Common Output Fields Description.	All levels
Current address	Configured MAC address.	detail extensive
Hardware address	Hardware MAC address.	detail extensive
Last flapped	Date, time, and how long ago the interface went from down to up or from up to down. The format is <b>Last flapped: year-month-day hours:minutes:seconds timezone (hours:minutes:seconds ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	detail extensive
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive

Table 4: show interfaces (Aggregated Ethernet) Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Traffic statistics</b>	<p>Number of and rate at which bytes and packets are received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes and rate, in bps, at which bytes are received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes and rate, in bps, at which bytes are transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets and rate, in pps, at which packets are received on the interface.</li> <li>• <b>Output packets</b>—Number of packets and rate, in pps, at which packets are transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Input errors</b>	<p>Input errors on the interface:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of incoming frame aborts and frame check sequence (FCS) errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's random early detection (RED) mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid FCS.</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or were not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>detail extensive</b>
<b>Output errors</b>	<p>Output errors on the interface:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b> —Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), then the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>detail extensive</b>
<b>IPv6 transit statistics</b>	<p>Number of IPv6 transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>

Table 4: show interfaces (Aggregated Ethernet) Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Queue counters</b>	CoS queue number and its associated user-configured forwarding class name. <ul style="list-style-type: none"> <li><b>Queued packets</b>—Number of queued packets.</li> <li><b>Transmitted packets</b>—Number of transmitted packets.</li> <li><b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface (which reflects its initialization sequence).	<b>detail extensive</b> none
<b>SNMP ifIndex</b>	SNMP interface index number of the logical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags Field” section under Common Output Fields Description.	All levels
<b>VLAN-Tag</b>	Tag Protocol Identifier (TPID) and VLAN identifier.	All levels
<b>Demux</b>	IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following: <ul style="list-style-type: none"> <li><b>Source Family Inet</b></li> <li><b>Destination Family Inet</b></li> </ul>	<b>detail extensive</b> none
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Statistics</b>	Information about the number of packets, packets per second, number of bytes, and bytes per second on this aggregate interface. <ul style="list-style-type: none"> <li><b>Bundle</b>—Information about input and output bundle rates.</li> <li><b>Link</b>—(<b>detail</b> and <b>extensive</b> only) Information about specific links in the aggregate, including link state and input and output rates.</li> <li><b>Marker Statistics</b>—(<b>detail</b> and <b>extensive</b> only) Information about 802.3ad marker protocol statistics on the specified links. <ul style="list-style-type: none"> <li><b>Marker Rx</b>—Number of valid marker protocol data units (PDUs) received on this aggregation port.</li> <li><b>Resp Tx</b>—Number of marker response PDUs transmitted on this aggregation port.</li> <li><b>Unknown Rx</b>—Number of frames received that either carry the slow protocols Ethernet type value (43B.4) but contain an unknown PDU, or are addressed to the slow protocols group MAC address (43B.3) but do not carry the slow protocols Ethernet type.</li> <li><b>Illegal Rx</b>—Number of frames received that carry the slow protocols Ethernet type value (43B.4) but contain a badly formed PDU or an illegal value of protocol subtype (43B.4).</li> </ul> </li> </ul>	<b>detail extensive</b> none
<b>protocol-family</b>	Protocol family configured on the logical interface. Possible values are described in the “Protocol Field” section under Common Output Fields Description.	<b>brief</b>

Table 4: show interfaces (Aggregated Ethernet) Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Protocol</b>	Protocol family configured on the logical interface. Possible values are described in the "Protocol Field" section under Common Output Fields Description.	<b>detail extensive none</b>
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail extensive none</b>
<b>Maximum labels</b>	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	<b>detail extensive</b>
<b>Flags</b>	Information about protocol family flags. Possible values are described in the "Family Flags Field" section under Common Output Fields Description.	<b>detail extensive none</b>
<b>Mac-Validate Failures</b>	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	<b>detail extensive none</b>
<b>Addresses, Flags</b>	Information about address flags. Possible values are described in the "Addresses Flags" section under Common Output Fields Description.	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address of the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

## Sample Output

### show interfaces (Aggregated Ethernet)

```
user@host> show interfaces ae0
Physical interface: ae0, Enabled, Physical link is Up
  Interface index: 153, SNMP ifIndex: 59
  Link-level type: Ethernet, MTU: 1514, Speed: 300mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Disabled, Minimum links needed: 1
  Device flags   : Present Running
  Interface flags: SNMP-Traps 16384
  Current address: 00:05:85:8b:bf:f0, Hardware address: 00:05:85:8b:bf:f0
  Last flapped   : Never
  Input rate      : 0 bps (0 pps)
  Output rate     : 0 bps (0 pps)

Logical interface ae0.0 (Index 72) (SNMP ifIndex 60)
  Flags: SNMP-Traps 16384 Encapsulation: ENET2
  Statistics
  Bundle:
    Input :          0          0          0          0
    Output:          0          0          0          0
  Protocol inet, MTU: 1500
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.100.1/24, Local: 10.100.1.2, Broadcast: 10.100.1.255
```

### show interfaces brief (Aggregated Ethernet)

```
user@host> show interfaces ae0 brief
Physical interface: ae0, Enabled, Physical link is Up
  Link-level type: Ethernet, MTU: 1514, Speed: 300mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Disabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps 16384

Logical interface ae0.0
  Flags: SNMP-Traps 16384 Encapsulation: ENET2
  inet 10.100.1.2/24
```

### show interfaces detail (Aggregated Ethernet)

```
user@host> show interfaces ae0 detail
Physical interface: ae0, Enabled, Physical link is Up
  Interface index: 153, SNMP ifIndex: 59, Generation: 36
  Link-level type: Ethernet, MTU: 1514, Speed: 300mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Disabled, Minimum links needed: 1
  Device flags   : Present Running
  Interface flags: SNMP-Traps 16384
  Current address: 00:05:85:8b:bf:f0, Hardware address: 00:05:85:8b:bf:f0
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          0          0 bps
    Output bytes:          0          0 bps
    Input packets:          0          0 pps
    Output packets:          0          0 pps
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort          7375          7375          0
    1 expedited-fo          0          0          0
    2 assured-forw          0          0          0
```

```

3 network-cont                2268                2268                0

```

Logical interface ae0.0 (Index 72) (SNMP ifIndex 60) (Generation 18)

Flags: SNMP-Traps 16384 Encapsulation: ENET2

Statistics	Packets	pps	Bytes	bps
------------	---------	-----	-------	-----

Bundle:

Input :	0	0	0	0
---------	---	---	---	---

Output:	0	0	0	0
---------	---	---	---	---

Link:

fe-0/1/0.0

Input :	0	0	0	0
---------	---	---	---	---

Output:	0	0	0	0
---------	---	---	---	---

fe-0/1/2.0

Input :	0	0	0	0
---------	---	---	---	---

Output:	0	0	0	0
---------	---	---	---	---

fe-0/1/3.0

Input :	0	0	0	0
---------	---	---	---	---

Output:	0	0	0	0
---------	---	---	---	---

Marker Statistics:	Marker Rx	Resp Tx	Unknown Rx	Illegal Rx
--------------------	-----------	---------	------------	------------

fe-0/1/0.0	0	0	0	0
------------	---	---	---	---

fe-0/1/2.0	0	0	0	0
------------	---	---	---	---

fe-0/1/3.0	0	0	0	0
------------	---	---	---	---

Protocol inet, MTU: 1500, Generation: 37, Route table: 0

Flags: Is-Primary, Mac-Validate-Strict

Mac-Validate Failures: Packets: 0, Bytes: 0

Destination: 10.100.1/24, Local: 10.100.1.2, Broadcast: 10.100.1.255,

Generation: 49

## show interfaces extensive (Aggregated Ethernet)

user@host> show interfaces ae0 extensive

Physical interface: ae0, Enabled, Physical link is Up

Interface index: 153, SNMP ifIndex: 59, Generation: 36

Link-level type: Ethernet, MTU: 1514, Speed: 300mbps, Loopback: Disabled,

Source filtering: Disabled, Flow control: Disabled, Minimum links needed: 1

Device flags : Present Running

Interface flags: SNMP-Traps 16384

Current address: 00:05:85:8b:bf:f0, Hardware address: 00:05:85:8b:bf:f0

Last flapped : Never

Statistics last cleared: Never

Traffic statistics:

Input bytes :	60	0 bps
---------------	----	-------

Output bytes :	0	0 bps
----------------	---	-------

Input packets:	1	0 pps
----------------	---	-------

Output packets:	0	0 pps
-----------------	---	-------

Input errors:

Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,

Policed discards: 0, Resource errors: 0

Output errors:

Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,

Resource errors: 0

Queue counters:	Queued packets	Transmitted packets	Dropped packets
-----------------	----------------	---------------------	-----------------

0 best-effort	7375	7375	0
---------------	------	------	---

1 expedited-fo	0	0	0
----------------	---	---	---

2 assured-forw	0	0	0
----------------	---	---	---

3 network-cont	2268	2268	0
----------------	------	------	---



```

Logical interface ae0.0 (Index 72) (SNMP ifIndex 60) (Generation 18)
Flags: SNMP-Traps 16384 Encapsulation: ENET2
Statistics          Packets      pps          Bytes          bps
Bundle:
  Input :           1           0           60           0
  Output:           0           0            0           0
Link:
  fe-0/1/0.0
    Input :           0           0            0           0
    Output:           0           0            0           0
  fe-0/1/2.0
    Input :           0           0            0           0
    Output:           0           0            0           0
  fe-0/1/3.0
    Input :           1           0           60           0
    Output:           0           0            0           0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
fe-0/1/0.0          0          0          0          0
fe-0/1/2.0          0          0          0          0
fe-0/1/3.0          0          0          0          0
Protocol inet, MTU: 1500, Generation: 37, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 10.100.1/24, Local: 10.100.1.2, Broadcast: 10.100.1.255,
  Generation: 49

```

show interfaces  
extensive (Aggregated

```

user@host> show interfaces ae0 extensive
Physical interface: ae0, Enabled, Physical link is Up
Interface index: 155, SNMP ifIndex: 48, Generation: 186

```

## Ethernet with VLAN Stacking)

```

Link-level type: 52, MTU: 1518, Speed: 2000mbps, Loopback: Disabled, Source
filtering: Disabled,
Flow control: Disabled, Minimum links needed: 1, Minimum bandwidth needed: 0
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: 00:12:1e:19:3f:f0, Hardware address: 00:12:1e:19:3f:f0
Last flapped   : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes :          2406875          40152 bps
Output bytes :        1124470          22056 bps
Input packets:           5307           5 pps
Output packets:         13295          21 pps
IPv6 transit statistics:
Input bytes :           0
Output bytes :           0
Input packets:           0
Output packets:          0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort              0              859777              0
  1 expedited-fo              0              0              0
  2 assured-forw              0              0              0
  3 network-cont              0              0              0

Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort              0          1897615              0
  1 expedited-fo              0              0              0
  2 assured-forw              0              0              0
  3 network-cont              0          662505              0

Logical interface ae0.451 (Index 69) (SNMP ifIndex 167) (Generation 601)
Flags: SNMP-Traps VLAN-Tag [ 0x8100.451 ] Encapsulation: VLAN-VPLS
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :          289          0          25685          376
  Output:         1698          4          130375          3096
Link:
  ge-1/2/0.451
    Input :          289          0          25685          376
    Output:           0          0              0              0
  ge-1/2/1.451
    Input :           0          0              0              0
    Output:         1698          4          130375          3096
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx

```

```

ge-1/2/0.451          0          0          0          0
ge-1/2/1.451          0          0          0          0
Protocol vpls, MTU: 1518, Generation: 849, Route table: 3
Flags: Is-Primary

```

Logical interface ae0.452 (Index 70) (SNMP ifIndex 170) (Generation 602)

Flags: SNMP-Traps VLAN-Tag [ 0x8100.452 ] Encapsulation: VLAN-VPLS

Statistics	Packets	pps	Bytes	bps
------------	---------	-----	-------	-----

Bundle:

Input :	293	1	26003	1072
Output:	1694	3	130057	2400

Link:

ge-1/2/0.452				
Input :	293	1	26003	1072
Output:	1694	3	130057	2400

ge-1/2/1.452				
Input :	0	0	0	0
Output:	0	0	0	0

Marker Statistics:	Marker Rx	Resp Tx	Unknown Rx	Illegal Rx
ge-1/2/0.452	0	0	0	0
ge-1/2/1.452	0	0	0	0

Protocol vpls, MTU: 1518, Generation: 850, Route table: 3

Flags: None

...

## show interfaces demux0 (Demux Interfaces)

<b>Syntax</b>	<pre>show interfaces demux0 <i>logical-interface-number</i> &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index <i>snmp-index</i>&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 9.0.
<b>Description</b>	(MX Series and M Series routers only) Display status information about the specified demux interface.
<b>Options</b>	<p><b>none</b>—Display standard information about the specified demux interface.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration</li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show interfaces (Demux) on page 153</a></p> <p><a href="#">show interfaces (PPPoE over Aggregated Ethernet) on page 154</a></p> <p><a href="#">show interfaces extensive (Targeted Distribution for Aggregated Ethernet Links) on page 154</a></p> <p><a href="#">show interfaces demux0 (ACI Interface Set Configured) on page 155</a></p>
<b>Output Fields</b>	Table 5 on page 146 lists the output fields for the <b>show interfaces</b> (demux interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 5: Demux show interfaces Output Fields

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	brief detail extensive none
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	brief detail extensive none

Table 5: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under Common Output Fields Description.	<b>brief detail extensive</b> none
<b>Physical link</b>	Status of the physical link ( <b>Up</b> or <b>Down</b> ).	<b>detail extensive</b> none
<b>Admin</b>	Administrative state of the interface ( <b>Up</b> or <b>Down</b> ).	<b>terse</b>
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive</b> none
<b>Link</b>	Status of the physical link ( <b>Up</b> or <b>Down</b> ).	<b>terse</b>
<b>Targeting summary</b>	Status of aggregated Ethernet links that are configured with targeted distribution ( <b>primary</b> or <b>backup</b> )	<b>extensive</b>
<b>Bandwidth</b>	Bandwidth allocated to the aggregated Ethernet links that are configured with targeted distribution.	<b>extensive</b>
<b>Proto</b>	Protocol family configured on the interface.	<b>terse</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Type</b>	Type of interface. <b>Software-Pseudo</b> indicates a standard software interface with no associated hardware device.	<b>brief detail extensive</b> none
<b>Link-level type</b>	Encapsulation being used on the physical interface.	<b>brief detail extensive</b>
<b>MTU</b>	Maximum transmission unit size on the physical interface.	<b>brief detail extensive</b>
<b>Clocking</b>	Reference clock source: <b>Internal</b> (1) or <b>External</b> (2).	<b>brief detail extensive</b>
<b>Speed</b>	Speed at which the interface is running.	<b>brief detail extensive</b>
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under Common Output Fields Description.	<b>brief detail extensive</b> none
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under Common Output Fields Description.	<b>brief detail extensive</b> none
<b>Link type</b>	Data transmission type.	<b>detail extensive</b> none
<b>Link flags</b>	Information about the link. Possible values are described in the “Link Flags” section under Common Output Fields Description.	<b>detail extensive</b> none
<b>Physical info</b>	Information about the physical interface.	<b>detail extensive</b>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>

Table 5: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Current address	Configured MAC address.	detail extensive
Hardware address	Hardware MAC address.	detail extensive
Alternate link address	Backup address of the link.	detail extensive
Last flapped	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> <li>• <b>IPv6 transit statistics</b>—Number of IPv6 transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled.</li> </ul> <p><b>NOTE:</b> These fields include dropped traffic and exception traffic, as those fields are not separately defined.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	detail extensive
Input errors	<p>Input errors on the interface whose definitions are as follows:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant packet threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	extensive
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	none

Table 5: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Output errors</b>	Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious: <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Output Rate</b>	Output rate in bps and pps.	none
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	<b>brief detail extensive</b> none
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive</b> none
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under Common Output Fields Description.	<b>brief detail extensive</b> none
<b>Encapsulation</b>	Encapsulation on the logical interface.	<b>brief extensive</b> none
<b>ACI VLAN: Dynamic Profile</b>	Name of the dynamic profile that defines the agent circuit identifier (ACI) interface set. If configured, the ACI interface set enables the underlying demux interface to create dynamic VLAN subscriber interfaces based on ACI information.	<b>brief detail extensive</b> none
<b>Demux</b>	Specific IP demultiplexing (demux) values: <ul style="list-style-type: none"> <li>• <b>Underlying interface</b>—The underlying interface that the demux interface uses.</li> <li>• <b>Index</b>—Index number of the logical interface.</li> <li>• <b>Family</b>—Protocol family configured on the logical interface.</li> <li>• <b>Source prefixes, total</b>—Total number of source prefixes for the underlying interface.</li> <li>• <b>Destination prefixes, total</b>—Total number of destination prefixes for the underlying interface.</li> <li>• <b>Prefix—in</b>et family prefix.</li> </ul>	<b>detail extensive</b> none

Table 5: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<i>protocol-family</i>	Protocol family configured on the logical interface.	<b>brief</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set.</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> <li>• <b>IPv6 transit statistics</b>—Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.</li> </ul> <p><b>NOTE:</b> The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Local statistics</b>	<p>Number of transit bytes and packets received and transmitted on the local interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Transit statistics</b>	<p>Number and rate of bytes and packets transiting the switch.</p> <p><b>NOTE:</b> The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>IPv6 Transit statistics</b>	<p>Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.</p> <p><b>NOTE:</b> The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Input packets</b>	Number of packets received on the interface.	none



Table 5: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Output packets</b>	Number of packets transmitted on the interface.	none
<b>Protocol</b>	Protocol family. Possible values are described in the “Protocol Field” section under Common Output Fields Description.	detail extensive none
<b>MTU</b>	Maximum transmission unit size on the logical interface.	detail extensive none
<b>Maximum labels</b>	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	detail extensive
<b>Route table</b>	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
<b>Flags</b>	Information about protocol family flags. Possible values are described in the “Family Flags” section under Common Output Fields Description.	detail extensive none
<b>Mac-Validate Failures</b>	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under Common Output Fields Description.	detail extensive none
<b>Destination</b>	IP address of the remote side of the connection.	detail extensive statistics none
<b>Local</b>	IP address of the logical interface.	detail extensive terse none
<b>Remote</b>	IP address of the remote interface.	terse
<b>Broadcast</b>	Broadcast address of the logical interface.	detail extensive none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	detail extensive
<b>Link</b>	Name of the physical interfaces for member links in an aggregated Ethernet bundle for a PPPoE over aggregated Ethernet configuration. PPPoE traffic goes out on these interfaces.	detail extensive none
<b>Dynamic-profile</b>	Name of the PPPoE dynamic profile assigned to the underlying interface.	detail extensive none
<b>Service Name Table</b>	Name of the PPPoE service name table assigned to the PPPoE underlying interface.	detail extensive none
<b>Max Sessions</b>	Maximum number of dynamic PPPoE logical interfaces that the router can activate on the underlying interface.	detail extensive none

Table 5: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Duplicate Protection</b>	State of duplicate protection: <b>On</b> or <b>Off</b> . Duplicate protection prevents the activation of another dynamic PPPoE logical interface on the same underlying interface when a dynamic PPPoE logical interface for a client with the same MAC address is already active on that interface.	<b>detail extensive none</b>
<b>AC Name</b>	Name of the access concentrator.	<b>detail extensive none</b>

---

## Sample Output

### show interfaces (Demux)

```

user@host> show interfaces demux0
Physical interface: demux0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 79, Generation: 129
  Type: Software-Pseudo, Link-level type: Unspecified, MTU: 9192, Clocking: 1,
  Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Full-Duplex
  Link flags     : None
  Physical info  : Unspecified
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                0                0 bps
    Input packets :                0                0 pps
    Output packets:                0                0 pps
  IPv6 transit statistics:
    Input bytes   :                0
    Output bytes  :                0
    Input packets :                0
    Output packets:                0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
    Resource errors: 0

Logical interface demux0.0 (Index 87) (SNMP ifIndex 84) (Generation 312)
  Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
  Demux:
    Underlying interface: ge-2/0/1.0 (Index 74)
    Family Inet Source prefixes, total 1
    Prefix: 1.1.1/24
    Traffic statistics:
      Input bytes   :                0
      Output bytes  :             1554
      Input packets :                0
      Output packets:             37
    IPv6 transit statistics:
      Input bytes   :                0
      Output bytes  :                0
      Input packets :                0
      Output packets:                0
    Local statistics:
      Input bytes   :                0
      Output bytes  :             1554
      Input packets :                0
      Output packets:             37
    Transit statistics:
      Input bytes   :                0                0 bps
      Output bytes  :                0                0 bps
      Input packets :                0                0 pps
      Output packets:                0                0 pps

```

```
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Protocol inet, MTU: 1500, Generation: 395, Route table: 0
Flags: Is-Primary, Mac-Validate-Strict
Mac-Validate Failures: Packets: 0, Bytes: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 11.1.1/24, Local: 11.1.1.1, Broadcast: 11.1.1.255,
Generation: 434
```

#### show interfaces (PPPoE over Aggregated Ethernet)

```
user@host> show interfaces demux0.100
Logical interface demux0.100 (Index 76) (SNMP ifIndex 61160)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ]
Encapsulation: ENET2
Demux:
  Underlying interface: ae0 (Index 199)
Link:
  ge-1/0/0
  ge-1/1/0
Input packets : 0
Output packets: 0
Protocol pppoe
  Dynamic Profile: pppoe-profile,
  Service Name Table: service-table1,
  Max Sessions: 100, Duplicate Protection: On,
  AC Name: pppoe-server-1
```

#### show interfaces extensive (Targeted Distribution for

```
user@host> show interfaces demux0.1073741824 extensive

Logical interface demux0.1073741824 (Index 75) (SNMP ifIndex 558) (Generation
346)
```

### Aggregated Ethernet Links)


```
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
Demux:
  Underlying interface: ae0 (Index 201)
Link:
  ge-1/0/0
  ge-1/1/0
  ge-2/0/7
  ge-2/0/8
Targeting summary:
  ge-1/1/0, primary, Physical link is Up
  ge-2/0/8, backup, Physical link is Up
Bandwidth: 1000mbps
```

### show interfaces demux0 (ACI Interface Set Configured)

```
user@host> show interfaces demux0.1073741827
Logical interface demux0.1073741827 (Index 346) (SNMP ifIndex 527)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1802 0x8100.302 ] Encapsulation:
ENET2
Demux: Source Family Inet
ACI VLAN:
  Dynamic Profile: aci-vlan-set-profile
Demux:
  Underlying interface: ge-1/0/0 (Index 138)
Input packets : 18
Output packets: 16
Protocol inet, MTU: 1500
  Flags: Sendbcst-pkt-to-re, Unnumbered
  Donor interface: lo0.0 (Index 322)
  Preferred source address: 100.20.200.202
  Addresses, Flags: Primary Is-Default Is-Primary
    Local: 10.4.12.119
Protocol pppoe
  Dynamic Profile: aci-vlan-pppoe-profile,
  Service Name Table: None,
  Max Sessions: 32000, Max Sessions VSA Ignore: Off,
  Duplicate Protection: On, Short Cycle Protection: Off,
  AC Name: nbc
```

## show interfaces diagnostics optics (Gigabit Ethernet, 10-Gigabit Ethernet, and 100 Gigabit Ethernet)

---

<b>Syntax</b>	show interfaces diagnostics optics <i>interface-name</i>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(M120, M320, MX Series, T320, T640, and T1600 routers only) Display diagnostics data, warnings, and alarms for Gigabit Ethernet, 10-Gigabit Ethernet, and 100 Gigabit Ethernet interfaces.
<b>Options</b>	<i>interface-name</i> —Interface name: <i>ge-fpc/pic/port</i> or <i>xe-fpc/pic/port</i> .
<b>Additional Information</b>	<p>The transceivers are polled in 1-second intervals for diagnostics data, warnings, and alarms. The alarms do not cause the links to go down or the LEDs to change color, nor generate SNMP traps. Changes in alarm and warning status will generate system log messages.</p> <p>Thresholds that trigger a high alarm, low alarm, high warning, or low warning are set by the transceiver vendors. Generally, a high alarm or low alarm indicates that the optics module is not operating properly. This information can be used to diagnose why a device is not working.</p> <div><p><b>NOTE:</b> Some transceivers do not support all optical diagnostics features described in the output fields.</p><p>The show interfaces diagnostics optics command for optical interfaces does not report the decibel (dBm) value of the received signal if the received power is zero milliwatts (0.0000 mW).</p></div>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces diagnostics optics (DWDM and DWDM OTN) on page 168</a> <a href="#">show interfaces diagnostics optics (Bidirectional SFP) on page 169</a> <a href="#">show interfaces diagnostics optics (SFP) on page 170</a> <a href="#">show interfaces diagnostics optics (SFP) on page 170</a> <a href="#">show interfaces diagnostics optics (XFP and CFP Optics) on page 171</a>
<b>Output Fields</b>	<a href="#">Table 6 on page 157</a> lists the output fields for the <b>show interfaces diagnostics optics</b> command for DWDM and DWDM OTN PICs. Output fields are listed in the approximate order in which they appear.

**Table 6: 10-Gigabit Ethernet DWDM and DWDM OTN PICs show interfaces diagnostics optics Output Fields**

Field Name	Field Description
Physical interface	Name of the physical interface.
Laser bias current	Magnitude of the laser bias power setting current, in milliamperes. The laser bias provides direct modulation of laser diodes and modulates currents.
Laser output power	Laser output power, in milliwatts (mW) and decibels, referenced to 1.0 mW (dBm). This is a software equivalent to the <b>LsPOWMON</b> pin in hardware.
Receiver signal average optical power	Average received optical power, in mW and dBm. This indicator is a software equivalent to the <b>RxPOWMON</b> pin in hardware. Average optical power is vendor-specific.
Laser end-of-life alarm	Laser end-of-life alarm: <b>On</b> or <b>Off</b> .
Laser wavelength alarm	Laser wavelength alarm: <b>On</b> or <b>Off</b> .
Laser bias current alarm	Laser bias current alarm: <b>On</b> or <b>Off</b> .
Laser temperature alarm	Laser temperature alarm: <b>On</b> or <b>Off</b> .
Laser power alarm	Laser power alarm: <b>On</b> or <b>Off</b> .
Modulator temperature alarm	Modulator temperature alarm: <b>On</b> or <b>Off</b> . Transceivers from some vendors do not support this field.
Modulator bias alarm	Modulator bias alarm: <b>On</b> or <b>Off</b> .
Tx multiplexer FIFO error alarm	Transmit multiplexer first in, first out (FIFO) error alarm: <b>On</b> or <b>Off</b> .
Tx loss of PLL lock alarm	Transmit loss of phase-locked loop (PLL) lock alarm: <b>On</b> or <b>Off</b> .
Rx loss of average optical power alarm	Receive loss of average optical power alarm: <b>On</b> or <b>Off</b> .
Rx loss of AC power alarm	Receive loss of AC power alarm: <b>On</b> or <b>Off</b> . Transceivers from some vendors do not support this field.
Rx loss of PLL lock alarm	Receive loss of phase-locked loop (PLL) lock alarm: <b>On</b> or <b>Off</b> .

[Table 7 on page 158](#) lists the output fields for the **show interfaces diagnostics optics** command when the router is operating with bidirectional SFP optics. Output fields are listed in the approximate order in which they appear.

Table 7: Gigabit Ethernet Bidirectional SFP Optics show interfaces diagnostics optics Output Fields

Field Name	Field Description
Physical interface	Name of the physical interface.
Laser bias current	Magnitude of the laser bias power setting current, in milliamperes. The laser bias provides direct modulation of laser diodes and modulates currents.
Laser output power	Laser output power, in milliwatts (mW) and decibels, referenced to 1.0 mW (dBm).
Module temperature	Temperature of the optics module, in Celsius and Fahrenheit.
Module voltage	Internally measured module voltage.
Receiver signal average optical power	Average received optical power, in mW and dBm.
Laser bias current high alarm	Laser bias power setting high alarm. Displays <b>on</b> or <b>off</b> .
Laser bias current low alarm	Laser bias power setting low alarm. Displays <b>on</b> or <b>off</b> .
Laser bias current high warning	Laser bias power setting high warning. Displays <b>on</b> or <b>off</b> .
Laser bias current low warning	Laser bias power setting low warning. Displays <b>on</b> or <b>off</b> .
Laser output power high alarm	Laser output power high alarm. Displays <b>on</b> or <b>off</b> .
Laser output power low alarm	Laser output power low alarm. Displays <b>on</b> or <b>off</b> .
Laser output power high warning	Laser output power high warning. Displays <b>on</b> or <b>off</b> .
Laser output power low warning	Laser output power low warning. Displays <b>on</b> or <b>off</b> .
Module temperature high alarm	Module temperature high alarm. Displays <b>on</b> or <b>off</b> .
Module temperature low alarm	Module temperature low alarm. Displays <b>on</b> or <b>off</b> .
Module temperature high warning	Module temperature high warning. Displays <b>on</b> or <b>off</b> .



Table 7: Gigabit Ethernet Bidirectional SFP Optics show interfaces diagnostics optics Output Fields (*continued*)

Field Name	Field Description
Module temperature low warning	Module temperature low warning. Displays <b>on</b> or <b>off</b> .
Module voltage high alarm	Module voltage high alarm. Displays <b>on</b> or <b>off</b> .
Module voltage low alarm	Module voltage low alarm. Displays <b>on</b> or <b>off</b> .
Module voltage high warning	Module voltage high warning. Displays <b>on</b> or <b>off</b> .
Module voltage low warning	Module voltage high warning. Displays <b>on</b> or <b>off</b> .
Laser rx power high alarm	Receive laser power high alarm. Displays <b>on</b> or <b>off</b> .
Laser rx power low alarm	Receive laser power low alarm. Displays <b>on</b> or <b>off</b> .
Laser rx power high warning	Receive laser power high warning. Displays <b>on</b> or <b>off</b> .
Laser rx power low warning	Receive laser power low warning. Displays <b>on</b> or <b>off</b> .
Laser bias current high alarm threshold	Vendor-specified threshold for the laser bias current high alarm: <b>70.000 mA</b> .
Laser bias current low alarm threshold	Vendor-specified threshold for the laser bias current low alarm: <b>0.0002 mA</b> .
Laser bias current high warning threshold	Vendor-specified threshold for the laser bias current high warning: <b>65.000 mA</b> .
Laser bias current low warning threshold	Vendor-specified threshold for the laser bias current low warning: <b>0.0002 mA</b> .
Laser output power high alarm threshold	Vendor-specified threshold for the laser output power high alarm: <b>1.0000 mW</b> or <b>0.00 dBm</b> .
Laser output power low alarm threshold	Vendor-specified threshold for the laser output power low alarm: <b>0.0560 mW</b> or <b>-12.52 dBm</b> .
Laser output power high warning threshold	Vendor-specified threshold for the laser output power high warning: <b>0.6300 mW</b> or <b>-2.01 dBm</b> .

**Table 7: Gigabit Ethernet Bidirectional SFP Optics show interfaces diagnostics optics Output Fields** (*continued*)

Field Name	Field Description
Laser output power low warning threshold	Vendor-specified threshold for the laser output power low warning: <b>0.0890 mW</b> or <b>-10.51 dBm</b> .
Module temperature high alarm threshold	Vendor-specified threshold for the module temperature high alarm: <b>100° C</b> or <b>212° F</b> .
Module temperature low alarm threshold	Vendor-specified threshold for the module temperature low alarm: <b>-50° C</b> or <b>-58° F</b> .
Module temperature high warning threshold	Vendor-specified threshold for the module temperature high warning: <b>95 ° C</b> or <b>203 ° F</b> .
Module temperature low warning threshold	Vendor-specified threshold for the module temperature low warning: <b>-48° C</b> or <b>-54° F</b> .
Module voltage high alarm threshold	Module voltage high alarm threshold: <b>3.700 v</b> .
Module voltage low alarm threshold	Module voltage low alarm threshold: <b>2.900 v</b> .
Module voltage high warning threshold	Module voltage high warning threshold: <b>3.7600 v</b> .
Module voltage low warning threshold	Module voltage low warning threshold: <b>3.000 v</b> .
Laser rx power high alarm threshold	Vendor-specified threshold for the laser Rx power high alarm: <b>1.9953 mW</b> or <b>3.00 dBm</b> .
Laser rx power low alarm threshold	Vendor-specified threshold for the laser Rx power low alarm: <b>0.0001 mW</b> or <b>-40.00 dBm</b> .
Laser rx power high warning threshold	Vendor-specified threshold for the laser Rx power high warning: <b>1.0000 mW</b> or <b>0.00 dBm</b> .
Laser rx power low warning threshold	Vendor-specified threshold for the laser Rx power low warning: <b>0.0010 mW</b> or <b>-30.00 dBm</b> .

[Table 8 on page 160](#) lists the output fields for the **show interfaces diagnostics optics** command for SFP transceivers. Output fields are listed in the approximate order in which they appear.

**Table 8: Gigabit Ethernet SFP show interfaces diagnostics Output Fields**

Field Name	Field Description
Physical interface	Name of the physical interface.

Table 8: Gigabit Ethernet SFP show interfaces diagnostics Output Fields (*continued*)

Field Name	Field Description
Laser bias current	Measured laser bias current in uA.
Laser output power	Measured laser output power in mW.
Module temperature	Internally measured module temperature.
Module voltage	Internally measured module voltage.
Laser rx power	Measured receive optical power in mW.
Laser bias current high alarm	Laser bias current high alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Laser bias current low alarm	Laser bias current low alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Laser output power high alarm	Laser output power high alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Laser output power low alarm	Laser output power low alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Module temp high alarm	Module temperature high alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Module temp low alarm	Module temperature low alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Laser rx power high alarm	Laser receive power high alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Laser rx power low alarm	Laser receive power low alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Laser bias current high warning	Laser bias current high warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Laser bias current low warning	Laser bias current low warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Laser output power high warning	Laser output power high warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Laser output power low warning	Laser output power low warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Module temperature high warning	Module temperature high warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Module temperature low warning	Module temperature low warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.

Table 8: Gigabit Ethernet SFP show interfaces diagnostics Output Fields (*continued*)

Field Name	Field Description
Laser rx power high warning	Laser receive power high warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Laser rx power low warning	Laser receive power low warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Laser bias current high alarm threshold	Laser bias current high alarm threshold. Alarm threshold ranges are vendor-specific.
Laser bias current low alarm threshold	Laser bias current low alarm threshold. Alarm threshold ranges are vendor-specific.
Laser bias current high warning threshold	Laser bias current high warning threshold. Warning ranges are vendor-specific.
Laser bias current low warning threshold	Laser bias current low warning threshold. Warning ranges are vendor-specific.
Laser output power high alarm threshold	Laser output power high alarm threshold. Alarm threshold ranges are vendor-specific.
Laser output power low alarm threshold	Laser output power low alarm threshold. Alarm threshold ranges are vendor-specific.
Laser output power high warning threshold	Laser output power high warning threshold. Warning ranges are vendor-specific.
Laser output power low warning threshold	Laser output power low warning threshold. Warning ranges are vendor-specific.
Module temperature high alarm threshold	Module temperature high alarm threshold. Alarm threshold ranges are vendor-specific.
Module temperature low alarm threshold	Module temperature low alarm threshold. Alarm threshold ranges are vendor-specific.
Module temperature high warning threshold	Module temperature high warning threshold. Warning ranges are vendor-specific.
Module temperature low warning threshold	Module temperature low warning threshold. Warning ranges are vendor-specific.
Module voltage high alarm threshold	Module voltage high alarm threshold. Alarm ranges are vendor-specific.
Module voltage low alarm threshold	Module voltage low alarm threshold. Alarm ranges are vendor-specific.

Table 8: Gigabit Ethernet SFP show interfaces diagnostics Output Fields (*continued*)

Field Name	Field Description
Module voltage high warning threshold	Module voltage high warning threshold. Warning ranges are vendor-specific.
Module voltage low warning threshold	Module voltage low warning threshold. Warning ranges are vendor-specific.
Laser rx power high alarm threshold	Laser receive power high alarm threshold. Alarm threshold ranges are vendor-specific.
Laser rx power low alarm threshold	Laser receive power low alarm threshold. Alarm threshold ranges are vendor-specific.
Laser rx power high warning threshold	Laser receive power high warning threshold. Warning threshold ranges are vendor-specific.
Laser rx power high low threshold	Laser receive power high warning threshold. Warning threshold ranges are vendor-specific.

Table 9 on page 163 lists the output fields for the **show interfaces diagnostics optics** command for 10-Gigabit Ethernet transceivers. Output fields are listed in the approximate order in which they appear.

Table 9: 10-Gigabit Ethernet Transceivers show interfaces diagnostics optics Output Fields

Field Name	Field Description
Physical interface	Name of the physical interface.
Laser bias current	Measured laser bias current in mA.
Laser output power	Measured laser output power in mW.
Module temperature	Internally measured module temperature.
Laser rx power	Measured receive optical power in mW.
Laser bias current high alarm	Laser bias current high alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Laser bias current low alarm	Laser bias current low alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Laser output power high alarm	Laser output power high alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Laser output power low alarm	Laser output power low alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.

Table 9: 10-Gigabit Ethernet Transceivers show interfaces diagnostics optics Output Fields (*continued*)

Field Name	Field Description
Module temp high alarm	Module temperature high alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Module temp low alarm	Module temperature low alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Laser rx power high alarm	Laser receive power high alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Laser rx power low alarm	Laser receive power low alarm: <b>On</b> or <b>Off</b> . Alarm ranges are vendor-specific.
Laser bias current high warning	Laser bias current high warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Laser bias current low warning	Laser bias current low warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Laser output power high warning	Laser output power high warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Laser output power low warning	Laser output power low warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Module temperature high warning	Module temperature high warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Module temperature low warning	Module temperature low warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Laser rx power high warning	Laser receive power high warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Laser rx power low warning	Laser receive power low warning: <b>On</b> or <b>Off</b> . Warning ranges are vendor-specific.
Laser bias current high alarm threshold	Laser bias current high alarm threshold. Alarm threshold ranges are vendor-specific.
Laser bias current low alarm threshold	Laser bias current low alarm threshold. Alarm threshold ranges are vendor-specific.
Laser output power high alarm threshold	Laser output power high alarm threshold. Alarm threshold ranges are vendor-specific.
Laser output power low alarm threshold	Laser output power low alarm threshold. Alarm threshold ranges are vendor-specific.

**Table 9: 10-Gigabit Ethernet Transceivers show interfaces diagnostics optics Output Fields** (*continued*)

Field Name	Field Description
Module temperature high alarm threshold	Module temperature high alarm threshold. Alarm threshold ranges are vendor-specific.
Module temperature low alarm threshold	Module temperature low alarm threshold. Alarm threshold ranges are vendor-specific.
Laser rx power high alarm threshold	Laser receive power high alarm threshold. Alarm threshold ranges are vendor-specific.
Laser rx power low alarm threshold	Laser receive power low alarm threshold. Alarm threshold ranges are vendor-specific.
Laser bias current high warning threshold	Laser bias current high warning threshold. Warning ranges are vendor-specific.
Laser bias current low warning threshold	Laser bias current low warning threshold. Warning ranges are vendor-specific.
Laser output power high warning threshold	Laser output power high warning threshold. Warning ranges are vendor-specific.
Laser output power low warning threshold	Laser output power low warning threshold. Warning ranges are vendor-specific.
Module temperature high warning threshold	Module temperature high warning threshold. Warning ranges are vendor-specific.
Module temperature low warning threshold	Module temperature low warning threshold. Warning ranges are vendor-specific.
Laser rx power high warning threshold	Laser receive power high warning threshold. Warning threshold ranges are vendor-specific.
Laser rx power low warning threshold	Laser receive power low warning threshold. Warning threshold ranges are vendor-specific.

[Table 10 on page 165](#) lists the output fields for the **show interfaces diagnostics optics** command for XFP transceivers. Output fields are listed in the approximate order in which they appear.

**Table 10: 10-Gigabit Ethernet XFP Transceivers show interfaces diagnostics optics Output Fields**

Field Name	Field Description
Physical interface	Name of the physical interface.

Table 10: 10-Gigabit Ethernet XFP Transceivers show interfaces diagnostics optics Output Fields (*continued*)

Field Name	Field Description
Laser bias current	Magnitude of the laser bias power setting current, in milliamperes. The laser bias provides direct modulation of laser diodes and modulates currents.
Laser output power	Laser output power, in milliwatts (mW) and decibels, referenced to 1.0 mW (dBm). This is a software equivalent to the <b>LsPOWMON</b> pin in hardware.
Module temperature	Temperature of the XFP optics module, in Celsius and Fahrenheit.
Laser rx power	Laser received optical power, in mW and dBm.
Laser bias current high alarm	Laser bias power setting high alarm. Displays <b>on</b> or <b>off</b> .
Laser bias current low alarm	Laser bias power setting low alarm. Displays <b>on</b> or <b>off</b> .
Laser bias current high warning	Laser bias power setting high warning. Displays <b>on</b> or <b>off</b> .
Laser bias current low warning	Laser bias power setting low warning. Displays <b>on</b> or <b>off</b> .
Laser output power high alarm	Laser output power high alarm. Displays <b>on</b> or <b>off</b> .
Laser output power low alarm	Laser output power low alarm. Displays <b>on</b> or <b>off</b> .
Laser output power high warning	Laser output power high warning. Displays <b>on</b> or <b>off</b> .
Laser output power low warning	Laser output power low warning. Displays <b>on</b> or <b>off</b> .
Module temperature high alarm	Module temperature high alarm. Displays <b>on</b> or <b>off</b> .
Module temperature low alarm	Module temperature low alarm. Displays <b>on</b> or <b>off</b> .
Module temperature high warning	Module temperature high warning. Displays <b>on</b> or <b>off</b> .
Module temperature low warning	Module temperature low warning. Displays <b>on</b> or <b>off</b> .
Laser rx power high alarm	Receive laser power high alarm. Displays <b>on</b> or <b>off</b> .



Table 10: 10-Gigabit Ethernet XFP Transceivers show interfaces diagnostics optics Output Fields (*continued*)

Field Name	Field Description
Laser rx power low alarm	Receive laser power low alarm. Displays <b>on</b> or <b>off</b> .
Laser rx power high warning	Receive laser power high warning. Displays <b>on</b> or <b>off</b> .
Laser rx power low warning	Receive laser power low warning. Displays <b>on</b> or <b>off</b> .
Module not ready alarm	Module not ready alarm. When <b>on</b> , indicates the module has an operational fault. Displays <b>on</b> or <b>off</b> .
Module power down alarm	Module power down alarm. When <b>on</b> , module is in a limited power mode, low for normal operation. Displays <b>on</b> or <b>off</b> .
Tx data not ready alarm	Any condition leading to invalid data on the transmit path. Displays <b>on</b> or <b>off</b> .
Tx not ready alarm	Any condition leading to invalid data on the transmit path. Displays <b>on</b> or <b>off</b> .
Tx laser fault alarm	Laser fault condition. Displays <b>on</b> or <b>off</b> .
Tx CDR loss of lock alarm	Transmit clock and data recovery (CDR) loss of lock. Loss of lock on the transmit side of the CDR. Displays <b>on</b> or <b>off</b> .
Rx not ready alarm	Any condition leading to invalid data on the receive path. Displays <b>on</b> or <b>off</b> .
Rx loss of signal alarm	Receive Loss of Signal alarm. When <b>on</b> , indicates insufficient optical input power to the module. Displays <b>on</b> or <b>off</b> .
Rx CDR loss of lock alarm	Receive CDR loss of lock. Loss of lock on the receive side of the CDR. Displays <b>on</b> or <b>off</b> .
Laser bias current high alarm threshold	Vendor-specified threshold for the laser bias current high alarm: <b>130.000 mA</b> .
Laser bias current low alarm threshold	Vendor-specified threshold for the laser bias current low alarm: <b>10.000 mA</b> .
Laser bias current high warning threshold	Vendor-specified threshold for the laser bias current high warning: <b>120.000 mA</b> .
Laser bias current low warning threshold	Vendor-specified threshold for the laser bias current low warning: <b>12.000 mA</b> .
Laser output power high alarm threshold	Vendor-specified threshold for the laser output power high alarm: <b>0.8910 mW</b> or <b>-0.50 dBm</b> .
Laser output power low alarm threshold	Vendor-specified threshold for the laser output power low alarm: <b>0.2230 mW</b> or <b>-6.52 dBm</b> .

Table 10: 10-Gigabit Ethernet XFP Transceivers show interfaces diagnostics optics Output Fields (*continued*)

Field Name	Field Description
Laser output power high warning threshold	Vendor-specified threshold for the laser output power high warning: 0.7940 mW or -100 dBm.
Laser output power low warning threshold	Vendor-specified threshold for the laser output power low warning: 0.2510 mW or -600 dBm.
Module temperature high alarm threshold	Vendor-specified threshold for the module temperature high alarm: 90° C or 194° F.
Module temperature low alarm threshold	Vendor-specified threshold for the module temperature low alarm: -5° C or 23° F.
Module temperature high warning threshold	Vendor-specified threshold for the module temperature high warning: 85 ° C or 185 ° F.
Module temperature low warning threshold	Vendor-specified threshold for the module temperature low warning: 0° C or 32° F.
Laser rx power high alarm threshold	Vendor-specified threshold for the laser Rx power high alarm: 1.2589 mW or 1.00 dBm.
Laser rx power low alarm threshold	Vendor-specified threshold for the laser Rx power low alarm: 0.0323 mW or -14.91 dBm.
Laser rx power high warning threshold	Vendor-specified threshold for the laser Rx power high warning: 1.1220 mW or 0.50 dBm.
Laser rx power low warning threshold	Vendor-specified threshold for the laser Rx power low warning: 0.0363 mW or -14.40 dBm.

## Sample Output

### show interfaces diagnostics optics

```

user@host> show interfaces diagnostics optics ge-5/0/0
Physical interface: ge-5/0/0
Laser bias current           : 79.938 mA

```

**(DWDM and DWDM OTN)**

```

Laser output power           : 1.592 mW / 2.02 dBm
Receiver signal average optical power : 1.3854 mW / 1.42 dBm
Laser end-of-life alarm      : Off
Laser wavelength alarm       : Off
Laser bias current alarm     : Off
Laser temperature alarm      : Off
Laser power alarm            : Off
Modulator temperature alarm   : Off
Modulator bias alarm         : Off
Tx multiplexer FIFO error alarm : Off
Tx loss of PLL lock alarm    : Off
Rx loss of average optical power alarm: Off
Rx loss of AC power alarm    : Off
Rx loss of PLL lock alarm    : Off

```

**show interfaces  
diagnostics optics  
(Bidirectional SFP)**

```
user@host> show interfaces diagnostics optics ge-3/0/6
```

```
Physical interface: ge-3/0/6
```

```

Laser bias current           : 13.356 mA
Laser output power           : 0.2210 mW / -6.56 dBm
Module temperature           : 36 degrees C / 96 degrees F
Module voltage                : 3.2180 V
Receiver signal average optical power : 0.2429 mW / -6.15 dBm
Laser bias current high alarm : Off
Laser bias current low alarm  : Off
Laser bias current high warning : Off
Laser bias current low warning : Off
Laser output power high alarm  : Off
Laser output power low alarm   : Off
Laser output power high warning : Off
Laser output power low warning : Off
Module temperature high alarm  : Off
Module temperature low alarm   : Off
Module temperature high warning : Off
Module temperature low warning : Off
Module voltage high alarm      : Off
Module voltage low alarm       : Off
Module voltage high warning    : Off
Module voltage low warning     : Off
Laser rx power high alarm      : Off
Laser rx power low alarm       : Off
Laser rx power high warning    : Off
Laser rx power low warning     : Off
Laser bias current high alarm threshold : 70.000 mA
Laser bias current low alarm threshold : 0.002 mA
Laser bias current high warning threshold : 65.000 mA
Laser bias current low warning threshold : 0.002 mA
Laser output power high alarm threshold : 1.0000 mW / 0.00 dBm
Laser output power low alarm threshold : 0.0560 mW / -12.52 dBm
Laser output power high warning threshold : 0.6300 mW / -2.01 dBm
Laser output power low warning threshold : 0.0890 mW / -10.51 dBm
Module temperature high alarm threshold : 100 degrees C / 212 degrees F
Module temperature low alarm threshold : -50 degrees C / -58 degrees F
Module temperature high warning threshold : 95 degrees C / 203 degrees F
Module temperature low warning threshold : -48 degrees C / -54 degrees F
Module voltage high alarm threshold : 3.700 V
Module voltage low alarm threshold : 2.900 V
Module voltage high warning threshold : 3.600 V
Module voltage low warning threshold : 3.000 V
Laser rx power high alarm threshold : 1.9953 mW / 3.00 dBm
Laser rx power low alarm threshold : 0.0001 mW / -40.00 dBm
Laser rx power high warning threshold : 1.0000 mW / 0.00 dBm

```

Laser rx power low warning threshold : 0.0010 mW / -30.00 dBm

**show interfaces  
diagnostics optics  
(SFP)**

user@host> show interfaces diagnostics optics ge-0/3/0

Physical interface: ge-0/3/0

```

Laser bias current          : 23.408 mA
Laser output power         : 1.479 mW / 1.70 dBm
Module temperature         : 37 degrees C / 99 degrees F
Laser rx power             : 0.121 mW / -9.16 dBm
Laser bias current high alarm : Off
Laser bias current low alarm  : Off
Laser output power high alarm : Off
Laser output power low alarm  : Off
Module temperature high alarm : Off
Module temperature low alarm  : Off
Laser rx power high alarm    : Off
Laser rx power low alarm     : Off
Laser bias current high warning : Off
Laser bias current low warning : Off
Laser output power high warning : Off
Laser output power low warning : Off
Module temperature high warning : Off
Module temperature low warning : Off
Laser rx power high warning   : Off
Laser rx power low warning    : Off
Laser bias current high alarm threshold : 31.000 mA
Laser bias current low alarm threshold  : 10.000 mA
Laser output power high alarm threshold : 6.000 mW / 7.78 dBm
Laser output power low alarm threshold  : 0.100 mW / -10.00 dBm
Module temperature high alarm threshold : 85 degrees C / 185 degrees F
Module temperature low alarm threshold  : 0 degrees C / 32 degrees F
Laser rx power high alarm threshold    : 1.000 mW / 0.00 dBm
Laser rx power low alarm threshold     : 0.001 mW / -30.00 dBm
Laser bias current high warning threshold : 28.000 mA
Laser bias current low warning threshold : 11.000 mA
Laser output power high warning threshold : 5.000 mW / 6.99 dBm
Laser output power low warning threshold  : 0.500 mW / -3.01 dBm
Module temperature high warning threshold : 70 degrees C / 158 degrees F
Module temperature low warning threshold  : 10 degrees C / 50 degrees F
Laser rx power high warning threshold    : 0.501 mW / -3.00 dBm
Laser rx power low warning threshold     : 0.001 mW / -28.86 dBm

```

**show interfaces  
diagnostics optics  
(SFP)**

user@host> show interfaces diagnostics optics ge-1/0/0

Physical interface: ge-1/0/0

```

Laser bias current          : 49.010 mA
Laser output power         : 1.263 mW / 1.01 dBm
Module temperature         : 17 degrees C / 62 degrees F

Module voltage             : 4.21 V
Laser rx power             : 0.060 mW / -12.21 dBm
Laser bias current high alarm : Off
Laser bias current low alarm  : Off
Laser output power high alarm : Off
Laser output power low alarm  : Off
Module temperature high alarm : Off
Module temperature low alarm  : Off
Module voltage high alarm    : Off
Module voltage low alarm     : Off
Laser rx power high alarm    : Off
Laser rx power low alarm     : Off
Laser bias current high warning : Off

```

```

Laser bias current low warning           : Off
Laser output power high warning          : Off
Laser output power low warning           : Off
Module temperature high warning           : Off
Module temperature low warning            : Off
Module voltage high warning               : Off
Module voltage low warning                : Off
Laser rx power high warning               : Off
Laser rx power low warning                : Off
Laser bias current high alarm threshold   : 70.000 mA
Laser bias current low alarm threshold    : 20.000 mA
Laser bias current high warning threshold : 65.000 mA
Laser bias current low warning threshold  : 25.000 mA
Laser output power high alarm threshold    : 1.4120 mW / 1.50 dBm
Laser output power low alarm threshold     : 0.1990 mW / -7.01 dBm
Laser output power high warning threshold : 1.2580 mW / 1.00 dBm
Laser output power low warning threshold   : 0.2230 mW / -6.52 dBm
Module temperature high alarm threshold    : 78 degrees C / 172 degrees F

Module temperature low alarm threshold     : 13 degrees C / 9 degrees F
Module temperature high warning threshold  : 75 degrees C / 167 degrees F

Module temperature low warning threshold   : 10 degrees C / 14 degrees F

Module voltage high alarm threshold        : 5.71 V
Module voltage low alarm threshold         : 2.05 V
Module voltage high warning threshold      : 5.20 V
Module voltage low warning threshold       : 3.11 V
Laser rx power high alarm threshold        : 1.7783 mW / 2.50 dBm
Laser rx power low alarm threshold         : 0.0100 mW / -20.00 dBm
Laser rx power high warning threshold      : 1.5849 mW / 2.00 dBm
Laser rx power low warning threshold       : 0.0158 mW / -18.01 dBm

```

**show interfaces  
diagnostics optics  
(XFP and CFP Optics)**

user@host> show interfaces diagnostics optics xe-2/1/0

Physical interface: xe-2/1/0

```

Laser bias current           : 52.060 mA
Laser output power           : 0.5640 mW / -2.49 dBm
Module temperature           : 31 degrees C / 88 degrees F
Laser rx power                : 0.0844 mW / -10.74 dBm
Laser bias current high alarm : Off
Laser bias current low alarm  : Off
Laser bias current high warning : Off
Laser bias current low warning : Off
Laser output power high alarm  : Off
Laser output power low alarm   : Off
Laser output power high warning : Off
Laser output power low warning : Off
Module temperature high alarm  : Off
Module temperature low alarm   : Off
Module temperature high warning : Off
Module temperature low warning : Off
Laser rx power high alarm      : Off
Laser rx power low alarm       : Off
Laser rx power high warning    : Off
Laser rx power low warning     : Off
Module not ready alarm         : Off
Module power down alarm        : Off
Tx data not ready alarm        : Off
Tx not ready alarm             : Off
Tx laser fault alarm           : Off
Tx CDR loss of lock alarm      : Off

```

```
Rx not ready alarm           : Off
Rx loss of signal alarm      : Off
Rx CDR loss of lock alarm    : Off
Laser bias current high alarm threshold : 130.000 mA
Laser bias current low alarm threshold  : 10.000 mA
Laser bias current high warning threshold : 120.000 mA
Laser bias current low warning threshold : 12.000 mA
Laser output power high alarm threshold : 0.8910 mW / -0.50 dBm
Laser output power low alarm threshold  : 0.2230 mW / -6.52 dBm
Laser output power high warning threshold : 0.7940 mW / -1.00 dBm
Laser output power low warning threshold : 0.2510 mW / -6.00 dBm
Module temperature high alarm threshold : 90 degrees C / 194 degrees F
Module temperature low alarm threshold  : -5 degrees C / 23 degrees F
Module temperature high warning threshold : 85 degrees C / 185 degrees F
Module temperature low warning threshold : 0 degrees C / 32 degrees F
Laser rx power high alarm threshold    : 1.2589 mW / 1.00 dBm
Laser rx power low alarm threshold     : 0.0323 mW / -14.91 dBm
Laser rx power high warning threshold  : 1.1220 mW / 0.50 dBm
Laser rx power low warning threshold   : 0.0363 mW / -14.40 dBm
```

## show interfaces (Fast Ethernet)

<b>Syntax</b>	show interfaces <i>interface-type</i> <brief   detail   extensive   terse> <descriptions> <media> <snmp-index <i>snmp-index</i> > <statistics>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display status information about the specified Fast Ethernet interface.
<b>Options</b>	<p><i>interface-type</i>—On M Series and T Series routers, the interface type is <i>fe-fpc/pic/port</i>. On the J Series routers, the interface type is <i>fe-pim/O/port</i>.</p> <p><i>brief   detail   extensive   terse</i>—(Optional) Display the specified level of output.</p> <p><i>descriptions</i>—(Optional) Display interface description strings.</p> <p><i>media</i>—(Optional) Display media-specific information about network interfaces.</p> <p><i>snmp-index snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><i>statistics</i>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces (Fast Ethernet) on page 187</a> <a href="#">show interfaces brief (Fast Ethernet) on page 187</a> <a href="#">show interfaces detail (Fast Ethernet) on page 187</a> <a href="#">show interfaces extensive (Fast Ethernet) on page 188</a>
<b>Output Fields</b>	Table 11 on page 173 lists the output fields for the <b>show interfaces Fast Ethernet</b> command. Output fields are listed in the approximate order in which they appear.

Table 11: show interfaces Fast Ethernet Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under Common Output Fields Description.	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>

Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	Maximum transmission unit size on the physical interface.	All levels
<b>Link-mode</b>	Type of link connection configured for the physical interface: <b>Full-duplex</b> or <b>Half-duplex</b>	<b>extensive</b>
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .	All levels
<b>Source filtering</b>	Source filtering status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>LAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
<b>WAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
<b>Unidirectional</b>	Unidirectional link mode status for 10-Gigabit Ethernet interface: <b>Enabled</b> or <b>Disabled</b> for parent interface; <b>Rx-only</b> or <b>Tx-only</b> for child interfaces.	All levels
<b>Flow control</b>	Flow control status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Autonegotiation status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the "Device Flags" section under Common Output Fields Description.	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the "Interface Flags" section under Common Output Fields Description.	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the "Links Flags" section under Common Output Fields Description.	All levels
<b>Wavelength</b>	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels



Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Frequency</b>	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive</b> none
<b>Schedulers</b>	(GigabitEthernet intelligent queuing 2 (IQ2) interfaces only) Number of CoS schedulers configured.	<b>extensive</b>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Current address</b>	Configured MAC address.	<b>detail extensive</b> none
<b>Hardware address</b>	Hardware MAC address.	<b>detail extensive</b> none
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive</b> none
<b>Input Rate</b>	Input rate in bits per second (bps) and packets per second (pps).	None specified
<b>Output Rate</b>	Output rate in bps and pps.	None specified
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> <p>Gigabit Ethernet and 10-Gigabit Ethernet IQ PICs count the overhead and CRC bytes.</p> <p>For Gigabit Ethernet IQ PICs, the input byte counts vary by interface type. For more information, see Table 31 under the <a href="#">show interfaces (10-Gigabit Ethernet)</a> command.</p>	<b>detail extensive</b>

Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Collisions</b>—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Egress queues</b>	Total number of egress queues supported on the specified interface.	<b>detail extensive</b>
<b>Queue counters (Egress)</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Ingress queues</b>	Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.	<b>extensive</b>
<b>Queue counters (Ingress)</b>	<p>CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>extensive</b>

Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Active alarms and Active defects</b>	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value <b>None</b> or <b>Link</b>.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>	<b>detail extensive none</b>
<b>OTN FEC statistics</b>	<p>The forward error correction (FEC) counters provide the following statistics:</p> <ul style="list-style-type: none"> <li>• <b>Corrected Errors</b>—The count of corrected errors in the last second.</li> <li>• <b>Corrected Error Ratio</b>—The corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits.</li> </ul>	
<b>PCS statistics</b>	<p>(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device.</p> <ul style="list-style-type: none"> <li>• <b>Bit errors</b>—High bit error rate. Indicates the number of bit errors when the PCS receiver is operating in normal mode.</li> <li>• <b>Errored blocks</b>—Loss of block lock. The number of errored blocks when PCS receiver is operating in normal mode.</li> </ul>	<b>detail extensive</b>

Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> <li>• <b>Total octets</b> and <b>total packets</b>—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. For more information, see Table 31 under the <a href="#">show interfaces (10-Gigabit Ethernet)</a> command.</li> <li>• <b>Unicast packets</b>, <b>Broadcast packets</b>, and <b>Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—Number of frames that exceed 1518 octets.</li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>VLAN tagged frames</b>—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not.</li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul>	extensive
OTN Received Overhead Bytes	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	extensive
OTN Transmitted Overhead Bytes	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	extensive

Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Filter statistics</b>	<p><b>Receive</b> and <b>Transmit</b> statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> <li>• <b>Input packet count</b>—Number of packets received from the MAC hardware that the filter processed.</li> <li>• <b>Input packet rejects</b>—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address.</li> <li>• <b>Input DA rejects</b>—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the router from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local router (which the router is rejecting).</li> <li>• <b>Input SA rejects</b>—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect.</li> <li>• <b>Output packet count</b>—Number of packets that the filter has given to the MAC hardware.</li> <li>• <b>Output packet pad count</b>—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured.</li> <li>• <b>Output packet error count</b>—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment.</li> <li>• <b>CAM destination filters, CAM source filters</b>—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0.</li> </ul>	<b>extensive</b>
<b>PMA PHY</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PHY Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>	<b>extensive</b>

Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>WIS section</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B1</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOL</b>—Loss of light</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>	<b>extensive</b>
<b>WIS line</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>	<b>extensive</b>

Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>WIS path</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>	<b>extensive</b>



Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> <li>• <b>Negotiation status:</b> <ul style="list-style-type: none"> <li>• <b>Incomplete</b>—Ethernet interface has the speed or link mode configured.</li> <li>• <b>No autonegotiation</b>—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation.</li> <li>• <b>Complete</b>—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> </ul> </li> <li>• <b>Link partner status</b>—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> <li>• <b>Link partner:</b> <ul style="list-style-type: none"> <li>• <b>Link mode</b>—Depending on the capability of the attached Ethernet device, either <b>Full-duplex</b> or <b>Half-duplex</b>.</li> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is <b>None</b>. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), and <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive).</li> <li>• <b>Remote fault</b>—Remote fault information from the link partner—<b>Failure</b> indicates a receive link error. <b>OK</b> indicates that the link partner is receiving. <b>Negotiation error</b> indicates a negotiation error. <b>Offline</b> indicates that the link partner is going offline.</li> </ul> </li> <li>• <b>Local resolution</b>—Information from the link partner: <ul style="list-style-type: none"> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), and <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive).</li> <li>• <b>Remote fault</b>—Remote fault information. <b>Link OK</b> (no error detected on receive), <b>Offline</b> (local interface is offline), and <b>Link Failure</b> (link error detected on receive).</li> </ul> </li> </ul>	extensive
Received path trace, Transmitted path trace	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> </ul>	extensive

Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>CoS information</b>	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive</b> none
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under Common Output Fields Description.	All levels
<b>VLAN-Tag</b>	Rewrite profile applied to incoming or outgoing frames on the outer ( <b>Out</b> ) VLAN tag or for both the outer and inner ( <b>In</b> ) VLAN tags. <ul style="list-style-type: none"> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>pop</b>—The outer VLAN tag of the incoming frame is removed.</li> <li>• <b>swap</b>—The outer VLAN tag of the incoming frame is overwritten with the user specified VLAN tag information.</li> <li>• <b>push-pop</b>—An outer VLAN tag is pushed in front of the existing VLAN tag, and then removed.</li> <li>• <b>push-push</b>—Two VLAN tags are pushed in from the incoming frame.</li> <li>• <b>swap-push</b>—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame.</li> <li>• <b>swap-swap</b>—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user specified VLAN tag value.</li> <li>• <b>pop-swap</b>—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame.</li> <li>• <b>pop-pop</b>—Both the outer and inner VLAN tags of the incoming frame are removed.</li> </ul>	<b>brief detail extensive</b> none

Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Demux:</b>	IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following: <ul style="list-style-type: none"> <li>Source Family Inet</li> <li>Destination Family Inet</li> </ul>	<b>detail extensive none</b>
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Protocol</b>	Protocol family. Possible values are described in the “Protocol Field” section under Common Output Fields Description.	<b>detail extensive none</b>
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail extensive none</b>
<b>Maximum labels</b>	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	<b>detail extensive none</b>
<b>Traffic statistics</b>	Number and rate of bytes and packets received and transmitted on the specified interface set. <ul style="list-style-type: none"> <li><b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set</li> <li><b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> </ul>	<b>detail extensive</b>
<b>IPv6 transit statistics</b>	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	<b>extensive</b>
<b>Local statistics</b>	Number and rate of bytes and packets destined to the router.	<b>extensive</b>
<b>Transit statistics</b>	Number and rate of bytes and packets transiting the switch. <p><b>NOTE:</b> For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the <b>Output bytes</b> and <b>Output packets</b> interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.</p>	<b>extensive</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	<b>detail extensive none</b>
<b>Flags</b>	Information about protocol family flags. Possible values are described in the “Family Flags” section under Common Output Fields Description.	<b>detail extensive</b>
<b>Donor interface</b>	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	<b>detail extensive none</b>

Table 11: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Preferred source address</b>	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	<b>detail extensive none</b>
<b>Input Filters</b>	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	<b>detail extensive</b>
<b>Output Filters</b>	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	<b>detail extensive</b>
<b>Mac-Validate Failures</b>	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	<b>detail extensive none</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under Common Output Fields Description.	<b>detail extensive none</b>
<b><i>protocol-family</i></b>	Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.	<b>brief</b>
<b>Flags</b>	Information about address flag (possible values are described in the “Addresses Flags” section under Common Output Fields Description.	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address of the logical interlace.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

## Sample Output

### show interfaces (Fast Ethernet)

```
user@host> show interfaces fe-0/0/0
Physical interface: fe-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 22
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Current address: 00:05:85:02:38:00, Hardware address: 00:05:85:02:38:00
  Last flapped   : 2006-01-20 14:50:58 PST (2w4d 00:44 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  Active alarms  : None
  Active defects : None
  Logical interface fe-0/0/0.0 (Index 66) (SNMP ifIndex 198)
    Flags: SNMP-Traps Encapsulation: ENET2
    Protocol inet, MTU: 1500
      Flags: None
      Addresses, Flags: Is-Preferred Is-Primary
        Destination: 10.10.10/24, Local: 10.10.10.1, Broadcast: 10.10.10.255
```

### show interfaces brief (Fast Ethernet)

```
user@host> show interfaces fe-0/0/0 brief
Physical interface: fe-0/0/0, Enabled, Physical link is Up
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Logical interface fe-0/0/0.0
    Flags: SNMP-Traps Encapsulation: ENET2
    inet 10.10.10.1/24
```

### show interfaces detail (Fast Ethernet)

```
user@host> show interfaces fe-0/0/0 detail
Physical interface: fe-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 22, Generation: 5391
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:05:85:02:38:00, Hardware address: 00:05:85:02:38:00
  Last flapped   : 2006-01-20 14:50:58 PST (2w4d 00:45 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0 0 bps
    Output bytes  : 42 0 bps
    Input packets : 0 0 pps
    Output packets: 1 0 pps
  Active alarms  : None
  Active defects : None
  Logical interface fe-0/0/0.0 (Index 66) (SNMP ifIndex 198) (Generation 67)
    Flags: SNMP-Traps Encapsulation: ENET2
    Protocol inet, MTU: 1500, Generation: 105, Route table: 0
      Flags: Is-Primary, Mac-Validate-Strict
      Mac-Validate Failures: Packets: 0, Bytes: 0
      Addresses, Flags: Is-Preferred Is-Primary
```

Destination: 10.10.10/24, Local: 10.10.10.1, Broadcast: 10.10.10.255,  
Generation: 136

**show interfaces  
extensive  
(Fast Ethernet)**

```

user@host> show interfaces fe-0/0/0 extensive
Physical interface: fe-0/0/0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 22, Generation: 5391
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed:
100mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
CoS queues     : 4 supported, 4 maximum usable queues
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:05:85:02:38:00, Hardware address: 00:05:85:02:38:00
Last flapped   : 2006-01-20 14:50:58 PST (2w4d 00:46 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          0          0 bps
Output bytes  :         42          0 bps
Input packets :          0          0 pps
Output packets:          1          0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Active alarms : None
Active defects : None
MAC statistics:
Total octets      Receive      Transmit
Total packets     0             1
Unicast packets   0             0
Broadcast packets 0             1
Multicast packets 0             0
CRC/Align errors  0             0
FIFO errors       0             0
MAC control frames 0             0
MAC pause frames  0             0
Oversized frames  0
Jabber frames     0
Fragment frames   0
VLAN tagged frames 0
Code violations    0
Filter statistics:
Input packet count      0
Input packet rejects    0
Input DA rejects        0
Input SA rejects        0
Output packet count     1
Output packet pad count 0
Output packet error count 0
CAM destination filters: 1, CAM source filters: 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
Link partner: Full-duplex, Flow control: None, Remote fault: Ok
Local resolution:
Packet Forwarding Engine configuration:

```

```
Destination slot: 0
CoS information:
      Bandwidth      Buffer Priority  Limit
              %      bps    %      usec
0 best-effort      95    950000000  95      0    low  none
3 network-control   5     50000000   5      0    low  none
Logical interface fe-0/0/0.0 (Index 66) (SNMP ifIndex 198) (Generation 67)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 105, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 10.10.10/24, Local: 10.10.10.1, Broadcast: 10.10.10.255,
  Generation: 136
```

## show interfaces (10-Gigabit Ethernet)

---

<b>Syntax</b>	<code>show interfaces <i>xe-fpc/pic/port</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;descriptions&gt;</code> <code>&lt;media&gt;</code> <code>&lt;snmp-index <i>snmp-index</i>&gt;</code> <code>&lt;statistics&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 8.0.
<b>Description</b>	(M320, M120, MX Series, and T Series routers only) Display status information about the specified 10-Gigabit Ethernet interface.
<b>Options</b>	<p><code><i>xe-fpc/pic/port</i></code>—Display standard information about the specified 10-Gigabit Ethernet interface.</p> <p><code>brief   detail   extensive   terse</code>—(Optional) Display the specified level of output.</p> <p><code>descriptions</code>—(Optional) Display interface description strings.</p> <p><code>media</code>—(Optional) Display media-specific information about network interfaces.</p> <p><code>snmp-index <i>snmp-index</i></code>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><code>statistics</code>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<p><a href="#">show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, IQ2) on page 205</a></p> <p><a href="#">show interfaces extensive (10-Gigabit Ethernet, WAN PHY Mode) on page 208</a></p> <p><a href="#">show interfaces extensive (10-Gigabit Ethernet, DWDM OTN PIC) on page 210</a></p> <p><a href="#">show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode) on page 213</a></p> <p><a href="#">show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Transmit-Only) on page 213</a></p> <p><a href="#">show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Receive-Only) on page 214</a></p>
<b>Output Fields</b>	See <a href="#">Table 12 on page 191</a> for the output fields for the <b>show interfaces</b> (10-Gigabit Ethernet) command.



Table 12: show interfaces Gigabit Ethernet Output Fields

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under Common Output Fields Description.	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	Maximum transmission unit size on the physical interface.	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .	All levels
<b>Source filtering</b>	Source filtering status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>LAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
<b>WAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
<b>Unidirectional</b>	Unidirectional link mode status for 10-Gigabit Ethernet interface: <b>Enabled</b> or <b>Disabled</b> for parent interface; <b>Rx-only</b> or <b>Tx-only</b> for child interfaces.	All levels
<b>Flow control</b>	Flow control status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Autonegotiation status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under Common Output Fields Description.	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under Common Output Fields Description.	All levels

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Link flags</b>	Information about the link. Possible values are described in the “Links Flags” section under Common Output Fields Description.	All levels
<b>Wavelength</b>	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels
<b>Frequency</b>	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
<b>CoS queues</b>	Number of CoS queues configured.	detail extensive none
<b>Schedulers</b>	(Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces only) Number of CoS schedulers configured.	extensive
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
<b>Current address</b>	Configured MAC address.	detail extensive none
<b>Hardware address</b>	Hardware MAC address.	detail extensive none
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	detail extensive none
<b>Input Rate</b>	Input rate in bits per second (bps) and packets per second (pps).	None specified
<b>Output Rate</b>	Output rate in bps and pps.	None specified
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	detail extensive
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> <p>Gigabit Ethernet and 10-Gigabit Ethernet IQ PICs count the overhead and CRC bytes.</p> <p>For Gigabit Ethernet IQ PICs, the input byte counts vary by interface type. For more information, see <a href="#">Table 12 on page 191</a>.</p>	detail extensive

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Collisions</b>—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Egress queues</b>	Total number of egress queues supported on the specified interface.	<b>detail extensive</b>
<b>Queue counters (Egress)</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Ingress queues</b>	Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.	<b>extensive</b>
<b>Queue counters (Ingress)</b>	<p>CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>extensive</b>

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Active alarms and Active defects</b>	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value <b>None</b> or <b>Link</b>.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>	<b>detail extensive none</b>
<b>OTN alarms</b>	Active OTN alarms identified on the interface.	<b>detail extensive</b>
<b>OTN defects</b>	OTN defects received on the interface.	<b>detail extensive</b>
<b>OTN FEC Mode</b>	<p>The FECmode configured on the interface.</p> <ul style="list-style-type: none"> <li>• <b>efec</b>—Enhanced forward error correction (EFEC) is configured to detect and correct bit errors.</li> <li>• <b>gfec</b>—G.709 Forward error correction (GFEC) mode is configured to detect and correct bit errors.</li> <li>• <b>none</b>—FEC mode is not configured.</li> </ul>	<b>detail extensive</b>
<b>OTN Rate</b>	<p>OTN mode.</p> <ul style="list-style-type: none"> <li>• <b>fixed-stuff-bytes</b>—Fixed stuff bytes 11.0957 Gbps.</li> <li>• <b>no-fixed-stuff-bytes</b>—No fixed stuff bytes 11.0491 Gbps.</li> <li>• <b>pass-through</b>—Enable OTN passthrough mode.</li> <li>• <b>no-pass-through</b>—Do not enable OTN passthrough mode.</li> </ul>	<b>detail extensive</b>
<b>OTN Line Loopback</b>	Status of the line loopback, if configured for the DWDM OTN PIC. Its value can be: <b>enabled</b> or <b>disabled</b> .	<b>detail extensive</b>
<b>OTN FEC statistics</b>	<p>The forward error correction (FEC) counters for the DWDM OTN PIC.</p> <ul style="list-style-type: none"> <li>• <b>Corrected Errors</b>—The count of corrected errors in the last second.</li> <li>• <b>Corrected Error Ratio</b>—The corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits.</li> </ul>	<b>detail extensive</b>
<b>OTN FEC alarms</b>	<p>OTN FEC excessive or degraded error alarms triggered on the interface.</p> <ul style="list-style-type: none"> <li>• <b>FEC Degrade</b>—OTU FEC Degrade defect.</li> <li>• <b>FEC Excessive</b>—OTU FEC Excessive Error defect.</li> </ul>	<b>detail extensive</b>
<b>OTN OC</b>	<p>OTN OC defects triggered on the interface.</p> <ul style="list-style-type: none"> <li>• <b>LOS</b>—OC Loss of Signal defect.</li> <li>• <b>LOF</b>—OC Loss of Frame defect.</li> <li>• <b>LOM</b>—OC Loss of Multiframe defect.</li> <li>• <b>Wavelength Lock</b>—OC Wavelength Lock defect.</li> </ul>	<b>detail extensive</b>

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>OTN OTU</b>	<p>OTN OTU defects detected on the interface</p> <ul style="list-style-type: none"> <li>• <b>AIS</b>—OTN AIS alarm.</li> <li>• <b>BDI</b>—OTN OTU BDI alarm.</li> <li>• <b>IAE</b>—OTN OTU IAE alarm.</li> <li>• <b>TTIM</b>—OTN OTU TTIM alarm.</li> <li>• <b>SF</b>—OTN ODU bit error rate fault alarm.</li> <li>• <b>SD</b>—OTN ODU bit error rate defect alarm.</li> <li>• <b>TCA-ES</b>—OTN ODU ES threshold alarm.</li> <li>• <b>TCA-SES</b>—OTN ODU SES threshold alarm.</li> <li>• <b>TCA-UAS</b>—OTN ODU UAS threshold alarm.</li> <li>• <b>TCA-BBE</b>—OTN ODU BBE threshold alarm.</li> <li>• <b>BIP</b>—OTN ODU BIP threshold alarm.</li> <li>• <b>BBE</b>—OTN OTU BBE threshold alarm.</li> <li>• <b>ES</b>—OTN OTU ES threshold alarm.</li> <li>• <b>SES</b>—OTN OTU SES threshold alarm.</li> <li>• <b>UAS</b>—OTN OTU UAS threshold alarm.</li> </ul>	<b>detail extensive</b>
<b>Received DAPI</b>	Destination Access Port Interface (DAPI) from which the packets were received.	<b>detail extensive</b>
<b>Received SAPI</b>	Source Access Port Interface (SAPI) from which the packets were received.	<b>detail extensive</b>
<b>Transmitted DAPI</b>	Destination Access Port Interface (DAPI) to which the packets were transmitted.	<b>detail extensive</b>
<b>Transmitted SAPI</b>	Source Access Port Interface (SAPI) to which the packets were transmitted.	<b>detail extensive</b>
<b>PCS statistics</b>	<p>(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device.</p> <ul style="list-style-type: none"> <li>• <b>Bit errors</b>—High bit error rate. Indicates the number of bit errors when the PCS receiver is operating in normal mode.</li> <li>• <b>Errored blocks</b>—Loss of block lock. The number of errored blocks when PCS receiver is operating in normal mode.</li> </ul>	<b>detail extensive</b>

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>MAC statistics</b>	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> <li>• <b>Total octets</b> and <b>total packets</b>—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. For more information, see <a href="#">Table 13 on page 205</a></li> <li>• <b>Unicast packets</b>, <b>Broadcast packets</b>, and <b>Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—Number of frames that exceed 1518 octets.</li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>VLAN tagged frames</b>—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not.</li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul>	<b>extensive</b>
<b>OTN Received Overhead Bytes</b>	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	<b>extensive</b>
<b>OTN Transmitted Overhead Bytes</b>	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	<b>extensive</b>

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Filter statistics</b>	<p><b>Receive</b> and <b>Transmit</b> statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> <li>• <b>Input packet count</b>—Number of packets received from the MAC hardware that the filter processed.</li> <li>• <b>Input packet rejects</b>—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address.</li> <li>• <b>Input DA rejects</b>—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the router from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local router (which the router is rejecting).</li> <li>• <b>Input SA rejects</b>—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect.</li> <li>• <b>Output packet count</b>—Number of packets that the filter has given to the MAC hardware.</li> <li>• <b>Output packet pad count</b>—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured.</li> <li>• <b>Output packet error count</b>—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment.</li> <li>• <b>CAM destination filters, CAM source filters</b>—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0.</li> </ul>	<b>extensive</b>
<b>PMA PHY</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PHY Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>	<b>extensive</b>



Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>WIS section</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B1</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOL</b>—Loss of light</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>	<b>extensive</b>
<b>WIS line</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>	<b>extensive</b>

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>WIS path</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>	<b>extensive</b>

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> <li>• <b>Negotiation status:</b> <ul style="list-style-type: none"> <li>• <b>Incomplete</b>—Ethernet interface has the speed or link mode configured.</li> <li>• <b>No autonegotiation</b>—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation.</li> <li>• <b>Complete</b>—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> </ul> </li> <li>• <b>Link partner status</b>—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> <li>• <b>Link partner:</b> <ul style="list-style-type: none"> <li>• <b>Link mode</b>—Depending on the capability of the attached Ethernet device, either <b>Full-duplex</b> or <b>Half-duplex</b>.</li> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is <b>None</b>. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), and <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive).</li> <li>• <b>Remote fault</b>—Remote fault information from the link partner—<b>Failure</b> indicates a receive link error. <b>OK</b> indicates that the link partner is receiving. <b>Negotiation error</b> indicates a negotiation error. <b>Offline</b> indicates that the link partner is going offline.</li> </ul> </li> <li>• <b>Local resolution</b>—Information from the link partner: <ul style="list-style-type: none"> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), and <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive).</li> <li>• <b>Remote fault</b>—Remote fault information. <b>Link OK</b> (no error detected on receive), <b>Offline</b> (local interface is offline), and <b>Link Failure</b> (link error detected on receive).</li> </ul> </li> </ul>	extensive
Received path trace, Transmitted path trace	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> </ul>	extensive

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>CoS information</b>	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under Common Output Fields Description.	All levels

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>VLAN-Tag</b>	<p>Rewrite profile applied to incoming or outgoing frames on the outer (<b>Out</b>) VLAN tag or for both the outer and inner (<b>In</b>) VLAN tags.</p> <ul style="list-style-type: none"> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>pop</b>—The outer VLAN tag of the incoming frame is removed.</li> <li>• <b>swap</b>—The outer VLAN tag of the incoming frame is overwritten with the user specified VLAN tag information.</li> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>push-push</b>—Two VLAN tags are pushed in from the incoming frame.</li> <li>• <b>swap-push</b>—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame.</li> <li>• <b>swap-swap</b>—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user specified VLAN tag value.</li> <li>• <b>pop-swap</b>—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame.</li> <li>• <b>pop-pop</b>—Both the outer and inner VLAN tags of the incoming frame are removed.</li> </ul>	<b>brief detail extensive none</b>
<b>Demux:</b>	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> <li>• Source Family Inet</li> <li>• Destination Family Inet</li> </ul>	<b>detail extensive none</b>
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Protocol</b>	Protocol family. Possible values are described in the “Protocol Field” section under Common Output Fields Description.	<b>detail extensive none</b>
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail extensive none</b>
<b>Maximum labels</b>	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	<b>detail extensive none</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> </ul>	<b>detail extensive</b>
<b>IPv6 transit statistics</b>	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	<b>extensive</b>
<b>Local statistics</b>	Number and rate of bytes and packets destined to the router.	<b>extensive</b>

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Transit statistics</b>	Number and rate of bytes and packets transiting the switch.  <b>NOTE:</b> For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the <b>Output bytes</b> and <b>Output packets</b> interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	<b>extensive</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Route table in which the logical interface address is located. For example, <b>0</b> refers to the routing table inet.0.	<b>detail extensive none</b>
<b>Flags</b>	Information about protocol family flags. Possible values are described in the “Family Flags” section under Common Output Fields Description.	<b>detail extensive</b>
<b>Donor interface</b>	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	<b>detail extensive none</b>
<b>Preferred source address</b>	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	<b>detail extensive none</b>
<b>Input Filters</b>	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	<b>detail extensive</b>
<b>Output Filters</b>	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	<b>detail extensive</b>
<b>Mac-Validate Failures</b>	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	<b>detail extensive none</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under Common Output Fields Description.	<b>detail extensive none</b>
<b><i>protocol-family</i></b>	Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.	<b>brief</b>
<b>Flags</b>	Information about address flag (possible values are described in the “Addresses Flags” section under Common Output Fields Description.	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address of the logical interlace.	<b>detail extensive none</b>

Table 12: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

For Gigabit Ethernet IQ PICs, traffic and MAC statistics output varies. [Table 13 on page 205](#) describes the traffic and MAC statistics for two sample interfaces, each of which is sending traffic in packets of 500 bytes (including 478 bytes for the Layer 3 packet, 18 bytes for the Layer 2 VLAN traffic header, and 4 bytes for cyclic redundancy check [CRC] information). In [Table 13 on page 205](#), the **ge-0/3/0** interface is the inbound physical interface, and the **ge-0/0/0** interface is the outbound physical interface. On both interfaces, traffic is carried on logical unit .50 (VLAN 50).

Table 13: Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type

Interface Type	Sample Command	Byte and Octet Counts Include	Comments
Inbound physical interface	<b>show interfaces ge-0/3/0 extensive</b>	Traffic statistics:  Input bytes: 496 bytes per packet, representing the Layer 2 packet  MAC statistics:  Received octets: 500 bytes per packet, representing the Layer 2 packet + 4 bytes	The additional 4 bytes are for the CRC.
Inbound logical interface	<b>show interfaces ge-0/3/0.50 extensive</b>	Traffic statistics:  Input bytes: 478 bytes per packet, representing the Layer 3 packet	
Outbound physical interface	<b>show interfaces ge-0/0/0 extensive</b>	Traffic statistics:  Input bytes: 490 bytes per packet, representing the Layer 3 packet + 12 bytes  MAC statistics:  Received octets: 478 bytes per packet, representing the Layer 3 packet	For input bytes, the additional 12 bytes includes 6 bytes for the destination MAC address + 4 bytes for VLAN + 2 bytes for the Ethernet type.
Outbound logical interface	<b>show interfaces ge-0/0/0.50 extensive</b>	Traffic statistics:  Input bytes: 478 bytes per packet, representing the Layer 3 packet	

## Sample Output

**show interfaces extensive**

```
user@host> show interfaces xe-5/0/0 extensive
Physical interface: xe-5/0/0, Enabled, Physical link is Up
Interface index: 177, SNMP ifIndex: 99, Generation: 178
```

**(10-Gigabit Ethernet,  
LAN PHY Mode, IQ2)**

```

Link-level type: Ethernet, MTU: 1518, LAN-PHY mode, Speed: 10Gbps, Loopback:
None, Source filtering: Enabled,
Flow control: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues    : 8 supported, 4 maximum usable queues
Schedulers    : 1024
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:14:f6:b9:f1:f6, Hardware address: 00:14:f6:b9:f1:f6
Last flapped   : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          6970332384          0 bps
Output bytes  :              0          0 bps
Input packets :          81050506          0 pps
Output packets:              0          0 pps
IPv6 transit statistics:
Input bytes   :              0
Output bytes  :              0
Input packets :              0
Output packets:              0
Ingress traffic statistics at Packet Forwarding Engine:
Input bytes   :          6970299398          0 bps
Input packets :          81049992          0 pps
Drop bytes    :              0          0 bps
Drop packets  :              0          0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0,
MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort          81049992          81049992          0

    1 expedited-fo              0              0          0

    2 assured-forw              0              0          0

    3 network-cont              0              0          0

Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort              0              0          0

    1 expedited-fo              0              0          0

    2 assured-forw              0              0          0

    3 network-cont              0              0          0

Active alarms : None
Active defects : None
PCS statistics
  Bit errors           Seconds
                        0

```



```

    Errored blocks                                0
MAC statistics:
    Receive
    Transmit
    Total octets                                6970332384
    Total packets                               81050506
    Unicast packets                             81050000
    Broadcast packets                           506
    Multicast packets                           0
    CRC/Align errors                           0
    FIFO errors                                0
    MAC control frames                         0
    MAC pause frames                          0
    Oversized frames                          0
    Jabber frames                             0
    Fragment frames                           0
    VLAN tagged frames                        0
    Code violations                           0
Filter statistics:
    Input packet count                         81050506
    Input packet rejects                       506
    Input DA rejects                          0
    Input SA rejects                          0
    Output packet count                       0
    Output packet pad count                   0
    Output packet error count                 0
    CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
    Destination slot: 5
CoS information:
    Direction : Output
    CoS transmit queue      Bandwidth      Buffer Priority Limit
                             %      bps      %      usec
    0 best-effort           95      950000000  95      0      low      none
    3 network-control       5       50000000   5       0      low      none

    Direction : Input
    CoS transmit queue      Bandwidth      Buffer Priority Limit
                             %      bps      %      usec
    0 best-effort           95      950000000  95      0      low      none
    3 network-control       5       50000000   5       0      low      none

Logical interface xe-5/0/0.0 (Index 71) (SNMP ifIndex 95) (Generation 195)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ] Encapsulation: ENET2
Traffic statistics:
    Input bytes : 0
    Output bytes : 46
    Input packets: 0
    Output packets: 1
IPv6 transit statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
Local statistics:
    Input bytes : 0
    Output bytes : 46
    Input packets: 0
    Output packets: 1
Transit statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
    Input bytes : 0 bps
    Output bytes : 0 bps
    Input packets: 0 pps
    Output packets: 0 pps

```

```

Output packets:                0                0 pps
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :                0
  Input packets:               0
  Output packets:              0
Protocol inet, MTU: 1500, Generation: 253, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.1.1/24, Local: 192.1.1.1, Broadcast: 192.1.1.255,
Generation: 265
  Protocol multiservice, MTU: Unlimited, Generation: 254, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

### show interfaces extensive

```

user@host> show interfaces xe-1/0/0 extensive
Physical interface: xe-1/0/0, Enabled, Physical link is Up
  Interface index: 141, SNMP ifIndex: 34, Generation: 47

```

(10-Gigabit Ethernet,  
WAN PHY Mode)

```

Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, Loopback: Disabled
WAN-PHY mode
Source filtering: Disabled, Flow control: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps 16384
Link flags     : None
CoS queues    : 4 supported
Hold-times    : Up 0 ms, Down 0 ms
Current address: 00:05:85:a2:10:9d, Hardware address: 00:05:85:a2:10:9d
Last flapped   : 2005-07-07 11:22:34 PDT (3d 12:28 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :                0                0 bps
Output bytes :                0                0 bps
Input packets:                0                0 pps
Output packets:                0                0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  HS Link CRC errors: 0, HS Link FIFO overflows: 0,
  Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0,
  Aged packets: 0, FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0,
  Resource errors: 0
Queue counters:      Queued packets  Transmitted packets      Dropped packets
0 best-effort        0                0                0
1 expedited-fo       0                0                0
2 assured-forw       0                0                0
3 network-cont       0                0                0
Active alarms : LOL, LOS, LBL
Active defects: LOL, LOS, LBL, SEF, AIS-L, AIS-P
PCS statistics      Seconds      Count
Bit errors          0            0
Errored blocks      0            0
MAC statistics:
Receive      Transmit
Total octets  0            0
Total packets 0            0
Unicast packets 0          0
Broadcast packets 0         0
Multicast packets 0         0
CRC/Align errors 0            0
FIFO errors      0            0
MAC control frames 0          0
MAC pause frames  0            0
Oversized frames  0            0
Jabber frames     0            0
Fragment frames   0            0
VLAN tagged frames 0            0
Code violations    0            0
Filter statistics:
Input packet count      0
Input packet rejects    0
Input DA rejects        0
Input SA rejects        0
Output packet count      0
Output packet pad count  0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
PMA PHY:      Seconds      Count State
PLL lock      0            0 OK

```

```

PHY light          63159          1 Light Missing
WIS section:
  BIP-B1           0              0
  SEF              434430         434438 Defect Active
  LOS              434430         1 Defect Active
  LOF              434430         1 Defect Active
  ES-S             434430
  SES-S            434430
  SEFS-S           434430
WIS line:
  BIP-B2           0              0
  REI-L            0              0
  RDI-L            0              0 OK
  AIS-L            434430         1 Defect Active
  BERR-SF          0              0 OK
  BERR-SD          0              0 OK
  ES-L             434430
  SES-L            434430
  UAS-L            434420
  ES-LFE           0
  SES-LFE           0
  UAS-LFE           0
WIS path:
  BIP-B3           0              0
  REI-P            0              0
  LOP-P            0              0 OK
  AIS-P            434430         1 Defect Active
  RDI-P            0              0 OK
  UNEQ-P           0              0 OK
  PLM-P            0              0 OK
  ES-P             434430
  SES-P            434430
  UAS-P            434420
  ES-PFE           0
  SES-PFE           0
  UAS-PFE           0
Received path trace:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted path trace: orissa so-1/0/0
6f 72 69 73 73 61 20 73 6f 2d 31 2f 30 2f 30 00   orissa so-1/0/0.
Packet Forwarding Engine configuration:
  Destination slot: 1
CoS information:
  CoS transmit queue    %    Bandwidth    %    Buffer    Priority    Limit
                        %    bps           %    bytes
  0 best-effort         95    950000000    95    0         low     none
  3 network-control     5     50000000    5     0         low     none

```

**show interfaces  
extensive**

```

user@host> show interfaces ge-7/0/0 extensive
Physical interface: ge-7/0/0, Enabled, Physical link is Down
Interface index: 143, SNMP ifIndex: 508, Generation: 208

```

(10-Gigabit Ethernet,  
DWDM OTN PIC)

```

Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled
Device flags   : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags     : None
Wavelength    : 1550.12 nm, Frequency: 193.40 THz
CoS queues    : 8 supported, 8 maximum usable queues
Hold-times    : Up 0 ms, Down 0 ms
Current address: 00:05:85:70:2b:72, Hardware address: 00:05:85:70:2b:72
Last flapped  : 2011-04-20 15:48:54 PDT (18:39:49 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   :                0                0 bps
Output bytes  :                0                0 bps
Input packets :                0                0 pps
Output packets:                0                0 pps
IPv6 transit statistics:
Input bytes   :                0
Output bytes  :                0
Input packets :                0
Output packets:                0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 2, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort                0                0                0

1 expedited-fo                0                0                0

2 assured-forw                0                0                0

3 network-cont
Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control
Active alarms  : LINK
Active defects : LINK
MAC statistics:      Receive          Transmit
Total octets        0                0
Total packets       0                0
Unicast packets     0                0
Broadcast packets   0                0
Multicast packets   0                0
CRC/Align errors    0                0
FIFO errors         0                0
MAC control frames  0                0
MAC pause frames    0                0
Oversized frames    0
Jabber frames       0
Fragment frames     0
VLAN tagged frames  0
Code violations      0

```

```

Total octets                                0                0
Total packets                              0                0
Unicast packets                            0                0
Broadcast packets                          0                0
Multicast packets                         0                0
CRC/Align errors                          0                0
FIFO errors                               0                0
MAC control frames                        0                0
MAC pause frames                          0                0
Oversized frames                          0
Jabber frames                             0
Fragment frames                           0
VLAN tagged frames                        0
Code violations                            0
OTN alarms                                :   None
OTN defects                               :   None
OTN FEC Mode                             : GFEC
OTN Rate                                 : Fixed Stuff Bytes 11.0957Gbps
OTN Line Loopback : Enabled
OTN FEC statistics :
    Corrected Errors                                0
    Corrected Error Ratio (          0 sec average) 0e-0
OTN FEC alarms:      Seconds      Count  State
    FEC Degrade              0          0  OK
    FEC Excessive            0          0  OK
OTN OC:              Seconds      Count  State
    LOS                      2          1  OK
    LOF                     67164        2  Defect Active
    LOM                     67164       71  Defect Active
    Wavelength Lock          0          0  OK
OTN OTU:
    AIS                      0          0  OK
    BDI                     65919      4814  Defect Active
    IAE                     67158        1  Defect Active
    TTIM                     7          1  OK
    SF                      67164        2  Defect Active
    SD                      67164        3  Defect Active
    TCA-ES                   0          0  OK
    TCA-SES                  0          0  OK
    TCA-UAS                  80         40  OK
    TCA-BBE                  0          0  OK
    BIP                      0          0  OK
    BBE                      0          0  OK
    ES                       0          0  OK
    SES                      0          0  OK
    UAS                     587          0  OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
    APS/PCC0: 0x02, APS/PCC1: 0x42, APS/PCC2: 0xa2, APS/PCC3: 0x48
    Payload Type: 0x03
OTN Transmitted Overhead Bytes:
    APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
    Payload Type: 0x03
Filter statistics:

```

```

Input packet count          0
Input packet rejects        0
Input DA rejects            0
Input SA rejects            0
Output packet count         0
Output packet pad count     0
Output packet error count   0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 7
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
    0 best-effort         95      9500000000    95      0      low
none
    3 network-control     5       500000000    5       0      low
none
...

```

**show interfaces  
extensive (10-Gigabit  
Ethernet, LAN PHY  
Mode, Unidirectional  
Mode)**

```

user@host> show interfaces xe-7/0/0 extensive
Physical interface: xe-7/0/0, Enabled, Physical link is Up
Interface index: 173, SNMP ifIndex: 212, Generation: 174
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
Unidirectional: Enabled,
Loopback: None, Source filtering: Disabled, Flow control: Enabled
Device flags   : Present Running
...

```

**show interfaces  
extensive (10-Gigabit  
Ethernet, LAN PHY**

```

user@host> show interfaces xe-7/0/0-tx extensive
Physical interface: xe-7/0/0-tx, Enabled, Physical link is Up
Interface index: 176, SNMP ifIndex: 137, Generation: 177
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,

```

### Mode, Unidirectional Mode, Transmit-Only

```

Unidirectional: Tx-Only
Device flags      : Present Running
Interface flags:  SNMP-Traps Internal: 0x4000
Link flags       : None
CoS queues       : 8 supported, 8 maximum usable queues
Hold-times      : Up 0 ms, Down 0 ms
Current address:  00:05:85:73:e4:83, Hardware address: 00:05:85:73:e4:83
Last flapped    : 2007-06-01 09:08:19 PDT (3d 02:31 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes      : 0                                0 bps
Output bytes     : 322891152287160                  9627472888 bps
Input packets    : 0                                0 pps
Output packets   : 328809727380                      1225492 pps

...

Filter statistics:
Output packet count      328810554250
Output packet pad count  0
Output packet error count 0
...

Logical interface xe-7/0/0-tx.0 (Index 73) (SNMP ifIndex 138) (Generation 139)

Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes      : 0
Output bytes     : 322891152287160
Input packets    : 0
Output packets   : 328809727380
IPv6 transit statistics:
Input bytes      : 0
Output bytes     : 0
Input packets    : 0
Output packets   : 0
Local statistics:
Input bytes      : 0
Output bytes     : 0
Input packets    : 0
Output packets   : 0
Transit statistics:
Input bytes      : 0                                0 bps
Output bytes     : 322891152287160                  9627472888 bps
Input packets    : 0                                0 pps
Output packets   : 328809727380                      1225492 pps
IPv6 transit statistics:
Input bytes      : 0
Output bytes     : 0
Input packets    : 0
Output packets   : 0
Protocol inet, MTU: 1500, Generation: 147, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.11.12/24, Local: 10.11.12.13, Broadcast: 10.11.12.255,
Generation: 141
Protocol multiservice, MTU: Unlimited, Generation: 148, Route table: 0
Flags: None
Policer: Input: __default_arp_policer__

```

### show interfaces

```

user@host> show interfaces xe-7/0/0-rx extensive
Physical interface: xe-7/0/0-rx, Enabled, Physical link is Up

```



extensive (10-Gigabit  
Ethernet, LAN PHY

Interface index: 174, SNMP ifIndex: 118, Generation: 175  
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,  
Unidirectional: Rx-Only

# Mode, Unidirectional Mode, Receive-Only)

```

Device flags      : Present Running
Interface flags:  SNMP-Traps Internal: 0x4000
Link flags       : None
CoS queues       : 8 supported, 8 maximum usable queues
Hold-times       : Up 0 ms, Down 0 ms
Current address:  00:05:85:73:e4:83, Hardware address: 00:05:85:73:e4:83
Last flapped    : 2007-06-01 09:08:22 PDT (3d 02:31 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :      322857456303482      9627496104 bps
  Output bytes :              0          0 bps
  Input packets:      328775413751      1225495 pps
  Output packets:              0          0 pps

```

...

```

Filter statistics:
  Input packet count      328775015056
  Input packet rejects    1
  Input DA rejects       0

```

...

Logical interface xe-7/0/0-rx.0 (Index 72) (SNMP ifIndex 120) (Generation 138)

```

Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
  Input bytes :      322857456303482
  Output bytes :              0
  Input packets:      328775413751
  Output packets:              0
IPv6 transit statistics:
  Input bytes :              0
  Output bytes :              0
  Input packets:              0
  Output packets:              0
Local statistics:
  Input bytes :              0
  Output bytes :              0
  Input packets:              0
  Output packets:              0
Transit statistics:
  Input bytes :      322857456303482      9627496104 bps
  Output bytes :              0          0 bps
  Input packets:      328775413751      1225495 pps
  Output packets:              0          0 pps
IPv6 transit statistics:
  Input bytes :              0
  Output bytes :              0
  Input packets:              0
  Output packets:              0
Protocol inet, MTU: 1500, Generation: 145, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.1.1/24, Local: 192.1.1.1, Broadcast: 192.1.1.255,
    Generation: 139
Protocol multiservice, MTU: Unlimited, Generation: 146, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

## show interfaces interface-set (Ethernet Interface Set)

<b>Syntax</b>	<code>show interfaces interface-set <i>interface-set-name</i></code> <code>&lt;detail   terse&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 8.5.
<b>Description</b>	<p>Display information about the specified gigabit or 10-Gigabit Ethernet interface set. Supported in MX Series routers with enhanced queuing DPCs or MPCs.</p> <p>You can also use the <b>show interfaces interface-set</b> command to display information about agent circuit identifier (ACI) interface sets configured on MX Series routers with MPCs/MICs.</p>
<b>Options</b>	<p><b>interface-set <i>interface-set-name</i></b>—Display information about the specified Gigabit Ethernet, 10-Gigabit Ethernet, or ACI interface set.</p> <p><b>detail   terse</b>—(Optional) Display the specified level of output.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration</li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show interfaces interface-set terse on page 219</a></p> <p><a href="#">show interfaces interface-set detail on page 219</a></p> <p><a href="#">show interfaces interface-set (ACI Interface Set) on page 219</a></p>
<b>Output Fields</b>	Table 14 on page 217 describes the information for the <b>show interfaces interface-set</b> command.

Table 14: Ethernet show interfaces interface-set Output Fields

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Interface set</b>	Name of the interface set or sets.	All levels
<b>Interface set index</b>	<p>Index number of the interface set. For ACI interface sets, the following fields are displayed:</p> <ul style="list-style-type: none"> <li><b>ACI VLAN</b>—ACI interface set that the router uses to create dynamic VLAN subscriber interfaces based on the agent circuit identifier value.</li> <li><b>PPPoE</b>—Dynamic PPPoE subscriber interface that the router creates using the ACI interface set.</li> </ul>	<b>detail none</b>
<b>Agent Circuit ID</b>	For ACI interface sets, string in DHCP or PPPoE control packets that uniquely identifies the subscriber's access node and the DSL line on the access node.	<b>detail none</b>
<b>Max Sessions</b>	For dynamic PPPoE subscriber interfaces, maximum number of PPPoE logical interfaces that that can be activated on the underlying interface.	<b>detail none</b>

Table 14: Ethernet show interfaces interface-set Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Max Sessions VSA Ignore</b>	For dynamic PPPoE subscriber interfaces, whether the router is configured to ignore (clear) the PPPoE maximum session value returned by RADIUS in the Max-Clients-Per-Interface Juniper Networks VSA [26-143] and restore the PPPoE maximum session value on the underlying interface to the value configured with the <b>max-sessions</b> statement: <b>Off</b> (default) or <b>On</b> .	<b>detail none</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes and number of bytes per second received and transmitted on the interface set</li> <li>• <b>Input packets, Output packets</b>—Number of packets and number of packets per second received and transmitted on the interface set.</li> </ul>	<b>detail</b>
<b>Egress queues supported</b>	Total number of egress queues supported on the specified interface set.	<b>detail</b>
<b>Egress queues in use</b>	Total number of egress queues used on the specified interface set.	<b>detail</b>
<b>Queue counters</b>	<b>Queued packets, Transmitted packets, and Dropped packets</b> statistics for the four forwarding classes.	<b>detail</b>
<b>Members</b>	List of all interface sets or, for ACI interface sets, list of all subscriber interfaces belonging to the specified ACI interface set.	<b>detail none</b>

## Sample Output

### show interfaces interface-set terse

```
user@host> show interfaces interface-set terse
Interface set:
  iflset-xe-11/3/0-0
  ge-1/0/1-0
  ge-1/0/1-2
```

### show interfaces interface-set detail

```
user@host> show interfaces interface-set iflset-xe-11/3/0-0 detail
Interface set: iflset-xe-11/3/0-0
Interface set index: 19
Traffic statistics:
  Output bytes :          751017840          401673504 bps
  Output packets:         11044380          738377 pps
Egress queues: 4 supported, 4 in use
Queue counters:
  Queued packets  Transmitted packets  Dropped packets
0 best-effort    211091327          11044380        199995746
1 expedited-fo           0              0                0
2 assured-forw           0              0                0
3 network-cont           0              0                0
Members:
  xe-11/3/0.0
```

### show interfaces interface-set (ACI Interface Set)

```
user@host> show interfaces interface-set
Interface set: aci-1001-demux0.1073741826
Interface set index: 1
ACI VLAN:
  Agent Circuit ID: aci-ppp-dhcp-dvlan-60
PPPoE:
  Max Sessions: 3, Max Sessions VSA Ignore: Off
Members:
  pp0.1073741827
```

## show interfaces interface-set queue

---

<b>Syntax</b>	<code>show interfaces interface-set queue <i>interface-set-name</i></code> <code>&lt;aggregate   remaining-traffic&gt;</code> <code>&lt;forwarding-class <i>class-name</i>&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 8.5.
<b>Description</b>	Display information about the gigabit or 10-Gigabit Ethernet interface set queue. Supported in MX Series routers with enhanced queuing DPCs.
<b>Options</b>	<p><b><i>interface-set-name</i></b>—(Optional) Display information about the specified gigabit or 10-Gigabit Ethernet interface set. Wildcard values can be used in the interface set name.</p> <p><b><i>aggregate</i></b>—(Optional) Display the aggregated queuing statistics of all member logical interfaces for interface sets that have traffic-control profiles configured.</p> <p><b><i>both-ingress-egress</i></b>—(Optional) On Gigabit Ethernet Intelligent Queuing 2 (IQ2) PICs, display both ingress and egress queue statistics.</p> <p><b><i>egress</i></b>—(Optional) Display egress queue statistics.</p> <p><b><i>forwarding-class class-name</i></b>—(Optional) Display queuing statistics for the specified forwarding class.</p> <p><b><i>ingress</i></b>—(Optional) On Gigabit Ethernet IQ2 PICs, display ingress queue statistics.</p> <p><b><i>remaining-traffic</i></b>—(Optional) Display the queuing statistics of all member logical interfaces for interface sets that do not have traffic-control profiles configured.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers</li></ul>
<b>List of Sample Output</b>	<p><a href="#">show interfaces interface-set queue (Gigabit Ethernet) on page 222</a></p> <p><a href="#">show interfaces interface-set queue both-ingress-egress (Enhanced DPC) on page 222</a></p> <p><a href="#">show interfaces interface-set queue egress (Enhanced DPC) on page 224</a></p> <p><a href="#">show interfaces interface-set queue forwarding-class (Gigabit Ethernet) on page 226</a></p> <p><a href="#">show interfaces interface-set queue (Enhanced DPC) on page 227</a></p> <p><a href="#">show interfaces interface-set queue remaining-traffic (Gigabit Ethernet) on page 228</a></p>
<b>Output Fields</b>	<a href="#">Table 15 on page 221</a> describes the information for the <b>show interfaces interface-set queue</b> command.

Table 15: Ethernet show interfaces interface-set queue Output Fields

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Interface set</b>	Name of the interface set.	All levels
<b>Interface set index</b>	Index number of the interface set.	All levels
<b>Forwarding classes supported</b>	Total number of forwarding classes supported on the specified interface set.	All levels
<b>Forwarding classes in use</b>	Total number of forwarding classes used on the specified interface set.	All levels
<b>Egress queues supported</b>	Total number of egress queues supported on the specified interface set.	All levels
<b>Egress queues in use</b>	Total number of egress queues used on the specified interface set.	All levels
<b>Ingress queues supported</b>	Total number of ingress queues supported on the specified interface set.	All levels
<b>Ingress queues in use</b>	Total number of ingress queues used on the specified interface set.	All levels
<b>Queue</b>	Egress or ingress queue number for the statistics being displayed.	All levels
<b>Forwarding classes</b>	Forwarding class name for the statistics being displayed.	All levels
<b>Queued</b>	<b>Packet</b> and <b>Byte</b> statistics for the specified queue. <ul style="list-style-type: none"> <li><b>Packets</b>—Number of packets queued and input rate in packets per second.</li> <li><b>Bytes</b>—Number of bytes queued and input rate in bytes per second.</li> </ul>	All levels
<b>Transmitted</b>	<b>Packet</b> and <b>Byte</b> statistics for the specified forwarding class. <ul style="list-style-type: none"> <li><b>Packets</b>—Number of packets transmitted and transmit rate in packets per second.</li> <li><b>Bytes</b>—Number of bytes transmitted and transmit rate in bytes per second.</li> <li><b>Tail-dropped packets</b>—Number of packets tail dropped.</li> <li><b>RED-dropped packets</b>—Number of RED-dropped packets for the <b>low</b>, <b>medium-low</b>, <b>medium-high</b>, and <b>high</b> loss priorities.</li> <li><b>RED-dropped bytes</b>—Number of RED-dropped bytes for the <b>low</b>, <b>medium-low</b>, <b>medium-high</b>, and <b>high</b> loss priorities.</li> </ul>	All levels

## Sample Output

**show interfaces**  
**interface-set queue**  
**(Gigabit Ethernet)**

```
user@host> show interfaces interface-set queue ge-2/2/0-0
Interface set: ge-2/2/0-0
Interface set index: 3
Forwarding classes: 8 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets          :          3998482          1 pps
    Bytes            :        271896884        688 bps
  Transmitted:
    Packets          :          1077474          1 pps
    Bytes            :        73268340        688 bps
    Tail-dropped packets :          0          0 pps
    RED-dropped packets :          2921008          0 pps
      Low            :          2921008          0 pps
      Medium-low     :          0          0 pps
      Medium-high    :          0          0 pps
      High           :          0          0 pps
    RED-dropped bytes :        198628544          0 bps
      Low            :        198628544          0 bps
      Medium-low     :          0          0 bps
      Medium-high    :          0          0 bps
      High           :          0          0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets          :          0          0 pps
    Bytes            :          0          0 bps
  Transmitted:
    ...
```

**show interfaces**  
**interface-set queue**

```
user@host> show interfaces interface-set queue ge-2/2/0-0 both-ingress-egress
Interface set: ge-2/2/0-0
Interface set index: 3
```



**both-ingress-egress  
(Enhanced DPC)**

```

Forwarding classes: 16 supported, 4 in use
Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      :      185968478      473161 pps
    Bytes        :      10042313520    204441336 bps
  Transmitted:
    Packets      :      5441673      13780 pps
    Bytes        :      293850342     5952960 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      180526772  459372 pps
    RED-dropped bytes  :      9748446282 198451512 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      :      0      0 pps
    Bytes        :      0      0 bps
  Transmitted:
    Packets      :      0      0 pps
    Bytes        :      0      0 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      0      0 pps
    RED-dropped bytes  :      0      0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets      :      522021472     473602 pps
    Bytes        :      28190332480    204599944 bps
  Transmitted:
    Packets      :      5791772      4055 pps
    Bytes        :      312755688     1751976 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      516227139  469546 pps
    RED-dropped bytes  :      27876265560 202843872 bps
Queue: 3, Forwarding classes: network-control
  Queued:
    Packets      :      0      0 pps
    Bytes        :      0      0 bps
  Transmitted:
    Packets      :      0      0 pps
    Bytes        :      0      0 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      0      0 pps
    RED-dropped bytes  :      0      0 bps
Forwarding classes: 16 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      :      5417304      13797 pps
    Bytes        :      368429508     7506096 bps
  Transmitted:
    Packets      :      5014996      12769 pps
    Bytes        :      341019728     6946560 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      402189     1028 pps
    Low          :      402189     1028 pps
    Medium-low   :      0      0 pps
    Medium-high  :      0      0 pps
    High         :      0      0 pps
    RED-dropped bytes  :      27348852     559536 bps
    Low          :      27348852     559536 bps
    Medium-low   :      0      0 bps
    Medium-high  :      0      0 bps

```

```

      High : 0 0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
  Packets : 0 0 pps
  Bytes : 0 0 bps
Transmitted:
  Packets : 0 0 pps
  Bytes : 0 0 bps
  Tail-dropped packets : 0 0 pps
  RED-dropped packets : 0 0 pps
    Low : 0 0 pps
    Medium-low : 0 0 pps
    Medium-high : 0 0 pps
    High : 0 0 pps
  RED-dropped bytes : 0 0 bps
    Low : 0 0 bps
    Medium-low : 0 0 bps
    Medium-high : 0 0 bps
    High : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
  Packets : 5770534 3963 pps
  Bytes : 396943252 2156144 bps
Transmitted:
  Packets : 3945152 1457 pps
  Bytes : 268270336 792608 bps
  Tail-dropped packets : 0 0 pps
  RED-dropped packets : 1815141 2506 pps
    Low : 1815141 2506 pps
    Medium-low : 0 0 pps
    Medium-high : 0 0 pps
    High : 0 0 pps
  RED-dropped bytes : 123429524 1363536 bps
    Low : 123429524 1363536 bps
    Medium-low : 0 0 bps
    Medium-high : 0 0 bps
    High : 0 0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets : 0 0 pps
  Bytes : 0 0 bps
Transmitted:
  Packets : 0 0 pps
  Bytes : 0 0 bps
  Tail-dropped packets : 0 0 pps
  RED-dropped packets : 0 0 pps
    Low : 0 0 pps
    Medium-low : 0 0 pps
    Medium-high : 0 0 pps
    High : 0 0 pps
  RED-dropped bytes : 0 0 bps
    Low : 0 0 bps
    Medium-low : 0 0 bps
    Medium-high : 0 0 bps
    High : 0 0 bps

```

show interfaces  
interface-set queue

```

user@host> show interfaces interface-set queue ge-2/2/0-0 egress
Interface set: ge-2/2/0-0
Interface set index: 3

```

## egress (Enhanced DPC)

```

Forwarding classes: 16 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      :          3958253          13822 pps
    Bytes        :          269217592        7519712 bps
  Transmitted:
    Packets      :          3665035          12729 pps
    Bytes        :          249222380        6924848 bps
    Tail-dropped packets :          0          0 pps
    RED-dropped packets :          293091        1093 pps
      Low        :          293091        1093 pps
      Medium-low :          0          0 pps
      Medium-high :          0          0 pps
      High        :          0          0 pps
    RED-dropped bytes :          19930188        594864 bps
      Low        :          19930188        594864 bps
      Medium-low :          0          0 bps
      Medium-high :          0          0 bps
      High        :          0          0 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      :          0          0 pps
    Bytes        :          0          0 bps
  Transmitted:
    Packets      :          0          0 pps
    Bytes        :          0          0 bps
    Tail-dropped packets :          0          0 pps
    RED-dropped packets :          0          0 pps
      Low        :          0          0 pps
      Medium-low :          0          0 pps
      Medium-high :          0          0 pps
      High        :          0          0 pps
    RED-dropped bytes :          0          0 bps
      Low        :          0          0 bps
      Medium-low :          0          0 bps
      Medium-high :          0          0 bps
      High        :          0          0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets      :          5350989          3904 pps
    Bytes        :          368412924        2124048 bps
  Transmitted:
    Packets      :          3790469          1465 pps
    Bytes        :          257751892        796960 bps
    Tail-dropped packets :          0          0 pps
    RED-dropped packets :          1550282        2439 pps
      Low        :          1550282        2439 pps
      Medium-low :          0          0 pps
      Medium-high :          0          0 pps
      High        :          0          0 pps
    RED-dropped bytes :          105419176        1327088 bps
      Low        :          105419176        1327088 bps
      Medium-low :          0          0 bps
      Medium-high :          0          0 bps
      High        :          0          0 bps
Queue: 3, Forwarding classes: network-control
  Queued:
    Packets      :          0          0 pps
    Bytes        :          0          0 bps
  Transmitted:

```

Packets	:	0	0 pps
Bytes	:	0	0 bps
Tail-dropped packets	:	0	0 pps
RED-dropped packets	:	0	0 pps
Low	:	0	0 pps
Medium-low	:	0	0 pps
Medium-high	:	0	0 pps
High	:	0	0 pps
RED-dropped bytes	:	0	0 bps
Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

show interfaces  
interface-set queue

```
user@host> show interfaces interface-set queue ge-2/2/0-0 forwarding-class best-effort
Interface set: ge-2/2/0-0
Interface set index: 3
```

### forwarding-class (Gigabit Ethernet)

```
Forwarding classes: 8 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      :          101857694          1420083 pps
    Bytes        :          6927234456        772532320 bps
  Transmitted:
    Packets      :          3984693           55500 pps
    Bytes        :          270959592        30192512 bps
    Tail-dropped packets :              0              0 pps
    RED-dropped packets :          97870952        1364583 pps
      Low        :          97870952        1364583 pps
      Medium-low :              0              0 pps
      Medium-high:              0              0 pps
      High       :              0              0 pps
    RED-dropped bytes :          6655225776        742339808 bps
      Low        :          6655225776        742339808 bps
      Medium-low :              0              0 bps
      Medium-high:              0              0 bps
      High       :              0              0 bps
```

### show interfaces interface-set queue (Enhanced DPC)

```
user@host> show interfaces interface-set queue ge-2/2/0-0 ingress
Interface set: foo
  Interface set index: 3
Forwarding classes: 16 supported, 4 in use
Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      :          149036817          473711 pps
    Bytes        :          8048003934        204642936 bps
  Transmitted:
    Packets      :          4360749           13891 pps
    Bytes        :          235480446        6000912 bps
    Tail-dropped packets :              0              0 pps
    RED-dropped packets :          144676035        459820 pps
    RED-dropped bytes :          7812506592        198642024 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      :              0              0 pps
    Bytes        :              0              0 bps
  Transmitted:
    Packets      :              0              0 pps
    Bytes        :              0              0 bps
    Tail-dropped packets :              0              0 pps
    RED-dropped packets :              0              0 pps
    RED-dropped bytes :              0              0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets      :          485089207          473605 pps
    Bytes        :          26195987476        204597576 bps
  Transmitted:
    Packets      :          5480799           3959 pps
    Bytes        :          295963146        1710504 bps
    Tail-dropped packets :              0              0 pps
    RED-dropped packets :          479605853        469646 pps
    RED-dropped bytes :          25898716170        202887072 bps
Queue: 3, Forwarding classes: network-control
  Queued:
    Packets      :              0              0 pps
    Bytes        :              0              0 bps
  Transmitted:
```

```

Packets          :                0                0 pps
Bytes            :                0                0 bps
Tail-dropped packets :                0                0 pps
RED-dropped packets :                0                0 pps
RED-dropped bytes  :                0                0 bps

```

#### show interfaces interface-set queue remaining-traffic (Gigabit Ethernet)

```
user@host> show interfaces interface-set queue ge-2/2/0-0 remaining-traffic
```

```
Interface set: ge-2/2/0-0
```

```
Interface set index: 12
```

```
Forwarding classes: 8 supported, 4 in use
```

```
Egress queues: 4 supported, 4 in use
```

```
Queue: 0, Forwarding classes: best-effort
```

```
Queued:
```

```

Packets          :                2201552            0 pps
Bytes            :                149705536           0 bps

```

```
Transmitted:
```

```

Packets          :                609765              0 pps
Bytes            :                41464020             0 bps
Tail-dropped packets :                0                0 pps
RED-dropped packets :                1591787            0 pps
  Low            :                1591787            0 pps
  Medium-low     :                0                    0 pps
  Medium-high    :                0                    0 pps
  High           :                0                    0 pps
RED-dropped bytes  :                108241516           0 bps
  Low            :                108241516           0 bps
  Medium-low     :                0                    0 bps
  Medium-high    :                0                    0 bps
  High           :                0                    0 bps

```

## show interfaces irb

<b>Syntax</b>	<pre>show interfaces irb &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index <i>snmp-index</i>&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 8.4.
<b>Description</b>	Display integrated routing and bridging interfaces information.
<b>Options</b>	<p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information for the interface with the specified SNMP index.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Additional Information</b>	Integrated routing and bridging (IRB) provides simultaneous support for Layer 2 bridging and Layer 3 IP routing on the same interface. IRB enables you to route local packets to another routed interface or to another bridging domain that has a Layer 3 protocol configured.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces irb extensive on page 234</a> <a href="#">show interfaces irb snmp-index on page 235</a>
<b>Output Fields</b>	<a href="#">Table 16 on page 229</a> lists the output fields for the <b>show interfaces irb</b> command. Output fields are listed in the approximate order in which they appear.

**Table 16: show interfaces irb Output Fields**

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the physical interface. Possible values are described in the “Enabled Field” section under Common Output Fields Description.	All levels
<b>Proto</b>	Protocol configured on the interface.	<b>terse</b>
<b>Interface index</b>	Physical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>

Table 16: show interfaces irb Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>
<b>Type</b>	Physical interface type.	<b>detail extensive none</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	<b>detail extensive brief none</b>
<b>MTU</b>	MTU size on the physical interface.	<b>detail extensive brief none</b>
<b>Clocking</b>	Reference clock source: <b>Internal</b> or <b>External</b> . Always unspecified on IRB interfaces.	<b>detail extensive brief</b>
<b>Speed</b>	Speed at which the interface is running. Always unspecified on IRB interfaces.	<b>detail extensive brief</b>
<b>Device flags</b>	Information about the physical device. Possible values are described in the "Device Flags" section under Common Output Fields Description.	<b>detail extensive brief none</b>
<b>Interface flags</b>	Information about the interface. Possible values are described in the "Interface Flags" section under Common Output Fields Description.	<b>detail extensive brief none</b>
<b>Link type</b>	Physical interface link type: <b>full duplex</b> or <b>half duplex</b> .	<b>detail extensive none</b>
<b>Link flags</b>	Information about the link. Possible values are described in the "Links Flags" section under Common Output Fields Description.	<b>detail extensive none</b>
<b>Physical Info</b>	Physical interface information.	All levels
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Current address</b>	Configured MAC address.	<b>detail extensive none</b>
<b>Hardware address</b>	MAC address of the hardware.	<b>detail extensive none</b>
<b>Alternate link address</b>	Backup address of the link.	<b>detail extensive</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hours:minutes:seconds timezone (hours:minutes:seconds ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>



Table 16: show interfaces irb Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>IPv6 transit statistics</b>	<p>Number of IPv6 transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>detail extensive</b>
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the DPC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>detail extensive</b>

#### Logical Interface

Table 16: show interfaces irb Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface (which reflects its initialization sequence).	<b>detail extensive</b> none
<b>SNMP ifIndex</b>	SNMP interface index number of the logical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under Common Output Fields Description.	<b>detail extensive</b>
<b>Encapsulation</b>	Encapsulation on the logical interface.	<b>detail extensive</b>
<b>Bandwidth</b>	Speed at which the interface is running.	<b>detail extensive</b>
<b>Routing Instance</b>	Routing instance IRB is configured under.	<b>detail extensive</b>
<b>Bridging Domain</b>	Bridging domain IRB is participating in.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the logical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>IPv6 transit statistics</b>	<p>Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Local statistics</b>	Statistics for traffic received from and transmitted to the Routing Engine.	<b>detail extensive</b>
<b>Transit statistics</b>	Statistics for traffic transiting the router.	<b>detail extensive</b>
<b>Protocol</b>	Protocol family configured on the local interface. Possible values are described in the "Protocol Field" section under Common Output Fields Description.	<b>detail extensive</b>
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail extensive</b>
<b>Maximum labels</b>	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	<b>detail extensive</b> none

Table 16: show interfaces irb Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route table</b>	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	<b>detail extensive</b>
<b>Addresses, Flags</b>	Information about address flags. Possible values are described in the “Addresses Flags” section under Common Output Fields Description.	<b>detail extensive</b>
<b>Policer</b>	The policer that is to be evaluated when packets are received or transmitted on the interface.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under Common Output Fields Description.	<b>detail extensive</b>

## Sample Output

**show interfaces irb  
extensive**

```
user@host> show interfaces irb extensive
Physical interface: irb, Enabled, Physical link is Up
  Interface index: 129, SNMP ifIndex: 23, Generation: 130
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
Speed: Unspecified
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Link flags     : None
  Physical info  : Unspecified
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: 02:00:00:00:00:30, Hardware address: 02:00:00:00:00:30
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
Traffic statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets : 0
  Output packets: 0
IPv6 transit statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets : 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0

Logical interface irb.0 (Index 68) (SNMP ifIndex 70) (Generation 143)
  Flags: Hardware-Down SNMP-Traps 0x4000 Encapsulation: ENET2
  Bandwidth: 1000mbps
  Routing Instance: customer_0 Bridging Domain: bd0
Traffic statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets : 0
  Output packets: 0
IPv6 transit statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets : 0
  Output packets: 0
Local statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets : 0
  Output packets: 0
Transit statistics:
  Input bytes   : 0                      0 bps
  Output bytes  : 0                      0 bps
  Input packets : 0                      0 pps
  Output packets: 0                      0 pps
IPv6 transit statistics:
  Input bytes   : 0
```

```

Output bytes : 0
Input packets: 0
Output packets: 0
Protocol inet, MTU: 1500, Generation: 154, Route table: 0
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 10.51.1/24, Local: 10.51.1.2, Broadcast: 10.51.1.255,
Generation: 155
Protocol multiservice, MTU: 1500, Generation: 155, Route table: 0
Flags: Is-Primary
Policer: Input: __default_arp_policer

```

### show interfaces irb snmp-index

```

user@host> show interfaces snmp-index 25
Physical interface: irb, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 25
Type: Ethernet, Link-level type: Ethernet, MTU: 1514
Device flags : Present Running
Interface flags: SNMP-Traps
Link type : Full-Duplex
Link flags : None
Current address: 02:00:00:00:00:30, Hardware address: 02:00:00:00:00:30
Last flapped : Never
Input packets : 0
Output packets: 0

Logical interface irb.0 (Index 68) (SNMP ifIndex 70)
Flags: Hardware-Down SNMP-Traps 0x4000 Encapsulation: ENET2
Bandwidth: 1000mbps
Routing Instance: customer_0 Bridging Domain: bd0
Input packets : 0
Output packets: 0
Protocol inet, MTU: 1500
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 10.51.1/24, Local: 10.51.1.2, Broadcast: 10.51.1.255
Protocol multiservice, MTU: 1500
Flags: Is-Primary

```

## show l2-learning instance

<b>Syntax</b>	<b>show l2-learning instance</b>
<b>Release Information</b>	(MX Series routers only) Command introduced in Junos OS Release 8.4.
<b>Description</b>	Display Layer 2 learning properties for all the configured routing instances.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show l2-learning instance on page 237</a>
<b>Output Fields</b>	<a href="#">Table 17 on page 236</a> describes the output fields for the <b>show l2-learning instance</b> command. Output fields are listed in the approximate order in which they appear.

**Table 17: show l2-learning instance Output Fields**

Field Name	Field Description
<b>Routing Instance</b>	Name of routing instance.
<b>Bridging Domain</b>	Name of bridging domain.  On MX Series routers you can use the <b>show l2-learning instance &lt;extensive&gt;</b> command option to display the Bridge Service-id information which includes the Config Service ID and the Active Service ID.
<b>Index</b>	Number associated with the routing instance or bridging domain.
<b>Logical System</b>	Name of logical system or <b>Default</b> if no logical system is configured.
<b>Routing instance flags</b>	Status of Layer 2 learning properties for each routing instance: <ul style="list-style-type: none"> <li>• <b>DL</b>—MAC learning is disabled.</li> <li>• <b>SE</b>—MAC accounting is enabled.</li> <li>• <b>AD</b>—Packets are dropped after MAC address limit is reached.</li> <li>• <b>LH</b>—The maximum number of MAC addresses has been learned on the routing instance. The routing instance is not able to learn any additional MAC addresses.</li> </ul>
<b>MAC limit</b>	Maximum number of MAC addresses that can be learned from each interface in the routing instance or bridging domain.

## Sample Output

`show l2-learning  
instance`

```
user@host> show l2-learning instance
```

Information for routing instance:

Routing Instance flags (DL -disable learning, SE -stats enabled,  
AD -packet action drop, LH -mac limit hit)

Routing Instance	Bridging Domain	Index	Logical System	Routing flags	MAC limit
__juniper_private1__		1	Default		5000
vs1	vlan100	3	Default		5120
vs1	vlan200	4	Default		5120

## show lacp interfaces

---

**Syntax**    `show lacp interfaces`  
              `<interface-name>`

**Release Information**    Command introduced in Junos OS Release 7.6.

**Description**    Display Link Aggregation Control Protocol (LACP) information about the specified aggregated Ethernet, Fast Ethernet, or Gigabit Ethernet interface.

**Options**    **none**—Display LACP information for all interfaces.

**interface-name**—(Optional) Display LACP information for the specified interface:

- Aggregated Ethernet—**aenumber**
- Fast Ethernet—**fe-fpc/pic/port**
- Gigabit Ethernet—**ge-fpc/pic/port**



**NOTE:** The `show lacp interfaces` command returns the following error message if your system is not configured in either active or passive LACP mode:

“Warning: lacp subsystem not running – not needed by configuration”

**Required Privilege Level**    view

**List of Sample Output**    [show lacp interfaces \(Aggregated Ethernet\) on page 241](#)  
                                  [show lacp interfaces \(Gigabit Ethernet\) on page 241](#)

**Output Fields**    [Table 18 on page 238](#) lists the output fields for the `show lacp interfaces` command. Output fields are listed in the approximate order in which they appear.

**Table 18: show lacp interfaces Output Fields**

Field Name	Field Description
Aggregated interface	Aggregated interface value.



Table 18: show lacp interfaces Output Fields (*continued*)

Field Name	Field Description
LACP State	<p>LACP state information for each aggregated interface:</p> <ul style="list-style-type: none"> <li>• <b>Role</b>—Role played by the interface. It can be one of the following: <ul style="list-style-type: none"> <li>• <b>Actor</b>—Local device participating in LACP negotiation.</li> <li>• <b>Partner</b>—Remote device participating in LACP negotiation.</li> </ul> </li> <li>• <b>Exp</b>—Expired state. <b>Yes</b> indicates the actor or partner is in an expired state. <b>No</b> indicates the actor or partner is not in an expired state.</li> <li>• <b>Def</b>—Default. <b>Yes</b> indicates that the actor's receive machine is using the default operational partner information, administratively configured for the partner. <b>No</b> indicates the operational partner information in use has been received in an LACP PDU.</li> <li>• <b>Dist</b>—Distribution of outgoing frames. <b>No</b> indicates distribution of outgoing frames on the link is currently disabled and is not expected to be enabled. Otherwise, the value is <b>Yes</b>.</li> <li>• <b>Col</b>—Collection of incoming frames. <b>Yes</b> indicates collection of incoming frames on the link is currently enabled and is not expected to be disabled. Otherwise, the value is <b>No</b>.</li> <li>• <b>Syn</b>—Synchronization. If the value is <b>Yes</b>, the link is considered synchronized. It has been allocated to the correct link aggregation group, the group has been associated with a compatible aggregator, and the identity of the link aggregation group is consistent with the system ID and operational key information transmitted. If the value is <b>No</b>, the link is not synchronized. It is currently not in the right aggregation.</li> <li>• <b>Aggr</b>—Ability of aggregation port to aggregate (<b>Yes</b>) or to operate only as an individual link (<b>No</b>).</li> <li>• <b>Timeout</b>—LACP timeout preference. Periodic transmissions of LACP PDUs occur at either a slow or fast transmission rate, depending upon the expressed LACP timeout preference (<b>Long Timeout</b> or <b>Short Timeout</b>).</li> <li>• <b>Activity</b>—Actor or partner's port activity. <b>Passive</b> indicates the port's preference for not transmitting LAC PDUs unless its partner's control value is <b>Active</b>. <b>Active</b> indicates the port's preference to participate in the protocol regardless of the partner's control value.</li> </ul>

Table 18: show lacp interfaces Output Fields (*continued*)

Field Name	Field Description
LACP Protocol	<p>LACP protocol information for each aggregated interface:</p> <ul style="list-style-type: none"> <li>Link state (active or standby) indicated in parentheses next to the interface when link protection is configured.</li> <li><b>Receive State</b>—One of the following values: <ul style="list-style-type: none"> <li><b>Current</b>—The state machine receives an LACP PDU and enters the <b>Current</b> state.</li> <li><b>Defaulted</b>—If no LACP PDU is received before the timer for the <b>Current</b> state expires a second time, the state machine enters the <b>Defaulted</b> state.</li> <li><b>Expired</b>—If no LACP PDU is received before the timer for the <b>Current</b> state expires once, the state machine enters the <b>Expired</b> state.</li> <li><b>Initialize</b>—When the physical connectivity of a link changes or a Begin event occurs, the state machine enters the <b>Initialize</b> state.</li> <li><b>LACP Disabled</b>—If the port is operating in half duplex, the operation of LACP is disabled on the port, forcing the state to <b>LACP Disabled</b>. This state is similar to the <b>Defaulted</b> state, except that the port is forced to operate as an individual port.</li> <li><b>Port Disabled</b>—If the port becomes inoperable and a Begin event has not occurred, the state machine enters the <b>Port Disabled</b> state.</li> </ul> </li> <li><b>Transmit State</b>—Transmit state of state machine. One of the following values: <ul style="list-style-type: none"> <li><b>Fast Periodic</b>—Periodic transmissions are enabled at a fast transmission rate.</li> <li><b>No Periodic</b>—Periodic transmissions are disabled.</li> <li><b>Periodic Timer</b>—Transitory state entered when the periodic timer expires.</li> <li><b>Slow Periodic</b>—Periodic transmissions are enabled at a slow transmission rate.</li> </ul> </li> <li><b>Mux State</b>—State of the multiplexer state machine for the aggregation port. The state is one of the following values: <ul style="list-style-type: none"> <li><b>Attached</b>—Multiplexer state machine initiates the process of attaching the port to the selected aggregator.</li> <li><b>Collecting—Yes</b> indicates that the receive function of this link is enabled with respect to its participation in an aggregation. Received frames are passed to the aggregator for collection. <b>No</b> indicates the receive function of this link is not enabled.</li> <li><b>Collecting Distributing</b>—Collecting and distributing states are merged together to form a combined state (coupled control). Because independent control is not possible, the coupled control state machine does not wait for the partner to signal that collection has started before enabling both collection and distribution.</li> <li><b>Detached</b>—Process of detaching the port from the aggregator is in progress.</li> <li><b>Distributing—Yes</b> indicates that the transmit function of this link is enabled with respect to its participation in an aggregation. Frames may be passed down from the aggregator's distribution function for transmission. <b>No</b> indicates the transmit function of this link is not enabled.</li> <li><b>Waiting</b>—Multiplexer state machine is in a holding process, awaiting an outcome.</li> </ul> </li> </ul>
LACP Statistics	<p>LACP statistics are returned when the <b>extensive</b> option is used and provides the following information:</p> <ul style="list-style-type: none"> <li><b>LACP Rx</b>—LACP received counter that increments for each normal hello.</li> <li><b>LACP Tx</b>—Number of LACP transmit packet errors logged.</li> <li><b>Unknown Rx</b>—Number of unrecognized packet errors logged.</li> <li><b>Illegal Rx</b>—Number of invalid packets received.</li> </ul>

## Sample Output

### show lacp interfaces (Aggregated Ethernet)

```
user@host> show lacp interfaces ae0 extensive
```

```
Aggregated interface: ae0
LACP state:      Role  Exp  Def  Dist  Col  Syn  Aggr  Timeout  Activity
ge-1/0/1        Actor  No   Yes  No    No   No   Yes    Fast    Active
ge-1/0/1        Partner No   Yes  No    No   No   Yes    Fast    Passive
ge-1/0/2        Actor  No   Yes  No    No   No   Yes    Fast    Active
ge-1/0/2        Partner No   Yes  No    No   No   Yes    Fast    Passive

LACP protocol:      Receive State      Transmit State      Mux State
ge-1/0/1            CURRENT      Fast periodic      Collecting
distributing
ge-1/0/2            CURRENT      Fast periodic      Collecting
distributing
ge-1/0/1 (active)    CURRENT      Fast periodic      Collecting
distributing
ge-1/0/2 (standby)   CURRENT      Fast periodic      WAITING
LACP Statistics:      LACP Rx      LACP Tx      Unknown Rx      Illegal Rx
ge-1/0/1              0              0              0      0
ge-1/0/2              0              0              0      0
```

### show lacp interfaces (Gigabit Ethernet)

```
user@host> show lacp interfaces ge-0/3/0
```

```
Aggregated interface: ae0
LACP State:      Role  Exp  Def  Dist  Col  Syn  Aggr  Timeout  Activity
ge-0/3/0        Actor  No   No   Yes  Yes  Yes  Yes    Fast    Active
ge-0/3/0        Partner No   No   Yes  Yes  Yes  Yes    Fast    Active
LACP Protocol:      Receive State      Transmit State      Mux State
ge-0/3/0            Current      Fast periodic      Collecting distributing
```

## show interfaces mac-database (Gigabit Ethernet)

<b>Syntax</b>	<code>show interfaces mac-database (ge-fpc/pic/port   ge-fpc/pic/port.n) &lt;mac-address mac-address&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced on PTX Series Packet Transport Switches for Junos OS Release 12.1.
<b>Description</b>	(M Series, T Series, MX Series routers, and PTX Series Packet Transport Switches only) Display media access control (MAC) address information for the specified Gigabit Ethernet interface.
<b>Options</b>	<p><b>ge-fpc/pic/port</b>—Display MAC addresses that have been learned on all logical interfaces on a particular physical interface.</p> <p><b>ge-fpc/pic/port.n</b>—Display MAC addresses that have been learned on a particular logical interface.</p> <p><b>mac-address mac-address</b>—(Optional) Display detailed MAC address statistics, including policer information.</p>
<b>Additional Information</b>	On IQ2 PIC interfaces, the default value for maximum retention of entries in the MAC address table has changed, for cases in which the table is not full. The new holding time is 12 hours. The previous retention time of 3 minutes is still in effect when the table is full.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces mac-database (All MAC Addresses on a Port) on page 244</a> <a href="#">show interfaces mac-database (All MAC Addresses on a Service) on page 245</a> <a href="#">show interfaces mac-database mac-address on page 246</a>
<b>Output Fields</b>	<a href="#">Table 19 on page 242</a> lists the output fields for the <b>show interfaces mac-database</b> command. Output fields are listed in the approximate order in which they appear.

Table 19: show interfaces mac-database Output Fields

Field Name	Field Description
Physical Interface	
Physical interface	Name of the physical interface.
Enabled	State of the physical interface. Possible values are described in the "Enabled Field" section under Common Output Fields Description.
Interface index	Physical interface index number, which reflects its initialization sequence.
SNMP ifIndex	SNMP index number for the physical interface.
Description	Description and name of the interface.

Table 19: show interfaces mac-database Output Fields (*continued*)

Field Name	Field Description
<b>Link-level type</b>	Encapsulation being used on the physical interface.
<b>MTU</b>	MTU size on the physical interface.
<b>Speed</b>	Speed at which the interface is running.
<b>Loopback</b>	Whether loopback is enabled and the type of loopback: <b>local</b> or <b>remote</b> .
<b>Source filtering</b>	Whether source filtering is configured.
<b>Flow control</b>	Whether flow control is enabled or disabled.
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under Common Output Fields Description.
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Links Flags” section under Common Output Fields Description.
<b>Link flags</b>	Information about the link. Possible values are described in the “Device Flags” section under Common Output Fields Description.
<b>Logical Interface</b>	
<b>Logical interface</b>	Name of the logical interface.
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.
<b>Flags</b>	Information about the logical interface (possible values are described in the “Logical Interface Flags” section under Common Output Fields Description.
<b>Encapsulation</b>	Encapsulation on the logical interface.
<b>MAC address, Input frames, Input bytes, Output frames, Output bytes</b>	MAC address and corresponding number of input frames, input bytes, output frames, and output bytes.
<b>Number of MAC addresses</b>	Number of MAC addresses configured.

Table 19: show interfaces mac-database Output Fields (*continued*)

Field Name	Field Description
<b>Policer Statistics</b>	<p>(Displayed for <b>mac-address</b> option only) Display information about policers applied to a logical interface-MAC pair.</p> <ul style="list-style-type: none"> <li>• <b>Policer type</b>—Type of policer that is out of spec with respect to the configuration. It can be one or more of the following: <ul style="list-style-type: none"> <li>• <b>Input premium</b>—Number of high-priority rating out-of-spec frames or bytes received.</li> <li>• <b>Output premium</b>—Number of high-priority rating out-of-spec frames or bytes sent.</li> <li>• <b>Input aggregate</b>—Total number of out-of-spec frames or bytes received.</li> <li>• <b>Output aggregate</b>—Total number of out-of-spec frames or bytes sent.</li> </ul> </li> <li>• <b>Discarded Frames</b>—Number of discarded frames.</li> <li>• <b>Discarded Bytes</b>—Number of discarded bytes.</li> </ul>

## Sample Output

show interfaces  
mac-database (All

```
user@host> show interfaces mac-database xe-0/3/3
Physical interface: xe-0/3/3, Enabled, Physical link is Up
Interface index: 372, SNMP ifIndex: 788
```

### MAC Addresses on a Port)

Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, Loopback: None, Source filtering: Disabled, Flow control: Enabled

Device flags : Present Running

Interface flags: SNMP-Traps Internal: 0x4000

Link flags : None

Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)

Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2

MAC address	Input frames	Input bytes	Output frames	Output bytes
00:00:00:00:00:00	1	56	0	0
00:00:c0:01:01:02	7023810	323095260	0	0
00:00:c0:01:01:03	7023810	323095260	0	0
00:00:c0:01:01:04	7023810	323095260	0	0
00:00:c0:01:01:05	7023810	323095260	0	0
00:00:c0:01:01:06	7023810	323095260	0	0
00:00:c0:01:01:07	7023810	323095260	0	0
00:00:c0:01:01:08	7023809	323095214	0	0
00:00:c0:01:01:09	7023809	323095214	0	0
00:00:c0:01:01:0a	7023809	323095214	0	0
00:00:c0:01:01:0b	7023809	323095214	0	0
00:00:c8:01:01:02	30424784	1399540064	37448598	1722635508
00:00:c8:01:01:03	30424784	1399540064	37448598	1722635508
00:00:c8:01:01:04	30424716	1399536936	37448523	1722632058
00:00:c8:01:01:05	30424789	1399540294	37448598	1722635508
00:00:c8:01:01:06	30424788	1399540248	37448597	1722635462
00:00:c8:01:01:07	30424783	1399540018	37448597	1722635462
00:00:c8:01:01:08	30424783	1399540018	37448596	1722635416
00:00:c8:01:01:09	8836796	406492616	8836795	406492570
00:00:c8:01:01:0a	30424712	1399536752	37448521	1722631966
00:00:c8:01:01:0b	30424715	1399536890	37448523	1722632058

Number of MAC addresses : 21

### show interfaces mac-database (All

user@host> show interfaces mac-database xe-0/3/3

Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)

Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2

## MAC Addresses on a Service)

MAC address	Input frames	Input bytes	Output frames	Output bytes
00:00:00:00:00:00	1	56	0	0
00:00:c0:01:01:02	7023810	323095260	0	0
00:00:c0:01:01:03	7023810	323095260	0	0
00:00:c0:01:01:04	7023810	323095260	0	0
00:00:c0:01:01:05	7023810	323095260	0	0
00:00:c0:01:01:06	7023810	323095260	0	0
00:00:c0:01:01:07	7023810	323095260	0	0
00:00:c0:01:01:08	7023809	323095214	0	0
00:00:c0:01:01:09	7023809	323095214	0	0
00:00:c0:01:01:0a	7023809	323095214	0	0
00:00:c0:01:01:0b	7023809	323095214	0	0
00:00:c8:01:01:02	31016568	1426762128	38040381	1749857526
00:00:c8:01:01:03	31016568	1426762128	38040382	1749857572
00:00:c8:01:01:04	31016499	1426758954	38040306	1749854076
00:00:c8:01:01:05	31016573	1426762358	38040381	1749857526
00:00:c8:01:01:06	31016573	1426762358	38040381	1749857526
00:00:c8:01:01:07	31016567	1426762082	38040380	1749857480
00:00:c8:01:01:08	31016567	1426762082	38040379	1749857434
00:00:c8:01:01:09	9428580	433714680	9428580	433714680
00:00:c8:01:01:0a	31016496	1426758816	38040304	1749853984
00:00:c8:01:01:0b	31016498	1426758908	38040307	1749854122

show interfaces  
mac-database  
mac-address

```

user@host> show interfaces mac-database xe-0/3/3 mac-address 00:00:c8:01:01:09
Physical interface: xe-0/3/3, Enabled, Physical link is Up
  Interface index: 372, SNMP ifIndex: 788
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, Loopback:
None, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None

Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
  Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
  MAC address: 00:00:c8:01:01:09, Type: Configured,
    Input bytes   : 202324652
    Output bytes  : 202324560
    Input frames  : 4398362
    Output frames : 4398360
  Policer statistics:
    Policer type   Discarded frames   Discarded bytes
    Output aggregate      3992386           183649756

```



## show interfaces mc-ae

<b>Syntax</b>	<code>show interfaces mc-ae id <i>identifier</i> unit <i>number</i></code>
<b>Release Information</b>	Command introduced in Junos OS Release 9.6.
<b>Description</b>	On MX Series routers with multi-chassis aggregated Ethernet ( <b>mc-aeX</b> ) interfaces, use this command to display information about the <b>mc-aeX</b> interfaces.
<b>Options</b>	<i>identifier</i> —(Optional) Name of the multichassis aggregated Ethernet interface. <i>number</i> —(Optional) Specify the logical interface by unit number.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces mc-ae on page 248</a> <a href="#">show interfaces mc-ae (Active/Active Bridging and VRRP over IRB on MX Series Routers) on page 248</a>
<b>Output Fields</b>	<a href="#">Table 20 on page 247</a> lists the output fields for the <b>show interfaces mc-ae</b> command. Output fields are listed in the approximate order in which they appear.

**Table 20: show interfaces mc-ae Output Fields**

Output Field Name	Field Description
<b>Member Links</b>	Identifiers of the configured multichassis link aggregate interfaces configured interfaces.
<b>Local Status</b>	Status of the local link: <b>active</b> or <b>standby</b> .
<b>Peer Status</b>	Status of the peer link: <b>active</b> or <b>standby</b> .
<b>Peer State</b>	Status of the local and peer links in an <b>active/active</b> bridge or VRRP over integrated routing and bridging (IRB) configuration on MX Series routers, including:  Logical Interface—Aggregated Ethernet (AE) aggregate number and unit number.  Topology Type—The bridge or VRRP topology type configured on the AE.  Local State—Up or down state of the local device.  Peer State—Up or down state of the peer device.  Peer Ip/ICL-PL/State—Address, interface and state of the peer device.
<b>Logical Interface</b>	Identifier and unit of the mc-ae interface.
<b>Core Facing Interface</b>	Label: <b>pseudowire interface</b> or <b>Ethernet interface</b> .

Table 20: show interfaces mc-ae Output Fields (*continued*)

Output Field Name	Field Description
ICL-PL	Label: pseudowire interface or Ethernet interface.

## Sample Output

```
show interfaces mc-ae user@host> show interfaces mc-ae ae0 unit 512
Member Links      : ae0
Local Status      : active
Peer Status       : active
Logical Interface  : ae0.512
Core Facing Interface : Label Ethernet Interface
ICL-PL            : Label Ethernet Interface
```

```
show interfaces mc-ae user@host# show interfaces mc-ae ge-0/0/0.0
(Active/Active
Bridging and VRRP
over IRB on MX Series
Routers)
Member Link          : ae0
Current State Machine's State: active
Local Status         : active
Local State          : up
Peer Status          : active
Peer State           : up
Logical Interface     : ae0.0
Topology Type        : bridge
Local State          : up
Peer State           : up
Peer Ip/ICL-PL/State : 192.168.100.10 ge-0/0/0.0 up
```

## show oam ethernet connectivity-fault-management delay-statistics

<b>Syntax</b>	<pre>show oam ethernet connectivity-fault-management delay-statistics &lt;count <i>entry-count</i>&gt; &lt;local-mep <i>local-mep-id</i>&gt; maintenance-association <i>ma-name</i> maintenance-domain <i>md-name</i> &lt;remote-mep <i>remote-mep-id</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 9.5.</p> <p>Command introduced in Junos OS Release 11.4 for EX Series switches.</p>
<b>Description</b>	<p>On MX Series routers with Ethernet interfaces on Dense Port Concentrators (DPCs), display ETH-DM delay statistics.</p> <p>On EX Series switches, display delay measurement results.</p>
<b>Options</b>	<p><b>count</b> <i>entry-count</i>—(Optional) Number of entries to display from the statistics table. The range of values is 1 through 100. The default value is 100 entries.</p> <p><b>local-mep</b> <i>local-mep-id</i>—(Optional) Numeric identifier of the local MEP. On MX Series routers, the range of values is 1 through 8192. On EX Series switches, the range of values is 1 through 8191.</p> <p><b>maintenance-association</b> <i>ma-name</i>—Name of an existing CFM maintenance association.</p> <p><b>maintenance-domain</b> <i>md-name</i>—Name of an existing connectivity fault management (CFM) maintenance domain.</p> <p><b>remote-mep</b> <i>remote-mep-id</i>—(Optional) Numeric identifier of the remote MEP. On MX Series routers, the range of values is 1 through 8192. On EX Series switches, the range of values is 1 through 8191.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>clear oam ethernet connectivity-fault-management statistics</li> <li>clear oam ethernet connectivity-fault-management delay-statistics</li> <li><a href="#">show oam ethernet connectivity-fault-management interfaces on page 257</a></li> <li><a href="#">show oam ethernet connectivity-fault-management mep-database on page 269</a></li> <li><a href="#">show oam ethernet connectivity-fault-management mep-statistics on page 279</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show oam ethernet connectivity-fault-management delay-statistics on page 251</a></p> <p><a href="#">show oam ethernet connectivity-fault-management delay-statistics remote-mep on page 251</a></p>
<b>Output Fields</b>	<p>Table 21 on page 250 lists the output fields for the <b>show oam ethernet connectivity-fault-management delay-statistics</b> command and the <b>show oam ethernet</b></p>

**connectivity-fault-management mep-statistics** command. Output fields are listed in the approximate order in which they appear.

**Table 21: show oam ethernet connectivity-fault-management delay-statistics and mep-statistics Output Fields**

Output Field Name	Field Description
MEP identifier	Maintenance association end point (MEP) numeric identifier.
MAC address	Unicast MAC address configured for the MEP.
Remote MEP count	Number of remote MEPs (unless you specify the <b>remote-mep</b> option).
Remote MEP identifier	Numeric identifier of the remote MEP.
Remote MAC address	Unicast MAC address of the remote MEP.
Index	Index number that corresponds to the ETH-DM entry in the CFM database.
One-way delay (usec)	For a one-way ETH-DM session, the frame delay time, in microseconds, measured at the receiver MEP.  For a detailed description of one-way Ethernet frame delay measurement, see the <i>ITU-T Y.1731 Ethernet Service OAM</i> topics in the Junos® OS Network Interfaces.
Two-way delay (usec)	For a two-way ETH-DM session, the frame delay time, in microseconds, measured at the initiator MEP.  For a detailed description of two-way Ethernet frame delay measurement, see the <i>ITU-T Y.1731 Ethernet Service OAM</i> topics in the Junos® OS Network Interfaces.
Average one-way delay	Average one-way frame delay for the statistics displayed.
Average one-way delay variation	Average one-way “frame jitter” for the statistics displayed.
Best-case one-way delay	Lowest one-way frame delay for the statistics displayed.
Worst-case one-way delay	Highest one-way frame delay for the statistics displayed.
Average two-way delay	Average two-way frame delay for the statistics displayed.
Average two-way delay variation	Average two-way “frame jitter” for the statistics displayed.
Best-case two-way delay	Lowest two-way frame delay for the statistics displayed.
Worst-case two-way delay	Highest two-way frame delay calculated in this session.

## Sample Output

**show oam ethernet  
connectivity-fault-  
management  
delay-statistics**

```
user@switch> show oam ethernet connectivity-fault-management delay-statistics
maintenance-domain md6 maintenance-association ma6
```

```
MEP identifier: 100, MAC address: 00:05:85:73:7b:39
```

```
Remote MEP count: 2
```

```
Remote MEP identifier: 101
```

```
Remote MAC address: 00:05:85:73:39:4a
```

```
Delay measurement statistics:
```

Index	One-way delay (usec)	Two-way delay (usec)
1	259	519
2	273	550
3	287	571
4	299	610
5	313	650

```
Average one-way delay : 286 usec
```

```
Average one-way delay variation: 62 usec
```

```
Best case one-way delay : 259 usec
```

```
Worst case one-way delay : 313 usec
```

```
Average two-way delay : 580 usec
```

```
Average two-way delay variation: 26 usec
```

```
Best case two-way delay : 519 usec
```

```
Worst case two-way delay : 650 usec
```

```
Remote MEP identifier: 102
```

```
Remote MAC address: 00:04:55:63:39:5a
```

```
Delay measurement statistics:
```

Index	One-way delay (usec)	Two-way delay (usec)
1	29	58
2	23	59
3	27	56
4	29	62
5	33	68

```
Average one-way delay : 28 usec
```

```
Average one-way delay variation: 3 usec
```

```
Best case one-way delay : 23 usec
```

```
Worst case one-way delay : 33 usec
```

```
Average two-way delay : 60 usec
```

```
Average two-way delay variation: 3 usec
```

```
Best case two-way delay : 56 usec
```

```
Worst case two-way delay : 68 usec
```

**show oam ethernet  
connectivity-fault-  
management  
delay-statistics  
remote-mep**

```
user@switch> show oam ethernet connectivity-fault-management delay-statistics
maintenance-domain md6 maintenance-association ma6 remote-mep 101
```

```
MEP identifier: 100, MAC address: 00:05:85:73:7b:39
```

```
Remote MEP identifier: 101
```

```
Remote MAC address: 00:05:85:73:39:4a
```

```
Delay measurement statistics:
```

Index	One-way delay (usec)	Two-way delay (usec)
1	259	519
2	273	550
3	287	571
4	299	610
5	313	650

```
Average one-way delay : 286 usec
```

Average one-way delay variation: 62 usec  
Best case one-way delay : 259 usec  
Worst case one-way delay : 313 usec  
Average two-way delay : 580 usec  
Average two-way delay variation: 26 usec  
Best case two-way delay : 519 usec  
Worst case two-way delay : 650 usec

## show oam ethernet connectivity-fault-management forwarding-state

<b>Syntax</b>	<b>show oam ethernet connectivity-fault-management forwarding-state</b> <b>interface</b> <i>interface-name</i>   <b>instance</b> <i>instance-name</i> <brief   detail   extensive>
<b>Release Information</b>	Command introduced in Junos OS Release 8.4.
<b>Description</b>	On M7i and M10i with the Enhanced CFEB (CFEB-E), M320, MX Series, T320, and T640 routers, display IEEE 802.1ag Operation, Administration, and Management (OAM) connectivity fault management forwarding state information for Ethernet interfaces.
<b>Options</b>	<p><b>interface</b> <i>interface-name</i>—Display forwarding state information for the specified Ethernet interface only.</p> <p><b>instance</b> <i>instance-name</i>—Display forwarding state information for the specified forwarding instance only.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<p><a href="#">show oam ethernet connectivity-fault-management forwarding-state instance on page 255</a></p> <p><a href="#">show oam ethernet connectivity-fault-management forwarding-state interface on page 255</a></p> <p><a href="#">show oam ethernet connectivity-fault-management forwarding-state interface detail on page 255</a></p> <p><a href="#">show oam ethernet connectivity-fault-management forwarding-state interfaceinterface-name on page 256</a></p>
<b>Output Fields</b>	Table 22 on page 253 lists the output fields for the <b>show oam ethernet connectivity-fault-management forwarding-state</b> command. Output fields are listed in the approximate order in which they appear.

Table 22: show oam ethernet connectivity-fault-management forwarding-state Output Fields

Field Name	Field Description	Level of Output
Interface name	Interface identifier.	All levels
Link (Status)	Local link status.	All levels
Filter action	Filter action for messages at the level.	All levels
Next hop type	Next-hop type.	All levels
Next index	Next-hop index number.	brief
Level	Maintenance domain (MD) level.	detail

**Table 22: show oam ethernet connectivity-fault-management forwarding-state Output Fields (*continued*)**

Field Name	Field Description	Level of Output
<b>Direction</b>	MEP direction configured.	none
<b>Instance name</b>	Forwarding instance name.	All levels
<b>CEs</b>	Number of customer edge (CE) interfaces.	All levels
<b>VEs</b>	Number of VPN endpoint (VE) interfaces.	All levels



## Sample Output

**show oam ethernet  
connectivity-fault-  
management  
forwarding-  
state instance**

```
user@host> show oam ethernet connectivity-fault-management forwarding-state instance
Instance name: __+bd1__
CEs: 3
VEs: 0
Maintenance domain forwarding state:
```

Level	Direction	Filter action	Nexthop type	Nexthop index
0		Drop	none	
1		Drop	none	
2		Drop	none	
3		Drop	none	
4		Drop	none	
5		Drop	none	
6		Drop	none	
7		Drop	none	

**show oam ethernet  
connectivity-fault-  
management  
forwarding-  
state interface**

```
user@host> show oam ethernet connectivity-fault-management forwarding-state interface
Interface name: ge-3/0/0.0
Instance name: __+bd1__
Maintenance domain forwarding state:
```

Level	Direction	Filter action	Nexthop type	Nexthop index
0		Drop	none	
1		Drop	none	
2		Drop	none	
3		Drop	none	
4		Drop	none	
5		Drop	none	
6		Drop	none	
7	down	Receive	none	

```
Interface name: xe-0/0/0.0
Instance name: __+bd1__
Maintenance domain forwarding state:
```

Level	Direction	Filter action	Nexthop type	Nexthop index
0		Drop	none	
1		Drop	none	
2		Drop	none	
3		Drop	none	
4		Drop	none	
5		Drop	none	
6		Drop	none	
7	down	Receive	none	

**show oam ethernet  
connectivity-fault-  
management  
forwarding-  
state interface detail**

```
user@host> show oam ethernet connectivity-fault-management forwarding-state interface
detail
Interface name: ge-3/0/0.0
Instance name: __+bd1__

Level: 0
Filter action: Drop
Nexthop type: none
```

```

Level: 1
Filter action: Drop
Nexthop type: none

Level: 2
Filter action: Drop
Nexthop type: none

Level: 3
Filter action: Drop
Nexthop type: none

Level: 4
Filter action: Drop
Nexthop type: none

Level: 5
Filter action: Drop
Nexthop type: none

Level: 6
Filter action: Drop
Nexthop type: none

Level: 7
Direction: down
Filter action: Receive
Nexthop type: none

Interface name: xe-0/0/0.0
Instance name: __+bd1__

Level: 0
Filter action: Drop
Nexthop type: none

Level: 1
Filter action: Drop
Nexthop type: none

...

```

**show oam ethernet  
connectivity-fault-  
management  
forwarding-  
state interface  
interface-name**

```

user@host> show oam ethernet connectivity-fault-management forwarding-state interface
interface-name ge-3/0/0/0.0
Interface name: ge-3/0/0.0
Instance name: __+bd1__
Maintenance domain forwarding state:

```

Level	Direction	Filter action	Nexthop type	Nexthop index
0		Drop	none	
1		Drop	none	
2		Drop	none	
3		Drop	none	
4		Drop	none	
5		Drop	none	
6		Drop	none	
7	down	Receive	none	

## show oam ethernet connectivity-fault-management interfaces

<b>Syntax</b>	<b>show oam ethernet connectivity-fault-management interfaces</b> <b>&lt;ethernet-interface-name&gt;</b> <b>&lt;level md-level&gt;</b> <b>&lt;brief   detail   extensive&gt;</b>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 8.4.</p> <p>Support for ITU-T Y.1731 frame delay measurement added in Junos OS Release 9.5.</p>
<b>Description</b>	<p>On M7i and M10i routers with Enhanced CFEB (CFEB-E), and on M320, MX Series, ACX Series, T320, and T640 routers, display IEEE 802.1ag Operation, Administration, and Management (OAM) connectivity fault management (CFM) database information for Ethernet interfaces.</p> <p>In addition, for Ethernet interfaces on MX Series routers, also display any ITU-T Y.1731 frame delay measurement (ETH-DM) frame counts when <b>detail</b> or <b>extensive</b> mode is specified.</p>
<b>Options</b>	<p><b>brief   detail   extensive</b>—(Optional) Specified level of output.</p> <p><b>ethernet-interface-name</b>—(Optional) CFM information only for CFM entities attached to the specified Ethernet interface.</p> <p><b>level md-level</b>—(Optional) CFM information for CFM identities enclosed within a maintenance domain of the specified level.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• clear oam ethernet connectivity-fault-management statistics</li> <li>• <a href="#">show oam ethernet connectivity-fault-management delay-statistics on page 249</a></li> <li>• <a href="#">show oam ethernet connectivity-fault-management mep-database on page 269</a></li> <li>• <a href="#">show oam ethernet connectivity-fault-management mep-statistics on page 279</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show oam ethernet connectivity-fault-management interfaces on page 262</a></p> <p><a href="#">show oam ethernet connectivity-fault-management interfaces detail on page 262</a></p> <p><a href="#">show oam ethernet connectivity-fault-management interfaces detail (One-Way ETH-DM) on page 263</a></p> <p><a href="#">show oam ethernet connectivity-fault-management interfaces detail (Connection Protection TLV Configured) on page 263</a></p> <p><a href="#">show oam ethernet connectivity-fault-management interfaces extensive on page 265</a></p> <p><a href="#">show oam ethernet connectivity-fault-management interfaces level on page 265</a></p> <p><a href="#">show oam ethernet connectivity-fault-management interfaces (trunk ports) on page 265</a></p>
<b>Output Fields</b>	<p>Table 23 on page 258 lists the output fields for the <b>show oam ethernet connectivity-fault-management interfaces</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 23: show oam ethernet connectivity-fault-management interfaces Output Fields

Field Name	Field Description	Level of Output
<b>Interface</b>	Interface identifier.	All levels
<b>Interface status</b>	Local interface status.	All levels
<b>Link status</b>	Local link status. <b>Up</b> , <b>down</b> , or <b>oam-down</b> .	All levels
<b>Maintenance domain name</b>	Maintenance domain name.	<b>detail extensive</b>
<b>Format (Maintenance domain)</b>	Maintenance domain name format configured.	<b>detail extensive</b>
<b>Level</b>	Maintenance domain level configured.	All levels
<b>Maintenance association name</b>	Maintenance association name.	<b>detail extensive</b>
<b>Format (Maintenance association)</b>	Maintenance association name format configured.	<b>detail extensive</b>
<b>Continuity-check status</b>	Continuity-check status.	<b>detail extensive</b>
<b>Interval</b>	Continuity-check message interval.	<b>detail extensive</b>
<b>Loss-threshold</b>	Lost continuity-check message threshold.	<b>detail extensive</b>
<b>Interface status TLV</b>	Status of the interface status TLV, if configured on the MEP interface: <b>none</b> , <b>up</b> , <b>down</b> , <b>testing</b> , <b>unknown</b> , <b>dormant</b> , <b>notPresent</b> , <b>lowerLayerDown</b>	<b>detail extensive</b>
<b>Port status TLV</b>	Status of the port status TLV, if configured on the MEP interface: <b>none</b> , <b>no</b> , <b>yes</b>	<b>detail extensive</b>
<b>Connection Protection TLV</b>	Status of the connection protection TLV if configured on the MEP interface: <b>no</b> , <b>yes</b>  If <b>yes</b> , then the transmitted connection protection TLV is decoded and the following three fields are displayed: <b>Prefer me</b> , <b>Protection in use</b> , <b>FRR Flag</b>	<b>detail extensive</b>
<b>Prefer me</b>	If set to <b>yes</b> , the path through which CCM was transmitted is preferred (unless the path fails). It is used for signaling a manual-switch command to the remote side.  Its value can be <b>yes</b> or <b>no</b> .	<b>detail extensive</b>
<b>Protection in use</b>	Used for protection decision coordination. Its value is set to <b>yes</b> if the endpoint transmitting the CCM is currently transmitting the user traffic to protection path.  Its value can be <b>yes</b> or <b>no</b> .	<b>detail extensive</b>

**Table 23: show oam ethernet connectivity-fault-management interfaces Output Fields (*continued*)**

Field Name	Field Description	Level of Output
<b>FRR Flag</b>	LSR/LER forwarding the CCM Frame into a bypass tunnel is set.  Its value can be <b>yes</b> or <b>no</b> .	<b>detail extensive</b>
<b>MEP identifier</b>	Maintenance association end point (MEP) identifier.	All levels
<b>Neighbors</b>	Number of MEP neighbors.	All levels
<b>Direction</b>	MEP direction configured.	<b>detail extensive</b>
<b>MAC address</b>	MAC address configured for the MEP.	<b>detail extensive</b>
<b>MEP status</b>	Indicates the status of the connectivity fault management (CFM) protocol running on the MEP: <b>Running</b> , <b>inactive</b> , <b>disabled</b> , or <b>unsupported</b> .	<b>detail extensive</b>
<b>Remote MEP not receiving CCM</b>	Whether the remote MEP is not receiving connectivity check messages (CCMs).	<b>detail extensive</b>
<b>Erroneous CCM received</b>	Whether erroneous CCMs have been received.	<b>detail extensive</b>
<b>Cross-connect CCM received</b>	Whether cross-connect CCMs have been received.	<b>detail extensive</b>
<b>RDI sent by some MEP</b>	Whether the remote defect indication (RDI) bit is set in messages that have been received. The absence of the RDI bit in a CCM indicates that the transmitting MEP is receiving CCMs from all configured MEPs.	<b>detail extensive</b>
<b>CCMs sent</b>	Number of CCMs transmitted.	<b>detail extensive</b>
<b>CCMs received out of sequence</b>	Number of CCMs received out of sequence.	<b>detail extensive</b>
<b>LBMs sent</b>	Number of loopback request messages (LBMs) sent.	<b>detail extensive</b>
<b>Valid in-order LBRs received</b>	Number of loopback response messages (LBRs) received that were valid messages and in sequence.	<b>detail extensive</b>
<b>Valid out-of-order LBRs received</b>	Number of LBRs received that were valid messages and not in sequence.	<b>detail extensive</b>
<b>LBRs received with corrupted data</b>	Number of LBRs received that were corrupted.	<b>detail extensive</b>
<b>LBRs sent</b>	Number of LBRs transmitted.	<b>detail extensive</b>
<b>LTMs sent</b>	Linktrace messages (LTMs) transmitted.	<b>detail extensive</b>

**Table 23: show oam ethernet connectivity-fault-management interfaces Output Fields (*continued*)**

Field Name	Field Description	Level of Output
<b>LTM received</b>	Linktrace messages received.	<b>detail extensive</b>
<b>LTRs sent</b>	Linktrace responses (LTRs) transmitted.	<b>detail extensive</b>
<b>LTRs received</b>	Linktrace responses received.	<b>detail extensive</b>
<b>Sequence number of next LTM request</b>	Sequence number of next LTM request to be transmitted.	<b>detail extensive</b>
<b>1DMs sent</b>	<p>If the interface is attached to an initiator MEP for a one-way ETH-DM session: Number of one-way delay measurement (1DM) PDU frames sent to the peer MEP in this session.</p> <p>For all other cases, this field displays 0.</p>	<b>detail extensive</b>
<b>Valid 1DMs received</b>	<p>If the interface is attached to a receiver MEP for a one-way ETH-DM session: Number of valid 1DM frames received.</p> <p>For all other cases, this field displays 0.</p>	<b>detail extensive</b>
<b>Invalid 1DMs received</b>	<p>If the interface is attached to a receiver MEP for a one-way ETH-DM session: Number of invalid 1DM frames received.</p> <p>For all other cases, this field displays 0.</p>	<b>detail extensive</b>
<b>Out of sync 1DMs received</b>	<p>If the interface is attached to a receiver MEP for a one-way ETH-DM session: Number of out-of-sync one-way delay measurement request packets received.</p>	<b>detail extensive</b>
<b>DMMs sent</b>	<p>If the interface is attached to an initiator MEP for a two-way ETH-DM session: Number of Delay Measurement Message (DMM) PDU frames sent to the peer MEP in this session.</p> <p>For all other cases, this field displays 0.</p>	<b>detail extensive</b>
<b>Valid DMMs received</b>	<p>If the interface is attached to an initiator MEP for a two-way ETH-DM session: Number of valid two-way delay measurement request packets received.</p>	<b>detail extensive</b>
<b>Invalid DMMs received</b>	<p>If the interface is attached to an initiator MEP for a two-way ETH-DM session: Number of invalid two-way delay measurement request packets received.</p>	<b>detail extensive</b>
<b>DMRs sent</b>	<p>If the interface is attached to a responder MEP for a two-way ETH-DM session: Number of delay measurement reply (DMR) frames sent.</p> <p>For all other cases, this field displays 0.</p>	<b>detail extensive</b>
<b>Valid DMRs received</b>	<p>If the interface is attached to an initiator MEP for a two-way ETH-DM session: Number of valid DMRs received.</p> <p>For all other cases, this field displays 0.</p>	<b>detail extensive</b>

**Table 23: show oam ethernet connectivity-fault-management interfaces Output Fields (*continued*)**

Field Name	Field Description	Level of Output
<b>Invalid DMRs received</b>	If the interface is attached to an initiator MEP for a two-way ETH-DM session: Number of invalid DMRs received.  For all other cases, this field displays 0.	<b>detail extensive</b>
<b>LMM sent</b>	If the interface is attached to an initiator MEP for a ETH-LM session: Number of loss measurement message (LMM) PDU frames sent to the peer MEP in this session.	<b>detail extensive</b>
<b>Valid LMM received</b>	If the interface is attached to an initiator MEP for a ETH-LM session: Number of valid loss measurement request packets received.	<b>detail extensive</b>
<b>Invalid LMM received</b>	If the interface is attached to an initiator MEP for a ETH-LM session: Number of invalid loss measurement request packets received.	<b>detail extensive</b>
<b>LMR sent</b>	If the interface is attached to a responder MEP for a ETH-LM session: Number of loss measurement reply (LMR) frames sent.	<b>detail extensive</b>
<b>Valid LMR received</b>	If the interface is attached to an initiator MEP for a ETH-LM session: Number of valid LMR frames received.	<b>detail extensive</b>
<b>Invalid LMR received</b>	If the interface is attached to an initiator MEP for a ETH-LM session: Number of invalid LMR frames received.	<b>detail extensive</b>
<b>Remote MEP count</b>	Number of remote MEPs.	<b>extensive</b>
<b>Identifier (remote MEP)</b>	MEP identifier of the remote MEP.	<b>extensive</b>
<b>MAC address (remote MEP)</b>	MAC address of the remote MEP.	<b>extensive</b>
<b>State (remote MEP)</b>	State of the remote MEP.	<b>extensive</b>
<b>Interface (remote MEP)</b>	Interface of the remote MEP.	<b>extensive</b>

## Sample Output

```
show oam ethernet
connectivity-fault-
management
interfaces
```

```
user@host> show oam ethernet connectivity-fault-management interfaces
Interface      Link      Status      Level      MEP
Identifier      Neighbors
ge-1/1/0.0      Up        Active      0          2          1
ge-1/1/0.1      Up        Active      0          2          1
ge-1/1/0.10     Up        Active      0          2          1
ge-1/1/0.100    Up        Active      0          2          1
ge-1/1/0.101    Up        Active      0          2          1
ge-1/1/0.102    Up        Active      0          2          1
ge-1/1/0.103    Up        Active      0          2          1
ge-1/1/0.104    Up        Active      0          2          1
ge-1/1/0.105    Up        Active      0          2          1
ge-1/1/0.106    Up        Active      0          2          1
```

```
...
```

```
show oam ethernet
connectivity-fault-
management
interfaces detail
```

```
user@host> show oam ethernet connectivity-fault-management interfaces detail
Interface name: ge-5/2/9.0, Interface status: Active, Link status: Up
Maintenance domain name: md0, Format: string, Level: 5
Maintenance association name: ma1, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
MEP identifier: 1, Direction: down, MAC address: 00:90:69:0b:4b:94
MEP status: running
Defects:
  Remote MEP not receiving CCM          : no
  Erroneous CCM received                 : yes
  Cross-connect CCM received             : no
  RDI sent by some MEP                  : yes
Statistics:
  CCMs sent                             : 76
  CCMs received out of sequence          : 0
  LBMs sent                             : 0
  Valid in-order LBRs received           : 0
  Valid out-of-order LBRs received       : 0
  LBRs received with corrupted data      : 0
  LBRs sent                             : 0
  LTMs sent                             : 0
  LTMs received                         : 0
  LTRs sent                             : 0
  LTRs received                         : 0
  Sequence number of next LTM request    : 0
  1DMs sent                             : 0
  Valid 1DMs received                   : 0
  Invalid 1DMs received                  : 0
  DMMs sent                             : 0
  DMRs sent                             : 0
  Valid DMRs received                   : 0
  Invalid DMRs received                  : 0
  LMM sent                             : 10
  Valid LMM received                    : 20
  Invalid LMM received                   : 0
  LMR sent                             : 20
  Valid LMR received                    : 10
  Invalid LMR received                   : 0
Remote MEP count: 2
Identifier      MAC address      State      Interface
2001           00:90:69:0b:7f:71      ok         ge-5/2/9.0
```



4001 00:90:69:0b:09:c5 ok ge-5/2/9.0

**show oam ethernet  
connectivity-fault-  
management  
interfaces detail  
(One-Way ETH-DM)**

```
user@host show oam ethernet connectivity-fault-management interfaces detail
Interface name: ge-0/2/5.0, Interface status: Active, Link status: Up
Maintenance domain name: md6, Format: string, Level: 6
Maintenance association name: ma6, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
MEP identifier: 101, Direction: down, MAC address: 00:90:69:0a:48:57
MEP status: running
Defects:
  Remote MEP not receiving CCM                : no
  Erroneous CCM received                      : no
  Cross-connect CCM received                  : no
  RDI sent by some MEP                       : no
Statistics:
  CCMs sent                                  : 1590
  CCMs received out of sequence              : 0
  LBMs sent                                  : 0
  Valid in-order LBRs received               : 0
  Valid out-of-order LBRs received           : 0
  LBRs received with corrupted data          : 0
  LBRs sent                                  : 0
  LTMs sent                                  : 0
  LTMs received                              : 0
  LTRs sent                                  : 0
  LTRs received                              : 0
  Sequence number of next LTM request        : 0
  1DMs sent                                  : 10
  Valid 1DMs received                       : 0
  Invalid 1DMs received                     : 0
  DMMs sent                                  : 0
  DMRs sent                                  : 0
  Valid DMRs received                      : 0
  Invalid DMRs received                    : 0
Remote MEP count: 1
  Identifier  MAC address      State  Interface
  201        00:90:69:0a:43:94 ok     ge-0/2/5.0
```

**show oam ethernet  
connectivity-fault-  
management  
interfaces detail  
(Connection  
Protection TLV  
Configured)**

```
user@host show oam ethernet connectivity-fault-management interfaces detail
Interface name: xe-6/2/0.0 , Interface status: Active, Link status: Up
Maintenance domain name: md6, Format: string, Level: 6
Maintenance association name: ma6, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
Interface status TLV: none, Port status TLV: none
Connection Protection TLV: yes
  Prefer me: no, Protection in use: no, FRR Flag: no
MEP identifier: 1, Direction: down, MAC address: 00:19:e2:b1:14:30
MEP status: running
Defects:
  Remote MEP not receiving CCM                : no
  Erroneous CCM received                      : no
  Cross-connect CCM received                  : no
  RDI sent by some MEP                       : no
  Some remote MEP's MAC in error state        : no
Statistics:
  CCMs sent                                  : 225
  CCMs received out of sequence              : 0
  LBMs sent                                  : 0
  Valid in-order LBRs received               : 0
```

```

Valid out-of-order LBRs received      : 0
LBRs received with corrupted data    : 0
LBRs sent                             : 0
LTMs sent                             : 0
LTMs received                         : 0
LTRs sent                             : 0
LTRs received                         : 0
Sequence number of next LTM request  : 0
1DMs sent                             : 0
Valid 1DMs received                  : 0
Invalid 1DMs received                : 0
Out of sync 1DMs received            : 0
DMMs sent                             : 0
Valid DMMs received                  : 0
Invalid DMMs received                : 0
DMRs sent                             : 0
Valid DMRs received                  : 0
Invalid DMRs received                : 0
LMMs sent                             : 0
Valid LMMs received                  : 0
Invalid LMMs received                : 0
LMRs sent                             : 0
Valid LMRs received                  : 0
Invalid LMRs received                : 0
Remote MEP count: 1
Identifier    MAC address      State  Interface
    2        00:90:69:7f:e4:30

```

**show oam ethernet  
connectivity-fault-  
management  
interfaces  
extensive**

```

user@host> show oam ethernet connectivity-fault-management interfaces extensive
Interface name: ge-5/2/9.0, Interface status: Active, Link status: Up
Maintenance domain name: md0, Format: string, Level: 5
Maintenance association name: ma1, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
Interface status TLV: none, Port status TLV: none
Connection Protection TLV: no
MEP identifier: 1, Direction: down, MAC address: 00:90:69:0b:4b:94
MEP status: running
Defects:
  Remote MEP not receiving CCM                : no
  Erroneous CCM received                      : yes
  Cross-connect CCM received                  : no
  RDI sent by some MEP                       : yes
Statistics:
  CCMs sent                                  : 76
  CCMs received out of sequence              : 0
  LBMs sent                                  : 0
  Valid in-order LBRs received               : 0
  Valid out-of-order LBRs received          : 0
  LBRs received with corrupted data         : 0
  LBRs sent                                  : 0
  LTMs sent                                  : 0
  LTMs received                             : 0
  LTRs sent                                  : 0
  LTRs received                             : 0
  Sequence number of next LTM request       : 0
  1DMs sent                                  : 0
  Valid 1DMs received                       : 0
  Invalid 1DMs received                     : 0
  DMMs sent                                  : 0
  DMRs sent                                  : 0
  Valid DMRs received                      : 0
  Invalid DMRs received                    : 0
Remote MEP count: 2
Identifier  MAC address      State  Interface
2001       00:90:69:0b:7f:71  ok    ge-5/2/9.0
4001       00:90:69:0b:09:c5  ok    ge-5/2/9.0

```

**show oam ethernet  
connectivity-fault-  
management  
interfaces level**

```

user@host> show oam ethernet connectivity-fault-management interfaces level 7
Interface  Link      Status      Level  MEP      Neighbors
Identifier
ge-3/0/0.0  Up       Active      7      201      0
xe-0/0/0.0  Up       Active      7      203      1

```

**show oam ethernet  
connectivity-fault-  
management  
interfaces (trunk  
ports)**

```

user@host> show oam ethernet connectivity-fault-management interfaces

Interface                                Link      Status      Level  MEP      Neighbors
Identifier
ge-4/0/1.0, vlan 100                    Up       Active      5      100      0
ge-10/3/10.4091, vlan 4091              Down     Inactive    4      400      0
ge-4/0/0.0                               Up       Active      6      200      0

user@host> show oam ethernet connectivity-fault-management interfaces ge-4/0/0.0

Interface                                Link      Status      Level  MEP      Neighbors
Identifier

```

ge-4/0/0.0	Up	Active	6	200	0
------------	----	--------	---	-----	---

user@host> show oam ethernet connectivity-fault-management interfaces ge-4/0/1.0 vlan 100

Interface	Link	Status	Level	MEP Identifier	Neighbors
ge-4/0/1.0, vlan 100	Up	Active	5	100	0

user@host> show oam ethernet connectivity-fault-management interfaces ge-10/3/10.4091  
vlan 4091

Interface	Link	Status	Level	MEP Identifier	Neighbors
ge-10/3/10.4091, vlan 4091	Down	Inactive	4	400	0

## show oam ethernet connectivity-fault-management linktrace path-database

<b>Syntax</b>	<b>show oam ethernet connectivity-fault-management linktrace path-database mac-address maintenance-association <i>ma-name</i> maintenance-domain <i>md-name</i></b>
<b>Release Information</b>	Command introduced in Junos OS Release 9.0.
<b>Description</b>	On M320, MX Series, T320, and T640 routers, display IEEE 802.1ag Operation, Administration, and Management (OAM) connectivity fault management maintenance linktrace database information.
<b>Options</b>	<p><b>mac-address</b>—Display connectivity fault management path database information for the specified MAC address of the remote host.</p> <p><b>maintenance-association <i>ma-name</i></b>—Display connectivity fault management path database information for the specified maintenance association.</p> <p><b>maintenance-domain <i>md-name</i></b>—Display connectivity fault management path database information for the specified maintenance domain.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<p><a href="#">show oam ethernet connectivity-fault-management linktrace path-database on page 268</a></p> <p><a href="#">show oam ethernet connectivity-fault-management linktrace path-database (Two traceroute Commands) on page 268</a></p>
<b>Output Fields</b>	Table 24 on page 267 lists the output fields for the <b>show oam ethernet connectivity-fault-management linktrace path-database</b> command. Output fields are listed in the approximate order in which they appear.

**Table 24: show oam ethernet connectivity-fault-management linktrace path-database Output Fields**

Field Name	Field Description
<b>Linktrace to</b>	MAC address of the 802.1ag node to which the linktrace message is targeted.
<b>Interface</b>	Interface used by the local MEP to send the linktrace message (LTM).
<b>Maintenance Domain</b>	Maintenance domain identifier specified in the traceroute command.
<b>Maintenance Association</b>	Maintenance association identifier specified in the traceroute command.
<b>Level</b>	Maintenance domain level configured for the maintenance domain.
<b>Local Mep</b>	MEP identifier of the local MEP originating the linktrace.
<b>Hop</b>	Sequential hop count of the linktrace path.

Table 24: show oam ethernet connectivity-fault-management linktrace path-database Output Fields (*continued*)

Field Name	Field Description
TTL	Number of hops remaining in the linktrace message (LTM). The time to live (TTL) is decremented at each hop.
Source MAC address	MAC address of the 802.1ag maintenance intermediate point (MIP) that is forwarding the LTM.
Next hop MAC address	MAC address of the 802.1ag node that is the next hop in the LTM path.
Transaction Identifier	4-byte identifier maintained by the MEP. Each LTM uses a transaction identifier. The transaction identifier is maintained globally across all maintenance domains. Use the transaction identifier to match an incoming linktrace responses (LTR), with a previously sent LTM.

## Sample Output

**show oam ethernet connectivity-fault-management linktrace path-database**

```
user@host> show oam ethernet connectivity-fault-management linktrace path-database
maintenance-domain MD1 maintenance-association MA1 00:01:02:03:04:05
Linktrace to 00:01:02:03:04:05, Interface : ge-5/0/0.0
Maintenance Domain: MD1, Level: 7
Maintenance Association: MA1, Local Mep: 1
```

Hop	TTL	Source MAC address	Next hop MAC address
Transaction Identifier:100001			
1	63	00:00:aa:aa:aa:aa	00:00:bb:bb:bb:bb
2	62	00:00:bb:bb:bb:bb	00:00:cc:cc:cc:cc
3	61	00:00:cc:cc:cc:cc	00:01:02:03:04:05
4	60	00:01:02:03:04:05	00:00:00:00:00:00

**show oam ethernet connectivity-fault-management linktrace path-database (Two traceroute Commands)**

```
user@host> show oam ethernet connectivity-fault-management linktrace path-database
maintenance-domain MD2 maintenance-association MA2 00:06:07:08:09:0A
Linktrace to 00:06:07:08:09:0A, Interface : ge-5/0/1.0
Maintenance Domain: MD2, Level: 6
Maintenance Association: MA2, Local Mep: 10
```

Hop	TTL	Source MAC address	Next hop MAC address
Transaction Identifier:100002			
1	63	00:00:aa:aa:aa:aa	00:00:bb:bb:bb:bb
2	62	00:00:bb:bb:bb:bb	00:00:cc:cc:cc:cc
3	61	00:00:cc:cc:cc:cc	00:06:07:08:09:0A
4	60	00:06:07:08:09:0A	00:00:00:00:00:00
Transaction Identifier:100003			
1	63	00:00:aa:aa:aa:aa	00:00:bb:bb:bb:bb
2	62	00:00:bb:bb:bb:bb	00:00:cc:cc:cc:cc
3	61	00:00:cc:cc:cc:cc	00:06:07:08:09:0A
4	60	00:06:07:08:09:0A	00:00:00:00:00:00

## show oam ethernet connectivity-fault-management mep-database

<b>Syntax</b>	<pre>show oam ethernet connectivity-fault-management mep-database maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> &lt;local-mep <i>local-mep-id</i>&gt; &lt;remote-mep <i>remote-mep-id</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 8.4.</p> <p>Support for ITU-T Y.1731 frame delay measurement added in Junos OS Release 9.5.</p>
<b>Description</b>	<p>On M7i and M10i routers with Enhanced CFEB (CFEB-E), and on M320, M120, MX Series, ACX Series, T320, and T640 routers, display IEEE 802.1ag Operation, Administration, and Management (OAM) connectivity fault management (CFM) database information for CFM maintenance association end points (MEPs) in a CFM session.</p> <p>In addition, on M120, M320, and MX series routers, also display port status TLV, interface status TLV, and action profile information.</p> <p>In addition, for Ethernet interfaces on MX Series routers, also display any ITU-T Y.1731 frame delay measurement (ETH-DM) frame counts.</p>
<b>Options</b>	<p><b>maintenance-association <i>ma-name</i></b>—Name of the maintenance association.</p> <p><b>maintenance-domain <i>domain-name</i></b>—Name of the maintenance domain.</p> <p><b><i>local-mep-id</i></b>—(Optional) Numeric identifier of local MEP.</p> <p><b><i>remote-mep-id</i></b>—(Optional) Numeric identifier of the remote MEP.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• clear oam ethernet connectivity-fault-management statistics</li> <li>• <a href="#">show oam ethernet connectivity-fault-management delay-statistics on page 249</a></li> <li>• <a href="#">show oam ethernet connectivity-fault-management interfaces on page 257</a></li> <li>• <a href="#">show oam ethernet connectivity-fault-management mep-statistics on page 279</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show oam ethernet connectivity-fault-management mep-database on page 275</a></p> <p><a href="#">show oam ethernet connectivity-fault-management mep-database (One-Way ETH-DM) on page 275</a></p> <p><a href="#">show oam ethernet connectivity-fault-management mep-database local-mep remote-mep on page 276</a></p> <p><a href="#">show oam ethernet connectivity-fault-management mep-database remote-mep (Action Profile Event) on page 276</a></p> <p><a href="#">show oam ethernet connectivity-fault-management mep-database (Connection Protection TLV Configured) on page 276</a></p> <p><a href="#">show oam ethernet connectivity-fault-management mep-database on page 277</a></p>

[show oam ethernet connectivity-fault-management mep-database \(enhanced continuity measurement\) on page 278](#)

**Output Fields** Table 25 on page 270 lists the output fields for the **show oam ethernet connectivity-fault-management mep-database** command. Output fields are listed in the approximate order in which they appear.

**Table 25: show oam ethernet connectivity-fault-management mep-database Output Fields**

Field Name	Field Description
<b>Maintenance domain name</b>	Maintenance domain name.
<b>Format (Maintenance domain)</b>	Maintenance domain name format configured.
<b>Level</b>	Maintenance domain level configured.
<b>Maintenance association name</b>	Maintenance association name.
<b>Format (Maintenance association)</b>	Maintenance association name format configured.
<b>Continuity-check status</b>	Continuity-check status.
<b>Interval</b>	Continuity-check message interval.
<b>Loss-threshold</b>	Lost continuity-check message threshold.
<b>Connection Protection TLV</b>	Status of the connection protection TLV, if configured on the MEP interface: <b>no</b> , <b>yes</b>  If <b>yes</b> , then the transmitted connection protection TLV is decoded and the following three fields are displayed: <b>Prefer me</b> , <b>Protection in use</b> , <b>FRR Flag</b>
<b>Prefer me</b>	If set to <b>yes</b> , the path through which CCM was transmitted is preferred (unless the path fails). It is used for signaling a manual-switch command to remote side.  Its value can be <b>yes</b> or <b>no</b> .
<b>Protection in use</b>	Used for protection decision coordination. Its value is set to <b>yes</b> if the endpoint transmitting the CCM is currently transmitting the user traffic to protection path.  Its value can be <b>yes</b> or <b>no</b> .
<b>FRR Flag</b>	LSR/LER forwarding the CCM Frame into a bypass tunnel is set.  Its value can be <b>yes</b> or <b>no</b> .
<b>MEP identifier</b>	Maintenance association end point (MEP) identifier.
<b>Direction</b>	MEP direction configured.



Table 25: show oam ethernet connectivity-fault-management mep-database Output Fields (*continued*)

Field Name	Field Description
MAC address	MAC address configured for the MEP.
Auto-discovery	Whether automatic discovery is enabled or disabled.
Priority	Priority used for CCMs and linktrace messages transmitted by the MEP.
Interface name	Interface identifier.
Interface status	Local interface status.
Link status	Local link status.
Remote MEP not receiving CCM	Whether the remote MEP is not receiving CCMs.
Erroneous CCM received	Whether erroneous CCMs have been received.
Cross-connect CCM received	Whether cross-connect CCMs have been received.
RDI sent by some MEP	Whether the remote defect indication (RDI) bit is set in messages that have been received. The absence of the RDI bit in a CCM indicates that the transmitting MEP is receiving CCMs from all configured MEPs.
CCMs sent	Number of CCMs transmitted.
CCMs received out of sequence	Number of CCMs received out of sequence.
LBMs sent	Number of loopback messages (LBMs) sent.
Valid in-order LBRs received	Number of loopback response messages (LBRs) received that were valid messages and in sequence.
1DMs sent	If the MEP is an initiator for a one-way ETH-DM session: Number of one-way delay measurement (1DM) PDU frames sent to the peer MEP in this session.  For all other cases, this field displays 0.
Valid 1DMs received	If the MEP is a receiver for a one-way ETH-DM session: Number of valid 1DM frames received.  For all other cases, this field displays 0.
Invalid 1DMs received	If the MEP is a receiver for a one-way ETH-DM session: Number of invalid 1DM frames received.  For all other cases, this field displays 0.

Table 25: show oam ethernet connectivity-fault-management mep-database Output Fields (*continued*)

Field Name	Field Description
<b>Out of sync 1DMs received</b>	If the MEP is a receiver for a one-way ETH-DM session: Number of out-of-sync one-way delay measurement request packets received.
<b>DMMs sent</b>	If the MEP is an initiator for a two-way ETH-DM session: Number of Delay Measurement Message (DMM) PDU frames sent to the peer MEP in this session.  For all other cases, this field displays 0.
<b>Valid DMMs received</b>	If the MEP is an initiator for a two-way ETH-DM session: Number of valid two-way delay measurement packets received.
<b>Invalid DMMs received</b>	If the MEP is an initiator for a two-way ETH-DM session: Number of invalid two-way delay measurement packets received.
<b>DMRs sent</b>	If the MEP is a responder for a ETH-DM session: Number of Delay Measurement Reply (DMR) frames sent.  For all other cases, this field displays 0.
<b>Valid DMRs received</b>	If the MEP is an initiator for a two-way ETH-DM session: Number of valid DMRs received.  For all other cases, this field displays 0.
<b>Invalid DMRs received</b>	If the MEP is an initiator for a two-way ETH-DM session: Number of invalid DMRs received.  For all other cases, this field displays 0.
<b>Valid out-of-order LBRs received</b>	Number of LBRs received that were valid messages and not in sequence.
<b>LBRs received with corrupted data</b>	Number of LBRs received that were corrupted.
<b>LBRs sent</b>	Number of LBRs transmitted.
<b>LTMs sent</b>	Linktrace messages (LTMs) transmitted.
<b>LTMs received</b>	Linktrace messages received.
<b>LTRs sent</b>	Linktrace responses (LTRs) transmitted.
<b>LTRs received</b>	Linktrace responses received.
<b>Sequence number of next LTM request</b>	Sequence number of the next linktrace message request to be transmitted.
<b>LMM sent</b>	If the interface is attached to an initiator MEP for a ETH-LM session: Number of loss measurement message (LMM) PDU frames sent to the peer MEP in this session.

Table 25: show oam ethernet connectivity-fault-management mep-database Output Fields (*continued*)

Field Name	Field Description
Valid LMM received	If the interface is attached to an initiator MEP for a ETH-LM session: Number of valid loss measurement request packets received.
Invalid LMM received	If the interface is attached to an initiator MEP for a ETH LM session: Number of invalid loss measurement request packets received.
LMR sent	If the interface is attached to a responder MEP for a ETH-LM session: Number of loss measurement reply (LMR) frames sent.
Valid LMR received	If the interface is attached to an initiator MEP for a ETH LM session: Number of valid LMR frames received.
Invalid LMR received	If the interface is attached to an initiator MEP for a ETH-LM session: Number of invalid LMR frames received.
Remote MEP identifier	MEP identifier of the remote MEP.
State (remote MEP)	State of the remote MEP: <b>idle</b> , <b>start</b> , <b>ok</b> , or <b>failed</b> .
MAC address	MAC address of the remote MEP.
Type	Whether the remote MEP MAC address was learned using automatic discovery or configured.
Interface	Interface of the remote MEP. A seven-digit number is appended if CFM is configured to run on a routing instance of type VPLS.
Last flapped	Date, time, and how long ago the remote MEP interface went from down to up. The format is <b>Last flapped: year-month-day hours:minutes:seconds timezone (hours:minutes:seconds ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .
Remote defect indication	Whether the remote defect indication (RDI) bit is set in messages that have been received or transmitted.
Port status TLV	<ul style="list-style-type: none"> <li>In the Maintenance domain section, displays the last transmitted port status TLV value.</li> <li>In the Remote MEP section, displays the last value of port status TLV received from the remote MEP.</li> </ul> <p>In the Action profile section, displays, the last occurred event <b>port-status-tlv blocked</b> event. This event occurred due to the reception of <b>blocked</b> value in the port status TLV from remote MEP.</p>
Interface status TLV	<ul style="list-style-type: none"> <li>In the Maintenance domain section, displays the last transmitted interface status TLV value.</li> <li>In the Remote MEP section, displays the last value of interface status TLV received from the remote MEP.</li> </ul> <p>In the Action profile section, if displays, the last occurred event interface-status-tlv event ( either <b>lower-layer-down</b> or <b>down</b>). This event occurred due to the reception of either lower or <b>down</b> value in the interface status TLV from remote MEP.</p>
Action profile	Name of the action profile occurrence associated with a remote MEP.

**Table 25: show oam ethernet connectivity-fault-management mep-database Output Fields (*continued*)**

Field Name	Field Description
<b>Last event</b>	When an action profile occurs, displays the last event that triggered it.
<b>Last event cleared</b>	When all the configured and occurred events (under action profile) are cleared, then the action taken gets reverted (such as down interface is made up) and the corresponding time is noted and displayed.
<b>Action</b>	Action taken and the corresponding time of the action occurrence.

## Sample Output

**show oam ethernet  
connectivity-fault-  
management  
mep-database**

```
user@host> show oam ethernet connectivity-fault-management mep-database
maintenance-domain vpls-vlan2000 maintenance-association vpls-vlan200
Maintenance domain name: vpls-vlan2000, Format: string, Level: 5
Maintenance association name: vpls-vlan200, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
MEP identifier: 200, Direction: up, MAC address: 00:19:e2:b0:74:01
Auto-discovery: enabled, Priority: 0
Interface status TLV: none, Port status TLV: none
Connection Protection TLV: no Interface name: ge-0/0/1.0, Interface status:
Active, Link status: Up
Defects:
  Remote MEP not receiving CCM                : no
  Erroneous CCM received                      : no
  Cross-connect CCM received                  : no
  RDI sent by some MEP                       : no
Statistics:
  CCMs sent                                  : 1476
  CCMs received out of sequence              : 0
  LBMs sent                                  : 85
  Valid in-order LBRs received               : 78
  Valid out-of-order LBRs received           : 0
  LBRs received with corrupted data          : 0
  LBRs sent                                  : 0
  LTMs sent                                  : 1
  LTMs received                             : 0
  LTRs sent                                  : 0
  LTRs received                             : 1
  Sequence number of next LTM request        : 1
  1DMs sent                                  : 0
  Valid 1DMs received                       : 0
  Invalid 1DMs received                     : 0
  DMMs sent                                  : 0
  DMRs sent                                  : 0
  Valid DMRs received                      : 0
  Invalid DMRs received                    : 0
Remote MEP count: 1
Identifier  MAC address      State  Interface
100        00:19:e2:b2:81:4b  ok    vt-0/1/10.1049088
```

**show oam ethernet  
connectivity-fault-  
management  
mep-database  
(One-Way ETH-DM)**

```
user@host> show oam ethernet connectivity-fault-management mep-database
maintenance-domain md6 maintenance-domain ma6
Maintenance domain name: md6, Format: string, Level: 6
Maintenance association name: ma6, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
MEP identifier: 101, Direction: down, MAC address: 00:90:69:0a:48:57
Auto-discovery: enabled, Priority: 0
Interface name: ge-0/2/5.0, Interface status: Active, Link status: Up
Defects:
  Remote MEP not receiving CCM                : no
  Erroneous CCM received                      : no
  Cross-connect CCM received                  : no
  RDI sent by some MEP                       : no
Statistics:
  CCMs sent                                  : 1590
  CCMs received out of sequence              : 0
  LBMs sent                                  : 0
  Valid in-order LBRs received               : 0
```

```

Valid out-of-order LBRs received          : 0
LBRs received with corrupted data         : 0
LBRs sent                                : 0
LTMs sent                                 : 0
LTMs received                             : 0
LTRs sent                                 : 0
LTRs received                             : 0
Sequence number of next LTM request       : 0
1DMs sent                                 : 10
Valid 1DMs received                       : 0
Invalid 1DMs received                     : 0
DMMs sent                                 : 0
DMRs sent                                 : 0
Valid DMRs received                       : 0
Invalid DMRs received                     : 0
Remote MEP count: 1
Identifier  MAC address  State  Interface
  201      00:90:69:0a:43:94  ok    ge-0/2/5.0

```

**show oam ethernet  
connectivity-fault-  
management  
mep-database  
local-mep remote-mep**

```

user@host> show oam ethernet connectivity-fault-management mep-database
maintenance-domain vpls-vlan2000 maintenance-association vpls-vlan200 local-mep 200
remote-mep 100

```

```

Maintenance domain name: vpls-vlan2000, Format: string, Level: 5
Maintenance association name: vpls-vlan200, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
MEP identifier: 200, Direction: up, MAC address: 00:19:e2:b0:74:01
Auto-discovery: enabled, Priority: 0
Interface name: ge-0/0/1.0, Interface status: Active, Link status: Up

```

```

Remote MEP identifier: 100, State: ok
MAC address: 00:19:e2:b2:81:4b, Type: Learned
Interface: vt-0/1/10.1049088
Last flapped: Never
Remote defect indication: false
Port status TLV: none
Interface status TLV: none

```

**show oam ethernet  
connectivity-fault-  
management  
mep-database  
remote-mep  
(Action Profile Event)**

```

user@host> show oam ethernet connectivity-fault-management mep-database
maintenance-domain md5 maintenance-association ma5 remote-mep 200
Maintenance domain name: md5, Format: string, Level: 5
Maintenance association name: ma5, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
MEP identifier: 100, Direction: down, MAC address: 00:05:85:73:e8:ad
Auto-discovery: enabled, Priority: 0
Interface status TLV: none, Port status TLV: none
Interface name: ge-1/0/8.0, Interface status: Active, Link status: Up

```

```

Remote MEP identifier: 200, State: ok
MAC address: 00:05:85:73:96:1f, Type: Configured
Interface: ge-1/0/8.0
Last flapped: Never
Remote defect indication: false
Port status TLV: none
Interface status TLV: lower-layer-down
Action profile: juniper
  Last event: Interface-status-tlv lower-layer-down
  Action: Interface-down, Time: 2009-03-27 14:25:10 PDT (00:00:02 ago)

```

```

user@host> show oam ethernet connectivity-fault-management mep-database

```

show oam ethernet  
connectivity-fault-  
management  
mep-database  
(Connection  
Protection TLV  
Configured)

#### **maintenance-domain md5 maintenance-association ma5**

If connection-protection is not enabled on down MEPs, but connection-protection TLV is used, MX always sets the protection-in-use flag in connection-protection tlv, while CCMs are sent out. During reversion, this is an indicator to the receiver that protect-path is in use, otherwise the peer (receiver) assumes working is active and reversion does not work as expected. Setting this bit does not affect protection-switching/traffic-loss.

```
Maintenance domain name: md5, Format: string, Level: 5
Maintenance association name: ma5, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
MEP identifier: 1, Direction: down, MAC address: 00:19:e2:b1:14:30
Auto-discovery: enabled, Priority: 0
Interface status TLV: none, Port status TLV: none
Connection Protection TLV: yes
  Prefer me: no, Protection in use: no, FRR Flag: no
Interface name: xe-6/2/0.0, Interface status: Active, Link status: Up
Defects:
  Remote MEP not receiving CCM                : no
  Erroneous CCM received                       : no
  Cross-connect CCM received                   : no
  RDI sent by some MEP                         : no
  Some remote MEP's MAC in error state         : no
Statistics:
  CCMs sent                                   : 251
  CCMs received out of sequence                : 0
  LBMs sent                                   : 0
  Valid in-order LBRs received                 : 0
  Valid out-of-order LBRs received             : 0
  LBRs received with corrupted data            : 0
  LBRs sent                                   : 0
  LTMs sent                                   : 0
  LTMs received                               : 0
  LTRs sent                                   : 0
  LTRs received                               : 0
  Sequence number of next LTM request          : 0
  1DMs sent                                   : 0
  Valid 1DMs received                         : 0
  Invalid 1DMs received                       : 0
  Out of sync 1DMs received                   : 0
  DMMs sent                                   : 0
  Valid DMMs received                         : 0
  Invalid DMMs received                       : 0
  DMRs sent                                   : 0
  Valid DMRs received                         : 0
  Invalid DMRs received                       : 0
  LMMs sent                                   : 0
  Valid LMMs received                         : 0
  Invalid LMMs received                       : 0
  LMRs sent                                   : 0
  Valid LMRs received                         : 0
  Invalid LMRs received                       : 0
Remote MEP count: 1
Identifier    MAC address    State    Interface
  2          00:90:69:7f:e4:30
```

show oam ethernet  
connectivity-fault-  
management  
mep-database

#### **user@host> show oam ethernet connectivity-fault-management mep-database maintenance-domain md5 maintenance-association ma5**

```
Maintenance association name: ma1, Format: string
Continuity-check status: enabled, Interval: 1s, Loss-threshold: 3 frames
MEP identifier: 1, Direction: down, MAC address: 00:14:f6:b6:01:fe
```

Auto-discovery: enabled, Priority: 0  
 Interface name: ge-1/0/0.0, Interface status: Active, Link status: Up

Defects:

Remote MEP not receiving CCM : no  
 Erroneous CCM received : no  
 Cross-connect CCM received : no  
 RDI sent by some MEP : no

Statistics:

CCMs sent : 328703  
 CCMs received out of sequence : 0  
 LBMs sent : 85  
 Valid in-order LBRs received : 78  
 Valid out-of-order LBRs received : 0  
 LBRs received with corrupted data : 0  
 LBRs sent : 0  
 LTMs sent : 0  
 LTMs received : 0  
 LTRs sent : 0  
 LTRs received : 0  
 Sequence number of next LTM request : 0  
 1DMs sent : 10  
 Valid 1DMs received : 10  
 Invalid 1DMs received : 0  
 DMMs sent : 20  
 DMRs sent : 0  
 Valid DMRs received : 10  
 Invalid DMRs received : 0  
 LMM sent : 10  
 Valid LMM received : 20  
 Invalid LMM received : 0  
 LMR sent : 20  
 Valid LMR received : 10  
 Invalid LMR received : 0  
 Remote MEP count : 1

Identifier	MAC address	State	Interface
2	00:12:1e:fb:ea:7d	ok	ge-1/0/0.0

**show oam ethernet  
 connectivity-fault-  
 management  
 mep-database  
 (enhanced continuity  
 measurement)**

```
user@host> show oam ethernet connectivity-fault-management mep-database
maintenance-domain md5 maintenance-association ma5 local-mep 2001 remote-mep 1001
Maintenance domain name: md5, Format: string, Level: 5
Maintenance association name: ma5, Format: string
Continuity-check status: enabled, Interval: 100ms, Loss-threshold: 3 frames
MEP identifier: 2001, Direction: down, MAC address: 00:19:e2:b2:81:4a
Auto-discovery: enabled, Priority: 0
Interface status TLV: up, Port status TLV: up
Interface name: ge-2/0/0.0, Interface status: Active, Link status: Up
```

```
Remote MEP identifier: 1001, State: ok
MAC address : 00:19:e2:b0:74:00, Type: Learned
Interface : ge-2/0/0.0
Last flapped : Never
+ Continuity : 91%, Admin-enable duration: 2100sec, Oper-down duration: 100sec
Remote defect indication: false
Port status TLV: none
Interface status TLV: none
```



## show oam ethernet connectivity-fault-management mep-statistics

<b>Syntax</b>	<pre>show oam ethernet connectivity-fault-management mep-statistics maintenance-domain <i>md-name</i> maintenance-association <i>ma-name</i> &lt;mep <i>mep-id</i>&gt; &lt;remote-mep <i>remote-mep-id</i>&gt; &lt;count <i>entry-count</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 9.5.</p> <p>Command introduced in Junos OS Release 11.4 for EX Series switches.</p>
<b>Description</b>	On MX Series and ACX Series routers and EX Series switches with Ethernet interfaces, display ETH-DM statistics and ETH-DM frame counts.
<b>Options</b>	<p><b>maintenance-domain <i>md-name</i></b>—Name of an existing CFM maintenance domain.</p> <p><b>maintenance-association <i>ma-name</i></b>—Name of an existing CFM maintenance association.</p> <p><b>mep <i>mep-id</i></b>—(Optional) Numeric identifier of the local MEP. The range of values is 1 through 8192. On EX Series switches, the range of values is 1 through 8191.</p> <p><b>remote-mep <i>remote-mep-id</i></b>—(Optional) Numeric identifier of the remote MEP. The range of values is 1 through 8192. On EX Series switches, the range of values is 1 through 8191.</p> <p><b>count <i>entry-count</i></b>—(Optional) Number of entries to display from the statistics table. The range of values is 1 through 100. The default value is 100 entries.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• clear oam ethernet connectivity-fault-management statistics</li> <li>• <a href="#">show oam ethernet connectivity-fault-management delay-statistics on page 249</a></li> <li>• <a href="#">show oam ethernet connectivity-fault-management interfaces on page 257</a></li> <li>• <a href="#">show oam ethernet connectivity-fault-management mep-database on page 269</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show oam ethernet connectivity-fault-management mep-statistics (CIR counters only) on page 281</a></p> <p><a href="#">show oam ethernet connectivity-fault-management mep-statistics (CIR and EIR counters enabled) on page 282</a></p> <p><a href="#">show oam ethernet connectivity-fault-management mep-statistics remote-mep (CIR counters only) on page 284</a></p> <p><a href="#">show oam ethernet connectivity-fault-management mep-statistics remote-mep (CIR and EIR counters enabled) on page 286</a></p> <p><a href="#">show oam ethernet connectivity-fault-management mep-statistics on page 288</a></p> <p><a href="#">show oam ethernet connectivity-fault-management mep-statistics remote-mep on page 289</a></p>

**Output Fields** Table 26 on page 280 lists the output fields for the **show oam ethernet connectivity-fault-management mep-statistics** command. Output fields are listed in the approximate order in which they appear.

**Table 26: show oam ethernet connectivity-fault-management delay-statistics and mep-statistics Output Fields**

Output Field Name	Field Description
MEP identifier	Maintenance association end point (MEP) numeric identifier.
MAC address	Unicast MAC address configured for the MEP.
Remote MEP count	Number of remote MEPs (unless you specify the <b>remote-mep</b> option).
Remote MEP identifier	Numeric identifier of the remote MEP.
Remote MAC address	Unicast MAC address of the remote MEP.
Index	Index number that corresponds to the ETH-DM entry in the CFM database.
One-way delay (usec)	For a one-way ETH-DM session, the frame delay time, in microseconds, measured at the receiver MEP.  For a detailed description of one-way Ethernet frame delay measurement, see the <i>ITU-T Y.1731 Ethernet Service OAM</i> topics in the Junos® OS Network Interfaces.
Two-way delay (usec)	For a two-way ETH-DM session, the frame delay time, in microseconds, measured at the initiator MEP.  For a detailed description of two-way Ethernet frame delay measurement, see the <i>ITU-T Y.1731 Ethernet Service OAM</i> topics in the Junos® OS Network Interfaces.
Average one-way delay	Average one-way frame delay for the statistics displayed.
Average one-way delay variation	Average one-way “frame jitter” for the statistics displayed.
Best-case one-way delay	Lowest one-way frame delay for the statistics displayed.
Worst-case one-way delay	Highest one-way frame delay for the statistics displayed.
Average two-way delay	Average two-way frame delay for the statistics displayed.
Average two-way delay variation	Average two-way “frame jitter” for the statistics displayed.
Best-case two-way delay	Lowest two-way frame delay for the statistics displayed.
Worst-case two-way delay	Highest two-way frame delay calculated in this session.

## Sample Output

show oam ethernet  
connectivity-fault-  
management  
mep-statistics (CIR  
counters only)

```
user@host> show oam ethernet connectivity-fault-management mep-statistics
maintenance-domain md1 maintenance-association ma-1 local-mep 3 remote-mep 103 count 3
MEP identifier: 100, MAC address: 00:05:85:73:7b:39
Remote MEP count                : 1
CCMs sent                       : 6550
CCMs received out of sequence   : 0
LBMs sent                       : 0
Valid in-order LBRs received    : 0
Valid out-of-order LBRs received : 0
LBRs received with corrupted data : 0
LBRs sent                       : 0
LTMs sent                       : 0
LTMs received                   : 0
LTRs sent                       : 0
LTRs received                   : 0
Sequence number of next LTM request : 0
1DMs sent                       : 5
Valid 1DMs received             : 0
Invalid 1DMs received           : 0
DMMs sent                       : 5
DMRs sent                       : 0
Valid DMRs received             : 5
Invalid DMRs received           : 0
LMM sent                       : 5
Valid LMM received              : 5
Invalid LMM received            : 0
LMR sent                       : 0
Valid LMR received              : 5
Invalid LMR received            : 0
Remote MEP identifier           : 101
Remote MAC address              : 00:05:85:73:39:4a
```

### Delay measurement statistics:

Index	One-way delay (usec)	Two-way delay (usec)
1	259	519
2	273	550
3	287	571
4	299	610
5	313	650

```
Average one-way delay          : 286 usec
Average one-way delay variation : 62 usec
Best case one-way delay         : 259 usec
Average two-way delay           : 580 usec
Average two-way delay variation : 26 usec
Best case two-way delay         : 519 usec
Worst case two-way delay        : 650 usec
```

### Loss measurement statistics:

Index	Near-end Frame loss (CIR)	Far-end Frame loss (CIR)	Near-end Frame loss (EIR)	Far-end Frame loss (EIR)
1	9	9		
2	3	5		
3	7	5		
4	9	6		
5	3	6		

```

Average near-end loss (CIR)           : 6.2
Average near-end loss ratio (CIR)      : 6.2%
Average far-end loss (CIR)            : 6.2
Average far-end loss ratio (CIR)       : 6.2%
Near-end best case loss (CIR)          : 3
Near-end best case loss ratio (CIR)    : 3%
Near-end worst case loss (CIR)         : 9
Near-end worst case loss ratio (CIR)   : 9%
Far-end best case loss (CIR)           : 5
Far-end best case loss ratio (CIR)     : 5%
Far-end worst case loss (CIR)          : 9
Far-end worst case loss ratio (CIR)    : 9%

```

**show oam ethernet  
connectivity-fault-  
management  
mep-statistics (CIR**

```

user@host> show oam ethernet connectivity-fault-management mep-statistics
maintenance-domain mdl maintenance-association ma-1 local-mep 3 remote-mep 103 count 3
MEP identifier: 100, MAC address: 00:05:85:73:7b:39
Remote MEP count           : 1
CCMs sent                  : 6550

```

and EIR counters  
enabled)

```

CCMs received out of sequence      : 0
LBMs sent                          : 0
Valid in-order LBRs received       : 0
Valid out-of-order LBRs received   : 0
LBRs received with corrupted data  : 0
LBRs sent                          : 0
LTMs sent                          : 0
LTMs received                      : 0
LTRs sent                          : 0
LTRs received                      : 0
Sequence number of next LTM request : 0
1DMs sent                          : 5
Valid 1DMs received                : 0
Invalid 1DMs received              : 0
DMMs sent                          : 5
DMRs sent                          : 0
Valid DMRs received                : 5
Invalid DMRs received              : 0
LMM sent                           : 5
Valid LMM received                 : 5
Invalid LMM received               : 0
LMR sent                           : 0
Valid LMR received                 : 5
Invalid LMR received               : 0
Remote MEP identifier               : 101
Remote MAC address                  : 00:05:85:73:39:4a

```

#### Delay measurement statistics:

Index	One-way delay (usec)	Two-way delay (usec)
1	259	519
2	273	550
3	287	571
4	299	610
5	313	650

```

Average one-way delay              : 286 usec
Average one-way delay variation     : 62 usec
Best case one-way delay             : 259 usec
Average two-way delay               : 580 usec
Average two-way delay variation     : 26 usec
Best case two-way delay             : 519 usec
Worst case two-way delay            : 650 usec

```

#### Loss measurement statistics:

Index	Near-end Frame loss (CIR)	Far-end Frame loss (CIR)	Near-end Frame loss (EIR)	Far-end Frame loss (EIR)
1	9	9	2	4
2	3	5	4	6
3	7	5	0	2
4	9	6	8	2
5	3	6	6	4

```

Average near-end loss (CIR)        : 6.2
Average near-end loss ratio (CIR)  : 6.2%
Average far-end loss (CIR)         : 6.2
Average far-end loss ratio (CIR)   : 6.2%
Near-end best case loss (CIR)      : 3
Near-end best case loss ratio (CIR): 3%
Near-end worst case loss (CIR)     : 9

```

```

Near-end worst case loss ratio (CIR)      : 9%
Far-end best case loss (CIR)              : 5
Far-end best case loss ratio (CIR)        : 5%
Far-end worst case loss (CIR)             : 9
Far-end worst case loss ratio (CIR)       : 9%
Average near-end loss (EIR)               : 4
Average near-end loss ratio (EIR)         : 4%
Average far-end loss (EIR)                : 3.4
Average far-end loss ratio (EIR)          : 3.4%
Near-end best case loss (EIR)             : 0
Near-end best case loss ratio (EIR)       : 0%
Near-end worst case loss (EIR)            : 8
Near-end worst case loss ratio (EIR)      : 8%
Far-end best case loss (EIR)              : 2
Far-end best case loss ratio (EIR)        : 2%
Far-end worst case loss (EIR)             : 6
Far-end worst case loss ratio (EIR)       : 6%

```

```

show oam ethernet
connectivity-fault-
management
mep-statistics

```

```

user@host> show oam ethernet connectivity-fault-management mep-statistics
maintenance-domain md1 maintenance-association ma-1 local-mep 3 remote-mep 103 count 3
remote-mep 101
MEP identifier: 100, MAC address: 00:05:85:73:7b:39
CCMs sent                               : 7762

```

remote-mep (CIR  
counters only)

```

CCMs received out of sequence      : 0
LBMs sent                          : 0
Valid in-order LBRs received       : 0
Valid out-of-order LBRs received   : 0
LBRs received with corrupted data  : 0
LBRs sent                          : 0
LTMs sent                          : 0
LTMs received                      : 0
LTRs sent                          : 0
LTRs received                      : 0
Sequence number of next LTM request : 0
1DMs sent                          : 5
Valid 1DMs received                : 0
Invalid 1DMs received              : 0
DMMs sent                          : 5
DMRs sent                          : 0
Valid DMRs received                : 5
Invalid DMRs received              : 0
LMM sent                           : 5
Valid LMM received                 : 5
Invalid LMM received               : 0
LMR sent                           : 0
Valid LMR received                 : 5
Invalid LMR received               : 0
Remote MEP identifier              : 101
Remote MAC address                  : 00:05:85:73:39:4a

```

## Delay measurement statistics:

Index	One-way delay (usec)	Two-way delay (usec)
1	259	519
2	273	550
3	287	571
4	299	610
5	313	650

```

Average one-way delay              : 286 usec
Average one-way delay variation    : 62 usec
Best case one-way delay            : 259 usec
Average two-way delay              : 580 usec
Average two-way delay variation    : 26 usec
Best case two-way delay            : 519 usec
Worst case two-way delay           : 650 usec

```

## Loss measurement statistics:

Index	Near-end Frame loss (CIR)	Far-end Frame loss (CIR)	Near-end Frame loss (EIR)	Far-end Frame loss (EIR)
1	9	9		
2	3	5		
3	7	5		
4	9	6		
5	3	6		

```

Average near-end loss (CIR)        : 6.2
Average near-end loss ratio (CIR)  : 6.2%
Average far-end loss (CIR)         : 6.2
Average far-end loss ratio (CIR)   : 6.2%
Near-end best case loss (CIR)      : 3
Near-end best case loss ratio (CIR): 3%
Near-end worst case loss (CIR)     : 9
Near-end worst case loss ratio (CIR): 9%

```

Far-end best case loss (CIR)	: 5
Far-end best case loss ratio (CIR)	: 5%
Far-end worst case loss (CIR)	: 9
Far-end worst case loss ratio (CIR)	: 9%
Average near-end loss (EIR)	: 4
Average near-end loss ratio (EIR)	: 4%
Average far-end loss (EIR)	: 3.4
Average far-end loss ratio (EIR)	: 3.4%
Near-end best case loss (EIR)	: 0
Near-end best case loss ratio (EIR)	: 0%
Near-end worst case loss (EIR)	: 8
Near-end worst case loss ratio (EIR)	: 8%
Far-end best case loss (EIR)	: 2
Far-end best case loss ratio (EIR)	: 2%
Far-end worst case loss (EIR)	: 6
Far-end worst case loss ratio (EIR)	: 6%

**show oam ethernet  
connectivity-fault-  
management  
mep-statistics**

```
user@host> show oam ethernet connectivity-fault-management mep-statistics
maintenance-domain mdl maintenance-association ma-1 local-mep 3 remote-mep 103 count 3
remote-mep 101
MEP identifier: 100, MAC address: 00:05:85:73:7b:39
CCMs sent :7762
```



## remote-mep (CIR and EIR counters enabled)

```

CCMs received out of sequence      : 0
LBMs sent                          : 0
Valid in-order LBRs received       : 0
Valid out-of-order LBRs received   : 0
LBRs received with corrupted data  : 0
LBRs sent                          : 0
LTMs sent                          : 0
LTMs received                      : 0
LTRs sent                          : 0
LTRs received                      : 0
Sequence number of next LTM request : 0
1DMs sent                          : 5
Valid 1DMs received                : 0
Invalid 1DMs received              : 0
DMMs sent                          : 5
DMRs sent                          : 0
Valid DMRs received                : 5
Invalid DMRs received              : 0
LMM sent                           : 5
Valid LMM received                 : 5
Invalid LMM received               : 0
LMR sent                           : 0
Valid LMR received                 : 5
Invalid LMR received               : 0
Remote MEP identifier               : 101
Remote MAC address                  : 00:05:85:73:39:4a

```

## Delay measurement statistics:

Index	One-way delay (usec)	Two-way delay (usec)
1	259	519
2	273	550
3	287	571
4	299	610
5	313	650

```

Average one-way delay              : 286 usec
Average one-way delay variation    : 62 usec
Best case one-way delay            : 259 usec
Average two-way delay              : 580 usec
Average two-way delay variation    : 26 usec
Best case two-way delay            : 519 usec
Worst case two-way delay           : 650 usec

```

## Loss measurement statistics:

Index	Near-end Frame loss (CIR)	Far-end Frame loss (CIR)	Near-end Frame loss (EIR)	Far-end Frame loss (EIR)
1	10	8	5	12
2	12	7	6	16
3	7	5	0	2
4	9	6	8	2
5	3	6	6	4

```

Average near-end loss (CIR)        : 6.2
Average near-end loss ratio (CIR)  : 6.2%
Average far-end loss (CIR)         : 6.2
Average far-end loss ratio (CIR)   : 6.2%
Near-end best case loss (CIR)      : 3
Near-end best case loss ratio (CIR): 3%
Near-end worst case loss (CIR)     : 9

```

```

Near-end worst case loss ratio (CIR) : 9%
Far-end best case loss (CIR) : 5
Far-end best case loss ratio (CIR) : 5%
Far-end worst case loss (CIR) : 9
Far-end worst case loss ratio (CIR) : 9%
Average near-end loss (EIR) : 4
Average near-end loss ratio (EIR) : 4%
Average far-end loss (EIR) : 3.4
Average far-end loss ratio (EIR) : 3.4%
Near-end best case loss (EIR) : 0
Near-end best case loss ratio (EIR) : 0%
Near-end worst case loss (EIR) : 8
Near-end worst case loss ratio (EIR) : 8%
Far-end best case loss (EIR) : 2
Far-end best case loss ratio (EIR) : 2%
Far-end worst case loss (EIR) : 6
Far-end worst case loss ratio (EIR) : 6%

```

**show oam ethernet  
connectivity-fault-  
management  
mep-statistics**

```

user@host> show oam ethernet connectivity-fault-management mep-statistics
maintenance-domain md1 maintenance-association ma-1

```

```

MEP identifier: 100, MAC address: 00:05:85:73:7b:39

```

```

Remote MEP count: 1

```

```

CCMs sent : 6550
CCMs received out of sequence : 0
LBMs sent : 0
Valid in-order LBRs received : 0
Valid out-of-order LBRs received : 0
LBRs received with corrupted data : 0
LBRs sent : 0
LTMs sent : 0
LTMs received : 0
LTRs sent : 0
LTRs received : 0
Sequence number of next LTM request : 0
IDMs sent : 5
Valid IDMs received : 0
Invalid IDMs received : 0
DMMs sent : 5
DMRs sent : 0
Valid DMRs received : 5
Invalid DMRs received : 0

```

```

Remote MEP identifier: 101

```

```

Remote MAC address: 00:05:85:73:39:4a

```

```

Delay measurement statistics:

```

Index	One-way delay (usec)	Two-way delay (usec)
1	259	519
2	273	550
3	287	571
4	299	610
5	313	650

```

Average one-way delay : 286 usec
Average one-way delay variation: 62 usec
Best case one-way delay : 259 usec
Worst case one-way delay : 313 usec
Average two-way delay : 580 usec
Average two-way delay variation: 26 usec
Best case two-way delay : 519 usec
Worst case two-way delay : 650 usec

```

```
show oam ethernet
connectivity-fault-
management
mep-statistics
remote-mep
```

```
user@host> show oam ethernet connectivity-fault-management mep-statistics
maintenance-domain md1 maintenance-association ma1 remote-mep 101
```

```
MEP identifier: 100, MAC address: 00:05:85:73:7b:39
CCMs sent : 7762
CCMs received out of sequence : 0
LBMs sent : 0
Valid in-order LBRs received : 0
Valid out-of-order LBRs received : 0
LBRs received with corrupted data : 0
LBRs sent : 0
LTMs sent : 0
LTMs received : 0
LTRs sent : 0
LTRs received : 0
Sequence number of next LTM request : 0
1DMs sent : 5
Valid 1DMs received : 0
Invalid 1DMs received : 0
DMMs sent : 5
DMRs sent : 0
Valid DMRs received : 5
Invalid DMRs received : 0
```

```
Remote MEP identifier: 101
```

```
Remote MAC address: 00:05:85:73:39:4a
```

```
Delay measurement statistics:
```

Index	One-way delay (usec)	Two-way delay (usec)
1	259	519
2	273	550
3	287	571
4	299	610
5	313	650

```
Average one-way delay : 286 usec
Average one-way delay variation: 62 usec
Best case one-way delay : 259 usec
Worst case one-way delay : 313 usec
Average two-way delay : 580 usec
Average two-way delay variation: 26 usec
Best case two-way delay : 519 usec
Worst case two-way delay : 650 usec
```

## show oam ethernet connectivity-fault-management path-database

<b>Syntax</b>	show oam ethernet connectivity-fault-management path-database <host-mac-address> <maintenance-association <i>ma-name</i> > <maintenance-domain <i>domain-name</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 8.4.
<b>Description</b>	On M7i and M10i with Enhanced CFEB (CFEB-E), M320, MX Series, ACX Series, T320, and T640 routers, display IEEE 802.lag Operation, Administration, and Management (OAM) connectivity fault management path database information for a host configured with an MEP.
<b>Options</b>	<p><b>host-mac-address</b>—(Optional) Display connectivity fault management path database information for a specified Ethernet host.</p> <p><b>maintenance-association <i>ma-name</i></b>—(Optional) Display connectivity fault management path database information for the specified maintenance association.</p> <p><b>maintenance-domain <i>domain-name</i></b>—(Optional) Display connectivity fault management path database information for the specified maintenance domain.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show oam ethernet connectivity-fault-management path-database on page 291</a>
<b>Output Fields</b>	<a href="#">Table 27 on page 290</a> lists the output fields for the <b>show oam ethernet connectivity-fault-management path-database</b> command. Output fields are listed in the approximate order in which they appear.

**Table 27: show oam ethernet connectivity-fault-management path-database Output Fields**

Field Name	Field Description
Linktrace to	MAC address of the remote MEPs in the path.
Interface	Interface identifier.
Maintenance domain name	Maintenance domain name.
Format (Maintenance domain)	Maintenance domain name format configured.
Level	Maintenance domain level configured.
Maintenance association name	Maintenance association name.

Table 27: show oam ethernet connectivity-fault-management path-database Output Fields (*continued*)

Field Name	Field Description
Local Mep	Local MEP identifier.

## Sample Output

**show oam ethernet  
connectivity-fault-  
management  
path-database**

```
user@host> show oam ethernet connectivity-fault-management path-database
maintenance-domain md1 maintenance-association ma1 00:05:85:79:39:ef
Linktrace to 00:05:85:79:39:ef, Interface : ge-3/0/0
    Maintenance Domain: md1, Level: 7
    Maintenance Association: ma1, Local Mep: 201
```

## show oam ethernet evc

<b>Syntax</b>	<b>show oam ethernet evc &lt;evc-id&gt;</b>
<b>Release Information</b>	Command introduced in Junos OS Release 9.5.
<b>Description</b>	On MX Series routers with OAM Ethernet Virtual Connection (EVC) configurations, displays the EVC configuration and status information.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	View
<b>Output Fields</b>	<a href="#">Table 28 on page 292</a> lists the output fields for the <b>show oam ethernet evc</b> command. Output fields are listed in the approximate order in which they appear.

**Table 28: show oam ethernet evc Output Fields**

Field Name	Field Description
<b>EVC identifier</b>	Header for the EVC information showing the EVC name, configuration, and active/inactive status.
<b>UNI count</b>	Number of configured and active UNIs.
<b>Protocol</b>	Protocol configured between the UNIs.
<b>Local UNIs</b>	Heading for the list of local UNIs
<b>UNI Identifier</b>	Name of the UNI.
<b>Interface</b>	Interface type-dpc/pic/port.unit-number.
<b>Status</b>	Status operational or not operational.

## Sample Output

```

show oam ethernet evc  user@host> show oam ethernet evc
                        EVC identifier: evc1, Point-to-Point, Active
                        UNI count: Configured(2), Active(2)
                        Protocol: cfm, Management domain: md, Management association: ma
                        Local UNIs:
                          UNI Identifier    Interface    Status
                          uni1              ge-1/1/1    Operational
                          uni2              ge-1/1/1    Not Operational

```

## show oam ethernet link-fault-management

<b>Syntax</b>	show oam ethernet link-fault-management <brief   detail> <interface-name>
<b>Release Information</b>	Command introduced in Junos OS Release 8.2.
<b>Description</b>	On M320, M120, MX Series, T320, and T640 routers, display Operation, Administration, and Management (OAM) link fault management information for Ethernet interfaces.
<b>Options</b>	<b>brief   detail</b> —(Optional) Display the specified level of output.  <b>interface-name</b> —(Optional) Display link fault management information for the specified Ethernet interface only.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show oam ethernet link-fault-management brief on page 298</a> <a href="#">show oam ethernet link-fault-management detail on page 298</a>
<b>Output Fields</b>	<a href="#">Table 29 on page 293</a> lists the output fields for the <b>show oam ethernet link-fault-management</b> command. Output fields are listed in the approximate order in which they appear.

Table 29: show oam ethernet link-fault-management Output Fields

Field Name	Field Description	Level of Output
<b>Status</b>	Indicates the status of the established link.  <ul style="list-style-type: none"> <li>• <b>Fail</b>—A link fault condition exists.</li> <li>• <b>Running</b>—A link fault condition does not exist.</li> </ul>	All levels
<b>Discovery state</b>	State of the discovery mechanism:  <ul style="list-style-type: none"> <li>• <b>Passive Wait</b></li> <li>• <b>Send Any</b></li> <li>• <b>Send Local Remote</b></li> <li>• <b>Send Local Remote Ok</b></li> <li>• <b>Fault</b></li> </ul>	All levels
<b>Peer address</b>	Address of the OAM peer.	All levels

Table 29: show oam ethernet link-fault-management Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Flags</b>	<p>Information about the interface. Possible values are described in the “Link Flags” section under Common Output Fields Description.</p> <ul style="list-style-type: none"> <li>• <b>Remote-Stable</b>—Indicates remote OAM client acknowledgment of and satisfaction with local OAM state information. <b>False</b> indicates that remote DTE either has not seen or is unsatisfied with local state information. <b>True</b> indicates that remote DTE has seen and is satisfied with local state information.</li> <li>• <b>Local-Stable</b>—Indicates local OAM client acknowledgment of and satisfaction with remote OAM state information. <b>False</b> indicates that local DTE either has not seen or is unsatisfied with remote state information. <b>True</b> indicates that local DTE has seen and is satisfied with remote state information.</li> <li>• <b>Remote-State-Valid</b>—Indicates the OAM client has received remote state information found within Local Information TLVs of received Information OAM PDUs. <b>False</b> indicates that OAM client has not seen remote state information. <b>True</b> indicates that the OAM client has seen remote state information.</li> </ul>	All levels
<b>Remote loopback status</b>	Indicates the remote loopback status. An OAM entity can put its remote peer into loopback mode using the Loopback control OAM PDU. In loopback mode, every frame received is transmitted back on the same port (except for OAM PDUs, which are needed to maintain the OAM session).	All levels
<b>Remote entity information</b>	<p>Remote entity information.</p> <ul style="list-style-type: none"> <li>• <b>Remote MUX action</b>—Indicates the state of the multiplexer functions of the OAM sublayer. Device is forwarding non-OAM PDUs to the lower sublayer or discarding non-OAM PDUs.</li> <li>• <b>Remote parser action</b>—Indicates the state of the parser function of the OAM sublayer. Device is forwarding non-OAM PDUs to higher sublayer, looping back non-OAM PDUs to the lower sublayer, or discarding non-OAM PDUs.</li> <li>• <b>Discovery mode</b>—Indicates whether discovery mode is active or inactive.</li> <li>• <b>Unidirectional mode</b>—Indicates the ability to operate a link in a unidirectional mode for diagnostic purposes.</li> <li>• <b>Remote loopback mode</b>—Indicates whether remote loopback is supported or unsupported.</li> <li>• <b>Link events</b>—Indicates whether interpreting link events is supported or unsupported on the remote peer.</li> <li>• <b>Variable requests</b>—Indicates whether variable requests are supported. The Variable Request OAM PDU, is used to request one or more MIB variables from the remote peer.</li> </ul>	All levels
<b>OAM Receive Statistics</b>		
<b>Information</b>	The total number of information PDUs received.	<b>detail</b>
<b>Event</b>	The total number of loopback control PDUs received.	<b>detail</b>
<b>Variable request</b>	The total number of variable request PDUs received.	<b>detail</b>
<b>Variable response</b>	The total number of variable response PDUs received.	<b>detail</b>



Table 29: show oam ethernet link-fault-management Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Loopback control</b>	The total number of loopback control PDUs received.	<b>detail</b>
<b>Organization specific</b>	The total number of vendor organization specific PDUs received.	<b>detail</b>
<b>OAM Transmit Statistics</b>		
<b>Information</b>	The total number of information PDUs transmitted.	<b>detail</b>
<b>Event</b>	The total number of event notification PDUs transmitted.	<b>detail</b>
<b>Variable request</b>	The total number of variable request PDUs transmitted.	<b>detail</b>
<b>Variable response</b>	The total number of variable response PDUs transmitted.	<b>detail</b>
<b>Loopback control</b>	The total number of loopback control PDUs transmitted.	<b>detail</b>
<b>Organization specific</b>	The total number of vendor organization specific PDUs transmitted.	<b>detail</b>
<b>OAM Received Symbol Error Event information</b>		
<b>Events</b>	The number of symbol error event TLVs that have been received since the OAM sublayer was reset.	<b>detail</b>
<b>Window</b>	The symbol error event window in the received PDU.  The protocol default value is the number of symbols that can be received in one second on the underlying physical layer.	<b>detail</b>
<b>Threshold</b>	The number of errored symbols in the period required for the event to be generated.	<b>detail</b>
<b>Errors in period</b>	The number of symbol errors in the period reported in the received event PDU.	<b>detail</b>
<b>Total errors</b>	The number of errored symbols that have been reported in received event TLVs since the OAM sublayer was reset.  Symbol errors are coding symbol errors.	<b>detail</b>
<b>OAM Received Frame Error Event Information</b>		
<b>Events</b>	The number of errored frame event TLVs that have been received since the OAM sublayer was reset.	<b>detail</b>
<b>Window</b>	The duration of the window in terms of the number of 100 ms period intervals.	<b>detail</b>
<b>Threshold</b>	The number of detected errored frames required for the event to be generated.	<b>detail</b>
<b>Errors in period</b>	The number of detected errored frames in the period.	<b>detail</b>

Table 29: show oam ethernet link-fault-management Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Total errors</b>	The number of errored frames that have been reported in received event TLVs since the OAM sublayer was reset.  A frame error is any frame error on the underlying physical layer.	<b>detail</b>
<b>OAM Received Frame Period Error Event Information</b>		
<b>Events</b>	The number of frame seconds errors event TLVs that have been received since the OAM sublayer was reset.	<b>detail</b>
<b>Window</b>	The duration of the frame seconds window.	<b>detail</b>
<b>Threshold</b>	The number of frame seconds errors in the period.	<b>detail</b>
<b>Errors in period</b>	The number of frame seconds errors in the period.	<b>detail</b>
<b>Total errors</b>	The number of frame seconds errors that have been reported in received event TLVs since the OAM sublayer was reset.	<b>detail</b>
<b>OAM Transmitted Symbol Error Event Information</b>		
<b>Events</b>	The number of symbol error event TLVs that have been transmitted since the OAM sublayer was reset.	<b>detail</b>
<b>Window</b>	The symbol error event window in the transmitted PDU.	<b>detail</b>
<b>Threshold</b>	The number of errored symbols in the period required for the event to be generated.	<b>detail</b>
<b>Errors in period</b>	The number of symbol errors in the period reported in the transmitted event PDU.	<b>detail</b>
<b>Total errors</b>	The number of errored symbols reported in event TLVs that have been transmitted since the OAM sublayer was reset.	<b>detail</b>
<b>OAM Current Symbol Error Event Information</b>		
<b>Events</b>	The number of symbol error TLVs that have been generated regardless of whether the threshold for sending event TLVs has been crossed.	<b>detail</b>
<b>Window</b>	The symbol error event window in the transmitted PDU.	<b>detail</b>
<b>Threshold</b>	The number of errored symbols in the period required for the event to be generated.	<b>detail</b>
<b>Errors in period</b>	The total number of symbol errors in the period reported.	<b>detail</b>
<b>Total errors</b>	The number of errored symbols reported in event TLVs that have been generated regardless of whether the threshold for sending event TLVs has been crossed.	<b>detail</b>
<b>OAM Transmitted Frame Error Event Information</b>		

Table 29: show oam ethernet link-fault-management Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Events</b>	The number of errored frame event TLVs that have been transmitted since the OAM sublayer was reset.	<b>detail</b>
<b>Window</b>	The duration of the window in terms of the number of 100 ms period intervals.	<b>detail</b>
<b>Threshold</b>	The number of detected errored frames required for the event to be generated.	<b>detail</b>
<b>Errors in period</b>	The number of detected errored frames in the period.	<b>detail</b>
<b>Total errors</b>	The number of errored frames that have been detected since the OAM sublayer was reset.	<b>detail</b>
<b>OAM Current Frame Error Event Information</b>		
<b>Events</b>	The number of errored frame event TLVs that have been generated regardless of whether the threshold for sending event TLVs has been crossed.	<b>detail</b>
<b>Window</b>	The duration of the window in terms of the number of 100 ms period intervals.	<b>detail</b>
<b>Threshold</b>	The number of detected errored frames required for the event to be generated.	<b>detail</b>
<b>Errors in period</b>	The number of errored frames in the period.	<b>detail</b>
<b>Total errors</b>	The number of errored frames detected regardless of whether the threshold for transmitting event TLVs has been crossed.	<b>detail</b>

## Sample Output

**show oam ethernet  
link-fault-management  
brief**

```
user@host> show oam ethernet link-fault-management brief
Interface: ge-3/1/3
Status: Running, Discovery state: Send Any
Peer address: 00:90:69:72:2c:83
Flags:Remote-Stable Remote-State-Valid Local-Stable 0x50
Remote loopback status: Disabled on local port, Enabled on peer port
Remote entity information:
  Remote MUX action: discarding, Remote parser action: loopback
  Discovery mode: active, Unidirectional mode: unsupported
  Remote loopback mode: supported, Link events: supported
  Variable requests: unsupported
```

**show oam ethernet  
link-fault-management  
detail**

```
user@host> show oam ethernet link-fault-management detail
Interface: ge-6/1/0
Status: Running, Discovery state: Send Any
Peer address: 00:90:69:0a:07:14
Flags:Remote-Stable Remote-State-Valid Local-Stable 0x50
OAM receive statistics:
  Information: 186365, Event: 0, Variable request: 0, Variable response: 0
  Loopback control: 0, Organization specific: 0
OAM transmit statistics:
  Information: 186347, Event: 0, Variable request: 0, Variable response: 0
  Loopback control: 0, Organization specific: 0
OAM received symbol error event information:
  Events: 0, Window: 0, Threshold: 0
  Errors in period: 0, Total errors: 0
OAM received frame error event information:
  Events: 0, Window: 0, Threshold: 0
  Errors in period: 0, Total errors: 0
OAM received frame period error event information:
  Events: 0, Window: 0, Threshold: 0
  Errors in period: 0, Total errors: 0
OAM transmitted symbol error event information:
  Events: 0, Window: 0, Threshold: 1
  Errors in period: 0, Total errors: 0
OAM current symbol error event information:
  Events: 0, Window: 0, Threshold: 1
  Errors in period: 0, Total errors: 0
OAM transmitted frame error event information:
  Events: 0, Window: 0, Threshold: 1
  Errors in period: 0, Total errors: 0
OAM current frame error event information:
  Events: 0, Window: 0, Threshold: 1
  Errors in period: 0, Total errors: 0
Remote entity information:
  Remote MUX action: forwarding, Remote parser action: forwarding
  Discovery mode: active, Unidirectional mode: unsupported
  Remote loopback mode: supported, Link events: supported
  Variable requests: unsupported
```

## show oam ethernet lmi

<b>Syntax</b>	<b>show oam ethernet lmi</b> ( <i>interface &lt;interface-name&gt;</i> )
<b>Release Information</b>	Command introduced in Junos OS Release 9.5.
<b>Description</b>	On MX Series routers with Gigabit Ethernet, Fast Ethernet, or aggregated Ethernet, and OAM Ethernet Local Management Interface (LMI) configuration, display the LMI information for the configured interfaces or optionally for a specified interface.
<b>Options</b>	<p><b>interface</b>—(Optional) Display LMI information for a specified interface.</p> <p><b>interface-name</b>—(Optional) Display Ethernet LMI information for the specified interface only.</p>
<b>Required Privilege Level</b>	View
<b>Output Fields</b>	Table 30 on page 299 lists the output fields for the <b>show oam ethernet lmi</b> command. Output fields are listed in the approximate order in which they appear.

**Table 30: show oam ethernet lmi Output Fields**

Field Name	Field Description
Physical Interface	Header for the EVC information showing the Ethernet virtual circuit (EVC) name, configuration, and active/inactive status.
UNI Identifier	Name of the UNI.
EVC map type	EVC configuration.
Polling verification timer	Polling verification timer status.
E-LMI state	Operational status of the E-LMI configuration in the interfaces or specified interface.
Priority/Untagged VLAN ID	To be provided.
Default EVC	The EVC set as the default EVC.
Associated EVCs	Heading for the list of configured EVCs.
EVC Identifier	EVC name.
Reference ID	To be provided.
Status	Status active or not active.
CE VLAN IDs	Customer edge VLAN ID numbers.

## Sample Output

```
show oam ethernet lmi interface user@host> show oam ethernet lmi interface ge-1/1/1
interface
Physical interface: ge-1/1/1, Physical link is Up
UNI identifier: uni-ce1, EVC map type: Bundling
Polling verification timer: Enabled, E-LMI state: Operational
Priority/Untagged VLAN ID: 20, Default EVC: evc1
Associated EVCs:
  EVC      Reference      Status      CE VLAN IDs
  Identifier ID
  evc1      1      Active (New)  1-2048
  evc2      2      Not Active   2049-4096
```

## show oam ethernet lmi statistics

<b>Syntax</b>	<b>show oam ethernet lmi statistics</b> <interface <i>interface-name</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 9.5.
<b>Description</b>	On MX Series routers with Gigabit Ethernet, Fast Ethernet, or aggregated Ethernet PICs, displays OAM Ethernet Local Management Interface (LMI) statistics.
<b>Options</b>	<p><b>interface</b>—(Optional) Display LMI statistics for a specified interface.</p> <p><b>interface-name</b>—(Optional) Display Ethernet LMI information for the specified Ethernet interface only.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show oam ethernet lmi statistics on page 302</a>
<b>Output Fields</b>	<a href="#">Table 31 on page 301</a> lists the output fields for the <b>show oam ethernet lmi statistics</b> command. Output fields are listed in the approximate order in which they appear.

**Table 31: show oam ethernet lmi statistics Output Fields**

Field Name	Field Description
Physical interface	Name of the interface for the displayed statistics.
Reliability errors	Number of E-LMI reliability errors logged.
Protocol errors	Number of E-LMI protocol errors.
Status check received	Number of E-LMI status check receive errors.
Status check sent	Number of E-LMI status check sent errors.
Full status received	Number of E-LMI full status receive errors.
Full status sent	Number of E-LMI full status sent errors.
Full status continued received	Number of E-LMI status continued received errors.
Full status continued sent	Number of E-LMI full status continued sent errors.
Asynchronous status sent	Number of E-LMI asynchronous status sent errors.

## Sample Output

```
show oam ethernet lmi statistics user@host> show oam ethernet lmi statistics interface ge-1/1/1
statistics                        Physical interface: ge-1/1/1
                                Reliability errors                4 Protocol errors
                                0
                                Status check received            0 Status check sent
                                0
                                Full status received              694 Full status sent
694                               Full status continued received    0 Full status continued sent
                                0
                                Asynchronous status sent          0
```



## show protection-group ethernet-ring aps

<b>Syntax</b>	<b>show protection-group ethernet-ring aps</b>
<b>Release Information</b>	Command introduced in Junos OS Release 9.4. Command introduced in Junos OS Release 12.1 for EX Series switches.
<b>Description</b>	Display the status of the Automatic Protection Switching (APS) and Ring APS (RAPS) messages on an Ethernet ring.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show protection-group ethernet-ring data-channel on page 305</a></li> <li>• <a href="#">show protection-group ethernet-ring interface on page 307</a></li> <li>• <a href="#">show protection-group ethernet-ring node-state on page 310</a></li> <li>• <a href="#">show protection-group ethernet-ring statistics on page 313</a></li> <li>• <a href="#">show protection-group ethernet-ring vlan on page 316</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show protection-group ethernet-ring aps (EX Switches) on page 304</a> <a href="#">show protection-group ethernet-ring aps (Owner Node, Normal Operation on MX Routers) on page 304</a> <a href="#">show protection-group ethernet-ring aps (Ring Node, Normal Operation on MX Routers) on page 304</a> <a href="#">show protection-group ethernet-ring aps (Owner Node, Failure Condition on MX Routers) on page 304</a> <a href="#">show protection-group ethernet-ring aps (Ring Node, Failure Condition on MX Routers) on page 304</a>
<b>Output Fields</b>	<a href="#">Table 32 on page 303</a> lists the output fields for the <b>show protection-group ethernet-ring aps</b> command. Output fields are listed in the approximate order in which they appear.

**Table 32: show protection-group ethernet-ring aps Output Fields**

Field Name	Field Description
<b>Ethernet Ring Name</b>	Name configured for the Ethernet ring.
<b>Request/State</b>	Status of the Ethernet ring RAPS messages. <ul style="list-style-type: none"> <li>• <b>NR</b>—Indicates there is no request for APS on the ring.</li> <li>• <b>SF</b>—Indicates there is a signal failure on the ring.</li> </ul>
<b>No Flush</b>	State of the ring flushing: <b>No</b> (normal) or <b>Yes</b> (failure).
<b>Ring Protection Link Blocked</b>	Blocking on the ring protection link: <b>Yes</b> or <b>No</b> .

Table 32: show protection-group ethernet-ring aps Output Fields (*continued*)

Field Name	Field Description
Originator	Whether this node is the ring originator: <b>Yes</b> or <b>No</b> .
Remote Node ID	Identifier (in MAC address format) of the remote node.

### Sample Output

```
show protection-group ethernet-ring aps (EX Switches)
user@switch>> show protection-group ethernet-ring aps
Ring Name      Request/state  No Flush  RPL Blocked  Originator  Remote Node ID
erp1           NR             no         yes           no          00:1F:12:30:B8:81
```

### Sample Output

```
show protection-group ethernet-ring aps (Owner Node, Normal Operation on MX Routers)
user@host> show protection-group ethernet-ring aps
Ethernet Ring Name  Request/state  No Flush  Ring Protection Link Blocked
pg101              NR             No         Yes

Originator  Remote Node ID
Yes
```

```
show protection-group ethernet-ringaps (Ring Node, Normal Operation on MX Routers)
user@host> show protection-group ethernet-ring aps
Ethernet Ring Name  Request/state  No Flush  Ring Protection Link Blocked
pg102              NR             No         Yes

Originator  Remote Node ID
No          00:01:01:00:00:01
```

```
show protection-group ethernet-ring aps (Owner Node, Failure Condition on MX Routers)
user@host> show protection-group ethernet-ring aps
Ethernet Ring Name  Request/state  No Flush  Ring Protection Link Blocked
pg101              SF             No         No

Originator  Remote Node ID
No          00:01:02:00:00:01
```

```
show protection-group ethernet-ringaps (Ring Node, Failure Condition on MX Routers)
user@host> show protection-group ethernet-ring aps
Ethernet Ring Name  Request/state  No Flush  Ring Protection Link Blocked
pg102              SF             No         Yes

Originator  Remote Node ID
Yes         00:00:00:00:00:00
```

## show protection-group ethernet-ring data-channel

<b>Syntax</b>	show protection-group ethernet-ring data-channel <brief   detail> <group-name <i>group-name</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 10.2.
<b>Description</b>	On MX Series routers, display data channel information for all Ethernet ring protection groups or for a specific Ethernet ring protection group.
<b>Options</b>	<b>brief   detail</b> —(Optional) Display the specified level of output.  <b>group-name</b> —(Optional) Protection group for which to display statistics. If you omit this optional field, all protection group statistics for configured groups will be displayed.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show protection-group ethernet-ring aps on page 303</a></li> <li>• <a href="#">show protection-group ethernet-ring interface on page 307</a></li> <li>• <a href="#">show protection-group ethernet-ring node-state on page 310</a></li> <li>• <a href="#">show protection-group ethernet-ring statistics on page 313</a></li> <li>• <a href="#">show protection-group ethernet-ring vlan on page 316</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show protection-group ethernet-ring data-channel on page 306</a>
<b>Output Fields</b>	Table 33 on page 305 lists the output fields for the <b>show protection-group ethernet-ring data-channel</b> command. Output fields are listed in the approximate order in which they appear.

**Table 33: show protection-group ethernet-ring data-channel Output Fields**

Field Name	Field Description
<b>Interface</b>	Name of the interface configured for the Ethernet ring.
<b>STP index</b>	The Spanning Tree Protocol (STP) index number used by each interface in an Ethernet ring. The STP index controls the forwarding behavior for a set of VLANs on a data channel on an Ethernet ring port. For multiple Ethernet ring instances on a physical ring port, there are multiple STP index numbers. Different ring instances will have different STP index numbers and may have different forwarding behavior.
<b>Forward State</b>	Forwarding state on the Ethernet ring. <ul style="list-style-type: none"> <li>• <b>fowarding</b>—Indicates packets are being forwarded.</li> <li>• <b>discarding</b>—Indicates packets are being discarded.</li> </ul>

## Sample Output

```
show protection-group ethernet-ring data-channel
user@host> show protection-group ethernet-ring data-channel
Ethernet ring data channel information for protection group pg301
Interface    STP index    Forward State
ge-1/0/3     71           forwarding
ge-1/0/4     82           forwarding

Ethernet ring data channel information for protection group pg302
Interface    STP index    Forward State
ge-1/0/3     52           forwarding
ge-1/0/4     91           forwarding
```

## show protection-group ethernet-ring interface

<b>Syntax</b>	<b>show protection-group ethernet-ring interface</b>
<b>Release Information</b>	Command introduced in Junos OS Release 9.4.
<b>Description</b>	Displays the status of the Automatic Protection Switching (APS) interfaces on an Ethernet ring.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show protection-group ethernet-ring data-channel on page 305</a></li> <li>• <a href="#">show protection-group ethernet-ring aps on page 303</a></li> <li>• <a href="#">show protection-group ethernet-ring node-state on page 310</a></li> <li>• <a href="#">show protection-group ethernet-ring statistics on page 313</a></li> <li>• <a href="#">show protection-group ethernet-ring vlan on page 316</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show protection-group ethernet-ring interface (EX Series Switch Owner Node) on page 308</a> <a href="#">show protection-group ethernet-ring interface (Owner Node MX Series Router ) on page 308</a> <a href="#">show protection-group ethernet-ring interface (EX Series Switch Ring Node) on page 308</a> <a href="#">show protection-group ethernet-ring interface (MX Series Router Ring Node) on page 308</a>
<b>Output Fields</b>	Table 34 on page 307 lists the output fields for both the EX Series switch and the MX Series router <b>show protection-group ethernet-ring interface</b> commands. Output fields are listed in the approximate order in which they appear.

**Table 34: MX Series Routers show protection-group ethernet-ring interface Output Fields**

Field Name	Field Description
<b>Ethernet ring port parameters for protection group <i>group-name</i></b>	Output is organized by configured protection group.
<b>Interface</b>	Physical interfaces configured for the Ethernet ring.
<b>Control Channel</b>	(MX Series router only) Logical unit configured on the physical interface. <ul style="list-style-type: none"> <li>• <b>NR</b>—Indicates there is no request for APS on the ring.</li> <li>• <b>SF</b>—Indicates there is a signal failure on the ring.</li> </ul>
<b>Forward State</b>	State of the ring forwarding on the interface: <b>discarding</b> or <b>forwarding</b> .

Table 34: MX Series Routers show protection-group ethernet-ring interface Output Fields (*continued*)

Field Name	Field Description
Ring Protection Link End	Whether this interface is the end of the ring: <b>Yes</b> or <b>No</b> .
Signal Failure	Whether there a signal failure exists on the link: <b>Clear</b> or <b>Set</b> .
Admin State	State of the interface: For EX switches, <b>ready</b> , <b>ifl ready</b> , or <b>waiting</b> . For MX routers, <b>IFF ready</b> or <b>IFF disabled</b> .

### Sample Output

**show protection-group ethernet-ring interface**  
(EX Series Switch Owner Node)

```
user@host> show protection-group ethernet-ring interface
Ethernet ring port parameters for protection group pg101

Interface      Forward State  RPL End  Signal Failure  Admin State
ge-0/0/3.0     discarding    Yes      Clear          ready
ge-0/0/9.0     forwarding    No       Clear          ready
```

**show protection-group ethernet-ring interface**  
(Owner Node MX Series Router )

```
user@host> show protection-group ethernet-ring interface
Ethernet ring port parameters for protection group pg101

Interface      Control Channel Forward State  Ring Protection Link End
ge-1/0/1       ge-1/0/1.1     discarding    Yes
ge-1/2/4       ge-1/2/4.1     forwarding    No

Signal Failure  Admin State
Clear          IFF ready
Clear          IFF ready
```

**show protection-group ethernet-ring interface**  
(EX Series Switch Ring Node)

```
user@host> show protection-group ethernet-ring interface
Ethernet ring port parameters for protection group pg102

Ethernet ring port parameters for protection group pg101

Interface      Forward State  RPL End  Signal Failure  Admin State
ge-0/0/3.0     discarding    Yes      Clear          ready
ge-0/0/9.0     forwarding    No       Clear          ready
```

**show protection-group ethernet-ring interface**

```
user@host> show protection-group ethernet-ring interface
Ethernet ring port parameters for protection group pg102
```

(MX Series Router Ring Node)

Interface	Control Channel	Forward State	Ring Protection Link End
ge-1/2/1	ge-1/2/1.1	forwarding	No
ge-1/0/2	ge-1/0/2.1	forwarding	No

Signal Failure	Admin State
Clear	IFF ready
Clear	IFF ready

## show protection-group ethernet-ring node-state

<b>Syntax</b>	<b>show protection-group ethernet-ring node-state</b>
<b>Release Information</b>	Command introduced in Junos OS Release 9.4. Command introduced in Junos OS Release 12.1 for EX Series switches.
<b>Description</b>	Display the status of the Automatic Protection Switching (APS) nodes on an Ethernet ring.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show protection-group ethernet-ring data-channel on page 305</a></li> <li>• <a href="#">show protection-group ethernet-ring aps on page 303</a></li> <li>• <a href="#">show protection-group ethernet-ring interface on page 307</a></li> <li>• <a href="#">show protection-group ethernet-ring statistics on page 313</a></li> <li>• <a href="#">show protection-group ethernet-ring vlan on page 316</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show protection-group ethernet-ring node-state (EX Series Switch) on page 311</a> <a href="#">show protection-group ethernet-ring node-state (Owner Node, Normal Operation on MX Series Router) on page 311</a> <a href="#">show protection-group ethernet-ring node-state (Ring Node, Normal Operation on MX Series Router) on page 311</a> <a href="#">show protection-group ethernet-ring node-state (Owner Node, Failure Condition on MX Series Router) on page 311</a> <a href="#">show protection-group ethernet-ring node-state (Ring Node, Failure Condition on MX Series Router) on page 311</a>
<b>Output Fields</b>	<a href="#">Table 35 on page 310</a> lists the output fields for the <b>show protection-group ethernet-ring node-state</b> command. Output fields are listed in the approximate order in which they appear.

**Table 35: show protection-group ethernet-ring node-state Output Fields**

Field Name	Field Description
<b>Ring Name</b>	Name configured for the Ethernet ring.
<b>APS State</b>	State of the Ethernet ring APS. <ul style="list-style-type: none"> <li>• <b>idle</b>—Indicates there is no APS on the ring.</li> <li>• <b>protected</b>—Indicates there is a protection switch on the ring.</li> </ul>



**Table 35: show protection-group ethernet-ring node-state Output Fields (*continued*)**

Field Name	Field Description
Event	Events on the ring. <ul style="list-style-type: none"> <li>• <b>NR-RB</b>—Indicates there is no APS request and the ring link is blocked on the ring owner node.</li> <li>• <b>NR</b>—Indicates there is no APS request on the ring non-owner nodes.</li> <li>• <b>SF</b>—Indicates there is signal failure on a node link.</li> </ul>
Ring Protection Link Owner	Whether this node is the ring owner: <b>Yes</b> or <b>No</b> .
Restore Timer (WTR Timer)	Restoration timer: <b>Enabled</b> or <b>Disabled</b> .
Guard Timer	Guard timer: <b>Enabled</b> or <b>Disabled</b> .
Operational State	State of the node: <b>Operational</b> or <b>Non-operational</b> .

## Sample Output

```
show protection-group ethernet-ring node-state (EX Series Switch)
user@switch> show protection-group ethernet-ring node-state
Ring Name APS State Event RPL Owner WTR Timer Guard Timer Op State
erp1 idle NR-RB yes disabled disabled operational
```

```
show protection-group ethernet-ring node-state (Owner Node, Normal Operation on MX Series Router)
user@host> show protection-group ethernet-ring node-state
Ethernet ring APS State Event Ring Protection Link Owner
pg101 idle NR-RB Yes

Restore Timer Quard Timer Operation state
disabled disabled operational
```

```
show protection-group ethernet-ring node-state (Ring Node, Normal Operation on MX Series Router)
user@host> show protection-group ethernet-ring node-state
Ethernet ring APS State Event Ring Protection Link Owner
pg102 idle NR-RB No

Restore Timer Quard Timer Operation state
disabled disabled operational
```

```
show protection-group ethernet-ring node-state (Owner Node, Failure Condition on MX Series Router)
user@host> show protection-group ethernet-ring node-state
Ethernet ring APS State Event Ring Protection Link Owner
pg101 protected SF Yes

Restore Timer Quard Timer Operation state
disabled disabled operational
```

```
show protection-group ethernet-ring
user@host> show protection-group ethernet-ring node-state
Ethernet ring APS State Event Ring Protection Link Owner
pg102 idle NR-RB No
```

node-state (Ring Node,  
Failure Condition on  
MX Series Router)

Restore Timer	Quard Timer	Operation state
disabled	disabled	operational

## show protection-group ethernet-ring statistics

<b>Syntax</b>	<b>show protection-group ethernet-ring statistics</b> <group-name <i>group-name</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 9.4. Command introduced in Junos OS Release 12.1 for EX Series switches.
<b>Description</b>	Display statistics regarding Automatic Protection Switching (APS) protection groups on an Ethernet ring.
<b>Options</b>	<b>group-name</b> —Protection group for which to display statistics. In you omit this optional field, all protection group statistics for configured groups will be displayed.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show protection-group ethernet-ring data-channel on page 305</a></li> <li>• <a href="#">show protection-group ethernet-ring aps on page 303</a></li> <li>• <a href="#">show protection-group ethernet-ring node-state on page 310</a></li> <li>• <a href="#">show protection-group ethernet-ring interface on page 307</a></li> <li>• <a href="#">show protection-group ethernet-ring vlan on page 316</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show protection-group ethernet-ring statistics (EX Switch) on page 314</a> <a href="#">show protection-group ethernet-ring statistics (Owner Node, Normal Operation on MX Router) on page 314</a> <a href="#">show protection-group ethernet-ring statistics (Ring Node, Normal Operation on MX Router) on page 314</a> <a href="#">show protection-group ethernet-ring statistics (Owner Node, Failure Condition on MX Router) on page 314</a> <a href="#">show protection-group ethernet-ring statistics (Ring Node, Failure Condition on MX Router) on page 314</a>
<b>Output Fields</b>	<a href="#">Table 36 on page 313</a> lists the output fields for the <b>show protection-group ethernet-ring statistics</b> command. Output fields are listed in the approximate order in which they appear.

**Table 36: show protection-group ethernet-ring statistics Output Fields**

Field Name	Field Description
<b>Ethernet Ring Statistics for PG</b>	Name of the protection group for which statistics are displayed.
<b>RAPS sent</b>	Number of Ring Automatic Protection Switching (RAPS) messages sent. (On MX Series switches only)
<b>RAPS received</b>	Number of RAPS messages received. (On MX Series switches only)

Table 36: show protection-group ethernet-ring statistics Output Fields (*continued*)

Field Name	Field Description
<b>Local SF</b>	Number of times a signal failure (SF) has occurred locally.
<b>Remote SF</b>	Number of times a signal failure (SF) has occurred anywhere else on the ring.
<b>NR event</b>	Number of times a No Request (NR) event has occurred on the ring.
<b>NR-RB event</b>	Number of times a No Request, Ring Blocked (NR-RB) event has occurred on the ring.

## Sample Output

**show protection-group  
ethernet-ring statistics  
(EX Switch)**

```
user@switch> show protection-group ethernet-ring statistics
Ring Name Local SF Remote SF NR Event NR-RB Event
erp1      2      1      2      3
```

**show protection-group  
ethernet-ring statistics  
(Owner Node, Normal  
Operation on MX  
Router)**

```
user@host> show protection-group ethernet-ring statistics group-name pg101
Ethernet Ring statistics for PG pg101
RAPS sent : 1
RAPS received : 0
Local SF happened: : 0
Remote SF happened: : 0
NR event happened: : 0
NR-RB event happened: : 1
```

**show protection-group  
ethernet-ring statistics  
(Ring Node, Normal  
Operation on MX  
Router)**

```
user@host> show protection-group ethernet-ring statistics group-name pg102
Ethernet Ring statistics for PG pg102
RAPS sent : 0
RAPS received : 1
Local SF happened: : 0
Remote SF happened: : 0
NR event happened: : 0
NR-RB event happened: : 1
```

**show protection-group  
ethernet-ring statistics  
(Owner Node, Failure  
Condition on MX  
Router)**

```
user@host> show protection-group ethernet-ring statistics group-name pg101
Ethernet Ring statistics for PG pg101
RAPS sent : 1
RAPS received : 1
Local SF happened: : 0
Remote SF happened: : 1
NR event happened: : 0
NR-RB event happened: : 1
```

**show protection-group  
ethernet-ring statistics  
(Ring Node, Failure**

```
user@host> show protection-group ethernet-ring statistics group-name pg102
Ethernet Ring statistics for PG pg102
RAPS sent : 1
RAPS received : 1
```

Condition on MX Router)	Local SF happened:	: 1
	Remote SF happened:	: 0
	NR event happened:	: 0
	NR-RB event happened:	: 1

## show protection-group ethernet-ring vlan

<b>Syntax</b>	show protection-group ethernet-ring vlan <brief   detail> <group-name <i>group-name</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 10.2.
<b>Description</b>	On MX Series routers, display all data channel logical interfaces and the VLAN IDs controlled by a ring instance data channel.
<b>Options</b>	<b>brief   detail</b> —(Optional) Display the specified level of output.  <b>group-name</b> —(Optional) Protection group for which to display statistics. In you omit this optional field, all protection group statistics for configured groups will be displayed.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show protection-group ethernet-ring aps on page 303</a></li> <li>• <a href="#">show protection-group ethernet-ring data-channel on page 305</a></li> <li>• <a href="#">show protection-group ethernet-ring interface on page 307</a></li> <li>• <a href="#">show protection-group ethernet-ring node-state on page 310</a></li> <li>• <a href="#">show protection-group ethernet-ring statistics on page 313</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show protection-group ethernet-ring vlan on page 317</a> <a href="#">show protection-group ethernet-ring vlan brief on page 317</a> <a href="#">show protection-group ethernet-ring vlan detail on page 317</a> <a href="#">show protection-group ethernet-ring vlan group-name vkm01 on page 317</a>
<b>Output Fields</b>	Table 37 on page 316 lists the output fields for the <b>show protection-group ethernet-ring vlan</b> command. Output fields are listed in the approximate order in which they appear.

Table 37: show protection-group ethernet-ring vlan Output Fields

Field Name	Field Description
<b>Interface</b>	Name of the interface configured for the Ethernet protection ring.
<b>Vlan</b>	Name of the VLAN associated with the interface configured for the Ethernet protection ring.
<b>STP Index</b>	The Spanning Tree Protocol (STP) index number used by each interface in an Ethernet ring. The STP index controls the forwarding behavior for a set of VLANs on a data channel on an Ethernet ring port. For multiple Ethernet ring instances on an physical ring port, there are multiple STP index numbers. Different ring instances will have different STP index numbers and may have different forwarding behavior.

**Table 37: show protection-group ethernet-ring vlan Output Fields (continued)**

Field Name	Field Description
Bridge Domain	Name of the bridge domain that is associated with the VLAN configured for the Ethernet protection ring.

## Sample Output

### show protection-group ethernet-ring vlan

```
user@host> show protection-group ethernet-ring vlan
Ethernet ring IFBD parameters for protection group vkm01
```

Interface	Vlan	STP Index	Bridge Domain
ge-2/0/8	100	130	default-switch/bd100
ge-2/0/4	100	126	default-switch/bd100

### show protection-group ethernet-ring vlan brief

```
user@host> show protection-group ethernet-ring vlan brief
Ethernet ring IFBD parameters for protection group vkm01
```

Interface	Vlan	STP Index	Bridge Domain
ge-2/0/8	100	130	default-switch/bd100
ge-2/0/4	100	126	default-switch/bd100

### show protection-group ethernet-ring vlan detail

```
user@host> show protection-group ethernet-ring vlan detail
Ethernet ring IFBD parameters for protection group vkm01
```

```
Interface name      : ge-2/0/8
Vlan                : 100
STP index           : 130
Bridge Domain       : default-switch/bd100
Interface name      : ge-2/0/4
Vlan                : 100
STP index           : 126
Bridge Domain       : default-switch/bd100
```

### show protection-group ethernet-ring vlan group-name vkm01

```
user@host> show protection-group ethernet-ring vlan vkm01
Ethernet ring IFBD parameters for protection group vkm01
```

Interface	Vlan	STP Index	Bridge Domain
ge-2/0/8	100	130	default-switch/bd100
ge-2/0/4	100	126	default-switch/bd100





## CHAPTER 6

# Command Summary

- [Ethernet Interface Operational Mode Commands on page 319](#)
- [VRRP Operational Mode Commands on page 324](#)

### Ethernet Interface Operational Mode Commands

[Table 38 on page 319](#) summarizes the command-line interface (CLI) commands that you can use to monitor and troubleshoot aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces. Commands are listed in alphabetical order.

**Table 38: Ethernet Interface Operational Mode Commands**

Task	Command
Clear dynamic VLAN interfaces.	clear auto-configuration interfaces
Clear a specified dynamic agent circuit identifier (ACI) interface set configured on the router. You can clear only those ACI interface sets that have no subscriber interface members.	clear auto-configuration interfaces interface-set
Clear Link Aggregation Control Protocol (LACP) statistics.	clear lacp statistics
Clear Link Aggregation Control Protocol (LACP) timeout entries.	clear lacp timeouts
Clear learned MAC addresses from the hardware and MAC database. Static MAC addresses are not cleared.	clear interfaces mac-database
Clear statistics that are collected for every MAC address, including policer statistics, on a given physical or logical interface.	clear interfaces mac-database statistics
Clear statistics that are collected for interface sets.	clear interfaces interface-set statistics
Clear the existing continuity measurement and restart counting the operational uptime.	clear oam ethernet connectivity-fault-management continuity-measurement

Table 38: Ethernet Interface Operational Mode Commands (*continued*)

Task	Command
Clear ITU-T Y.1731 Ethernet frame delay measurement (ETH-DM) delay statistics and ETH-DM frame counts. (MX Series routers)	clear oam ethernet connectivity-fault-management delay-statistics
Clear Operation, Administration, and Management (OAM) and connectivity fault management (CFM) linktrace database information.	clear oam ethernet connectivity-fault-management linktrace path-database
Clear all loss statistics maintained by CFM for a given maintenance domain and maintenance association.	clear oam ethernet connectivity-fault-management loss-statistics
Clear connectivity-fault-management policer statistics.	clear oam ethernet connectivity-fault-management policer
Clear all statistics maintained by CFM. (Routers that support IEEE 802.1ag OAM CFM)  In addition, for interfaces that support ITU-T Y.1731 Ethernet frame delay measurement (ETH-DM), also clear any ETH-DM statistics and frame counts for CFM maintenance association end points (MEPs).	clear oam ethernet connectivity-fault-management statistics
Clear Operation, Administration, and Management (OAM) link fault management state information and restart the link discovery process on Ethernet interfaces.	clear oam ethernet link-fault-management state
Clear Operation, Administration, and Management (OAM) statistics link fault management statistics for Ethernet interfaces.	clear oam ethernet link-fault-management statistics
Clear the statistics for all Ethernet ring protection groups or a specific Ethernet ring protection group.	clear protection-group ethernet-ring statistics
Check the reachability of a remote IEEE 802.1ag OAM maintenance association end point (MEP) or maintenance association intermediate point (MIP).	ping ethernet
Manually rebalance the subscribers on an aggregated Ethernet bundle with targeted distribution enabled.	request interface rebalance (Aggregated Ethernet for Subscriber Management)
Manually revert egress traffic from the designated backup link to the designated primary link of an aggregated Ethernet interface for which link protection is enabled, or manually switch egress traffic from the primary link to the backup link.	request interface (revert   switchover) (Aggregated Ethernet Link Protection)
Force LACP link switchover.	request lacp link-switchover

Table 38: Ethernet Interface Operational Mode Commands (*continued*)

Task	Command
Clear the lockout, force switch, manual switch, exercise, and wait-to-restore states.	request protection-group ethernet-aps clear
Test if APS is operating correctly.	request protection-group ethernet-aps exercise
Force traffic to switch from the active path to the alternate path.	request protection-group ethernet-aps force-switch
Lock the protection path, forcing the use of the working path.	request protection-group ethernet-aps lockout
Force traffic to switch from the active path to the alternate path.	request protection-group ethernet-aps manual-switch
Display status information about aggregated Fast Ethernet or Gigabit Ethernet router interfaces.	<a href="#">show interfaces (Aggregated Ethernet)</a>  show interfaces (far-end-interval)
Display status information about Fast Ethernet interfaces.	<a href="#">show interfaces (Fast Ethernet)</a>
Display status information about the specified Gigabit Ethernet interface.	show interfaces (Gigabit Ethernet)
Display status information about 10-Gigabit Ethernet router interfaces.	<a href="#">show interfaces (10-Gigabit Ethernet)</a>
Display IPv6 interface statistics for IPv6 traffic traversing through the IQ2 and IQ2E PICs on standalone T640 routers and on T640 routers in a TX Matrix or in a TXP Matrix.  Display IPv6 interface statistics for IPv6 traffic traversing through the IQ2 PICs on M10i and M120 routers.  Display IPv6 interface statistics for IPv6 traffic traversing through the IQ2E PICs on M10i, M120, and M320 routers.	show interfaces extensive
Display information about Gigabit Ethernet or 10-Gigabit Ethernet router interface sets.	<a href="#">show interfaces interface-set (Ethernet Interface Set)</a>
Display information about Gigabit Ethernet or 10-Gigabit Ethernet router interface set queues.	<a href="#">show interfaces interface-set queue</a>
Display the transceiver temperature, laser bias current, laser output power, receive optical power, and related alarms for 10-Gigabit Ethernet dense wavelength-division multiplexing (DWDM) interfaces.	<a href="#">show interfaces diagnostics optics (Gigabit Ethernet, 10-Gigabit Ethernet, and 100 Gigabit Ethernet)</a>
Display information about integrated routing and bridging interfaces.	<a href="#">show interfaces irb</a>

Table 38: Ethernet Interface Operational Mode Commands (*continued*)

Task	Command
Display status information about the distribution of subscribers on different links in an aggregated Ethernet bundle.	show interfaces targeting (Aggregated Ethernet for Subscriber Management)
Display Link Aggregation Control Protocol (LACP) information for aggregated, Fast Ethernet, or Gigabit Ethernet router interfaces.	show lacp interfaces
Display Link Aggregation Control Protocol (LACP) statistics.	show lacp statistics
Display Link Aggregation Control Protocol timeout entries.	show lacp timeouts
Display MAC address information for Gigabit Ethernet router interfaces.	show interfaces mac-database (Gigabit Ethernet)
Display information on a specified interface that is part of a multichassis link aggregation configuration.	show interfaces mc-ae
Display ETH-DM statistics for CFM MEPs. (MX Series routers, Ethernet DPCs).	show oam ethernet connectivity-fault-management delay-statistics
Display IEEE 802.1ag OAM connectivity fault management forwarding state information for Ethernet interfaces.	show oam ethernet connectivity-fault-management forwarding-state
Display OAM connectivity fault management information for Ethernet interfaces.  For interfaces that support ETH-DM, also display any ETH-DM frame counts when the <b>detail</b> or <b>extensive</b> option is included. In all other cases, ETH-DM frame counts are zero.	show oam ethernet connectivity-fault-management interfaces
Display OAM connectivity fault management linktrace path database information.	show oam ethernet connectivity-fault-management linktrace path-database
Display OAM connectivity fault management maintenance association end point (MEP) database information.  For interfaces that support ETH-DM, also display any ETH-DM frame counts. In all other cases, ETH-DM frame counts are zero.	show oam ethernet connectivity-fault-management mep-database
Display ETH-DM statistics and frame counts for CFM MEPs. (MX Series routers, Ethernet DPCs)	show oam ethernet connectivity-fault-management mep-statistics

Table 38: Ethernet Interface Operational Mode Commands (*continued*)

Task	Command
Display ETH-LM statistics for on-demand mode only.	<code>show oam ethernet connectivity-fault-management loss-statistics</code>
Display information about maintenance intermediate points (MIPs) for the Ethernet OAM 802.1ag standard for connectivity fault management (CFM).	<code>show oam ethernet connectivity-fault-management mip</code>
Display OAM connectivity fault management path database information for hosts configured with MEP.	<code>show oam ethernet connectivity-fault-management path-database</code>
Displays connectivity-fault-management policer statistics.	<code>show oam ethernet connectivity-fault-management policer</code>
Display OAM Ethernet Virtual Connection (EVC) information for hosts configured with Ethernet Local Management Interface (E-LMI). (MX series only)	<code>show oam ethernet evc</code>
Display OAM fault management statistics for Ethernet interfaces.	<code>show oam ethernet link-fault-management</code>
Display OAM Ethernet Local Management Interface status information for an LMI configured interface. (MX series only)	<code>show oam ethernet lmi</code>
Display OAM Ethernet Local Management Interface statistics for an LMI configured interface. (MX series only)	<code>show oam ethernet lmi statistics</code>
Display protection group Ethernet ring Automatic Protection Switching (APS).	<code>show protection-group ethernet-ring aps</code>
Display data channel information for all Ethernet ring protection groups or for a specific Ethernet ring protection group.	<code>show protection-group ethernet-ring data-channel</code>
Display protection group Ethernet ring interfaces.	<code>show protection-group ethernet-ring interface</code>
Display protection group Ethernet ring nodes.	<code>show protection-group ethernet-ring node-state</code>
Display protection group Ethernet ring statistics.	<code>show protection-group ethernet-ring statistics</code>
Display all data channel logical interfaces and the VLAN IDs controlled by a ring instance data channel.	<code>show protection-group ethernet-ring vlan</code>
Trace the path between two Ethernet OAM end points.	<code>traceroute ethernet</code>

## VRRP Operational Mode Commands

---

Table 39 on page 324 summarizes the command-line interface (CLI) commands that you can use to monitor and troubleshoot Virtual Router Redundancy Protocol (VRRP) on Ethernet, Fast Ethernet, Gigabit Ethernet, 10-Gigabit Ethernet, and logical tunnel interfaces. Commands are listed in alphabetical order.

**Table 39: VRRP Operational Mode Commands**

Task	Command
Clear (set to zero) VRRP groups.	clear vrrp
Display VRRP groups.	show vrrp

## PART 4

# Troubleshooting

- [Ethernet on page 327](#)
- [Interface Diagnostics on page 335](#)





## CHAPTER 7

# Ethernet

- [Tracing PPPoE Operations on page 329](#)
- [Troubleshooting PPPoE Service Name Tables on page 331](#)
- [Verifying a PPPoE Configuration on page 333](#)

## traceroute ethernet

<b>Syntax</b>	<b>traceroute ethernet</b> ( <i>mac-address</i>   <i>mep-id</i> ) <b>maintenance-association</b> <i>ma-name</i> <b>maintenance-domain</b> <i>md-name</i> <b>ttl</b> <i>value</i> <b>&lt;wait seconds&gt;</b>
<b>Release Information</b>	Command introduced in Junos OS Release 9.0. <b>mep-id</b> option introduced in Junos OS Release 9.1.
<b>Description</b>	<p>Triggers the linktrace protocol to trace the route between two maintenance points. The result of the traceroute protocol is stored in the path database. To display the path database, use the <b>show oam ethernet connectivity-fault-management path-database</b> command.</p> <p>Before using the traceroute command, you can verify the remote MEP's MAC address using the <b>show oam ethernet connectivity-fault-management path-database</b> command.</p>
<b>Options</b>	<p><b>mac-address</b>—Destination unicast MAC address of the remote maintenance point.</p> <p><b>mep-id</b>—MEP identifier of the remote maintenance point. The range of values is 1 through 8191.</p> <p><b>maintenance-association</b> <i>ma-name</i>—Specifies an existing maintenance association from the set of configured maintenance associations.</p> <p><b>maintenance-domain</b> <i>md-name</i>—Specifies an existing maintenance domain from the set of configured maintenance domains.</p> <p><b>ttl</b> <i>value</i>—Number of hops to use in the linktrace request. The range is 1 to 255 hops. The default is 4.</p> <p><b>wait</b> <i>seconds</i>—(Optional) Maximum time to wait for a response to the traceroute request. The range is 1 to 255 seconds. The default is 5.</p>
<b>Required Privilege Level</b>	network
<b>List of Sample Output</b>	<a href="#">traceroute ethernet on page 329</a>
<b>Output Fields</b>	<p><a href="#">Table 40 on page 328</a> lists the output fields for the <b>traceroute ethernet</b> command. Output fields are listed in the approximate order in which they appear.</p>

**Table 40: traceroute ethernet Output Fields**

Field Name	Field Description
Linktrace to	MAC address of the destination maintenance point.
Interface	Local interface used to send the linktrace message (LTM).

Table 40: traceroute ethernet Output Fields (*continued*)

Field Name	Field Description
<b>Maintenance Domain</b>	Maintenance domain specified in the traceroute command.
<b>Level</b>	Maintenance domain level configured.
<b>Maintenance Association</b>	Maintenance association specified in the traceroute command.
<b>Local Mep</b>	The local maintenance end point identifier.
<b>Transaction Identifier</b>	4-byte identifier maintained by the MEP. Each LTM uses a transaction identifier. The transaction identifier is maintained globally across all Maintenance Domains. Use the transaction identifier to match an incoming linktrace response (LTR), with a previously sent LTM.
<b>Hop</b>	Sequential hop count of the linktrace path.
<b>TTL</b>	Number of hops remaining in the linktrace message. The time to live (TTL) is decremented at each hop.
<b>Source MAC address</b>	MAC address of the 802.1ag maintenance point that is sending the linktrace message.
<b>Next-hop MAC address</b>	MAC address of the 802.1ag node that is the next hop in the LTM path.

## Sample Output

### traceroute ethernet

```
user@host> traceroute ethernet maintenance-domain md1 maintenance-association ma1
00:90:69:7e:01:ff
```

```
Linktrace to 00:01:02:03:04:05, Interface : ge-5/0/0.0
```

```
Maintenance Domain: MD1, Level: 7
```

```
Maintenance Association: MA1, Local Mep: 1
```

Hop	TTL	Source MAC address	Next hop MAC address
Transaction Identifier:100001			
1	63	00:00:aa:aa:aa:aa	00:00:bb:bb:bb:bb
2	62	00:00:bb:bb:bb:bb	00:00:cc:cc:cc:cc
3	61	00:00:cc:cc:cc:cc	00:01:02:03:04:05
4	60	00:01:02:03:04:05	00:00:00:00:00:00

## Tracing PPPoE Operations

The Junos OS trace feature tracks PPPoE operations and records events in a log file. The error descriptions captured in the log file provide detailed information to help you solve problems.

By default, nothing is traced. When you enable the tracing operation, the default tracing behavior is as follows:

1. Important events are logged in a file called **pppoed** located in the **/var/log** directory. You cannot change the directory (**/var/log**) in which trace files are located.
2. When the file **pppoed** reaches 128 kilobytes (KB), it is renamed **pppoed.0**, then **pppoed.1**, and finally **pppoed.2**, until there are three trace files. Then the oldest trace file (**pppoed.2**) is overwritten.

You can optionally specify the number of trace files to be from 2 through 1000. You can also configure the maximum file size to be from 10 KB through 1 gigabyte (GB). (For more information about how log files are created, see the *Junos OS System Log Messages Reference*.)

By default, only the user who configures the tracing operation can access log files. You can optionally configure read-only access for all users.

To configure PPPoE tracing operations:

1. Specify that you want to configure tracing options.  

```
[edit protocols pppoe]
user@host# edit traceoptions
```
2. (Optional) Configure the name for the file used for the trace output.
3. (Optional) Configure the number and size of the log files.
4. (Optional) Configure access to the log file.
5. (Optional) Configure a regular expression to filter logging events.
6. (Optional) Configure flags to filter the operations to be logged.

Optional PPPoE traceoptions operations are described in the following sections:

- [Configuring the PPPoE Trace Log Filename on page 330](#)
- [Configuring the Number and Size of PPPoE Log Files on page 330](#)
- [Configuring Access to the PPPoE Log File on page 331](#)
- [Configuring a Regular Expression for PPPoE Lines to Be Logged on page 331](#)
- [Configuring the PPPoE Tracing Flags on page 331](#)

## Configuring the PPPoE Trace Log Filename

By default, the name of the file that records trace output for PPPoE is **pppoed**. You can specify a different name with the **file** option.

## Configuring the Number and Size of PPPoE Log Files

You can optionally specify the number of compressed, archived trace log files to be from 2 through 1000. You can also configure the maximum file size to be from 10 KB through 1 gigabyte (GB); the default size is 128 kilobytes (KB).

The archived files are differentiated by a suffix in the format **.number.gz**. The newest archived file is **.0.gz** and the oldest archived file is **.(maximum number)-1.gz**. When the current trace log file reaches the maximum size, it is compressed and renamed, and any

existing archived files are renamed. This process repeats until the maximum number of archived files is reached, at which point the oldest file is overwritten.

For example, you can set the maximum file size to 2 MB, and the maximum number of files to 20. When the file that receives the output of the tracing operation, *filename*, reaches 2 MB, *filename* is compressed and renamed *filename.0.gz*, and a new file called *filename* is created. When the new *filename* reaches 2 MB, *filename.0.gz* is renamed *filename.1.gz* and *filename* is compressed and renamed *filename.0.gz*. This process repeats until there are 20 trace files. Then the oldest file, *filename.19.gz*, is simply overwritten when the next oldest file, *filename.18.gz* is compressed and renamed to *filename.19.gz*.

## Configuring Access to the PPPoE Log File

By default, only the user who configures the tracing operation can access the log files. You can enable all users to read the log file and you can explicitly set the default behavior of the log file.

## Configuring a Regular Expression for PPPoE Lines to Be Logged

By default, the trace operation output includes all lines relevant to the logged events.

You can refine the output by including regular expressions to be matched.

## Configuring the PPPoE Tracing Flags

By default, no events are logged. You can specify which events and operations are logged by specifying one or more tracing flags.

To configure the flags for the events to be logged, configure the flags:

- `[edit protocols pppoe traceoptions]`  
`user@host# set flag authentication`

### Related Documentation

- PPPoE Overview
- Junos® OS Ethernet Interfaces

## Troubleshooting PPPoE Service Name Tables

**Problem** A misconfiguration of a PPPoE service name table can prevent PPPoE services from being properly activated. Configuration options for PPPoE service name tables are simple, which should simplify discovering where a misconfiguration exists. PPPoE clients cannot connect if the service name table contains no match for the service name tag carried in the PADI packet.

The symptom of a service name table misconfiguration is that the client connection process stops at the negotiation stage and the PADI packets are ignored. You can use the **show pppoe statistics** command to examine the PPPoE packet counts for a problem.

When the service name table is properly configured, packets sent and received increment symmetrically. The following sample output shows a PADO sent count equal to the PADI received count, and PADS sent count equal to the PADR received count. This output

indicates that the PPPoE negotiation is proceeding successfully and that the service name table is not misconfigured.

```
user@host> show pppoe statistics ge-2/0/3.1
```

```
Active PPPoE sessions: 2
```

PacketType	Sent	Received
PADI	0	16
PADO	16	0
PADR	0	16
PADS	16	0
PADT	0	0
Service name error	0	0
AC system error	0	0
Generic error	0	0
Malformed packets	0	0
Unknown packets	0	0

When the service name table is misconfigured, the output of the **show pppoe statistics** command indicates that the number of PADI packets received on the underlying interface is increasing, but the number of PADO packets sent remains at zero. The following sample output shows a PADI count of 100 and a PADO count of 0.

```
user@host> show pppoe statistics ge-2/0/3.1
```

```
Active PPPoE sessions: 0
```

PacketType	Sent	Received
PADI	0	100
PADO	0	0
PADR	0	0
PADS	0	0
PADT	0	0
Service name error	0	0
AC system error	0	0
Generic error	0	0
Malformed packets	0	0
Unknown packets	0	0

When you believe a misconfiguration exists, use the **monitor traffic interface** command on the underlying interface to determine which service name is being requested by the PPPoE client. The following sample output shows that the client is requesting Service1 in the service name tag.

```
user@host> monitor traffic interface ge-2/0/3.1 print-hex print-ascii
```

```
Listening on ge-2/0/3.1, capture size 96 bytes
```

```
11:49:41.436682 In PPPoE PADI [Service-Name "Service1"] [Host-Uniq UTF8]
[TAG-0x120 UTF8] [Vendor-Specific UTF8]
0x0000 ffff ffff ffff 0090 1a42 0ac1 8100 029a .....B.....
0x0010 8863 1109 0000 00c9 0101 0008 5365 7276 .c.....Serv
0x0020 6963 6531 0103 0004 1200 9c43 0120 0002 ice1.....C....
0x0030 044a 0105 00ab 0000 0de9 0124 783a 3132 .J.....$x:12
0x0040 3030 3963                                009c
```

You can then use the **show pppoe service-name-tables** command to determine whether you have misspelled the name of the service or perhaps not configured the service at all.

**Cause** Typical misconfigurations appear in the service name table configurations.

**Solution** Use the appropriate statements to correct the misconfiguration.

- Related Documentation**
- Configuring PPPoE Service Name Tables
  - show pppoe service-name-tables
  - show pppoe statistics
  - show pppoe underlying-interfaces
  - PPPoE Overview
  - Junos® OS Ethernet Interfaces

---

## Verifying a PPPoE Configuration

**Purpose** You can use show commands to display and verify the PPPoE configuration.

**Action** To verify a PPPoE configuration, you can issue the following operational mode commands:

- show interfaces at-*fpc/pic/port* extensive
- show interfaces pp0
- show pppoe interfaces
- show pppoe version
- show pppoe service-name-tables
- show pppoe sessions
- show pppoe statistics
- show pppoe underlying-interfaces

For more information about these operational mode commands, see Junos OS Operational Mode Commands.

- Related Documentation**
- PPPoE Overview
  - Junos® OS Ethernet Interfaces





## CHAPTER 8

# Interface Diagnostics

- [Interface Diagnostics on page 335](#)

## Interface Diagnostics

---

You can use two diagnostic tools to test the physical layer connections of interfaces: loopback testing and bit error rate test (BERT) testing. Loopback testing enables you to verify the connectivity of a circuit. BERT testing enables you to identify poor signal quality on a circuit. This section contains the following topics:

- [Configuring Loopback Testing on page 335](#)
- [Interface Diagnostics on page 337](#)

## Configuring Loopback Testing

Loopback testing allows you to verify the connectivity of a circuit. You can configure any of the following interfaces to execute a loopback test: Aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, E1, E3, NxDS0, serial, SONET/SDH, T1, and T3.

The physical path of a network data circuit usually consists of segments interconnected by devices that repeat and regenerate the transmission signal. The transmit path on one device connects to the receive path on the next device. If a circuit fault occurs in the form of a line break or a signal corruption, you can isolate the problem by using a loopback test. Loopback tests allow you to isolate segments of the circuit and test them separately.

To do this, configure a *line loopback* on one of the routers. Instead of transmitting the signal toward the far-end device, the line loopback sends the signal back to the originating router. If the originating router receives back its own data link layer packets, you have verified that the problem is beyond the originating router. Next, configure a line loopback farther away from the local router. If this originating router does not receive its own data link layer packets, you can assume the problem is on one of the segments between the local router and the remote router's interface card. In this case, the next troubleshooting step is to configure a line loopback closer to the local router to find the source of the problem.

There are several types of loopback testing supported by the Junos OS, as follows:

- DCE local—Loops packets back on the local DCE.
- DCE remote—Loops packets back on the remote DCE.

- **Local**—Useful for troubleshooting physical PIC errors. Configuring local loopback on an interface allows transmission of packets to the channel service unit (CSU) and then to the circuit toward the far-end device. The interface receives its own transmission, which includes data and timing information, on the local router's PIC. The data received from the CSU is ignored. To test a local loopback, issue the **show interfaces *interface-name*** command. If PPP keepalives transmitted on the interface are received by the PIC, the **Device Flags** field contains the output **Loop-Detected**.
- **Payload**—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A payload loopback loops data only (without clocking information) on the remote router's PIC. With payload loopback, overhead is recalculated.
- **Remote**—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A remote loopback loops packets, including both data and timing information, back on the remote router's interface card. A router at one end of the circuit initiates a remote loopback toward its remote partner. When you configure a remote loopback, the packets received from the physical circuit and CSU are received by the interface. Those packets are then retransmitted by the PIC back toward the CSU and the circuit. This loopback tests all the intermediate transmission segments.

Table 41 on page 336 shows the loopback modes supported on the various interface types.

**Table 41: Loopback Modes by Interface Type**

Interface	Loopback Modes	Usage Guidelines
Aggregated Ethernet, Fast Ethernet, Gigabit Ethernet	Local	Configuring Ethernet Loopback Capability
Circuit Emulation E1	Local and remote	Configuring E1 Loopback Capability
Circuit Emulation T1	Local and remote	Configuring T1 Loopback Capability
E1 and E3	Local and remote	Configuring E1 Loopback Capability and Configuring E3 Loopback Capability
NxDSO	Payload	Configuring Channelized E1 IQ and IQE Interfaces, Configuring T1 and NxDSO Interfaces, Configuring Channelized OC12/STM4 IQ and IQE Interfaces (SONET Mode), Configuring Channelized STM1 IQ and IQE Interfaces, and Configuring Channelized T3 IQ Interfaces
Serial (V.35 and X.21)	Local and remote	Configuring Serial Loopback Capability
Serial (EIA-530)	DCE local, DCE remote, local, and remote	Configuring Serial Loopback Capability
SONET/SDH	Local and remote	Configuring SONET/SDH Loopback Capability

Table 41: Loopback Modes by Interface Type (*continued*)

Interface	Loopback Modes	Usage Guidelines
T1 and T3	Local, payload, and remote	Configuring T1 Loopback Capability and Configuring T3 Loopback Capability  See also Configuring the T1 Remote Loopback Response

To configure loopback testing, include the **loopback** statement:

**loopback mode;**

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* **aggregated-ether-options**]
- [edit interfaces *interface-name* **ds0-options**]
- [edit interfaces *interface-name* **e1-options**]
- [edit interfaces *interface-name* **e3-options**]
- [edit interfaces *interface-name* **fastether-options**]
- [edit interfaces *interface-name* **gigether-options**]
- [edit interfaces *interface-name* **serial-options**]
- [edit interfaces *interface-name* **sonet-options**]
- [edit interfaces *interface-name* **t1-options**]
- [edit interfaces *interface-name* **t3-options**]

## Interface Diagnostics

BERT allows you to troubleshoot problems by checking the quality of links. You can configure any of the following interfaces to execute a BERT when the interface receives a request to run this test: E1, E3, T1, T3; the channelized DS3, OC3, OC12, and STM1 interfaces; and the channelized DS3 IQ, E1 IQ, and OC12 IQ interfaces.

A BERT test requires a line loop to be in place on either the transmission devices or the far-end router. The local router generates a known bit pattern and sends it out the transmit path. The received pattern is then verified against the sent pattern. The higher the bit error rate of the received pattern, the worse the noise is on the physical circuit. As you move the position of the line loop increasingly downstream toward the far-end router, you can isolate the troubled portion of the link.

To configure BERT, you must configure the duration of the test, the bit pattern to send on the transmit path, and the error rate to monitor when the inbound pattern is received.

To configure the duration of the test, the pattern to send in the bit stream, and the error rate to include in the bit stream, include the **bert-period**, **bert-algorithm**, and **bert-error-rate** statements, respectively, at the [edit interfaces *interface-name* **interface-type-options**] hierarchy level:

```
[edit interfaces interface-name interface-type-options]  
bert-algorithm algorithm;  
bert-error-rate rate;  
bert-period seconds;
```

By default, the BERT period is 10 seconds. You can configure the BERT period to last from 1 through 239 seconds on some PICs and from 1 through 240 seconds on other PICs.

**rate** is the bit error rate. This can be an integer from 0 through 7, which corresponds to a bit error rate from  $10^{-0}$  (1 error per bit) to  $10^{-7}$  (1 error per 10 million bits).

**algorithm** is the pattern to send in the bit stream. For a list of supported algorithms, enter a ? after the **bert-algorithm** statement; for example:

```
[edit interfaces t1-0/0/0 t1-options]  
  
user@host# set bert-algorithm ?  
Possible completions:  
pseudo-2e11-o152    Pattern is 2^11 - 1 (per 0.152 standard)  
pseudo-2e15-o151    Pattern is 2^15 - 1 (per 0.152 standard)  
pseudo-2e20-o151    Pattern is 2^20 - 1 (per 0.151 standard)  
pseudo-2e20-o153    Pattern is 2^20 - 1 (per 0.153 standard)  
...
```

For specific hierarchy information, see the individual interface types.



**NOTE:** The 4-port E1 PIC supports only the following algorithms:

pseudo-2e11-o152	Pattern is 2^11 - 1 (per 0.152 standard)
pseudo-2e15-o151	Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151	Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e23-o151	Pattern is 2^23 (per 0.151 standard)

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.

---



**NOTE:** The 12-port T1/E1 Circuit Emulation (CE) PIC supports only the following algorithms:

```
all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e11-o152      Pattern is 2^11 - 1 (per 0.152 standard)
pseudo-2e15-o151      Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151      Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e7            Pattern is 2^7 - 1
pseudo-2e9-o153       Pattern is 2^9 - 1 (per 0.153 standard)
repeating-1-in-4       1 bit in 4 is set
repeating-1-in-8       1 bit in 8 is set
repeating-3-in-24      3 bits in 24 are set
```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



**NOTE:** The IQE PICs support only the following algorithms:

```
all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e9-o153       Pattern is 2^9 - 1 (per 0.153 (511 type) standard)
pseudo-2e11-o152      Pattern is 2^11 - 1 (per 0.152 and 0.153 (2047 type)
standards)
pseudo-2e15-o151      Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151      Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e20-o153      Pattern is 2^20 - 1 (per 0.153 standard)
pseudo-2e23-o151      Pattern is 2^23 - 1 (per 0.151 standard)
repeating-1-in-4       1 bit in 4 is set
repeating-1-in-8       1 bit in 8 is set
repeating-3-in-24      3 bits in 24 are set
```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



**NOTE:** BERT is supported on the PDH interfaces of the Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP and the DS3/E3 MIC. The following BERT algorithms are supported:

all-ones-repeating	Repeating one bits
all-zeros-repeating	Repeating zero bits
alternating-double-ones-zeros	Alternating pairs of ones and zeros
alternating-ones-zeros	Alternating ones and zeros
repeating-1-in-4	1 bit in 4 is set
repeating-1-in-8	1 bit in 8 is set
repeating-3-in-24	3 bits in 24 are set
pseudo-2e9-o153	Pattern is $2^9 - 1$ (per 0.153 standard)
pseudo-2e11-o152	Pattern is $2^{11} - 1$ (per 0.152 standard)
pseudo-2e15-o151	Pattern is $2^{15} - 1$ (per 0.151 standard)
pseudo-2e20-o151	Pattern is $2^{20} - 1$ (per 0.151 standard)
pseudo-2e20-o153	Pattern is $2^{20} - 1$ (per 0.153 standard)
pseudo-2e23-o151	Pattern is $2^{23} - 1$ (per 0.151 standard)

Table 42 on page 340 shows the BERT capabilities for various interface types.

**Table 42: BERT Capabilities by Interface Type**

Interface	T1 BERT	T3 BERT	Comments
12-port T1/E1 Circuit Emulation	Yes (ports 0–11)		<ul style="list-style-type: none"> <li>Limited algorithms</li> </ul>
4-port Channelized OC3/STM1 Circuit Emulation	Yes (port 0–3)		<ul style="list-style-type: none"> <li>Limited algorithms</li> </ul>
E1 or T1	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> <li>Single port at a time</li> <li>Limited algorithms</li> </ul>
E3 or T3	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> <li>Single port at a time</li> </ul>
Channelized OC12	N/A	Yes (channel 0–11)	<ul style="list-style-type: none"> <li>Single channel at a time</li> <li>Limited algorithms</li> <li>No bit count</li> </ul>
Channelized STM1	Yes (channel 0–62)	N/A	<ul style="list-style-type: none"> <li>Multiple channels</li> <li>Only one algorithm</li> <li>No error insert</li> <li>No bit count</li> </ul>
Channelized T3 and Multichannel T3	Yes (channel 0–27)	Yes (port 0–3 on channel 0)	<ul style="list-style-type: none"> <li>Multiple ports and channels</li> <li>Limited algorithms for T1</li> <li>No error insert for T1</li> <li>No bit count for T1</li> </ul>

These limitations do not apply to channelized IQ interfaces. For information about BERT capabilities on channelized IQ interfaces, see Channelized IQ and IQE Interfaces Properties.

### Starting and Stopping a BERT Test

Before you can start the BERT test, you must disable the interface. To do this, include the **disable** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]
disable;
```

After you configure the BERT properties and commit the configuration, begin the test by issuing the **test interface *interface-name* *interface-type*-bert-start** operational mode command:

```
user@host> test interface interface-name interface-type-bert-start
```

The test runs for the duration you specify with the **bert-period** statement. If you wish to terminate the test sooner, issue the **test interface *interface-name* *interface-type*-bert-stop** command:

```
user@host> test interface interface-name interface-type-bert-stop
```

For example:

```
user@host> test interface t3-1/2/0 t3-bert-start
user@host> test interface t3-1/2/0 t3-bert-stop
```

To view the results of the BERT test, issue the **show interfaces extensive | find BERT** command:

```
user@host> show interfaces interface-name extensive | find BERT
```

For more information about running and evaluating the results of the BERT procedure, see the Junos OS Operational Mode Commands.



**NOTE:** To exchange BERT patterns between a local router and a remote router, include the **loopback remote** statement in the interface configuration at the remote end of the link. From the local router, issue the **test interface** command.

### Example: Configuring Bit Error Rate Testing

Configure a BERT test on a T3 interface. In this example, the run duration lasts for 120 seconds. The configured error rate is 0, which corresponds to a bit error rate of  $10^{-0}$  (1 error per bit). The configured bit pattern of **all-ones-repeating** means that every bit the interface sends is a set to a value of 1.

```
[edit interfaces]
t3-1/2/0 {
  t3-options {
    bert algorithm all-ones-repeating;
    bert-error-rate 0;
    bert-period 120;
```

```
}  
}
```



## PART 5

# Index

- [Index on page 345](#)



# Index

## Symbols

#, comments in configuration statements.....	xvi
( ), in syntax descriptions.....	xvi
10-Gigabit Ethernet interfaces	
DWDM	
data and alarms, displaying.....	156
status information, displaying.....	217, 220
100-Gigabit Ethernet interfaces.....	156
802.1Q VLANs	
VLAN IDs.....	130
VLAN tagging.....	131
802.3ad statement.....	101
usage guidelines.....	23
< >, in syntax descriptions.....	xvi
[ ], in configuration statements.....	xvi
{ }, in configuration statements.....	xvi
(pipe), in syntax descriptions.....	xvi

## A

ACI (agent circuit identifier) interface sets	
status information, displaying.....	217
active statement	
usage guidelines.....	54
active-active bridging.....	5, 30
aggregated devices, configuring.....	26
aggregated Ethernet interfaces.....	23
example configuration.....	25
LACP.....	54
example configuration.....	59
interval.....	55
traceoptions.....	59
link speed.....	63
minimum links.....	64
multicast statistics.....	64
status information, displaying.....	136
aggregated-devices statement.....	102
usage guidelines.....	26
aggregated-ether-options statement.....	103

## B

BERT	
configuring interface diagnostics.....	337
bert-algorithm statement	
usage guidelines.....	337
bert-error-rate statement	
usage guidelines.....	337
bert-period statement	
usage guidelines.....	337
bit error rate test See BERT	
braces, in configuration statements.....	xvi
brackets	
angle, in syntax descriptions.....	xvi
square, in configuration statements.....	xvi

## C

CFM statistics	
displaying for CFM interfaces.....	269
displaying for interfaces.....	257
chassis statement.....	104
comments, in configuration statements.....	xvi
configuration	
aggregated devices.....	26
connections	
configuration statements.....	93, 97
conventions	
text and syntax.....	xv
curly braces, in configuration statements.....	xvi
customer support.....	xvii
contacting JTAC.....	xvii

## D

device-count statement.....	104
usage guidelines.....	26
disable statement	
link protection.....	105
documentation	
comments on.....	xvii
dot1x	
configuration statements.....	94
DWDM 10-Gigabit Ethernet interfaces	
data and alarms, displaying.....	156

## E

ETH-DM frame counts (with CFM statistics)	
displaying for MEPs by enclosing CFM.....	269
displaying for MEPs by interface or domain	
level.....	257

ETH-DM statistics (only)		
displaying.....	249	
ETH-DM statistics and frame counts		
displaying.....	279	
Ethernet interface set		
status information, displaying.....	217	
Ethernet interface set queue		
status information, displaying.....	220	
Ethernet interfaces		
CFM statistics		
displaying for CFM interfaces.....	269	
displaying for interfaces.....	257	
ETH-DM frame counts (with CFM statistics)		
displaying for MEPs by enclosing		
CFM.....	269	
displaying for MEPs by interface or domain		
level.....	257	
ETH-DM statistics (only)		
displaying.....	249	
ETH-DM statistics and frame counts		
displaying.....	279	
status information, displaying		
aggregated.....	136	
Fast Ethernet.....	173	
Gigabit Ethernet.....	190	
VLAN IDs.....	130	
VLAN tagging.....	131	
Ethernet link aggregation.....	23	
ethernet ring		
protection group APS.....	303	
protection group data channel.....	305, 316	
protection group interface.....	307	
protection group node state.....	310	
protection group statistics.....	313	
Ethernet Ring Protection		
configuration statements.....	98	
ethernet statement.....	105	
chassis.....	105	
usage guidelines.....	26	
<b>F</b>		
Fast Ethernet interfaces		
Ethernet link aggregation.....	23	
link protection.....	52	
status information, displaying.....	173	
VLAN IDs.....	130	
VLAN tagging.....	131	
fast-aps-switch statement.....	106	
flexible-ethernet-services statement		
MC-LAG		
usage guidelines.....	36	
font conventions.....	xv	
<b>G</b>		
Gigabit Ethernet interfaces		
demultiplexing interface information,		
displaying.....	146	
diagnostics information, displaying.....	156	
Ethernet link aggregation.....	23	
LACP, displaying.....	238	
link protection.....	52	
MAC database, displaying.....	242	
status information, displaying.....	190, 217, 220	
VLAN IDs.....	130	
VLAN tagging.....	131	
Gigabit Ethernet IQ PIC		
traffic and MAC statistics.....	190	
<b>I</b>		
iccp		
configuration statements.....	94	
iccp statement		
MC-LAG		
usage guidelines.....	36	
ICL-PL configuration.....	31	
IGMP snooping		
enabling.....	107	
MC-LAG		
example.....	36	
multicast-router interface.....	119	
IGMP snooping for active-active MC-LAG		
configuration.....	34	
igmp-snooping statement.....	107	
inner-tag-protocol-id statement.....	108	
inner-vlan-id statement.....	109	
integrated routing and bridging interfaces		
integrated routing and bridging interfaces,		
displaying.....	229	
interfaces		
configuration statements.....	72	
interfaces statement.....	110	

**L**

LACP	
displaying.....	238
Ethernet aggregation.....	54
example configuration.....	59
interval.....	55
traceoptions.....	59
tracing operations.....	59
lACP statement	
802.3ad.....	111
Aggregated Ethernet.....	112
usage guidelines.....	54
Layer 2 bridging	
learning properties, displaying.....	236
learning properties	
Layer 2, displaying.....	236
link aggregation.....	23
link protection	
aggregated Ethernet interfaces	
configuring.....	52
configuring primary and backup links.....	52
disabling.....	52
reverting traffic to primary link.....	52
disable statement.....	105
non-revertive statement.....	121
revertive statement.....	126
link speed	
Ethernet aggregation.....	63
link-protection statement.....	113
link-speed statement	
usage guidelines.....	63
linktrace	
database, displaying.....	267
tracing.....	328
liveness-detection statement	
MC-LAG	
usage guidelines.....	36
local-ip-addr statement	
MC-LAG	
usage guidelines.....	36
log files	
number of PPPoE.....	330
size of PPPoE.....	330
logical devices.....	26
logical interfaces	
VLAN IDs.....	130
logical systems	
configuration statements.....	88
loopback testing.....	335

**M**

MAC database, displaying.....	242
manuals	
comments on.....	xvii
maximum-links command.....	117
maximum-links statement	
usage guidelines.....	26
mc-ae statement.....	116
MC-LAG	
usage guidelines.....	36
MC-LAG	
IGMP snooping	
example.....	36
MC-LAG configuration.....	31
minimum links for aggregation	
Ethernet links.....	64
minimum-interval statement	
MC-LAG	
usage guidelines.....	36
minimum-links statement.....	118
usage guidelines.....	64
multi-chassis link aggregation interface	
displaying.....	247
multi-chassis-protection	
peer statement.....	122
multi-chassis-protection statement.....	120
MC-LAG	
usage guidelines.....	36
multicast-router-interface statement	
IGMP snooping.....	119
multicast-snooping-options statement	
MC-LAG	
usage guidelines.....	36
multicast-statistics statement	
usage guidelines	
aggregated Ethernet.....	64
multichassis link aggregation	
active-active bridging.....	5, 30
VRRP over integrated routing and	
bridging.....	5, 30
multichassis link aggregation (MC-LAG).....	29
multichassis-lag-replicate-state statement	
MC-LAG	
usage guidelines.....	36
multiple chassis configuration.....	32

**N**

non-revertive statement.....	121
------------------------------	-----

**O****OAM**

configuration statements.....95

**P**

parentheses, in syntax descriptions.....xvi

**passive statement**

usage guidelines.....54

peer statement.....122

**MC-LAG**

usage guidelines.....36

periodic statement.....123

usage guidelines.....55

physical devices, aggregating.....26

**physical interfaces**

Ethernet link aggregation.....23

VLAN tagging.....131

**pop-pop statement**

Gigabit Ethernet IQ interfaces.....124

**pop-swap statement**

Gigabit Ethernet IQ interfaces.....124

**port-priority statement**

LACP.....125

**PPPoE**

flags for tracing operations.....331

log file access for tracing operations.....331

log file size and number.....330

log filenames for tracing operations.....330

regular expressions for tracing operations.....331

**service name tables**

configuration troubleshooting.....331

verifying the configuration.....333

tracing operations.....329

**protection group**

ethernet ring APS.....303

ethernet ring interface.....307

ethernet ring node state.....310

ethernet ring statistics.....313

ethernet ring VLANs.....305, 316

**protection-group**

configuration statements.....98

**protocols connections**

configuration statements.....93, 97

**protocols dot1x**

configuration statements.....94

**protocols Ethernet Ring Protection**

configuration statements.....98

**protocols iccp**

configuration statements.....94

**protocols OAM**

configuration statements.....95

**protocols VRRP**

configuration statements.....95

**push-push statement**

Gigabit Ethernet IQ interfaces.....125

**R****redundancy-group-id-list statement****MC-LAG**

usage guidelines.....36

revertive statement.....126

**S**

service ID configuration.....32

**service name tables****PPPoE**

configuration troubleshooting.....331

verifying the configuration.....333

**show interfaces (10-Gigabit Ethernet)**

command.....190

**show interfaces (Aggregated Ethernet)**

command.....136

**show interfaces (Fast Ethernet) command.....173****show interfaces demux0 (Demux Interfaces)**

command.....146

**show interfaces diagnostics optics (Gigabit**

Ethernet) command.....156

**show interfaces interface-set command.....217****show interfaces interface-set queue**

command.....220

**show interfaces irb command.....229****show interfaces mac-database (Gigabit Ethernet)**

command.....242

**show interfaces mc-ae.....247****show l2-learning instance command.....236****show lacp interfaces command.....238****show oam ethernet connectivity-fault-management**

delay-statistics command.....249

**show oam ethernet connectivity-fault-management**

forwarding-state command.....253

**show oam ethernet connectivity-fault-management**

interfaces command.....257

**show oam ethernet connectivity-fault-management**

linktrace path-database command.....267

**show oam ethernet connectivity-fault-management**

mep-database command.....269

**show oam ethernet connectivity-fault-management**

mep-statistics command.....279

show oam ethernet connectivity-fault-management path-database command.....	290
show oam ethernet link-fault-management command.....	293
show protection-group ethernet-ring aps command.....	303
show protection-group ethernet-ring data-channel command.....	305
show protection-group ethernet-ring interface command.....	307
show protection-group ethernet-ring node-state command.....	310
show protection-group ethernet-ring statistics command.....	313
show protection-group ethernet-ring vlan command.....	316
sonet statement usage guidelines.....	26
support, technical See technical support	
swap-push statement Gigabit Ethernet IQ interfaces.....	126
swap-swap statement Gigabit Ethernet IQ interfaces.....	127
Symmetrical Load Balancing on 802.3ad Link Aggregation on MX Series.....	66
syntax conventions.....	xv
system processes configuration statements.....	99
system-priority statement LACP.....	128
<b>T</b>	
technical support contacting JTAC.....	xvii
traceoptions (LACP) statement usage guidelines.....	59
traceoptions statement LACP.....	129
traceroute ethernet.....	328
traceroute ethernet command.....	328
tracing operations LACP.....	59
PPPoE.....	329
<b>V</b>	
verification bidirectional PIM.....	51
virtual links aggregated devices.....	26
Virtual Router Redundancy Protocol See VRRP	
VLAN tagging.....	131
vlan-id statement 802.1Q VLANs.....	130
Ethernet interfaces.....	130
vlan-tagging statement.....	131
VRRP configuration statements.....	95
VRRP over integrated routing and bridging.....	5, 30

